# Chapter 5: The Mathematical Model

Nat Lund

October 15, 2013

We shall now derive an expression for the effective slip length of a rough, mixed-slip surface. To begin, we translate the physical problem into the precise language of mathematics. That is, we construct a mathematical model that maps to the essential features of physical reality.

A mathematical object that figures prominently in the model is the Fréchet derivative. To avoid cluttering the exposition later, we recall its features here.

### Mathematical Preliminary: The Fréchet Derivative

The differing needs of the maths, physics and engineering communities can cause irritating inconsistencies in notation and nomenclature. Being at the intersection of maths, physics and engineering, fluid mechanics is particularly prone to this. Thus, it is necessary to define terms before ploughing into the derivation. Disclaimer: the following language and notation may not be 'standard', but they follow the conventions of the (rigorous) textbooks of C. Pozrikidis [2, 3].

The Fréchet derivative is a generalization of the familiar derivative of a function of one real variable, to the more abstract 'functions on Banach spaces'. Happily, for finite-dimensional spaces, it is in fact the Jacobian matrix.


Consider a vector field in  $\mathbb{R}^2$ , with Cartesian coordinates. At each point x, y in space there is a vector  $\vec{u} = (u, v)$ , with u and v depending on x and y so that  $\vec{u} = (u(x, y), v(x, y))$ . Then  $\vec{u}$  can be considered a vector valued function on  $\mathbb{R}^2$ , with Jacobian matrix:

$$D\vec{u} = \begin{bmatrix} \frac{\partial u}{\partial x} & \frac{\partial u}{\partial y} \\ \frac{\partial v}{\partial x} & \frac{\partial v}{\partial y} \\ \frac{\partial v}{\partial x} & \frac{\partial v}{\partial y} \end{bmatrix} \equiv \begin{bmatrix} \frac{\partial_x u}{\partial_x v} & \partial_y u \\ \frac{\partial_x v}{\partial_y v} & \frac{\partial_y v}{\partial_y v} \end{bmatrix}$$
(1)

The Fréchet derivative is a *spatial* derivative of a vector. It gives the change in a vector field as one moves from point  $\vec{x_0} = (x_0, y_0)$  in the direction  $\vec{a}$ . The vector at point  $\vec{x_0}$  is  $\vec{u}(\vec{x_0})$ . What is the vector at a point a short distance  $\vec{a}$  away? It is approximately  $\vec{u}(\vec{x_0})$  plus a correction  $D\vec{u} \cdot \vec{a}$  that depends on  $\vec{a}$ :

$$\vec{u}(\vec{x}_0 + \vec{a}) \simeq \vec{u}(\vec{x}_0) + D\vec{u} \cdot \vec{a} \tag{2}$$

The approximation becomes exact as the magnitude of  $\vec{a}$  tends to zero.

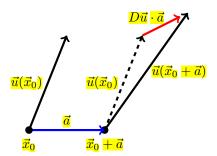

The correction vector  $D\vec{u} \cdot \vec{a}$  is the tensor dot product of the Fréchet derivative with the vector  $\vec{a}$ . The tensor dot product is defined as

$$\vec{b} = T \cdot \vec{a}, \quad b_i = T_{ij} a_i \tag{3}$$

which is the same as the familiar matrix multiplication of a vector:

$$D\vec{u} \cdot \vec{a} = \begin{bmatrix} \partial_x u & \partial_y u \\ \partial_x v & \partial_y v \end{bmatrix} \begin{bmatrix} a_x \\ a_y \end{bmatrix} = \begin{bmatrix} (\partial_x u)a_x + (\partial_y u)a_y \\ (\partial_x v)a_x + (\partial_y v)a_y \end{bmatrix}$$
(4)

 $D\vec{u} \cdot \vec{a}$  is known as the directional derivative of  $\vec{u}$  in the direction  $\vec{a}$ .


#### The Velocity Gradient Tensor

If the vector field is a *velocity* vector field  $\vec{u}$ , then it is convenient to work with the **velocity gradient tensor**, denoted  $\nabla \vec{u}$ . This is the transpose of the Fréchet derivative of the velocity field:

$$\nabla \vec{u} = D\vec{u}^T = \begin{bmatrix} \partial_x u & \partial_x v \\ \partial_y u & \partial_y v \end{bmatrix}$$
 (5)

This provides a linear approximation to the flow field in the vicinity of  $\vec{x}_0$  via:

$$\vec{u}(\vec{x}) \simeq \vec{u}(\vec{x}_0) + (\vec{x} - \vec{x}_0) \cdot \nabla \vec{u} \tag{6}$$

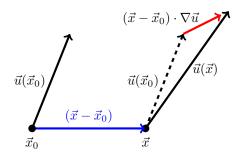

An advantage of this convention is that the tensor dot product

$$\vec{b} = \vec{a} \cdot T = T^T \cdot \vec{a}, \quad b_i = a_i T_{ji} \tag{7}$$

allows the notation to follow the form of the familiar one-dimensional case:

$$f(x) \simeq f(x_0) + (x - x_0) \frac{df}{dx}$$

An interesting question: how does a vector change in the direction of *the vector itself?* This vector 'self gradient' looks like:

$$\vec{u} \cdot \nabla \vec{u} = \begin{bmatrix} u & v \end{bmatrix} \begin{bmatrix} \partial_x u & \partial_x v \\ \partial_y u & \partial_y v \end{bmatrix} = \begin{bmatrix} u \partial_x u + v \partial_y u \\ u \partial_x v + v \partial_y v \end{bmatrix}$$
(8)


Compare this with the **advection operator**  $(\vec{u} \cdot \nabla) = u\partial_x + v\partial_y$ , operating on vector  $\vec{u}$ :

$$(\vec{u} \cdot \nabla)\vec{u} = (u\partial_x + v\partial_y) \begin{bmatrix} u \\ v \end{bmatrix} = \begin{bmatrix} u\partial_x u + v\partial_y u \\ u\partial_x v + v\partial_y v \end{bmatrix}$$
(9)

We see that they are the same. The advection operator usually appears in the derivation of the 'material derivative'. This alternative derivation via the velocity gradient tensor provides the useful intuition that the advection operator simply gives the change in a vector as one travels in the direction of the vector itself.

# Modeling the Bulk Fluid: Navier Stokes

A fluid mechanics problem starts with a bulk of fluid. At each point in the fluid, the fluid has a velocity, thus, the fluid bulk is modeled as a vector field in 3-D space. In diagrams, representative vectors appear as arrows, with the length of the arrow proportional to the magnitude of the vector.

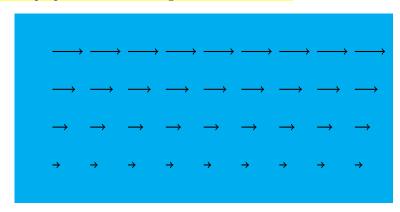

## Incompressible Liquid

For a vector field, a **flux** can be defined. If the fluid is an incompressible liquid, then the flux into a volume element will exactly equal the flux out of the volume element. This is expressed in the model by stating that the vector quality of divergence is zero everywhere:

$$\nabla \cdot \vec{u} = 0 \tag{10}$$

This identity turns out to be extremely useful in making the ensuing mathematics tractable.

#### Viscous Newtonian Liquid

An interesting fluid will also have other properties that hold at each point in the fluid: density, pressure, temperature. Finally, truly exciting fluids have a viscosity at each point, an 'internal friction' that enables velocity to propagate through the fluid. Viscosity is in fact the diffusion of momentum at the molecular level. If the viscosity is constant throughout the fluid, and does not depend on velocity or velocity gradients, then the fluid is termed 'Newtonian'.

Viscosity acts with velocity gradients to produce forces in the fluid. An infinitesimal volume element in the fluid thus has a mass (density  $\times$  volume) and experiences forces due to pressure and viscosity. If we expect the laws of physics to hold in the fluid, then the volume element will obey Newton's second law F = ma. This law is expressed as the Navier-Stokes equation.

If no other forces (eg. gravity) are relevant, and the fluid is **incompressible**, the Navier-Stokes equation is:

$$\rho \left( \frac{\partial \vec{u}}{\partial t} + (\vec{u} \cdot \nabla) \vec{u} \right) = -\nabla p + \mu \nabla^2 \vec{u}$$
 (11)

If the equation is multiplied by the volume of the infinitesimal fluid element, then the left-hand side is the acceleration, and the right-hand side is the force 4-4

# Microfluidics: Stokes or 'creeping' flow

5-2

The Navier-Stokes equations are believed to hold for all fluid flow. However, the advection terms like  $u\partial_x u$  in the differential equation are not linear, in the sense that they cannot be put in the form  $\cdots + a_0 u + a_1 \partial_x u + \cdots$ . Nonlinear partial differential equations are notoriously difficult to solve. But there is hope. In some physical cases, the nonlinear terms may be much smaller than the rest, and contribute only a negligible amount to the solution. In that case, the nonlinear terms can be discarded, and the solution of the resulting linear equation is a very good approximation. We will now show that this is true for the microfluidic case where slip effects are noticeable.

One clear way to compare the relative magnitudes of the terms is to nondimensionalize. The idea is this: express the fundamental physical quantities as fractions of a 'characteristic' value. The fraction forms a new, dimensionless variable. Then typical values of the dimensionless variables have a magnitude on the order of one. For example, consider Poiseuille flow down a straight pipe, where the average velocity is U. The velocity u varies from zero at the wall, to  $\frac{3}{2}U$  in the centre of the pipe. Now define the dimensionless velocity  $\hat{u} = u/U$ . Clearly, the magnitude of  $\hat{u}$  will vary from zero at the wall, to  $\frac{3}{2}$  in the centre. i.e. for most of the domain,  $\hat{u}$  is 'about one'.

A nondimensionalized equation will hopefully have many terms with a magnitude on the order of one, with the magnitude of the remaining terms easily evaluated. Thus, nondimensionalizing expedites the process of deciding which terms are negligible enough to discard.

#### Example for Analysis: 2-D Poiseuille Flow

This thesis analyses microfluidic flow experiments that reveal slip effects. The canonical flow experiment is flow down a capillary — a very thin pipe or channel. We shall use this type of flow to analyse our nondimensionalization. For clarity, we shall stick to two dimensions; this models pressure-driven flow between two infinite flat planes separated by distance L. This avoids messing about with cylindrical coordinates. The solution is a parabolic velocity profile, the same Poiseuille flow as found in a straight, circular pipe.

The standard way to nondimensionalize pipe flow is to choose the pipe diameter L as the characteristic length. Likewise, we choose channel width L, and average velocity U as the characteristic velocity.

Then the nondimensional variables are:

$$\hat{x} = \frac{x}{L}, \quad \hat{y} = \frac{y}{L}, \quad \hat{u} = \frac{u}{U}, \quad \hat{v} = \frac{v}{U}$$
 (12)

The other variables are and pressure and time. We would like to express them in terms of existing quantities. It turns out that  $\mu U/L$  has units of pressure, and the ratio L/U has units of time, so define characteristic pressure and time:

$$P = \frac{\mu U}{L}, \quad T = \frac{L}{U} \tag{13}$$

giving dimensionless variables  $\hat{p} = p/P$  and  $\hat{t} = t/T$ :

$$\hat{p} = \frac{L}{\mu U} p, \quad \hat{t} = \frac{U}{L} t \tag{14}$$

Thus we can substitute

$$x = L\hat{x}, \quad y = L\hat{y}, \quad u = U\hat{u}, \quad v = U\hat{v}, \quad p = \frac{\mu U}{L}\hat{p}, \quad t = \frac{L}{U}\hat{t}$$
 (15)

into the Navier-Stokes equation. For clarity, we focus on just the x component:

$$\rho \left( \frac{\partial u}{\partial t} + u \frac{\partial u}{\partial x} + v \frac{\partial u}{\partial y} \right) = -\frac{\partial p}{\partial x} + \mu \left( \frac{\partial^2 u}{\partial x^2} + \frac{\partial^2 u}{\partial y^2} \right)$$
(16)

Substitute:

$$\rho \left( \frac{\partial U \hat{u}}{\partial \frac{L}{U} \hat{t}} + U \hat{u} \frac{\partial U \hat{u}}{\partial L \hat{x}} + U \hat{v} \frac{\partial U \hat{u}}{\partial L \hat{y}} \right) = -\frac{\partial \frac{\mu U}{L} \hat{p}}{\partial L \hat{x}} + \mu \left( \frac{\partial^2 U \hat{u}}{\partial (L \hat{x})^2} + \frac{\partial^2 U \hat{u}}{\partial (L \hat{y})^2} \right)$$
(17)

$$\rho \frac{U^2}{L} \left( \frac{\partial \hat{u}}{\partial \hat{t}} + \hat{u} \frac{\partial \hat{u}}{\partial \hat{x}} + \hat{v} \frac{\partial \hat{u}}{\partial \hat{y}} \right) = -\frac{\mu U}{L^2} \frac{\partial \hat{p}}{\partial \hat{x}} + \frac{\mu U}{L^2} \left( \frac{\partial^2 \hat{u}}{\partial \hat{x}^2} + \frac{\partial^2 \hat{u}}{\partial \hat{y}^2} \right) \tag{18}$$

Now multiply both sides by 
$$\frac{L^2}{\mu U}$$
 (13)

$$\frac{\rho LU}{\mu} \left( \frac{\partial \hat{u}}{\partial \hat{t}} + \hat{u} \frac{\partial \hat{u}}{\partial \hat{x}} + \hat{v} \frac{\partial \hat{u}}{\partial \hat{y}} \right) = -\frac{\partial \hat{p}}{\partial \hat{x}} + \left( \frac{\partial^2 \hat{u}}{\partial \hat{x}^2} + \frac{\partial^2 \hat{u}}{\partial \hat{y}^2} \right) \tag{20}$$

Define Kinematic Viscosity

$$\nu = \frac{\mu}{\rho} \tag{21}$$

Then define the **Reynolds Number:** 

$$Re = \frac{LU}{V} \tag{22}$$

Thus the x component of the Navier-Stokes equations are:

$$\operatorname{Re}\left(\frac{\partial \hat{u}}{\partial \hat{t}} + \hat{u}\frac{\partial \hat{u}}{\partial \hat{x}} + \hat{v}\frac{\partial \hat{u}}{\partial \hat{y}}\right) = -\frac{\partial \hat{p}}{\partial \hat{x}} + \left(\frac{\partial^2 \hat{u}}{\partial \hat{x}^2} + \frac{\partial^2 \hat{u}}{\partial \hat{y}^2}\right) \tag{23}$$

We are now in a position to look at the relative magnitudes of the terms.

#### Magnitudes of Terms

6-3


We will start with the terms containing the velocity.

A typical capillary flow experiment is carried out with flow rates held constant. Therefore

$$\frac{\partial \hat{u}}{\partial \hat{t}} = 0 \tag{24}$$

For the purposes of our analysis, we shall assume that flow is steady, so this term vanishes.


We have chosen Poiseuille flow to illustrate our nondimensionalization. Since it has an exact solution, we know exactly what the velocity and its derivatives are. With average velocity scaled to unity, and channel width also scaled to unity, the parabolic velocity profile looks like:

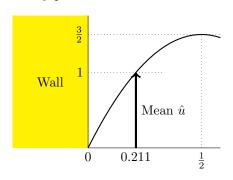

By construction, the  $\hat{u}$  term ranges from zero to  $\frac{3}{2}$ . Hence,  $\hat{u}$  is of order one. For *strict* Poiseuille flow, the walls are perfectly flat, and the velocity perndicular to the wall is zero everywhere. That is,  $\hat{v} = 0$  always.

But we may consider a channel with roughness on the walls, with the amplitude of the roughness small compared to the channel width, so that the flow is Poiseuille-like. Then, near the wall, the transverse velocity  $\hat{v}$  may approach the magnitude of  $\hat{u}$ . The magnitude of  $\hat{u}$  near the wall is small compared to the average, so we would expect perhaps  $\hat{v} < 0.1$ . That is, for rough-walled Poiseuille-like flow,  $\hat{v}$  is of order 0.1, at most.

For the parabolic flow profile of Poiseuille flow, the derivative of velocity is linear:

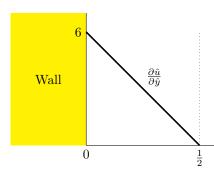



The average value of  $\partial_y \hat{u}$  over the channel width is zero. But the average magnitude is 3. In the tradition of theoretical physics,  $\partial_{\bar{y}} \hat{u}$  is 'of order one'.

For strict Poiseuille flow,  $\hat{u}$  has no x-dependence, so  $\partial_{\hat{x}}\hat{u}=0$  everywhere.

For rough-walled Poiseuille-like flow, the wall corrugations will cause the x velocity to change in the x direction, over the period of the corrugation. The roughness period must very small compared with the channel width for the flow to remain Poiseuille-like. The x velocity in the vicinity of the wall is on the order of 0.1, and varies by perhaps 10% over the roughness period. Thus, in the

7-1

7-5


7-6

vicinity of the wall,  $\partial_{\hat{x}}\hat{u} \sim (0.1 \times 0.1)/0.01 = 1$ . But for the rest of the domain, the x velocity will have vanishing x dependence. So average  $\partial_{\hat{x}}\hat{u}$  is more like 0.1. Hence,  $\partial_{\hat{x}}\hat{u}$  is of order 0.1.



With  $\hat{u}$  of order one and  $\partial_{\hat{x}}\hat{u}$  of order 0.1, and  $\hat{v}$  of order 0.1 and  $\partial_{\hat{y}}\hat{u}$  of order one the advection terms  $\hat{u}\partial_{\hat{x}}\hat{u}$  and  $\hat{v}\partial_{\hat{y}}\hat{u}$  are both of order 0.1.

The second spatial derivative of the parabolic velocity profile is a constant:

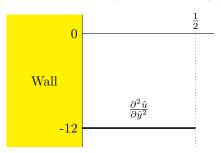

For Poiseuille flow nondimensionalized in the standard way,  $\frac{\partial^2 \hat{u}}{\partial \hat{y}^2} = -12$ . That is, the magnitude is of order ten.

For strictly Poiseuille flow, the x velocity has no x dependence, so  $\partial_{\hat{x}}\hat{u} = 0$ , and  $\partial_{\hat{x}}^2\hat{u} = 0$ .

For rough-walled Poiseuille-like flow, we have allowed that  $\partial_{\hat{x}}\hat{u} \sim 1$  for the 10% of the domain near the wall. This reduces to near zero for the rest of the domain. Therefore,  $\partial_{\hat{x}}\hat{u}$  reduces from order one to zero in distance 0.1, hence average  $\partial_{\hat{x}}^2\hat{u}$  near the wall is of order ten. But it is zero over the rest of the domain, so the average over the channel is one. Hence,  $\partial_{\hat{x}}^2\hat{u}$  is of order one.

And now to the pressure term: The characteristic pressure P was chosen for dimensional convenience, not because it is necessarily a typical pressure. So it is impossible to know the magnitude of  $\hat{p}$  or  $\partial_{\hat{x}}\hat{p}$ . But this doesn't matter; we have enough information to simplify, as we shall see.

t this point, we can summarize what we know about the relative magnis of the terms in the Navier-Stokes equation. For steady strict Poiseuille flow nondimensionalized in the standard way:

$$\operatorname{Re}\left(\underbrace{\frac{\partial \hat{u}}{\partial \hat{t}}}_{=0} + \underbrace{\hat{u}}_{=0}\frac{\partial \hat{u}}{\partial \hat{x}} + \underbrace{\hat{v}}_{=0}\frac{\partial \hat{u}}{\partial \hat{y}}\right) = \underbrace{-\frac{\partial \hat{p}}{\partial \hat{x}}}_{\text{unknown}} + \underbrace{\left(\underbrace{\frac{\partial^2 \hat{u}}{\partial \hat{x}^2}}_{=0} + \underbrace{\frac{\partial^2 \hat{u}}{\partial \hat{y}^2}}_{\sim 10}\right)}_{\sim 10}$$
(25)

Which simplifies considerably to:

$$0 = -\frac{\partial \hat{p}}{\partial \hat{x}} + \left(\frac{\partial^2 \hat{\mathbf{u}}}{\partial \hat{\mathbf{x}}^2} + \frac{\partial^2 \hat{\mathbf{u}}}{\partial \hat{y}^2}\right) \tag{26}$$

But for rough-walled Poiseuille-like flow, things are not quite so simple:

$$\operatorname{Re}\left(\underbrace{\frac{\partial \hat{u}}{\partial \hat{t}}}_{=0} + \underbrace{\hat{u}\frac{\partial \hat{u}}{\partial \hat{x}}}_{\sim 0.1} + \underbrace{\hat{v}\frac{\partial \hat{u}}{\partial \hat{y}}}_{\sim 0.1}\right) = \underbrace{-\frac{\partial \hat{p}}{\partial \hat{x}}}_{\text{unknown}} + \underbrace{\left(\underbrace{\frac{\partial^2 \hat{u}}{\partial \hat{x}^2}}_{\sim 1} + \underbrace{\frac{\partial^2 \hat{u}}{\partial \hat{y}^2}}_{\sim 10}\right)}_{\sim 10}$$
(27)

Importantly, we have discovered the relative magnitudes of the terms that do not depend on the physical situation. The above relation holds for Poiseuille flow of any fluid at any scale. The parameters pertaining to the specific physical system are wrapped up into the Reynolds number.

Now is a good time, then, to evaluate the Reynolds number for the kind of microfluidic slip experiments we are considering.

#### Reynolds number for microfluidic channels

A recent Poiseuille-type microfluidic slip experiment appears in the 2006 paper by Huang et al in the Journal of Fluid Mechanics [1]. They looked at steady flow in channels 50  $\mu$ m deep and 250  $\mu$ m wide. Particle velocimetry techniques showed a velocity distribution with a maximum velocity of about 600  $\mu$ m s<sup>-1</sup>. When defining the Reynolds number for flow in a rectangular duct, the standard characteristic length to use is the **hydraulic diameter**, which is four times the cross-sectional area divided by the perimeter. In this case it is 83.33  $\mu$ m.

The viscosity of water at room temperatures is very close to  $\mu=0.001$  kgs<sup>-1</sup>m<sup>-1</sup>. The density of water is  $\rho=1000$  kgm<sup>-3</sup>. We shall choose  $L=100\mu$ m and  $U=400\mu$ m s<sup>-1</sup> as conservative characteristic length and velocity scales. Hence the Reynolds number evaluates to:

$$Re = \frac{\rho LU}{\mu} = \frac{1000 \times 0.0001 \times 0.004}{0.001} = 0.4$$
 (29)

In the tradition of theoretical physics, this may be described as 'of order 0.1'. Thus the magnitudes of the two sides of the Navier-Stokes equation are:

$$\operatorname{Re}\left(\frac{\partial \hat{u}}{\partial \hat{t}} + \hat{u}\frac{\partial \hat{u}}{\partial \hat{x}} + \hat{v}\frac{\partial \hat{u}}{\partial \hat{y}}\right) = \underbrace{-\frac{\partial \hat{p}}{\partial \hat{x}} + \left(\frac{\partial^{2}\hat{u}}{\partial \hat{x}^{2}} + \frac{\partial^{2}\hat{u}}{\partial \hat{y}^{2}}\right)}_{\text{order at least 10}} \tag{30}$$

So the right hand side of the equation is at least 250 times bigger than the left hand side. We have achieved our goal of finding which terms are negligible enough to discard. We boldly make the tactical decision to throw away the left hand side, and solve instead the much simpler equation:

$$0 = -\frac{\partial \hat{p}}{\partial \hat{x}} + \left(\frac{\partial^2 \hat{u}}{\partial \hat{x}^2} + \frac{\partial^2 \hat{u}}{\partial \hat{y}^2}\right) \tag{31}$$

The y component of the Navier-Stokes is:

$$\operatorname{Re}\left(\frac{\partial \hat{v}}{\partial \hat{t}} + \hat{u}\frac{\partial \hat{v}}{\partial \hat{x}} + \hat{v}\frac{\partial \hat{v}}{\partial \hat{y}}\right) = -\frac{\partial \hat{p}}{\partial \hat{y}} + \left(\frac{\partial^2 \hat{v}}{\partial \hat{x}^2} + \frac{\partial^2 \hat{v}}{\partial \hat{y}^2}\right)$$
(32)

For pure Poiseuille flow, this reduces to 0 = 0. For rough-walled Poiseuille-like flow, we expect  $\hat{v}$  to be nonzero but very small compared to  $\hat{u}$ . So we

10-

10-3

anticipate no significant loss of information if we discard the left-hand side of the y velocity equation. If we do this, then we have simplified the Navier-Stokes vector equation to:

$$0 = -\hat{\nabla}\hat{p} + \hat{\nabla}^2\hat{\vec{u}} \tag{33}$$

or

10-1

$$\hat{\nabla}^2 \hat{\vec{u}} = \hat{\nabla} \hat{p} \tag{34}$$

This is known as the Stokes equation, and describes very slow-moving flow described as 'creeping' flow or Stokes flow. Stokes flow is associated with Reynolds numbers  $\text{Re} \ll 1$ . Some perspective: for flow in a pipe, flows with Reynolds numbers below about 2,300 are always laminar, while flows with Reynolds numbers above about 4,000 are always turbulent.

In Stokes flow, the time-dependent and inertial terms are deemed to be negligible compared to the pressure and viscosity terms. Thus, the Stokes equation describes the force balance between pressure and viscosity

#### Redimensionalize back to Physical Units

We will convert back into physical units. Substituting the definitions of the dimensionless variables back into the Stokes equation:

$$\left(\frac{\partial^2 \frac{u}{\overline{U}}}{\partial (\frac{x}{L})^2} + \frac{\partial^2 \frac{u}{\overline{U}}}{\partial (\frac{y}{L})^2}\right) = \frac{\partial \frac{L}{\mu \overline{U}} p}{\partial \frac{x}{L}} \tag{35}$$

$$\frac{L^2}{\mu U} \left( \frac{\partial^2 u}{\partial x^2} + \frac{\partial^2 u}{\partial u^2} \right) = \frac{L^2}{\mu U} \frac{\partial p}{\partial x} \tag{36}$$

Multiply both sides by 
$$\frac{\mu U}{L^2}$$
 (37)

$$\mu \left( \frac{\partial^2 u}{\partial x^2} + \frac{\partial^2 u}{\partial y^2} \right) = \frac{\partial p}{\partial x} \tag{38}$$

Similarly for the other vector components of the Stokes equation.

Thus, for microfluidic flow down a pipe, the bulk fluid obeys the Stokes equation:

$$\mu \nabla^2 \vec{u} = \nabla p \tag{39}$$

In the field of microfluidics, it is customary to assume Stokes flow in all cases. However, we note that for example, the capillary slip experiment of Vinogradova 2009 [4] had velocities of up to 5 cm per second down a channel  $100 \ \mu \text{m}$  wide, yielding a Reynolds number Re  $\sim 1$ . This makes the pressure and shear force terms only ten times larger than the inertial terms, so some error may be noticeable. But, we shall follow the custom of microfluidics, and assume Stokes flow holds in the bulk.


#### . . .

## Modeling the Boundary: Generalized Slip

After establishing that the Stokes equation holds in the bulk fluid, we turn now to the boundary. The first order of business is to define *where* the boundary is. As the discussion in Chapter 2 showed, there is some ambiguity about the location of the nominal boundary. For a true physical surface, there may be a *region* of finite width that could be labelled the 'boundary'. At the top of the region, the bulk fluid behaviour obtains, and at the bottom of the boundary, it is unambiguously solid.

We are constructing a mathematical model of a physical system; in the model there will be a boundary that is a purely geometric surface (of zero width), and at any arbitrary distance above the boundary, the bulk fluid conditions will hold. We need to decide exactly which part of the physical boundary region maps to our model boundary. The sensible choice is: the top.

Here is why. As we descend down through the fluid towards the physical boundary, there will be a point at which the local conditions begin to deviate from that of the bulk. Perhaps the density changes — we are entering a 'depletion region' with correspondingly lower viscosity. In the mathematical model, there is a perfect distinction between 'bulk' and 'boundary'. Thus we must identify the mathematical boundary with the very top of the physical boundary region.

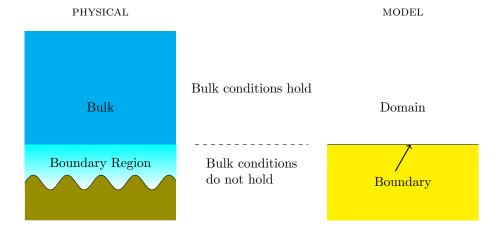


#### 11-2

#### Simple Shear with Navier Slip

As explained in the introductory chapters, the classical boundary condition is 'no slip', and the simplest extension to that is Navier slip, where the boundary velocity is proportional to the velocity gradient:


$$u_{\text{boundary}} = b \frac{\partial u}{\partial z} \bigg|_{\text{boundary}}$$
 (40)

This holds for a system exhibiting **simple shear:** a flat surface with laminar flow above it, with each lamina parallel to the boundary surface. There is no velocity component normal to the surface.

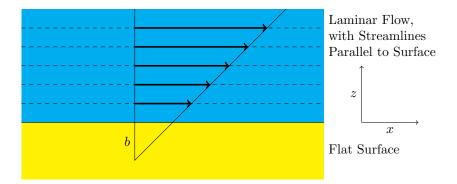

The laminae *shear* past each other, giving rise to the viscous force. The *shear* rate is simply the velocity gradient: the rate of change of (parallel) velocity as we move in the normal direction.

The shear rate has an intuitive physical meaning. Consider the action of simple shear on an infinitesimal cube of fluid: the cube starts with all sides at right angles, and is deformed into a parallelipiped. The internal angle  $\theta$  starts at 90° and gets smaller. In timeslice  $\Delta t$  the change in angle  $\Delta \theta$  looks like:

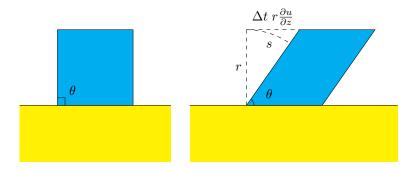


In timeslice  $\Delta t$ , the top of the cube moves distance  $\Delta t \, r \partial_z u$ , and the angle changes by  $\Delta \theta = s/r$ . For sufficiently small  $\Delta t$ , s is much smaller than r, and  $s \simeq \Delta t \, r \partial_y u$ , so that  $\Delta \theta \simeq \Delta t \, \partial_z u$ . In the limit  $\Delta t \to 0$ :

shear rate = 
$$\frac{d\theta}{dt} = \frac{\partial u}{\partial z}$$
 (41)

## Oblique Shear and the Velocity Gradient Tensor

If the surface is still flat, but **not** oriented such that the surface maps nicely to the plane z = 0, then the shear rate must be defined with vector derivatives.

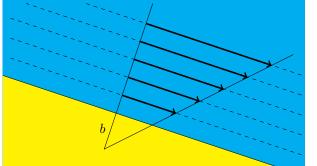


Laminar Flow, with Streamlines Parallel to Surface, but oblique to coordinates



We introduce the unit vectors normal and tangent to the surface,  $\vec{n}$  and  $\vec{t}$ . Then the tangential component of velocity is  $\vec{u} \cdot \vec{t}$ . Because the streamlines are parallel to the flat surface,  $\vec{u}$  is parallel to  $\vec{t}$ , so that  $\vec{u} \cdot \vec{t}$  is in fact the magnitude of  $\vec{u}$ .

We can define the shear rate as the rate of change of the tangential velocity in the normal direction. That is, the tangential component of the directional derivative of velocity in the normal direction. The directional derivative of the velocity in the normal direction is  $\vec{n} \cdot \nabla \vec{u}$ , and its tangential component is  $\vec{n} \cdot \nabla \vec{u} \cdot \vec{t}$ .

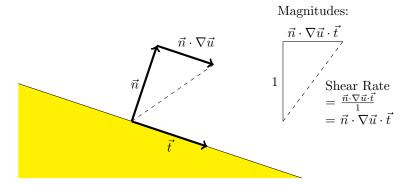



Thus for a *flat* surface, with arbitrary coordinates, the shear rate is

$$\vec{n} \cdot \nabla \vec{u} \cdot \vec{t} \tag{42}$$


## Arbitrary Curved Surface and Deformation Rate Tensor

But what if the surface is not flat?

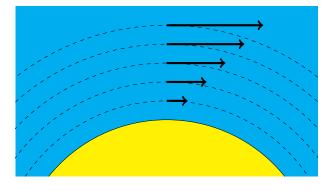

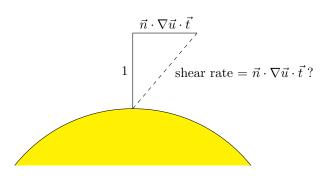

But consider the following *possible* action on an infinitesimal cube of fluid:

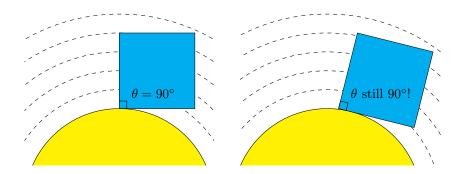

The infinitesimal cubical element has *rotated* (and perhaps translated) but *not deformed*. The laminae have *not* slid past each other, and the cube has not been subjected to shear. There will be no viscous stress operating within the cube.

In this case,  $\vec{n} \cdot \nabla \vec{u} \cdot \vec{t}$  is not the shear rate of the cube, but the rate of rotation (angular velocity). To get the true shear rate, we need to somehow remove the rotation.

The velocity gradient tensor (and Fréchet derivative) linearize the flow field.  $\nabla \vec{u}$  is a linear transformation of a direction vector (the result being the correction vector). Geometrically, a linear transformation can be decomposed into a rotation, an area-preserving deformation, and an expansion. Following the exposition in the texbeek of C. Pozrikidis:

$$\nabla \vec{u} = \mathbf{\Xi} + \mathbf{E} + \frac{1}{2} (\nabla \cdot \vec{u}) \mathbf{I}$$
 (43)

The rotation is represented in the **vorticity tensor**,  $\Xi$ , the deformation in the **deformation rate tensor**,  $\mathbf{E}$ , and the expansion in  $\frac{1}{2}(\nabla \cdot \vec{u})\mathbf{I}$ 

Working, for clarity, with 2-dimensional flow only, the vorticity tensor is:

$$\mathbf{\Xi} = \frac{1}{2} (\nabla \vec{u} - \nabla \vec{u}^T) = \frac{1}{2} \begin{bmatrix} 0 & \partial_x v - \partial_y u \\ \partial_y u - \partial_x v & 0 \end{bmatrix}$$
(44)

The deformation rate tensor is:

$$\mathbf{E} = \frac{1}{2} (\nabla \vec{u} + \nabla \vec{u}^T) - \frac{1}{2} (\nabla \cdot \vec{u}) \mathbf{I} = \frac{1}{2} \begin{bmatrix} \partial_x u - \partial_y v & \partial_x v + \partial_y u \\ \partial_y u + \partial_x v & \partial_y v - \partial_x u \end{bmatrix}$$
(45)

The expansion rate tensor is:

$$\frac{1}{2}(\nabla \cdot \vec{u})\mathbf{I} = \frac{1}{2} \begin{bmatrix} \partial_x u + \partial_y v & 0\\ 0 & \partial_x u + \partial_y v \end{bmatrix}$$
(46)

We will deal with liquids, which we assume to be incompressible. Thus the divergence vanishes:

$$\nabla \cdot \vec{u} = 0 \tag{47}$$

Therefore, the expansion term vanishes, and the deformation rate tensor simplifies to:


$$\mathbf{E} = \frac{1}{2} (\nabla \vec{u} + \nabla \vec{u}^T) = \frac{1}{2} \begin{bmatrix} 2\partial_x u & \partial_x v + \partial_y u \\ \partial_y u + \partial_x v & 2\partial_y v \end{bmatrix}$$
(48)

So for incompressible fluids, the linearized flow field is fully described by two terms, the *antisymmetric* and *symmetric* parts of the velocity gradient tensor:

$$\nabla \vec{u} = \frac{1}{2} (\nabla \vec{u} - \nabla \vec{u}^T) + \frac{1}{2} (\nabla \vec{u} + \nabla \vec{u}^T) = \mathbf{\Xi} + \mathbf{E}$$
 (49)

We have solved our problem: removing the rotational transforms from the velocity gradient tensor is as simple as  $\nabla \vec{u} - \Xi = \mathbf{E}$ . So the deformation rate tensor  $\mathbf{E}$  contains all transformations of the velocity gradient tensor other than rotation. Specifically, it must describe all shear.

We illustrate this in a simple example of 2-dimensional flow, where the normal and tangent vectors happen to align with the coordinate axes:

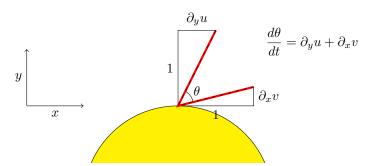

We see that the true shear rate at this point is  $\partial_y u + \partial_x v$ . The normal and tangent vectors at this point are:

$$\vec{n} = \begin{bmatrix} 0 \\ 1 \end{bmatrix}, \quad \vec{t} = \begin{bmatrix} 1 \\ 0 \end{bmatrix}, \tag{50}$$

What is  $\vec{n} \cdot 2\mathbf{E} \cdot \vec{t}$ ?

$$\vec{n} \cdot 2\mathbf{E} \cdot \vec{t} = \begin{bmatrix} 0 \\ 1 \end{bmatrix} \cdot \begin{bmatrix} 2\partial_x u & \partial_x v + \partial_y u \\ \partial_y u + \partial_x v & 2\partial_y v \end{bmatrix} \begin{bmatrix} 1 \\ 0 \end{bmatrix} = \partial_y u + \partial_x v \tag{51}$$

We have intuitively confirmed that for a general fluid flow, the shear rate associated with an infinitesimal plane is:

shear rate = 
$$\frac{d\theta}{dt} = \vec{n} \cdot 2\mathbf{E} \cdot \vec{t}$$
 (52)

where  $\vec{n}$  and  $\vec{t}$  are the unit normal and tangent vectors to the plane.

#### Generalized Slip Condition

We have discovered the generalized shear rate: the rate of shear of an infinitesimal plane sliding over another infinitesimal plane. If the plane is on the solid surface, then we can now write down a generalized Navier-type slip condition: the tangential velocity on the plane is proportional to the shear rate at the plane. The constant of proportionality is of course the slip length b.

$$\vec{u} \cdot \vec{t} = b \ \vec{n} \cdot 2\mathbf{E} \cdot \vec{t} \tag{53}$$

Now **E** is symmetric, so  $\vec{n} \cdot \mathbf{E} = \mathbf{E} \cdot \vec{n}$ . Furthermore, both sides of the equation are a dot product with  $\vec{t}$ , so we may simplify to:

$$\vec{u} = b \ 2\mathbf{E} \cdot \vec{n} \tag{54}$$

Or,

$$\vec{u} = b \left( \nabla \vec{u} + \nabla \vec{u}^T \right) \cdot \vec{n} \tag{55}$$

It remains only to note that the slip length is a function of position and that the boundary on which it holds is may also be described by a function. The boundary function will typically be a surface – a 'height' function h(x,y) on the x,y plane.

# Complete Mathematical Model

Our mathematical model can now be formally stated. An bulk of fluid is situated above a boundary surface. The boundary surface is a function on the x,y plane, and the z direction is in general perpendicular to the boundary.

The fluid is an incompressible liquid, so the divergence is zero everywhere in the bulk:

$$\nabla \cdot \vec{u} = 0 \tag{56}$$

The liquid is Newtonian and the flow has a low Reynolds number, so flow at each point in the bulk obeys Stokes equation:

$$\mu \nabla^2 \vec{u} = \nabla p \tag{57}$$

And fluid at each point on the boundary satisfies the generalized slip boundary condition:

$$\vec{u} = b \left( \nabla \vec{u} + \nabla \vec{u}^T \right) \cdot \vec{n} \tag{58}$$

In the next chapter we shall find an expression for the effective slip by finding a **homogenized** solution to these partial differential equations.

# Bibliography

- [1] Peter Huang, Jeffrey S. Guasto, and Kenneth S. Breuer. Direct measurement of slip velocities using three-dimensional total internal reflection velocimetry. Journal Of Fluid Mechanics, 566:447 – 464, 2006.
- [2] Constantine Pozrikidis. Introduction to Theoretical and Computational Fluid Dynamics. Oxford University Press, 1997.
- [3] Constantine Pozrikidis. Fluid Dynamics: Theory, Computation, and Numerical Simulation. Kluwer, 2001.
- [4] Olga Vinogradova, Kaloian Koynov, Andreas Best, and Francois Feuillebois. Direct measurements of hydrophobic slippage using double-focus fluorescence cross-correlation. *Physical Review Letters*, 102:118302, 2009.

Notes

- 14/12/2013 4:44 pm, Shaun Hendy
  - Since this is standard undergrad calculus I think it would be better off in an appendix.
- 4-1 14/12/2013 4:44 pm, Shaun Hendy
  I am not sure this adds much. I would delete it.
- 4-2 14/12/2013 4:44 pm, Shaun Hendy

I'm not sure you meant to say this: your element of fluid is an approximation to a real fluid, which consists of molecules. We expect the laws of motion to apply to molecules, but why this imaginary construct?

- 4-3 14/12/2013 4:44 pm, Shaun Hendy Body
- 4-4 14/12/2013 4:44 pm, Shaun Hendy

This is a bit awkward. You start by saying what viscosity is from a molecular point of view and then pretty much leap straight to mu Laplace u without any explanation. You also don't seem to have defined the pressure.

- 4-5 14/12/2013 4:44 pm, Shaun Hendy Divergence of what?
- 4-6 14/12/2013 4:44 pm, Shaun Hendy

This is a silly way of putting it. I can think of many identities that would make the maths much simpler. Rather, you acknowledge it is a good approximation for many fluids and then note that it is also very convenient mathematically.

- 5-1 14/12/2013 4:44 pm, Shaun Hendy
  Non-dimensionalise what? (And note my spelling and hyphenation)
- 5-2 \[ \frac{14/12/2013 4:44 \text{ pm, Shaun Hendy}}{\text{Really? I can think of many examples where this is not true! Also, when you make statements like this, you need to add a reference. In this case you are unlikely to find one, because it is not true.
- 14/12/2013 4:44 pm, Shaun Hendy
  I am not sure what this means.
- 5-4

  14/12/2013 4:44 pm, Shaun Hendy
  It would be worth actually stating the expression for Poiseuille flow here, rather than assuming the reader knows it.
- 6-1 14/12/2013 4:44 pm, Shaun Hendy
  This is not an equation
- 6-3 \[ \frac{14/12/2013 4:44 pm, Shaun Hendy}{\text{You need to assume more than this to arrive at the steady state below. What if there is turbulence?} \]
- 7-1 14/12/2013 4:44 pm, Shaun Hendy
  Need to say what direction is the flow going in figures need more careful labelling. In particular label your axes. What is velocity, what is distance?

Notes

7-3 14/12/2013 4:44 pm, Shaun Hendy non-dimensionalisatiom

14/12/2013 4:44 pm, Shaun Hendy
I like this!

7-5 Again, labels and axes.

7-6 \[ \frac{14/12/2013 4:44 \text{ pm, Shaun Hendy}}{\text{There is actually a formalism for this that applied mathematicians and physicists use, so it is not really right to describe it is a tradition.}

- 8-1 14/12/2013 11:40 am, Shaun Hendy
  Need to say that u=u(y)
- 8-2 This is not really the way to do this. Better to say that over most of the domain it is of order 0.1, otherwise it sounds like you are contradicting yourself.
- 8-3 14/12/2013 4:52 pm, Shaun Hendy over most of the domain
- 8-4 14/12/2013 4:52 pm, Shaun Hendy
  Huh? Your argument is circular. Why didn't you choose a characteristic pressure then?
- 9-1 This is clearly nonsense, since you are claiming that 0.04 is of order of at least 10! What you mean to say is that each term on the RHS is of order 10, but due to cancellation their sum is much smaller. You need to be more careful with the way you use your parentheses.
- 9-2 14/12/2013 4:44 pm, Shaun Hendy
  So you need to rethink this obviously the LHS cannot be 250 times bigger than the RHS, otherwise the equality would not hold.
- 9-3 15/12/2013 11:44 am, Shaun Hendy
  So you've made a leap here to say that the entire RHS is order 10, but that is not the case. The three terms on the RHS can cancel to give something much smaller.
- 10-1 10-1 10-1 14/12/2013 4:44 pm, Shaun Hendy
  I looked at the effect of these terms for mixed slip in my 2005 paper. You might want to look at that and say what form the error will take. Will it affect the effective slip?
- 10-2 15/12/2013 11:44 am, Shaun Hendy viscous stresses.
- 10-3 15/12/2013 11:44 am, Shaun Hendy
  I would probably call a microscale pipe a capillary.

Notes

11-1

15/12/2013 11:44 am, Shaun Hendy

This is quite a weak discussion. Really, we are trying to model a physical experiment in order to interpret the results of the experiment. Better to talk about far field and near field effects or something like that - introducing some arbitrary boundary between the two regimes is misleading, especially when you say there is some "perfect" distinction between the two.

Also, having introduced the equations you are going to use, including the incompressibility equation, you are no longer allowing for any depletion region.

Anyway, as far as I can tell there is not need to make such a distinction, so you can probably just delete this.

11-2 15/12/2013 11:44 am, Shaun Hendy This section is really good.

14-1 15/12/2013 11:44 am, Shaun Hendy You need to cite this book!

14-2 15/12/2013 11:44 am, Shaun Hendy textbook

16-1 15/12/2013 11:44 am, Shaun Hendy could be

16-2 15/12/2013 11:44 am, Shaun Hendy on the boundary

16-3 15/12/2013 11:44 am, Shaun Hendy this

16-4 15/12/2013 11:44 am, Shaun Hendy equation (55)

16-5 15/12/2013 11:44 am, Shaun Hendy
The velocity of the fluid

16-6 15/12/2013 11:44 am, Shaun Hendy

I wouldn't regard this as a complete mathematical model. You also need to specify a number of other boundary conditions e.g. velocity in the far field etc