Simplified Design Procedures for Fiber Composite Structural Components/Joints

P.L.N. Murthy and C.C. Chamis Lewis Research Center Cleveland, Ohio

Prepared for the Indo-U.S. Workshop on Composite Materials for Aerospace Applications sponsored by the Indian Institute of Science
Bangalore, India, July 23–27, 1990

NASA

(NASA-TM-103113) SIMPLIFIED DESIGN PRUCEDURES FOR FIBER COMPOSITE STRUCTURAL COMPONENTS/JOINTS (NASA) 23 P CSCL 11D N90-24384

Unclas 63/24 0290732

and the second s <u> Armania de manda martir de la composición del composición de la </u>

SIMPLIFIED DESIGN PROCEDURES FOR FIBER COMPOSITE STRUCTURAL COMPONENTS/JOINTS

P.L.N. MURTHY* AND C.C. CHAMIST

National Aeronautics and Space Administration, Lewis Research Center, Cleveland, Ohio 44135

SUMMARY

Simplified step-by-step design procedures are summarized, which are suitable for the preliminary design of composite structural components such as panels (laminates) and composite built-up structures (box beams). Similar procedures are also summarized for the preliminary design of composite bolted and adhesively bonded joints. The summary is presented in terms of sample design cases complemented with typical results. Guidelines are provided which can be used in the design selection process of composite structural components/joints. Also, procedures to account for cyclic loads, hygrothermal effects and lamination residual stresses are included.

INTRODUCTION

The fiber composites technology is rapidly maturing to the extent that these composites have been used as prime materials in advanced aerospace structures where performance is important. As the cost becomes competitive with conventional materials, fiber composites become attractive alternatives for use in more traditional applications where cost rather than performance is the major design driver. Fiber composite structures, like other structures, are assemblages of typical structural components. A typical fiber composite structural component is a panel or plate subjected to in-plane loads.

The design of fiber composite structural components requires analysis methods and procedures which relate the structural response of the component to the specified loading and environmental conditions. The structural response is eventually compared to given design criteria for strength, displacement, buckling, vibration frequencies, etc., in order to ascertain that the component will perform satisfactorily. Though there are several recent books on composite mechanics available [1-6], none covers design procedures for fiber composite structural components in any detail.

Another important aspect in composite structural design is joints. It is generally considered that joints determine the structural integrity. Composite joints have been extensively investigated in recent years. Results of these investigations are reported, in part, in symposium proceedings [7,8]. Helpful recommendations for design practice for select composite joints are included in Reference 9. Analysis methods for detailed stress calculations are described in Reference 10. Though relevant information for designs may be collected from the above cited reference, step-by-step sample cases are not available. Recent

^{*}Aerospace Structure Engineer, Structures Division †Senior Aerospace Scientist, Structures Division

research at NASA Lewis Research Center has focused on developing simplified design procedures for (1) composite panels [11]; and (2) composite box beams [12], composite bolted joints [13], and composite adhesively bonded joints [14]. These references describe step-by-step design procedures that are suitable for preliminary designs.

The objective of this paper is to provide (1) summaries of these design procedures with typical results in order to demonstrate what can be done and how to get started, and (2) a brief outline on how to account for hygrothermal effects, cyclic loads and lamination residual stress in the design procedure. The level of detail and results in the summaries differ depending on what the authors considered adequate to illustrate that procedure. The complete details, results, and relevant references are described in References 11 to 14.

COMPOSITE PANELS SUBJECTED TO COMBINED IN-PLANE LOADS

Composite panels (membranes) are structural components which generally have a rectangular shape. They can be used individually (Fig. 1) or as members of built-up structural components as described in the next section. They usually are designed to support combined in-plane loading conditions (Fig. 1). The loading conditions can include: (1) static loads, (2) static with superimposed cyclic loads, (3) hot-wet (hygrothermal) environmental effects, and (4) lamination residual stresses. A sample design for only static loads is presented, and the procedures used for analyzing loading conditions (2) to (4) are briefly outlined. Furthermore, only the steps to size the laminate for strength and buckling are summarized. The details for the complete design are described in Reference 11.


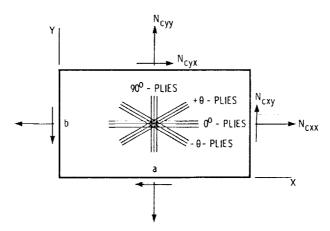


Figure 1. - Schematic of angleplied fiber composite panel subjected to combined in-plane loads.

Sample Design - Size Panel From Strength

Structural component: Rectangular panel, 15 by 10 in.

Specified loads:

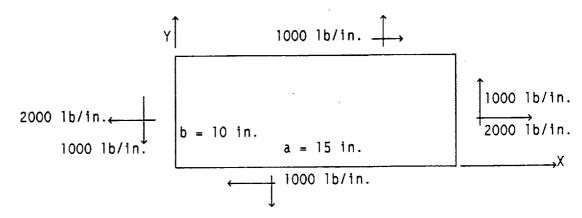

Displacement limits: 0.5 percent of edge dimensions and l°-shearing angle

Safety factor:

2.0 on specified load

Composite system:

Graphite fiber/epoxy matrix at 0.6 fiber volume ratio

(FVR)

Design procedure:

Rectangular panel designed not to exceed displacement limits, or ply strengths, or buckle at design load. Specified-load ply stresses may be used instead of design load ply stresses to compute matrix-controlled ply strength margins when the fiber-controlled stress margins are relatively large.

Step 1: Design Variables

Number of plies, ply orientations, and ply stacking sequence.

Step 2: Design Loads

Safety factors times specified loads:

 $N_{CXX} = 2 \times 2000 \text{ lb/in.} = 4000 \text{ lb/in.}$

 $N_{CVV} = 2 \times 1000 \text{ lb/in.} = 2000 \text{ lb/in.}$

 $N_{CXV} = 2 \times 1000 \text{ lb/in.} = 2000 \text{ lb/in.}$

Step 3:

Obtain composite material properties (ply and angleply) for AS/E, from Table I. The ply off axis (angleply) properties can be derived from the unidirectional ply properties using coordinate transformation.

TABLE 1. - TYPICAL PROPERTIES OF UNIDIRECTIONAL COMPOSITES AT ROOM TEMPERATURE

Kevlar Graphite 49/ AS/epoxy epoxy	0.54 0.60	0.049 0.057	-1.60 0.40	31.3 16.4	12.2 16.0	0.70	0.41 0.72	0.32 0.25	0.02 0.34	172 000 220 000	42 000 180 000	1600 8000	9400 36 000	4000 10 000	0.008 0.006	0.151 0.129	420 420
Thornel 300/ epoxy	0.70	0.058	0.01	12.5	21.0	1.5	1.0	0.28	0.01	218 000	247 000	2850	35 700	0086	900.0	0.129	420
Modmor I/ polymide	0.45	0.056	0.0	14.1	31.3	0.72	0.65	0.25	0.02	117 000	94 500	2150	10 200	3150	0.003	0.129	700
Modmor I/ epoxy	0.45	0.056		18.5	27.5	1.03	6.0	0.10	 	122 000	128 000	0209	28 500	8900	0.003	0.129	420
S-glass/ epoxy	0.72	0.077	2.1	9.3	8.8	3.6	1.74	0.23	0.00	187 000	119 000	0299	23 500	9200	0.014	0.128	420
Boron/ poly mide	0.49	0.072	2.7	15.8	32.1	2.1	1.11	0.16	0.05	151 000	158 000	1600	9100	3750	0.003	0.168	700
Boron/ epoxy	0.50	0.073	3.4	16.9	29.5	3.15	0.78	0.17	0.02	199 000	232 000	8100	17 900	9100	0.003	0.168	420
Units		16/1n;/	10-6 in./ in/ °F	10-6 in./ in/ °F	10 ⁶ ps i	10 ⁶ ps t	10^6 ps i	1		psį	þsd	psi	pst	psį	10- ² tn.	10 ⁻² in.	ju.
Symbol	kf	P£	a, 11	at 22	E _{t11}	E _{1.22}	G _L 12	ve12	v£21	Stiit	S _t 11C	S _£ 22T	S422C	S ₄ 125	8,11	B <u>r</u> 22	
Properties	Fiber volume ratio	Density	Longitudinal thermal coefficient	Transverse thermal coefficient	Longitudinal modulus	Transverse modulus	Shear modulus	Major Poissons's ratio	Minor Poissons's ratio	Longitudinal tensile strength	Longitudinal compres- sive strength	Transverse tensile strength	Transverse compres- sive strength	Intralaminar shear strength	Longitudinal moisture coefficient	Transverse moisture coefficient	Glass transition temperature

- - 11 186 1

. . .

Step 4: Select Laminate Configuration

Number of 0° plies = Design load $(N_{CXX})/[longitudinal\ tensile\ strength\ (S_Q_1]T=220\ 000\ psi)\times ply\ thickness\ (t_Q=0.005\ in.)]$

$$N_{QO} = \frac{N_{CXX}}{S_{Q11T}t_Q} = \frac{4000 \text{ lb/in.}}{220 \text{ 000 lb/sq in.} \times 0.005 in.} = 3.64 \sim 4$$

Use $N_{QO} = 8$ (double because of the combined loading). Number of 90° plies = Design load $(N_{Cyy})/[longitudinal tensile strength (SQ11T) × ply thickness (tq)]$

$$N_{Q90} = \frac{N_{Cyy}}{S_{0.11T}t_0} = \frac{2000 \text{ lb/in.}}{220 \text{ 000 lb/sq in.} \times 0.005 in.} = 1.82 \sim 2$$

Use N₂g₀ = 4 (double because of the combined loading). Number of $\pm 45^{\circ}$ plies = Design load (N_{CXY}) × one-half the ratio of the ply longitudinal (E₂₁₁ = 18.5 mpsi) to $\pm 45^{\circ}$ -composite shear modulus (G₀₁₂ = 5.8 mpsi)/[longitudinal compressive strength (S_{211C} = 180 000 psi) × ply thickness (t₂ = 0.005 in.)]

$$N_{2\pm45} = \frac{N_{cxy} \times (1/2)(E_{211}/G_{\Theta12})}{S_{011}Ct_0} = \frac{2000 \text{ lb/in. } (1/2)(18.5/5.8)}{180 \text{ 000 lb/sq in.} \times 0.005 \text{ in.}} = 3.5 \sim 4$$

Use $N_{0\pm45}=8$ (double because of the combined loading). Therefore, the laminate is 20 plies (8 at 0°, 8 at $\pm45^\circ$, and 4 at 90°). The laminate thickness (t₀) is 20 \times 0.005 in. = 0.10 in.

And the required laminate configuration (using the conventional designation)

[±45/0/90/0]₂₅

Notes:

- (1) The laminate was initially sized using fiber-controlled properties. The number of plies in each orientation was doubled in order to approximately account for the combined loading stresses which are resisted by matrix-controlled properties.
- (2) The $\pm 45^{\circ}$ plies were placed on the outside for increased shear buckling resistance.
- (3) The longitudinal compression strength was selected for determining the number of $\pm 45^{\circ}$ plies because this is less than the longitudinal tensile strength (180 000 psi < 220 000 psi, Table I).
- (4) The force deformation relationships which are needed to check for laminate displacements are determined from classical laminate theory or as described in Reference 1.
- (5) The ply stresses and the respective margins are also determined from laminate theory.

Checks for Shear Buckling

The design of thin panels is generally governed by stability consideration when they are subjected to either compressive or in-plane shear loads. Since the

panel is subjected to tensile and shear loads, the panel needs to be checked only for shear buckling. Shear buckling is estimated by using the following approximate equation if the tensile stresses (σ_{CXX} and σ_{CVY}) are neglected

$$\sigma_{\text{cxy}}^{(\text{cr})} = \frac{7\pi^2 t_{\text{c}}^2 E}{12b^2 (1 - v_{\text{cxy}} v_{\text{cyx}})} \quad (1 \le a/b \le 2) \qquad E = \sqrt[3]{4E_{\text{cxx}} E_{\text{cyy}} G_{\text{cxy}}}$$

For our laminate, the values are [1].

$$v_{CXY} = 0.33$$
 $v_{CYX} = 0.22$
 $E_{CXX} = 9.6 \text{ mpsi}$
 $E_{CYY} = 6.5 \text{ mpsi}$
 $G_{CXY} = 2.3 \text{ mpsi}$

Using these moduli values in the equation for E, we calculate:

$$E = \sqrt[3]{4 \times 9.6 \times 6.5 \times 2.3}$$
 mpsi = 8.31 mpsi

Using this value for E, the values for v_{CXY} and v_{CYX} , b = 10 in. and t_C = 0.1 in. in the equation for $\sigma_{CXY}^{(CT)}$, we calculate:

$$\sigma_{\text{cxy}}^{(\text{cr})} = \frac{7\pi^2 (0.1)^2 \text{ in.}^2 \times 8.31 \times 10^6 \text{ lb}}{12 \times 10 \text{ in.} \times 10 \text{ in.} \times (1 - 0.33 \times 0.2) \text{ in.}^2} = 5117 \text{ psi}$$

Check: $\sigma_{CXV}^{(cr)} \geq \sigma_{CXY}$ (design)

5117 psi < 20 000 psi

$$MOS = \frac{5117}{20000} - 1.0 = -0.74$$

where MOS is the margin of safety. A positive value indicates a safe design and a negative value implies that failure is imminent. Therefore, the shear buckling stress needs to be checked in combination with the two normal (σ_{CXX} and σ_{Cyy}) tensile stresses.

An estimate of buckling resistance may be obtained from the approximate interaction equation given by

$$\frac{\sigma_{\text{CXX}}}{\sigma_{\text{CXX}}^{(\text{Cr})}} + \frac{\sigma_{\text{Cyy}}}{\sigma_{\text{Cyy}}^{(\text{Cr})}} - \left[\frac{\sigma_{\text{CXY}}}{\sigma_{\text{CXY}}^{(\text{Cr})}}\right]^2 + 1.0 \ge 0$$

where $\sigma_{\rm CXX}$, $\sigma_{\rm CYY}$, and $\sigma_{\rm CXY}$ are the laminate stresses at design load. The buckling stresses $\sigma_{\rm CXX}^{\rm (cr)}$ and $\sigma_{\rm CYY}^{\rm (cr)}$ are roughly approximated from

$$\sigma_{\text{cyy}}^{(\text{cr})} = \sigma_{\text{cxx}}^{(\text{cr})} \approx \frac{\pi^2 t_{\text{c}}^2 E}{12b^2 (1 - v_{\text{cxy}} v_{\text{cyx}})} \left(\frac{a}{b} + \frac{b}{a}\right)^2$$

where E and ν_{C} are the same as before. Using respective values for the moduli, Poisson's ratios b, a, and $t_{\text{C}},$ we calculate

$$\sigma_{\text{cyy}}^{(\text{cr})} = \sigma_{\text{cxx}}^{(\text{cr})} \approx \frac{\pi^2 \times (0.1)^2 \times 8310000}{12 \times 10 \times 10 \times (1 - 0.33 \times 0.22)} \left(\frac{15}{10} + \frac{10}{15}\right)^2 \text{ psi}$$

$$\sigma_{\text{cyy}}^{(\text{cr})} = \sigma_{\text{cxx}}^{(\text{cr})} \approx 3433 \text{ psi}$$

Substituting the following:

$$\sigma_{\text{CXX}} = 40\ 000\ \text{psi}; \ \sigma_{\text{CXX}}^{(\text{cr})} = 3433\ \text{psi}$$

$$\sigma_{\text{cyy}} = 20\ 000\ \text{psi}; \ \sigma_{\text{cyy}}^{(\text{cr})} = 3433\ \text{psi}$$

$$\sigma_{\text{cxy}}$$
 = 20 000 psi; $\sigma_{\text{cxy}}^{\text{(cr)}}$ = 5117 psi

in the interaction equation, we calculate

$$\frac{40\ 000}{3433} + \frac{20\ 000}{3433} - \left(\frac{20\ 000}{5117}\right)^2 + 1.0 > 0$$

$$11.65 + 5.83 - 15.28 + 1.0 = 3.2 > 0 \quad o.k.$$

Therefore, based on the estimate obtained using the interaction equation the panel should not buckle at the design shear stress, provided that all three loads (N_{CXX} , N_{Cyy} , and N_{CXy}) are applied proportionally and simultaneously. This can also be stated as: N_{Cyy} and N_{CXy} are proportional to N_{CXX} . It is important to observe the dramatic positive effect of the normal tensile stresses on the shear buckling strength. A more accurate estimate may be obtained by performing finite element analysis. The results of the final design are summarized below. The margins are given on the design loads unless otherwise noted. The details of the calculations for the margins on the displacements and ply stresses are given in Reference 11.

- (1) Laminate configuration [±45/0/90/0]_{2S}
- (2) Margins of safety on displacement design requirements

D	isplacement	Margin
	(u/a) (v/b) ΔΘ	0.43 1.94 0.33

(3) Margins of safety on ply stress limits

Ply	Margins for stress						
	ወደነነ	σ <u>0</u> 22	0 212				
0 45 -45 90	2.77 0.79 4.43 6.00	0.61 [∞] a _{0.27} 0.12	1.30 				

aAt specified load; this margin is -0.38 at design load.

Note: $\sigma_{0,22}$ and $\sigma_{0,12}$ in the 45° ply as well as $\sigma_{0,12}$ in -45° ply are quite insignificant making the MOS very large [11].

(4) Margin of safety on shear buckling stress

Case	(stress i	n psi)	Margin for
σсхх	σсуу	σсху	o(cr)
0 40 000	0 20 000	20 000 20 000	-0.74 3.2

CANTILEVER BOX BEAMS SUBJECTED TO FREE-END LOADS

An important class of structural components that can readily be made using fiber composites are box beams. Box beams are generally used to span long distances and to resist combined loads. Box beams are the main structural components in aircraft wings. They are made using thin flat/curved laminates, are designed to resist the loads primarily through membrane action and are designed to have constant or tapered cross sections. In addition, the laminate thickness for the covers and sides can be different and varied along the span. In what follows, the step-by-step procedures that were described above for the preliminary design of composite panels subjected to combined loadings have been extended for the preliminary design of composite box beams.

These procedures include a collection of simple equations to expedite the various calculations performed during the preliminary design phase. They are demonstrated by applying them to a preliminary design of a tapered cantilever box beam. The box beam is subjected to combined loads at the free end. It is designed to meet strength, displacement, buckling, and frequency requirements. The various steps involved are described in detail with ample explanatory notes so that they can be used to aid in the preliminary design of built-up composite structural components in general.

Sample Design - Size Box Beam to Meet Specified Design Requirements

It is necessary to have as complete a definition of the specific design as is possible in order to initiate the preliminary design phase. For the illustrative example described herein, this definition consists of the following.

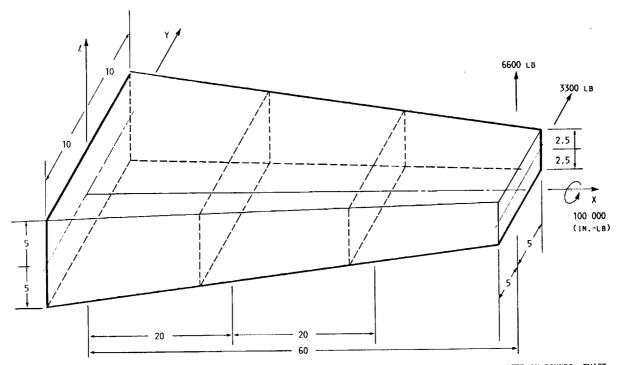


FIGURE 2. - COMPOSITE BOX BEAM GEOMETRY AND SPECIFIED LOADING CONDITIONS (ALL DIMENSIONS IN INCHES: LOADS IN POUNDS: TWIST MOMENT IN INCH-POUNDS).

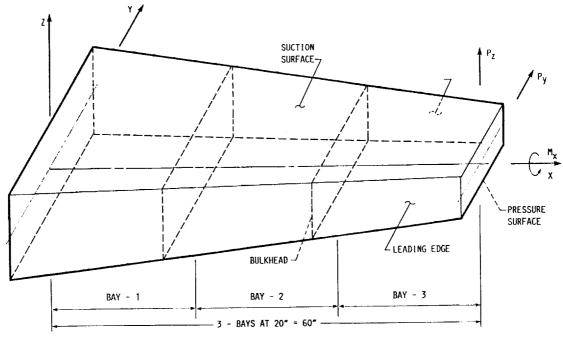


FIGURE 3. - COMPOSITE BOX BEAM SURFACE AND DESIGN LOAD NOMENCLATURE.

(1) Structural Component:

Cantilever, three-bay box beam (schematics Figs. 2 and 3).

(2) Specified Loads:

Free-end static loads (Fig. 2).

6600 lb vertical; 3300 lb lateral; 100 000 lb in twist moment.

(3) Displacement Limits:

Tip displacements less than 1.5-percent of length; angle of twist less than 1°.

(4) Frequencies:

Flap greater than 100 cycle/sec, edge greater than 150 cycle/sec; twist greater than 450 cycle/sec.

Local panel frequencies to be greater than box beam global frequencies.

(5) Safety Factor:

2.0 times specified load.

(6) Composite System:

Graphite fiber in epoxy matrix at 0.6 fiber volume ratio.

(7) Design Procedure/Requirements:

Box beam not to exceed displacement limits.

Laminates in various bays not to exceed ply fiber-controlled strengths at design loads or ply matrix controlled strengths at specified loads. Composite panels in each bay not to exceed combined stress buckling.

(8) General philosophy on preliminary design of composite box beams: Size covers for only the vertical load and add plies for the combined loads (lateral and twist moment).

Size side walls for only the lateral load and add plies for the combined loads (vertical and twist moment).

Once the design is defined to the extent just outlined, we are ready to design the composite laminates for the covers and the walls of the box beam by following the step-by-step design procedure.

Step 1: Identify Design Variables

Number of plies, ply orientation and stacking sequence for the composite covers and side walls for the three different bays.

Step 2: Establish Design Loads

Safety factor times specified loads (Fig. 1):

 $N_{CXX} = 2 \times \text{vertical load (6600 lb)} = 13 200 lb$

 $N_{CVV} = 2 \times lateral load (3300 lb) = 6600 lb$

 $N_{CXX} = 2 \times \text{twist moment (100 000 lb in.)} = 200 000 lb-in.$

Step 3:

Obtain composite material properties (ply and $\pm \theta$ angleply) for AS/E from Table I.

Step 4:

Select laminate configurations for box beam covers and side walls in each of the three bays. Calculate in-plane membrane loads at the bulkhead locations (Figs. 2 and 3): These loads are calculated by dividing the moment at that section by the respective depth and width. The details are described in Reference 12. Final design results are summarized in Table II for buckling stresses and in Table III for laminate stresses.

BOLTED JOINTS

Bolted joints are designed to resist certain select failure modes during the preliminary design phase. These select failure modes are those most commonly occurring in practical applications. They include: (1) local bearing, (2) net tension, (3) wedge-type splitting, (4) shear-out, and (5) tension with shear-out. These select failure modes and the approximate equations used to quantify them are summarized in Figure 4. A sample case for bearing failure is described below. Details for other failure modes and for multibolted joints as well as relevant references are described in Reference 13.

TABLE II. - BUCKLING STRESSES

Midbay		8	ay/span	station		
Panel C	1 (0-20)		2 (20	-40)	3 (40	-60)
b a x	Covers	Walls	Covers	Walls	Covers	Walls
Geometry, in. a b tc	20.0 18.4 .050		20.0 15.0 .050	20.0 7.5 .050	20.0 11.6 .050	
Stresses, psi top cover G _{CXX} G _{CXY}	–79 –6	200 700	1	180 460		260 480
Bottom cover · G _{CXX} G _{CXY}	79 : 13 :		76 18		59 1 27	
Side walls front G _{CXX} G _{CXZ}	39 3	600 200	36		1	600 740
back σ _{cxx} σ _{cxz}		600 200		080 320		620 140

TABLE III. - FINAL DESIGN STRESSES

Midbay Panel /tc			58	y/span	station		
у (1 (0-	-20)	2 (20)-40)	3 (40	-60)
x s d		Covers	Walls	Covers	Walis	Covers	Walls
Geometry, in.							
a b t _C		20 9.2 .3	20 4.5 .3	20 7.5 .3	20 3.8 .3	20 5.8 .3	20 2.9 .3
Stresses, psi Top cover							
	σ _{cxx} σ _{cxy}		-13200 -1167		-12697 -17433		9877 2913
Bottom cover	σ _{cxx} σ _{cxy}		13200 2217		12697 3067		9877 4567
Walls front	σ _{cxx} σ _{cxz}	·	6600 -200		6347 -938		4933 2274
back	σ_{cxx}		-5600 3133		-5347 1161		4933 5240
inner	σ _{cxx} σ _{cxz}		1457		1767	-	2189

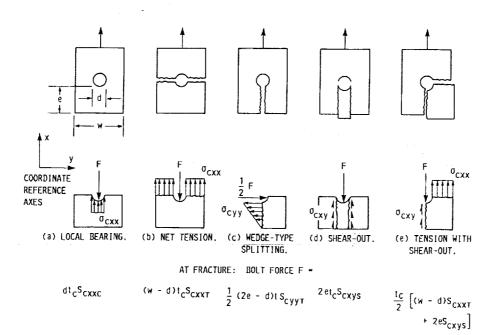


FIGURE 4. - COMPOSITE BOLTED JOINTS - FAILURE MODES AND RESPECTIVE EQUATIONS.

Sample Design - Size Joint for Local Bearing

Local bearing failure modes are characterized by a local laminate compressive failure caused by the bolt diameter which tends to crush the composite material. A schematic of these types of failure modes is shown in Figure 4. The schematic which is used to derive the equation and the respective equation are also shown in Figure 4. The requisite variables to design against this failure mode are: (1) bolt diameter d, (2) laminate thickness t_c , and (3) laminate compressive strength parallel to the bolt force S_{CXXC} . Use of the equation (Fig. 4(a)) is illustrated in the following example.

Example 1: Calculate the local average bearing stress (σ_{CXX}) in a $[0\pm45/0/90]_S$ graphite fiber/epoxy matrix at 0.6 FVR laminate induced by a 1/4-in. diameter titanium bolt with a 1000 lb load. These are referred to herein as the composite bolted joint specified conditions. To perform this calculation, we first solve the equation in Figure 4(a) for S_{CXXC} and replace S with σ

$$\sigma_{\text{cxx}} = \frac{F}{dt_{c}}$$

where F is 1000 lb, d is 1/4 in., and t_{C} is 0.05 in. (10 plies at 0.005 in./ply). Using these values in the equation we obtain

$$\sigma_{\text{CXX}} = \frac{1000 \text{ lb}}{(0.25 \times 0.05)} = 80 \text{ 000 psi}$$

The corresponding laminate compressive strength (S_{CXXC}) from Table IV is 79 700 psi. The margin of safety (MOS) against local bearing failure is

MOS =
$$\left(\frac{S_{CXXC}}{\sigma_{CXX}}\right) - 1 = \left(\frac{79\ 700\ psi}{80\ 000\ psi}\right) - 1 = -0.004$$

TABLE IV. - PREDICTED FRACTURE STRESSES FOR SELECT LAMINATESA [Graphite fiber/epoxy matrix at 0.6 FVR.]

Stress	Laminate/fracture stress, ksi						
type	[(0/+45/0/90)] _s	[(03/±80)] _S	[(0/+3-/0 ^s /-30/0)] _s				
ScxxT ScxxC ScyyT ScyyC ScxyS SczzS	79.2 79.7 49.8 51.5 38.7 21.8	94.8 99.1 61.0 67.8 13.1 21.8	129.3 70.5 6.3 14.7 20.1 21.8				

aPredicted using the ICAN computer code [5]. DOS denotes S-glass fiber epoxy matrix.

Notation:

Laminate strength Sc

x,y,z Direction (x,y - laminate p T,C,S Tension, compression, shear Direction (x,y - laminate plane; z - thickness

Therefore, this boited connection will barely fail in local bearing.

The results of all the failure modes with respective margins are summarized in Table V.

TABLE V. - COMPOSITE BOLTED JOINT SUMMARY

[Therefore, the joint, as designed, is acceptable. It will fail locally by local bearing which is the most desirable failure mode.]

Failure mode	Str	ess, ksi	MOS	Decision
	Actual	Allowable		
Local bearing Net tension Wedge type splitting Shear-out Tension with shear-out (load per bolt kips)	80.0 26.7 22.9 10.0	79.7 79.2 49.8 38.7	-0.004 1.97 1.18 2.87	Acceptable o.k.

ADHESIVE BONDED JOINT

The fundamentals and terminology associated with adhesive joints are depicted schematically in Figure 5. While only two different joints are shown in this figure, the notation and geometric dimensions are similar for all the different types of joints (Fig. 6) to be considered in this design procedure.

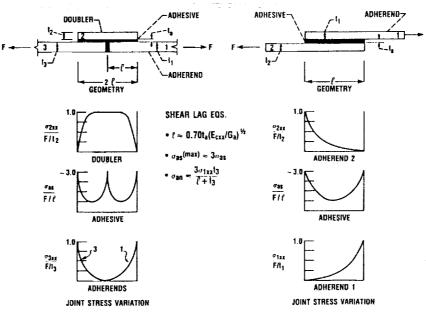


FIGURE 5. - ADHESIVE JOINT DEFINITIONS AND FUNDAMENTALS.

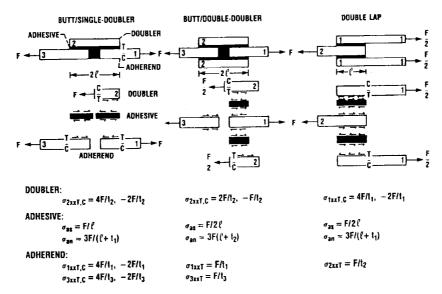


FIGURE 6. - SCHEMATICS OF COMMONLY USED ADHESIVE JOINTS (FREE BODY DIAGRAMS AND GOVERNING EQUATIONS).

The adherends and or doublers are identified by numerical subscripts while the adhesive is identified by the subscript a. All respective dimensions and stresses are identified by similar subscripts. The in-plane stress in the adherends is denoted by σ_{1XX} , for example, where xx refers to the x-axis which is taken along the length of the joint.

The points to note in Figure 5 are: (1) the stresses transfer from one adherend to adhesive and then to the other adherend, (2) these stresses increase very rapidly from the end and are highly nonlinear, (3) the estimates are obtained from simple shear-lag theory for minimum length ℓ^{min} , maximum shear stress in the adhesive ℓ^{max} , and maximum normal stress (peel-off stress) in the adhesive ℓ^{max} .

The general steps for designing adhesive joints are as follows:

(1) Establish joint design requirements: loads, laminates, adhesive, safety factors and other special considerations.

(2) Obtain laminate dimensions and properties for the adherends using composite mechanics. (Typical properties needed for this procedure are summarized in Tables IV and VI for three different laminates.)

(3) Obtain the properties of the adhesive. The adhesive will generally be the same as the matrix in the adherends. The specific properties needed are:

(a) shear strength, and (b) peel-off strength.

(4) Select design allowables. These are either set by the design criteria or are chosen as follows: (a) a load factor on the force F usually 1.5 or 2, or (b) a safety factor of one-half of the degraded adhesive strength S_a in step 4 above. The second alternative is preferable since the force F may already contain a load factor.

(5) Select the length & of the joint by using the following equation

$$Q = \frac{F}{S_{as}}$$

where F denotes the load (tensile/compressive/shear) in the adherends per unit width and S_{as} denotes the design allowable shear stress in the adhesive.

TABLE VI. - PREDICTED LAMINATE PROPERTIES^a [Graphite fiber/epoxy matrix at 0.6 FVR.]

Property type	(0/±45/0/90) _S	(03/±80)S	(0/+30/b0S/-30/0)S
E _{CXX} , mpsi	10.0	12.5	12.8
E _C yy, mpsi	6.5	8.3	1.7
E _{CZZ} , mpsi	1.4	1.4	1.5
G _{CXY} , mpsi	2.4	7.9	2.0
G _C yz, mpsi	.43	.43	.39
G _{CXZ} , mpsi	.48	.48	.59
vcxy	.31	.06	.91
vcyz	.32	.38	.36
vcxz	.26	.36	.0
α _{CXX} , μin./in./°F	.41	.53	53
α _C yy, μin./in./°F	1.5	1.3	10.1
α _{CZZ} , μin./in./°F	20.1	20.1	16.3

aICAN [5].

(6) Check the minimum length and the maximum shear and normal stresses in the adhesive (using the shear-lag theory equations, Fig. 5).

(7) Calculate the bending stresses in the doublers and adherends using

respective equations from Figure 6.

(8) Calculate the margin of safety (MOS) for all calculated stresses. This is usually done at each step where stresses are calculated and compared to allowables using the following equation:

$$MOS = \frac{Allowable stress}{Calculated stress} - 1$$

(9) Calculate the joint efficiency (J.E.) as follows:

J.E. =
$$\frac{\text{Joint force transferred (F)}}{\text{Adherend fracture load (S}_{\text{CXX}}t_1)} \times 100$$

(10) Summarize joint design.

Sample Design - Butt Joint With Single Doubler

As an example, the step-by-step procedure will be used to design a joint with single doubler and no environmental effects.

(1) Joint design requirements:

Loads specified 800 lb/in. static load room temperature dry

conditions

Laminate $[0/\pm 45/0/90]_S$ graphite fiber/epoxy matrix at 0.6 FVR, 0.05-in. thick

bos denotes S-glass fiber/epoxy matrix.

Adhesive

epoxy matrix same as in the laminate

Safety factors 1.0 on joint load; 0.5 on adhesive strengths

(2) Laminate properties: typical predicted properties for this laminate are listed in Tables IV and VI.

(3) Adhesive properties: typical properties for structural epoxies are: E = 0.5 mpsi; G = 0.18 mpsi; ν = 0.35; α = 30 ppm/°F; S_{an} = 15 ksi and S_{as} = 13 ksi.

(4) Environmental effects: none since the joint will be subjected to static

loads at room temperature dry conditions.

(5) Design allowables: (a) joint load: 1×800 lb/in. = 800 lb/in., (b) adhesive normal or peel-off strength: 0.5×15 ksi = 7.5 ksi, (c) adhesive shear strength: 0.5×13 ksi = 6.5 ksi.

(6) Joint length:

$$\ell = \frac{F}{S_{as}}$$

$$2 = \frac{800 \text{ lb/in.}}{6500 \text{ psi}} = 0.12 \text{ in.}$$

and the doubler length = 20 = 0.24 in.

(7) Check joint critical conditions (equations, Fig. 1) minimum length = 0.7 $t_a (E_{cxx}/G_a)^{1/2}$; (from Reference 4 assuming 0.99 load transfer efficiency) $t_a = 0.005$ in., $E_{cxx} = 10$ mpsi, $G_a = 0.18$ mpsi.

$$\varrho^{\min} = 0.7 \times 0.005 \text{ in.} \times \left(\frac{10 \text{ mpsi}}{0.18 \text{ mpsi}}\right)^{1/2}$$

$$Q^{min} = 0.026 \text{ in.} < 0.12 \text{ in.}$$

Therefore, the joint length is 0.12 in. and the doubler length is 0.24 in. Use 1.0 in. since 0.24 in. is impractical for handling maximum shear stress concentration.

$$\ell_{as}^{\text{max}} = 3 \times \ell_{as}$$

$$\sigma_{as}^{max} = \frac{3 \times 800 \text{ lb/in.}}{1 \text{ in.}} = 2400 \text{ psi}$$

2400 psi < 6500 psi o.k.

$$MOS = \frac{6500 \text{ psi}}{2400 \text{ psi}} - 1 = 1.71$$

Peel-off stress (equation, Fig. 5):

$$\sigma_{an} = \frac{3\sigma_{1xx}t_3}{\ell + t_3}$$

$$\sigma_{an} = \frac{3 \times 800 \text{ lb/in.}}{1.0 + 0.05 \text{ in.}} = 2286 \text{ psi}$$

2286 psi < 7500 psi o.k.

$$MOS = \frac{7500 \text{ psi}}{2286 \text{ psi}} - 1.0 = 2.28$$

Observations: (a) The joint length of 0.12 in. to meet design requirements was too small to be practical and was increased arbitrarily to 1 in. which is a more practical dimension. The other critical conditions are satisfied with substantial margins indicating that single doubler butt joints are not generally efficient joints; (b) the joint length as calculated by the load transfer would be relatively small; and (c) the joint length predicted by using shear lag is practically negligible indicating that the load transfer occurs in a very short distance. The bending stress for this joint are described in Reference 4. A summary of the joint design is given below.

Joint Design Summary

Doubler Laminate: $[0/\pm 45/90]_S$ (same as adherends)

Composite:

graphic fiber/epoxy matrix at 0.6 FVR (same as adherends)

Adhesive:

structural epoxy (same as epoxy in adherends)

Length:

Q = 1 in. adjusted for fabrication handling

Stresses:

	Calculated, o, ksi	Allowable, S, ksi	Margin of safety
Adhesive			
Shear average	0.8	6.5	7.12
Shear maximum	2.4	6.5	1.71
Peel-off	2.3	7.5	2.28
Doubler/adherend			•
Combined-tension	64	79.2	0.24
Combined-compression	32	79.7	1.49
Joint efficiency, 20 percent			

Comment: A joint without bending should be considered if the dimension and other design requirements permit it.

Sample cases for other typical joints, hygrothermal effects and relevant references are described in Reference 14.

HYGROTHERMAL EFFECTS, CYCLIC LOADS, AND LAMINATION RESIDUAL STRESSES - BRIEF OUTLINE

The sample designs described were mostly for combined static loads. However, the procedure and the governing equations used are valid when one has to take into account for hygrothermal effects, cyclic loads, and lamination residual stresses. This is accomplished by appropriately degrading the strength

allowables used in the design. These degraded/updated strengths are used to check ply stress limits when designing the structural component/joints including hygrothermal effects, cyclic loads, and lamination residual stresses. Some general guidelines are briefly described below.

Hygrothermal Effects

Hygrothermal (hot-wet) environment usually affect the matrix-controlled properties. The degraded property of the matrix due to hygrothermal affects can be estimated using the following equation [15,16] when the use temperature (T) and moisture pickup (M) are known:

$$\frac{P_{QHT}}{P_{QO}} = \left(\frac{T_{GW} - T}{T_{GD} - T_{O}}\right)^{1/2} \tag{1}$$

$$T_{GW} \approx (0.005M_{Q} - 0.1M_{Q} + 1.0)T_{GD}$$
 (2)

where P_{QHT} is the degraded property, T_{GW} is the glass transition temperature of the wet unidirectional composite, T_{GD} is the glass transition temperature of the dry unidirectional composite, T is the use temperature at which P_{QHT} is required, T_{O} is the reference temperature at which P_{QO} was determined and M_{O} is the moisture in the ply in percent weight.

Cyclic Loads

Cyclic loads fatigue the laminate and, therefore, the ply stress limit needs to be checked against the fatigue strength of the ply. The fatigue strength of the ply can be estimated using the following equations [17,18]

$$\frac{S_{QN}}{S_{QO}} = 1.0 - B \log N \tag{3}$$

where S_{QN} is the fatigue strength for the specified N cycles; S_{QO} is the reference static strength; B is a constant depending on the composite system (0.1 is a reasonable value, [10]); and N is the number of cycles. Usually a safety factor (ranging from 2 to 4) is applied to S_{QN} to obtain S_{QNA} the strength allowable to be used in the design. This is used as the ply strength to check for the ply stress limits and to determine the margins of safety. In the presence of combined static and cyclic loads, the ply stress limit is estimated from the following equation [18]

$$\frac{\sigma_{\text{QST}}}{S_0} + \frac{\sigma_{\text{Qcyc}}}{S_{0NA}} \le 1.0 \tag{4}$$

where σ_{QST} is the ply stress (σ_{Q11} , σ_{Q22} , and σ_{Q12}) due to design static load; σ_{Qcyc} is the corresponding ply stress due to cyclic load; S_Q is the ply static strength; and S_{QNA} is determined from Equation (3) with an appropriate safety factor.

Displacement and buckling stress limits are checked at maximum design load (static plus cyclic) magnitude [18]. For these calculations damping and inertial effects are usually neglected.

Lamination Residual Stresses

The lamination residual stresses generally increase the transverse ply stresses. Consideration of these stresses results in thicker laminates in order to meet ply stress design requirements at combined loads. Lamination residual stresses can be determined following the procedures described in Reference 19. The lamination ply residual stresses need to be superimposed on the other ply stresses prior to checking for ply limit stresses and margins of safety.

SUMMARY

Summaries of step-by-step sample design procedures are provided for select fiber composite structures/joints including typical design results. The structures are panels subjected to combined in-plane loads and cantilever tapered box beam. The joints included are bolted and adhesively bonded types. Procedures are outlined that can be used to design for hygrothermal effects, cyclic loads and lamination residual stresses.

REFERENCES

- 1. B.D. Agarwal and L.J. Broutman, <u>Analysis and Performance of Fiber Composites</u>, John Wiley and Sons, New York, 1980.
- 2. B.S. Benjamin, <u>Structural Design With Plastics</u>, 2nd edn., Van Nostrand Reinhold Co., New York, 1982.
- 3. J. Delmonte, <u>Technology of Carbon and Graphite Fiber Composites</u>, Van Nostrand Reinhold Co., New York, 1981.
- 4. R.W. Hertzberg and J.A. Manson, <u>Fatigue of Engineering Plastics</u>, Academic Press, New York, 1980.
- 5. D. Hull, <u>An Introduction to Composite Materials</u>, Cambridge University Press, Cambridge, New York, 1981.
- 6. S.W. Tsai and H.T. Hahn, <u>Introduction to Composite Materials</u>, Technomic Publishing Co., Westport, Connecticut, 1980.
- 7. K.T. Kedward, Ed., <u>Joining of Composite Materials: A Symposium</u>, ASTM, Philadelphia, Pennsylvania, 1981.
- 8. <u>Jointing in Fiber Reinforced Plastics</u>, IPC Science and Technology Press, Guildford, England, 1978.
- S. Dastin, 'Joining and machining techniques', in <u>Handbook of Fiberglass</u> and <u>Advanced Plastics Composites</u> (G. Lubin, Ed.), Von Nostrand, New York, 1969, pp. 552-591.

- 10. M.W. Hyer and E.C. Klang, 'Contact stresses in pin-loaded orthotropic plates', in Int. J. Solids Struct. 21(9), 957-975 (1985).
- 11. C.C. Chamis, 'Design procedures for fiber composite structural components: panels subjected to combined in-plane loads', NASA TM 36909 (1985).
- 12. C.C. Chamis and P.L.N. Murthy, 'Design procedures for fiber composite box beams', J. Reinf. Plast. Comp. 8, 370-397 (1989).
- 13. C.C. Chamis, 'Simplified procedures for designing composite bolted joints', NASA TM 100281 (Feb. 1989).
- 14. C.C. Chamis and P.L.N. Murthy, 'Simplified procedures for designing adhesively bonded composite joints', NASA TM 102120 (Feb. 1989).
- 15. C.C. Chamis, R.F. Lark, and J.H. Sinclair, 'An integrated theory for predicting the hydrothermalmechanical response of advanced composite structural components', in <u>Advanced Composite Materials</u>: <u>Environmental Effects</u> (J.R. Vinson, Ed.), ASTM, Philadelphia, Pennsylvania, 1978, pp. 160-192.
- 16. C.C. Chamis and J.H. Sinclair, 'Prediction of composite hygral behavior made simple', <u>SAMPE Quart.</u> 14, 30-39 (1982).
- 17. C.C. Chamis and J.H. Sinclair, 'Durability/life of fiber composites in hygrothermomechanical environment', in <u>Composite Materials: Testing and Design</u> (I.M. Daniel, Ed.), ASTM, Philadelphia, Pennsylvania, 1982, pp. 498-512.
- 18. C.C. Chamis, 'Design procedures for fiber composite structural components: rods, columns, and beam columns', <u>Modern Plas.</u> 60(9), 106, 108, 111 (1983); 60(10), 88, 90 (1983); 60(11), 78, 80 (1983).
- 19. C.C. Chamis, 'Prediction of composite thermal behavior made simple', in Reinforced Plastics/Composites Institute, 36th Annual Conference Preprints, Society of the Plastics Industry, Inc., New York, 1981, pp. 1-11.

National Aeronautics and	Report Docum	entation Pag	je	
Space Administration 1. Report No. NASA TM-103113	2. Government Acce	ssion No.	3. Recipient's Catal	og No.
. Title and Subtitle			5. Report Date	
Simplified Design Procedures for	·			
Joints	•	•	6. Performing Organ	nization Code
'. Author(s)			8. Performing Organ	nization Report No.
P.L.N. Murthy and C.C. Chamis	S		E-5392	
			10. Work Unit No.	
	<u> </u>		505-63-1B	
. Performing Organization Name and Add			11. Contract or Grant	No.
National Aeronautics and Space A Lewis Research Center	Administration			
Cleveland, Ohio 44135-3191			13. Type of Report ar	nd Period Covered
2. Sponsoring Agency Name and Address			Technical Men	norandum
National Aeronautics and Space A Washington, D.C. 20546-0001	Administration		14. Sponsoring Agend	y Code
Prepared for the Indo-U.S. Work Indian Institute of Science, Banga	ocedures are summarized such as panels (laminates narized for the preliminar in terms of sample design the design selection presented in the design selection presented in the selectio	which are suitable) and composite by design of composite composite composite composite occases of composite	e for the preliminary uilt-up structures (bo osite bolted and adhe nted with typical res structural componer	design of x beams). sively bonded ults. Guidelines
Stresses; Displacements; Frequence Moisture; Temperature; Cyclic lo Bolted joints; Adhesive joints; Sa	ads; Combined loads;	18. Distribution State Unclassified Subject Cate	l – Unlimited	
Security Classif. (of this report)	20. Security Classif. (d	I f this page)	21. No. of pages	22. Price*
Unclassified		assified	23	A03