NO RTL YET? NO PROBLEM: UVM TESTING AN SV FABRIC MODEL

RICH EDELMAN — MENTOR GRAPHICS

Mentor®
A Siemens Business

F U N C T I O N A L V E R I F I C A T I O N

 α

9

 \triangleleft

0

 \equiv

 \geq

I. INTRODUCTION

Building a UVM [2] testbench is a hard job, made harder when operational RTL is not yet available to test. SystemVerilog [1] is a powerful modeling language that can be used to build a high level model of hardware before RTL is available. The RTL model is fast to write, and can be as functionally complete as needed. The early RTL model uses higher level abstractions like SystemVerilog threads, queues, dynamic arrays and associative arrays. Using high level abstractions allows a functional model to be created with little effort. A simple fabric model is created implementing AXI-like READY/VALID channels.

This paper describes the creation and use of a fabric model to build and bring up a testbench. When the RTL is available it can be plugged into the testbench model with little change required.

The main contributions of this paper are: showing a fully functional model of a medium complexity communication fabric; writing the model using SystemVerilog; and building a reusable testbench that can support block testing as well as support system level tests. The testbench implementation is not discussed in this paper.

The Fabric

The fabric is a simple two port switch with buffering. Each communication pathway contains 5 channels. Each channel is a Ready/Valid channel with similarities to an AMBA® AXITM [4] channel. The fabric supports multiple outstanding transactions, pipelining and large burst data transfers. It also supports traffic priority (quality of service). This is the model. It is written using SystemVerilog. Associative arrays are used to manage out-of-order transactions. Queues and dynamic arrays are used for managing lists. Classes are used to hold the transferred information - a class each for RA (Read Address), WA (Write Address), RD (Read Data), WD (Write Data) and B (Write Response), respectively. Packed structs are used for managing the tag bit fields.

The Testbench

The testbench is built to test the features supported by the fabric. It is a basic block testbench, testing transfer, buffering limits and other edge conditions in the RTL. This testbench will also be reusable to the system tests. The testbench is a basic UVM testbench with transfer sequences and background traffic sequences available.

The DUT

The actual device under test will be two fabrics connected together, as in Figure 2.

II. BACKGROUND

The RTL implements an AXI-like fabric. It is a simple fabric (simpler than AMBA AXI), but has support for quality of service, out-of-order completion, and other high end features. The verification team wishes to get an early start on verification of this fabric. But early, functional RTL is not available.

In order for the verification team to get an early start on the verification environment, having an early model of the DUT is desirable.

In this paper, a theoretical verification team has built a UVM testbench, and needs to make sure that the testbench can check and verify the hardware. The tests are quite simple – generating streams of READs and WRITEs. This theoretical verification team is testing a simple AXI-like fabric. (It is not an AXI system). The fabric is a simple two port switch as seen in Figure 1. The system under test connects two of these fabrics.

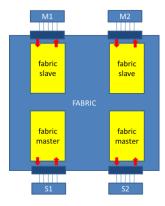


Figure 1 - Simple two port switch

The DUT and fabric models will be used instead of the real RTL and have enough functionality to provide a useful test environment for early testbench bring up. The model is not a completely functioning version of the RTL. Modeling the complete functionality for the RTL would be too large a task for early verification, and offer limited extra verification points.

The fabric has two ports on top and two ports on the bottom. The top ports can be routed to either bottom port. The DUT is a combination of two of these fabrics, as in Figure 2. A request is issued at either Master 1 (M1) or Master 2 (M2). It flows out to either Slave 1 (S1) or Slave 2 (S2) depending on many factors including QOS and Address Maps ranges defined.

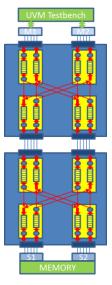


Figure 2 - DUT, Slave Memory and Testbench

A connection is virtual – the data transfer occurs in hops from master to slave. Additionally, the connections are managed as independent channels. The channels are WRITE ADDRESS (WA), WRITE DATA (WD), WRITE RESPONSE (B), READ ADDRESS (RA) and READ DATA (RD). Each channel operates independently, with a few basic rules. For example, WRITE DATA must start after the corresponding WRITE ADDRESS. READ DATA must start after the corresponding READ ADDRESS. Data transfers from different transactions can be interleaved. A QUALITY OF SERVICE (qos) property exists for each transfer that can be used to prioritize traffic. There are many other features of the fabric, but these basic features are sufficient for the testbench to be built and rudimentary testing to begin.

III. THE CHANNEL

The channel is the most basic bus. It is a collection of signals, organized as the RA, RD, WA, WD and B subchannels. It is implemented as a SystemVerilog interface.

The Bus Pins

```
interface channel(input wire clk);
  // Read Address
 logic RA ready;
 logic RA_valid;
 tag_t RA_tag;
 addr t RA addr;
 int
        RA beat count;
        RA qos;
 int
  // Read Data
 logic RD ready;
 logic RD valid;
 tag_t RD_tag;
 int
        RD_beat_count;
 data_t RD_data;
 int
        RD qos;
  // Write Address
 logic WA ready;
 logic WA valid;
 tag t WA tag;
 addr t WA addr;
 int
        WA qos;
  // Write Data
 logic WD ready;
 logic WD_valid;
  tag_t WD_tag;
        WD beat_count;
 int
 data t WD data;
         WD qos;
 int
  // Write Response
 logic B ready;
 logic B_valid;
 tag_t B_tag;
 int
        B qos;
endinterface
```

Figure 3 - The Channel (The Bus)

The channel represents the pins of the bus.

The Fabric "Payload"

In addition to the pins, each transfer in the fabric is represented by a simple class, each containing the same transfer information as might appear on the bus. Using these classes to represent the transfers on the fabric makes the fabric quite simple, and powerful. (See Appendix XVI for the definition of the types).

```
class read address c;
 tag t RA tag;
 addr_t RA_addr;
 int
      RA_beat_count;
 int
        RA qos;
endclass
class read_data_c;
 tag_t RD_tag;
 int     RD beat count;
 data_t RD data;
 int RD qos;
endclass
class write_address_c;
 tag_t WA_tag;
 addr_t WA_addr;
 endclass
class write data c;
 tag_t WD_tag;
 int WD beat count;
 data_t WD_data;
 endclass
class write response c;
 tag t B tag;
 int
       B_qos;
endclass
```

Figure 4 - The Fabric Communication Packets

IV. THE TESTBENCH

The testbench is a "regular" UVM testbench, with an environment, test, agent, driver, sequencers, sequences and transactions (sequence items). The basic sequence issues a write of semi-random data to an address, then issues a read of the same address, and compares the data read with the data written. In this way, it is self-checking. Other sequences, corresponding to traffic types (such as video streaming, audio streaming or push notifications) are beyond the scope of this paper, but quite easy to create as a collection of memory accesses with the characteristic bandwidth, latency and length.

The sequence

The sequences issue reads and writes. The built-in sequence issues a write then a read from the same address. It then compares the read and written data. Each sequence is assigned a memory range in which it reads and writes.

The transaction

The transaction is either a READ or a WRITE. It has an address and a data payload. Additionally, there is a Quality of Service request field (qos). The tag field is not used by the testbench, but is set by the synthetic fabric we are building.

```
class transaction extends uvm_sequence_item;
...
tag_t tag; // Set in the initiator (master_if.sv)
```

Figure 5 - transaction.svh

The Test

The test is a simple test, but is flexible to provide many parallel threads. It uses two arrays to hold the interesting interfaces – the master (initiators) and the monitor interface. These are set from above using the uvm_config_db mechanism.

The test has two associative arrays that hold the agent and sequence handles. The number of these created is controlled by the command line option +threads=N. The number of agents is the number of threads. The number of sequences is four times the number of agents. During the run_phase, the number of transactions that each sequence should create is set from the command line using the +transactions=M option. Each of the created sequences is started, and simulation ends when each sequence has completed.

```
class test1 extends uvm test;
  `uvm component utils(test1)
 virtual master interface
                                    vif [1:2];
 virtual monitor interface monitor vif [1:2];
 agent
           agent h [int];
            seq h [int];
 sequenceA
 // The controls.
 int parallel threads = 16;
 int number of transactions = 100;
   master count = 0;
    for (int i = 0; i < parallel threads; i++) begin</pre>
      for (int j = 1; j <= 2; j++) begin</pre>
        agent h[master count] = agent::type_id::create(
          $sformatf("agent-%0d-%0d", j, master_count), this);
        agent h[master count].vif = vif[j];
        master_count++;
      end
    end
 endfunction
`define N 4
  task run phase(uvm phase phase);
   int sequence count;
   phase.raise objection(this);
    sequence count = 0;
    foreach (agent h[i]) begin
      for (int j = 0; j < N; j++) begin
        // N sequences on each sequencer
        seq h[sequence count] = sequenceA::type id::create($sformatf("seq%0d",
          sequence count));
        seq_h[sequence_count].sequence_id = sequence_count;
        seq_h[sequence_count].base_address = (sequence_count+1) * 2048;
        seq h[sequence count].number of transactions = number of transactions;
        sequence count++;
```

```
end
end

foreach (seq_h[i])
  fork
    automatic int j = i;
    #(j*1000) seq_h[j].start(agent_h[j/`N].sqr);
    join_none
  wait fork;

phase.drop_objection(this);
endtask
...
endclass
```

Figure 6 - test.svh

V. THE FABRIC BASICS

The fabric connects to the pins of the AXI-like interfaces, but instead of pins, the DUT will use SystemVerilog interfaces. Those interfaces were defined above as 'interface channel' buses.

There are two input channels, i0 and i1, and two output channels, o0 and o1. There are 4 instances to manage the interfaces and queues, two each of slaves and masters (fabric_slave1, fabric_slave2, fabric_master1 and fabric_master2).

```
import uvm_pkg::*;
import types_pkg::*;

module fabric #(parameter type FABRIC_TAG_T) (input wire clk,
    channel i0, channel i1,
    channel o0, channel o1);

fabric_slave_interface fabric_slave1(i0);
    fabric_slave_interface fabric_slave2(i1);

fabric_master_interface fabric_master1(o0);
    fabric_master_interface fabric_master2(o1);
```

Figure 7 - fabric.sv

When the fabric is instantiated, it is parameterized with a type (FABRIC_TAG_T); the type of the tag which is appropriate for this instance. For example, in the DUT there are two fabrics instantiated, one with 'fabric_tag_t' and one with 'fabric2 tag t' as in Figure 8

```
fabric #(fabric_tag_t) fA(clk, i0, i1, m0, m1);
fabric #(fabric2_tag_t) fB(clk, m0, m1, o0, o1);
```

Figure 8 - Using FABRIC_TAG_T to parameterize the fabric

The fabric contains queues and arrays to manage the transfers. It also has one big job, deciding which transfer goes out which output port (The big blue oval below). The various algorithms for quality of service and priority are beyond the scope of this paper, but would be quite easy to explore using this framework.

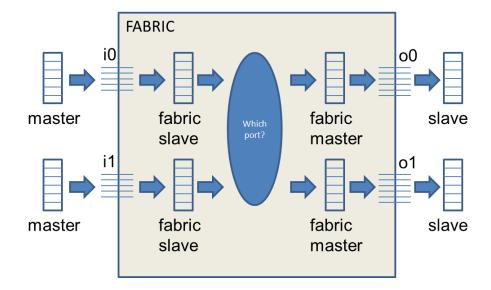


Figure 9 – Request flow: queue to bus to queue to pueue to bus to queue

Figure 9 is a block diagram of the major structures in the fabric. The left-side connections are i0 and i1. The right-side connections are o0 and o1. Inside each fabric, at the inputs and outputs are two slaves and two masters respectively. For example the fabric i0 port is connected outside to a master interface. On the inside, fabric i0 port is connected to a fabric slave.

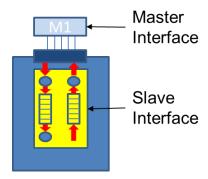


Figure 10 - Master and Slave

Tracing the Read Address (RA) and Read Data (RD) channels can help explain the connectivity. (See Figure 1 and Figure 9). The master issues a Read Address (RA). That RA is sent across the i0 channel by wiggling the pins on the i0 channel. The fabric slave connected to i0 recognizes the RA and creates a read_address_c packet. That read_address_c packet contains all the information from the RA transfer. It is placed into a "work queue" for one of the fabric masters. A thread in the fabric master detects that something has arrived in its work queue, and processes it. The read_address_c packet from the work queue is turned into pin wiggles and sent out the connected interface (either o0 or o1). Outside of the fabric another slave will receive this transfer.

In Figure 11, a Read Address (RA) request on the top of the diagram (light blue arrows) traverses across the structures of the fabric, resulting in a Read Address (RA) request executing on the slave memory. The Read Data (RD) response (deep green arrows) traverses the reverse path from the slave memory back to the originating master requester.

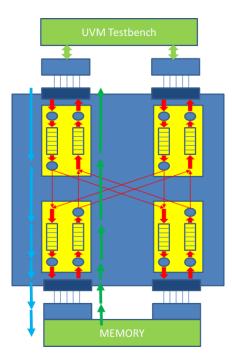


Figure 11 - Tracing RA request and RD response

VI. FABRIC SLAVE

The fabric slave implementation is quite simple. The slave waits for VALID and READY to both be high on a positive clock edge. When his happens, a transfer occurs. The transfer in this case copies the bus values into a class container that represents the transfer (i.e. read_address_c). The read_address_c packet is pushed into the ra_q that is managed in the slave. Some other thread will decide what to do with the new member of the queue.

```
import types pkg::*;
import delay pkg::*;
interface fabric slave interface(channel bus);
  read address c ra q[$];
  read_data_c
                 rd_q[$];
 write_address_c wa_q[$];
write_data_c wd_q[$];
  write_response_c b_q[$];
  always @ (posedge bus.clk) begin: RA Channel
    if ((bus.RA ready == 1) && (bus.RA valid == 1)) begin
      read address c ra;
      ra = new();
      ra.RA tag = bus.RA tag;
      ra.RA qos = bus.RA qos;
      ra.RA addr = bus.RA addr;;
      ra.RA beat count = bus.RA beat count;
      ra q.push_front(ra);
      @(negedge bus.clk);
      bus.RA ready = 0;
    end
  end
```

Figure 12 - Fabric Slave Interface

VII. FABRIC RA SLAVE SERVICE

In the fabric, a thread (the RA_Channel1 thread) is waiting for something in the ra_q from the fabric_slave1. When something arrives, it is removed from the queue and a new tag is created. This new tag is the key to tracing the return values.

```
always begin: RA_Channel1
    wait (fabric_slavel.ra_q.size() != 0);
...
    while (fabric_slavel.ra_q.size() > 0) begin
        read_address_c ra;
        ra = fabric_slavel.ra_q.pop_back();

        setup_fabric_tag_R(0, ra, ra.RA_tag, fabric_tag);

        if ( fabric_tag.slave_o_port == 0 )
            fabric_masterl.ra_q.push_front(ra);
        else
            fabric_master2.ra_q.push_front(ra);
        end
        end
end
```

Figure 13 - Fabric Slave - RA Channel

setup_fabric_tag_R - The new tag.

The original transfer contained a 'tag' or 'id'. That tag was created by the master interface, and is a simple counter to be able to match up and organize parallel transfers. Without the tag, the master would not know which outstanding READ address went with which READ data. This function will determine which output slave port the RA request goes to.

The tag_matcher_R associative array is used to keep track of in-flight transfers and to do error checking.

```
function automatic void setup_fabric_tag_R(input master port,
                     read address c ra,
                     ref tag t
                                              tag.
                     ref FABRIC_TAG T fabric tag);
  fabric tag.tag = tag;
  fabric tag.master i port = master port;
  fabric_tag.slave_o_port = fabric_tag.tag & 1'b1;
  tag = fabric_tag;
  if (tag matcher R.exists(tag)) begin
    $display("tag matcher R already has tag=%p", tag);
    $finish(2);
  end
  tag_matcher_R[tag] = ra;
  if (verbose fabric)
    $display("FABRIC %t POP/PUSH %m RA tag=%0d %p", $time, tag, ra);
endfunction
```

Figure 14 - Managing fabric tags

VIII. FABRIC TAGS

Tags are used within this AXI-like system to connect parallel requests to each other. Tags serve as ids for transactions. As a transaction crosses this fabric, it chooses a path to take. We must ensure that the response ends up back in the right place, so the tag is used to keep track of where the transaction has been, and where it is going. In the fabric, the master could either be 0 or 1, and the slave can be 0 or 1. Two bits each are reserved in the fabric tag.

The fabric tag consists of the original tag along with the slave and master information. As the transaction traverses the second fabric (this is a two fabric DUT), the tag is extended again, this time the tag is 16 bits – the previous "extended tag" simply looks like a "regular tag" to the second fabric.

```
typedef struct packed {
   bit [ 1:0] slave_o_port;
   bit [ 1:0] master_i_port;
   bit [11:0] tag;
} fabric_tag_t;

typedef struct packed {
   bit [ 1:0] slave_o_port;
   bit [ 1:0] master_i_port;
   bit [15:0] tag;
} fabric2_tag_t;
```

Figure 15 - Fabric Tag Definition

In the first level fabric, the slave and master occupy two bits. The tag is 12 bits long, for a total fabric tag length of 16 bits. In the second level fabric, the slave and master occupy two bits, but this time the tag is 16 bits. The tag in the second level fabric is the first level fabric tag. (All 16 bits).

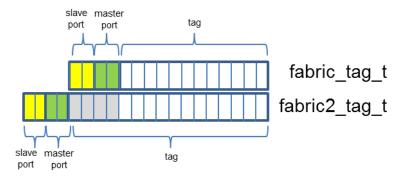


Figure 16 - Fabric Tag Bit Vector

For example, when a tag is traversing from the first level fabric to the second level, the fabric level 2 tag is assigned as:

```
fabric2_tag_t fabric2_tag;
fabric_tag_t fabric_tag;

fabric2_tag.tag = fabric_tag;
```

IX. FABRIC MASTER INTERFACE

The fabric master RA_Channel thread wakes up when it finds something in the ra_q queue. That new arrival is popped off the queue, and turned into a pin wiggle.

```
import types_pkg::*;
import delay_pkg::*;
import tb_pkg::*;
import util_pkg::*;
interface fabric_master_interface(channel bus);

read_address_c ra_q[$];
```

```
read_data_c
                rd_q[$];
write address c wa q[$];
write data c  wd q[$];
write response c b q[$];
always begin: RA Channel
  wait (ra q.size() != 0);
  while (ra_q.size() > 0) begin
    read address c ra;
    ra = ra q.pop_back();
    bus.RA tag = ra.RA tag;
    bus.RA_qos = ra.RA_qos;
    bus.RA addr = ra.RA_addr;
    bus.RA beat count = ra.RA beat count;
    bus.RA valid = 1;
    while (\overline{1}) begin
      @(posedge bus.clk);
      if ((bus.RA ready == 1) && (bus.RA valid == 1))
    end
    @(negedge bus.clk);
    bus.RA valid = 0;
end
```

Figure 17 - Fabric Master - RA Channel Thread

X. THE SLAVE

The slave is quite simple, sharing a memory handle with the other slave. There is one physical memory (mem_interface), but two slave interfaces using it. The RA Channel recognizes a read request and pushes the tag onto the rd_work queue. The rd_work_queue is serviced by the RD_Channel thread. The RD_Channel thread wakes up and performs the requested number of reads, creating a RD response for each one.

```
import types_pkg::*;
import delay_pkg::*;
interface slave interface(channel bus);
  virtual mem_interface mem;
  addr_t ra[tag_t];
  int
         ra beat count[tag t];
  beats t rd[tag t];
  addr t wa[tag t];
  beats_t wd[tag_t];
         wd complete[tag t];
  tag t
         b[tag t];
  tag t rd work queue[$];
  always @(posedge bus.clk) begin: RA Channel
    if ((bus.RA ready == 1) && (bus.RA valid == 1)) begin
      ra[bus.RA_tag] = bus.RA addr;
```

```
ra_beat_count[bus.RA_tag] = bus.RA_beat_count;
    rd_work_queue.push_front(bus.RA_tag);
    @(negedge bus.clk);
    bus.RA ready = 0;
  end
end
always begin: RD Channel
  int unsigned addr;
 beats t beats;
  tag_t tag;
  wait (rd work queue.size() != 0);
  while (rd_work_queue.size() > 0) begin
    tag = rd_work_queue.pop_back();
    for (int i = 0; i < ra beat count[tag]; i++) begin</pre>
      addr = (i + ra[tag]) & 24'hffffff;
      beats[i] = mem.read(addr);
    end
    rd[tag] = beats;
    beats.delete();
    RD internal(tag);
end
```

Figure 18 - Slave Interface - RA Channel and RD Channel

XI. THE TEST TOP

The test top instantiates 6 channels. Two channels for the input and two channels for the output and two channels for the intermediate connections between the fabrics. (See Figure 2). It instantiates two master interfaces, each connected to the input channels. It instantiates the two fabrics, each connected to the proper channels. Finally, it instantiates the two slaves and the two monitors and the actual memory.

```
module top;
  channel i0(clk);
  channel i1(clk);
  channel m0(clk);
 channel m1(clk);
 channel o0(clk);
  channel o1(clk);
 master interface initiator0(i0);
 master interface initiator1(i1);
  fabric #(fabric_tag_t) fA(clk, i0, i1, m0, m1);
  fabric #(fabric2 tag t) fB(clk, m0, m1, o0, o1);
  slave interface target0(00);
  slave_interface target1(o1);
  monitor interface moni0(i0);
  monitor interface monil(i1);
 mem interface mem();
  initial begin
    uvm_config_db#(virtual master_interface )::set( null, "", "m0",
                                                                           initiator0);
    uvm_config_db#(virtual master_interface )::set( null, "", "m1",
                                                                           initiator1);
    uvm_config_db#(virtual monitor_interface)::set( null, "", "monitor0", moni0
                                                                                     );
    uvm_config_db#(virtual monitor_interface)::set( null, "", "monitor1", moni1
                                                                                     );
```

```
target0.mem = mem; // Each target gets a handle to the memory
target1.mem = mem;

run_test("test1");
end
endmodule
```

Figure 19 - t.sv - The Top

XII. THE SIMPLE MEMORY

The simple memory (mem_interface) has two functions: read and write. They provide an easy way to encapsulate the memory access. Each read and write is echoed to standard out, and if a location is read which has never been written, an error is generated and simulation stops immediately. The memory uses an associative array – it is a sparse array implementation.

```
import types pkg::*;
interface mem interface();
  data t mem[bit[31:0]]; // Associative Array
  function data_t read(int unsigned addr);
    data t beat;
    if (!mem.exists(addr)) begin
      $display("@%t: %m READ mem[%d] NON-EXISTENT Address", $time, addr);
      $finish(2);
    end
    beat = mem[addr];
    $display("@%t: %m READ mem[%d] => %x", $time, addr, beat);
    return beat;
  endfunction
  function void write(int unsigned addr, data_t beat);
    $display("@%t: %m WRITE mem[%d] <= %x", $\overline{\text{time}}, addr, beat);
    mem[addr] = beat;
  endfunction
endinterface
```

Figure 20 - mem_if.sv

XIII. CONCLUSION

This paper has described the implementation of a simple AXI-like skeleton fabric that was used to test the early development of a UVM testbench. It used high level SystemVerilog features such as threads, dynamic arrays, associative arrays, queues and simple classes to manage the complexity of implementing a real fabric.

The current system is flexible and could be used as a test vehicle for new quality of service algorithms, or other address map schemes to control transfer flow. The code implementing the fabric is less than 1000 lines of code, and was written during a 5 day period, with another 5 days to debug by one person, as a part-time exercise. The model is easy to read and easy to extend with new functionality or capabilities. It is not a model that is suited for current synthesis tools, but rather is a model used to get complex functionality implemented early in the design phase; enabling early testing and verification.

In this example, the DUT modeled was a fabric, but the power of SystemVerilog would allow any model to be written. SystemVerilog is a powerful, general purpose programming language.

XIV. REFERENCES

[1] SystemVerlog LRM, http://standards.ieee.org/getieee/1800/download/1800-2012.pdf

- [2] SystemVerilog UVM 1.1d, http://accellera.org/images/downloads/standards/uvm/uvm-1.1d.tar.gz
- [3] Sparse Arrays, https://en.wikipedia.org/wiki/Sparse_array
- 4] ARM AMBA AXI, "AMBA AXI and ACE Protocol Specification AXI3, AXI4, and AXI4-Lite ACE and ACE-Lite", https://silver.arm.com/download/ARM_and_AMBA_Architecture/AR500-DA-10008-r2p1-00rel0/AR500-DA-10008-R200-DA-10008-R

XV. APPENDIX: TRANSFERS ON THE TWO INITIATORS

This screenshot is of the two masters (initiators). There are four streams shown. Each stream represents an independent communication channel. For example the first stream is the initiator 1 write channel. Then the initiator 1 read channel, initiator 2 write channel and initiator 2 read channel. Even with this limited set of channels and a limited simulation run time, it is easy to see that there are large quantities of data to check and analyze, even for this simple circuit.

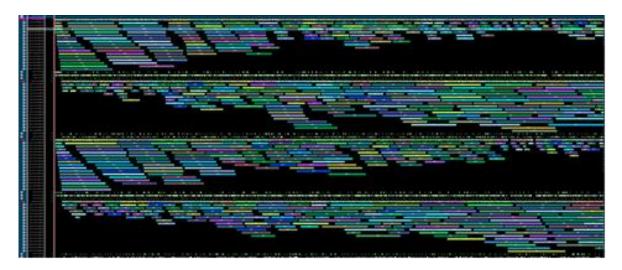


Figure 21 - Initiator 1 and 2 Write and Read Channels

XVI. APPENDIX: TYPES.SVH

Miscellaneous types used throughout the testbench and DUT.

```
31:0]
                                // Maximum size
typedef bit [
                     tag t;
typedef bit [ 31:0] addr t;
typedef bit [127:0] data t;
typedef bit [ 7:0] byte t;
typedef int
                   delay t;
typedef enum bit [ 1:0] {WRITE, READ, NOTUSED} rw t;
typedef byte t array of bytes t[ ]; // Dynamic Array
typedef data t
                         beats_t[int]; // Associative Array
typedef delay_t
                  beats_delay_t[int]; // Associative Array
typedef delay t
                  rbeats_delay_t[
                                  ]; // Dynamic Array
```

This paper was originally presented at DVCon, March 2016, San Jose, CA.

For the latest product information, call us or visit: www.mentor.com

©2018 Mentor Graphics Corporation, all rights reserved. This document contains information that is proprietary to Mentor Graphics Corporation and may be duplicated in whole or in part by the original recipient for internal business purposes only, provided that this entire notice appears in all copies. In accepting this document, the recipient agrees to make every reasonable effort to prevent unauthorized use of this information. All trademarks mentioned in this document are the trademarks of their respective owners.

Corporate Headquarters Mentor Graphics Corporation 8005 SW Boeckman Road Wilsonville, OR 97070-7777 Phone: 503.685.7000 Fax: 503.685.1204

Fax: 503.685.1204

Sales and Product Information
Phone: 800.547.3000
sales_info@mentor.com

Silicon Valley Mentor Graphics Corporation 46871 Bayside Parkway Fremont, CA 94538 USA Phone: 510.354.7400 Fax: 510.354.7467

Fax: 510.354.7467 North American Support Center Phone: 800.547.4303 Europe Mentor Graphics Deutschland GmbH Arnulfstrasse 201 80634 Munich Germany Phone: +49.89.57096.0

Fax: +49.89.57096.400

Pacific Rim Mentor Graphics (Taiwan) 11F, No. 120, Section 2, Gongdao 5th Road HsinChu City 300, Taiwan, ROC Phone: 886.3.513.1000 Fax: 886.3.573.4734

Japan
Mentor Graphics Japan Co., Ltd.
Gotenyama Trust Tower
7-35, Kita-Shinagawa 4-chome
Shinagawa-Ku, Tokyo 140-0001
Japan
Phone: +81.3.5488.3033

Fax: +81.3.5488.3004



MSB 03-18 TECH17110-w