

Traction Constraints and the Physics of Faster-Than-the-Wind Travel

Karl Svozil 

Institute for Theoretical Physics, TU Wien, Wiedner Hauptstrasse 8-10/136, A-1040 Vienna, Austria

It is a well-documented yet counterintuitive fact that wind-driven vehicles (with no onboard power source) can travel directly downwind faster than the wind itself. This effect is not paradoxical once one recognizes that the vehicle is not pushed by the air alone but acts as a coupled mechanical system that taps the relative motion of two media—moving air and stationary ground (or, for watercraft, water taken as quiescent in the far field, neglecting currents)—and, through its drivetrain, can transform a modest velocity difference into a larger vehicle speed. The essential ingredient is a rigid constraint: the wheel-ground contact enforces a no-slip rolling (traction) constraint and supplies tangential reaction forces. In the ideal limit this contact does no work in the ground frame because the instantaneous contact-point velocity is zero; dissipation enters only through aerodynamic drag, rolling resistance, bearing losses, and slip. The drivetrain (wheels, gears, propeller) then acts as a mechanical transformer, trading force against speed in the usual way so that power is conserved in the lossless limit. Using the analogies of a gearbox, a lever, and a sliding-boat thought experiment, this work gives an explicitly Newtonian description of how faster-than-the-wind travel arises from coupling two media through traction constraints and a transmission.

I. INTRODUCTION: A COUNTER-INTUITIVE PHENOMENON

The ability of a wind-powered vehicle to travel directly downwind faster than the wind itself appears paradoxical [1–3]. At first glance, such motion seems to violate energy conservation—like pulling oneself up by one’s own bootstraps. Yet this is not a theoretical curiosity but an experimentally verified reality. The principle was analyzed as early as 1969 by Bauer [4–6], and later by Gaunaa et al. [7] and McDonald [3] among others [8, 9].

The “Blackbird” land yacht [10], for instance, has been clocked at 2.8 times the true wind speed downwind [11], and, with reverse gearing, exceeded twice the wind speed upwind. The phenomenon is robust enough to have served as a problem for the United States Physics Olympiad [9]. Despite this established literature, the counter-intuitive nature of the effect persists, recently sparking a high-profile public wager among physicists [12].

In Section VI we make the educational value explicit and provide a practical guide for classroom and laboratory use. The misunderstanding arises from picturing the vehicle as a passive body pushed by the air alone. If that were the case, its speed could never exceed that of the wind *when traveling directly downwind*.

A conventional sailboat can exceed the true wind speed on a reach, and can exceed the wind in downwind velocity-made-good by sailing at an angle and jibing. However, sustaining a speed exceeding the true wind *directly dead downwind* requires a mechanism that can generate thrust even when the apparent wind vanishes or reverses (e.g., a drivetrain-coupled propeller), which is the regime addressed here.

The crucial ingredient is the ground (or water) contact. In what follows we treat it explicitly as a *constraint*: the wheel-ground interface enforces rolling without slip and can therefore transmit tangential reaction forces (traction). In the ideal rolling limit the ground

does not supply mechanical power in the ground frame because the instantaneous velocity of the contact point is zero; instead, the contact provides the reaction forces and torques needed to transmit power internally through the drivetrain. Non-ideal effects enter through aerodynamic drag, rolling resistance, bearing losses, and any slip at the contact.

A recurring theme throughout this paper is that sustained faster-than-the-wind motion requires not merely a moving airstream, but a coupling between two media in relative motion together with an external reaction constraint. On land this constraint is provided by the traction-enabled wheel-ground contact; on water it is provided more weakly by hydrodynamic reaction, with unavoidable slip and wake losses. Later sections return to this point in specific contexts, but the basic mechanism is always the same: the vehicle acts as a mechanical transformer that exchanges momentum between the two media through an external constraint.

We first describe how the vehicle operates in both downwind and upwind configurations and clarify why the same mechanism does not apply to aircraft, which interact with only a single medium. We then interpret the physics through three complementary mechanical analogies—a gearbox, a lever, and a “sliding boat” thought experiment—that make explicit the role of external constraints. In particular, sustained velocity amplification and thrust require an external reaction surface (in practice, a traction-enabled, approximately no-slip wheel-ground contact) that allows the drivetrain to exchange momentum between air and ground.

II. THE PHYSICS OF FASTER-THAN-THE-WIND TRAVEL

Throughout, “faster-than-the-wind” refers to motion parallel (upwind or downwind) to the true wind in the ground/water (laboratory) frame G , unless stated other-

wise. In this paper “wind-driven” means that no auxiliary onboard energy source (engine, battery, spring, or flywheel) supplies net work; apart from start-up transients, sustained motion is powered solely by the wind (air motion relative to the ground/water).

Reference frames and sign conventions. To avoid ambiguity, we use only two frames unless explicitly stated otherwise. The first is the ground/water (laboratory) frame G , in which the ground is at rest and, for boats, the far-field water is at rest (neglecting currents). All quoted vehicle speeds and all statements such as “faster than the wind” refer to G . The second is the instantaneous vehicle frame C . Because the vehicle may accelerate in G , C is understood as the momentarily comoving frame at a given instant; we use it only for local kinematics and sign conventions, not as a global frame for the entire motion. For motion along the wind direction, the apparent-wind velocity in C —more precisely, the component of the relative air velocity along the direction of travel—is

$$v_a = v_w - v,$$

where v_w is the true wind speed in G and v is the vehicle speed. Thus $v_a > 0$ means the air approaches from behind, $v_a = 0$ at the crossover $v = v_w$, and $v_a < 0$ means the air approaches from ahead in the vehicle frame. We use G for the overall kinematics, momentum and power balances, and the no-slip condition at the wheel-ground contact. We use C only to describe the local operating state of the propeller and, in the gearbox analogy, to fix the sign of tangential velocities before returning to G . In particular, statements such as “the ground does no work at the contact” are statements in G , since contact power is frame-dependent.

At the heart of faster-than-the-wind motion lies a transmission that couples two distinct media—the air and the ground. Through its propeller and wheels, the vehicle exerts forces on both the air and the ground, transferring momentum between them via the drivetrain. The relative motion between air and ground provides the energetic reservoir that the vehicle can tap. The instantaneous net mechanical power transferred (and thus available for acceleration) depends on both this relative velocity and the coupling forces set by propeller/wheel loading, gearing, drag, and losses. As will be discussed later, this is analogous to a gear train or lever: It gears up velocities and gears down forces, so that the product of force and speed (power) is preserved in the ideal limit.

The direction of net mechanical power transfer through the drivetrain—that is, whether the propeller delivers shaft power to the wheels (turbine mode) or the wheels deliver shaft power to the propeller (fan mode)—is set by the gearing and blade pitch (for a given operating point). Locally, power is distributed among components and losses, but the sign of the net shaft power between propeller and wheels distinguishes the two regimes.

In the usual downwind-faster-than-the-wind configuration, let the cart speed in the ground frame G be v , with true wind speed v_w . The propeller then experiences

the apparent-wind velocity $v_a = v_w - v$ in the vehicle frame C . Once rolling, the wheels drive the propeller, which acts as a fan and accelerates air rearward. At the crossover $v = v_w$, the apparent-wind velocity vanishes ($v_a = 0$); for $v > v_w$, $v_a < 0$, meaning that in the cart frame the air now arrives from ahead. Nevertheless, the propeller continues to operate as a wheel-driven fan and accelerates this air rearward, thereby producing thrust. The sign change of the apparent-wind velocity at the crossover is illustrated in Fig. 4(b). A fan consumes mechanical power: In this downwind case the propeller operates in *fan mode* and therefore requires positive shaft power. That shaft power is delivered through the drivetrain from the rolling wheels, while the *ultimate* energy source remains the wind (air motion relative to the ground). The fan imparts rearward momentum to the air and produces a pressure rise across the propeller disk, thereby generating thrust.

In the upwind configuration (obtained by reversing the gearing or blade pitch), the wind drives the propeller as a turbine, which in turn drives the wheels against the ground. A turbine extracts mechanical power: It converts the kinetic energy of the moving air (the wind) into shaft power, which is transmitted through the drivetrain to the wheels and propels the vehicle upwind.

In both configurations the vehicle as a whole is ultimately powered by the wind: It taps the kinetic energy of the air relative to the ground. However, in the downwind-faster-than-the-wind mode the propeller itself operates as a wheel-driven fan (shaft power delivered to the air), whereas in the upwind mode it operates as a turbine (shaft power extracted from the air).

Relation to Bernoulli’s principle. The present explanation is intentionally Newtonian: the essential mechanism is momentum and power transfer between two media through the drivetrain and the traction constraint at the ground contact. For readers who prefer a fluid description, Bernoulli’s principle provides a complementary account of the pressure field associated with the accelerated flow. In an ideal actuator-disk picture of the propeller, Bernoulli’s equation may be applied separately along streamlines upstream and downstream of the disk, while across the disk itself there is a pressure jump and a change in mechanical energy: in fan mode the disk adds energy to the air, whereas in turbine mode it extracts energy from it. Thus Bernoulli helps describe the accompanying pressure differences, but it does not by itself explain faster-than-the-wind travel; the essential point remains the mechanical coupling of air and ground (or water) through an external reaction constraint.

A. Downwind Faster Than the Wind

Consider a cart with a propeller linked to its wheels by a chain and gears, as shown in Fig. 1(a). When stationary, a tailwind exerts a force on the cart and on the propeller blades, initiating motion. As the wheels turn,

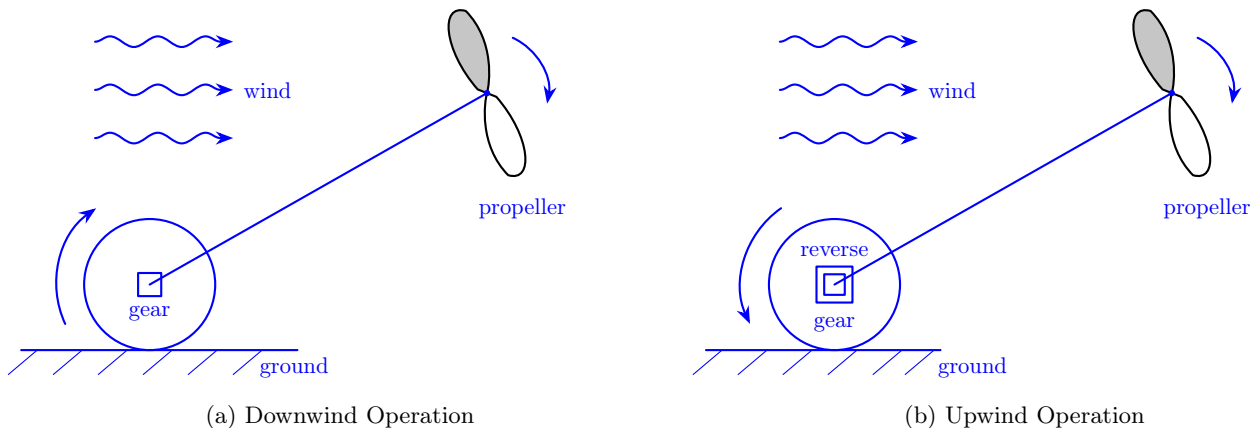


FIG. 1. Schematic of a wind-driven vehicle’s operation. Arrows indicate the direction of rotation. The pitch of the propeller blades is indicated by the darker shade of the blade facing the rear. (a) For downwind travel faster than the wind, the wheels drive the propeller, which pushes air backward to generate thrust. (b) For upwind travel, the wind turns the propeller (acting as a turbine), which drives the wheels and pulls the vehicle against the wind.

they drive the propeller so that it actively pushes air *backward* relative to the cart. The propeller thus acts not as a passive windmill but as a fan powered by the rolling motion of the wheels against the ground.

As the cart accelerates and its ground speed approaches the wind speed, the *apparent-wind velocity* at the propeller diminishes. Even when the *apparent-wind velocity* is momentarily zero, the rolling wheels can still deliver shaft power to the propeller, which continues to accelerate air rearward and thereby propel the cart beyond the wind speed. The energy ultimately comes from the relative motion of the two media—moving air and (approximately) stationary ground. The drivetrain couples these media and converts their velocity difference into thrust, with the wheel–ground contact supplying the required traction (no-slip) constraint and reaction forces.

In practice, the achievable speed ratio is limited by nonidealities—finite propeller efficiency, parasitic aerodynamic drag, rolling resistance and bearing losses, and the finite traction available at the wheel–ground contact (incipient slip). These effects set a maximum useful gear ratio and therefore bound the attainable velocity amplification. A complete engineering treatment would include propulsive efficiency, drag, and traction limits; the idealized analogies below are intended to establish the kinematic and energetic possibility in principle.

B. Upwind Travel

The same mechanism works in reverse for upwind motion, as depicted in Fig. 1(b). Here the wind drives the propeller as a turbine, transferring power through the drivetrain to the wheels, which pull the vehicle against the wind. The vehicle now extracts energy from the moving air and exerts a force against the ground through its wheel contact. In the ideal limit of rolling without

slip on a rigid, stationary surface, the ground itself does no work; it merely supplies the reaction forces needed for the drivetrain to transfer momentum from the air to the vehicle, thereby propelling it. *As emphasized above, propulsion requires the external reaction supplied by the second medium.*

III. WHY NOT IN THE AIR?

An aircraft, by contrast, operates entirely within a single medium—the air. It must move relative to that air to generate lift and thrust. A plane in a 100 km/h tailwind may achieve a ground speed of 600 km/h while its airspeed remains 500 km/h, but if its airspeed were reduced to zero, it would lose lift and fall.

A purely wind-driven vehicle of the type analyzed by Gaunaa et al. [7], in contrast, draws power from the relative motion of moving air over (effectively) stationary ground and uses its drivetrain to “gear up” this modest velocity difference into a larger vehicle speed.

Because a free-flying aircraft lacks a second medium that can provide an independent external reaction, it cannot exploit this particular geared coupling between air and ground.

IV. ON WATER: FLUID-MEDIATED CONSTRAINTS, SLIP, AND TWO PROPULSION SCENARIOS

Watercraft, like the land vehicles discussed above, couple two media (air and water) and can exchange momentum between them. The crucial distinction is that the “reaction surface” is now a *fluid*: hydrodynamic reaction forces are generated only by imparting momentum to water, which generally produces induced velocities, a wake,

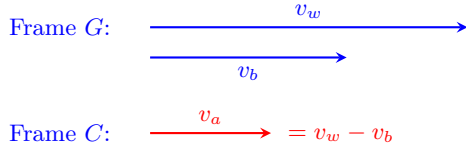


FIG. 2. Minimal kinematic definitions for Sec. IV. In the laboratory frame G , the true wind is v_w and the boat speed is v_b . In the instantaneous boat frame C , the apparent-wind velocity is $v_a = v_w - v_b$. Vectors are aligned at a common origin; for $v_b > v_w$, the apparent-wind velocity v_a reverses direction.

and wake kinetic energy (ultimately dissipated). Thus the water-side coupling is not a rigid no-slip traction constraint in the wheel-ground sense; it is a *fluid-mediated constraint* whose effectiveness is limited by slip and efficiency.

Throughout this section we [return to the ground/water frame \$G\$, which for a boat is the laboratory frame](#) in which the far-field (undisturbed) water is at rest (neglecting currents). The flow in the vicinity of the hull/foils/propulsor is generally nonzero due to induced velocities and wake formation, [that is, the creation of a trailing region of disturbed flow behind the hull or propulsor](#). Along the downwind axis, the true wind speed is v_w , the boat speed through the water is v_b , and the [apparent-wind velocity](#) is $v_a = v_w - v_b$. Figure 2 summarizes the kinematic conventions used in this section: in frame G the true wind has speed v_w and the boat moves with speed v_b , while in frame C the apparent-wind velocity is $v_a = v_w - v_b$.

1. Scenario 1: Geometric coupling (sails and keels/foils)

A conventional sailboat acts as an aerodynamic/hydrodynamic “wedge” inserted between air and water: the sail generates an aerodynamic force (typically lift-dominated with respect to v_a), while the keel/foils generate a hydrodynamic sideforce that prevents lateral drift.

Against the wind (upwind progress): A sailboat does not go straight into the wind; it makes upwind progress by tacking. The keel/foil must operate at a finite angle of attack to generate sideforce, so some leeway and an associated induced-drag penalty are unavoidable in practice. Unlike ideal rolling contact, the water-side reaction cannot be treated as a kinematic constraint that transmits arbitrary lateral force at zero power cost: generating sideforce requires exchanging momentum with the water and typically leaves kinetic energy in the wake.

With the wind (downwind): It is common for fast craft (skiffs, catamarans, iceboats) to achieve a downwind *velocity made good*—the component of velocity directed toward the downwind destination—that exceeds the true wind speed by sailing at an angle (broad reaching) and jibing; in that regime the apparent wind tends to increase

and rotate forward, keeping the sail in a lifting condition.

By contrast, a conventional sailboat generally cannot sustain a speed exceeding the wind *directly dead downwind*. If $v_b \parallel v_w$ and $v_b \rightarrow v_w$, then $v_a \rightarrow 0$ and a passive sail loses the aerodynamic drive needed to overcome water drag. To exceed the wind speed *directly* downwind requires a mechanism that can continue to produce thrust even when the apparent wind vanishes or reverses—that is, an explicit “mechanical transformer” rather than a purely geometric sail-keel coupling.

2. Scenario 2: Mechanical coupling (coupled air and water propellers/turbines)

To reproduce the Blackbird-style “two-media gearbox” on water, one may couple an air turbine or propeller to a water turbine or propeller via a shaft (and, if desired, gearing). Stong and Martin’s 1975 account of the Kauffman–Lindahl toy boat (the “push-me-pull-you”) provides a particularly clear demonstration [2].

The key point is a simple force-speed tradeoff. [In a one-dimensional control-volume idealization, if a device processes a mass flow rate \$\dot{m}\$ and changes the axial fluid speed from \$u_{\text{in}}\$ to \$u_{\text{out}}\$, then](#)

$$F = \frac{dp}{dt} = \dot{m} (u_{\text{out}} - u_{\text{in}}), \quad (1)$$

$$P = \frac{dE}{dt} = \frac{1}{2} \dot{m} (u_{\text{out}}^2 - u_{\text{in}}^2). \quad (2)$$

Here F is the axial force exerted on the fluid; the reaction force on the device has equal magnitude and opposite direction. Thus the force is associated with the rate of momentum transfer, whereas the power is the rate of energy transfer. Because kinetic energy increases with the square of speed, even a modest velocity change in an already fast stream can correspond to a substantial power transfer.

[For a propeller or fan, an ideal actuator-disk estimate makes this scaling more explicit. If the upstream speed of the fluid relative to the device is \$U\$, the slipstream increment is \$\Delta u\$, and the disk area is \$A\$, then the mass flow rate through the disk is](#)

$$\dot{m} = \rho A \left(U + \frac{\Delta u}{2} \right),$$

[so that the thrust and shaft power transferred to the fluid are](#)

$$T = \dot{m} \Delta u, \quad P = T \left(U + \frac{\Delta u}{2} \right).$$

[In the lightly loaded limit \$\Delta u \ll U\$, this reduces to the familiar scaling \$T \approx P/U\$. Thus, for a given shaft power, a device operating in a slower stream can in principle produce a larger thrust than one operating in a faster stream. However, efficient operation requires \$\Delta u\$ to remain small, which in turn demands a sufficiently large actuator area;](#)

otherwise the wake kinetic-energy loss rises and the efficiency falls. The corresponding turbine relations have the same structure, with the sign of the power transfer reversed.

This force–energy intuition must be read with an important caveat: the achievable forces depend on how much fluid each device can interact with per unit time, that is, on the mass flow rate $\dot{m}$, which in practice depends strongly on its effective area (size) and loading.

In a fast stream (air), a turbine can in principle transfer a given shaft power with a comparatively smaller force because that power is associated with a high flow speed. In a slow stream (water), delivering the same shaft power can correspond to a larger thrust because the characteristic speed is lower. However, realizing this efficiently requires sufficiently large propeller/turbine areas: a small, heavily loaded water propeller must produce large slip (a fast jet), which increases wake losses and reduces thrust per unit power, while a small air turbine may simply be unable to extract the needed shaft power from the wind.

Thus the coupled air–water drivetrain can act as a mechanical transformer between a fast medium and a slow one, but the quantitative outcome depends on geometry (effective areas) and efficiencies, not on speed alone. In most practical implementations the air-side propeller/turbine is much larger than the water-side one: because air is far less dense than water, extracting (or delivering) a given shaft power typically requires a much larger swept area in air, whereas substantial thrust can be produced in water with a comparatively compact propulsor (often at the cost of increased slip and wake losses if it is too small).

By reversing the roles—using a *water turbine* (loaded by the boat’s motion through the water) to drive an *air propeller* as a fan—the same principle applies to downwind travel. Provided the components are sized to minimize slip penalties, the device can sustain thrust even when the apparent wind vanishes, enabling downwind travel faster than the wind (in the water frame).

3. The penalty of slip

Why is it more difficult to achieve high efficiency (and high speeds) on water than on land? On land, ideal rolling contact provides a “hard” constraint: the instantaneous contact-point velocity is zero in the ground frame, so the ground can supply large tangential reaction forces with (ideally) zero power at the contact.

In water, any sustained reaction force requires accelerating a mass flow. This transfer of kinetic energy to the wake represents an unavoidable energy loss. Consequently, waterborne faster-than-the-wind devices are typically more strongly efficiency- and drag-limited than their wheeled counterparts, even though the underlying Newtonian mechanism is the same: a transmission mediates momentum exchange between two media in relative motion.

Note that a watercraft relates to Section III with an important qualification. A free-flying aircraft interacts essentially with only one medium (the air) and therefore lacks access to a second medium in relative motion that could provide an independent external reaction. A watercraft *does* have such a second medium (water), but the reaction it provides is mediated by fluid slip and wake formation rather than by an approximately no-slip traction constraint, as in ideal wheel–ground contact.

V. BUILDING INTUITION: MECHANICAL ANALOGIES

To deepen this understanding, we employ a series of mechanical analogies that illustrate velocity amplification, energy transfer between coupled media, and the role of the external reaction constraint introduced above.

A. The Gearbox Analogy

A gearbox is an excellent first analogy [13] because it directly mirrors the mechanics of the wind-driven vehicle. Readers are encouraged to view the demonstration in the video of Ref. [13] to visualize the effect. While this mechanical model relies on rigid, no-slip contacts (racks and gears) rather than fluid aerodynamic coupling, it isolates the kinematic principles of velocity amplification, directional transmission, and the essential role of external constraints.

1. Positive Transmission (Downwind)

In the downwind configuration, the wheels roll on the ground and, through the drivetrain, spin the propeller so that it acts as a fan: it accelerates air rearward (in the ground frame) and thereby produces forward thrust. A useful mechanical analogy is a gearbox operating between two racks: a lower rack rigidly fixed to the ground and an upper rack representing the moving air. The vehicle plays the role of the gearbox casing. By coupling the motion of these two “racks” and by virtue of its gear ratio, it converts the relative motion of air and ground into translation of the vehicle over the ground. The essential ingredient is the lower wheel–ground interface: static-friction traction enforces the no-slip rolling constraint and supplies the tangential reaction forces and torque required for the drivetrain to transmit power and exchange momentum with the ground (while doing no work at the contact point in the ideal rolling limit).

To keep the frame changes explicit, we use the vehicle frame only in the next few lines to fix the sign conventions; the actual speed ratio is then derived entirely in the ground frame G . Because the gearbox/vehicle may accelerate in G , the term “instantaneous rest frame” means the momentarily comoving frame at a given instant, used

only for local kinematics and sign conventions. Thus, for the immediate kinematic relations below, we work in the instantaneous rest frame of the gearbox (“vehicle”), so that all gear centers are at rest. In this frame the upper rack (“wind”) moves with speed v_i relative to the gearbox, and the lower rack (“ground”) moves backward with speed v_f ; the same symbol v_f denotes the ground speed of the gearbox in G .

We can model this using a system of racks and gears, as shown in Fig. 3(a). Consider a mechanical system with:

1. An upper rack representing the wind, moving with velocity v_i , with no slippage between the rack and the upper gear.
2. An upper gear of radius r_1 in contact with the upper rack, rotating with angular velocity ω_1 .
3. A pinion of radius r_2 meshed with the gear, rotating with ω_2 .
4. A lower gear of radius r_3 rigidly attached to the pinion, rotating with $\omega_3 = \omega_2$.
5. A lower rack representing the ground, moving backward with speed v_f (the vehicle’s ground speed in the laboratory frame), with no slippage at the lower gear. It is stationary ($v_g = 0$) in the laboratory frame discussed later.

With counter-clockwise rotation taken as positive, the kinematic relations in the instantaneous rest frame of the gearbox are

$$v_i = -v_1, \quad (3)$$

$$v_1 = r_1 \omega_1, \quad (4)$$

$$v_2 = r_2 \omega_2 = -v_1, \quad (5)$$

$$v_3 = r_3 \omega_3 = r_3 \omega_2. \quad (6)$$

The two negative signs—one from the top-side rack contact in Eq. (3) and one from the gear–gear mesh in Eq. (5)—cancel, so the tangential velocities at the upper and lower rack contacts point in the *same* direction. Thus the gearbox transmits motion from the upper rack to the lower rack without reversing its direction: this is what we call *positive transmission*.

We now switch back to the ground frame G , because the no-slip condition at the lower rack and the comparison with the wind speed are most transparent in that frame. The actual velocity and force ratios between the racks, and hence between the “wind” and the vehicle over the ground, are therefore obtained by writing the no-slip conditions in G .

2. Positive Transmission in the ground frame

We now write the kinematics entirely in the ground frame. Let the upper rack (“wind”) move to the right with speed v_i , and let the gearbox/vehicle translate to

the right with speed v_f . The center of the upper gear therefore moves to the right at speed v_f in this frame. Denote by $v_1 = r_1 \omega_1$ the tangential speed of the upper gear at its rim, measured in the gear’s own rest frame, with counter-clockwise rotation taken as positive.

At the top contact point between the upper gear and the rack, a positive (anti-clockwise) ω_1 implies that the tangential motion of the tooth is to the *left*, that is, opposite to the rack motion. Thus, in the ground frame, the horizontal velocity of that contact point is the sum of the translational and tangential contributions, $v_f - v_1$. The no-slip condition at the upper rack–gear interface then requires the tooth velocity to equal the rack velocity in the ground frame,

$$v_i = v_f - v_1. \quad (7)$$

This is the ground-frame version of the kinematic relation previously written as $v_i = -v_1$ in the instantaneous rest frame of the gearbox.

The remaining kinematic relations can also be written in the ground frame. Let again $v_2 = r_2 \omega_2$ and $v_3 = r_3 \omega_3$ be the tangential speeds of the pinion and the lower gear, respectively, measured in their local rest frames. At the mesh between the upper gear and the pinion, the centers have the same translational speed v_f , so this cancels out, and no slip requires equal and opposite tangential velocities along the line of contact,

$$v_2 = -v_1. \quad (8)$$

Because the pinion and lower gear are rigidly fixed to the same shaft, $\omega_3 = \omega_2$, and therefore,

$$v_3 = r_3 \omega_3 = \frac{r_3}{r_2} v_2. \quad (9)$$

Combining Eqs. (8) and (9) gives

$$v_3 = \frac{r_3}{r_2} v_2 = -\frac{r_3}{r_2} v_1. \quad (10)$$

At the lower contact, between the lower gear and the (stationary) lower rack representing the ground, the gear center again moves to the right with speed v_f . For a positive (anti-clockwise) ω_3 , the tangential motion at the *bottom* of the gear is also to the right, so no slip with the stationary lower rack ($v = 0$) requires

$$0 = v_f + v_3 \text{ or } v_f = -v_3. \quad (11)$$

Using (10) in (11) yields

$$v_f = -v_3 = \frac{r_3}{r_2} v_1. \quad (12)$$

On the other hand, from the upper rack–gear no-slip condition (7) we have

$$v_1 = v_f - v_i. \quad (13)$$

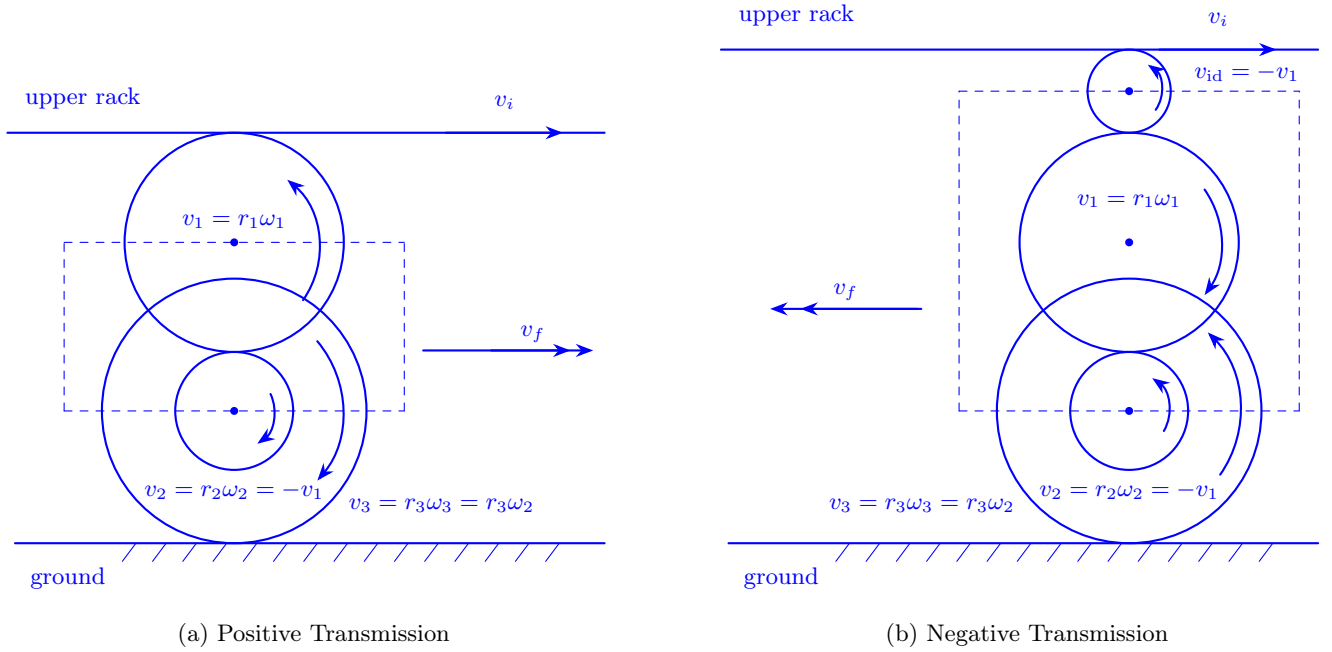


FIG. 3. Schematic of the gearbox analogy in the laboratory frame G . The lower line represents the ground, which is stationary in this frame, and the arrow v_f denotes the speed of the gearbox/vehicle relative to the ground. Curved arrows indicate the sense of rotation, and the labels v_1 , v_2 , v_3 , and v_{id} denote local tangential speeds as defined in the text. The apparent sign mismatch at the upper rack–gear contact is resolved by the translation of the gearbox: because the gear center moves with the gearbox, the no-slip condition in the laboratory frame involves the *absolute* contact-point velocity, namely $v_f - v_1$ at the upper contact, not the tangential contribution $-v_1$ alone. (a) Positive transmission (downwind): the motion of the upper rack (wind) is transmitted through the gear train to the lower contact in the same sense, yielding velocity amplification. (b) Negative transmission (upwind): an idler gear reverses the transmitted sense of motion between the upper and lower contacts while preserving the same no-slip, ground-constrained coupling at the lower contact.

Substituting (13) into (12) gives

$$v_f = \frac{r_3}{r_2} (v_f - v_i),$$

and, solving for v_f/v_i yields

$$v_f = \frac{r_3}{r_3 - r_2} v_i. \quad (14)$$

The gearbox (and hence the vehicle) moves faster than the upper rack (“wind”) by the velocity-amplification factor

$$\frac{v_f}{v_i} = \frac{r_3}{r_3 - r_2}, \quad (15)$$

which is greater than unity whenever $r_3 > r_2$. Notably, this kinematic velocity ratio is independent of the upper gear radius r_1 .

In the ideal, lossless limit, mechanical power transmitted between the racks is conserved: $F_i v_i = F_f v_f$, where F_i is the tangential force transmitted at the upper rack–gear contact and F_f is the corresponding force at the lower gear–rack (ground) contact. Combining this with Eq. (14) yields

$$F_f = \frac{v_i}{v_f} F_i = \frac{r_3 - r_2}{r_3} F_i. \quad (16)$$

Thus the faster lower rack experiences a proportionally reduced force: An increase in speed is obtained at the cost of a corresponding decrease in transmitted force, exactly as in a conventional gear train.

The dimensionless behavior of these relations is shown in Fig. 4(a): as the idealized speed amplification grows, the transmitted force decreases proportionally.

Note that the velocity ratio (14) becomes singular in the limit $r_2 \rightarrow r_3$. This does not imply that the vehicle speed literally diverges; rather, it signals that our idealized no-slip model ceases to have a consistent solution for $r_2 = r_3$ and prescribed $v_i \neq 0$.

Indeed, before solving for v_f we had, from the upper no-slip condition (7) and the gear relations (12),

$$v_i = \left(\frac{r_3}{r_2} - 1 \right) v_1 = \frac{r_3 - r_2}{r_2} v_1.$$

For $r_2 = r_3$ this reduces to $v_i = 0$, so the only way to satisfy all no-slip constraints with $r_2 = r_3$ is to have zero relative motion between the racks. Thus, if the upper rack is prescribed to move at a nonzero speed v_i , at least one of the contacts must slip or the mechanism must deform, and our ideal rigid, no-slip model breaks down exactly at $r_2 = r_3$. The apparent “singularity” in (14) therefore marks a kinematic incompatibility, not a physical divergence of v_f .

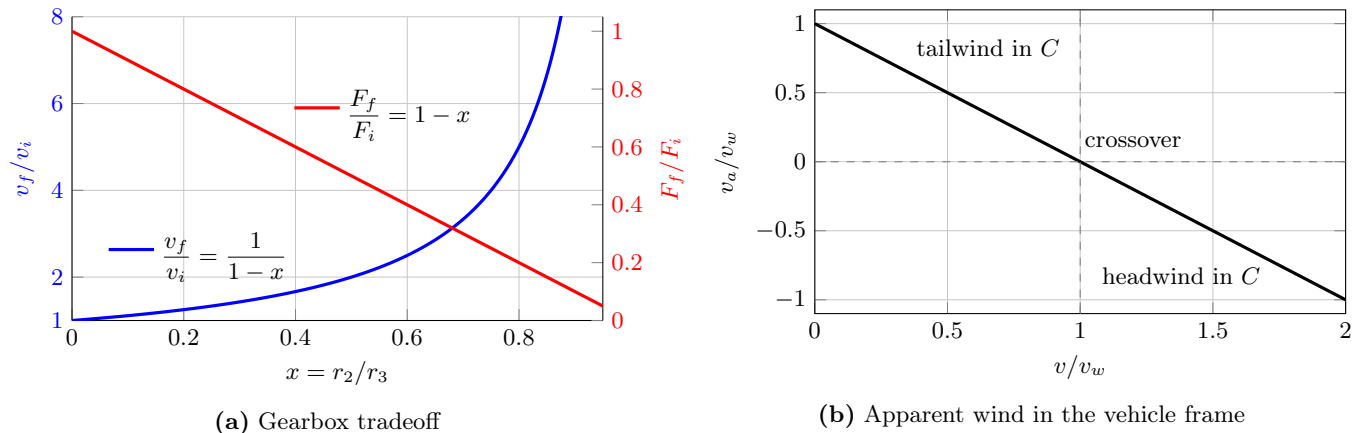


FIG. 4. Dimensionless plots of two key relations used in the text. (a) In the gearbox analogy, with $x = r_2/r_3$, the ideal speed amplification $\frac{v_f}{v_i} = \frac{1}{1-x}$ increases as $x \rightarrow 1^-$, while the transmitted force ratio $\frac{F_f}{F_i} = 1 - x$ decreases correspondingly. This illustrates the force-speed tradeoff of the lossless transmission. (b) In the vehicle frame C , the apparent wind satisfies $\frac{v_a}{v_w} = 1 - \frac{v}{v_w}$. It is positive for $v < v_w$, vanishes at the crossover $v = v_w$, and becomes negative for $v > v_w$, meaning that the air then approaches from ahead in the vehicle frame.

An intuitive but somewhat “impromptu” kitchen-style elementary demonstration for the degenerate case $r_2 = r_3$ uses two apples or two rolling pins, one stacked on the other, between a table (the “ground”) and a wooden or plastic cutting board (the “upper rack”). If the two rollers are constrained to translate together as a unit (their centers share the same horizontal velocity), and all three contacts (ground–lower roller, roller–roller, upper roller–board) are rolling without slip, then the cutting board cannot move at all relative to the table. Nevertheless, the “apple (or pin) train” itself can move arbitrarily relative to both, since the internal rolling still admits a free translational speed.

As emphasized above, this mechanism works only because the chassis is externally constrained by the wheel–ground contact. Without that traction-mediated coupling, the assembly would simply drift with the air, and no sustained velocity amplification relative to the environment would result.

3. Negative Transmission (Upwind)

For upwind travel, the *energetic* roles are reversed: the wind now drives the propeller as a turbine, and the drivetrain transmits this power to the wheels, which push against the ground to move the vehicle into the wind. Kinematically, this corresponds to inserting an idler gear in the gearbox analogy, as shown in Fig. 3(b). The idler reverses the direction of motion between the upper (air) and lower (ground) racks while preserving the same coupling through a no-slip contact and overall power balance. Do-it-yourself demonstrations suitable for classroom use now provide direct, hands-on confirmation of the effect [14].

In the instantaneous **vehicle** frame C , the presence of

the idler adds one more gear mesh between the upper rack and the main gear train. Writing the tangential velocities along the train as before, we have

$$v_i = -v_{id}, \quad (17)$$

$$v_{id} = -v_1, \quad (18)$$

$$v_1 = r_1\omega_1, \quad (19)$$

$$v_2 = r_2\omega_2 = -v_1, \quad (20)$$

$$v_3 = r_3\omega_3 = r_3\omega_2. \quad (21)$$

The three negative signs—from the rack–idler contact in Eq. (17) and the two gear–gear meshes in Eqs. (18) and (20)—produce an overall sign flip between the tangential velocities at the upper and lower rack contacts. Thus, compared with the positive-transmission case, the direction of motion is reversed: the lower rack (representing the ground) moves opposite to the upper rack (the “wind”) in this frame.

An idler gear in a rigid, no-slip train reverses the sense of motion but does not change the magnitude of the speed ratio. Hence the magnitude of the rack-to-rack velocity ratio derived in the ground frame for positive transmission, Eq. (14), remains unchanged, while its sign is reversed. In the **ground frame** G we therefore have

$$v_f = -\frac{r_3}{r_3 - r_2} v_i \quad (\text{negative transmission}), \quad (22)$$

so that the gearbox (and thus the vehicle) moves upwind, opposite to the motion of the upper rack.

In the ideal, lossless limit, conservation of mechanical power again gives $F_i v_i = F_f v_f$, so that the magnitude of the force transmitted at the lower rack is reduced by the same factor as in the positive case,

$$|F_f| = \frac{r_3 - r_2}{r_3} |F_i|, \quad (23)$$

but now acting in the opposite direction to F_i . Thus, in both downwind and upwind operation, an increase in speed is obtained at the cost of a corresponding decrease in transmitted force; only the direction of motion differs.

In the physical vehicle, the wind (upper rack) supplies input power to the propeller, which drives the wheels (lower rack) against the ground; as in the positive-transmission case, the required external reaction is supplied by the no-slip wheel-ground contact.

B. The Lever Analogy

A lever provides a second, complementary analogy for how speed can be amplified through lever geometry and a fixed external support. Here geometry replaces gearing, but the essential ideas—velocity amplification, possible reversal of direction, and the need for an external constraint that supplies reaction forces and torque—are the same. As before, the lever represents the *vehicle itself*, mediating between the wind and the ground.

However, it must be noted that a physical lever allows only transient faster-than-the-wind motion, limited by the length of its stroke. The wind-driven vehicle, however, operates as a *continuous* rotary lever, maintaining this kinematic transformation indefinitely as it rolls.

1. With the Wind

Consider a rigid lever of total length L , pivoted at one end and firmly clamped to the bench (fixed pivot), as shown in Fig. 5(a). A sail is attached partway along the lever at distance d_s from the pivot, and we observe the motion of the far end. When the wind pushes the sail, the lever rotates about its pivot. By geometry, the end of the lever moves faster than the point where the sail is attached.

Let the wind blow at speed v_w , and let the sail move with velocity $v_s = \alpha v_w$, where $0 < \alpha < 1$ accounts for aerodynamic loss. The angular velocity of the lever is

$$\omega = \frac{v_s}{d_s}. \quad (24)$$

The velocity of the distal end is then

$$v_d = \omega L = \alpha \left(\frac{L}{d_s} \right) v_w. \quad (25)$$

Hence, the velocity amplification factor is simply L/d_s , independent of the absolute dimensions of the lever. If $L/d_s > 1/\alpha$, the lever's tip moves faster than the wind ($v_d > v_w$). This ratio plays the same role as the velocity amplification factor $r_3/(r_3 - r_2)$ in the gearbox analogy.

In the ideal lossless limit, the lever does not save energy or power; rather, it trades force for distance (or, equivalently, force for speed). Thus the amplification of

speed comes with a proportional reduction in force:

$$F_d = F_w \frac{d_s}{L}, \quad (26)$$

where F_w is the wind force on the sail and F_d is the force at the lever tip. The pivot acts as an external constraint (a fixed support) that supplies the required reaction forces and torque, enabling momentum exchange between the wind-driven part of the lever and the ground.

2. Against the Wind

For upwind motion, we move the pivot between the sail and the far end of the lever, as illustrated in Fig. 5(b). When the wind pushes on the sail, the other end of the lever now moves in the opposite direction—against the wind. This corresponds to inserting an “idler” in the gearbox: The direction of motion reverses, but the same geometric ratio governs the magnitude of velocity amplification.

Let the pivot be at distance d_p from the sail, and let the far end of the lever be $L - d_p$ away on the opposite side. If the wind drives the sail with velocity $v_s = \beta v_w$ (with $0 < \beta < 1$), the lever rotates with angular velocity

$$\omega = \frac{v_s}{d_p}. \quad (27)$$

The velocity at the opposite end is

$$v_d = -\omega(L - d_p) = -\beta \left(\frac{L - d_p}{d_p} \right) v_w. \quad (28)$$

The negative sign denotes the reversed direction of motion (upwind). If $(L - d_p)/d_p > 1/\beta$, the magnitude $|v_d|$ exceeds v_w . As in the gearbox, the ratio depends only on geometry and not on absolute dimensions.

Once again, the pivot must be fixed to an external support so that it can supply the necessary reaction forces and torque. Without this constraint the lever would simply be carried along with the wind, producing little or no rotation and therefore no kinematic amplification—just as a vehicle lacking a no-slip ground contact cannot sustain motion faster than the surrounding air.

The lever analogy restates these same principles geometrically: the lever-arm ratio sets the speed amplification, the pivot location sets the direction, and the fixed support supplies the necessary reaction forces and torque.

C. The Popescu Glide: No Propulsion from Internal Forces Alone

The preceding analogies show that sustained propulsion requires an external reaction through which momentum can be exchanged with a second medium. Without such a reaction, internal motions merely redistribute momentum within the system. To make this explicit, consider the following simple thought experiment [15].

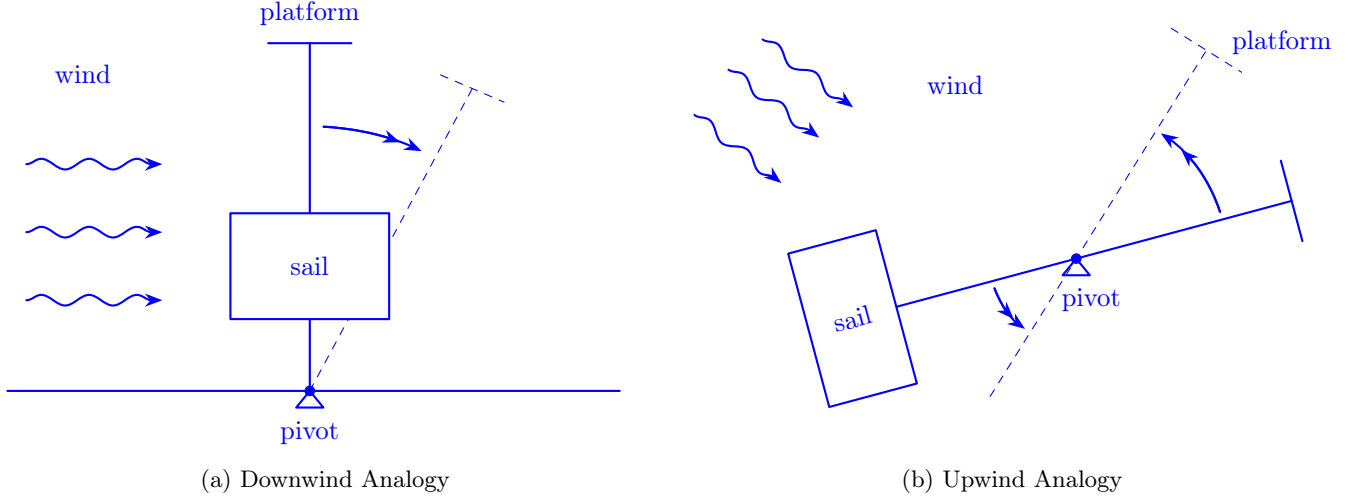


FIG. 5. Schematic of the lever analogy. (a) For downwind motion, the pivot is at one end. The wind pushes the sail (at distance d_s), causing the far end (at L) to move faster than the wind. (b) For upwind motion, the pivot lies between the sail and the observation point, causing the far end to move in the opposite direction of the wind’s push.

Imagine Alice standing on a dock while Bob sits in a small boat that is free to drift horizontally with negligible resistance. Bob attempts to reach Alice by walking from the stern to the bow. As he walks forward, the boat slides backward. Because no external *horizontal* forces act on the combined Bob–boat system, its center of mass remains fixed, even though Bob expends internal energy while walking: Bob’s forward motion is exactly offset by the boat’s recoil.

Crucially, unlike in the wind-cart configuration, the Bob–boat system in this idealization lacks any *traction* (no-slip) constraint to an external body/medium. It can “glide” because there is no fixed reaction surface that can supply an external horizontal impulse. In the wind-cart problem, by contrast, the wheel–ground interface enforces a rolling-without-slip constraint (instantaneous contact-point velocity zero in the ground frame), which permits the drivetrain to exchange momentum with the ground and thereby achieve sustained propulsion relative to the environment. In this sense the Popescu Glide resembles a free-flying aircraft, which interacts essentially with only a single medium, as discussed in Sec. III.

Let Bob have mass m and the boat mass M . If Bob walks a distance l relative to the boat, the boat must move backward by a distance Δx_{boat} such that the system’s center of mass does not shift:

$$m \Delta x_{\text{Bob}} + M \Delta x_{\text{boat}} = 0. \quad (29)$$

Since Bob’s displacement relative to the water is the sum

of his motion relative to the boat and the boat’s recoil,

$$\Delta x_{\text{Bob}} = l + \Delta x_{\text{boat}}, \quad (30)$$

we obtain

$$m(l + \Delta x_{\text{boat}}) + M \Delta x_{\text{boat}} = 0. \quad (31)$$

Solving for the boat’s recoil gives

$$\Delta x_{\text{boat}} = -\frac{m}{m + M} l. \quad (32)$$

The negative sign indicates the boat moves backward. Bob’s resulting progress toward Alice, measured relative to the water, is therefore

$$\Delta x_{\text{Bob}} = l - \frac{m}{m + M} l = \frac{M}{m + M} l. \quad (33)$$

Thus, Bob advances only a fraction of the distance he walks, set by the mass ratio $M/(m + M)$. Only in the limit $M \rightarrow \infty$ —an effectively immovable boat, i.e., one rigidly constrained to an external support—does he make the full progress $\Delta x_{\text{Bob}} \rightarrow l$.

Thus, without an external horizontal impulse, internal motions merely redistribute momentum within the combined system and cannot produce net translation relative to the environment.

The same logic applies to a wind-driven vehicle: Its drivetrain and propeller can only produce sustained propulsion *if the vehicle can exert forces on a second medium*—ground or water—that supplies the required

external reaction forces (for example through traction at a wheel-ground contact or through hydrodynamic side-force). Without this external coupling, the vehicle’s internal motions would largely cancel through recoil of the rest of the system, and no sustained translation relative to the environment would result.

This conclusion is independent of where the energy originates: it holds both for *external* energy inputs (e.g., aerodynamic work done by the wind on a rotor) and for *internal* energy sources (e.g., Bob’s chemical energy expended while walking). Energy expenditure alone is not sufficient for net propulsion of a closed system; an external momentum exchange (an external impulse) is required.

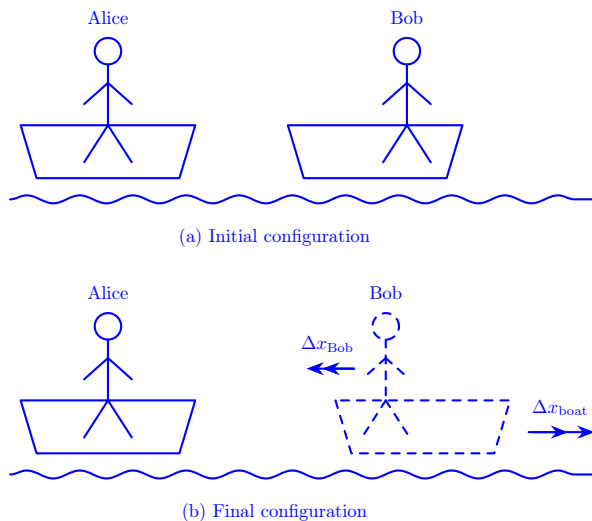


FIG. 6. Schematic of the “Popescu Glide” thought experiment. (a) Initial configuration. (b) Final configuration after Bob attempts to move toward Alice: Bob moves leftward within his frictionless boat while the boat recoils rightward. Without an external interaction, such as paddling in the water, the center of mass of the Bob–boat system remains fixed, and he cannot achieve net propulsion.

Crucially, the Popescu Glide illustrates that without an external reaction surface—an *Archimedean point* in the sense of the dictum “Give me a place to stand on, and I will move the earth” [16, p. 15]—internal motions alone cannot change the center-of-mass motion of the system relative to the environment. In the absence of such an external constraint, internal actuation merely redistributes momentum within the system.

Just as the gearbox and lever analogies require a fixed support that can supply reaction forces and torque, a wind-driven vehicle requires contact with a second medium (ground or water) that can provide the needed external reaction: on land this is supplied by traction enforcing rolling without slip, while on water it is mediated by hydrodynamic forces and wake formation. In this sense, the external contact is not an accessory but an essential element that enables sustained momentum

exchange between air and ground (or water) and thereby makes faster-than-the-wind travel possible.

Kirk Thomas McDonald has pointed out that, under more realistic assumptions, Bob may be able to reduce the separation to Alice by exploiting effects that are absent in the idealized “glide” model [17].

One possibility is for Bob to jump off the boat. If the dock is close enough, Bob can jump from the bow and land on the dock. During the push-off, the combined Bob–boat system still conserves horizontal momentum (so the boat recoils), but once Bob makes contact with the dock the situation is no longer a closed system: the dock provides an external impulse that allows Bob to come to rest on shore.

Another issue is hydrodynamic drag (water “friction”). In reality the boat experiences drag from the water. When Bob walks forward relative to the boat, the boat recoils backward, but the water exerts a drag force opposite this recoil (i.e., a forward force on the boat). This external horizontal force prevents the boat from recoiling far enough to keep the Bob–boat center of mass fixed in the water frame. In this process momentum is transferred to the surrounding water, and mechanical energy is dissipated in viscous losses and wake formation (in the absence of currents, no net energy is extracted from the water).

VI. PEDAGOGICAL USE: TEACHING LEVELS, LEARNING GOALS, MISCONCEPTIONS, AND ACTIVITIES

The phenomenon and its analogies lend themselves to rich instruction from secondary school through undergraduate mechanics and laboratory courses. This section provides a concise, ready-to-use guide.

A. Target levels and prerequisites

- Secondary/High school (ages 15–18): Newton’s laws, frames of reference, work–energy, static vs kinetic friction, basic gear ratios or levers.
- Introductory undergraduate physics/engineering: [Rates of mechanical energy transfer \(power\)](#), efficiency, drag scaling, turbines vs fans, idealizations vs nonidealities.
- Upper-level mechanics/fluids: Constraint forces and power flow, momentum exchange between media, efficiency and performance limits, modeling/simulation.

B. Learning goals

By the end of instruction, students should be able to:

1. Distinguish airspeed, ground speed, and apparent wind; compute frame-dependent velocities.
2. Explain how static friction can transmit force without doing work in the ground frame; identify where [mechanical energy](#) enters and leaves the system [and the corresponding rates of transfer \(power\)](#).
3. Describe the vehicle as a mechanical transformer between two media; draw qualitative [rate-of-energy-transfer \(power-flow\)](#) diagrams for downwind and upwind operation.
4. Use the gearbox/lever analogies to predict velocity amplification and force reduction; derive and interpret the velocity-amplification factor $v_f/v_i = r_3/(r_3 - r_2)$ in Eq. (15).
5. Explain why faster-than-the-wind travel requires two media in relative motion and an external reaction surface (e.g., traction enforcing a no-slip ground contact) that enables momentum exchange between them.
6. Predict qualitative effects of changing gear ratio or blade pitch on achievable speed ratio and thrust.
7. Diagnose and correct common misconceptions (Section VIC).

C. Typical conceptions and misconceptions

- “If the cart matches the wind speed, the apparent wind is zero, so it can’t accelerate further.”
Resolution: At $v_{\text{cart}} = v_{\text{wind}}$ the propeller is still actively driven by the wheels (fan mode downwind). Power comes from the relative motion of air and ground transmitted through the drivetrain; the prop adds energy to the air while the cart gains speed.
- “The ground must do positive work on the cart to speed it up.”
Resolution: With rolling without slip, the instantaneous wheel-ground contact point has zero velocity in the ground frame, so the ground does no work in the ideal limit. It nevertheless supplies tangential reaction forces and torque (traction) that allow the drivetrain to transfer momentum between air and ground; the net power ultimately comes from the wind (air motion relative to the ground).
- “This violates energy conservation.”
Resolution: No violation occurs. The mechanism couples two media and is not a single-turbine extraction from a uniform airstream.
- “A plane can’t do this, so a cart can’t either.”
Resolution: A plane operates in a single medium. The cart leverages two media with a mechanical coupling through the ground.

- Frame confusion: mixing air-frame and ground-frame velocities [and rates of energy transfer \(powers\)](#).
Resolution: Require explicit statements of the chosen frame and draw power-flow arrows with signs and reference frames.

D. Classroom activities and exercises

- Lever analogy (Fig. 5): Clamp a meter stick to a bench to form a fixed pivot. Apply a gentle push at distance d_s from the pivot and compare the tip speed with the speed at the push point; then move the pivot between the push point and the tip to reverse the direction of motion (upwind analogue). Learning focus: kinematic amplification and the role of an external constraint (reaction forces and torque at the pivot).
- Popescu glide: A student standing on a low-friction cart or skateboard walks forward; the cart rolls backward. Discuss center-of-mass motion and why, in the absence of an external reaction surface, internal motions cannot produce net translation relative to the room. Variation: have the student pull briefly on a wall-mounted rope to illustrate how an external constraint (an external impulse) changes the outcome.

E. Conceptual and quantitative exercises

1. Conceptual (frames): In the ground frame, explain how the ground does no work on the cart in the ideal rolling limit, yet the cart accelerates. Where does the power come from?
2. Power balance at the “crossover”: Discuss why, even when $v_{\text{cart}} = v_w$ downwind, the propeller can still produce thrust. Identify the element acting as the power sink/source at that instant.
3. Upwind variant: Using the idler-gear (negative transmission), explain why the cart can move upwind. How does the sign of v_f/v_i change, and why does the magnitude remain the same?

F. Assessment ideas and rubrics (brief)

- Exit ticket: “In one or two sentences, explain why the ground can provide a force yet do no work on the cart.”
- Short quiz: Multiple-choice on frames and signs of power; one free-response drawing a [rate-of-energy-transfer \(power-flow\)](#) diagram.

- Lab report: Methods (measurement of v_w and v_{cart}), uncertainty estimates, and a discussion relating data to the gearbox/lever analogies.

In summary, these activities concretize otherwise abstract ideas—constraints and reaction forces, power flow, and reference-frame reasoning—and make the counterintuitive result reproducible in the classroom with modest equipment.

VII. CONCLUSION

The seemingly paradoxical ability of a vehicle to travel directly downwind faster than the wind is, at its core, a lucid demonstration of classical mechanics rather than an exception to it. The apparent mystery dissolves once we shift perspective: the vehicle is not merely being *pushed* by the wind but functions as a coupled machine that extracts energy from the *relative motion* of two media, namely air and ground (or water).

The mechanical analogies developed here clarify this interplay from complementary viewpoints. The *gearbox* illustrates how relative motion can be transformed and amplified through fixed ratios, while the *lever* expresses the same principle geometrically through leverage. Both analogies highlight the essential requirement of an external constraint—provided in practice by traction at a ground contact (or, less rigidly, by hydrodynamic reaction on water)—which supplies reaction forces and torque and thereby permits sustained momentum exchange between the two media. The *Popescu Glide* thought experiment reduces this point to its purest form: without an external reaction surface, internal motions merely redistribute momentum within the system and cannot produce net translation relative to the environment.

The role of a traction constraint in faster-than-the-wind travel is closely related to the classical Archimedean theme. In the traditional accounts [16, pp. 14–17], Archimedes demonstrates that a sufficiently clever machine—a lever, a tackle (polyspaston/trispaston), or a windlass driven through gears and even an endless screw—can “magnify” force and thereby move an enormous load (such as a ship) with apparently small effort. The essential caveat, already implicit in the dictum “*Give me a place to stand on, and I will move the earth*” mentioned earlier [16, p. 15], is that mechanical advantage cannot be exploited to move a system relative to its environment without a fixed external support that supplies the reaction forces and torque: the machine must push *against something* that does not simply recoil with it.

In the present context, the wind-cart drivetrain plays the role of Archimedes’ “leveraging” device: it is a mechanical transformer that trades force for speed (or vice versa) while ideally conserving power. However, the drivetrain alone cannot produce sustained motion relative to the environment. The required Archimedean point is

supplied by the external constraint at the ground contact: in the ideal rolling-without-slip limit the instantaneous contact-point velocity vanishes in the ground frame, so the ground can supply a horizontal reaction (static-friction traction) and a balancing torque while doing no work at the contact. This is precisely what the Popescu Glide lacks: without a fixed reaction surface, internal actuation merely redistributes momentum within the system, leaving its center-of-mass motion unchanged. (As emphasized in the historical accounts, idealized demonstrations neglect frictional losses; in practice aerodynamic drag, rolling resistance, and incipient slip bound the attainable speed ratios.)

The gearbox analogy makes this identification explicit. The upper rack represents the moving air, the lower rack represents the fixed ground, and the gear train is the “machine.” The velocity-amplification factor $v_f/v_i = r_3/(r_3 - r_2)$ in (15) is the analogue of a lever-arm ratio or a tackle’s reeving ratio: it achieves a larger output speed at the cost of a reduced transmitted force. In Archimedes’ canonical lever setting the emphasis is often the dual statement: a reduced effort force is obtained at the cost of a larger displacement on the effort side; which side exhibits the “greater motion” depends on which end is taken as input. This kinematic amplification becomes physically operative only because one interface (the ground rack) provides the non-recoiling support—the Archimedean point—that closes the force/torque balance of the drivetrain and permits sustained momentum exchange between air and ground.

For physics educators, these analogies provide an accessible path to teaching a counterintuitive yet conceptually rich phenomenon. They reveal that faster-than-the-wind motion is not paradoxical but inevitable once one appreciates how two interacting media can be coupled to generate geared-up motion. The broader lesson is that in any physical system, when two environments are in relative motion, a suitably designed mechanism can use one to propel itself through the other—transforming a perceived impossibility into an elegant example of mechanical ingenuity.

ACKNOWLEDGMENTS

The author thanks Sandu Popescu for a helpful communication regarding his inspiring boat analogy, and Kirk Thomas McDonald for stimulating and constructive criticism of earlier versions of the manuscript. Any remaining errors or misconceptions are the author’s responsibility. This research was funded in whole or in part by the *Austrian Science Fund (FWF)* [Grant DOI:10.55776/PIN5424624]. The author acknowledges TU Wien Bibliothek for financial support through its Open Access Funding Programme.

This text was partially created and revised with assistance from large language models. All content, ideas, and prompts were provided by the author.

-
- [1] B. L. Blackford, The physics of a push-me pull-you boat, *American Journal of Physics* **46**, 1004 (1978).
 - [2] C. L. Stong and S. Martin, The amateur scientist: Diverse topics, starting with how to supply electric power to something that is turning, *Scientific American* **233**, 120 (1975), seelye Martin quotes on page 125 “a toy boat that sails directly into the eye of the wind” as the invention of Peter Kauffman and Eric Lindahl.
 - [3] K. T. McDonald, Counterintuitive performance of land and sea yachts (2021), Joseph Henry Laboratories, Princeton University, Princeton, New Jersey 08544; July 22, 2021, updated July 31, 2021, accessed July 28, 2025.
 - [4] A. B. Bauer, Faster than the wind, in *The Ancient Interface: Proceedings of the First AIAA Symposium on the Aero/Hydraulics of Sailing*, American Institute of Aeronautics and Astronautics. Lecture Series, Vol. 8, edited by P. B. S. Lissaman (Western Periodicals, North Hollywood, CA, USA, 1969) pp. 113–132, Proceedings of the First AIAA Symposium on the Aero/Hydraulics of Sailing, April 26, 1969, Marina del Rey, California Yacht Club.
 - [5] A. B. Bauer, Sailing all points of the compass, in *The Ancient Interface III: Proceedings of the Third AIAA Symposium on the Aero/Hydraulics of Sailing*, AIAA Lecture Series, Vol. 10, edited by J. R. Sellars (AIAA, Redondo Beach, CA, 1971).
 - [6] A. B. Bauer, Taking energy from the wind, in *Proceedings of the 5th AIAA Symposium on Aero/Hydraulics Sailing* (AIAA, 1974) pp. 45–53.
 - [7] M. Gaunaa, S. Øye, and R. Mikkelsen, Theory and design of flow driven vehicles using rotors for energy conversion, in *Proceedings of the European Wind Energy Conference and Exhibition (EWEC 2009)* (Marseille, France, 2009).
 - [8] M. S. A. Khan, S. A. Sufiyan, J. T. George, and M. N. Ahmed, Analysis of down-wind propeller vehicle, *International Journal of Scientific and Research Publications* **3**, 1 (2013).
 - [9] American Association of Physics Teachers, 2013 U.S. Physics Olympiad (USAPhO) semifinal exam solutions (2013), 2013 Semifinal Exam, Part B, Question B1 discusses the Downwind Faster Than the Wind vehicle.
 - [10] M. Nahon, Z. Zhuo, S. Yang, I. Sharf, R. Cavallaro, and S. Morris, Modeling of the Blackbird wind-powered ground vehicle, in *AIAA SCITECH 2023 Forum* (American Institute of Aeronautics and Astronautics, 2023) pp. 1–18, AIAA 2023-0910. Session: Air and Space Vehicle Dynamics, Systems, and Environments II.
 - [11] Direct upwind and downwind record attempts (2010), certified run at El Mirage Dry Lake, CA: ground speed 27.7 mph versus 10.0 mph true wind (ratio 2.77), accessed July 26, 2025.
 - [12] D. Muller, Risking my life to settle a physics debate, YouTube, Veritasium (2021), YouTube, Veritasium channel, accessed July 26, 2025.
 - [13] D. Muller, A Physics Prof Bet Me \$10,000 I’m Wrong, YouTube, Veritasium (2021), YouTube, Veritasium channel, accessed: 2025-10-07.
 - [14] X. Foxlin, Building the vehicle physicists called impossible (feat. Veritasium), YouTube (2021), YouTube, accessed: 2025-10-06.
 - [15] S. Popescu, Bob cannot reach Alice by boat (2024), presentation during the Vienna Quantum Foundations Conference (September 23-27, 2024) on September 24, 2024.
 - [16] E. J. Dijksterhuis, *Archimedes*, Princeton Legacy Library (Princeton University Press, 2014).
 - [17] K. T. McDonald, Two ways for Bob to get closer to Alice (2026), email exchange, January 30, 2026.