# **XenGT Setup Guide**

August 2013

# **Contents**


1	Intro	uction4			
2	Syste	m Require	ements	5	
	2.1	Operati	ng System Requirements	5	
	2.2	Hardwa	re Requirements	5	
	2.3	Softwa	re Requirements	5	
		2.3.1	Proxy Configuration Setup	5	
		2.3.2	Install Basic Packages in Ubuntu	5	
3	Build	and Insta	ll Instructions	7	
	3.1	Source	Repositories	7	
	3.2	Building	g Kernel	7	
	3.3	Building	g Xen and Qemu	7	
	3.4	Grub S	etup	8	
	3.5	Dom0 9	System Config Setup for XenGT	9	
		3.5.1	Starting Xen Services by Default	9	
		3.5.2	Building Graphic Stack – Optional (Not needed for Ubuni	tu 13.04) 9	
		3.5.3	Configuring Xen Bridge	11	
	3.6	Guest S	11		
		3.6.1	General Setup	11	
		3.6.2	Guest Config File	11	
	3.7	Linux G	Suest System Setup for XenGT	12	
		3.7.1	Kernel and Modules Update	12	
		3.7.2	Disabling Grub Graphics Mode	13	
		3.7.3	Graphics Stack Update for Linux Guest – Optional (Not r	needed for	
			Ubuntu 13.04)	14	
4	VM Li	fe Cycle M	lanagement	15	
	4.1	Guest (	Creation	15	
	4.2	Listing	Information about Domains	15	

	4.3	Guest D	estroy	15
_				
5	XenGT	Control I	nterfaces	.16
	5.1	Display :	Switch	16
	5.2	Xen API		16
6	Featur	es Suppoi	ted	17
	6.1		Features	
	6.2	Virtualiz	ation Features	17
7	Known	Issues		18
8	Append	dix		19
	8.1	Licenses		19
		8.1.1	General Statement	19
		8.1.2	Licenses of the Newly-created Files	19

# 1 Introduction

The Graphics Processing Unit (GPU) has become a fundamental building block in today's computing environment, accelerating tasks ranging from entertaining (gaming, video playback, etc.), GUI acceleration, office applications (such as CAD, photoshop) and high performance computing. Recently, there observes a trend toward adding GPU accelerations to virtual machines provided by popular desktop virtualization. In the meantime, there are also demands for buying GPU computing resources from the cloud. GPU virtualization is becoming a demanding and challenging industry asking.

Intel has brought its answer to this challenge with **XenGT**, which is a mediated pass-through solution based on Intel Gen Graphics hardware using the well-known Xen hypervisor. As illustrated below, XenGT allows running a native graphics driver in VMs to achieve high

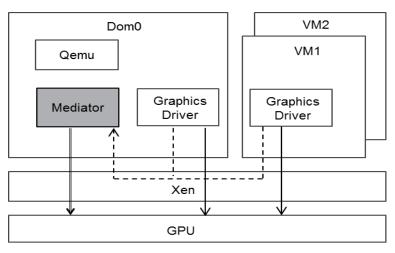

→ Pass-through ---> Trap → Hypercall

performance. Each VM is allowed to access a partial performance critical resource without hypervisor intervention. Privileged operations are trapped and forwarded to the mediator for emulation. The mediator creates a virtual GPU context for each VM and schedules one of them to run on physical Gen graphics hardware. In our implementation, the mediator is a separate driver residing in Dom0 kernel, called *yat driver*.

Currently, XenGT supports 4 accelerated VMs (Dom0 + 3 HVM DomU) running together. We've verified XenGT's functionality using the 64-bit version of Ubuntu 12.04 and 13.04.

# 2 System Requirements

## 2.1 Operating System Requirements

The build and install environment has been validated in using x86\_64 Ubuntu 12.04 and 13.04 as host.

#### 2.2 Hardware Requirements

4<sup>th</sup> generation Intel Processor Graphics is required.

#### 2.3 Software Requirements

#### 2.3.1 Proxy Configuration Setup

If you building package behind firewall, you would need to setup following proxies in order to download needed libraries

```
# export http_proxy=<proxy_server>:<proxy_port>
# export https_proxy=<proxy_server>:<proxy_port>
# export ftp_proxy=<proxy_server>:<proxy_port>
```

To configure the Proxy for apt, you need add following lines into /etc/apt/apt.conf

```
Acquire::http::proxy "<proxy_server>:<proxy_port>";
Acquire::https::proxy "<proxy_server>:<proxy_port>";
Acquire::ftp::proxy "<proxy_server>:<proxy_port>";
```

### 2.3.2 Install Basic Packages in Ubuntu

```
# apt-get update

# apt-get install libarchive-dev libghc-bzlib-dev libghc6-bzlib-dev \

zlib1g-dev mercurial gettext bcc iasl uuid-dev libncurses5-dev kpartx \

libperl-dev libgtk2.0-dev libc6-dev-i386 libaio-dev libsdl1.2-dev \

nfs-common libyajl-dev libx11-dev autoconf libtool xsltproc bison flex \
```

xutils-dev xserver-xorg-dev x11proto-gl-dev libx11-xcb-dev vncviewer \
libxcb-glx0 libxcb-glx0-dev libxcb-dri2-0-dev libxcb-xfixes0-dev bridge-utils \
python-dev bin86 git vim libssl-dev pciutils-dev tightvncserver ssh texinfo -y

# 3 Build and Install Instructions

#### 3.1 Source Repositories

Xen: https://github.com/01org/XenGT-Preview-xen

Linux: https://github.com/01org/XenGT-Preview-kernel.git Qemu: https://github.com/01org/XenGT-Preview-qemu.git

### 3.2 **Building Kernel**

```
# git clone https://github.com/01org/XenGT-Preview-kernel.git
```

# cd XenGT-Preview-kernel/

# git clone git://kernel.ubuntu.com/ubuntu/linux.git linux-vgt

# cd linux-vgt

# git checkout -b v3.8.13.4 v3.8.13.4

# patch -p1 < ../linux-vgt.patch

# cp config-3.8-dom0 .config

# make -j8 && make modules\_install

# mkinitramfs -o /boot/initrd-vgt-3.8.13.4-vgt.img 3.8.13.4-vgt+

# cp arch/x86/boot/bzImage /boot/vmlinuz-vgt-3.8.13.4-vgt

# cp vgt.rules /etc/udev/rules.d

### 3.3 Building Xen and Qemu

```
# git clone https://github.com/01org/XenGT-Preview-xen.git
```

# cd XenGT-Preview-xen/

# git clone https://github.com/01org/XenGT-Preview-qemu.git

# git clone git://xenbits.xen.org/xen.git xen-vgt

# git clone git://git.qemu-project.org/qemu.git qemu-xen

# cd qemu-xen

# git checkout -b v1.3.0 v1.3.0

# patch -p1 < ../XenGT-Preview-gemu/gemu-vgt.patch

# cd ../xen-vgt

```
# git checkout -b RELEASE-4.3 RELEASE-4.3
# patch -p1 < ../XenGT-Preview-xen/xen-vgt.patch
# cp -r ../qemu-xen tools/
# sed -i
'/QEMU_UPSTREAM_URL/s:http\://xenbits.xen.org/git-http/qemu-upstream-4.3-testin
g.git:$(XEN_ROOT)/tools/qemu-xen:' Config.mk
# sed -i
'/QEMU_UPSTREAM_URL/s:git\://xenbits.xen.org/qemu-upstream-4.3-testing.git:$(XE
N_ROOT)/tools/qemu-xen: Config.mk
# ./autogen.sh
# ./configure --prefix=/usr # XEN4.3 changes the default path to /usr/local
# make -j8 xen tools
# cp xen/xen.gz /boot/xen-vgt.gz
# make install-tools PYTHON_PREFIX_ARG=
# rm /etc/ld.so.conf.d/lib64.conf
# Idconfig
```

#### 3.4 Grub Setup

You need manually add a new grub entry in /boot/grub/grub.cfg and make the entry as the default one when booting. Below is a reference grub entry for you.

UUID (2e01a442-d848-4695-b031-9296ce3105b1) and root partition (hd0, msdos1) below are just reference which should be updated according to the user's environment.

menuentry 'Xen-VGT 3.8.13.4' --class ubuntu --class anu-linux --class anu --class os {

```
menuentry 'Xen-VGT 3.8.13.4' --class ubuntu --class gnu-linux --class gnu --class os {
    insmod part_msdos
    insmod ext2
    set root='(hd0,msdos1)'
    search --no-floppy --fs-uuid --set=root 2e01a442-d848-4695-b031-9296ce3105b1
    multiboot /boot/xen-vgt.gz dom0_mem=2048M loglvl=all guest_loglvl=all
    conring_size=4M noreboot
    module /boot/vmlinuz-vgt-3.8.13.4-vgt
root=UUID=2e01a442-d848-4695-b031-9296ce3105b1 rw rd_NO_LUKS rd_NO_LVM
```

LANG=en\_US.UTF-8 rd\_NO\_MD SYSFONT=latarcyrheb-sun16 rhgb crashkernel=auto

KEYBOARDTYPE=pc KEYTABLE=us rd\_NO\_DM ignore\_loglevel console=tty0 console=hvc0 consoleblank=0 log\_buf\_len=4M xen\_vgt.hvm\_boot\_foreground=1 module /boot/initrd-vgt-3.8.13.4-vgt.img

Description of suggested parameters for grub

Configuration option	Description		
xen_vgt.hvm_boot_foreground	Make VM immediately visible on the		
	screen, after creation		
xen_vgt.vgt	Option to enable/disable vgt for Dom0. 0 to		
	disable vgt, 1 to enable vgt(default value)		

## 3.5 Dom0 System Config Setup for XenGT

#### 3.5.1 Starting Xen Services by Default

# update-rc.d xencommons defaults

# 3.5.2 Building Graphic Stack – Optional (Not needed for Ubuntu 13.04)

If you want to run 3D workloads in Dom0, the user mode driver update is required to support 4<sup>th</sup> generation Intel Processor Graphics. It is not a required step if dom0 does not start X.

# apt-get install git build-essential libtool autoconf libpthread-stubs0-dev \
libpciaccess-dev xutils-dev xserver-xorg-dev bison x11proto-gl-dev \
x11proto-xext-dev libxdamage-dev xserver-xorg-dev libx11-xcb-dev \
libxcb-glx0-dev libxcb-dri2-0-dev libxext-dev libexpat1-dev libxcb-xfixes0-dev
If you want to build and install the libraries to system "/usr/" directory directly, you do not need below environment variables. Just simply add option "--prefix=/usr" for "autogen.sh" command. If you do not want to pollute system, please follow below steps:

# export LD\_LIBRARY\_PATH=/opt/hsw/usr/lib

# export

PKG\_CONFIG\_PATH=/opt/hsw/usr/lib/pkgconfig:/opt/hsw/usr/share/pkgconfig/

# mkdir -p /opt/hsw/usr

# cd /opt/hsw

```
# git clone git://anongit.freedesktop.org/git/mesa/drm
# cd drm
# git checkout 171666e4b8127c17c68ea0d44cf4e81ec342f2d0
# ./autogen.sh --prefix=/opt/hsw/usr
# make && make install
# cd ..
# git clone
git://anongit.freedesktop.org/git/xorg/driver/xf86-video-intel
# cd xf86-video-intel
# git checkout b6d2bb961517
# ./autogen.sh --prefix=/opt/hsw/usr
# make && make install
# cd ..
Notice that in above steps we check out a specific revision of x driver. The reason not to
use the latest commit is that the driver has dependence to X. Latest x driver requires you
to build latest Xorg as well. Above commit has proved to work fine with default Ubuntu
12.04 Xorg.
# apt-get build-dep mesa
# git clone git://anongit.freedesktop.org/git/mesa/mesa
# cd mesa
# git checkout a585b8f3a6681d1138ed1a33ed4c3195a53c2a73
# ./autogen.sh --disable-gallium-eql --disable-gallium-gbm --without-gallium-drivers
--with-dri-drivers=i965 --prefix=/opt/hsw/usr
# make && make install
# cd ..
Then use the new driver for your system:
# cd /usr/lib/xorg/modules/drivers
backup original intel drv.so
# In -sf /opt/hsw/usr/lib/xorg/modules/drivers/intel drv.so intel drv.so
# cp newGL.conf /etc/ld.so.conf.d/
```

newGL.conf contains only one line of "/opt/hsw/usr/lib"

# Idconfig

#### 3.5.3 Configuring Xen Bridge

After Dom0 reboots, run following commands to make a bridge "xenbr0" for guest network. (Assume the IP address of system could be acquired via DHCP and the default network interface with network connection is "eth0")

```
# brctl addbr xenbr0
# ifconfig eth0 0.0.0.0 down
# brctl addif xenbr0 eth0
# ifconfig eth0 up
# dhclient xenbr0
```

#### 3.6 Guest Setup

#### 3.6.1 General Setup

You need create an empty image with at least 10GB for guest. Here we take Ubuntu 13.04 guest image as example.

```
# dd if=/dev/zero of=system-10G.img bs=1M seek=10000 count=0
After you get the installation ISO for Ubuntu 13.04 guest, you could set the
xmexample.conf by following section 3.6.2 with 3 changes and start the guest with the
config file.
disk = [ 'file:/path/system-10G.img,hda,w', 'file:/path/to/ubuntu/iso,hdc:cdrom,r' ]
```

vgt=0

Then you could follow the normal procedure to finish the Ubuntu installation.

#### 3.6.2 Guest Config File

boot="d"

You could copy the xmexample.conf from /etc/xen and modify the parameters as following.

```
Kernel = "hvmloader"
builder = 'hvm'
memory = 2048
name = "vgtHVMDomain"
vif = [ 'type=ioemu, bridge=xenbr0' ]
disk = [ 'file:/path/to/image/file,hda,w', ',hdc:cdrom,r' ]
```

```
#device_model = 'qemu-dm'
device_model_version='qemu-xen'
device_model_override='/usr/lib/xen/bin/qemu-system-i386'
sdl=1
openal=1
vnc=0
vncpasswd="
serial='pty'
tsc_mode=0
stdvga = 0
usb=1
usbdevice='tablet'
keymap='en-us'
vgt=1
vgt_low_gm_sz=64
vgt_high_gm_sz=448
vgt fence sz=4
```

#### Description of parameters specific for XenGT

Configuration option	Description
vgt	Enable virtual graphics
vgt_low_gm_sz	The low gm size which is CPU visible.
	For linux guest, it should be at least 64MB
vgt_high_gm_sz	The high gm size which is CPU invisible
vgt_fence_sz	The number of the fence registers, default
	is 4

# 3.7 Linux Guest System Setup for XenGT

#### 3.7.1 Kernel and Modules Update

Assume that you have an Ubuntu  $x86\_64\ 13.04$  image. You could update the kernel and user mode drivers in guest image with following commands:

```
# kpartx -a -v ./ubuntu.img
```

The output will be something like below:

add map loop0p1 (253:0): 0 29638656 linear /dev/loop0 2048

add map loop0p2 (253:1): 0 1075202 linear /dev/loop0 29642750

add map loop0p5: 0 1075200 linear 253:1 2

Mount loop0p1 to /mnt:

# mount /dev/mapper/loop0p1 /mnt/

Follow the steps in Section 3.2 to build Dom0 kernel and modules in guest with "chroot".

# chroot /mnt/

# exit

Alternatively, you could copy the kernel/initrd and modules from Dom0 to guest directly:

# cp /boot/vmlinuz-vgt-3.8.13.4-vgt /mnt/boot/

# cp /boot/initrd-vgt-3.8.13.4-vgt.img /mnt/boot/

# cp -r /lib/modules/3.8.13.4-vgt+ /mnt/lib/modules

Then you could run commands as below to fresh the guest image:

# umount /mnt

# kpartx -d -v ./ubuntu.img

#### 3.7.2 Disabling Grub Graphics Mode

Due to a known issue for XenGT (see section 7), grub graphics mode should be disabled.

You could boot up the guest with "vgt=0" in xmexample.conf and update the

"/etc/default/grub" with following change:

GRUB\_TERMINAL=console

Then run

# update-grub

Then you should add one new entry in "/boot/grub/grub.cfg" for the new kernel and initrd added in section 3.7.1. Now, the image is ready for XenGT. You need set "vgt=1" in the xmexample.conf and start the guest.

# 3.7.3 Graphics Stack Update for Linux Guest – Optional (Not needed for Ubuntu 13.04)

If you want to run 3D workloads in Linux guest, the user mode driver update is required to support 4<sup>th</sup> generation Intel Processor Graphics. You could follow the steps in section 3.5.2 to build the Graphics Stack for Linux guest.

# 4 VM Life Cycle Management

#### 4.1 Guest Creation

To create a Guest, you need a configure file mentioned in section 3.6.2 and use the command:

# xl create xmexample.hvm

# 4.2 Listing Information about Domains

To get the information (ID, name, vCPU, Mem, etc) of all domains, you could use "xl list".

# xl list

Name	ID	Mem	VCPUs	State	Time(s)
Domain-0	0	730	8	r	1139.2
ExampleHVMDomain	7	2048	1	r	1.0

### 4.3 Guest Destroy

Shutting down a Guest should be triggered in Guest and follow the normal procedure for Linux. To destroy a Guest, you could use "xl destroy" with Domain ID or Name, as below: # xl destroy ExampleHVMDomain

# 5 XenGT Control Interfaces

# **5.1** Display Switch

When a Guest is created successfully with vgt enabled, the monitor display will be switched to the Guest with xen\_vgt.hvm\_boot\_foreground set. A sys interface is provided to switch display between domains:

# xl list					
Name	ID	Mem	VCPUs	State	Time(s)
Domain-0	0	730	8	r	3263.5
ExampleHVMDomain	11	2048	1	r	4.7
<pre># cat /sys/kernel/vgt/control/foreground_vm 11</pre>					

You could change the display by echo Domain ID into the sys interface:

```
# echo 0 > /sys/kernel/vgt/control/foreground_vm
# cat /sys/kernel/vgt/control/foreground_vm
0
```

#### 5.2 Xen API

Refer to XenGT-API.txt under xen-vgt on how to use XenGT API interfaces.

# 6 Features Supported

### **6.1** Per-VM Features

Features or Areas	Status
SMP Dom0 and Guest	Supported
2D Blitter	Supported
3D Rendering (Direct3D/OpenGL)	Supported
HW-accelerated Video Playback	Preliminary Supported
Single Monitor (HDMI/VGA/eDP/DP)	Supported
PPGTT	Supported
Dom0 S3	Preliminary supported

# **6.2** Virtualization Features

Features or Areas	Status		
Up to 3 vGT Guests	3 Guests, each with 128MB aperture.		
Render Context Switch	Supported		
Display Switch	It works only if all VMs use the same		
	resolution.		
VM Life Cycle	Supported		
XenGT Interfaces (APIs)	Refer to the API document.		
Monitor Hotplug	Supported		

# 7 Known Issues

- RC6 in BIOS must be disabled and all vGT VMs must be paused and Dom0 must be switched to the foreground VM before Dom0 S3.
- After Dom0 S3, Ubuntu VM may hang for several minutes.
- Dom0 S3 could not work with eDP panel.
- Multiple displays hotplug might have display issue w/ VM.
- eDP panel could not display when Dom0 booted up with eDP, HDMI and DP plugged together.
- Monitor Hotplug does not work for VM on ULT platform.
- Foreground VM switch may not work sometimes.
- Resolution change is not supported.
- 2GB memory is suggested for VM to run most 3D workloads.

"user-session=ubuntu" to be "user-session=ubuntu-2d".

- Dom0 might be unstable with workload running in guest for more than 12 hours.
- Graphics mode of grub2 not working in guest:
   Due to a QEMU bug, grub of Ubuntu guest cannot work on graphic mode. The solution is to disable gfxmode by having "GRUB\_TERMINAL=console" in /etc/default/grub.
- compiz not working:
   compiz may not work in Dom0 and linux guest. You need select "Unity 2D" during UX
   login instead. Or you could just edit "/etc/lightdm/lightdm.conf", change
- keymap might be incorrect in guest config file may need to explicitly specify "keymap='en-us'". Although it looks like the default value, earlier we saw the problem of wrong keymap code if it is not explicitly set.

# 8 Appendix

#### 8.1 Licenses

#### 8.1.1 General Statement

Only newly-created files are explicitly specified with a license here. Any changes to existing files of Xen/Linux/Qemu are subject to the licenses of the files.

#### 8.1.2 Licenses of the Newly-created Files

#### 8.1.2.1 Xen Side

All the newly-created files are under GPLv2:

tools/firmware/hvmloader/vgt\_devtable.h

xen/arch/x86/hvm/vgt.c

xen/arch/x86/vgt.c

xen/include/asm-x86/vgt.h

#### **8.1.2.2** Linux Side

These newly-created files are under GPLv2:

arch/x86/include/asm/xen/x86\_emulate.h

arch/x86/xen/vgt\_emulate.c

arch/x86/xen/x86\_emulate.c

drivers/xen/vgt/debugfs.c

drivers/xen/vgt/dev.c

drivers/xen/vgt/hypercall.c

drivers/xen/vgt/klog.c

drivers/xen/vgt/Makefile

drivers/xen/vgt/sysfs.c

drivers/xen/vgt/trace.h

tools/vgt/klog.c

tools/vgt/Makefile

tools/vgt/README

tools/vgt/vgt\_report

vgt.rules

XenGT-API.txt

These newly-created files are under dual GPLv2/MIT:

drivers/xen/vgt/aperture\_gm.c

drivers/xen/vgt/cfg\_space.c

drivers/xen/vgt/cmd\_parser.c

drivers/xen/vgt/devtable.h

drivers/xen/vgt/display.c

drivers/xen/vqt/edid.c

drivers/xen/vgt/edid.h

drivers/xen/vgt/gtt.c

drivers/xen/vgt/handlers.c

drivers/xen/vgt/instance.c

drivers/xen/vgt/interrupt.c

drivers/xen/vgt/mmio.c

drivers/xen/vgt/reg.h

drivers/xen/vgt/render.c

drivers/xen/vgt/sched.c

drivers/xen/vgt/utility.c

drivers/xen/vgt/vgt.c

drivers/xen/vgt/vgt.h

drivers/xen/vgt/fb\_decoder.c

include/xen/interface/hvm/ioreq.h

drivers/xen/vgt/cmd\_parser.h

include/xen/vgt.h

include/xen/vgt-if.h

include/xen/fb\_decoder.h

#### **8.1.2.3 Qemu Side**

There are 2 newly-created files, which are under dual GPLv2/MIT:

hw/vga-xengt.c

hw/vga-xengt.h