EEZ PSU H24005 Building Instructions

Work in progress

- PCB assembly
- Firmware uploading



1. PCB assembly

The PSU has four PCBs where <u>SMT</u> parts are used to the greatest extent. Only connectors and few specialized parts (e.g. power resistor, PCB mounted AC/DC adapter, post-regulator's power mosfet, etc.) are <u>THT</u>.

SMT parts are selected to be easily mounted with hand soldering and assistance of magnifying glass with light or low magnification microscope. In general, a magnification of x8 to x10 should be more then appropriate for this task. Almost all passive components are of 0805 size and never smaller then 0603. Selected IC packages are SOIC, TSOP, TSSOP and similar that have exposed pins (i.e. no QFN or BGA package are selected).

Only two ICs (IC1, IC16) that has exposed power tab cannot be simply mounted with soldering iron and need hot air soldering station. That requires different skills but one can find many useful videos on the Internet with instructions how to do that efficiently at home without use of e.g. stencil and <u>reflow owen</u>.

1.1. Required tools

- Soldering iron with conical sloped tip <u>example</u>
- Hot air soldering station example
- Solder wire 0.25 mm <u>example</u>, and 0.7 mm <u>example</u> (optionally solder paste, for ICs with exposed power tabs but take into account that its shelf life is very limited even when refrigerated, therefore use small package, <u>example</u>)
- Solder wick / desoldering braid <u>example</u>

- Flux example
- Magnifying glass with light (desktop magnifier with backlight) example or microscope example
- Self-locking tweezers example
- Set of tweezers <u>example1</u>, <u>example2</u>
- Isopropyl alcohol example and paper wipes example for cleaning
- PCB holder example

1.2. Test and measurement equipment

The basic tool used for measurement is an oscilloscope. But, if assembling is performed carefully, that no single mistake has been done, (e.g. wrong part value or place, etc.) a simple DMM will be enough to check basic functionality.

During testing and taking measurements please take into account that channel's negative output (OUT-) is NOT on ground potential. Therefore if you are using multichannel oscilloscope without isolated channels (that is default!) you cannot concurrently connect test probe ground of one channel to the PGND and another one to OUT-. That will interfere with normal operation of CC control loop (IC7, IC8) because the current sense resistor (R69) will be shorted in that way.

1.3. Where to start?

The total number of parts that have to be soldered is almost 800. On the first sight that can easily discourage many, but it's not so bad. First, two most demanding PCBs for power boards are identical and you can try to assemble it side by side following steps mentioned below. The AUX PS is the simplest one but also has AC mains section that require additional care when operating. Finally, physically the biggest one – Arduino Shield is modestly populated but also carry extra parts such as TFT touch-screen display, Arduino board, binding posts, etc. that dictate some other set of assembling rules.

A good start could be to check that all parts from the <u>consolidated BOM</u> are available and sorted by type and values and can be easily accessible. As you have probably already learned, simple SMT parts with 2-3 terminals (passives, diode, transistors) can be easily lost even if you have well arranged and clean benchtop. Therefore instead of crying for lost one, simply order few parts more and take another one when previously selected was just gone. That issue is present with both self-locking and regular tweezers.

There is a few methods of storing and sorting SMT parts like small part snapboxes, envelopes etc. Each of them is valuable as far as it can reduce possibility of replacing one part mistakenly with another. That is especially important for ceramic capacitors (MLCCs) that do not carry value marks.

A discipline of selecting a single value at the time (even in larger quantity) and placing them on proper places is of a paramount importance to ensure that PCBs are assembled correctly and will work properly.

When needed tools, bare PCBs and SMT parts are on disposal, one important task still remain before we can start with PCB assembling – it's how to identify part value since PCB's silkscreens (top and bottom) only carry reference designators (i.e. R..., C..., IC..., etc.).

If you are using Eagle then open .brd file and when populating top layer make sure that among other layers 21, 25, and 27 are visible (see <u>Top assembly selected layers.png</u>). For assembling bottom layer set layers 22, 26, and 28 as visible (see <u>Bottom assembly selected layers.png</u>).

The freeware edition of Eagle also allows you to open .brd file and switch layers on and off.

When installation of the Eagle is not an option, you can use the following images:

- AUX PS r5B9 assembly (top layer).png
- AUX PS r5B9 assembly (bottom layer).png
- Arduino shield r3B4 assembly (top layer).png
- Arduino shield r3B4 assembly (bottom layer).png
- Power board r5B9 assembly (top layer).png
- Power board r5B9 assembly (bottom layer).png


Above mentioned order of PCBs is not mandatory for assembling process but represents a logical sequence since AUX PS is required for powering Arduino shield and Arduino shield is required for controlling Power boards. Suggested order is also sorted by PCB complexity starting with the simplest one. If not otherwise specified, we'd like to recommend that parts are soldered in the following order on the *same* layer:

Small SMT parts (e.g. passives, diodes, transistors, etc.)

- SMT ICs
- · Bulk SMT parts (elco capacitors, power inductors, mosfets and diodes) and
- THT parts (connectors, switches, chokes, etc.)

1.4. Default jumper positions

For various reason on few places on the PCBs a jumpers section are used where zero-ohm resistor is used to define signal path. Some of them define behavior of the circuits (e.g. JP5, JP6, and JP7) and when wired in wrong way or left unpopulated that can create some difficulties and the firmware could not control it properly. To simplify a whole assembly process a clear mark is added next to zero-ohm resistor default position that should insure a proper functionality with current firmware revision. On the picture below above mentioned jumper sections are shown and red rectangle indicate the place for zero-ohm resistor that is in line with "U" shaped mark.

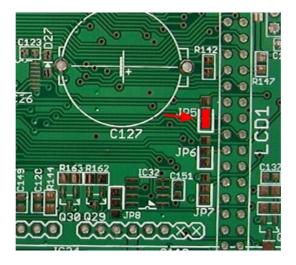

1.5. AUX PS r5B9 assembling

Schematic for this board is shown on sheets 6/12 and 7/12. We'd like to recommend the following steps for assembling this board:

- +5 V power supply built around IC16
- Fan control (Q22, X6)
- AC input terminal and protection
- Soft start/stand-by (Q20, Q21, OK1, OK2)
- AC/DC module (TR2) and
- Ethernet and USB terminals (X7, X11)

The IC16 is one of the few parts that require hot air soldering because of exposed power tab placed beneath its plastic body. It has to be mounted in that way to establish a solid electrical and thermal bond with exposed copper on the PCB's top layer. Otherwise, a permanent damage may occur or erratic operation. Due to that this part should be mounted first. When that is done we can proceed with completion of +5 V power supply section. The X5 connector has to be mounted *after* surrounding SMT parts (D21, R130, R131) otherwise it could be difficult to mount them without damaging X5 by touching it unintentionally with soldering iron body or tip.

When this section is finished and ready for testing do *not* solder TR2 since it's huge and could make mounting of surrounding parts afterward almost impossible. Instead, use external regulated 12 V supply and connect it properly on its terminal 9- and +7. If everything is soldered correctly, a regulated +5 V will appear on X5 pin 10 (+) and 9 (-).

Now we can proceed with fan control. Keep in mind to mount THT part at the end (X6). Testing of this section has to be postponed until Arduino Shield is assembled. Also, it will require preparation of fan cable which comes without connector.

AC input terminal and protection section contains only THT parts that can be carefully soldered on the bottom layer.

Soft start/stand-by triacs Q20 and Q21 are sharing the same heatsink KK1 mounted on its opposite sides using single screw and nut. They can be mounted on before soldering. Another possibility is to

solder heatsink first and then mount on each side a triac and then solder their terminals. Take care that power resistor R107 is of proper type (wirewound) and power rating.

Finally, place TR2 as the latest part on the top PCB layer. Now it's possible to test once again +5 V power supply by carefully applied AC mains on the X4 pin 1, 2 and 5.

On the bottom layer only two parts have to be mounted – Ethernet (X7) and USB (X11) terminals. If you got customized enclosure with pre-drilled holes on its rear panel, we recommend to mount the PCB on the rear panel first (using 14 mm spacers) and then solder that terminals. That will insure that everything fits perfectly.

1.6. Arduino Shield r3B4 assembling

There is no recommended order in which sections on this PCB should be soldered. One possibility is to simply follow the order of sheets in consolidated schematics related to this board (sheet 8/12, 9/12, 10/12, 11/12, and 12/12) and to leave the following parts for the end:

- Power relays (K_SER, K_PAR) due to their dimensions
- Super capacitor (C127) for RTC backup
- Push-in connectors (X12, X14) especially if you'd like to follow suggestion to adjust its distance from the front panel as described below
- 40-pin connector (LCD1) for the TFT touch-screen display
- Front panel power switch (SW1)

The revision r3B4 has few issues that we didn't spot before it went into manufacturing but fortunately all of them can be easily fixed.

Red LED polarity

Let's starts with the simplest one which is related to chosen red color LEDs that are located on the PCB's bottom layer. Polarity marking on the PCB is not in line with HSMH-C170 specification. Therefore you simply need to rotate it while soldering.



Output capacitors mounting

We are using SMT EEEFK1J220P (22 μ F) as output capacitors (C106, C111) that are wider in diameter than THT UPW1J150MED (15 μ F) initially specified. The SMT pads provided on that positions are also for SMT capacitors smaller in diameters. Regardless of that, mentioned type can be easily mounted by simply bending its terminals when it becomes a THT. Now, holes for a THT part can be used for soldering.

Additional output capacitors

An additional capacitor is recommended on the power output. A ceramic 1 μ F, 50 V capacitor is used and damped with 1 Ω resistor. They should be placed as close as possible to the output binding post holes but there is no predicted place for that on this PCB revision. Nevertheless it's simple to add them like this:




Ethernet connector position

The Ethernet connector (X18) is not properly positioned – it is too close to the CH1's heatsink. Due to that it is not possible to insert Ethernet cable that connect output terminal on the rear panel (via X8 on the AUX PS board).

A right angle connector has to be used as specified in the BOM. But, when such connector type is used (see picture below), there is no possibility to put a screw to fix TFT touch-screen display on the lower left corner viewed from the display's back (or lower right corner viewed from the display's front).



Fortunately that is not a big issue since display still can be fixed on all four corners with 11 mm spacers and that will provide enough mechanical strength required to withstand finger pressure on that part of the display:

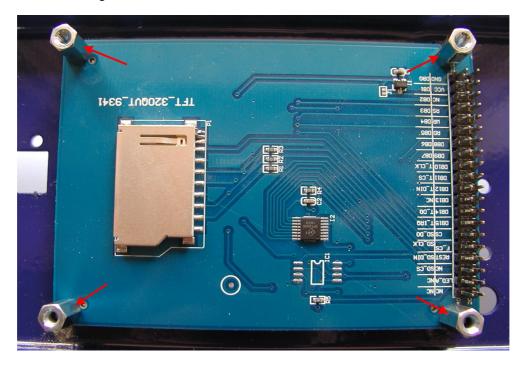


Push-in connectors distance adjustments

Distance between rear side of the front panel and the Arduino Shield PCB is defined by TFT display that is approx. 18 mm:


- 5 mm display thickness
- 1.5 mm display PCB thickness
- 11 mm spacer between display and plastic washer (defined by LCD1 connector height) and

Height of the push-in connectors (X12, X14) is 14 mm and when they are soldered directly on the PCB they will be 4 mm apart from the front panel surface. That does not mean that their pins are not accessible. It's more a question of visual appearance and you can fix that with modified cheap DIL16 sockets. You need to cut them horizontally and insert each half separately since distance between push-in connector's rows is different. You also need to adjust their height to 4 mm (usually that is about 5 mm). That can be done in a matter of minute using a piece of sandpaper.

Insert push-in connectors into modified sockets before soldering. To improve mechanical strength you can also apply e.g. <u>hot glue</u>.

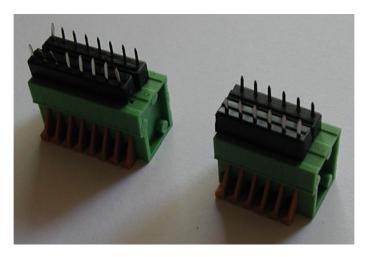

Keep in mind that X12 and X14 have to be mounted on the bottom side of the PCB:

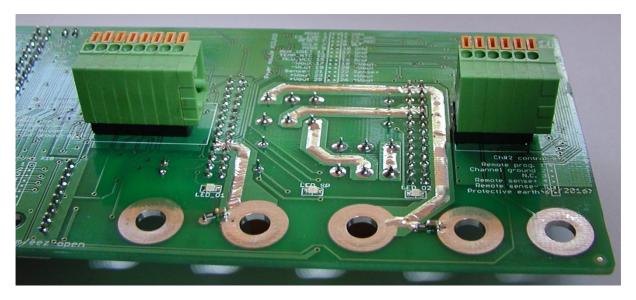

The end result looks like this:



When all SMT parts are mounted, followed by THT parts, we can solder few parts mentioned on the beginning:

- The power relay now should not interfere with mounting of any surrounding parts.
- The super capacitor is polarized as elco capacitors or battery cell. Check its terminals polarity twice before mounting!
- If push-in connectors X12 and X14 is not inserted into sockets, as it's suggested above, then we can now proceed with their soldering on the bottom side of the PCB.
- TFT touch-screen display connector (LCD1) has to be soldered on the bottom side too. If we
 want to be completely sure that it's aligned with display, we can mount display on the
 customized enclosure first, then insert 40-pin connector on display's header, and finally place
 the PCB on top of display. Use plastic washer between 11 mm spacers and PCB and another
 one between PCB and M3 mounting screw. We have to check alignment of the PCB with output
 binding posts holes and when everything is in place 40-pin connector can be soldered.
- Finally, we can mount power switch. Once again, it's recommended to see how it's aligned with
 the corresponding hole on the enclosure's front panel first, then adjust its position and start with
 soldering.

When all parts are mounted and PCB is properly cleaned, an Arduino Due board can be installed. It has to be loaded with appropriate firmware (M2 pre-release or newer) that is configured to work with this board revision. Use its USB named *Programming port* for firmware upload.

If everything is assembled correctly and firmware is successfully uploaded, the welcome screen should appear after reset or new power on. The firmware will proceed with self-test and check peripherals and channels as defined in <code>conf.h</code>, or override with parameters in the <code>user conf.h</code> file.

1.7. Power board r5B9 assembling

According to the number of components and functionality, the Power board is the most complex part of this PSU. We'd like to recommend assembling of this board in the following steps:

- Power pre-regulator
- Bias power supply
- Post-regulator

After each section is completed, perform simple testing described below before continuing with the assembling.

Power pre-regulator

The power pre-regulator circuit is shown on Sheet <u>1/12</u>. We recommend you to start with IC1 that, as in case of IC14, require soldering of exposed thermal pad. A hot air soldering station instead of soldering iron should be used here. This section also require soldering on the PCB's bottom side (L1 and X1). That should not be a problem if you are using PCB holder. If you choose to supply Power board with AC instead of DC input, follow <u>Hack #1</u>.

Once again, keep in mind to mount all smaller parts first and than continue with bulky one such as L2, C18, C16, etc.

When everything is in place, you can proceed with basic testing. Since the board is not fully assembled, it cannot be done without some tricks. The first possible obstacle to check if pre-regulator works properly is existence of Q3 that is used to enter 100% duty cycle when the pre-regulator is bypassed. The IC1 is then effectively switched off and instead of switching frequency a DC signal will be present on Q1 gate (hence the name 100% duty cycle). But, we'd like to test in this step if switching works or not. We have two possibilities here:

- To apply +5 V (use some external source in this stage) to Q3 gate by soldering a thin wire e.g. used for <u>wire wrap</u> to that position or locate pin 13 on IC9 (see Sheet <u>4/12</u>) and do the same or
- simply place zero-ohm resistor on position R13. *Note: don't forget to remove it before start testing the Post-regulator section and IC9 is mounted.*

Before we can apply input power we need to provide some signal on trace *OUT*+. The easiest way is to locate any of pins 23 to 26 on X3 connector. Do not solder X3 connector in this stage because you'll have difficulty with mounting surrounding parts like e.g. R95, R105, C84, Q19, etc.

Again, an external regulated source is needed. We can use the same +5 V used to turn on Q3 or something else with output of up to +40 V. In fact, we can start testing by simply connecting OUT+ to the ground. If OUT+ is grounded we can check with the scope two points to see if pre-regulator works:

First is "hot-spot" (SW, magenta trace) where Q3 drain, power inductor L2 and D5 cathode are connected. Use x10 probe. There is also a place for additional R4 and PCB test point (example) on the PCB where you can hook probe securely. Another test point is *PREG_OUT* (Preg, cyan trace), output from the power pre-regulator.

Fig. 1 shows measurement when +*OUT* is set to 0 V (grounded). Its output voltage will vary depending on connected load and difference between post-regulator output, and power pre-regulator output. Mentioned voltage difference could be about +6.5 V for no load to less then +3 V for full load of 5 A. Fig. 2 is another example without load when +5 V is used for pre-regulator's output voltage programming (measured *PREG_OUT* is +10.8 V).



Fig. 1: Pre-regulator measurements, +VOUT = 0 V (grounded, no load)

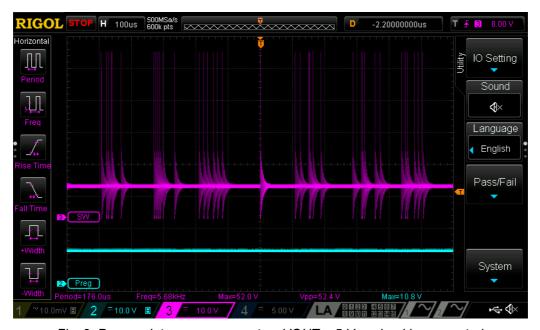


Fig. 2: Pre-regulator measurements, +VOUT = 5 V, no load is connected

Please note that in both cases the SW signal looks erratic but that is only because no load is connected. On Fig. 3 is shown characteristic switching pattern when load is connected (e.g. power resistor of $10~\Omega$).



Fig. 3: Pre-regulator measurements, +VOUT = 5 V with load connected

Finally on Fig. 4 is shown what will happen if Q3 is not turned on. The IC1 will enter 100% duty cycle because chosen values for voltage divider in feedback loop (R12, R15) are set well over pre-regulator input voltage to 56 V while input voltage is not higher then 50 V.

If you'd like to test this scenario be sure that **no load** is connected, otherwise a Q1 SOA could be easily exceeded that can damage Q1 permanently (with unknown consequences for IC1 too).



Fig. 4: Pre-regulator in 100% duty cycle, without load connected

The so-called Low noise mode of operation when pre-regulator works with 100% duty cycle will remove from channel's output hard to filter switching noise. But working in that mode puts real limitation in output power and if the PSU will be used for application where higher output ripple can be easily tolerated it's possible to disable that option by removing Q3 and mount permanently zero-ohm resistor on position R13.

Bias power supply (switching pre-regulator and LDOs)

The sheet 2/12 has to be followed for bias power supply circuit assembling. It does not require any special instructions and when everything is in place we can proceed with basic testing. Please note that power pre-regulator will be now also powered and make sure that no load remains connected on the $PREG_OUT$ from the previous testing. Obviously, the first thing that we can test are output voltages on points +V (IC2), -V (IC3) and +5V (IC5). They should to be within 5 % tolerance +5 V, -5 V and +5 V. Another two points of interest are SW (IC4) and PWRGOOD (IC5). The good place for probing SW signal is pin 1 on TR1 or D10 cathode. Fig 5 shows typical waveform on that point:

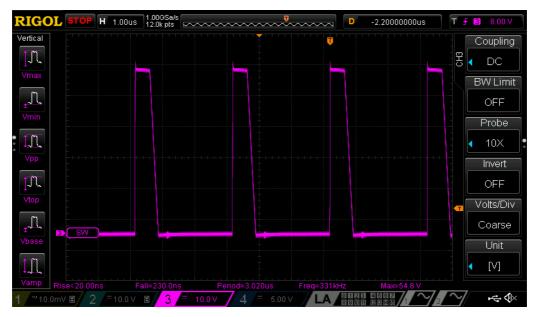


Fig. 5: Bias pre-regulator SW output

It's interesting to see how the *PWRGOOD* relates to change of input voltage. That signal will be actively monitored with MCU and it will push the PSU into Stand-by mode as soon as possible when its changed from high to low level. Fig. 6 and Fig. 7 shows transition while input power is applied and removed.



Fig. 6: PWRGOOD signal transition (Power on)

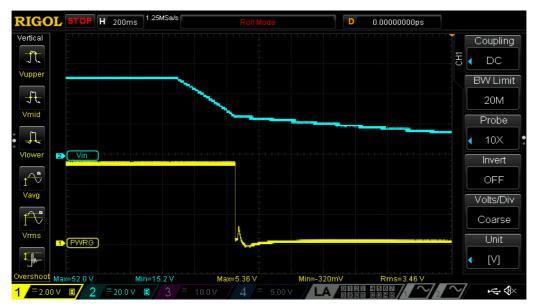


Fig. 7: PWRGOOD signal transition (Power off)

Post-regulator

The post-regulator circuits can be found on Sheets 3/12, 4/12 and 5/12. The power mosfet (Q4) require special attention. It's THT part and before soldering we have to bend its terminals as is shown on Fig. 8.

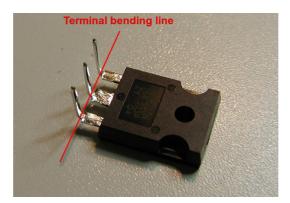


Fig. 8: Q4 preparation for mounting

The Q4 has to be mounted on PCB's bottom layer, and if EEZ H24005 customized enclosure is used, please ensure that distance between its surface area and PCB bottom side is 5 mm. The easiest way to accomplish that is to mount PCB on the heatsink (Fig. 9) using spacers, then mount Q4 (do not forget insulation!), fix it with M3 screw and then start with its soldering.

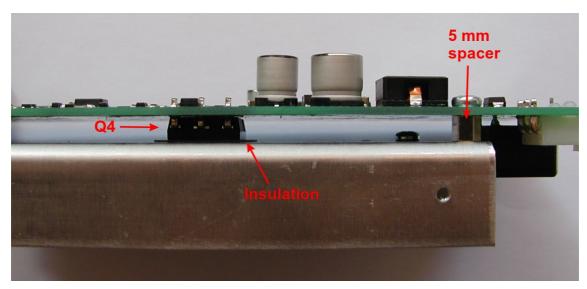


Fig. 9: PCB side view with Q4 mounted on heatsink
When everything is mounted, you can check few points before connecting it with the Arduino Shield that is required for controlling the Power board:

Signal	Value	location	Comment
+VREF	+2.5 V	IC10	Define overall precision
+OUT	around zero	Pin 23-26, X3	
CV_ACTIVE	+5.1 V (logical high)	R88/R92	CV mode active (if U_SERVO is negative)
CC_ACTIVE	+0.6 V (logical low)	R101/R104	
POST_OE	+4.67 V (logical high)	R56	Output is disabled

D15 cathode

D17 cathode

2. Firmware uploading

-1.1 V

+0.28 V

U_SERVO

I SERVO

The PSU firmware is an Arduino sketch. Therefore for its compilation and uploading to the Ardunino Due board that resides on the Arduino Shield you have to install and run cross-platform Arduino IDE which can be downloaded here.

Installing Arduino IDE is not enough in our case because support for ARM boards such as Due is not installed by default. Therefore you have to add ARM Cortex-M3 board support. Navigate to **Tools... Board:... Boards manager** and select for installation *Arduino SAM Boards package*. When it's successfully installed, you can check that as shown in the Fig. 10.

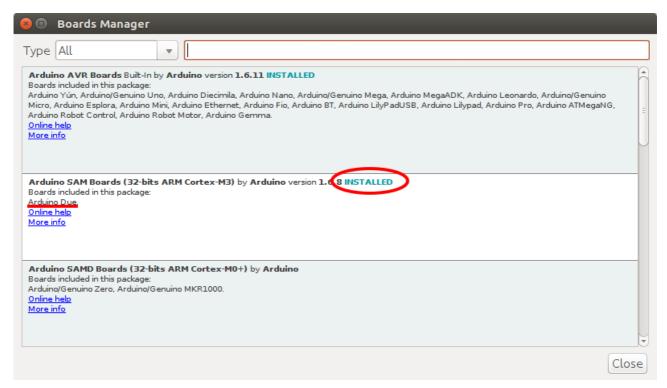


Fig. 10: Arduino boards manager with installed support for Due

Next step is selection of Board and USB since Arduino Due board has two USB ports. We'll use *Programming Port* as shown on Fig. 11.

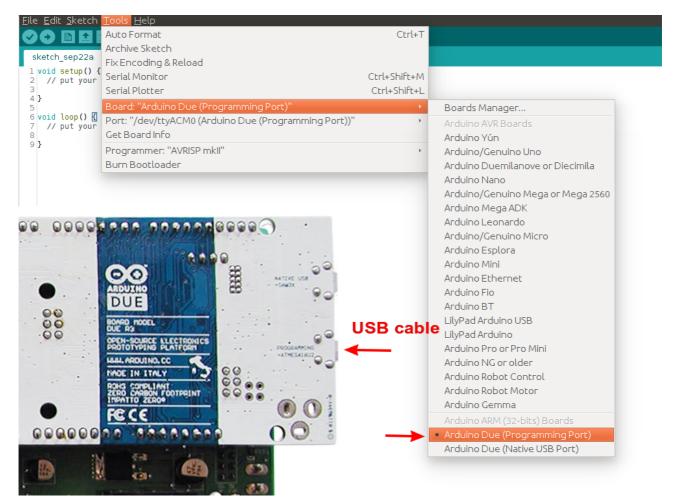


Fig. 11: Arduino DUE USB port selection

The Arduino IDE is now ready for work and we can continue with downloading firmware from the

GitHub repository. The Arduino Shield r3B4 or newer require firmware revision *M2* or higher that is at the time of writing still in Beta and it's not located in so-called *Master branch*. Therefore, if you followed default <u>link</u> you have to switch to *local_control* branch as shown in Fig. 12. Alternatively, you can simply use a link that leads <u>there</u> directly.

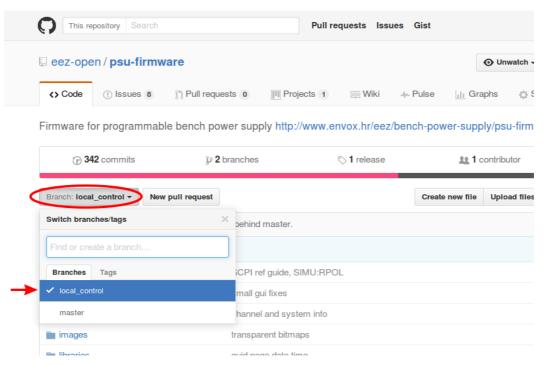


Fig. 12: GitHub branch selection

Move to **Clone or download** option and select **Download ZIP** option to save the latest build on your PC (Fig. 13).

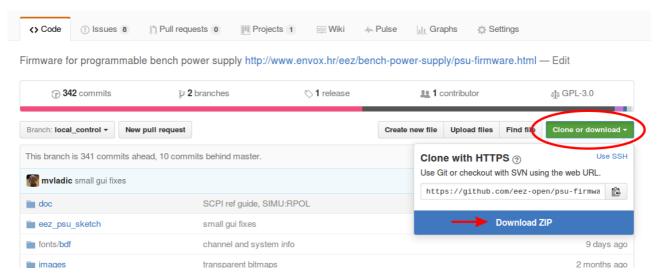


Fig. 13: Firmware download

When downloaded *psu-firmware-local_control.zip* package is extracted, the following folder's tree should be created:

EEZ PSU H24005 building instructions

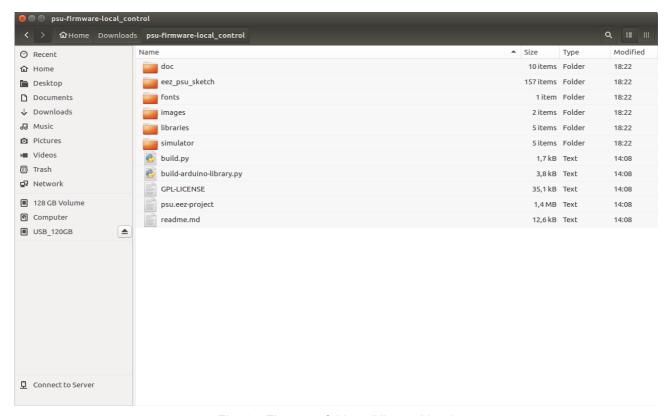


Fig. 14: Firmware folders (Ubuntu Linux)

Contents of two folders will be used for firmware compiling within the Arduino IDE: <code>eez_psu_sketch</code> and <code>libraries</code>. The contents of former one has to be copied into Arduino folder that contain 3rd party libraries. That could be e.g. <code>/home/denis/Arduino/libraries</code> on Linux or <code>My Documents/Arduino/libraries</code> on Windows.

The firmware upload require the following steps:

- · Power Arduino Shield board
- (Re)start Arduino IDE
- Check if proper USB port is selected under Tools... Port:
- Load firmware sketch eez psu sketch.ino (File... Open)
- Start Upload (Sketch... Upload or select the Upload icon on toolbar)
- When the upload process will ends up with an error as shown on Fig. 15 press the RESET button on Arduino Shield board or Arduino Due

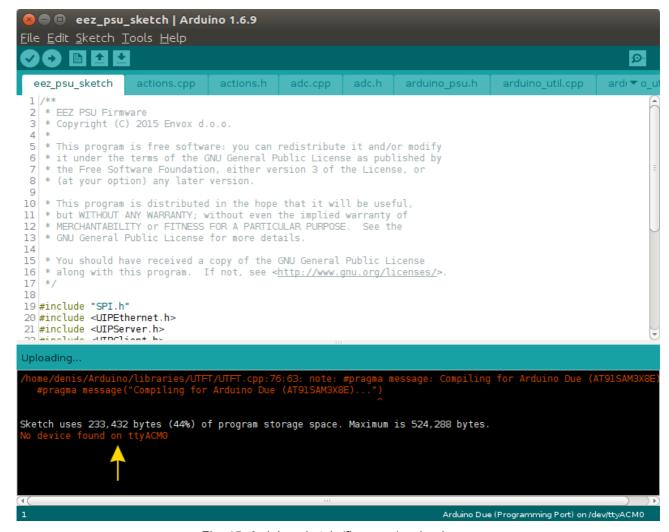


Fig. 15: Arduino sketch (firmware) upload error

• Start the upload procedure once again. If Arduino board is successfully reset upload progress bar will appear after compiling (Fig. 16).

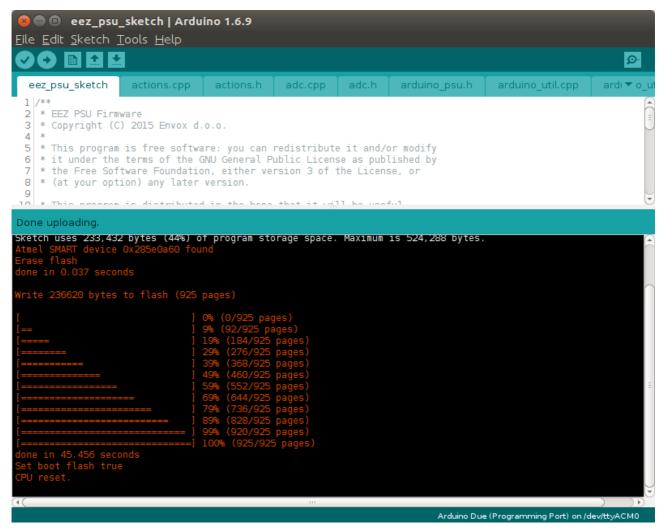


Fig. 16: Arduino sketch is successfully uploaded

• You have to reset Arduino once again regardless of the message "CPU reset" that will appear at the end of the uploading process.

On first start the initial touchscreen calibration page (Fig. 17) will be displayed otherwise a welcome page (Fig. 18) will be displayed for few seconds. You cannot skip this test since without calibrated touchscreen interaction could be erratic or even impossible.



Fig. 17: Initial screen calibration on first power on



Fig. 18: Welcome page

When initial touchscreen calibration is finished, the self-test will be initiated and it is a good indicator that all control over all circuits can be established. If self-test is passed, no additional message will be displayed, and firmware will proceed with the main page (Fig. 19).

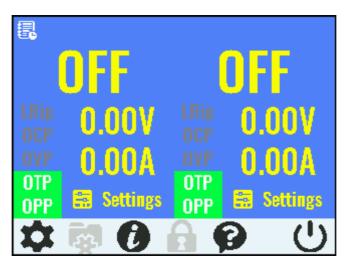


Fig. 19: Main page

Work in progress