

VIRTUATILT - VISUAL PINBALL X SETUP

Following some basic instructions to have your new VirtuaTilt up and running with Visual Pinball X.


DOF Installation

IMPORTANT: **DOF (Direct Output Framework) is needed if you want to experience a real pinball simulation with all feedback devices in Visual Pinball X. Latest DOF version is required for Pinscape**


Pico support: <http://mjrnet.org/pinscape/dll-updates.html>

You need **B2S Server** installed first. If you have already installed it, skip this part.

For first-time users, download latest version from here: <https://github.com/vpinball/b2s-backglass/releases> and unblock it:

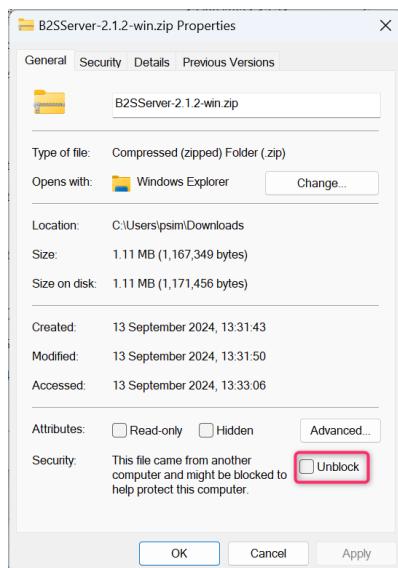


Unzip the B2SServer archive in VisualPinball folder (typically **C:\vPinball\VisualPinball\Tables**) and run the **B2SBackglassServerRegisterApp.exe** as Administrator (right-click). This registers the software as a COM object:


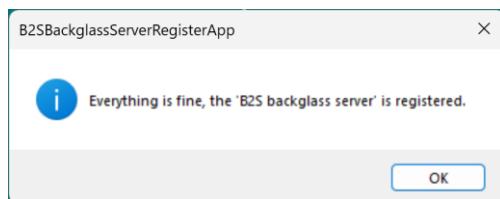


Latest version of DOF allows merging of X86 and X64 installs, so you can safely install both versions.



Install DOF using .msi files from official page: <http://mjrnet.org/pinscape/dll-updates.html> and launch it:

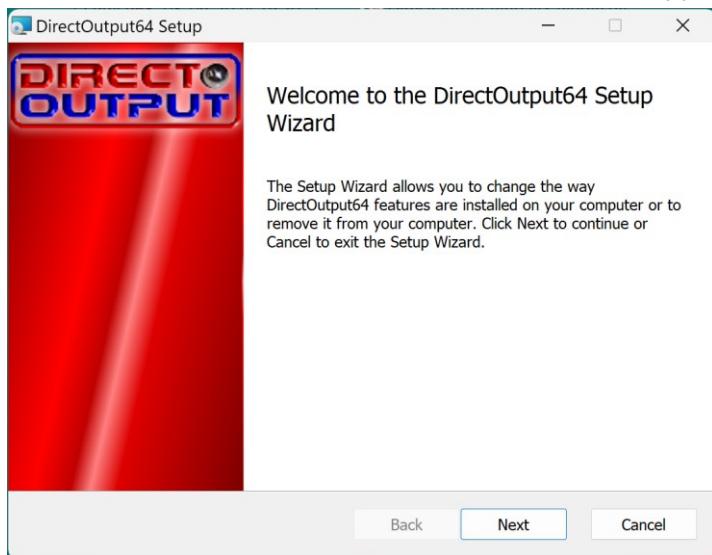

Leave installation folder as-is (**C:\DirectOutput**). Highly recommended:

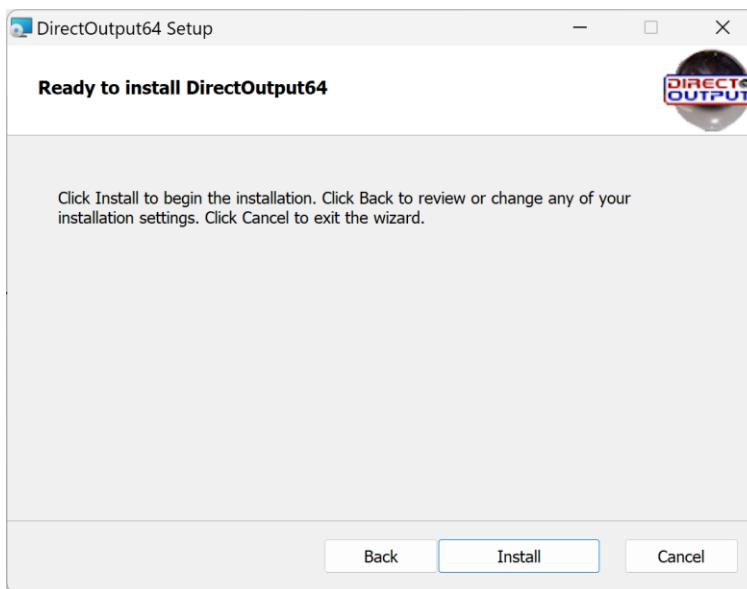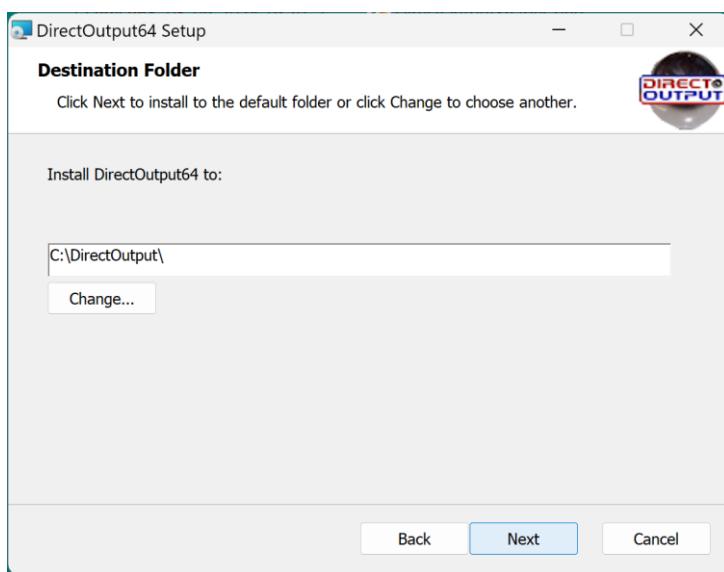

Do not care about the following error (it should appear if you don't have B2S Server installed) and click OK:

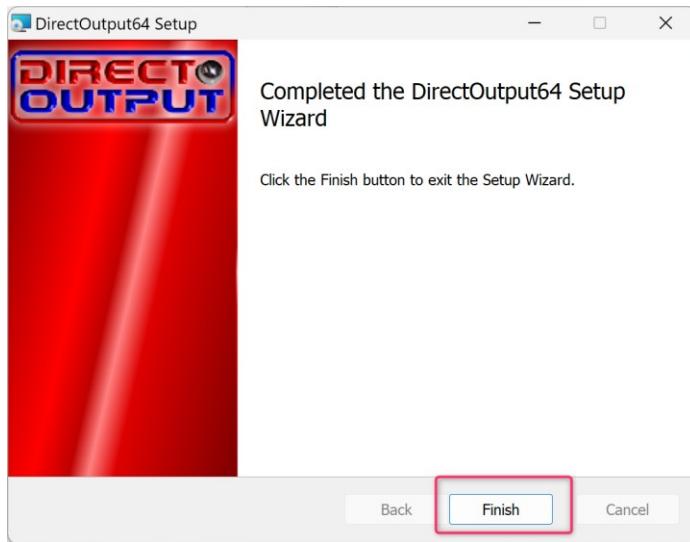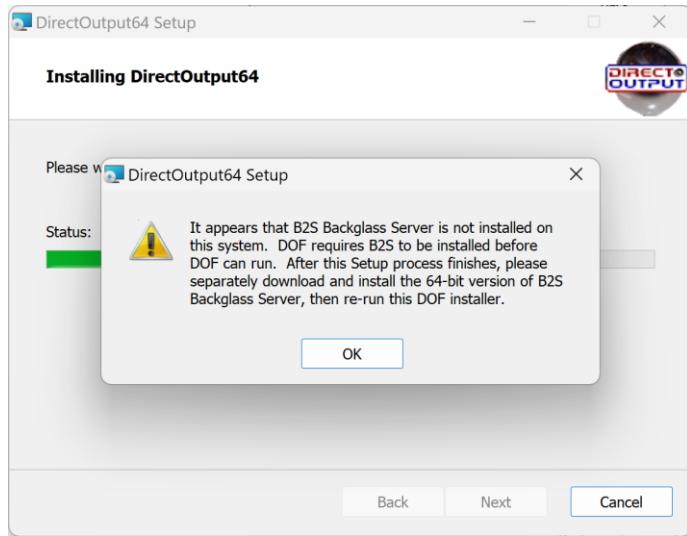


This is how the \DirectOutput folder will look like:

A screenshot of a Windows File Explorer window showing the contents of the \DirectOutput folder. The path is C:\This PC\Local Disk (C:)\DirectOutput\. The table lists the following files and folders:

Name	Date modified	Type	Size
Config	13-Sep-24 12:46	File folder	
x64	13-Sep-24 12:46	File folder	
DirectOutputShapes.png	07-Mar-18 17:58	FastStone PNG File	6 KB
DirectOutputShapes.xml	07-Mar-18 14:59	XML File	40 KB
LICENSE	30-Jan-18 13:09	File	2 KB

A shortcut to DirectOutput folder in **\Plugins64** folder of B2SServer installation should be present (created by DOF setup):

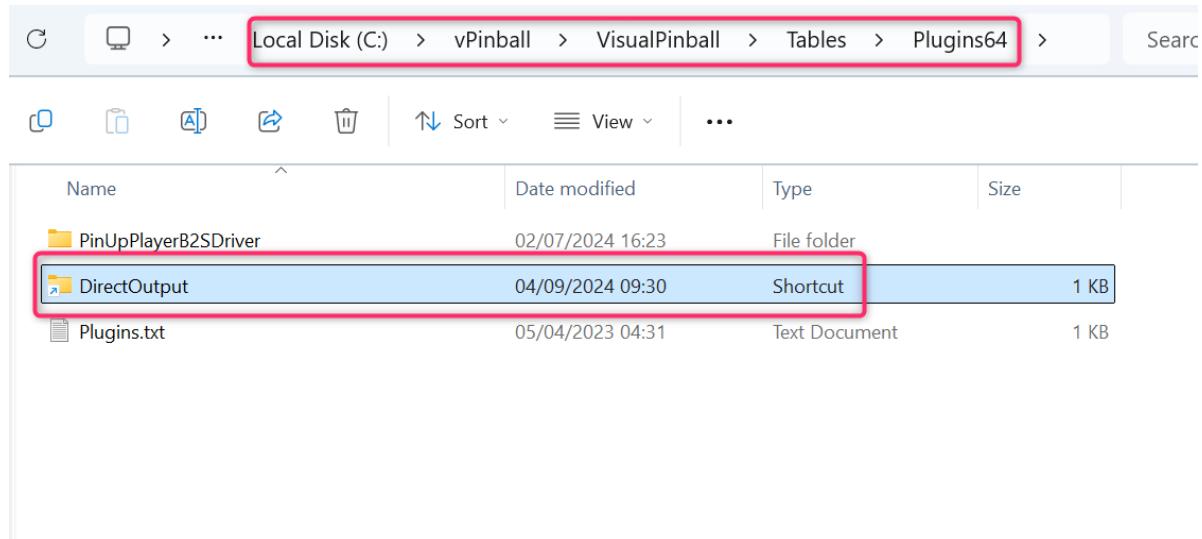


If not, manually create a shortcut to **DirectOutput** folder and put it in **Plugins64** folder of B2SServer installation.


As a reference, the official step-by-step guide for DOF configuration is available here: [Pinscape Build Guide \(mjrnet.org\)](https://mjrnet.org/).

Configure DOF for VirtuaTilt


To configure DOF you need to set up a configuration file. You can create an account and login to the [DOF Config tool](#) webpage or [you can just download provided config files from our GitHub repository \(including cabinet file\)](#), unblock the file and copy/move the files into **C:\DirectOutput** directory (or wherever DOF is installed on your PC), overwriting existing files:

Version	Submitted By	Approved By	Table	Comment	Recorded
5213	Mecols	outhere	JAWS 50TH Anniversary	Jaws	Sep 7, 2025

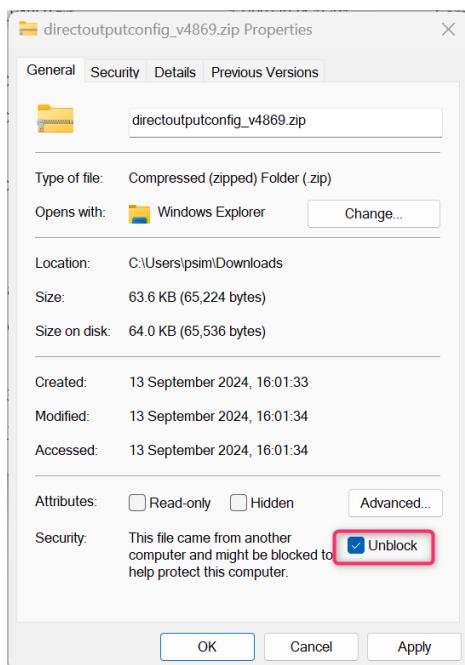


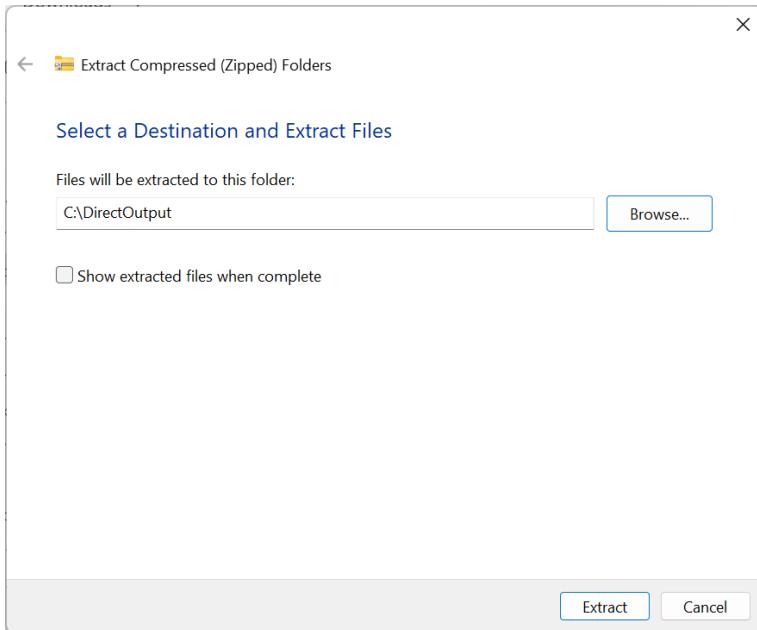


This is how the **DirectOutput** folder will look like:

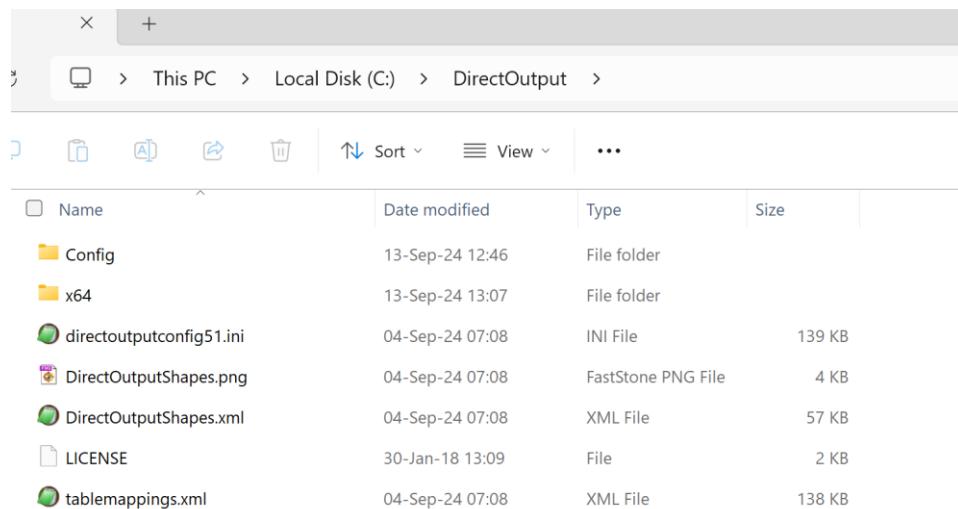


Now right-click **GlobalConfigEditor.exe** file in **/DirectOutput/X64** and in **/DirectOutput/X86** folder and launch it as Administrator:

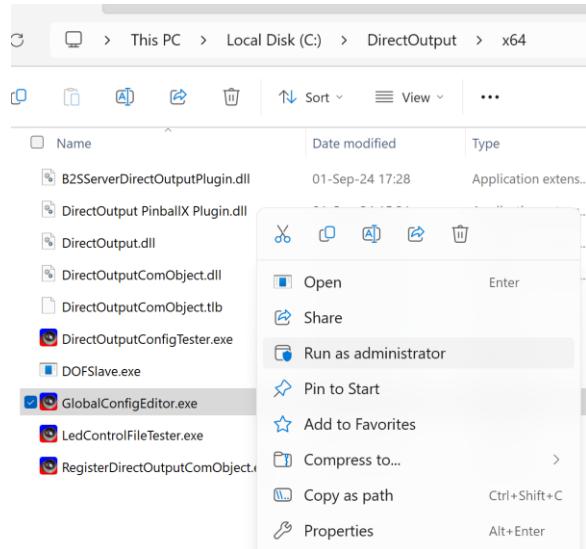


Configure .ini file path where you previously unzipped our config file (**C:\DirectOutput**):

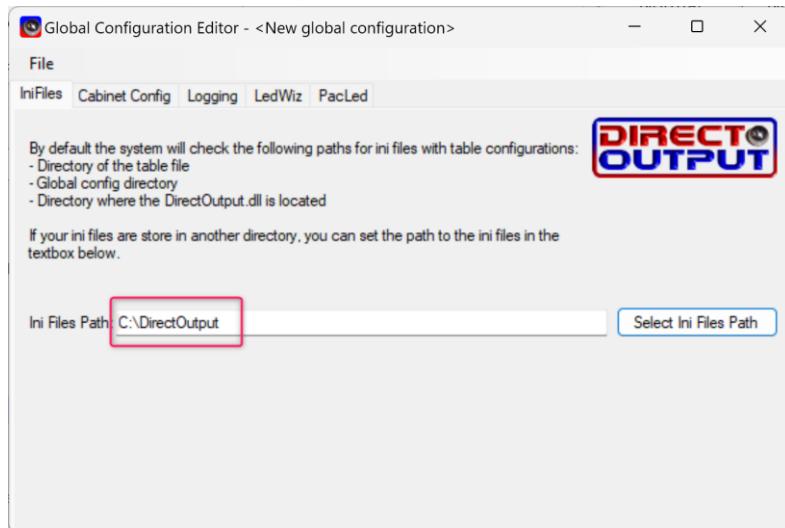


Close the window and press **Yes** to save all changes:

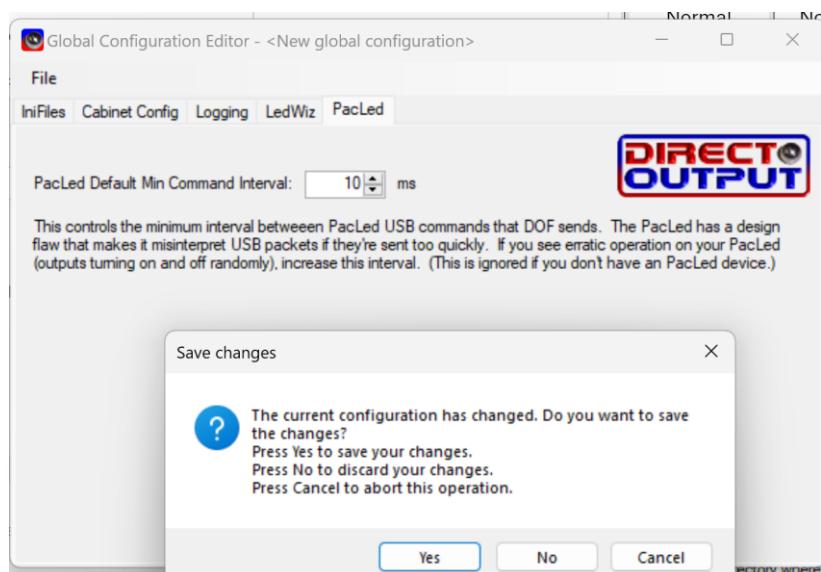

Start Visual Pinball and load a table that has a matching B2S backglass file installed; right-click the mouse anywhere in the backglass area to bring up the B2S options dialog:

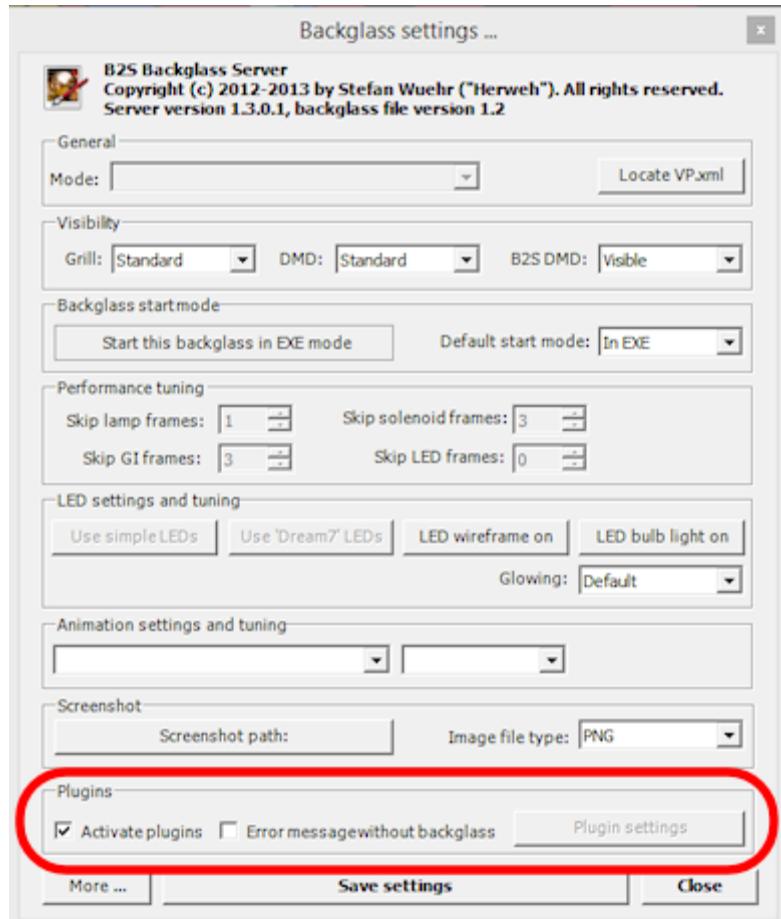

Check the box **Activate plugins** and uncheck the box **Error message without backglass**.

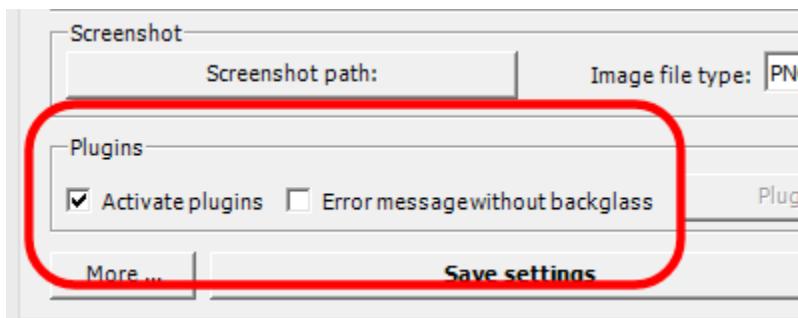


Make sure that **Activate plugins** flag is checked and **Error message without backglass** flag is un-checked

- Click Save Settings
- Exit the table (press "Q" and then "Q" again) and close VP


Now start VisualPinball and load a table that has a B2S backglass. You can use the same table you used during the setup procedure in the step where we updated the B2S backglass settings.

As before, when the backglass appears, right-click the mouse anywhere in the backglass display area to bring up the options dialog. Look to see if the **Plugins** button at the bottom is **enabled**:

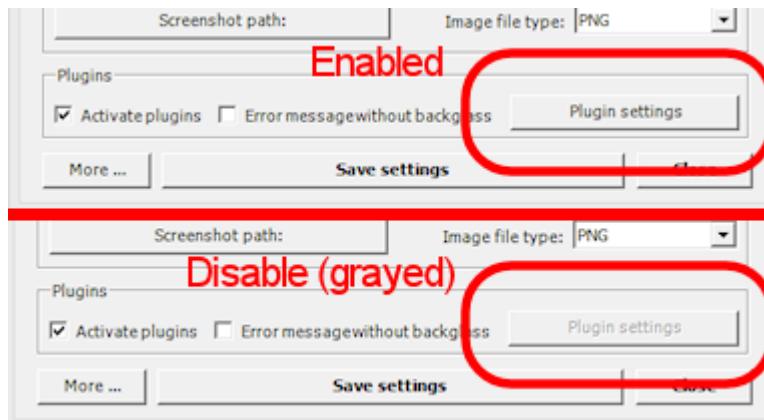

If the button is disabled, DOF isn't getting loaded. Go to the official [troubleshooting](#) section for things to try.

If the button is enabled, click it. This will bring up a separate dialog that shows the status of each plugin.

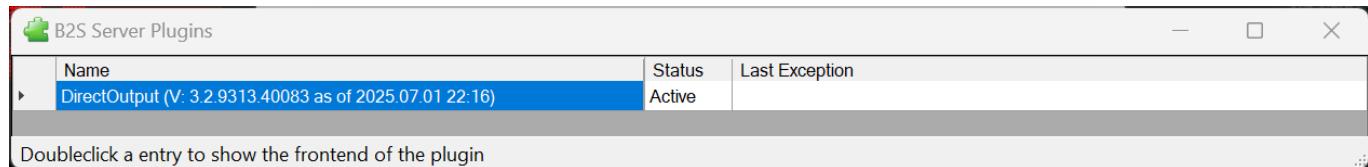

Look for a **DirectOutput** entry in the list. If you don't see any such entry, it means the same thing as a disabled Plugin Status button, namely that DOF isn't being loaded. Go to the official [troubleshooting](#) section for help.

Finally, check the **Status** and **Last Exception** columns for the Direct Output entry.

If the Status is **Disabled**, or there's a message in the Last Exception box, see the official [troubleshooting](#) section for help.

If the Status is **Active** and the Last Exception column is empty, congratulations! Your DOF setup work was successful! DOF is loading and starting correctly.

DOF Configuration Change

IMPORTANT NOTE: If you don't want to mess with following DOF configuration, you can just download

VirtuaTilt cabinet file from our GitHub and import it on DOF Config Tool:

<https://github.com/3DPTronics/VirtuaTilt/tree/main/DirectOutput>

The screenshot shows the GitHub interface for the `VirtuaTilt / DirectOutput` repository. The left sidebar shows a tree view of files: `main`, `Configurations`, `DOFLinx`, `DirectOutput` (which is selected), and `Images`. The `DirectOutput` folder contains `VirtuaTilt.json`, `directoutputconfig_v5213.zip`, and `readme.md`. The main area displays a list of files with their last commit messages and dates. A commit from `f03d984` is shown as updated to v5213.

The screenshot shows the DOF Config Tool V3.0 interface. The left sidebar has sections for Home, Stats, History (Latest Version: 5213), Feedback, Tables (Configurations, Templates), Cabinet (Manage, Variables, Combine Toys, Devices, Port Assignments), and a search bar for 'Tables'. The main area is titled 'Manage Cabinets' and shows a modal window for 'Import Cabinet...'. The modal has a 'Cabinet File' input field with a 'Drag & Drop your files or Browse' placeholder, an 'Import Cabinet' button, and a 'Cancel' button. To the right of the modal, there's a context menu with options like 'Actions', 'Rename', 'Regenerate API Key', 'Export Cabinet', 'Import Cabinet...', and 'Transfer Cabinet'. The 'Actions' option is highlighted with a red box.

Once imported, you can generate your updated config file which contains all latest tables:

The screenshot shows the DOF Config Tool V3.0 interface. The left sidebar is identical to the previous screenshot. The main area is titled 'Devices' and shows a configuration for 'VirtuaTilt Pico'. It includes dropdown menus for various components: Ledwiz, FRCM-KL25Z, PinOne, PacDrive, Pacted, Ultimate/I/O, WS2811, SainSmart, Pinscape, Philips_Hue, Pincontrol1, Pincontrol2, and DudesCab. Below these are 'Options' for 'Generate NoFeedback Files' (set to 'No') and 'Remove Fade from Front Buttons' (set to 'No'). At the top right of the main area, there are 'Switch cabinet' and 'Generate config' buttons, with 'Generate config' also highlighted with a red box.

Select your device

If you want to change the default DOF configuration for VirtuaTilt, you need to create an account and login to the [DOF Config tool](#) page.

Once you have an account setup, go to **Devices** and select the number of devices for your setup.

- Select **1** for number of **PinscapePico** devices and then click on **Update**:

The screenshot shows the 'Devices' section of the DOF Config Tool. On the left, there's a sidebar with various sections like Home, Stats, History, Feedback, Tables, Configurations (0 modified), Templates (0), Cabinet (Manage, Variables, Combine Toys, Devices 1 selected), and Port Assignments. The main area is titled 'VirtuaTilt Pico' and contains a grid of device configurations. The 'PinscapePico' row has a dropdown menu with '1' selected, which is highlighted with a red box. Other rows include Ledwiz, FRDM-KL25Z, PinOne, PacDrive, PacLed, Ultimate/IO, WS2811, SainSmart, Philips_Hue, Pincontrol1, Pincontrol2, and DudesCab. At the bottom of the main area, there are 'Options' buttons for 'Generate NoFeedback Files' (set to 'No') and 'Remove Fade from Front Buttons' (set to 'No'). A blue 'Update' button is located in the top right corner of the main panel.

Creating a config file

When creating a config file for your setup, it's simply a matter of selecting the outputs for each device in your cabinet. VirtuaTilt is already configured this way:

- **Port1** – Solenoid – Combo for bumpers and slingshots
- **Port2** – Shaker Motor
- **Port3** – Left Flipper Solenoid
- **Port4** – Right Flipper Solenoid

[Home](#)
[Stats](#)

1481 Tables

[History](#)

Latest Version: 5211

[Feedback](#)
[Tables](#)
[Configurations](#)

0 modded

[Templates](#)

0

[Cabinet](#)

^

[Manage](#)

2

[Variables](#)
[Combine Toys](#)

1

[Devices](#)

1

[Port Assignments](#)
[Donate](#)

© 2025 - All Rights Reserved.

[Releases](#) | [FAQs](#) | [Privacy](#) | [Terms](#)

Port Assignments

[Switch cabinet](#)
[Generate config](#)
[More Actions...](#)

VirtuaTilt Pico

[Clear](#)
[Update](#)

Device: PinscapePico 1 - directoutputconfigini120

P:001	Combo1	▼	P:033	▼	P:065	▼	P:097	▼
P:002	Shaker	▼	P:034	▼	P:066	▼	P:098	▼
P:003	Flipper Left	▼	P:035	▼	P:067	▼	P:099	▼
P:004	Flipper Right	▼	P:036	▼	P:068	▼	P:100	▼
P:005		▼	P:037	▼	P:069	▼	P:101	▼
P:006		▼	P:038	▼	P:070	▼	P:102	▼
P:007		▼	P:039	▼	P:071	▼	P:103	▼
P:008		▼	P:040	▼	P:072	▼	P:104	▼
P:009		▼	P:041	▼	P:073	▼	P:105	▼
P:010		▼	P:042	▼	P:074	▼	P:106	▼
P:011		▼	P:043	▼	P:075	▼	P:107	▼
P:012		▼	P:044	▼	P:076	▼	P:108	▼
P:013		▼	P:045	▼	P:077	▼	P:109	▼
P:014		▼	P:046	▼	P:078	▼	P:110	▼
P:015		▼	P:047	▼	P:079	▼	P:111	▼
P:016		▼	P:048	▼	P:080	▼	P:112	▼
P:017		▼	P:049	▼	P:081	▼	P:113	▼

The **Combo1** config is assigned to knocker, slingshots and bumpers:

[Home](#)
[Stats](#)

1481 Tables

[History](#)

Latest Version: 5211

[Feedback](#)
[Tables](#)
[Configurations](#)

0 modded

[Templates](#)

0

[Cabinet](#)

^

[Manage](#)

2

[Variables](#)
[Combine Toys](#)

0

[Devices](#)

1

[Port Assignments](#)
[Donate](#)

Toy Combo Management

[Switch cabinet](#)
[Generate config](#)

VirtuaTilt Pico

[Edit](#)
[Delete](#)

ID

Name

Toy Category

Toys

 8 Bumper Center
 8 Bumper Left
 8 Bumper Right
 8 Bumper Back
 Knocker
 Slingshot Left
 Slingshot Right
 10 Bumper Back Left
 10 Bumper Back Right
 10 Bumper Middle Center

Create New Combo

[Add](#)

Combo Name:

You can change it according to your personal preferences. To do this, simply navigate to the **Combine Toys** section in the config tool and enter your new combos.

NOTE: Shaker Motor Intensity is already set at Maximum (**48**). You can change it according to your personal preferences:

The screenshot shows the DOF Config Tool V3.0 interface. On the left, there's a sidebar with various sections like Home, Stats, History, Feedback, Tables, Configurations, Templates, Cabinet, Manage, and Devices. Under Manage, 'Variables' is selected and highlighted with a yellow box. The main area is titled 'Variables' and shows configuration for 'VirtuaTilt Pico'. It includes sections for Shaker Motor (Min: 48, Max: 48), Fan (Min: 1, Max: 48), Toy Durations (ms) (Chime: 60, Knocker: 60, Bell: 60), Custom Brightness (Strobe: 48, PF Strobe MX: FF, Flasher: FF, LED Strip Flasher: FF), and Contactor (Target Duration: 60, Target Intensity: 48, Drop Duration: 60, Drop Intensity: 48). A note at the bottom says 'Set Intensity and Duration to 0 if you don't want feedback to these events'. At the top right, there are 'Switch cabinet' and 'Generate config' buttons.


Generate and Import your DOF config



Once you have everything set in the config tool, click the **Update** button, then **Generate Config** button:



This screenshot is nearly identical to the one above, showing the DOF Config Tool V3.0 Variables page for 'VirtuaTilt Pico'. The configuration values remain the same. The 'Generate config' button in the top right corner is now highlighted with a red box, indicating the next step in the process.

The screenshot shows the DOF Config Tool V3.0 interface. At the top, it displays "Generating Configuration Files..." with a large circular progress bar. The left sidebar contains navigation links like Home, Stats, History, Feedback, Tables, Configurations (0 modded), Templates (0), Cabinet, Manage (2), Variables, Combine Toys (1), Devices (1), and Port Assignments. A "Donate" button is located at the bottom left of the sidebar.

This will download a copy of the configuration files onto your PC. All you need to do now is to extract the zipfile into your **C:\DirectOutput** directory (or wherever DOF is installed on your PC) and overwrite all files:



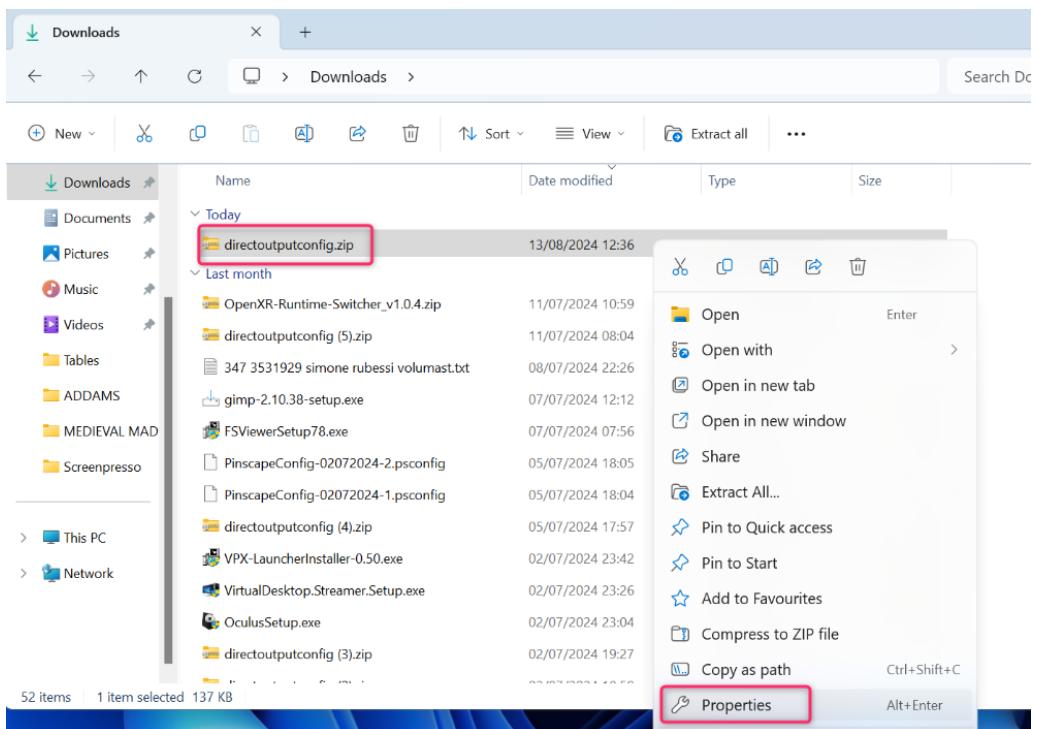


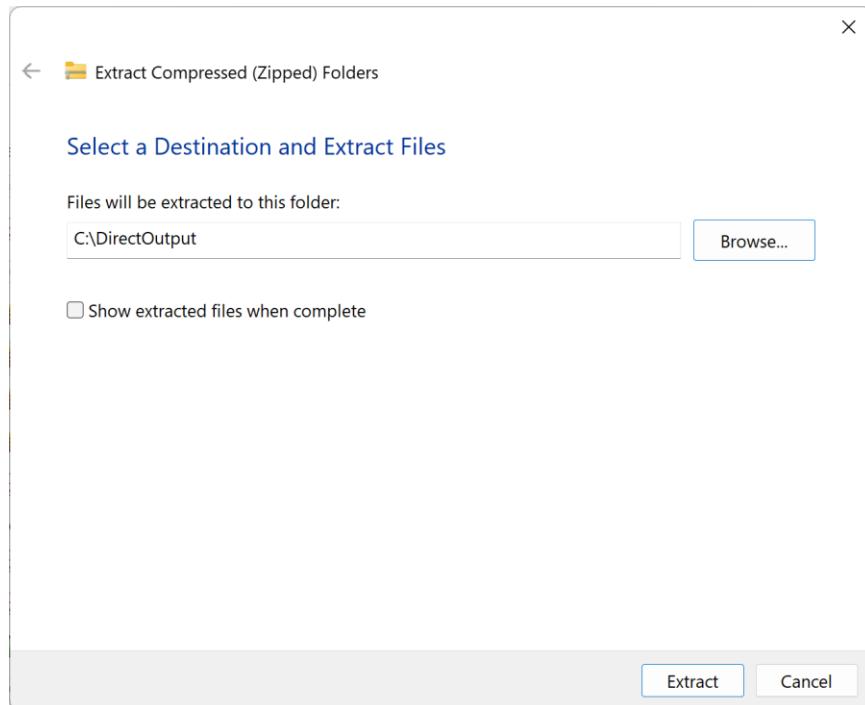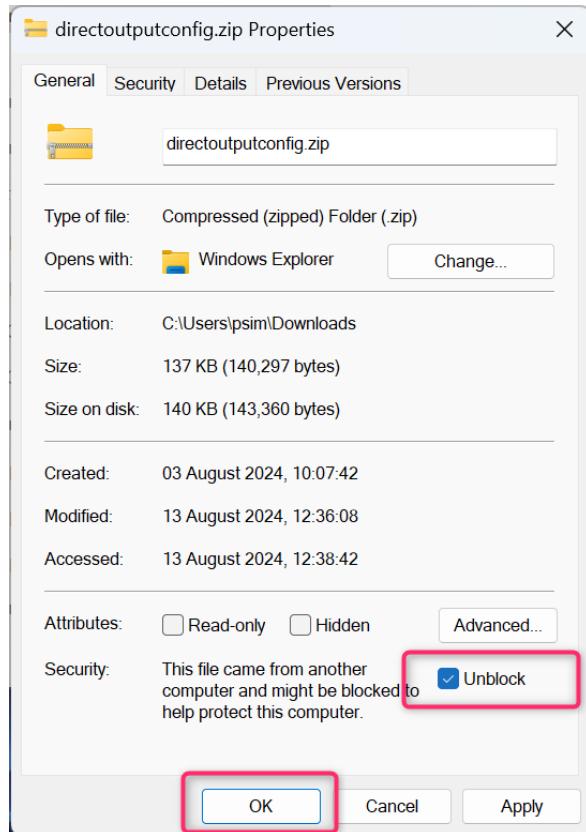

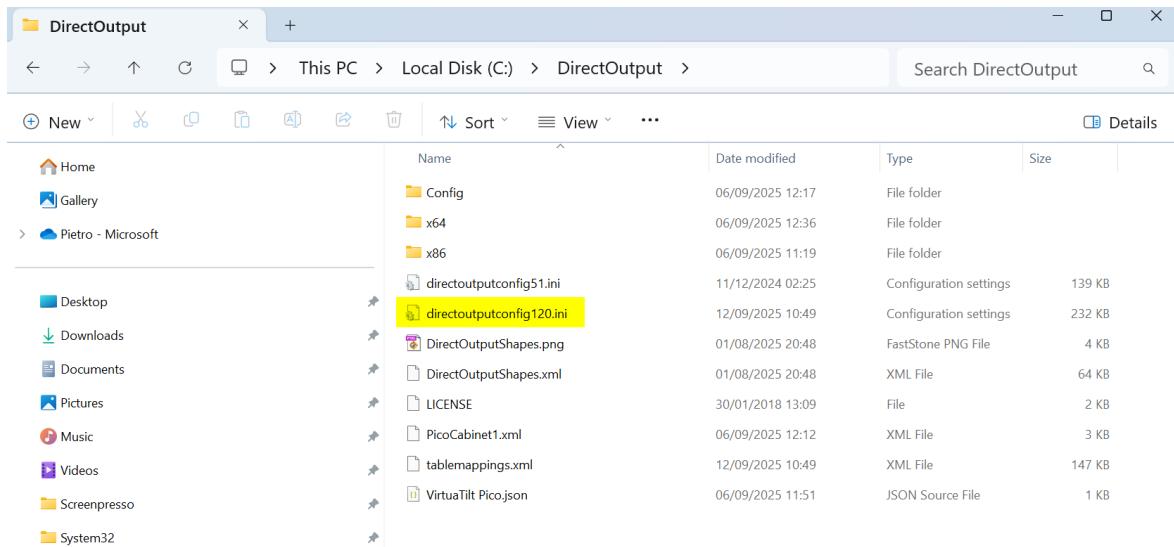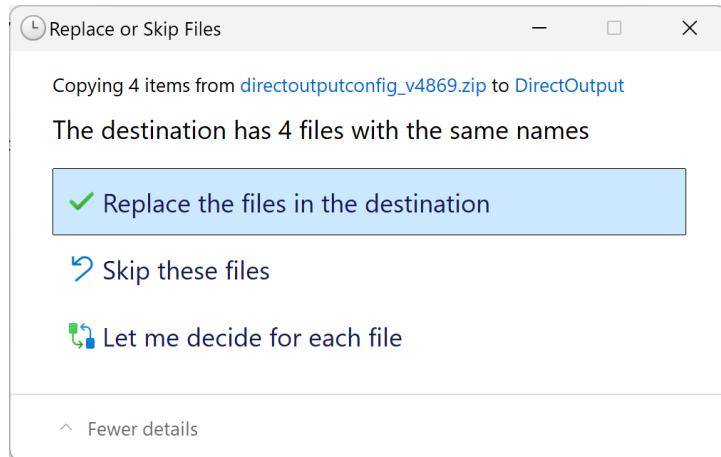


Visual Pinball X configuration

Load in Pinscape Pico Config Tool the **VTConfig-VPX-DOF.json** profile first:

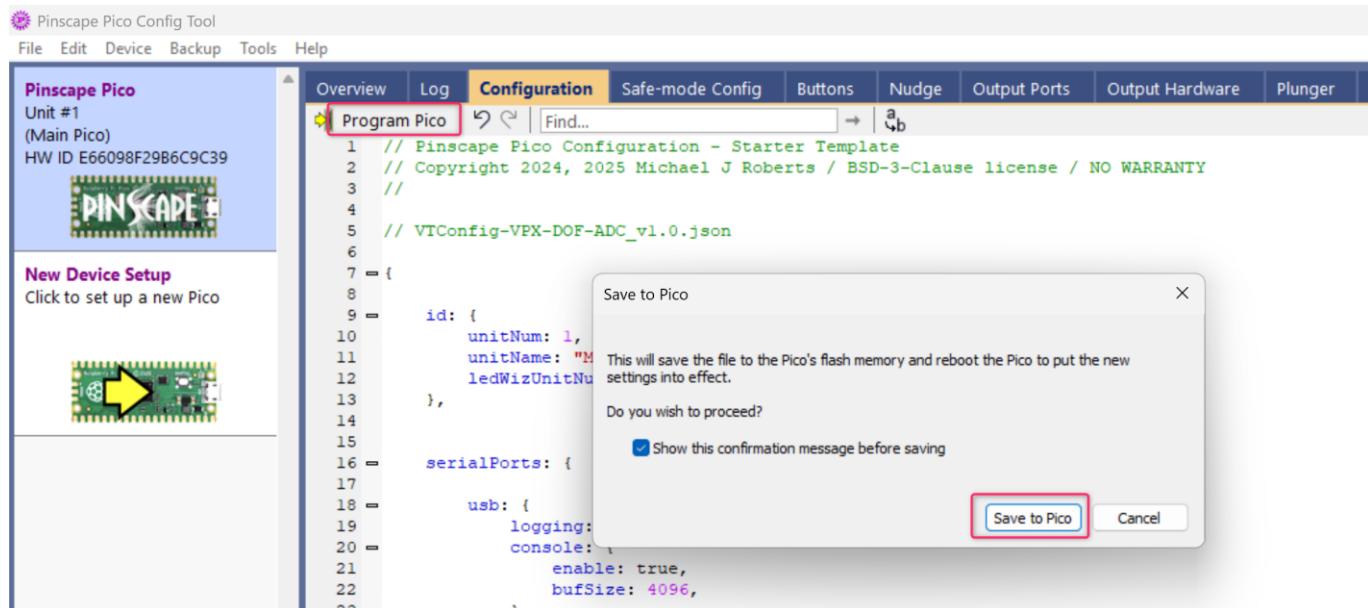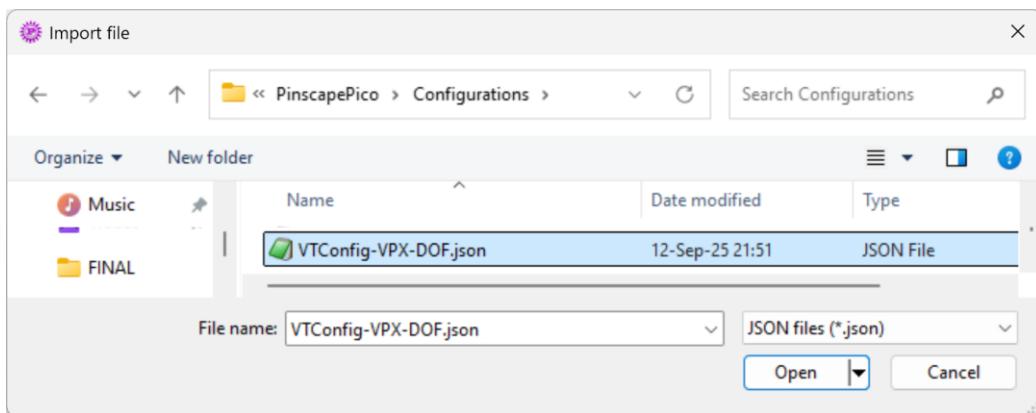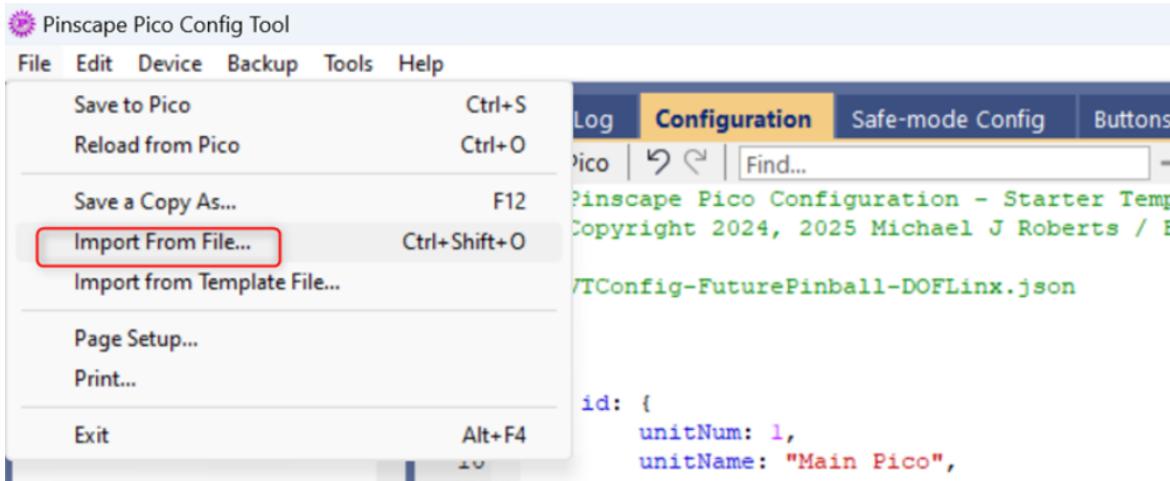


Replicate the following configuration in Visual Pinball X settings:

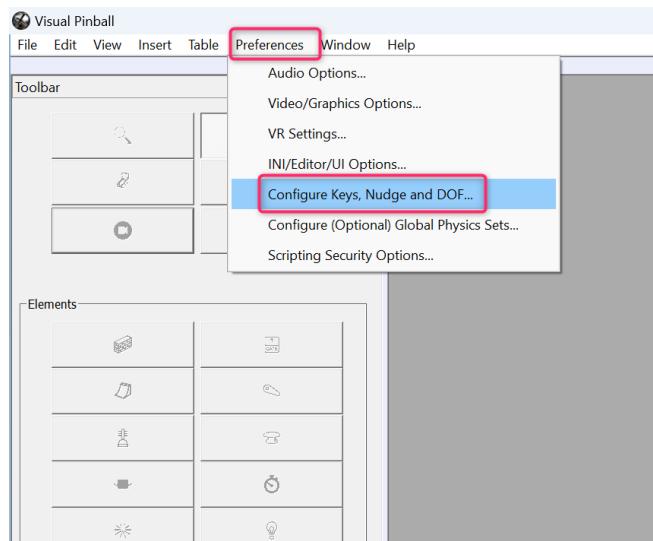

We're using the new **Open Pinball Device HID Interface** for Nudge and Plunger. Pinscape Pico firmware fully supports it!


VPX 10.8.1.XXXX Settings

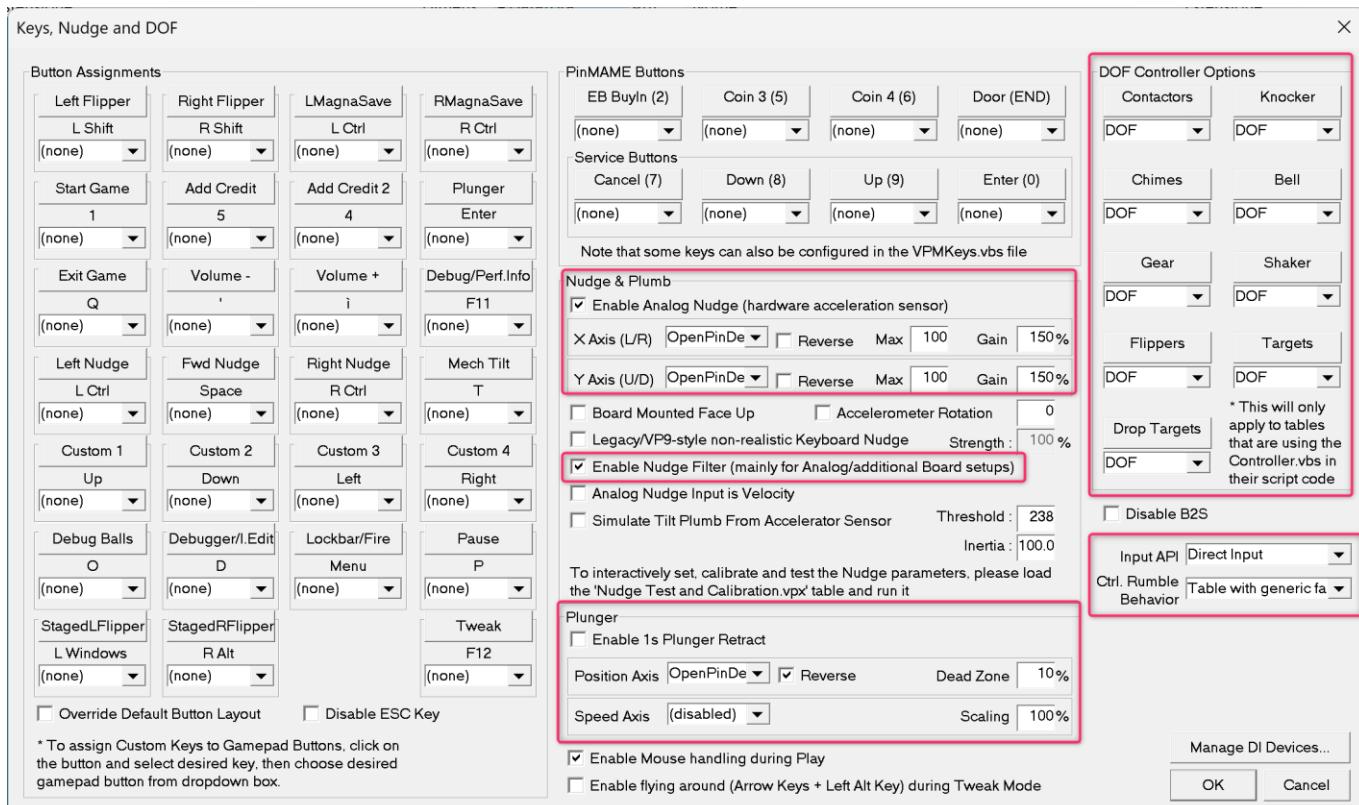

IMPORTANT NOTE: Above screenshots are taken from latest VPX version **v10.8.1.XXXX** available at <https://github.com/vpinball/vpinball/releases>. If you have older versions you may also need to select "**Analog Nudge Input Is Velocity**" to have plunger working.


VPX 10.8.0 Settings

Keys, Nudge and DOF

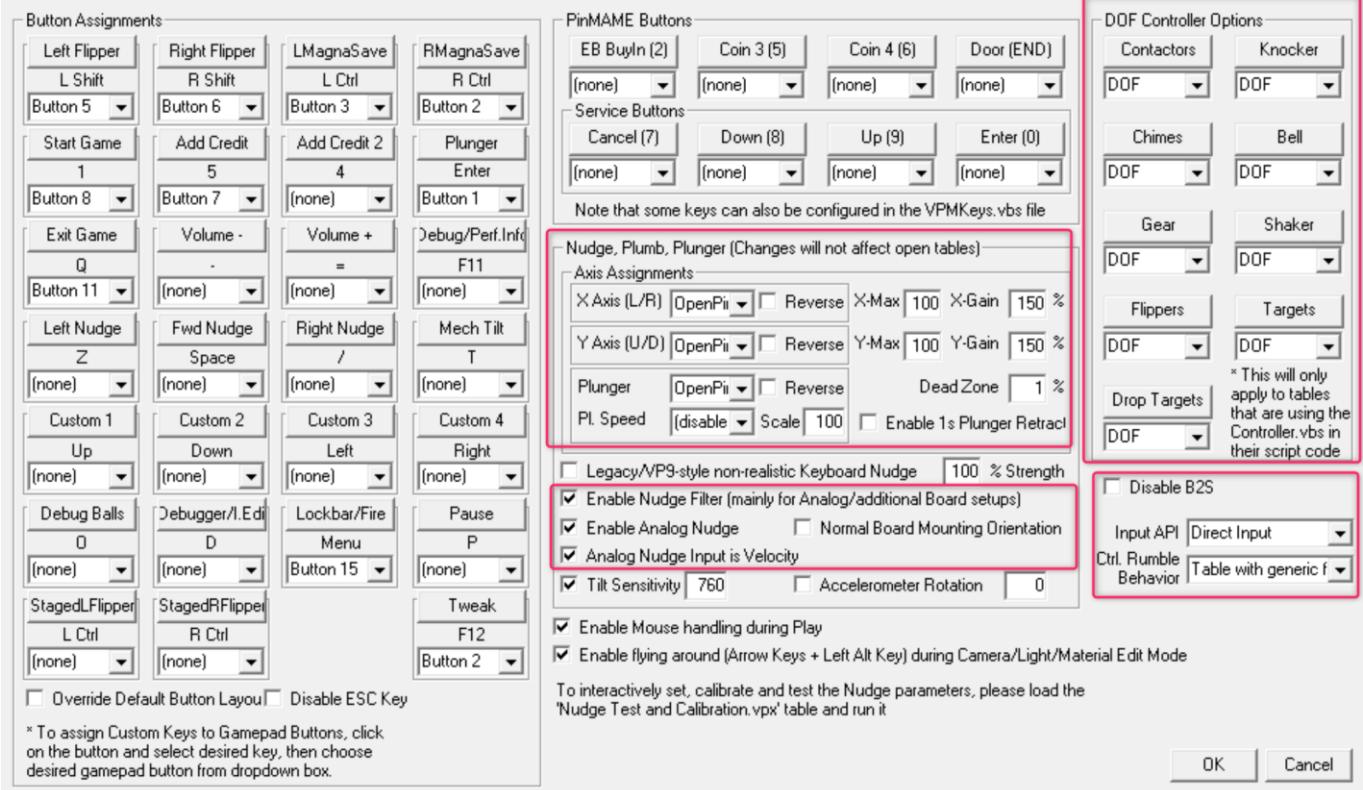


Visual Pinball X Nudge/Tilt configuration


We recommend starting with the following values and modifying them afterwards:

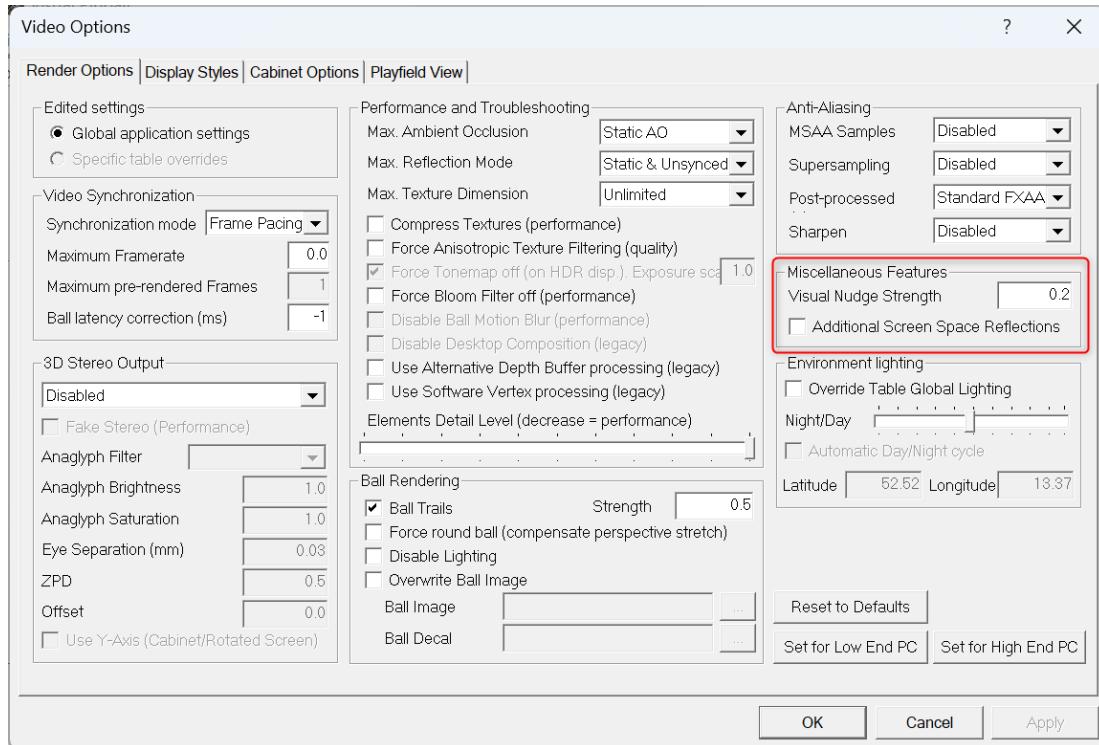

Visual Nudge Strength: **0.2**

VERY IMPORTANT NOTE: You need to find your right settings (according to your personal preferences) for nudging. You can adjust both Pinscape Pico accelerometer settings and VPX settings until you find your perfect spot:

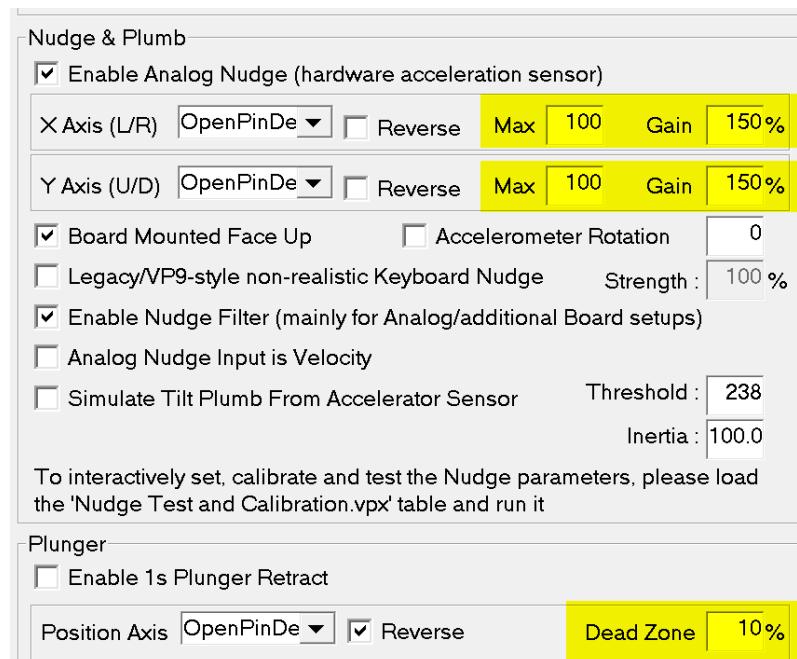

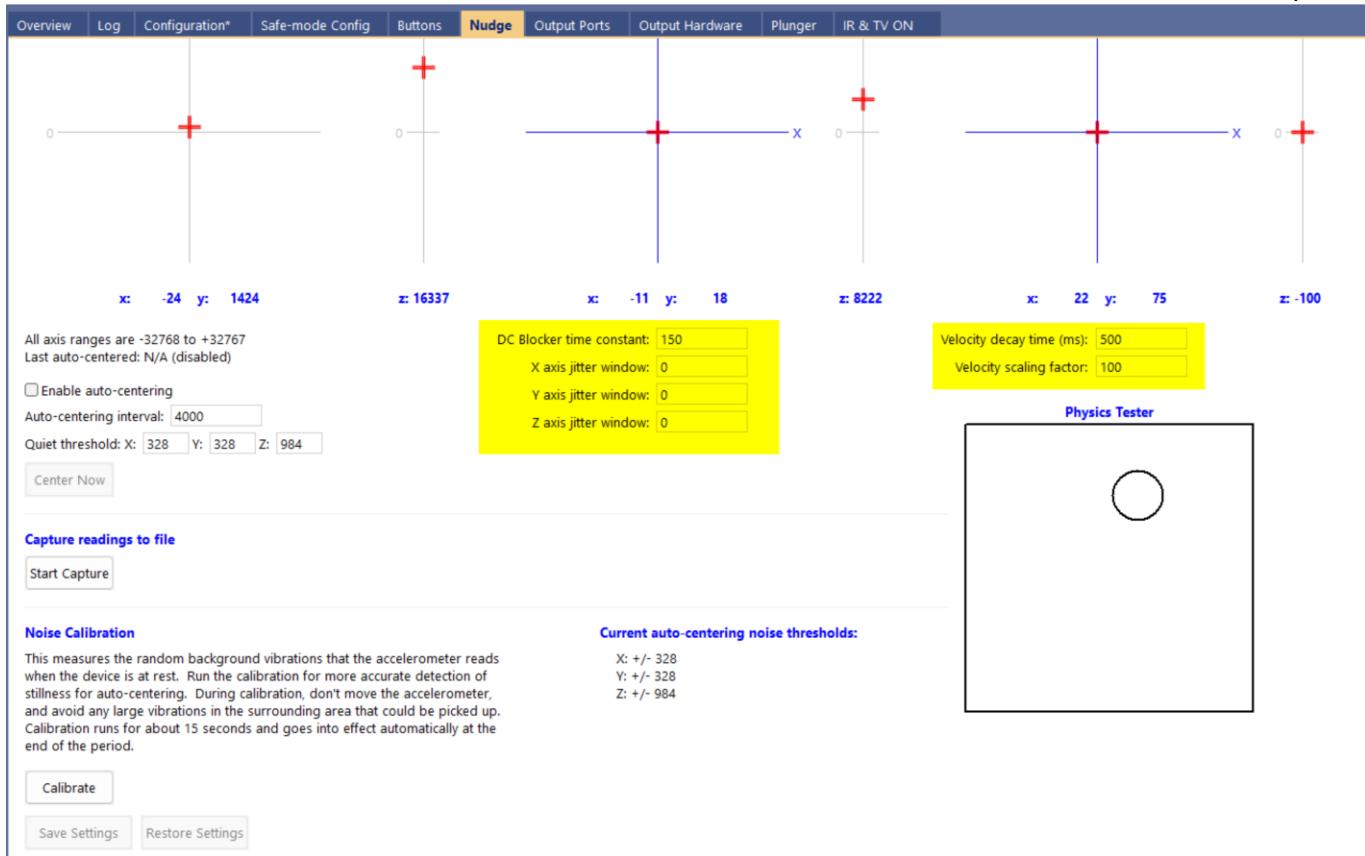

You can also increase accelerometer sensitivity by changing gRange value to 2 in any profile:

```

Overview Log Configuration* Safe-mode Config Buttons
Program Pico Find...
260
261
262 =
263     i2c: 0,
264
265
266     gRange: 2,
267 },
268




```

Please refer to the official Pinscape Pico reference for additional information about accelerometer parameters: <http://mjrnet.org/pinscape/PinscapePico/Help/NudgeWin.htm>

Play Visual Pinball X without DOF

The new upgraded VirtuaTilt allows you to enjoy feedback from flipper's solenoids and shaker motor even without DOF configured!


Load **VTConfig-VPX-NODOF.json** in **Pinscape Pico Config Tool**:

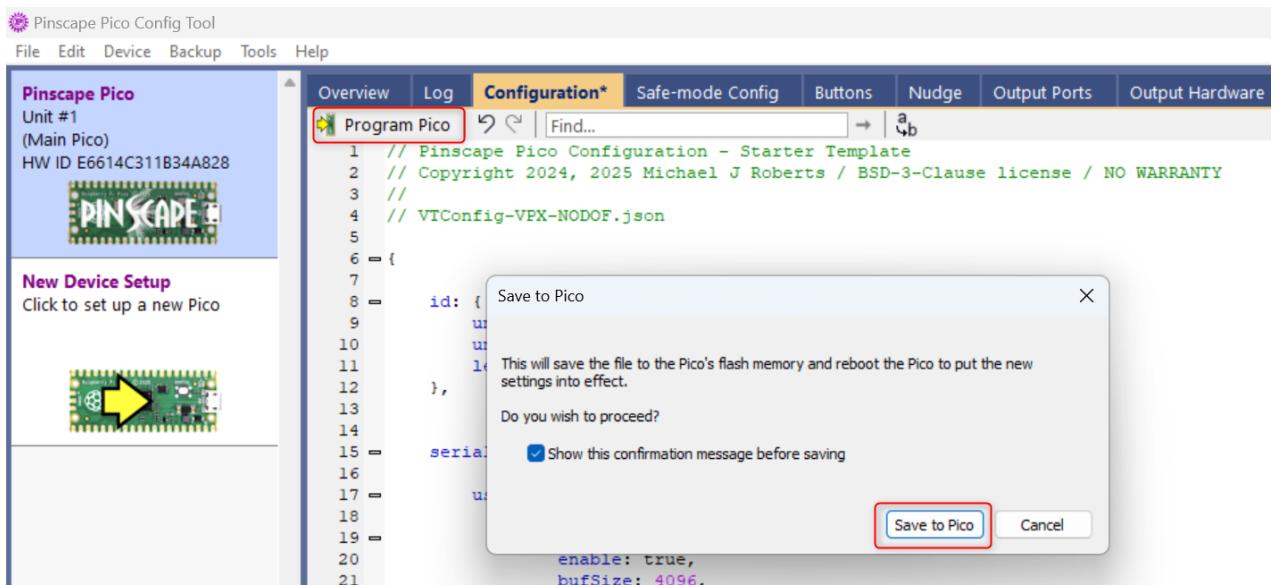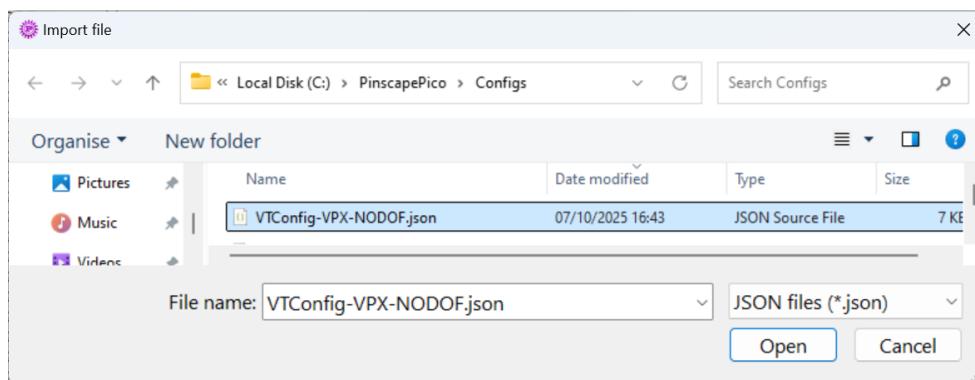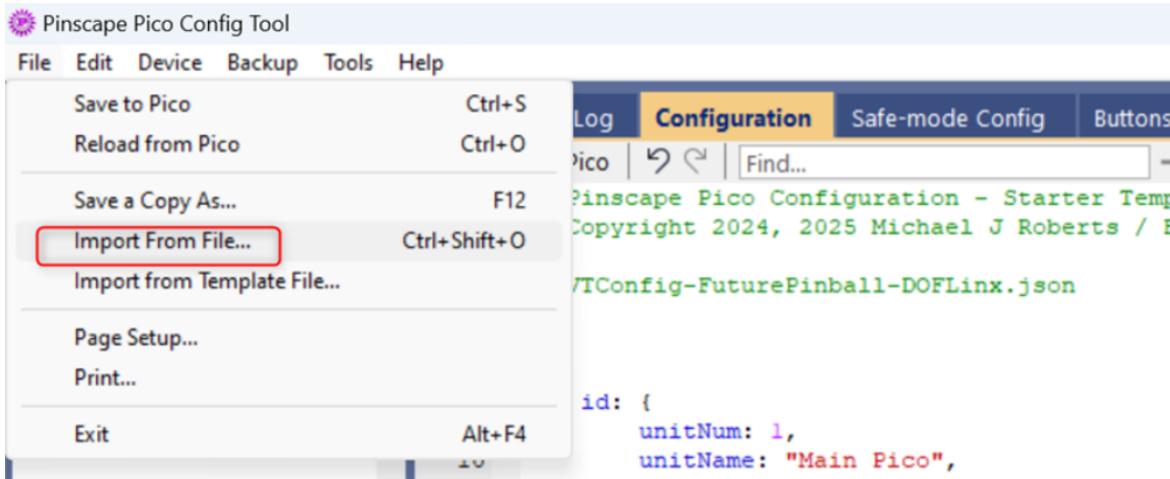


In Pinscape Pico config tool go to **Buttons** tab and note your buttons numbers (press every button):


Logical Buttons
#0 Off Pushbutton GPIO (GP27) => Keyboard =
#1 Off Pushbutton GPIO (GP26) => Keyboard -
#2 Off Pushbutton GPIO (GP16) => Keyboard End
#3 Off Pushbutton GPIO (GP0) => Gamepad Button 5
#4 Off Pushbutton GPIO (GP1) => Gamepad Button 1
#5 Off Pushbutton GPIO (GP2) => Gamepad Button 2
#6 Off Pushbutton GPIO (GP3) => Gamepad Button 3
#7 Off Pushbutton GPIO (GP4) => Gamepad Button 4
#8 Off Pushbutton GPIO (GP10) => Gamepad Button 6
#9 Off Pushbutton GPIO (GP9) => Gamepad Button 7
#10 Off Pushbutton GPIO (GP18) => Gamepad Button 8
#11 Off Pushbutton GPIO (GP19) => Gamepad Button 9
#12 Off Pushbutton GPIO (GP13) => Gamepad Button 10
#13 Off Pushbutton GPIO (GP14) => Gamepad Button 11
#14 Off Pushbutton GPIO (GP11) => Gamepad Button 12
#15 ON Pushbutton GPIO (GP12) => Gamepad Button 13
#16 ON Pushbutton GPIO (GP15) => Gamepad Button 14
#17 Off Pushbutton GPIO (GP22) => Gamepad Button 15

Assign all buttons you need in VPX:

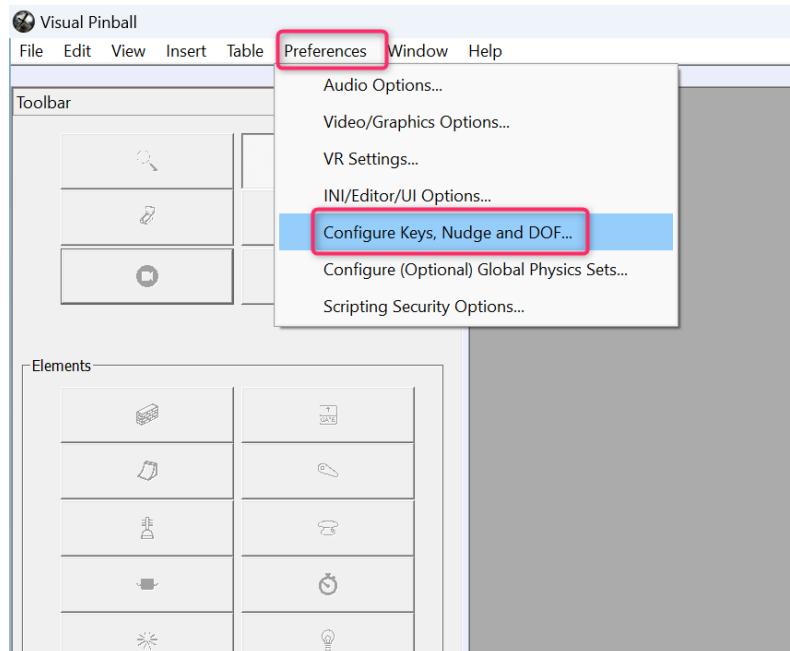

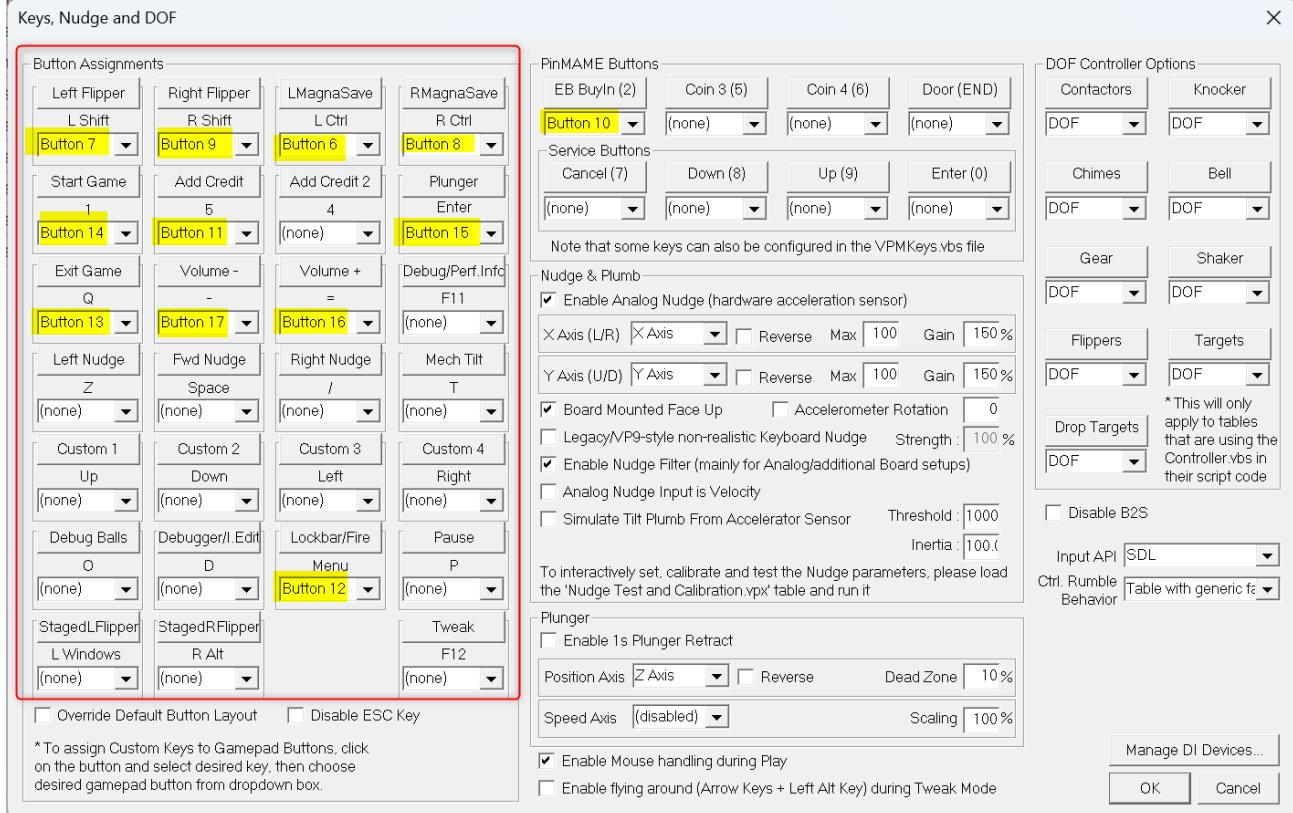


Replicate also the following configuration in Visual Pinball X settings:

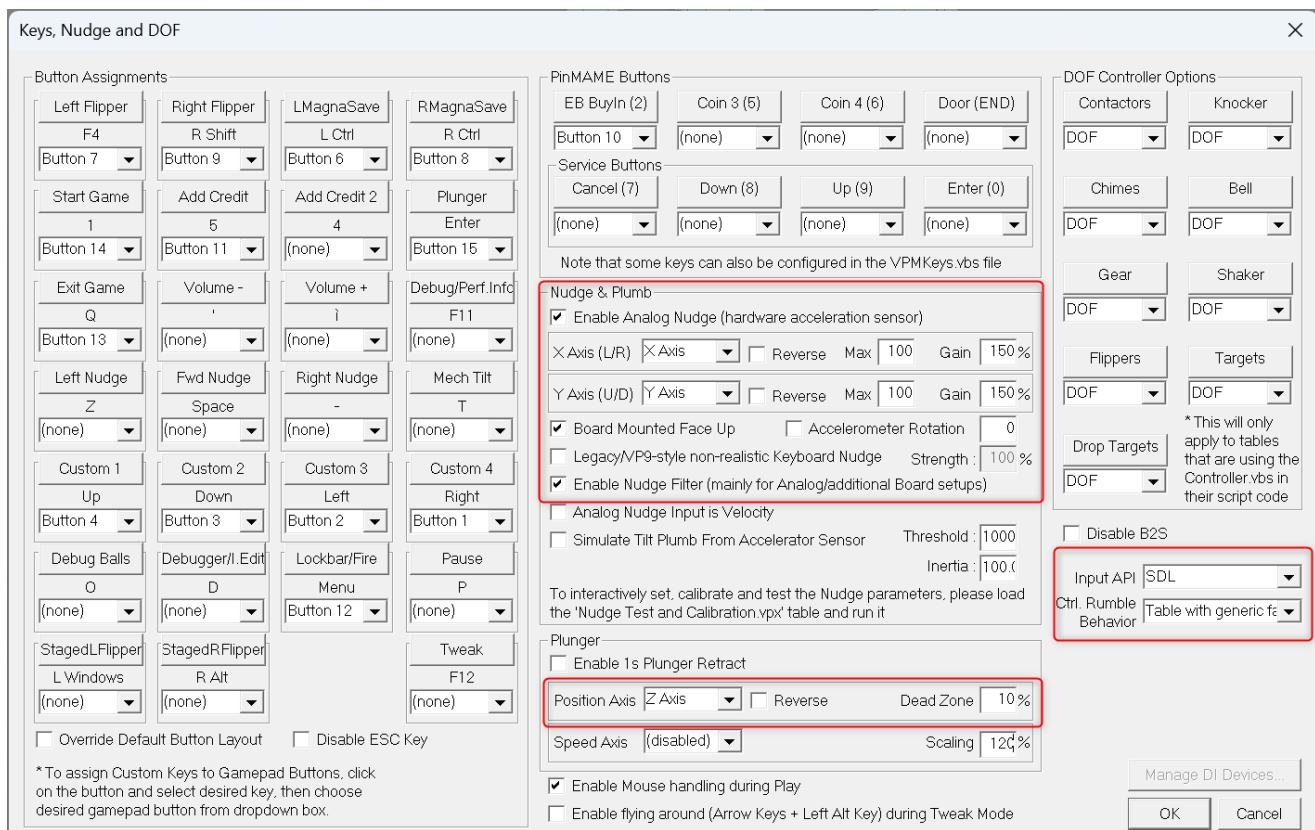


Nudge/Tilt configuration


We recommend starting with the following values and modifying them afterwards:

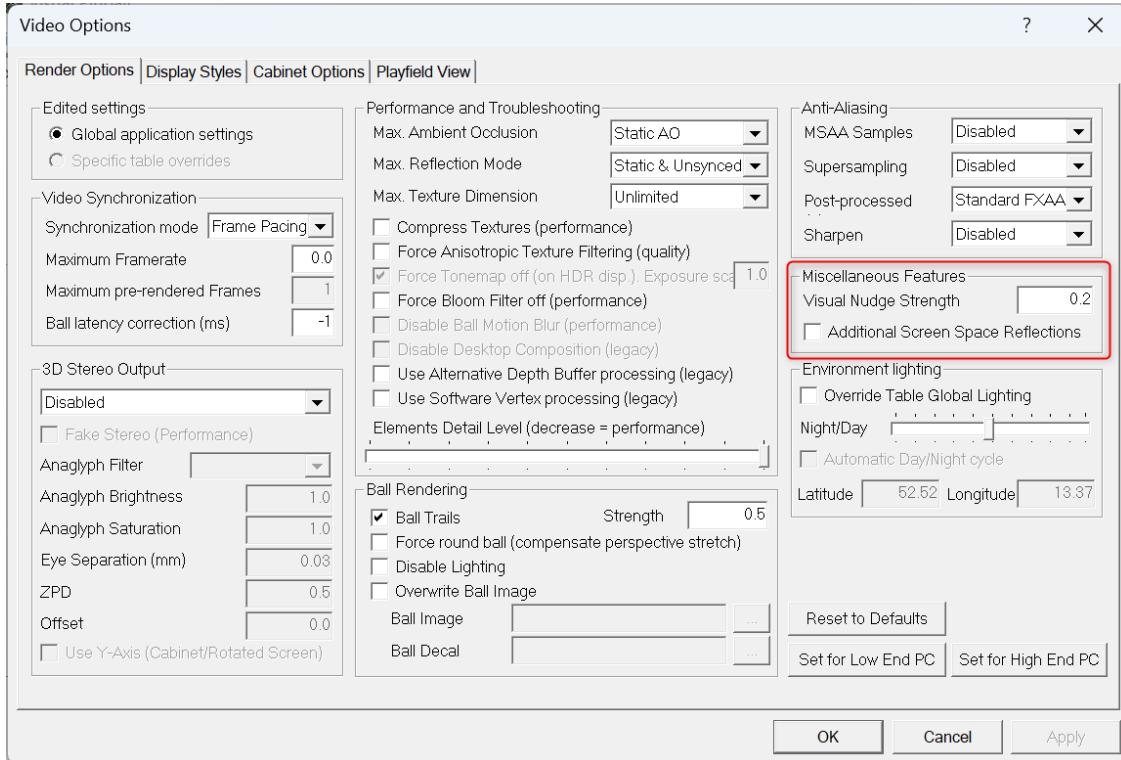


Visual Nudge Strength: **0.2**

VERY IMPORTANT NOTE: You need to find your right settings (according to your personal preferences) for nudging. You can adjust both Pinscape Pico accelerometer settings and VPX settings until you find your perfect spot:

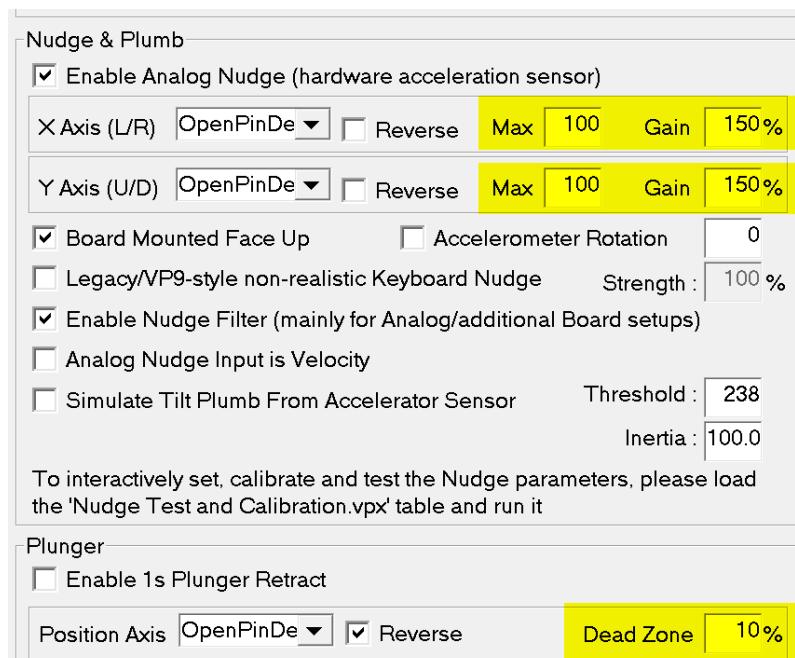

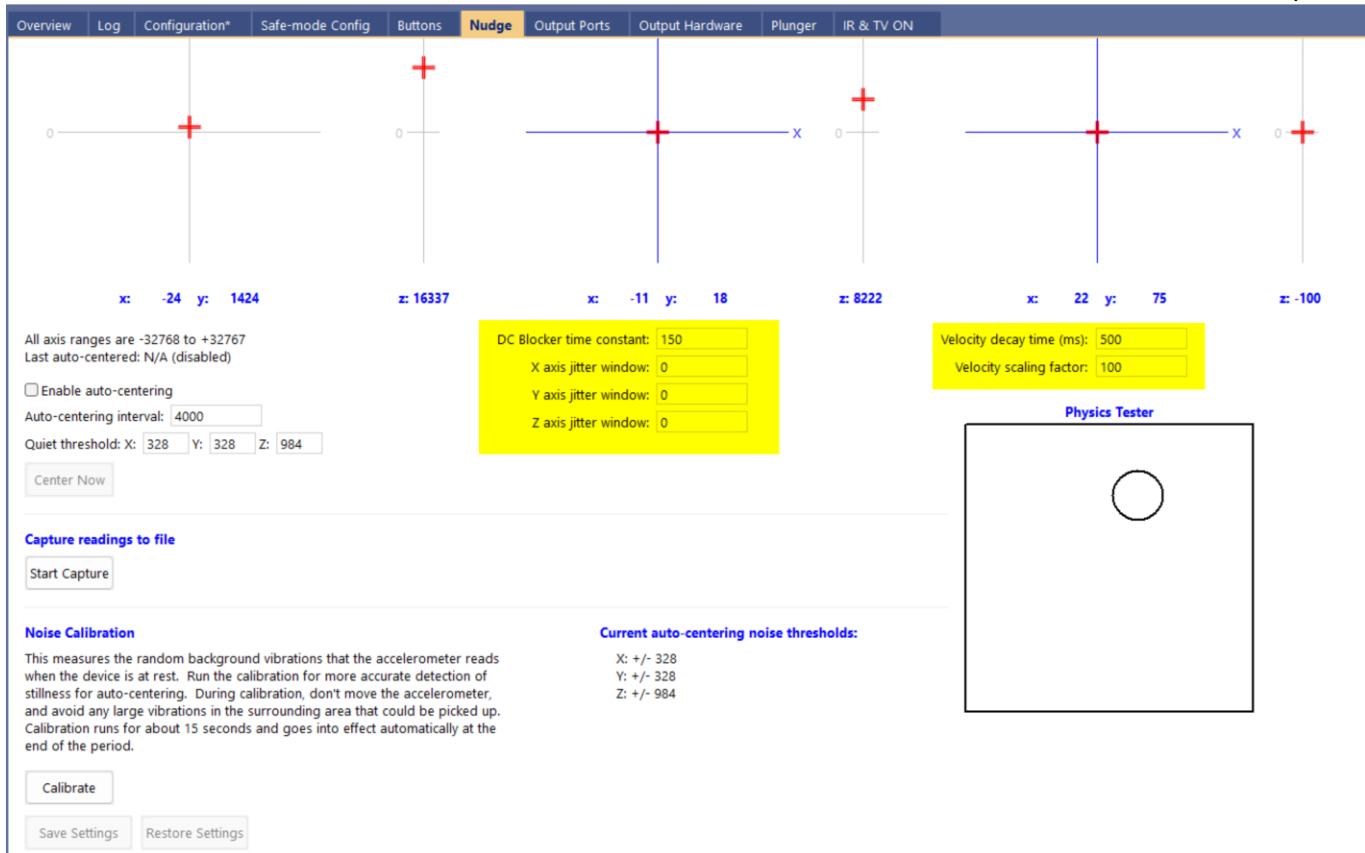

You can also increase accelerometer sensitivity by changing gRange value to 2 in any profile:

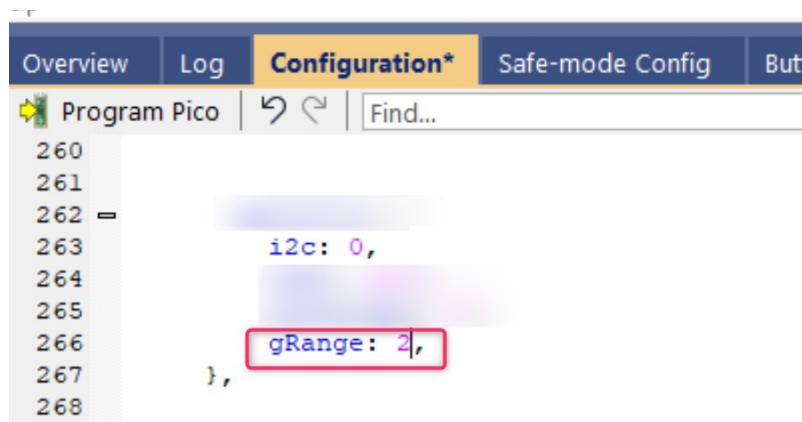

Please refer to the official Pinscape Pico reference for additional information about accelerometer parameters: <http://mjrnet.org/pinscape/PinscapePico/Help/NudgeWin.htm>