



SHARP SERVICE MANUAL

CODE : 00ZAR5520/S1E

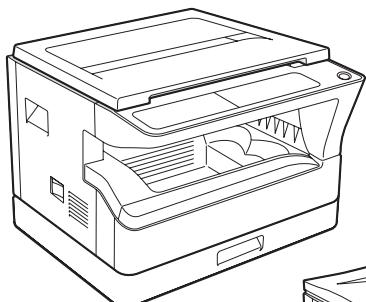

AR-5516
AR-5516D

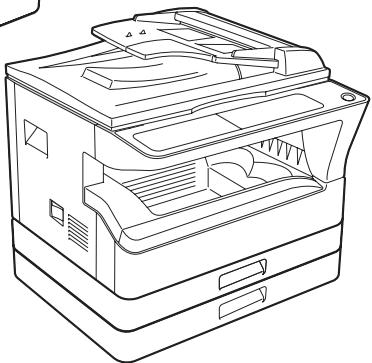

AR-5516S

AR-5520
AR-5520D

(With RSPF installed)

DIGITAL COPIER

MODEL

AR-5520	AR-5516
AR-5520S	AR-5516S
AR-5520D	AR-5516D

CONTENTS

[1] GENERAL	1 - 1
[2] CONFIGURATION	2 - 1
[3] SPECIFICATIONS	3 - 1
[4] CONSUMABLE PARTS	4 - 1
[5] EXTERNAL VIEWS AND INTERNAL STRUCTURES	5 - 1
[6] ADJUSTMENTS	6 - 1
[7] SIMULATIONS	7 - 1
[8] USER PROGRAMS	8 - 1
[9] TROUBLE CODE LIST	9 - 1
[10] MAINTENANCE	10 - 1
[11] DISASSEMBLY AND ASSEMBLY	11 - 1
[12] FLASH ROM VERSION UP PROCEDURE	12 - 1
[13] ELECTRICAL SECTION	13 - 1

Parts marked with “” are important for maintaining the safety of the set.

Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

SHARP CORPORATION

This document has been published to be used for
after sales service only.
The contents are subject to change without notice.

CAUTION

This product is a class 1 laser product that complies with 21CFR 1040.10 and 1040.11 of the CDRH standard and IEC825. This means that this machine does not produce hazardous laser radiation. The use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

This laser radiation is not a danger to the skin, but when an exact focusing of the laser beam is achieved on the eye's retina, there is the danger of spot damage to the retina.

The following cautions must be observed to avoid exposure of the laser beam to your eyes at the time of servicing.

- 1) When a problem in the laser optical unit has occurred, the whole optical unit must be exchanged as a unit, not as individual parts.
- 2) Do not look into the machine with the main switch turned on after removing the developer unit, toner cartridge, and drum cartridge.
- 3) Do not look into the laser beam exposure slit of the laser optical unit with the connector connected when removing and installing the optical system.
- 4) The middle frame contains the safety interlock switch.
Do not defeat the safety interlock by inserting wedges or other items into the switch slot.

Warning!

This product is a class A product.

If it is operated in households, offices or similar surroundings, it can produce radio interferences at other appliances, so that the user has to take adequate countermeasures.

CLASS 1 LASER PRODUCT

LASER KLASSE 1

LUOKAN 1 LASERLAITE

KLASS 1 LASERAPPARAT

VAROITUS!

LAITTEEN KÄYTTÄMINEN MUULLA KUIN TÄSSÄ
KÄYTTÖOHJEESSA MAINITULLA TAVALLA SAATTAA
ALTISTAA KÄYTTÄJÄN TURVALLISUUSLUOKAN 1
YLITTÄVÄLLE NÄKYMÄTTÖMÄLLE
LASERSÄTEILYLLÉ.

VARNING

OM APPARATEN ANVÄNDS PÅ ANNAT SÄTT ÄN I
DENNA BRUKSANVISNING SPECIFICERATS, KAN
ANVÄNDAREN UTSÄTTAS FÖR OSYNLIG
LASERSTRÄLNING, SOM ÖVERSKRIDER GRÄNSEN
FÖR LASERKLASS 1.

CAUTION

INVISIBLE LASER RADIATION.
WHEN OPEN AND INTERLOCKS DEFEATED. AVOID
EXPOSURE TO BEAM.

VORSICHT

UNSICHTBARE LASERSTRÄHLUNG.
WENN ABDECKUNG GEÖFFNET UND
SICHERHEITSVERRIEGELUNG ÜBERBRÜCKT. NICHT
DEM STRAHL AUSSETZEN.

VARO !


AVATTAESSA JA SUOJALUKITUS OHJETTAESSA OLET
ALTTINA NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLÉ ÄLÄ
KATSO SÄTEESEEN.

ADVARSEL

USYNLIG LASERSTRÄLNING VED ÅBNING, NÅR
SIKKERHEDSBRYDERE ER UDE AF
FUNKTION. UNDGÅ UDSAETTELSE FOR
STRÄLNING.

WARNING !

OSYNLIG LASERSTRÄLNING NÄR DENNA DEL ÄR
ÖPPNAD OCH SPÄRREN ÄR URKOPPLAD. BETRAKTA EJ
STRÄLEN. – STRÄLEN ÄR FARLIG.

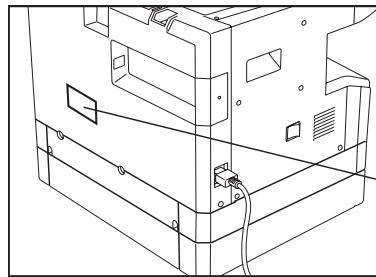

LASER WAVE – LENGTH : 795 ± 15 mm
Pulse times : 0.481 ms/6 mm
Out put power : 5 mW

Disconnect the AC cord before servicing the unit.

CONTENTS

[1] GENERAL	
1.Note for servicing	1-1
[2] CONFIGURATION	
1.System Configurations	2-1
[3] SPECIFICATIONS	
1.Copy mode	3-1
[4] CONSUMABLE PARTS	
1.Supply system table	4-1
2.Environmental conditions	4-3
3. Production number identification	4-3
[5] EXTERNAL VIEWS AND INTERNAL STRUCTURES	
1.Appearance.....	5-1
2.Internal	5-1
3.Operation Section	5-2
4.Motor, solenoid, clutch	5-3
5.Sensor, switch.....	5-4
6.PWB unit.....	5-5
7.Cross sectional view	5-6
[6] ADJUSTMENTS	
1.Adjustment item list.....	6-1
2.Copier adjustment.....	6-1
[7] SIMULATIONS	
1.Entering the simulation mode	7-1
2.Canceling the simulation mode.....	7-1
3.List of simulations	7-1
4.Contents of simulations.....	7-3
[8] USER PROGRAMS	
1.List of user programs	8-1
2.Setting the user programs	8-4
3.Toner cartridge life	8-4
[9] TROUBLE CODE LIST	
1.Trouble code list	9-1
2.Details of trouble codes	9-1
[10] MAINTENANCE	
1.Maintenance table	10-1
2.Maintenance display system	10-2
3.Note for replacement of consumable parts	10-2
[11] DISASSEMBLY AND ASSEMBLY	
1.High voltage section/Duplex transport section.....	11-1
2.Optical section	11-2
3.Fusing section	11-4
4.Paper exit section	11-6
5.MCU.....	11-8
6.Optical frame unit.....	11-8
7.LSU	11-9
8.Tray paper feed section/Paper transport section	11-9
9.Bypass tray section	11-11
10.Power section	11-13
11.Developing section	11-14
12.Process section	11-15
13.Others	11-15
[12] FLASH ROM VERSION UP PROCEDURE	
1.Preparation	12-1
2.Download procedure	12-1
3.Installation procedure	12-2
[13] ELECTRICAL SECTION	
1.Block diagram	13-1
2.Actual wiring diagram	13-2

[1] GENERAL

1. Note for servicing

Pictogram

The label () in the fusing area of the machine indicates the following:

- : Caution, risk of danger
- : Caution, hot surface

A. Warning for servicing

- The fusing area is hot. Exercise care in this area when removing misfed paper.
- Do not look directly at the light source. Doing so may damage your eyes.

B. Cautions for servicing

- Do not switch the machine rapidly on and off. After turning the machine off, wait 10 to 15 seconds before turning it back on.
- Machine power must be turned off before installing any supplies.
- Place the machine on a firm, level surface.
- Do not install the machine in a humid or dusty location.
- When the machine is not used for a long time, for example, during prolonged holidays, turn the power switch off and remove the power cord from the outlet.
- When moving the machine, be sure to turn the power switch off and remove the power cord from the outlet.
- Do not cover the machine with a dust cover, cloth or plastic film while the power is on. Doing so may prevent heat dissipation, damaging the machine.
- Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous laser radiation exposure.
- The socket-outlet shall be installed near the machine and shall be easily accessible.

C. Note for installation place

Improper installation may damage the machine. Please note the following during initial installation and whenever the machine is moved.


Caution : If the machine is moved from a cool place to a warm place, condensation may form inside the machine. Operation in this condition will cause poor copy quality and malfunctions. Leave the machine at room temperature for at least 2 hours before use.

Do not install your machine in areas that are:


- damp, humid, or very dusty




- poorly ventilated

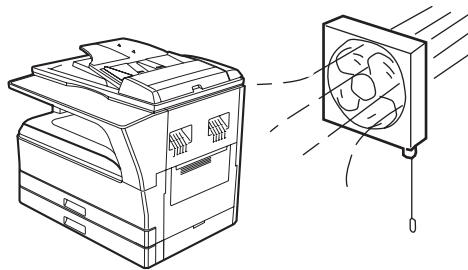

- exposed to direct sunlight

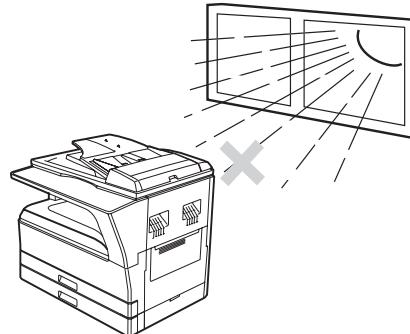

- subject to extreme temperature or humidity changes, e.g., near an air conditioner or heater.

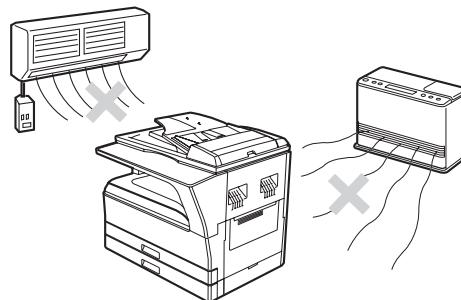


The machine should be installed near an accessible power outlet for easy connection and disconnection.

Be sure to connect the power cord only to a power outlet that meets the specified voltage and current requirements. Also make certain the outlet is properly grounded.


Note : Connect the machine to a power outlet which is not used for other electric appliances. If a lighting fixture is connected to the same outlet, the light may flicker.

Be sure to allow the required space around the machine for servicing and proper ventilation.

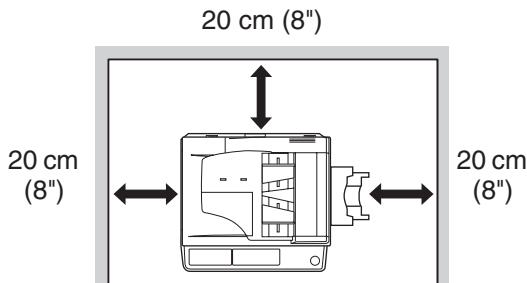

[2] CONFIGURATION

1. System Configurations

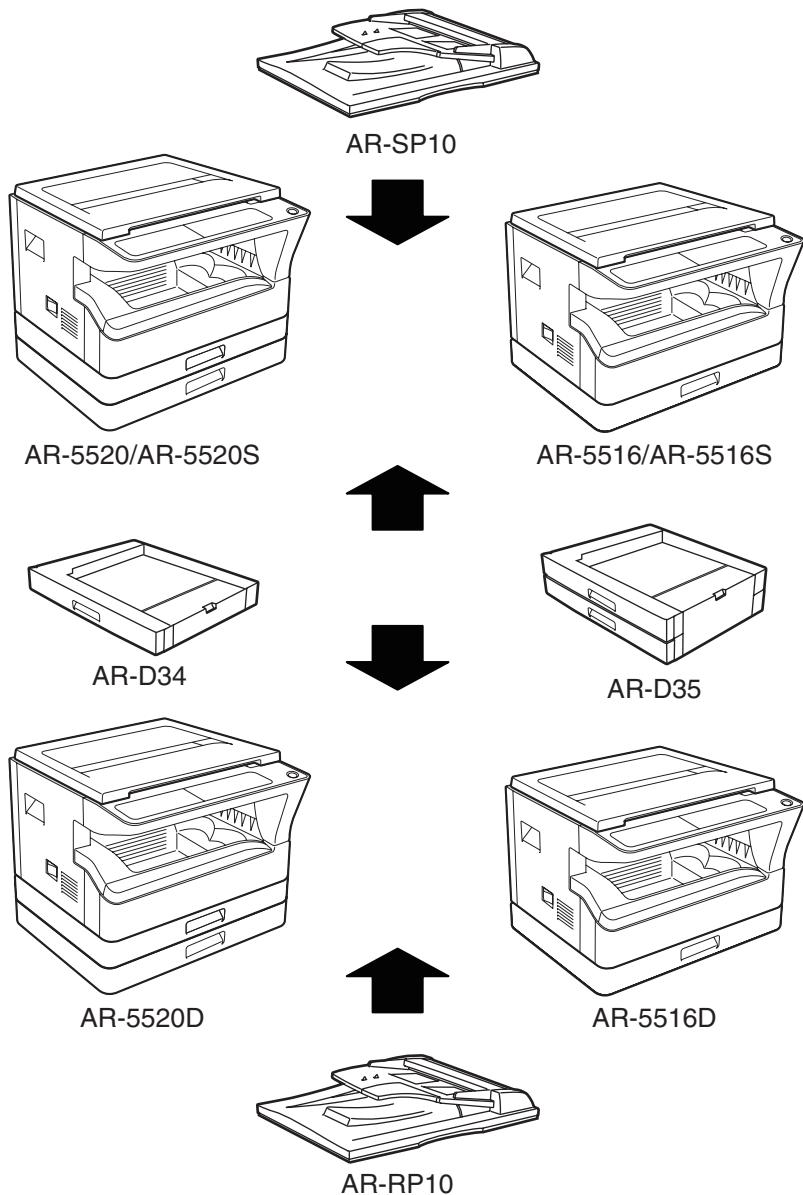

Option	Model	AR-5520 / AR-5520S AR-5516 / AR-5516S	AR-5520D AR-5516D	Remark
AR-RP10	Duplex document auto feeder (RSPF)	X	O	
AR-SP10	Document auto feeder (SPF)	O	X	
AR-D34	1-stage paper feed unit	O	O	
AR-D35	2-stage paper feed unit	O	O	

O: Option installation enable

X: Option installation disable

[3] SPECIFICATIONS

1. Copy mode

A. Type

Type	Desk-top
Paper exit	Wing less

B. Machine composition

AR-5516 / AR-5516S / AR-5516D	16-CPM multi function model
AR-5520 / AR-5520S / AR-5520D	20-CPM multi function model

(1) Option

Machine	Model	
250 sheets paper feed unit	AR-D34	
250 sheets x 2 paper feed unit	AR-D35	
SPF	AR-SP10	AR-5520/ AR-5520S AR-5516 /AR-5516S
RSPF	AR-RP10	AR-5520D/ AR-5516D

C. Copy speed

(1) Engine speed (ppm)

Paper size	AR-5520 / AR-5520S AR-5520D	AR-5516 / AR-5516S AR-5516D
A4/ 8.5"x11"	20ppm	16ppm
A4R	14ppm	12ppm
8.5"x11"R	15ppm	12ppm
A5/ 5.5"x8.5"	20ppm	16ppm
B5/ 16K	20ppm	16ppm
B5R	16ppm	14ppm
16KR	15ppm	14ppm
8.5x13"	12ppm	11ppm
B4/ 8.5"x14	12ppm	10ppm
A3	11ppm	9ppm
11"x17"	10ppm	9ppm
8K	11ppm	10ppm

(2) Document replacement speed (Copy mode)

Copy mode	AR-5520 / AR-5520S AR-5520D	AR-5516 / AR-5516S AR-5516D
S to S	20cpm (100%)	16cpm (100%)
S to D	9cpm (45%)	9cpm (56%)
D to D	8cpm (40%)	8cpm (50%)

S to S : Tray1 A4/8.5"X11" document 11 sheets (11 pages), copy 1 set

S to D : Tray1 A4/8.5"X11" document 22 sheets (22 pages), copy 1 set

D to D : Tray1 A4/8.5"X11" document 11 sheets (22 pages), copy 1 set

(3) Job efficiency

Copy mode	AR-5520 / AR-5520S AR-5520D	AR-5516 / AR-5516S AR-5516D
S to S	19cpm (95%)	15cpm (94%)
S to D	11cpm (55%)	10cpm (63%)
D to D	10cpm (50%)	10cpm (63%)

S to S : Tray1 A4/8.5"X11" document 10 sheets (10 pages), copy 5 sets

S to D : Tray1 A4/8.5"X11" document 10 sheets (10 pages), copy 5 sets

D to D : Tray1 A4/8.5"X11" document 10 sheets (20 pages), copy 5 sets

(4) First copy time

Tray	Content
1st tray	7.2 sec or less
2nd tray	8.5 sec or less
3rd tray	9.5 sec or less
4th tray	10.5 sec or less
Bypass tray	7.5 sec or less

600x300dpi, AE mode, A4/Letter, single surface copy with OC, in polygon ready state

D. Document

Max. document size	A3, 11" X 17"
Document reference position	Left side center
Detection (Platen)	None

E. Paper feed

(1) Paper feed section details

Item	1st tray	2nd tray	Bypass tray
Paper capacity	250 sheets	250 sheets	100 sheets
Paper size detection	No (Paper size is set with the system setting.)		
Paper type setting	No	No	No (Heavy paper setting is enabled.)
Paper size changing method	The paper guide is set by the user.		
Paper when shipping	AB series	A4	A4
Size setting	Inch series	8 1/2" x11"	8 1/2" x11"
Remaining paper quantity detection	Only empty detection available		

(2) Feedable paper

Paper size	1st tray	2nd tray	Bypass tray
A3	297x420	Yes	Yes
B4	257x364	Yes	Yes
A4	297x210	Yes	Yes
A4-R	210x297	Yes	Yes
B5	257x182	Yes	Yes
B5R	182x257	Yes	Yes
A5	210x148.5	Yes	N/A
A5R	148.5x210	N/A	N/A
A6R	105x148.5	N/A	N/A
B6R	128.5x182	N/A	N/A
Ledger 11 x 17 in	279.4x431.8	Yes	Yes
Legal 8.5x14in.	215.9x355.6	Yes	Yes
Foolscap 8.5 x 13 in	215.9x330.2	Yes	Yes
Letter 11x8.5in	279.4x215.9	Yes	Yes
Letter-R 8.5x11in	215.9x279.4	Yes	Yes
Executive-R 7.25x10.5in.	184.2x266.7	N/A	Yes
Invoice 8.5x5.5 in.	215.9x139.7	Yes	N/A
Invoice-R 5.5x8.5 in	139.7x215.9	N/A	N/A
8K	270x390	Yes	Yes
16K	270x195	Yes	Yes
16KR	195x270	Yes	Yes
COM10	104.8x241.3	N/A	Yes
COM9	98.4x225.4	N/A	Yes
C5	162x229	N/A	Yes
DL	110x220	N/A	Yes
Postcard	100x148	N/A	Yes
Return postcard	200x148	N/A	Yes
Long format No. 3	120.1x235	N/A	Yes
Monarch	98.4x190.5	N/A	Yes
Western format No. 2	114x162	N/A	Yes
Western format No. 4	105x235	N/A	Yes

(3)Types of feedable paper

Types of paper		1st tray	2nd tray	Bypass tray
Thin paper	56-59g/m ² 15-15.9lbs	Yes	Yes	Yes
Plain paper	60-90g/m ² 16-24lbs	Yes	Yes	Yes (Multi paper feed enable)
Heavy paper	91-105g/m ² 16-24lbs	N/A	N/A	Yes (Multi paper feed enable)
Heavy paper	106-128g/m ² 24.1-33.5lbs	N/A	N/A	Yes (A4 or less) (Multi paper feed enable)
Heavy paper	129-200g/m ² 33.6-53.2lbs	N/A	N/A	Yes (A4 or less) (Only single paper feed)
Heavy paper	201-256g/m ² 53.3-68lbs	N/A	N/A	N/A
Envelope	75-90g/m ² 20-24lbs	N/A	N/A	Yes
Postcard		N/A	N/A	Yes
OHP film		N/A	N/A	Yes
Label sheet		N/A	N/A	Yes
Tab paper 20		N/A	N/A	Yes

F. Multi copy

Max. number of multi copy	999 sheets
---------------------------	------------

G. Warm-up time

Warm-up time	45 sec
Pre-heat	Available
Jam recovery	Within 45 sec

H. Copy magnification ratio

Fixed magnification ratio	AB system: 50,70,86,100,141,200%
	Inch system: 50,64,78,100,129,200%
Zooming	25 ~ 400% SPF/RSPF(50 ~ 200%)
Independent zooming(vertical)	Available (25 ~ 400%) SPF/RSPF(50 ~ 200%)
Independent zooming(horizontal)	Available (25 ~ 400%) SPF/RSPF(50 ~ 200%)

I. Print density

Density mode	Auto / Text / Photo
No. of manual adjustment	5 steps (Text / Photo)
Resolution	Writing: 600 x 600dpi Reading: 600 (main) x 600 (sub) (PHOTO mode) 600 (main) x 300 (sub) (AUTO exposure mode)
Gradation	Reading: 256 gradations Writing: Binary
Toner save mode	Set by the user program

J. Void width

Void area	Lead edge 1 ~ 4mm, rear edge 4mm or less, Total of both sides: 6mm or less		
Image loss	OC	Same size	3.0mm or less
		Enlargement	1.5mm or less
		Reduction	6.0mm or less
	SPF/RSPF	Same size	4.0mm or less
		Enlargement	3.0mm or less
		Reduction	8.0mm or less

K. Auto duplex

Standard/ Option	Standard provision (AR-5520D / AR-5516D only) (D → D / D → S enable only when RSPF is installed) Not available for AR-5520 / AR-5520S / AR-5516 / AR-5516S
---------------------	--

L. Paper exit / finishing

Paper exit section capacity	Face down 250 sheets
Full detection	None
Finishing	None
Electronic sort capacity	A4/ 8.5" x 11" standard document (6% coverage) 160 sheets
Offset function	None
Staple function	None

M. Additional functions

	AR-5520S AR-5516S	AR-5520 AR-5516	AR-5520D AR-5516D
APS		O	
AMS		O	
Auto tray switching		O	
Memory copy		O	
Rotation copy		O	
E-sort (Sorting function)	X	O Single surface, A4, 6% document, Max. 160 sheets	
E-sort (Grouping function)	X	O	
Rotation sort		X	
Prevention of sky shot		X	
Independent zooming		O	
1 set 2 copy		O Disable in enlargement copy or when SPF/RSPF is used.	
Binding margin	X	O Default AB series: 10mm (5, 10, 15, 20mm) Inch series: 1/2 inch (1/4, 1/2, 3/4, 1 inch)	
Edge erase	X	O Default AB series: 10mm (5, 10, 15, 20mm) Inch series: 1/2 inch (1/4, 1/2, 3/4, 2 inch)	
Center erase	X	O Default AB series: 10mm (5, 10, 15, 20mm) Inch series: 1/2 inch (1/4, 1/2, 3/4, 3 inch)	
Black/white reverse		X	
2in1/4in1	X	O	
Offset		X	
Preheating	O	The conditions are set by the user program.	
Auto shut-off	O	The conditions are set by the user program.	
User programming		O	
Total counter	O	Supports Total counter and Copy counter.	
Coin vendor support		O (Supports I/F only.)	
Auditor support		O (Supports I/F only.)	
Duplex	X	O	
Toner save		O (Set according to the destination)	
Department management		O (Copy: 20 Dept.)	

O : Available X : Not available

N. Other specifications

Photoconductor type	OPC (Organic Photo Conductor)
Photoconductor drum dia.	30mm
Copy lamp	Cold cathode fluorescent lamp (CCFL)
Developing system	Dry 2-component magnetic brush development
Charging system	Saw teeth charging
Transfer system	(+) DC corotron
Separation system	(-) DC corotron
Fusing system	Heat roller
Cleaning system	Contact blade

O. Package form

Body	Body / Accessories
------	--------------------

P. External view

	AR-5520S/AR-5520/ AR-5520D	AR-5516S/AR-5516/ AR-5516D
External dimensions (With the bypass tray closed)	590mm(W) x 550mm(D) x 555mm(H) or less	590mm(W) x 550mm(D) x 470mm(H) or less
Occupying area (With the bypass tray opened)	883mm(W) x 550mm(D) or less	
Weight (Excluding developer)	35.9Kg	30.9Kg

Q. Power source

Voltage	100 - 127V 220 - 240V
Frequency	50/60Hz common

R. Power consumption

Max. power consumption	1200W
------------------------	-------

* EnergyStar conformity

Average power consumption in operation	Less than 550W
Power consumption when standby	5W(Not include option)
Energy consumption efficiency	Less than 25W

S. Digital performance

Resolution	Reading	600 x 600dpi (PHOTO mode) 600 x 300dpi (AUTO exposure mode)
	Writing	600 x 600dpi
Gradation	Reading	256 gradations
	Writing	Binary
Memory	AR-5520S/5516S : 16MB AR-5520/5516/5520D/5516D : 64MB	
Hard disk	None	

T. Printing function

(1) Platform

Item	Content
Support platform	IBM PC/AT compatible machine

(2) Support OS

OS	Support
Windows 95	X
Windows 98/Me	X
Windows NT 4.0 SP5	X
Windows 2000	O
Windows XP 32	O
Windows XP 64	O (Web release only)
Windows Server 2003	X
Windows Vista 32	O
Windows Vista 64	O (Web release only)

(3) Printer driver function (SPLC)

SPLC		
Item		SPLC
Common	Default	Button
	MIMIC	Yes
Configuration	Input Tray Options	
	One Tray/ Two Tray/ Three Tray/ Four Tray	
	Set Tray Status	Tray1/ Tray2/ Bypass Tray
	Set Paper size	Not set/ A3/ A4-R/ A5-R/ A6-R/ B4/ B5-R/ B6-R/ Leger/ Letter-R/ Legal/ Executive-R/ Invoice-R/ Foolscap/ Folio/ Com10/ DL/ C5/ 8k/ 16k-R/ Custom paper
	ROPM	
	On/Off (The AR-5520S/5516S are out of target.)	
	Status window	Button
About		Button
Main	Copies	1-999
	Collate	On/ Off
	N-UP printing	1/ 2/ 4/ 6 up
	User settings	Button
Paper	Paper size	A3/ A4/ A5/ A6/ B4/ B5/ B6/ Leger/ Letter/ Legal/ Executive/ Invoice/ Foolscap/ Folio/ Com10/ DL/ C5/ 8k/ 16k/ Custom paper
		- Custom paper: Width [100.0] -[297.0] [3.94"] -[11.69"] Length [148.0] -[431.8] [5.83"] - [17.00"] - Millimeters/ Inches
	Fit to paper size	On/Off A3/ A4/ A5/ A6/ B4/ B5/ B6/ Leger/ Letter/ Legal/ Executive/ Invoice/ Foolscap/ Folio/ Com10/ DL/ C5/ 8k/ 16k
	Image orientation	Portrait/ Landscape/ Rotate 180 degrees
	Paper selection	Auto select/ Tray1/ Tray2/ Bypass Tray
	Image quality	Draft/ Normal/ Photo
Advanced	Text to Black, Vector to Black	On/Off
	Watermark	Top secret/ Confidential/ Draft/ Original/ Copy
Watermark	Text	Yes
	Size	[6] - [300]
	Angle	[-90] - [90]
	Grayscale	[0] - [255]
	Edit font	Yes
	On first page only	On/Off
	Center	Button
	Position	X: [-50] - [50] Y: [-50] - [50]

U. Scanner function (Except for AR-5520/AR-5516)

Type	Flat bed scanner
Scan system	Document table/document feed unit
Light source	Yellow + Green CCFL
Resolution	Binary: 600 x 600 dpi Gray scale: 300 x 300 dpi
Document	Sheet/Book
Effective scan range	OC/SPF/RSPF: about 297(length) x 431(width) mm
Scan speed	OC/SPF/R-SPF: 0.962msec/line(300 dpi)
Input data	1bit or 12bit
Output data	1bit or 8bit
Scan color	Black & white / binary / Gray scale
Protocol	TWAIN / WIA(XP only) * / STI
Interface	USB2.0 (High speed mode, full speed mode)
Scanner utility	Button Manager
Drop-out color	No
Scanner button	Provided (6)
Supported OS	USB connection:Windows 2000/XP/VISTA network connection:Windows 2000/XP/VISTA
Void area	Lead edge/rear edge (2.5mm) on the driver side Left/right: 3.0mm
WHQL support	No

[4] CONSUMABLE PARTS

1. Supply system table

A. USA/Canada/South and Central America(100V series)

AR-5516/AR-5520D

No.	Name	Product name	Content	Life	Remark
1	Toner cartridge(Black)	AR-020MT (AR-020NT x 10)	Toner cartridge x10 (Toner:Net 537g With IC)	160K(16Kx10)	Life setting by A4 6% document
2	Developer	AR-205MD (AR-205ND x 10)	Developer x10 (Net 300g)	500K(50x10)	
3	Drum KIT	AR-205DR	Drum x1 Drum fixing plate x1	50K	

B. South and Central America(200V series)

AR-5516/AR-5520D

No.	Name	Product name	Content	Life	Remark
1	Toner cartridge(Black)	AR-020LT (AR-020T x 10)	Toner cartridge x10 (Toner:Net 537g With IC)	190K(19Kx10)	Life setting by A4 6% document (In a toner save mode)
2	Developer	AR-205LD (AR-205DV x 10)	Developer x10 (Net 300g)	500K(50x10)	
3	Drum KIT	AR-205DM	Drum x1 Drum fixing plate x1	50K	

C. Brazil

AR-5516/AR-5520D

No.	Name	Product name	Content	Life	Remark
1	Toner cartridge(Black)	AR-020MTB (AR-020NTB x 10)	Toner cartridge x10 (Toner:Net 537g With IC)	190K(19Kx10)	Life setting by A4 6% document (In a toner save mode)
2	Developer	AR-205MD (AR-205ND x 10)	Developer x10 (Net 300g)	500K(50x10)	
3	Drum KIT	AR-205DR	Drum x1 Drum fixing plate x1	50K	

D. Europe

AR-5516/AR-5516S/AR-5520/AR-5520S/AR-5520D

No.	Name	Product name	Content	Life	Remark
1	Toner cartridge(Black)	AR-020LT (AR-020T x 10)	Toner cartridge x10 (Toner:Net 537g With IC)	160K(16Kx10)	Life setting by A4 6% document (In a toner save mode)
2	Developer	AR-205LD (AR-205DV x 10)	Developer x10 (Net 300g)	500K(50x10)	
3	Drum KIT	AR-205DM	Drum x1 Drum fixing plate x1	50K	

E. Australia/New Zealand

AR-5516/AR-5516D/AR-5520/AR-5520S/AR-5520D

No.	Name	Product name	Content	Life
1	Toner cartridge(Black)	AR-020LT (AR-020T x 10)	Toner cartridge x10 (Toner:Net 537g With IC)	190K(19Kx10)
2	Developer	AR-205LD (AR-205DV x 10)	Developer x10 (Net 300g)	500K(50x10)
3	Drum KIT	AR-205DM	Drum x1 Drum fixing plate x1	50K

F. Middle East/Africa/Israel/Philippine/Other Distributor
AR-5516/AR-5516S/AR-5516D/AR-5520/AR-5520S/AR-5520D

No.	Name	Product name	Content	Life	Remark
1	Toner cartridge(Black)	AR-021ET (AR-021FT x 10)	Toner cartridge x10 (Toner:Net 537g With IC)	190K(19Kx10)	Life setting by A4 6% document (In a toner save mode)
2	Developer	AR-205CD (AR-205SD x 10)	Developer x10 (Net 300g)	500K(50x10)	
3	Drum KIT	AR-205DR	Drum x1 Drum fixing plate x1	50K	

G. Taiwan

AR-5516/AR-5516S/AR-5516D/AR-5520/AR-5520S/AR-5520D

No.	Name	Product name	Content	Life	Remark
1	Toner cartridge(Black)	AR-021ET (AR-021FT x 10)	Toner cartridge x10 (Toner:Net 537g With IC)	160K(16Kx10)	Life setting by A4 6% document
2	Developer	AR-205CD (AR-205SD x 10)	Developer x10 (Net 300g)	500K(50x10)	
3	Drum KIT	AR-205DR	Drum x1 Drum fixing plate x1	50K	

H. Asia(Except the above)


AR-5516/AR-5516S/AR-5516D/AR-5520/AR-5520S/AR-5520D

No.	Name	Product name	Content	Life	Remark
1	Toner cartridge(Black)	AR-020CT (AR-020ST x 10)	Toner cartridge x10 (Toner:Net 537g With IC)	190K(19Kx10)	Life setting by A4 6% document (In a toner save mode)
2	Developer	AR-205CD (AR-205SD x 10)	Developer x10 (Net 300g)	500K(50x10)	
3	Drum KIT	AR-205DR	Drum x1 Drum fixing plate x1	50K	


2. Environmental conditions

A. Transport conditions


(1) Transport conditions

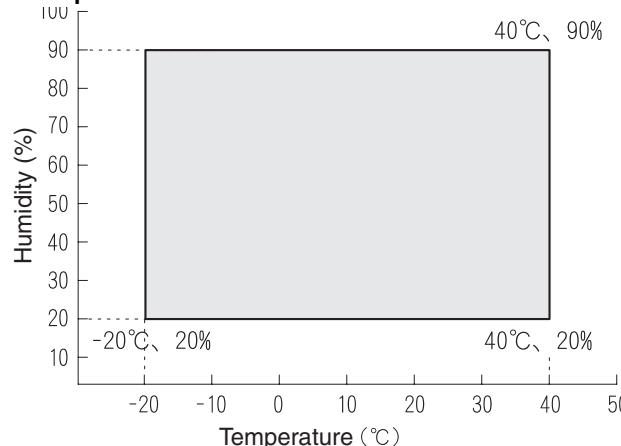

(2) Storage conditions

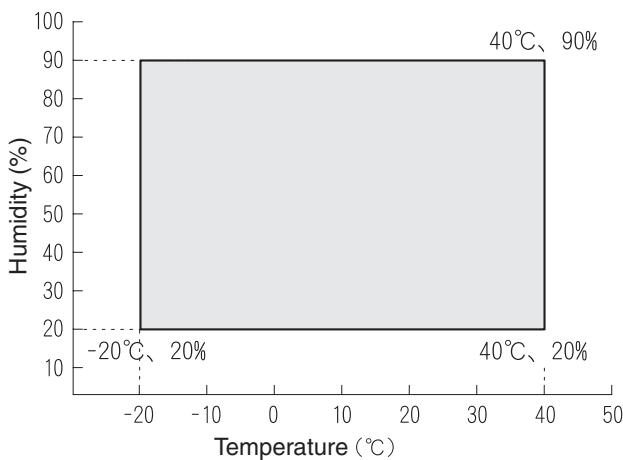

B. Use conditions

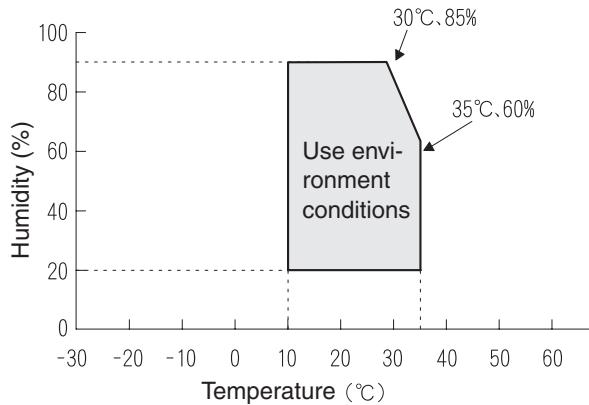



C. Life(packed conditions)

Photoconductor drum (36 months from the production month)
Developer, toner (24 months from the production month)

3. Production number identification

<Toner cartridge>

The label on the toner cartridge shows the date of production.

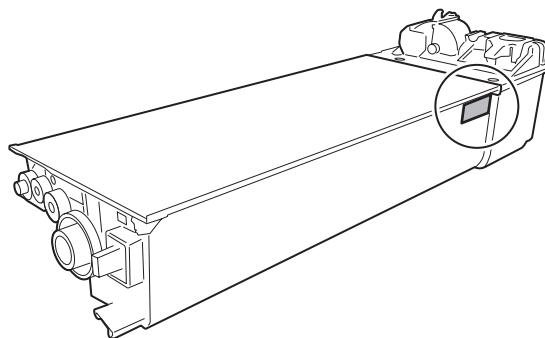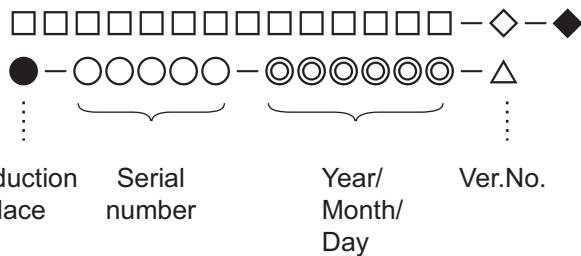


<Drum cartridge>

The lot number, printed on the front side flange, is composed of 6 digits, each digit showing the following content:


1	2	3	4	5	6
---	---	---	---	---	---

- 1 Alphabet
Indicates the model conformity code. A for this model.
 - 2 Number
Indicates the end digit of the production year.
 - 3 Number or X, Y, Z
Indicates the month of packing.
X stands for October, Y November, and Z December.
 - 4/5 Number
Indicates the day of the month of packing.
 - 6 Alphabet
Indicates the production factory. "A" for Nara Plant, "C" for SOCC

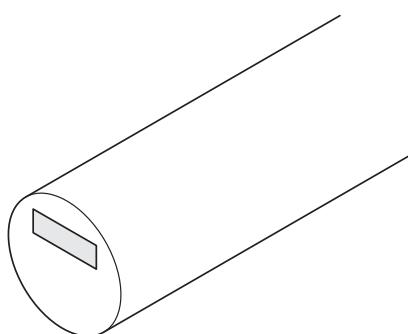


[5] EXTERNAL VIEWS AND INTERNAL STRUCTURES

1. Appearance

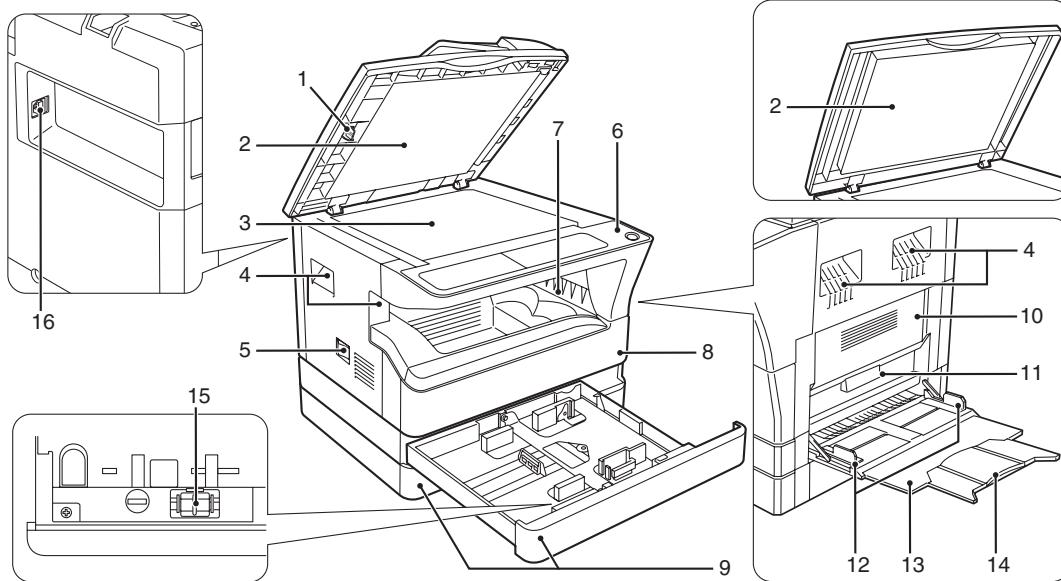

1	Glass cleaner (when the SPF/RSPF is installed)	2	Document feeder cover (when the SPF/ RSPF is installed) /document cover	3	Document glass
4	Handles	5	Power switch	6	Operation panel
7	Paper output tray	8	Front cover	9	Paper trays
10	Side cover	11	Side cover handle	12	Bypass tray guides
13	Bypass tray	14	Bypass tray extension	15	Charger cleaner
16	USB 2.0 connector				

2. Internal


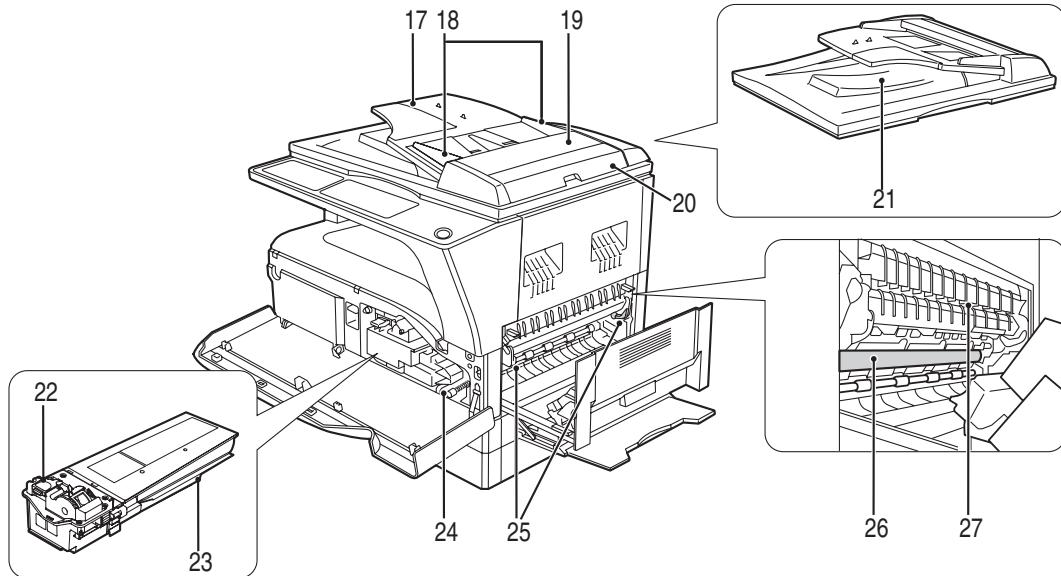


17	Document feeder tray (when the SPF/RSPF is installed)	18	Original guides (when the SPF/RSPF is installed)	19	Feeding roller cover (when the SPF/RSPF is installed)
20	Right side cover (when the SPF/RSPF is installed)	21	Exit area (when the SPF/RSPF is installed)	22	Toner cartridge lock release lever
23	Toner cartridge	24	Roller rotating knob	25	Fusing unit release levers
26	Photoconductive drum	27	Fusing unit paper guide		


3. Operation Section

The indications of the operation panel may differ depending on the country and the region.

The example of a display of inch series.

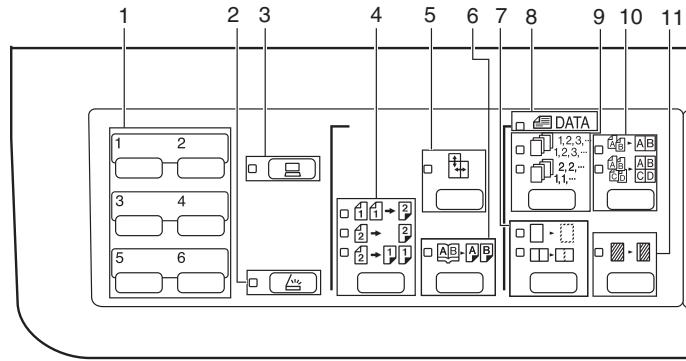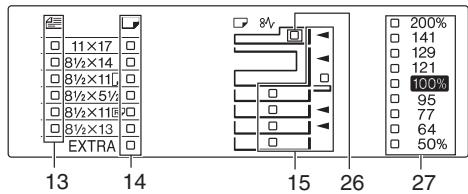


1	SCAN MENU key (Except AR-5516S/AR-5520S)	2	SCAN key / indicator (Except AR-5516S/AR-5520S)	3	ON LINE key/indicator
4	ORIGINAL TO COPY key/indicators (Except AR-5516/AR-5520/AR-5516S/ AR-5520S)	5	XY-ZOOM key / indicator	6	DUAL PAGE COPY key / indicator
7	ERASE key / indicators (Except AR-5516S/AR-5520S)	8	ORIGINAL DATA indicator	9	SORT/GROUP key / indicators (Except AR-5516S/AR-5520S)
10	2 IN 1 / 4 IN 1 key / indicators (Except AR-5516S/AR-5520S)	11	MARGIN SHIFT key / indicator (Except AR-5516S/AR-5520S)		

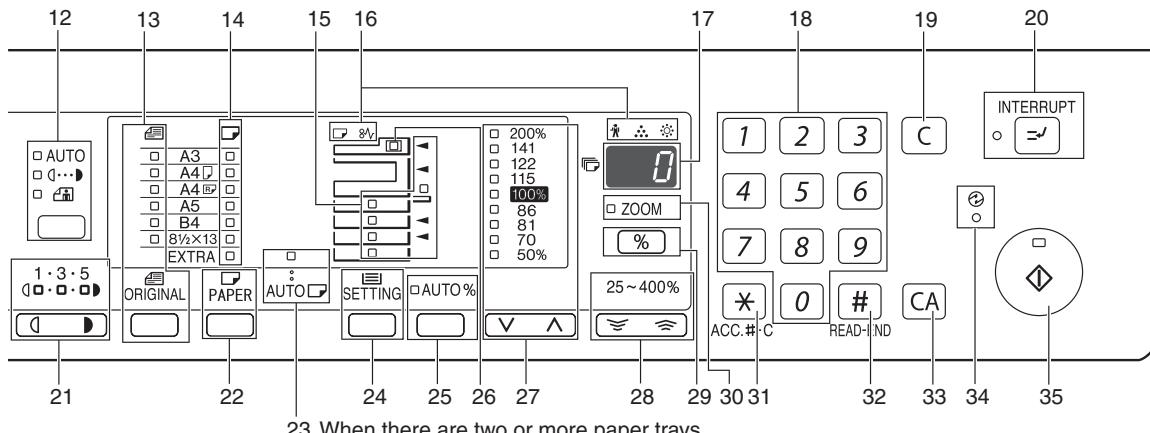

23 When there are two or more paper trays


12	AUTO/TEXT/PHOTO key / indicators	13	ORIGINAL key / ORIGINAL SIZE indicators	14	PAPER SIZE indicators
15	Paper feed location / misfeed location indicators	16	Alarm indicators	17	Display
18	Numeric keys	19	CLEAR key	20	INTERRUPT key / indicator
21	Light and Dark keys / indicators	22	PAPER SELECT key	23	AUTO PAPER SELECT indicator
24	TRAY SETTING key	25	AUTO IMAGE key / indicator	26	SPF/RSPF indicator (when the SPF/RSPF is installed)
27	PRESET RATIO selector keys / indicators	28	Zoom keys	29	Copy ratio display key
30	ZOOM indicator	31	Audit clear key	32	READ-END key
33	CLEAR ALL key	34	POWER SAVE indicator	35	START key / indicator

4. Motor, solenoid, clutch

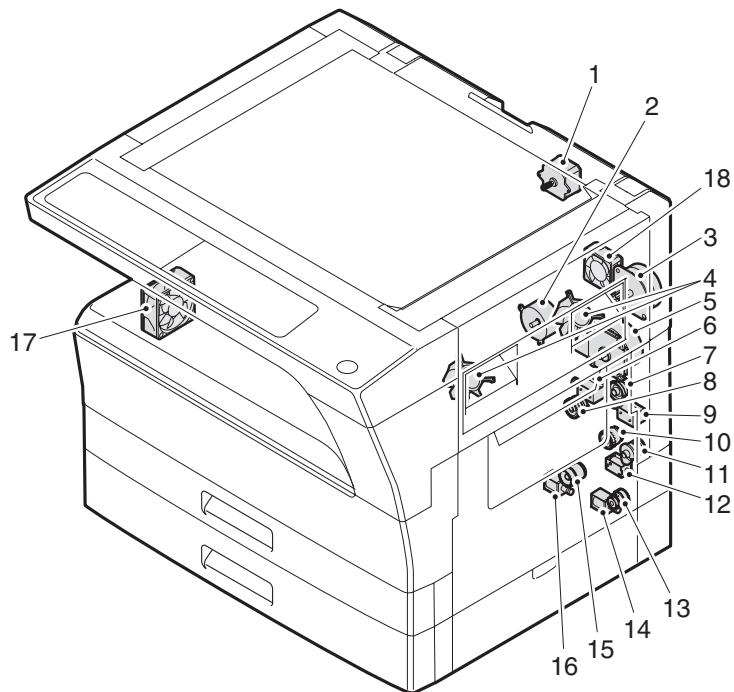


No.	Name	Code	Function operation
1	Mirror motor	MRM	Drives the optical mirror base (scanner unit).
2	Toner motor	TM	Toner supply
3	Duplex motor	DPX	Switchback operation and paper exit motor in duplex.
4	Cooling fan motor	CFM	Cools the inside of the machine.
5	Main motor	MM	Drives the machine.
6	1st tray paper feed clutch	CPFC1	Drive the pick up roller
7	PS clutch	RRC	Drives the resist roller
8	Paper feed solenoid	CPSOL1	Solenoid for paper feed from tray
9	Resist roller solenoid	RRS	Resist roller rotation control solenoid
10	Bypass tray paper transport clutch	MPTC	Drives the bypass tray paper transport roller.
11	Bypass tray paper feed clutch	MPFC	Drives the bypass tray paper feed roller.
12	Bypass tray paper feed solenoid	MPFS	Bypass tray paper feed solenoid
13	2nd tray transport clutch	CPFC2	Drives the 2nd tray transport roller.
14	2nd tray transport solenoid	FSOL1	2nd tray transport solenoid
15	2nd tray paper feed clutch	CPFC1	Drives the 2nd tray paper feed roller.
16	2nd tray paper feed solenoid	PSOL2	2nd tray transport solenoid
17	Exhaust fan motor	VFM	Cools the inside of the machine.
18	Cooling fan motor	CFM	Cools the inside of the machine.

5. Sensor, switch

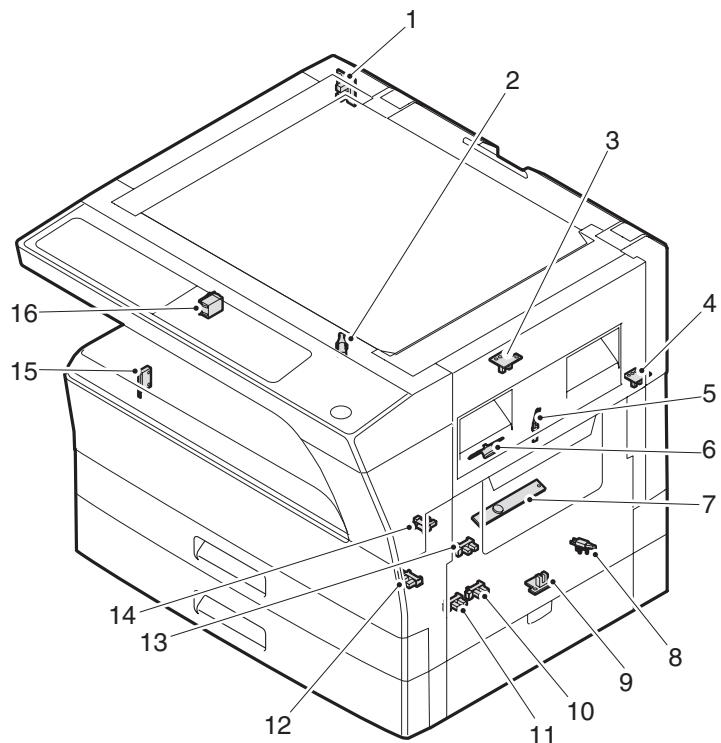


No.	Name	Code	Function operation
1	Mirror home position sensor	MHPS	Detects the mirror (scanner unit) home position.
2	Side door switch	DSWR	Side door open detection
3	Paper exit sensor (paper exit side)	POD1	Detects paper exit.
4	Paper exit sensor (DUP side)	PDPX	Paper transport detection
5	Thermistor	RTH	Fusing section temperature detection
6	Thermostat		Fusing section abnormally high temperature detection
7	Toner density sensor	TCS	Toner quantity detection
8	2nd tray detection switch		2nd tray detection
9	Bypass tray sensor	MPED	Bypass tray transport detection
10	2nd tray door open/close sensor	DRS2	2nd tray door open/close detection
11	2nd tray door paper pass sensor	PPD2	2nd tray paper entry detection
12	2nd tray paper empty sensor	CSS2	2nd tray paper empty detection
13	Paper in sensor	PIN	Paper transport detection
14	Tray empty		Tray paper entry detection
15	Front cover SW		Front cover open detection
16	Power switch	MAIN SW	Turns ON/OFF the main power source.

6. PWB unit

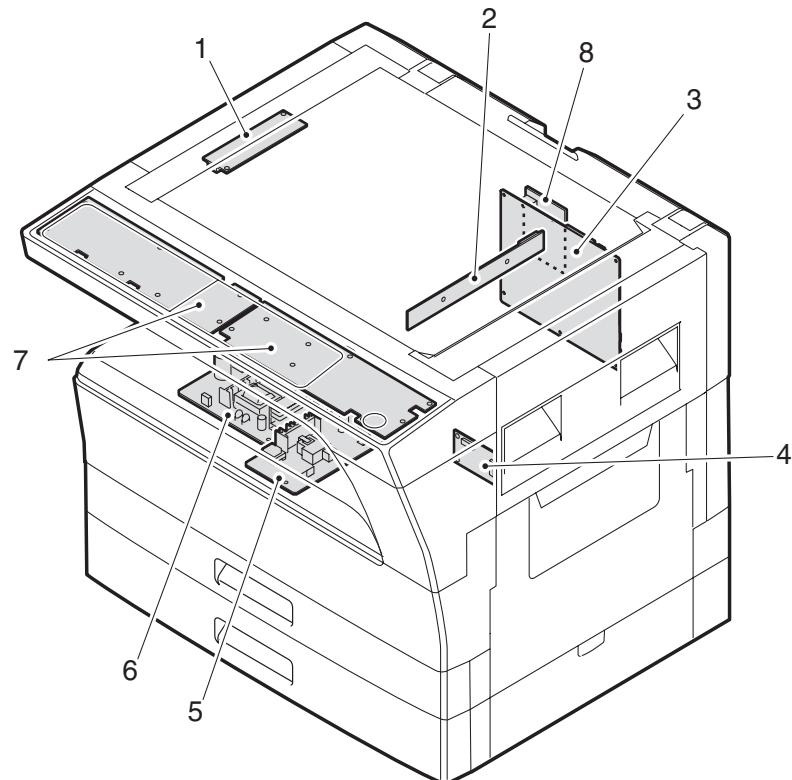

No.	Name	Function operation
1	Copy lamp Inverter PWB	Copy lamp control
2	CCD sensor PWB	Image scanning
3	Main control PWB	Main control PWB
4	2nd tray PWB	2nd tray control
5	High voltage PWB	High voltage control
6	Power PWB	AC power input/DC power control
7	Operation main PWB	Operation panel input/Display, operation panel section control
8	USB I/F PWB	Connect a USB device

7. Cross sectional view

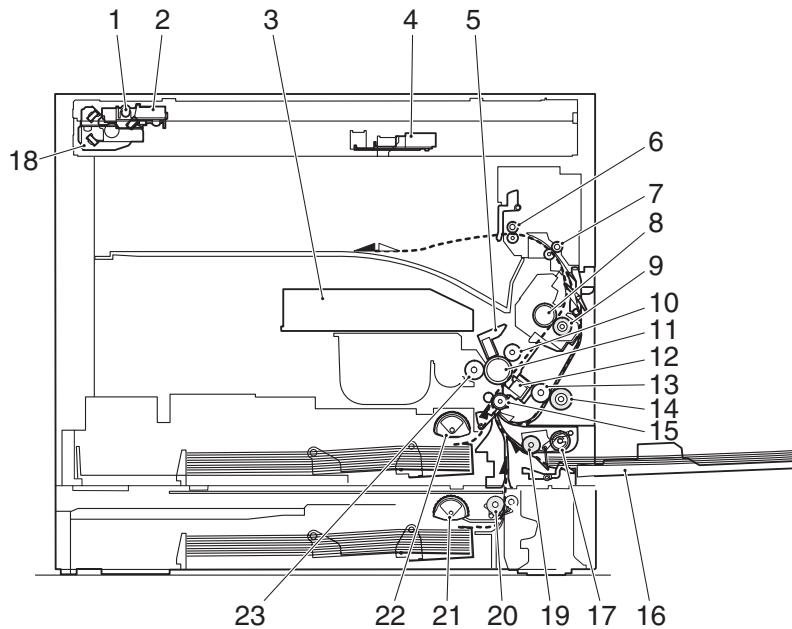

No.	Name	Function/Operation
1	Copy lamp	Image radiation lamp
2	Copy lamp unit	Operates in synchronization with No. 2/3 mirror unit to radiate documents sequentially.
3	LSU unit	Converts image signals into laser beams to write on the drum.
4	Lens unit	Reads images with the lens and the CCD.
5	MC holder unit	Supplies negative charges evenly on the drum.
6	Paper exit roller	Used to discharge paper.
7	Transport roller	Used to transport paper.
8	Upper heat roller	Fuses toner on paper (with the teflon roller).
9	Lower heat roller	Fuses toner on paper (with the silicon rubber roller).
10	Waste toner transport roller	Transports waste toner to the waste toner box.
11	Drum unit	Forms images.
12	Transfer charger unit	Transfer images (on the drum) onto paper.
13	DUP follower roller	
14	Duplex transport roller	Transports paper for duplex .
15	Resist roller	Takes synchronization between the paper lead edge and the image lead edge.
16	Bypass tray	Bypass tray
17	Bypass tray paper pick up roller	Picks up paper in bypass tray.
18	No. 2/3 mirror unit	Reflects the images from the copy lamp unit to the lens unit.
19	Bypass tray transport roller	Transports paper from the bypass tray.
20	2nd tray paper transport roller	Transports paper from the 2nd tray.
21	2nd tray paper pick up roller (semi-circular roller)	Picks up paper from the 2nd tray.
22	1st tray paper feed roller (semi-circular roller)	Picks up paper from the 1st tray.
23	MG roller	Puts toner on the OPC drum.

[6]ADJUSTMENTS

1.Adjustment item list


Section		Adjustment item	Adjustment procedure/SIM No.
A	Process section	(1) Developing doctor gap adjustment	Developing doctor gap adjustment
		(2) MG roller main pole position adjustment	MG roller main pole position adjustment
		(3) Developing bias voltage check	
		(4) Main charger voltage check	
B	Mechanism section	(1) Image position adjustment	SIM-50
		(2) Main scanning direction (FR direction) distortion balance adjustment	No. 2/3 mirror base unit installing position adjustment Copy lamp unit installing position adjustment
		(3) Main scanning direction (FR direction) distortion adjustment	Rail height adjustment
		(4) Sub scanning direction (scanning direction) distortion adjustment	Winding pulley position adjustment
		(5) Main scanning direction (FR direction) magnification ratio adjustment	SIM 48-1
		(6) Sub scanning direction (scanning direction) magnification ratio adjustment	OC mode in copying (SIM 48-1) SPF mode in copying (SIM 48-5)
		(7) Off center adjustment	OC mode (SIM 50-12) SPF mode (SIM 50-12)
		(8) SPF white correction pixel position adjustment (required in an SPF model when replacing the lens unit)	SIM63-7
C	Image density adjustment	(1) Copy mode	SIM 46-1

2.Copier adjustment

A.Process section

(1) Developing doctor gap adjustment

- 1) Loosen the developing doctor fixing screw A.
- 2) Insert a thickness gauge of 1.5mm to the three positions at 20mm and 150mm from the both ends of the developing doctor as shown.

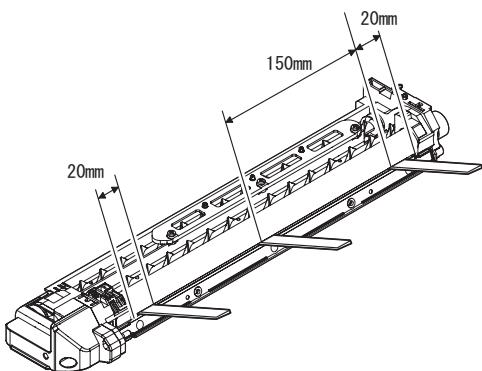

- 3) Push the developing doctor in the arrow direction, and tighten the developing doctor fixing screw. (Perform the same procedure for the front and the rear frames.)
- 4) Check the clearance of the developing doctor. If it is within the specified range, then fix the doctor fixing screw with screw lock.
* When inserting a thickness gauge, be careful not to scratch the developing doctor and the MG roller.

<Adjustment specification>


Developing doctor gap

Both ends (20mm from the both ends) : $1.5^{+0.1}_{-0.15}$ mm

C (Center) (150mm from the both ends) : $1.55^{+0.15}_{-0.2}$ mm

(2) MG roller main pole position adjustment


- 1) Remove and separate the waste toner box and put the developing unit on a flat surface.
- 2) Tie a string to a needle or a pin.
- 3) Hold the string and bring the needle close to the MG roller horizontally. (Do not use paper clip, which is too heavy to make a correct adjustment.) (Put the developing unit horizontally for this adjustment.)
- 4) Do not bring the needle into contact with the MG roller, but bring it to a position 2 or 3mm apart from the MG roller. Mark the point on the MG roller which is on the extension line from the needle tip.
- 5) Measure the distance from the marking position to the top of the doctor plate of the developing unit to insure that it is 18mm. If the distance is not within the specified range, loosen the fixing screw A of the main pole adjustment plate, and move the adjustment plate in the arrow direction to adjust.

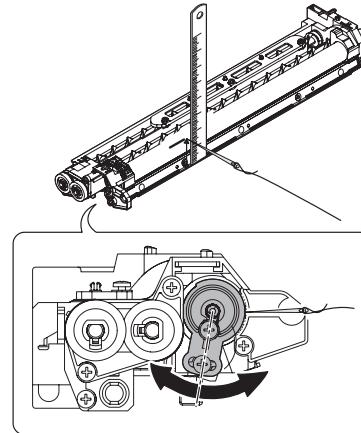

(3)Developing bias voltage check

Note: Use a digital multi-meter with an internal resistance of $10M\Omega$ or more.

- 1) Set the digital multi-meter range to DC700V.
- 2) Put the test rod of the digital multi-meter on the developing bias voltage output check pin.
- 3) Turn on the power, execute SIM25-1.

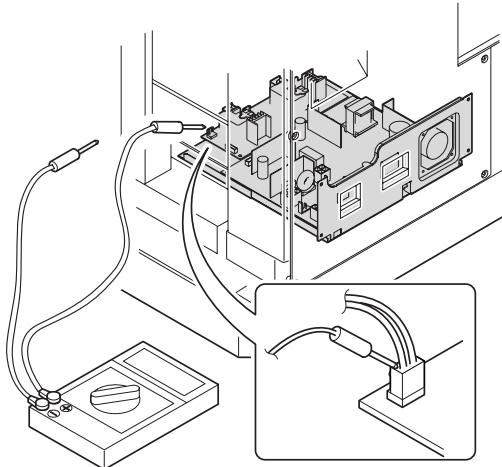


<Specification>

Mode	Specification
Developing bias voltage	DC - 400±10V

(4) Grid bias voltage check

Note: Use a digital multi-meter with an internal resistance of $10M\Omega$ or more.

- 1) Set the digital multi-meter range to DC700V.
- 2) Put the test rod of the digital multi-meter on the grid bias voltage output check pin.
- 3) Turn on the power.
(The voltage is outputted in the grid bias High output mode during warming up, and in the grid bias Low output mode when warming up is completed.)

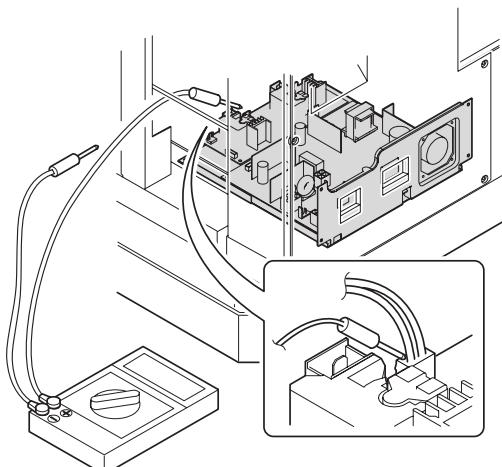

<Specification>

Mode	Specification
Grid bias LOW	DC - 380±8V
Grid bias HIGH	DC - 525±10V

B.Mechanism section


Note: If a jam error or paper empty occurs during copying in the adjustment by the simulation, the image data are not saved, and therefore recopying is required.

(1) Image position adjustment


a.OC image lead edge position adjustment (SIM 50-1)

Note: In advance to this adjustment, the sub scanning magnification ratio adjustment must be performed.

- 1) Set a scale on the OC table as shown below.

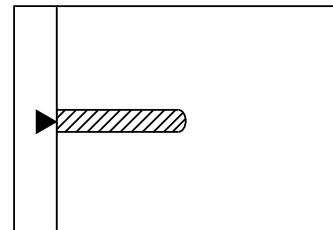

- 2) Make a copy.
- 3) Check the copy output. If necessary, perform the following adjustment procedures.
- 4) Execute SIM 50-1.
- 5) Set the OC lead edge position set value (PHOTO indicator ON) to [1] The OC image scanning start position is shifted inside the document edge.
- 6) Set the 1st tray lead edge void adjustment value (TEXT indicator ON) * to [1] The lead edge void becomes the minimum.
- 7) Set the 1st tray print start position value (AUTO, 1st tray indicator ON) to [1] and make a copy. The print start position is shifted inside the document edge.

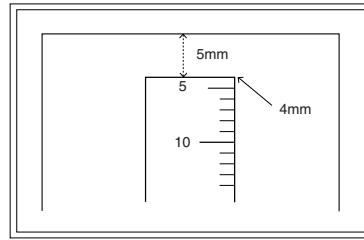

* The dimension varies depending on the model.


- 8) Measure the image loss R of the copied image. Enter the set value of the image scanning lead edge position (PHOTO indicator ON) again.

• 1 step of the set value corresponds to about 0.1mm shift.

• Calculate the set value from the formula below.

$$R/0.1(\text{mm}) = \text{Image loss set value}$$

<R: Image loss measurement value (mm)>

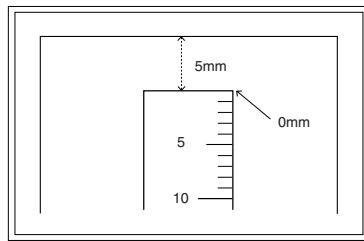


* The scanning edge is set.
(A line may be printed by scanning the document edge.)

Example: $4/0.1 = 40 = \text{about } 40$

Note: If the set value is not obtained from the above formula, perform the fine adjustment.

- 9) Measure the distance H between the paper lead edge and the image print start position. Set the image print start position set value (AUTO, 1st tray indicator ON) again.
- 1 step of the set value corresponds to about 0.1mm shift.
 - Calculate the set value from the formula below.
- $H/0.1(\text{mm}) = \text{Image print start position set value}$
- <H: Print start position measurement value (mm)>

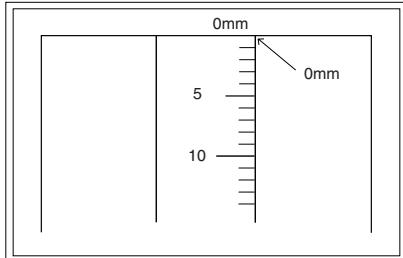

*Fit the print edge with the paper edge, and perform the lead edge adjustment.

Example: $5/0.1 = 50 = \text{about } 50$


Note: If the set value is not obtained from the above formula, perform the fine adjustment.

10) Set the lead edge void adjustment value (TEXT indicator ON)* again.

- 1 step of the set value corresponds to about 0.1mm shift.
- Calculate the set value from the formula below.

$B/0.05 (\text{mm}) = \text{Lead edge void adjustment value}$

<B: Lead edge void (mm)>

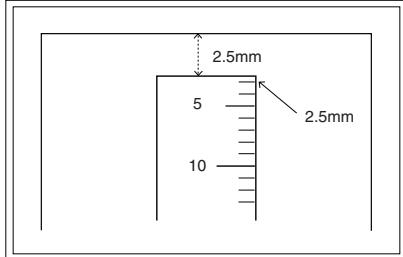

Example: When setting the lead edge void to 2.5mm

$$2.5/0.05 = \text{about } 50$$

Note: If the set value is not obtained from the above formula, perform the fine adjustment.

- * 2nd tray lead edge void adjustment: Exposure display <<AUTO + TEXT + PHOTO>>
- Bypass tray lead edge void adjustment: (TEXT indicator and PHOTO indicator ON)

<Duplex mode adjustment>

OC 2nd print surface (Auto duplex) lead edge position adjustment:
SIM50-19 <<PHOTO>>

- * For the adjustment procedure, set to S → D mode before execution.

Note: Before performing the 2nd print surface lead edge position adjustment and the lead edge void adjustment, be sure to perform the 1st print surface lead edge position adjustment in advance, and be sure to perform the 2nd print surface lead edge position adjustment and then the lead edge void adjustment in this sequence.


<Adjustment specification>

Adjustment mode	SIM	LED	Set value	Spec value	Set range
OC image lead edge position	SIM 50-1	PHOTO	R/0.1	Lead edge void: 1 - 4mm	1 ~ 99
1st tray print start position		AUTO + 1st tray	B/0.1	Image loss: 3mm or less	
2nd tray print start position		AUTO + 2nd tray			
Bypass tray print start position		AUTO + Bypass tray			
Lead edge void		TEXT	B/0.05		
OC 2nd print surface lead edge position adjustment	SIM 50-19*	PHOTO	1 step: 0.1mm shift		

* (Set to S → D mode for before execution)

b.SPF image lead edge position adjustment (SIM50-6)

- 1) Set a scale on the OC table as shown below.

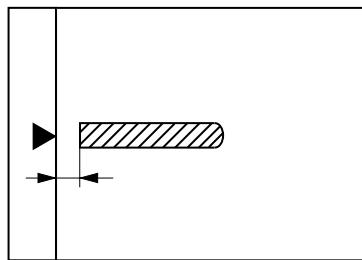

Note: Since the printed copy is used as a test chart, put the scale in parallel with the edge lines.


- 2) Make a copy, Then use the copy output as an original to make an SPF copy again.
- 3) Check the copy output. If necessary, perform the following adjustment procedures.
- 4) Execute SIM 50-6.
- 5) Set the SPF lead edge position set value (AUTO indicator ON) so that the same image is obtained as that obtained in the previous OC image lead edge position adjustment.

<Adjustment specification>


Adjustment mode	SIM	LED	Set value	Spec value	Set range
SPF image lead edge position (1st print surface)	SIM 50-6	AUTO	1 step: 0.1mm shift	Lead edge void: 1 - 4mm	1 ~ 99
(2nd print surface)		TEXT		Image loss: 3mm or less	

c.Rear edge void adjustment (SIM50-1, SIM50-19)

- Set a scale as shown in the figure below.

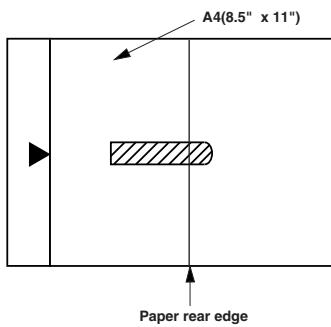

- Set the document size to A4 (8.5" x 11"), and make a copy at 100%.
- If necessary, perform the following adjustment procedure.

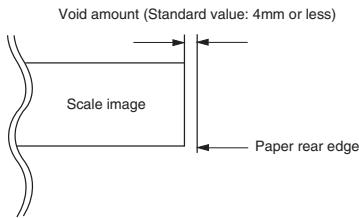

- Execute SIM 50-1 and set the density mode to AUTO + TEXT + PHOTO (Rear edge void). The currently set adjustment value is displayed.
- Enter the set value and press the [START] key. The correction value is stored and a copy is made.

<Duplex mode adjustment>

* 1st print surface (auto duplex) rear edge void adjustment:
SIM50-19 <<AUTO>>

* 2nd print surface (auto duplex) rear edge void adjustment:
SIM50-19<<TEXT>>

* Set to S → D mode before execution.

Note: Before performing the 2nd print surface rear edge void adjustment, be sure to perform the 2nd print surface lead edge position adjustment. Never reverse the sequence.

<Adjustment specification>

Mode	SIM	LED	Set value	Specifi-cation	Set range
Rear edge void	SIM 50-1	AUTO + TEXT + PHOTO	1 step: 0.1mm shift	4mm or less	1 ~ 99
1st print surface rear edge void	SIM 50-19*	AUTO			
2nd print surface rear edge void	SIM 50-19*	TEXT			

* Set to S → D mode before execution

d. Paper off center adjustment (SIM50-10)

- Set a test chart (UKOG-0089CSZZ) on the document table.
- Select a paper feed port and make a copy. Compare the copy and the test chart. If necessary, perform the following adjustment procedure.
- Execute SIM 50-10. After completion of warm-up, shading is performed and the currently set off center adjustment value of each paper feed port is displayed.
- Enter the set value and press the [START] key. The correction value is stored and a copy is made.

<Duplex mode adjustment>

* 2nd print surface (auto duplex) off-center adjustment:
SIM50-10 (TEXT, 1st tray indicator)

<Adjustment specification>

Mode	SIM	LED	Set value	Specifi-cation	Set range
Paper off center	SIM 50-10	AUTO + Selected tray ON	Add 1: 0.1mm shift to R side.	Single: Center ±2.0mm	1 ~ 99
2nd print surface off-center	SIM 50-10	TEXT + 1st tray	Reduce 1: 0.1mm shift to L side.		

e.Side edge void area adjustment (SIM26-43)

Note: Before performing this adjustment, be sure to check that the paper off center adjustment (SIM 50-10) is completed.

- Set a test chart (UKOG-0089CSZZ) on the document table.
- Select a paper feed port and make two copies. Compare the 2nd copy and the test chart. If necessary, perform the following adjustment procedure.
 - The 1st copy does not show the void. Be sure to check the 2nd copy.
- Execute SIM 26-43 and set the density mode to AUTO(right edge void) + TEXT (Left edge void). The currently set adjustment value is displayed.
- Enter the set value and press the [START] key. The correction value is stored.


<Adjustment specification>

Mode	SIM	LED	Set value	Specifi-cation	Set range
Left edge void	SIM 26-43	AUTO (right edge) + TEXT (left edge)	1 step: 0.5mm shift	0 ~ 10mm	1 ~ 99


* The void adjustment values on the right and the left must be the same.

(2) Main scanning direction(FR direction) distortion balance adjustment


- Remove the OC glass and the right cabinet.

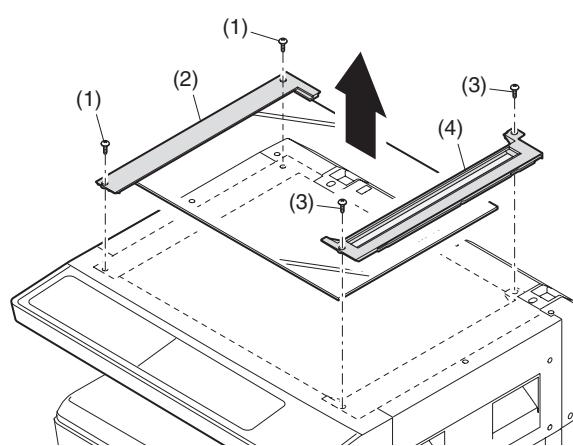

- 2) Loosen the copy lamp unit wire fixing screw.

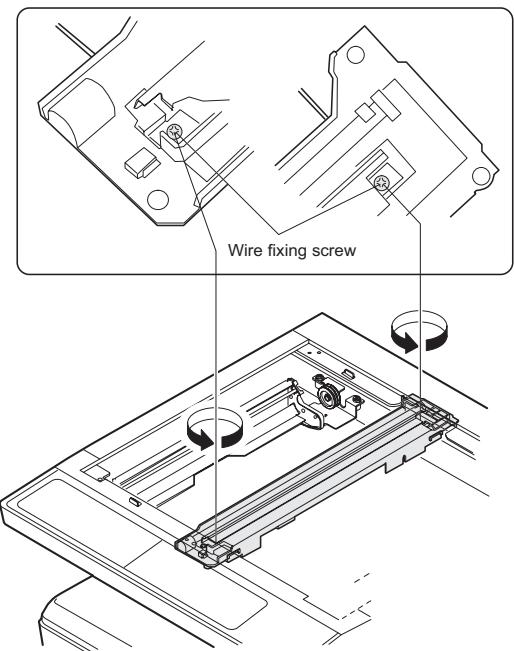


- 3) Manually turn the mirror base drive pulley and bring No. 2/3 mirror base unit into contact with the positioning plate. At that time, if the front frame side and the rear frame side of No. 2/3 mirror base unit are brought into contact with the positioning plate at the same time, the mirror base unit parallelism is proper. If one of them is in contact with the positioning plate, perform the adjustment of 4).


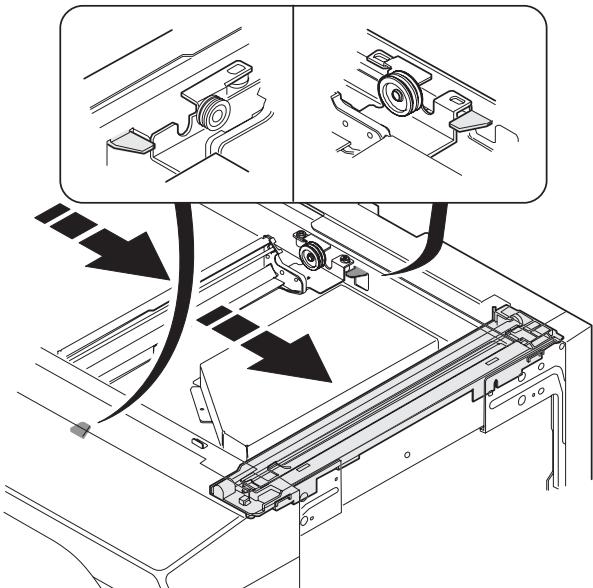


- 4) Loosen the set screw of the scanner drive pulley which is not in contact with No. 2/3 mirror base unit positioning plate.

- 5) Without moving the scanner drive pulley shaft, manually turn the scanner drive pulley until the positioning plate is brought into contact with No. 2/3 mirror base unit, then fix the scanner drive pulley.

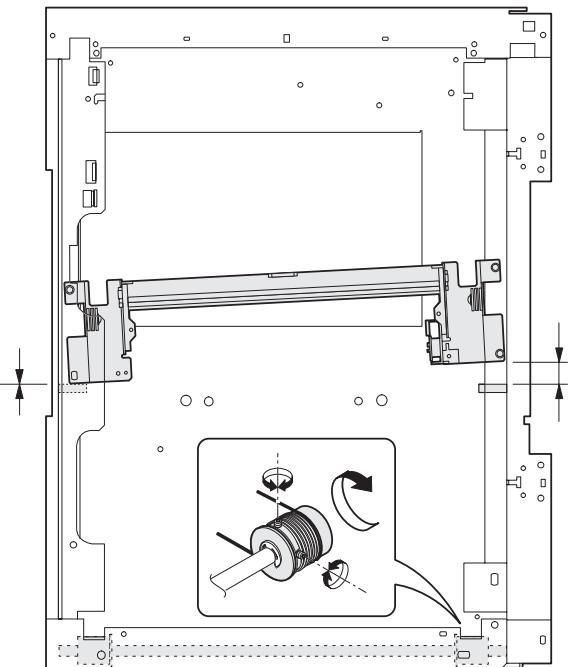


- 6) Put No. 2/3 mirror base unit on the positioning plate again, push the projections on the front frame side and the rear frame side of the copy lamp unit to the corner frame, and tighten the wire fixing screw.

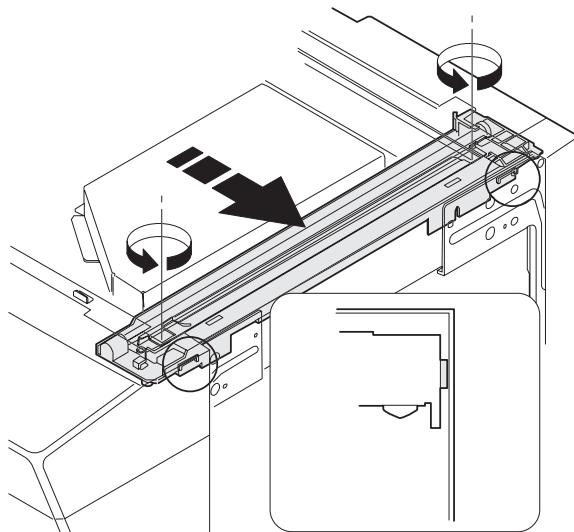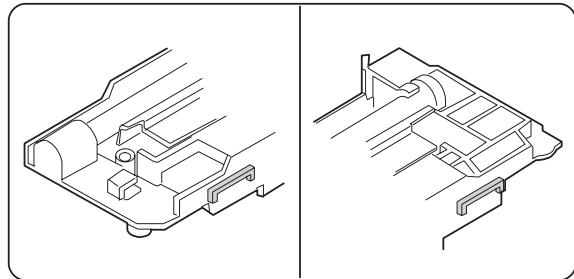


(3) Main scanning direction (FR direction) distortion adjustment

This adjustment must be performed in the following cases:


- When the mirror base drive wire is replaced.
- When the lamp unit, or No. 2/3 mirror holder is replaced.
- When a copy as shown is made.

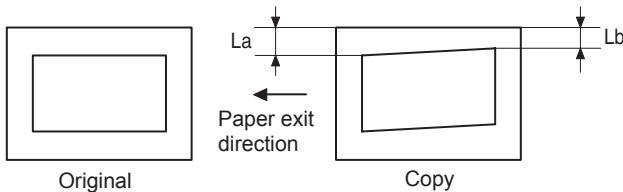

- 1) Set A3 (11" x 17") white paper on the original table as shown below.

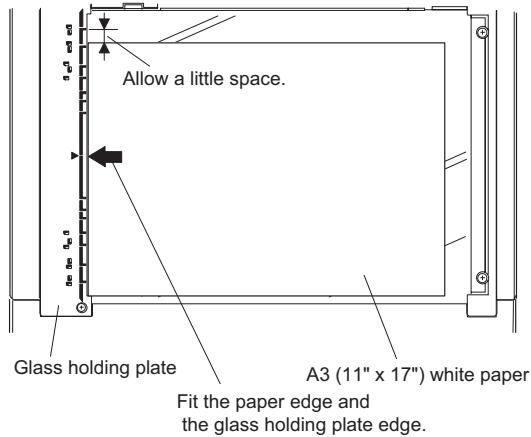

- 2) Open the original cover and make a normal (100%) copy.
- 3) Measure the width of the black background at the lead edge and at the rear edge.

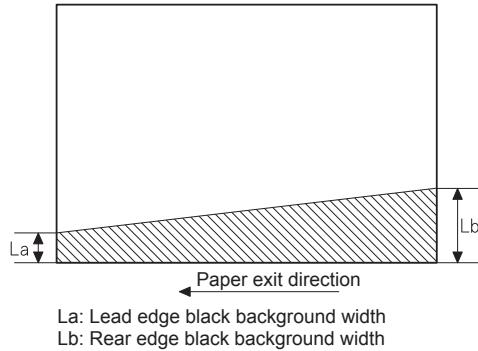


If the width (La) of the black background at the lead edge is equal to that (Lb) at the rear edge, there is no need to execute the following procedures of 4) ~ 7).

- 4) Loosen the mirror base drive pulley fixing screw on the front frame side or on the rear frame side.

- When $La < Lb$
Turn the mirror base drive pulley on the front frame side in the arrow direction A.
(Do not move the mirror base drive pulley shaft.)

- When $La > Lb$
Turn the mirror base drive pulley on the front frame side in the arrow direction A.
(Do not move the mirror base drive pulley shaft.)

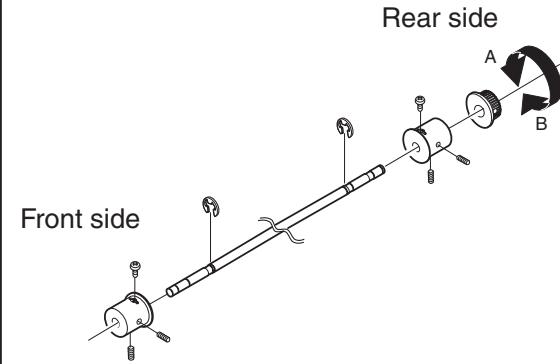

- 5) Tighten the mirror base drive pulley fixing screw.

<Adjustment specification>

$$La = Lb$$

- 6) Execute the main scanning direction (FR) distortion balance adjustment previously described in 2) again.


(4) Sub scanning direction (scanning direction) distortion adjustment

When there is no skew copy in the mirror base scanning direction and there is no horizontal error (right angle to the scanning direction), the adjustment can be made by adjusting the No. 2/3 mirror base unit rail height.

Before performing this adjustment, be sure to perform the horizontal image distortion adjustment in the laser scanner section.


This adjustment must be performed in the following cases:

- When the mirror base wire is replaced.
- When the copy lamp unit or No. 2/3 mirror unit is replaced.
- When the mirror unit rail is replaced or moved.
- When a following copy is made.

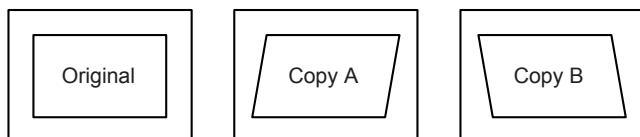


1) Making of a test sheet

Make test sheet by drawing parallel lines at 10mm from the both ends of A3 (11" x 17") white paper as shown below. (These lines must be correctly parallel to each other.)

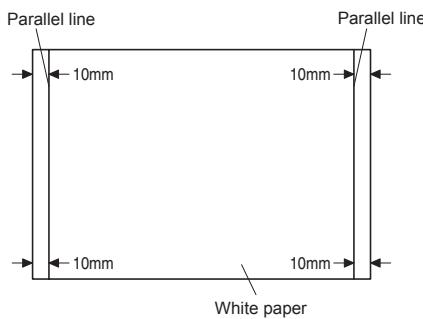


- 2) Make a normal (100%) copy of the test sheet on A3 (11" x 17") paper. (Fit the paper edge with the glass holding plate edge.)
- 3) Measure the distances (La , Lb , Lc , Ld) at the four corners as shown below.

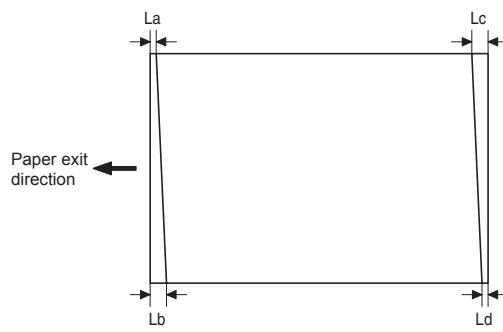

When $La = Lb$ and $Lc = Ld$, no need to perform the procedures 4) and 5).

- 4) Move the mirror base F rail position up and down (in the arrow direction) to adjust.

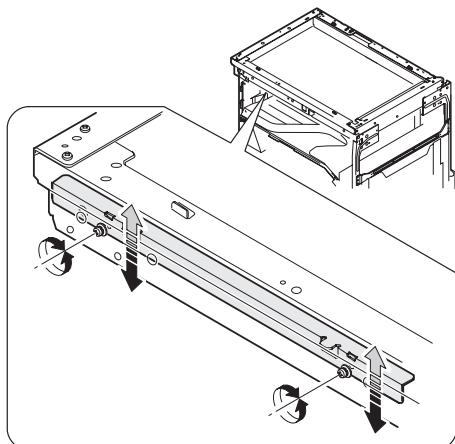

Note: Do not adjust the rail on the rear side.

If the rail on the rear side is adjusted, a trouble may be caused.
Only the rail on the front side can be adjusted.

- When $La > Lb$
Shift the mirror base B rail upward by the half of the difference of $La - Lb$.

- When $La < Lb$
Shift the mirror base B rail downward by the half of the difference of $Lb - La$.
Example: When $La = 12\text{mm}$ and $Lb = 9\text{mm}$, shift the mirror base B rail upward by 1.5mm.

- When $Lc > Ld$
Shift the mirror base B rail downward by the half of the difference of $Lc - Ld$.

- When $Lc < Ld$
Shift the mirror base B rail upward by the half of the difference of $Ld - Lc$.

* When moving the mirror base rail, hold the mirror base rail with your hand.

<Adjustment specification>


$$La = Lb, Lc = Ld$$

- 5) After completion of adjustment, manually turn the mirror base drive pulley, scan the mirror base A and mirror base B fully, and check that the mirror bases are not in contact with each other.
* If the mirror base rail is moved extremely, the mirror base may be in contact with the frame or the original glass. Be careful to avoid this.

(5) Main scanning direction (FR direction) magnification ratio adjustment (SIM 48-1)

Note: Before performing this adjustment, be sure to check that the CCD unit is properly installed.

- 1) Put a scale on the original table as shown below.

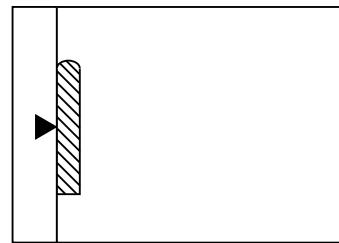

- 2) Execute SIM 48-1.
- 3) After warm-up, shading is performed and the current set value of the main scanning direction magnification ratio is displayed on the display section in 2 digits.
- 4) Select the mode and press the [START] key again.
- 5) Manual correction mode (TEXT indicator ON)
Enter the set value and press the [START] key.
The set value is stored and a copy is made.

<Adjustment specification>

Note: A judgment must be made with 200mm width, and must not be made with 100mm width.

Mode	Specification	SIM	Set value	Set range
Main scanning direction magnification ratio	At normal: ±1.0%	SIM 48-1	Add 1:0.1% increase Reduce 1: 0.1% decrease	1 ~ 99

(6) Sub scanning direction (scanning direction) magnification ratio adjustment (SIM 48-1, SIM 48-5)

a. OC mode in copying (SIM48-1)

Note: Before performing this adjustment, be sure to check that the CCD unit is properly installed.

- 1) Put a scale on the original table as shown below, and make a normal (100%) copy.
- 2) Compare the scale image and the actual image. If necessary, perform the following adjustment procedures.
- 3) Execute SIM 48-1.<<PHOTO>>
- 4) After warm-up, shading is performed and the current set value of the main scanning direction magnification ratio is displayed on the display section in 2 digits.
- 5) When the photo indicator is lighted by pressing the AUTO/TEXT/PHOTO key, the current magnification ratio correction value in the sub scanning direction is displayed in lower 2 digits of the display section.
- 6) Enter the set value and press the [START] key.
The set value is stored and a copy is made.

<Adjustment specification>


Mode	Specification	SIM	Set value	Set range
Sub scanning direction magnification ratio (OC mode)	Normal ±1.0%	SIM 48-1 (PHOTO)	Add 1:0.1% increase Reduce 1: 0.1% decrease	1 ~ 99

b. RSPF sub scanning direction magnification ratio (SIM48-5)

Note:

- Before performing this adjustment, be sure to check that the CCD unit is properly installed.
- Before performing this adjustment, the OC mode adjustment in copying must be completed.

- 1) Put a scale on the original table as shown below, and make a normal (100%) copy to make a test chart.

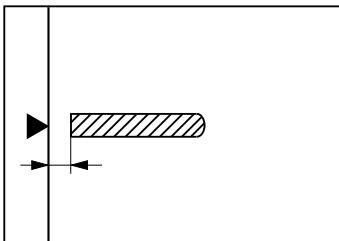

Note: Since the printed copy is used as a test chart, put the scale in parallel with the edge lines.

- 2) Set the test chart on the SPF and make a normal (100%) copy.
- 3) Compare the scale image and the actual image. If necessary, perform the following adjustment procedures.
- 4) Execute SIM 48-5.
- 5) After warm-up, shading is performed.
The AUTO indicator lights up and the current front surface sub scanning direction magnification ratio correction value is displayed in two digits on the display section.
- 6) Enter the set value and press the [START] key.
The set value is stored and a copy is made.
- 7) Change the mode from the duplex original mode to the simplex original mode.
TEXT indicator lights up and the current back surface sub scanning direction magnification ratio is displayed in two digits on the display section.
- 8) Enter the set value and press the [START] key.
The set value is stored and a copy is made.


<Adjustment specification>

Mode	Specification	SIM	Set value	Set range
Sub scanning direction magnification ratio (SPF mode)	Normal ±1.0%	SIM 48-5	Add 1:0.1% increase Reduce 1: 0.1% decrease	1 ~ 99

(7) Off center adjustment (SIM 50-12)

a. OC mode (SIM50-12)

- 1) Make a test chart as shown below and set it so that its center line is fit with the original guide center mark.
- * To make a test chart, draw a line on A3 or 11" x 17" paper at the center in the paper transport direction.

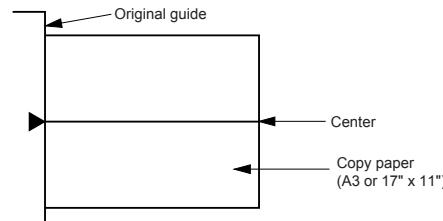

- 2) Make a normal copy from the bypass tray, and compare the copy and the test chart.
If necessary, perform the following adjustment procedures.
- 3) Execute SIM 50-12.
- 4) After warm-up, shading is performed and the current set value of the off center adjustment is displayed on the display section in 2 digits.
- 5) Enter the set value and press the [START] key.
The set value is stored and a copy is made.

<Adjustment specification>

Mode	Specification	SIM	Set value	Set range
Original off center mode (OC mode)	Single: Center ±2.0mm	SIM 50-12 (AUTO indicator ON)	Add 1: 0.1mm shift to R side Reduce 1: 0.1mm shift to L side	1 ~ 99

b. SPF original off-center adjustment (SIM50-12)

Note: Before performing this adjustment, be sure to check that the paper off center is properly adjusted.

- 1) Make a test chart for the center position adjustment and set it on the SPF.

<Adjustment specification>

Draw a line on a paper in the scanning direction.

- 2) Make a normal copy from the bypass tray, and compare the copy and the original test chart.
If necessary, perform the following adjustment procedures.
- 3) Execute SIM 50-12.
- 4) After warm-up, shading is performed and the current set value of the off center adjustment at each paper feed port is displayed on the display section in 2 digits.
- 5) Enter the set value and press the [START] key.
The set value is stored and a copy is made.

<Adjustment specification>

Mode	Specification	SIM	Set value	Set range
Original off center mode (SPF mode)	Single: Center ±3.0mm(TEXT indicator)	SIM 50-12	Add 1: 0.1mm shift to R side Reduce 1: 0.1mm shift to L side	1 ~ 99
	Duplex: Center ±3.5mm(PHOTO indicator)			

(8) SPF white correction pixel position adjustment(SIM63-7) (required in an SPF model when replacing the lens unit)

- 1) Fully open the SPF.
- 2) Execute SIM 63-7.
- 3) When the operation panel displays "COMPLETE," the adjustment is completed.
- 4) If the operation panel displays "ERROR," perform the following measures.

•When the display is 0:

Check that the SPF is open.

Check that the lamp is ON.(If the lamp is OFF, check the MCU connector.)


Check that the CCD harness is properly inserted into the MCU connector.

•When the display is 281 or above:

- 1) Remove the table glass.
- 2) Remove the dark box.
- 3) Slide the lens unit toward the front side and attach it, then execute SIM.

•When the display is 143 or below:

- 1) Remove the table glass.
- 2) Remove the dark box.
- 3) Slide the lens unit toward the rear side and attach it, then execute SIM.

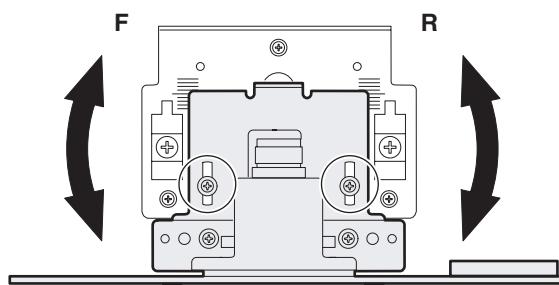


- * When the lens unit is moved, execute the OC main scanning magnification ratio auto adjustment, SIM 48-1-1, SIM 48-3 and the PF original off-center adjustment.
- * This adjustment is basically O.K. with SIM 63-7.

C.Image density adjustment

(1)Copy mode (SIM 46-1)

- 1) Set a test chart (UKOG-0162FCZZ) on the OC table as shown below.

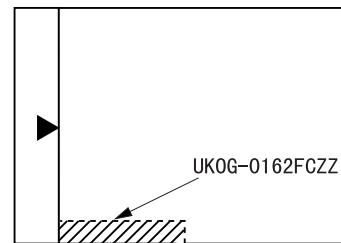

- 2) Put several sheets of A3 or 11" x 17" white paper on the test chart.
- 3) Execute SIM 46-1.
- 4) After warm-up, shading is performed and the current set value of the density level is displayed on the display section in 2 digits.
For mode selection, use the AUTO/TEXT/PHOTO key.
- 5) Change the set value with the Numeric keys to adjust the copy image density.
- 6) Make a copy and check that the specification below is satisfied.

<Adjustment specification>

Density mode	LED	Exposure level	Sharp Gray Chart output	Set value	Set range
Auto	Auto	-	"2" is slightly copied.	The greater the set value is the greater the density is. The smaller the set value is the smaller the density is.	1 ~ 99
Text	Text	3	"3" is slightly copied.		
Photo (Error diffusion)	Photo	3	"2" is slightly copied.		
Toner save	Text/ Photo	3	"3" is slightly copied		
Toner save	Auto/ Photo	-	"2" is slightly copied		
Photo (Dither)	Auto/ Text/ Photo	3	"2" is slightly copied		

[7] SIMULATIONS

1. Entering the simulation mode

Perform the following procedure to enter the simulation mode.
#" key → Interrupt key → CLEAR key (C) → Interrupt key →
Main code → [START] key → Sub code → [START] key

2. Canceling the simulation mode

When the CLEAR ALL key is pressed, the simulation mode is cancelled.
When the INTERRUPT key is pressed, the process is interrupted and the screen returns to the sub code entering display.

* After canceling the simulation mode, be sure to turn OFF/ON the power and check the operation.

Note: If the machine is terminated by a jam error or paper empty during copying in the adjustment by the simulation, recopying is required.

3. List of simulations

Main code	Sub code	Contents
01	01	Mirror scanning operation
	02	Mirror home position sensor (MHPS) status display
	06	Mirror scanning operation aging
02	01	Single paper feeder (SPF) aging
	02	SPF sensor status display
	03	SPF motor operation check
	08	SPG paper feed solenoid operation check
	09	RSPF reverse solenoid operation check
	11	SPF PS release solenoid operation check
05	01	Operation panel display check
	02	Fusing lamp and cooling fan operation check
	03	Copy lamp lighting check
06	01	Paper feed solenoid operation check
	02	Resist roller solenoid operation check
	10	1st tray semicircular roller cleaning
07	01	Warm-up display and aging with jam
	06	Intermittent aging
	08	Shifting with warm-up display
08	01	Developing bias output
	02	Main charger output (Grid = HIGH)
	03	Main charger output (Grid = LOW)
	06	Transfer charger output
09	01	Duplex motor forward rotation check
	02	Duplex motor reverse rotation check
	04	Duplex motor RPM adjustment
	05	Duplex motor switchback time adjustment
10	-	Toner motor operation
14	-	Trouble cancel (except for U2)
16	-	U2 trouble cancel
20	01	Maintenance counter clear
21	01	Maintenance cycle setting
	02	Mini maintenance cycle setting
22	01	Maintenance counter display
	02	Maintenance preset display
	03	Jam memory display
	04	Jam total counter display
	05	Total counter display
	06	Developing counter display
	07	Mini maintenance preset display
	08	SPF counter display
	09	Paper feed counter display
	12	Drum counter display
	13	CRUM type display
	14	P-ROM version display
	15	Trouble memory display
	16	Duplex print counter display
	17	Copy counter display
	18	Printer counter display
	19	Scanner mode counter display
	21	Scanner counter display
	22	SPF jam counter display
	50	Developer rotation time display
	51	Drum rotation time display

Main code	Sub code	Contents	Main code	Sub code	Contents
24	01	Jam total counter clear	46	01	Copy density adjustment (300dpi)
	02	Trouble memory clear		02	Copy density adjustment (600dpi)
	04	SPF counter clear		09	Copy exposure level adjustment, individual setting (Text) 300dpi
	05	Duplex print counter clear		10	Copy exposure level adjustment, individual setting (Text) 600dpi
	06	Paper feed counter clear		11	Copy exposure level adjustment, individual setting (Photo) 600dpi
	07	Drum counter clear		18	Image contrast adjustment (300dpi)
	08	Copy counter clear		19	Exposure mode setting (Gamma table setting/AUTO exposure operation mode setting/Photo image process setting)
	09	Printer counter clear		20	SPF exposure correction
	13	Scanner counter clear		29	Image contrast adjustment (600dpi)
	14	SPF jam total counter clear		30	AUTO exposure limit setting
	15	Scanner mode counter clear		31	Image sharpness adjustment
	01	Main motor operation check		01	Main/sub scanning magnification ratio adjustment
	02	Auto developer adjustment (Initial setting of toner density when replacing developer)		05	SPF/RSPF mode sub scanning magnification ratio adjustment in copying
	10	Polygon motor operation check		48	01 Main motor operation check
26	02	Size setting		01	Flash ROM program writing mode
	03	Auditor setting		50	01 Image lead edge adjustment
	04	Copier duplex setting		06	Copy lead edge position adjustment (SPF/RSPF)
	05	Count mode setting		10	Paper off-center adjustment
	06	Destination setting		12	Document off-center adjustment
	07	Machine condition check (CPM)		18	Memory reverse position adjustment in duplex copy
	18	Toner save mode setting		19	Rear edge void adjustment in duplex copy
	30	CE mark conformity control ON/OFF		51	02 Resist amount adjustment
	31	Auditor mode exclusive setup		53	08 SPF scanning position automatic adjustment
	36	Cancel of stop at maintenance life over		10	SPF document scan position select setting
	37	Cancel of stop at developer life over		60	01 SDRAM (image memory area) access check
	38	Cancel of stop at drum life over		61	02 Laser power correction ON/OFF
	39	Memory capacity check		03	H SYNC output check
	42	Transfer ON/OFF timing control setting		63	01 Shading check
	43	Side void amount setting		07	SPF automatic correction
	51	Copy temporary stop function setting		64	01 Self print
	54	Life correction ON/OFF setting			
	69	Operation setting when CRUM toner end			
30	01	Paper sensor status display			
42	01	Developing counter clear			
43	01	Fusing temperature setting			
	10	Postcard paper feed cycle setting			
	11	Postcard size paper fusing temperature setting			
	12	Standby mode fusing fan rotation setting			
	13	Fusing paper interval control allow/inhibit setting			
44	01	Toner density control Enable/Disable (ON/OFF) setting			
	16	Toner density control data check and toner density control correction amount display			
	34	Transfer current setting			
	40	Setting of rotation time before toner supply			

4. Contents of simulations

Main code	Sub code	Contents	Details of operation																					
01	01	Mirror scanning operation	<p>When the [START] key is pressed, the home position is checked in the first place, and the mirror base performs A3 full scanning once at the set magnification ratio speed. During this scanning, the set magnification ratio is displayed. The mirror home position sensor status is displayed with the developer replacement required indicator.</p> <p>(The lamp lights up when the mirror is in the home position.)</p> <p>During scanning, the copy lamp lights up.</p> <p>When the [Interrupt] key is pressed, the operation is interrupted to go to the sub code input standby mode.</p>																					
	02	Mirror home position sensor (MHPS) status display	<p>Used to monitor the mirror home position sensor. When the sensor is ON, the developer replacement required indicator is lighted. During that time, the display section displays the sub code. When the [Interrupt] key is pressed, the machine goes to the sub code input standby mode.</p> <p>(When the CA key is pressed, the simulation is terminated.)</p>																					
	06	Mirror scanning operation aging	<p>When the [START] key is pressed, the mirror base performs A3 full scanning at the set magnification ratio speed. During scanning, the set magnification ratio is displayed. After 3 seconds, the mirror base performs full scanning again. During scanning, the set magnification ratio is displayed.</p> <p>* When the [START] key is pressed again, the START indicator turns and remains off.</p> <p>The developer replacement required indicator displays the status of the mirror home position sensor. (The lamp lights up when the mirror is in the home position.)</p> <p>During aging, the copy lamp lights up. When the [Interrupt] key is pressed, the operation is interrupted if operating, and the machine goes into the sub code input standby mode.</p>																					
02	01	Single paper feeder (SPF) aging (Only when the SPF/RSPF is installed)	<p>When the [START] key is pressed, the set magnification ratio is acquired and document transport operation of single surface is performed in the case of SPF or document transport operation of duplex surfaces is performed in the case of RSPF. Since, however, there is no limited condition for this operation, it does not stop even at a paper jam. During operation, the LED on the display section corresponding to the selected magnification ratio lights up, and the magnification ratio is displayed on the 7-seg display. When the [Interrupt] key is pressed at that time, the machine goes to the sub code input standby mode. When the [CA] key is pressed, the simulation is terminated.</p> <p><Conditions for executing this simulation></p> <p>Set paper on the SPF and fix it with tape. If paper is not fixed, the operations cannot be guaranteed.</p>																					
	02	SPF sensor status display (Only when the SPF/RSPF is installed)	<p>(In order to receive the sensor change notification, the load must be decreased.)</p> <p>The sensor status (ON/OFF) in the SPF can be checked with the following lamps.</p> <p>When a sensor detects paper, it turns on. The open/close detection sensor turns on when the machine is opened.</p> <table border="1"> <thead> <tr> <th>LED</th> <th>Sensor</th> </tr> </thead> <tbody> <tr> <td>Toner cartridge replacement required indicator</td> <td>SPF document set sensor</td> </tr> <tr> <td>Misfeed indicator(Copier)</td> <td>SPF document transport sensor</td> </tr> <tr> <td>Developer replacement required indicator</td> <td>SPF unit (OC cover) open/close sensor</td> </tr> <tr> <td>Paper required indicator</td> <td>SPF paper exit sensor</td> </tr> <tr> <td>Misfeed indicator(SPF)</td> <td>SPF paper feed cover open/close sensor</td> </tr> <tr> <td>Bypass tray indicator</td> <td>SPF paper length sensor 1</td> </tr> <tr> <td>Misfeed indicator(1st Tray)</td> <td>SPF paper length sensor 2</td> </tr> <tr> <td>AUTO indicator</td> <td>SPF paper feed width sensor (small)</td> </tr> <tr> <td>TEXT indicator</td> <td>SPF paper feed width sensor (middle)</td> </tr> <tr> <td>PHOTO indicator</td> <td>SPF paper feed width sensor (large)</td> </tr> </tbody> </table> <p>When the [Interrupt] key is pressed, the machine goes to the sub code input standby mode.</p> <p>When the [CA] key is pressed, the simulation is terminated.</p>	LED	Sensor	Toner cartridge replacement required indicator	SPF document set sensor	Misfeed indicator(Copier)	SPF document transport sensor	Developer replacement required indicator	SPF unit (OC cover) open/close sensor	Paper required indicator	SPF paper exit sensor	Misfeed indicator(SPF)	SPF paper feed cover open/close sensor	Bypass tray indicator	SPF paper length sensor 1	Misfeed indicator(1st Tray)	SPF paper length sensor 2	AUTO indicator	SPF paper feed width sensor (small)	TEXT indicator	SPF paper feed width sensor (middle)	PHOTO indicator
LED	Sensor																							
Toner cartridge replacement required indicator	SPF document set sensor																							
Misfeed indicator(Copier)	SPF document transport sensor																							
Developer replacement required indicator	SPF unit (OC cover) open/close sensor																							
Paper required indicator	SPF paper exit sensor																							
Misfeed indicator(SPF)	SPF paper feed cover open/close sensor																							
Bypass tray indicator	SPF paper length sensor 1																							
Misfeed indicator(1st Tray)	SPF paper length sensor 2																							
AUTO indicator	SPF paper feed width sensor (small)																							
TEXT indicator	SPF paper feed width sensor (middle)																							
PHOTO indicator	SPF paper feed width sensor (large)																							
03		SPF motor operation check (Only when the SPF/RSPF is installed)	<p>When the [START] key is pressed, the motor rotates for 10 sec at the speed corresponding to the set magnification ratio. When the [Interrupt] key is pressed, the machine stops operation and goes to the sub code input standby mode. When the [CA] key is pressed, the simulation is terminated.</p>																					
08		SPF paper feed solenoid operation check (Only when the SPF/RSPF is installed)	<p>The SPF paper feed solenoid (PSOL) is turned ON for 500msec and OFF for 500msec. This operation is repeated 20 times.</p> <p>After completion of the process, the machine goes to the sub code input standby mode.</p> <p>When the [Interrupt] key is pressed during the process, the machine goes to the sub code input standby mode. When the [CA] key is pressed, the simulation is terminated.</p>																					
09		RSPF reverse solenoid operation check	<p>The RSPF reverse solenoid (PSOL) is turned ON for 500msec and OFF for 500msec. This operation is repeated 20 times.</p> <p>After completion of the process, the machine goes to the sub code input standby mode.</p> <p>When the [Interrupt] key is pressed during the process, the machine goes to the sub code input standby mode. When the [CA] key is pressed, the simulation is terminated.</p> <p>Since the paper exit gate solenoid is abolished, even though the RSPF is installed, this simulation does not work.</p>																					

Main code	Sub code	Contents	Details of operation			
2	10	RSPF paper exit gate solenoid operation check (Only when the SPF/RSPF is installed)	The RSPF paper exit gate solenoid (GSOL) is turned ON for 500msec and OFF for 500msec. This operation is repeated 20 times. After completion of the process, the machine goes to the sub code input standby mode. When the [Interrupt] key is pressed during the process, the machine goes to the sub code input standby mode. When the [CA] key is pressed, the simulation is terminated.			
	11	SPF PS release solenoid operation check	The SPF PS release solenoid (CLH) is turned ON for 500msec and OFF for 500msec. This operation is repeated 20 times. After completion of the process, the machine goes to the sub code input standby mode. When the [Interrupt] key is pressed during the process, the machine goes to the sub code input standby mode. When the [CA] key is pressed, the simulation is terminated.			
05	01	Operation panel display check	<p><<LED check mode (ALL ON/Individual ON)>> When the [START] key is pressed in the sub code input mode, all the LED's (including the 7-seg display) are turned ON. After 5 sec of all ON, the machine goes to the sub code input standby mode. When the [AUTO/TEXT/PHOTO] key is pressed during all ON, the lighting mode is shifted to the individual ON mode, where the LED's are individually lighted from the left top, to the left bottom, to the next line top, to the bottom, and so on. (For the 7-seg display, the 3-digit lamps are lighted at once.) After completion of lighting of all the lamps, the mode is shifted to the all ON mode. After 5 sec of all ON mode, the machine goes to the sub code input standby mode.</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">Individual ON mode cycle:</td> <td style="padding: 2px;">300ms for ON</td> <td style="padding: 2px;">20ms for OFF</td> </tr> </table> <p>When the [Interrupt] key is pressed in the LCD check mode, the machine goes back to the sub code input standby mode. When the [CA] key is pressed, the simulation is terminated. When the [START] key is pressed with all the lamps ON, the machine goes back to the key input check mode.</p> <p><< Key input check mode>> When the machine goes into the key input check mode, [- - -] is displayed on the copy quantity display. Every time when a key on the operation panel is pressed, the input value is added on the copy quantity display. [- - -] → [1] → [2] → ... When a key is pressed once, it is not counted again. When the [START] key is pressed, the input number is added and displayed for 3 sec, and the machine goes into the LED lighting check mode (LED all ON state). When the [Interrupt] key is pressed for the first time, it is counted. When the key is pressed for the second time, the machine goes into the sub code input mode. When the [CA] key is pressed for the first time, it is counted. When the key is pressed for the second time, the simulation is terminated. (Note for the key input check mode).</p> <ul style="list-style-type: none"> •Press the [START] key at the end. (When the key is pressed during the process, the machine goes into the LED lighting check mode (all ON state)). •When two or more keys are pressed simultaneously, they are ignored. 	Individual ON mode cycle:	300ms for ON	20ms for OFF
Individual ON mode cycle:	300ms for ON	20ms for OFF				
02	Fusing lamp and cooling fan operation check	When the [START] key is pressed, the fusing lamp turns ON for 500ms and OFF for 500ms. The operation is repeated 5 times. During this process, the cooling fan motor rotates. After completion of the process, the machine goes into the sub code input standby mode.				
03	Copy lamp lighting check	When the [START] key is pressed, the copy lamp lights up for 5 sec. After completion of lighting, the machine goes into the sub code input mode. When the [Interrupt] key is pressed, the process is interrupted and the machine goes into the sub code input standby mode. When the [CA] key is pressed, the simulation is terminated.				

Main code	Sub code	Contents	Details of operation																
06	01	Paper feed solenoid operation check	<p>When this simulation is executed, the sub code is displayed on the 7-seg display and the lamp corresponding to the solenoid lights up.</p> <p>Select a solenoid with the [TRAY SETTING] key (the lamp corresponding to the solenoid lights up) and press the [START] key, and the machine repeats operation of ON for 500ms and OFF for 500ms. This operation is repeated 20 times.</p> <p>After that, the machine goes into the sub code entry standby mode.</p> <table border="1"> <thead> <tr> <th>LED</th><th>Solenoid</th></tr> </thead> <tbody> <tr> <td>Main tray indicator</td><td>1st tray paper feed solenoid</td></tr> <tr> <td>2nd tray indicator</td><td>* 2nd tray paper feed solenoid</td></tr> <tr> <td>3rd tray indicator</td><td>* 3rd tray paper feed solenoid</td></tr> <tr> <td>4th tray indicator</td><td>* 4th tray paper feed solenoid</td></tr> <tr> <td>Bypass tray indicator</td><td>Bypass tray solenoid</td></tr> <tr> <td>Misfeed indicator(2nd tray)</td><td>* 2nd tray transport solenoid</td></tr> <tr> <td>Misfeed indicator(Copier) & Misfeed indicator(2nd tray)</td><td>* 3rd tray transport solenoid</td></tr> </tbody> </table>	LED	Solenoid	Main tray indicator	1st tray paper feed solenoid	2nd tray indicator	* 2nd tray paper feed solenoid	3rd tray indicator	* 3rd tray paper feed solenoid	4th tray indicator	* 4th tray paper feed solenoid	Bypass tray indicator	Bypass tray solenoid	Misfeed indicator(2nd tray)	* 2nd tray transport solenoid	Misfeed indicator(Copier) & Misfeed indicator(2nd tray)	* 3rd tray transport solenoid
LED	Solenoid																		
Main tray indicator	1st tray paper feed solenoid																		
2nd tray indicator	* 2nd tray paper feed solenoid																		
3rd tray indicator	* 3rd tray paper feed solenoid																		
4th tray indicator	* 4th tray paper feed solenoid																		
Bypass tray indicator	Bypass tray solenoid																		
Misfeed indicator(2nd tray)	* 2nd tray transport solenoid																		
Misfeed indicator(Copier) & Misfeed indicator(2nd tray)	* 3rd tray transport solenoid																		
02	Resist roller solenoid operation check	<p>When the [START] key is pressed in the sub code input state, the resist solenoid (RRS) turns ON for 500ms and OFF for 500ms. This operation is repeated 20 times.</p> <p>After completion of the process, the machine goes into the sub code input standby mode.</p>																	
10	1st tray semicircular roller cleaning	<p>The main motor is rotated to rotate the semicircular roller of the 1st tray one turn to face the semicircular roller down. (Remove the developing layer when performing this operation.)</p> <p>During this process, the sub code is displayed on the display section.</p> <p>After completion of the process, the machine goes into the sub code input standby mode.</p>																	
07	01	Warm-up display and aging with jam	<p>Copying is repeated to make the set copy quantity. When this simulation is executed, warm-up is started and warm-up time is counted up every second from 0 and displayed. After completion of warm-up, warm-up time count is stopped. When the [CA] key is pressed, the START indicator lights up. After that, when the copy quantity is inputted with keys and the [START] key is pressed, copying is repeated to make the set copy quantity. (Intermittent 0 sec) This simulation is canceled by turning off the power or performing a simulation that executes hardware reset.</p>																
	06	Intermittent aging	<p>Copying is repeated to make the set copy quantity. When this simulation is performed, warm-up is performed and the START indicator is lighted. Enter the copy quantity with the key and press the [START] key, and copying is repeated to make the set copy quantity, the ready state remains for 3 sec, and copying is repeated again to make the set copy quantity. These operations are repeated. This simulation is canceled by turning off the power or performing a simulation that executes hardware reset.</p>																
	08	Shifting with warm-up display (Shifting similar to pressing the CA key)	<p>When the simulation code is entered, warm-up is started and warm-up time is counted up every second from 0 and displayed. When the [CA] key is pressed during counting up, the display section displays "0" and count-up process stops. However, warm-up is continued.</p> <p>After completion of warm-up, counting is stopped. Press the [CA] key to terminate the simulation mode. (This simulation is similar to SIM07-01, but without the aging function.)</p>																
08	01	Developing bias output	<p>When the [START] key is pressed, the developing bias signal is turned ON for 30 sec. However, to calculate the actual output value is calculated, execute SIM25-01.</p> <p>After completion of the process, the machine goes into the sub code input standby mode.</p>																
	02	Main charger output (Grid = HIGH)	<p>When the [START] key is pressed, the main charger output is supplied for 30 sec in the grid voltage HIGH mode. After completion of the process, the machine goes into the sub code input standby mode.</p>																
	03	Main charger output (Grid = LOW)	<p>When the [START] key is pressed, the main charger output is supplied for 30 sec in the grid voltage LOW mode. After completion of the process, the machine goes into the sub code input standby mode.</p>																
	06	Transfer charger output	<p>Select an output mode with the [AUTO/TEXT/PHOTO] key and press the [START] key. The transfer charger output is delivered for 30 sec in the selected mode.</p> <p>After 30 sec of transfer charger output, the machine goes into the sub code entry standby mode.</p> <table border="1"> <thead> <tr> <th>LED</th><th>Output mode</th></tr> </thead> <tbody> <tr> <td>AUTO indicator</td><td>Normal size width: Front surface</td></tr> <tr> <td>TEXT indicator</td><td>Normal size width: Back surface*</td></tr> <tr> <td>AUTO indicator & PHOTO indicator</td><td>Small size width: Front surface</td></tr> <tr> <td>TEXT indicator & PHOTO indicator</td><td>Small size width: Back surface*</td></tr> <tr> <td>AUTO & TEXT & PHOTO indicator</td><td>Bypass tray indicator mode</td></tr> </tbody> </table> <p>*Small size is Letter R (A4R) or smaller. * Duplex model only</p>	LED	Output mode	AUTO indicator	Normal size width: Front surface	TEXT indicator	Normal size width: Back surface*	AUTO indicator & PHOTO indicator	Small size width: Front surface	TEXT indicator & PHOTO indicator	Small size width: Back surface*	AUTO & TEXT & PHOTO indicator	Bypass tray indicator mode				
LED	Output mode																		
AUTO indicator	Normal size width: Front surface																		
TEXT indicator	Normal size width: Back surface*																		
AUTO indicator & PHOTO indicator	Small size width: Front surface																		
TEXT indicator & PHOTO indicator	Small size width: Back surface*																		
AUTO & TEXT & PHOTO indicator	Bypass tray indicator mode																		

Main code	Sub code	Contents	Details of operation														
09	01	Duplex motor forward rotation check (Duplex model only)	The duplex motor is driven in forward direction (in the paper exit direction) for 30 sec. During the process, the display section displays the sub code. After completion of the process, the machine goes into the sub code input standby mode. When the [Interrupt] key is pressed, the machine goes into the sub code input standby mode. When the [CA] key is pressed, the simulation is terminated.														
	02	Duplex motor reverse rotation check (Duplex model only)	The duplex motor is driven in reverse direction for 30 sec. During the process, the display section displays the sub code. After completion of the process, the machine goes into the sub code input standby mode. When the [Interrupt] key is pressed, the machine goes into the sub code input standby mode. When the [CA] key is pressed, the simulation is terminated.														
	04	Duplex motor RPM adjustment (Duplex model only)	When any key input is made, it is displayed on the display section. When the [START] key is pressed, the set code data are acquired and stored in the EEPROM, and the machine goes into the sub code input standby mode. When, however, the [START] key is pressed outside the set range, it is not assured. <table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td>Set range: 1 - 13</td> <td>Default: 4</td> </tr> </table> At that time, when the [Interrupt] key is pressed, the data are not rewritten and the machine goes into the sub code input standby mode. When the [CA] key is pressed, the simulation is terminated without rewriting the data.	Set range: 1 - 13	Default: 4												
Set range: 1 - 13	Default: 4																
05		Duplex motor switchback time adjustment (Duplex model only)	When any key input is made, it is displayed on the display section. When the [START] key is pressed, the set code data are acquired and stored in the EEPROM, and the machine goes into the sub code input standby mode. <table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td>Set range: 50 ~ 76</td> <td>Default: 50</td> </tr> </table> (Change quantity 1 → 1-2 phase 3 steps) At that time, when the [Interrupt] key is pressed, the data are not rewritten and the machine goes into the sub code input standby mode. When the [CA] key is pressed, the simulation is terminated without rewriting the data.	Set range: 50 ~ 76	Default: 50												
Set range: 50 ~ 76	Default: 50																
10	-	Toner motor operation	When the [START] key is pressed, the toner motor is driven for 30 sec. After completion of the process, the machine goes into the main code input standby mode. When the [Interrupt] key is pressed, the machine goes into the main code input standby mode.														
14	-	Trouble cancel (except for U2)	* Trouble to write into the EEPROM such as H trouble is canceled and hardware reset is performed.														
16	-	U2 trouble cancel	* U2 trouble is canceled and hardware reset is performed.														
20	01	Maintenance counter clear	When the [START] key is pressed, the maintenance count value is cleared and "000000" is displayed. (Alternate display of "000" and "000")														
21	01	Maintenance cycle setting	The current set maintenance cycle code is displayed (initial display), and the set data are stored. <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>Code</th> <th>Setting</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>5,000 sheets</td> </tr> <tr> <td>1</td> <td>7,500 sheets</td> </tr> <tr> <td>2</td> <td>10,000 sheets</td> </tr> <tr> <td>3</td> <td>25,000 sheets</td> </tr> <tr> <td>4</td> <td>50,000 sheets * Default</td> </tr> <tr> <td>5</td> <td>Free (999,999 sheets)</td> </tr> </tbody> </table>	Code	Setting	0	5,000 sheets	1	7,500 sheets	2	10,000 sheets	3	25,000 sheets	4	50,000 sheets * Default	5	Free (999,999 sheets)
Code	Setting																
0	5,000 sheets																
1	7,500 sheets																
2	10,000 sheets																
3	25,000 sheets																
4	50,000 sheets * Default																
5	Free (999,999 sheets)																
02	Mini maintenance cycle setting (Valid only when the destination is set to Japan AB series.)	The current set maintenance cycle code is displayed (initial display), and the set data are stored. <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>Code</th> <th>Setting</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>5,000 sheets * Default</td> </tr> <tr> <td>1</td> <td>10,000 sheets</td> </tr> <tr> <td>2</td> <td>Free (999,999 sheets)</td> </tr> </tbody> </table>	Code	Setting	0	5,000 sheets * Default	1	10,000 sheets	2	Free (999,999 sheets)							
Code	Setting																
0	5,000 sheets * Default																
1	10,000 sheets																
2	Free (999,999 sheets)																
22	01	Maintenance counter display	The maintenance counter value is displayed.														
	02	Maintenance preset display (Valid only when the destination is set to EX Japan)	The copy quantity corresponding to the code that is set with SIM21-01 is displayed. (For example: 50,000 sheets)														
	03	Jam memory display	The LED of the latest jam position is lighted. Every time when the [PRESET RATIO selector] keys is pressed, the jam memory data is acquired sequentially from the latest. The jam position is judged by the acquired data and the corresponding LED is lighted. The 7-seg display indicates the jam number. At that time, "A" is displayed on the upper first digit. When the last one is displayed, the latest one will be displayed again. Max. 30 jams from the latest are stored. When the [Interrupt] key is pressed, the machine goes into the sub code input standby mode. When the [CA] key is pressed, the simulation is terminated.														
	04	Jam total counter display	The jam total counter value is displayed.														
	05	Total counter display	The total counter value is displayed.														
	06	Developing counter display	The developing counter data is acquired and displayed on the 7-seg display. When the [Interrupt] key is pressed, the machine goes into the sub code input standby mode. When the [CA] key is pressed, the simulation is terminated.														

Main code	Sub code	Contents	Details of operation																		
22	07	Mini maintenance preset display (Valid only when the destination is set to Japan AB series)	The mini maintenance cycle data is acquired and displayed on the 7-seg display. When the [Interrupt] key is pressed, the machine goes into the sub code input standby mode. When the [CA] key is pressed, the simulation is terminated.																		
	08	SPF counter display	The SPF counter value is displayed.																		
	09	Paper feed counter display	The counter value of the selected paper feed section is acquired from each variable, the data is displayed on the 7-seg display according to the regulations. When this simulation is executed, the value of the 1st paper tray is displayed first. Press the [TRAY SETTING] key to select the tray. When the [Interrupt] key is pressed, the machine goes into the sub code input standby mode. When the [CA] key is pressed, the simulation is terminated.																		
12	Drum counter display		The drum counter and the drum rotating time are displayed. To change the display mode, press the [AUTO/TEXT/PHOTO] key.																		
			<table border="1"> <thead> <tr> <th>LED</th> <th>Display mode</th> </tr> </thead> <tbody> <tr> <td>AUTO exposure indicator</td> <td>Drum counter</td> </tr> <tr> <td>TEXT indicator</td> <td>Drum rotating time</td> </tr> </tbody> </table>	LED	Display mode	AUTO exposure indicator	Drum counter	TEXT indicator	Drum rotating time												
LED	Display mode																				
AUTO exposure indicator	Drum counter																				
TEXT indicator	Drum rotating time																				
13	CRUM destination display		When this simulation is executed, the CRUM destination set (written) in the CRUM chip is displayed. This simulation is valid only for the models where the CRUM is valid.																		
			<table border="1"> <thead> <tr> <th>7-seg display</th> <th>Meaning (CRUM destination)</th> <th>7-seg display</th> <th>Meaning (CRUM destination)</th> </tr> </thead> <tbody> <tr> <td>00</td> <td>Not set yet</td> <td>04</td> <td>CHN-A</td> </tr> <tr> <td>01</td> <td>BTA-A</td> <td>05</td> <td>JPN_A</td> </tr> <tr> <td>02</td> <td>BTA-B</td> <td>06</td> <td>BTA_F</td> </tr> <tr> <td>03</td> <td>BTA-C</td> <td>99</td> <td>Conversion</td> </tr> </tbody> </table>	7-seg display	Meaning (CRUM destination)	7-seg display	Meaning (CRUM destination)	00	Not set yet	04	CHN-A	01	BTA-A	05	JPN_A	02	BTA-B	06	BTA_F	03	BTA-C
7-seg display	Meaning (CRUM destination)	7-seg display	Meaning (CRUM destination)																		
00	Not set yet	04	CHN-A																		
01	BTA-A	05	JPN_A																		
02	BTA-B	06	BTA_F																		
03	BTA-C	99	Conversion																		
14	P-ROM version display		The P-ROM version is displayed on the copy quantity display. The main code and the sub code are alternatively displayed by 2 digits. The display interval is same as that of the counter display. By pressing the fixed [PRESET RATIO selector] keys, each version display is switched.																		
			<table border="1"> <thead> <tr> <th>LED (AB series)</th> <th>LED (Inch series)</th> <th>Displayed version</th> </tr> </thead> <tbody> <tr> <td>141%</td> <td>141%</td> <td>Machine program</td> </tr> </tbody> </table>	LED (AB series)	LED (Inch series)	Displayed version	141%	141%	Machine program												
LED (AB series)	LED (Inch series)	Displayed version																			
141%	141%	Machine program																			
15	Trouble memory display		<p>The trouble codes up to the latest one are acquired from the trouble memory data. Every time when the magnification ratio display is pressed, the main code of the trouble is displayed on the 1st ~ 2nd digit.</p> <p>* The latest 20 troubles are stored in the memory. The 3rd digit indicates the trouble history code, "A" ~ "J" (meaning of 1 ~ 10). After "J" is displayed, "A" ~ "J" blinks. (Meaning of 11 ~ 20) After "J" blinks (meaning of 20), "A" ~ "J" is lighted. (Returns to 1.) When the [START] key is pressed, the sub code is displayed. When the [Interrupt] key is pressed, the machine goes into the sub code input standby mode. When the [CA] key is pressed, the simulation is terminated.</p> <p>* Note that when the history code blinks, the trouble code and the sub code do not blink.</p>																		
16	Duplex print counter display (Duplex model only)		Data is acquired from the duplex print counter variable, and is displayed. When the [Interrupt] key is pressed, the machine goes into the sub code input standby mode. When the [CA] key is pressed, the simulation is terminated.																		
17	Copy counter display		The copy counter value is displayed. When the [Interrupt] key is pressed, the machine goes into the sub code input standby mode. When the [CA] key is pressed, the simulation is terminated.																		
18	Printer counter display		The printer counter value is displayed. When the [Interrupt] key is pressed, the machine goes into the sub code input standby mode. When the [CA] key is pressed, the simulation is terminated.																		
19	Scanner mode counter display (Except for AR-5516S/AR-5520S)		The scanner mode counter value is displayed. When the [Interrupt] key is pressed, the machine goes into the sub code input standby mode. When the [CA] key is pressed, the simulation is terminated.																		
21	Scanner counter display		The scanner counter value is displayed. When the [Interrupt] key is pressed, the machine goes into the sub code input standby mode. When the [CA] key is pressed, the simulation is terminated.																		
22	SPF jam counter display (Only when the SPF/RSPF is installed)		The SPF jam counter value is displayed. When the [Interrupt] key is pressed, the machine goes into the sub code input standby mode. When the [CA] key is pressed, the simulation is terminated.																		
50	Developer rotation time display		The developer rotation time is displayed. (Three digits are displayed alternatively.) When [Interrupt] key is pressed, the display goes to the sub code input standby state. When [CA] key is pressed, the machine goes out of the simulation mode.																		
51	Drum rotation time display		The drum rotation time is displayed. (Three digits are displayed alternatively.) When [Interrupt] key is pressed, the display goes to the sub code input standby state. When [CA] key is pressed, the machine goes out of the simulation mode.																		

Main code	Sub code	Contents	Details of operation					
24	01	Jam total counter clear	When the [START] key is pressed, the jam total count value is reset to zero, and zero is displayed.					
	02	Trouble memory clear	The trouble memory and the EEPROM trouble history data are cleared and "000" is displayed on the 7-seg display. When the [Interrupt] key is pressed, the machine goes into the sub code input standby mode. When the [CA] key is pressed, the simulation is terminated.					
	04	SPF counter clear (Only when the SPF/RSPF is installed)	When the [START] key is pressed, the SPF count value is reset to zero and displayed on the 7-seg display. When the [Interrupt] key is pressed, the machine goes into the sub code input standby mode. When the [CA] key is pressed, the simulation is terminated.					
	05	Duplex print counter clear (Duplex model only)	The duplex print count data is cleared, and zero is displayed on the 7-seg display. When the [Interrupt] key is pressed, the machine goes into the sub code input standby mode. When the [CA] key is pressed, the simulation is terminated.					
	06	Paper feed counter clear	The paper feed counter data of each paper feed section is cleared, and "000" is displayed on the 7-seg display. When the [Interrupt] key is pressed, the machine goes into the sub code input standby mode. When the [CA] key is pressed, the simulation is terminated.					
	07	Drum counter clear	When the [START] key is pressed, the drum count and the drum roasting time are reset to zero, and the drum counter value is displayed on the 7-seg display. When the [Interrupt] key is pressed, the machine goes into the sub code input standby mode. When the [CA] key is pressed, the simulation is terminated.					
	08	Copy counter clear	When the [START] key is pressed, the copy count value is reset to zero and displayed on the 7-seg display. When the [Interrupt] key is pressed, the machine goes into the sub code input standby mode. When the [CA] key is pressed, the simulation is terminated.					
	09	Printer counter clear	When the [START] key is pressed, the printer count value is reset to zero and displayed on the 7-seg display. When the [Interrupt] key is pressed, the machine goes into the sub code input standby mode. When the [CA] key is pressed, the simulation is terminated.					
	13	Scanner counter clear	When the [START] key is pressed, the scanner count value is reset to zero and displayed on the 7-seg display. When the [Interrupt] key is pressed, the machine goes into the sub code input standby mode. When the [CA] key is pressed, the simulation is terminated.					
	14	SPF jam total counter clear (Only when the SPF/RSPF is installed)	When the [START] key is pressed, the SPF jam total count value is reset to zero and displayed on the 7-seg display. When the [Interrupt] key is pressed, the machine goes into the sub code input standby mode. When the [CA] key is pressed, the simulation is terminated.					
25	01	Main motor operation check (Cooling fan motor rotation check)	When the [START] key is pressed, the main motor (together with the duplex motor for the duplex model) is driven for 30 sec. At that time, to save toner consumption, if the developing unit is installed, the developing bias, the main charger, and the grid are outputted. Since, in that case, laser discharge is required when the motor stops, the polygon motor is driven simultaneously. Check if the developing unit is installed or not. If it is not installed, the above high voltage is not outputted and only the motor is rotated. After completion of 30 sec operation, the machine goes into the sub code input standby mode. * This simulation must not be executed by forcibly turning on the door open/close switch.					
	02	Auto developer adjustment (Initial setting of toner density when replacing developer)	To execute this simulation, the following procedures must be performed. <Procedures> 1) Turn OFF the power of the machine. 2) Open the side cover. 3) Install the DV unit toner cartridge. 4) Turn ON the power of the machine with the cover opened. 5) Enter Sim25-02. (Entered value display section: "CH" is displayed. Start LED: OFF) 6) Close the side cover. (Entered value display section: "--" is displayed. Start LED: ON) 7) Press [START] key to execute Sim25-02. When [START] key is pressed, the main motor rotates for 3 minutes to determine the toner sensor reference value and clear the developer traveling time as well as to clear the developer counter. When the operation is completed normally, the ATC sensor reference value is displayed on the entered value display section. If an error occurs, one of the following indicator is lighted.					
	10	Polygon motor operation check	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">LED</th> <th style="text-align: center;">Display mode</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">Misfeed indicator</td> <td style="text-align: center;">EL trouble</td> </tr> <tr> <td style="text-align: center;">Paper required indicator</td> <td style="text-align: center;">EU trouble</td> </tr> </tbody> </table> <p>This simulation must be executed only immediately after supplying developer. Do not execute this simulation for any developer which has been used. If the machine goes into the warm-up state even once before completion of this simulation, there is a possibility that toner may be supplied to the developer during warm-up. In such a case, therefore, the developer must be replaced with new one.</p>	LED	Display mode	Misfeed indicator	EL trouble	Paper required indicator
LED	Display mode							
Misfeed indicator	EL trouble							
Paper required indicator	EU trouble							

Main code	Sub code	Contents	Details of operation																																		
26	02	Size setting	Used to set Enable/Disable of the FC (8.5" x 13") size detection. <table border="1"> <thead> <tr> <th>Code number</th><th>Setting</th></tr> </thead> <tbody> <tr> <td>0</td><td>FC detection Disable * Default except for the following</td></tr> <tr> <td>1</td><td>FC detection Enable * Default only for Taiwan</td></tr> </tbody> </table> Detection size when a document of the FC ((8.5" x 13") size is used <table border="1"> <thead> <tr> <th rowspan="2">Document</th><th rowspan="2">Unit to be used</th><th rowspan="2">Destination</th><th rowspan="2">Document size</th><th colspan="2">Setting</th></tr> <tr> <th>0 (Disable)</th><th>1 (Enable)</th></tr> </thead> <tbody> <tr> <td rowspan="2">SPF</td><td>EX Japan AB series (FC)</td><td>FC (8.5" x 13")</td><td>B4</td><td>FC (8.5" x 13")</td></tr> <tr> <td>B4</td><td>FC (8.5" x 13")</td><td>LG (8.5" x 14")</td><td>FC (8.5" x 13")</td></tr> <tr> <td rowspan="2"></td><td>Inch series (FC)</td><td>FC (8.5" x 13")</td><td>LG (8.5" x 14")</td><td>FC (8.5" x 13")</td></tr> <tr> <td>LG (8.5" x 14")</td><td>LG (8.5" x 14")</td><td>FC (8.5" x 13")</td></tr> </tbody> </table> •For the other destinations, this setting is disabled.				Code number	Setting	0	FC detection Disable * Default except for the following	1	FC detection Enable * Default only for Taiwan	Document	Unit to be used	Destination	Document size	Setting		0 (Disable)	1 (Enable)	SPF	EX Japan AB series (FC)	FC (8.5" x 13")	B4	FC (8.5" x 13")	B4	FC (8.5" x 13")	LG (8.5" x 14")	FC (8.5" x 13")		Inch series (FC)	FC (8.5" x 13")	LG (8.5" x 14")	FC (8.5" x 13")	LG (8.5" x 14")	LG (8.5" x 14")	FC (8.5" x 13")
Code number	Setting																																				
0	FC detection Disable * Default except for the following																																				
1	FC detection Enable * Default only for Taiwan																																				
Document	Unit to be used	Destination	Document size	Setting																																	
				0 (Disable)	1 (Enable)																																
SPF	EX Japan AB series (FC)	FC (8.5" x 13")	B4	FC (8.5" x 13")																																	
	B4	FC (8.5" x 13")	LG (8.5" x 14")	FC (8.5" x 13")																																	
	Inch series (FC)	FC (8.5" x 13")	LG (8.5" x 14")	FC (8.5" x 13")																																	
	LG (8.5" x 14")	LG (8.5" x 14")	FC (8.5" x 13")																																		
03	03	Auditor setting	Used to set the auditor. <table border="1"> <thead> <tr> <th>Code number</th><th>Mode</th></tr> </thead> <tbody> <tr> <td>0</td><td>Built-in auditor mode *Default</td></tr> <tr> <td>1</td><td>Coin vendor mode</td></tr> <tr> <td>2</td><td>Other</td></tr> </tbody> </table> * When the coin vendor mode is selected, if the auditor setup is ON and the standard tray is bypass tray, the standard tray setup must be changed to the 1st tray.				Code number	Mode	0	Built-in auditor mode *Default	1	Coin vendor mode	2	Other																							
Code number	Mode																																				
0	Built-in auditor mode *Default																																				
1	Coin vendor mode																																				
2	Other																																				
04	04	Copier duplex setting	When this simulation is executed, the current set duplex code number is displayed. Enter the desired code number of duplex setting and press the [START] key, and the entered code number is set. <table border="1"> <thead> <tr> <th>Code number</th><th>Mode</th></tr> </thead> <tbody> <tr> <td>0</td><td>Without duplex</td></tr> <tr> <td>1</td><td>With duplex</td></tr> </tbody> </table> * When this simulation is executed, the binding margin setup is automatically set to the default (left side).				Code number	Mode	0	Without duplex	1	With duplex																									
Code number	Mode																																				
0	Without duplex																																				
1	With duplex																																				
05	05	Count mode setting	When any key input is made, it is displayed on the display section. When the [START] key is pressed, the set code data are acquired and stored to the count mode set variable and in the EEPROM, and the machine goes into the sub code input standby mode. However, if the [START] key is pressed outside the set range, it is not assured. At that time, when the [Interrupt] key is pressed, the data are not rewritten and the machine goes into the sub code input standby mode. When the [CA] key is pressed, the simulation is terminated without rewriting the data. <p style="text-align: center;">[*1 : Total counter / Developer counter *2 : maintenance counter]</p> <table border="1"> <tbody> <tr> <td>0:</td><td>*1= Double count</td><td>*2= Double count</td><td>*Default</td></tr> <tr> <td>1:</td><td>*1= Single count</td><td>*2 = Double count</td><td></td></tr> <tr> <td>2:</td><td>*1= Double count</td><td>*2= Single count</td><td></td></tr> <tr> <td>3:</td><td>*1= Single count</td><td>*2= Single count</td><td></td></tr> </tbody> </table>				0:	*1= Double count	*2= Double count	*Default	1:	*1= Single count	*2 = Double count		2:	*1= Double count	*2= Single count		3:	*1= Single count	*2= Single count																
0:	*1= Double count	*2= Double count	*Default																																		
1:	*1= Single count	*2 = Double count																																			
2:	*1= Double count	*2= Single count																																			
3:	*1= Single count	*2= Single count																																			
06	06	Destination setting	When this simulation is executed, the current set destination code number is displayed. Enter the desired code number of the destination and press the [START] key to set the destination. <table border="1"> <thead> <tr> <th>Code number</th><th>Destination</th></tr> </thead> <tbody> <tr> <td>0</td><td>Japan AB series</td></tr> <tr> <td>1</td><td>Inch series</td></tr> <tr> <td>2</td><td>EX Japan AB series</td></tr> <tr> <td>3</td><td>EX Japan inch series(FC)</td></tr> <tr> <td>4</td><td>EX Japan AB series (FC)</td></tr> <tr> <td>5</td><td>China (EX Japan AB series + China paper support)</td></tr> <tr> <td>6</td><td>Taiwan (EX Japan AB series + China paper support)</td></tr> </tbody> </table> If this setting is changed, SIM46-19 setting is also changed accordingly. (The paper size is also changed: AB series is changed to A4, and Inch series to Letter. The AUTO exposure limit setup is set to the default. When the destination is changed (from Japan to EX Japan or from EX Japan to Japan), the maintenance cycle is also set to the default accordingly.)				Code number	Destination	0	Japan AB series	1	Inch series	2	EX Japan AB series	3	EX Japan inch series(FC)	4	EX Japan AB series (FC)	5	China (EX Japan AB series + China paper support)	6	Taiwan (EX Japan AB series + China paper support)															
Code number	Destination																																				
0	Japan AB series																																				
1	Inch series																																				
2	EX Japan AB series																																				
3	EX Japan inch series(FC)																																				
4	EX Japan AB series (FC)																																				
5	China (EX Japan AB series + China paper support)																																				
6	Taiwan (EX Japan AB series + China paper support)																																				
07	07	Machine condition check (CPM)	When this simulation is executed, the current setting of the machine is displayed. <table border="1"> <thead> <tr> <th>7-seg display</th><th>Meaning (CPM information)</th></tr> </thead> <tbody> <tr> <td>16</td><td>16CPM</td></tr> <tr> <td>18</td><td>18CPM</td></tr> <tr> <td>20</td><td>20CPM</td></tr> <tr> <td>21</td><td>21CPM</td></tr> </tbody> </table>				7-seg display	Meaning (CPM information)	16	16CPM	18	18CPM	20	20CPM	21	21CPM																					
7-seg display	Meaning (CPM information)																																				
16	16CPM																																				
18	18CPM																																				
20	20CPM																																				
21	21CPM																																				

Main code	Sub code	Contents	Details of operation										
26	18	Toner save mode setting	Used to set ON/OFF of the toner save mode. <table border="1"> <thead> <tr> <th>Code number</th><th>Setting</th></tr> </thead> <tbody> <tr> <td>0</td><td>Toner save OFF</td></tr> <tr> <td>1</td><td>Toner save ON</td></tr> </tbody> </table> <p>* The toner save mode of the user program is also changed accordingly. The default value depends on the destination.</p>		Code number	Setting	0	Toner save OFF	1	Toner save ON			
Code number	Setting												
0	Toner save OFF												
1	Toner save ON												
	30	CE mark conformity control ON/OFF	When this simulation is executed, the current set code number of CE mark conformity is displayed. Enter the desired code number of CE mark conformity and press the [START] key to set the code number. <table border="1"> <thead> <tr> <th>Code number</th><th>Setting</th></tr> </thead> <tbody> <tr> <td>0</td><td>CE mark conformity control OFF *Default for 100V system</td></tr> <tr> <td>1</td><td>CE mark conformity control ON *Default for 200V system</td></tr> </tbody> </table>		Code number	Setting	0	CE mark conformity control OFF *Default for 100V system	1	CE mark conformity control ON *Default for 200V system			
Code number	Setting												
0	CE mark conformity control OFF *Default for 100V system												
1	CE mark conformity control ON *Default for 200V system												
	31	Auditor mode exclusive setup	Used to set whether the bypass tray can be used or not when the auditor mode is set to the coin vendor mode. <table border="1"> <thead> <tr> <th>Code number</th><th>Setting</th></tr> </thead> <tbody> <tr> <td>0</td><td>Exclusive setup OFF (Bypass tray paper feed allowed)</td></tr> <tr> <td>1</td><td>Exclusive setup ON (Bypass tray paper fed inhibited)*Default</td></tr> <tr> <td>3</td><td>Exclusive setup OFF (Bypass tray paper fed inhibited) (Double amount of that when set to "0" is charged.)</td></tr> </tbody> </table> <p>* When this is set to "Exclusive setup ON," if the auditor is set to the coin vendor mode and the standard tray is set to the bypass tray, the standard tray must be set to the 1st tray.</p>		Code number	Setting	0	Exclusive setup OFF (Bypass tray paper feed allowed)	1	Exclusive setup ON (Bypass tray paper fed inhibited)*Default	3	Exclusive setup OFF (Bypass tray paper fed inhibited) (Double amount of that when set to "0" is charged.)	
Code number	Setting												
0	Exclusive setup OFF (Bypass tray paper feed allowed)												
1	Exclusive setup ON (Bypass tray paper fed inhibited)*Default												
3	Exclusive setup OFF (Bypass tray paper fed inhibited) (Double amount of that when set to "0" is charged.)												
	36	Cancel of stop at maintenance life over	Used to set stop at maintenance life over. <table border="1"> <thead> <tr> <th>Code number</th><th>Setting</th></tr> </thead> <tbody> <tr> <td>0</td><td>Stop at maintenance life over</td></tr> <tr> <td>1</td><td>Cancel of stop at maintenance life over * Default</td></tr> </tbody> </table>		Code number	Setting	0	Stop at maintenance life over	1	Cancel of stop at maintenance life over * Default			
Code number	Setting												
0	Stop at maintenance life over												
1	Cancel of stop at maintenance life over * Default												
	37	Cancel of stop at developer life over	When this simulation is executed, the current set code number is displayed. Enter the desired code number and press the [START] key to set the code number. The machine goes into the sub code input state. <table border="1"> <thead> <tr> <th>Code number</th><th>Setting</th></tr> </thead> <tbody> <tr> <td>0</td><td>Stop at developer life over</td></tr> <tr> <td>1</td><td>Cancel of stop at developer life over * Default</td></tr> </tbody> </table>		Code number	Setting	0	Stop at developer life over	1	Cancel of stop at developer life over * Default			
Code number	Setting												
0	Stop at developer life over												
1	Cancel of stop at developer life over * Default												
	38	Cancel of stop at drum life over	When this simulation is executed, the current set code number is displayed. Enter the desired code number and press the [START] key to set the code number. <table border="1"> <thead> <tr> <th>Code number</th><th>Setting</th></tr> </thead> <tbody> <tr> <td>0</td><td>Stop at drum life over</td></tr> <tr> <td>1</td><td>Cancel of stop at drum life over * Default</td></tr> </tbody> </table>		Code number	Setting	0	Stop at drum life over	1	Cancel of stop at drum life over * Default			
Code number	Setting												
0	Stop at drum life over												
1	Cancel of stop at drum life over * Default												
	39	Memory capacity check	When this simulation is executed, the current memory capacity is displayed. <table border="1"> <thead> <tr> <th>7-seg display</th><th>Meaning (Memory capacity)</th></tr> </thead> <tbody> <tr> <td>16</td><td>16MByte</td></tr> <tr> <td>64</td><td>64MByte</td></tr> </tbody> </table>		7-seg display	Meaning (Memory capacity)	16	16MByte	64	64MByte			
7-seg display	Meaning (Memory capacity)												
16	16MByte												
64	64MByte												
	42	Transfer ON/OFF timing control setting	When this simulation is executed, the current setting value of transfer ON timing is displayed. Enter a set value and press the [START] key to set the entered value, and the machine will go into the sub code input standby mode. When the [AUTO/TEXT/PHOTO] key is pressed, the ON timing setting and the OFF timing setting are alternatively selected. At that time, the setting is saved and written into the EEPROM. <table border="1"> <thead> <tr> <th>LED</th><th>Setting mode</th><th>Default</th></tr> </thead> <tbody> <tr> <td>AUTO indicator</td><td>Transfer ON timing</td><td>38</td></tr> <tr> <td>TEXT indicator</td><td>Transfer OFF timing</td><td>50</td></tr> </tbody> </table> <p>•Setting range: 1 ~ 99 When the setting value is increased by 1, time is increased by 2ms. •The default, 38, of transfer ON timing means "320ms passed from PS release." The default, 50, of transfer OFF timing means "304ms passed from P-IN OFF."</p>		LED	Setting mode	Default	AUTO indicator	Transfer ON timing	38	TEXT indicator	Transfer OFF timing	50
LED	Setting mode	Default											
AUTO indicator	Transfer ON timing	38											
TEXT indicator	Transfer OFF timing	50											

Main code	Sub code	Contents	Details of operation																			
26	43	Side void amount setting	<p>Used to set the side void amount on the both sides. Enter a set value with the Numeric keys and press the [START] key, and the entered value will be saved and the machine will go into the sub code input standby mode. The setting range is 0 ~ 10. When the set value is increased by 1, the void amount is increased by 0.5mm. The default is 5 (= 1.5mm). To select the setting mode, press the [AUTO/TEXT/PHOTO] key. The set value of the selected mode is displayed on the copy quantity display. At that time, the set value is also saved.</p> <table border="1"> <thead> <tr> <th>LED</th> <th>Setting mode</th> </tr> </thead> <tbody> <tr> <td>AUTO indicator</td> <td>Side void amount (Right)</td> </tr> <tr> <td>TEXT indicator</td> <td>Side void amount (Left)</td> </tr> </tbody> </table> <p>* When the setting value is increased by 1, time is increased by 0.5ms.</p>		LED	Setting mode	AUTO indicator	Side void amount (Right)	TEXT indicator	Side void amount (Left)												
LED	Setting mode																					
AUTO indicator	Side void amount (Right)																					
TEXT indicator	Side void amount (Left)																					
51		Copy temporary stop function setting	<p>When any key is pressed, it is displayed on the display section. When the [START] key is pressed, the set code data is acquired and stored to the setting variable of sort/group copy temporary stop function and to the EEPROM. The machine goes into the sub code input standby mode.</p> <table border="1"> <thead> <tr> <th>Code number</th> <th>Setting</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Not stop</td> </tr> <tr> <td>1</td> <td>Stop * Default</td> </tr> </tbody> </table> <p>When the [Interrupt] key is pressed at that time, the machine goes into the sub code input standby mode without rewriting the data. When the [CA] key is pressed, the simulation mode is terminated without rewriting the data.</p> <p>* When this is set to "Stop," temporary stop is made for every 250 copies in one copy job.</p>		Code number	Setting	0	Not stop	1	Stop * Default												
Code number	Setting																					
0	Not stop																					
1	Stop * Default																					
54		Life correction ON/OFF setting	<p>Setting is made whether the image correction is made according to developer consumption degree (life progress) or not. When this simulation is executed, the current code number is displayed on the 7-seg display. (1=ON [Correction is performed.], 0=OFF [Correction is not performed.]) Enter the code number and press [START] key, and the setting is settled and written into the EEPROM and the machine goes into the sub code input standby mode. Switching can be made with [AUTO/TEXT/PHOTO] key, and the set value of the selected mode is displayed on the copy quantity display section. The setting entered at that time is written into the EEPROM.</p> <table border="1"> <thead> <tr> <th>LED</th> <th>Setting mode</th> </tr> </thead> <tbody> <tr> <td>All OFF</td> <td>Correction in the AUTO mode (Only for the machine for JAPAN)</td> </tr> <tr> <td>AUTO indicator</td> <td>Correction in the AUTO mode (Only for the machine for EX JAPAN)</td> </tr> <tr> <td>TEXT indicator</td> <td>Correction in the TEXT mode</td> </tr> <tr> <td>PHOTO indicator</td> <td>Correction in the PHOTO mode (Error diffusion)</td> </tr> <tr> <td>AUTO indicator & TEXT indicator</td> <td>Correction in the AUTO mode with the toner save mode ON</td> </tr> <tr> <td>AUTO indicator & PHOTO indicator</td> <td>Correction in the AUTO mode with the toner save mode ON</td> </tr> <tr> <td>TEXT indicator & PHOTO indicator</td> <td>Correction in the TEXT mode with the toner save mode ON</td> </tr> <tr> <td>AUTO & TEXT & PHOTO indicators</td> <td>Correction in the PHOTO mode (Dither)</td> </tr> </tbody> </table>		LED	Setting mode	All OFF	Correction in the AUTO mode (Only for the machine for JAPAN)	AUTO indicator	Correction in the AUTO mode (Only for the machine for EX JAPAN)	TEXT indicator	Correction in the TEXT mode	PHOTO indicator	Correction in the PHOTO mode (Error diffusion)	AUTO indicator & TEXT indicator	Correction in the AUTO mode with the toner save mode ON	AUTO indicator & PHOTO indicator	Correction in the AUTO mode with the toner save mode ON	TEXT indicator & PHOTO indicator	Correction in the TEXT mode with the toner save mode ON	AUTO & TEXT & PHOTO indicators	Correction in the PHOTO mode (Dither)
LED	Setting mode																					
All OFF	Correction in the AUTO mode (Only for the machine for JAPAN)																					
AUTO indicator	Correction in the AUTO mode (Only for the machine for EX JAPAN)																					
TEXT indicator	Correction in the TEXT mode																					
PHOTO indicator	Correction in the PHOTO mode (Error diffusion)																					
AUTO indicator & TEXT indicator	Correction in the AUTO mode with the toner save mode ON																					
AUTO indicator & PHOTO indicator	Correction in the AUTO mode with the toner save mode ON																					
TEXT indicator & PHOTO indicator	Correction in the TEXT mode with the toner save mode ON																					
AUTO & TEXT & PHOTO indicators	Correction in the PHOTO mode (Dither)																					
69		Operation setting when CRUM toner end (Japan only)	<p>This simulation can be performed only when the CRUM type stored in the EEPROM is of domestic CRUM. (Valid only in the machines for Japan.) Setting of operations at CRUM toner end is made. When this simulation is performed, the current code number is displayed. Enter a code number and press [START] key to save the setting.</p> <p>*Immediately after occurrence of toner end, copying is stopped regardless of the set value. When the cover is opened and closed and the power is turned OFF/ON to initialize the machine, the following operations are performed.</p> <p><<Operations at toner end >></p> <table border="1"> <thead> <tr> <th rowspan="2">Code number</th> <th colspan="2">Operations when toner end is detected</th> </tr> <tr> <th>Copy operation</th> <th>Toner cartridge replacement required indicator</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Operates</td> <td>Flashing</td> </tr> <tr> <td>1</td> <td>Not operate</td> <td>Flashing</td> </tr> </tbody> </table>		Code number	Operations when toner end is detected		Copy operation	Toner cartridge replacement required indicator	0	Operates	Flashing	1	Not operate	Flashing							
Code number	Operations when toner end is detected																					
	Copy operation	Toner cartridge replacement required indicator																				
0	Operates	Flashing																				
1	Not operate	Flashing																				

Main code	Sub code	Contents	Details of operation																									
30	01	Paper sensor status display	<p>The paper sensor status is displayed with the lamps on the operation panel. * When each sensor detects paper, the corresponding lamp turns on.</p> <table border="1"> <thead> <tr> <th>LED</th><th>Sensor name</th></tr> </thead> <tbody> <tr> <td>Developer replacement required indicator</td><td>Paper exit sensor</td></tr> <tr> <td>Misfeed indicator(Copier)</td><td>Duplex sensor</td></tr> <tr> <td>Toner cartridge replacement required indicator</td><td>Paper entry sensor</td></tr> <tr> <td>Bypass tray indicator</td><td>Bypass tray empty sensor</td></tr> <tr> <td>1st tray indicator</td><td>1st tray paper empty sensor</td></tr> <tr> <td>2nd tray indicator</td><td>2nd tray paper empty sensor</td></tr> <tr> <td>3rd tray indicator</td><td>3rd tray paper empty sensor</td></tr> <tr> <td>4th tray indicator</td><td>4th tray paper empty sensor</td></tr> <tr> <td>Misfeed indicator(1st tray)</td><td>2nd tray paper feed sensor</td></tr> <tr> <td>Misfeed indicator(2nd tray)</td><td>3rd tray paper feed sensor</td></tr> <tr> <td>Paper required indicator</td><td>4th tray paper feed sensor</td></tr> </tbody> </table>		LED	Sensor name	Developer replacement required indicator	Paper exit sensor	Misfeed indicator(Copier)	Duplex sensor	Toner cartridge replacement required indicator	Paper entry sensor	Bypass tray indicator	Bypass tray empty sensor	1st tray indicator	1st tray paper empty sensor	2nd tray indicator	2nd tray paper empty sensor	3rd tray indicator	3rd tray paper empty sensor	4th tray indicator	4th tray paper empty sensor	Misfeed indicator(1st tray)	2nd tray paper feed sensor	Misfeed indicator(2nd tray)	3rd tray paper feed sensor	Paper required indicator	4th tray paper feed sensor
LED	Sensor name																											
Developer replacement required indicator	Paper exit sensor																											
Misfeed indicator(Copier)	Duplex sensor																											
Toner cartridge replacement required indicator	Paper entry sensor																											
Bypass tray indicator	Bypass tray empty sensor																											
1st tray indicator	1st tray paper empty sensor																											
2nd tray indicator	2nd tray paper empty sensor																											
3rd tray indicator	3rd tray paper empty sensor																											
4th tray indicator	4th tray paper empty sensor																											
Misfeed indicator(1st tray)	2nd tray paper feed sensor																											
Misfeed indicator(2nd tray)	3rd tray paper feed sensor																											
Paper required indicator	4th tray paper feed sensor																											
42	01	Developing counter clear	<p>The developer counter data in the EEPROM is cleared and 0 is displayed on the 7-seg display. When the [Interrupt] key is pressed at that time, the machine goes into the sub code input standby mode. When the [CA] key is pressed, the simulation mode is terminated.</p>																									
43	01	Fusing temperature setting (During normal copy)	<p>When the simulation is terminated, the current set value is displayed. When the [%] key is pressed, the setting is changed. When the [START] key is pressed, the set content is written into the EEPROM and the machine goes into the sub code input standby mode.</p> <table border="1"> <thead> <tr> <th>Set temperature (°C)</th><th>Set temperature (°C)</th></tr> </thead> <tbody> <tr> <td>160</td><td>185</td></tr> <tr> <td>165</td><td>190</td></tr> <tr> <td>170 * Default</td><td>195</td></tr> <tr> <td>175</td><td>200</td></tr> <tr> <td>180</td><td></td></tr> </tbody> </table>		Set temperature (°C)	Set temperature (°C)	160	185	165	190	170 * Default	195	175	200	180													
Set temperature (°C)	Set temperature (°C)																											
160	185																											
165	190																											
170 * Default	195																											
175	200																											
180																												
10		Postcard paper feed cycle setting	<p>Used to set the paper feed cycle timing in postcard printing. (Pickup interval)[1] ~ [99] (Center [50], Unit: 100msec)(Example: When 50, pickup interval = 100msec × 50) This simulation functions only when the destination is set to Japan AB series.</p>																									
11		Postcard size paper fusing temperature setting	<p>When this simulation is executed, the current set value is displayed. When the [%] key is pressed, the setting is changed. When the [START] key is pressed, the set content is written into the EEPROM and the machine goes into the sub code input standby mode.</p> <table border="1"> <thead> <tr> <th>Set temperature (°C)</th><th>Set temperature (°C)</th></tr> </thead> <tbody> <tr> <td>160</td><td>185</td></tr> <tr> <td>165</td><td>190</td></tr> <tr> <td>170</td><td>195 * Default</td></tr> <tr> <td>175</td><td>200</td></tr> <tr> <td>180</td><td></td></tr> </tbody> </table> <p>This simulation functions only when the destination is set to Japan AB series.</p>		Set temperature (°C)	Set temperature (°C)	160	185	165	190	170	195 * Default	175	200	180													
Set temperature (°C)	Set temperature (°C)																											
160	185																											
165	190																											
170	195 * Default																											
175	200																											
180																												
12		Fusing fan rotating speed setting when ready state	<p>The rotating speed of the fusing fan is set when the thermister of the fusing unit detects 190°C or above or when the thermister of the fusing unit detects 190°C or below. (Only when the machine is in the ready state, the fusing fan rotates at the speed set with this simulation.)</p> <p>When this simulation is executed, the current code number is displayed. When [AUTO/TEXT/PHOTO] key is pressed, the set value for detection of 190°C or above and the set value for detection of 190°C or below are switched alternatively. To change the set value for detection of 190°C or above, enter the code number when the AUTO indicator is lighted. To change the set value for detection of 190°C or below, enter the code number when the TEXT indicator is lighted. When [START] key is pressed after entering the code number, the setting is settled and saved into the EEPROM and the machine goes into the sub code input standby mode.</p> <table border="1"> <thead> <tr> <th>LED</th><th>Setting mode</th><th>Code number</th><th>Setting</th></tr> </thead> <tbody> <tr> <td rowspan="2">AUTO indicator</td><td rowspan="2">When 190°C or below is detected</td><td>0</td><td>Low speed rotation*Default</td></tr> <tr> <td>1</td><td>High speed rotation</td></tr> <tr> <td rowspan="2">TEXT indicator</td><td rowspan="2">When 190°C or above is detected</td><td>0</td><td>Low speed rotation</td></tr> <tr> <td>1</td><td>High speed rotation*Default</td></tr> </tbody> </table>		LED	Setting mode	Code number	Setting	AUTO indicator	When 190°C or below is detected	0	Low speed rotation*Default	1	High speed rotation	TEXT indicator	When 190°C or above is detected	0	Low speed rotation	1	High speed rotation*Default								
LED	Setting mode	Code number	Setting																									
AUTO indicator	When 190°C or below is detected	0	Low speed rotation*Default																									
		1	High speed rotation																									
TEXT indicator	When 190°C or above is detected	0	Low speed rotation																									
		1	High speed rotation*Default																									

Main code	Sub code	Contents	Details of operation																		
43	13	Fusing paper interval control allow/inhibit setting	<p>Used to set the paper feed timing of 21st and later page to A3 or WLT when multi copying or printing paper of narrow width. (A3 or WLT depends on the destination.)</p> <p>When this simulation is executed, the currently set code number is displayed. Enter a desired code number and press the [START] key, and the entered code number is written into the EEPROM and the machine goes into the sub code entry standby mode.</p> <table border="1"> <thead> <tr> <th>Code number</th><th>Setting</th></tr> </thead> <tbody> <tr> <td>0</td><td>Inhibit * Default</td></tr> <tr> <td>1</td><td>Allow</td></tr> </tbody> </table> <p><Applicable paper></p> <p>1) Paper tray: A4R, B5R, 8-1/2" X 14", 8-1/2" X 13", 8-1/2" X 11", A5, INV</p> <p>2) Bypass tray: A4R, B5R, 8-1/2" X 14", 8-1/2" X 13", 8-1/2" X 11", A5, INV, 16KR</p> <p>* A5 size for bypass tray is valid only for EX Japan AB series.</p>	Code number	Setting	0	Inhibit * Default	1	Allow												
Code number	Setting																				
0	Inhibit * Default																				
1	Allow																				
44	01	Toner density control Enable/Disable (ON/OFF) setting	<p>Setting is made whether the toner density control is performed or not.</p> <p>When this simulation is executed, the current code number is displayed on the 7-seg display. (1=ON [Enable], 0=OFF [Disable])</p> <p>Enter a code number and press [START] key, and the setting is settled and saved into the EEPROM and the machine goes into the sub code input standby mode.</p> <p>Switching can be made with [AUTO/TEXT/PHOTO] key, and the set value of the selected mode is displayed on the copy quantity display section.</p> <p>The entered value at that time is written into the EEPROM.</p> <table border="1"> <thead> <tr> <th>LED</th><th>Setting mode</th><th>Default</th></tr> </thead> <tbody> <tr> <td>AUTO indicator</td><td>Print ration correction</td><td>1</td></tr> <tr> <td>TEXT indicator</td><td>Life correction</td><td>1</td></tr> <tr> <td>AUTO indicator & PHOTO indicator</td><td>Drip infusion ★</td><td>0</td></tr> <tr> <td>TEXT indicator & PHOTO indicator</td><td>Purge process ★</td><td>0</td></tr> <tr> <td>AUTO indicator & TEXT indicator & PHOTO indicator</td><td>Unconditional toner supply</td><td>1</td></tr> </tbody> </table> <p><Descriptions on each correction></p> <p>Print ratio correction In this correction, the toner supply interval is determined according to the print ratio, and an overtoner is prevented.</p> <p>Life correction When the life of any consumable part approached the end, this correction prevents against undertoner.</p> <p>Note for items marked with ★ Drip infusion and Purge process are simulations for analysis, and do not set them to "Enable=1" in the market. If these items are set to "Enable=1", the toner density rises or falls extremely, resulting in developer fall and toner dispersion. If they are set to "Enable=1", developer must be replaced and the machine inside and the process unit must be cleaned.</p> <p>Unconditional toner supply When the DV unit and the drum unit run idle, a small quantity of toner is consumed. To supply this consumption, toner is supplied according to the rotation time of the DV unit.</p>	LED	Setting mode	Default	AUTO indicator	Print ration correction	1	TEXT indicator	Life correction	1	AUTO indicator & PHOTO indicator	Drip infusion ★	0	TEXT indicator & PHOTO indicator	Purge process ★	0	AUTO indicator & TEXT indicator & PHOTO indicator	Unconditional toner supply	1
LED	Setting mode	Default																			
AUTO indicator	Print ration correction	1																			
TEXT indicator	Life correction	1																			
AUTO indicator & PHOTO indicator	Drip infusion ★	0																			
TEXT indicator & PHOTO indicator	Purge process ★	0																			
AUTO indicator & TEXT indicator & PHOTO indicator	Unconditional toner supply	1																			
16		Toner density control data check and toner density control correction amount display	<p>The output value of the ATC sensor is checked and the toner density control correction value is displayed on the 7-seg display.</p> <p>The display mode can be switched by pressing [AUTO/TEXT/PHOTO] key.</p> <p>When [Interrupt] key is pressed, the machine goes into the sub code input standby mode. When [CA] key is pressed, the machine goes out of the simulation mode.</p> <table border="1"> <thead> <tr> <th>LED</th><th>Display content</th></tr> </thead> <tbody> <tr> <td>AUTO indicator</td><td>The current output value of the ATC sensor is displayed.</td></tr> <tr> <td>TEXT indicator</td><td>The correction value according to the progress of life is added to the current output value of the ATC sensor and the sum is displayed.</td></tr> </tbody> </table>	LED	Display content	AUTO indicator	The current output value of the ATC sensor is displayed.	TEXT indicator	The correction value according to the progress of life is added to the current output value of the ATC sensor and the sum is displayed.												
LED	Display content																				
AUTO indicator	The current output value of the ATC sensor is displayed.																				
TEXT indicator	The correction value according to the progress of life is added to the current output value of the ATC sensor and the sum is displayed.																				

Main code	Sub code	Contents	Details of operation														
44	34	Transfer current setting	<p>Used to set the transfer current for the front surface and that for the back surface. When this simulation is executed, the current set value is displayed on the 7-seg display. Select the set value with the zoom [Zoom] keys and press the [START] key, and the set content is written into the EEPROM and the machine goes into the sub code input standby mode. Press the [AUTO/TEXT/PHOTO] key to select each setting mode. At that time, the setup content is written into the EEPROM. The set range is 90uA ~ 360uA in the increment of 10uA.</p> <table border="1"> <thead> <tr> <th>LED</th><th>Setting mode</th></tr> </thead> <tbody> <tr> <td>AUTO indicator</td><td>Normal size width: Front</td></tr> <tr> <td>TEXT indicator</td><td>Normal size width: Back(Duplex model only)</td></tr> <tr> <td>AUTO indicator & PHOTO indicator</td><td>Small size width: Front</td></tr> <tr> <td>TEXT indicator & PHOTO indicator</td><td>Small size width: Back(Duplex model only)</td></tr> <tr> <td>AUTO & TEXT & PHOTO indicator</td><td>Bypass tray</td></tr> </tbody> </table> <p>* Small size paper must be Letter R (A4R) or smaller. * For the special size of tray, use the normal size width.</p>	LED	Setting mode	AUTO indicator	Normal size width: Front	TEXT indicator	Normal size width: Back(Duplex model only)	AUTO indicator & PHOTO indicator	Small size width: Front	TEXT indicator & PHOTO indicator	Small size width: Back(Duplex model only)	AUTO & TEXT & PHOTO indicator	Bypass tray		
LED	Setting mode																
AUTO indicator	Normal size width: Front																
TEXT indicator	Normal size width: Back(Duplex model only)																
AUTO indicator & PHOTO indicator	Small size width: Front																
TEXT indicator & PHOTO indicator	Small size width: Back(Duplex model only)																
AUTO & TEXT & PHOTO indicator	Bypass tray																
	40	Setting of rotation time before toner supply	Used to set the time interval between start of rotation (ready) of the main motor and start of toner supply in previous rotation after supplying the power. [1] ~ [99] (Default [8], unit: sec)														
46	01	Copy density adjustment (300dpi)	<p>Used to set the copy density for each mode. (Operating procedure) When this simulation is executed, warm-up and shading are operated, and the current set value is displayed in two digits. (Default [50]) * The density LED is not lighted. Change the set value and press the [START] key, and a copy is made according to the set value. The greater the set value is, the darker the density is, and vice versa. In this case, only a copy at Exp. 3 can be made. When, however, the density is set darker, Exp. 1 and Exp. 5 become darker, too. If the dentistry is set lighter, Exp. 1 and Exp. 5 become lighter, too. To select a desired copy mode, press the [AUTO/TEXT/PHOTO] key. The selected copy mode set value is displayed on the copy quantity display. (Adjustment range: 1 ~ 99)</p> <table border="1"> <thead> <tr> <th>LED</th><th>Copy mode</th></tr> </thead> <tbody> <tr> <td>AUTO indicator</td><td>AUTO exposure mode (300dpi)</td></tr> <tr> <td>TEXT indicator</td><td>TEXT mode (300dpi)</td></tr> <tr> <td>PHOTO indicator</td><td>PHOTO mode (Error diffusion)</td></tr> <tr> <td>TEXT indicator & PHOTO indicator</td><td>TS mode (TEXT) (300dpi)</td></tr> <tr> <td>AUTO indicator & PHOTO indicator</td><td>TS mode (AUTO exposure) (300dpi)</td></tr> <tr> <td>AUTO indicator & TEXT indicator & PHOTO indicator</td><td>PHOTO mode(Dither)</td></tr> </tbody> </table>	LED	Copy mode	AUTO indicator	AUTO exposure mode (300dpi)	TEXT indicator	TEXT mode (300dpi)	PHOTO indicator	PHOTO mode (Error diffusion)	TEXT indicator & PHOTO indicator	TS mode (TEXT) (300dpi)	AUTO indicator & PHOTO indicator	TS mode (AUTO exposure) (300dpi)	AUTO indicator & TEXT indicator & PHOTO indicator	PHOTO mode(Dither)
LED	Copy mode																
AUTO indicator	AUTO exposure mode (300dpi)																
TEXT indicator	TEXT mode (300dpi)																
PHOTO indicator	PHOTO mode (Error diffusion)																
TEXT indicator & PHOTO indicator	TS mode (TEXT) (300dpi)																
AUTO indicator & PHOTO indicator	TS mode (AUTO exposure) (300dpi)																
AUTO indicator & TEXT indicator & PHOTO indicator	PHOTO mode(Dither)																
	02	Copy density adjustment (600dpi)	<p>Used to set the copy density for each mode. (Operating procedure) When this simulation is executed, warm-up and shading are operated, and the current set value is displayed in two digits. (Default [50]) Change the set value and press the [START] key, and a copy is made according to the set value. The greater the set value is, the darker the density is, and vice versa. In this case, only a copy at Exp. 3 can be made. When, however, the density is set darker, Exp. 1 and Exp. 5 become darker, too. If the dentistry is set lighter, Exp. 1 and Exp. 5 become lighter, too. To select a desired copy mode, press the [AUTO/TEXT/PHOTO] key. The selected copy mode set value is displayed on the copy quantity display. (Adjustment range: 1 ~ 99)</p> <table border="1"> <thead> <tr> <th>LED</th><th>Copy mode</th></tr> </thead> <tbody> <tr> <td>AUTO indicator</td><td>AUTO exposure mode (600dpi)</td></tr> <tr> <td>TEXT indicator</td><td>TEXT mode (600dpi)</td></tr> <tr> <td>PHOTO indicator</td><td>PHOTO mode (Error diffusion)</td></tr> <tr> <td>TEXT indicator & PHOTO indicator</td><td>TS mode (TEXT) (600dpi)</td></tr> <tr> <td>AUTO indicator & PHOTO indicator</td><td>TS mode (AUTO exposure) (600dpi)</td></tr> <tr> <td>AUTO indicator & TEXT indicator & PHOTO indicator</td><td>PHOTO mode(Dither)</td></tr> </tbody> </table>	LED	Copy mode	AUTO indicator	AUTO exposure mode (600dpi)	TEXT indicator	TEXT mode (600dpi)	PHOTO indicator	PHOTO mode (Error diffusion)	TEXT indicator & PHOTO indicator	TS mode (TEXT) (600dpi)	AUTO indicator & PHOTO indicator	TS mode (AUTO exposure) (600dpi)	AUTO indicator & TEXT indicator & PHOTO indicator	PHOTO mode(Dither)
LED	Copy mode																
AUTO indicator	AUTO exposure mode (600dpi)																
TEXT indicator	TEXT mode (600dpi)																
PHOTO indicator	PHOTO mode (Error diffusion)																
TEXT indicator & PHOTO indicator	TS mode (TEXT) (600dpi)																
AUTO indicator & PHOTO indicator	TS mode (AUTO exposure) (600dpi)																
AUTO indicator & TEXT indicator & PHOTO indicator	PHOTO mode(Dither)																

Main code	Sub code	Contents	Details of operation						
46	09	Copy exposure level adjustment, individual setting (Text) 300dpi	<p>Used to adjust the shift amount and the inclination value for each density level (1 ~ 5) when the exposure mode is the TEXT mode (including TS)</p> <ul style="list-style-type: none"> The shift amount is the same as the gamma (gradation), and is used to set the overall brightness. When the shift amount is increased, the overall brightness is decreased. When the shift amount is decreased, the overall brightness is increased The inclination value changes the gamma (gradation). When the set value is increased, the gamma is increased to increase the contrast. (Clearer black and white images) When the set value is decreased, the gamma is decreased to decrease the contrast. (Increased gradation) <p>* Press the [%] key to switch between the shift amount and the inclination value.</p> <p>The 7-seg display shows the mode.</p> <p>The initial display is "Shift".</p> <p>Shift is indicated as "b" (Brightness).</p> <p>Inclination is indicated as "c" (Contrast).</p> <p>(Example)</p> <p>[b50] → [%] key → [c50] → [%] key → [b50] → [%] key → [c50] → ...</p> <p>* Select the adjustment level with the [Light and Dark] keys.</p> <p>The density LED displays the selected level (Exp. 1 ~ Exp. 5)</p> <p>* Select TEXT or TEXT (TS) with the [AUTO/TEXT/PHOTO] key.</p> <table border="1"> <thead> <tr> <th>LED</th><th>Exposure mode to be adjusted</th></tr> </thead> <tbody> <tr> <td>TEXT indicators</td><td>TEXT mode</td></tr> <tr> <td>TEXT indicators & PHOTO indicators</td><td>TEXT (TS) mode</td></tr> </tbody> </table> <p>* Change the shift amount and the inclination value with the Numeric keys.</p> <p>The set range is [1] ~ [99]. The default is [50].</p> <p>Change the set value and press the [START] key, and a copy is made at the set value.</p>	LED	Exposure mode to be adjusted	TEXT indicators	TEXT mode	TEXT indicators & PHOTO indicators	TEXT (TS) mode
LED	Exposure mode to be adjusted								
TEXT indicators	TEXT mode								
TEXT indicators & PHOTO indicators	TEXT (TS) mode								
10		Copy exposure level adjustment, individual setting (Text) 600dpi	<p>Used to adjust the shift amount and the inclination value for each density level (1 ~ 5) when the exposure mode is the TEXT mode (including TS)</p> <ul style="list-style-type: none"> The shift amount is the same as the gamma (gradation), and is used to set the overall brightness. When the shift amount is increased, the overall brightness is decreased. When the shift amount is decreased, the overall brightness is increased The inclination value changes the gamma (gradation). When the set value is increased, the gamma is increased to increase the contrast. (Clearer black and white images) When the set value is decreased, the gamma is decreased to decrease the contrast. (Increased gradation) <p>* Press the [%] key to switch between the shift amount and the inclination value.</p> <p>The 7-seg display shows the mode.</p> <p>The initial display is "Shift".</p> <p>Shift is indicated as "b" (Brightness).</p> <p>Inclination is indicated as "c" (Contrast).</p> <p>(Example)</p> <p>[b50] → [%] key → [c50] → [%] key → [b50] → [%] key → [c50] → ...</p> <p>* Select the adjustment level with the [Light and Dark] keys.</p> <p>The density LED displays the selected level (Exp. 1 ~ Exp. 5)</p> <p>* Select TEXT or TEXT (TS) with the [AUTO/TEXT/PHOTO] key.</p> <table border="1"> <thead> <tr> <th>LED</th><th>Exposure mode to be adjusted</th></tr> </thead> <tbody> <tr> <td>TEXT indicators</td><td>TEXT mode</td></tr> <tr> <td>TEXT indicator & PHOTO indicator</td><td>TEXT (TS) mode</td></tr> </tbody> </table> <p>* Change the shift amount and the inclination value with the Numeric keys.</p> <p>The set range is [1] ~ [99]. The default is [50].</p> <p>Change the set value and press the [START] key, and a copy is made at the set value.</p>	LED	Exposure mode to be adjusted	TEXT indicators	TEXT mode	TEXT indicator & PHOTO indicator	TEXT (TS) mode
LED	Exposure mode to be adjusted								
TEXT indicators	TEXT mode								
TEXT indicator & PHOTO indicator	TEXT (TS) mode								

Main code	Sub code	Contents	Details of operation				
46	11	Copy exposure level adjustment, individual setting (Photo) 600dpi	<p>Used to adjust the shift amount and the inclination value for each density level (1 ~ 5) when the exposure mode is the PHOTO mode</p> <ul style="list-style-type: none"> The shift amount is the same as the gamma (gradation), and is used to set the overall brightness. When the shift amount is increased, the overall brightness is decreased. When the shift amount is decreased, the overall brightness is increased The inclination value changes the gamma (gradation). When the set value is increased, the gamma is increased to increase the contrast. (Clearer black and white images) When the set value is decreased, the gamma is decreased to decrease the contrast. (Increased gradation) * Press the [%] key to switch between the shift amount and the inclination value. <p>The 7-seg display shows the mode.</p> <p>The initial display is "Shift."</p> <ul style="list-style-type: none"> Shift is indicated as "b" (Brightness). Inclination is indicated as "c" (Contrast). <p>(Example)</p> <p>[b50] → [%] key → [c50] → [%] key → [b50] → [%] key → [c50] → ...</p> <ul style="list-style-type: none"> Select the adjustment level with the [Light and Dark] keys. <p>The density LED displays the selected level (Exp. 1 ~ Exp. 5)</p> <ul style="list-style-type: none"> Select PHOTO(Error diffusion) or PHOTO(Dither) with the [AUTO/TEXT/PHOTO] key <table border="1"> <thead> <tr> <th>LED</th><th>Exposure mode to be adjusted</th></tr> </thead> <tbody> <tr> <td>PHOTO indicator TEXT indicator & PHOTO indicator</td><td>PHOTO mode (Error diffusion) PHOTO mode (Dither)</td></tr> </tbody> </table> <ul style="list-style-type: none"> Change the shift amount and the inclination value with the Numeric keys. <p>The set range is [1] ~ [99]. The default is [50].</p> <p>Change the set value and press the [START] key, and a copy is made at the set value.</p>	LED	Exposure mode to be adjusted	PHOTO indicator TEXT indicator & PHOTO indicator	PHOTO mode (Error diffusion) PHOTO mode (Dither)
LED	Exposure mode to be adjusted						
PHOTO indicator TEXT indicator & PHOTO indicator	PHOTO mode (Error diffusion) PHOTO mode (Dither)						
18		Image contrast adjustment (300dpi) AUTO indicator & TEXT indicator & PHOTO indicator	<p>Used to adjust the contrast for each mode.</p> <p>(Operating procedure)</p> <p>When this simulation is executed, warm-up and shading are performed, and the current set value is displayed in two digits. (Default: 50)</p> <ul style="list-style-type: none"> The density LED is not lighted. <p>Change the set value and press the [START] key, and a copy is made according to the set value.</p> <p>The greater the set value is, the higher the contrast is.</p> <p>The smaller the set value is, the lower the contrast is.</p> <p>In this case, only a copy at Exp. 3 is made.</p> <p>However, the contrasts at Exp. 1 and Exp. 5 are also changed accordingly.</p> <p>To select a desired copy mode, press the [AUTO/TEXT/PHOTO] key.</p> <p>The selected copy mode set value is displayed on the copy quantity display.</p> <p>(Adjustment range: 1 ~ 99)</p> <table border="1"> <thead> <tr> <th>LED</th><th>Copy mode</th></tr> </thead> <tbody> <tr> <td>AUTO indicator TEXT indicator PHOTO indicator TEXT indicator & PHOTO indicator AUTO indicator & PHOTO indicator AUTO indicator & TEXT indicator & PHOTO indicator</td><td>AUTO exposure mode (300dpi) TEXT mode (300dpi) PHOTO mode (Error diffusion) TS mode (TEXT) (300dpi) TS mode (AUTO exposure) (300dpi) PHOTO mode (Dither)</td></tr> </tbody> </table>	LED	Copy mode	AUTO indicator TEXT indicator PHOTO indicator TEXT indicator & PHOTO indicator AUTO indicator & PHOTO indicator AUTO indicator & TEXT indicator & PHOTO indicator	AUTO exposure mode (300dpi) TEXT mode (300dpi) PHOTO mode (Error diffusion) TS mode (TEXT) (300dpi) TS mode (AUTO exposure) (300dpi) PHOTO mode (Dither)
LED	Copy mode						
AUTO indicator TEXT indicator PHOTO indicator TEXT indicator & PHOTO indicator AUTO indicator & PHOTO indicator AUTO indicator & TEXT indicator & PHOTO indicator	AUTO exposure mode (300dpi) TEXT mode (300dpi) PHOTO mode (Error diffusion) TS mode (TEXT) (300dpi) TS mode (AUTO exposure) (300dpi) PHOTO mode (Dither)						

Main code	Sub code	Contents	Details of operation																		
46	19	Exposure mode setting (Gamma table setting / AUTO exposure operation mode setting / PHOTO image process setting)	<p>Used set for the following three exposure mode. Enter a code number and press the [START] key, and the entered number is written into the EEPROM and the machine goes into the sub code entry standby mode. (When the [AUTO/TEXT/PHOTO] key is pressed, the number is written into the EEPROM and the set item is changed.)</p> <p><<Gamma table setting>> When this simulation is executed, the current set code number of gamma table is displayed.</p> <ul style="list-style-type: none"> * When setting the gamma table, no AUTO/TEXT/PHOTO indicators are lighted. <table border="1"> <thead> <tr> <th>Code number</th><th>Setting (Gamma table)</th></tr> </thead> <tbody> <tr> <td>1</td><td>Image quality priority mode</td></tr> <tr> <td>2</td><td>Toner consumption priority mode * Default</td></tr> </tbody> </table> <ul style="list-style-type: none"> * If this setting is changed, the set content of SIM46-30 is reset to the default. <p><<AUTO exposure mode>> When the [AUTO/TEXT/PHOTO] key is pressed in gamma table setting, the mode is changed to the AUTO exposure operation mode setting and the current set code number of the AUTO exposure operation mode is displayed. (Default: 0)</p> <ul style="list-style-type: none"> * When setting the AUTO exposure operation mode, the AUTO indicator is lighted. <table border="1"> <thead> <tr> <th>Code number</th><th>Setting (AUTO exposure operation mode)</th></tr> </thead> <tbody> <tr> <td>0</td><td>Lead edge stop * Default</td></tr> <tr> <td>1</td><td>Rear time process</td></tr> </tbody> </table> <p><Photo image process setting> When the [AUTO/TEXT/PHOTO] key is pressed during the AUTO exposure operation mode setting, the setting mode is changed to the photo image process setting and the currently set code number of the photo image process setting is displayed.</p> <ul style="list-style-type: none"> * When in the photo image process setting, the [Photo mode lamp] is lighted. <table border="1"> <thead> <tr> <th>Code number</th><th>Setting (Photo image process setting)</th></tr> </thead> <tbody> <tr> <td>1</td><td>Error diffusion process</td></tr> <tr> <td>2</td><td>Dither process * Default</td></tr> </tbody> </table>	Code number	Setting (Gamma table)	1	Image quality priority mode	2	Toner consumption priority mode * Default	Code number	Setting (AUTO exposure operation mode)	0	Lead edge stop * Default	1	Rear time process	Code number	Setting (Photo image process setting)	1	Error diffusion process	2	Dither process * Default
Code number	Setting (Gamma table)																				
1	Image quality priority mode																				
2	Toner consumption priority mode * Default																				
Code number	Setting (AUTO exposure operation mode)																				
0	Lead edge stop * Default																				
1	Rear time process																				
Code number	Setting (Photo image process setting)																				
1	Error diffusion process																				
2	Dither process * Default																				
20	SPF exposure correction (Only when the SPF/RSPF is installed)		<p>Used to adjust the exposure correction amount in the SPF mode (for the OC mode).</p> <p>(Operating procedure) When this simulation is executed, the current set value is displayed. Enter the adjustment value with the Numeric keys and press the [START] key. The entered set value is stored and a copy is made.</p> <p>When the [Interrupt] key is pressed, the entered value is saved and the machine goes into the sub code entry standby mode. When the [CA] key is pressed, the entered value is saved and the simulation is terminated. [1] ~ [99] (Center [50])</p> <ul style="list-style-type: none"> * The greater the set value is, the darker the density is. The smaller the set value is, the lighter the density is. * The exposure mode is TEXT fixed. The LED does not change, either. <p>The exposure level can not be adjusted.</p>																		
29	Image contrast adjustment (600dpi)		<p>Used to adjust the contrast for each mode.</p> <p>(Operating procedure) When this simulation is executed, warm-up and shading are performed, and the current set value is displayed in two digits. (Default: 50) The density LED is not lighted. Change the set value and press the [START] key, and a copy is made according to the set value. The greater the set value is, the higher the contrast is. The smaller the set value is, the lower the contrast is. In this case, only a copy at Exp. 3 is made. However, the contrasts at Exp.1 and Exp. 5 are also changed accordingly. To select a desired copy mode, press the [AUTO/TEXT/PHOTO] key. The selected copy mode set value is displayed on the copy quantity display. (Adjustment range: 1 ~ 99)</p> <table border="1"> <thead> <tr> <th>LED</th><th>Copy mode</th></tr> </thead> <tbody> <tr> <td>AUTO indicator</td><td>AUTO exposure mode (600dpi)</td></tr> <tr> <td>TEXT indicator</td><td>TEXT mode (600dpi)</td></tr> <tr> <td>PHOTO indicator</td><td>PHOTO mode (Error diffusion)</td></tr> <tr> <td>TEXT indicator & PHOTO indicator</td><td>TS mode (TEXT) (600dpi)</td></tr> <tr> <td>AUTO indicator & PHOTO indicator</td><td>TS mode (AUTO exposure) (600dpi)</td></tr> <tr> <td>AUTO indicator & TEXT indicator & PHOTO indicator</td><td>PHOTO mode(Dither)</td></tr> </tbody> </table>	LED	Copy mode	AUTO indicator	AUTO exposure mode (600dpi)	TEXT indicator	TEXT mode (600dpi)	PHOTO indicator	PHOTO mode (Error diffusion)	TEXT indicator & PHOTO indicator	TS mode (TEXT) (600dpi)	AUTO indicator & PHOTO indicator	TS mode (AUTO exposure) (600dpi)	AUTO indicator & TEXT indicator & PHOTO indicator	PHOTO mode(Dither)				
LED	Copy mode																				
AUTO indicator	AUTO exposure mode (600dpi)																				
TEXT indicator	TEXT mode (600dpi)																				
PHOTO indicator	PHOTO mode (Error diffusion)																				
TEXT indicator & PHOTO indicator	TS mode (TEXT) (600dpi)																				
AUTO indicator & PHOTO indicator	TS mode (AUTO exposure) (600dpi)																				
AUTO indicator & TEXT indicator & PHOTO indicator	PHOTO mode(Dither)																				

Main code	Sub code	Contents	Details of operation																							
46	30	AUTO exposure limit setting	<p>Used to set the AUTO exposure and the limit value at AUTO exposure (toner save). The set range is 0 ~ 255. The default is 0.</p> <p>Change the setting and press the [START] key, and it will be written into the EEPROM and the machine will go into the sub code input standby mode. When the [AUTO/TEXT/PHOTO] key is pressed, the machine goes back to the gamma table setting mode.</p> <table border="1"> <thead> <tr> <th>LED</th><th>Setting mode</th></tr> </thead> <tbody> <tr> <td>AUTO indicator</td><td>Limit value for OC scan AUTO exposure</td></tr> <tr> <td>TEXT indicator</td><td>Limit value for OC scan AUTO exposure (toner save)</td></tr> <tr> <td>PHOTO indicator</td><td>Limit value for SPF scan AUTO exposure</td></tr> <tr> <td>AUTO indicator & PHOTO indicator</td><td>Limit value for SPF scan AUTO exposure (toner save)</td></tr> </tbody> </table> <p><Remark> When SIM26-60 (Destination setting) and SIM46-19 (Auto exposure mode) are changed, this set content of this simulation is also changed to the default.</p>		LED	Setting mode	AUTO indicator	Limit value for OC scan AUTO exposure	TEXT indicator	Limit value for OC scan AUTO exposure (toner save)	PHOTO indicator	Limit value for SPF scan AUTO exposure	AUTO indicator & PHOTO indicator	Limit value for SPF scan AUTO exposure (toner save)												
LED	Setting mode																									
AUTO indicator	Limit value for OC scan AUTO exposure																									
TEXT indicator	Limit value for OC scan AUTO exposure (toner save)																									
PHOTO indicator	Limit value for SPF scan AUTO exposure																									
AUTO indicator & PHOTO indicator	Limit value for SPF scan AUTO exposure (toner save)																									
	31	Image sharpness adjustment	<p>Used to adjust clear/shading of image for each mode. (Operating procedure) When this simulation is executed, warm-up and shading are performed, and the current set value is displayed in two digits. (Default: 1) Change the set value and press the [START] key, and a copy is made according to the set value.</p> <table border="1"> <thead> <tr> <th>Set value</th><th>Image quality</th></tr> </thead> <tbody> <tr> <td>0</td><td>Shading</td></tr> <tr> <td>1</td><td>Standard</td></tr> <tr> <td>2</td><td>Clear</td></tr> </tbody> </table> <p>Use the [AUTO/TEXT/PHOTO] key to select each copy mode. The code number of the selected copy mode is displayed on the copy quantity display.</p> <table border="1"> <thead> <tr> <th>LED</th><th>Copy mode</th></tr> </thead> <tbody> <tr> <td>AUTO indicator</td><td>AUTO exposure mode</td></tr> <tr> <td>TEXT indicator</td><td>TEXT mode</td></tr> <tr> <td>PHOTO indicator</td><td>PHOTO mode (Error diffusion)</td></tr> <tr> <td>TEXT indicator & PHOTO indicator</td><td>TS mode (TEXT)</td></tr> <tr> <td>AUTO indicator & PHOTO indicator</td><td>TS mode (AUTO exposureE)</td></tr> <tr> <td>AUTO indicator & TEXT indicator & PHOTO indicator</td><td>PHOTO mode(Dither)</td></tr> </tbody> </table>		Set value	Image quality	0	Shading	1	Standard	2	Clear	LED	Copy mode	AUTO indicator	AUTO exposure mode	TEXT indicator	TEXT mode	PHOTO indicator	PHOTO mode (Error diffusion)	TEXT indicator & PHOTO indicator	TS mode (TEXT)	AUTO indicator & PHOTO indicator	TS mode (AUTO exposureE)	AUTO indicator & TEXT indicator & PHOTO indicator	PHOTO mode(Dither)
Set value	Image quality																									
0	Shading																									
1	Standard																									
2	Clear																									
LED	Copy mode																									
AUTO indicator	AUTO exposure mode																									
TEXT indicator	TEXT mode																									
PHOTO indicator	PHOTO mode (Error diffusion)																									
TEXT indicator & PHOTO indicator	TS mode (TEXT)																									
AUTO indicator & PHOTO indicator	TS mode (AUTO exposureE)																									
AUTO indicator & TEXT indicator & PHOTO indicator	PHOTO mode(Dither)																									
48	01	Main scanning/sub scanning direction magnification ratio adjustment	<p>Used to adjust the magnification ratio in the main scanning direction (front/rear) and the sub scanning direction. Enter the adjustment value with the Numeric keys and press the [START] key, and the entered value is saved a copy is made. (When the set value is increased by 1, the magnification ratio is increased by 0.1 %.) (Adjustment range: 1 ~ 99, Default: 50)</p> <table border="1"> <thead> <tr> <th>LED</th><th>Adjustment mode</th></tr> </thead> <tbody> <tr> <td>TEXT indicator</td><td>Main scanning direction magnification ratio adjustment</td></tr> <tr> <td>PHOTO indicator</td><td>Sub scanning direction magnification ratio adjustment</td></tr> </tbody> </table>		LED	Adjustment mode	TEXT indicator	Main scanning direction magnification ratio adjustment	PHOTO indicator	Sub scanning direction magnification ratio adjustment																
LED	Adjustment mode																									
TEXT indicator	Main scanning direction magnification ratio adjustment																									
PHOTO indicator	Sub scanning direction magnification ratio adjustment																									
	05	SPF/RSPF mode sub scanning magnification ratio adjustment in copying (Only when the SPF/RSPF is installed)	<p>The current SPF/RSPF mode sub scan direction magnification ratio adjustment value is displayed. When the [START] key is pressed, the entered value is acquired and saved into the EEPROM, and a copy is made. When the [CA] key is pressed instead, the simulation mode is terminated. In RSPF adjustment, after the machine enters the copy mode of one page, select the single copy mode with the [ORIGINAL TO COPY] key to shift to the single copy mode, making two pages of single copy. For printing, regardless of the density mode LED and the density level LED display, the density mode = MANUAL, and density level = 3. (Adjustment range: 1 ~ 99, Default: 50)</p> <table border="1"> <thead> <tr> <th>LED</th><th>Adjustment mode</th></tr> </thead> <tbody> <tr> <td>AUTO indicator</td><td>SPF/RSPF document surface magnification ratio adjustment</td></tr> <tr> <td>TEXT indicator</td><td>RSPF document back magnification ratio adjustment</td></tr> </tbody> </table>		LED	Adjustment mode	AUTO indicator	SPF/RSPF document surface magnification ratio adjustment	TEXT indicator	RSPF document back magnification ratio adjustment																
LED	Adjustment mode																									
AUTO indicator	SPF/RSPF document surface magnification ratio adjustment																									
TEXT indicator	RSPF document back magnification ratio adjustment																									

Main code	Sub code	Contents	Details of operation																																		
49	01	Flash ROM program writing mode	<p>(Operating procedure) When this simulation is executed, "d" is displayed on the copy quantity display and the machine enters the Flash ROM program writing mode. Use the writing tool on the PC to write the program. During writing, the display is made as follows. After completion of downloading, turn OFF/ON the power to reset.</p> <table border="1"> <thead> <tr> <th>Status</th> <th>7-seg display</th> <th>POWER SAVE indicator</th> <th>DUAL PAGE COPY indicator</th> </tr> </thead> <tbody> <tr> <td>Download data reception</td> <td>d</td> <td>ON</td> <td>OFF</td> </tr> <tr> <td>Data delete start</td> <td>d</td> <td>OFF</td> <td>ON</td> </tr> <tr> <td>Data write (Boot section)</td> <td>d</td> <td>Flash</td> <td>OFF</td> </tr> <tr> <td>Data write (Program section)</td> <td>d</td> <td>Flash</td> <td>Flash</td> </tr> <tr> <td>Sum check</td> <td>d</td> <td>ON</td> <td>ON</td> </tr> <tr> <td>Download end</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> </tr> <tr> <td>Error status</td> <td>E*</td> <td>OFF</td> <td>OFF</td> </tr> </tbody> </table> <p>NOTE [*] in the error status indicates as follows to show the error position.</p> <table border="1"> <tr> <td>00 Data receive error 02 FLASH ROM delete error 03 FLASH ROM write error (Boot section) 04 FLASH ROM write error (Program section) 05 Sum check error (Loader section) 06 Sum check error (Boot section) 07 Sum check error (Program section)</td> <td>08 Sum check error (EEPROM section) 09 EEPROM write error 0a EEPROM read error 0b EEPROM verify error 0F Download data length error 0E EEPROM size error</td> </tr> </table>	Status	7-seg display	POWER SAVE indicator	DUAL PAGE COPY indicator	Download data reception	d	ON	OFF	Data delete start	d	OFF	ON	Data write (Boot section)	d	Flash	OFF	Data write (Program section)	d	Flash	Flash	Sum check	d	ON	ON	Download end	OFF	OFF	OFF	Error status	E*	OFF	OFF	00 Data receive error 02 FLASH ROM delete error 03 FLASH ROM write error (Boot section) 04 FLASH ROM write error (Program section) 05 Sum check error (Loader section) 06 Sum check error (Boot section) 07 Sum check error (Program section)	08 Sum check error (EEPROM section) 09 EEPROM write error 0a EEPROM read error 0b EEPROM verify error 0F Download data length error 0E EEPROM size error
Status	7-seg display	POWER SAVE indicator	DUAL PAGE COPY indicator																																		
Download data reception	d	ON	OFF																																		
Data delete start	d	OFF	ON																																		
Data write (Boot section)	d	Flash	OFF																																		
Data write (Program section)	d	Flash	Flash																																		
Sum check	d	ON	ON																																		
Download end	OFF	OFF	OFF																																		
Error status	E*	OFF	OFF																																		
00 Data receive error 02 FLASH ROM delete error 03 FLASH ROM write error (Boot section) 04 FLASH ROM write error (Program section) 05 Sum check error (Loader section) 06 Sum check error (Boot section) 07 Sum check error (Program section)	08 Sum check error (EEPROM section) 09 EEPROM write error 0a EEPROM read error 0b EEPROM verify error 0F Download data length error 0E EEPROM size error																																				

Main code	Sub code	Contents	Details of operation																				
50	01	Image lead edge adjustment	<p>Used to adjust the copy image position and the lead edge void amount on the copy paper. This adjustment is made by adjusting the image scan start position at 100% and the print start position (resist roller ON timing).</p> <p>(Operating procedure)</p> <p>When this simulation is executed, the current set value is displayed in two digits. (Center value: 50) When the [AUTO/TEXT/PHOTO] key is pressed, the setting mode and the display are switched. Enter the adjustment value with the Numeric keys and press the [START] key, and the entered value is set and a copy is made. (Adjustment range 1 ~ 99) When the [Interrupt] key is pressed, the entered value is saved and the machine goes into the sub code entry standby mode. When the [CA] key is pressed, the entered value is saved and the simulation is terminated. When the adjustment is made with 1st tray paper feed, all the adjustment values at the paper feed ports become the same. (When the adjustment value is increased by 1, the position is shifted by about 0.1mm.)</p> <table border="1"> <thead> <tr> <th>LED</th><th>Adjustment mode</th></tr> </thead> <tbody> <tr> <td>AUTO, 1st tray indicator</td><td>Print start position (1st tray paper feed)</td></tr> <tr> <td>AUTO, 2nd tray indicator</td><td>★ Print start position (2nd / 3rd / 4th tray paper feed)</td></tr> <tr> <td>AUTO, Bypass tray indicator</td><td>Print start position (Bypass tray)</td></tr> <tr> <td>TEXT indicator</td><td>Image lead edge void amount</td></tr> <tr> <td>PHOTO indicator</td><td>Image scan start position</td></tr> <tr> <td>AUTO, TEXT, PHOTO indicator</td><td>Image rear edge void amount</td></tr> </tbody> </table> <p>* The mark, "★", indicates that it is supported only for the installed model, and it is skipped for non-installed models.</p> <p>Note: When printing is made with bypass tray, use A3 paper. When the adjustment value of the print start position is increased by 1, the resist roller ON timing is delayed and the print image is reduced by 0.1mm. When the adjustment value of the image scan start position is increased by 1, the scan start position is shifted to the home position by 0.1mm.</p> <p>[Adjustment procedure]</p> <ol style="list-style-type: none"> Set the print start position (A) (AUTO exposure ON), the lead edge void amount (B) (TEXT ON), and the scan start position (C) (PHOTO ON) to <1>, and make a 100% copy. Measure the image loss (R mm) of the scale. Set as C=10 x R (mm). (Example: Set to 40.) When the value of C is increased by 10, the image loss is decreased by 1mm. (Default: 50) Measure the distance between the paper lead edge and the image print start position. Set as A=10 x H (mm). (Example: Set to 50.) When the value of A is increased by 10, the image lead edge is shifted toward the paper lead edge by 1mm. (Default: 50) Set the lead edge void area as B=50 (2.5mm). (Default: 50) When the value of B is increased by 10, the void is increased by about 1mm. (For 25 or less, however, the void amount is zero.) <p>(Example)</p> <p>Distance from the paper lead edge to the image lead edge H = 5mm</p> <p>Image loss R=4mm</p> <p>5mm</p> <p>10mm</p>	LED	Adjustment mode	AUTO, 1st tray indicator	Print start position (1st tray paper feed)	AUTO, 2nd tray indicator	★ Print start position (2nd / 3rd / 4th tray paper feed)	AUTO, Bypass tray indicator	Print start position (Bypass tray)	TEXT indicator	Image lead edge void amount	PHOTO indicator	Image scan start position	AUTO, TEXT, PHOTO indicator	Image rear edge void amount						
LED	Adjustment mode																						
AUTO, 1st tray indicator	Print start position (1st tray paper feed)																						
AUTO, 2nd tray indicator	★ Print start position (2nd / 3rd / 4th tray paper feed)																						
AUTO, Bypass tray indicator	Print start position (Bypass tray)																						
TEXT indicator	Image lead edge void amount																						
PHOTO indicator	Image scan start position																						
AUTO, TEXT, PHOTO indicator	Image rear edge void amount																						
06		Copy lead edge position adjustment (SPF/RSPF) (Only when the SPF/RSPF is installed)	<p>Used to make the SPF copy lead edge position adjustment.</p> <p>* When the adjustment value of the document scan start position is increased by 1, the scan start timing is advanced by 0.1mm. The print image is shifted to the reverse side of the scan start position. (Adjustment range: 1 ~ 99, Default: 50)</p> <p><Adjustment items></p> <table border="1"> <thead> <tr> <th>LED</th><th>Item</th><th>Default</th><th>Variable range</th></tr> </thead> <tbody> <tr> <td>AUTO indicator</td><td>Front document scan position adjustment</td><td>50</td><td>1 ~ 99</td></tr> <tr> <td>TEXT indicator</td><td>Back document scan position adjustment</td><td>50</td><td>1 ~ 99</td></tr> <tr> <td>PHOTO indicator</td><td>Rear edge void adjustment (SPF)</td><td>50</td><td>1 ~ 99</td></tr> </tbody> </table>	LED	Item	Default	Variable range	AUTO indicator	Front document scan position adjustment	50	1 ~ 99	TEXT indicator	Back document scan position adjustment	50	1 ~ 99	PHOTO indicator	Rear edge void adjustment (SPF)	50	1 ~ 99				
LED	Item	Default	Variable range																				
AUTO indicator	Front document scan position adjustment	50	1 ~ 99																				
TEXT indicator	Back document scan position adjustment	50	1 ~ 99																				
PHOTO indicator	Rear edge void adjustment (SPF)	50	1 ~ 99																				

Main code	Sub code	Contents	Details of operation																
50	10	Paper off-center adjustment	<p>Used to adjust the positions of copy images on copy paper and the center offset position when scanning the document.</p> <p>(Operating procedure)</p> <p>When this simulation is executed, the current set value is displayed. Enter the adjustment value with the Numeric keys and press the [START] key, and the entered value is stored and a copy is made. When the [Interrupt] key is pressed, the entered value is saved and the machine goes into the sub code entry standby mode. When the [CA] key is pressed, the entered value is saved and the simulation is terminated.</p> <p>(When the set value is increased by 1, the position is shifted by 0.1mm.)</p> <p>(Adjustment range: 1 ~ 99, Default: 50)</p> <p><Supplement></p> <p>When the adjustment value is increased, the image is shifted to the left. When the adjustment value is decreased, the image is shifted to the right.</p> <table border="1"> <thead> <tr> <th>LED</th><th>Adjustment mode</th></tr> </thead> <tbody> <tr> <td>AUTO, 1st tray indicator</td><td>Print center offset (1st tray paper feed)</td></tr> <tr> <td>AUTO, 2nd tray indicator</td><td>★ Print center offset (2nd tray paper feed)</td></tr> <tr> <td>AUTO, 3rd tray indicator</td><td>★ Print center offset (3rd tray paper feed)</td></tr> <tr> <td>AUTO, 4th tray indicator</td><td>★ Print center offset (4th tray paper feed)</td></tr> <tr> <td>AUTO, Bypass tray indicator</td><td>Print center offset (Bypass tray)</td></tr> <tr> <td>TEXT, 1st tray indicator</td><td>2nd print center offset (1st tray paper feed) When this mode is selected, the S-D mode is automatically set.</td></tr> </tbody> </table> <p>★ Supported for the installed models only. Skipped for the models without installation.</p> <p>Note: When the adjustment value is too great, the outside area of shading may be scanned, resulting in black streaks on copy paper.</p> <p>When printing is made with bypass tray, use A3 paper.</p> <p>When a document is scanned in the OC mode in the back surface center off-set adjustment and printing is made in the S-D mode, the first document is scanned and then the second document is scanned automatically.</p>	LED	Adjustment mode	AUTO, 1st tray indicator	Print center offset (1st tray paper feed)	AUTO, 2nd tray indicator	★ Print center offset (2nd tray paper feed)	AUTO, 3rd tray indicator	★ Print center offset (3rd tray paper feed)	AUTO, 4th tray indicator	★ Print center offset (4th tray paper feed)	AUTO, Bypass tray indicator	Print center offset (Bypass tray)	TEXT, 1st tray indicator	2nd print center offset (1st tray paper feed) When this mode is selected, the S-D mode is automatically set.		
LED	Adjustment mode																		
AUTO, 1st tray indicator	Print center offset (1st tray paper feed)																		
AUTO, 2nd tray indicator	★ Print center offset (2nd tray paper feed)																		
AUTO, 3rd tray indicator	★ Print center offset (3rd tray paper feed)																		
AUTO, 4th tray indicator	★ Print center offset (4th tray paper feed)																		
AUTO, Bypass tray indicator	Print center offset (Bypass tray)																		
TEXT, 1st tray indicator	2nd print center offset (1st tray paper feed) When this mode is selected, the S-D mode is automatically set.																		
12		Document off-center adjustment	<p>Used to make the document scan off-center adjustment.</p> <p>(Adjustment range: 1 ~ 99, Default: 50)</p> <p>* When the adjustment value is increased by 1, the print image is shifted by 0.1mm to the left when the scan start position is put on the upper side.</p> <p><Adjustment item></p> <table border="1"> <thead> <tr> <th>LED</th><th>Item</th><th>Default</th><th>Variable range</th></tr> </thead> <tbody> <tr> <td>AUTO indicator</td><td>Platen document scan</td><td>50</td><td>1 ~ 99</td></tr> <tr> <td>TEXT indicator</td><td>SPF document front scan (Only when the SPF/RSPF is installed)</td><td>50</td><td>1 ~ 99</td></tr> <tr> <td>PHOTO indicator</td><td>RSPF document back scan (Only when the RSPF is installed)</td><td>50</td><td>1 ~ 99</td></tr> </tbody> </table>	LED	Item	Default	Variable range	AUTO indicator	Platen document scan	50	1 ~ 99	TEXT indicator	SPF document front scan (Only when the SPF/RSPF is installed)	50	1 ~ 99	PHOTO indicator	RSPF document back scan (Only when the RSPF is installed)	50	1 ~ 99
LED	Item	Default	Variable range																
AUTO indicator	Platen document scan	50	1 ~ 99																
TEXT indicator	SPF document front scan (Only when the SPF/RSPF is installed)	50	1 ~ 99																
PHOTO indicator	RSPF document back scan (Only when the RSPF is installed)	50	1 ~ 99																

Main code	Sub code	Contents	Details of operation								
50	18	Duplex copy memory reverse position adjustment (Only when the SPF/RSPF is installed or in the duplex mode)	<p>Used to adjust the memory reverse position in duplex copy. When this simulation is executed, the current correction value is displayed. Enter a correction value with the Numeric keys and press the [START] key, and the entered value will be saved. (Adjustment range: 1 ~ 99, Default: 50)</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">LED</th> <th style="text-align: center;">Item</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">AUTO indicator</td> <td>OC memory reverse output position</td> </tr> <tr> <td style="text-align: center;">TEXT indicator</td> <td>SPF memory reverse output position</td> </tr> </tbody> </table> <p>Printing of the front surface in the S-D mode and printing of the even pages in the D-S mode are performed as reverse memory copying from the rear edge of the document. When, therefore, the printing position adjustment of output image is required, perform the adjustment as follows:</p> <p>The image direction in reverse memory copying is shown in the figure below. That is, when the document scan direction is as shown with the arrow, the output image is printed from the rear edge of scanning. If, therefore, the print edge section is shifted, set the reference chart with the reference position at the rear edge and use this simulation to change the set value in order to adjust the print lead edge position.</p> <p>Since printing is started at the print start position and performed from the last, saved data in the memory to the head data, the lead edge position of an image is adjusted by changing the last data position saved in the memory.</p> <p>Note: A document is scanned in the OC mode. When printing is made in the S-D mode, the first document is scanned and then the second document is automatically scanned.</p>	LED	Item	AUTO indicator	OC memory reverse output position	TEXT indicator	SPF memory reverse output position		
LED	Item										
AUTO indicator	OC memory reverse output position										
TEXT indicator	SPF memory reverse output position										
	19	Duplex copy rear edge void adjustment (Duplex model only)	<p>Used to adjust the rear edge void amount in duplex copy. (Operating procedure)</p> <p>When this simulation is executed, the current set value is displayed in two digits. (Adjustment range: 1 ~ 99, Center value: 50)</p> <p>* When the set value is increased by 1, the void amount is increased by about 0.1mm.</p> <p>Press the [AUTO/TEXT/PHOTO] key to select a suitable setting mode and a display. Enter the adjustment value with the Numeric keys and press the [START] key, and the entered value is saved and a copy is made. (Paper information is cleared after every copying).</p> <p>When the [Interrupt] key is pressed, the entered value is saved and the machine goes into the sub code entry standby mode. When the [CA] key is pressed, the entered value is saved and the simulation is terminated.</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">LED</th> <th style="text-align: center;">Item</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">AUTO indicator</td> <td>Paper rear edge void amount (First print surface)</td> </tr> <tr> <td style="text-align: center;">TEXT indicator</td> <td>Paper rear edge void amount (Second print surface)</td> </tr> <tr> <td style="text-align: center;">PHOTO indicator</td> <td>Print start position (duplex back surface)</td> </tr> </tbody> </table>	LED	Item	AUTO indicator	Paper rear edge void amount (First print surface)	TEXT indicator	Paper rear edge void amount (Second print surface)	PHOTO indicator	Print start position (duplex back surface)
LED	Item										
AUTO indicator	Paper rear edge void amount (First print surface)										
TEXT indicator	Paper rear edge void amount (Second print surface)										
PHOTO indicator	Print start position (duplex back surface)										

Main code	Sub code	Contents	Details of operation																							
51	02	Resist amount adjustment	<p>Used to adjust the contact pressure of the machine resist roller and the RSPF resist roller onto the paper.</p> <p>(Operating procedure)</p> <p>When this simulation is executed, the current set value is displayed.</p> <p>When the [AUTO/TEXT/PHOTO] key is pressed, the following set items are changed sequentially.</p> <p>Enter an adjustment value with the Numeric keys and press the [START] key, and the entered value will be saved and a copy will be made. (Adjustment range: 1 ~ 99, Default: 50)</p> <p>When the [CA] key is pressed, the entered value is saved and the simulation is terminated.</p> <table border="1"> <thead> <tr> <th>LED</th><th>Adjustment mode</th></tr> </thead> <tbody> <tr> <td>AUTO, 1st tray indicator</td><td>1st tray paper feed</td></tr> <tr> <td>AUTO, 2nd tray indicator</td><td>★ 2nd tray paper feed</td></tr> <tr> <td>AUTO, 3rd tray indicator</td><td>★ 3rd tray paper feed</td></tr> <tr> <td>AUTO, 4th tray indicator</td><td>★ 4th tray paper feed</td></tr> <tr> <td>AUTO, Bypass tray indicator</td><td>Bypass tray</td></tr> <tr> <td>AUTO, TEXT, PHOTO indicator</td><td>★ RSPF document feed (Front surface)</td></tr> <tr> <td>AUTO, TEXT indicator</td><td>★ RSPF document feed (Back surface)</td></tr> <tr> <td>AUTO, PHOTO indicator</td><td>★ RSPF document (A5) paper feed (Back surface)</td></tr> <tr> <td>TEXT, PHOTO indicator</td><td>★ Duplex back surface</td></tr> <tr> <td>TEXT indicator</td><td>PS solenoid prior pulling time adjustment in manual paper feed</td></tr> </tbody> </table> <p>★ Supported for the installed models only. Skipped for the models without installation.</p>		LED	Adjustment mode	AUTO, 1st tray indicator	1st tray paper feed	AUTO, 2nd tray indicator	★ 2nd tray paper feed	AUTO, 3rd tray indicator	★ 3rd tray paper feed	AUTO, 4th tray indicator	★ 4th tray paper feed	AUTO, Bypass tray indicator	Bypass tray	AUTO, TEXT, PHOTO indicator	★ RSPF document feed (Front surface)	AUTO, TEXT indicator	★ RSPF document feed (Back surface)	AUTO, PHOTO indicator	★ RSPF document (A5) paper feed (Back surface)	TEXT, PHOTO indicator	★ Duplex back surface	TEXT indicator	PS solenoid prior pulling time adjustment in manual paper feed
LED	Adjustment mode																									
AUTO, 1st tray indicator	1st tray paper feed																									
AUTO, 2nd tray indicator	★ 2nd tray paper feed																									
AUTO, 3rd tray indicator	★ 3rd tray paper feed																									
AUTO, 4th tray indicator	★ 4th tray paper feed																									
AUTO, Bypass tray indicator	Bypass tray																									
AUTO, TEXT, PHOTO indicator	★ RSPF document feed (Front surface)																									
AUTO, TEXT indicator	★ RSPF document feed (Back surface)																									
AUTO, PHOTO indicator	★ RSPF document (A5) paper feed (Back surface)																									
TEXT, PHOTO indicator	★ Duplex back surface																									
TEXT indicator	PS solenoid prior pulling time adjustment in manual paper feed																									
53	08	SPF scanning position automatic adjustment (Only when the SPF/RSPF is installed)	<p>Place the white chart so that it covers both the SPF scan glass and the OC glass. Close the OC cover. When this simulation is executed, the current adjustment value is displayed as the initial display. When the [START] key is pressed, the mirror unit scans from the home position to the SPF scan position with the current adjustment value displayed, and the SPF glass cover edge is calculated from the difference between the SPF glass cover edge and the OC side document glass CCD output level.</p> <p>* The default is 50, the adjustment range is 1 ~ 99, and the adjustment unit 1= about 0.127mm. If the adjustment is completed normally, the adjusted value is displayed. If not, the Misfeed indicator lights up with the current set value displayed. When the [START] key is pressed again with the Misfeed indicator ON, the execution is repeated again. When the [Interrupt] key or the [CA] key is pressed during execution, " - " is displayed and the operation is canceled. The mirror returns to its home position and the simulation mode is terminated. In the case when the [Interrupt] key is pressed, the machine goes into the sub code input standby mode. In the case when the [CA] key is pressed, all the lamps are turned off.</p> <table border="1"> <thead> <tr> <th>LED</th><th>Display mode</th></tr> </thead> <tbody> <tr> <td>AUTO indicator</td><td>SPF scan position automatic adjustment</td></tr> <tr> <td>TEXT indicator</td><td>SPF scan position manual adjustment</td></tr> </tbody> </table>		LED	Display mode	AUTO indicator	SPF scan position automatic adjustment	TEXT indicator	SPF scan position manual adjustment																
LED	Display mode																									
AUTO indicator	SPF scan position automatic adjustment																									
TEXT indicator	SPF scan position manual adjustment																									
10		SPF document scan position select setting	<p>Setting is changed depending on whether the SPF unit and the SPF document glass holding section are glass dirt prevention parts or not.</p> <p>For the combination of this machine and the AR-RP10/AR-SP10, the set value is set to [1]. If the set value is changed to [0], black streaks may be produced on a copy paper due to dirt on the SPF glass.</p> <p>When this simulation is executed, the current code number is displayed. Enter a code number corresponding to the SPF unit to be used and press [START] key to save the setting.</p> <table border="1"> <thead> <tr> <th>Code number</th><th>Mode</th></tr> </thead> <tbody> <tr> <td>0</td><td>Set to the scan position equivalent to the old-type SPF unit (the previous model of AR-SP6/RP6).</td></tr> <tr> <td>1</td><td>Set to the scan position for dirt prevention. *Default</td></tr> </tbody> </table> <p>Though this setting is changed, the other adjustment values are not affected. (The set value remain unchanged.)</p> <p>When replacing or installing the SPF unit, perform this simulation to set the position and then execute the scan position automatic adjustment.</p>		Code number	Mode	0	Set to the scan position equivalent to the old-type SPF unit (the previous model of AR-SP6/RP6).	1	Set to the scan position for dirt prevention. *Default																
Code number	Mode																									
0	Set to the scan position equivalent to the old-type SPF unit (the previous model of AR-SP6/RP6).																									
1	Set to the scan position for dirt prevention. *Default																									
60	01	SDRAM (image memory area) access check	<p>Access check to the SDRAM is made.</p> <p>When this simulation is executed, the SDRAM check is started. Fusing execution. the start LED turns OFF. If an error occurs, the following LED turns ON. When the operation is normally completed, the START indicator is turned ON.</p> <p>After completion of checking, press [CA] key to reboot the machine.</p> <table border="1"> <thead> <tr> <th>LED</th><th>Display mode</th></tr> </thead> <tbody> <tr> <td>Misfeed indicators</td><td>Write end error</td></tr> <tr> <td>Paper required indicator</td><td>Read end error</td></tr> </tbody> </table>		LED	Display mode	Misfeed indicators	Write end error	Paper required indicator	Read end error																
LED	Display mode																									
Misfeed indicators	Write end error																									
Paper required indicator	Read end error																									

Main code	Sub code	Contents	Details of operation																																																
61	02	Laser power correction ON/OFF	<p>Used to set whether the laser power correction is performed or not halfway. When [START] key is pressed, the entered value is saved and the screen shifts to the sub code input standby mode.</p> <table border="1"> <thead> <tr> <th>Code number</th><th>Mode</th></tr> </thead> <tbody> <tr> <td>0</td><td>Not correct</td></tr> <tr> <td>1</td><td>Correct *Default</td></tr> </tbody> </table>		Code number	Mode	0	Not correct	1	Correct *Default																																									
Code number	Mode																																																		
0	Not correct																																																		
1	Correct *Default																																																		
03	Hsync output check	<p>When the [START] key is pressed, HSYNC is performed and the polygon motor is rotated for 30 sec. Every time when HSYNC is detected, the ZOOM indicator is lighted for 100msec.</p>																																																	
63	01	Shading check	<p>The detection level of the white plate for shading is displayed. (Operating procedure) When the [START] key is pressed in the sub code input standby mode, the mirror base unit moves to the white plate for shading and the copy lamp is lighted. Until the light quantity of the copy lamp is stabilized, the sub code of "01" is displayed on the 7-seg display. When the light quantity of the copy lamp is stabilized, it is revised every second, and the level of one pixel at the CCD center where no correction is made is detected for 10 sec, and the detected level is displayed in hexadecimal on the 7-seg display. After completion of 10 sec detection, the machine goes into the sub code input standby mode.</p>																																																
	07	SPF automatic correction (Only when the SPF/RSPF is installed)	<p>The SPF white correction start pixel position is automatically adjusted. This is performed after replacement of the lens. Open the SPF unit and press the [START] key, and the position (which pixel) of the white sheet for SPF exposure correction in the SPF position is displayed on the 7-seg display. If the value is 93 ~ 229, it is displayed on the 7-seg display and is written into the EEPROM. If the value is 0 ~ 92 or 230 ~ 999, it is displayed on the 7-seg display but is not written into the EEPROM. If the value is 1000 or above, "-----" is displayed on the 7-seg display and is not written into the EEPROM. The pixel position -34 written into the EEPROM is considered as the SPF white correction start pixel of the machine. When shi simulation is executed with the SPF unit closed, an error will occur.</p>																																																
64	01	Self print	<p>The optical system status is ignored and a self print is made. Also when a print command is sent from the host, printing is performed. (Operating procedure) When this simulation is executed, warm-up is performed and the START indicator is lighted. (However, the scanner is invalid and no initial operation is made.) Enter the code number with the Numeric keys, and select a tray with the PAPER SELECT key and press the [START] key. The selected tray start paper feed and printing is performed in the selected pattern. * Only the tray lamp and the online lamp are lighted, and no other lamps are lighted.</p>																																																
			<table border="1"> <thead> <tr> <th>Code number</th><th>Print pattern</th><th>Image output</th><th>Lighted LED</th></tr> </thead> <tbody> <tr> <td>0</td><td>Grid pattern</td><td><1>1/236 <2>1/128 <3>1/255 <4>2/254</td><td>AUTO indicator TEXT indicator PHOTO indicator AUTO indicator & TEXT indicator</td></tr> <tr> <td>1</td><td>Dot pattern</td><td><1>1/1 <2>2/2 <3>1/255</td><td>AUTO indicator TEXT indicator PHOTO indicator</td></tr> <tr> <td>2</td><td>Regular pitch pattern MbyN (Sub scan)</td><td><1>1/1 <2>1/2 <3>2/2</td><td>AUTO indicator TEXT indicator PHOTO indicator</td></tr> <tr> <td>3</td><td>Regular pitch pattern MbyN (Main scan)</td><td><1>1/1 <2>1/2 <3>2/2</td><td>AUTO indicator TEXT indicator PHOTO indicator</td></tr> <tr> <td>4</td><td>Black background belt (A4/A4R)(Paper F-R end)</td><td><1>1% <2>6% <3>35%</td><td>AUTO indicator AUTO indicator AUTO indicator</td></tr> <tr> <td>5</td><td>Black background belt (All surface)</td><td>No pattern</td><td>AUTO indicator</td></tr> <tr> <td>6</td><td>White background belt (All surface)</td><td>No pattern</td><td>AUTO indicator</td></tr> <tr> <td>7</td><td>ht(All surface)</td><td>No pattern</td><td>AUTO indicator</td></tr> <tr> <td>8</td><td>Black square</td><td>No pattern</td><td>AUTO indicator</td></tr> <tr> <td>9</td><td>Lead edge black</td><td>No pattern</td><td>AUTO indicator</td></tr> <tr> <td>10</td><td>Form of ■</td><td>No pattern</td><td>AUTO indicator</td></tr> </tbody> </table> <p>* When the destination is of AB series, print data are made in A3 size. (Therefore, A3 paper is desirable.) * When the destination is of inch series, print data are made in WLT size. (Therefore, WLT paper is desirable.)</p>		Code number	Print pattern	Image output	Lighted LED	0	Grid pattern	<1>1/236 <2>1/128 <3>1/255 <4>2/254	AUTO indicator TEXT indicator PHOTO indicator AUTO indicator & TEXT indicator	1	Dot pattern	<1>1/1 <2>2/2 <3>1/255	AUTO indicator TEXT indicator PHOTO indicator	2	Regular pitch pattern MbyN (Sub scan)	<1>1/1 <2>1/2 <3>2/2	AUTO indicator TEXT indicator PHOTO indicator	3	Regular pitch pattern MbyN (Main scan)	<1>1/1 <2>1/2 <3>2/2	AUTO indicator TEXT indicator PHOTO indicator	4	Black background belt (A4/A4R)(Paper F-R end)	<1>1% <2>6% <3>35%	AUTO indicator AUTO indicator AUTO indicator	5	Black background belt (All surface)	No pattern	AUTO indicator	6	White background belt (All surface)	No pattern	AUTO indicator	7	ht(All surface)	No pattern	AUTO indicator	8	Black square	No pattern	AUTO indicator	9	Lead edge black	No pattern	AUTO indicator	10	Form of ■	No pattern
Code number	Print pattern	Image output	Lighted LED																																																
0	Grid pattern	<1>1/236 <2>1/128 <3>1/255 <4>2/254	AUTO indicator TEXT indicator PHOTO indicator AUTO indicator & TEXT indicator																																																
1	Dot pattern	<1>1/1 <2>2/2 <3>1/255	AUTO indicator TEXT indicator PHOTO indicator																																																
2	Regular pitch pattern MbyN (Sub scan)	<1>1/1 <2>1/2 <3>2/2	AUTO indicator TEXT indicator PHOTO indicator																																																
3	Regular pitch pattern MbyN (Main scan)	<1>1/1 <2>1/2 <3>2/2	AUTO indicator TEXT indicator PHOTO indicator																																																
4	Black background belt (A4/A4R)(Paper F-R end)	<1>1% <2>6% <3>35%	AUTO indicator AUTO indicator AUTO indicator																																																
5	Black background belt (All surface)	No pattern	AUTO indicator																																																
6	White background belt (All surface)	No pattern	AUTO indicator																																																
7	ht(All surface)	No pattern	AUTO indicator																																																
8	Black square	No pattern	AUTO indicator																																																
9	Lead edge black	No pattern	AUTO indicator																																																
10	Form of ■	No pattern	AUTO indicator																																																

[8] USER PROGRAMS

The user programs allow the parameters of certain functions to be set, changed, or canceled as desired.

1. List of user programs

This copier has the following user programs.

Program name	Program No	Description	Default	Parameters
Auto clear time	1	"Auto clear time" automatically returns the copy settings to the initial settings when a certain period of time elapses after a copy is made. This program is used to select the period of time. "Auto clear time" can also be disabled.	60sec	1 (OFF) 2 (10sec) 3 (20sec) 4 (60sec) 5 (90sec) 6 (120sec)
Preheat mode		This function automatically switches the machine to a low power consumption state if the set duration of time elapses without the machine being used when the power is on. The POWER SAVE indicator lights up, however, the keys on the operation panel can be used. Normal operation automatically resumes when a key on the operation panel is pressed, an original is placed, a print job is received, or scanning is begun from a computer.		1 (1min) 2 (5min) 3 (30min) 4 (60min) 5 (120min) 6 (240min)
Auto power shut-off timer		This function automatically switches the machine to a state that consumes even less power than preheat mode if the set duration of time elapses without the machine being used when the power is on. All lights except the POWER SAVE indicator and ON LINE indicator go off. To resume normal operation, press the [START] key (①). Normal operation also resumes automatically when a print job is received or scanning is begun from a computer. While in auto power shut-off mode, no keys (except the [START] key (①)) can be used.		1 (5min) 2 (30min) 3 (60min) 4 (120min) 5 (240min)
Stream feeding mode*1		When copying using the SPF/RSPF, during the period of time that the SPF/RSPF indicator blinks after an original has been scanned (about 5 seconds), a subsequent original can be placed and automatically fed into the machine.		OFF 0 (OFF) 1 (ON)
Auto power shut-off setting	5	Use this setting to enable or disable auto power shut-off.	ON	0 (OFF) 1 (ON)
Border line for 2 IN 1 / 4 IN 1*2	6	When copying multiple originals onto a single sheet of paper (2 IN 1 / 4 IN 1 copy), this function can be used to print a solid or broken borderline around each original image.	OFF	1 (OFF) 2 (Solid line) 3 (Broken line)
Rotation copy*2	7	When the auto paper select function is enabled and there is no paper that is the same size as the original and loaded in the same orientation, this function will automatically select paper of the same size that is loaded in the opposite orientation, and rotate the image 90 degrees so that it is copied on the paper in the correct orientation.	ON	0 (OFF) 1 (ON)
		When the auto ratio select function is operating and the original and paper are loaded in opposite orientations, this function rotates the image so that it is copied on the paper in the correct orientation.		
Auto paper select mode*3	8	This function automatically selects paper that is the same size as the original placed in the SPF/RSPF, or the same size as that selected with the [ORIGINAL] key (only for sizes 5-1/2" x 8-1/2", 8-1/2" x 11", 8-1/2" x 11"R, 8-1/2" x 14" and 11" x 14"). The function can be disabled.	ON	0 (OFF) 1 (ON)
Auto tray switching*3	9	If the paper runs out during printing and there is paper of the same size and orientation in another tray, this function automatically switches to that tray (excluding the bypass tray). The function can be disabled.	ON	0 (OFF) 1 (ON)
Auditing mode	10	Use to enable or disable "Auditing mode". "Auditing mode" is initially disabled.	OFF	0(OFF) 1(ON)
Account number entry	11	Use to set up account numbers. Up to 20 accounts can be established.	-	None
Account number change	12	Use to change an account number.	-	None

*1 On models with a SPF/RSPF.

*2 Setting cannot be made for the AR-5516S/AR-5520S (models which are not provided with e-sort). Though set to ON, it is disabled.

*3 Valid only for the tray 1 of the AR-5516/AR-5520/AR-5516D/AR-5520D.

Program name	Program No	Description	Default	Parameters
Account number deletion	13	Use to delete an account number. A single account number can be deleted, or all account numbers at once.	Delete single account	0(Delete single account) 1(Delete all accounts)
Number of copies per account		This displays the number of copies made by each account. The maximum count is 49,999. If this number is exceeded, the count will start over from 0.		- None
Resetting account	15	Use to reset the copy count of an account to 0. The copy count of a single account or of all accounts can be reset.	Reset single account	0(Reset single account) 1(Reset all accounts)
Erase width adjustment*2	16	Use this setting to set the width of erasure of shadows that appear around the edges and at the binding margin when a book or similar original is copied.	1/2" (10mm)	1 (0" (0mm)) 2 (1/4" (5mm)) 3 (1/2" (10mm)) 4 (3/4" (15mm)) 5 (1" (20mm))
Layout in 2 IN 1 copy*2		Use this setting to select the layout pattern when two original pages are copied onto a single sheet of paper.		1 (Pattern 1) 2 (Pattern 2)
Layout in 4 IN 1 copy*2	17	Use this setting to select the layout pattern when four original pages are copied onto a single sheet of paper.	Pattern 1	1 (Pattern 1) 2 (Pattern 2) 3 (Pattern 3) 4 (Pattern 4)
Image rotation in duplex copying*3		Use this setting to select the layout pattern when four original pages are copied onto a single sheet of paper.		1 (Pattern 1) 2 (Pattern 2) 3 (Pattern 3) 4 (Pattern 4)
Location of the margin*2,*4	21	Use this setting to switch between the margin at the top edge and the margin at the left edge.	Left edge	1 (Left edge) 2 (Top edge)
Margin width*2	22	Use this setting to set the margin width.	1/2" (10mm)	1 (0" (0mm)) 2 (1/4" (5mm)) 3 (1/2" (10mm)) 4 (3/4" (15mm)) 5 (1" (20mm))
Resolution in Auto/Text mode		The copy resolution in auto and text mode is normally 300 dpi. If high-quality copies are preferred, use this setting to change the resolution to 600 dpi.		1 (300dpi) 2 (600dpi)
Memory allocated to printer mode*2	24	Use this to change the proportion of IMC memory used for printer mode.	50%	1 (30%) 2 (40%) 3 (50%) 4 (60%) 5 (70%)
Key auto repeat		Use this setting to select whether or not holding down a key causes repeated input of the key. For keys that normally cause a set value to increase when held down (for example, holding down the [ZOOM] key (⌚,⌚)), this program can be used to have the set value not change when the key is held down.		0 (OFF) 1 (ON)

*2 Setting cannot be made for the AR-5516S/AR-5520S (models which are not provided with e-sorts). Though set to ON, it is disabled.

*3 When there are two or more paper trays.

*4 On models with automatic two-sided copying.


Program name	Program No	Description	Default	Parameters
Key press time	26	Use this setting to select how long a key must be pressed for the input to be accepted. By selecting a longer time, you can prevent settings from being changed by the accidental pressing of a key.	Minimum (current response speed)	1 (Minimum (current response speed))
				2 (0.5sec)
				3 (1.0sec)
				4 (1.5sec)
				5 (2.0sec)
Audible signals volume	27	This sets the volume of beep signals.	Low (current volume)	1 (Low (current volume))
				2 (High)
				3 (OFF)
Base setting beep signal	28	Use this to sound a beep when a base setting is selected.	OFF	0 (OFF)
				1 (ON)
Number of copies limit	29	Use this setting to select 99 or 999 for the maximum number of copies.	999 copies	1 (99 copies)
				2 (999 copies)
Use close paper size	30	When this function is enabled, printing in printer mode will automatically continue using a different size of paper if the specified size of paper runs out in all trays. This feature does not function in copy mode.	OFF	0 (OFF)
				1 (ON)
Default tray setting	31	Use this program to select a default tray. This tray is automatically selected each time the power is turned on or each time the machine reverts to the initial settings.	Tray 1	1 (1st tray)
				2 (2nd tray)
				3 (3rd tray)
				4 (4th tray)
				5 (Bypass tray)
Default exposure mode	32	Use this program to set "AUTO", "TEXT", or "PHOTO" as the default exposure mode.	AUTO	1 (AUTO)
				2 (TEEXT)
				3 (PHOTO)
USB2.0 mode switch	33	Used to switch USB2.0 mode between Full-Speed and High-Speed.	High-Speed	1(Full-Speed)
				2(High-Speed)
Sort auto select*1	34	Use this setting to select the default output mode for copying from the SPF/RSPF.	Sort	1(OFF)
				2(Sort)
				3(Group)

*1 On models with a SPF/RSPF.

2. Setting the user programs

- 1) Hold down the [Light] key (□) until the alarm indicators (█, ▲, ▼, □, 8V) blink.


•The display shows " - " with the left hyphen blinking.

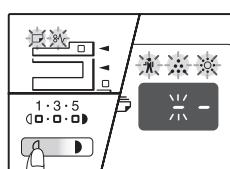

- 2) Enter the program number with the numeric keys.

•The selected program number blinks.

•For example, to select "Auto clear timer", press the [1] key.

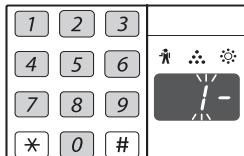


Note: If you enter the wrong number, press the [CLEAR] key (c) and then enter the correct number.

- 3) Press the [START] key (①).

•The selected program number stops blinking and lights steadily.


•The currently selected setting code blinks on the right side of the display.

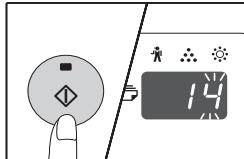

- 4) Enter the desired setting code by pressing a numeric key.

•The selected setting code blinks.


•For example, to select 90 seconds, press the [5] key.

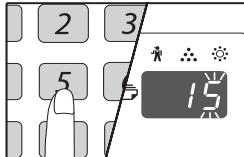

Note: If you enter the wrong number, press the [CLEAR] key (c) and return to step 2).

- 5) Press the [START] key (①).

•The selected setting code stops blinking and lights steadily.

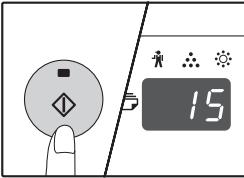

Note: To select a setting for another system setting, press the [CLEAR] key (c) and then return to step 2.

- 6) Press the [Light] key (□) to complete the settings.


•The alarm indicators (█, ▲, ▼, □, 8V) go off and the display returns to the number of copies display.

3. Toner cartridge life

The toner level is indicated by a 6-level display. Use it as a guideline for replacing the toner cartridge.


- 1) Hold down the [Light] key (□) until the alarm indicators (█, ▲, ▼, □, 8V) blink.

•The display will show " - ".

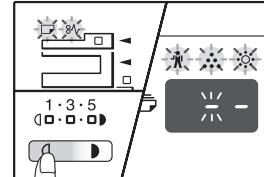

- 2) Hold down the [Copy ratio display] key (%) for more than 5 seconds.

•The approximate quantity of toner remaining will be indicated in the display as a percentage. ("100", "75", "50", "25", "10" is displayed.) When the percentage is less than 10%, "LO" will be displayed.

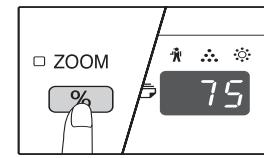

- 3) Press the [Light] key (□) to return to the normal display.

•The alarm indicators (█, ▲, ▼, □, 8V) go off. The display returns to the number of copies display.

[9]TROUBLE CODE LIST

1.Trouble code list

Main code	Sub code	Content
E7	01	Duplex model memory error/ Image data error
	02	LSU trouble
	06	Image data decode error
	10	Shading trouble (Black correction)
	11	Shading trouble (White correction)
	16	Abnormal laser output
F2	02	Toner supply abnormality
	04	Improper cartridge (destination error, life cycle error) Identification error Model error Type error Destination error Data abnormality Misc error
	40	ATC sensor abnormality
F5	02	Copy lamp lighting abnormality
H2	00	Thermistor open
H3	00	Heat roller high temperature detection
H4	00	Heat roller low temperature detection
H5	01	5 continuous POUT not-reached error
L1	00	Scanner feed trouble
L3	00	Scanner return trouble
L4	01	Main motor lock detection
	31	Fusing FAN lock detection
	32	PSFAN lock detection
L6	10	Polygon motor lock detection
U2	04	EEPROM read/write error (serial communication error)
	11	Counter check sum error (EEPROM)
	12	Adjustment value check sum error (EEPROM)
	40	CRUM chip communication error
--		Auditor NOT READY
CH ON	None	Side door open
CH Blink	None	Developing cartridge not installed

2.Details of trouble codes

Main code	Sub code		Details of trouble
E7	01	Content	Duplex model memory error/ Image data error
		Detail	1. The memory capacity for the duplex model machine is wrong. Insufficient memory capacity. 2. Duplex setting is set for a single surface model.
		Cause	1. The memory capacity on the MCU PWB is wrong. 2. Setting for a single surface model is wrong.
		Check and remedy	1. Use SIM26-39 to check to confirm that the memory capacity is 64MB. If it is not 64MB, replace the MCU PWB. 2. If SIM26-04 is set to 1, change the setting to 0. If it is 0, replace the MCU PWB.
	02	Content	LSU trouble
		Detail	The BD signal from the LSU cannot be detected in a certain cycle. (Always OFF or always ON)
		Cause	LSU connector or LSU harness defect or disconnection Polygon motor rotation abnormality Laser beams are not generated. MCU PWB abnormality.
		Check and remedy	Check connection of the LSU connector. Execute SIM 61-03 to check the LSU operations. Check that the polygon motor rotates normally. Check that the laser emitting diode generates laser beams. Replace the LSU unit. Replace the MCU PWB.
	06	Content	Image data decode error
		Detail	Image expansion error
		Cause	MCU PWB abnormality USB cable trouble
		Check and remedy	Replace the MCU PWB. Replace the USB cable.
10	Content	Shading trouble (Black correction)	
		Detail	The CCD black scan level is abnormal when the shading.
		Cause	Improper connection of the CCD unit flat cable CCD unit abnormality MCU PWB abnormality.
		Check and remedy	Check connection of the CCD unit flat cable. Check the CCD unit.
		Shading trouble (White correction)	
11	Content	Shading trouble (White correction)	
		Detail	The CCD white scan level is abnormal when the shading.
		Cause	Improper connection of the CCD unit flat cable Dirt on the mirror, the lens, and the reference white plate Copy lamp lighting abnormality CCD unit abnormality MCU PWB abnormality (When occurred in the SPF scan position.) Improper installation of the mirror unit
		Check and remedy	Clean the mirror, the lens, and the reference white plate. Check lighting and the light quantity of the copy lamp (SIM05-03). Check the CCD unit. Check the MCU PWB.

Main code	Sub code		Details of trouble
E7	16	Content	Abnormal laser output
		Detail	When the laser output is stopped, HSYNC is detected.
		Cause	Laser abnormality MCU PWB abnormality.
		Check and remedy	Replace the LSU. Replace the MCU PWB.
F2	02	Content	Toner supply abnormality
		Detail	When toner near end is detected with the toner supply time of 50% or less. When the toner supply time exceeds 300%.
		Cause	ATC sensor abnormality Improper supply
		Check and remedy	Replace the toner cartridge. Replace the developing unit.
F2	04	Content	<ul style="list-style-type: none"> •Improper cartridge (Destination error, life cycle error) •Identification error •Model error •Type error •Destination error •Data abnormality •Misc error
		Detail	<ul style="list-style-type: none"> •The destination of the machine differs from that of the CRUM. •The trade mark code of the CRUM differs. •The company code of the CRUM differs. •The boot program model code does not coincide with the CRUM model code. •When the CRUM type is other than genuine/conversion/production rotation. •The machine destination differs from the CRUM destination. •When an error value is included in the initial check information. •When the max. toner supply time is 00. •When the print hard stop is 00. •When the Misc information is other than "Not used (FFh)."
		Cause	CRUM chip defect Improper developing unit
		Check and remedy	Replace the toner cartridge. Replace the developing unit.
		Content	ATC sensor abnormality
		Detail	ATC sensor value abnormality
		Cause	Connector connection trouble Toner cartridge installation trouble Sensor breakdown
		Check and remedy	Connect the connector again. Install the toner cartridge again. Replace the toner cartridge with a normal one.

Main code	Sub code		Details of trouble
F5	02	Content	Copy lamp lighting abnormality
		Detail	The copy lamp does not turn on.
		Cause	Copy lamp abnormality Copy lamp harness abnormality CCD PWB harness abnormality.
		Check and remedy	<p>Use SIM 5-3 to check the copy lamp operations.</p> <p>When the copy lamp lights up.</p> <p>Check the harness and the connector between the CCD unit and the MCU PWB.</p> <p>When the copy lamp does not light up.</p> <p>Check the harness and the connector between the copy lamp unit and the MCU PWB.</p> <p>Replace the copy lamp unit.</p> <p>Replace the MCU PWB."</p>
H2	00	Content	Thermistor open
		Detail	The thermistor is open. The fusing unit is not installed.
		Cause	Thermistor abnormality Control PWB abnormality Fusing section connector disconnection The fusing unit is not installed.
		Check and remedy	<p>Check the harness and the connector between the thermistor and the PWB.</p> <p>Use SIM 14 to clear the self diagnostic display.</p>
H3	00	Content	Heat roller high temperature detection
		Detail	The fusing temperature exceeds 240°C.
		Cause	Thermistor abnormality Control PWB abnormality Fusing section connector disconnection.
		Check and remedy	<p>Use SIM 5-02 to check the heater lamp blinking operation.</p> <p>When the lamp blinks normally.</p> <p>Check the thermistor and its harness.</p> <p>Check the thermistor input circuit on the control PWB.</p> <p>When the lamp keeps ON.</p> <p>Check the power PWB and the lamp control circuit on the MCU PWB.</p> <p>Use SIM 14 to clear the self diagnostic display.</p>

Main code	Sub code		Details of trouble
H4	00	Content	Heat roller low temperature detection
		Detail	When the fusing temperature is 150°C or less in 55 sec from starting warming-up. When the warm-up complete temperature is not reached in 30 sec from reaching 150°C. When the fusing temperature is less than 100C° in 20 sec from the ready state. When the fusing temperature is less than 145C° for more than 300ms in the ready state or in printing. When the fusing temperature is less than 100C° for more than 300ms in the standby mode at a low temperature.
		Cause	Thermistor abnormality Heater lamp abnormality Thermostat abnormality Control PWB abnormality
		Check and remedy	Use SIM 5-02 to check the heater lamp blinking operation. When the lamp blinks normally. Check the thermistor and its harness. Check the thermistor input circuit on the control PWB. When the lamp does not light up. Check for disconnection of the heater lamp and the thermostat. Check the interlock switch. Check the power PWB and the lamp control circuit on the MCU PWB. Use SIM 14 to clear the self diagnostic display.
		Content	5 continuous POUT not-reached error
		Detail	When 5 continuous not-reached jams to the paper exit sensor (POUT) occur. The jam counter is backed up and it is used in a job after turning on the power.
		Cause	Jam paper is not removed from the fusing unit. (Jam paper remains.) Paper exit sensor breakdown or harness connection trouble Fusing unit installation trouble
		Check and remedy	Check for jam paper remaining in the fusing unit. (winding, etc.) Check the POUT sensor harness, and check installation of the fusing unit. Use SIM14 to clear the self diag display.
L1	00	Content	Scanner feed trouble
		Detail	Though the specified steps of motor pulses are outputted, the mirror home position sensor remains ON.
		Cause	Mirror unit abnormality The scanner wire is disconnected. The origin detection sensor abnormality Mirror motor harness abnormality
		Check and remedy	Use SIM 1-1 to check the mirror reciprocating operations. When the mirror does not feed. Check for disconnection of the scanner wire. Check the harness and the connector between the mirror motor and the MCU PWB. Replace the mirror unit. Replace the MCU PWB. When the mirror does feed. Use SIM 1-2 to check the mirror home position sensor.

Main code	Sub code		Details of trouble
L3	00	Content	Scanner return trouble
		Detail	Though the specified steps of motor pulses are outputted, the mirror home position sensor does not turn ON.
		Cause	Mirror unit abnormality Scanner wire disconnection Origin detection sensor abnormality Mirror motor harness abnormality
		Check and remedy	Use SIM 1-1 to check the mirror reciprocating operations. When the mirror does not return. Check for disconnection of the scanner wire. Check the harness and the connector between the mirror motor and the MCU PWB. Replace the mirror unit. Replace the MCU PWB. When the mirror does feed. Use SIM 1-2 to check the mirror home position sensor.
L4	01	Content	Main motor lock detection
		Detail	The main motor does not rotate. After rotation of the main motor, the motor lock signal is detected for 1 sec or more. During rotation of the main motor, the motor lock signal is detected for 1 sec. When the main motor is stopped, the motor lock signal is not detected for 5sec or more. (Though the motor is stationary, it is judged as stable rotation.)
		Cause	Main motor unit abnormality Improper connection or disconnection the main motor and the harness. MCU PWB abnormality
		Check and remedy	Use SIM 25-01 to check the main motor operations. Check connection of the main motor harness/connector. Replace the main motor. Replace the MCU PWB.
31		Content	Fusing fan lock detection
		Detail	The fusing fan does not rotate. Sampling is performed in 50msec interval, and the normal signal cannot be detected 5 times continuously in 1 sec.
		Cause	Fan trouble or harness contact trouble and disconnection
		Check and remedy	Use SIM05-02 to check the operations of the fusing fan motor. Check connection of the fan harness and the connector. Replace the fan. Replace the MCU PWB.
		Content	PSFAN lock detection
32		Detail	The PSFAN does not rotate. Sampling is performed in 50msec interval, and the normal signal cannot be detected 5 times continuously in 1 sec.
		Cause	Fan trouble or harness contact trouble and disconnection
		Check and remedy	Check connection of the fan harness and the connector. Replace the fan. Replace the MCU PWB.

Main code	Sub code		Details of trouble	Main code	Sub code		Details of trouble
L6	10	Content	Polygon motor lock detection	CH Blink	None	Content	Developing cartridge not installed
		Detail	The polygon motor does not rotate. After shifting the polygon motor, the motor lock signal is detected for 20sec or more. During rotation of the polygon motor, the motor lock signal is detected for 1sec.			Detail	The developing cartridge is not installed. Communication with the CRUM cannot be made in initial check of the CRUM.
		Cause	Polygon motor unit abnormality Improper connection or disconnection of the polygon motor and the harness. MCU PWB abnormality		Cause		Developing unit disconnection MCU PWB abnormality CRUM chip abnormality
		Check and remedy	Use SIM 61-3 to check the polygon motor operations. Check connection of the polygon motor harness/connector. Replace the polygon motor.. Replace the MCU PWB.		Check and remedy		Check installation of the developing unit. Replace the MCU PWB.
		Content	EEPROM read/write error (Serial communication error)				
U2	04	Detail	EEPROM access process error				
		Cause	EEPROM abnormality				
		Check and remedy	Check that the EEPROM is properly set. Use SIM 16 to cancel the trouble. Replace the MCU PWB.				
	11	Content	Counter check sum error (EEPROM)				
		Detail	Check sum error of the counter area in the EEPROM				
		Cause	EEPROM abnormality				
		Check and remedy	Check that the EEPROM is properly set. Use SIM 16 to cancel the trouble. Replace the MCU PWB.				
	12	Content	Adjustment value check sum error (EEPROM)				
		Detail	Check sum error of the adjustment value area in the EEPROM				
		Cause	EEPROM abnormality				
		Check and remedy	Check that the EEPROM is properly set. Use SIM 16 to cancel the trouble. Replace the MCU PWB.				
		Content	CRUM chip communication error				
--		Detail	An error occurs during communication between the MCU and the CRUM chip. The CRUM identification error occurs.				
		Cause	CRUM chip abnormality Developing unit disconnection MCU PWB abnormality				
		Check and remedy	Replace the toner cartridge. Check installation of the developing unit. Use SIM16 to cancel. Replace the MCU PWB.				
		Content	Auditor NOT READY				
		Detail					
CH ON	None	Cause					
		Check and remedy					
		Content	Side door open				
		Detail	The side door is open.				
		Cause	Side door sensor abnormality MCU PWB abnormality				
		Check and remedy	Check that all the side doors are closed. Replace the MCU PWB.				

[10] MAINTENANCE

1. Maintenance table

X:Check(Clean, adjust, or replace when required.) O:Clean ▲:Replace △:Adjust ☆ :Lubricate

Unit name	Part name		When calling	50K	100K	150K	Remark
Drum peripheral	OPC drum		-	▲	▲	▲	
	Cleaning blade		-	▲	▲	▲	
	Side seal F/R		X	X	X	X	
	MC unit		X	▲	▲	▲	
	(MC charging electrode)		-	(▲)	(▲)	(▲)	
	(MC grid)		-	(▲)	(▲)	(▲)	
	(MC case)		-	(▲)	(▲)	(▲)	
	Transfer wire		O	O	O	O	
	Transfer paper guide		O	O	O	O	
	MC guide sheet (Cleaning blade attached)		-	▲	▲	▲	
	Drum fixing plate B		X	▲	▲	▲	
	Separation pawl		X	▲	▲	▲	
	Star ring N2						
	Star ring φ 5						
	Pawl holder						
Developing section	Process frame unit		X	X	X	▲	
	Discharge holder		O	O	O	O	
	Developer		X	▲	▲	▲	
	DV seal		X	X	X	▲	
Optical section	Toner temperature sensor		X	X	X	X	Check the sensor head surface.
	DV side sheet		X	X	X	X	
	Lamp unit	Reflector	O	O	O	O	
		Mirror	-	O	O	O	
	No.2/3 mirror unit	Mirror	-	O	O	O	
LSU	Pulley		-	X	X	X	
	CCD peripheral	Lens	-	O	O	O	
	Glass	Table glass	O	O	O	O	
		White Plate	O	O	O	O	
	Other	Drive wire	-	X	X	X	
		Rail	-	X☆	X☆	X☆	
		Document cover	O	O	O	O	
	Dust-proof glass		O	O	O	O	
Paper feed section	Multi paper feed section	Take-up roller(manual / SPF)	O	O	O	O	
		Paper feed roller	O	O	O	▲	
		Spring clutch	-	O☆	O☆	O☆	
Paper transport section	PS roller		O	O	O	O	
	Transport (paper exit) rollers		O	O	O	O	
	Spring clutch		O☆	O☆	O☆	O☆	
Fusing section	Upper heat roller		X	O	O	▲	
	Pressure roller		X	O	O	O	
	Pressure roller bearing		-	X	X	O☆	
	Upper separation pawl		X	X	X	O	
	Lower separation pawl		X	X	X	O	
Drive section	Cleaning pad		X	X	X	▲	
	Gears		-	X☆	X☆	X☆	
Paper exit section	Belts		-	X	X	O	
	VOC filter		-	▲	▲	▲	*1

*1:Recommendable replacement time:50K(A4/Letter,6%print)

2. Maintenance display system


Toner	Life,	16K	
	Remaining quantity check *1	a. Press and hold the [Light] keys ([Light and Dark] keys) for more than 5 sec, and the machine will enter the user program mode. b. Press and hold the [%] key for more than 5 sec, and the remaining quantity will be displayed on the copy quantity display in one of the following levels: (Remaining quantity display levels: 100%, 75%, 50%, 25%, 10%, LO) c. Press the [Light] keys ([Light and Dark] keys) to cancel.	
	Remaining quantity	NEAR EMPTY About 10%	EMPTY
	LED	ON	Flash
	Machine	Operation allowed	Stop
Developer	Life	50K	
	LED	ON at 50K of the developer count	
	Machine	Selection is available between Not Stop and Stop by Service Simulation (SIM 26-37) Setup. (If Stop is selected, the LED will flash and stop at 50K.) * Default: Not Stop * Clear: SIM 42-1	
Maintenance	LED	Selection is available among 50K, 25K, 10K, 7.5K, 5K, and free (no lighting) with SIM 21-1. * Default: 50K * Clear: SIM 20-1	
	Machine	Not stop	

*1: Installation of a new toner cartridge allows to display the remaining quantity.

3. Note for replacement of consumable parts


A. Toner cartridge

When a waste toner cartridge is removed from the machine, it must be put in a polyethylene bag to avoid scattering of toner.

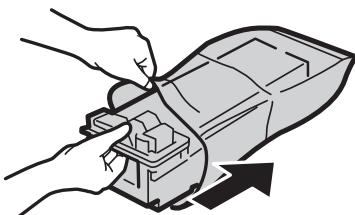


B. DV cartridge


Do not shake or put up the developer cartridge. Otherwise developer may scatter.

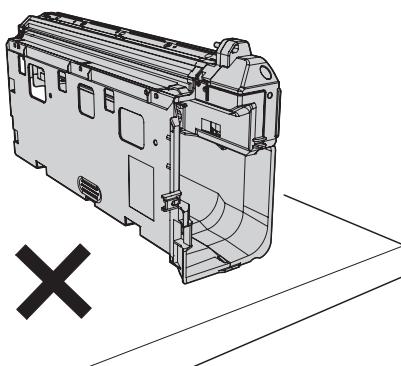


C. DV seal attachment procedure

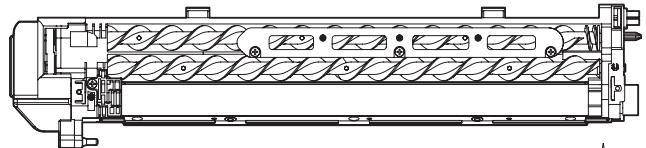

(When viewed from the front)

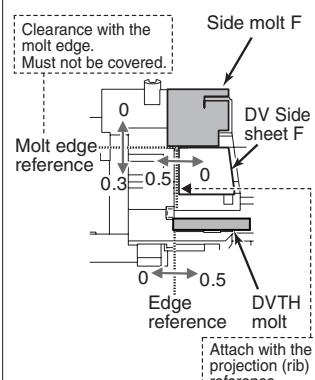

(When viewed from the front)

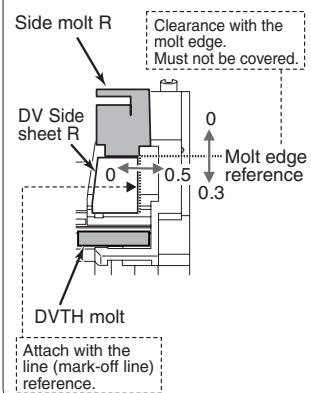

[11]DISASSEMBLY AND ASSEMBLY



WARNING Before performing the disassembly procedure, be sure to remove the power cord to prevent against an electric shock.

No.	Item
1	High voltage section/Duplex transport section
2	Optical section
3	Fusing section
4	Paper exit section
5	MCU
6	Optical frame unit
7	LSU
8	Tray paper feed section/Paper transport section
9	Bypass tray section
10	Power section
11	Developing section
12	Process section
13	Others

1. High voltage section/Duplex transport section

No.	Content
A	Transfer charger unit
B	Charger wire
C	Duplex transport section


A.Transfer charger unit

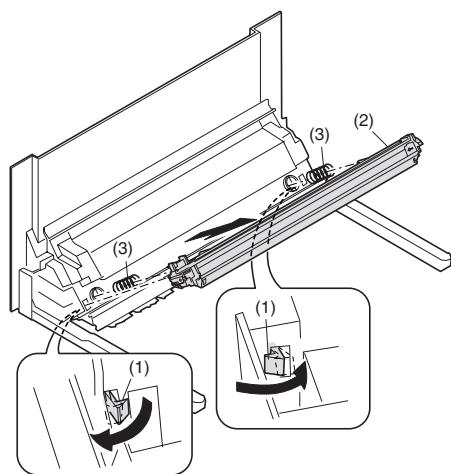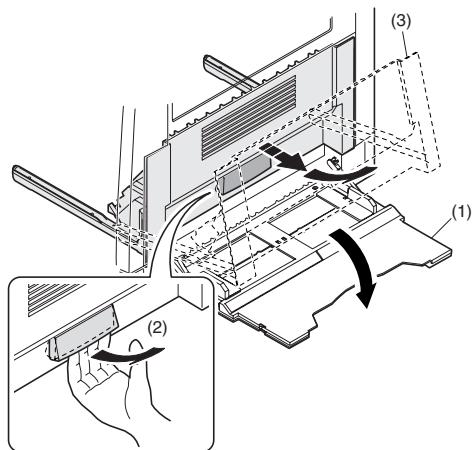



B.Charger wire

Installation: The spring tip must be between two reference ribs.

- The charger wire must be free from twist or bending.
- Be sure to put the charger wire in the V groove.

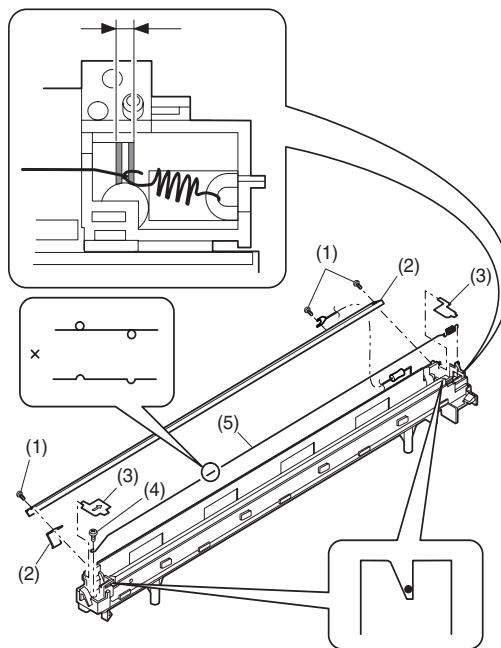

C.Duplex transport section

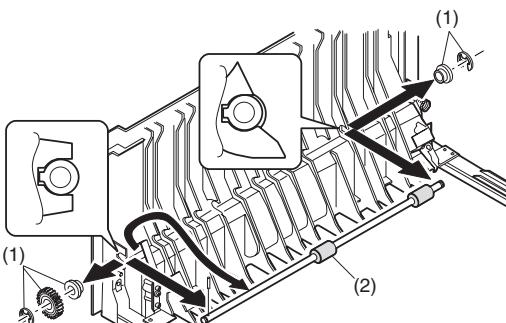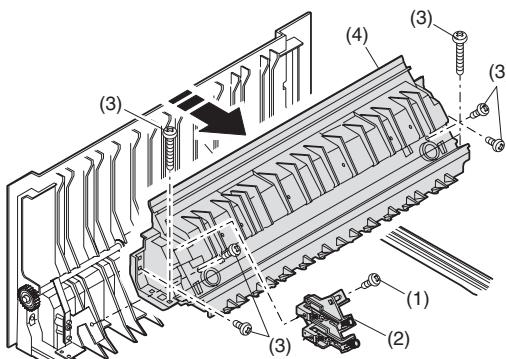


2.Optical section


Note: When disassembling or assembling the optical unit, be careful not to touch the mirror and the reflector.

No.	Content
A	Table glass
B	Copy lamp unit
C	Inverter PWB for copy lamp
D	Copy lamp
E	Lens unit
F	Wire

C.Inverter PWB for copy lamp

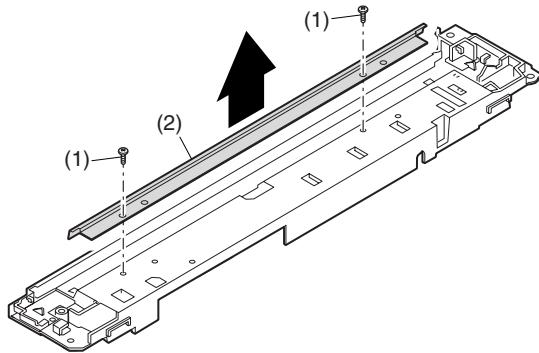

A.Table glass


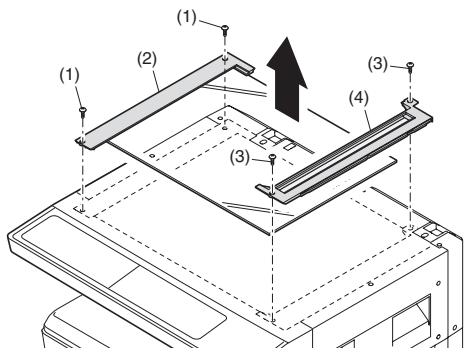


B.Copy lamp unit


Disassembly: Be sure to put No. 2/3 mirror unit to the positioning plate (A).

Assembly: Put the notched surface of wire holder (3) downward, tighten temporarily, and install.

Adjustment: Main scanning direction distortion balance adjustment

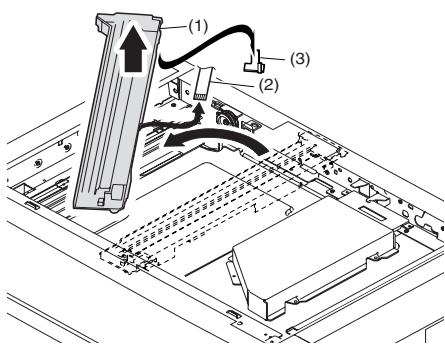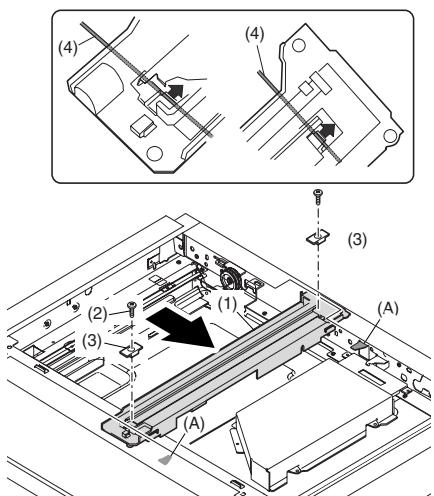

D.Copy lamp

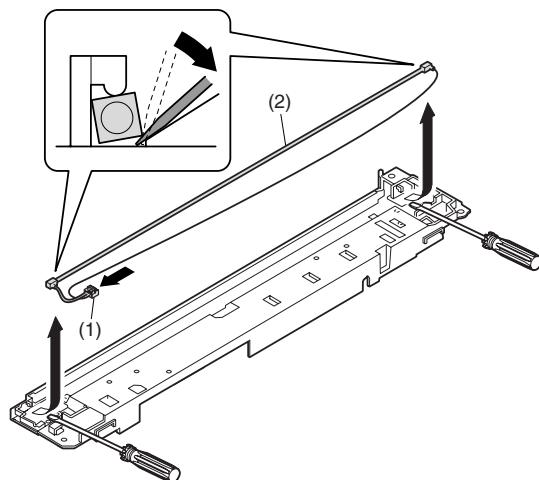


E.Lens unit

Note: Do not remove screws which are not indicated in the figure. If the height of the base plate is changed, it cannot be adjusted in the market.

Note: The CCD/lens unit is factory-adjusted before shipping.


Since these adjustments cannot be performed in the market.

Never touch the screws other than screw 2) of the CCD/lens unit.

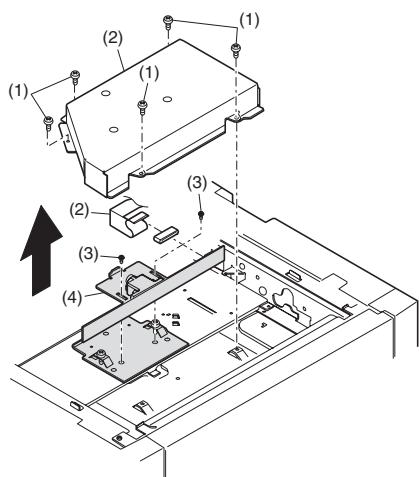

Lens unit attachment

<1> Attach the lens unit so that the lens unit number on the lens adjustment plate is aligned with the scribe line on the base plate.

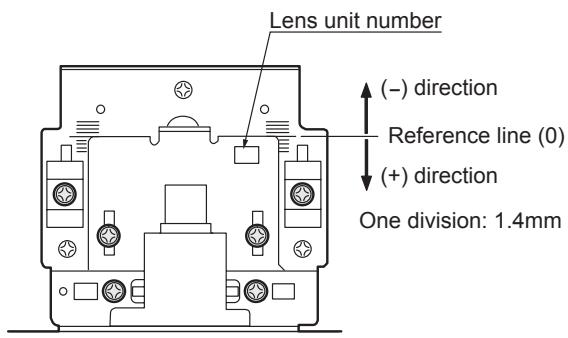

	CCD adjustment value
+4 scales	5.0~
+3 scales	3.6~4.9
+2 scales	2.2~3.5
+1 scale	0.8~2.1
Reference	-0.6~0.7
-1 scale	-2.0~ -0.7
-2 scales	-3.4~ -2.1
-3 scales	-4.8~ -3.5
-4 scales	~-4.9

<2> Make a sample copy at the above position, and measure the magnification ratio.

<3> Change the installing position in the horizontal direction to adjust the magnification ratio.



- When the copy image is longer than the original, shift to the positive (+) direction.

- When the copy image is shorter than the original, shift to the negative (-) direction.

- * 1 scale of the scribed line corresponds to 0.34% of magnification ratio.

- * If this adjustment is not satisfactory, make a fine adjustment with SIM 48-2.


F.Wire

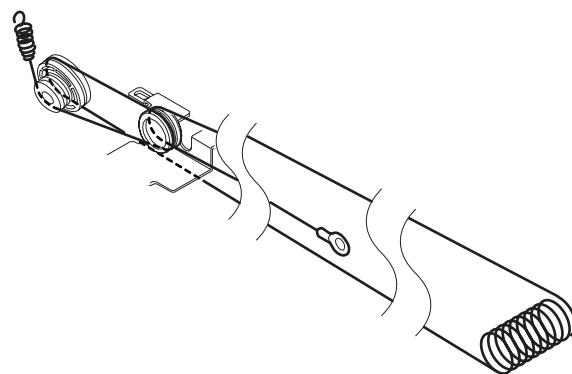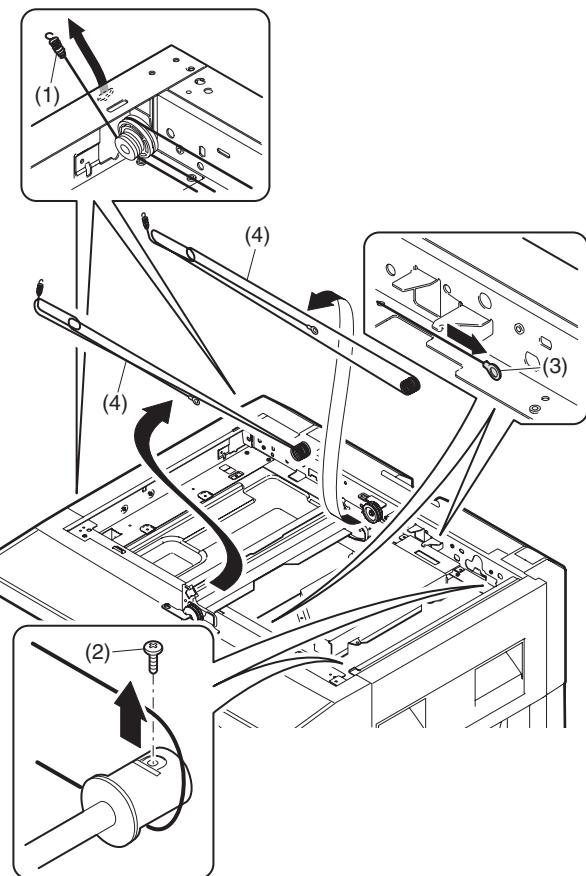


3.Fusing section

No.	Contents
A	Fusing unit
B	Thermostat
C	Thermistor
D	Heater lamp
E	Upper heat roller
F	Separation pawl
G	Lower heat roller
H	Separation pawl

A.Fusing unit removal

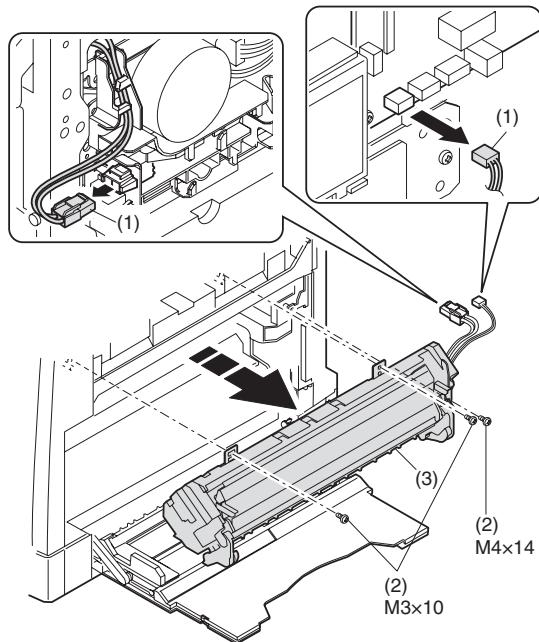


B.Thermostat

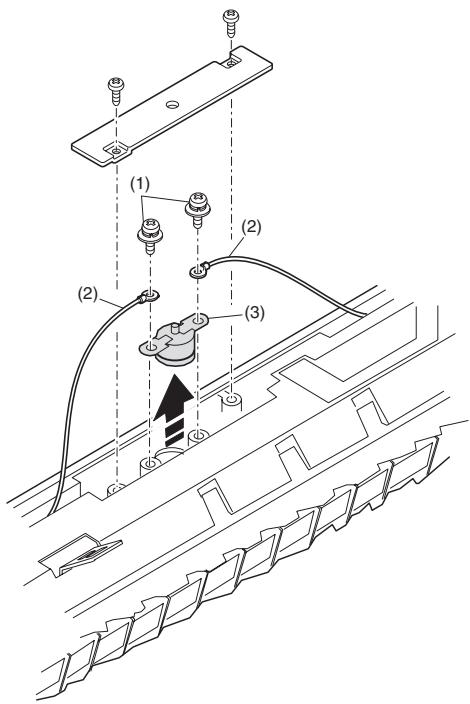


C.Thermistor

Installation: When installing the thermistor, be sure to face the installing projection (A) toward the installing surface. Check that the thermistor is in contact with the upper heat roller.

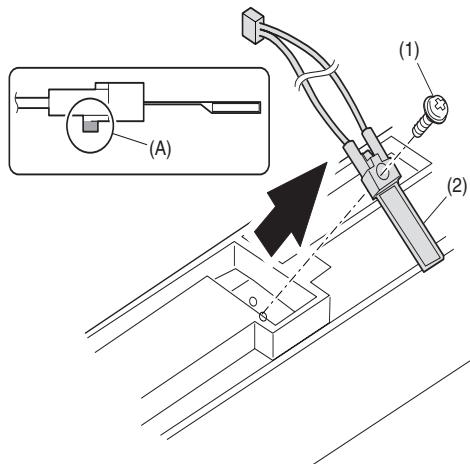




D.Heater lamp

Assembly: Insert the spring (A) into the hole (B) in the fusing frame.

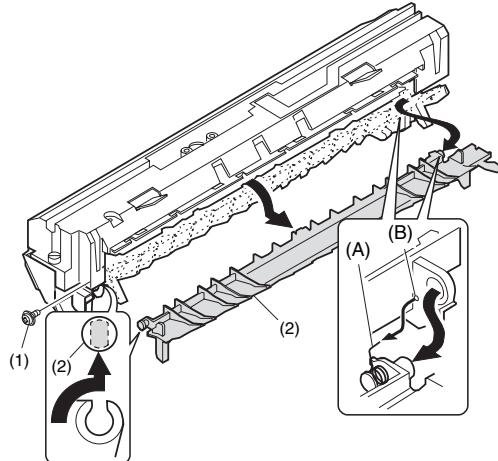

Assembly: Put the paper guide earth spring (A) under the paper guide (B) before fusing.



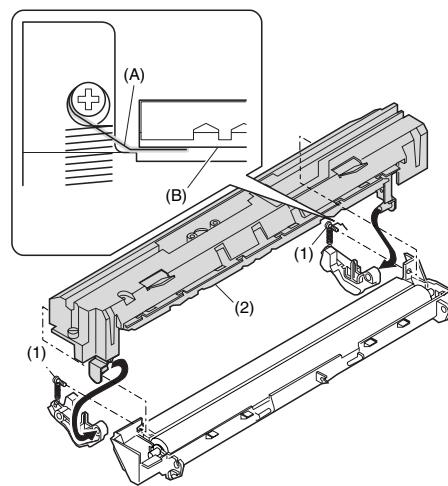


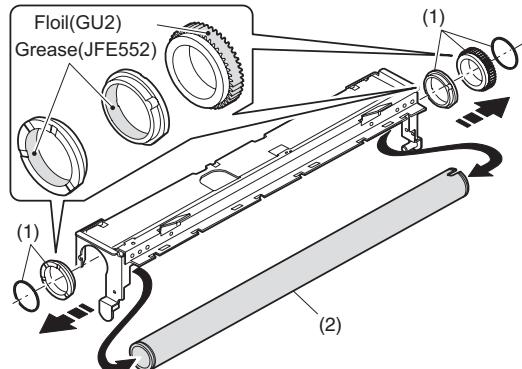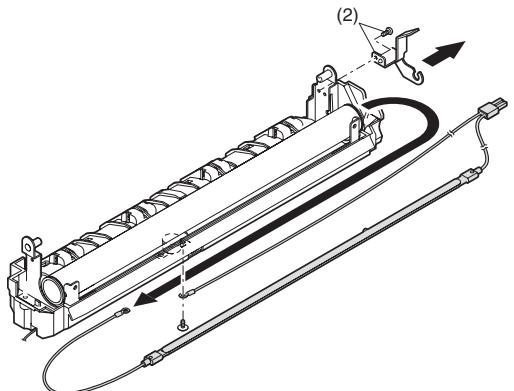

Assembly: Put the fusing harness (A) on the heater lamp (B) as shown in the figure and fix them together.<R>Place the fusing harness inside the rib (C).


E.Upper heat roller

Disassembly: There are three pawls on the fusing cover. Remove the screws and slide the fusing cover to the right to remove. The heater lamp is fixed on the fusing cover with a screw. Slide the fusing cover to the front and remove the screw, then remove the heater lamp.

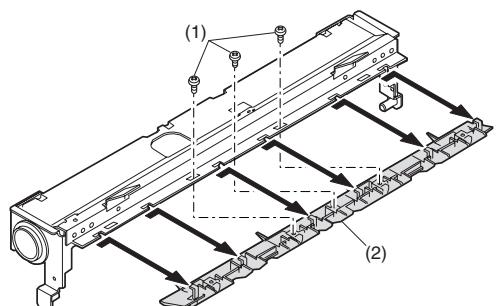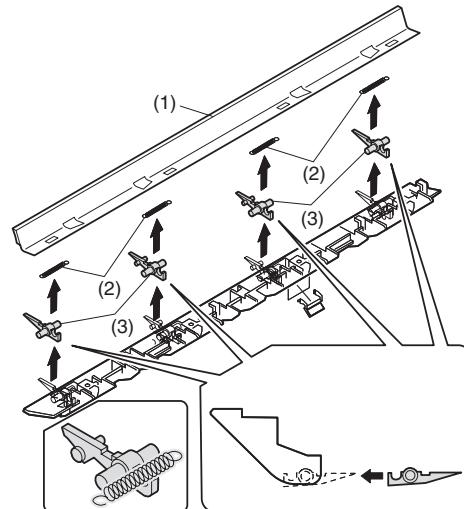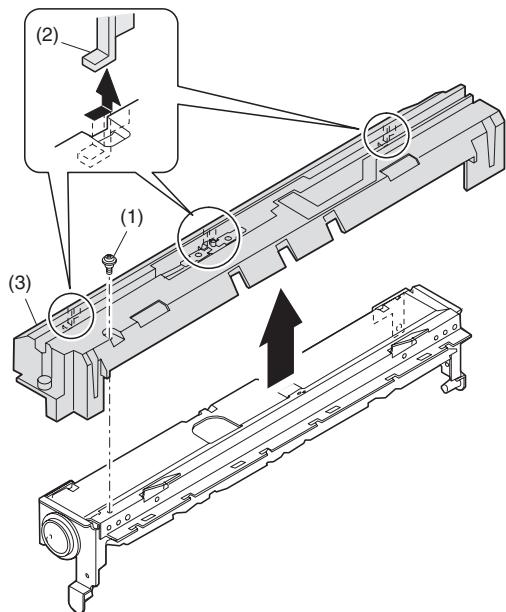


G.Lower heat roller

Assembly: When installing the paper guide (3) before fusing, fix the paper guide fixing plate with screws temporarily so that the paper guide fixing plate (2) is in contact with the frame bottom under fusing (A). Set the paper guide (3) before fusing to the bottom line of the positioning reference (B), and tighten the screw firmly.

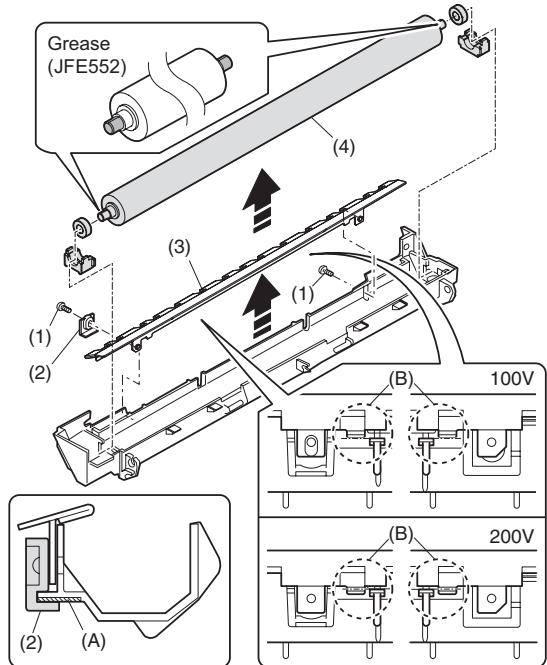



H.Separation pawl

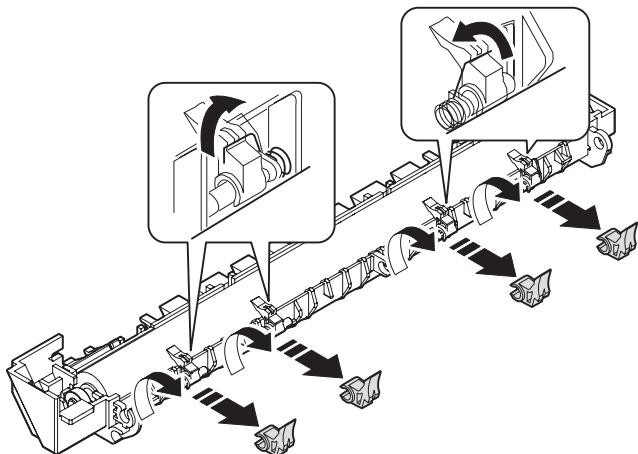


4.Paper exit section

No.	Content
A	Ozone filter
B	Cooling fan
C	Paper exit unit
D	Paper exit sensor / duplex sensor
E	Transport roller
F	Paper exit roller
G	Paper exit interface P.W.B.


A.Ozone filter

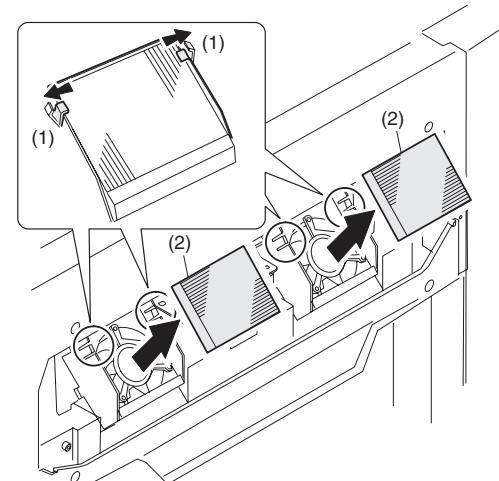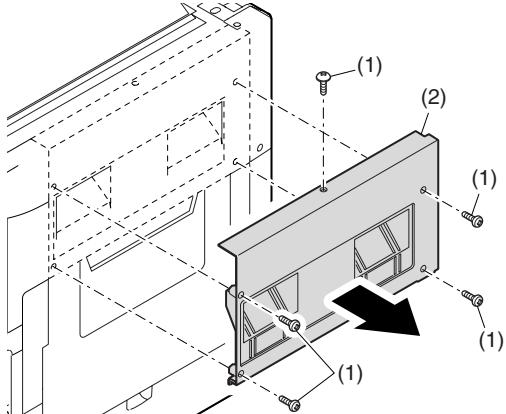

B.Cooling fan


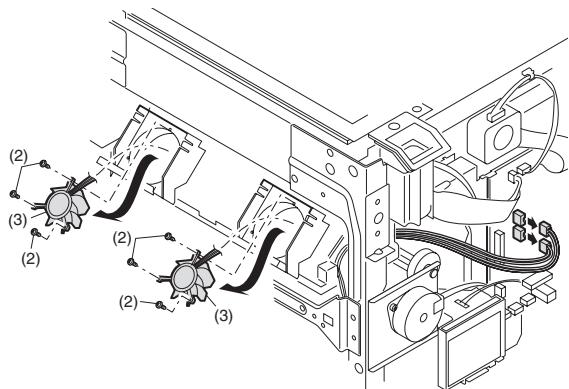


C.Paper exit unit



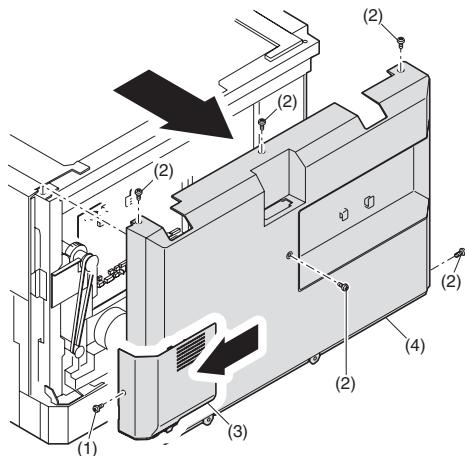


D.Paper exit sensor / duplex sensor

- (A)Exit sensor
(B)Duplex sensor

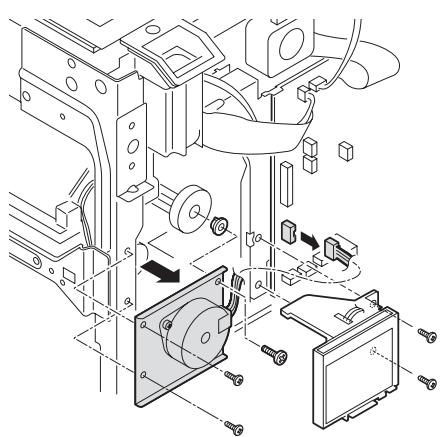
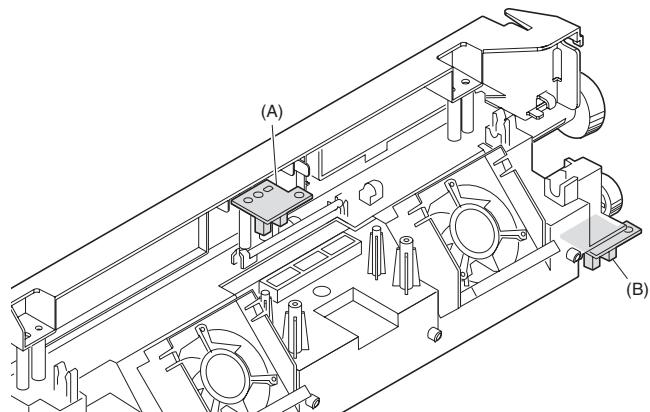


E.Transport roller

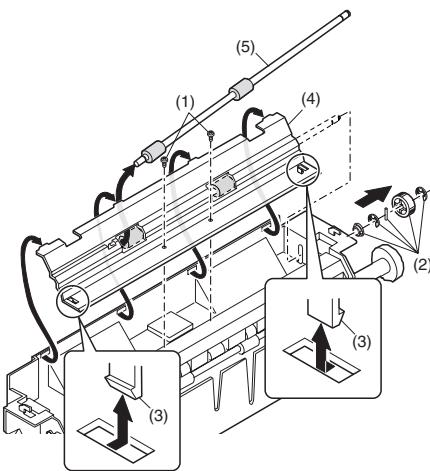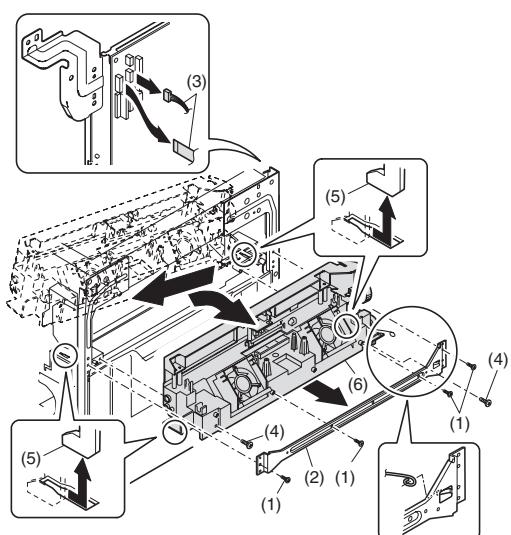
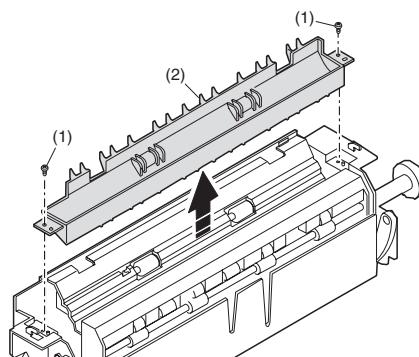


F.Paper exit roller

Assembly: Insert the spring pin so that the waveform (A) of the spring pin faces in the longitudinal direction of the paper exit drive gear long hole (B).<R>Be sure to insert two ribs (C) into the groove (D).

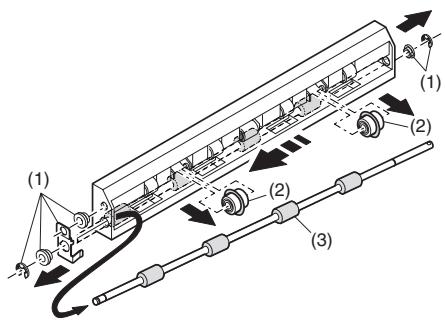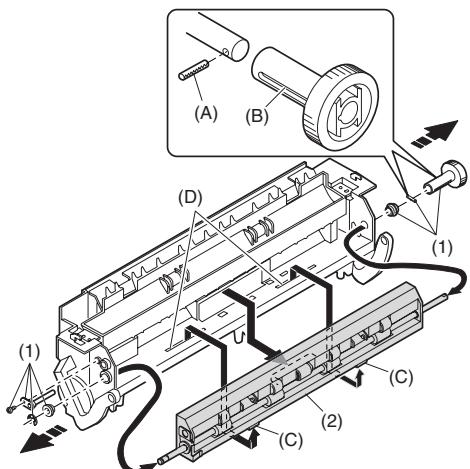

G.Paper exit interface P.W.B.

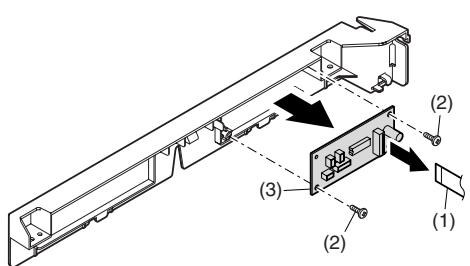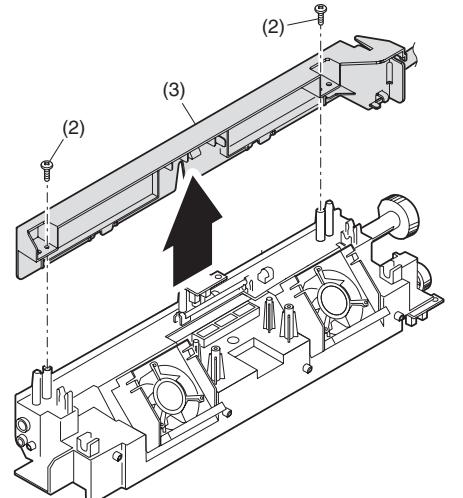


5.MCU

No.	Content
A	MCU disassembly

A.MCU disassembly

Note: When replacing the MCU PWB, be sure to replace the EEPROM of the MCU PWB to be replaced.

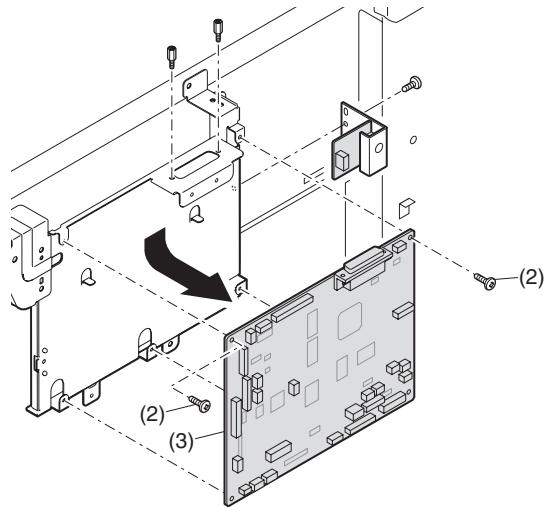


Note: When replacing the MCU PWB, be sure to restore the original jumper conditions.

6.Optical frame unit

No.	Content
A	Optical frame unit

A.Optical frame unit


Installation: Install the optical unit in the sequence shown above.

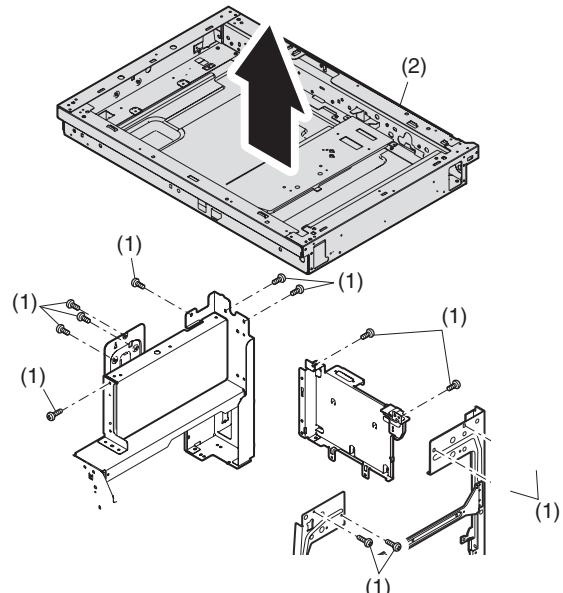

7. LSU

No.	Content
A	LSU unit

A. LSU unit

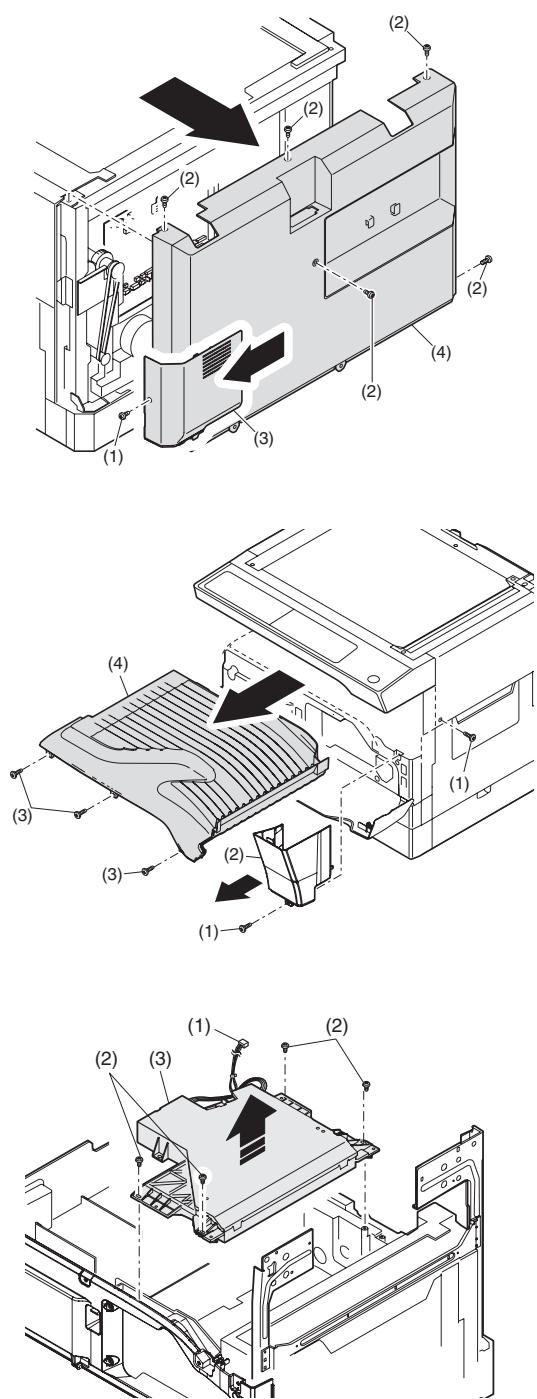

Note: Do not disassemble the LSU.

Note: When replacing the LSU, be careful not to touch the dust-shield glass.


Adjustment:

- Image lead edge position adjustment
- Image left edge position adjustment
- Paper off-center adjustment


8. Tray paper feed section/Paper transport section

No.	Content
A	Middle frame unit
B	Drive unit
C	Solenoid (paper feed solenoid,, resist roller solenoid)
D	Resist roller clutch / Resist roller
E	Paper feed clutch/Paper feed roller (Semi-circular roller)

A. Middle frame unit

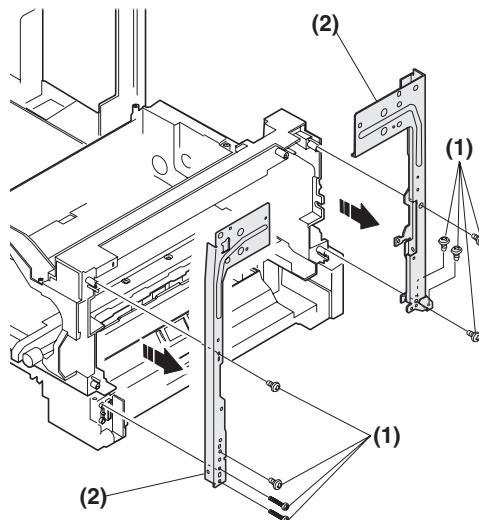


Assembly: Do not miss the door lock pawl.

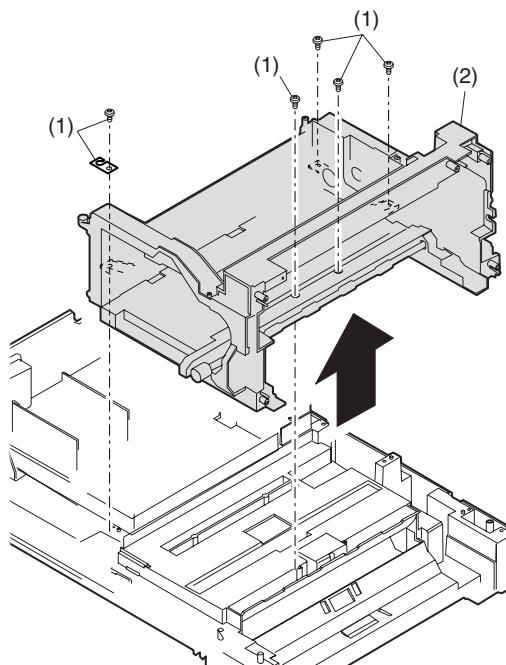


B. Drive unit



Assembly: Move down the clutch pawl as shown below, and avoid the clutch and install.

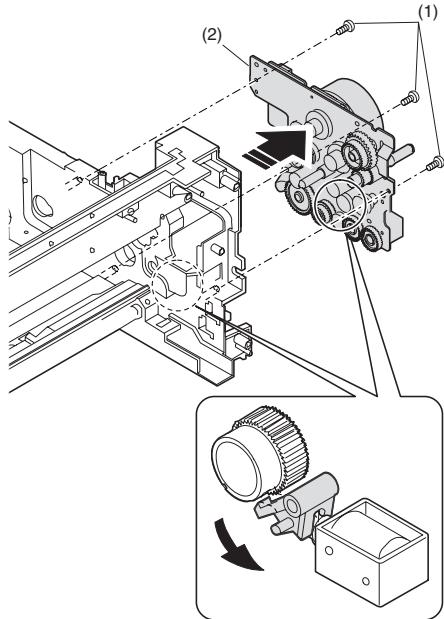

D. Resist roller clutch/Resist roller

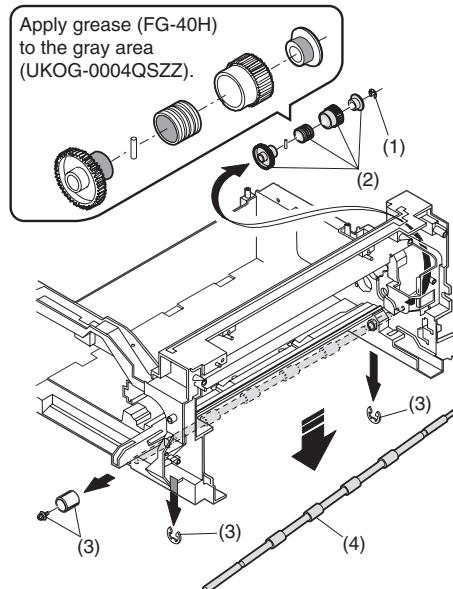


E. Paper feed clutch/Paper feed roller (Semi-circular roller)

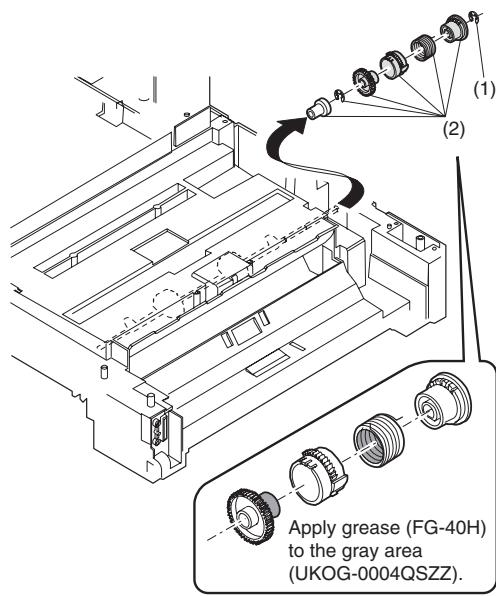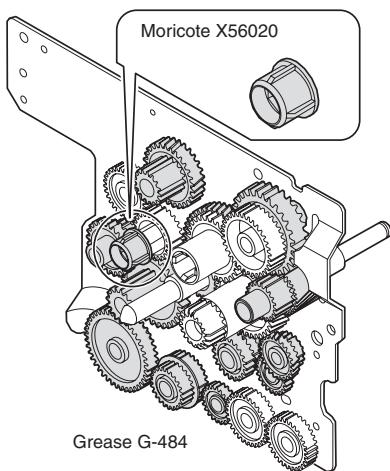

C. Solenoid

(paper feed solenoid, resist roller solenoid)



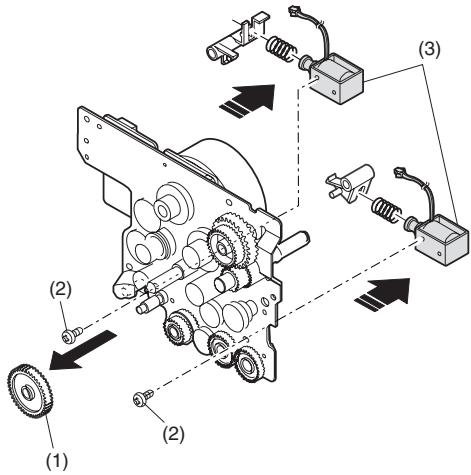


9.Bypass tray section


No.	Content
A	Bypass tray transport roller/Bypass tray paper feed roller
B	Bypass tray paper feed
C	Bypass tray solenoid
D	Bypass tray transport clutch
E	Pressure plate unit
F	Bypass tray paper feed clutch

A. Bypass tray transport roller/Bypass tray paper feed roller


Note: Push the lever at the right edge of the multi frame cover to the right upper side and remove it.

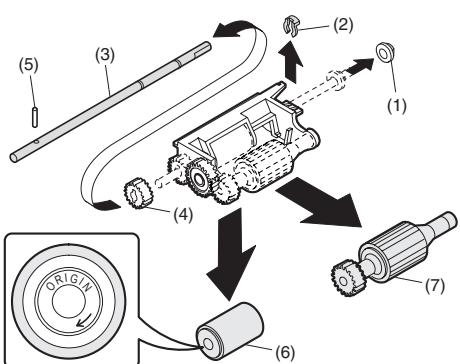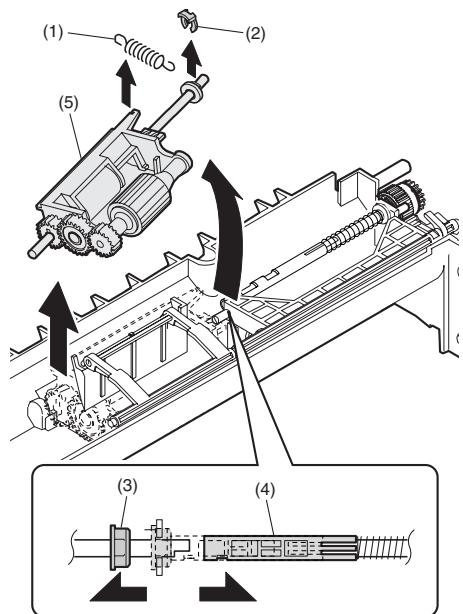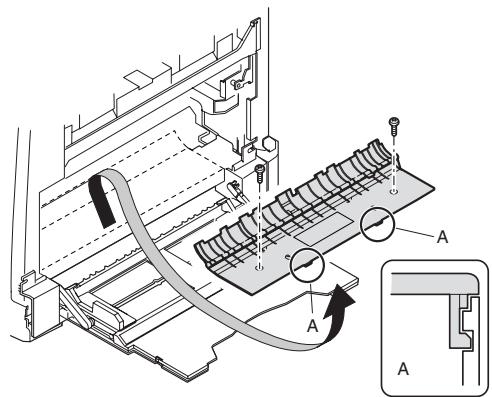

B. Bypass tray paper feed

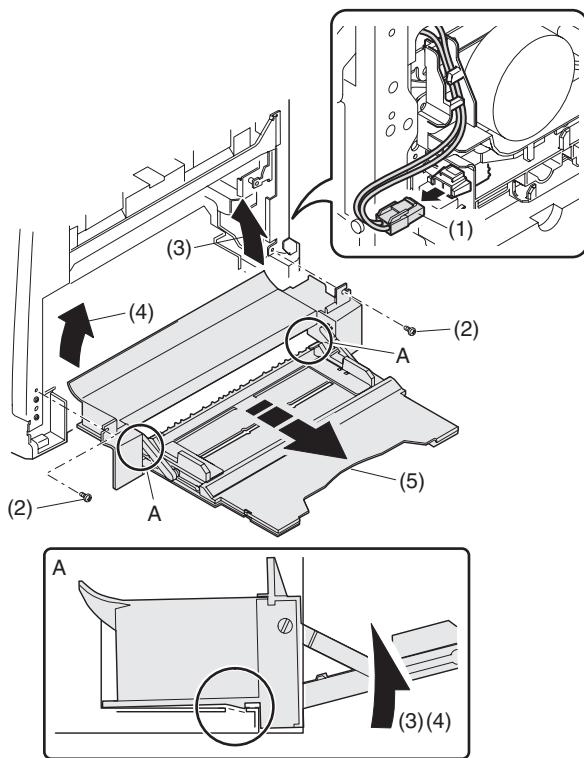


C. Bypass tray solenoid

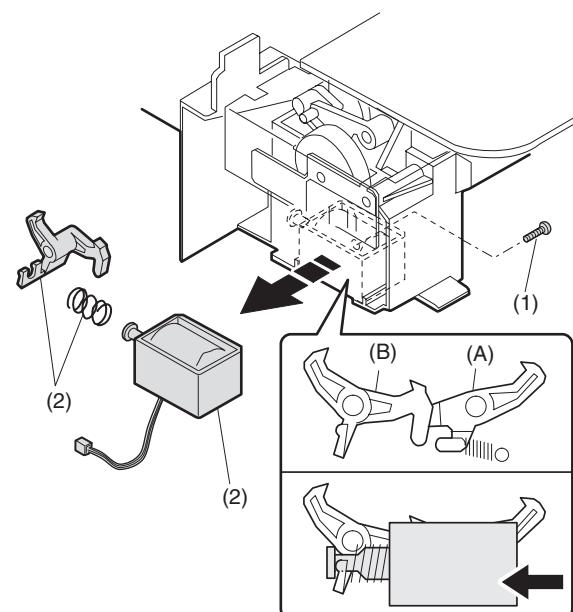

When installing the solenoid, shift it in the arrow direction and install.


Installation: Be careful of the installing direction of the bypass tray transport roller (6)

D. Bypass tray transport clutch

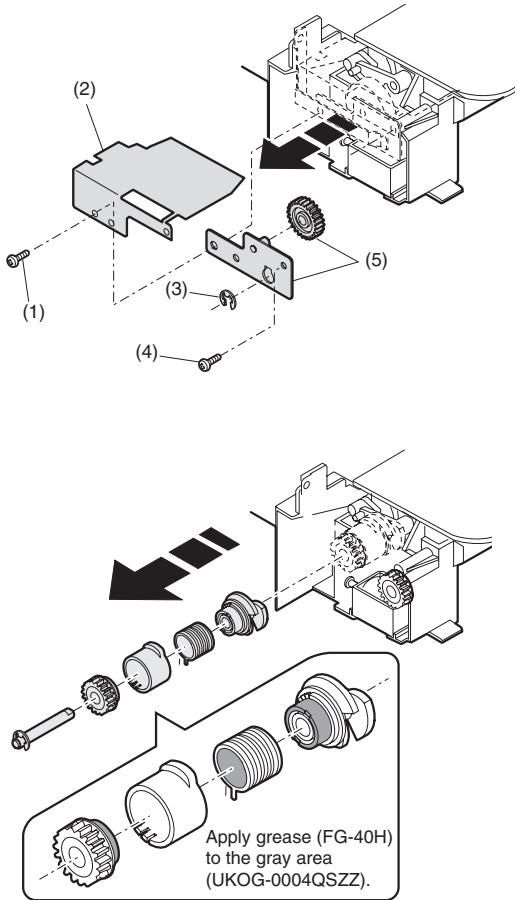



Apply grease (FG-40H) (UKOG-0004QSZZ).

E. Pressure plate unit

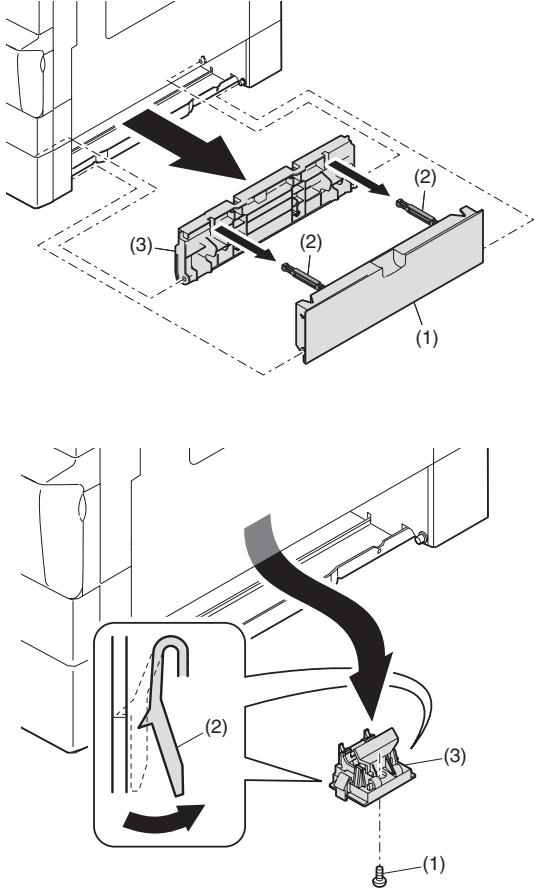

F. Bypass tray paper feed clutch


Note: Push the lever at the right edge of the multi frame cover to the right upper side and remove it.

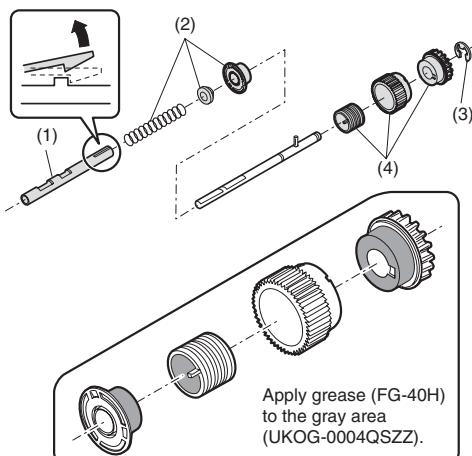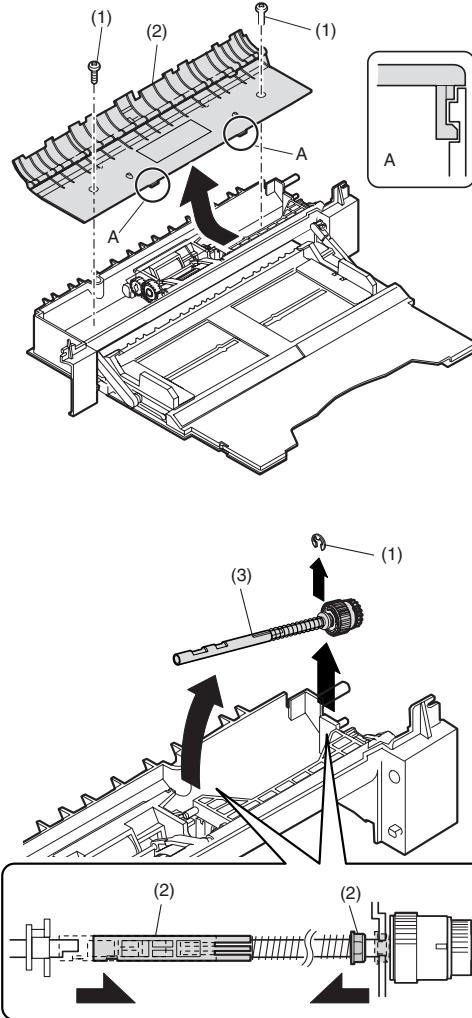


10.Power section

No.	Content
A	Power unit
B	Power fan
C	High voltage P.W.B.
D	Power P.W.B.
E	Power switch


A. Power unit

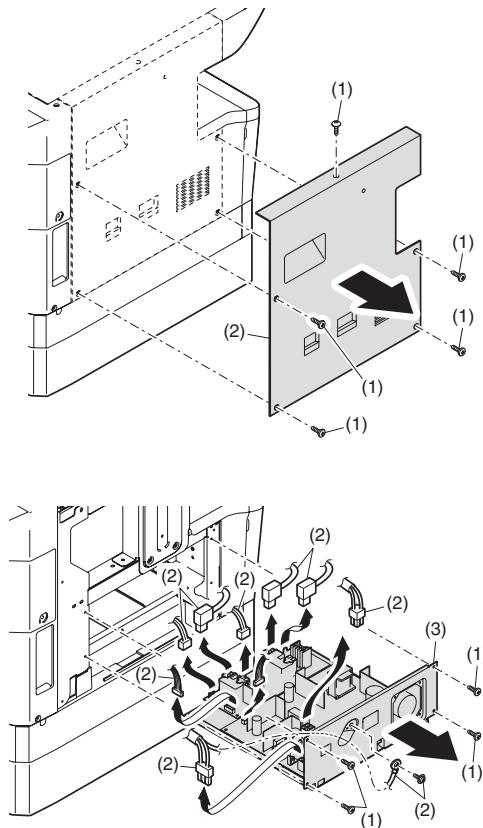


B. Power fan

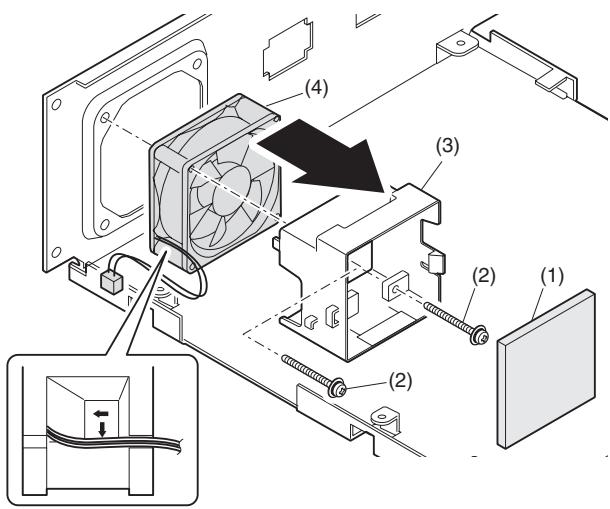


C. High voltage P.W.B.

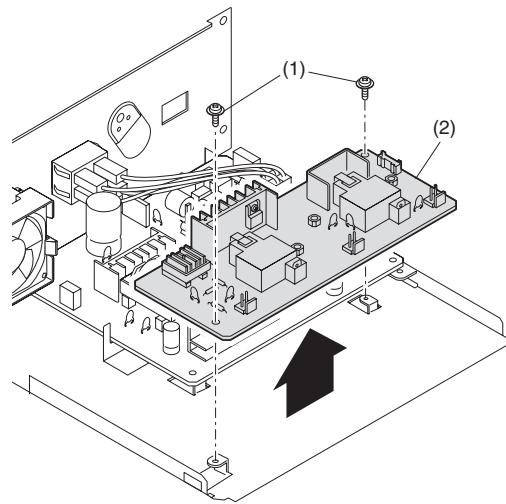

D. Power P.W.B.

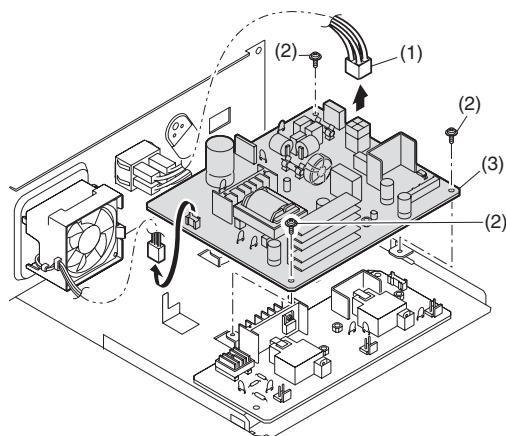

E. Power switch

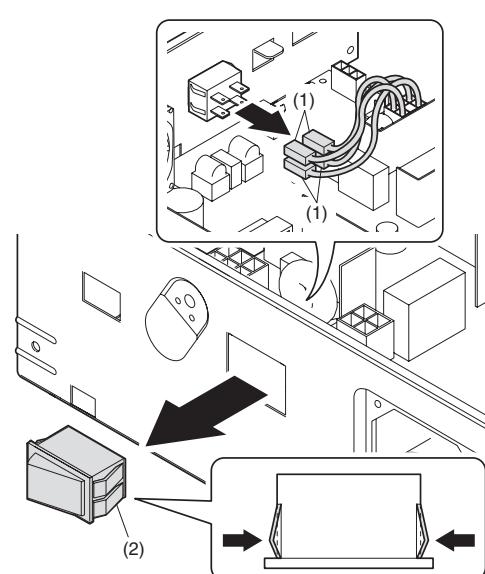


11.Developing section


C.MG roller

No.	Contents
A	Developing box
B	Developing doctor
C	MG roller



A.Developing box

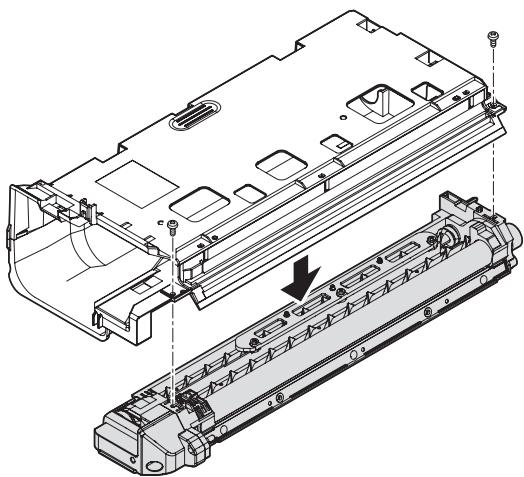

B.Developing doctor

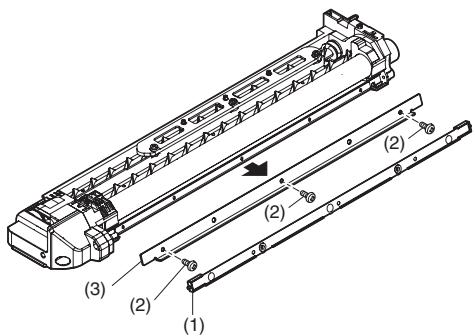


Adjustment: Developing doctor gap adjustment

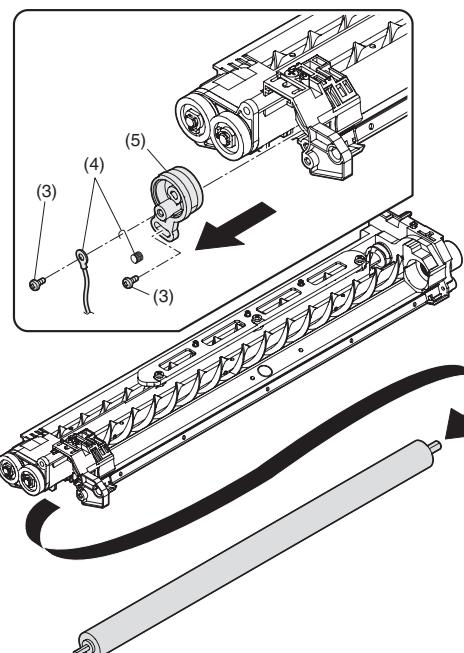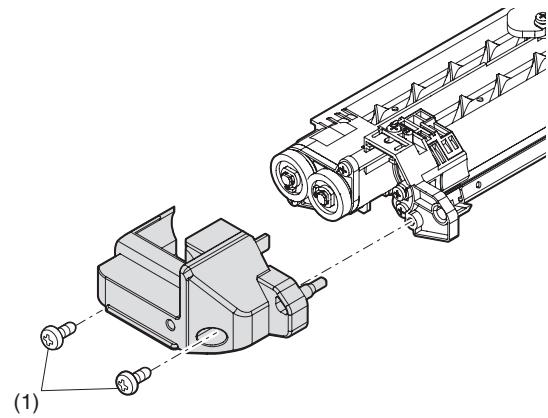

Adjustment: MG roller main pole position adjustment

Note: Attach it to fit with the attachment reference when replacing the DV blade.

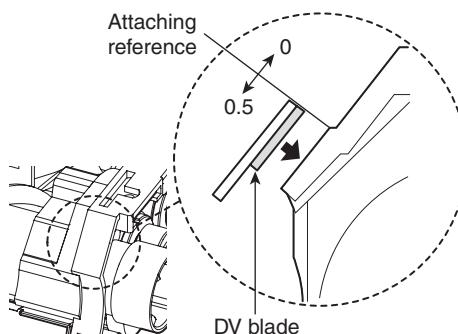


12.Process section

No.	Contents
A	Drum unit
B	Main charger unit
C	Cleaning blade


A.Drum unit

When removing the drum, put the drum unit upside down to prevent waste toner from spilling.

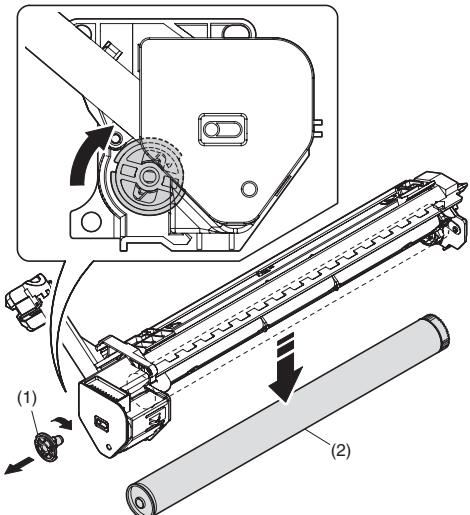


When the drum is replaced, be sure to replace the drum positioning boss with a new one, too.

B. Main charger unit

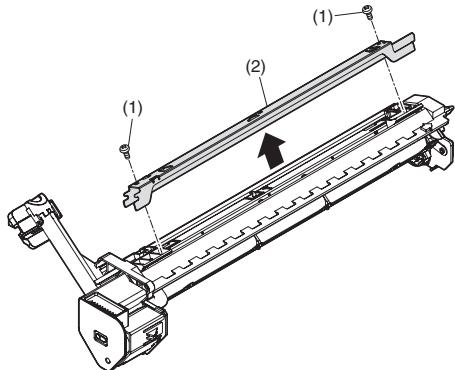

C.Cleaning blade


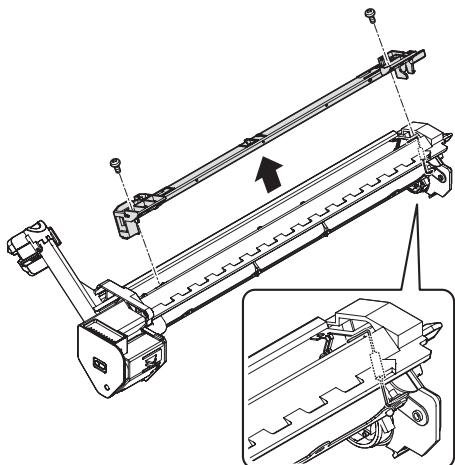


When installing a resistor, check to confirm that the terminal section is in contact with the metal section of the cleaning blade.





13.Others

No.	Contents
A	Operation P.W.B.
B	Tray interface P.W.B.
C	2nd tray paper entry sensor / Paper empty sensor
D	2nd tray paper feed solenoid / Transport solenoid
E	2nd tray transport clutch
F	2nd tray transport roller
G	2nd tray paper feed clutch
H	2nd tray paper feed roller
I	Main motor
J	I/F P.W.B.
K	Paper entry sensor
L	Paper empty sensor
M	Paper feed roller




A. Operation P.W.B.

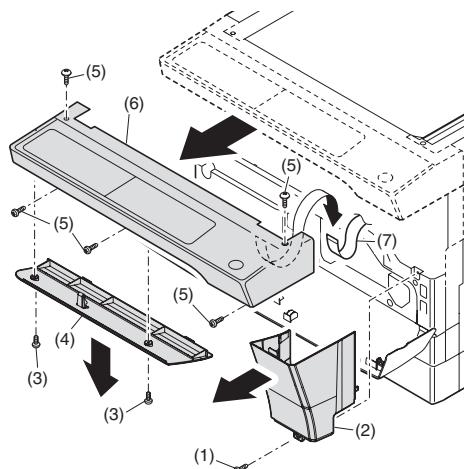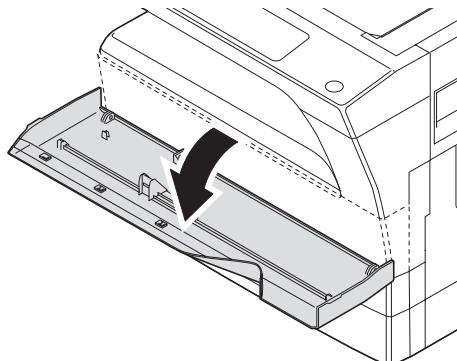


C. 2nd tray paper entry sensor / Paper empty sensor

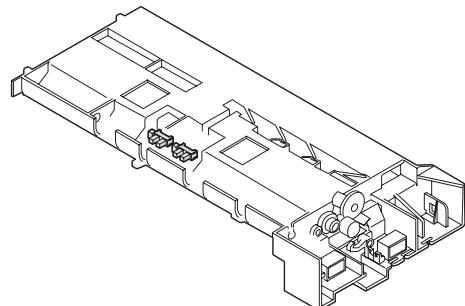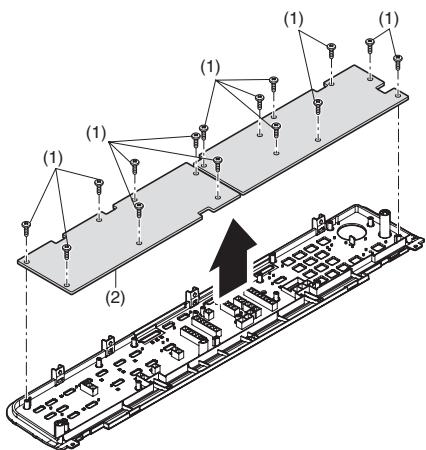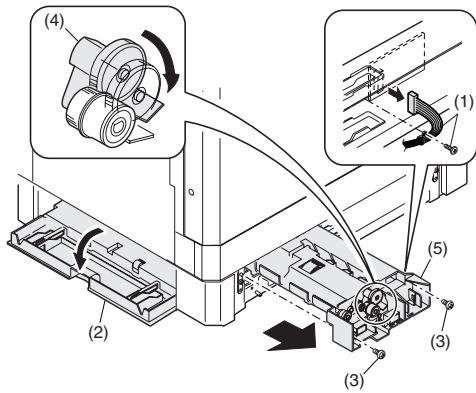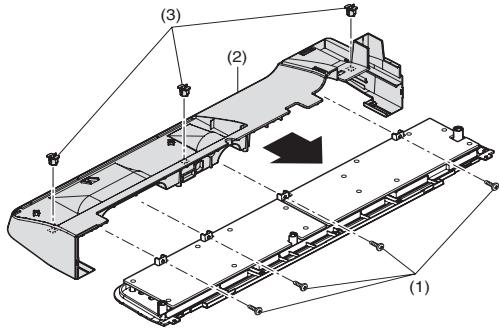


D. 2nd tray paper feed solenoid / Transport solenoid

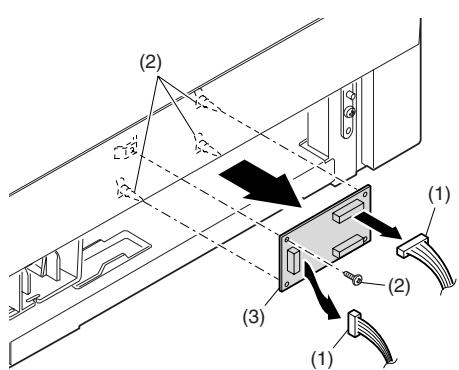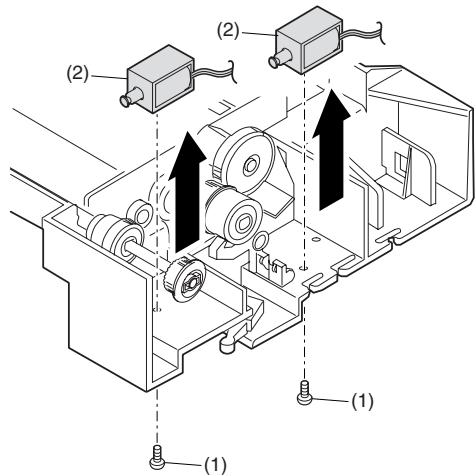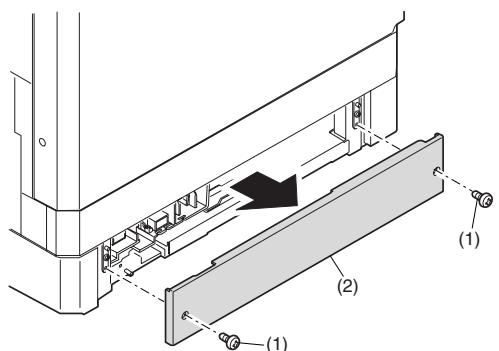


E. 2nd tray transport clutch

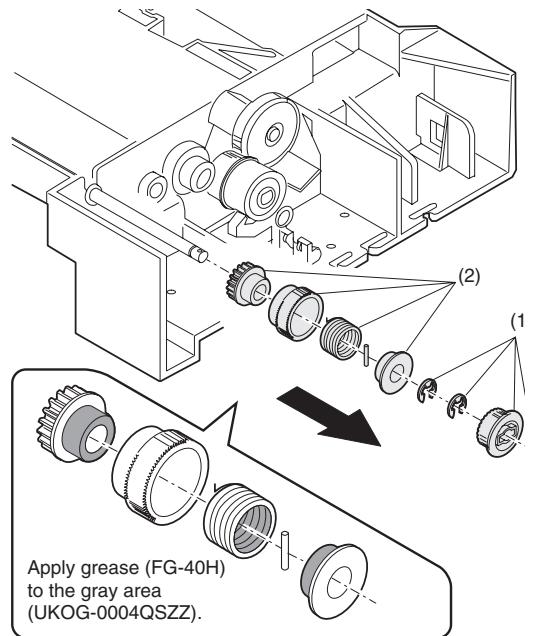


G. 2nd tray paper feed clutch

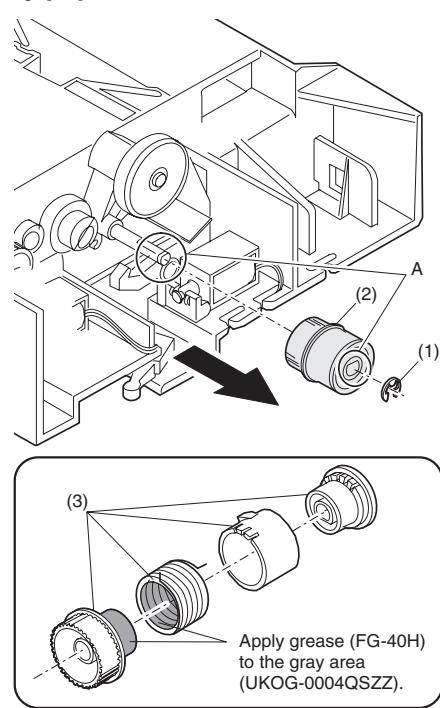


F. 2nd tray transport roller

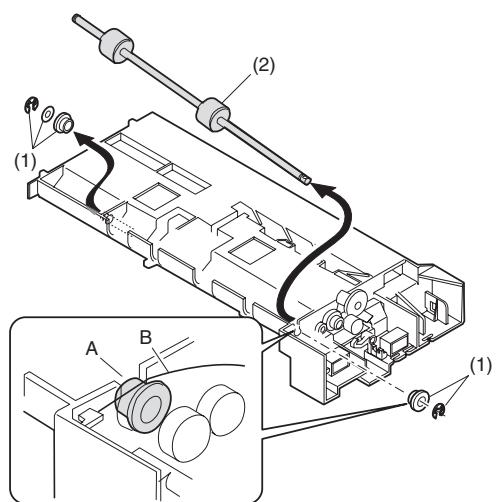


H. 2nd tray paper feed roller

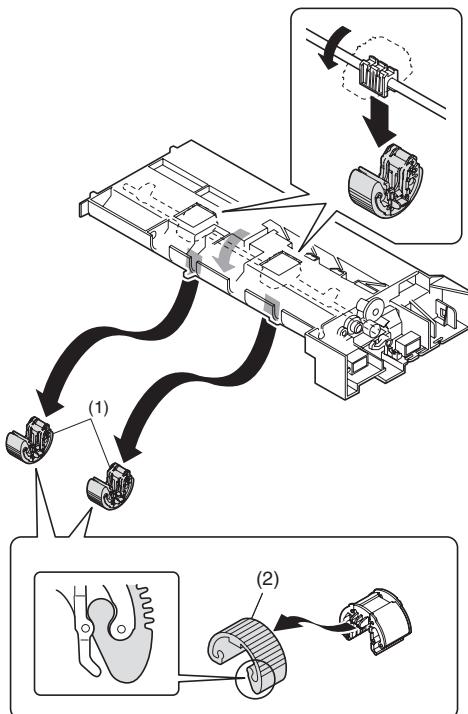


I. Main motor

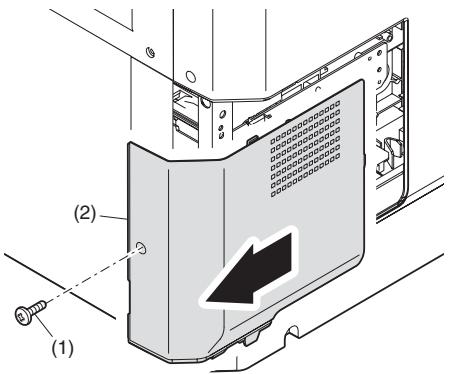


K. Paper empty sensor

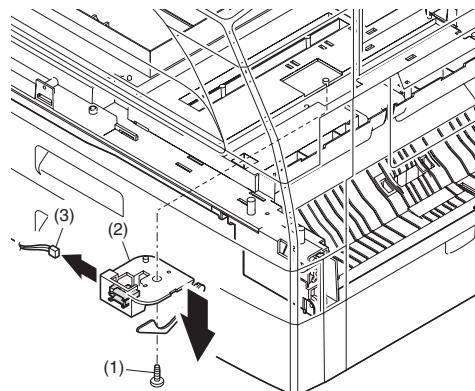


J. Paper entry sensor

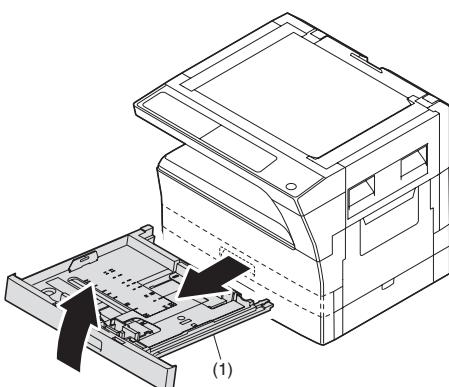

L. Paper feed roller

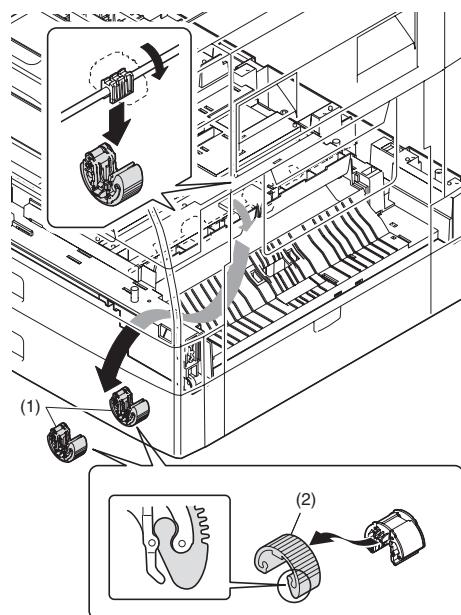

- * When removing the paper feed roller, operate the paper feed clutch with SIM 6-1, and keep the paper feed roller down as shown in the figure above for operation.

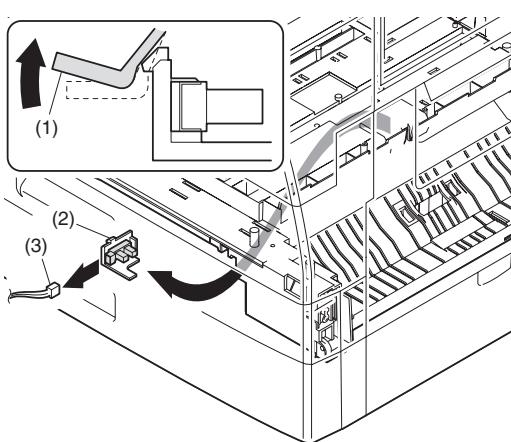

[12]FLASH ROM VERSION UP PROCEDURE

1.Preparation

Write the download data (the file with the extension dwl) to the main body of AR-5516/AR-5520/AR-5516S/AR-5520S/AR-5516D/AR-5520D.

Necessary files for download

- Maintenance.exe (Maintenance software)
- ProcPegasus.mdl
- ProcPegasus.ini
- ProcPegasus.fmt
- Pegasus.inf
- Usbscan.sys
- Download file:***.dwl

<Note>

- The Download file(***.dwl) and the like that are to be downloaded should be copied, in advance, into folders that have a maintenance program.
- When creating a folder for a maintenance tool in the PC, be sure that no lengthy folder name is included in the path.


(Example)

Incorrect c:\Maintenance Download Tool

Correct c:\Maintenance\Downtool


2.Download procedure

- 1) Main body side:
Executable by performing the Service Simulation No. 49-01 (Flash Rom program-writing mode).
(A word "d" appears on the operation panel to denote the download mode status.)
- 2) Connect the PC and the main body with the download cable (USB cable).

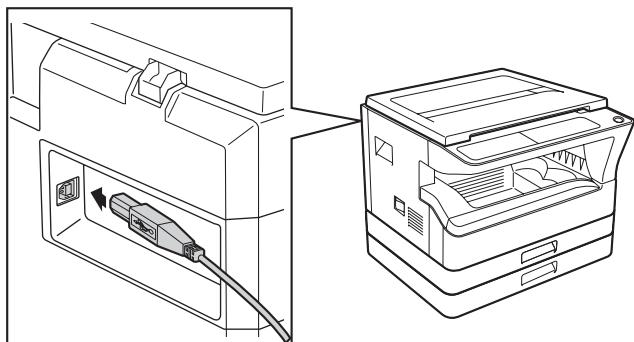

3) PC side:

Boot the maintenance program. Select the model icon.

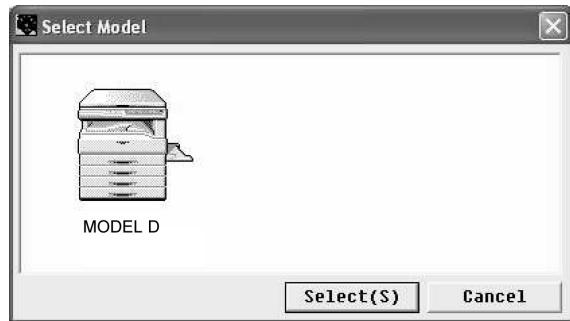


<Sample display>

4) PC side:

Confirm that the "Simulation Command List" tree is displayed on the maintenance program.


5) PC side:

When the message "the main body has not got started running" is displayed on the lowest area of the figure below after the "maintenance program" is started up, select the "File" and then "Reconnect" in the menu bar.

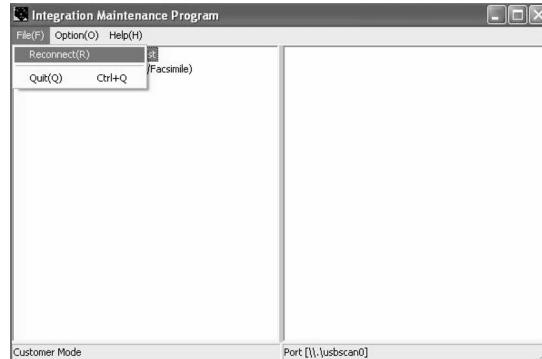


6) PC side:

Confirm a tree is displayed under the "Special (MCU/IMC2/FAX)" on the maintenance program. (If no tree is displayed, confirm that the USB is connected and select the "Reconnect" (the above 5) again.)

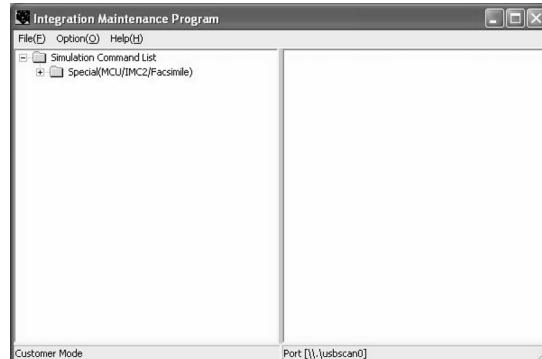


7) PC side:

Double click "Special (MCU/MCU2/FAX)" in the main tree item to develop the sub tree items, and double click "DWL Download" in the sub tree items.

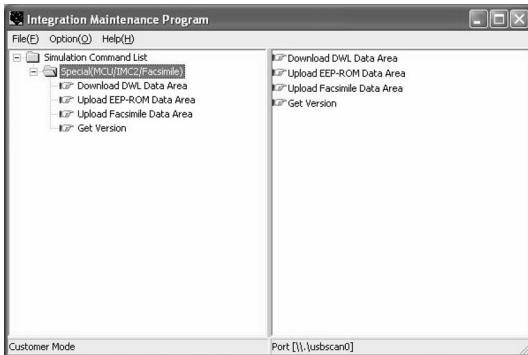

8) PC side:

Specify the download file (*.dwl).

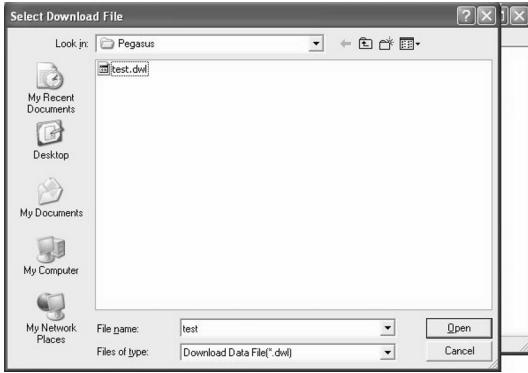


9) PC side:

The download file is specified, download is automatically performed. The AUTO PAPER SELECT indicator and START indicator will blink approximately 15 seconds after the download file is specified.

10) PC side:

When the message below is displayed, download is completed. Completion message: DOWNLOAD COMPLETED

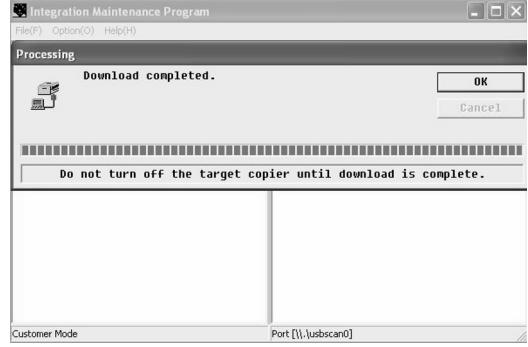

NOTE (Important):

- Be sure that the power is not turned off and the USB cable is not removed until the word "OFF" appears.

11) Main body side:

Wait until the word "OFF" appears on the operation panel.

The appearance of "OFF" indicates the completion of the download (writing into ROM).


Turn the power off.

12) After-process: Terminate the maintenance program, and turn on the power of the main body.

After the download (data transmission) has been completed, exit the software program. The USB cable can be removed at this point.

NOTE:

- For making a second connection with another machine, select the "File" and "Reconnect" in the menu bar on the maintenance program at the time of the USB being re-connected. Repeat the previous procedures from the above 5).

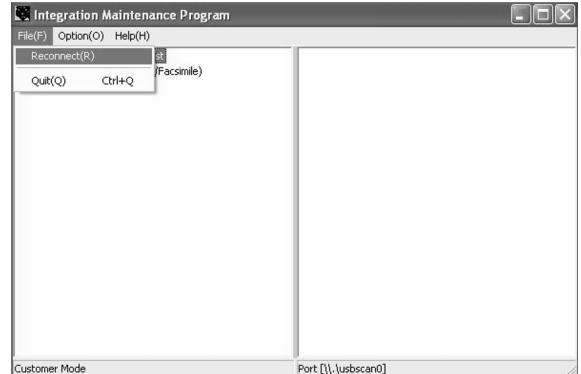

* **Forbidden actions while downloading (Important)**

Failure in the download concerned may not allow you to conduct the subsequent download procedures. Added care should be taken to avoid having the situation below arise while downloading.

- Switching off the main body of AR-5516/AR-5520/AR-5516S/AR-5520S/AR-5516D/AR-5520D.
- Disconnecting the download cable (USB cable).

* **If the above inhibit item occurs during downloading:**

Turn OFF and ON the power.

- If "d" (which means downloading) is displayed on the operation panel LED of the machine, perform downloading again.
 - If "d" (which means downloading) is not displayed on the operation panel LED of the machine, turn OFF the power, and press and hold the [Copy ratio display] key and the [READ-END] key and turn ON the power. If, then, "d" (which means downloading) is displayed on the operation panel LED of the machine, perform downloading again.
- If "d" is still not displayed, the MCU must be replaced.

3. Installation procedure

A. USB joint maintenance program installation

The driver is installed by plug and play.

B. Installation procedure on Windows XP

1) Machine side:

Executable by performing the Service Simulation No. 49-01 (Flash Rom program-writing mode).
(A word "d" appears on the operation panel to denote the download mode status.)

2) Connect the machine and the PC with a USB cable.


3) Check that the following display is shown.

Select "Install from a list or the specific location" and press the NEXT button.




4) Select "Include this location in the search". If the retrieval area does not include the folder which includes the maintenance tool driver (Pegasus.inf), select "Browse".

If the folder path is properly shown, press the NEXT button to go to procedure 7).

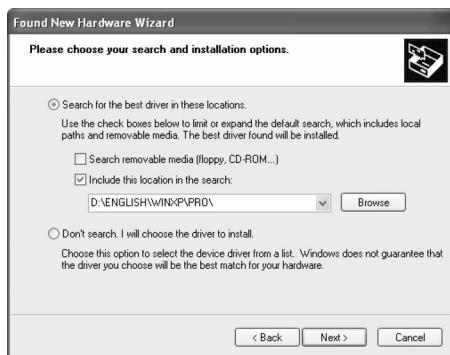

5) Select the folder which includes the maintenance tool driver (Pegasus.inf), and press the OK button.

(When the driver is included in the "C:\Pegasus" folder:)

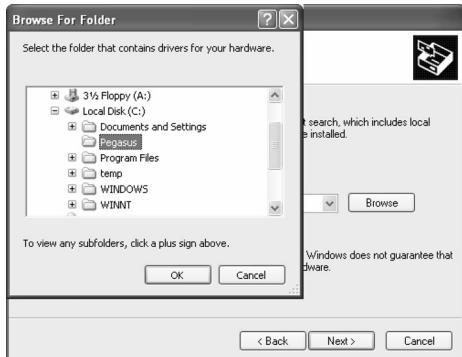

6) Check that the path to the folder which includes the maintenance tool driver (Pegasus.inf) is shown, and press the NEXT button.



7) Check that the following display is shown. Press the Continue Anyway button.



8) When installation is completed, the following display is shown. Press the Finish button.



The installation procedure (on Windows XP) is completed with the above operation.

C. Installation procedure on Windows 2000

1) Machine side:

Executable by performing the Service Simulation No. 49-01 (Flash Rom program-writing mode).

(A word "d" appears on the operation panel to denote the download mode status.)

2) Connect the machine and the PC with a USB cable.

- 3) Check that the new hardware search wizard is shown. Press the NEXT button.



- 4) Select "Search for a suitable driver for my device" and press the NEXT button.



- 5) Select "Specify a location" and press the NEXT button.




- 6) Press the "Browse" button. Specify the folder which includes the maintenance tool driver (Pegasus.inf)



- 7) Specify the folder which includes the maintenance tool driver (Pegasus.inf), and press the OPEN button.

Check that the path to the folder which includes the maintenance tool driver (Pegasus.inf) is properly displayed, and press the OK button.

(When the maintenance tool driver is included in the folder of "D:\Pegasus")

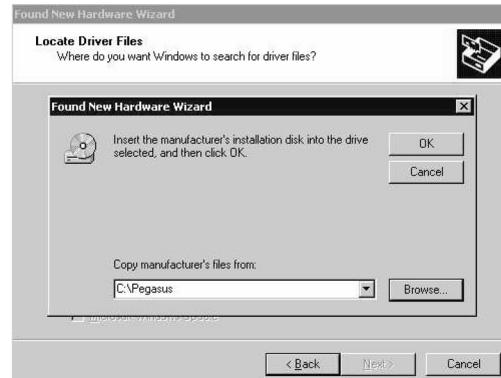

- 8) Press the NEXT button, and installation is started.




- 9) When installation is completed, the following display is shown. Press the Finish button.



The installation procedure of the joint maintenance program on Windows 2000 is completed with the above operation.


[13] ELECTRICAL SECTION

1. Block diagram

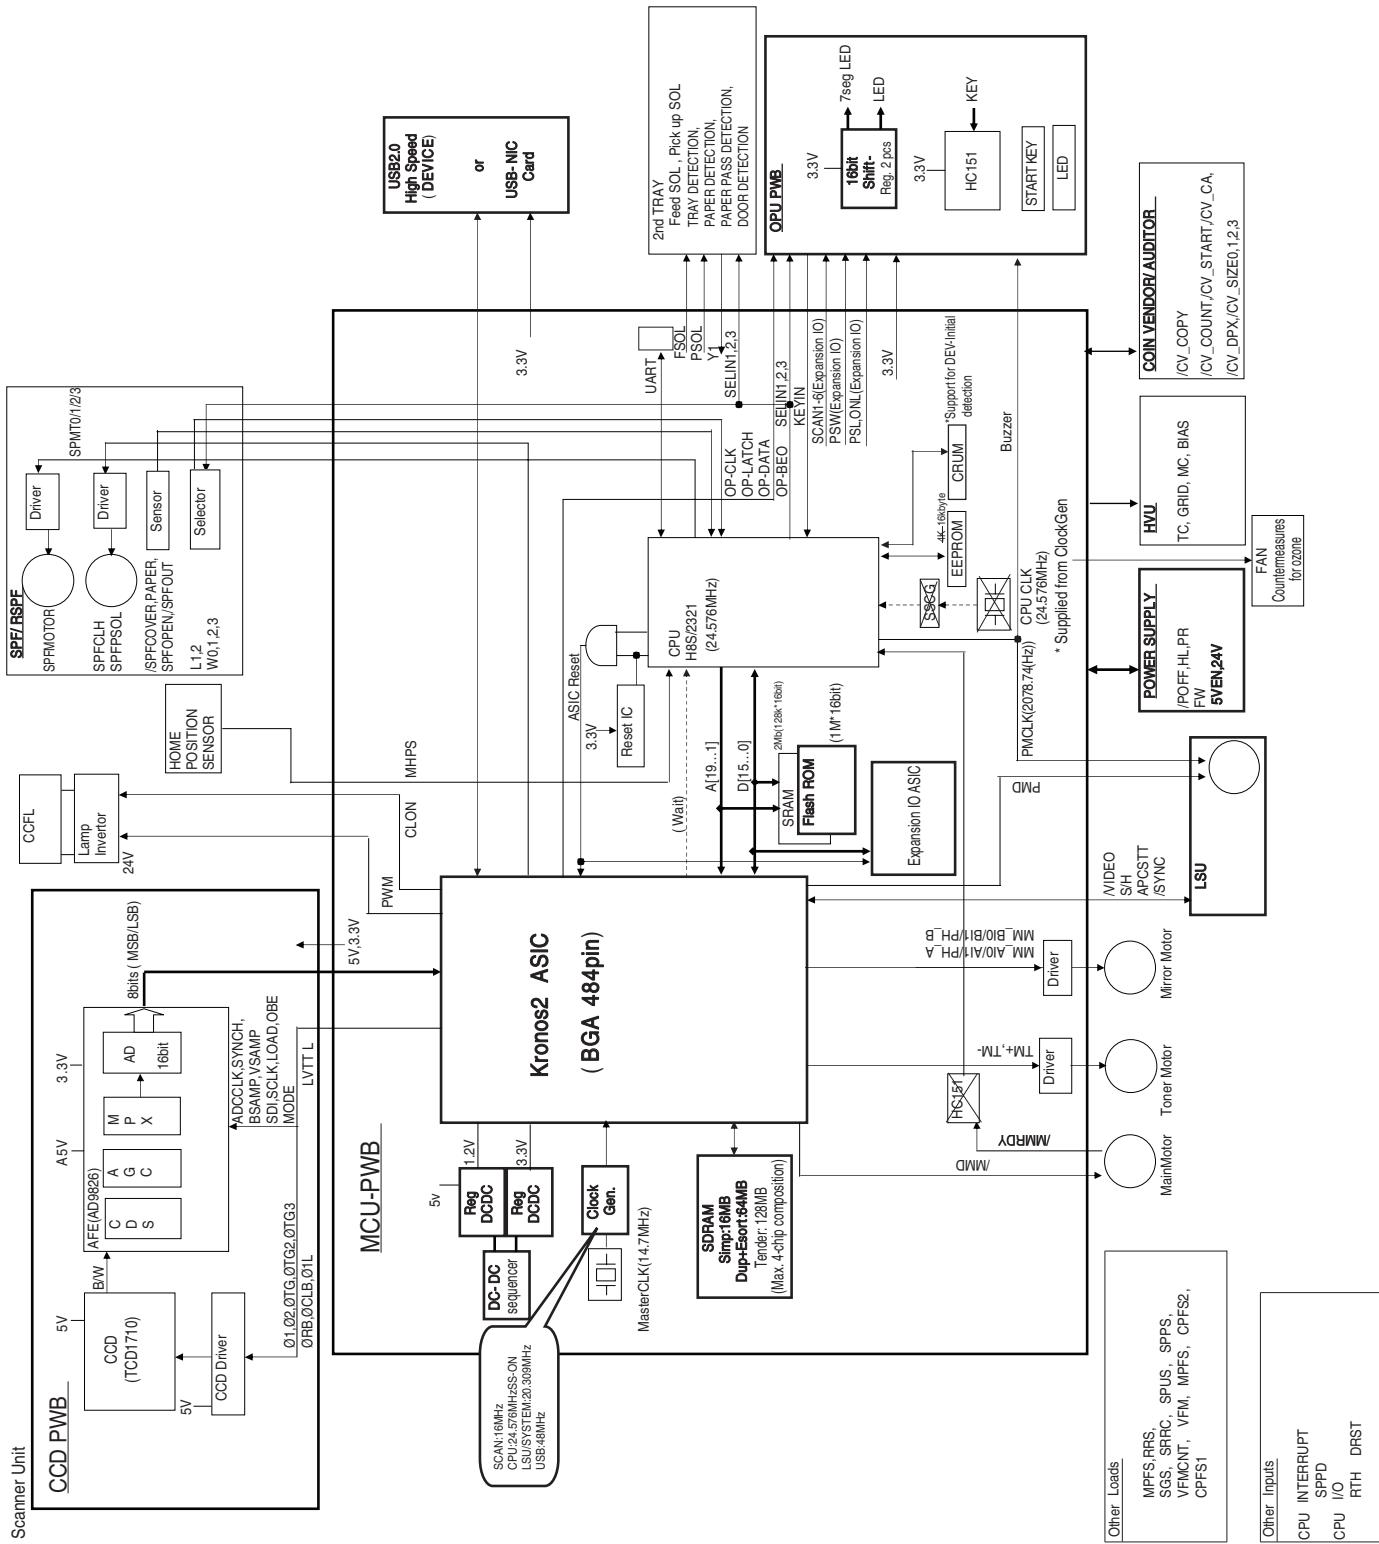


2. Actual wiring diagram


ACTUAL WIRING DIAGRAM 1/7

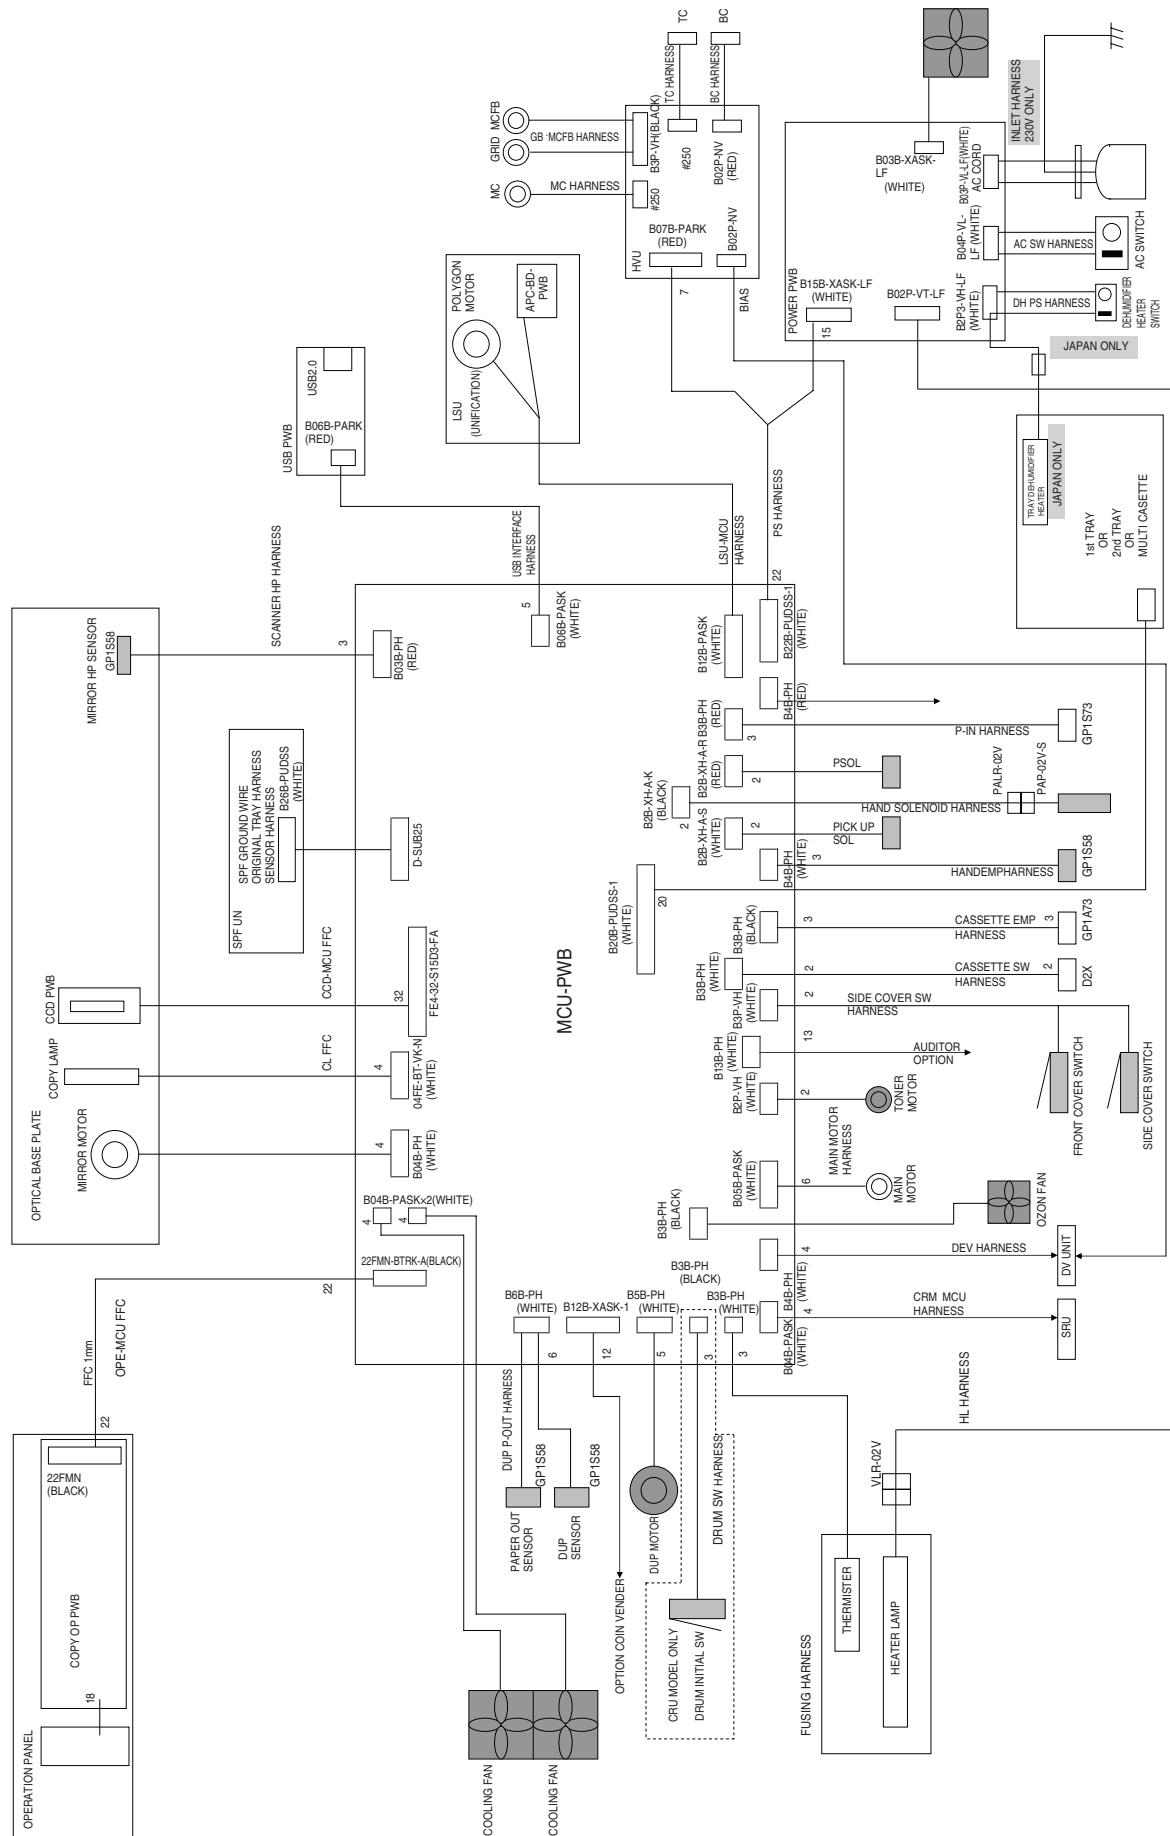


ACTUAL WIRING DIAGRAM 2/7

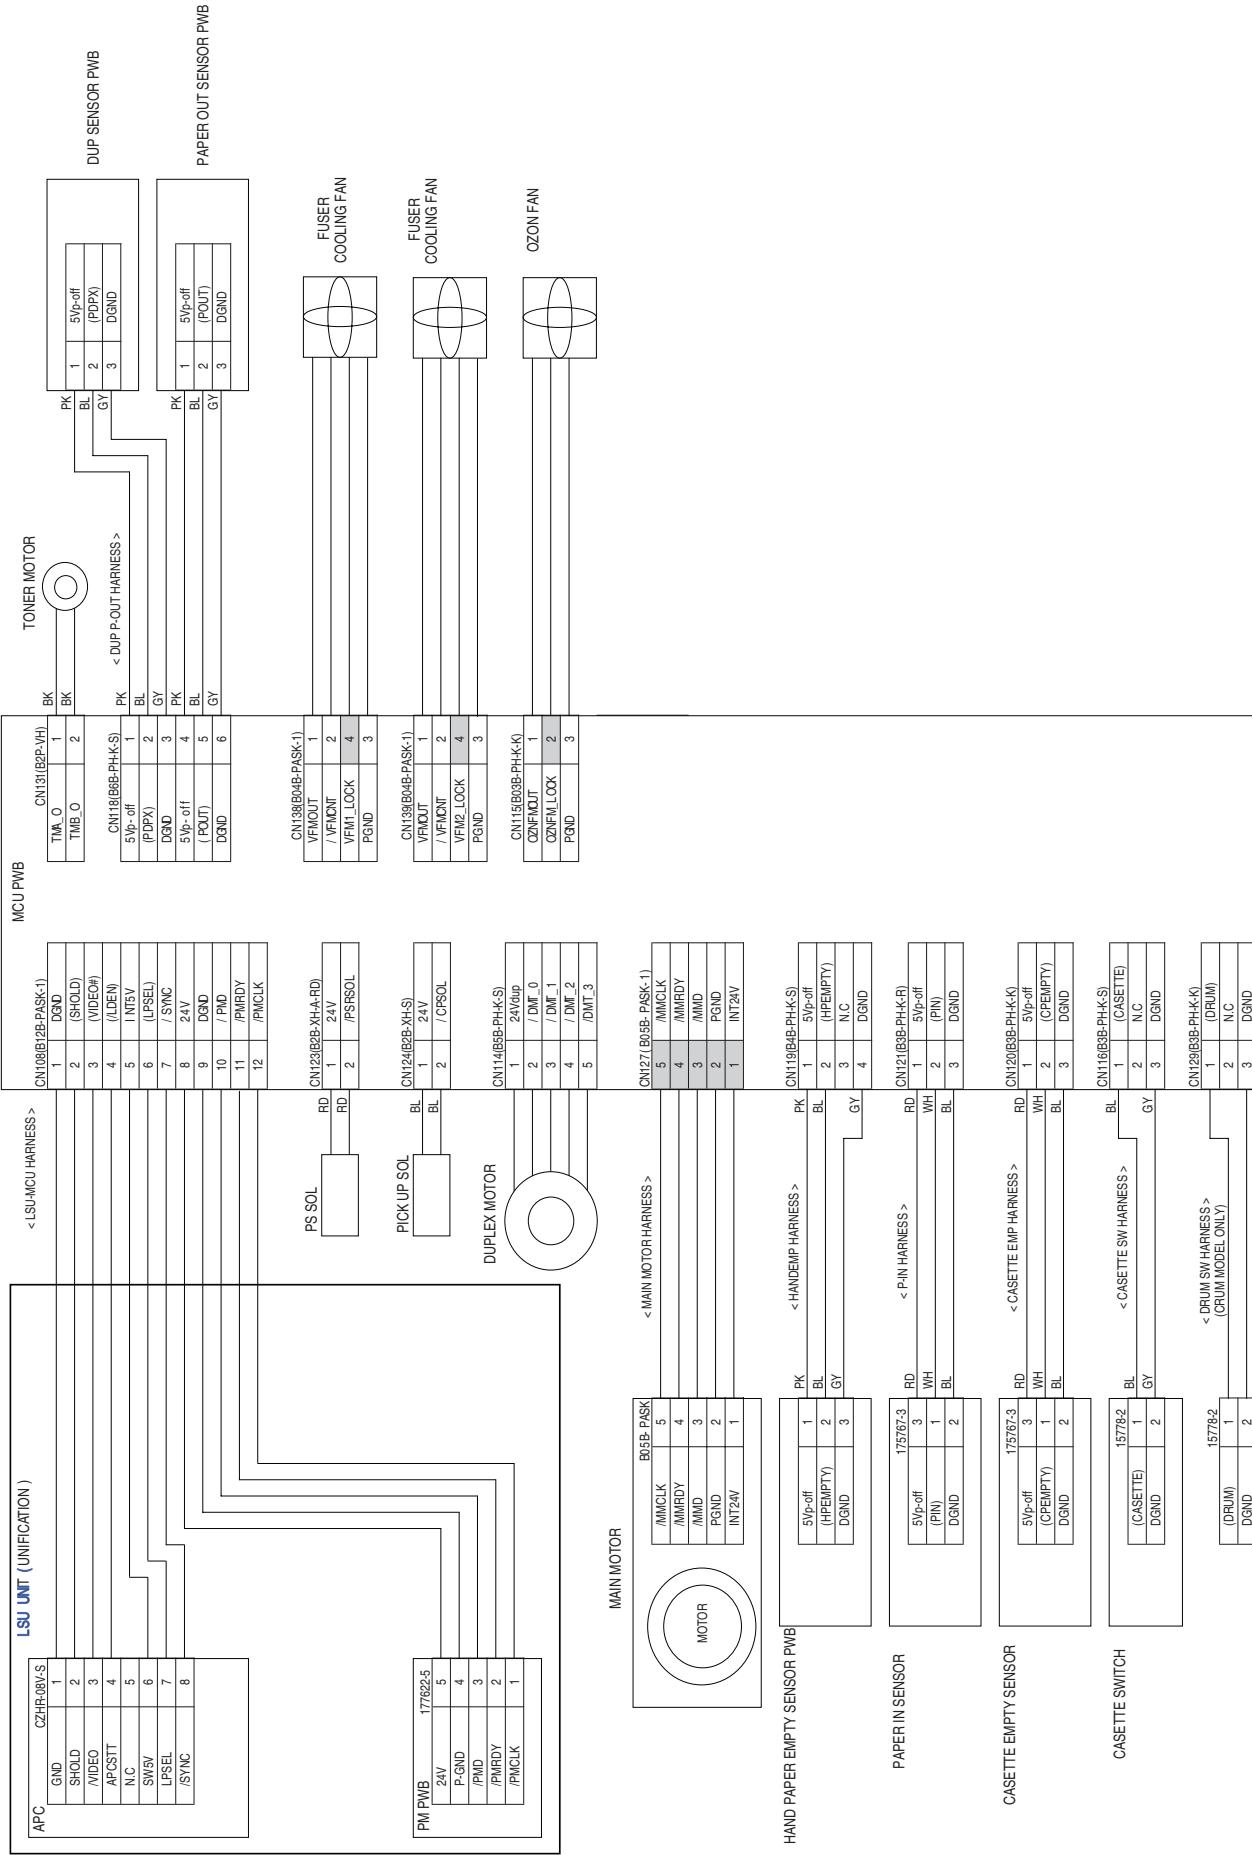


ACTUAL WIRING DIAGRAM 3/7

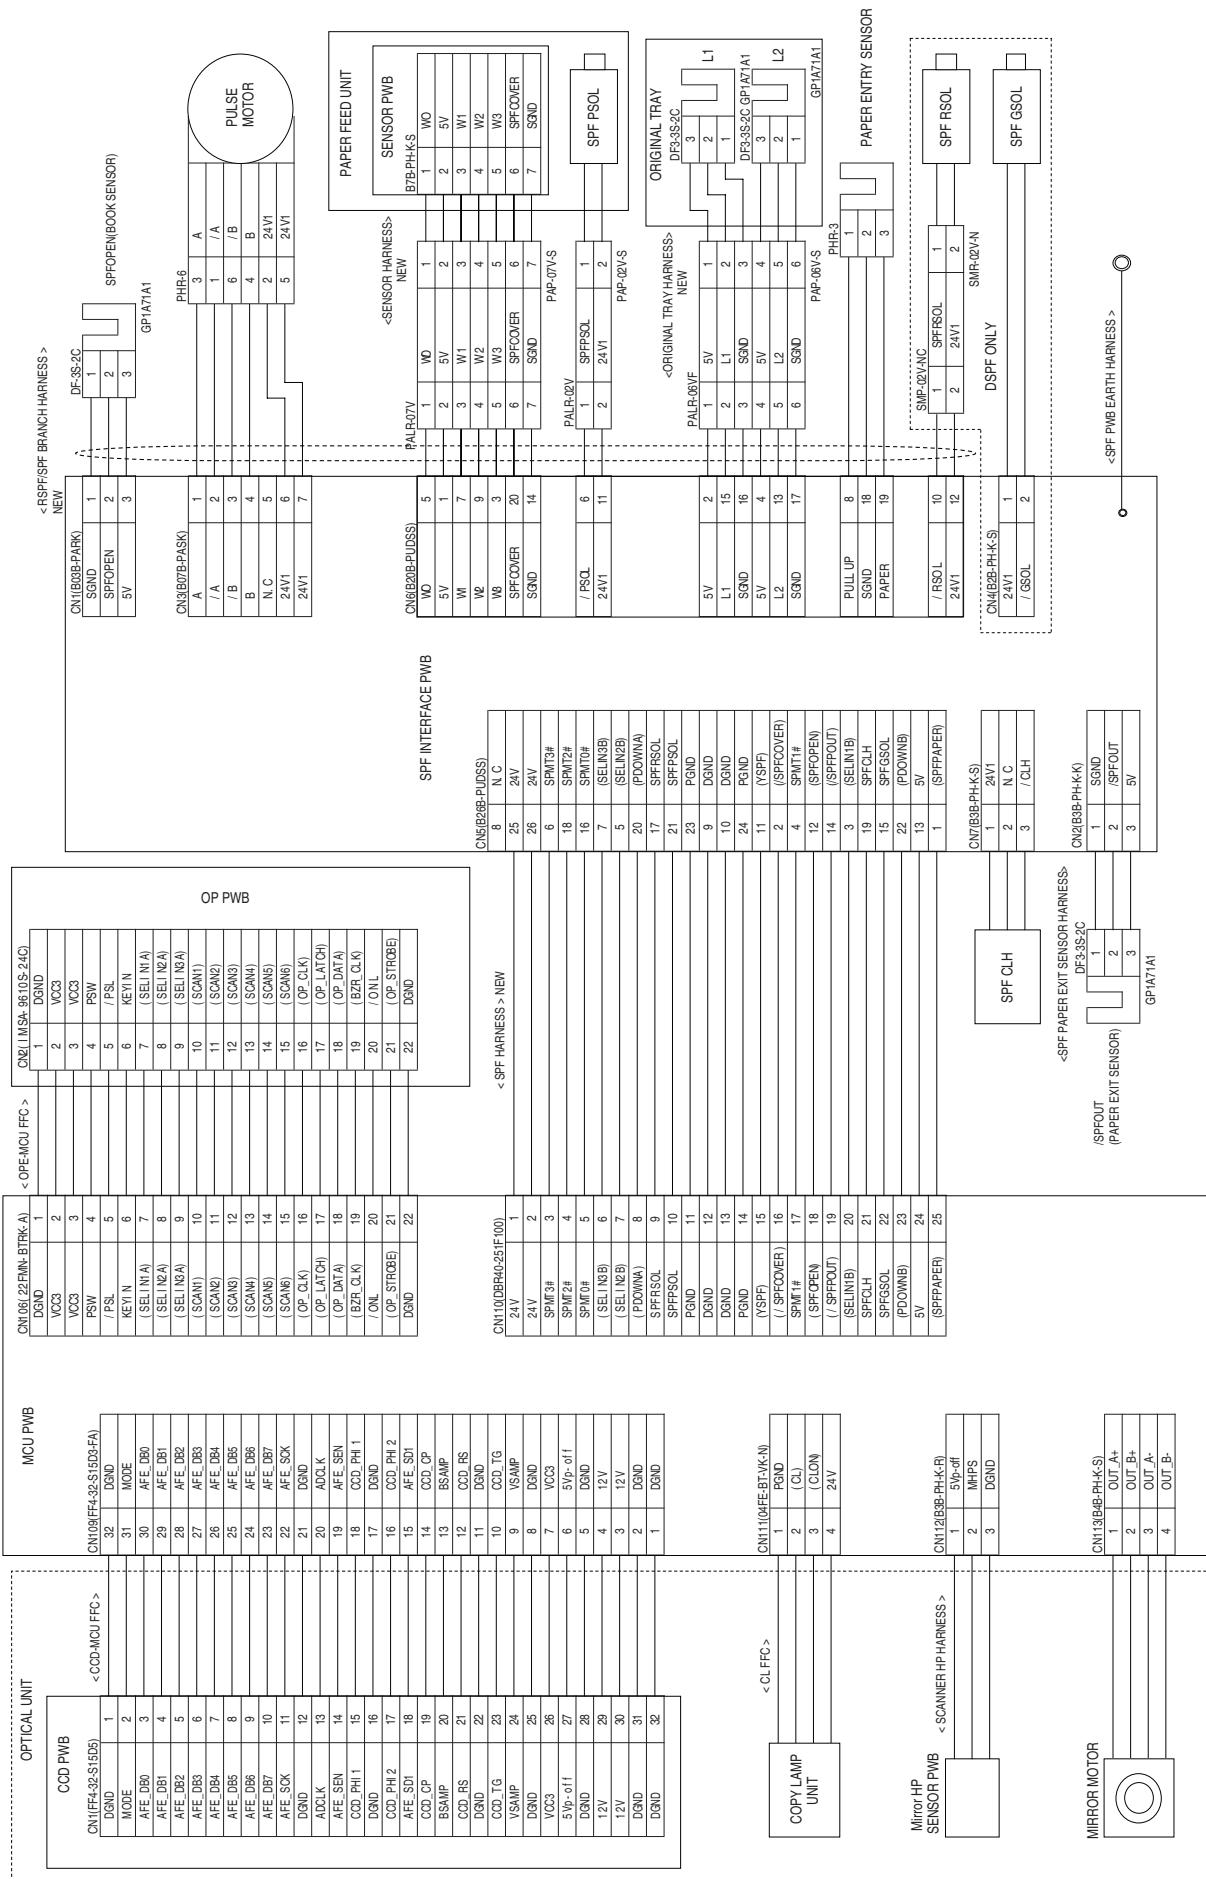


ACTUAL WIRING DIAGRAM 4/7

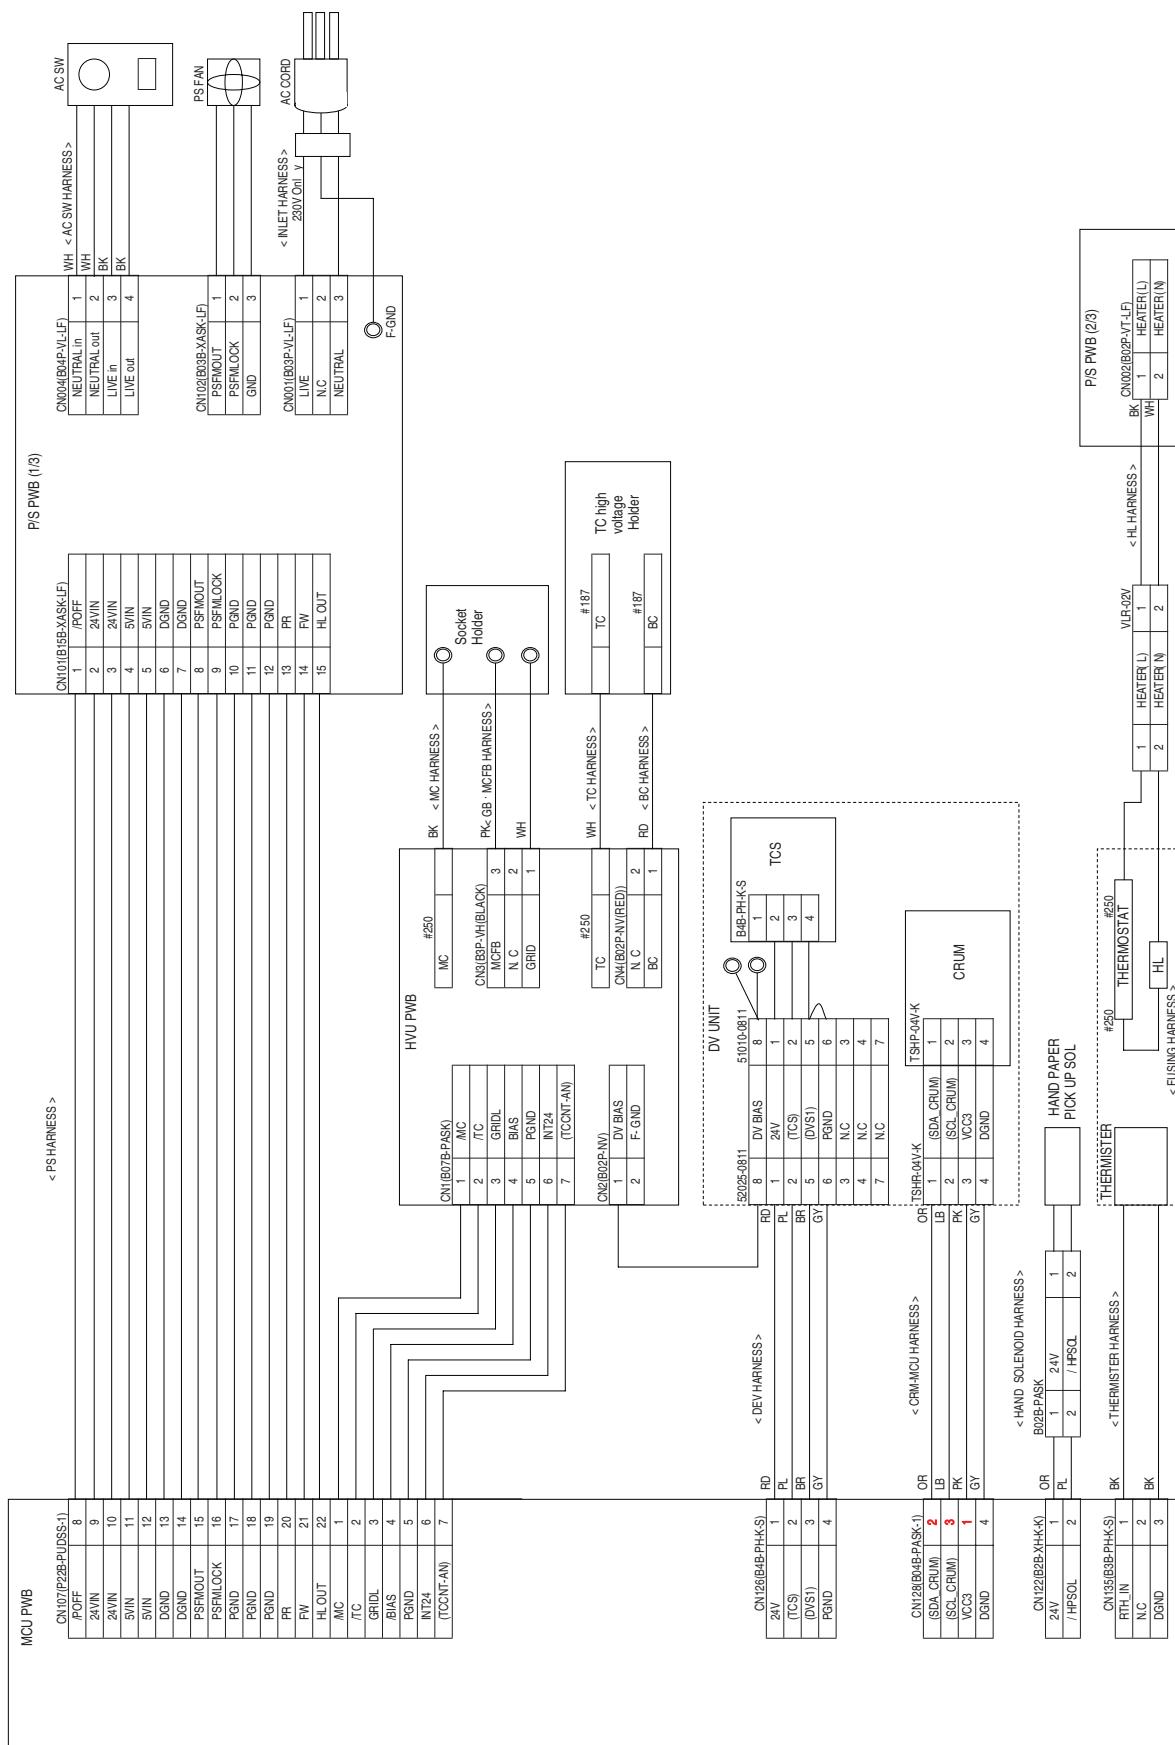


ACTUAL WIRING DIAGRAM 5/7

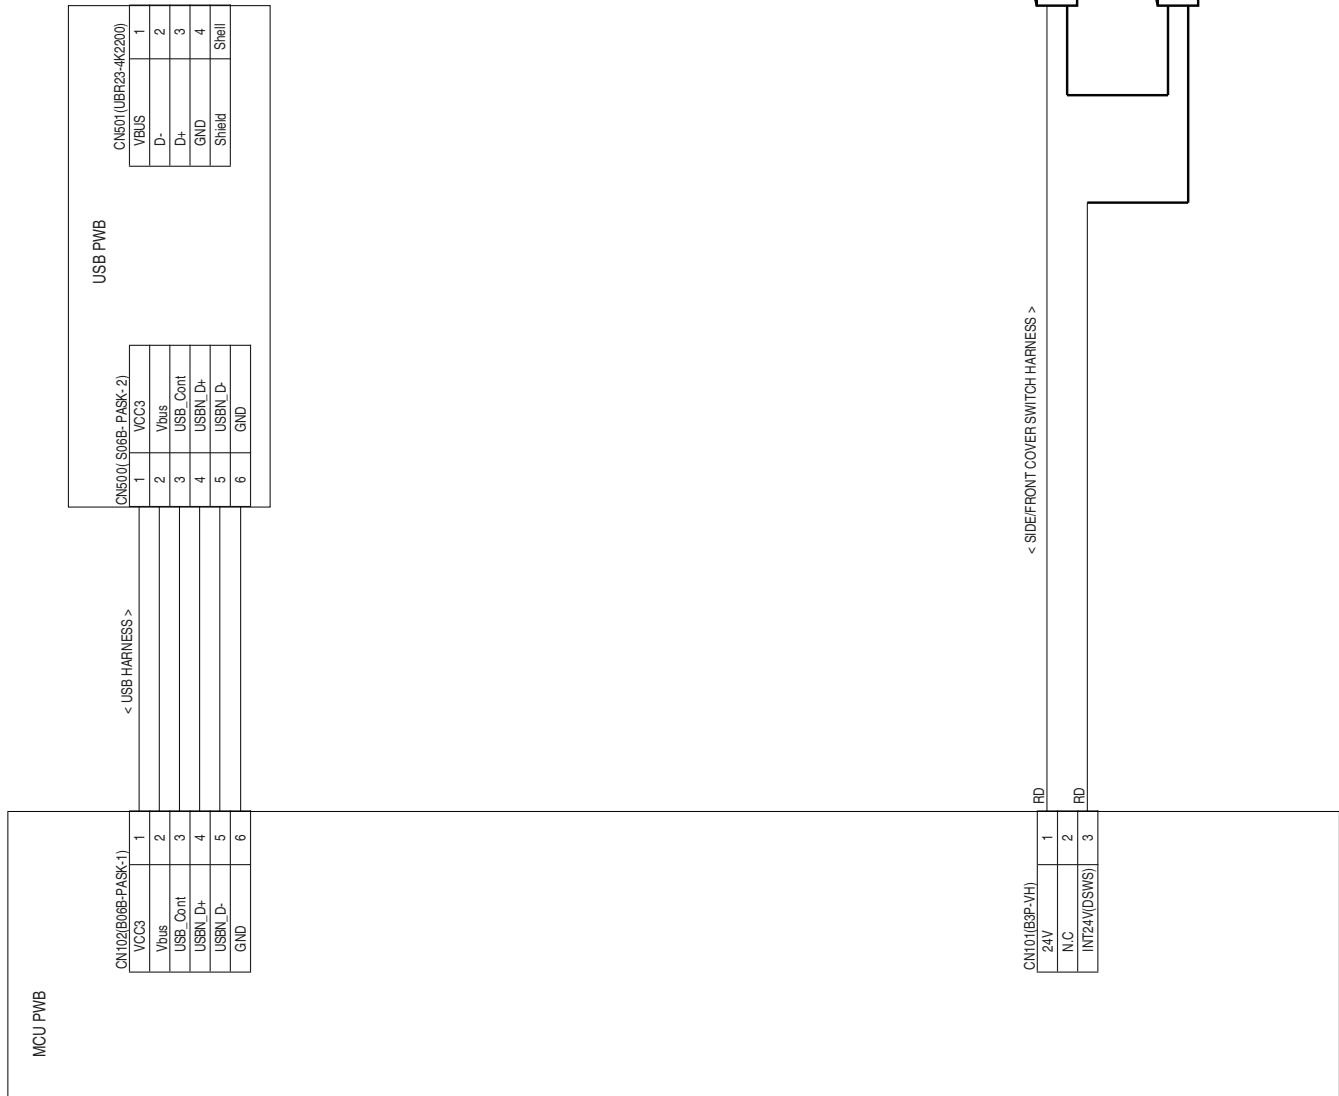

ACTUAL WIRING DIAGRAM 6/7

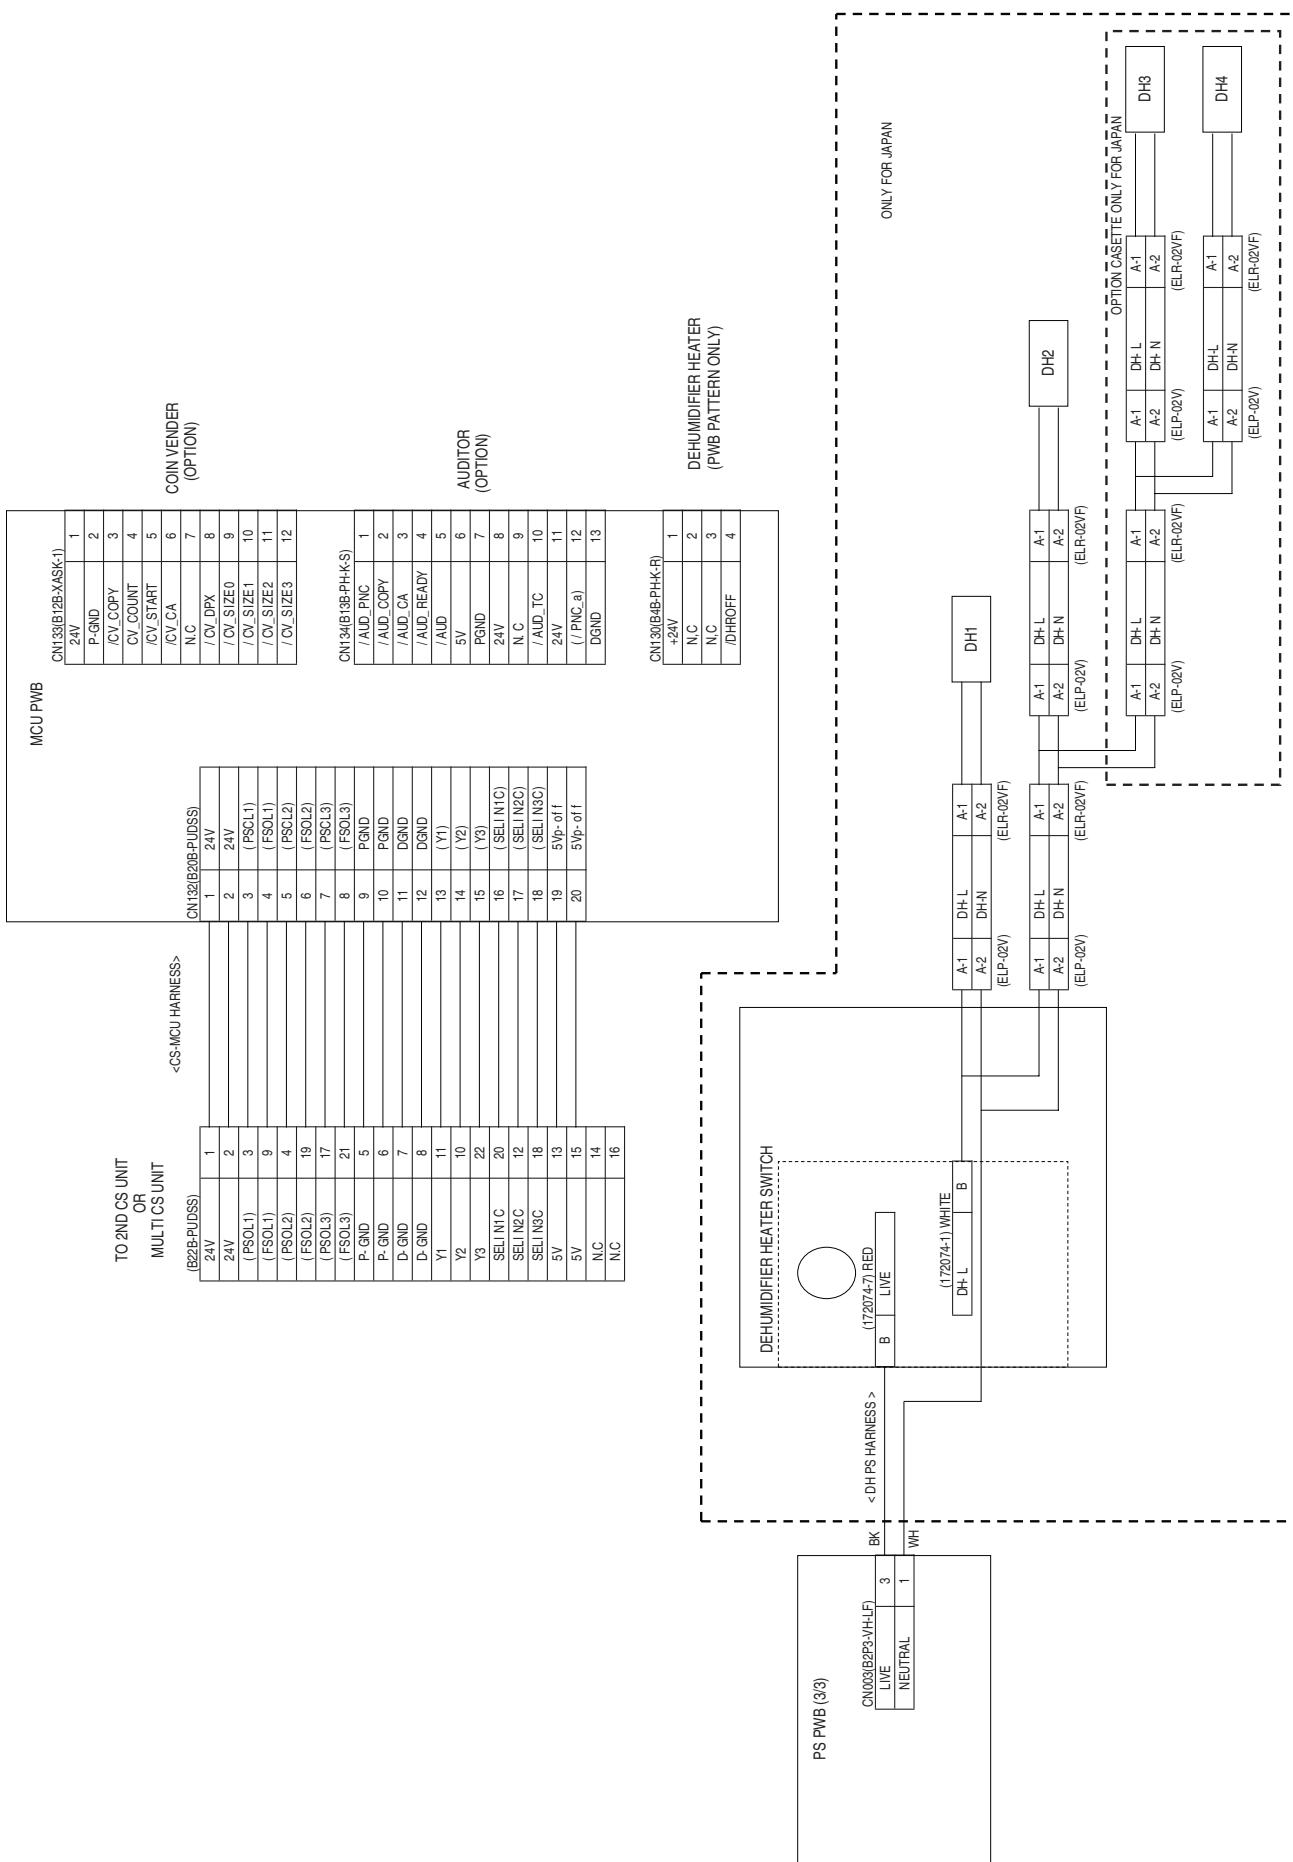


ACTUAL WIRING DIAGRAM 7/7

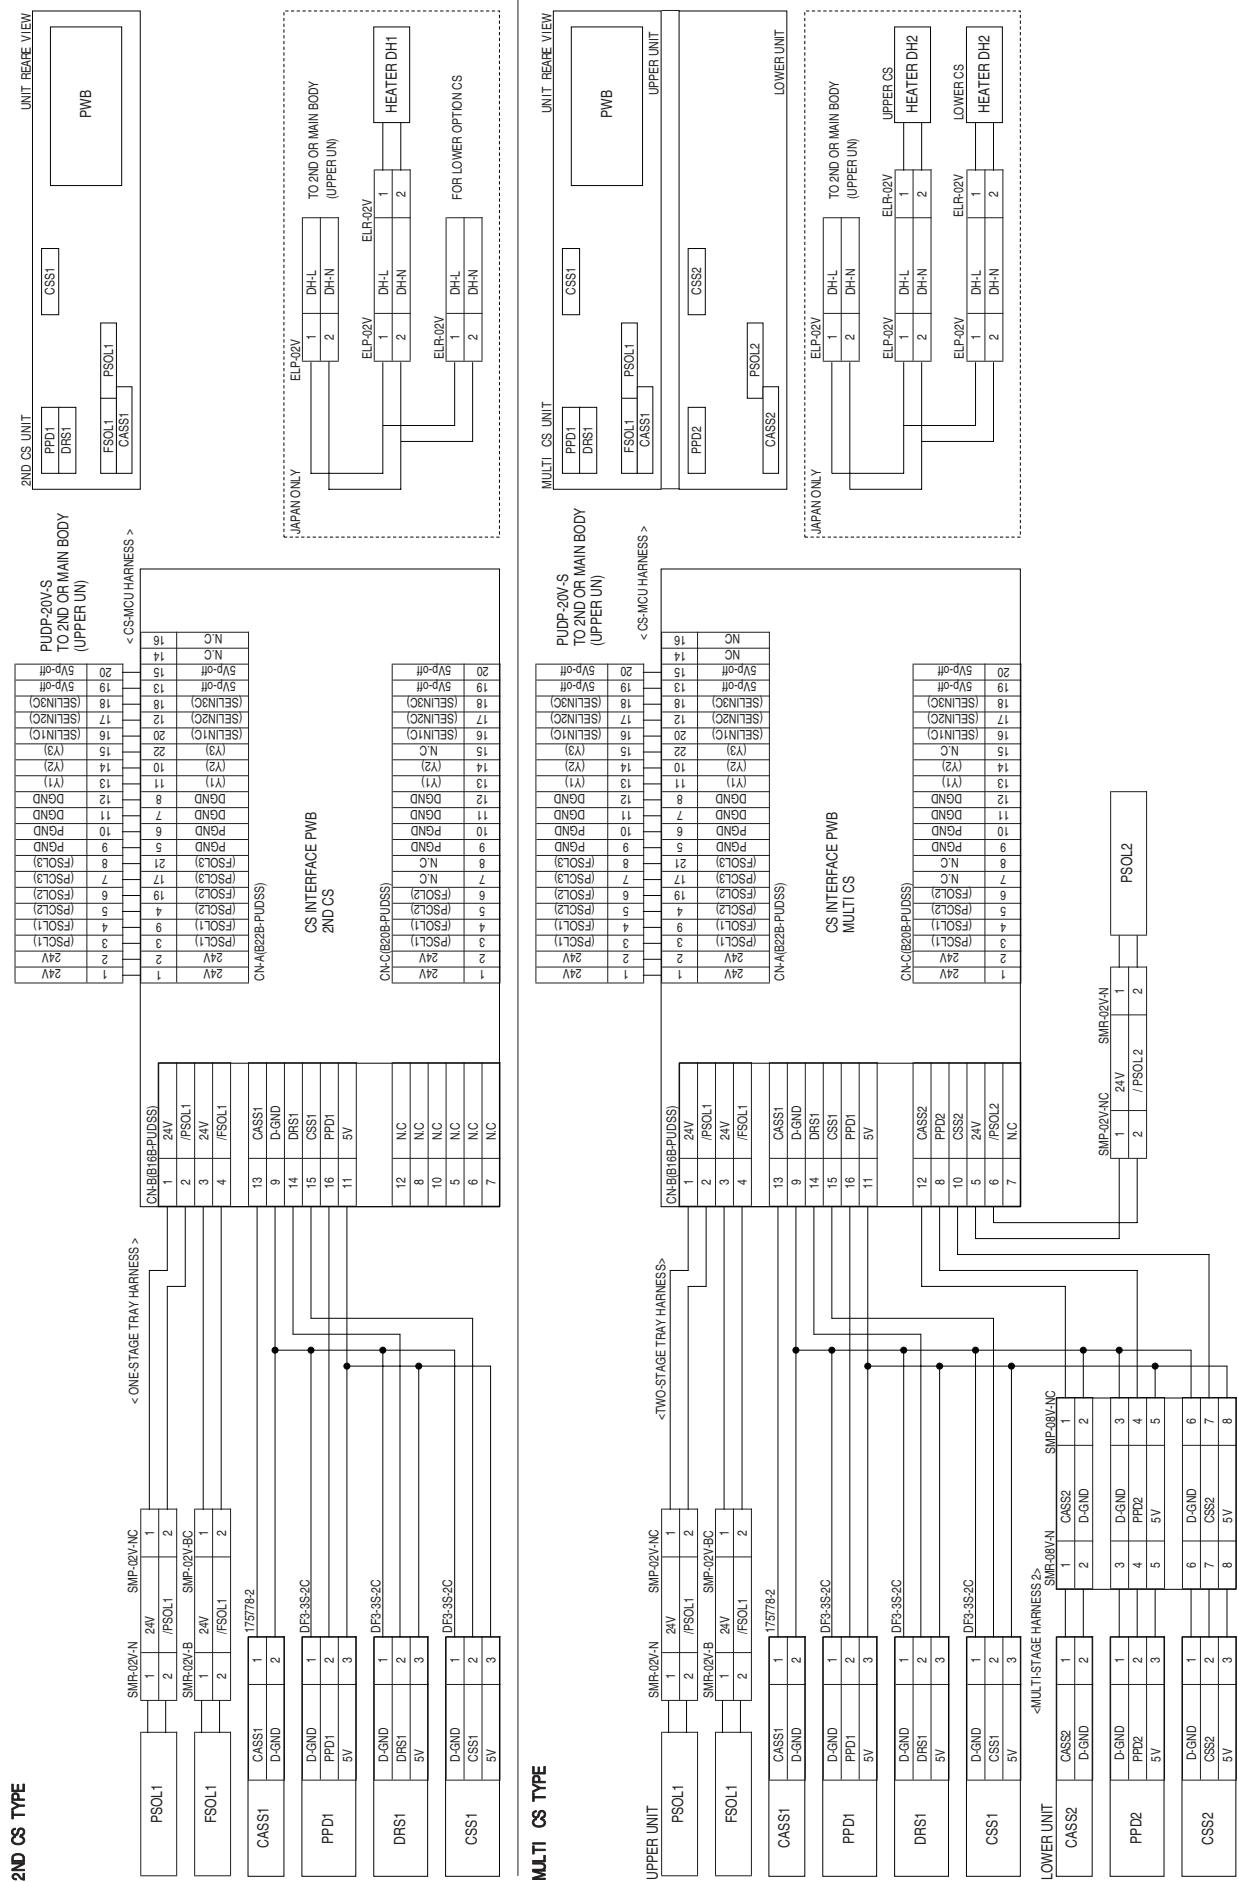

LEAD-FREE SOLDER

The PWB's of this model employs lead-free solder. The "LF" marks indicated on the PWB's and the Service Manual mean "Lead-Free" solder. The alphabet following the LF mark shows the kind of lead-free solder.

Example:

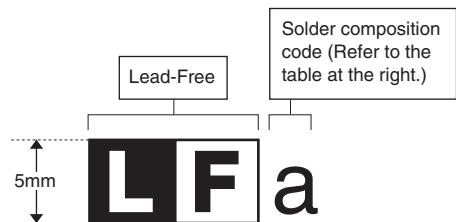

<Solder composition code of lead-free solder>

Solder composition	Solder composition code
Sn-Ag-Cu	a
Sn-Ag-Bi Sn-Ag-Bi-Cu	b
Sn-Zn-Bi	z
Sn-In-Ag-Bi	i
Sn-Cu-Ni	n
Sn-Ag-Sb	s
Bi-Sn-Ag-P Bi-Sn-Ag	p

(1) NOTE FOR THE USE OF LEAD-FREE SOLDER THREAD

When repairing a lead-free solder PWB, use lead-free solder thread.

Never use conventional lead solder thread, which may cause a breakdown or an accident.

Since the melting point of lead-free solder thread is about 40°C higher than that of conventional lead solder thread, the use of the exclusive-use soldering iron is recommendable.

(2) NOTE FOR SOLDERING WORK

Since the melting point of lead-free solder is about 220°C, which is about 40°C higher than that of conventional lead solder, and its soldering capacity is inferior to conventional one, it is apt to keep the soldering iron in contact with the PWB for longer time. This may cause land separation or may exceed the heat-resistive temperature of components. Use enough care to separate the soldering iron from the PWB when completion of soldering is confirmed.

Since lead-free solder includes a greater quantity of tin, the iron tip may corrode easily. Turn ON/OFF the soldering iron power frequently.

If different-kind solder remains on the soldering iron tip, it is melted together with lead-free solder. To avoid this, clean the soldering iron tip after completion of soldering work.

If the soldering iron tip is discolored black during soldering work, clean and file the tip with steel wool or a fine filer.

CAUTION FOR BATTERY REPLACEMENT

(Danish) **ADVARSEL !**
Lithiumbatteri – Eksplorationsfare ved fejlagtig håndtering.
Udskiftning må kun ske med batteri
af samme fabrikat og type.
Levér det brugte batteri tilbage til leverandoren.

(English) **Caution !**
Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type
recommended by the manufacturer.
Dispose of used batteries according to manufacturer's instructions.

(Finnish) **VAROITUS**
Paristo voi räjähtää, jos se on virheellisesti asennettu.
Vaihda paristo ainoastaan laitevalmistajan suosittelemaan
tyyppiin. Hävitä käytetty paristo valmistajan ohjeiden
mukaisesti.

(French) **ATTENTION**
Il y a danger d'explosion s' il y a remplacement incorrect
de la batterie. Remplacer uniquement avec une batterie du
même type ou d'un type équivalent recommandé par
le constructeur.
Mettre au rebut les batteries usagées conformément aux
instructions du fabricant.

(Swedish) **VARNING**
Explosionsfara vid felaktigt batteribyte.
Använd samma batterityp eller en ekivalent
typ som rekommenderas av apparattillverkaren.
Kassera använt batteri enligt fabrikantens
instruktion.

(German) **Achtung**
Explosionsgefahr bei Verwendung inkorrekt Batterien.
Als Ersatzbatterien dürfen nur Batterien vom gleichen Typ oder
vom Hersteller empfohlene Batterien verwendet werden.
Entsorgung der gebrauchten Batterien nur nach den vom
Hersteller angegebenen Anweisungen.

CAUTION FOR BATTERY DISPOSAL

(For USA,CANADA)

Contains lithium-ion battery. Must be disposed of properly.
Remove the battery from the product and contact
federal or state environmental
agencies for information on recycling and disposal options.

SHARP

COPYRIGHT © 2008 BY SHARP CORPORATION

All rights reserved.

Printed in Japan.

No part of this publication may be reproduced,
stored in a retrieval system, or transmitted,
in any form or by any means,
electronic, mechanical, photocopying, recording, or otherwise,
without prior written permission of the publisher.

Trademark acknowledgments

Windows and Windows NT are trademarks of Microsoft Corporation in the U.S.A.
and other countries.

IBM and PC/AT are trademarks of International Business Machines Corporation.
PCL is a trademark of Hewlett-Packard Company.

Pentium is a registered trademark of Intel Corporation.

All other trademarks and copyrights are the property of their respective owners.

**SHARP CORPORATION
Digital Document System Group
CS Promotion Center
Yamatokoriyama, Nara 639-1186, Japan**

2008 September Printed in Japan **(N)**