



WM-SG-SM-42 Application Note For Region IN865

Version: 1.0

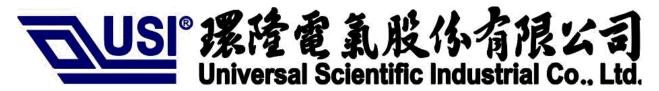

Contents

1.	The IN865 configuration in device	
2.	AT Command Example for IN865	

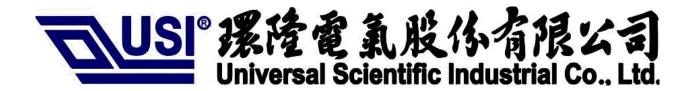

1. The IN865 configuration in device

1. Preamble Format

Modulation	Sync word	Preamble Length
LORA	0x34	8 symbols
GFSK	0xC194C1	5 bytes

2. Default Channels

Frequency(Hz)	Data Rate
865062500	DR5 ~ DR0
865402500	DR5 ~ DR0
865985000	DR5 ~ DR0

3. Data Rate

Data Rate	Configuration	Bit Rate
DR0	LoRa: SF12 / 125KHz	250
DR1	LoRa: SF11 / 125KHz	440
DR2	LoRa: SF10 / 125KHz	980
DR3	LoRa: SF9 / 125KHz	1760
DR4	LoRa: SF8 / 125KHz	3125
DR5	LoRa: SF7 / 125KHz	5470
DR6	RFU	RFU
DR7	FSK: 50Kbps	50000
DR8 ~ DR15	RFU	

4. Power Table

TxPower	Configuration
0	20 dBm
1	14 dBm
2	11 dBm
3	8 dBm
4	5 dBm
5	2 dBm
6 ~ 15	RFU

5. LinkAdrReq Command

The IN865 LoRaWAN only supports a maximum of 16 channels. When ChMaskCntl field is 0 the chMask field individually enables/disables each of the 16 channels.

ChMaxCntl	ChMask applies to		
0	Channels 1 to 16		
1	RFU		
2	RFU		
3	RFU		
4	RFU		
5	RFU		

6. Maximum Payload size

The maximum MACPayload size length (M) is given by the following table. It is derived from limitation of the PHY layer depending on the effective modulation rate used taking into account a possible repeater encapsulation layer. The maximum application payload length in the absence of the optional FOpt control field (N) is also given for information only. The value of N might be smaller if the FOpt field is not empty:

Data Rate	M	N
DR0	59	51
DR1	59	51
DR2	59	51

JUSI® 据险電氣股份有限公司 Universal Scientific Industrial Co., Ltd.

DR3	123	115	
DR4	230	222	
DR5	230	222	
DR6	230	222	
DR7	230	222	
DR8 ~ DR15	Not defined		

If the end-device will never operate with a repeater then the maximum application payload length in the absence of the optional FOpt control field should be:

Data Rate	M	N	
DR0	59	51	
DR1	59	51	
DR2	59	51	
DR3	123	115	
DR4	250	242	
DR5	250	242	
DR6	250	242	
DR7	250	242	
DR8 ~ DR15	Not defined		


7. Receive Window

The RX1 receive window uses the same channel than the preceding uplink. The data rate is a function of the uplink data rate and the RX1DROffset as following:

RX1DROffset (Code value)	0	1	2	3	4	5	6	7
Effective	0	1	2	3	4	5	-1	-2

Downstream data rate in RX1 slot = MIN (5, MAX (MinDR, Upstream data rate – Effective RX1DROffset))

The RX2 receive window uses a fixed frequency and data rate. The default parameters are: **866.550 MHz / DR2 (SF10/125KHz).**

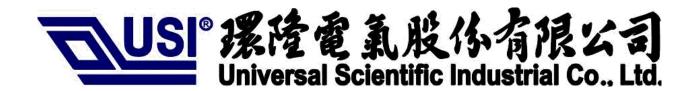

8. Default Setting

The following parameters are default values in device for the IN865 band.

ITEM	Value
RECEIVE_DELAY1	1s
RECEIVE_DELAY2	2s
JOIN_ACCEPT_DELAY1	5s
JOIN_ACCEPT_DELAY2	6s

2. AT Command Example for IN865

1) Configuration command sequence for IN865

```
# AT+WDCT=0
                          /* factory reset */
                          /* reset module */
# ATZ
                          /* disable duty cycle (optinal) */
# AT+DC=0
# AT+ADDR=<dev addr>
                           /* set lora device address */
# AT+APPEUI=<app eui>
                          /* set application eui */
# AT+NSK=<nsk>
                          /* set NSK (for ABP) */
                          /* set ASK (for ABP) */
# AT+ASK=<ask>
# AT+AK=<ak>
                          /* set AK (for OTAA) */
# AT+WDCT
                          /* save changes to eeprom */
# ATZ
                          /* reset module */
                          /* switch to IN865 BAND */
# AT+BAND=2
                          /* save changes to eeprom */
# AT+WDCT
                         /* reset module */
# ATZ
                         /* change TX data rate to DR2 */
# AT+DR=2
# AT+RX2DR=2
                         /* change RX2 data rate to DR2 */
# AT+WDCT
                         /* save changes to eeprom */
# ATZ
                         /* reset module */
```

2) Join command sequence for OTAA

AT+JOIN=1 /* join GW with OTAA protocol */

+JoinAccepted /* wait until this event happended */