## Squidstat API User Manual

Generated by Admiral Instruments LLC

March 21, 2023

1 Squidstat API User Manual	1
2 The Basics of Running Experiments	3
2.0.1 Creating A Custom Experiment	3
2.0.2 Controlling The Experiment	4
2.0.2.1 Creating Control Flow Logic Specific To A Handler	5
2.0.2.2 Connecting Slots To Device-Tracker Signals	6
3 Advanced Control Flow	9
4 Manual Experiments	13
5 Hierarchical Index	15
5.1 Class Hierarchy	15
6 Class Index	17
6.1 Class List	17
7 File Index	19
7.1 File List	19
8 Class Documentation	21
8.1 AisACData Struct Reference	21
8.1.1 Detailed Description	22
8.1.2 Member Data Documentation	22
8.1.2.1 numberOfCycles	22
8.2 AisCompRange Class Reference	22
8.2.1 Detailed Description	23
8.2.2 Constructor & Destructor Documentation	23
8.2.2.1 AisCompRange()	23
8.2.3 Member Function Documentation	23
8.2.3.1 getBandwidthIndex()	23
8.2.3.2 getCompRangeName()	24
8.2.3.3 getStabilityFactor()	24
8.2.3.4 setBandwidthIndex()	24
8.2.3.5 setCompRangeName()	24
8.2.3.6 setStabilityFactor()	25
8.3 AisConstantCurrentElement Class Reference	25
8.3.1 Detailed Description	27
8.3.2 Constructor & Destructor Documentation	27
8.3.2.1 AisConstantCurrentElement()	27
·	27
	28
	28
	28

8.3.3.4 getCurrent()	 29
8.3.3.5 getMaxCapacity()	 29
8.3.3.6 getMaxDuration()	 29
8.3.3.7 getMaxVoltage()	 29
8.3.3.8 getMinSamplingVoltageDifference()	 30
8.3.3.9 getMinVoltage()	 30
8.3.3.10 getName()	 30
8.3.3.11 getSamplingInterval()	 31
8.3.3.12 isAutoRange()	 31
8.3.3.13 isAutoVoltageRange()	 31
8.3.3.14 setApproxMaxCurrent()	 31
8.3.3.15 setApproxMaxVoltage()	 32
8.3.3.16 setAutoRange()	 32
8.3.3.17 setAutoVoltageRange()	 32
8.3.3.18 setCurrent()	 32
8.3.3.19 setMaxCapacity()	 33
8.3.3.20 setMaxDuration()	 33
8.3.3.21 setMaxVoltage()	 33
8.3.3.22 setMinSamplingVoltageDifference()	 34
8.3.3.23 setMinVoltage()	 34
8.3.3.24 setSamplingInterval()	 34
8.4 AisConstantPotElement Class Reference	 35
8.4.1 Detailed Description	 36
8.4.2 Constructor & Destructor Documentation	 36
8.4.2.1 AisConstantPotElement()	 37
8.4.3 Member Function Documentation	 37
8.4.3.1 getApproxMaxCurrent()	 37
8.4.3.2 getCategory()	 37
8.4.3.3 getMaxCapacity()	 38
8.4.3.4 getMaxCurrent()	 38
8.4.3.5 getMaxDuration()	 38
8.4.3.6 getMinCurrent()	 39
8.4.3.7 getMindIdt()	 39
8.4.3.8 getName()	 39
8.4.3.9 getPotential()	 40
8.4.3.10 getSamplingInterval()	 40
8.4.3.11 isAutoRange()	 40
8.4.3.12 isVoltageVsOCP()	 40
8.4.3.13 setApproxMaxCurrent()	 40
8.4.3.14 setAutoRange()	 41
8.4.3.15 setMaxCapacity()	 41
8.4.3.16 setMaxCurrent()	 41

8.4.3.17 setMaxDuration()	. 42
8.4.3.18 setMinCurrent()	. 42
8.4.3.19 setMindldt()	. 42
8.4.3.20 setPotential()	. 43
8.4.3.21 setSamplingInterval()	. 43
8.4.3.22 setVoltageVsOCP()	. 43
8.5 AisConstantPowerElement Class Reference	. 43
8.5.1 Detailed Description	. 45
8.5.2 Constructor & Destructor Documentation	. 45
8.5.2.1 AisConstantPowerElement()	. 45
8.5.3 Member Function Documentation	. 46
8.5.3.1 getCategory()	. 46
8.5.3.2 getMaxCapacity()	. 46
8.5.3.3 getMaxDuration()	. 46
8.5.3.4 getMaxVoltage()	. 47
8.5.3.5 getMinVoltage()	. 47
8.5.3.6 getName()	. 47
8.5.3.7 getPower()	. 48
8.5.3.8 getSamplingInterval()	. 48
8.5.3.9 isCharge()	. 48
8.5.3.10 setCharge()	. 48
8.5.3.11 setMaxCapacity()	. 49
8.5.3.12 setMaxDuration()	. 49
8.5.3.13 setMaxVoltage()	. 49
8.5.3.14 setMinVoltage()	. 50
8.5.3.15 setPower()	. 50
8.5.3.16 setSamplingInterval()	. 50
8.6 AisConstantResistanceElement Class Reference	. 51
8.6.1 Detailed Description	. 52
8.6.2 Constructor & Destructor Documentation	. 52
8.6.2.1 AisConstantResistanceElement()	. 52
8.6.3 Member Function Documentation	. 52
8.6.3.1 getCategory()	. 53
8.6.3.2 getMaxCapacity()	. 53
8.6.3.3 getMaxDuration()	. 53
8.6.3.4 getMinVoltage()	. 53
8.6.3.5 getName()	. 54
8.6.3.6 getResistance()	. 54
8.6.3.7 getSamplingInterval()	. 54
8.6.3.8 setMaxCapacity()	. 54
8.6.3.9 setMaxDuration()	. 55
8.6.3.10 setMinVoltage()	. 55

8.6.3.11 setResistance()	55
8.6.3.12 setSamplingInterval()	56
8.7 AisCyclicVoltammetryElement Class Reference	56
8.7.1 Detailed Description	57
8.7.2 Constructor & Destructor Documentation	58
8.7.2.1 AisCyclicVoltammetryElement()	58
8.7.3 Member Function Documentation	58
8.7.3.1 getApproxMaxCurrent()	58
8.7.3.2 getCategory()	59
8.7.3.3 getdEdt()	59
8.7.3.4 getEndVoltage()	59
8.7.3.5 getFirstVoltageLimit()	59
8.7.3.6 getName()	60
8.7.3.7 getNumberOfCycles()	60
8.7.3.8 getSamplingInterval()	60
8.7.3.9 getSecondVoltageLimit()	60
8.7.3.10 getStartVoltage()	61
8.7.3.11 isAutoRange()	61
8.7.3.12 isEndVoltageVsOCP()	61
8.7.3.13 isFirstVoltageLimitVsOCP()	61
8.7.3.14 isSecondVoltageLimitVsOCP()	62
8.7.3.15 isStartVoltageVsOCP()	62
8.7.3.16 setApproxMaxCurrent()	62
8.7.3.17 setAutoRange()	62
8.7.3.18 setdEdt()	63
8.7.3.19 setEndVoltage()	63
8.7.3.20 setEndVoltageVsOCP()	63
8.7.3.21 setFirstVoltageLimit()	63
8.7.3.22 setFirstVoltageLimitVsOCP()	64
8.7.3.23 setNumberOfCycles()	64
8.7.3.24 setSamplingInterval()	64
8.7.3.25 setSecondVoltageLimit()	65
8.7.3.26 setSecondVoltageLimitVsOCP()	65
8.7.3.27 setStartVoltage()	65
8.7.3.28 setStartVoltageVsOCP()	66
8.8 AisDCCurrentSweepElement Class Reference	66
8.8.1 Detailed Description	67
8.8.2 Constructor & Destructor Documentation	68
8.8.2.1 AisDCCurrentSweepElement()	68
8.8.3 Member Function Documentation	69
8.8.3.1 getCategory()	69
8.8.3.2 getEndingCurrent()	69

8.8.3.3 getMaxVoltage()	. 69
8.8.3.4 getMinVoltage()	. 70
8.8.3.5 getName()	. 70
8.8.3.6 getSamplingInterval()	. 70
8.8.3.7 getScanRate()	. 70
8.8.3.8 getStartingCurrent()	. 71
8.8.3.9 setEndingCurrent()	. 71
8.8.3.10 setMaxVoltage()	. 71
8.8.3.11 setMinVoltage()	. 71
8.8.3.12 setSamplingInterval()	. 72
8.8.3.13 setScanRate()	. 72
8.8.3.14 setStartingCurrent()	. 72
8.9 AisDCData Struct Reference	. 73
8.9.1 Detailed Description	. 73
8.10 AisDCPotentialSweepElement Class Reference	. 73
8.10.1 Detailed Description	. 75
8.10.2 Constructor & Destructor Documentation	. 75
8.10.2.1 AisDCPotentialSweepElement()	. 75
8.10.3 Member Function Documentation	. 76
8.10.3.1 getApproxMaxCurrent()	. 76
8.10.3.2 getCategory()	. 76
8.10.3.3 getEndingPot()	. 76
8.10.3.4 getName()	. 77
8.10.3.5 getSamplingInterval()	. 77
8.10.3.6 getScanRate()	. 77
8.10.3.7 getStartingPot()	. 77
8.10.3.8 isAutoRange()	. 78
8.10.3.9 isEndVoltageVsOCP()	. 78
8.10.3.10 isStartVoltageVsOCP()	. 78
8.10.3.11 setApproxMaxCurrent()	. 78
8.10.3.12 setAutoRange()	. 79
8.10.3.13 setEndingPot()	. 79
8.10.3.14 setEndVoltageVsOCP()	. 79
8.10.3.15 setSamplingInterval()	. 80
8.10.3.16 setScanRate()	. 80
8.10.3.17 setStartingPot()	. 80
8.10.3.18 setStartVoltageVsOCP()	. 80
8.11 AisDeviceTracker Class Reference	. 81
8.11.1 Detailed Description	. 82
8.11.2 Member Function Documentation	. 82
8.11.2.1 connectAllPluggedInDevices()	. 82
8.11.2.2 connectToDeviceOnComPort()	. 82

8.11.2.3 deviceDisconnected	83
8.11.2.4 getConnectedDevices()	83
8.11.2.5 getInstrumentHandler()	83
8.11.2.6 newDeviceConnected	84
8.11.2.7 updateFirmwareOnAllAvailableDevices()	84
8.11.2.8 updateFirmwareOnComPort()	85
8.12 AisDiffPulseVoltammetryElement Class Reference	85
8.12.1 Detailed Description	87
8.12.2 Constructor & Destructor Documentation	87
8.12.2.1 AisDiffPulseVoltammetryElement()	87
8.12.3 Member Function Documentation	88
8.12.3.1 getApproxMaxCurrent()	88
8.12.3.2 getCategory()	88
8.12.3.3 getEndVoltage()	88
8.12.3.4 getName()	89
8.12.3.5 getPulseHeight()	89
8.12.3.6 getPulsePeriod()	89
8.12.3.7 getPulseWidth()	90
8.12.3.8 getStartVoltage()	90
8.12.3.9 getVStep()	90
8.12.3.10 isAutoRange()	91
8.12.3.11 isEndVoltageVsOCP()	91
8.12.3.12 isStartVoltageVsOCP()	91
8.12.3.13 setApproxMaxCurrent()	91
8.12.3.14 setAutoRange()	92
8.12.3.15 setEndVoltage()	92
8.12.3.16 setEndVoltageVsOCP()	92
8.12.3.17 setPulseHeight()	93
8.12.3.18 setPulsePeriod()	93
8.12.3.19 setPulseWidth()	93
8.12.3.20 setStartVoltage()	94
8.12.3.21 setStartVoltageVsOCP()	94
8.12.3.22 setVStep()	94
8.13 AisEISGalvanostaticElement Class Reference	95
8.13.1 Detailed Description	96
8.13.2 Constructor & Destructor Documentation	96
8.13.2.1 AisEISGalvanostaticElement()	96
8.13.3 Member Function Documentation	97
8.13.3.1 getAmplitude()	97
8.13.3.2 getBiasCurrent()	97
8.13.3.3 getCategory()	97
8.13.3.4 getEndFreg()	98

8.13.3.5 getName()	98
8.13.3.6 getStartFreq()	98
8.13.3.7 getStepsPerDecade()	98
8.13.3.8 setAmplitude()	98
8.13.3.9 setBiasCurrent()	99
8.13.3.10 setEndFreq()	99
8.13.3.11 setStartFreq()	99
8.13.3.12 setStepsPerDecade()	100
8.14 AisEISPotentiostaticElement Class Reference	100
8.14.1 Detailed Description	101
8.14.2 Constructor & Destructor Documentation	101
8.14.2.1 AisEISPotentiostaticElement()	102
8.14.3 Member Function Documentation	102
8.14.3.1 getAmplitude()	102
8.14.3.2 getBiasVoltage()	102
8.14.3.3 getCategory()	103
8.14.3.4 getEndFreq()	103
8.14.3.5 getName()	103
8.14.3.6 getStartFreq()	103
8.14.3.7 getStepsPerDecade()	104
8.14.3.8 isBiasVoltageVsOCP()	104
8.14.3.9 setAmplitude()	104
8.14.3.10 setBiasVoltage()	104
8.14.3.11 setBiasVoltageVsOCP()	105
8.14.3.12 setEndFreq()	105
8.14.3.13 setStartFreq()	105
8.14.3.14 setStepsPerDecade()	106
8.15 AisErrorCode Class Reference	106
8.15.1 Detailed Description	107
8.15.2 Member Enumeration Documentation	107
8.15.2.1 ErrorCode	107
8.15.3 Member Function Documentation	108
8.15.3.1 message()	108
8.15.3.2 value()	108
8.16 AisExperiment Class Reference	109
8.16.1 Detailed Description	109
8.16.2 Constructor & Destructor Documentation	109
8.16.2.1 AisExperiment()	109
8.16.3 Member Function Documentation	110
8.16.3.1 appendElement()	110
8.16.3.2 appendSubExperiment()	110
8.16.3.3 getCategory()	111

8.16.3.4 getDescription()	111
8.16.3.5 getExperimentName()	111
8.16.3.6 operator=()	111
8.16.3.7 setDescription()	112
8.16.3.8 setExperimentName()	112
8.17 AisExperimentNode Struct Reference	112
8.17.1 Detailed Description	113
8.18 AisInstrumentHandler Class Reference	113
8.18.1 Detailed Description	115
8.18.2 Member Function Documentation	115
8.18.2.1 activeACDataReady	115
8.18.2.2 activeDCDataReady	115
8.18.2.3 deviceDisconnected	115
8.18.2.4 eraseRecoverData()	116
8.18.2.5 experimentNewElementStarting	116
8.18.2.6 experimentPaused	116
8.18.2.7 experimentResumed	117
8.18.2.8 experimentStopped	117
8.18.2.9 getExperimentUTCStartTime()	117
8.18.2.10 getFreeChannels()	117
8.18.2.11 getLinkedChannels()	118
8.18.2.12 getManualModeCurrentRangeList()	118
8.18.2.13 getNumberOfChannels()	118
8.18.2.14 groundFloatStateChanged	119
8.18.2.15 idleDCDataReady	119
8.18.2.16 isChannelBusy()	119
8.18.2.17 isChannelPaused()	120
8.18.2.18 pauseExperiment()	120
8.18.2.19 recoverDataErased	121
8.18.2.20 recoveryACDataReady	121
8.18.2.21 recoveryDCDataReady	121
8.18.2.22 resumeExperiment()	121
8.18.2.23 setCompRange()	122
8.18.2.24 setIRComp()	123
8.18.2.25 setLinkedChannels()	124
8.18.2.26 setManualModeConstantCurrent()	124
8.18.2.27 setManualModeConstantVoltage() [1/2]	125
8.18.2.28 setManualModeConstantVoltage() [2/2]	125
8.18.2.29 setManualModeOCP()	126
8.18.2.30 setManualModeSamplingInterval()	126
8.18.2.31 skipExperimentStep()	127
8.18.2.32 startManualExperiment()	127

8.18.2.33 startUploadedExperiment()	128
8.18.2.34 stopExperiment()	128
8.18.2.35 uploadExperimentToChannel() [1/2]	129
8.18.2.36 uploadExperimentToChannel() [2/2]	130
8.19 AisNormalPulseVoltammetryElement Class Reference	130
8.19.1 Detailed Description	132
8.19.2 Constructor & Destructor Documentation	132
8.19.2.1 AisNormalPulseVoltammetryElement()	132
8.19.3 Member Function Documentation	133
8.19.3.1 getApproxMaxCurrent()	133
8.19.3.2 getCategory()	133
8.19.3.3 getEndVoltage()	133
8.19.3.4 getName()	134
8.19.3.5 getPulsePeriod()	134
8.19.3.6 getPulseWidth()	134
8.19.3.7 getStartVoltage()	135
8.19.3.8 getVStep()	135
8.19.3.9 isAutoRange()	135
8.19.3.10 isEndVoltageVsOCP()	135
8.19.3.11 isStartVoltageVsOCP()	136
8.19.3.12 setApproxMaxCurrent()	136
8.19.3.13 setAutoRange()	136
8.19.3.14 setEndVoltage()	136
8.19.3.15 setEndVoltageVsOCP()	137
8.19.3.16 setPulsePeriod()	137
8.19.3.17 setPulseWidth()	137
8.19.3.18 setStartVoltage()	138
8.19.3.19 setStartVoltageVsOCP()	138
8.19.3.20 setVStep()	138
8.20 AisOpenCircuitElement Class Reference	139
8.20.1 Detailed Description	140
8.20.2 Constructor & Destructor Documentation	140
8.20.2.1 AisOpenCircuitElement()	140
8.20.3 Member Function Documentation	141
8.20.3.1 getApproxMaxVoltage()	141
8.20.3.2 getCategory()	141
8.20.3.3 getMaxDuration()	141
8.20.3.4 getMaxVoltage()	142
8.20.3.5 getMindVdt()	142
8.20.3.6 getMinVoltage()	142
8.20.3.7 getName()	143
8.20.3.8 getSamplingInterval()	143

8.20.3.9 isAutoVoltageRange()	43
8.20.3.10 setApproxMaxVoltage()	43
8.20.3.11 setAutoVoltageRange()	44
8.20.3.12 setMaxDuration()	44
8.20.3.13 setMaxVoltage()	44
8.20.3.14 setMindVdt()	44
8.20.3.15 setMinVoltage()	45
8.20.3.16 setSamplingInterval()	45
8.21 AisSquareWaveVoltammetryElement Class Reference	45
8.21.1 Detailed Description	47
8.21.2 Constructor & Destructor Documentation	47
8.21.2.1 AisSquareWaveVoltammetryElement()	47
8.21.3 Member Function Documentation	48
8.21.3.1 getApproxMaxCurrent()	48
8.21.3.2 getCategory()	48
8.21.3.3 getEndVoltage()	49
8.21.3.4 getName()	49
8.21.3.5 getPulseAmp()	49
8.21.3.6 getPulseFreq()	49
8.21.3.7 getStartVoltage()	50
8.21.3.8 getVStep()	50
8.21.3.9 isAutoRange()	50
8.21.3.10 isEndVoltageVsOCP()	50
8.21.3.11 isStartVoltageVsOCP()	51
8.21.3.12 setApproxMaxCurrent()	
8.21.3.13 setAutoRange()	51
8.21.3.14 setEndVoltage()	51
8.21.3.15 setEndVoltageVsOCP()	52
8.21.3.16 setPulseAmp()	
8.21.3.17 setPulseFreq()	52
8.21.3.18 setStartVoltage()	54
8.21.3.19 setStartVoltageVsOCP()	
8.21.3.20 setVStep()	54
9 File Documentation	57
9.1 AisCompRange.h	57
9.2 AisDataPoints.h	57
9.3 AisDeviceTracker.h	58
9.4 AisErrorCode.h	59
9.5 AisExperiment.h	59
9.6 AisInstrumentHandler.h	60
9.7 AisSquidstatGlobal.h	61

 	 	 170
 	 	 169
 	 	 169
 	 	 168
 	 	 167
 	 	 167
 	 	 166
 	 	 165
 	 	 164
 	 	 164
 	 	 163
 	 	 162
 	 	 161

# **Squidstat API User Manual**

The Admiral Instruments API gives more control of our potentiostats, and gives you the tools to integrate running our experiments in your pipeline and automating your workflow.

Our API lets you programmatically start an experiment, pause an experiment and stop an experiment. You can <a href="Download">Download</a> our API from our git repository.

For example, you may want to start an experiment with our device automatically whenever another device you have reads a certain temperature. Among other things, whenever starting, pausing or stopping an experiment happens, our API also sends a signal that you can use to control your workflow. For example, you may choose to start the next step in your pipeline whenever the experiment stops.

Let us start by going through the basics.

## The Basics of Running Experiments

The basic building block of a custom experiment are the elements. An element is an elementary experiment such as Constant Voltage/Potential (CV) or Constant Current (CC). A custom experiment can have one or more elements. The elements inside could be run one or more times. A custom experiment can also contain another custom experiment as a sub-experiment. The sub-experiment can be run one or more times as well.

We will go through an example of building and running an experiment.

#### 2.0.1 Creating A Custom Experiment

First, we will have some environment setup by creating our application:

```
#include "AisDeviceTracker.h"
#include "AisCustomExperiment.h"
#include "experiments/builder_elements/AisConstantCurrentElement.h"
#include "experiments/builder_elements/AisConstantPotElement.h"
char** test = nullptr;
int args;
QCoreApplication app(args, test);
```

To build a custom experiment, we need at least one element. In the example we will build below, we have two elements and a sub-experiment. The sub-experiment has the same two elements only with their parameters changed.

Let us go through it step by step:

We first create a constant voltage element and set its parameters as seen in the following code block. You can see a full list of the available elements in the classes section. For now, we are only setting the required parameters. You can get a complete list of settable parameters for any given element type by examining the corresponding element class.

```
// constructing a constant potential element with required arguments
AisConstantPotElement cvElement(
    5, // voltage: 5v
    1, // sampling interval: 1s
    10 // duration: 10s
);
```

Note

for each element you use, you need to include its corresponding header file.

We create another element of a different type.

```
// constructing a constant current element with required arguments
AisConstantCurrentElement ccElement(
   1, // current: 1A
   1, // sampling interval: 1s
   60 // duration: 60s
);
```

We create a custom experiment and add the previously created elements to it.

Note

Elements are run in the order that they are added to the experiment

Next, we create a second experiment as a sub-experiment i.e. we are going to then add it to the main experiment.

auto subExperiment = std::make\_shared<AisExperiment>(); // this line creates a custom experiment, intended to be used as a sub-subExperiment

subExperiment.appendElement(ccElement, 2); // append the CC element to the sub-experiment and set it to run 2 times

subExperiment.appendElement(cvElement, 3); // append the CV element to the sub-experiment and set it to run 3 times

customExperiment->appendSubExperiment(&subExperiment, 2); // append the sub-experiment to the main experiment and set the sub-experiment to run 2 times.

Again, the order adding/appending the elements and the sub-experiment here corresponds to the order at which they will run. The sub-experiment and the elements it contains will be run after the elements already added to the main experiment

We create an additional constant voltage element with a different voltage setpoint.

```
AisConstantPotElement cvElement_2(
    4, // voltage: 4v
    1, // sampling interval: 1s
    10 // duration: 10s
);
```

This concludes creating the experiment. Next is how to control the workflow of the experiment.

#### 2.0.2 Controlling The Experiment

So far, we have only created the experiment. But we need to start it and control it. The next code section employs a callback mechanism specific to Qt, called signals and slots. Callbacks are used to take an action when a specified condition is met i.e. control the workflow. For simplicity, we provided some common slots related to our API with comments inside, on what you can do. You can read more about Qt signals and slots in the following link: https://doc.qt.io/qt-5/signalsandslots.html

Reading this document should still cover most of what is needed. Basically, a signal can be emitted when an event happens. If a slot is connected to that signal, whatever is inside that slot will be executed when the signal is emitted. You can think of a signal as a condition and a slot is what will be executed once a corresponding condition is met. The only difference is the order of execution. Normal execution have sequential order. However, a slot can be emitted at anytime. Whenever that happens, the slot will execute no matter where the connection has been made (as long as a connection has been made prior). That is how we can have extra control on how and when things are executed.

An experiment is run on a specific channel of a device. You may have more than one device connected. A single device has up to 4 channels. Any channel on a specific device can run a single experiment at a time. To start an experiment, we specify the device and the channel and, then start it. To stop or pause that experiment, we need to specify its corresponding device and channel. We need to keep track of the device and channel for each experiment we start so we can control it later.

We can control a device, including starting, pausing and stopping an experiment on a specific channel using an AisInstrumentHandler A device/instrument handler can be created given a device name that we detect.

We have two parts below: one that creates logic using signals and slots. The second part assigns that logic to an instrument handler which will discuss in a bit. The first part below is creating some control-flow logic that we can assign to a handler. We can also create other logics in the same way that can be assigned to different handlers which can be used to control different devices. If we only have one device, all the logic will be handled with one handler. We can then have further control within, based on channels.

#### 2.0.2.1 Creating Control Flow Logic Specific To A Handler

The first part is a lambda function called "connectHandlerSignals" which takes a handler as an argument and connects some of the handler signals to slots. We have other signals related to a handler you can add, which you can find in the AisInstrumentHandler This example logic has four conditions on which we can perform other tasks. That is, when we assign this logic to a specific handler, this logic will execute for that handler. The four signals and slots below in the first part are examples for you to follow in order to add other connections.

```
auto connectHandlerSignals = [=](AisInstrumentHandler* handler) {
    QObject::connect(handler, &AisInstrumentHandler::activeDCDataReady, [=] (uint8_t channel, const
      AisDCData& data) {
        // do something when DC data are received, such as writing to a CSV file output
        // THIS IS WHERE YOU RECEIVE DC DATA FROM THE DEVICE
        //example: print the data to the standard output as follows:
qDebug() « "channel: " « (int)channel « "current :" « data.current « "
                                                                                     voltage:
      data.workingElectrodeVoltage « "
                                          counter electrode : " « data.counterElectrodeVoltage « "
                   " « data.timestamp;
      timestamp :
    });
    QObject::connect(handler, &AisInstrumentHandler::activeACDataReady, [=] (uint8_t channel, const
      AisACData&) {
        // do something when AC data are received
        // THIS IS WHERE YOU RECEIVE AC (EIS) DATA FROM THE DEVICE
    QObject::connect(handler, &AisInstrumentHandler::experimentNewElementStarting, [=] (uint8_t channel,
      const AisExperimentNode&) {
        // do something when a new element is starting
        // for example, print to the standard output: "New element starting"
        qDebug() « "New element starting";
    QObject::connect(handler, &AisInstrumentHandler::experimentStopped, [=](uint8_t channel) {
        // do something when the experiment has stopped or has been stopped. For example, you can invoke
      starting the next step in your workflow
        // print to the standard output: "Experiment stopped Signal "
        qDebug() « "Experiment Stopped Signal "
                                                 « channel;
    });
```

For a more complex logic for running a sequence of experiments, please refer to this example

If you would like to output the incoming data to a file such as a CSV file, you may modify the last block to something as follows:

```
OString filePath:
auto connectHandlerSignals = [=, &filePath] (const AisInstrumentHandler* handler) {
    QObject::connect(handler, &AisInstrumentHandler::experimentNewElementStarting, [=, &filePath](uint8_t
       channel, const AisExperimentNode& node) {
      auto utcTime = handler->getExperimentUTCStartTime(0);
auto name = "/" + QString::number(node.stepNumber) + " " + node.stepName + " " +
QString::number(utcTime) + ".csv";
         filePath = (OString(OStandardPaths::writableLocation(OStandardPaths::DesktopLocation)) + name);
        OFile file(filePath);
          f (!file.open(QIODevice::WriteOnly | QIODevice::Text)) // overwrite existing files with the same
             return;
        OTextStream out(&file):
        out « "Time Stamp,"
             « "Counter Electrode Voltage,
             « "Working Electrode Voltage,"
             « "Current"
             « "\n";
         file.close();
        qDebug() « "New element beginning: " « node.stepName « "step: " « node.stepNumber;
    });
    QObject::connect(handler, &AisInstrumentHandler::activeDCDataReady, [=, &filePath](uint8_t channel,
      const AisDCData& data) {
    qDebug() « "current :" « data.current « " voltage: " « data.workingElectrodeVoltage « " counter
    electrode : " « data.counterElectrodeVoltage « " timestamp : " « data.timestamp;
         if (!file.open(OIODevice::Append | OIODevice::WriteOnly | OIODevice::Text))
             return;
         QTextStream out(&file);
         out « data.timestamp « ","
             « data.counterElectrodeVoltage « ",'
             « data.workingElectrodeVoltage « ","
             « data.current
             « "\n";
         file.close();
    QObject::connect(handler, &AisInstrumentHandler::activeACDataReady, [=] (uint8_t channel, const
      AisACData& data) {
        qDebug() « data.frequency « " \,
                                                    " « data.absoluteImpedance « "
                                                                                                " « data.phaseAngle;
    });
    QObject::connect(handler, &AisInstrumentHandler::experimentStopped, [=](uint8_t channel) {
```

```
qDebug() « "Experiment Completed Signal " « channel;
});
```

Here we output the DC data to a CSV file but, you may do that for AC data as well in the same manner.

You may also find it useful to refer to C++ lambdas documentation: https://docs.microsoft.← com/en-us/cpp/cpp/lambda-expressions-in-cpp

#### 2.0.2.2 Connecting Slots To Device-Tracker Signals

There are two signals related to a device tracker: when a device is connected and second, when a device is disconnected.

**2.0.2.2.1** When a Device is Connected This connects a slot to the device tracker's AisDeviceTracker::newDeviceConnected signal that provides the device name. Because we have the device name, we can create a device handler and do whatever a handler can do. In this slot example, we are creating a handler, assigning the previously created logic to this handler and then starting an experiment.

```
QObject::connect(tracker, &AisDeviceTracker::newDeviceConnected, &app, [=](const QString& deviceName) {
   // Do something when a new device is detected to be connected.
                                                                    The device name is given in the variable
     'deviceName'
    // The following lines start the experiment that we created
   auto handler = tracker->getInstrumentHandler(deviceName); // create a device handler using the given
     device name
   connectHandlerSignals(handler); // connect the signals we created for the device. This is done once per
     device.
   auto error = handler->uploadExperimentToChannel(0, customExperiment); // upload to a specific channel
      (first arg) an experiment (second arg) on the given
   device controlled by the handler.
    if (error) {
       qDebug() « error.message();
       return:
   auto error = handler->startUploadedExperiment(0); // start the previously uploaded experiment on the
        gDebug() « error.message();
        return:
});
```

Please refer to AisInstrumentHandler for possible errors that may occur when performing operations such as uploading and starting an experiment. For example, when uploading an experiment, AisInstrumentHandler::uploadExperimentToChannel may return an AisErrorCode::InvalidParameters error if the parameters are out of range where you can display the message to check which parameter was not supported for your device.

Note

Specific to the cycler model, before starting an experiment, you have the option of linking channels so that you can share the electric current over multiple channels using AisInstrumentHandler::setLinkedChannels. If using paralleled channels, AisInstrumentHandler::setLinkedChannels MUST be called before each experiment that uses paralleled channels. To link channels on the cycler, you can modify the last code by first linking the channels, and then uploading and starting the experiment on the master channel for the linked channels:

**2.0.2.2.2 When a Device is Disconnected** The following code connects a slot to the device tracker's AisDeviceTracker::deviceDisconnected signal with the device name.

```
QObject::connect(tracker, &AisDeviceTracker::deviceDisconnected, &app, [=](const QString& deviceName) {
    // do something when a device has been disconnected. The device name is given in the variable
    'deviceName'
    // for example, print to the standard output that the device given is disconnected
    qDebug() « deviceName « "is disconnected ";
});
```

We still have not started the experiment, we've only created an experiment and setup callback functions via signals. When we connect a device using the tracker as shown below, the AisDeviceTracker::newDeviceConnected signal will be emitted with the device name. As a result, the slot we connected earlier to the signal AisDeviceTracker::newDeviceConnected will execute (connecting the other signals and running the experiment).

Note

in the example we showed, the function connectHandlerSignals is intentionally called inside the AisDeviceTracker::newDeviceConnected slot because connectHandlerSignals needs a valid handler. When AisDeviceTracker::newDeviceConnected is emitted, we know we can get a device handler for the newly connected device and then control the device with the handler.

Now to connect the device, the easiest way to connect all plugged-in devices is to call AisDeviceTracker::connectAllPluggedInDevices ();

tracker->connectAllPluggedInDevices();

To connect specific devices, you may alternatively call AisDeviceTracker::connectToDeviceOnComPort with a specific COM port.

```
tracker->connectToDeviceOnComPort("COM3"); // change the port number to yours. For example, in windows, you
can find it from the device manager
```

Finally, we can start the application by calling: app.exec();

In the next section, we introduce a more advanced control flow.

The Basics of Running Experimer	nt	١t
---------------------------------	----	----

### **Advanced Control Flow**

This page assumes familiarity with concepts covered in the basics. This shows how to run a sequence of experiments and controlling when to stop an experiment and start another based on external conditions. For simplicity, we are assuming having a single device connected and we are running on a single channel. So, we will not have to keep track of devices and channels. We will just focus on running and controlling the workflow of different experiments.

First we will set the environment and create the experiments:

```
// environment setup: creating the app
char** test = nullptr:
int args:
QCoreApplication app(args, test);
// constructing a constant potential element with required arguments
AisConstantPotElement cvElement(
    5, // voltage: 5v
    1, // sampling interval: 1s
    10 // duration: 10s
// constructing a constant current element with required arguments
AisConstantCurrentElement ccElement(
    0.002, // current: 0.002A
    1, // sampling interval: 1s
    10 // duration: 10s
auto experimentA = std::make_shared<AisExperiment>(); // create a custom experiment
experimentA->appendElement(cvElement, 1); // append to experimentA, the created CV element and set it to run
auto experimentB = std::make_shared<AisExperiment>(); // create a second experiment
experimentB->appendElement(ccElement, 1); // append to experimentB, the created CC element and set it to run
      1 time
auto experimentC = std::make_shared<AisExperiment>(); // create a third experiment
experimentC->appendElement(cvElement, 2); // append to experimentC, the created CV element and set it to run
```

Now we have the experiments set up. Next we will create the logic for the sequence of experiments. We will be using timers as external conditions to control the workflow. You may substitute that with your own conditions.

The following lambda function creates a logic and assigns it to the given handler. We will call this function after the AisDeviceTracker::newDeviceConnected signal has been emitted and a handler has been created. The workflow will be as follows:

- · Start the first timer
- · Once the timer times out, start Experiment A
- · Once Experiment A completes, start the second timer
- · Once the second timer times out, start Experiment B
- Start a third timer to stop Experiment B early
- · Once the third timer times out, stop Experiment B

10 Advanced Control Flow

- · Start a fourth timer
- · Once the fourth timer times out, start Experiment C
- Once Experiment C completes, start Experiment B

```
auto createLogic = [&](AisInstrumentHandler* handler) {
    QTimer* timer1 = new QTimer(); // the first timer is used in lieu of the first external condition
    timer1->setSingleShot(true);
    timer1->start(1000);
    QObject::connect(timer1, &QTimer::timeout, [=]() {
         qDebug() « "Initial condition met. Starting Experiment A ";
         handler->uploadExperimentToChannel(0, experimentA);
         handler->startUploadedExperiment(0);
         // once the first experiment is completed (Experiment A), start the next experiment (Experiment B). // this signal will be emitted for any experiment not just A so, we will track of the sequence with
      experimentStep
          ^{\prime}/ once an experiment has completed or has been stopped, continue to the next experimentStep
         QObject::connect(handler, &AisInstrumentHandler::experimentStopped, [&](uint8_t channel) {
             static int experimentStep = 0;
qDebug() « "Experiment Step " « experimentStep « " Completed";
             experimentStep++; //increment the experiment step
             if (experimentStep == 1) {
                  // Wait for external start condition
                  QTimer* timer = new QTimer(); // the timer is used in lieu of an external condition
                  timer->setSingleShot(true);
                  timer->start(10000); // when this timer times out, the next experiment (Experiment B) will
      start
                  // Create an external condition that will stop the upcoming experiment early
                  QTimer* StopEarlyTimer = new QTimer();
                  StopEarlyTimer->setSingleShot(true);
                  QObject::connect(StopEarlyTimer, &QTimer::timeout, [&]() {
    qDebug() « "External early stop condition met";
    handler->StopExperiment(0); // Once the external condition is met, experiment B will
      stop, and the experimentCompleted signal will be emitted
                  QObject::connect(timer, &QTimer::timeout, [&,StopEarlyTimer]()
                      qDebug() « "External condition met, starting experiment B";
handler->uploadExperimentToChannel(0, experimentB); // start Experiment B
                       handler->startUploadedExperiment(0);
                       StopEarlyTimer->start(2000);
                  });
                     if (experimentStep == 2) {
                  QTimer* timer = new QTimer(); // the timer is used in lieu of an external condition
                  timer->setSingleShot(true);
                  timer->start(10000); // when this timer times out, the next experiment (Experiment C) will
      start
                  OObject::connect(timer, &OTimer::timeout, [&]() {
                       qDebug() « "External condition met, starting Experiment C ";
                       handler->uploadExperimentToChannel(0, experimentC); // start Experiment C
                      handler->startUploadedExperiment(0);
                  });
             } else if (experimentStep == 3) {
                  QTimer* timer = new QTimer(); // the timer is used in lieu of an external condition
                  timer->setSingleShot(true);
                  timer->start(10000); // when this timer times out, the next experiment (Experiment B) will
      start
                  QObject::connect(timer, &QTimer::timeout, [&]() {
                       qDebug() « "External condition met, starting Experiment B ";
handler->uploadExperimentToChannel(0, experimentB); // start Experiment B
                       handler->startUploadedExperiment(0);
                  });
   });
```

This logic we have shown demonstrates how to start and stop experiments based on external conditions/variables, and how to do so based on the behavior of other experiments as well.

We then connect the tracker's signals as we have explained in more details before.

```
tracker->connectToDeviceOnComPort("COM3"); // change the port number to your device. For example, in
  windows, you can find it from the device manager
```

Finally, you can start the application as follows:

```
app.exec();
```

Note however that this will hold your execution thread. That would be fine if this is your main application or if you have previously spawned a thread specifically for this application. Alternatively, you can start the application as follows:

```
// process events while channel 0 is busy
while (handler.isChannelBusy(0)) {
    app.processEvents();
}
app.processEvents();
```

You can learn more about Qt app execution here: https://doc.qt.io/qt-5/qcoreapplication. $\leftarrow$ html#static-public-members

12 Advanced Control Flow

## **Manual Experiments**

We have seen before the basics of running experiments. We created our custom experiment using prebuilt elements. These elements have presets for controlling the voltage and current. You can still do that yourself in real time, if you wish to do so, using manual experiments. With a manual experiment, you have the option of running in galvanostatic mode -where you can control the current- or potentiostatic mode where you can control the voltage.

First, we do environment setup as usual:

```
char** test = nullptr;
int args;
QCoreApplication app(args, test);
```

Since we are doing a manual experiment, we will not create a custom experiment but jump to creating the logic. The following is a simple logic:

```
auto createLogic = [=] (const AisInstrumentHandler* handler) {
   QObject::connect(handler, &AisInstrumentHandler::activeDCDataReady, [=](uint8_t channel, const
     AisDCData& data) {
    qDebug() « "channel : " « channel «" current :" « data.current « " voltage: " «
     counter electrode: " « data.counterElectrodeVoltage « " time-stamp : " «
     data.timestamp;
   });
   QObject::connect(handler, &AisInstrumentHandler::activeACDataReady, [=] (uint8_t channel, const
     AisACData& data) {
       qDebug() « data.frequency « "
                                             " « data.absoluteImpedance « "
                                                                                    " « data.phaseAngle;
   QObject::connect(handler, &AisInstrumentHandler::experimentNewElementStarting, [=] (uint8_t channel,
     const AisExperimentNode&) {
   qDebug() « "New Node beginning ";
   QObject::connect(handler, &AisInstrumentHandler::experimentStopped, [=](uint8_t channel) {
       qDebug() « "Experiment Completed Signal " « channel;
```

You can see more advanced logic in in the Advanced Control Flow.

Next, we will start the manual experiment after getting the handler:

```
QObject::connect(tracker, &AisDeviceTracker::newDeviceConnected, &app, [=](const QString& deviceName) {
    auto& handler = tracker->getInstrumentHandler(deviceName); // get an instrument handler once the device
    is connected
    createLogic(&handler); // assign the previously created logic to the handler.
    handler.startManualExperiment(1); // start a manual experiment on channel 1
    handler.setManualModeSamplingInterval(1, 2); // set manual experiment sampling interval on channel 1 to
        be 2 seconds
    handler.setManualModeConstantVoltage(1, 2); // on channel 1, set constant 2V
});
```

14 Manual Experiments

#### Note

Unlike when creating elements, you set the parameters after starting the manual experiment because control is done in real time.

We can utilize timers to control the experiment and perform other manual operations:

```
// stop the experiment after 25 seconds
QTimer::singleShot(25000, [=,&handler]() {
    handler.stopExperiment(1);
});
```

You can see all the manual operations in AisInstrumentHandler

Finally, we start the application:

app.exec();

# **Hierarchical Index**

### 5.1 Class Hierarchy

This inheritance list is sorted roughly, but not completely, alphabetically:

AisACData	21
AisCompRange	22
AisConstantCurrentElement	25
AisConstantPotElement	35
AisConstantPowerElement	43
AisConstantResistanceElement	51
AisCyclicVoltammetryElement	56
AisDCCurrentSweepElement	66
AisDCData	73
AisDCPotentialSweepElement	73
AisDiffPulseVoltammetryElement	35
AisEISGalvanostaticElement	95
AisEISPotentiostaticElement	)(
AisErrorCode	)6
AisExperiment	)9
AisExperimentNode	12
AisNormalPulseVoltammetryElement	
AisOpenCircuitElement	
AisSquareWaveVoltammetryElement	45
QObject	
AisDeviceTracker	31
AisInstrumentHandler	13

16 Hierarchical Index

# **Class Index**

### 6.1 Class List

Here are the classes, structs, unions and interfaces with brief descriptions:

Ais	sACData	
	Structure containing AC data information	21
Ais	sCompRange	
	This class has advanced options controlling the device stability including the bandwidth index	
	and the stability factor	22
Ais	sConstantCurrentElement	
	Experiment that simulates a constant current flow with more advance options for stopping the	
	experiment.	
	25	
Ais	sConstantPotElement	
	Experiment that simulates a constant applied voltage.	
	35	
Ais	sConstantPowerElement	
	This experiment simulates a constant power, charge or discharge".	
	43	
Ais	sConstantResistanceElement	
	This element/experiment simulates a constant resistance load.	
	51	
Ais	sCyclicVoltammetryElement	
	This experiment sweeps the potential of the working electrode back and forth between the first	
	voltage-limit and the second voltage-limit at a constant scan rate (dE/dt) for a specified num-	
	ber of cycles	56
Ais	sDCCurrentSweepElement	
	This experiment performs a DC current sweep from the starting current to the ending current	
	which progresses linearly according to the <b>scan rate</b>	66
Ais	sDCData	
	Structure containing DC data information	73
Ais	sDCPotentialSweepElement	
	This experiment performs a DC potential sweep from the <b>starting current</b> to the <b>ending current</b>	70
۸.	which progresses linearly according to the <b>scan rate</b>	73
Ais	sDeviceTracker	
	This class is used track device connections to the computer. It can establish connection with	
	plugged-in devices. It also provides instrument handlers specific to each connected device which	0.4
	can provide control of the specific device like starting experiments	81

18 Class Index

AisDiffPulseVoltammetryElement	
In this experiment, the working electrode holds at a <b>starting potential</b> during the <b>quiet time</b> . Then it applies a train of pulses superimposed on a staircase waveform, with a uniform <b>potential</b>	
step size. The potential continues to step until the final potential is reached	85
AisEISGalvanostaticElement	
This experiment records the complex impedance of the experimental cell in galvanostatic mode, starting from the <b>start frequency</b> and sweeping through towards the <b>end frequency</b> , with a fixed number of frequency <b>steps per decade</b>	95
AisEISPotentiostaticElement	
This experiment records the complex impedance of the experimental cell in potentiostatic mode, starting from the <b>start frequency</b> and sweeping through towards the <b>end frequency</b> , with a fixed number of frequency <b>steps per decade</b>	100
AisErrorCode	100
This class contains the possible error codes returned to the user when working with the API	106
AisExperiment	100
This class is used to create custom experiments. A custom experiment has a container of con-	
tains one or more elements. Once you create elements are set their parameters, you can add them to the container	109
AisExperimentNode	
Structure containing some information regarding the running element	112
AisInstrumentHandler	
This class provides control of the device including starting, pausing, resuming and stopping an experiment on a channel as well as reading the data and other controls of the device	113
AisNormalPulseVoltammetryElement	
This experiment holds the working electrode at a <b>baseline potential</b> during the <b>quiet time</b> , then applies a train of pulses, which increase in amplitude until the <b>final potential</b> is reached	130
AisOpenCircuitElement	
This experiment observes the <b>open circuit potential</b> of the working electrode for a specific period of time.	
139	
AisSquareWaveVoltammetryElement	
This experiment holds the working electrode at the <b>starting potential</b> during the <b>quiet time</b> . Then it applies a train of square pulses superimposed on a staircase waveform with a uniform	
	145

## File Index

### 7.1 File List

Here is a list of all documented files with brief descriptions:

AisCompRange.h
AisDataPoints.h
AisDeviceTracker.h
AisErrorCode.h
AisExperiment.h
AisInstrumentHandler.h
AisSquidstatGlobal.h
AisAbstractElement.h
AisConstantCurrentElement.h
AisConstantPotElement.h
AisConstantPowerElement.h
AisConstantResistanceElement.h
AisCyclicVoltammetryElement.h 165
AisDCCurrentSweepElement.h
AisDCPotentialSweepElement.h 167
AisDiffPulseVoltammetryElement.h
AisEISGalvanostaticElement.h
AisEISPotentiostaticElement.h
AisNormalPulseVoltammetryElement.h
AisOpenCircuitElement.h
AisSquareWayeVoltammetryFlement h

20 File Index

### **Class Documentation**

#### 8.1 AisACData Struct Reference

a structure containing AC data information.

#include <AisDataPoints.h>

#### **Public Attributes**

double timestamp

the time at which the AC data arrived.

· double frequency

the applied frequency in Hz.

• double absoluteImpedance

the magnitude of the complex impedance.

• double realImpedance

the real part of the complex impedance.

• double imagImpedance

the imaginary part of the complex impedance.

· double phaseAngle

the phase angle between the real and the imaginary parts of the impedance.

• double totalHarmonicDistortion

the percentage of the total harmonic distortion in the AC signal.

• double numberOfCycles

the number of cycles specific to the reported frequency.

• double workingElectrodeDCVoltage

the DC working electrode voltage in volts.

double DCCurrent

the DC electric current value in Amps

• double currentAmplitude

the amplitude of the AC current.

• double voltageAmplitude

the amplitude of the AC voltage.

22 Class Documentation

### 8.1.1 Detailed Description

a structure containing AC data information.

#### 8.1.2 Member Data Documentation

#### 8.1.2.1 numberOfCycles

```
double AisACData::numberOfCycles
```

the number of cycles specific to the reported frequency.

In EIS, we run a range of frequencies. For each frequency, a specific number of cycles are run. The higher the frequency, the more number of cycles.

The documentation for this struct was generated from the following file:

· AisDataPoints.h

### 8.2 AisCompRange Class Reference

This class has advanced options controlling the device stability including the bandwidth index and the stability factor.

```
#include <AisCompRange.h>
```

#### **Public Member Functions**

- AisCompRange (const QString &compRangeName, uint8\_t bandwidthIndex, uint8\_t stabilityFactor)
   constructor for the compensation-range object.
- AisCompRange (const AisCompRange &)

copy constructor for the compensation-range object.

uint8\_t getBandwidthIndex () const

get the value set for the bandwidth index.

void setBandwidthIndex (uint8\_t index)

set the index value for the bandwidth.

• uint8\_t getStabilityFactor () const

get the value set for the stability factor.

void setStabilityFactor (uint8\_t factor)

set a value for the stability factor.

void setCompRangeName (const QString &compRangeName)

set a name for the compensation range for reference purposes.

• const QString & getCompRangeName () const

get the name set for the compensation range.

# 8.2.1 Detailed Description

This class has advanced options controlling the device stability including the bandwidth index and the stability factor.

### See also

```
setBandwidthIndex
setStabilityFactor
```

## 8.2.2 Constructor & Destructor Documentation

### 8.2.2.1 AisCompRange()

constructor for the compensation-range object.

#### **Parameters**

compRangeName	a name to set for the compensation range for reference purposes.
bandwidthIndex	the index value for the bandwidth.
stabilityFactor	the factor value for the stability.

#### See also

```
setBandwidthIndex
setStabilityFactor
```

## 8.2.3 Member Function Documentation

# 8.2.3.1 getBandwidthIndex()

```
uint8_t AisCompRange::getBandwidthIndex ( ) const
get the value set for the bandwidth index.
```

### Returns

the set value for the bandwidth index.

## See also

setBandwidthIndex

## 8.2.3.2 getCompRangeName()

```
const QString & AisCompRange::getCompRangeName ( ) const
```

get the name set for the compensation range.

### Returns

the name set for the compensation range.

## 8.2.3.3 getStabilityFactor()

```
uint8_t AisCompRange::getStabilityFactor ( ) const
```

get the value set for the stability factor.

#### Returns

the value set for the stability factor.

### 8.2.3.4 setBandwidthIndex()

set the index value for the bandwidth.

Usually, the device's default index value is optimal for running experiments. You may still increase the index within the range 0-10 as you run higher frequency experiments to see what best fits.

#### **Parameters**

	index	the index value for the bandwidth (0-10).	
--	-------	---	--

# 8.2.3.5 setCompRangeName()

set a name for the compensation range for reference purposes.

#### **Parameters**

compRangeName	the name to set for the compensation range.
---------------	---

### 8.2.3.6 setStabilityFactor()

set a value for the stability factor.

Usually, the device's default factor value is optimal for running experiments. You may still increase the factor within the range 0-10 as you run experiments with more oscillations to see what best fits.

### **Parameters**

factor the stability-factor value (0-10)	
--	--

The documentation for this class was generated from the following file:

· AisCompRange.h

## 8.3 AisConstantCurrentElement Class Reference

an experiment that simulates a constant current flow with more advance options for stopping the experiment.

```
#include <AisConstantCurrentElement.h>
```

Inherits AisAbstractElement.

## **Public Member Functions**

· AisConstantCurrentElement (double current, double samplingInterval, double duration)

the constant current element constructor.

AisConstantCurrentElement (const AisConstantCurrentElement &)

copy constructor for the AisConstantCurrentElement object.

AisConstantCurrentElement & operator= (const AisConstantCurrentElement &)

overload equal to operator for the AisConstantCurrentElement object.

• QString getName () const override

get the name of the element.

QStringList getCategory () const override

get a list of applicable categories of the element.

• double getCurrent () const

get the value set for the current.

void setCurrent (double current)

set the value for the current.

• double getSamplingInterval () const

get how frequently we are sampling the data.

void setSamplingInterval (double samplingInterval)

set how frequently we are sampling the data.

• double getMinSamplingVoltageDifference () const

get the minimum sampling voltage difference for reporting the data.

• void setMinSamplingVoltageDifference (double minVoltageDifference)

set a minimum sampling voltage difference for reporting the voltage.

• double getMaxVoltage () const

get the value set for the maximum voltage. The experiment will end when it reaches this value.

void setMaxVoltage (double maxVoltage)

set a maximum voltage to stop the experiment.

• double getMinVoltage () const

get the value set minimum for the voltage in volts.

• void setMinVoltage (double minVoltage)

set a minimum voltage to stop the experiment.

double getMaxDuration () const

get the maximum duration set for the experiment. The experiment will end when the duration of the experiment reaches this value.

void setMaxDuration (double maxDuration)

set the maximum duration for the experiment.

double getMaxCapacity () const

get the value set for the maximum capacity / cumulative charge.

void setMaxCapacity (double maxCapacity)

set the value for the maximum capacity / cumulative charge in Coulomb.

· bool isAutoRange () const

tells whether the current range is set to auto-select or not.

void setAutoRange ()

set to auto-select the current range.

double getApproxMaxCurrent () const

get the value set for the expected maximum current.

void setApproxMaxCurrent (double approxMaxCurrent)

set maximum current expected, for manual current range selection.

• bool isAutoVoltageRange () const

tells whether the voltage range is set to auto-select or not.

void setAutoVoltageRange ()

set to auto-select the voltage range.

double getApproxMaxVoltage () const


get the value set for the expected maximum voltage.

void setApproxMaxVoltage (double approxMaxVoltage)

set maximum voltage expected, for manual voltage range selection.

# 8.3.1 Detailed Description

an experiment that simulates a constant current flow with more advance options for stopping the experiment.

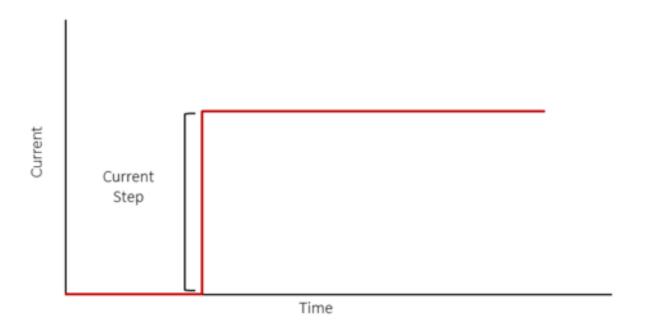

### 8.3.2 Constructor & Destructor Documentation

### 8.3.2.1 AisConstantCurrentElement()

the constant current element constructor.

## Parameters

current	the value for the current in Amps.
samplingInterval	the data sampling interval value in seconds.
duration	the maximum duration for the experiment in seconds.

# 8.3.3 Member Function Documentation

### 8.3.3.1 getApproxMaxCurrent()

 $\verb|double AisConstantCurrentElement::getApproxMaxCurrent ( ) const$ 

get the value set for the expected maximum current.

#### Returns

the value set for the expected maximum current in Amps.

#### Note

if nothing was manually set, the device will auto-select the current range and the return value will be positive infinity.

### 8.3.3.2 getApproxMaxVoltage()

double AisConstantCurrentElement::getApproxMaxVoltage ( ) const

get the value set for the expected maximum voltage.

### Returns

the value set for the expected maximum Voltage in volt.

### Note

if nothing was manually set, the device will auto-select the voltage range and the return value will be positive infinity.

## 8.3.3.3 getCategory()

QStringList AisConstantCurrentElement::getCategory ( ) const [override]

get a list of applicable categories of the element.

## Returns

A list of applicable categories: ("Galvanostatic Control", "Basic Experiments").

### 8.3.3.4 getCurrent()

 $\label{thm:double_AisConstantCurrentElement::getCurrent ( ) const} \\ \\ \text{get the value set for the current.} \\$ 

### Returns

the value for the current in Amps.

### 8.3.3.5 getMaxCapacity()

double AisConstantCurrentElement::getMaxCapacity ( ) const

get the value set for the maximum capacity / cumulative charge.

#### Returns

the value set for the maximum capacity in Coulomb.

#### Note

this is an optional parameter. If no value has been set, the default value is positive infinity.

### 8.3.3.6 getMaxDuration()

double AisConstantCurrentElement::getMaxDuration ( ) const

get the maximum duration set for the experiment. The experiment will end when the duration of the experiment reaches this value.

## Returns

the maximum duration for the experiment in seconds.

### 8.3.3.7 getMaxVoltage()

double AisConstantCurrentElement::getMaxVoltage ( ) const

get the value set for the maximum voltage. The experiment will end when it reaches this value.

### Returns

the value set for the maximum voltage.

### Note

this is an optional parameter. If no value has been set, the default value is positive infinity

### 8.3.3.8 getMinSamplingVoltageDifference()

double AisConstantCurrentElement::getMinSamplingVoltageDifference ( ) const

get the minimum sampling voltage difference for reporting the data.

get the value set for the minimum sampling voltage difference.

#### Returns

the value set for the minimum sampling voltage difference.

### See also

setMinSamplingVoltageDifference

#### Note

this is an optional parameter. If no value has been set, the default value is negative infinity.

### 8.3.3.9 getMinVoltage()

```
double AisConstantCurrentElement::getMinVoltage ( ) const
```

get the value set minimum for the voltage in volts.

#### Returns

the value set for the minimum voltage in volts.

#### Note

this is an optional parameter. If no value has been set, the default value is negative infinity

## 8.3.3.10 getName()

```
QString AisConstantCurrentElement::getName ( ) const [override]
```

get the name of the element.

### Returns

The name of the element: "Constant Current, Advanced".

### 8.3.3.11 getSamplingInterval()

```
\verb|double AisConstantCurrentElement::getSamplingInterval () const|\\
```

get how frequently we are sampling the data.

#### Returns

the data sampling interval value in seconds.

### 8.3.3.12 isAutoRange()

```
bool AisConstantCurrentElement::isAutoRange ( ) const
```

tells whether the current range is set to auto-select or not.

#### Returns

true if the current range is set to auto-select and false if a range has been selected.

### 8.3.3.13 isAutoVoltageRange()

```
bool AisConstantCurrentElement::isAutoVoltageRange ( ) const
```

tells whether the voltage range is set to auto-select or not.

### Returns

true if the voltage range is set to auto-select and false if a range has been selected.

### 8.3.3.14 setApproxMaxCurrent()

set maximum current expected, for manual current range selection.

The is an **optional** parameter. If nothing is set, the device will auto-select the current range.

approxMaxCurrent	the value for the maximum current expected in Amps.

### 8.3.3.15 setApproxMaxVoltage()

set maximum voltage expected, for manual voltage range selection.

The is an **optional** parameter. If nothing is set, the device will auto-select the voltage range.

### **Parameters**

approxMaxVoltage	the value for the maximum current expected in V.
------------------	--

### 8.3.3.16 setAutoRange()

```
void AisConstantCurrentElement::setAutoRange ( )
```

set to auto-select the current range.

This option is set by default. There is no need to call this function to auto-select if the range was not manually set.

## 8.3.3.17 setAutoVoltageRange()

```
void AisConstantCurrentElement::setAutoVoltageRange ( )
```

set to auto-select the voltage range.

This option is set by default. There is no need to call this function to auto-select if the range was not manually set.

# 8.3.3.18 setCurrent()

```
void AisConstantCurrentElement::setCurrent ( \mbox{double } \mbox{\it current} \mbox{\ )}
```

set the value for the current.

current	the value for the current in Amps.

### 8.3.3.19 setMaxCapacity()

set the value for the maximum capacity / cumulative charge in Coulomb.

The is an **optional** condition. If nothing is set, then the experiment will not stop based on an upper-limit cumulative charge value. If a maximum capacity is set, the experiment will continue to run as long as the cumulative charge is below that value.

#### **Parameters**

maxCapacity the value to se	et for the cell maximum capacity.
-----------------------------	-----------------------------------

### 8.3.3.20 setMaxDuration()

```
void AisConstantCurrentElement::setMaxDuration ( \mbox{double } \textit{maxDuration} \ )
```

set the maximum duration for the experiment.

The experiment will continue to run as long as the time passed is less than the value to set.

#### **Parameters**

	maxDuration	the maximum duration for the experiment in seconds.
--	-------------	---

## 8.3.3.21 setMaxVoltage()

set a maximum voltage to stop the experiment.

The is an **optional** condition. If nothing is set, then the experiment will not stop based on an upper-limit voltage value. If a maximum voltage is set, the experiment will continue to run as long as the measured voltage is below that value.

mayVoltage	the maximum voltage value in volts at which the experiment will stop.
max voltage	the maximum voltage value in volts at which the experiment will stop.

### 8.3.3.22 setMinSamplingVoltageDifference()

set a minimum sampling voltage difference for reporting the voltage.

The is an **optional** condition. If nothing is set, then the experiment will report the data at time sampling interval. When this is set, then the voltage is reported when there is a voltage difference of at least the given minimum sampling voltage difference. So, when one voltage data point is reported (at the minimum possible time sampling interval), the next data point is not reported unless the difference between the two voltage data points exceeds this given minimum sampling voltage difference value.

Note

when this is set, this overrides the set value for the sampling interval.

#### **Parameters**

minVoltageDifferenc	the minimum sampling voltage difference value in volts.
---------------------	---

### 8.3.3.23 setMinVoltage()

```
void AisConstantCurrentElement::setMinVoltage ( \label{eq:MinVoltage} \ \ )
```

set a minimum voltage to stop the experiment.

The is an **optional** condition. If nothing is set, then the experiment will not stop based on an lower-limit voltage value. If a maximum voltage is set, the experiment will continue to run as long as the measured voltage is above that value.

#### **Parameters**

## 8.3.3.24 setSamplingInterval()

set how frequently we are sampling the data.

samplingInterval	the data sampling interval value in seconds.
------------------	--

The documentation for this class was generated from the following file:

· AisConstantCurrentElement.h

# 8.4 AisConstantPotElement Class Reference

an experiment that simulates a constant applied voltage.

```
#include <AisConstantPotElement.h>
```

Inherits AisAbstractElement.

### **Public Member Functions**

• AisConstantPotElement (double voltage, double samplingInterval, double duration)

the constant potential element constructor.

AisConstantPotElement (const AisConstantPotElement &)

copy constructor for the AisConstantPotElement object.

AisConstantPotElement & operator= (const AisConstantPotElement &)

overload equal to operator for the AisConstantPotElement object.

QString getName () const override

get the name of the element.

QStringList getCategory () const override

get a list of applicable categories of the element.

• double getPotential () const

get the value set for the potential in volts.

· void setPotential (double potential)

set the value for the potential in volts.

• bool isVoltageVsOCP () const

tells whether the specified voltage is set against the open-circuit voltage or the reference terminal.

void setVoltageVsOCP (bool vsOCP)

set whether to reference the specified voltage against the open-circuit voltage or the reference terminal.

• double getSamplingInterval () const

get how frequently we are sampling the data.

void setSamplingInterval (double samplingInterval)

set how frequently we are sampling the data.

• double getMaxDuration () const

get the maximum duration set for the experiment. The experiment will end when the duration of the experiment reaches this value.

void setMaxDuration (double maxDuration)

set the maximum duration for the experiment.

• double getMaxCurrent () const

get the maximum value set for the absolute current in Amps. The experiment will end when the absolute current reaches this value.

void setMaxCurrent (double maxCurrent)

set the maximum value for the absolute current in Amps.

double getMinCurrent () const

get the minimum value set for the absolute current in Amps. The experiment will end when the absolute current falls down to this value.

• void setMinCurrent (double minCurrent)

set the minimum value for the absolute current in Amps.

• double getMaxCapacity () const

get the value set for the maximum capacity / cumulative charge.

void setMaxCapacity (double maxCapacity)

set the value for the maximum capacity / cumulative charge in Coulomb.

double getMindldt () const

get the value set for the minimum current rate of change with respect to time (minimum di/dt).

void setMindldt (double mindldt)

set the minimum value for the current rate of change with respect to time (minimum di/dt).

bool isAutoRange () const

tells whether the current range is set to auto-select or not.

• void setAutoRange ()

set to auto-select the current range.

double getApproxMaxCurrent () const


get the value set for the expected maximum current.

void setApproxMaxCurrent (double approxMaxCurrent)

set maximum current expected, for manual current range selection.

## 8.4.1 Detailed Description

an experiment that simulates a constant applied voltage.

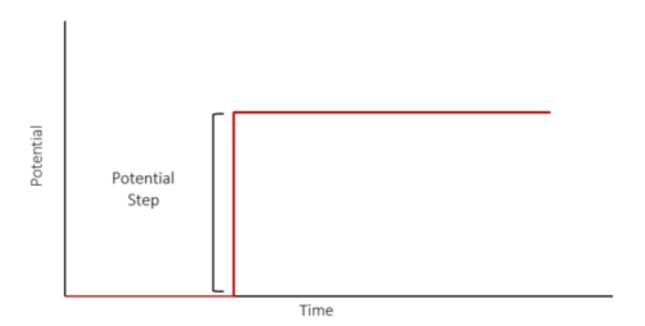

## 8.4.2 Constructor & Destructor Documentation

### 8.4.2.1 AisConstantPotElement()

the constant potential element constructor.

#### **Parameters**

voltage	the value set for the voltage/potential in volts.	
samplingInterval	the data sampling interval value in seconds.	
duration	the maximum duration for the experiment in seconds.	

## 8.4.3 Member Function Documentation

## 8.4.3.1 getApproxMaxCurrent()

```
double AisConstantPotElement::getApproxMaxCurrent ( ) const
```

get the value set for the expected maximum current.

### Returns

the value set for the expected maximum current in Amps.

### Note

if nothing was manually set, the device will auto-select the current range and the return value will be positive infinity.

### 8.4.3.2 getCategory()

```
QStringList AisConstantPotElement::getCategory ( ) const [override]
```

get a list of applicable categories of the element.

### Returns

A list of applicable categories: ("Potentiostatic Control", "Basic Experiments")

### 8.4.3.3 getMaxCapacity()

```
\verb|double AisConstantPotElement::getMaxCapacity ( ) const|\\
```

get the value set for the maximum capacity / cumulative charge.

#### Returns

the value set for the maximum capacity in Coulomb.

#### Note

this is an optional parameter. If no value has been set, the default value is positive infinity.

### 8.4.3.4 getMaxCurrent()

```
double AisConstantPotElement::getMaxCurrent ( ) const
```

get the maximum value set for the absolute current in Amps. The experiment will end when the absolute current reaches this value.

#### Returns

the maximum current value in Amps.

### Note

this is an optional parameter. If no value has been set, the default value is positive infinity.

## 8.4.3.5 getMaxDuration()

```
double AisConstantPotElement::getMaxDuration ( ) const
```

get the maximum duration set for the experiment. The experiment will end when the duration of the experiment reaches this value.

### Returns

the maximum duration for the experiment in seconds.

### 8.4.3.6 getMinCurrent()

```
\verb|double AisConstantPotElement::getMinCurrent () const|\\
```

get the minimum value set for the absolute current in Amps. The experiment will end when the absolute current falls down to this value.

#### Returns

the minimum current value in Amps.

#### Note

this is an optional parameter. If no value has been set, the default value is zero.

## 8.4.3.7 getMindldt()

```
double AisConstantPotElement::getMindIdt ( ) const
```

get the value set for the minimum current rate of change with respect to time (minimum di/dt).

### Returns

the value set for the minimum current rate of change with respect to time (minimum di/dt).

### Note

this is an optional parameter. If no value has been set, the default value is zero.

## 8.4.3.8 getName()

```
QString AisConstantPotElement::getName ( ) const [override]
```

get the name of the element.

## Returns

The name of the element: "Constant Potential, Advanced".

### 8.4.3.9 getPotential()

```
double AisConstantPotElement::getPotential ( ) const
```

get the value set for the potential in volts.

Returns

the value set for the potential in volts.

### 8.4.3.10 getSamplingInterval()

```
double AisConstantPotElement::getSamplingInterval ( ) const
```

get how frequently we are sampling the data.

Returns

the data sampling interval value in seconds.

### 8.4.3.11 isAutoRange()

```
bool AisConstantPotElement::isAutoRange ( ) const
```

tells whether the current range is set to auto-select or not.

Returns

true if the current range is set to auto-select and false if a rage has been selected.

### 8.4.3.12 isVoltageVsOCP()

```
bool AisConstantPotElement::isVoltageVsOCP ( ) const
```

tells whether the specified voltage is set against the open-circuit voltage or the reference terminal.

Returns

true if the specified voltage is set against the open-circuit voltage and false if it is set against the reference terminal.

See also

setVsOcp

### 8.4.3.13 setApproxMaxCurrent()

set maximum current expected, for manual current range selection.

The is an optional parameter. If nothing is set, the device will auto-select the current range.

#### **Parameters**

approximaxourrent   the value for the maximum current expected in Amps.	approxMaxCurrent	the value for the maximum current expected in Amps.
---	------------------	---

### 8.4.3.14 setAutoRange()

```
void AisConstantPotElement::setAutoRange ( )
```

set to auto-select the current range.

This option is set by default. There is no need to call this function to auto-select if the range was not manually set.

### 8.4.3.15 setMaxCapacity()

set the value for the maximum capacity / cumulative charge in Coulomb.

The is an **optional** condition. If nothing is set, then the experiment will not stop based on an upper-limit cumulative charge value. If a maximum capacity is set, the experiment will continue to run as long as the cumulative charge is below that value.

## **Parameters**

	maxCapacity	the value to set for the cell maximum capacity.
--	-------------	---

### 8.4.3.16 setMaxCurrent()

set the maximum value for the absolute current in Amps.

The is an **optional** condition. If nothing is set, then the experiment will not stop based on an upper-limit current value. If a maximum current is set, the experiment will continue to run as long as the measured current is below that value.

maxCurrent	the maximum current value in Amps.

### 8.4.3.17 setMaxDuration()

set the maximum duration for the experiment.

The is an **optional** condition. If nothing is set, then the experiment will not stop based on an duration. If a maximum duration is set, the experiment will continue to run as long as the passed time is less than that value.

#### **Parameters**

maxDuration	the maximum duration for the experiment in seconds.
-------------	---

### 8.4.3.18 setMinCurrent()

set the minimum value for the absolute current in Amps.

The is an **optional** condition. If nothing is set, then the experiment will not stop based on an lower-limit current value. If a maximum current is set, the experiment will continue to run as long as the measured current is above that value.

#### **Parameters**

```
minCurrent the value to set for the absolute minimum current.
```

### 8.4.3.19 setMindldt()

set the minimum value for the current rate of change with respect to time (minimum di/dt).

The is an **optional** condition. If nothing is set, then the experiment will not stop based on an lower-limit rate of change value. If a minimum value is set, the experiment will continue to run as long as the rage of change is above that value.

mindldt	the minimum value for the current rate of change with respect to time (minimum di/dt).
---------	--

### 8.4.3.20 setPotential()

set the value for the potential in volts.

### **Parameters**

potential the value t	o set for the potential in volts.
-----------------------	-----------------------------------

### 8.4.3.21 setSamplingInterval()

set how frequently we are sampling the data.

#### **Parameters**

samplingInterval	the data sampling interval value in seconds.

### 8.4.3.22 setVoltageVsOCP()

```
void AisConstantPotElement::setVoltageVsOCP ( bool\ \textit{vsOCP}\ )
```

set whether to reference the specified voltage against the open-circuit voltage or the reference terminal.

The reference terminal is for you to connect to any reference point you like. Connect it to the working electrode to reference ground.

### **Parameters**

vsOCP	true to set the specified voltage to reference the open-circuit voltage and false to set against the	
	reference terminal.	

The documentation for this class was generated from the following file:

· AisConstantPotElement.h

# 8.5 AisConstantPowerElement Class Reference

This experiment simulates a constant power, charge or discharge".

#include <AisConstantPowerElement.h>

Inherits AisAbstractElement.

#### **Public Member Functions**

· AisConstantPowerElement (bool isCharge, double power, double duration, double smaplingInterval)

the constant power element constructor

AisConstantPowerElement (const AisConstantPowerElement &)

copy constructor for the AisConstantPowerElement object.

AisConstantPowerElement & operator= (const AisConstantPowerElement &)

overload equal to operator for the AisConstantPowerElement object.

· QString getName () const override

get the name of the element.

QStringList getCategory () const override

get a list of applicable categories of the element.

bool isCharge () const

tells whether the experiment is set to simulate charge or discharge.

void setCharge (bool isCharge)

set whether the experiment is to simulate charge or discharge.

• double getPower () const

get the value set for the power.

void setPower (double power)

set the value for the power.

· double getSamplingInterval () const

get how frequently we are sampling the data.

· void setSamplingInterval (double samplingInterval)

set how frequently we are sampling the data.

double getMaxVoltage () const

get the value set for the maximum voltage. The experiment will end when it reaches this value.

void setMaxVoltage (double maxVoltage)

set a maximum voltage to stop the experiment.

• double getMinVoltage () const

get the minimum value set for the voltage in volts. The experiment will end when it reaches down this value.

• void setMinVoltage (double minVoltage)

set a minimum value for the voltage. The experiment will end when it reaches down this value.

• double getMaxDuration () const

get the maximum duration set for the experiment. The experiment will end when the duration of the experiment reaches this value.

void setMaxDuration (double maxDuration)

set the maximum duration for the experiment.

• double getMaxCapacity () const


get the value set for the maximum capacity / cumulative charge.

void setMaxCapacity (double maxCapacity)

set the value for the maximum capacity / cumulative charge in Coulomb.

# 8.5.1 Detailed Description

This experiment simulates a constant power, charge or discharge".

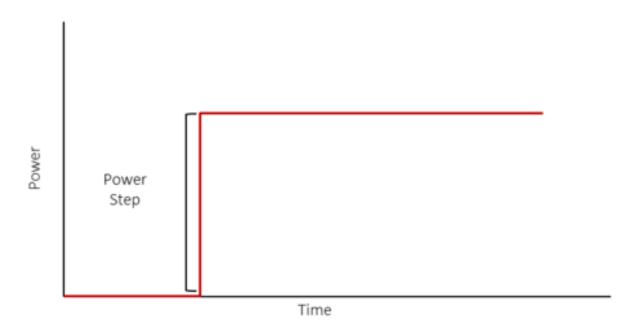

## 8.5.2 Constructor & Destructor Documentation

## 8.5.2.1 AisConstantPowerElement()

the constant power element constructor

isCharge	true to set the experiment simulate charge and false to simulate discharge.	
power	the value set for the power in watts.	
duration	the maximum duration for the experiment in seconds.	
smaplingInterval	the data sampling interval value in seconds.	

### 8.5.3 Member Function Documentation

## 8.5.3.1 getCategory()

QStringList AisConstantPowerElement::getCategory ( ) const [override]

get a list of applicable categories of the element.

#### Returns

A list of applicable categories: ("Energy Storage", "Charge/Discharge").

### 8.5.3.2 getMaxCapacity()

double AisConstantPowerElement::getMaxCapacity ( ) const

get the value set for the maximum capacity / cumulative charge.

### Returns

the value set for the maximum capacity in Coulomb.

### Note

this is an optional parameter. If no value has been set, the default value is positive infinity.

### 8.5.3.3 getMaxDuration()

```
double AisConstantPowerElement::getMaxDuration ( ) const
```

get the maximum duration set for the experiment. The experiment will end when the duration of the experiment reaches this value.

### Returns

the maximum duration for the experiment in seconds.

### 8.5.3.4 getMaxVoltage()

double AisConstantPowerElement::getMaxVoltage ( ) const

get the value set for the maximum voltage. The experiment will end when it reaches this value.

#### Returns

the value set for the maximum voltage.

#### Note

this is an optional parameter. If no value has been set, the default value is positive infinity

### 8.5.3.5 getMinVoltage()

```
double AisConstantPowerElement::getMinVoltage ( ) const
```

get the minimum value set for the voltage in volts. The experiment will end when it reaches down this value.

### Returns

the minimum value set for the voltage in volts.

### Note

this is an optional parameter. If no value has been set, the default value is negative infinity

### 8.5.3.6 getName()

```
QString AisConstantPowerElement::getName ( ) const [override]
```

get the name of the element.

## Returns

The name of the element: "Constant Power Charge/Discharge".

## 8.5.3.7 getPower()

```
double AisConstantPowerElement::getPower ( ) const
```

get the value set for the power.

#### Returns

the value set for the power in watts.

### 8.5.3.8 getSamplingInterval()

```
double AisConstantPowerElement::getSamplingInterval ( ) const
```

get how frequently we are sampling the data.

#### Returns

the data sampling interval value in seconds.

### 8.5.3.9 isCharge()

```
bool AisConstantPowerElement::isCharge ( ) const
```

tells whether the experiment is set to simulate charge or discharge.

### Returns

true if the experiment is set to simulate charge and false if it is set to simulate discharge.

### 8.5.3.10 setCharge()

```
\begin{tabular}{ll} \begin{tabular}{ll} void AisConstantPowerElement::setCharge ( \\ bool isCharge ) \end{tabular}
```

set whether the experiment is to simulate charge or discharge.

### **Parameters**

*isCharge* if the given argument is true, the experiment will simulate charge and discharge if given false.

### 8.5.3.11 setMaxCapacity()

set the value for the maximum capacity / cumulative charge in Coulomb.

The is an **optional** condition. If nothing is set, then the experiment will not stop based on an upper-limit cumulative charge value. If a maximum capacity is set, the experiment will continue to run as long as the cumulative charge is below that value.

#### **Parameters**

	maxCapacity	the value to set for the cell maximum capacity.
--	-------------	---

### 8.5.3.12 setMaxDuration()

set the maximum duration for the experiment.

The experiment will continue to run as long as the passed time is less than that the set duration value.

### **Parameters**

maxDuration	the maximum duration for the experiment in seconds.
-------------	---

### 8.5.3.13 setMaxVoltage()

set a maximum voltage to stop the experiment.

The is an **optional** condition. If nothing is set, then the experiment will not stop based on an upper-limit voltage value. If a maximum voltage is set, the experiment will continue to run as long as the measured voltage is below that value.

maxVoltage	the maximum voltage value in volts at which the experiment will stop.

### 8.5.3.14 setMinVoltage()

set a minimum value for the voltage. The experiment will end when it reaches down this value.

#### **Parameters**

minVoltage	the value for the voltage in volts.
------------	-------------------------------------

Note

this is an optional parameter. If no value has been set, the default value is negative infinity.

## 8.5.3.15 setPower()

```
void AisConstantPowerElement::setPower ( \mbox{double power })
```

set the value for the power.

## **Parameters**

power the value set for the power in	watts.
--------------------------------------	--------

## 8.5.3.16 setSamplingInterval()

set how frequently we are sampling the data.

## **Parameters**

samplingInterval the data sampling interval value	in seconds.

The documentation for this class was generated from the following file:

· AisConstantPowerElement.h

## 8.6 AisConstantResistanceElement Class Reference

This element/experiment simulates a constant resistance load.

#include <AisConstantResistanceElement.h>

Inherits AisAbstractElement.

#### **Public Member Functions**

• AisConstantResistanceElement (double resistance, double duration, double samplingInterval)

the constant resistance element constructor.

• AisConstantResistanceElement (const AisConstantResistanceElement &)

copy constructor for the AisConstantResistanceElement object.

AisConstantResistanceElement & operator= (const AisConstantResistanceElement &)

overload equal to operator for the AisConstantResistanceElement object.

QString getName () const override

get the name of the element.

QStringList getCategory () const override

get a list of applicable categories of the element.

double getResistance () const

get the value set for the resistance as a load.

• void setResistance (double resistance)

set the value for the resistance as a load

• double getSamplingInterval () const

get how frequently we are sampling the data.

void setSamplingInterval (double samplingInterval)

set how frequently we are sampling the data.

double getMinVoltage () const

get the value set minimum for the voltage in volts.

• void setMinVoltage (double minVoltage)

set a minimum voltage to stop the experiment.

• double getMaxDuration () const

get the maximum duration set for the experiment. The experiment will end when the duration of the experiment reaches this value.

void setMaxDuration (double maxDuration)

set the maximum duration for the experiment.

• double getMaxCapacity () const


get the value set for the maximum capacity / cumulative charge.

void setMaxCapacity (double maxCapacity)

set the value for the maximum capacity / cumulative charge in Coulomb.

# 8.6.1 Detailed Description

This element/experiment simulates a constant resistance load.

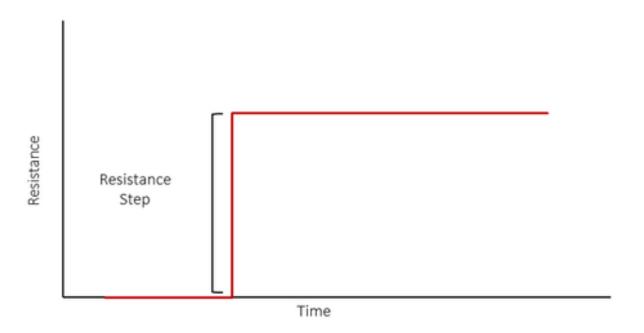

## 8.6.2 Constructor & Destructor Documentation

### 8.6.2.1 AisConstantResistanceElement()

the constant resistance element constructor.

## **Parameters**

resistance	the value in ohm of the load resistance
duration	the maximum duration for the experiment in seconds.
samplingInterval	the data sampling interval value in seconds.

## 8.6.3 Member Function Documentation

### 8.6.3.1 getCategory()

QStringList AisConstantResistanceElement::getCategory ( ) const [override] get a list of applicable categories of the element.

### Returns

A list of applicable categories: ("Energy Storage", "Charge/Discharge").

### 8.6.3.2 getMaxCapacity()

double AisConstantResistanceElement::getMaxCapacity ( ) const

get the value set for the maximum capacity / cumulative charge.

#### Returns

the value set for the maximum capacity in Coulomb.

#### Note

this is an optional parameter. If no value has been set, the default value is positive infinity.

### 8.6.3.3 getMaxDuration()

 $\verb|double AisConstantResistanceElement::getMaxDuration () const$ 

get the maximum duration set for the experiment. The experiment will end when the duration of the experiment reaches this value.

## Returns

the maximum duration for the experiment in seconds.

### 8.6.3.4 getMinVoltage()

 $\verb|double AisConstantResistanceElement::getMinVoltage () const$ 

get the value set minimum for the voltage in volts.

### Returns

the value set for the minimum voltage in volts.

## Note

this is an optional parameter. If no value has been set, the default value is negative infinity

### 8.6.3.5 getName()

```
QString AisConstantResistanceElement::getName ( ) const [override]
```

get the name of the element.

#### Returns

The name of the element: "Constant Resistance".

### 8.6.3.6 getResistance()

```
double AisConstantResistanceElement::getResistance ( ) const
```

get the value set for the resistance as a load.

#### Returns

the value in ohm of the load resistance.

### 8.6.3.7 getSamplingInterval()

```
double AisConstantResistanceElement::getSamplingInterval ( ) const
```

get how frequently we are sampling the data.

### Returns

the data sampling interval value in seconds.

### 8.6.3.8 setMaxCapacity()

set the value for the maximum capacity / cumulative charge in Coulomb.

The is an **optional** condition. If nothing is set, then the experiment will not stop based on an upper-limit cumulative charge value. If a maximum capacity is set, the experiment will continue to run as long as the cumulative charge is below that value.

#### **Parameters**

maxCapacity	the value to set for the cell maximum capacity.	
-------------	---	--

## 8.6.3.9 setMaxDuration()

set the maximum duration for the experiment.

The experiment will continue to run as long as the passed time is less than that the set duration value.

### **Parameters**

maxDuration	the maximum duration for the experiment in seconds.
-------------	---

## 8.6.3.10 setMinVoltage()

```
void AisConstantResistanceElement::setMinVoltage ( \mbox{double } \textit{minVoltage} \ )
```

set a minimum voltage to stop the experiment.

The is an **optional** condition. If nothing is set, then the experiment will not stop based on an lower-limit voltage value. If a maximum voltage is set, the experiment will continue to run as long as the measured voltage is above that value.

### **Parameters**

	minVoltage	the minimum voltage value in volts at which the experiment will stop.
--	------------	---

## 8.6.3.11 setResistance()

```
void AisConstantResistanceElement::setResistance ( \label{eq:constance} \mbox{double } resistance \ )
```

set the value for the resistance as a load

resistance	the value in ohm of the load resistance.
i esistarice	the value in onlin of the load resistance.

### 8.6.3.12 setSamplingInterval()

set how frequently we are sampling the data.

**Parameters** 

samplingInterval the data sampling interval value in seconds.

The documentation for this class was generated from the following file:

AisConstantResistanceFlement.h

# 8.7 AisCyclicVoltammetryElement Class Reference

This experiment sweeps the potential of the working electrode back and forth between the **first voltage-limit** and the **second voltage-limit** at a constant **scan rate** (**dE**/**dt**) for a specified number of **cycles**.

```
#include <AisCyclicVoltammetryElement.h>
```

Inherits AisAbstractElement.

### **Public Member Functions**

AisCyclicVoltammetryElement (double startVoltage, double firstVoltageLimit, double secondVoltageLimit, double endVoltage, double dEdt, double samplingInterval)

constructor of the cyclic voltammetry element.

• AisCyclicVoltammetryElement (const AisCyclicVoltammetryElement &)

copy constructor for the AisCyclicVoltammetryElement object.

AisCyclicVoltammetryElement & operator= (const AisCyclicVoltammetryElement &)

overload equal to operator for the AisCyclicVoltammetryElement object.

· QString getName () const override

get the name of the element.

• QStringList getCategory () const override

get a list of applicable categories of the element.

· double getStartVoltage () const

get the value set for the start voltage

• void setStartVoltage (double startVoltage)

set the value for the start voltage.

• bool isStartVoltageVsOCP () const

tells whether the start voltage is set with respect to the open circuit voltage or not.

void setStartVoltageVsOCP (bool startVoltageVsOCP)

set whether to reference the start voltage against the open-circuit voltage or the reference terminal.

• double getFirstVoltageLimit () const

get the value set for the first voltage-limit.

void setFirstVoltageLimit (double v1)

set the first voltage-limit

bool isFirstVoltageLimitVsOCP () const

tells whether the first voltage-limit is set with respect to the open circuit voltage or not.

void setFirstVoltageLimitVsOCP (bool firstVoltageLimitVsOCP)

set whether to reference the first voltage-limit against the open-circuit voltage or not.

• double getSecondVoltageLimit () const

get the value set for the second voltage-limit

void setSecondVoltageLimit (double v2)

set the second voltage-limit

bool isSecondVoltageLimitVsOCP () const

tells whether the second voltage-limit is set with respect to the open circuit voltage or not.

void setSecondVoltageLimitVsOCP (bool secondVoltageLimitVsOCP)

set whether to reference the second voltage-limit against the open-circuit voltage or not.

• double getNumberOfCycles ()

get the value set for the number of cycles

void setNumberOfCycles (int cycles)

set the number of cycles to oscillate between the first voltage-limit and the second voltage-limit.

double getEndVoltage () const

get the value set for the ending potential value.

void setEndVoltage (double endVoltage)

set the ending potential value.

• bool isEndVoltageVsOCP () const

tells whether the end voltage is set with respect to the open circuit voltage or the reference terminal.

void setEndVoltageVsOCP (bool endVoltageVsOCP)

set whether to reference the end voltage against the open-circuit voltage or the reference terminal.

• double getdEdt () const

get the value set for the constant scan rate dE/dt.

void setdEdt (double dEdt)

set the value for the constant scan rate dE/dt.

· double getSamplingInterval () const

get how frequently we are sampling the data.

void setSamplingInterval (double sampInterval)

set how frequently we are sampling the data.

• bool isAutoRange () const

tells whether the current range is set to auto-select or not.

• void setAutoRange ()

set to auto-select the current range.

• double getApproxMaxCurrent () const

get the value set for the expected maximum current.

void setApproxMaxCurrent (double approxMaxCurrent)

set maximum current expected, for manual current range selection.

### 8.7.1 Detailed Description

This experiment sweeps the potential of the working electrode back and forth between the **first voltage-limit** and the **second voltage-limit** at a constant **scan rate (dE/dt)** for a specified number of **cycles**.

The scan will always start from the **start voltage** towards the **first voltage-limit**. The experiment will continue to cycle between the **first voltage-limit** and the **second voltage-limit** according to the number of cycles. The cycling scheme is as follow: **start voltage**  $\rightarrow$  [**first voltage-limit**  $\rightarrow$  **first voltage-limit**]n  $\rightarrow$  **Ending potential**, where "n" is number of cycles.

## 8.7.2 Constructor & Destructor Documentation

## 8.7.2.1 AisCyclicVoltammetryElement()

constructor of the cyclic voltammetry element.

### **Parameters**

startVoltage	the value of the start voltage in volts
firstVoltageLimit	the value of the first voltage-limit in volts
secondVoltageLimit	the value of the second voltage-limit in volts
endVoltage	the value of the end voltage in volts
dEdt	the constant scan rate dE/dt in V/s.
samplingInterval	the data sampling interval value in seconds.

### 8.7.3 Member Function Documentation

## 8.7.3.1 getApproxMaxCurrent()

```
double AisCyclicVoltammetryElement::getApproxMaxCurrent ( ) const
```

get the value set for the expected maximum current.

# Returns

the value set for the expected maximum current in Amps.

## Note

if nothing was manually set, the device will auto-select the current range and the return value will be positive infinity.

#### 8.7.3.2 getCategory()

 ${\tt QStringList~AisCyclicVoltammetryElement::} {\tt getCategory~(~)~const~[override]}$ 

get a list of applicable categories of the element.

#### Returns

A list of applicable categories: ("Potentiostatic Control", "Basic Experiments").

## 8.7.3.3 getdEdt()

double AisCyclicVoltammetryElement::getdEdt ( ) const

get the value set for the constant scan rate dE/dt.

#### Returns

the value set for the constant scan rate dE/dt in V/s.

## 8.7.3.4 getEndVoltage()

double AisCyclicVoltammetryElement::getEndVoltage ( ) const

get the value set for the ending potential value.

This is the value of the voltage at which the experiment will stop. After the last cycle, the experiment will do one last sweep towards this value.

#### Returns

the value set for the ending voltage in volts.

## 8.7.3.5 getFirstVoltageLimit()

double AisCyclicVoltammetryElement::getFirstVoltageLimit ( ) const

get the value set for the first voltage-limit.

After the starting voltage, the scan will go to the first voltage-limit. This could result in either upward scan first if the first voltage-limit is higher than the start voltage or downward scan first if the first voltage-limit is lower than the start voltage.

## Returns

the first voltage-limit value in volts.

#### 8.7.3.6 getName()

```
QString AisCyclicVoltammetryElement::getName ( ) const [override]
```

get the name of the element.

#### Returns

The name of the element: "Cyclic Voltammetry".

## 8.7.3.7 getNumberOfCycles()

```
double AisCyclicVoltammetryElement::getNumberOfCycles ( )
```

get the value set for the number of cycles

#### Returns

the number of cycles set.

## 8.7.3.8 getSamplingInterval()

```
\verb|double AisCyclicVoltammetryElement::getSamplingInterval ( ) const
```

get how frequently we are sampling the data.

#### Returns

the data sampling interval value in seconds.

## 8.7.3.9 getSecondVoltageLimit()

```
double AisCyclicVoltammetryElement::getSecondVoltageLimit ( ) const
```

get the value set for the second voltage-limit

After starting from the start-voltage and reaching the first voltage-limit, the scan will go to the second voltage limit. The scan will continue to oscillate between the first and second voltage-limits according to the number of cycles.

#### Returns

the second voltage-limit value in volts.

#### 8.7.3.10 getStartVoltage()

 $\verb|double AisCyclicVoltammetryElement::getStartVoltage () const$ 

get the value set for the start voltage

#### Returns

the value of the start voltage in volts

## 8.7.3.11 isAutoRange()

bool AisCyclicVoltammetryElement::isAutoRange ( ) const

tells whether the current range is set to auto-select or not.

#### Returns

true if the current range is set to auto-select and false if a rage has been selected.

## 8.7.3.12 isEndVoltageVsOCP()

bool AisCyclicVoltammetryElement::isEndVoltageVsOCP ( ) const

tells whether the end voltage is set with respect to the open circuit voltage or the reference terminal.

#### Returns

true if the end voltage is set with respect to the open-circuit voltage and false if set against the reference terminal.

## Note

if no value was set, the default is false

## 8.7.3.13 isFirstVoltageLimitVsOCP()

 $\verb|bool AisCyclicVoltammetryElement:: is First Voltage Limit Vs OCP () const$ 

tells whether the first voltage-limit is set with respect to the open circuit voltage or not.

#### Returns

true if the first voltage-limit is set with respect to the open-circuit voltage and false if not.

#### Note

if no value was set, the default is false.

#### 8.7.3.14 isSecondVoltageLimitVsOCP()

```
\verb|bool AisCyclicVoltammetryElement:: is SecondVoltageLimitVsOCP ( ) constitution of the property of the prop
```

tells whether the second voltage-limit is set with respect to the open circuit voltage or not.

#### Returns

true if the second voltage-limit is set with respect to the open-circuit voltage and false if not.

Note

if no value was set, the default is false.

#### 8.7.3.15 isStartVoltageVsOCP()

```
\verb|bool AisCyclicVoltammetryElement:: is StartVoltageVsOCP ( ) const
```

tells whether the start voltage is set with respect to the open circuit voltage or not.

#### Returns

true if the start voltage is set with respect to the open-circuit voltage and false if not.

## 8.7.3.16 setApproxMaxCurrent()

set maximum current expected, for manual current range selection.

The is an **optional** parameter. If nothing is set, the device will auto-select the current range.

## **Parameters**

approxMaxCurrent	the value for the maximum current expected in Amps.

#### 8.7.3.17 setAutoRange()

```
\verb"void AisCyclicVoltammetryElement::setAutoRange ()\\
```

set to auto-select the current range.

This option is set by default. There is no need to call this function to auto-select if the range was not manually set.

#### 8.7.3.18 setdEdt()

```
void AisCyclicVoltammetryElement::setdEdt ( \mbox{double } \mbox{$dEd$t} \mbox{ } \mbox{)}
```

set the value for the constant scan rate dE/dt.

#### **Parameters**

dEdt the value set for the constant scan rate dE/dt in V/s.

#### 8.7.3.19 setEndVoltage()

```
void AisCyclicVoltammetryElement::setEndVoltage ( {\tt double} \ endVoltage \ )
```

set the ending potential value.

This is the value of the voltage at which the experiment will stop. After the last cycle, the experiment will do one last sweep towards this value.

#### **Parameters**

Voltage the value to set for the ending potential in volts.	endVoltage
---	------------

## 8.7.3.20 setEndVoltageVsOCP()

set whether to reference the end voltage against the open-circuit voltage or the reference terminal.

The reference terminal is for you to connect to any reference point you like. Connect it to the working electrode to reference ground.

#### **Parameters**

endVoltageVsOCP	true to set the end voltage to be referenced against the open-circuit voltage and false if
	set against the reference terminal.

## 8.7.3.21 setFirstVoltageLimit()

```
void AisCyclicVoltammetryElement::setFirstVoltageLimit ( double v1 )
```

set the first voltage-limit

After the starting voltage, the scan will go to the first voltage-limit. This could result in either upward scan first if the first voltage-limit is higher than the start voltage or downward scan first if the first voltage-limit is lower than the start voltage.

#### **Parameters**

```
v1 first voltage-limit value in volts
```

## 8.7.3.22 setFirstVoltageLimitVsOCP()

```
\label{lem:voltageLimitVsOCP} \mbox{ void AisCyclicVoltammetryElement::setFirstVoltageLimitVsOCP (} \\ \mbox{ bool } firstVoltageLimitVsOCP )
```

set whether to reference the first voltage-limit against the open-circuit voltage or not.

The reference terminal is for you to connect to any reference point you like. Connect it to the working electrode to reference ground.

#### **Parameters**

firstVoltageLimitVsOCP	true to set the upper voltage to be referenced against the open-circuit voltage and
	false otherwise.

## 8.7.3.23 setNumberOfCycles()

set the number of cycles to oscillate between the first voltage-limit and the second voltage-limit.

#### **Parameters**

cycles the number of cycles to set	
------------------------------------	--

## 8.7.3.24 setSamplingInterval()

```
\label{lem:condition} \mbox{void AisCyclicVoltammetryElement::setSamplingInterval (} \\ \mbox{double } sampInterval \mbox{)}
```

set how frequently we are sampling the data.

#### **Parameters**

samplnterval the data sampling interval value in seconds.	
---	--

## 8.7.3.25 setSecondVoltageLimit()

```
void AisCyclicVoltammetryElement::setSecondVoltageLimit ( double v2 )
```

set the second voltage-limit

After starting from the start-voltage and reaching the first voltage-limit, the scan will go to the second voltage limit. The scan will continue to oscillate between the first and second voltage-limits according to the number of cycles.

#### **Parameters**

v2 the second voltage-limit value in volts

#### 8.7.3.26 setSecondVoltageLimitVsOCP()

```
\label{thm:condvoltageLimitVsOCP} \mbox{ void AisCyclicVoltammetryElement::setSecondVoltageLimitVsOCP (} \\ \mbox{ bool } secondVoltageLimitVsOCP )
```

set whether to reference the second voltage-limit against the open-circuit voltage or not.

The reference terminal is for you to connect to any reference point you like. Connect it to the working electrode to reference ground.

#### **Parameters**

secondVoltageLimitVsOCP	true to set the second voltage-limit to be referenced against the open-circuit
	voltage and false otherwise.

#### 8.7.3.27 setStartVoltage()

set the value for the start voltage.

#### **Parameters**

startVoltage the value of the start voltage in volts
--

## 8.7.3.28 setStartVoltageVsOCP()

```
void AisCyclicVoltammetryElement::setStartVoltageVsOCP ( bool\ startVoltageVsOCP\ )
```

set whether to reference the start voltage against the open-circuit voltage or the reference terminal.

The reference terminal is for you to connect to any reference point you like. Connect it to the working electrode to reference ground.

#### **Parameters**

startVoltageVsOCP	true to if the start voltage is set to reference the open-circuit voltage and false if set
	against the reference terminal.

The documentation for this class was generated from the following file:

· AisCyclicVoltammetryElement.h

# 8.8 AisDCCurrentSweepElement Class Reference

this experiment performs a DC current sweep from the **starting current** to the **ending current** which progresses linearly according to the **scan rate**.

```
#include <AisDCCurrentSweepElement.h>
```

Inherits AisAbstractElement.

#### **Public Member Functions**

AisDCCurrentSweepElement (double startCurrent, double endCurrent, double scanRate, double sampling
 —
 Interval)

the DC current sweep element.

AisDCCurrentSweepElement (const AisDCCurrentSweepElement &)

copy constructor for the AisDCCurrentSweepElement object.

• AisDCCurrentSweepElement & operator= (const AisDCCurrentSweepElement &)

overload equal to operator for the AisDCCurrentSweepElement object.

· QString getName () const override

get the name of the element.

· QStringList getCategory () const override

get a list of applicable categories of the element.

double getStartingCurrent () const

get the value set for the starting current.

• void setStartingCurrent (double startingCurrent)

set the value for the starting current.

double getEndingCurrent () const

get the value set for the ending current.

void setEndingCurrent (double endingCurrent)

set the value for the ending current.

• double getScanRate () const

get the value set for the scan rate.

• void setScanRate (double scanRate)

set the value for the current scan rate.

• double getSamplingInterval () const

get how frequently we are sampling the data.

void setSamplingInterval (double samplingInterval)

set how frequently we are sampling the data.

• double getMaxVoltage () const

get the value set for the maximum voltage. The experiment will end when it reaches this value.

• void setMaxVoltage (double maxVoltage)

set a maximum voltage to stop the experiment.

• double getMinVoltage () const

get the value set minimum for the voltage in volts.

void setMinVoltage (double minVoltage)

set a minimum voltage to stop the experiment.

## 8.8.1 Detailed Description

this experiment performs a DC current sweep from the **starting current** to the **ending current** which progresses linearly according to the **scan rate**.

# DC Current Linear Sweep



## 8.8.2 Constructor & Destructor Documentation

# 8.8.2.1 AisDCCurrentSweepElement()

## the DC current sweep element.

## **Parameters**

startCurrent	the value for the starting current in Amps.
endCurrent	the value for the ending current in Amps.
scanRate	the value for the current scan rate in A/s.
samplingInterval	how frequently we are sampling the data.

## 8.8.3 Member Function Documentation

## 8.8.3.1 getCategory()

```
QStringList AisDCCurrentSweepElement::getCategory ( ) const [override] get a list of applicable categories of the element.
```

#### Returns

A list of applicable categories: ("Galvanostatic Control", "Basic Voltammetry").

get a list of applicable categories of the element.

#### Returns

A list of applicable categories: ("Galvanostatic Control", "Basic Voltammetry").

## 8.8.3.2 getEndingCurrent()

```
double AisDCCurrentSweepElement::getEndingCurrent ( ) const
get the value set for the ending current.
```

## Returns

the value for the ending current in Amps.

## 8.8.3.3 getMaxVoltage()

```
double AisDCCurrentSweepElement::getMaxVoltage ( ) const
```

get the value set for the maximum voltage. The experiment will end when it reaches this value.

## Returns

the value set for the maximum voltage.

## Note

this is an optional parameter. If no value has been set, the default value is positive infinity

## 8.8.3.4 getMinVoltage()

```
\label{thm:double_AisDCCurrentSweepElement::getMinVoltage ( ) const.}
```

Returns

the value set for the minimum voltage in volts.

get the value set minimum for the voltage in volts.

Note

this is an optional parameter. If no value has been set, the default value is negative infinity

## 8.8.3.5 getName()

```
QString AisDCCurrentSweepElement::getName ( ) const [override] get the name of the element.
```

Returns

The name of the element: "DC Current Linear Sweep".

## 8.8.3.6 getSamplingInterval()

```
double AisDCCurrentSweepElement::getSamplingInterval ( ) const
get how frequently we are sampling the data.
```

Returns

the data sampling interval value in seconds.

## 8.8.3.7 getScanRate()

```
\label{thm:const} \mbox{double AisDCCurrentSweepElement::getScanRate ( ) const} \\ \mbox{get the value set for the scan rate}.
```

Returns

the value set for the scan rate in A/s.

See also

setScanRate

## 8.8.3.8 getStartingCurrent()

 $\verb|double AisDCCurrentSweepElement::getStartingCurrent ( ) const|\\$ 

get the value set for the starting current.

#### Returns

the value set for the constant current in Amps.

## 8.8.3.9 setEndingCurrent()

set the value for the ending current.

#### **Parameters**

#### 8.8.3.10 setMaxVoltage()

```
void AisDCCurrentSweepElement::setMaxVoltage ( \label{eq:double_maxVoltage} \ )
```

set a maximum voltage to stop the experiment.

The is an **optional** condition. If nothing is set, then the experiment will not stop based on an upper-limit voltage value. If a maximum voltage is set, the experiment will continue to run as long as the measured voltage is below that value.

#### **Parameters**

```
maxVoltage the maximum voltage value in volts at which the experiment will stop.
```

## 8.8.3.11 setMinVoltage()

```
void AisDCCurrentSweepElement::setMinVoltage ( \label{eq:minVoltage} \ \ )
```

set a minimum voltage to stop the experiment.

The is an **optional** condition. If nothing is set, then the experiment will not stop based on an lower-limit voltage value. If a maximum voltage is set, the experiment will continue to run as long as the measured voltage is above that value.

#### **Parameters**

	minVoltage	the minimum voltage value in volts at which the experiment will stop.	
--	------------	---	--

## 8.8.3.12 setSamplingInterval()

set how frequently we are sampling the data.

#### **Parameters**

samplingInterval	the data sampling interval value in seconds.
------------------	--

## 8.8.3.13 setScanRate()

set the value for the current scan rate.

The scan rate represents the value of the discrete current step size in one second in the linear sweep.

## **Parameters**

scanRate	the value to set for the scan rate.
Scarii iaic	the value to set for the scar rate.

## 8.8.3.14 setStartingCurrent()

```
\label{local_current} \mbox{ void AisDCCurrentSweepElement::setStartingCurrent (} \\ \mbox{ double } startingCurrent \mbox{ )}
```

set the value for the starting current.

## **Parameters**

startingCurrent	the value to set for the starting current in Amps

The documentation for this class was generated from the following file:

· AisDCCurrentSweepElement.h

## 8.9 AisDCData Struct Reference

a structure containing DC data information.

#include <AisDataPoints.h>

## **Public Attributes**

· double timestamp

the time at which the DC data arrived.

· double workingElectrodeVoltage

the measured working electrode voltage in volts.

• double counterElectrodeVoltage

the measured counter electrode voltage in volts.

· double current

the measured electric current value in Amps

• double temperature

the measured temperature in Celsius.

## 8.9.1 Detailed Description

a structure containing DC data information.

The documentation for this struct was generated from the following file:

· AisDataPoints.h

# 8.10 AisDCPotentialSweepElement Class Reference

this experiment performs a DC potential sweep from the **starting current** to the **ending current** which progresses linearly according to the **scan rate**.

#include <AisDCPotentialSweepElement.h>

Inherits AisAbstractElement.

#### **Public Member Functions**

 AisDCPotentialSweepElement (double startPotential, double endPotential, double scanRate, double samplingInterval)

the potential sweep element constructor.

AisDCPotentialSweepElement (const AisDCPotentialSweepElement &)

copy constructor for the AisDCPotentialSweepElement object.

• AisDCPotentialSweepElement & operator= (const AisDCPotentialSweepElement &)

overload equal to operator for the AisDCPotentialSweepElement object.

QString getName () const override

get the name of the element.

QStringList getCategory () const override

get a list of applicable categories of the element.

double getStartingPot () const

get the value set for the starting potential.

void setStartingPot (double startingPotential)

set the value for the starting potential.

bool isStartVoltageVsOCP () const

tells whether the starting potential is set against the open-circuit voltage or the reference terminal.

void setStartVoltageVsOCP (bool startVoltageVsOCP)

set whether to reference the starting potential against the open-circuit voltage or the reference terminal.

• double getEndingPot () const

get the value set for the ending potential value.

void setEndingPot (double endingPotential)

set the ending potential value.

• bool isEndVoltageVsOCP () const

tells whether the end voltage is set with respect to the open circuit voltage or the reference terminal.

void setEndVoltageVsOCP (bool endVoltageVsOCP)

set whether to reference the end voltage against the open-circuit voltage or the reference terminal.

• double getScanRate () const

get the value set for the voltage scan rate.

void setScanRate (double scanRate)

set the value for the voltage scan rate.

double getSamplingInterval () const

get how frequently we are sampling the data.

void setSamplingInterval (double samplingInterval)

set how frequently we are sampling the data.

bool isAutoRange () const

tells whether the current range is set to auto-select or not.

void setAutoRange ()

set to auto-select the current range.

double getApproxMaxCurrent () const


get the value set for the expected maximum current.

void setApproxMaxCurrent (double approxMaxCurrent)

set maximum current expected, for manual current range selection.

# 8.10.1 Detailed Description

this experiment performs a DC potential sweep from the **starting current** to the **ending current** which progresses linearly according to the **scan rate**.

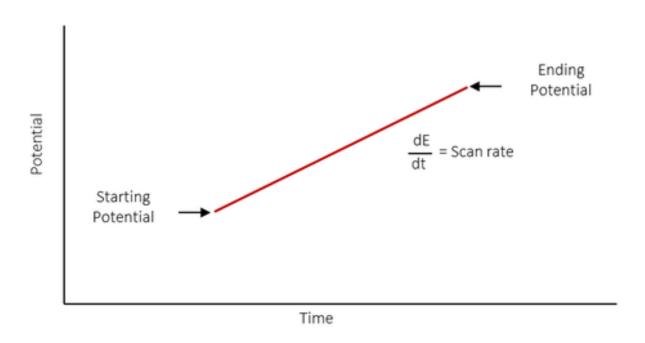

## 8.10.2 Constructor & Destructor Documentation

## 8.10.2.1 AisDCPotentialSweepElement()

the potential sweep element constructor.

#### **Parameters**

startPotential	the value of the starting potential in volts
endPotential	the value of the ending potential in volts
scanRate	the voltage scan rate in V/s
samplingInterval	how frequently we are sampling the data.

## 8.10.3 Member Function Documentation

## 8.10.3.1 getApproxMaxCurrent()

 $\verb|double AisDCP| otentialSweepElement::getApproxMaxCurrent ( ) const$ 

get the value set for the expected maximum current.

#### Returns

the value set for the expected maximum current in Amps.

#### Note

if nothing was manually set, the device will auto-select the current range and the return value will be positive infinity.

## 8.10.3.2 getCategory()

```
QStringList AisDCPotentialSweepElement::getCategory ( ) const [override] get a list of applicable categories of the element.
```

#### Returns

A list of applicable categories: ("Potentiostatic Control", "Basic Experiments").

get a list of applicable categories of the element.

## Returns

A list of applicable categories: ("Potentiostatic Control", "Basic Experiments").

## 8.10.3.3 getEndingPot()

```
double AisDCPotentialSweepElement::getEndingPot ( ) const
```

get the value set for the ending potential value.

This is the value of the voltage at which the experiment will stop.

## Returns

the value set for the ending voltage in volts.

#### 8.10.3.4 getName()

QString AisDCPotentialSweepElement::getName ( ) const [override] get the name of the element.

## Returns

The name of the element: "DC Potential Linear Sweep".

## 8.10.3.5 getSamplingInterval()

double AisDCPotentialSweepElement::getSamplingInterval ( ) const get how frequently we are sampling the data.

#### Returns

the data sampling interval value in seconds.

## 8.10.3.6 getScanRate()

 $\label{thm:const} \mbox{double AisDCPotentialSweepElement::getScanRate ( ) const} \\ \mbox{get the value set for the voltage scan rate.}$ 

#### Returns

the value set for the voltage scan rate in V/s

#### See also

setScanRate

## 8.10.3.7 getStartingPot()

double AisDCPotentialSweepElement::getStartingPot ( ) const
get the value set for the starting potential.

#### Returns

the value of the starting potential in volts.

#### 8.10.3.8 isAutoRange()

```
bool AisDCPotentialSweepElement::isAutoRange ( ) const
```

tells whether the current range is set to auto-select or not.

#### Returns

true if the current range is set to auto-select and false if a rage has been selected.

## 8.10.3.9 isEndVoltageVsOCP()

```
bool AisDCPotentialSweepElement::isEndVoltageVsOCP ( ) const
```

tells whether the end voltage is set with respect to the open circuit voltage or the reference terminal.

#### Returns

true if the end voltage is set with respect to the open-circuit voltage and false if set against the reference terminal.

#### See also

setEndVoltageVsOCP

#### 8.10.3.10 isStartVoltageVsOCP()

```
bool AisDCPotentialSweepElement::isStartVoltageVsOCP ( ) const
```

tells whether the starting potential is set against the open-circuit voltage or the reference terminal.

#### Returns

true if the starting potential is set against the open-circuit voltage and false if it is set against the reference terminal.

## See also

setStartVoltageVsOCP

## 8.10.3.11 setApproxMaxCurrent()

```
\label{thm:cond} \mbox{void AisDCPotentialSweepElement::setApproxMaxCurrent (} \\ \mbox{double } approxMaxCurrent \mbox{)}
```

set maximum current expected, for manual current range selection.

The is an **optional** parameter. If nothing is set, the device will auto-select the current range.

#### **Parameters**

## 8.10.3.12 setAutoRange()

```
void AisDCPotentialSweepElement::setAutoRange ( )
```

set to auto-select the current range.

This option is set by default. There is no need to call this function to auto-select if the range was not manually set.

## 8.10.3.13 setEndingPot()

set the ending potential value.

This is the value of the voltage at which the experiment will stop.

#### **Parameters**

endingPotential the value to set for the	ne ending potential in volts.
--	-------------------------------

## 8.10.3.14 setEndVoltageVsOCP()

```
\label{local_problem} \begin{tabular}{ll} \b
```

set whether to reference the end voltage against the open-circuit voltage or the reference terminal.

The reference terminal is for you to connect to any reference point you like. Connect it to the working electrode to reference ground.

#### **Parameters**

endVoltageVsOCP	true to set the end voltage to be referenced against the open-circuit voltage and false if
	set against the reference terminal.

## Note

by default, this is set to false.

## 8.10.3.15 setSamplingInterval()

```
\label{lem:condition} \mbox{void AisDCPotentialSweepElement::setSamplingInterval (} \\ \mbox{double } samplingInterval \mbox{)}
```

set how frequently we are sampling the data.

#### **Parameters**

samplingInterval the data sampling interval value in seconds	s.
--	----

## 8.10.3.16 setScanRate()

set the value for the voltage scan rate.

The scan rate represents the value of the discrete voltage step size in one second in the linear sweep.

#### **Parameters**

```
scanRate the value to set for the scan rate.
```

## 8.10.3.17 setStartingPot()

set the value for the starting potential.

#### **Parameters**

startingPotential	the value of the starting potential in volts

## 8.10.3.18 setStartVoltageVsOCP()

```
\label{thm:cond} \mbox{void AisDCPotentialSweepElement::setStartVoltageVsOCP (} \\ \mbox{bool } startVoltageVsOCP \mbox{ )}
```

set whether to reference the starting potential against the open-circuit voltage or the reference terminal.

The reference terminal is for you to connect to any reference point you like. Connect it to the working electrode to reference ground.

#### **Parameters**

startVoltageVsOCP	true to if the starting potential is set to reference the open-circuit voltage and false if set
	against the reference terminal.

Note

by default, this is set to false.

The documentation for this class was generated from the following file:


· AisDCPotentialSweepElement.h

## 8.11 AisDeviceTracker Class Reference

This class is used track device connections to the computer. It can establish connection with plugged-in devices. It also provides instrument handlers specific to each connected device which can provide control of the specific device like starting experiments.

#include <AisDeviceTracker.h>

Inheritance diagram for AisDeviceTracker:

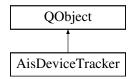

## **Signals**

- void newDeviceConnected (const QString &deviceName)
  - a signal to be emitted whenever a new connection has been successfully established with a device.
- void deviceDisconnected (const QString &deviceName)
  - a signal to be emitted whenever a device has been disconnected.
- void firmwareUpdateNotification (const QString &message)

## **Public Member Functions**

- AisErrorCode connectToDeviceOnComPort (const QString &comPort)
  - establish a connection with a device connected on a USB port.
- const AisInstrumentHandler & getInstrumentHandler (const QString &deviceName) const
  - get an instrument handler to control a specific device.
- const std::list< QString > getConnectedDevices () const
  - get a list of all the connected devices.
- int connectAllPluggedInDevices ()
  - connect all devices physically plugged to the computer.
- AisErrorCode updateFirmwareOnComPort (QString comport) const
  - update firmware on connected device at USB port.
- int updateFirmwareOnAllAvailableDevices ()
  - request firmware update for all available devices.

## **Static Public Member Functions**

• static AisDeviceTracker \* Instance ()

## 8.11.1 Detailed Description

This class is used track device connections to the computer. It can establish connection with plugged-in devices. It also provides instrument handlers specific to each connected device which can provide control of the specific device like starting experiments.

#### 8.11.2 Member Function Documentation

## 8.11.2.1 connectAllPluggedInDevices()

```
int AisDeviceTracker::connectAllPluggedInDevices ( )
```

connect all devices physically plugged to the computer.

This will automatically detect all the communication ports that have devices plugged in and establish a connection with each.

#### Returns

the number of *new* devices that have successfully established a connection with the computer. If a device has already been connected before calling this function, it will not be counted in the return value.

Note

emits newDeviceConnected() signal with the device name for each successful connection.

#### 8.11.2.2 connectToDeviceOnComPort()

establish a connection with a device connected on a USB port.

#### **Parameters**

*comPort* the communication port to connect through.

#### Returns

AisErrorCode::Success if a connection was established with the device through the given communication port. If not successful, possible returned errors are:

- AisErrorCode::Unknown
- AisErrorCode::FirmwareNotSupported
- AisErrorCode::ConnectionFailed

#### Note

emits newDeviceConnected() signal with the device name if establishing the connection was successful.

You need to specify the communication port specific to your computer. For example, on PC, you may find your port number through the 'device manager'. An example would be "COM15".

#### 8.11.2.3 deviceDisconnected

a signal to be emitted whenever a device has been disconnected.

#### **Parameters**

deviceName the name of the newly disconnected device.

#### 8.11.2.4 getConnectedDevices()

```
\verb|const| std::list< QString| > \verb|AisDeviceTracker::getConnectedDevices| ( ) | const| \\
```

get a list of all the connected devices.

## Returns

a list of all the connected devices.

#### 8.11.2.5 getInstrumentHandler()

get an instrument handler to control a specific device.

#### **Parameters**

name of the connected device to get the instrument handler for.	deviceName
---	------------

#### Returns

the instrument handler that controls the specified device.

#### Note

You may get a list of the connected devices using getConnectedDevices(). Also, whenever a device has been connected by calling connectToDeviceOnComPort(), a signal is emitted with the device name. A signal and slot example is shown here.

#### See also

AisInstrumentHandler connectToDeviceOnComPort() getConnectedDevices()

#### 8.11.2.6 newDeviceConnected

a signal to be emitted whenever a new connection has been successfully established with a device.

## Parameters

#### Note

this signal will be emitted for each newly connected device whenever either connectToDeviceOnComPort() or connectAllPluggedInDevices() successfully established connections.

#### 8.11.2.7 updateFirmwareOnAllAvailableDevices()

```
int AisDeviceTracker::updateFirmwareOnAllAvailableDevices ( )
```

request firmware update for all available devices.

This will automatically detect devices not currently in use and update firmware if necessary.

#### Returns

the number of devices that have successfully requested for firmware update. If a device has already been updated firmware before calling this function, it will not be counted in the return value. If any error is generated while requesting firmware update, it will not be counted in the return value.

#### Note

emits firmwareUpdateNotification() signal will provide notification regarding firmware update of all devices. You can update firmware when you reset the device physically through reset button.

#### See also

updateFirmwareOnComPort

## 8.11.2.8 updateFirmwareOnComPort()

update firmware on connected device at USB port.

#### **Parameters**

comPort	the communication port to connect through.
---------	--

## Returns

AisErrorCode::Success if firmware update successfully initiated through the given communication port. If not successful, possible returned errors are:

- AisErrorCode::FirmwareUptodate
- AisErrorCode::ConnectionFailed

## Note

emits firmwareUpdateNotification() signal to provide firmware update progress.

You need to specify the communication port specific to your computer. For example, on PC, you may find your port number through the 'device manager'. An example would be "COM15".

The documentation for this class was generated from the following file:

· AisDeviceTracker.h

# 8.12 AisDiffPulseVoltammetryElement Class Reference

In this experiment, the working electrode holds at a **starting potential** during the **quiet time**. Then it applies a train of pulses superimposed on a staircase waveform, with a uniform **potential step** size. The potential continues to step until the **final potential** is reached.

```
#include <AisDiffPulseVoltammetryElement.h>
```

Inherits AisAbstractElement.

#### **Public Member Functions**

 AisDiffPulseVoltammetryElement (double startVoltage, double endVoltage, double voltageStep, double pulseHeight, double pulseWidth, double pulsePeriod)

the differential pulse element constructor.

• AisDiffPulseVoltammetryElement (const AisDiffPulseVoltammetryElement &)

copy constructor for the AisDiffPulseVoltammetryElement object.

AisDiffPulseVoltammetryElement & operator= (const AisDiffPulseVoltammetryElement &)

overload equal to operator for the AisDiffPulseVoltammetryElement object.

· QString getName () const override

get the name of the element.

QStringList getCategory () const override

get a list of applicable categories of the element.

double getStartVoltage () const

get the value set for the start voltage.

void setStartVoltage (double startVoltage)

set the value for the start voltage.

bool isStartVoltageVsOCP () const

tells whether the starting potential is set against the open-circuit voltage or the reference terminal.

void setStartVoltageVsOCP (bool startVoltageVsOCP)

set whether to reference the starting potential against the open-circuit voltage or the reference terminal.

• double getEndVoltage () const

get the value set for the ending potential value.

void setEndVoltage (double endVoltage)

set the ending potential value.

• bool isEndVoltageVsOCP () const

tells whether the end voltage is set with respect to the open circuit voltage or the reference terminal.

void setEndVoltageVsOCP (bool endVoltageVsOCP)

set whether to reference the end voltage against the open-circuit voltage or the reference terminal.

• double getVStep () const

get the value set for the potential step.

• void setVStep (double vStep)

set the value for the potential step.

double getPulseHeight () const

get the value set for the pulse height.

void setPulseHeight (double pulseHeight)

set the value for the pulse height.

· double getPulseWidth () const

get the value set for the pulse width.

void setPulseWidth (double pulseWidth)

set the value for the pulse width.

• double getPulsePeriod () const

get the value set for the pulse period.

void setPulsePeriod (double pulsePeriod)

set the value for the pulse period.

• bool isAutoRange () const

tells whether the current range is set to auto-select or not.

void setAutoRange ()

set to auto-select the current range.

double getApproxMaxCurrent () const

get the value set for the expected maximum current.


void setApproxMaxCurrent (double approxMaxCurrent)

set maximum current expected, for manual current range selection.

## 8.12.1 Detailed Description

In this experiment, the working electrode holds at a **starting potential** during the **quiet time**. Then it applies a train of pulses superimposed on a staircase waveform, with a uniform **potential step** size. The potential continues to step until the **final potential** is reached.

The **pulse width** is the amount of time between the rising and falling edge of a pulse. The **pulse period** is the amount of time between the beginning of one pulse and the beginning of the next.

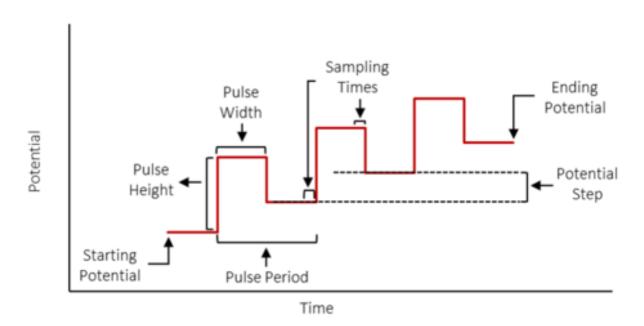

## 8.12.2 Constructor & Destructor Documentation

## 8.12.2.1 AisDiffPulseVoltammetryElement()

the differential pulse element constructor.

#### **Parameters**

startVoltage	the value of the starting potential in volts
endVoltage	the value of the ending potential in volts
Generated & Adopt	ral the watus set for the voltage step in volts.
pulseHeight	the value for the pulse height in volts.
pulseWidth	the value for the pulse width in volts.
pulsePeriod	the value for the pulse period in volts.

## 8.12.3 Member Function Documentation

## 8.12.3.1 getApproxMaxCurrent()

 $\verb|double AisDiffPulseVoltammetryElement::getApproxMaxCurrent () const$ 

get the value set for the expected maximum current.

#### Returns

the value set for the expected maximum current in Amps.

#### Note

if nothing was manually set, the device will auto-select the current range and the return value will be positive infinity.

## 8.12.3.2 getCategory()

```
QStringList AisDiffPulseVoltammetryElement::getCategory ( ) const [override] get a list of applicable categories of the element.
```

#### Returns

A list of applicable categories: ("Potentiostatic Control", "Basic Voltammetry", "Pulse Voltammetry").

get a list of applicable categories of the element.

## Returns

A list of applicable categories: ("Potentiostatic Control", "Basic Voltammetry", "Pulse Voltammetry").

## 8.12.3.3 getEndVoltage()

```
\label{thm:double_AisDiffPulseVoltammetryElement::getEndVoltage ( ) const.}
```

get the value set for the ending potential value.

This is the value of the voltage at which the experiment will stop.

## Returns

the value set for the ending voltage in volts.

## 8.12.3.4 getName()

QString AisDiffPulseVoltammetryElement::getName ( ) const [override]

get the name of the element.

## Returns

The name of the element: "Differential Pulse Potential Voltammetry".

## 8.12.3.5 getPulseHeight()

 $\label{thm:constraint} \mbox{double AisDiffPulseVoltammetryElement::} \mbox{getPulseHeight ( ) const}$ 

get the value set for the pulse height.

#### Returns

the value set for the pulse height in volts.

#### See also

setPulseHeight

## 8.12.3.6 getPulsePeriod()

 $\label{thm:constraint} \mbox{double AisDiffPulseVoltammetryElement::} \mbox{getPulsePeriod ( ) const}$ 

get the value set for the pulse period.

#### Returns

the value set for the pulse period in seconds.

## See also

setPulsePeriod

## 8.12.3.7 getPulseWidth()

get the value set for the pulse width.

```
\label{thm:const} \mbox{double AisDiffPulseVoltammetryElement::} \mbox{getPulseWidth () const}
```

Returns

the value set for the pulse width in seconds.

See also

setPulseWidth

## 8.12.3.8 getStartVoltage()

```
\label{thm:const} \mbox{double AisDiffPulseVoltammetryElement::getStartVoltage ( ) const} \\ \mbox{get the value set for the start voltage}.
```

Returns

the value of the start voltage in volts.

# 8.12.3.9 getVStep()

```
\begin{tabular}{ll} \begin{tabular}{ll} double & AisDiffPulseVoltammetryElement::getVStep () & const \\ \end{tabular} \label{table} get the value set for the potential step.
```

Returns

the value set for the potential step in volts.

See also

setVStep

#### 8.12.3.10 isAutoRange()

```
bool AisDiffPulseVoltammetryElement::isAutoRange ( ) const
```

tells whether the current range is set to auto-select or not.

#### Returns

true if the current range is set to auto-select and false if a rage has been selected.

## 8.12.3.11 isEndVoltageVsOCP()

```
bool AisDiffPulseVoltammetryElement::isEndVoltageVsOCP ( ) const
```

tells whether the end voltage is set with respect to the open circuit voltage or the reference terminal.

#### Returns

true if the end voltage is set with respect to the open-circuit voltage and false if set against the reference terminal.

#### See also

setEndVoltageVsOCP

#### 8.12.3.12 isStartVoltageVsOCP()

```
bool AisDiffPulseVoltammetryElement::isStartVoltageVsOCP ( ) const
```

tells whether the starting potential is set against the open-circuit voltage or the reference terminal.

#### Returns

true if the starting potential is set against the open-circuit voltage and false if it is set against the reference terminal.

## See also

setStartVoltageVsOCP

## 8.12.3.13 setApproxMaxCurrent()

```
\label{lem:condition} \mbox{void AisDiffPulseVoltammetryElement::setApproxMaxCurrent (} \\ \mbox{double } approxMaxCurrent \mbox{)}
```

set maximum current expected, for manual current range selection.

The is an **optional** parameter. If nothing is set, the device will auto-select the current range.

#### **Parameters**

approxMaxCurrent	the value for the maximum current expected in Amps.
------------------	---

## 8.12.3.14 setAutoRange()

```
void AisDiffPulseVoltammetryElement::setAutoRange ( )
```

set to auto-select the current range.

This option is set by default. There is no need to call this function to auto-select if the range was not manually set.

## 8.12.3.15 setEndVoltage()

set the ending potential value.

This is the value of the voltage at which the experiment will stop.

#### **Parameters**

	endVoltage	the value to set for the ending voltage in volts.
1	ona vonago	ino value to bet for the ending vertage in verte.

## 8.12.3.16 setEndVoltageVsOCP()

```
void AisDiffPulseVoltammetryElement::setEndVoltageVsOCP ( bool\ endVoltageVsOCP\ )
```

set whether to reference the end voltage against the open-circuit voltage or the reference terminal.

The reference terminal is for you to connect to any reference point you like. Connect it to the working electrode to reference ground.

#### **Parameters**

endVoltageVsOCP	true to set the end voltage to be referenced against the open-circuit voltage and false if
	set against the reference terminal.

## Note

by default, this is set to false.

#### 8.12.3.17 setPulseHeight()

```
void AisDiffPulseVoltammetryElement::setPulseHeight ( \mbox{double } pulse\mbox{\it Height })
```

set the value for the pulse height.

For the first pulse, the pulse height is added to the starting potential. For the next pulse, the pulse height is added to the potential voltage and the potential step. In general, the pulse height is added to the potential step and the starting voltage of the last pulse.

## **Parameters**

pulseHeight	the value to set for the pulse height in volts.
-------------	---

## 8.12.3.18 setPulsePeriod()

```
void AisDiffPulseVoltammetryElement::setPulsePeriod ( {\tt double}\ pulsePeriod\ )
```

set the value for the pulse period.

The pulse period is the time spent between the starts of two consecutive pulses.

#### **Parameters**

pulsePeriod	the value to set for the pulse period in seconds.

#### 8.12.3.19 setPulseWidth()

```
void AisDiffPulseVoltammetryElement::setPulseWidth ( \mbox{double } pulseWidth \ )
```

set the value for the pulse width.

The pulse width is the value in seconds for the time spent at the same voltage set for the pulse height.

## **Parameters**

pulseWidth	the value to set for the pulse width in seconds.
1	

#### See also

setPulseHeight

#### 8.12.3.20 setStartVoltage()

```
void AisDiffPulseVoltammetryElement::setStartVoltage ( \label{eq:double_startVoltage} \ )
```

set the value for the start voltage.

## **Parameters**

	startVoltage	the value of the start voltage in volts	I
--	--------------	---	---

## 8.12.3.21 setStartVoltageVsOCP()

```
void AisDiffPulseVoltammetryElement::setStartVoltageVsOCP ( bool\ startVoltageVsOCP\ )
```

set whether to reference the starting potential against the open-circuit voltage or the reference terminal.

The reference terminal is for you to connect to any reference point you like. Connect it to the working electrode to reference ground.

#### **Parameters**

startVoltageVsOCP	true to if the starting potential is set to reference the open-circuit voltage and false if set	
	against the reference terminal.	

#### Note

by default, this is set to false.

## 8.12.3.22 setVStep()

```
void AisDiffPulseVoltammetryElement::setVStep ( \mbox{double } vStep \mbox{ )}
```

set the value for the potential step.

The potential step is the difference between the starting potential of two consecutive pulses.

## **Parameters**

vStep	the value to set for the potential step in volts.

The documentation for this class was generated from the following file:

· AisDiffPulseVoltammetryElement.h

# 8.13 AisEISGalvanostaticElement Class Reference

This experiment records the complex impedance of the experimental cell in galvanostatic mode, starting from the start frequency and sweeping through towards the end frequency, with a fixed number of frequency steps per decade.

#include <AisEISGalvanostaticElement.h>

Inherits AisAbstractElement.

#### **Public Member Functions**

 AisEISGalvanostaticElement (double startFrequency, double endFrequency, double stepsPerDecade, double currentBias, double currentAamplitude)

the EIS galvanostatic element constructor.

AisEISGalvanostaticElement (const AisEISGalvanostaticElement &)

copy constructor for the AisEISGalvanostaticElement object.

AisEISGalvanostaticElement & operator= (const AisEISGalvanostaticElement &)

overload equal to operator for the AisEISGalvanostaticElement object.

• QString getName () const override

get the name of the element.

• QStringList getCategory () const override

get a list of applicable categories of the element.

• double getStartFreq () const

get the value set for the current starting frequency

void setStartFreq (double startFreq)

set the value for the current starting frequency.

• double getEndFreq () const

the value set for the current ending frequency.

void setEndFreq (double endFreq)

set the value for the current end frequency.

• double getStepsPerDecade () const

get the value set for the current frequency steps per decade.

void setStepsPerDecade (double stepsPerDecade)

set the number of the current frequency steps per decade.

• double getBiasCurrent () const

get the value set for the DC bias (DC offset).

void setBiasCurrent (double biasCurrent)

set the value for the DC bias (DC offset).

double getAmplitude () const

the value to set for the AC current amplitude.


void setAmplitude (double amplitude)

set the value for the AC current amplitude.

# 8.13.1 Detailed Description

This experiment records the complex impedance of the experimental cell in galvanostatic mode, starting from the start frequency and sweeping through towards the end frequency, with a fixed number of frequency steps per decade.

Important parameters include the DC bias and the AC excitation amplitude.

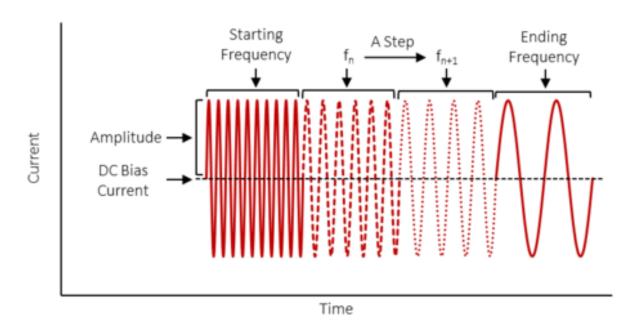

## 8.13.2 Constructor & Destructor Documentation

# 8.13.2.1 AisEISGalvanostaticElement()

the EIS galvanostatic element constructor.

#### **Parameters**

startFrequency	the value for the current starting frequency
endFrequency	the value for the current ending frequency
stepsPerDecade	the value for the current frequency steps per decade.
currentBias	the value for the DC bias (DC offset).
currentAamplitude	the AC current amplitude.

# 8.13.3 Member Function Documentation

# 8.13.3.1 getAmplitude()

double AisEISGalvanostaticElement::getAmplitude ( ) const

the value to set for the AC current amplitude.

#### **Returns**

the value set for the AC current amplitude in Amps.

#### 8.13.3.2 getBiasCurrent()

 $\verb|double AisEISGalvanostaticElement::getBiasCurrent () const$ 

get the value set for the DC bias (DC offset).

#### Returns

the value set for the DC bias in Amps.

## 8.13.3.3 getCategory()

QStringList AisEISGalvanostaticElement::getCategory ( ) const [override]

get a list of applicable categories of the element.

### Returns

A list of applicable categories: ("Galvanostatic Control", "Impedance Methods", "Basic Experiments").

get a list of applicable categories of the element.

### Returns

A list of applicable categories: ("Galvanostatic Control", "Impedance Methods", "Basic Experiments").

#### 8.13.3.4 getEndFreq()

```
double AisEISGalvanostaticElement::getEndFreq ( ) const
```

the value set for the current ending frequency.

#### Returns

the value set for the current end frequency in Hz

#### 8.13.3.5 getName()

```
QString AisEISGalvanostaticElement::getName ( ) const [override] get the name of the element.
```

#### Returns

The name of the element: "Galvanostatic EIS".

## 8.13.3.6 getStartFreq()

```
double AisEISGalvanostaticElement::getStartFreq ( ) const
get the value set for the current starting frequency
```

#### Returns

the value set for the current start frequency in Hz?

# 8.13.3.7 getStepsPerDecade()

```
double AisEISGalvanostaticElement::getStepsPerDecade ( ) const get the value set for the current frequency steps per decade.
```

### Returns

the value set for the current frequency steps per decade. This is unit-less.

# 8.13.3.8 setAmplitude()

set the value for the AC current amplitude.

#### **Parameters**

# 8.13.3.9 setBiasCurrent()

```
void AisEISGalvanostaticElement::setBiasCurrent ( \mbox{double } biasCurrent \ )
```

set the value for the DC bias (DC offset).

#### **Parameters**

biasCurrent the value to set for the DC bias in Am	ps.
--	-----

# 8.13.3.10 setEndFreq()

```
void AisEISGalvanostaticElement::setEndFreq ( \mbox{double } \mbox{endFreq } \mbox{)}
```

set the value for the current end frequency.

### **Parameters**

endFreq	the value to set for the current end frequency in Hz
---------	--

# 8.13.3.11 setStartFreq()

set the value for the current starting frequency.

## **Parameters**

startFrea	the value to set the current starting frequency in Hz
olai li i oq	ino value to bet the danient starting hequeries in the

### 8.13.3.12 setStepsPerDecade()

```
void AisEISGalvanostaticElement::setStepsPerDecade ( \mbox{double } stepsPerDecade \ )
```

set the number of the current frequency steps per decade.

**Parameters** 

stepsPerDecade the value to set for the number of steps per decade.

The documentation for this class was generated from the following file:

AisEISGalvanostaticElement.h

# 8.14 AisEISPotentiostaticElement Class Reference

This experiment records the complex impedance of the experimental cell in potentiostatic mode, starting from the start frequency and sweeping through towards the **end frequency**, with a fixed number of frequency **steps per decade**.

```
#include <AisEISPotentiostaticElement.h>
```

Inherits AisAbstractElement.

#### **Public Member Functions**

 AisEISPotentiostaticElement (double startFrequency, double endFrequency, double stepsPerDecade, double voltageBias, double voltageAamplitude)

the EIS potentiostatic element

• AisEISPotentiostaticElement (const AisEISPotentiostaticElement &)

copy constructor for the AisEISPotentiostaticElement object.

• AisEISPotentiostaticElement & operator= (const AisEISPotentiostaticElement &)

overload equal to operator for the AisEISPotentiostaticElement object.

QString getName () const override

get the name of the element.

• QStringList getCategory () const override

get a list of applicable categories of the element.

• double getStartFreq () const

get the value set for the voltage starting frequency

void setStartFreq (double startFreq)

set the value for the voltage starting frequency.

• double getEndFreq () const

the value set for the voltage ending frequency.

void setEndFreq (double endFreq)

set the value for the voltage end frequency.

double getStepsPerDecade () const

get the value set for the voltage frequency steps per decade.

void setStepsPerDecade (double stepsPerDecade)

set the number of the voltage frequency steps per decade.

• double getBiasVoltage () const

get the value set for the DC bias (DC offset).

• void setBiasVoltage (double biasVoltage)

set the value for the DC bias (DC offset).

• bool isBiasVoltageVsOCP () const

tells whether the DC-bias voltage is referenced against the open-circuit voltage or the reference cable.

void setBiasVoltageVsOCP (bool biasVsOCP)

set whether to reference the DC-bias voltage against the open-circuit voltage or the reference terminal.

• double getAmplitude () const

the value to set for the AC voltage amplitude.


· void setAmplitude (double amplitude)

set the value for the AC voltage amplitude.

## 8.14.1 Detailed Description

This experiment records the complex impedance of the experimental cell in potentiostatic mode, starting from the start frequency and sweeping through towards the end frequency, with a fixed number of frequency steps per decade.

Important parameters include the **DC bias** and the **AC excitation amplitude**.

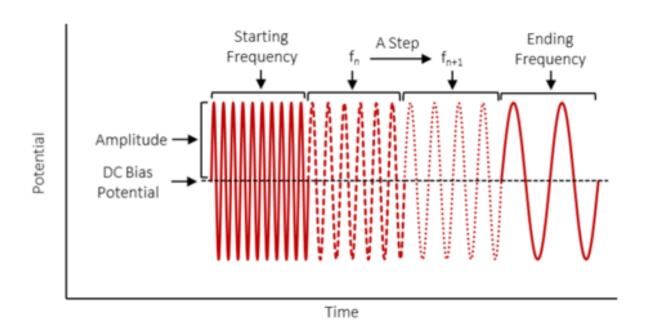

#### 8.14.2 Constructor & Destructor Documentation

## 8.14.2.1 AisEISPotentiostaticElement()

## the EIS potentiostatic element

#### **Parameters**

startFrequency	the value for the voltage starting frequency
endFrequency	the value for the voltage ending frequency
stepsPerDecade	the value for the voltage frequency steps per decade.
voltageBias	the value for the DC bias (DC offset).
voltageAamplitude	the AC voltage amplitude.

# 8.14.3 Member Function Documentation

# 8.14.3.1 getAmplitude()

```
double AisEISPotentiostaticElement::getAmplitude ( ) const
```

the value to set for the AC voltage amplitude.

## Returns

the value set for the AC voltage amplitude in volts.

# 8.14.3.2 getBiasVoltage()

```
\verb|double AisEISPotentiostaticElement::getBiasVoltage () const
```

get the value set for the DC bias (DC offset).

#### Returns

the value set for the DC bias in volts.

## 8.14.3.3 getCategory()

```
QStringList AisEISPotentiostaticElement::getCategory ( ) const [override] get a list of applicable categories of the element.
```

#### Returns

A list of applicable categories: ("Potentiostatic Control", "Impedance Methods", "Basic Experiments").

## 8.14.3.4 getEndFreq()

```
double AisEISPotentiostaticElement::getEndFreq ( ) const
```

the value set for the voltage ending frequency.

#### Returns

the value set for the voltage end frequency in Hz

## 8.14.3.5 getName()

```
QString AisEISPotentiostaticElement::getName ( ) const [override]
```

get the name of the element.

## Returns

The name of the element: "Potentiostatic EIS".

## 8.14.3.6 getStartFreq()

```
double AisEISPotentiostaticElement::getStartFreq ( ) const
```

get the value set for the voltage starting frequency

### Returns

the value set for the start frequency in Hz

#### 8.14.3.7 getStepsPerDecade()

```
double AisEISPotentiostaticElement::getStepsPerDecade ( ) const
```

get the value set for the voltage frequency steps per decade.

#### Returns

the value set for the frequency steps per decade. This is unit-less.

# 8.14.3.8 isBiasVoltageVsOCP()

```
bool AisEISPotentiostaticElement::isBiasVoltageVsOCP ( ) const
```

tells whether the DC-bias voltage is referenced against the open-circuit voltage or the reference cable.

The reference terminal is for you to connect to any reference point you like. Connect it to the working electrode to reference ground.

#### Returns

true if the DC-bias voltage is set against the open-circuit voltage and false if it is set against the reference terminal.

# 8.14.3.9 setAmplitude()

set the value for the AC voltage amplitude.

## **Parameters**

amplitude	the value to set for the AC voltage amplitude in volts.
-----------	---

# 8.14.3.10 setBiasVoltage()

```
void AisEISPotentiostaticElement::setBiasVoltage ( {\tt double}\ biasVoltage\ )
```

set the value for the DC bias (DC offset).

#### **Parameters**

biasVoltage	the value to set for the DC bias in volts.
-------------	--

# 8.14.3.11 setBiasVoltageVsOCP()

```
void AisEISPotentiostaticElement::setBiasVoltageVsOCP ( bool biasVsOCP )
```

set whether to reference the DC-bias voltage against the open-circuit voltage or the reference terminal.

#### **Parameters**

biasVsOCP	true to if the DC-bias voltage is set to reference the open-circuit voltage and false if set against	
	the reference terminal.	

# 8.14.3.12 setEndFreq()

```
void AisEISPotentiostaticElement::setEndFreq ( \mbox{double } endFreq \ )
```

set the value for the voltage end frequency.

# Parameters

endFrea	the value to set for the voltage end frequency in Hz

## 8.14.3.13 setStartFreq()

```
void AisEISPotentiostaticElement::setStartFreq ( \label{eq:condition} \texttt{double} \ \ \textit{startFreq} \ )
```

set the value for the voltage starting frequency.

## **Parameters**

startFred	the value to set the starting frequency Hz
starti reg	ine value to set the starting hequeincy riz

### 8.14.3.14 setStepsPerDecade()

```
void AisEISPotentiostaticElement::setStepsPerDecade ( \mbox{double } stepsPerDecade \ )
```

set the number of the voltage frequency steps per decade.

#### **Parameters**

stepsPerDecade	the value to set for the number of steps per decade.
----------------	--

The documentation for this class was generated from the following file:

· AisEISPotentiostaticElement.h

## 8.15 AisErrorCode Class Reference

This class contains the possible error codes returned to the user when working with the API.

```
#include <AisErrorCode.h>
```

# **Public Types**

```
    enum ErrorCode: uint8_t {
        Unknown = 255, Success = 0, ConnectionFailed = 1, FirmwareNotSupported = 2,
        FirmwareFileNotFound = 3, FirmwareUptodate = 4, InvalidChannel = 10, BusyChannel = 11,
        DeviceNotFound = 13, ManualExperimentNotRunning = 51, ExperimentNotUploaded = 52,
        ExperimentIsEmpty = 53,
        InvalidParameters = 54, ChannelNotBusy = 55, DeviceCommunicationFailed = 100, FailedToSetManualModeCurrentRange = 101,
        FailedToSetManualModeConstantVoltage = 102, FailedToPauseExperiment = 103, FailedToResumeExperiment = 104, FailedToStopExperiment = 105,
        FailedToUploadExperiment = 106, ExperimentAlreadyPaused = 107, ExperimentAlreadyRun = 108}
```

# **Public Member Functions**

- AisErrorCode (ErrorCode error)
- AisErrorCode (ErrorCode error, QString message)
- QString message () const

a function to get a message explaining the error.

- int value () const
  - a function to get the error code.
- operator ErrorCode () const

# 8.15.1 Detailed Description

This class contains the possible error codes returned to the user when working with the API.

If a function has an AisErrorCode return type, then it needs to be checked for possible failures. The object of this class returned will contain an error code that can be accessed by calling value() member function and an error message that can be accessed by calling

See also

message.

## 8.15.2 Member Enumeration Documentation

## 8.15.2.1 ErrorCode

enum AisErrorCode::ErrorCode : uint8\_t

## Enumerator

Unknown	indicates that the command failed for an unknown reason.
Success	indicates success.
ConnectionFailed	indicates failure connecting the plugged in device when calling
	AisDeviceTracker::connectToDeviceOnComPort.
FirmwareNotSupported	indicates failure connecting the plugged in device when calling
	AisDeviceTracker::connectToDeviceOnComPort because firmware
	update require.
InvalidChannel	indicates that the given channel number is not valid.
BusyChannel	indicates that failure was due to the channel being busy.
DeviceNotFound	indicates that no device was detected to be connected.
ManualExperimentNotRunning	indicates that the given command applies when there is a manual
	experiment running on the channel but there is none.
ExperimentNotUploaded	indicates that the given command applies when an experiment
	has already been uploaded to the channel but there is none.
ExperimentIsEmpty	indicates that the given experiment has no elements. It need to
	contain at least one.
InvalidParameters	indicates that a given parameter is invalid. For example, it is out of
	the allowed range.
ChannelNotBusy	indicates that the given command applies when there is an
	experiment running or paused on the channel but there is none.
DeviceCommunicationFailed	indicates that there was failure in communication with the device.
FailedToSetManualModeCurrentRange	indicates failure of setting manual Mode current range for possible
	communication failure with the device.
FailedToSetManualModeConstantVoltage	indicates failure of setting manual Mode constant voltage for
	possible communication failure with the device.
FailedToPauseExperiment	indicates that pausing the experiment failed because either there
	is no running experiment or for possible communication failure
	with the device.

#### Enumerator

FailedToResumeExperiment	indicates that resuming the experiment failed because either there is no paused experiment or for possible communication failure with the device.
FailedToStopExperiment	indicates that stopping the experiment failed because either there is no running or paused experiment or for possible communication failure with the device.
FailedToUploadExperiment	indicates failure to communicate with the device to upload the experiment.
ExperimentAlreadyPaused	indicates that pausing the experiment failed because experiment is already pause.
ExperimentAlreadyRun	indicates that resuming the experiment failed because experiment is already running. it is not in pause state.

# 8.15.3 Member Function Documentation

## 8.15.3.1 message()

QString AisErrorCode::message ( ) const

a function to get a message explaining the error.

# Returns

a message that explains the error.

## 8.15.3.2 value()

int AisErrorCode::value ( ) const

a function to get the error code.

# Returns

the error code

The documentation for this class was generated from the following file:

· AisErrorCode.h

# 8.16 AisExperiment Class Reference

this class is used to create custom experiments. A custom experiment has a container of contains one or more elements. Once you create elements are set their parameters, you can add them to the container

```
#include <AisExperiment.h>
```

#### **Public Member Functions**

AisExperiment ()

this is the default constructor for the custom experiment.

AisExperiment (const AisExperiment &exp)

this is the copy constructor for the custom experiment.

void operator= (const AisExperiment &exp)

the assignment operator for the custom experiment.

QString getExperimentName () const

get the name of the custom experiment.

QString getDescription () const

get a brief description of the custom experiment.

• QStringList getCategory () const

get the category for the custom experiment.

void setExperimentName (QString name)

set a name for the custom experiment.

void setDescription (QString description)

set a description for the experiment.

bool appendElement (AisAbstractElement & element, uint repeat=1)

append an element to the custom experiment.

bool appendSubExperiment (const AisExperiment &subExp, uint repeat=1)

append a sub experiment to this/(the calling) custom experiment.

#### **Friends**

· class AisInstrumentHandler

## 8.16.1 Detailed Description

this class is used to create custom experiments. A custom experiment has a container of contains one or more elements. Once you create elements are set their parameters, you can add them to the container

Note

we call the basic experiments -that are used to build more complex custom experiments- elements. In contexts where both elements and custom experiments are used, elements will be referred to as elements to make the digestion. In other contexts, elements may also be referred to as experiments as they may indeed be used as experiments.

### 8.16.2 Constructor & Destructor Documentation

# 8.16.2.1 AisExperiment()

this is the copy constructor for the custom experiment.

#### **Parameters**

exp	the custom experiment to copy from.	
exp	the custom experiment to copy from	ı.

## 8.16.3 Member Function Documentation

# 8.16.3.1 appendElement()

append an element to the custom experiment.

#### **Parameters**

element	an elemental experiment to be appended to this/(the calling) custom experiment.
repeat	the number of times this element is to be repeated. This is an optional parameter and is defaulted to equal 1 when not set.

# Returns

true if appending the element was successful and false otherwise.

#### Note

although an element is an experiment, in the context of custom experiments, it is referred to as an element to make a distinction between the two. In other contexts where such distinction is not needed, an element may still be referred to as an experiment.

# 8.16.3.2 appendSubExperiment()

append a sub experiment to this/(the calling) custom experiment.

#### **Parameters**

subExp	a sub experiment to be appended to this/(the calling) custom experiment.	
repeat	the number of times this sub experiment is to be repeated. This is an optional parameter and is	
	defaulted to equal 1 when not set.	

#### Returns

true if appending the sub experiment was successful and false otherwise.

#### 8.16.3.3 getCategory()

```
QStringList AisExperiment::getCategory ( ) const
```

get the category for the custom experiment.

#### Returns

the category set for the custom experiment. If no category has been set, the default category returned is ("Custom").

## 8.16.3.4 getDescription()

```
QString AisExperiment::getDescription ( ) const
```

get a brief description of the custom experiment.

#### Returns

the description set for the custom experiment. If no description has been set, the default description returned is "Not Defined".

# 8.16.3.5 getExperimentName()

```
QString AisExperiment::getExperimentName ( ) const
```

get the name of the custom experiment.

# Returns

the name set for the custom experiment. If no name has been set, the default name returned is "Custom Experiment"

# 8.16.3.6 operator=()

the assignment operator for the custom experiment.

#### **Parameters**

exp the custom experiment to copy from.

#### 8.16.3.7 setDescription()

set a description for the experiment.

#### **Parameters**

description to be set for the custom experiment.

### 8.16.3.8 setExperimentName()

set a name for the custom experiment.

#### **Parameters**

name the name to be set for the custom experiment.

The documentation for this class was generated from the following file:

· AisExperiment.h

# 8.17 AisExperimentNode Struct Reference

a structure containing some information regarding the running element.

```
#include <AisDataPoints.h>
```

# **Public Attributes**

QString stepName

This is the name of the current element running.

· int stepNumber

this number is the order of the element within the custom experiment.

• int substepNumber

this number is the order of the step within the element.

# 8.17.1 Detailed Description

a structure containing some information regarding the running element.

The documentation for this struct was generated from the following file:


· AisDataPoints.h

## 8.18 AisInstrumentHandler Class Reference

this class provides control of the device including starting, pausing, resuming and stopping an experiment on a channel as well as reading the data and other controls of the device.

```
#include <AisInstrumentHandler.h>
```

Inheritance diagram for AisInstrumentHandler:

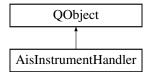

## **Signals**

- void deviceDisconnected ()
  - a signal that is emitted if the device associated with this handler has been disconnected.
- void groundFloatStateChanged (bool grounded)
  - a signal that is emitted when the floating ground connection state has changed.
- void experimentNewElementStarting (uint8\_t channel, const AisExperimentNode &stepInfo)
  - a signal that is emitted whenever a new elemental experiment has started.
- void activeDCDataReady (uint8\_t channel, const AisDCData &DCData)
  - a signal that is emitted whenever new DC data for an active experiment are ready.
- void idleDCDataReady (uint8\_t channel, const AisDCData &DCData)
  - a signal that is emitted whenever new DC data are ready when the device is in an idle state.
- void recoveryDCDataReady (uint8\_t channel, const AisDCData &DCData)
  - a signal that is emitted whenever new DC recovery data are ready.
- void activeACDataReady (uint8\_t channel, const AisACData &ACData)
  - a signal that is emitted whenever new AC data for an active experiment are ready.
- void recoveryACDataReady (uint8\_t channel, const AisACData &ACData)
  - a signal that is emitted whenever new AC recovery data are ready.
- void experimentStopped (uint8\_t channel)
  - a signal that is emitted whenever an experiment was stopped manually or has completed.
- void experimentPaused (uint8\_t channel)
  - a signal that is emitted whenever an experiment was paused.
- void experimentResumed (uint8\_t channel)
  - a signal that is emitted whenever an experiment was resumed.
- void recoverDataErased (bool successful)
  - a signal that is emitted whenever data erase process is completed.

#### **Public Member Functions**

AisErrorCode uploadExperimentToChannel (uint8\_t channel, std::shared\_ptr< AisExperiment > experiment)

upload an already created custom experiment to a specific channel on the device.

AisErrorCode uploadExperimentToChannel (uint8\_t channel, const AisExperiment & experiment) const
upload an already created custom experiment to a specific channel on the device.

AisErrorCode startUploadedExperiment (uint8\_t channel) const

start the previously uploaded experiment on the specific channel.

AisErrorCode skipExperimentStep (uint8 t channel) const

skip the current experiment step and proceed to the next.

AisErrorCode pauseExperiment (uint8\_t channel) const

pause a running experiment on the channel.

AisErrorCode resumeExperiment (uint8 t channel) const

resume a paused experiment on the channel.

• AisErrorCode stopExperiment (uint8\_t channel) const

stop a running or a paused experiment on the channel.

double getExperimentUTCStartTime (uint8 t channel) const

get UTC time for the start of the experiment in seconds.

AisErrorCode setIRComp (uint8\_t channel, double uncompensatedResistance, double compensationLevel)
const

set IR compensation.

AisErrorCode setCompRange (uint8\_t channel, const AisCompRange &compRange) const

set a compensation range with stability factor and bandwidth index.

int8\_t setLinkedChannels (std::vector< uint8\_t > channels) const

connect several channels together.

std::vector< uint8\_t > getLinkedChannels (uint8\_t channel) const

get a list of channels linked to the given channel.

• bool isChannelBusy (uint8\_t channel) const

tells whether the given channel is busy or not.

bool isChannelPaused (uint8\_t channel) const

tells whether the given channel has a paused experiment or not.

std::vector< uint8\_t > getFreeChannels () const

get a list of the currently free channels.

int getNumberOfChannels () const

get the number of all the channels on this device.

• AisErrorCode eraseRecoverData () const

delete the recover data from device.

AisErrorCode startManualExperiment (uint8 t channel) const

start a manual experiment.

AisErrorCode setManualModeSamplingInterval (uint8\_t channel, double value) const

set an interval for sampling the data.

AisErrorCode setManualModeOCP (uint8\_t channel) const

set open-circuit potential mode.

• AisErrorCode setManualModeConstantVoltage (uint8\_t channel, double value) const

set constant voltage for the manual experiment.

• AisErrorCode setManualModeConstantVoltage (uint8\_t channel, double value, int currentRangeIndex) const set constant voltage for the manual experiment and also set a manual current range.

AisErrorCode setManualModeConstantCurrent (uint8\_t channel, double value) const

set constant current for the manual experiment.

• std::vector< std::pair< double, double >> getManualModeCurrentRangeList (uint8\_t channel) const get a list of the applicable current ranges to the given channel specific to your device.

# 8.18.1 Detailed Description

this class provides control of the device including starting, pausing, resuming and stopping an experiment on a channel as well as reading the data and other controls of the device.

You may get an instrument handler instance of this class by calling AisDeviceTracker::getInstrumentHandler where you can get the device name either by calling AisDeviceTracker::getConnectedDevices or whenever the signal newDeviceConnected() is emitted.

### 8.18.2 Member Function Documentation

## 8.18.2.1 activeACDataReady

a signal that is emitted whenever new AC data for an active experiment are ready.

#### **Parameters**

channel	the channel number from which the AC data arrived.
ACData	the AC data that just arrived.

## 8.18.2.2 activeDCDataReady

a signal that is emitted whenever new DC data for an active experiment are ready.

#### **Parameters**

channel	the channel number from which the DC data arrived.
DCData	the DC data that just arrived.

### 8.18.2.3 deviceDisconnected

```
\verb"void AisInstrumentHandler":: \verb"deviceDisconnected" ( ) [signal]
```

a signal that is emitted if the device associated with this handler has been disconnected.

## 8.18.2.4 eraseRecoverData()

```
AisErrorCode AisInstrumentHandler::eraseRecoverData ( ) const
```

delete the recover data from device.

#### **Returns**

AisErrorCode::Success if request is successfully send for delete the data. If not successful, possible returned errors are:

- AisErrorCode::DeviceNotFound
- AisErrorCode::DeviceCommunicationFailed

### 8.18.2.5 experimentNewElementStarting

a signal that is emitted whenever a new elemental experiment has started.

#### **Parameters**

channel	the channel number on which the experiment was started.
stepInfo	information regarding the current step.

#### See also

AisExperimentNode

# 8.18.2.6 experimentPaused

a signal that is emitted whenever an experiment was paused.

# **Parameters**

channel the channel on which the experiment was paused	
--	--

## 8.18.2.7 experimentResumed

a signal that is emitted whenever an experiment was resumed.

#### **Parameters**

channel	the channel on which the experiment was resumed.
---------	--

## 8.18.2.8 experimentStopped

a signal that is emitted whenever an experiment was stopped manually or has completed.

#### **Parameters**

ch	annel	the channel on which the experiment has stopped.
----	-------	--

# 8.18.2.9 getExperimentUTCStartTime()

```
double AisInstrumentHandler::getExperimentUTCStartTime ( uint8\_t \ channel \ ) \ const
```

get UTC time for the start of the experiment in seconds.

This will give the time in seconds between the origin of UTC time and the start of the experiment aka Unix Epoch.

#### **Parameters**

channel	the channel for which to get the start time of the experiment.
---------	--

### Returns

the Unix Epoch up to the start of the experiment in seconds.

## 8.18.2.10 getFreeChannels()

```
{\tt std::vector< uint8\_t > AisInstrumentHandler::getFreeChannels ( ) const} \\ {\tt get a list of the currently free channels}. \\
```

#### Returns

a list of the currently free channels. If all channels are busy, an empty list is returned.

# 8.18.2.11 getLinkedChannels()

get a list of channels linked to the given channel.

#### **Parameters**

a valid channel number to find w	hich other channels are linked to it.
----------------------------------	---------------------------------------

#### Returns

a list of channels linked to the channel parameter.

## 8.18.2.12 getManualModeCurrentRangeList()

get a list of the applicable current ranges to the given channel specific to your device.

The list is indexed, with each index containing a range with minimum and maximum current for the range. You can pass the index of the desired current range to setManualModeConstantVoltage.

## **Parameters**

channel	a valid channel number for which to check the current range.

#### Returns

a list of the of the applicable current ranges to the given channel specific to your device.

## 8.18.2.13 getNumberOfChannels()

```
int AisInstrumentHandler::getNumberOfChannels ( ) const
```

get the number of all the channels on this device.

#### Returns

the number of channels on the connected device. If no device found, -1 will be returned.

# 8.18.2.14 groundFloatStateChanged

a signal that is emitted when the floating ground connection state has changed.

#### **Parameters**

#### 8.18.2.15 idleDCDataReady

a signal that is emitted whenever new DC data are ready when the device is in an idle state.

A manual experiment displays real time values. These values are displayed even if the channel does not have an experiment running on it.

# **Parameters**

channel	the channel number from which the DC data arrived.
DCData	the DC data that just arrived.

## 8.18.2.16 isChannelBusy()

tells whether the given channel is busy or not.

# **Parameters**

channel	the channel number to check if it is busy or not.

#### Returns

true only if given a valid channel number that has either a running or a paused experiment.

# 8.18.2.17 isChannelPaused()

tells whether the given channel has a paused experiment or not.

#### **Parameters**

channel	the channel number to check if it has a paused experiment.
---------	--

#### Returns

true only if given a valid channel number that has an experiment that has been paused.

# 8.18.2.18 pauseExperiment()

pause a running experiment on the channel.

#### **Parameters**

	channel	the channel number to pause the experiment on.
--	---------	--

#### Returns

true if an experiment was successfully paused on the channel and false otherwise. If not successful, possible returned errors are:

- · AisErrorCode::FailedToPauseExperiment
- AisErrorCode::DeviceNotFound
- AisErrorCode::InvalidChannel
- AisErrorCode::ChannelNotBusy

This will return AisErrorCode::Success only if there is currently a running experiment on a valid channel on a connected device.

# 8.18.2.19 recoverDataErased

```
void AisInstrumentHandler::recoverDataErased ( bool\ successful\ )\ [signal]
```

a signal that is emitted whenever data erase process is completed.

#### **Parameters**

successful	is true on erased correctly, and false on data is not erased.
------------	---

## 8.18.2.20 recoveryACDataReady

a signal that is emitted whenever new AC recovery data are ready.

#### **Parameters**

channel	the channel number from which the AC data are recovered from.
ACData	the AC data that just arrived.

# 8.18.2.21 recoveryDCDataReady

a signal that is emitted whenever new DC recovery data are ready.

#### **Parameters**

channel	the channel number from which the DC data are recovered from.
DCData	the DC data that just arrived.

## 8.18.2.22 resumeExperiment()

resume a paused experiment on the channel.

#### **Parameters**

channel	the channel number to resume the experiment on.
---------	---

#### Returns

AisErrorCode::Success if an experiment was successfully resumed on the channel. If not successful, possible returned errors are:

- AisErrorCode::FailedToResumeExperiment
- AisErrorCode::DeviceNotFound
- AisErrorCode::InvalidChannel
- AisErrorCode::ChannelNotBusy

This will return AisErrorCode::Success only if there is currently a paused experiment on a valid channel on a connected device.

# 8.18.2.23 setCompRange()

set a compensation range with stability factor and bandwidth index.

#### **Parameters**

channel	the channel for which to set the compensation range.
compRange	an object of type compRange that is initialized with a stability factor (0-10) and a bandwidth index (0-10).

#### Returns

AisErrorCode::Success if setting the IR compensation was successful. If not successful, possible returned errors are:

- AisErrorCode::DeviceNotFound
- AisErrorCode::InvalidChannel
- AisErrorCode::InvalidParameters

## See also

AisCompRange

# 8.18.2.24 setIRComp()

set IR compensation.

#### **Parameters**

channel	the channel for which to set the IR compensation.
uncompensatedResistance	the value of the uncompensated resistance in Ohms.
compensationLevel	the compensation percentage (0%-100%). This is unit-less.

#### Returns

AisErrorCode::Success if setting the IR compensation was successful. If not successful, possible returned errors are:

· AisErrorCode::DeviceNotFound

• AisErrorCode::InvalidChannel

AisErrorCode::InvalidParameters

## 8.18.2.25 setLinkedChannels()

connect several channels together.

You may connect a list of channels so you can get a higher combined output current of all channels. Note that this is only applicable to the cycler model.

## **Parameters**

nnels to be linked.	channels a list
---------------------	-----------------

#### Returns

the master channel out of the given list of channels. The master channel is your interface to upload an experiment to and then control it.

# Note

this functionality is only applicable to the cycler model.

# 8.18.2.26 setManualModeConstantCurrent()

set constant current for the manual experiment.

#### **Parameters**

channel	a valid channel number to set a constant voltage for.
value	the value to set the constant current in Amps.

#### Returns

AisErrorCode::Success if setting the constant current was successful. If not successful, possible returned errors are:

- · AisErrorCode::ManualExperimentNotRunning
- · AisErrorCode::DeviceNotFound
- AisErrorCode::InvalidChannel
- AisErrorCode::DeviceCommunicationFailed

## 8.18.2.27 setManualModeConstantVoltage() [1/2]

set constant voltage for the manual experiment.

#### **Parameters**

channel	a valid channel number to set a constant voltage for.
value	the value to set the constant voltage in volts.

### Returns

AisErrorCode::Success if setting the constant voltage was successful. If not successful, possible returned errors are:

- $\bullet \ Ais Error Code :: Failed To Set Manual Mode Constant Voltage$
- · AisErrorCode::ManualExperimentNotRunning
- AisErrorCode::DeviceNotFound
- AisErrorCode::InvalidChannel

# 8.18.2.28 setManualModeConstantVoltage() [2/2]

set constant voltage for the manual experiment and also set a manual current range.

#### **Parameters**

channel	a valid channel number to set a constant voltage for.
value	the value to set the constant voltage in volts.
currentRangeIndex	the index of the desired current range.

#### Returns

AisErrorCode::Success if setting the constant voltage was successful. You can get a list of the available ranges for your model by calling getManualModeCurrentRangeList. If not successful, possible returned errors are:

- AisErrorCode::FailedToSetManualModeConstantVoltage
- AisErrorCode::FailedToSetManualModeCurrentRange
- · AisErrorCode::ManualExperimentNotRunning
- · AisErrorCode::DeviceNotFound
- AisErrorCode::InvalidChannel

# 8.18.2.29 setManualModeOCP()

set open-circuit potential mode.

To apply the set potential or current, leave the open circuit potential mode off. This operation is reversed automatically when calling either setManualModeConstantVoltage() or setManualModeConstantCurrent()

#### **Parameters**

channel	a valid channel number to set open circuit mode on.
---------	---

#### Returns

AisErrorCode::Success if turning on the open circuit mode was successful. If not successful, possible returned errors are:

- AisErrorCode::ManualExperimentNotRunning
- AisErrorCode::DeviceNotFound
- AisErrorCode::InvalidChannel
- · AisErrorCode::DeviceCommunicationFailed

# 8.18.2.30 setManualModeSamplingInterval()

set an interval for sampling the data.

#### **Parameters**

channel	the channel to set the sampling interval for.
value	the value for the sampling interval in seconds.

#### Returns

AisErrorCode::Success if the operation was set successfully. If not successful, possible returned errors are:

• AisErrorCode::DeviceNotFound

• AisErrorCode::Unknown

• AisErrorCode::InvalidChannel

# 8.18.2.31 skipExperimentStep()

skip the current experiment step and proceed to the next.

When running an element that has several steps like going from CC to CV, then skipping the step goes to the next step within the element. When having several elements in the custom experiment and the current element has one step or we are at the last step within the element, then skipping the step results in going to the next element. If this is the final step of the final element, the experiment will stop.

# Parameters

channel	a valid channel number with an experiment to skip the step.

# Returns

AisErrorCode::Success the experiment step was successfully skipped If not successful, possible returned errors are:

AisErrorCode::DeviceNotFound

• AisErrorCode::InvalidChannel

• AisErrorCode::ChannelNotBusy

• AisErrorCode::DeviceCommunicationFailed

# 8.18.2.32 startManualExperiment()

start a manual experiment.

With manual experiments, users can turn on any connected channel and toggle between open circuit mode and voltage or current setpoints that can be changed in real-time and run for indefinite periods.

#### **Parameters**

channel	a valid channel number to run the manual experiment on.
---------	---

#### Returns

AisErrorCode::Success if the manual experiment was successfully started. If not successful, possible returned errors are:

- AisErrorCode::FailedManualModeStartExperiment
- AisErrorCode::DeviceNotFound
- AisErrorCode::InvalidChannel
- AisErrorCode::BusyChannel

# 8.18.2.33 startUploadedExperiment()

start the previously uploaded experiment on the specific channel.

#### **Parameters**

channel	the channel number to start the experiment on.
---------	--

#### Returns

AisErrorCode::Success if the experiment was successfully started on the channel. If not successful, possible returned errors are:

- AisErrorCode::DeviceCommunicationFailed
- $\bullet \ \ A is Error Code :: Experiment Not Uploaded$
- AisErrorCode::DeviceNotFound
- AisErrorCode::InvalidChannel
- AisErrorCode::BusyChannel

## See also

```
uploadExperimentToChannel isChannelBusy
```

# 8.18.2.34 stopExperiment()

stop a running or a paused experiment on the channel.

#### **Parameters**

the channel number to stop the ex	experiment on.
-----------------------------------	----------------

#### Returns

AisErrorCode::Success if an experiment was successfully stopped on the channel. If not successful, possible returned errors are:

- · AisErrorCode::FailedToStopExperiment
- · AisErrorCode::DeviceNotFound
- AisErrorCode::InvalidChannel
- · AisErrorCode::ChannelNotBusy

This will only return AisErrorCode::Success if there is currently a running or a paused experiment on a valid channel on a connected device.

## 8.18.2.35 uploadExperimentToChannel() [1/2]

upload an already created custom experiment to a specific channel on the device.

Any running experiment is run on a specific device on a specific channel. This function uploads an experiment to a channel so that you may start, pause, resume and stop the experiment. All of these four control functionalities and others require a channel number to control the experiment. Therefore, if we have several channels, we need to keep track of which experiment is on which channel.

### **Parameters**

channel	the channel number to upload the experiment to.
experiment	the custom experiment to be uploaded to the channel.

#### Returns

AisErrorCode::Success if the experiment was successfully uploaded to the channel. If not successful, possible returned errors are:

- AisErrorCode::FailedToUploadExperiment
- AisErrorCode::ExperimentIsEmpty
- AisErrorCode::DeviceNotFound
- AisErrorCode::InvalidChannel
- AisErrorCode::BusyChannel
- AisErrorCode::InvalidParameters

This returns AisErrorCode::Success only when given a valid channel number that is not busy on a connected device.

#### See also

isChannelBusy

#### 8.18.2.36 uploadExperimentToChannel() [2/2]

upload an already created custom experiment to a specific channel on the device.

Any running experiment is run on a specific device on a specific channel. This function uploads an experiment to a channel so that you may start, pause, resume and stop the experiment. All of these four control functionalities and others require a channel number to control the experiment. Therefore, if we have several channels, we need to keep track of which experiment is on which channel.

#### **Parameters**

channel	the channel number to upload the experiment to.
experiment	the custom experiment to be uploaded to the channel.

#### Returns

AisErrorCode::Success if the experiment was successfully uploaded to the channel. If not successful, possible returned errors are:

- AisErrorCode::FailedToUploadExperiment
- AisErrorCode::ExperimentIsEmpty
- · AisErrorCode::DeviceNotFound
- AisErrorCode::InvalidChannel
- AisErrorCode::BusyChannel
- AisErrorCode::InvalidParameters

This returns AisErrorCode::Success only when given a valid channel number that is not busy on a connected device.

#### See also

isChannelBusy

The documentation for this class was generated from the following file:

· AisInstrumentHandler.h

# 8.19 AisNormalPulseVoltammetryElement Class Reference

This experiment holds the working electrode at a **baseline potential** during the **quiet time**, then applies a train of pulses, which increase in amplitude until the **final potential** is reached.

```
#include <AisNormalPulseVoltammetryElement.h>
```

Inherits AisAbstractElement.

#### **Public Member Functions**

 AisNormalPulseVoltammetryElement (double startVoltage, double endVoltage, double voltageStep, double pulseWidth, double pulsePeriod)

the normal-pulse-voltammetry element constructor

AisNormalPulseVoltammetryElement (const AisNormalPulseVoltammetryElement &)

copy constructor for the AisNormalPulseVoltammetryElement object.

AisNormalPulseVoltammetryElement & operator= (const AisNormalPulseVoltammetryElement &)

overload equal to operator for the AisNormalPulseVoltammetryElement object.

QString getName () const override

get the name of the element.

QStringList getCategory () const override

get a list of applicable categories of the element.

• double getStartVoltage () const

get the value set for the start voltage.

void setStartVoltage (double startVoltage)

set the value for the start voltage.

• bool isStartVoltageVsOCP () const

tells whether the start voltage is set against the open-circuit voltage or the reference terminal.

void setStartVoltageVsOCP (bool startVoltageVsOCP)

set whether to reference the start voltage against the open-circuit voltage or the reference terminal.

• double getEndVoltage () const

get the value set for the ending potential value.

void setEndVoltage (double endVoltage)

set the ending potential value.

• bool isEndVoltageVsOCP () const

tells whether the end voltage is set with respect to the open circuit voltage or the reference terminal.

void setEndVoltageVsOCP (bool endVoltageVsOcp)

set whether to reference the end voltage against the open-circuit voltage or the reference terminal.

• double getVStep () const

get the value set for the voltage step.

void setVStep (double vStep)

set the value for the voltage step.

• double getPulseWidth () const

get the value for the voltage pulse width.

void setPulseWidth (double pulseWidth)

set the value for the voltage pulse width.

double getPulsePeriod () const

get the value set for the pulse period.

void setPulsePeriod (double pulsePeriod)

set the value for the pulse period.

• bool isAutoRange () const

tells whether the current range is set to auto-select or not.

void setAutoRange ()

set to auto-select the current range.

double getApproxMaxCurrent () const

get the value set for the expected maximum current.


void setApproxMaxCurrent (double approxMaxCurrent)

set maximum current expected, for manual current range selection.

## 8.19.1 Detailed Description

This experiment holds the working electrode at a **baseline potential** during the **quiet time**, then applies a train of pulses, which increase in amplitude until the **final potential** is reached.

The **potential step** is the magnitude of this incremental increase. The **pulse width** is the amount of time between the rising and falling edge of a pulse. The **pulse period** is the amount of time between the beginning of one pulse and the beginning of the next.

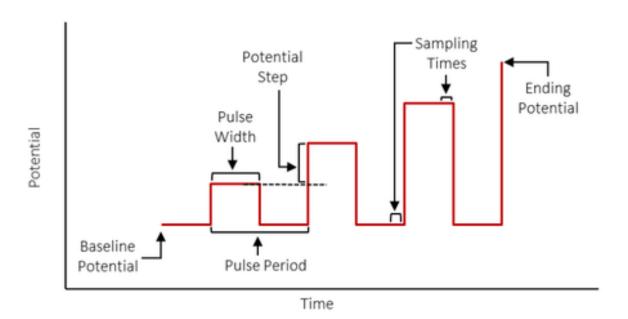

## 8.19.2 Constructor & Destructor Documentation

## 8.19.2.1 AisNormalPulseVoltammetryElement()

the normal-pulse-voltammetry element constructor

## **Parameters**

startVoltage	the value of the starting potential in volts
endVoltage	the value of the ending potential in volts
voltageStep	the value set for the voltage step in volts.
pulseWidth	the value for the pulse width in volts.
pulsePeriod	the value for the pulse period in volts.

Generated by Admiral Instruments LLC

## 8.19.3 Member Function Documentation

## 8.19.3.1 getApproxMaxCurrent()

double AisNormalPulseVoltammetryElement::getApproxMaxCurrent ( ) const

get the value set for the expected maximum current.

#### Returns

the value set for the expected maximum current in Amps.

#### Note

if nothing was manually set, the device will auto-select the current range and the return value will be positive infinity.

## 8.19.3.2 getCategory()

 ${\tt QStringList~AisNormalPulseVoltammetryElement::} {\tt getCategory~(~)~const~[override]}$ 

get a list of applicable categories of the element.

#### Returns

A list of applicable categories: ("Potentiostatic Control", "Basic Voltammetry", "Pulse Voltammetry").

## 8.19.3.3 getEndVoltage()

double AisNormalPulseVoltammetryElement::getEndVoltage ( ) const

get the value set for the ending potential value.

This is the value of the voltage at which the experiment will stop.

#### Returns

the value set for the ending voltage in volts.

## 8.19.3.4 getName()

```
QString AisNormalPulseVoltammetryElement::getName ( ) const [override]
```

get the name of the element.

## Returns

The name of the element: "Normal Pulse Potential Voltammetry".

## 8.19.3.5 getPulsePeriod()

```
double AisNormalPulseVoltammetryElement::getPulsePeriod ( ) const
```

get the value set for the pulse period.

#### Returns

the value set for the pulse period in seconds.

See also

setPulsePeriod

## 8.19.3.6 getPulseWidth()

```
\label{thm:constraint} \mbox{double AisNormalPulseVoltammetryElement::} \mbox{getPulseWidth ( ) const}
```

get the value for the voltage pulse width.

## Returns

the value for the voltage pulse width in seconds.

See also

setPulseWidth

#### 8.19.3.7 getStartVoltage()

 $\label{thm:constraint} \mbox{double AisNormalPulseVoltammetryElement::getStartVoltage ( ) const} \\ \mbox{get the value set for the start voltage.}$ 

#### Returns

the value of the start voltage in volts.

## 8.19.3.8 getVStep()

 $\label{thm:constraint} \mbox{double AisNormalPulseVoltammetryElement::getVStep ( ) const} \\ \mbox{get the value set for the voltage step.}$ 

#### Returns

the value set for the voltage step in volts.

#### See also

setVStep

## 8.19.3.9 isAutoRange()

bool AisNormalPulseVoltammetryElement::isAutoRange ( ) const

tells whether the current range is set to auto-select or not.

#### Returns

true if the current range is set to auto-select and false if a rage has been selected.

#### 8.19.3.10 isEndVoltageVsOCP()

 $\verb|bool AisNormalPulseVoltammetryElement:: is \verb|EndVoltageVsOCP| ( ) const|$ 

tells whether the end voltage is set with respect to the open circuit voltage or the reference terminal.

#### Returns

true if the end voltage is set with respect to the open-circuit voltage and false if set against the reference terminal.

#### Note

if nothing is set, the default is false.

## 8.19.3.11 isStartVoltageVsOCP()

```
bool AisNormalPulseVoltammetryElement::isStartVoltageVsOCP ( ) const
```

tells whether the start voltage is set against the open-circuit voltage or the reference terminal.

#### Returns

true if the start voltage is set against the open-circuit voltage and false if it is set against the reference terminal.

Note

if nothing is set, the default is false.

See also

setStartVoltageVsOCP

## 8.19.3.12 setApproxMaxCurrent()

```
\label{lem:normalPulseVoltammetryElement::setApproxMaxCurrent (} \\ \text{double } approxMaxCurrent \ )
```

set maximum current expected, for manual current range selection.

The is an **optional** parameter. If nothing is set, the device will auto-select the current range.

#### **Parameters**

	approxMaxCurrent	the value for the maximum current expected in Amps.
--	------------------	---

#### 8.19.3.13 setAutoRange()

```
void AisNormalPulseVoltammetryElement::setAutoRange ( )
```

set to auto-select the current range.

This option is set by default. There is no need to call this function to auto-select if the range was not manually set.

## 8.19.3.14 setEndVoltage()

```
\begin{tabular}{ll} \begin{tabular}{ll} void AisNormalPulseVoltammetryElement::setEndVoltage ( \\ \begin{tabular}{ll} double & endVoltage \end{tabular}) \end{tabular}
```

set the ending potential value.

This is the value of the voltage at which the experiment will stop.

#### **Parameters**

## 8.19.3.15 setEndVoltageVsOCP()

```
void AisNormalPulseVoltammetryElement::setEndVoltageVsOCP ( bool\ endVoltageVsOcp\ )
```

set whether to reference the end voltage against the open-circuit voltage or the reference terminal.

The reference terminal is for you to connect to any reference point you like. Connect it to the working electrode to reference ground.

#### **Parameters**

endVoltageVsOcp	true to set the end voltage to be referenced against the open-circuit voltage and false if set	]
	against the reference terminal.	

#### Note

by default, this is set to false.

#### 8.19.3.16 setPulsePeriod()

```
void AisNormalPulseVoltammetryElement::setPulsePeriod ( {\tt double} \ pulsePeriod \ )
```

set the value for the pulse period.

The pulse period is the time spent between the starts of two consecutive pulses.

#### **Parameters**

pulsePeriod the value to set for the pulse period in seconds.

## 8.19.3.17 setPulseWidth()

```
void AisNormalPulseVoltammetryElement::setPulseWidth ( \label{eq:condition} \mbox{double } pulseWidth \ )
```

set the value for the voltage pulse width.

The pulse width is the value in seconds for the time spent at the same voltage set for the pulse height.

#### **Parameters**

th the value to set for the pulse width in seconds.	pulseWidth
---	------------

## 8.19.3.18 setStartVoltage()

```
void AisNormalPulseVoltammetryElement::setStartVoltage ( {\tt double} \  \, startVoltage \ )
```

set the value for the start voltage.

#### **Parameters**

## 8.19.3.19 setStartVoltageVsOCP()

```
\label{thm:cond} \mbox{ void AisNormalPulseVoltammetryElement::setStartVoltageVsOCP (} \\ \mbox{ bool } startVoltageVsOCP \mbox{ )}
```

set whether to reference the start voltage against the open-circuit voltage or the reference terminal.

The reference terminal is for you to connect to any reference point you like. Connect it to the working electrode to reference ground.

## **Parameters**

startVoltageVsOCP	true to if the start voltage is set to reference the open-circuit voltage and false if set
	against the reference terminal.

Note

by default, this is set to false.

## 8.19.3.20 setVStep()

```
void AisNormalPulseVoltammetryElement::setVStep ( \label{eq:double_vStep} \mbox{double } vStep \mbox{ )}
```

set the value for the voltage step.

The voltage step is the voltage difference between the heights of two consecutive pulses.

#### **Parameters**

*vStep* the value for the voltage step in volts.

The documentation for this class was generated from the following file:

AisNormalPulseVoltammetryElement.h

## 8.20 AisOpenCircuitElement Class Reference

This experiment observes the **open circuit potential** of the working electrode for a specific period of time.

```
#include <AisOpenCircuitElement.h>
```

Inherits AisAbstractElement.

## **Public Member Functions**

• AisOpenCircuitElement (double duration, double samplingInterval)

the open-circuit element constructor.

AisOpenCircuitElement (const AisOpenCircuitElement &)

copy constructor for the AisOpenCircuitElement object.

AisOpenCircuitElement & operator= (const AisOpenCircuitElement &)

overload equal to operator for the AisOpenCircuitElement object.

· QString getName () const override

get the name of the element.

· QStringList getCategory () const override

get a list of applicable categories of the element.

• double getSamplingInterval () const

get how frequently we are sampling the data.

void setSamplingInterval (double samplingInterval)

set how frequently we are sampling the data.

• double getMaxDuration () const

get the value set for the duration of the experiment.

void setMaxDuration (double maxDuration)

set the value set for the duration of the experiment.

• double getMaxVoltage () const

get the value set for the maximum voltage. The experiment will end when it reaches this value.

void setMaxVoltage (double maxVoltage)

set a maximum voltage to stop the experiment.

• double getMinVoltage () const

get the value set minimum for the voltage in volts.

void setMinVoltage (double minVoltage)

set a minimum voltage to stop the experiment.

• double getMindVdt () const

get the value set for the minimum voltage rate of change with respect to time (minimum dV/dt).

void setMindVdt (double mindVdt)

set the minimum value for the voltage rate of change with respect to time (minimum dV/dt).

• bool isAutoVoltageRange () const

tells whether the voltage range is set to auto-select or not.

• void setAutoVoltageRange ()

set to auto-select the voltage range.

• double getApproxMaxVoltage () const


get the value set for the expected maximum voltage.

void setApproxMaxVoltage (double approxMaxVoltage)

set maximum voltage expected, for manual voltage range selection.

## 8.20.1 Detailed Description

This experiment observes the open circuit potential of the working electrode for a specific period of time.

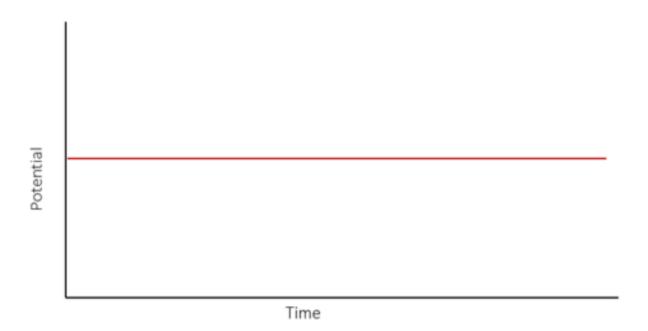

## 8.20.2 Constructor & Destructor Documentation

## 8.20.2.1 AisOpenCircuitElement()

the open-circuit element constructor.

#### **Parameters**

duration	the maximum duration for the experiment in seconds.
samplingInterval	the data sampling interval value in seconds.

## 8.20.3 Member Function Documentation

#### 8.20.3.1 getApproxMaxVoltage()

 $\label{thm:const} \mbox{double AisOpenCircuitElement::getApproxMaxVoltage ( ) const} \\ \mbox{get the value set for the expected maximum voltage.}$ 

#### Returns

the value set for the expected maximum Voltage in volt.

#### Note

if nothing was manually set, the device will auto-select the voltage range and the return value will be positive infinity.

## 8.20.3.2 getCategory()

QStringList AisOpenCircuitElement::getCategory ( ) const [override] get a list of applicable categories of the element.

## Returns

A list of applicable categories: ("Basic Experiments").

## 8.20.3.3 getMaxDuration()

 $\label{thm:double_AisOpenCircuitElement::getMaxDuration () const} \\$  get the value set for the duration of the experiment.

#### Returns

the value set for the duration of the experiment in seconds.

## 8.20.3.4 getMaxVoltage()

```
double AisOpenCircuitElement::getMaxVoltage ( ) const
```

get the value set for the maximum voltage. The experiment will end when it reaches this value.

#### Returns

the value set for the maximum voltage.

#### Note

this is an optional parameter. If no value has been set, the default value is positive infinity.

## 8.20.3.5 getMindVdt()

```
double AisOpenCircuitElement::getMindVdt ( ) const
```

get the value set for the minimum voltage rate of change with respect to time (minimum dV/dt).

#### Returns

the value set for the minimum voltage rate of change with respect to time (minimum dV/dt).

#### Note

this is an optional parameter. If no value has been set, the default value is zero

## 8.20.3.6 getMinVoltage()

```
double AisOpenCircuitElement::getMinVoltage ( ) const
```

get the value set minimum for the voltage in volts.

## Returns

the value set for the minimum voltage in volts.

#### Note

this is an optional parameter. If no value has been set, the default value is negative infinity.

## 8.20.3.7 getName()

```
QString AisOpenCircuitElement::getName ( ) const [override]
```

get the name of the element.

#### Returns

The name of the element: "Open Circuit Potential".

## 8.20.3.8 getSamplingInterval()

```
double AisOpenCircuitElement::getSamplingInterval ( ) const
```

get how frequently we are sampling the data.

#### Returns

the data sampling interval value in seconds.

## 8.20.3.9 isAutoVoltageRange()

```
bool AisOpenCircuitElement::isAutoVoltageRange ( ) const
```

tells whether the voltage range is set to auto-select or not.

#### Returns

true if the voltage range is set to auto-select and false if a range has been selected.

## 8.20.3.10 setApproxMaxVoltage()

set maximum voltage expected, for manual voltage range selection.

The is an **optional** parameter. If nothing is set, the device will auto-select the voltage range.

## Parameters

approxMaxVoltage	the value for the maximum current expected in V.

#### 8.20.3.11 setAutoVoltageRange()

```
void AisOpenCircuitElement::setAutoVoltageRange ( )
```

set to auto-select the voltage range.

This option is set by default. There is no need to call this function to auto-select if the range was not manually set.

## 8.20.3.12 setMaxDuration()

set the value set for the duration of the experiment.

#### **Parameters**

maxDuration	the value to set for the duration of the experiment in seconds.
-------------	---

#### 8.20.3.13 setMaxVoltage()

set a maximum voltage to stop the experiment.

The is an **optional** condition. If nothing is set, then the experiment will not stop based on an upper-limit voltage value. If a maximum voltage is set, the experiment will continue to run as long as the measured voltage is below that value.

#### **Parameters**

	maxVoltage	the maximum voltage value in volts at which the experiment will stop.
--	------------	---

## 8.20.3.14 setMindVdt()

set the minimum value for the voltage rate of change with respect to time (minimum dV/dt).

The is an **optional** condition. If nothing is set, then the experiment will not stop based on an lower-limit rate of change value. If a minimum value is set, the experiment will continue to run as long as the rage of change is above that value.

#### **Parameters**

mindVdt the minimum value for the voltage rate of change with respect to time (minimum dV/dt).

## 8.20.3.15 setMinVoltage()

set a minimum voltage to stop the experiment.

The is an **optional** condition. If nothing is set, then the experiment will not stop based on an lower-limit voltage value. If a maximum voltage is set, the experiment will continue to run as long as the measured voltage is above that value.

#### **Parameters**

## 8.20.3.16 setSamplingInterval()

set how frequently we are sampling the data.

## **Parameters**

1' 1 - 1 - 1	Alexandra and a second floor floor and a second a second and a second
sampiingintervai	the data sampling interval value in seconds.
oampiniginioi rai	tire data camping interval raids in eccentaer

The documentation for this class was generated from the following file:

· AisOpenCircuitElement.h

# 8.21 AisSquareWaveVoltammetryElement Class Reference

This experiment holds the working electrode at the **starting potential** during the **quiet time**. Then it applies a train of square pulses superimposed on a staircase waveform with a uniform **potential step** magnitude.

```
#include <AisSquareWaveVoltammetryElement.h>
```

Inherits AisAbstractElement.

#### **Public Member Functions**

 AisSquareWaveVoltammetryElement (double startVoltage, double endVoltage, double voltageStep, double pulseAmp, double pulseFrequency)

the square wave element constructor

AisSquareWaveVoltammetryElement (const AisSquareWaveVoltammetryElement &)

copy constructor for the AisSquareWaveVoltammetryElement object.

AisSquareWaveVoltammetryElement & operator= (const AisSquareWaveVoltammetryElement &)

overload equal to operator for the AisSquareWaveVoltammetryElement object.

QString getName () const override

get the name of the element.

QStringList getCategory () const override

get a list of applicable categories of the element.

• double getStartVoltage () const

get the value set for the start voltage.

void setStartVoltage (double startVoltage)

set the value for the start voltage.

bool isStartVoltageVsOCP () const

tells whether the start voltage is set against the open-circuit voltage or the reference terminal.

void setStartVoltageVsOCP (bool startVoltageVsOcp)

set whether to reference the start voltage against the open-circuit voltage or the reference terminal.

• double getEndVoltage () const

get the value set for the ending potential value.

void setEndVoltage (double endVoltage)

set the ending potential value.

• bool isEndVoltageVsOCP () const

tells whether the end voltage is set with respect to the open circuit voltage or the reference terminal.

void setEndVoltageVsOCP (bool endVoltageVsOcp)

set whether to reference the end voltage against the open-circuit voltage or the reference terminal.

• double getVStep () const

get the value set for the voltage step.

void setVStep (double vStep)

set the value for the voltage step.

• double getPulseAmp () const

get the value set for the pulse amplitude.

void setPulseAmp (double pulseAmp)

set the value for the pulse amplitude.

double getPulseFreq () const

get the value set for the pulse frequency.

void setPulseFreq (double pulseFreq)

set the value for the pulse frequency.

bool isAutoRange () const

tells whether the current range is set to auto-select or not.

• void setAutoRange ()

set to auto-select the current range.

double getApproxMaxCurrent () const

get the value set for the expected maximum current.


void setApproxMaxCurrent (double approxMaxCurrent)

set maximum current expected, for manual current range selection.

## 8.21.1 Detailed Description

This experiment holds the working electrode at the **starting potential** during the **quiet time**. Then it applies a train of square pulses superimposed on a staircase waveform with a uniform **potential step** magnitude.

The potential continues to step until the **final potential** is reached. Each square pulse consists of a forward pulse and a reverse pulse of equal in **amplitude** but opposite in direction. **Frequency** is the inverse of the total duration of a square pulse. Current responses are sampled at two points, one at the end of the forward pulse (if) and another at the end of the reverse pulse (ir). The difference in current sampled at these two points is plotted against the potential of the corresponding staircase tread.

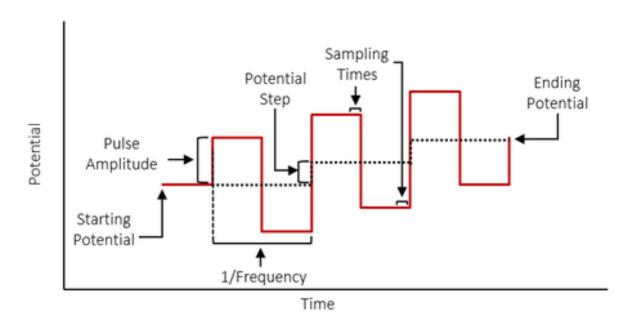

#### 8.21.2 Constructor & Destructor Documentation

#### 8.21.2.1 AisSquareWaveVoltammetryElement()

the square wave element constructor

#### **Parameters**

startVoltage	the value of the starting potential in volts
endVoltage	the value of the ending potential in volts
voltageStep	the value set for the voltage step in volts.
pulseAmp	the value for the pulse amplitude in volts.
pulseFrequency	the value for the pulse frequency in Hz.

## 8.21.3 Member Function Documentation

## 8.21.3.1 getApproxMaxCurrent()

double AisSquareWaveVoltammetryElement::getApproxMaxCurrent ( ) const

get the value set for the expected maximum current.

#### Returns

the value set for the expected maximum current in Amps.

## Note

if nothing was manually set, the device will auto-select the current range and the return value will be positive infinity.

## 8.21.3.2 getCategory()

QStringList AisSquareWaveVoltammetryElement::getCategory ( ) const [override]

get a list of applicable categories of the element.

## Returns

A list of applicable categories: ("Potentiostatic Control", "Pulse Voltammetry").

#### 8.21.3.3 getEndVoltage()

 $\label{thm:constraint} \mbox{double AisSquareWaveVoltammetryElement::} \mbox{getEndVoltage () const}$ 

get the value set for the ending potential value.

This is the value of the voltage at which the experiment will stop.

#### Returns

the value set for the ending voltage in volts.

## 8.21.3.4 getName()

QString AisSquareWaveVoltammetryElement::getName ( ) const [override] get the name of the element.

#### Returns

The name of the element: "Square Wave Potential Voltammetry".

## 8.21.3.5 getPulseAmp()

 $\label{thm:const} \mbox{double AisSquareWaveVoltammetryElement::getPulseAmp ( ) const} \\ \mbox{get the value set for the pulse amplitude.} \\$ 

## Returns

the value set for the pulse amplitude in volts.

#### See also

setPulseAmp

## 8.21.3.6 getPulseFreq()

 $\label{thm:const} \mbox{double AisSquareWaveVoltammetryElement::getPulseFreq ( ) const} \\ \mbox{get the value set for the pulse frequency.} \\$ 

#### Returns

the value set for the frequency in Hz.

#### 8.21.3.7 getStartVoltage()

```
\label{thm:constraint} \mbox{double AisSquareWaveVoltammetryElement::getStartVoltage ( ) const} \\ \mbox{get the value set for the start voltage}.
```

#### Returns

the value of the start voltage in volts.

## 8.21.3.8 getVStep()

```
\label{thm:const} \mbox{double AisSquareWaveVoltammetryElement::getVStep ( ) const} \\ \mbox{get the value set for the voltage step.} \\
```

#### Returns

the value set for the voltage step in volts.

#### See also

setVStep

## 8.21.3.9 isAutoRange()

```
bool AisSquareWaveVoltammetryElement::isAutoRange ( ) const
```

tells whether the current range is set to auto-select or not.

#### Returns

true if the current range is set to auto-select and false if a rage has been selected.

#### 8.21.3.10 isEndVoltageVsOCP()

```
bool AisSquareWaveVoltammetryElement::isEndVoltageVsOCP ( ) const
```

tells whether the end voltage is set with respect to the open circuit voltage or the reference terminal.

#### Returns

true if the end voltage is set with respect to the open-circuit voltage and false if set against the reference terminal.

#### Note

if nothing is set, the default is false.

## 8.21.3.11 isStartVoltageVsOCP()

```
bool AisSquareWaveVoltammetryElement::isStartVoltageVsOCP ( ) const
```

tells whether the start voltage is set against the open-circuit voltage or the reference terminal.

#### Returns

true if the start voltage is set against the open-circuit voltage and false if it is set against the reference terminal.

Note

if nothing is set, the default is false.

See also

setStartVoltageVsOCP

## 8.21.3.12 setApproxMaxCurrent()

```
\label{lem:condition} \mbox{void AisSquareWaveVoltammetryElement::setApproxMaxCurrent (} \\ \mbox{double } \mbox{approxMaxCurrent} \mbox{)}
```

set maximum current expected, for manual current range selection.

The is an **optional** parameter. If nothing is set, the device will auto-select the current range.

#### **Parameters**

approxMaxCurrent the value for the maximum current expected in Amps.

#### 8.21.3.13 setAutoRange()

```
void AisSquareWaveVoltammetryElement::setAutoRange ( )
```

set to auto-select the current range.

This option is set by default. There is no need to call this function to auto-select if the range was not manually set.

## 8.21.3.14 setEndVoltage()

```
void AisSquareWaveVoltammetryElement::setEndVoltage ( {\tt double} \ endVoltage \ )
```

set the ending potential value.

This is the value of the voltage at which the experiment will stop.

#### **Parameters**

endVoltage	the value to set for the ending potential in volts.
------------	---

## 8.21.3.15 setEndVoltageVsOCP()

```
void AisSquareWaveVoltammetryElement::setEndVoltageVsOCP ( bool\ endVoltageVsOcp\ )
```

set whether to reference the end voltage against the open-circuit voltage or the reference terminal.

The reference terminal is for you to connect to any reference point you like. Connect it to the working electrode to reference ground.

#### **Parameters**

endVoltageVsOcp	true to set the end voltage to be referenced against the open-circuit voltage and false if set	1
	against the reference terminal.	

#### Note

by default, this is set to false.

## 8.21.3.16 setPulseAmp()

```
void AisSquareWaveVoltammetryElement::setPulseAmp ( \mbox{double } pulseAmp \mbox{ )} \label{eq:pulseAmp}
```

set the value for the pulse amplitude.

The voltage pulse goes up in hight by the given amplitude in addition to the starting potential (of the previous pulse). It then goes back down twice the amplitude to end up one amplitude below the starting potential (of the previous pulse).

#### **Parameters**

## 8.21.3.17 setPulseFreq()

```
void AisSquareWaveVoltammetryElement::setPulseFreq ( \mbox{double } pulseFreq \ )
```

153 set the value for the pulse frequency.

#### **Parameters**

pulseFrea	the value to set for the pulse frequency in Hz.
1	,

## 8.21.3.18 setStartVoltage()

```
void AisSquareWaveVoltammetryElement::setStartVoltage ( \label{eq:condition} \mbox{double } startVoltage \mbox{ )}
```

set the value for the start voltage.

#### **Parameters**

startVoltage	the value of the start voltage in volts
--------------	---

## 8.21.3.19 setStartVoltageVsOCP()

```
\label{thm:cond} \mbox{void AisSquareWaveVoltammetryElement::setStartVoltageVsOCP (} \\ \mbox{bool } startVoltageVsOcp \mbox{)}
```

set whether to reference the start voltage against the open-circuit voltage or the reference terminal.

The reference terminal is for you to connect to any reference point you like. Connect it to the working electrode to reference ground.

## **Parameters**

startVoltageVsOcp	true to if the start voltage is set to reference the open-circuit voltage and false if set
	against the reference terminal.

#### Note

by default, this is set to false.

## 8.21.3.20 setVStep()

```
void AisSquareWaveVoltammetryElement::setVStep ( \label{eq:condition} \mbox{double } vStep \mbox{ )}
```

set the value for the voltage step.

The voltage step is added to the value of the starting potential of the previous pulse to start the new pulse.

## **Parameters**

vStep	the value for the voltage step in volts.
-	, and remain the area go one part to the

The documentation for this class was generated from the following file:

• AisSquareWaveVoltammetryElement.h

# **Chapter 9**

# **File Documentation**

# 9.1 AisCompRange.h

```
1 #ifndef SQUIDSTATLIBRARY_AISCOMPRANGE_H
2 #define SQUIDSTATLIBRARY_AISCOMPRANGE_H
4 #include "AisSquidstatGlobal.h"
5 #include <QString>
6 #include <memory>
8 class AisCompRangePrivate;
15 class SQUIDSTATLIBRARY_EXPORT AisCompRange final {
16 public:
       explicit AisCompRange(const QString& compRangeName, uint8_t bandwidthIndex, uint8_t stabilityFactor);
30
       AisCompRange(const AisCompRange&);
31
32
38
       uint8_t getBandwidthIndex() const;
39
       void setBandwidthIndex(uint8_t index);
48
53
       uint8_t getStabilityFactor() const;
54
       void setStabilityFactor(uint8_t factor);
62
63
       void setCompRangeName(const QString& compRangeName);
74
       const QString& getCompRangeName() const;
7.5
76 private:
       std::shared_ptr<AisCompRangePrivate> m_data;
78 };
80 #endif
```

# 9.2 AisDataPoints.h

```
1 #ifndef SQUIDSTATLIBRARY_AISDATAPOINTS_H
2 #define SQUIDSTATLIBRARY_AISDATAPOINTS_H
7 struct AisDCData {
12
      double timestamp;
      double workingElectrodeVoltage;
17
18
      double counterElectrodeVoltage;
22
      double current;
28
32
       double temperature;
33 };
34
38 struct AisACData {
```

158 File Documentation

```
43
       double timestamp;
44
48
       double frequency;
49
5.3
       double absoluteImpedance;
54
58
       double realImpedance;
59
63
       double imagImpedance;
64
68
       double phaseAngle;
69
73
       double totalHarmonicDistortion;
74
81
       double numberOfCycles;
82
       double workingElectrodeDCVoltage;
86
87
91
       double DCCurrent;
96
       double currentAmplitude;
97
101
        double voltageAmplitude;
102 };
103
107 struct AisExperimentNode {
108
112
        QString stepName;
113
117
        int stepNumber;
118
122
        int substepNumber;
123 };
124
125 #endif //SQUIDSTATLIBRARY_AISDATAPOINTS_H
```

## 9.3 AisDeviceTracker.h

```
1 #ifndef SQUIDSTATLIBRARY_AISDEVICETRACKER_H
2 #define SQUIDSTATLIBRARY_AISDEVICETRACKER_H
4 #include "AisErrorCode.h"
5 #include "AisSquidstatGlobal.h"
6 #include <QObject>
7 #include <memory>
10
11 class AisDeviceTrackerPrivate;
12 class AisInstrumentHandler:
13
18 class SQUIDSTATLIBRARY_EXPORT AisDeviceTracker final : public QObject
19 {
2.0
       Q_OBJECT
21 public:
       ~AisDeviceTracker() override:
22
23
       static AisDeviceTracker *Instance();
24
37
       AisErrorCode connectToDeviceOnComPort(const QString &comPort);
38
50
       const AisInstrumentHandler &getInstrumentHandler(const QString &deviceName) const;
51
       const std::list<QString> getConnectedDevices() const;
56
       int connectAllPluggedInDevices();
80
       AisErrorCode updateFirmwareOnComPort(QString comport) const;
81
       int updateFirmwareOnAllAvailableDevices();
93
94
95 signals:
101
        void newDeviceConnected(const QString &deviceName);
102
107
        void deviceDisconnected(const QString &deviceName);
108
109
        void firmwareUpdateNotification(const QString& message);
110
111 private:
112
        AisDeviceTracker();
        AisDeviceTracker(const AisDeviceTracker &);
113
114
        void operator=(const AisDeviceTracker &);
115
116
        std::unique_ptr<AisDeviceTrackerPrivate> m_data;
```

9.4 AisErrorCode.h

```
117
118
119 };
120
121 #endif
```

## 9.4 AisErrorCode.h

```
2 #ifndef AIS_ERROR_CODE_H
3 #define AIS_ERROR_CODE_H
5 #include "AisSquidstatGlobal.h"
6 #include <qstring.h>
15 class SQUIDSTATLIBRARY_EXPORT AisErrorCode {
17 public:
       enum ErrorCode : uint8_t {
18
           Unknown = 255,
Success = 0,
19
            ConnectionFailed = 1,
22
           FirmwareNotSupported = 2,
            FirmwareFileNotFound = 3,
23
2.4
           FirmwareUptodate = 4,
25
            InvalidChannel = 10,
            BusyChannel = 11,
28
            DeviceNotFound = 13,
            ManualExperimentNotRunning = 51,
30
31
            ExperimentNotUploaded = 52,
32
            ExperimentIsEmptv = 53.
            InvalidParameters = 54,
33
34
            ChannelNotBusy = 55,
36
            DeviceCommunicationFailed = 100,
38
            FailedToSetManualModeCurrentRange = 101,
            FailedToSetManualModeConstantVoltage = 102,
39
40
            FailedToPauseExperiment = 103,
            FailedToResumeExperiment = 104,
41
42
            FailedToStopExperiment = 105,
            FailedToUploadExperiment = 106,
ExperimentAlreadyPaused = 107,
43
44
45
            ExperimentAlreadyRun = 108,
46
       AisErrorCode();
49
       AisErrorCode (ErrorCode error);
       AisErrorCode (ErrorCode error, QString message);
50
51
56
       OString message() const;
62
       int value() const;
64
       operator ErrorCode() const;
6.5
66 private:
       ErrorCode code;
67
68
       QString errorMessage;
69 };
71 #endif // ! AIS_ERROR_CODE_H
```

# 9.5 AisExperiment.h

```
1 #ifndef SQUIDSTATLIBRARY_AISCUSTOMEXPERIMENTRUNNER_H
2 #define SQUIDSTATLIBRARY_AISCUSTOMEXPERIMENTRUNNER_H
3
4 #include "AisSquidstatGlobal.h"
5 #include "experiments/builder_elements/AisAbstractElement.h"
6 #include <QString>
7
8 class CustomExperimentRunner;
9 class AisExperimentPrivate;
10
19 class SQUIDSTATLIBRARY_EXPORT AisExperiment final {
20 public:
24 explicit AisExperiment();
25
30 explicit AisExperiment (const AisExperiment& exp);
```

160 File Documentation

```
31
36
       void operator=(const AisExperiment& exp);
37
38
       ~AisExperiment();
39
45
       OString getExperimentName() const:
46
52
       QString getDescription() const;
53
59
       QStringList getCategory() const;
60
       void setExperimentName(QString name);
65
66
       void setDescription(QString description);
71
72
81
       bool appendElement(AisAbstractElement& element, uint repeat = 1);
82
89
       bool appendSubExperiment(const AisExperiment& subExp, uint repeat = 1);
90
91 private:
       friend class AisInstrumentHandler;
92
93
       std::shared_ptr<AisExperimentPrivate> m_data;
94 };
9.5
96 #endif //SQUIDSTATLIBRARY_AISCUSTOMEXPERIMENTRUNNER_H
```

## 9.6 AisInstrumentHandler.h

```
1 #ifndef SQUIDSTATLIBRARY_AISINSTRUMENTHANDLER_H
2 #define SQUIDSTATLIBRARY_AISINSTRUMENTHANDLER_H
4 #include <ctime>
6 #include <QObject>
8 #include "AisCompRange.h"
9 #include "AisDataPoints.h"
10 #include "AisErrorCode.h"
11 #include "AisSquidstatGlobal.h"
13 class AisInstrumentHandlerPrivate;
14 class AisExperiment;
15
24 class SOUIDSTATLIBRARY EXPORT AisInstrumentHandler final : public OObject {
25
       Q_OBJECT
       AisInstrumentHandlerPrivate* m_data;
27 public:
29
       explicit AisInstrumentHandler(AisInstrumentHandlerPrivate* privateData);
31
       ~AisInstrumentHandler();
32
55
       AisErrorCode uploadExperimentToChannel(uint8_t channel, std::shared_ptr<AisExperiment> experiment)
      const;
56
79
       AisErrorCode uploadExperimentToChannel(uint8_t channel, const AisExperiment& experiment) const;
80
       AisErrorCode startUploadedExperiment (uint8_t channel) const;
94
95
112
        AisErrorCode skipExperimentStep(uint8_t channel) const;
113
126
        AisErrorCode pauseExperiment(uint8_t channel) const;
127
140
        AisErrorCode resumeExperiment (uint8_t channel) const;
141
154
        AisErrorCode stopExperiment(uint8_t channel) const;
155
163
        double getExperimentUTCStartTime(uint8_t channel) const;
164
177
        AisErrorCode setIRComp(uint8_t channel, double uncompensatedResistance, double compensationLevel)
      const:
178
190
        AisErrorCode setCompRange(uint8_t channel, const AisCompRange& compRange) const;
191
202
        int8_t setLinkedChannels(std::vector<uint8_t> channels) const;
203
209
        std::vector<uint8_t> getLinkedChannels(uint8_t channel) const;
210
216
        bool isChannelBusy(uint8_t channel) const;
217
223
        bool isChannelPaused(uint8_t channel) const;
224
229
        std::vector<uint8_t> getFreeChannels() const;
230
235
        int getNumberOfChannels() const;
```

```
236
244
        AisErrorCode eraseRecoverData() const;
245
259
        AisErrorCode startManualExperiment(uint8_t channel) const;
2.60
271
        AisErrorCode setManualModeSamplingInterval(uint8 t channel, double value) const;
272
287
        AisErrorCode setManualModeOCP (uint8_t channel) const;
288
300
        AisErrorCode setManualModeConstantVoltage(uint8_t channel, double value) const;
301
316
        AisErrorCode setManualModeConstantVoltage(uint8_t channel, double value, int currentRangeIndex)
317
330
        AisErrorCode setManualModeConstantCurrent(uint8_t channel, double value) const;
331
340
        std::vector<std::pair<double, double» getManualModeCurrentRangeList(uint8_t channel) const;
341
342 signals:
343
348
        void deviceDisconnected();
349
354
        void groundFloatStateChanged(bool grounded);
355
362
        void experimentNewElementStarting(uint8_t channel, const AisExperimentNode& stepInfo);
363
369
        void activeDCDataReady(uint8_t channel, const AisDCData& DCData);
370
378
        void idleDCDataReady(uint8_t channel, const AisDCData& DCData);
379
385
        void recoveryDCDataReady(uint8_t channel, const AisDCData& DCData);
386
392
        void activeACDataReady(uint8_t channel, const AisACData& ACData);
393
399
        void recoveryACDataReady(uint8_t channel, const AisACData& ACData);
400
405
        void experimentStopped(uint8_t channel);
406
411
        void experimentPaused(uint8_t channel);
412
417
        void experimentResumed(uint8_t channel);
418
        void recoverDataErased(bool successful);
423
424
425 private slots:
426
        void onActiveExperimentNodeBeginning(uint8_t channel, const AisExperimentNode&);
427
        void onRecoveryExperimentNodeBeginning(uint8_t channel, const AisExperimentNode&);
428
        void onDeviceDisconnected();
429
430 private:
431
        void connectWithOperatorSignals();
432 };
434 #endif //SQUIDSTATLIBRARY_AISINSTRUMENTHANDLER_H
```

# 9.7 AisSquidstatGlobal.h

```
1 #pragma once
2
3 #include <QtGlobal>
4
5
6 #ifndef BUILD_STATIC
7 #if defined(SQUIDSTATLIBRARY_LIB)
8 #define SQUIDSTATLIBRARY_EXPORT Q_DECL_EXPORT
9 #else
10 #define SQUIDSTATLIBRARY_EXPORT Q_DECL_IMPORT
11 #endif
12 #else
13 #define SQUIDSTATLIBRARY_EXPORT
14 #endif
```

## 9.8 AisAbstractElement.h

```
1 #ifndef SQUIDSTATLIBRARY_AISABSTRACTELEMENT_H
2 #define SQUIDSTATLIBRARY_AISABSTRACTELEMENT_H
3
4 #include "AisSquidstatGlobal.h"
5 #include <QString>
```

162 File Documentation

```
6 #include <memory>
8 class AbstractBuilderElement;
15 class SQUIDSTATLIBRARY EXPORT AisAbstractElement {
16 public:
       virtual ~AisAbstractElement();
18
24
       virtual QString getName() const = 0;
2.5
31
      virtual QStringList getCategory() const = 0;
32
33 protected:
35
      std::shared_ptr<AbstractBuilderElement> m_data;
37
       friend class AisExperiment;
38 };
39
40 #endif //SQUIDSTATLIBRARY AISABSTRACTELEMENT H
```

## 9.9 AisConstantCurrentElement.h

```
1 #pragma once
3 #include "AisAbstractElement.h"
4 #include "AisSquidstatGlobal.h"
5 #include <QString>
7 class ConstantCurrentAdvElement;
15 class SQUIDSTATLIBRARY_EXPORT AisConstantCurrentElement final : public AisAbstractElement {
16 public:
       explicit AisConstantCurrentElement(
23
          double current,
25
           double samplingInterval,
26
           double duration);
30
       explicit AisConstantCurrentElement(const AisConstantCurrentElement&);
34
       AisConstantCurrentElement& operator=(const AisConstantCurrentElement&);
35
36
       ~AisConstantCurrentElement() override;
37
42
       QString getName() const override;
43
48
       QStringList getCategory() const override;
49
54
       double getCurrent() const;
60
       void setCurrent(double current);
61
66
       double getSamplingInterval() const;
67
72
       void setSamplingInterval(double samplingInterval);
73
82
       double getMinSamplingVoltageDifference() const;
83
96
       void setMinSamplingVoltageDifference(double minVoltageDifference);
97
104
        double getMaxVoltage() const;
105
114
        void setMaxVoltage(double maxVoltage);
115
121
        double getMinVoltage() const;
122
        void setMinVoltage(double minVoltage);
131
132
138
        double getMaxDuration() const;
139
146
        void setMaxDuration(double maxDuration);
147
153
        double getMaxCapacity() const;
154
163
        void setMaxCapacity(double maxCapacity);
164
169
        bool isAutoRange() const;
170
176
        void setAutoRange();
177
183
        double getApproxMaxCurrent() const;
184
192
        void setApproxMaxCurrent(double approxMaxCurrent);
193
        bool isAutoVoltageRange() const;
198
199
205
        void setAutoVoltageRange();
```

```
206
207
213     double getApproxMaxVoltage() const;
214
222     void setApproxMaxVoltage(double approxMaxVoltage);
223
224     private:
225     std::shared_ptr<ConstantCurrentAdvElement> m_dataDerived;
226 };
```

## 9.10 AisConstantPotElement.h

```
1 #pragma once
3 #include "AisAbstractElement.h"
4 #include "AisSquidstatGlobal.h"
5 #include <QString>
7 class ConstantPotAdvElement;
15 class SQUIDSTATLIBRARY_EXPORT AisConstantPotElement final : public AisAbstractElement {
23
       explicit AisConstantPotElement(
24
          double voltage,
           double samplingInterval,
2.5
26
           double duration);
       explicit AisConstantPotElement(const AisConstantPotElement&);
30
35
       AisConstantPotElement& operator=(const AisConstantPotElement&);
36
       ~AisConstantPotElement() override:
37
38
43
       QString getName() const override;
44
49
       QStringList getCategory() const override;
50
55
       double getPotential() const;
56
       void setPotential(double potential);
61
68
       bool isVoltageVsOCP() const;
69
       void setVoltageVsOCP(bool vsOCP);
76
82
       double getSamplingInterval() const;
88
       void setSamplingInterval(double samplingInterval);
89
95
       double getMaxDuration() const;
96
105
        void setMaxDuration(double maxDuration);
106
113
        double getMaxCurrent() const;
114
123
        void setMaxCurrent(double maxCurrent);
124
131
        double getMinCurrent() const;
132
141
        void setMinCurrent(double minCurrent);
142
148
        double getMaxCapacity() const;
149
        void setMaxCapacity(double maxCapacity);
158
159
165
        double getMindIdt() const;
166
175
        void setMindIdt(double mindIdt);
176
181
        bool isAutoRange() const;
182
188
        void setAutoRange();
189
195
        double getApproxMaxCurrent() const;
196
204
        void setApproxMaxCurrent(double approxMaxCurrent);
205
206 private:
207
        std::shared_ptr<ConstantPotAdvElement> m_dataDerived;
208 };
```

164 File Documentation

## 9.11 AisConstantPowerElement.h

```
1 #pragma once
3 #include "AisAbstractElement.h"
4 #include "AisSquidstatGlobal.h"
5 #include <QString>
7 class ConstantPowerElement;
15 class SQUIDSTATLIBRARY_EXPORT AisConstantPowerElement final : public AisAbstractElement {
16 public:
       explicit AisConstantPowerElement(
          bool isCharge,
26
           double power,
27
           double duration,
2.8
           double smaplingInterval);
29
33
       explicit AisConstantPowerElement(const AisConstantPowerElement&);
34
38
       AisConstantPowerElement& operator=(const AisConstantPowerElement&);
39
40
       ~AisConstantPowerElement() override;
41
46
       QString getName() const override;
52
       QStringList getCategory() const override;
53
58
       bool isCharge() const;
59
       void setCharge(bool isCharge);
64
65
70
       double getPower() const;
71
76
       void setPower(double power);
77
82
       double getSamplingInterval() const;
83
       void setSamplingInterval(double samplingInterval);
89
96
       double getMaxVoltage() const;
97
106
        void setMaxVoltage(double maxVoltage);
107
114
        double getMinVoltage() const;
115
122
        void setMinVoltage(double minVoltage);
123
129
        double getMaxDuration() const;
130
137
        void setMaxDuration(double maxDuration);
138
144
        double getMaxCapacity() const;
145
154
        void setMaxCapacity(double maxCapacity);
155
156 private:
        std::shared_ptr<ConstantPowerElement> m_dataDerived;
158 };
```

## 9.12 AisConstantResistanceElement.h

```
1 #pragma once
3 #include "AisAbstractElement.h"
4 #include "AisSquidstatGlobal.h"
5 #include <QString>
7 class ConstantResistanceElement;
15 class SQUIDSTATLIBRARY_EXPORT AisConstantResistanceElement final : public AisAbstractElement {
16 public:
23
       {\tt explicit} \ {\tt AisConstantResistanceElement(}
24
          double resistance,
25
           double duration,
           double samplingInterval);
30
       explicit AisConstantResistanceElement(const AisConstantResistanceElement&);
34
       AisConstantResistanceElement& operator=(const AisConstantResistanceElement&);
35
36
       ~AisConstantResistanceElement() override;
37
42
       QString getName() const override;
```

```
48
       QStringList getCategory() const override;
49
54
       double getResistance() const;
5.5
60
       void setResistance(double resistance);
61
66
       double getSamplingInterval() const;
72
       void setSamplingInterval(double samplingInterval);
73
79
       double getMinVoltage() const;
80
       void setMinVoltage(double minVoltage);
89
90
96
       double getMaxDuration() const;
97
104
        void setMaxDuration(double maxDuration);
105
111
        double getMaxCapacity() const;
112
121
        void setMaxCapacity(double maxCapacity);
122
123 private:
        std::shared_ptr<ConstantResistanceElement> m_dataDerived;
124
125 };
```

# 9.13 AisCyclicVoltammetryElement.h

```
1 #pragma once
3 #include "AisAbstractElement.h"
4 #include "AisSquidstatGlobal.h"
5 #include <QString>
7 class CyclicVoltammetryElement;
22 class SQUIDSTATLIBRARY_EXPORT AisCyclicVoltammetryElement final : public AisAbstractElement {
23 public:
       explicit AisCyclicVoltammetryElement(
33
          double startVoltage,
35
           double firstVoltageLimit,
36
           double secondVoltageLimit,
37
           double endVoltage,
38
           double dEdt,
39
           double samplingInterval);
       explicit AisCyclicVoltammetryElement(const AisCyclicVoltammetryElement&);
45
49
       AisCyclicVoltammetryElement& operator=(const AisCyclicVoltammetryElement&);
50
51
       ~AisCvclicVoltammetrvElement() override;
52
       QString getName() const override;
58
63
       QStringList getCategory() const override;
64
       double getStartVoltage() const;
69
70
75
       void setStartVoltage(double startVoltage);
76
81
       bool isStartVoltageVsOCP() const;
82
       void setStartVoltageVsOCP(bool startVoltageVsOCP);
89
90
98
       double getFirstVoltageLimit() const;
99
107
        void setFirstVoltageLimit(double v1);
108
114
        bool isFirstVoltageLimitVsOCP() const;
115
122
        void setFirstVoltageLimitVsOCP(bool firstVoltageLimitVsOCP);
123
131
        double getSecondVoltageLimit() const;
132
        void setSecondVoltageLimit(double v2);
140
141
147
        bool isSecondVoltageLimitVsOCP() const;
148
155
        void setSecondVoltageLimitVsOCP(bool secondVoltageLimitVsOCP);
156
        double getNumberOfCycles();
161
162
167
        void setNumberOfCycles(int cycles);
```

166 File Documentation

```
168
176
        double getEndVoltage() const;
177
185
        void setEndVoltage(double endVoltage);
186
192
        bool isEndVoltageVsOCP() const;
193
200
        void setEndVoltageVsOCP(bool endVoltageVsOCP);
201
206
        double getdEdt() const;
207
212
        void setdEdt(double dEdt);
213
218
        double getSamplingInterval() const;
219
224
        void setSamplingInterval(double sampInterval);
225
230
        bool isAutoRange() const;
231
237
        void setAutoRange();
238
244
        double getApproxMaxCurrent() const;
245
253
        void setApproxMaxCurrent(double approxMaxCurrent);
254
255 private:
256
        std::shared_ptr<CyclicVoltammetryElement> m_dataDerived;
257 };
```

# 9.14 AisDCCurrentSweepElement.h

```
1 #pragma once
  #include "AisAbstractElement.h"
  #include "AisSquidstatGlobal.h"
5 #include <QString>
7 class DCCurrentSweepElement:
17 class SQUIDSTATLIBRARY_EXPORT AisDCCurrentSweepElement : public AisAbstractElement {
26
       explicit AisDCCurrentSweepElement(
2.7
           double startCurrent,
28
           double endCurrent.
29
           double scanRate.
30
           double samplingInterval
31
32
36
       explicit AisDCCurrentSweepElement(const AisDCCurrentSweepElement&);
40
       AisDCCurrentSweepElement& operator=(const AisDCCurrentSweepElement&);
41
       ~AisDCCurrentSweepElement() override;
42
43
48
       QString getName() const override;
49
59
       QStringList getCategory() const override;
60
65
       double getStartingCurrent() const;
       void setStartingCurrent(double startingCurrent);
72
77
       double getEndingCurrent() const;
78
83
       void setEndingCurrent(double endingCurrent);
90
       double getScanRate() const;
91
98
       void setScanRate(double scanRate);
99
104
        double getSamplingInterval() const;
105
110
        void setSamplingInterval(double samplingInterval);
111
118
        double getMaxVoltage() const;
119
        void setMaxVoltage(double maxVoltage);
128
129
135
        double getMinVoltage() const;
136
145
        void setMinVoltage(double minVoltage);
146
147 private:
148
        std::shared_ptr<DCCurrentSweepElement> m_dataDerived;
149 };
```

## 9.15 AisDCPotentialSweepElement.h

```
1 #pragma once
3 #include "AisAbstractElement.h"
4 #include "AisSquidstatGlobal.h"
5 #include <QString>
7 class DCPotentialSweepElement;
17 class SQUIDSTATLIBRARY_EXPORT AisDCPotentialSweepElement final : public AisAbstractElement {
18 public:
       explicit AisDCPotentialSweepElement(
           double startPotential,
           double endPotential,
29
           double scanRate,
30
           double samplingInterval);
       explicit AisDCPotentialSweepElement(const AisDCPotentialSweepElement&);
34
38
       AisDCPotentialSweepElement& operator=(const AisDCPotentialSweepElement&);
40
       ~AisDCPotentialSweepElement() override;
41
       QString getName() const override;
QStringList getCategory() const override;
46
56
57
62
       double getStartingPot() const;
68
       void setStartingPot(double startingPotential);
69
75
       bool isStartVoltageVsOCP() const;
76
       void setStartVoltageVsOCP(bool startVoltageVsOCP);
92
       double getEndingPot() const;
93
100
        void setEndingPot(double endingPotential);
101
107
        bool isEndVoltageVsOCP() const;
108
116
        void setEndVoltageVsOCP(bool endVoltageVsOCP);
117
123
        double getScanRate() const;
124
131
        void setScanRate(double scanRate);
132
137
        double getSamplingInterval() const;
138
143
        void setSamplingInterval(double samplingInterval);
144
149
        bool isAutoRange() const;
150
156
        void setAutoRange();
157
163
        double getApproxMaxCurrent() const;
164
172
        void setApproxMaxCurrent(double approxMaxCurrent);
174 private:
175
        std::shared_ptr<DCPotentialSweepElement> m_dataDerived;
176 };
```

## 9.16 AisDiffPulseVoltammetryElement.h

```
1 #pragma once
3 #include "AisAbstractElement.h"
4 #include "AisSquidstatGlobal.h"
5 #include <QString>
7 class DiffPulseVoltammetryElement;
21 class SQUIDSTATLIBRARY_EXPORT AisDiffPulseVoltammetryElement final : public AisAbstractElement {
22 public:
      explicit AisDiffPulseVoltammetryElement(
32
          double startVoltage,
33
           double endVoltage,
          double voltageStep,
           double pulseHeight,
37
           double pulseWidth,
38
           double pulsePeriod);
42
       explicit AisDiffPulseVoltammetryElement(const AisDiffPulseVoltammetryElement&);
46
       AisDiffPulseVoltammetryElement& operator=(const AisDiffPulseVoltammetryElement&);
```

168 File Documentation

```
48
       ~AisDiffPulseVoltammetryElement() override;
49
54
       QString getName() const override;
5.5
6.5
       QStringList getCategory() const override;
66
71
       double getStartVoltage() const;
72
77
       void setStartVoltage(double startVoltage);
78
       bool isStartVoltageVsOCP() const;
84
85
93
       void setStartVoltageVsOCP(bool startVoltageVsOCP);
94
101
        double getEndVoltage() const;
102
        void setEndVoltage(double endVoltage);
109
110
116
        bool isEndVoltageVsOCP() const;
117
125
        void setEndVoltageVsOCP(bool endVoltageVsOCP);
126
132
        double getVStep() const;
133
140
        void setVStep(double vStep);
141
147
        double getPulseHeight() const;
148
        void setPulseHeight(double pulseHeight);
157
158
164
        double getPulseWidth() const;
165
173
        void setPulseWidth(double pulseWidth);
174
180
        double getPulsePeriod() const;
181
188
        void setPulsePeriod(double pulsePeriod);
189
194
        bool isAutoRange() const;
195
201
        void setAutoRange();
202
208
        double getApproxMaxCurrent() const;
209
217
        void setApproxMaxCurrent(double approxMaxCurrent);
218
219 private:
220
        \verb|std::shared_ptr<DiffPulseVoltammetryElement>| m_dataDerived;|\\
221 };
```

#### 9.17 AisEISGalvanostaticElement.h

```
1 #pragma once
3 #include "AisAbstractElement.h"
4 #include "AisSquidstatGlobal.h"
5 #include <QString>
7 class EISGalvanostaticElement;
20 class SQUIDSTATLIBRARY_EXPORT AisEISGalvanostaticElement final : public AisAbstractElement {
21 public:
       explicit AisEISGalvanostaticElement(
30
31
          double startFrequency,
           double endFrequency,
33
           double stepsPerDecade,
34
           double currentBias,
           double currentAamplitude);
3.5
       explicit AisEISGalvanostaticElement(const AisEISGalvanostaticElement&);
39
43
       AisEISGalvanostaticElement& operator=(const AisEISGalvanostaticElement&);
44
45
       ~AisEISGalvanostaticElement() override;
46
51
       QString getName() const override;
52
62
       QStringList getCategory() const override;
63
68
       double getStartFreq() const;
69
74
       void setStartFreq(double startFreq);
75
       double getEndFreg() const;
80
```

```
86
       void setEndFreq(double endFreq);
92
       double getStepsPerDecade() const;
93
98
       void setStepsPerDecade(double stepsPerDecade);
99
104
        double getBiasCurrent() const;
105
110
        void setBiasCurrent(double biasCurrent);
111
        double getAmplitude() const;
116
117
122
        void setAmplitude(double amplitude);
123
124 private:
125
        std::shared_ptr<EISGalvanostaticElement> m_dataDerived;
126 1:
```

#### 9.18 AisEISPotentiostaticElement.h

```
1 #pragma once
3 #include "AisAbstractElement.h"
4 #include "AisSquidstatGlobal.h"
5 #include <OString>
7 class EISPotentiostaticElement;
20 class SQUIDSTATLIBRARY_EXPORT AisEISPotentiostaticElement final : public AisAbstractElement {
21 public:
       explicit AisEISPotentiostaticElement(
30
          double startFrequency.
31
32
          double endFrequency,
33
           double stepsPerDecade,
34
          double voltageBias,
35
           double voltageAamplitude);
       explicit AisEISPotentiostaticElement(const AisEISPotentiostaticElement&);
39
43
       AisEISPotentiostaticElement& operator=(const AisEISPotentiostaticElement&);
44
45
       ~AisEISPotentiostaticElement() override;
46
51
       QString getName() const override;
52
57
       QStringList getCategory() const override;
58
       double getStartFreq() const;
69
       void setStartFreq(double startFreq);
70
       double getEndFreq() const;
75
76
81
       void setEndFreq(double endFreq);
87
       double getStepsPerDecade() const;
88
       void setStepsPerDecade(double stepsPerDecade);
93
94
99
       double getBiasVoltage() const;
100
105
        void setBiasVoltage(double biasVoltage);
106
        bool isBiasVoltageVsOCP() const;
113
114
119
        void setBiasVoltageVsOCP(bool biasVsOCP);
120
125
        double getAmplitude() const;
126
131
        void setAmplitude(double amplitude);
132
133 private:
134
        std::shared_ptr<EISPotentiostaticElement> m_dataDerived;
135 };
```

# 9.19 AisNormalPulseVoltammetryElement.h

```
1 #pragma once
2
3 #include "AisAbstractElement.h"
4 #include "AisSquidstatGlobal.h"
```

170 File Documentation

```
5 #include <QString>
7 class NormalPulseVoltammetryElement;
21 class SQUIDSTATLIBRARY_EXPORT AisNormalPulseVoltammetryElement final : public AisAbstractElement {
22 public:
31
       explicit AisNormalPulseVoltammetryElement(
           double startVoltage,
33
           double endVoltage,
           double voltageStep,
34
35
           double pulseWidth,
36
           double pulsePeriod);
       explicit AisNormalPulseVoltammetryElement(const AisNormalPulseVoltammetryElement&);
40
       AisNormalPulseVoltammetryElement& operator=(const AisNormalPulseVoltammetryElement&);
45
46
       ~AisNormalPulseVoltammetryElement() override;
47
52
       QString getName() const override;
53
58
       QStringList getCategory() const override;
59
64
       double getStartVoltage() const;
6.5
70
       void setStartVoltage(double startVoltage);
71
       bool isStartVoltageVsOCP() const;
79
87
       void setStartVoltageVsOCP(bool startVoltageVsOCP);
88
95
       double getEndVoltage() const;
96
103
        void setEndVoltage(double endVoltage);
104
110
        bool isEndVoltageVsOCP() const;
111
        void setEndVoltageVsOCP(bool endVoltageVsOcp);
119
120
126
        double getVStep() const;
127
134
        void setVStep(double vStep);
135
        double getPulseWidth() const;
142
143
150
        void setPulseWidth(double pulseWidth);
151
157
        double getPulsePeriod() const;
158
165
        void setPulsePeriod(double pulsePeriod);
166
171
        bool isAutoRange() const;
172
178
        void setAutoRange();
179
185
        double getApproxMaxCurrent() const;
186
194
        void setApproxMaxCurrent(double approxMaxCurrent);
195
196 private:
197
        std::shared_ptr<NormalPulseVoltammetryElement> m_dataDerived;
198 };
```

# 9.20 AisOpenCircuitElement.h

```
1 #pragma once
3 #include "AisAbstractElement.h"
4 #include "AisSquidstatGlobal.h"
5 #include <QString>
7 class OpenCircuitElement;
15 class SQUIDSTATLIBRARY_EXPORT AisOpenCircuitElement final : public AisAbstractElement {
16 public:
2.2
       explicit AisOpenCircuitElement(
23
           double duration,
24
           double samplingInterval);
28
       explicit AisOpenCircuitElement(const AisOpenCircuitElement&);
32
       AisOpenCircuitElement& operator=(const AisOpenCircuitElement&);
33
34
       ~AisOpenCircuitElement() override;
35
40
       QString getName() const override;
```

```
46
       QStringList getCategory() const override;
52
       double getSamplingInterval() const;
53
58
       void setSamplingInterval(double samplingInterval);
59
64
       double getMaxDuration() const;
65
70
       void setMaxDuration(double maxDuration);
71
78
       double getMaxVoltage() const;
79
88
       void setMaxVoltage(double maxVoltage);
95
       double getMinVoltage() const;
96
105
        void setMinVoltage(double minVoltage);
106
113
        double getMindVdt() const;
114
123
        void setMindVdt(double mindVdt);
124
129
        bool isAutoVoltageRange() const;
130
136
        void setAutoVoltageRange();
137
143
        double getApproxMaxVoltage() const;
144
152
        void setApproxMaxVoltage(double approxMaxVoltage);
153
154 private:
155
        std::shared_ptr<OpenCircuitElement> m_dataDerived;
```

## 9.21 AisSquareWaveVoltammetryElement.h

```
1 #pragma once
3 #include "AisAbstractElement.h"
  #include "AisSquidstatGlobal.h"
5 #include <QString>
7 class SquareWaveVoltammetrvElement:
23 class SQUIDSTATLIBRARY_EXPORT AisSquareWaveVoltammetryElement final : public AisAbstractElement {
      explicit AisSquareWaveVoltammetryElement(
34
           double startVoltage,
35
           double endVoltage,
          double voltageStep
36
37
           double pulseAmp,
          double pulseFrequency);
39
43
       explicit AisSquareWaveVoltammetryElement(const AisSquareWaveVoltammetryElement&);
47
       AisSquareWaveVoltammetryElement& operator=(const AisSquareWaveVoltammetryElement&);
48
49
       ~AisSquareWaveVoltammetryElement() override;
50
       QString getName() const override;
56
61
       QStringList getCategory() const override;
62
       double getStartVoltage() const;
67
68
       void setStartVoltage(double startVoltage);
74
81
       bool isStartVoltageVsOCP() const;
82
90
       void setStartVoltageVsOCP(bool startVoltageVsOcp);
91
       double getEndVoltage() const;
99
106
        void setEndVoltage(double endVoltage);
107
113
        bool isEndVoltageVsOCP() const;
114
122
        void setEndVoltageVsOCP(bool endVoltageVsOcp);
123
129
        double getVStep() const;
130
137
        void setVStep(double vStep);
138
        double getPulseAmp() const;
```

172 File Documentation

```
145
153 void setPulseAmp(double pulseAmp);
154
159 double getPulseFreq() const;
160
165 void setPulseFreq(double pulseFreq);
166
171 bool isAutoRange() const;
172
178 void setAutoRange();
179
185 double getApproxMaxCurrent() const;
186
194 void setApproxMaxCurrent(double approxMaxCurrent);
195
196 private:
197 std::shared_ptr<SquareWaveVoltammetryElement> m_dataDerived;
198 };
```

# Index

antice ACData Dander	matMayDymation 00
activeACDataReady	getMaxDuration, 38
AisInstrumentHandler, 115	getMinCurrent, 38
activeDCDataReady	getMindldt, 39
AisInstrumentHandler, 115	getName, 39
AisAbstractElement.h, 161	getPotential, 39
AisACData, 21	getSamplingInterval, 40
numberOfCycles, 22	isAutoRange, 40
AisCompRange, 22	isVoltageVsOCP, 40
AisCompRange, 23	setApproxMaxCurrent, 40
getBandwidthIndex, 23	setAutoRange, 41
getCompRangeName, 23	setMaxCapacity, 41
getStabilityFactor, 24	setMaxCurrent, 41
setBandwidthIndex, 24	setMaxDuration, 41
setCompRangeName, 24	setMinCurrent, 42
setStabilityFactor, 25	setMindldt, 42
AisCompRange.h, 157	setPotential, 42
AisConstantCurrentElement, 25	setSamplingInterval, 43
AisConstantCurrentElement, 27	setVoltageVsOCP, 43
getApproxMaxCurrent, 27	AisConstantPotElement.h, 163
getApproxMaxVoltage, 28	AisConstantPowerElement, 43
getCategory, 28	AisConstantPowerElement, 45
getCurrent, 28	getCategory, 46
getMaxCapacity, 29	getMaxCapacity, 46
getMaxDuration, 29	getMaxDuration, 46
getMaxVoltage, 29	getMaxVoltage, 46
getMinSamplingVoltageDifference, 29	getMinVoltage, 47
getMinVoltage, 30	getName, 47
getName, 30	getPower, 47
getSamplingInterval, 30	getSamplingInterval, 48
isAutoRange, 31	isCharge, 48
isAutoVoltageRange, 31	setCharge, 48
setApproxMaxCurrent, 31	setMaxCapacity, 49
setApproxMaxVoltage, 32	setMaxDuration, 49
setAutoRange, 32	setMaxVoltage, 49
setAutoVoltageRange, 32	setMinVoltage, 50
setCurrent, 32	setPower, 50
setMaxCapacity, 32	•
	setSamplingInterval, 50
setMaxDuration, 33	AisConstantPowerElement.h, 164
setMaxVoltage, 33	AisConstantResistanceElement, 51
setMinSamplingVoltageDifference, 33	AisConstantResistanceElement, 52
setMinVoltage, 34	getCategory, 52
setSamplingInterval, 34	getMaxCapacity, 53
AisConstantCurrentElement.h, 162	getMaxDuration, 53
AisConstantPotElement, 35	getMinVoltage, 53
AisConstantPotElement, 36	getName, 53
getApproxMaxCurrent, 37	getResistance, 54
getCategory, 37	getSamplingInterval, 54
getMaxCapacity, 37	setMaxCapacity, 54
getMaxCurrent, 38	setMaxDuration, 55

setMinVoltage, 55	getEndingPot, 76
setResistance, 55	getName, 76
setSamplingInterval, 56	getSamplingInterval, 77
AisConstantResistanceElement.h, 164	getScanRate, 77
AisCyclicVoltammetryElement, 56	getStartingPot, 77
AisCyclicVoltammetryElement, 58	isAutoRange, 77
getApproxMaxCurrent, 58	isEndVoltageVsOCP, 78
getCategory, 58	isStartVoltageVsOCP, 78
getdEdt, 59	setApproxMaxCurrent, 78
getEndVoltage, 59	setAutoRange, 79
getFirstVoltageLimit, 59	setEndingPot, 79
getName, 59	setEndVoltageVsOCP, 79
getNumberOfCycles, 60	setSamplingInterval, 79
getSamplingInterval, 60	setScanRate, 80
getSecondVoltageLimit, 60	setStartingPot, 80
getStartVoltage, 60	setStartVoltageVsOCP, 80
isAutoRange, 61	AisDCPotentialSweepElement.h, 167
isEndVoltageVsOCP, 61	AisDeviceTracker, 81
isFirstVoltageLimitVsOCP, 61	connectAllPluggedInDevices, 82
isSecondVoltageLimitVsOCP, 61	connectToDeviceOnComPort, 82
isStartVoltageVsOCP, 62	deviceDisconnected, 83
setApproxMaxCurrent, 62	getConnectedDevices, 83
setAutoRange, 62	getInstrumentHandler, 83
setdEdt, 62	newDeviceConnected, 84
setEndVoltage, 63	updateFirmwareOnAllAvailableDevices, 84
setEndVoltageVsOCP, 63	updateFirmwareOnComPort, 85
setFirstVoltageLimit, 63	AisDeviceTracker.h, 158
setFirstVoltageLimitVsOCP, 64	AisDiffPulseVoltammetryElement, 85
setNumberOfCycles, 64	AisDiffPulseVoltammetryElement, 87
setSamplingInterval, 64	getApproxMaxCurrent, 88
setSecondVoltageLimit, 65	getCategory, 88
setSecondVoltageLimitVsOCP, 65	getEndVoltage, 88
setStartVoltage, 65	getName, 88
setStartVoltageVsOCP, 66	getPulseHeight, 89
AisCyclicVoltammetryElement.h, 165	getPulsePeriod, 89
AisDataPoints.h, 157	getPulseWidth, 89
AisDCCurrentSweepElement, 66	getStartVoltage, 90
AisDCCurrentSweepElement, 68	getVStep, 90
getCategory, 69	isAutoRange, 90
getEndingCurrent, 69	isEndVoltageVsOCP, 91
getMaxVoltage, 69	isStartVoltageVsOCP, 91
getMinVoltage, 69	setApproxMaxCurrent, 91
getName, 70	setAutoRange, 92
getSamplingInterval, 70	setEndVoltage, 92
getScanRate, 70	setEndVoltageVsOCP, 92
getStartingCurrent, 70	setPulseHeight, 92
setEndingCurrent, 71	setPulsePeriod, 93
setMaxVoltage, 71	setPulseWidth, 93
setMinVoltage, 71	setStartVoltage, 93
setSamplingInterval, 72	setStartVoltageVsOCP, 94
setScanRate, 72	setVStep, 94
setStartingCurrent, 72	AisDiffPulseVoltammetryElement.h, 167
AisDCCurrentSweepElement.h, 166	AisEISGalvanostaticElement, 95
AisDCCurrentsweepElement.ii, 100 AisDCData, 73	AisEISGalvanostaticElement, 96
AisDCPotentialSweepElement, 73	getAmplitude, 97
AisDCPotentialSweepElement, 75  AisDCPotentialSweepElement, 75	getBiasCurrent, 97
getApproxMaxCurrent, 76	getCategory, 97
getCategory, 76	getEndFreq, 97
goloalogoly, 10	getiliai req, 37

getName, 98			gotEvnorimentName 111
_			getExperimentName, 111
getStartFreq, 98	20		operator=, 111
getStepsPerDecade, 9	10		setDescription, 112
setAmplitude, 98		A:- تـ	setExperimentName, 112
setBiasCurrent, 99			xperiment.h, 159
setEndFreq, 99			xperimentNode, 112
setStartFreq, 99		Aisir	strumentHandler, 113
setStepsPerDecade, 9			activeACDataReady, 115
AisEISGalvanostaticElemen			activeDCDataReady, 115
AisEISPotentiostaticElemen			deviceDisconnected, 115
AisEISPotentiostaticEl	ement, 101		eraseRecoverData, 115
getAmplitude, 102			experimentNewElementStarting, 116
getBiasVoltage, 102			experimentPaused, 116
getCategory, 102			experimentResumed, 116
getEndFreq, 103			experimentStopped, 117
getName, 103			getExperimentUTCStartTime, 117
getStartFreq, 103			getFreeChannels, 117
getStepsPerDecade, 1	03		getLinkedChannels, 118
isBiasVoltageVsOCP,			getManualModeCurrentRangeList, 118
setAmplitude, 104			getNumberOfChannels, 118
setBiasVoltage, 104			groundFloatStateChanged, 119
setBiasVoltageVsOCP	105		idleDCDataReady, 119
setEndFreq, 105	, 103		isChannelBusy, 119
setStartFreq, 105			isChannelPaused, 120
·	05		
setStepsPerDecade, 1			pauseExperiment, 120
AisEISPotentiostaticElemer	ii.n, 169		recoverDataErased, 120
AisErrorCode, 106			recoveryACDataReady, 121
BusyChannel, 107			recoveryDCDataReady, 121
ChannelNotBusy, 107			resumeExperiment, 121
ConnectionFailed, 107			setCompRange, 122
DeviceCommunication	Failed, 107		setIRComp, 122
DeviceNotFound, 107			setLinkedChannels, 124
ErrorCode, 107			setManualModeConstantCurrent, 124
ExperimentAlreadyPa			setManualModeConstantVoltage, 125
ExperimentAlreadyRu	n, 108		setManualModeOCP, 126
ExperimentIsEmpty, 1	07		setManualModeSamplingInterval, 126
ExperimentNotUpload	ed, 107		skipExperimentStep, 127
FailedToPauseExperin	nent, 107		startManualExperiment, 127
FailedToResumeExpe	riment, 108		startUploadedExperiment, 128
FailedToSetManualMo	deConstantVoltage, 107		stopExperiment, 128
FailedToSetManualMo	deCurrentRange, 107		uploadExperimentToChannel, 129
FailedToStopExperime	ent, 108	AisIn	strumentHandler.h, 160
FailedToUploadExperi	ment, 108	AisN	ormalPulseVoltammetryElement, 130
FirmwareNotSupporte	d, 107		AisNormalPulseVoltammetryElement, 132
InvalidChannel, 107			getApproxMaxCurrent, 133
InvalidParameters, 107	7		getCategory, 133
ManualExperimentNot			getEndVoltage, 133
message, 108			getName, 133
Success, 107			getPulsePeriod, 134
Unknown, 107			getPulseWidth, 134
value, 108			getStartVoltage, 134
AisErrorCode.h, 159			getVStep, 135
			-
AisExperiment, 109			isAutoRange, 135
AisExperiment, 109			isEndVoltageVsOCP, 135
appendElement, 110	+ 110		isStartVoltageVsOCP, 135
appendSubExperimen	ιι, τιυ		setApproxMaxCurrent, 136
getCategory, 111			setAutoRange, 136
getDescription, 111			setEndVoltage, 136

setEndVoltageVsOCP, 137	AisErrorCode, 107
setPulsePeriod, 137	connectAllPluggedInDevices
setPulseWidth, 137	AisDeviceTracker, 82
setStartVoltage, 138	ConnectionFailed
setStartVoltageVsOCP, 138	AisErrorCode, 107
setVStep, 138	connectToDeviceOnComPort
AisNormalPulseVoltammetryElement.h, 169	AisDeviceTracker, 82
AisOpenCircuitElement, 139	,
AisOpenCircuitElement, 140	DeviceCommunicationFailed
getApproxMaxVoltage, 141	AisErrorCode, 107
getCategory, 141	deviceDisconnected
getMaxDuration, 141	AisDeviceTracker, 83
getMaxVoltage, 141	AisInstrumentHandler, 115
getMindVdt, 142	DeviceNotFound
getMinVoltage, 142	AisErrorCode, 107
getName, 142	
getSamplingInterval, 143	eraseRecoverData
isAutoVoltageRange, 143	AisInstrumentHandler, 115
setApproxMaxVoltage, 143	ErrorCode
· · · · · ·	AisErrorCode, 107
setAutoVoltageRange, 144	ExperimentAlreadyPaused
setMaxDuration, 144	AisErrorCode, 108
setMaxVoltage, 144	ExperimentAlreadyRun
setMindVdt, 144	AisErrorCode, 108
setMinVoltage, 145	ExperimentIsEmpty
setSamplingInterval, 145	AisErrorCode, 107
AisOpenCircuitElement.h, 170	experimentNewElementStarting
AisSquareWaveVoltammetryElement, 145	AisInstrumentHandler, 116
AisSquareWaveVoltammetryElement, 147	ExperimentNotUploaded
getApproxMaxCurrent, 148	AisErrorCode, 107
getCategory, 148	experimentPaused
getEndVoltage, 148	AisInstrumentHandler, 116
getName, 149	experimentResumed
getPulseAmp, 149	•
getPulseFreq, 149	AisInstrumentHandler, 116
getStartVoltage, 149	experimentStopped
getVStep, 150	AisInstrumentHandler, 117
isAutoRange, 150	FailedToPauseExperiment
isEndVoltageVsOCP, 150	AisErrorCode, 107
isStartVoltageVsOCP, 150	FailedToResumeExperiment
setApproxMaxCurrent, 151	·
setAutoRange, 151	AisErrorCode, 108
setEndVoltage, 151	FailedToSetManualModeConstantVoltage
setEndVoltageVsOCP, 152	AisErrorCode, 107
setPulseAmp, 152	FailedToSetManualModeCurrentRange
setPulseFreq, 152	AisErrorCode, 107
setStartVoltage, 154	FailedToStopExperiment
setStartVoltageVsOCP, 154	AisErrorCode, 108
setVStep, 154	FailedToUploadExperiment
AisSquareWaveVoltammetryElement.h, 171	AisErrorCode, 108
AisSquidstatGlobal.h, 161	FirmwareNotSupported
appendElement	AisErrorCode, 107
AisExperiment, 110	
appendSubExperiment	getAmplitude
AisExperiment, 110	AisEISGalvanostaticElement, 97
Alse Aperillent, 110	AisEISPotentiostaticElement, 102
BusyChannel	getApproxMaxCurrent
AisErrorCode, 107	AisConstantCurrentElement, 27
	AisConstantPotElement, 37
ChannelNotBusy	AisCyclicVoltammetryElement, 58

AisDCPotentialSweepElement, 76	getInstrumentHandler
AisDiffPulseVoltammetryElement, 88	AisDeviceTracker, 83
AisNormalPulseVoltammetryElement, 133	getLinkedChannels
AisSquareWaveVoltammetryElement, 148	AisInstrumentHandler, 118
getApproxMaxVoltage	getManualModeCurrentRangeList
AisConstantCurrentElement, 28	AisInstrumentHandler, 118
AisOpenCircuitElement, 141	getMaxCapacity
getBandwidthIndex	AisConstantCurrentElement, 29
AisCompRange, 23	AisConstantPotElement, 37
getBiasCurrent	AisConstantPowerElement, 46
AisEISGalvanostaticElement, 97	AisConstantResistanceElement, 53
getBiasVoltage	getMaxCurrent
AisEISPotentiostaticElement, 102	AisConstantPotElement, 38
getCategory	getMaxDuration
AisConstantCurrentElement, 28	AisConstantCurrentElement, 29
AisConstantPotElement, 37	AisConstantPotElement, 38
AisConstantPowerElement, 46	AisConstantPowerElement, 46
AisConstantResistanceElement, 52	AisConstantResistanceElement, 53
AisCyclicVoltammetryElement, 58	AisOpenCircuitElement, 141
AisDCCurrentSweepElement, 69	getMaxVoltage
AisDCPotentialSweepElement, 76	AisConstantCurrentElement, 29
AisDiffPulseVoltammetryElement, 88	AisConstantPowerElement, 46
AisEISGalvanostaticElement, 97	AisDCCurrentSweepElement, 69
AisEISPotentiostaticElement, 102	AisOpenCircuitElement, 141
AisExperiment, 111	getMinCurrent
AisNormalPulseVoltammetryElement, 133	AisConstantPotElement, 38
AisOpenCircuitElement, 141	getMindIdt
AisSquareWaveVoltammetryElement, 148	AisConstantPotElement, 39
getCompRangeName	getMindVdt
AisCompRange, 23	AisOpenCircuitElement, 142
getConnectedDevices	getMinSamplingVoltageDifference
AisDeviceTracker, 83	AisConstantCurrentElement, 29
getCurrent	getMinVoltage
AisConstantCurrentElement, 28	AisConstantCurrentElement, 30
getdEdt	AisConstantPowerElement, 47
AisCyclicVoltammetryElement, 59	AisConstantResistanceElement, 53
getDescription	AisDCCurrentSweepElement, 69
AisExperiment, 111	AisOpenCircuitElement, 142
getEndFreq	getName
AisEISGalvanostaticElement, 97	AisConstantCurrentElement, 30
AisEISPotentiostaticElement, 103	AisConstantPotElement, 39
getEndingCurrent	AisConstantPowerElement, 47
AisDCCurrentSweepElement, 69	AisConstantResistanceElement, 53
getEndingPot	AisCyclicVoltammetryElement, 59
AisDCPotentialSweepElement, 76	AisDCCurrentSweepElement, 70
getEndVoltage	AisDCPotentialSweepElement, 76
AisCyclicVoltammetryElement, 59	AisDiffPulseVoltammetryElement, 88
AisDiffPulseVoltammetryElement, 88	AisEISGalvanostaticElement, 98
AisNormalPulseVoltammetryElement, 133	AisEISPotentiostaticElement, 103
AisSquareWaveVoltammetryElement, 148	AisNormalPulseVoltammetryElement, 133
getExperimentName	AisOpenCircuitElement, 142
AisExperiment, 111	AisSquareWaveVoltammetryElement, 149
getExperimentUTCStartTime	getNumberOfChannels
AisInstrumentHandler, 117	AisInstrumentHandler, 118
getFirstVoltageLimit	getNumberOfCycles
AisCyclicVoltammetryElement, 59	AisCyclicVoltammetryElement, 60
getFreeChannels	getPotential
AisInstrumentHandler, 117	AisConstantPotElement, 39
	otalia otalionioni, oo

getPower	AisErrorCode, 107
AisConstantPowerElement, 47	isAutoRange
getPulseAmp	AisConstantCurrentElement, 31
AisSquareWaveVoltammetryElement, 149	AisConstantPotElement, 40
getPulseFreq	AisCyclicVoltammetryElement, 61
AisSquareWaveVoltammetryElement, 149	AisDCPotentialSweepElement, 77
getPulseHeight	AisDiffPulseVoltammetryElement, 90
AisDiffPulseVoltammetryElement, 89	AisNormalPulseVoltammetryElement, 135
getPulsePeriod	AisSquareWaveVoltammetryElement, 150
AisDiffPulseVoltammetryElement, 89	isAutoVoltageRange
AisNormalPulseVoltammetryElement, 134	AisConstantCurrentElement, 31
getPulseWidth	AisOpenCircuitElement, 143
AisDiffPulseVoltammetryElement, 89	isBiasVoltageVsOCP
AisNormalPulseVoltammetryElement, 134	AisEISPotentiostaticElement, 104
getResistance	isChannelBusy
AisConstantResistanceElement, 54	AisInstrumentHandler, 119
	isChannelPaused
getSamplingInterval AisConstantCurrentElement, 30	
	AisInstrumentHandler, 120
AisConstantPowerFlowert 40	isCharge
AisConstantPowerElement, 48	AisConstantPowerElement, 48
AisConstantResistanceElement, 54	isEndVoltageVsOCP
AisCyclicVoltammetryElement, 60	AisCyclicVoltammetryElement, 61
AisDCCurrentSweepElement, 70	AisDCPotentialSweepElement, 78
AisDCPotentialSweepElement, 77	AisDiffPulseVoltammetryElement, 91
AisOpenCircuitElement, 143	AisNormalPulseVoltammetryElement, 135
getScanRate	AisSquareWaveVoltammetryElement, 150
AisDCCurrentSweepElement, 70	isFirstVoltageLimitVsOCP
AisDCPotentialSweepElement, 77	AisCyclicVoltammetryElement, 61
getSecondVoltageLimit	isSecondVoltageLimitVsOCP
AisCyclicVoltammetryElement, 60	AisCyclicVoltammetryElement, 61
getStabilityFactor	isStartVoltageVsOCP
AisCompRange, 24	AisCyclicVoltammetryElement, 62
getStartFreq	AisDCPotentialSweepElement, 78
AisEISGalvanostaticElement, 98	AisDiffPulseVoltammetryElement, 91
AisEISPotentiostaticElement, 103	AisNormalPulseVoltammetryElement, 135
getStartingCurrent	AisSquareWaveVoltammetryElement, 150
AisDCCurrentSweepElement, 70	isVoltageVsOCP
getStartingPot	AisConstantPotElement, 40
AisDCPotentialSweepElement, 77	Maraya I Cyra a viena a shlia shli ya mina a
getStartVoltage	ManualExperimentNotRunning
AisCyclicVoltammetryElement, 60	AisErrorCode, 107
AisDiffPulseVoltammetryElement, 90	message
AisNormalPulseVoltammetryElement, 134	AisErrorCode, 108
AisSquareWaveVoltammetryElement, 149	newDeviceConnected
getStepsPerDecade	AisDeviceTracker, 84
AisEISGalvanostaticElement, 98	
AisEISPotentiostaticElement, 103	numberOfCycles
getVStep	AisACData, 22
AisDiffPulseVoltammetryElement, 90	operator=
AisNormalPulseVoltammetryElement, 135	AisExperiment, 111
AisSquareWaveVoltammetryElement, 150	Alsexperiment, 111
groundFloatStateChanged	pauseExperiment
AisInstrumentHandler, 119	AisInstrumentHandler, 120
:-II-DOD-t-Dt-	,
idleDCDataReady	recoverDataErased
AisInstrumentHandler, 119	AisInstrumentHandler, 120
InvalidChannel	recoveryACDataReady
AisErrorCode, 107	AisInstrumentHandler, 121
InvalidParameters	

recoveryDCDataReady	AisDiffPulseVoltammetryElement, 92
AisInstrumentHandler, 121	AisNormalPulseVoltammetryElement, 136
resumeExperiment	AisSquareWaveVoltammetryElement, 151
AisInstrumentHandler, 121	setEndVoltageVsOCP
	AisCyclicVoltammetryElement, 63
setAmplitude	AisDCPotentialSweepElement, 79
AisEISGalvanostaticElement, 98	AisDiffPulseVoltammetryElement, 92
AisEISPotentiostaticElement, 104	AisNormalPulseVoltammetryElement, 137
setApproxMaxCurrent	AisSquareWaveVoltammetryElement, 152
AisConstantCurrentElement, 31	setExperimentName
AisConstantPotElement, 40	AisExperiment, 112
AisCyclicVoltammetryElement, 62	setFirstVoltageLimit
AisDCPotentialSweepElement, 78	AisCyclicVoltammetryElement, 63
AisDiffPulseVoltammetryElement, 91	setFirstVoltageLimitVsOCP
AisNormalPulseVoltammetryElement, 136	AisCyclicVoltammetryElement, 64
AisSquareWaveVoltammetryElement, 151	setIRComp
setApproxMaxVoltage	AisInstrumentHandler, 122
AisConstantCurrentElement, 32	setLinkedChannels
AisOpenCircuitElement, 143	AisInstrumentHandler, 124
setAutoRange	setManualModeConstantCurrent
AisConstantCurrentElement, 32	AisInstrumentHandler, 124
AisConstantPotElement, 41	
AisCyclicVoltammetryElement, 62	setManualModeConstantVoltage
AisDCPotentialSweepElement, 79	AisInstrumentHandler, 125
AisDiffPulseVoltammetryElement, 92	setManualModeOCP
AisNormalPulseVoltammetryElement, 136	AisInstrumentHandler, 126
	setManualModeSamplingInterval
AisSquareWaveVoltammetryElement, 151	AisInstrumentHandler, 126
setAutoVoltageRange	setMaxCapacity
AisConstantCurrentElement, 32	AisConstantCurrentElement, 32
AisOpenCircuitElement, 144	AisConstantPotElement, 41
setBandwidthIndex	AisConstantPowerElement, 49
AisCompRange, 24	AisConstantResistanceElement, 54
setBiasCurrent	setMaxCurrent
AisEISGalvanostaticElement, 99	AisConstantPotElement, 41
setBiasVoltage	setMaxDuration
AisEISPotentiostaticElement, 104	AisConstantCurrentElement, 33
setBiasVoltageVsOCP	AisConstantPotElement, 41
AisEISPotentiostaticElement, 105	AisConstantPowerElement, 49
setCharge	AisConstant ower Element, 45 AisConstantResistanceElement, 55
AisConstantPowerElement, 48	
setCompRange	AisOpenCircuitElement, 144
AisInstrumentHandler, 122	setMaxVoltage
setCompRangeName	AisConstantCurrentElement, 33
AisCompRange, 24	AisConstantPowerElement, 49
setCurrent	AisDCCurrentSweepElement, 71
	AisOpenCircuitElement, 144
AisConstantCurrentElement, 32	setMinCurrent
setdEdt  Aia Qualia Valta gasa at grafia (CO)	AisConstantPotElement, 42
AisCyclicVoltammetryElement, 62	setMindIdt
setDescription	AisConstantPotElement, 42
AisExperiment, 112	setMindVdt
setEndFreq	AisOpenCircuitElement, 144
AisEISGalvanostaticElement, 99	setMinSamplingVoltageDifference
AisEISPotentiostaticElement, 105	AisConstantCurrentElement, 33
setEndingCurrent	setMinVoltage
AisDCCurrentSweepElement, 71	AisConstantCurrentElement, 34
setEndingPot	AisConstantOurertElement, 50
AisDCPotentialSweepElement, 79	AisConstantResistanceElement, 55
setEndVoltage	
AisCyclicVoltammetryElement, 63	AisDCCurrentSweepElement, 71
-,	

AisOpenCircuitElement, 145	AisEISGalvanostaticElement, 99
setNumberOfCycles	AisEISPotentiostaticElement, 105
AisCyclicVoltammetryElement, 64	setVoltageVsOCP
setPotential	AisConstantPotElement, 43
AisConstantPotElement, 42	setVStep
setPower	AisDiffPulseVoltammetryElement, 94
AisConstantPowerElement, 50	AisNormalPulseVoltammetryElement, 138
setPulseAmp	AisSquareWaveVoltammetryElement, 154
AisSquareWaveVoltammetryElement, 152	skipExperimentStep
setPulseFreq	AisInstrumentHandler, 127
AisSquareWaveVoltammetryElement, 152	startManualExperiment
setPulseHeight	AisInstrumentHandler, 127
AisDiffPulseVoltammetryElement, 92	startUploadedExperiment
setPulsePeriod	AisInstrumentHandler, 128
AisDiffPulseVoltammetryElement, 93	stopExperiment
AisNormalPulseVoltammetryElement, 137	AisInstrumentHandler, 128
setPulseWidth	Success
AisDiffPulseVoltammetryElement, 93	AisErrorCode, 107
AisNormalPulseVoltammetryElement, 137	
setResistance	Unknown
AisConstantResistanceElement, 55	AisErrorCode, 107
setSamplingInterval	updateFirmwareOnAllAvailableDevices
AisConstantCurrentElement, 34	AisDeviceTracker, 84
AisConstantPotElement, 43	updateFirmwareOnComPort
AisConstantPowerElement, 50	AisDeviceTracker, 85
AisConstantResistanceElement, 56	uploadExperimentToChannel
AisCyclicVoltammetryElement, 64	AisInstrumentHandler, 129
AisDCCurrentSweepElement, 72	
AisDCPotentialSweepElement, 79	value
AisOpenCircuitElement, 145	AisErrorCode, 108
setScanRate	
AisDCCurrentSweepElement, 72	
AisDCPotentialSweepElement, 80	
setSecondVoltageLimit	
AisCyclicVoltammetryElement, 65	
setSecondVoltageLimitVsOCP	
AisCyclicVoltammetryElement, 65	
setStabilityFactor	
AisCompRange, 25	
setStartFreq	
AisEISGalvanostaticElement, 99	
AisEISPotentiostaticElement, 105	
setStartingCurrent	
AisDCCurrentSweepElement, 72	
setStartingPot	
AisDCPotentialSweepElement, 80	
setStartVoltage	
AisCyclicVoltammetryElement, 65	
AisDiffPulseVoltammetryElement, 93	
AisNormalPulseVoltammetryElement, 138	
AisSquareWaveVoltammetryElement, 154	
setStartVoltageVsOCP	
AisCyclicVoltammetryElement, 66	
AisDCPotentialSweepElement, 80	
AisDiffPulseVoltammetryElement, 94	
AisNormalPulseVoltammetryElement, 138	
AisSquareWaveVoltammetryElement, 154	
setStepsPerDecade	