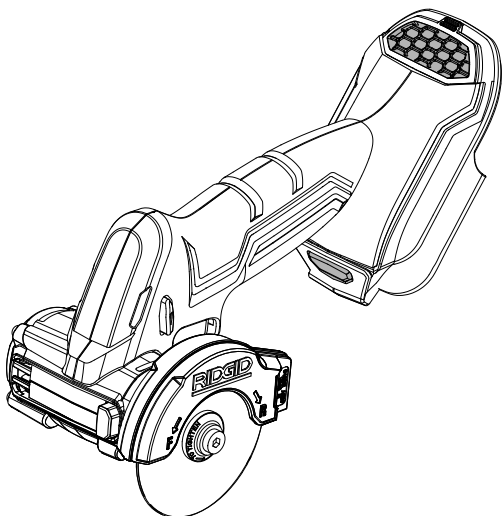




OPERATOR'S MANUAL

18 VOLT 3 in. BRUSHLESS MULTI-MATERIAL SAW

R87547



To register your RIDGID product, please visit:
<http://register.RIDGID.com>

Pour enregistrer votre produit de RIDGID, s'il vous plaît la visite :
<http://register.RIDGID.com>

Para registrar su producto de RIDGID, por favor visita:
<http://register.RIDGID.com>

INCLUDES: Multi-Material Saw, Tile Cutting Wheel, Metal Cutting Wheel, Carbide Abrasive Cutting Wheel, Shoe, Clamp, Operator's Manual

TABLE OF CONTENTS

■ General Power Tool Safety Warnings	2-3
■ Safety Instructions for Multi-material Saws	3-5
■ Symbols.....	6
■ Features.....	7
■ Assembly.....	7-8
■ Operation.....	8-11
■ Maintenance.....	12
■ Illustrations	13-14
■ Parts Ordering and Service	Back page

⚠ WARNING:

To reduce the risk of injury, the user must read and understand the operator's manual before using this product.

SAVE THIS MANUAL FOR FUTURE REFERENCE

GENERAL POWER TOOL SAFETY WARNINGS

WARNING

Read all safety warnings, instructions, illustrations and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term “power tool” in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

WORK AREA SAFETY

- **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

ELECTRICAL SAFETY

- **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
- **Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
- **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
- **If operating a power tool in a damp location is unavoidable, use a ground fault circuit interrupter (GFCI) protected supply.** Use of a GFCI reduces the risk of electric shock.
- **Use this product only with batteries and chargers listed in tool/appliance/battery pack/charger correlation supplement 988000-302.**

PERSONAL SAFETY

- **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.
- **Use personal protective equipment. Always wear eye protection.** Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
- **Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts.** Loose clothes, jewellery or long hair can be caught in moving parts.
- **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.
- **Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.** A careless action can cause severe injury within a fraction of a second.
- **Do not wear loose clothing or jewelry. Contain long hair.** Loose clothes, jewelry, or long hair can be drawn into air vents.
- **Do not use on a ladder or unstable support.** Stable footing on a solid surface enables better control of the power tool in unexpected situations.

POWER TOOL USE AND CARE

- **Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.
- **Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.

GENERAL POWER TOOL SAFETY WARNINGS

- **Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.
- **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.
- **Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** Many accidents are caused by poorly maintained power tools.
- **Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.
- **Keep handles and grasping surfaces dry, clean and free from oil and grease.** Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.
- **Use power tools only with specifically designated battery packs.** Use of any other battery packs may create a risk of injury and fire.
- **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** Shorting the battery terminals together may cause burns or a fire.
- **Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.** Liquid ejected from the battery may cause irritation or burns.
- **Do not use a battery pack or tool that is damaged or modified.** Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- **Do not expose a battery pack or tool to fire or excessive temperature.** Exposure to fire or temperature above 265°F may cause explosion.
- **Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions.** Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.

SERVICE

- **Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.
- **Never service damaged battery packs.** Service of battery packs should only be performed by the manufacturer or authorized service providers.

SAFETY INSTRUCTIONS FOR MULTI-MATERIAL SAWS

- **The guard provided with the tool must be securely attached to the power tool and positioned for maximum safety, so the least amount of wheel is exposed towards the operator. Position yourself and bystanders away from the plane of the rotating wheel.** The guard helps to protect operator from broken wheel fragments and accidental contact with wheel.
- **Use only bonded reinforced or diamond cut-off wheels for your power tool.** Just because an accessory can be attached to your power tool, it does not assure safe operation.
- **The rated speed of the accessory must be at least equal to the maximum speed marked on the power tool.** Accessories running faster than their rated speed can break and fly apart.
- **Wheels must be used only for recommended applications. For example: do not grind with the side of cut-off wheel.** Abrasive cut-off wheels are intended for peripheral grinding, side forces applied to these wheels may cause them to shatter.
- **Always use undamaged wheel flanges that are of correct diameter for your selected wheel.** Proper wheel flanges support the wheel thus reducing the possibility of wheel breakage.
- **Do not use worn down reinforced wheels from larger power tools.** Wheels intended for a larger power tool are not suitable for the higher speed of a smaller tool and may burst.

SAFETY INSTRUCTIONS FOR MULTI-MATERIAL SAWS

- **The outside diameter and the thickness of your accessory must be within the capacity rating of your power tool.** Incorrectly sized accessories cannot be adequately guarded or controlled.
- **The arbour size of wheels and flanges must properly fit the spindle of the power tool.** Wheels and flanges with arbour holes that do not match the mounting hardware of the power tool will run out of balance, vibrate excessively and may cause loss of control.
- **Do not use damaged wheels. Before each use, inspect the wheels for chips and cracks. If power tool or wheel is dropped, inspect for damage or install an undamaged wheel. After inspecting and installing the wheel, position yourself and bystanders away from the plane of the rotating wheel and run the power tool at maximum no load speed for one minute.** Damaged wheels will normally break apart during this test time.
- **Wear personal protective equipment. Depending on application, use face shield, safety goggles or safety glasses. As appropriate, wear dust mask, hearing protectors, gloves and shop apron capable of stopping small abrasive or workpiece fragments.** The eye protection must be capable of stopping flying debris generated by various operations. The dust mask or respirator must be capable of filtering particles generated by your operation. Prolonged exposure to high intensity noise may cause hearing loss.
- **Keep bystanders a safe distance away from work area. Anyone entering the work area must wear personal protective equipment.** Fragments of workpiece or of a broken wheel may fly away and cause injury beyond immediate area of operation.
- **Use auxiliary handle(s), if supplied with the tool.** Loss of control can cause personal injury.
- **Hold the power tool by insulated gripping surfaces, when performing an operation where the cutting accessory or fasteners may contact hidden wiring.** Cutting accessory or fasteners contacting a “live” wire may make exposed metal parts of the power tool “live” and could give the operator an electric shock.
- **Never lay the power tool down until the accessory has come to a complete stop.** The spinning wheel may grab the surface and pull the power tool out of your control.
- **Do not run the power tool while carrying it at your side.** Accidental contact with the spinning accessory could snag your clothing, pulling the accessory into your body.
- **Regularly clean the power tool’s air vents.** The motor’s fan will draw the dust inside the housing and excessive accumulation of powdered metal may cause electrical hazards.
- **Do not operate the power tool near flammable materials.** Sparks could ignite these materials.
- **Do not use accessories that require liquid coolants.** Using water or other liquid coolants may result in electrocution or shock.

KICKBACK AND RELATED WARNINGS:

Kickback is a sudden reaction to a pinched or snagged rotating wheel. Pinching or snagging causes rapid stalling of the rotating wheel which in turn causes the uncontrolled power tool to be forced in the direction opposite of the wheel’s rotation at the point of the binding.

For example, if an abrasive wheel is snagged or pinched by the workpiece, the edge of the wheel that is entering into the pinch point can dig into the surface of the material causing the wheel to climb out or kick out. The wheel may either jump toward or away from the operator, depending on direction of the wheel’s movement at the point of pinching. Abrasive wheels may also break under these conditions.

Kickback is the result of power tool misuse and/or incorrect operating procedures or conditions and can be avoided by taking proper precautions as given below:

- **Maintain a firm grip on the power tool and position your body and arm to allow you to resist kickback forces. Always use auxiliary handle, if provided, for maximum control over kickback or torque reaction during start-up.** The operator can control torque reactions or kickback forces, if proper precautions are taken.
- **Never place your hand near the rotating accessory.** Accessory may kickback over your hand.
- **Do not position your body in line with the rotating wheel.** Kickback will propel the tool in direction opposite to the wheel’s movement at the point of snagging.
- **Use special care when working corners, sharp edges etc. Avoid bouncing and snagging the accessory.** Corners, sharp edges or bouncing have a tendency to snag the rotating accessory and cause loss of control or kickback.
- **Do not attach a saw chain, woodcarving blade, segmented diamond wheel with a peripheral gap greater than 10 mm or toothed saw blade.** Such blades create frequent kickback and loss of control.

SAFETY INSTRUCTIONS FOR MULTI-MATERIAL SAWS

- **Do not “jam” the wheel or apply excessive pressure. Do not attempt to make an excessive depth of cut.** Overstressing the wheel increases the loading and susceptibility to twisting or binding of the wheel in the cut and the possibility of kickback or wheel breakage.
- **When wheel is binding or when interrupting a cut for any reason, switch off the power tool and hold the power tool motionless until the wheel comes to a complete stop. Never attempt to remove the wheel from the cut while the wheel is in motion otherwise kickback may occur.** Investigate and take corrective action to eliminate the cause of wheel binding.
- **Do not restart the cutting operation in the workpiece. Let the wheel reach full speed and carefully re-enter the cut.** The wheel may bind, walk up or kickback if the power tool is restarted in the workpiece.
- **Support panels or any oversized workpiece to minimize the risk of wheel pinching and kickback.** Large workpieces tend to sag under their own weight. Supports must be placed under the workpiece near the line of cut and near the edge of the workpiece on both sides of the wheel.
- **Use extra caution when making a “pocket cut” into existing walls or other blind areas.** The protruding wheel may cut gas or water pipes, electrical wiring or objects that can cause kickback.
- **Operations such as grinding, sanding, wire brushing, or polishing are not recommended to be performed with this power tool.** Operations for which the power tool was not designed may create a hazard and cause personal injury.

ADDITIONAL SAFETY RULES

- **Know your power tool. Read operator’s manual carefully. Learn its applications and limitations, as well as the specific potential hazards related to this tool.** Following this rule will reduce the risk of electric shock, fire, or serious injury.
- **Use clamps or another practical way to secure and support the workpiece to a stable platform.** Holding the work by hand or against your body leaves it unstable and may lead to loss of control.
- **Always wear eye protection with side shields marked to comply with ANSI Z87.1.** Failure to do so could result in objects being thrown into your eyes, resulting in possible serious injury.
- **Protect your lungs. Wear a face or dust mask if the operation is dusty.** Following this rule will reduce the risk of serious personal injury.
- **Protect your hearing. Wear hearing protection during extended periods of operation.** Following this rule will reduce the risk of serious personal injury.
- **Check damaged parts. Before further use of the tool, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other conditions that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced by an authorized service center.** Following this rule will reduce the risk of shock, fire, or serious injury.
- **Save these instructions.** Refer to them frequently and use them to instruct others who may use this tool. If you loan someone this tool, loan them these instructions also.

SYMBOLS

The following signal words and meanings are intended to explain the levels of risk associated with this product.

SYMBOL	SIGNAL	MEANING
	DANGER:	Indicates a hazardous situation, which, if not avoided, will result in death or serious injury.
	WARNING:	Indicates a hazardous situation, which, if not avoided, could result in death or serious injury.
	CAUTION:	Indicates a hazardous situation, that, if not avoided, may result in minor or moderate injury.
	NOTICE:	(Without Safety Alert Symbol) Indicates information considered important, but not related to a potential injury (e.g. messages relating to property damage).

Some of the following symbols may be used on this product. Please study them and learn their meaning. Proper interpretation of these symbols will allow you to operate the product better and safer.

SYMBOL	NAME	DESIGNATION/EXPLANATION
	Safety Alert	Indicates a potential personal injury hazard.
	Read Operator's Manual	To reduce the risk of injury, user must read and understand operator's manual before using this product.
	Eye, Ear, & Breathing Protection	Always wear eye protection with side shields marked to comply with ANSI Z87.1 along with hearing and breathing protection.
	Wet Conditions Alert	Do not expose to rain or use in damp locations.
	Recycle Symbol	This product uses lithium-ion (Li-ion) batteries. Local, state or federal laws may prohibit disposal of batteries in ordinary trash. Consult your local waste authority for information regarding available recycling and/or disposal options.
	No Hands	Failure to keep your hands away from the wheel will result in serious personal injury.
V	Volts	Voltage
min	Minutes	Time
==	Direct Current	Type or a characteristic of current
n	Rated Speed	Maximum rotational speed
n ₀	No Load Speed	Rotational speed, at no load
.../min	Per Minute	Revolutions, strokes, surface speed, orbits etc., per minute

FEATURES

PRODUCT SPECIFICATIONS

Cutting Wheel Diameter 3 in.
Max Cutting Depth 0.64 in.
Arbor Size 7/16 in.

Rated Speed 20,000 /min (RPM)
Maximum Wheel Thickness 7/64 in.
Wheel Type Diamond and Abrasive

ASSEMBLY

UNPACKING

This product requires assembly.

- Carefully remove the tool and any accessories from the box. All items listed in the **Includes** section must be included at the time of purchase.

WARNING:

Items in this *Assembly* section are not assembled to the product by the manufacturer and require customer installation. Use of a product that may have been improperly assembled could result in serious personal injury.

-
- Inspect the tool carefully to make sure no breakage or damage occurred during shipping.
 - Do not discard the packing material until you have carefully inspected and satisfactorily operated the tool.
 - If any parts are damaged or missing, please call 1-866-539-1710 for assistance.

WARNING:

If any parts are damaged or missing do not operate this product until the parts are replaced. Use of this product with damaged or missing parts could result in serious personal injury.

WARNING:

Do not attempt to modify this product or create accessories not recommended for use with this product. Any such alteration or modification is misuse and could result in a hazardous condition leading to possible serious personal injury.

WARNING:

To prevent accidental starting that could cause serious personal injury, always remove the battery pack from the product when assembling parts.

SELECTING CUTTING WHEEL

Selecting the correct type of wheel is important in order to obtain the best performance from the saw. Select the wheel based on the application and on the material you wish to cut. Selecting the right wheel will give you a smoother, faster cut and prolong the life of the wheel.

The best of cutting wheels will not cut efficiently if they are not kept clean and sharp. Using a dull wheel will place a heavy load on the saw and increase the danger of kickback. Keep extra wheels on hand, so that sharp wheels are always available.

Always carefully select and use cutting wheels that are recommended for the material being cut. Make sure that the minimum operating speed of any accessory wheel selected is 22,500 /min. or more.

WARNING:

Never use grinding wheels of any kind with this saw. Use of non-cutting wheels can result in property damage or serious personal injury.

INSTALLING THE SHOE ASSEMBLY

See Figure 1, page 13.

- Remove the battery pack from the saw.
- Remove the 4 mm hex key from the storage area.
- Loosen the clamp screw completely and remove the clamp.
- Place the shoe on the back of the wheel guard as shown
- Align the threaded hole on the wheel guard with the screw in the clamp.
- Place the clamp onto the wheel guard and tighten the screw to secure in place.
- Return the 4 mm hex key to the storage area.

To remove:

- Remove the battery pack from the saw.
- Remove the 4 mm hex key from the storage area.
- Loosen the clamp screw completely and remove the clamp.
- Lift the shoe up and away from the wheel guard.
- Replace the clamp and clamp screw.
- Return the 4 mm hex key to the storage area.

ASSEMBLY

INSTALLING CUTTING WHEEL

See Figure 2, page 13.

DANGER:

Use ONLY Type 1 straight or cut-off wheels (such as the ones provided with this product). Never attach a Type 27 grinding wheel to this saw. Use for any other purpose is not recommended and creates a hazard, which will result in serious injury.

WARNING:

A 3 in. wheel is the maximum wheel capacity of the saw. Never use a wheel that is too thick to allow outer wheel washer to engage with the flats on the spindle. Larger cutting wheels will come in contact with the wheel guard, while thicker wheels will prevent wheel screw from securing wheel on spindle. Either of these situations could result in a serious accident.

- Remove the battery pack from the saw.
- Select an appropriate cutting wheel.

NOTE: A metal cutting wheel, abrasive cutting wheel, and tile cutting wheel are provided.

WARNING:

To reduce the risk of injury, only use the proper wheels made for this tool. Never use any type of toothed saw blade.

- Inspect the wheel for defects such as cracks, chipping, and correct speed rating. If defects are found or the speed rating is not equal to or greater than 22,500 /min., do not use. Select another wheel.
- Remove the 4 mm hex key from the storage area.
- Loosen the clamp screw on the back of the wheel guard and slide the shoe assembly to its lowest position.
- Place the saw on its side with the guard facing up.
- Depress and hold the spindle lock button and remove the wheel screw and outer wheel washer.

NOTE: Turn the wheel screw counterclockwise to remove.

NOTICE:

To prevent damage to the spindle or spindle lock, always allow motor to come to a complete stop before engaging spindle lock.

NOTE: Do not run the saw with spindle lock engaged.

- Wipe a drop of oil onto the inner wheel washer and outer wheel washer where they contact the wheel.

WARNING:

If inner wheel washer has been removed, replace it before placing wheel on spindle. Failure to do so could cause an accident since wheel will not tighten properly.

- Fit the cutting wheel inside the guard and onto the spindle.
- Replace the outer wheel washer.
- Depress and hold the spindle lock button, then replace the wheel screw. Tighten the wheel screw securely by turning it clockwise.
- Adjust the shoe assembly up or down to set the depth of cut. Tighten clamp screw to secure in place.
- Return the 4 mm hex key to the storage area.

NOTE: Never use a wheel that is too thick to allow the outer wheel washer to engage with the flats on the spindle.

The wheels provided with this saw have arrows near the center hole indicating the direction the wheels should rotate when the saw is in use. Before operating the saw, make sure the direction of rotation selector is in the appropriate position, by referring to the **Direction of Rotation Selector** section later in this manual. Wheels with bidirectional arrows () can be operated in forward or reverse.

WARNING:

Always operate the tool in the correct rotation direction for the wheel selected.

WARNING:

Always check that the spindle lock button is fully released before switching on the tool.

REMOVING CUTTING WHEEL

See Figure 2, page 13.

- Remove the battery pack from the saw.
- Remove the 4 mm hex key from the storage area.
- Loosen the clamp screw on the back of the wheel guard and slide the shoe assembly to its lowest position.
- Position the saw as shown, depress the spindle lock button, and remove the wheel screw by turning it counterclockwise.
- Remove the outer wheel washer.
- Remove the wheel.

OPERATION

WARNING:

Do not allow familiarity with this product to make you careless. Remember that a careless fraction of a second is sufficient to inflict serious injury.

WARNING:

Always wear eye protection with side shields marked to comply with ANSI Z87.1 along with hearing protection, dust mask (in dusty conditions) and where necessary a full face shield. Failure to do so could result in objects being thrown into your eyes and other possible serious injuries.

WARNING:

Do not use any attachments or accessories not recommended by the manufacturer of this product. The use of attachments or accessories not recommended can result in serious personal injury.

APPLICATIONS

You may use this product for the purpose listed below:

- Cutting drywall, plastic, tile, ceramics, steel, stainless steel, fiber cement, and non-ferrous materials

NOTE: Applications for this tool require different types of cutting wheels. Be sure to use the right cutting wheel for the job you are attempting.

INSTALLING/REMOVING BATTERY PACK

See Figure 3, page 14.

To install:

- Insert the battery pack.
- Make sure the latches on each side of the battery pack snap in place and that battery pack is secured in the product before beginning operation.

To remove:

- Depress the latches on each side of the battery pack.

For complete charging instructions, see the operator's manuals for your battery pack and charger.

OVERLOAD PROTECTION

When the tool is forced or the motor is overloaded, the tool will automatically shut off. To reset the tool, release the trigger and resume operation. If the tool still does not resume operation, remove and reinsert the battery. Do not force the tool.

VARIABLE SPEED SWITCH TRIGGER

See Figure 4, page 14.

WARNING:

Always check that the spindle lock button is fully released before switching on the tool.

The variable speed switch trigger delivers higher speed with increased trigger pressure and lower speed with decreased trigger pressure.

To turn the saw **ON**, depress the switch trigger. To turn it **OFF**, release the switch trigger and allow the wheel to come to a complete stop.

NOTE: A whistling or ringing noise coming from the switch during use is a normal part of the switch function.

NOTE: Running at low speeds under constant usage may cause the saw to become overheated. If this occurs, cool the saw by running it without a load and at full speed.

NOTICE:

Never cover air vents when the tool is in use. They must always be open for proper motor cooling.

DIRECTION OF ROTATION SELECTOR (FORWARD/REVERSE/CENTER LOCK)

See Figures 4 and 5, page 14.

Set the direction of rotation selector in the **OFF** (center lock) position to lock the switch trigger and help prevent accidental starting when not in use.

Position the direction of rotation selector to the left of the switch trigger for forward wheel rotation. Position the selector to the right of the switch trigger to reverse the direction.

NOTE: The saw will not run unless the direction of rotation selector is pushed fully to the left or right.

NOTICE:

To prevent damage, always allow the wheel to come to a complete stop before changing the direction of rotation.

WARNING:

Battery tools are always in operating condition. Lock the switch when not in use or carrying at your side, when installing or removing the battery pack, and when installing or removing wheels.

OPERATION

LED LIGHT

See Figure 5, page 14.

The LED light, located at the base of the tool, illuminates when the switch trigger is depressed.

If the tool is not in use, the time-out feature will cause the light to start fading and then shut off.

The LED light illuminates only when there is a charged battery pack in the tool.

POSITIONING THE GUARD

See Figure 6, page 14.

The guard on the saw should be correctly positioned to provide maximum control and protection. Never use the saw without the guard correctly in place.

To reposition the guard:

- Remove the battery pack.
- Get a firm grasp of the guard with one hand and hold the overmolded handle with the other.
- Rotate the guard until it snaps securely into one of the four fixed positions.

KICKBACK

See Figures 7 - 8, page 14.

Kickback occurs when the wheel stalls rapidly and the saw is driven back towards you. Wheel stalling is caused by any action which pinches the wheel in the material.



DANGER:

Release switch immediately if wheel binds or saw stalls. Kickback could cause you to lose control of the saw. Loss of control can lead to serious personal injury.

To guard against kickback, avoid dangerous practices such as the following:

- Twisting the cutting wheel while making a cut.
- Making a cut with a dull, gummed up, or improperly set cutting wheel.
- Forcing a cut.
- Operating the tool incorrectly or misusing the tool.

To lessen the chance of kickback, follow these safety practices:

- When appropriate, adjust the shoe assembly up or down to set the depth of cut. The shoe assembly should be positioned so that very little of the cutting wheel is visible below the workpiece. The more wheel is exposed, the more likely the saw is to bind and kickback.
- Make straight cuts. Always use the shoe assembly or a straight edge guide when rip cutting. This helps prevent twisting the wheel.
- Use clean and sharp cutting wheels. Never make cuts with dull wheels.
- Support and clamp the workpiece properly before beginning a cut.
- Use steady, even pressure when making a cut. Never force a cut.
- Always let the cutting wheel reach full speed before beginning a cut.
- Hold the saw firmly and keep your body in a balanced position so as to resist the forces if kickback should occur.



WARNING:

When using the saw, always stay alert and exercise control. Do not remove the saw from the workpiece while the cutting wheel is moving.

OPERATING THE SAW

See Figures 9 - 11, page 14.



DANGER:

Never use the saw with the guard removed. It has been designed for use only with the guard installed. Attempting to use saw with guard removed will result in loose particles being thrown against the operator resulting in serious personal injury.



WARNING:

To make cutting easier and safer, always maintain proper control of the saw. Loss of control could cause an accident resulting in possible serious injury.

OPERATION



WARNING:

When lifting the saw from the workpiece, the wheel is exposed on the underside of the saw.

- Remove the battery pack.
- Install the appropriate cutting wheel and rotate the wheel guard to the desired position.
- Adjust the shoe assembly up or down to set the depth of cut or remove it completely if needed.
- Secure the workpiece to a work bench or table with a vise or with clamps.
- Mark the line of cut clearly.
- Install the battery pack.
- Check the direction of rotation on the wheel and select the correct setting (forward or reverse) on the tool.
- Hold the saw firmly in front of and clearly away from you, keeping the cutting wheel clear of the workpiece.
- Depress the switch trigger and let the cutting wheel reach full speed.



WARNING:

The wheel coming in contact with the workpiece before it reaches full speed could cause saw to “kickback” toward you resulting in serious injury.

- Move the wheel through the workpiece.
NOTE: Do not force. Use only enough pressure to keep the saw cutting. Let the wheel and saw do the work.
- Continue to use steady and even pressure to obtain a uniform cut through the material. Never force the wheel into the material being cut.
- When the cut is complete, release the switch trigger and allow the wheel to stop rotating before raising the wheel out of material.

CUTTING TILES

Always draw the line to be cut on the tile using a marker or grease pencil. If the tile is shiny and hard-to-mark, place masking tape on the tile and mark the tape.

A common problem when cutting tile is straying from the marked line. Once you’ve strayed from the mark, you can not force the wheel back to the line by twisting the tile. Instead, back up and recut the tile slicing off a small amount of tile until the wheel is back on track.

CUTTING PLASTICS

Heat generated from the cutting wheel can melt plastic. Follow these steps to reduce the risk of overheating the cutting wheel:

- Cut slowly and do not force the wheel into the material. Maintain a speed and pressure which allows cutting without overheating the wheel.
- Take frequent breaks when cutting plastic materials and allow the cutting wheel to cool.

CUTTING METALS

With a metal cutting wheel installed, you may cut metals such as sheet steel, pipe, steel rods, aluminum, brass, and copper.

Use caution when cutting metals and observe the following to avoid potential hazards:

- Adjust the position of the wheel guard to provide maximum protection from sparks and loose particles thrown from the cutting wheel.
- Material will get hot during cutting operation. Keep hands off of metal being cut to avoid serious personal injury.
- Do not touch the cut material until it cools or you can be burned.

MAINTENANCE

WARNING:

When servicing, use only identical replacement parts. Use of any other part could create a hazard or cause product damage.

WARNING:

Always wear eye protection with side shields marked to comply with ANSI Z87.1 along with hearing protection and where necessary a full face shield. Failure to do so could result in objects being thrown into your eyes and other possible serious injuries.

WARNING:

To avoid serious personal injury, always remove the battery pack from the tool when cleaning, performing any maintenance, or when storing the tool.

GENERAL MAINTENANCE

Avoid using solvents when cleaning plastic parts. Most plastics are susceptible to damage from various types of commercial solvents and can be damaged by their use. Use clean cloths to remove dirt, dust, oil, grease, etc.

WARNING:

Do not at any time let brake fluids, gasoline, petroleum-based products, penetrating oils, etc., come in contact with plastic parts. Chemicals can damage, weaken or destroy plastic which could result in serious personal injury.

CLEANING THE FILTER

See Figure 12, page 14.

A filter is located at the back of the tool. It is designed to keep dirt, shavings, and other debris from entering the tool through the air intake. Over time the filter can become dirty and clogged.

To clean the filter:

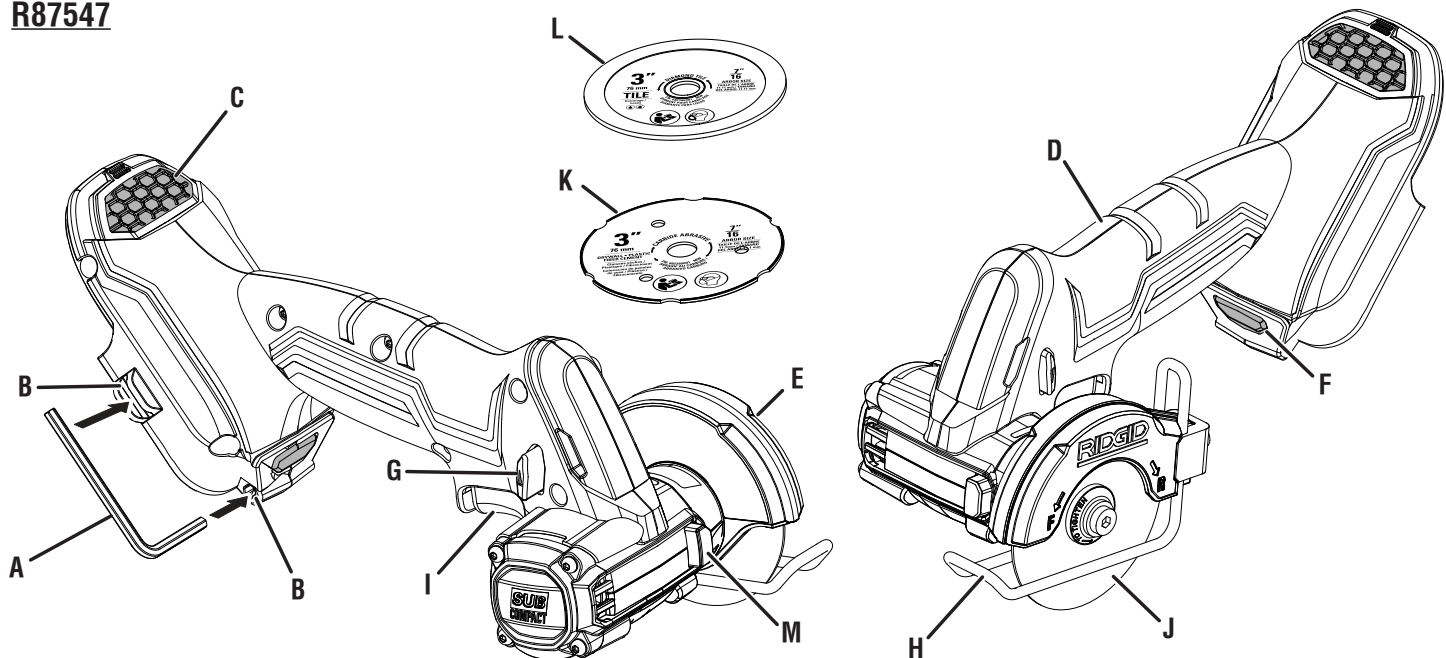
- Remove the battery pack.
- Lift the filter up and pull it away from the tool.
- Use a soft bristle brush to loosen and remove dirt and debris.
- Replace the filter and lower it back into place.

NOTE: There are vents in several locations around the tool. These vents should be cleaned periodically and each time the filter is cleaned.

NOTE: ILLUSTRATIONS START ON PAGE 13 AFTER FRENCH AND SPANISH LANGUAGE SECTIONS.

**This product has a 90-Day Satisfaction Guarantee Policy,
as well as a Three-year Limited Warranty. For Warranty and Policy details,
please go to www.RIDGID.com or call (toll free) 1-866-539-1710.**

[illegible]




- A - 4 mm hex key (clé hexagonale de 4 mm, llave hexagonal de 4 mm)
- B - Hex key wrench storage (compartiment de rangement de clé hexagonale, lugar de guardar la llave hexagonal)
- C - Filter (filtre, filtro)
- D - Handle (poignée, mango)
- E - Wheel guard (protège-meule, protección de la muela)
- F - LED light (lampe DÉL, diodo luminiscente)

- G - Direction of rotation selector (forward/reverse/center lock) [sélecteur de sens de rotation (sélecteur de sens de rotation / verrouillage central), selector de sentido de rotación (adelante, atrás, seguro en el centro)]
- H - Adjustable shoe assembly (assemblage du patin ajustable, conjunto de zapata ajustable)
- I - Switch trigger (gâchette de commutateur, gatillo del interruptor)


- J - Metal cutting wheel (meule à tronçonner pour métal, disco para cortar metal)
- K - Abrasive cutting wheel (meule à tronçonner abrasive, disco de corte abrasivo)
- L - Tile cutting wheel (meule à tronçonner pour carrelage, disco para cortar losas)
- M - Spindle lock (verrouillage de broche, seguro del husillo)

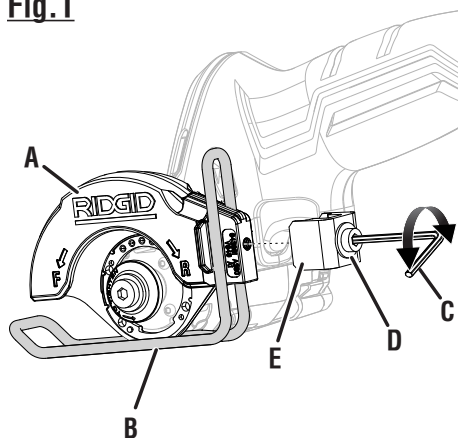Fig.1




- A - Wheel guard (protège-meule, protección de la muela)
- B - Shoe (patin, zapata)
- C - 4 mm hex key (clé hexagonale de 4 mm, llave hexagonal de 4 mm)
- D - Clamp screw (vis de serrage, tornillo de fijación)
- E - Clamp (bride, prensa)

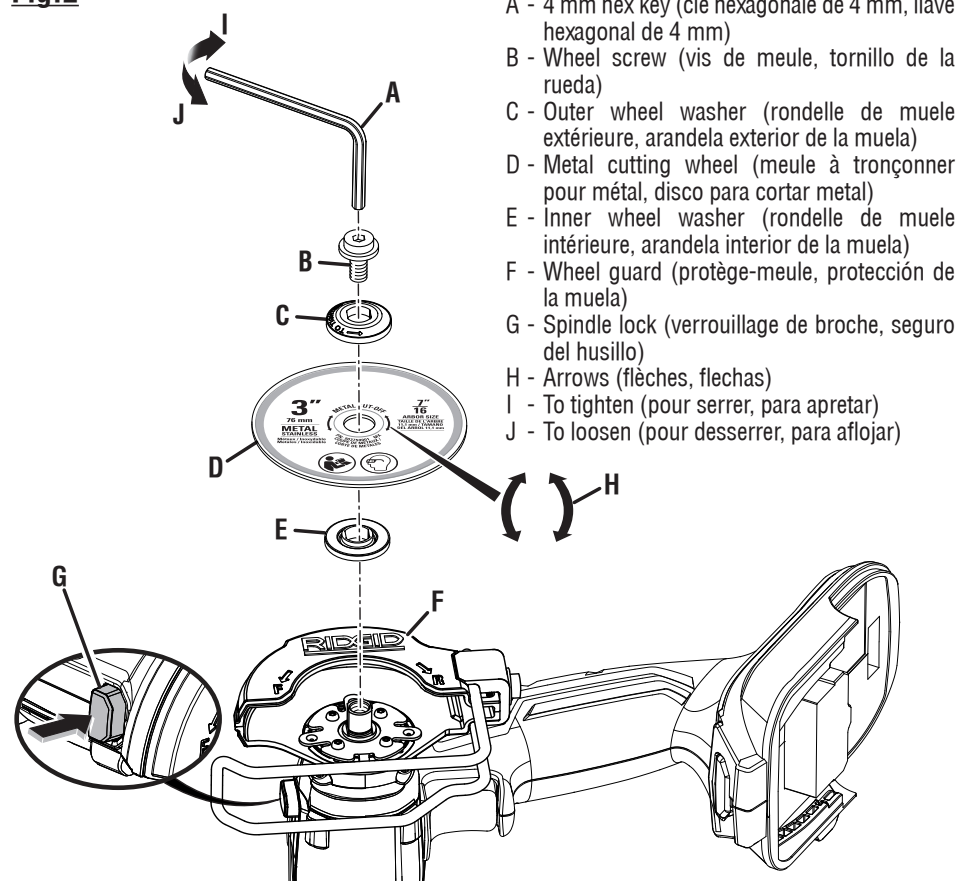
Fig.2



- A - 4 mm hex key (clé hexagonale de 4 mm, llave hexagonal de 4 mm)
- B - Wheel screw (vis de meule, tornillo de la rueda)
- C - Outer wheel washer (rondelle de meule extérieure, arandela exterior de la muela)
- D - Metal cutting wheel (meule à tronçonner pour métal, disco para cortar metal)
- E - Inner wheel washer (rondelle de meule intérieure, arandela interior de la muela)
- F - Wheel guard (protège-meule, protección de la muela)
- G - Spindle lock (verrouillage de broche, seguro del husillo)
- H - Arrows (flèches, flechas)
- I - To tighten (pour serrer, para apretar)
- J - To loosen (pour desserrer, para aflojar)

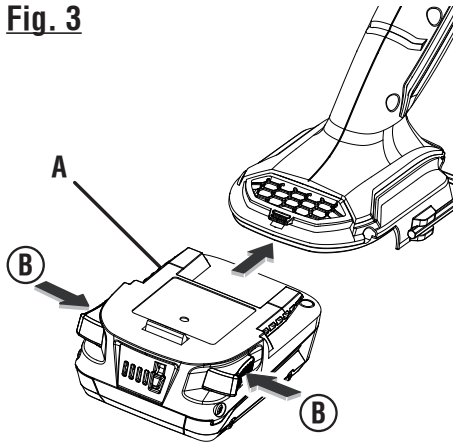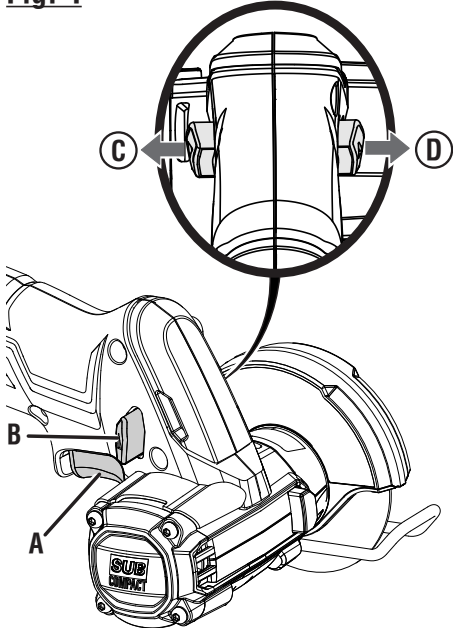Fig. 3

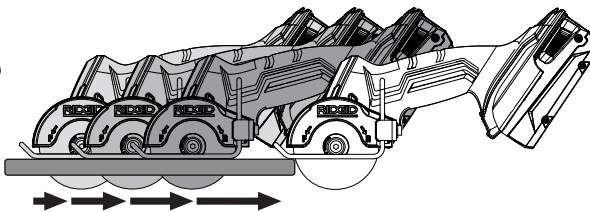
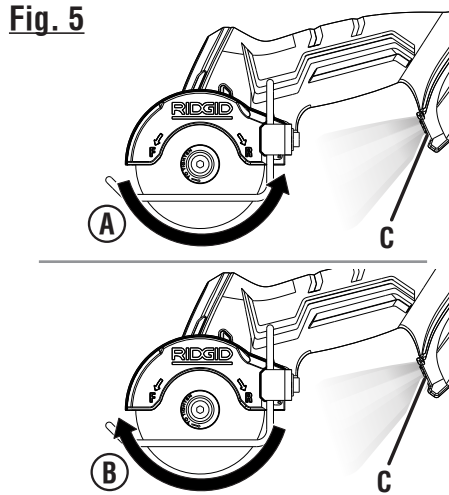
- A - Battery pack (bloc-pile, paquete de baterías)
 B - Depress latches to release battery pack (appuyer sur le loquet pour libérer le bloc-pile, para soltar el paquete de baterías oprima el pestillo)

Fig. 4

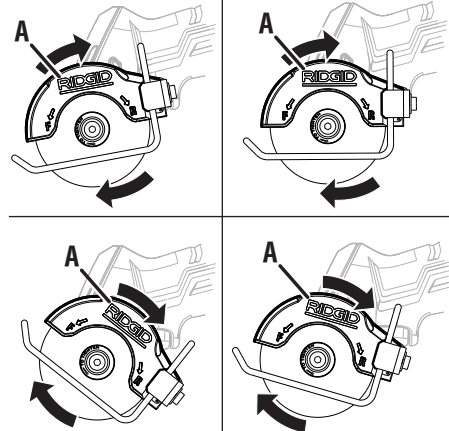
- A - Switch trigger (gâchette de commutateur, gatillo del interruptor)
 B - Direction of rotation selector (forward/reverse/center lock) [sélecteur de sens de rotation (sélecteur de sens de rotation / verrouillage central), selector de sentido de rotación (adelante, atrás, seguro en el centro)]
 C - Forward (avant, atrás)
 D - Reverse (arrière, adelante)

Fig. 8

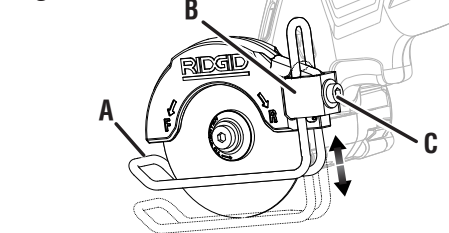
**KICKBACK - WHEEL SET TOO DEEP IN REVERSE DIRECTION
 (RECU - MEULE RÉGLÉE TROP PROFONDÉMENT EN MARCHÉ
 ARRIÈRE ; CONTRAGOLPE:
 DISCO COLOCADO DE
 MANERA MUY PROFUNDA EN
 DIRECCIÓN REVERSA)**

**Fig. 5**

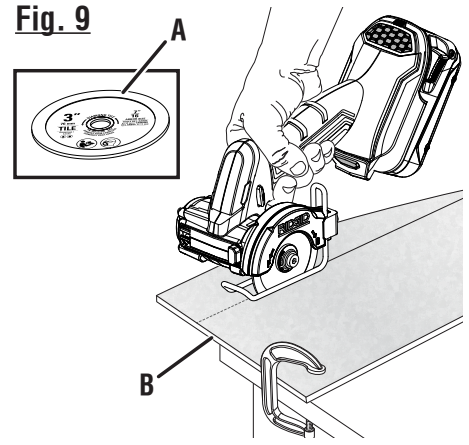
- A - Forward (avant, atrás)
 B - Reverse (arrière, adelante)
 C - LED light (lampe DEL, diodo luminiscente)

Fig. 6

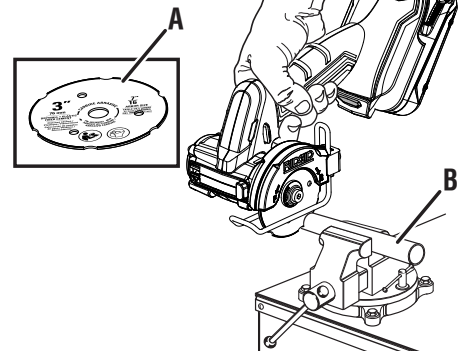
- A - Wheel guard (protège-meule, protección de la muela)

Fig. 7

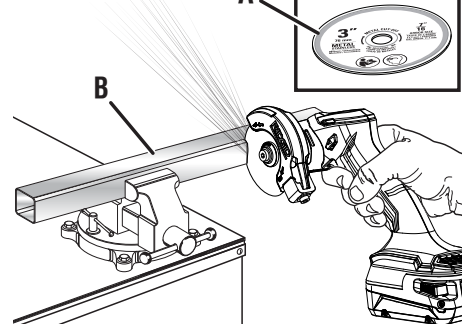
- A - Adjustable shoe assembly (assemblage du patin ajustable, conjunto de zapata ajustable)
 B - Clamp (bride, prensa)
 C - Clamp screw (vis de serrage, tornillo de fijación)

Fig. 9

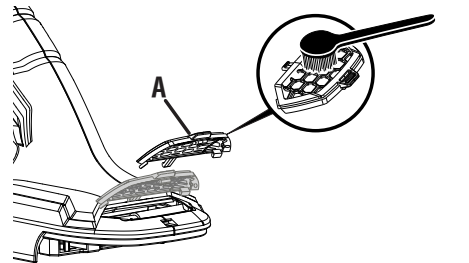
- A - Tile cutting wheel (meule à tronçonner pour carrelage, disco para cortar losas)
 B - Tile (long) [carreau (long), losa (larga)]

Fig. 10

- A - Abrasive cutting wheel (meule à tronçonner abrasive, disco de corte abrasivo)
 B - Plastic pipe (tuyau en plastique, tubo de plástico)

Fig. 11

- A - Metal cutting wheel (meule à tronçonner pour métal, disco para cortar metal)
 B - Metal bar (barre métallique, barra de metal)


Fig. 12

- A - Filter (filtre, filtro)

OPERATOR'S MANUAL

18 VOLT 3 in. BRUSHLESS MULTI-MATERIAL SAW

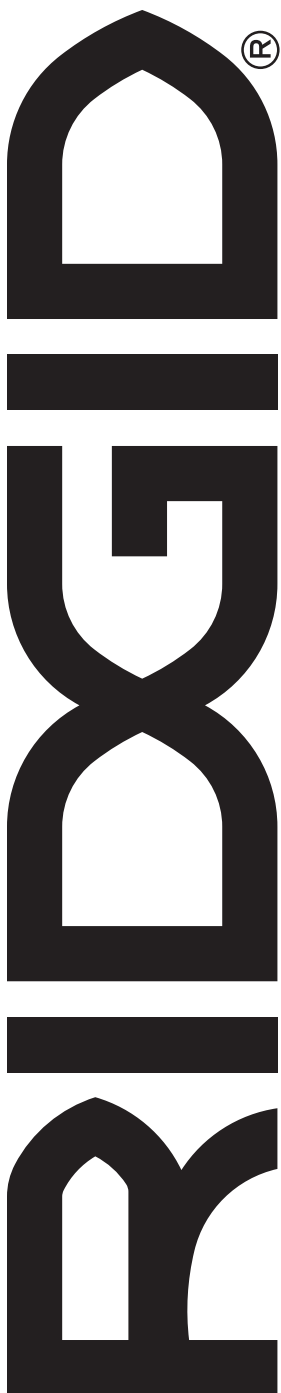R87547



Customer Service Information:

For parts or service, do not return this product to the store. Contact your nearest RIDGID® authorized service center. Be sure to provide all relevant information when you call or visit. For the location of the authorized service center nearest you, please call 1-866-539-1710 or visit us online at www.RIDGID.com.

MODEL NO.* _____ SERIAL NO. _____

**Model number on product may have additional letters at the end. These letters designate manufacturing information and should be provided when calling for service.*

ONE WORLD TECHNOLOGIES, INC.

P.O. Box 1427
Anderson, SC 29622 USA
1-866-539-1710 ■ www.RIDGID.com

RIDGID is a registered trademark of RIDGID, Inc., used under license.

998000131
1-22-20 (REV:04)