Syringenator

Generated by Doxygen 1.8.16

1 README		2
1.1 Development Team Vulcan	 	2
1.2 Project Pages	 	2
1.3 Communication	 	2
1.3.1 Don't Clobber Other People's Work	 	2
1.3.2 Comment Your Work	 	2
1.4 Using Git	 	3
1.4.1 Work in Your Own Branch	 	3
1.4.2 Commit Your Work	 	3
1.4.3 Merge All the Latest Changes	 	4
1.4.4 Push Your Branch	 	4
1.4.5 Make a Pull Request	 	4
1.4.6 What not to do	 	4
2 Calibration		4
2.1 Coordinate Systems	 	4
2.1.1 Image Cartesian	 	5
2.1.2 Floor Cartesian	 	5
2.1.3 Arm Cylindrical	 	5
3 Installations		5
3.1 librealsense	 	5
3.1.1 Downloads	 	5
3.1.2 Kernel source patching	 	6
3.1.3 Kernel Configuration	 	6
3.1.4 Build librealsense	 	6
3.2 OpenCV	 	7
3.2.1 Dependencies	 	7
3.2.2 Python Virtual Environment	 	8
3.2.3 cmake	 	8
4 NN		11
5 Todo List		11
6 Module Index		11
6.1 Modules	 	11
7 Namespace Index		11
7.1 Namespace List	 	11
8 Class Index		12

8.1 Class List	. 12
9 File Index	12
9.1 File List	. 12
10 Module Documentation	13
10.1 pyimagesearch Code	. 13
10.1.1 Detailed Description	. 13
10.1.2 Function Documentation	. 13
11 Namespace Documentation	14
11.1 Syringenator Namespace Reference	. 14
11.1.1 Detailed Description	. 16
11.1.2 Function Documentation	. 16
11.1.3 Variable Documentation	. 20
12 Class Documentation	21
12.1 Syringenator.Camera Class Reference	. 21
12.1.1 Detailed Description	. 21
12.2 Syringenator.Log Class Reference	. 22
12.2.1 Detailed Description	. 22
12.2.2 Member Function Documentation	. 22
12.3 Syringenator.NeuralNet Class Reference	. 22
12.3.1 Detailed Description	. 23
12.4 roboMove Struct Reference	. 23
12.5 Syringenator.Target Class Reference	. 23
12.5.1 Detailed Description	. 24
12.5.2 Member Function Documentation	. 24
13 File Documentation	25
13.1 src/Arduino/libraries/constants/constants.h File Reference	. 25
13.1.1 Detailed Description	. 27
13.2 src/Arduino/libraries/Syringenator/Syringenator.hpp File Reference	. 28
13.2.1 Detailed Description	. 29
13.2.2 Function Documentation	. 29
13.3 src/pi/constants.py File Reference	. 32
13.3.1 Detailed Description	. 34
13.4 src/pi/Syringenator.py File Reference	. 34
13.4.1 Detailed Description	. 37
Index	39

## 1 README

University of Washington

Winter 2019

Syringe Robot

## 1.1 Development Team Vulcan

**Authors** 

Name	Email
Alex Boyle	boylea4@uw.edu
Ammon Dodson	ammon0@uw.edu
Alex Marlow	alexmarlow117@gmail.com
Jake McKenzie	jake314@uw.edu
Brooke Stevenson	brooks04@uw.edu

### Copyright

Copyright © 2019 by the authors. All rights reserved.

## 1.2 Project Pages

- · The Github Repo
- · Documentation Website

## 1.3 Communication

## 1.3.1 Don't Clobber Other People's Work

Since we're all working in the same space it is important to be courteous. Pretty much this comes down to not overwriting other people's work. If there is some real need to change something that already exists there should be a discussion between everyone involved.

#### 1.3.2 Comment Your Work

Not everything will be obvious to everyone else. Write a paragraph for every non-trivial function. Write a detailed explanation any time you want to get clever with the code. Always put your name or initials on larger comments and blocks of code that you have written. That way it's easy to know who to talk to if there are questions.

1.4 Using Git 3

## 1.4 Using Git

Git is a command-line tool for managing source code. Github is an on-line service that provides git remotes. A git remote is a remote copy of a git repository. Multiple people work in the same repository through the use of a single remote. The trick is to manage version conflicts intelligently.

Each team member should periodically merge master into their own branch to ensure that we are synced up. The master branch should only ever have merge commits and working code. I will try to enforce this with Github so that we don't make a mess. –ABD

#### 1.4.1 Work in Your Own Branch

Each team member should create their own branch to work in. You may make as many branches as you like, just make sure you have one. You can create branches on the command line with:

```
$ git branch <branch-name>
```

#### To switch to your branch do:

\$ git checkout <branch-name>

#### 1.4.2 Commit Your Work

Commits are a permanent record of your work. They should be as small and purpose-driven as possible. Think: "can I write a couple lines that explains what I did?" To check for uncommitted changes, or check your status in general do:

```
$ git status
On branch ammon
Your branch is up-to-date with 'github/ammon'. <- this is the remote
Changes not staged for commit:
  (use "git add/rm <file>..." to update what will be committed)
  (use "git checkout - <file>..." to discard changes in working directory)
  modified: README.md
Untracked files:
  (use "git add <file>..." to include in what will be committed)
  docs/autotoc_md6.html
  latex/autotoc_md6.tex
no changes added to commit (use "git add" and/or "git commit -a")
```

You make a commit in two steps: first you stage the changed files that you want to include in this next commit. \$ git add <filename> <anotherfile>

Once you have staged a bunch of changes you can check your status again:

```
$ git status
On branch ammon
Your branch is up-to-date with 'github/ammon'.
Changes to be committed:
  (use "git reset HEAD <file>..." to unstage)
   modified: README.md
Changes not staged for commit:
  (use "git add/rm <file>..." to update what will be committed)
  (use "git checkout - <file>..." to discard changes in working directory)
   modified:
               Makefile
   deleted:
               refman.pdf
Untracked files:
  (use "git add <file>..." to include in what will be committed)
   docs/autotoc md7.html
   latex/autotoc md7.tex
```

Once you are satisfied with what is currently staged you finish the commit by doing:

```
$ git commit
```

Git will automatically open a text editor where you can describe what the changes are. Make this a meaningful message since it will be the only thing that distinguishes this commit from hundreds of others.

```
You can also do:
```

(-m is shorthand for -messages command which tells other collaborators (and your future self) the nature of the change you just made. -Jake

### 1.4.3 Merge All the Latest Changes

The magic of git is being able to merge conflicting changes. Before you share your changes (pushing), you must pull the latest changes and merge them with yours. First pull the master branch:

\$ git pull origin master

You will need to enter your password and git will tell you if there have been any changes. Git will attempt to merge the master branch into yours. If there are any conflicts it will tell you. Git will rewrite your files to include both versions of the conflicting code. To see which files are in conflict do:

\$ git status

You have to open those files, find, and fix the conflicting versions. Once you think you are done, rebuild and test all the code. Look for any new errors and fix them. Once you are satisfied that the merge has been completed successfully add and commit your changes as usual.

#### 1.4.4 Push Your Branch

Pushing your work to the remote allows everyone else to see it. You should merge master before pushing. To push do: \$ git push origin <your-branch>

#### 1.4.5 Make a Pull Request

The master branch is where we integrate all the changes everyone is making. This is done through "pull requests". A pull request is a way for everyone to see and comment on new code. It will also allow us to only make merge commits to the master branch. If we work this way the master branch will always be clean and there will be less errors, lost work, and wasted time.

### 1.4.6 What not to do

- **Don't commit directly to master**. I've tried to setup Github to make this difficult or impossible, but in any case that it isn't protected properly nobody should be trying this anyway.
- **Don't –force** Read your error messages, they are usually very helpful. The force tag overwrites history and can easily erase work already done. If git complains there is a reason for it.

## 2 Calibration

### 2.1 Coordinate Systems

This robot, of necessity uses multiple sets of coordinates.

3 Installations 5

### 2.1.1 Image Cartesian

This coordinate system is used to locate pixels and distance measurements in the images generated from the camera. It consists of a positive integer tuple horizontal and vertical. Its axes are at right angles, and its origin is in the upper left corner of the image. Its values are always positive and its units are pixels.

We may also consider the camera's depth value as the third member of the image coordinates. Its units should be meters.

#### 2.1.2 Floor Cartesian

This coordinate system is used to locate targets around the robot. It consists of a signed integer tuple fore-aft and port-starboard. Positive values are forward and starboard. Its axes are at right angles and its origin is at the front edge of the robot. Its units of length are millimeters.

#### 2.1.3 Arm Cylindrical

This coordinate system is used to locate targets around the xArm. It consists of an unsigned integer tuple azimuth and range. Its origin is at the level of the floor and directly below the xArm axis of rotation. Its units are those convenient for the use of the arm, and its range of values is recorded in constants.in

## 3 Installations

#### 3.1 librealsense

from github

### 3.1.1 Downloads

#### Update the system

sudo apt update

#### get the kernel headers so that we can compile new things

sudo apt install raspberrypi-kernel-headers

make sure that raspberrypi-kernel and raspberrypi-bootloader are at the latest versions

### install git and other build tools

sudo apt install git build-essential -y

#### get the latest librealsense

git clone -depth 1 https://github.com/IntelRealSense/librealsense.git

#### Install Intel Realsense permission scripts located in librealsense source directory:

sudo cp config/99-realsense-libusb.rules /etc/udev/rules.d/
sudo udevadm control -reload-rules && udevadm trigger

#### get the source for the current kernel make sure version numbers match apt-cache

wget https://github.com/raspberrypi/linux/archive/raspberrypi-kernel\_1.20161215-1.tar.gz

#### extract it

tar -xzf raspberrypi-kernel\_1.20161215-1.tar.gz

### 3.1.2 Kernel source patching

```
LINUX_BRANCH=$(uname -r)
# Construct branch name from distribution codename {xenial,bionic,..} and kernel version
ubuntu_codename='. /etc/os-release; echo ${UBUNTU_CODENAME/*, /}'
if [ -z "${ubuntu_codename}" ];
then
    # Trusty Tahr shall use xenial code base
    ubuntu_codename="xenial"
    retpoline_retrofit=1
fi
kernel_branch=$(choose_kernel_branch ${LINUX_BRANCH}) ${ubuntu_codename})
kernel_name="ubuntu-${ubuntu_codename}-$kernel_branch"'
```

#### 3.1.3 Kernel Configuration

## Load the kernel configuration module

```
sudo modprobe configs
```

### get a copy of the current kernel configuration

```
cp /proc/config.gz ./
```

### decompress it

```
gunzip config.gz
```

## put the configuration in the source tree

```
mv config linux-raspberrypi-kernel_1.20161215-1/.config
```

### In the kernel directory update the config

```
make silentoldconfig
```

## 3.1.4 Build librealsense

```
mkdir build && cd build
```

The default build is set to produce the core shared object and unit-tests binaries in Debug mode.  $_{\tt cmake}$  .../

- -DCMAKE\_BUILD\_TYPE=Release to build with optimizations.
- -DBUILD\_EXAMPLES=true Builds librealsense along with the demos and tutorials
- -DBUILD GRAPHICAL EXAMPLES=false For systems without OpenGL or X11 build only textual examples

3.2 OpenCV 7

#### Command used:

#### cmake returns:

- Info: REALSENSE\_VERSION\_STRING=2.18.0
- Setting Unix configurations
- Checking internet connection...
- Internet connection identified, enabling BUILD\_WITH\_TM2
- Found PythonInterp: /home/big/Desktop/Syringenator/pyVirtEnv/syringenator/bin/python (found version "2.7.12")
- Found PythonLibs: /usr/lib/arm-linux-gnueabihf/libpython2.7.so
- pybind11 v2.2.1
- Performing Test HAS\_FLTO
- Performing Test HAS\_FLTO Success
- LTO enabled
- Could NOT find Vulkan (missing: VULKAN\_LIBRARY VULKAN\_INCLUDE\_DIR)
- Using X11 for window creation
- Building with TM2
- \_ -----
- T265 Product versions:
- - HOST 0.19.3.1505 (Default from versions.cmake)
- - Remote FW 0.0.18.4577 (Default from versions.cmake)
- - Remote CENTRAL APP 2.0.19.271 (Default from versions.cmake)
- - Remote CENTRAL BL 1.0.1.112 (Default from versions.cmake)
- Downloading FW 0.0.18.4577 from
  - 'http://realsense-hw-public.s3.amazonaws.com/Releases/TM2/FW/target/0.0.18.4577/target-0.0.18.4577.mvcmd'
- Converting FW version 0.0.18.4577 from target.mvcmd to
- /home/big/Desktop/librealsense/third-party/libtm/libtm/src/fw.h Downloading Central App 2.0.19.271 from
- 'http://realsense-hw-public.s3.amazonaws.com/Releases/TM2/FW/app/2.0.19.271/central\_app-2.0.19.271.bin'
- Converting Central App version 2.0.19.271 from central\_app.bin to
- /home/big/Desktop/librealsense/third-party/libtm/libtm/src/CentralAppFw.h
- Downloading Central BL 1.0.1.112 from
  - 'http://realsense-hw-public.s3.amazonaws.com/Releases/TM2/FW/b1/1.0.1.112/central\_b1-1.0.1.112.bin'
- Converting Central BL version 1.0.1.112 from central\_bl.bin to
  - /home/big/Desktop/librealsense/third-party/libtm/libtm/src/CentralBlFw.h
- Building libtm project on , LIBTM version [0.19.3.1505], API version [10.0], branch [master], FW [0.0.18.4577], Central APP [2.0.19.271], Central BL [1.0.1.112]
- Creating version file /home/big/Desktop/librealsense/third-party/libtm/libtm/src/Version.h
- Building project tm as STATIC library lib
- Bulluting project cit as starte tibrary rib
- Building all projects of libtm\_samples
- Building project libtm\_util
- CMake Done
- Configuring done
- Generating done
- Build files have been written to: /home/big/Desktop/librealsense/build

#### Recompile and install librealsense binaries:

sudo make uninstall && make clean && make && sudo make install

## 3.2 OpenCV

We used this tutorial with some modifications.

#### 3.2.1 Dependencies

#### The tutorial's atlas installation is insufficient resulting in:

- Could NOT find Atlas (missing: Atlas\_CLAPACK\_INCLUDE\_DIR)

### Refering to issue #10442 I did:

sudo apt install liblapacke-dev

### 3.2.2 Python Virtual Environment

I wanted to include the python virtual environment in the git repo so that it can be used by anyone. I am not sure if this is the prefered way to share virtual environments. We also won't lose it if the pi has to be rebuilt. so the .bashrc script reads:

```
export WORKON_HOME=$HOME/Desktop/Syringenator/src/pi/pyVirtEnv
source /usr/local/bin/virtualenvwrapper.sh
```

#### 3.2.3 cmake

the cmake step then needs to be modified to acommodate:

```
cmake -D CMAKE_BUILD_TYPE=RELEASE \
    -D CMAKE_INSTALL_PREFIX=/usr/local \
    -D INSTALL_PYTHON_EXAMPLES=ON \
    -D INSTALL C EXAMPLES=OFF \
    -D OPENCV_EXTRA_MODULES_PATH= /Desktop/opencv_contrib-4.0.1/modules \
    -D PYTHON_EXECUTABLE= /Desktop/Syringenator/pyVirtEnv/syringenator/bin/python \
    -D BUILD EXAMPLES=ON \
    -D WITH_OPENMP=ON ..
cmake reports:
- Looking for ccache - not found
- FP16 is not supported by C++ compiler
- Found ZLIB: /usr/lib/arm-linux-gnueabihf/libz.so (found suitable version "1.2.8", minimum required is "1.2.3")
- Found ZLIB: /usr/lib/arm-linux-gnueabihf/libz.so (found version "1.2.8") - Checking for module 'gstreamer-base-1.0'
   No package 'gstreamer-base-1.0' found
- Checking for module 'gstreamer-video-1.0'
   No package 'gstreamer-video-1.0' found
- Checking for module 'gstreamer-app-1.0'
   No package 'gstreamer-app-1.0' found
- Checking for module 'gstreamer-riff-1.0'
   No package 'gstreamer-riff-1.0' found
- Checking for module 'gstreamer-pbutils-1.0'
   No package 'gstreamer-pbutils-1.0' found
- Checking for module 'gstreamer-base-0.10'
   No package 'gstreamer-base-0.10' found
- Checking for module 'gstreamer-video-0.10'
   No package 'gstreamer-video-0.10' found
- Checking for module 'gstreamer-app-0.10'
   No package 'gstreamer-app-0.10' found
- Checking for module 'gstreamer-riff-0.10'
   No package 'gstreamer-riff-0.10' found
- Checking for module 'gstreamer-pbutils-0.10'
   No package 'gstreamer-pbutils-0.10' found
- Checking for module 'libdc1394-2'
   No package 'libdc1394-2' found
- Checking for module 'libdc1394'
   No package 'libdc1394' found
- Looking for linux/videodev2.h
- Looking for linux/videodev2.h - found
- Looking for sys/videoio.h
- Looking for sys/videoio.h - not found
- Checking for module 'libavresample'
   No package 'libavresample' found
- LAPACK(Atlas): LAPACK_LIBRARIES: /usr/lib/liblapack.so;/usr/lib/libcblas.so;/usr/lib/libatlas.so
- LAPACK(Atlas): Support is enabled.
- Could NOT find JNI (missing: JAVA_INCLUDE_PATH JAVA_INCLUDE_PATH2 JAVA_AWT_INCLUDE_PATH)
- Could NOT find Pylint (missing: PYLINT_EXECUTABLE)
- Could NOT find Flake8 (missing: FLAKE8_EXECUTABLE)
- VTK is not found. Please set -DVTK_DIR in CMake to VTK build directory, or to VTK install subdirectory with
       VTKConfig.cmake file
- OpenCV Python: during development append to PYTHONPATH: /home/big/Desktop/opencv-4.0.1/build/python_loader
- Caffe:
           NO
- Protobuf: NO
- Gloa: NO
- freetype2:
               YES
- harfbuzz:
               YES
- Could NOT find HDF5 (missing: HDF5 LIBRARIES HDF5 INCLUDE DIRS) (found version "")
- Module opencv_ovis disabled because OGRE3D was not found
- No preference for use of exported gflags CMake configuration set, and no hints for include/library directories
       provided. Defaulting to preferring an installed/exported gflags CMake configuration if available.
```

3.2 OpenCV 9

```
- Failed to find installed gflags CMake configuration, searching for gflags build directories exported with
       CMake.
- Failed to find gflags - Failed to find an installed/exported CMake configuration for gflags, will perform
       search for installed gflags components.
- Failed to find gflags - Could not find gflags include directory, set GFLAGS_INCLUDE_DIR to directory
       containing gflags/gflags.h
- Failed to find glog - Could not find glog include directory, set GLOG_INCLUDE_DIR to directory containing
       glog/logging.h
- Module opencv_sfm disabled because the following dependencies are not found: Eigen Glog/Gflags
- Excluding from source files list: <BUILD>/modules/core/test/test_intrin128.sse2.cpp
- Excluding from source files list: <BUILD>/modules/core/test/test_intrin128.sse3.cpp
- Excluding from source files list: <BUILD>/modules/core/test/test_intrin128.ssse3.cpp
- Excluding from source files list: <BUILD>/modules/core/test/test_intrin128.sse4_1.cpp
- Excluding from source files list: <BUILD>/modules/core/test/test_intrin128.sse4_2.cpp
- Excluding from source files list: <BUILD>/modules/core/test_intrin128.avx.cpp
- Excluding from source files list: <BUILD>/modules/core/test/test_intrin128.fp16.cpp
- Excluding from source files list: <BUILD>/modules/core/test/test_intrin128.avx2.cpp
- Excluding from source files list: <BUILD>/modules/core/test/test_intrin256.avx2.cpp
- Excluding from source files list: modules/imgproc/src/corner.avx.cpp
- Excluding from source files list: modules/imgproc/src/filter.avx2.cpp
- Excluding from source files list: modules/imgproc/src/imgwarp.avx2.cpp
- Excluding from source files list: modules/imgproc/src/imgwarp.sse4_1.cpp
- Excluding from source files list: modules/imgproc/src/resize.avx2.cpp
- Excluding from source files list: modules/imgproc/src/resize.sse4_1.cpp
- Excluding from source files list: <BUILD>/modules/dnn/layers/layers_common.avx.cpp
- Excluding from source files list: <BUILD>/modules/dnn/layers/layers_common.avx2.cpp
- Excluding from source files list: <BUILD>/modules/dnn/layers/layers_common.avx512_skx.cpp
- freetype2: YES
- harfbuzz: YES
- harfbuzz:
- Excluding from source files list: modules/features2d/src/fast.avx2.cpp
- Checking for modules 'tesseract; lept'
   No package 'tesseract' found
   No package 'lept' found
- Tesseract: NO
- Excluding from source files list: modules/calib3d/src/undistort.avx2.cpp
- OpenCL samples are skipped: OpenCL SDK is required
Version control:
                                   unknown
   Extra modules:
     Location (extra):
                                   /home/big/Desktop/opencv_contrib-4.0.1/modules
     Version control (extra):
                                  unknown
   Platform:
     Timestamp:
                                  2019-02-14T22:20:14Z
      Host:
                                   Linux 4.4.38-v7+ armv71
      CMake:
                                   3.13.3
     CMake generator:
                                  Unix Makefiles
     CMake build tool:
                                   /usr/bin/make
     Configuration:
                                   RELEASE
   CPU/HW features:
     Baseline:
       requested:
                                   DETECT
        disabled:
                                   VFPV3 NEON
      Built as dynamic libs?:
                                 YES
      C++ Compiler:
                                  /usr/bin/c++ (ver 5.5.0)
                                   -fsigned-char -W -Wall -Werror=return-type -Werror=non-virtual-dtor
      C++ flags (Release):
       -Werror=address -Werror=sequence-point -Wformat -Werror=format-security -Wmissing-declarations -Wundef
       -Winit-self -Wpointer-arith -Wshadow -Wsign-promo -Wuninitialized -Winit-self -Wno-narrowing
       -Wno-delete-non-virtual-dtor -Wno-comment -fdiagnostics-show-option -pthread -fomit-frame-pointer
       -ffunction-sections -fdata-sections -mfp16-format=ieee -fvisibility=hidden -fvisibility-inlines-hidden
       -fopenmp -O3 -DNDEBUG -DNDEBUG
      C++ flags (Debug):
                                  -fsigned-char -W -Wall -Werror=return-type -Werror=non-virtual-dtor
       -Werror=address -Werror=sequence-point -Wformat -Werror=format-security -Wmissing-declarations -Wundef
       -Winit-self -Wpointer-arith -Wshadow -Wsign-promo -Wuninitialized -Winit-self -Wno-narrowing -Wno-delete-non-virtual-dtor -Wno-comment -fdiagnostics-show-option -pthread -fomit-frame-pointer
       -ffunction-sections -fdata-sections -mfp16-format=ieee -fvisibility=hidden -fvisibility-inlines-hidden
       -fopenmp -g -OO -DDEBUG -D_DEBUG
      C Compiler:
                                  /usr/bin/cc
                                   -fsigned-char -W -Wall -Werror=return-type -Werror=non-virtual-dtor
      C flags (Release):
       -Werror=address -Werror=sequence-point -Wformat -Werror=format-security -Wmissing-declarations
       -Wmissing-prototypes -Wstrict-prototypes -Wundef -Winit-self -Wpointer-arith -Wshadow -Wuninitialized
       -Winit-self -Wno-narrowing -Wno-comment -fdiagnostics-show-option -pthread -fomit-frame-pointer
       -ffunction-sections -fdata-sections -mfp16-format=ieee -fvisibility=hidden -fopenmp -O3 -DNDEBUG
       -DNDEBUG
                                  -fsigned-char -W -Wall -Werror=return-type -Werror=non-virtual-dtor
      C flags (Debug):
       -Werror=address -Werror=sequence-point -Wformat -Werror=format-security -Wmissing-declarations
```

```
-Wmissing-prototypes -Wstrict-prototypes -Wundef -Winit-self -Wpointer-arith -Wshadow -Wuninitialized
   -Winit-self -Wno-narrowing -Wno-comment -fdiagnostics-show-option -pthread -fomit-frame-pointer
   -ffunction-sections -fdata-sections -mfp16-format=ieee -fvisibility=hidden -fopenmp -g -OO -DDEBUG
   -D_DEBUG
  Linker flags (Release):
  Linker flags (Debug):
  ccache:
  Precompiled headers:
                               YES
  Extra dependencies:
                               dl m pthread rt
  3rdparty dependencies:
OpenCV modules:
  To be built:
                               aruco bgsegm bioinspired calib3d ccalib core datasets dnn dnn_objdetect dpm
   face features2d flann freetype fuzzy gapi hfs highgui img_hash imgcodecs imgproc java_bindings_generator
   line_descriptor ml objdetect optflow phase_unwrapping photo plot python2 python_bindings_generator reg
   rgbd saliency shape stereo stitching structured_light superres surface_matching text tracking ts video
   videoio videostab xfeatures2d ximgproc xobjdetect xphoto
  Disabled:
                               world
  Disabled by dependency:
  Unavailable:
                               cnn_3dobj cudaarithm cudabgsegm cudacodec cudafeatures2d cudafilters
   cudaimgproc cudalegacy cudaobjdetect cudaoptflow cudastereo cudawarping cudev cvv hdf java js matlab ovis
   python3 sfm viz
  Applications:
                               tests perf tests examples apps
  Documentation:
 Non-free algorithms:
                               NO
GUI:
                               YES (ver 3.18.9)
 GTK+:
    GThread:
                               YES (ver 2.48.2)
    GtkGlExt:
                               NO
 VTK support:
                               NO
Media T/O:
                               /usr/lib/arm-linux-gnueabihf/libz.so (ver 1.2.8)
  ZLib:
  JPEG:
                               /usr/lib/arm-linux-gnueabihf/libjpeg.so (ver 80)
  WEBP:
                               build (ver encoder: 0x020e)
  PNG:
                               /usr/lib/arm-linux-gnueabihf/libpng.so (ver 1.2.54)
                               /usr/lib/arm-linux-gnueabihf/libtiff.so (ver 42 / 4.0.6)
  TIFF:
  JPEG 2000:
                               /usr/lib/arm-linux-gnueabihf/libjasper.so (ver 1.900.1)
                               build (ver 1.7.1)
  OpenEXR:
  HDR:
                               YES
  SUNRASTER:
                               YES
 PXM:
                               YES
 PFM:
                               YES
Video I/O:
  DC1394:
                               NO
 FFMPEG:
                               YES
   avcodec:
                               YES (ver 57.64.100)
    avformat:
                               YES (ver 57.56.100)
   avutil:
                               YES (ver 55.34.100)
   swscale:
                               YES (ver 4.2.100)
   avresample:
                               NO
                               NO
 GStreamer:
 v41/v412:
                               linux/videodev2.h
Parallel framework:
                               OpenMP
                               YES (built-in)
Other third-party libraries:
                               YES (/usr/lib/liblapack.so /usr/lib/libcblas.so /usr/lib/libatlas.so)
  Eigen:
  Custom HAL:
                               YES (carotene (ver 0.0.1))
  Protobuf:
                               build (3.5.1)
                               YES (no extra features)
  Include path:
                               /home/big/Desktop/opencv-4.0.1/3rdparty/include/opencl/1.2
  Link libraries:
                               Dynamic load
Python 2:
                               /home/big/Desktop/Syringenator/src/pi/pyVirtEnv/syringenator/bin/python (ver
  Interpreter:
   2.7.12)
                               /usr/lib/arm-linux-gnueabihf/libpython2.7.so (ver 2.7.12)
  Libraries:
  numpv:
   /home/big/Desktop/Syringenator/src/pi/pyVirtEnv/syringenator/lib/python2.7/site-packages/numpy/core/include
   (ver 1.16.1)
  install path:
                               lib/pvthon2.7/site-packages/cv2/pvthon-2.7
                               /home/big/Desktop/Syringenator/src/pi/pyVirtEnv/syringenator/bin/python
Python (for build):
```

4 NN 11

## 4 NN

## **#Object Recognition**

This file contains refrences for totorials and programs used in training and running Yolov3-tiny.

#### #Refrences

```
OpenCV https://www.pyimagesearch.com/2018/08/15/how-to-install-opencv-4-on-ubuntu/
Yolo https://www.pyimagesearch.com/2018/08/15/how-to-install-opencv-4-on-ubuntu/
Training Yolo https://github.com/AlexeyAB/darknet#how-to-train-to-detect-your-custom-objects
```

## 5 Todo List

### File Syringenator.py

how do we initialize the robot run? a button press? -ABD

## Member Syringenator.returnToLine ()

do we need to check that we actually returned? how do we recover if dead reckoning fails? -ABD

## 6 Module Index

## 6.1 Modules

Here is a list of all modules:

pyimagesearch Code 13

## 7 Namespace Index

## 7.1 Namespace List

Here is a list of all documented namespaces with brief descriptions:

	Syringenator The top-level Pi program	14
8	Class Index	
<b>8.</b> 1	1 Class List	
Нє	ere are the classes, structs, unions and interfaces with brief descriptions:	
	Syringenator.Camera A class to wrap the Camera	21
	Syringenator.Log A class to wrap the logging functions	22
	Syringenator.NeuralNet A class to wrap the DNN	22
	roboMove	23
	Syringenator.Target A class to contain everything we know about an aquired target	23
9	File Index	
9.1	1 File List	
He	ere is a list of all documented files with brief descriptions:	
	src/Arduino/libraries/constants/constants.h Constants shared across the whole system	25
	src/Arduino/libraries/MotorLib/MotorLib.h	??
	src/Arduino/libraries/SensorLib/SensorLib.h	??
	src/Arduino/libraries/Syringenator/Syringenator.hpp Arduino controller code –ABD	28
	src/pi/constants.py Constants shared across the whole system	32
	src/pi/Syringenator.py This is the main control script	34

## 10 Module Documentation

## 10.1 pyimagesearch Code

This code was taken and refactored from pyimagesearch

### **Functions**

def Syringenator.rescale (detection)

Rescale the bounding box coordinates scale the bounding box coordinates back relative to the size of the image, keeping in mind that YOLO actually returns the center (x, y)-coordinates of the bounding box followed by the boxes' width and height.

• def Syringenator.extractTargets (dataIn)

process the OpenCV output to generate actionable targets

#### 10.1.1 Detailed Description

This code was taken and refactored from pyimagesearch

#### 10.1.2 Function Documentation

## 10.1.2.1 extractTargets()

process the OpenCV output to generate actionable targets

#### **Parameters**

data⇔	the data from OpenCV
In	

#### 10.1.2.2 rescale()

```
{\small \mbox{def Syringenator.rescale (}} \\ {\small \mbox{detection )}}
```

Rescale the bounding box coordinates scale the bounding box coordinates back relative to the size of the image, keeping in mind that YOLO actually returns the center (x, y)-coordinates of the bounding box followed by the boxes' width and height.

(centerX, centerY, width, height) for the target

## 11 Namespace Documentation

## 11.1 Syringenator Namespace Reference

The top-level Pi program.

#### Classes

· class Camera

A class to wrap the Camera.

class Log

A class to wrap the logging functions.

class NeuralNet

A class to wrap the DNN.

class Target

A class to contain everything we know about an aquired target.

#### **Functions**

• def rescale (detection)

Rescale the bounding box coordinates scale the bounding box coordinates back relative to the size of the image, keeping in mind that YOLO actually returns the center (x, y)-coordinates of the bounding box followed by the boxes' width and height.

def extractTargets (dataIn)

process the OpenCV output to generate actionable targets

def imageCart2floorCart (t)

Derive floor position from image data.

def pixelRadius (t)

Determine how far a target is outside of the pickup radius.

def floorCart2armCylinder (x, y)

Derive cylindrical coordinates, centered on the arm from cartesian coordinates centered on the camera.

def floorCart2steer (x, y)

Generate a steering azimuth from floor cartesian.

• def scan (cam, net)

A routine to take a picture and report back the closest target The Computer vision routine must be able to handle multiple targets in the image.

def canBePicked (t)

A routine to determine if the target is in position to be picked up.

· def approach (t)

Move the robot closer to the given target.

• def avoid ()

avoid an obstacle

• def pickUp (t)

Attempt to pickup and dispose the target.

def returnToLine ()

signl the arduino to return to the line.

def lineFollow ()

Follow the line.

#### **Variables**

• bool DEBUG\_CAPTURE = False

Display an image once it's been captured.

bool DEBUG\_AQUISITION = False

Draw centers and bounding boxes on the image.

• bool DEBUG APPROACH = False

Report on turn and forward values during approach.

• bool DEBUG\_TRANSFORM = False

Report azimuth and range values during pickUp.

bool DEBUG ORIENTATION = False

display processed image for hand orientation

• bool DEBUG TIMING = False

report on yolo timing

bool CAL X = False

Interrupt the normal loop and take X calibration photos.

bool CAL\_Y = False

Interrupt the normal loop and take Y calibration photos.

bool DISABLE\_WHEELS = False

Disable any wheel commands.

bool DISABLE\_LINE\_FOLLOW = False

robot only picks and returns to start position

- int **FRAME\_RATE** = 30
- int **IMG\_WIDTH** = 640
- int **IMG HEIGHT** = 480
- float FOV\_X = 63.4
- float FOV\_Y = 40.4
- int **CONFIDENCE** = .5
- int NMS THRESHOLD = .1
- int XPIX2LEN = 10/6.48
- int **YPIX2LEN** = 10/6.0
- bool onTheLine = True

boolean indicating whether we are on the line

• bool obstacle = False

boolean indicating that we have detected an obstacle

- bool inWindow = False
- target = None

The currently aquired target.

int pickUpCount = 0

the number of times a pickup has been attempted

• int PICKUP\_LIMIT = 2

the maximum number of times to attempt a pickup

- log = Log()
- camera = Camera()
- neuralNet = NeuralNet()
- comPort = SySerial.ComPort()
- status = comPort.status()
- int **SCALE** = 4
- image = camera.capture()
- crop
- **bigger** = cv2.resize(src=crop, dsize=(0,0), fx=SCALE, fy=SCALE)
- · tuple biggerDim
- tuple centerX = (IMG\_WIDTH/2-constants.PICKUP\_X\_MIN+(constants.CAL\_CAM\_X\_OFFSET))\*SCALE
- int CROP Y MIN = 400

#### 11.1.1 Detailed Description

The top-level Pi program.

#### 11.1.2 Function Documentation

## 11.1.2.1 approach()

```
def Syringenator.approach ( t )
```

Move the robot closer to the given target.

The moveCloser() routine attempts to aproach the target by relatively small increments. Because the move routines may be interrupted by the obstacle avoidance ISRs and the risk of jambing the wheels etc. we cannot expect to be able to approch successfully on the first try. Hence moveCloser() should only move a relatively short distance before exiting to allow another loop through the scan cycle.

Should we spend effort trying to avoid running over decoys here?

This routine is likely where we will have the most issues. -ABD

### **Parameters**

t a Target object containing the location of the target to be approched

None

```
11.1.2.2 avoid()
```

```
def Syringenator.avoid ( )
```

avoid an obstacle

Returns

None

## 11.1.2.3 canBePicked()

```
\begin{array}{c} \text{def Syringenator.canBePicked (} \\ & t \end{array})
```

A routine to determine if the target is in position to be picked up.

Calculates whether the center of the target bounding box is in the pickup area.

Returns

a boolean

## 11.1.2.4 floorCart2armCylinder()

```
def Syringenator.floorCart2armCylinder ( x, v )
```

Derive cylindrical coordinates, centered on the arm from cartesian coordinates centered on the camera.

## **Parameters**

X	the x-value of the point of interest on the floor
V	the y-value of the point of interest on the floor

a tuple (Azimuth, Range)

## 11.1.2.5 floorCart2steer()

```
 \begin{array}{c} \text{def Syringenator.floorCart2steer (} \\ x, \\ y \end{array} )
```

Generate a steering azimuth from floor cartesian.

## **Parameters**

(x,y) a floor cartesian tuple

## Returns

an steering angle in degrees.

## 11.1.2.6 imageCart2floorCart()

```
def Syringenator.imageCart2floorCart (
```

Derive floor position from image data.

## **Parameters**

t a Target object

### Returns

a tuple (x, y) the coordinates on the floor in mm

## 11.1.2.7 lineFollow()

```
def Syringenator.lineFollow ( )
```

Follow the line.

this routine simply signals the arduino to execute its lineFollow() routine

None

## 11.1.2.8 pickUp()

Attempt to pickup and dispose the target.

This routine must determine orientation of the target. If this is not done by some OpenCV magic we can attempt it here using the raw image data and the bounding box.

Divide the longer dimension of the bounding box by some constant divisor. Scan along each of those raster lines twice. On the first pass calculate an average brightness (RGB values can be summed). The second pass will pick out points of greatest brightness. Find the centers of clustered bright pixeles. We now have a set of points in cartesian space. Have Jake find the slope of the line of best fit.

The center can be estimated as the center of the bounding box, or the center of the points, the mean of both, etc.

Once the values for x, y, and m have been determined they will have to pass through a calibration transform to determine the arm a, r, o values. –ABD

#### **Parameters**

t a Target object containing the raw bitmap data

#### Returns

None

### 11.1.2.9 pixelRadius()

```
def Syringenator.pixelRadius ( t )
```

Determine how far a target is outside of the pickup radius.

#### **Parameters**

t a Target object

a distance in some unit

### 11.1.2.10 returnToLine()

```
def Syringenator.returnToLine ( )
```

signl the arduino to return to the line.

Todo do we need to check that we actually returned? how do we recover if dead reckoning fails? -ABD

We disscussed the possibility of a timer on lineFollow(), that if the line has not been detected recently then we know we are off track and must recoves somehow.

#### Returns

None

## 11.1.2.11 scan()

A routine to take a picture and report back the closest target The Computer vision routine must be able to handle multiple targets in the image.

It would be best if all targets are reported. Then this routine will determine the closest one to pursue. -ABD

### **Parameters**

cam	a Camera object to get pictures from
net	a NeuralNet object to process the pictures

#### **Returns**

a Target oblject

### 11.1.3 Variable Documentation

12 Class Documentation 21

## 11.1.3.1 biggerDim

tuple Syringenator.biggerDim

### Initial value:

## 11.1.3.2 crop

Syringenator.crop

#### Initial value:

## 12 Class Documentation

## 12.1 Syringenator.Camera Class Reference

A class to wrap the Camera.

**Public Member Functions** 

- def \_\_init\_\_ (self)
- def capture (self)

Capture an image and return it as a multidimentional matrix.

**Public Attributes** 

· pipeline

## 12.1.1 Detailed Description

A class to wrap the Camera.

The documentation for this class was generated from the following file:

src/pi/Syringenator.py

## 12.2 Syringenator.Log Class Reference

A class to wrap the logging functions.

**Public Member Functions** 

```
• def __init__ (self)
```

• def record (self, datatype, \*args)

Record system events for later analysis.

**Public Attributes** 

• file

### 12.2.1 Detailed Description

A class to wrap the logging functions.

### 12.2.2 Member Function Documentation

## 12.2.2.1 record()

Record system events for later analysis.

Returns

None

The documentation for this class was generated from the following file:

• src/pi/Syringenator.py

## 12.3 Syringenator.NeuralNet Class Reference

A class to wrap the DNN.

## **Public Member Functions**

- def \_\_init\_\_ (self)
- def detect (self, img)

process an image

### **Public Attributes**

- nn
- In

### **Static Public Attributes**

- int **NETREZ** = 320
- string **WEIGHTSPATH** = "nn/yolov3-tiny-obj\_37000.weights"
- string **CONFIGPATH** = "nn/yolov3-tiny-obj.cfg"

### 12.3.1 Detailed Description

A class to wrap the DNN.

The documentation for this class was generated from the following file:

src/pi/Syringenator.py

## 12.4 roboMove Struct Reference

### **Public Attributes**

- bool typeMove
- · int ticks
- · byte direction

The documentation for this struct was generated from the following file:

src/Arduino/libraries/Syringenator/Syringenator.hpp

## 12.5 Syringenator. Target Class Reference

A class to contain everything we know about an aquired target.

## **Public Member Functions**

- def \_\_init\_\_ (self, box, score, center)
- def setImg (self, img)
- def distance (self)

Get the taxicab distance to the target.

def getBox (self)

### **Public Attributes**

- · confidence
- centerX
- · centerY
- box
- image

### 12.5.1 Detailed Description

A class to contain everything we know about an aquired target.

12.5.2 Member Function Documentation

### 12.5.2.1 distance()

```
\begin{tabular}{ll} \tt def Syringenator.Target.distance ( \\ & self ) \end{tabular}
```

Get the taxicab distance to the target.

### Returns

an integer representing distance

The documentation for this class was generated from the following file:

src/pi/Syringenator.py


13 File Documentation 25

## 13 File Documentation

## 13.1 src/Arduino/libraries/constants/constants.h File Reference

Constants shared across the whole system.

This graph shows which files directly or indirectly include this file:

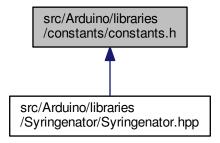

## Macros

• #define ARM\_AZIMUTH\_MIN 0

The minimum azimuth byte value that can be passed to the arduino with ARDUINO\_ARM\_PICKUP.

#define ARM AZIMUTH MAX 180

The maximum azimuth byte value that can be passed to the arduino with ARDUINO\_ARM\_PICKUP.

#define ARM\_RANGE\_MIN 12

The minimum range byte value that can be passed to the arduino with ARDUINO\_ARM\_PICKUP.

#define ARM\_RANGE\_MAX 19

The maximum range byte value that can be passed to the arduino with ARDUINO\_ARM\_PICKUP.

#define ARM ORIENT MIN 0

The minimum orientation byte value that can be passed to the arduino with ARDUINO\_ARM\_PICKUP.

#define ARM ORIENT MAX 180

The maximum orientation byte value that can be passed to the arduino with ARDUINO\_ARM\_PICKUP.

• #define PICKUP X MIN 270

The minimum target center x-value that allows a pickup.

#define PICKUP\_X\_MAX 395

The maximum target center x-value that allows a pickup.

#define PICKUP Y MIN 420

The minimum target center y-value that allows a pickup.

• #define PICKUP Y MAX 470

The maximum target center y-value that allows a pickup.

#define PICKUP\_RADIUS 110

The pixel value for the arm radius.

#define PICKUP\_ARM\_OFFSET 50

The arms offset from the bottom of the image [px].

#define FWD MAX TICKS 140

The maximum count of forward ticks used in moveCloser()

#define FWD\_MIN\_TICKS 2

The minimum count of forward ticks.

#define ROT MAX TICKS 90

The maximum absolute value of rotation ticks used in moveCloser()

• #define ROT MIN TICKS 5

The minimum count of rotational ticks.

#define CAL\_ROT\_FACTOR 0.15

Calibration factor used in rotation calculation.

• #define CAL FWD FACTOR 0.20

Calibration factor used in forward calculation.

• #define CAL ARM OFFSET 95

Offset of the arm axis from the bottom of the image [mm].

#define CAL\_CAM\_HEIGHT 984

Height of the camera from the floor [mm].

#define CAL\_CAM\_ANGLE 1.2117

Angle of the camera from the horizon [radians].

#define CAL\_CAM\_AXIS 1140

distance to the floor on the camera's center axis

• #define CAL CAM X OFFSET -15

x-offset between camera and body

• #define ARDUINO NULL 0

A place holder for troubleshooting etc.

• #define ARDUINO STATUS ACK 65

If the arduino needs to acknowledge something.

#define ARDUINO STATUS READY 82

If the arduino needs to indicate it is ready.

#define ARDUINO STATUS PICK FAIL 3

Report that the pick failed.

#define ARDUINO STATUS PICK SUCCESS 4

Report that the pick succeded.

#define ARDUINO\_STATUS\_ARM\_FAULT 5

Report a general arm failure.

#define ARDUINO\_STATUS\_OBSTACLE 6

Report an obstacle detected.

#define ARDUINO STATUS NACK 78

Report the command not understood.

#define ARDUINO\_LINE\_FOLLOW 12

serial command the arduino to follow the line

#define ARDUINO AVOID 13

serial command the arduino to avoid an obstacle

• #define ARDUINO\_RETURN 14

serial command the arduino to return to the line

• #define ARDUINO\_FWD 15

serial command the arduino forward

#define ARDUINO\_RIGHT 16

serial command the arduino to rotate right

#define ARDUINO LEFT 17

serial command the arduino to rotate left

#define ARDUINO ARM PARK 20

serial command the arduino to call the park action sequence

#define ARDUINO ARM DISPOSE 21

serial command the arduino to call the dispose action sequence

#define ARDUINO ARM PICKUP 22

serial command the arduino to attempt a pick, followed by three bytes: azimuth, range, and orientation

#define LINE FOLLOW TIME 100

timer ticks to follow the line

#define SERIAL BAUD 9600

baudrate for serial communication between Arduino and Pi

#define PORT MOTOR FWD None

Arduino pin for port motor forward.

#define PORT\_MOTOR\_REV None

Arduino pin for port motor reverse.

#define STBD MOTOR FWD None

Arduino pin for starboard motor forward.

#define STBD MOTOR REV None

Arduino pin for starboard motor reverse.

#define PORT\_LINE\_SENSE None

Arduino pin for the port line sensor.

#define STBD\_LINE\_SENSE None

Arduino pin for the starboard line sensor.

• #define PORT\_FWD\_OBSTACLE None

Arduino pin for the port forward obstacle sensor.

#define PORT AFT OBSTACLE None

Arduino pin for the port aft obstacle sensor.

#define STBD\_FWD\_OBSTACLE None

Arduino pin for the starboard forward obstacle sensor.

#define STBD\_AFT\_OBSTACLE None

Arduino pin for the starboard aft obstacle sensor.

• #define ARM CONTROL None

Arduino pin for communication with the xArm.

### 13.1.1 Detailed Description

Constants shared across the whole system.

Includes constants used by both the arduino sketch and the the python script. The format of constants.in is three whitespace sparated columns:

[NAME] [value] [comments]

Any changes must be made in constants.in and followed by running:

make constants

-ABD

## Copyright


Copyright © 2019 by the authors. All rights reserved.

This file has been autogenerated, CHANGES MADE HERE WILL NOT PERSIST

## 13.2 src/Arduino/libraries/Syringenator/Syringenator.hpp File Reference

Arduino controller code -ABD.

```
#include "constants.h"
#include "MotorLib.h"
#include "SensorLib.h"
#include "Arduino.h"
#include 
LobotServoController.h>
Include dependency graph for Syringenator.hpp:
```

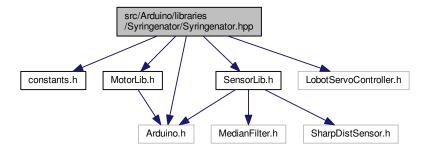

## Classes

struct roboMove

## **Macros**

- #define LOGSIZE 256
- #define FULL90ROT\_RIGHT 875
- #define FULL90ROT\_LEFT 835

#### **Functions**

int setupSensor\_ISR ()

A function to respond to a line detector being triggered.

- ISR (TIMER3\_COMPA\_vect)
- void stopSensor\_ISR ()
- void startSensor\_ISR ()
- void serialCommunication ISR (void)

A function to handle incomming communication from the pi.

- int isDoneCommand (int type command)
- bool isReady (void)
- void moveRotate (byte direction, byte angle, bool mode=0)

Rotate the robot around central axis rotate by running both motors at the same speed in opposite directions.

• void moveStraight (byte ticks, byte direction=1, bool mode=0)

Move the robot forward or reverse.

- int deadReckoning (void)
- int logMove (int type, int ticks, byte direction=0)

Routine to follow the guide-line for some fixed interval.

- void stopLineFollow (void)
- void moveLineFollow (void)
- void readLines ()

Routine to follow the guide-line for some fixed interval.

void armPark (void)

Move the arm to its parking position.

void armDispose (void)

Routine to dispose of a syringe once it has been picked.

void grabObject (byte angle, byte radius, byte handAngle)

Routine to attempt target pickup.

### Variables

· volatile bool done\_with\_command

## 13.2.1 Detailed Description

Arduino controller code -ABD.

## Copyright

Copyright © 2019 by the authors. All rights reserved.

#### 13.2.2 Function Documentation

## 13.2.2.1 armPark()

```
void armPark (
     void )
```

Move the arm to its parking position.

The parking position needs to leave a clear view of the pickup area, but also should move the center of gravity as far forward as possible to reduce drive wheel slippage.

### 13.2.2.2 grabObject()

```
void grabObject (
    byte angle,
    byte radius,
    byte handAngle )
```

Routine to attempt target pickup.

This routine should attempt to close the claw completely and detect if an object as actually been grabbed. parameters should be bytes because they will have to be transmitted over serial from the pi. Ranges on these values TBD as convenient for the arm software, but must be recorded in the system constants file. –ABD

#### **Parameters**

azimuth	arm azimuth value
range	distance to the target
orientation	rotation of the target

### Returns

true on successful pick, false otherwise.

## 13.2.2.3 logMove()

```
int logMove (
          int type,
          int ticks,
          byte direction = 0 )
```

Routine to follow the guide-line for some fixed interval.

This function assumes that we are already over the line

## 13.2.2.4 moveRotate()

Rotate the robot around central axis rotate by running both motors at the same speed in opposite directions.

#### **Parameters**

ticks sign indicates direction of rotation: positive is rotation to the right. magnitude indicates the number of encoder ticks on each motor.

#### 13.2.2.5 moveStraight()

```
void moveStraight (
          byte ticks,
          byte direction = 1,
          bool mode = 0 )
```

Move the robot forward or reverse.

#### **Parameters**

ticks	number of encoder ticks to move. Sign indicates direction: positive is forward.	
mode	0 = line follow, 1 = object avoidance	
ticks	number of encoder ticks to move. Sign indicates direction: positive is forward.	

#### 13.2.2.6 readLines()

```
void readLines ( )
```

Routine to follow the guide-line for some fixed interval.

This function assumes that we are already over the line

### 13.2.2.7 setupSensor\_ISR()

```
int setupSensor_ISR ( )
```

A function to respond to a line detector being triggered.

The line detectors are mounted forward and inboard of the wheels. This function needs to reorient the robot to clear the sensor, but also to prevent the line from being hit again.

The simplest way to do this is to rotate the opposite wheel forward until the sensor clears. Because the sensor is forward of the wheel it will rotate away from the line as the opposite wheel moves forward. This should work as long as the curvature of the line is not too great.

This may need to be two routines, one for each sensor –ABDA function to respond to a detected obstacle while under locamotion. There may be two cases to handle: whether we are line following, or aproaching. If we are line following we need to ensure that we don't lose the line while avoiding the obstacle.

This may need to be multiple routines, one for each sensor -ABD

## 13.3 src/pi/constants.py File Reference

Constants shared across the whole system.

#### **Variables**

int constants.ARM AZIMUTH MIN = 0

The minimum azimuth byte value that can be passed to the arduino with ARDUINO\_ARM\_PICKUP.

• int constants.ARM AZIMUTH MAX = 180

The maximum azimuth byte value that can be passed to the arduino with ARDUINO ARM PICKUP.

• int constants.ARM RANGE MIN = 12

The minimum range byte value that can be passed to the arduino with ARDUINO\_ARM\_PICKUP.

int constants.ARM RANGE MAX = 19

The maximum range byte value that can be passed to the arduino with ARDUINO ARM PICKUP.

int constants.ARM ORIENT MIN = 0

The minimum orientation byte value that can be passed to the arduino with ARDUINO\_ARM\_PICKUP.

• int constants.ARM\_ORIENT\_MAX = 180

The maximum orientation byte value that can be passed to the arduino with ARDUINO ARM PICKUP.

int constants.PICKUP X MIN = 270

The minimum target center x-value that allows a pickup.

• int constants.PICKUP X MAX = 395

The maximum target center x-value that allows a pickup.

int constants.PICKUP\_Y\_MIN = 420

The minimum target center y-value that allows a pickup.

• int constants.PICKUP\_Y\_MAX = 470

The maximum target center y-value that allows a pickup.

int constants.PICKUP\_RADIUS = 110

The pixel value for the arm radius.

• int constants.PICKUP\_ARM\_OFFSET = 50

The arms offset from the bottom of the image [px].

int constants.FWD\_MAX\_TICKS = 140

The maximum count of forward ticks used in moveCloser()

• int constants.FWD\_MIN\_TICKS = 2

The minimum count of forward ticks.

int constants.ROT\_MAX\_TICKS = 90

The maximum absolute value of rotation ticks used in moveCloser()

int constants.ROT\_MIN\_TICKS = 5

The minimum count of rotational ticks.

float constants.CAL\_ROT\_FACTOR = 0.15

Calibration factor used in rotation calculation.

• float constants.CAL\_FWD\_FACTOR = 0.20

Calibration factor used in forward calculation.

• int constants.CAL\_ARM\_OFFSET = 95

Offset of the arm axis from the bottom of the image [mm].

• int constants.CAL CAM HEIGHT = 984

Height of the camera from the floor [mm].

float constants.CAL\_CAM\_ANGLE = 1.2117

Angle of the camera from the horizon [radians].

int constants.CAL CAM AXIS = 1140

distance to the floor on the camera's center axis

int constants.CAL\_CAM\_X\_OFFSET = -15

x-offset between camera and body

• int constants.ARDUINO NULL = 0

A place holder for troubleshooting etc.

• int constants.ARDUINO STATUS ACK = 65

If the arduino needs to acknowledge something.

int constants.ARDUINO STATUS READY = 82

If the arduino needs to indicate it is ready.

int constants.ARDUINO STATUS PICK FAIL = 3

Report that the pick failed.

int constants.ARDUINO\_STATUS\_PICK\_SUCCESS = 4

Report that the pick succeded.

int constants.ARDUINO STATUS ARM FAULT = 5

Report a general arm failure.

int constants.ARDUINO\_STATUS\_OBSTACLE = 6

Report an obstacle detected.

• int constants.ARDUINO STATUS NACK = 78

Report the command not understood.

• int constants.ARDUINO\_LINE\_FOLLOW = 12

serial command the arduino to follow the line

int constants.ARDUINO AVOID = 13

serial command the arduino to avoid an obstacle

• int constants.ARDUINO RETURN = 14

serial command the arduino to return to the line

• int constants.ARDUINO\_FWD = 15

serial command the arduino forward

• int constants.ARDUINO\_RIGHT = 16

serial command the arduino to rotate right

int constants.ARDUINO LEFT = 17

serial command the arduino to rotate left

int constants.ARDUINO ARM PARK = 20

serial command the arduino to call the park action sequence

int constants.ARDUINO ARM DISPOSE = 21

serial command the arduino to call the dispose action sequence

int constants.ARDUINO ARM PICKUP = 22

serial command the arduino to attempt a pick, followed by three bytes: azimuth, range, and orientation

int constants.LINE\_FOLLOW\_TIME = 100

timer ticks to follow the line

int constants.SERIAL BAUD = 9600

baudrate for serial communication between Arduino and Pi

• constants.PORT MOTOR FWD = None

Arduino pin for port motor forward.

constants.PORT MOTOR REV = None

Arduino pin for port motor reverse.

• constants.STBD MOTOR FWD = None

Arduino pin for starboard motor forward.

constants.STBD\_MOTOR\_REV = None

Arduino pin for starboard motor reverse.

• constants.PORT\_LINE\_SENSE = None

Arduino pin for the port line sensor.

• constants.STBD LINE SENSE = None

Arduino pin for the starboard line sensor.

• constants.PORT FWD OBSTACLE = None

Arduino pin for the port forward obstacle sensor.

• constants.PORT\_AFT\_OBSTACLE = None

Arduino pin for the port aft obstacle sensor.

constants.STBD\_FWD\_OBSTACLE = None

Arduino pin for the starboard forward obstacle sensor.

• constants.STBD\_AFT\_OBSTACLE = None

Arduino pin for the starboard aft obstacle sensor.

constants.ARM\_CONTROL = None

Arduino pin for communication with the xArm.

#### 13.3.1 Detailed Description

Constants shared across the whole system.

Includes constants used by both the arduino sketch and the the python script. The format of constants.in is three whitespace sparated columns:

[NAME] [value] [comments]

Any changes must be made in constants.in and followed by running:

make constants

-ABD

### Copyright

Copyright © 2019 by the authors. All rights reserved.

This file has been autogenerated, CHANGES MADE HERE WILL NOT PERSIST

## 13.4 src/pi/Syringenator.py File Reference

This is the main control script.

#### Classes

class Syringenator. Target

A class to contain everything we know about an aquired target.

class Syringenator.NeuralNet

A class to wrap the DNN.

· class Syringenator.Camera

A class to wrap the Camera.

class Syringenator.Log

A class to wrap the logging functions.

#### **Namespaces**

Syringenator

The top-level Pi program.

#### **Functions**

def Syringenator.rescale (detection)

Rescale the bounding box coordinates scale the bounding box coordinates back relative to the size of the image, keeping in mind that YOLO actually returns the center (x, y)-coordinates of the bounding box followed by the boxes' width and height.

def Syringenator.extractTargets (dataIn)

process the OpenCV output to generate actionable targets

def Syringenator.imageCart2floorCart (t)

Derive floor position from image data.

· def Syringenator.pixelRadius (t)

Determine how far a target is outside of the pickup radius.

def Syringenator.floorCart2armCylinder (x, y)

Derive cylindrical coordinates, centered on the arm from cartesian coordinates centered on the camera.

• def Syringenator.floorCart2steer (x, y)

Generate a steering azimuth from floor cartesian.

• def Syringenator.scan (cam, net)

A routine to take a picture and report back the closest target The Computer vision routine must be able to handle multiple targets in the image.

def Syringenator.canBePicked (t)

A routine to determine if the target is in position to be picked up.

• def Syringenator.approach (t)

Move the robot closer to the given target.

• def Syringenator.avoid ()

avoid an obstacle

• def Syringenator.pickUp (t)

Attempt to pickup and dispose the target.

• def Syringenator.returnToLine ()

signl the arduino to return to the line.

• def Syringenator.lineFollow ()

Follow the line.

#### Variables

• bool Syringenator.DEBUG\_CAPTURE = False

Display an image once it's been captured.

• bool Syringenator.DEBUG\_AQUISITION = False

Draw centers and bounding boxes on the image.

• bool Syringenator.DEBUG\_APPROACH = False

Report on turn and forward values during approach.

bool Syringenator.DEBUG\_TRANSFORM = False

Report azimuth and range values during pickUp.

• bool Syringenator.DEBUG\_ORIENTATION = False

display processed image for hand orientation

bool Syringenator.DEBUG\_TIMING = False

report on yolo timing

bool Syringenator.CAL\_X = False

Interrupt the normal loop and take X calibration photos.

bool Syringenator.CAL Y = False

Interrupt the normal loop and take Y calibration photos.

bool Syringenator.DISABLE WHEELS = False

Disable any wheel commands.

bool Syringenator.DISABLE LINE FOLLOW = False

robot only picks and returns to start position

- int Syringenator.FRAME\_RATE = 30
- int Syringenator.IMG WIDTH = 640
- int Syringenator.IMG HEIGHT = 480
- float Syringenator.FOV\_X = 63.4
- float Syringenator.FOV\_Y = 40.4
- int Syringenator.CONFIDENCE = .5
- int Syringenator.NMS\_THRESHOLD = .1
- int Syringenator.XPIX2LEN = 10/6.48
- int Syringenator.YPIX2LEN = 10/6.0
- bool Syringenator.onTheLine = True

boolean indicating whether we are on the line

bool Syringenator.obstacle = False

boolean indicating that we have detected an obstacle

- bool Syringenator.inWindow = False
- Syringenator.target = None

The currently aquired target.

int Syringenator.pickUpCount = 0

the number of times a pickup has been attempted

• int Syringenator.PICKUP LIMIT = 2

the maximum number of times to attempt a pickup

- Syringenator.log = Log()
- Syringenator.camera = Camera()
- Syringenator.neuralNet = NeuralNet()
- Syringenator.comPort = SySerial.ComPort()
- Syringenator.status = comPort.status()
- int Syringenator.SCALE = 4

- Syringenator.image = camera.capture()
- Syringenator.crop
- Syringenator.bigger = cv2.resize(src=crop, dsize=(0,0), fx=SCALE, fy=SCALE)
- tuple Syringenator.biggerDim
- tuple  $Syringenator.centerX = (IMG\_WIDTH/2-constants.PICKUP\_X\_MIN+(constants.CAL\_CAM\_X\_OFFSET))*S \leftarrow CALE$
- int Syringenator.CROP\_Y\_MIN = 400

### 13.4.1 Detailed Description

This is the main control script.

It will run on the Raspberry Pi and direct all robot operations.

By convention each arduino command routine checks for arduino ready before starting, and logs arduino status on exit.

Todo how do we initialize the robot run? a button press? -ABD

## Copyright

Copyright © 2019 by the authors. All rights reserved.

# Index

approach Syringenator, 16	Syringenator.Log, 22 rescale
armPark	pyimagesearch Code, 13
Syringenator.hpp, 29	returnToLine
avoid	Syringenator, 20
Syringenator, 17	roboMove, 23
biggerDim	scan
Syringenator, 20	Syringenator, 20
D-District	setupSensor_ISR
canBePicked	Syringenator.hpp, 31
Syringenator, 17	src/Arduino/libraries/constants/constants.h, 25
Crop	src/Arduino/libraries/Syringenator/Syringenator.hpp, 28
Syringenator, 21	src/pi/constants.py, 32
distance	src/pi/Syringenator.py, 34
Syringenator. Target, 24	Syringenator, 14
Symgonator. rargot, 2 r	approach, 16
extractTargets	avoid, 17
pyimagesearch Code, 13	biggerDim, 20
	canBePicked, 17
floorCart2armCylinder	crop, 21 floorCart2armCylinder, 17
Syringenator, 17	floorCart2steer, 18
floorCart2steer	imageCart2floorCart, 18
Syringenator, 18	lineFollow, 18
	pickUp, 19
grabObject	pixelRadius, 19
Syringenator.hpp, 30	returnToLine, 20
ima a a CautOffa a vCaut	scan, 20
imageCart2floorCart	Syringenator.Camera, 21
Syringenator, 18	Syringenator.hpp
lineFollow	armPark, 29
Syringenator, 18	grabObject, 30
logMove	logMove, 30
Syringenator.hpp, 30	moveRotate, 30
Gymigonatompp, 00	moveStraight, 31
moveRotate	readLines, 31
Syringenator.hpp, 30	setupSensor_ISR, 31
moveStraight	Syringenator.Log, 22
Syringenator.hpp, 31	record, 22
	Syringenator.NeuralNet, 22
pickUp	Syringenator. Target, 23
Syringenator, 19	distance, 24
pixelRadius	
Syringenator, 19	
pyimagesearch Code, 13	
extractTargets, 13	
rescale, 13	
readLines	
Syringenator.hpp, 31	
record	