




## **AntMiner-U1 over clock guideline**

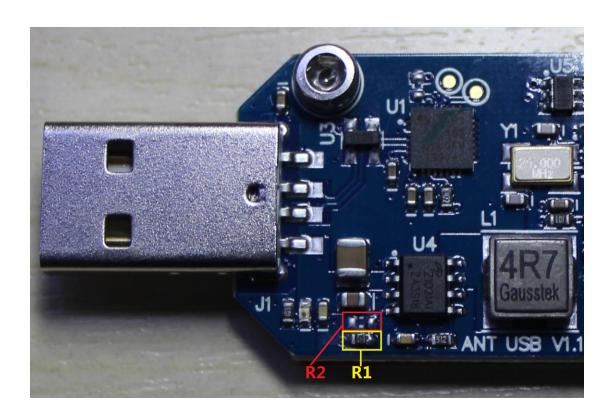

DC/DC component: AOZ1021AI

DC/DC output formula: vo=0.8\*(1+R1/R2)

## Typical value

DC/DC output	R1	R2
0.8V(Default)	1K	OPEN
0.9V	1.24K	10K
1.0V	2.49K	10K
1.1V	3.74K	10K
1.2V	4.99K	10K

## cgminer --bmsc-freq option

Freqency (MHz)	ASIC hash rate (GHz)	Frequency Hex	
150	1.2	0581	
175	1.4	0681	
200	1.6	0781	



225	1.8	0881
250	2.0	0981
275	2.2	0A81
300	2.4	0B81
325	2.6	4C81
350	2.8	4D81
375	3.0	4E81
400	3.2	4F81
425	3.4	5081
450	3.6	5181
475	3.8	5281
500	4.0	5381

## Frequency Hex description

15	14	13:7	6:2	1:0
0	BS	M[6:0]	N[4:0]	OD[1:0]

NR=N+1

NF=M+1

OD[1:0]	0	1	2	3
NO	1	2	4	8

Fout = 25\*NF/(NR\*NO), where NR =1 or 2.

When BS=1, 62.5  $\leq$  Fout  $\leq$  1000; 500  $\leq$  Fout\*N0  $\leq$  1000 When BS=0, 37.5  $\leq$  Fout  $\leq$  600; 300  $\leq$  Fout\*N0  $\leq$  600