


1. Overview

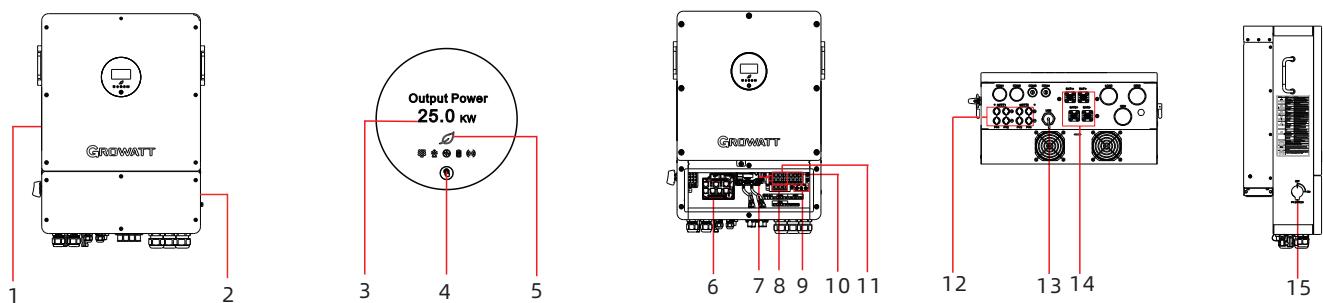


(1)Top cover plate	(2)Bottom cover plate	(3)OLED Display screen	(4)Push button
(5) System indicator	(6) Communication terminal	(7)BMS AC termina	(8)Generator wiring terminal
(9)PE wiring terminal	(10)Grid wiring terminal	(11)Load wiring terminal	(12)PV wiring terminal
(13)USB port	(14)Battery wiring terminal	(15)PV switch	

Note:


1. The content of this document is continually reviewed and amended, where necessary. Growatt reserves the right to make changes to the material at any time and without notice. Unless otherwise agreed, this document is for quick installation guidance only. All information and suggestions in this document do not constitute a warranty of any kind, express or implied. Growatt reserves all rights for final explanation.
2. This document is for quick installation guidance only. For details, please refer to the User Manual.
3. Machine damage caused by failure to follow the instructions is not covered under any warranty.

2. Installation

System overview

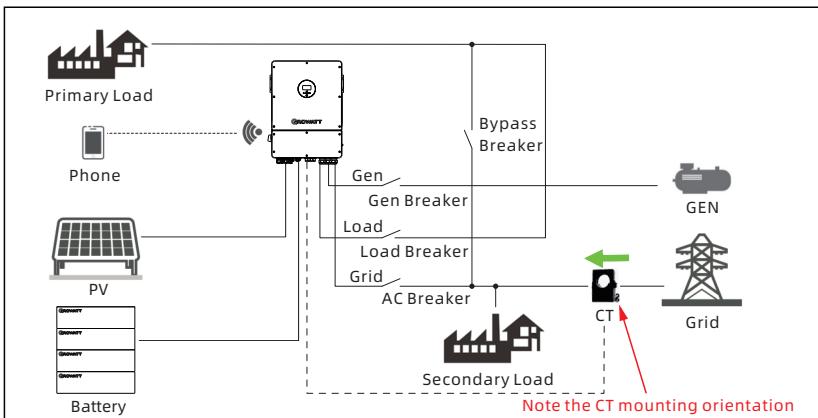

2.1 Installation requirements

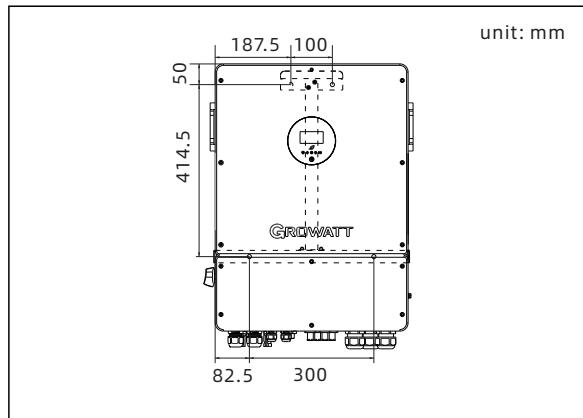

2.2 Wall-mounted installation

1. Mark the hole positions	2. Drill: Depth 70mm Diameter $\phi 10\text{mm}$	3. Install the expansion screws	Note: 1. When determining the installation position of the inverter, please consider the position of the batteries and the distribution panel. 2. When drilling holes, avoid the water pipes and power cables buried in the wall.
4. Install the wall mount	5. Install the machine	6. Stationary machine	<p>Torque:396Kgf.cm</p>

3. Connecting cables


Please prepare the cables listed below before electrical connections.

No.	Cable	Type	Recommended specifications
1	PE cable	Multi-core copper cable (yellow-green)	6mm ²
2	Grid/Generator/Load cable	Multi-core copper cable	16mm ²
3	PV input cable	PV cable	4mm ² -6mm ²
4	Battery input cable	Multi-core copper cable (orange and black)	16mm ²
5	COM1/COM2 communication cable	Standard network cable-568B	/
6	COM3 communication cable	Multi-core copper cable	22AWG
7	COM4 communication cable	Multi-core copper cable	22AWG


⚠ Note:

1. Make sure all switches are OFF before connecting the cables. For personal safety, do not operate when power-on.
2. If the diameter of the cable does not match the terminal, or the cable is aluminum wire, please contact our after-sales personnel.

3.1 Grounding

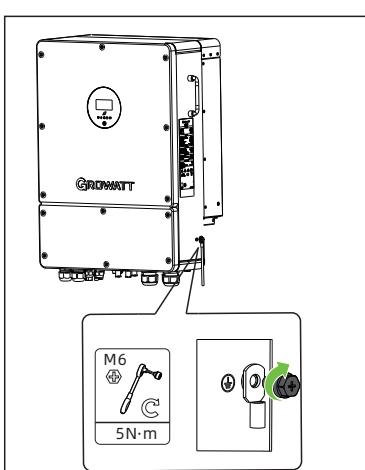

3.2 Connection of AC side

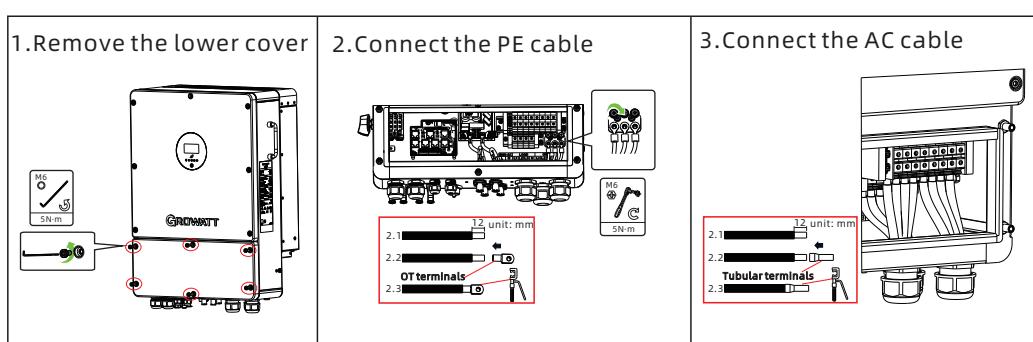


⚠ Note:


1. After connecting the cables, tighten the PG cable glands to ensure reliable protection
2. Do not install the bottom cover plate at this step; it should be installed after all internal cables are connected.

3.3 Connection on the PV side


3.3.1 Assembling the PV connector

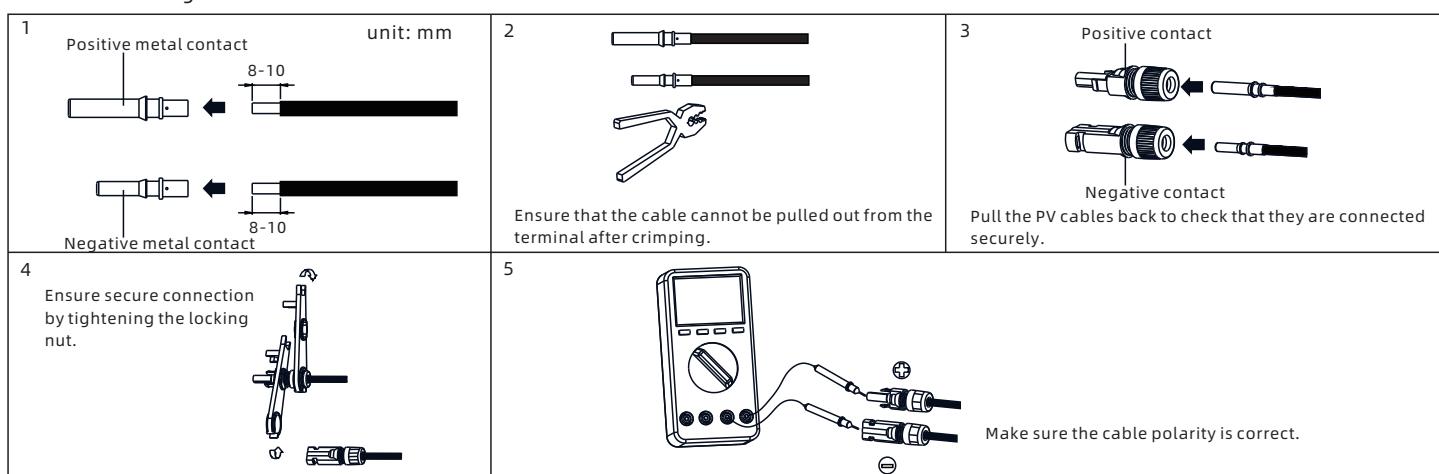

3.3.2 Connecting the PV cables

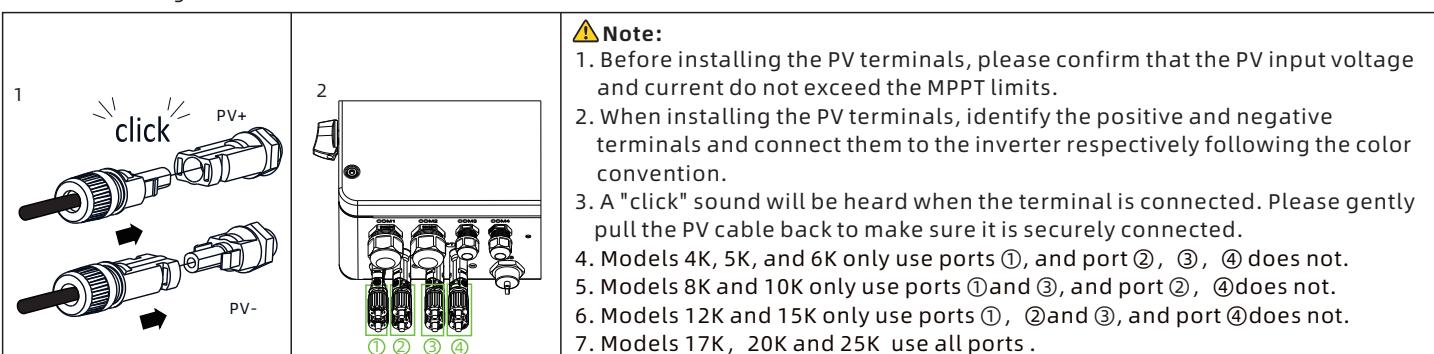


3.4 Connection on the battery side

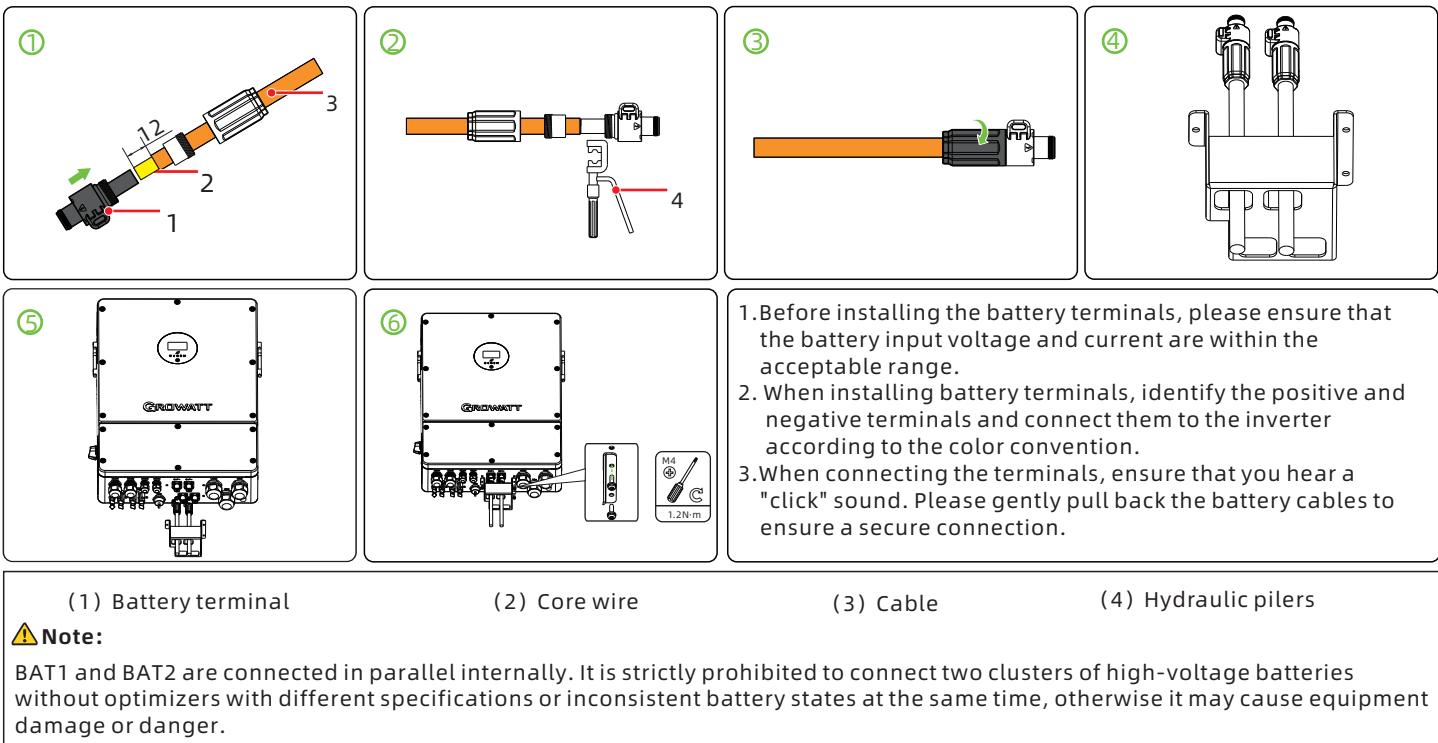


3.5 Installing the communication cable


Please refer to the user manual for details on PIN and meter wiring

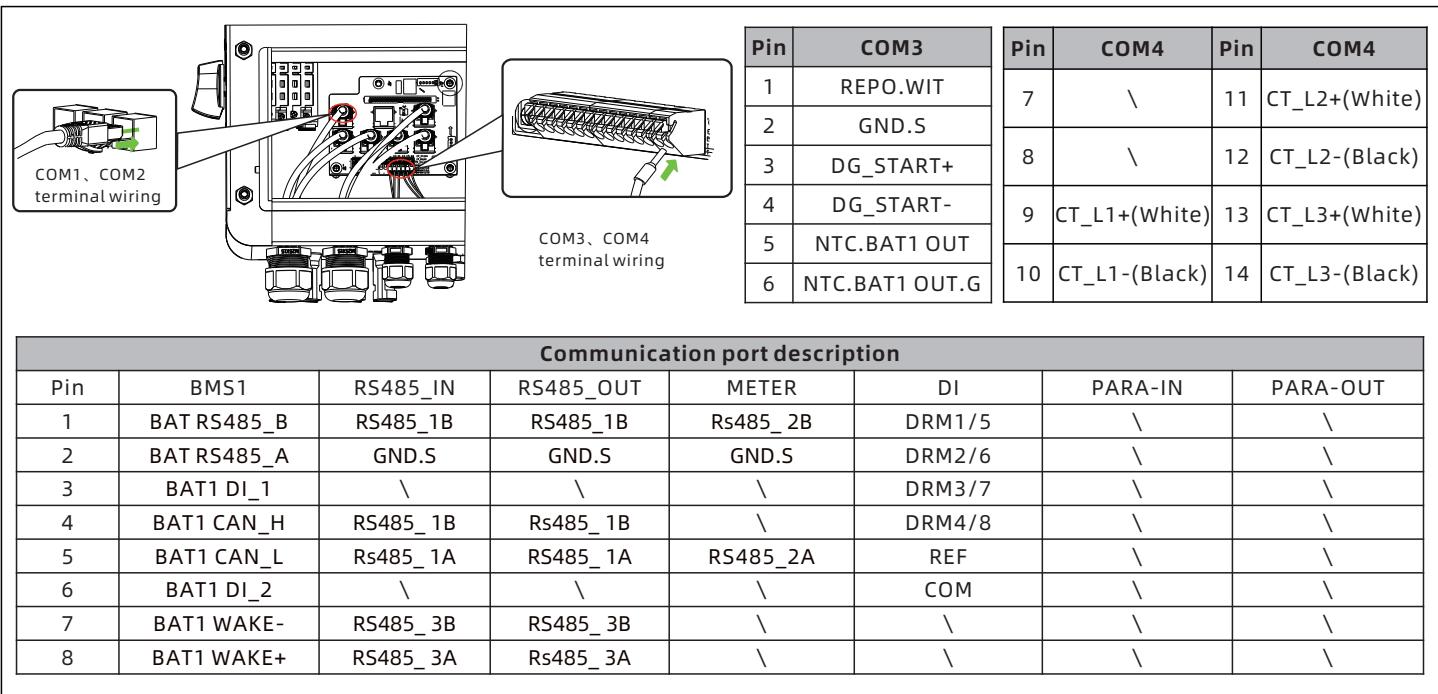

3.6 Fixed lower cover plate

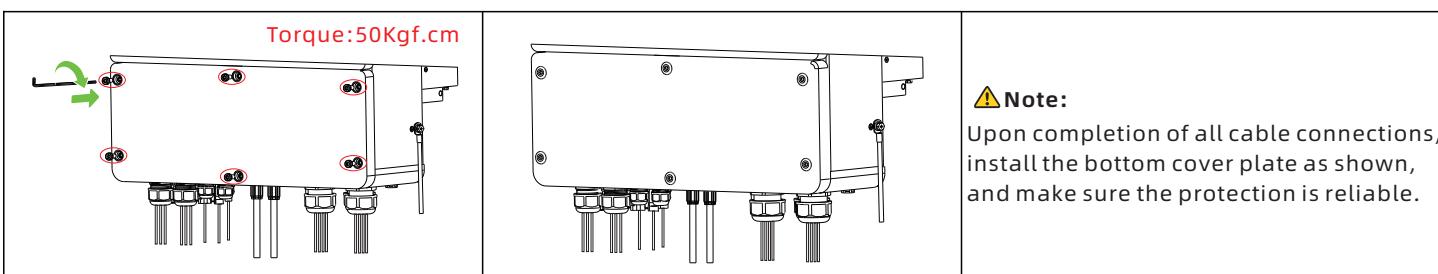

3.7 Installing the datalogger

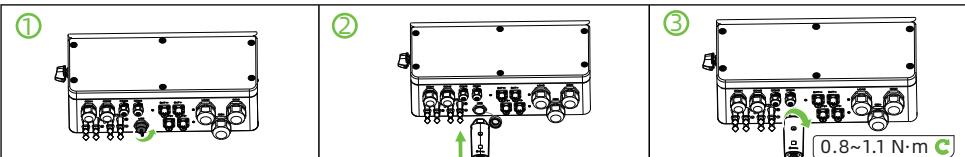

Follow the installation steps:
1. Remove the waterproof cover from the USB port.
2. Plug in the datalogger.
3. Secure the datalogger.

4. Post-installation check

Number	Checking item	Number	Checking item
1	The hybrid inverter is installed correctly and reliably.	2	Ground cables are connected securely.
3	All switches are in the OFF position.	4	All cables are connected correctly and securely.
5	The lower cover is secured.	6	All the unused connectors are sealed.
7	Put away the unused accessories.	8	The installation position is clean and tidy.

5. Powering on/off the inverter

⚠ Note:

Before turning the inverter on, please make sure the PV input voltage and current are within the MPPT limits .

Perform the following steps to power on the system:


1. Connect the PV cable , then turn on the PV switch.
2. Turn on the breaker between the grid and the inverter.

3. Turn on the breaker between the battery and the inverter, then turn on the switch of the battery.

4. The system will be powered on automatically when all the requirements are met.

To shut down the system, you need to send a shutdown command on the APP or website. Wait until the system is completely powered off, then turn off the switches in reverse order.

6. Description of the display panel

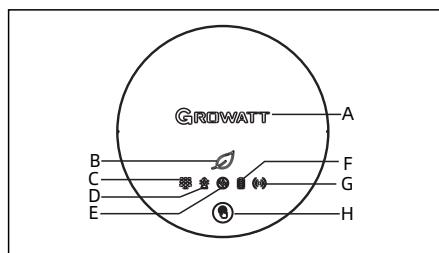

Indicator	Function	Indicator	Function
A	OLED display screen	E	Off-grid indicator
B	System indicator	F	Battery connection indicator
C	PV indicator	G	Communication/GEN indicator
D	On-grid indicator	H	Push button

7. Service and contact

Shenzhen Growatt New Energy Co., Ltd.

4-13/F, Building A, Sino-German (Europe) Industrial Park,
Hangcheng Blvd, Bao'an District, Shenzhen, China

E service@growatt.com

W en.growatt.com

For local customer support, please visit <https://en.growatt.com/support/contact>



Download



Growatt New Energy

GR-UM-513-A-00 (PN: 044.0151300)