



STM32U5 Azure IoT Hands-on

Alnur ELBERIER
October 2022

Agenda

1 Download Material

5 X-Cube-Azure Walkthrough

2 Check Requirements

6 Board Distribution

3 Hardware

7 Hands-On

4 Security

8 Option Byte Reset



Download Material



Workshop Material

Please choose one of download options below

Option 1: Zip Download Link

https://tinyurl.com/st-iot

Option 2: Clone GitHub Repo

• git clone https://github.com/AlnurElberier/ ST Azure Workshop 2022.git



Check Requirements




Workshop Requirements

- Windows
- Python3
 - Pyserial
- Azure CLI
- STM32CubeProgrammer
- Git Hub
- X-CUBE-AZURE



Pre-Requisite Check Script

- Navigate to the ST_Azure_Workshop folder you just downloaded
- Double click the AzCheckPrereq.bat script

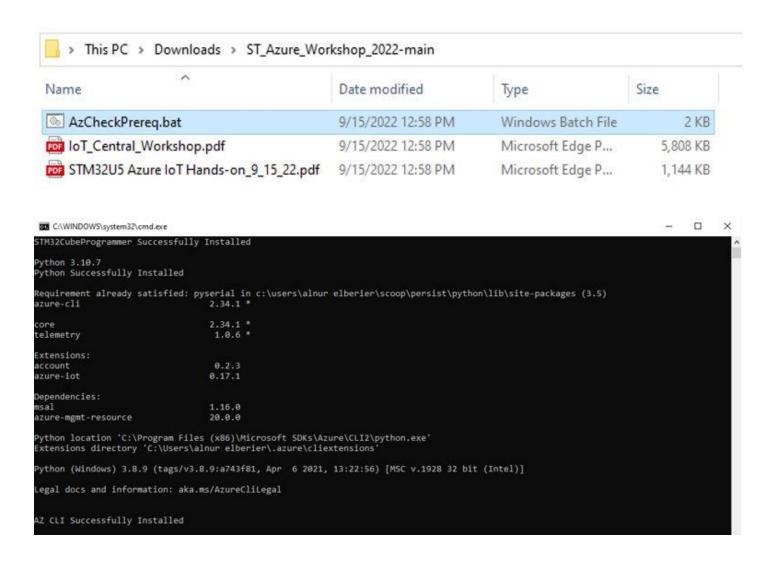



Hardware



STM32U5 Microcontrollers

The new reference for secure and smart IoT applications



Higher Security

Certified PSA L3 and SESIP L3

Lower Power

58 ULPMark-CM

Richer applications

Cortex-M33 @160MHz, extended features set



STM32U5 IoT Kit


Your reference board for IoT Proof-of-Concept

Wi-Fi Module

Cellular extension

STM32U5 MCU

BLE module

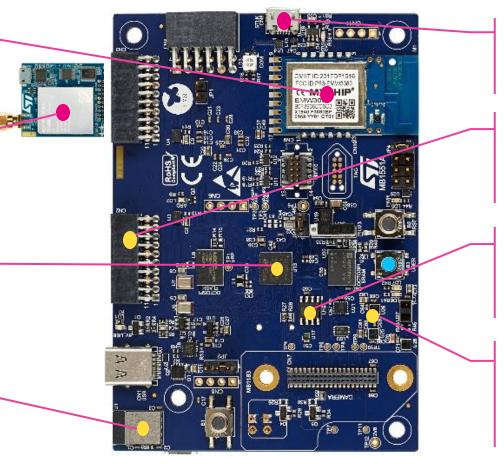

Programming and Debug

Extension connectorsArduino (backside), PMOD,
STMOD+

STSAFE secure element


Sensors

Accel, Magnetometer, Pressure, Humidity, ToF, Temperature



Azure IoT on STM32U5

X-CUBE-AZURE reference integration simplifying your development

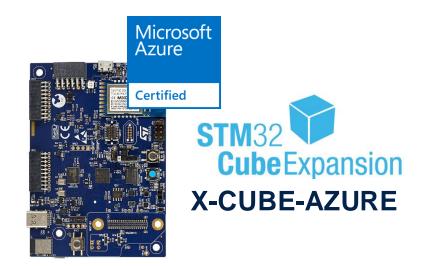

Certified for Microsoft Azure plug and play

Leveraging ARM Trusted Firmware-M (TF-M)

Based on AzureRTOS middleware

Supporting WIFI and Cellular (Cat M1)


using STSAFE for simpler provisioning and even higher security





Azure IoT on STM32U5

Reference implementation supporting Azure IoT and app Services

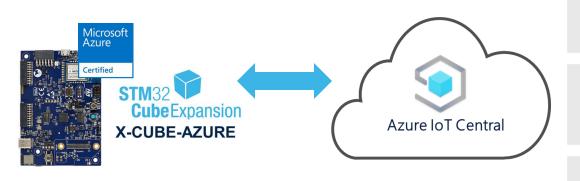

Azure IoT Central

Data visualization and analysis, device management and

Azure IoT Hub

device provisioning services

IoT plug and Play

Device update for IoT Hub (public preview)

Microsoft Defender for IoT





Azure IoT Central Quick Connect

Abstracts Firmware customization and registration process

- Allows Cloud IoT/Data architects to focus on developing power of the Cloud IoT platform proof of concepts.
- Connect to Microsoft Azure IoT Central and perform telemetry in minutes
- Solution Components:
 - B-U585I-IOT02A Discovery Kit
 - Reference Binary
 - Quick connect scripts
 - Cloud visualization



Security








Trusted Firmware-M (TF-M)

- Trusted Firmware for Cortex M (TF-M) implements the Secure Processing Environment (SPE) for Armv8-M, Armv8.1-M
- Trusted Firmware-M consists of:
 - Secure Boot, Control the isolation, communication and execution within SPE and with NSPE
 - Crypto, Internal Trusted Storage (ITS), Protected Storage (PS) and Attestation secure services

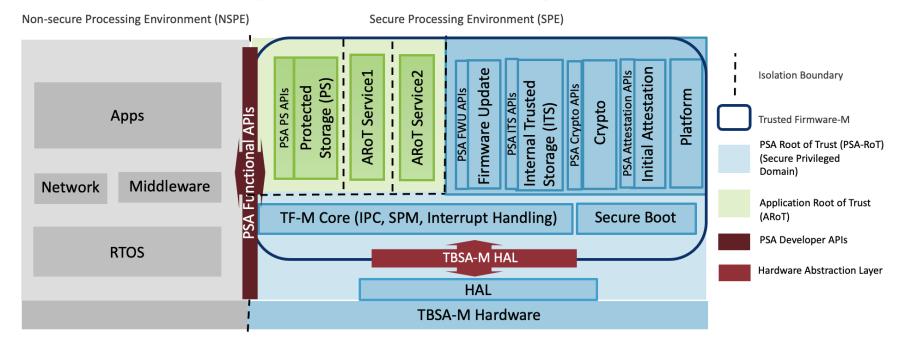




Directory Walk-Through X-CUBE-AZURE



X-CUBE-AZURE Root Directory


- Drivers
 - BSP, CMSIS, and HAL Drivers
- Middlewares
 - Both ST and Third-Party Middleware
- Projects
 - Sample Projects and applications
- Utilities
 - Additional software and patches

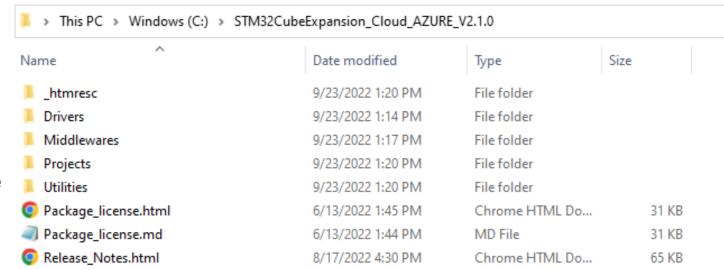



X-CUBE-AZURE Directory Structure


Project directory containing application code and documentation

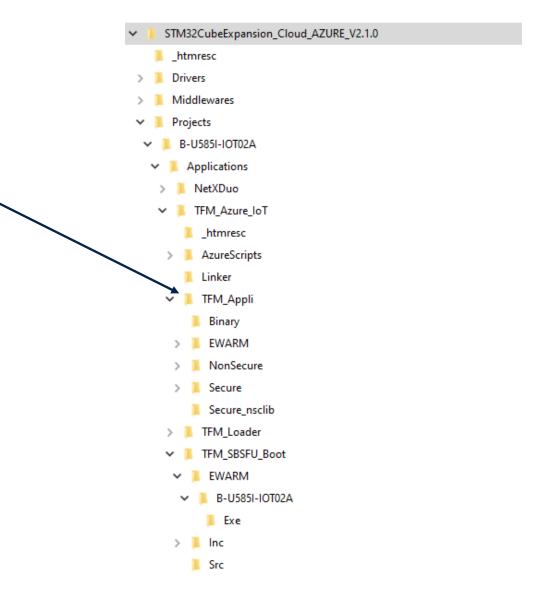



X-CUBE-AZURE TFM_Azure_loT

- Azure Scripts
 - Supporting software
- Linker
- TFM_Appli
 - Main application
- TFM_Loader
- TFM_SBSFU_Boot
 - Boot firmware and scripts
- azure-rtos.eww
 - EWARM project shortcut

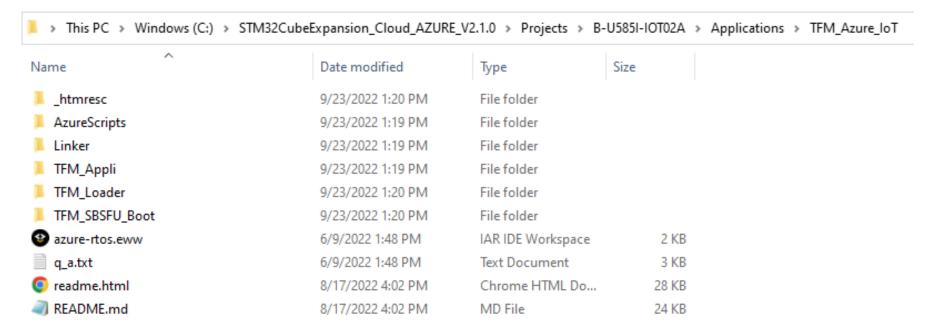



X-CUBE-AZURE Directory Structure


 Script directory that contains all the files pertaining to this hands-on





X-CUBE-AZURE TFM_Azure_loT\AzureScripts\


- Config.json
 - Configuration file for Quick Connect Script
- Requirements.txt
 - Python library requirements
- STM32U5_QuickConnect.py
 - Quick connect script for connecting B-U585I-IOT02A to Azure IoT Central

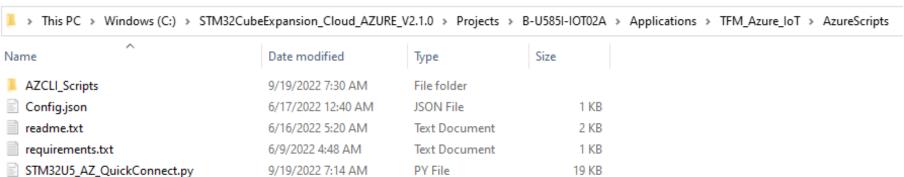



X-CUBE-AZURE Directory Structure

 Utility script directory used to set option bytes and flash firmware

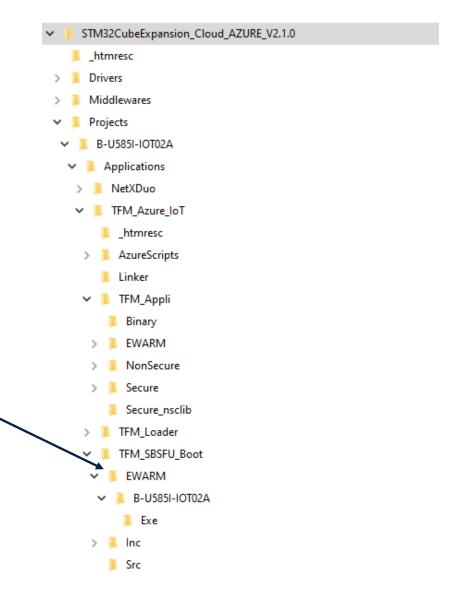



X-CUBE-AZURE TFM_Azure_IoT\TFM_SBSFU_Boot\EWARM

- regression.bat
 - Script to set option bytes on board
- TFM_UPDATE.bat
 - Flashing Script
- STM32CubeProg_Reset.bat
 - Script to reset board
- STM32U5_TrustZone_Disable.bat
 - Script to disable TZ option byte

lame ^	Date modified	Type	Size
■ B-U585I-IOT02A	9/19/2022 7:30 AM	File folder	
🖫 dataimg.bat	9/19/2022 6:45 AM	Windows Batch File	71
■ hardening.bat	9/19/2022 6:45 AM	Windows Batch File	21
🖫 keygen.bat	6/9/2022 4:48 AM	Windows Batch File	5 H
suppostbuild.bat	6/9/2022 4:48 AM	Windows Batch File	10 (
prebuild.cmd	6/9/2022 4:48 AM	Windows Command Script	11
Project.ewd	8/16/2022 6:12 AM	EWD File	53 I
Project.ewp	6/9/2022 4:48 AM	EWP File	52 I
Project.eww	6/9/2022 4:48 AM	IAR IDE Workspace	11
🛂 regression.bat	9/19/2022 6:45 AM	Windows Batch File	3 1
STM32CubeProg_Reset.bat	6/9/2022 4:48 AM	Windows Batch File	21
STM32U5_TrustZone_Disable.bat	6/9/2022 4:48 AM	Windows Batch File	21
stm32u585xx_bl2.icf	6/9/2022 4:48 AM	ICF File	3
■ TFM_UPDATE.bat	9/19/2022 6:45 AM	Windows Batch File	3



Board Distribution



Boards distribution

- Believe it or not, even at ST we have hard time to get boards. Unfortunately, we need to collect the board at the end of the workshop to use them in the next one.
- We'll disinfect the boards at the end of the workshop and before re-distribution.
- A voucher will be handed out at the end of hands-on







Hands-On: Quick Connect



Goal

Create an <u>Azure IoT Central application</u> and connect the <u>B-U585I-IOT02A - Discovery kit for IoT node</u> for bi-directional communication

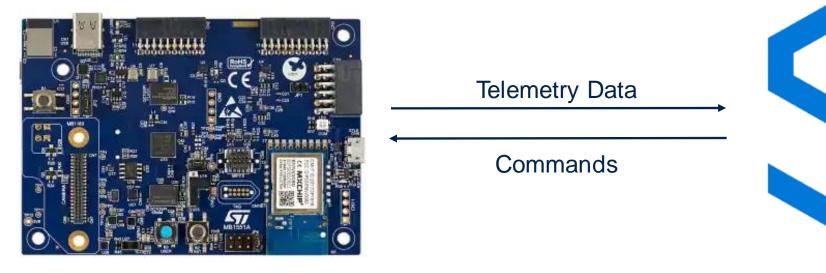

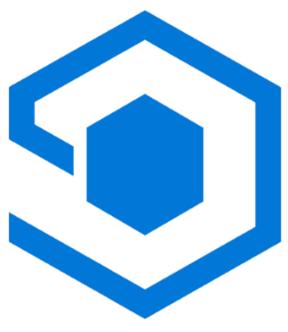


IoT Central Application





Quick Connect Flow

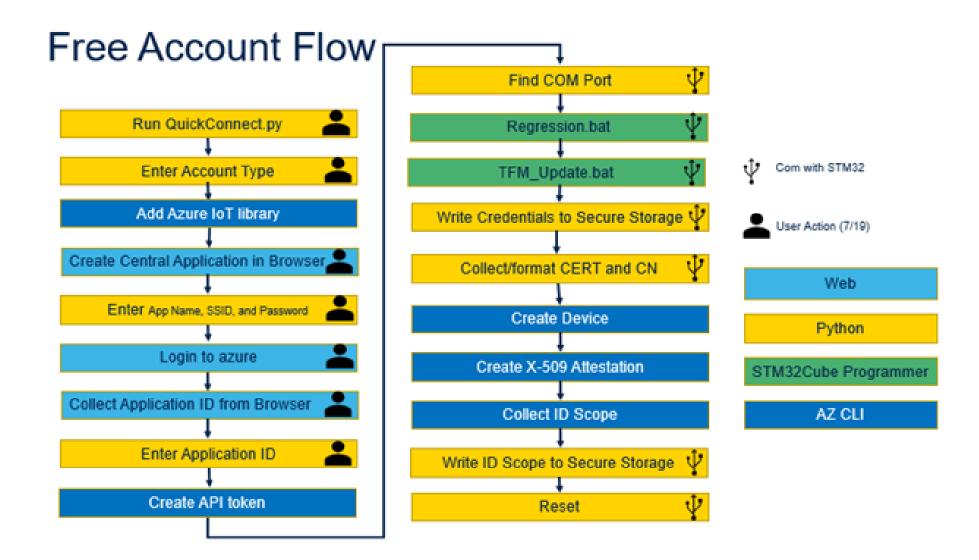



Connect your board

Connect your board to the PC







Step 1: Running Quick Connect Script

Navigate to C:\STM32CubeExpansion_Cloud_AZURE_V2.1.0\Projects\B-U585I-IOT02A\Applications\TFM_Azure_IoT\AzureScripts

This PC > Windows (C:) > STM32CubeExpansion_Cloud_AZURE_V2.1.0 > Projects > B-U585I-IOT02A > Applications > TFM_Azure_IoT > AzureSci						
Name	Date modified	Туре	Size			
AZCLI_Scripts	9/19/2022 7:30 AM	File folder				
Config.json	6/17/2022 12:40 AM	JSON File	1 KB			
readme.txt	6/16/2022 5:20 AM	Text Document	2 KB			
requirements.txt	6/9/2022 4:48 AM	Text Document	1 KB			
STM32U5_AZ_QuickConnect.py	9/19/2022 7:14 AM	PY File	19 KB			




Configuration File: Config.json

```
{} Config.json X
C: > STM32CubeExpansion_Cloud_AZURE_V2.1.0 > Projects > B-U585I-IOT02A > Applications > TFM_Azure_IoT > AzureScripts > {} Config.json > ...
           "Entered": {
                "Subscription": "y",
                "AppName": "montreal-182796",
               "SSID": "st iot demo",
               "Password": "stm32u585",
               "ResourceGroup": "montreal",
                "Location": "eastus"
           "Constant": {
                "AppTemplateID": "",
 11
                "DevTemplateID": "",
 12
               "RoleName": "admin",
               "TokenID": "adminToken",
                "Endpoint": "global.azure-devices-provisioning.net"
 15
 17
           "Generated": {
                "AppID": "3b956b68-3849-4fb9-b8dd-e4e113fbb4f1",
                "APIToken": "SharedAccessSignature sr=3b956b68-3849-4fb9-b8dd-e4e113fbb4f1&sig=KVbplyCo3QMe3I0SVY5zV
 19
                "Cert": "MIIBmjCCAT+gAwIBAgILAgnwz0Fa1CrCATkwCgYIKoZIzj0EAwIwTzELMAkGA1UEBhMCTkwxHjAcBgNVBAoMFVNUTWl
                "RegistrationID": "eval3-0209F0CF415AD42AC20139",
 21
                "IDScope": "One007B7BEE"
 22
 23
 24
```



Device Dashboard Walk-through

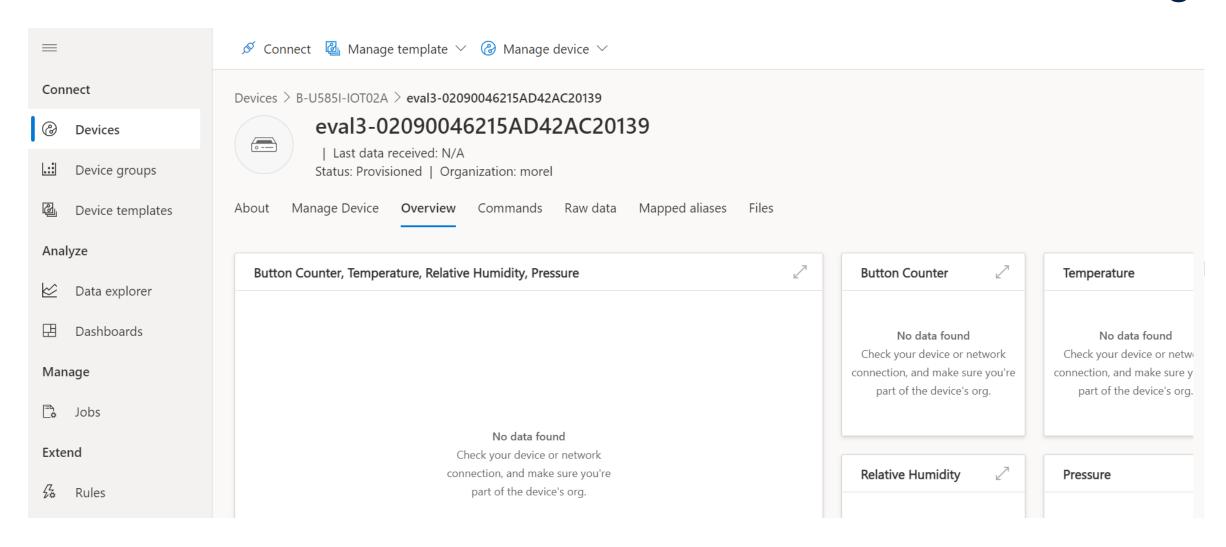



Welcome Microsoft for Cloud Hands-On



Option Byte Reset



Disabling Trust Zone

- Navigate to C:\STM32CubeExpansion_Cloud_AZURE_V2.1.0\Projects\B-U585I-IOT02A\Applications\TFM_Azure_IoT\AzureScripts
- Double Click: STM32U5_TrustZone_Disable.bat

Name	Date modified	Туре	Size
▶ B-U585I-IOT02A	9/19/2022 7:30 AM	File folder	
🖫 dataimg.bat	9/19/2022 6:45 AM	Windows Batch File	7 KE
■ hardening.bat	9/19/2022 6:45 AM	Windows Batch File	2 KE
keygen.bat	6/9/2022 4:48 AM	Windows Batch File	5 KE
postbuild.bat	6/9/2022 4:48 AM	Windows Batch File	10 KE
prebuild.cmd	6/9/2022 4:48 AM	Windows Command Script	1 KI
Project.ewd	8/16/2022 6:12 AM	EWD File	53 KI
Project.ewp	6/9/2022 4:48 AM	EWP File	52 KI
Project.eww	6/9/2022 4:48 AM	IAR IDE Workspace	1 Ki
segression.bat	9/19/2022 6:45 AM	Windows Batch File	3 KE
STM32CubeProg_Reset.bat	6/9/2022 4:48 AM	Windows Batch File	2 KE
STM32U5_TrustZone_Disable.bat	6/9/2022 4:48 AM	Windows Batch File	2 KI
stm32u585xx_bl2.icf	6/9/2022 4:48 AM	ICF File	3 K
TFM_UPDATE.bat	9/19/2022 6:45 AM	Windows Batch File	3 K



Disabling Trust Zone

Enter 'y' in to CMD window prompt:

```
C:\WINDOWS\system32\cmd.exe
Disabling trustzone requires that a trustzone enabled project is running on the board. Proceed (Y/[N])?y
```



Disabling Trust Zone

 \times

C:\WINDOWS\system32\cmd.exe

Device name : STM32U575/STM32U585

Flash size : 2 MBytes Device type : MCU

Device CPU : Cortex-M33

BL Version : 0x92

Debug in Low Power mode enabled

UPLOADING OPTION BYTES DATA ...

Bank : 0x00

Address : 0x40022040 Size : 36 Bytes

100%

Bank : 0x01

Address : 0x40022068 Size : 8 Bytes

100%

PROGRAMMING OPTION BYTES AREA ...

Bank : 0x00

Address : 0x40022040 Size : 36 Bytes



Additional Resources

- To create your own Azure Account
 - https://azure.microsoft.com/
- For additional ST support
 - https://community.st.com/s/onlinesupport
- For additional Microsoft support
 - https://learn.microsoft.com/en-us/azure/iot-fundamentals/iot-support-help



Our technology starts with You



© STMicroelectronics - All rights reserved.

ST logo is a trademark or a registered trademark of STMicroelectronics International NV or its affiliates in the EU and/or other countries. For additional information about ST trademarks, please refer to www.st.com/trademarks.

All other product or service names are the property of their respective owners.

