



Operating Manual mic+ Ultrasonic Sensors with one switching output an one analogue putput mic+25/DIU/TC mic+35/DIU/TC mic+310/DIU/TC mic+340/DIU/TC mic+600/DIU/TC

Product description

- The mic+ Sensor with one analogue output and one switching output measures the distance to an object within the detection zone contactless. A signal proportional to distance is created and the switching output is set according to the adjusted detect distance.
- The sensor automatically detects the load put to the analogue output and switches to current output or voltage output respectively.
- All settings are done with two pushbuttons and a three-digit LED-display (TouchControl).
- Three-colour LEDs indicate all operation conditions.
- Choosing between rising and falling output characteristic as well as output function NOC and NCC is possible.
- The sensors are adjustable manually

- via TouchControl or via Teach-in procedure.
- Useful additional functions are set in the Add-on-menu.
- Using the LinkControl adapter (optional accessory) all TouchControl and additional sensor parameter settings can be adjusted by a Windows® Software.

The mic+ Sensors have a blind zone in which distance measurement is not possible. The operating range indicates the distance of the sensor that can be applied with normal reflectors with sufficient function reserve. When using good reflectors, such as a calm water surface, the sensor can also be used up to its maximum range. Objects that strongly absorb (e.g. plastic foam) or diffusely reflect sound (e.g. pebble stones) can also reduce the defined operating range.

Safety Notes

- Read the operating instructions prior to start-up.
- Connection, installation and adjustment works may only be carried out by expert personnel.
- No safety component in accordance with the EU Machine Directive

Proper Use

mic+ ultrasonic sensors are used for non-contact detection of objects.

Synchronisation

If the assembly distances shown in Fig. 1 for two or more sensors are exceeded the integrated synchronisation should be used. Connect Sync/Comchannels (pin 5 at the units receptable) of all sensors (10 maximum).

		D↔a
mic+25	≥0.35 m	≥2.50 m
mic+35	≥0.40 m	≥2.50 m
mic+130	≥1.10 m	≥8.00 m
mic+340	≥2.00 m	≥18.00 m
mic+600	≥4.00 m	≥30.00 m

Fig. 1: Assembly distances, indicating synchronisation/multiplex

Multiplex mode

The Add-on-menu allows to assign an individual address »01« to »10« to each sensor connected via the Sync/ Com-channel (Pin5). The sensors perform the ultrasonic measurement sequentially from low to high address. Therefore any influence between the sensors is rejected. The address »00« is reserved to synchronisation mode and deactivates the multiplex mode. To use synchronised mode all sensors must be set to address »00«.

Installation

- → Assemble the sensor at the installation location.
- → Plug in the connector cable to the M12 connector, see Fig. 2.

	7.1	Ī
3 • 5 • 4	<u>/ </u>	colour
1	+U _B	brown
3	−U _B	blue
4	D	black
2	I/U	white
5	Sync/Com	arev

Fig. 2: Pin assignment with view onto sensor plug and colour coding of the microsonic connection cable

Start-up

- → Connect the power supply.
- → Set the parameters of the sensor manually via TouchControl (see Fig. 3 and Diagram 1)
- → or use the Teach-in procedure to adjust the detect points (see Diagram 2).

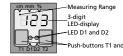


Fig. 3: TouchControl/LED display

Factory setting

- Rising analogue characteristic
- Window limits for the analogue output set to blind zone and operating range
- Switching output on NOC

Detecting distance at operating range

wictotolic

Measurement range set to maximum range

Maintenance

mic+ Sensors work maintenance free. Small amounts of dirt on the surface do not influence function. Thick layers of dirt and caked-on dirt affect sensor function and therefore must be removed.

Notes

- mic+ Sensors have internal temperature compensation. Because the sensors heat up on their own, the temperature compensation reaches its optimum working point after approx. 30 minutes of operation.
- If an object is within the set window limits of the analogue output, then LED D1 lights up green, if the object is outsite the window limits, then LED D1 lights up red.
- The load put to the analogue output is detected automatically when turning supply voltage on.
- During normal operating mode, a yellow LED D2 signals that the switching output has connected.
- During normal operating mode, the measured distance value is displayed on the LED-indicator in mm (up to 999 mm) or cm (from 100 cm). Scale switches automatically and is indicated by a point on top of the digits. Alternatively a percentage scale may be set in the add-on menu. In this connection 0% and 100% correspond to the set window limits of the analogue output.
- During Teach-in mode, the hysteresis loops are set back to factory settings.
- If no push-buttons are pressed for 20 seconds during parameter setting mode the made changes are stored and the sensor returns to normal operating mode.

Show parameters

→ In normal operating mode shortly push T1. The LED display shows »PAr.«

Each time you tap push-button T1 the actual settings of the analogue output are shown.


Contact

Sensor Partners BV

- James Wattlaan 155151 DP DrunenThe Netherlands
- +31 (0)416 37 82 39
- sensorpartners.com

Sensor Partners BVBA

- Z.1 Researchpark 310B-1731, ZellikBelgium
- +32 (0)2 464 96 90
- ☐ info@sensorpartners.com
- sensorpartners.com

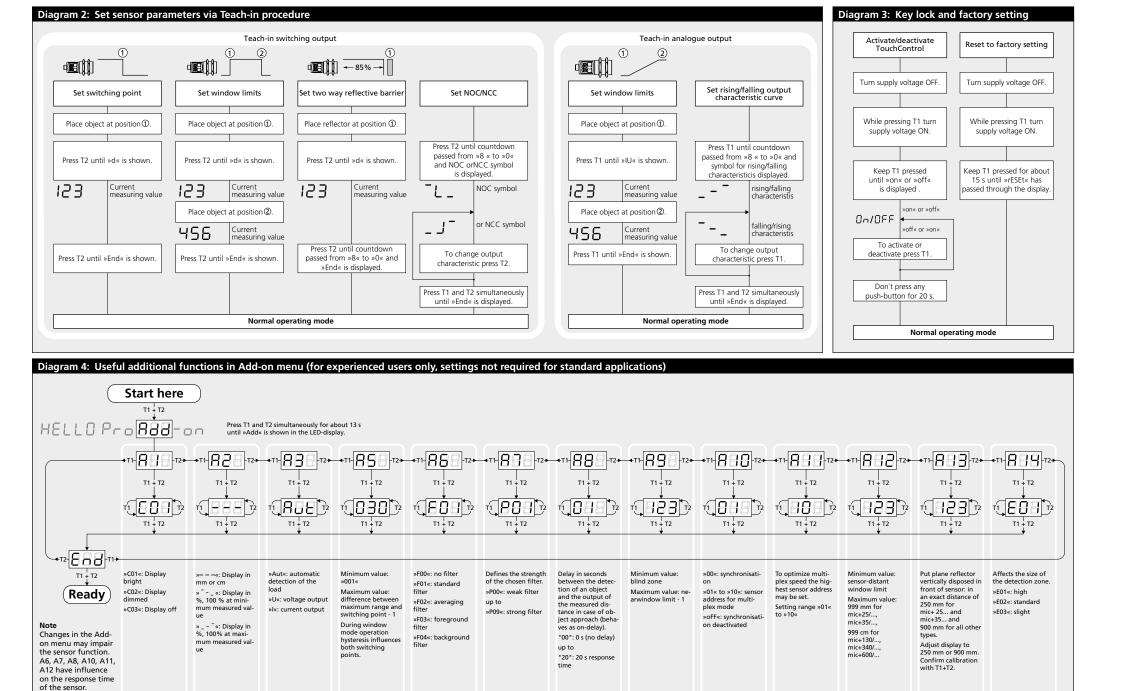

Response time

Foreground

suppression

Multiplex mode

device addressing

Multiplex mode

highest address

Measurement range

Filter strength

Measurement filter

Hysteresis

switched output

Display mode

Low power mode

Choose current


voltage output

Calibration

display

Detection zone

sensitivity

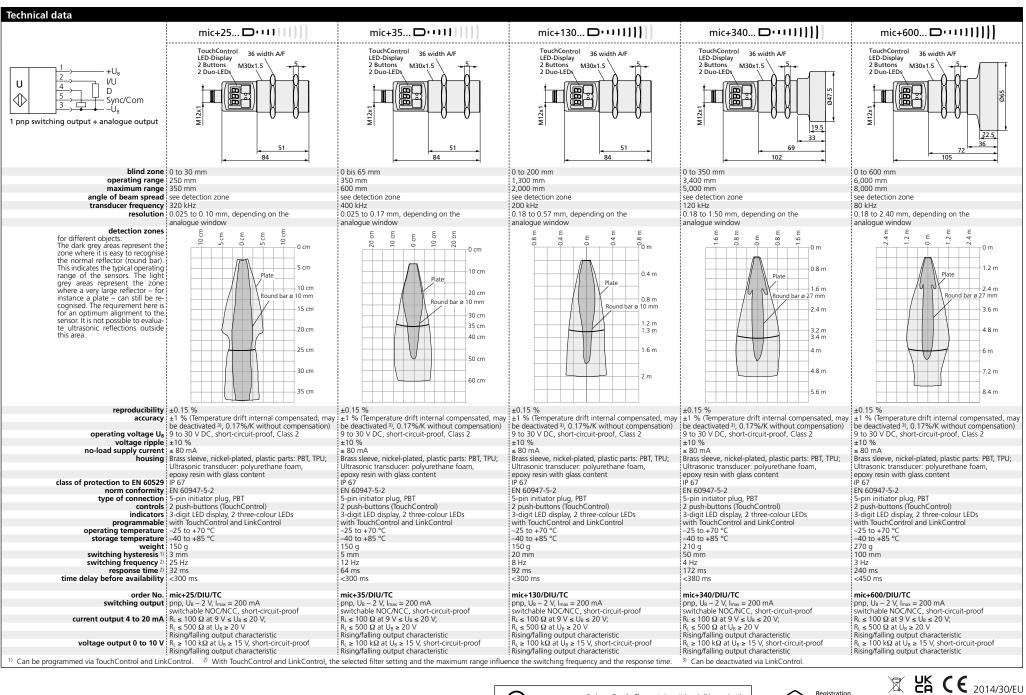



Enclosure Type 1 The proximity switches shall be used with a machinery NFPA 79 applications. Listed (CYTVI7) cable/connector assembly ramachinery NFPA 79 applications. Listed (CYTVI7) cable/connector assembly ramachine in the final installation.



