

System Description

Requirements:


- The robot should be moving without stop
- The robot should be able to avoid obstacles using ultrasonic sensor
- If there were no object detected the Robot moves forward with 80% of its max speed
 - If there is an object detected 50 cm distant from the Robot then the Robot should slow down to 30% of its maximum speed.
 - If there is an object detected 30 cm distant from the Robot then the Robot will stop then turn right and continue moving under the same distance and speed criteria
 - If there is an object detected less than 30 cm distant from the Robot then the Robot will stop then moves backward until the distance is 30 cm then stop and turn right and continue moving under the same distance and speed criteria

System Architectural Pattern:

- Monolithic System

Layered Architecture

Layers Diagram:

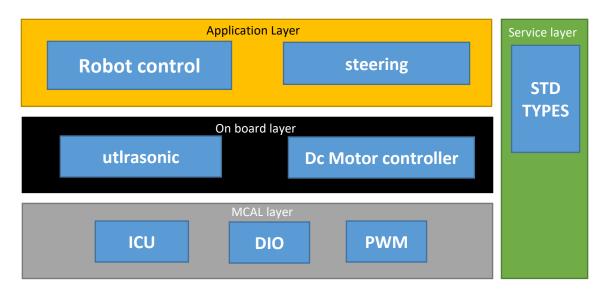

- MCAL Layer:

Layer type: closed

Description:

this layer is responsible for providing MCU interface for the required MCU internal peripheral to the upper layers

Modules:

- Timer
- ICU
- DIO
- PWM

- On Board Layer:

Layer type: closed

Description:

this layer is responsible for abstracting the MCAL layer from the application layer as it provide the interfaces for the sensors and actuators on the board which is connected to the MCU

Modules:

- ultrasonic module
- Dc motor controller (H bridge)

- Application Layer:

Layer type: closed

Description:

this layer where the application should be written in , and should use the interfaces from the Service layer and on board layer to achieve the system requirement

Modules:

- Robot control
- steering

- Service Layer

Layer type: open

Description:

this layer used to provide services for all the layers like delay operations , crc calculation , standard types

Modules:

- standard types
- software timer

SW Data Types

Name	Uint8
Туре	Unsigned char
Range	0 to 255
Description	

Name	Sint8
Type	Signed char
Range	-128 to 127
Description	

Name	Uint16
Туре	unsigned short int
Range	0 to 65,535
Description	

Name	Sint16
Туре	Signed short int
Range	-32,768 to 32,767
Description	

Name	Uint32
Туре	Unsigned long int
Range	0 to 4,294,967,295
Description	

Name	Sint32
Туре	Signed long int
Range	-2,147,483,648 to
	2,147,483,647
Description	

SW Layers

- MCAL Layer

- PWM

Description: this module should control the MCU hardware timer should be initialized as PWM generator , and should control 4 channel by disable or enable the channel or edit the duty cycle

Module Constrains:

- duty cycle can be between 0 to 65535
- there are only 4 channels can be controlled

name	Pwm_channel_t
type	enum
range	0-3
description	Pwm channel ID

name	Pwm_channel_duty_t
type	Uint16
range	0-65535
description	Represent the channel duty
	cycle

name	Pwm_state_t
type	enum
range	0-1
description	Pwm channel state 0 for
-	disabled
	1 for enabled

- Configuration data types

name	PWM_Timer_config_t
type	structure
Elements	Precaler
	preload_value
	channel_1_en
	channel_2_en
	channel_3_en
	channel_4_en
	init_1_dutycycle
	init_2_dutycycle
	init_3_dutycycle
	init_4_dutycycle
configuration	Linking configuration
discription	This structure holds the
	configuration for the pwm
	timer

Function name	PWM_init
Argument	Inputs : void output : void
	output . void
Return	void
synchronous	yes
Reentrant	no
description	Used to initialize the pwm module

Function name	PWM_set_state
Argument	Inputs: ID: Pwm_channel_t State: Pwm_state_t output: void
Return	void
synchronous	yes
Reentrant	yes
description	Used to enable or disable the pwm channel

Function name	PWM_set_dutycycle
Argument	Inputs: ID: Pwm_channel_t
Return	void
synchronous	yes
Reentrant	yes
description	Used to set channel duty cycle

- ICU

Description: this module should control the MCU hardware timer should be initialized as input capture unit , provide the high state duration of the pin assigned to it

Module Constrains:

- ICU can only be assigned to 1 pin

- APIs Data Types:

name	ICU_periode_t
type	Uint16
range	0-65535
description	Duration of the high state of a
-	pin

- Configuration data types

name	ICU_Timer_config_t
type	structure
Elements	Precaler
	Trigger_state
configuration	Linking configuration
discription	This structure holds the configuration for the ICU timer

Function name	ICU_init
Argument	Inputs : void output : void
Return	void
synchronous	yes
Reentrant	no
description	Used to initialize the ICU module

Function name	ICU_Get_duration
Argument	Inputs : void
	output : periode :ICU_periode_t*
Return	E_OK : valid result
	E_NOK : no valid result
synchronous	yes
Reentrant	yes
description	Used to enable or disable the pwm channel

- DIO

 $\pmb{\text{Description:}}$ this module should control the MCU DIO pins , should control the initialization of the pins and state of each pins

- APIs Data Types:

name	Port_id_t
type	enum
range	0-3
description	Represent the port id

name	Pin_id_t
type	enum
range	0-7
description	Represent the pin id

name	Pin_state_t
type	enum
range	0-1
description	Represent the pin state

- Configuration data types

name	pin_config_t
type	structure
Elements	Port_id pin_id direction speed pull_up_down
configuration	Linking configuration
discription	This structure holds the configuration for the ICU timer

Function name	DIO_PIN_CONFIG
Argument	Inputs: PIN_CONFIG: pin_config_t output: void
Return	void
synchronous	yes
Reentrant	no
description	Used to initialize for a specified pin

Function name	DIO_get_state
Argument	Inputs: pin : Pin_id_t
	output : void
Return	State : Pin_state_t
synchronous	yes
Reentrant	yes
description	Used to get pin state

Function name	DIO_set_state
Argument	Inputs: pin : Pin_id_t State: Pin_state_t output: void
Return	void
synchronous	yes
Reentrant	yes
description	Used to set pin state

on board layer

- ultrasonic

Description: this module is responsible to provide measure distance using ICU module and convert the ICU reading to distance

Module Constrains:

- can measure distance up to 4 meters

name	Ultrasonic_distance_t
type	Uint16
range	0-65535
description	The ultrasonic measures
	distance

name	Ultrasonic_return_t
type	eum
range	0-2
description	Represent the output state

Function name	Ultrasonic_init
Argument	Inputs : void output : void
Return	void
synchronous	yes
Reentrant	no
description	Used to initialize the ultrasonic module by initialize ICU and DIO PINS

Function name	Ultrasonic_get_read
Argument	Input : void Output : distance : Ultrasonic_distance_t *
Return	Ultra_OK ultra_waiting ultra_error
synchronous	no
Reentrant	no
description	Used to get the measured distance

- dc_motor

Description: this module is responsible to control the motors throw H bridge using DIO , PWM

Module Constrains:

- control only 4 motors

name	Motor_id_t
type	Enum
range	0-3
description	Represent the motor ID

name	Motor_dir_t
type	Enum
range	0-1
description	Represent the motor direction
	0 for backward
	1 for forward

name	Motor_speed_t
type	Uint8
range	0-100
description	Represent the motor speed precentage

name	Motor_state_t
type	enum
range	0-1
description	0 for motor_start
	1 for motor_stop

- Configuration data types

name	Motor_cfg_t
type	structure
Elements	Motor_1_pwm_ch
	Motor_2_pwm_ch
	Motor_3_pwm_ch
	Motor_4_pwm_ch
configuration	Linking configuration
discription	Structure that map every
	motor to PWM channel

Function name	Motors_init
Argument	void
Return	void
synchronous	yes
Reentrant	yes
description	Used to initialize dc motors module by initialize pwm and DIO pins

Function name	Motor_set_state
Argument	Input : state : Motor_state_t ID : Motor_id_t
Return	void
synchronous	yes
Reentrant	no
description	Sets the motor state to stop or start

Function name	Motor_get_state
Argument	Input : ID : Motor_id_t
Return	state : Motor_state_t
synchronous	yes
Reentrant	yes
description	get the motor state stop or start

Function name	Motor_configure
Argument	Input: ID: Motor_id_t : dir: Motor_dir_t : speed: Motor_speed_t
Return	void
synchronous	yes
Reentrant	no
description	Configure the motor speed and direction

- Application layer

- robot move

Description: this module responsible for reading the ultrasonic sensor and make the robot movement decision

Function name	ROBOT_INIT
Argument	void
Return	void
synchronous	yes
Reentrant	no
description	Init the robot movement by initialize the ultrasonic
	sensor

Function name	Robot_movement_update
Argument	void
Return	void
synchronous	no
Reentrant	no
description	Read the ultrasonic sensor and decide the direction of the robot move

- steering

Description: this module is responsible for converting the robot movement decisions from the robot move module to motors directions and speed

name	Steering_direction_t
type	enum
range	0-3
description	Represent the robot directions 0 for forward
	1 right
	2 left
	3 backward

name	Steering_speed_t
type	Uint8
range	0-100
description	Represent the robot speed

name	Steering_state_t
type	enum
range	0-1
description	0 for stop
	1 for start

Function name	Steering_init
Argument	void
Return	void
synchronous	yes
Reentrant	no
description	Initialize the robot_movement by initialize the ultrasonic sensor

Function name	Steering_set_direction
Argument	Input : dir : Steering_direction_t
Return	void
synchronous	yes
Reentrant	no
description	Set the robot direction

Function name	Steering_set_state
Argument	Input : state :Steering_state_t
Return	void
synchronous	yes
Reentrant	no
description	Set the robot state to stop or start