The Open Master Hearing Aid (openMHA)

4.6.1

Plugin Developers' Manual



© 2005-2018 by HörTech gGmbH, Marie-Curie-Str. 2, D-26129 Oldenburg, Germany

LICENSE AGREEMENT

This file is part of the HörTech Open Master Hearing Aid (openMHA) Copyright © 2005 2006 2007 2008 2009 2010 2012 2013 2014 2015 2016 HörTech gGmbH. Copyright © 2017 2018 HörTech gGmbH.

openMHA is free software: you can redistribute it and/or modify it under the terms of the GNU Affero General Public License as published by the Free Software Foundation, version 3 of the License.

openMHA is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Affero General Public License, version 3 for more details.

You should have received a copy of the GNU Affero General Public License, version 3 along with openMHA. If not, see http://www.gnu.org/licenses/>.

Contents

1	Over	view	1
	1.1	Structure	1
	1.2	Platform Services and Conventions	2
2	Todo	List	4
3	Modi	ule Documentation	4
	3.1	Concept of Variables and Data Exchange in the openMHA	4
	3.2		6
	3.3		10
	3.4		26
	3.5		27
	3.6	lacksquare	31
	3.7	5 1	33
	3.8		34
	3.9	a april a series a se	36
	3.10		60
	3.11		70
	3.11	rast rouner transform functions	70
4	Name		77
	4.1	ac2lsl Namespace Reference	77
	4.2	acmon Namespace Reference	77
	4.3	acsave Namespace Reference	78
	4.4	addsndfile Namespace Reference	78
	4.5	ADM Namespace Reference	79
	4.6	AuditoryProfile Namespace Reference	80
	4.7	coherence Namespace Reference	80
	4.8		81
	4.9	dc_simple Namespace Reference	81
	4.10	delay Namespace Reference	82
	4.11		82
	4.12	DynComp Namespace Reference	83
	4.13	fader_wave Namespace Reference	84
	4.14	fftfilterbank Namespace Reference	85
	4.15		85
	4.16	matrixmixer Namespace Reference	85
	4.17		85
	4.18	mha_error_helpers Namespace Reference	86
	4.19	MHA_TCP Namespace Reference	87
	4.20	mhachain Namespace Reference	89
	4.21		90
	4.22	MHAFilter Namespace Reference	90
	4.23	MHAIOJack Namespace Reference	94
	4.24	·	94
	4.25	·	94
	4.26	· · · · · · · · · · · · · · · · · · ·	95
	4.27	·	97
	4.28	•	97
	4.29		98
	4.30	·	99

	4.31	MHAOvlFilter::FreqScaleFun Namespace Reference	99
	4.32	MHAOvlFilter::ShapeFun Namespace Reference	102
	4.33	MHAParser Namespace Reference	103
	4.34	MHAParser::StrCnv Namespace Reference	108
	4.35	MHAPlugin Namespace Reference	
	4.36	MHAPlugin_Resampling Namespace Reference	
	4.37	MHAPlugin_Split Namespace Reference	
	4.38	MHASignal Namespace Reference	
	4.39	MHASndFile Namespace Reference	
	4.40	MHATableLookup Namespace Reference	
	4.41	MHAWindow Namespace Reference	
	4.42	multibandcompressor Namespace Reference	
	4.43	noisePowProposedScale Namespace Reference	
	4.44	overlapadd Namespace Reference	
	4.45	plingploing Namespace Reference	
	4.46	. •. •	
	4.47	route Namespace Reference	
	4.48	shadowfilter_begin Namespace Reference	
	4.49	shadowfilter_end Namespace Reference	
	4.50	smoothgains_bridge Namespace Reference	
	4.51	testplugin Namespace Reference	
	4.51	testplugili Namespace nelerence	120
5	Class	s Documentation	126
	5.1	ac2lsl::ac2lsl t Class Reference	126
	5.2	ac2lsl::cfg t Class Reference	
	5.3	ac2lsl::save_var_base_t Class Reference	
	5.4	ac2lsl::save_var_t< T > Class Template Reference	
	5.5	ac2lsl::save_var_t< mha_complex_t > Class Template Reference	
	5.6	ac2osc t Class Reference	
	5.7	ac2wave_if_t Class Reference	
	5.8	ac2wave t Class Reference	
	5.9	acConcat wave Class Reference	
		acConcat_wave_config Class Reference	
		acmon::ac_monitor_t Class Reference	
	5.12	acmon::acmon t Class Reference	
	5.13	acPooling_wave Class Reference	
	5.14	acPooling_wave_config Class Reference	
	5.15	acsave::acsave_t Class Reference	
	5.16	acsave::cfg_t Class Reference	
	5.17	acsave::mat4head_t Struct Reference	
	5.18	acsave::save_var_t Class Reference	
	5.19		
		acSteer Class Reference	165
		acSteer Class Reference	
	5.20	acSteer_config Class Reference	167
	5.20 5.21	acSteer_config Class Reference	167 169
	5.20 5.21 5.22	acSteer_config Class Reference	167 169 171
	5.20 5.21 5.22 5.23	acSteer_config Class Reference	167 169 171 173
	5.20 5.21 5.22 5.23 5.24	acSteer_config Class Reference	167 169 171 173 176
	5.20 5.21 5.22 5.23 5.24 5.25	acSteer_config Class Reference	167 169 171 173 176 177
	5.20 5.21 5.22 5.23 5.24 5.25 5.26	acSteer_config Class Reference acTransform_wave Class Reference acTransform_wave_config Class Reference addsndfile::addsndfile_if_t Class Reference addsndfile::level_adapt_t Class Reference addsndfile::resampled_soundfile_t Class Reference addsndfile::sndfile_t Class Reference	167 169 171 173 176 177 179
	5.20 5.21 5.22 5.23 5.24 5.25 5.26 5.27	acSteer_config Class Reference acTransform_wave Class Reference acTransform_wave_config Class Reference addsndfile::addsndfile_if_t Class Reference addsndfile::level_adapt_t Class Reference addsndfile::resampled_soundfile_t Class Reference addsndfile::sndfile_t Class Reference addsndfile::waveform_proxy_t Class Reference	167 169 171 173 176 177 179 180
	5.20 5.21 5.22 5.23 5.24 5.25 5.26 5.27 5.28	acSteer_config Class Reference acTransform_wave Class Reference acTransform_wave_config Class Reference addsndfile::addsndfile_if_t Class Reference addsndfile::level_adapt_t Class Reference addsndfile::resampled_soundfile_t Class Reference addsndfile::sndfile_t Class Reference	167 169 171 173 176 177 179 180 181

vi CONTENTS

5.30	ADM::Linearphase_FIR< F > Class Template Reference	186
5.31	adm_if_t Class Reference	
5.32	adm_rtconfig_t Class Reference	190
5.33	algo_comm_t Struct Reference	194
5.34	altplugs_t Class Reference	199
5.35	analysepath_t Class Reference	203
5.36	analysispath_if_t Class Reference	
5.37	AuditoryProfile::fmap t Class Reference	
5.38	AuditoryProfile::parser_t Class Reference	
5.39	AuditoryProfile::parser_t::ear_t Class Reference	
5.40	AuditoryProfile::parser t::fmap t Class Reference	
5.41	AuditoryProfile::profile_t Class Reference	
5.42	AuditoryProfile::profile_t::ear_t Class Reference	
5.43	bbcalib_interface_t Class Reference	
5.44	calibrator_runtime_layer_t Class Reference	
5.45	calibrator_t Class Reference	
5.46	calibrator_variables_t Class Reference	
5.47	cfg_t Class Reference	
5.48	coherence::cohflt if t Class Reference	
5.49	coherence::cohflt_t Class Reference	
5.50	coherence::vars_t Class Reference	
5.51	combc if t Class Reference	
5.52	combc t Class Reference	
5.53	_	
	comm_var_t Struct Reference	
5.54	cpuload_t Class Reference	
5.55	db_if_t Class Reference	
5.56	db_t Class Reference	
5.57	dc::dc_if_t Class Reference	
5.58	dc::dc_t Class Reference	
5.59	dc::dc_vars_t Class Reference	
5.60	dc::dc_vars_validator_t Class Reference	
5.61	dc::wb_inhib_cfg_t Class Reference	
	dc::wideband_inhib_vars_t Class Reference	
5.63	dc_simple::dc_if_t Class Reference	
5.64	dc_simple::dc_t Class Reference	
5.65	dc_simple::dc_t::line_t Class Reference	
5.66	dc_simple::dc_vars_t Class Reference	
5.67	dc_simple::dc_vars_validator_t Class Reference	
5.68	dc_simple::level_smoother_t Class Reference	
5.69	delay::interface_t Class Reference	
5.70	delaysum::delaysum_if_t Class Reference	
5.71	delaysum::delaysum_t Class Reference	
5.72	doasvm_classification Class Reference	265
5.73	doasvm_classification_config Class Reference	
5.74	doasvm_feature_extraction Class Reference	269
5.75	doasvm_feature_extraction_config Class Reference	
5.76	droptect_t Class Reference	273
5.77	ds_t Class Reference	
5.78	dynamiclib_t Class Reference	277
5.79	DynComp::dc_afterburn_rt_t Class Reference	278
5.80	DynComp::dc_afterburn_t Class Reference	280

CONTENTS vii

	DynComp::dc_afterburn_vars_t Class Reference	
	DynComp::gaintable_t Class Reference	
5.83	example1_t Class Reference	289
5.84	example2_t Class Reference	291
5.85	example3_t Class Reference	294
5.86	example4_t Class Reference	298
5.87	example5_t Class Reference	301
5.88	example6_t Class Reference	302
5.89	expression_t Class Reference	304
5.90	fader_if_t Class Reference	304
5.91	fader_wave::fader_wave_if_t Class Reference	306
5.92	fader_wave::level_adapt_t Class Reference	308
	fftfilterbank::fftfb_interface_t Class Reference	
	fftfilterbank::fftfb_plug_t Class Reference	
	frequency_translator_t Class Reference	
	fw t Class Reference	
	fw_vars_t Class Reference	
	gain::gain_if_t Class Reference	
	gain::scaler_t Class Reference	
	hanning_ramps_t Class Reference	
	hilbert shifter t Class Reference	
	identity_t Class Reference	
	iirfilter_t Class Reference	
	io_file_t Class Reference	
	io_lib_t Class Reference	
	io_parser_t Class Reference	
	io tcp_fwcb_t Class Reference	
		
	io_tcp_parser_t Class Reference	
	io_tcp_sound_t Class Reference	
	io_tcp_sound_t::float_union Union Reference	
	io_tcp_t Class Reference	
	latex_doc_t Class Reference	
	lpc Class Reference	361
	lpc_bl_predictor Class Reference	
	lpc_bl_predictor_config Class Reference	
	lpc_burglattice Class Reference	
	lpc_burglattice_config Class Reference	
	lpc_config Class Reference	
	matrixmixer::cfg_t Class Reference	
	matrixmixer::matmix_t Class Reference	
	MHA_AC::ac2matrix_helper_t Class Reference	
	MHA_AC::ac2matrix_t Class Reference	
	MHA_AC::acspace2matrix_t Class Reference	
	MHA_AC::double_t Class Reference	
	MHA_AC::float_t Class Reference	
	MHA_AC::int_t Class Reference	
	MHA_AC::spectrum_t Class Reference	
	MHA_AC::stat_t Class Reference	
5.129	MHA_AC::waveform_t Class Reference	391
5.130	mha_audio_descriptor_t Struct Reference	393
5.131	mha_audio_t Struct Reference	394

viii CONTENTS

5.132 mha_channel_info_t Struct Reference	395
5.133 mha_complex_t Struct Reference	. 397
5.134 mha_dblbuf_t< FIFO > Class Template Reference	. 397
5.135 mha_direction_t Struct Reference	
5.136 mha_drifter_fifo_t< T > Class Template Reference	404
5.137 MHA_Error Class Reference	410
5.138 mha_fifo_lw_t< T > Class Template Reference	412
5.139 mha_fifo_posix_threads_t Class Reference	415
5.140 mha_fifo_t < T > Class Template Reference	417
5.141 mha_fifo_thread_guard_t Class Reference	421
5.142 mha_fifo_thread_platform_t Class Reference	422
5.143 mha_rt_fifo_element_t< T > Class Template Reference	425
5.144 mha_rt_fifo_t< T > Class Template Reference	
5.145 mha_spec_t Struct Reference	
5.146 MHA_TCP::Async_Notify Class Reference	
5.147 MHA TCP::Client Class Reference	
5.148 MHA_TCP::Connection Class Reference	
5.149 MHA_TCP::Event_Watcher Class Reference	
5.150 MHA_TCP::OS_EVENT_TYPE Struct Reference	
5.151 MHA TCP::Server Class Reference	
5.152 MHA_TCP::sock_init_t Class Reference	
5.153 MHA_TCP::Sockaccept_Event Class Reference	
5.154 MHA_TCP::Sockread_Event Class Reference	
5.155 MHA_TCP::Sockwrite_Event Class Reference	
5.156 MHA_TCP::Thread Class Reference	
5.157 MHA TCP::Timeout Event Class Reference	
5.158 MHA_TCP::Timeout_Watcher Class Reference	
5.159 MHA_TCP::Wakeup_Event Class Reference	
5.160 mha_tictoc_t Struct Reference	
5.161 mha_wave_t Struct Reference	
5.162 mhachain::chain_base_t Class Reference	
5.163 mhachain::mhachain_t Class Reference	
5.164 mhachain::plugs_t Class Reference	. 464 . 464
5.165 mhaconfig_t Struct Reference	_
5.166 MHAEvents::connector_base_t Class Reference	
5.167 MHAEvents::connector_t< receiver_t > Class Template Reference	
5.168 MHAEvents::emitter_t Class Reference	
5.169 MHAEvents::patchbay_t< receiver_t > Class Template Reference	
5.170 MHAFilter::adapt_filter_param_t Class Reference	
5.171 MHAFilter::adapt_filter_state_t Class Reference	
5.172 MHAFilter::adapt_filter_t Class Reference	
5.173 MHAFilter::blockprocessing_polyphase_resampling_t Class Reference	
5.174 MHAFilter::complex_bandpass_t Class Reference	
5.175 MHAFilter::diff_t Class Reference	
5.176 MHAFilter::fftfilter_t Class Reference	
5.177 MHAFilter::fftfilterbank_t Class Reference	
5.178 MHAFilter::filter_t Class Reference	
5.179 MHAFilter::gamma_flt_t Class Reference	
5.180 MHAFilter::iir_filter_state_t Class Reference	
5.181 MHAFilter::iir_filter_t Class Reference	
5.182 MHAFilter::iir_ord1_real_t Class Reference	505

CONTENTS ix

5.183 MHAFilter::o1_ar_filter_t Class Reference	508
5.184 MHAFilter::o1flt_lowpass_t Class Reference	511
5.185 MHAFilter::o1flt_maxtrack_t Class Reference	514
5.186 MHAFilter::o1flt_mintrack_t Class Reference	515
5.187 MHAFilter::partitioned_convolution_t Class Reference	517
5.188 MHAFilter::partitioned_convolution_t::index_t Struct Reference	
5.189 MHAFilter::polyphase_resampling_t Class Reference	
5.190 MHAFilter::resampling_filter_t Class Reference	
5.191 MHAFilter::smoothspec_t Class Reference	
5.192 MHAFilter::thirdoctave_analyzer_t Class Reference	
5.193 MHAFilter::transfer_function_t Struct Reference	
5.194 MHAFilter::transfer_matrix_t Struct Reference	
5.195 MHAIOJack::io_jack_t Class Reference	
5.196 MHAIOJackdb::io_jack_t Class Reference	
5.197 MHAIOPortAudio::device_info_t Class Reference	
5.198 MHAIOPortAudio::io_portaudio_t Class Reference	
5.199 MHAJack::client_avg_t Class Reference	
5.200 MHAJack::client_noncont_t Class Reference	
5.201 MHAJack::client_t Class Reference	
5.202 MHAJack::port_t Class Reference	
5.203 MHAKernel::algo_comm_class_t Class Reference	
5.204 MHAKernel::comm_var_map_t Class Reference	
5.205 MHAMultiSrc::base_t Class Reference	
5.206 MHAMultiSrc::channel_t Class Reference	
5.207 MHAMultiSrc::channels_t Class Reference	
5.208 MHAMultiSrc::spectrum_t Class Reference	
5.209 MHAMultiSrc::waveform_t Class Reference	
5.210 MHAOvlFilter::band_descriptor_t Class Reference	575
5.211 MHAOvlFilter::barkscale::bark2hz_t Class Reference	576
5.212 MHAOvlFilter::barkscale::hz2bark_t Class Reference	577
5.213 MHAOvlFilter::fftfb_ac_info_t Class Reference	578
5.214 MHAOvlFilter::fftfb_t Class Reference	579
5.215 MHAOvlFilter::fftfb_vars_t Class Reference	582
5.216 MHAOvlFilter::fscale_bw_t Class Reference	584
5.217 MHAOvlFilter::fscale_t Class Reference	586
5.218 MHAOvlFilter::fspacing t Class Reference	
5.219 MHAOvlFilter::overlap_save_filterbank_analytic_t Class Reference	590
5.220 MHAOvlFilter::overlap_save_filterbank_t Class Reference	
5.221 MHAOvlFilter::overlap_save_filterbank_t::vars_t Class Reference	
5.222 MHAOvlFilter::scale_var_t Class Reference	
5.223 MHAParser::base_t Class Reference	
5.224 MHAParser::base_t::replace_t Class Reference	
5.225 MHAParser::bool mon t Class Reference	
5.226 MHAParser::bool t Class Reference	
5.227 MHAParser::c_ifc_parser_t Class Reference	
5.228 MHAParser::commit_t< receiver_t > Class Template Reference	
5.229 MHAParser::complex_mon_t Class Reference	
5.230 MHAParser::complex_t Class Reference	
· —	
5.231 MHAParser::entry_t Class Reference	
5.232 MHAParser::expression_t Class Reference	
5.233 MHAParser::float_mon_t Class Reference	621

X CONTENTS

5.234 MHAParser::float_t Class Reference	622
5.235 MHAParser::int_mon_t Class Reference	625
5.236 MHAParser::int_t Class Reference	627
5.237 MHAParser::keyword_list_t Class Reference	629
5.238 MHAParser::kw_t Class Reference	632
5.239 MHAParser::mcomplex_mon_t Class Reference	635
5.240 MHAParser::mcomplex_t Class Reference	
5.241 MHAParser::mfloat_mon_t Class Reference	
5.242 MHAParser::mfloat t Class Reference	
5.243 MHAParser::mhaconfig_mon_t Class Reference	643
5.244 MHAParser::mhapluginloader_t Class Reference	
5.245 MHAParser::mint_mon_t Class Reference	
5.246 MHAParser::monitor_t Class Reference	
5.247 MHAParser::parser_t Class Reference	
5.248 MHAParser::range_var_t Class Reference	
5.249 MHAParser::string_mon_t Class Reference	
5.250 MHAParser::string_t Class Reference	
5.251 MHAParser::variable t Class Reference	
5.252 MHAParser::vcomplex_mon_t Class Reference	
5.253 MHAParser::vcomplex_t Class Reference	
5.254 MHAParser::vfloat_mon_t Class Reference	
5.255 MHAParser::vfloat_t Class Reference	
5.256 MHAParser::vint_mon_t Class Reference	
5.257 MHAParser::vint_t Class Reference	
5.258 MHAParser::vstring_mon_t Class Reference	
5.259 MHAParser::vstring_t Class Reference	
5.260 MHAParser::window_t Class Reference	
5.261 mhaplug_cfg_t Class Reference	
5.262 MHAPlugin::cfg_chain_t< runtime_cfg_t > Class Template Reference	
5.263 MHAPlugin::config_t< runtime_cfg_t > Class Template Reference	
5.264 MHAPlugin::plugin_t< runtime_cfg_t > Class Template Reference	
5.265 MHAPlugin_Resampling::resampling_if_t Class Reference	
5.266 MHAPlugin_Resampling::resampling_t Class Reference	
5.267 MHAPlugin_Split::domain_handler_t Class Reference	
5.268 MHAPlugin_Split::dummy_threads_t Class Reference	
5.269 MHAPlugin_Split::posix_threads_t Class Reference	
5.270 MHAPlugin_Split::split_t Class Reference	
5.271 MHAPlugin_Split::splitted_part_t Class Reference	
5.272 MHAPlugin_Split::thread_platform_t Class Reference	
5.273 MHAPlugin_Split::uni_processor_t Class Reference	
5.274 mhaserver_t Class Reference	
5.275 MHASignal::async_rmslevel_t Class Reference	
C.27 C WITH Colgram as your This is considered to the control of the control o	/2h
5.276 MHASignal::delay_spec_t Class Reference	
5.276 MHASignal::delay_spec_t Class Reference	728
5.277 MHASignal::delay_t Class Reference	728 729
5.277 MHASignal::delay_t Class Reference	728 729 731
5.277 MHASignal::delay_t Class Reference	728 729 731 732
5.277 MHASignal::delay_t Class Reference	728 729 731 732 735
5.277 MHASignal::delay_t Class Reference	728 729 731 732 735 738
5.277 MHASignal::delay_t Class Reference	728 729 731 732 735 738 739
5.277 MHASignal::delay_t Class Reference	728 729 731 732 735 738 739 741

CONTENTS xi

5.285 MHASignal::minphase_t Class Reference	
5.286 MHASignal::quantizer_t Class Reference	. 755
5.287 MHASignal::ringbuffer_t Class Reference	. 756
5.288 MHASignal::schroeder_t Class Reference	760
5.289 MHASignal::spectrum_t Class Reference	. 763
5.290 MHASignal::stat_t Class Reference	768
5.291 MHASignal::subsample_delay_t Class Reference	769
5.292 MHASignal::uint_vector_t Class Reference	
5.293 MHASignal::waveform_t Class Reference	
5.294 MHASndFile::sf_t Class Reference	
5.295 MHASndFile::sf_wave_t Class Reference	
5.296 MHATableLookup::linear_table_t Class Reference	
5.297 MHATableLookup::table_t Class Reference	
5.298 MHATableLookup::xy_table_t Class Reference	
5.299 MHAWindow::bartlett_t Class Reference	
5.300 MHAWindow::base_t Class Reference	
5.301 MHAWindow::blackman_t Class Reference	
5.302 MHAWindow::fun_t Class Reference	
5.303 MHAWindow::hamming_t Class Reference	
5.304 MHAWindow::hanning_t Class Reference	
5.305 MHAWindow::rect_t Class Reference	
5.306 MHAWindow::user_t Class Reference	
5.307 mon_t Class Reference	
5.308 multibandcompressor::fftfb_plug_t Class Reference	
5.309 multibandcompressor::interface_t Class Reference	
5.310 multibandcompressor::plugin_signals_t Class Reference	
5.311 nlms_t Class Reference	
5.312 noise_t Class Reference	
5.313 noisePowProposedScale::interface_t Class Reference	. 818
5.314 noisePowProposedScale::noisePowProposed Class Reference	
5.315 overlapadd::overlapadd_if_t Class Reference	822
5.316 overlapadd::overlapadd_t Class Reference	824
5.317 parser_int_dyn Class Reference	827
5.318 plingploing::if_t Class Reference	828
5.319 plingploing::plingploing_t Class Reference	
5.320 plug_t Class Reference	
5.321 plugin_interface_t Class Reference	
5.322 pluginbrowser t Class Reference	
5.323 plugindescription_t Class Reference	
5.324 PluginLoader::config_file_splitter_t Class Reference	
5.325 PluginLoader::fourway_processor_t Class Reference	
5.326 PluginLoader::mhapluginloader_t Class Reference	
5.327 pluginloader_t Class Reference	
5.328 prediction_error Class Reference	
5.329 prediction_error_config Class Reference	
5.330 rmslevel_if_t Class Reference	
5.331 rmslevel t Class Reference	
5.332 route::interface_t Class Reference	
5.333 route::process_t Class Reference	
5.334 rt_nlms_t Class Reference	
5.335 RunOnce Struct Reference	ರರನ

xii CONTENTS

5.336 save_spec_t Class Reference	. 864
5.337 save_wave_t Class Reference	. 866
5.338 shadowfilter begin::cfg_t Class Reference	. 867
5.339 shadowfilter_begin::shadowfilter_begin_t Class Reference	. 869
5.340 shadowfilter_end::cfg_t Class Reference	
5.341 shadowfilter_end::shadowfilter_end_t Class Reference	
5.342 sine_cfg_t Struct Reference	
5.343 sine t Class Reference	
5.344 smoothgains_bridge::overlapadd_if_t Class Reference	
5.345 smoothgains_bridge::smoothspec_wrap_t Class Reference	
5.346 softclip_t Class Reference	
5.347 softclipper_t Class Reference	
5.348 softclipper_variables_t Class Reference	
5.349 spec2wave_if_t Class Reference	. 884
5.350 spec2wave_t Class Reference	. 886
5.351 spec_fader_t Class Reference	. 887
5.352 speechnoise t Class Reference	
5.353 steerbf Class Reference	
5.354 steerbf_config Class Reference	
5.355 testplugin::ac_parser_t Class Reference	
5.356 testplugin::config_parser_t Class Reference	
5.357 testplugin::if_t Class Reference	
• • •	
5.358 testplugin::signal_parser_t Class Reference	
5.359 timo_AC Class Reference	
5.360 timo_params Class Reference	
5.361 timoConfig Class Reference	
5.362 timoSmooth Class Reference	
5.363 us_t Class Reference	. 911
5.364 wave2spec_if_t Class Reference	. 913
5.365 wave2spec_t Class Reference	. 915
5.366 wavrec_t Class Reference	. 917
5.367 wavwriter_t Class Reference	
5.368 windowselector_t Class Reference	
File Documentation	924
6.1 ac2lsl.cpp File Reference	. 924
6.2 ac2osc.cpp File Reference	
6.3 ac2wave.cpp File Reference	
6.4 ac_monitor_type.cpp File Reference	
6.5 ac_monitor_type.hh File Reference	
6.6 acConcat_wave.cpp File Reference	
——————————————————————————————————————	
6.8 acmon.cpp File Reference	
6.9 acPooling_wave.cpp File Reference	
6.10 acPooling_wave.h File Reference	
6.11 acsave.cpp File Reference	
6.12 acSteer.cpp File Reference	. 927
6.13 acSteer.h File Reference	. 927
6.14 acTransform_wave.cpp File Reference	. 928
6.15 acTransform_wave.h File Reference	
6.16 addsndfile.cpp File Reference	
6.17 adm.cpp File Reference	

6

CONTENTS xiii

6.18	adm.hh File Reference	930
6.19	altplugs.cpp File Reference	931
6.20	analysemhaplugin.cpp File Reference	931
6.21	analysispath.cpp File Reference	931
6.22	auditory_profile.cpp File Reference	932
6.23	auditory_profile.h File Reference	932
6.24	browsemhaplugins.cpp File Reference	932
6.25	coherence.cpp File Reference	
6.26	combinechannels.cpp File Reference	
6.27	complex_filter.cpp File Reference	
6.28	complex filter.h File Reference	
6.29	cpuload.cpp File Reference	
6.30	db.cpp File Reference	
6.31	dc.cpp File Reference	
6.32	dc_afterburn.cpp File Reference	
6.33	dc_afterburn.h File Reference	
6.34	dc_simple.cpp File Reference	
6.35	delay.cpp File Reference	
6.36		
	delaysum.cpp File Reference	
6.37	doasym_classification.cpp File Reference	
6.38	doasym_classification.h File Reference	
6.39	doasym_feature_extraction.cpp File Reference	
6.40	doasym_feature_extraction.h File Reference	
6.41	doc_appendix.h File Reference	
6.42	doc_examples.h File Reference	
6.43	doc_frameworks.h File Reference	
6.44	doc_general.h File Reference	
6.45	doc_kernel.h File Reference	
6.46	doc_matlab.h File Reference	
6.47	doc_mhamain.h File Reference	
6.48	doc_parser.h File Reference	
6.49	doc_plugif.cpp File Reference	
6.50	doc_plugins.h File Reference	938
6.51	doc_system.h File Reference	938
6.52	doc_toolbox.h File Reference	938
6.53	downsample.cpp File Reference	938
6.54	droptect.cpp File Reference	939
6.55	example1.cpp File Reference	939
6.56	example2.cpp File Reference	939
6.57	example3.cpp File Reference	939
6.58	example4.cpp File Reference	939
6.59	example5.cpp File Reference	939
6.60	example6.cpp File Reference	940
6.61	fader_spec.cpp File Reference	940
6.62	fader_wave.cpp File Reference	
6.63	fftfilterbank.cpp File Reference	
6.64	fshift_hilbert.cpp File Reference	
6.65	gain.cpp File Reference	
6.66	gaintable.cpp File Reference	
6.67	gaintable.h File Reference	
6.68	generatemhaplugindoc.cpp File Reference	
	9	٠.٠

xiv CONTENTS

6.69	hann.cpp File Reference	943
6.70	hann.h File Reference	944
6.71	identity.cpp File Reference	944
6.72	ifftshift.cpp File Reference	944
6.73	ifftshift.h File Reference	945
6.74	iirfilter.cpp File Reference	945
6.75	lpc.cpp File Reference	945
6.76	lpc.h File Reference	
6.77	lpc_bl_predictor.cpp File Reference	
6.78	lpc_bl_predictor.h File Reference	
	lpc_burg-lattice.cpp File Reference	
6.80	lpc_burg-lattice.h File Reference	
6.81	matrixmixer.cpp File Reference	
6.82	mha.cpp File Reference	
6.83	mha.h File Reference	
6.84	mha algo comm.cpp File Reference	
6.85	mha_algo_comm.h File Reference	
6.86	mha_algo_comm.hh File Reference	
6.87	mha defs.h File Reference	
6.88	mha errno.c File Reference	
6.89	mha_errno.h File Reference	
6.90	mha_error.cpp File Reference	
6.91	mha_error.hh File Reference	
6.92	mha_event_emitter.h File Reference	
6.93	mha_events.cpp File Reference	
6.94	mha_events.h File Reference	
6.95	mha_fftfb.cpp File Reference	
6.96	mha_fftfb.hh File Reference	
6.97	mha_fifo.cpp File Reference	
6.98	mha_fifo.h File Reference	
	mha_filter.cpp File Reference	
	-	965
		966
	mha_generic_chain.h File Reference	
	mha_io_ifc.h File Reference	
	mha_multisrc.cpp File Reference	
	mha_multisrc.h File Reference	
	mha_os.cpp File Reference	
	mha_os.h File Reference	
	mha_parser.cpp File Reference	
	mha_parser.hh File Reference	
6.110	mha_plugin.hh File Reference	977
6.111	mha_profiling.c File Reference	980
6.112	mha_profiling.h File Reference	980
6.113	mha_ruby.cpp File Reference	981
6.114	mha_signal.cpp File Reference	981
	mha_signal.hh File Reference	
6.116	mha_signal_fft.h File Reference	994
	mha_tablelookup.cpp File Reference	
	mha_tablelookup.hh File Reference	
6.119	mha_tcp.cpp File Reference	995

CONTENTS xv

6.120 mha_tcp.hh File Reference	
6.121 mha_toolbox.h File Reference	. 998
6.122 mha_windowparser.cpp File Reference	. 998
6.123 mha_windowparser.h File Reference	. 998
6.124 mhachain.cpp File Reference	. 999
6.125 mhafw_lib.cpp File Reference	
6.126 mhafw_lib.h File Reference	. 999
6.127 MHAIOFile.cpp File Reference	
6.128 MHAIOJack.cpp File Reference	
6.129 MHAIOJackdb.cpp File Reference	
6.130 MHAIOParser.cpp File Reference	
6.131 MHAIOPortAudio.cpp File Reference	
6.132 MHAIOTCP.cpp File Reference	
6.133 mhajack.cpp File Reference	
6.134 mhajack.h File Reference	
6.135 mhamain.cpp File Reference	
6.136 mhapluginloader.cpp File Reference	
6.137 mhapluginloader.h File Reference	
6.138 mhasndfile.cpp File Reference	
6.139 mhasndfile.h File Reference	
6.140 multibandcompressor.cpp File Reference	
6.141 nlms_wave.cpp File Reference	
6.142 noise.cpp File Reference	
6.143 noisePowProposedScale.cpp File Reference	
6.144 overlapadd.cpp File Reference	
6.145 plingploing.cpp File Reference	
6.146 pluginbrowser.cpp File Reference	
6.147 pluginbrowser.h File Reference	
6.148 prediction_error.cpp File Reference	
6.149 prediction_error.h File Reference	
6.150 resampling.cpp File Reference	
6.151 rmslevel.cpp File Reference	.1026
6.152 route.cpp File Reference	.1026
6.153 save_spec.cpp File Reference	.1026
6.154 save_wave.cpp File Reference	.1026
6.155 shadowfilter_begin.cpp File Reference	.1027
6.156 shadowfilter_end.cpp File Reference	.1027
6.157 sine.cpp File Reference	.1027
6.158 smoothgains_bridge.cpp File Reference	.1027
6.159 softclip.cpp File Reference	.1028
6.160 spec2wave.cpp File Reference	.1028
6.161 speechnoise.cpp File Reference	
6.162 speechnoise.h File Reference	
6.163 split.cpp File Reference	
6.164 steerbf.cpp File Reference	
6.165 steerbf.h File Reference	
6.166 testalsadevice.c File Reference	
6.167 testplugin.cpp File Reference	
6.168 timoconfig.cpp File Reference	
6.169 timoconfig.h File Reference	
6.170 timoSmooth.cpp File Reference	
o. The time embetticipp into receive the control of	.100+

xvi	CONTENT

ln	ndex	1039
	6.177 windowselector.h File Reference	.1037
	6.176 windowselector.cpp File Reference	
	6.175 wavrec.cpp File Reference	.1036
	6.174 wave2spec.cpp File Reference	.1036
	6.173 upsample.cpp File Reference	.1036
	6.172 transducers.cpp File Reference	.1035
	6.171 timosmooth.h File Reference	.1035

1 Overview 1

1 Overview

The HörTech Open Master Hearing Aid (openMHA), is a development and evaluation software platform that is able to execute hearing aid signal processing in real-time on standard computing hardware with a low delay between sound input and output.

1.1 Structure

The openMHA can be split into four major components:

- The openMHA command line application (MHA) (p. 33)
- Signal processing plugins (p. 6)
- Audio input-output (IO) plugins (see io_file_t (p. 332), MHAIOJack (p. 94), io_parser_t (p. 340), io tcp parser t (p. 346))
- The openMHA toolbox library (p. 34)

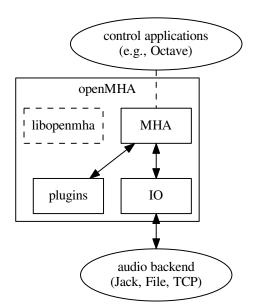


Figure 1 openMHA structure

The openMHA command line application (MHA) (p. 33) acts as a plugin host. It can load signal processing plugins as well as audio input-output (IO) plugins. Additionally, it provides the command line configuration interface and a TCP/IP based configuration interface. Several IO plugins exist: For real-time signal processing, commonly the openMHA MHAIOJack (p. 94) plugin (see plugins' manual) is used, which provides an interface to the Jack Audio Connection Kit (JACK). Other IO plugins provide audio file access or TCP/IP-based processing.

openMHA plugins (p. 6) provide the audio signal processing capabilities and audio signal handling. Typically, one openMHA plugin implements one specific algorithm. The complete virtual hearing aid signal processing can be achieved by a combination of several openMHA plugins.

1.2 Platform Services and Conventions

The openMHA platform offers some services and conventions to algorithms implemented in plugins, that make it especially well suited to develop hearing aid algorithms, while still supporting general-purpose signal processing.

1.2.1 Audio Signal Domains

As in most other plugin hosts, the audio signal in the openMHA is processed in audio chunks. However, plugins are not restricted to propagate audio signal as blocks of audio samples in the time domain another option is to propagate the audio signal in the short time Fourier transform (STFT) domain, i.e. as spectra of blocks of audio signal, so that not every plugin has to perform its own STFT analysis and synthesis. Since STFT analysis and re-synthesis of acceptable audio quality always introduces an algorithmic delay, sharing STFT data is a necessity for a hearing aid signal processing platform, because the overall delay of the complete processing has to be as short as possible.

Similar to some other platforms, the openMHA allows also arbitrary data to be exchanged between plugins through a mechanism called **algorithm communication variables** (p. 27) or short "AC vars". This mechanism is commonly used to share data such as filter coefficients or filter states.

1.2.2 Real-Time Safe Complex Configuration Changes

Hearing aid algorithms in the openMHA can export configuration settings that may be changed by the user at run time.

To ensure real-time safe signal processing, the audio processing will normally be done in a signal processing thread with real-time priority, while user interaction with configuration parameters would be performed in a configuration thread with normal priority, so that the audio processing does not get interrupted by configuration tasks. Two types of problems may occur when the user is changing parameters in such a setup:

- The change of a simple parameter exposed to the user may cause an involved recalculation of internal runtime parameters that the algorithm actually uses in processing. The duration required to perform this recalculation may be a significant portion of (or take even longer than) the time available to process one block of audio signal. In hearing aid usage, it is not acceptable to halt audio processing for the duration that the recalculation may require.
- If the user needs to change multiple parameters to reach a desired configuration state
 of an algorithm from the original configuration state, then it may not be acceptable that
 processing is performed while some of the parameters have already been changed while
 others still retain their original values. It is also not acceptable to interrupt signal processing until all pending configuration changes have been performed.

The openMHA provides a mechanism in its toolbox library to enable real-time safe configuration changes in openMHA plugins:

Basically, existing runtime configurations are used in the processing thread until the work of creating an updated runtime configuration has been completed in the configuration thread.

In hearing aids, it is more acceptable to continue to use an outdated configuration for a few more milliseconds than blocking all processing.

The openMHA toolbox library provides an easy-to-use mechanism to integrate real-time safe runtime configuration updates into every plugin.

1.2.3 Plugins can Themselves Host Other Plugins

An openMHA plugin can itself act as a plugin host. This allows to combine analysis and resynthesis methods in a single plugin. We call plugins that can themselves load other plugins "bridge plugins" in the openMHA.

When such a bridge plugin is then called by the openMHA to process one block of signal, it will first perform its analysis, then invoke (as a function call) the signal processing in the loaded plugin to process the block of signal in the analysis domain, wait to receive a processed block of signal in the analysis domain back from the loaded plugin when the signal processing function call to that plugin returns, then perform the re-synthesis transform, and finally return the block of processed signal in the original domain back to the caller of the bridge plugin.

1.2.4 Central Calibration

The purpose of hearing aid signal processing is to enhance the sound for hearing impaired listeners. Hearing impairment generally means that people suffering from it have increased hearing thresholds, i.e. soft sounds that are audible for normal hearing listeners may be imperceptible for hearing impaired listeners. To provide accurate signal enhancement for hearing impaired people, hearing aid signal processing algorithms have to be able to determine the absolute physical sound pressure level corresponding to a digital signal given to any openM← HA plugin for processing. Inside the openMHA, we achieve this with the following convention: The single-precision floating point time-domain sound signal samples, that are processed inside the openMHA plugins in blocks of short durations, have the physical pressure unit Pascal ($1Pa = 1N/m^2$). With this convention in place, all plugins can determine the absolute physical sound pressure level from the sound samples that they process. A derived convention is employed in the spectral domain for STFT signals. Due to the dependency of the calibration on the hardware used, it is the responsibility of the user of the openMHA to perform calibration measurements and adapt the openMHA settings to make sure that this calibration convention is met. We provide the plugin transducers which can be configured to perform the necessary signal adjustments.

2 Todo List

Class AuditoryProfile::profile t (p. 212)

Give more documentation; implement all parts of the auditory profile.

Class mhaconfig_t (p. 467)

Add information on number of bands and on center frequencies, or replace by **mha_audio**← **_descriptor_t** (p. 393).

Class MHAFilter::filter_t (p. 494)

Implement a more robust filter form.

Member MHAFilter::polyphase resampling t::now index (p. 526)

Index into what? What is the meaning of now?

```
Class MHAPlugin::plugin_t< runtime_cfg_t > (p. 691)
```

Describe all services provided by this class, so that the reason why it is recommended that all plugins use this class as their base is evident. Document all relevant methods and fields.

3 Module Documentation

3.1 Concept of Variables and Data Exchange in the openMHA

Accessibility of configuration variables and data exchange between plugins (processing blocks) are an important issue in the openMHA.

Accessibility of configuration variables and data exchange between plugins (processing blocks) are an important issue in the openMHA.

In general, variable types in the openMHA are distinguished by their different access methods. The variable types in the openMHA are:

- Configuration variables: Read and write accesses are possible through the openM← HA configuration language interface. Configuration variables are implemented as C++ classes with a public data member of the underlying C type. Configuration variables can be read and modified from "outside" using the configuration language. The plugin which provides the configuration variable can use the exposed data member directly. All accesses through the openMHA configuration language are checked for data type, valid range, and access restrictions.
- **Monitor variables**: Read access is possible through the openMHA configuration language. Write access is only possible from the C++ code. Internally, monitor variables have a similar C++ class interface as configuration variables.
- AC variables (algorithm communication variables (p. 27)): Any C or C++ data structure can be shared within an openMHA chain. Access management and name space is realised in openMHA chain plugin ('mhachain'). AC variables are not available to the openMHA configuration language interface, although a read-only converter plugin acmon is available.

• Runtime configuration: Algorithms usually derive more parameters (runtime configuration) from the openMHA configuration language variables. When a configuration variable changes through configuration language write access, then the runtime configuration has to be recomputed. Plugin developers are encouraged to encapsulate the runtime configuration in a C++ class, which recomputes the runtime configuration from configuration variables in the constructor. The openMHA supports lock-free and thread-safe replacement of the runtime configuration instance (see example5.cpp (p. 20) and references therein).

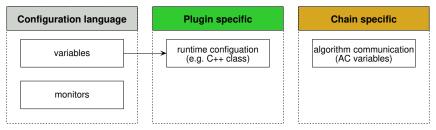


Figure 2 Variable types in the openMHA

The C++ data types are shown in the figure below. These variables can be accessed via the openMHA host application using the openMHA configuration language. For more details see 'Application engineers' manual'.

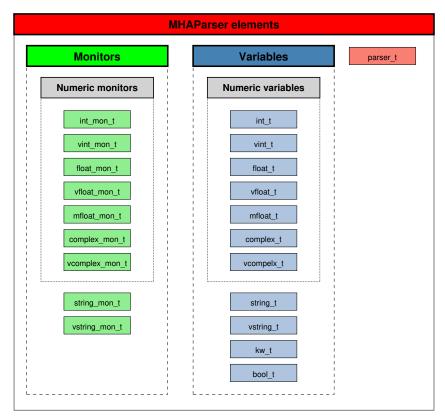


Figure 3 MHAParser elements

3.2 The openMHA Plugins (programming interface)

An openMHA plugin is the signal processing unit, usually an algorithm.

Classes

class MHAPlugin::plugin_t < runtime_cfg_t >
 The template class for C++ openMHA plugins.

Macros

- #define **MHAPLUGIN_CALLBACKS_PREFIX**(prefix, classname, indom, outdom)

 C++ wrapper macro for the plugin interface.
- #define MHAPLUGIN_CALLBACKS(plugname, classname, indom, outdom) MHAPLU
 GIN_CALLBACKS_PREFIX(MHA_STATIC_## plugname ## _,classname,indom,outdom)
 C++ wrapper macro for the plugin interface.
- #define MHAPLUGIN_DOCUMENTATION(plugname, cat, doc) MHAPLUGIN_DOCU
 MENTATION_PREFIX(MHA_STATIC_ ## plugname ## _,cat,doc)

Wrapper macro for the plugin documentation interface.

3.2.1 Detailed Description

An openMHA plugin is the signal processing unit, usually an algorithm.

openMHA plugins can be combined into processing chains. One of the configured chains can be selected for output which allows direct comparison of single algorithms or complex signal processing configurations. Algorithms within one chain can communicate with each other by sharing some of their variables, see section **Communication between algorithms** (p. 27).

The openMHA plugins can use the openMHA configuration language for their configuration. If they do so, the configuration can be changed through the framework even at run time. A description of this language can be found in section **The openMHA configuration language** (p. 33). If the algorithms should make use of the openMHA configuration language, they need to be written in C++ rather than pure C.

In the openMHA package a set of example plugins is included. These examples are the base of a step by step tutorial on how to write an openMHA plugin. See section **Writing openMHA Plugins. A step-by-step tutorial** (p. 10) for detailes.

openMHA plugins communicate with the openMHA using a simple ANSI-C interface. This way it is easy to mix plugins compiled with different C++ compilers. For convenience, we provide C++ classes which can be connected to the C++ interface. We strongly recommend the usage of these C++ wrappers. They include out-of-the box support exporting variables to the configuration interface and for thread safe configuration update.

The openMHA C++ plugin interface consists of a few number of method prototypes:

The output domain (spectrum or waveform) of an openMHA plugin will typically be the same as the input domain:

- mha_wave_t (p. 459) * process(mha_wave_t (p. 459) *): pure waveform processing
- mha_spec_t (p. 429) * process(mha_spec_t (p. 429) *): pure spectral processing

But it is also possible to implement domain transformations (from the time domain into spectrum or vice versa). The corresponding method signatures are:

- mha_spec_t (p. 429) * process(mha_wave_t (p. 459) *): Domain transformation from waveform to spectrum
- mha_wave_t (p. 459) * process(mha_spec_t (p. 429) *): Domain transformation from spectrum to waveform

For preparation and release of a plugin, the methods

- void prepare(mhaconfig_t (p. 467) &) and
- void release(void)

have to be implemented. The openMHA will call the process() method only ater the prepare method has returned and before release() is invoked. It is guarantteed by the open \leftarrow MHA framework that signal processing is performed only between calls of prepare() and release(). Each call of prepare() is followed by a call of release() (after some optional signal processing).

For configuration purposes, the plugin class has to export a method called <code>parse()</code> which implements the openMHA configuration language. We strongly recommend that you do not implement this method yourself, but by inheriting from the class <code>MHAParser::parser_t</code> (p. 651) from the openMHA toolbox, directly or indirectly (inheriting from a class that itself inherits from <code>MHAParser::parser_t</code> (p. 651)).

3.2.2 Connecting the C++ class with the C Interface

A C++ class which provides the appropriate methods can be used as an openMHA Plugin by connecting it to the C interface using the **MHAPLUGIN_CALLBACKS** (p. 9) macro.

The openMHA Toolbox library provides a base class **MHAPlugin::plugin_t** (p. 691)<T> (a template class) which can be used as the base class for a plugin class. This base class implements some necessary features for openMHA plugin developers like integration into the openMHA configuration language environment (it inherits from **MHAParser::parser_t** (p. 651)) and thread-safe runtime configuration update.

3.2.3 Error reporting

When your plugin detects a situation that it cannot handle, like input signal of the wrong signal domain at preparation time, unsupported number of input channels at preparation time, unsupported combinations of values in the plugin's variables during configuration, it should throw a C++ exception. The exception should be of type MHAError. Exceptions of this type are caught by the **MHAPLUGIN_CALLBACKS** (p. 9) macro for further error Reporting.

Throwing exceptions in response to unsupported configuration changes does not stop the signal processing. The openMHA configuration language parser will restore the previous value of that variable and report an error to the configurator, while the signal processing continues. Throwing exceptions from the signal processing thread will terminate the signal processing. Therefore, you should generally avoid throwing exceptions from the process method. Only do this if you detected a defect in your plugin, and then you should include enough information in the error message to be able to fix the defect.

- 3.2.4 Contents of the openMHA Plugin programming interface
- 3.2.5 Macro Definition Documentation

C++ wrapper macro for the plugin interface.

Parameters

classname	The name of the plugin class
indom	Input domain (wave or spec)
outdom	Output domain (wave or spec)

This macro defines all required openMHA Plugin interface functions and passes calls of these functions to the corresponding member functions of the class <code>'classname'</code>. The parameters <code>'indom'</code> and <code>'outdom'</code> specify the input and output domain of the processing method. The <code>MHAInit()</code> and <code>MHADestroy()</code> functions will create or destroy an instance of the class. The approriate member functions have to be defined in the class. It is suggested to make usage of the <code>MHAPlugin::plugin_t(p.691)</code> template class. Exceptions of type <code>MHA_Error(p.410)</code> are caught and transformed into apropriate error codes with their corresponding error messages.

3.2.5.2 #define MHAPLUGIN CALLBACKS(

```
plugname,
classname,
indom,
outdom ) MHAPLUGIN_CALLBACKS_PREFIX(MHA_STATIC_ ## plugname
## _,classname,indom,outdom)
```

C++ wrapper macro for the plugin interface.

Parameters

plugname	The file name of the plugin without the .so or .dll extension
classname	The name of the plugin class
indom	Input domain (wave or spec)
outdom	Output domain (wave or spec)

This macro defines all required openMHA Plugin interface functions and passes calls of these functions to the corresponding member functions of the class 'classname'. The parameters 'indom' and 'outdom' specify the input and output domain of the processing method. The MHA← Init() and MHADestroy() functions will create or destroy an instance of the class. The approriate member functions have to be defined in the class. It is suggested to make usage of the MH← APlugin::plugin_t (p. 691) template class. Exceptions of type MHA_Error (p. 410) are caught and transformed into apropriate error codes with their corresponding error messages.

plugname ## _,cat,doc)

Wrapper macro for the plugin documentation interface.

Parameters

plugin	The file name of the plugin without the .so or .dll extension
cat	Space separated list of categories to which belong the plugin (as const char*)
doc	Documentation of the plugin (as const char*)

This macro defines the openMHA Plugin interface function for the documentation. The categories can be any space seperated list of category names. An empty string will categorize the plugin in the category 'other'.

The documentation should contain a description of the plugin including a description of the underlying models, and a paragraph containing hints for usage. The text should be LaTeX compatible (e.g., avoid or quote underscores in the text part); equations should be formatted as LaTeX.

3.3 Writing openMHA Plugins. A step-by-step tutorial

A step-by-step tutorial on writing openMHA plugins.

A step-by-step tutorial on writing openMHA plugins.

openMHA contains a small number of example plugins as C++ source code. They are meant to help developers in understanding the concepts of openMHA plugin programming starting from the simplest example and increasing in complexity. This tutorial explains the basic parts of the example files.

3.3.1 example1.cpp

The example plugin file <code>example1.cpp</code> (p. 939) demonstrates the easiest way to implement an openMHA Plugin. It attenuates the sound signal in the first channel by multiplying the sound samples with a factor. The plugin class <code>MHAPlugin::plugin_t</code> (p. 691) exports several methods, but only two of them need a non-empty implementation: <code>prepare()</code> method is a pure virtual function and <code>process()</code> is called when signal processing starts.

Every plugin implementation should include the 'mha_plugin.hh (p. 977)' header file. C++ helper classes for plugin development are declared in this header file, and most header files needed for plugin development are included by mha plugin.hh (p. 977).

The class plugin1_t inherits from the class **MHAPlugin::plugin_t** (p. 691), which then inherits from **MHAParser::parser_t** (p. 651) – the configuration language interface in the method "parse". Our plugin class therefore exports the working "parse" method inherited from **MHA**← **Parser::parser t** (p. 651), and the plugin is visible in the openMHA configuration tree.

The constructor has to accept 3 parameters of correct types. In this simple example, we do not make use of them.

The release() method is used to free resources after signal processing. In this simple example, we do not allocate resources, so there is no need to free them.

3.3.1.1 The prepare method

Parameters

signal_info	Contains information about the input signal's parameters, see mhaconfig_t	
	(p. 467).	

The prepare() method of the plugin is called before the signal processing starts, when the input signal parameters like domain, number of channels, frames per block, and sampling rate are known. The prepare() method can check these values and raise an exception if the plugin cannot cope with them, as is done here. The plugin can also change these values if the signal processing performed in the plugin results in an output signal with different parameters. This plugin does not change the signal's parameters, therefore they are not modified here.

3.3.1.2 The signal processing method

```
mha_wave_t * process(mha_wave_t * signal)
{
   unsigned int channel = 0; // channels and frames counting starts with 0
   float factor = 0.1f;
   unsigned int frame;

   // Scale channel number "channel" by "factor":
   for(frame = 0; frame < signal->num_frames; frame++) {
      // Waveform channels are stored interleaved.
      signal->buf[signal->num_channels * frame + channel] *= factor;
   }
   // Algorithms may process data in-place and return the input signal
   // structure as their output signal:
   return signal;
}
```

Parameters

signal Pointer to the input signal structure **mha_wave_t** (p. 459).

Returns

Pointer to the output signal structure. The input signal structure may be reused if the signal has the same domain and dimensions.

The plugin works with time domain input signal (indicated by the data type **mha_wave_t** (p. 459) of the process method's parameter). It scales the first channel by a factor of 0.1. The output signal reuses the structure that previously contained the input signal (in-place processing).

3.3.1.3 Connecting the C++ class with the C plugin interface

Plugins have to export C functions as their interface (to avoid C++ name-mangling issues and other incompatibilities when mixing plugins compiled with different C++ compilers).

```
MHAPLUGIN_CALLBACKS(example1, example1_t, wave, wave)
```

This macro takes care of accessing the C++ class from the C functions required as the plugin's interface. It implements the C funtions and calls the corresponding C++ instance methods. Plugin classes should be derived from the template class **MHAPlugin::plugin_t** (p. 691) to be compatible with the C interface wrapper.

This macro also catches C++ exceptions of type MHA_Error (p. 410), when raised in the methods of the plugin class, and reports the error using an error flag as the return value of the underlying C function. It is therefore important to note that only C++ exceptions of type $MH \leftarrow A_Error$ (p. 410) may be raised by your plugin. If your code uses different Exception classes, you will have to catch them yourself before control leaves your plugin class, and maybe report the error by throwing an instance of MHA_Error (p. 410). This is important, because: (1) C++ exceptions cannot cross the plugin interface, which is in C, and (2) there is no error handling code for your exception classes in the openMHA framework anyways.

3.3.2 example2.cpp

This is another simple example of openMHA plugin written in C++. This plugin also scales one channel of the input signal, working in the time domain. The scale factor and which channel to scale (index number) are made accessible to the configuration language.

The algorithm is again implemented as a C++ class.

Parameters

scale_ch	- the channel number to be scaled
factor	 the scale factor of the scaling.

This class again inherits from the template class **MHAPlugin::plugin_t** (p. 691) for intergration with the openMHA configuration language. The two data members serve as externally visible configuration variables. All methods of this class have a non-empty implementation.

3.3.2.1 Constructor

The constructor invokes the superclass constructor with a string parameter. This string parameter serves as the help text that describes the functionality of the plugin. The constructor registers configuration variables with the openMHA configuration tree and sets their default values and permitted ranges. The minimum permitted value for both variables is zero, and there is no maximum limit (apart from the limitations of the underlying C data type). The configuration variables have to be registered with the parser node instance using the **MHAParser::parser**—**_t::insert_item** (p. 653) method.

3.3.2.2 The prepare method

Parameters

The user may have changed the configuration variables before preparing the openMHA plugin. A consequence of this is that it is not sufficient any more to check if the input signal has at least 1 audio channel.

Instead, this prepare method checks that the input signal has enough channels so that the current value of <code>scale_ch.data</code> is a valid channel index, i.e. $0 \le scale_ch.data < signal \leftarrow _info.channels$. The prepare method does not have to check that $0 \le scale_ch.data$, since this is guaranteed by the valid range setting of the configuration variable.

The prepare method then modifies the valid range of the <code>scale_ch</code> variable, it modifies the upper bound so that the user cannot set the variable to a channel index higher than the available channels. Setting the range is done using a string parameter. The prepare method contatenates a string of the form "[0,n[". n is the number of channels in the input signal, and is used here as an exclusive upper boundary. To convert the number of channels into a string, a helper function for string conversion from the openMHA Toolbox is used. This function is overloaded and works for several data types.

It is safe to assume that the value of configuration variables does not change while the prepare method executes, since openMHA preparation is triggered from a configuration language command, and the openMHA configuration language parser is busy and cannot accept other commands until all openMHA plugins are prepared (or one of them stops the process by raising an exception). As we will see later in this tutorial, the same assumption cannot be made for the process method.

3.3.2.3 The release method

```
void example2_t::release(void)
{
    scale_ch.set_range("[0,[");})
```

The release method should undo the state changes that were performed by the prepare method. In this example, the prepare method has reduced the valid range of the scale_ch, so that only valid channels could be selected during signal processing.

The release method reverts this change by setting the valid range back to its original value, "[0,[".

3.3.2.4 The signal processing method

```
mha_wave_t * example2_t::process(mha_wave_t * signal)
{
    unsigned int frame;
    for(frame = 0; frame < signal->num_frames; frame++)
        value(signal, frame, scale_ch.data) *= factor.data;
    return signal;
}
```

The processing function uses the current values of the configuration variables to scale every frame in the selected audio channel.

Note that the value of each configuration variable can change while the processing method executes, since the process method usually executes in a different thread than the configuration interface.

For this simple plugin, this is not a problem, but for more advanced plugins, it has to be taken into consideration. The next section takes a closer look at the problem.

Consistency

Assume that one thread reads the value stored in a variable while another thread writes a new value to that variable concurrently. In this case, you may have a consistency problem. You would perhaps expect that the value retrieved from the variable either (a) the old value, or (b) the new value, but not (c) something else. Yet generally case (c) is a possibility.

Fortunately, for some data types on PC systems, case (c) cannot happen. These are 32bit wide data types with a 4-byte alignment. Therefore, the values in **MHAParser::int_t** (p. 627) and **MHAParser::float_t** (p. 622) are always consistent, but this is not the case for vectors, strings, or complex values. With these, you can get a mixture of the bit patterns of old and new values, or you can even cause a memory access violation in case a vector or string grows and has to be reallocated to a different memory address.

There is also a consistency problem if you take the combination of two "safe" datatypes. The openMHA provides a mechanism that can cope with these types of problems. This thread-safe runtime configuration update mechanism is introduced in example 5.

3.3.3 example3.cpp

This example introduces the openMHA Event mechanism. Plugins that provide configuration variable can receive a callback from the parser base class when a configuration variable is accessed through the configuration language interface.

The third example performes the same processing as before, but now only even channel indices are permitted when selecting the audio channel to scale. This restriction cannot be ensured by setting the range of the channel index configuration variable. Instead, the event mechanism of openMHA configuration variables is used. Configuration variables emit 4 different events, and your plugin can connect callback methods that are called when the events are triggered. These events are:

writeaccess

• triggered on write access to a configuration variable.

valuechanged

 triggered when write access to a configuration variable actually changes the value of this variable.

readaccess

triggered after the value of the configuration variable has been read.

prereadaccess

• triggered before the value of a configuration variable is read, i.e. the value of the requested variable can be changed by the callback to implement computation on demand.

All of these callbacks are executed in the configuration thread. Therefore, the callback implementation does not have to be realtime-safe. No other updates of configuration language variables through the configuration language can happen in parallel, but your processing method can execute in parallel and may change values.

3.3.3.1 Data member declarations

```
class example3_t : public MHAPlugin::plugin_t<int> {
    MHAParser::int_t scale_ch;
    MHAParser::float_t factor;
    MHAParser::int_mon_t prepared;

MHAEvents::patchbay_t<example3_t> patchbay;
```

This plugin exposes another configuration variable, "prepared", that keeps track of the prepared state of the plugin. This is a read-only (monitor) integer variable, i.e. its value can only be changed by your plugin's C++ code. When using the configuration language interface, the value of this variable can only be read, but not changed.

The patchbay member is an instance of a connector class that connects event sources with callbacks.

3.3.3.2 Method declarations

This plugin exposes 4 callback methods that are triggered by events. Multiple events (from the same or different configuration variables) can be connected to the same callback method, if desired.

This example plugin uses the valuechanged event to check that the scale_ch configuration variable is only set to valid values.

The other callbacks only cause log messages to stdout, but the comments in the logging callbacks give a hint when listening on the events would be useful.

3.3.3.3 Example 3 constructor

```
example3_t::example3_t(algo_comm_t & ac,
                       const std::string & chain_name,
                       const std::string & algo_name)
    : MHAPlugin::plugin_t<int>("This plugin multiplies the sound signal"
                               " in one audio channel by a factor", ac),
      scale_ch("Index of audio channel to scale. Indices start from 0."
               " Only channels with even indices may be scaled.",
               "O",
               "[0,["),
      factor ("The scaling factor that is applied to the selected channel.",
             "0.1",
             "[0,["),
     prepared("State of this plugin: 0 = unprepared, 1 = prepared")
    insert_item("channel", &scale_ch);
   insert_item("factor", &factor);
    prepared.data = 0;
    insert_item("prepared", &prepared);
    patchbay.connect(&scale_ch.writeaccess, this,
                     &example3 t::on scale ch writeaccess);
    patchbay.connect(&scale_ch.valuechanged, this,
                    &example3_t::on_scale_ch_valuechanged);
    patchbay.connect(&scale_ch.readaccess, this,
                     &example3_t::on_scale_ch_readaccess);
    patchbay.connect(&scale_ch.prereadaccess, this,
                     &example3_t::on_prereadaccess);
    patchbay.connect(&factor.prereadaccess, this,
                     &example3 t::on prereadaccess);
    patchbay.connect(&prepared.prereadaccess, this,
                    &example3_t::on_prereadaccess);
}
```

The constructor of monitor variables does not take a parameter for setting the initial value. The single parameter here is the help text describing the contents of the read-only variable. If the initial value should differ from 0, then the .data member of the configuration variable has to be set to the initial value in the plugin constructor's body explicitly, as is done here for demonstration although the initial value of this monitor variable is 0.

Events and callback methods are then connected using the patchbay member variable.

3.3.3.4 The prepare method

The prepare method checks wether the current setting of the scale_ch variable is possible with the input signal dimension. It does not adjust the range of the variable, since the range alone is not sufficient to ensure all future settings are also valid: The scale channel index has to be even.

3.3.3.5 The release method

```
void example3_t::release(void)
{
   prepared.data = 0;
}
```

The release method is needed for tracking the prepared state only in this example.

3.3.3.6 The signal processing method

```
mha_wave_t * example3_t::process(mha_wave_t * signal)
{
    unsigned int frame;
    for(frame = 0; frame < signal->num_frames; frame++)
        value(signal,frame,scale_ch.data) *= factor.data;
    return signal;
}
```

The signal processing member function is the same as in example 2.

3.3.3.7 The callback methods

```
void example3_t::on_scale_ch_writeaccess()
    printf("Write access: Attempt to set scale_ch=%d.\n", scale_ch.data);
    // Can be used to track any writeaccess to the configuration, even
    // if it does not change the value. E.g. setting the name of the
    // sound file in a string configuration variable can cause a sound
    // file player plugin to start playing the sound file from the
    // beginning.
void example3_t::on_scale_ch_valuechanged()
    if (scale_ch.data & 1)
       throw MHA_Error(__FILE__,__LINE_
                        "Attempt to set scale_ch to non-even value %d",
                        scale_ch.data);
    // Can be used to recompute a runtime configuration only if some
    // configuration variable actually changed.
void example3_t::on_scale_ch_readaccess()
    printf("scale_ch has been read.\n");
    // A configuration variable used as an accumulator can be reset
    // after it has been read.
void example3_t::on_prereadaccess()
    printf("A configuration language variable is about to be read.\n");
    // Can be used to compute the value on demand.
MHAPLUGIN_CALLBACKS (example3, example3_t, wave, wave)
```

When the writeaccess or valuechanged callbacks throw an MHAError exception, then the change made to the value of the configuration variable is reverted.

If multiple event sources are connected to a single callback method, then it is not possible to determine which event has caused the callback to execute. Often, this information is not crucial, i.e. when the answer to a change of any variable in a set of variables is the same, e.g. the recomputation of a new runtime configuration that takes all variables of this set as input.

3.3.4 example4.cpp

This plugin is the same as example 3 except that it works on the spectral domain (STFT).

3.3.4.1 The Prepare method

The prepare method now checks that the signal domain is MHA SPECTRUM.

3.3.4.2 The signal processing method

```
mha_spec_t * example4_t::process(mha_spec_t * signal)
{
    unsigned int bin;
    // spectral signal is stored non-interleaved.
    mha_complex_t * channeldata =
        signal->buf + signal->num_frames * scale_ch.data;
    for(bin = 0; bin < signal->num_frames; bin++)
        channeldata[bin] *= factor.data;
    return signal;
}
```

The signal processing member function works on the spectral signal instead of the wave signal as before.

The **mha_spec_t** (p. 429) instance stores the complex (**mha_complex_t** (p. 397)) spectral signal for positive frequences only (since the waveform signal is always real). The num_frames member of **mha_spec_t** (p. 429) actually denotes the number of STFT bins.

Please note that different from **mha_wave_t** (p. 459), a multichannel signal in **mha_spec_t** (p. 429) is stored non-interleaved in the signal buffer.

Some arithmetic operations are defined on struct **mha_complex_t** (p. 397) to facilitate efficient complex computations. The *= operator used here (defined for real and for complex arguments) is one of them.

3.3.4.3 Connecting the C++ class with the C plugin interface

```
MHAPLUGIN_CALLBACKS(example4, example4_t, spec, spec)
```

When connecting a class that performs spectral processing with the C interface, use spec instead of wave as the domain indicator.

3.3.5 example5.cpp

Many algorithms use complex operations to transform the user space variables into run time configurations. If this takes a noticeable time (e.g. more than 100-500 μ sec), the update of the runtime configuration can not take place in the real time processing thread. Furthermore, the parallel access to complex structures may cause unpredictable results if variables are read while only parts of them are written to memory (cf. section **Consistency** (p. 15)). To handle these situations, a special C++ template class **MHAPlugin::plugin_t** (p. 691) was designed. This class helps keeping all access to the configuration language variables in the **configuration** thread rather than in the **processing** thread.

The runtime configuration class <code>example5_t</code> (p. 301) is the parameter of the template class <code>MHAPlugin::plugin_t</code> (p. 691). Its constructor converts the user variables into a runtime configuration. Because the constructor executes in the configuration thread, there is no harm if the constructor takes a long time. All other member functions and data members of the runtime configurations are accessed only from the signal processing thread (real-time thread).

```
class example5_t {
public:
    example5_t (unsigned int,unsigned int,mha_real_t);
    mha_spec_t* process(mha_spec_t*);
private:
    unsigned int channel;
    mha_real_t scale;
};
```

The plugin interface class inherits from the plugin template class **MHAPlugin::plugin**_← **t** (p. 691), parameterised by the runtime configuration. Configuration changes (write access to the variables) will emit a write access event of the changed variables. These events can be connected to member functions of the interface class by the help of a **MHAEvents::patchbay**← **_t** (p. 475) instance.

```
class plugin_interface_t : public MHAPlugin::plugin_t<example5_t> {
public:
    plugin_interface_t(const algo_comm_t&,const std::string&,const std::string&);
    mha_spec_t* process(mha_spec_t*);
    void prepare(mhaconfig_t&);
private:
    void update_cfg();
    /* integer variable of MHA-parser: */
    MHAParser::int_t scale_ch;
    /* float variable of MHA-parser: */
    MHAParser::float_t factor;
    /* patch bay for connecting configuration parser
        events with local member functions: */
    MHAEvents::patchbay_t<plugin_interface_t> patchbay;
};
```

The constructor of the runtime configuration analyses and validates the user variables. If the configuration is invalid, an exception of type **MHA_Error** (p. 410) is thrown. This will cause the openMHA configuration language command which caused the change to fail: The modified configuration language variable is then reset to its original value, and the error message will contain the message string of the **MHA_Error** (p. 410) exception.

In this example, the run time configuration class example5_t (p. 301) has a signal processing member function. In this function, the selected channel is scaled by the given scaling factor.

```
mha_spec_t* example5_t::process(mha_spec_t* spec)
{
    /* Scale channel number "scale_ch" by "factor": */
    for(unsigned int fr = 0; fr < spec->num_frames; fr++) {
        spec->buf[fr + channel * spec->num_frames].re *= scale;
        spec->buf[fr + channel * spec->num_frames].im *= scale;
    }
    return spec;
}
```

The constructor of the example plugin class is similar to the previous examples. A callback triggered on write access to the variables is registered using the **MHAEvents::patchbay_t** (p. 475) instance.

```
plugin_interface_t::plugin_interface_t(
   const algo_comm_t& iac,
    const std::string&,const std::string&)
    : MHAPlugin::plugin_t<example5_t>("example plugin configuration structure",iac),
      /\star initialzing variable 'scale_ch' with MHAParser::int_t(char* name, .... ) \star/
      scale_ch("channel number to be scaled", "0", "[0, ["),
      /* initialzing variable 'factor' with MHAParser::float_t(char* name, .... ) */
     factor("scale factor","1.0","[0,2]")
    /\star Register variables to the configuration parser: \star/
    insert_item("channel", &scale_ch);
    insert_item("factor", &factor);
    * On write access to the parser variables a notify callback of
    \star this class will be called. That funtion will update the runtime
    * configuration.
    patchbay.connect(&scale_ch.writeaccess,this,&plugin_interface_t::update_cfg);
    patchbay.connect(&factor.writeaccess,this,&plugin_interface_t::update_cfg);
```

The processing function can gather the latest valid runtime configuration by a call of poll_config. On success, the class member cfg points to this configuration. On error, if there is no usable runtime configuration instance, an exception is thrown. In this example, the prepare method ensures that there is a valid runtime configuration, so that in this example, no error can be raised at this point. The prepare method is always executed before the process method is called. The runtime configuration class in this example provides a signal processing method. The process method of the plugin interface calls the process method of this instance to perform the actual signal processing.

```
mha_spec_t* plugin_interface_t::process(mha_spec_t* spec)
{
    poll_config();
    return cfg->process(spec);
}
```

The prepare method ensures that a valid runtime configuration exists by creating a new runtime configuration from the current configuration language variables. If the configuration is invalid, then an exception of type **MHA_Error** (p. 410) is raised and the preparation of the openMHA fails with an error message.

The update_cfg member function is called when the value of a configuration language variable changes, or from the prepare method. It allocates a new runtime configuration and registers it for later access from the real time processing thread. The function **push_config** (p. 689) stores the configuration in a FiFo queue of runtime configurations. Once they are inserted in the FiFo, the **MHAPlugin::plugin_t** (p. 691) template is responsible for deleting runtime configuration instances stored in the FiFo. You don't need to keep track of the created instances, and you must not delete them yourself.

```
void plugin_interface_t::update_cfg()
{
    if( tftype.channels )
        push_config(new example5_t(scale_ch.data,tftype.channels,factor.data));
}
```

In the end of the example code file, the macro **MHAPLUGIN_CALLBACKS** (p. 9) defines all ANSI-C interface functions and passes them to the corresponding C++ class member functions (partly defined by the **MHAPlugin::plugin_t** (p. 691) template class). All exceptions of type **MHA_Error** (p. 410) are caught and transformed into an appropriate error code and error message.

MHAPLUGIN_CALLBACKS(example5,plugin_interface_t,spec,spec)

3.3.6 example6.cpp

This last example is the same as the previous one, but it additionally creates an 'Algorithm Communication Variable' (AC variable). It calculates the RMS level of a given channel and stores it into this variable. The variable can be accessed by any other algorithm in the same chain. To store the data onto disk, the 'acsave' plugin can be used. 'acmon' is a plugin which converts AC variables into parsable monitor variables.

In the constructor of the plugin class the variable rmsdb is registered under the name example6_rmslev as a one-dimensional AC variable of type float. For registration of other types, read access and other detailed informations please see **Communication between algorithms** (p. 27).

```
example6_t::example6_t(const algo_comm_t& iac,
                        const std::string&,const std::string&)
    : MHAPlugin::plugin_t<cfg_t>("example plugin configuration structure",iac),
/* initialzing variable 'channel_no' with MHAParser::int_t(char* name, ....) */
      channel_no("channel in which the RMS level is measured", "0", "[0, [")
    /* Register variables to the configuration parser: */
    insert_item("channel", &channel_no);
     * On write access to the parser variables a notify callback of
     * this class will be called. That funtion will update the runtime
     * configuration.
    patchbay.connect(&channel_no.writeaccess,this,&example6_t::update_cfg);
     * Propagate the level variable to all algorithms in the
     * processing chain. If multiple instances of this algorithm are
     * required, than it is necessary to use different names for this
     * variable (i.e. prefixing the name with the algorithm name
     * passed to MHAInit).
    ac.insert_var_float( ac.handle, "example6_rmslev", &rmsdb );
```

3.3.7 Debugging openMHA plugins

Suppose you would want to step through the code of your openMHA plugin with a debugger. This example details how to use the linux gdb debugger to inspect the example6_t :: prepare() (p. 303) and example6_t::process() (p. 303) routines of example6.
cpp (p. 23) example 6.

First, make sure that your plugin is compiled with the compiler option to include debugging symbols: Apply the -ggdb switch to all gcc, g++ invocations.

Once the plugin is compiled, with debugging symbols, create a test configuration. For example 6, assuming there is an audio file named input.wav in your working directory, you could create a configuration file named 'debugexample6.cfg', with the following content:

```
# debugexample6.cfg
fragsize = 64
srate = 44100
nchannels_in = 2
iolib = MHAIOFile

io.in = input.wav
io.out = output.wav
mhalib = example6
mha.channel = 1
cmd=start
```

Assuming all your binaries and shared-object libraries are in your 'bin' directory (see READ← ME.md), you could start gdb using

```
$ export MHA_LIBRARY_PATH=$PWD/bin
$ gdb $MHA_LIBRARY_PATH/mha
```

Set breakpoints in prepare and process methods, and start execution. Note that specifying the breakpoint by symbol (example6_t::prepare (p. 303)) does not yet work, as the symbol lives in the openMHA plugin that has not yet been loaded. Specifying by line number works, however. Specifying the breakpoint by symbol also works once the plugin is loaded (i.e. when the debugger stops in the first break point). You can set the breakpoints like this (example shown here is run in gdb version 7.11.1):

```
(gdb) run ?read:debugexample6.cfg
Starting program: {openMHA_directory}/bin/mha ?read:debugexample6.cfg
[Thread debugging using libthread_db enabled]
Using host libthread_db library "/lib/x86_64-linux-gnu/libthread_db.so.1".
The Open Master Hearing Aid (openMHA) server
Copyright (c) 2005-2017 HoerTech gGmbH, D-26129 Oldenburg, Germany
This program comes with ABSOLUTELY NO WARRANTY; for details see file COPYING.
This is free software, and you are welcome to redistribute it
under the terms of the GNU AFFERO GENERAL PUBLIC LICENSE, Version 3;
for details see file COPYING.
Breakpoint 1, example6_t::prepare (this=0x6478b0, tfcfg=...)
   at example6.cpp:192
          if( tfcfg.domain != MHA_WAVEFORM )
(qdb) b example6.cpp:162
Breakpoint 2 at 0x7ffff589744a: file example6.cpp, line 162.
(gdb) c
Continuing.
```

Where '{openMHA_directory}' is the directory where openMHA is located (which should also be your working directory in this case). Next stop is the process() method. You can now examine and change the variables, step through the program as needed (using, for example 'n' to step in the next line):

3.4 The MHA Framework interface

3.5 Communication between algorithms

Algorithms within one chain can share variables for communication with other algorithms.

Collaboration diagram for Communication between algorithms:

Files

file mha_algo_comm.h

Header file for Algorithm Communication.

Namespaces

· MHA AC

Functions and classes for Algorithm Communication (AC) support.

Classes

class MHA AC::spectrum t

Insert a MHASignal::spectrum_t (p. 763) class into the AC space.

class MHA_AC::waveform_t

Insert a MHASignal::waveform_t (p. 775) class into the AC space.

class MHA AC::int t

Insert a integer variable into the AC space.

class MHA_AC::float_t

Insert a float point variable into the AC space.

class MHA_AC::double_t

Insert a double precision floating point variable into the AC space.

class MHA_AC::ac2matrix_t

Copy AC variable to a matrix.

class MHA_AC::acspace2matrix_t

Copy all or a subset of all numeric AC variables into an array of matrixes.

struct algo_comm_t

A reference handle for algorithm communication variables.

struct comm var t

Algorithm communication variable structure.

Functions

• mha_spec_t MHA_AC::get_var_spectrum (algo_comm_t ac, const std::string &name)

Convert an AC variable into a spectrum.

mha_wave_t MHA_AC::get_var_waveform (algo_comm_t ac, const std::string &name)

Convert an AC variable into a waveform.

- int MHA_AC::get_var_int (algo_comm_t ac, const std::string &name)
 - Return value of an integer scalar AC variable.
- float MHA_AC::get_var_float (algo_comm_t ac, const std::string &name)

 Return value of an floating point scalar AC variable.
- std::vector< float > MHA_AC::get_var_vfloat (algo_comm_t ac, const std::string &name)

Return value of an floating point vector AC variable as standard vector of floats.

3.5.1 Detailed Description

Algorithms within one chain can share variables for communication with other algorithms.

This mechanism allows interaction between algorithms (i.e. separation of noise estimation and noise reduction algorithms, combination of dynamic compression and noise estimation). Through a set of simple C functions, algorithms can propagate variables of any type, even C++ classes, to other algorithms.

An algorithm communication handle (algo_comm_t (p. 194)) is passed at initialisation time to the constructor of each plugin class constructor (p. 691). This handle contains a reference handle, algo_comm_t::handle (p. 194), and a number of function pointers, algo_comm_t ::insert_var (p. 194) etc.. An algorithm communication variable is an object of type comm_← var_t (p. 232).

For AC variables of numeric types, openMHA Plugins for conversion into parsable monitor variables, acmon, and storage into Matlab or text files, acsave, are available.

3.5.2 Function Documentation

Convert an AC variable into a spectrum.

This function reads an AC variable and tries to convert it into a valid spectrum. The Spectrum variable is granted to be valid only for one call of the processing function.

Parameters

ac	AC handle
name	Name of the variable

Returns

Spectrum structure

Convert an AC variable into a waveform.

This function reads an AC variable and tries to convert it into a valid waveform. The waveform variable is granted to be valid only for one call of the processing function.

Parameters

ac	AC handle
name	Name of the variable

Returns

waveform structure

Return value of an integer scalar AC variable.

Parameters

ac	AC handle	
name	Name of the variable	

Returns

Variable value

Return value of an floating point scalar AC variable.

Parameters

ac	AC handle
name	Name of the variable

Returns

Variable value

Return value of an floating point vector AC variable as standard vector of floats.

Parameters

ac	AC handle	
name	Name of the variable	


Returns

Variable value

3.6 Error handling in the openMHA

Errors are reported to the user via the MHA_Error (p. 410) exception.

Collaboration diagram for Error handling in the openMHA:

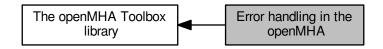

Classes

class MHA_Error

Error reporting exception class.

Macros

- #define MHA_ErrorMsg(x) MHA_Error(__FILE__,__LINE__,"%s",x)

 Throw an openMHA error with a text message.
- #define MHA_assert(x) if(!(x)) throw MHA_Error(__FILE__,__LINE__,"\"%s\" is false.",#x)

Assertion macro, which throws an MHA_Error (p. 410).

• #define MHA_assert_equal(a, b) if(a != b) throw MHA_Error(__FILE__,__LINE__←, "\"%s == %s\" is false (%s = %g, %s = %g).",#a,#b,#a,(double)(a),#b,(double)(b))

Equality assertion macro, which throws an MHA_Error (p. 410) with the values.

Functions

void mha_debug (const char *fmt,...)
 Print an info message (stderr on Linux, OutputDebugString in Windows).

3.6.1 Detailed Description

Errors are reported to the user via the **MHA_Error** (p. 410) exception.

3.6.2 Macro Definition Documentation

Throw an openMHA error with a text message.

Parameters

x Text message.

Assertion macro, which throws an MHA_Error (p. 410).

Parameters

```
x Boolean expression which should be true.
```

3.6.2.3 #define MHA_assert_equal(

```
a,
b) if( a != b) throw MHA_Error(__FILE__,__LINE__,"\"%s == %s\" is false (%s = %g, %s = %g).",#a,#b,#a,(double)(a),#b,(double)(b))
```

Equality assertion macro, which throws an MHA_Error (p. 410) with the values.

Parameters

```
a Numeric expression which can be converted to double (for printing).b Numeric expression which should be equal to a
```

3.6.3 Function Documentation

```
3.6.3.1 void mha_debug ( const char * \textit{fmt}, ... )
```

Print an info message (stderr on Linux, OutputDebugString in Windows).

3.7 The openMHA configuration language

openMHA Plugins that should use the openMHA configuration language for their configuration have to be implemented in C++ and need to include **mha_parser.hh** (p. 973).

openMHA Plugins that should use the openMHA configuration language for their configuration have to be implemented in C++ and need to include **mha_parser.hh** (p. 973).

All required classes and functions for parser access are declared in the namespace MH← AParser (p. 103). The plugin class should be derived from the class MHAParser::parser_t (p. 651) (or MHAPlugin::plugin_t (p. 691)), which symbolises a sub-parser node in the open← MHA script hierarchy. Variables of many types can be registered to the sub-parser node by calling the member function insert_item (p. 653).


The openMHA Plugin template class **MHAPlugin::plugin_t** (p. 691) together with the Plugin macro **MHAPLUGIN_CALLBACKS** (p. 9) provide the callback mappings and correct inheritance. If your plugin is based on that template class, you simply have to use the insert_item command to give access to your variables, everything else is managed internally.

A complete list of all openMHA script items is given in the description of the **MHAParser** (p. 103) namespace.

3.8 The openMHA Toolbox library

The openMHA toolbox is a static C++ library which makes it more comfortable to develop openMHA plugins.

Collaboration diagram for The openMHA Toolbox library:

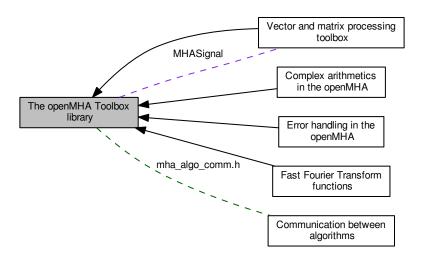

Modules

Error handling in the openMHA

Errors are reported to the user via the MHA_Error (p. 410) exception.

Vector and matrix processing toolbox

The vector and matrix processing toolbox consists of a number of classes defined in the namespace **MHASignal** (p. 114), and many functions and operators for use with the structures **mha_wave_t** (p. 459) and **mha_spec_t** (p. 429).

- Complex arithmetics in the openMHA
- · Fast Fourier Transform functions

Files

file mha_algo_comm.h

Header file for Algorithm Communication.

· file mha filter.hh

Header file for IIR filter classes.

file mha_signal.hh

Header file for audio signal handling and processing classes.

• file mha tablelookup.hh

Header file for table lookup classes.

Namespaces

MHAOvlFilter

Namespace for overlapping FFT based filter bank classes and functions.

MHAFilter

Namespace for IIR and FIR filter classes.

MHAParser

Name space for the openMHA-Parser configuration language.

MHASignal

Namespace for audio signal handling and processing classes.

MHATableLookup

Namespace for table lookup classes.

3.8.1 Detailed Description

The openMHA toolbox is a static C++ library which makes it more comfortable to develop openMHA plugins.

It contains the openMHA script language classes.

3.9 Vector and matrix processing toolbox

The vector and matrix processing toolbox consists of a number of classes defined in the namespace **MHASignal** (p. 114), and many functions and operators for use with the structures **mha**← **_wave_t** (p. 459) and **mha_spec_t** (p. 429).

Collaboration diagram for Vector and matrix processing toolbox:



Namespaces

MHASignal

Namespace for audio signal handling and processing classes.

MHAWindow

Collection of Window types.

Classes

struct mha_wave_t

Waveform signal structure.

struct mha_spec_t

Spectrum signal structure.

struct mha_audio_descriptor_t

Description of an audio fragment (planned as a replacement of mhaconfig_t (p. 467)).

struct mha_audio_t

An audio fragment in the openMHA (planned as a replacement of **mha_wave_t** (p. 459) and **mha_spec_t** (p. 429)).

class MHASignal::spectrum t

a signal processing class for spectral data (based on mha_spec_t (p. 429))

class MHASignal::waveform t

signal processing class for waveform data (based on mha_wave_t (p. 459))

class MHASignal::doublebuffer t

Double-buffering class.

class MHASignal::hilbert_t

Hilbert transformation of a waveform segment.

class MHASignal::minphase_t

Minimal phase function.

class MHASignal::uint_vector_t

Vector of unsigned values, used for size and index description of n-dimensional matrixes.

class MHASignal::matrix_t

n-dimensional matrix with real or complex floating point values.

class MHAParser::window_t

MHA configuration interface for a window function generator.

class MHASignal::delay_wave_t

Delayline containing wave fragments.

• class MHASignal::async_rmslevel_t

Class for asynchronous level metering.

Typedefs

typedef float mha_real_t
 openMHA type for real numbers

Functions

- mha_wave_t range (mha_wave_t s, unsigned int k0, unsigned int len)

 Return a time interval from a waveform chunk.
- mha_spec_t channels (mha_spec_t s, unsigned int ch_start, unsigned int nch)

 Return a channel interval from a spectrum.
- void MHASignal::for_each (mha_wave_t *s, mha_real_t(*fun)(mha_real_t))
 Apply a function to each element of a mha_wave_t (p. 459).
- mha_real_t MHASignal::lin2db (mha_real_t x)

Conversion from linear scale to dB (no SPL reference)

mha_real_t MHASignal::db2lin (mha_real_t x)

Conversion from dB scale to linear (no SPL reference)

mha_real_t MHASignal::pa2dbspl (mha_real_t x)

Conversion from linear Pascal scale to dB SPL.

- mha_real_t MHASignal::pa22dbspl (mha_real_t x, mha_real_t eps=1e-20f)

 Conversion from squared Pascal scale to dB SPL.
- mha_real_t MHASignal::dbspl2pa (mha_real_t x)

Conversion from dB SPL to linear Pascal scale.

- mha_real_t MHASignal::smp2sec (mha_real_t n, mha_real_t srate)
 conversion from samples to seconds
- mha_real_t MHASignal::sec2smp (mha_real_t sec, mha_real_t srate)
 conversion from seconds to samples
- mha_real_t MHASignal::bin2freq (mha_real_t bin, unsigned fftlen, mha_real_t srate)
 conversion from fft bin index to frequency
- mha_real_t MHASignal::freq2bin (mha_real_t freq, unsigned fftlen, mha_real_t srate)
 conversion from frequency to fft bin index
- mha_real_t MHASignal::smp2rad (mha_real_t samples, unsigned bin, unsigned fftlen) conversion from delay in samples to phase shift

mha_real_t MHASignal::rad2smp (mha_real_t phase_shift, unsigned bin, unsigned fftlen)

conversion from phase shift to delay in samples

template < class elem_type >
 std::vector < elem_type > MHASignal::dupvec (std::vector < elem_type > vec, unsigned n)

Duplicate last vector element to match desired size.

template<class elem_type >

std::vector< elem_type > MHASignal::dupvec_chk (std::vector< elem_type > vec, unsigned n)

Duplicate last vector element to match desired size, check for dimension.

bool equal_dim (const mha_wave_t &a, const mha_wave_t &b)

Test for equal dimension of waveform structures.

• bool equal dim (const mha wave t &a, const mhaconfig t &b)

Test for match of waveform dimension with mhaconfig structure.

• bool equal_dim (const mha_spec_t &a, const mha_spec_t &b)

Test for equal dimension of spectrum structures.

bool equal_dim (const mha_spec_t &a, const mhaconfig_t &b)

Test for match of spectrum dimension with mhaconfig structure.

bool equal_dim (const mha_wave_t &a, const mha_spec_t &b)

Test for equal dimension of waveform/spectrum structures.

bool equal_dim (const mha_spec_t &a, const mha_wave_t &b)

Test for equal dimension of waveform/spectrum structures.

void integrate (mha_wave_t &s)

Numeric integration of a signal vector (real values)

void integrate (mha_spec_t &s)

Numeric integration of a signal vector (complex values)

unsigned int size (const mha wave t &s)

Return size of a waveform structure.

unsigned int size (const mha_spec_t &s)

Return size of a spectrum structure.

unsigned int size (const mha_wave_t *s)

Return size of a waveform structure.

unsigned int size (const mha spec t *s)

Return size of a spectrum structure.

void clear (mha_wave_t &s)

Set all values of waveform to zero.

void clear (mha wave t *s)

Set all values of waveform to zero.

void clear (mha spec t &s)

Set all values of spectrum to zero.

void clear (mha_spec_t *s)

Set all values of spectrum to zero.

void assign (mha wave t self, mha real t val)

Set all values of waveform 'self' to 'val'.

void assign (mha_wave_t self, const mha_wave_t &val)

Set all values of waveform 'self' to 'val'.

void assign (mha_spec_t self, const mha_spec_t &val)

Set all values of spectrum 'self' to 'val'.

void timeshift (mha wave t &self, int shift)

Time shift of waveform chunk.

mha_real_t & value (mha_wave_t *s, unsigned int fr, unsigned int ch)

Access an element of a waveform structure.

const mha_real_t & value (const mha_wave_t *s, unsigned int fr, unsigned int ch)

Constant access to an element of a waveform structure.

• mha complex t & value (mha spec t *s, unsigned int fr, unsigned int ch)

Access to an element of a spectrum.

- const **mha_complex_t** & **value** (const **mha_spec_t** *s, unsigned int fr, unsigned int ch)

 Constant access to an element of a spectrum.
- mha_real_t & value (mha_wave_t &s, unsigned int fr, unsigned int ch)

Access to an element of a waveform structure.

const mha_real_t & value (const mha_wave_t &s, unsigned int fr, unsigned int ch)

Constant access to an element of a waveform structure.

mha_complex_t & value (mha_spec_t &s, unsigned int fr, unsigned int ch)

Access to an element of a spectrum.

- const **mha_complex_t** & **value** (const **mha_spec_t** &s, unsigned int fr, unsigned int ch)

 Constant access to an element of a spectrum.
- std::vector< float > std_vector_float (const mha_wave_t &)

Converts a mha_wave_t (p. 459) structure into a std::vector<float> (interleaved order).

• std::vector< std::vector< float >> std_vector_vector_float (const mha_wave_t &)

Converts a **mha_wave_t** (p. 459) structure into a std::vector< std::vector< float> > (outer vector represents channels).

 std::vector< std::vector< mha_complex_t >> std_vector_vector_complex (const mha_spec_t &)

Converts a **mha_spec_t** (p. 429) structure into a std::vector< std::vector< mha_complex_t> > (outer vector represents channels).

mha_wave_t & operator+= (mha_wave_t &, const mha_real_t &)

Addition operator.

mha_wave_t & operator+= (mha_wave_t &, const mha_wave_t &)

Addition operator.

• mha wave t & operator-= (mha wave t &, const mha wave t &)

Subtraction operator.

mha_spec_t & operator-= (mha_spec_t &, const mha_spec_t &)

Subtraction operator.

• mha_wave_t & operator*= (mha_wave_t &, const mha_real_t &)

Element-wise multiplication operator.

• mha wave t & operator*= (mha wave t &, const mha wave t &)

Element-wise multiplication operator.

mha_spec_t & operator*= (mha_spec_t &, const mha_real_t &)

Element-wise multiplication operator.

mha_spec_t & operator*= (mha_spec_t &, const mha_wave_t &)

Element-wise multiplication operator.

• mha_spec_t & operator*= (mha_spec_t &, const mha_spec_t &)

Element-wise multiplication operator.

mha_spec_t & operator/= (mha_spec_t &, const mha_spec_t &)

Element-wise division operator.

mha_wave_t & operator/= (mha_wave_t &, const mha_wave_t &)

Element-wise division operator.

• mha_spec_t & operator+= (mha_spec_t &, const mha_spec_t &)

Addition operator.

• mha spec t & operator+= (mha spec t &, const mha real t &)

Addition operator.

• mha wave t & operator = (mha wave t & self, const mha real t & arg)

Exponent operator.

void MHASignal::copy_channel (mha_spec_t &self, const mha_spec_t &src, unsigned sch, unsigned dch)

Copy one channel of a source signal.

• void MHASignal::copy_channel (mha_wave_t &self, const mha_wave_t &src, unsigned src_channel, unsigned dest_channel)

Copy one channel of a source signal.

mha_real_t MHASignal::rmslevel (const mha_spec_t &s, unsigned int channel, unsigned int fftlen)

Return RMS level of a spectrum channel.

mha_real_t MHASignal::colored_intensity (const mha_spec_t &s, unsigned int channel, unsigned int fftlen, mha_real_t sqfreq_response[])

Colored spectrum intensity.

• mha_real_t MHASignal::maxabs (const mha_spec_t &s, unsigned int channel)

Find maximal absolute value.

mha_real_t MHASignal::rmslevel (const mha_wave_t &s, unsigned int channel)

Return RMS level of a waveform channel.

mha real t MHASignal::maxabs (const mha wave t &s, unsigned int channel)

Find maximal absolute value.

mha_real_t MHASignal::maxabs (const mha_wave_t &s)

Find maximal absolute value.

mha_real_t MHASignal::max (const mha_wave_t &s)

Find maximal value.

• mha real t MHASignal::min (const mha wave t &s)

Find minimal value.

mha_real_t MHASignal::sumsqr_channel (const mha_wave_t &s, unsigned int channel)

Calculate sum of squared values in one channel.

• mha_real_t MHASignal::sumsqr_frame (const mha_wave_t &s, unsigned int frame)

Calculate sum over all channels of squared values.

void conjugate (mha spec t &self)

Replace (!) the value of this **mha_spec_t** (p. 429) with its conjugate.

3.9.1 Detailed Description

The vector and matrix processing toolbox consists of a number of classes defined in the namespace **MHASignal** (p. 114), and many functions and operators for use with the structures **mha**← **_wave_t** (p. 459) and **mha_spec_t** (p. 429).

- 3.9.2 Typedef Documentation
- 3.9.2.1 typedef float mha_real_t

openMHA type for real numbers

This type is expected to be allways the C-type 'float' (IEEE 754 single).

3.9.3 Function Documentation

Return a time interval from a waveform chunk.

A waveform chunk containing a time intervall of a larger waveform chunk is returned. The number of channels remains constant. The data of the output waveform structure points to the data of the input structure, i.e., write access to the output waveform chunk modifies the corresponding entries in the input chunk.

Parameters

s	Waveform structure
k0	Index of first value in output
len	Number of frames in output

Returns

Waveform structure representing the sub-interval.

Return a channel interval from a spectrum.

Parameters

s	Input spectrum
ch_start	Index of first channel in output
nch	Number of channels in output

Returns

Spectrum structure representing the sub-interval.

Apply a function to each element of a **mha_wave_t** (p. 459).

Parameters

s	Pointer to a mha_wave_t (p. 459) structure	
fun	Function to be applied (one argument)	

Conversion from linear scale to dB (no SPL reference)

Parameters

```
x Linear input.
```

Conversion from dB scale to linear (no SPL reference)

Parameters

```
x dB input.
```

Conversion from linear Pascal scale to dB SPL.

Parameters

```
x Linear input.
```

Conversion from squared Pascal scale to dB SPL.

Parameters

X	squared pascal input
eps	minimum squared-pascal value

Conversion from dB SPL to linear Pascal scale.

Parameters

conversion from samples to seconds

Parameters

n	number of samples	
srate	sampling rate / Hz	

conversion from seconds to samples

Parameters

sec	time in seconds
srate	sampling rate / Hz

Returns

number of samples, generally has non-zero fractional part

conversion from fft bin index to frequency

Parameters

bin	index of fft bin, index 0 has dc
fftlen	FFT length
srate	sampling frequency / Hz

Returns

frequency of fft bin / Hz

conversion from frequency to fft bin index

Parameters

freq	frequency / Hz
fftlen	FFT length
srate	sampling frequency / Hz

Returns

0-based index of fft bin, generally has non-zero fractional part

conversion from delay in samples to phase shift

Compute phase shift that needs to be applied to fft spectrum to achieve the desired delay.

Parameters

samples	delay in samples. Positive delay: shift current signal to future.
bin	index of fft bin, index 0 has dc (index 0 and nyqvist bin cannot be delayed)
fftlen	FFT length

Returns

The phase shift in radiant that needs to be applied to fft bin to achieve the desired delay. A positive delay requires a negative phase shift. If required phase shift is >pi or <-pi, then the desired delay cannot be applied in the fft domain with given parameters. Required phase shifts close to pi should not be used. If bin is 0 or nyqvist, returns 0 phase shift.

conversion from phase shift to delay in samples

Compute delay in samples that is achieved by a phase shift.

Parameters

phase_shift	phase shift in radiant
bin	index of fft bin, index 0 has dc (index 0 and nyqvist bin cannot be delayed)
fftlen	FFT length

Returns

The delay in samples achieved by applying the phase shift. A negative phase shift causes a positive delay: shifts current signal to future.

```
3.9.3.15 template < class elem_type > std::vector < elem_type > MHASignal::dupvec ( std::vector < elem_type > vec, unsigned n)
```

Duplicate last vector element to match desired size.

Parameters

vec	Input vector.
n	Target number of elements.

Return values

```
Resized vector.
```

```
3.9.3.16 template < class elem_type > std::vector < elem_type > MHASignal::dupvec_chk ( std::vector < elem_type > vec, unsigned n)
```

Duplicate last vector element to match desired size, check for dimension.

The input dimension can be either 1 or the target length.

Parameters

vec	Input vector.
n	Target number of elements.

Return values

```
Resized vector.
```

```
3.9.3.17 bool equal_dim (

const mha_wave_t & a,

const mha wave t & b ) [inline]
```

Test for equal dimension of waveform structures.

```
3.9.3.18 bool equal_dim (

const mha_wave_t & a,

const mhaconfig_t & b ) [inline]
```

Test for match of waveform dimension with mhaconfig structure.

```
3.9.3.19 bool equal_dim (

const mha_spec_t & a,

const mha spec_t & b) [inline]
```

Test for equal dimension of spectrum structures.

```
3.9.3.20 bool equal_dim (

const mha_spec_t & a,

const mhaconfig_t & b ) [inline]
```

Test for match of spectrum dimension with mhaconfig structure.

```
3.9.3.21 bool equal_dim (

const mha_wave_t & a,

const mha spec t & b ) [inline]
```

Test for equal dimension of waveform/spectrum structures.

Warning

Waveform structures **mha_wave_t** (p. 459) use interleaved data order, while spectrum structures **mha_spec_t** (p. 429) use non-interleaved.

```
3.9.3.22 bool equal_dim (

const mha_spec_t & a,

const mha_wave_t & b ) [inline]
```

Test for equal dimension of waveform/spectrum structures.

Warning

Waveform structures **mha_wave_t** (p. 459) use interleaved data order, while spectrum structures **mha_spec_t** (p. 429) use non-interleaved.

```
3.9.3.23 void integrate (
mha_wave_t & s )
```

Numeric integration of a signal vector (real values)

Parameters

```
s Input signal vector
```

```
3.9.3.24 void integrate (
mha_spec_t & s )
```

Numeric integration of a signal vector (complex values)

Parameters

```
s Input signal vector
```

```
3.9.3.25 unsigned int size (

const mha wave t & s ) [inline]
```

Return size of a waveform structure.

```
3.9.3.26 unsigned int size (
                    const mha_spec_t & s ) [inline]
Return size of a spectrum structure.
3.9.3.27 unsigned int size (
                    const mha_wave_t * s ) [inline]
Return size of a waveform structure.
3.9.3.28 unsigned int size (
                     const mha_spec_t * s ) [inline]
Return size of a spectrum structure.
3.9.3.29 void clear (
                     mha_wave_t & s ) [inline]
Set all values of waveform to zero.
3.9.3.30 void clear (
                     mha_wave_t * s ) [inline]
Set all values of waveform to zero.
3.9.3.31 void clear (
                     mha_spec_t & s ) [inline]
Set all values of spectrum to zero.
3.9.3.32 void clear (
                     mha_spec_t * s ) [inline]
Set all values of spectrum to zero.
3.9.3.33 void assign (
                     mha wave t self,
                     mha real t val ) [inline]
```

Set all values of waveform 'self' to 'val'.

Parameters

self	Waveform to be modified.
val	Value to be assigned to all entries of waveform.

```
3.9.3.34 void assign (

mha_wave_t self,

const mha_wave_t & val )
```

Set all values of waveform 'self' to 'val'.

Parameters

self	Waveform to be modified.
val	Source waveform structure.

```
3.9.3.35 void assign (

mha_spec_t self,

const mha_spec_t & val )
```

Set all values of spectrum 'self' to 'val'.

Parameters

self	Spectrum to be modified.
val	Source spectrum.

```
3.9.3.36 void timeshift (

mha_wave_t & self,

int shift )
```

Time shift of waveform chunk.

Shifted areas are filled with zeros.

Parameters

self	Waveform chunk to be shifted
shift	Shift amount, positive values shift to later times

Access an element of a waveform structure.

Parameters

s	Waveform structure
fr	Frame number
ch	Channel number

Returns

Reference to element

Constant access to an element of a waveform structure.

Parameters

s	Waveform structure
fr	Frame number
ch	Channel number

Returns

Reference to element

Access to an element of a spectrum.

Parameters

s	Spectrum structure
fr	Bin number
ch	Channel number

Returns

Reference to element

Constant access to an element of a spectrum.

Parameters

s	Spectrum structure
fr	Bin number
ch	Channel number

Returns

Reference to element

Access to an element of a waveform structure.

Parameters

s	Waveform structure
fr	Frame number
ch	Channel number

Returns

Reference to element

Constant access to an element of a waveform structure.

Parameters

s	Waveform structure
fr	Frame number
ch	Channel number

Returns

Reference to element

Access to an element of a spectrum.

Parameters

s	Spectrum structure
fr	Bin number
ch	Channel number

Returns

Reference to element

Constant access to an element of a spectrum.

Parameters

s	Spectrum structure
fr	Bin number
ch	Channel number

Returns

Reference to element

Converts a **mha_wave_t** (p. 459) structure into a std::vector<float> (interleaved order).

Warning

This function is not real-time safe. Do not use in signal processing thread.

Converts a **mha_wave_t** (p. 459) structure into a std::vector< std::vector<float> > (outer vector represents channels).

Warning

This function is not real-time safe. Do not use in signal processing thread.

Converts a **mha_spec_t** (p. 429) structure into a std::vector< std::vector<mha_complex_t>> (outer vector represents channels).

Warning

This function is not real-time safe. Do not use in signal processing thread.

Addition operator.

Addition operator.

Subtraction operator.

Subtraction operator.

```
3.9.3.52 mha_wave_t& operator*= (
                    mha_wave_t &,
                    const mha real t & )
Element-wise multiplication operator.
3.9.3.53 mha_wave_t& operator*= (
                    mha wave t&,
                    const mha wave t & )
Element-wise multiplication operator.
3.9.3.54 mha spec t& operator*= (
                    mha spec t&,
                    const mha real t & )
Element-wise multiplication operator.
3.9.3.55 mha_spec_t& operator*= (
                    mha_spec_t &,
                    const mha_wave_t & )
Element-wise multiplication operator.
3.9.3.56 mha_spec_t& operator*= (
                    mha_spec_t &,
                    const mha spec t & )
Element-wise multiplication operator.
3.9.3.57 mha_spec_t& operator/= (
                    mha_spec_t &,
                    const mha_spec_t & )
Element-wise division operator.
3.9.3.58 mha_wave_t& operator/= (
                    mha_wave_t &,
                    const mha_wave_t & )
Element-wise division operator.
3.9.3.59 mha spec t& operator+= (
                    mha_spec_t &,
                    const mha_spec_t & )
```

Addition operator.

Addition operator.

Exponent operator.

Warning

This overwrites the xor operator!

Copy one channel of a source signal.

Parameters

self	Destination.
src	Source
sch	Source channel number
dch	Destination channel number

Copy one channel of a source signal.

Parameters

self	Destination.
src	Source
src_channel	Source channel number
dest channel	Destination channel number

Return RMS level of a spectrum channel.

Parameters

S	Input spectrum
channel	Channel number to be tested
fftlen	FFT length (to correctly count the level of the Nyquist bin)

Returns

RMS level in Pa

Colored spectrum intensity.

computes the squared sum of the spectrum after filtering with the frequency response

Parameters

S	Input spectrum
channel	Channel number to be tested
fftlen	FFT length (to correctly count the level of the Nyquist bin)
sqfreq_response	A squared weighting factor for every fft bin.

Returns

sum of squares. Root of this is the colored level in Pa

Find maximal absolute value.

Parameters

s	Input signal
channel	Channel to be tested

Returns

maximum absolute value

Return RMS level of a waveform channel.

Parameters

s	Input waveform signal
channel	Channel number to be tested

Returns

RMS level in Pa

Find maximal absolute value.

Parameters

s Input signal	
channel	Channel to be tested

Returns

maximum absolute value

Find maximal absolute value.

Parameters

```
s Input signal
```

Returns

maximum absolute value

```
3.9.3.70 mha_real_t MHASignal::max (
const mha_wave_t & s )
```

Find maximal value.

Parameters

```
s Input signal
```

Returns

maximum absolute value

```
3.9.3.71 mha_real_t MHASignal::min (
const mha_wave_t & s )
```

Find minimal value.

Parameters

```
s Input signal
```

Returns

maximum absolute value

Calculate sum of squared values in one channel.

s	Input signal
channel	Channel

Returns

$$\sum x^2$$

Calculate sum over all channels of squared values.

Parameters

s Input signal	
frame	Frame number


Returns

$$\textstyle\sum x^2$$

Replace (!) the value of this **mha_spec_t** (p. 429) with its conjugate.

3.10 Complex arithmetics in the openMHA

Collaboration diagram for Complex arithmetics in the openMHA:

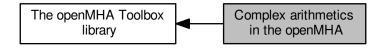

Classes

struct mha_complex_t

Type for complex floating point values.

Functions

- mha_complex_t & set (mha_complex_t &self, mha_real_t real, mha_real_t imag=0)

 Assign real and imaginary parts to a mha_complex_t (p. 397) variable.
- mha_complex_t mha_complex (mha_real_t real, mha_real_t imag=0)

 Create a new mha_complex_t (p. 397) with specified real and imaginary parts.
- mha_complex_t & set (mha_complex_t &self, const std::complex < mha_real_t > &stdcomplex)

Assign a mha_complex_t (p. 397) variable from a std::complex.

- std::complex < mha_real_t > stdcomplex (const mha_complex_t &self)
 Create a std::complex from mha_complex_t (p. 397).
- mha_complex_t & expi (mha_complex_t &self, mha_real_t angle)

 replaces the value of the given mha_complex_t (p. 397) with exp(i*b).
- double angle (const mha complex t &self)

Computes the angle of a complex number in the complex plane.

- mha_complex_t & operator+= (mha_complex_t &self, const mha_complex_t &other)

 Addition of two complex numbers, overwriting the first.
- mha_complex_t operator+ (const mha_complex_t &self, const mha_complex_← t &other)

Addition of two complex numbers, result is a temporary object.

- mha_complex_t & operator+= (mha_complex_t &self, mha_real_t other_real)

 Addition of a complex and a real number, overwriting the complex.
- mha_complex_t operator+ (const mha_complex_t &self, mha_real_t other_real)

 Addition of a complex and a real number, result is a temporary object.
- mha_complex_t & operator-= (mha_complex_t &self, const mha_complex_t &other)

 Subtraction of two complex numbers, overwriting the first.

mha_complex_t operator- (const mha_complex_t &self, const mha_complex_
 t &other)

Subtraction of two complex numbers, result is a temporary object.

mha_complex_t & operator-= (mha_complex_t &self, mha_real_t other_real)

Subtraction of a complex and a real number, overwriting the complex.

• mha_complex_t operator- (const mha_complex_t &self, mha_real_t other_real)

Subtraction of a complex and a real number, result is a temporary object.

- mha_complex_t & operator*= (mha_complex_t &self, const mha_complex_t &other)

 Multiplication of two complex numbers, overwriting the first.
- mha_complex_t operator* (const mha_complex_t &self, const mha_complex_
 t &other)

Multiplication of two complex numbers, result is a temporary object.

mha_complex_t & operator*= (mha_complex_t &self, mha_real_t other_real)

Multiplication of a complex and a real number, overwriting the complex.

- mha_complex_t & expi (mha_complex_t &self, mha_real_t angle, mha_real_t factor)
 replaces (!) the value of the given mha_complex_t (p. 397) with a * exp(i*b)
- mha_complex_t operator* (const mha_complex_t &self, mha_real_t other_real)

 Multiplication of a complex and a real number, result is a temporary object.
- mha_real_t abs2 (const mha_complex_t &self)

Compute the square of the absolute value of a complex value.

mha_real_t abs (const mha_complex_t &self)

Compute the absolute value of a complex value.

mha_complex_t & operator/= (mha_complex_t &self, mha_real_t other_real)

Division of a complex and a real number, overwriting the complex.

mha_complex_t operator/ (const mha_complex_t &self, mha_real_t other_real)

Division of a complex and a real number, result is a temporary object.

 mha_complex_t & safe_div (mha_complex_t &self, const mha_complex_t &other, mha_real_t eps, mha_real_t eps2)

Safe division of two complex numbers, overwriting the first.

- mha_complex_t & operator/= (mha_complex_t &self, const mha_complex_t &other)

 Division of two complex numbers, overwriting the first.
- mha_complex_t operator/ (const mha_complex_t &self, const mha_complex_← t &other)

Division of two complex numbers, result is a temporary object.

• mha complex t operator- (const mha complex t &self)

Unary minus on a complex results in a negative temporary object.

• bool operator== (const mha_complex_t &x, const mha_complex_t &y)

Compare two complex numbers for equality.

• bool operator!= (const mha_complex_t &x, const mha_complex_t &y)

Compare two complex numbers for inequality.

void conjugate (mha_complex_t &self)

Replace (!) the value of this **mha** complex t (p. 397) with its conjugate.

mha_complex_t _conjugate (const mha_complex_t &self)

Compute the cojugate of this complex value.

void reciprocal (mha_complex_t &self)

Replace the value of this complex with its reciprocal.

mha_complex_t _reciprocal (const mha_complex_t &self)

compute the reciprocal of this complex value.

void normalize (mha_complex_t &self)

Divide a complex by its absolute value, thereby normalizing it (projecting onto the unit circle).

void normalize (mha_complex_t &self, mha_real_t margin)

Divide a complex by its absolute value, thereby normalizing it (projecting onto the unit circle), with a safety margin.

bool almost (const mha_complex_t &self, const mha_complex_t &other, mha_real_t times_epsilon=1e2)

Compare two complex numbers for equality except for a small relative error.

bool operator< (const mha_complex_t &x, const mha_complex_t &y)

Compares the absolute values of two complex numbers.

3.10.1 Detailed Description

3.10.2 Function Documentation

Assign real and imaginary parts to a **mha_complex_t** (p. 397) variable.

Parameters

self	The mha_complex_t (p. 397) variable whose value is about to change.
real	The new real part.
imag	The new imaginary part.

Returns

A reference to the changed variable.

Create a new **mha_complex_t** (p. 397) with specified real and imaginary parts.

real	The real part.
imag	The imaginary part.

Returns

The new value.

Assign a **mha_complex_t** (p. 397) variable from a std::complex.

Parameters

self	The mha_complex_t (p. 397) variable whose value is about to change.
stdcomplex	The new complex value.

Returns

A reference to the changed variable.

Create a std::complex from **mha_complex_t** (p. 397).

replaces the value of the given **mha_complex_t** (p. 397) with exp(i*b).

Parameters

self	The mha_complex_t (p. 397) variable whose value is about to change.
angle	The angle in the complex plane [rad].

Returns

A reference to the changed variable.

```
3.10.2.6 double angle ( const mha_complex_t & self ) [inline]
```

Computes the angle of a complex number in the complex plane.

Parameters

self The complex number whose angle is needed.

Returns

The angle of a complex number in the complex plane.

Addition of two complex numbers, overwriting the first.

Addition of two complex numbers, result is a temporary object.

Addition of a complex and a real number, overwriting the complex.

Addition of a complex and a real number, result is a temporary object.

Subtraction of two complex numbers, overwriting the first.

Subtraction of two complex numbers, result is a temporary object.

Subtraction of a complex and a real number, overwriting the complex.

```
3.10.2.14 mha_complex_t operator-(
const mha_complex_t & self,
mha_real_t other_real) [inline]
```

Subtraction of a complex and a real number, result is a temporary object.

Multiplication of two complex numbers, overwriting the first.

Multiplication of two complex numbers, result is a temporary object.

Multiplication of a complex and a real number, overwriting the complex.

replaces (!) the value of the given **mha_complex_t** (p. 397) with a * exp(i*b)

self	The mha_complex_t (p. 397) variable whose value is about to change.
angle	The imaginary exponent.
factor	The absolute value of the result.

Returns

A reference to the changed variable.

```
3.10.2.19 mha_complex_t operator* (

const mha_complex_t & self,

mha_real_t other_real ) [inline]
```

Multiplication of a complex and a real number, result is a temporary object.

```
3.10.2.20 mha_real_t abs2 (
const mha_complex_t & self ) [inline]
```

Compute the square of the absolute value of a complex value.

Returns

The square of the absolute value of self.

```
3.10.2.21 mha_real_t abs (

const mha complex t & self ) [inline]
```

Compute the absolute value of a complex value.

Returns

The absolute value of self.

Division of a complex and a real number, overwriting the complex.

```
3.10.2.23 mha_complex_t operator/ (

const mha_complex_t & self,

mha real t other real ) [inline]
```

Division of a complex and a real number, result is a temporary object.

Safe division of two complex numbers, overwriting the first.

If abs(divisor) < eps, then divisor is replaced by eps. eps2 = eps*eps.

```
3.10.2.25 mha_complex_t& operator/= (
                     mha_complex_t & self,
                     const mha complex t & other ) [inline]
Division of two complex numbers, overwriting the first.
3.10.2.26 mha_complex_t operator/ (
                     const mha complex t & self,
                     const mha complex t & other ) [inline]
Division of two complex numbers, result is a temporary object.
3.10.2.27 mha_complex_t operator- (
                     const mha_complex_t & self ) [inline]
Unary minus on a complex results in a negative temporary object.
3.10.2.28 bool operator== (
                     const mha_complex_t & x,
                     const mha_complex_t & y ) [inline]
Compare two complex numbers for equality.
3.10.2.29 bool operator!= (
                     const mha_complex_t & x,
                     const mha_complex_t & y ) [inline]
Compare two complex numbers for inequality.
3.10.2.30 void conjugate (
                     mha_complex_t & self ) [inline]
Replace (!) the value of this mha_complex_t (p. 397) with its conjugate.
3.10.2.31 mha_complex_t _conjugate (
                     const mha_complex_t & self ) [inline]
```

Returns

A temporary object holding the conjugate value.

Compute the cojugate of this complex value.

Replace the value of this complex with its reciprocal.

compute the reciprocal of this complex value.

Returns

A temporary object holding the reciprocal value.

```
3.10.2.34 void normalize (

mha_complex_t & self ) [inline]
```

Divide a complex by its absolute value, thereby normalizing it (projecting onto the unit circle).

```
3.10.2.35 void normalize (

mha_complex_t & self,

mha_real_t margin ) [inline]
```

Divide a complex by its absolute value, thereby normalizing it (projecting onto the unit circle), with a safety margin.

```
3.10.2.36 bool almost (

const mha_complex_t & self,

const mha_complex_t & other,

mha_real_t times_epsilon = 1e2 ) [inline]
```

Compare two complex numbers for equality except for a small relative error.

Parameters

self	The first complex number.
other	The second complex number.
times_epsilon	Permitted relative error is this number multiplied with the machine accuracy for this Floating point format (std::numeric_limits <mha_real_t>::epsilon)</mha_real_t>


Returns

true if the relative difference is below times_epsilon * std::numeric_limits<mha_real_t> \leftarrow ::epsilon

Compares the absolute values of two complex numbers.

3.11 Fast Fourier Transform functions

Collaboration diagram for Fast Fourier Transform functions:

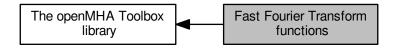

Typedefs

typedef void * mha_fft_t
 Handle for an FFT object.

Functions

mha_fft_t mha_fft_new (unsigned int n)

Create a new FFT handle.

void mha_fft_free (mha_fft_t h)

Destroy an FFT handle.

- void mha_fft_wave2spec (mha_fft_t h, const mha_wave_t *in, mha_spec_t *out)

 Tranform waveform segment into spectrum.
- void mha_fft_wave2spec (mha_fft_t h, const mha_wave_t *in, mha_spec_t *out, bool swaps)

Tranform waveform segment into spectrum.

- void mha_fft_spec2wave (mha_fft_t h, const mha_spec_t *in, mha_wave_t *out)

 Tranform spectrum into waveform segment.
- void mha_fft_spec2wave (mha_fft_t h, const mha_spec_t *in, mha_wave_t *out, unsigned int offset)

Tranform spectrum into waveform segment.

- void mha_fft_forward (mha_fft_t h, mha_spec_t *sIn, mha_spec_t *sOut)

 Complex to complex FFT (forward).
- void mha_fft_backward (mha_fft_t h, mha_spec_t *sIn, mha_spec_t *sOut)

 Complex to complex FFT (backward).
- void mha_fft_forward_scale (mha_fft_t h, mha_spec_t *sIn, mha_spec_t *sOut)

 Complex to complex FFT (forward).
- void mha_fft_backward_scale (mha_fft_t h, mha_spec_t *sIn, mha_spec_t *sOut)

 Complex to complex FFT (backward).
- void mha_fft_wave2spec_scale (mha_fft_t h, const mha_wave_t *in, mha_spec_← t *out)

Tranform waveform segment into spectrum.

void mha_fft_spec2wave_scale (mha_fft_t h, const mha_spec_t *in, mha_wave_←
t *out)

Tranform spectrum into waveform segment.

- 3.11.1 Detailed Description
- 3.11.2 Typedef Documentation
- 3.11.2.1 typedef void* mha_fft_t

Handle for an FFT object.

This FFT object is used by the functions mha_fft_wave2spec and mha_fft_spec2wave. The F← FT back-end is the FFTW library. The back-end is completely hidden, including external header files or linking external libraries is not required.

3.11.3 Function Documentation

Create a new FFT handle.

Parameters

```
n FFT length.
```

Create a new FFT handle.

Parameters

```
n FFT length
```

Return values

Destroy an FFT handle.

Parameters

```
h Handle to be destroyed.
```

Destroy an FFT handle.

Parameters

_		
ĺ	h	FFT object to be removed

Tranform waveform segment into spectrum.

Parameters

h	FFT handle.
in	Input waveform segment.
out	Output spectrum.

Tranform waveform segment into spectrum.

Parameters

	h	FFT object handle
in pointer to input waveform signal		pointer to input waveform signal
	out	pointer to output spectrum signal (has to be allocated)

Tranform waveform segment into spectrum.

Like normal wave2spec, but swaps wave buffer halves before transforming if the swaps parameter is true.

Warning: These openMHA FFTs adopt a nonstandard scaling scheme in which the forward transform scales by 1/N and the backward does not scale. We would recommend using the '_scale' methods instead.

h	FFT handle.
in	Input waveform segment.
out	Output spectrum.
swaps	Function swaps the first and second half of the waveform buffer before the FFT transform when this parameter is set to true.

Tranform spectrum into waveform segment.

Warning: These openMHA FFTs adopt a nonstandard scaling scheme in which the forward transform scales by 1/N and the backward does not scale. We would recommend using the 'scale' methods instead.

Parameters

h FFT handle.		
in	Input spectrum.	
out	Output waveform segment.	

Tranform spectrum into waveform segment.

Parameters

h	FFT object handle	
in	pointer to input spectrum	
out	pointer to output waveform signal (has to be allocated)	

Tranform spectrum into waveform segment.

out may have fewer number of frames than needed for a complete iFFT. Only as many frames are written into out as fit, starting with offset offset of the complete iFFT.

Warning: These openMHA FFTs adopt a nonstandard scaling scheme in which the forward transform scales by 1/N and the backward does not scale. We would recommend using the 'scale' methods instead.

h	FFT handle.
in	Input spectrum.
out	Output waveform segment.
offset	Offset into iFFT wave buffer

Tranform spectrum into waveform segment.

Only part of the iFFT is tranferred into the out buffer.

Out may have fewer number of freames than needed for a complete iFFT. Only as many frames are written into out as fit, starting with offset offset of the complete iFFT.

Parameters

h	FFT object handle	
in	pointer to input spectrum	
out	pointer to output waveform signal (has to be allocated)	
offset	Offset into complete iFFT buffer.	

Complex to complex FFT (forward).

sIn and sOut need to have nfft bins (please note that **mha_spec_t** (p. 429) typically has nfft/2+1 bins for half-complex representation).

Warning: These openMHA FFTs adopt a nonstandard scaling scheme in which the forward transform scales by 1/N and the backward does not scale. We would recommend using the 'scale' methods instead.

Parameters

h	FFT handle.
sIn	Input spectrum.
sOut	Output spectrum.

Complex to complex FFT (backward).

sln and sOut need to have nfft bins (please note that **mha_spec_t** (p. 429) typically has nfft/2+1 bins for half-complex representation).

Warning: These openMHA FFTs adopt a nonstandard scaling scheme in which the forward transform scales by 1/N and the backward does not scale. We would recommend using the '_scale' methods instead.

Parameters

h	FFT handle.
sIn	Input spectrum.
sOut	Output spectrum.

Complex to complex FFT (forward).

sIn and sOut need to have nfft bins (please note that **mha_spec_t** (p. 429) typically has nfft/2+1 bins for half-complex representation).

The _scale methods use standard DFT scaling: There is no scaling in the forward transformation, and 1/N scaling for the backward.

Parameters

h	FFT handle.
sIn	Input spectrum.
sOut	Output spectrum.

Complex to complex FFT (backward).

sIn and sOut need to have nfft bins (please note that **mha_spec_t** (p. 429) typically has nfft/2+1 bins for half-complex representation).

The _scale methods use standard DFT scaling: There is no scaling in the forward transformation, and 1/N scaling for the backward.

h	FFT handle.
sIn	Input spectrum.
sOut	Output spectrum.

Tranform waveform segment into spectrum.

The _scale methods use standard DFT scaling: There is no scaling in the forward transformation, and 1/N scaling for the backward.

Parameters

h	FFT handle.
in	Input waveform segment.
out	Output spectrum.

Tranform spectrum into waveform segment.

The _scale methods use standard DFT scaling: There is no scaling in the forward transformation, and 1/N scaling for the backward.

h	FFT handle.
in	Input spectrum.
out	Output waveform segment.

4 Namespace Documentation

4.1 ac2lsl Namespace Reference

All types for the **ac2IsI** (p. 77) plugins live in this namespace.

Classes

class ac2lsl_t

Plugin class of ac2lsl (p. 77).

· class cfg_t

Runtime configuration class of the ac2lsl (p. 77) plugin.

class save_var_base_t

Interface for ac to Isl bridge variable.

class save_var_t

Implementation for all ac to Isl bridges except complex types.

class save_var_t< mha_complex_t >

Template specialization of the ac2lsl (p. 77) bridge to take care of complex numbers.

4.1.1 Detailed Description

All types for the **ac2IsI** (p. 77) plugins live in this namespace.

4.2 acmon Namespace Reference

Namespace for displaying ac variables as parser monitors.

Classes

class ac_monitor_t

A class for converting AC variables to Parser monitors of correct type.

class acmon_t

4.2.1 Detailed Description

Namespace for displaying ac variables as parser monitors.

4.3 acsave Namespace Reference

Classes

- class acsave_t
- class cfg t
- struct mat4head t
- class save_var_t

4.4 addsndfile Namespace Reference

Classes

- · class addsndfile if t
- · class level_adapt_t
- class resampled_soundfile_t

Reads sound from file and resamples it if necessary and wanted.

- class sndfile t
- class waveform_proxy_t

Class helps to specify which instance of MHASignal_waveform_t parent instance is meant in **resampled_soundfile_t** (p. 177).

Typedefs

- typedef MHAPlugin::config_t< level_adapt_t > level_adaptor
- typedef MHAPlugin::plugin_t< sndfile_t > wave_reader

Enumerations

Functions

- static unsigned resampled_num_frames (unsigned num_source_frames, float source
 —rate, float target_rate, addsndfile_resampling_mode_t resampling_mode)
- 4.4.1 Typedef Documentation
- 4.4.1.1 typedef MHAPlugin::config_t<level_adapt_t> addsndfile::level_adaptor
- 4.4.1.2 typedef MHAPlugin::plugin_t<sndfile_t> addsndfile::wave_reader
- 4.4.2 Enumeration Type Documentation
- 4.4.2.1 enum addsndfile::addsndfile_resampling_mode_t

Specifies the resampling mode in **resampled_soundfile_t** (p. 177).

Enumerator

DONT_RESAMPLE_PERMISSIVE

DONT_RESAMPLE_STRICT Do not resample, if the sample rate of the MHA differs from the sample rate of the sound file, raise an error.

DO_RESAMPLE Resample.

4.4.3 Function Documentation

4.5 ADM Namespace Reference

Classes

class ADM

Adaptive differential microphone, working for speech frequency range.

class Delay

A delay-line class which can also do subsample-delays for a limited frequency range below fs/4.

• class Linearphase_FIR

An efficient linear-phase fir filter implementation.

Functions

• static double **subsampledelay_coeff** (double samples, double f_design, double fs=1.0) compute IIR coefficient for subsample delay

Variables

- const double **PI** = 3.14159265358979312
- const double **C** = 340
- const double DELAY_FREQ = 2000
- const double **START_BETA** = 0.5

4.5.1 Function Documentation

compute IIR coefficient for subsample delay

samples	Constraint: 0.0 <= samples < 1.0; Amount of sub-sample delay	
	design frequency (subsample delay is accurate for this frequency)	
© 2005-2018 Höc Tach 与Gmb Hacedenburg		

Returns

IIR coefficient for subsample delay

4.5.2 Variable Documentation

- 4.5.2.1 const double ADM::PI = 3.14159265358979312
- 4.5.2.2 const double ADM::C = 340
- 4.5.2.3 const double ADM::DELAY FREQ = 2000
- 4.5.2.4 const double ADM::START_BETA = 0.5

4.6 AuditoryProfile Namespace Reference

Namespace for classes and functions around the auditory profile (e.g., audiogram handling)

Classes

· class fmap t

A class to store frequency dependent data (e.g., HTL and UCL).

class parser_t

Class to make the auditory profile accessible through the parser interface.

class profile_t

The Auditory Profile class.

4.6.1 Detailed Description

Namespace for classes and functions around the auditory profile (e.g., audiogram handling)

The auditory profile as defined by HearCom or BMBF Modellbasierte Hoergeraete is stored in the class **AuditoryProfile::profile_t** (p. 212). Until a complete definition is available, only the currently needed elements are implemented.

4.7 coherence Namespace Reference

Classes

- · class cohflt if t
- · class cohflt t
- class vars t

Functions

 void getcipd (mha_complex_t &c, mha_real_t &a, const mha_complex_t &xl, const mha_complex_t &xr)

4.7.1 Function Documentation

```
4.7.1.1 void coherence::getcipd (

mha_complex_t & c,

mha_real_t & a,

const mha_complex_t & xl,

const mha_complex_t & xr ) [inline]
```

4.8 dc Namespace Reference

Classes

- · class dc_if_t
- class dc t
- class dc_vars_t
- class dc_vars_validator_t
- · class wb inhib cfg t
- class wideband_inhib_vars_t

Functions

unsigned int get_audiochannels (unsigned int totalchannels, std::string acname, algo
 _comm_t ac)

4.8.1 Function Documentation

4.9 dc_simple Namespace Reference

Classes

- · class dc if t
- class dc_t
- class dc_vars_t
- class dc_vars_validator_t
- class level_smoother_t

Typedefs

- typedef MHAPlugin::plugin_t< dc_t > DC
- typedef MHAPlugin::config_t< level_smoother_t > LEVEL

Functions

- void **test_fail** (const std::vector< float > &v, unsigned int s, const std::string &name)
- std::vector< float > force_resize (const std::vector< float > &v, unsigned int s, const std::string &name)
- mha_real_t not_zero (mha_real_t x, const std::string &comment="")
- 4.9.1 Typedef Documentation
- 4.9.1.1 typedef MHAPlugin::plugin_t<dc_t> dc_simple::DC
- 4.9.1.2 typedef MHAPlugin::config_t<level_smoother_t> dc_simple::LEVEL
- 4.9.2 Function Documentation
- 4.9.2.1 void dc_simple::test_fail (const std::vector< float > & v, unsigned int s, const std::string & name)
- 4.9.2.2 std::vector<float> dc_simple::force_resize (const std::vector< float > & v, unsigned int s, const std::string & name)
- 4.10 delay Namespace Reference

Classes

- · class interface_t
- 4.11 delaysum Namespace Reference

This namespace contains the delaysum plugin.

Classes

• class delaysum_if_t

Interface class for the delaysum plugin.

class delaysum_t

Runtime configuration of the delaysum plugin.

4.11.1 Detailed Description

This namespace contains the delaysum plugin.

4.12 DynComp Namespace Reference

dynamic compression related classes and functions

Classes

class dc_afterburn_rt_t

Real-time class for after burn effect.

class dc_afterburn_t

Afterburn class, to be defined as a member of compressors.

class dc_afterburn_vars_t

Variables for dc_afterburn_t (p. 280) class.

class gaintable t

Gain table class.

Functions

mha_real_t interp1 (const std::vector< mha_real_t > &vX, const std::vector< mha_←
real_t > &vY, mha_real_t X)

One-dimensional linear interpolation.

mha_real_t interp2 (const std::vector< mha_real_t > &vX, const std::vector< mha←
 _real_t > &vY, const std::vector< std::vector< mha_real_t >> &mZ, mha_real_t X,
 mha_real_t Y)

Linear interpolation in a two-dimensional field.

4.12.1 Detailed Description

dynamic compression related classes and functions

4.12.2 Function Documentation

```
4.12.2.1 mha_real_t DynComp::interp1 ( const std::vector< mha_real_t > & vX, const std::vector< mha_real_t > & vY, mha_real_t X)
```

One-dimensional linear interpolation.

Parameters

νX	Vector with input samples.
νY	Vector with values at input samples.
Χ	Input value to be interpolated.

Return values

Interpolated	value $Y(X)$ at position X .
--------------	--------------------------------

```
4.12.2.2 mha_real_t DynComp::interp2 (  const \ std::vector < mha\_real\_t > \& \ vX, \\ const \ std::vector < mha\_real\_t > \& \ vY, \\ const \ std::vector < std::vector < mha\_real\_t > & \ mZ, \\ mha\_real\_t \ X, \\ mha\_real\_t \ Y \ )
```

Linear interpolation in a two-dimensional field.

Parameters

νX	Vector with input samples, first dimension.
νY	Vector with input samples, second dimension.
mΖ	Field with values at input samples.
X	First dimension of input value to be interpolated.
Y	Second dimension of input value to be interpolated.

Return values

```
Interpolated value Z(X,Y) at position X,Y.
```

4.13 fader_wave Namespace Reference

Classes

- class fader_wave_if_t
- class level_adapt_t

Typedefs

typedef MHAPlugin::plugin_t< level_adapt_t > level_adaptor

4.13.1 Typedef Documentation

4.13.1.1 typedef MHAPlugin::plugin_t<level_adapt_t> fader_wave::level_adaptor

4.14 fftfilterbank Namespace Reference

Classes

- class fftfb_interface_t
- · class fftfb_plug_t

4.15 gain Namespace Reference

Classes

- class gain_if_t
- class scaler_t

4.16 matrixmixer Namespace Reference

Classes

- · class cfg_t
- · class matmix t

4.17 MHA_AC Namespace Reference

Functions and classes for Algorithm Communication (AC) support.

Classes

- class ac2matrix_helper_t
- class ac2matrix_t

Copy AC variable to a matrix.

class acspace2matrix_t

Copy all or a subset of all numeric AC variables into an array of matrixes.

class double_t

Insert a double precision floating point variable into the AC space.

class float_t

Insert a float point variable into the AC space.

class int_t

Insert a integer variable into the AC space.

class spectrum_t

Insert a MHASignal::spectrum_t (p. 763) class into the AC space.

- class stat_t
- · class waveform t

Insert a MHASignal::waveform_t (p. 775) class into the AC space.

Functions

• mha_spec_t get_var_spectrum (algo_comm_t ac, const std::string &name)

Convert an AC variable into a spectrum.

mha_wave_t get_var_waveform (algo_comm_t ac, const std::string &name)
 Convert an AC variable into a waveform.

• int **get_var_int** (**algo_comm_t** ac, const std::string &name)

Return value of an integer scalar AC variable.

• float **get_var_float** (**algo_comm_t** ac, const std::string &name)

Return value of an floating point scalar AC variable.

• std::vector< float > **get_var_vfloat** (**algo_comm_t** ac, const std::string &name)

Return value of an floating point vector AC variable as standard vector of floats.

4.17.1 Detailed Description

Functions and classes for Algorithm Communication (AC) support.

4.18 mha_error_helpers Namespace Reference

Functions

unsigned digits (unsigned n)
 Compute number of decimal digits required to represent an unsigned integer.

unsigned snprintf_required_length (const char *formatstring,...)
 snprintf_required_length Compute the number of bytes (excluding the terminating nul) required to store the result of an snprintf.

4.18.1 Function Documentation

4.18.1.1 unsigned mha_error_helpers::digits (unsigned n)

Compute number of decimal digits required to represent an unsigned integer.

Parameters

n The unsigned integer that we want to know the number of required decimal digits for. return The number of decimal digits in n.

snprintf_required_length Compute the number of bytes (excluding the terminating nul) required to store the result of an snprintf.

Parameters

formatstring	The format string with standard printf formatstring
--------------	---

Returns

the number of bytes required by printf without the terminating nul

4.19 MHA_TCP Namespace Reference

A Namespace for TCP helper classes.

Classes

class Async_Notify

Portable Multiplexable cross-thread notification.

· class Client

A portable class for a tcp client connections.

· class Connection

Connection (p. 434) handles Communication between client and server, is used on both sides.

class Event Watcher

OS-independent event watcher, uses select on Unix and WaitForMultipleObjects on Windows.

- struct **OS_EVENT_TYPE**
- · class Server
- class sock_init_t
- class Sockaccept Event
- class Sockread_Event

Watch socket for incoming data.

- class Sockwrite_Event
- class Thread

A very simple class for portable threads.

- class Timeout_Event
- class Timeout_Watcher

OS-independent event watcher with internal fixed-end-time timeout.

class Wakeup Event

A base class for asynchronous wakeup events.

Typedefs

typedef int SOCKET

Functions

• std::string **STRERROR** (int err)

Portable conversion from error number to error string.

std::string HSTRERROR (int err)

Portable conversion from hostname error number to error string.

• int **N_ERRNO** ()

Portable access to last network error number.

• int **H_ERRNO** ()

Portable access to last hostname error number.

• int G ERRNO ()

Portable access to last non-network error number.

• double dtime ()

Time access function for system's high resolution time, retrieve current time as double.

double dtime (const struct timeval &tv)

Time access function for unix' high resolution time, converts struct timeval to double.

• struct timeval **stime** (double d)

Time access function for unix' high resolution time, converts time from double to struct timeval.

Variables

- class MHA_TCP::sock_init_t sock_initializer
- 4.19.1 Detailed Description

A Namespace for TCP helper classes.

- 4.19.2 Typedef Documentation
- 4.19.2.1 typedef int MHA TCP::SOCKET
- 4.19.3 Function Documentation
- 4.19.3.1 std::string MHA_TCP::STRERROR (int *err*)

Portable conversion from error number to error string.

```
4.19.3.2 std::string MHA_TCP::HSTRERROR ( int err )
```

Portable conversion from hostname error number to error string.

```
4.19.3.3 int MHA_TCP::N_ERRNO ( )
```

Portable access to last network error number.

```
4.19.3.4 int MHA_TCP::H_ERRNO ( )
```

Portable access to last hostname error number.

```
4.19.3.5 int MHA_TCP::G_ERRNO ( )
```

Portable access to last non-network error number.

```
4.19.3.6 double MHA_TCP::dtime ( )
```

Time access function for system's high resolution time, retrieve current time as double.

```
4.19.3.7 double MHA_TCP::dtime (
const struct timeval & tv )
```

Time access function for unix' high resolution time, converts struct timeval to double.

```
4.19.3.8 struct timeval MHA_TCP::stime ( double d )
```

Time access function for unix' high resolution time, converts time from double to struct timeval.

4.19.4 Variable Documentation

```
4.19.4.1 class MHA_TCP::sock_init_t MHA_TCP::sock_initializer
```

4.20 mhachain Namespace Reference

Classes

- class chain_base_t
- class mhachain_t
- class plugs_t

4.21 MHAEvents Namespace Reference

Collection of event handling classes.

Classes

- class connector_base_t
- class connector_t
- · class emitter t

Class for emitting openMHA events.

· class patchbay_t

Patchbay which connects any event emitter with any member function of the parameter class.

4.21.1 Detailed Description

Collection of event handling classes.

4.22 MHAFilter Namespace Reference

Namespace for IIR and FIR filter classes.

Classes

- class adapt_filter_param_t
- class adapt_filter_state_t
- class adapt_filter_t

Adaptive filter.

class blockprocessing_polyphase_resampling_t

A class that does polyphase resampling and takes into account block processing.

class complex_bandpass_t

Complex bandpass filter.

· class diff t

Differentiator class (non-normalized)

· class fftfilter_t

FFT based FIR filter implementation.

class fftfilterbank_t

FFT based FIR filterbank implementation.

· class filter t

Generic IIR filter class.

class gamma_flt_t

Class for gammatone filter.

- class iir_filter_state_t
- · class iir_filter_t

IIR filter class wrapper for integration into parser structure.

class iir_ord1_real_t

First order recursive filter.

class o1_ar_filter_t

First order attack-release lowpass filter.

class o1flt lowpass t

First order low pass filter.

• class o1flt_maxtrack_t

First order maximum tracker.

class o1flt_mintrack_t

First order minimum tracker.

class partitioned convolution t

A filter class for partitioned convolution.

class polyphase_resampling_t

A class that performs polyphase resampling.

class resampling_filter_t

Hann shaped low pass filter for resampling.

class smoothspec_t

Smooth spectral gains, create a windowed impulse response.

- · class thirdoctave_analyzer_t
- struct transfer_function_t

a structure containing a source channel number, a target channel number, and an impulse response.

struct transfer_matrix_t

A sparse matrix of transfer function partitionss.

Functions

- void make_friendly_number (mha_real_t &x)
- void make friendly number (mha complex t &x)
- void make_friendly_number (double &x)
- void o1_lp_coeffs (const mha_real_t tau, const mha_real_t fs, mha_real_t &c1, mha
 —real_t &c2)

Set first order filter coefficients from time constant and sampling rate.

• void **butter_stop_ord1** (double *A, double *B, double f1, double f2, double fs)

Setup a first order butterworth band stop filter.

MHASignal::waveform_t * spec2fir (const mha_spec_t *spec, const unsigned int fftlen, const MHAWindow::base_t &window, const bool minphase)

Create a windowed impulse response/FIR filter coefficients from a spectrum.

unsigned gcd (unsigned a, unsigned b)

greatest common divisor

double sinc (double x)

 $\sin(x)/x$ function, coping with x=0.

• std::pair< unsigned, unsigned > **resampling_factors** (float source_sampling_rate, float target_sampling_rate, float factor=1.0f)

Computes rational resampling factor from two sampling rates.

4.22.1 Detailed Description

Namespace for IIR and FIR filter classes.

```
4.22.2 Function Documentation
```

Set first order filter coefficients from time constant and sampling rate.

Parameters

tau	Time constant
fs	Sampling rate

Return values

c1	Recursive filter coefficient
c2	Non-recursive filter coefficient

Setup a first order butterworth band stop filter.

This function calculates the filter coefficients of a first order butterworth band stop filter.

Return values

Α	recursive filter coefficients
В	non recursive filter coefficients

Parameters

f1	lower frequency
f2	upper frequency
fs	sample frequency

Create a windowed impulse response/FIR filter coefficients from a spectrum.

Parameters

spec	Input spectrum
fftlen	FFT length of spectrum
window	Window shape (with length, e.g. initialized with MHAWindow::hanning(54)).
minphase	Flag, true if original phase should be discarded and replaced by a minimal phase function.

greatest common divisor

```
4.22.2.8 double MHAFilter::sinc ( double x )
```

 $\sin(x)/x$ function, coping with x=0.

This is the historical sinc function, not the normalized sinc function.

Computes rational resampling factor from two sampling rates.

The function will fail if either sampling_rate * factor is not an integer

Parameters

source_sampling_rate	The original sampling rate
target_sampling_rate	The desired sampling rate
factor	A helper factor to use for non-integer sampling rates

Returns

a pair that contains first the upsampling factor and second the downsampling factor required for the specified resampling.

Exceptions

4.23 MHAIOJack Namespace Reference

JACK IO.

Classes

class io_jack_t
 Main class for JACK IO.

4.23.1 Detailed Description

JACK IO.

4.24 MHAIOJackdb Namespace Reference

Classes

class io_jack_t
 Main class for JACK IO.

4.25 MHAIOPortAudio Namespace Reference

Classes

- class device_info_t
- class io_portaudio_t

Main class for Portaudio sound IO.

Functions

static std::string parserFriendlyName (const std::string &in)

4.25.1 Function Documentation

4.25.1.1 static std::string MHAIOPortAudio::parserFriendlyName (
const std::string & in) [static]

4.26 MHAJack Namespace Reference

Classes and functions for openMHA and JACK interaction.

Classes

class client_avg_t

Generic JACK client for averaging a system response across time.

class client_noncont_t

Generic client for synchronous playback and recording of waveform fragments.

· class client t

Generic asynchronous JACK client.

class port_t

Class for one channel/port.

Functions

void io (mha_wave_t *s_out, mha_wave_t *s_in, const std::string &name, const std
 ::vector< std::string > &p_out, const std::vector< std::string > &p_in, float *srate=NULL,
 unsigned int *fragsize=NULL, bool use_jack_transport=false)

Functional form of generic client for synchronous playback and recording of waveform fragments.

std::vector< unsigned int > get_port_capture_latency (const std::vector< std::string > &ports)

Return the JACK port latency of ports.

std::vector< int > get_port_capture_latency_int (const std::vector< std::string > &ports)

Return the JACK port latency of ports.

std::vector< unsigned int > get_port_playback_latency (const std::vector< std::string > &ports)

Return the JACK port latency of ports.

std::vector< int > get_port_playback_latency_int (const std::vector< std::string > &ports)

4.26.1 Detailed Description

Classes and functions for openMHA and JACK interaction.

4.26.2 Function Documentation

```
4.26.2.1 void MHAJack::io (

mha_wave_t * s_out,

mha_wave_t * s_in,

const std::string & name,

const std::vector< std::string > & p_out,

const std::vector< std::string > & p_in,

float * srate = NULL,

unsigned int * fragsize = NULL,

bool use jack transport = false )
```

Functional form of generic client for synchronous playback and recording of waveform fragments.

```
4.26.2.2 std::vector< unsigned int > MHAJack::get_port_capture_latency ( const std::vector< std::string > & ports )
```

Return the JACK port latency of ports.

Parameters

```
ports Ports to be tested
```

Returns

Latency vector (one entry for each port)

```
4.26.2.3 std::vector< int > MHAJack::get_port_capture_latency_int ( const std::vector< std::string > & ports )
```

Return the JACK port latency of ports.

Parameters

ports	Ports to be tested
-------	--------------------

Returns

Latency vector (one entry for each port)

Return the JACK port latency of ports.

Parameters

ports	Ports to be tested
-------	--------------------

Returns

Latency vector (one entry for each port)

4.27 MHAKernel Namespace Reference

Classes

- class algo_comm_class_t
- class comm_var_map_t

Functions

```
    algo_comm_class_t * algo_comm_safe_cast (void *)
```

4.27.1 Function Documentation

4.28 MHAMultiSrc Namespace Reference

Collection of classes for selecting audio chunks from multiple sources.

Classes

· class base t

Base class for source selection.

- · class channel t
- · class channels t
- class spectrum_t
- · class waveform t

4.28.1 Detailed Description

Collection of classes for selecting audio chunks from multiple sources.

4.29 MHAOvIFilter Namespace Reference

Namespace for overlapping FFT based filter bank classes and functions.

Namespaces

- barkscale
- FreqScaleFun

Transform functions from linear scale in Hz to new frequency scales.

ShapeFun

Shape functions for overlapping filters.

Classes

- class band_descriptor_t
- class fftfb_ac_info_t
- class fftfb_t

FFT based overlapping filter bank.

class fftfb_vars_t

Set of configuration variables for FFT-based overlapping filters.

- · class fscale bw t
- · class fscale t
- class fspacing_t

Class for frequency spacing, used by filterbank shape generator class.

- class overlap_save_filterbank_analytic_t
- class overlap_save_filterbank_t

A time-domain minimal phase filter bank with frequency shapes from **MHAOvIFilter::fftfb_t** (p. 579).

· class scale_var_t

Typedefs

typedef mha_real_t(scale_fun_t) (mha_real_t)

4.29.1 Detailed Description

Namespace for overlapping FFT based filter bank classes and functions.

- 4.29.2 Typedef Documentation
- 4.29.2.1 typedef mha_real_t(MHAOvlFilter::scale_fun_t) (mha_real_t)
- 4.30 MHAOvlFilter::barkscale Namespace Reference

Classes

- class bark2hz_t
- class hz2bark_t

Variables

- mha_real_t vfreq [BARKSCALE_ENTRIES]
- mha_real_t vbark [BARKSCALE_ENTRIES]
- 4.30.1 Variable Documentation
- 4.30.1.1 mha_real_t MHAOvlFilter::barkscale::vfreq
- 4.30.1.2 mha_real_t MHAOvlFilter::barkscale::vbark
- 4.31 MHAOvIFilter::FreqScaleFun Namespace Reference

Transform functions from linear scale in Hz to new frequency scales.

Functions

```
mha_real_t hz2hz (mha_real_t x)
```

Dummy scale transformation Hz to Hz.

- mha real t hz2khz (mha real t x)
- mha_real_t hz2octave (mha_real_t x)
- mha_real_t hz2third_octave (mha_real_t x)
- mha_real_t hz2bark (mha_real_t x)

Transformation to bark scale.

- mha real t hz2bark analytic (mha real t)
- mha real t hz2erb (mha real t)
- mha_real_t hz2erb_glasberg1990 (mha_real_t)
- mha_real_t hz2log (mha_real_t x)

Third octave frequency scale.

• mha real t inv scale (mha real t, mha real t(*)(mha real t))

4.31.1 Detailed Description

Transform functions from linear scale in Hz to new frequency scales.

4.31.2 Function Documentation

```
4.31.2.1 mha_real_t MHAOvlFilter::FreqScaleFun::hz2hz ( mha_real_t x )
```

Dummy scale transformation Hz to Hz.

This function implements a dummy scale transformation (linear frequency scale).

Parameters

```
x Input frequency in Hz
```

Returns

Frequency in Hz

```
    4.31.2.4 mha_real_t MHAOvlFilter::FreqScaleFun::hz2third_octave ( mha_real_t x )
    4.31.2.5 mha_real_t MHAOvlFilter::FreqScaleFun::hz2bark ( mha_real_t x )
```

Transformation to bark scale.

This function implements a critical band rate (bark) scale.

Parameters

```
x Input frequency in Hz
```

Returns

Critical band rate in Bark

Third octave frequency scale.

This function implements a third octave scale. Frequencies below 16 Hz are mapped to 16 Hz.

Parameters

```
x Frequency in Hz
```

Returns

Third octaves relative to 1000 Hz

4.32 MHAOvIFilter::ShapeFun Namespace Reference

Shape functions for overlapping filters.

Functions

```
mha_real_t rect (mha_real_t x)
```

Filter shape function for rectangular filters.

mha_real_t linear (mha_real_t x)

Filter shape function for sawtooth filters.

mha_real_t hann (mha_real_t x)

Filter shape function for hanning shaped filters.

- mha_real_t expflt (mha_real_t)
- mha_real_t gauss (mha_real_t)

4.32.1 Detailed Description

Shape functions for overlapping filters.

4.32.2 Function Documentation

```
4.32.2.1 mha_real_t MHAOvlFilter::ShapeFun::rect ( mha_real_t x )
```

Filter shape function for rectangular filters.

This function creates rectangular filter shapes. The edge is exactly half way between two center frequencies (on a given scale).

Parameters

```
x Input value in the range [-1,1].
```

Returns

Weigth function in the range [0,1]

Filter shape function for sawtooth filters.

This function creates sawtooth filter shapes. They rise linearly form 0 to 1 in the interval from the lower neighbor center frequency to the band center frequency and from 1 to 0 in the interval from the band center frequency to the upper neighbour band center frequency. Linear means linear on a given frequency scale.

Parameters

```
x Input value in the range [-1,1].
```

Returns

Weigth function in the range [0,1]

Filter shape function for hanning shaped filters.

This function creates hanning window shaped filters.

Parameters

```
x Input value in the range [-1,1].
```

Returns

Weigth function in the range [0,1]

```
4.32.2.4 mha_real_t MHAOvIFilter::ShapeFun::expflt (
mha_real_t x )
```

4.33 MHAParser Namespace Reference

Name space for the openMHA-Parser configuration language.

Namespaces

StrCnv

String converter namespace.

Classes

· class base t

Base class for all parser items.

class bool_mon_t

Monitor with string value.

· class bool_t

Variable with a boolean value ("yes"/"no")

- class c_ifc_parser_t
- · class commit t

Parser variable with event-emission functionality.

class complex_mon_t

Monitor with complex value.

class complex t

Variable with complex value.

- · class entry_t
- class expression_t
- class float_mon_t

Monitor with float value.

class float t

Variable with float value.

· class int_mon_t

Monitor variable with int value.

class int_t

Variable with integer value.

class keyword list t

Keyword list class.

class kw_t

Variable with keyword list value.

class mcomplex_mon_t

Matrix of complex numbers monitor.

· class mcomplex_t

Matrix variable with complex value.

class mfloat_mon_t

Matrix of floats monitor.

· class mfloat t

Matrix variable with float value.

- · class mhaconfig_mon_t
- class mhapluginloader_t

Class to create a plugin loader in a parser, including the load logic.

class mint_mon_t

Matrix of ints monitor.

class monitor_t

Base class for monitors and variable nodes.

· class parser_t

Parser node class.

class range_var_t

Base class for all variables with a numeric value range.

class string_mon_t

Monitor with string value.

· class string_t

Variable with a string value.

class variable_t

Base class for variable nodes.

• class vcomplex_mon_t

Monitor with vector of complex values.

class vcomplex_t

Vector variable with complex value.

class vfloat_mon_t

Vector of floats monitor.

class vfloat t

Vector variable with float value.

· class vint mon t

Vector of ints monitor.

class vint_t

Variable with vector<int> value.

class vstring_mon_t

Vector of monitors with string value.

class vstring t

Vector variable with string values.

class window_t

MHA configuration interface for a window function generator.

Typedefs

- typedef std::string(base_t::* opact_t) (expression_t &)
- typedef std::string(base_t::* query_t) (const std::string &)
- typedef std::map< std::string, opact_t > opact_map_t
- typedef std::map< std::string, query_t > query_map_t
- typedef std::list< entry_t > entry_map_t
- typedef int(* c_parse_cmd_t) (void *, const char *, char *, unsigned int)
- typedef const char *(* c_parse_err_t) (void *, int)

Functions

- int get precision ()
- std::string commentate (const std::string &s)
- void **trim** (std::string &s)
- std::string cfg_dump (base_t *, const std::string &)
- std::string cfg_dump_short (base_t *, const std::string &)
- std::string all_dump (base_t *, const std::string &)
- std::string mon_dump (base_t *, const std::string &)
- std::string all_ids (base_t *, const std::string &, const std::string &="")
- void **strreplace** (std::string &, const std::string &, const std::string &) string replace function
- void envreplace (std::string &s)

4.33.1 Detailed Description

Name space for the openMHA-Parser configuration language.

This namespace contains all classes which are needed for the implementation of the open—MHA configuration language. For details on the script language itself please see section **The openMHA configuration language** (p. 33).

4.33.2 List of valid MHAParser items

- Sub-parser: parser_t (p. 651)
- Variables:

```
Numeric variables: int_t (p. 627), vint_t (p. 676), float_t (p. 622), vfloat_t (p. 672), mfloat_t (p. 640)

Other variables: string_t (p. 660), vstring_t (p. 680), kw_t (p. 632), bool_t (p. 608)
```

Monitors:

```
Numeric monitors: int_mon_t (p. 625), vint_mon_t (p. 674), float_mon_t (p. 621), vfloat_mon_t (p. 670)
mfloat_mon_t (p. 639)
mcomplex_mon_t (p. 635)
Other monitors: bool_mon_t (p. 607), string_mon_t (p. 659), vstring_mon_t (p. 678)
```

Members can be inserted into the configuration namespace by using MHAParser::insert_item() or the **insert_member()** (p. 977) macro.

```
4.33.3 Typedef Documentation
4.33.3.1 typedef std::string(base_t::* MHAParser::opact_t) (expression t &)
4.33.3.2
         typedef std::string(base_t::* MHAParser::query_t) (const std::string &)
4.33.3.3 typedef std::map<std::string,opact_t> MHAParser::opact_map_t
4.33.3.4 typedef std::map<std::string,query_t> MHAParser::query_map_t
4.33.3.5 typedef std::list<entry_t> MHAParser::entry_map_t
4.33.3.6 typedef int(* MHAParser::c_parse_cmd_t) (void *, const char *, char *, unsigned int)
4.33.3.7 typedef const char*(* MHAParser::c_parse_err_t) (void *, int)
4.33.4 Function Documentation
4.33.4.1 int MHAParser::get_precision ( )
4.33.4.2 std::string MHAParser::commentate (
                      const std::string & s )
4.33.4.3 void MHAParser::trim (
                      std::string & s )
4.33.4.4 std::string MHAParser::cfg_dump (
                      base_t * p,
                      const std::string & pref )
4.33.4.5 std::string MHAParser::cfg_dump_short (
                      base_t * p,
                      const std::string & pref )
4.33.4.6 std::string MHAParser::all_dump (
                      base t*p,
                      const std::string & pref )
4.33.4.7 std::string MHAParser::mon_dump (
                      base t*p,
                      const std::string & pref )
4.33.4.8 std::string MHAParser::all_ids (
                      base_t * p,
                      const std::string & pref,
                      const std::string & id = " " )
4.33.4.9 void MHAParser::strreplace (
                      std::string & s,
                      const std::string & arg,
                      const std::string & rep )
string replace function
```

Parameters

s	target string
arg	search pattern
rep	replace pattern

4.33.4.10 void MHAParser::envreplace (std::string & s)

4.34 MHAParser::StrCnv Namespace Reference

String converter namespace.

Functions

• int **num_brackets** (const std::string &s)

Return number of brackets at beginning and end of string.

- int **bracket balance** (const std::string &s)
- void str2val (const std::string &, bool &)

Convert from string.

void str2val (const std::string &, float &)

Convert from string.

void str2val (const std::string &, mha_complex_t &)

Convert from string.

• void **str2val** (const std::string &, int &)

Convert from string.

void str2val (const std::string &, keyword_list_t &)

Convert from string.

void str2val (const std::string &, std::string &)

Convert from string.

template<class arg_t >

void **str2val** (const std::string &s, std::vector< arg_t > &val)

Converter for vector types.

• template<>

void **str2val**< **mha_real_t** > (const std::string &s, std::vector< **mha_real_t** > &v)

Converter for vector<mha real t> with Matlab-style expansion.

template<class arg_t >

void **str2val** (const std::string &s, std::vector< std::vector< arg t >> &val)

Converter for matrix types.

• std::string val2str (const bool &)

Convert to string.

std::string val2str (const float &)

Convert to string.

std::string val2str (const mha_complex_t &)

Convert to string.

• std::string val2str (const int &)

Convert to string.

std::string val2str (const keyword_list_t &)

Convert to string.

• std::string val2str (const std::string &)

Convert to string.

std::string val2str (const std::vector< float > &)

Convert to string.

std::string val2str (const std::vector< mha_complex_t > &)

Convert to string.

std::string val2str (const std::vector< int > &)

Convert to string.

• std::string val2str (const std::vector< std::vector< int > > &)

Convert to string.

std::string val2str (const std::vector< std::string > &)

Convert to string.

std::string val2str (const std::vector< std::vector< float >> &)

Convert to string.

- std::string val2str (const std::vector< std::vector< mha_complex_t >> &)

Convert to string.

4.34.1 Detailed Description

String converter namespace.

The functions defined in this namespace manage the conversions from C++ variables to strings and back. It was tried to keep a matlab compatible string format for vectors and vectors of vectors.

4.34.2 Function Documentation

```
4.34.2.1 int MHAParser::StrCnv::num_brackets ( const std::string & s )
```

Return number of brackets at beginning and end of string.

Parameters

s String

Returns

```
Number of brackets, or -1 for empty string
```

```
4.34.2.2 int MHAParser::StrCnv::bracket_balance (
                       const std::string & s )
4.34.2.3 void MHAParser::StrCnv::str2val (
                       const std::string & s,
                       bool & v )
Convert from string.
4.34.2.4 void MHAParser::StrCnv::str2val (
                       const std::string & s,
                       float & v)
Convert from string.
4.34.2.5 void MHAParser::StrCnv::str2val (
                       const std::string & s,
                       mha_complex_t & v )
Convert from string.
4.34.2.6 void MHAParser::StrCnv::str2val (
                       const std::string & s,
                       int & v )
Convert from string.
4.34.2.7 void MHAParser::StrCnv::str2val (
                       const std::string & s,
                       MHAParser::keyword list t & v )
Convert from string.
4.34.2.8 void MHAParser::StrCnv::str2val (
                       const std::string & s,
                       std::string & v )
Convert from string.
4.34.2.9 template < class arg_t > void MHAParser::StrCnv::str2val (
                       const std::string & s,
                       std::vector< arg_t > & val )
```

Converter for vector types.

© 2005-2018 HörTech gGmbH, Oldenburg

```
4.34.2.10 template<> void MHAParser::StrCnv::str2val< mha_real_t > (
                       const std::string & s,
                        std::vector < mha real t > \& v)
Converter for vector<mha real t> with Matlab-style expansion.
4.34.2.11 template < class arg_t > void MHAParser::StrCnv::str2val (
                       const std::string & s,
                       std::vector< std::vector< arg_t >> & val )
Converter for matrix types.
4.34.2.12 std::string MHAParser::StrCnv::val2str (
                       const bool & v )
Convert to string.
4.34.2.13 std::string MHAParser::StrCnv::val2str (
                       const float & v )
Convert to string.
4.34.2.14 std::string MHAParser::StrCnv::val2str (
                       const mha_complex_t & v )
Convert to string.
4.34.2.15 std::string MHAParser::StrCnv::val2str (
                       const int & v )
Convert to string.
4.34.2.16 std::string MHAParser::StrCnv::val2str (
                       const keyword_list_t & v )
Convert to string.
4.34.2.17 std::string MHAParser::StrCnv::val2str (
                       const std::string & v )
Convert to string.
4.34.2.18 std::string MHAParser::StrCnv::val2str (
                       const std::vector< float > & \nu )
Convert to string.
```

```
4.34.2.19 std::string MHAParser::StrCnv::val2str (
                       const std::vector< mha_complex_t > & v )
Convert to string.
4.34.2.20 std::string MHAParser::StrCnv::val2str (
                       const std::vector< int > & \nu )
Convert to string.
4.34.2.21 std::string MHAParser::StrCnv::val2str (
                       const std::vector< std::vector< int > > & \nu )
Convert to string.
4.34.2.22 std::string MHAParser::StrCnv::val2str (
                       const std::vector< std::string > & \nu )
Convert to string.
4.34.2.23 std::string MHAParser::StrCnv::val2str (
                       const std::vector< std::vector< float >> & v )
Convert to string.
4.34.2.24 std::string MHAParser::StrCnv::val2str (
                       const std::vector< std::vector< mha_complex_t >> & v )
Convert to string.
4.35
      MHAPlugin Namespace Reference
Namespace for openMHA plugin class templates and thread-safe runtime configurations.
```

- Classes
 - class cfg_chain_t
 - class config_t

Template class for thread safe configuration.

class plugin_t

The template class for C++ openMHA plugins.

4.35.1 Detailed Description

Namespace for openMHA plugin class templates and thread-safe runtime configurations.

4.36 MHAPlugin_Resampling Namespace Reference

Classes

- class resampling_if_t
- class resampling_t

4.37 MHAPlugin_Split Namespace Reference

Classes

class domain_handler_t

Handles domain-specific partial input and output signal.

class dummy_threads_t

Dummy specification of a thread platform: This class implements everything in a single thread.

class posix_threads_t

Posix threads specification of thread platform.

class split t

Implements split plugin.

class splitted_part_t

The **splitted_part_t** (p. 714) instance manages the plugin that performs processing on the reduced set of channels.

class thread platform t

Basic interface for encapsulating thread creation, thread priority setting, and synchronization on any threading platform (i.e., pthreads or win32threads).

class uni_processor_t

An interface to a class that sports a process method with no parameters and no return value.

Enumerations

4.37.1 Detailed Description

A namespace for the split plugin. Helps testability and documentation.

4.37.2 Enumeration Type Documentation

4.37.2.1 anonymous enum

Invalid thread priority.

Enumerator

INVALID_THREAD_PRIORITY

4.38 MHASignal Namespace Reference

Namespace for audio signal handling and processing classes.

Classes

· class async_rmslevel_t

Class for asynchronous level metering.

- class delay_spec_t
- · class delay t

Class to realize a simple delay of waveform streams.

class delay_wave_t

Delayline containing wave fragments.

· class doublebuffer t

Double-buffering class.

- · class fft t
- class hilbert_fftw_t
- class hilbert_t

Hilbert transformation of a waveform segment.

class loop_wavefragment_t

Copy a fixed waveform fragment to a series of waveform fragments of other size.

class matrix_t

n-dimensional matrix with real or complex floating point values.

class minphase_t

Minimal phase function.

class quantizer_t

Simple simulation of fixpoint quantization.

class ringbuffer t

A ringbuffer class for time domain audio signal, which makes no assumptions with respect to fragment size.

class schroeder_t

Schroeder tone complex class.

class spectrum_t

a signal processing class for spectral data (based on **mha_spec_t** (p. 429))

- · class stat t
- class subsample_delay_t

implements subsample delay in spectral domain.

class uint_vector_t

Vector of unsigned values, used for size and index description of n-dimensional matrixes.

class waveform_t

signal processing class for waveform data (based on **mha_wave_t** (p. 459))

Functions

void for_each (mha_wave_t *s, mha_real_t(*fun)(mha_real_t))

Apply a function to each element of a mha wave t (p. 459).

mha_real_t lin2db (mha_real_t x)

Conversion from linear scale to dB (no SPL reference)

mha_real_t db2lin (mha_real_t x)

Conversion from dB scale to linear (no SPL reference)

mha_real_t pa2dbspl (mha_real_t x)

Conversion from linear Pascal scale to dB SPL.

mha_real_t pa22dbspl (mha_real_t x, mha_real_t eps=1e-20f)

Conversion from squared Pascal scale to dB SPL.

mha_real_t dbspl2pa (mha_real_t x)

Conversion from dB SPL to linear Pascal scale.

mha_real_t smp2sec (mha_real_t n, mha_real_t srate)

conversion from samples to seconds

mha_real_t sec2smp (mha_real_t sec, mha_real_t srate)

conversion from seconds to samples

• mha_real_t bin2freq (mha_real_t bin, unsigned fftlen, mha_real_t srate)

conversion from fft bin index to frequency

mha_real_t freq2bin (mha_real_t freq, unsigned fftlen, mha_real_t srate)

conversion from frequency to fft bin index

• mha_real_t smp2rad (mha_real_t samples, unsigned bin, unsigned fftlen)

conversion from delay in samples to phase shift

mha_real_t rad2smp (mha_real_t phase_shift, unsigned bin, unsigned fftlen)

conversion from phase shift to delay in samples

template < class elem type >

std::vector< elem_type > **dupvec** (std::vector< elem_type > vec, unsigned n)

Duplicate last vector element to match desired size.

template<class elem type >

std::vector< elem_type > dupvec_chk (std::vector< elem_type > vec, unsigned n)

Duplicate last vector element to match desired size, check for dimension.

void copy_channel (mha_spec_t &self, const mha_spec_t &src, unsigned sch, unsigned dch)

Copy one channel of a source signal.

void copy_channel (mha_wave_t &self, const mha_wave_t &src, unsigned src_
 channel, unsigned dest_channel)

Copy one channel of a source signal.

• mha_real_t rmslevel (const mha_spec_t &s, unsigned int channel, unsigned int fftlen)

Return RMS level of a spectrum channel.

mha_real_t colored_intensity (const mha_spec_t &s, unsigned int channel, unsigned int fftlen, mha_real_t sqfreq_response[])

Colored spectrum intensity.

mha_real_t maxabs (const mha_spec_t &s, unsigned int channel)

Find maximal absolute value.

mha_real_t rmslevel (const mha_wave_t &s, unsigned int channel)

Return RMS level of a waveform channel.

• mha real t maxabs (const mha wave t &s, unsigned int channel)

Find maximal absolute value.

• mha real t maxabs (const mha wave t &s)

Find maximal absolute value.

mha_real_t max (const mha_wave_t &s)

Find maximal value.

mha_real_t min (const mha_wave_t &s)

Find minimal value.

mha real t sumsqr channel (const mha wave t &s, unsigned int channel)

Calculate sum of squared values in one channel.

• mha_real_t sumsqr_frame (const mha_wave_t &s, unsigned int frame)

Calculate sum over all channels of squared values.

- void scale (mha spec t *dest, const mha wave t *src)
- void limit (mha_wave_t &s, const mha_real_t &min, const mha_real_t &max)

Limit the singal in the waveform buffer to the range [min, max].

template < class elem type >

elem_type kth_smallest (elem_type array[], unsigned n, unsigned k)

Fast search for the kth smallest element of an array.

• template<class elem type >

elem_type **median** (elem_type array[], unsigned n)

Fast median search.

template<class elem_type >

elem_type **mean** (const std::vector< elem_type > &data, elem_type start_val)

Calculate average of elements in a vector.

template<class elem type >

std::vector< elem_type > quantile (std::vector< elem_type > data, const std::vector< elem_type > &p)

Calculate quantile of elements in a vector.

- void saveas_mat4 (const mha_spec_t &data, const std::string &varname, FILE *fh)
 Save a openMHA spectrum as a variable in a Matlab4 file.
- void **saveas_mat4** (const **mha_wave_t** &data, const std::string &varname, FILE *fh)

 Save a openMHA waveform as a variable in a Matlab4 file.
- void saveas_mat4 (const std::vector< mha_real_t > &data, const std::string &varname,
 FILE *fh)

Save a float vector as a variable in a Matlab4 file.

void copy_permuted (mha_wave_t *dest, const mha_wave_t *src)

Copy contents of a waveform to a permuted waveform.

Variables

• unsigned long int **signal_counter** = 0

Signal counter to produce signal ID strings.

4.38.1 Detailed Description

Namespace for audio signal handling and processing classes.

4.38.2 Function Documentation

```
4.38.2.1 void MHASignal::scale (

mha_spec_t * dest,

const mha_wave_t * src )
```

Limit the singal in the waveform buffer to the range [min, max].

Parameters

S	The signal to limit. The signal in this wave buffer is modified.
min	lower limit
max	upper limit

Fast search for the kth smallest element of an array.

The order of elements is altered, but not completely sorted. Using the algorithm from N. Wirth, published in "Algorithms + data structures = programs", Prentice-Hall, 1976

Parameters

array	Element array
-------	---------------

Postcondition

The order of elements in the array is altered. array[k] then holds the result.

Parameters

n number of elements in array

Precondition

n >= 1

Parameters

k The k'th smalles element is returned: k = 0 returns the minimum, k = (n-1)/2 returns the median, k=(n-1) returns the maximum

Precondition

k < n

Returns

The kth smallest array element

Fast median search.

The order of elements is altered, but not completely sorted.

Parameters

array Element array

Postcondition

The order of elements in the array is altered. array[(n-1)/2] then holds the median.

Parameters

n number of elements in array

Precondition

```
n >= 1
```

Returns

The median of the array elements

Calculate average of elements in a vector.

Parameters

data	Input vector
start_val	Value for initialization of the return value before sum.

Returns

The average of the vector elements

Calculate quantile of elements in a vector.

Parameters

data	Input vector
р	Vector of probability values.

Returns

Vector of quantiles of input data, one entry for each probability value.

Save a openMHA spectrum as a variable in a Matlab4 file.

Parameters

data	openMHA spectrum to be saved.
varname	Matlab variable name (Matlab4 limitations on maximal length are not checked).
fh	File handle to Matlab4 file.

Save a openMHA waveform as a variable in a Matlab4 file.

Parameters

data	openMHA waveform to be saved.	
varname	Matlab variable name (Matlab4 limitations on maximal length are not checked).	
fh	File handle to Matlab4 file.	

Save a float vector as a variable in a Matlab4 file.

Parameters

data	Float vector to be saved.	
varname	Matlab variable name (Matlab4 limitations on maximal length are not checked).	
fh	File handle to Matlab4 file.	

Copy contents of a waveform to a permuted waveform.

Parameters

dest	Destination waveform
src	Source waveform

The total size of src and dest must be the same, num_frames and num_channels must be

exchanged in dest.

4.38.3 Variable Documentation

4.38.3.1 unsigned long int MHASignal::signal_counter = 0

Signal counter to produce signal ID strings.

4.39 MHASndFile Namespace Reference

Classes

- class sf_t
- class sf_wave_t

4.40 MHATableLookup Namespace Reference

Namespace for table lookup classes.

Classes

- class linear_table_t
 - Class for interpolation with equidistant x values.
- class table_t
- class xy_table_t

Class for interpolation with non-equidistant x values.

4.40.1 Detailed Description

Namespace for table lookup classes.

4.41 MHAWindow Namespace Reference

Collection of Window types.

Classes

· class bartlett t

Bartlett window.

class base t

Common base for window types.

· class blackman t

Blackman window.

class fun_t

Generic window based on a generator function.

• class hamming_t

Hamming window.

class hanning_t

von-Hann window

class rect_t

Rectangular window.

class user_t

User defined window.

Functions

· float rect (float)

Rectangular window function.

float bartlett (float)

Bartlett window function.

float hanning (float)

Hanning window function.

float hamming (float)

Hamming window function.

• float blackman (float)

Blackman window function.

4.41.1 Detailed Description

Collection of Window types.

4.41.2 Function Documentation

4.41.2.1 float MHAWindow::rect (float x)

Rectangular window function.

```
4.41.2.2 float MHAWindow::bartlett ( float x )
```

Bartlett window function.

```
4.41.2.3 float MHAWindow::hanning ( float x )
```

Hanning window function.

```
4.41.2.4 float MHAWindow::hamming ( float x )
```

Hamming window function.

```
4.41.2.5 float MHAWindow::blackman ( float x )
```

Blackman window function.

4.42 multibandcompressor Namespace Reference

Classes

- · class fftfb_plug_t
- class interface_t
- class plugin_signals_t

4.43 noisePowProposedScale Namespace Reference

Classes

- class interface_t
- class noisePowProposed

4.44 overlapadd Namespace Reference

Classes

- class overlapadd_if_t
- class overlapadd_t

4.45 plingploing Namespace Reference

All classes for the plingploing music generator live in this namespace.

Classes

· class if t

Plugin class of the plingploing music generator.

• class plingploing_t

Run-time configuration of the plingploing music generator.

Functions

• double **drand** (double a, double b)

4.45.1 Detailed Description

All classes for the plingploing music generator live in this namespace.

```
4.45.2 Function Documentation
```

```
4.45.2.1 double plingploing::drand ( double a, double b )
```

4.46 PluginLoader Namespace Reference

Classes

- class config_file_splitter_t
- class fourway_processor_t

This abstract class defines the interface for classes that implement all types of signal domain processing supported by the MHA: wave2wave, spec2spec, wave2spec, and spec2wave.

• class mhapluginloader_t

Functions

- const char * mhastrdomain (mha_domain_t)
- void mhaconfig_compare (const mhaconfig_t &req, const mhaconfig_t &avail, const std::string &pref="")

Compare two mhaconfig_t (p. 467) structures, and report differences as an error.

4.46.1 Function Documentation

```
4.46.1.1 const char * PluginLoader::mhastrdomain ( mha_domain_t d )
```

Compare two **mhaconfig_t** (p. 467) structures, and report differences as an error.

Parameters

req	Expected mhaconfig_t (p. 467) structure
avail	Available mhaconfig_t (p. 467) structure
pref	Prefix for error messages

4.47 route Namespace Reference

Classes

- class interface_t
- · class process_t

4.48 shadowfilter_begin Namespace Reference

Classes

- · class cfg_t
- class shadowfilter_begin_t

4.49 shadowfilter_end Namespace Reference

Classes

- · class cfg_t
- class shadowfilter_end_t

4.50 smoothgains_bridge Namespace Reference

Classes

- class overlapadd_if_t
- class smoothspec_wrap_t

4.51 testplugin Namespace Reference

Classes


- · class ac_parser_t
- class config_parser_t
- class if_t
- class signal_parser_t

5 Class Documentation

5.1 ac2lsl::ac2lsl_t Class Reference

Plugin class of ac2lsl (p. 77).

Inheritance diagram for ac2lsl::ac2lsl_t:

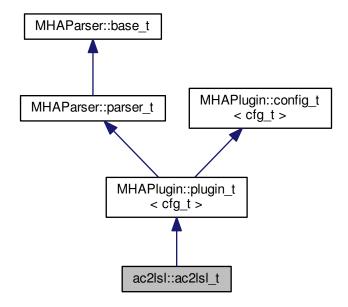

Public Member Functions

- ac2lsl_t (algo_comm_t iac, const char *chain, const char *algo)
- void prepare (mhaconfig_t &)

Prepare constructs the vector of bridge variables and locks the configuration, then calls **up-date()** (p. 128).

mha_wave_t * process (mha_wave_t *s)

Processing fct for waveforms.

mha_spec_t * process (mha_spec_t *s)

Processing fct for spectra.

• void process ()

Process function.

void release ()

Release fct.

Private Member Functions

· void update ()

Construct new runtime configuration.

Private Attributes

- MHAParser::vstring t vars
- MHAParser::bool_t rt_strict
- MHAParser::bool_t activate
- MHAParser::int_t skip
- MHAEvents::patchbay_t< ac2lsl_t > patchbay
- std::vector< std::unique_ptr< save_var_base_t >> varlist

Additional Inherited Members

5.1.1 Detailed Description

Plugin class of ac2lsl (p. 77).

5.1.2 Constructor & Destructor Documentation

5.1.3 Member Function Documentation

Prepare constructs the vector of bridge variables and locks the configuration, then calls **up-date()** (p. 128).

```
Implements MHAPlugin::plugin_t < cfg_t > (p. 693).
```

```
5.1.3.2 mha_wave_t* ac2lsl::ac2lsl_t::process (
                    mha_wave_t * s ) [inline]
Processing fct for waveforms.
Calls process(void) (p. 128).
5.1.3.3 mha spec t* ac2lsl::ac2lsl_t::process (
                    mha spec t * s ) [inline]
Processing fct for spectra.
Calls process(void) (p. 128).
5.1.3.4 void ac2lsl::ac2lsl_t::process (
                    void )
Process function.
Checks once if the plugin is run in a real-time thread and throws if rt_strict is true, then forwards
to cfg_t::process() (p. 130).
5.1.3.5 void ac2|s|::ac2|s|_t::release( ) [virtual]
Release fct.
Unlocks variable name list
Reimplemented from MHAPlugin::plugin_t< cfg_t > (p. 694).
5.1.3.6 void ac2lsl::ac2lsl_t::update() [private]
Construct new runtime configuration.
5.1.4 Member Data Documentation
5.1.4.1 MHAParser::vstring_t ac2lsl::ac2lsl_t::vars [private]
5.1.4.2 MHAParser::bool t ac2lsl::ac2lsl_t::rt_strict [private]
5.1.4.3 MHAParser::bool_t ac2lsl::ac2lsl_t::activate [private]
5.1.4.4 MHAParser::int t ac2lsl::ac2lsl_t::skip [private]
5.1.4.5 MHAEvents::patchbay_t<ac2lsl_t> ac2lsl::ac2lsl_t::patchbay [private]
5.1.4.6 std::vector<std::unique_ptr<save_var_base_t>> ac2lsl::ac2lsl_t::varlist [private]
The documentation for this class was generated from the following file:
```

ac2lsl.cpp

© 2005-2018 HörTech gGmbH, Oldenburg

5.2 ac2lsl::cfg_t Class Reference

Runtime configuration class of the **ac2lsl** (p. 77) plugin.

Public Member Functions

```
    cfg_t (bool activate_, unsigned skipcnt_, std::vector< std::unique_ptr< save_var_← base_t >> *varlist_)
```

C'tor of ac2lsI (p. 77) run time configuration.

• void process ()

Private Attributes

- std::vector< std::unique_ptr< save_var_base_t >> * varlist

 Pointer to vector of unique ptr's of ac to lsl bridges.
- unsigned skipcnt

Counter of frames to skip.

unsigned skip

Number of frames to skip after each send.

· bool activate

Activate/Deactivate sending to Isl.

5.2.1 Detailed Description

Runtime configuration class of the ac2lsl (p. 77) plugin.

5.2.2 Constructor & Destructor Documentation

C'tor of ac2lsl (p. 77) run time configuration.

Parameters

activate⇔	Activate/Deactivate sending
_	
skipcnt⊷	Number of frames to skip after each send
varlist⇔	Pointer to vector of unique ptr's of ac to Isl bridges.

5.2.3 Member Function Documentation

5.2.3.1 void cfg_t::process (void)

5.2.4 Member Data Documentation

5.2.4.1 std::vector<std::unique_ptr<save_var_base_t>>* ac2lsl::cfg_t::varlist [private]

Pointer to vector of unique ptr's of ac to Isl bridges.

Raw pointer because we do not take ownership

5.2.4.2 unsigned ac2lsl::cfg_t::skipcnt [private]

Counter of frames to skip.

5.2.4.3 unsigned ac2lsl::cfg_t::skip [private]

Number of frames to skip after each send.

5.2.4.4 bool ac2lsl::cfg_t::activate [private]

Activate/Deactivate sending to Isl.


The documentation for this class was generated from the following file:

· ac2lsl.cpp

5.3 ac2lsl::save_var_base_t Class Reference

Interface for ac to Isl bridge variable.

Inheritance diagram for ac2lsl::save_var_base_t:

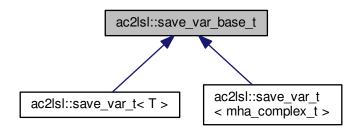

Public Member Functions

- virtual void send frame ()=0
- virtual ~save_var_base_t ()=default

5.3.1 Detailed Description

Interface for ac to Isl bridge variable.

5.3.2 Constructor & Destructor Documentation

- **5.3.2.1** virtual ac2lsl::save_var_base_t::~save_var_base_t() [virtual], [default]
- 5.3.3 Member Function Documentation
- **5.3.3.1 virtual void ac2lsl::save_var_base_t::send_frame()** [pure virtual]

Implemented in ac2lsl::save_var_t< mha_complex_t > (p. 135), and ac2lsl::save_var_t< T > (p. 133).


The documentation for this class was generated from the following file:

· ac2lsl.cpp

5.4 ac2lsl::save_var_t < T > Class Template Reference

Implementation for all ac to Isl bridges except complex types.

Inheritance diagram for ac2lsl::save_var_t< T >:

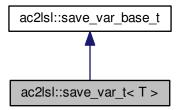

Public Member Functions

save_var_t (const std::string &name, const std::string &type, void *data, size_t num_
entries)

C'tor of generic ac to Isl bridge.

- virtual ~save_var_t ()=default
- virtual void send_frame ()

Send a frame to Isl.

Private Attributes

• Isl::stream_outlet **stream**LSL stream outlet.

• T * buf

Pointer to data buffer of the ac variable.

5.4.1 Detailed Description

```
template<typename T> class ac2lsl::save_var_t< T>
```

Implementation for all ac to Isl bridges except complex types.

5.4.2 Constructor & Destructor Documentation

C'tor of generic ac to Isl bridge.

Parameters

name	Name of variable as seen in Isl	
type	Type of variable as seen in Isl	
data	Pointer to data buffer of the ac variable	
num_entries	Number of entries if the ac variable is a vector. Should be set to one if not a vector.	

5.4.2.2 template < typename T > virtual ac2lsl::save_var_t < T > :: \sim save_var_t () [virtual], [default]

- 5.4.3 Member Function Documentation

Send a frame to Isl.

Implements ac2lsl::save_var_base_t (p. 131).

- 5.4.4 Member Data Documentation
- **5.4.4.1** template<typename T > Isl::stream_outlet ac2Isl::save_var_t< T >::stream [private]

LSL stream outlet.

Interface to Isl

5.4.4.2 template<typename T > T* ac2lsl::save_var_t < T >::buf [private]


Pointer to data buffer of the ac variable.

The documentation for this class was generated from the following file:

- ac2lsl.cpp
- 5.5 ac2lsl::save_var_t < mha_complex_t > Class Template Reference

Template specialization of the ac2lsl (p. 77) bridge to take care of complex numbers.

Inheritance diagram for ac2lsl::save_var_t< mha_complex_t >:

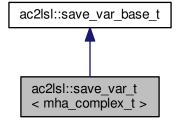

Public Member Functions

save_var_t (const std::string &name, const std::string &type, void *data, size_t _num_← entries)

C'tor of specialization for complex types.

- virtual ~save_var_t ()=default
- virtual void send_frame ()

Send a frame of complex types.

Private Attributes

• lsl::stream_outlet stream

LSL stream outlet.

std::vector< mha_real_t > vec

Vector that gets sent over to the Isl instead of the actual complex type.

mha_complex_t * buf

Pointer to data buffer of the ac variable.

size_t num_entries

Number of entries in the vector.

5.5.1 Detailed Description

```
template<> class ac2lsl::save_var_t< mha_complex_t >
```

Template specialization of the **ac2lsl** (p. 77) bridge to take care of complex numbers.

This specialization is needed because Isl does not support complex numbers. Order is [re(0), im(0), re(1), im(1), ...]

5.5.2 Constructor & Destructor Documentation

C'tor of specialization for complex types.

See generic c'tor for details.

135

5.5.3 Member Function Documentation

Send a frame of complex types.

Reorders real and imaginary parts into one vector.

Implements ac2lsl::save_var_base_t (p. 131).

5.5.4 Member Data Documentation

5.5.4.1 Isl::stream_outlet ac2lsl::save_var_t < mha_complex_t >::stream [private]

LSL stream outlet.

Interface to Isl

5.5.4.2 std::vector<mha_real_t> ac2lsl::save_var_t< mha_complex_t>::vec [private]

Vector that gets sent over to the Isl instead of the actual complex type.

5.5.4.3 mha_complex_t* ac2lsl::save_var_t< mha_complex_t >::buf [private]

Pointer to data buffer of the ac variable.

5.5.4.4 size_t ac2lsl::save_var_t < mha_complex_t >::num_entries [private]

Number of entries in the vector.


The documentation for this class was generated from the following file:

ac2lsl.cpp

5.6 ac2osc_t Class Reference

Plugin class of the ac2osc plugin.

Inheritance diagram for ac2osc_t:

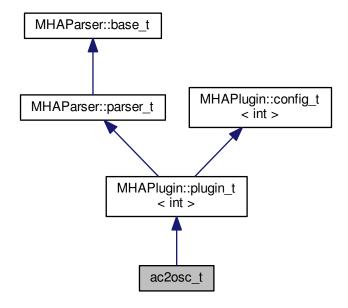

Public Member Functions

- ac2osc_t (algo_comm_t iac, const char *chain, const char *algo)
 C'tor of plugin class.
- void prepare (mhaconfig_t &)
- mha_wave_t * process (mha_wave_t *s)

Processing fct for waveforms.

mha_spec_t * process (mha_spec_t *s)

Processing fct for spectra.

• void process ()

Process function.

• void release ()

Release frees osc related memory, does cleanup.

Private Member Functions

- void send_osc_float ()
- void update_mode ()

Start/Stop sending of messages.

Private Attributes

MHAParser::string_t host

OSC server host name.

MHAParser::string_t port

OSC server port.

MHAParser::int_t ttl

Time-to-live of UDP packages.

MHAParser::vstring_t vars

List of AC variables to be saved, empty for all.

MHAParser::kw_t mode

Record mode.

MHAParser::int_t skip

number of frames to skip after sending

MHAParser::bool_t rt_strict

abort if used in real-time thread?

- MHA_AC::acspace2matrix_t * acspace
- MHAEvents::patchbay_t< ac2osc_t > patchbay
- bool b_record
- uint8_t * rtmem
- float framerate
- int skipcnt
- lo_address lo_addr

Additional Inherited Members

5.6.1 Detailed Description

Plugin class of the ac2osc plugin.

5.6.2 Constructor & Destructor Documentation

C'tor of plugin class.

5.6.3 Member Function Documentation

Implements MHAPlugin::plugin_t< int > (p. 693).

Processing fct for waveforms.

Calls process(void) (p. 138).

Processing fct for spectra.

Calls process(void) (p. 138).

```
5.6.3.4 void ac2osc_t::process ( void )
```

Process function.

Checks once if the plugin is run in a real-time thread and throws if rt_strict is true, sends osc messages according to config.

Release frees osc related memory, does cleanup.

Reimplemented from **MHAPlugin::plugin** t < int > (p. 694).

```
5.6.3.6 void ac2osc_t::send_osc_float( ) [private]
```

```
5.6.3.7 void ac2osc_t::update_mode( ) [private]
```

Start/Stop sending of messages.

5.6.4 Member Data Documentation

5.6.4.1 MHAParser::string_t ac2osc_t::host [private]

OSC server host name.

5.6.4.2 MHAParser::string_t ac2osc_t::port [private]

OSC server port.


```
5.6.4.3 MHAParser::int_t ac2osc_t::ttl [private]
Time-to-live of UDP packages.
5.6.4.4 MHAParser::vstring_t ac2osc_t::vars [private]
List of AC variables to be saved, empty for all.
5.6.4.5 MHAParser::kw_t ac2osc_t::mode [private]
Record mode.
5.6.4.6 MHAParser::int_t ac2osc_t::skip [private]
number of frames to skip after sending
5.6.4.7 MHAParser::bool_t ac2osc_t::rt_strict [private]
abort if used in real-time thread?
5.6.4.8 MHA_AC::acspace2matrix_t* ac2osc_t::acspace [private]
5.6.4.9 MHAEvents::patchbay_t<ac2osc_t> ac2osc_t::patchbay [private]
5.6.4.10 bool ac2osc_t::b_record [private]
5.6.4.11 uint8_t* ac2osc_t::rtmem [private]
5.6.4.12 float ac2osc_t::framerate [private]
5.6.4.13 int ac2osc_t::skipcnt [private]
5.6.4.14 lo_address ac2osc_t::lo_addr [private]
```

The documentation for this class was generated from the following file:

ac2osc.cpp

5.7 ac2wave_if_t Class Reference

Inheritance diagram for ac2wave_if_t:

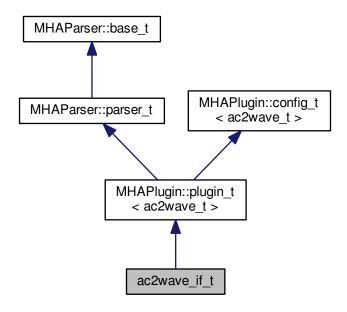

Public Member Functions

- ac2wave_if_t (const algo_comm_t &, const std::string &, const std::string &)
- mha_wave_t * process (mha_spec_t *)
- mha_wave_t * process (mha_wave_t *)
- void prepare (mhaconfig_t &)
- void release ()

Private Member Functions

• void update ()

Private Attributes

- MHAParser::string_t name
- MHAParser::float_t gain_in
- MHAParser::float_t gain_ac
- MHAParser::int_t delay_in
- MHAParser::int_t delay_ac
- MHASignal::waveform_t * zeros
- bool prepared
- MHAEvents::patchbay_t< ac2wave_if_t > patchbay

Additional Inherited Members

```
5.7.1 Constructor & Destructor Documentation
5.7.1.1 ac2wave if t::ac2wave if t(
                   const algo_comm_t & iac,
                   const std::string & ith,
                   const std::string & ial )
5.7.2 Member Function Documentation
5.7.2.1 mha_wave_t * ac2wave_if_t::process (
                   mha spec t*)
5.7.2.2 mha wave t * ac2wave if t::process (
                   mha_wave_t * s
5.7.2.3 void ac2wave_if_t::prepare (
                   mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin_t< ac2wave_t > (p. 693).
5.7.2.4 void ac2wave if t::release (
                   void ) [virtual]
Reimplemented from MHAPlugin::plugin_t< ac2wave_t > (p. 694).
5.7.2.5 void ac2wave_if_t::update( ) [private]
5.7.3 Member Data Documentation
5.7.3.1 MHAParser::string_t ac2wave_if_t::name [private]
5.7.3.2 MHAParser::float_t ac2wave_if_t::gain_in [private]
5.7.3.3 MHAParser::float_t ac2wave_if_t::gain_ac [private]
5.7.3.4 MHAParser::int_t ac2wave_if_t::delay_in [private]
5.7.3.5 MHAParser::int_t ac2wave_if_t::delay_ac [private]
5.7.3.6 MHASignal::waveform_t* ac2wave_if_t::zeros [private]
5.7.3.7 bool ac2wave if t::prepared [private]
5.7.3.8 MHAEvents::patchbay_t<ac2wave_if_t> ac2wave_if_t::patchbay [private]
The documentation for this class was generated from the following file:
```

ac2wave.cpp

5.8 ac2wave_t Class Reference

Public Member Functions

- ac2wave_t (unsigned int frames_, unsigned int channels_, algo_comm_t ac_, std::string name_, float gain_in_, float gain_ac_, unsigned int delay_in_, unsigned int delay_ac_)
- mha_wave_t * process (mha_wave_t *)

Private Attributes

- · unsigned int frames
- unsigned int channels
- · mha wave tw
- · algo_comm_t ac
- std::string name
- MHASignal::delay_wave_t delay_in
- MHASignal::delay_wave_t delay_ac
- mha_real_t gain_in
- · mha_real_t gain_ac
- 5.8.1 Constructor & Destructor Documentation

- 5.8.2 Member Function Documentation
- 5.8.2.1 mha_wave_t * ac2wave_t::process (mha_wave_t * s)
- 5.8.3 Member Data Documentation
- **5.8.3.1 unsigned int ac2wave_t::frames** [private]
- **5.8.3.2 unsigned int ac2wave_t::channels** [private]
- 5.8.3.3 mha wave tac2wave_t::w [private]


```
5.8.3.4 algo_comm_t ac2wave_t::ac [private]
5.8.3.5 std::string ac2wave_t::name [private]
5.8.3.6 MHASignal::delay_wave_t ac2wave_t::delay_in [private]
5.8.3.7 MHASignal::delay_wave_t ac2wave_t::delay_ac [private]
5.8.3.8 mha_real_t ac2wave_t::gain_in [private]
5.8.3.9 mha_real_t ac2wave_t::gain_ac [private]
```

The documentation for this class was generated from the following file:

· ac2wave.cpp

5.9 acConcat_wave Class Reference

Inheritance diagram for acConcat_wave:

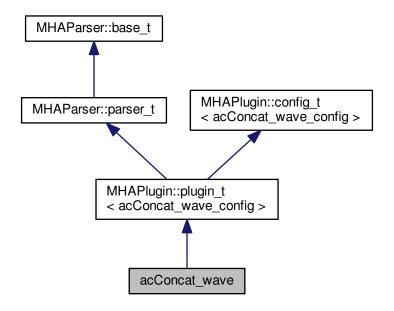

Public Member Functions

acConcat_wave (algo_comm_t &ac, const std::string &chain_name, const std::string &algo_name)

Constructs our plugin.

- ∼acConcat_wave ()
- mha wave t * process (mha wave t *)

Checks for the most recent configuration and defers processing to it.

void prepare (mhaconfig_t &)

Plugin preparation.

void release (void)

Public Attributes

- MHAParser::int_t num_AC
- MHAParser::string_t prefix_names_AC
- MHAParser::vint t samples AC
- MHAParser::string_t name_conAC

Private Member Functions

void update_cfg ()

Private Attributes

MHAEvents::patchbay_t< acConcat_wave > patchbay

Additional Inherited Members

```
5.9.1 Constructor & Destructor Documentation
```

Constructs our plugin.

```
5.9.1.2 acConcat_wave::~acConcat_wave()
```

5.9.2 Member Function Documentation

```
5.9.2.1 mha_wave_t * acConcat_wave::process ( mha wave t * signal )
```

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number	
	channels, frames per block, sampling rate.	

Implements MHAPlugin::plugin_t< acConcat_wave_config > (p. 693).

Reimplemented from MHAPlugin::plugin_t < acConcat_wave_config > (p. 694).

- 5.9.2.4 void acConcat_wave::update_cfg() [private]
- 5.9.3 Member Data Documentation
- 5.9.3.1 MHAParser::int_t acConcat_wave::num_AC
- 5.9.3.2 MHAParser::string t acConcat_wave::prefix_names_AC
- 5.9.3.3 MHAParser::vint_t acConcat_wave::samples_AC
- 5.9.3.4 MHAParser::string_t acConcat_wave::name_conAC
- 5.9.3.5 MHAEvents::patchbay t<acConcat wave> acConcat_wave::patchbay [private]

The documentation for this class was generated from the following files:

- · acConcat wave.h
- acConcat_wave.cpp
- 5.10 acConcat_wave_config Class Reference

Public Member Functions

- acConcat_wave_config (algo_comm_t &ac, const mhaconfig_t in_cfg, acConcat_
 wave *_concat)
- ~acConcat_wave_config ()
- mha_wave_t * process (mha_wave_t *)

Public Attributes

```
algo_comm_t & ac
```

- std::vector< std::string > strNames_AC
- std::vector< int > numSamples_AC
- mha_wave_t vGCC
- MHA_AC::waveform_t * vGCC_con

5.10.1 Constructor & Destructor Documentation

- 5.10.1.2 acConcat_wave_config::~acConcat_wave_config()
- 5.10.2 Member Function Documentation
- 5.10.3 Member Data Documentation
- 5.10.3.1 algo comm t& acConcat_wave_config::ac
- 5.10.3.2 std::vector<std::string> acConcat_wave_config::strNames_AC
- 5.10.3.3 std::vector<int> acConcat_wave_config::numSamples_AC
- 5.10.3.4 mha_wave_t acConcat_wave_config::vGCC
- 5.10.3.5 MHA_AC::waveform_t* acConcat_wave_config::vGCC_con

The documentation for this class was generated from the following files:

- acConcat_wave.h
- acConcat_wave.cpp
- 5.11 acmon::ac monitor t Class Reference

A class for converting AC variables to Parser monitors of correct type.

Public Member Functions

ac_monitor_t (MHAParser::parser_t &parent, const std::string &name_, algo_comm
 _t ac, bool use_matrix)

Converts AC variable to parser monitor.

void getvar (algo_comm_t ac)

Update values of monitor.

Public Attributes

• std::string name

name of AC variable and parser monitor

std::string dimstr

columns x rows

MHAParser::vfloat_mon_t mon

Monitor used for real vectors.

MHAParser::mfloat mon t mon mat

Monitor used for real matrices.

MHAParser::vcomplex_mon_t mon_complex

monitor used for complex vectors

MHAParser::mcomplex_mon_t mon_mat_complex

monitor used for complex matrices

MHAParser::parser_t & p_parser

parent parser to insert monitor into

Private Attributes

· bool use mat

if true, use matrix monitor, else use vector monitor

5.11.1 Detailed Description

A class for converting AC variables to Parser monitors of correct type.

5.11.2 Constructor & Destructor Documentation

```
5.11.2.1 acmon::ac_monitor_t::ac_monitor_t (

MHAParser::parser_t & parent,

const std::string & name_,

algo_comm_t ac,

bool use_matrix )
```

Converts AC variable to parser monitor.

Parameters

parent	The parser to insert a monitor into	
name_	The name of the AC variable and the monitor variable	
ac	Handle to algorithm communication space	
use_matrix	Indicates if a matrix monitor type should be used.	

5.11.3 Member Function Documentation

Update values of monitor.

Parameters

ac	Handle to algorithm communication space
----	---

5.11.4 Member Data Documentation

5.11.4.1 std::string acmon::ac_monitor_t::name

name of AC variable and parser monitor

5.11.4.2 std::string acmon::ac_monitor_t::dimstr

columns x rows

5.11.4.3 MHAParser::vfloat_mon_t acmon::ac_monitor_t::mon

Monitor used for real vectors.

5.11.4.4 MHAParser::mfloat_mon_t acmon::ac_monitor_t::mon_mat

Monitor used for real matrices.

5.11.4.5 MHAParser::vcomplex_mon_t acmon::ac_monitor_t::mon_complex

monitor used for complex vectors

5.11.4.6 MHAParser::mcomplex_mon_t acmon::ac_monitor_t::mon_mat_complex

monitor used for complex matrices

5.11.4.7 MHAParser::parser_t& acmon::ac_monitor_t::p_parser

parent parser to insert monitor into


5.11.4.8 bool acmon::ac_monitor_t::use_mat [private]

if true, use matrix monitor, else use vector monitor

The documentation for this class was generated from the following files:

- ac_monitor_type.hh
- ac_monitor_type.cpp
- 5.12 acmon::acmon_t Class Reference

Inheritance diagram for acmon::acmon_t:

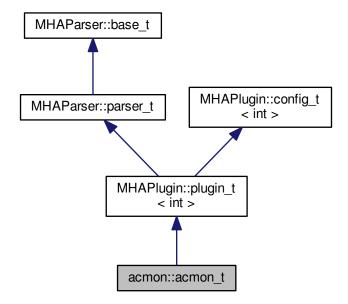

Public Member Functions

```
• acmon_t (const algo_comm_t &, const std::string &, const std::string &)
```

- ~acmon t ()
- void prepare (mhaconfig_t &)
- void release ()
- mha_spec_t * process (mha_spec_t *)
- mha_wave_t * process (mha_wave_t *)

Private Member Functions

- void save_vars ()
- void update_recmode ()

Private Attributes

- algo_comm_t ac
- MHAParser::vstring_mon_t varlist
- MHAParser::vstring_mon_t dimensions
- MHAParser::kw t dispmode
- MHAParser::kw_t recmode
- std::vector< ac_monitor_t * > vars
- MHAEvents::patchbay t< acmon t > patchbay
- std::string chain
- std::string algo
- bool b_cont
- bool b_snapshot

Additional Inherited Members

5.12.1 Constructor & Destructor Documentation

```
5.12.1.2 acmon::acmon_t::\simacmon_t ( void )
```

5.12.2 Member Function Documentation

Implements MHAPlugin::plugin_t< int > (p. 693).


```
5.12.2.2 void acmon::acmon t::release (
                   void ) [inline],[virtual]
Reimplemented from MHAPlugin::plugin_t< int > (p. 694).
5.12.2.3 mha_spec_t * acmon::acmon_t::process (
                   mha spec t * s)
5.12.2.4 mha wave t * acmon::acmon_t::process (
                   mha wave t * s)
5.12.2.5 void acmon::acmon_t::save_vars() [private]
5.12.2.6 void acmon::acmon_t::update_recmode( ) [private]
5.12.3 Member Data Documentation
5.12.3.1 algo_comm_t acmon::acmon_t::ac [private]
5.12.3.2 MHAParser::vstring mon t acmon::acmon t::varlist [private]
5.12.3.3
        MHAParser::vstring mon tacmon::acmon t::dimensions [private]
5.12.3.4
        MHAParser::kw_t acmon::acmon_t::dispmode [private]
        MHAParser::kw_t acmon::acmon_t::recmode [private]
5.12.3.5
5.12.3.6 std::vector<ac_monitor_t*> acmon::acmon_t::vars [private]
5.12.3.7 MHAEvents::patchbay_t<acmon_t> acmon::acmon_t::patchbay [private]
5.12.3.8
        std::string acmon::acmon_t::chain [private]
5.12.3.9 std::string acmon::acmon_t::algo [private]
5.12.3.10 bool acmon::acmon_t::b_cont [private]
5.12.3.11 bool acmon::acmon_t::b_snapshot [private]
```

The documentation for this class was generated from the following file:

· acmon.cpp

5.13 acPooling_wave Class Reference

Inheritance diagram for acPooling_wave:

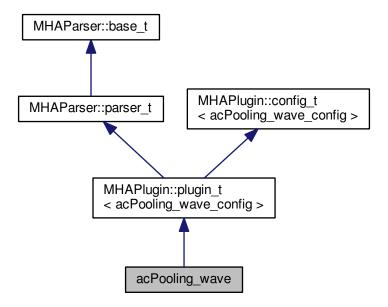

Public Member Functions

acPooling_wave (algo_comm_t &ac, const std::string &chain_name, const std::string &algo_name)

Constructs our plugin.

- ∼acPooling_wave ()
- mha_wave_t * process (mha_wave_t *)

Checks for the most recent configuration and defers processing to it.

void prepare (mhaconfig_t &)

Plugin preparation.

void release (void)

Public Attributes

- MHAParser::int_t numsamples
- MHAParser::int_t pooling_wndlen
- MHAParser::kw_t pooling_type
- MHAParser::float_t upper_threshold
- MHAParser::float_t lower_threshold
- MHAParser::int_t neighbourhood

```
    MHAParser::float_t alpha
```

- MHAParser::string_t p_name
- MHAParser::string_t pool_name
- MHAParser::string_t max_pool_ind_name
- · MHAParser::string t like ratio name

Private Member Functions

void update_cfg ()

Private Attributes

MHAEvents::patchbay_t< acPooling_wave > patchbay

Additional Inherited Members

```
5.13.1 Constructor & Destructor Documentation
```

Constructs our plugin.

```
5.13.1.2 acPooling_wave::~acPooling_wave()
```

5.13.2 Member Function Documentation

```
5.13.2.1 mha_wave_t * acPooling_wave::process ( mha_wave_t * signal )
```

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number of	
	channels, frames per block, sampling rate.	

Implements MHAPlugin::plugin_t< acPooling_wave_config > (p. 693).

Reimplemented from MHAPlugin::plugin_t< acPooling_wave_config > (p. 694).

```
5.13.2.4 void acPooling_wave::update_cfg( ) [private]
```

5.13.3 Member Data Documentation

```
5.13.3.1 MHAParser::int_t acPooling_wave::numsamples
```

5.13.3.2 MHAParser::int_t acPooling_wave::pooling_wndlen

5.13.3.3 MHAParser::kw t acPooling_wave::pooling_type

5.13.3.4 MHAParser::float_t acPooling_wave::upper_threshold

5.13.3.5 MHAParser::float tacPooling_wave::lower_threshold

5.13.3.6 MHAParser::int_t acPooling_wave::neighbourhood

5.13.3.7 MHAParser::float_t acPooling_wave::alpha

5.13.3.8 MHAParser::string_t acPooling_wave::p_name

5.13.3.9 MHAParser::string_t acPooling_wave::pool_name

5.13.3.10 MHAParser::string_t acPooling_wave::max_pool_ind_name

5.13.3.11 MHAParser::string_t acPooling_wave::like_ratio_name

5.13.3.12 MHAEvents::patchbay_t<acPooling_wave> acPooling_wave::patchbay [private]

The documentation for this class was generated from the following files:

- acPooling_wave.h
- acPooling_wave.cpp

5.14 acPooling_wave_config Class Reference

Public Member Functions

- acPooling_wave_config (algo_comm_t &ac, const mhaconfig_t in_cfg, acPooling
 —wave *_pooling)
- ~acPooling_wave_config ()
- mha_wave_t * process (mha_wave_t *)
- void insert ()

Public Attributes

- · algo comm t & ac
- std::string raw_p_name
- MHA_AC::waveform_t p
- MHA AC::waveform t p max
- MHA_AC::waveform_t like_ratio
- mha_wave_t c
- unsigned int pooling_ind
- unsigned int pooling_option
- unsigned int pooling_size
- float up_thresh
- float low thresh
- int neigh
- float alpha
- MHASignal::waveform_t pool
- 5.14.1 Constructor & Destructor Documentation
- 5.14.1.2 acPooling_wave_config::~acPooling_wave_config()
- 5.14.2 Member Function Documentation
- 5.14.2.2 void acPooling_wave_config::insert ()
- 5.14.3 Member Data Documentation

5.14.3.1	algo_comm_t& acPooling_wave_config::ac
5.14.3.2	std::string acPooling_wave_config::raw_p_name
5.14.3.3	MHA_AC::waveform_t acPooling_wave_config::p
5.14.3.4	MHA_AC::waveform_t acPooling_wave_config::p_max
5.14.3.5	MHA_AC::waveform_t acPooling_wave_config::like_ratio
5.14.3.6	mha_wave_t acPooling_wave_config::c
5.14.3.7	unsigned int acPooling_wave_config::pooling_ind
5.14.3.8	unsigned int acPooling_wave_config::pooling_option
5.14.3.9	unsigned int acPooling_wave_config::pooling_size
5.14.3.10	float acPooling_wave_config::up_thresh
5.14.3.11	float acPooling_wave_config::low_thresh
5.14.3.12	int acPooling_wave_config::neigh
5.14.3.13	float acPooling_wave_config::alpha


The documentation for this class was generated from the following files:

5.14.3.14 MHASignal::waveform_t acPooling_wave_config::pool

- · acPooling_wave.h
- acPooling_wave.cpp

5.15 acsave::acsave_t Class Reference

Inheritance diagram for acsave::acsave_t:

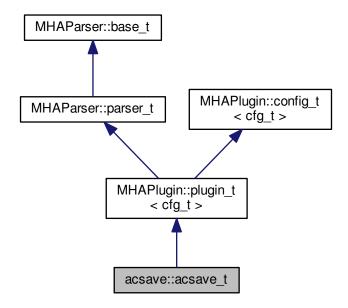

Public Member Functions

- acsave_t (const algo_comm_t &, const std::string &, const std::string &)
- void prepare (mhaconfig_t &)
- void release ()
- mha_spec_t * process (mha_spec_t *)
- mha_wave_t * process (mha_wave_t *)
- void event_start_recording ()
- void event_stop_and_flush ()

Private Types

typedef std::vector< save_var_t * > varlist_t

Private Member Functions

• void process ()

Private Attributes

```
MHAParser::bool_t bflush
MHAParser::kw_t fileformat
MHAParser::string_t fname
MHAParser::float_t reclen
MHAParser::vstring_t variables
varlist_t varlist
std::string chain
std::string algo
bool b_prepared
bool b_flushed
MHAEvents::patchbay_t< acsave_t > patchbay
```

Additional Inherited Members

Reimplemented from MHAPlugin::plugin_t < cfg_t > (p. 694).

```
5.15.3.3 mha_spec_t * acsave::acsave_t::process (
                    mha\_spec\_t * s)
5.15.3.4 mha_wave_t * acsave::acsave_t::process (
                    mha wave t * s)
5.15.3.5 void acsave::acsave_t::event_start_recording()
5.15.3.6 void acsave::acsave_t::event_stop_and_flush()
5.15.3.7 void acsave::acsave_t::process (
                    void ) [private]
5.15.4 Member Data Documentation
5.15.4.1 MHAParser::bool tacsave::acsave_t::bflush [private]
5.15.4.2 MHAParser::kw t acsave::acsave_t::fileformat [private]
5.15.4.3 MHAParser::string_t acsave::acsave_t::fname [private]
5.15.4.4 MHAParser::float tacsave::acsave_t::reclen [private]
5.15.4.5 MHAParser::vstring_t acsave::acsave_t::variables [private]
5.15.4.6 varlist tacsave::acsave_t::varlist [private]
        std::string acsave::acsave_t::chain [private]
5.15.4.8 std::string acsave::acsave_t::algo [private]
5.15.4.9 bool acsave::acsave_t::b_prepared [private]
5.15.4.10 bool acsave::acsave_t::b_flushed [private]
5.15.4.11 MHAEvents::patchbay_t<acsave_t> acsave_t::patchbay [private]
```

The documentation for this class was generated from the following file:

· acsave.cpp

5.16 acsave::cfg_t Class Reference

Public Member Functions

- cfg_t (const algo_comm_t &iac, unsigned int imax_frames, std::vector< std::string > &var_names)
- ~cfg_t ()
- void store_frame ()
- void flush_data (const std::string &, unsigned int)

Private Attributes

- · algo_comm_t ac
- · unsigned int nvars
- save_var_t ** varlist
- unsigned int rec_frames
- unsigned int max_frames

5.16.1 Constructor & Destructor Documentation

```
5.16.1.2 cfg_t::\simcfg_t()
```

5.16.2 Member Function Documentation

```
5.16.2.1 void cfg_t::store_frame ( )
```

This function is called in the processing thread.

This function is called in the configuration thread.

Parameters

filename	Output file name
fmt	Output file format

5.16.3 Member Data Documentation

```
5.16.3.1 algo_comm_t acsave::cfg_t::ac [private]
5.16.3.2 unsigned int acsave::cfg_t::nvars [private]
5.16.3.3 save_var_t** acsave::cfg_t::varlist [private]
5.16.3.4 unsigned int acsave::cfg_t::rec_frames [private]
```

5.16.3.5 unsigned int acsave::cfg_t::max_frames [private]

The documentation for this class was generated from the following file:

· acsave.cpp

5.17 acsave::mat4head t Struct Reference

Public Attributes

- int32_t t
- int32_t rows
- int32 t cols
- int32_t imag
- int32_t namelen

5.17.1 Member Data Documentation

- 5.17.1.1 int32 t acsave::mat4head t::t
- 5.17.1.2 int32_t acsave::mat4head_t::rows
- 5.17.1.3 int32_t acsave::mat4head_t::cols
- 5.17.1.4 int32_t acsave::mat4head_t::imag
- 5.17.1.5 int32_t acsave::mat4head_t::namelen

The documentation for this struct was generated from the following file:

· acsave.cpp

5.18 acsave::save_var_t Class Reference

Public Member Functions

```
• save_var_t (const std::string &, int, const algo_comm_t &)
```

- \sim save_var_t ()
- void store_frame ()
- void save_txt (FILE *, unsigned int)
- void save_mat4 (FILE *, unsigned int)
- void save_m (FILE *, unsigned int)

Public Attributes

• double * data

Private Attributes

- std::string name
- unsigned int **nframes**
- · unsigned int ndim
- · unsigned int maxframe
- algo_comm_t ac
- unsigned int framecnt
- bool b_complex

5.18.1 Constructor & Destructor Documentation

5.18.2 Member Function Documentation

```
5.18.2.1 void acsave::save_var_t::store_frame ( )
```


```
5.18.2.3 void acsave::save_var_t::save_mat4 (
                     FILE * fh,
                     unsigned int writeframes )
5.18.2.4 void acsave::save_var_t::save_m (
                     FILE * fh.
                     unsigned int writeframes )
5.18.3 Member Data Documentation
5.18.3.1 double* acsave::save_var_t::data
5.18.3.2 std::string acsave::save_var_t::name [private]
5.18.3.3 unsigned int acsave::save_var_t::nframes [private]
5.18.3.4 unsigned int acsave::save_var_t::ndim [private]
5.18.3.5 unsigned int acsave::save_var_t::maxframe [private]
5.18.3.6 algo_comm_t acsave::save_var_t::ac [private]
5.18.3.7 unsigned int acsave::save_var_t::framecnt [private]
5.18.3.8 bool acsave::save_var_t::b_complex [private]
```

The documentation for this class was generated from the following file:

acsave.cpp

5.19 acSteer Class Reference

Inheritance diagram for acSteer:

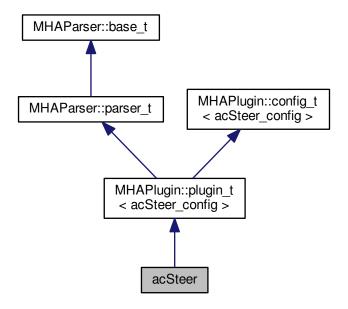

Public Member Functions

acSteer (algo_comm_t &ac, const std::string &chain_name, const std::string &algo_←
name)

Constructs our plugin.

- ~acSteer ()
- mha_spec_t * process (mha_spec_t *)

Thos method is a NOOP.

void prepare (mhaconfig_t &)

Plugin preparation.

void release (void)

Public Attributes

- MHAParser::string_t steerFile
- MHAParser::string_t acSteerName1
- MHAParser::string_t acSteerName2
- MHAParser::int_t nsteerchan
- MHAParser::int_t nrefmic

Private Member Functions

void update_cfg ()

Private Attributes

MHAEvents::patchbay_t< acSteer > patchbay

Additional Inherited Members

```
5.19.1 Constructor & Destructor Documentation
```

```
5.19.1.1 acSteer::acSteer (

algo_comm_t & ac,

const std::string & chain_name,

const std::string & algo name )
```

Constructs our plugin.

```
5.19.1.2 acSteer:: ~acSteer ( )
```

5.19.2 Member Function Documentation

Thos method is a NOOP.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number of	
	channels, frames per block, sampling rate.	

Implements MHAPlugin::plugin_t< acSteer_config > (p. 693).

The documentation for this class was generated from the following files:

- · acSteer.h
- acSteer.cpp

5.20 acSteer_config Class Reference

Public Member Functions

- acSteer_config (algo_comm_t &ac, const mhaconfig_t in_cfg, acSteer *acSteer)
- ~acSteer_config ()
- void **insert** ()

Public Attributes

- unsigned int nchan
- unsigned int nfreq
- unsigned int **nsteerchan**
- · unsigned int nrefmic
- unsigned int nangle
- MHA_AC::spectrum_t specSteer1
- MHA_AC::spectrum_t specSteer2

```
5.20.1 Constructor & Destructor Documentation
```


- 5.20.1.2 acSteer_config::~acSteer_config()
- 5.20.2 Member Function Documentation
- 5.20.2.1 void acSteer_config::insert ()
- 5.20.3 Member Data Documentation
- 5.20.3.1 unsigned int acSteer_config::nchan
- 5.20.3.2 unsigned int acSteer_config::nfreq
- 5.20.3.3 unsigned int acSteer_config::nsteerchan
- 5.20.3.4 unsigned int acSteer_config::nrefmic
- 5.20.3.5 unsigned int acSteer_config::nangle
- 5.20.3.6 MHA_AC::spectrum_t acSteer_config::specSteer1
- 5.20.3.7 MHA_AC::spectrum_t acSteer_config::specSteer2

The documentation for this class was generated from the following files:

- · acSteer.h
- · acSteer.cpp

5.21 acTransform wave Class Reference

Inheritance diagram for acTransform_wave:

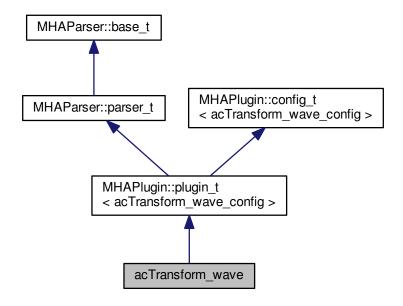

Public Member Functions

acTransform_wave (algo_comm_t &ac, const std::string &chain_name, const std
 ::string &algo_name)

Constructs our plugin.

- ~acTransform_wave ()
- mha_wave_t * process (mha_wave_t *)

Checks for the most recent configuration and defers processing to it.

void prepare (mhaconfig_t &)

Plugin preparation.

void release (void)

Public Attributes

- MHAParser::string_t ang_name
- MHAParser::string_t raw_p_name
- MHAParser::string_t raw_p_max_name
- MHAParser::string_t rotated_p_name
- MHAParser::string_t rotated_p_max_name
- MHAParser::int_t numsamples
- MHAParser::bool_t to_from

Private Member Functions

void update_cfg ()

Private Attributes

MHAEvents::patchbay_t< acTransform_wave > patchbay

Additional Inherited Members

```
5.21.1 Constructor & Destructor Documentation
```

Constructs our plugin.

```
5.21.1.2 acTransform_wave::~acTransform_wave( )
```

5.21.2 Member Function Documentation

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

Parameters

signal_ini	Structure containing a description of the form of the signal (domain, number o	
	channels, frames per block, sampling rate.	

Implements MHAPlugin::plugin_t< acTransform_wave_config > (p. 693).

The documentation for this class was generated from the following files:

5.21.3.8 MHAEvents::patchbay_t<acTransform_wave> acTransform_wave::patchbay

· acTransform wave.h

[private]

- acTransform_wave.cpp
- 5.22 acTransform wave config Class Reference

5.21.3.7 MHAParser::bool t acTransform_wave::to_from

Public Member Functions

- acTransform_wave_config (algo_comm_t &ac, const mhaconfig_t in_cfg, ac←
 Transform_wave *_transform)
- ~acTransform_wave_config ()
- mha_wave_t * process (mha_wave_t *)

Public Attributes

- · algo_comm_t & ac
- std::string ang_name
- std::string raw p name
- std::string raw p max name
- MHA_AC::waveform_t rotated_p
- MHA_AC::int_t rotated_i
- unsigned int offset
- unsigned int resolution
- · unsigned int to from
- 5.22.1 Constructor & Destructor Documentation


- 5.22.1.2 acTransform_wave_config::~acTransform_wave_config()
- 5.22.2 Member Function Documentation
- 5.22.3 Member Data Documentation
- 5.22.3.1 algo_comm_t& acTransform_wave_config::ac
- 5.22.3.2 std::string acTransform_wave_config::ang_name
- 5.22.3.3 std::string acTransform_wave_config::raw_p_name
- 5.22.3.4 std::string acTransform_wave_config::raw_p_max_name
- 5.22.3.5 MHA_AC::waveform_t acTransform_wave_config::rotated_p
- 5.22.3.6 MHA_AC::int_t acTransform_wave_config::rotated_i
- 5.22.3.7 unsigned int acTransform_wave_config::offset
- 5.22.3.8 unsigned int acTransform_wave_config::resolution
- 5.22.3.9 unsigned int acTransform_wave_config::to_from

The documentation for this class was generated from the following files:

- · acTransform wave.h
- acTransform_wave.cpp

5.23 addsndfile::addsndfile_if_t Class Reference

Inheritance diagram for addsndfile::addsndfile_if_t:

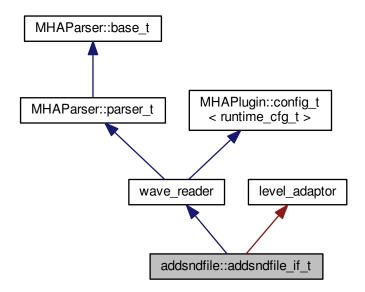

Public Member Functions

- $addsndfile_if_t$ ($algo_comm_t$, const char *, const char *)
- mha_wave_t * process (mha_wave_t *)
- void prepare (mhaconfig_t &)
- void release ()

Private Member Functions

- void **update** ()
- void change_mode ()
- void set_level ()
- void scan_dir ()

Private Attributes

- MHAParser::string_t filename
- MHAParser::string_t path
- MHAParser::bool_t loop
- MHAParser::float_t level

```
    MHAParser::kw_t levelmode
```

- MHAParser::kw t resamplingmode
- MHAParser::vint t channels
- MHAParser::kw t mode
- MHAParser::float_t ramplen
- MHAParser::int t startpos
- MHAParser::vint_mon_t mapping
- MHAParser::int_mon_t numchannels
- MHAParser::int_mon_t mhachannels
- MHAParser::int_mon_t active
- MHAParser::string_t search_pattern
- MHAParser::vstring_mon_t search_result
- unsigned int uint_mode
- MHAEvents::patchbay_t< addsndfile_if_t > patchbay

```
Additional Inherited Members
```

```
5.23.1 Constructor & Destructor Documentation
```

5.23.2 Member Function Documentation

Implements MHAPlugin::plugin_t< runtime_cfg_t > (p. 693).

Reimplemented from MHAPlugin::plugin_t< runtime_cfg_t > (p. 694).


```
5.23.2.4 void addsndfile::addsndfile_if_t::update( ) [private]
5.23.2.5 void addsndfile::addsndfile_if_t::change_mode( ) [private]
5.23.2.6 void addsndfile::addsndfile_if_t::set_level() [private]
5.23.2.7 void addsndfile::addsndfile_if_t::scan_dir( ) [private]
5.23.3 Member Data Documentation
        MHAParser::string_t addsndfile::addsndfile_if_t::filename [private]
5.23.3.1
5.23.3.2 MHAParser::string taddsndfile::addsndfile if t::path [private]
5.23.3.3
        MHAParser::bool taddsndfile::addsndfile_if_t::loop [private]
5.23.3.4
        MHAParser::float t addsndfile::addsndfile if t::level [private]
5.23.3.5
        MHAParser::kw t addsndfile::addsndfile_if_t::levelmode [private]
5.23.3.6
        MHAParser::kw t addsndfile::addsndfile_if_t::resamplingmode [private]
5.23.3.7
        MHAParser::vint t addsndfile::addsndfile if t::channels [private]
5.23.3.8
        MHAParser::kw t addsndfile::addsndfile_if_t::mode [private]
5.23.3.9
        MHAParser::float taddsndfile::addsndfile if t::ramplen [private]
5.23.3.10 MHAParser::int_t addsndfile::addsndfile_if_t::startpos [private]
5.23.3.11 MHAParser::vint mon taddsndfile::addsndfile_if_t::mapping [private]
5.23.3.12 MHAParser::int_mon_t addsndfile::addsndfile_if_t::numchannels [private]
5.23.3.13 MHAParser::int_mon_t addsndfile::addsndfile_if_t::mhachannels [private]
5.23.3.14 MHAParser::int mon taddsndfile::addsndfile_if_t::active [private]
5.23.3.15 MHAParser::string_t addsndfile::addsndfile_if_t::search_pattern [private]
5.23.3.16 MHAParser::vstring mon t addsndfile::addsndfile_if_t::search_result [private]
5.23.3.17 unsigned int addsndfile::addsndfile_if_t::uint_mode [private]
5.23.3.18 MHAEvents::patchbay_t<addsndfile_if_t> addsndfile::addsndfile_if_t::patchbay
         [private]
```

The documentation for this class was generated from the following file:

addsndfile.cpp

5.24 addsndfile::level_adapt_t Class Reference

Inheritance diagram for addsndfile::level_adapt_t:

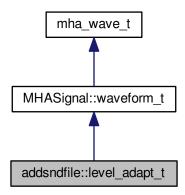

Public Member Functions

- level_adapt_t (mhaconfig_t cf, mha_real_t adapt_len, mha_real_t l_new_, mha_real _t l_old_)
- void update_frame ()
- mha_real_t get_level () const
- bool can_update () const

Private Attributes

- unsigned int ilen
- unsigned int pos
- MHAWindow::fun_t wnd
- mha_real_t l_new
- mha_real_t l_old

Additional Inherited Members

5.24.1 Constructor & Destructor Documentation


- 5.24.2 Member Function Documentation
- 5.24.2.1 void addsndfile::level_adapt_t::update_frame ()
- 5.24.2.2 mha_real_t addsndfile::level_adapt_t::get_level() const [inline]
- **5.24.2.3** bool addsndfile::level_adapt_t::can_update() const [inline]
- 5.24.3 Member Data Documentation
- **5.24.3.1** unsigned int addsndfile::level_adapt_t::ilen [private]
- **5.24.3.2 unsigned int addsndfile::level_adapt_t::pos** [private]
- **5.24.3.3 MHAWindow::fun_t addsndfile::level_adapt_t::wnd** [private]
- **5.24.3.4 mha real t addsndfile::level_adapt_t::l_new** [private]
- **5.24.3.5 mha_real_t** addsndfile::level_adapt_t::l_old [private]

The documentation for this class was generated from the following file:

addsndfile.cpp

5.25 addsndfile::resampled_soundfile_t Class Reference

Reads sound from file and resamples it if necessary and wanted. Inheritance diagram for addsndfile::resampled_soundfile_t:

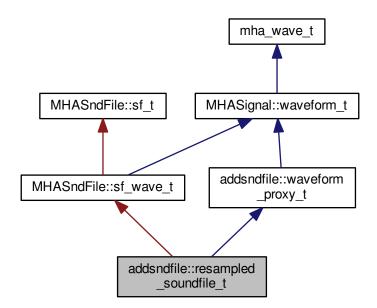

Public Member Functions

resampled_soundfile_t (const std::string &name, float mha_sampling_rate, addsndfile ←
 _resampling_mode_t resampling_mode)

Reads sound from file and resamples if necessary and wanted.

Additional Inherited Members

5.25.1 Detailed Description

Reads sound from file and resamples it if necessary and wanted.

Sound data can then be used by addsndfile.

5.25.2 Constructor & Destructor Documentation

Reads sound from file and resamples if necessary and wanted.

If the sound file does not specify a sampling rate, then the sound data is always used without resampling.

Parameters

name	Sound file name	
mha_sampling_rate	The sampling rate of the MHA signal processing at the point of the addsndfile plugin	
resampling_mode	DONT_RESAMPLE_STRICT: Do not resample, just use the samples from the sound file at the current sample rate, even if the sample rate of the sound file differs. DONT_RESAMPLE_PERMISSIVE: Do not resample, if the sample rate of the MHA differs from the sample rate of the sound file, raise an error. DO_RESAMPLE: Resample.	

Exceptions


MHA_Error (p. 410)	If the sampling rate of the file does not match the sampling rate of
the MHA and DONT_RESAMPLE_STRICT was requested	
	resampling failed (e.g. due to non-rational quotient of MHA sampling
	rate and sound file sampling rate).

The documentation for this class was generated from the following file:

addsndfile.cpp

5.26 addsndfile::sndfile t Class Reference

Inheritance diagram for addsndfile::sndfile_t:

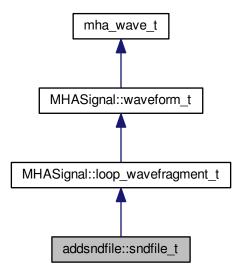

Public Member Functions

sndfile_t (const std::string &name, bool loop, unsigned int level_mode, std::vector< int > channels_, unsigned int nchannels, std::vector< int > &mapping, int &numchannels, unsigned int startpos, float mha_sampling_rate, addsndfile_resampling_mode_t resampling_mode)

Additional Inherited Members

5.26.1 Constructor & Destructor Documentation


The documentation for this class was generated from the following file:

· addsndfile.cpp

5.27 addsndfile::waveform_proxy_t Class Reference

Class helps to specify which instance of MHASignal_waveform_t parent instance is meant in **resampled_soundfile_t** (p. 177).

Inheritance diagram for addsndfile::waveform_proxy_t:

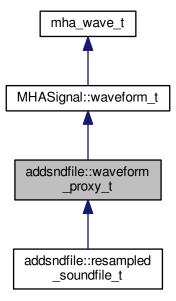

Public Member Functions

waveform_proxy_t (unsigned frames, unsigned channels)

Additional Inherited Members

5.27.1 Detailed Description

Class helps to specify which instance of MHASignal_waveform_t parent instance is meant in **resampled_soundfile_t** (p. 177).

5.27.2 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

· addsndfile.cpp

5.28 ADM::ADM < F > Class Template Reference

Adaptive differential microphone, working for speech frequency range.

Public Member Functions

- **ADM** (F fs, F dist, unsigned lp_order, const F *lp_alphas, unsigned decomb_order, const F *decomb_alphas, F tau_beta=F(50e-3), F mu_beta=F(1e-4))

 Create Adaptive Differential Microphone.
- F process (const F &front, const F &back, const F &external_beta=F(-1))
 ADM (p. 181) processes one frame.
- F beta () const

Private Attributes

- Delay
 F > m_delay_front
- Delay
 F > m_delay_back
- Linearphase_FIR< F > m_lp_bf
- Linearphase_FIR< F > m_lp_result
- Linearphase_FIR< F> m_decomb
- Fm beta
- F m_mu_beta
- F m_powerfilter_coeff
- F m_powerfilter_norm
- F m_powerfilter_state

5.28.1 Detailed Description

```
template < class F> class ADM::ADM < F>
```

Adaptive differential microphone, working for speech frequency range.

5.28.2 Constructor & Destructor Documentation

```
5.28.2.1 template < class F > ADM::ADM< F >::ADM ( F fs, F dist, unsigned lp_order, const F * lp_alphas, unsigned decomb_order, const F * decomb_alphas, F tau_beta = F (50e-3), F mu_beta = F (1e-4)
```

Create Adaptive Differential Microphone.

Parameters

fs	Sampling rate / Hz
dist	Distance between physical microphones / m
lp_order	Filter order of FIR lowpass filter used for adaptation
lp_alphas	Pointer to array of alpha coefficients for the lowpass filter used for adaptation. Since this class uses linear phase FIR filters only, only the first half (order/2 + 1) of the coefficients will be read (coefficients for linear-phase FIR filters are symmetric).
decomb_order	Filter order of FIR compensation filter (compensates for comb filter characteristic)
decomb_alphas	Pointer to array of alpha coefficients for the compensation filter used to compensate for the comb filter characteristic. Since this class uses linear phase FIR filters only, only the first half (order/2 + 1)of the coefficients will be read (coefficients for linear-phase FIR filters are symmetric).
tau_beta	Time constant of the lowpass filter used for averaging the power of the output signal
mu_beta	adaption speed

5.28.3 Member Function Documentation

ADM (p. 181) processes one frame.

Parameters

front	The current front input signal sample	
back	The current rear input signal sample	
external_beta	If >= 0, this is used as the "beta" parameter for direction to filter out. Else, the beta parameter is adapted to filtered out a direction so that best reduction of signal intensity from the back hemisphere is achieved.	

Returns

The computed output sample

```
5.28.3.2 template < class F > F ADM::ADM < F >::beta ( ) const [inline]
5.28.4 Member Data Documentation
5.28.4.1 template < class F > Delay < F > ADM::ADM < F >::m_delay_front [private]
5.28.4.2 template < class F > Delay < F > ADM::ADM < F >::m_delay_back [private]
5.28.4.3 template < class F > Linearphase_FIR < F > ADM::ADM < F >::m_lp_bf [private]
5.28.4.4 template < class F > Linearphase_FIR < F > ADM::ADM < F >::m_lp_result [private]
5.28.4.5 template < class F > Linearphase_FIR < F > ADM::ADM < F >::m_decomb [private]
5.28.4.6 template < class F > F ADM::ADM < F >::m_beta [private]
5.28.4.7 template < class F > F ADM::ADM < F >::m_mu_beta [private]
5.28.4.8 template < class F > F ADM::ADM < F >::m_powerfilter_coeff [private]
5.28.4.9 template < class F > F ADM::ADM < F >::m_powerfilter_norm [private]
5.28.4.10 template < class F > F ADM::ADM < F >::m_powerfilter_state [private]
```

The documentation for this class was generated from the following file:

· adm.hh

5.29 ADM::Delay < F > Class Template Reference

A delay-line class which can also do subsample-delays for a limited frequency range below fs/4.

Public Member Functions

- Delay (F samples, F f_design, F fs)
 Create a signal delay object.
- ∼Delay ()
- F process (const F &in sample)

Apply delay to signal.

Private Attributes

unsigned m_fullsamples

Integer part of delay.

F m_coeff

coefficient for 1st order IIR lowpass filter which does the subsample delay

• F m_norm

normalization for the IIR subsample delay filter

• F * m_state

Ringbuffer: Delayline.

unsigned m_now_in

current position for inserting new samples into m_state ringbuffer

5.29.1 Detailed Description

```
template < class F> class ADM::Delay < F >
```

A delay-line class which can also do subsample-delays for a limited frequency range below fs/4.

5.29.2 Constructor & Destructor Documentation

Create a signal delay object.

Parameters

samples	number of samples to delay (may be non-integer)
f_design	subsampledelay is exact for this frequency
fs	sampling frequency

5.29.2.2 template
$$<$$
 class F $>$ ADM::Delay $<$ F $>$:: \sim Delay $($

5.29.3 Member Function Documentation

Apply delay to signal.

Parameters

ample The current input signal sample

Returns

The computed output sample

5.29.4 Member Data Documentation

5.29.4.1 template < class F > unsigned ADM::Delay < F >::m_fullsamples [private] Integer part of delay.

coefficient for 1st order IIR lowpass filter which does the subsample delay

5.29.4.3 template
$$<$$
 class $F > F$ ADM::Delay $< F >$::m_norm [private]

normalization for the IIR subsample delay filter

Ringbuffer: Delayline.

5.29.4.5 template < class F > unsigned ADM::Delay < F >::m_now_in [private]

current position for inserting new samples into m_state ringbuffer

The documentation for this class was generated from the following file:

· adm.hh

5.30 ADM::Linearphase_FIR< F > Class Template Reference

An efficient linear-phase fir filter implementation.

Public Member Functions

- Linearphase_FIR (unsigned order, const F *alphas)
 Create linear-phase FIR filter.
- ∼Linearphase_FIR ()
- F process (const F &in_sample)

Filter one sample with this linear-phase FIR filter.

Private Attributes

unsigned m_order

The filter order of this linear-phase FIR filter.

F * m_alphas

FIR filter coefficients.

• F * m output

Ringbuffer for building future output.

unsigned m now

current start of ringbuffer

5.30.1 Detailed Description

```
template < class F> class ADM::Linearphase_FIR < F >
```

An efficient linear-phase fir filter implementation.

5.30.2 Constructor & Destructor Documentation

```
5.30.2.1 template < class F > ADM::Linearphase_FIR < F > ::Linearphase_FIR (unsigned order, const F * alphas )
```

Create linear-phase FIR filter.

Parameters

order	filter order of this FIR filter. restriction: must be even.	
alphas	pointer to Array of alpha coefficients. Since this class is for linear phase FIR filters	
	only, only (order / 2 + 1) coefficients will be read. (Coefficients for linear-phase FIR	
	filters are symmetric.)	

5.30.2.2 template
$$<$$
 class F $>$ ADM::Linearphase_FIR $<$ F $>$:: \sim Linearphase_FIR $($

5.30.3 Member Function Documentation

5.30.3.1 template
$$<$$
 class F $>$ F ADM::Linearphase_FIR $<$ F $>$::process (const F & in_sample) [inline]

Filter one sample with this linear-phase FIR filter.

Parameters

in_sample	the current input sample
-----------	--------------------------

Returns

the computed output sample

5.30.4 Member Data Documentation

5.30.4.1 template < class F > unsigned ADM::Linearphase_FIR < F >::m_order [private]

The filter order of this linear-phase FIR filter.

5.30.4.2 template < class F > F* ADM::Linearphase_FIR < F >::m_alphas [private]

FIR filter coefficients.

Only m_order / 2 + 1 coefficients need to be stored since coefficients of linear-phase FIR filters are symmetric

5.30.4.3 template < class F > F* ADM::Linearphase_FIR < F >::m_output [private]

Ringbuffer for building future output.

5.30.4.4 template < class F > unsigned ADM::Linearphase_FIR < F >::m_now [private]


current start of ringbuffer

The documentation for this class was generated from the following file:

· adm.hh

5.31 adm_if_t Class Reference

Inheritance diagram for adm_if_t:

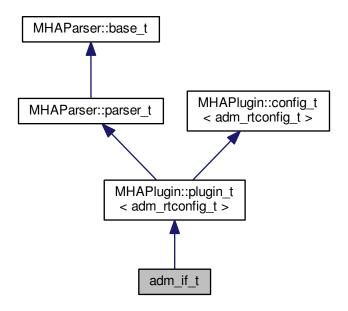

Public Member Functions

- adm_if_t (const algo_comm_t &ac, const std::string &thread_name, const std::string &algo_name)
- mha_wave_t * process (mha_wave_t *in)
- virtual void prepare (mhaconfig_t &)
- virtual void release ()

Private Member Functions

- void **update** ()
- bool is_prepared ()

```
Private Attributes

    MHASignal::waveform t * out

    MHAParser::vint_t front_channels

    MHAParser::vint_t rear_channels

    MHAParser::vfloat_t distances

    MHAParser::int_t lp_order

    MHAParser::int_t decomb_order

    MHAParser::int t bypass

    MHAParser::float_t beta

    MHAParser::vfloat t mu beta

    MHAParser::vfloat_t tau_beta

    MHAParser::vfloat_mon_t coeff_lp

    MHAParser::vfloat_mon_t coeff_decomb

   unsigned input_channels

    mha_real_t srate

    MHAEvents::patchbay_t< adm_if_t > patchbay

Additional Inherited Members
5.31.1 Constructor & Destructor Documentation
```

```
5.31.1.1 adm_if_t::adm_if_t (
                      const algo_comm_t & ac,
                      const std::string & thread_name,
                      const std::string & algo_name )
```

```
5.31.2 Member Function Documentation
```

```
5.31.2.1 mha_wave_t * adm_if_t::process (
                    mha_wave_t * in )
5.31.2.2 void adm_if_t::prepare (
                    mhaconfig_t & cfg ) [virtual]
Implements MHAPlugin::plugin_t < adm_rtconfig_t > (p. 693).
```

void) [virtual]

Reimplemented from MHAPlugin::plugin_t< adm_rtconfig_t > (p. 694).

5.31.2.3 void adm_if_t::release (

```
5.31.2.4 void adm_if_t::update( ) [private]
5.31.2.5 bool adm_if_t::is_prepared() [inline], [private]
5.31.3 Member Data Documentation
        MHASignal::waveform t*adm_if_t::out [private]
5.31.3.2 MHAParser::vint tadm_if_t::front_channels [private]
5.31.3.3 MHAParser::vint_t adm_if_t::rear_channels [private]
5.31.3.4 MHAParser::vfloat_t adm_if_t::distances [private]
5.31.3.5 MHAParser::int_t adm_if_t::lp_order [private]
5.31.3.6 MHAParser::int_t adm_if_t::decomb_order [private]
5.31.3.7 MHAParser::int_t adm_if_t::bypass [private]
5.31.3.8 MHAParser::float_t adm_if_t::beta [private]
        MHAParser::vfloat_t adm_if_t::mu_beta [private]
5.31.3.10 MHAParser::vfloat_t adm_if_t::tau_beta [private]
5.31.3.11 MHAParser::vfloat mon tadm_if_t::coeff_lp [private]
5.31.3.12 MHAParser::vfloat mon tadm_if_t::coeff_decomb [private]
5.31.3.13 unsigned adm_if_t::input_channels [private]
5.31.3.14 mha_real_t adm_if_t::srate [private]
5.31.3.15 MHAEvents::patchbay_t<adm_if_t> adm_if_t::patchbay [private]
```

The documentation for this class was generated from the following file:

adm.cpp

5.32 adm_rtconfig_t Class Reference

Public Types

typedef ADM::ADM< mha_real_t > adm_t

Public Member Functions

adm_rtconfig_t (unsigned nchannels_in, unsigned nchannels_out, const std::vector< int > &front_channels, const std::vector< int > &rear_channels, const mha_real_t fs, const std::vector< mha_real_t > &distances, const int lp_order, const int decomb_order, const std::vector< mha_real_t > &tau_beta, const std::vector< mha_real_t > &mu_
beta)

Construct new ADMs.

- virtual ~adm rtconfig t ()
- size_t num_adms () const
- adm_t & adm (unsigned index)

Returns adm object number index.

• int front_channel (unsigned index) const

Returns index of front channel for adm number index.

• int rear channel (unsigned index) const

Returns index of rear channel for adm number index.

Private Member Functions

void check_index (unsigned index) const

Index checking for all internal arrays.

Private Attributes

std::vector< int > front_channels

Indices of channels containing the signals from the front microphones.

std::vector< int > rear_channels

Indices of channels containing the signals from the rear microphones.

MHASignal::waveform_t * lp_coeffs

Lowpass filter coefficients.

std::vector< MHASignal::waveform_t * > decomb_coeffs

Decomb-Filter coefficients.

std::vector< adm_t * > adms

ADMs.

- 5.32.1 Member Typedef Documentation
- 5.32.1.1 typedef ADM::ADM<mha_real_t> adm_rtconfig_t::adm_t
- 5.32.2 Constructor & Destructor Documentation

Construct new ADMs.

Used when configuration changes.

Parameters

nchannels_in	Number of input channels
nchannels_out	Number of output channels
front_channels	Parser's front_channels setting
rear_channels	Parser's front_channels setting
fs	Sampling rate / Hz
distances	Distances between microphones / m
lp_order	Filter order of FIR lowpass filter for adaptation
decomb_order	Filter order of FIR compensation filter (compensates for comb filter characteristic)
tau_beta	Time constants of the lowpass filter used for averaging the power of the output signal used for adaptation
mu_beta	Adaptation step sizes

```
5.32.2.2 adm_rtconfig_t::~adm_rtconfig_t() [virtual]
```

5.32.3 Member Function Documentation

Index checking for all internal arrays.

Exceptions

MHA_Error (p. 410)	if index out of range.
-----------------------------------	------------------------

```
5.32.3.2 size_t adm_rtconfig_t::num_adms() const [inline]
5.32.3.3 adm_t& adm_rtconfig_t::adm (
                    unsigned index ) [inline]
Returns adm object number index.
5.32.3.4 int adm_rtconfig_t::front_channel (
                    unsigned index ) const [inline]
Returns index of front channel for adm number index.
5.32.3.5 int adm_rtconfig_t::rear_channel (
                    unsigned index ) const [inline]
Returns index of rear channel for adm number index.
5.32.4 Member Data Documentation
5.32.4.1 std::vector<int> adm_rtconfig_t::front_channels [private]
Indices of channels containing the signals from the front microphones.
5.32.4.2 std::vector<int> adm_rtconfig_t::rear_channels [private]
Indices of channels containing the signals from the rear microphones.
5.32.4.3 MHASignal::waveform_t*adm_rtconfig_t::lp_coeffs [private]
Lowpass filter coefficients.
5.32.4.4 std::vector<MHASignal::waveform_t*>adm_rtconfig_t::decomb_coeffs [private]
Decomb-Filter coefficients.
5.32.4.5 std::vector<adm_t *> adm_rtconfig_t::adms [private]
ADMs.
```

The documentation for this class was generated from the following file:

adm.cpp

5.33 algo_comm_t Struct Reference

A reference handle for algorithm communication variables.

Public Attributes

• void * handle

AC variable control handle.

int(* insert_var)(void *, const char *, comm_var_t)

Register an AC variable.

int(* insert_var_int)(void *, const char *, int *)

Register an int as an AC variable.

int(* insert_var_float)(void *, const char *, float *)

Register a float as an AC variable.

int(* remove_var)(void *, const char *)

Remove an AC variable.

int(* remove_ref)(void *, void *)

Remove all AC variable which refer to address.

int(* is_var)(void *, const char *)

Test if an AC variable exists.

int(* get_var)(void *, const char *, comm_var_t *)

Get the variable handle of an AC variable.

int(* get_var_int)(void *, const char *, int *)

Get the value of an int AC variable.

int(* get_var_float)(void *, const char *, float *)

Get the value of a float AC variable.

int(* get entries)(void *, char *, unsigned int)

Return a space separated list of all variable names.

const char *(* get_error)(int)

Convert AC error codes into human readable error messages.

5.33.1 Detailed Description

A reference handle for algorithm communication variables.

This structure contains a coontrol handle and a set of function pointers for sharing variables within one processing chain. See also section **Communication between algorithms** (p. 27).

5.33.2 Member Data Documentation

5.33.2.1 algo_comm_t::handle

AC variable control handle.

5.33.2.2 algo_comm_t::insert_var

Register an AC variable.

This function can register a variable to be shared within one chain. If a variable of this name exists it will be overwritten.

Parameters

h	AC handle
n	name of variable. May not be empty. Must not contain space character. The name is
	copied, therefore it is allowed that the char array pointed to gets invalid after return.
V	variable handle of type comm_var_t (p. 232)

Returns

Error code or zero on success

5.33.2.3 algo_comm_t::insert_var_int

Register an int as an AC variable.

This function can register an int variable to be shared with other algorithms. It behaves similar to ac.insert_var.

Parameters

h	AC handle
n	name of variable
V	pointer on the variable

Returns

Error code or zero on success

5.33.2.4 algo_comm_t::insert_var_float

Register a float as an AC variable.

This function can register a float variable to be shared with other algorithms. It behaves similar to ac.insert_var.

Parameters

h	AC handle
n	name of variable
V	pointer on the variable

Returns

Error code or zero on success

5.33.2.5 algo_comm_t::remove_var

Remove an AC variable.

Remove (unregister) an AC variable. After calling this function, the variable is not available to ac.is_var or ac.get_var. The data pointer is not affected.

Parameters

h	AC handle
n	name of variable to be removed

Returns

Error code or zero on success

5.33.2.6 algo_comm_t::remove_ref

Remove all AC variable which refer to address.

This function removes all AC variables whos data field points to the given address.

Parameters

h	AC handle
p	address which should not be referred to any more

Returns

Error code or zero on success

5.33.2.7 algo_comm_t::is_var

Test if an AC variable exists.

This function tests if an AC variable of a given name exists. Use ac.get_var to get information about the variables type and dimension.

Parameters

h	AC handle
n	name of variable

Returns

1 if the variable exists, 0 otherwise

5.33.2.8 algo_comm_t::get_var

Get the variable handle of an AC variable.

This function returns the variable handle **comm_var_t** (p. 232) of a variable of the given name. If no variable of that name exists, an error code is returned.

Parameters

h	AC handle
n	name of variable
V	pointer to a AC variable object

Returns

Error code or zero on success

5.33.2.9 algo_comm_t::get_var_int

Get the value of an int AC variable.

This function returns the value of an int AC variable of the given name. If no variable exists, the variable type is mismatching or more than one entry is registered, a corresponding error code is returned. This is a special version of ac.get_var.

Parameters

h	AC handle
n	name of variable
V	pointer on an int variable to store the result

Returns

Error code or zero on success

5.33.2.10 algo_comm_t::get_var_float

Get the value of a float AC variable.

This function returns the value of a float AC variable of the given name. If no variable exists, the variable type is mismatching or more than one entry is registered, a corresponding error code is returned. This is a special version of ac.get_var.

Parameters

h	AC handle
n	name of variable
V	pointer on a float variable to store the result

Returns

Error code or zero on success

5.33.2.11 algo_comm_t::get_entries

Return a space separated list of all variable names.

This function returns the names of all registered variables, separated by a single space.

Parameters

h AC handle

Return values

ret Character buffer for return value

Parameters

len length of character buffer

Returns

Error code or zero on success. -1: invalid ac handle. -3: not enough room in character buffer to store all variable names.

5.33.2.12 algo_comm_t::get_error

Convert AC error codes into human readable error messages.

Parameters

e Error code

Returns


Error message

The documentation for this struct was generated from the following files:

- · mha.h
- mha_algo_comm.cpp

5.34 altplugs_t Class Reference

Inheritance diagram for altplugs_t:

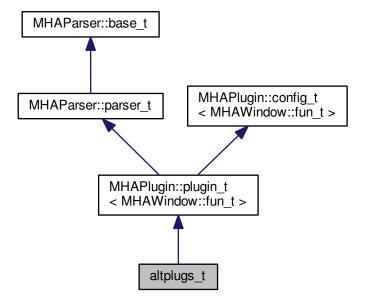

Public Member Functions

- altplugs_t (algo_comm_t iac, const char *chain, const char *algo)
- void prepare (mhaconfig_t &)
- void release ()
- void process (mha_wave_t *, mha_wave_t **)
- void process (mha_spec_t *, mha_wave_t **)
- void process (mha_wave_t *, mha_spec_t **)
- void process (mha_spec_t *, mha_spec_t **)
- virtual std::string parse (const std::string &arg)
- virtual void parse (const char *a1, char *a2, unsigned int a3)

Private Member Functions

```
void event_set_plugs ()
```

- void event_add_plug ()
- void event delete plug ()
- void event_select_plug ()
- void update selector list ()
- void update_ramplen ()
- void proc_ramp (mha_wave_t *s)

Private Attributes

- MHAParser::bool_t use_own_ac
- MHAParser::vstring t parser plugs
- MHAParser::string_t add_plug
- MHAParser::string_t delete_plug
- MHAParser::float t ramplen
- MHAParser::kw_t select_plug
- MHAParser::parser_t current
- MHAParser::vstring_mon_t nondefault_labels
- std::vector< mhaplug_cfg_t * > plugs
- mhaplug_cfg_t * selected_plug
- MHAEvents::patchbay t< altplugs t > patchbay
- MHASignal::waveform t * fallback wave
- MHASignal::spectrum_t * fallback_spec
- mhaconfig t cfin
- mhaconfig_t cfout
- bool prepared
- · bool added via plugs
- unsigned int ramp_counter
- unsigned int ramp_len

Additional Inherited Members

```
5.34.1 Constructor & Destructor Documentation
```

5.34.2 Member Function Documentation

Implements MHAPlugin::plugin_t < MHAWindow::fun_t > (p. 693).

```
5.34.2.2 void altplugs_t::release (
                    void ) [virtual]
Reimplemented from MHAPlugin::plugin_t < MHAWindow::fun_t > (p. 694).
5.34.2.3 void altplugs t::process (
                     mha_wave_t * sln,
                     mha_wave_t ** sOut )
5.34.2.4 void altplugs_t::process (
                     mha_spec_t * sln,
                     mha_wave_t ** sOut )
5.34.2.5 void altplugs t::process (
                     mha_wave_t * sln,
                     mha_spec_t ** sOut )
5.34.2.6 void altplugs_t::process (
                     mha_spec_t * sln,
                     mha spec t ** sOut )
5.34.2.7 std::string altplugs_t::parse (
                    const std::string & arg ) [virtual]
Reimplemented from MHAParser::base_t (p. 600).
5.34.2.8 virtual void altplugs_t::parse (
                     const char * a1,
                     char * a2.
                     unsigned int a3 ) [inline], [virtual]
Reimplemented from MHAParser::base_t (p. 601).
5.34.2.9 void altplugs_t::event_set_plugs() [private]
5.34.2.10 void altplugs_t::event_add_plug( ) [private]
5.34.2.11
         void altplugs_t::event_delete_plug( ) [private]
5.34.2.12 void altplugs_t::event_select_plug( ) [private]
5.34.2.13 void altplugs_t::update_selector_list() [private]
5.34.2.14 void altplugs_t::update_ramplen() [private]
```

```
5.34.2.15 void altplugs_t::proc_ramp (
                     mha_wave_t * s ) [private]
5.34.3 Member Data Documentation
5.34.3.1
        MHAParser::bool_t altplugs_t::use_own_ac [private]
5.34.3.2 MHAParser::vstring_t altplugs_t::parser_plugs [private]
5.34.3.3
        MHAParser::string_t altplugs_t::add_plug [private]
5.34.3.4
        MHAParser::string t altplugs_t::delete_plug [private]
5.34.3.5
        MHAParser::float_t altplugs_t::ramplen [private]
5.34.3.6
        MHAParser::kw_t altplugs_t::select_plug [private]
5.34.3.7
        MHAParser::parser taltplugs_t::current [private]
5.34.3.8
        MHAParser::vstring_mon_t altplugs_t::nondefault_labels [private]
5.34.3.9 std::vector<mhaplug_cfg_t*> altplugs_t::plugs [private]
5.34.3.10 mhaplug_cfg_t* altplugs_t::selected_plug [private]
5.34.3.11 MHAEvents::patchbay_t<altplugs_t> altplugs_t::patchbay [private]
5.34.3.12 MHASignal::waveform_t* altplugs_t::fallback_wave [private]
5.34.3.13 MHASignal::spectrum_t* altplugs_t::fallback_spec [private]
5.34.3.14 mhaconfig taltplugs_t::cfin [private]
5.34.3.15 mhaconfig_t altplugs_t::cfout [private]
5.34.3.16 bool altplugs_t::prepared [private]
5.34.3.17 bool altplugs_t::added_via_plugs [private]
5.34.3.18 unsigned int altplugs_t::ramp_counter [private]
5.34.3.19 unsigned int altplugs_t::ramp_len [private]
```

The documentation for this class was generated from the following file:

· altplugs.cpp

5.35 analysepath_t Class Reference

Public Member Functions

- virtual ~analysepath_t ()
- void rt process (mha wave t *)
- virtual int svc ()

Private Attributes

- MHAProc wave2wave tinner process wave2wave
- MHAProc wave2spec tinner process wave2spec
- MHASignal::waveform_t inner_input
- void * libdata
- mha_fifo_t< mha_real_t > wave_fifo
- mha_fifo_t< MHA_AC::acspace2matrix_t > ac_fifo
- MHA_AC::acspace2matrix_t inner_ac_copy
- MHA_AC::acspace2matrix_t outer_ac_copy
- · algo_comm_t outer_ac
- mha_domain_t inner_out_domain
- MHA_Error inner_error
- bool has_inner_error
- bool flag_terminate_inner_thread
- int input_to_process
- pthread_mutex_t ProcessMutex
- pthread_attr_t attr
- struct sched param priority
- · int scheduler
- pthread_t thread
- pthread_cond_t cond_to_process

5.35.1 Constructor & Destructor Documentation


```
5.35.1.2 analysepath_t::~analysepath_t( ) [virtual]
5.35.2 Member Function Documentation
5.35.2.1 void analysepath_t::rt_process (
                    mha_wave_t * outer_input )
5.35.2.2 int analysepath_t::svc( ) [virtual]
5.35.3
      Member Data Documentation
5.35.3.1
        MHAProc_wave2wave_t analysepath_t::inner_process_wave2wave [private]
5.35.3.2
        MHAProc_wave2spec_t analysepath_t::inner_process_wave2spec [private]
5.35.3.3
        MHASignal::waveform_t analysepath_t::inner_input [private]
5.35.3.4 void* analysepath_t::libdata [private]
5.35.3.5
        mha_fifo_t<mha_real_t> analysepath_t::wave_fifo [private]
5.35.3.6
        mha_fifo_t<MHA_AC::acspace2matrix_t> analysepath_t::ac_fifo [private]
5.35.3.7
        MHA_AC::acspace2matrix_t analysepath_t::inner_ac_copy [private]
5.35.3.8
        MHA_AC::acspace2matrix_t analysepath_t::outer_ac_copy [private]
5.35.3.9
        algo_comm_t analysepath_t::outer_ac [private]
5.35.3.10 mha_domain_t analysepath_t::inner_out_domain [private]
5.35.3.11 MHA_Error analysepath_t::inner_error [private]
5.35.3.12 bool analysepath_t::has_inner_error [private]
5.35.3.13 bool analysepath_t::flag_terminate_inner_thread [private]
5.35.3.14 int analysepath_t::input_to_process [private]
5.35.3.15 pthread_mutex_t analysepath_t::ProcessMutex [private]
5.35.3.16
         pthread_attr_t analysepath_t::attr [private]
5.35.3.17
         struct sched_param analysepath_t::priority [private]
         int analysepath_t::scheduler [private]
5.35.3.18
5.35.3.19
         pthread_t analysepath_t::thread [private]
5.35.3.20
         pthread_cond_t analysepath_t::cond_to_process [private]
```

The documentation for this class was generated from the following file:

· analysispath.cpp

5.36 analysispath_if_t Class Reference

Inheritance diagram for analysispath_if_t:

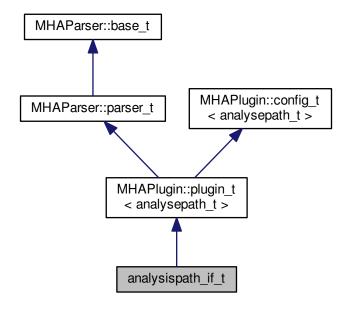

Public Member Functions

- analysispath_if_t (algo_comm_t, std::string, std::string)
- mha_wave_t * process (mha_wave_t *)
- void prepare (mhaconfig_t &)
- void release ()
- ~analysispath_if_t ()

Private Member Functions

• void loadlib ()

Private Attributes

- MHAEvents::patchbay_t< analysispath_if_t > patchbay
- MHAParser::string_t libname
- MHAParser::int_t fragsize
- MHAParser::int_t fifolen
- MHAParser::int_t priority
- MHAParser::vstring_t vars
- plug_t * plug
- std::string chain
- std::string algo
- MHA_AC::acspace2matrix_t * acspace_template

```
Additional Inherited Members
```

```
5.36.1 Constructor & Destructor Documentation
5.36.1.1 analysispath_if_t::analysispath_if_t (
                     algo comm t iac,
                     std::string th,
                     std::string al )
5.36.1.2 analysispath_if_t::~analysispath_if_t ( )
5.36.2 Member Function Documentation
5.36.2.1 mha_wave_t * analysispath_if_t::process (
                     mha_wave_t * s )
5.36.2.2 void analysispath_if_t::prepare (
                     mhaconfig_t & conf ) [virtual]
Implements MHAPlugin::plugin_t< analysepath_t > (p. 693).
5.36.2.3 void analysispath_if_t::release (
                    void ) [virtual]
Reimplemented from MHAPlugin::plugin_t< analysepath_t > (p. 694).
5.36.2.4 void analysispath_if_t::loadlib( ) [private]
5.36.3 Member Data Documentation
5.36.3.1
        MHAEvents::patchbay_t< analysispath_if_t > analysispath_if_t::patchbay
         [private]
5.36.3.2
        MHAParser::string_t analysispath_if_t::libname [private]
5.36.3.3 MHAParser::int_t analysispath_if_t::fragsize [private]
5.36.3.4 MHAParser::int tanalysispath if t::fifolen [private]
5.36.3.5 MHAParser::int_t analysispath_if_t::priority [private]
5.36.3.6 MHAParser::vstring_t analysispath_if_t::vars [private]
5.36.3.7 plug t* analysispath_if_t::plug [private]
5.36.3.8 std::string analysispath_if_t::chain [private]
5.36.3.9 std::string analysispath_if_t::algo [private]
5.36.3.10 MHA AC::acspace2matrix t* analysispath if t::acspace template [private]
```

The documentation for this class was generated from the following file:

analysispath.cpp

5.37 AuditoryProfile::fmap_t Class Reference

A class to store frequency dependent data (e.g., HTL and UCL).

Inherits map< mha_real_t, mha_real_t >.

Public Member Functions

- std::vector< mha_real_t > get_frequencies () const
 Return configured frequencies.
- std::vector < mha_real_t > get_values () const
 Return stored values corresponding to the frequencies.
- bool **isempty** () const

5.37.1 Detailed Description

A class to store frequency dependent data (e.g., HTL and UCL).

5.37.2 Member Function Documentation

5.37.2.1 std::vector < mha real t > AuditoryProfile::fmap t::get frequencies () const

Return configured frequencies.

5.37.2.2 std::vector< mha_real_t > AuditoryProfile::fmap_t::get_values () const

Return stored values corresponding to the frequencies.

5.37.2.3 bool AuditoryProfile::fmap_t::isempty() const [inline]


The documentation for this class was generated from the following files:

- · auditory profile.h
- auditory_profile.cpp

5.38 AuditoryProfile::parser_t Class Reference

Class to make the auditory profile accessible through the parser interface.

Inheritance diagram for AuditoryProfile::parser_t:

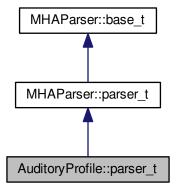

Classes

- · class ear t
- class fmap_t

Public Member Functions

- parser_t ()
- AuditoryProfile::profile_t get_current_profile ()

Private Attributes

- AuditoryProfile::parser_t::ear_t L
- AuditoryProfile::parser_t::ear_t R

Additional Inherited Members

5.38.1 Detailed Description


Class to make the auditory profile accessible through the parser interface.

- 5.38.2 Constructor & Destructor Documentation
- 5.38.2.1 AuditoryProfile::parser_t::parser_t ()
- 5.38.3 Member Function Documentation
- 5.38.3.1 AuditoryProfile::profile_t AuditoryProfile::parser_t::get_current_profile ()
- 5.38.4 Member Data Documentation
- **5.38.4.1 AuditoryProfile::parser_t::ear_t AuditoryProfile::parser_t::L** [private]
- **5.38.4.2 AuditoryProfile::parser_t::ear_t AuditoryProfile::parser_t::R** [private]

The documentation for this class was generated from the following files:

- auditory_profile.h
- auditory_profile.cpp
- 5.39 AuditoryProfile::parser_t::ear_t Class Reference

Inheritance diagram for AuditoryProfile::parser_t::ear_t:

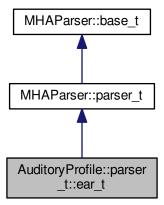

Public Member Functions

- ear_t ()
- AuditoryProfile::profile_t::ear_t get_ear () const

Private Attributes

- AuditoryProfile::parser_t::fmap_t HTL
- AuditoryProfile::parser_t::fmap_t UCL


Additional Inherited Members

- 5.39.1 Constructor & Destructor Documentation
- 5.39.1.1 AuditoryProfile::parser_t::ear_t::ear_t ()
- 5.39.2 Member Function Documentation
- 5.39.2.1 AuditoryProfile::profile_t::ear_t AuditoryProfile::parser_t::ear_t::get_ear() const
- 5.39.3 Member Data Documentation
- **5.39.3.1 AuditoryProfile::parser_t::fmap_t** AuditoryProfile::parser_t::ear_t::HTL [private]
- **5.39.3.2** AuditoryProfile::parser_t::fmap_t AuditoryProfile::parser_t::ear_t::UCL [private]

The documentation for this class was generated from the following files:

- · auditory_profile.h
- auditory_profile.cpp
- 5.40 AuditoryProfile::parser_t::fmap_t Class Reference

Inheritance diagram for AuditoryProfile::parser_t::fmap_t:

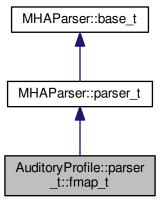

Public Member Functions

- fmap_t (const std::string &name, const std::string &help)
- AuditoryProfile::fmap t get fmap () const

Private Member Functions

• void validate ()

Private Attributes

- MHAEvents::patchbay_t< AuditoryProfile::parser_t::fmap_t > patchbay
- · MHAParser::vfloat tf
- MHAParser::vfloat t value
- std::string name_

Additional Inherited Members

```
5.40.1 Constructor & Destructor Documentation
```

- 5.40.2 Member Function Documentation
- 5.40.2.1 AuditoryProfile::fmap_t AuditoryProfile::parser_t::fmap_t::get_fmap() const
- **5.40.2.2 void AuditoryProfile::parser_t::fmap_t::validate()** [private]
- 5.40.3 Member Data Documentation
- 5.40.3.1 MHAEvents::patchbay_t<AuditoryProfile::parser_t::fmap_t>
 AuditoryProfile::parser_t::fmap_t::patchbay [private]
- **5.40.3.2** MHAParser::vfloat_t AuditoryProfile::parser_t::fmap_t::f [private]
- **5.40.3.3** MHAParser::vfloat_t AuditoryProfile::parser_t::fmap_t::value [private]
- **5.40.3.4 std::string AuditoryProfile::parser_t::fmap_t::name** [private]

The documentation for this class was generated from the following files:

- auditory_profile.h
- auditory_profile.cpp

5.41 AuditoryProfile::profile_t Class Reference

The Auditory Profile class.

Classes

class ear_t

Class for ear-dependent parameters, e.g., audiograms or unilateral loudness scaling.

Public Member Functions

• AuditoryProfile::profile_t::ear_t get_ear (unsigned int channel) const Return ear information of channel number.

Public Attributes

- AuditoryProfile::profile_t::ear_t L
 Left ear data.
- AuditoryProfile::profile_t::ear_t R

 Right ear data.
- 5.41.1 Detailed Description

The Auditory Profile class.

See definition of auditory profile

Todo Give more documentation; implement all parts of the auditory profile.

Currently only the audiogram data is stored.

- 5.41.2 Member Function Documentation

Return ear information of channel number.

5.41.3 Member Data Documentation

5.41.3.1 AuditoryProfile::profile_t::ear_t AuditoryProfile::profile_t::L

Left ear data.

5.41.3.2 AuditoryProfile::profile_t::ear_t AuditoryProfile::profile_t::R

Right ear data.

The documentation for this class was generated from the following file:

auditory_profile.h

5.42 AuditoryProfile::profile_t::ear_t Class Reference

Class for ear-dependent parameters, e.g., audiograms or unilateral loudness scaling.

Public Member Functions

void convert_empty2normal ()

Public Attributes

- AuditoryProfile::fmap_t HTL
- AuditoryProfile::fmap_t UCL
- 5.42.1 Detailed Description

Class for ear-dependent parameters, e.g., audiograms or unilateral loudness scaling.


- 5.42.2 Member Function Documentation
- 5.42.2.1 void AuditoryProfile::profile_t::ear_t::convert_empty2normal()
- 5.42.3 Member Data Documentation
- 5.42.3.1 AuditoryProfile::fmap_t AuditoryProfile::profile_t::ear_t::HTL
- 5.42.3.2 AuditoryProfile::fmap t AuditoryProfile::profile t::ear t::UCL

The documentation for this class was generated from the following files:

- auditory_profile.h
- auditory_profile.cpp

5.43 bbcalib_interface_t Class Reference

Inheritance diagram for bbcalib_interface_t:

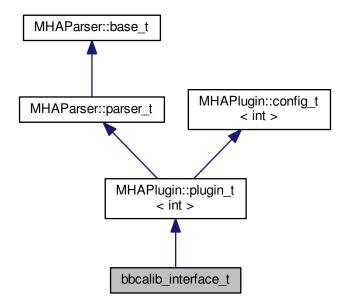

Public Member Functions

- bbcalib_interface_t (const algo_comm_t &, const std::string &, const std::string &)
- ~bbcalib_interface_t ()
- mha_wave_t * process (mha_wave_t *)
- void prepare (mhaconfig_t &)
- void release ()

Private Attributes

- calibrator_t calib_in
- calibrator_t calib_out
- MHAParser::mhapluginloader_t plugloader

Additional Inherited Members

```
5.43.1 Constructor & Destructor Documentation
5.43.1.1 bbcalib_interface_t::bbcalib_interface_t (
                     const algo_comm_t & iac,
                     const std::string & ,
                     const std::string & )
5.43.1.2 bbcalib interface t::~bbcalib interface t()
5.43.2 Member Function Documentation
5.43.2.1 mha_wave_t * bbcalib_interface_t::process (
                     mha wave t * s)
5.43.2.2 void bbcalib_interface_t::prepare (
                     mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin_t< int > (p. 693).
5.43.2.3 void bbcalib_interface_t::release (
                     void ) [virtual]
Reimplemented from MHAPlugin::plugin_t< int > (p. 694).
5.43.3 Member Data Documentation
5.43.3.1 calibrator_t bbcalib_interface_t::calib_in [private]
5.43.3.2 calibrator t bbcalib_interface_t::calib_out [private]
5.43.3.3 MHAParser::mhapluginloader t bbcalib_interface_t::plugloader [private]
The documentation for this class was generated from the following file:

    transducers.cpp

5.44 calibrator_runtime_layer_t Class Reference
```

• calibrator_runtime_layer_t (bool is_input, const mhaconfig_t &tf, calibrator_

mha_real_t process (mha_wave_t **)

variables_t &vars)

Public Member Functions

Static Private Member Functions

- static unsigned int **firfirlen** (const std::vector< std::vector< float >> &)
- static unsigned int **firfir2fftlen** (unsigned int, const std::vector< std::vector< float >> &)

Private Attributes

- MHAFilter::fftfilter t fir
- MHASignal::quantizer_t quant
- MHASignal::waveform_t gain
- softclipper_t softclip
- bool b_is_input
- · bool b use fir
- bool b_use_clipping
- MHASignal::loop_wavefragment_t speechnoise
- MHASignal::loop wavefragment t::playback mode t pmode
- 5.44.1 Constructor & Destructor Documentation
- 5.44.2 Member Function Documentation
- 5.44.2.2 unsigned int calibrator_runtime_layer_t::firfirlen (
 - const std::vector < std::vector < float > > & fir) [static], [private]
- 5.44.2.3 unsigned int calibrator_runtime_layer_t::firfir2fftlen (unsigned int *fragsize*,

```
const std::vector < std::vector < float > > & fir ) [static], [private]
```

- 5.44.3 Member Data Documentation
- **5.44.3.1** MHAFilter::fftfilter_t calibrator_runtime_layer_t::fir [private]
- **5.44.3.2** MHASignal::quantizer_t calibrator_runtime_layer_t::quant [private]
- **5.44.3.3** MHASignal::waveform_t calibrator_runtime_layer_t::gain [private]


- **5.44.3.4 softclipper_t calibrator_runtime_layer_t::softclip** [private]
- **5.44.3.5** bool calibrator_runtime_layer_t::b_is_input [private]
- **5.44.3.6** bool calibrator_runtime_layer_t::b_use_fir [private]
- **5.44.3.7 bool calibrator_runtime_layer_t::b_use_clipping** [private]
- **5.44.3.8** MHASignal::loop_wavefragment_t calibrator_runtime_layer_t::speechnoise [private]

The documentation for this class was generated from the following file:

transducers.cpp

5.45 calibrator_t Class Reference

Inheritance diagram for calibrator_t:

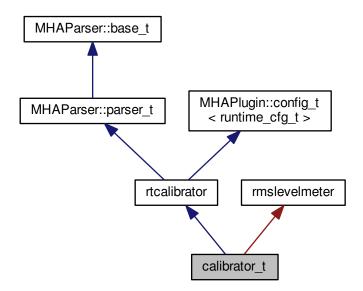

Public Member Functions

```
    calibrator_t (algo_comm_t, bool is_input)
```

- void prepare (mhaconfig_t &tf)
- void release ()
- mha_wave_t * process (mha_wave_t *s)

Private Member Functions

- void update ()
- void update_tau_level ()
- void read levels ()

Private Attributes

- bool b_is_input
- MHAEvents::patchbay_t< calibrator_t > patchbay
- calibrator_variables_t vars
- bool prepared

Additional Inherited Members

```
5.45.1 Constructor & Destructor Documentation
```

5.45.2 Member Function Documentation

Implements MHAPlugin::plugin_t < runtime_cfg_t > (p. 693).

Reimplemented from MHAPlugin::plugin_t< runtime_cfg_t > (p. 694).

The documentation for this class was generated from the following file:

transducers.cpp

5.46 calibrator_variables_t Class Reference

Public Member Functions

calibrator_variables_t (bool is_input, MHAParser::parser_t &parent)

Public Attributes

- MHAParser::vfloat_t peaklevel
- MHAParser::mfloat t fir
- MHAParser::int t nbits
- MHAParser::float_t tau_level
- MHAParser::kw_t spnoise_mode
- MHAParser::vint_t spnoise_channels
- MHAParser::float_t spnoise_level
- MHAParser::vfloat mon t rmslevel
- MHAParser::parser_t spnoise_parser
- MHAParser::float_mon_t srate
- MHAParser::int_mon_t fragsize
- MHAParser::int_mon_t num_channels
- MHAParser::parser_t config_parser
- softclipper_variables_t softclip
- MHAParser::bool_t do_clipping

```
5.46.1 Constructor & Destructor Documentation
5.46.1.1 calibrator variables t::calibrator variables t (
                      bool is input,
                      MHAParser::parser t & parent )
5.46.2 Member Data Documentation
5.46.2.1
         MHAParser::vfloat_t calibrator_variables_t::peaklevel
5.46.2.2
         MHAParser::mfloat t calibrator_variables_t::fir
         MHAParser::int t calibrator_variables_t::nbits
5.46.2.3
         MHAParser::float t calibrator variables t::tau level
         MHAParser::kw_t calibrator_variables_t::spnoise_mode
5.46.2.5
5.46.2.6
         MHAParser::vint t calibrator_variables_t::spnoise_channels
5.46.2.7
         MHAParser::float t calibrator_variables_t::spnoise_level
5.46.2.8
         MHAParser::vfloat mon t calibrator_variables_t::rmslevel
         MHAParser::parser t calibrator variables t::spnoise parser
5.46.2.10 MHAParser::float mon t calibrator variables t::srate
5.46.2.11
         MHAParser::int mon t calibrator variables t::fragsize
5.46.2.12 MHAParser::int mon t calibrator_variables_t::num_channels
5.46.2.13 MHAParser::parser_t calibrator_variables_t::config_parser
5.46.2.14 softclipper_variables_t calibrator_variables_t::softclip
5.46.2.15 MHAParser::bool t calibrator variables t::do clipping
```

The documentation for this class was generated from the following file:

· transducers.cpp

5.47 cfg_t Class Reference

Public Member Functions

- cfg_t (mha_real_t tau_attack, mha_real_t tau_decay, unsigned int nch, mha_real_←
 t start_limit, mha_real_t slope_db, mha_real_t fs)
- cfg_t (unsigned int, unsigned int)
- cfg_t (mhaconfig_t chcfg, mha_real_t newlev, bool replace, mha_real_t len)
- void process (mha_wave_t *)
- void process (mha_spec_t *)

Public Attributes

- mha_real_t start_lin
- · mha_real_t alpha
- MHAFilter::o1flt_lowpass_t attack
- MHAFilter::o1flt_maxtrack_t decay
- · unsigned int channel

Private Attributes

- mha_real_t gain_wave_
- mha_real_t gain_spec_
- bool replace_
- bool use_frozen_
- MHASignal::waveform t frozen noise
- unsigned int pos

5.47.1 Constructor & Destructor Documentation

```
5.47.1.1 cfg_t::cfg_t (

mha_real_t tau_attack,
mha_real_t tau_decay,
unsigned int nch,
mha_real_t start_limit,
mha_real_t slope_db,
mha_real_t fs )

5.47.1.2 cfg_t::cfg_t (
```

unsigned int *ichannel*, unsigned int *numchannels*)


```
5.47.1.3 cfg_t::cfg_t (
                     mhaconfig_t chcfg,
                     mha real t newlev,
                     bool replace,
                     mha_real_t len )
5.47.2 Member Function Documentation
5.47.2.1 void cfg_t::process (
                     mha_wave_t * s ) [inline]
5.47.2.2 void cfg t::process (
                     mha_spec_t * s ) [inline]
5.47.3 Member Data Documentation
5.47.3.1 mha_real_t cfg_t::start_lin
5.47.3.2 mha_real_t cfg_t::alpha
5.47.3.3 MHAFilter::o1flt lowpass t cfg_t::attack
5.47.3.4
        MHAFilter::o1flt_maxtrack_t cfg_t::decay
5.47.3.5 unsigned int cfg t::channel
5.47.3.6
        mha_real_t cfg_t::gain_wave_ [private]
5.47.3.7 mha_real_t cfg_t::gain_spec_ [private]
5.47.3.8
        bool cfg_t::replace_ [private]
5.47.3.9 bool cfg_t::use_frozen_ [private]
5.47.3.10 MHASignal::waveform_t cfg_t::frozen_noise_ [private]
5.47.3.11 unsigned int cfg_t::pos [private]
```

The documentation for this class was generated from the following files:

- softclip.cpp
- example6.cpp
- noise.cpp

5.48 coherence::cohflt_if_t Class Reference

Inheritance diagram for coherence::cohflt_if_t:

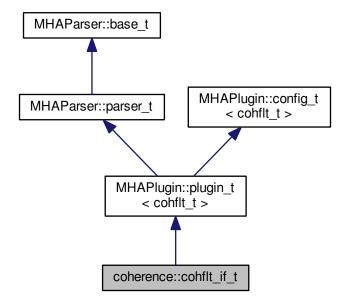

Public Member Functions

- cohflt_if_t (const algo_comm_t &, const std::string &, const std::string &)
- void prepare (mhaconfig_t &)
- void release ()
- mha_spec_t * process (mha_spec_t *)

Private Member Functions

• void update ()

Private Attributes

- MHAEvents::patchbay_t< cohflt_if_t > patchbay
- vars_t vars
- · const std::string algo

```
Additional Inherited Members
```


```
5.48.1 Constructor & Destructor Documentation
5.48.1.1 coherence::cohflt_if_t::cohflt_if_t (
                     const algo_comm_t & ac,
                     const std::string & th,
                     const std::string & al )
5.48.2 Member Function Documentation
5.48.2.1 void coherence::cohflt_if_t::prepare (
                     mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin t < cohflt t > (p. 693).
5.48.2.2 void coherence::cohflt_if_t::release (
                     void ) [virtual]
Reimplemented from MHAPlugin::plugin_t < cohflt_t > (p. 694).
5.48.2.3 mha spec t * coherence::cohflt_if_t::process (
                     mha_spec_t * s )
5.48.2.4 void coherence::cohflt_if_t::update( ) [private]
5.48.3 Member Data Documentation
5.48.3.1 MHAEvents::patchbay_t<cohflt_if_t> coherence::cohflt_if_t::patchbay [private]
5.48.3.2 vars_t coherence::cohflt_if_t::vars [private]
5.48.3.3 const std::string coherence::cohflt if t::algo [private]
```

The documentation for this class was generated from the following file:

coherence.cpp

5.49 coherence::cohflt_t Class Reference

Inheritance diagram for coherence::cohflt_t:

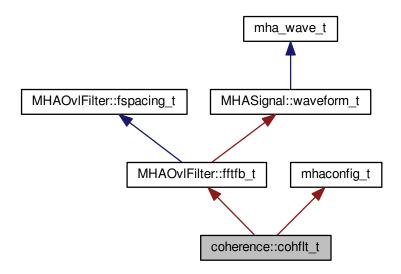

Public Member Functions

- cohflt_t (vars_t &v, const mhaconfig_t &icf, algo_comm_t iac, const std::string &name)
- mha spec t * process (mha spec t *)
- void insert ()

Private Attributes

- unsigned int **nbands**
- bool avg_ipd
- mha_complex_t cg
- float g
- float c_scale
- float **c_min**
- MHASignal::waveform_t alpha
- · float limit
- MHAFilter::o1flt_lowpass_t lp1r
- MHAFilter::o1flt_lowpass_t lp1i
- MHA_AC::spectrum_t coh_c
- MHA_AC::waveform_t coh_rlp
- MHASignal::waveform_t gain
- MHASignal::delay_wave_t gain_delay

- MHASignal::spectrum_t s_out
- bool binvert
- MHAFilter::o1flt_lowpass_t lp1ltg
- bool b_ltg
- std::vector< float > staticgain

Additional Inherited Members

```
5.49.1 Constructor & Destructor Documentation
5.49.1.1 coherence::cohflt_t::cohflt_t (
                     vars t& v,
                     const mhaconfig t & icf,
                     algo comm t iac,
                     const std::string & name )
5.49.2 Member Function Documentation
5.49.2.1 mha spec t * coherence::cohflt_t::process (
                     mha spec t * s)
5.49.2.2 void coherence::cohflt t::insert ( )
5.49.3 Member Data Documentation
5.49.3.1 unsigned int coherence::cohflt_t::nbands [private]
5.49.3.2 bool coherence::cohflt_t::avg_ipd [private]
5.49.3.3 mha_complex_t coherence::cohflt_t::cg [private]
5.49.3.4 float coherence::cohflt_t::g [private]
5.49.3.5 float coherence::cohflt_t::c_scale [private]
5.49.3.6 float coherence::cohflt_t::c_min [private]
5.49.3.7
        MHASignal::waveform_t coherence::cohflt_t::alpha [private]
5.49.3.8 float coherence::cohflt_t::limit [private]
```

5.49.3.9 MHAFilter::o1flt_lowpass_t coherence::cohflt_t::lp1r [private]


```
5.49.3.10 MHAFilter::o1flt_lowpass_t coherence::cohflt_t::lp1i [private]
5.49.3.11 MHA_AC::spectrum_t coherence::cohflt_t::coh_c [private]
5.49.3.12 MHA_AC::waveform_t coherence::cohflt_t::coh_rlp [private]
5.49.3.13 MHASignal::waveform_t coherence::cohflt_t::gain [private]
5.49.3.14 MHASignal::delay_wave_t coherence::cohflt_t::gain_delay [private]
5.49.3.15 MHASignal::spectrum_t coherence::cohflt_t::s_out [private]
5.49.3.16 bool coherence::cohflt_t::blnvert [private]
5.49.3.17 MHAFilter::o1flt_lowpass_t coherence::cohflt_t::lp1ltg [private]
5.49.3.18 bool coherence::cohflt_t::b_ltg [private]
5.49.3.19 std::vector<float> coherence::cohflt_t::staticgain [private]
```

The documentation for this class was generated from the following file:

coherence.cpp

5.50 coherence::vars_t Class Reference

Inheritance diagram for coherence::vars_t:

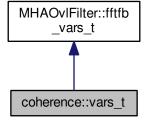

Public Member Functions

vars_t (MHAParser::parser_t *)

Public Attributes

- MHAParser::kw_t tau_unitMHAParser::vfloat t tau
- MHAParser::vfloat_t alpha
- MHAParser::float_t limit
- MHAParser::vfloat_t mapping
- MHAParser::kw t average
- MHAParser::bool_t invert
- MHAParser::bool_t ltgcomp
- MHAParser::vfloat_t ltgtau
- MHAParser::vfloat_t staticgain
- MHAParser::int_t delay
- 5.50.1 Constructor & Destructor Documentation
- 5.50.1.1 coherence::vars_t::vars_t (


 MHAParser::parser t * p)
- 5.50.2 Member Data Documentation
- 5.50.2.1 MHAParser::kw_t coherence::vars_t::tau_unit
- 5.50.2.2 MHAParser::vfloat_t coherence::vars_t::tau
- 5.50.2.3 MHAParser::vfloat_t coherence::vars_t::alpha
- 5.50.2.4 MHAParser::float_t coherence::vars_t::limit
- 5.50.2.5 MHAParser::vfloat t coherence::vars_t::mapping
- 5.50.2.6 MHAParser::kw_t coherence::vars_t::average
- 5.50.2.7 MHAParser::bool_t coherence::vars_t::invert
- 5.50.2.8 MHAParser::bool_t coherence::vars_t::ltgcomp
- 5.50.2.9 MHAParser::vfloat_t coherence::vars_t::ltgtau
- 5.50.2.10 MHAParser::vfloat t coherence::vars t::staticgain
- 5.50.2.11 MHAParser::int t coherence::vars_t::delay

The documentation for this class was generated from the following file:

· coherence.cpp

5.51 combc_if_t Class Reference

Inheritance diagram for combc_if_t:

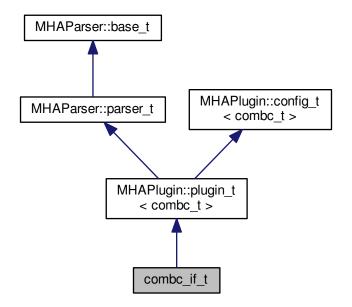

Public Member Functions

- combc_if_t (const algo_comm_t &, const std::string &, const std::string &)
- void prepare (mhaconfig_t &)
- mha_wave_t * process (mha_wave_t *)
- mha_spec_t * process (mha_spec_t *)

Private Attributes

- MHAParser::int_t outchannels
- MHAParser::bool_t interleaved
- MHAParser::string_t channel_gain_name
- MHAParser::string_t element_gain_name

Additional Inherited Members

```
5.51.1 Constructor & Destructor Documentation
5.51.1.1 combc_if_t::combc_if_t (
                    const algo comm t & iac,
                    const std::string & ,
                    const std::string & )
5.51.2 Member Function Documentation
5.51.2.1 void combc_if_t::prepare (
                    mhaconfig t&chcfg) [virtual]
Implements MHAPlugin::plugin_t < combc_t > (p. 693).
5.51.2.2 mha_wave_t * combc_if_t::process (
                    mha wave t * s)
5.51.2.3 mha_spec_t * combc_if_t::process (
                    mha\_spec\_t * s)
5.51.3 Member Data Documentation
5.51.3.1 MHAParser::int tcombc_if_t::outchannels [private]
5.51.3.2 MHAParser::bool_t combc_if_t::interleaved [private]
5.51.3.3 MHAParser::string t combc_if_t::channel_gain_name [private]
        MHAParser::string t combc if t::element gain name [private]
```

The documentation for this class was generated from the following file:

- combinechannels.cpp
- 5.52 combc_t Class Reference

Public Member Functions

- combc_t (algo_comm_t ac, mhaconfig_t cfg_input, mhaconfig_t cfg_output, std ::vector < float > channel_gains, const std::string &element_gain_name, bool interleaved)
- mha_wave_t * process (mha_wave_t *s)
- mha_spec_t * process (mha_spec_t *s)

Private Attributes

```
    algo_comm_t ac_

    bool interleaved

    unsigned int nbands

    MHASignal::waveform_t w_out

    MHASignal::spectrum t s out

   std::vector< mha_real_t > channel_gains_
   std::string element_gain_name_
5.52.1 Constructor & Destructor Documentation
5.52.1.1 combc_t::combc_t (
                    algo_comm_t ac,
                    mhaconfig_t cfg_input,
                    mhaconfig t cfg_output,
                    std::vector< float > channel_gains,
                    const std::string & element_gain_name,
                    bool interleaved )
5.52.2 Member Function Documentation
5.52.2.1 mha_wave_t * combc_t::process (
                    mha_wave_t * s )
5.52.2.2 mha_spec_t * combc_t::process (
                    mha_spec_t * s )
5.52.3 Member Data Documentation
5.52.3.1 algo_comm_t combc_t::ac_ [private]
5.52.3.2 bool combc_t::interleaved_ [private]
5.52.3.3 unsigned int combc_t::nbands [private]
5.52.3.4
        MHASignal::waveform_t combc_t::w_out [private]
5.52.3.5 MHASignal::spectrum_t combc_t::s_out [private]
5.52.3.6 std::vector<mha_real_t> combc_t::channel_gains_ [private]
        std::string combc_t::element_gain_name_ [private]
```

The documentation for this class was generated from the following file:

combinechannels.cpp

5.53 comm_var_t Struct Reference

Algorithm communication variable structure.

Public Attributes

• unsigned int data_type

Type of data.

unsigned int num entries

Number of entries.

· unsigned int stride

length of one row (C interpretation) or of one column (Fortran interpretation)

void * data

Pointer to variable data.

5.53.1 Detailed Description

Algorithm communication variable structure.

Algorithm communication variables (AC variables) are objects of this type. The member data is a pointer to the variable 'data'. This pointer has to be valid for the lifetime of this AC variable. The member 'data_type' can be one of the predefined types or any user defined type. The member 'num_entries' describes the number of elements of this base type stored at the pointer address.

```
An AC variable can be registered with the \ref algo_comm_t::insert_var "insert_var" function.
```

5.53.2 Member Data Documentation

5.53.2.1 comm_var_t::data_type

Type of data.

This can be one of the predefined types

- MHA AC CHAR
- · MHA AC INT
- MHA AC MHAREAL
- · MHA AC FLOAT
- · MHA AC DOUBLE
- MHA AC MHACOMPLEX
- MHA AC VEC FLOAT or any user defined type with a value greater than
- MHA_AC_USER

5.53.2.2 comm_var_t::num_entries

Number of entries.

5.53.2.3 comm_var_t::stride

length of one row (C interpretation) or of one column (Fortran interpretation)

5.53.2.4 comm_var_t::data


Pointer to variable data.

The documentation for this struct was generated from the following files:

- · mha.h
- mha_algo_comm.cpp

5.54 cpuload_t Class Reference

Inheritance diagram for cpuload_t:

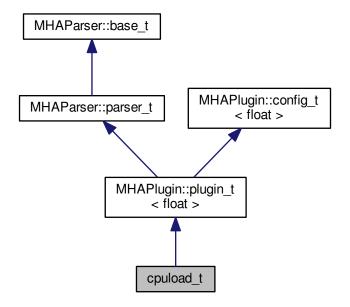

Public Member Functions

```
cpuload_t (algo_comm_t, const char *, const char *)
mha_spec_t * process (mha_spec_t *)
mha_wave_t * process (mha_wave_t *)
void prepare (mhaconfig_t &)
```

Private Member Functions

- void compute_something ()
- void compute_something_else ()

Private Attributes

- MHAParser::float_t factor
- MHAParser::bool_t use_sine
- · float phase
- · volatile float result
- std::vector< float > table

Additional Inherited Members

```
5.54.1 Constructor & Destructor Documentation
```

5.54.2 Member Function Documentation

Implements MHAPlugin::plugin_t< float > (p. 693).

mhaconfig_t & cf) [virtual]

```
5.54.2.4 void cpuload_t::compute_something() [inline], [private]
5.54.2.5 void cpuload_t::compute_something_else() [inline], [private]
5.54.3 Member Data Documentation
5.54.3.1 MHAParser::float_t cpuload_t::factor [private]
5.54.3.2 MHAParser::bool_t cpuload_t::use_sine [private]
5.54.3.3 float cpuload_t::phase [private]
5.54.3.4 volatile float cpuload_t::result [private]
```


The documentation for this class was generated from the following file:

5.54.3.5 std::vector<**float**> **cpuload_t::table** [private]

· cpuload.cpp

5.55 db_if_t Class Reference

Inheritance diagram for db_if_t:

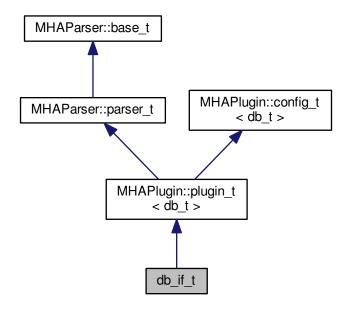

Public Member Functions

```
    db_if_t (algo_comm_t, std::string, std::string)
    mha_wave_t * process (mha_wave_t *)
```

- void prepare (mhaconfig_t &)
- void release ()
- ~db_if_t ()

Private Attributes

- MHAEvents::patchbay_t< db_if_t > patchbay
- MHAParser::int_t fragsize
- MHAParser::mhapluginloader_t plugloader
- std::string chain
- std::string algo
- bool bypass

Additional Inherited Members

```
5.55.1 Constructor & Destructor Documentation
```

Reimplemented from **MHAPlugin::plugin_t** < **db_t** > (p. 694).

void) [virtual]

5.55.3 Member Data Documentation

```
5.55.3.1 MHAEvents::patchbay_t < db_if_t > db_if_t::patchbay [private]
```

```
5.55.3.2 MHAParser::int_t db_if_t::fragsize [private]
```

5.55.3.3 MHAParser::mhapluginloader_t db_if_t::plugloader [private]

```
5.55.3.4 std::string db_if_t::chain [private]
```


5.55.3.5 std::string db_if_t::algo [private]

The documentation for this class was generated from the following file:

· db.cpp

5.56 db_t Class Reference

Inheritance diagram for db_t:

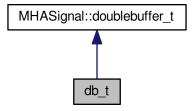

Public Member Functions

- **db_t** (unsigned int outer_fragsize, unsigned int inner_fragsize, unsigned int nch_in, unsigned int nch_out, **MHAParser::mhapluginloader_t** &plug)
- mha_wave_t * inner_process (mha_wave_t *)

Private Attributes

MHAParser::mhapluginloader_t & plugloader

Additional Inherited Members

```
5.56.1 Constructor & Destructor Documentation
```

5.56.2 Member Function Documentation

Implements MHASignal::doublebuffer_t (p. 734).

5.56.3 Member Data Documentation


5.56.3.1 MHAParser::mhapluginloader_t&db_t::plugloader [private]

The documentation for this class was generated from the following file:

· db.cpp

5.57 dc::dc_if_t Class Reference

Inheritance diagram for dc::dc_if_t:

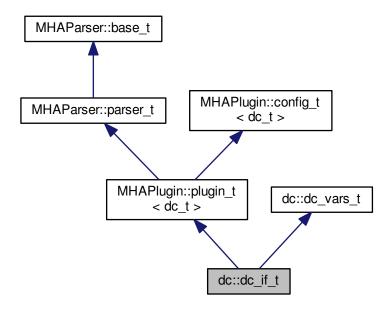

Public Member Functions

- dc_if_t (const algo_comm_t &ac_, const std::string &th_, const std::string &al_)
- void prepare (mhaconfig_t &tf)
- mha_wave_t * process (mha_wave_t *)
- mha_spec_t * process (mha_spec_t *)

Private Member Functions

- void update_monitors ()
 - Called from within the processing routines: updates the monitor variables.
- void update ()

Called by MHA configuration change event mechanism: creates new runtime configuration.

Private Attributes

- std::string algo
- wideband_inhib_vars_t wbinhib
- MHAEvents::patchbay_t< dc_if_t > patchbay

Additional Inherited Members


```
5.57.1 Constructor & Destructor Documentation
5.57.1.1 dc::dc_if_t::dc_if_t (
                     const algo_comm_t & ac_,
                     const std::string & th_,
                     const std::string & al )
5.57.2 Member Function Documentation
5.57.2.1 void dc::dc_if_t::prepare (
                     mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin t < dc \ t > (p. 693).
5.57.2.2 mha_wave_t * dc::dc_if_t::process (
                     mha_wave_t * s_in )
5.57.2.3 mha_spec_t * dc::dc_if_t::process (
                     mha spec t * s_in)
5.57.2.4 void dc::dc_if_t::update_monitors() [private]
Called from within the processing routines: updates the monitor variables.
5.57.2.5 void dc::dc if t::update() [private]
Called by MHA configuration change event mechanism: creates new runtime configuration.
5.57.3 Member Data Documentation
5.57.3.1 std::string dc::dc_if_t::algo [private]
        wideband inhib vars t dc::dc_if_t::wbinhib [private]
5.57.3.3 MHAEvents::patchbay_t<dc_if_t> dc::dc_if_t::patchbay [private]
```

The documentation for this class was generated from the following file:

dc.cpp

5.58 dc::dc t Class Reference

Inheritance diagram for dc::dc_t:

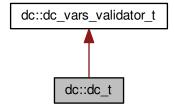

Public Member Functions

- dc_t (dc_vars_t vars, mha_real_t filter_rate, unsigned int nch, algo_comm_t ac, mha
 _domain_t domain, unsigned int fftlen, std::string algo)
- mha_wave_t * process (mha_wave_t *)
- mha_spec_t * process (mha_spec_t *, wb_inhib_cfg_t *wbinhib)
- void explicit_insert ()
- unsigned get_nbands () const

Number of frequency bands accessor.

- const MHASignal::waveform t & get level in db () const
- const MHASignal::waveform_t & get_level_in_db_adjusted () const

Private Attributes

- std::vector< MHATableLookup::linear_table_t > gt
- MHAFilter::o1flt lowpass t rmslevel
- MHAFilter::o1flt_lowpass_t attack
- MHAFilter::o1flt_maxtrack_t decay
- bool powersum
- bool bypass
- unsigned int naudiochannels
- unsigned int nbands
- MHA_AC::waveform_t level_in_db
- MHA_AC::waveform_t level_in_db_adjusted
- MHA_AC::waveform_t inhib_gain
- MHASignal::waveform_t max_level_difference
- unsigned int k_nyquist

Additional Inherited Members

```
5.58.1 Constructor & Destructor Documentation
5.58.1.1 dc::dc_t::dc_t (
                    dc vars t vars,
                    mha real t filter_rate,
                    unsigned int nch,
                    algo comm t ac,
                    mha_domain_t domain,
                    unsigned int fftlen,
                    std::string algo )
5.58.2 Member Function Documentation
5.58.2.1 mha wave t * dc::dc_t::process (
                    mha wave t * s)
5.58.2.2 mha_spec_t * dc::dc_t::process (
                    mha spec t * s,
                    wb_inhib_cfg_t * wbinhib )
5.58.2.3 void dc::dc_t::explicit_insert ( )
5.58.2.4 unsigned dc::dc_t::get_nbands ( ) const [inline]
Number of frequency bands accessor.
5.58.2.5 const MHASignal::waveform_t& dc::dc_t::get_level_in_db( ) const [inline]
5.58.2.6 const MHASignal::waveform_t& dc::dc_t::get_level_in_db_adjusted ( ) const
         [inline]
5.58.3 Member Data Documentation
5.58.3.1 std::vector<MHATableLookup::linear_table_t> dc::dc_t::gt [private]
5.58.3.2
        MHAFilter::o1flt lowpass t dc::dc_t::rmslevel [private]
5.58.3.3 MHAFilter::o1flt_lowpass_t dc::dc_t::attack [private]
5.58.3.4
        MHAFilter::o1flt_maxtrack_t dc::dc_t::decay [private]
5.58.3.5 booldc::dc_t::powersum [private]
```


```
5.58.3.6 bool dc::dc_t::bypass [private]
5.58.3.7 unsigned int dc::dc_t::naudiochannels [private]
5.58.3.8 unsigned int dc::dc_t::nbands [private]
5.58.3.9 MHA_AC::waveform_t dc::dc_t::level_in_db [private]
5.58.3.10 MHA_AC::waveform_t dc::dc_t::level_in_db_adjusted [private]
5.58.3.11 MHA_AC::waveform_t dc::dc_t::inhib_gain [private]
5.58.3.12 MHASignal::waveform_t dc::dc_t::max_level_difference [private]
5.58.3.13 unsigned int dc::dc_t::k_nyquist [private]
```

The documentation for this class was generated from the following file:

· dc.cpp

5.59 dc::dc_vars_t Class Reference

Inheritance diagram for dc::dc_vars_t:

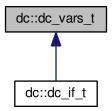

Public Member Functions

dc_vars_t (MHAParser::parser_t &)

Public Attributes

- MHAParser::bool t powersum
- MHAParser::mfloat_t gtdata
- MHAParser::vfloat t gtmin
- MHAParser::vfloat t gtstep
- MHAParser::vfloat_t taurmslevel
- MHAParser::vfloat t tauattack
- MHAParser::vfloat t taudecay
- MHAParser::string_t filterbank
- std::string cf_name
- std::string **ef_name**
- std::string bw name
- MHAParser::string t chname
- MHAParser::bool_t bypass
- MHAParser::string_t clientid
- MHAParser::string_t gainrule
- MHAParser::string t preset
- MHAParser::int mon t modified
- MHAParser::mfloat_t max_level_difference
- MHAParser::vfloat_mon_t input_level
- MHAParser::vfloat_mon_t filtered_level
- MHAParser::vfloat_mon_t center_frequencies
- MHAParser::vfloat_mon_t edge_frequencies
- MHAParser::vfloat mon t band weights
- · MHAParser::bool tuse wbinhib
- 5.59.1 Constructor & Destructor Documentation
- 5.59.1.1 dc::dc_vars_t::dc_vars_t (

 MHAParser::parser_t & p)
- 5.59.2 Member Data Documentation
- 5.59.2.1 MHAParser::bool_t dc::dc_vars_t::powersum
- 5.59.2.2 MHAParser::mfloat_t dc::dc_vars_t::gtdata
- 5.59.2.3 MHAParser::vfloat_t dc::dc_vars_t::gtmin
- 5.59.2.4 MHAParser::vfloat_t dc::dc_vars_t::gtstep
- 5.59.2.5 MHAParser::vfloat t dc::dc vars t::taurmslevel


5.59.2.6	MHAParser::vfloat_t dc::dc_vars_t::tauattack
5.59.2.7	MHAParser::vfloat_t dc::dc_vars_t::taudecay
5.59.2.8	MHAParser::string_t dc::dc_vars_t::filterbank
5.59.2.9	std::string dc::dc_vars_t::cf_name
5.59.2.10	std::string dc::dc_vars_t::ef_name
5.59.2.11	std::string dc::dc_vars_t::bw_name
5.59.2.12	MHAParser::string_t dc::dc_vars_t::chname
5.59.2.13	MHAParser::bool_t dc::dc_vars_t::bypass
5.59.2.14	MHAParser::string_t dc::dc_vars_t::clientid
5.59.2.15	MHAParser::string_t dc::dc_vars_t::gainrule
5.59.2.16	MHAParser::string_t dc::dc_vars_t::preset
5.59.2.17	MHAParser::int_mon_t dc::dc_vars_t::modified
5.59.2.18	MHAParser::mfloat_t dc::dc_vars_t::max_level_difference
5.59.2.19	MHAParser::vfloat_mon_t dc::dc_vars_t::input_level
5.59.2.20	MHAParser::vfloat_mon_t dc::dc_vars_t::filtered_level
5.59.2.21	MHAParser::vfloat_mon_t dc::dc_vars_t::center_frequencies
5.59.2.22	MHAParser::vfloat_mon_t dc::dc_vars_t::edge_frequencies
5.59.2.23	MHAParser::vfloat_mon_t dc::dc_vars_t::band_weights
5.59.2.24	MHAParser::bool_t dc::dc_vars_t::use_wbinhib

The documentation for this class was generated from the following file:

• dc.cpp

5.60 dc::dc_vars_validator_t Class Reference

Inheritance diagram for dc::dc_vars_validator_t:

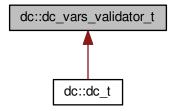

Public Member Functions

• dc_vars_validator_t (dc_vars_t &v, unsigned int s, mha_domain_t domain)

5.60.1 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

dc.cpp

5.61 dc::wb_inhib_cfg_t Class Reference

Public Member Functions

wb_inhib_cfg_t (const wideband_inhib_vars_t &vars)

Public Attributes

- std::vector< float > weights
- float dl_map_min
- float dl_map_max
- float dl diff
- float I_min
- std::vector< std::vector< float >> g_scale

5.61.1 Constructor & Destructor Documentation

5.61.2 Member Data Documentation


- 5.61.2.1 std::vector<float> dc::wb_inhib_cfg_t::weights
- 5.61.2.2 float dc::wb_inhib_cfg_t::dl_map_min
- 5.61.2.3 float dc::wb_inhib_cfg_t::dl_map_max
- 5.61.2.4 float dc::wb_inhib_cfg_t::dl_diff
- 5.61.2.5 float dc::wb_inhib_cfg_t::l_min
- 5.61.2.6 std::vector<std::vector<float> > dc::wb_inhib_cfg_t::g_scale

The documentation for this class was generated from the following file:

dc.cpp

5.62 dc::wideband_inhib_vars_t Class Reference

Inheritance diagram for dc::wideband_inhib_vars_t:

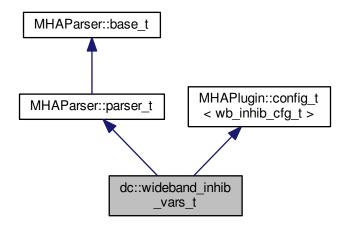

Public Member Functions

- wideband_inhib_vars_t ()
- void **setchannels** (unsigned int ch, unsigned int bnds)
- wb_inhib_cfg_t * current ()
- void update ()

Public Attributes

- MHAParser::vfloat_t weights
- MHAParser::float_t dl_map_min
- MHAParser::float_t dl_map_max
- MHAParser::float t1 min
- MHAParser::mfloat_t g_scale
- MHAEvents::patchbay_t< wideband_inhib_vars_t > patchbay
- unsigned int channels
- · unsigned int bands

Additional Inherited Members

```
5.62.1 Constructor & Destructor Documentation
```

- 5.62.1.1 dc::wideband_inhib_vars_t::wideband_inhib_vars_t()
- 5.62.2 Member Function Documentation
- 5.62.2.2 wb_inhib_cfg_t* dc::wideband_inhib_vars_t::current() [inline]
- 5.62.2.3 void dc::wideband_inhib_vars_t::update ()
- 5.62.3 Member Data Documentation
- 5.62.3.1 MHAParser::vfloat t dc::wideband inhib vars t::weights
- 5.62.3.2 MHAParser::float_t dc::wideband_inhib_vars_t::dl_map_min
- 5.62.3.3 MHAParser::float t dc::wideband_inhib_vars_t::dl_map_max
- 5.62.3.4 MHAParser::float t dc::wideband inhib vars t::1 min


- 5.62.3.5 MHAParser::mfloat_t dc::wideband_inhib_vars_t::g_scale
- 5.62.3.6 MHAEvents::patchbay_t<wideband_inhib_vars_t> dc::wideband_inhib_vars_t← ::patchbay
- 5.62.3.7 unsigned int dc::wideband_inhib_vars_t::channels
- 5.62.3.8 unsigned int dc::wideband_inhib_vars_t::bands

The documentation for this class was generated from the following file:

· dc.cpp

5.63 dc_simple::dc_if_t Class Reference

Inheritance diagram for dc_simple::dc_if_t:

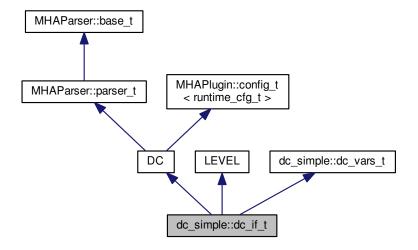

Public Member Functions

- dc_if_t (const algo_comm_t &ac_, const std::string &th_, const std::string &al_)
- void prepare (mhaconfig_t &tf)
- void release ()
- mha_spec_t * process (mha_spec_t *)
- mha_wave_t * process (mha_wave_t *)

Private Member Functions

```
void update_dc ()
```

- void update_level ()
- void has_been_modified ()
- void read_modified ()
- void update_level_mon ()
- void update gain mon ()

Private Attributes

```
    MHAParser::string_t clientid
```

- MHAParser::string_t gainrule
- MHAParser::string_t preset
- MHAParser::int mon t modified
- MHAParser::vfloat_mon_t mon_l
- MHAParser::vfloat_mon_t mon_g
- MHAParser::string t filterbank
- MHAParser::vfloat_mon_t center_frequencies
- MHAParser::vfloat mon t edge frequencies
- MHAEvents::patchbay_t< dc_if_t > patchbay
- bool prepared

Additional Inherited Members

```
5.63.1 Constructor & Destructor Documentation
```

5.63.2 Member Function Documentation

Implements MHAPlugin::plugin_t< runtime_cfg_t > (p. 693).

Reimplemented from MHAPlugin::plugin_t< runtime_cfg_t > (p. 694).


```
5.63.2.3 mha_spec_t * dc_simple::dc_if_t::process (
                    mha\_spec\_t * s)
5.63.2.4 mha_wave_t * dc_simple::dc_if_t::process (
                    mha_wave_t * s
5.63.2.5 void dc_simple::dc_if_t::update_dc( ) [private]
5.63.2.6 void dc_simple::dc_if_t::update_level( ) [private]
5.63.2.7 void dc_simple::dc_if_t::has_been_modified( ) [inline], [private]
5.63.2.8 void dc_simple::dc_if_t::read_modified() [inline], [private]
5.63.2.9 void dc_simple::dc_if_t::update_level_mon() [private]
5.63.2.10 void dc_simple::dc_if_t::update_gain_mon() [private]
5.63.3 Member Data Documentation
        MHAParser::string t dc_simple::dc_if_t::clientid [private]
        MHAParser::string t dc_simple::dc_if_t::gainrule [private]
5.63.3.3 MHAParser::string_t dc_simple::dc_if_t::preset [private]
5.63.3.4
        MHAParser::int_mon_t dc_simple::dc_if_t::modified [private]
5.63.3.5 MHAParser::vfloat_mon_t dc_simple::dc_if_t::mon_l [private]
5.63.3.6
        MHAParser::vfloat_mon_t dc_simple::dc_if_t::mon_g [private]
5.63.3.7
        MHAParser::string_t dc_simple::dc_if_t::filterbank [private]
5.63.3.8
        MHAParser::vfloat_mon_t dc_simple::dc_if_t::center_frequencies [private]
5.63.3.9 MHAParser::vfloat_mon_t dc_simple::dc_if_t::edge_frequencies [private]
5.63.3.10 MHAEvents::patchbay_t<dc_if_t> dc_simple::dc_if_t::patchbay [private]
5.63.3.11 bool dc_simple::dc_if_t::prepared [private]
```

The documentation for this class was generated from the following file:

dc_simple.cpp

5.64 dc_simple::dc_t Class Reference

Inheritance diagram for dc_simple::dc_t:

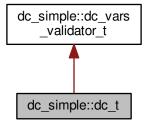

Classes

· class line_t

Public Member Functions

- dc_t (const dc_vars_t &vars, mha_real_t filter_rate, unsigned int nch, unsigned int fftlen)
- mha_spec_t * process (mha_spec_t *, mha_wave_t *level_db)
- mha_wave_t * process (mha_wave_t *, mha_wave_t *level_db)

Public Attributes

- std::vector< float > mon_l
- std::vector< float > mon_g

Private Attributes

- std::vector< mha_real_t > expansion_threshold
- std::vector< mha_real_t > limiter_threshold
- std::vector< line_t > compression
- std::vector< line_t > expansion
- std::vector< line_t > limiter
- std::vector< mha_real_t > maxgain
- unsigned int nbands

Additional Inherited Members

```
5.64.1 Constructor & Destructor Documentation
5.64.1.1 dc_simple::dc_t::dc_t (
                      const dc_vars_t & vars,
                      mha_real_t filter_rate,
                      unsigned int nch,
                      unsigned int fftlen )
5.64.2 Member Function Documentation
5.64.2.1 mha_spec_t * dc_simple::dc_t::process (
                      mha_spec_t * s,
                      mha_wave_t * level_db )
5.64.2.2 mha_wave_t * dc_simple::dc_t::process (
                      mha_wave_t * s,
                      mha wave t * level_db )
5.64.3 Member Data Documentation
5.64.3.1 std::vector<mha_real_t> dc_simple::dc_t::expansion_threshold [private]
5.64.3.2 std::vector<mha_real_t> dc_simple::dc_t::limiter_threshold [private]
\textbf{5.64.3.3} \quad \textbf{std::vector} < \textbf{line\_t} > \textbf{dc\_simple::dc\_t::compression} \quad \texttt{[private]}
5.64.3.4
         std::vector<line_t> dc_simple::dc_t::expansion [private]
5.64.3.5
         std::vector<line t> dc_simple::dc_t::limiter [private]
         std::vector<mha real t> dc simple::dc t::maxgain [private]
5.64.3.7
         unsigned int dc_simple::dc_t::nbands [private]
5.64.3.8
         std::vector<float> dc simple::dc t::mon l
5.64.3.9 std::vector<float> dc_simple::dc_t::mon_g
```

The documentation for this class was generated from the following file:

dc_simple.cpp

```
5.65 dc_simple::dc_t::line_t Class Reference
```

Public Member Functions

```
    line_t (mha_real_t x1, mha_real_t y1, mha_real_t x2, mha_real_t y2)
    line_t (mha_real_t x1, mha_real_t y1, mha_real_t slope)
    mha_real_t operator() (mha_real_t x)
```

Private Attributes

```
mha_real_t m
```

mha_real_t y0

```
5.65.1 Constructor & Destructor Documentation
```

```
5.65.1.1 dc_simple::dc_t::line_t::line_t (

mha_real_t x1,

mha_real_t y1,

mha_real_t x2,

mha_real_t y2 )

5.65.1.2 dc_simple::dc_t::line_t::line_t (
```

```
mha_real_t y1,
mha_real_t y1,
mha_real_t slope )
```

5.65.2 Member Function Documentation

5.65.3 Member Data Documentation

```
5.65.3.1 mha_real_t dc_simple::dc_t::line_t::m [private]
```


```
5.65.3.2 mha_real_t dc_simple::dc_t::line_t::y0 [private]
```

The documentation for this class was generated from the following file:

dc_simple.cpp

5.66 dc_simple::dc_vars_t Class Reference

Inheritance diagram for dc_simple::dc_vars_t:

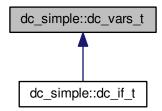

Public Member Functions

dc_vars_t (MHAParser::parser_t &)

Public Attributes

- MHAParser::vfloat_t g50
- MHAParser::vfloat_t g80
- MHAParser::vfloat_t maxgain
- MHAParser::vfloat_t expansion_threshold
- MHAParser::vfloat_t expansion_slope
- MHAParser::vfloat_t limiter_threshold
- MHAParser::vfloat t tauattack
- MHAParser::vfloat_t taudecay
- MHAParser::bool_t bypass

5.66.1 Constructor & Destructor Documentation

- 5.66.1.1 dc_simple::dc_vars_t::dc_vars_t (


 MHAParser::parser_t & p)
- 5.66.2 Member Data Documentation
- 5.66.2.1 MHAParser::vfloat_t dc_simple::dc_vars_t::g50
- 5.66.2.2 MHAParser::vfloat_t dc_simple::dc_vars_t::g80

- 5.66.2.3 MHAParser::vfloat_t dc_simple::dc_vars_t::maxgain
- 5.66.2.4 MHAParser::vfloat_t dc_simple::dc_vars_t::expansion_threshold
- 5.66.2.5 MHAParser::vfloat_t dc_simple::dc_vars_t::expansion_slope
- 5.66.2.6 MHAParser::vfloat t dc_simple::dc_vars_t::limiter_threshold
- 5.66.2.7 MHAParser::vfloat_t dc_simple::dc_vars_t::tauattack
- 5.66.2.8 MHAParser::vfloat_t dc_simple::dc_vars_t::taudecay
- 5.66.2.9 MHAParser::bool_t dc_simple::dc_vars_t::bypass

The documentation for this class was generated from the following file:

- · dc simple.cpp
- 5.67 dc simple::dc vars validator t Class Reference

Inheritance diagram for dc_simple::dc_vars_validator_t:

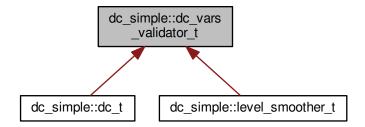

Public Member Functions

dc_vars_validator_t (const dc_vars_t &v, unsigned int s)


5.67.1 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

· dc_simple.cpp

5.68 dc_simple::level_smoother_t Class Reference

Inheritance diagram for dc_simple::level_smoother_t:

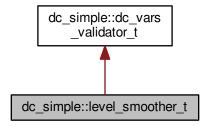

Public Member Functions

- level_smoother_t (const dc_vars_t &vars, mha_real_t filter_rate, mhaconfig_t buscfg)
- mha_wave_t * process (mha_spec_t *)
- mha_wave_t * process (mha_wave_t *)

Private Attributes

- MHAFilter::o1flt_lowpass_t attack
- MHAFilter::o1flt_maxtrack_t decay
- unsigned int nbands
- unsigned int fftlen
- MHASignal::waveform_t level_wave
- MHASignal::waveform_t level_spec

Additional Inherited Members


```
5.68.1 Constructor & Destructor Documentation
5.68.1.1 dc_simple::level_smoother_t::level_smoother_t (
                    const dc_vars_t & vars,
                    mha real t filter rate,
                    mhaconfig_t buscfg )
5.68.2 Member Function Documentation
5.68.2.1 mha wave t * dc_simple::level_smoother_t::process (
                    mha_spec_t * s )
5.68.2.2 mha_wave_t * dc_simple::level_smoother_t::process (
                    mha_wave_t * s
5.68.3 Member Data Documentation
5.68.3.1 MHAFilter::o1flt_lowpass_t dc_simple::level_smoother_t::attack [private]
5.68.3.2 MHAFilter::o1flt maxtrack tdc_simple::level_smoother_t::decay [private]
5.68.3.3
        unsigned int dc_simple::level_smoother_t::nbands [private]
5.68.3.4 unsigned int dc_simple::level_smoother_t::fftlen [private]
        MHASignal::waveform_t dc_simple::level_smoother_t::level_wave [private]
5.68.3.5
5.68.3.6 MHASignal::waveform t dc simple::level smoother t::level spec [private]
```

The documentation for this class was generated from the following file:

dc_simple.cpp

5.69 delay::interface_t Class Reference

Inheritance diagram for delay::interface_t:

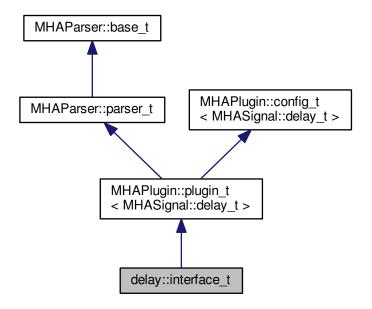

Public Member Functions

- interface_t (const algo_comm_t &, const std::string &, const std::string &)
- void prepare (mhaconfig_t &)
- mha_wave_t * process (mha_wave_t *)

Private Member Functions

• void update ()


Private Attributes

- MHAParser::vint_t delays
- MHAEvents::patchbay_t< interface_t > patchbay

```
Additional Inherited Members
```

```
5.69.1 Constructor & Destructor Documentation
5.69.1.1 delay::interface_t::interface_t (
                     const algo comm t & iac,
                     const std::string & ,
                     const std::string & )
5.69.2 Member Function Documentation
5.69.2.1 void delay::interface_t::prepare (
                     mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin_t < MHASignal::delay_t > (p. 693).
5.69.2.2 mha wave t * delay::interface_t::process (
                     mha wave t * s)
5.69.2.3 void delay::interface_t::update() [private]
5.69.3 Member Data Documentation
        MHAParser::vint_t delay::interface_t::delays [private]
5.69.3.2 MHAEvents::patchbay_t<interface_t> delay::interface_t::patchbay [private]
The documentation for this class was generated from the following file:
   · delay.cpp
5.70
      delaysum::delaysum_if_t Class Reference
Interface class for the delaysum plugin.
```

Inheritance diagram for delaysum::delaysum_if_t:

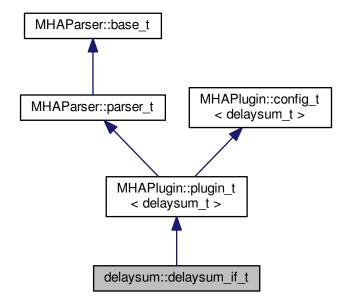

Public Member Functions

- delaysum_if_t (const algo_comm_t &, const std::string &, const std::string &)
- mha_wave_t * process (mha_wave_t *)
- void prepare (mhaconfig_t &)
- void release ()

Private Member Functions

void update_cfg ()

Private Attributes

MHAParser::vfloat_t weights

Linear weights to be multiplied with the audio signal, one factor for each channel.

MHAParser::vint_t delay

vector of channel-specific delays, in samples.

 $\bullet \ \ MHAE vents::patchbay_t < delaysum_if_t > patchbay$

The patchbay to react to config changes.

Additional Inherited Members

5.70.1 Detailed Description

Interface class for the delaysum plugin.

This plugin allows to delay and sum multiple input channels using individual delays and weights. After each channel gets delayed it is multiplied with the given weight and then added to the single outout channel.

```
5.70.2 Constructor & Destructor Documentation
5.70.2.1 delaysum::delaysum if t::delaysum if t (
                     const algo_comm_t & iac,
                     const std::string & ,
                     const std::string & )
5.70.3 Member Function Documentation
5.70.3.1 mha_wave_t * delaysum::delaysum_if_t::process (
                     mha_wave_t * wave )
5.70.3.2 void delaysum::delaysum if t::prepare (
                     mhaconfig t & tfcfg ) [virtual]
Implements MHAPlugin::plugin_t < delaysum_t > (p. 693).
5.70.3.3 void delaysum::delaysum_if_t::release (
                     void ) [virtual]
Reimplemented from MHAPlugin::plugin_t < delaysum_t > (p. 694).
5.70.3.4 void delaysum::delaysum_if_t::update_cfg (
                     void ) [private]
5.70.4 Member Data Documentation
5.70.4.1 MHAParser::vfloat_t delaysum::delaysum_if_t::weights [private]
Linear weights to be multiplied with the audio signal, one factor for each channel.
Order is [chan0, chan1, ...]
```

5.70.4.2 MHAParser::vint_t delaysum::delaysum_if_t::delay [private]

vector of channel-specific delays, in samples.

5.70.4.3 MHAEvents::patchbay_t<delaysum_if_t> delaysum::delaysum_if_t::patchbay [private]

The patchbay to react to config changes.


The documentation for this class was generated from the following file:

· delaysum.cpp

5.71 delaysum::delaysum_t Class Reference

Runtime configuration of the delaysum plugin.

Inheritance diagram for delaysum::delaysum_t:

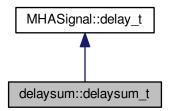

Public Member Functions

delaysum_t (unsigned int nch, unsigned int fragsize, const std::vector< mha_real_t > &weights_, const std::vector< int > &delays_)

Constructor of the runtime configuration.

mha_wave_t * process (mha_wave_t *)

Private Attributes

- std::vector< mha_real_t > weights
 Relative weights for each channel. Order is [chan0, chan1, ...].
- MHASignal::waveform_t out

Output waveform.

5.71.1 Detailed Description

Runtime configuration of the delaysum plugin.

Inherits from the already present delay_t class. The constructor initializes and validates the runtime configuration and forwards the delay vector to the delay_t class. The process function first calls delay_t::process and then multiplies every output channel with its weight and adds them into the output channel.

5.71.2 Constructor & Destructor Documentation

Constructor of the runtime configuration.

Parameters

nch	Number of input channels.
fragsize	Size of one input fragment in frames.
weights⇔ –	Vector of weights for each channel.
delays⇔	Vector of delays, one entry per channel.
_	

5.71.3 Member Function Documentation

```
5.71.3.1 mha_wave_t * delaysum::delaysum_t::process ( mha_wave_t * signal )
```

5.71.4 Member Data Documentation

```
5.71.4.1 std::vector<mha_real_t> delaysum::delaysum_t::weights [private]
```

Relative weights for each channel. Order is [chan0, chan1, ...].

```
5.71.4.2 MHASignal::waveform_t delaysum::delaysum_t::out [private]
```


Output waveform.

The documentation for this class was generated from the following file:

· delaysum.cpp

5.72 doasym_classification Class Reference

Inheritance diagram for doasym_classification:

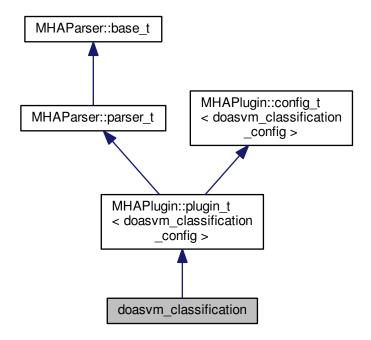

Public Member Functions

doasvm_classification (algo_comm_t &ac, const std::string &chain_name, const std
 ::string &algo_name)

Constructs our plugin.

- ~doasym_classification ()
- mha_wave_t * process (mha_wave_t *)

Checks for the most recent configuration and defers processing to it.

void prepare (mhaconfig_t &)

Plugin preparation.

void release (void)

Public Attributes

- MHAParser::vfloat_t angles
- MHAParser::mfloat_t w
- MHAParser::vfloat t b
- MHAParser::vfloat_t x
- MHAParser::vfloat_t y
- MHAParser::string_t p_name
- MHAParser::string_t max_p_ind_name
- MHAParser::string_t vGCC_name

Private Member Functions

void update_cfg ()

Private Attributes

MHAEvents::patchbay_t< doasym_classification > patchbay

Additional Inherited Members

```
5.72.1 Constructor & Destructor Documentation
```

Constructs our plugin.

```
5.72.1.2 doasym_classification::~doasym_classification()
```

5.72.2 Member Function Documentation

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number of
	channels, frames per block, sampling rate.

Implements MHAPlugin::plugin_t< doasym_classification_config > (p. 693).

```
5.72.2.3 void doasym_classification::release (
                    void ) [inline], [virtual]
Reimplemented from MHAPlugin::plugin_t< doasym_classification_config > (p. 694).
5.72.2.4 void doasvm_classification::update_cfg( ) [private]
5.72.3 Member Data Documentation
5.72.3.1 MHAParser::vfloat_t doasym_classification::angles
5.72.3.2 MHAParser::mfloat_t doasvm_classification::w
5.72.3.3 MHAParser::vfloat t doasvm_classification::b
5.72.3.4 MHAParser::vfloat_t doasym_classification::x
5.72.3.5 MHAParser::vfloat t doasym_classification::y
5.72.3.6 MHAParser::string_t doasym_classification::p_name
5.72.3.7 MHAParser::string_t doasym_classification::max_p_ind_name
5.72.3.8 MHAParser::string_t doasym_classification::vGCC_name
```

5.72.3.9 MHAEvents::patchbay_t<doasvm_classification> doasvm_classification::patchbay

The documentation for this class was generated from the following files:

· doasvm_classification.h

[private]

- doasym classification.cpp
- 5.73 doasym_classification_config Class Reference

Public Member Functions

- doasvm_classification_config (algo_comm_t &ac, const mhaconfig_t in_cfg, doasvm_classification *_doasvm)
- ~doasym_classification_config ()
- mha_wave_t * process (mha_wave_t *)

Public Attributes

```
· algo_comm_t & ac
```

doasym_classification * doasym

MHA AC::waveform t p

- MHA_AC::int_t p_max
- mha_wave_t c
- 5.73.1 Constructor & Destructor Documentation


- 5.73.1.2 doasym_classification_config::~doasym_classification_config()
- 5.73.2 Member Function Documentation
- 5.73.2.1 mha_wave_t * doasym_classification_config::process (mha_wave_t * wave)
- 5.73.3 Member Data Documentation
- 5.73.3.1 algo_comm_t& doasym_classification_config::ac
- 5.73.3.2 doasvm_classification* doasvm_classification_config::doasvm
- 5.73.3.3 MHA_AC::waveform_t doasym_classification_config::p
- 5.73.3.4 MHA_AC::int_t doasym_classification_config::p_max
- 5.73.3.5 mha_wave_t doasym_classification_config::c

The documentation for this class was generated from the following files:

- · doasym classification.h
- · doasvm_classification.cpp

5.74 doasym_feature_extraction Class Reference

Inheritance diagram for doasym_feature_extraction:

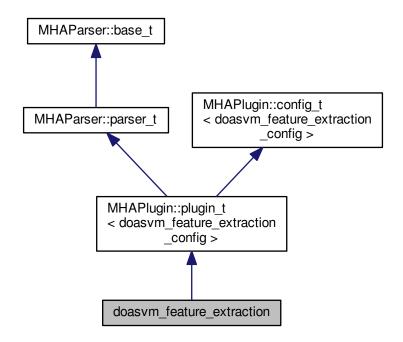

Public Member Functions

 doasvm_feature_extraction (algo_comm_t &ac, const std::string &chain_name, const std::string &algo_name)

Constructs our plugin.

- ~doasvm_feature_extraction ()
- mha wave t * process (mha wave t *)

Checks for the most recent configuration and defers processing to it.

void prepare (mhaconfig_t &)

Plugin preparation.

void release (void)

Public Attributes

- MHAParser::int_t fftlen
- MHAParser::int_t max_lag
- MHAParser::int_t nupsample
- MHAParser::string_t vGCC_name

Private Member Functions

void update_cfg ()

Private Attributes

MHAEvents::patchbay_t< doasym_feature_extraction > patchbay

Additional Inherited Members

```
5.74.1 Constructor & Destructor Documentation
```

Constructs our plugin.

```
5.74.1.2 doasym_feature_extraction::~doasym_feature_extraction()
```

5.74.2 Member Function Documentation

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number of
	channels, frames per block, sampling rate.

Implements MHAPlugin::plugin_t< doasvm_feature_extraction_config > (p. 693).

The documentation for this class was generated from the following files:

- · doasvm_feature_extraction.h
- doasym feature extraction.cpp

5.75 doasym_feature_extraction_config Class Reference

Public Member Functions

- doasvm_feature_extraction_config (algo_comm_t &ac, const mhaconfig_t in_cfg, doasvm_feature_extraction *_doagcc)
- ~doasym feature extraction config ()
- mha_wave_t * process (mha_wave_t *)

Public Attributes

- doasym_feature_extraction * doagcc
- unsigned int wndlen
- · unsigned int fftlen
- unsigned int G_length
- unsigned int GCC_start
- unsigned int GCC_end
- MHA AC::waveform t vGCC ac
- mha_fft_t fft
- mha_fft_t ifft
- double hifftwin_sum
- MHASignal::waveform t proc wave
- MHASignal::waveform t hwin
- MHASignal::waveform_t hifftwin
- MHASignal::waveform_t vGCC
- MHASignal::spectrum t in spec
- MHASignal::spectrum_t G

```
5.75.1 Constructor & Destructor Documentation
5.75.1.1 doasym_feature_extraction_config::doasym_feature_extraction_config (
                     algo_comm_t & ac,
                     const mhaconfig_t in_cfg,
                     doasym feature extraction * _doagcc )
5.75.1.2 doasym_feature_extraction_config::~doasym_feature_extraction_config()
5.75.2 Member Function Documentation
5.75.2.1 mha_wave_t * doasym_feature_extraction_config::process (
                     mha_wave_t * wave )
       Member Data Documentation
5.75.3
        doasym_feature_extraction* doasym_feature_extraction_config::doagcc
5.75.3.2
        unsigned int doasym_feature_extraction_config::wndlen
5.75.3.3
        unsigned int doasym_feature_extraction_config::fftlen
5.75.3.4
        unsigned int doasym_feature_extraction_config::G_length
5.75.3.5
        unsigned int doasym feature extraction config::GCC start
5.75.3.6
        unsigned int doasym_feature_extraction_config::GCC_end
5.75.3.7
         MHA_AC::waveform_t doasym_feature_extraction_config::vGCC_ac
5.75.3.8
        mha fft t doasym_feature_extraction_config::fft
5.75.3.9
        mha fft t doasym feature extraction config::ifft
5.75.3.10 double doasym_feature_extraction_config::hifftwin_sum
5.75.3.11 MHASignal::waveform t doasym feature extraction config::proc wave
5.75.3.12 MHASignal::waveform t doasym_feature_extraction_config::hwin
5.75.3.13 MHASignal::waveform t doasym feature extraction config::hifftwin
5.75.3.14 MHASignal::waveform t doasym_feature_extraction_config::vGCC
5.75.3.15 MHASignal::spectrum t doasym feature extraction config::in spec
5.75.3.16 MHASignal::spectrum t doasym_feature_extraction_config::G
```


The documentation for this class was generated from the following files:

- · doasym feature extraction.h
- doasym_feature_extraction.cpp

5.76 droptect_t Class Reference

Detect dropouts in a signal with a constant spectrum.

Inheritance diagram for droptect_t:

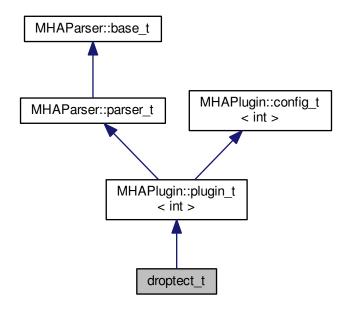

Public Member Functions

droptect_t (algo_comm_t &ac, const std::string &chain_name, const std::string &algo
 —name)

This constructor initializes the configuration language variables and inserts them into the MHA configuration tree.

- void prepare (mhaconfig_t &signal_info)
- void release (void)
- mha_spec_t * process (mha_spec_t *signal)

Private Attributes

- MHAParser::vint_mon_t dropouts
- MHAParser::vint_mon_t consecutive_dropouts
- MHAParser::int_mon_t blocks
- MHAParser::bool_t reset
- MHAParser::float_t threshold
- MHASignal::waveform_t * current_powspec

```
    MHASignal::waveform_t * filtered_powspec
```

- · MHAParser::float t tau
- std::vector< bool > filter_activated
- float period

The period of the process callback.

MHAParser::mfloat_mon_t filtered_powspec_mon

User access to filtered spectrum.

MHAParser::float mon t level mon

Additional Inherited Members

5.76.1 Detailed Description

Detect dropouts in a signal with a constant spectrum.

5.76.2 Constructor & Destructor Documentation

This constructor initializes the configuration language variables and inserts them into the MHA configuration tree.

```
5.76.3 Member Function Documentation
```

Implements MHAPlugin::plugin_t < int > (p. 693).

Reimplemented from **MHAPlugin::plugin_t**< int > (p. 694).

```
5.76.3.3 mha_spec_t * droptect_t::process (
                    mha_spec_t * signal )
5.76.4 Member Data Documentation
5.76.4.1 MHAParser::vint mon t droptect_t::dropouts [private]
5.76.4.2 MHAParser::vint_mon_t droptect_t::consecutive_dropouts [private]
5.76.4.3 MHAParser::int_mon_t droptect_t::blocks [private]
5.76.4.4 MHAParser::bool_t droptect_t::reset [private]
5.76.4.5 MHAParser::float_t droptect_t::threshold [private]
5.76.4.6 MHASignal::waveform_t* droptect_t::current_powspec [private]
5.76.4.7 MHASignal::waveform_t* droptect_t::filtered_powspec [private]
5.76.4.8 MHAParser::float_t droptect_t::tau [private]
5.76.4.9 std::vector<bool> droptect_t::filter_activated [private]
5.76.4.10 float droptect_t::period [private]
The period of the process callback.
5.76.4.11 MHAParser::mfloat_mon_t droptect_t::filtered_powspec_mon [private]
User access to filtered spectrum.
```


The documentation for this class was generated from the following file:

5.76.4.12 MHAParser::float mon t droptect t::level mon [private]

droptect.cpp

5.77 ds_t Class Reference

Inheritance diagram for ds_t:

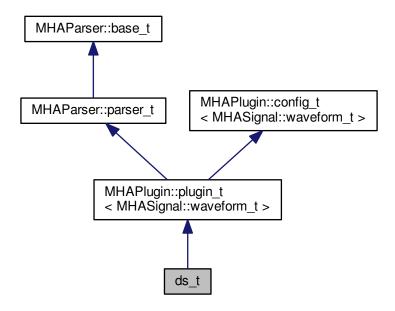

Public Member Functions

- ds_t (algo_comm_t, std::string, std::string)
- mha_wave_t * process (mha_wave_t *)
- void prepare (mhaconfig_t &)
- void release ()

Private Attributes

- MHAParser::int_t ratio
- MHAFilter::iir_filter_t antialias

Additional Inherited Members

5.77.1 Constructor & Destructor Documentation

```
5.77.1.1 ds_t::ds_t (
                    algo_comm_t iac,
                    std::string,
                    std::string )
5.77.2 Member Function Documentation
5.77.2.1 mha wave t * ds_t::process (
                    mha_wave_t * s )
5.77.2.2 void ds_t::prepare (
                    mhaconfig_t & cf ) [virtual]
Implements MHAPlugin::plugin_t< MHASignal::waveform_t > (p. 693).
5.77.2.3 void ds_t::release (
                    void ) [virtual]
Reimplemented from MHAPlugin::plugin_t < MHASignal::waveform_t > (p. 694).
5.77.3 Member Data Documentation
5.77.3.1
        MHAParser::int_t ds_t::ratio [private]
5.77.3.2 MHAFilter::iir_filter_t ds_t::antialias [private]
```

The documentation for this class was generated from the following file:

downsample.cpp

5.78 dynamiclib_t Class Reference

Public Member Functions

- dynamiclib_t (const std::string &)
- void * resolve (const std::string &)
- void * resolve_checked (const std::string &)
- ~dynamiclib_t ()
- const std::string & getmodulename () const
- const std::string & getname () const

Private Attributes

- std::string fullname
- std::string modulename
- mha_libhandle_t h

```
5.78.1 Constructor & Destructor Documentation
```

The documentation for this class was generated from the following files:

- · mha_os.h
- mha_os.cpp
- 5.79 DynComp::dc_afterburn_rt_t Class Reference

5.78.3.3 mha_libhandle_t dynamiclib_t::h [private]

Real-time class for after burn effect.

Public Member Functions

- dc_afterburn_rt_t (const std::vector< float > &cf, unsigned int channels, float srate, const dc_afterburn_vars_t &vars)
- void **burn** (float &Gin, float Lin, unsigned int band, unsigned int channel) gain modifier method (afterburn).

Private Attributes

```
std::vector< float > drain_inv
```

- std::vector< float > conflux
- std::vector< float > maxgain
- std::vector< float > mpo_inv
- std::vector< MHAFilter::o1flt_lowpass_t > lp

5.79.1 Detailed Description

Real-time class for after burn effect.

The constructor processes the parameters and creates pre-processed variables for efficient realtime processing.

5.79.2 Constructor & Destructor Documentation

5.79.3 Member Function Documentation

gain modifier method (afterburn).

Parameters

Gin	Linear gain.	
Lin	Input level (Pascal).	
band	Filter band number.	
≈ebænnel i	-Ghannel bumber burg	

© 2006-2048 Hörzedh g@hbH, Oldehburg

Output level for MPO is estimated by Gin * Lin.

5.79.4 Member Data Documentation

```
5.79.4.1 std::vector<float> DynComp::dc_afterburn_rt_t::drain_inv [private]

5.79.4.2 std::vector<float> DynComp::dc_afterburn_rt_t::conflux [private]

5.79.4.3 std::vector<float> DynComp::dc_afterburn_rt_t::maxgain [private]

5.79.4.4 std::vector<float> DynComp::dc_afterburn_rt_t::mpo_inv [private]
```

std::vector<MHAFilter::o1flt lowpass t> DynComp::dc_afterburn_rt_t::lp [private]


The documentation for this class was generated from the following files:

- · dc_afterburn.h
- dc_afterburn.cpp

5.80 DynComp::dc_afterburn_t Class Reference

Afterburn class, to be defined as a member of compressors.

Inheritance diagram for DynComp::dc_afterburn_t:

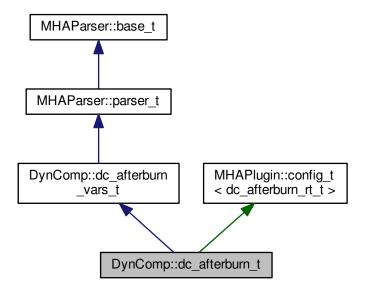

Public Member Functions

- dc afterburn t ()
- void **set_fb_pars** (const std::vector< float > &cf, unsigned int **channels**, float srate)
- void unset_fb_pars ()
- void update_burner ()
- void **burn** (float &Gin, float Lin, unsigned int band, unsigned int channel)

Private Member Functions

• void update ()

Private Attributes

- MHAEvents::patchbay_t< dc_afterburn_t > patchbay
- std::vector< float > _cf
- unsigned int _channels
- float srate
- bool commit_pending
- bool fb_pars_configured

Additional Inherited Members

5.80.1 Detailed Description

Afterburn class, to be defined as a member of compressors.

```
5.80.2 Constructor & Destructor Documentation
```

```
5.80.2.1 DynComp::dc_afterburn_t::dc_afterburn_t ( )
```

5.80.3 Member Function Documentation

```
5.80.3.2 void DynComp::dc_afterburn_t::unset_fb_pars ( )
```

5.80.3.3 void DynComp::dc_afterburn_t::update_burner() [inline]


```
5.80.3.4 void DynComp::dc_afterburn_t::burn (
                     float & Gin,
                     float Lin.
                     unsigned int band,
                     unsigned int channel ) [inline]
5.80.3.5 void DynComp::dc_afterburn_t::update( ) [private]
5.80.4 Member Data Documentation
5.80.4.1 MHAEvents::patchbay_t<dc_afterburn_t> DynComp::dc_afterburn_t::patchbay
         [private]
5.80.4.2 std::vector<float> DynComp::dc_afterburn_t::_cf [private]
5.80.4.3 unsigned int DynComp::dc_afterburn_t::_channels [private]
5.80.4.4 float DynComp::dc_afterburn_t::_srate [private]
5.80.4.5 bool DynComp::dc_afterburn_t::commit_pending [private]
5.80.4.6 bool DynComp::dc_afterburn_t::fb_pars_configured [private]
The documentation for this class was generated from the following files:
   · dc afterburn.h

    dc_afterburn.cpp
```

5.81 DynComp::dc_afterburn_vars_t Class Reference

Variables for dc_afterburn_t (p. 280) class.

Inheritance diagram for DynComp::dc_afterburn_vars_t:

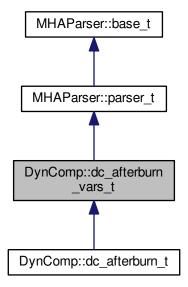

Public Member Functions

dc_afterburn_vars_t ()

Public Attributes

MHAParser::vfloat_t f

MHAParser::vfloat_t drain

MHAParser::vfloat_t conflux

MHAParser::vfloat_t maxgain

MHAParser::vfloat_t mpo

MHAParser::float_t taugain

MHAParser::kw_t commit

MHAParser::bool_t bypass

Additional Inherited Members

5.81.1 Detailed Description

Variables for dc_afterburn_t (p. 280) class.

5.81.2	Constructor & Destructor Documentation
5.81.2.1	DynComp::dc_afterburn_vars_t::dc_afterburn_vars_t ()
5.81.3	Member Data Documentation
5.81.3.1	MHAParser::vfloat_t DynComp::dc_afterburn_vars_t::f
5.81.3.2	MHAParser::vfloat_t DynComp::dc_afterburn_vars_t::drain
5.81.3.3	MHAParser::vfloat_t DynComp::dc_afterburn_vars_t::conflux
5.81.3.4	MHAParser::vfloat_t DynComp::dc_afterburn_vars_t::maxgain
5.81.3.5	MHAParser::vfloat_t DynComp::dc_afterburn_vars_t::mpo
5.81.3.6	MHAParser::float_t DynComp::dc_afterburn_vars_t::taugain
5.81.3.7	MHAParser::kw_t DynComp::dc_afterburn_vars_t::commit
5.81.3.8	MHAParser::bool_t DynComp::dc_afterburn_vars_t::bypass

The documentation for this class was generated from the following files:

- · dc_afterburn.h
- dc_afterburn.cpp
- 5.82 DynComp::gaintable_t Class Reference

Gain table class.

Public Member Functions

gaintable_t (const std::vector< mha_real_t > &LInput, const std::vector< mha_real_t > &FCenter, unsigned int channels)

Constructor.

- ∼gaintable t ()
- void update (std::vector< std::vector< mha_real_t >> > newGain)
 Update gains from an external table.
- mha_real_t get_gain (mha_real_t Lin, mha_real_t Fin, unsigned int channel)
 Read Gain from gain table.
- mha_real_t get_gain (mha_real_t Lin, unsigned int band, unsigned int channel)
 Read Gain from gain table.
- void **get_gain** (const **mha_wave_t** &Lin, **mha_wave_t** &Gain)

Read Gains from gain table.

• unsigned int nbands () const

Return number of frequency bands.

• unsigned int nchannels () const

Return number of audio channels.

- std::vector< std::vector< mha_real_t >> get_iofun () const
 Return current input-output function.
- std::vector< mha_real_t > get_vL () const
- std::vector< mha real t > get vF () const

Private Attributes

- unsigned int num_L
- unsigned int num F
- unsigned int num_channels
- std::vector< mha real t > vL
- std::vector< mha_real_t > vF
- std::vector< mha real t > vFlog
- std::vector< std::vector< mha_real_t >>> data

5.82.1 Detailed Description

Gain table class.

This gain table is intended to efficient table lookup, i.e, interpolation of levels, and optional interpolation of frequencies. Sample input levels and sample frequencies are given in the constructor. The gain entries can be updated with the **update()** (p. 287) member function via a gain prescription rule from an auditory profile.

5.82.2 Constructor & Destructor Documentation

Constructor.

Parameters

LInput	Input level samples, in equivalent LTASS_combined dB SPL.
FCenter	Frequency samples in Hz (e.g., center frequencies of filterbank).
channels	Number of audio channels (typically 2).

```
5.82.2.2 gaintable_t::~gaintable_t()
```

5.82.3 Member Function Documentation

```
5.82.3.1 void gaintable_t::update (  std::vector < std::vector < mha\_real\_t >> \textit{newGain} \ )
```

Update gains from an external table.

Parameters

newGain	New gain table entries.
---------	-------------------------

Dimension change is not allowed. The number of entries are checked.

Read Gain from gain table.

Parameters

Lin	Input level
Fin	Input frequency (no match required)
channel	Audio channel

Read Gain from gain table.

Parameters

Lin Input level	
-----------------	--

Parameters

band	Input frequency band
channel	Audio channel

```
5.82.3.4 void gaintable_t::get_gain (
const mha_wave_t & Lin,
mha_wave_t & Gain )
```

Read Gains from gain table.

Parameters

Lin	Input levels.
Gain	Output gain.

The number of channels in Lin and Gain must match the number of bands times number of channels in the gaintable.

```
5.82.3.5 unsigned int DynComp::gaintable_t::nbands ( ) const [inline]
```

Return number of frequency bands.

```
5.82.3.6 unsigned int DynComp::gaintable t::nchannels ( ) const [inline]
```

Return number of audio channels.

```
5.82.3.7 std::vector< std::vector< mha real t >> gaintable_t::get_iofun( ) const
```

Return current input-output function.

```
5.82.3.8 std::vector<mha_real_t> DynComp::gaintable_t::get_vL( ) const [inline]
```

```
5.82.3.9 std::vector<mha_real_t> DynComp::gaintable_t::get_vF( ) const [inline]
```

5.82.4 Member Data Documentation

```
5.82.4.1 unsigned int DynComp::gaintable_t::num_L [private]
```

5.82.4.2 unsigned int DynComp::gaintable_t::num_F [private]

5.82.4.3 unsigned int DynComp::gaintable_t::num_channels [private]

```
5.82.4.4 std::vector<mha_real_t> DynComp::gaintable_t::vL [private]
5.82.4.5 std::vector<mha_real_t> DynComp::gaintable_t::vF [private]
5.82.4.6 std::vector<mha_real_t> DynComp::gaintable_t::vFlog [private]
5.82.4.7 std::vector<std::vector<std::vector<mha_real_t> > DynComp::gaintable_t::data [private]
```


The documentation for this class was generated from the following files:

- · gaintable.h
- · gaintable.cpp

5.83 example1_t Class Reference

This C++ class implements the simplest example plugin for the step-by-step tutorial.

Inheritance diagram for example1_t:

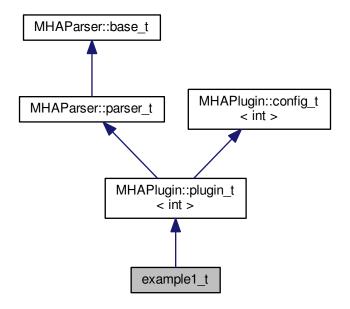

Public Member Functions

• example1_t (algo_comm_t &ac, const std::string &chain_name, const std::string &algo_name)

Do-nothing constructor.

void release (void)

Release may be empty.

void prepare (mhaconfig_t &signal_info)

Plugin preparation.

mha_wave_t * process (mha_wave_t *signal)

Signal processing performed by the plugin.

Additional Inherited Members

5.83.1 Detailed Description

This C++ class implements the simplest example plugin for the step-by-step tutorial.

It inherits from **MHAPlugin::plugin_t** (p. 691) for correct integration in the configuration language interface.

5.83.2 Constructor & Destructor Documentation

Do-nothing constructor.

The constructor has to take these three arguments, but it does not have to use them. However, the base class has to be initialized.

5.83.3 Member Function Documentation

Release may be empty.

Reimplemented from **MHAPlugin::plugin_t**< int > (p. 694).

Plugin preparation.

This plugin checks that the input signal has the waveform domain and contains at least one channel

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number of]
	channels, frames per block, sampling rate.	

Implements MHAPlugin::plugin_t< int > (p. 693).

Signal processing performed by the plugin.

This plugin multiplies the signal in the first audio channel by a factor 0.1.

Parameters

I structure.

Returns

Returns a pointer to the input signal structure, with a the signal modified by this plugin. (In-place processing)


The documentation for this class was generated from the following file:

example1.cpp

5.84 example2_t Class Reference

This C++ class implements the second example plugin for the step-by-step tutorial.

Inheritance diagram for example2_t:

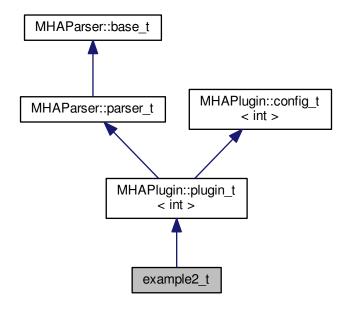

Public Member Functions

example2_t (algo_comm_t &ac, const std::string &chain_name, const std::string &algo_name)

This constructor initializes the configuration language variables and inserts them into the openMHA configuration tree.

void prepare (mhaconfig_t &signal_info)

Plugin preparation.

• void release (void)

Undo restrictions posed in prepare.

mha_wave_t * process (mha_wave_t *signal)

Signal processing performed by the plugin.

Private Attributes

MHAParser::int_t scale_ch

Index of audio channel to scale.

MHAParser::float_t factor

The scaling factor applied to the selected channel.

Additional Inherited Members

5.84.1 Detailed Description

This C++ class implements the second example plugin for the step-by-step tutorial.

It extends the first example by using configuration language variables to influence the processing.

5.84.2 Constructor & Destructor Documentation

This constructor initializes the configuration language variables and inserts them into the openMHA configuration tree.

5.84.3 Member Function Documentation

Plugin preparation.

This plugin checks that the input signal has the waveform domain and contains enough channels.

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number of
	channels, frames per block, sampling rate.

Implements MHAPlugin::plugin_t< int > (p. 693).

Undo restrictions posed in prepare.

Reimplemented from **MHAPlugin::plugin_t**< int > (p. 694).

```
5.84.3.3 mha_wave_t * example2_t::process ( mha_wave_t * signal )
```

Signal processing performed by the plugin.

This plugin multiplies the signal in the selected audio channel by the configured factor.

Parameters

```
signal Pointer to the input signal structure.
```

Returns

Returns a pointer to the input signal structure, with a the signal modified by this plugin. (In-place processing)

5.84.4 Member Data Documentation

```
5.84.4.1 MHAParser::int_t example2_t::scale_ch [private]
```

Index of audio channel to scale.

```
5.84.4.2 MHAParser::float_t example2_t::factor [private]
```

The scaling factor applied to the selected channel.


The documentation for this class was generated from the following file:

example2.cpp

5.85 example3 t Class Reference

A Plugin class using the openMHA Event mechanism.

Inheritance diagram for example3_t:

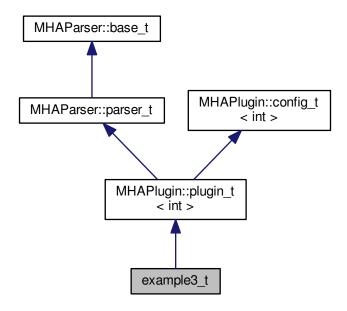

Public Member Functions

• example3_t (algo_comm_t &ac, const std::string &chain_name, const std::string &algo name)

This constructor initializes the configuration language variables and inserts them into the openMHA configuration tree.

void prepare (mhaconfig_t &signal_info)

Plugin preparation.

void release (void)

Bookkeeping only.

mha_wave_t * process (mha_wave_t *signal)

Signal processing performed by the plugin.

Private Member Functions

- void on_scale_ch_writeaccess ()
- void on_scale_ch_valuechanged ()
- void on_scale_ch_readaccess ()
- void on_prereadaccess ()

Private Attributes

MHAParser::int_t scale_ch

Index of audio channel to scale.

MHAParser::float t factor

The scaling factor applied to the selected channel.

MHAParser::int mon t prepared

Keep Track of the prepare/release calls.

MHAEvents::patchbay_t< example3_t > patchbay

The Event connector.

Additional Inherited Members

5.85.1 Detailed Description

A Plugin class using the openMHA Event mechanism.

This is the third example plugin for the step-by-step tutorial.

5.85.2 Constructor & Destructor Documentation

This constructor initializes the configuration language variables and inserts them into the openMHA configuration tree.

It connects the openMHA Events triggered by these configuration variables to the respective callbacks.

5.85.3 Member Function Documentation

Plugin preparation.

This plugin checks that the input signal has the waveform domain and contains enough channels.

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number of
	channels, frames per block, sampling rate.

Implements $MHAPlugin::plugin_t < int > (p. 693)$.

Bookkeeping only.

Reimplemented from **MHAPlugin::plugin_t**< int > (p. 694).

```
5.85.3.7 mha_wave_t * example3_t::process ( mha_wave_t * signal )
```

Signal processing performed by the plugin.

This plugin multiplies the signal in the selected audio channel by the configured factor.

Parameters

```
signal Pointer to the input signal structure.
```

Returns

Returns a pointer to the input signal structure, with a the signal modified by this plugin. (In-place processing)

5.85.4 Member Data Documentation

```
5.85.4.1 MHAParser::int_t example3_t::scale_ch [private]
```

Index of audio channel to scale.

```
5.85.4.2 MHAParser::float_t example3_t::factor [private]
```

The scaling factor applied to the selected channel.

```
5.85.4.3 MHAParser::int_mon_t example3_t::prepared [private]
```

Keep Track of the prepare/release calls.

5.85.4.4 MHAEvents::patchbay_t<example3_t> example3_t::patchbay [private]

The Event connector.


The documentation for this class was generated from the following file:

example3.cpp

5.86 example4_t Class Reference

A Plugin class using the spectral signal.

Inheritance diagram for example4_t:

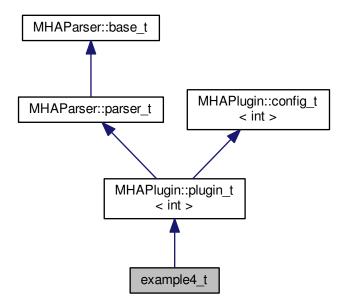

Public Member Functions

example4_t (algo_comm_t &ac, const std::string &chain_name, const std::string &algo_name)

This constructor initializes the configuration language variables and inserts them into the openMHA configuration tree.

void prepare (mhaconfig_t &signal_info)

Plugin preparation.

void release (void)

Bookkeeping only.

mha_spec_t * process (mha_spec_t *signal)

Signal processing performed by the plugin.

Private Member Functions

- void on_scale_ch_writeaccess ()
- void on_scale_ch_valuechanged ()
- void on_scale_ch_readaccess ()
- void on_prereadaccess ()

Private Attributes

MHAParser::int_t scale_ch

Index of audio channel to scale.

MHAParser::float_t factor

The scaling factor applied to the selected channel.

MHAParser::int_mon_t prepared

Keep Track of the prepare/release calls.

MHAEvents::patchbay_t< example4_t > patchbay

The Event connector.

Additional Inherited Members

5.86.1 Detailed Description

A Plugin class using the spectral signal.

This is the fourth example plugin for the step-by-step tutorial.

5.86.2 Constructor & Destructor Documentation

This constructor initializes the configuration language variables and inserts them into the openMHA configuration tree.

It connects the openMHA Events triggered by these configuration variables to the respective callbacks.

5.86.3 Member Function Documentation

Plugin preparation.

This plugin checks that the input signal has the waveform domain and contains enough channels.

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number of	
	channels, frames per block, sampling rate.	

Implements MHAPlugin::plugin t < int > (p. 693).

Bookkeeping only.

Reimplemented from **MHAPlugin::plugin** t < int > (p. 694).

```
5.86.3.7 mha_spec_t * example4_t::process ( mha_spec_t * signal )
```

Signal processing performed by the plugin.

This plugin multiplies the spectral signal in the selected audio channel by the configured factor.

Parameters

signal Pointer to the input signal structure.

Returns

Returns a pointer to the input signal structure, with a the signal modified by this plugin. (In-place processing)

5.86.4 Member Data Documentation

5.86.4.1 MHAParser::int_t example4_t::scale_ch [private]

Index of audio channel to scale.

5.86.4.2 MHAParser::float_t example4_t::factor [private]

The scaling factor applied to the selected channel.

5.86.4.3 MHAParser::int_mon_t example4_t::prepared [private]

Keep Track of the prepare/release calls.

5.86.4.4 MHAEvents::patchbay_t<example4_t> example4_t::patchbay [private]

The Event connector.

The documentation for this class was generated from the following file:

example4.cpp

5.87 example5_t Class Reference

Public Member Functions

- example5_t (unsigned int, unsigned int, mha_real_t)
- mha_spec_t * process (mha_spec_t *)

Private Attributes

- · unsigned int channel
- · mha_real_t scale

5.87.1 Constructor & Destructor Documentation

5.87.2 Member Function Documentation

5.87.3 Member Data Documentation


5.87.3.1 unsigned int example5_t::channel [private]

The documentation for this class was generated from the following file:

· example5.cpp

5.88 example6_t Class Reference

Inheritance diagram for example6_t:

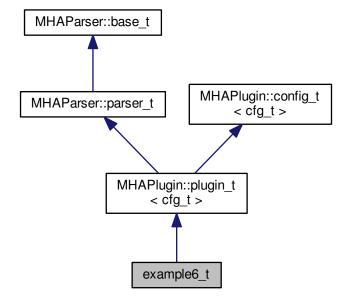

Public Member Functions

```
• example6_t (const algo_comm_t &, const std::string &, const std::string &)
```

- mha_wave_t * process (mha_wave_t *)
- void prepare (mhaconfig_t &)

Private Member Functions

void update_cfg ()

Private Attributes

- MHAParser::int_t channel_no
- · float rmsdb
- MHAEvents::patchbay_t< example6_t > patchbay

Additional Inherited Members

MHAEvents::patchbay_t<example6_t> example6_t::patchbay [private]

The documentation for this class was generated from the following file:

example6.cpp

5.89 expression_t Class Reference

Class for separating a string into a left hand value and a right hand value.

5.89.1 Detailed Description

Class for separating a string into a left hand value and a right hand value.


A list of valid operators can be provided. After construction, the class members Ival, rval and op contain the apropriate contents.

The documentation for this class was generated from the following file:

mha_parser.cpp

5.90 fader_if_t Class Reference

Inheritance diagram for fader if t:

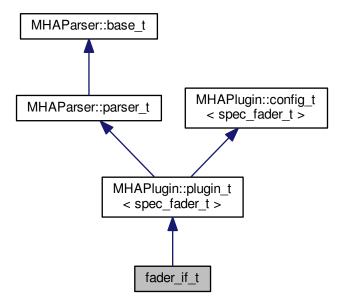

Public Member Functions

- fader_if_t (const algo_comm_t &, const std::string &, const std::string &)
- mha_spec_t * process (mha_spec_t *)
- void prepare (mhaconfig_t &)

Private Member Functions

void update_cfg ()

Private Attributes

```
    MHAEvents::patchbay_t< fader_if_t > patchbay
```

- MHAParser::float_t tau
- MHAParser::vfloat_t newgains
- mha_real_t * actgains

Additional Inherited Members

```
5.90.1 Constructor & Destructor Documentation
```

5.90.2 Member Function Documentation

```
5.90.2.1 mha_spec_t * fader_if_t::process (
mha_spec_t * s )
```

Implements MHAPlugin::plugin_t< spec_fader_t > (p. 693).

5.90.3 Member Data Documentation

```
5.90.3.1 MHAEvents::patchbay_t<fader_if_t> fader_if_t::patchbay [private]
```

5.90.3.2 MHAParser::float_t fader_if_t::tau [private]

5.90.3.3 MHAParser::vfloat_t fader_if_t::newgains [private]


5.90.3.4 mha_real_t* **fader_if_t::actgains** [private]

The documentation for this class was generated from the following file:

fader_spec.cpp

5.91 fader_wave::fader_wave_if_t Class Reference

Inheritance diagram for fader_wave::fader_wave_if_t:

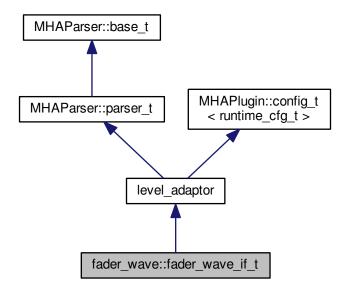

Public Member Functions

- fader_wave_if_t (algo_comm_t, const char *, const char *)
- mha_wave_t * process (mha_wave_t *)
- void prepare (mhaconfig_t &)
- void release ()

Private Member Functions

void set_level ()

Private Attributes

- MHAParser::vfloat_t gain
- MHAParser::float_t ramplen
- MHAEvents::patchbay_t< fader_wave_if_t > patchbay
- bool prepared

Additional Inherited Members


```
5.91.1 Constructor & Destructor Documentation
5.91.1.1 fader_wave::fader_wave_if_t::fader_wave_if_t (
                    algo comm t iac,
                    const char *,
                    const char * )
5.91.2 Member Function Documentation
5.91.2.1 mha_wave_t * fader_wave::fader_wave_if_t::process (
                    mha_wave_t * s )
5.91.2.2 void fader_wave::fader_wave_if_t::prepare (
                    mhaconfig t&tf) [virtual]
Implements MHAPlugin::plugin_t < runtime_cfg_t > (p. 693).
5.91.2.3 void fader_wave::fader_wave_if_t::release (
                    void ) [virtual]
Reimplemented from MHAPlugin::plugin_t< runtime_cfg_t > (p. 694).
5.91.2.4 void fader_wave::fader_wave_if_t::set_level( ) [private]
5.91.3 Member Data Documentation
5.91.3.1 MHAParser::vfloat_t fader_wave::fader_wave_if_t::gain [private]
5.91.3.2 MHAParser::float t fader_wave::fader_wave_if_t::ramplen [private]
5.91.3.3 MHAEvents::patchbay t<fader wave if t> fader_wave::fader_wave_if_t::patchbay
         [private]
5.91.3.4 bool fader_wave::fader_wave_if_t::prepared [private]
```

The documentation for this class was generated from the following file:

fader_wave.cpp

5.92 fader_wave::level_adapt_t Class Reference

Inheritance diagram for fader_wave::level_adapt_t:

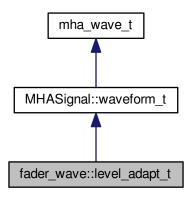

Public Member Functions

- level_adapt_t (mhaconfig_t cf, mha_real_t adapt_len, std::vector< float > l_new_← , std::vector< float > l_old_)
- void update_frame ()
- std::vector< float > get_level () const
- bool can_update () const

Private Attributes

- unsigned int ilen
- unsigned int pos
- MHAWindow::fun_t wnd
- std::vector< float > I new
- std::vector< float > I_old

Additional Inherited Members

5.92.1 Constructor & Destructor Documentation

5.92.2 Member Function Documentation


- 5.92.2.1 void fader_wave::level_adapt_t::update_frame ()
- 5.92.2.2 std::vector<float> fader_wave::level_adapt_t::get_level() const [inline]
- 5.92.2.3 bool fader_wave::level_adapt_t::can_update() const [inline]
- 5.92.3 Member Data Documentation
- 5.92.3.1 unsigned int fader_wave::level_adapt_t::ilen [private]
- **5.92.3.2 unsigned int fader_wave::level_adapt_t::pos** [private]
- **5.92.3.3** MHAWindow::fun_t fader_wave::level_adapt_t::wnd [private]
- **5.92.3.4 std::vector**<**float**> **fader_wave::level_adapt_t::l_new** [private]
- **5.92.3.5** std::vector<float> fader_wave::level_adapt_t::l_old [private]

The documentation for this class was generated from the following file:

fader_wave.cpp

5.93 fftfilterbank::fftfb_interface_t Class Reference

Inheritance diagram for fftfilterbank::fftfb_interface_t:

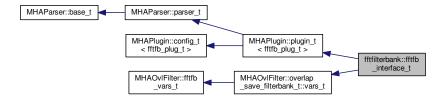

Public Member Functions

- fftfb_interface_t (const algo_comm_t &ac, const std::string &th, const std::string &al)

 Default values are set and MHA configuration variables registered into the parser.
- void prepare (mhaconfig_t &)
 Prepare all variables for processing.
- void release ()
- mha_spec_t * process (mha_spec_t *)
- mha_wave_t * process (mha_wave_t *)

Private Member Functions

void update_cfg ()

Private Attributes

- MHAParser::bool_t return_imag
- MHAEvents::patchbay_t< fftfb_interface_t > patchbay
- MHA AC::int t nchannels
- std::string algo
- bool prepared
- unsigned int nbands

Additional Inherited Members

5.93.1 Constructor & Destructor Documentation

Default values are set and MHA configuration variables registered into the parser.

Parameters

ac	algorithm communication handle
th	chain name
al	algorithm name

5.93.2 Member Function Documentation

Prepare all variables for processing.

In this function, all variables are initialised and the filter shapes for each band are calculated. The filter shapes W(f) are defined as

$$W(f) = W(T(S(f))) = W(x), \quad x = T(S(f)) = T(\hat{f}),$$

W(x) beeing a symmetric window function in the interval [-1,1] and S(f) the transformation from the linear scale to the given frequency scale (see functions in FreqScaleFun). The function $T(\hat{f})$ transforms the frequency range between the center frequencies $[\hat{f}_{k-1},\hat{f}_k]$ and $[\hat{f}_k,\hat{f}_{k+1}]$ into the interval [-1,0] and [0,1], respectively. This function is realised by the function linecale().

Parameters

```
tf | Channel configuration
```


```
Implements MHAPlugin::plugin_t < fftfb_plug_t > (p. 693).
5.93.2.2 void fftfilterbank::fftfb_interface_t::release (
                     void ) [virtual]
Reimplemented from MHAPlugin::plugin_t< fftfb_plug_t > (p. 694).
5.93.2.3 mha_spec_t * fftfilterbank::fftfb_interface_t::process (
                     mha\_spec\_t * s)
5.93.2.4 mha_wave_t * fftfilterbank::fftfb_interface_t::process (
                     mha_wave_t * s )
5.93.2.5 void fftfilterbank::fftfb_interface_t::update_cfg (
                     void ) [private]
5.93.3 Member Data Documentation
         MHAParser::bool tfftfilterbank::fftfb_interface_t::return_imag [private]
5.93.3.1
5.93.3.2 MHAEvents::patchbay t<fftfb interface t> fftfilterbank::fftfb_interface_t::patchbay
         [private]
5.93.3.3 MHA AC::int tftfilterbank::ftftb_interface_t::nchannels [private]
5.93.3.4 std::string fftfilterbank::fftfb_interface_t::algo [private]
5.93.3.5 bool fftfilterbank::fftfb_interface_t::prepared [private]
5.93.3.6
         unsigned int fftfilterbank::fftfb interface t::nbands [private]
```

The documentation for this class was generated from the following file:

fftfilterbank.cpp

5.94 fftfilterbank::fftfb_plug_t Class Reference

Inheritance diagram for fftfilterbank::fftfb_plug_t:

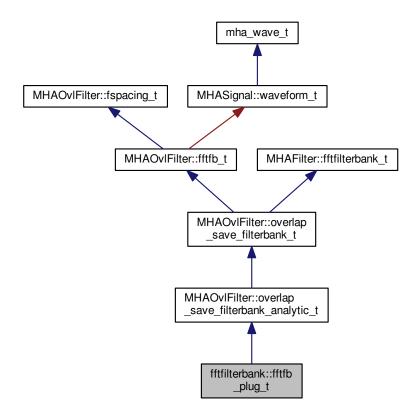

Public Member Functions

- fftfb_plug_t (MHAOvlFilter::overlap_save_filterbank_t::vars_t &, mhaconfig_← t chcfg, algo_comm_t ac, std::string alg, bool return_imag)
- mha_spec_t * process (mha_spec_t *)
- mha_wave_t * process (mha_wave_t *)
- void insert ()

Private Attributes

- MHAOvlFilter::fftfb_ac_info_t fb_acinfo
- MHASignal::spectrum_t s_out
- MHA_AC::waveform_t imag
- bool return_imag_

Additional Inherited Members


```
5.94.1 Constructor & Destructor Documentation
5.94.1.1 fftfilterbank::fftfb_plug_t::fftfb_plug_t (
                      MHAOvIFilter::overlap_save_filterbank_t::vars_t & vars,
                      mhaconfig_t chcfg,
                      algo comm t ac,
                      std::string alg,
                      bool return_imag )
5.94.2 Member Function Documentation
5.94.2.1 mha spec t * fftfilterbank::fftfb_plug_t::process (
                      mha spec t * s)
5.94.2.2 mha_wave_t * fftfilterbank::fftfb_plug_t::process (
                      mha wave t * s)
5.94.2.3 void fftfilterbank::fftfb_plug_t::insert ( )
5.94.3 Member Data Documentation
5.94.3.1 MHAOvlFilter::fftfb_ac_info_t fftfilterbank::fftfb_plug_t::fb_acinfo [private]
5.94.3.2 MHASignal::spectrum_t fftfilterbank::fftfb_plug_t::s_out [private]
5.94.3.3 MHA AC::waveform t fftfilterbank::fftfb plug t::imag [private]
5.94.3.4 bool fftfilterbank::fftfb_plug_t::return_imag_ [private]
```

The documentation for this class was generated from the following file:

fftfilterbank.cpp

5.95 frequency_translator_t Class Reference

Inheritance diagram for frequency_translator_t:

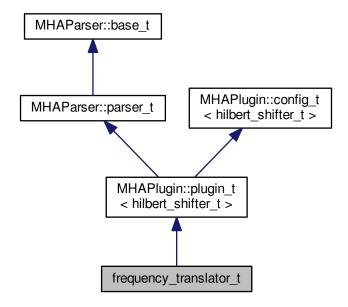

Public Member Functions

- frequency_translator_t (const algo_comm_t &, const std::string &, const std::string &)
- mha_spec_t * process (mha_spec_t *)
- void prepare (mhaconfig_t &)
- void release ()

Private Member Functions

• void update ()

Private Attributes

- MHAEvents::patchbay_t< frequency_translator_t > patchbay
- MHAParser::vfloat_t df
- MHAParser::float_t fmin
- MHAParser::float_t fmax
- MHAParser::int_t irslen
- MHAParser::kw_t phasemode

Additional Inherited Members


```
5.95.1 Constructor & Destructor Documentation
5.95.1.1 frequency translator t::frequency translator t (
                    const algo comm t & iac,
                    const std::string & ith,
                    const std::string & ial )
5.95.2 Member Function Documentation
5.95.2.1 mha_spec_t * frequency_translator_t::process (
                    mha spec t * s)
5.95.2.2 void frequency translator t::prepare (
                    mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin_t< hilbert_shifter_t > (p. 693).
5.95.2.3 void frequency_translator_t::release (
                    void ) [virtual]
Reimplemented from MHAPlugin::plugin_t< hilbert_shifter_t > (p. 694).
5.95.2.4 void frequency_translator_t::update() [private]
5.95.3 Member Data Documentation
5.95.3.1 MHAEvents::patchbay_t<frequency_translator_t> frequency_translator_t::patchbay
         [private]
5.95.3.2 MHAParser::vfloat_t frequency_translator_t::df [private]
5.95.3.3 MHAParser::float_t frequency_translator_t::fmin [private]
5.95.3.4 MHAParser::float_t frequency_translator_t::fmax [private]
5.95.3.5 MHAParser::int_t frequency_translator_t::irslen [private]
5.95.3.6 MHAParser::kw_t frequency_translator_t::phasemode [private]
```

The documentation for this class was generated from the following file:

fshift hilbert.cpp

5.96 fw_t Class Reference

Inheritance diagram for fw_t:

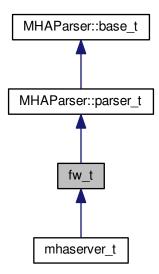

Public Member Functions

- fw_t ()
- ~fw_t ()
- bool exit_request () const

Protected Attributes

- int proc_error
- int io_error

Private Types

Private Member Functions

- void **prepare** () preparation for processing
- void **start** () start of processing
- void stop ()

stop/pause of processing

· void release ()

release of IO device

void quit ()

controlled quit

- void stopped (int, int)
- void started ()
- int process (mha_wave_t *, mha_wave_t **)
- void exec_fw_command ()
- void load proc lib ()
- void load_io_lib ()
- void fw_sleep_cmd ()
- void fw_until_cmd ()
- void get_input_signal_dimension ()
- void async_read ()
- void async_poll_msg ()
- void get_parserstate ()

Static Private Member Functions

- static void stopped (void *h, int proc_err, int io_err)
- static void started (void *h)
- static int process (void *h, mha_wave_t *sln, mha_wave_t **sOut)

Private Attributes

- fw vars t prepare vars
- MHAParser::int mon t nchannels out
- MHAParser::string_t proc_name
- MHAParser::string_t io_name
- MHAParser::bool_t exit_on_stop
- MHAParser::int_t fw_sleep
- MHAParser::string_t fw_until
- MHAParser::kw_t fw_cmd
- MHAParser::string_mon_t parserstate
- MHAParser::string t errorlog
- MHAParser::string_t fatallog
- MHAParser::vstring_t plugins
- · MHAParser::vstring t plugin paths
- MHAParser::bool_t dump_mha
- MHAParser::string_t inst_name

A variable for naming MHA instances.

- MHAKernel::algo comm class t ac
- PluginLoader::mhapluginloader_t * proc_lib
- io_lib_t * io_lib

- mhaconfig_t cfin
- mhaconfig_t cfout
- state_t state
- bool b_exit_request
- MHAParser::string_mon_t proc_error_string
- MHAEvents::patchbay_t< fw_t > patchbay

Additional Inherited Members

```
5.96.1 Member Enumeration Documentation
```

```
5.96.1.1 enum fw_t::state_t [private]
```

Enumerator

fw_unprepared

fw_stopped

fw_starting

fw_running

fw_stopping

fw_exiting

5.96.2 Constructor & Destructor Documentation

```
5.96.2.1 fw_t::fw_t ( )
```

5.96.3 Member Function Documentation

```
5.96.3.1 boolfw_t::exit_request() const [inline]
```

preparation for processing

```
5.96.3.3 void fw_t::start( ) [private]
```

start of processing

```
5.96.3.4 void fw_t::stop() [private]
stop/pause of processing
5.96.3.5 void fw_t::release( ) [private]
release of IO device
5.96.3.6 void fw_t::quit() [private]
controlled quit
5.96.3.7 static void fw_t::stopped (
                    void * h.
                    int proc_err,
                    int io_err ) [inline], [static], [private]
5.96.3.8 static void fw_t::started (
                    void * h ) [inline],[static],[private]
5.96.3.9 static int fw_t::process (
                    void *h.
                    mha wave t * sln,
                    mha_wave_t ** sOut ) [inline], [static], [private]
5.96.3.10 void fw_t::stopped (
                     int proc_err,
                     int io_err ) [private]
5.96.3.11 void fw_t::started() [private]
5.96.3.12 int fw_t::process (
                     mha_wave_t * s_in,
                     mha_wave_t ** s_out ) [private]
5.96.3.13 void fw_t::exec_fw_command( ) [private]
5.96.3.14 void fw_t::load_proc_lib( ) [private]
5.96.3.15 void fw_t::load_io_lib( ) [private]
5.96.3.16 void fw_t::fw_sleep_cmd( ) [private]
5.96.3.17 void fw_t::fw_until_cmd( ) [private]
```

```
5.96.3.18 void fw_t::get_input_signal_dimension( ) [private]
5.96.3.19 void fw_t::async_read( ) [inline], [private]
5.96.3.20 void fw_t::async_poll_msg( ) [private]
5.96.3.21 void fw_t::get_parserstate( ) [private]
5.96.4 Member Data Documentation
5.96.4.1 fw_vars_t fw_t::prepare_vars [private]
5.96.4.2 MHAParser::int_mon_t fw_t::nchannels_out [private]
5.96.4.3 MHAParser::string_t fw_t::proc_name [private]
5.96.4.4 MHAParser::string tfw_t::io_name [private]
5.96.4.5 MHAParser::bool_t fw_t::exit_on_stop [private]
5.96.4.6 MHAParser::int_t fw_t::fw_sleep [private]
5.96.4.7 MHAParser::string_t fw_t::fw_until [private]
5.96.4.8 MHAParser::kw_t fw_t::fw_cmd [private]
5.96.4.9 MHAParser::string_mon_t fw_t::parserstate [private]
5.96.4.10 MHAParser::string_t fw_t::errorlog [private]
5.96.4.11 MHAParser::string_t fw_t::fatallog [private]
5.96.4.12 MHAParser::vstring tfw_t::plugins [private]
5.96.4.13 MHAParser::vstring_t fw_t::plugin_paths [private]
5.96.4.14 MHAParser::bool_t fw_t::dump_mha [private]
5.96.4.15 MHAParser::string_t fw_t::inst_name [private]
A variable for naming MHA instances.
```

```
5.96.4.16 MHAKernel::algo_comm_class_t fw_t::ac [private]
5.96.4.17 PluginLoader::mhapluginloader_t* fw_t::proc_lib [private]
5.96.4.18 io_lib_t* fw_t::io_lib [private]
5.96.4.19 mhaconfig_t fw_t::cfin [private]
5.96.4.20 mhaconfig_t fw_t::cfout [private]
5.96.4.21 state_t fw_t::state [private]
5.96.4.22 bool fw_t::b_exit_request [private]
5.96.4.23 int fw_t::proc_error [protected]
5.96.4.24 int fw_t::io_error [protected]
5.96.4.25 MHAParser::string_mon_t fw_t::proc_error_string [private]
5.96.4.26 MHAEvents::patchbay_t<fw_t> fw_t::patchbay [private]
```

The documentation for this class was generated from the following files:

- · mhafw lib.h
- mhafw_lib.cpp

5.97 fw_vars_t Class Reference

Public Member Functions

- fw_vars_t (MHAParser::parser_t &)
- void lock srate fragsize ()
- void lock_channels ()
- void unlock_srate_fragsize ()
- void unlock channels ()

Public Attributes

- MHAParser::int_t pinchannels
- MHAParser::int_t pfragmentsize
- MHAParser::float_t psrate

5.97.1 Constructor & Destructor Documentation

```
5.97.1.1 fw_vars_t::fw_vars_t (

MHAParser::parser_t & p )
```

5.97.2 Member Function Documentation

```
5.97.2.1 void fw_vars_t::lock_srate_fragsize ( )
```

```
5.97.2.2 void fw_vars_t::lock_channels ( )
```


- 5.97.2.3 void fw_vars_t::unlock_srate_fragsize ()
- 5.97.2.4 void fw_vars_t::unlock_channels ()
- 5.97.3 Member Data Documentation
- 5.97.3.1 MHAParser::int_t fw_vars_t::pinchannels
- 5.97.3.2 MHAParser::int_t fw_vars_t::pfragmentsize
- 5.97.3.3 MHAParser::float_t fw_vars_t::psrate

The documentation for this class was generated from the following files:

- · mhafw_lib.h
- mhafw_lib.cpp

5.98 gain::gain_if_t Class Reference

Inheritance diagram for gain::gain_if_t:

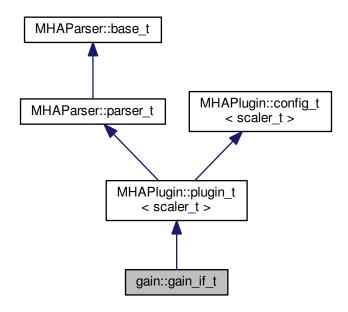

Public Member Functions

- gain_if_t (const algo_comm_t &, const std::string &, const std::string &)
- mha_wave_t * process (mha_wave_t *)
- mha_spec_t * process (mha_spec_t *)
- void prepare (mhaconfig_t &)
- void release ()

Private Member Functions

- void update_gain ()
- void update_bbgain ()
- void update_minmax ()

Private Attributes

- MHAEvents::patchbay_t< gain_if_t > patchbay
- MHAParser::vfloat_t gains
- MHAParser::float_t bbgain
- MHAParser::float_t vmin
- MHAParser::float_t vmax

Additional Inherited Members


```
5.98.1 Constructor & Destructor Documentation
5.98.1.1 gain::gain_if_t::gain_if_t (
                    const algo_comm_t & iac,
                    const std::string &,
                    const std::string & )
5.98.2 Member Function Documentation
5.98.2.1 mha_wave_t * gain::gain_if_t::process (
                    mha_wave_t * s )
5.98.2.2 mha_spec_t * gain::gain_if_t::process (
                    mha_spec_t * s )
5.98.2.3 void gain::gain_if_t::prepare (
                    mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin_t < scaler_t > (p. 693).
5.98.2.4 void gain::gain_if_t::release (
                    void ) [virtual]
Reimplemented from MHAPlugin::plugin t < scaler t > (p. 694).
5.98.2.5 void gain::gain_if_t::update_gain() [private]
5.98.2.6 void gain::gain_if_t::update_bbgain() [private]
5.98.2.7 void gain::gain_if_t::update_minmax( ) [private]
5.98.3 Member Data Documentation
        MHAEvents::patchbay_t<gain_if_t> gain::gain_if_t::patchbay [private]
5.98.3.2 MHAParser::vfloat_t gain::gain_if_t::gains [private]
5.98.3.3 MHAParser::float_t gain::gain_if_t::bbgain [private]
5.98.3.4 MHAParser::float_t gain::gain_if_t::vmin [private]
5.98.3.5 MHAParser::float_t gain::gain_if_t::vmax [private]
```

The documentation for this class was generated from the following file:

gain.cpp

5.99 gain::scaler_t Class Reference

Inheritance diagram for gain::scaler_t:

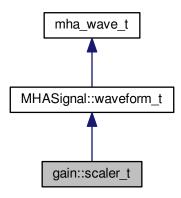

Public Member Functions

• scaler_t (const unsigned int &channels, const MHAParser::vfloat_t &gains)

Additional Inherited Members

5.99.1 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

- · gain.cpp
- 5.100 hanning_ramps_t Class Reference

Public Member Functions

- hanning_ramps_t (unsigned int, unsigned int)
- ∼hanning_ramps_t ()
- void operator() (MHASignal::waveform_t &)

Private Attributes

```
• unsigned int len_a
```

```
• unsigned int len_b
```

```
mha_real_t * ramp_a
```

mha_real_t * ramp_b

```
5.100.1 Constructor & Destructor Documentation
```

5.100.2 Member Function Documentation

```
5.100.2.1 void hanning_ramps_t::operator() (

MHASignal::waveform_t & b )
```

5.100.3 Member Data Documentation

```
5.100.3.1 unsigned int hanning_ramps_t::len_a [private]
```

5.100.3.2 unsigned int hanning_ramps_t::len_b [private]

5.100.3.3 mha_real_t* hanning_ramps_t::ramp_a [private]


5.100.3.4 mha_real_t* **hanning_ramps_t::ramp_b** [private]

The documentation for this class was generated from the following file:

spec2wave.cpp

5.101 hilbert_shifter_t Class Reference

Inheritance diagram for hilbert_shifter_t:

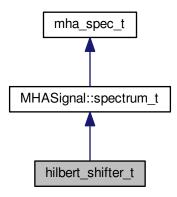

Public Member Functions

- hilbert_shifter_t (unsigned int fftlen, unsigned int channels, mha_real_t srate, unsigned int kmin, unsigned int kmax, std::vector< mha_real_t > dphi, unsigned int frameshift, unsigned int maxirslen, unsigned int phasemode)
- ∼hilbert_shifter_t ()
- void process (mha_spec_t *)

Private Attributes

- MHASignal::spectrum_t fullspec
- MHASignal::spectrum_t analytic
- MHASignal::waveform_t shifted
- MHASignal::spectrum_t mixw_shift
- MHASignal::spectrum_t mixw_ref
- fftw_plan plan_spec2analytic
- · mha fft t mhafft
- MHASignal::waveform_t phi
- MHASignal::waveform_t dphi
- unsigned int kmin
- · unsigned int kmax
- unsigned int frameshift

Additional Inherited Members


```
5.101.1 Constructor & Destructor Documentation
5.101.1.1 hilbert_shifter_t::hilbert_shifter_t (
                      unsigned int fftlen,
                      unsigned int channels,
                      mha real t srate,
                      unsigned int kmin,
                      unsigned int kmax,
                      std::vector< mha_real_t > dphi,
                      unsigned int frameshift,
                      unsigned int maxirslen,
                      unsigned int phasemode )
5.101.1.2 hilbert_shifter_t::~hilbert_shifter_t()
5.101.2 Member Function Documentation
5.101.2.1 void hilbert_shifter_t::process (
                      mha spec t * s)
5.101.3 Member Data Documentation
5.101.3.1 MHASignal::spectrum_t hilbert_shifter_t::fullspec [private]
5.101.3.2 MHASignal::spectrum_t hilbert_shifter_t::analytic [private]
5.101.3.3 MHASignal::waveform_t hilbert_shifter_t::shifted [private]
5.101.3.4 MHASignal::spectrum_t hilbert_shifter_t::mixw_shift [private]
5.101.3.5 MHASignal::spectrum_t hilbert_shifter_t::mixw_ref [private]
5.101.3.6 fftw_plan hilbert_shifter_t::plan_spec2analytic [private]
5.101.3.7 mha fft t hilbert_shifter_t::mhafft [private]
5.101.3.8 MHASignal::waveform_t hilbert_shifter_t::phi [private]
5.101.3.9 MHASignal::waveform t hilbert_shifter_t::dphi [private]
5.101.3.10 unsigned int hilbert_shifter_t::kmin [private]
5.101.3.11 unsigned int hilbert_shifter_t::kmax [private]
5.101.3.12 unsigned int hilbert_shifter_t::frameshift [private]
```

The documentation for this class was generated from the following file:

fshift_hilbert.cpp

5.102 identity_t Class Reference

Inheritance diagram for identity_t:

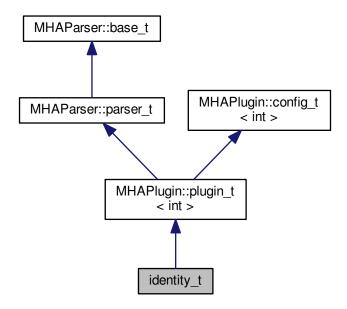

Public Member Functions

- identity_t (const algo_comm_t &, const std::string &, const std::string &)
- mha_wave_t * process (mha_wave_t *)
- mha_spec_t * process (mha_spec_t *)
- void prepare (mhaconfig_t &)
- void release ()

Additional Inherited Members

5.102.1 Constructor & Destructor Documentation

5.102.2 Member Function Documentation


Reimplemented from MHAPlugin::plugin_t< int > (p. 694).

The documentation for this class was generated from the following file:

· identity.cpp

5.103 iirfilter_t Class Reference

Inheritance diagram for iirfilter_t:

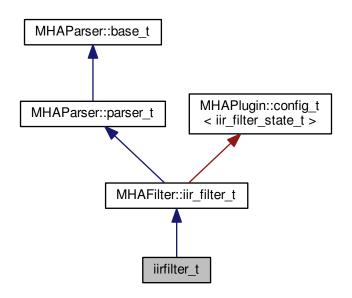

Public Member Functions

```
• iirfilter_t (const algo_comm_t &, const std::string &, const std::string &)
```

- void prepare_ (mhaconfig_t &)
- void release_()
- mha_wave_t * process (mha_wave_t *)

Additional Inherited Members

```
5.103.1 Constructor & Destructor Documentation
```

5.103.2 Member Function Documentation


The documentation for this class was generated from the following file:

· iirfilter.cpp

5.104 io_file_t Class Reference

File IO.

Inheritance diagram for io file t:

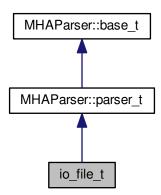

Public Member Functions

- io_file_t (int fragsize, float samplerate, IOProcessEvent_t proc_event, void *proc_←
 handle, IOStartedEvent_t start_event, void *start_handle, IOStoppedEvent_t stop←
 _event, void *stop_handle)
- ~io_file_t ()
- void prepare (int, int)

Allocate buffers, activate FILE client and install internal ports.

- void start ()
- void stop ()
- void release ()

Remove FILE client and deallocate internal ports and buffers.

Private Member Functions

- void stopped (int, int)
- void setlock (bool locked)

lock or unlock all parser variables.

Private Attributes

- int fragsize
- · float samplerate
- int nchannels_in
- int nchannels_file_in
- int nchannels out
- IOProcessEvent_t proc_event
- void * proc handle
- IOStartedEvent_t start_event
- void * start_handle
- IOStoppedEvent t stop event
- void * stop_handle
- MHAParser::string_t filename_input
- MHAParser::string_t filename_output
- MHAParser::kw_t output_sample_format
- MHAParser::int_t startsample
- MHAParser::int_t length
- MHAParser::bool t strict channel match
- MHAParser::bool_t strict_srate_match
- MHASignal::waveform t * s in
- MHASignal::waveform_t * s_file_in
- mha_wave_t * s_out
- bool b prepared
- SNDFILE * sf_in
- SNDFILE * sf out
- · SF INFO sfinf in
- SF_INFO sfinf_out
- sf_count_t total_read

```
Additional Inherited Members
```

```
5.104.2.2 io_file_t::\simio_file_t ( )
```

5.104.3 Member Function Documentation

Allocate buffers, activate FILE client and install internal ports.

```
5.104.3.2 void io_file_t::start ( )

5.104.3.3 void io_file_t::stop ( )

5.104.3.4 void io_file_t::release ( void )
```

Remove FILE client and deallocate internal ports and buffers.

lock or unlock all parser variables.

Used in prepare/release.

Parameters

locked When true, locks. When false, unlocks.

```
5.104.4 Member Data Documentation
5.104.4.1 int io_file_t::fragsize [private]
5.104.4.2 float io_file_t::samplerate [private]
5.104.4.3 int io_file_t::nchannels_in [private]
5.104.4.4 int io_file_t::nchannels_file_in [private]
5.104.4.5 int io_file_t::nchannels_out [private]
5.104.4.6 IOProcessEvent tio_file_t::proc_event [private]
5.104.4.7 void*io_file_t::proc_handle [private]
5.104.4.8 IOStartedEvent_t io_file_t::start_event [private]
5.104.4.9 void* io_file_t::start_handle [private]
5.104.4.10 IOStoppedEvent_t io_file_t::stop_event [private]
5.104.4.11 void* io_file_t::stop_handle [private]
5.104.4.12 MHAParser::string_t io_file_t::filename_input [private]
5.104.4.13 MHAParser::string_t io_file_t::filename_output [private]
5.104.4.14 MHAParser::kw_t io_file_t::output_sample_format [private]
5.104.4.15 MHAParser::int_t io_file_t::startsample [private]
5.104.4.16 MHAParser::int_t io_file_t::length [private]
5.104.4.17 MHAParser::bool_t io_file_t::strict_channel_match [private]
5.104.4.18 MHAParser::bool tio_file_t::strict_srate_match [private]
```

```
5.104.4.19 MHASignal::waveform_t*io_file_t::s_in [private]
5.104.4.20 MHASignal::waveform_t*io_file_t::s_file_in [private]
5.104.4.21 mha_wave_t*io_file_t::s_out [private]
5.104.4.22 bool io_file_t::b_prepared [private]
5.104.4.23 SNDFILE*io_file_t::sf_in [private]
5.104.4.24 SNDFILE*io_file_t::sf_out [private]
5.104.4.25 SF_INFO io_file_t::sfinf_in [private]
5.104.4.26 SF_INFO io_file_t::sfinf_out [private]
5.104.4.27 sf_count_t io_file_t::total_read [private]
```


The documentation for this class was generated from the following file:

MHAIOFile.cpp

5.105 io_lib_t Class Reference

Class for loading MHA sound IO module.

Inheritance diagram for io_lib_t:

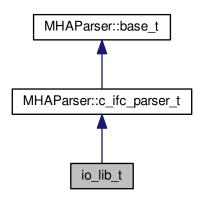

Public Member Functions

io_lib_t (int fragsize, float samplerate, IOProcessEvent_t proc_event, void *proc_←
handle, IOStartedEvent_t start_event, void *start_handle, IOStoppedEvent_t stop_←
event, void *stop_handle, std::string libname)

load and initialize MHA sound io module.

• ~io_lib_t ()

Deinitialize and unload this MHA sound io module.

• void **prepare** (unsigned int inch, unsigned int outch)

Prepare the sound io module.

• void start ()

Tell the sound io module to start sound processing.

- void stop ()
- void release ()
- std::string lib_str_error (int err)

Protected Member Functions

void test_error ()

Protected Attributes

- int lib_err
- · dynamiclib_t lib_handle
- void * lib_data
- IOInit_t IOInit_cb
- IOPrepare_t IOPrepare_cb
- · IOStart t IOStart cb
- IOStop_t IOStop_cb
- IORelease_t IORelease_cb
- IOSetVar_t IOSetVar_cb
- IOStrError_t IOStrError_cb
- IODestroy_t IODestroy_cb

Additional Inherited Members

5.105.1 Detailed Description

Class for loading MHA sound IO module.

5.105.2 Constructor & Destructor Documentation

load and initialize MHA sound io module.

```
5.105.2.2 io_lib_t::~io_lib_t ( )
```

Deinitialize and unload this MHA sound io module.

5.105.3 Member Function Documentation

Prepare the sound io module.

After preparation, the sound io module may start the sound processing at any time (external trigger). When the sound processing is started, the sound io module will call the start_event callback.

Parameters

inch	number of input channels
outch	number of output channels

```
5.105.3.2 void io_lib_t::start ( )
```

Tell the sound io module to start sound processing.

Some io modules need this, for others that wait for external events this method might do nothing.

```
5.105.3.3 void io_lib_t::stop ( )
5.105.3.4 void io_lib_t::release ( )
5.105.3.5 std::string io_lib_t::lib_str_error (
                      int err )
5.105.3.6 void io_lib_t::test_error() [protected]
5.105.4 Member Data Documentation
5.105.4.1 int io_lib_t::lib_err [protected]
5.105.4.2 dynamiclib tio_lib_t::lib_handle [protected]
5.105.4.3 void* io_lib_t::lib_data [protected]
5.105.4.4 IOInit_t io_lib_t::IOInit_cb [protected]
5.105.4.5 IOPrepare_t io_lib_t::IOPrepare_cb [protected]
5.105.4.6 IOStart_t io_lib_t::IOStart_cb [protected]
5.105.4.7 IOStop_t io_lib_t::IOStop_cb [protected]
5.105.4.8 IORelease_t io_lib_t::IORelease_cb [protected]
5.105.4.9 IOSetVar_t io_lib_t::IOSetVar_cb [protected]
5.105.4.10 IOStrError_t io_lib_t::IOStrError_cb [protected]
5.105.4.11 IODestroy_t io_lib_t::IODestroy_cb [protected]
```


The documentation for this class was generated from the following files:

- · mhafw_lib.h
- mhafw_lib.cpp

5.106 io_parser_t Class Reference

Main class for Parser IO.

Inheritance diagram for io_parser_t:

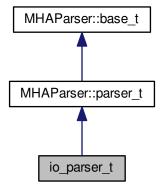

Public Member Functions

- io_parser_t (unsigned int fragsize, IOProcessEvent_t proc_event, void *proc_handle, IOStartedEvent_t start_event, void *start_handle, IOStoppedEvent_t stop_event, void *stop_handle)
- ~io_parser_t ()
- void **prepare** (int, int)

Allocate buffers, activate JACK client and install internal ports.

- void start ()
- void stop ()
- void release ()

Remove JACK client and deallocate internal ports and buffers.

Private Member Functions

- void stopped (int, int)
- void started ()
- void process_frame ()

Private Attributes

```
· unsigned int fragsize
```

- unsigned int nchannels_in
- unsigned int nchannels_out
- IOProcessEvent_t proc_event
- void * proc handle
- IOStartedEvent_t start_event
- void * start_handle
- IOStoppedEvent_t stop_event
- void * stop handle
- MHAParser::mfloat_t input
- MHAParser::mfloat mon t output
- MHASignal::waveform_t * s_in
- mha_wave_t * s_out
- bool b_fw_started
- bool b_stopped
- bool b_prepared
- bool b_starting
- MHAEvents::patchbay_t< io_parser_t > patchbay

Additional Inherited Members

```
5.106.1 Detailed Description
```

Main class for Parser IO.

```
5.106.2 Constructor & Destructor Documentation
```

```
5.106.2.2 io_parser_t::~io_parser_t()
```

5.106.3 Member Function Documentation

Allocate buffers, activate JACK client and install internal ports.

```
5.106.3.2 void io_parser_t::start ( )
5.106.3.3 void io_parser_t::stop ( )
5.106.3.4 void io_parser_t::release (
                     void )
Remove JACK client and deallocate internal ports and buffers.
5.106.3.5 void io parser t::stopped (
                     int proc_err,
                     int io_err ) [private]
5.106.3.6 void io_parser_t::started( ) [private]
5.106.3.7
         void io_parser_t::process_frame( ) [private]
5.106.4 Member Data Documentation
5.106.4.1
         unsigned int io parser t::fragsize [private]
5.106.4.2 unsigned int io_parser_t::nchannels_in [private]
5.106.4.3 unsigned int io_parser_t::nchannels_out [private]
5.106.4.4 IOProcessEvent_tio_parser_t::proc_event [private]
5.106.4.5 void*io_parser_t::proc_handle [private]
5.106.4.6 IOStartedEvent_t io_parser_t::start_event [private]
5.106.4.7 void* io_parser_t::start_handle [private]
5.106.4.8 IOStoppedEvent_tio_parser_t::stop_event [private]
5.106.4.9 void* io_parser_t::stop_handle [private]
5.106.4.10 MHAParser::mfloat_t io_parser_t::input [private]
5.106.4.11 MHAParser::mfloat_mon_t io_parser_t::output [private]
5.106.4.12 MHASignal::waveform_t*io_parser_t::s_in [private]
5.106.4.13 mha_wave_t* io_parser_t::s_out [private]
5.106.4.14 bool io_parser_t::b_fw_started [private]
5.106.4.15 boolio_parser_t::b_stopped [private]
5.106.4.16 bool io parser t::b prepared [private]
5.106.4.17 bool io parser t::b starting [private]
          MHAEvents::patchbay_t<io_parser_t> io_parser_t::patchbay [private]
```

The documentation for this class was generated from the following file:

MHAIOParser.cpp

5.107 io_tcp_fwcb_t Class Reference

TCP sound-io library's interface to the framework callbacks.

Public Member Functions

io_tcp_fwcb_t (IOProcessEvent_t proc_event, void *proc_handle, IOStartedEvent
 _t start_event, void *start_handle, IOStoppedEvent_t stop_event, void *stop_
 handle)

Constructor stores framework handles and initializes error numbers to 0.

virtual ~io_tcp_fwcb_t ()

Do-nothing destructor.

virtual void start ()

Call the framework's start callback.

virtual int process (mha_wave_t *sln, mha_wave_t *&sOut)

Call the frameworks processing callback.

virtual void set_errnos (int proc_err, int io_err)

Save error numbers to use during.

• virtual void stop ()

Call the frameworks stop callback.

Private Attributes

IOProcessEvent_t proc_event

Pointer to signal processing callback function.

IOStartedEvent t start event

Pointer to start notification callback function.

IOStoppedEvent_t stop_event

Pointer to stop notification callback function.

void * proc_handle

Handles belonging to framework.

- void * start_handle
- void * stop handle
- int proc_err

Errors from the processing callback and from the TCP IO itself are stored here before closing Network handles.

int io_err

5.107.1 Detailed Description

TCP sound-io library's interface to the framework callbacks.

5.107.2 Constructor & Destructor Documentation

Constructor stores framework handles and initializes error numbers to 0.

```
5.107.2.2 virtual io_tcp_fwcb_t::~io_tcp_fwcb_t() [inline], [virtual]
```

Do-nothing destructor.

5.107.3 Member Function Documentation

```
5.107.3.1 void io_tcp_fwcb_t::start( ) [virtual]
```

Call the framework's start callback.

Call the frameworks processing callback.

Parameters

sIn	The input sound data just received from TCP.
sOut	A pointer to output sound data. Will point to the output sound data storage when the callback finishes.

Returns

Status, an error number from the signal processing callback. If this is != 0, then the connection should be closed.

Save error numbers to use during.

See also

```
stop (p. 345)
```

Parameters

```
proc_err The error number from the
```

See also

```
process (p. 344) callback.
```

Parameters

io_err	The error number from the io library itself.
--------	--

```
5.107.3.4 void io_tcp_fwcb_t::stop( ) [virtual]
```

Call the frameworks stop callback.

Uses the error numbers set previously with

See also

```
set_errnos (p. 344).
```

5.107.4 Member Data Documentation

```
5.107.4.1 IOProcessEvent_t io_tcp_fwcb_t::proc_event [private]
```

Pointer to signal processing callback function.

```
5.107.4.2 IOStartedEvent_t io_tcp_fwcb_t::start_event [private]
```

Pointer to start notification callback function.

Called when a new TCP connection is established or the user issues the start command while there is a connection.

```
5.107.4.3 IOStoppedEvent_tio_tcp_fwcb_t::stop_event [private]
```

Pointer to stop notification callback function.

Called when the connection is closed.

```
5.107.4.4 void* io_tcp_fwcb_t::proc_handle [private]
```

Handles belonging to framework.

```
5.107.4.5 void * io_tcp_fwcb_t::start_handle [private]
```

Errors from the processing callback and from the TCP IO itself are stored here before closing Network handles.

MHAIOTCP is notified by the server when the connection has been taken down, and calls

See also

stop (p. 345) from that callback. Within **stop** (p. 345), these error numbers are read again and transmitted to the framework.


The documentation for this class was generated from the following file:

MHAIOTCP.cpp

5.108 io_tcp_parser_t Class Reference

The parser interface of the IOTCP library.

Inheritance diagram for io_tcp_parser_t:

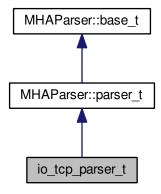

Public Member Functions

virtual const std::string & get_local_address () const

Read parser variable local_address, this is the address of the network interface that should listen for incoming connections.

virtual unsigned short get_local_port () const

Read parser variable local_port, this is the TCP port that should be used for incoming connections.

virtual void set local port (unsigned short port)

Set parser variable local_port.

virtual bool get_server_port_open () const

Return the status of the server port as it is known to the parser.

virtual void set_server_port_open (bool open)

Inform the parser of the current status of the server socket.

virtual bool get_connected () const

Return the parser's knowledge concerning wether there currently exists an established sound data TCP connection or not.

virtual void set_connected (bool connected)

Inform the parser about the existance of a sound data connection.

virtual void set_new_peer (unsigned short port, const std::string &host)

Set parser monitor variables peer_port and peer_address, and calls set_connected(true).

io_tcp_parser_t ()

Constructor initializes parser variables.

virtual ~io_tcp_parser_t ()

Do-nothing destructor.

virtual void debug (const std::string &message)

Private Attributes

MHAParser::string t local address

Lets the user set the local network interface to listen on.

MHAParser::int_t local_port

Lets the user choose the local tcp port to listen on.

MHAParser::int_mon_t server_port_open

Indicates wether the TCP server socket is currently open.

MHAParser::int_mon_t connected

Indicator if there currently is a sound data connection over TCP.

MHAParser::string_mon_t peer_address

Display the ip address of the currently connected sound data client.

MHAParser::int_mon_t peer_port

Display the tcp port used by the current sound data client.

MHAParser::string_t debug_filename

filename to write debugging info to (if non-empty)

FILE * debug file

file handle to write debugging info to

Additional Inherited Members

5.108.1 Detailed Description

The parser interface of the IOTCP library.

5.108.2 Constructor & Destructor Documentation

```
5.108.2.1 io_tcp_parser_t::io_tcp_parser_t()
```

Constructor initializes parser variables.

```
5.108.2.2 virtual io_tcp_parser_t::~io_tcp_parser_t() [inline], [virtual]
```

Do-nothing destructor.

5.108.3 Member Function Documentation

```
5.108.3.1 virtual const std::string& io_tcp_parser_t::get_local_address ( ) const [inline], [virtual]
```

Read parser variable local_address, this is the address of the network interface that should listen for incoming connections.

Returns

A string containing the address of the local interface as it was set by the user.

```
5.108.3.2 unsigned short io_tcp_parser_t::get_local_port( ) const [virtual]
```

Read parser variable local_port, this is the TCP port that should be used for incoming connections.

Returns

The local tcp port to listen on as it was chosen by the user. The port number is between MIN_TCP_PORT and MAX_TCP_PORT.

Set parser variable local port.

This is needed when it was set to 0 before: In this case, the OS chooses a free port for the TCP server socket, and the port that it chose has to be published to the user via the parser interface.

Parameters

port	The TCP port number that is currently used. In the range [MIN_TCP_PORT,
	MAX_TCP_PORT], excluding 0.

Precondition

```
get_local_port() (p. 348) currently returns 0.
```

```
5.108.3.4 boolio_tcp_parser_t::get_server_port_open( )const [virtual]
```

Return the status of the server port as it is known to the parser.

Returns

false after initialization, or the value most recently set via

See also

```
set_server_port_open (p. 349).
```

Inform the parser of the current status of the server socket.

Parameters

open Indicates wether the server socket has just been opened or closed.

Precondition

open may only have the value true if **get_server_port_open()** (p. 349) currently returns false.

Postcondition

See also

get_server_port_open (p. 349) returns the value (p. 52) of open.

```
5.108.3.6 bool io_tcp_parser_t::get_connected( ) const [virtual]
```

Return the parser's knowledge concerning wether there currently exists an established sound data TCP connection or not.

Returns

false after initialization, or the value most recently set via

See also

```
set connected (p. 350).
```

Inform the parser about the existance of a sound data connection.

Parameters

```
connected Indicates wether there currently is a connection or not.
```

Precondition

connected must not have the same value that is currently returned by

See also

```
get_connected (p. 350).
```

Postcondition

See also

```
get_connected (p. 350) returns the value (p. 52) of open.
```

Set parser monitor variables peer_port and peer_address, and calls set_connected(true).

This method should be called when a new connection is established.

Parameters

port	The TCP port number used by the peer.
host	The Internet host where the peer is located.

Precondition

See also

get_connected (p. 350) currently returns false.

Postcondition

See also

get_connected (p. 350) returns true.

5.108.4 Member Data Documentation

5.108.4.1 MHAParser::string_t io_tcp_parser_t::local_address [private]

Lets the user set the local network interface to listen on.

```
5.108.4.2 MHAParser::int_t io_tcp_parser_t::local_port [private]
```

Lets the user choose the local tcp port to listen on.

5.108.4.3 MHAParser::int_mon_t io_tcp_parser_t::server_port_open [private]

Indicates wether the TCP server socket is currently open.

5.108.4.4 MHAParser::int_mon_t io_tcp_parser_t::connected [private]

Indicator if there currently is a sound data connection over TCP.

5.108.4.5 MHAParser::string_mon_t io_tcp_parser_t::peer_address [private]

Display the ip address of the currently connected sound data client.

5.108.4.6 MHAParser::int_mon_t io_tcp_parser_t::peer_port [private]

Display the tcp port used by the current sound data client.

5.108.4.7 MHAParser::string_t io_tcp_parser_t::debug_filename [private]

filename to write debugging info to (if non-empty)

5.108.4.8 FILE* io_tcp_parser_t::debug_file [private]

file handle to write debugging info to

The documentation for this class was generated from the following file:

MHAIOTCP.cpp

5.109 io_tcp_sound_t Class Reference

Sound data handling of io tcp library.

Classes

union float union

This union helps in conversion of floats from host byte order to network byte order and back again.

Public Member Functions

• io_tcp_sound_t (int fragsize, float samplerate)

Initialize sound data handling.

virtual ~io_tcp_sound_t ()

Do-nothing destructor.

• virtual void prepare (int num_inchannels, int num_outchannels)

Called during prepare, sets number of audio channels and allocates sound data storage.

virtual void release ()

Called during release.

virtual int chunkbytes_in () const

Number of bytes that constitute one input sound chunk.

virtual std::string header () const

Create the tcp sound header lines.

virtual mha_wave_t * ntoh (const std::string &data)

Copy data received from tcp into **mha_wave_t** (p. 459) structure.

virtual std::string hton (const mha_wave_t *s_out)

Copy sound data from the output sound structure to a string.

Static Private Member Functions

static void check_sound_data_type ()

Check if mha_real_t is a usable 32-bit floating point type.

Private Attributes

• int fragsize

Number of sound samples in each channel expected and returned from processing callback.

float samplerate

Sampling rate.

• int num_inchannels

Number of input channels.

- int num outchannels
- MHASignal::waveform_t * s_in

Storage for input signal.

5.109.1 Detailed Description

Sound data handling of io tcp library.

5.109.2 Constructor & Destructor Documentation

Initialize sound data handling.

Checks sound data type by calling

See also

```
check_sound_data_type (p. 354).
```

Parameters

fragsize	Number of sound samples in each channel expected and returned from processing callback.
samplerate	Number of samples per second in each channel.

```
5.109.2.2 virtual io_tcp_sound_t::~io_tcp_sound_t( ) [inline], [virtual]
```

Do-nothing destructor.

5.109.3 Member Function Documentation

```
5.109.3.1 void io_tcp_sound_t::check_sound_data_type( ) [static], [private]
```

Check if mha_real_t is a usable 32-bit floating point type.

Exceptions

```
MHA_Error (p. 410) if mha_real_t is not compatible to 32-bit float.
```

Called during prepare, sets number of audio channels and allocates sound data storage.

Parameters

num_inchannels	Number of input audio channels.
num_outchannels	Number of output audio channels.

Called during release.

Deletes sound data storage.

```
5.109.3.4 int io_tcp_sound_t::chunkbytes_in() const [virtual]
```

Number of bytes that constitute one input sound chunk.

Returns

Number of bytes to read from TCP connection before invoking signal processing.

```
5.109.3.5 std::string io_tcp_sound_t::header( ) const [virtual]
```

Create the tcp sound header lines.

Copy data received from tcp into **mha_wave_t** (p. 459) structure.

Doing network-to-host byte order swapping in the process.

Parameters

```
data One chunk (
```

See also

chunkbytes_in (p. 354)) of sound data to process.

Returns

Pointer to the sound data storage.

Copy sound data from the output sound structure to a string.

Doing host-to-network byte order swapping while at it.

Parameters

```
s_out Pointer to the storage of the sound to put out.
```

Returns

The sound data in network byte order.

5.109.4 Member Data Documentation

```
5.109.4.1 int io_tcp_sound_t::fragsize [private]
```

Number of sound samples in each channel expected and returned from processing callback.

```
5.109.4.2 float io_tcp_sound_t::samplerate [private]
```

Sampling rate.

Number of samples per second in each channel.

```
5.109.4.3 int io_tcp_sound_t::num_inchannels [private]
```

Number of input channels.

Number of channels expected from and returned by signal processing callback.

```
5.109.4.4 int io_tcp_sound_t::num_outchannels [private]
```

```
5.109.4.5 MHASignal::waveform_t*io_tcp_sound_t::s_in [private]
```

Storage for input signal.

The documentation for this class was generated from the following file:

MHAIOTCP.cpp

5.110 io_tcp_sound_t::float_union Union Reference

This union helps in conversion of floats from host byte order to network byte order and back again.

Public Attributes

- float f
- unsigned int i
- char **c** [4]

5.110.1 Detailed Description

This union helps in conversion of floats from host byte order to network byte order and back again.

```
5.110.2 Member Data Documentation
```

```
5.110.2.1 float io tcp sound t::float union::f
```

5.110.2.2 unsigned int io_tcp_sound_t::float_union::i

5.110.2.3 char io_tcp_sound_t::float_union::c[4]

The documentation for this union was generated from the following file:

MHAIOTCP.cpp

5.111 io_tcp_t Class Reference

The tcp sound io library.

Public Member Functions

- io_tcp_t (int fragsize, float samplerate, IOProcessEvent_t proc_event, void *proc_←
 handle, IOStartedEvent_t start_event, void *start_handle, IOStoppedEvent_t stop_←
 event, void *stop_handle)
- void **prepare** (int num_inchannels, int num_outchannels)

Allocate server socket and start thread waiting for sound data exchange.

• void start ()

Call frameworks start callback if there is a sound data connection at the moment.

• void stop ()

Close the current connection if there is one.

• void release ()

Close the current connection and close the server socket.

virtual void accept_loop ()

IO thread executes this method.

virtual void connection_loop (MHA_TCP::Connection *c)

IO thread executes this method for each connection.

virtual void parse (const char *cmd, char *retval, unsigned int len)

Parser interface.

virtual ~io_tcp_t ()

Private Attributes

- io_tcp_parser_t parser
- io_tcp_sound_t sound
- · io_tcp_fwcb_t fwcb
- MHA_TCP::Server * server
- MHA_TCP::Thread * thread
- MHA TCP::Async Notify notify start
- MHA_TCP::Async_Notify_stop
- MHA_TCP::Async_Notify_release

5.111.1 Detailed Description

The tcp sound io library.

```
5.111.2 Constructor & Destructor Documentation
```

Allocate server socket and start thread waiting for sound data exchange.

prepare opens the tcp server socket and starts the io thread that listens for audio data on the tcp socket after doing some sanity checks

```
5.111.3.2 void io_tcp_t::start ( )
```

Call frameworks start callback if there is a sound data connection at the moment.

```
5.111.3.3 void io_tcp_t::stop ( )
```

Close the current connection if there is one.

stop IO thread

```
5.111.3.4 void io_tcp_t::release ( void )
```

Close the current connection and close the server socket.

Stop IO thread and close server socket.

```
5.111.3.5 void io_tcp_t::accept_loop( ) [virtual]
```

IO thread executes this method.

IO thread executes this method for each connection.

Parameters

c pointer to connection. connection_loop deletes connection before exiting.

Parser interface.

```
5.111.4 Member Data Documentation
```

```
5.111.4.1 io_tcp_parser_t io_tcp_t::parser [private]
```

```
5.111.4.2 io_tcp_sound_t io_tcp_t::sound [private]
```

```
5.111.4.3 io_tcp_fwcb_t io_tcp_t::fwcb [private]
```

```
5.111.4.4 MHA_TCP::Server* io_tcp_t::server [private]
```

```
5.111.4.5 MHA_TCP::Thread*io_tcp_t::thread [private]
```

```
5.111.4.6 MHA_TCP::Async_Notify io_tcp_t::notify_start [private]
```

5.111.4.7 MHA_TCP::Async_Notify io_tcp_t::notify_stop [private]

5.111.4.8 MHA TCP::Async Notify io_tcp_t::notify_release [private]

The documentation for this class was generated from the following file:

MHAIOTCP.cpp

5.112 latex_doc_t Class Reference

Public Member Functions

- latex_doc_t (const std::string &plugname, const std::string &plugin_macro)
- std::string get_latex_doc ()
- std::string get_main_category ()
- std::vector< std::string > get_categories ()

Private Member Functions

- std::string strdom (mha domain t d)
- std::string get_ac (MHAKernel::algo_comm_class_t &ac, std::string txt)
- std::string parsername (std::string s)
- std::string get parser var (MHAParser::base t *p, std::string name)
- std::string **get_parser_tab** (**MHAParser::base_t** *p, std::string prefix)

Private Attributes

- std::string plugname
- std::string latex_plugname
- · MHAKernel::algo comm class tac
- PluginLoader::mhapluginloader_t loader
- std::string plugin_macro

```
5.112.1 Constructor & Destructor Documentation
5.112.1.1 | latex_doc_t::latex_doc_t (
                       const std::string & plugname,
                       const std::string & plugin_macro )
5.112.2 Member Function Documentation
5.112.2.1 std::string latex_doc_t::get_latex_doc()
5.112.2.2 std::string latex_doc_t::get_main_category ( )
5.112.2.3 std::vector< std::string > latex_doc_t::get_categories ( )
5.112.2.4 std::string latex doc t::strdom (
                       mha_domain_t d ) [private]
5.112.2.5 std::string latex_doc_t::get_ac (
                       MHAKernel::algo_comm_class_t & ac,
                       std::string txt ) [private]
5.112.2.6 std::string latex doc t::parsername (
                       std::string s ) [private]
5.112.2.7 std::string latex_doc_t::get_parser_var (
                       MHAParser::base t * p,
                       std::string name ) [private]
```


The documentation for this class was generated from the following file:

5.112.3.5 std::string latex_doc_t::plugin_macro [private]

· generatemhaplugindoc.cpp

5.113 lpc Class Reference

Inheritance diagram for lpc:

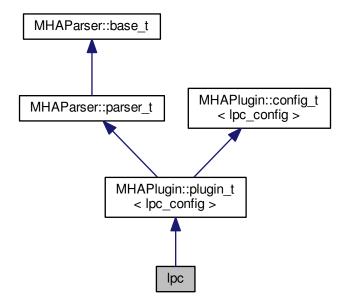

Public Member Functions

- **lpc** (**algo_comm_t** &ac, const std::string &chain_name, const std::string &algo_name)

 **Constructs our plugin.
- ~lpc ()
- mha_wave_t * process (mha_wave_t *)

Checks for the most recent configuration and defers processing to it.

void prepare (mhaconfig_t &)

Plugin preparation.

• void release (void)

Private Member Functions

void update_cfg ()

Private Attributes

- std::string algo name
- MHAParser::int t lpc order
- MHAParser::int_t lpc_buffer_size
- MHAParser::bool t shift
- MHAParser::int_t comp_each_iter
- MHAParser::bool t norm
- MHAEvents::patchbay_t< lpc > patchbay

Additional Inherited Members

```
5.113.1 Constructor & Destructor Documentation
```

```
5.113.1.1 lpc::lpc (

algo_comm_t & ac,

const std::string & chain_name,

const std::string & algo name )
```

Constructs our plugin.

```
5.113.1.2 lpc::\simlpc ( )
```

5.113.2 Member Function Documentation

```
5.113.2.1 mha_wave_t * lpc::process ( mha_wave_t * signal )
```

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number of
	channels, frames per block, sampling rate.


```
Implements MHAPlugin::plugin_t< lpc_config > (p. 693).
5.113.2.3 void lpc::release (
                    void ) [inline],[virtual]
Reimplemented from MHAPlugin::plugin_t < lpc_config > (p. 694).
5.113.2.4 void lpc::update_cfg( ) [private]
5.113.3 Member Data Documentation
5.113.3.1 std::string lpc::algo_name [private]
5.113.3.2 MHAParser::int_t lpc::lpc_order [private]
5.113.3.3 MHAParser::int_t lpc::lpc_buffer_size [private]
5.113.3.4 MHAParser::bool tlpc::shift [private]
5.113.3.5 MHAParser::int_t lpc::comp_each_iter [private]
5.113.3.6 MHAParser::bool_t lpc::norm [private]
5.113.3.7 MHAEvents::patchbay_t<lpc> lpc::patchbay [private]
```

The documentation for this class was generated from the following files:

- lpc.h
- lpc.cpp

5.114 lpc_bl_predictor Class Reference

Inheritance diagram for lpc_bl_predictor:

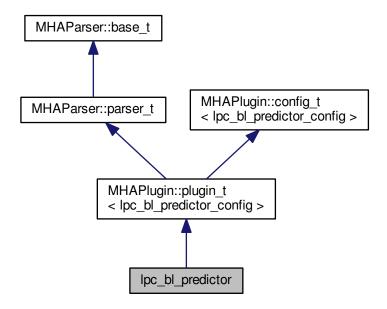

Public Member Functions

• **lpc_bl_predictor** (**algo_comm_t** &ac, const std::string &chain_name, const std::string &algo_name)

Constructs our plugin.

- ∼lpc_bl_predictor ()
- mha_wave_t * process (mha_wave_t *)

Checks for the most recent configuration and defers processing to it.

void prepare (mhaconfig_t &)

Plugin preparation.

void release (void)

Public Attributes

- MHAParser::int_t lpc_order
- MHAParser::string_t name_kappa
- MHAParser::string_t name_lpc_f
- MHAParser::string_t name_lpc_b
- MHAParser::string_t name_f
- MHAParser::string_t name_b

Private Member Functions

void update_cfg ()

Private Attributes

MHAEvents::patchbay_t< lpc_bl_predictor > patchbay

Additional Inherited Members

```
5.114.1 Constructor & Destructor Documentation
```

Constructs our plugin.

```
5.114.1.2 lpc_bl_predictor::~lpc_bl_predictor()
```

5.114.2 Member Function Documentation

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number of
	channels, frames per block, sampling rate.

Implements MHAPlugin::plugin_t< lpc_bl_predictor_config > (p. 693).

The documentation for this class was generated from the following files:

5.114.3.7 MHAEvents::patchbay_t<lpc_bl_predictor> lpc_bl_predictor::patchbay

- lpc_bl_predictor.h
- lpc bl predictor.cpp

[private]

5.115 lpc_bl_predictor_config Class Reference

Public Member Functions

- lpc_bl_predictor_config (algo_comm_t &iac, const mhaconfig_t in_cfg, lpc_bl_← predictor *_lpc)
- ~lpc bl predictor config ()
- mha_wave_t * process (mha_wave_t *)

Private Attributes

```
· algo_comm_t ac

    MHA_AC::waveform_t f_est

    MHA_AC::waveform_t b_est

    MHASignal::waveform_t forward

    MHASignal::waveform_t backward

   • int lpc order
   std::string name_km
   std::string name_f
   std::string name_b
   mha_wave_t km
   mha_wave_t s_f

    mha wave ts b

5.115.1 Constructor & Destructor Documentation
5.115.1.1 lpc_bl_predictor_config::lpc_bl_predictor_config (
                     algo comm t & iac,
                     const mhaconfig_t in_cfg,
                     lpc_bl_predictor * _lpc )
5.115.1.2 lpc_bl_predictor_config::~lpc_bl_predictor_config( )
5.115.2 Member Function Documentation
5.115.2.1 mha wave t * lpc_bl_predictor_config::process (
                     mha wave t * wave )
5.115.3 Member Data Documentation
5.115.3.1 algo_comm_t lpc_bl_predictor_config::ac [private]
5.115.3.2 MHA_AC::waveform_t lpc_bl_predictor_config::f_est [private]
5.115.3.3 MHA_AC::waveform_t lpc_bl_predictor_config::b_est [private]
5.115.3.4 MHASignal::waveform t lpc_bl_predictor_config::forward [private]
5.115.3.5 MHASignal::waveform t lpc_bl_predictor_config::backward [private]
5.115.3.6 int lpc_bl_predictor_config::lpc_order [private]
```

5.115.3.7 std::string lpc_bl_predictor_config::name_km [private]


```
5.115.3.8 std::string lpc_bl_predictor_config::name_f [private]
5.115.3.9 std::string lpc_bl_predictor_config::name_b [private]
5.115.3.10 mha_wave_t lpc_bl_predictor_config::km [private]
5.115.3.11 mha_wave_t lpc_bl_predictor_config::s_f [private]
5.115.3.12 mha_wave_t lpc_bl_predictor_config::s_b [private]
```

The documentation for this class was generated from the following files:

- lpc_bl_predictor.h
- lpc_bl_predictor.cpp

5.116 lpc_burglattice Class Reference

Inheritance diagram for lpc_burglattice:

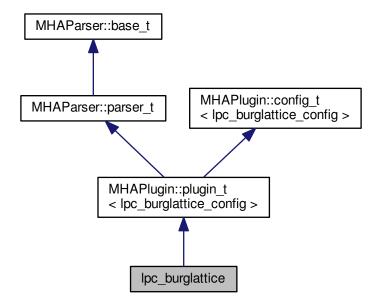

Public Member Functions

• **lpc_burglattice** (**algo_comm_t** &ac, const std::string &chain_name, const std::string &algo_name)

Constructs our plugin.

- ∼lpc_burglattice ()
- mha_wave_t * process (mha_wave_t *)

Checks for the most recent configuration and defers processing to it.

void prepare (mhaconfig_t &)

Plugin preparation.

void release (void)

Public Attributes

```
    MHAParser::int_t lpc_order
```

MHAParser::string_t name_kappa

MHAParser::string_t name_f

MHAParser::string_t name_b

MHAParser::float_t lambda

Private Member Functions

void update_cfg ()

Private Attributes

MHAEvents::patchbay_t< lpc_burglattice > patchbay

Additional Inherited Members

5.116.1 Constructor & Destructor Documentation

Constructs our plugin.

```
5.116.1.2 lpc_burglattice::~lpc_burglattice ( )
5.116.2 Member Function Documentation
5.116.2.1 mha_wave_t * lpc_burglattice::process ( mha_wave_t * signal )
```

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number of
	channels, frames per block, sampling rate.

Implements MHAPlugin::plugin_t< lpc_burglattice_config > (p. 693).

Reimplemented from MHAPlugin::plugin_t< lpc_burglattice_config > (p. 694).

```
5.116.2.4 void lpc_burglattice::update_cfg( ) [private]
```

5.116.3 Member Data Documentation

```
5.116.3.1 MHAParser::int_t lpc_burglattice::lpc_order
```

5.116.3.2 MHAParser::string_t lpc_burglattice::name_kappa

5.116.3.3 MHAParser::string_t lpc_burglattice::name_f

5.116.3.4 MHAParser::string t lpc_burglattice::name_b

5.116.3.5 MHAParser::float_t lpc_burglattice::lambda

5.116.3.6 MHAEvents::patchbay t<lpc burglattice>lpc_burglattice::patchbay [private]

The documentation for this class was generated from the following files:

- · lpc burg-lattice.h
- lpc burg-lattice.cpp

5.117 lpc_burglattice_config Class Reference

Public Member Functions

- lpc_burglattice_config (algo_comm_t &iac, const mhaconfig_t in_cfg, lpc_← burglattice *_lpc)
- ~lpc burglattice config ()
- mha_wave_t * process (mha_wave_t *)

Private Attributes

- algo_comm_t ac
- MHASignal::waveform_t forward
- MHASignal::waveform_t backward
- MHASignal::waveform_t kappa
- MHA_AC::waveform_t kappa_block
- MHASignal::waveform_t dm
- MHASignal::waveform_t nm
- mha_real_t lambda
- int lpc order
- std::string name_f
- std::string name_b
- mha_wave_t s_f
- · mha wave ts b

5.117.1 Constructor & Destructor Documentation

- 5.117.1.2 lpc_burglattice_config::~lpc_burglattice_config ()
- 5.117.2 Member Function Documentation
- 5.117.3 Member Data Documentation
- **5.117.3.1** algo_comm_t lpc_burglattice_config::ac [private]

```
5.117.3.2 MHASignal::waveform_t lpc_burglattice_config::forward [private]
5.117.3.3
         MHASignal::waveform_t lpc_burglattice_config::backward [private]
5.117.3.4
         MHASignal::waveform t lpc_burglattice_config::kappa [private]
5.117.3.5
         MHA_AC::waveform_t lpc_burglattice_config::kappa_block [private]
5.117.3.6
         MHASignal::waveform_t lpc_burglattice_config::dm [private]
5.117.3.7
         MHASignal::waveform t lpc burglattice config::nm [private]
5.117.3.8 mha real t lpc_burglattice_config::lambda [private]
5.117.3.9
         int lpc_burglattice_config::lpc_order [private]
5.117.3.10 std::string lpc_burglattice_config::name_f [private]
5.117.3.11 std::string lpc_burglattice_config::name_b [private]
5.117.3.12 mha_wave_t lpc_burglattice_config::s_f [private]
5.117.3.13 mha wave tlpc_burglattice_config::s_b [private]
```

The documentation for this class was generated from the following files:

- lpc_burg-lattice.h
- lpc_burg-lattice.cpp

5.118 lpc_config Class Reference

Public Member Functions

- lpc_config (algo_comm_t &ac, const mhaconfig_t in_cfg, std::string &algo_name, unsigned int _order, unsigned int _lpc_buffer_size, bool _shift, unsigned int _comp_each _iter, bool _norm)
- ∼lpc_config ()
- mha_wave_t * process (mha_wave_t *)
- void insert ()

Private Attributes

- bool norm
- · bool shift
- unsigned int comp_each_iter
- · unsigned int order
- unsigned int lpc_buffer_size
- · unsigned int N
- unsigned int comp_iter
- mha_wave_t sample
- std::vector< mha_real_t > R
- std::vector< mha_real_t > A
- MHASignal::ringbuffer_t inwave
- MHA_AC::waveform_t lpc_out
- MHA_AC::waveform_t corr_out

5.118.1 Constructor & Destructor Documentation

- 5.118.1.2 lpc_config::~lpc_config()
- 5.118.2 Member Function Documentation

```
5.118.2.1 mha_wave_t * lpc_config::process ( mha_wave_t * wave )
```

- 5.118.2.2 void lpc_config::insert ()
- 5.118.3 Member Data Documentation
- **5.118.3.1 boollpc_config::norm** [private]
- 5.118.3.2 bool lpc_config::shift [private]
- **5.118.3.3 unsigned int lpc_config::comp_each_iter** [private]

```
5.118.3.4 unsigned int lpc_config::order [private]
5.118.3.5 unsigned int lpc_config::lpc_buffer_size [private]
5.118.3.6 unsigned int lpc_config::N [private]
5.118.3.7 unsigned int lpc_config::comp_iter [private]
5.118.3.8 mha_wave_t lpc_config::sample [private]
5.118.3.9 std::vector<mha_real_t>lpc_config::R [private]
5.118.3.10 std::vector<mha_real_t>lpc_config::A [private]
5.118.3.11 MHASignal::ringbuffer_t lpc_config::inwave [private]
5.118.3.12 MHA_AC::waveform_t lpc_config::lpc_out [private]
5.118.3.13 MHA_AC::waveform_t lpc_config::corr_out [private]
```

The documentation for this class was generated from the following files:

- · lpc.h
- · lpc.cpp

5.119 matrixmixer::cfg_t Class Reference

Public Member Functions

- cfg_t (std::vector< std::vector< float > > imixer, unsigned int ci, unsigned int co, unsigned int fragsize, unsigned int nfft)
- mha_wave_t * process (mha_wave_t *)
- mha_spec_t * process (mha_spec_t *)

Private Attributes

- MHASignal::waveform_t m
- MHASignal::waveform_t wout
- MHASignal::spectrum_t sout

5.119.1 Constructor & Destructor Documentation

```
5.119.1.1 cfg_t::cfg_t (  std::vector < std::vector < float > > imixer, \\ unsigned int \textit{ci,} \\ unsigned int \textit{co,} \\ unsigned int \textit{fragsize,} \\ unsigned int \textit{nfft} \ )
```

5.119.2 Member Function Documentation

```
5.119.2.1 mha_wave_t * cfg_t::process (
mha_wave_t * s )
```

5.119.3 Member Data Documentation

```
5.119.3.1 MHASignal::waveform t matrixmixer::cfg_t::m [private]
```

5.119.3.2 MHASignal::waveform_t matrixmixer::cfg_t::wout [private]


5.119.3.3 MHASignal::spectrum_t matrixmixer::cfg_t::sout [private]

The documentation for this class was generated from the following file:

matrixmixer.cpp

5.120 matrixmixer::matmix_t Class Reference

Inheritance diagram for matrixmixer::matmix_t:

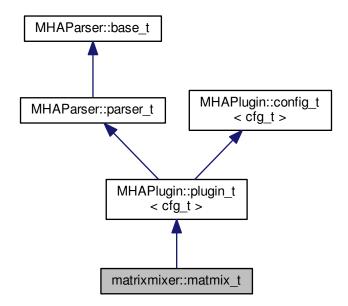

Public Member Functions

- matmix_t (const algo_comm_t &, const std::string &, const std::string &)
- void prepare (mhaconfig_t &)
- mha_wave_t * process (mha_wave_t *)
- mha_spec_t * process (mha_spec_t *)

Private Member Functions

• void update_m ()

Private Attributes

- MHAEvents::patchbay_t< matmix_t > patchbay
- MHAParser::mfloat_t mixer
- unsigned int ci
- · unsigned int co

```
Additional Inherited Members
```


```
5.120.1 Constructor & Destructor Documentation
5.120.1.1 matrixmixer::matmix t::matmix t(
                     const algo_comm_t & iac,
                      const std::string & ,
                      const std::string & )
5.120.2 Member Function Documentation
5.120.2.1 void matrixmixer::matmix_t::prepare (
                      mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin t < cfg t > (p. 693).
5.120.2.2 mha_wave_t * matrixmixer::matmix_t::process (
                      mha_wave_t * s
5.120.2.3 mha_spec_t * matrixmixer::matmix_t::process (
                      mha\_spec\_t * s)
5.120.2.4 void matrixmixer::matmix t::update m (
                     void ) [private]
5.120.3 Member Data Documentation
5.120.3.1 MHAEvents::patchbay_t<matmix_t> matrixmixer::matmix_t::patchbay [private]
5.120.3.2 MHAParser::mfloat_t matrixmixer::matmix_t::mixer [private]
5.120.3.3 unsigned int matrixmixer::matmix_t::ci [private]
5.120.3.4 unsigned int matrixmixer::matmix_t::co [private]
```

The documentation for this class was generated from the following file:

matrixmixer.cpp

5.121 MHA_AC::ac2matrix_helper_t Class Reference

Inheritance diagram for MHA_AC::ac2matrix_helper_t:

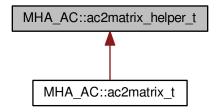

Public Member Functions

- ac2matrix_helper_t (algo_comm_t, const std::string &)
- void getvar ()

Public Attributes

- · algo_comm_t ac
- std::string name
- std::string username
- MHASignal::uint_vector_t size
- bool is_complex

Protected Attributes

- comm_var_t acvar
- 5.121.1 Constructor & Destructor Documentation
- 5.121.2 Member Function Documentation
- 5.121.2.1 void MHA_AC::ac2matrix_helper_t::getvar ()


- 5.121.3 Member Data Documentation
- 5.121.3.1 algo_comm_t MHA_AC::ac2matrix_helper_t::ac
- 5.121.3.2 std::string MHA_AC::ac2matrix_helper_t::name
- 5.121.3.3 std::string MHA_AC::ac2matrix_helper_t::username
- 5.121.3.4 MHASignal::uint_vector_t MHA_AC::ac2matrix_helper_t::size
- 5.121.3.5 bool MHA_AC::ac2matrix_helper_t::is_complex
- **5.121.3.6 comm_var_t** MHA_AC::ac2matrix_helper_t::acvar [protected]

The documentation for this class was generated from the following files:

- mha_algo_comm.h
- mha_algo_comm.cpp
- 5.122 MHA_AC::ac2matrix_t Class Reference

Copy AC variable to a matrix.

Inheritance diagram for MHA_AC::ac2matrix_t:

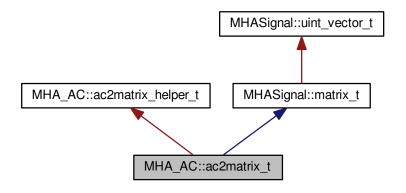

Public Member Functions

ac2matrix_t (algo_comm_t ac, const std::string &name)

Constructor.

• void update ()

Update contents of the matrix from the AC space.

• const std::string & getname () const

Return name of AC variable/matrix.

const std::string & getusername () const

Return user specified name of AC variable/matrix.

• void insert (algo_comm_t ac)

Insert matrix into an AC space (other than source AC space)

Additional Inherited Members

5.122.1 Detailed Description

Copy AC variable to a matrix.

This class constructs a matrix of same size as an AC variable and can copy the AC variable to itself. The **update()** (p. 380) function is real-time safe.

5.122.2 Constructor & Destructor Documentation

Constructor.

Parameters

ac	AC handle
name	Name of AC variable to be copied

5.122.3 Member Function Documentation

```
5.122.3.1 void MHA_AC::ac2matrix_t::update ( )
```

Update contents of the matrix from the AC space.

This function is real-time safe. The copy operation performance is of the order of the number of elements in the matrix.

5.122.3.2 const std::string& MHA_AC::ac2matrix_t::getname() const [inline]

Return name of AC variable/matrix.

5.122.3.3 const std::string& MHA_AC::ac2matrix_t::getusername() const [inline]

Return user specified name of AC variable/matrix.

```
5.122.3.4 void MHA_AC::ac2matrix_t::insert ( algo_comm_t ac )
```

Insert matrix into an AC space (other than source AC space)

Parameters

ac | AC space handle to insert data

Note

The AC variable data buffer points to the data of the matrix. Modifications of the AC variable directly modify the data of the matrix; after deletion of the matrix, the data buffer is invalid.

The documentation for this class was generated from the following files:

- mha_algo_comm.h
- mha_algo_comm.cpp

5.123 MHA_AC::acspace2matrix_t Class Reference

Copy all or a subset of all numeric AC variables into an array of matrixes.

Public Member Functions

- acspace2matrix_t (algo_comm_t ac, const std::vector< std::string > &names)
 Constructor.
- acspace2matrix_t (const MHA_AC::acspace2matrix_t &src)

Constructor with initialization from an instance.

- ∼acspace2matrix t ()
- MHA_AC::acspace2matrix_t & operator= (const MHA_AC::acspace2matrix_t &src)

 Copy all contents (deep copy).
- MHA_AC::ac2matrix_t & operator[] (unsigned int k)
 Access operator.

• const MHA_AC::ac2matrix_t & operator[] (unsigned int k) const

Constant access operator.

• void update ()

Update function.

• unsigned int size () const

Number of matrixes in AC space.

• unsigned int frame () const

Actual frame number.

void insert (algo_comm_t ac)

Insert AC space copy into an AC space (other than source AC space)

Private Attributes

- unsigned int len
- MHA_AC::ac2matrix_t ** data
- · unsigned int frameno

5.123.1 Detailed Description

Copy all or a subset of all numeric AC variables into an array of matrixes.

5.123.2 Constructor & Destructor Documentation

Constructor.

Scan all given AC variables and allocate corresponding matrixes.

Parameters

ac	AC handle.
names	Names of AC variables, or empty for all.

Constructor with initialization from an instance.

Parameters

src Instance to be copied.

5.123.2.3 MHA_AC::acspace2matrix_t::~acspace2matrix_t ()

5.123.3 Member Function Documentation

Copy all contents (deep copy).

Parameters

src Array of matrixes to be copied.

Access operator.

Parameters

k index into array; should not exceed **size()** (p. 384)-1.

Return values

Reference to matrix.

Constant access operator.

Parameters

k index into array; should not exceed **size()** (p. 384)-1.

Return values

Constant reference to matrix.

```
5.123.3.4 void MHA_AC::acspace2matrix_t::update() [inline]
```

Update function.

This function updates all matrixes from their corresponding AC variables. It can be called from the MHA Framework prepare function or in the processing callback.

```
5.123.3.5 unsigned int MHA_AC::acspace2matrix_t::size( ) const [inline]
```

Number of matrixes in AC space.

```
5.123.3.6 unsigned int MHA_AC::acspace2matrix_t::frame( ) const [inline]
```

Actual frame number.

```
5.123.3.7 void MHA_AC::acspace2matrix_t::insert ( algo_comm_t ac )
```

Insert AC space copy into an AC space (other than source AC space)

Parameters

```
ac AC space handle to insert data
```

```
5.123.4 Member Data Documentation
```

```
5.123.4.1 unsigned int MHA_AC::acspace2matrix_t::len [private]
```

```
5.123.4.2 MHA_AC::ac2matrix_t** MHA_AC::acspace2matrix_t::data [private]
```

```
5.123.4.3 unsigned int MHA_AC::acspace2matrix_t::frameno [private]
```

The documentation for this class was generated from the following files:

- mha_algo_comm.h
- mha_algo_comm.cpp

5.124 MHA_AC::double_t Class Reference

Insert a double precision floating point variable into the AC space.

Public Member Functions

```
    double_t (algo_comm_t, std::string, double=0)
    ~double t ()
```

Public Attributes

· double data

Floating point value variable.

Private Attributes

algo_comm_t ac

5.124.1 Detailed Description

Insert a double precision floating point variable into the AC space.

The variable is automatically removed on destruction.

```
5.124.2 Constructor & Destructor Documentation
```

```
5.124.2.2 MHA_AC::double_t::\simdouble_t()
```

5.124.3 Member Data Documentation

5.124.3.1 double MHA_AC::double_t::data

Floating point value variable.

```
5.124.3.2 algo_comm_t MHA_AC::double_t::ac [private]
```

The documentation for this class was generated from the following files:

- mha_algo_comm.h
- mha_algo_comm.cpp

5.125 MHA_AC::float_t Class Reference

Insert a float point variable into the AC space.

Public Member Functions

```
• float_t (algo_comm_t, std::string, float=0)

Constructor.
```

• ~float_t ()

Public Attributes

float data

Floating point value variable.

Private Attributes

algo_comm_t ac

5.125.1 Detailed Description

Insert a float point variable into the AC space.

The variable is automatically removed on destruction.

```
5.125.2 Constructor & Destructor Documentation
```

Constructor.

```
5.125.2.2 MHA_AC::float_t::~float_t ( )
```

5.125.3 Member Data Documentation

5.125.3.1 float MHA_AC::float_t::data

Floating point value variable.

```
5.125.3.2 algo_comm_t MHA_AC::float_t::ac [private]
```

The documentation for this class was generated from the following files:

- mha_algo_comm.h
- mha_algo_comm.cpp

5.126 MHA_AC::int_t Class Reference

Insert a integer variable into the AC space.

Public Member Functions

```
int_t (algo_comm_t, std::string, int=0)∼int_t ()
```

Public Attributes

• int data

Integer value variable.

Private Attributes

· algo_comm_t ac

5.126.1 Detailed Description

Insert a integer variable into the AC space.

The variable is automatically removed on destruction.

5.126.2 Constructor & Destructor Documentation

```
5.126.2.1 MHA_AC::int_t::int_t ( algo_comm_t iac, std::string n, int v = 0 )
```

```
5.126.2.2 MHA_AC::int_t::~int_t ( )
```

5.126.3 Member Data Documentation

5.126.3.1 int MHA_AC::int_t::data

Integer value variable.

5.126.3.2 algo_comm_t MHA_AC::int_t::ac [private]


The documentation for this class was generated from the following files:

- · mha_algo_comm.h
- mha_algo_comm.cpp

5.127 MHA_AC::spectrum_t Class Reference

Insert a MHASignal::spectrum_t (p. 763) class into the AC space.

Inheritance diagram for MHA_AC::spectrum_t:

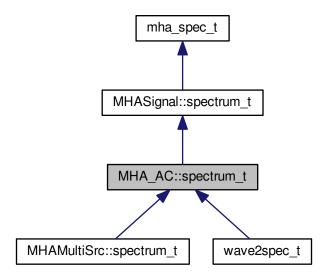

Public Member Functions

spectrum_t (algo_comm_t ac, std::string name, unsigned int bins, unsigned int channels, bool insert_now)

Create the AC variable.

- ~spectrum_t ()
- void **insert** ()

Insert AC variable into AC space.

Protected Attributes

- algo_comm_t ac
- std::string name

Additional Inherited Members

5.127.1 Detailed Description

Insert a MHASignal::spectrum_t (p. 763) class into the AC space.

The variable is automatically removed on destruction.

5.127.2 Constructor & Destructor Documentation

Create the AC variable.

Parameters

ac	AC handle
name	Name of variable in AC space
bins	Number of FFT bins in the waveform_t (p. 391) class
channels	Number of audio channels in the waveform_t (p. 391) class
insert_now	Insert implicitely in the constructor (true) or explicitely in the insert() (p. 389) function (false)

Reimplemented from **MHASignal::spectrum_t** (p. 765).

5.127.3 Member Function Documentation

5.127.3.1 void MHA_AC::spectrum_t::insert ()

Insert AC variable into AC space.

5.127.4 Member Data Documentation

5.127.4.1 algo_comm_t MHA_AC::spectrum_t::ac [protected]


5.127.4.2 std::string MHA_AC::spectrum_t::name [protected]

The documentation for this class was generated from the following files:

- mha_algo_comm.h
- mha_algo_comm.cpp

5.128 MHA_AC::stat_t Class Reference

Inheritance diagram for MHA_AC::stat_t:

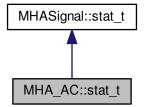

Public Member Functions

- stat_t (algo_comm_t ac, const std::string &name, const unsigned int &frames, const unsigned int &channels, bool insert_now)
- void update ()
- void insert ()

Private Attributes

- MHA_AC::waveform_t mean
- MHA_AC::waveform_t std

5.128.1 Constructor & Destructor Documentation


- 5.128.2 Member Function Documentation
- 5.128.2.1 void MHA_AC::stat_t::update ()
- 5.128.2.2 void MHA_AC::stat_t::insert()
- 5.128.3 Member Data Documentation
- 5.128.3.1 MHA_AC::waveform_t MHA_AC::stat_t::mean [private]
- **5.128.3.2** MHA_AC::waveform_t MHA_AC::stat_t::std [private]

The documentation for this class was generated from the following files:

- mha_algo_comm.h
- mha_algo_comm.cpp

5.129 MHA_AC::waveform_t Class Reference

Insert a **MHASignal::waveform_t** (p. 775) class into the AC space. Inheritance diagram for MHA_AC::waveform_t:

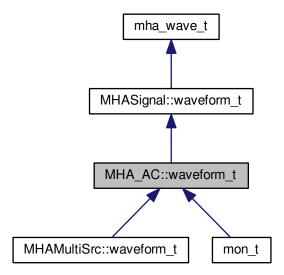

Public Member Functions

 waveform_t (algo_comm_t ac, std::string name, unsigned int frames, unsigned int channels, bool insert_now)

Create the AC variable.

- ~waveform t()
- void insert ()

Insert AC variable into AC space.

Protected Attributes

- algo_comm_t ac
- std::string name

Additional Inherited Members

5.129.1 Detailed Description

Insert a MHASignal::waveform_t (p. 775) class into the AC space.

The variable is automatically removed on destruction.

5.129.2 Constructor & Destructor Documentation

Create the AC variable.

Parameters

ac	AC handle
name	Name of variable in AC space
frames	Number of frames in the waveform_t (p. 391) class
channels	Number of audio channels in the waveform_t (p. 391) class
insert_now	Insert implicitely in the constructor (true) or explicitely in the insert() (p. 393) function (false)

```
5.129.2.2 MHA_AC::waveform_t::~waveform_t ( void ) [virtual]
```

Reimplemented from **MHASignal::waveform_t** (p. 778).

5.129.3 Member Function Documentation

```
5.129.3.1 void MHA_AC::waveform_t::insert ( )
```

Insert AC variable into AC space.

5.129.4 Member Data Documentation

```
5.129.4.1 algo_comm_t MHA_AC::waveform_t::ac [protected]
```

```
5.129.4.2 std::string MHA_AC::waveform_t::name [protected]
```

The documentation for this class was generated from the following files:

- mha_algo_comm.h
- mha_algo_comm.cpp

5.130 mha_audio_descriptor_t Struct Reference

Description of an audio fragment (planned as a replacement of **mhaconfig t** (p. 467)).

Public Attributes

unsigned int n_samples

Number of samples.

· unsigned int n channels

Number of audio channels.

unsigned int n_freqs

Number of frequency bands.

unsigned int is_complex

Flag about sample type.

mha_real_t dt

Time distance between samples (only equidistant samples allowed)

mha_real_t * cf

Center frequencies of frequency bands.

mha_real_t * chdir

Hint on source direction of channel, values below zero is left, values above zero is right, zero means unknown.

5.130.1 Detailed Description

Description of an audio fragment (planned as a replacement of **mhaconfig_t** (p. 467)).

5.130.2 Member Data Documentation

5.130.2.1 unsigned int mha_audio_descriptor_t::n_samples

Number of samples.

5.130.2.2 unsigned int mha_audio_descriptor_t::n_channels

Number of audio channels.

5.130.2.3 unsigned int mha_audio_descriptor_t::n_freqs

Number of frequency bands.

5.130.2.4 unsigned int mha_audio_descriptor_t::is_complex

Flag about sample type.

5.130.2.5 mha real t mha_audio_descriptor_t::dt

Time distance between samples (only equidistant samples allowed)

5.130.2.6 mha_real_t* mha_audio_descriptor_t::cf

Center frequencies of frequency bands.

5.130.2.7 mha_real_t* mha_audio_descriptor_t::chdir

Hint on source direction of channel, values below zero is left, values above zero is right, zero means unknown.

The documentation for this struct was generated from the following file:

· mha.h

5.131 mha_audio_t Struct Reference

An audio fragment in the openMHA (planned as a replacement of **mha_wave_t** (p. 459) and **mha_spec_t** (p. 429)).

Public Attributes

mha_audio_descriptor_t descriptor

Dimension and description of the data.

mha real t * rdata

Data pointer if flag **mha_audio_descriptor_t::is_complex** (p. 394) is unset.

mha complex t * cdata

Data pointer if flag mha_audio_descriptor_t::is_complex (p. 394) is set.

5.131.1 Detailed Description

An audio fragment in the openMHA (planned as a replacement of **mha_wave_t** (p. 459) and **mha_spec_t** (p. 429)).

The data alignment is $(t_0, c_0, f_0), (t_0, c_0, f_1), \ldots, (t_0, c_0, f_{freqs}), (t_0, c_1, f_0), \ldots$ This allows a direct cast of the current **mha_wave_t** (p. 459) and **mha_spec_t** (p. 429) data pointers into corresponding **mha_audio_t** (p. 394) objects.

5.131.2 Member Data Documentation

5.131.2.1 mha audio descriptor t mha_audio_t::descriptor

Dimension and description of the data.

5.131.2.2 mha_real_t* mha_audio_t::rdata

Data pointer if flag mha_audio_descriptor_t::is_complex (p. 394) is unset.

5.131.2.3 mha complex t* mha_audio_t::cdata

Data pointer if flag mha_audio_descriptor_t::is_complex (p. 394) is set.

The documentation for this struct was generated from the following file:

· mha.h

5.132 mha_channel_info_t Struct Reference

Channel information structure.

Public Attributes

• int id

channel id

• char idstr [32]

channel id

· unsigned int side

side (left/right)

mha_direction_t dir

source direction

mha_real_t peaklevel

Peak level corresponds to this SPL (dB) level.

5.132.1 Detailed Description

Channel information structure.

5.132.2 Member Data Documentation

5.132.2.1 int mha_channel_info_t::id

channel id

5.132.2.2 char mha_channel_info_t::idstr[32]

channel id

5.132.2.3 unsigned int mha_channel_info_t::side

side (left/right)

5.132.2.4 mha_direction_t mha_channel_info_t::dir

source direction

5.132.2.5 mha_real_t mha_channel_info_t::peaklevel

Peak level corresponds to this SPL (dB) level.

The documentation for this struct was generated from the following file:

· mha.h

5.133 mha_complex_t Struct Reference

Type for complex floating point values.

Public Attributes

- mha_real_t re

 Real part.
- mha_real_t im Imaginary part.

5.133.1 Detailed Description

Type for complex floating point values.

5.133.2 Member Data Documentation

5.133.2.1 mha_real_t mha_complex_t::re

Real part.

5.133.2.2 mha_real_t mha_complex_t::im

Imaginary part.

The documentation for this struct was generated from the following file:

· mha.h

5.134 mha_dblbuf_t < FIFO > Class Template Reference

The doublebuffer adapts blocksizes between an outer process, which provides input data and takes output data, and an inner process, which processes the input signal and generates output data using a different block size than the outer process.

Public Types

typedef FIFO::value_type value_type
 The datatype exchanged by the FIFO and this doublebuffer.

Public Member Functions

- virtual unsigned get inner size () const
- virtual unsigned get_outer_size () const
- virtual unsigned get_delay () const
- virtual unsigned get_fifo_size () const
- virtual unsigned get input channels () const
- · virtual unsigned get output channels () const
- virtual unsigned get_input_fifo_fill_count () const
- virtual unsigned get_output_fifo_fill_count () const
- virtual unsigned get_input_fifo_space () const
- virtual unsigned get_output_fifo_space () const
- virtual MHA_Error * get_inner_error () const
- virtual void provoke_inner_error (const MHA_Error &)
- virtual void provoke_outer_error (const MHA_Error &)
- mha_dblbuf_t (unsigned outer_size, unsigned inner_size, unsigned delay, unsigned input_channels, unsigned output_channels, const value_type &delay_data)

Constructor creates FIFOs with specified delay.

- virtual ~mha_dblbuf_t ()
- virtual void process (const value_type *input_signal, value_type *output_signal, un-signed count)

The outer process has to call this method to propagate the input signal to the inner process, and receives back the output signal.

virtual void input (value_type *input_signal)

The inner process has to call this method to receive its input signal.

virtual void output (const value_type *output_signal)

The outer process has to call this method to deliver its output signal.

Private Attributes

unsigned outer size

The block size used by the outer process.

• unsigned inner size

The block size used by the inner process.

· unsigned delay

The delay introduced by bidirectional buffer size adaptation.

unsigned fifo_size

The size of each of the FIFOs.

unsigned input_channels

The number of input channels.

unsigned output_channels

The number of output channels.

FIFO input fifo

The FIFO for transporting the input signal from the outer process to the inner process.

FIFO output fifo

The FIFO for transporting the output signal from the inner process to the outer process.

MHA_Error * inner_error

Owned copy of exception to be thrown in inner thread.

MHA_Error * outer_error

Owned copy of exception to be thrown in outer thread.

5.134.1 Detailed Description

```
template < class FIFO > class mha_dblbuf_t < FIFO >
```

The doublebuffer adapts blocksizes between an outer process, which provides input data and takes output data, and an inner process, which processes the input signal and generates output data using a different block size than the outer process.

This class introduces the channels concept. Input and output may have different channel counts.

5.134.2 Member Typedef Documentation

```
5.134.2.1 template < class FIFO > typedef FIFO::value_type mha_dblbuf_t < FIFO >::value_type
```

The datatype exchanged by the FIFO and this doublebuffer.

5.134.3 Constructor & Destructor Documentation

Constructor creates FIFOs with specified delay.

Warning

The doublebuffer may block or raise an exception if the delay is too small. To avoid this, the delay should be

$$delay >= (inner_size - gcd(inner_size, outer_size))$$

.

Parameters

outer_size	The block size used by the outer process.
inner_size	The block size used by the inner process.
delay	The total delay
input_channels	Number of input channels
output_channels	Number of output channels
delay_data	The delay consists of copies of this value.

)const [inline],[virtual]

```
5.134.3.2 template < class FIFO > mha dblbuf t < FIFO >::~mha dblbuf t() [virtual]
5.134.4 Member Function Documentation
5.134.4.1
         template < class FIFO > virtual unsigned mha_dblbuf_t < FIFO >::get_inner_size ( ) const
          [inline],[virtual]
5.134.4.2 template < class FIFO > virtual unsigned mha dblbuf t < FIFO >::get_outer_size ( ) const
          [inline],[virtual]
5.134.4.3 template < class FIFO > virtual unsigned mha_dblbuf_t < FIFO >::get_delay ( ) const
          [inline],[virtual]
5.134.4.4 template < class FIFO > virtual unsigned mha dblbuf t < FIFO >::get_fifo_size ( ) const
          [inline],[virtual]
5.134.4.5 template < class FIFO > virtual unsigned mha dblbuf t < FIFO >::get_input_channels ( )
          const [inline],[virtual]
5.134.4.6 template < class FIFO > virtual unsigned mha dblbuf t < FIFO >::get output channels ( )
          const [inline],[virtual]
5.134.4.7 template < class FIFO > virtual unsigned mha dblbuf t < FIFO >::get_input_fifo_fill_count (
          )const [inline],[virtual]
5.134.4.8 template < class FIFO > virtual unsigned mha_dblbuf_t < FIFO >::get_output_fifo_fill_count
          ( ) const [inline], [virtual]
5.134.4.9 template < class FIFO > virtual unsigned mha dblbuf t < FIFO >::get_input_fifo_space ( )
          const [inline],[virtual]
5.134.4.10 template < class FIFO > virtual unsigned mha_dblbuf_t < FIFO >::get_output_fifo_space (
```

The outer process has to call this method to propagate the input signal to the inner process, and receives back the output signal.

Parameters

input_signal	Pointer to the input signal array.
output_signal	Pointer to the output signal array.
count	The number of data instances provided and expected, lower or equal to inner_size given to constructor.

Exceptions

MHA_Error (p. 410)	When count is > outer_size as given to constructor or the underlying
	fifo implementation detects an error.

```
5.134.4.15 template < class FIFO > void mha_dblbuf_t< FIFO >::input ( value_type * input_signal ) [virtual]
```

The inner process has to call this method to receive its input signal.

Parameters

Innut ciana	Array where the doublebuffer can store the signal.
iliput sigila	Array where the doubleburier can store the signal.

Exceptions

The outer process has to call this method to deliver its output signal.

Parameters

output_signal Array from which doublebuffer reads outputsignal.

Exceptions

5.134.5 Member Data Documentation

5.134.5.1 template < class FIFO > unsigned mha_dblbuf_t < FIFO >::outer_size [private]

The block size used by the outer process.

5.134.5.2 template < class FIFO > unsigned mha_dblbuf_t < FIFO >::inner_size [private]

The block size used by the inner process.

5.134.5.3 template < class FIFO > unsigned mha_dblbuf_t < FIFO >::delay [private]

The delay introduced by bidirectional buffer size adaptation.

5.134.5.4 template < class FIFO > unsigned mha_dblbuf_t < FIFO >::fifo_size [private]

The size of each of the FIFOs.

5.134.5.5 template < class FIFO > unsigned mha_dblbuf_t < FIFO >::input_channels [private]

The number of input channels.

5.134.5.6 template < class FIFO > unsigned mha_dblbuf_t < FIFO >::output_channels [private]

The number of output channels.

5.134.5.7 template < class FIFO > FIFO mha_dblbuf_t < FIFO >::input_fifo [private]

The FIFO for transporting the input signal from the outer process to the inner process.

5.134.5.8 template < class FIFO > FIFO mha_dblbuf_t < FIFO >::output_fifo [private]

The FIFO for transporting the output signal from the inner process to the outer process.

5.134.5.9 template < class FIFO > MHA_Error* mha_dblbuf_t < FIFO >::inner_error [private]

Owned copy of exception to be thrown in inner thread.

5.134.5.10 template < class FIFO > MHA_Error* mha_dblbuf_t < FIFO >::outer_error [private]

Owned copy of exception to be thrown in outer thread.

The documentation for this class was generated from the following files:

- · mha_fifo.h
- · mha_fifo.cpp

5.135 mha_direction_t Struct Reference

Channel source direction structure.

Public Attributes

- mha_real_t azimuth
 azimuth in radiants
- mha_real_t elevation
 elevation in radiants
- mha_real_t distance distance in meters

5.135.1 Detailed Description

Channel source direction structure.

5.135.2 Member Data Documentation

5.135.2.1 mha_real_t mha_direction_t::azimuth

azimuth in radiants

5.135.2.2 mha_real_t mha_direction_t::elevation

elevation in radiants

5.135.2.3 mha_real_t mha_direction_t::distance

distance in meters


The documentation for this struct was generated from the following file:

· mha.h

5.136 mha_drifter_fifo_t < T > Class Template Reference

A FIFO class for blocksize adaptation without Synchronization.

Inheritance diagram for mha_drifter_fifo_t< T >:

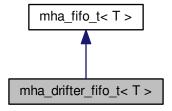

Public Member Functions

- virtual void write (const T *data, unsigned count)
 - write data to fifo
- virtual void read (T *buf, unsigned count)

Read data from fifo.

virtual unsigned get_fill_count () const

Return fill_count, adding **mha_drifter_fifo_t**<**T**>::**startup_zeros** (p. 410) to the number of samples actually in the fifo's buffer.

• virtual unsigned get_available_space () const

Return available space, subtracting number of **mha_drifter_fifo_t**<**T**>::**startup_zeros** (p. **410**) from the available_space actually present in the fifo's buffer.

· virtual unsigned get des fill count () const

The desired fill count of this fifo.

virtual unsigned get_min_fill_count () const

The minimum fill count of this fifo.

virtual void stop ()

Called by **mha_drifter_fifo_t**<**T**>::**read** (p. 407) or **mha_drifter_fifo_t**<**T**>::**write** (p. 406) when their xrun in succession counter exceeds its limit.

virtual void starting ()

Called by mha_drifter_fifo_t<T>::read (p. 407) or mha_drifter_fifo_t<T>::write (p. 406) when the respective flag (mha_drifter_fifo_t<T>::reader_started (p. 409) or mha_drifter—fifo_t<T>::writer_started (p. 408)) is about to be toggled from false to true.

mha_drifter_fifo_t (unsigned min_fill_count, unsigned desired_fill_count, unsigned max_fill_count)

Create drifter FIFO.

mha_drifter_fifo_t (unsigned min_fill_count, unsigned desired_fill_count, unsigned max fill count, const T &t)

Create drifter FIFO where all (initially unused) copies of T are initialized as copies of t.

Private Attributes

const unsigned minimum_fill_count

The minimum fill count of this fifo.

const unsigned desired_fill_count

The desired fill count of the fifo.

bool writer started

Flag set to true when write is called the first time.

bool reader_started

Flag set to true when read is called for the first time.

unsigned writer_xruns_total

The number of xruns seen by the writer since object instantiation.

· unsigned reader xruns total

The number of xruns seen by the reader since object instantiation.

unsigned writer_xruns_since_start

The number of xruns seen by the writer since the last start of processing.

unsigned reader_xruns_since_start

The number of xruns seen by the reader since the last start of processing.

unsigned writer xruns in succession

The number of xruns seen by the writer in succession.

unsigned reader_xruns_in_succession

The number of xruns seen by the reader in succession.

unsigned maximum writer xruns in succession before stop

A limit to the number of xruns seen in succession during write before the data transmission through the FIFO is stopped.

unsigned maximum_reader_xruns_in_succession_before_stop

A limit to the number of xruns seen in succession during read before the data transmission through the FIFO is stopped.

mha fifo t< T>::value type null data

The value used in place of missing data.

unsigned startup_zeros

When processing starts, that is when both mha_drifter_fifo_t<T>::reader_started (p. 409) and mha_drifter_fifo_t<T>::writer_started (p. 408) are true, then first mha_drifter_fifo — _t<T>::desired_fill_count (p. 408) instances of mha_drifter_fifo_t<T>::null_data (p. 410) are delivered to the reader.

Additional Inherited Members

5.136.1 Detailed Description

```
template < class T> class mha drifter fifo t< T>
```

A FIFO class for blocksize adaptation without Synchronization.

Features: delay concept (desired, minimum and maximum delay), drifting support by throwing away data or inserting zeroes.

5.136.2 Constructor & Destructor Documentation

Create drifter FIFO.

Create drifter FIFO where all (initially unused) copies of T are initialized as copies of t.

5.136.3 Member Function Documentation

```
5.136.3.1 template < class T > void mha_drifter_fifo_t < T >::write ( const T * data, unsigned count ) [virtual]
```

write data to fifo

Sets writer started (p. 408) to true.

When processing has started, i.e. both **reader_started** (p. 409) and **writer_started** (p. 408) are true, write specified ammount of data to the fifo. If there is not enough space available, then the exceeding data is lost and the writer xrun counters are increased.

Processing is stopped when writer_xruns_in_succession (p. 409) exceeds maximum_ writer_xruns_in_succession_before_stop (p. 409).

Parameters

data	Pointer to source data.
count	Number of instances to copy

Reimplemented from $mha_fifo_t < T > (p. 419)$.

```
5.136.3.2 template < class T > void mha_drifter_fifo_t< T >::read ( T * buf, unsigned count ) [virtual]
```

Read data from fifo.

Sets reader_started (p. 409) to true.

When processing has started, i.e. both **reader_started** (p. 409) and **writer_started** (p. 408) are true, then read specified ammount of data from the fifo. As long as **startup_zeros** (p. 410) is > 0, **null_data** (p. 410) is delivered to the reader and **startup_zeros** (p. 410) is diminished. Only when **startup_zeros** (p. 410) has reached 0, data is actually read from the fifo's buffer.

If the read would cause the fifo's fill count to drop below **minimum_fill_count** (p. 408), then only so much data are read that **minimum_fill_count** (p. 408) entries remain in the fifo, the missing data is replaced with **null_data** (p. 410), and the reader xrun counters are increased.

Processing is stopped when **reader_xruns_in_succession** (p. 409) exceeds **maximum_** reader_xruns_in_succession_before_stop (p. 409).

Parameters

buf	Pointer to the target buffer
count	Number of instances to copy

Reimplemented from **mha fifo** t < T > (p. 420).

```
5.136.3.3 template < class T > unsigned mha_drifter_fifo_t < T >::get_fill_count ( ) const [virtual]
```

Return fill_count, adding **mha_drifter_fifo_t**<**T**>::startup_zeros (p. 410) to the number of samples actually in the fifo's buffer.

Reimplemented from $mha_fifo_t < T > (p. 420)$.

```
5.136.3.4 template < class T > unsigned mha_drifter_fifo_t< T >::get_available_space ( ) const [virtual]
```

Return available space, subtracting number of **mha_drifter_fifo_t**<**T**>::**startup_zeros** (p. 410) from the available space actually present in the fifo's buffer.

TODO: uncertain if this is a good idea.

Reimplemented from $mha_fifo_t < T > (p. 420)$.

5.136.3.5 template < class T > virtual unsigned mha_drifter_fifo_t< T >::get_des_fill_count() const [inline], [virtual]

The desired fill count of this fifo.

5.136.3.6 template < class T > virtual unsigned mha_drifter_fifo_t< T > ::get_min_fill_count() const [inline], [virtual]

The minimum fill count of this fifo.

```
5.136.3.7 template < class T > void mha_drifter_fifo_t < T >::stop() [virtual]
```

Called by mha_drifter_fifo_t<T>::read (p. 407) or mha_drifter_fifo_t<T>::write (p. 406) when their xrun in succession counter exceeds its limit.

Called by **read** (p. 407) or **write** (p. 406) when their xrun in succession counter exceeds its limit.

May also be called explicitly.

```
5.136.3.8 template < class T > void mha_drifter_fifo_t < T >::starting() [virtual]
```

Called by $mha_drifter_fifo_t < T>::read$ (p. 407) or $mha_drifter_fifo_t < T>::write$ (p. 406) when the respective flag ($mha_drifter_fifo_t < T>::reader_started$ (p. 409) or $mha_drifter_t$ fifo_t < T>::writer_started (p. 408)) is about to be toggled from false to true.

The fifo's buffer is emptied, this method resets **startup_zeros** (p. 410) to **desired_fill_count** (p. 408), and it also resets **reader_xruns_since_start** (p. 409) and **writer_xruns_since_start** (p. 409) to 0.

5.136.4 Member Data Documentation

```
5.136.4.1 template < class T > const unsigned mha_drifter_fifo_t< T >::minimum_fill_count [private]
```

The minimum fill count of this fifo.

```
5.136.4.2 template < class T > const unsigned mha_drifter_fifo_t < T >::desired_fill_count [private]
```

The desired fill count of the fifo.

The fifo is initialized with this ammount of data when data transmission starts.

5.136.4.3 template < class T > bool mha_drifter_fifo_t < T >::writer_started [private]

Flag set to true when write is called the first time.

5.136.4.4 template < class T > bool mha_drifter_fifo_t < T >::reader_started [private]

Flag set to true when read is called for the first time.

5.136.4.5 template < class T > unsigned mha_drifter_fifo_t < T >::writer_xruns_total [private]

The number of xruns seen by the writer since object instantiation.

5.136.4.6 template < class T > unsigned mha drifter fifo t < T >::reader_xruns_total [private]

The number of xruns seen by the reader since object instantiation.

5.136.4.7 template < class T > unsigned mha_drifter_fifo_t < T >::writer_xruns_since_start [private]

The number of xruns seen by the writer since the last start of processing.

5.136.4.8 template < class T > unsigned mha_drifter_fifo_t < T >::reader_xruns_since_start [private]

The number of xruns seen by the reader since the last start of processing.

5.136.4.9 template < class T > unsigned mha_drifter_fifo_t < T >::writer_xruns_in_succession [private]

The number of xruns seen by the writer in succession.

Reset to 0 every time a write succeeds without xrun.

5.136.4.10 template < class T > unsigned mha_drifter_fifo_t < T >::reader_xruns_in_succession [private]

The number of xruns seen by the reader in succession.

Reset to 0 every time a read succeeds without xrun.

5.136.4.11 template < class T > unsigned mha_drifter_fifo_t < T >::maximum_writer_xruns_in_ \leftarrow succession_before_stop [private]

A limit to the number of xruns seen in succession during write before the data transmission through the FIFO is stopped.

5.136.4.12 template < class T > unsigned mha_drifter_fifo_t < T >::maximum_reader_xruns_in_ \leftarrow succession_before_stop [private]

A limit to the number of xruns seen in succession during read before the data transmission through the FIFO is stopped.

5.136.4.13 template < class T > mha_fifo_t < T >::value_type mha_drifter_fifo_t < T >::null_data [private]

The value used in place of missing data.

5.136.4.14 template < class T > unsigned mha_drifter_fifo_t < T >::startup_zeros [private]

When processing starts, that is when both $mha_drifter_fifo_t < T>::reader_started$ (p. 409) and $mha_drifter_fifo_t < T>::writer_started$ (p. 408) are true, then first $mha_drifter_fifo_t < \leftarrow T>::desired_fill_count$ (p. 408) instances of $mha_drifter_fifo_t < T>::null_data$ (p. 410) are delivered to the reader.

These **null_data** (p. 410) instances are not transmitted through the fifo because filling the fifo with enough **null_data** (p. 410) might not be realtime safe and this filling has to be initiated by **starting** (p. 408) or **stop** (p. 408) (this implementation: **starting** (p. 408)) which are be called with realtime constraints.

The documentation for this class was generated from the following file:

· mha_fifo.h

5.137 MHA_Error Class Reference

Error reporting exception class.

Inherits exception.

Public Member Functions

- MHA_Error (const char *file, int line, const char *fmt,...)

 Create an instance of a MHA_Error (p. 410).
- MHA_Error (const MHA_Error &)
- MHA_Error & operator= (const MHA_Error &)
- \sim MHA Error () throw ()
- const char * get_msg () const

Return the error message without source position.

const char * get_longmsg () const

Return the error message with source position.

const char * what () const throw ()
 overwrite std::execption::what()

Private Attributes

- char * msg
- char * longmsg

5.137.1 Detailed Description

Error reporting exception class.

This class is used for error handling in the openMHA. It is used by the openMHA kernel and by the openMHA toolbox library. Please note that exceptions should not be used accross ANSI-C interfaces. It is necessary to catch exceptions within the library.

The MHA_Error (p. 410) class holds source file name, line number and an error message.

5.137.2 Constructor & Destructor Documentation

Create an instance of a MHA_Error (p. 410).

Parameters

s_file	source file name (FILE)
1	source line (LINE)
fmt	format string for error message (as in printf)

```
5.137.2.2 MHA_Error::MHA_Error (
const MHA_Error & p)
```

```
5.137.2.3 MHA_Error::~MHA_Error ( ) throw )
```

5.137.3 Member Function Documentation

```
5.137.3.2 const char* MHA_Error::get_msg() const [inline]
```

Return the error message without source position.

```
5.137.3.3 const char* MHA_Error::get_longmsg() const [inline]
```

Return the error message with source position.

5.137.3.4 const char* MHA_Error::what () const throw) [inline]

overwrite std::execption::what()

5.137.4 Member Data Documentation

5.137.4.1 char* MHA_Error::msg [private]

5.137.4.2 char* MHA_Error::longmsg [private]


The documentation for this class was generated from the following files:

- mha_error.hh
- mha_error.cpp

5.138 mha_fifo_lw_t < T > Class Template Reference

This FIFO uses locks to synchronize access.

Inheritance diagram for mha_fifo_lw_t< T >:

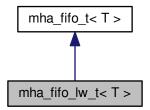

Public Member Functions

- virtual void write (const T *data, unsigned count)
 write specified ammount of data to the fifo.
- virtual void read (T *buf, unsigned count)
 read data from fifo.
- mha_fifo_lw_t (unsigned max_fill_count)
 Create FIFO with fixed buffer size.
- virtual ~mha_fifo_lw_t ()
 release synchronization object
- virtual void $\mathbf{set_error}$ (unsigned index, $\mathbf{MHA_Error} * \mathbf{error}$)

Process waiting for more data or space should bail out, throwing this error.

Private Attributes

- mha_fifo_thread_platform_t * sync
 platform specific thread synchronization
- MHA_Error * error [2]

If waiting for synchronization should be aborted then exception to be thrown by reader process (index 0) or writer process (index 1) has to be placed here.

Additional Inherited Members

5.138.1 Detailed Description

```
\label{template} \begin{array}{l} \text{template} \! < \! \text{class T} \! > \\ \text{class mha\_fifo\_lw\_t} \! < \! \text{T} > \\ \end{array}
```

This FIFO uses locks to synchronize access.

Reading and writing can block until the operation can be executed.

5.138.2 Constructor & Destructor Documentation

Create FIFO with fixed buffer size.

```
\textbf{5.138.2.2} \quad template < \textbf{class T} > mha\_fifo\_lw\_t < T>::\sim mha\_fifo\_lw\_t \textbf{( )} \quad \texttt{[virtual]}
```

release synchronization object

5.138.3 Member Function Documentation

write specified ammount of data to the fifo.

If there is not enough space, then wait for more space.

Parameters

data	Pointer to source data.
count	Number of instances to copy.

Exceptions

Reimplemented from **mha_fifo_t**< **T**> (p. 419).

5.138.3.2 template
$$<$$
 class T $>$ void mha_fifo_lw_t $<$ T $>$::read (T $*$ buf, unsigned count) [virtual]

read data from fifo.

If there is not enough data, then wait for more data.

Parameters

buf	Pointer to the target buffer.
count	Number of instances to copy.

Exceptions

MHA_Error (p. 410)	when detecting a deadlock situation.

Reimplemented from $mha_fifo_t < T > (p. 420)$.

```
5.138.3.3 template < class T > void mha_fifo_lw_t < T >::set_error ( unsigned index, MHA_Error * error ) [virtual]
```

Process waiting for more data or space should bail out, throwing this error.

Parameters

index	Use 0 for terminating reader, 1 for terminating writer.
error	MHA_Error (p. 410) to be thrown

5.138.4 Member Data Documentation

platform specific thread synchronization


If waiting for synchronization should be aborted then exception to be thrown by reader process (index 0) or writer process (index 1) has to be placed here.

The documentation for this class was generated from the following files:

- mha_fifo.h
- mha_fifo.cpp

5.139 mha_fifo_posix_threads_t Class Reference

Inheritance diagram for mha_fifo_posix_threads_t:

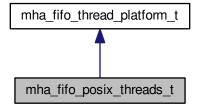

Public Member Functions

- mha_fifo_posix_threads_t ()
- virtual void aquire_mutex ()
- virtual void release_mutex ()
- virtual void wait_for_decrease ()
- virtual void wait for increase ()
- virtual void increment ()
- virtual void decrement ()
- virtual ~mha_fifo_posix_threads_t ()

Private Attributes

```
pthread_mutex_t mutex
```

- pthread_cond_t decrease_condition
- pthread_cond_t increase_condition

```
5.139.1 Constructor & Destructor Documentation
5.139.1.1 mha_fifo_posix_threads_t::mha_fifo_posix_threads_t() [inline]
5.139.1.2 virtual mha_fifo_posix_threads_t::~mha_fifo_posix_threads_t( ) [inline],
         [virtual]
5.139.2 Member Function Documentation
5.139.2.1 virtual void mha_fifo_posix_threads_t::aquire_mutex( ) [inline], [virtual]
Implements mha_fifo_thread_platform_t (p. 424).
5.139.2.2 virtual void mha fifo posix threads t::release mutex ( ) [inline], [virtual]
Implements mha_fifo_thread_platform_t (p. 424).
5.139.2.3 virtual void mha_fifo_posix_threads_t::wait_for_decrease( ) [inline], [virtual]
Implements mha_fifo_thread_platform_t (p. 424).
5.139.2.4 virtual void mha_fifo_posix_threads_t::wait_for_increase( ) [inline], [virtual]
Implements mha fifo thread platform t (p. 424).
5.139.2.5 virtual void mha_fifo_posix_threads_t::increment( ) [inline], [virtual]
Implements mha_fifo_thread_platform_t (p. 424).
5.139.2.6 virtual void mha_fifo_posix_threads_t::decrement() [inline], [virtual]
Implements mha_fifo_thread_platform_t (p. 425).
```

5.139.3 Member Data Documentation

5.139.3.1 pthread_mutex_t mha_fifo_posix_threads_t::mutex [private]

5.139.3.2 pthread_cond_t mha_fifo_posix_threads_t::decrease_condition [private]

5.139.3.3 pthread_cond_t mha_fifo_posix_threads_t::increase_condition [private]


The documentation for this class was generated from the following file:

mha_fifo.h

5.140 mha_fifo_t < T > Class Template Reference

A FIFO class for blocksize adaptation Synchronization: None.

Inheritance diagram for mha_fifo_t< T >:

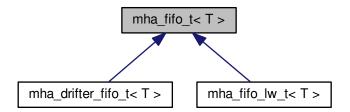

Public Types

typedef T value_type

The data type exchanged by this fifo.

Public Member Functions

virtual void write (const T *data, unsigned count)

write specified ammount of data to the fifo.

virtual void read (T *buf, unsigned count)

read data from fifo

virtual unsigned get_fill_count () const

Read-only access to fill_count.

virtual unsigned get_available_space () const

Read-only access to available space.

virtual unsigned get_max_fill_count () const

The capacity of this fifo.

mha_fifo_t (unsigned max_fill_count)

Create FIFO with fixed buffer size.

mha_fifo_t (unsigned max_fill_count, const T &t)

Create FIFO with fixed buffer size, where all (initially unused) copies of T are initialized as copies of t.

mha_fifo_t (const mha_fifo_t &src)

Copy constructor.

virtual ~mha_fifo_t ()

Destroy FIFO.

mha_fifo_t < T > & operator= (const mha_fifo_t < T > &)

Assignment operator.

Protected Member Functions

• void clear ()

Empty the fifo at once.

Private Attributes

const unsigned max fill count

The maximum fill count of this FIFO.

T * buf

The memory allocated to store the data.

• T * write ptr

points to location where to write next

const T * read ptr

points to location where to read next

bool buf uses placement new

wether buf was allocated using placement new or array new.

```
5.140.1 Detailed Description
```

```
template < class T> class mha_fifo_t < T>
```

A FIFO class for blocksize adaptation Synchronization: None.

Use external synchronisation or synchronization in inheriting class.

```
5.140.2 Member Typedef Documentation
```

```
5.140.2.1 template < class T > typedef T mha_fifo_t < T >::value_type
```

The data type exchanged by this fifo.

```
5.140.3 Constructor & Destructor Documentation
```

```
5.140.3.1 template < class T > mha_fifo_t < T >::mha_fifo_t ( unsigned max_fill_count ) [explicit]
```

Create FIFO with fixed buffer size.

Create FIFO with fixed buffer size, where all (initially unused) copies of T are initialized as copies of t.

```
5.140.3.3 template < class T > mha_fifo_t < T >::mha_fifo_t ( const mha_fifo_t < T > & src )
```

Copy constructor.

```
5.140.3.4 template < class T > mha fifo t < T >::\sim mha fifo t () [virtual]
```

Destroy FIFO.

5.140.4 Member Function Documentation

```
5.140.4.1 template < class T > void mha_fifo_t < T >::write ( const T * data, unsigned count ) [virtual]
```

write specified ammount of data to the fifo.

Parameters

data	Pointer to source data.
count	Number of instances to copy

Exceptions

```
MHA_Error (p. 410) when there is not enough space available.
```

Reimplemented in $mha_fifo_lw_t < T > (p. 413)$, and $mha_drifter_fifo_t < T > (p. 406)$.

```
5.140.4.2 template < class T> void mha_fifo_t< T>::read ( T * buf, unsigned count ) [virtual]
```

read data from fifo

Parameters

buf	Pointer to the target buffer
count	Number of instances to copy

Exceptions

```
MHA_Error (p. 410) when there is not enough data available.
```

Reimplemented in $mha_fifo_lw_t < T > (p. 414)$, and $mha_drifter_fifo_t < T > (p. 407)$.

5.140.4.3 template < class T > unsigned mha_fifo_t < T >::get_fill_count() const [virtual]

Read-only access to fill count.

Reimplemented in **mha_drifter_fifo_t** < **T** > (p. 407).

Read-only access to available_space.

Reimplemented in **mha_drifter_fifo_t**< **T** > (p. 407).

5.140.4.5 template < class T> virtual unsigned mha_fifo_t< T>:: get_max_fill_count() const [inline], [virtual]

The capacity of this fifo.

```
5.140.4.6 template < class T > mha_fifo_t < T > & mha_fifo_t < T > ::operator = ( const mha_fifo_t < T > & src )
```

Assignment operator.

5.140.4.7 template < class T > void mha_fifo_t < T >::clear() [inline], [protected]

Empty the fifo at once.

Should be called by the reader, or when the reader is inactive.

5.140.5 Member Data Documentation

5.140.5.1 template < class T > const unsigned mha_fifo_t < T > ::max_fill_count [private]

The maximum fill count of this FIFO.

5.140.5.2 template < class T > T * mha_fifo_t < T >::buf [private]

The memory allocated to store the data.

max_fill_count + 1 locations are allocated: At least one location is always unused, because we have max_fill_count + 1 possible fillcounts [0:max_fill_count] that we need to distinguish.

5.140.5.3 template < class T > T * mha_fifo_t < T >::write_ptr [private]

points to location where to write next

5.140.5.4 template < class T > const T * mha_fifo_t < T >::read_ptr [private]

points to location where to read next

5.140.5.5 template < class T > bool mha_fifo_t < T >::buf_uses_placement_new [private]

wether buf was allocated using placement new or array new.

The documentation for this class was generated from the following file:

mha_fifo.h

5.141 mha_fifo_thread_guard_t Class Reference

Simple Mutex Guard Class.

Public Member Functions

- mha_fifo_thread_guard_t (mha_fifo_thread_platform_t *sync)
- ~mha_fifo_thread_guard_t ()

Private Attributes

• mha fifo thread platform t * sync

5.141.1 Detailed Description

Simple Mutex Guard Class.

5.141.2 Constructor & Destructor Documentation

- 5.141.2.2 mha_fifo_thread_guard_t::~mha_fifo_thread_guard_t() [inline]
- 5.141.3 Member Data Documentation
- **5.141.3.1 mha_fifo_thread_platform_t*** **mha_fifo_thread_guard_t::sync** [private]


The documentation for this class was generated from the following file:

· mha_fifo.h

5.142 mha_fifo_thread_platform_t Class Reference

Abstract base class for synchronizing multithreaded (producer/consumer) fifo operations.

Inheritance diagram for mha_fifo_thread_platform_t:

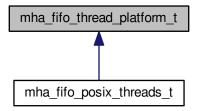

Public Member Functions

virtual void aquire_mutex ()=0

Calling thread waits until it aquires the lock.

virtual void release_mutex ()=0

Calling thread releases the lock.

virtual void wait_for_decrease ()=0

Calling producer thread must own the lock.

virtual void wait_for_increase ()=0

Calling consumer thread must own the lock.

• virtual void increment ()=0

To be called by producer thread after producing.

virtual void decrement ()=0

To be called by consumer thread after consuming.

virtual ~mha_fifo_thread_platform_t ()

Make destructor virtual.

mha_fifo_thread_platform_t ()

Make default constructor accessible.

Private Member Functions

```
    mha_fifo_thread_platform_t (const mha_fifo_thread_platform_t &)
```

```
• mha_fifo_thread_platform_t & operator= (const mha_fifo_thread_platform_t &)
```

5.142.1 Detailed Description

Abstract base class for synchronizing multithreaded (producer/consumer) fifo operations.

Works only with single producer and single consumer.

```
5.142.2 Constructor & Destructor Documentation
```

```
5.142.2.1 virtual mha_fifo_thread_platform_t::~mha_fifo_thread_platform_t( ) [inline], [virtual]
```

Make destructor virtual.

5.142.2.3 mha_fifo_thread_platform_t::mha_fifo_thread_platform_t() [inline]

Make default constructor accessible.

```
5.142.3 Member Function Documentation
```

```
5.142.3.1 virtual void mha_fifo_thread_platform_t::aquire_mutex ( ) [pure virtual]
```

Calling thread waits until it aquires the lock.

Must not be called when the lock is already aquired.

```
Implemented in mha_fifo_posix_threads_t (p. 416).
```

```
5.142.3.2 virtual void mha fifo thread platform t::release mutex ( ) [pure virtual]
```

Calling thread releases the lock.

May only be called when lock is owned.

```
Implemented in mha_fifo_posix_threads_t (p. 416).
```

```
5.142.3.3 virtual void mha_fifo_thread_platform_t::wait_for_decrease( ) [pure virtual]
```

Calling producer thread must own the lock.

Method releases lock, and waits for consumer thread to call decrease(). Then reaquires lock and returns

```
Implemented in mha_fifo_posix_threads_t (p. 416).
```

```
5.142.3.4 virtual void mha_fifo_thread_platform_t::wait_for_increase( ) [pure virtual]
```

Calling consumer thread must own the lock.

Method releases lock, and waits for producer thread to call increase(). Then reaquires lock and returns

```
Implemented in mha_fifo_posix_threads_t (p. 416).
```

```
5.142.3.5 virtual void mha_fifo_thread_platform_t::increment() [pure virtual]
```

To be called by producer thread after producing.

Producer thread needs to own the lock to call this method.

Implemented in **mha_fifo_posix_threads_t** (p. 416).

```
5.142.3.6 virtual void mha_fifo_thread_platform_t::decrement() [pure virtual]
```

To be called by consumer thread after consuming.

Consumer thread needs to own the lock to call this method.

Implemented in **mha_fifo_posix_threads_t** (p. 416).

The documentation for this class was generated from the following file:

· mha_fifo.h

```
5.143 mha_rt_fifo_element_t < T > Class Template Reference
```

Object wrapper for **mha_rt_fifo_t** (p. 426).

Public Member Functions

- mha_rt_fifo_element_t (T *data)

 Constructor.
- ~mha_rt_fifo_element_t ()

Public Attributes

mha_rt_fifo_element_t< T > * next

Pointer to next fifo element. NULL for the last (newest) fifo element.

bool abandonned

Indicates that this element will no longer be used and may be deleted.

• T * data

Pointer to user data.

5.143.1 Detailed Description

```
\label{template} \begin{array}{l} \text{template}{<} \text{class T}{>} \\ \text{class mha\_rt\_fifo\_element\_t}{<} \text{ T}{>} \\ \end{array}
```

Object wrapper for **mha_rt_fifo_t** (p. 426).

5.143.2 Constructor & Destructor Documentation

5.143.2.1 template
$$<$$
 class T $>$ mha_rt_fifo_element_t $<$ T $>$::mha_rt_fifo_element_t (T $*$ data) [inline]

Constructor.

This element assumes ownership of user data.

Parameters

data User data. Has to be allocated on the heap with standard operator new, because it will be deleted in this element's destructor.

5.143.2.2 template < class T > mha_rt_fifo_element_t < T >:: \sim mha_rt_fifo_element_t () [inline]

5.143.3 Member Data Documentation

5.143.3.1 template < class T > mha_rt_fifo_element_t < T > * mha_rt_fifo_element_t < T > ::next

Pointer to next fifo element. NULL for the last (newest) fifo element.

5.143.3.2 template < class T > bool mha_rt_fifo_element_t < T >::abandonned

Indicates that this element will no longer be used and may be deleted.

5.143.3.3 template < class T > T* mha_rt_fifo_element_t < T >::data

Pointer to user data.

The documentation for this class was generated from the following file:

· mha_fifo.h

5.144 mha_rt_fifo_t< T > Class Template Reference

Template class for thread safe, half real time safe fifo without explixit locks.

Public Member Functions

mha_rt_fifo_t ()

Construct empty fifo.

• ~mha_rt_fifo_t ()

Destructor will delete all data currently in the fifo.

T * poll ()

Retrieve the latest element in the Fifo.

• T * poll_1 ()

Retrieve the next element in the Fifo, if there is one, and mark the previous element as abandonned.

void push (T *data)

Add element to the Fifo.

Private Member Functions

void remove_abandonned ()

Deletes abandonned elements.

void remove_all ()

Deletes all elements.

Private Attributes

mha_rt_fifo_element_t < T > * root

The first element in the fifo. Deleting elements starts here.

mha_rt_fifo_element_t< T > * current

The element most recently returned by **poll** (p. 428) or **poll_1** (p. 428).

5.144.1 Detailed Description

```
\label{template} \begin{array}{l} \text{template}{<}\text{class T}{>} \\ \text{class mha\_rt\_fifo\_t}{<}\text{ T}{>} \end{array}
```

Template class for thread safe, half real time safe fifo without explixit locks.

Reading from this fifo is realtime safe, writing to it is not. This fifo is designed for objects that were constructed on the heap. It assumes ownership of these objects and calls delete on them when they are no longer used. Objects remain inside the Fifo while being used by the reader.

A new fifo element is inserted by using **push** (p. 428). The push operation is not real time safe, it allocates and deallocates memory. The latest element is retrieved by calling **poll** (p. 428). This operation will skip fifo elements if more than one **push** (p. 428) has been occured since the last poll. To avoid skipping, call the **poll_1** (p. 428) operation instead.

5.144.2 Constructor & Destructor Documentation

```
5.144.2.1 template < class T > mha_rt_fifo_t < T > ::mha_rt_fifo_t ( ) [inline]
```

Construct empty fifo.

```
5.144.2.2 template < class T > mha_rt_fifo_t < T >::~mha_rt_fifo_t ( ) [inline]
```

Destructor will delete all data currently in the fifo.

5.144.3 Member Function Documentation

```
5.144.3.1 template < class T > T* mha_rt_fifo_t < T >::poll( ) [inline]
```

Retrieve the latest element in the Fifo.

Will skip fifo elements if more than one element has been added since last poll invocation. Will return the same element as on last call if no elements have been added in the mean time. Marks former elements as abandonned.

Returns

The latest element in this Fifo. Returns NULL if the Fifo is empty.

```
5.144.3.2 template < class T > T* mha_rt_fifo_t < T >::poll_1 ( ) [inline]
```

Retrieve the next element in the Fifo, if there is one, and mark the previous element as abandonned.

Else, if there is no newer element, returns the same element as on last **poll()** (p. 428) or **poll_1()** (p. 428) invocation.

Returns

The next element in this Fifo, if there is one, or the same as before. Returns NULL if the Fifo is empty.

5.144.3.3 template
$$<$$
 class T $>$ void mha_rt_fifo_t $<$ T $>$::push (T $*$ data) [inline]

Add element to the Fifo.

Deletes abandonned elements in the fifo.

Parameters

data The new user data to place at the end of the fifo. After this invocation, the fifo is the owner of this object and will delete it when it is no longer used. data must have been allocated on the heap with standard operator new.

5.144.3.4 template
$$<$$
 class T $>$ void mha_rt_fifo_t $<$ T $>$::remove_abandonned() [inline], [private]

Deletes abandonned elements.

5.144.3.5 template < class T > void mha_rt_fifo_t < T >::remove_all() [inline], [private]

Deletes all elements.

5.144.4 Member Data Documentation

The first element in the fifo. Deleting elements starts here.

5.144.4.2 template
$$<$$
 class T $>$ mha_rt_fifo_element_t $<$ T $>*$ mha_rt_fifo_t $<$ T $>$::current [private]

The element most recently returned by **poll** (p. 428) or **poll_1** (p. 428).

Searching for new elements starts here.


The documentation for this class was generated from the following file:

mha_fifo.h

5.145 mha_spec_t Struct Reference

Spectrum signal structure.

Inheritance diagram for mha_spec_t:

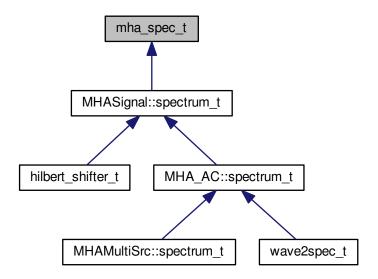

Public Attributes

mha complex t * buf

signal buffer

unsigned int num_channels

number of channels

unsigned int num_frames

number of frames in each channel

mha_channel_info_t * channel_info

detailed channel description

5.145.1 Detailed Description

Spectrum signal structure.

This structure contains the short time fourier transform output of the windowed input signal. The member num_frames describes the number of frequency bins in each channel. For an even FFT length N, this is N/2+1. With odd FFT lengths, it is (N+1)/2. The imaginary part of the first bin is zero. For even FFT lengths, also the imaginary part at the Nyquist frequency is zero.

buf[k].re	Re(0)	Re(1)	Re(2)	Re(3)	Re(4)	 Re(n/2-1)	Re(n/2)
buf[k].im		Im(1)	Im(2)	Im(3)	Im(4)	 Im(n/2-1)	
k	0	1	2	3	4	n/2-1	n/2

Figure 4 Data order of FFT spectrum.

5.145.2 Member Data Documentation

5.145.2.1 mha_complex_t* mha_spec_t::buf

signal buffer

5.145.2.2 unsigned int mha_spec_t::num_channels

number of channels

5.145.2.3 unsigned int mha_spec_t::num_frames

number of frames in each channel

5.145.2.4 mha_channel_info_t* mha_spec_t::channel_info

detailed channel description


The documentation for this struct was generated from the following file:

· mha.h

5.146 MHA_TCP::Async_Notify Class Reference

Portable Multiplexable cross-thread notification.

Inheritance diagram for MHA_TCP::Async_Notify:

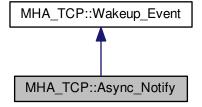

Public Member Functions

- Async_Notify ()
- virtual void reset ()
- virtual void set ()
- virtual ~Async_Notify ()

Private Attributes

• int **pipe** [2]

Additional Inherited Members

5.146.1 Detailed Description

Portable Multiplexable cross-thread notification.

5.146.2 Constructor & Destructor Documentation

5.146.2.1 Async_Notify::Async_Notify()

5.146.2.2 Async_Notify::~Async_Notify() [virtual]

5.146.3 Member Function Documentation

5.146.3.1 void Async_Notify::reset() [virtual]

Reimplemented from MHA_TCP::Wakeup_Event (p. 458).

5.146.3.2 void Async_Notify::set() [virtual]

5.146.4 Member Data Documentation

5.146.4.1 int MHA_TCP::Async_Notify::pipe[2] [private]


The documentation for this class was generated from the following files:

- · mha_tcp.hh
- · mha_tcp.cpp

5.147 MHA_TCP::Client Class Reference

A portable class for a tcp client connections.

Inheritance diagram for MHA_TCP::Client:

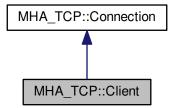

Public Member Functions

- **Client** (const std::string &host, unsigned short port)

 Constructor connects to host, port via TCP.
- Client (const std::string &host, unsigned short port, Timeout_Watcher &timeout_← watcher)

Constructor connects to host, port via TCP, using a timeout.

Additional Inherited Members

5.147.1 Detailed Description

A portable class for a tcp client connections.

5.147.2 Constructor & Destructor Documentation

```
5.147.2.1 Client::Client (
const std::string & host,
unsigned short port )
```

Constructor connects to host, port via TCP.

Parameters

host	The hostname of the TCP Server (p. 444).
port	The port or the TCP Server (p. 444).

Constructor connects to host, port via TCP, using a timeout.

Parameters

host	The hostname of the TCP Server (p. 444).
port	The port or the TCP Server (p. 444).
timeout_watcher	an Event watcher that implements a timeout.

The documentation for this class was generated from the following files:


mha_tcp.hh

mha_tcp.cpp

5.148 MHA_TCP::Connection Class Reference

Connection (p. 434) handles Communication between client and server, is used on both sides.

Inheritance diagram for MHA_TCP::Connection:

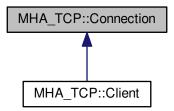

Public Member Functions

- Sockread_Event * get_read_event ()
- Sockwrite_Event * get_write_event ()
- std::string get_peer_address ()

Get peer's IP Address.

unsigned short get_peer_port ()

Get peer's TCP port.

• SOCKET get_fd () const

Return the (protected) file descriptor of the connection.

virtual ~Connection ()

Destructor closes the underlying file descriptor.

• bool **eof** ()

Checks if the peer has closed the connection.

bool can_read_line (char delim= '\n')

Checks if a full line of text has arrived by now.

bool can_read_bytes (unsigned howmany)

Checks if the specified ammount of data can be read.

std::string read_line (char delim= '\n')

Reads a single line of data from the socket.

std::string read_bytes (unsigned howmany)

Reads the specified ammount of dat from the socket.

void try_write (const std::string &data="")

Adds data to the internal "outgoing" buffer, and then tries to write as much data from that buffer to the socket as possible without blocking.

void write (const std::string &data="")

Adds data to the internal "outgoing" buffer, and then writes that that buffer to the socket, regardless of blocking.

bool needs_write ()

Checks if the internal "outgoing" buffer contains data.

• unsigned buffered_incoming_bytes () const

Returns the number of bytes in the internal "incoming" buffer.

• unsigned buffered_outgoing_bytes () const

Returns the number of bytes in the internal "outgoing" buffer.

Protected Member Functions

Connection (SOCKET _fd)

Create a connection instance from a socket filedescriptor.

Protected Attributes

SOCKET fd

The file descriptor of the TCP Socket.

Private Member Functions

• void init peer data ()

determine peer address and port

bool can sysread ()

Determine wether at least 1 byte can be read without blocking.

• bool can_syswrite ()

Determine wether at least 1 byte can be written without blocking.

std::string sysread (unsigned bytes)

Call the system's read function and try to read bytes.

std::string syswrite (const std::string &data)

Call the system's write function and try to write all characters in the string data.

Private Attributes

- · std::string outbuf
- std::string inbuf
- Sockread Event * read event
- Sockwrite_Event * write_event
- bool closed
- struct sockaddr_in peer_addr

5.148.1 Detailed Description

Connection (p. 434) handles Communication between client and server, is used on both sides.

```
5.148.2 Constructor & Destructor Documentation
```

```
5.148.2.1 MHA_TCP::Connection::Connection (
SOCKET_fd) [protected]
```

Create a connection instance from a socket filedescriptor.

Parameters

```
    ← The file descriptor of the TCP Socket. This file descriptor is closed again in the destructor.
    fd
```

Exceptions

```
MHA_Error (p. 410) If the file descriptor is < 0.
```

```
5.148.2.2 Connection::~Connection() [virtual]
```

Destructor closes the underlying file descriptor.

5.148.3 Member Function Documentation

```
5.148.3.1 void MHA_TCP::Connection::init_peer_data() [private]
```

determine peer address and port

```
5.148.3.2 bool Connection::can_sysread() [private]
```

Determine wether at least 1 byte can be read without blocking.

```
5.148.3.3 bool Connection::can_syswrite() [private]
```

Determine wether at least 1 byte can be written without blocking.

```
5.148.3.4 std::string Connection::sysread (
unsigned bytes ) [private]
```

Call the system's read function and try to read bytes.

This will block in a situation where can_sysread returns false.

Parameters

Returns

The characters read from the socket. The result may have fewer characters than specified by bytes. If the result is an empty string, then the socket has been closed by the peer.

```
5.148.3.5 std::string Connection::syswrite (
const std::string & data ) [private]
```

Call the system's write function and try to write all characters in the string data.

May write fewer characters, but will at least write one character.

Parameters

Returns

The rest of the characters that have not yet been written.

```
5.148.3.6 Sockread_Event * Connection::get_read_event()

5.148.3.7 Sockwrite_Event * Connection::get_write_event()

5.148.3.8 std::string Connection::get_peer_address()

Get peer's IP Address.

5.148.3.9 unsigned short Connection::get_peer_port()

Get peer's TCP port.

5.148.3.10 SOCKET MHA_TCP::Connection::get_fd() const [inline]
```

Return the (protected) file descriptor of the connection.

Will be required for SSL.

```
5.148.3.11 bool Connection::eof ( )
```

Checks if the peer has closed the connection.

As a side effect, this method fills the internal "incoming" buffer if it was empty and the socket is readable and not eof.

```
5.148.3.12 bool Connection::can_read_line ( char delim = '\n')
```

Checks if a full line of text has arrived by now.

This method reads data from the socket into the internal "incoming" buffer if it can be done without blocking.

Parameters

```
delim The line delimiter.
```

Returns

true if at least one full line of text is present in the internal buffer after this method call, false otherwise.

```
5.148.3.13 bool Connection::can_read_bytes ( unsigned howmany )
```

Checks if the specified ammount of data can be read.

This method reads data from the socket into an internal "incoming" buffer if it can be done without blocking.

Parameters

howmany	The number of byte	es that the caller wants to have checked.

Returns

true if at least the specified ammount of data is present in the internal buffer after this method call, false otherwise

```
5.148.3.14 std::string Connection::read_line ( char delim = ' \n ' )
```

Reads a single line of data from the socket.

Blocks if necessary.

Parameters

delim	The line delimiter.
aciiiii	THE MILE GENTING.

Returns

The string of characters in this line, including the trailing delimiter. The delimiter may be missing if the last line before EOF does not have a delimiter.

```
5.148.3.15 std::string Connection::read_bytes ( unsigned howmany )
```

Reads the specified ammount of dat from the socket.

Blocks if necessary.

Parameters

howmany	The number of bytes to read.
---------	------------------------------

Returns

The string of characters read. The string may be shorter if EOF is encountered.

```
5.148.3.16 void Connection::try_write (
const std::string & data = " " )
```

Adds data to the internal "outgoing" buffer, and then tries to write as much data from that buffer to the socket as possible without blocking.

Parameters

```
data data to send over the socket.
```

```
5.148.3.17 void Connection::write (

const std::string & data = " " )
```

Adds data to the internal "outgoing" buffer, and then writes that that buffer to the socket, regardless of blocking.

Parameters

data data to send over the socket

```
5.148.3.18 bool Connection::needs_write ( )
Checks if the internal "outgoing" buffer contains data.
5.148.3.19 unsigned Connection::buffered incoming bytes ( ) const
Returns the number of bytes in the internal "incoming" buffer.
5.148.3.20 unsigned Connection::buffered_outgoing_bytes ( ) const
Returns the number of bytes in the internal "outgoing" buffer.
5.148.4 Member Data Documentation
5.148.4.1 std::string MHA_TCP::Connection::outbuf [private]
5.148.4.2 std::string MHA_TCP::Connection::inbuf [private]
5.148.4.3 Sockread Event* MHA TCP::Connection::read event [private]
5.148.4.4 Sockwrite_Event* MHA_TCP::Connection::write_event [private]
5.148.4.5 bool MHA_TCP::Connection::closed [private]
5.148.4.6 struct sockaddr_in MHA_TCP::Connection::peer_addr [private]
```

The file descriptor of the TCP Socket.

The documentation for this class was generated from the following files:


5.148.4.7 SOCKET MHA_TCP::Connection::fd [protected]

- mha tcp.hh
- mha_tcp.cpp

5.149 MHA_TCP::Event_Watcher Class Reference

OS-independent event watcher, uses select on Unix and WaitForMultipleObjects on Windows.

Inheritance diagram for MHA_TCP::Event_Watcher:

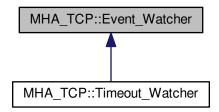

Public Types

- typedef std::set< Wakeup_Event * > Events
- typedef std::set< Wakeup_Event * >::iterator iterator

Public Member Functions

- void observe (Wakeup_Event *event)
 - Add an event to this observer.
- void ignore (Wakeup_Event *event)

Remove an event from this observer.

- std::set< Wakeup_Event * > wait ()
 - \ Wait for some event to occur.
- virtual ~Event_Watcher ()

Private Attributes

• std::set< Wakeup_Event * > events

The list of events to watch.

5.149.1 Detailed Description

OS-independent event watcher, uses select on Unix and WaitForMultipleObjects on Windows.

```
5.149.2 Member Typedef Documentation
5.149.2.1 typedef std::set<Wakeup_Event*> MHA_TCP::Event_Watcher::Events
5.149.2.2 typedef std::set<Wakeup_Event*>::iterator MHA_TCP::Event_Watcher::iterator
5.149.3 Constructor & Destructor Documentation
5.149.3.1 Event_Watcher::~Event_Watcher() [virtual]
5.149.4 Member Function Documentation
5.149.4.1 void Event_Watcher::observe (
                     Wakeup Event * event )
Add an event to this observer.
5.149.4.2 void Event_Watcher::ignore (
                     Wakeup_Event * event )
Remove an event from this observer.
5.149.4.3 std::set < Wakeup_Event * > Event_Watcher::wait ( )
\ Wait for some event to occur.
Return all events that are ready
5.149.5 Member Data Documentation
        std::set<Wakeup Event*> MHA TCP::Event Watcher::events [private]
The list of events to watch.
```

The documentation for this class was generated from the following files:

- mha_tcp.hh
- mha_tcp.cpp

5.150 MHA_TCP::OS_EVENT_TYPE Struct Reference

Public Types

Public Attributes

```
    enum MHA_TCP::OS_EVENT_TYPE:: { ... } mode
    union {
        int fd
        double timeout
        };
```

- 5.150.1 Member Enumeration Documentation
- 5.150.1.1 anonymous enum

Enumerator

R

W

X

T

- 5.150.2 Member Data Documentation
- 5.150.2.1 enum { ... } MHA_TCP::OS_EVENT_TYPE::mode
- 5.150.2.2 int MHA_TCP::OS_EVENT_TYPE::fd
- 5.150.2.3 double MHA_TCP::OS_EVENT_TYPE::timeout
- 5.150.2.4 union { ... }

The documentation for this struct was generated from the following file:

mha_tcp.hh

5.151 MHA_TCP::Server Class Reference

Public Member Functions

• Server (unsigned short port=0, const std::string &iface="0.0.0.0")

Create a TCP server socket.

Server (const std::string &iface, unsigned short port=0)

Create a TCP server socket.

• ∼Server ()

Close the TCP server socket.

• std::string **get_interface** () const

Get the name given in the constructor for the network interface.

• unsigned short **get_port** () const

Get the port that the TCP server socket currently listens to.

Sockaccept_Event * get_accept_event ()

Produces an event that can be observed by an **Event_Watcher** (p. 441).

Connection * accept ()

Accept an incoming connection.

Connection * try_accept ()

Accept an incoming connection if it can be done without blocking.

Private Member Functions

• void initialize (const std::string &iface, unsigned short port)

Private Attributes

- sockaddr_in sock_addr
- SOCKET serversocket
- std::string iface
- unsigned short port
- Sockaccept Event * accept event

5.151.1 Constructor & Destructor Documentation

```
5.151.1.1 Server::Server (

unsigned short port = 0,

const std::string & iface = " 0 . 0 . 0 . 0 " )
```

Create a TCP server socket.

Parameters

port	The TCP port to listen to.
iface	The network interface to bind to.

```
5.151.1.2 Server::Server (

const std::string & iface,

unsigned short port = 0 )
```

Create a TCP server socket.

Parameters

port	The TCP port to listen to.
iface	The network interface to bind to.

```
5.151.1.3 Server::∼Server ( )
```

Close the TCP server socket.

5.151.2 Member Function Documentation

5.151.2.2 std::string Server::get_interface () const

Get the name given in the constructor for the network interface.

5.151.2.3 unsigned short Server::get_port () const

Get the port that the TCP server socket currently listens to.

5.151.2.4 Sockaccept_Event * Server::get_accept_event()

Produces an event that can be observed by an **Event_Watcher** (p. 441).

This event signals incoming connections that can be accepted.

```
5.151.2.5 Connection * Server::accept ( )
```

Accept an incoming connection.

blocks if necessary.

Returns

The new TCP connection. The connection has to be deleted by the caller.

```
5.151.2.6 Connection * Server::try_accept ( )
```

Accept an incoming connection if it can be done without blocking.

Returns

The new TCP connection or 0 if there is no immediate connection. The connection has to be deleted by the caller.

```
5.151.3 Member Data Documentation
```

```
5.151.3.1 sockaddr_in MHA_TCP::Server::sock_addr [private]
```

5.151.3.2 SOCKET MHA_TCP::Server::serversocket [private]

```
5.151.3.3 std::string MHA_TCP::Server::iface [private]
```

5.151.3.4 unsigned short MHA_TCP::Server::port [private]

```
5.151.3.5 Sockaccept_Event* MHA_TCP::Server::accept_event [private]
```

The documentation for this class was generated from the following files:

- · mha tcp.hh
- mha_tcp.cpp

5.152 MHA_TCP::sock_init_t Class Reference

Public Member Functions

sock_init_t ()


5.152.1 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

mha_tcp.cpp

5.153 MHA_TCP::Sockaccept_Event Class Reference

Inheritance diagram for MHA_TCP::Sockaccept_Event:

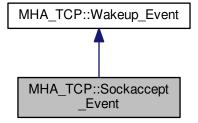

Public Member Functions

Sockaccept_Event (SOCKET)

Additional Inherited Members

5.153.1 Constructor & Destructor Documentation


The documentation for this class was generated from the following files:

- mha_tcp.hh
- mha_tcp.cpp

5.154 MHA_TCP::Sockread_Event Class Reference

Watch socket for incoming data.

Inheritance diagram for MHA_TCP::Sockread_Event:

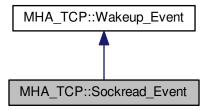

Public Member Functions

Sockread_Event (SOCKET s)

Set socket to watch for.

Additional Inherited Members

5.154.1 Detailed Description

Watch socket for incoming data.

5.154.2 Constructor & Destructor Documentation

5.154.2.1 MHA_TCP::Sockread_Event::Sockread_Event (SOCKET s)

Set socket to watch for.

Parameters


s The socket to observe incoming data on.

The documentation for this class was generated from the following files:

- mha_tcp.hh
- · mha_tcp.cpp

5.155 MHA_TCP::Sockwrite_Event Class Reference

Inheritance diagram for MHA_TCP::Sockwrite_Event:

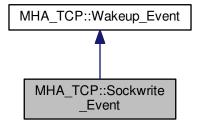

Public Member Functions

• Sockwrite_Event (SOCKET s)

Additional Inherited Members

5.155.1 Constructor & Destructor Documentation

The documentation for this class was generated from the following files:

- mha_tcp.hh
- mha_tcp.cpp

5.156 MHA_TCP::Thread Class Reference

A very simple class for portable threads.

Public Types

typedef void *(* thr_f) (void *)

The thread function signature to use with this class.

Public Member Functions

Thread (thr_f func, void *arg=0)

Constructor starts a new thread.

virtual ∼Thread ()

The destructor should only be called when the **Thread** (p. 449) is finished.

• virtual void run ()

The internal method that delegated the new thread to the registered Thread (p. 449) function.

Public Attributes

· Async_Notify thread_finish_event

Event will be triggered when the thread exits.

enum MHA_TCP::Thread:: { ... } state

The current state of the thread.

thr_f thread_func

The thread function that the client has registered.

void * thread_arg

The argument that the client wants to be handed through to the thread function.

MHA_Error * error

The MHA_Error (p. 410) that caused the thread to abort, if any.

Protected Member Functions

Thread ()

Default constructor may only be used by derived classes that want to start the thread themselves.

Protected Attributes

void * arg

The argument for the client's thread function.

void * return value

The return value from the client's thread function is stored here When that function returns.

Private Attributes

• pthread_t thread_handle

The posix thread handle.

pthread_attr_t thread_attr

The posix thread attribute structure.

5.156.1 Detailed Description

A very simple class for portable threads.

5.156.2 Member Typedef Documentation

```
5.156.2.1 typedef void*(* MHA_TCP::Thread::thr_f) (void *)
```

The thread function signature to use with this class.

Derive from this class and call protected standard constructor to start threads differently.

5.156.3 Member Enumeration Documentation

5.156.3.1 anonymous enum

The current state of the thread.

Enumerator

PREPARED RUNNING FINISHED

5.156.4 Constructor & Destructor Documentation

```
5.156.4.1 MHA_TCP::Thread::Thread() [protected]
```

Default constructor may only be used by derived classes that want to start the thread themselves.

```
5.156.4.2 Thread::Thread (
Thread::thr_f func,
void * arg = 0)
```

Constructor starts a new thread.

Parameters

func	The function to be executed by the thread.
arg	The argument given to pass to the thread function.

```
5.156.4.3 Thread::~Thread() [virtual]
```

The destructor should only be called when the **Thread** (p. 449) is finished.

There is preliminary support for forceful thread cancellation in the destructor, but probably not very robust or portable..

5.156.5 Member Function Documentation

```
5.156.5.1 void Thread::run() [virtual]
```

The internal method that delegated the new thread to the registered **Thread** (p. 449) function.

5.156.6 Member Data Documentation

```
5.156.6.1 pthread_t MHA_TCP::Thread::thread_handle [private]
```

The posix thread handle.

```
5.156.6.2 pthread_attr_t MHA_TCP::Thread::thread_attr [private]
```

The posix thread attribute structure.

Required for starting a thread in detached state. Detachment is required to eliminate the need for joining this thread.

```
5.156.6.3 void* MHA_TCP::Thread::arg [protected]
```

The argument for the client's thread function.

```
5.156.6.4 void* MHA_TCP::Thread::return_value [protected]
```

The return value from the client's thread function is stored here When that function returns.

5.156.6.5 Async_Notify MHA_TCP::Thread::thread_finish_event

Event will be triggered when the thread exits.

5.156.6.6 enum { ... } MHA_TCP::Thread::state

The current state of the thread.

5.156.6.7 thr_f MHA_TCP::Thread::thread_func

The thread function that the client has registered.

5.156.6.8 void* MHA_TCP::Thread::thread_arg

The argument that the client wants to be handed through to the thread function.

5.156.6.9 MHA_Error* MHA_TCP::Thread::error


The MHA_Error (p. 410) that caused the thread to abort, if any.

The documentation for this class was generated from the following files:

- · mha_tcp.hh
- · mha_tcp.cpp

5.157 MHA_TCP::Timeout_Event Class Reference

Inheritance diagram for MHA_TCP::Timeout_Event:

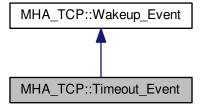

Public Member Functions

- Timeout_Event (double interval)
- virtual OS_EVENT_TYPE get_os_event ()

Private Attributes

double end_time

Additional Inherited Members

- 5.157.1 Constructor & Destructor Documentation
- 5.157.1.1 Timeout_Event::Timeout_Event (double *interval*)
- 5.157.2 Member Function Documentation
- 5.157.2.1 OS_EVENT_TYPE Timeout_Event::get_os_event() [virtual]

Reimplemented from MHA_TCP::Wakeup_Event (p. 457).


- 5.157.3 Member Data Documentation
- **5.157.3.1** double MHA_TCP::Timeout_Event::end_time [private]

The documentation for this class was generated from the following files:

- mha_tcp.hh
- mha_tcp.cpp
- 5.158 MHA_TCP::Timeout_Watcher Class Reference

OS-independent event watcher with internal fixed-end-time timeout.

Inheritance diagram for MHA TCP::Timeout Watcher:

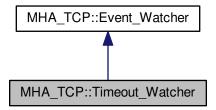

Public Member Functions

- Timeout_Watcher (double interval)
- virtual ~Timeout_Watcher ()

Private Attributes

Timeout_Event timeout

Additional Inherited Members

5.158.1 Detailed Description

OS-independent event watcher with internal fixed-end-time timeout.

5.158.2 Constructor & Destructor Documentation

5.158.2.2 Timeout_Watcher::~Timeout_Watcher() [virtual]

5.158.3 Member Data Documentation

5.158.3.1 Timeout_Event MHA_TCP::Timeout_Watcher::timeout [private]


The documentation for this class was generated from the following files:

- mha_tcp.hh
- mha_tcp.cpp

5.159 MHA_TCP::Wakeup_Event Class Reference

A base class for asynchronous wakeup events.

Inheritance diagram for MHA_TCP::Wakeup_Event:

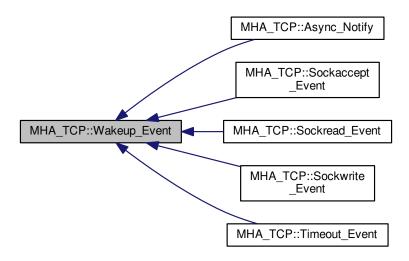

Public Member Functions

Wakeup_Event ()

Event Constructor.

virtual void observed_by (Event_Watcher *observer)

Called by the Event_Watcher (p. 441) when this event is added to its list of observed events.

virtual void ignored_by (Event_Watcher *observer)

Called by the **Event_Watcher** (p. 441) when this event is removed from its list of observed events.

virtual ~Wakeup Event ()

Destructor deregisters from observers.

virtual OS_EVENT_TYPE get_os_event ()

Get necessary information for the Event Watcher.

• virtual void reset ()

For pure notification events, reset the "signalled" status.

• virtual bool status ()

Query wether the event is in signalled state now.

Protected Attributes

- OS_EVENT_TYPE os_event
- bool os_event_valid

Private Attributes

std::set< class Event Watcher * > observers

A list of all **Event_Watcher** (p. 441) instances that this **Wakeup_Event** (p. 456) is observed by (stored here for proper deregistering).

5.159.1 Detailed Description

A base class for asynchronous wakeup events.

5.159.2 Constructor & Destructor Documentation

```
5.159.2.1 Wakeup_Event::Wakeup_Event()
```

Event Constructor.

The new event has invalid state.

```
5.159.2.2 Wakeup_Event::~Wakeup_Event() [virtual]
```

Destructor deregisters from observers.

5.159.3 Member Function Documentation

Called by the **Event_Watcher** (p. 441) when this event is added to its list of observed events.

Called by the **Event_Watcher** (p. 441) when this event is removed from its list of observed events.

```
5.159.3.3 OS_EVENT_TYPE Wakeup_Event::get_os_event( ) [virtual]
```

Get necessary information for the Event Watcher.

Reimplemented in MHA_TCP::Timeout_Event (p. 454).

```
5.159.3.4 void Wakeup_Event::reset( ) [virtual]
```

For pure notification events, reset the "signalled" status.

Reimplemented in MHA_TCP::Async_Notify (p. 432).

```
5.159.3.5 bool Wakeup_Event::status( ) [virtual]
```

Query wether the event is in signalled state now.

5.159.4 Member Data Documentation

```
5.159.4.1 std::set<class Event_Watcher *> MHA_TCP::Wakeup_Event::observers [private]
```

A list of all **Event_Watcher** (p. 441) instances that this **Wakeup_Event** (p. 456) is observed by (stored here for proper deregistering).

```
5.159.4.2 OS_EVENT_TYPE MHA_TCP::Wakeup_Event::os_event [protected]
```

```
5.159.4.3 bool MHA_TCP::Wakeup_Event::os_event_valid [protected]
```

The documentation for this class was generated from the following files:

- mha_tcp.hh
- · mha_tcp.cpp

5.160 mha_tictoc_t Struct Reference

Public Attributes

- struct timeval tv1
- struct timeval tv2
- struct timezone tz
- float t

```
5.160.1 Member Data Documentation
```

5.160.1.1 struct timeval mha_tictoc_t::tv1

5.160.1.2 struct timeval mha_tictoc_t::tv2

5.160.1.3 struct timezone mha tictoc t::tz

5.160.1.4 float mha_tictoc_t::t


The documentation for this struct was generated from the following file:

· mha profiling.h

5.161 mha_wave_t Struct Reference

Waveform signal structure.

Inheritance diagram for mha_wave_t:

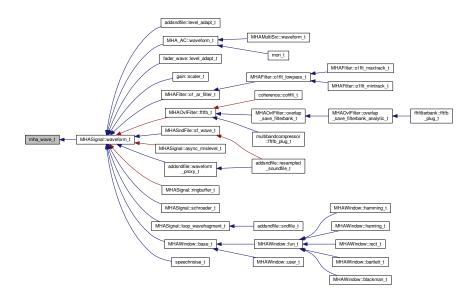

Public Attributes

- mha_real_t * buf
 - signal buffer
- unsigned int num_channels

number of channels

• unsigned int num_frames

number of frames in each channel

mha_channel_info_t * channel_info

detailed channel description

5.161.1 Detailed Description

Waveform signal structure.

This structure contains one fragment of a waveform signal. The member num_frames describes the number of audio samples in each audio channel.

The field channel_info must be an array of num_channels entries or NULL.

5.161.2 Member Data Documentation

5.161.2.1 mha_real_t* mha_wave_t::buf

signal buffer

5.161.2.2 unsigned int mha_wave_t::num_channels

number of channels

5.161.2.3 unsigned int mha_wave_t::num_frames

number of frames in each channel

5.161.2.4 mha_channel_info_t* mha_wave_t::channel_info


detailed channel description

The documentation for this struct was generated from the following file:

· mha.h

5.162 mhachain::chain_base_t Class Reference

Inheritance diagram for mhachain::chain_base_t:

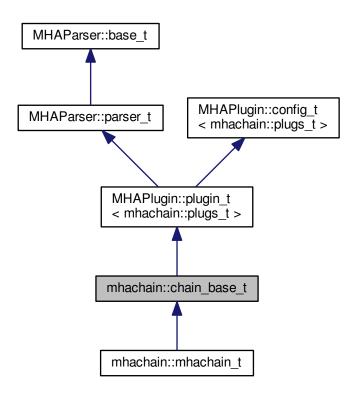

Public Member Functions

```
chain_base_t (algo_comm_t, const std::string &, const std::string &)
void process (mha_wave_t *, mha_wave_t **)
void process (mha_spec_t *, mha_wave_t **)
void process (mha wave t *, mha spec t **)
```

- void process (mha_spec_t *, mha_spec_t **)
- void prepare (mhaconfig t &)
- void release ()

Protected Attributes

MHAParser::bool_t bprofiling

MHAParser::vstring_t algos

Private Member Functions

• void update ()

Private Attributes

- std::vector< std::string > old_algos
- MHAEvents::patchbay t< mhachain::chain base t > patchbay
- · mhaconfig_t cfin
- mhaconfig_t cfout
- bool b prepared
- std::string chain

Additional Inherited Members

```
5.162.1 Constructor & Destructor Documentation
```

5.162.2 Member Function Documentation


```
5.162.2.2 void mhachain::chain base t::process (
                     mha_spec_t * sin,
                     mha wave t ** sout )
5.162.2.3 void mhachain::chain_base_t::process (
                     mha wave t * sin,
                     mha spec t ** sout )
5.162.2.4 void mhachain::chain base t::process (
                     mha spec t * sin,
                     mha_spec_t ** sout )
5.162.2.5 void mhachain::chain_base_t::prepare (
                     mhaconfig_t & cf ) [virtual]
Implements MHAPlugin::plugin t < mhachain::plugs t > (p. 693).
5.162.2.6 void mhachain::chain base t::release (
                     void ) [virtual]
Reimplemented from MHAPlugin::plugin t < mhachain::plugs t > (p. 694).
5.162.2.7 void mhachain::chain base t::update() [private]
5.162.3 Member Data Documentation
5.162.3.1 MHAParser::bool_t mhachain::chain_base_t::bprofiling [protected]
5.162.3.2 MHAParser::vstring t mhachain::chain_base_t::algos [protected]
5.162.3.3 std::vector<std::string> mhachain::chain_base_t::old_algos [private]
5.162.3.4 MHAEvents::patchbay_t< mhachain::chain_base_t >
         mhachain::chain_base_t::patchbay [private]
5.162.3.5 mhaconfig t mhachain::chain_base_t::cfin [private]
5.162.3.6 mhaconfig t mhachain::chain base t::cfout [private]
5.162.3.7 bool mhachain::chain_base_t::b_prepared [private]
5.162.3.8 std::string mhachain::chain_base_t::chain [private]
```

The documentation for this class was generated from the following files:

- · mha_generic_chain.h
- mha_generic_chain.cpp

5.163 mhachain::mhachain_t Class Reference

Inheritance diagram for mhachain::mhachain_t:

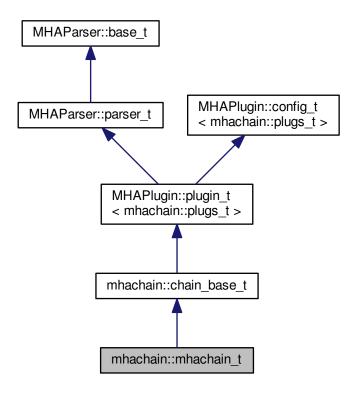

Public Member Functions

• mhachain_t (algo_comm_t iac, const std::string &ichain, const std::string &ialgo)

Additional Inherited Members

5.163.1 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

mhachain.cpp

5.164 mhachain::plugs_t Class Reference

Public Member Functions

- plugs_t (std::vector< std::string > algos, mhaconfig_t cfin, mhaconfig_t cfout, bool do_prepare, MHAParser::parser_t &p, algo_comm_t iac, std::string ichain, bool use_← profiling)
- ~plugs_t ()
- void prepare (mhaconfig t &)
- void release ()
- void process (mha_wave_t *, mha_spec_t *, mha_wave_t **, mha_spec_t **)
- bool prepared () const

Private Member Functions

- void alloc_plugs (std::vector< std::string > algos)
- void cleanup plugs ()
- void update_proc_load ()

Private Attributes

- bool b_prepared
- std::vector< PluginLoader::mhapluginloader_t * > algos
- MHAParser::parser_t & parser
- · algo comm tac
- std::string chain
- MHAParser::parser_t profiling
- MHAParser::vstring_mon_t prof_algos
- MHAParser::vfloat mon t prof init
- MHAParser::vfloat_mon_t prof_prepare
- MHAParser::vfloat_mon_t prof_release
- MHAParser::vfloat_mon_t prof_process
- · MHAParser::float mon t prof process tt
- MHAParser::vfloat_mon_t prof_process_load
- unsigned int proc cnt
- mhaconfig_t prof_cfg
- MHAEvents::connector t< mhachain::plugs t > prof load con
- MHAEvents::connector_t< mhachain::plugs_t > prof_tt_con
- bool b use profiling
- mha_platform_tictoc_t tictoc

```
5.164.1 Constructor & Destructor Documentation
5.164.1.1 mhachain::plugs_t::plugs_t (
                      std::vector < std::string > algos,
                      mhaconfig_t cfin,
                      mhaconfig_t cfout,
                      bool do_prepare,
                      MHAParser::parser t & p,
                      algo_comm_t iac,
                      std::string ichain,
                      bool use_profiling )
5.164.1.2 mhachain::plugs_t::~plugs_t ( )
5.164.2 Member Function Documentation
5.164.2.1 void mhachain::plugs_t::prepare (
                      mhaconfig t & tf)
5.164.2.2 void mhachain::plugs_t::release (
                      void )
5.164.2.3 void mhachain::plugs t::process (
                      mha_wave_t * win,
                      mha_spec_t * sin,
                      mha_wave_t ** wout,
                      mha_spec_t ** sout )
5.164.2.4 bool mhachain::plugs_t::prepared ( ) const [inline]
5.164.2.5 void mhachain::plugs_t::alloc_plugs (
                      std::vector < std::string > algos ) [private]
5.164.2.6 void mhachain::plugs_t::cleanup_plugs( ) [private]
5.164.2.7 void mhachain::plugs_t::update_proc_load( ) [private]
5.164.3 Member Data Documentation
5.164.3.1 bool mhachain::plugs_t::b_prepared [private]
5.164.3.2 std::vector< PluginLoader::mhapluginloader_t* > mhachain::plugs_t::algos
          [private]
5.164.3.3 MHAParser::parser_t& mhachain::plugs_t::parser [private]
```

```
5.164.3.4 algo_comm_t mhachain::plugs_t::ac [private]
5.164.3.5 std::string mhachain::plugs_t::chain [private]
5.164.3.6 MHAParser::parser_t mhachain::plugs_t::profiling [private]
5.164.3.7 MHAParser::vstring_mon_t mhachain::plugs_t::prof_algos [private]
5.164.3.8 MHAParser::vfloat mon t mhachain::plugs_t::prof_init [private]
5.164.3.9 MHAParser::vfloat_mon_t mhachain::plugs_t::prof_prepare [private]
5.164.3.10 MHAParser::vfloat_mon_t mhachain::plugs_t::prof_release [private]
5.164.3.11 MHAParser::vfloat mon t mhachain::plugs_t::prof_process [private]
5.164.3.12 MHAParser::float_mon_t mhachain::plugs_t::prof_process_tt [private]
5.164.3.13 MHAParser::vfloat_mon_t mhachain::plugs_t::prof_process_load [private]
5.164.3.14 unsigned int mhachain::plugs_t::proc_cnt [private]
5.164.3.15 mhaconfig_t mhachain::plugs_t::prof_cfg [private]
5.164.3.16 MHAEvents::connector t<mhachain::plugs t> mhachain::plugs t::prof load con
          [private]
5.164.3.17 MHAEvents::connector_t<mhachain::plugs_t> mhachain::plugs_t::prof_tt_con
          [private]
5.164.3.18 bool mhachain::plugs_t::b_use_profiling [private]
5.164.3.19 mha_platform_tictoc_t mhachain::plugs_t::tictoc [private]
```


The documentation for this class was generated from the following files:

- · mha generic chain.h
- mha_generic_chain.cpp

5.165 mhaconfig_t Struct Reference

MHA prepare configuration structure.

Inheritance diagram for mhaconfig_t:

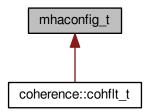

Public Attributes

· unsigned int channels

Number of audio channels.

unsigned int domain

Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)

· unsigned int fragsize

Fragment size of waveform data.

unsigned int wndlen

Window length of spectral data.

· unsigned int fftlen

FFT length of spectral data.

· mha_real_t srate

Sampling rate in Hz.

5.165.1 Detailed Description

MHA prepare configuration structure.

This structure contains information about channel number and domain for input and output signals of a openMHA Plugin. Each plugin can change any of these parameters, e.g. by resampling of the signal. The only limitation is that the callback frequency is fixed (except for the plugins db and dbasync).


Todo Add information on number of bands and on center frequencies, or replace by **mha**_← **audio_descriptor_t** (p. 393).

5.165.2 Member Data Documentation		
5.165.2.1 unsigned int mhaconfig_t::channels		
Number of audio channels.		
5.165.2.2 unsigned int mhaconfig_t::domain		
Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)		
5.165.2.3 unsigned int mhaconfig_t::fragsize		
Fragment size of waveform data.		
5.165.2.4 unsigned int mhaconfig_t::wndlen		
Window length of spectral data.		
5.165.2.5 unsigned int mhaconfig_t::fftlen		
FFT length of spectral data.		
5.165.2.6 mha_real_t mhaconfig_t::srate		
Sampling rate in Hz.		
The documentation for this struct was generated from the following file:		

• mha.h

5.166 MHAEvents::connector_base_t Class Reference

Inheritance diagram for MHAEvents::connector_base_t:

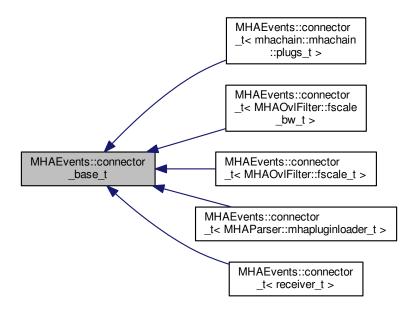

Public Member Functions

- connector_base_t ()
- virtual ~connector_base_t ()
- virtual void emit_event ()
- virtual void emit_event (const std::string &)
- virtual void emit_event (const std::string &, unsigned int, unsigned int)
- void emitter_die ()

Protected Attributes

• bool emitter_is_alive

5.166.1 Constructor & Destructor Documentation

- 5.166.1.1 MHAEvents::connector_base_t::connector_base_t ()
- 5.166.1.2 MHAEvents::connector_base_t::~connector_base_t() [virtual]


```
5.166.2 Member Function Documentation
5.166.2.1 void MHAEvents::connector_base_t::emit_event() [virtual]
Reimplemented in MHAEvents::connector_t< receiver_t >
                                                             (p. 472), MHAEvents←
::connector t< MHAOvlFilter::fscale bw t >
                                                (p. 472), MHAEvents::connector t<
MHAParser::mhapluginloader_t > (p. 472), MHAEvents::connector_t < mhachain <--
::mhachain::plugs t > (p. 472), and MHAEvents::connector t < MHAOvIFilter::fscale <math>t >
(p. 472).
5.166.2.2 void MHAEvents::connector_base_t::emit_event (
                   const std::string & ) [virtual]
Reimplemented in MHAEvents::connector_t< receiver_t >
                                                             (p. 472), MHAEvents←
::connector t < MHAOvIFilter::fscale bw t > (p. 472), MHAEvents::connector t <
MHAParser::mhapluginloader_t > (p. 472), MHAEvents::connector_t< mhachain -
::mhachain::plugs_t > (p. 472), and MHAEvents::connector_t < MHAOvIFilter::fscale_t >
(p. 472).
5.166.2.3 void MHAEvents::connector_base_t::emit_event (
                   const std::string & ,
                    unsigned int,
                    unsigned int ) [virtual]
Reimplemented in MHAEvents::connector_t< receiver_t > (p. 472), MHAEvents
::connector_t< MHAOvlFilter::fscale_bw_t > (p. 472), MHAEvents::connector_t<
MHAParser::mhapluginloader t > (p. 472), MHAEvents::connector t < mhachain ←
::mhachain::plugs_t > (p. 472), and MHAEvents::connector_t< MHAOvIFilter::fscale_t >
(p. 472).
5.166.2.4 void MHAEvents::connector_base_t::emitter_die ( )
5.166.3 Member Data Documentation
5.166.3.1 bool MHAEvents::connector_base_t::emitter_is_alive [protected]
```

The documentation for this class was generated from the following files:

- · mha event emitter.h
- mha events.cpp

5.167 MHAEvents::connector_t < receiver_t > Class Template Reference

Inheritance diagram for MHAEvents::connector_t< receiver_t >:

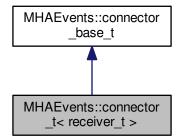

Public Member Functions

- connector_t (emitter_t *, receiver_t *, void(receiver_t::*)())
- connector_t (emitter_t *, receiver_t *, void(receiver_t::*)(const std::string &))
- connector_t (emitter_t *, receiver_t *, void(receiver_t::*)(const std::string &, unsigned int, unsigned int))
- ~connector_t ()

Private Member Functions

- void emit_event ()
- void emit_event (const std::string &)
- void emit_event (const std::string &, unsigned int, unsigned int)

Private Attributes

- emitter_t * emitter
- receiver t * receiver
- void(receiver_t::* eventhandler)()
- void(receiver_t::* eventhandler_s)(const std::string &)
- void(receiver_t::* eventhandler_suu)(const std::string &, unsigned int, unsigned int)

Additional Inherited Members

```
5.167.1 Constructor & Destructor Documentation
5.167.1.1 template < class receiver_t > MHAEvents::connector t < receiver_t >::connector t (
                      emitter t * e,
                      receiver_t * r,
                      void(receiver_t::*)() rfun )
5.167.1.2 template < class receiver_t > MHAEvents::connector_t < receiver_t >::connector_t (
                      emitter t * e.
                      receiver t * r.
                      void(receiver_t::*)(const std::string &) rfun )
5.167.1.3 template < class receiver_t > MHAEvents::connector t < receiver_t >::connector t (
                      emitter t * e,
                      receiver_t * r,
                      void(receiver_t::*)(const std::string &, unsigned int, unsigned int) rfun )
5.167.1.4 template < class receiver_t > MHAEvents::connector_t < receiver_t >::~connector_t (
5.167.2 Member Function Documentation
5.167.2.1 template < class receiver_t > void MHAEvents::connector_t < receiver_t > ::emit_event (
          ) [private], [virtual]
Reimplemented from MHAEvents::connector base t (p. 470).
5.167.2.2 template < class receiver_t > void MHAEvents::connector t < receiver_t > ::emit_event (
                      const std::string & arg ) [private], [virtual]
Reimplemented from MHAEvents::connector base t (p. 470).
5.167.2.3 template < class receiver_t > void MHAEvents::connector t < receiver_t > ::emit_event (
                      const std::string & arg,
                      unsigned int arg2,
                      unsigned int arg3 ) [private], [virtual]
Reimplemented from MHAEvents::connector_base_t (p. 470).
```

5.167.3 Member Data Documentation

```
5.167.3.1 template < class receiver_t > emitter_t * MHAEvents::connector_t < receiver_t >::emitter [private]
```

```
5.167.3.2 template < class receiver_t > receiver_t * MHAEvents::connector_t < receiver_t >::receiver [private]
```

```
5.167.3.3 template < class receiver_t > void(receiver_t::* MHAEvents::connector_t < receiver_t > ::eventhandler) () [private]
```

- 5.167.3.4 template < class receiver_t > void(receiver_t::* MHAEvents::connector_t < receiver_t >::eventhandler_s) (const std::string &) [private]
- 5.167.3.5 template < class receiver_t > void(receiver_t::* MHAEvents::connector_t < receiver_t >::eventhandler_suu) (const std::string &, unsigned int, unsigned int) [private]

The documentation for this class was generated from the following file:

· mha_events.h

5.168 MHAEvents::emitter t Class Reference

Class for emitting openMHA events.

Public Member Functions

- ~emitter_t ()
- void operator() ()

Emit an event without parameter.

void operator() (const std::string &)

Emit an event with string parameter.

• void operator() (const std::string &, unsigned int, unsigned int)

Emit an event with string parameter and two unsigned int parameters.

- void connect (connector_base_t *)
- void disconnect (connector_base_t *)

Private Attributes

std::list< connector_base_t * > connections

```
5.168.1 Detailed Description
```

Class for emitting openMHA events.

Use the template claas MHAEvents::patchbay_t (p. 475) for connecting to an emitter.

```
5.168.2 Constructor & Destructor Documentation
```

```
5.168.2.1 MHAEvents::emitter_t::~emitter_t ( )
```

5.168.3 Member Function Documentation

```
5.168.3.1 void MHAEvents::emitter_t::operator() ( )
```

Emit an event without parameter.

```
5.168.3.2 void MHAEvents::emitter_t::operator() ( const std::string & arg )
```

Emit an event with string parameter.

Emit an event with string parameter and two unsigned int parameters.

```
5.168.3.5 void MHAEvents::emitter_t::disconnect ( connector\_base\_t*c )
```

5.168.4 Member Data Documentation

```
5.168.4.1 std::list<connector_base_t*> MHAEvents::emitter_t::connections [private]
```

The documentation for this class was generated from the following files:

- mha_event_emitter.h
- mha_events.cpp

475

5.169 MHAEvents::patchbay_t< receiver_t > Class Template Reference

Patchbay which connects any event emitter with any member function of the parameter class.

Public Member Functions

- ~patchbay_t ()
- void connect (emitter_t *, receiver_t *, void(receiver_t::*)())

Connect a receiver member function void (receiver t::*)() with an event emitter.

- void connect (emitter_t *, receiver_t *, void(receiver_t::*)(const std::string &))
 Connect a receiver member function void (receiver_t::*)(const std::string&) with an event emitter
- void connect (emitter_t *, receiver_t *, void(receiver_t::*)(const std::string &, unsigned int, unsigned int))

Private Attributes

std::list< connector t< receiver t > * > cons

5.169.1 Detailed Description

```
template < class receiver_t > class MHAEvents::patchbay_t < receiver_t >
```

Patchbay which connects any event emitter with any member function of the parameter class.

The connections created by the **connect()** (p. 475) function are hold until the destructor is called. To avoid access to invalid function pointers, it is required to destruct the patchbay before the receiver, usually by declaring the patchbay as a member of the receiver.

The receiver can be any claas or structure; the event callback can be either a member function without arguments or with const std::string& argument.

```
5.169.2 Constructor & Destructor Documentation
```

```
5.169.2.1 template < class receiver_t > MHAEvents::patchbay_t < receiver_t >::~patchbay_t ( )
```

5.169.3 Member Function Documentation

Connect a receiver member function void (receiver_t::*)() with an event emitter.

Create a connection.

The connection is removed when the patchbay is destructed.

Parameters

е	Pointer to an event emitter	
r	Pointer to the receiver	
rfun	Pointer to a member function of the receiver class	

Connect a receiver member function void (receiver_t::*)(const std::string&) with an event emitter.

Create a connection.

The connection is removed when the patchbay is destructed.

Parameters

е	Pointer to an event emitter
r	Pointer to the receiver
rfun	Pointer to a member function of the receiver class

5.169.4 Member Data Documentation

```
5.169.4.1 template < class receiver_t > std::list < connector_t < receiver_t > *> MHAEvents::patchbay_t < receiver_t > ::cons [private]
```

The documentation for this class was generated from the following file:

· mha_events.h

5.170 MHAFilter::adapt_filter_param_t Class Reference

Public Member Functions

adapt_filter_param_t (mha_real_t imu, bool ierr_in)

Public Attributes

- mha_real_t mu
- bool err_in
- 5.170.1 Constructor & Destructor Documentation
- 5.170.2 Member Data Documentation
- 5.170.2.1 mha_real_t MHAFilter::adapt_filter_param_t::mu
- 5.170.2.2 bool MHAFilter::adapt_filter_param_t::err_in

The documentation for this class was generated from the following files:

- · mha_filter.hh
- · mha_filter.cpp
- 5.171 MHAFilter::adapt_filter_state_t Class Reference

Public Member Functions

- adapt_filter_state_t (int ntaps, int nchannels)
- void filter (mha_wave_t y, mha_wave_t e, mha_wave_t x, mha_wave_t d, mha_real
 _t mu, bool err_in)

Private Attributes

- int ntaps
- int nchannels
- MHASignal::waveform t W
- MHASignal::waveform_t X
- MHASignal::waveform_t od
- MHASignal::waveform_t oy

```
5.171.1 Constructor & Destructor Documentation
```

5.171.2 Member Function Documentation

5.171.3 Member Data Documentation

```
5.171.3.1 int MHAFilter::adapt_filter_state_t::ntaps [private]
```

5.171.3.2 int MHAFilter::adapt_filter_state_t::nchannels [private]

5.171.3.3 MHASignal::waveform_t MHAFilter::adapt_filter_state_t::W [private]

5.171.3.4 MHASignal::waveform_t MHAFilter::adapt_filter_state_t::X [private]

5.171.3.5 MHASignal::waveform_t MHAFilter::adapt_filter_state_t::od [private]

5.171.3.6 MHASignal::waveform_t MHAFilter::adapt_filter_state_t::oy [private]


The documentation for this class was generated from the following files:

- mha_filter.hh
- mha_filter.cpp

5.172 MHAFilter::adapt_filter_t Class Reference

Adaptive filter.

Inheritance diagram for MHAFilter::adapt_filter_t:

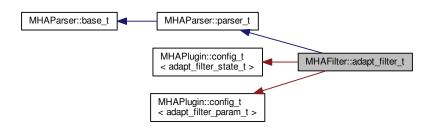

Public Member Functions

- adapt_filter_t (std::string)
- void filter (mha_wave_t y, mha_wave_t e, mha_wave_t x, mha_wave_t d)
- void set_channelcnt (unsigned int)

Private Member Functions

- void update_mu ()
- void update_ntaps ()

Private Attributes

- MHAParser::float_t mu
- MHAParser::int_t ntaps
- MHAParser::bool_t err_in
- MHAEvents::patchbay_t< adapt_filter_t > connector
- unsigned int nchannels

Additional Inherited Members

5.172.1 Detailed Description

Adaptive filter.

```
5.172.2 Constructor & Destructor Documentation
```

```
5.172.2.1 MHAFilter::adapt_filter_t::adapt_filter_t (
std::string help )
```

5.172.3 Member Function Documentation

```
5.172.3.2 void MHAFilter::adapt_filter_t::set_channelcnt ( unsigned int nch )
```

5.172.3.3 void MHAFilter::adapt_filter_t::update_mu() [private]

```
5.172.3.4 void MHAFilter::adapt_filter_t::update_ntaps( ) [private]
5.172.4 Member Data Documentation
5.172.4.1 MHAParser::float_t MHAFilter::adapt_filter_t::mu [private]
5.172.4.2 MHAParser::int_t MHAFilter::adapt_filter_t::ntaps [private]
5.172.4.3 MHAParser::bool_t MHAFilter::adapt_filter_t::err_in [private]
5.172.4.4 MHAEvents::patchbay_t<adapt_filter_t> MHAFilter::adapt_filter_t::connector [private]
```

5.172.4.5 unsigned int MHAFilter::adapt_filter_t::nchannels [private]

The documentation for this class was generated from the following files:

- · mha filter.hh
- mha_filter.cpp
- 5.173 MHAFilter::blockprocessing_polyphase_resampling_t Class Reference

A class that does polyphase resampling and takes into account block processing.

Public Member Functions

 blockprocessing_polyphase_resampling_t (float source_srate, unsigned source_← fragsize, float target_srate, unsigned target_fragsize, float nyquist_ratio, float irslen, unsigned nchannels, bool add delay)

Contructs a polyphase resampling filter that can be used for blockprocessing with the given parameters.

- virtual ~blockprocessing polyphase resampling t ()
- void write (mha_wave_t &signal)

Write signal to the ringbuffer.

void read (mha_wave_t &signal)

Read resampled signal.

• bool can read () const

Checks if the resampling ring buffer can produce another output signal block.

Private Attributes

- polyphase_resampling_t * resampling
- · unsigned fragsize in
- unsigned fragsize_out
- unsigned num_channels

5.173 MHAFilter::blockprocessing_polyphase_resampling_t Class Reference 481

5.173.1 Detailed Description

A class that does polyphase resampling and takes into account block processing.

5.173.2 Constructor & Destructor Documentation

5.173.2.1 MHAFilter::blockprocessing_polyphase_resampling_t::blockprocessing_polyphase_ resampling_t (float source_srate,

unsigned source_fragsize, float target_srate, unsigned target_fragsize, float nyquist_ratio, float irslen. unsigned nchannels, bool add_delay)

Contructs a polyphase resampling filter that can be used for blockprocessing with the given parameters.

Parameters

source_srate	Source sampling rate / Hz
source_fragsize	Fragment size of incoming audio blocks / frames at source_srate
target_srate	Target sampling rate / Hz
target_fragsize	Fragment size of produced audio blocks / frames at target_srate
nyquist_ratio	Low pass filter cutoff frequency relative to the nyquist frequency of the smaller of the two sampling rates. Example values: 0.8, 0.9
irslen	Impulse response length used for low pass filtering / s
nchannels	Number of audio channels
add_delay	To avoid underruns, a delay is generally necessary for round trip block size adaptations. It is only necessary to add this delay to one of the two resampling chains. Set this parameter to true for the first resampling object of a round trip pair. It will add the necessary delay, and calculate the size of the ring buffer appropriately, When set to false, only the ringbuffer size will be set sufficiently.

```
5.173.2.2 virtual MHAFilter::blockprocessing_polyphase_resampling_t::∼blockprocessing_polyphase←
         _resampling_t( ) [inline],[virtual]
```

5.173.3 Member Function Documentation

5.173.3.1 void MHAFilter::blockprocessing_polyphase_resampling_t::write (mha_wave_t & signal)

Write signal to the ringbuffer.

Parameters

Exceptions

MHA_Error (p. 410)	Raises exception if there is not enough room, if the number of
	channels does not match, or if the number of frames is not equal to
	the number specified in the constructor

5.173.3.2 void MHAFilter::blockprocessing_polyphase_resampling_t::read (mha_wave_t & signal)

Read resampled signal.

Will perform the resampling and remove no longer needed samples from the input buffer.

Parameters

	signal	buffer to write the resampled signal to.
--	--------	--

Exceptions

MHA_Error (p. 410)	Raises exception if there is not enough input signal, if the number of
	channels of frames does not match.

5.173.3.3 bool MHAFilter::blockprocessing_polyphase_resampling_t::can_read() const [inline]

Checks if the resampling ring buffer can produce another output signal block.

- 5.173.4 Member Data Documentation
- 5.173.4.1 polyphase_resampling_t ∗ MHAFilter::blockprocessing_polyphase_resampling_t ← ::resampling [private]
- **5.173.4.2** unsigned MHAFilter::blockprocessing_polyphase_resampling_t::fragsize_in [private]
- **5.173.4.3 unsigned MHAFilter::blockprocessing_polyphase_resampling_t::fragsize_out** [private]
- **5.173.4.4** unsigned MHAFilter::blockprocessing_polyphase_resampling_t::num_channels [private]

The documentation for this class was generated from the following files:

- mha filter.hh
- mha_filter.cpp

5.174 MHAFilter::complex bandpass t Class Reference

Complex bandpass filter.

Public Member Functions

complex_bandpass_t (std::vector< mha_complex_t > A, std::vector< mha_← complex_t > B)

Constructor with filter coefficients (one per channel)

- void set_state (mha_real_t val)
- void set_state (std::vector< mha_real_t > val)
- void set_state (mha_complex_t val)
- void set_weights (std::vector< mha_complex_t > new_B)

Allow to modify the input weights at a later stage.

- std::vector< mha_complex_t > get_weights () const
- void filter (const mha_wave_t &X, mha_spec_t &Y)

Filter method for real value input.

void filter (const mha_wave_t &X, mha_wave_t &Yre, mha_wave_t &Yim)

Filter method for real value input.

void filter (const mha_spec_t &X, mha_spec_t &Y)

Filter method for complex value input.

 void filter (const mha_wave_t &Xre, const mha_wave_t &Xim, mha_wave_t &Yre, mha_wave_t &Yim)

Filter method for complex value input.

• std::string inspect () const

Static Public Member Functions

- static std::vector< mha_complex_t > creator_A (std::vector< mha_real_t > cf, std←
 ::vector< mha_real_t > bw, mha_real_t srate, unsigned int order)
- static std::vector< mha_complex_t > creator_B (std::vector< mha_complex_t > A, unsigned int order)

Private Attributes

- std::vector< mha_complex_t > A_
- std::vector< mha_complex_t > B_
- std::vector< mha complex t > Yn

5.174.1 Detailed Description

Complex bandpass filter.

```
5.174.2 Constructor & Destructor Documentation
```

Constructor with filter coefficients (one per channel)

Parameters

```
A complex filter coefficients, one per bandB complex weights
```

```
5.174.3 Member Function Documentation
```

```
5.174.3.3 void MHAFilter::complex_bandpass_t::set_state ( mha real t val )
```

```
5.174.3.4 void MHAFilter::complex_bandpass_t::set_state ( std::vector< mha_real_t > val )
```

```
5.174.3.5 void MHAFilter::complex_bandpass_t::set_state ( mha complex t val )
```

Allow to modify the input weights at a later stage.

```
\textbf{5.174.3.7} \quad \textbf{std::vector} < \textbf{mha\_complex\_t} > \textbf{MHAFilter::complex\_bandpass\_t::get\_weights ( ) const} \\ \quad [\texttt{inline}]
```

Filter method for real value input.

Filter method for real value input.

Filter method for complex value input.

Filter method for complex value input.

```
5.174.3.12 std::string MHAFilter::complex_bandpass_t::inspect( ) const [inline]
```

5.174.4 Member Data Documentation

```
5.174.4.1 std::vector<mha_complex_t> MHAFilter::complex_bandpass_t::A_ [private]
```


The documentation for this class was generated from the following files:

- complex filter.h
- complex_filter.cpp

5.175 MHAFilter::diff_t Class Reference

Differentiator class (non-normalized)

Inheritance diagram for MHAFilter::diff_t:

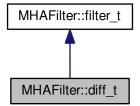

Public Member Functions

• **diff_t** (unsigned int ch)

Additional Inherited Members

5.175.1 Detailed Description

Differentiator class (non-normalized)

5.175.2 Constructor & Destructor Documentation


The documentation for this class was generated from the following files:

- mha_filter.hh
- mha_filter.cpp

5.176 MHAFilter::fftfilter_t Class Reference

FFT based FIR filter implementation.

Inheritance diagram for MHAFilter::fftfilter_t:

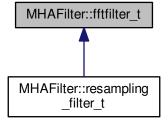

Public Member Functions

- fftfilter_t (unsigned int fragsize, unsigned int channels, unsigned int fftlen)
 Constructor.
- ∼fftfilter t ()
- void update_coeffs (const mha_wave_t *pwIRS)

Update the set of coefficients.

void filter (const mha_wave_t *pwln, mha_wave_t **ppwOut, const mha_wave_t *pw← IRS)

Apply filter with changing coefficients to a waveform fragment.

void filter (const mha_wave_t *pwln, mha_wave_t **ppwOut)

Apply filter to waveform fragment, without changing the coefficients.

void filter (const mha_wave_t *pwln, mha_wave_t **ppwOut, const mha_spec_t *ps
 Weights)

Apply filter with changing coefficients to a waveform fragment.

Private Attributes

- unsigned int fragsize
- · unsigned int channels
- · unsigned int fftlen
- MHASignal::waveform_t wInput_fft
- · mha wave twlnput
- MHASignal::waveform_t wOutput_fft
- mha_wave_t wOutput
- MHASignal::spectrum_t sInput
- MHASignal::spectrum_t sWeights
- MHASignal::waveform_t wIRS_fft
- mha_fft_t fft

5.176.1 Detailed Description

FFT based FIR filter implementation.

The maximal number of coefficients can be FFT length - fragsize + 1.

5.176.2 Constructor & Destructor Documentation

Constructor.

Parameters

fragsize	Number of frames expected in input signal (each cycle)	
channels	Number of channels expected in input signal.	
fftlen	FFT length of filter.	

```
5.176.2.2 MHAFilter::fftfilter_t::~fftfilter_t ( )
```

5.176.3 Member Function Documentation

Update the set of coefficients.

Parameters

cients structure	pwIRS	ĺ
------------------	-------	---

Note

The number of channels in h must match the number of channels given in the constructor. The filter length is limited to fftlen-fragsize+1 (longer IRS will be shortened).

Apply filter with changing coefficients to a waveform fragment.

Parameters

ри⊷	Input signal pointer.
În	

Return values

_		
	υΟwαα	Pointer to output signal pointer, will be set to a valid signal.

Parameters

Apply filter to waveform fragment, without changing the coefficients.

Parameters

pw⇔	Input signal pointer.
In	

Return values

Apply filter with changing coefficients to a waveform fragment.

Parameters

pw⇔	Input signal pointer.
In	

Return values

-
Pointer to output signal pointer, will be set to a valid signal.
FOILUELTO OLIDUI SIGNAL DOILUEL WIILDE SELTO A VAIIO SIGNAL
. on to to output digital pointer, will be cot to a raile digital

Parameters

```
psWeights Pointer to filter weights structure.
```

5.176.4 Member Data Documentation

```
5.176.4.1 unsigned int MHAFilter::fftfilter_t::fragsize [private]
```

5.176.4.2 unsigned int MHAFilter::fftfilter_t::channels [private]

5.176.4.3 unsigned int MHAFilter::fftfilter_t::fftlen [private]

```
5.176.4.4 MHASignal::waveform_t MHAFilter::fftfilter_t::wlnput_fft [private]
5.176.4.5 mha_wave_t MHAFilter::fftfilter_t::wlnput [private]
5.176.4.6 MHASignal::waveform_t MHAFilter::fftfilter_t::wOutput_fft [private]
5.176.4.7 mha_wave_t MHAFilter::fftfilter_t::wOutput [private]
5.176.4.8 MHASignal::spectrum_t MHAFilter::fftfilter_t::slnput [private]
5.176.4.9 MHASignal::spectrum_t MHAFilter::fftfilter_t::sWeights [private]
5.176.4.10 MHASignal::waveform_t MHAFilter::fftfilter_t::wIRS_fft [private]
5.176.4.11 mha_fft_t MHAFilter::fftfilter_t::fft [private]
```


The documentation for this class was generated from the following files:

- · mha filter.hh
- mha_filter.cpp

5.177 MHAFilter::fftfilterbank_t Class Reference

FFT based FIR filterbank implementation.

Inheritance diagram for MHAFilter::fftfilterbank_t:

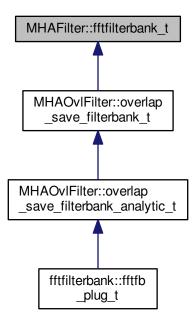

Public Member Functions

• fftfilterbank_t (unsigned int fragsize, unsigned int inputchannels, unsigned int firchannels, unsigned int fftlen)

Constructor.

- ∼fftfilterbank_t ()
- void update_coeffs (const mha_wave_t *h)

Update the set of coefficients.

- void filter (const mha_wave_t *s_in, mha_wave_t **s_out, const mha_wave_t *h)
 Apply filter with changing coefficients to a waveform fragment.
- void filter (const mha_wave_t *s_in, mha_wave_t **s_out)

Apply filter to waveform fragment, without changing the coefficients.

const mha_wave_t * get_irs () const

Return the current IRS.

Private Attributes

- · unsigned int fragsize
- unsigned int inputchannels
- · unsigned int firchannels
- unsigned int outputchannels
- · unsigned int fftlen
- MHASignal::waveform_t hw
- MHASignal::spectrum t Hs
- MHASignal::waveform_t xw
- MHASignal::spectrum_t Xs
- MHASignal::waveform_t yw
- MHASignal::spectrum t Ys
- MHASignal::waveform_t yw_temp
- MHASignal::waveform t tail
- mha_fft_t fft

5.177.1 Detailed Description

FFT based FIR filterbank implementation.

This class convolves n input channels with m filter coefficient sets and returns n*m output channels.

The maximal number of coefficients can be FFT length - fragsize + 1.

5.177.2 Constructor & Destructor Documentation

Constructor.

Parameters

fragsize	Number of frames expected in input signal (each cycle).
inputchannels	Number of channels expected in input signal.
firchannels	Number of channels expected in FIR filter coefficients (= number of bands).
fftlen	FFT length of filter.

The number of output channels is inputchannels*firchannels.

```
5.177.2.2 MHAFilter::fftfilterbank_t::~fftfilterbank_t()
```

5.177.3 Member Function Documentation

```
5.177.3.1 void MHAFilter::fftfilterbank_t::update_coeffs ( const mha_wave_t * h )
```

Update the set of coefficients.

Parameters

h Coefficients structure

Note

The number of channels in h must match the number of channels given in the constructor, and the number of frames can not be more than fftlen-fragsize+1.

Apply filter with changing coefficients to a waveform fragment.

Parameters

S⊷	Input signal pointer.
_in	

Return values

s_out	Pointer to output signal pointer, will be set to a valid signal
-------	---

Parameters

```
h FIR coefficients
```

```
5.177.3.3 void MHAFilter::fftfilterbank_t::filter (
const mha_wave_t * s_in,
mha wave t ** s out )
```

Apply filter to waveform fragment, without changing the coefficients.

Parameters

<i>S</i> ⇔	Input signal pointer.
_in	

Return values

s _0	out	Pointer to output signal pointer, will be set to a valid signal
-------------	-----	---

5.177.3.4 const mha_wave_t* MHAFilter::fftfilterbank_t::get_irs() const [inline]

Return the current IRS.

5.177.4 Member Data Documentation

- **5.177.4.1** unsigned int MHAFilter::fftfilterbank_t::fragsize [private]
- **5.177.4.2** unsigned int MHAFilter::fftfilterbank_t::inputchannels [private]
- **5.177.4.3 unsigned int MHAFilter::fftfilterbank_t::firchannels** [private]
- **5.177.4.4** unsigned int MHAFilter::fftfilterbank_t::outputchannels [private]
- **5.177.4.5** unsigned int MHAFilter::fftfilterbank_t::fftlen [private]
- **5.177.4.6 MHASignal::waveform t MHAFilter::fftfilterbank_t::hw** [private]
- **5.177.4.7** MHASignal::spectrum_t MHAFilter::fftfilterbank_t::Hs [private]
- **5.177.4.8 MHASignal::waveform t MHAFilter::fftfilterbank_t::xw** [private]
- **5.177.4.9** MHASignal::spectrum_t MHAFilter::fftfilterbank_t::Xs [private]


- **5.177.4.10** MHASignal::waveform_t MHAFilter::fftfilterbank_t::yw [private]
- **5.177.4.11 MHASignal::spectrum_t MHAFilter::fftfilterbank_t::Ys** [private]
- **5.177.4.12** MHASignal::waveform_t MHAFilter::fftfilterbank_t::yw_temp [private]
- **5.177.4.13** MHASignal::waveform t MHAFilter::fftfilterbank_t::tail [private]
- **5.177.4.14 mha fft t MHAFilter::fftfilterbank_t::fft** [private]

The documentation for this class was generated from the following files:

- · mha_filter.hh
- · mha_filter.cpp
- 5.178 MHAFilter::filter_t Class Reference

Generic IIR filter class.

Inheritance diagram for MHAFilter::filter_t:

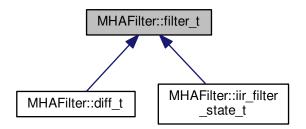

Public Member Functions

- filter_t (unsigned int ch, unsigned int lena, unsigned int lenb)
 Constructor.
- filter_t (unsigned int ch, const std::vector< mha_real_t > &vA, const std::vector< mha←
 _real_t > &vB)

Constructor with initialization of coefficients.

- filter_t (const MHAFilter::filter_t &src)
- ∼filter t()
- void filter (mha_wave_t *out, const mha_wave_t *in)

Filter all channels in a waveform structure.

void filter (mha_real_t *dest, const mha_real_t *src, unsigned int dframes, unsigned int frame_dist, unsigned int channel_dist, unsigned int channel_begin, unsigned int channel end)

Filter parts of a waveform structure.

• mha real t filter (mha real t x, unsigned int ch)

Filter one sample.

unsigned int get_len_A () const

Return length of recursive coefficients.

unsigned int get_len_B () const

Return length of non-recursive coefficients.

Public Attributes

double * A

Pointer to recursive coefficients.

• double * B

Pointer to non-recursive coefficients.

Private Attributes

- unsigned int len_A
- unsigned int len_B
- unsigned int len
- unsigned int channels
- double * state

5.178.1 Detailed Description

Generic IIR filter class.

This class implements a generic multichannel IIR filter. It is realized as direct form II. It can work on any float array or on **mha_wave_t** (p. 459) structs. The filter coefficients can be directly accessed.

Todo Implement a more robust filter form.

5.178.2 Constructor & Destructor Documentation

Constructor.

Parameters

ch	Number of channels
lena	Number of recursive coefficients
lenb	Number of non-recursive coefficients

```
5.178.2.2 MHAFilter::filter_t: filter_t ( unsigned int \it ch, const std::vector< mha_real_t > & \it vA, const std::vector< mha_real_t > & \it vB)
```

Constructor with initialization of coefficients.

Parameters

ch	Number of channels.	
νA	Recursive coefficients.	
νB	Non-recursive coefficients.	

Filter all channels in a waveform structure.

Parameters

out	Output signal
in	Input signal

Filter parts of a waveform structure.

Parameters

dest	Output signal.
src	Input signal.
dframes	Number of frames to be filtered.
frame_dist	Index distance between frames of one channel
channel_dist	Index distance between audio channels
channel_begin	Number of first channel to be processed
channel_end	Number of last channel to be processed

Filter one sample.

Parameters

Х	Input value
ch	Channel number to use in filter state

5.178.3.4 unsigned int MHAFilter::filter_t::get_len_A() const [inline]

Return length of recursive coefficients.

5.178.3.5 unsigned int MHAFilter::filter_t::get_len_B () const [inline]

Return length of non-recursive coefficients.

5.178.4 Member Data Documentation

5.178.4.1 double * MHAFilter::filter_t::A

Pointer to recursive coefficients.

```
5.178.4.2 double * MHAFilter::filter_t::B
```

Pointer to non-recursive coefficients.

```
5.178.4.3 unsigned int MHAFilter::filter_t::len_A [private]
```

```
5.178.4.4 unsigned int MHAFilter::filter_t::len_B [private]
```

- **5.178.4.5** unsigned int MHAFilter::filter_t::len [private]
- **5.178.4.6 unsigned int MHAFilter::filter t::channels** [private]
- **5.178.4.7** double* MHAFilter::filter_t::state [private]

The documentation for this class was generated from the following files:

- mha_filter.hh
- · mha filter.cpp

5.179 MHAFilter::gamma_flt_t Class Reference

Class for gammatone filter.

Public Member Functions

gamma_flt_t (std::vector< mha_real_t > cf, std::vector< mha_real_t > bw, mha_real = t srate, unsigned int order)

Constructor.

- ~gamma_flt_t ()
- void operator() (mha_wave_t &X, mha_spec_t &Y)

Filter method.

- void operator() (mha_wave_t &X, mha_wave_t &Yre, mha_wave_t &Yim) Filter method.
- void **operator()** (**mha_wave_t** &Yre, **mha_wave_t** &Yim, unsigned int stage) Filter method for specific stage.
- void phase_correction (unsigned int desired_delay, unsigned int inchannels)
- void set_weights (std::vector< mha_complex_t > new_B)
- void set weights (unsigned int stage, std::vector< mha complex t > new B)
- std::vector< mha_complex_t > get_weights () const
- std::vector< **mha complex t** > **get weights** (unsigned int stage) const
- std::vector< mha_real_t > get_resynthesis_gain () const
- void reset_state ()
- const std::vector< mha_complex_t > & get_A ()
- std::string inspect () const

Private Attributes

```
std::vector< mha_complex_t > A
```

```
std::vector< complex_bandpass_t > GF
```

- MHASignal::delay_t * delay
- std::vector< int > envelope_delay
- std::vector< mha_real_t > resynthesis_gain
- std::vector< mha real t > cf
- std::vector< mha_real_t > bw_
- mha_real_t srate_

5.179.1 Detailed Description

Class for gammatone filter.

5.179.2 Constructor & Destructor Documentation

```
5.179.2.1 MHAFilter::gamma_flt_t::gamma_flt_t (  std::vector < mha\_real\_t > \textit{cf}, \\ std::vector < mha\_real\_t > \textit{bw}, \\ mha\_real\_t \; \textit{srate}, \\ unsigned int \; \textit{order} \; )
```

Constructor.

Parameters

cf	Center frequency in Hz.
bw	Bandwidth in Hz (same number of entries as in cf).
srate Sampling frequency in Hz.	
order	Filter order.

```
5.179.2.2 MHAFilter::gamma_flt_t::~gamma_flt_t ( )
```

5.179.3 Member Function Documentation

Filter method.

```
5.179.3.2 void MHAFilter::gamma_flt_t::operator() (
                      mha_wave_t & X,
                      mha wave t & Yre,
                      mha_wave_t & Yim ) [inline]
Filter method.
5.179.3.3 void MHAFilter::gamma_flt_t::operator() (
                      mha wave t & Yre,
                      mha_wave_t & Yim,
                      unsigned int stage ) [inline]
Filter method for specific stage.
5.179.3.4 void MHAFilter::gamma_flt_t::phase_correction (
                      unsigned int desired_delay,
                      unsigned int inchannels )
5.179.3.5 void MHAFilter::gamma_flt_t::set_weights (
                      std::vector< mha_complex_t > new_B)
5.179.3.6 void MHAFilter::gamma_flt_t::set_weights (
                      unsigned int stage,
                      std::vector< mha complex t > new_B)
5.179.3.7 std::vector<mha complex t> MHAFilter::gamma flt t::get weights ( ) const
          [inline]
5.179.3.8 std::vector<mha complex t> MHAFilter::gamma_flt_t::get_weights (
                      unsigned int stage ) const [inline]
5.179.3.9 std::vector<mha real t> MHAFilter::gamma flt t::get resynthesis gain ( ) const
          [inline]
5.179.3.10 void MHAFilter::gamma_flt_t::reset_state ( )
5.179.3.11 const std::vector<mha_complex_t>& MHAFilter::gamma_flt_t::get_A( ) [inline]
5.179.3.12 std::string MHAFilter::gamma_flt_t::inspect() const [inline]
5.179.4 Member Data Documentation
5.179.4.1 std::vector<mha_complex_t> MHAFilter::gamma_flt_t::A [private]
5.179.4.2 std::vector<complex_bandpass_t> MHAFilter::gamma_flt_t::GF [private]
```


```
5.179.4.3 MHASignal::delay_t* MHAFilter::gamma_flt_t::delay [private]
5.179.4.4 std::vector<int> MHAFilter::gamma_flt_t::envelope_delay [private]
5.179.4.5 std::vector<mha_real_t> MHAFilter::gamma_flt_t::resynthesis_gain [private]
5.179.4.6 std::vector<mha_real_t> MHAFilter::gamma_flt_t::cf_ [private]
5.179.4.7 std::vector<mha_real_t> MHAFilter::gamma_flt_t::bw_ [private]
5.179.4.8 mha_real_t MHAFilter::gamma_flt_t::srate_ [private]
```

The documentation for this class was generated from the following files:

- · complex_filter.h
- complex_filter.cpp

5.180 MHAFilter::iir_filter_state_t Class Reference

Inheritance diagram for MHAFilter::iir_filter_state_t:

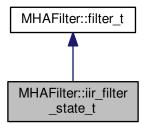

Public Member Functions

iir_filter_state_t (unsigned int channels, std::vector< float > cf_A, std::vector< float > cf_B)

Additional Inherited Members

5.180.1 Constructor & Destructor Documentation

```
5.180.1.1 MHAFilter::iir_filter_state_t::iir_filter_state_t ( unsigned int channels, std::vector< float > cf_A, std::vector< float > cf_B )
```


The documentation for this class was generated from the following files:

- mha_filter.hh
- · mha_filter.cpp

5.181 MHAFilter::iir filter t Class Reference

IIR filter class wrapper for integration into parser structure.

Inheritance diagram for MHAFilter::iir_filter_t:

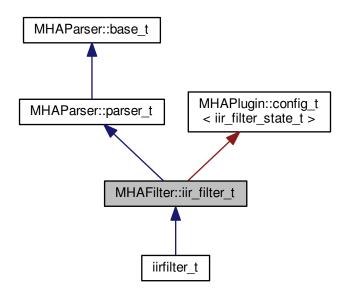

Public Member Functions

iir_filter_t (std::string help="IIR filter structure", std::string def_A="[1]", std::string def
 _B="[1]", unsigned int channels=1)

Constructor of the IIR filter.

void filter (mha_wave_t *y, const mha_wave_t *x)

The filter processes the audio signal.

• mha_real_t filter (mha_real_t x, unsigned int ch)

Filter a single audio sample.

void resize (unsigned int channels)

Change the number of channels after object creation.

Private Member Functions

void update_filter ()

Private Attributes

- MHAParser::vfloat_t A
- MHAParser::vfloat_t B
- MHAEvents::patchbay t< iir filter t > connector
- unsigned int nchannels

Additional Inherited Members

5.181.1 Detailed Description

IIR filter class wrapper for integration into parser structure.

This class implements an infinite impulse response filter. Since it inherits from **MHAParser**← ::parser_t (p. 651), it can easily be integrated in the openMHA configuration tree. It provides the configuration language variables "A" (vector of recursive filter coefficients) and "B" (vector of non-recursive filter coefficients).

The filter instance reacts to changes in filter coefficients through the openMHA configuration language, and uses the updated coefficients in the next invocation of the filter method.

Update of the coefficients is thread-safe and non-blocking. Simply add this subparser to your parser items and use the "filter" member function. Filter states are reset to all 0 on update.

5.181.2 Constructor & Destructor Documentation

```
5.181.2.1 MHAFilter::iir_filter_t:(

std::string help = "IIR filter structure",

std::string def_A = "[1]",

std::string def_B = "[1]",

unsigned int channels = 1)
```

Constructor of the IIR filter.

Initialises the sub-parser structure and the memory for holding the filter's state.

Parameters

help	The help string for the parser that groups the configuration variables of this filter. Could be used to describe the purpose of this IIR filter.
def_A	The initial value of the vector of the recursive filter coefficients, represented as string.
def_B	The initial value of the vector of the non-recursive filter coefficients, represented as string.
channels	The number of indipendent audio channels to process with this filter. Needed to allocate a state vector for each audio channel.

5.181.3 Member Function Documentation

The filter processes the audio signal.

All channels in the audio signal are processed using the same filter coefficients. Indipendent state is stored between calls for each audio channel.

Parameters

У	Pointer to output signal holder. The output signal is stored here. Has to have the same signal dimensions as the input signal x. In-place processing (y and x pointing to the same signal holder) is possible.
Х	Pointer to input signal holder. Number of channels has to be the same as given to the constructor, or to the resize (p. 505) method.

Filter a single audio sample.

Parameters

X	The single audio sample
ch	Zero-based channel index. Use and change the state of channel ch. ch has to be less
	than the number of channels given to the constructor or the resize (p. 505) method.

Returns

the filtered result sample.

5.181.3.3 void MHAFilter::iir_filter_t::resize (unsigned int *channels*)

Change the number of channels after object creation.

Parameters

channels	The new number of channels. Old filter states are lost.
----------	---

5.181.3.4 void MHAFilter::iir_filter_t::update_filter() [private]

5.181.4 Member Data Documentation

5.181.4.1 MHAParser::vfloat_t MHAFilter::iir_filter_t::A [private]

5.181.4.2 MHAParser::vfloat_t MHAFilter::iir_filter_t::B [private]

5.181.4.3 MHAEvents::patchbay_t<iir_filter_t> MHAFilter::iir_filter_t::connector [private]

5.181.4.4 unsigned int MHAFilter::iir_filter_t::nchannels [private]

The documentation for this class was generated from the following files:

- mha_filter.hh
- · mha_filter.cpp

5.182 MHAFilter::iir_ord1_real_t Class Reference

First order recursive filter.

Public Member Functions

iir_ord1_real_t (std::vector< mha_real_t > A, std::vector< mha_real_t > B)

Constructor with filter coefficients (one per channel)

• iir_ord1_real_t (std::vector< mha_real_t > tau, mha_real_t srate)

Constructor for low pass filter (one time constant per channel)

- void set_state (mha_real_t val)
- void set state (std::vector< mha real t > val)
- void set_state (mha_complex_t val)
- mha_real_t operator() (unsigned int ch, mha_real_t x)

Filter method for real value input, one element.

mha_complex_t operator() (unsigned int ch, mha_complex_t x)

Filter method for complex input, one element.

void operator() (const mha_wave_t &X, mha_wave_t &Y)

Filter method for real value input.

void operator() (const mha_spec_t &X, mha_spec_t &Y)

Filter method for complex value input.

 void operator() (const mha_wave_t &Xre, const mha_wave_t &Xim, mha_wave_t &Yre, mha_wave_t &Yim)

Filter method for complex value input.

Private Attributes

- std::vector< mha real t > A
- std::vector< mha real t > B
- std::vector< mha_complex_t > Yn

5.182.1 Detailed Description

First order recursive filter.

5.182.2 Constructor & Destructor Documentation

Constructor with filter coefficients (one per channel)

Constructor for low pass filter (one time constant per channel)

```
5.182.3 Member Function Documentation
5.182.3.1 void MHAFilter::iir_ord1_real_t::set_state (
                      mha_real_t val )
5.182.3.2 void MHAFilter::iir_ord1_real_t::set_state (
                       std::vector< mha real t > val )
5.182.3.3 void MHAFilter::iir_ord1_real_t::set_state (
                      mha_complex_t val )
5.182.3.4 mha_real_t MHAFilter::iir_ord1_real_t::operator() (
                      unsigned int ch,
                       mha_real_t x ) [inline]
Filter method for real value input, one element.
5.182.3.5 mha_complex_t MHAFilter::iir_ord1_real_t::operator() (
                       unsigned int ch,
                       mha_complex_t x ) [inline]
Filter method for complex input, one element.
5.182.3.6 void MHAFilter::iir_ord1_real_t::operator() (
                      const mha wave t & X,
                      mha wave t&Y) [inline]
Filter method for real value input.
5.182.3.7 void MHAFilter::iir ord1 real t::operator() (
                       const mha spec t & X,
                       mha_spec_t & Y ) [inline]
Filter method for complex value input.
5.182.3.8 void MHAFilter::iir_ord1_real_t::operator() (
                       const mha wave t & Xre,
                       const mha_wave_t & Xim,
                       mha wave t & Yre,
```

Filter method for complex value input.

mha_wave_t & Yim) [inline]

5.182.4 Member Data Documentation

5.182.4.1 std::vector<mha_real_t> MHAFilter::iir_ord1_real_t::A_ [private]

5.182.4.2 std::vector<mha_real_t> MHAFilter::iir_ord1_real_t::B_ [private]

5.182.4.3 std::vector<mha_complex_t> MHAFilter::iir_ord1_real_t::Yn [private]


The documentation for this class was generated from the following files:

- mha_filter.hh
- · mha_filter.cpp

5.183 MHAFilter::o1_ar_filter_t Class Reference

First order attack-release lowpass filter.

Inheritance diagram for MHAFilter::o1_ar_filter_t:

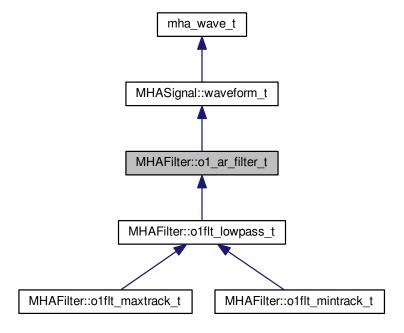

Public Member Functions

• o1_ar_filter_t (unsigned int channels, mha_real_t fs=1.0f, std::vector< mha_real_t > tau_a=std::vector< float >(1, 0.0f), std::vector< mha_real_t > tau_r=std::vector< float >(1, 0.0f))

Constructor, setting all taus to zero.

void set_tau_attack (unsigned int ch, mha_real_t tau)

Set the attack time constant.

void set_tau_release (unsigned int ch, mha_real_t tau)

Set the release time constant.

mha_real_t operator() (unsigned int ch, mha_real_t x)

Apply filter to value x, using state channel ch.

void operator() (const mha_wave_t &in, mha_wave_t &out)

Apply filter to a **mha_wave_t** (p. 459) data.

Protected Attributes

```
    MHASignal::waveform_t c1_a
```

- MHASignal::waveform_t c2_a
- MHASignal::waveform_t c1_r
- MHASignal::waveform_t c2_r
- mha real t fs

Additional Inherited Members

5.183.1 Detailed Description

First order attack-release lowpass filter.

This filter is the base of first order lowpass filter, maximum tracker and minimum tracker.

5.183.2 Constructor & Destructor Documentation

Constructor, setting all taus to zero.

The filter state can be accessed through the member functions of **MHASignal::waveform_t** (p. 775).

Parameters

channels	Number of independent filters
fs	Sampling rate (optional, default = 1)
tau_a	Attack time constants (optional, default = 0)
tau_r	Release time constants (optional, default = 0)

5.183.3 Member Function Documentation

Set the attack time constant.

Parameters

ch	Channel number
tau	Time constant

Set the release time constant.

Parameters

ch	Channel number
tau	Time constant

Apply filter to value x, using state channel ch.

Parameters

ch	Cannel number
X	Input value

Returns

Output value

Apply filter to a **mha_wave_t** (p. 459) data.

Parameters

in	Input signal	
out	Output signal	

The number of channels must match the number of filter bands.

5.183.4 Member Data Documentation

```
5.183.4.1 MHASignal::waveform_t MHAFilter::o1_ar_filter_t::c1_a [protected]
5.183.4.2 MHASignal::waveform_t MHAFilter::o1_ar_filter_t::c2_a [protected]
```

5.183.4.3 MHASignal::waveform_t MHAFilter::o1_ar_filter_t::c1_r [protected]

5.183.4.4 MHASignal::waveform_t MHAFilter::o1_ar_filter_t::c2_r [protected]

5.183.4.5 mha_real_t MHAFilter::o1_ar_filter_t::fs [protected]


The documentation for this class was generated from the following files:

- mha_filter.hh
- mha_filter.cpp

5.184 MHAFilter::o1flt_lowpass_t Class Reference

First order low pass filter.

Inheritance diagram for MHAFilter::o1flt_lowpass_t:

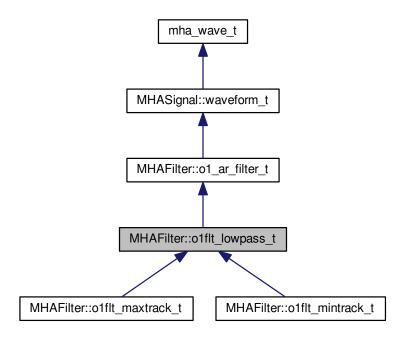

Public Member Functions

- o1flt_lowpass_t (const std::vector< mha_real_t > &, mha_real_t, mha_real_t=0)

 Constructor of low pass filter, sets sampling rate and time constants.
- void set_tau (unsigned int ch, mha_real_t tau)
 change the time constant in one channel
- void set_tau (mha_real_t tau)
 set time constant in all channels to tau
- mha_real_t get_c1 (unsigned int ch) const
- mha_real_t get_last_output (unsigned int ch) const

Additional Inherited Members

5.184.1 Detailed Description

First order low pass filter.

5.184.2 Constructor & Destructor Documentation

Constructor of low pass filter, sets sampling rate and time constants.

Parameters

tau	Vector of time constants
fs	Sampling rate
startval	Initial internal state value

5.184.3 Member Function Documentation

change the time constant in one channel

```
5.184.3.2 void MHAFilter::o1flt_lowpass_t::set_tau ( mha_real_t tau )
```

set time constant in all channels to tau


The documentation for this class was generated from the following files:

- · mha filter.hh
- mha_filter.cpp

5.185 MHAFilter::o1flt_maxtrack_t Class Reference

First order maximum tracker.

Inheritance diagram for MHAFilter::o1flt_maxtrack_t:

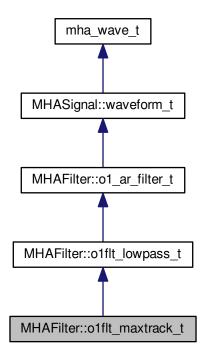

Public Member Functions

- o1flt_maxtrack_t (const std::vector< mha_real_t > &, mha_real_t, mha_real_t=0)

 Constructor of low pass filter, sets sampling rate and time constants.
- void set_tau (unsigned int ch, mha_real_t tau)
 change the time constant in one channel
- void set_tau (mha_real_t tau)
 set time constant in all channels to tau

Additional Inherited Members

5.185.1 Detailed Description

First order maximum tracker.

5.185.2 Constructor & Destructor Documentation

Constructor of low pass filter, sets sampling rate and time constants.

Parameters

tau	Vector of time constants
fs	Sampling rate
startval	Initial internal state value

5.185.3 Member Function Documentation

change the time constant in one channel

```
5.185.3.2 void MHAFilter::o1flt_maxtrack_t::set_tau ( mha_real_t tau )
```

set time constant in all channels to tau


The documentation for this class was generated from the following files:

- mha_filter.hh
- mha_filter.cpp

5.186 MHAFilter::o1flt_mintrack_t Class Reference

First order minimum tracker.

Inheritance diagram for MHAFilter::o1flt_mintrack_t:

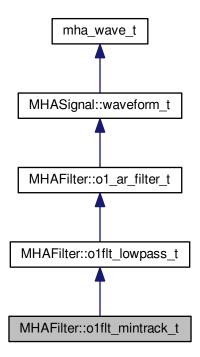

Public Member Functions

- o1flt_mintrack_t (const std::vector< mha_real_t > &, mha_real_t, mha_real_t=0)
- void set_tau (unsigned int ch, mha_real_t tau)
 change the time constant in one channel
- void set_tau (mha_real_t tau)
 set time constant in all channels to tau

Additional Inherited Members

5.186.1 Detailed Description

First order minimum tracker.

5.186.2 Constructor & Destructor Documentation

5.186.3 Member Function Documentation

change the time constant in one channel

```
5.186.3.2 void MHAFilter::o1flt_mintrack_t::set_tau ( mha_real_t tau )
```

set time constant in all channels to tau

The documentation for this class was generated from the following files:

- · mha filter.hh
- mha_filter.cpp

5.187 MHAFilter::partitioned_convolution_t Class Reference

A filter class for partitioned convolution.

Classes

• struct index_t

Bookkeeping class.

Public Member Functions

• partitioned_convolution_t (unsigned int fragsize, unsigned int nchannels_in, unsigned int nchannels_out, const transfer_matrix_t &transfer)

Create a new partitioned convolver.

~partitioned_convolution_t ()

Free fftw resource allocated in constructor.

mha_wave_t * process (const mha_wave_t *s_in)processing

Public Attributes

· unsigned int fragsize

Audio fragment size, always equal to partition size.

• unsigned int nchannels_in

Number of audio input channels.

unsigned int nchannels_out

Number of audio output channels.

unsigned int output_partitions

The maximum number of partitions in any of the impulse responses.

· unsigned int filter_partitions

The total number of non-zero impulse response partitions.

MHASignal::waveform_t input_signal_wave

Buffer for input signal.

unsigned int current_input_signal_buffer_half_index

A counter modulo 2.

MHASignal::spectrum_t input_signal_spec

Buffer for FFT transformed input signal.

MHASignal::spectrum_t frequency_response

Buffers for frequency response spectra of impulse response partitions.

std::vector< index_t > bookkeeping

Keeps track of input channels, output channels, impulse response partition, and delay.

std::vector< MHASignal::spectrum_t > output_signal_spec

Buffers for FFT transformed output signal.

unsigned int current_output_partition_index

A counter modulo output partitions, indexing the "current" output partition.

MHASignal::waveform t output signal wave

Buffer for the wave output signal.

mha fft t fft

The FFT transformer.

5.187.1 Detailed Description

A filter class for partitioned convolution.

Impulse responses are partitioned into sections of fragment size. Audio signal is convolved with every partition and delayed as needed. Convolution is done according to overlap-save. FFT length used is 2 times fragment size.

5.187.2 Constructor & Destructor Documentation

Create a new partitioned convolver.

Parameters

fragsize	agsize Audio fragment size, equal to partition size.	
nchannels_in	Number of input audio channels.	
nchannels_out	Number of output audio channels.	
transfer	A sparse matrix of impulse responses.	

5.187.2.2 MHAFilter::partitioned_convolution_t::~partitioned_convolution_t ()

Free fftw resource allocated in constructor.

5.187.3 Member Function Documentation

processing

5.187.4 Member Data Documentation

5.187.4.1 unsigned int MHAFilter::partitioned convolution t::fragsize

Audio fragment size, always equal to partition size.

5.187.4.2 unsigned int MHAFilter::partitioned_convolution_t::nchannels_in

Number of audio input channels.

5.187.4.3 unsigned int MHAFilter::partitioned_convolution_t::nchannels_out

Number of audio output channels.

5.187.4.4 unsigned int MHAFilter::partitioned_convolution_t::output_partitions

The maximum number of partitions in any of the impulse responses.

Determines the size if the delay line.

5.187.4.5 unsigned int MHAFilter::partitioned_convolution_t::filter_partitions

The total number of non-zero impulse response partitions.

5.187.4.6 MHASignal::waveform_t MHAFilter::partitioned_convolution_t::input_signal_wave

Buffer for input signal.

Has nchannels_in channels and fragsize*2 frames

5.187.4.7 unsigned int MHAFilter::partitioned_convolution_t::current_input_signal_buffer_half_index

A counter modulo 2.

Indicates the buffer half in input signal wave into which to copy the current input signal.

5.187.4.8 MHASignal::spectrum_t MHAFilter::partitioned_convolution_t::input_signal_spec

Buffer for FFT transformed input signal.

Has nchannels_in channels and fragsize+1 frames (fft bins).

5.187.4.9 MHASignal::spectrum_t MHAFilter::partitioned_convolution_t::frequency_response

Buffers for frequency response spectra of impulse response partitions.

Each "channel" contains another partition of some impulse response. The bookkeeping array is used to keep track what to do with these frequency responses. This container has filter_ partitions channels and fragsize+1 frames (fft bins).

5.187.4.10 std::vector<index t> MHAFilter::partitioned convolution t::bookkeeping

Keeps track of input channels, output channels, impulse response partition, and delay.

The index into this array is the same as the "channel" index into the frequency_response array. Array has filter_partitions entries.

5.187.4.11 std::vector<MHASignal::spectrum_t> MHAFilter::partitioned_convolution_t::output_← signal_spec

Buffers for FFT transformed output signal.

For each array member, Number of channels is equal to nchannels_out, number of frames (fft bins) is equal to fragsize+1. Array size is equal to output partitions.

5.187.4.12 unsigned int MHAFilter::partitioned_convolution_t::current_output_partition_index

A counter modulo output_partitions, indexing the "current" output partition.

521

5.187.4.13 MHASignal::waveform_t MHAFilter::partitioned_convolution_t::output_signal_wave

Buffer for the wave output signal.

Number of channels is equal to nchannels_out, number of frames is equal to fragsize

5.187.4.14 mha fft t MHAFilter::partitioned_convolution_t::fft

The FFT transformer.

The documentation for this class was generated from the following files:

- · mha filter.hh
- mha filter.cpp

5.188 MHAFilter::partitioned_convolution_t::index_t Struct Reference

Bookkeeping class.

Public Member Functions

- **index_t** (unsigned int src, unsigned int tgt, unsigned int dly)

 Data constructor.
- index t()

Default constructor for STL compatibility.

Public Attributes

• unsigned int source channel index

The input channel index to apply the current partition to.

unsigned int target_channel_index

The index of the output channel to which the filter result should go.

unsigned int delay

The delay (in blocks) of this partition.

5.188.1 Detailed Description

Bookkeeping class.

For each impulse response partition, keeps track of which input to filter, which output channel to filter to, and the delay in blocks. Objects of class Index should be kept in an array with the same indices as the corresponding inpulse response partitions.

5.188.2 Constructor & Destructor Documentation

Data constructor.

Parameters

src	The input channel index to apply the current partition to.
tgt	The index of the output channel to which the filter result should go.
dly	The delay (in blocks) of this partition

5.188.2.2 MHAFilter::partitioned_convolution_t::index_t::index_t() [inline]

Default constructor for STL compatibility.

5.188.3 Member Data Documentation

5.188.3.1 unsigned int MHAFilter::partitioned convolution t::index t::source channel index

The input channel index to apply the current partition to.

5.188.3.2 unsigned int MHAFilter::partitioned_convolution_t::index_t::target_channel_index

The index of the output channel to which the filter result should go.

5.188.3.3 unsigned int MHAFilter::partitioned_convolution_t::index_t::delay

The delay (in blocks) of this partition.

The documentation for this struct was generated from the following file:

· mha filter.hh

5.189 MHAFilter::polyphase_resampling_t Class Reference

A class that performs polyphase resampling.

Public Member Functions

- polyphase_resampling_t (unsigned n_up, unsigned n_down, mha_real_t nyquist_ratio, unsigned n_irs, unsigned n_ringbuffer, unsigned n_channels, unsigned n_prefill)
 - Construct a polyphase resampler instance.

void write (mha_wave_t &signal) Write signal to the ringbuffer.

void read (mha_wave_t &signal)

Read resampled signal.

unsigned readable_frames () const

Number of frames at target sampling rate that can be produced.

Private Attributes

• unsigned upsampling_factor

Integer upsampling factor.

unsigned downsampling_factor

Integer downsampling factor.

unsigned now index

Index of "now" in the interpolated sampling rate.

bool underflow

Set to true when an underflow has occurred.

MHAWindow::hanning_t impulse_response

Contains the impulse response of the lowpass filter needed for anti-aliasing.

MHASignal::ringbuffer_t ringbuffer

Storage of input signal.

5.189.1 Detailed Description

A class that performs polyphase resampling.

Background information: When resampling from one sampling rate to another, it helps when one sampling rate is a multiple of the other sampling rate: In the case of upsampling, the samples at the original rate are copied to the upsampled signal spread out with a constant number of zero samples between the originally adjacent samples. The signal is then low-pass filtered to avoid frequency aliasing and to fill the zero-samples with interpolated values. In the case of down-sampling, the signal is first low-pass filtered for anti-aliasing, and only every nth sample of the filtered output is used for the signal at the new sample rate. Of course, for finite-impulse-response (FIR) filters this means that only every nth sample needs to be computed.

When resampling from one sampling rate to another where neither is a multiple of the other, the signal first needs to be upsampled to a sampling rate that is a multiple of both (source and target) sampling rates, and then downsampled again to the target sampling rate. Instead of applying two separate lowpass filters directly after each other (one filter for upsampling and another for downsampling), it is sufficient to apply only one low-pass filter, when producing the output at the final target rate, with a cut-off frequency equal to the lower cut-off-frequency of the replaced two low-pass filters. Not filtering to produce a filtered signal already at the common multiple sampling rate has the side effect that this intermediate signal at the common multiple sampling rate keeps its filler zero samples unaltered. These zero samples can be taken advantage of when filtering to produce the output at the target rate: The zeros do not need to be multiplied with their corresponding filter coefficients, because the result is known to be zero again, and this zero product has no effect on the summation operation to compute a target sample at the target rate. To summarize, the following optimization techniques are available:

- The signal does not need to be stored in memory at the interpolation rate. It is sufficient to have the signal available at the source rate and to know where the zeros would be.
- The signal needs to be low-pass-filtered only once.
- The FIR low-pass filtering can take advantage of

- computing only filter outputs for the required samples at the target rate,
- skipping over zero-samples at the interpolation rate.

The procedure that takes advantage of these optimization possibilities is known as polyphase resampling.

This class implements polyphase resampling in this way for a source sampling rate and a target sampling rate that have common multiple, the interpolation sampling rate. Non-rational and drifting sample rates are outside the scope of this resampler.

5.189.2 Constructor & Destructor Documentation

Construct a polyphase resampler instance.

Allocates a ringbuffer with the given capacity $n_ringbuffer$. Client that triggers the constructor must ensure that the capacity $n_ringbuffer$ and the delay $n_prefill$ are sufficient, i.e. enough old and new samples are always available to compute sufficient samples in using an impulse response of length n_irs . Audio block sizes at both sides of the resampler have to be taken into account. Class MHASignal::blockprocessing_polyphase_resampling_t takes care of this, and it is recommended to use this class for block-based processing.

Based on *n_up*, *n_down*, *n_irs* and *nyquist_ratio*, a suitable sinc impulse response is computed and windowed with a hanning window to limit its extent.

The actual source sampling rate, target sampling rate, and interpolation sampling rate are not parameters to this constructors, because only their ratios matter.

Parameters

n_up	upsampling factor, ratio between interpolation rate and source rate.
n_down	downsampling factor, ratio between interpolation rate and target rate.
nyquist_ratio	low pass filter cutoff frequency relative to the nyquist frequency of the smaller of the two sampling rates. Example values: E.g. 0.8, 0.9
n_irs	length of impulse response (in samples at interpolation rate)
n_ringbuffer	length of ringbuffer, in samples at source sampling rate
n_channels	audio channels count
n_prefill	Prefill the ringbuffer with this many zero frames in samples at source sampling rate

5.189.3 Member Function Documentation

```
5.189.3.1 void MHAFilter::polyphase_resampling_t::write ( mha_wave_t & signal )
```

Write signal to the ringbuffer.

Signal contained in signal is appended to the audio frames already present in the ringbuffer.

Parameters

	signal	input signal in original s	sampling rate
--	--------	----------------------------	---------------

Exceptions

MHA_Error (p. 410)	Raises exception if there is not enough room or if the number of	
	channels does not match.	

```
5.189.3.2 void MHAFilter::polyphase_resampling_t::read ( mha_wave_t & signal )
```

Read resampled signal.

Will perform the resampling and remove no longer needed samples from the input buffer.

Parameters

signal	buffer to write the resampled signal to.

Exceptions

MHA_Error (p. 410)	Raises exception if there is not enough input signal or if the number
	of channels is too high.

5.189.3.3 unsigned MHAFilter::polyphase_resampling_t::readable_frames() const [inline]

Number of frames at target sampling rate that can be produced.

This method only checks for enough future samples present, therefore, this number can be positive and a read operation can still fail if there are not enough past samples present to perform the filtering for the first output sample. This could only happen if the constructor parameters $n_ringbuffer$ or $n_ringbuffer$ or $n_ringbuffer$ or $n_ringbuffer$ or $n_ringbuffer$ are present to compute the next target sample.

5.189.4 Member Data Documentation

5.189.4.1 unsigned MHAFilter::polyphase_resampling_t::upsampling_factor [private]

Integer upsampling factor.

Interpolation rate divided by source rate.

5.189.4.2 unsigned MHAFilter::polyphase resampling t::downsampling factor [private]

Integer downsampling factor.

Interpolation rate divided by target rate.

5.189.4.3 unsigned MHAFilter::polyphase_resampling_t::now_index [private]

Index of "now" in the interpolated sampling rate.

Todo Index into what? What is the meaning of now?

5.189.4.4 bool MHAFilter::polyphase_resampling_t::underflow [private]

Set to true when an underflow has occurred.

When this is true, then the object can no longer be used. Underflows have to be avoided by clients, e.g. by checking that enough **readable_frames** (p. 525) are present before calling **read** (p. 525)

5.189.4.5 MHAWindow::hanning_t MHAFilter::polyphase_resampling_t::impulse_response [private]

Contains the impulse response of the lowpass filter needed for anti-aliasing.

The impulse response is stored at the interpolation sampling rate. We use an instance of $\mathbf{M} \leftarrow \mathbf{HAWindow::hanning_t}$ (p. 803) here because we are limiting the sinc impulse response with a Hanning window (otherwise the impulse response would extend indefinitely into past and future). And the samples inside an $\mathbf{MHAWindow::hanning_t}$ (p. 803) can be altered with *=, which our constructor does.

5.189.4.6 MHASignal::ringbuffer_t MHAFilter::polyphase_resampling_t::ringbuffer [private]

Storage of input signal.

Part of the polyphase resampling optimization is that apart from the FIR impulse response, nothing is stored at the interpolation rate, saving memory and computation cycles.


The documentation for this class was generated from the following files:

- mha filter.hh
- mha filter.cpp

5.190 MHAFilter::resampling_filter_t Class Reference

Hann shaped low pass filter for resampling.

Inheritance diagram for MHAFilter::resampling_filter_t:

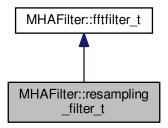

Public Member Functions

resampling_filter_t (unsigned int fftlen, unsigned int irslen, unsigned int channels, unsigned int Nup, unsigned int Ndown, double fCutOff)
 Constructor.

Static Public Member Functions

• static unsigned int fragsize validator (unsigned int fftlen, unsigned int irslen)

Private Attributes

· unsigned int fragsize

5.190.1 Detailed Description

Hann shaped low pass filter for resampling.

This class uses FFT filter at upsampled rate.

5.190.2 Constructor & Destructor Documentation

Constructor.

Parameters

fftlen	FFT length.	
irslen Length of filter.		
channels Number of channels to be filtered.		
Nup Upsampling ratio.		
Ndown	Downsampling ratio.	
fCutOff	Cut off frequency (relative to lower Nyquist Frequency)	

5.190.3 Member Function Documentation

5.190.4 Member Data Documentation

5.190.4.1 unsigned int MHAFilter::resampling_filter_t::fragsize [private]

The documentation for this class was generated from the following files:

- · mha filter.hh
- mha_filter.cpp

5.191 MHAFilter::smoothspec_t Class Reference

Smooth spectral gains, create a windowed impulse response.

Public Member Functions

Constructor.

void smoothspec (const mha_spec_t &s_in, mha_spec_t &s_out)
 Create a smoothed spectrum.

void smoothspec (mha_spec_t &spec)

Create a smoothed spectrum (in place)

void spec2fir (const mha_spec_t &spec, mha_wave_t &fir)

Return FIR coefficients.

∼smoothspec_t ()

Private Member Functions

void internal_fir (const mha_spec_t &)

Private Attributes

- · unsigned int fftlen
- unsigned int nchannels
- MHAWindow::base t window
- MHASignal::waveform_t tmp_wave
- MHASignal::spectrum_t tmp_spec
- MHASignal::minphase_t * minphase
- bool _linphase_asym
- mha_fft_t fft

5.191.1 Detailed Description

Smooth spectral gains, create a windowed impulse response.

Spectral gains are smoothed by multiplicating the impulse response with a window function.

If a minimal phase is used, then the original phase is discarded and replaced by the minimal phase function. In this case, the window is applied to the beginning of the inverse Fourier transform of the input spectrum, and the remaining signal set to zero. If the original phase is kept, the window is applied symmetrical arround zero, i.e. to the first and last samples of the inverse Fourier transform of the input spectrum. The **spec2fir()** (p. 530) function creates a causal impulse response by circular shifting the impulse response by half of the window length.

The signal dimensions of the arguments of **smoothspec()** (p. 530) must correspond to the FFT length and number of channels provided in the constructor. The function **spec2fir()** (p. 530) can fill signal structures with more than window length frames.

5.191.2 Constructor & Destructor Documentation

Constructor.

Parameters

fftlen	FFT length of input spectrum (fftlen/2+1 bins)
nchannels	Number of channels in input spectrum
window	Window used for smoothing
minphase	Use minimal phase (true) or original phase (false)
linphase_asym	Keep phase, but apply full window at beginning of IRS

```
5.191.2.2 MHAFilter::smoothspec_t::~smoothspec_t()
```

5.191.3 Member Function Documentation

Create a smoothed spectrum.

Parameters

<i>S</i> ⇔	Input spectrum
_in	

Return values

```
s_out Output spectrum
```

Create a smoothed spectrum (in place)

Parameters

```
spec | Spectrum to be smoothed.
```

Return FIR coefficients.

Parameters

```
spec Input spectrum
```

Return values

```
fir FIR coefficients, minimum length is window length
```

The documentation for this class was generated from the following files:

- mha_filter.hh
- mha filter.cpp

5.192 MHAFilter::thirdoctave_analyzer_t Class Reference

5.191.4.8 mha_fft_t MHAFilter::smoothspec_t::fft [private]

Public Member Functions

- thirdoctave_analyzer_t (mhaconfig_t cfg)
- mha_wave_t * process (mha_wave_t *)
- unsigned int **nbands** ()
- unsigned int **nchannels** ()
- std::vector< mha_real_t > get_cf_hz ()

Static Public Member Functions

```
• static std::vector< mha real t > cf generator (mhaconfig t cfg)
```

- static std::vector< mha_real_t > bw_generator (mhaconfig_t cfg)
- static std::vector< mha_real_t > dup (std::vector< mha_real_t >, mhaconfig_t cfg)

Private Attributes

- mhaconfig_t cfg_
- std::vector< mha_real_t > cf
- MHAFilter::gamma_flt_t fb
- MHASignal::waveform_t out_chunk
- MHASignal::waveform_t out_chunk_im

```
5.192.1 Constructor & Destructor Documentation
```

5.192.2 Member Function Documentation

```
5.192.2.1 mha_wave_t * MHAFilter::thirdoctave_analyzer_t::process ( mha_wave_t * sln )
```

- 5.192.2.2 unsigned int MHAFilter::thirdoctave_analyzer_t::nbands ()
- 5.192.2.3 unsigned int MHAFilter::thirdoctave_analyzer_t::nchannels ()
- 5.192.2.4 std::vector< mha_real_t > MHAFilter::thirdoctave_analyzer_t::get_cf_hz()
- 5.192.2.6 std::vector< mha_real_t > MHAFilter::thirdoctave_analyzer_t::bw_generator (mhaconfig_t cfg) [static]
- 5.192.3 Member Data Documentation
- **5.192.3.1 mhaconfig_t** MHAFilter::thirdoctave_analyzer_t::cfg_ [private]

5.192.3.2 std::vector<mha_real_t> MHAFilter::thirdoctave_analyzer_t::cf [private]
5.192.3.3 MHAFilter::gamma_flt_t MHAFilter::thirdoctave_analyzer_t::fb [private]
5.192.3.4 MHASignal::waveform_t MHAFilter::thirdoctave_analyzer_t::out_chunk [private]
5.192.3.5 MHASignal::waveform_t MHAFilter::thirdoctave_analyzer_t::out_chunk_im [private]

The documentation for this class was generated from the following files:

- complex_filter.h
- complex_filter.cpp
- 5.193 MHAFilter::transfer_function_t Struct Reference

a structure containing a source channel number, a target channel number, and an impulse response.

Public Member Functions

transfer function t ()

Default constructor for STL conformity.

 transfer_function_t (unsigned int source_channel_index, unsigned int target_← channel_index, const std::vector< float > &impulse_response)

Data constructor.

- unsigned int **partitions** (unsigned int fragsize) const
 - for the given partition size, return the number of partitions of the impulse response.
- unsigned int non_empty_partitions (unsigned int fragsize) const
 - for the given partition size, return the number of non-empty partitions of the impulse response.
- bool **isempty** (unsigned int fragsize, unsigned int index) const checks if the partition contains only zeros

Public Attributes

• unsigned int source_channel_index

Source audio channel index for this transfer function.

unsigned int target_channel_index

Target audio channel index for this transfer function.

• std::vector< float > impulse response

Impulse response of transfer from source to target channel.

5.193.1 Detailed Description

a structure containing a source channel number, a target channel number, and an impulse response.

5.193.2 Constructor & Destructor Documentation

```
5.193.2.1 MHAFilter::transfer_function_t::transfer_function_t( ) [inline]
```

Default constructor for STL conformity.

Not used.

Data constructor.

Parameters

source_channel_index	Source audio channel index for this transfer function
target_channel_index	Target audio channel index for this transfer function
impulse_response	Impulse response of transfer from source to target channel

5.193.3 Member Function Documentation

for the given partition size, return the number of partitions of the impulse response.

Parameters

fragsize	partition size
----------	----------------

Returns

number of partitions occupied by the impulse response

for the given partition size, return the number of non-empty partitions of the impulse response.

Parameters

Returns

the number of non-empty partitions of the impulse response, i.e. partitions containing only zeros are not counted.

checks if the partition contains only zeros

Parameters

fragsize	partition size
index	partition index

Returns

true when this partition of the impulse response contains only zeros.

5.193.4 Member Data Documentation

5.193.4.1 unsigned int MHAFilter::transfer_function_t::source_channel_index

Source audio channel index for this transfer function.

5.193.4.2 unsigned int MHAFilter::transfer_function_t::target_channel_index

Target audio channel index for this transfer function.

5.193.4.3 std::vector<float> MHAFilter::transfer_function_t::impulse_response

Impulse response of transfer from source to target channel.

The documentation for this struct was generated from the following files:

- mha filter.hh
- mha_filter.cpp

5.194 MHAFilter::transfer_matrix_t Struct Reference

A sparse matrix of transfer function partitionss.

Inherits vector< transfer_function_t >.

Public Member Functions

- std::valarray< unsigned int > partitions (unsigned fragsize) const
 Returns an array of the results of calling the partitions() (p. 536) method on every matrix member.
- std::valarray < unsigned int > non_empty_partitions (unsigned int fragsize) const
 Returns an array of the results of calling the non_empty_partitions() (p. 536) method on every
 matrix member.

5.194.1 Detailed Description

A sparse matrix of transfer function partitionss.

Each matrix element knows its position in the matrix, so they can be stored as a vector.

5.194.2 Member Function Documentation

```
5.194.2.1 std::valarray<unsigned int> MHAFilter::transfer_matrix_t::partitions ( unsigned fragsize ) const [inline]
```

Returns an array of the results of calling the **partitions()** (p. 536) method on every matrix member.

```
5.194.2.2 std::valarray<unsigned int> MHAFilter::transfer_matrix_t::non_empty_partitions ( unsigned int fragsize ) const [inline]
```

Returns an array of the results of calling the **non_empty_partitions()** (p. 536) method on every matrix member.


The documentation for this struct was generated from the following file:

· mha_filter.hh

5.195 MHAIOJack::io_jack_t Class Reference

Main class for JACK IO.

Inheritance diagram for MHAIOJack::io jack t:

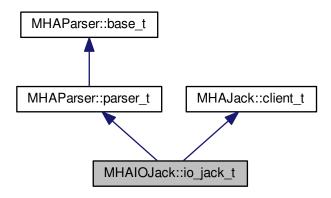

Public Member Functions

- io_jack_t (unsigned int fragsize, float samplerate, IOProcessEvent_t proc_event, void *proc_handle, IOStartedEvent_t start_event, void *start_handle, IOStoppedEvent← _t stop_event, void *stop_handle)
- void prepare (int, int)
 Allocate buffers, activate JACK client and install internal ports.
- void release ()

Private Member Functions

void reconnect_inports ()

Connect the input ports when connection variable is accessed.

void reconnect_outports ()

Connect the output ports when connection variable is accessed.

- void get_physical_input_ports ()
- void get_physical_output_ports ()
- void get_all_input_ports ()
- void get_all_output_ports ()
- void get delays in ()
- void get_delays_out ()
- void read_get_cpu_load ()
- void read_get_xruns ()
- void read_get_scheduler ()

Private Attributes

- unsigned int fw_fragsize
- float fw samplerate
- MHAParser::string_t servername
- MHAParser::string_t clientname
- MHAParser::vstring t connections in
- MHAParser::vint mon t delays in
- MHAParser::vstring t connections out
- MHAParser::vint mon t delays out
- · MHAParser::vstring t portnames in
- MHAParser::vstring_t portnames_out
- MHAParser::vstring_mon_t ports_in_physical
- MHAParser::vstring_mon_t ports_out_physical
- MHAParser::vstring_mon_t ports_in_all
- MHAParser::vstring_mon_t ports_out_all
- MHAParser::parser_t ports_parser
- MHAParser::float_mon_t state_cpuload
- MHAParser::int_mon_t state_xruns
- MHAParser::int_mon_t state_priority
- MHAParser::string_mon_t state_scheduler
- MHAParser::parser_t state_parser
- MHAEvents::patchbay_t< io_jack_t > patchbay

Additional Inherited Members

5.195.1 Detailed Description

Main class for JACK IO.

This class registers a JACK client. JACK and framework states are managed by this class.

5.195.2 Constructor & Destructor Documentation

5.195.3 Member Function Documentation

Allocate buffers, activate JACK client and install internal ports.

```
5.195.3.2 void io_jack_t::release (
                     void )
5.195.3.3 void io_jack_t::reconnect_inports() [private]
Connect the input ports when connection variable is accessed.
5.195.3.4 void io_jack_t::reconnect_outports ( ) [private]
Connect the output ports when connection variable is accessed.
5.195.3.5 void io_jack_t::get_physical_input_ports() [private]
5.195.3.6 void io_jack_t::get_physical_output_ports( ) [private]
5.195.3.7 void io_jack_t::get_all_input_ports( ) [private]
5.195.3.8 void io_jack_t::get_all_output_ports( ) [private]
5.195.3.9 void io_jack_t::get_delays_in( ) [private]
5.195.3.10 void io_jack_t::get_delays_out( ) [private]
5.195.3.11 void io_jack_t::read_get_cpu_load( ) [private]
5.195.3.12 void io_jack_t::read_get_xruns() [private]
5.195.3.13 void io_jack_t::read_get_scheduler( ) [private]
5.195.4 Member Data Documentation
5.195.4.1 unsigned int MHAIOJack::io_jack_t::fw_fragsize [private]
5.195.4.2 float MHAIOJack::io_jack_t::fw_samplerate [private]
5.195.4.3 MHAParser::string_t MHAIOJack::io_jack_t::servername [private]
5.195.4.4 MHAParser::string_t MHAIOJack::io_jack_t::clientname [private]
5.195.4.5 MHAParser::vstring_t MHAIOJack::io_jack_t::connections_in [private]
5.195.4.6 MHAParser::vint_mon_t MHAIOJack::io_jack_t::delays_in [private]
```


```
5.195.4.7 MHAParser::vstring t MHAIOJack::io jack t::connections out [private]
5.195.4.8 MHAParser::vint_mon_t MHAIOJack::io_jack_t::delays_out [private]
5.195.4.9 MHAParser::vstring_t MHAIOJack::io_jack_t::portnames_in [private]
5.195.4.10 MHAParser::vstring t MHAIOJack::io jack t::portnames out [private]
5.195.4.11 MHAParser::vstring mon t MHAIOJack::io jack t::ports in physical [private]
5.195.4.12 MHAParser::vstring mon t MHAIOJack::io jack t::ports out physical [private]
5.195.4.13 MHAParser::vstring mon t MHAIOJack::io jack t::ports in all [private]
5.195.4.14 MHAParser::vstring_mon_t MHAIOJack::io_jack_t::ports_out_all [private]
5.195.4.15 MHAParser::parser_t MHAIOJack::io_jack_t::ports_parser [private]
5.195.4.16 MHAParser::float mon t MHAIOJack::io_jack_t::state_cpuload [private]
5.195.4.17 MHAParser::int mon t MHAIOJack::io_jack_t::state_xruns [private]
5.195.4.18 MHAParser::int mon t MHAIOJack::io_jack_t::state_priority [private]
5.195.4.19 MHAParser::string mon t MHAIOJack::io_jack_t::state_scheduler [private]
5.195.4.20 MHAParser::parser t MHAIOJack::io_jack_t::state_parser [private]
5.195.4.21 MHAEvents::patchbay t<io jack t> MHAIOJack::io_jack_t::patchbay [private]
The documentation for this class was generated from the following file:
```

MHAIOJack.cpp

5.196 MHAIOJackdb::io_jack_t Class Reference

Main class for JACK IO.

Inheritance diagram for MHAIOJackdb::io_jack_t:

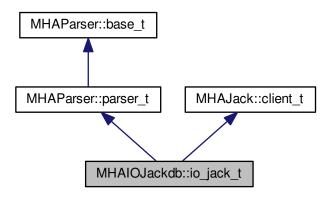

Public Member Functions

- io_jack_t (unsigned int fragsize, float samplerate, IOProcessEvent_t proc_event, void *proc_handle, IOStartedEvent_t start_event, void *start_handle, IOStoppedEvent← _t stop_event, void *stop_handle)
- void prepare (int, int)

Allocate buffers, activate JACK client and install internal ports.

- void release ()
- bool fail_on_async_jackerror () const

Private Member Functions

- int IOProcessEvent inner (mha wave t *sln, mha wave t **sOut)
- void reconnect_inports ()

Connect the input ports when connection variable is accessed.

void reconnect_outports ()

Connect the output ports when connection variable is accessed.

- void get physical input ports ()
- void get_physical_output_ports ()
- void get_all_input_ports ()
- void get_all_output_ports ()
- void read_get_cpu_load ()
- void read_get_xruns ()
- void read_get_scheduler ()
- void set_use_jack_transport ()
- void set_locate ()

Static Private Member Functions

static int IOProcessEvent_inner (void *handle, mha_wave_t *sIn, mha_wave_t **s
 — Out)

Private Attributes

- IOProcessEvent_t proc_event
- void * proc handle
- unsigned int mha_fragsize
- float mha_samplerate
- unsigned int fragsize ratio
- MHAParser::string_t servername
- MHAParser::string_t clientname
- MHAParser::vstring_t connections_in
- MHAParser::vstring_t connections_out
- MHAParser::vstring_t portnames_in
- MHAParser::vstring_t portnames_out
- MHAParser::bool_t fail_on_async_jackerr
- MHAParser::bool_t use_jack_transport
- MHAParser::float t locate
- MHAParser::float_mon_t server_srate
- MHAParser::int_mon_t server_fragsize
- MHAParser::vstring_mon_t ports_in_physical
- MHAParser::vstring_mon_t ports_out_physical
- MHAParser::vstring_mon_t ports_in_all
- MHAParser::vstring mon t ports out all
- MHAParser::parser_t ports_parser
- · MHAParser::float mon t state cpuload
- MHAParser::int_mon_t state_xruns
- MHAParser::int mon t state priority
- MHAParser::string_mon_t state_scheduler
- MHAParser::parser_t state_parser
- MHASignal::waveform_t * pwinner_out
- MHAEvents::patchbay_t< io_jack_t > patchbay

Additional Inherited Members

5.196.1 Detailed Description

Main class for JACK IO.

This class registers a JACK client. JACK and framework states are managed by this class.

```
5.196.2 Constructor & Destructor Documentation
5.196.2.1 io_jack_t::io_jack_t (
                      unsigned int fragsize,
                      float samplerate,
                      IOProcessEvent_t proc_event,
                      void * proc_handle,
                      IOStartedEvent_t start_event,
                      void * start_handle,
                      IOStoppedEvent t stop event,
                      void * stop_handle )
5.196.3 Member Function Documentation
5.196.3.1 void io_jack_t::prepare (
                      int nch_in,
                      int nch_out )
Allocate buffers, activate JACK client and install internal ports.
5.196.3.2 void io_jack_t::release (
                      void )
5.196.3.3 bool MHAIOJackdb::io_jack_t::fail_on_async_jackerror( ) const [inline]
5.196.3.4 int io_jack_t::IOProcessEvent_inner (
                      void * handle,
                      mha wave t * sln,
                      mha_wave_t ** sOut ) [static], [private]
5.196.3.5 int io_jack_t::IOProcessEvent_inner (
                      mha wave t * sln,
                      mha_wave_t ** sOut ) [private]
5.196.3.6 void io_jack_t::reconnect_inports() [private]
Connect the input ports when connection variable is accessed.
5.196.3.7 void io_jack_t::reconnect_outports() [private]
```

Connect the output ports when connection variable is accessed.

```
5.196.3.8 void io_jack_t::get_physical_input_ports() [private]
5.196.3.9 void io_jack_t::get_physical_output_ports( ) [private]
5.196.3.10 void io_jack_t::get_all_input_ports( ) [private]
5.196.3.11 void io_jack_t::get_all_output_ports( ) [private]
5.196.3.12 void io_jack_t::read_get_cpu_load( ) [private]
5.196.3.13 void io_jack_t::read_get_xruns( ) [private]
5.196.3.14 void io_jack_t::read_get_scheduler( ) [private]
5.196.3.15 void io_jack_t::set_use_jack_transport() [private]
5.196.3.16 void io_jack_t::set_locate() [private]
5.196.4 Member Data Documentation
5.196.4.1 IOProcessEvent_t MHAIOJackdb::io_jack_t::proc_event [private]
5.196.4.2 void* MHAIOJackdb::io_jack_t::proc_handle [private]
5.196.4.3 unsigned int MHAIOJackdb::io_jack_t::mha_fragsize [private]
5.196.4.4 float MHAIOJackdb::io_jack_t::mha_samplerate [private]
5.196.4.5
         unsigned int MHAIOJackdb::io_jack_t::fragsize_ratio [private]
5.196.4.6
         MHAParser::string t MHAIOJackdb::io_jack_t::servername [private]
5.196.4.7
         MHAParser::string t MHAIOJackdb::io_jack_t::clientname [private]
5.196.4.8 MHAParser::vstring t MHAIOJackdb::io_jack_t::connections_in [private]
5.196.4.9 MHAParser::vstring t MHAIOJackdb::io_jack_t::connections_out [private]
5.196.4.10 MHAParser::vstring t MHAIOJackdb::io_jack_t::portnames_in [private]
          MHAParser::vstring_t MHAIOJackdb::io_jack_t::portnames_out [private]
5.196.4.11
5.196.4.12 MHAParser::bool_t MHAlOJackdb::io_jack_t::fail_on_async_jackerr [private]
```


```
5.196.4.13 MHAParser::bool_t MHAIOJackdb::io_jack_t::use_jack_transport [private]
5.196.4.14 MHAParser::float t MHAIOJackdb::io_jack_t::locate [private]
5.196.4.15 MHAParser::float_mon_t MHAIOJackdb::io_jack_t::server_srate [private]
5.196.4.16 MHAParser::int_mon_t MHAIOJackdb::io_jack_t::server_fragsize [private]
5.196.4.17 MHAParser::vstring_mon_t MHAlOJackdb::io_jack_t::ports_in_physical [private]
5.196.4.18 MHAParser::vstring mon t MHAIOJackdb::io jack t::ports out physical
          [private]
5.196.4.19 MHAParser::vstring mon t MHAIOJackdb::io_jack_t::ports_in_all [private]
5.196.4.20 MHAParser::vstring_mon_t MHAlOJackdb::io_jack_t::ports_out_all [private]
5.196.4.21 MHAParser::parser_t MHAIOJackdb::io_jack_t::ports_parser [private]
5.196.4.22 MHAParser::float mon t MHAIOJackdb::io_jack_t::state_cpuload [private]
5.196.4.23 MHAParser::int_mon_t MHAIOJackdb::io_jack_t::state_xruns [private]
5.196.4.24 MHAParser::int_mon_t MHAIOJackdb::io_jack_t::state_priority [private]
5.196.4.25 MHAParser::string mon t MHAIOJackdb::io jack t::state scheduler [private]
5.196.4.26 MHAParser::parser_t MHAIOJackdb::io_jack_t::state_parser [private]
5.196.4.27 MHASignal::waveform_t* MHAIOJackdb::io_jack_t::pwinner_out [private]
5.196.4.28 MHAEvents::patchbay_t<io_jack_t> MHAIOJackdb::io_jack_t::patchbay
          [private]
```

The documentation for this class was generated from the following file:

MHAIOJackdb.cpp

5.197 MHAIOPortAudio::device_info_t Class Reference

Inheritance diagram for MHAIOPortAudio::device_info_t:

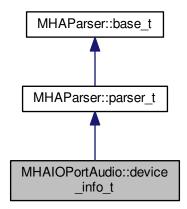

Public Member Functions

- device_info_t ()
- void fill_info ()

Public Attributes

- MHAParser::int_mon_t numDevices
- MHAParser::vint_mon_t structVersion
- MHAParser::vstring_mon_t name
- MHAParser::vint_mon_t hostApi
- MHAParser::vint_mon_t maxInputChannels
- MHAParser::vint_mon_t maxOutputChannels
- MHAParser::vfloat_mon_t defaultLowInputLatency
- MHAParser::vfloat_mon_t defaultLowOutputLatency
- MHAParser::vfloat_mon_t defaultHighInputLatency
- MHAParser::vfloat_mon_t defaultHighOutputLatency
- MHAParser::vfloat_mon_t defaultSampleRate

Additional Inherited Members


5.197.1 Constructor & Destructor Documentation
5.197.1.1 MHAIOPortAudio::device_info_t::device_info_t() [inline]
5.197.2 Member Function Documentation
5.197.2.1 void MHAIOPortAudio::device_info_t::fill_info() [inline]
5.197.3 Member Data Documentation
5.197.3.1 MHAParser::int_mon_t MHAIOPortAudio::device_info_t::numDevices
5.197.3.2 MHAParser::vint_mon_t MHAIOPortAudio::device_info_t::structVersion
5.197.3.3 MHAParser::vstring_mon_t MHAIOPortAudio::device_info_t::name
5.197.3.4 MHAParser::vint_mon_t MHAIOPortAudio::device_info_t::hostApi
5.197.3.5 MHAParser::vint_mon_t MHAIOPortAudio::device_info_t::maxInputChannels
5.197.3.6 MHAParser::vint_mon_t MHAIOPortAudio::device_info_t::maxOutputChannels
5.197.3.7 MHAParser::vfloat_mon_t MHAIOPortAudio::device_info_t::defaultLowInputLatency
5.197.3.8 MHAParser::vfloat_mon_t MHAIOPortAudio::device_info_t::defaultLowOutputLatency
5.197.3.9 MHAParser::vfloat_mon_t MHAIOPortAudio::device_info_t::defaultHighInputLatency
5.197.3.10 MHAParser::vfloat_mon_t MHAIOPortAudio::device_info_t::defaultHighOutputLatency
5.197.3.11 MHAParser::vfloat_mon_t MHAIOPortAudio::device_info_t::defaultSampleRate
The documentation for this class was generated from the following file:

MHAIOPortAudio.cpp

5.198 MHAIOPortAudio::io_portaudio_t Class Reference

Main class for Portaudio sound IO.

Inheritance diagram for MHAIOPortAudio::io_portaudio_t:

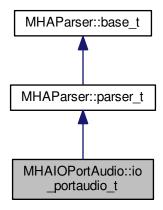

Public Member Functions

- io_portaudio_t (unsigned int fragsize, float samplerate, IOProcessEvent_t proc_
 event, void *proc_handle, IOStartedEvent_t start_event, void *start_handle, IO←
 StoppedEvent_t stop_event, void *stop_handle)
- void device_name_updated ()
- void device_index_updated ()
- ~io portaudio t ()
- void cmd_prepare (int, int)
- void cmd_start ()
- void cmd_stop ()
- void cmd_release ()
- int **portaudio_callback** (const void *input, void *output, unsigned long frame_count, const PaStreamCallbackTimeInfo *time_info, PaStreamCallbackFlags status_flags)

Private Attributes

- · device_info_t device_info
- MHASignal::waveform_t * s_in
- mha_wave_t * s_out
- · float samplerate
- unsigned int nchannels_out
- · unsigned int nchannels_in

- · unsigned int fragsize
- IOProcessEvent_t proc_event
- void * proc_handle
- IOStartedEvent_t start_event
- void * start handle
- IOStoppedEvent_t stop_event
- void * stop_handle
- PaStream * portaudio_stream
- MHAParser::string_t device_name
- MHAParser::int_t device_index
- MHAEvents::patchbay_t< io_portaudio_t > patchbay

Additional Inherited Members

5.198.1 Detailed Description

Main class for Portaudio sound IO.

```
5.198.2 Constructor & Destructor Documentation
```

```
5.198.2.2 MHAIOPortAudio::io_portaudio_t::~io_portaudio_t( ) [inline]
```

5.198.3 Member Function Documentation

```
5.198.3.1 void MHAIOPortAudio::io_portaudio_t::device_name_updated( ) [inline]
```

5.198.3.2 void MHAIOPortAudio::io_portaudio_t::device_index_updated() [inline]

5.198.3.4 void MHAIOPortAudio::io_portaudio_t::cmd_start ()

```
5.198.3.5 void MHAIOPortAudio::io portaudio t::cmd stop ( )
5.198.3.6 void MHAIOPortAudio::io portaudio t::cmd release ( )
5.198.3.7 int MHAIOPortAudio::io_portaudio_t::portaudio_callback (
                      const void * input,
                      void * output.
                      unsigned long frame_count,
                      const PaStreamCallbackTimeInfo * time info,
                      PaStreamCallbackFlags status_flags )
5.198.4 Member Data Documentation
5.198.4.1
         device info t MHAIOPortAudio::io portaudio t::device info [private]
5.198.4.2 MHASignal::waveform t*MHAIOPortAudio::io_portaudio_t::s_in [private]
5.198.4.3 mha wave t* MHAIOPortAudio::io portaudio t::s out [private]
5.198.4.4 float MHAIOPortAudio::io_portaudio_t::samplerate [private]
5.198.4.5 unsigned int MHAIOPortAudio::io_portaudio_t::nchannels_out [private]
5.198.4.6
         unsigned int MHAIOPortAudio::io_portaudio_t::nchannels_in [private]
5.198.4.7
         unsigned int MHAIOPortAudio::io portaudio t::fragsize [private]
5.198.4.8 IOProcessEvent t MHAIOPortAudio::io portaudio t::proc event [private]
5.198.4.9 void* MHAIOPortAudio::io_portaudio_t::proc_handle [private]
5.198.4.10 IOStartedEvent_t MHAIOPortAudio::io_portaudio_t::start_event [private]
5.198.4.11 void* MHAIOPortAudio::io portaudio t::start handle [private]
5.198.4.12 IOStoppedEvent tMHAIOPortAudio::io_portaudio_t::stop_event [private]
5.198.4.13 void* MHAIOPortAudio::io portaudio t::stop handle [private]
5.198.4.14 PaStream * MHAIOPortAudio::io_portaudio_t::portaudio_stream [private]
5.198.4.15 MHAParser::string t MHAIOPortAudio::io_portaudio_t::device_name [private]
5.198.4.16 MHAParser::int_t MHAIOPortAudio::io_portaudio_t::device_index [private]
5.198.4.17
          MHAEvents::patchbay_t<io_portaudio_t> MHAIOPortAudio::io_portaudio_t \leftarrow
           ::patchbay [private]
```


The documentation for this class was generated from the following file:

MHAIOPortAudio.cpp

5.199 MHAJack::client_avg_t Class Reference

Generic JACK client for averaging a system response across time.

Inheritance diagram for MHAJack::client_avg_t:

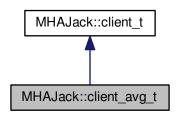

Public Member Functions

- client_avg_t (const std::string &name, const unsigned int &nrep_)
 Constructor for averaging client.
- void io (mha_wave_t *s_out, mha_wave_t *s_in, const std::vector< std::string > &p_out, const std::vector< std::string > &p_in, float *srate=NULL, unsigned int *fragsize=NULL)

Recording function.

Private Member Functions

- void proc (mha_wave_t *sln, mha_wave_t **sOut)
- void IOStoppedEvent ()

Static Private Member Functions

- static int proc (void *handle, mha_wave_t *sln, mha_wave_t **sOut)
- static void IOStoppedEvent (void *handle, int proc_err, int io_err)

Private Attributes

- bool b stopped
- unsigned int pos
- mha_wave_t * sn_in
- mha_wave_t * sn_out
- std::string name
- MHASignal::waveform_t * frag_out
- const unsigned int nrep
- unsigned int **n**
- bool b_ready

Additional Inherited Members

5.199.1 Detailed Description

Generic JACK client for averaging a system response across time.

```
5.199.2 Constructor & Destructor Documentation
```

Constructor for averaging client.

Parameters

name⊷	Name of JACK client
_ nrep⊷	Number of repetitions
_	

5.199.3 Member Function Documentation

Recording function.

long-description

Parameters

is_out	Input (test) signal, which will be repeated
is_in	System response (averaged, same length as input required)
p_out	Ports to play back the test signal
p_in	Ports to record from the system response
srate	Pointer to sampling rate variable, will be filled with server sampling rate
fragsize	Pointer to fragment size variable, will be filled with server fragment size

```
5.199.3.2 int MHAJack::client_avg_t::proc (
                     void * handle,
                     mha wave t * sln,
                     mha_wave_t ** sOut ) [static], [private]
5.199.3.3 void MHAJack::client_avg_t::IOStoppedEvent (
                     void * handle,
                     int proc_err,
                     int io_err ) [static], [private]
5.199.3.4 void MHAJack::client_avg_t::proc (
                     mha_wave_t * sln,
                     mha_wave_t ** sOut ) [private]
5.199.3.5 void MHAJack::client_avg_t::IOStoppedEvent( ) [private]
5.199.4 Member Data Documentation
5.199.4.1 bool MHAJack::client_avg_t::b_stopped [private]
5.199.4.2 unsigned int MHAJack::client_avg_t::pos [private]
5.199.4.3 mha_wave_t* MHAJack::client_avg_t::sn_in [private]
5.199.4.4 mha wave t* MHAJack::client_avg_t::sn_out [private]
5.199.4.5 std::string MHAJack::client_avg_t::name [private]
5.199.4.6 MHASignal::waveform_t* MHAJack::client_avg_t::frag_out [private]
5.199.4.7 const unsigned int MHAJack::client_avg_t::nrep [private]
5.199.4.8 unsigned int MHAJack::client_avg_t::n [private]
5.199.4.9 bool MHAJack::client_avg_t::b_ready [private]
```


The documentation for this class was generated from the following files:

- · mhajack.h
- mhajack.cpp

5.200 MHAJack::client noncont t Class Reference

Generic client for synchronous playback and recording of waveform fragments.

Inheritance diagram for MHAJack::client noncont t:

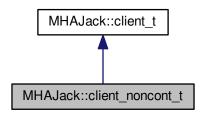

Public Member Functions

- client_noncont_t (const std::string &name, bool use_jack_transport=false)
- void io (mha_wave_t *s_out, mha_wave_t *s_in, const std::vector< std::string
 &p_out, const std::vector< std::string
 &p_in, float *srate=NULL, unsigned int *fragsize=NULL)

Private Member Functions

- void proc (mha_wave_t *sln, mha_wave_t **sOut)
- void IOStoppedEvent ()

Static Private Member Functions

- static int proc (void *handle, mha_wave_t *sln, mha_wave_t **sOut)
- static void **IOStoppedEvent** (void *handle, int proc err, int io err)

Private Attributes

- bool b_stopped
- unsigned int pos
- mha_wave_t * sn_in
- mha_wave_t * sn_out
- std::string name
- MHASignal::waveform_t * frag_out

Additional Inherited Members

```
5.200.1 Detailed Description
```

Generic client for synchronous playback and recording of waveform fragments.

```
5.200.2 Constructor & Destructor Documentation
5.200.2.1 MHAJack::client_noncont_t::client_noncont_t (
                      const std::string & name,
                      bool use_jack_transport = false )
5.200.3 Member Function Documentation
5.200.3.1 void MHAJack::client_noncont_t::io (
                      mha wave t * s out,
                      mha wave t * s in,
                      const std::vector< std::string > & p_out,
                      const std::vector< std::string > & p_in,
                      float * srate = NULL,
                      unsigned int * fragsize = NULL )
5.200.3.2 int MHAJack::client_noncont_t::proc (
                      void * handle,
                      mha wave t * sln,
                      mha wave t ** sOut ) [static], [private]
5.200.3.3 void MHAJack::client_noncont_t::IOStoppedEvent (
                      void * handle,
                      int proc_err,
                      int io_err ) [static], [private]
5.200.3.4 void MHAJack::client_noncont_t::proc (
                      mha wave t * sln.
                      mha wave t ** sOut ) [private]
5.200.3.5 void MHAJack::client_noncont_t::lOStoppedEvent() [private]
5.200.4 Member Data Documentation
5.200.4.1 bool MHAJack::client_noncont_t::b_stopped [private]
5.200.4.2 unsigned int MHAJack::client_noncont_t::pos [private]
```

```
5.200.4.3 mha_wave_t* MHAJack::client_noncont_t::sn_in [private]
```

5.200.4.4 mha_wave_t* **MHAJack::client_noncont_t::sn_out** [private]

5.200.4.5 std::string MHAJack::client_noncont_t::name [private]

5.200.4.6 MHASignal::waveform_t* MHAJack::client_noncont_t::frag_out [private]


The documentation for this class was generated from the following files:

- · mhajack.h
- mhajack.cpp

5.201 MHAJack::client_t Class Reference

Generic asynchronous JACK client.

Inheritance diagram for MHAJack::client_t:

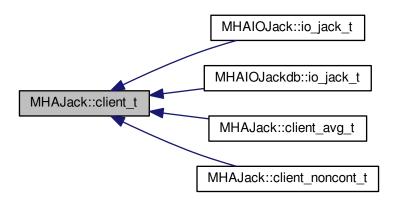

Public Member Functions

- client_t (IOProcessEvent_t proc_event, void *proc_handle=NULL, IOStartedEvent
 _t start_event=NULL, void *start_handle=NULL, IOStoppedEvent_t stop_event=N
 ULL, void *stop_handle=NULL, bool use_jack_transport=false)
- void **prepare** (const std::string &client_name, const unsigned int &**nchannels_in**, const unsigned int &**nchannels_out**)

Allocate buffers, activate JACK client and install internal ports.

• void **prepare** (const std::string &server_name, const std::string &client_name, const unsigned int &nchannels_in, const unsigned int &nchannels_out)

Allocate buffers, ports, and activates JACK client.

void release ()

Remove JACK client and deallocate internal ports and buffers.

- void start (bool fail_on_async_jack_error=true)
- void stop ()
- void connect input (const std::vector< std::string > &)

Connect the input ports when connection variable is accessed.

void connect_output (const std::vector< std::string > &)

Connect the output ports when connection variable is accessed.

- unsigned int get_fragsize () const
- float get_srate () const
- unsigned long **get xruns** ()
- unsigned long get xruns reset ()
- std::string **str_error** (int err)
- void get_ports (std::vector< std::string > &, unsigned long jack_flags)
 Get a list of Jack ports.
- std::vector< std::string > get_my_input_ports ()
- std::vector< std::string > get_my_output_ports ()
- void **set input portnames** (const std::vector< std::string > &)
- void set output portnames (const std::vector< std::string > &)
- float get_cpu_load ()
- void set use jack transport (bool ut)

Protected Attributes

• jack client t * jc

Private Member Functions

void prepare_impl (const char *server_name, const char *client_name, const unsigned int &nchannels_in, const unsigned int &nchannels_out)

Allocate buffers, activate JACK client and allocates jack ports Registers the jack client with the given server and activates it.

- void internal start ()
- void internal_stop ()
- void stopped (int, int)
- int jack_proc_cb (jack_nframes_t)

This is the main processing callback.

int jack_xrun_cb ()

Static Private Member Functions

- static int jack_proc_cb (jack_nframes_t, void *)
- static int jack_xrun_cb (void *)

Private Attributes

- unsigned long **num xruns**
- unsigned int fragsize
- float samplerate
- unsigned int nchannels_in
- unsigned int nchannels_out
- IOProcessEvent_t proc_event
- void * proc handle
- IOStartedEvent_t start_event
- void * start_handle
- IOStoppedEvent_t stop_event
- void * stop handle
- MHASignal::waveform_t * s_in
- mha_wave_t * s_out
- MHAJack::port t ** inch
- MHAJack::port_t ** outch
- · unsigned int flags
- bool b_prepared
- bool use_jack_transport
- jack_transport_state_t jstate_prev
- std::vector< std::string > input portnames
- std::vector< std::string > output portnames
- bool fail_on_async_jackerror

5.201.1 Detailed Description

Generic asynchronous JACK client.

5.201.2 Constructor & Destructor Documentation

```
5.201.2.1 MHAJack::client t::client t (
```

```
IOProcessEvent_t proc_event, void * proc_handle = NULL,
```

IOStartedEvent t start event = NULL,

void * start handle = NULL,

IOStoppedEvent_t stop_event = NULL,

void * stop_handle = NULL,

bool use_jack_transport = false)

5.201.3 Member Function Documentation

5.201.3.1 void MHAJack::client_t::prepare (

const std::string & client_name, const unsigned int & nch_in, const unsigned int & nch_out)

Allocate buffers, activate JACK client and install internal ports.

Registers the jack client with the default jack server and activates it.

Parameters

client_name	Name of this jack client
nch_in	Input ports to register
nch_out	Output ports to register

Allocate buffers, ports, and activates JACK client.

Registers the jack client with specified jack server and activates it.

Parameters

server_name	Name of the jack server to register with
client_name	Name of this jack client
nch_in	Input ports to register
nch_out	Output ports to register

Remove JACK client and deallocate internal ports and buffers.

Connect the input ports when connection variable is accessed.

```
5.201.3.7 void MHAJack::client_t::connect_output ( const std::vector< std::string > & con )
```

Connect the output ports when connection variable is accessed.

```
5.201.3.8 unsigned int MHAJack::client_t::get_fragsize( ) const [inline]
5.201.3.9 float MHAJack::client_t::get_srate( ) const [inline]
5.201.3.10 unsigned long MHAJack::client_t::get_xruns( ) [inline]
5.201.3.11 unsigned long MHAJack::client_t::get_xruns_reset( )
5.201.3.12 std::string MHAJack::client_t::str_error( int err )
5.201.3.13 void MHAJack::client_t::get_ports( std::vector< std::string > & res, unsigned long jack_flags )
```

Get a list of Jack ports.

Parameters

res	Result string vector
jack_flags	Jack port flags (JackPortInput etc.)

Allocate buffers, activate JACK client and allocates jack ports Registers the jack client with the given server and activates it.

Parameters

server_name	Name of the jack server to register with
client_name	Name of this jack client
nch_in	Input ports to register
nch_out	Output ports to register

5.201.3.21 void MHAJack::client_t::internal_start() [private]

```
5.201.3.22 void MHAJack::client_t::internal_stop( ) [private]
5.201.3.23 void MHAJack::client_t::stopped (
                       int proc_err,
                       int io_err ) [private]
5.201.3.24 int MHAJack::client_t::jack_proc_cb (
                       jack_nframes_t n,
                       void * h ) [static], [private]
5.201.3.25 int MHAJack::client_t::jack_proc_cb (
                       jack_nframes_t n ) [private]
This is the main processing callback.
Here happens double buffering and downsampling.
5.201.3.26 int MHAJack::client_t::jack_xrun_cb (
                       void * h ) [static], [private]
5.201.3.27 int MHAJack::client_t::jack_xrun_cb() [inline], [private]
5.201.4 Member Data Documentation
5.201.4.1 unsigned long MHAJack::client_t::num_xruns [private]
5.201.4.2 unsigned int MHAJack::client_t::fragsize [private]
5.201.4.3 float MHAJack::client_t::samplerate [private]
5.201.4.4 unsigned int MHAJack::client t::nchannels in [private]
5.201.4.5 unsigned int MHAJack::client_t::nchannels_out [private]
5.201.4.6 IOProcessEvent_t MHAJack::client_t::proc_event [private]
```

```
5.201.4.7 void* MHAJack::client_t::proc_handle [private]
5.201.4.8 IOStartedEvent_t MHAJack::client_t::start_event [private]
5.201.4.9 void* MHAJack::client_t::start_handle [private]
5.201.4.10 IOStoppedEvent tMHAJack::client_t::stop_event [private]
5.201.4.11 void* MHAJack::client_t::stop_handle [private]
5.201.4.12 MHASignal::waveform_t* MHAJack::client_t::s_in [private]
5.201.4.13 mha_wave_t* MHAJack::client_t::s_out [private]
5.201.4.14 MHAJack::port_t** MHAJack::client_t::inch [private]
5.201.4.15 MHAJack::port_t** MHAJack::client_t::outch [private]
5.201.4.16 jack_client_t* MHAJack::client_t::jc [protected]
5.201.4.17 unsigned int MHAJack::client_t::flags [private]
5.201.4.18 bool MHAJack::client_t::b_prepared [private]
5.201.4.19 bool MHAJack::client_t::use_jack_transport [private]
5.201.4.20 jack_transport_state_t MHAJack::client_t::jstate_prev [private]
5.201.4.21 std::vector<std::string> MHAJack::client_t::input_portnames [private]
5.201.4.22 std::vector<std::string> MHAJack::client_t::output_portnames [private]
5.201.4.23 bool MHAJack::client_t::fail_on_async_jackerror [private]
```

The documentation for this class was generated from the following files:

- mhajack.h
- mhajack.cpp

5.202 MHAJack::port t Class Reference

Class for one channel/port.

Public Types

```
Public Member Functions
```

```
    port_t (jack_client_t *jc, dir_t dir, int id)
    port_t (jack_client_t *jc, dir_t dir, const std::string &id)
    Constructor to create port with specific name.
```

- ~port t()
- void read (mha_wave_t *s, unsigned int ch)
- void write (mha_wave_t *s, unsigned int ch)
- void **mute** (unsigned int n)
- void connect_to (const char *pn)
- const char * get_short_name ()

Return the port name.

Private Attributes

```
    dir_t dir_type
```

- jack_port_t * port
- jack_default_audio_sample_t * iob
- jack_client_t * jc

5.202.1 Detailed Description

Class for one channel/port.

This class represents one JACK port. Double buffering for asynchronous process callbacks is managed by this class.

```
5.202.2 Member Enumeration Documentation
```

```
5.202.2.1 enum MHAJack::port_t::dir_t
```

Enumerator

input

output

5.202.3 Constructor & Destructor Documentation

Parameters

jc	JACK client.
dir	Direction (input/output).
id	Number in port name (starting with 1).

Constructor to create port with specific name.

Parameters

jc	JACK client.
dir	Direction (input/output).
id	Port name.

```
5.202.3.3 MHAJack::port_t::~port_t ( )
```

5.202.4 Member Function Documentation

Parameters

S	Signal structure to store the audio data.
ch	Channel number in audio data structure to be used.

Parameters

s	Signal structure from which the audio data is read.
ch	Channel number in audio data structure to be used.

```
5.202.4.3 void MHAJack::port_t::mute ( unsigned int n )
```

Parameters

n Number of samples to be muted (must be the same as reported by Jack processing callback).

Parameters

pn | Port name to connect to

```
5.202.4.5 const char * MHAJack::port_t::get_short_name ( )
```

Return the port name.

5.202.5 Member Data Documentation

```
5.202.5.1 dir_t MHAJack::port_t::dir_type [private]
```

```
5.202.5.2 jack_port_t* MHAJack::port_t::port [private]
```

5.202.5.3 jack_default_audio_sample_t* MHAJack::port_t::iob [private]


5.202.5.4 jack_client_t* MHAJack::port_t::jc [private]

The documentation for this class was generated from the following files:

- · mhajack.h
- mhajack.cpp

5.203 MHAKernel::algo comm class t Class Reference

Inheritance diagram for MHAKernel::algo_comm_class_t:

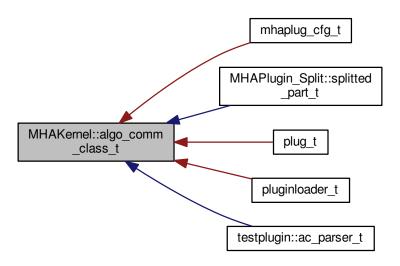

Public Member Functions

- algo_comm_class_t ()
- virtual ~algo comm class t ()
- algo_comm_t get_c_handle ()
- virtual void local_insert_var (const char *, comm_var_t)
- virtual void local_remove_var (const char *)
- virtual void local remove ref (void *)
- virtual bool local_is_var (const char *)
- virtual void local_get_var (const char *, comm_var_t *)
- virtual std::string local get entries ()
- virtual comm_var_map_t::size_type size () const

Static Public Member Functions

- static int insert_var (void *, const char *, comm_var_t)
- static int insert_var_int (void *, const char *, int *)
- static int insert_var_float (void *, const char *, float *)
- static int remove_var (void *, const char *)
- static int remove_ref (void *, void *)
- static int is_var (void *, const char *)
- static int get_var (void *, const char *, comm_var_t *)
- static int get_var_int (void *, const char *, int *)
- static int get_var_float (void *, const char *, float *)
- static int get entries (void *, char *, unsigned int)
- static const char * get_error (int)

Public Attributes

• char * algo_comm_id_string

Private Attributes

```
· algo_comm_t ac
```

- int algo_comm_id_string_len
- · comm var map t vars

```
5.203.1 Constructor & Destructor Documentation
5.203.1.1 MHAKernel::algo_comm_class_t::algo_comm_class_t()
5.203.1.2 MHAKernel::algo comm class t::~algo comm class t() [virtual]
5.203.2 Member Function Documentation
5.203.2.1 algo_comm_t MHAKernel::algo_comm_class_t::get_c_handle ( )
5.203.2.2 int MHAKernel::algo_comm_class_t::insert_var (
                      void * handle,
                      const char * name.
                      comm_var_t var ) [static]
5.203.2.3 int MHAKernel::algo_comm_class_t::insert_var_int (
                      void * handle.
                      const char * name,
                      int * ivar ) [static]
5.203.2.4 int MHAKernel::algo_comm_class_t::insert_var_float (
                      void * handle,
                      const char * name,
                      float * ivar ) [static]
5.203.2.5 int MHAKernel::algo_comm_class_t::remove_var (
                      void * handle,
                      const char * name ) [static]
5.203.2.6 int MHAKernel::algo_comm_class_t::remove_ref (
                      void * handle,
                      void * ref ) [static]
```

```
5.203.2.7 int MHAKernel::algo comm class t::is var (
                      void * handle,
                      const char * name ) [static]
5.203.2.8 int MHAKernel::algo_comm_class_t::get_var (
                      void * handle.
                      const char * name,
                      comm var t * var ) [static]
5.203.2.9 int MHAKernel::algo_comm_class_t::get_var_int (
                      void * handle.
                      const char * name,
                      int * ivar ) [static]
5.203.2.10 int MHAKernel::algo comm class t::get var float (
                       void * handle,
                       const char * name.
                       float * ivar ) [static]
5.203.2.11 int MHAKernel::algo_comm_class_t::get_entries (
                       void * handle.
                       char * ret.
                       unsigned int len ) [static]
5.203.2.12 const char * MHAKernel::algo_comm_class_t::get_error (
                       int e ) [static]
5.203.2.13 void MHAKernel::algo comm class t::local insert var (
                       const char * name,
                       comm_var_t var ) [virtual]
5.203.2.14 void MHAKernel::algo_comm_class_t::local_remove_var (
                       const char * name ) [virtual]
5.203.2.15 void MHAKernel::algo_comm_class_t::local_remove_ref (
                       void * addr ) [virtual]
5.203.2.16 bool MHAKernel::algo_comm_class_t::local_is_var (
                       const char * name ) [virtual]
5.203.2.17 void MHAKernel::algo comm class t::local get var (
                       const char * name,
                       comm_var_t * var ) [virtual]
5.203.2.18 std::string MHAKernel::algo_comm_class_t::local_get_entries( ) [virtual]
```

```
5.203.2.19 MHAKernel::comm_var_map_t::size_type MHAKernel::algo_comm_class_t::size ( ) const [virtual]
```

5.203.3 Member Data Documentation

```
5.203.3.1 char* MHAKernel::algo_comm_class_t::algo_comm_id_string
```

```
5.203.3.2 algo_comm_t MHAKernel::algo_comm_class_t::ac [private]
```

5.203.3.3 int MHAKernel::algo_comm_class_t::algo_comm_id_string_len [private]

```
5.203.3.4 comm_var_map_t MHAKernel::algo_comm_class_t::vars [private]
```

The documentation for this class was generated from the following files:

- · mha_algo_comm.hh
- mha_algo_comm.cpp

5.204 MHAKernel::comm_var_map_t Class Reference

Inherits map< std::string, comm_var_t >.

Public Member Functions

• bool **has key** (const std::string &name)

5.204.1 Member Function Documentation


The documentation for this class was generated from the following file:

mha_algo_comm.hh

5.205 MHAMultiSrc::base_t Class Reference

Base class for source selection.

Inheritance diagram for MHAMultiSrc::base_t:

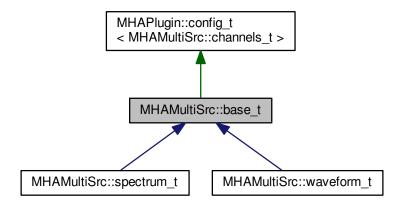

Public Member Functions

- base_t (algo_comm_t iac)
- void select_source (const std::vector< std::string > &src, int in_channels)
 Change the selection of input sources.

Protected Attributes

• algo_comm_t ac

Additional Inherited Members

5.205.1 Detailed Description

Base class for source selection.

See also

MHAMultiSrc::channel_t (p. 571) MHAMultiSrc::channels_t (p. 572)

5.205.2 Constructor & Destructor Documentation

```
5.205.2.1 MHAMultiSrc::base_t::base_t (
algo_comm_t iac )
```

5.205.3 Member Function Documentation

Change the selection of input sources.

This function is real-time and thread safe.

Parameters

src	List of input sources	
in_channels	Number of input channels in direct input (the processed signal)	

5.205.4 Member Data Documentation

```
5.205.4.1 algo_comm_t MHAMultiSrc::base_t::ac [protected]
```

The documentation for this class was generated from the following files:

- mha_multisrc.h
- mha_multisrc.cpp

5.206 MHAMultiSrc::channel_t Class Reference

Public Attributes

- std::string name
- int channel

5.206.1 Member Data Documentation

5.206.1.1 std::string MHAMultiSrc::channel_t::name

5.206.1.2 int MHAMultiSrc::channel_t::channel

The documentation for this class was generated from the following file:

mha_multisrc.h

5.207 MHAMultiSrc::channels_t Class Reference

Inherits vector< MHAMultiSrc::channel_t >.

Public Member Functions

• channels_t (const std::vector< std::string > &src, int in_channels)

Separate a list of input sources into a parsable channel list.

5.207.1 Constructor & Destructor Documentation

Separate a list of input sources into a parsable channel list.

The number of input channels if verified, a list of **MHAMultiSrc::channel_t** (p. 571) is filled.

Parameters


route	vector of source channel ids
in_channels	number of channels in the processed input signal

The documentation for this class was generated from the following files:

- · mha multisrc.h
- mha_multisrc.cpp

5.208 MHAMultiSrc::spectrum_t Class Reference

Inheritance diagram for MHAMultiSrc::spectrum_t:

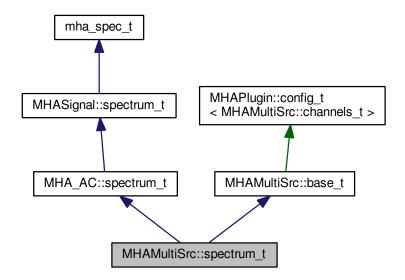

Public Member Functions

- spectrum_t (algo_comm_t iac, std::string name, unsigned int frames, unsigned int channels)
- mha_spec_t * update (mha_spec_t *s)

Update data of spectrum to hold actual input data.

Additional Inherited Members

5.208.1 Constructor & Destructor Documentation

5.208.2 Member Function Documentation

Update data of spectrum to hold actual input data.

Parameters

s Input signal chunk

Returns


Return pointer to spectrum structure

The documentation for this class was generated from the following files:

- · mha_multisrc.h
- · mha_multisrc.cpp

5.209 MHAMultiSrc::waveform_t Class Reference

Inheritance diagram for MHAMultiSrc::waveform_t:

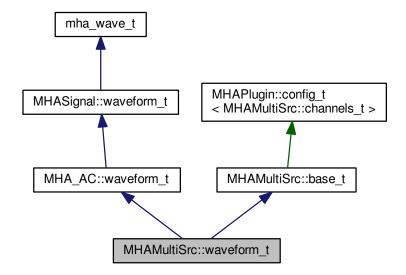

Public Member Functions

- waveform_t (algo_comm_t iac, std::string name, unsigned int frames, unsigned int channels)
- mha_wave_t * update (mha_wave_t *s)

Update data of waveform to hold actual input data.

Additional Inherited Members

```
5.209.1 Constructor & Destructor Documentation
```

5.209.2 Member Function Documentation

```
5.209.2.1 mha_wave_t * MHAMultiSrc::waveform_t::update ( mha_wave_t * s )
```

Update data of waveform to hold actual input data.

Parameters

```
s Input signal chunk
```

Returns

Return pointer to waveform structure

The documentation for this class was generated from the following files:

- · mha_multisrc.h
- mha_multisrc.cpp

5.210 MHAOvlFilter::band_descriptor_t Class Reference

Public Attributes

```
mha_real_t cf_l
```

- mha_real_t ef_l
- mha_real_t cf
- mha_real_t ef_h
- mha_real_t cf_h
- bool low_side_flat
- bool high_side_flat

5.210.1 Member Data Documentation


```
5.210.1.1 mha_real_t MHAOvlFilter::band_descriptor_t::cf_l
5.210.1.2 mha_real_t MHAOvlFilter::band_descriptor_t::ef_l
5.210.1.3 mha_real_t MHAOvlFilter::band_descriptor_t::cf
5.210.1.4 mha_real_t MHAOvlFilter::band_descriptor_t::ef_h
5.210.1.5 mha_real_t MHAOvlFilter::band_descriptor_t::cf_h
5.210.1.6 bool MHAOvlFilter::band_descriptor_t::low_side_flat
5.210.1.7 bool MHAOvlFilter::band_descriptor_t::high_side_flat
```

The documentation for this class was generated from the following file:

· mha_fftfb.hh

5.211 MHAOvlFilter::barkscale::bark2hz_t Class Reference

Inheritance diagram for MHAOvIFilter::barkscale::bark2hz_t:

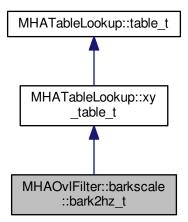

Public Member Functions

- bark2hz_t ()
- ~bark2hz_t ()


Additional Inherited Members

- 5.211.1 Constructor & Destructor Documentation
- 5.211.1.1 MHAOvlFilter::barkscale::bark2hz_t::bark2hz_t ()
- 5.211.1.2 MHAOvlFilter::barkscale::bark2hz_t::~bark2hz_t ()

The documentation for this class was generated from the following file:

- · mha_fftfb.cpp
- 5.212 MHAOvlFilter::barkscale::hz2bark_t Class Reference

Inheritance diagram for MHAOvIFilter::barkscale::hz2bark_t:

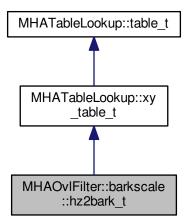

Public Member Functions

- hz2bark_t ()
- ~hz2bark_t ()

Additional Inherited Members

```
5.212.1 Constructor & Destructor Documentation
```

```
5.212.1.1 MHAOvlFilter::barkscale::hz2bark_t::hz2bark_t ( )
```

```
5.212.1.2 MHAOvlFilter::barkscale::hz2bark_t::~hz2bark_t ( )
```

The documentation for this class was generated from the following file:

mha_fftfb.cpp

5.213 MHAOvlFilter::fftfb_ac_info_t Class Reference

Public Member Functions

- fftfb_ac_info_t (const MHAOvIFilter::fftfb_t &fb, algo_comm_t ac, const std::string &prefix)
- void insert ()

Private Attributes

MHA AC::waveform t cfv

vector of nominal center frequencies / Hz

MHA_AC::waveform_t efv

vector of edge frequencies / Hz

MHA_AC::waveform_t bwv

vector of band-weigths (sum of squared fft-bin-weigths)/num_frames

MHA_AC::waveform_t cLTASS

vector of LTASS correction

- 5.213.1 Constructor & Destructor Documentation
- 5.213.2 Member Function Documentation
- 5.213.2.1 void MHAOvlFilter::fftfb_ac_info_t::insert()
- 5.213.3 Member Data Documentation
- **5.213.3.1** MHA_AC::waveform_t MHAOvlFilter::fftfb_ac_info_t::cfv [private]

vector of nominal center frequencies / Hz

5.213.3.2 MHA_AC::waveform_t MHAOvlFilter::fftfb_ac_info_t::efv [private]

vector of edge frequencies / Hz

5.213.3.3 MHA_AC::waveform_t MHAOvlFilter::fftfb_ac_info_t::bwv [private]

vector of band-weigths (sum of squared fft-bin-weigths)/num_frames

5.213.3.4 MHA_AC::waveform_t MHAOvlFilter::fftfb_ac_info_t::cLTASS [private]

vector of LTASS correction


The documentation for this class was generated from the following files:

- · mha fftfb.hh
- · mha_fftfb.cpp

5.214 MHAOvlFilter::fftfb_t Class Reference

FFT based overlapping filter bank.

Inheritance diagram for MHAOvIFilter::fftfb_t:

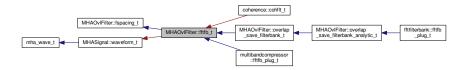

Public Member Functions

- fftfb_t (MHAOvlFilter::fftfb_vars_t &par, unsigned int nfft, mha_real_t fs)

 Constructor for a FFT-based overlapping filter bank.
- ∼fftfb_t ()
- void apply_gains (mha_spec_t *s_out, const mha_spec_t *s_in, const mha_wave_t *gains)
- void get_fbpower (mha_wave_t *fbpow, const mha_spec_t *s_in)
- void get_fbpower_db (mha_wave_t *fbpow, const mha_spec_t *s_in)
- std::vector< mha_real_t > get_ltass_gain_db () const
- unsigned int bin1 (unsigned int band) const

Return index of first non-zero filter shape window.

- unsigned int bin2 (unsigned int band) const
 - Return index of first zero filter shape window above center frequency.
- unsigned int **get_fftlen** () const

Return fft length.

mha_real_t w (unsigned int k, unsigned int b) const

Return filter shape window at index k in band b.

Private Attributes

```
• unsigned int * vbin1
```

- unsigned int * vbin2
- mha_real_t(* shape)(mha_real_t)
- unsigned int fftlen
- mha_real_t samplingrate

Additional Inherited Members

5.214.1 Detailed Description

FFT based overlapping filter bank.

5.214.2 Constructor & Destructor Documentation

Constructor for a FFT-based overlapping filter bank.

Parameters

par	Parameters for the FFT filterbank that can not be deduced from the signal dimensions are taken from this set of configuration variables.
nfft	FFT length
fs	Sampling rate / Hz

```
5.214.2.2 MHAOvlFilter::fftfb_t::~fftfb_t ( )
```

5.214.3 Member Function Documentation

Return filter shape window at index k in band b.

Parameters

k	Frequency index
b	Band index

5.214.4 Member Data Documentation

```
5.214.4.1 unsigned int* MHAOvIFilter::fftfb_t::vbin1 [private]
5.214.4.2 unsigned int* MHAOvIFilter::fftfb_t::vbin2 [private]
5.214.4.3 mha_real_t(* MHAOvIFilter::fftfb_t::shape) (mha_real_t) [private]
5.214.4.4 unsigned int MHAOvIFilter::fftfb_t::fftlen [private]
5.214.4.5 mha_real_t MHAOvIFilter::fftfb_t::samplingrate [private]
```


The documentation for this class was generated from the following files:

- mha fftfb.hh
- mha_fftfb.cpp

5.215 MHAOvIFilter::fftfb vars t Class Reference

Set of configuration variables for FFT-based overlapping filters.

Inheritance diagram for MHAOvlFilter::fftfb_vars_t:

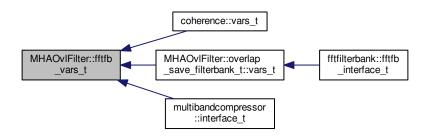

Public Member Functions

fftfb_vars_t (MHAParser::parser_t &p)

construct a set of openMHA configuration language variables suitable for configuring the FFT-based overlapping filterbank.

Public Attributes

scale_var_t fscale

Frequency scale type (lin/bark/log/erb).

scale_var_t ovltype

Filter shape (rect/lin/hann).

MHAParser::float_t plateau

relative plateau width.

MHAParser::kw_t ftype

Flag to decide wether edge or center frequencies are used.

fscale_t f

Frequency.

MHAParser::bool t normalize

Normalize sum of channels.

MHAParser::bool t fail on nonmonotonic

Fail if frequency entries are non-monotonic (otherwise sort)

MHAParser::bool_t fail_on_unique_bins

Fail if center frequencies share the same FFT bin.

MHAParser::vfloat mon t cf

Final center frequencies in Hz.

MHAParser::vfloat_mon_t ef

Final edge frequencies in Hz.

MHAParser::vfloat_mon_t cLTASS

Bandwidth correction for LTASS noise (level of 0 dB RMS LTASS noise)

MHAParser::mfloat_mon_t shapes

5.215.1 Detailed Description

Set of configuration variables for FFT-based overlapping filters.

This class enables easy configuration of the FFT-based overlapping filterbank. An instance of **fftfb_vars_t** (p. 582) creates openMHA configuration language variables needed for configuring the filterbank, and inserts these variables in the openMHA configuration tree.

This way, the variables are visible to the user and can be configured using the openMHA configuration language.

```
5.215.2 Constructor & Destructor Documentation
```

```
5.215.2.1 MHAOvlFilter::fftfb_vars_t::fftfb_vars_t (
MHAParser::parser t & p)
```

construct a set of openMHA configuration language variables suitable for configuring the FFT-based overlapping filterbank.

Parameters

p The node of the configuration tree where the variables created by this instance are inserted.

5.215.3 Member Data Documentation

5.215.3.1 scale_var_t MHAOvlFilter::fftfb_vars_t::fscale

Frequency scale type (lin/bark/log/erb).

5.215.3.2 scale_var_t MHAOvlFilter::fftfb_vars_t::ovltype

Filter shape (rect/lin/hann).

5.215.3.3 MHAParser::float t MHAOvlFilter::fftfb vars t::plateau

relative plateau width.

5.215.3.4 MHAParser::kw_t MHAOvlFilter::fftfb_vars_t::ftype

Flag to decide wether edge or center frequencies are used.

5.215.3.5 fscale_t MHAOvIFilter::fftfb_vars_t::f

Frequency.

5.215.3.6 MHAParser::bool_t MHAOvlFilter::fftfb_vars_t::normalize

Normalize sum of channels.

5.215.3.7 MHAParser::bool_t MHAOvlFilter::fftfb_vars_t::fail_on_nonmonotonic

Fail if frequency entries are non-monotonic (otherwise sort)

5.215.3.8 MHAParser::bool_t MHAOvlFilter::fftfb_vars_t::fail_on_unique_bins

Fail if center frequencies share the same FFT bin.

5.215.3.9 MHAParser::vfloat mon t MHAOvlFilter::fftfb_vars_t::cf

Final center frequencies in Hz.

5.215.3.10 MHAParser::vfloat_mon_t MHAOvlFilter::fftfb_vars_t::ef

Final edge frequencies in Hz.

5.215.3.11 MHAParser::vfloat_mon_t MHAOvlFilter::fftfb_vars_t::cLTASS

Bandwidth correction for LTASS noise (level of 0 dB RMS LTASS noise)


5.215.3.12 MHAParser::mfloat_mon_t MHAOvlFilter::fftfb_vars_t::shapes

The documentation for this class was generated from the following files:

- mha_fftfb.hh
- · mha_fftfb.cpp

5.216 MHAOvIFilter::fscale_bw_t Class Reference

Inheritance diagram for MHAOvIFilter::fscale bw t:

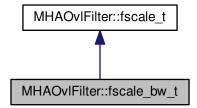

Public Member Functions

- fscale_bw_t (MHAParser::parser_t &parent)
- std::vector< mha_real_t > get_bw_hz () const

Protected Attributes

- MHAParser::vfloat_t bw
- MHAParser::vfloat_mon_t bw_hz

Private Member Functions

void update_hz ()

Private Attributes

MHAEvents::connector_t< fscale_bw_t > updater

Additional Inherited Members

```
5.216.1 Constructor & Destructor Documentation
```

```
5.216.1.1 MHAOvlFilter::fscale_bw_t::fscale_bw_t (
MHAParser::parser_t & parent )
```


- 5.216.2 Member Function Documentation
- 5.216.2.1 std::vector< mha_real_t > MHAOvlFilter::fscale_bw_t::get_bw_hz () const
- **5.216.2.2 void** MHAOvlFilter::fscale_bw_t::update_hz() [private]
- 5.216.3 Member Data Documentation
- **5.216.3.1 MHAParser::vfloat_t** MHAOvlFilter::fscale_bw_t::bw [protected]
- **5.216.3.2** MHAParser::vfloat_mon_t MHAOvlFilter::fscale_bw_t::bw_hz [protected]
- **5.216.3.3 MHAEvents::connector_t**<**fscale_bw_t**> MHAOvlFilter::fscale_bw_t::updater [private]

The documentation for this class was generated from the following files:

- · mha_fftfb.hh
- mha_fftfb.cpp

5.217 MHAOvlFilter::fscale_t Class Reference

Inheritance diagram for MHAOvIFilter::fscale_t:

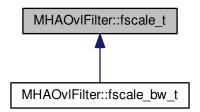

Public Member Functions

- fscale_t (MHAParser::parser_t &parent)
- std::vector< mha_real_t > get_f_hz () const

Public Attributes

scale_var_t unit

MHAParser::vfloat_t f

MHAParser::vfloat_mon_t f_hz

Private Member Functions

void update_hz ()

Private Attributes

MHAEvents::connector_t< fscale_t > updater

- 5.217.1 Constructor & Destructor Documentation
- 5.217.1.1 MHAOvlFilter::fscale_t::fscale_t (
 MHAParser::parser_t & parent)
- 5.217.2 Member Function Documentation
- 5.217.2.1 std::vector< mha_real_t > MHAOvlFilter::fscale_t::get_f_hz () const
- **5.217.2.2 void** MHAOvlFilter::fscale_t::update_hz() [private]
- 5.217.3 Member Data Documentation
- 5.217.3.1 scale_var_t MHAOvlFilter::fscale_t::unit
- 5.217.3.2 MHAParser::vfloat t MHAOvlFilter::fscale_t::f
- 5.217.3.3 MHAParser::vfloat_mon_t MHAOvlFilter::fscale_t::f_hz
- **5.217.3.4** MHAEvents::connector_t<fscale_t> MHAOvlFilter::fscale_t::updater [private]

The documentation for this class was generated from the following files:

- · mha fftfb.hh
- mha_fftfb.cpp

5.218 MHAOvIFilter::fspacing_t Class Reference

Class for frequency spacing, used by filterbank shape generator class.

Inheritance diagram for MHAOvIFilter::fspacing_t:



Public Member Functions

- fspacing_t (const MHAOvIFilter::fftfb_vars_t &par, unsigned int nfft, mha_real_t fs)
- std::vector< unsigned int > get_cf_fftbin () const
- std::vector< mha_real_t > get_cf_hz () const
- std::vector< mha_real_t > get_ef_hz () const
- unsigned int nbands () const

Return number of bands in filter bank.

Protected Member Functions

- void fail_on_nonmonotonic_cf ()
- void fail_on_unique_fftbins ()

Protected Attributes

- std::vector< MHAOvIFilter::band_descriptor_t > bands
- mha_real_t(* symmetry_scale)(mha_real_t)

Private Member Functions

- void ef2bands (std::vector< mha_real_t > vef)
- void cf2bands (std::vector< mha_real_t > vcf)
- void equidist2bands (std::vector< mha_real_t > vcf)

Private Attributes

- · unsigned int nfft_
- mha_real_t fs_

5.218.1 Detailed Description

Class for frequency spacing, used by filterbank shape generator class.


```
5.218.2 Constructor & Destructor Documentation
5.218.2.1 MHAOvlFilter::fspacing_t::fspacing_t (
                      const MHAOvlFilter::fftfb_vars_t & par,
                      unsigned int nfft,
                      mha real t fs )
5.218.3 Member Function Documentation
5.218.3.1 std::vector< unsigned int > MHAOvIFilter::fspacing t::get cf fftbin ( ) const
5.218.3.2 std::vector< mha_real_t > MHAOvlFilter::fspacing_t::get_cf_hz( ) const
5.218.3.3 std::vector < mha real t > MHAOvIFilter::fspacing t::get ef hz ( ) const
5.218.3.4 unsigned int MHAOvIFilter::fspacing t::nbands ( ) const [inline]
Return number of bands in filter bank.
5.218.3.5 void MHAOvIFilter::fspacing_t::fail_on_nonmonotonic_cf() [protected]
5.218.3.6 void MHAOvIFilter::fspacing_t::fail_on_unique_fftbins() [protected]
5.218.3.7 void MHAOvlFilter::fspacing_t::ef2bands (
                      std::vector< mha_real_t > vef ) [private]
5.218.3.8 void MHAOvlFilter::fspacing t::cf2bands (
                      std::vector< mha_real_t > vcf ) [private]
5.218.3.9 void MHAOvIFilter::fspacing t::equidist2bands (
                      std::vector< mha_real_t > vcf ) [private]
5.218.4 Member Data Documentation
5.218.4.1 std::vector<MHAOvIFilter::band descriptor t> MHAOvIFilter::fspacing t::bands
          [protected]
5.218.4.2 mha real t(* MHAOvIFilter::fspacing t::symmetry scale) (mha real t) [protected]
5.218.4.3 unsigned int MHAOvlFilter::fspacing_t::nfft_ [private]
5.218.4.4 mha_real_t MHAOvlFilter::fspacing_t::fs_ [private]
```

The documentation for this class was generated from the following files:

- mha fftfb.hh
- mha_fftfb.cpp

5.219 MHAOvlFilter::overlap_save_filterbank_analytic_t Class Reference

Inheritance diagram for MHAOvIFilter::overlap_save_filterbank_analytic_t:

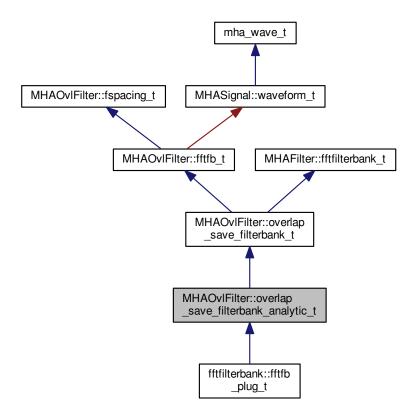

Public Member Functions

- overlap_save_filterbank_analytic_t (MHAOvlFilter::overlap_save_filterbank_t←
 ::vars_t &fbpar, mhaconfig_t channelconfig_in)
- void filter_analytic (const mha_wave_t *sln, mha_wave_t **fltRe, mha_wave_t **fltColor
 lm)

Private Attributes

MHAFilter::fftfilterbank_t imagfb


Additional Inherited Members
5.219.1 Constructor & Destructor Documentation
5.219.1.1 MHAOvlFilter::overlap_save_filterbank_analytic_t::overlap_save_filterbank_analytic_t (
5.219.2 Member Function Documentation
5.219.2.1 void MHAOvlFilter::overlap_save_filterbank_analytic_t::filter_analytic (
5.219.3 Member Data Documentation
5.219.3.1 MHAFilter::fftfilterbank_t MHAOvlFilter::overlap_save_filterbank_analytic_t::imagfb [private]
The decumentation for this class was generated from the following files:

The documentation for this class was generated from the following files:

- mha_fftfb.hh
- · mha_fftfb.cpp
- 5.220 MHAOvlFilter::overlap_save_filterbank_t Class Reference

A time-domain minimal phase filter bank with frequency shapes from **MHAOvIFilter::fftfb_t** (p. 579).

Inheritance diagram for MHAOvIFilter::overlap_save_filterbank_t:

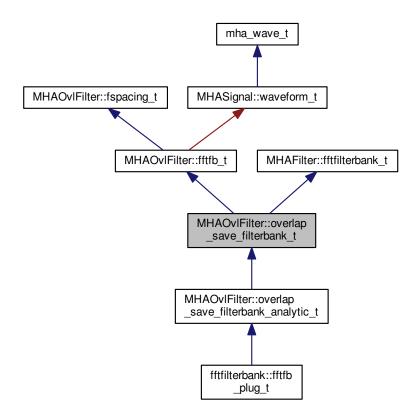

Classes

class vars_t

Public Member Functions

- overlap_save_filterbank_t (MHAOvlFilter::overlap_save_filterbank_t::vars_t &fbpar, mhaconfig_t channelconfig_in)
- mhaconfig_t get_channelconfig () const

Private Attributes

mhaconfig_t channelconfig_out_

Additional Inherited Members

5.220.1 Detailed Description


A time-domain minimal phase filter bank with frequency shapes from **MHAOvIFilter::fftfb_t** (p. 579).

- 5.220.2 Constructor & Destructor Documentation
- 5.220.3 Member Function Documentation
- 5.220.3.1 mhaconfig_t MHAOvlFilter::overlap_save_filterbank_t::get_channelconfig () const [inline]
- 5.220.4 Member Data Documentation
- **5.220.4.1 mhaconfig_t** MHAOvlFilter::overlap_save_filterbank_t::channelconfig_out_ [private]

The documentation for this class was generated from the following files:

- · mha fftfb.hh
- mha_fftfb.cpp
- 5.221 MHAOvlFilter::overlap_save_filterbank_t::vars_t Class Reference

Inheritance diagram for MHAOvIFilter::overlap_save_filterbank_t::vars_t:

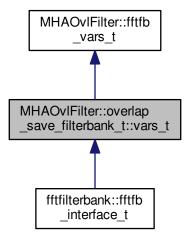

Public Member Functions

vars_t (MHAParser::parser_t &p)

Public Attributes


- MHAParser::int_t fftlen
- MHAParser::kw_t phasemodel
- MHAParser::window_t irswnd
- 5.221.1 Constructor & Destructor Documentation
- 5.221.2 Member Data Documentation
- 5.221.2.1 MHAParser::int_t MHAOvlFilter::overlap_save_filterbank_t::vars_t::fftlen
- 5.221.2.2 MHAParser::kw_t MHAOvlFilter::overlap_save_filterbank_t::vars_t::phasemodel
- 5.221.2.3 MHAParser::window_t MHAOvlFilter::overlap_save_filterbank_t::vars_t::irswnd

The documentation for this class was generated from the following files:

- mha_fftfb.hh
- · mha_fftfb.cpp

5.222 MHAOvlFilter::scale_var_t Class Reference

Inheritance diagram for MHAOvIFilter::scale_var_t:

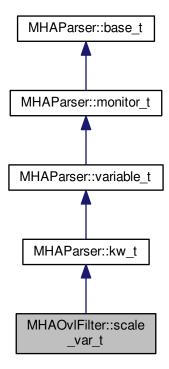

Public Member Functions

- scale_var_t (const std::string &help)
- void add_fun (const std::string &name, scale_fun_t *fun)
- std::string **get_name** () const
- scale_fun_t * get_fun () const
- mha_real_t hz2unit (mha_real_t x) const
- mha_real_t unit2hz (mha_real_t x) const

Private Attributes

- std::vector< std::string > names
- std::vector< scale_fun_t * > funs

```
Additional Inherited Members
```

```
5.222.1 Constructor & Destructor Documentation
5.222.1.1 MHAOvIFilter::scale_var_t::scale_var_t (
                      const std::string & help )
5.222.2 Member Function Documentation
5.222.2.1 void MHAOvlFilter::scale_var_t::add_fun (
                       const std::string & name,
                       scale_fun_t * fun )
5.222.2.2 std::string MHAOvlFilter::scale_var_t::get_name( ) const [inline]
5.222.2.3 scale fun t* MHAOvlFilter::scale_var_t::get_fun( ) const [inline]
5.222.2.4 mha_real_t MHAOvlFilter::scale_var_t::hz2unit (
                       mha_real_t x ) const
5.222.2.5 mha real t MHAOvlFilter::scale_var_t::unit2hz (
                      mha real tx) const
5.222.3 Member Data Documentation
5.222.3.1 std::vector<std::string> MHAOvlFilter::scale_var_t::names [private]
5.222.3.2 std::vector<scale_fun_t*> MHAOvlFilter::scale_var_t::funs [private]
```


The documentation for this class was generated from the following files:

- · mha_fftfb.hh
- · mha_fftfb.cpp

5.223 MHAParser::base_t Class Reference

Base class for all parser items.

Inheritance diagram for MHAParser::base_t:

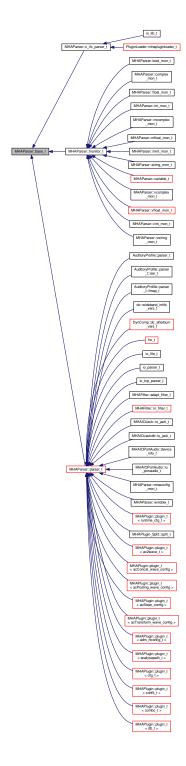

Classes

class replace_t

Public Member Functions

base_t (const std::string &)

Constructor for base class of all parser nodes.

- base_t (const base_t &)
- virtual ~base t ()
- virtual std::string parse (const std::string &)

Causes this node to process a command in the openMHA configuration language.

virtual void parse (const char *, char *, unsigned int)

This function parses a command and writes the parsing result into a C character array.

- virtual void **parse** (const std::vector< std::string > &, std::vector< std::string > &)
- virtual std::string op subparse (expression t &)
- virtual std::string op setval (expression t &)
- virtual std::string op_query (expression_t &)
- virtual std::string query_dump (const std::string &)
- virtual std::string query entries (const std::string &)
- virtual std::string query_perm (const std::string &)
- virtual std::string query_range (const std::string &)
- virtual std::string query_type (const std::string &)
- virtual std::string query_val (const std::string &)
- virtual std::string query_readfile (const std::string &)
- virtual std::string query savefile (const std::string &)
- virtual std::string query_savefile_compact (const std::string &)
- virtual std::string query_savemons (const std::string &)
- virtual std::string query_listids (const std::string &)
- std::string query version (const std::string &)
- std::string query_id (const std::string &)
- std::string query_subst (const std::string &)
- std::string query addsubst (const std::string &)
- std::string query_help (const std::string &)
- std::string query_cmds (const std::string &)
- void set_node_id (const std::string &)

Set the identification string of this parser node.

void set help (const std::string &)

Set the help comment of a variable or parser.

- void add_parent_on_insert (parser_t *, std::string)
- void rm_parent_on_remove (parser_t *)
- const std::string & fullname () const

Return the full dot-separated path name of this parser node in the openMHA configuration tree.

Public Attributes

• MHAEvents::emitter t writeaccess

Event emitted on write access.

MHAEvents::emitter t valuechanged

Event emitted if the value has changed.

MHAEvents::emitter_t readaccess

Event emitted on read access.

MHAEvents::emitter_t prereadaccess

Event emitted on read access, before the data field is accessed.

Protected Member Functions

- void activate_query (const std::string &, query_t)
- void notify ()

Protected Attributes

- query_map_t queries
- bool data_is_initialized

Private Types

typedef std::vector< replace_t > repl_list_t

Private Member Functions

- void add_replace_pair (const std::string &, const std::string &)
- std::string oplist ()

Private Attributes

- std::string help
- std::string id_str
- opact_map_t operators
- repl_list_t repl_list
- bool nested lock
- parser_t * parent
- std::string thefullname

5.223.1 Detailed Description

Base class for all parser items.

The key method of the parser base class is the std::string **parse(const std::string&)** (p. 600) method. Parser proxy derivatives which overwrite any of the other **parse()** (p. 600) methods to be the key method must make sure that the original **parse()** (p. 600) method utilizes the new key method.

```
5.223.2 Member Typedef Documentation
```

```
5.223.2.1 typedef std::vector<replace_t> MHAParser::base_t::repl_list_t [private]
```

5.223.3 Constructor & Destructor Documentation

Constructor for base class of all parser nodes.

Parameters

h Help text describing this parser node. This help text is accessible to the configuration language through the "?help" query command.

Causes this node to process a command in the openMHA configuration language.

Parameters

```
cs The command to parse
```

Returns

The response to the command, if successful

Exceptions

MHA_Error (p. 410)	If the command cannot be executed successfully. The reason for		
	failure is given in the message string of the exception.		

Reimplemented in **PluginLoader::mhapluginloader_t** (p. 846), and **altplugs_t** (p. 201).

```
5.223.4.2 void MHAParser::base_t::parse (
                       const char * cmd,
                       char * retv.
                       unsigned int len ) [virtual]
```

This function parses a command and writes the parsing result into a C character array.

This base class implementation delegates to parse(const std::string &) (p. 600).

Parameters

cmd	Command to be parsed		
retv	Buffer for the result		
len	Length of buffer		

```
Reimplemented in altplugs_t (p. 201).
5.223.4.3 void MHAParser::base_t::parse (
                     const std::vector< std::string > & cs,
                     std::vector < std::string > & retv ) [virtual]
5.223.4.4 std::string MHAParser::base t::op subparse (
                     expression t& ) [virtual]
Reimplemented in MHAParser::c_ifc_parser_t (p. 612), and MHAParser::parser_t (p. 654).
5.223.4.5 std::string MHAParser::base_t::op_setval (
                     expression_t & ) [virtual]
Reimplemented in MHAParser::mcomplex_t (p. 638), MHAParser::mfloat_t (p. 642), MH←
AParser::vcomplex_t (p. 669), MHAParser::vfloat_t (p. 673), MHAParser::vint_t (p. 677),
MHAParser::complex_t (p. 618), MHAParser::float_t (p. 624), MHAParser::int_t (p. 629),
MHAParser::bool_t (p. 610), MHAParser::vstring_t (p. 681), MHAParser::string_t (p. 662),
MHAParser::kw_t (p. 634), MHAParser::variable_t (p. 664), MHAParser::c_ifc_parser_
t (p. 612), and MHAParser::parser_t (p. 654).
5.223.4.6 std::string MHAParser::base_t::op_query (
                     expression t& ) [virtual]
Reimplemented in MHAParser::monitor_t (p. 650), MHAParser::c_ifc_parser_t (p. 612),
and MHAParser::parser_t (p. 654).
5.223.4.7 std::string MHAParser::base_t::query_dump (
                     const std::string & s ) [virtual]
```

Reimplemented in MHAParser::monitor_t (p. 650), and MHAParser::parser_t (p. 654).

```
5.223.4.8 std::string MHAParser::base_t::query_entries (
                    const std::string & s ) [virtual]
Reimplemented in MHAParser::parser_t (p. 654).
5.223.4.9 std::string MHAParser::base_t::query_perm (
                    const std::string & s ) [virtual]
Reimplemented in MHAParser::variable t (p. 664), and MHAParser::monitor t (p. 650).
5.223.4.10 std::string MHAParser::base t::query range (
                     const std::string & s ) [virtual]
Reimplemented in MHAParser::kw_t (p. 634), and MHAParser::range_var_t (p. 657).
5.223.4.11 std::string MHAParser::base_t::query_type (
                     const std::string & s ) [virtual]
Reimplemented in MHAParser::mcomplex mon t (p. 636), MHAParser::vcomplex mon ←
t (p. 667), MHAParser::complex mon t (p. 616), MHAParser::float mon t (p. 622), MH
AParser::mfloat mon t (p. 640), MHAParser::vfloat mon t (p. 671), MHAParser::mint←
_mon_t (p. 649), MHAParser::vint_mon_t (p. 675), MHAParser::vstring_mon_t (p. 679),
MHAParser::string_mon_t (p. 660), MHAParser::bool_mon_t (p. 608), MHAParser::int←
_mon_t (p. 626), MHAParser::mcomplex_t (p. 638), MHAParser::mfloat t (p. 642), MH
AParser::vcomplex t (p. 669), MHAParser::vfloat t (p. 673), MHAParser::vint t (p. 677),
MHAParser::complex_t (p. 618), MHAParser::float_t (p. 624), MHAParser::int_t (p. 629),
MHAParser::bool_t (p. 610), MHAParser::vstring_t (p. 681), MHAParser::string_t (p. 662),
MHAParser::kw_t (p. 634), and MHAParser::parser_t (p. 654).
5.223.4.12 std::string MHAParser::base_t::query_val (
                     const std::string & s ) [virtual]
Reimplemented in MHAParser::mcomplex mon t (p. 636), MHAParser::vcomplex mon ←
t (p. 667), MHAParser::complex mon t (p. 616), MHAParser::float mon t (p. 622), MH←
AParser::mfloat_mon_t (p. 640), MHAParser::vfloat_mon_t (p. 671), MHAParser::mint←
_mon_t (p. 649), MHAParser::vint_mon_t (p. 675), MHAParser::vstring_mon_t (p. 679),
MHAParser::string mon t (p. 660), MHAParser::bool mon t (p. 608), MHAParser::int←
_mon_t (p. 626), MHAParser::mcomplex_t (p. 638), MHAParser::mfloat_t (p. 642), MH \leftarrow
AParser::vcomplex_t (p. 669), MHAParser::vfloat_t (p. 673), MHAParser::vint_t (p. 677),
MHAParser::complex_t (p. 618), MHAParser::float_t (p. 624), MHAParser::int_t (p. 629),
MHAParser::bool_t (p. 610), MHAParser::vstring_t (p. 681), MHAParser::string_t (p. 662),
MHAParser::kw_t (p. 634), and MHAParser::parser_t (p. 655).
5.223.4.13 std::string MHAParser::base_t::query_readfile (
                     const std::string & s ) [virtual]
Reimplemented in MHAParser::parser t (p. 654).
```

```
5.223.4.14 std::string MHAParser::base_t::query_savefile (
                        const std::string & s ) [virtual]
Reimplemented in MHAParser::parser_t (p. 655).
5.223.4.15 std::string MHAParser::base_t::query_savefile_compact (
                        const std::string & s ) [virtual]
Reimplemented in MHAParser::parser_t (p. 655).
5.223.4.16 std::string MHAParser::base_t::query_savemons (
                        const std::string & s ) [virtual]
Reimplemented in MHAParser::parser t (p. 655).
5.223.4.17 std::string MHAParser::base_t::query_listids (
                        const std::string & s ) [virtual]
Reimplemented in MHAParser::parser_t (p. 655).
5.223.4.18 std::string MHAParser::base_t::query_version (
                        const std::string & )
5.223.4.19 std::string MHAParser::base_t::query_id (
                        const std::string & )
5.223.4.20 std::string MHAParser::base_t::query_subst (
                        const std::string & s )
5.223.4.21 std::string MHAParser::base_t::query_addsubst (
                        const std::string & s )
5.223.4.22 std::string MHAParser::base_t::query_help (
                        const std::string & s )
5.223.4.23 std::string MHAParser::base_t::query_cmds (
                        const std::string & s )
5.223.4.24 void MHAParser::base_t::set_node_id (
                        const std::string & s )
```

Set the identification string of this parser node.

The id can be queried from the configuration language using the ?id query command. Nodes can be found by id using the ?listid query command on a containing parser node.

Parameters

```
s The new identification string.
```

```
5.223.4.25 void MHAParser::base_t::set_help (
const std::string & s)
```

Set the help comment of a variable or parser.

Parameters

```
s | New help comment.
```

Return the full dot-separated path name of this parser node in the openMHA configuration tree.

Event emitted on write access.

To connect a callback that is invoked on write access to this parser variable, use MHAEvents—::patchbay_t<receiver_t> method connect(&writeaccess,&receiver_t::callback) where callback is a method that expects no parameters and returns void.

5.223.5.2 MHAEvents::emitter_t MHAParser::base_t::valuechanged

Event emitted if the value has changed.

To connect a callback that is invoked when write access to this parser variable actually changes its value, use MHAEvents::patchbay_t<receiver_t> method connect(&valuechanged,&receiver \cdot t::callback) where callback is a method that expects no parameters and returns void.

5.223.5.3 MHAEvents::emitter_t MHAParser::base_t::readaccess

Event emitted on read access.

To connect a callback that is invoked after the value of this variable has been read through the configuration interface, use MHAEvents::patchbay_t<receiver_t> method connect(&readaccess,&receiver_t::callback) where callback is a method that expects no parameters and returns void.

5.223.5.4 MHAEvents::emitter_t MHAParser::base_t::prereadaccess

Event emitted on read access, before the data field is accessed.

To connect a callback that is invoked when the value of this variable is about to be read through the configuration interface, so that the callback can influence the value that is reported, use MHAEvents::patchbay_t<receiver_t> method connect(&prereadaccess,&receiver_t::callback) where callback is a method that expects no parameters and returns void.

```
5.223.5.5 query_map_t MHAParser::base_t::queries [protected]
5.223.5.6 bool MHAParser::base_t::data_is_initialized [protected]
5.223.5.7 std::string MHAParser::base_t::help [private]
5.223.5.8 std::string MHAParser::base_t::id_str [private]
5.223.5.9 opact_map_t MHAParser::base_t::operators [private]
5.223.5.10 repl_list_t MHAParser::base_t::repl_list [private]
5.223.5.11 bool MHAParser::base_t::nested_lock [private]
5.223.5.12 parser_t* MHAParser::base_t::parent [private]
5.223.5.13 std::string MHAParser::base_t::thefullname [private]
```

The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.224 MHAParser::base_t::replace_t Class Reference

Public Member Functions

```
• replace_t (const std::string &, const std::string &)
```

- void replace (std::string &)
- const std::string & get_a () const
- const std::string & get_b () const

Private Attributes

- std::string a
- std::string b
- 5.224.1 Constructor & Destructor Documentation
- 5.224.2 Member Function Documentation
- 5.224.2.1 void MHAParser::base_t::replace_t::replace (std::string & s)
- 5.224.2.2 const std::string& MHAParser::base_t::replace_t::get_a() const [inline]
- 5.224.2.3 const std::string& MHAParser::base_t::replace_t::get_b() const [inline]
- 5.224.3 Member Data Documentation
- **5.224.3.1 std::string** MHAParser::base_t::replace_t::a [private]
- **5.224.3.2 std::string** MHAParser::base_t::replace_t::b [private]


The documentation for this class was generated from the following files:

- · mha parser.hh
- mha_parser.cpp

5.225 MHAParser::bool_mon_t Class Reference

Monitor with string value.

Inheritance diagram for MHAParser::bool_mon_t:

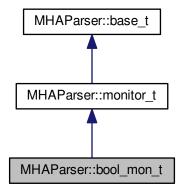

Public Member Functions

bool_mon_t (const std::string &hlp)
 Create a monitor variable for string values.

Public Attributes

• bool **data**Data field.

Protected Member Functions

- std::string query_val (const std::string &)
- std::string query_type (const std::string &)

Additional Inherited Members

5.225.1 Detailed Description

Monitor with string value.

5.225.2 Constructor & Destructor Documentation

Create a monitor variable for string values.

P	a	ra	m	Φ.	ŀρ	r۹

hlp A help text describing this monitor variable.

5.225.3 Member Function Documentation

Reimplemented from MHAParser::base_t (p. 602).

Reimplemented from **MHAParser::base_t** (p. 602).

5.225.4 Member Data Documentation

5.225.4.1 bool MHAParser::bool_mon_t::data

Data field.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.226 MHAParser::bool_t Class Reference

Variable with a boolean value ("yes"/"no")

Inheritance diagram for MHAParser::bool_t:

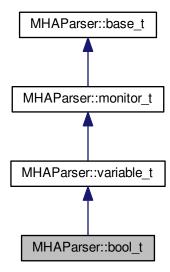

Public Member Functions

• **bool_t** (const std::string &help_text, const std::string &initial_value)

Constructor for a configuration language variable for boolean values.

Public Attributes

• bool **data**Data field.

Protected Member Functions

- std::string op_setval (expression_t &)
- std::string query_type (const std::string &)
- std::string query_val (const std::string &)

Additional Inherited Members

5.226.1 Detailed Description

Variable with a boolean value ("yes"/"no")

5.226.2 Constructor & Destructor Documentation

Constructor for a configuration language variable for boolean values.

Parameters

help_text	A human-readable text describing the purpose of this configuration variable.
initial_value	The initial value for this variable as a string. The string representation of 'true'
	is either "yes" or "1". The string representation of 'false' is either "no" or "0".

5.226.3 Member Function Documentation

Reimplemented from **MHAParser::variable_t** (p. 664).

Reimplemented from MHAParser::base_t (p. 602).

Reimplemented from MHAParser::base_t (p. 602).

5.226.4 Member Data Documentation

5.226.4.1 bool MHAParser::bool_t::data


Data field.

The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.227 MHAParser::c_ifc_parser_t Class Reference

Inheritance diagram for MHAParser::c_ifc_parser_t:

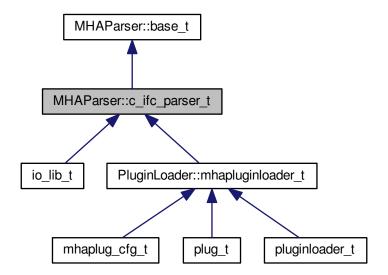

Public Member Functions

- c_ifc_parser_t (const std::string &modulename_)
- \sim c_ifc_parser_t ()
- void set_parse_cb (c_parse_cmd_t, c_parse_err_t, void *)

Protected Member Functions

- std::string op_subparse (MHAParser::expression_t &)
- std::string op_setval (MHAParser::expression_t &)
- std::string op_query (MHAParser::expression_t &)

Private Member Functions

void test_error ()

Private Attributes

```
    std::string modulename
```

- c_parse_cmd_t c_parse_cmd
- · c_parse_err_t c_parse_err
- int liberr
- void * libdata
- unsigned int ret_size
- char * retv

Additional Inherited Members

```
5.227.1 Constructor & Destructor Documentation
5.227.1.1 MHAParser::c ifc parser t::c ifc parser t (
                     const std::string & modulename )
5.227.1.2 MHAParser::c_ifc_parser_t::~c_ifc_parser_t ( )
5.227.2 Member Function Documentation
5.227.2.1 void MHAParser::c_ifc_parser_t::set_parse_cb (
                     MHAParser::c parse cmd t cb,
                     MHAParser::c_parse_err_t strerr,
                     void * d)
5.227.2.2 std::string MHAParser::c ifc parser t::op subparse (
                     MHAParser::expression_t & x ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 601).
5.227.2.3 std::string MHAParser::c_ifc_parser_t::op_setval (
                     MHAParser::expression_t & x ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 601).
5.227.2.4 std::string MHAParser::c_ifc_parser_t::op_query (
                     MHAParser::expression_t & x ) [protected], [virtual]
```

Reimplemented from **MHAParser::base_t** (p. 601).

5.227.2.5 void MHAParser::c_ifc_parser_t::test_error() [private]

5.227.3 Member Data Documentation

5.227.3.1 std::string MHAParser::c_ifc_parser_t::modulename [private]

5.227.3.2 c_parse_cmd_t MHAParser::c_ifc_parser_t::c_parse_cmd [private]

5.227.3.3 c_parse_err_t MHAParser::c_ifc_parser_t::c_parse_err [private]

5.227.3.4 int MHAParser::c_ifc_parser_t::liberr [private]

5.227.3.5 void* **MHAParser::c_ifc_parser_t::libdata** [private]

5.227.3.6 unsigned int MHAParser::c_ifc_parser_t::ret_size [private]

5.227.3.7 char* **MHAParser::c_ifc_parser_t::retv** [private]


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.228 MHAParser::commit_t< receiver_t > Class Template Reference

Parser variable with event-emission functionality.

Inheritance diagram for MHAParser::commit_t< receiver_t >:

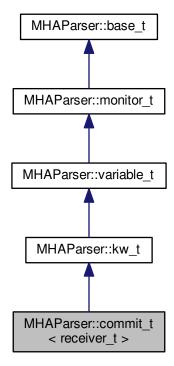

Public Member Functions

commit_t (receiver_t *, void(receiver_t::*)(), const std::string &help="Variable changes action")

Private Attributes

MHAEvents::connector_t< receiver_t > extern_connector

Additional Inherited Members

5.228.1 Detailed Description

```
\label{template} \begin{tabular}{ll} template < class receiver\_t > \\ class MHAParser::commit_t < receiver\_t > \\ \end{tabular}
```

Parser variable with event-emission functionality.

The **commit_t** (p. 613) variable can register an event receiver in its constructor, which is called whenever the variable is set to "commit".

5.228.2 Constructor & Destructor Documentation

5.228.3 Member Data Documentation


The documentation for this class was generated from the following file:

mha_parser.hh

5.229 MHAParser::complex_mon_t Class Reference

Monitor with complex value.

Inheritance diagram for MHAParser::complex_mon_t:

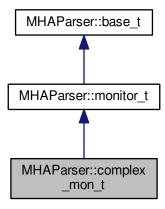

Public Member Functions

• **complex_mon_t** (const std::string &hlp)

Create a complex monitor variable.

Public Attributes

mha_complex_t data

Data field.

Protected Member Functions

```
• std::string query_val (const std::string &)
```

• std::string query_type (const std::string &)

Additional Inherited Members

5.229.1 Detailed Description

Monitor with complex value.

5.229.2 Constructor & Destructor Documentation

5.229.2.1 MHAParser::complex_mon_t::complex_mon_t (const std::string & hlp)

Create a complex monitor variable.

Parameters

```
hlp A help text describing this monitor variable.
```

5.229.3 Member Function Documentation

Reimplemented from **MHAParser::base_t** (p. 602).

Reimplemented from **MHAParser::base_t** (p. 602).

5.229.4 Member Data Documentation

5.229.4.1 mha_complex_t MHAParser::complex_mon_t::data

Data field.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.230 MHAParser::complex_t Class Reference

Variable with complex value.

Inheritance diagram for MHAParser::complex_t:

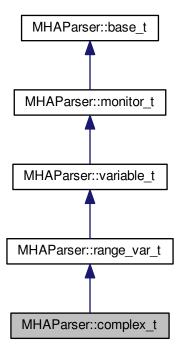

Public Member Functions

complex_t (const std::string &, const std::string &="")

Public Attributes

mha_complex_t data
 Data field.

Protected Member Functions

```
std::string op_setval (expression_t &)

    std::string query_type (const std::string &)

   std::string query_val (const std::string &)
Additional Inherited Members
5.230.1 Detailed Description
Variable with complex value.
5.230.2 Constructor & Destructor Documentation
5.230.2.1 MHAParser::complex_t::complex_t (
                      const std::string & h,
                      const std::string & v,
                      const std::string & rg = " " )
5.230.3 Member Function Documentation
5.230.3.1 std::string MHAParser::complex_t::op_setval (
                      expression_t & x ) [protected], [virtual]
Reimplemented from MHAParser::variable_t (p. 664).
5.230.3.2 std::string MHAParser::complex_t::query_type (
                      const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 602).
5.230.3.3 std::string MHAParser::complex_t::query_val (
                      const std::string & s ) [protected], [virtual]
```

Reimplemented from MHAParser::base_t (p. 602).

```
5.230.4 Member Data Documentation
```

```
5.230.4.1 mha_complex_t MHAParser::complex_t::data
```

Data field.

The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.231 MHAParser::entry_t Class Reference

Public Member Functions

entry_t (const std::string &, base_t *)

Public Attributes

- std::string name
- base_t * entry
- 5.231.1 Constructor & Destructor Documentation

5.231.2 Member Data Documentation

5.231.2.1 std::string MHAParser::entry_t::name

5.231.2.2 base_t* MHAParser::entry_t::entry

The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.232 MHAParser::expression_t Class Reference

Public Member Functions

- expression_t (const std::string &, const std::string &)
 Constructor.
- expression_t ()

Public Attributes

- std::string Ival
- std::string rval
- std::string op
- 5.232.1 Constructor & Destructor Documentation

Constructor.

Parameters

s	String to be splitted
0	List of valid operators (single character only)

```
5.232.1.2 expression_t::expression_t()
```

5.232.2 Member Data Documentation

5.232.2.1 std::string MHAParser::expression_t::lval

5.232.2.2 std::string MHAParser::expression_t::rval

5.232.2.3 std::string MHAParser::expression_t::op


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.233 MHAParser::float_mon_t Class Reference

Monitor with float value.

Inheritance diagram for MHAParser::float_mon_t:

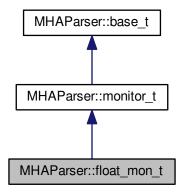

Public Member Functions

float_mon_t (const std::string &hlp)
 Initialize a floating point (32 bits) monitor variable.

Public Attributes

• float data

Data field.

Protected Member Functions

- std::string query_val (const std::string &)
- std::string query_type (const std::string &)

Additional Inherited Members

5.233.1 Detailed Description

Monitor with float value.

5.233.2 Constructor & Destructor Documentation

5.233.2.1 MHAParser::float_mon_t::float_mon_t (const std::string & hlp)

Initialize a floating point (32 bits) monitor variable.

_					
Pa	ra	m	D.	l۵	re

hlp A help text describing this monitor variable.

5.233.3 Member Function Documentation

Reimplemented from MHAParser::base_t (p. 602).

Reimplemented from **MHAParser::base_t** (p. 602).

5.233.4 Member Data Documentation

5.233.4.1 float MHAParser::float_mon_t::data

Data field.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.234 MHAParser::float_t Class Reference

Variable with float value.

Inheritance diagram for MHAParser::float_t:

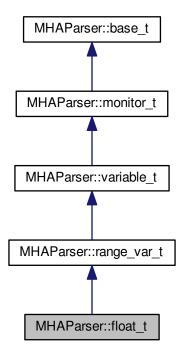

Public Member Functions

float_t (const std::string &help_text, const std::string &initial_value, const std::string &range="")

Constructor for a configuration language variable for 32bit ieee floating-point values.

Public Attributes

· float data

Data field.

Protected Member Functions

- std::string op_setval (expression_t &)
- std::string query_type (const std::string &)
- std::string query_val (const std::string &)

Additional Inherited Members

5.234.1 Detailed Description

Variable with float value.

5.234.2 Constructor & Destructor Documentation

Constructor for a configuration language variable for 32bit ieee floating-point values.

Parameters

help_text	A human-readable text describing the purpose of this configuration variable.
initial_value	The initial value for this variable as a string (decimal representation of the floating-point variable). If a range is given in the third parameter, then the initial value has to be within the range. A human-readable text describing the purpose of this configuration variable.
range	The range of values that this variable can hold can be restricted. A range is a string of the form "[a,b]", where a and b are decimal representations of the inclusive boundaries of the range. a<=b. In a range of the form "]a,b[", both boundaries are excluded. Mixed forms are permitted. a or b can also be omitted if there is no lower or upper limit. The range of values is always restricted by the representable range of the underlying C data type.

```
5.234.3 Member Function Documentation
```

Reimplemented from MHAParser::base_t (p. 602).

5.234.4 Member Data Documentation

5.234.4.1 float MHAParser::float_t::data

Data field.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.235 MHAParser::int_mon_t Class Reference

Monitor variable with int value.

Inheritance diagram for MHAParser::int_mon_t:

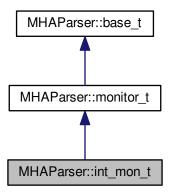

Public Member Functions

int_mon_t (const std::string &hlp)
 Create a monitor variable for integral values.

Public Attributes

• int data

Data field.

Protected Member Functions

```
std::string query_val (const std::string &)
```

std::string query_type (const std::string &)

Additional Inherited Members

5.235.1 Detailed Description

Monitor variable with int value.

Monitor variables can be of many types. These variables can be queried through the parser. The public data element contains the monitored state. Write access is only possible from the C++ code by direct access to the data field.

5.235.2 Constructor & Destructor Documentation

Create a monitor variable for integral values.

Parameters

```
hlp A help text describing this monitor variable.
```

5.235.3 Member Function Documentation

Reimplemented from MHAParser::base_t (p. 602).

Reimplemented from **MHAParser::base_t** (p. 602).

5.235.4 Member Data Documentation

5.235.4.1 int MHAParser::int_mon_t::data

Data field.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.236 MHAParser::int_t Class Reference

Variable with integer value.

Inheritance diagram for MHAParser::int_t:

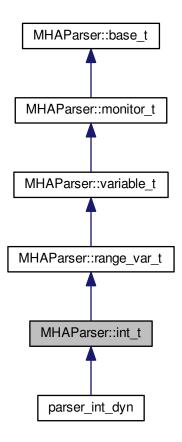

Public Member Functions

• int_t (const std::string &help_text, const std::string &initial_value, const std::string &range="")

Constructor for a configuration language variable for integral values.

Public Attributes

• int data

Data field.

Protected Member Functions

- std::string op_setval (expression_t &)
- std::string query_type (const std::string &)
- std::string query_val (const std::string &)

Additional Inherited Members

5.236.1 Detailed Description

Variable with integer value.

5.236.2 Constructor & Destructor Documentation

Constructor for a configuration language variable for integral values.

Parameters

help_text	A human-readable text describing the purpose of this configuration variable.
initial_value	The initial value for this variable as a string (decimal representation of the integer variable). If a range is given in the third parameter, then the initial value has to be within the range.
range	The range of values that this variable can hold can be restricted. A range is a string of the form "[a,b]", where a and b are decimal representations of the integral inclusive boundaries of the range. a<=b. In a range of the form "]a,b[", both boundaries are excluded. Mixed forms are permitted. a or b can also be omitted if there is no lower or upper limit. The range of values is always restricted by the representable range of the underlying C data type (usually 32 bits, [-2147483648,2147483647]). © 2005-2018 HörTech gGmbH, Oldenburg

```
5.236.3 Member Function Documentation
5.236.3.1 std::string MHAParser::int_t::op_setval (
                     expression_t & x ) [protected], [virtual]
Reimplemented from MHAParser::variable_t (p. 664).
5.236.3.2 std::string MHAParser::int_t::query_type (
                     const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 602).
5.236.3.3 std::string MHAParser::int_t::query_val (
                     const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 602).
5.236.4 Member Data Documentation
5.236.4.1 int MHAParser::int_t::data
Data field.
The documentation for this class was generated from the following files:
   mha_parser.hh
   mha_parser.cpp
5.237 MHAParser::keyword_list_t Class Reference
Keyword list class.
Public Types
```

typedef std::vector< std::string >::size_type size_t

Public Member Functions

void set_value (const std::string &)

Select a value from keyword list.

void set_entries (const std::string &)

Set keyword list entries.

• const std::string & get_value () const

Return selected value.

const std::vector< std::string > & get_entries () const

Return keyword list.

const size_t & get_index () const

Return index of selected value.

- void set index (unsigned int)
- void validate () const

Check if index of selected value is valid.

- void add_entry (const std::string &en)
- keyword_list_t ()

Constructor.

Private Attributes

size t index

Index into list.

std::vector< std::string > entries

List of valid entries.

std::string empty_string

5.237.1 Detailed Description

Keyword list class.

The stucture **keyword_list_t** (p. 629) defines a keyword list (vector of strings) with an index into the list. Used as **MHAParser::kw_t** (p. 632), it can be used to access a set of valid keywords through the parser (i.e. one of "pear apple banana").

- 5.237.2 Member Typedef Documentation
- 5.237.2.1 typedef std::vector<std::string>::size_type MHAParser::keyword_list_t::size_t
- 5.237.3 Constructor & Destructor Documentation
- 5.237.3.1 MHAParser::keyword_list_t::keyword_list_t ()

Constructor.

```
5.237.4 Member Function Documentation
```

```
5.237.4.1 void MHAParser::keyword_list_t::set_value ( const std::string & s )
```

Select a value from keyword list.

This function selects a value from the keyword list. The index is set to the last matching entry.

Parameters

```
s Value to be selected.
```

```
5.237.4.2 void MHAParser::keyword_list_t::set_entries ( const std::string & s )
```

Set keyword list entries.

With this function, the keyword list can be set from a space separated string list.

Parameters

```
s Space separated entry list.
```

```
5.237.4.3 const std::string & MHAParser::keyword_list_t::get_value ( ) const
```

Return selected value.

```
5.237.4.4 const std::vector< std::string > & MHAParser::keyword_list_t::get_entries ( ) const
```

Return keyword list.

```
5.237.4.5 const MHAParser::keyword_list_t::size_t & MHAParser::keyword_list_t::get_index ( ) const
```

Return index of selected value.

```
5.237.4.6 void MHAParser::keyword_list_t::set_index ( unsigned int idx )
```

5.237.4.7 void MHAParser::keyword_list_t::validate() const

Check if index of selected value is valid.

5.237.5 Member Data Documentation

5.237.5.1 size_t MHAParser::keyword_list_t::index [private]

Index into list.

5.237.5.2 std::vector<std::string> MHAParser::keyword_list_t::entries [private]

List of valid entries.

5.237.5.3 std::string MHAParser::keyword_list_t::empty_string [private]


The documentation for this class was generated from the following files:

- · mha parser.hh
- mha_parser.cpp

5.238 MHAParser::kw_t Class Reference

Variable with keyword list value.

Inheritance diagram for MHAParser::kw_t:

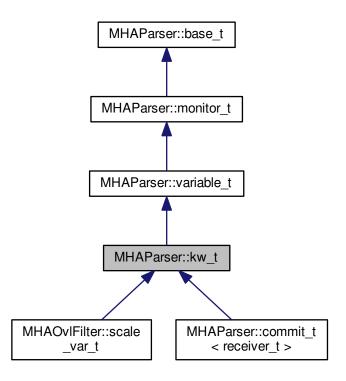

Public Member Functions

- **kw_t** (const std::string &, const std::string &, const std::string &)

 Constructor of a keyword list openMHA configuration variable.
- kw_t (const kw_t &)

Copy constructor.

void set_range (const std::string &)

Set/change the list of valid entries.

bool isval (const std::string &) const

Test if the given value is selected.

Public Attributes

· keyword list t data

Variable data in its native type.

Protected Member Functions

- void validate (const keyword_list_t &)
- std::string op_setval (expression_t &)
- std::string query_range (const std::string &)
- std::string query_val (const std::string &)
- std::string query_type (const std::string &)

Additional Inherited Members

5.238.1 Detailed Description

Variable with keyword list value.

5.238.2 Constructor & Destructor Documentation

Constructor of a keyword list openMHA configuration variable.

Parameters

h	A help string describing the purpose of this variable.	
V	The initial value, has to be a value from the list of possible values given in the last	
© 200	parameter. 005-2018 Hör lech gGmbH, Oldenburg	
rg		
	The list of entries has to be delimited by brackets "[", "]".	

```
5.238.2.2 MHAParser::kw_t::kw_t (
                      const kw_t & src )
Copy constructor.
5.238.3 Member Function Documentation
5.238.3.1 void MHAParser::kw_t::set_range (
                      const std::string & r )
Set/change the list of valid entries.
Parameters
    A string containing the list of valid entries. The entries have to be separated by spaces.
    The list of entries has to be delimited by brackets "[", "]".
5.238.3.2 bool MHAParser::kw_t::isval (
                      const std::string & testval ) const
Test if the given value is selected.
5.238.3.3 void MHAParser::kw t::validate (
                      const keyword_list_t & s ) [protected]
5.238.3.4 std::string MHAParser::kw_t::op_setval (
                      expression_t & x ) [protected], [virtual]
Reimplemented from MHAParser::variable_t (p. 664).
5.238.3.5 std::string MHAParser::kw_t::query_range (
                      const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 602).
5.238.3.6 std::string MHAParser::kw_t::query_val (
                      const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 602).
5.238.3.7 std::string MHAParser::kw_t::query_type (
                      const std::string & s ) [protected], [virtual]
```

Reimplemented from MHAParser::base_t (p. 602).

5.238.4 Member Data Documentation

Variable data in its native type.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.239 MHAParser::mcomplex_mon_t Class Reference

Matrix of complex numbers monitor.

Inheritance diagram for MHAParser::mcomplex_mon_t:

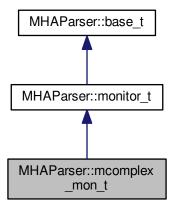

Public Member Functions

mcomplex_mon_t (const std::string &hlp)
 Create a matrix of complex floating point monitor values.

Public Attributes

std::vector< std::vector< mha_complex_t >> data
 Data field.

Protected Member Functions

```
std::string query_val (const std::string &)
```

std::string query_type (const std::string &)

Additional Inherited Members

5.239.1 Detailed Description

Matrix of complex numbers monitor.

5.239.2 Constructor & Destructor Documentation

Create a matrix of complex floating point monitor values.

Parameters

```
hlp A help text describing this monitor variable.
```

```
5.239.3 Member Function Documentation
```

Reimplemented from MHAParser::base_t (p. 602).

Reimplemented from MHAParser::base_t (p. 602).

5.239.4 Member Data Documentation

```
\textbf{5.239.4.1} \quad \textbf{std::vector} < \textbf{mha\_complex\_t} >> \textbf{MHAParser::mcomplex\_mon\_t::data}
```

Data field.


The documentation for this class was generated from the following files:

- · mha parser.hh
- mha_parser.cpp

5.240 MHAParser::mcomplex_t Class Reference

Matrix variable with complex value.

Inheritance diagram for MHAParser::mcomplex_t:

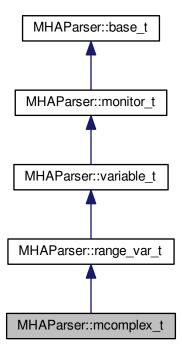

Public Member Functions

mcomplex_t (const std::string &, const std::string &="")

Public Attributes

std::vector< std::vector< mha_complex_t >> data
 Data field.

Protected Member Functions

- std::string op_setval (expression_t &)
- std::string query_type (const std::string &)
- std::string query_val (const std::string &)

```
Additional Inherited Members
```

```
5.240.1 Detailed Description
```

Matrix variable with complex value.

```
5.240.2 Constructor & Destructor Documentation
```

5.240.3 Member Function Documentation

Reimplemented from MHAParser::variable_t (p. 664).

Reimplemented from MHAParser::base_t (p. 602).

Reimplemented from MHAParser::base_t (p. 602).

5.240.4 Member Data Documentation

```
5.240.4.1 std::vector<std::vector<mha_complex_t>> MHAParser::mcomplex_t::data
```

Data field.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.241 MHAParser::mfloat_mon_t Class Reference

Matrix of floats monitor.

Inheritance diagram for MHAParser::mfloat_mon_t:

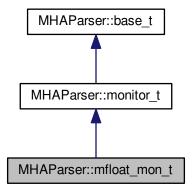

Public Member Functions

mfloat_mon_t (const std::string &hlp)
 Create a matrix of floating point monitor values.

Public Attributes

std::vector< std::vector< float > > data
 Data field.

Protected Member Functions

- std::string query_val (const std::string &)
- std::string query_type (const std::string &)

Additional Inherited Members

5.241.1 Detailed Description

Matrix of floats monitor.

5.241.2 Constructor & Destructor Documentation

Create a matrix of floating point monitor values.

_					
Pa	ra	m	D.	l۵	re

hlp A help text describing this monitor variable.

5.241.3 Member Function Documentation

Reimplemented from MHAParser::base_t (p. 602).

Reimplemented from MHAParser::base_t (p. 602).

5.241.4 Member Data Documentation

```
5.241.4.1 std::vector < std::vector < float > > MHAParser::mfloat_mon_t::data
```

Data field.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.242 MHAParser::mfloat_t Class Reference

Matrix variable with float value.

Inheritance diagram for MHAParser::mfloat_t:

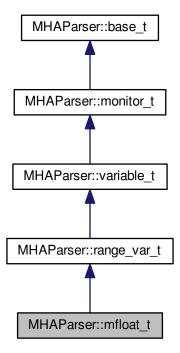

Public Member Functions

mfloat_t (const std::string &, const std::string &="")
 Create a float matrix parser variable.

Public Attributes

std::vector< std::vector< float > > data
 Data field.

Protected Member Functions

- std::string op_setval (expression_t &)
- std::string query_type (const std::string &)
- std::string query_val (const std::string &)

Additional Inherited Members

5.242.1 Detailed Description

Matrix variable with float value.

5.242.2 Constructor & Destructor Documentation

Create a float matrix parser variable.

Parameters

h	A human-readable text describing the purpose of this configuration variable.
V	The initial value of the variable, as a string, in openMHA configuration language: (e.g. "[[0 1]; [2 3]]" for a matrix), described in the "Multidimensional Variables" s2.1.3 section of the openMHA User Manual.
rg	The numeric range to enforce on all members of the matrix.

```
5.242.3 Member Function Documentation
```

Reimplemented from **MHAParser::variable_t** (p. 664).

Reimplemented from MHAParser::base_t (p. 602).

Reimplemented from **MHAParser::base_t** (p. 602).

5.242.4 Member Data Documentation

 $\textbf{5.242.4.1} \quad \textbf{std::vector} < \textbf{std::vector} < \textbf{float} >> \textbf{MHAParser::mfloat_t::data}$


Data field.

The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.243 MHAParser::mhaconfig_mon_t Class Reference

Inheritance diagram for MHAParser::mhaconfig_mon_t:

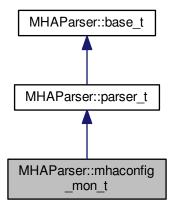

Public Member Functions

- mhaconfig_mon_t (const std::string &help="")
- void update (const mhaconfig_t &cf)

Private Attributes

MHAParser::int mon t channels

Number of audio channels.

MHAParser::string_mon_t domain

Signal domain (MHA WAVEFORM or MHA SPECTRUM)

MHAParser::int_mon_t fragsize

Fragment size of waveform data.

MHAParser::int_mon_t wndlen

Window length of spectral data.

· MHAParser::int mon t fftlen

FFT length of spectral data.

MHAParser::float_mon_t srate

Sampling rate in Hz.

Additional Inherited Members

```
5.243.1 Constructor & Destructor Documentation
```

5.243.2 Member Function Documentation

```
5.243.2.1 void MHAParser::mhaconfig_mon_t::update ( const mhaconfig_t & cf )
```

5.243.3 Member Data Documentation

```
5.243.3.1 MHAParser::int mon tMHAParser::mhaconfig_mon_t::channels [private]
```

Number of audio channels.

```
5.243.3.2 MHAParser::string_mon_t MHAParser::mhaconfig_mon_t::domain [private]
```

Signal domain (MHA WAVEFORM or MHA SPECTRUM)

5.243.3.3 MHAParser::int_mon_t MHAParser::mhaconfig_mon_t::fragsize [private]

Fragment size of waveform data.

5.243.3.4 MHAParser::int_mon_t MHAParser::mhaconfig_mon_t::wndlen [private]

Window length of spectral data.

5.243.3.5 MHAParser::int_mon_t MHAParser::mhaconfig_mon_t::fftlen [private]

FFT length of spectral data.

5.243.3.6 MHAParser::float_mon_t MHAParser::mhaconfig_mon_t::srate [private]

Sampling rate in Hz.

The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.244 MHAParser::mhapluginloader_t Class Reference

Class to create a plugin loader in a parser, including the load logic.

Public Member Functions

- mhapluginloader_t (MHAParser::parser_t &parent, algo_comm_t ac, const std::string &plugname_name="plugin_name", const std::string &prefix="")
- ~mhapluginloader_t ()
- void prepare (mhaconfig_t &cf)
- void release ()
- void process (mha_wave_t *sIn, mha_wave_t **sOut)
- void process (mha_spec_t *sIn, mha_spec_t **sOut)
- void process (mha_wave_t *sln, mha_spec_t **sOut)
- void process (mha_spec_t *sln, mha_wave_t **sOut)
- mhaconfig_t get_cfin () const
- mhaconfig_t get_cfout () const
- const std::string & get_last_name () const

Protected Attributes

PluginLoader::mhapluginloader_t * plug

Private Member Functions

void load_plug ()

Private Attributes

```
    MHAParser::parser_t & parent_
```

- MHAParser::string_t plugname
- std::string prefix_
- MHAEvents::connector t< mhapluginloader t > connector
- · algo_comm_t ac_
- std::string last_name
- std::string plugname_name_
- mhaconfig_t cf_in_
- mhaconfig_t cf_out_

Static Private Attributes

static double bookkeeping

5.244.1 Detailed Description

Class to create a plugin loader in a parser, including the load logic.

```
5.244.2 Constructor & Destructor Documentation
```

- 5.244.2.2 MHAParser::mhapluginloader t::~mhapluginloader t()
- 5.244.3 Member Function Documentation
- 5.244.3.1 void MHAParser::mhapluginloader_t::prepare (mhaconfig_t & cf)
- 5.244.3.2 void MHAParser::mhapluginloader_t::release ()
- 5.244.3.3 void MHAParser::mhapluginloader_t::process (mha wave t * sln,

```
mha_wave_t ** sOut ) [inline]
```

5.244.3.4 void MHAParser::mhapluginloader_t::process (

```
mha_spec_t * sln,
mha_spec_t ** sOut ) [inline]
```

```
5.244.3.5 void MHAParser::mhapluginloader t::process (
                     mha_wave_t * sln,
                     mha spec t ** sOut ) [inline]
5.244.3.6 void MHAParser::mhapluginloader_t::process (
                     mha spec t * sln,
                     mha_wave_t ** sOut ) [inline]
5.244.3.7 mhaconfig_t MHAParser::mhapluginloader_t::get_cfin( ) const [inline]
5.244.3.8 mhaconfig t MHAParser::mhapluginloader_t::get_cfout( ) const [inline]
5.244.3.9 const std::string& MHAParser::mhapluginloader_t::get_last_name( ) const [inline]
5.244.3.10 void MHAParser::mhapluginloader_t::load_plug( ) [private]
5.244.4 Member Data Documentation
5.244.4.1 PluginLoader::mhapluginloader_t* MHAParser::mhapluginloader_t::plug
         [protected]
5.244.4.2 MHAParser::parser_t& MHAParser::mhapluginloader_t::parent_ [private]
5.244.4.3 MHAParser::string_t MHAParser::mhapluginloader_t::plugname [private]
5.244.4.4 std::string MHAParser::mhapluginloader_t::prefix_ [private]
5.244.4.5 MHAEvents::connector t<mhapluginloader t> MHAParser::mhapluginloader_t ←
         ::connector [private]
5.244.4.6 algo_comm_t MHAParser::mhapluginloader_t::ac_ [private]
5.244.4.7 std::string MHAParser::mhapluginloader_t::last_name [private]
5.244.4.8 std::string MHAParser::mhapluginloader_t::plugname_name_ [private]
5.244.4.9 mhaconfig_t MHAParser::mhapluginloader_t::cf_in_ [private]
5.244.4.10 mhaconfig_t MHAParser::mhapluginloader_t::cf_out_ [private]
5.244.4.11 double MHAParser::mhapluginloader_t::bookkeeping [static], [private]
```


The documentation for this class was generated from the following files:

- mhapluginloader.h
- mhapluginloader.cpp

5.245 MHAParser::mint_mon_t Class Reference

Matrix of ints monitor.

Inheritance diagram for MHAParser::mint_mon_t:

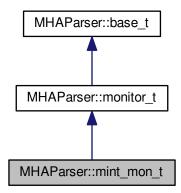

Public Member Functions

mint_mon_t (const std::string &hlp)
 Create a matrix of integer monitor values.

Public Attributes

std::vector< std::vector< int > > data
 Data field.

Protected Member Functions

- std::string query_val (const std::string &)
- std::string query_type (const std::string &)

Additional Inherited Members

5.245.1 Detailed Description

Matrix of ints monitor.

5.245.2 Constructor & Destructor Documentation

5.245.2.1 MHAParser::mint_mon_t::mint_mon_t (const std::string & hlp)

Create a matrix of integer monitor values.

Parameters

hlp A help text describing this monitor variable.

5.245.3 Member Function Documentation

Reimplemented from **MHAParser::base_t** (p. 602).

Reimplemented from **MHAParser::base_t** (p. 602).

5.245.4 Member Data Documentation

5.245.4.1 std::vector< std::vector<int> > MHAParser::mint_mon_t::data

Data field.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.246 MHAParser::monitor_t Class Reference

Base class for monitors and variable nodes.

Inheritance diagram for MHAParser::monitor_t:

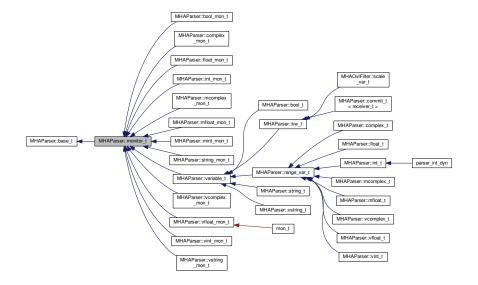

Public Member Functions

```
monitor_t (const std::string &)
   • monitor t (const monitor t &)
   std::string op_query (expression_t &)
   std::string query_dump (const std::string &)
   • std::string query perm (const std::string &)
Additional Inherited Members
5.246.1 Detailed Description
Base class for monitors and variable nodes.
5.246.2 Constructor & Destructor Documentation
5.246.2.1 MHAParser::monitor t::monitor t (
                      const std::string & h )
5.246.2.2 MHAParser::monitor_t::monitor_t (
                      const monitor t & src )
5.246.3 Member Function Documentation
5.246.3.1 std::string MHAParser::monitor_t::op_query (
                      expression t&x) [virtual]
Reimplemented from MHAParser::base_t (p. 601).
5.246.3.2 std::string MHAParser::monitor_t::query_dump (
                      const std::string & s ) [virtual]
Reimplemented from MHAParser::base_t (p. 601).
5.246.3.3 std::string MHAParser::monitor_t::query_perm (
                      const std::string & s ) [virtual]
Reimplemented from MHAParser::base_t (p. 602).
```

The documentation for this class was generated from the following files:

Reimplemented in MHAParser::variable_t (p. 664).

- mha_parser.hh
- mha_parser.cpp

5.247 MHAParser::parser t Class Reference

Parser node class.

Inherits MHAParser::base_t.

Inherited by AuditoryProfile::parser_t, AuditoryProfile::parser_t::ear_t, AuditoryProfile← ::parser t::fmap t, dc::wideband inhib vars t, DynComp::dc afterburn vars t, fw t, io_file_t, io_parser_t, io_tcp_parser_t, MHAFilter::adapt_filter_t, MHAFilter::iir_filter_t, MHAIOJack::io jack t, MHAIOJackdb::io jack t, MHAIOPortAudio::device info t, MH← AIOPortAudio::io_portaudio_t, MHAParser::mhaconfig_mon_t, MHAParser::window_t, MHAPlugin::plugin t< runtime cfg t>, MHAPlugin Split::split t, MHAPlugin::plugin ← t< ac2wave t >, MHAPlugin::plugin t< acConcat wave config >, MHAPlugin::plugin← t< acPooling wave config >, MHAPlugin::plugin t< acSteer config >, MHAPlugin← ::plugin_t< acTransform_wave_config >, MHAPlugin::plugin_t< adm_rtconfig_t >, M \cong in_t < adm_rtconfig_t < adm_ $\label{eq:haplugin:plugin_t} \mbox{HAPlugin::plugin_t} < \mbox{ cfg_t } >, \mbox{ MHAPlugin::plugin_t} < \mbox{ cfg_t } >, \$::plugin_t< cohflt_t >, MHAPlugin::plugin_t< combc_t >, MHAPlugin::plugin_t< db_t >, MHAPlugin::plugin_t< dc_t >, MHAPlugin::plugin_t< delaysum_t >, MHAPlugin↔ ::plugin_t< doasym_classification_config >, MHAPlugin::plugin_t< doasym_feature _extraction_config >, MHAPlugin::plugin_t< example5_t >, MHAPlugin::plugin_t< fftfb_plug_t >, MHAPlugin::plugin_t < float >, MHAPlugin::plugin_t < hilbert_shifter <-_t >, MHAPlugin::plugin_t< int >, MHAPlugin::plugin_t< lpc_bl_predictor_config >, MHAPlugin::plugin_t< lpc_burglattice_config >, MHAPlugin::plugin_t< lpc_config >, MHAPlugin::plugin_t< MHA_AC::spectrum_t >, MHAPlugin::plugin_t< MHA_AC ::waveform t >, MHAPlugin::plugin t< mhachain::plugs t >, MHAPlugin::plugin t< MHASignal::delay t >, MHAPlugin::plugin t < MHASignal::waveform t >, MHAPlugin ← ::plugin_t< MHAWindow::fun_t >, MHAPlugin::plugin_t< noisePowProposed >, M > HAPlugin::plugin_t< overlapadd_t >, MHAPlugin::plugin_t< plingploing_t >, MHA← $\label{eq:plugin:plugin_t} \textbf{Plugin::plugin_t} < \ \textbf{prediction_error_config} \ >, \ \ \textbf{MHAPlugin::plugin_t} < \ \textbf{resampling_t} \ >,$ MHAPlugin::plugin_t< rmslevel_t >, MHAPlugin::plugin_t< route::process_t >, MHA-Plugin::plugin_t< rt_nlms_t >, MHAPlugin::plugin_t< scaler_t >, MHAPlugin::plugin == _t< sine_cfg_t >, MHAPlugin::plugin_t< smoothspec_wrap_t >, MHAPlugin::plugin_t< spec2wave_t >, MHAPlugin::plugin_t < spec_fader_t >, MHAPlugin::plugin_t < steerbf ← _config >, MHAPlugin::plugin_t< timoConfig >, MHAPlugin::plugin_t< wave2spec_t >, MHAPlugin::plugin_t< wavwriter_t >, softclipper_variables_t, testplugin::ac_parser_t, testplugin::config_parser_t, and testplugin::signal_parser_t.

Public Member Functions

- parser_t (const std::string &help_text="")
 Construct detached node to be used in the configuration tree.
- ~parser t()
- void insert_item (const std::string &, base_t *)
 Register a parser item into this sub-parser.
- void **remove_item** (const std::string &)

Remove an item by name.

void force_remove_item (const std::string &)

Remove an item by name.

void remove_item (const base_t *)

Remove an item by address.

Protected Member Functions

- std::string op_subparse (expression_t &)
- std::string op_setval (expression_t &)
- std::string op_query (expression_t &)
- std::string query_type (const std::string &)
- std::string query_dump (const std::string &)
- std::string query_entries (const std::string &)
- std::string query_readfile (const std::string &)
- std::string query_savefile (const std::string &)
- std::string query_savefile_compact (const std::string &)
- std::string query_savemons (const std::string &)
- std::string query_val (const std::string &)
- std::string query_listids (const std::string &)
- void set_id_string (const std::string &)

Private Attributes

- entry map t entries
- std::string id_string identification string
- std::string srcfile
- unsigned int srcline
- std::string last errormsg

Additional Inherited Members

5.247.1 Detailed Description

Parser node class.

A parser_t (p. 651) instance is a node in the configuration tree. A parser node can contain any number of other parser_t (p. 651) instances or configuration language variables. These items are inserted into a parser node using the parser_t::insert_item (p. 653) method.

5.247.2 Constructor & Destructor Documentation

```
5.247.2.1 MHAParser::parser_t::parser_t (
const std::string & help_text = " " )
```

Construct detached node to be used in the configuration tree.

Parameters

help_text	A text describing this node. E.g. if this node lives at the root of some openMHA
	plugin, then the help text should describe the functionality of the plugin.

```
5.247.2.2 MHAParser::parser_t::~parser_t ( )
5.247.3 Member Function Documentation
5.247.3.1 void MHAParser::parser_t::insert_item (
```

const std::string & n,

MHAParser::base_t * e)

Register a parser item into this sub-parser.

This function registers an item under a given name into this sub-parser and makes it accessible to the parser interface.

Parameters

n	Name of the item in the configuration tree
е	C++ pointer to the item instance. e can either point to a variable, to a monitor, or to
	another sub-parser.

```
5.247.3.2 void MHAParser::parser_t::remove_item ( const std::string & n )
```

Remove an item by name.

If the item does not exist, an error is being reported.

Parameters

n Name of parser item to be removed from list.

```
5.247.3.3 void MHAParser::parser_t::force_remove_item ( const std::string & n )
```

Remove an item by name.

Non-existing items are ignored.

Parameters

n Name of parser item to be removed from list.

```
5.247.3.4 void MHAParser::parser_t::remove_item (
                       const base_t * addr )
```

Remove an item by address.

The item belonging to an address is being removed from the list of items.

Parameters

```
addr
      Address of parser item to be removed.
```

```
5.247.3.5 std::string MHAParser::parser_t::op_subparse (
                     expression_t & x ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 601).
5.247.3.6 std::string MHAParser::parser_t::op_setval (
                     expression t&x ) [protected], [virtual]
Reimplemented from MHAParser::base t (p. 601).
5.247.3.7 std::string MHAParser::parser_t::op_query (
                     expression t&x ) [protected],[virtual]
Reimplemented from MHAParser::base t (p. 601).
5.247.3.8 std::string MHAParser::parser_t::query_type (
                     const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base t (p. 602).
5.247.3.9 std::string MHAParser::parser_t::query_dump (
                     const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 601).
5.247.3.10 std::string MHAParser::parser_t::query_entries (
                      const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base t (p. 602).
5.247.3.11 std::string MHAParser::parser_t::query_readfile (
                      const std::string & fname ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 602).
```

```
5.247.3.12 std::string MHAParser::parser_t::query_savefile (
                       const std::string & fname ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 603).
5.247.3.13 std::string MHAParser::parser t::query savefile compact (
                       const std::string & fname ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 603).
5.247.3.14 std::string MHAParser::parser_t::query_savemons (
                       const std::string & fname ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 603).
5.247.3.15 std::string MHAParser::parser_t::query_val (
                       const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 602).
5.247.3.16 std::string MHAParser::parser_t::query_listids (
                       const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 603).
5.247.3.17 void MHAParser::parser_t::set_id_string (
                       const std::string & s ) [protected]
5.247.4 Member Data Documentation
5.247.4.1 entry_map_t MHAParser::parser_t::entries [private]
5.247.4.2 std::string MHAParser::parser_t::id_string [private]
identification string
5.247.4.3 std::string MHAParser::parser_t::srcfile [private]
5.247.4.4 unsigned int MHAParser::parser_t::srcline [private]
5.247.4.5 std::string MHAParser::parser_t::last_errormsg [private]
```


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.248 MHAParser::range_var_t Class Reference

Base class for all variables with a numeric value range.

Inheritance diagram for MHAParser::range_var_t:

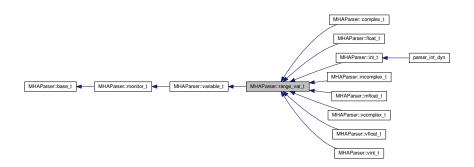

Public Member Functions

- range_var_t (const std::string &, const std::string &="")
- range_var_t (const range_var_t &)
- std::string query_range (const std::string &)
- void set_range (const std::string &r)

Change the valid range of a variable.

- void validate (const int &)
- void validate (const float &)
- void validate (const mha_complex_t &)
- void validate (const std::vector< int > &)
- void validate (const std::vector< float > &)
- void validate (const std::vector< mha_complex_t > &)
- void validate (const std::vector< std::vector< float > > &)
- void validate (const std::vector< std::vector< mha_complex_t >> &)

Protected Attributes

float low_limit

Lower limit of range.

float up_limit

Upper limit of range.

bool low_incl

Lower limit is included (or excluded) in range.

• bool up incl

Upper limit is included (or excluded) in range.

· bool check low

Check lower limit.

bool check_up

Check upper limit.

bool check_range

Range checking is active.

Additional Inherited Members

```
5.248.1 Detailed Description
```

Base class for all variables with a numeric value range.

```
5.248.2 Constructor & Destructor Documentation
```

5.248.3 Member Function Documentation

Reimplemented from MHAParser::base_t (p. 602).

```
5.248.3.2 void MHAParser::range_var_t::set_range ( const std::string & r )
```

Change the valid range of a variable.

Parameters

```
r | New range of the variable (string representation)
```

```
5.248.3.3 void MHAParser::range_var_t::validate ( const int & v )
```

```
5.248.3.4 void MHAParser::range_var_t::validate ( const float & v )
```

```
5.248.3.6 void MHAParser::range_var_t::validate ( const std::vector< int > & \nu )
```

```
5.248.3.7 void MHAParser::range_var_t::validate (
                      const std::vector< float > & v )
5.248.3.8 void MHAParser::range_var_t::validate (
                      const std::vector< mha_complex_t > & v )
5.248.3.9 void MHAParser::range_var_t::validate (
                      const std::vector< std::vector< float > > & \nu
5.248.3.10 void MHAParser::range_var_t::validate (
                       const std::vector< std::vector< mha complex t> > & \nu )
5.248.4 Member Data Documentation
5.248.4.1 float MHAParser::range_var_t::low_limit [protected]
Lower limit of range.
5.248.4.2 float MHAParser::range_var_t::up_limit [protected]
Upper limit of range.
5.248.4.3 bool MHAParser::range var t::low incl [protected]
Lower limit is included (or excluded) in range.
5.248.4.4 bool MHAParser::range var t::up incl [protected]
Upper limit is included (or excluded) in range.
5.248.4.5 bool MHAParser::range_var_t::check_low [protected]
Check lower limit.
5.248.4.6 bool MHAParser::range_var_t::check_up [protected]
Check upper limit.
5.248.4.7 bool MHAParser::range_var_t::check_range [protected]
Range checking is active.
```


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.249 MHAParser::string_mon_t Class Reference

Monitor with string value.

Inheritance diagram for MHAParser::string_mon_t:

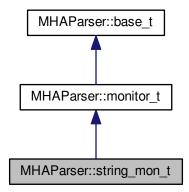

Public Member Functions

string_mon_t (const std::string &hlp)
 Create a monitor variable for string values.

Public Attributes

• std::string data

Data field.

Protected Member Functions

- std::string query_val (const std::string &)
- std::string query_type (const std::string &)

Additional Inherited Members

5.249.1 Detailed Description

Monitor with string value.

5.249.2 Constructor & Destructor Documentation

5.249.2.1 MHAParser::string_mon_t::string_mon_t (const std::string & *hlp*)

Create a monitor variable for string values.

Parameters

hlp A help text describing this monitor variable.

5.249.3 Member Function Documentation

Reimplemented from MHAParser::base_t (p. 602).

Reimplemented from **MHAParser::base_t** (p. 602).

5.249.4 Member Data Documentation

5.249.4.1 std::string MHAParser::string_mon_t::data

Data field.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.250 MHAParser::string_t Class Reference

Variable with a string value.

Inheritance diagram for MHAParser::string_t:

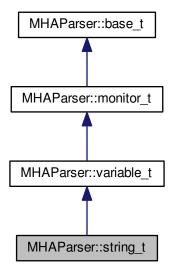

Public Member Functions

• **string_t** (const std::string &, const std::string &)

Constructor of a openMHA configuration variable for string values.

Public Attributes

• std::string data

Data field.

Protected Member Functions

- std::string op_setval (expression_t &)
- std::string query_type (const std::string &)
- std::string query_val (const std::string &)

Additional Inherited Members

5.250.1 Detailed Description

Variable with a string value.

5.250.2 Constructor & Destructor Documentation

Constructor of a openMHA configuration variable for string values.

Parameters

h	A help string describing the purpose of this variable.
V	The initial string value

5.250.3 Member Function Documentation

Reimplemented from **MHAParser::variable_t** (p. 664).

Reimplemented from MHAParser::base_t (p. 602).

Reimplemented from MHAParser::base_t (p. 602).

5.250.4 Member Data Documentation

5.250.4.1 std::string MHAParser::string_t::data

Data field.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.251 MHAParser::variable_t Class Reference

Base class for variable nodes.

Inheritance diagram for MHAParser::variable_t:

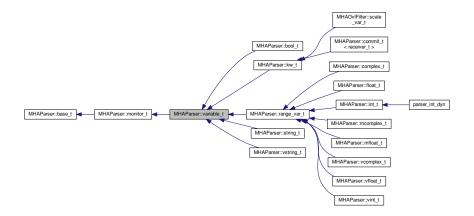

Public Member Functions

- variable_t (const std::string &)
- std::string op_setval (expression_t &)
- std::string query_perm (const std::string &)
- void **setlock** (const bool &)

Lock a variable against write access.

Private Attributes

bool locked

Additional Inherited Members

5.251.1 Detailed Description

Base class for variable nodes.


```
5.251.2 Constructor & Destructor Documentation
5.251.2.1 MHAParser::variable_t::variable_t (
                     const std::string & h)
5.251.3 Member Function Documentation
5.251.3.1 std::string MHAParser::variable_t::op_setval (
                     expression_t & x ) [virtual]
Reimplemented from MHAParser::base_t (p. 601).
Reimplemented in MHAParser::mcomplex t (p. 638), MHAParser::mfloat t (p. 642), MH←
AParser::vcomplex_t (p. 669), MHAParser::vfloat_t (p. 673), MHAParser::vint_t (p. 677),
MHAParser::complex_t (p. 618), MHAParser::float_t (p. 624), MHAParser::int_t (p. 629),
MHAParser::bool_t (p. 610), MHAParser::vstring_t (p. 681), MHAParser::string_t (p. 662),
and MHAParser::kw_t (p. 634).
5.251.3.2 std::string MHAParser::variable_t::query_perm (
                     const std::string & s ) [virtual]
Reimplemented from MHAParser::monitor_t (p. 650).
5.251.3.3 void MHAParser::variable_t::setlock (
                     const bool & b)
Lock a variable against write access.
Parameters
    Lock state
5.251.4 Member Data Documentation
5.251.4.1 bool MHAParser::variable t::locked [private]
The documentation for this class was generated from the following files:
```

mha_parser.hhmha_parser.cpp

5.252 MHAParser::vcomplex_mon_t Class Reference

Monitor with vector of complex values.

Inheritance diagram for MHAParser::vcomplex_mon_t:

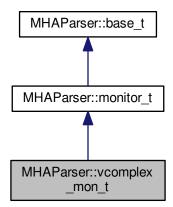

Public Member Functions

vcomplex_mon_t (const std::string &hlp)
 Create a vector of complex monitor values.

Public Attributes

std::vector< mha_complex_t > data
 Data field.

Protected Member Functions

- std::string query_val (const std::string &)
- std::string query_type (const std::string &)

Additional Inherited Members

5.252.1 Detailed Description

Monitor with vector of complex values.

- 5.252.2 Constructor & Destructor Documentation
- 5.252.2.1 MHAParser::vcomplex_mon_t::vcomplex_mon_t (const std::string & hlp)

Create a vector of complex monitor values.

Parameters

hlp A help text describing this monitor variable.

5.252.3 Member Function Documentation

Reimplemented from MHAParser::base_t (p. 602).

Reimplemented from **MHAParser::base_t** (p. 602).

5.252.4 Member Data Documentation

5.252.4.1 std::vector<mha_complex_t> MHAParser::vcomplex_mon_t::data

Data field.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.253 MHAParser::vcomplex_t Class Reference

Vector variable with complex value.

Inheritance diagram for MHAParser::vcomplex_t:

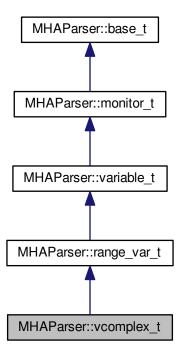

Public Member Functions

• vcomplex_t (const std::string &, const std::string &, const std::string &="")

Public Attributes

std::vector< mha_complex_t > data
 Data field.

Protected Member Functions

- std::string op_setval (expression_t &)
- std::string query_type (const std::string &)
- std::string query_val (const std::string &)

Additional Inherited Members

5.253.1 Detailed Description

Vector variable with complex value.

5.253.2 Constructor & Destructor Documentation

```
5.253.2.1 MHAParser::vcomplex_t::vcomplex_t (
                      const std::string & h,
                      const std::string & v,
                      const std::string & rg = " " )
5.253.3 Member Function Documentation
5.253.3.1 std::string MHAParser::vcomplex_t::op_setval (
                      expression_t & x ) [protected], [virtual]
Reimplemented from MHAParser::variable_t (p. 664).
5.253.3.2 std::string MHAParser::vcomplex_t::query_type (
                      const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 602).
5.253.3.3 std::string MHAParser::vcomplex_t::query_val (
                      const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 602).
5.253.4 Member Data Documentation
5.253.4.1 std::vector<mha_complex_t> MHAParser::vcomplex_t::data
Data field.
The documentation for this class was generated from the following files:
```


© 2005-2018 HörTech gGmbH, Oldenburg

mha_parser.hhmha_parser.cpp

5.254 MHAParser::vfloat_mon_t Class Reference

Vector of floats monitor.

Inheritance diagram for MHAParser::vfloat_mon_t:

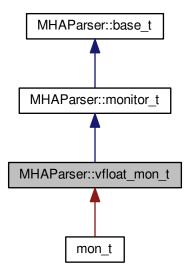

Public Member Functions

vfloat_mon_t (const std::string &hlp)
 Create a vector of floating point monitor values.

Public Attributes

• std::vector< float > **data**Data field.

Protected Member Functions

- std::string query_val (const std::string &)
- std::string query_type (const std::string &)

Additional Inherited Members

5.254.1 Detailed Description

Vector of floats monitor.

```
5.254.2 Constructor & Destructor Documentation
```

```
5.254.2.1 MHAParser::vfloat_mon_t::vfloat_mon_t ( const std::string & hlp )
```

Create a vector of floating point monitor values.

Parameters

```
hlp A help text describing this monitor variable.
```

5.254.3 Member Function Documentation

Reimplemented from **MHAParser::base_t** (p. 602).

Reimplemented from MHAParser::base_t (p. 602).

5.254.4 Member Data Documentation

5.254.4.1 std::vector<float> MHAParser::vfloat_mon_t::data

Data field.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.255 MHAParser::vfloat_t Class Reference

Vector variable with float value.

Inheritance diagram for MHAParser::vfloat_t:

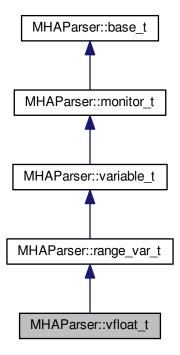

Public Member Functions

vfloat_t (const std::string &, const std::string &="")
 Create a float vector parser variable.

Public Attributes

std::vector< float > data
 Data field.

Protected Member Functions

- std::string op_setval (expression_t &)
- std::string query_type (const std::string &)
- std::string query_val (const std::string &)

Additional Inherited Members

5.255.1 Detailed Description

Vector variable with float value.

5.255.2 Constructor & Destructor Documentation

Create a float vector parser variable.

Parameters

h	A human-readable text describing the purpose of this configuration variable.
V	The initial value of the variable, as a string, in openMHA configuration language:
	(e.g. "[0 1 2.1 3]" for a vector), described in the "Multidimensional Variables" s2.1.3 section of the openMHA User Manual.
rg	The numeric range to enforce on all members of the vector.

5.255.3 Member Function Documentation

Reimplemented from **MHAParser::variable_t** (p. 664).

Reimplemented from **MHAParser::base_t** (p. 602).

Reimplemented from MHAParser::base_t (p. 602).

5.255.4 Member Data Documentation

5.255.4.1 std::vector<float> MHAParser::vfloat_t::data

Data field.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.256 MHAParser::vint_mon_t Class Reference

Vector of ints monitor.

Inheritance diagram for MHAParser::vint_mon_t:

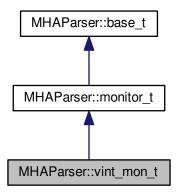

Public Member Functions

vint_mon_t (const std::string &hlp)
 Create a vector of integer monitor values.

Public Attributes

std::vector< int > data
 Data field.

Protected Member Functions

```
    std::string query_val (const std::string &)
```

std::string query_type (const std::string &)

Additional Inherited Members

5.256.1 Detailed Description

Vector of ints monitor.

5.256.2 Constructor & Destructor Documentation

```
5.256.2.1 MHAParser::vint_mon_t::vint_mon_t ( const std::string & hlp )
```

Create a vector of integer monitor values.

Parameters

```
hlp A help text describing this monitor variable.
```

```
5.256.3 Member Function Documentation
```

Reimplemented from MHAParser::base_t (p. 602).

Reimplemented from **MHAParser::base_t** (p. 602).

5.256.4 Member Data Documentation

5.256.4.1 std::vector<int> MHAParser::vint_mon_t::data

Data field.


The documentation for this class was generated from the following files:

- mha parser.hh
- mha_parser.cpp

5.257 MHAParser::vint_t Class Reference

Variable with vector<int> value.

Inheritance diagram for MHAParser::vint_t:

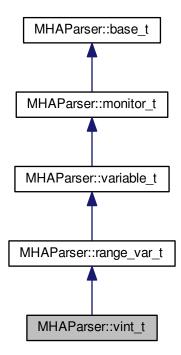

Public Member Functions

vint_t (const std::string &, const std::string &="")
 Constructor.

Public Attributes

std::vector< int > data
 Data field.

Protected Member Functions

- std::string op_setval (expression_t &)
- std::string query_type (const std::string &)
- std::string query_val (const std::string &)

Additional Inherited Members

5.257.1 Detailed Description

Variable with vector<int> value.

5.257.2 Constructor & Destructor Documentation

Constructor.

Parameters

h	help string
V	initial value
rg	optional: range constraint for all elements

5.257.3 Member Function Documentation

Reimplemented from **MHAParser::variable_t** (p. 664).

Reimplemented from **MHAParser::base_t** (p. 602).

Reimplemented from **MHAParser::base_t** (p. 602).

5.257.4 Member Data Documentation

5.257.4.1 std::vector<int> MHAParser::vint_t::data

Data field.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.258 MHAParser::vstring_mon_t Class Reference

Vector of monitors with string value.

Inheritance diagram for MHAParser::vstring_mon_t:

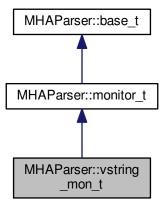

Public Member Functions

vstring_mon_t (const std::string &hlp)
 Create a vector of string monitor values.

Public Attributes

std::vector< std::string > data
 Data field.

Protected Member Functions

```
std::string query_val (const std::string &)
```

std::string query_type (const std::string &)

Additional Inherited Members

5.258.1 Detailed Description

Vector of monitors with string value.

5.258.2 Constructor & Destructor Documentation

5.258.2.1 MHAParser::vstring_mon_t::vstring_mon_t (const std::string & hlp)

Create a vector of string monitor values.

Parameters

```
hlp A help text describing this monitor variable.
```

```
5.258.3 Member Function Documentation
```

Reimplemented from MHAParser::base_t (p. 602).

Reimplemented from **MHAParser::base_t** (p. 602).

5.258.4 Member Data Documentation

5.258.4.1 std::vector<std::string> MHAParser::vstring_mon_t::data

Data field.


The documentation for this class was generated from the following files:

- mha parser.hh
- mha_parser.cpp

5.259 MHAParser::vstring_t Class Reference

Vector variable with string values.

Inheritance diagram for MHAParser::vstring_t:

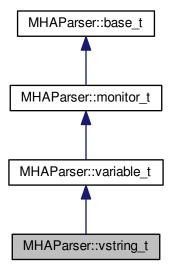

Public Member Functions

• vstring_t (const std::string &, const std::string &)

Public Attributes

std::vector< std::string > data
 Data field.

Protected Member Functions

- std::string op_setval (expression_t &)
- std::string query_type (const std::string &)
- std::string query_val (const std::string &)

Additional Inherited Members

5.259.1 Detailed Description

Vector variable with string values.

```
5.259.2 Constructor & Destructor Documentation
5.259.2.1 MHAParser::vstring_t::vstring_t (
                      const std::string & h,
                      const std::string & v )
5.259.3 Member Function Documentation
5.259.3.1 std::string MHAParser::vstring_t::op_setval (
                      expression_t & x ) [protected], [virtual]
Reimplemented from MHAParser::variable_t (p. 664).
5.259.3.2 std::string MHAParser::vstring_t::query_type (
                      const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 602).
5.259.3.3 std::string MHAParser::vstring_t::query_val (
                      const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 602).
5.259.4 Member Data Documentation
5.259.4.1 std::vector<std::string> MHAParser::vstring_t::data
Data field.
```


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.260 MHAParser::window_t Class Reference

MHA configuration interface for a window function generator.

Inheritance diagram for MHAParser::window_t:

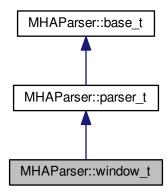

Public Types

Public Member Functions

- window_t (const std::string &help="Window type configuration.")
 Constructor to create parser class.
- MHAWindow::base_t get_window (unsigned int len) const Create a window instance, use default parameters.
- MHAWindow::base_t get_window (unsigned int len, float xmin) const Create a window instance.
- MHAWindow::base_t get_window (unsigned int len, float xmin, float xmax) const Create a window instance.
- MHAWindow::base_t get_window (unsigned int len, float xmin, float xmax, bool minincluded) const

Create a window instance.

 MHAWindow::base_t get_window (unsigned int len, float xmin, float xmax, bool minincluded, bool maxincluded) const

Create a window instance.

MHAParser::window_t::wtype_t get_type () const

Return currently selected window type.

Private Attributes

MHAParser::kw_t wtypeMHAParser::vfloat_t user

Additional Inherited Members

5.260.1 Detailed Description

MHA configuration interface for a window function generator.

This class implements a configuration interface (sub-parser) for window type selection and user-defined window type. It provides member functions to generate an instance of **MHA**← **Window::base_t** (p. 798) based on the values provided by the configuration interface.

The configuration interface is derived from **MHAParser::parser_t** (p. 651) and can thus be inserted into the configuration tree using the **insert_item()** (p. 653) method of the parent parser.

If one of the pre-defined window types is used, then the window is generated using the **MHA** \leftarrow **Window::fun_t** (p. 801) class constructor; for the user-defined type the values from the "user" variable are copied.

```
5.260.2 Member Enumeration Documentation
```

```
5.260.2.1 enum MHAParser::window_t::wtype_t
```

Enumerator

```
wnd_rect
wnd_hann
wnd_hamming
wnd_blackman
wnd_bartlett
wnd_user
```

5.260.3 Constructor & Destructor Documentation

Constructor to create parser class.

5.260.4 Member Function Documentation

```
5.260.4.1 MHAWindow::base_t MHAParser::window_t::get_window ( unsigned int len ) const
```

Create a window instance, use default parameters.

```
5.260.4.2 MHAWindow::base_t MHAParser::window_t::get_window (
                      unsigned int len,
                      float xmin ) const
Create a window instance.
5.260.4.3 MHAWindow::base_t MHAParser::window_t::get_window (
                      unsigned int len,
                      float xmin,
                      float xmax ) const
Create a window instance.
5.260.4.4 MHAWindow::base_t MHAParser::window_t::get_window (
                      unsigned int len,
                      float xmin.
                      float xmax,
                      bool minincluded ) const
Create a window instance.
5.260.4.5 MHAWindow::base t MHAParser::window t::get window (
                      unsigned int len,
                      float xmin.
                      float xmax,
                      bool minincluded,
                      bool maxincluded ) const
Create a window instance.
5.260.4.6 MHAParser::window_t::wtype_t MHAParser::window_t::get_type ( ) const
Return currently selected window type.
5.260.5 Member Data Documentation
5.260.5.1 MHAParser::kw_t MHAParser::window_t::wtype [private]
```


The documentation for this class was generated from the following files:

5.260.5.2 MHAParser::vfloat_t MHAParser::window_t::user [private]

- mha_windowparser.h
- mha_windowparser.cpp

5.261 mhaplug_cfg_t Class Reference

Inheritance diagram for mhaplug_cfg_t:

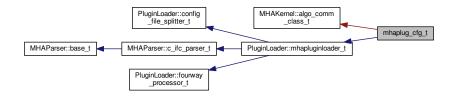

Public Member Functions

- mhaplug_cfg_t (algo_comm_t iac, const std::string &libname, bool use_own_ac)
- ~mhaplug_cfg_t () throw ()

Additional Inherited Members

5.261.1 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

altplugs.cpp

5.262 MHAPlugin::cfg_chain_t < runtime_cfg_t > Class Template Reference

Public Member Functions

- cfg_chain_t (runtime_cfg_t *id)
- ∼cfg_chain_t ()

Public Attributes

```
• cfg_chain_t< runtime_cfg_t > * next
```

- · bool not in use
- runtime_cfg_t * data
- 5.262.1 Constructor & Destructor Documentation

```
5.262.1.2 template < class runtime_cfg_t > MHAPlugin::cfg_chain_t < runtime_cfg_t >:: \sim cfg_chain_t ( )
```


- 5.262.2 Member Data Documentation
- 5.262.2.1 template < class runtime_cfg_t > cfg_chain_t < runtime_cfg_t >* MHAPlugin::cfg_chain_t < runtime_cfg_t >::next
- 5.262.2.2 template < class runtime_cfg_t > bool MHAPlugin::cfg_chain_t < runtime_cfg_t >::not_in_use
- 5.262.2.3 template < class runtime_cfg_t > runtime_cfg_t * MHAPlugin::cfg_chain_t < runtime_cfg_t > ::data

The documentation for this class was generated from the following file:

- mha_plugin.hh
- 5.263 MHAPlugin::config_t< runtime_cfg_t > Class Template Reference

Template class for thread safe configuration.

Inheritance diagram for MHAPlugin::config_t< runtime_cfg_t >:

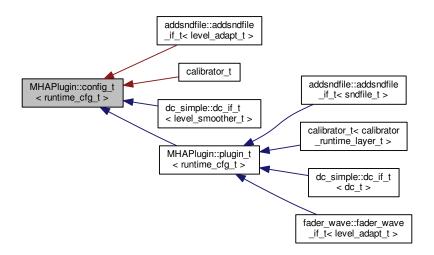

Public Member Functions

- · config_t ()
- ~config_t ()

Protected Member Functions

- runtime_cfg_t * poll_config ()
 Receive the latest run time configuration.
- runtime_cfg_t * last_config ()
 Receive the latest run time configuration.
- void push_config (runtime_cfg_t *ncfg)
 Push a new run time configuration into the configuration fifo.
- void cleanup_unused_cfg ()

Protected Attributes

runtime_cfg_t * cfg

Private Member Functions

void remove_all_cfg ()

Private Attributes

- MHAPlugin::cfg_chain_t< runtime_cfg_t > * cfg_chain
- MHAPlugin::cfg_chain_t< runtime_cfg_t > * cfg_chain_current

5.263.1 Detailed Description

```
template < class runtime_cfg_t > class MHAPlugin::config_t < runtime_cfg_t >
```

Template class for thread safe configuration.

This template class provides a mechanism for the handling of thread safe configuration which is required for run time configuration changes of the openMHA plugins.

The template parameter runtime_cfg_t is the run time configuration class of the openMHA plugin. The constructor of that class should transform the **MHAParser** (p. 103) variables into derived runtime configuration. The constructor should fail if the configuration is invalid by any reason.

A new runtime configuration is provided by the function **push_config()** (p. 689). In the processing thread, the actual configuration can be received by a call of **poll_config()** (p. 689).

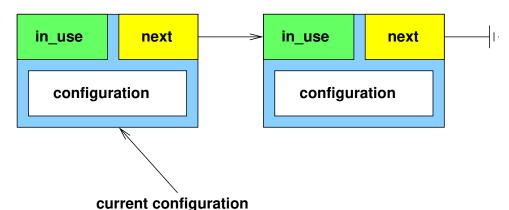


Figure 5 Schematic drawing of runtime configuration update: configuration updated, but not used yet.

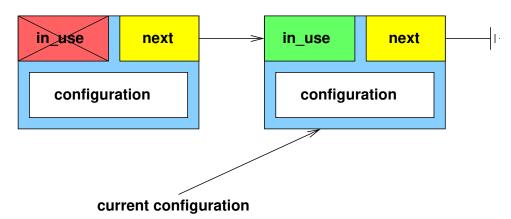


Figure 6 Schematic drawing of runtime configuration update: configuration in use.

```
5.263.2 Constructor & Destructor Documentation
```

```
5.263.3.1 template < class runtime_cfg_t > runtime_cfg_t * MHAPlugin::config_t < runtime_cfg_t > ::poll_config ( ) [protected]
```

Receive the latest run time configuration.

This function stores the latest run time configuration into the protected class member variable 'cfg'. If no configuration exists, then an exception will be thrown. If no changes occured, then the value of 'cfg' will be untouched. This function should be called before any access to the 'cfg' variable, typically once in each signal processing call.

This function should be only called from the *processing* thread.

Exceptions

MHA_Error (p. 410)	if the resulting runtime configuration is NULL. This usually means
	that no push_config has occured.

```
5.263.3.2 template < class runtime_cfg_t > runtime_cfg_t * MHAPlugin::config_t < runtime_cfg_t >::last_config() [protected]
```

Receive the latest run time configuration.

This function stores the latest run time configuration into the protected class member variable 'cfg'. If no configuration exists, then an exception will be thrown. If no changes occured, then the value of 'cfg' will be untouched. This function may be called instead of poll_config.

The difference between poll_config and last_config is that poll_config marks previous configurations as ready for deletion, while this function does not. Therefore, memory usage of all runtime configurations will accumulate if only this function is called, but it enables safe access to previous runtime configurations.

Also, last config does not raise an Exception when the latest run time configuration is NULL.

```
5.263.3.3 template < class runtime_cfg_t > void MHAPlugin::config_t < runtime_cfg_t >::push_config ( runtime_cfg_t * ncfg ) [protected]
```

Push a new run time configuration into the configuration fifo.

This function adds a new run time configuration. The next time **poll_config** (p. 689) is called, this configuration will be available. Configurations which are not in use or are outdated will be removed.

This function should be only called from the *configuration* thread.

Parameters

ncfg pointer on a new configuration

Warning

The runtime configuration passed to this function will be removed by the internal garbage collector. Do not free manually.

- 5.263.3.4 template < class runtime_cfg_t > void MHAPlugin::config_t < runtime_cfg_t > ::cleanup_unused_cfg () [protected]
- 5.263.3.5 template < class runtime_cfg_t > void MHAPlugin::config_t < runtime_cfg_t >::remove_all_cfg() [private]
- 5.263.4 Member Data Documentation
- 5.263.4.1 template < class runtime_cfg_t > runtime_cfg_t * MHAPlugin::config_t < runtime_cfg_t >::cfg [protected]
- 5.263.4.2 template < class runtime_cfg_t > MHAPlugin::cfg_chain_t < runtime_cfg_t > * MHAPlugin::config_t < runtime_cfg_t > ::cfg_chain [private]


The documentation for this class was generated from the following file:

mha_plugin.hh

5.264 MHAPlugin::plugin_t < runtime_cfg_t > Class Template Reference

The template class for C++ openMHA plugins.

Inheritance diagram for MHAPlugin::plugin t< runtime cfg t >:

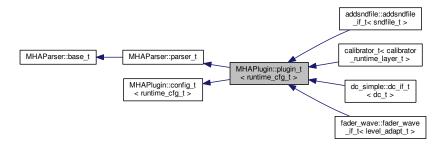

Public Member Functions

plugin_t (const std::string &, const algo_comm_t &)

Constructor of plugin template.

- virtual ~plugin t ()
- virtual void **prepare** (**mhaconfig_t** &)=0
- virtual void release ()
- void prepare_ (mhaconfig_t &)
- void release_()
- bool is_prepared () const

Flag, if the prepare method is successfully called (or currently evaluated)

mhaconfig_t input_cfg () const

Current input channel configuration.

mhaconfig_t output_cfg () const

Current output channel configuration.

Protected Attributes

· mhaconfig_t tftype

Member for storage of plugin interface configuration.

algo_comm_t ac

AC handle of the chain.

Private Attributes

- bool is prepared
- mhaconfig_t input_cfg_
- mhaconfig_t output_cfg_
- MHAParser::mhaconfig mon t mhaconfig in
- MHAParser::mhaconfig_mon_t mhaconfig_out

Additional Inherited Members

5.264.1 Detailed Description

```
template < class runtime_cfg_t > class MHAPlugin::plugin_t < runtime_cfg_t >
```

The template class for C++ openMHA plugins.

Template Parameters

runtime_, ←	run-time configuration.
cfg_t	

Todo Describe all services provided by this class, so that the reason why it is recommended that all plugins use this class as their base is evident. Document all relevant methods and fields.

This template class provides thread safe configuration handling and standard methods to be compatible to the C++ openMHA plugin wrapper macro **MHAPLUGIN_CALLBACKS** (p. 9).

The template parameter runtime_cfg_t should be the runtime configuration of the plugin.

See **MHAPlugin::config_t** (p. 686) for details on the thread safe communication update mechanism.

```
5.264.2 Constructor & Destructor Documentation
```

```
5.264.2.1 template < class runtime_cfg_t > MHAPlugin::plugin_t < runtime_cfg_t >::plugin_t ( const std::string & help, const algo_comm_t & iac )
```

Constructor of plugin template.

Parameters

help	Help comment to provide some general information about the plugin.
iac	AC space handle (will be stored into the member variable ac).

```
5.264.2.2 template < class runtime_cfg_t > MHAPlugin::plugin_t < runtime_cfg_t > :: \sim plugin_t ( ) [virtual]
```

5.264.3 Member Function Documentation

```
5.264.3.1 template < class runtime_cfg_t > virtual void MHAPlugin::plugin_t < runtime_cfg_t >::prepare (

mhaconfig_t & ) [pure virtual]
```

```
Implemented in bbcalib_interface_t (p. 215), calibrator_t (p. 218), addsndfile::addsndfile — _if_t (p. 174), testplugin::if_t (p. 899), analysispath_if_t (p. 206), adm_if_t (p. 189),
```

overlapadd::overlapadd_if_t (p. 823), frequency_translator_t (p. 316), noisePow← ProposedScale::interface_t (p. 819), ac2lsl::ac2lsl_t (p. 127), dc_simple::dc_if_← t (p. 250), dc::dc if t (p. 240), multibandcompressor::interface t (p. 811), plingploing ::if t (p. 829), combc if t (p. 230), coherence::cohflt if t (p. 224), plugin interface t (p. 836), example6_t (p. 303), smoothgains_bridge::overlapadd_if_t (p. 877), MHA← Plugin_Resampling::resampling_if_t (p. 697), shadowfilter_end::shadowfilter_end_t (p. 873), ac2wave if t (p. 141), noise t (p. 817), nlms t (p. 814), prediction error (p. 851), spec2wave if t (p. 885), mhachain::chain base t (p. 462), acsave::acsave t (p. 159), fader_wave::fader_wave_if_t (p. 307), doasym_feature_extraction (p. 270), rmslevel← _if_t (p. 856), shadowfilter_begin::shadowfilter_begin_t (p. 870), example3_t (p. 296), example4 t (p. 300), lpc bl predictor (p. 365), lpc burglattice (p. 370), steerbf (p. 891), delaysum::delaysum if t (p. 262), acPooling wave (p. 154), lpc (p. 362), fader if ← t (p. 305), acConcat_wave (p. 145), db_if_t (p. 236), acSteer (p. 166), acTransform_wave (p. 170), wave2spec_if_t (p. 914), gain::gain_if_t (p. 325), droptect_t (p. 274), example1_t (p. 290), sine_t (p. 875), doasym_classification (p. 266), example2_t (p. 293), wavrec_t (p. 918), fftfilterbank::fftfb_interface_t (p. 310), route::interface_t (p. 859), matrixmixer← ::matmix t (p. 377), altplugs t (p. 200), softclip t (p. 881), ac2osc t (p. 137), save \leftarrow spec_t (p. 865), save_wave_t (p. 867), acmon::acmon_t (p. 151), timoSmooth (p. 910), identity_t (p. 331), delay::interface_t (p. 260), cpuload_t (p. 234), ds_t (p. 277), and us_t (p. 912).

Reimplemented in **bbcalib interface t** (p. 215), **calibrator t** (p. 218), addsndfile ::addsndfile_if_t (p. 174), analysispath_if_t (p. 206), adm_if_t (p. 189), overlapadd ::overlapadd_if_t (p. 823), frequency_translator_t (p. 316), ac2lsl::ac2lsl_t (p. 128), dc_ simple::dc_if_t (p. 250), multibandcompressor::interface_t (p. 811), coherence::cohflt _if_t (p. 224), smoothgains_bridge::overlapadd_if_t (p. 877), MHAPlugin_Resampling← ::resampling if t (p. 697), ac2wave if t (p. 141), nlms t (p. 815), prediction error (p. 851), mhachain::chain_base_t (p. 462), acsave::acsave_t (p. 159), fader_wave← ::fader_wave_if_t (p. 307), doasym_feature_extraction (p. 271), example3_t (p. 297), example4 t (p. 300), lpc bl predictor (p. 366), lpc burglattice (p. 370), steerbf (p. 892), delaysum::delaysum_if_t (p. 262), acPooling_wave (p. 155), lpc (p. 363), acConcat_wave (p. 146), db_if_t (p. 236), acSteer (p. 167), acTransform_wave (p. 171), droptect_t (p. 274), gain::gain_if_t (p. 325), example2_t (p. 293), doasym_classification (p. 267), wavrec t (p. 918), fftfilterbank::fftfb interface t (p. 312), route::interface t (p. 859), ac2osc t (p. 138), example1_t (p. 290), altplugs_t (p. 201), acmon::acmon_t (p. 152), timoSmooth (p. 910), identity_t (p. 331), ds_t (p. 277), and us_t (p. 912).

```
\textbf{5.264.3.4} \quad \textbf{template} < \textbf{class runtime\_cfg\_t} > \textbf{void MHAPlugin::plugin\_t} < \textbf{runtime\_cfg\_t} > \textbf{::release\_(} \\ \textbf{)}
```

```
5.264.3.5 template < class runtime_cfg_t > bool MHAPlugin::plugin_t < runtime_cfg_t >::is_prepared ( ) const [inline]
```

Flag, if the prepare method is successfully called (or currently evaluated)

5.264.3.6 template < class runtime_cfg_t > mhaconfig_t MHAPlugin::plugin_t < runtime_cfg_t >::input_cfg() const [inline]

Current input channel configuration.

5.264.3.7 template < class runtime_cfg_t > mhaconfig_t MHAPlugin::plugin_t < runtime_cfg_t >::output_cfg() const [inline]

Current output channel configuration.

- 5.264.4 Member Data Documentation
- 5.264.4.1 template < class runtime_cfg_t > mhaconfig_t MHAPlugin::plugin_t < runtime_cfg_t > ::tftype [protected]

Member for storage of plugin interface configuration.

This member is defined for convenience of the developer. Typically, the actual contents of **mhaconfig_t** (p. 467) are stored in this member in the **prepare()** (p. 693) method.

Note

This member is likely to be removed in later versions, use **input_cfg()** (p. 695) and **output_cfg()** (p. 695) instead.

5.264.4.2 template < class runtime_cfg_t > algo_comm_t MHAPlugin::plugin_t < runtime_cfg_t >::ac [protected]

AC handle of the chain.

This variable is initialized in the constructor and can be used by derived plugins to access the AC space. Its contents should not be modified.


- 5.264.4.3 template < class runtime_cfg_t > bool MHAPlugin::plugin_t < runtime_cfg_t >::is_prepared_ [private]
- 5.264.4.4 template < class runtime_cfg_t > mhaconfig_t MHAPlugin::plugin_t < runtime_cfg_t >::input_cfg_ [private]
- 5.264.4.5 template < class runtime_cfg_t > mhaconfig_t MHAPlugin::plugin_t < runtime_cfg_t >::output_cfg_ [private]

The documentation for this class was generated from the following file:

mha_plugin.hh

5.265 MHAPlugin_Resampling::resampling_if_t Class Reference

Inheritance diagram for MHAPlugin_Resampling::resampling_if_t:

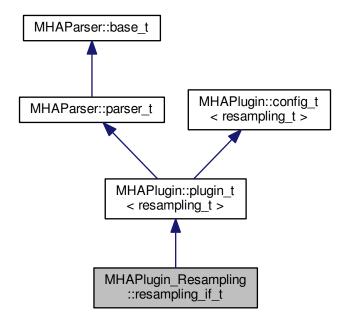

Public Member Functions

- resampling_if_t (algo_comm_t, std::string, std::string)
- mha_wave_t * process (mha_wave_t *)
- void prepare (mhaconfig_t &)
- void release ()

Private Attributes

- MHAParser::float_t srate
- MHAParser::int_t fragsize
- MHAParser::float_t nyquist_ratio
- MHAParser::float_t irslen_outer2inner
- MHAParser::float t irslen inner2outer
- MHAParser::mhapluginloader_t plugloader
- std::string chain
- std::string algo

```
Additional Inherited Members
```

```
5.265.1 Constructor & Destructor Documentation
5.265.1.1 MHAPlugin Resampling::resampling if t::resampling if t(
                      algo_comm_t iac,
                      std::string th,
                      std::string al )
5.265.2 Member Function Documentation
5.265.2.1 mha wave t * MHAPlugin_Resampling::resampling_if_t::process (
                      mha wave t * s)
5.265.2.2 void MHAPlugin Resampling::resampling if t::prepare (
                      mhaconfig t&conf ) [virtual]
Implements MHAPlugin::plugin_t < resampling_t > (p. 693).
5.265.2.3 void MHAPlugin_Resampling::resampling_if_t::release (
                     void ) [virtual]
Reimplemented from MHAPlugin::plugin t < resampling t > (p. 694).
5.265.3 Member Data Documentation
5.265.3.1 MHAParser::float_t MHAPlugin_Resampling::resampling_if_t::srate [private]
5.265.3.2 MHAParser::int_t MHAPlugin_Resampling::resampling_if_t::fragsize [private]
5.265.3.3 MHAParser::float_t MHAPlugin_Resampling::resampling_if_t::nyquist_ratio
          [private]
5.265.3.4 MHAParser::float_t MHAPlugin_Resampling::resampling_if_t::irslen_outer2inner
         [private]
5.265.3.5 MHAParser::float t MHAPlugin Resampling::resampling if t::irslen inner2outer
         [private]
5.265.3.6 MHAParser::mhapluginloader t MHAPlugin Resampling::resampling if t::plugloader
          [private]
5.265.3.7 std::string MHAPlugin_Resampling::resampling_if_t::chain [private]
5.265.3.8 std::string MHAPlugin_Resampling::resampling_if_t::algo [private]
The documentation for this class was generated from the following file:
```

© 2005-2018 HörTech gGmbH, Oldenburg

resampling.cpp

5.266 MHAPlugin_Resampling::resampling_t Class Reference

Public Member Functions

resampling_t (unsigned int outer_fragsize, float outer_srate, unsigned int inner_
 fragsize, float inner_scrate, unsigned int nch_in, float filter_length_in, unsigned int nch
 out, float filter_length_out, float nyquist_ratio, MHAParser::mhapluginloader_t &plug)

mha_wave_t * process (mha_wave_t *)

Private Attributes

- · unsigned outer_fragsize
- unsigned inner_fragsize
- float outer_srate
- float inner_srate
- unsigned nchannels_in
- unsigned nchannels_out
- MHAFilter::blockprocessing_polyphase_resampling_t outer2inner_resampling
- MHAFilter::blockprocessing_polyphase_resampling_t inner2outer_resampling
- MHAParser::mhapluginloader_t & plugloader
- MHASignal::waveform_t inner_signal
- MHASignal::waveform_t output_signal

```
5.266.1 Constructor & Destructor Documentation
```

```
5.266.2 Member Function Documentation
```

```
5.266.2.1 mha_wave_t * MHAPlugin_Resampling::resampling_t::process ( mha_wave_t * s )
```

5.266.3 Member Data Documentation

```
5.266.3.1
         unsigned MHAPlugin Resampling::resampling t::outer fragsize [private]
5.266.3.2
         unsigned MHAPlugin_Resampling::resampling_t::inner_fragsize [private]
5.266.3.3
         float MHAPlugin_Resampling::resampling_t::outer_srate [private]
5.266.3.4
         float MHAPlugin Resampling::resampling t::inner srate [private]
5.266.3.5
         unsigned MHAPlugin_Resampling::resampling_t::nchannels_in [private]
5.266.3.6 unsigned MHAPlugin Resampling ::resampling t::nchannels out [private]
5.266.3.7
         MHAFilter::blockprocessing_polyphase_resampling_t
         MHAPlugin_Resampling::resampling_t::outer2inner_resampling [private]
5.266.3.8
         MHAFilter::blockprocessing polyphase resampling t
         MHAPlugin_Resampling::resampling_t::inner2outer_resampling [private]
5.266.3.9 MHAParser::mhapluginloader t& MHAPlugin Resampling::resampling t::plugloader
         [private]
5.266.3.10 MHASignal::waveform_t MHAPlugin_Resampling::resampling_t::inner_signal
          [private]
5.266.3.11
          MHASignal::waveform t MHAPlugin_Resampling::resampling_t::output_signal
           [private]
```


The documentation for this class was generated from the following file:

· resampling.cpp

5.267 MHAPlugin_Split::domain_handler_t Class Reference

Handles domain-specific partial input and output signal.

Inheritance diagram for MHAPlugin_Split::domain_handler_t:

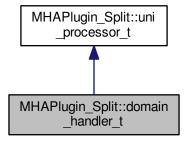

Public Member Functions

void set_input_domain (const mhaconfig_t &settings_in)

Set parameters of input signal.

void set_output_domain (const mhaconfig_t &settings_out)

Set output signal parameters.

void deallocate domains ()

Deallocate domain indicators and signal holders.

domain_handler_t (const mhaconfig_t &settings_in, const mhaconfig_t &settings_out,
 PluginLoader::fourway_processor_t *processor)

Construct a new domain handler once the domains and dimensions of input and output signal of one of the child plugins of split are known.

virtual ~domain_handler_t ()

Deallocation of signal holders.

unsigned put_signal (mha_wave_t *s_in, unsigned start_channel)

Store the relevant channels from the input signal for processing.

unsigned put_signal (mha_spec_t *s_in, unsigned start_channel)

Store the relevant channels from the input signal for processing.

• unsigned **get_signal** (**MHASignal::waveform_t** *s_out, unsigned start_channel)

Store all partial signal output channels in the combined waveform signal with the given channel offset.

• unsigned **get_signal** (MHASignal::spectrum_t *s_out, unsigned start_channel)

Store all partial signal output channels in the combined spectrum signal with the given channel offset.

void process ()

Call the processing method of the processor with configured input/output signal domains.

Public Attributes

MHASignal::waveform_t * wave_in

Partial wave input signal.

mha_wave_t ** wave_out

Partial wave output signal.

MHASignal::spectrum t * spec in

Partial spec input signal.

mha_spec_t ** spec_out

Partial spec input signal.

PluginLoader::fourway_processor_t * processor_

The domain-specific signal processing methods are implemented here.

Private Member Functions

domain handler t (const domain handler t &)

Disallow copy constructor.

domain handler t & operator= (const domain handler t &)

Disallow assignment operator.

5.267.1 Detailed Description

Handles domain-specific partial input and output signal.

```
5.267.2 Constructor & Destructor Documentation
```

Disallow copy constructor.

Construct a new domain handler once the domains and dimensions of input and output signal of one of the child plugins of split are known.

```
5.267.2.3 virtual MHAPlugin_Split::domain_handler_t::~domain_handler_t ( ) [inline], [virtual]
```

Deallocation of signal holders.

5.267.3 Member Function Documentation

Disallow assignment operator.

Set parameters of input signal.

Parameters

settings⇔	domain and dimensions of partial input signal
in	

Set output signal parameters.

Parameters

settings_out domain and dimensions of partial output signa	
--	--

```
5.267.3.4 void MHAPlugin_Split::domain_handler_t::deallocate_domains() [inline]
```

Deallocate domain indicators and signal holders.

Store the relevant channels from the input signal for processing.

The number of channels to store is taken from the dimensions of the partial input signal holder **wave_in** (p. 704).

Parameters

s_in	The combined waveform input signal.
start_channel	The index (0-based) of the first channel in s_in to be copied to the partial input signal.

Returns

The number of channels that were copied from the input signal

Store the relevant channels from the input signal for processing.

The number of channels to store is taken from the dimensions of the partial input signal holder **spec_in** (p. 704).

Parameters

s_in	The combined spectrum input signal.
start_channel	The index (0-based) of the first channel in s_in to be copied to the partial
	input signal.

Returns

The number of channels that were copied from the input signal

Store all partial signal output channels in the combined waveform signal with the given channel offset.

All channels present in **wave_out** (p. 704) will be copied. Caller may use (*wave_out)->num—channels to check the number of channels in advance.

Parameters

s_out	The combined waveform output signal.
start_channel	The channel offset (0-based) in s_out.

Returns

The number of channels that were copied to the output signal

Store all partial signal output channels in the combined spectrum signal with the given channel offset.

All channels present in **spec_out** (p. 704) will be copied. Caller may use (*spec_out)->numchannels to check the number of channels in advance.

Parameters

s_out	The combined spectrum output signal.
start_channel	The channel offset (0-based) in s_out.

Returns

The number of channels that were copied to the output signal

Call the processing method of the processor with configured input/output signal domains.

The input signal has to be stored using **put_signal** (p. 702) before this method may be called. Implements **MHAPlugin_Split::uni_processor_t** (p. 723).

5.267.4 Member Data Documentation

5.267.4.1 MHASignal::waveform_t* MHAPlugin_Split::domain_handler_t::wave_in

Partial wave input signal.

5.267.4.2 mha_wave_t** MHAPlugin_Split::domain_handler_t::wave_out

Partial wave output signal.

5.267.4.3 MHASignal::spectrum_t* MHAPlugin_Split::domain_handler_t::spec_in

Partial spec input signal.

5.267.4.4 mha_spec_t** MHAPlugin_Split::domain_handler_t::spec_out

Partial spec input signal.

5.267.4.5 PluginLoader::fourway_processor_t* MHAPlugin_Split::domain_handler_t::processor


The domain-specific signal processing methods are implemented here.

The documentation for this class was generated from the following file:

split.cpp

5.268 MHAPlugin_Split::dummy_threads_t Class Reference

Dummy specification of a thread platform: This class implements everything in a single thread. Inheritance diagram for MHAPlugin_Split::dummy_threads_t:

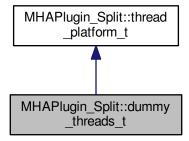

Public Member Functions

- void kick_thread ()
 perform signal processing immediately (no multiple threads in this dummy class)
- void catch_thread ()

 No implementation needed: Processing has been completed during ummy_threads_t::kick_←
- dummy_threads_t (uni_processor_t *proc, const std::string &thread_scheduler, int thread_priority)

Constructor.

Additional Inherited Members

5.268.1 Detailed Description

Dummy specification of a thread platform: This class implements everything in a single thread.

5.268.2 Constructor & Destructor Documentation

Constructor.

Parameters

proc	Pointer to the associated plugin loader
thread_scheduler	Unused in dummy thread platform
thread_priority	Unused in dummy thread platform

5.268.3 Member Function Documentation

```
5.268.3.1 void MHAPlugin_Split::dummy_threads_t::kick_thread( ) [inline], [virtual]
```

perform signal processing immediately (no multiple threads in this dummy class)

Implements MHAPlugin_Split::thread_platform_t (p. 721).

5.268.3.2 void MHAPlugin_Split::dummy_threads_t::catch_thread() [inline], [virtual]

No implementation needed: Processing has been completed during ummy_threads_t::kick_← thread.

Implements MHAPlugin_Split::thread_platform_t (p. 721).


The documentation for this class was generated from the following file:

split.cpp

5.269 MHAPlugin_Split::posix_threads_t Class Reference

Posix threads specification of thread platform.

Inheritance diagram for MHAPlugin_Split::posix_threads_t:

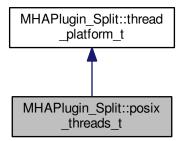

Public Member Functions

void kick_thread ()

Start signal processing in separate thread.

void catch thread ()

Wait for signal processing to finish.

 posix_threads_t (uni_processor_t *proc, const std::string &thread_scheduler, int thread_priority)

Constructor.

~posix_threads_t ()

Terminate thread.

• void main ()

Thread main loop. Wait for process/termination trigger, then act.

Static Public Member Functions

static void * thread_start (void *thr)

Thread start function.

- static std::string current_thread_scheduler ()
- static int current_thread_priority ()

Private Attributes

• pthread_mutex_t mutex

The mutex.

pthread_cond_t kick_condition

The condition for signalling the kicking and termination.

pthread_cond_t catch_condition

The condition for signalling the processing is finished.

pthread_attr_t attr

Thread attributes.

struct sched_param priority

Thread scheduling priority.

- · int scheduler
- pthread_t thread

The thread object.

bool kicked

A flag that is set to true by kick_thread and to false by the thread after it has woken up from the kicking.

• bool processing_done

A flag that is set to true by the thread when it returns from processing and to false by catch_← thread after it has waited for that return.

bool termination_request

Set to true by the destructor.

Additional Inherited Members

5.269.1 Detailed Description

Posix threads specification of thread platform.

5.269.2 Constructor & Destructor Documentation

Constructor.

Parameters

proc	Pointer to the associated signal processor instance
thread_scheduler	A string describing the posix thread scheduler. Possible values: "SCHED_OTHER", "SCHED_RR", "SCHED_FIFO".
thread_priority	The scheduling priority of the new thread.

```
5.269.2.2 MHAPlugin_Split::posix_threads_t::~posix_threads_t( ) [inline]

Terminate thread.
```

5.269.3 Member Function Documentation

```
5.269.3.1 void MHAPlugin_Split::posix_threads_t::kick_thread( ) [inline], [virtual]
```

Start signal processing in separate thread.

Implements MHAPlugin_Split::thread_platform_t (p. 721).

```
5.269.3.2 void MHAPlugin_Split::posix_threads_t::catch_thread( ) [inline], [virtual]
```

Wait for signal processing to finish.

```
Implements MHAPlugin_Split::thread_platform_t (p. 721).
```

```
5.269.3.3 static void* MHAPlugin_Split::posix_threads_t::thread_start ( void * thr ) [inline], [static]
```

Thread start function.

```
5.269.3.4 void MHAPlugin_Split::posix_threads_t::main() [inline]
```

Thread main loop. Wait for process/termination trigger, then act.

```
5.269.3.5 static std::string MHAPlugin_Split::posix_threads_t::current_thread_scheduler( ) [inline], [static]
```

```
5.269.3.6 static int MHAPlugin_Split::posix_threads_t::current_thread_priority( ) [inline], [static]
```

5.269.4 Member Data Documentation

5.269.4.1 pthread_mutex_t MHAPlugin_Split::posix_threads_t::mutex [private]

The mutex.

5.269.4.2 pthread_cond_t MHAPlugin_Split::posix_threads_t::kick_condition [private]

The condition for signalling the kicking and termination.

5.269.4.3 pthread_cond_t MHAPlugin_Split::posix_threads_t::catch_condition [private]

The condition for signalling the processing is finished.

5.269.4.4 pthread_attr_t MHAPlugin_Split::posix_threads_t::attr [private]

Thread attributes.

5.269.4.5 struct sched_param MHAPlugin_Split::posix_threads_t::priority [private]

Thread scheduling priority.

5.269.4.6 int MHAPlugin_Split::posix_threads_t::scheduler [private]

5.269.4.7 pthread_t MHAPlugin_Split::posix_threads_t::thread [private]

The thread object.

5.269.4.8 bool MHAPlugin_Split::posix_threads_t::kicked [private]

A flag that is set to true by kick_thread and to false by the thread after it has woken up from the kicking.

5.269.4.9 bool MHAPlugin_Split::posix_threads_t::processing_done [private]

A flag that is set to true by the thread when it returns from processing and to false by catch_ thread after it has waited for that return.

5.269.4.10 bool MHAPlugin_Split::posix_threads_t::termination_request [private]

Set to true by the destructor.


The documentation for this class was generated from the following file:

split.cpp

5.270 MHAPlugin_Split::split_t Class Reference

Implements split plugin.

Inheritance diagram for MHAPlugin_Split::split_t:

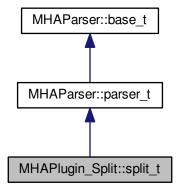

Public Member Functions

- **split_t** (**algo_comm_t** iac, const std::string &chain_name, const std::string &algo_name) *Plugin constructor.*
- ∼split_t ()

Plugin destructor. Unloads nested plugins.

void prepare_ (mhaconfig_t &)

Check signal parameters, prepare chains, and allocate output signal holders.

• void release_()

Delete output signal holder and release chains.

template<class SigTypeIn , class SigTypeOut > void process (SigTypeIn *, SigTypeOut **)

Let the parallel plugins process channel groups of the input signal.

Private Member Functions

• void update ()

Load plugins in response to a value change in the algos variable.

void clear_chains ()

Unload the plugins.

- mha_wave_t * copy_output_wave ()
- mha_spec_t * copy_output_spec ()

template < class SigType >

void trigger_processing (SigType *s_in)

Split the argument input signal to groups of channels for the plugins and initiate signal processing.

template<class SigType >

void collect_result (SigType *s_out)

Combine the output signal from the plugins.

MHASignal::waveform_t * signal_out (mha_wave_t **)

Waveform domain output signal structure accessor.

MHASignal::spectrum_t * signal_out (mha_spec_t **)

Spectrum domain output signal structure. Parameter is ignored.

Private Attributes

MHAEvents::patchbay_t< split_t > patchbay

Reload plugins when the algos variable changes.

MHAParser::vstring_t algos

Vector of plugins to load in parallel.

• MHAParser::vint t channels

Number of channels to route through each plugin.

MHAParser::kw_t thread_platform

Thread platform chooser.

MHAParser::kw_t worker_thread_scheduler

Scheduler used for worker threads.

MHAParser::int_t worker_thread_priority

Priority of worker threads.

MHAParser::string_mon_t framework_thread_scheduler

Scheduler of the signal processing thread.

MHAParser::int_mon_t framework_thread_priority

Priority of signal processing thread.

MHAParser::bool t delay

Switch to activate parallel processing of plugins at the cost of one block of additional delay.

std::vector< splitted_part_t * > chains

Interfaces to parallel plugins.

MHASignal::waveform_t * wave_out

Combined output waveforms structure.

MHASignal::spectrum_t * spec_out

Combined output spectra structure.

Additional Inherited Members

5.270.1 Detailed Description

Implements split plugin.

An instance of class **split_t** (p. 710) implements the split plugin functionality: The audio channels are splitted and groups of audio channels are processed by different plugins in parallel.

```
5.270.2 Constructor & Destructor Documentation
5.270.2.1 MHAPlugin_Split::split_t::split_t (
                       algo_comm_t iac,
                       const std::string & chain name.
                       const std::string & algo name )
Plugin constructor.
5.270.2.2 MHAPlugin_Split::split_t::~split_t()
Plugin destructor. Unloads nested plugins.
5.270.3 Member Function Documentation
5.270.3.1 void MHAPlugin_Split::split_t::prepare_(
                       mhaconfig t & signal_parameters )
Check signal parameters, prepare chains, and allocate output signal holders.
5.270.3.2 void MHAPlugin_Split::split_t::release_( )
Delete output signal holder and release chains.
5.270.3.3 template < class SigTypeIn , class SigTypeOut > void MHAPlugin_Split::split_t::process (
                       SigTypeIn * s_in,
                       SigTypeOut ** s out )
Let the parallel plugins process channel groups of the input signal.
5.270.3.4 void MHAPlugin Split::split t::update( ) [private]
Load plugins in response to a value change in the algos variable.
5.270.3.5 void MHAPlugin_Split::split_t::clear_chains( ) [private]
Unload the plugins.
5.270.3.6 mha wave t* MHAPlugin Split::split t::copy output wave( ) [private]
5.270.3.7 mha spec t* MHAPlugin_Split::split_t::copy_output_spec( ) [private]
5.270.3.8 template < class SigType > void MHAPlugin_Split::split_t::trigger_processing (
                       SigType * s_in ) [private]
```

Split the argument input signal to groups of channels for the plugins and initiate signal processing.

Combine the output signal from the plugins.

Waveform domain output signal structure accessor.

Parameter is only for domain disambiguation and is ignored.

Spectrum domain output signal structure. Parameter is ignored.

5.270.4 Member Data Documentation

5.270.4.1 MHAEvents::patchbay_t<split_t> MHAPlugin_Split::split_t::patchbay [private]

Reload plugins when the algos variable changes.

5.270.4.2 MHAParser::vstring_t MHAPlugin_Split::split_t::algos [private]

Vector of plugins to load in parallel.

5.270.4.3 MHAParser::vint_t MHAPlugin_Split::split_t::channels [private]

Number of channels to route through each plugin.

5.270.4.4 MHAParser::kw t MHAPlugin_Split::split_t::thread_platform [private]

Thread platform chooser.

5.270.4.5 MHAParser::kw_t MHAPlugin_Split::split_t::worker_thread_scheduler [private]

Scheduler used for worker threads.

5.270.4.6 MHAParser::int_t MHAPlugin_Split::split_t::worker_thread_priority [private]

Priority of worker threads.

5.270.4.7 MHAParser::string_mon_t MHAPlugin_Split::split_t::framework_thread_scheduler [private]

Scheduler of the signal processing thread.

5.270.4.8 MHAParser::int_mon_t MHAPlugin_Split::split_t::framework_thread_priority [private]

Priority of signal processing thread.

5.270.4.9 MHAParser::bool t MHAPlugin_Split::split_t::delay [private]

Switch to activate parallel processing of plugins at the cost of one block of additional delay.

5.270.4.10 std::vector<splitted_part_t*> MHAPlugin_Split::split_t::chains [private]

Interfaces to parallel plugins.

5.270.4.11 MHASignal::waveform t* MHAPlugin_Split::split_t::wave_out [private]

Combined output waveforms structure.

5.270.4.12 MHASignal::spectrum t* MHAPlugin Split::split t::spec out [private]

Combined output spectra structure.


The documentation for this class was generated from the following file:

· split.cpp

5.271 MHAPlugin_Split::splitted_part_t Class Reference

The **splitted_part_t** (p. 714) instance manages the plugin that performs processing on the reduced set of channels.

Inheritance diagram for MHAPlugin Split::splitted part t:

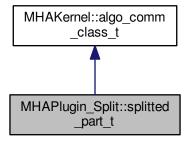

Public Member Functions

• splitted_part_t (const std::string &plugname, MHAParser::parser_t *parent)

Load the plugin for this partial signal path.

splitted_part_t (PluginLoader::fourway_processor_t *plugin)

Create the handler for the partial signal.

~splitted_part_t () throw ()

Destructor. Deletes the plugin plug (p. 718).

 void prepare (mhaconfig_t &signal_parameters, const std::string &thread_platform, const std::string &thread_scheduler, int thread_priority)

Delegates the prepare method to the plugin and allocates a suitable **MHAPlugin_Split**← ::domain_handler_t (p. 699) instance.

• void release ()

Delegates the release method to the plugin and deletes the **MHAPlugin_Split::domain_**← **handler_t** (p. 699) instance.

• std::string parse (const std::string &str)

Delegates parser incovation to plugin.

template<class SigType >

unsigned **trigger_processing** (SigType *s_in, unsigned start_channel)

The domain handler copies the input signal channels.

template<class SigType >

unsigned **collect_result** (SigType *s_out, unsigned start_channel)

Wait until processing is finished, then copy the output data.

Private Member Functions

splitted_part_t (const splitted_part_t &)

Disallow copy constructor.

splitted_part_t & operator= (const splitted_part_t &)

Disallow assignment operator.

Private Attributes

• PluginLoader::fourway_processor_t * plug

The plugin that performs the signal processing on the prepared channels.

domain_handler_t * domain

The domain specific signal handler, allocated from prepare when input and output domains and signal parameters are known.

thread platform t * thread

The platform-dependent thread synchronization implementation.

Additional Inherited Members

5.271.1 Detailed Description

The **splitted_part_t** (p. 714) instance manages the plugin that performs processing on the reduced set of channels.

The signal is split by channels by this instance, but the signal is combined again by the calling class.

5.271.2 Constructor & Destructor Documentation

Disallow copy constructor.

Load the plugin for this partial signal path.

Loads the MHA plugin for a signal path of these audio channels.

Parameters

plugname	ne The name of the MHA plugin, optionally followed by a colon and the algorith	
	name.	
parent	The parser node where the configuration of the new plugin is inserted. The plugin's parser name is the configured name (colon syntax).	

Create the handler for the partial signal.

The plugin is loaded by the caller, but it will be deleted by the destructor of this class. This constructor exists solely for testing purposes.

Parameters

plugin	The plugin used for processing the signal. The new splitted_part_t (p. 716)
	instance will take ownership of this instance and release it in the destructor.

```
5.271.2.4 MHAPlugin_Split::splitted_part_t::~splitted_part_t ( ) throw )
```

Destructor. Deletes the plugin **plug** (p. 718).

5.271.3 Member Function Documentation

Disallow assignment operator.

Delegates the prepare method to the plugin and allocates a suitable **MHAPlugin_Split**—::domain_handler_t (p. 699) instance.

Prepare the loaded plugin.

Plugin preparation.

Parameters

signal_parameters	The signal description parameters for this path.
thread_platform	The name of the thread platform to use. Possible values: "posix", "win32", "dummy".
thread_scheduler	The name of the scheduler to use. Posix threads support "SCHED_OTHER", "SCHED_RR", "SCHED_FIFO". The other thread platforms do not support different thread schedulers. This value is not used for platforms other than "posix".
thread_priority	The new thread priority. Interpretation and permitted range depend on the thread platform and possibly on the scheduler.

```
5.271.3.3 void MHAPlugin_Split::splitted_part_t::release ( void )
```

Delegates the release method to the plugin and deletes the **MHAPlugin_Split::domain_** \leftarrow **handler_t** (p. 699) instance.

Release the loaded plugin.

Plugin release.

```
5.271.3.4 std::string MHAPlugin_Split::splitted_part_t::parse ( const std::string & str ) [inline]
```

Delegates parser incovation to plugin.

```
5.271.3.5 template < class SigType > unsigned MHAPlugin_Split::splitted_part_t::trigger_processing ( SigType * s_in, unsigned start\_channel ) [inline]
```

The domain handler copies the input signal channels.

Then, processing is initiated.

Parameters

s_in	The combined input signal.
start_channel	The index (0-based) of the first channel in s_in to be copied to the partial input signal.

Returns

The number of channels that were copied from the input signal

Wait until processing is finished, then copy the output data.

Parameters

s_out	The combined waveform output signal.
start_channel	The channel offset (0-based) in s_out.

Returns

The number of channels that were copied to the output signal

5.271.4 Member Data Documentation

5.271.4.1 PluginLoader::fourway_processor_t* MHAPlugin_Split::splitted_part_t::plug [private]

The plugin that performs the signal processing on the prepared channels.

5.271.4.2 domain_handler_t* MHAPlugin_Split::splitted_part_t::domain [private]

The domain specific signal handler, allocated from prepare when input and output domains and signal parameters are known.

5.271.4.3 thread_platform_t* MHAPlugin_Split::splitted_part_t::thread [private]

The platform-dependent thread synchronization implementation.


The documentation for this class was generated from the following file:

split.cpp

5.272 MHAPlugin_Split::thread_platform_t Class Reference

Basic interface for encapsulating thread creation, thread priority setting, and synchronization on any threading platform (i.e., pthreads or win32threads).

Inheritance diagram for MHAPlugin_Split::thread_platform_t:

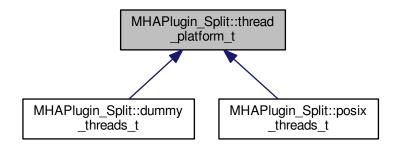

Public Member Functions

thread_platform_t (uni_processor_t *proc)

Constructor.

virtual ~thread_platform_t ()

Make derived classes destructable via pointer to this base class.

virtual void kick_thread ()=0

Derived classes notify their processing thread that it should call processor->process().

• virtual void catch_thread ()=0

Derived classes wait for their signal processing thread to return from the call to part->process().

Protected Attributes

uni_processor_t * processor

A pointer to the plugin loader that processes the sound data in the channels for which this thread was created.

Private Member Functions

- thread_platform_t (const thread_platform_t &)
 Disallow copy constructor.
- thread_platform_t & operator= (const thread_platform_t &)

Disallow assignment operator.

5.272.1 Detailed Description

Basic interface for encapsulating thread creation, thread priority setting, and synchronization on any threading platform (i.e., pthreads or win32threads).

Derived classes specialize in the actual thread platform.

```
5.272.2 Constructor & Destructor Documentation
```

Disallow copy constructor.

Constructor.

Derived classes create the thread in the constructor.

Parameters

proc Pointer to the associated plugin loader. This plugin loader has to live at least as long as this instance. This instance does not take possession of the plugin loader. In production code, this thread platform and the plugin loader are both created and destroyed by the MHAPlugin_Split::splitted_part_t (p. 714) instance.

```
5.272.2.3 virtual MHAPlugin_Split::thread_platform_t::~thread_platform_t ( ) [inline], [virtual]
```

Make derived classes destructable via pointer to this base class.

Derived classes' destructors notify the thread that it should terminate itself, and wait for the termination to occur.

5.272.3 Member Function Documentation

Disallow assignment operator.

```
5.272.3.2 virtual void MHAPlugin_Split::thread_platform_t::kick_thread() [pure virtual]
```

Derived classes notify their processing thread that it should call processor->process().

Implemented in MHAPlugin_Split::posix_threads_t (p. 708), and MHAPlugin_Split ::dummy_threads_t (p. 705).

```
5.272.3.3 virtual void MHAPlugin Split::thread platform t::catch thread ( ) [pure virtual]
```

Derived classes wait for their signal processing thread to return from the call to part->process().

Implemented in MHAPlugin_Split::posix_threads_t (p. 708), and MHAPlugin_Split \leftarrow ::dummy threads t (p. 706).

5.272.4 Member Data Documentation

```
5.272.4.1 uni processor t* MHAPlugin_Split::thread_platform_t::processor [protected]
```

A pointer to the plugin loader that processes the sound data in the channels for which this thread was created.

Using the **MHAPlugin_Split::uni_processor_t** (p. 722) interface instead of the mhaplugin-loader class directly for testability (no need to load real plugins for testing the thread platform).


The documentation for this class was generated from the following file:

split.cpp

5.273 MHAPlugin_Split::uni_processor_t Class Reference

An interface to a class that sports a process method with no parameters and no return value.

Inheritance diagram for MHAPlugin_Split::uni_processor_t:

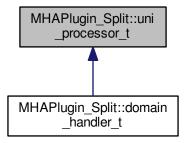

Public Member Functions

• virtual void process ()=0

This method uses some input signal, performs processing and stores the output signal somewhere.

virtual ~uni_processor_t ()

Classes containing virtual methods need virtual destructors.

5.273.1 Detailed Description

An interface to a class that sports a process method with no parameters and no return value.

No signal transfer occurs through this interface, because the signal transfer is performed in another thread than the processing.

5.273.2 Constructor & Destructor Documentation

5.273.2.1 virtual MHAPlugin_Split::uni_processor_t::~uni_processor_t() [inline], [virtual]

Classes containing virtual methods need virtual destructors.

5.273.3 Member Function Documentation

5.273.3.1 virtual void MHAPlugin_Split::uni_processor_t::process() [pure virtual]

This method uses some input signal, performs processing and stores the output signal somewhere.

This method also has to dispatch the process call based on the configured domains.

Signal transfer and domain configuration have to be done in derived class in different methods.

Implemented in MHAPlugin_Split::domain_handler_t (p. 703).


The documentation for this class was generated from the following file:

split.cpp

5.274 mhaserver_t Class Reference

MHA Framework listening on TCP port for commands.

Inheritance diagram for mhaserver_t:

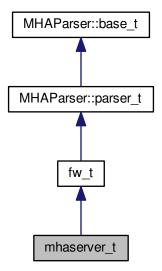

Public Member Functions

- mhaserver_t (const std::string &ao, const std::string &af, const std::string &lf)
- ∼mhaserver_t ()
- virtual std::string received_group (const std::string &line)

A line of text was received from network client.

virtual void acceptor_started (int status)

Notification: "TCP port is open".

virtual void set_announce_port (unsigned short announce_port)

If set to nonzero, the spawning process has asked to be notified of the TCP port used by this process.

• void **logstring** (const std::string &)

Log a message to log file.

• int **run** (unsigned short **port**, const std::string &_interface)

Accept network connections and act on commands.

Public Attributes

MHAParser::int_t port

Private Attributes

- MHA TCP::Server * tcpserver
- std::string ack_ok
- std::string ack_fail
- std::string logfile
- unsigned short announce_port
- MHAParser::int mon t pid mon

Additional Inherited Members

5.274.1 Detailed Description

MHA Framework listening on TCP port for commands.

5.274.2 Constructor & Destructor Documentation

Parameters

ao Acknowledgement string at end of successful command r		Acknowledgement string at end of successful command responses	
Ī	af	Achknoledgement string at end of failed command responses	
If File system path of file to use as log file. MHA appends.			

const std::string & line) [virtual]

```
5.274.3 Member Function Documentation
5.274.3.1 std::string mhaserver_t::received_group (
```

5.274.2.2 mhaserver t:: \sim mhaserver t ()

A line of text was received from network client.

Notification: "TCP port is open".

If set to nonzero, the spawning process has asked to be notified of the TCP port used by this process.

```
5.274.3.4 void mhaserver_t::logstring (
const std::string & s ) [inline]
```

Log a message to log file.

Accept network connections and act on commands.

Calls **acceptor_started()** (p. 725) when the TCP port is opened. Calls received_group for every line received.

Returns

exit code that can be used as process exit code

5.274.4 Member Data Documentation

```
5.274.4.1 MHA_TCP::Server* mhaserver_t::tcpserver [private]
5.274.4.2 std::string mhaserver_t::ack_ok [private]
5.274.4.3 std::string mhaserver_t::ack_fail [private]
5.274.4.4 std::string mhaserver_t::logfile [private]
5.274.4.5 unsigned short mhaserver_t::announce_port [private]
5.274.4.6 MHAParser::int_mon_t mhaserver_t::pid_mon [private]
```

5.274.4.7 MHAParser::int_t mhaserver_t::port


The documentation for this class was generated from the following file:

· mhamain.cpp

5.275 MHASignal::async_rmslevel_t Class Reference

Class for asynchronous level metering.

Inheritance diagram for MHASignal::async_rmslevel_t:

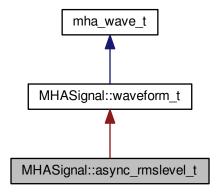

Public Member Functions

• async_rmslevel_t (unsigned int frames, unsigned int channels)

Constructor for level metering class.

• std::vector< float > rmslevel () const

Read-only function for querying the current RMS level.

• std::vector< float > peaklevel () const

Read-only function for querying the current peak level.

void process (mha_wave_t *s)

Function to store a chunk of audio in the level meter.

Private Attributes

- unsigned int pos
- unsigned int filled

Additional Inherited Members

5.275.1 Detailed Description

Class for asynchronous level metering.

5.275.2 Constructor & Destructor Documentation

5.275.2.1 MHASignal::async_rmslevel_t:(async_rmslevel_t (unsigned int *frames,* unsigned int *channels*)

Constructor for level metering class.

Allocate memory for metering. The RMS integration time corresponds to the number of frames in the buffer.

Parameters

frames	Number of frames to integrate.
channels	Number of channels used for level-metering.

5.275.3 Member Function Documentation

```
5.275.3.1 std::vector< float > MHASignal::async_rmslevel_t::rmslevel ( ) const
```

Read-only function for querying the current RMS level.

Returns

Vector of floats, one value for each channel, containing the RMS level in dB (SPL if calibrated properly).

```
5.275.3.2 std::vector< float > MHASignal::async rmslevel t::peaklevel ( ) const
```

Read-only function for querying the current peak level.

Returns

Vector of floats, one value for each channel, containing the peak level in dB (SPL if calibrated properly).

```
5.275.3.3 void MHASignal::async_rmslevel_t::process ( mha_wave_t * s )
```

Function to store a chunk of audio in the level meter.

Parameters

s | Audio chunk (same number of channels required as given in the constructor).

```
5.275.4 Member Data Documentation
```

```
5.275.4.1 unsigned int MHASignal::async_rmslevel_t::pos [private]
```

5.275.4.2 unsigned int MHASignal::async_rmslevel_t::filled [private]

The documentation for this class was generated from the following files:

- mha_signal.hh
- · mha_signal.cpp

5.276 MHASignal::delay_spec_t Class Reference

Public Member Functions

- delay_spec_t (unsigned int delay, unsigned int frames, unsigned int channels)
- ~delay spec t ()
- mha_spec_t * process (mha_spec_t *)

Private Attributes


- · unsigned int delay
- MHASignal::spectrum_t ** buffer
- unsigned int pos
- 5.276.1 Constructor & Destructor Documentation
- 5.276.1.2 MHASignal::delay_spec_t::~delay_spec_t()
- 5.276.2 Member Function Documentation
- 5.276.2.1 mha_spec_t * MHASignal::delay_spec_t::process (mha_spec_t * s)
- 5.276.3 Member Data Documentation
- **5.276.3.1 unsigned int MHASignal::delay_spec_t::delay** [private]
- **5.276.3.2** MHASignal::spectrum_t** MHASignal::delay_spec_t::buffer [private]
- **5.276.3.3 unsigned int MHASignal::delay_spec_t::pos** [private]

The documentation for this class was generated from the following files:

- · mha_signal.hh
- · mha_signal.cpp
- 5.277 MHASignal::delay_t Class Reference

Class to realize a simple delay of waveform streams.

Inheritance diagram for MHASignal::delay_t:

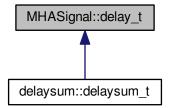

Public Member Functions

- delay_t (std::vector< int > delays, unsigned int channels)
 Constructor.
- mha_wave_t * process (mha_wave_t *s)

 Processing method.
- ~delay_t ()
- std::string inspect () const

Private Attributes

- unsigned int channels
- unsigned int * delays
- unsigned int * pos
- mha_real_t ** buffer

5.277.1 Detailed Description

Class to realize a simple delay of waveform streams.

5.277.2 Constructor & Destructor Documentation

Constructor.

Parameters

delays	Vector of delays, one entry for each channel.
channels	Number of channels expected.

```
5.277.2.2 MHASignal::delay_t::~delay_t()
```

5.277.3 Member Function Documentation

Processing method.

Parameters

s | Input waveform fragment, with number of channels provided in constructor.

Returns

Output waveform fragment.

```
5.277.3.2 std::string MHASignal::delay_t::inspect ( ) const [inline]
5.277.4 Member Data Documentation
```

```
5.277.4.1 unsigned int MHASignal::delay_t::channels [private]
```

```
5.277.4.2 unsigned int* MHASignal::delay_t::delays [private]
```

```
5.277.4.3 unsigned int* MHASignal::delay_t::pos [private]
```

The documentation for this class was generated from the following files:

- · mha_signal.hh
- · mha_signal.cpp

5.278 MHASignal::delay_wave_t Class Reference

Delayline containing wave fragments.

Public Member Functions

- delay_wave_t (unsigned int delay, unsigned int frames, unsigned int channels)
- ~delay_wave_t ()
- mha_wave_t * process (mha_wave_t *)

Private Attributes

- unsigned int delay
- MHASignal::waveform_t ** buffer
- unsigned int pos

5.278.1 Detailed Description

Delayline containing wave fragments.

The delayline contains waveform fragments. The delay can be configured in integer fragments (sample delay or sub-sample delay is not possible).

```
5.278.2 Constructor & Destructor Documentation
```

- 5.278.2.2 MHASignal::delay wave t::~delay wave t()
- 5.278.3 Member Function Documentation
- 5.278.4 Member Data Documentation
- **5.278.4.1 unsigned int MHASignal::delay_wave_t::delay** [private]
- **5.278.4.2** MHASignal::waveform_t** MHASignal::delay_wave_t::buffer [private]
- **5.278.4.3 unsigned int MHASignal::delay_wave_t::pos** [private]


The documentation for this class was generated from the following files:

- · mha signal.hh
- mha_signal.cpp

5.279 MHASignal::doublebuffer_t Class Reference

Double-buffering class.

Inheritance diagram for MHASignal::doublebuffer t:

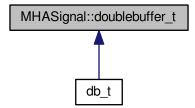

Public Member Functions

 doublebuffer_t (unsigned int nchannels_in, unsigned int nchannels_out, unsigned int outer_fragsize, unsigned int inner_fragsize)

Constructor of double buffer.

- virtual ~doublebuffer t ()
- mha wave t * outer process (mha wave t *s)

Method to pass audio fragments into the inner layer.

Protected Member Functions

• virtual **mha_wave_t** * **inner_process** (**mha_wave_t** *s)=0 *Method to realize inner processing callback.*

Private Member Functions

• unsigned int **min** (unsigned int a, unsigned int b)

Private Attributes

- waveform_t outer_out
- mha_wave_t this_outer_out
- waveform_t inner_in
- waveform_t inner_out
- unsigned int k_inner
- unsigned int k_outer
- unsigned int **ch**

5.279.1 Detailed Description

Double-buffering class.

This class has two layers: The outer layer, with an outer fragment size, and an inner layer, with its own fragment size. Data is passed into the inner layer through the doublebuffer_t::outr_process() callback. The pure virtual method **doublebuffer_t::inner_process()** (p. 734) is called whenever enough data is available.

5.279.2 Constructor & Destructor Documentation

Constructor of double buffer.

Parameters

nchannels_in	Number of channels at the input (both layers).
nchannels_out	Number of channels at the output (both layers).
outer_fragsize	Fragment size of the outer layer (e.g., hardware fragment size)
inner_fragsize	Fragment size of the inner layer (e.g., software fragment size)

```
5.279.2.2 MHASignal::doublebuffer_t::~doublebuffer_t() [virtual]
```

5.279.3 Member Function Documentation

Method to pass audio fragments into the inner layer.

Parameters

s Pointer to input waveform fragment.

Returns

Pointer to output waveform fragment.

Method to realize inner processing callback.

To be overwritten by derived classes.

Parameters

s Pointer to input waveform fragment.

Returns

Pointer to output waveform fragment.

Implemented in **db_t** (p. 238).

The documentation for this class was generated from the following files:

- mha_signal.hh
- · mha_signal.cpp

5.280 MHASignal::fft_t Class Reference

Public Member Functions

- fft_t (const unsigned int &)
- ∼fft_t ()
- void wave2spec (const mha_wave_t *, mha_spec_t *, bool swap)
 fast fourier transform.
- void spec2wave (const mha_spec_t *, mha_wave_t *)
- void spec2wave (const mha_spec_t *, mha_wave_t *, unsigned int offset)
 wave may have fewer number of frames than needed for a complete iFFT.
- void forward (mha_spec_t *sIn, mha_spec_t *sOut)
- void backward (mha spec t *sIn, mha spec t *sOut)
- void wave2spec_scale (const mha_wave_t *, mha_spec_t *, bool swap)
- void spec2wave_scale (const mha_spec_t *, mha_wave_t *)
- void forward_scale (mha_spec_t *sIn, mha_spec_t *sOut)
- void backward_scale (mha_spec_t *sIn, mha_spec_t *sOut)

Private Member Functions

- void **sort_fftw2spec** (fftw_real *s_fftw, **mha_spec_t** *s_spec, unsigned int ch)

 Arrange the order of an fftw spectrum to the internal order.
- void **sort_spec2fftw** (fftw_real *s_fftw, const **mha_spec_t** *s_spec, unsigned int ch)

 Arrange the order of an internal spectrum to the fftw order.

Private Attributes

- unsigned int nfft
- unsigned int n_re
- unsigned int n_im
- mha_real_t scale
- mha_real_t * buf_in
- mha_real_t * buf_out
- rfftw_plan fftw_plan_wave2spec
- rfftw_plan_spec2wave
- fftw_plan fftw_plan_fft
- fftw_plan fftw_plan_ifft

```
5.280.1 Constructor & Destructor Documentation
```

bool swap)

fast fourier transform.

if swap is set, the buffer halfes of the wave signal are exchanged before computing the fft.

wave may have fewer number of frames than needed for a complete iFFT.

Only as many frames are written into wave as fit, starting with offset offset of the complete iFFT.

```
5.280.2.4 void MHASignal::fft_t::forward (
                       mha_spec_t * sln,
                       mha spec t * sOut)
5.280.2.5 void MHASignal::fft_t::backward (
                       mha_spec_t * sln,
                       mha_spec_t * sOut )
5.280.2.6 void MHASignal::fft_t::wave2spec_scale (
                       const mha_wave_t * wave,
                       mha_spec_t * spec,
                       bool swap )
5.280.2.7 void MHASignal::fft_t::spec2wave_scale (
                       const mha spec t * spec,
                       mha wave t * wave )
5.280.2.8 void MHASignal::fft t::forward scale (
                       mha_spec_t * sln,
                       mha_spec_t * sOut )
5.280.2.9 void MHASignal::fft_t::backward_scale (
                       mha_spec_t * sln,
                       mha_spec_t * sOut )
5.280.2.10 void MHASignal::fft_t::sort_fftw2spec (
                        fftw_real * s_fftw,
                        mha_spec_t * s_spec,
                        unsigned int ch ) [private]
Arrange the order of an fftw spectrum to the internal order.
The fftw spectrum is arranged [r0 r1 r2 ... rn-1 in in-1 ... i1], while the interal order is [r0 - r1 i1
r2 i2 ... rn-1 in-1 rn –].
5.280.2.11 void MHASignal::fft_t::sort_spec2fftw (
                        fftw real * s fftw,
                        const mha_spec_t * s_spec,
```

Arrange the order of an internal spectrum to the fftw order.

unsigned int ch) [private]

```
5.280.3 Member Data Documentation
5.280.3.1
          unsigned int MHASignal::fft_t::nfft [private]
5.280.3.2
         unsigned int MHASignal::fft_t::n_re [private]
5.280.3.3
         unsigned int MHASignal::fft_t::n_im [private]
5.280.3.4
         mha real t MHASignal::fft_t::scale [private]
5.280.3.5
         mha real t* MHASignal::fft_t::buf_in [private]
5.280.3.6
         mha real t* MHASignal::fft t::buf out [private]
5.280.3.7
         rfftw_plan MHASignal::fft_t::fftw_plan_wave2spec [private]
5.280.3.8
         rfftw_plan MHASignal::fft_t::fftw_plan_spec2wave [private]
5.280.3.9 fftw_plan MHASignal::fft_t::fftw_plan_fft [private]
5.280.3.10 fftw_plan MHASignal::fft_t::fftw_plan_ifft [private]
```

The documentation for this class was generated from the following files:

- mha_signal_fft.h
- mha_signal.cpp

5.281 MHASignal::hilbert_fftw_t Class Reference

Public Member Functions

- hilbert_fftw_t (unsigned int len)
- void hilbert (const mha_wave_t *, mha_wave_t *)

Private Attributes

- unsigned int n
- rfftw plan p1
- fftw_plan **p2**
- fftw_real * buf_r_in
- fftw_real * buf_r_out
- fftw_complex * buf_c_in
- fftw_complex * buf_c_out
- mha_real_t sc

```
5.281.1 Constructor & Destructor Documentation
```

5.281.2 Member Function Documentation

5.281.3 Member Data Documentation

```
5.281.3.1 unsigned int MHASignal::hilbert_fftw_t::n [private]
```


The documentation for this class was generated from the following file:

mha_signal.cpp

5.282 MHASignal::hilbert t Class Reference

Hilbert transformation of a waveform segment.

Inheritance diagram for MHASignal::hilbert t:

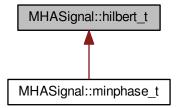

Public Member Functions

- hilbert t (unsigned int len)
- ∼hilbert_t ()
- void operator() (const mha_wave_t *, mha_wave_t *)

Apply Hilbert transformation on a waveform segment.

Private Attributes

• void * **h**

5.282.1 Detailed Description

Hilbert transformation of a waveform segment.

Returns the imaginary part of the inverse Fourier transformation of the Fourier transformed input signal with negative frequencies set to zero.

```
5.282.2 Constructor & Destructor Documentation
```

```
5.282.2.1 MHASignal::hilbert_t::hilbert_t ( unsigned int len )
```

Parameters

```
len Length of waveform segment
```

```
5.282.2.2 MHASignal::hilbert_t::~hilbert_t ( )
```

5.282.3 Member Function Documentation

Apply Hilbert transformation on a waveform segment.

5.282.4 Member Data Documentation

```
5.282.4.1 void* MHASignal::hilbert_t::h [private]
```


The documentation for this class was generated from the following files:

- · mha signal.hh
- mha_signal.cpp

5.283 MHASignal::loop_wavefragment_t Class Reference

Copy a fixed waveform fragment to a series of waveform fragments of other size.

Inheritance diagram for MHASignal::loop_wavefragment_t:

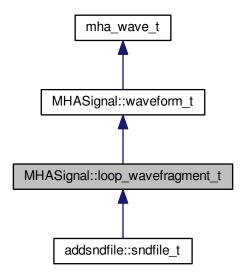

Public Types

Public Member Functions

 loop_wavefragment_t (const mha_wave_t &src, bool loop, level_mode_t level_mode, std::vector< int > channels, unsigned int startpos=0)

Constructor to create an instance of **loop_wavefragment_t** (p. 741) based on an existing waveform block.

- std::vector< int > get_mapping (unsigned int channels)
- void playback (mha_wave_t *s, playback_mode_t pmode, mha_wave_t *level_pa, const std::vector< int > &channels)

Add source waveform block to an output block.

- void playback (mha_wave_t *s, playback_mode_t pmode, mha_wave_t *level_pa)

 Add source waveform block to an output block.
- void playback (mha_wave_t *s, playback_mode_t pmode)

Add source waveform block to an output block.

- void set_level_lin (mha_real_t l)
- void set_level_db (mha_real_t l)
- void rewind ()
- void locate_end ()
- bool is_playback_active () const

Private Attributes

- std::vector< int > playback channels
- bool b loop
- unsigned int pos
- MHASignal::waveform_t intern_level

Additional Inherited Members

5.283.1 Detailed Description

Copy a fixed waveform fragment to a series of waveform fragments of other size.

This class is designed to continously play back a waveform to an output stream, with variable output block size.

```
5.283.2 Member Enumeration Documentation
```

```
5.283.2.1 enum MHASignal::loop wavefragment t::level mode t
```

Switch for playback level mode.

Enumerator

```
relative The nominal level is applied as a gain to the source signal.
peak The nominal level is the peak level of source signal in Pascal.
rms The nominal level is the RMS level of the source signal in Pascal.
rms_limit40
```

5.283.2.2 enum MHASignal::loop_wavefragment_t::playback_mode_t

Switch for playback mode.

Enumerator

```
add Add source signal to output stream.
replace Replace output stream by source signal.
input Do nothing, keep output stream (source position is unchanged).
mute Mute output stream (source position is unchanged).
```

5.283.3 Constructor & Destructor Documentation

Constructor to create an instance of **loop_wavefragment_t** (p. 741) based on an existing waveform block.

Parameters

src	Waveform block to copy data from.
Іоор	Flag whether the block should be looped or played once.
level_mode	Configuration of playback level (see MHASignal::loop_wavefragment_t::level_mode_t (p. 742) for details)
channels	Mapping of input to output channels.
startpos	Starting position

5.283.4 Member Function Documentation

```
5.283.4.1 std::vector< int > MHASignal::loop_wavefragment_t::get_mapping ( unsigned int channels )
```

Add source waveform block to an output block.

Parameters

S	Output block (streamed signal).
pmode	Playback mode (add, replace, input, mute).
level_pa	Linear output level/gain (depending on level_mode parameter in constructor); one value for each sample in output block.
channels	Output channels

Add source waveform block to an output block.

Parameters

S	Output block (streamed signal).
pmode	Playback mode (add, replace, input, mute).
level_pa	Linear output level/gain (depending on level_mode parameter in constructor); one value for each sample in output block.

Add source waveform block to an output block.

Parameters

S	Output block (streamed signal).
pmode	Playback mode (add, replace, input, mute).

```
5.283.4.5 void MHASignal::loop_wavefragment_t::set_level_lin (
                     mha real t/)
5.283.4.6 void MHASignal::loop_wavefragment_t::set_level_db (
                     mha real t/)
5.283.4.7 void MHASignal::loop_wavefragment_t::rewind() [inline]
5.283.4.8 void MHASignal::loop_wavefragment_t::locate_end() [inline]
5.283.4.9 bool MHASignal::loop wavefragment t::is playback active ( ) const [inline]
5.283.5 Member Data Documentation
5.283.5.1 std::vector<int> MHASignal::loop_wavefragment_t::playback_channels [private]
5.283.5.2 bool MHASignal::loop_wavefragment_t::b_loop [private]
5.283.5.3
         unsigned int MHASignal::loop_wavefragment_t::pos [private]
5.283.5.4
         MHASignal::waveform t MHASignal::loop_wavefragment_t::intern_level [private]
```


The documentation for this class was generated from the following files:

- · mha signal.hh
- mha_signal.cpp

5.284 MHASignal::matrix_t Class Reference

n-dimensional matrix with real or complex floating point values.

Inheritance diagram for MHASignal::matrix_t:

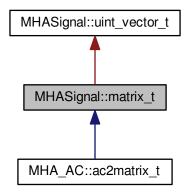

Public Member Functions

- matrix_t (unsigned int nrows, unsigned int ncols, bool b_is_complex=true)
 Create a two-dimensional matrix.
- matrix_t (const mha_spec_t &spec)

Create a two-dimensional matrix from a spectrum, copy values.

- matrix_t (const MHASignal::uint_vector_t &size, bool b_is_complex=true)
 Create n-dimensional matrix, descriped by size argument.
- matrix_t (const MHASignal::matrix_t &)
- matrix_t (const uint8_t *buf, unsigned int len)

Construct from memory area.

- ∼matrix t ()
- MHASignal::matrix t & operator= (const MHASignal::matrix t &)
- MHASignal::matrix_t & operator= (const comm_var_t &v)

Fill matrix with data of an AC variable object.

comm_var_t get_comm_var ()

Return a AC communication variable pointing to the data of the current matrix.

unsigned int dimension () const

Return the dimension of the matrix.

• unsigned int size (unsigned int k) const

Return the size of the matrix.

• unsigned int **get_nelements** () const

Return total number of elements.

bool is_same_size (const MHASignal::matrix_t &)

Test if matrix has same size as other.

• bool **iscomplex** () const

Return information about complexity.

mha_real_t & real (const MHASignal::uint_vector_t &index)

Access real part of an element in a n-dimensional matrix.

mha_real_t & imag (const MHASignal::uint_vector_t &index)

Access imaginary part of an element in a n-dimensional matrix.

mha_complex_t & operator() (const MHASignal::uint_vector_t &index)

Access complex value of an element in a n-dimensional matrix.

const mha_real_t & real (const MHASignal::uint_vector_t &index) const

Access real part of an element in a n-dimensional matrix.

const mha_real_t & imag (const MHASignal::uint_vector_t &index) const

Access imaginary part of an element in a n-dimensional matrix.

• const mha_complex_t & operator() (const MHASignal::uint_vector_t &index) const

Access complex value of an element in a n-dimensional matrix.

• mha_real_t & real (unsigned int row, unsigned int col)

Access real part of an element in a two-dimensional matrix.

mha_real_t & imag (unsigned int row, unsigned int col)

Access imaginary part of an element in a two-dimensional matrix.

mha_complex_t & operator() (unsigned int row, unsigned int col)

Access complex value of an element in a two-dimensional matrix.

• const **mha real t** & **real** (unsigned int row, unsigned int col) const

Access real part of an element in a two-dimensional matrix.

• const mha_real_t & imag (unsigned int row, unsigned int col) const

Access imaginary part of an element in a two-dimensional matrix.

• const mha_complex_t & operator() (unsigned int row, unsigned int col) const

Access complex value of an element in a two-dimensional matrix.

- unsigned int **get_nreals** () const
- unsigned int get_index (unsigned int row, unsigned int col) const
- unsigned int get index (const MHASignal::uint vector t &index) const
- unsigned int **numbytes** () const

Return number of bytes needed to store into memory.

unsigned int write (uint8_t *buf, unsigned int len) const

Copy to memory area.

const mha_real_t * get_rdata () const

Return pointer of real data.

const mha_complex_t * get_cdata () const

Return pointer of complex data.

Private Attributes

```
uint32_t complex_ofs
uint32_t nelements
union {
    mha_real_t * rdata
    mha_complex_t * cdata
};
```

Additional Inherited Members

5.284.1 Detailed Description

n-dimensional matrix with real or complex floating point values.

Warning

The member functions **imag()** (p. 750) and operator() should only be called if the matrix is defined to hold complex values.

5.284.2 Constructor & Destructor Documentation

Create a two-dimensional matrix.

Parameters

nrows	Number of rows
ncols	Number of columns
b_is_complex	Add space for complex values

Create a two-dimensional matrix from a spectrum, copy values.

Parameters

spec	Source spectrum structure
------	---------------------------

Create n-dimensional matrix, descriped by size argument.

Parameters

size	Size vector
b_is_complex	Add space for complex values

unsigned int len)

Construct from memory area.

Warning

This constructor is not real time safe

```
5.284.2.6 MHASignal::matrix_t::~matrix_t ( )
```

5.284.3 Member Function Documentation

Fill matrix with data of an AC variable object.

Parameters

```
v Source AC variable (comm_var_t (p. 232))
```

Note

The type and dimension of the AC variable must match the type and dimension of the matrix.

```
5.284.3.3 comm_var_t MHASignal::matrix_t::get_comm_var( )
```

Return a AC communication variable pointing to the data of the current matrix.

Returns

AC variable object (**comm_var_t** (p. 232)), valid for the life time of the matrix.

```
5.284.3.4 unsigned int MHASignal::matrix_t::dimension ( ) const [inline]
```

Return the dimension of the matrix.

Returns

Dimension of the matrix

Return the size of the matrix.

Parameters

```
k Dimension
```

Returns

Size of the matrix in dimension k

```
5.284.3.6 unsigned int MHASignal::matrix_t::get_nelements ( ) const
```

Return total number of elements.

Test if matrix has same size as other.

```
5.284.3.8 bool MHASignal::matrix_t::iscomplex ( ) const [inline]
```

Return information about complexity.

Access real part of an element in a n-dimensional matrix.

Parameters

index	Index vector
-------	--------------

Access imaginary part of an element in a n-dimensional matrix.

Parameters

```
index Index vector
```

Access complex value of an element in a n-dimensional matrix.

Parameters

```
index Index vector
```

Access real part of an element in a n-dimensional matrix.

Parameters

```
index Index vector
```

Access imaginary part of an element in a n-dimensional matrix.

Parameters

indox	Inday, vaatar
inaex	Index vector

Access complex value of an element in a n-dimensional matrix.

Parameters

Access real part of an element in a two-dimensional matrix.

Parameters

row	Row number of element
col	Column number of element

Access imaginary part of an element in a two-dimensional matrix.

Parameters

row	Row number of element
col	Column number of element

Access complex value of an element in a two-dimensional matrix.

Parameters

row	Row number of element
col	Column number of element

Access real part of an element in a two-dimensional matrix.

Parameters

row	Row number of element
col	Column number of element

Access imaginary part of an element in a two-dimensional matrix.

Parameters

row	Row number of element
col	Column number of element

Access complex value of an element in a two-dimensional matrix.

Parameters

row	Row number of element
col	Column number of element

Return number of bytes needed to store into memory.

Copy to memory area.

Return pointer of real data.

Return pointer of complex data.

5.284.4 Member Data Documentation

```
5.284.4.1 uint32_t MHASignal::matrix_t::complex_ofs [private]
```


The documentation for this class was generated from the following files:

- mha_signal.hh
- mha_signal.cpp

5.285 MHASignal::minphase_t Class Reference

Minimal phase function.

Inheritance diagram for MHASignal::minphase t:

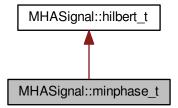

Public Member Functions

minphase_t (unsigned int fftlen, unsigned int ch)
 Constructor.

void operator() (mha_spec_t *s)

Transform input spectrum to a minimal-phase spectrum, discarding the original phase.

Private Attributes

MHASignal::waveform_t phase

Additional Inherited Members

5.285.1 Detailed Description

Minimal phase function.

The output spectrum Y(f) is

$$Y(f) = |X(f)|e^{i\mathcal{H}\{\log|X(f)|\}},$$

with the input spectrum X(f) and the Hilbert transformation $\mathcal{H}\{\cdots\}$.

5.285.2 Constructor & Destructor Documentation

Constructor.

Parameters

fftlen	FFT length
ch	Number of channels

5.285.3 Member Function Documentation

Transform input spectrum to a minimal-phase spectrum, discarding the original phase.

Parameters

s | Spectrum to operate on.

5.285.4 Member Data Documentation

5.285.4.1 MHASignal::waveform_t MHASignal::minphase_t::phase [private]

The documentation for this class was generated from the following files:

- mha_signal.hh
- mha_signal.cpp

5.286 MHASignal::quantizer_t Class Reference

Simple simulation of fixpoint quantization.

Public Member Functions

- quantizer_t (unsigned int num_bits)
 Constructor.
- void operator() (mha_wave_t &s)
 Quantization of a waveform fragment.

Private Attributes

- · bool limit
- mha_real_t upscale
- mha_real_t downscale
- · mha real tup limit

5.286.1 Detailed Description

Simple simulation of fixpoint quantization.

5.286.2 Constructor & Destructor Documentation

5.286.2.1 MHASignal::quantizer_t::quantizer_t (unsigned int *num_bits*)

Constructor.

Parameters

num_bits Nu	umber of bits to simulate,	or zero for limiting to [-1,1] only.
-------------	----------------------------	--------------------------------------

5.286.3 Member Function Documentation

Quantization of a waveform fragment.

Parameters

s | Waveform fragment to be quantized.

5.286.4 Member Data Documentation

```
5.286.4.1 bool MHASignal::quantizer_t::limit [private]
```

5.286.4.2 mha real t MHASignal::quantizer_t::upscale [private]

5.286.4.3 mha_real_t MHASignal::quantizer_t::downscale [private]

5.286.4.4 mha_real_t MHASignal::quantizer_t::up_limit [private]


The documentation for this class was generated from the following files:

- mha_signal.hh
- · mha signal.cpp

5.287 MHASignal::ringbuffer_t Class Reference

A ringbuffer class for time domain audio signal, which makes no assumptions with respect to fragment size.

Inheritance diagram for MHASignal::ringbuffer_t:

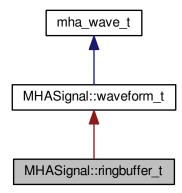

Public Member Functions

- ringbuffer_t (unsigned frames, unsigned channels, unsigned prefilled_frames)

 Creates new ringbuffer for time domain signal.
- unsigned **contained_frames** () const number of currently contained frames
- mha_real_t & value (unsigned frame, unsigned channel)

Access to value stored in ringbuffer.

void discard (unsigned frames)

Discards the oldest frames.

void write (mha_wave_t &signal)

Copies the contents of the signal into the ringbuffer if there is enough space.

Private Attributes

- unsigned **next_read_frame_index**Index of oldest frame in underlying storage for the ringbuffer.
- unsigned next_write_frame_index
 Index of first free frame in underlying storage.

Additional Inherited Members

5.287.1 Detailed Description

A ringbuffer class for time domain audio signal, which makes no assumptions with respect to fragment size.

Blocks of audio signal can be placed into the ringbuffer using the **write** (p. 759) method. Individual audio samples can be accessed and altered using the **value** (p. 758) method. Blocks of audio data can be deleted from the ringbuffer using the **discard** (p. 759) method.

5.287.2 Constructor & Destructor Documentation

Creates new ringbuffer for time domain signal.

Constructor allocates enough storage so that *frames* audio samples can be stored in the ring-buffer.

Parameters

frames	Size of ringbuffer in samples per channel. Maximum number of frames that can be stored in the ringbuffer at one time. This number cannot be changed after instance creation.
channels	Number of audio channels.
prefilled_frames	Number of frames to be prefilled with zero values. Many applications of a ringbuffer require the introduction of a delay. In practice, this delay is achieved by inserting silence audio samples (zeros) into the ringbuffer before the start of the actual signal is inserted for the first time.

Exceptions

```
MHA_Error (p. 410) | if prefilled_frames > frames
```

5.287.3 Member Function Documentation

```
5.287.3.1 unsigned MHASignal::ringbuffer_t::contained_frames() const [inline]
```

number of currently contained frames

Access to value stored in ringbuffer.

frame index is relative to the oldest frame stored in the ringbuffer, therefore, the meaning of the *frame* changes when the **discard** (p. 759) method is called.

Parameters

frame	frame index, 0 corresponds to oldest frame stored.	
channel	audio channel	

Returns

reference to contained sample value

Exceptions

```
MHA_Error (p. 410) if channel or frame out of bounds.
```

```
5.287.3.3 void MHASignal::ringbuffer_t::discard (
unsigned frames ) [inline]
```

Discards the oldest frames.

Makes room for new write (p. 759), alters base frame index for value (p. 758)

Parameters

```
frames how many frames to discard.
```

Exceptions

```
MHA_Error (p. 410) if frames > contained_frames (p. 758)
```

```
5.287.3.4 void MHASignal::ringbuffer_t::write (

mha_wave_t & signal) [inline]
```

Copies the contents of the signal into the ringbuffer if there is enough space.

Parameters

signal New signal to be appended to the signal already present in the ringbuffer

Exceptions

MHA_Error (p. 410)	if there is not enough space or if the channel count mismatches.
	Nothing is copied if the space is insufficient.

5.287.4 Member Data Documentation

5.287.4.1 unsigned MHASignal::ringbuffer_t::next_read_frame_index [private]

Index of oldest frame in underlying storage for the ringbuffer.

This value is added to the frame parameter of the **value** (p. 758) method, and this value is altered when **discard** (p. 759) is called.

5.287.4.2 unsigned MHASignal::ringbuffer_t::next_write_frame_index [private]

Index of first free frame in underlying storage.

Next frame to be stored will be placed here.


The documentation for this class was generated from the following files:

- mha_signal.hh
- mha_signal.cpp

5.288 MHASignal::schroeder_t Class Reference

Schroeder tone complex class.

Inheritance diagram for MHASignal::schroeder_t:

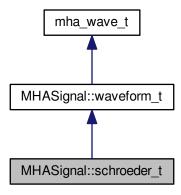

Public Types

• typedef float(* **groupdelay_t**) (float f, float fmin, float fmax)

Function type for group delay definition.

Public Member Functions

 schroeder_t (unsigned int len, unsigned int channels=1, schroeder_t::sign_t sign=up, mha_real_t speed=1)

Constructor.

• schroeder_t (unsigned int len, unsigned int channels=1, schroeder_t::groupdelay_t freqfun=MHASignal::schroeder_t::identity, float fmin=0, float fmax=1, float eps=1e-10)

Construct create Schroeder tone complex from a given frequency function.

Static Public Member Functions

- static float identity (float x, float, float)
- static float **log_up** (float x, float fmin, float fmax)
- static float **log_down** (float x, float fmin, float fmax)

Additional Inherited Members

5.288.1 Detailed Description

Schroeder tone complex class.

The Schroeder tone complex is a sweep defined in the sampled spectrum:

$$\Phi(f) = \sigma 2\pi \tau (2f/f_s)^{2\alpha}, \quad S(f) = e^{i\Phi(f)}$$

f is the sampled frequency in Hz, σ is the sign of the sweep (-1 for up sweep, +1 for down sweep), τ is the sweep duration in samples, f_s is the sampling rate in Hz and α is the relative sweep speed.

5.288.2 Member Typedef Documentation

5.288.2.1 typedef float(* MHASignal::schroeder_t::groupdelay_t) (float f, float fmin, float fmax)

Function type for group delay definition.

Parameters

f	Frequency relative to Nyquist frequency.
fmin	Minimum frequency relative to Nyquist frequency.
fmax	Maximum frequency relative to Nyquist frequency.

5.288.3 Member Enumeration Documentation

5.288.3.1 enum MHASignal::schroeder_t::sign_t

Enumerator for sign of Schroeder tone complex sweep direction.

Enumerator

```
up Sweep from zero to Nyquist frequency ( \sigma = -1) down Sweep from Nyquist frequency to zero ( \sigma = +1)
```

5.288.4 Constructor & Destructor Documentation

Constructor.

Parameters of the Schroeder tone complex are configured in the constructor.

Parameters

len	Length $ au$ of the Schroeder tone complex in samples
channels	Number of channels
sign	Sign σ of Schroeder sweep
speed	Relative speed α (curvature of phase function)

Construct create Schroeder tone complex from a given frequency function.

The frequency function g(f) defines the sweep speed and sign (based on the group delay). It must be defined in the interval [0,1) and should return values in the interval [0,1].

$$\Phi(f) = -4\pi\tau \int\limits_0^\tau g(f)\,\mathrm{d}f, \quad S(f) = e^{i\Phi(f)}$$

Parameters

len	Length $ au$ of the Schroeder tone complex in samples.
channels	Number of channels.
freqfun	Frequency function $g(f)$.
fmin	Start frequency (relative to Nyquist frequency).
fmax	End frequency (relative to Nyquist frequency).
eps	Stability constant for frequency ranges not covered by Schroeder tone complex.

5.288.5 Member Function Documentation


The documentation for this class was generated from the following files:

- mha_signal.hh
- mha_signal.cpp

5.289 MHASignal::spectrum_t Class Reference

a signal processing class for spectral data (based on **mha_spec_t** (p. 429))

Inheritance diagram for MHASignal::spectrum_t:

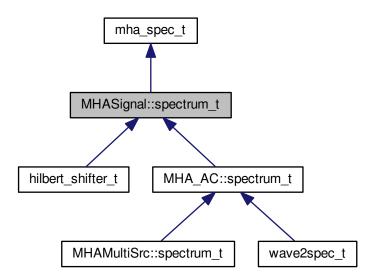

Public Member Functions

- spectrum_t (const unsigned int &frames, const unsigned int &channels)
 constructor of spectrum class
- spectrum_t (const mha_spec_t &)

Copy constructor.

spectrum_t (const MHASignal::spectrum_t &)

Copy constructor.

- spectrum_t (const std::vector< mha_complex_t > &)
- virtual ~spectrum_t (void)
- mha_complex_t & operator() (unsigned int f, unsigned int ch)

Access to element.

mha_complex_t & operator[] (unsigned int k)

Access to a single element, direct index into data buffer.

• mha_complex_t & value (unsigned int f, unsigned int ch)

Access to element.

void copy (const mha_spec_t &)

copy all elements from a spectrum

• void **copy_channel** (const **mha_spec_t** &s, unsigned sch, unsigned dch)

Copy one channel of a given spectrum signal to a target channel.

void export_to (mha_spec_t &)

copy elements to spectrum structure

void scale (const unsigned int &, const unsigned int &, const unsigned int &, const mha
 —real_t &)

scale section [a,b) in channel "ch" by "val"
 void scale_channel (const unsigned int &, const mha_real_t &)
 scale all elements in one channel

Additional Inherited Members

5.289.1 Detailed Description

a signal processing class for spectral data (based on **mha_spec_t** (p. 429))

5.289.2 Constructor & Destructor Documentation

constructor of spectrum class

Allocates buffers and initializes memory to zeros.

Parameters

frames	number of frames (fft bins) in one channel. Number of Frames is usually fftlen / 2 + 1
channels	number of channels

Reimplemented in MHA_AC::spectrum_t (p. 389).

5.289.3 Member Function Documentation

Access to element.

Parameters

f	Bin number
ch	Channel number

Returns

Reference to element

```
5.289.3.2 mha_complex_t& MHASignal::spectrum_t::operator[]( unsigned int k) [inline]
```

Access to a single element, direct index into data buffer.

Parameters

```
k Buffer index
```

Returns

Reference to element

Access to element.

Parameters

f	Bin number
ch	Channel number

Returns

Reference to element

```
5.289.3.4 void spectrum_t::copy (
const mha_spec_t & src )
```

copy all elements from a spectrum

Parameters

Copy one channel of a given spectrum signal to a target channel.

Parameters

s	Input spectrum signal
sch	Channel index in source signal
dch	Channel index in destination (this) signal

copy elements to spectrum structure

Parameters

dest	destination spectrum structure
------	--------------------------------

scale section [a,b) in channel "ch" by "val"

Parameters

а	starting frame
b	end frame (excluded)
ch	channel number
val	scale factor

scale all elements in one channel

Parameters


ch	channel number
src	scale factor

The documentation for this class was generated from the following files:

- · mha_signal.hh
- mha_signal.cpp

5.290 MHASignal::stat_t Class Reference

Inheritance diagram for MHASignal::stat_t:

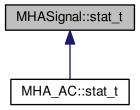

Public Member Functions

- stat_t (const unsigned int &frames, const unsigned int &channels)
- void mean (mha_wave_t &m)
- void mean std (mha wave t &m, mha wave t &s)
- void push (const mha_wave_t &)
- void **push** (const **mha_real_t** &x, const unsigned int &k, const unsigned int &ch)

Private Attributes

- · MHASignal::waveform t n
- MHASignal::waveform_t sum
- MHASignal::waveform_t sum2

```
5.290.1 Constructor & Destructor Documentation
5.290.1.1 MHASignal::stat_t::stat_t (
                      const unsigned int & frames,
                      const unsigned int & channels )
5.290.2 Member Function Documentation
5.290.2.1 void MHASignal::stat_t::mean (
                      mha wave t \& m)
5.290.2.2 void MHASignal::stat_t::mean_std (
                      mha_wave_t & m,
                      mha_wave_t & s)
5.290.2.3 void MHASignal::stat_t::push (
                      const mha_wave_t & x )
5.290.2.4 void MHASignal::stat_t::push (
                      const mha_real_t & x,
                      const unsigned int & k,
                      const unsigned int & ch )
5.290.3 Member Data Documentation
5.290.3.1
         MHASignal::waveform_t MHASignal::stat_t::n [private]
5.290.3.2 MHASignal::waveform t MHASignal::stat_t::sum [private]
5.290.3.3
         MHASignal::waveform_t MHASignal::stat_t::sum2 [private]
The documentation for this class was generated from the following files:
   mha_signal.hh
   mha_signal.cpp
```

© 2005-2018 HörTech gGmbH, Oldenburg

MHASignal::subsample_delay_t Class Reference

implements subsample delay in spectral domain.

5.291

Public Member Functions

• **subsample_delay_t** (const std::vector< float > &subsample_delay, unsigned fftlen)

Constructor computes complex phase factors to apply to achieve subsample delay.

• void process (mha_spec_t *s)

Apply the phase_gains to s to achieve the subsample delay.

void process (mha_spec_t *s, unsigned idx)

Apply the pase gains to channel idx in s to achieve the subsample delay in channel idx.

Public Attributes

· spectrum t phase gains

The complex factors to apply to achieve the necessary phase shift.

Private Attributes

unsigned last_complex_bin

index of the last complex fft bin for the used fft length.

5.291.1 Detailed Description

implements subsample delay in spectral domain.

When transformed back to the time domain, the signal is delayed by the configured fraction of a sample. This operation must not be used in a smoothgains bracket.

5.291.2 Constructor & Destructor Documentation

Constructor computes complex phase factors to apply to achieve subsample delay.

Parameters

subsample_delay	The subsample delay to apply0.5 <= subsample_delay <= 0.5
fftlen	FFT length

Exceptions

5.291.3 Member Function Documentation

Apply the phase_gains to s to achieve the subsample delay.

Apply the pase gains to channel idx in s to achieve the subsample delay in channel idx.

Parameters

s	signal
idx	channel index, 0-based

Exceptions

MHA_Error (p. 410) if idx
$$>=$$
 s- $>$ num_channels

5.291.4 Member Data Documentation

5.291.4.1 spectrum_t MHASignal::subsample_delay_t::phase_gains

The complex factors to apply to achieve the necessary phase shift.

5.291.4.2 unsigned MHASignal::subsample_delay_t::last_complex_bin [private]

index of the last complex fft bin for the used fft length.


The documentation for this class was generated from the following files:

- · mha_signal.hh
- mha_signal.cpp

5.292 MHASignal::uint_vector_t Class Reference

Vector of unsigned values, used for size and index description of n-dimensional matrixes.

Inheritance diagram for MHASignal::uint_vector_t:

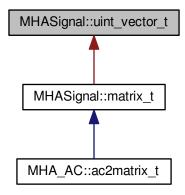

Public Member Functions

uint_vector_t (unsigned int len)

Constructor, initializes all elements to zero.

- uint_vector_t (const uint_vector_t &)
- uint_vector_t (const uint8_t *buf, unsigned int len)

Construct from memory area.

- ∼uint vector t ()
- bool **operator==** (const **uint_vector_t** &) const

Check for equality.

• uint vector t & operator= (const uint vector t &)

Assign from other uint_vector_t (p. 772).

• unsigned int get length () const

Return the length of the vector.

const uint32_t & operator[] (unsigned int k) const

Read-only access to elements.

uint32_t & operator[] (unsigned int k)

Access to elements.

unsigned int numbytes () const

Return number of bytes needed to store into memory.

• unsigned int write (uint8_t *buf, unsigned int len) const

Copy to memory area.

• const uint32_t * **getdata** () const

Return pointer to the data field.

Protected Attributes

```
uint32_t length
```

```
    uint32_t * data
```

5.292.1 Detailed Description

Vector of unsigned values, used for size and index description of n-dimensional matrixes.

```
5.292.2 Constructor & Destructor Documentation
```

```
5.292.2.1 MHASignal::uint_vector_t::uint_vector_t ( unsigned int len )
```

Constructor, initializes all elements to zero.

Parameters

```
len Length of vector.
```

Construct from memory area.

Warning

This constructor is not real time safe

```
5.292.2.4 MHASignal::uint_vector_t::~uint_vector_t ( )
```

5.292.3 Member Function Documentation

Check for equality.

```
5.292.3.2 uint_vector_t & MHASignal::uint_vector_t::operator= (
                       const uint_vector_t & src )
Assign from other uint_vector_t (p. 772).
Warning
      This assignment will fail if the lengths mismatch.
5.292.3.3
         unsigned int MHASignal::uint_vector_t::get_length ( ) const [inline]
Return the length of the vector.
5.292.3.4 const uint32_t& MHASignal::uint_vector_t::operator[] (
                       unsigned int k ) const [inline]
Read-only access to elements.
5.292.3.5 uint32_t& MHASignal::uint_vector_t::operator[](
                       unsigned int k ) [inline]
Access to elements.
5.292.3.6 unsigned int MHASignal::uint_vector_t::numbytes ( ) const
Return number of bytes needed to store into memory.
5.292.3.7 unsigned int MHASignal::uint_vector_t::write (
                       uint8 t * buf.
                       unsigned int len ) const
Copy to memory area.
5.292.3.8 const uint32_t* MHASignal::uint_vector_t::getdata( ) const [inline]
Return pointer to the data field.
5.292.4 Member Data Documentation
         uint32_t MHASignal::uint_vector_t::length [protected]
5.292.4.1
```

The documentation for this class was generated from the following files:


5.292.4.2 uint32_t* MHASignal::uint_vector_t::data [protected]

- · mha_signal.hh
- mha_signal.cpp

5.293 MHASignal::waveform_t Class Reference

signal processing class for waveform data (based on mha_wave_t (p. 459))

Inheritance diagram for MHASignal::waveform_t:

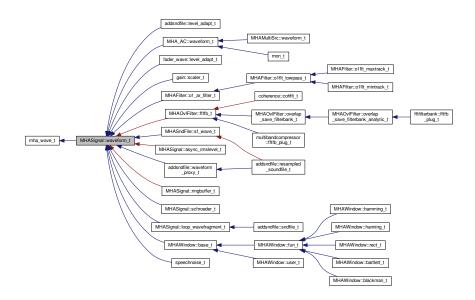

Public Member Functions

- waveform_t (const unsigned int &frames, const unsigned int &channels)
 constructor of waveform_t (p. 775)
- waveform_t (const mhaconfig_t &cf)
 Constructor to create a waveform from plugin configuration.
- waveform_t (const mha_wave_t &src)

Copy contructor for **mha_wave_t** (p. 459) source.

waveform_t (const MHASignal::waveform_t &src)

Copy contructor.

- waveform_t (const std::vector< mha_real_t > &src)
 Copy contructor for std::vector< mha_real_t > source.
- virtual ~waveform_t (void)
- void operator= (const mha_real_t &v)
- mha_real_t & operator[] (unsigned int k)
- const mha_real_t & operator[] (unsigned int k) const
- mha_real_t & value (unsigned int t, unsigned int ch)
 Element accessor.
- mha_real_t & operator() (unsigned int t, unsigned int ch)
 Element accessor.
- const **mha_real_t** & **value** (unsigned int t, unsigned int ch) const Constant element accessor.

const mha_real_t & operator() (unsigned int t, unsigned int ch) const

Constant element accessor.

mha_real_t sum (const unsigned int &a, const unsigned int &b)

sum of all elements between [a,b) in all channels

• mha_real_t sum (const unsigned int &a, const unsigned int &b, const unsigned int &ch) sum of all elements between [a,b) in channel ch

mha_real_t sum ()

sum of all elements

mha_real_t sumsqr ()

sum of square of all elements

mha real t sum channel (const unsigned int &)

return sum of all elements in one channel

void assign (const unsigned int &k, const unsigned int &ch, const mha_real_t &val)
 set frame "k" in channel "ch" to value "val"

void assign (const mha_real_t &)

set all elements to value

void assign_frame (const unsigned int &k, const mha_real_t &val)

assign value "val" to frame k in all channels

• void assign channel (const unsigned int &c, const mha real t &val)

assign value "val" to channel ch in all frames

- void copy (const std::vector< mha real t > &v)
- void copy (const mha_wave_t &)

copy data from source into current waveform

- void copy (const mha_wave_t *)
- void copy_channel (const mha_wave_t &, unsigned int, unsigned int)

Copy one channel of a given waveform signal to a target channel.

void copy_from_at (unsigned int, unsigned int, const mha_wave_t &, unsigned int)

Copy part of the source signal into part of this waveform object.

void export_to (mha_wave_t &)

copy data into allocated mha_wave_t (p. 459) structure

void limit (const mha_real_t &min, const mha_real_t &max)

limit target to range [min,max]

void power (const waveform_t &)

transform waveform signal (in Pa) to squared signal (in W/m^2)

void powspec (const mha_spec_t &)

get the power spectrum (in W/m²) from a complex spectrum

 void scale (const unsigned int &a, const unsigned int &b, const unsigned int &ch, const mha_real_t &val)

scale section [a,b) in channel "ch" by "val"

void scale (const unsigned int &k, const unsigned int &ch, const mha_real_t &val)
 scale one element

• void scale channel (const unsigned int &, const mha real t &)

scale one channel of target with a scalar

- void scale_frame (const unsigned int &, const mha_real_t &)
- unsigned int get_size () const

Additional Inherited Members

5.293.1 Detailed Description

signal processing class for waveform data (based on mha_wave_t (p. 459))

5.293.2 Constructor & Destructor Documentation

```
constructor of waveform_t (p. 775)
```

Allocates buffer memory and initializes values to zero.

Parameters

frames	number of frames in each channel
channels	number of channels

```
5.293.2.2 waveform_t::waveform_t(

const mhaconfig_t & cf ) [explicit]
```

Constructor to create a waveform from plugin configuration.

Parameters

```
cf Plugin configuration
```

Copy contructor for **mha_wave_t** (p. 459) source.

Copy contructor.

Copy contructor for std::vector<mha_real_t> source.

A waveform structure with a single channel is created, the length is equal to the number of elements in the source vector.

5.293.3 Member Function Documentation

Element accessor.

Parameters

t	Frame number	
ch	Channel number	

Returns

Reference to element

Element accessor.

t	Frame number
ch	Channel number

Returns

Reference to element

Constant element accessor.

Parameters

t	Frame number
ch	Channel number

Returns

Reference to element

Constant element accessor.

Parameters

t	Frame number
ch	Channel number

Returns

Reference to element

sum of all elements between [a,b) in all channels

а	starting frame
b	end frame (excluded)

```
Returns
```

sum

sum of all elements between [a,b) in channel ch

Parameters

а	starting frame
b	end frame (exluded)
ch	channel number

Returns

sum

```
5.293.3.10 mha_real_t waveform_t::sum ( )
```

sum of all elements

Returns

sum of all elements

```
5.293.3.11 mha_real_t waveform_t::sumsqr()
```

sum of square of all elements

Returns

sum of square of all elements

```
5.293.3.12 mha_real_t waveform_t::sum_channel ( const unsigned int & ch )
```

return sum of all elements in one channel

Parameters

ch	channel	number
0,,	O I I CI	110111001

Returns

sum

set frame "k" in channel "ch" to value "val"

Parameters

k	frame number
ch	channel number
val	new value

set all elements to value

Parameters

```
val new value
```

assign value "val" to frame k in all channels

k	frame number
val	new value

assign value "val" to channel ch in all frames

Parameters

ch	channel number
val	new value

copy data from source into current waveform

Parameters

src	input data (need to be same size as target)
-----	---

Copy one channel of a given waveform signal to a target channel.

src	Input waveform signal
src_channel	Channel in source signal
dest_channel	Channel number in destination signal

Copy part of the source signal into part of this waveform object.

Source and target have to have the same number of channels.

Parameters

to_pos	Offset in target
len	Number of frames copied
src	Source
from_pos	Offset in source

copy data into allocated **mha_wave_t** (p. 459) structure

Parameters

```
destination structure
```

```
5.293.3.23 void waveform_t::limit (
const mha_real_t & min,
const mha_real_t & max )
```

limit target to range [min,max]

Parameters

min	lower limit
max	upper limit

```
5.293.3.24 void waveform_t::power (
const waveform_t & src )
```

transform waveform signal (in Pa) to squared signal (in W/m²)

src	linear waveform signal (in Pa)
-----	--------------------------------

```
5.293.3.25 void waveform_t::powspec (
const mha_spec_t & src )
```

get the power spectrum (in W/m^2) from a complex spectrum

Parameters

```
src | complex spectrum (normalized to Pa)
```

scale section [a,b) in channel "ch" by "val"

Parameters

а	starting frame
b	end frame (excluded)
ch	channel number
val	scale factor

scale one element

Parameters

k	frame number
ch	channel number
val	scale factor

scale one channel of target with a scalar

Parameters


ch	channel number
src	factor

The documentation for this class was generated from the following files:

- mha_signal.hh
- · mha_signal.cpp

5.294 MHASndFile::sf_t Class Reference

Inheritance diagram for MHASndFile::sf_t:

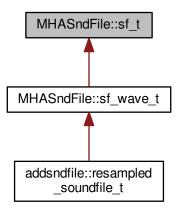

Public Member Functions

- sf_t (const std::string &fname)
- \sim sf_t ()

Public Attributes

• SNDFILE * sf

5.294.1 Constructor & Destructor Documentation

5.294.1.2 MHASndFile::sf_t::~sf_t()

5.294.2 Member Data Documentation


5.294.2.1 SNDFILE* MHASndFile::sf_t::sf

The documentation for this class was generated from the following files:

- · mhasndfile.h
- · mhasndfile.cpp

5.295 MHASndFile::sf_wave_t Class Reference

Inheritance diagram for MHASndFile::sf_wave_t:

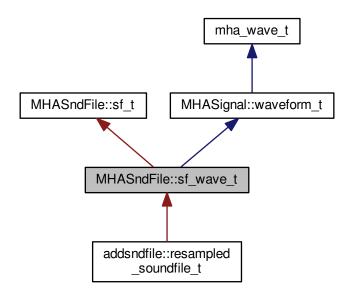

Public Member Functions

• **sf_wave_t** (const std::string &fname, **mha_real_t** peaklevel_db, unsigned int maxlen=std::numeric_limits< unsigned int >::**max**(), unsigned int startpos=0, std← ::vector< int > channel_map=std::vector< int >())

Additional Inherited Members

5.295.1 Constructor & Destructor Documentation


The documentation for this class was generated from the following files:

- · mhasndfile.h
- · mhasndfile.cpp

5.296 MHATableLookup::linear_table_t Class Reference

Class for interpolation with equidistant x values.

Inheritance diagram for MHATableLookup::linear_table_t:

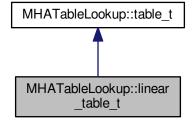

Public Member Functions

linear_table_t (void)

contructor creates an empty linear_table_t (p. 787) object.

mha real t lookup (mha real t x) const

look up the y value that is stored for the mesh point where x is lower than or equal to the x value given here.

mha_real_t interp (mha_real_t x) const

interpolate y value for the given x value.

• ∼linear_table_t (void)

destructor

void set_xmin (mha_real_t xmin)

set the x value for the first mesh point.

void add_entry (mha_real_t y)

set the y value for the next mesh point.

void set xmax (mha real t xmax)

this sets the x value for a past-the-end, not added mesh point.

void prepare (void)

prepare computes the x distance of the mesh points based on the values given to set_xmin, set_xmax, and the number of times that add_entry was called.

void clear (void)

clear resets the state of this object to the state directly after construction.

Protected Attributes

- mha_real_t * vy
- unsigned int len

Private Attributes

- vector< mha_real_t > vec_y
- mha_real_t xmin
- mha_real_t xmax
- · mha real t scalefac

Additional Inherited Members

5.296.1 Detailed Description

Class for interpolation with equidistant x values.

This class can be used for linear interpolation tasks where the mesh points are known for equidistant x values.

Before the class can be used for interpolation, it has to be filled with the y values for the mesh points, the x range has to be specified, and when all values are given, the prepare method has to be called so that the object can determine the distance between x values from the range and the number of mesh points given.

Only after prepare has returned, the object may be used for interpolation.

5.296.2 Constructor & Destructor Documentation

```
5.296.2.1 linear_table_t::linear_table_t ( void )
```

contructor creates an empty linear_table_t (p. 787) object.

add_entry, set_xmin, set_xmax and prepare methods have to be called before the object can be used to lookup and interpolate values.

```
5.296.2.2 linear_table_t::~linear_table_t ( void )
```

destructor

5.296.3 Member Function Documentation

look up the y value that is stored for the mesh point where x is lower than or equal to the x value given here.

This method does not extrapolate, so for x < xmin, the y value for xmin is returned. For all x greater than the x of the last mesh point, the y value of the last mesh point is returned.

Precondition

prepare must have been called before lookup may be called.

Implements MHATableLookup::table_t (p. 792).

interpolate y value for the given x value.

The y values for the neighbouring mesh points are looked up and linearly interpolated. For x values outside the range of mesh points, the y value is extrapolated from the nearest two mesh points.

Precondition

prepare must have been called before interp may be called.

Implements MHATableLookup::table_t (p. 792).

```
5.296.3.3 void linear_table_t::set_xmin (
mha_real_t xmin)
```

set the x value for the first mesh point.

Must be called before prepare can be called.

```
5.296.3.4 void linear_table_t::add_entry (
mha real t y )
```

set the y value for the next mesh point.

Must be called at least twice before prepare can be called.

```
5.296.3.5 void linear_table_t::set_xmax (
mha real t xmax )
```

this sets the x value for a past-the-end, not added mesh point.

Example:

prepare computes the x distance of the mesh points based on the values given to set_xmin, set_xmax, and the number of times that add_entry was called.

Precondition

set_xmin, set_xmax, add_entry functions must have been called before calling prepare, add entry must have been called at least twice.

Only after this method has been called, interp or lookup may be called.

clear resets the state of this object to the state directly after construction.

mesh entries and x range are deleted.

interp and lookup may not be called after this function has been called unless prepare and before that its precondition methods are called again.

Implements MHATableLookup::table_t (p. 792).

```
5.296.4 Member Data Documentation
```

```
5.296.4.1 mha_real_t* MHATableLookup::linear_table_t::vy [protected]
5.296.4.2 unsigned int MHATableLookup::linear_table_t::len [protected]
5.296.4.3 vector<mha_real_t> MHATableLookup::linear_table_t::vec_y [private]
5.296.4.4 mha_real_t MHATableLookup::linear_table_t::xmin [private]
5.296.4.5 mha_real_t MHATableLookup::linear_table_t::xmax [private]
```


The documentation for this class was generated from the following files:

5.296.4.6 mha real tMHATableLookup::linear_table_t::scalefac [private]

- mha tablelookup.hh
- mha_tablelookup.cpp

5.297 MHATableLookup::table_t Class Reference

Inheritance diagram for MHATableLookup::table_t:

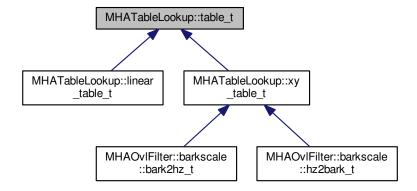

Public Member Functions

```
    table_t (void)
    virtual ~table_t (void)
    virtual mha_real_t lookup (mha_real_t) const =0
    virtual mha real t interp (mha real t) const =0
```

Protected Member Functions

• virtual void clear (void)=0

```
5.297.1 Constructor & Destructor Documentation
5.297.1.1 table t::table t (
                     void )
5.297.1.2 table_t:: ~table_t (
                     void ) [virtual]
5.297.2 Member Function Documentation
5.297.2.1 virtual mha_real_t MHATableLookup::table_t::lookup (
                     mha_real_t )const [pure virtual]
Implemented in MHATableLookup::xy_table_t (p. 794), and MHATableLookup::linear_ <--
table_t (p. 789).
5.297.2.2 virtual mha real t MHATableLookup::table t::interp (
                     mha_real_t )const [pure virtual]
Implemented in MHATableLookup::xy_table_t (p. 795), and MHATableLookup::linear_ 
table_t (p. 789).
5.297.2.3 virtual void MHATableLookup::table_t::clear (
                     void ) [protected], [pure virtual]
Implemented in MHATableLookup::xy_table_t (p. 795), and MHATableLookup::linear_ <--
```

The documentation for this class was generated from the following files:

mha_tablelookup.hh


table_t (p. 791).

mha tablelookup.cpp

5.298 MHATableLookup::xy_table_t Class Reference

Class for interpolation with non-equidistant x values.

Inheritance diagram for MHATableLookup::xy_table_t:

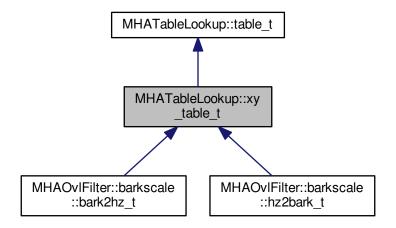

Public Member Functions

- xy_table_t ()
- mha_real_t lookup (mha_real_t x) const

Return the y-value at the position of the nearest x value below input.

mha_real_t interp (mha_real_t x) const

Linear interpolation function.

void add_entry (mha_real_t x, mha_real_t y)

Add a single x-y pair entry.

- void add_entry (mha_real_t *pVX, mha_real_t *pVY, unsigned int len)
 Add multiple entries at once.
- void clear ()

Clear the table and transformation functions.

void set_xfun (float(*pXFun)(float))

Set transformation function for x values.

void set yfun (float(*pYFun)(float))

Set transformation function for y values during insertion.

void set_xyfun (float(*pYFun)(float, float))

Set transformation function for y values during insertion, based on x and y values.

std::pair< mha_real_t, mha_real_t > get_xlimits () const
 returns the min and max x of all mesh points that are stored in the lookup table, i.e.

Private Attributes

- std::map< mha real t, mha real t > mXY
- float(* xfun)(float)
- float(* yfun)(float)
- float(* xyfun)(float, float)

Additional Inherited Members

5.298.1 Detailed Description

Class for interpolation with non-equidistant x values.

Linear interpolation of the x-y table is performed. A transformation of x and y-values is possible; if a transformation function is provided for the x-values, the same function is applied to the argument of **xy_table_t::interp()** (p. 795) and **xy_table_t::lookup()** (p. 794). The transformation of y values is applied only during insertion into the table. Two functions for y-transformation can be provided: a simple transformation which depends only on the y values, or a transformation which takes both (non-transformed) x and y value as an argument. The two-argument transformation is applied before the one-argument transformation.

```
5.298.2 Constructor & Destructor Documentation
```

```
5.298.2.1 xy_table_t::xy_table_t ( )
```

5.298.3 Member Function Documentation

Return the y-value at the position of the nearest x value below input.

Parameters

```
x Input value
```

Returns

y value at nearest x value below input.

Implements MHATableLookup::table_t (p. 792).

Linear interpolation function.

Parameters

```
x x value
```

Returns

interpolated y value

Implements MHATableLookup::table_t (p. 792).

Add a single x-y pair entry.

Parameters

X	x value
У	corresponding y value

Add multiple entries at once.

Parameters

pVX	array of x values
pVY	array of y values
uLength	Length of x and y arrays

Clear the table and transformation functions.

Implements MHATableLookup::table_t (p. 792).

```
5.298.3.6 void xy_table_t::set_xfun (
float(*)(float) fun )
```

Set transformation function for x values.

Parameters

```
fun Transformation function.
```

```
5.298.3.7 void xy_table_t::set_yfun (
float(*)(float) fun )
```

Set transformation function for y values during insertion.

Parameters

```
fun Transformation function.
```

Set transformation function for y values during insertion, based on x and y values.

Parameters

```
fun Transformation function.
```

```
5.298.3.9 std::pair<mha_real_t,mha_real_t> MHATableLookup::xy_table_t::get_xlimits ( ) const [inline]
```

returns the min and max x of all mesh points that are stored in the lookup table, i.e. after transformation with xfun, if any. Not real-time safe

```
5.298.4 Member Data Documentation
```

```
5.298.4.1 std::map<mha_real_t,mha_real_t> MHATableLookup::xy_table_t::mXY [private]
5.298.4.2 float(* MHATableLookup::xy_table_t::xfun) (float) [private]
5.298.4.3 float(* MHATableLookup::xy_table_t::yfun) (float) [private]
```

5.298.4.4 float(* MHATableLookup::xy_table_t::xyfun) (float, float) [private]


The documentation for this class was generated from the following files:

- mha tablelookup.hh
- mha_tablelookup.cpp

5.299 MHAWindow::bartlett_t Class Reference

Bartlett window.

Inheritance diagram for MHAWindow::bartlett_t:

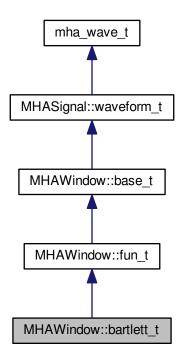

Public Member Functions

bartlett_t (unsigned int n)

Additional Inherited Members

5.299.1 Detailed Description

Bartlett window.

5.299.2 Constructor & Destructor Documentation

5.299.2.1 MHAWindow::bartlett_t::bartlett_t (unsigned int *n*) [inline]


The documentation for this class was generated from the following file:

mha_windowparser.h

5.300 MHAWindow::base_t Class Reference

Common base for window types.

Inheritance diagram for MHAWindow::base_t:

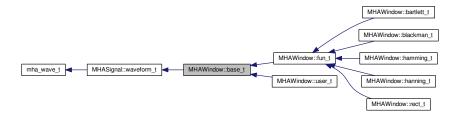

Public Member Functions

base_t (unsigned int len)

Constructor.

base_t (const MHAWindow::base_t &src)

Copy constructor.

• void operator() (mha_wave_t &) const

Apply window to waveform segment (reference)

void operator() (mha_wave_t *) const

Apply window to waveform segment (pointer)

void ramp_begin (mha_wave_t &) const

Apply a ramp at the begining.

void ramp_end (mha_wave_t &) const

Apply a ramp at the end.

Additional Inherited Members

5.300.1 Detailed Description

Common base for window types.

5.300.2 Constructor & Destructor Documentation

5.300.2.1 MHAWindow::base_t::base_t (unsigned int *len*)

Constructor.

Parameters

```
len Window length in samples.
```

Copy constructor.

Parameters

```
src | Source to be copied
```

5.300.3 Member Function Documentation

```
5.300.3.1 void MHAWindow::base_t::operator() (
mha_wave_t & s ) const
```

Apply window to waveform segment (reference)

```
5.300.3.2 void MHAWindow::base_t::operator() (
mha_wave_t * s ) const
```

Apply window to waveform segment (pointer)

```
5.300.3.3 void MHAWindow::base_t::ramp_begin (
mha_wave_t & s ) const
```

Apply a ramp at the begining.

```
5.300.3.4 void MHAWindow::base_t::ramp_end (
mha_wave_t & s ) const
```

Apply a ramp at the end.


The documentation for this class was generated from the following files:

- mha_windowparser.h
- mha_windowparser.cpp

5.301 MHAWindow::blackman_t Class Reference

Blackman window.

Inheritance diagram for MHAWindow::blackman_t:

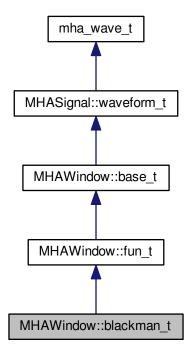

Public Member Functions

blackman_t (unsigned int n)

Additional Inherited Members

5.301.1 Detailed Description

Blackman window.

5.301.2 Constructor & Destructor Documentation

5.301.2.1 MHAWindow::blackman_t::blackman_t (unsigned int *n*) [inline]

The documentation for this class was generated from the following file:

mha_windowparser.h

5.302 MHAWindow::fun_t Class Reference

Generic window based on a generator function.

Inheritance diagram for MHAWindow::fun_t:



Public Member Functions

fun_t (unsigned int n, float(*fun)(float), float xmin=-1, float xmax=1, bool min_← included=true, bool max_included=false)
 Constructor.

Additional Inherited Members

5.302.1 Detailed Description

Generic window based on a generator function.

The generator function should return a valid window function in the interval [-1,1].

5.302.2 Constructor & Destructor Documentation

Constructor.

Parameters

n	Window length
fun	Generator function, i.e. MHAWindow::hanning() (p. 123)
xmin	Start value of window, i.e1 for full window or 0 for fade-out ramp.
xmax	Last value of window, i.e. 1 for full window
min_included	Flag if minimum value is included
max_included	Flag if maximum value is included


The documentation for this class was generated from the following files:

- mha_windowparser.h
- mha_windowparser.cpp

5.303 MHAWindow::hamming_t Class Reference

Hamming window.

Inheritance diagram for MHAWindow::hamming_t:

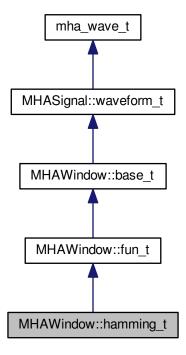

Public Member Functions

• hamming_t (unsigned int n)

Additional Inherited Members

5.303.1 Detailed Description

Hamming window.

5.303.2 Constructor & Destructor Documentation

5.303.2.1 MHAWindow::hamming_t::hamming_t (
unsigned int n) [inline]


The documentation for this class was generated from the following file:

mha_windowparser.h

5.304 MHAWindow::hanning_t Class Reference

von-Hann window

Inheritance diagram for MHAWindow::hanning_t:

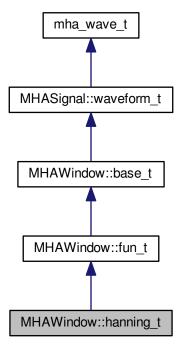

Public Member Functions

• hanning_t (unsigned int n)

Additional Inherited Members

5.304.1 Detailed Description

von-Hann window

5.304.2 Constructor & Destructor Documentation


The documentation for this class was generated from the following file:

mha_windowparser.h

5.305 MHAWindow::rect_t Class Reference

Rectangular window.

Inheritance diagram for MHAWindow::rect_t:

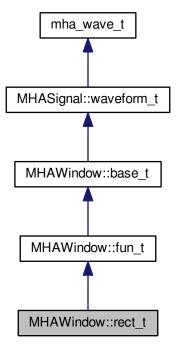

Public Member Functions

rect_t (unsigned int n)

Additional Inherited Members

5.305.1 Detailed Description

Rectangular window.

5.305.2 Constructor & Destructor Documentation

```
5.305.2.1 MHAWindow::rect_t::rect_t (
unsigned int n ) [inline]
```


The documentation for this class was generated from the following file:

mha_windowparser.h

5.306 MHAWindow::user_t Class Reference

User defined window.

Inheritance diagram for MHAWindow::user_t:

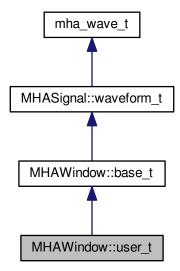

Public Member Functions

user_t (const std::vector< mha_real_t > &wnd)
 Constructor.

Additional Inherited Members

5.306.1 Detailed Description

User defined window.

5.306.2 Constructor & Destructor Documentation

Constructor.

Parameters


wnd User defined window

The documentation for this class was generated from the following files:

- mha_windowparser.h
- mha_windowparser.cpp

5.307 mon_t Class Reference

Inheritance diagram for mon_t:

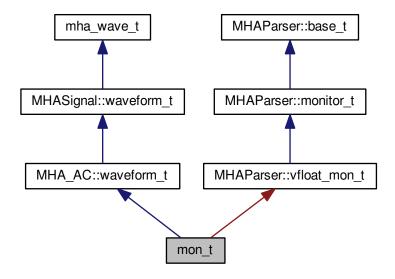

Public Member Functions

- mon_t (unsigned int nch, std::string name, algo_comm_t ac, std::string base, MHA←
 Parser::parser_t &p, std::string help)
- void store ()

Additional Inherited Members

5.307.1 Constructor & Destructor Documentation

5.307.2 Member Function Documentation


5.307.2.1 void mon_t::store ()

The documentation for this class was generated from the following file:

rmslevel.cpp

5.308 multibandcompressor::fftfb_plug_t Class Reference

Inheritance diagram for multibandcompressor::fftfb_plug_t:

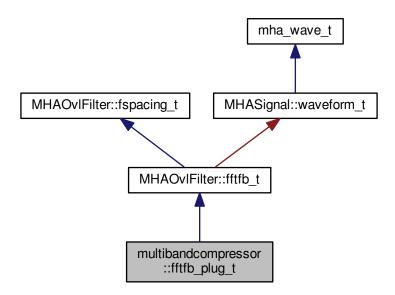

Public Member Functions

- fftfb_plug_t (MHAOvlFilter::fftfb_vars_t &, const mhaconfig_t &cfg, algo_comm_← t ac, std::string alg)
- void insert ()

Private Attributes

- MHA_AC::waveform_t cfv
 vector of nominal center frequencies / Hz
- MHA_AC::waveform_t efv

 vector of edge frequencies / Hz
- MHA_AC::waveform_t bwv

vector of band-weigths (sum of squared fft-bin-weigths)/num_frames

```
Additional Inherited Members
```

```
5.308.1 Constructor & Destructor Documentation
```

```
5.308.1.1 multibandcompressor::fftfb_plug_t::fftfb_plug_t (

MHAOvIFilter::fftfb_vars_t & vars,

const mhaconfig_t & cfg,

algo_comm_t ac,

std::string alg )
```

5.308.2 Member Function Documentation

```
5.308.2.1 void multibandcompressor::fftfb_plug_t::insert ( )
```

5.308.3 Member Data Documentation

```
5.308.3.1 MHA_AC::waveform_t multibandcompressor::fftfb_plug_t::cfv [private]
```

vector of nominal center frequencies / Hz

```
5.308.3.2 MHA_AC::waveform_t multibandcompressor::fftfb_plug_t::efv [private]
```

vector of edge frequencies / Hz

5.308.3.3 MHA_AC::waveform_t multibandcompressor::fftfb_plug_t::bwv [private]


vector of band-weigths (sum of squared fft-bin-weigths)/num_frames

The documentation for this class was generated from the following file:

multibandcompressor.cpp

5.309 multibandcompressor::interface_t Class Reference

Inheritance diagram for multibandcompressor::interface_t:

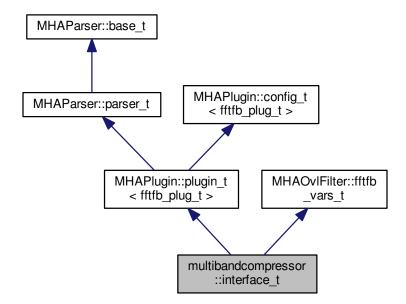

Public Member Functions

- interface_t (const algo_comm_t &, const std::string &, const std::string &)
- void prepare (mhaconfig_t &)
- void release ()
- mha_spec_t * process (mha_spec_t *)

Private Member Functions

void update_cfg ()

Private Attributes

- int num_channels
- DynComp::dc_afterburn_t burn
- MHAEvents::patchbay_t< interface_t > patchbay
- std::string algo
- MHAParser::mhapluginloader_t plug
- plugin_signals_t * plug_sigs

Additional Inherited Members

```
5.309.1 Constructor & Destructor Documentation
```

Default values are set and MHA configuration variables registered into the parser.

Parameters

ac⊷	algorithm communication handle
_	
th	chain name
al	algorithm name

5.309.2 Member Function Documentation

Implements MHAPlugin::plugin_t < fftfb_plug_t > (p. 693).

```
5.309.2.2 void multibandcompressor::interface_t::release ( void ) [virtual]
```

Reimplemented from MHAPlugin::plugin_t< fftfb_plug_t > (p. 694).

5.309.2.4 void multibandcompressor::interface_t::update_cfg() [private]

5.309.3 Member Data Documentation

5.309.3.1 int multibandcompressor::interface_t::num_channels [private]

5.309.3.2 DynComp::dc_afterburn_t multibandcompressor::interface_t::burn [private]

5.309.3.3 MHAEvents::patchbay_t<interface_t> multibandcompressor::interface_t::patchbay[private]

```
5.309.3.4 std::string multibandcompressor::interface_t::algo [private]
5.309.3.5 MHAParser::mhapluginloader_t multibandcompressor::interface_t::plug [private]
5.309.3.6 plugin_signals_t* multibandcompressor::interface_t::plug_sigs [private]
The documentation for this class was generated from the following file:

    multibandcompressor.cpp

5.310
       multibandcompressor::plugin_signals_t Class Reference
Public Member Functions
   • plugin_signals_t (unsigned int channels, unsigned int bands)

    void update levels (MHAOvlFilter::fftfb t *, mha spec t *s in)

   • void apply_gains (MHAOvIFilter::fftfb_t *, DynComp::dc_afterburn_t &burn, mha_
     spec t *s out)
Public Attributes

    mha wave t * plug output

Private Attributes

    MHASignal::waveform t plug level

    MHASignal::waveform_t gain

5.310.1 Constructor & Destructor Documentation
5.310.1.1 multibandcompressor::plugin_signals_t::plugin_signals_t (
                      unsigned int channels,
                      unsigned int bands )
```

5.310.2 Member Function Documentation

5.310.2.1

void multibandcompressor::plugin_signals_t::update_levels (

MHAOvlFilter::fftfb t * pFb,

mha_spec_t * s_in)

© 2005-2018 HörTech gGmbH, Oldenburg

5.310.3 Member Data Documentation

5.310.3.1 MHASignal::waveform_t multibandcompressor::plugin_signals_t::plug_level [private]

5.310.3.2 MHASignal::waveform_t multibandcompressor::plugin_signals_t::gain [private]


5.310.3.3 mha_wave_t* multibandcompressor::plugin_signals_t::plug_output

The documentation for this class was generated from the following file:

multibandcompressor.cpp

5.311 nlms_t Class Reference

Inheritance diagram for nlms_t:

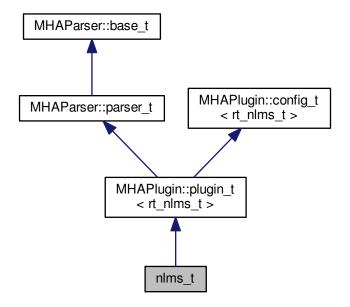

Public Member Functions

```
nlms_t (algo_comm_t, const char *, const char *)
void prepare (mhaconfig_t &)
void release ()
mha_wave_t * process (mha_wave_t *)
```

Private Member Functions

• void update ()

Private Attributes

```
MHAParser::float_t rho
MHAParser::float_t c
MHAParser::int_t ntaps
MHAParser::string_t name_u
MHAParser::string_t name_d
MHAParser::kw_t normtype
MHAParser::kw_t estimtype
MHAParser::float_t lambda_smoothing_power
MHAParser::string_t name_e
MHAParser::string_t name_f
MHAParser::int_t n_no_update
std::string_algo
```

MHAEvents::patchbay_t< nlms_t > patchbay

Additional Inherited Members

Implements MHAPlugin::plugin_t < rt_nlms_t > (p. 693).


```
5.311.2.2 void nlms_t::release (
                    void ) [virtual]
Reimplemented from MHAPlugin::plugin_t< rt_nlms_t > (p. 694).
5.311.2.3 mha_wave_t * nlms_t::process (
                    mha_wave_t * s
5.311.2.4 void nlms_t::update() [private]
5.311.3 Member Data Documentation
5.311.3.1 MHAParser::float_t nlms_t::rho [private]
5.311.3.2 MHAParser::float_t nlms_t::c [private]
5.311.3.3 MHAParser::int t nlms_t::ntaps [private]
5.311.3.4 MHAParser::string_t nlms_t::name_u [private]
5.311.3.5 MHAParser::string_t nlms_t::name_d [private]
5.311.3.6 MHAParser::kw_t nlms_t::normtype [private]
5.311.3.7 MHAParser::kw_t nlms_t::estimtype [private]
5.311.3.8 MHAParser::float_t nlms_t::lambda_smoothing_power [private]
5.311.3.9 MHAParser::string_t nlms_t::name_e [private]
5.311.3.10 MHAParser::string_t nlms_t::name_f [private]
5.311.3.11 MHAParser::int_t nlms_t::n_no_update [private]
5.311.3.12 std::string nlms_t::algo [private]
5.311.3.13 MHAEvents::patchbay t<nlms t> nlms_t::patchbay [private]
```

The documentation for this class was generated from the following file:

nlms_wave.cpp

5.312 noise_t Class Reference

Inheritance diagram for noise_t:

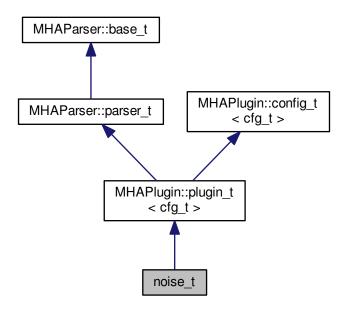

Public Member Functions

- noise_t (const algo_comm_t &, const std::string &, const std::string &)
- mha_wave_t * process (mha_wave_t *)
- mha_spec_t * process (mha_spec_t *)
- void prepare (mhaconfig_t &)
- void update_cfg ()

Private Attributes

- MHAParser::float_t lev
- MHAParser::kw_t mode
- MHAParser::float_t frozennoise_length
- MHAEvents::patchbay_t< noise_t > patchbay

Additional Inherited Members


```
5.312.1 Constructor & Destructor Documentation
5.312.1.1 noise_t::noise_t (
                     const algo_comm_t & iac,
                     const std::string &,
                     const std::string & )
5.312.2 Member Function Documentation
5.312.2.1 mha_wave_t * noise_t::process (
                     mha_wave_t * s )
5.312.2.2 mha_spec_t * noise_t::process (
                     mha\_spec\_t * s)
5.312.2.3 void noise_t::prepare (
                     mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin_t < cfg_t > (p. 693).
5.312.2.4 void noise_t::update_cfg()
5.312.3 Member Data Documentation
5.312.3.1 MHAParser::float_t noise_t::lev [private]
5.312.3.2 MHAParser::kw_t noise_t::mode [private]
5.312.3.3 MHAParser::float_t noise_t::frozennoise_length [private]
5.312.3.4 MHAEvents::patchbay_t<noise_t> noise_t::patchbay [private]
```

The documentation for this class was generated from the following file:

noise.cpp

5.313 noisePowProposedScale::interface_t Class Reference

Inheritance diagram for noisePowProposedScale::interface_t:

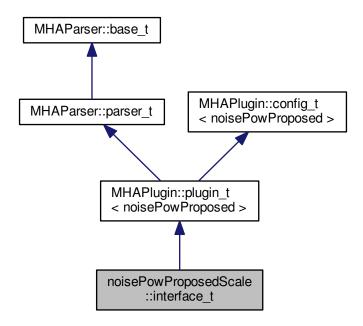

Public Member Functions

- interface_t (const algo_comm_t &, const std::string &, const std::string &)
- mha_spec_t * process (mha_spec_t *)
- void prepare (mhaconfig_t &)

Private Member Functions

void update_cfg ()

Private Attributes

- MHAParser::float_t alphaPH1mean
- MHAParser::float t alphaPSD
- MHAParser::float_t q
- MHAParser::float_t xiOptDb
- std::string name
- MHAEvents::patchbay_t< interface_t > patchbay

```
Additional Inherited Members
```

```
5.313.1 Constructor & Destructor Documentation
5.313.1.1 noisePowProposedScale::interface t:interface t(
                     const algo comm t & iac,
                     const std::string & ,
                     const std::string & iname )
5.313.2 Member Function Documentation
5.313.2.1 mha_spec_t * noisePowProposedScale::interface_t::process (
                     mha\_spec\_t * s)
5.313.2.2 void noisePowProposedScale::interface_t::prepare (
                     mhaconfig t&cf) [virtual]
Implements MHAPlugin::plugin_t< noisePowProposed > (p. 693).
5.313.2.3 void noisePowProposedScale::interface_t::update_cfg (
                     void ) [private]
5.313.3 Member Data Documentation
5.313.3.1 MHAParser::float_t noisePowProposedScale::interface_t::alphaPH1mean [private]
5.313.3.2 MHAParser::float t noisePowProposedScale::interface t::alphaPSD [private]
5.313.3.3 MHAParser::float_t noisePowProposedScale::interface_t::q [private]
5.313.3.4 MHAParser::float t noisePowProposedScale::interface_t::xiOptDb [private]
5.313.3.5 std::string noisePowProposedScale::interface_t::name [private]
5.313.3.6 MHAEvents::patchbay t<interface t> noisePowProposedScale::interface_t::patchbay
          [private]
```

The documentation for this class was generated from the following file:

noisePowProposedScale.cpp

5.314 noisePowProposedScale::noisePowProposed Class Reference

Public Member Functions

- noisePowProposed (const mhaconfig_t &cf, algo_comm_t ac, const std::string &name, float alphaPH1mean, float alphaPSD, float q, float xiOptDb)
- void process (mha_spec_t *noisyDftFrame)
- void insert ()

Private Attributes

- MHASignal::waveform_t noisyPer
- MHASignal::waveform t PH1mean
- MHA_AC::waveform_t noisePow
- MHA_AC::waveform_t inputPow
- MHA AC::waveform t snrPost1Debug
- MHA_AC::waveform_t GLRDebug
- MHA_AC::waveform_t PH1Debug
- MHA_AC::waveform_t estimateDebug
- MHA_AC::spectrum_t inputSpec
- float alphaPH1mean_
- float alphaPSD_
- float priorFact
- float xiOpt
- float logGLRFact
- float GLRexp
- int frameno

5.314.1 Constructor & Destructor Documentation

5.314.2 Member Function Documentation

```
5.314.2.1 void noisePowProposedScale::noisePowProposed::process ( mha_spec_t * noisyDftFrame )
```


5.314.2.2	void noisePowProposedScale::noisePowProposed::insert() [inline]
5.314.3 N	lember Data Documentation
5.314.3.1	MHASignal::waveform_t noisePowProposedScale::noisePowProposed::noisyPer [private]
5.314.3.2	MHASignal::waveform_t noisePowProposedScale::noisePowProposed::PH1mean [private]
5.314.3.3	MHA_AC::waveform_t noisePowProposedScale::noisePowProposed::noisePow [private]
5.314.3.4	MHA_AC::waveform_t noisePowProposedScale::noisePowProposed::inputPow [private]
5.314.3.5	$\label{lem:market} \begin{tabular}{ll} MHA_AC::waveform_t\ noisePowProposedScale::noisePowProposed::snrPost1Debug \\ [private] \end{tabular}$
5.314.3.6	MHA_AC::waveform_t noisePowProposedScale::noisePowProposed::GLRDebug [private]
5.314.3.7	MHA_AC::waveform_t noisePowProposedScale::noisePowProposed::PH1Debug [private]
5.314.3.8	$\begin{tabular}{ll} MHA_AC::waveform_t\ noisePowProposedScale::noisePowProposed::estimateDebug\ [private] \end{tabular}$
5.314.3.9	MHA_AC::spectrum_t noisePowProposedScale::noisePowProposed::inputSpec [private]
5.314.3.10	float noisePowProposedScale::noisePowProposed::alphaPH1mean_ [private]
5.314.3.11	float noisePowProposedScale::noisePowProposed::alphaPSD_ [private]
5.314.3.12	float noisePowProposedScale::noisePowProposed::priorFact [private]
5.314.3.13	<pre>float noisePowProposedScale::noisePowProposed::xiOpt [private]</pre>
5.314.3.14	float noisePowProposedScale::noisePowProposed::logGLRFact [private]
5.314.3.15	float noisePowProposedScale::noisePowProposed::GLRexp [private]
5.314.3.16	<pre>int noisePowProposedScale::noisePowProposed::frameno [private]</pre>

noisePowProposedScale.cpp

The documentation for this class was generated from the following file:

5.315 overlapadd::overlapadd_if_t Class Reference

Inheritance diagram for overlapadd::overlapadd_if_t:

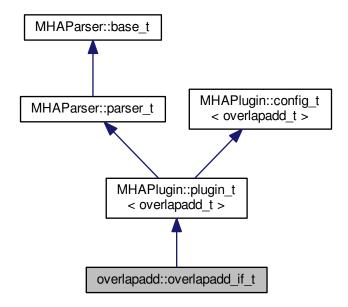

Public Member Functions

- overlapadd_if_t (const algo_comm_t &, const std::string &, const std::string &)
- ∼overlapadd_if_t ()
- void prepare (mhaconfig_t &)
- void release ()
- mha_wave_t * process (mha_wave_t *)

Private Member Functions

• void update ()

Private Attributes

- MHAEvents::patchbay_t< overlapadd_if_t > patchbay
- MHAParser::int_t nfft

FFT length to be used, zero-padding is FFT length-wndlength.

MHAParser::int_t nwnd

Window length to be used (overlap is 1-fragsize/wndlength)

```
    MHAParser::float_t wndpos
```

Relative position of zero padding (0 end, 0.5 center, 1 start)

- MHAParser::window_t window
- MHAParser::float_t wndexp
- MHAParser::window t zerowindow
- MHAParser::mhapluginloader_t plugloader
- MHAParser::float_mon_t prescale
- MHAParser::float mon t postscale
- std::string algo
- mhaconfig_t cf_in
- · mhaconfig t cf out

Additional Inherited Members

```
const std::string & ,
const std::string & ialg )
```

- 5.315.1.2 overlapadd::overlapadd_if_t::~overlapadd_if_t ()
- 5.315.2 Member Function Documentation

Implements MHAPlugin::plugin t < overlapadd t > (p. 693).

Reimplemented from MHAPlugin::plugin_t< overlapadd_t > (p. 694).

```
5.315.2.3 mha_wave_t * overlapadd::overlapadd_if_t::process ( mha_wave_t * wave_in )
```

- **5.315.2.4 void overlapadd::overlapadd_if_t::update()** [private]
- 5.315.3 Member Data Documentation
- **5.315.3.1 MHAEvents::patchbay_t**<overlapadd_if_t> overlapadd::overlapadd_if_t::patchbay [private]
- **5.315.3.2 MHAParser::int_t** overlapadd::overlapadd_if_t::nfft [private]

FFT length to be used, zero-padding is FFT length-wndlength.

```
5.315.3.3 MHAParser::int toverlapadd::overlapadd if t::nwnd [private]
Window length to be used (overlap is 1-fragsize/wndlength)
5.315.3.4 MHAParser::float toverlapadd::overlapadd_if_t::wndpos [private]
Relative position of zero padding (0 end, 0.5 center, 1 start)
5.315.3.5 MHAParser::window t overlapadd::overlapadd_if_t::window [private]
5.315.3.6 MHAParser::float toverlapadd::overlapadd_if_t::wndexp [private]
5.315.3.7 MHAParser::window t overlapadd::overlapadd_if_t::zerowindow [private]
5.315.3.8 MHAParser::mhapluginloader toverlapadd::overlapadd_if_t::plugloader [private]
5.315.3.9 MHAParser::float_mon_t overlapadd::overlapadd_if_t::prescale [private]
5.315.3.10 MHAParser::float_mon_t overlapadd::overlapadd_if_t::postscale [private]
5.315.3.11 std::string overlapadd::overlapadd_if_t::algo [private]
5.315.3.12 mhaconfig toverlapadd::overlapadd if t::cf in [private]
5.315.3.13 mhaconfig toverlapadd::overlapadd if t::cf out [private]
```

The documentation for this class was generated from the following file:

overlapadd.cpp

5.316 overlapadd::overlapadd t Class Reference

Public Member Functions

- overlapadd_t (mhaconfig_t spar_in, mhaconfig_t spar_out, float wexp, float wnd-pos, const MHAParser::window_t &window, const MHAParser::window_t &zerowindow, float &prescale_fac, float &postscale_fac)
- ∼overlapadd_t ()
- mha_spec_t * ola1 (mha_wave_t *)
- mha_wave_t * ola2 (mha_spec_t *)

Private Attributes

```
· mha fft t fft

    MHAWindow::base_t prewnd

    MHAWindow::base_t postwnd

    MHASignal::waveform t wave in1

    MHASignal::waveform_t wave_out1

    MHASignal::spectrum t spec in

    MHASignal::waveform_t calc_out

    MHASignal::waveform_t out_buf

    MHASignal::waveform_t write_buf

   • unsigned int n_zero
   unsigned int n_pad1
   unsigned int n_pad2
5.316.1 Constructor & Destructor Documentation
5.316.1.1 overlapadd::overlapadd_t::overlapadd_t (
                     mhaconfig t spar_in,
                     mhaconfig_t spar_out,
                     float wexp,
                     float wndpos,
                     const MHAParser::window_t & window,
                     const MHAParser::window t & zerowindow,
                     float & prescale_fac,
                     float & postscale_fac )
5.316.1.2 overlapadd::overlapadd_t::~overlapadd_t ( )
5.316.2 Member Function Documentation
5.316.2.1 mha spec t * overlapadd::overlapadd_t::ola1 (
                     mha_wave_t * s )
5.316.2.2 mha_wave_t * overlapadd::overlapadd_t::ola2 (
                     mha\_spec\_t * s)
5.316.3 Member Data Documentation
5.316.3.1 mha_fft_t overlapadd::overlapadd_t::fft [private]
5.316.3.2 MHAWindow::base_t overlapadd::overlapadd_t::prewnd [private]
```

5.316.3.3 MHAWindow::base_t overlapadd::overlapadd_t::postwnd [private]


```
5.316.3.4 MHASignal::waveform_t overlapadd::overlapadd_t::wave_in1 [private]
5.316.3.5 MHASignal::waveform_t overlapadd::overlapadd_t::wave_out1 [private]
5.316.3.6 MHASignal::spectrum_t overlapadd::overlapadd_t::spec_in [private]
5.316.3.7 MHASignal::waveform toverlapadd::overlapadd t::calc out [private]
5.316.3.8 MHASignal::waveform_t overlapadd::overlapadd_t::out_buf [private]
5.316.3.9 MHASignal::waveform_t overlapadd::overlapadd_t::write_buf [private]
5.316.3.10 unsigned int overlapadd::overlapadd_t::n_zero [private]
5.316.3.11 unsigned int overlapadd::overlapadd_t::n_pad1 [private]
5.316.3.12 unsigned int overlapadd::overlapadd_t::n_pad2 [private]
```

The documentation for this class was generated from the following file:

overlapadd.cpp

5.317 parser_int_dyn Class Reference

Inheritance diagram for parser_int_dyn:

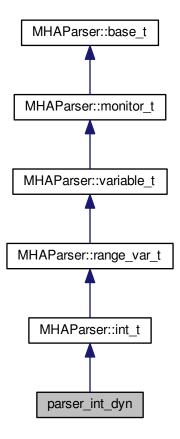

Public Member Functions

- parser_int_dyn (const std::string &help_text, const std::string &initial_value, const std
 ::string &range)
- void set_max_angle_ind (unsigned int max_ind)

Additional Inherited Members

5.317.1 Constructor & Destructor Documentation

5.317.2 Member Function Documentation


The documentation for this class was generated from the following file:

· steerbf.h

5.318 plingploing::if_t Class Reference

Plugin class of the plingploing music generator.

Inheritance diagram for plingploing::if_t:

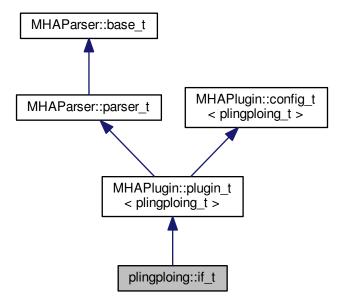

Public Member Functions

- if_t (algo_comm_t, const char *, const char *)
- mha_wave_t * process (mha_wave_t *)
- void prepare (mhaconfig_t &cf)

Private Member Functions

• void update ()

Private Attributes

```
    MHAEvents::patchbay_t< if_t > patchbay
```

MHAParser::float_t level

Output level in dB SPL.

MHAParser::float_t pitch

Bass pitch in Hz.

MHAParser::float_t fun1_key
 Key1.

• MHAParser::float_t fun1_range Range1.

• MHAParser::float_t fun2_key

Kev 2.

• MHAParser::float_t fun2_range Range 2.

MHAParser::float_t bpm

Speed in beats per minute (bpm)

MHAParser::float_t minlen

Minimum note length in beats.

MHAParser::float_t maxlen

Maximum note length in beats.

MHAParser::float_t bassmod

Bass key modulation depth.

MHAParser::float_t bassperiod

Bass key modulation period.

Additional Inherited Members

5.318.1 Detailed Description

Plugin class of the plingploing music generator.

5.318.2 Constructor & Destructor Documentation

5.318.3 Member Function Documentation

Implements MHAPlugin::plugin_t < plingploing_t > (p. 693).

mhaconfig_t & cf) [virtual]

```
5.318.3.3 void plingploing::if_t::update( ) [private]
5.318.4 Member Data Documentation
5.318.4.1 MHAEvents::patchbay_t<if_t> plingploing::if_t::patchbay [private]
5.318.4.2 MHAParser::float_t plingploing::if_t::level [private]
Output level in dB SPL.
5.318.4.3 MHAParser::float_t plingploing::if_t::pitch [private]
Bass pitch in Hz.
5.318.4.4 MHAParser::float_t plingploing::if_t::fun1_key [private]
Key1.
5.318.4.5 MHAParser::float_t plingploing::if_t::fun1_range [private]
Range1.
5.318.4.6 MHAParser::float_t plingploing::if_t::fun2_key [private]
Key 2.
5.318.4.7 MHAParser::float_t plingploing::if_t::fun2_range [private]
Range 2.
5.318.4.8 MHAParser::float_t plingploing::if_t::bpm [private]
Speed in beats per minute (bpm)
5.318.4.9 MHAParser::float_t plingploing::if_t::minlen [private]
Minimum note length in beats.
5.318.4.10 MHAParser::float_t plingploing::if_t::maxlen [private]
Maximum note length in beats.
```

5.318.4.11 MHAParser::float_t plingploing::if_t::bassmod [private]

Bass key modulation depth.

5.318.4.12 MHAParser::float_t plingploing::if_t::bassperiod [private]

Bass key modulation period.

The documentation for this class was generated from the following file:

· plingploing.cpp

5.319 plingploing::plingploing_t Class Reference

Run-time configuration of the plingploing music generator.

Public Member Functions

- plingploing_t (mhaconfig_t, mha_real_t level, mha_real_t pitch, mha_real_t k1, mha_real_t k2, mha_real_t i1, mha_real_t i2, mha_real_t bpm, mha_real_t minlen, mha_real_t maxlen, mha_real_t bassmod, mha_real_t bassperiod)
- void process (mha_wave_t *)

Private Attributes

- · mhaconfig_t cf
- mha_real_t pitch_
- unsigned int bt
- unsigned int t
- unsigned int len
- mha_real_t dur_
- mha_real_t minlen_
- mha_real_t maxlen_
- mha_real_t bass
- · mha real t freq
- mha_real_t fun1_key
- mha_real_t fun1_range
- mha_real_t fun1
- mha_real_t fun2
- mha_real_t fun2_key
- mha_real_t fun2_range
- mha_real_t dist
- mha real t dist1
- mha_real_t alph
- · mha real trms
- mha_real_t bassmod_
- mha_real_t bassperiod_
- MHAWindow::hanning_t hann1
- MHAWindow::hanning_t hann2
- mha_real_t level

5.319.1 Detailed Description

Run-time configuration of the plingploing music generator.

```
5.319.2 Constructor & Destructor Documentation
         plingploing::plingploing t::plingploing t (
5.319.2.1
                      mhaconfig_t c,
                      mha_real_t level,
                      mha_real_t pitch,
                      mha real t k1,
                      mha real t k2.
                      mha real t i1,
                      mha_real_t i2,
                      mha real t bpm,
                      mha_real_t minlen,
                      mha real t maxlen,
                      mha real t bassmod,
                      mha_real_t bassperiod )
5.319.3 Member Function Documentation
5.319.3.1
         void plingploing::plingploing_t::process (
                      mha_wave_t * s )
5.319.4 Member Data Documentation
5.319.4.1
          mhaconfig_t plingploing::plingploing_t::cf [private]
5.319.4.2 mha_real_t plingploing::plingploing_t::pitch_ [private]
5.319.4.3
         unsigned int plingploing::plingploing_t::bt [private]
5.319.4.4
         unsigned int plingploing::plingploing_t::t [private]
          unsigned int plingploing::plingploing_t::len [private]
5.319.4.5
5.319.4.6 mha real t plingploing::plingploing_t::dur_ [private]
5.319.4.7 mha_real_t plingploing::plingploing_t::minlen_ [private]
5.319.4.8 mha_real_t plingploing::plingploing_t::maxlen_ [private]
5.319.4.9 mha_real_t plingploing::plingploing_t::bass [private]
```


```
5.319.4.10
          mha_real_t plingploing::plingploing_t::freq [private]
5.319.4.11
          mha real t plingploing::plingploing t::fun1 key [private]
5.319.4.12 mha_real_t plingploing::plingploing_t::fun1_range [private]
5.319.4.13 mha_real_t plingploing::plingploing_t::fun1 [private]
5.319.4.14 mha_real_t plingploing::plingploing_t::fun2 [private]
5.319.4.15 mha_real_t plingploing::plingploing_t::fun2_key [private]
5.319.4.16 mha_real_t plingploing::plingploing_t::fun2_range [private]
5.319.4.17 mha_real_t plingploing::plingploing_t::dist [private]
5.319.4.18 mha real t plingploing::plingploing_t::dist1 [private]
5.319.4.19 mha_real_t plingploing::plingploing_t::alph [private]
5.319.4.20 mha_real_t plingploing::plingploing_t::rms [private]
5.319.4.21
          mha real t plingploing::plingploing_t::bassmod_ [private]
5.319.4.22
          mha_real_t plingploing::plingploing_t::bassperiod_ [private]
5.319.4.23
          MHAWindow::hanning t plingploing::plingploing_t::hann1 [private]
5.319.4.24
          MHAWindow::hanning_t plingploing::plingploing_t::hann2 [private]
5.319.4.25
          mha_real_t plingploing::plingploing_t::level [private]
```

The documentation for this class was generated from the following file:

plingploing.cpp

5.320 plug_t Class Reference

Inheritance diagram for plug_t:

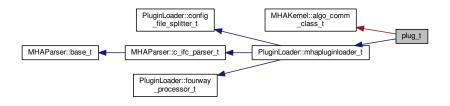

Public Member Functions

```
    plug_t (const std::string &libname, const std::string &chain, const std::string &algo)
    ~plug_t () throw ()
    MHAProc_wave2wave_t get_process_wave ()
    MHAProc_wave2spec_t get_process_spec ()
```

void * get_handle ()

algo_comm_t get_ac ()

Additional Inherited Members


```
5.320.1 Constructor & Destructor Documentation
```

The documentation for this class was generated from the following file:

· analysispath.cpp

5.321 plugin_interface_t Class Reference

Inheritance diagram for plugin_interface_t:

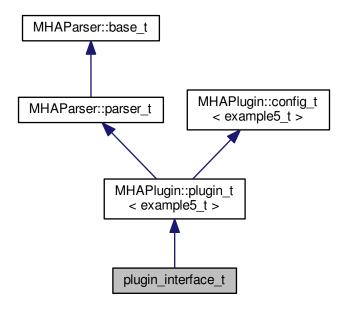

Public Member Functions

- plugin_interface_t (const algo_comm_t &, const std::string &, const std::string &)
- mha_spec_t * process (mha_spec_t *)
- void prepare (mhaconfig_t &)

Private Member Functions

void update_cfg ()

Private Attributes

- MHAParser::int_t scale_ch
- MHAParser::float_t factor
- MHAEvents::patchbay_t< plugin_interface_t > patchbay

Additional Inherited Members

```
5.321.1 Constructor & Destructor Documentation
5.321.1.1 plugin_interface_t::plugin_interface_t (
                      const algo_comm_t & iac,
                      const std::string & .
                      const std::string & )
5.321.2 Member Function Documentation
5.321.2.1 mha spec t * plugin_interface_t::process (
                      mha_spec_t * spec )
5.321.2.2 void plugin interface t::prepare (
                      mhaconfig_t & tfcfg ) [virtual]
Implements MHAPlugin::plugin_t < example5_t > (p. 693).
5.321.2.3 void plugin_interface_t::update_cfg( ) [private]
5.321.3 Member Data Documentation
5.321.3.1 MHAParser::int_t plugin_interface_t::scale_ch [private]
5.321.3.2 MHAParser::float_t plugin_interface_t::factor [private]
5.321.3.3 MHAEvents::patchbay_t<plugin_interface_t> plugin_interface_t::patchbay
          [private]
```

The documentation for this class was generated from the following file:

example5.cpp

5.322 pluginbrowser_t Class Reference

Public Member Functions

- pluginbrowser t()
- void get_paths ()
- plugindescription_t scan_plugin (const std::string &name)
- void add plugins ()
- void clear plugins ()
- void scan_plugins ()
- void add_plugin (const std::string &name)
- std::list< plugindescription_t > get_plugins () const

Private Attributes

```
    std::string plugin_extension
```

- std::list< std::string > library_paths
- std::list< plugindescription_t > plugins
- std::map< std::string, pluginloader_t * > p

```
5.322.1 Constructor & Destructor Documentation
5.322.1.1
          pluginbrowser_t::pluginbrowser_t ( )
5.322.2 Member Function Documentation
5.322.2.1
          void pluginbrowser_t::get_paths ( )
5.322.2.2 plugindescription_t pluginbrowser_t::scan_plugin (
                       const std::string & name )
5.322.2.3 void pluginbrowser_t::add_plugins ( )
5.322.2.4 void pluginbrowser_t::clear_plugins ( )
5.322.2.5 void pluginbrowser_t::scan_plugins ( )
5.322.2.6 void pluginbrowser_t::add_plugin (
                       const std::string & name )
5.322.2.7 std::list<plugindescription_t> pluginbrowser_t::get_plugins() const [inline]
5.322.3 Member Data Documentation
5.322.3.1
          std::string pluginbrowser_t::plugin_extension [private]
5.322.3.2
         std::list<std::string> pluginbrowser_t::library_paths [private]
5.322.3.3 std::list<plugindescription_t> pluginbrowser_t::plugins [private]
5.322.3.4 std::map<std::string,pluginloader_t*> pluginbrowser_t::p [private]
```

The documentation for this class was generated from the following files:

- pluginbrowser.h
- pluginbrowser.cpp

5.323 plugindescription_t Class Reference

Public Attributes

- std::string name
- std::string fullname
- std::string documentation
- std::vector< std::string > categories
- bool wave2wave
- bool wave2spec
- bool spec2wave
- bool spec2spec
- std::vector< std::string > query_cmds
- std::map< std::string, std::string > queries

5.323.1	Mombor Da	ta Documentation
5.3Z3.1	wember Da	ita Documentation


- 5.323.1.1 std::string plugindescription_t::name
- 5.323.1.2 std::string plugindescription_t::fullname
- 5.323.1.3 std::string plugindescription_t::documentation
- 5.323.1.4 std::vector<std::string> plugindescription_t::categories
- 5.323.1.5 bool plugindescription_t::wave2wave
- 5.323.1.6 bool plugindescription_t::wave2spec
- 5.323.1.7 bool plugindescription t::spec2wave
- 5.323.1.8 bool plugindescription_t::spec2spec
- 5.323.1.9 std::vector<std::string> plugindescription_t::query_cmds
- 5.323.1.10 std::map<std::string> plugindescription_t::queries

The documentation for this class was generated from the following file:

· pluginbrowser.h

5.324 PluginLoader::config_file_splitter_t Class Reference

Inheritance diagram for PluginLoader::config_file_splitter_t:

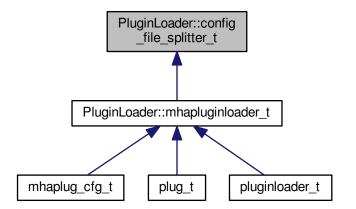

Public Member Functions

- config_file_splitter_t (const std::string &name)
- const std::string & get_configname () const
- const std::string & get_libname () const
- const std::string & get_origname () const
- const std::string & get_configfile () const

Private Attributes

- std::string libname
- std::string configname
- std::string origname
- std::string configfile

5.324.1 Constructor & Destructor Documentation

5.324.1.1 PluginLoader::config_file_splitter_t (const std::string & name)

5.324.2 Member Function Documentation

```
5.324.2.1
          const std::string& PluginLoader::config file splitter t::get configname ( ) const
           [inline]
5.324.2.2
          const std::string& PluginLoader::config_file_splitter_t::get_libname( ) const [inline]
5.324.2.3
          const std::string& PluginLoader::config file splitter t::get origname( ) const [inline]
5.324.2.4
          const std::string& PluginLoader::config_file_splitter_t::get_configfile( ) const [inline]
5.324.3 Member Data Documentation
5.324.3.1
          std::string PluginLoader::config_file_splitter_t::libname [private]
5.324.3.2
          std::string PluginLoader::config file splitter t::configname [private]
5.324.3.3
          std::string PluginLoader::config_file_splitter_t::origname [private]
          std::string PluginLoader::config_file_splitter_t::configfile [private]
```


The documentation for this class was generated from the following files:

- · mhapluginloader.h
- mhapluginloader.cpp

5.325 PluginLoader::fourway_processor_t Class Reference

This abstract class defines the interface for classes that implement all types of signal domain processing supported by the MHA: wave2wave, spec2spec, wave2spec, and spec2wave.

Inheritance diagram for PluginLoader::fourway_processor_t:

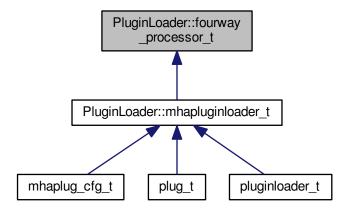

Public Member Functions

- virtual void process (mha_wave_t *s_in, mha_wave_t **s_out)=0
 Pure waveform processing.
- virtual void **process** (**mha_spec_t** *s_in, **mha_spec_t** **s_out)=0 *Pure spectrum processing.*
- virtual void **process** (**mha_wave_t** *s_in, **mha_spec_t** **s_out)=0

 Signal processing with domain transformation from waveform to spectrum.
- virtual void **process** (**mha_spec_t** *s_in, **mha_wave_t** **s_out)=0

 Signal processing with domain transformation from spectrum to waveform.
- virtual void prepare (mhaconfig_t &settings)=0
 Prepares the processor for signal processing.
- virtual void release ()=0

Resources allocated for signal processing in **fourway_processor_t::prepare** (p. 843) are released here in **fourway_processor_t::release** (p. 843).

- virtual std::string **parse** (const std::string &query)=0 Parser interface.
- virtual ~fourway_processor_t ()

Classes with virtual methods need virtual destructor.

5.325.1 Detailed Description

This abstract class defines the interface for classes that implement all types of signal domain processing supported by the MHA: wave2wave, spec2spec, wave2spec, and spec2wave.

For supporting different output domains for the same input domain, the processing methods are overloaded with respect to input domain and output domain.

```
5.325.2 Constructor & Destructor Documentation
```

```
5.325.2.1 virtual PluginLoader::fourway_processor_t::~fourway_processor_t() [inline], [virtual]
```

Classes with virtual methods need virtual destructor.

This destructor is empty.

5.325.3 Member Function Documentation

Pure waveform processing.

Parameters

s_in	input waveform signal
s_out	output waveform signal

Implemented in PluginLoader::mhapluginloader_t (p. 846).

Pure spectrum processing.

Parameters

s_in	input spectrum signal
s_out	output spectrum signal

Implemented in PluginLoader::mhapluginloader_t (p. 846).

Signal processing with domain transformation from waveform to spectrum.

Parameters

s_in	input waveform signal
s_out	output spectrum signal

Implemented in **PluginLoader::mhapluginloader_t** (p. 846).

Signal processing with domain transformation from spectrum to waveform.

Parameters

s_in	input spectrum signal
s_out	output waveform signal

Implemented in **PluginLoader::mhapluginloader_t** (p. 846).

Prepares the processor for signal processing.

Parameters

settings	domain and dimensions of the signal. The contents of settings may be modified
	by the prepare implementation. Upon calling fourway_processor_t::prepare
	(p. 843), settings reflects domain and dimensions of the input signal. When
	fourway_processor_t::prepare (p. 843) returns, settings reflects domain and
	dimensions of the output signal.

Implemented in **PluginLoader::mhapluginloader_t** (p. 846).

```
5.325.3.6 virtual void PluginLoader::fourway_processor_t::release() [pure virtual]
```

Resources allocated for signal processing in **fourway_processor_t::prepare** (p. 843) are released here in **fourway_processor_t::release** (p. 843).

Implemented in PluginLoader::mhapluginloader_t (p. 846).

Parser interface.


Implemented in PluginLoader::mhapluginloader_t (p. 846).

The documentation for this class was generated from the following file:

mhapluginloader.h

5.326 PluginLoader::mhapluginloader_t Class Reference

Inheritance diagram for PluginLoader::mhapluginloader_t:

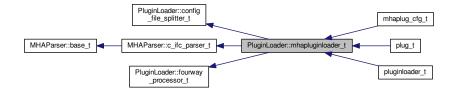

Public Member Functions

- std::string **parse** (const std::string &str)
- mhapluginloader_t (algo_comm_t iac, const std::string &libname, bool check_← version=true)

Loads and initializes mha plugin and establishes interface.

- ~mhapluginloader t () throw ()
- bool has process (mha domain t in, mha domain t out) const
- bool has parser () const
- mha_domain_t input_domain () const
- mha_domain_t output_domain () const
- void prepare (mhaconfig_t &)
- void release ()
- void process (mha_wave_t *, mha_wave_t **)
- void process (mha_spec_t *, mha_spec_t **)
- void process (mha_wave_t *, mha_spec_t **)
- void process (mha spec t *, mha wave t **)
- std::string getfullname () const
- std::string get_documentation () const
- std::vector< std::string > get_categories () const
- bool is_prepared () const

Protected Member Functions

- void test error ()
- void test_version ()
- void mha_test_struct_size (unsigned int s)
- void resolve and init ()

Protected Attributes

- int lib err
- · algo_comm_t ac
- · dynamiclib t lib handle
- void * lib_data
- MHAGetVersion t MHAGetVersion cb
- · MHAInit t MHAInit cb
- MHADestroy t MHADestroy cb
- MHAPrepare_t MHAPrepare_cb
- MHARelease t MHARelease cb
- MHAProc_wave2wave_t MHAProc_wave2wave_cb
- MHAProc_spec2spec_t MHAProc_spec2spec_cb
- MHAProc_wave2spec_t MHAProc_wave2spec_cb
- MHAProc_spec2wave_t MHAProc_spec2wave_cb
- MHASet_t MHASet_cb
- MHAStrError_t MHAStrError_cb

- mhaconfig_t cf_input
- mhaconfig_t cf_output
- std::string plugin_documentation
- std::vector< std::string > plugin_categories
- bool b_check_version
- bool b is prepared

Additional Inherited Members

5.326.1 Constructor & Destructor Documentation

Loads and initializes mha plugin and establishes interface.

Parameters

iac	AC space (algorithm communication variables)
libname	Either file name of MHA plugin without platform-specific extension (i.e. "identity" for "identity.so" or "identity.dll") to be found on the MHA_LIBRARY_PATH (which is an environment variable). Or the same file name without extension followed by a colon ":" followed by the "configuration name" of the MHA plugin, which may be used to differentiate between multiple identical MHA plugins or to give the plugin a self-documenting name that fits its purpose. The library name - configuration name expression can be followed by a "<" followed by a configuration file name, which will be read after initialization of the plugin.

Example: "overlapadd:agc<compression.cfg" will load the plugin "overlapadd.so" or "overlapadd.dll", insert it as the configuration node "agc", and reads the configuration file "compression.cfg" into that node.

Parameters

check_version	Pluginloader will not check that the plugin was built using a known
	compatible MHA version if this flag is set to false. Disabling version check
	is discouraged.

5.326.1.2 PluginLoader::mhapluginloader_t::~mhapluginloader_t () throw)

5.326.2 Member Function Documentation

```
5.326.2.1 std::string PluginLoader::mhapluginloader_t::parse (
                     const std::string & str ) [inline], [virtual]
Implements PluginLoader::fourway processor t (p. 843).
5.326.2.2 bool PluginLoader::mhapluginloader t::has process (
                     mha_domain_t in,
                     mha domain t out ) const
5.326.2.3 bool PluginLoader::mhapluginloader_t::has_parser ( ) const
5.326.2.4
         mha domain t PluginLoader::mhapluginloader_t::input_domain() const
5.326.2.5 mha_domain_t PluginLoader::mhapluginloader_t::output_domain() const
5.326.2.6 void PluginLoader::mhapluginloader_t::prepare (
                     mhaconfig_t & tf ) [virtual]
Implements PluginLoader::fourway processor t (p. 843).
5.326.2.7 void PluginLoader::mhapluginloader t::release ( ) [virtual]
Implements PluginLoader::fourway processor t (p. 843).
5.326.2.8 void PluginLoader::mhapluginloader_t::process (
                     mha wave t * s_in,
                     mha_wave_t ** s_out ) [virtual]
Implements PluginLoader::fourway_processor_t (p. 841).
5.326.2.9 void PluginLoader::mhapluginloader_t::process (
                     mha spec t * s_in,
                     mha_spec_t ** s_out ) [virtual]
Implements PluginLoader::fourway_processor_t (p. 842).
5.326.2.10 void PluginLoader::mhapluginloader t::process (
                      mha wave t * s_in,
                      mha_spec_t ** s_out ) [virtual]
Implements PluginLoader::fourway processor t (p. 842).
5.326.2.11 void PluginLoader::mhapluginloader t::process (
                      mha_spec_t * s_in,
                      mha_wave_t ** s_out ) [virtual]
Implements PluginLoader::fourway_processor_t (p. 842).
```

```
5.326.2.12 std::string PluginLoader::mhapluginloader_t::getfullname() const [inline]
5.326.2.13 std::string PluginLoader::mhapluginloader_t::get_documentation() const [inline]
5.326.2.14 std::vector<std::string> PluginLoader::mhapluginloader t::get categories ( ) const
          [inline]
5.326.2.15 bool PluginLoader::mhapluginloader_t::is_prepared() const [inline]
5.326.2.16 void PluginLoader::mhapluginloader_t::test_error() [protected]
5.326.2.17 void PluginLoader::mhapluginloader_t::test_version() [protected]
5.326.2.18 void PluginLoader::mhapluginloader_t::mha_test_struct_size (
                      unsigned int s ) [protected]
5.326.2.19 void PluginLoader::mhapluginloader_t::resolve_and_init() [protected]
5.326.3 Member Data Documentation
         int PluginLoader::mhapluginloader_t::lib_err [protected]
5.326.3.1
         algo comm_t PluginLoader::mhapluginloader_t::ac [protected]
5.326.3.2
         dynamiclib_t PluginLoader::mhapluginloader_t::lib_handle [protected]
5.326.3.3
5.326.3.4 void* PluginLoader::mhapluginloader_t::lib_data [protected]
5.326.3.5 MHAGetVersion_t PluginLoader::mhapluginloader_t::MHAGetVersion_cb
         [protected]
5.326.3.6 MHAInit_t PluginLoader::mhapluginloader_t::MHAInit_cb [protected]
5.326.3.7 MHADestroy_t PluginLoader::mhapluginloader_t::MHADestroy_cb [protected]
5.326.3.8 MHAPrepare t PluginLoader::mhapluginloader_t::MHAPrepare_cb [protected]
5.326.3.9 MHARelease_t PluginLoader::mhapluginloader_t::MHARelease_cb [protected]
5.326.3.10 MHAProc wave2wave t PluginLoader::mhapluginloader_t::MHAProc_wave2wave_cb
          [protected]
5.326.3.11
          MHAProc_spec2spec_t PluginLoader::mhapluginloader_t::MHAProc_spec2spec_cb
          [protected]
```

5.326.3.12	MHAProc_wave2spec_t PluginLoader::mhapluginloader_t::MHAProc_wave2spec_cb [protected]
5.326.3.13	MHAProc_spec2wave_t PluginLoader::mhapluginloader_t::MHAProc_spec2wave_cb [protected]
5.326.3.14	MHASet_t PluginLoader::mhapluginloader_t::MHASet_cb [protected]
5.326.3.15	MHAStrError_t PluginLoader::mhapluginloader_t::MHAStrError_cb [protected]
5.326.3.16	<pre>mhaconfig_t PluginLoader::mhapluginloader_t::cf_input [protected]</pre>
5.326.3.17	<pre>mhaconfig_t PluginLoader::mhapluginloader_t::cf_output [protected]</pre>
5.326.3.18	
5.326.3.19	std::vector <std::string> PluginLoader::mhapluginloader_t::plugin_categories [protected]</std::string>
5.326.3.20	bool PluginLoader::mhapluginloader_t::b_check_version [protected]


bool PluginLoader::mhapluginloader_t::b_is_prepared [protected]

The documentation for this class was generated from the following files:

- · mhapluginloader.h
- mhapluginloader.cpp

5.327 pluginloader_t Class Reference

Inheritance diagram for pluginloader_t:

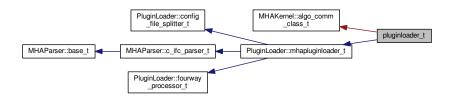

Public Member Functions

- pluginloader_t (const std::string &name)
- ∼pluginloader_t () throw ()

Additional Inherited Members

5.327.1 Constructor & Destructor Documentation


5.327.1.2 pluginloader_t::~pluginloader_t () throw)

The documentation for this class was generated from the following files:

- · pluginbrowser.h
- · pluginbrowser.cpp

5.328 prediction_error Class Reference

Inheritance diagram for prediction_error:

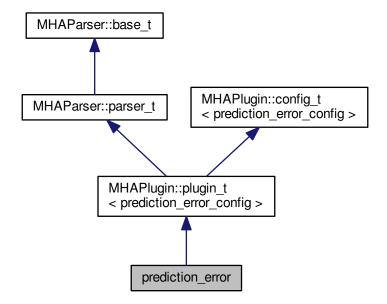

Public Member Functions

prediction_error (algo_comm_t &ac, const std::string &chain_name, const std::string &algo_name)

Constructs our plugin.

- ~prediction_error ()
- mha_wave_t * process (mha_wave_t *)

Checks for the most recent configuration and defers processing to it.

void prepare (mhaconfig t &)

Plugin preparation.

• void release (void)

Public Attributes

- MHAParser::float t rho
- MHAParser::float_t c
- MHAParser::int_t ntaps
- MHAParser::vfloat t gains
- · MHAParser::string t name e
- MHAParser::string_t name_f
- MHAParser::string_t name_lpc
- MHAParser::int t lpc order
- MHAParser::vint_t pred_err_delay
- MHAParser::vint_t delay_w
- MHAParser::vint_t delay_d
- MHAParser::int_t n_no_update

Private Member Functions

• void update cfg ()

Private Attributes

MHAEvents::patchbay_t< prediction_error > patchbay

Additional Inherited Members

5.328.1 Constructor & Destructor Documentation

Constructs our plugin.

```
5.328.1.2 prediction_error::~prediction_error()
5.328.2 Member Function Documentation
5.328.2.1 mha_wave_t * prediction_error::process (
                      mha_wave_t * signal )
Checks for the most recent configuration and defers processing to it.
5.328.2.2 void prediction_error::prepare (
                      mhaconfig_t & signal_info ) [virtual]
Plugin preparation.
An opportunity to validate configuration parameters before instantiating a configuration.
Parameters
 signal info
              Structure containing a description of the form of the signal (domain, number of
              channels, frames per block, sampling rate.
Implements MHAPlugin::plugin_t< prediction_error_config > (p. 693).
5.328.2.3 void prediction_error::release (
                      void ) [inline],[virtual]
Reimplemented from MHAPlugin::plugin_t< prediction_error_config > (p. 694).
        void prediction_error::update_cfg( ) [private]
5.328.2.4
5.328.3 Member Data Documentation
5.328.3.1 MHAParser::float_t prediction_error::rho
5.328.3.2 MHAParser::float_t prediction_error::c
5.328.3.3 MHAParser::int_t prediction_error::ntaps
5.328.3.4 MHAParser::vfloat_t prediction_error::gains
```

5.328.3.5 MHAParser::string_t prediction_error::name_e

5.328.3.6 MHAParser::string_t prediction_error::name_f

```
5.328.3.7 MHAParser::string_t prediction_error::name_lpc
5.328.3.8 MHAParser::int_t prediction_error::lpc_order
5.328.3.9 MHAParser::vint_t prediction_error::pred_err_delay
5.328.3.10 MHAParser::vint_t prediction_error::delay_w
5.328.3.11 MHAParser::vint_t prediction_error::delay_d
5.328.3.12 MHAParser::int_t prediction_error::n_no_update
5.328.3.13 MHAEvents::patchbay_tprediction_error::patchbay_private
```

The documentation for this class was generated from the following files:

- · prediction_error.h
- prediction_error.cpp

5.329 prediction_error_config Class Reference

Public Member Functions

- prediction_error_config (algo_comm_t &ac, const mhaconfig_t in_cfg, prediction
 —error *pred_err)
- ~prediction_error_config ()
- mha_wave_t * process (mha_wave_t *s_Y, mha_real_t rho, mha_real_t c)
- void insert ()

Private Attributes

- · algo_comm_t ac
- unsigned int ntaps
- · unsigned int frames
- unsigned int channels
- MHA AC::waveform ts E
- MHA_AC::waveform_t F
- MHASignal::waveform_t Pu

Power of input signal delayline.

- std::string name_d_
- std::string name_lpc_
- int n_no_update_
- int no iter

- int iterMHASignal:::
- MHASignal::waveform_t v_G
- MHASignal::waveform_t s_U
- MHASignal::delay_t s_E_pred_err_delay
- MHASignal::delay_t s_W
- MHASignal::ringbuffer_t s_Wflt
- MHASignal::delay_t s_U_delay
- MHASignal::ringbuffer_t s_U_delayflt
- MHASignal::waveform_t F_Uflt
- MHASignal::delay_t s_Y_delay
- MHASignal::ringbuffer_t s_Y_delayflt
- MHASignal::ringbuffer_t UbufferPrew
- mha_wave_t s_LPC
- mha_wave_t UPrew
- mha_wave_t YPrew
- mha_wave_t EPrew
- mha_wave_t UPrewW
- mha_wave_t smpl
- mha_wave_t * s_Usmpl
- 5.329.1 Constructor & Destructor Documentation
- 5.329.1.2 prediction_error_config::~prediction_error_config()
- 5.329.2 Member Function Documentation
- 5.329.2.2 void prediction_error_config::insert ()
- 5.329.3 Member Data Documentation
- **5.329.3.1 algo_comm_t** prediction_error_config::ac [private]
- **5.329.3.2 unsigned int prediction_error_config::ntaps** [private]

```
5.329.3.3
         unsigned int prediction_error_config::frames [private]
5.329.3.4
         unsigned int prediction_error_config::channels [private]
5.329.3.5 MHA_AC::waveform_t prediction_error_config::s_E [private]
5.329.3.6
         MHA_AC::waveform_t prediction_error_config::F [private]
5.329.3.7
         MHASignal::waveform_t prediction_error_config::Pu [private]
Power of input signal delayline.
         std::string prediction_error_config::name_d_ [private]
5.329.3.9 std::string prediction_error_config::name_lpc_ [private]
5.329.3.10 int prediction_error_config::n_no_update_ [private]
5.329.3.11 int prediction_error_config::no_iter [private]
5.329.3.12 int prediction_error_config::iter [private]
5.329.3.13
          MHASignal::waveform_t prediction_error_config::v_G [private]
5.329.3.14 MHASignal::waveform t prediction_error_config::s_U [private]
5.329.3.15
          MHASignal::delay_t prediction_error_config::s_E_pred_err_delay [private]
5.329.3.16
          MHASignal::delay_t prediction_error_config::s_W [private]
5.329.3.17
          MHASignal::ringbuffer_t prediction_error_config::s_Wflt [private]
5.329.3.18
          MHASignal::delay t prediction_error_config::s_U_delay [private]
5.329.3.19 MHASignal::ringbuffer_t prediction_error_config::s_U_delayflt [private]
5.329.3.20
          MHASignal::waveform_t prediction_error_config::F_Uflt [private]
5.329.3.21
          MHASignal::delay_t prediction_error_config::s_Y_delay [private]
          MHASignal::ringbuffer_t prediction_error_config::s_Y_delayflt [private]
5.329.3.22
5.329.3.23 MHASignal::ringbuffer_t prediction_error_config::UbufferPrew [private]
```


```
5.329.3.24 mha_wave_t prediction_error_config::s_LPC [private]
5.329.3.25 mha_wave_t prediction_error_config::UPrew [private]
5.329.3.26 mha_wave_t prediction_error_config::YPrew [private]
5.329.3.27 mha_wave_t prediction_error_config::EPrew [private]
5.329.3.28 mha_wave_t prediction_error_config::UPrewW [private]
5.329.3.29 mha_wave_t prediction_error_config::smpl [private]
5.329.3.30 mha_wave_t* prediction_error_config::s_Usmpl [private]
```

The documentation for this class was generated from the following files:

- · prediction_error.h
- prediction_error.cpp

5.330 rmslevel_if_t Class Reference

Inheritance diagram for rmslevel_if_t:

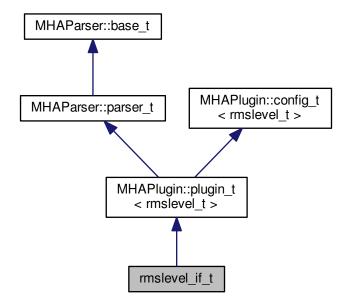

Public Member Functions

```
rmslevel_if_t (const algo_comm_t &, const std::string &, const std::string &)
mha_spec_t * process (mha_spec_t *)
mha_wave_t * process (mha_wave_t *)
void prepare (mhaconfig_t &)

Private Attributes

std::string name
```

Additional Inherited Members

```
5.330.3.1 std::string rmslevel_if_t::name [private]
```

The documentation for this class was generated from the following file:

rmslevel.cpp

5.331 rmslevel_t Class Reference

Public Member Functions

```
    rmslevel_t (unsigned int nch, algo_comm_t ac, std::string name, MHAParser::parser
        _t &p, unsigned int fftlen_)
```

- mha_spec_t * process (mha_spec_t *)
- mha_wave_t * process (mha_wave_t *)
- void insert ()

Private Attributes

- mon_t level_db
- · mon_t peak_db
- mon_t level
- mon_t peak
- · unsigned int fftlen

```
5.331.1 Constructor & Destructor Documentation
```

5.331.2 Member Function Documentation

```
5.331.2.1 mha_spec_t * rmslevel_t::process ( mha_spec_t * s )
```

```
5.331.2.2 mha_wave_t * rmslevel_t::process ( mha_wave_t * s )
```

5.331.2.3 void rmslevel_t::insert ()

5.331.3 Member Data Documentation

```
5.331.3.1 mon_t rmslevel_t::level_db [private]
```

5.331.3.2 mon_t rmslevel_t::peak_db [private]

5.331.3.3 mon_t rmslevel_t::level [private]

5.331.3.4 mon_t rmslevel_t::peak [private]


5.331.3.5 unsigned int rmslevel_t::fftlen [private]

The documentation for this class was generated from the following file:

rmslevel.cpp

5.332 route::interface_t Class Reference

Inheritance diagram for route::interface_t:

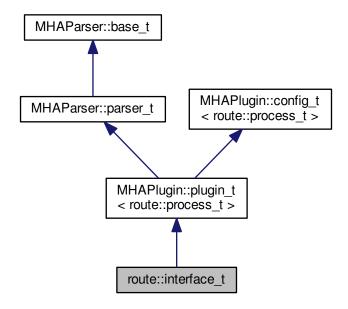

Public Member Functions

- interface_t (algo_comm_t iac, const std::string &, const std::string &)
- void prepare (mhaconfig_t &)
- void release ()
- mha_wave_t * process (mha_wave_t *)
- mha_spec_t * process (mha_spec_t *)

Private Member Functions

• void update ()

Private Attributes

- MHAEvents::patchbay_t< route::interface_t > patchbay
- MHAParser::vstring_t route_out
- MHAParser::vstring_t route_ac
- · mhaconfig_t cfin
- mhaconfig_t cfout
- mhaconfig_t cfac
- bool prepared
- · bool stopped
- std::string algo

```
Additional Inherited Members
5.332.1 Constructor & Destructor Documentation
5.332.1.1 route::interface_t::interface_t (
                      algo_comm_t iac,
                      const std::string & ,
                      const std::string & ialg )
5.332.2 Member Function Documentation
5.332.2.1 void route::interface_t::prepare (
                      mhaconfig_t & cf ) [virtual]
Implements MHAPlugin::plugin t < route::process t > (p. 693).
5.332.2.2 void route::interface_t::release (
                      void ) [virtual]
Reimplemented from MHAPlugin::plugin_t< route::process_t > (p. 694).
5.332.2.3 mha_wave_t * route::interface_t::process (
                      mha_wave_t * s )
5.332.2.4 mha spec t * route::interface t::process (
                      mha\_spec\_t * s)
5.332.2.5 void route::interface_t::update() [private]
5.332.3 Member Data Documentation
5.332.3.1 MHAEvents::patchbay_t<route::interface_t> route::interface_t::patchbay
          [private]
5.332.3.2 MHAParser::vstring_t route::interface_t::route_out [private]
5.332.3.3 MHAParser::vstring_t route::interface_t::route_ac [private]
5.332.3.4 mhaconfig t route::interface_t::cfin [private]
5.332.3.5 mhaconfig_t route::interface_t::cfout [private]
5.332.3.6 mhaconfig_t route::interface_t::cfac [private]
5.332.3.7 bool route::interface t::prepared [private]
5.332.3.8 bool route::interface_t::stopped [private]
```

The documentation for this class was generated from the following file:

5.332.3.9 std::string route::interface_t::algo [private]

route.cpp

5.333 route::process_t Class Reference

Public Member Functions

- process_t (algo_comm_t iac, const std::string acname, const std::vector< std::string > &r_out, const std::vector< std::string > &r_ac, const mhaconfig_t &cf_in, const mhaconfig_t &cf_out, const mhaconfig_t &cf_ac, bool sync)
- mha_wave_t * process (mha_wave_t *)
- mha_spec_t * process (mha_spec_t *)

Private Attributes

- MHAMultiSrc::waveform_t wout
- MHAMultiSrc::spectrum_t sout
- MHAMultiSrc::waveform_t wout_ac
- MHAMultiSrc::spectrum t sout ac

5.333.1 Constructor & Destructor Documentation

5.333.2 Member Function Documentation

```
5.333.2.1 mha_wave_t * route::process_t::process ( mha_wave_t * s )
```

5.333.3 Member Data Documentation

```
5.333.3.1 MHAMultiSrc::waveform_t route::process_t::wout [private]
```

5.333.3.2 MHAMultiSrc::spectrum_t route::process_t::sout [private]

5.333.3.3 MHAMultiSrc::waveform t route::process_t::wout_ac [private]

5.333.3.4 MHAMultiSrc::spectrum_t route::process_t::sout_ac [private]

The documentation for this class was generated from the following file:

route.cpp

5.334 rt nlms t Class Reference

Public Member Functions

- rt_nlms_t (algo_comm_t iac, const std::string &name, const mhaconfig_t &cfg, unsigned int ntaps_, const std::string &name_u, const std::string &name_d, const std::string &name_e, const std::string &name_f, const int n_no_update)
- ~rt_nlms_t ()
- mha_wave_t * process (mha_wave_t *sUD, mha_real_t rho, mha_real_t c, unsigned int norm_type, unsigned int estim_type, mha_real_t lambda_smooth)
- void **insert** ()

Private Attributes

- · algo_comm_t ac
- unsigned int ntaps
- · unsigned int frames
- · unsigned int channels
- MHA_AC::waveform_t F
- MHASignal::waveform_t U

Input signal cache.

MHASignal::waveform_t Uflt

Input signal cache (second filter)

MHASignal::waveform t Pu

Power of input signal delayline.

MHASignal::waveform_t fu

Filtered input signal.

MHASignal::waveform_t fuflt

Filtered input signal.

- MHASignal::waveform_t fu_previous
- MHASignal::waveform_t y_previous
- MHASignal::waveform_t P_Sum
- std::string name_u_
- std::string name d
- std::string name_e_
- int n_no_update_
- int no iter
- mha_wave_t s_E

```
5.334.1 Constructor & Destructor Documentation
5.334.1.1 rt_nlms_t::rt_nlms_t (
                      algo comm t iac,
                      const std::string & name,
                      const mhaconfig t & cfg,
                      unsigned int ntaps_,
                      const std::string & name u,
                      const std::string & name_d,
                      const std::string & name_e,
                      const std::string & name_f,
                      const int n_no_update )
5.334.1.2 rt_nlms_t::~rt_nlms_t( ) [inline]
5.334.2 Member Function Documentation
5.334.2.1 mha_wave_t * rt_nlms_t::process (
                      mha wave t * sUD,
                      mha real t rho,
                      mha_real_t c,
                      unsigned int norm_type,
                      unsigned int estim_type,
                      mha real t lambda_smooth )
5.334.2.2 void rt nlms t::insert ( )
5.334.3 Member Data Documentation
5.334.3.1
          algo_comm_t rt_nlms_t::ac [private]
5.334.3.2 unsigned int rt_nlms_t::ntaps [private]
5.334.3.3 unsigned int rt_nlms_t::frames [private]
5.334.3.4 unsigned int rt nlms t::channels [private]
5.334.3.5 MHA AC::waveform trt_nlms_t::F [private]
5.334.3.6 MHASignal::waveform_t rt_nlms_t::U [private]
Input signal cache.
5.334.3.7 MHASignal::waveform_t rt_nlms_t::Uflt [private]
Input signal cache (second filter)
```

```
5.334.3.8 MHASignal::waveform_t rt_nlms_t::Pu [private]
Power of input signal delayline.
5.334.3.9 MHASignal::waveform_t rt_nlms_t::fu [private]
Filtered input signal.
5.334.3.10 MHASignal::waveform_t rt_nlms_t::fuflt [private]
Filtered input signal.
          MHASignal::waveform_t rt_nlms_t::fu_previous [private]
5.334.3.11
5.334.3.12 MHASignal::waveform_t rt_nlms_t::y_previous [private]
5.334.3.13 MHASignal::waveform_t rt_nlms_t::P_Sum [private]
5.334.3.14 std::string rt_nlms_t::name_u_ [private]
5.334.3.15 std::string rt_nlms_t::name_d_ [private]
5.334.3.16 std::string rt_nlms_t::name_e_ [private]
5.334.3.17 int rt_nlms_t::n_no_update_ [private]
5.334.3.18 int rt_nlms_t::no_iter [private]
```

The documentation for this class was generated from the following file:

5.334.3.19 mha_wave_t rt_nlms_t::s_E [private]

nlms_wave.cpp

5.335 RunOnce Struct Reference

Public Member Functions

- template<typename T, typename... Args>
 RunOnce (T &&f, Args...args)
- template<typename T, typename... Args>
 RunOnce (T &&f, Args...args)

5.335.1 Constructor & Destructor Documentation


5.335.1.2 template
$$<$$
 typename T , typename... Args $>$ RunOnce::RunOnce (T && f, Args... args) [inline]

The documentation for this struct was generated from the following files:

- ac2lsl.cpp
- · ac2osc.cpp

5.336 save_spec_t Class Reference

Inheritance diagram for save_spec_t:

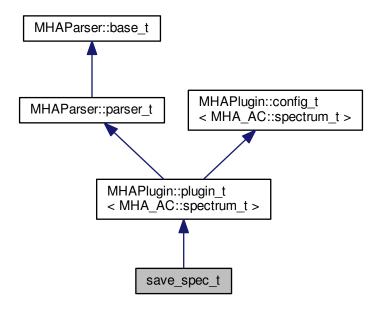

Public Member Functions

- save_spec_t (const algo_comm_t &iac, const std::string &ith, const std::string &ial)
- mha_spec_t * process (mha_spec_t *s)
- void prepare (mhaconfig_t &tf)

Private Attributes

std::string basename

Additional Inherited Members

5.336.1 Constructor & Destructor Documentation

5.336.2 Member Function Documentation

Implements MHAPlugin::plugin_t< MHA_AC::spectrum_t > (p. 693).

5.336.3 Member Data Documentation


5.336.3.1 std::string save_spec_t::basename [private]

The documentation for this class was generated from the following file:

save_spec.cpp

5.337 save_wave_t Class Reference

Inheritance diagram for save_wave_t:

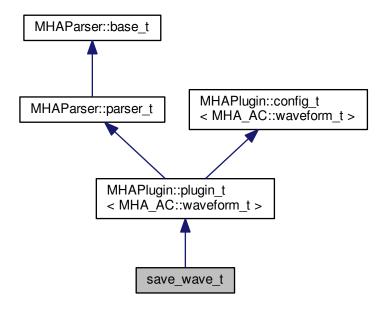

Public Member Functions

- save_wave_t (const algo_comm_t &iac, const std::string &ith, const std::string &ial)
- mha_wave_t * process (mha_wave_t *s)
- void prepare (mhaconfig_t &tf)

Private Attributes

std::string basename

Additional Inherited Members

5.337.1 Constructor & Destructor Documentation

```
5.337.2 Member Function Documentation
```

Implements MHAPlugin::plugin_t< MHA_AC::waveform_t > (p. 693).

5.337.3 Member Data Documentation

```
5.337.3.1 std::string save_wave_t::basename [private]
```

The documentation for this class was generated from the following file:

save_wave.cpp

5.338 shadowfilter_begin::cfg_t Class Reference

Public Member Functions

- cfg_t (int nfft, int inch, int outch, algo_comm_t ac, std::string name)
- mha_spec_t * process (mha_spec_t *)

Private Attributes

- MHA_AC::spectrum_t in_spec_copy
- MHASignal::spectrum_t out_spec
- MHA_AC::int_t nch
- MHA_AC::int_t ntracks

```
5.338.1 Constructor & Destructor Documentation
```

The documentation for this class was generated from the following file:


5.338.3.4 MHA_AC::int_t shadowfilter_begin::cfg_t::ntracks [private]

5.338.3.3 MHA_AC::int_t shadowfilter_begin::cfg_t::nch [private]

shadowfilter_begin.cpp

5.339 shadowfilter_begin::shadowfilter_begin_t Class Reference

Inheritance diagram for shadowfilter_begin::shadowfilter_begin_t:

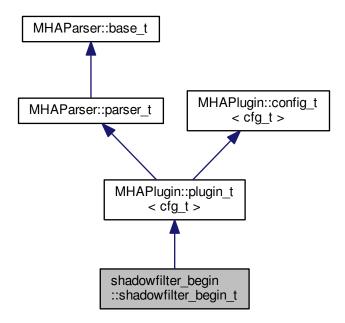

Public Member Functions

- shadowfilter_begin_t (const algo_comm_t &, const std::string &, const std::string &)
- mha_spec_t * process (mha_spec_t *)
- void prepare (mhaconfig_t &)

Private Attributes

- std::string basename
- MHAParser::int_t nch
- MHAParser::int_t ntracks

Additional Inherited Members

5.339.1 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

shadowfilter begin.cpp

5.340 shadowfilter_end::cfg_t Class Reference

Public Member Functions

```
    cfg_t (int nfft_, algo_comm_t ac_, std::string name_)
```

mha_spec_t * process (mha_spec_t *)

Private Attributes

- algo comm t ac
- std::string name
- int **nfft**
- int ntracks
- int nch_out
- mha_spec_t in_spec
- MHASignal::spectrum_t out_spec
- MHA_AC::spectrum_t gains

```
5.340.1 Constructor & Destructor Documentation
5.340.1.1 cfg_t::cfg_t (
                      int nfft_,
                      algo_comm_t ac_,
                      std::string name_ )
5.340.2 Member Function Documentation
5.340.2.1 mha_spec_t * cfg_t::process (
                      mha spec t * s)
5.340.3 Member Data Documentation
5.340.3.1 algo_comm_t shadowfilter_end::cfg_t::ac [private]
5.340.3.2 std::string shadowfilter_end::cfg_t::name [private]
5.340.3.3 int shadowfilter_end::cfg_t::nfft [private]
5.340.3.4 int shadowfilter_end::cfg_t::ntracks [private]
5.340.3.5 int shadowfilter_end::cfg_t::nch_out [private]
5.340.3.6 mha_spec_t shadowfilter_end::cfg_t::in_spec [private]
5.340.3.7 MHASignal::spectrum t shadowfilter_end::cfg_t::out_spec [private]
```


The documentation for this class was generated from the following file:

5.340.3.8 MHA_AC::spectrum_t shadowfilter_end::cfg_t::gains [private]

shadowfilter_end.cpp

5.341 shadowfilter_end::shadowfilter_end_t Class Reference

Inheritance diagram for shadowfilter_end::shadowfilter_end_t:

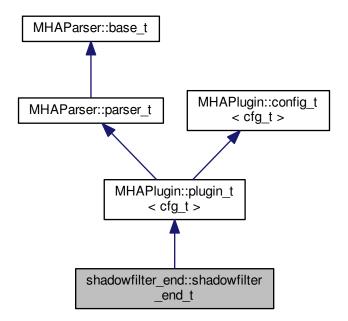

Public Member Functions

- shadowfilter_end_t (const algo_comm_t &, const std::string &, const std::string &)
- mha_spec_t * process (mha_spec_t *)
- void prepare (mhaconfig_t &)

Private Attributes

MHAParser::string_t basename

Additional Inherited Members

5.341.1 Constructor & Destructor Documentation

```
5.341.2 Member Function Documentation
```

```
Implements MHAPlugin::plugin_t < cfg_t > (p. 693).
```

5.341.3 Member Data Documentation

```
5.341.3.1 MHAParser::string_t shadowfilter_end::shadowfilter_end_t::basename [private]
```

The documentation for this class was generated from the following file:

shadowfilter_end.cpp

5.342 sine_cfg_t Struct Reference

Public Member Functions

• sine_cfg_t (double sampling_rate, mha_real_t frequency, mha_real_t newlev, int _mix, const std::vector< int > &_channels)

Public Attributes

- double phase_increment_div_2pi
- double amplitude
- int mix
- const std::vector< int > channels

5.342.1 Constructor & Destructor Documentation

5.342.2 Member Data Documentation


- 5.342.2.1 double sine_cfg_t::phase_increment_div_2pi
- 5.342.2.2 double sine_cfg_t::amplitude
- 5.342.2.3 int sine_cfg_t::mix
- 5.342.2.4 const std::vector<int> sine_cfg_t::channels

The documentation for this struct was generated from the following file:

sine.cpp

5.343 sine_t Class Reference

Inheritance diagram for sine_t:

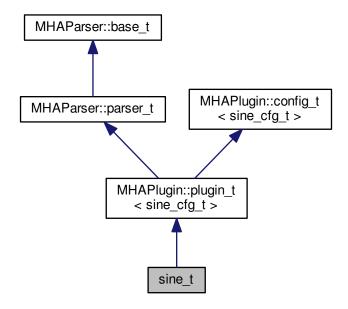

Public Member Functions

```
    sine_t (const algo_comm_t &, const std::string &chain_name, const std::string &algo← _name)
```

```
• ~sine_t ()
```

- mha_wave_t * process (mha_wave_t *)
- void prepare (mhaconfig_t &)

Private Member Functions

void update_cfg ()

Private Attributes

- MHAParser::float_t lev
- MHAParser::float_t frequency
- MHAParser::kw_t mode
- MHAParser::vint_t channels
- double phase_div_2pi
- MHAEvents::patchbay_t< sine_t > patchbay

Additional Inherited Members

```
5.343.1 Constructor & Destructor Documentation
```

Implements MHAPlugin::plugin_t < $sine_cfg_t > (p. 693)$.


```
5.343.2.3 void sine_t::update_cfg( ) [private]
5.343.3 Member Data Documentation
5.343.3.1 MHAParser::float_t sine_t::lev [private]
5.343.3.2 MHAParser::float_t sine_t::frequency [private]
5.343.3.3 MHAParser::kw_t sine_t::mode [private]
5.343.3.4 MHAParser::vint_t sine_t::channels [private]
5.343.3.5 double sine_t::phase_div_2pi [private]
5.343.3.6 MHAEvents::patchbay_t < sine_t > sine_t::patchbay [private]
```

The documentation for this class was generated from the following file:

· sine.cpp

5.344 smoothgains_bridge::overlapadd_if_t Class Reference

Inheritance diagram for smoothgains_bridge::overlapadd_if_t:

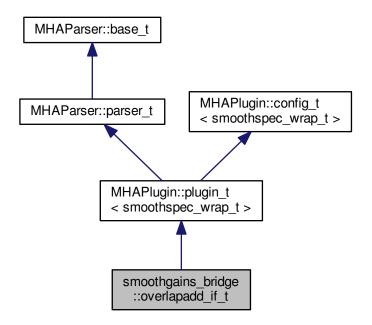

Public Member Functions

```
• overlapadd_if_t (const algo_comm_t &, const std::string &, const std::string &)
```

- ~overlapadd_if_t ()
- void prepare (mhaconfig_t &)
- void release ()
- mha_spec_t * process (mha_spec_t *)

Private Member Functions

• void update ()

Private Attributes

- MHAEvents::patchbay_t< overlapadd_if_t > patchbay
- MHAParser::kw t mode
- MHAParser::window_t irswnd
- MHAParser::float_t epsilon
- MHAParser::mhapluginloader_t plugloader
- std::string algo
- mhaconfig_t cf_in
- mhaconfig_t cf_out

Additional Inherited Members

```
5.344.1 Constructor & Destructor Documentation
```

```
5.344.1.2 smoothgains_bridge::overlapadd_if_t::~overlapadd_if_t ( )
```

5.344.2 Member Function Documentation

Implements MHAPlugin::plugin_t< smoothspec_wrap_t > (p. 693).

Reimplemented from MHAPlugin::plugin_t < smoothspec_wrap_t > (p. 694).

The documentation for this class was generated from the following file:

5.344.3.8 mhaconfig t smoothgains_bridge::overlapadd_if_t::cf_out [private]

- smoothgains_bridge.cpp
- 5.345 smoothgains_bridge::smoothspec_wrap_t Class Reference

Public Member Functions

- smoothspec_wrap_t (mhaconfig_t spar_in, mhaconfig_t spar_out, const MHA←
 Parser::kw_t &mode, const MHAParser::window_t &irswnd, const MHAParser::float←
 t &epsilon)
- mha_spec_t * proc_1 (mha_spec_t *)
- mha_spec_t * proc_2 (mha_spec_t *)

Private Attributes

- MHASignal::spectrum_t spec_in_copy
 Copy of input spectrum for smoothspec.
- MHAFilter::smoothspec_t smoothspec Smoothspec calculator.
- bool use smoothspec
- · float smoothspec epsilon


```
5.345.1 Constructor & Destructor Documentation
5.345.1.1 smoothgains_bridge::smoothspec_wrap_t::smoothspec_wrap_t (
                     mhaconfig t spar in,
                     mhaconfig_t spar_out,
                     const MHAParser::kw t & mode,
                     const MHAParser::window_t & irswnd,
                     const MHAParser::float t & epsilon )
5.345.2 Member Function Documentation
5.345.2.1 mha_spec_t * smoothgains_bridge::smoothspec_wrap_t::proc_1 (
                     mha spec t * s)
5.345.2.2 mha spec t * smoothgains_bridge::smoothspec_wrap_t::proc_2 (
                     mha spec t * s)
5.345.3 Member Data Documentation
5.345.3.1 MHASignal::spectrum_t smoothgains_bridge::smoothspec_wrap_t::spec_in_copy
         [private]
Copy of input spectrum for smoothspec.
5.345.3.2 MHAFilter::smoothspec_t smoothgains_bridge::smoothspec_wrap_t::smoothspec
          [private]
Smoothspec calculator.
5.345.3.3 bool smoothgains_bridge::smoothspec_wrap_t::use_smoothspec [private]
5.345.3.4 float smoothgains_bridge::smoothspec_wrap_t::smoothspec_epsilon [private]
The documentation for this class was generated from the following file:
```

© 2005-2018 HörTech gGmbH, Oldenburg

smoothgains_bridge.cpp

5.346 softclip_t Class Reference

Inheritance diagram for softclip_t:

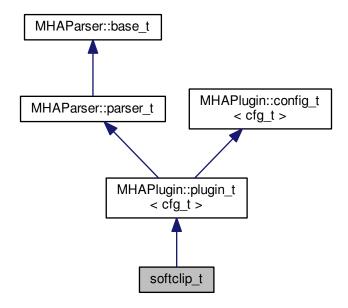

Public Member Functions

- softclip_t (const algo_comm_t &, const std::string &, const std::string &)
- mha_wave_t * process (mha_wave_t *)
- void prepare (mhaconfig_t &)
- void update ()

Private Attributes

- mhaconfig_t tftype
- MHAParser::float_t attack
- MHAParser::float_t decay
- MHAParser::float_t start_limit
- MHAParser::float_t slope_db
- MHAEvents::patchbay_t< softclip_t > patchbay

```
Additional Inherited Members
```

```
5.346.1 Constructor & Destructor Documentation
5.346.1.1 softclip_t::softclip_t (
                      const algo comm t & iac,
                      const std::string & chain,
                      const std::string & name )
5.346.2 Member Function Documentation
5.346.2.1 mha_wave_t * softclip_t::process (
                      mha_wave_t * s )
5.346.2.2 void softclip_t::prepare (
                      mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin_t < cfg_t > (p. 693).
5.346.2.3 void softclip_t::update ( )
5.346.3 Member Data Documentation
5.346.3.1
         mhaconfig t softclip_t::tftype [private]
5.346.3.2 MHAParser::float_t softclip_t::attack [private]
5.346.3.3 MHAParser::float_t softclip_t::decay [private]
5.346.3.4 MHAParser::float_t softclip_t::start_limit [private]
5.346.3.5 MHAParser::float_t softclip_t::slope_db [private]
5.346.3.6 MHAEvents::patchbay_t<softclip_t> softclip_t::patchbay [private]
```

The documentation for this class was generated from the following file:

softclip.cpp

5.347 softclipper_t Class Reference

Public Member Functions

- softclipper_t (const softclipper_variables_t &v, const mhaconfig_t &)
- mha_real_t process (mha_wave_t *)

Private Attributes

```
    MHAFilter::o1flt_lowpass_t attack
```

- MHAFilter::o1flt_maxtrack_t decay
- MHAFilter::o1flt_lowpass_t clipmeter
- mha_real_t threshold
- · mha real t hardlimit
- mha_real_t slope
- bool linear

```
5.347.1 Constructor & Destructor Documentation
```

5.347.2 Member Function Documentation

5.347.3 Member Data Documentation

```
5.347.3.1 MHAFilter::o1flt_lowpass_t softclipper_t::attack [private]
```

```
5.347.3.2 MHAFilter::o1flt_maxtrack_t softclipper_t::decay [private]
```

```
5.347.3.3 MHAFilter::o1flt_lowpass_t softclipper_t::clipmeter [private]
```

```
5.347.3.4 mha real t softclipper t::threshold [private]
```

```
5.347.3.5 mha_real_t softclipper_t::hardlimit [private]
```

5.347.3.6 mha_real_t softclipper_t::slope [private]


5.347.3.7 bool softclipper_t::linear [private]

The documentation for this class was generated from the following file:

· transducers.cpp

5.348 softclipper_variables_t Class Reference

Inheritance diagram for softclipper_variables_t:

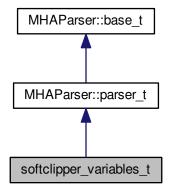

Public Member Functions

softclipper_variables_t ()

Public Attributes

- MHAParser::float_t tau_attack
- MHAParser::float_t tau_decay
- MHAParser::float_t tau_clip
- MHAParser::float t threshold
- MHAParser::float_t hardlimit
- MHAParser::float_t slope
- MHAParser::bool_t linear
- MHAParser::float_mon_t clipped
- MHAParser::float_t max_clipped

Additional Inherited Members

5.348.1 Constructor & Destructor Documentation

5.348.1.1 softclipper_variables_t::softclipper_variables_t()

5.348.2 Member Data Documentation


5.348.2.1	MHAParser::float_t softclipper_variables_t::tau_attack
5.348.2.2	MHAParser::float_t softclipper_variables_t::tau_decay
5.348.2.3	MHAParser::float_t softclipper_variables_t::tau_clip
5.348.2.4	MHAParser::float_t softclipper_variables_t::threshold
5.348.2.5	MHAParser::float_t softclipper_variables_t::hardlimit
5.348.2.6	MHAParser::float_t softclipper_variables_t::slope
5.348.2.7	MHAParser::bool_t softclipper_variables_t::linear
5.348.2.8	MHAParser::float_mon_t softclipper_variables_t::clipped
5.348.2.9	MHAParser::float_t softclipper_variables_t::max_clipped

The documentation for this class was generated from the following file:

· transducers.cpp

5.349 spec2wave_if_t Class Reference

Inheritance diagram for spec2wave_if_t:

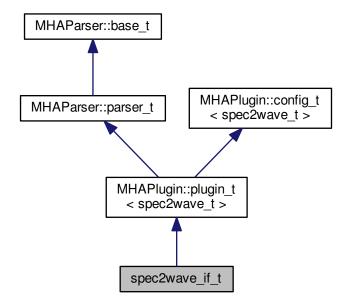

Public Member Functions

```
• spec2wave_if_t (const algo_comm_t &, const std::string &, const std::string &)
```

- void prepare (mhaconfig_t &)
- mha_wave_t * process (mha_spec_t *)

Private Member Functions

• void update ()

Private Attributes

- MHAEvents::patchbay_t< spec2wave_if_t > patchbay
- MHAParser::float t ramplen
- · windowselector_t window_config

Additional Inherited Members

```
5.349.1 Constructor & Destructor Documentation
5.349.1.1 spec2wave_if_t::spec2wave_if_t (
                     const algo_comm_t & iac,
                     const std::string & ,
                     const std::string & )
5.349.2 Member Function Documentation
5.349.2.1 void spec2wave_if_t::prepare (
                     mhaconfig t&t) [virtual]
Implements MHAPlugin::plugin_t< spec2wave_t > (p. 693).
5.349.2.2 mha wave t * spec2wave_if_t::process (
                     mha_spec_t * spec_in )
5.349.2.3 void spec2wave_if_t::update() [private]
5.349.3 Member Data Documentation
5.349.3.1 MHAEvents::patchbay_t<spec2wave_if_t> spec2wave_if_t::patchbay [private]
5.349.3.2 MHAParser::float_t spec2wave_if_t::ramplen [private]
5.349.3.3 windowselector_t spec2wave_if_t::window_config [private]
```

The documentation for this class was generated from the following file:

spec2wave.cpp

5.350 spec2wave_t Class Reference

Public Member Functions

• **spec2wave_t** (unsigned int nfft_, unsigned int nwnd_, unsigned int nwndshift_, unsigned int nch, **mha_real_t** ramplen, const **MHAWindow::base_t** &postwin)

```
    ~spec2wave_t ()
```

mha_wave_t * process (mha_spec_t *)

Private Attributes

· mha fft t ft

FFT class.

unsigned int npad1

length of zero padding before window

unsigned int npad2

length of zero padding after window

- hanning_ramps_t ramps
- MHASignal::waveform_t calc_out
- MHASignal::waveform t out buf
- MHASignal::waveform_t write_buf
- mha_real_t sc
- · unsigned int nfft
- unsigned int nwndshift
- MHAWindow::base_t postwindow

```
5.350.1 Constructor & Destructor Documentation
```

5.350.3.1 mha_fft_t spec2wave_t::ft [private]

FFT class.

```
5.350.3.2 unsigned int spec2wave_t::npad1 [private]
length of zero padding before window
5.350.3.3 unsigned int spec2wave_t::npad2 [private]
length of zero padding after window
5.350.3.4 hanning_ramps_t spec2wave_t::ramps [private]
5.350.3.5 MHASignal::waveform_t spec2wave_t::calc_out [private]
5.350.3.6 MHASignal::waveform_t spec2wave_t::out_buf [private]
5.350.3.7 MHASignal::waveform_t spec2wave_t::write_buf [private]
5.350.3.8 mha_real_t spec2wave_t::sc [private]
5.350.3.9 unsigned int spec2wave_t::nfft [private]
5.350.3.10 unsigned int spec2wave_t::nwndshift [private]
5.350.3.11 MHAWindow::base_t spec2wave_t::postwindow [private]
```

The documentation for this class was generated from the following file:

spec2wave.cpp

5.351 spec_fader_t Class Reference

Public Member Functions

- spec_fader_t (unsigned int ch, mha_real_t fr, MHAParser::vfloat_t &ng, MHAParser ← ::float_t &t)
- \sim spec_fader_t ()

Public Attributes

- unsigned int nch
- mha_real_t * gains
- unsigned int fr

5.351.1 Constructor & Destructor Documentation

unsigned int spec_fader_t::fr


The documentation for this class was generated from the following file:

fader_spec.cpp

5.351.2.3

5.352 speechnoise_t Class Reference

Inheritance diagram for speechnoise_t:

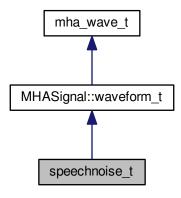

Public Types

Public Member Functions

- speechnoise_t (float duration, float srate, unsigned int channels, speechnoise_t
 ::noise_type_t noise_type=speechnoise_t::mha)
- speechnoise_t (unsigned int length_samples, float srate, unsigned int channels, speechnoise_t::noise_type_t noise_type=speechnoise_t::mha)

Private Member Functions

• void **creator** (**speechnoise_t::noise_type_t** noise_type, float srate)

Additional Inherited Members

```
5.352.1 Member Enumeration Documentation
```

```
5.352.1.1 enum speechnoise_t::noise_type_t
```

Enumerator

```
mha
```

olnoise

LTASS_combined

LTASS_female

LTASS male

white

pink

brown

TEN_SPL

TEN_SPL_250_8k

TEN_SPL_50_16k

sin125

sin250

sin500

sin1k

sin2k

sin4k

sin8k


5.352.2 Constructor & Destructor Documentation

The documentation for this class was generated from the following files:

- · speechnoise.h
- · speechnoise.cpp

5.353 steerbf Class Reference

Inheritance diagram for steerbf:

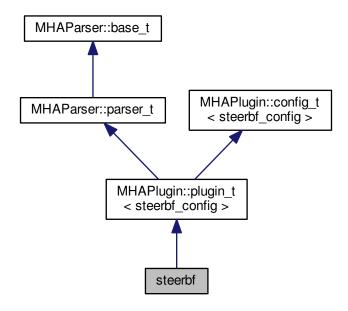

Public Member Functions

steerbf (algo_comm_t &ac, const std::string &chain_name, const std::string &algo_← name)

Constructs our plugin.

- ∼steerbf ()
- mha_spec_t * process (mha_spec_t *)

Defers to configuration class.

void prepare (mhaconfig_t &)

Plugin preparation.

• void release (void)

Public Attributes

- MHAParser::string_t bf_src
- · parser int dyn angle ind
- MHAParser::string_t angle_src

Private Member Functions

void update_cfg ()

Private Attributes

MHAEvents::patchbay_t< steerbf > patchbay

Additional Inherited Members

```
5.353.1 Constructor & Destructor Documentation
```

```
5.353.1.1 steerbf::steerbf (

algo_comm_t & ac,

const std::string & chain_name,

const std::string & algo_name )
```

Constructs our plugin.

```
5.353.1.2 steerbf::∼steerbf ( )
```

5.353.2 Member Function Documentation

```
5.353.2.1 mha_spec_t * steerbf::process (
mha_spec_t * signal )
```

Defers to configuration class.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number of	1
	channels, frames per block, sampling rate.	

```
Implements MHAPlugin::plugin_t < steerbf_config > (p. 693).
```

Reimplemented from MHAPlugin::plugin_t< steerbf_config > (p. 694).

```
5.353.2.4 void steerbf::update_cfg( ) [private]
```

5.353.3 Member Data Documentation

```
5.353.3.1 MHAParser::string_t steerbf::bf_src
```

5.353.3.2 parser int dyn steerbf::angle_ind

5.353.3.3 MHAParser::string_t steerbf::angle_src

5.353.3.4 MHAEvents::patchbay_t<steerbf> steerbf::patchbay [private]

The documentation for this class was generated from the following files:

- · steerbf.h
- steerbf.cpp

5.354 steerbf_config Class Reference

Public Member Functions

- steerbf_config (algo_comm_t &ac, const mhaconfig_t in_cfg, steerbf) *steerbf)
- ∼steerbf config ()
- mha_spec_t * process (mha_spec_t *)

Private Attributes

- unsigned int nchan
- unsigned int nfreq
- MHASignal::spectrum t outSpec
- mha_spec_t bf_vec
- unsigned int nangle
- steerbf * steerbf
- · algo_comm_t & ac
- std::string bf_src_copy


```
5.354.1 Constructor & Destructor Documentation
5.354.1.1 steerbf_config::steerbf_config (
                      algo_comm_t & ac,
                      const mhaconfig_t in_cfg,
                      steerbf * steerbf )
5.354.1.2 steerbf_config::~steerbf_config()
5.354.2 Member Function Documentation
5.354.2.1 mha_spec_t * steerbf_config::process (
                      mha_spec_t * inSpec )
5.354.3 Member Data Documentation
5.354.3.1
        unsigned int steerbf_config::nchan [private]
5.354.3.2 unsigned int steerbf_config::nfreq [private]
5.354.3.3 MHASignal::spectrum_t steerbf_config::outSpec [private]
5.354.3.4 mha_spec_t steerbf_config::bf_vec [private]
5.354.3.5 unsigned int steerbf_config::nangle [private]
5.354.3.6 steerbf* steerbf_config::_steerbf [private]
5.354.3.7
         algo_comm_t& steerbf_config::ac [private]
5.354.3.8 std::string steerbf_config::bf_src_copy [private]
```

The documentation for this class was generated from the following files:

- · steerbf.h
- steerbf.cpp

5.355 testplugin::ac_parser_t Class Reference

Inheritance diagram for testplugin::ac_parser_t:

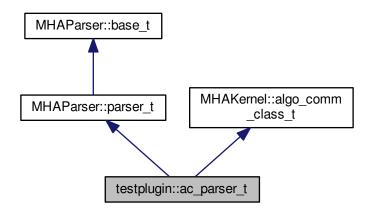

Public Types

Public Member Functions

- ac_parser_t ()
- void do_insert_var ()
 Insert variable into AC space.
- void do_get_var ()

Public Attributes

- MHAParser::string t insert var
- MHAParser::string_t get_var
- MHAParser::kw_t data_type
- MHAParser::int_t num_entries
- MHAParser::int_t stride
- MHAParser::string_t char_data
- MHAParser::vint_t int_data
- MHAParser::vfloat_t float_data
- MHAParser::vcomplex_t complex_data
- MHAEvents::patchbay_t< ac_parser_t > patchbay

```
Additional Inherited Members
```

```
5.355.1 Member Enumeration Documentation
```

5.355.1.1 enum testplugin::ac_parser_t::data_type_t

Enumerator

```
_MHA_AC_CHAR
_MHA_AC_INT
_MHA_AC_MHAREAL
_MHA_AC_FLOAT
_MHA_AC_DOUBLE
_MHA_AC_MHACOMPLEX
unknown
```

- 5.355.2 Constructor & Destructor Documentation
- 5.355.2.1 testplugin::ac_parser_t::ac_parser_t() [inline]
- 5.355.3 Member Function Documentation
- 5.355.3.1 void testplugin::ac_parser_t::do_insert_var() [inline]

Insert variable into AC space.

This leaks memory by design, as the plugin is for testing only


- 5.355.3.2 void testplugin::ac_parser_t::do_get_var() [inline]
- 5.355.4 Member Data Documentation
- 5.355.4.1 MHAParser::string_t testplugin::ac_parser_t::insert_var
- 5.355.4.2 MHAParser::string_t testplugin::ac_parser_t::get_var
- 5.355.4.3 MHAParser::kw_t testplugin::ac_parser_t::data_type
- 5.355.4.4 MHAParser::int_t testplugin::ac_parser_t::num_entries
- 5.355.4.5 MHAParser::int t testplugin::ac_parser_t::stride
- 5.355.4.6 MHAParser::string_t testplugin::ac_parser_t::char_data
- 5.355.4.7 MHAParser::vint_t testplugin::ac_parser_t::int_data
- 5.355.4.8 MHAParser::vfloat_t testplugin::ac_parser_t::float_data
- 5.355.4.9 MHAParser::vcomplex_t testplugin::ac_parser_t::complex_data
- 5.355.4.10 MHAEvents::patchbay t<ac parser t> testplugin::ac_parser_t::patchbay

The documentation for this class was generated from the following file:

testplugin.cpp

5.356 testplugin::config_parser_t Class Reference

Inheritance diagram for testplugin::config_parser_t:

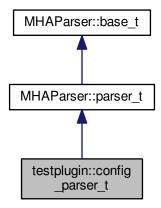

Public Member Functions

- void setlock (const bool &b)
- config_parser_t ()
- mhaconfig_t get () const
- void set (mhaconfig_t c)

Public Attributes

- MHAParser::int_t channels
- MHAParser::kw t domain
- MHAParser::int_t fragsize
- MHAParser::int_t wndlen
- MHAParser::int t fftlen
- MHAParser::float_t srate

Additional Inherited Members

5.356.1 Constructor & Destructor Documentation

5.356.1.1 testplugin::config_parser_t::config_parser_t() [inline]

```
5.356.2 Member Function Documentation
```

```
5.356.2.2 mhaconfig_t testplugin::config_parser_t::get( ) const [inline]
```

```
5.356.2.3 void testplugin::config_parser_t::set (

mhaconfig_t c) [inline]
```

5.356.3 Member Data Documentation

```
5.356.3.1 MHAParser::int_t testplugin::config_parser_t::channels
```

5.356.3.2 MHAParser::kw t testplugin::config_parser_t::domain

5.356.3.3 MHAParser::int_t testplugin::config_parser_t::fragsize

5.356.3.4 MHAParser::int_t testplugin::config_parser_t::wndlen

5.356.3.5 MHAParser::int_t testplugin::config_parser_t::fftlen


5.356.3.6 MHAParser::float_t testplugin::config_parser_t::srate

The documentation for this class was generated from the following file:

testplugin.cpp

5.357 testplugin::if_t Class Reference

Inheritance diagram for testplugin::if_t:

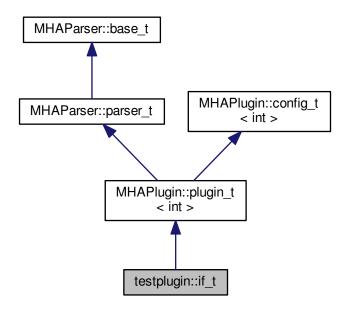

Public Member Functions

- if_t (const algo_comm_t &iac, const std::string &ith, const std::string &ial)
- mha_spec_t * process (mha_spec_t *s_in)
- mha wave t * process (mha wave t *s in)
- void prepare (mhaconfig_t &)

Private Member Functions

- void test_prepare ()
- void test_process ()

Private Attributes

- config_parser_t config_in
- · config_parser_t config_out
- ac_parser_t ac
- signal_parser_t signal
- MHAParser::bool_t _prepare
- MHAEvents::patchbay_t< if_t > patchbay
- MHAParser::mhapluginloader_t plug

Additional Inherited Members


```
5.357.1 Constructor & Destructor Documentation
5.357.1.1 testplugin::if_t::if_t (
                      const algo_comm_t & iac,
                      const std::string & ith,
                      const std::string & ial )
5.357.2 Member Function Documentation
5.357.2.1
         mha_spec_t* testplugin::if_t::process (
                      mha_spec_t * s_in ) [inline]
5.357.2.2 mha_wave_t* testplugin::if_t::process (
                      mha_wave_t * s_in ) [inline]
5.357.2.3 void testplugin::if_t::prepare (
                      mhaconfig_t & ) [inline], [virtual]
Implements MHAPlugin::plugin_t< int > (p. 693).
5.357.2.4 void testplugin::if_t::test_prepare( ) [private]
5.357.2.5 void testplugin::if_t::test_process() [private]
5.357.3 Member Data Documentation
5.357.3.1 config_parser_t testplugin::if_t::config_in [private]
5.357.3.2 config parser t testplugin::if_t::config_out [private]
5.357.3.3 ac_parser_t testplugin::if_t::ac [private]
5.357.3.4 signal_parser_t testplugin::if_t::signal [private]
5.357.3.5 MHAParser::bool t testplugin::if_t::_prepare [private]
5.357.3.6 MHAEvents::patchbay_t<if_t> testplugin::if_t::patchbay [private]
5.357.3.7 MHAParser::mhapluginloader_t testplugin::if_t::plug [private]
```

The documentation for this class was generated from the following file:

testplugin.cpp

5.358 testplugin::signal_parser_t Class Reference

Inheritance diagram for testplugin::signal_parser_t:

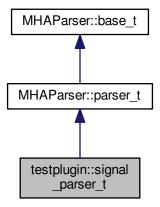

Public Member Functions

signal_parser_t ()

Public Attributes

- MHAParser::mfloat_t input_wave
- MHAParser::mcomplex t input spec
- MHAParser::mfloat mon t output wave
- MHAParser::mcomplex_mon_t output_spec

Additional Inherited Members

- 5.358.1 Constructor & Destructor Documentation
- 5.358.1.1 testplugin::signal_parser_t::signal_parser_t() [inline]
- 5.358.2 Member Data Documentation
- 5.358.2.1 MHAParser::mfloat_t testplugin::signal_parser_t::input_wave
- 5.358.2.2 MHAParser::mcomplex_t testplugin::signal_parser_t::input_spec
- 5.358.2.3 MHAParser::mfloat_mon_t testplugin::signal_parser_t::output_wave
- 5.358.2.4 MHAParser::mcomplex mon t testplugin::signal_parser_t::output_spec

The documentation for this class was generated from the following file:

· testplugin.cpp

5.359 timo AC Class Reference

Public Member Functions

- timo_AC (algo_comm_t &ac, unsigned int fftlen, unsigned int nfreq, unsigned int nchan)
- void copy ()
- void insert ()

Public Attributes

```
    MHA_AC::waveform_t gamma_post_AC
```

- MHA_AC::waveform_t xi_ml_AC
- MHA_AC::spectrum_t lambda_ml_AC
- MHA_AC::spectrum_t lambda_ml_ceps_AC
- MHA_AC::waveform_t lambda_ml_smooth_AC
- MHA_AC::waveform_t max_q_AC
- MHA_AC::waveform_t max_val_AC
- · MHA AC::waveform t pitch set first AC
- MHA_AC::waveform_t pitch_set_last_AC
- MHA_AC::waveform_t alpha_hat_AC
- MHA_AC::waveform_t alpha_frame_AC
- MHA_AC::spectrum_t lambda_ceps_AC
- MHA_AC::spectrum_t log_lambda_spec_AC
- MHA_AC::waveform_t lambda_spec_AC
- MHA_AC::waveform_t xi_est_AC
- MHA_AC::waveform_t gain_wiener_AC
- MHA_AC::waveform_t winF0_AC
- MHA AC::waveform t SPP

5.359.1 Constructor & Destructor Documentation

5.359.2 Member Function Documentation

```
5.359.2.1 void timo_AC::copy ( )
```

5.359.2.2 void timo_AC::insert ()

5.359.3 Member Data Documentation

```
5.359.3.1
         MHA_AC::waveform_t timo_AC::gamma_post_AC
5.359.3.2
        MHA_AC::waveform_t timo_AC::xi_ml_AC
5.359.3.3
         MHA AC::spectrum t timo AC::lambda ml AC
5.359.3.4
         MHA_AC::spectrum_t timo_AC::lambda_ml_ceps_AC
5.359.3.5
         MHA_AC::waveform_t timo_AC::lambda_ml_smooth_AC
5.359.3.6
         MHA_AC::waveform_t timo_AC::max_q_AC
5.359.3.7
        MHA AC::waveform t timo_AC::max_val_AC
5.359.3.8 MHA AC::waveform t timo_AC::pitch_set_first_AC
5.359.3.9 MHA AC::waveform t timo_AC::pitch_set_last_AC
5.359.3.10 MHA_AC::waveform_t timo_AC::alpha_hat_AC
5.359.3.11
          MHA_AC::waveform_t timo_AC::alpha_frame_AC
5.359.3.12
          MHA AC::spectrum t timo_AC::lambda_ceps_AC
5.359.3.13
          MHA AC::spectrum t timo_AC::log_lambda_spec_AC
5.359.3.14 MHA_AC::waveform_t timo_AC::lambda_spec_AC
5.359.3.15 MHA_AC::waveform_t timo_AC::xi_est_AC
5.359.3.16 MHA AC::waveform t timo_AC::gain_wiener_AC
          MHA AC::waveform t timo_AC::winF0_AC
5.359.3.17
          MHA AC::waveform t timo_AC::SPP
5.359.3.18
```

The documentation for this class was generated from the following files:

- · timoconfig.h
- · timoconfig.cpp

5.360 timo params Class Reference

Public Member Functions

timo_params (const mhaconfig_t &_in_cfg, float _xi_min_db, float _f0_low, float _f0_← high, float _delta_pitch, float _lambda_thresh, float _alpha_pitch, float _beta_const, float _kappa_const, float _prior_q, float _xi_opt_db, float _gain_min_db, std::vector< float > &_winF0, std::vector< float > &_alpha_const_vals, std::vector< float > &_alpha_const← _limits_hz, std::string &_noisePow_name)

Public Attributes

- const mhaconfig_t in_cfg
- float xi min db
- · float f0 low
- float f0 high
- float delta_pitch
- float lambda thresh
- · float alpha pitch
- float beta_const
- float kappa_const
- float prior_q
- float xi_opt_db
- float gain min db
- std::vector< float > winF0
- std::vector< float > alpha_const_vals
- std::vector< float > alpha_const_limits_hz
- std::string noisePow name

5.360.1 Constructor & Destructor Documentation

```
5.360.1.1 timo_params::timo_params (
                        const mhaconfig_t & _in_cfg,
                        float _xi_min_db,
                        float _f0_low,
                        float _f0_high,
                        float delta pitch,
                        float _lambda_thresh,
                        float _alpha_pitch,
                        float _beta_const,
                        float kappa const,
                        float _prior_q,
                        float _xi_opt_db,
                        float _gain_min_db,
                        std::vector< float > & _winF0,
                        std::vector< float > & _alpha_const_vals,
                        std::vector< float > & _alpha_const_limits_hz,
                        std::string & _noisePow_name ) [inline]
```

5.360.2	Member Data Documentation
5.360.2.1	const mhaconfig_t timo_params::in_cfg
5.360.2.2	float timo_params::xi_min_db
5.360.2.3	float timo_params::f0_low
5.360.2.4	float timo_params::f0_high
5.360.2.5	float timo_params::delta_pitch
5.360.2.6	float timo_params::lambda_thresh
5.360.2.7	float timo_params::alpha_pitch
5.360.2.8	float timo_params::beta_const
5.360.2.9	float timo_params::kappa_const
5.360.2.10) float timo_params::prior_q
5.360.2.11	I float timo_params::xi_opt_db
5.360.2.12	2 float timo_params::gain_min_db
5.360.2.13	3 std::vector <float> timo_params::winF0</float>
5.360.2.14	std::vector <float> timo_params::alpha_const_vals</float>
5.360.2.15	5 std::vector <float> timo_params::alpha_const_limits_hz</float>
5.360.2.16	std::string timo_params::noisePow_name

The documentation for this class was generated from the following file:

· timoconfig.h

5.361 timoConfig Class Reference

Public Member Functions

- timoConfig (algo_comm_t &ac, timo_params ¶ms)
- ∼timoConfig ()
- mha_spec_t * process (mha_spec_t *)

Private Member Functions

void copy_AC (timo_AC &tAC)

Private Attributes

- · algo_comm_t ac
- timo_params params
- unsigned int fftlen
- · mha_fft_t mha_fft
- unsigned int nfreq
- unsigned int nchan
- · timo AC tAC
- float ola_powspec_scale
- float q_low
- float q_high
- MHASignal::waveform_t winF0
- float xi min
- float gain_min
- MHASignal::waveform_t alpha_const
- MHASignal::waveform_t alpha_prev
- MHASignal::waveform_t noisePow
- MHASignal::waveform t powSpec
- MHASignal::waveform_t gamma_post
- MHASignal::waveform_t xi_ml
- MHASignal::spectrum_t lambda_ml_full
- MHASignal::spectrum_t lambda_ml_ceps
- MHASignal::waveform_t lambda_ml_smooth
- MHASignal::waveform_t alpha_hat
- MHASignal::waveform_t alpha_frame
- MHASignal::spectrum_t lambda_ceps
- MHASignal::waveform_t lambda_ceps_prev
- MHASignal::spectrum_t log_lambda_spec
- MHASignal::waveform_t lambda_spec
- MHASignal::waveform_t xi_est
- MHASignal::waveform_t gain_wiener
- MHASignal::spectrum_t spec_out
- double * max_val
- int * max_q
- int * pitch_set_first
- int * pitch_set_last
- float priorFact
- · float xiOpt
- float logGLRFact
- float GLRexp
- MHASignal::waveform_t GLR

```
5.361.1 Constructor & Destructor Documentation
5.361.1.1 timoConfig::timoConfig (
                     algo comm t & ac,
                     timo params & params )
5.361.1.2 timoConfig::~timoConfig()
5.361.2 Member Function Documentation
         mha spec t * timoConfig::process (
                     mha_spec_t * noisyFrame )
5.361.2.2 void timoConfig::copy_AC (
                     timo_AC & tAC ) [private]
5.361.3 Member Data Documentation
5.361.3.1
         algo comm t timoConfig::ac [private]
5.361.3.2
         timo params timoConfig::params [private]
5.361.3.3
         unsigned int timoConfig::fftlen [private]
5.361.3.4
         mha_fft_t timoConfig::mha_fft [private]
5.361.3.5
         unsigned int timoConfig::nfreq [private]
5.361.3.6
         unsigned int timoConfig::nchan [private]
         timo AC timoConfig::tAC [private]
5.361.3.7
5.361.3.8
         float timoConfig::ola_powspec_scale [private]
5.361.3.9 float timoConfig::q_low [private]
5.361.3.10 float timoConfig::q_high [private]
5.361.3.11 MHASignal::waveform_t timoConfig::winF0 [private]
5.361.3.12 float timoConfig::xi_min [private]
5.361.3.13 float timoConfig::gain_min [private]
```


```
5.361.3.14
          MHASignal::waveform_t timoConfig::alpha_const [private]
5.361.3.15 MHASignal::waveform_t timoConfig::alpha_prev [private]
5.361.3.16 MHASignal::waveform t timoConfig::noisePow [private]
5.361.3.17 MHASignal::waveform_t timoConfig::powSpec [private]
5.361.3.18 MHASignal::waveform_t timoConfig::gamma_post [private]
5.361.3.19 MHASignal::waveform_t timoConfig::xi_ml [private]
5.361.3.20 MHASignal::spectrum_t timoConfig::lambda_ml_full [private]
5.361.3.21 MHASignal::spectrum_t timoConfig::lambda_ml_ceps [private]
5.361.3.22 MHASignal::waveform_t timoConfig::lambda_ml_smooth [private]
5.361.3.23 MHASignal::waveform_t timoConfig::alpha_hat [private]
5.361.3.24 MHASignal::waveform_t timoConfig::alpha_frame [private]
5.361.3.25 MHASignal::spectrum_t timoConfig::lambda_ceps [private]
5.361.3.26 MHASignal::waveform_t timoConfig::lambda_ceps_prev [private]
5.361.3.27 MHASignal::spectrum_t timoConfig::log_lambda_spec [private]
5.361.3.28 MHASignal::waveform_t timoConfig::lambda_spec [private]
5.361.3.29 MHASignal::waveform_t timoConfig::xi_est [private]
5.361.3.30 MHASignal::waveform_t timoConfig::gain_wiener [private]
5.361.3.31 MHASignal::spectrum_t timoConfig::spec_out [private]
5.361.3.32 double* timoConfig::max_val [private]
5.361.3.33 int* timoConfig::max_q [private]
5.361.3.34 int* timoConfig::pitch_set_first [private]
5.361.3.35 int* timoConfig::pitch set last [private]
5.361.3.36 float timoConfig::priorFact [private]
5.361.3.37 float timoConfig::xiOpt [private]
5.361.3.38 float timoConfig::logGLRFact [private]
5.361.3.39 float timoConfig::GLRexp [private]
5.361.3.40 MHASignal::waveform_t timoConfig::GLR [private]
```

The documentation for this class was generated from the following files:

- · timoconfig.h
- timoconfig.cpp

5.362 timoSmooth Class Reference

Inheritance diagram for timoSmooth:

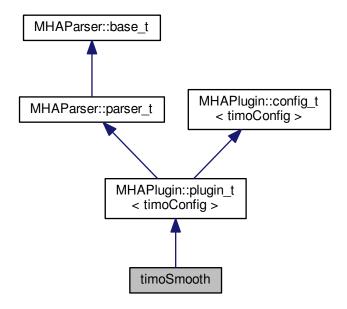

Public Member Functions

• timoSmooth (algo_comm_t &ac, const std::string &chain_name, const std::string &algo_name)

Constructs the beamforming plugin.

- ∼timoSmooth ()
- mha_spec_t * process (mha_spec_t *)

This plugin implements noise reduction using spectral subtraction: by nonnegative subtraction from the output magnitude of the estimated noise magnitude spectrum.

void prepare (mhaconfig_t &)

Plugin preparation.

void release (void)

Private Member Functions

- void update_cfg ()
- void on_model_param_valuechanged ()

Private Attributes

```
    MHAParser::float t xi min db

    MHAParser::float_t f0_low

    MHAParser::float_t f0_high

    MHAParser::float t delta pitch

    MHAParser::float_t lambda_thresh

    MHAParser::float t alpha pitch

    MHAParser::float t beta const

    MHAParser::float_t kappa_const

    MHAParser::float t gain min db

    MHAParser::vfloat t win f0

    MHAParser::vfloat_t alpha_const_vals

    MHAParser::vfloat t alpha const limits hz

    MHAParser::string_t noisePow_name

    MHAParser::parser t spp

    MHAParser::float_t prior_q

    MHAParser::float_t xi_opt_db

    MHAEvents::patchbay_t< timoSmooth > patchbay

    bool prepared

Additional Inherited Members
5.362.1 Constructor & Destructor Documentation
5.362.1.1 timoSmooth::timoSmooth (
```

algo_comm_t & ac,

const std::string & chain_name, const std::string & algo_name)

```
Constructs the beamforming plugin.
```

```
5.362.1.2 timoSmooth::~timoSmooth ( )
5.362.2 Member Function Documentation
5.362.2.1 mha_spec_t * timoSmooth::process ( mha_spec_t * signal )
```

This plugin implements noise reduction using spectral subtraction: by nonnegative subtraction from the output magnitude of the estimated noise magnitude spectrum.

Parameters

signal Pointer to the input signal structure.

Returns

Returns a pointer to the input signal structure, with a the signal modified by this plugin.

Plugin preparation.

This plugin checks that the input signal has the spectral domain and contains at least one channel

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number of	
	channels, frames per block, sampling rate.	

```
Implements MHAPlugin::plugin_t < timoConfig > (p. 693).
```

Reimplemented from **MHAPlugin::plugin_t**< **timoConfig** > (p. 694).

```
5.362.2.5 void timoSmooth::on_model_param_valuechanged( ) [private]
```

5.362.3 Member Data Documentation

```
5.362.3.1 MHAParser::float_t timoSmooth::xi_min_db [private]
```

```
5.362.3.2 MHAParser::float_t timoSmooth::f0_low [private]
```

5.362.3.3 MHAParser::float t timoSmooth::f0_high [private]

5.362.3.4 MHAParser::float t timoSmooth::delta_pitch [private]

5.362.3.5 MHAParser::float_t timoSmooth::lambda_thresh [private]

5.362.3.6 MHAParser::float_t timoSmooth::alpha_pitch [private]

5.362.3.7 MHAParser::float t timoSmooth::beta_const [private]


```
5.362.3.9 MHAParser::float_t timoSmooth::kappa_const [private]
5.362.3.9 MHAParser::float_t timoSmooth::gain_min_db [private]
5.362.3.10 MHAParser::vfloat_t timoSmooth::win_f0 [private]
5.362.3.11 MHAParser::vfloat_t timoSmooth::alpha_const_vals [private]
5.362.3.12 MHAParser::vfloat_t timoSmooth::alpha_const_limits_hz [private]
5.362.3.13 MHAParser::string_t timoSmooth::noisePow_name [private]
5.362.3.14 MHAParser::parser_t timoSmooth::spp [private]
5.362.3.15 MHAParser::float_t timoSmooth::prior_q [private]
5.362.3.16 MHAParser::float_t timoSmooth::xi_opt_db [private]
5.362.3.17 MHAEvents::patchbay_t < timoSmooth > timoSmooth::patchbay [private]
5.362.3.18 bool timoSmooth::prepared [private]
```

The documentation for this class was generated from the following files:

- · timosmooth.h
- · timoSmooth.cpp

5.363 us t Class Reference

Inheritance diagram for us_t:

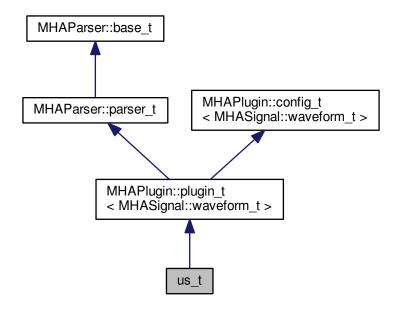

Public Member Functions

```
    us_t (algo_comm_t, std::string, std::string)
    mha_wave_t * process (mha_wave_t *)
    void prepare (mhaconfig_t &)
    void release ()
```

Private Attributes

- MHAParser::int_t ratio
- MHAFilter::iir_filter_t antialias

Additional Inherited Members

```
5.363.2 Member Function Documentation
```

std::string ,
std::string)

Implements MHAPlugin::plugin_t < MHASignal::waveform_t > (p. 693).

Reimplemented from MHAPlugin::plugin_t < MHASignal::waveform_t > (p. 694).

5.363.3 Member Data Documentation

```
5.363.3.1 MHAParser::int_t us_t::ratio [private]
```


```
5.363.3.2 MHAFilter::iir_filter_t us_t::antialias [private]
```

The documentation for this class was generated from the following file:

· upsample.cpp

5.364 wave2spec_if_t Class Reference

Inheritance diagram for wave2spec_if_t:

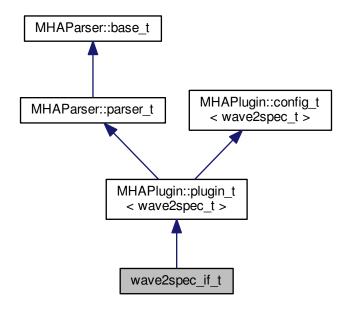

Public Member Functions

- wave2spec_if_t (const algo_comm_t &, const std::string &, const std::string &)
- void prepare (mhaconfig_t &)
- void process (mha_wave_t *, mha_spec_t **)
- void process (mha_wave_t *, mha_wave_t **)

Private Member Functions

• void update ()

Private Attributes

- MHAEvents::patchbay_t< wave2spec_if_t > patchbay
- MHAParser::int_t nfft
- MHAParser::int_t nwnd
- MHAParser::float_t wndpos
- windowselector_t window_config
- MHAParser::bool_t return_wave
- std::string algo

Additional Inherited Members


```
5.364.1 Constructor & Destructor Documentation
5.364.1.1 wave2spec_if_t::wave2spec_if_t (
                     const algo_comm_t & iac,
                     const std::string & ,
                     const std::string & ialg )
5.364.2 Member Function Documentation
5.364.2.1 void wave2spec_if_t::prepare (
                     mhaconfig_t & t ) [virtual]
Implements MHAPlugin::plugin_t< wave2spec_t > (p. 693).
5.364.2.2 void wave2spec_if_t::process (
                     mha_wave_t * wave_in,
                     mha spec t ** sout )
5.364.2.3 void wave2spec_if_t::process (
                     mha_wave_t * wave_in,
                     mha_wave_t ** sout )
5.364.2.4 void wave2spec_if_t::update( ) [private]
5.364.3 Member Data Documentation
5.364.3.1
         MHAEvents::patchbay t<wave2spec if t> wave2spec if t::patchbay [private]
5.364.3.2 MHAParser::int t wave2spec if t::nfft [private]
5.364.3.3 MHAParser::int t wave2spec_if_t::nwnd [private]
5.364.3.4 MHAParser::float t wave2spec_if_t::wndpos [private]
5.364.3.5 windowselector t wave2spec_if_t::window_config [private]
5.364.3.6 MHAParser::bool_t wave2spec_if_t::return_wave [private]
5.364.3.7 std::string wave2spec_if_t::algo [private]
```

The documentation for this class was generated from the following file:

wave2spec.cpp

5.365 wave2spec_t Class Reference

Inheritance diagram for wave2spec_t:

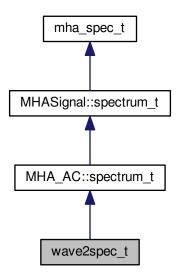

Public Member Functions

- wave2spec_t (unsigned int nfft, unsigned int nwnd_, unsigned int nwndshift_, unsigned int nch, mha_real_t wndpos, const MHAWindow::base_t &window, algo_comm_t ac, std::string algo)
- mha_spec_t * process (mha_wave_t *)
- ~wave2spec_t ()

Private Member Functions

void calc_pre_wnd (MHASignal::waveform_t &, const MHASignal::waveform_t &)

Private Attributes

- unsigned int nwnd
- · unsigned int nwndshift
- mha_fft_t ft

FFT class.

- unsigned int npad1
 - length of zero padding before window
- unsigned int npad2

length of zero padding after window

```
MHAWindow::base_t window
MHASignal::waveform_t calc_in
MHASignal::waveform_t in_buf
MHASignal::spectrum_t spec_in
```

non-interleaved, complex, fftlen

length of zero padding before window

```
Additional Inherited Members
```

```
5.365.1 Constructor & Destructor Documentation
5.365.1.1 wave2spec_t::wave2spec_t (
                      unsigned int nfft.
                      unsigned int nwnd_,
                      unsigned int nwndshift_,
                      unsigned int nch,
                      mha real t wndpos,
                      const MHAWindow::base t & window,
                      algo_comm_t ac,
                      std::string algo )
5.365.1.2 wave2spec_t::~wave2spec_t ( )
5.365.2 Member Function Documentation
5.365.2.1 mha_spec_t * wave2spec_t::process (
                      mha_wave_t * wave_in )
5.365.2.2 void wave2spec_t::calc_pre_wnd (
                      MHASignal::waveform_t & dest,
                      const MHASignal::waveform_t & src ) [private]
5.365.3 Member Data Documentation
5.365.3.1
         unsigned int wave2spec_t::nwnd [private]
5.365.3.2 unsigned int wave2spec_t::nwndshift [private]
5.365.3.3 mha fft t wave2spec_t::ft [private]
FFT class.
5.365.3.4 unsigned int wave2spec_t::npad1 [private]
```

5.365.3.5 unsigned int wave2spec_t::npad2 [private]

length of zero padding after window

5.365.3.6 MHAWindow::base_t wave2spec_t::window [private]

5.365.3.7 MHASignal::waveform_t wave2spec_t::calc_in [private]

5.365.3.8 MHASignal::waveform_t wave2spec_t::in_buf [private]

5.365.3.9 MHASignal::spectrum_t wave2spec_t::spec_in [private]


non-interleaved, complex, fftlen

The documentation for this class was generated from the following file:

wave2spec.cpp

5.366 wavrec t Class Reference

Inheritance diagram for wavrec_t:

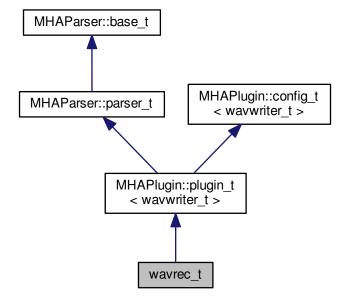

Public Member Functions

```
mha_wave_t * process (mha_wave_t *)
```

- void prepare (mhaconfig_t &cf)
- void release ()
- wavrec_t (const algo_comm_t &iac, const std::string &, const std::string &)

Private Member Functions

• void start_new_session ()

Private Attributes

- MHAParser::bool_t record
- MHAParser::int_t fifolen
- MHAParser::int t minwrite
- MHAParser::string_t prefix
- MHAParser::bool_t use_date
- MHAEvents::patchbay_t< wavrec_t > patchbay

Additional Inherited Members

```
5.366.1 Constructor & Destructor Documentation
```

5.366.2 Member Function Documentation

Implements MHAPlugin::plugin_t< wavwriter_t > (p. 693).

Reimplemented from MHAPlugin::plugin_t< wavwriter_t > (p. 694).

```
5.366.2.4 void wavrec_t::start_new_session( ) [private]
5.366.3 Member Data Documentation
5.366.3.1 MHAParser::bool_t wavrec_t::record [private]
5.366.3.2 MHAParser::int_t wavrec_t::fifolen [private]
5.366.3.3 MHAParser::int_t wavrec_t::minwrite [private]
5.366.3.4 MHAParser::string_t wavrec_t::prefix [private]
5.366.3.5 MHAParser::bool_t wavrec_t::use_date [private]
5.366.3.6 MHAEvents::patchbay_t<wavrec_t> wavrec_t::patchbay [private]
```

The documentation for this class was generated from the following file:

· wavrec.cpp

5.367 wavwriter_t Class Reference

Public Member Functions

- wavwriter_t (bool active, const mhaconfig_t &cf, unsigned int fifosize, unsigned int minwrite, const std::string &prefix, bool use_date)
- ~wavwriter_t ()
- void process (mha_wave_t *)

Private Member Functions

void write_thread ()

Static Private Member Functions

static void * write_thread (void *this_)

Private Attributes

```
• bool close session

    bool act

   · mhaconfig_t cf_
   • SNDFILE * sf
   mha fifo t< mha real t > fifo

    unsigned int minw

    · pthread t writethread
    • float * data
5.367.1 Constructor & Destructor Documentation
5.367.1.1 wavwriter_t::wavwriter_t (
                      bool active.
                      const mhaconfig_t & cf,
                      unsigned int fifosize,
                      unsigned int minwrite,
                      const std::string & prefix,
                      bool use date )
5.367.1.2 wavwriter_t::~wavwriter_t ( )
5.367.2 Member Function Documentation
5.367.2.1 void wavwriter_t::process (
                      mha wave t * s)
5.367.2.2 static void* wavwriter_t::write_thread (
                      void * this_ ) [inline],[static],[private]
5.367.2.3 void wavwriter_t::write_thread() [private]
5.367.3 Member Data Documentation
5.367.3.1
         bool wavwriter t::close session [private]
5.367.3.2 bool wavwriter_t::act_ [private]
5.367.3.3 mhaconfig_t wavwriter_t::cf_ [private]
5.367.3.4 SNDFILE* wavwriter_t::sf [private]
5.367.3.5 mha_fifo_t<mha_real_t> wavwriter_t::fifo [private]
5.367.3.6 unsigned int wavwriter_t::minw_ [private]
5.367.3.7 pthread_t wavwriter_t::writethread [private]
```

The documentation for this class was generated from the following file:

· wavrec.cpp

5.367.3.8 float* **wavwriter_t::data** [private]

5.368 windowselector t Class Reference

A combination of mha parser variables to describe an overalapadd analysis window.

Public Member Functions

- windowselector_t (const std::string &default_type)
 constructor creates the mha parser variables that describe an overlapadd analysis window.
- ~windowselector_t ()

destructor frees window data that were allocated

- const **MHAWindow::base_t** & **get_window_data** (unsigned length) re-computes the window if required.
- void insert_items (MHAParser::parser_t *p)

insert the window parameters "wndtype", "wndexp", and "userwnd" as mha configuration parameters into the given mha configuration parser.

Public Attributes

MHAEvents::emitter_t updated

A collector event that fires when any of the window parameters managed here is written to.

Private Member Functions

void invalidate_window_data ()

invalidates any allocated window samples.

void update_parser ()

invoked when a parser parameter changes.

Private Attributes

MHAWindow::base t * wnd

Storage for the window data returned by **get_window_data()** (p. 922)

MHAParser::kw_t wndtype

parser variable for window type

MHAParser::float_t wndexp

parser variable for window exponent

MHAParser::vfloat_t userwnd

parser variable for user window samples to use

MHAEvents::patchbay_t< windowselector_t > patchbay

patchbay to watch for changes for the parser variables

5.368.1 Detailed Description

A combination of mha parser variables to describe an overalapadd analysis window.

Provides a method to get the window samples as an instance of **MHAWindow::base_t** (p. 798) when needed.

```
5.368.2 Constructor & Destructor Documentation
```

constructor creates the mha parser variables that describe an overlapadd analysis window.

Parameters

default_type	name of the default analysis window type. Must be one of: "rect", "bartlett",]
	"hanning", "hamming", "blackman"	

```
5.368.2.2 windowselector t::~windowselector t()
```

destructor frees window data that were allocated

5.368.3 Member Function Documentation

```
5.368.3.1 const MHAWindow::base_t & windowselector_t::get_window_data ( unsigned length )
```

re-computes the window if required.

Parameters

the desired window length in samples return the window's samples as a constref to **MHAWindow::base_t** (p. 798) instance. The referenced instance lives until the window parameters are changed, or this **windowselector_t** (p. 921) instance is destroyed.

insert the window parameters "wndtype", "wndexp", and "userwnd" as mha configuration parameters into the given mha configuration parser.

Parameters

p The configuration parser where to insert the window parameters. E.g. the plugin wave2spec's interface class.

5.368.3.3 void windowselector_t::invalidate_window_data() [private]

invalidates any allocated window samples.

5.368.3.4 void windowselector_t::update_parser() [private]

invoked when a parser parameter changes.

Calls invalidate_window_data() (p. 923) and emits the updated event.

5.368.4 Member Data Documentation

5.368.4.1 MHAEvents::emitter_t windowselector_t::updated

A collector event that fires when any of the window parameters managed here is written to.

5.368.4.2 MHAWindow::base_t* windowselector_t::wnd [private]

Storage for the window data returned by **get_window_data()** (p. 922)

5.368.4.3 MHAParser::kw_t windowselector_t::wndtype [private]

parser variable for window type

5.368.4.4 MHAParser::float twindowselector_t::wndexp [private]

parser variable for window exponent

5.368.4.5 MHAParser::vfloat_t windowselector_t::userwnd [private]

parser variable for user window samples to use

5.368.4.6 MHAEvents::patchbay_t<windowselector_t> windowselector_t::patchbay [private]

patchbay to watch for changes for the parser variables

The documentation for this class was generated from the following files:

- · windowselector.h
- windowselector.cpp

6 File Documentation

6.1 ac2lsl.cpp File Reference

Classes

class ac2lsl::save_var_base_t

Interface for ac to Isl bridge variable.

class ac2lsl::save_var_t< T >

Implementation for all ac to Isl bridges except complex types.

class ac2lsl::save_var_t< mha_complex_t >

Template specialization of the ac2lsl (p. 77) bridge to take care of complex numbers.

· class ac2lsl::cfg_t

Runtime configuration class of the ac2lsl (p. 77) plugin.

· class ac2lsl::ac2lsl_t

Plugin class of ac2lsl (p. 77).

• struct RunOnce

Namespaces

· ac2lsl

All types for the ac2lsl (p. 77) plugins live in this namespace.

6.2 ac2osc.cpp File Reference

Classes

class ac2osc_t

Plugin class of the ac2osc plugin.

• struct RunOnce

6.3 ac2wave.cpp File Reference

Classes

- · class ac2wave t
- class ac2wave_if_t

- 6.4 ac_monitor_type.cpp File Reference
- 6.5 ac_monitor_type.hh File Reference

Classes

class acmon::ac_monitor_t

A class for converting AC variables to Parser monitors of correct type.

Namespaces

· acmon

Namespace for displaying ac variables as parser monitors.

6.6 acConcat_wave.cpp File Reference

Macros

- #define PATCH_VAR(var) patchbay.connect(&var.valuechanged, this, &acConcat_←
 wave::update_cfg)
- #define INSERT_PATCH(var) insert_member(var); PATCH_VAR(var)
- 6.6.1 Macro Definition Documentation
- 6.6.1.1 #define PATCH_VAR(

 var) patchbay.connect(&var.valuechanged, this, &acConcat_wave::update

 _cfg)
- 6.6.1.2 #define INSERT_PATCH(

 var) insert_member(var); PATCH_VAR(var)
- 6.7 acConcat wave.h File Reference

Classes

- class acConcat_wave_config
- · class acConcat wave
- 6.8 acmon.cpp File Reference

Classes

class acmon::acmon_t

Namespaces

acmon

Namespace for displaying ac variables as parser monitors.

6.9 acPooling_wave.cpp File Reference

Macros

- #define PATCH_VAR(var) patchbay.connect(&var.valuechanged, this, &acPooling_
 wave::update_cfg)
- #define INSERT_PATCH(var) insert_member(var); PATCH_VAR(var)
- 6.9.1 Macro Definition Documentation
- 6.9.1.1 #define PATCH_VAR(

 var) patchbay.connect(&var.valuechanged, this, &acPooling_wave::update

 _cfg)
- 6.9.1.2 #define INSERT_PATCH(

 var) insert member(var); PATCH VAR(var)
- 6.10 acPooling_wave.h File Reference

Classes

- · class acPooling wave config
- class acPooling_wave
- 6.11 acsave.cpp File Reference

Classes

- class acsave::save_var_t
- class acsave::cfg_t
- class acsave::acsave t
- struct acsave::mat4head_t

Namespaces

acsave

Macros

- #define ACSAVE_FMT_TXT 0
- #define ACSAVE SFMT TXT "txt"
- #define ACSAVE_FMT_MAT4 1
- #define ACSAVE_SFMT_MAT4 "mat4"
- #define ACSAVE FMT M 2
- #define ACSAVE_SFMT_M "m"
- 6.11.1 Macro Definition Documentation
- 6.11.1.1 #define ACSAVE_FMT_TXT 0
- 6.11.1.2 #define ACSAVE_SFMT_TXT "txt"
- 6.11.1.3 #define ACSAVE_FMT_MAT4 1
- 6.11.1.4 #define ACSAVE SFMT MAT4 "mat4"
- 6.11.1.5 #define ACSAVE_FMT_M 2
- 6.11.1.6 #define ACSAVE_SFMT_M "m"
- 6.12 acSteer.cpp File Reference

Macros

- #define INSERT_PATCH(var) insert_member(var); PATCH_VAR(var)
- 6.12.1 Macro Definition Documentation
- 6.12.1.1 #define PATCH_VAR(

var) patchbay.connect(&var.valuechanged, this, &acSteer::update_cfg)

6.12.1.2 #define INSERT_PATCH(

var) insert_member(var); PATCH_VAR(var)

6.13 acSteer.h File Reference

Classes

- class acSteer_config
- · class acSteer

6.14 acTransform_wave.cpp File Reference

Macros

- #define PATCH_VAR(var) patchbay.connect(&var.valuechanged, this, &acTransform_←
 wave::update_cfg)
- #define INSERT PATCH(var) insert member(var); PATCH VAR(var)
- 6.14.1 Macro Definition Documentation
- 6.14.1.1 #define PATCH_VAR(

 var) patchbay.connect(&var.valuechanged, this, &acTransform_wave

 ::update_cfg)
- 6.14.1.2 #define INSERT_PATCH(

 var) insert_member(var); PATCH_VAR(var)
- 6.15 acTransform_wave.h File Reference

Classes

- class acTransform wave config
- class acTransform wave
- 6.16 addsndfile.cpp File Reference

Classes

class addsndfile::waveform_proxy_t

Class helps to specify which instance of MHASignal_waveform_t parent instance is meant in **resampled_soundfile_t** (p. 177).

class addsndfile::resampled_soundfile_t

Reads sound from file and resamples it if necessary and wanted.

- class addsndfile::sndfile_t
- class addsndfile::level_adapt_t
- class addsndfile::addsndfile_if_t

Namespaces

· addsndfile

Macros

#define **DEBUG**(x) std::cerr << __FILE__ << ":" << __LINE__ << " " #x "=" << x << std::endl

Typedefs

- typedef MHAPlugin::config_t< level_adapt_t > addsndfile::level_adaptor
- typedef MHAPlugin::plugin_t< sndfile_t > addsndfile::wave_reader

Enumerations

Functions

- static unsigned **addsndfile::resampled_num_frames** (unsigned num_source_frames, float source_rate, float target_rate, addsndfile_resampling_mode_t resampling_mode)
- 6.16.1 Macro Definition Documentation
- 6.17 adm.cpp File Reference

Classes

- · class adm rtconfig t
- class adm_if_t

Functions

- MHASignal::waveform_t * adm_fir_lp (unsigned int fs, unsigned f_pass, unsigned int f_stop, unsigned int order)
- MHASignal::waveform_t * adm_fir_decomb (unsigned int fs, float dist_m, unsigned int order)

6.17.1 Function Documentation

6.18 adm.hh File Reference

Classes

class ADM::Linearphase_FIR< F >

An efficient linear-phase fir filter implementation.

class ADM::Delay< F >

A delay-line class which can also do subsample-delays for a limited frequency range below fs/4.

class ADM::ADMF >

Adaptive differential microphone, working for speech frequency range.

Namespaces

ADM

Functions

static double ADM::subsampledelay_coeff (double samples, double f_design, double fs=1.0)

compute IIR coefficient for subsample delay

Variables

- const double **ADM::PI** = 3.14159265358979312
- const double ADM::C = 340
- const double ADM::DELAY FREQ = 2000
- const double **ADM::START_BETA** = 0.5

6.19 altplugs.cpp File Reference

Classes

- class mhaplug_cfg_t
- class altplugs_t

Macros

- #define MHAPLUGIN_OVERLOAD_OUTDOMAIN
- 6.19.1 Macro Definition Documentation
- 6.19.1.1 #define MHAPLUGIN_OVERLOAD_OUTDOMAIN
- 6.20 analysemhaplugin.cpp File Reference

Functions

- std::string strdom (mha_domain_t d)
- void print_ac (MHAKernel::algo_comm_class_t &ac, std::string txt)
- int **main** (int argc, char **argv)
- 6.20.1 Function Documentation
- 6.20.1.1 std::string strdom (mha_domain_t d)
- 6.20.1.2 void print_ac (

MHAKernel::algo_comm_class_t & ac,

std::string txt)

6.21 analysispath.cpp File Reference

Classes

- class analysepath_t
- class plug_t
- class analysispath_if_t

Functions

static void * thread start (void *instance)

6.21.1 Function Documentation

- 6.22 auditory_profile.cpp File Reference
- 6.23 auditory_profile.h File Reference

Classes

class AuditoryProfile::fmap_t

A class to store frequency dependent data (e.g., HTL and UCL).

class AuditoryProfile::profile t

The Auditory Profile class.

class AuditoryProfile::profile_t::ear_t

Class for ear-dependent parameters, e.g., audiograms or unilateral loudness scaling.

class AuditoryProfile::parser_t

Class to make the auditory profile accessible through the parser interface.

- class AuditoryProfile::parser_t::fmap_t
- class AuditoryProfile::parser_t::ear_t

Namespaces

AuditoryProfile

Namespace for classes and functions around the auditory profile (e.g., audiogram handling)

6.24 browsemhaplugins.cpp File Reference

Macros

• #define **DEBUG**(x) std::cerr << __FILE__ << ":" << __LINE__ << " " << #x << "=" << x << std::endl

Functions

• int **main** (int argc, char **argv)

6.24.1 Macro Definition Documentation

6.24.2 Function Documentation

6.25 coherence.cpp File Reference

Classes

- class coherence::vars_t
- class coherence::cohflt t
- class coherence::cohflt_if_t

Namespaces

coherence

Functions

- void coherence::getcipd (mha_complex_t &c, mha_real_t &a, const mha_complex←
 _t &xl, const mha_complex_t &xr)
- 6.26 combinechannels.cpp File Reference

Classes

- · class combc t
- · class combc_if_t
- 6.27 complex_filter.cpp File Reference
- 6.28 complex filter.h File Reference

Classes

class MHAFilter::complex_bandpass_t

Complex bandpass filter.

class MHAFilter::gamma_flt_t
 Class for gammatone filter.

class MHAFilter::thirdoctave_analyzer_t

Namespaces

MHAFilter

Namespace for IIR and FIR filter classes.

6.29 cpuload.cpp File Reference

Classes

- · class cpuload_t
- 6.30 db.cpp File Reference

Classes

- class db_t
- class db_if_t
- 6.31 dc.cpp File Reference

Classes

- class dc::wb_inhib_cfg_t
- class dc::wideband_inhib_vars_t
- class dc::dc_vars_t
- class dc::dc_vars_validator_t
- class dc::dc_t
- class dc::dc_if_t

Namespaces

• dc

Macros

#define DUPVEC(x) v.x.data = MHASignal::dupvec_chk(v.x.data,s)

Functions

 unsigned int dc::get_audiochannels (unsigned int totalchannels, std::string acname, algo_comm_t ac)

6.31.1 Macro Definition Documentation

```
6.31.1.1 #define DUPVEC(
 x ) v.x.data = MHASignal::dupvec_chk(v.x.data,s)
```

6.32 dc_afterburn.cpp File Reference

Namespaces

DynComp

dynamic compression related classes and functions

Functions

• float mylogf (float x)

6.32.1 Function Documentation

6.32.1.1 float mylogf (float
$$x$$
)

6.33 dc_afterburn.h File Reference

Classes

- class DynComp::dc_afterburn_vars_t

 Variables for dc_afterburn_t (p. 280) class.
- class DynComp::dc_afterburn_rt_t
 Real-time class for after burn effect.
- class DynComp::dc_afterburn_t

Afterburn class, to be defined as a member of compressors.

Namespaces

DynComp

dynamic compression related classes and functions

6.34 dc_simple.cpp File Reference

Classes

- class dc_simple::dc_vars_t
- class dc_simple::dc_vars_validator_t
- class dc_simple::level_smoother_t
- class dc simple::dc t
- class dc simple::dc t::line t
- class dc_simple::dc_if_t

Namespaces

· dc_simple

Typedefs

- typedef MHAPlugin::plugin_t < dc_t > dc_simple::DC
- typedef MHAPlugin::config_t< level_smoother_t > dc_simple::LEVEL

Functions

- void dc_simple::test_fail (const std::vector< float > &v, unsigned int s, const std::string &name)
- std::vector< float > dc_simple::force_resize (const std::vector< float > &v, unsigned int s, const std::string &name)
- mha_real_t dc_simple::not_zero (mha_real_t x, const std::string &comment="")

6.35 delay.cpp File Reference

Classes

· class delay::interface_t

Namespaces

delay

6.36 delaysum.cpp File Reference

Classes

• class delaysum::delaysum_t

Runtime configuration of the delaysum plugin.

class delaysum::delaysum_if_t

Interface class for the delaysum plugin.

Namespaces

delaysum

This namespace contains the delaysum plugin.

6.37 doasym_classification.cpp File Reference

Macros

- #define INSERT_PATCH(var) insert_member(var); PATCH_VAR(var)
- 6.37.1 Macro Definition Documentation
- 6.37.1.1 #define PATCH VAR(

var) patchbay.connect(&var.valuechanged, this, &doasvm_classification←
::update_cfg)

6.37.1.2 #define INSERT PATCH(

var) insert_member(var); PATCH_VAR(var)

6.38 doasym_classification.h File Reference

Classes

- class doasvm_classification_config
- · class doasvm_classification
- 6.39 doasym_feature_extraction.cpp File Reference

Macros

- #define INSERT_PATCH(var) insert_member(var); PATCH_VAR(var)

```
6.39.1 Macro Definition Documentation
6.39.1.1 #define PATCH_VAR(
                     var ) patchbay.connect(&var.valuechanged, this, &doasvm_feature_←
        extraction::update cfg)
6.39.1.2 #define INSERT_PATCH(
                     var ) insert_member(var); PATCH_VAR(var)
6.40 doasym_feature_extraction.h File Reference
Classes

    class doasvm_feature_extraction_config

   · class doasvm feature extraction
6.41
      doc_appendix.h File Reference
6.42 doc_examples.h File Reference
6.43 doc frameworks.h File Reference
6.44 doc_general.h File Reference
6.45 doc_kernel.h File Reference
6.46
     doc_matlab.h File Reference
6.47 doc_mhamain.h File Reference
6.48 doc_parser.h File Reference
6.49 doc_plugif.cpp File Reference
6.50
      doc_plugins.h File Reference
6.51 doc_system.h File Reference
6.52 doc_toolbox.h File Reference
6.53 downsample.cpp File Reference
Classes
```

• class ds_t

© 2005-2018 HörTech gGmbH, Oldenburg

6.54 droptect.cpp File Reference

Classes

class droptect_t

Detect dropouts in a signal with a constant spectrum.

6.55 example1.cpp File Reference

Classes

class example1_t

This C++ class implements the simplest example plugin for the step-by-step tutorial.

6.56 example2.cpp File Reference

Classes

class example2_t

This C++ class implements the second example plugin for the step-by-step tutorial.

6.57 example3.cpp File Reference

Classes

class example3_t

A Plugin class using the openMHA Event mechanism.

6.58 example4.cpp File Reference

Classes

class example4_t

A Plugin class using the spectral signal.

6.59 example5.cpp File Reference

Classes

- class example5_t
- class plugin_interface_t

Macros

• #define __declspec(p)

6.59.1 Macro Definition Documentation

6.60 example6.cpp File Reference

Classes

- class cfg_t
- · class example6_t

Macros

• #define __declspec(p)

6.60.1 Macro Definition Documentation

6.61 fader_spec.cpp File Reference

Classes

- class spec_fader_t
- class fader_if_t

6.62 fader_wave.cpp File Reference

Classes

- class fader_wave::level_adapt_t
- class fader_wave::fader_wave_if_t

Namespaces

· fader_wave

Macros

#define **DEBUG**(x) std::cerr << __FILE__ << ":" << __LINE__ << " " #x "=" << x << std::endl

Typedefs

- typedef MHAPlugin::plugin_t< level_adapt_t > fader_wave::level_adaptor
- 6.62.1 Macro Definition Documentation

6.63 fftfilterbank.cpp File Reference

Classes

- class fftfilterbank::fftfb_plug_t
- class fftfilterbank::fftfb_interface_t

Namespaces

- fftfilterbank
- 6.64 fshift_hilbert.cpp File Reference

Classes

- class hilbert_shifter_t
- class frequency_translator_t
- 6.65 gain.cpp File Reference

Classes

- class gain::scaler_t
- class gain::gain_if_t

Namespaces

• gain

6.66 gaintable.cpp File Reference

Functions

- std::vector< mha_real_t > convert_f2logf (const std::vector< mha_real_t > &vF)
- bool isempty (const std::vector< std::vector< mha_real_t >> &arg)
- 6.66.1 Function Documentation

6.66.1.2 bool isempty (

const std::vector< std::vector< mha_real_t >> & arg)

6.67 gaintable.h File Reference

Classes

• class DynComp::gaintable_t

Gain table class.

Namespaces

DynComp

dynamic compression related classes and functions

Functions

mha_real_t DynComp::interp1 (const std::vector< mha_real_t > &vX, const std
 ::vector< mha_real_t > &vY, mha_real_t X)

One-dimensional linear interpolation.

mha_real_t DynComp::interp2 (const std::vector< mha_real_t > &vX, const std
 ::vector< mha_real_t > &vY, const std::vector< std::vector< mha_real_t > > &mZ,
 mha_real_t X, mha_real_t Y)

Linear interpolation in a two-dimensional field.

6.68 generatemhaplugindoc.cpp File Reference

Classes

class latex_doc_t

Functions

- std::string conv2latex (std::string s, bool iscolored=false)
- void create_latex_doc (std::map< std::string, std::string > &doc, const std::string &plug-name, const std::string &plugin_macro)
- int **main** (int argc, char **argv)

```
6.68.1 Function Documentation
```

6.69 hann.cpp File Reference

Macros

#define PI 3.14159265358979323846

Functions

- float * hannf (const unsigned int N)
- double * hann (const unsigned int N)

```
6.69.1 Macro Definition Documentation
6.69.1.1 #define PI 3.14159265358979323846
6.69.2 Function Documentation
6.69.2.1 float* hannf (
                      const unsigned int N)
6.69.2.2 double* hann (
                      const unsigned int N)
6.70 hann.h File Reference
Functions

    float * hannf (const unsigned int N)

    • double * hann (const unsigned int N)
6.70.1 Function Documentation
6.70.1.1 float* hannf (
                      const unsigned int N)
6.70.1.2 double* hann (
                      const unsigned int N)
6.71 identity.cpp File Reference
Classes
    · class identity_t
6.72 ifftshift.cpp File Reference
Functions
```

void ifftshift (mha_wave_t *spec)

```
6.72.1 Function Documentation
```

```
6.72.1.1 void ifftshift (

mha_wave_t * spec )
```

6.73 ifftshift.h File Reference

Functions

void ifftshift (mha_wave_t *spec)

6.73.1 Function Documentation

```
6.73.1.1 void ifftshift ( mha_wave_t * spec )
```

6.74 iirfilter.cpp File Reference

Classes

class iirfilter_t

Macros

- #define PATCH_VAR(var) patchbay.connect(&var.valuechanged, this, &lpc::update_←
 cfg)
- #define INSERT_PATCH(var) insert_member(var); PATCH_VAR(var)

Functions

void Levinson2 (unsigned int P, const std::vector< mha_real_t > &R, std::vector< mha←
 _real_t > &A)

```
6.75.1 Macro Definition Documentation
6.75.1.1 #define PATCH_VAR(
                     var ) patchbay.connect(&var.valuechanged, this, &lpc::update_cfg)
6.75.1.2 #define INSERT_PATCH(
                     var ) insert member(var); PATCH VAR(var)
6.75.2 Function Documentation
6.75.2.1 void Levinson2 (
                     unsigned int P,
                     const std::vector< mha_real_t > & R,
                     std::vector< mha_real_t > & A )
6.76 lpc.h File Reference
Classes
   · class lpc config
   • class Ipc
6.77 | lpc_bl_predictor.cpp File Reference
Macros

    #define PATCH_VAR(var) patchbay.connect(&var.valuechanged, this, &lpc_bl_←

     predictor::update cfg)
   • #define INSERT_PATCH(var) insert_member(var); PATCH_VAR(var)
6.77.1 Macro Definition Documentation
6.77.1.1 #define PATCH_VAR(
                     var ) patchbay.connect(&var.valuechanged, this, &lpc_bl_predictor←
         ::update_cfg)
6.77.1.2 #define INSERT_PATCH(
                     var ) insert member(var); PATCH VAR(var)
6.78 lpc_bl_predictor.h File Reference
Classes
```

class lpc_bl_predictor_config

class lpc_bl_predictor

Macros

- #define **EPSILON** 1e-10
- 6.78.1 Macro Definition Documentation
- 6.78.1.1 #define EPSILON 1e-10
- 6.79 lpc_burg-lattice.cpp File Reference

Macros

- #define PATCH_VAR(var) patchbay.connect(&var.valuechanged, this, &lpc_burglattice
 ::update_cfg)
- #define INSERT_PATCH(var) insert_member(var); PATCH_VAR(var)
- 6.79.1 Macro Definition Documentation
- 6.79.1.1 #define PATCH_VAR(

 var) patchbay.connect(&var.valuechanged, this, &lpc_burglattice::update

 _cfg)
- 6.79.1.2 #define INSERT_PATCH(

 var) insert_member(var); PATCH_VAR(var)
- 6.80 lpc_burg-lattice.h File Reference

Classes

- class lpc_burglattice_config
- class lpc_burglattice

Macros

- #define EPSILON 1e-10
- 6.80.1 Macro Definition Documentation
- 6.80.1.1 #define EPSILON 1e-10
- 6.81 matrixmixer.cpp File Reference

Classes

- class matrixmixer::cfg_t
- class matrixmixer::matmix_t

Namespaces

matrixmixer

6.82 mha.cpp File Reference

Functions

- int **mhamain** (int argc, char *argv[])
- int main (int argc, char *argv[])

6.82.1 Function Documentation

6.83 mha.h File Reference

common types for MHA kernel, MHA framework applications and external plugins

Classes

struct mha_complex_t

Type for complex floating point values.

struct mha_direction_t

Channel source direction structure.

struct mha_channel_info_t

Channel information structure.

struct mha_wave_t

Waveform signal structure.

struct mha_spec_t

Spectrum signal structure.

struct mha_audio_descriptor_t

Description of an audio fragment (planned as a replacement of mhaconfig_t (p. 467)).

struct mha_audio_t

An audio fragment in the openMHA (planned as a replacement of **mha_wave_t** (p. 459) and **mha_spec_t** (p. 429)).

struct mhaconfig_t

MHA prepare configuration structure.

struct comm_var_t

Algorithm communication variable structure.

struct algo_comm_t

A reference handle for algorithm communication variables.

Macros

#define MHA_CALLBACK_TEST(x)

Test macro to compare function type definition and declaration.

- #define MHA_CALLBACK_TEST_PREFIX(prefix, x)
- #define MHA_XSTRF(x) MHA_STRF(x)
- #define MHA_STRF(x) #x
- #define MHA_VERSION_MAJOR 4

Major version number of MHA.

#define MHA_VERSION_MINOR 6

Minor version number of MHA.

#define MHA_VERSION_RELEASE 1

Release number of MHA.

#define MHA VERSION BUILD 0

Build number of MHA (currently unused)

#define MHA_STRUCT_SIZEMATCH (unsigned int)((sizeof(mha_real_t)==4)+2*(sizeof(mha complex_t)==8)+4*(sizeof(mha_wave_t)==8+2*sizeof(void*))+8*(sizeof(mha_spec complex_t)==8+2*sizeof(void*))+16*(sizeof(mhaconfig_t)==24))

Test number for structure sizes.

#define MHA_VERSION (unsigned int)((MHA_STRUCT_SIZEMATCH | (MHA_VERS → ION_RELEASE << 8) | (MHA_VERSION_MINOR << 16) | (MHA_VERSION_MAJOR << 24)))

Full version number of MHA kernel.

#define MHA_VERSION_STRING MHA_XSTRF(MHA_VERSION_MAJOR) "." MHA_

 XSTRF(MHA_VERSION_MINOR)

Version string of MHA kernel (major.minor)

#define MHA_RELEASE_VERSION_STRING MHA_XSTRF(MHA_VERSION_MAJOR)
 "." MHA_XSTRF(MHA_VERSION_MINOR)
 "." MHA_XSTRF(MHA_VERSION_RELE ASE)

Version string of MHA kernel (major.minor.release)

- #define MHA_WAVEFORM 0
- #define MHA SPECTRUM 1
- #define MHA DOMAIN MAX 2
- #define MHA DOMAIN UNKNOWN MHA DOMAIN MAX
- #define MHA_AC_UNKNOWN 0
- #define MHA AC CHAR 1
- #define MHA_AC_INT 2
- #define MHA AC MHAREAL 3
- #define MHA AC FLOAT 4
- #define MHA AC DOUBLE 5
- #define MHA AC MHACOMPLEX 6
- #define MHA AC VEC FLOAT 51
- #define MHA AC USER 1000

Typedefs

- typedef unsigned int mha_domain_t
- typedef float mha_real_t

openMHA type for real numbers

typedef void * mha_fft_t
 Handle for an FFT object.

- typedef struct algo_comm_t algo_comm_t
- typedef unsigned int(* MHAGetVersion_t) (void)
- typedef int(* MHAInit_t) (algo_comm_t algo_comm, const char *chain, const char *algo, void **h)
- typedef int(* MHAPrepare_t) (void *h, mhaconfig_t *cfg)
- typedef int(* MHARelease_t) (void *h)
- typedef void(* MHADestroy_t) (void *h)
- typedef int(* MHASet_t) (void *h, const char *cmd, char *retval, unsigned int len)
- typedef const char *(* MHAStrError_t) (void *h, int err)
- typedef int(* MHAProc_wave2wave_t) (void *h, mha_wave_t *sIn, mha_wave_t **s⊷
 Out)
- typedef int(* MHAProc_wave2spec_t) (void *h, mha_wave_t *sIn, mha_spec_t **s
 Out)
- typedef int(* MHAProc_spec2wave_t) (void *h, mha_spec_t *sIn, mha_wave_t **s
 Out)
- typedef int(* MHAProc_spec2spec_t) (void *h, mha_spec_t *sln, mha_spec_t **sOut)
- typedef const char *(* MHAPluginDocumentation_t) (void)
- typedef const char *(* MHAPluginCategory t) (void)

6.83.1 Detailed Description

common types for MHA kernel, MHA framework applications and external plugins

6.83.2 Macro Definition Documentation

Test macro to compare function type definition and declaration.

```
6.83.2.2 #define MHA_CALLBACK_TEST_PREFIX(

prefix,

x )
```

6.83.2.5 #define MHA VERSION MAJOR 4

Major version number of MHA.

6.83.2.6 #define MHA_VERSION_MINOR 6

Minor version number of MHA.

6.83.2.7 #define MHA_VERSION_RELEASE 1

Release number of MHA.

6.83.2.8 #define MHA_VERSION_BUILD 0

Build number of MHA (currently unused)

6.83.2.9 #define MHA_STRUCT_SIZEMATCH (unsigned int)((sizeof(mha_real_t)==4)+2*(sizeof(mha← _complex_t)==8)+4*(sizeof(mha_wave_t)==8+2*sizeof(void*))+8*(sizeof(mha_spec_← t)==8+2*sizeof(void*))+16*(sizeof(mhaconfig_t)==24))

Test number for structure sizes.

6.83.2.10 #define MHA_VERSION (unsigned int)((MHA_STRUCT_SIZEMATCH | (MHA_VERSION_RELEASE << 8) | (MHA_VERSION_MINOR << 16) | (MHA_VERSION_MAJOR << 24)))

Full version number of MHA kernel.

6.83.2.11 #define MHA_VERSION_STRING MHA_XSTRF(MHA_VERSION_MAJOR) "." MHA_XSTRF(MHA_VERSION_MINOR)

Version string of MHA kernel (major.minor)

6.83.2.12 #define MHA_RELEASE_VERSION_STRING MHA_XSTRF(MHA_VE← RSION_MAJOR) "." MHA_XSTRF(MHA_VERSION_MINOR) "." MHA_XSTRF(MHA_VERSION_RELEASE)

Version string of MHA kernel (major.minor.release)

6.83.2.13	#define MHA_WAVEFORM 0	
6.83.2.14	#define MHA_SPECTRUM 1	
6.83.2.15	#define MHA_DOMAIN_MAX 2	
6.83.2.16	#define MHA_DOMAIN_UNKNOWN MHA_DOMAIN_MAX	
6.83.2.17	#define MHA_AC_UNKNOWN 0	
6.83.2.18	#define MHA_AC_CHAR 1	
6.83.2.19	#define MHA_AC_INT 2	
6.83.2.20	#define MHA_AC_MHAREAL 3	
6.83.2.21	#define MHA_AC_FLOAT 4	
6.83.2.22	#define MHA_AC_DOUBLE 5	
6.83.2.23	#define MHA_AC_MHACOMPLEX 6	
6.83.2.24	#define MHA_AC_VEC_FLOAT 51	
6.83.2.25	#define MHA_AC_USER 1000	
6.83.3 Typedef Documentation		
6.83.3.1	typedef unsigned int mha_domain_t	
6.83.3.2	typedef struct algo_comm_t algo_comm_t	
6.83.3.3	typedef unsigned int(* MHAGetVersion_t) (void)	
6.83.3.4	typedef int(* MHAInit_t) (algo_comm_t algo_comm, const char *chain, const char *algo, void **h)	
6.83.3.5	typedef int(* MHAPrepare_t) (void *h, mhaconfig_t *cfg)	
6.83.3.6	typedef int(* MHARelease_t) (void *h)	
6.83.3.7	typedef void(* MHADestroy_t) (void *h)	

- typedef int(* MHASet_t) (void *h, const char *cmd, char *retval, unsigned int len)

 typedef const char*(* MHAStrError_t) (void *h, int err)

 typedef int(* MHAProc_wave2wave_t) (void *h, mha_wave_t *sln, mha_wave_t **sOut)

 typedef int(* MHAProc_wave2spec_t) (void *h, mha_wave_t *sln, mha_spec_t **sOut)

 typedef int(* MHAProc_spec2wave_t) (void *h, mha_spec_t *sln, mha_wave_t **sOut)

 typedef int(* MHAProc_spec2spec_t) (void *h, mha_spec_t *sln, mha_spec_t **sOut)

 typedef int(* MHAProc_spec2spec_t) (void *h, mha_spec_t *sln, mha_spec_t **sOut)

 typedef const char*(* MHAPluginDocumentation_t) (void)
- 6.83.3.15 typedef const char*(* MHAPluginCategory_t) (void)
- 6.84 mha_algo_comm.cpp File Reference

Macros

- #define AC_SUCCESS 0
- #define AC_INVALID_HANDLE -1
- #define AC_INVALID_NAME -2
- #define AC_STRING_TRUNCATED -3
- #define AC_INVALID_OUTPTR -4
- #define AC_TYPE_MISMATCH -5
- #define AC_DIM_MISMATCH -6

Variables

- algo_comm_t algo_comm_default
- 6.84.1 Macro Definition Documentation
- 6.84.1.1 #define AC_SUCCESS 0
- 6.84.1.2 #define AC_INVALID_HANDLE -1
- 6.84.1.3 #define AC_INVALID_NAME -2
- 6.84.1.4 #define AC_STRING_TRUNCATED -3
- 6.84.1.5 #define AC_INVALID_OUTPTR -4
- 6.84.1.6 #define AC_TYPE_MISMATCH -5
- 6.84.1.7 #define AC_DIM_MISMATCH -6
- 6.84.2 Variable Documentation
- 6.84.2.1 algo_comm_t algo_comm_default
- 6.85 mha_algo_comm.h File Reference

Header file for Algorithm Communication.

Classes

class MHA AC::spectrum t

Insert a MHASignal::spectrum_t (p. 763) class into the AC space.

class MHA AC::waveform t

Insert a MHASignal::waveform_t (p. 775) class into the AC space.

class MHA AC::int t

Insert a integer variable into the AC space.

class MHA_AC::float_t

Insert a float point variable into the AC space.

class MHA_AC::double_t

Insert a double precision floating point variable into the AC space.

- class MHA_AC::stat_t
- class MHA_AC::ac2matrix_helper_t
- class MHA_AC::ac2matrix_t

Copy AC variable to a matrix.

class MHA_AC::acspace2matrix_t

Copy all or a subset of all numeric AC variables into an array of matrixes.

Namespaces

· MHA AC

Functions and classes for Algorithm Communication (AC) support.

Functions

- mha_spec_t MHA_AC::get_var_spectrum (algo_comm_t ac, const std::string &name)

 Convert an AC variable into a spectrum.
- mha_wave_t MHA_AC::get_var_waveform (algo_comm_t ac, const std::string &name)

Convert an AC variable into a waveform.

• int MHA_AC::get_var_int (algo_comm_t ac, const std::string &name)

Return value of an integer scalar AC variable.

• float MHA_AC::get_var_float (algo_comm_t ac, const std::string &name)

Return value of an floating point scalar AC variable.

std::vector< float > MHA_AC::get_var_vfloat (algo_comm_t ac, const std::string &name)

Return value of an floating point vector AC variable as standard vector of floats.

6.85.1 Detailed Description

Header file for Algorithm Communication.

6.86 mha_algo_comm.hh File Reference

Classes

- class MHAKernel::comm_var_map_t
- class MHAKernel::algo_comm_class_t

Namespaces

MHAKernel

Macros

#define ALGO_COMM_ID_STR "MFVK3jL5rmeus1XtggEl971aXCR/GU7RRehKz4k
 Qtrg="

Functions

• algo_comm_class_t * MHAKernel::algo_comm_safe_cast (void *)

Variables

- algo_comm_t algo_comm_default
- 6.86.1 Macro Definition Documentation
- 6.86.1.1 #define ALGO_COMM_ID_STR "MFVK3jL5rmeus1XtggEl971aXCR/GU7RRehKz4kQtrg="
- 6.86.2 Variable Documentation
- 6.86.2.1 algo_comm_t algo_comm_default
- 6.87 mha_defs.h File Reference

Preprocessor definitions common to all MHA components.

Macros

- #define __MHA_FUN__ __FUNC__
- #define CHECK_EXPR(x) {if(!(x)){throw MHA_Error(__FILE__,_LINE__,"The expression \"" #x "\" is invalid.");}}
- #define CHECK_VAR(x) {if(!(x)){throw MHA_Error(__FILE__,__LINE__,"The variable \"" #x "\" is not defined.");}}
- #define **declspec**(p)
- #define M PI 3.14159265358979323846

Define pi if it is not defined yet.

• #define **MIN**(a, b) (((a)<(b))?(a):(b))

Macro for minimum function.

• #define **MAX**(a, b) (((a)>(b))?(a):(b))

Macro for maximum function.

- #define MHA_EAR_LEFT 0
- #define MHA EAR RIGHT 1
- #define MHA EAR MAX 2

6.87.1 Detailed Description

Preprocessor definitions common to all MHA components.

This file contains all preprocessor and type definitions which are common to all Master Hearing Aid components.

```
6.87.2 Macro Definition Documentation
```

```
6.87.2.1 #define __MHA_FUN___FUNC__
```

6.87.2.2 #define CHECK EXPR(

```
x ) {if(!(x)){throw MHA_Error(__FILE__,__LINE__,"The expression \"" \#x "\" is invalid.");}}
```

6.87.2.3 #define CHECK_VAR(

```
x ) {if(!(x)){throw MHA_Error(__FILE__,__LINE__,"The variable \"" #x "\" is not defined.");}}
```

6.87.2.4 #define __declspec(p)

Define pi if it is not defined yet.

6.87.2.5 #define M_PI 3.14159265358979323846

6.87.2.6 #define MIN(

Macro for minimum function.

6.87.2.7 #define MAX(

Macro for maximum function.

6.87.2.8 #define MHA_EAR_LEFT 0

6.87.2.9 #define MHA_EAR_RIGHT 1

6.87.2.10 #define MHA_EAR_MAX 2

6.88 mha_errno.c File Reference

Macros

• #define STRLEN 0x1000

Functions

- const char * mha_strerror (int mhaerrno)
- void mha_set_user_error (const char *str)

Variables

- char next_except_str [STRLEN] = ""
- const char * cstr_strerror [MHA_ERR_USER]

```
6.88.1 Macro Definition Documentation
```

- 6.88.1.1 #define STRLEN 0x1000
- 6.88.2 Function Documentation
- 6.88.2.1 const char* mha_strerror (int *mhaerrno*)
- 6.88.2.2 void mha_set_user_error (
 const char * str)
- 6.88.3 Variable Documentation
- 6.88.3.1 char next_except_str[STRLEN] = ""
- 6.88.3.2 const char* cstr_strerror[MHA_ERR_USER]
- 6.89 mha_errno.h File Reference

Macros

- #define MHA_ERR_SUCCESS 0
- #define MHA_ERR_UNKNOWN 1
- #define MHA_ERR_INVALID_HANDLE 2
- #define MHA ERR NULL 3
- #define MHA_ERR_VARRANGE 4
- #define MHA_ERR_VARFMT 5
- #define MHA_ERR_USER 10000

Functions

- const char * mha_strerror (int mhaerrno)
- void mha_set_user_error (const char *str)

```
6.89.1 Macro Definition Documentation
6.89.1.1
        #define MHA_ERR_SUCCESS 0
        #define MHA_ERR_UNKNOWN 1
6.89.1.2
6.89.1.3
        #define MHA_ERR_INVALID_HANDLE 2
6.89.1.4
        #define MHA_ERR_NULL 3
6.89.1.5
        #define MHA_ERR_VARRANGE 4
6.89.1.6
        #define MHA_ERR_VARFMT 5
6.89.1.7 #define MHA_ERR_USER 10000
6.89.2 Function Documentation
6.89.2.1 const char* mha_strerror (
                     int mhaerrno )
6.89.2.2 void mha_set_user_error (
                     const char * str )
6.90
      mha_error.cpp File Reference
```

Implementation of openMHA error handling.

Namespaces

· mha error helpers

Functions

- unsigned mha_error_helpers::digits (unsigned n)
 Compute number of decimal digits required to represent an unsigned integer.
- unsigned mha_error_helpers::snprintf_required_length (const char *formatstring,...)

 snprintf_required_length Compute the number of bytes (excluding the terminating nul) required to store the result of an snprintf.
- void mha_debug (const char *fmt,...)
 Print an info message (stderr on Linux, OutputDebugString in Windows).

6.90.1 Detailed Description

Implementation of openMHA error handling.

This file forms a seperate library.

6.91 mha_error.hh File Reference

Classes

class MHA_Error

Error reporting exception class.

Namespaces

mha_error_helpers

Macros

- #define Getmsg(e) ((e).get_msg())
- #define MHA_ErrorMsg(x) MHA_Error(__FILE__,_LINE__,"%s",x)

Throw an openMHA error with a text message.

#define MHA_assert(x) if(!(x)) throw MHA_Error(__FILE__,__LINE__,"\"%s\" is false.",#x)

Assertion macro, which throws an MHA_Error (p. 410).

• #define MHA_assert_equal(a, b) if(a != b) throw MHA_Error(__FILE__,__LINE__ \leftarrow ,"\"%s == %s\" is false (%s = %g, %s = %g).",#a,#b,#a,(double)(a),#b,(double)(b))

Equality assertion macro, which throws an MHA_Error (p. 410) with the values.

Functions

void mha_debug (const char *fmt,...)

Print an info message (stderr on Linux, OutputDebugString in Windows).

• unsigned **mha_error_helpers::digits** (unsigned n)

Compute number of decimal digits required to represent an unsigned integer.

• unsigned **mha_error_helpers::snprintf_required_length** (const char *formatstring,...)

snprintf_required_length Compute the number of bytes (excluding the terminating nul) required to store the result of an snprintf.

6.91.1 Macro Definition Documentation

```
6.91.1.1 #define Getmsg(

e ) ((e).get_msg())
```

6.92 mha_event_emitter.h File Reference

Classes

- class MHAEvents::connector_base_t
- class MHAEvents::emitter_t

Class for emitting openMHA events.

Namespaces

MHAEvents

Collection of event handling classes.

- 6.93 mha_events.cpp File Reference
- 6.94 mha_events.h File Reference

Classes

- class MHAEvents::connector_t< receiver_t >
- class MHAEvents::patchbay_t< receiver_t >

Patchbay which connects any event emitter with any member function of the parameter class.

Namespaces

MHAEvents

Collection of event handling classes.

6.95 mha_fftfb.cpp File Reference

Classes

- class MHAOvlFilter::barkscale::hz2bark_t
- class MHAOvIFilter::barkscale::bark2hz_t

Namespaces

MHAOvIFilter

Namespace for overlapping FFT based filter bank classes and functions.

- MHAOvlFilter::barkscale
- MHAOvlFilter::FreqScaleFun

Transform functions from linear scale in Hz to new frequency scales.

MHAOvlFilter::ShapeFun

Shape functions for overlapping filters.

Macros

#define BARKSCALE ENTRIES 50

Functions

mha_real_t MHAOvlFilter::FreqScaleFun::hz2hz (mha_real_t x)

Dummy scale transformation Hz to Hz.

- mha real t MHAOvIFilter::FreqScaleFun::hz2khz (mha real t x)
- mha real t MHAOvIFilter::FreqScaleFun::hz2octave (mha real t x)
- mha_real_t MHAOvlFilter::FreqScaleFun::hz2third_octave (mha_real_t x)
- mha_real_t MHAOvlFilter::FreqScaleFun::hz2bark (mha_real_t x)

Transformation to bark scale.

- mha_real_t MHAOvlFilter::FreqScaleFun::hz2bark_analytic (mha_real_t)
- mha_real_t MHAOvIFilter::FreqScaleFun::hz2erb (mha_real_t)
- mha_real_t MHAOvlFilter::FreqScaleFun::hz2erb_glasberg1990 (mha_real_t)
- mha real t MHAOvlFilter::FreqScaleFun::hz2log (mha real t x)

Third octave frequency scale.

- mha_real_t MHAOvlFilter::FreqScaleFun::inv_scale (mha_real_t, mha_real_
 —
 t(*)(mha_real_t))
- mha_real_t MHAOvlFilter::ShapeFun::rect (mha_real_t x)

Filter shape function for rectangular filters.

mha_real_t MHAOvlFilter::ShapeFun::linear (mha_real_t x)

Filter shape function for sawtooth filters.

• mha real t MHAOvlFilter::ShapeFun::hann (mha real t x)

Filter shape function for hanning shaped filters.

- mha real t MHAOvlFilter::ShapeFun::expflt (mha real t)
- mha_real_t MHAOvIFilter::ShapeFun::gauss (mha_real_t)
- mha_real_t filtershapefun (mha_real_t f, MHAOvlFilter::band_descriptor_t b, mha
 _real_t plateau)

Variables

- mha_real_t MHAOvlFilter::barkscale::vfreq [BARKSCALE_ENTRIES]
- mha_real_t MHAOvIFilter::barkscale::vbark [BARKSCALE_ENTRIES]

```
6.95.1 Macro Definition Documentation
```

6.95.1.1 #define BARKSCALE_ENTRIES 50

6.95.2 Function Documentation

6.96 mha_fftfb.hh File Reference

Classes

- class MHAOvIFilter::band_descriptor_t
- class MHAOvIFilter::scale_var_t
- class MHAOvIFilter::fscale_t
- class MHAOvIFilter::fscale_bw_t
- class MHAOvIFilter::fftfb_vars_t

Set of configuration variables for FFT-based overlapping filters.

class MHAOvIFilter::fspacing_t

Class for frequency spacing, used by filterbank shape generator class.

class MHAOvIFilter::fftfb_t

FFT based overlapping filter bank.

class MHAOvlFilter::overlap_save_filterbank_t

A time-domain minimal phase filter bank with frequency shapes from **MHAOvIFilter::fftfb_t** (p. 579).

- class MHAOvlFilter::overlap save filterbank t::vars t
- class MHAOvlFilter::overlap_save_filterbank_analytic_t
- class MHAOvIFilter::fftfb_ac_info_t

Namespaces

MHAOvlFilter

Namespace for overlapping FFT based filter bank classes and functions.

Typedefs

typedef mha_real_t(MHAOvIFilter::scale_fun_t) (mha_real_t)

- 6.97 mha_fifo.cpp File Reference
- 6.98 mha fifo.h File Reference

Classes

class mha_fifo_t< T >

A FIFO class for blocksize adaptation Synchronization: None.

class mha drifter fifo t< T >

A FIFO class for blocksize adaptation without Synchronization.

class mha_fifo_thread_platform_t

Abstract base class for synchronizing multithreaded (producer/consumer) fifo operations.

- class mha_fifo_posix_threads_t
- class mha_fifo_thread_guard_t

Simple Mutex Guard Class.

class mha_fifo_lw_t< T >

This FIFO uses locks to synchronize access.

class mha_dblbuf_t< FIFO >

The doublebuffer adapts blocksizes between an outer process, which provides input data and takes output data, and an inner process, which processes the input signal and generates output data using a different block size than the outer process.

class mha_rt_fifo_element_t< T >

Object wrapper for **mha_rt_fifo_t** (p. 426).

class mha_rt_fifo_t< T >

Template class for thread safe, half real time safe fifo without explixit locks.

Macros

- #define mha_fifo_thread_platform_implementation_t mha_fifo_posix_threads_t
- 6.98.1 Macro Definition Documentation
- 6.98.1.1 #define mha_fifo_thread_platform_implementation_t mha_fifo_posix_threads_t
- 6.99 mha filter.cpp File Reference

Functions

std::vector< mha_real_t > diff_coeffs ()

6.99.1 Function Documentation

6.99.1.1 std::vector<mha_real_t> diff_coeffs ()

6.100 mha filter.hh File Reference

Header file for IIR filter classes.

Classes

· class MHAFilter::filter t

Generic IIR filter class.

class MHAFilter::diff t

Differentiator class (non-normalized)

· class MHAFilter::o1_ar_filter_t

First order attack-release lowpass filter.

· class MHAFilter::o1flt lowpass t

First order low pass filter.

class MHAFilter::o1flt maxtrack t

First order maximum tracker.

class MHAFilter::o1flt_mintrack_t

First order minimum tracker.

- class MHAFilter::iir_filter_state_t
- class MHAFilter::iir_filter_t

IIR filter class wrapper for integration into parser structure.

- class MHAFilter::adapt filter state t
- class MHAFilter::adapt_filter_param_t
- class MHAFilter::adapt_filter_t

Adaptive filter.

class MHAFilter::fftfilter_t

FFT based FIR filter implementation.

class MHAFilter::fftfilterbank_t

FFT based FIR filterbank implementation.

struct MHAFilter::transfer function t

a structure containing a source channel number, a target channel number, and an impulse response.

struct MHAFilter::transfer_matrix_t

A sparse matrix of transfer function partitionss.

class MHAFilter::partitioned_convolution_t

A filter class for partitioned convolution.

struct MHAFilter::partitioned_convolution_t::index_t

Bookkeeping class.

class MHAFilter::smoothspec_t

Smooth spectral gains, create a windowed impulse response.

class MHAFilter::resampling_filter_t

Hann shaped low pass filter for resampling.

class MHAFilter::polyphase_resampling_t

A class that performs polyphase resampling.

class MHAFilter::blockprocessing_polyphase_resampling_t

A class that does polyphase resampling and takes into account block processing.

class MHAFilter::iir_ord1_real_t

First order recursive filter.

Namespaces

MHAFilter

Namespace for IIR and FIR filter classes.

Functions

- void MHAFilter::make_friendly_number (mha_real_t &x)
- void MHAFilter::make_friendly_number (mha_complex_t &x)
- void MHAFilter::make_friendly_number (double &x)
- void MHAFilter::o1_lp_coeffs (const mha_real_t tau, const mha_real_t fs, mha_real tau, const mha_real_t fs, mha_real tau, const mha_real_t sc2)

Set first order filter coefficients from time constant and sampling rate.

void MHAFilter::butter_stop_ord1 (double *A, double *B, double f1, double f2, double fs)

Setup a first order butterworth band stop filter.

MHASignal::waveform_t * MHAFilter::spec2fir (const mha_spec_t *spec, const unsigned int fftlen, const MHAWindow::base_t &window, const bool minphase)

Create a windowed impulse response/FIR filter coefficients from a spectrum.

unsigned MHAFilter::gcd (unsigned a, unsigned b)

greatest common divisor

double MHAFilter::sinc (double x)

sin(x)/x function, coping with x=0.

std::pair< unsigned, unsigned > MHAFilter::resampling_factors (float source_
 sampling_rate, float target_sampling_rate, float factor=1.0f)

Computes rational resampling factor from two sampling rates.

6.100.1 Detailed Description

Header file for IIR filter classes.

6.101 mha_generic_chain.cpp File Reference

Functions

• void mhaconfig_compare (mhaconfig_t req, mhaconfig_t avail, const char *cpref)

```
6.101.1 Function Documentation
```

6.102 mha_generic_chain.h File Reference

Classes

- class mhachain::plugs_t
- · class mhachain::chain base t

Namespaces

mhachain

Macros

- #define MHAPLUGIN_OVERLOAD_OUTDOMAIN
- 6.102.1 Macro Definition Documentation
- 6.102.1.1 #define MHAPLUGIN_OVERLOAD_OUTDOMAIN
- 6.103 mha_io_ifc.h File Reference

Typedefs

typedef int(* IOProcessEvent_t) (void *handle, mha_wave_t *sIn, mha_wave_t **s
 — Out)

Event handler for signal stream.

• typedef void(* IOStoppedEvent_t) (void *handle, int proc_err, int io_err)

Event handler for stop event.

typedef void(* IOStartedEvent_t) (void *handle)

Event handler for start event.

- typedef int(* IOInit_t) (int fragsize, float samplerate, IOProcessEvent_t proc_event, void *proc_handle, IOStartedEvent_t start_event, void *start_handle, IOStoppedEvent_← t stop_event, void *stop_handle, void **handle)
- typedef int(* **IOPrepare_t**) (void *handle, int num_inchannels, int num_outchannels)
- typedef int(* IOStart t) (void *handle)
- typedef int(* IOStop_t) (void *handle)
- typedef int(* IORelease_t) (void *handle)
- typedef int(* IOSetVar_t) (void *handle, const char *cmd, char *retval, unsigned int len)
- typedef const char *(* IOStrError_t) (void *handle, int err)
- typedef void(* IODestroy_t) (void *handle)

6.103.1 Typedef Documentation

6.103.1.1 typedef int(* IOProcessEvent_t) (void *handle, mha_wave_t *sln, mha_wave_t **sOut)

Event handler for signal stream.

This event handler needs to be realtime compatible. All signal path processing will be performed in this callback.

6.103.1.2 typedef void(* IOStoppedEvent_t) (void *handle, int proc_err, int io_err)

Event handler for stop event.

This event handler needs to be realtime compatible. The function must return immediatly.

6.103.1.3 typedef void(* IOStartedEvent_t) (void *handle)

Event handler for start event.

This event handler needs to be realtime compatible. The function must return immediatly.

- 6.103.1.4 typedef int(* IOInit_t) (int fragsize, float samplerate, IOProcessEvent_t proc_event, void *proc_handle, IOStartedEvent_t start_event, void *start_handle, IOStoppedEvent_t stop_event, void *stop_handle, void **handle)
- 6.103.1.5 typedef int(* IOPrepare_t) (void *handle, int num_inchannels, int num_outchannels)
- 6.103.1.6 typedef int(* IOStart_t) (void *handle)
- 6.103.1.7 typedef int(* IOStop_t) (void *handle)
- 6.103.1.8 typedef int(* IORelease_t) (void *handle)
- 6.103.1.9 typedef int(* IOSetVar_t) (void *handle, const char *cmd, char *retval, unsigned int len)
- 6.103.1.10 typedef const char*(* IOStrError_t) (void *handle, int err)
- 6.103.1.11 typedef void(* IODestroy_t) (void *handle)
- 6.104 mha multisrc.cpp File Reference

Namespaces

MHAMultiSrc

Collection of classes for selecting audio chunks from multiple sources.

6.105 mha_multisrc.h File Reference

Classes

- class MHAMultiSrc::channel_t
 class MHAMultiSrc::channels_t
 class MHAMultiSrc::base_t
 - Base class for source selection.
- class MHAMultiSrc::waveform_tclass MHAMultiSrc::spectrum_t

Namespaces

MHAMultiSrc

Collection of classes for selecting audio chunks from multiple sources.

6.106 mha_os.cpp File Reference

Functions

- std::string mha_getenv (std::string envvar)
- std::list< std::string > mha_library_paths ()
- std::list< std::string > list_dir (const std::string &path, const std::string &pattern)

```
6.106.1 Function Documentation
```

```
6.106.1.1 std::string mha_getenv (
std::string envvar )
```

```
6.106.1.2 std::list<std::string> mha_library_paths ( )
```

6.107 mha_os.h File Reference

Classes

class dynamiclib_t

Macros

- #define mha loadlib(x) dlopen(x,RTLD NOW)
- #define mha_freelib(x) dlclose(x)
- #define **mha_freelib_success**(x) (x == 0)
- #define **mha getlibfun**(h, x) x ## cb = (x ## t)dlsym(h,#x)
- #define **mha_getlibfun_checked**(h, x) x ## _cb = (x ## _t)dlsym(h,#x);if(! x ## _cb) throw **MHA_Error**(__FILE__,_LINE__,"Function " #x " is undefined.")
- #define mha_loadlib_error(x) dlerror()
- #define mha_lib_extension ".so"
- #define mha msleep(milliseconds) usleep((milliseconds)*1000)
- #define FMTsz "%zu"

printf modifier to print integers of type size t

- #define MHA_RESOLVE(h, t) t ## _cb = (t ## _t)(h->resolve(#t))
- #define MHA RESOLVE CHECKED(h, t) t ## cb = (t ## t)(h->resolve checked(#t))

Typedefs

typedef void * mha_libhandle_t

Functions

- std::string **mha getenv** (std::string envvar)
- std::list< std::string > mha_library_paths ()
- std::list< std::string > list_dir (const std::string &path, const std::string &pattern)
- void **mha hton** (float *data, unsigned int len)
- void mha_ntoh (float *data, unsigned int len)
- void **mha_hton** (uint32_t *data, unsigned int len)
- void **mha ntoh** (uint32 t *data, unsigned int len)
- void **mha hton** (int32 t *data, unsigned int len)
- void mha_ntoh (int32_t *data, unsigned int len)

6.107.1 Macro Definition Documentation

6.107.1.1 #define mha_loadlib(

x) dlopen(x,RTLD_NOW)

6.107.1.2 #define mha freelib(

x) dlclose(x)

6.107.1.3 #define mha_freelib_success(

x) (x == 0)

```
6.107.1.4 #define mha_getlibfun(
                        x ) x ## _cb = (x ## _t)dlsym(h,#x)
6.107.1.5 #define mha_getlibfun_checked(
                         x ) x ## _cb = (x ## _t)dlsym(h,#x);if(! x ## _cb) throw
           MHA_Error(__FILE__,__LINE__,"Function " #x " is undefined.")
6.107.1.6 #define mha loadlib error(
                        x ) dlerror()
6.107.1.7 #define mha_lib_extension ".so"
6.107.1.8 #define mha_msleep(
                        milliseconds ) usleep((milliseconds)*1000)
6.107.1.9 #define FMTsz "%zu"
printf modifier to print integers of type size_t
6.107.1.10 #define MHA_RESOLVE(
                         t ) t ## _cb = (t ## _t)(h->resolve(#t))
6.107.1.11 #define MHA RESOLVE CHECKED(
                         t ) t ## _cb = (t ## _t)(h->resolve_checked(#t))
6.107.2 Typedef Documentation
6.107.2.1 typedef void* mha libhandle t
6.107.3 Function Documentation
6.107.3.1 std::string mha_getenv (
                        std::string envvar )
6.107.3.2 std::list<std::string> mha_library_paths ( )
6.107.3.3 std::list<std::string> list_dir (
                        const std::string & path,
                        const std::string & pattern )
```

```
6.107.3.4 void mha hton (
                       float * data,
                       unsigned int len ) [inline]
6.107.3.5 void mha ntoh (
                       float * data,
                       unsigned int len ) [inline]
6.107.3.6 void mha_hton (
                       uint32 t * data,
                       unsigned int len ) [inline]
6.107.3.7 void mha ntoh (
                       uint32 t * data,
                       unsigned int len ) [inline]
6.107.3.8 void mha hton (
                       int32_t * data,
                       unsigned int len ) [inline]
6.107.3.9 void mha ntoh (
                       int32_t * data,
                       unsigned int len ) [inline]
6.108
       mha parser.cpp File Reference
```

Namespaces

MHAParser

Name space for the openMHA-Parser configuration language.

MHAParser::StrCnv

String converter namespace.

Macros

• #define MHAPLATFORM "undefined-linux"

Functions

- int MHAParser::get_precision ()
- int MHAParser::StrCnv::num_brackets (const std::string &s)

Return number of brackets at beginning and end of string.

- int MHAParser::StrCnv::bracket_balance (const std::string &s)
- static std::ostream & write_float (std::ostream &o, const float &f)
- static std::string parse_1_float (const std::string &s, mha_real_t &v)

This internal function parses a floating point number from the beginning of a string.

static std::string parse_1_complex (const std::string &s, mha_complex_t &v)

This internal function parses a complex number from the beginning of a string.

```
6.108.1 Macro Definition Documentation
```

```
6.108.1.1 #define MHAPLATFORM "undefined-linux"
```

6.108.2 Function Documentation

This internal function parses a floating point number from the beginning of a string.

Parameters

s	The string to parse
V	The float variable to fill with a value

Returns

The rest of the string.

This internal function parses a complex number from the beginning of a string.

Parameters

s	The string to parse
V	The complex variable to fill with a value

Returns

The rest of the string.

6.109 mha_parser.hh File Reference

Header file for the MHA-Parser script language.

Classes

class MHAParser::keyword_list_t

Keyword list class.

- class MHAParser::expression t
- class MHAParser::entry_t
- class MHAParser::base_t

Base class for all parser items.

- class MHAParser::base_t::replace_t
- class MHAParser::parser_t

Parser node class.

- class MHAParser::c_ifc_parser_t
- class MHAParser::monitor t

Base class for monitors and variable nodes.

class MHAParser::variable_t

Base class for variable nodes.

class MHAParser::range_var_t

Base class for all variables with a numeric value range.

class MHAParser::kw_t

Variable with keyword list value.

class MHAParser::string_t

Variable with a string value.

class MHAParser::vstring_t

Vector variable with string values.

class MHAParser::bool t

Variable with a boolean value ("yes"/"no")

class MHAParser::int_t

Variable with integer value.

class MHAParser::float_t

Variable with float value.

class MHAParser::complex t

Variable with complex value.

class MHAParser::vint_t

Variable with vector<int> value.

class MHAParser::vfloat t

Vector variable with float value.

class MHAParser::vcomplex t

Vector variable with complex value.

class MHAParser::mfloat_t

Matrix variable with float value.

class MHAParser::mcomplex_t

Matrix variable with complex value.

class MHAParser::int_mon_t

Monitor variable with int value.

· class MHAParser::bool mon t

Monitor with string value.

class MHAParser::string_mon_t

Monitor with string value.

class MHAParser::vstring_mon_t

Vector of monitors with string value.

class MHAParser::vint_mon_t

Vector of ints monitor.

class MHAParser::mint_mon_t

Matrix of ints monitor.

class MHAParser::vfloat_mon_t

Vector of floats monitor.

class MHAParser::mfloat mon t

Matrix of floats monitor.

class MHAParser::float mon t

Monitor with float value.

class MHAParser::complex mon t

Monitor with complex value.

class MHAParser::vcomplex_mon_t

Monitor with vector of complex values.

class MHAParser::mcomplex_mon_t

Matrix of complex numbers monitor.

class MHAParser::commit t< receiver t >

Parser variable with event-emission functionality.

class MHAParser::mhaconfig_mon_t

Namespaces

MHAParser

Name space for the openMHA-Parser configuration language.

MHAParser::StrCnv

String converter namespace.

Macros

- #define **DEFAULT RETSIZE** 0x100000
- #define insert_member(x) insert_item(#x,&x)

Macro to insert a member variable into a parser.

Typedefs

- typedef std::string(base t::* MHAParser::opact t) (expression t &)
- typedef std::string(base_t::* MHAParser::query_t) (const std::string &)
- typedef std::map< std::string, opact_t > MHAParser::opact_map_t
- typedef std::map< std::string, query_t > MHAParser::query_map_t
- typedef std::list< entry_t > MHAParser::entry_map_t
- typedef int(* MHAParser::c_parse_cmd_t) (void *, const char *, char *, unsigned int)
- typedef const char *(* MHAParser::c_parse_err_t) (void *, int)

Functions

- std::string MHAParser::commentate (const std::string &s)
- void MHAParser::trim (std::string &s)
- std::string MHAParser::cfg_dump (base_t *, const std::string &)
- std::string MHAParser::cfg_dump_short (base_t *, const std::string &)
- std::string MHAParser::all_dump (base_t *, const std::string &)
- std::string **MHAParser::mon_dump** (base_t *, const std::string &)
- std::string MHAParser::all_ids (base_t *, const std::string &, const std::string &="")
- void MHAParser::strreplace (std::string &, const std::string &) string replace function
- void MHAParser::envreplace (std::string &s)
- void MHAParser::StrCnv::str2val (const std::string &, bool &)

Convert from string.

• void MHAParser::StrCnv::str2val (const std::string &, float &)

Convert from string.

void MHAParser::StrCnv::str2val (const std::string &, mha_complex_t &)

Convert from string.

void MHAParser::StrCnv::str2val (const std::string &, int &)

Convert from string.

void MHAParser::StrCnv::str2val (const std::string &, keyword_list_t &)

Convert from string.

• void MHAParser::StrCnv::str2val (const std::string &, std::string &)

Convert from string.

template<class arg t >

void **MHAParser::StrCnv::str2val** (const std::string &s, std::vector< arg_t > &val)

Converter for vector types.

template<>

void MHAParser::StrCnv::str2val< mha_real_t > (const std::string &s, std::vector< mha_real_t > &v)

Converter for vector<mha_real_t> with Matlab-style expansion.

template<class arg_t >

void **MHAParser::StrCnv::str2val** (const std::string &s, std::vector< std::vector< arg_t >> &val)

Converter for matrix types.

• std::string MHAParser::StrCnv::val2str (const bool &)

Convert to string.

• std::string MHAParser::StrCnv::val2str (const float &)

Convert to string.

• std::string MHAParser::StrCnv::val2str (const mha complex t &)

Convert to string.

• std::string MHAParser::StrCnv::val2str (const int &)

Convert to string.

std::string MHAParser::StrCnv::val2str (const keyword_list_t &)

Convert to string.

std::string MHAParser::StrCnv::val2str (const std::string &)

Convert to string.

- std::string MHAParser::StrCnv::val2str (const std::vector< float > &)
 Convert to string.
- std::string MHAParser::StrCnv::val2str (const std::vector< mha_complex_t > &)
 Convert to string.
- std::string MHAParser::StrCnv::val2str (const std::vector< int > &)
 Convert to string.
- std::string MHAParser::StrCnv::val2str (const std::vector< std::vector< int > > &)
 Convert to string.
- std::string MHAParser::StrCnv::val2str (const std::vector< std::string > &)
 Convert to string.
- std::string MHAParser::StrCnv::val2str (const std::vector< std::vector< float > > &)
 Convert to string.
- std::string MHAParser::StrCnv::val2str (const std::vector< std::vector< mha_ \leftarrow complex_t >> &)

Convert to string.

6.109.1 Detailed Description

Header file for the MHA-Parser script language.

- 6.109.2 Macro Definition Documentation
- 6.109.2.1 #define DEFAULT RETSIZE 0x100000

Macro to insert a member variable into a parser.

Parameters

x Member variable to be inserted. Name of member variable will be used as configuration name.

See also MHAParser::parser_t::insert_item() (p. 653).

6.110 mha_plugin.hh File Reference

Header file for MHA C++ plugin class templates.

Classes

- class MHAPlugin::cfg_chain_t< runtime_cfg_t >
- class MHAPlugin::config_t< runtime_cfg_t >

Template class for thread safe configuration.

class MHAPlugin::plugin t< runtime cfg t >

The template class for C++ openMHA plugins.

Namespaces

MHAPlugin

Namespace for openMHA plugin class templates and thread-safe runtime configurations.

Macros

- #define **declspec**(p)
- #define WINAPI
- #define HINSTANCE int
- #define GITCOMMITHASH "independent-plugin-build"
- #define MHAPLUGIN_PROC_CALLBACK_PREFIX(prefix, classname, indom, outdom)
- #define MHAPLUGIN INIT CALLBACKS PREFIX(prefix, classname)
- #define **MHAPLUGIN_CALLBACKS_PREFIX**(prefix, classname, indom, outdom)

 C++ wrapper macro for the plugin interface.
- #define MHAPLUGIN_DOCUMENTATION_PREFIX(prefix, cat, doc)
- #define MHAPLUGIN_INIT_CALLBACKS(plugname, classname) MHAPLUGIN_INIT
 —CALLBACKS_PREFIX(MHA_STATIC_## plugname ## _,classname)
- #define MHAPLUGIN_CALLBACKS(plugname, classname, indom, outdom) MHAPLU
 GIN_CALLBACKS_PREFIX(MHA_STATIC_## plugname ## _,classname,indom,outdom)

 C++ wrapper macro for the plugin interface.
- #define MHAPLUGIN_DOCUMENTATION(plugname, cat, doc) MHAPLUGIN_DOCU
 MENTATION_PREFIX(MHA_STATIC_## plugname ## _,cat,doc)

Wrapper macro for the plugin documentation interface.

Functions

__attribute__ ((unused)) static const char *mha_git_commit_hash
 store git commit hash in every binary plgin to support reproducible research

6.110.1 Detailed Description

Header file for MHA C++ plugin class templates.

This file defines useful macros and template classes for the development of MHA plugins. A set of macros wraps a C++ interface around the ANSI-C plugin interface. The plugin_t template class defines a corresponding C++ class with all required members. This class can make use of thread safe configurations (config_t).

```
6.110.2 Macro Definition Documentation
6.110.2.1 #define __declspec(
                      p)
6.110.2.2 #define WINAPI
6.110.2.3 #define HINSTANCE int
6.110.2.4 #define GITCOMMITHASH "independent-plugin-build"
6.110.2.5 #define MHAPLUGIN PROC CALLBACK PREFIX(
                      prefix,
                      classname,
                      indom,
                      outdom )
6.110.2.6 #define MHAPLUGIN_INIT_CALLBACKS_PREFIX(
                      prefix,
                      classname )
6.110.2.7 #define MHAPLUGIN DOCUMENTATION PREFIX(
                      prefix,
                      cat,
                      doc )
6.110.2.8 #define MHAPLUGIN_PROC_CALLBACK(
                      plugname,
                      classname,
                      indom.
                      outdom ) MHAPLUGIN PROC CALLBACK PREFIX(MHA_STATIC_##
         plugname ## _,classname,indom,outdom)
6.110.2.9 #define MHAPLUGIN_INIT_CALLBACKS(
                      plugname,
                      classname ) MHAPLUGIN INIT CALLBACKS PREFIX(MHA STATIC
          ## plugname ## ,classname)
6.110.3 Function Documentation
6.110.3.1
         attribute (
                     (unused) ) const
store git commit hash in every binary plgin to support reproducible research
```

6.111 mha_profiling.c File Reference

Functions

```
void mha_tic (mha_tictoc_t *t)
```

- void mha_platform_tic (mha_platform_tictoc_t *t)
- float mha_toc (mha_tictoc_t *t)
- float mha_platform_toc (mha_platform_tictoc_t *t)

```
6.111.1 Function Documentation
```

```
6.111.1.3 float mha_toc ( mha_tictoc_t *t )
```

```
6.111.1.4 float mha_platform_toc (
mha_platform_tictoc_t * t )
```

6.112 mha_profiling.h File Reference

Classes

struct mha_tictoc_t

Typedefs

typedef mha_tictoc_t mha_platform_tictoc_t

Functions

- void mha_platform_tic (mha_platform_tictoc_t *t)
- float mha_platform_toc (mha_platform_tictoc_t *t)

```
6.112.1 Typedef Documentation
6.112.1.1 typedef mha_tictoc_t mha_platform_tictoc_t
6.112.2 Function Documentation
6.112.2.1 void mha_platform_tic (
                      mha_platform_tictoc_t * t )
6.112.2.2 float mha_platform_toc (
                      mha_platform_tictoc_t * t )
6.113
       mha_ruby.cpp File Reference
Typedefs
   typedef VALUE(* rb_f_t) (...)
Functions

    static void mha_free (void *mha)

    static VALUE mha_alloc (VALUE klass)

    static VALUE mha_exit_request (VALUE self)

    static VALUE mha_parse (VALUE self, VALUE request)

   void Init_mha_ruby ()
6.113.1 Typedef Documentation
6.113.1.1 typedef VALUE(* rb_f_t) (...)
6.113.2 Function Documentation
6.113.2.1 static void mha_free (
                      void * mha ) [static]
6.113.2.2 static VALUE mha_alloc (
                      VALUE klass ) [static]
6.113.2.3 static VALUE mha_exit_request (
                      VALUE self ) [static]
6.113.2.4 static VALUE mha_parse (
                      VALUE self,
                      VALUE request ) [static]
6.113.2.5 void Init_mha_ruby ( )
6.114 mha_signal.cpp File Reference
Classes
```

© 2005-2018 HörTech gGmbH, Oldenburg

class MHASignal::hilbert_fftw_t

Namespaces

MHASignal

Namespace for audio signal handling and processing classes.

Macros

- #define MHA ID UINT VECTOR "MHASignal::uint vector t"
- #define MHA_ID_MATRIX "MHASignal::matrix_t"
- #define ASSERT EQUAL DIM(a, b)
- #define ASSERT_EQUAL_DIM_PTR(a, b)

Functions

- void set minabs (mha spec t &self, const mha real t &m)
- mha_wave_t & operator+= (mha_wave_t &self, const mha_real_t &v)
 Addition operator.
- mha_wave_t & operator*= (mha_wave_t &self, const mha_real_t &v)
 Element-wise multiplication operator.
- mha_spec_t & operator*= (mha_spec_t &self, const mha_real_t &v)
 Element-wise multiplication operator.
- mha_wave_t & operator*= (mha_wave_t &self, const mha_wave_t &v)

 Element-wise multiplication operator.
- mha_spec_t & operator*= (mha_spec_t &self, const mha_wave_t &v)

 Element-wise multiplication operator.
- mha_spec_t & operator*= (mha_spec_t &self, const mha_spec_t &v)

 Element-wise multiplication operator.
- mha_spec_t & safe_div (mha_spec_t &self, const mha_spec_t &v, mha_real_t eps)
 In-Place division with lower limit on divisor.
- mha_spec_t & operator/= (mha_spec_t &self, const mha_spec_t &v)
 Element-wise division operator.
- mha_wave_t & operator/= (mha_wave_t &self, const mha_wave_t &v)
 Element-wise division operator.
- mha_spec_t & operator+= (mha_spec_t &self, const mha_spec_t &v)
 Addition operator.
- mha_spec_t & operator+= (mha_spec_t &self, const mha_real_t &v)
 Addition operator.
- mha_wave_t & operator+= (mha_wave_t &self, const mha_wave_t &v)
 Addition operator.
- mha_wave_t & operator-= (mha_wave_t &self, const mha_wave_t &v)
 Subtraction operator.
- mha_spec_t & operator-= (mha_spec_t &self, const mha_spec_t &v)
 Subtraction operator.
- mha_fft_t mha_fft_new (unsigned int n)

Create a new instance of an FFT object.

void mha_fft_free (mha_fft_t h)

Remove an FFT object.

• void mha_fft_wave2spec (mha_fft_t h, const mha_wave_t *in, mha_spec_t *out)

Perform an FFT on each channel of input waveform signal.

void mha_fft_wave2spec (mha_fft_t h, const mha_wave_t *in, mha_spec_t *out, bool swap)

Tranform waveform segment into spectrum.

- void mha_fft_spec2wave (mha_fft_t h, const mha_spec_t *in, mha_wave_t *out)

 Perform an inverse FFT on each channel of input spectrum.
- void mha_fft_spec2wave (mha_fft_t h, const mha_spec_t *in, mha_wave_t *out, unsigned int offset)

Perform an inverse FFT on each channel of input spectrum.

- void mha_fft_forward (mha_fft_t h, mha_spec_t *sIn, mha_spec_t *sOut)

 Complex to complex FFT (forward).
- void mha_fft_backward (mha_fft_t h, mha_spec_t *sIn, mha_spec_t *sOut)

 Complex to complex FFT (backward).
- void mha_fft_forward_scale (mha_fft_t h, mha_spec_t *sIn, mha_spec_t *sOut)

 Complex to complex FFT (forward).
- void mha_fft_backward_scale (mha_fft_t h, mha_spec_t *sIn, mha_spec_t *sOut)

 Complex to complex FFT (backward).
- void mha_fft_wave2spec_scale (mha_fft_t h, const mha_wave_t *in, mha_spec_←
 t *out)

Tranform waveform segment into spectrum.

void mha_fft_spec2wave_scale (mha_fft_t h, const mha_spec_t *in, mha_wave_←
t *out)

Tranform spectrum into waveform segment.

- std::vector< float > std_vector_float (const mha_wave_t &w)
 - Converts a mha_wave_t (p. 459) structure into a std::vector<float> (interleaved order).
- std::vector< std::vector< float >> std_vector_vector_float (const mha_wave_t &w)
 Converts a mha_wave_t (p. 459) structure into a std::vector< std::vector<float>> (outer vector represents channels).
- std::vector< std::vector< mha_complex_t >> std_vector_vector_complex (const mha_spec_t &w)

Converts a **mha_spec_t** (p. 429) structure into a std::vector< std::vector< mha_complex_t> > (outer vector represents channels).

- static mha_real_t intensity (const mha_spec_t &s, unsigned int channel, unsigned int fftlen, mha_real_t *sqfreq_response=0)
- void integrate (mha_wave_t &s)

Numeric integration of a signal vector (real values)

void integrate (mha_spec_t &s)

Numeric integration of a signal vector (complex values)

- mha_wave_t & operator^= (mha_wave_t &self, const mha_real_t &arg)
 Exponent operator.
- mha_wave_t range (mha_wave_t s, unsigned int k0, unsigned int len)

Return a time interval from a waveform chunk.

```
    mha_spec_t channels (mha_spec_t s, unsigned int ch_start, unsigned int nch)

        Return a channel interval from a spectrum.
   void assign (mha_wave_t self, const mha_wave_t &val)
         Set all values of waveform 'self' to 'val'.
   void assign (mha_spec_t self, const mha_spec_t &val)
         Set all values of spectrum 'self' to 'val'.
   void timeshift (mha_wave_t &self, int shift)
         Time shift of waveform chunk.
6.114.1 Macro Definition Documentation
6.114.1.1 #define MHA_ID_UINT_VECTOR "MHASignal::uint_vector_t"
6.114.1.2 #define MHA_ID_MATRIX "MHASignal::matrix_t"
6.114.1.3 #define ASSERT EQUAL DIM(
                       b)
6.114.1.4 #define ASSERT_EQUAL_DIM_PTR(
                       a,
                       b)
6.114.2 Function Documentation
6.114.2.1 void set_minabs (
                      mha_spec_t & self,
                      const mha real t & m)
6.114.2.2 mha_spec_t& safe_div (
                      mha_spec_t & self,
                      const mha spec t & v,
                      mha_real_t eps )
In-Place division with lower limit on divisor.
6.114.2.3 static mha_real_t intensity (
                      const mha_spec_t & s,
                      unsigned int channel,
```

mha real t * sqfreq_response = 0) [static]

6.115 mha_signal.hh File Reference

Header file for audio signal handling and processing classes.

unsigned int fftlen,

Classes

class MHASignal::spectrum_t

a signal processing class for spectral data (based on **mha_spec_t** (p. 429))

class MHASignal::waveform_t

signal processing class for waveform data (based on mha_wave_t (p. 459))

class MHASignal::doublebuffer_t

Double-buffering class.

class MHASignal::ringbuffer_t

A ringbuffer class for time domain audio signal, which makes no assumptions with respect to fragment size.

class MHASignal::hilbert_t

Hilbert transformation of a waveform segment.

class MHASignal::minphase_t

Minimal phase function.

- class MHASignal::stat t
- class MHASignal::delay_wave_t

Delayline containing wave fragments.

- · class MHASignal::delay spec t
- class MHASignal::async_rmslevel_t

Class for asynchronous level metering.

class MHASignal::uint_vector_t

Vector of unsigned values, used for size and index description of n-dimensional matrixes.

class MHASignal::matrix_t

n-dimensional matrix with real or complex floating point values.

class MHASignal::schroeder_t

Schroeder tone complex class.

class MHASignal::quantizer_t

Simple simulation of fixpoint quantization.

class MHASignal::loop_wavefragment_t

Copy a fixed waveform fragment to a series of waveform fragments of other size.

class MHASignal::delay_t

Class to realize a simple delay of waveform streams.

• class MHASignal::subsample_delay_t

implements subsample delay in spectral domain.

Namespaces

MHASignal

Namespace for audio signal handling and processing classes.

Macros

- #define M_PI 3.14159265358979323846
- #define mha_round(x) (int)((float)x+0.5)

Functions

void MHASignal::for_each (mha_wave_t *s, mha_real_t(*fun)(mha_real_t))
 Apply a function to each element of a mha_wave_t (p. 459).

mha_real_t MHASignal::lin2db (mha_real_t x)

Conversion from linear scale to dB (no SPL reference)

mha_real_t MHASignal::db2lin (mha_real_t x)

Conversion from dB scale to linear (no SPL reference)

mha_real_t MHASignal::pa2dbspl (mha_real_t x)

Conversion from linear Pascal scale to dB SPL.

• mha_real_t MHASignal::pa22dbspl (mha_real_t x, mha_real_t eps=1e-20f)

Conversion from squared Pascal scale to dB SPL.

mha_real_t MHASignal::dbspl2pa (mha_real_t x)

Conversion from dB SPL to linear Pascal scale.

mha_real_t MHASignal::smp2sec (mha_real_t n, mha_real_t srate)
 conversion from samples to seconds

mha_real_t MHASignal::sec2smp (mha_real_t sec, mha_real_t srate)
 conversion from seconds to samples

- mha_real_t MHASignal::bin2freq (mha_real_t bin, unsigned fftlen, mha_real_t srate)
 conversion from fft bin index to frequency
- mha_real_t MHASignal::freq2bin (mha_real_t freq, unsigned fftlen, mha_real_t srate)
 conversion from frequency to fft bin index
- mha_real_t MHASignal::smp2rad (mha_real_t samples, unsigned bin, unsigned fftlen)
 conversion from delay in samples to phase shift
- mha_real_t MHASignal::rad2smp (mha_real_t phase_shift, unsigned bin, unsigned fftlen)

conversion from phase shift to delay in samples

template < class elem_type > std::vector < elem_type > MHASignal::dupvec (std::vector < elem_type > vec, unsigned n)

Duplicate last vector element to match desired size.

template<class elem_type >

std::vector< elem_type > MHASignal::dupvec_chk (std::vector< elem_type > vec, unsigned n)

Duplicate last vector element to match desired size, check for dimension.

bool equal_dim (const mha_wave_t &a, const mha_wave_t &b)

Test for equal dimension of waveform structures.

bool equal dim (const mha wave t &a, const mhaconfig t &b)

Test for match of waveform dimension with mhaconfig structure.

• bool equal_dim (const mha_spec_t &a, const mha_spec_t &b)

Test for equal dimension of spectrum structures.

• bool equal_dim (const mha_spec_t &a, const mhaconfig_t &b)

Test for match of spectrum dimension with mhaconfig structure.

bool equal_dim (const mha_wave_t &a, const mha_spec_t &b)

Test for equal dimension of waveform/spectrum structures.

bool equal_dim (const mha_spec_t &a, const mha_wave_t &b)

Test for equal dimension of waveform/spectrum structures.

void integrate (mha_wave_t &s)

Numeric integration of a signal vector (real values)

void integrate (mha_spec_t &s)

Numeric integration of a signal vector (complex values)

- unsigned int mha_min_1 (unsigned int a)
- unsigned int size (const mha_wave_t &s)

Return size of a waveform structure.

unsigned int size (const mha_spec_t &s)

Return size of a spectrum structure.

unsigned int size (const mha_wave_t *s)

Return size of a waveform structure.

unsigned int size (const mha_spec_t *s)

Return size of a spectrum structure.

void clear (mha_wave_t &s)

Set all values of waveform to zero.

void clear (mha_wave_t *s)

Set all values of waveform to zero.

void clear (mha_spec_t &s)

Set all values of spectrum to zero.

void clear (mha_spec_t *s)

Set all values of spectrum to zero.

void assign (mha_wave_t self, mha_real_t val)

Set all values of waveform 'self' to 'val'.

void assign (mha_wave_t self, const mha_wave_t &val)

Set all values of waveform 'self' to 'val'.

void assign (mha_spec_t self, const mha_spec_t &val)

Set all values of spectrum 'self' to 'val'.

void timeshift (mha_wave_t &self, int shift)

Time shift of waveform chunk.

mha_wave_t range (mha_wave_t s, unsigned int k0, unsigned int len)

Return a time interval from a waveform chunk.

• mha_spec_t channels (mha_spec_t s, unsigned int ch_start, unsigned int nch)

Return a channel interval from a spectrum.

mha real t & value (mha wave t *s, unsigned int fr, unsigned int ch)

Access an element of a waveform structure.

• const mha_real_t & value (const mha_wave_t *s, unsigned int fr, unsigned int ch)

Constant access to an element of a waveform structure.

- mha real t & value (mha wave t *s, unsigned int k)
- mha_complex_t & value (mha_spec_t *s, unsigned int k)
- mha_complex_t & value (mha_spec_t *s, unsigned int fr, unsigned int ch)

Access to an element of a spectrum.

const mha_complex_t & value (const mha_spec_t *s, unsigned int fr, unsigned int ch)

Constant access to an element of a spectrum.

mha_real_t & value (mha_wave_t &s, unsigned int fr, unsigned int ch)

Access to an element of a waveform structure.

• const mha_real_t & value (const mha_wave_t &s, unsigned int fr, unsigned int ch)

Constant access to an element of a waveform structure.

• mha_complex_t & value (mha_spec_t &s, unsigned int fr, unsigned int ch)

Access to an element of a spectrum.

- const **mha_complex_t** & **value** (const **mha_spec_t** &s, unsigned int fr, unsigned int ch)

 Constant access to an element of a spectrum.
- std::vector< float > std_vector_float (const mha_wave_t &)
 Converts a mha_wave_t (p. 459) structure into a std::vector<float> (interleaved order).
- std::vector< std::vector< float >> std_vector_vector_float (const mha_wave_t &)
 Converts a mha_wave_t (p. 459) structure into a std::vector< std::vector<float> > (outer vector represents channels).
- std::vector< std::vector< mha_complex_t > > std_vector_vector_complex (const mha_spec_t &)

Converts a **mha_spec_t** (p. 429) structure into a std::vector< std::vector< mha_complex_t> > (outer vector represents channels).

- mha_wave_t & operator+= (mha_wave_t &, const mha_real_t &)
 Addition operator.
- mha_wave_t & operator+= (mha_wave_t &, const mha_wave_t &)
 Addition operator.
- mha_wave_t & operator-= (mha_wave_t &, const mha_wave_t &)
 Subtraction operator.
- mha_spec_t & operator-= (mha_spec_t &, const mha_spec_t &)
 Subtraction operator.
- mha_wave_t & operator*= (mha_wave_t &, const mha_real_t &)
 Element-wise multiplication operator.
- mha_wave_t & operator*= (mha_wave_t &, const mha_wave_t &)
 Element-wise multiplication operator.
- mha_spec_t & operator*= (mha_spec_t &, const mha_real_t &)
 Element-wise multiplication operator.
- mha_spec_t & operator*= (mha_spec_t &, const mha_wave_t &)

 Element-wise multiplication operator.
- mha_spec_t & operator*= (mha_spec_t &, const mha_spec_t &)

 Element-wise multiplication operator.
- mha_spec_t & operator/= (mha_spec_t &, const mha_spec_t &)
 Element-wise division operator.
- mha_wave_t & operator/= (mha_wave_t &, const mha_wave_t &)
 Element-wise division operator.
- mha_spec_t & operator+= (mha_spec_t &, const mha_spec_t &)
 Addition operator.
- mha_spec_t & operator+= (mha_spec_t &, const mha_real_t &)
 Addition operator.
- void set_minabs (mha_spec_t &, const mha_real_t &)
- mha_spec_t & safe_div (mha_spec_t &self, const mha_spec_t &v, mha_real_t eps)
 In-Place division with lower limit on divisor.

mha_wave_t & operator^= (mha_wave_t &self, const mha_real_t &arg)
 Exponent operator.

void MHASignal::copy_channel (mha_spec_t &self, const mha_spec_t &src, unsigned sch, unsigned dch)

Copy one channel of a source signal.

• void MHASignal::copy_channel (mha_wave_t &self, const mha_wave_t &src, unsigned src_channel, unsigned dest_channel)

Copy one channel of a source signal.

mha_real_t MHASignal::rmslevel (const mha_spec_t &s, unsigned int channel, unsigned int fftlen)

Return RMS level of a spectrum channel.

mha_real_t MHASignal::colored_intensity (const mha_spec_t &s, unsigned int channel, unsigned int fftlen, mha_real_t sqfreq_response[])

Colored spectrum intensity.

mha_real_t MHASignal::maxabs (const mha_spec_t &s, unsigned int channel)
 Find maximal absolute value.

• mha_real_t MHASignal::rmslevel (const mha_wave_t &s, unsigned int channel)

Return RMS level of a waveform channel.

mha_real_t MHASignal::maxabs (const mha_wave_t &s, unsigned int channel)
 Find maximal absolute value.

• mha_real_t MHASignal::maxabs (const mha_wave_t &s)

Find maximal absolute value.

mha_real_t MHASignal::max (const mha_wave_t &s)

Find maximal value.

mha_real_t MHASignal::min (const mha_wave_t &s)

Find minimal value.

mha_real_t MHASignal::sumsqr_channel (const mha_wave_t &s, unsigned int channel)

Calculate sum of squared values in one channel.

- mha_real_t MHASignal::sumsqr_frame (const mha_wave_t &s, unsigned int frame)

 Calculate sum over all channels of squared values.
- void MHASignal::scale (mha_spec_t *dest, const mha_wave_t *src)
- void MHASignal::limit (mha_wave_t &s, const mha_real_t &min, const mha_real_t &max)

Limit the singal in the waveform buffer to the range [min, max].

- mha_complex_t & set (mha_complex_t &self, mha_real_t real, mha_real_t imag=0)

 Assign real and imaginary parts to a mha_complex_t (p. 397) variable.
- mha_complex_t mha_complex (mha_real_t real, mha_real_t imag=0)

Create a new mha_complex_t (p. 397) with specified real and imaginary parts.

mha_complex_t & set (mha_complex_t &self, const std::complex< mha_real_t > &stdcomplex)

Assign a mha_complex_t (p. 397) variable from a std::complex.

std::complex< mha_real_t > stdcomplex (const mha_complex_t &self)

Create a std::complex from mha_complex_t (p. 397).

mha_complex_t & expi (mha_complex_t &self, mha_real_t angle)

replaces the value of the given **mha_complex_t** (p. 397) with exp(i*b).

double angle (const mha_complex_t &self)

Computes the angle of a complex number in the complex plane.

• mha_complex_t & operator+= (mha_complex_t &self, const mha_complex_t &other)

Addition of two complex numbers, overwriting the first.

mha_complex_t operator+ (const mha_complex_t &self, const mha_complex_
 t &other)

Addition of two complex numbers, result is a temporary object.

mha_complex_t & operator+= (mha_complex_t &self, mha_real_t other_real)

Addition of a complex and a real number, overwriting the complex.

• mha_complex_t operator+ (const mha_complex_t &self, mha_real_t other_real)

Addition of a complex and a real number, result is a temporary object.

- mha_complex_t & operator-= (mha_complex_t &self, const mha_complex_t &other)

 Subtraction of two complex numbers, overwriting the first.
- mha_complex_t operator- (const mha_complex_t &self, const mha_complex_← t &other)

Subtraction of two complex numbers, result is a temporary object.

- mha_complex_t & operator-= (mha_complex_t &self, mha_real_t other_real)

 Subtraction of a complex and a real number, overwriting the complex.
- mha_complex_t operator- (const mha_complex_t &self, mha_real_t other_real)

 Subtraction of a complex and a real number, result is a temporary object.
- mha_complex_t & operator*= (mha_complex_t &self, const mha_complex_t &other)
 Multiplication of two complex numbers, overwriting the first.
- mha_complex_t operator* (const mha_complex_t &self, const mha_complex_
 t &other)

Multiplication of two complex numbers, result is a temporary object.

- mha_complex_t & operator*= (mha_complex_t &self, mha_real_t other_real)

 Multiplication of a complex and a real number, overwriting the complex.
- mha_complex_t & expi (mha_complex_t &self, mha_real_t angle, mha_real_t factor)
 replaces (!) the value of the given mha_complex_t (p. 397) with a * exp(i*b)
- mha_complex_t operator* (const mha_complex_t &self, mha_real_t other_real)

 Multiplication of a complex and a real number, result is a temporary object.
- mha_real_t abs2 (const mha_complex_t &self)

Compute the square of the absolute value of a complex value.

mha_real_t abs (const mha_complex_t &self)

Compute the absolute value of a complex value.

- mha_complex_t & operator/= (mha_complex_t &self, mha_real_t other_real)

 Division of a complex and a real number, overwriting the complex.
- mha_complex_t operator/ (const mha_complex_t &self, mha_real_t other_real)

 Division of a complex and a real number, result is a temporary object.
- mha_complex_t & safe_div (mha_complex_t &self, const mha_complex_t &other, mha_real_t eps, mha_real_t eps2)

Safe division of two complex numbers, overwriting the first.

- mha_complex_t & operator/= (mha_complex_t &self, const mha_complex_t &other)

 Division of two complex numbers, overwriting the first.
- mha_complex_t operator/ (const mha_complex_t &self, const mha_complex_← t &other)

Division of two complex numbers, result is a temporary object.

mha_complex_t operator- (const mha_complex_t &self)

Unary minus on a complex results in a negative temporary object.

• bool operator== (const mha_complex_t &x, const mha_complex_t &y)

Compare two complex numbers for equality.

• bool operator!= (const mha_complex_t &x, const mha_complex_t &y)

Compare two complex numbers for inequality.

void conjugate (mha_complex_t &self)

Replace (!) the value of this **mha_complex_t** (p. 397) with its conjugate.

void conjugate (mha_spec_t &self)

Replace (!) the value of this **mha_spec_t** (p. 429) with its conjugate.

mha_complex_t _conjugate (const mha_complex_t &self)

Compute the cojugate of this complex value.

void reciprocal (mha_complex_t &self)

Replace the value of this complex with its reciprocal.

• mha_complex_t _reciprocal (const mha_complex_t &self)

compute the reciprocal of this complex value.

void normalize (mha complex t &self)

Divide a complex by its absolute value, thereby normalizing it (projecting onto the unit circle).

void normalize (mha_complex_t &self, mha_real_t margin)

Divide a complex by its absolute value, thereby normalizing it (projecting onto the unit circle), with a safety margin.

bool almost (const mha_complex_t &self, const mha_complex_t &other, mha_real_t times epsilon=1e2)

Compare two complex numbers for equality except for a small relative error.

• bool operator< (const mha_complex_t &x, const mha_complex_t &y)

Compares the absolute values of two complex numbers.

• std::ostream & operator<< (std::ostream &o, const mha_complex_t &c)

ostream operator for **mha_complex_t** (p. 397)

• std::istream & operator>> (std::istream &i, mha_complex_t &c)

preliminary istream operator for mha_complex_t (p. 397) without error checking

mha_fft_t mha_fft_new (unsigned int n)

Create a new FFT handle.

void mha_fft_free (mha_fft_t h)

Destroy an FFT handle.

 $\bullet \ \ \mathsf{void} \ \ \mathsf{mha_fft_wave2spec} \ \ (\mathsf{mha_fft_t} \ \ \mathsf{h}, \ \mathsf{const} \ \ \mathsf{mha_wave_t} \ \ast \mathsf{in}, \ \mathsf{mha_spec_t} \ \ast \mathsf{out})$

Tranform waveform segment into spectrum.

void mha_fft_wave2spec (mha_fft_t h, const mha_wave_t *in, mha_spec_t *out, bool swaps)

Tranform waveform segment into spectrum.

void mha_fft_spec2wave (mha_fft_t h, const mha_spec_t *in, mha_wave_t *out)

Tranform spectrum into waveform segment.

void mha_fft_spec2wave (mha_fft_t h, const mha_spec_t *in, mha_wave_t *out, unsigned int offset)

Tranform spectrum into waveform segment.

• void mha_fft_forward (mha_fft_t h, mha_spec_t *sIn, mha_spec_t *sOut)

Complex to complex FFT (forward).

• void mha_fft_backward (mha_fft_t h, mha_spec_t *sIn, mha_spec_t *sOut)

Complex to complex FFT (backward).

- void mha_fft_forward_scale (mha_fft_t h, mha_spec_t *sIn, mha_spec_t *sOut)

 Complex to complex FFT (forward).
- void mha_fft_backward_scale (mha_fft_t h, mha_spec_t *sIn, mha_spec_t *sOut)

 Complex to complex FFT (backward).
- void mha_fft_wave2spec_scale (mha_fft_t h, const mha_wave_t *in, mha_spec_←
 t *out)

Tranform waveform segment into spectrum.

void mha_fft_spec2wave_scale (mha_fft_t h, const mha_spec_t *in, mha_wave_←
t *out)

Tranform spectrum into waveform segment.

template<class elem_type >

elem_type MHASignal::kth_smallest (elem_type array[], unsigned n, unsigned k)

Fast search for the kth smallest element of an array.

template < class elem type >

elem_type **MHASignal::median** (elem_type array[], unsigned n)

Fast median search.

template < class elem type >

elem_type **MHASignal::mean** (const std::vector< elem_type > &data, elem_type start ← _val)

Calculate average of elements in a vector.

template<class elem_type >

std::vector< elem_type > MHASignal::quantile (std::vector< elem_type > data, const std::vector< elem_type > &p)

Calculate quantile of elements in a vector.

 void MHASignal::saveas_mat4 (const mha_spec_t &data, const std::string &varname, FILE *fh)

Save a openMHA spectrum as a variable in a Matlab4 file.

 void MHASignal::saveas_mat4 (const mha_wave_t &data, const std::string &varname, FILE *fh)

Save a openMHA waveform as a variable in a Matlab4 file.

Save a float vector as a variable in a Matlab4 file.

void MHASignal::copy permuted (mha wave t *dest, const mha wave t *src)

Copy contents of a waveform to a permuted waveform.

Variables

unsigned long int MHASignal::signal counter = 0

Signal counter to produce signal ID strings.

6.115.1 Detailed Description

Header file for audio signal handling and processing classes.

The classes for waveform, spectrum and filterbank signals defined in this file are "intelligent" versions of the basic waveform, spectrum and filterbank structures used in the C function calls.

```
6.115.2 Macro Definition Documentation
6.115.2.1 #define M_PI 3.14159265358979323846
6.115.2.2 #define mha_round(
                      x ) (int)((float)x+0.5)
6.115.3 Function Documentation
6.115.3.1 unsigned int mha_min_1 (
                      unsigned int a ) [inline]
6.115.3.2 mha real t& value (
                      mha_wave_t * s,
                      unsigned int k ) [inline]
6.115.3.3 mha_complex_t& value (
                      mha_spec_t * s,
                      unsigned int k ) [inline]
6.115.3.4 void set_minabs (
                      mha_spec_t &,
                      const mha_real_t & )
6.115.3.5 mha_spec_t& safe_div (
                      mha_spec_t & self,
                      const mha_spec_t & v,
                      mha_real_t eps )
In-Place division with lower limit on divisor.
6.115.3.6 std::ostream& operator<< (
                      std::ostream & o,
                      const mha_complex_t & c ) [inline]
ostream operator for mha_complex_t (p. 397)
```

preliminary istream operator for mha_complex_t (p. 397) without error checking

6.116 mha_signal_fft.h File Reference

Classes

class MHASignal::fft_t

Namespaces

MHASignal

Namespace for audio signal handling and processing classes.

- 6.117 mha_tablelookup.cpp File Reference
- 6.118 mha_tablelookup.hh File Reference

Header file for table lookup classes.

Classes

- class MHATableLookup::table_t
- class MHATableLookup::linear_table_t

Class for interpolation with equidistant x values.

class MHATableLookup::xy_table_t

Class for interpolation with non-equidistant x values.

Namespaces

MHATableLookup

Namespace for table lookup classes.

6.118.1 Detailed Description

Header file for table lookup classes.

6.119 mha_tcp.cpp File Reference

Classes

class MHA_TCP::sock_init_t

Namespaces

MHA TCP

A Namespace for TCP helper classes.

Macros

- #define INVALID_SOCKET (-1)
- #define SOCKET ERROR (-1)
- #define closesocket(fd) (close((fd)))
- #define ASYNC_CONNECT_STARTED EINPROGRESS

Typedefs

· typedef int SOCKET

Functions

std::string MHA_TCP::STRERROR (int err)

Portable conversion from error number to error string.

std::string MHA_TCP::HSTRERROR (int err)

Portable conversion from hostname error number to error string.

int MHA_TCP::N_ERRNO ()

Portable access to last network error number.

int MHA_TCP::H_ERRNO ()

Portable access to last hostname error number.

• int MHA_TCP::G_ERRNO ()

Portable access to last non-network error number.

- static sockaddr_in host_port_to_sock_addr (const std::string &host, unsigned short port)
- static SOCKET tcp_connect_to (const std::string &host, unsigned short port)
- static SOCKET tcp_connect_to_with_timeout (const std::string &host, unsigned short port, Timeout_Watcher &timeout_watcher)
- static void * thread_start_func (void *thread)

Variables

class MHA_TCP::sock_init_t MHA_TCP::sock_initializer

```
6.119.1 Macro Definition Documentation
6.119.1.1 #define INVALID_SOCKET (-1)
6.119.1.2 #define SOCKET_ERROR (-1)
6.119.1.3 #define closesocket(
                       fd ) (close((fd)))
6.119.1.4 #define ASYNC_CONNECT_STARTED EINPROGRESS
6.119.2 Typedef Documentation
6.119.2.1 typedef int SOCKET
6.119.3 Function Documentation
6.119.3.1 static sockaddr_in host_port_to_sock_addr (
                      const std::string & host,
                      unsigned short port ) [static]
6.119.3.2 static SOCKET tcp_connect_to (
                      const std::string & host,
                      unsigned short port ) [static]
6.119.3.3 static SOCKET tcp_connect_to_with_timeout (
                      const std::string & host,
                      unsigned short port,
                      Timeout_Watcher & timeout_watcher ) [static]
6.119.3.4 static void* thread_start_func (
                      void * thread ) [static]
6.120 mha tcp.hh File Reference
Classes
```

- - struct MHA TCP::OS EVENT TYPE
 - class MHA_TCP::Wakeup_Event

A base class for asynchronous wakeup events.

class MHA_TCP::Async_Notify

Portable Multiplexable cross-thread notification.

class MHA_TCP::Event_Watcher

OS-independent event watcher, uses select on Unix and WaitForMultipleObjects on Windows.

class MHA_TCP::Timeout_Event

• class MHA_TCP::Timeout_Watcher

OS-independent event watcher with internal fixed-end-time timeout.

class MHA_TCP::Sockread_Event

Watch socket for incoming data.

- class MHA_TCP::Sockwrite_Event
- class MHA TCP::Sockaccept Event
- class MHA_TCP::Connection

Connection (p. 434) handles Communication between client and server, is used on both sides.

- class MHA TCP::Server
- class MHA TCP::Client

A portable class for a tcp client connections.

class MHA_TCP::Thread

A very simple class for portable threads.

Namespaces

MHA_TCP

A Namespace for TCP helper classes.

Macros

• #define **Sleep**(x) usleep((x)*1000);

Typedefs

typedef int MHA_TCP::SOCKET

Functions

• std::string MHA_TCP::STRERROR (int err)

Portable conversion from error number to error string.

std::string MHA_TCP::HSTRERROR (int err)

Portable conversion from hostname error number to error string.

int MHA_TCP::N_ERRNO ()

Portable access to last network error number.

• int MHA_TCP::H_ERRNO ()

Portable access to last hostname error number.

• int MHA_TCP::G_ERRNO ()

Portable access to last non-network error number.

double MHA_TCP::dtime ()

Time access function for system's high resolution time, retrieve current time as double.

double MHA TCP::dtime (const struct timeval &tv)

Time access function for unix' high resolution time, converts struct timeval to double.

• struct timeval MHA_TCP::stime (double d)

Time access function for unix' high resolution time, converts time from double to struct timeval.

6.120.1 Macro Definition Documentation

6.120.1.1 #define Sleep(

x) usleep((x)*1000);

- 6.121 mha_toolbox.h File Reference
- 6.122 mha_windowparser.cpp File Reference

Variables

- float(* wnd_funs [])(float)
- 6.122.1 Variable Documentation
- 6.122.1.1 float(* wnd_funs[])(float)
- 6.123 mha_windowparser.h File Reference

Classes

· class MHAWindow::base_t

Common base for window types.

class MHAWindow::fun_t

Generic window based on a generator function.

class MHAWindow::rect_t

Rectangular window.

class MHAWindow::bartlett_t

Bartlett window.

class MHAWindow::hanning_t

von-Hann window

class MHAWindow::hamming_t

Hamming window.

class MHAWindow::blackman_t

Blackman window.

class MHAWindow::user t

User defined window.

class MHAParser::window t

MHA configuration interface for a window function generator.

Namespaces

MHAWindow

Collection of Window types.

MHAParser

Name space for the openMHA-Parser configuration language.

Functions

• float MHAWindow::rect (float)

Rectangular window function.

float MHAWindow::bartlett (float)

Bartlett window function.

float MHAWindow::hanning (float)

Hanning window function.

float MHAWindow::hamming (float)

Hamming window function.

float MHAWindow::blackman (float)

Blackman window function.

6.124 mhachain.cpp File Reference

Classes

class mhachain::mhachain_t

Namespaces

- mhachain
- 6.125 mhafw_lib.cpp File Reference
- 6.126 mhafw_lib.h File Reference

Classes

- · class io_lib_t
 - Class for loading MHA sound IO module.
- class fw_vars_t
- class fw_t

6.127 MHAIOFile.cpp File Reference

Classes

• class io_file_t
File IO.

Macros

- #define DEBUG(x) std::cerr << __FILE__ << ":" << __LINE__ << " " << #x " = " << x
 << std::endl
- #define ERR SUCCESS 0
- #define ERR_IHANDLE -1
- #define ERR_USER -1000
- #define MAX USER ERR 0x500
- #define IOInit MHA_STATIC_MHAIOFile_IOInit
- #define IOPrepare MHA_STATIC_MHAIOFile_IOPrepare
- #define IOStart MHA_STATIC_MHAIOFile_IOStart
- #define IOStop MHA_STATIC_MHAIOFile_IOStop
- #define IORelease MHA STATIC MHAIOFile IORelease
- #define IOSetVar MHA STATIC MHAIOFile IOSetVar
- #define IOStrError MHA_STATIC_MHAIOFile_IOStrError
- #define IODestroy MHA_STATIC_MHAIOFile_IODestroy
- #define dummy_interface_test MHA_STATIC_MHAIOFile_dummy_interface_test

Functions

- int IOInit (int fragsize, float samplerate, IOProcessEvent_t proc_event, void *proc_←
 handle, IOStartedEvent_t start_event, void *start_handle, IOStoppedEvent_t stop_←
 event, void *stop handle, void **handle)
- int IOPrepare (void *handle, int nch_in, int nch_out)
- int IOStart (void *handle)
- int IOStop (void *handle)
- int IORelease (void *handle)
- int IOSetVar (void *handle, const char *command, char *retval, unsigned int maxretlen)
- const char * IOStrError (void *handle, int err)
- void IODestroy (void *handle)
- void dummy_interface_test (void)

Variables

static char user_err_msg [MAX_USER_ERR]

```
6.127.1 Macro Definition Documentation
6.127.1.1 #define DEBUG(
                       x ) std::cerr << FILE << ":" << LINE << " " << #x " = " << x <<
          std::endl
6.127.1.2 #define ERR SUCCESS 0
6.127.1.3 #define ERR IHANDLE -1
6.127.1.4 #define ERR_USER -1000
6.127.1.5 #define MAX_USER_ERR 0x500
6.127.1.6 #define IOInit MHA_STATIC_MHAIOFile_IOInit
6.127.1.7 #define IOPrepare MHA_STATIC_MHAIOFile_IOPrepare
6.127.1.8 #define IOStart MHA_STATIC_MHAIOFile_IOStart
6.127.1.9 #define IOStop MHA_STATIC_MHAIOFile_IOStop
6.127.1.10 #define IORelease MHA_STATIC_MHAIOFile_IORelease
6.127.1.11 #define IOSetVar MHA_STATIC_MHAIOFile_IOSetVar
6.127.1.12 #define IOStrError MHA_STATIC_MHAIOFile_IOStrError
6.127.1.13 #define IODestroy MHA_STATIC_MHAIOFile_IODestroy
6.127.1.14 #define dummy_interface_test MHA_STATIC_MHAIOFile_dummy_interface_test
6.127.2 Function Documentation
6.127.2.1 int IOInit (
                      int fragsize,
                      float samplerate,
                      IOProcessEvent t proc_event,
                      void * proc_handle,
                      IOStartedEvent t start_event,
                      void * start_handle,
                      IOStoppedEvent t stop_event,
                      void * stop_handle,
                      void ** handle )
```

```
6.127.2.2 int IOPrepare (
                        void * handle,
                       int nch_in,
                       int nch_out )
6.127.2.3 int IOStart (
                        void * handle )
6.127.2.4 int IOStop (
                       void * handle )
6.127.2.5 int IORelease (
                        void * handle )
6.127.2.6 int IOSetVar (
                        void * handle,
                       const char * command,
                        char * retval,
                        unsigned int maxretlen )
6.127.2.7 const char* IOStrError (
                        void * handle,
                       int err )
6.127.2.8 void IODestroy (
                       void * handle )
6.127.2.9 void dummy_interface_test (
                        void )
6.127.3 Variable Documentation
6.127.3.1 char user_err_msg[MAX_USER_ERR] [static]
       MHAIOJack.cpp File Reference
6.128
Classes

    class MHAIOJack::io_jack_t

         Main class for JACK IO.
```

Namespaces

MHAIOJack

JACK IO.

Macros

- #define ERR SUCCESS 0
- #define ERR IHANDLE -1
- #define ERR_USER -1000
- #define MAX USER ERR 0x500
- #define IOInit MHA_STATIC_MHAIOJack_IOInit
- #define IOPrepare MHA_STATIC_MHAIOJack_IOPrepare
- #define IOStart MHA_STATIC_MHAIOJack_IOStart
- #define IOStop MHA_STATIC_MHAIOJack_IOStop
- #define IORelease MHA_STATIC_MHAIOJack_IORelease
- #define IOSetVar MHA_STATIC_MHAIOJack_IOSetVar
- #define IOStrError MHA_STATIC_MHAIOJack_IOStrError
- #define IODestroy MHA_STATIC_MHAIOJack_IODestroy
- #define dummy_interface_test MHA_STATIC_MHAIOJack_dummy_interface_test

Functions

- int IOInit (int fragsize, float samplerate, IOProcessEvent_t proc_event, void *proc_
 handle, IOStartedEvent_t start_event, void *start_handle, IOStoppedEvent_t stop_
 event, void *stop_handle, void **handle)
- int IOPrepare (void *handle, int nch_in, int nch_out)
- int IOStart (void *handle)
- int IOStop (void *handle)
- int **IORelease** (void *handle)
- int IOSetVar (void *handle, const char *command, char *retval, unsigned int maxretlen)
- const char * IOStrError (void *handle, int err)
- void IODestroy (void *handle)
- void dummy_interface_test (void)

Variables

static char user_err_msg [MAX_USER_ERR] = ""

6.128.1 Macro Definition Documentation

- 6.128.1.1 #define ERR_SUCCESS 0
- 6.128.1.2 #define ERR_IHANDLE -1
- 6.128.1.3 #define ERR_USER -1000
- 6.128.1.4 #define MAX USER ERR 0x500

```
6.128.1.5
          #define IOInit MHA_STATIC_MHAIOJack_IOInit
6.128.1.6
          #define IOPrepare MHA_STATIC_MHAIOJack_IOPrepare
6.128.1.7
         #define IOStart MHA_STATIC_MHAIOJack_IOStart
6.128.1.8 #define IOStop MHA_STATIC_MHAIOJack_IOStop
6.128.1.9 #define IORelease MHA_STATIC_MHAIOJack_IORelease
6.128.1.10 #define IOSetVar MHA_STATIC_MHAIOJack_IOSetVar
6.128.1.11 #define IOStrError MHA_STATIC_MHAIOJack_IOStrError
6.128.1.12 #define IODestroy MHA_STATIC_MHAIOJack_IODestroy
6.128.1.13
           #define dummy_interface_test MHA_STATIC_MHAIOJack_dummy_interface_test
6.128.2 Function Documentation
6.128.2.1 int IOInit (
                       int fragsize,
                       float samplerate,
                       IOProcessEvent_t proc_event,
                       void * proc_handle,
                       IOStartedEvent t start event,
                       void * start handle,
                       IOStoppedEvent_t stop_event,
                       void * stop_handle,
                       void ** handle )
6.128.2.2 int IOPrepare (
                       void * handle,
                       int nch in,
                       int nch_out )
6.128.2.3 int IOStart (
                       void * handle )
6.128.2.4 int IOStop (
                       void * handle )
6.128.2.5 int IORelease (
                       void * handle )
```

Classes

class MHAIOJackdb::io_jack_t
 Main class for JACK IO.

Namespaces

MHAIOJackdb

Macros

- #define ERR_SUCCESS 0
- #define ERR IHANDLE -1
- #define ERR USER -1000
- #define MAX_USER_ERR 0x500
- #define IOInit MHA_STATIC_MHAIOJackdb_IOInit
- #define IOPrepare MHA STATIC MHAIOJackdb IOPrepare
- #define IOStart MHA_STATIC_MHAIOJackdb_IOStart
- #define IOStop MHA_STATIC_MHAIOJackdb_IOStop
- #define IORelease MHA_STATIC_MHAIOJackdb_IORelease
- #define IOSetVar MHA_STATIC_MHAIOJackdb_IOSetVar
- #define IOStrError MHA_STATIC_MHAIOJackdb_IOStrError
- #define IODestroy MHA_STATIC_MHAIOJackdb_IODestroy
- #define dummy_interface_test MHA_STATIC_MHAIOJackdb_dummy_interface_test

Functions

int IOInit (int fragsize, float samplerate, IOProcessEvent_t proc_event, void *proc_
handle, IOStartedEvent_t start_event, void *start_handle, IOStoppedEvent_t stop_
event, void *stop_handle, void **handle)

- int IOPrepare (void *handle, int nch_in, int nch_out)
- int IOStart (void *handle)
- int **IOStop** (void *handle)
- int IORelease (void *handle)
- int IOSetVar (void *handle, const char *command, char *retval, unsigned int maxretlen)
- const char * IOStrError (void *handle, int err)
- void **IODestroy** (void *handle)
- void dummy_interface_test (void)

Variables

• static char user_err_msg [MAX_USER_ERR] = ""

6.129.1 I	Macro Definition Documentation
6.129.1.1	#define ERR_SUCCESS 0
6.129.1.2	#define ERR_IHANDLE -1
6.129.1.3	#define ERR_USER -1000
6.129.1.4	#define MAX_USER_ERR 0x500
6.129.1.5	#define IOInit MHA_STATIC_MHAIOJackdb_IOInit
6.129.1.6	#define IOPrepare MHA_STATIC_MHAIOJackdb_IOPrepare
6.129.1.7	#define IOStart MHA_STATIC_MHAIOJackdb_IOStart
6.129.1.8	#define IOStop MHA_STATIC_MHAIOJackdb_IOStop
6.129.1.9	#define IORelease MHA_STATIC_MHAIOJackdb_IORelease
6.129.1.10	#define IOSetVar MHA_STATIC_MHAIOJackdb_IOSetVar
6.129.1.11	#define IOStrError MHA_STATIC_MHAIOJackdb_IOStrError
6.129.1.12	#define IODestroy MHA_STATIC_MHAIOJackdb_IODestroy

```
#define dummy_interface_test MHA_STATIC_MHAIOJackdb_dummy_interface_test
6.129.2 Function Documentation
6.129.2.1
         int IOInit (
                        int fragsize,
                        float samplerate,
                        IOProcessEvent_t proc_event,
                        void * proc_handle,
                        IOStartedEvent t start event,
                        void * start_handle,
                        IOStoppedEvent_t stop_event,
                        void * stop_handle,
                        void ** handle )
6.129.2.2 int IOPrepare (
                        void * handle,
                        int nch_in,
                        int nch_out )
6.129.2.3 int IOStart (
                        void * handle )
6.129.2.4 int IOStop (
                        void * handle )
6.129.2.5 int IORelease (
                        void * handle )
6.129.2.6 int IOSetVar (
                        void * handle,
                        const char * command,
                        char * retval,
                        unsigned int maxretlen )
6.129.2.7 const char* IOStrError (
                        void * handle,
                        int err )
6.129.2.8 void IODestroy (
                        void * handle )
6.129.2.9 void dummy_interface_test (
                        void )
6.129.3 Variable Documentation
```

6.129.3.1 char user_err_msg[MAX USER ERR] = "" [static]

6.130 MHAIOParser.cpp File Reference

Classes

· class io parser t

Main class for Parser IO.

Macros

- #define ERR_SUCCESS 0
- #define ERR IHANDLE -1
- #define ERR_USER -1000
- #define MAX USER ERR 0x500
- #define IOInit MHA_STATIC_MHAIOParser_IOInit
- #define IOPrepare MHA STATIC MHAIOParser IOPrepare
- #define IOStart MHA_STATIC_MHAIOParser_IOStart
- #define IOStop MHA STATIC MHAIOParser IOStop
- #define IORelease MHA_STATIC_MHAIOParser_IORelease
- #define IOSetVar MHA STATIC MHAIOParser IOSetVar
- #define IOStrError MHA_STATIC_MHAIOParser_IOStrError
- #define IODestroy MHA STATIC MHAIOParser IODestroy
- #define dummy_interface_test MHA_STATIC_MHAIOParser_dummy_interface_test

Functions

- int IOInit (int fragsize, float, IOProcessEvent_t proc_event, void *proc_handle, IO←
 StartedEvent_t start_event, void *start_handle, IOStoppedEvent_t stop_event, void
 *stop_handle, void **handle)
- int IOPrepare (void *handle, int nch_in, int nch_out)
- int **IOStart** (void *handle)
- int IOStop (void *handle)
- int IORelease (void *handle)
- int IOSetVar (void *handle, const char *command, char *retval, unsigned int maxretlen)
- const char * IOStrError (void *handle, int err)
- void IODestroy (void *handle)
- void dummy_interface_test (void)

Variables

static char user_err_msg [MAX_USER_ERR]

```
6.130.1 Macro Definition Documentation
6.130.1.1
         #define ERR_SUCCESS 0
6.130.1.2 #define ERR_IHANDLE -1
6.130.1.3 #define ERR_USER -1000
6.130.1.4 #define MAX_USER_ERR 0x500
6.130.1.5 #define IOInit MHA_STATIC_MHAIOParser_IOInit
6.130.1.6 #define IOPrepare MHA_STATIC_MHAIOParser_IOPrepare
6.130.1.7 #define IOStart MHA_STATIC_MHAIOParser_IOStart
6.130.1.8 #define IOStop MHA_STATIC_MHAIOParser_IOStop
6.130.1.9 #define IORelease MHA STATIC MHAIOParser IORelease
6.130.1.10 #define IOSetVar MHA_STATIC_MHAIOParser_IOSetVar
6.130.1.11 #define IOStrError MHA_STATIC_MHAIOParser_IOStrError
6.130.1.12 #define IODestroy MHA STATIC MHAIOParser IODestroy
6.130.1.13 #define dummy_interface_test MHA_STATIC_MHAIOParser_dummy_interface_test
6.130.2 Function Documentation
6.130.2.1 int IOInit (
                      int fragsize,
                      float,
                      IOProcessEvent_t proc_event,
                      void * proc_handle,
                      IOStartedEvent t start_event,
                      void * start_handle,
                      IOStoppedEvent_t stop_event,
                      void * stop handle,
                      void ** handle )
6.130.2.2 int IOPrepare (
                      void * handle,
                      int nch in,
                      int nch_out )
```

```
6.130.2.3 int IOStart (
                       void * handle )
6.130.2.4 int IOStop (
                       void * handle )
6.130.2.5 int IORelease (
                       void * handle )
6.130.2.6 int IOSetVar (
                       void * handle,
                       const char * command,
                       char * retval,
                       unsigned int maxretlen )
6.130.2.7 const char* IOStrError (
                       void * handle,
                       int err )
6.130.2.8 void IODestroy (
                       void * handle )
6.130.2.9 void dummy_interface_test (
                       void )
6.130.3 Variable Documentation
6.130.3.1 char user_err_msg[MAX_USER_ERR] [static]
6.131
       MHAIOPortAudio.cpp File Reference
```

Classes

- class MHAIOPortAudio::device_info_t
- class MHAIOPortAudio::io_portaudio_t

Main class for Portaudio sound IO.

Namespaces

MHAIOPortAudio

Macros

- #define ERR_SUCCESS 0
- #define ERR IHANDLE -1
- #define ERR USER -1000
- #define MAX_USER_ERR 0x500
- #define IOInit MHA STATIC MHAIOPortAudio IOInit
- #define IOPrepare MHA_STATIC_MHAIOPortAudio_IOPrepare
- #define IOStart MHA_STATIC_MHAIOPortAudio_IOStart
- #define IOStop MHA_STATIC_MHAIOPortAudio_IOStop
- #define IORelease MHA_STATIC_MHAIOPortAudio_IORelease
- #define IOSetVar MHA_STATIC_MHAIOPortAudio_IOSetVar
- #define IOStrError MHA_STATIC_MHAIOPortAudio_IOStrError
- #define IODestroy MHA_STATIC_MHAIOPortAudio_IODestroy
- #define dummy_interface_test MHA_STATIC_MHAIOPortAudio_dummy_interface_
 test

Functions

- static std::string MHAIOPortAudio::parserFriendlyName (const std::string &in)
- int portaudio_callback (const void ∗input, void ∗output, unsigned long frameCount, const PaStreamCallbackTimeInfo ∗timeInfo, PaStreamCallbackFlags statusFlags, void ∗user← Data)
- int IOInit (int fragsize, float samplerate, IOProcessEvent_t proc_event, void *proc_
 handle, IOStartedEvent_t start_event, void *start_handle, IOStoppedEvent_t stop_
 event, void *stop_handle, void **handle)
- int IOPrepare (void *handle, int nch_in, int nch_out)
- int IOStart (void *handle)
- int IOStop (void *handle)
- int IORelease (void *handle)
- int IOSetVar (void *handle, const char *command, char *retval, unsigned int maxretlen)
- const char * IOStrError (void *handle, int err)
- void IODestroy (void *handle)
- void dummy_interface_test (void)

Variables

- static char user_err_msg [MAX_USER_ERR] = ""
- PaStreamCallback portaudio callback

```
6.131.1 Macro Definition Documentation
6.131.1.1 #define ERR_SUCCESS 0
6.131.1.2 #define ERR IHANDLE -1
6.131.1.3 #define ERR_USER -1000
6.131.1.4 #define MAX_USER_ERR 0x500
6.131.1.5 #define IOInit MHA_STATIC_MHAIOPortAudio_IOInit
6.131.1.6 #define IOPrepare MHA_STATIC_MHAIOPortAudio_IOPrepare
6.131.1.7 #define IOStart MHA_STATIC_MHAIOPortAudio_IOStart
6.131.1.8 #define IOStop MHA_STATIC_MHAIOPortAudio_IOStop
6.131.1.9 #define IORelease MHA_STATIC_MHAIOPortAudio_IORelease
6.131.1.10 #define IOSetVar MHA_STATIC_MHAIOPortAudio_IOSetVar
6.131.1.11 #define IOStrError MHA_STATIC_MHAIOPortAudio_IOStrError
6.131.1.12 #define IODestroy MHA_STATIC_MHAIOPortAudio_IODestroy
6.131.1.13 #define dummy_interface_test MHA_STATIC_MHAIOPortAudio_dummy_interface_test
6.131.2 Function Documentation
6.131.2.1 int portaudio_callback (
                      const void * input,
                      void * output,
                      unsigned long frameCount,
                      const PaStreamCallbackTimeInfo * timeInfo,
                      PaStreamCallbackFlags statusFlags,
                      void * userData )
6.131.2.2 int IOInit (
                      int fragsize,
                      float samplerate.
                      IOProcessEvent t proc_event,
                      void * proc_handle,
                      IOStartedEvent t start_event,
                      void * start handle.
                      IOStoppedEvent t stop_event,
                      void * stop handle,
                      void ** handle )
```

```
6.131.2.3 int IOPrepare (
                        void * handle,
                        int nch_in,
                       int nch_out )
6.131.2.4 int IOStart (
                        void * handle )
6.131.2.5 int IOStop (
                        void * handle )
6.131.2.6 int IORelease (
                        void * handle )
6.131.2.7 int IOSetVar (
                        void * handle,
                        const char * command,
                        char * retval,
                        unsigned int maxretlen )
6.131.2.8 const char* IOStrError (
                       void * handle,
                       int err )
6.131.2.9 void IODestroy (
                       void * handle )
6.131.2.10 void dummy_interface_test (
                         void )
6.131.3 Variable Documentation
6.131.3.1
         char user_err_msg[MAX_USER_ERR] = "" [static]
6.131.3.2 PaStreamCallback portaudio_callback
6.132 MHAIOTCP.cpp File Reference
```

Classes

class io_tcp_parser_t

The parser interface of the IOTCP library.

class io_tcp_sound_t

Sound data handling of io tcp library.

union io_tcp_sound_t::float_union

This union helps in conversion of floats from host byte order to network byte order and back again.

class io_tcp_fwcb_t

TCP sound-io library's interface to the framework callbacks.

class io_tcp_t

The tcp sound io library.

Macros

- #define ERR_SUCCESS 0
- #define ERR IHANDLE -1
- #define ERR USER -1000
- #define MAX_USER_ERR 0x2000
- #define MHA_ErrorMsg2(x, y) MHA_Error(__FILE__,_LINE__,(x),(y))
- #define MHA_ErrorMsg3(x, y, z) MHA_Error(__FILE___,__LINE___,(x),(y),(z))
- #define MIN_TCP_PORT 0
- #define MIN TCP PORT STR "0"
- #define MAX_TCP_PORT 65535
- #define MAX_TCP_PORT_STR "65535"
- #define IOInit MHA_STATIC_MHAIOTCP_IOInit
- #define IOPrepare MHA_STATIC_MHAIOTCP_IOPrepare
- #define IOStart MHA STATIC MHAIOTCP IOStart
- #define IOStop MHA_STATIC_MHAIOTCP_IOStop
- #define IORelease MHA STATIC MHAIOTCP IORelease
- #define IOSetVar MHA_STATIC_MHAIOTCP_IOSetVar
- #define IOStrError MHA_STATIC_MHAIOTCP_IOStrError
- #define IODestroy MHA_STATIC_MHAIOTCP_IODestroy
- #define dummy_interface_test MHA_STATIC_MHAIOTCP_dummy_interface_test

Functions

- static int copy error (MHA Error &e)
- static void * thread_startup_function (void *parameter)
- int IOInit (int fragsize, float samplerate, IOProcessEvent_t proc_event, void *proc_
 handle, IOStartedEvent_t start_event, void *start_handle, IOStoppedEvent_t stop_
 event, void *stop_handle, void **handle)
- int IOPrepare (void *handle, int num inchannels, int num outchannels)
- int IOStart (void *handle)
- int IOStop (void *handle)
- int **IORelease** (void *handle)
- int IOSetVar (void *handle, const char *cmd, char *retval, unsigned int len)
- const char * IOStrError (void *handle, int err)
- void IODestroy (void *handle)
- void dummy_interface_test (void)

Variables

static char user_err_msg [MAX_USER_ERR]

```
6.132.1 Macro Definition Documentation
6.132.1.1 #define ERR_SUCCESS 0
6.132.1.2 #define ERR_IHANDLE -1
6.132.1.3 #define ERR_USER -1000
6.132.1.4 #define MAX_USER_ERR 0x2000
6.132.1.5 #define MHA_ErrorMsg2(
                      y ) MHA_Error(__FILE__,_LINE__,(x),(y))
6.132.1.6 #define MHA_ErrorMsg3(
                      z ) MHA_Error(__FILE__,__LINE__,(x),(y),(z))
6.132.1.7 #define MIN_TCP_PORT 0
6.132.1.8 #define MIN_TCP_PORT_STR "0"
6.132.1.9 #define MAX_TCP_PORT 65535
6.132.1.10 #define MAX_TCP_PORT_STR "65535"
6.132.1.11 #define IOInit MHA_STATIC_MHAIOTCP_IOInit
6.132.1.12 #define IOPrepare MHA_STATIC_MHAIOTCP_IOPrepare
6.132.1.13 #define IOStart MHA_STATIC_MHAIOTCP_IOStart
6.132.1.14 #define IOStop MHA_STATIC_MHAIOTCP_IOStop
6.132.1.15 #define IORelease MHA_STATIC_MHAIOTCP_IORelease
6.132.1.16 #define IOSetVar MHA_STATIC_MHAIOTCP_IOSetVar
6.132.1.17 #define IOStrError MHA STATIC MHAIOTCP IOStrError
6.132.1.18 #define IODestroy MHA_STATIC_MHAIOTCP_IODestroy
6.132.1.19 #define dummy_interface_test MHA_STATIC_MHAIOTCP_dummy_interface_test
```

```
6.132.2 Function Documentation
6.132.2.1 static int copy_error (
                        MHA_Error & e ) [static]
6.132.2.2 static void* thread_startup_function (
                        void * parameter ) [static]
6.132.2.3 int IOInit (
                        int fragsize,
                        float samplerate,
                        IOProcessEvent_t proc_event,
                        void * proc handle,
                        IOStartedEvent_t start_event,
                        void * start_handle,
                        IOStoppedEvent_t stop_event,
                        void * stop_handle,
                        void ** handle )
6.132.2.4 int IOPrepare (
                        void * handle,
                        int num_inchannels,
                        int num_outchannels )
6.132.2.5 int IOStart (
                        void * handle )
6.132.2.6 int IOStop (
                        void * handle )
6.132.2.7 int IORelease (
                        void * handle )
6.132.2.8 int IOSetVar (
                        void * handle,
                        const char * cmd,
                        char * retval,
                        unsigned int len )
6.132.2.9 const char* IOStrError (
                        void * handle,
                        int err )
6.132.2.10 void IODestroy (
                         void * handle )
```

Functions

- static void jack_error_handler (const char *msg)
- static int dummy_jack_proc_cb (jack_nframes_t, void *)
- void make_friendly_number (jack_default_audio_sample_t &x)

Variables

- char last_jack_err_msg [MAX_USER_ERR] = ""
- int last_jack_err = 0
- 6.133.1 Function Documentation

- 6.133.2 Variable Documentation
- 6.133.2.1 char last_jack_err_msg[MAX_USER_ERR] = ""
- 6.133.2.2 int last_jack_err = 0
- 6.134 mhajack.h File Reference

Classes

class MHAJack::port t

Class for one channel/port.

class MHAJack::client_t

Generic asynchronous JACK client.

class MHAJack::client_noncont_t

Generic client for synchronous playback and recording of waveform fragments.

class MHAJack::client_avg_t

Generic JACK client for averaging a system response across time.

Namespaces

MHAJack

Classes and functions for openMHA and JACK interaction.

Macros

- #define MHAJACK FW STARTED 1
- #define MHAJACK STOPPED 2
- #define MHAJACK_STARTING 8
- #define IO ERROR JACK 11
- #define IO_ERROR_MHAJACKLIB 12
- #define MAX USER ERR 0x500

Functions

void MHAJack::io (mha_wave_t *s_out, mha_wave_t *s_in, const std::string &name, const std::vector< std::string > &p_out, const std::vector< std::string > &p_in, float *srate=NULL, unsigned int *fragsize=NULL, bool use_jack_transport=false)

Functional form of generic client for synchronous playback and recording of waveform fragments.

std::vector< unsigned int > MHAJack::get_port_capture_latency (const std::vector< std::string > &ports)

Return the JACK port latency of ports.

Return the JACK port latency of ports.

std::vector< unsigned int > MHAJack::get_port_playback_latency (const std::vector< std::string > &ports)

Return the JACK port latency of ports.

std::vector< int > MHAJack::get_port_playback_latency_int (const std::vector< std
 ::string > &ports)

Variables

char last_jack_err_msg [MAX_USER_ERR]

- 6.134.1 Macro Definition Documentation
- 6.134.1.1 #define MHAJACK_FW_STARTED 1
- 6.134.1.2 #define MHAJACK_STOPPED 2
- 6.134.1.3 #define MHAJACK_STARTING 8
- 6.134.1.4 #define IO_ERROR_JACK 11
- 6.134.1.5 #define IO_ERROR_MHAJACKLIB 12
- 6.134.1.6 #define MAX_USER_ERR 0x500
- 6.134.2 Variable Documentation
- 6.134.2.1 char last_jack_err_msg[MAX_USER_ERR]
- 6.135 mhamain.cpp File Reference

Classes

· class mhaserver t

MHA Framework listening on TCP port for commands.

Macros

- #define MAX_LINE_LENGTH 0x100000
- #define **HELP_TEXT**
- #define GREETING_TEXT

Functions

- void **create_lock** (unsigned int p, std::string s)
- void remove_lock (unsigned int p)
- int **mhamain** (int argc, char *argv[])

std::string s)

- 6.135.2.2 void remove_lock (unsigned int p)
- 6.135.2.3 int mhamain (int *argc*, char * *argv[]*)
- 6.136 mhapluginloader.cpp File Reference
- 6.137 mhapluginloader.h File Reference

Classes

- class PluginLoader::config_file_splitter_t
- class PluginLoader::fourway_processor_t

This abstract class defines the interface for classes that implement all types of signal domain processing supported by the MHA: wave2wave, spec2spec, wave2spec, and spec2wave.

- class PluginLoader::mhapluginloader t
- class MHAParser::mhapluginloader_t

Class to create a plugin loader in a parser, including the load logic.

Namespaces

- PluginLoader
- MHAParser

Name space for the openMHA-Parser configuration language.

Functions

- const char * PluginLoader::mhastrdomain (mha_domain_t)
- void PluginLoader::mhaconfig_compare (const mhaconfig_t &req, const mhaconfig←
 _t &avail, const std::string &pref="")

Compare two **mhaconfig_t** (p. 467) structures, and report differences as an error.

6.138 mhasndfile.cpp File Reference

Functions

- void write_wave (const mha_wave_t &sig, const char *fname, const float &srate, const int &format)
- unsigned int validator_channels (std::vector< int > channel_map, unsigned int channels)
- unsigned int **validator_length** (unsigned int maxlen, unsigned int frames, unsigned int startpos)

6.138.1 Function Documentation

```
6.138.1.1 void write_wave (

const mha_wave_t & sig,

const char * fname,

const float & srate,

const int & format )
```

6.139 mhasndfile.h File Reference

Classes

```
class MHASndFile::sf_tclass MHASndFile::sf wave t
```

Namespaces

MHASndFile

Functions

 void write_wave (const mha_wave_t &sig, const char *fname, const float &srate=44100, const int &format=SF_FORMAT_WAV|SF_FORMAT_FLOAT|SF_ENDIAN_FILE)

```
6.139.1 Function Documentation
```

```
6.139.1.1 void write_wave (

const mha_wave_t & sig,

const char * fname,

const float & srate = 44100,

const int & format = SF_FORMAT_WAV|SF_FORMAT_FLOAT|SF_ENDIAN←

_FILE )
```

6.140 multibandcompressor.cpp File Reference

Classes

- class multibandcompressor::plugin_signals_t
- class multibandcompressor::fftfb_plug_t
- class multibandcompressor::interface t

Namespaces

- multibandcompressor
- 6.141 nlms wave.cpp File Reference

Classes

- · class rt nlms t
- · class nlms_t

Macros

- #define NORMALIZATION_TYPES "[none default sum]"
- #define NORM NONE 0
- #define NORM DEFAULT 1
- #define NORM_SUM 2
- #define ESTIMATION_TYPES "[previous current]"
- #define ESTIM_PREV 0
- #define ESTIM_CUR 1

Functions

```
    void make_friendly_number_by_limiting (mha_real_t &x)
```

```
6.141.1 Macro Definition Documentation
```

```
6.141.1.1 #define NORMALIZATION_TYPES "[none default sum]"
```

```
6.141.1.2 #define NORM NONE 0
```

6.141.1.3 #define NORM_DEFAULT 1

```
6.141.1.4 #define NORM_SUM 2
```

6.141.1.5 #define ESTIMATION_TYPES "[previous current]"

```
6.141.1.6 #define ESTIM_PREV 0
```

6.141.1.7 #define ESTIM CUR 1

6.141.2 Function Documentation

6.142 noise.cpp File Reference

Classes

- · class cfg_t
- class noise_t

6.143 noisePowProposedScale.cpp File Reference

Classes

- class noisePowProposedScale::noisePowProposed
- class noisePowProposedScale::interface t

Namespaces

noisePowProposedScale

Macros

• #define **POWSPEC_FACTOR** 0.0025

6.143.1 Macro Definition Documentation

6.143.1.1 #define POWSPEC_FACTOR 0.0025

6.144 overlapadd.cpp File Reference

Classes

- class overlapadd::overlapadd_t
- class overlapadd::overlapadd_if_t

Namespaces

- overlapadd
- 6.145 plingploing.cpp File Reference

Classes

class plingploing::plingploing_t

Run-time configuration of the plingploing music generator.

• class plingploing::if_t

Plugin class of the plingploing music generator.

Namespaces

plingploing

All classes for the plingploing music generator live in this namespace.

Functions

double plingploing::drand (double a, double b)

- 6.146 pluginbrowser.cpp File Reference
- 6.147 pluginbrowser.h File Reference

Classes

- class plugindescription_t
- · class pluginloader_t
- class pluginbrowser_t
- 6.148 prediction_error.cpp File Reference

Macros

- #define PATCH_VAR(var) patchbay.connect(&var.valuechanged, this, &prediction_
 error::update_cfg)
- #define INSERT_PATCH(var) insert_member(var); PATCH_VAR(var)

Functions

- void make_friendly_number_by_limiting (mha_real_t &x)
- 6.148.1 Macro Definition Documentation
- 6.148.1.1 #define PATCH_VAR(

 var) patchbay.connect(&var.valuechanged, this,

 &prediction_error::update_cfg)
- 6.148.1.2 #define INSERT_PATCH(

 var) insert_member(var); PATCH_VAR(var)
- 6.148.2 Function Documentation
- 6.149 prediction_error.h File Reference

Classes

- class prediction_error_config
- class prediction_error

6.150 resampling.cpp File Reference

Classes

- class MHAPlugin_Resampling::resampling_t
- class MHAPlugin_Resampling::resampling_if_t

Namespaces

- MHAPlugin_Resampling
- 6.151 rmslevel.cpp File Reference

Classes

- class mon_t
- class rmslevel_t
- · class rmslevel_if_t
- 6.152 route.cpp File Reference

Classes

- class route::process_t
- class route::interface_t

Namespaces

- route
- 6.153 save_spec.cpp File Reference

Classes

- class save_spec_t
- 6.154 save_wave.cpp File Reference

Classes

class save_wave_t

6.155 shadowfilter_begin.cpp File Reference

Classes

- class shadowfilter_begin::cfg_t
- class shadowfilter_begin::shadowfilter_begin_t

Namespaces

shadowfilter_begin

6.156 shadowfilter_end.cpp File Reference

Classes

- class shadowfilter_end::cfg_t
- class shadowfilter_end::shadowfilter_end_t

Namespaces

- · shadowfilter_end
- 6.157 sine.cpp File Reference

Classes

- struct sine_cfg_t
- class sine_t
- 6.158 smoothgains_bridge.cpp File Reference

Classes

- class smoothgains_bridge::smoothspec_wrap_t
- class smoothgains_bridge::overlapadd_if_t

Namespaces

smoothgains_bridge

6.159 softclip.cpp File Reference

Classes

- · class cfg_t
- · class softclip_t

6.160 spec2wave.cpp File Reference

Classes

- class hanning_ramps_t
- class spec2wave_t
- class spec2wave_if_t

Functions

- unsigned int **max** (unsigned int a, unsigned int b)
- unsigned int **min** (unsigned int a, unsigned int b)
- 6.160.1 Function Documentation

- 6.161 speechnoise.cpp File Reference

Macros

- #define NUM ENTR MHAORIG 76
- #define NUM_ENTR_LTASS 25
- #define NUM_ENTR_OLNOISE 49

Functions

- float **fhz2bandno** (float x)
- float erb_hz_f_hz (float f_hz)
- float hz2hz (float x)

Dummy scale transformation Hz to Hz.

float bandw_correction (float f, float ldb)

Variables

- float vMHAOrigSpec [NUM_ENTR_MHAORIG] = {-1.473, 0, -4.939, -10.14, -13.94, -14.83, -14.27, -15.66, -16.16, -18.22, -20.5, -21.23, -22.13, -22.58, -23.98, -26.58, -26.4, -25.15, -23.89, -25.54, -27, -30.15, -31.68, -30.14, -27.55, -25.79, -25.89, -26.11, -27. ← 48, -30.37, -33.13, -36.23, -36.64, -36.35, -35.03, -35.48, -36.35, -37.95, -40.53, -42.37, -41.29, -38.49, -36.32, -34.85, -34.05, -33.81, -33.48, -34.1, -35.19, -36.29, -36.94, -37. ← 53, -38.71, -38.7, -38.92, -40.36, -41.26, -42.19, -43.65, -44.37, -43.95, -43.15, -42.57, -41.57, -41.86, -42.34, -42.87, -42.35, -42.71, -42.85, -43.47, -47.43, -67.54, -76.3, -77. ← 43, -77.43}
- float **vMHAOrigFreq** [**NUM_ENTR_MHAORIG**] = $\{172.266,344.532,516.797,689. \leftarrow 063,861.329,1033.59,1205.86,1378.13,1550.39,1722.66,1894.92,2067.19,2239. \leftarrow 46,2411.72,2583.99,2756.25,2928.52,3100.78,3273.05,3445.32,3617.58,3789.85,3962. \leftarrow 11,4134.38,4306.64,4478.91,4651.18,4823.44,4995.71,5167.97,5340.24,5512.51,5684. \leftarrow 77,5857.04,6029.3,6201.57,6373.83,6546.1,6718.37,6890.63,7062.9,7235.16,7407. \leftarrow 43,7579.69,7751.96,7924.23,8096.49,8268.76,8441.02,8613.29,8785.56,8957.82,9130. \leftarrow 09,9302.35,9474.62,9646.88,9819.15,9991.42,10163.7,10335.9,10508.2,10680. \leftarrow 5,10852.7,11025,11197.3,11369.5,11541.8,11714.1,11886.3,12058.6,12230.9,12403. \leftarrow 1,12575.4,12747.7,12919.9,13092.2\}$
- float vLTASS_freq [NUM_ENTR_LTASS] = {63, 80, 100, 125, 160, 200, 250, 315, 400, 500, 630, 800, 1000, 1250, 1600, 2000, 2500, 3150, 4000, 5000, 6300, 8000, 10000, 12500, 16000}
- float vLTASS_combined_lev [NUM_ENTR_LTASS] = {38.6, 43.5, 54.4, 57.7, 56.8, 60.2, 60.3, 59.0, 62.1, 62.1, 60.5, 56.8, 53.7, 53.0, 52.0, 48.7, 48.1, 46.8, 45.6, 44.5, 44.3, 43.7, 43.4, 41.3, 40.7}
- float vLTASS_female_lev [NUM_ENTR_LTASS] = $\{37.0,36.0,37.5,40.1,53.4,62.2,60. \leftarrow 9,58.1,61.7,61.7,60.4,58,54.3,52.3,51.7,48.8,47.3,46.7,45.3,44.6,45.2,44.9,45.0,42. \leftarrow 8,41.1\}$
- float vLTASS_male_lev [NUM_ENTR_LTASS] = $\{38.6, 43.5, 54.4, 57.7, 56.8, 58.2, 59. \leftarrow 7,60.0,62.4,62.6,60.6,55.7,53.1,53.7,52.3,48.7,48.9,47.0,46.0,44.4,43.3,42.4,41.9,39. \leftarrow 8.40.4\}$
- float **vOlnoiseFreq** [**NUM_ENTR_OLNOISE**] = $\{62.5, 70.1539, 78.7451, 88.3884, 99. \leftarrow 2126, 111.362, 125, 140.308, 157.49, 176.777, 198.425, 222.725, 250, 280.616, 314.98, 353. \leftarrow 553, 396.85, 445.449, 500, 561.231, 629.961, 707.107, 793.701, 890.899, 1000, 1122. \leftarrow 46, 1259.92, 1414.21, 1587.4, 1781.8, 2000, 2244.92, 2519.84, 2828.43, 3174.8, 3563. \leftarrow 59, 4000, 4489.85, 5039.68, 5656.85, 6349.6, 7127.19, 8000, 8979.7, 10079.4, 11313. \leftarrow 7, 12699.2, 14254.4, 16000$
- float vOlnoiseLev [NUM_ENTR_OLNOISE] = $\{45.9042,38.044,48.9444,61.3697,67. \leftarrow 6953,69.7451,71.6201,71.2431,65.2754,63.2547,70.2264,72.1434,73.4433,73.2659,69. \leftarrow 8424,71.0132,70.9577,70.3492,68.691,64.8436,64.0435,64.2879,60.5889,60.6596,60. \leftarrow 3727,61.2003,61.8477,61.1478,61.2312,58.6584,57.2892,56.8299,56.0191,53.3018,56. \leftarrow 0525,54.3592,50.8823,55.992,54.6768,47.2616,46.9914,45.209,50.413,47.5848,43. \leftarrow 3215,43.754,38.5773,-0.39427,5.74224\}$
- 6.161.1 Macro Definition Documentation
- 6.161.1.1 #define NUM_ENTR_MHAORIG 76
- 6.161.1.2 #define NUM ENTR LTASS 25

1030 CONTENTS

```
6.161.1.3 #define NUM_ENTR_OLNOISE 49
```

6.161.2 Function Documentation

```
6.161.2.1 float fhz2bandno ( float x )
```

```
6.161.2.2 float erb_hz_f_hz (
float f_hz )
```

```
6.161.2.3 float hz2hz ( float x )
```

Dummy scale transformation Hz to Hz.

This function implements a dummy scale transformation (linear frequency scale).

Parameters

```
x | Input frequency in Hz
```

Returns

Frequency in Hz

```
6.161.2.4 float bandw_correction (
float f,
float ldb )
```

- 6.161.3 Variable Documentation
- 6.161.3.1 float vMHAOrigSpec[NUM_ENTR_MHAORIG] = {-1.473, 0, -4.939, -10.14, -13.94, -14.83, -14.27, -15.66, -16.16, -18.22, -20.5, -21.23, -22.13, -22.58, -23.98, -26.58, -26.4, -25.15, -23.89, -25.54, -27, -30.15, -31.68, -30.14, -27.55, -25.79, -25.89, -26.11, -27.48, -30.37, -33.13, -36.23, -36.64, -36.35, -35.03, -35.48, -36.35, -37.95, -40.53, -42.37, -41.29, -38.49, -36.32, -34.85, -34.05, -33.81, -33.48, -34.1, -35.19, -36.29, -36.94, -37.53, -38.71, -38.7, -38.92, -40.36, -41.26, -42.19, -43.65, -44.37, -43.95, -43.15, -42.57, -41.57, -41.86, -42.34, -42.87, -42.35, -42.71, -42.85, -43.47, -47.43, -67.54, -76.3, -77.43, -77.43}
- 6.161.3.2 float vMHAOrigFreq[NUM_ENTR_MHAORIG] = $\{172.266,344.532,516.797,689.063,861. \leftarrow 329,1033.59,1205.86,1378.13,1550.39,1722.66,1894.92,2067.19,2239.46,2411.72,2583.99,2756. \leftarrow 25,2928.52,3100.78,3273.05,3445.32,3617.58,3789.85,3962.11,4134.38,4306.64,4478.91,4651. \leftarrow 18,4823.44,4995.71,5167.97,5340.24,5512.51,5684.77,5857.04,6029.3,6201.57,6373.83,6546. \leftarrow 1,6718.37,6890.63,7062.9,7235.16,7407.43,7579.69,7751.96,7924.23,8096.49,8268.76,8441. \leftarrow 02,8613.29,8785.56,8957.82,9130.09,9302.35,9474.62,9646.88,9819.15,9991.42,10163.7,10335. \leftarrow 9,10508.2,10680.5,10852.7,11025,11197.3,11369.5,11541.8,11714.1,11886.3,12058.6,12230. \leftarrow 9,12403.1,12575.4,12747.7,12919.9,13092.2\}$

- 6.161.3.3 float vLTASS_freq[NUM_ENTR_LTASS] = {63, 80, 100, 125, 160, 200, 250, 315, 400, 500, 630, 800, 1000, 1250, 1600, 2000, 2500, 3150, 4000, 5000, 6300, 8000, 10000, 12500, 16000}
- 6.161.3.4 float vLTASS_combined_lev[NUM_ENTR_LTASS] = {38.6, 43.5, 54.4, 57.7, 56.8, 60.2, 60.3, 59.0, 62.1, 62.1, 60.5, 56.8, 53.7, 53.0, 52.0, 48.7, 48.1, 46.8, 45.6, 44.5, 44.3, 43.7, 43.4, 41.3, 40.7}
- 6.161.3.5 float vLTASS_female_lev[NUM_ENTR_LTASS] = {37.0,36.0,37.5,40.1,53.4,62.2,60.9,58. ← 1,61.7,61.7,60.4,58,54.3,52.3,51.7,48.8,47.3,46.7,45.3,44.6,45.2,44.9,45.0,42.8,41.1}
- 6.161.3.6 float vLTASS_male_lev[NUM_ENTR_LTASS] = {38.6,43.5,54.4,57.7,56.8,58.2,59.7,60.0,62. 4,62.6,60.6,55.7,53.1,53.7,52.3,48.7,48.9,47.0,46.0,44.4,43.3,42.4,41.9,39.8,40.4}
- 6.161.3.7 float vOlnoiseFreq[NUM_ENTR_OLNOISE] = $\{62.5, 70.1539, 78.7451, 88.3884, 99.2126, 111. \leftarrow 362, 125, 140.308, 157.49, 176.777, 198.425, 222.725, 250, 280.616, 314.98, 353.553, 396.85, 445. \leftarrow 449, 500, 561.231, 629.961, 707.107, 793.701, 890.899, 1000, 1122.46, 1259.92, 1414.21, 1587.4, 1781. \leftarrow 8, 2000, 2244.92, 2519.84, 2828.43, 3174.8, 3563.59, 4000, 4489.85, 5039.68, 5656.85, 6349.6, 7127. \leftarrow 19, 8000, 8979.7, 10079.4, 11313.7, 12699.2, 14254.4, 16000$
- 6.161.3.8 float vOlnoiseLev[NUM_ENTR_OLNOISE] = $\{45.9042,38.044,48.9444,61.3697,67.6953,69. \leftarrow 7451,71.6201,71.2431,65.2754,63.2547,70.2264,72.1434,73.4433,73.2659,69.8424,71.0132,70. \leftarrow 9577,70.3492,68.691,64.8436,64.0435,64.2879,60.5889,60.6596,60.3727,61.2003,61.8477,61. \leftarrow 1478,61.2312,58.6584,57.2892,56.8299,56.0191,53.3018,56.0525,54.3592,50.8823,55.992,54. \leftarrow 6768,47.2616,46.9914,45.209,50.413,47.5848,43.3215,43.754,38.5773,-0.39427,5.74224\}$
- 6.162 speechnoise.h File Reference

Classes

- class speechnoise t
- 6.163 split.cpp File Reference

Classes

class MHAPlugin_Split::uni_processor_t

An interface to a class that sports a process method with no parameters and no return value.

class MHAPlugin Split::thread platform t

Basic interface for encapsulating thread creation, thread priority setting, and synchronization on any threading platform (i.e., pthreads or win32threads).

class MHAPlugin Split::dummy threads t

Dummy specification of a thread platform: This class implements everything in a single thread.

class MHAPlugin_Split::posix_threads_t

Posix threads specification of thread platform.

class MHAPlugin_Split::domain_handler_t

Handles domain-specific partial input and output signal.

class MHAPlugin_Split::splitted_part_t

The **splitted_part_t** (p. 714) instance manages the plugin that performs processing on the reduced set of channels.

class MHAPlugin_Split::split_t

Implements split plugin.

1032 CONTENTS

Namespaces

MHAPlugin_Split

Macros

• #define MHAPLUGIN_OVERLOAD_OUTDOMAIN

This define modifies the definition of MHAPLUGIN_CALLBACKS and friends.

- #define posixthreads 1
- #define default thread platform string "posix"
- #define default_thread_platform_type posix_threads_t

Enumerations

6.163.1 Detailed Description

Source code for the split plugin. The split plugin splits the audio signal by channel. The splitted paths execute in parallel.

- 6.163.2 Macro Definition Documentation
- 6.163.2.1 #define MHAPLUGIN_OVERLOAD_OUTDOMAIN

This define modifies the definition of MHAPLUGIN_CALLBACKS and friends.

The output signal is transferred through a second parameter to the process method, enabling all four domain transformations in a single plugin.

- 6.163.2.2 #define posixthreads 1
- 6.163.2.3 #define default_thread_platform_string "posix"
- 6.163.2.4 #define default_thread_platform_type posix_threads_t
- 6.164 steerbf.cpp File Reference

Macros

- #define INSERT_PATCH(var) insert_member(var); PATCH_VAR(var)

6.166 testalsadevice.c File Reference

Functions

- int **main** (int argc, char **argv)
- 6.166.1 Function Documentation
- 6.166.1.1 int main (int *argc*, char ** *argv*)
- 6.167 testplugin.cpp File Reference

Classes

- class testplugin::config_parser_t
- class testplugin::ac_parser_t
- class testplugin::signal_parser_t
- · class testplugin::if_t

Namespaces

testplugin

1034 CONTENTS

6.168 timoconfig.cpp File Reference

Macros

- #define LPSCALE (5.2429e+007)
- #define **POWSPEC_FACTOR** 0.0025
- #define OVERLAP FACTOR 2
- #define EPSILON (1e-10)
- #define **CHANLOOP** for (unsigned int c=0; c<nchan; ++c)
- 6.168.1 Macro Definition Documentation
- 6.168.1.1 #define LPSCALE (5.2429e+007)
- 6.168.1.2 #define POWSPEC_FACTOR 0.0025
- 6.168.1.3 #define OVERLAP_FACTOR 2
- 6.168.1.4 #define EPSILON (1e-10)
- 6.168.1.5 #define CHANLOOP for (unsigned int c=0; c<nchan; ++c)
- 6.169 timoconfig.h File Reference

Classes

- · class timo_AC
- class timo_params
- class timoConfig
- 6.170 timoSmooth.cpp File Reference

Macros

- #define INSERT_VAR(var) insert_item(#var, &var)
- #define PATCH_VAR(var) patchbay.connect(&var.valuechanged, this, &timoSmooth← ::on_model_param_valuechanged)
- #define INSERT_PATCH(var) INSERT_VAR(var); PATCH_VAR(var)

6.170.1 Macro Definition Documentation

6.170.1.1 #define INSERT_VAR(

var) insert_item(#var, &var)

6.170.1.2 #define PATCH VAR(

var) patchbay.connect(&var.valuechanged, this, &timoSmooth::on_model_param_valuechanged)

6.170.1.3 #define INSERT_PATCH(

var) INSERT_VAR(var); PATCH_VAR(var)

6.171 timosmooth.h File Reference

Classes

class timoSmooth

6.172 transducers.cpp File Reference

Classes

- class softclipper_variables_t
- class softclipper_t
- · class calibrator_variables_t
- class calibrator_runtime_layer_t
- class calibrator_t
- · class bbcalib interface t

Typedefs

- typedef MHAPlugin::config_t< MHASignal::async_rmslevel_t > rmslevelmeter
- typedef MHAPlugin::plugin_t< calibrator_runtime_layer_t > rtcalibrator

Functions

- speechnoise_t::noise_type_t kw_index2type (unsigned int idx)
- std::vector< int > vint_0123n1 (unsigned int n)

1036 CONTENTS

Classes

- class us_t
- 6.174 wave2spec.cpp File Reference

Classes

- class wave2spec_t
- · class wave2spec if t

Macros

- #define MHAPLUGIN_OVERLOAD_OUTDOMAIN
- 6.174.1 Macro Definition Documentation
- 6.174.1.1 #define MHAPLUGIN_OVERLOAD_OUTDOMAIN
- 6.175 wavrec.cpp File Reference

Classes

- class wavwriter_t
- class wavrec_t

Macros

- 6.175.1 Macro Definition Documentation
- 6.176 windowselector.cpp File Reference
- 6.177 windowselector.h File Reference

Classes

• class windowselector_t

A combination of mha parser variables to describe an overalapadd analysis window.

Index

_MHA_AC_CHAR	ADM::Linearphase_FIR, 187
testplugin::ac_parser_t, 895	\sim MHA_Error
_MHA_AC_DOUBLE	MHA_Error, 411
testplugin::ac_parser_t, 895	\sim Server
_MHA_AC_FLOAT	MHA_TCP::Server, 445
testplugin::ac_parser_t, 895	\sim Thread
_MHA_AC_INT	MHA_TCP::Thread, 452
testplugin::ac_parser_t, 895	\sim Timeout_Watcher
_MHA_AC_MHACOMPLEX	MHA_TCP::Timeout_Watcher, 455
testplugin::ac_parser_t, 895	\sim Wakeup_Event
_MHA_AC_MHAREAL	MHA_TCP::Wakeup_Event, 457
testplugin::ac_parser_t, 895	\sim acConcat_wave
MHA_FUN	acConcat_wave, 144
mha_defs.h, 956	\sim acConcat_wave_config
attribute	acConcat_wave_config, 147
mha_plugin.hh, 979	\sim acPooling_wave
declspec	acPooling_wave, 154
example5.cpp, 940	\sim acPooling_wave_config
example6.cpp, 940	acPooling_wave_config, 156
mha_defs.h, 956	\sim acSteer
mha_plugin.hh, 979	acSteer, 166
_cf	\sim acSteer_config
DynComp::dc_afterburn_t, 282	acSteer_config, 168
_channels	\sim acTransform_wave
DynComp::dc_afterburn_t, 282	acTransform_wave, 170
_conjugate	\sim acTransform_wave_config
Complex arithmetics in the openMHA, 67	acTransform_wave_config, 172
_linphase_asym	~acmon_t
MHAFilter::smoothspec_t, 531	acmon::acmon_t, 151
_prepare	~acspace2matrix_t
testplugin::if_t, 899	MHA_AC::acspace2matrix_t, 383
_reciprocal	~adm_rtconfig_t
Complex arithmetics in the openMHA, 68	adm_rtconfig_t, 192
_srate	~algo_comm_class_t
DynComp::dc_afterburn_t, 282	MHAKernel::algo_comm_class_t, 567
_steerbf	~analysepath_t
steerbf_config, 893	analysepath_t, 203
_unknown	~analysispath_if_t
testplugin::ac_parser_t, 895	analysispath_if_t, 206
~Async_Notify	~bark2hz_t
MHA_TCP::Async_Notify, 432	MHAOvlFilter::barkscale::bark2hz_t, 577
~Connection	~base_t
MHA_TCP::Connection, 436	MHAParser::base_t, 600
~Delay	~bbcalib_interface_t
ADM::Delay, 185	bbcalib_interface_t, 215
~Event_Watcher	~blockprocessing_polyphase_resampling_t
MHA_TCP::Event_Watcher, 442	MHAFilter::blockprocessing_polyphase
~Linearphase_FIR	_resampling_t, 481

~c_ifc_parser_t	PluginLoader::fourway_processor_t, 841
MHAParser::c_ifc_parser_t, 612	∼fw_t
~cfg_chain_t	fw_t, 319
MHAPlugin::cfg_chain_t, 686	~gaintable_t
~cfg_t	DynComp::gaintable_t, 287
acsave::cfg_t, 161	~gamma_flt_t
~config_t	MHAFilter::gamma_flt_t, 499
MHAPlugin::config_t, 689	~hanning_ramps_t
~connector_base_t	hanning_ramps_t, 327
MHAEvents::connector_base_t, 469	~hilbert_shifter_t
~connector_t	hilbert_shifter_t, 329
MHAEvents::connector_t, 472	~hilbert t
~db_if_t	MHASignal::hilbert_t, 740
db_if_t, 236	~hz2bark t
~delay_spec_t	MHAOvlFilter::barkscale::hz2bark_t, 578
MHASignal::delay_spec_t, 729	~int_t
~delay_t	MHA_AC::int_t, 387
MHASignal::delay_t, 730	~io_file_t
~delay_wave_t	io_file_t, 334
MHASignal::delay_wave_t, 732	~io lib t
~doasvm_classification	
_	io_lib_t, 338
doasym_classification, 266	~io_parser_t
~doasym_classification_config	io_parser_t, 341
doasym_classification_config, 268	~io_portaudio_t
~doasym_feature_extraction	MHAIOPortAudio::io_portaudio_t, 549
doasym_feature_extraction, 270	~io_tcp_fwcb_t
~doasym_feature_extraction_config	io_tcp_fwcb_t, 344
doasvm_feature_extraction_config, 272	~io_tcp_parser_t
~domain_handler_t	io_tcp_parser_t, 348
MHAPlugin_Split::domain_handler_t, 701	~io_tcp_sound_t
~double_t	io_tcp_sound_t, 353
MHA_AC::double_t, 385	~io_tcp_t
~doublebuffer_t	io_tcp_t, 358
MHASignal::doublebuffer_t, 734	~linear_table_t
~dynamiclib_t	MHATableLookup::linear_table_t, 789
dynamiclib_t, 278	~lpc
~emitter_t	lpc, 362
MHAEvents::emitter_t, 474	~lpc_bl_predictor
\sim fft_t	lpc_bl_predictor, 365
MHASignal::fft_t, 736	\sim lpc_bl_predictor_config
\sim fftfb_t	lpc_bl_predictor_config, 367
MHAOvlFilter::fftfb_t, 580	~lpc_burglattice
~fftfilter_t	lpc_burglattice, 369
MHAFilter::fftfilter_t, 488	~lpc_burglattice_config
\sim fftfilterbank_t	lpc_burglattice_config, 371
MHAFilter::fftfilterbank_t, 492	~lpc_config
~filter_t	lpc_config, 373
MHAFilter::filter_t, 496	~matrix_t
~float_t	MHASignal::matrix_t, 748
MHA_AC::float_t, 386	~mha_dblbuf_t
~fourway_processor_t	mha_dblbuf_t, 400

\sim mha_fifo_lw_t	\sim save_var_base_t
mha_fifo_lw_t, 413	ac2lsl::save_var_base_t, 131
\sim mha_fifo_posix_threads_t	~save_var_t
mha_fifo_posix_threads_t, 416	ac2lsl::save_var_t, 132
\sim mha_fifo_t	ac2lsl::save_var_t< mha_complex_t >
mha_fifo_t, 419	134
~mha_fifo_thread_guard_t	acsave::save_var_t, 163
mha_fifo_thread_guard_t, 422	∼sf_t
~mha_fifo_thread_platform_t	MHASndFile::sf_t, 786
mha_fifo_thread_platform_t, 423	∼sine_t
~mha_rt_fifo_element_t	sine_t, 875
mha_rt_fifo_element_t, 426	~smoothspec_t
~mha_rt_fifo_t	MHAFilter::smoothspec_t, 530
mha_rt_fifo_t, 427	~spec2wave_t
~mhaplug_cfg_t	spec2wave_t, 886
mhaplug_cfg_t, 685	~spec_fader_t
~mhapluginloader_t	spec_fader_t, 888
MHAParser::mhapluginloader_t, 646	~spectrum_t
PluginLoader::mhapluginloader_t, 845	MHA_AC::spectrum_t, 389
~mhaserver_t	MHASignal::spectrum_t, 765
mhaserver_t, 725	~split_t
~overlapadd_if_t	MHAPlugin_Split::split_t, 712
overlapadd::overlapadd_if_t, 823	~splitted_part_t
smoothgains_bridge::overlapadd_if_←	MHAPlugin_Split::splitted_part_t, 716
t, 877	~steerbf
~overlapadd_t	steerbf, 891
• —	~steerbf_config
overlapadd::overlapadd_t, 825	steerbf_config, 893
~parser_t	~table_t
MHAParser::parser_t, 653	MHATableLookup::table_t, 792
~partitioned_convolution_t	~thread_platform_t
MHAFilter::partitioned_convolution_t, 519	MHAPlugin_Split::thread_platform_t, 720
~patchbay_t	~timoConfig
MHAEvents::patchbay_t, 475	timoConfig, 906
~plug_t	~timoSmooth
plug_t, 834	timoSmooth, 909
~plugin_t	~uint_vector_t
MHAPlugin::plugin_t, 693	MHASignal::uint_vector_t, 773
~pluginloader_t	~uni_processor_t
pluginloader_t, 849	MHAPlugin_Split::uni_processor_t, 722
~plugs_t	\sim wave2spec_t
mhachain::plugs_t, 465	wave2spec_t, 916
~port_t	\sim waveform_t
MHAJack::port_t, 564	MHA_AC::waveform_t, 392
~posix_threads_t	MHASignal::waveform_t, 777
MHAPlugin_Split::posix_threads_t, 708	\sim wavwriter_t
~prediction_error	wavwriter_t, 920
prediction_error, 850	~windowselector_t
~prediction_error_config	windowselector_t, 922
prediction_error_config, 853	
~rt_nlms_t	Α
rt_nlms_t, 862	lpc_config, 374

MHAFilter::filter_t, 497	Delay, 184
MHAFilter::gamma_flt_t, 500	m_coeff, 185
MHAFilter::iir_filter_t, 505	m_fullsamples, 185
a	m_norm, 185
MHAParser::base_t::replace_t, 606	m_now_in, 185
A_	m_state, 185
MHAFilter::complex_bandpass_t, 485	process, 185
MHAFilter::iir_ord1_real_t, 508	ADM::Delay< F >, 184
AC_DIM_MISMATCH	ADM::Linearphase_FIR< F >, 186
mha algo comm.cpp, 953	ADM::Linearphase_FIR
AC INVALID HANDLE	~Linearphase_FIR, 187
mha_algo_comm.cpp, 953	Linearphase_FIR, 186
AC INVALID NAME	m_alphas, 187
mha_algo_comm.cpp, 953	m_now, 187
AC INVALID OUTPTR	m_order, 187
mha_algo_comm.cpp, 953	m_output, 187
AC_STRING_TRUNCATED	process, 187
mha_algo_comm.cpp, 953	ADM, 79
AC_SUCCESS	ADM::ADM, 182
mha_algo_comm.cpp, 953	C, 80
AC TYPE MISMATCH	DELAY_FREQ, 80
mha_algo_comm.cpp, 953	PI, 80
ACSAVE_FMT_MAT4	START_BETA, 80
acsave.cpp, 927	subsampledelay_coeff, 79
ACSAVE FMT TXT	ALGO COMM ID STR
acsave.cpp, 927	mha_algo_comm.hh, 955
ACSAVE_FMT_M	ASSERT_EQUAL_DIM_PTR
acsave.cpp, 927	mha_signal.cpp, 984
ACSAVE_SFMT_MAT4	ASSERT_EQUAL_DIM
acsave.cpp, 927	mha_signal.cpp, 984
ACSAVE_SFMT_TXT	ASYNC_CONNECT_STARTED
acsave.cpp, 927	mha_tcp.cpp, 996
ACSAVE_SFMT_M	abandonned
acsave.cpp, 927	mha_rt_fifo_element_t, 426
ADM::ADM< F >, 181	abs
ADM::ADM	Complex arithmetics in the openMHA, 66
ADM, 182	abs2
beta, 183	Complex arithmetics in the openMHA, 66
m_beta, 183	ac
m_decomb, 183	ac2wave_t, 142
m_delay_back, 183	acConcat_wave_config, 147
m_delay_front, 183	acPooling_wave_config, 156
m_lp_bf, 183	acTransform_wave_config, 172
m_lp_result, 183	acmon::acmon_t, 152
m_mu_beta, 183	acsave::cfg_t, 162
m_powerfilter_coeff, 183	acsave::save_var_t, 164
m_powerfilter_norm, 183	doasvm_classification_config, 268
m_powerfilter_state, 183	fw_t, 321
process, 182	latex_doc_t, 361
ADM::Delay	lpc_bl_predictor_config, 367
\sim Delay, 185	lpc_burglattice_config, 371

MHA_AC::ac2matrix_helper_t, 379	num_entries, 135
MHA_AC::double_t, 385	save_var_t, 134
MHA_AC::float_t, 386	send_frame, 135
MHA_AC::int_t, 387	stream, 135
MHA_AC::spectrum_t, 390	vec, 135
MHA_AC::waveform_t, 393	ac2lsl::save_var_t< T >, 131
MHAKernel::algo_comm_class_t, 569	ac2lsl_t
MHAMultiSrc::base_t, 571	ac2lsl::ac2lsl_t, 127
MHAPlugin::plugin_t, 695	ac2matrix_helper_t
mhachain::plugs_t, 465	MHA_AC::ac2matrix_helper_t, 378
PluginLoader::mhapluginloader_t, 847	ac2matrix t
prediction_error_config, 853	MHA_AC::ac2matrix_t, 380
rt_nlms_t, 862	ac2osc.cpp, 924
shadowfilter_end::cfg_t, 871	ac2osc_t, 136
steerbf config, 893	ac2osc_t, 137
testplugin::if_t, 899	acspace, 139
timoConfig, 906	b record, 139
AC variable, 4	framerate, 139
ac2lsl, 77	host, 138
ac2lsl.cpp, 924	lo addr, 139
ac2lsl::ac2lsl_t, 126	mode, 139
ac2lsl_t, 127	patchbay, 139
activate, 128	port, 138
patchbay, 128	prepare, 137
prepare, 127	process, 137, 138
process, 127, 128	release, 138
release, 128	rt_strict, 139
rt_strict, 128	rtmem, 139
skip, 128	send_osc_float, 138
update, 128	skip, 139
varlist, 128	skipent, 139
vars, 128	ttl, 138
ac2lsl::cfg_t, 129	update_mode, 138
-	• —
activate, 130	vars, 139
cfg_t, 129	ac2wave.cpp, 924
process, 130	ac2wave_if_t, 140
skip, 130	ac2wave_if_t, 141
skipcnt, 130	delay_ac, 141
varlist, 130	delay_in, 141
ac2lsl::save_var_base_t, 130	gain_ac, 141
~save_var_base_t, 131	gain_in, 141
send_frame, 131	name, 141
ac2lsl::save_var_t	patchbay, 141
∼save_var_t, 132	prepare, 141
buf, 133	prepared, 141
save_var_t, 132	process, 141
send_frame, 133	release, 141
stream, 133	update, 141
ac2lsl::save_var_t< mha_complex_t >, 133	zeros, 141
~save_var_t, 134	ac2wave_t, 142
buf, 135	ac, 142

ac2wave_t, 142	lower_threshold, 155
channels, 142	max_pool_ind_name, 155
delay_ac, 143	neighbourhood, 155
delay_in, 143	numsamples, 155
frames, 142	p_name, 155
gain_ac, 143	patchbay, 155
gain_in, 143	pool_name, 155
name, 143	pooling_type, 155
process, 142	pooling_wndlen, 155
w, 142	prepare, 154
ac_	process, 154
	release, 155
combc_t, 231	
MHAParser::mhapluginloader_t, 647	update_cfg, 155
ac_fifo	upper_threshold, 155
analysepath_t, 204	acPooling_wave.cpp, 926
ac_monitor_t	INSERT_PATCH, 926
acmon::ac_monitor_t, 148	PATCH_VAR, 926
ac_monitor_type.cpp, 925	acPooling_wave.h, 926
ac_monitor_type.hh, 925	acPooling_wave_config, 156
ac_parser_t	\sim acPooling_wave_config, 156
testplugin::ac_parser_t, 895	ac, 156
acConcat_wave, 143	acPooling_wave_config, 156
~acConcat_wave, 144	alpha, 157
acConcat_wave, 144	c, 157
name_conAC, 146	insert, 156
num_AC, 146	like_ratio, 157
patchbay, 146	low_thresh, 157
prefix_names_AC, 146	neigh, 157
prepare, 144	p, 157
process, 144	p_max, 157
release, 146	pool, 157
samples_AC, 146	•
• —	pooling_ind, 157
update_cfg, 146	pooling_option, 157
acConcat_wave.cpp, 925	pooling_size, 157
INSERT_PATCH, 925	process, 156
PATCH_VAR, 925	raw_p_name, 157
acConcat_wave.h, 925	up_thresh, 157
acConcat_wave_config, 146	acSteer, 165
\sim acConcat_wave_config, 147	\sim acSteer, 166
ac, 147	acSteer, 166
acConcat_wave_config, 147	acSteerName1, 167
numSamples_AC, 147	acSteerName2, 167
process, 147	nrefmic, 167
strNames_AC, 147	nsteerchan, 167
vGCC_con, 147	patchbay, 167
vGCC, 147	prepare, 166
acPooling_wave, 153	process, 166
~acPooling_wave, 154	release, 166
acPooling_wave, 154	steerFile, 167
alpha, 155	update_cfg, 167
like_ratio_name, 155	acSteer.cpp, 927
o_ratio_namo, 100	200001.0pp, 027

INSERT_PATCH, 927	MHA_TCP::Server, 445
PATCH VAR, 927	accept_event
acSteer.h, 927	MHA_TCP::Server, 446
acSteer_config, 167	accept loop
~acSteer_config, 168	io_tcp_t, 358
acSteer_config, 168	acceptor_started
insert, 168	mhaserver t, 725
nangle, 168	<u> </u>
nchan, 168	ack_fail
nfreq, 168	mhaserver_t, 726 ack ok
nrefmic, 168	-
nsteerchan, 168	mhaserver_t, 726
·	acmon, 77
specSteer1, 168	acmon.cpp, 925
specSteer2, 168 acSteerName1	acmon::ac_monitor_t, 147
	ac_monitor_t, 148
acSteer, 167 acSteerName2	dimstr, 149
	getvar, 149
acSteer, 167	mon, 149
acTransform_wave, 169	mon_complex, 149
~acTransform_wave, 170	mon_mat, 149
acTransform_wave, 170	mon_mat_complex, 149
ang_name, 171	name, 149
numsamples, 171	p_parser, 150
patchbay, 171	use_mat, 150
prepare, 170	acmon::acmon_t, 150
process, 170	~acmon_t, 151
raw_p_max_name, 171	ac, 152
raw_p_name, 171	acmon_t, 151
release, 170	algo, 152
rotated_p_max_name, 171	b_cont, 152
rotated_p_name, 171	b_snapshot, 152
to_from, 171	chain, 152
update_cfg, 171	dimensions, 152
acTransform_wave.cpp, 928	dispmode, 152
INSERT_PATCH, 928	patchbay, 152
PATCH_VAR, 928	prepare, 151
acTransform_wave.h, 928	process, 152
acTransform_wave_config, 171	recmode, 152
~acTransform_wave_config, 172	release, 151
ac, 172	save_vars, 152
acTransform_wave_config, 172	update_recmode, 152
ang_name, 172	varlist, 152
offset, 172	vars, 152
process, 172	acmon_t
raw_p_max_name, 172	acmon::acmon_t, 151
raw_p_name, 172	acsave, 78
resolution, 172	acsave.cpp, 926
rotated_i, 172	ACSAVE_FMT_MAT4, 927
rotated_p, 172	ACSAVE_FMT_TXT, 927
to_from, 172	ACSAVE_FMT_M, 927
accept	ACSAVE_SFMT_MAT4, 927

ACSAVE_SFMT_TXT, 927	store_frame, 163
ACSAVE_SFMT_M, 927	acsave_t
acsave::acsave_t, 158	acsave::acsave_t, 159
acsave_t, 159	acspace
algo, 160	ac2osc_t, 139
b_flushed, 160	acspace2matrix t
b_prepared, 160	MHA_AC::acspace2matrix_t, 382
bflush, 160	acspace_template
chain, 160	analysispath_if_t, 206
event_start_recording, 160	act_
event_stop_and_flush, 160	_ wavwriter_t, 920
fileformat, 160	actgains
fname, 160	fader_if_t, 305
patchbay, 160	activate
prepare, 159	ac2lsl::ac2lsl t, 128
process, 159, 160	ac2lsl::cfg_t, 130
reclen, 160	activate_query
release, 159	MHAParser::base_t, 604
variables, 160	active
varlist, 160	addsndfile::addsndfile if t, 175
varlist_t, 159	acvar
acsave::cfg_t, 161	MHA_AC::ac2matrix_helper_t, 379
\sim cfg_t, 161	adapt_filter_param_t
ac, 162	MHAFilter::adapt_filter_param_t, 477
cfg_t, 161	adapt_filter_state_t
flush_data, 161	MHAFilter::adapt_filter_state_t, 478
max_frames, 162	adapt_filter_t
nvars, 162	MHAFilter::adapt_filter_t, 479
rec_frames, 162	add
store frame, 161	MHASignal::loop wavefragment t, 742
varlist, 162	add_entry
acsave::mat4head t, 162	MHAParser::keyword_list_t, 631
<u> </u>	• — —
cols, 162	MHATableLookup::linear_table_t, 790
imag, 162	MHATableLookup::xy_table_t, 795
namelen, 162	add_fun
rows, 162	MHAOvlFilter::scale_var_t, 596
t, 162	add_parent_on_insert
acsave::save_var_t, 163	MHAParser::base_t, 604
∼save_var_t, 163	add_plug
ac, 164	altplugs_t, 202
b_complex, 164	add_plugin
data, 164	pluginbrowser_t, 837
framecnt, 164	add_plugins
maxframe, 164	pluginbrowser_t, 837
name, 164	add_replace_pair
ndim, 164	MHAParser::base_t, 604
nframes, 164	added_via_plugs
save_m, 164	altplugs_t, 202
save_mat4, 163	addsndfile, 78
save_txt, 163	addsndfile_resampling_mode_t, 78
save_var_t, 163	DO_RESAMPLE, 78

DONT_RESAMPLE_PERMISSIVE, 78	addsndfile::addsndfile_if_t, 174
DONT_RESAMPLE_STRICT, 78	addsndfile_resampling_mode_t
level_adaptor, 78	addsndfile, 78
resampled_num_frames, 79	adm
wave_reader, 78	adm_rtconfig_t, 193
addsndfile.cpp, 928	adm.cpp, 929
DEBUG, 929	adm_fir_decomb, 930
addsndfile::addsndfile_if_t, 173	adm_fir_lp, 930
active, 175	adm.hh, 930
addsndfile_if_t, 174	adm_fir_decomb
change_mode, 175	adm.cpp, 930
channels, 175	adm_fir_lp
filename, 175	adm.cpp, 930
level, 175	adm_if_t, 188
levelmode, 175	adm if t, 189
loop, 175	beta, 190
mapping, 175	bypass, 190
mhachannels, 175	coeff_decomb, 190
mode, 175	coeff_lp, 190
numchannels, 175	decomb order, 190
patchbay, 175	distances, 190
path, 175	front_channels, 190
prepare, 174	input_channels, 190
process, 174	is_prepared, 190
ramplen, 175	lp_order, 190
release, 174	mu beta, 190
resamplingmode, 175	out, 190
scan_dir, 175	patchbay, 190 prepare, 189
search_pattern, 175	• • •
search_result, 175	process, 189
set_level, 175	rear_channels, 190
startpos, 175	release, 189
uint_mode, 175	srate, 190
update, 174	tau_beta, 190
addsndfile::level_adapt_t, 176	update, 189
can_update, 177	adm_rtconfig_t, 190
get_level, 177	~adm_rtconfig_t, 192
ilen, 177	adm, 193
I_new, 177	adm_rtconfig_t, 191
l_old, 177	adm_t, 191
level_adapt_t, 176	adms, 193
pos, 177	check_index, 192
update_frame, 177	decomb_coeffs, 193
wnd, 177	front_channel, 193
addsndfile::resampled_soundfile_t, 177	front_channels, 193
resampled_soundfile_t, 178	lp_coeffs, 193
addsndfile::sndfile_t, 179	num_adms, 192
sndfile_t, 179	rear_channel, 193
addsndfile::waveform_proxy_t, 180	rear_channels, 193
waveform_proxy_t, 181	adm_t
addsndfile_if_t	adm_rtconfig_t, 191

adms	MHAParser, 107
adm_rtconfig_t, 193	all_ids
algo	MHAParser, 107
acmon::acmon_t, 152	alloc_plugs
acsave::acsave_t, 160	mhachain::plugs_t, 465
analysispath_if_t, 206	almost
coherence::cohflt_if_t, 224	Complex arithmetics in the openMHA, 68
db_if_t, 237	alph
dc::dc_if_t, 240	plingploing::plingploing_t, 833
fftfilterbank::fftfb_interface_t, 312	alpha
MHAPlugin_Resampling::resampling_if	acPooling_wave, 155
t, 697	-
- ·	acPooling_wave_config, 157
multibandcompressor::interface_t, 811	cfg_t, 222
nlms_t, 815	coherence::cohflt_t, 226
overlapadd::overlapadd_if_t, 824	coherence::vars_t, 228
route::interface_t, 859	alpha_const
smoothgains_bridge::overlapadd_if_←	timoConfig, 906
t, 878	alpha_const_limits_hz
wave2spec_if_t, 914	timo_params, 904
algo_comm_class_t	timoSmooth, 911
MHAKernel::algo_comm_class_t, 567	alpha_const_vals
algo_comm_default	timo_params, 904
mha_algo_comm.cpp, 953	timoSmooth, 911
mha_algo_comm.hh, 955	alpha_frame
algo_comm_id_string	timoConfig, 907
MHAKernel::algo_comm_class_t, 569	alpha_frame_AC
algo_comm_id_string_len	timo_AC, 902
MHAKernel::algo_comm_class_t, 569	alpha_hat
algo_comm_safe_cast	timoConfig, 907
MHAKernel, 97	alpha_hat_AC
algo_comm_t, 194	timo_AC, 902
get_entries, 198	alpha_pitch
get_error, 198	timo_params, 904
get_var, 197	timoSmooth, 910
get_var_float, 197	alpha_prev
get_var_int, 197	timoConfig, 907
handle, 194	alphaPH1mean
insert_var, 194	noisePowProposedScale::interface_t, 819
insert_var_float, 195	alphaPH1mean
insert_var_int, 195	noisePowProposedScale::noisePow←
is_var, 196	Proposed, 821
mha.h, 952	alphaPSD_
	•
remove_ref, 196	noisePowProposedScale::noisePow←
remove_var, 195	Proposed, 821
algo_name	alphaPSD
lpc, 363	noisePowProposedScale::interface_t, 819
algos	altplugs.cpp, 931
MHAPlugin_Split::split_t, 713	MHAPLUGIN_OVERLOAD_OUTDOM↔
mhachain::chain_base_t, 462	AIN, 931
mhachain::plugs_t, 465	altplugs_t, 199
all_dump	add_plug, 202

added_via_plugs, 202	libdata, 204
altplugs_t, 200	outer_ac, 204
cfin, 202	outer_ac_copy, 204
cfout, 202	priority, 204
current, 202	ProcessMutex, 204
delete_plug, 202	rt_process, 204
event_add_plug, 201	scheduler, 204
event delete plug, 201	svc, 204
event_select_plug, 201	thread, 204
event_set_plugs, 201	wave_fifo, 204
fallback_spec, 202	analysispath.cpp, 931
fallback_wave, 202	thread_start, 932
nondefault_labels, 202	analysispath_if_t, 205
parse, 201	~analysispath_if_t, 206
parser_plugs, 202	acspace_template, 206
patchbay, 202	algo, 206
plugs, 202	analysispath_if_t, 206
prepare, 200	chain, 206
prepared, 202	fifolen, 206
proc_ramp, 201	fragsize, 206
process, 201	libname, 206
•	
ramp_counter, 202	loadlib, 206
ramp_len, 202	patchbay, 206
ramplen, 202	plug, 206
release, 200	prepare, 206
select_plug, 202	priority, 206
selected_plug, 202	process, 206
update_ramplen, 201	release, 206
update_selector_list, 201	vars, 206
use_own_ac, 202	analytic
amplitude	hilbert_shifter_t, 329
sine_cfg_t, 874	ang_name
analysemhaplugin.cpp, 931	acTransform_wave, 171
main, 931	acTransform_wave_config, 172
print_ac, 931	angle
strdom, 931	Complex arithmetics in the openMHA, 63
analysepath_t, 203	angle_ind
~analysepath_t, 203	steerbf, 892
ac_fifo, 204	angle_src
analysepath_t, 203	steerbf, 892
attr, 204	angles
cond_to_process, 204	doasvm_classification, 267
flag_terminate_inner_thread, 204	announce_port
has_inner_error, 204	mhaserver_t, 726
inner_ac_copy, 204	antialias
inner_error, 204	ds_t, 277
inner_input, 204	us_t, 912
inner_out_domain, 204	apply_gains
inner_process_wave2spec, 204	MHAOvlFilter::fftfb_t, 580
inner_process_wave2wave, 204	multibandcompressor::plugin_signals_t,
input_to_process, 204	812

aquire_mutex	name_, <mark>211</mark>
mha_fifo_posix_threads_t, 416	patchbay, 211
mha_fifo_thread_platform_t, 424	validate, 211
arg	value, 211
MHA_TCP::Thread, 452	AuditoryProfile::profile_t, 212
assign	get_ear, 212
•	L, 213
MHASignal::waveform_t, 781	R, 213
Vector and matrix processing toolbox, 48,	•
49	AuditoryProfile::profile_t::ear_t, 213
assign_channel	convert_empty2normal, 213
MHASignal::waveform_t, 781	HTL, 213
assign_frame	UCL, 213
MHASignal::waveform_t, 781	average
Async_Notify	coherence::vars_t, 228
MHA_TCP::Async_Notify, 432	avg_ipd
async_poll_msg	coherence::cohflt_t, 226
fw_t, 321	azimuth
async_read	mha_direction_t, 403
• —	
fw_t, 321	В
async_rmslevel_t	MHAFilter::filter_t, 497
MHASignal::async_rmslevel_t, 727	MHAFilter::iir_filter_t, 505
attack	b
cfg_t, 222	doasvm_classification, 267
dc::dc_t, 242	MHAParser::base_t::replace_t, 606
dc_simple::level_smoother_t, 258	<u> </u>
softclip_t, 881	B_ NALIA Filto vuodennileva handinaas t. 405
softclipper_t, 882	MHAFilter::complex_bandpass_t, 485
attr	MHAFilter::iir_ord1_real_t, 508
analysepath t, 204	b_check_version
MHAPlugin_Split::posix_threads_t, 709	PluginLoader::mhapluginloader_t, 848
· - · · ·	b_complex
auditory_profile.cpp, 932	acsave::save_var_t, 164
auditory_profile.h, 932	b_cont
AuditoryProfile, 80	acmon::acmon_t, 152
AuditoryProfile::fmap_t, 207	b est
get_frequencies, 207	lpc_bl_predictor_config, 367
get_values, 207	b_exit_request
isempty, 207	fw_t, 322
AuditoryProfile::parser_t, 208	b_flushed
get_current_profile, 209	acsave::acsave_t, 160
L, 209	
parser t, 209	b_fw_started
R, 209	io_parser_t, 342
•	b_is_input
AuditoryProfile::parser_t::ear_t, 209	calibrator_runtime_layer_t, 217
ear_t, 210	calibrator_t, 219
get_ear, 210	b_is_prepared
HTL, 210	PluginLoader::mhapluginloader_t, 848
UCL, 210	b_loop
AuditoryProfile::parser_t::fmap_t, 210	MHASignal::loop_wavefragment_t, 744
f, 211	b_ltg
fmap_t, 211	coherence::cohflt_t, 227
get_fmap, 211	b_prepared
٩٠٠-٠٠٠هام،	

acsave::acsave_t, 160	basename
io_file_t, 336	save_spec_t, 865
io_parser_t, 342	save_wave_t, 867
MHAJack::client_t, 562	shadowfilter_begin::shadowfilter_begin ←
mhachain::chain_base_t, 462	_t, 870
mhachain::plugs_t, 465	shadowfilter_end::shadowfilter_end_←
b_ready	t, 873
MHAJack::client_avg_t, 553	bass
b_record	plingploing::plingploing_t, 832
ac2osc_t, 139	bassmod
b_snapshot	plingploing::if_t, 830
acmon::acmon_t, 152	bassmod
b_starting	plingploing::plingploing_t, 833
io_parser_t, 342	bassperiod
b_stopped	plingploing::if_t, 831
io_parser_t, 342	bassperiod
MHAJack::client_avg_t, 553	plingploing::plingploing_t, 833
MHAJack::client_noncont_t, 555	bbcalib_interface_t, 214
b_use_clipping	~bbcalib interface t, 215
calibrator_runtime_layer_t, 217	bbcalib_interface_t, 215
b_use_fir	calib in, 215
calibrator_runtime_layer_t, 217	calib_out, 215
b_use_profiling	plugloader, 215
mhachain::plugs_t, 466	prepare, 215
BARKSCALE_ENTRIES	process, 215
mha_fftfb.cpp, 963	release, 215
blnvert	bbgain
coherence::cohflt_t, 227	gain::gain_if_t, 325
backward	beta
	ADM::ADM, 183
lpc_bl_predictor_config, 367 lpc_burglattice_config, 372	adm_if_t, 190
	 :
MHASignal::fft_t, 737	beta_const
backward_scale	timo_params, 904
MHASignal::fft_t, 737	timoSmooth, 910
band_weights	bf_src
dc::dc_vars_t, 245	steerbf, 892
bands	bf_src_copy
dc::wideband_inhib_vars_t, 249	steerbf_config, 893
MHAOvlFilter::fspacing_t, 589	bf_vec
bandw_correction	steerbf_config, 893
speechnoise.cpp, 1030	bflush
bark2hz_t	acsave::acsave_t, 160
MHAOvlFilter::barkscale::bark2hz_t, 577	bin1
bartlett	MHAOvlFilter::fftfb_t, 581
MHAWindow, 122	bin2
bartlett_t	MHAOvlFilter::fftfb_t, 581
MHAWindow::bartlett_t, 797	bin2freq
base_t	Vector and matrix processing toolbox, 44
MHAMultiSrc::base_t, 571	blackman
MHAParser::base_t, 600	MHAWindow, 123
MHAWindow::base_t, 798, 799	blackman_t

MHAWindow::blackman_t, 800	buffered_incoming_bytes
blockprocessing_polyphase_resampling_t	MHA_TCP::Connection, 440
MHAFilter::blockprocessing_polyphase ←	buffered_outgoing_bytes
_resampling_t, 481	MHA_TCP::Connection, 440
blocks	burn
droptect_t, 275	DynComp::dc_afterburn_rt_t, 279
bookkeeping	DynComp::dc_afterburn_t, 281
MHAFilter::partitioned_convolution_t, 520	multibandcompressor::interface_t, 811
MHAParser::mhapluginloader_t, 647	butter_stop_ord1
bool_mon_t	MHAFilter, 92
MHAParser::bool_mon_t, 607	bw MIIA OulFilterrife agle law 4 505
bool_t	MHAOvlFilter::fscale_bw_t, 585
MHAParser::bool_t, 610	MHAEiltor::gamma_flt_t_501
bpm " " " " " " " " " " " " " " " " " " "	MHAFilter::gamma_flt_t, 501 bw_generator
plingploing::if_t, 830	MHAFilter::thirdoctave_analyzer_t, 532
bprofiling	bw_hz
mhachain::chain_base_t, 462	MHAOvlFilter::fscale_bw_t, 585
bracket_balance	bw_name
MHAParser::StrCnv, 110	dc::dc_vars_t, 245
brown	bwv
speechnoise_t, 889	MHAOvlFilter::fftfb_ac_info_t, 579
browsemhaplugins.cpp, 932 DEBUG, 933	multibandcompressor::fftfb_plug_t, 809
main, 933	bypass
bt	adm_if_t, 190
plingploing::plingploing_t, 832	db_if_t, 237
buf	dc::dc_t, 242
ac2lsl::save_var_t, 133	dc::dc_vars_t, 245
ac2lsl::save_var_t< mha_complex_t >,	dc_simple::dc_vars_t, 256
135	DynComp::dc_afterburn_vars_t, 284
mha_fifo_t, 421	С
mha_spec_t, 430	ADM, 80
mha_wave_t, 460	C C
buf_c_in	acPooling_wave_config, 157
MHASignal::hilbert_fftw_t, 739	doasym_classification_config, 268
buf_c_out	io_tcp_sound_t::float_union, 356
MHASignal::hilbert_fftw_t, 739	nlms_t, 815
buf_in	prediction_error, 851
MHASignal::fft_t, 738	c1_a
buf_out	MHAFilter::o1_ar_filter_t, 511
MHASignal::fft_t, 738	c1_r
buf_r_in	MHAFilter::o1_ar_filter_t, 511
MHASignal::hilbert_fftw_t, 739	c2_a
buf_r_out	MHAFilter::o1_ar_filter_t, 511
MHASignal::hilbert_fftw_t, 739	c2_r
buf_uses_placement_new	MHAFilter::o1_ar_filter_t, 511
mha_fifo_t, 421	c_ifc_parser_t
buffer	MHAParser::c_ifc_parser_t, 612
MHASignal::delay_spec_t, 729	c_min
MHASignal::delay_t, 731	coherence::cohflt_t, 226
MHASignal::delay_wave_t, 732	c_parse_cmd

MHAParser::c_ifc_parser_t, 613	release, 218
c_parse_cmd_t	update, 219
MHAParser, 107	update_tau_level, 219
c_parse_err	vars, 219
MHAParser::c_ifc_parser_t, 613	calibrator_variables_t, 219
c_parse_err_t	calibrator_variables_t, 220
MHAParser, 107	config_parser, 220
c_scale	do_clipping, 220
coherence::cohflt_t, 226	fir, 220
CHANLOOP	fragsize, 220
timoconfig.cpp, 1034	nbits, 220
CHECK EXPR	num_channels, 220
mha_defs.h, 956	peaklevel, 220
CHECK_VAR	rmslevel, 220
mha_defs.h, 956	softclip, 220
cLTASS	spnoise_channels, 220
	sphoise_chainleis, 220
MHAOvlFilter::fftfb_ac_info_t, 579	sphoise_level, 220 sphoise_mode, 220
MHAOvlFilter::fftfb_vars_t, 584	• = '
calc_in	spnoise_parser, 220
wave2spec_t, 917	srate, 220
calc_out	tau_level, 220
overlapadd::overlapadd_t, 826	can_read
spec2wave_t, 887	MHAFilter::blockprocessing_polyphase ←
calc_pre_wnd	_resampling_t, 482
wave2spec_t, 916	can_read_bytes
calib_in	MHA_TCP::Connection, 438
bbcalib_interface_t, 215	can_read_line
calib_out	MHA_TCP::Connection, 438
bbcalib_interface_t, 215	can_sysread
calibrator_runtime_layer_t, 215	MHA_TCP::Connection, 436
b_is_input, 217	can_syswrite
b_use_clipping, 217	MHA_TCP::Connection, 436
b_use_fir, 217	can_update
calibrator_runtime_layer_t, 216	addsndfile::level_adapt_t, 177
fir, 216	fader_wave::level_adapt_t, 309
firfir2fftlen, 216	catch_condition
firfirlen, 216	MHAPlugin_Split::posix_threads_t, 709
gain, 216	catch_thread
pmode, 217	MHAPlugin_Split::dummy_threads_t, 705
process, 216	MHAPlugin_Split::posix_threads_t, 708
quant, 216	MHAPlugin_Split::thread_platform_t, 721
softclip, 216	categories
speechnoise, 217	plugindescription_t, 838
calibrator_t, 217	cdata
b_is_input, 219	MHASignal::matrix_t, 753
calibrator_t, 218	mha_audio_t, 395
patchbay, 219	center_frequencies
prepare, 218	dc::dc_vars_t, 245
prepared, 219	dc_simple::dc_if_t, 251
process, 218	cf
read_levels, 219	MHAFilter::thirdoctave_analyzer_t, 532

MHAOvlFilter::band_descriptor_t, 576	acsave::cfg_t, 161
MHAOvlFilter::fftfb_vars_t, 584	alpha, 222
mha_audio_descriptor_t, 394	attack, 222
plingploing::plingploing_t, 832	cfg_t, 221
cf2bands	channel, 222
MHAOvlFilter::fspacing_t, 589	decay, 222
cf_	frozen_noise_, 222
MHAFilter::gamma_flt_t, 501	gain_spec_, 222
wavwriter t, 920	gain_wave_, 222
cf generator	matrixmixer::cfg_t, 375
MHAFilter::thirdoctave_analyzer_t, 532	pos, 222
cf_h	process, 222
MHAOvIFilter::band_descriptor_t, 576	replace_, 222
cf_in	shadowfilter_begin::cfg_t, 868
overlapadd::overlapadd if t, 824	shadowliter_begincig_t, 800 shadowfilter_end::cfg_t, 871
• • = = •	
smoothgains_bridge::overlapadd_if_←	start_lin, 222
t, 878	use_frozen_, 222
cf_in_	cfin
MHAParser::mhapluginloader_t, 647	altplugs_t, 202
cf_input	fw_t, 322
PluginLoader::mhapluginloader_t, 848	mhachain::chain_base_t, 462
cf_l	route::interface_t, 859
MHAOvlFilter::band_descriptor_t, 576	cfout
cf_name	altplugs_t, 202
dc::dc_vars_t, 245	fw_t, 322
cf_out	mhachain::chain_base_t, 462
overlapadd::overlapadd_if_t, 824	route::interface_t, 859
smoothgains_bridge::overlapadd_if_↔	cfv
t, 878	MHAOvlFilter::fftfb_ac_info_t, 578
cf_out_	multibandcompressor::fftfb_plug_t, 809
MHAParser::mhapluginloader_t, 647	cg
cf_output	coherence::cohflt_t, 226
PluginLoader::mhapluginloader_t, 848	ch
cfac	MHASignal::doublebuffer_t, 735
route::interface_t, 859	chain
cfg	acmon::acmon_t, 152
MHAPlugin::config_t, 691	acsave::acsave_t, 160
cfg_	analysispath_if_t, 206
MHAFilter::thirdoctave_analyzer_t, 532	db_if_t, 237
cfg_chain	MHAPlugin_Resampling::resampling_if←
MHAPlugin::config_t, 691	_t, 697
cfg_chain_current	mhachain::chain_base_t, 462
MHAPlugin::config_t, 691	mhachain::plugs_t, 466
cfg_chain_t	chain_base_t
MHAPlugin::cfg_chain_t, 686	mhachain::chain_base_t, 461
cfg_dump	chains
MHAParser, 107	MHAPlugin_Split::split_t, 714
cfg_dump_short	change_mode
MHAParser, 107	addsndfile::addsndfile_if_t, 175
cfg_t, 221	channel
ac2lsl::cfg_t, 129	cfg_t, 222
5_ •	

example5_t, 302	matrixmixer::matmix_t, 377
MHAMultiSrc::channel_t, 571	cleanup_plugs
channel_gain_name	mhachain::plugs_t, 465
combc_if_t, 230	cleanup_unused_cfg
channel_gains_	MHAPlugin::config_t, 691
combc_t, 231	clear
channel_info	MHATableLookup::linear_table_t, 790
mha_spec_t, 430	MHATableLookup::table_t, 792
mha_wave_t, 460	MHATableLookup::xy_table_t, 795
channel_no	mha_fifo_t, 421
example6_t, 303	Vector and matrix processing toolbox, 48
channelconfig_out_	clear_chains
MHAOvlFilter::overlap_save_filterbank_t,	MHAPlugin_Split::split_t, 712
593	clear_plugins
channels	pluginbrowser_t, 837
ac2wave_t, 142	Client
addsndfile::addsndfile_if_t, 175	MHA_TCP::Client, 433
dc::wideband_inhib_vars_t, 249	client_avg_t
MHAFilter::fftfilter_t, 489	MHAJack::client_avg_t, 552
MHAFilter::filter_t, 498	client_noncont_t
MHAParser::mhaconfig_mon_t, 644	MHAJack::client_noncont_t, 555
MHAPlugin_Split::split_t, 713	client_t
MHASignal::delay_t, 731	MHAJack::client_t, 558
mhaconfig_t, 468	clientid
prediction_error_config, 854	dc::dc_vars_t, 245
rt_nlms_t, 862	dc_simple::dc_if_t, 251
sine_cfg_t, 874	clientname
sine_t, 876	MHAIOJack::io_jack_t, 539
testplugin::config_parser_t, 897	MHAIOJackdb::io_jack_t, 544
Vector and matrix processing toolbox, 41	clipmeter
channels_t	softclipper_t, 882
MHAMultiSrc::channels_t, 572	clipped
char_data	softclipper_variables_t, 884
testplugin::ac_parser_t, 895	close_session
chdir	wavwriter_t, 920
mha_audio_descriptor_t, 394	closed
check_index	MHA_TCP::Connection, 440
adm_rtconfig_t, 192	closesocket
check_low	mha_tcp.cpp, 996
MHAParser::range_var_t, 658	cmd_prepare
check_range	MHAIOPortAudio::io_portaudio_t, 549
MHAParser::range_var_t, 658	cmd_release
check_sound_data_type	MHAIOPortAudio::io_portaudio_t, 550
io_tcp_sound_t, 354	cmd_start
check_up	MHAIOPortAudio::io_portaudio_t, 549
MHAParser::range_var_t, 658	cmd_stop
chname	MHAIOPortAudio::io_portaudio_t, 549
dc::dc_vars_t, 245	СО
chunkbytes_in	matrixmixer::matmix_t, 377
io_tcp_sound_t, 354	coeff_decomb
ci	adm_if_t, 190

coeff_lp	tau, 228
adm_if_t, 190	tau_unit, 228
coh c	vars_t, 228
coherence::cohflt_t, 227	cohflt_if_t
coh_rlp	coherence::cohflt_if_t, 224
coherence::cohflt_t, 227	cohflt t
coherence, 80	coherence::cohflt_t, 226
getcipd, 81	collect result
coherence.cpp, 933	MHAPlugin_Split::split_t, 712
coherence::cohflt_if_t, 223	MHAPlugin_Split::splitted_part_t, 718
algo, 224	colored_intensity
cohflt_if_t, 224	Vector and matrix processing toolbox, 56
patchbay, 224	cols
prepare, 224	acsave::mat4head_t, 162
process, 224	combc_if_t, 229
release, 224	channel_gain_name, 230
update, 224	combc_if_t, 230
vars, 224	element_gain_name, 230
coherence::cohflt t, 225	interleaved, 230
alpha, 226	outchannels, 230
avg_ipd, 226	prepare, 230
b_ltg, 227	process, 230
blnvert, 227	combc_t, 230
c_min, 226	ac_, 231
c_scale, 226	channel_gains_, 231
cg, 226	combc_t, 231
coh_c, 227	element_gain_name_, 231
coh_rlp, 227	interleaved_, 231
cohflt_t, 226	nbands, 231
g, 226	process, 231
gain, 227	s_out, 231
gain_delay, 227	w out, 231
insert, 226	combinechannels.cpp, 933
limit, 226	comm_var_t, 232
lp1i, 226	data, 233
lp1ltg, 227	data_type, 232
lp1r, 226	num_entries, 232
nbands, 226	stride, 233
process, 226	commentate
s_out, 227	MHAParser, 107
staticgain, 227	commit
coherence::vars_t, 227	DynComp::dc_afterburn_vars_t, 284
alpha, 228	commit_pending
average, 228	DynComp::dc_afterburn_t, 282
delay, 228	commit_t
invert, 228	MHAParser::commit_t, 615
limit, 228	Communication between algorithms, 27
Itgcomp, 228	get_var_float, 29
Itgtau, 228	get_var_int, 29
mapping, 228	get_var_spectrum, 28
staticgain, 228	get_var_vfloat, 30

get_var_waveform, 29	the openMHA, 4
comp_each_iter	cond_to_process
lpc, 363	analysepath_t, 204
lpc_config, 373	config_file_splitter_t
comp_iter	PluginLoader::config_file_splitter_t, 839
lpc_config, 374	config_in
Complex arithmetics in the openMHA, 60	testplugin::if_t, 899
_conjugate, 67	config_out
_reciprocal, 68	testplugin::if_t, 899
abs, 66	config_parser
abs2, 66	calibrator_variables_t, 220
almost, 68	config_parser_t
angle, 63	testplugin::config_parser_t, 896
conjugate, 67	config_t
expi, 63, 65	MHAPlugin::config_t, 689
mha_complex, 62	configfile
normalize, 68	PluginLoader::config file splitter t, 840
operator!=, 67	configname
operator<, 68	PluginLoader::config_file_splitter_t, 840
operator*, 65, 66	configuration, 4
operator*=, 65	configuration variable, 4
operator+, 64	conflux
operator+=, 64	DynComp::dc_afterburn_rt_t, 280
operator-, 64, 65, 67	DynComp::dc_afterburn_vars_t, 284
operator-=, 64	conjugate
operator/, 66, 67	Complex arithmetics in the openMHA, 67
operator/=, 66	Vector and matrix processing toolbox, 59
operator==, 67	connect
reciprocal, 67	MHAEvents::emitter_t, 474
safe_div, 66	MHAEvents::patchbay_t, 475, 476
set, 62, 63	connect_input
stdcomplex, 63	MHAJack::client_t, 559
complex_bandpass_t	connect_output
MHAFilter::complex_bandpass_t, 484	MHAJack::client_t, 559
complex_data	connect_to
testplugin::ac_parser_t, 895	MHAJack::port_t, 565
complex_filter.cpp, 933	connected
complex_filter.h, 933	io_tcp_parser_t, 351
complex_mon_t	Connection
MHAParser::complex_mon_t, 616	MHA_TCP::Connection, 436
complex_ofs	connection_loop
MHASignal::matrix_t, 753	io_tcp_t, 358
complex_t	connections
MHAParser::complex_t, 618	MHAEvents::emitter_t, 474
compression	connections_in
dc_simple::dc_t, 253	MHAIOJack::io_jack_t, 539
compute_something	MHAIOJackdb::io_jack_t, 544
cpuload_t, 234	connections_out
compute_something_else	MHAIOJack::io_jack_t, 539
cpuload_t, 235	MHAIOJackdb::io_jack_t, 544
Concept of Variables and Data Exchange in	connector

MHAFilter::adapt_filter_t, 480	table, 235
MHAFilter::iir_filter_t, 505	use_sine, 235
MHAParser::mhapluginloader_t, 647	create_latex_doc
connector_base_t	generatemhaplugindoc.cpp, 943
MHAEvents::connector_base_t, 469	create_lock
connector_t	mhamain.cpp, 1020
MHAEvents::connector_t, 472	creator
cons	speechnoise_t, 890
MHAEvents::patchbay_t, 476	creator_A
consecutive_dropouts	MHAFilter::complex_bandpass_t, 484
droptect t, 275	creator_B
contained frames	MHAFilter::complex_bandpass_t, 484
MHASignal::ringbuffer_t, 758	cstr_strerror
conv2latex	mha_errno.c, 958
generatemhaplugindoc.cpp, 943	current
convert_empty2normal	altplugs_t, 202
AuditoryProfile::profile_t::ear_t, 213	dc::wideband_inhib_vars_t, 248
convert_f2logf	mha_rt_fifo_t, 429
gaintable.cpp, 942	current_input_signal_buffer_half_index
	MHAFilter::partitioned_convolution_t, 520
MHASignal::cnoctrum + 766	current_output_partition_index
MHASignal::spectrum_t, 766	MHAFilter::partitioned_convolution_t, 520
MHASignal::waveform_t, 782 timo_AC, 901	current_powspec
- :	droptect_t, 275
copy_AC	current_thread_priority
timoConfig, 906	MHAPlugin_Split::posix_threads_t, 708
copy_channel	current_thread_scheduler
MHASignal::spectrum_t, 767	MHAPlugin_Split::posix_threads_t, 708
MHASignal::waveform_t, 782	
Vector and matrix processing toolbox, 55	DEBUG
copy_error	addsndfile.cpp, 929
MHAIOTCP.cpp, 1016	browsemhaplugins.cpp, 933
copy_from_at	fader_wave.cpp, 941
MHASignal::waveform_t, 782	MHAIOFile.cpp, 1001
copy_output_spec	wavrec.cpp, 1037
MHAPlugin_Split::split_t, 712	DEFAULT_RETSIZE
copy_output_wave	mha_parser.hh, 977
MHAPlugin_Split::split_t, 712	DELAY_FREQ
copy_permuted	ADM, 80
MHASignal, 120	DO_RESAMPLE
corr_out	addsndfile, 78
lpc_config, 374	DONT_RESAMPLE_PERMISSIVE
cpuload.cpp, 934	addsndfile, 78
cpuload_t, 233	DONT_RESAMPLE_STRICT
compute_something, 234	addsndfile, 78
compute_something_else, 235	DUPVEC
cpuload_t, 234	dc.cpp, 935
factor, 235	data
phase, 235	acsave::save_var_t, 164
prepare, 234	comm_var_t, 233
process, 234	DynComp::gaintable_t, 289
result, 235	MHA_AC::acspace2matrix_t, 384

MHA_AC::double_t, 385 MHA_AC::float_t, 386	process, 236 release, 236
MHA_AC::int_t, 387	db_t, 237
MHAParser::bool_mon_t, 608	db_t, 238
MHAParser::bool_t, 610	inner_process, 238
MHAParser::complex_mon_t, 617	plugloader, 238
MHAParser::complex_t, 619	dbspl2pa
MHAParser::float_mon_t, 622	Vector and matrix processing toolbox, 43
MHAParser::float_t, 625	DC
MHAParser::int_mon_t, 627	dc_simple, 82
MHAParser::int_t, 629	dc, 81
MHAParser::kw_t, 635	get_audiochannels, 81
MHAParser::mcomplex_mon_t, 636	dc.cpp, 934
MHAParser::mcomplex_t, 638	DUPVEC, 935
MHAParser::mfloat_mon_t, 640	dc::dc_if_t, 239
MHAParser::mfloat t, 643	algo, 240
MHAParser::mint mon t, 649	dc_if_t, 240
MHAParser::string mon t, 660	patchbay, 240
MHAParser::string_t, 662	prepare, 240
MHAParser::vcomplex_mon_t, 667	process, 240
MHAParser::vcomplex_t, 669	update, 240
MHAParser::vfloat_mon_t, 671	update_monitors, 240
— — — ·	• —
MHAParser::vfloat_t, 674	wbinhib, 240
MHAParser::vint_mon_t, 675	dc::dc_t, 241
MHAParser::vint_t, 678	attack, 242
MHAParser::vstring_mon_t, 679	bypass, 242
MHAParser::vstring_t, 681	dc_t, 242
MHAPlugin::cfg_chain_t, 686	decay, 242
MHASignal::uint_vector_t, 774	explicit_insert, 242
mha_rt_fifo_element_t, 426	get_level_in_db, 242
wavwriter_t, 920	get_level_in_db_adjusted, 242
data_is_initialized	get_nbands, 242
MHAParser::base_t, 605	gt, 242
data_type	inhib_gain, 243
comm_var_t, <mark>232</mark>	k_nyquist, <mark>243</mark>
testplugin::ac_parser_t, 895	level_in_db, 243
data_type_t	level_in_db_adjusted, 243
testplugin::ac_parser_t, 895	max_level_difference, 243
db.cpp, 934	naudiochannels, 243
db2lin	nbands, 243
Vector and matrix processing toolbox, 42	powersum, 242
db_if_t, 235	process, 242
~db_if_t, 236	rmslevel, 242
algo, 237	de::de vars t, 243
bypass, 237	band_weights, 245
chain, 237	bw_name, 245
db_if_t, 236	bypass, 245
fragsize, 237	center_frequencies, 245
patchbay, 237	cf_name, 245
plugloader, 237	_
	chname, 245
prepare, 236	clientid, 245

dc_vars_t, 244	dc::dc_if_t, 240
edge_frequencies, 245	dc_simple::dc_if_t, 250
ef_name, 245	dc_simple, 81
filterbank, 245	DC, 82
filtered_level, 245	force_resize, 82
gainrule, 245	LEVEL, 82
gtdata, 244	not_zero, 82
gtmin, 244	test_fail, 82
gtstep, 244	dc simple.cpp, 936
input_level, 245	dc_simple::dc_if_t, 249
• —	
max_level_difference, 245	center_frequencies, 251
modified, 245	clientid, 251
powersum, 244	dc_if_t, 250
preset, 245	edge_frequencies, 251
tauattack, 244	filterbank, 251
taudecay, 245	gainrule, 251
taurmslevel, 244	has_been_modified, 251
use_wbinhib, 245	modified, 251
dc::dc vars validator t, 246	mon_g, <mark>251</mark>
dc_vars_validator_t, 246	mon_l, 251
dc::wb_inhib_cfg_t, 246	patchbay, 251
dl_diff, 247	prepare, 250
dl_map_max, 247	prepared, 251
dl_map_min, 247	preset, 251
g_scale, 247	process, 250, 251
J min, 247	•
	read_modified, 251
wb_inhib_cfg_t, 247	release, 250
weights, 247	update_dc, 251
dc::wideband_inhib_vars_t, 247	update_gain_mon, 251
bands, 249	update_level, 251
channels, 249	update_level_mon, 251
current, 248	dc_simple::dc_t, 252
dl_map_max, 248	compression, 253
dl_map_min, 248	dc_t, 253
g_scale, 248	expansion, 253
I_min, 248	expansion_threshold, 253
patchbay, 249	limiter, 253
setchannels, 248	limiter_threshold, 253
update, 248	maxgain, <mark>253</mark>
weights, 248	mon_g, <mark>253</mark>
wideband_inhib_vars_t, 248	mon_I, 253
dc_afterburn.cpp, 935	nbands, 253
mylogf, 935	process, 253
dc_afterburn.h, 935	dc_simple::dc_t::line_t, 254
dc_afterburn_rt_t	line_t, 254
	- '
DynComp::dc_afterburn_rt_t, 279	m, 254
dc_afterburn_t	operator(), 254
DynComp::dc_afterburn_t, 281	y0, 254
dc_afterburn_vars_t	dc_simple::dc_vars_t, 255
DynComp::dc_afterburn_vars_t, 284	bypass, 256
dc_if_t	dc_vars_t, 255

expansion_slope, 256	default_thread_platform_string
expansion_threshold, 256	split.cpp, 1032
g50, <mark>255</mark>	default_thread_platform_type
g80, <mark>255</mark>	split.cpp, 1032
limiter_threshold, 256	defaultHighInputLatency
maxgain, 255	MHAIOPortAudio::device_info_t, 547
tauattack, 256	defaultHighOutputLatency
taudecay, 256	MHAIOPortAudio::device_info_t, 547
dc_simple::dc_vars_validator_t, 256	defaultLowInputLatency
dc_vars_validator_t, 257	MHAIOPortAudio::device_info_t, 547
dc_simple::level_smoother_t, 257	defaultLowOutputLatency
attack, 258	MHAIOPortAudio::device_info_t, 547
decay, 258	defaultSampleRate
fftlen, 258	MHAIOPortAudio::device_info_t, 547
level_smoother_t, 258	Delay
level_spec, 258	ADM::Delay, 184
level_wave, 258	delay, 82
nbands, 258	coherence::vars_t, 228
process, 258	delaysum::delaysum_if_t, 262
dc_t	MHAFilter::gamma_flt_t, 500
dc::dc_t, 242	MHAFilter::partitioned_convolution_t↔
dc_simple::dc_t, 253	::index_t, 522
dc_vars_t	MHAPlugin_Split::split_t, 714
dc::dc_vars_t, 244	MHASignal::delay_spec_t, 729
dc_simple::dc_vars_t, 255	MHASignal::delay_wave_t, 732
dc_vars_validator_t	mha_dblbuf_t, 402
dc::dc_vars_validator_t, 246	delay.cpp, 936
dc_simple::dc_vars_validator_t, 257	delay::interface_t, 259
deallocate_domains	delays, 260
MHAPlugin_Split::domain_handler_t, 702	interface_t, 260
debug	patchbay, 260
io_tcp_parser_t, 351	prepare, 260
debug_file	process, 260
io_tcp_parser_t, 352	update, 260
debug_filename	delay_ac
io_tcp_parser_t, 352	ac2wave_if_t, 141
decay	ac2wave_t, 143
cfg_t, 222	delay_d
dc::dc_t, 242	prediction_error, 852
dc_simple::level_smoother_t, 258	delay_in
softclip_t, 881	ac2wave_if_t, 141
softclipper_t, 882	ac2wave_t, 143
decomb_coeffs	delay_spec_t
adm_rtconfig_t, 193	MHASignal::delay_spec_t, 729
decomb_order	delay_t
adm_if_t, 190	MHASignal::delay_t, 730
decrease_condition	delay_w
mha_fifo_posix_threads_t, 417	prediction_error, 852
decrement	delay_wave_t
mha_fifo_posix_threads_t, 416	MHASignal::delay_wave_t, 732
mha_fifo_thread_platform_t, 424	delays

delay::interface_t, 260	diff t
MHASignal::delay_t, 731	MHAFilter::diff_t, 486
delays_in	digits
MHAIOJack::io_jack_t, 539	mha_error_helpers, 86
delays_out	dimension
MHAIOJack::io_jack_t, 540	MHASignal::matrix_t, 749
delaysum, 82	dimensions
delaysum.cpp, 937	acmon::acmon t, 152
delaysum::delaysum_if_t, 260	dimstr
delay, 262	acmon::ac_monitor_t, 149
delaysum_if_t, 262	dir
patchbay, 263	mha_channel_info_t, 396
prepare, 262	dir_t
process, 262	MHAJack::port_t, 563
release, 262	dir_type
update cfg, 262	MHAJack::port_t, 565
weights, 262	discard
delaysum::delaysum t, 263	MHASignal::ringbuffer_t, 759
delaysum_t, 264	disconnect
out, 264	MHAEvents::emitter_t, 474
process, 264	dispmode
weights, 264	acmon::acmon_t, 152
delaysum_if_t	dist
delaysum::delaysum_if_t, 262	plingploing::plingploing_t, 833
delaysum_t	dist1
delaysum::delaysum_t, 264	plingploing::plingploing_t, 833
delete_plug	distance
altplugs_t, 202	mha_direction_t, 404
delta_pitch	distances
timo_params, 904	adm if t, 190
timoSmooth, 910	dl diff
descriptor	dc::wb_inhib_cfg_t, 247
mha_audio_t, 395	dl_map_max
desired_fill_count	dc::wb_inhib_cfg_t, 247
mha_drifter_fifo_t, 408	dc::wideband_inhib_vars_t, 248
device_index	dl_map_min
MHAIOPortAudio::io_portaudio_t, 550	dc::wb_inhib_cfg_t, 247
device_index_updated	dc::wideband_inhib_vars_t, 248
MHAIOPortAudio::io_portaudio_t, 549	dm
device_info	lpc_burglattice_config, 372
MHAIOPortAudio::io_portaudio_t, 550	do_clipping
device_info_t	calibrator_variables_t, 220
MHAIOPortAudio::device_info_t, 547	do_get_var
device_name	testplugin::ac_parser_t, 895
MHAIOPortAudio::io_portaudio_t, 550	do_insert_var
device_name_updated	testplugin::ac_parser_t, 895
MHAIOPortAudio::io_portaudio_t, 549	doagcc
df	doasym_feature_extraction_config, 272
frequency_translator_t, 316	doasvm
diff_coeffs	doasvm_classification_config, 268
mha_filter.cpp, 965	doasvm_classification, 265

\sim doasvm_classification, 266	G_length, 272
angles, 267	GCC_end, 272
b, 267	GCC_start, 272
doasvm_classification, 266	hifftwin, 272
max_p_ind_name, 267	hifftwin_sum, 272
p_name, 267	hwin, 272
patchbay, 267	ifft, 272
prepare, 266	in_spec, 272
process, 266	proc_wave, 272
release, 266	process, 272
update_cfg, 267	vGCC_ac, 272
vGCC_name, 267	vGCC, 272
w, 267	wndlen, 272
x, 267	doc_appendix.h, 938
y, 267	doc_examples.h, 938
doasym classification.cpp, 937	doc_frameworks.h, 938
INSERT PATCH, 937	doc_general.h, 938
PATCH VAR, 937	doc_kernel.h, 938
doasym_classification.h, 937	doc_matlab.h, 938
doasym_classification_config, 267	doc_mhamain.h, 938
~doasym_classification_config, 268	doc_parser.h, 938
ac, 268	doc_plugif.cpp, 938
c, 268	doc_plugins.h, 938
	doc_system.h, 938
doasym, classification, config. 268	— ·
doasvm_classification_config, 268	doc_toolbox.h, 938 documentation
p, 268	
p_max, 268	plugindescription_t, 838
process, 268	domain
doasym_feature_extraction, 269	MHAParser::mhaconfig_mon_t, 644
~doasym_feature_extraction, 270	MHAPlugin_Split::splitted_part_t, 718
doasym_feature_extraction, 270	mhaconfig_t, 468
fftlen, 271	testplugin::config_parser_t, 897
max_lag, 271	domain_handler_t
nupsample, 271	MHAPlugin_Split::domain_handler_t, 701
patchbay, 271	double_t
prepare, 270	MHA_AC::double_t, 385
process, 270	doublebuffer_t
release, 270	MHASignal::doublebuffer_t, 733
update_cfg, 271	down
vGCC_name, 271	MHASignal::schroeder_t, 762
doasvm_feature_extraction.cpp, 937	downsample.cpp, 938
INSERT_PATCH, 938	downsampling_factor
PATCH_VAR, 938	MHAFilter::polyphase_resampling_t, 526
doasvm_feature_extraction.h, 938	downscale
doasvm_feature_extraction_config, 271	MHASignal::quantizer_t, 756
~doasvm_feature_extraction_config, 272	dphi
doagcc, 272	hilbert_shifter_t, 329
doasvm_feature_extraction_config, 272	drain
fft, 272	DynComp::dc_afterburn_vars_t, 284
fftlen, 272	drain_inv
G, 272	DynComp::dc_afterburn_rt_t, 280

drand	Vector and matrix processing toolbox, 46
plingploing, 124	dur_
dropouts	plingploing::plingploing_t, 832
droptect_t, 275	DynComp, 83
droptect.cpp, 939	interp1, 83
droptect_t, 273	interp2, 84
blocks, 275	DynComp::dc_afterburn_rt_t, 278
consecutive_dropouts, 275	burn, 279
current_powspec, 275	conflux, 280
dropouts, 275	dc_afterburn_rt_t, 279
droptect_t, 274	drain_inv, 280
filter_activated, 275	lp, 280
filtered_powspec, 275	maxgain, 280
filtered_powspec_mon, 275	mpo_inv, 280
level_mon, 275	DynComp::dc_afterburn_t, 280
period, 275	_cf, 282
prepare, 274	_ channels, 282
process, 274	_srate, 282
release, 274	burn, 281
reset, 275	commit_pending, 282
tau, 275	dc_afterburn_t, 281
threshold, 275	fb_pars_configured, 282
ds_t, 276	patchbay, 282
antialias, 277	set_fb_pars, 281
ds_t, 276	unset_fb_pars, 281
prepare, 277	update, 282
process, 277	update_burner, 281
ratio, 277	DynComp::dc_afterburn_vars_t, 282
release, 277	bypass, 284
dt	commit, 284
mha_audio_descriptor_t, 394	conflux, 284
dtime	dc_afterburn_vars_t, 284
MHA_TCP, 89	drain, 284
dummy_interface_test	f, 284
MHAIOFile.cpp, 1001, 1002	maxgain, 284
MHAIOJack.cpp, 1004, 1005	mpo, 284
MHAIOJackdb.cpp, 1006, 1007	taugain, 284
MHAIOParser.cpp, 1009, 1010	DynComp::gaintable_t, 284
MHAIOPortAudio.cpp, 1012, 1013	~gaintable_t, 287
MHAIOTCP.cpp, 1015, 1016	data, 289
dummy_jack_proc_cb	gaintable_t, 286
mhajack.cpp, 1017	get_gain, 287, 288
dummy_threads_t	get_iofun, 288
MHAPlugin_Split::dummy_threads_t, 705	get_vF, 288
dump_mha	get_vL, 288
fw_t, 321	nbands, 288
dup	nchannels, 288
MHAFilter::thirdoctave_analyzer_t, 532	num_channels, 288
dupvec	num_F, 288
Vector and matrix processing toolbox, 45	num_L, 288
dupvec_chk	update, 287
· —	

vFlog, 289	ef
vF, 289	MHAOvlFilter::fftfb_vars_t, 584
vL, 288	ef2bands
dynamiclib_t, 277	MHAOvlFilter::fspacing_t, 589
~dynamiclib_t, 278	ef_h
dynamiclib_t, 278	MHAOvlFilter::band_descriptor_t, 576
fullname, 278	ef_l
getmodulename, 278	MHAOvIFilter::band descriptor t, 576
getname, 278	ef name
h, 278	dc::dc_vars_t, 245
modulename, 278	efv
resolve, 278	MHAOvlFilter::fftfb_ac_info_t, 578
resolve_checked, 278	multibandcompressor::fftfb_plug_t, 809
1000110_0110011001, 270	,,
EPSILON	element_gain_name
lpc_bl_predictor.h, 947	combc_if_t, 230
lpc_burg-lattice.h, 947	element_gain_name_
timoconfig.cpp, 1034	combc_t, 231
EPrew	elevation
prediction_error_config, 855	mha_direction_t, 403
ERR IHANDLE	emit_event
MHAIOFile.cpp, 1001	MHAEvents::connector_base_t, 470
MHAIOJack.cpp, 1003	MHAEvents::connector_t, 472
MHAIOJackdb.cpp, 1006	emitter
MHAIOParser.cpp, 1009	MHAEvents::connector_t, 473
MHAIOPortAudio.cpp, 1012	emitter_die
MHAIOTCP.cpp, 1015	MHAEvents::connector_base_t, 470
ERR SUCCESS	emitter_is_alive
MHAIOFile.cpp, 1001	MHAEvents::connector_base_t, 470
MHAIOJack.cpp, 1003	empty_string
MHAIOJackdb.cpp, 1006	MHAParser::keyword_list_t, 632
MHAIOParser.cpp, 1009	end_time
MHAIOPortAudio.cpp, 1012	MHA_TCP::Timeout_Event, 454
MHAIOTCP.cpp, 1015	entries
ERR_USER	MHAParser::keyword_list_t, 632
MHAIOFile.cpp, 1001	MHAParser::parser_t, 655
MHAIOJack.cpp, 1003	entry
MHAIOJackdb.cpp, 1006	MHAParser::entry_t, 619
MHAIOParser.cpp, 1009	entry_map_t
• • •	MHAParser, 107
MHAIOPortAudio.cpp, 1012	entry_t
MHAIOTCP.cpp, 1015	MHAParser::entry_t, 619
ESTIM_CUR	envelope_delay
nlms_wave.cpp, 1023	• — •
ESTIM_PREV	MHAFilter::gamma_flt_t, 501
nlms_wave.cpp, 1023	envreplace
ESTIMATION_TYPES	MHAParser, 108
nlms_wave.cpp, 1023	eof
ear_t	MHA_TCP::Connection, 437
AuditoryProfile::parser_t::ear_t, 210	epsilon
edge_frequencies	smoothgains_bridge::overlapadd_if_
dc::dc_vars_t, 245	t, 878
dc_simple::dc_if_t, 251	equal_dim

Vector and matrix processing toolbox, 46,	release, 290 example2.cpp, 939
equidist2bands	example2 t, 291
MHAOvIFilter::fspacing_t, 589	example2_t, 293
erb_hz_f_hz	factor, 294
speechnoise.cpp, 1030	prepare, 293
err_in	process, 293
MHAFilter::adapt_filter_param_t, 477	release, 293
MHAFilter::adapt_filter_t, 480	scale_ch, 294
error	example3.cpp, 939
MHA TCP::Thread, 453	example3_t, 294
mha_fifo_lw_t, 415	example3_t, 296
Error handling in the openMHA, 31	factor, 297
MHA_ErrorMsg, 31	on_prereadaccess, 296
MHA_assert, 32	on_scale_ch_readaccess, 296
MHA_assert_equal, 32	on_scale_ch_valuechanged, 296
mha_debug, 32	on_scale_ch_writeaccess, 296
errorlog	patchbay, 297
fw_t, 321	prepare, 296
estimateDebug	prepared, 297
noisePowProposedScale::noisePow←	process, 297
Proposed, 821	release, 297
estimtype	scale_ch, 297
nlms_t, 815	example4.cpp, 939
event_add_plug	example4_t, 298
altplugs_t, 201	example4_t, 299
event_delete_plug	factor, 301
altplugs_t, 201	on_prereadaccess, 300
event_select_plug	on_scale_ch_readaccess, 300
altplugs_t, 201	on scale ch valuechanged, 300
event_set_plugs	on_scale_ch_writeaccess, 300
altplugs_t, 201	patchbay, 301
event_start_recording	prepare, 300
acsave::acsave_t, 160	prepared, 301
event_stop_and_flush	process, 300
acsave::acsave_t, 160	release, 300
eventhandler	scale_ch, 301
MHAEvents::connector_t, 473	example5.cpp, 939
eventhandler_s	declspec, 940
MHAEvents::connector_t, 473	example5_t, 301
eventhandler_suu	channel, 302
MHAEvents::connector_t, 473	example5_t, 302
Events	process, 302
MHA_TCP::Event_Watcher, 442	scale, 302
events	example6.cpp, 940
MHA_TCP::Event_Watcher, 442	declspec, 940
example1.cpp, 939	example6_t, 302
example1_t, 289	channel_no, 303
example1_t, 290	example6_t, 303
prepare, 290	patchbay, 303
process, 291	prepare, 303

	FINIOLIED
process, 303	FINISHED
rmsdb, 303	MHA_TCP::Thread, 451
update_cfg, 303	FMTsz
exec_fw_command	mha_os.h, 971
fw_t, 320	factor
exit_on_stop	cpuload_t, 235
fw_t, 321	example2_t, 294
exit_request	example3_t, 297
fw_t, 319	example4_t, 301
expansion	plugin_interface_t, 836
dc_simple::dc_t, 253	fader_if_t, 304
expansion_slope	actgains, 305
dc_simple::dc_vars_t, 256	fader_if_t, 305
expansion_threshold	newgains, 305
dc_simple::dc_t, 253	patchbay, 305
dc_simple::dc_vars_t, 256	prepare, 305
expflt	process, 305
MHAOvlFilter::ShapeFun, 103	tau, 305
expi	update_cfg, 305
Complex arithmetics in the openMHA, 63,	fader_spec.cpp, 940
65	fader wave, 84
explicit_insert	level_adaptor, 85
dc::dc_t, 242	fader_wave.cpp, 940
export_to	DEBUG, 941
MHASignal::spectrum_t, 767	fader_wave::fader_wave_if_t, 306
MHASignal::waveform_t, 783	fader_wave_if_t, 307
expression_t, 304	gain, 307
MHAParser::expression_t, 620	patchbay, 307
extern_connector	prepare, 307
MHAParser::commit_t, 615	prepared, 307
_	process, 307
F	ramplen, 307
prediction_error_config, 854	release, 307
rt_nlms_t, 862	set_level, 307
f A III D III	fader_wave::level_adapt_t, 308
AuditoryProfile::parser_t::fmap_t, 211	can_update, 309
DynComp::dc_afterburn_vars_t, 284	get level, 309
io_tcp_sound_t::float_union, 356	ilen, 309
MHAOvIFilter::fftfb_vars_t, 583	I_new, 309
MHAOvlFilter::fscale_t, 587	I_old, 309
f0_high	level_adapt_t, 308
timo_params, 904	
timoSmooth, 910	pos, 309
f0_low	update_frame, 309
timo_params, 904	wnd, 309
timoSmooth, 910	fader_wave_if_t
F_Uflt	fader_wave::fader_wave_if_t, 307
prediction_error_config, 854	fail_on_async_jackerr
f_est	MHAIOJackdb::io_jack_t, 544
lpc_bl_predictor_config, 367	fail_on_async_jackerror
f_hz	MHAIOJackdb::io_jack_t, 543
MHAOvIFilter::fscale_t, 587	MHAJack::client_t, 562

fail_on_nonmonotonic	fftfb_t
MHAOvlFilter::fftfb_vars_t, 584	MHAOvlFilter::fftfb_t, 580
fail_on_nonmonotonic_cf	fftfb_vars_t
MHAOvlFilter::fspacing_t, 589	MHAOvlFilter::fftfb_vars_t, 583
fail_on_unique_bins	fftfilter_t
MHAOvlFilter::fftfb_vars_t, 584	MHAFilter::fftfilter_t, 487
fail_on_unique_fftbins	fftfilterbank, 85
MHAOvlFilter::fspacing_t, 589	fftfilterbank.cpp, 941
fallback_spec	fftfilterbank::fftfb_interface_t, 309
altplugs_t, 202	algo, 312
fallback_wave	fftfb_interface_t, 310
altplugs_t, 202	nbands, 312
Fast Fourier Transform functions, 70	nchannels, 312
mha_fft_backward, 74	patchbay, 312
mha_fft_backward_scale, 75	prepare, 310
mha_fft_forward, 74	prepared, 312
mha_fft_forward_scale, 75	process, 312
mha_fft_free, 71	release, 312
mha_fft_new, 71	return_imag, 312
mha_fft_spec2wave, 73	update_cfg, 312
mha fft spec2wave scale, 76	fftfilterbank::fftfb_plug_t, 313
mha_fft_t, 71	fb_acinfo, 314
mha_fft_wave2spec, 72	fftfb_plug_t, 314
mha_fft_wave2spec_scale, 75	imag, 314
fatallog	insert, 314
fw_t, 321	process, 314
fb	return_imag_, 314
MHAFilter::thirdoctave_analyzer_t, 533	s_out, 314
fb_acinfo	fftfilterbank t
fftfilterbank::fftfb_plug_t, 314	MHAFilter::fftfilterbank t, 491
fb_pars_configured	fftlen
DynComp::dc_afterburn_t, 282	dc_simple::level_smoother_t, 258
fd	doasvm_feature_extraction, 271
MHA_TCP::Connection, 440	doasvm_feature_extraction_config, 272
MHA_TCP::OS_EVENT_TYPE, 443	MHAFilter::fftfilter_t, 489
fft	MHAFilter::fftfilterbank_t, 493
doasvm_feature_extraction_config, 272	MHAFilter::smoothspec_t, 531
MHAFilter::fftfilter t, 490	MHAOvlFilter::fftfb_t, 581
MHAFilter::fftfilterbank_t, 494	MHAOvlFilter::overlap save filterbank
MHAFilter::partitioned_convolution_t, 521	t::vars_t, 594
MHAFilter::smoothspec_t, 531	MHAParser::mhaconfig_mon_t, 644
overlapadd::overlapadd_t, 825	mhaconfig_t, 468
fft_t	rmslevel t, 857
MHASignal::fft_t, 736	testplugin::config_parser_t, 897
fftfb_ac_info_t	timoConfig, 906
MHAOvlFilter::fftfb_ac_info_t, 578	fftw_plan_fft
fftfb_interface_t	MHASignal::fft_t, 738
fftfilterbank::fftfb_interface_t, 310	fftw_plan_ifft
fftfb_plug_t	MHASignal::fft_t, 738
fftfilterbank::fftfb_plug_t, 314	fftw_plan_spec2wave
multibandcompressor::fftfb_plug_t, 809	MHASignal::fft_t, 738

fftw. plan. wava2cnoo	mha_fftfb.cpp, 963
fftw_plan_wave2spec MHASignal::fft_t, 738	fir
fhz2bandno	calibrator_runtime_layer_t, 216
	— — - • - -
speechnoise.cpp, 1030 fifo	calibrator_variables_t, 220 firchannels
wavwriter_t, 920	MHAFilter::fftfilterbank_t, 493
fifo_size	firfir2fftlen
mha_dblbuf_t, 402	calibrator_runtime_layer_t, 216
fifolen	firfirlen
analysispath_if_t, 206	calibrator_runtime_layer_t, 216
wavrec_t, 919	flag_terminate_inner_thread
fileformat	analysepath_t, 204
acsave::acsave_t, 160	flags
filename	MHAJack::client_t, 562
addsndfile::addsndfile_if_t, 175	float_data
filename_input	testplugin::ac_parser_t, 895
io_file_t, 335	float_mon_t
filename_output	MHAParser::float_mon_t, 621
io_file_t, 335	float_t
fill_info	MHA_AC::float_t, 386
MHAIOPortAudio::device_info_t, 547	MHAParser::float_t, 624
filled	flush_data
MHASignal::async_rmslevel_t, 728	acsave::cfg_t, 161
filter	fmap_t
MHAFilter::adapt_filter_state_t, 478	AuditoryProfile::parser_t::fmap_t, 211
MHAFilter::adapt_filter_t, 479	fmax
MHAFilter::complex_bandpass_t, 484,	frequency_translator_t, 316
485	fmin
MHAFilter::fftfilter_t, 488, 489	frequency_translator_t, 316
MHAFilter::fftfilterbank_t, 492, 493	fname
MHAFilter::filter_t, 496, 497	acsave::acsave_t, 160
MHAFilter::iir_filter_t, 504	for_each
filter_activated	Vector and matrix processing toolbox, 42
droptect_t, 275	force_remove_item
filter_analytic	MHAParser::parser_t, 653
MHAOvlFilter::overlap_save_filterbank_←	force_resize
analytic_t, 591	dc_simple, 82
filter_partitions	forward
MHAFilter::partitioned_convolution_t, 519	lpc_bl_predictor_config, 367
filter_t	lpc_burglattice_config, 371
MHAFilter::filter_t, 495, 496	MHASignal::fft_t, 736
filterbank	forward_scale
dc::dc_vars_t, 245	MHASignal::fft_t, 737
dc_simple::dc_if_t, 251	fr
filtered level	spec_fader_t, 888
dc::dc_vars_t, 245	frag_out
filtered_powspec	MHAJack::client_avg_t, 553
droptect_t, 275	MHAJack::client_noncont_t, 556
filtered_powspec_mon	fragsize
droptect_t, 275	analysispath_if_t, 206
filtershapefun	calibrator_variables_t, 220
·	<u> </u>

db_if_t, 237	frequency_response
io_file_t, 335	MHAFilter::partitioned_convolution_t, 520
io_parser_t, 342	frequency_translator_t, 315
io_tcp_sound_t, 355	df, 316
MHAFilter::fftfilter_t, 489	fmax, 316
MHAFilter::fftfilterbank_t, 493	fmin, 316
MHAFilter::partitioned_convolution_t, 519	frequency_translator_t, 316
MHAFilter::resampling_filter_t, 528	irslen, 316
MHAIOPortAudio::io_portaudio_t, 550	patchbay, 316
MHAJack::client_t, 561	phasemode, 316
MHAParser::mhaconfig_mon_t, 644	prepare, 316
MHAPlugin_Resampling::resampling_if←	process, 316
_t, 697	release, 316
mhaconfig_t, 468	update, 316
testplugin::config_parser_t, 897	front_channel
fragsize_in	adm_rtconfig_t, 193
MHAFilter::blockprocessing_polyphase←	front_channels
_resampling_t, 482	adm_if_t, 190
fragsize_out	adm_rtconfig_t, 193
MHAFilter::blockprocessing_polyphase ←	frozen_noise_
_resampling_t, 482	cfg_t, 222
fragsize_ratio	frozennoise_length
MHAIOJackdb::io_jack_t, 544	noise_t, 817
fragsize_validator	fs
MHAFilter::resampling_filter_t, 528	MHAFilter::o1_ar_filter_t, 511
frame	fs
MHA_AC::acspace2matrix_t, 384	MHAOvIFilter::fspacing_t, 589
framecnt	fscale
acsave::save_var_t, 164	MHAOvIFilter::fftfb_vars_t, 583
frameno	fscale_bw_t
MHA_AC::acspace2matrix_t, 384	MHAOvlFilter::fscale_bw_t, 585
noisePowProposedScale::noisePow⇔	fscale_t
Proposed, 821	MHAOvlFilter::fscale_t, 587
framerate	fshift_hilbert.cpp, 941
ac2osc t, 139	fspacing_t
frames	MHAOvIFilter::fspacing_t, 589
ac2wave_t, 142	ft
prediction error config, 853	spec2wave_t, 886
rt nlms t, 862	wave2spec_t, 916
frameshift	ftype
hilbert_shifter_t, 329	MHAOvlFilter::fftfb vars t, 583
framework thread priority	fu
MHAPlugin_Split::split_t, 714	
framework thread_scheduler	rt_nlms_t, 863
— — — — — — — — — — — — — — — — — — —	fu_previous
MHAPlugin_Split::split_t, 713	rt_nlms_t, 863
freq	fuflt
plingploing::plingploing_t, 832	rt_nlms_t, 863
freq2bin	fullname
Vector and matrix processing toolbox, 44	dynamiclib_t, 278
frequency	MHAParser::base_t, 604
sine_t, 876	plugindescription_t, 838

fullspec	errorlog, 321
hilbert_shifter_t, 329	exec_fw_command, 320
fun1	exit_on_stop, 321
plingploing::plingploing_t, 833	exit_request, 319
fun1_key	fatallog, 321
plingploing::if_t, 830	fw_cmd, 321
plingploing::plingploing_t, 833	fw_exiting, 319
fun1_range	fw running, 319
plingploing::if_t, 830	fw_sleep, 321
plingploing::plingploing_t, 833	fw_sleep_cmd, 320
fun2	fw_starting, 319
plingploing::plingploing_t, 833	fw_stopped, 319
fun2_key	fw_stopping, 319
plingploing::if_t, 830	fw t, 319
plingploing::plingploing_t, 833	fw_unprepared, 319
fun2_range	fw_until, 321
plingploing::if t, 830	fw_until_cmd, 320
plingploing::plingploing_t, 833	get_input_signal_dimension, 320
fun_t	get_parserstate, 321
MHAWindow::fun_t, 801	inst name, 321
funs	io error, 322
MHAOvlFilter::scale_var_t, 596	io_lib, 322
fw_cmd	io_name, 321
fw t, 321	load_io_lib, 320
fw_exiting	load_proc_lib, 320
fw_t, 319	nchannels_out, 321
fw_t, 319 fw_fragsize	parserstate, 321
MHAIOJack::io_jack_t, 539	patchbay, 322
fw_running	plugin_paths, 321
fw_t, 319	
- ·	plugins, 321 prepare, 319
fw_samplerate	·
MHAIOJack::io_jack_t, 539	prepare_vars, 321
fw_sleep	proc_error, 322
fw_t, 321	proc_error_string, 322
fw_sleep_cmd	proc_lib, 322
fw_t, 320	proc_name, 321
fw_starting	process, 320
fw_t, 319	quit, 320
fw_stopped	release, 320
fw_t, 319	start, 319
fw_stopping	started, 320
fw_t, 319	state, 322
fw_t, 317	state_t, 319
∼fw_t, 319	stop, 319
ac, 321	stopped, 320
async_poll_msg, 321	fw_unprepared
async_read, 321	fw_t, 319
b_exit_request, 322	fw_until
cfin, 322	fw_t, 321
cfout, 322	fw_until_cmd
dump_mha, 321	fw_t, 320

fw_vars_t, 322 fw_vars_t, 323 lock_channels, 323 lock_srate_fragsize, 323 pfragmentsize, 323 pinchannels, 323 psrate, 323 unlock_channels, 323 unlock_srate_fragsize, 323 fwcb	bbgain, 325 gain_if_t, 325 gains, 325 patchbay, 325 prepare, 325 process, 325 release, 325 update_bbgain, 325 update_gain, 325 update minmax, 325
io_tcp_t, 359	vmax, 325 vmin, 325
G doasym_feature_extraction_config, 272	gain::scaler_t, 326 scaler_t, 326
coherence::cohflt_t, 226 g50	gain_ac ac2wave_if_t, 141 ac2wave_t, 143
dc_simple::dc_vars_t, 255 g80	gain_delay coherence::cohflt_t, 227
dc_simple::dc_vars_t, 255 G_ERRNO MHA_TCP, 89	gain_if_t gain::gain_if_t, 325
G_length doasym_feature_extraction_config, 272	gain_in ac2wave_if_t, 141
g_scale dc::wb_inhib_cfg_t, 247 dc::wideband_inhib_vars_t, 248	ac2wave_t, 143 gain_min timoConfig, 906
GCC_end doasym_feature_extraction_config, 272	gain_min_db timo_params, 904
GCC_start doasym_feature_extraction_config, 272	timoSmooth, 911 gain_spec_ cfg_t, 222
GITCOMMITHASH mha_plugin.hh, 979 GLRDebug	gain_wave_ cfg_t, 222
noisePowProposedScale::noisePow⇔ Proposed, 821	gain_wiener timoConfig, 907
GLRexp noisePowProposedScale::noisePow←	gain_wiener_AC timo_AC, 902 gainrule
Proposed, 821 timoConfig, 907 GLR	dc::dc_vars_t, 245 dc_simple::dc_if_t, 251
timoConfig, 907 GREETING_TEXT	gains gain::gain_if_t, 325
mhamain.cpp, 1020 gain, 85 calibrator_runtime_layer_t, 216	prediction_error, 851 shadowfilter_end::cfg_t, 871 spec_fader_t, 888
coherence::cohflt_t, 227 fader_wave::fader_wave_if_t, 307 multibandcompressor::plugin_signals_t,	gaintable.cpp, 942 convert_f2logf, 942 isempty, 942
813 gain.cpp, 941 gain::gain_if_t, 324	gaintable.h, 942 gaintable_t DynComp::gaintable_t, 286
3494i, 52.1	2,1.00mpgaintabio_t, 200

gamma_flt_t	get_cf_hz
MHAFilter::gamma_flt_t, 499	MHAFilter::thirdoctave_analyzer_t, 532
gamma_post	MHAOvlFilter::fspacing_t, 589
timoConfig, 907	get_cfin
gamma_post_AC	MHAParser::mhapluginloader_t, 647
timo_AC, 901	get_cfout
gauss	MHAParser::mhapluginloader_t, 647
MHAOvlFilter::ShapeFun, 103	get_channelconfig
gcd	MHAOvlFilter::overlap_save_filterbank_t,
MHAFilter, 93	593
generatemhaplugindoc.cpp, 943	get_comm_var
conv2latex, 943	MHASignal::matrix_t, 748
	get_configfile
create_latex_doc, 943	• – •
main, 943	PluginLoader::config_file_splitter_t, 840
get	get_configname
testplugin::config_parser_t, 897	PluginLoader::config_file_splitter_t, 839
get_A	get_connected
MHAFilter::gamma_flt_t, 500	io_tcp_parser_t, 349
get_a	get_cpu_load
MHAParser::base_t::replace_t, 606	MHAJack::client_t, 560
get_ac	get_current_profile
latex_doc_t, 360	AuditoryProfile::parser_t, 209
plug_t, 834	get_delay
get_accept_event	mha_dblbuf_t, 400
MHA_TCP::Server, 445	get delays in
get_all_input_ports	MHAIOJack::io_jack_t, 539
MHAIOJack::io_jack_t, 539	get_delays_out
MHAIOJackdb::io_jack_t, 544	MHAIOJack::io_jack_t, 539
get_all_output_ports	get des fill count
MHAIOJack::io_jack_t, 539	mha_drifter_fifo_t, 407
MHAIOJackdb::io_jack_t, 544	get_documentation
get_audiochannels	PluginLoader::mhapluginloader_t, 847
dc, 81	• • • •
•	get_ear
get_available_space	AuditoryProfile::parser_t::ear_t, 210
mha_drifter_fifo_t, 407	AuditoryProfile::profile_t, 212
mha_fifo_t, 420	get_ef_hz
get_b	MHAOvIFilter::fspacing_t, 589
MHAParser::base_t::replace_t, 606	get_entries
get_bw_hz	algo_comm_t, 198
MHAOvIFilter::fscale_bw_t, 585	MHAKernel::algo_comm_class_t, 568
get_c1	MHAParser::keyword_list_t, 631
MHAFilter::o1flt_lowpass_t, 513	get_error
get_c_handle	algo_comm_t, 198
MHAKernel::algo_comm_class_t, 567	MHAKernel::algo_comm_class_t, 568
get_categories	get_f_hz
latex_doc_t, 360	MHAOvlFilter::fscale_t, 587
PluginLoader::mhapluginloader_t, 847	get_fbpower
get_cdata	MHAOvlFilter::fftfb_t, 580
MHASignal::matrix_t, 753	get_fbpower_db
get_cf_fftbin	MHAOvIFilter::fftfb_t, 580
MHAOvlFilter::fspacing_t, 589	get_fd
	3 - ·_··

	MHA_TCP::Connection, 437	get	_length
get_	_fftlen		MHASignal::uint_vector_t, 774
	MHAOvlFilter::fftfb_t, 581	get	_level
get_	_fifo_size		addsndfile::level_adapt_t, 177
	mha_dblbuf_t, 400		fader_wave::level_adapt_t, 309
get_	_fill_count	get	_level_in_db
	mha_drifter_fifo_t, 407		dc::dc_t, 242
	mha_fifo_t, 420	get	_level_in_db_adjusted
get	_fmap		dc::dc_t, 242
	AuditoryProfile::parser_t::fmap_t, 211	get	_libname
get	_fragsize		PluginLoader::config_file_splitter_t, 840
	MHAJack::client_t, 559	get	_local_address
get	_frequencies		io_tcp_parser_t, 348
	AuditoryProfile::fmap_t, 207	get	local_port
get	fun		io tcp_parser_t, 348
_	MHAOvlFilter::scale_var_t, 596	get	longmsg
get	 _gain	-	MHA_Error, 411
J -	DynComp::gaintable_t, 287, 288	aet	_tass_gain_db
aet	_handle	5 -	MHAOvlFilter::fftfb_t, 581
J	plug_t, 834	aet	_main_category
aet	index	J	latex_doc_t, 360
9	MHAParser::keyword_list_t, 631	aet	_mapping
	MHASignal::matrix_t, 752	9	MHASignal::loop_wavefragment_t, 743
aet	_inner_error	aet	_max_fill_count
90.	mha_dblbuf_t, 400	901_	mha_fifo_t, 420
aet	inner_size	aet	_min_fill_count
got	mha_dblbuf_t, 400	got	mha_drifter_fifo_t, 408
net	_input_channels	aet	_msg
got_	mha_dblbuf_t, 400	got	MHA_Error, 411
net	_input_fifo_fill_count	net	_my_input_ports
gei_	mha_dblbuf_t, 400	gci_	MHAJack::client_t, 560
net	input_fifo_space	net	_my_output_ports
gei_	mha_dblbuf_t, 400	gci_	MHAJack::client_t, 560
aot	input_signal_dimension	aot	- '
gei_	- · - • -	gei_	_name _MHAOvlEiltor::soalo_var_t_506
aot	fw_t, 320 interface	act	MHAOvlFilter::scale_var_t, 596
gei_	_	gei_	_nbands
act	MHA_TCP::Server, 445	act	dc::dc_t, 242
geı_	_iofun	geı_	_nelements
act	DynComp::gaintable_t, 288	act	MHASignal::matrix_t, 749
get_		geı_	_nreals
	MHAFilter::fftfilterbank_t, 493		MHASignal::matrix_t, 752
get_	_last_name	get_	_origname
	MHAParser::mhapluginloader_t, 647		PluginLoader::config_file_splitter_t, 840
get_	_last_output	get_	_os_event
	MHAFilter::o1flt_lowpass_t, 513		MHA_TCP::Timeout_Event, 454
get_	_latex_doc		MHA_TCP::Wakeup_Event, 457
	latex_doc_t, 360	get	_outer_size
get_	_len_A		mha_dblbuf_t, 400
	MHAFilter::filter_t, 497	get	_output_channels
get_	_len_B		mha_dblbuf_t, 400
	MHAFilter::filter_t, 497	get	_output_fifo_fill_count

	mha_dblbuf_t, 400	get_signal
get_	_output_fifo_space	MHAPlugin_Split::domain_handler_t, 703
	mha_dblbuf_t, 400	get_size
get_	_parser_tab	MHASignal::waveform_t, 785
	latex_doc_t, 360	get_srate
get	_parser_var	MHAJack::client_t, 560
	latex_doc_t, 360	get_type
get	_parserstate	MHAParser::window_t, 684
	fw_t, 321	get_value
get	_paths	MHAParser::keyword_list_t, 631
	pluginbrowser_t, 837	get_values
get	_peer_address	AuditoryProfile::fmap_t, 207
	MHA_TCP::Connection, 437	get_var
get	_peer_port	algo_comm_t, 197
	MHA_TCP::Connection, 437	MHAKernel::algo_comm_class_t, 568
get	_physical_input_ports	testplugin::ac_parser_t, 895
	MHAIOJack::io_jack_t, 539	get_var_float
	MHAIOJackdb::io_jack_t, 543	algo_comm_t, 197
get	_physical_output_ports	Communication between algorithms, 29
	MHAIOJack::io_jack_t, 539	MHAKernel::algo_comm_class_t, 568
	MHAIOJackdb::io_jack_t, 544	get_var_int
get	_plugins	algo_comm_t, 197
	pluginbrowser_t, 837	Communication between algorithms, 29
get_	_port	MHAKernel::algo_comm_class_t, 568
	MHA_TCP::Server, 445	get_var_spectrum
get_	_port_capture_latency	Communication between algorithms, 28
	MHAJack, 96	get_var_vfloat
get	_port_capture_latency_int	Communication between algorithms, 30
	MHAJack, 96	get_var_waveform
get_	_port_playback_latency	Communication between algorithms, 29
	MHAJack, 97	get_vF
get_	_port_playback_latency_int	DynComp::gaintable_t, 288
	MHAJack, 97	get_vL
get_	_ports	DynComp::gaintable_t, 288
	MHAJack::client_t, 560	get_weights
get_	_precision	MHAFilter::complex_bandpass_t, 484
	MHAParser, 107	MHAFilter::gamma_flt_t, 500
get_	_process_spec	get_window
	plug_t, 834	MHAParser::window_t, 683, 684
get_	_process_wave	get_window_data
	plug_t, 834	windowselector_t, 922
get_	_rdata	get_write_event
	MHASignal::matrix_t, 753	MHA_TCP::Connection, 437
geı_	_read_event	get_xlimits
act	MHA_TCP::Connection, 437	MHATableLookup::xy_table_t, 796
gei_	_resynthesis_gain	get_xruns MHA lack::client + 560
act	MHAFilter::gamma_flt_t, 500	MHAJack::client_t, 560
geı_	_server_port_open io_tcp_parser_t, 349	get_xruns_reset MHAJack::client_t, 560
net	_short_name	getcipd
gu.	MHAJack::port_t, 565	coherence, 81

getdata	MHAOvlFilter::ShapeFun, 103
MHASignal::uint_vector_t, 774	hann.cpp, 943
getfullname	hann, 944
PluginLoader::mhapluginloader_t, 846	hannf, 944
getmodulename	PI, 944
dynamiclib_t, 278	hann.h, 944
Getmsg	hann, 944
mha_error.hh, 961	hannf, 944
getname	hann1
dynamiclib_t, 278	plingploing::plingploing_t, 833
MHA_AC::ac2matrix_t, 380	hann2
getusername	plingploing::plingploing_t, 833
MHA_AC::ac2matrix_t, 381	hannf
getvar	hann.cpp, 944
acmon::ac_monitor_t, 149	hann.h, 944
MHA AC::ac2matrix helper t, 378	hanning
GF	MHAWindow, 123
MHAFilter::gamma_flt_t, 500	hanning_ramps_t, 326
groupdelay_t	~hanning_ramps_t, 327
MHASignal::schroeder t, 761	hanning_ramps_t, 327
gt	
dc::dc_t, 242	len_a, 327
gtdata	len_b, 327
dc::dc_vars_t, 244	operator(), 327
gtmin	ramp_a, 327
dc::dc_vars_t, 244	ramp_b, 327
gtstep	hanning_t
dc::dc_vars_t, 244	MHAWindow::hanning_t, 804
	hardlimit
h	softclipper_t, 882
dynamiclib_t, 278	softclipper_variables_t, 884
MHASignal::hilbert_t, 740	has_been_modified
H_ERRNO	dc_simple::dc_if_t, 251
MHA_TCP, 89	has_inner_error
HELP_TEXT	analysepath_t, 204
mhamain.cpp, 1020	has_key
HINSTANCE	MHAKernel::comm_var_map_t, 569
mha_plugin.hh, 979	has_parser
HSTRERROR	PluginLoader::mhapluginloader_t, 846
MHA TCP, 88	has_process
HTL	PluginLoader::mhapluginloader_t, 846
AuditoryProfile::parser_t::ear_t, 210	header
AuditoryProfile::profile_t::ear_t, 213	io_tcp_sound_t, 354
hamming	help
MHAWindow, 123	MHAParser::base_t, 605
hamming_t	hifftwin
MHAWindow::hamming_t, 803	doasvm_feature_extraction_config, 272
handle	hifftwin_sum
algo_comm_t, 194	doasym_feature_extraction_config, 272
hann	high_side_flat
hann.cpp, 944	MHAOvIFilter::band_descriptor_t, 576
hann.h, 944	hilbert

MHASignal::hilbert_fftw_t, 739	MHAOvlFilter::FreqScaleFun, 101
hilbert_fftw_t	hz2octave
MHASignal::hilbert_fftw_t, 739	MHAOvlFilter::FreqScaleFun, 100
hilbert_shifter_t, 328	hz2third_octave
~hilbert_shifter_t, 329	MHAOvlFilter::FreqScaleFun, 100
analytic, 329	hz2unit
dphi, 329	MHAOvlFilter::scale_var_t, 596
frameshift, 329	
fullspec, 329	İ
hilbert shifter t, 329	io_tcp_sound_t::float_union, 356
kmax, 329	INSERT_PATCH
kmin, 329	acConcat_wave.cpp, 925
mhafft, 329	acPooling_wave.cpp, 926
mixw_ref, 329	acSteer.cpp, 927
mixw_shift, 329	acTransform_wave.cpp, 928
phi, 329	doasvm_classification.cpp, 937
plan spec2analytic, 329	doasvm_feature_extraction.cpp, 938
process, 329	lpc.cpp, 946
shifted, 329	lpc_bl_predictor.cpp, 946
hilbert t	lpc_burg-lattice.cpp, 947
MHASignal::hilbert t, 740	prediction_error.cpp, 1025
host	steerbf.cpp, 1033
ac2osc_t, 138	timoSmooth.cpp, 1035
host_port_to_sock_addr	INSERT_VAR
mha_tcp.cpp, 996	timoSmooth.cpp, 1035
hostApi	INVALID_SOCKET
MHAIOPortAudio::device_info_t, 547	mha_tcp.cpp, 996
Hs	INVALID_THREAD_PRIORITY
MHAFilter::fftfilterbank t, 493	MHAPlugin_Split, 114
hton	IO_ERROR_JACK
io tcp sound t, 355	mhajack.h, 1019
hw	IO_ERROR_MHAJACKLIB
MHAFilter::fftfilterbank_t, 493	mhajack.h, 1019
hwin	IODestroy
doasym feature extraction config, 272	MHAIOFile.cpp, 1001, 1002
hz2bark	MHAIOJack.cpp, 1004, 1005
MHAOvIFilter::FreqScaleFun, 101	MHAIOJackdb.cpp, 1006, 1007
hz2bark_analytic	MHAIOParser.cpp, 1009, 1010
MHAOvIFilter::FreqScaleFun, 101	MHAIOPortAudio.cpp, 1012, 1013
hz2bark t	MHAIOTCP.cpp, 1015, 1016
MHAOvlFilter::barkscale::hz2bark_t, 578	IODestroy_cb
hz2erb	io_lib_t, 339
	IODestroy_t
MHAOvIFilter::FreqScaleFun, 101	mha_io_ifc.h, 968
hz2erb_glasberg1990	IOInit
MHAOvlFilter::FreqScaleFun, 101	MHAIOFile.cpp, 1001
hz2hz	MHAIOJack.cpp, 1003, 1004
MHAOvIFilter::FreqScaleFun, 100	MHAIOJackdb.cpp, 1006, 1007
speechnoise.cpp, 1030	MHAIOPartAudia and 1010
hz2khz	MHAIOPortAudio.cpp, 1012
MHAOvlFilter::FreqScaleFun, 100	MHAIOTCP.cpp, 1015, 1016
hz2log	IOInit_cb

io_lib_t, 339	IOStartedEvent_t
IOInit_t	mha_io_ifc.h, 968
mha_io_ifc.h, 968	IOStop
IOPrepare	MHAIOFile.cpp, 1001, 1002
MHAIOFile.cpp, 1001	MHAIOJack.cpp, 1004
MHAIOJack.cpp, 1004	MHAIOJackdb.cpp, 1006, 1007
MHAIOJackdb.cpp, 1006, 1007	MHAIOParser.cpp, 1009, 1010
MHAIOParser.cpp, 1009	MHAIOPortAudio.cpp, 1012, 1013
MHAIOPortAudio.cpp, 1012	MHAIOTCP.cpp, 1015, 1016
MHAIOTCP.cpp, 1015, 1016	IOStop_cb
IOPrepare_cb	io_lib_t, 339
io_lib_t, 339	IOStop_t
IOPrepare_t	mha_io_ifc.h, 968
mha_io_ifc.h, 968	IOStoppedEvent
IOProcessEvent_inner	MHAJack::client_avg_t, 553
MHAIOJackdb::io_jack_t, 543	MHAJack::client_noncont_t, 555
IOProcessEvent_t	IOStoppedEvent_t
mha_io_ifc.h, 968	mha_io_ifc.h, 968
IORelease	IOStrError
MHAIOFile.cpp, 1001, 1002	MHAIOFile.cpp, 1001, 1002
MHAIOJack.cpp, 1004	MHAIOJack.cpp, 1004, 1005
MHAIOJackdb.cpp, 1006, 1007	MHAIOJackdb.cpp, 1006, 1007
MHAIOParser.cpp, 1009, 1010	MHAIOParser.cpp, 1009, 1010
MHAIOPortAudio.cpp, 1012, 1013	MHAIOPortAudio.cpp, 1012, 1013
MHAIOTCP.cpp, 1015, 1016	MHAIOTCP.cpp, 1015, 1016
IORelease_cb	IOStrError_cb
io_lib_t, 339	io_lib_t, 339
IORelease_t	IOStrError_t
mha_io_ifc.h, 968	mha_io_ifc.h, 968
IOSetVar	id
MHAIOFile.cpp, 1001, 1002	mha_channel_info_t, 396
MHAIOJack.cpp, 1004	id_str
MHAIOJackdb.cpp, 1006, 1007	MHAParser::base_t, 605
MHAIOParser.cpp, 1009, 1010	id_string
MHAIOPortAudio.cpp, 1012, 1013	MHAParser::parser_t, 655
MHAIOTCP.cpp, 1015, 1016	identity
IOSetVar_cb	MHASignal::schroeder_t, 763
io_lib_t, 339	identity.cpp, 944
IOSetVar_t	identity_t, 330
mha_io_ifc.h, 968	identity_t, 330
IOStart	prepare, 331
MHAIOFile.cpp, 1001, 1002	process, 330, 331
MHAIOJack.cpp, 1004	release, 331
MHAIOJackdb.cpp, 1006, 1007	idstr
MHAIOParser.cpp, 1009	mha_channel_info_t, 396
MHAIOPortAudio.cpp, 1012, 1013	if_t
MHAIOTCP.cpp, 1015, 1016	plingploing::if_t, 829
IOStart_cb	testplugin::if_t, 899
io_lib_t, 339	iface
IOStart_t	MHA_TCP::Server, 446
mha_io_ifc.h, 968	ifft

doasvm_feature_extraction_config, 272	MHAJack::client_t, 562
ifftshift	increase_condition
ifftshift.cpp, 945	mha_fifo_posix_threads_t, 417
ifftshift.h, 945	increment
ifftshift.cpp, 944	mha_fifo_posix_threads_t, 416
ifftshift, 945	mha_fifo_thread_platform_t, 424
ifftshift.h, 945	index
ifftshift, 945	MHAParser::keyword_list_t, 632
ignore	index_t
MHA_TCP::Event_Watcher, 442	MHAFilter::partitioned_convolution_t ←
ignored_by	::index_t, 521, 522
MHA_TCP::Wakeup_Event, 457	inhib_gain
iir_filter_state_t	dc::dc_t, 243
MHAFilter::iir_filter_state_t, 502	Init_mha_ruby
iir_filter_t	mha_ruby.cpp, 981
MHAFilter::iir_filter_t, 503	init_peer_data
iir_ord1_real_t	MHA_TCP::Connection, 436
MHAFilter::iir_ord1_real_t, 506	initialize
iirfilter.cpp, 945	MHA_TCP::Server, 445
iirfilter_t, 331	inner2outer_resampling
iirfilter_t, 332	MHAPlugin_Resampling::resampling_t,
prepare_, <mark>332</mark>	699
process, 332	inner_ac_copy
release_, 332	analysepath_t, 204
ilen	inner_error
addsndfile::level_adapt_t, 177	analysepath_t, 204
fader_wave::level_adapt_t, 309	mha_dblbuf_t, 403
im	inner_fragsize
mha_complex_t, 397	MHAPlugin_Resampling::resampling_t,
imag	699
acsave::mat4head_t, 162	inner_in
fftfilterbank::fftfb_plug_t, 314	MHASignal::doublebuffer_t, 735
MHASignal::matrix_t, 750–752	inner_input
imagfb	analysepath_t, 204
MHAOvlFilter::overlap_save_filterbank_	inner_out
analytic_t, 591	MHASignal::doublebuffer_t, 735
impulse_response	inner_out_domain
MHAFilter::polyphase_resampling_t, 526	analysepath_t, 204
MHAFilter::transfer_function_t, 535	inner_process
in_buf	db_t, 238
wave2spec_t, 917	MHASignal::doublebuffer_t, 734
in_cfg	inner_process_wave2spec
timo_params, 904	analysepath_t, 204
in_spec	inner_process_wave2wave
doasym_feature_extraction_config, 272	analysepath_t, 204
shadowfilter_end::cfg_t, 871	inner_signal
in_spec_copy	MHAPlugin_Resampling::resampling_t,
shadowfilter_begin::cfg_t, 868	699
inbuf	inner_size
MHA_TCP::Connection, 440	mha_dblbuf_t, 402
inch	inner_srate

MHAPlugin_Resampling::resampling_t, 699	MHAOvIFilter::fftfb_ac_info_t, 578 multibandcompressor::fftfb_plug_t, 809
input	noisePowProposedScale::noisePow
io_parser_t, 342	Proposed, 820
MHAJack::port_t, 563	prediction_error_config, 853
MHASignal::loop_wavefragment_t, 742	rmslevel_t, 857
mha_dblbuf_t, 401	rt_nlms_t, 862
input_cfg	timo AC, 901
MHAPlugin::plugin_t, 694	insert_item
• • • —	MHAParser::parser_t, 653
input_cfg	• —
MHAPlugin::plugin_t, 695	insert_items
input_channels	windowselector_t, 922
adm_if_t, 190	insert_member
mha_dblbuf_t, 402	mha_parser.hh, 977
input_domain	insert_var
PluginLoader::mhapluginloader_t, 846	algo_comm_t, 194
input_fifo	MHAKernel::algo_comm_class_t, 567
mha_dblbuf_t, 402	testplugin::ac_parser_t, 895
input_level	insert_var_float
dc::dc_vars_t, 245	algo_comm_t, 195
input_portnames	MHAKernel::algo_comm_class_t, 567
MHAJack::client_t, 562	insert_var_int
input_signal_spec	algo_comm_t, 195
MHAFilter::partitioned_convolution_t, 520	MHAKernel::algo_comm_class_t, 567
input_signal_wave	inspect
MHAFilter::partitioned_convolution_t, 519	MHAFilter::complex_bandpass_t, 485
input_spec	MHAFilter::gamma_flt_t, 500
testplugin::signal_parser_t, 900	MHASignal::delay_t, 731
input_to_process	inst name
analysepath_t, 204	fw t, 321
input_wave	int data
testplugin::signal_parser_t, 900	testplugin::ac_parser_t, 895
inputPow	int_mon_t
noisePowProposedScale::noisePow⇔	MHAParser::int_mon_t, 626
Proposed, 821	int_t
inputSpec	
• •	MHA_AC::int_t, 387
noisePowProposedScale::noisePow←	MHAParser::int_t, 628
Proposed, 821	integrate
inputchannels	Vector and matrix processing toolbox, 47
MHAFilter::fftfilterbank_t, 493	intensity
insert	mha_signal.cpp, 984
acPooling_wave_config, 156	interface_t
acSteer_config, 168	delay::interface_t, 260
coherence::cohflt_t, 226	multibandcompressor::interface_t, 811
fftfilterbank::fftfb_plug_t, 314	noisePowProposedScale::interface_t, 819
lpc_config, 373	route::interface_t, 859
MHA_AC::ac2matrix_t, 381	interleaved
MHA_AC::acspace2matrix_t, 384	combc_if_t, 230
MHA_AC::spectrum_t, 389	interleaved_
MHA_AC::stat_t, 391	combc_t, 231
MHA_AC::waveform_t, 393	intern_level
,	_

MHASignal::loop_wavefragment_t, 744	setlock, 334
internal_fir	sf_in, <mark>336</mark>
MHAFilter::smoothspec_t, 531	sf_out, 336
internal_start	sfinf_in, 336
MHAJack::client_t, 561	sfinf_out, 336
internal_stop	start, 334
MHAJack::client_t, 561	start_event, 335
interp	start_handle, 335
MHATableLookup::linear_table_t, 789	startsample, 335
MHATableLookup::table t, 792	stop, 334
MHATableLookup::xy_table_t, 794	stop_event, 335
interp1	stop_handle, 335
DynComp, 83	stopped, 334
interp2	strict_channel_match, 335
DynComp, 84	strict_srate_match, 335
inv_scale	total_read, 336
MHAOvlFilter::FreqScaleFun, 101	io_jack_t
invalidate_window_data	MHAIOJack::io_jack_t, 538
windowselector_t, 923	MHAIOJackdb::io jack t, 543
invert	io_lib
coherence::vars_t, 228	fw_t, 322
inwave	io_lib_t, 336
lpc_config, 374	~io_lib_t, 338
io	IODestroy_cb, 339
MHAJack, 96	IOInit_cb, 339
MHAJack;:client_avg_t, 552	IOPrepare_cb, 339
MHAJack::client_noncont_t, 555	• —
<u> </u>	IORelease_cb, 339
io_err	IOSetVar_cb, 339
io_tcp_fwcb_t, 346	IOStan_ab_339
io_error	IOStop_cb, 339
fw_t, 322	IOStrError_cb, 339
io_file_t, 332	io_lib_t, 338
~io_file_t, 334	lib_data, 339
b_prepared, 336	lib_err, 339
filename_input, 335	lib_handle, 339
filename_output, 335	lib_str_error, 339
fragsize, 335	prepare, 338
io_file_t, 334	release, 339
length, 335	start, 338
nchannels_file_in, 335	stop, 338
nchannels_in, 335	test_error, 339
nchannels_out, 335	io_name
output_sample_format, 335	fw_t, 321
prepare, 334	io_parser_t, 340
proc_event, 335	\sim io_parser_t, 341
proc_handle, 335	b_fw_started, 342
release, 334	b_prepared, 342
s_file_in, 336	b_starting, 342
s_in, 335	b_stopped, 342
s_out, 336	fragsize, 342
samplerate, 335	input, 342

io_parser_t, 341	peer_port, 352
nchannels_in, 342	server_port_open, 351
nchannels_out, 342	set_connected, 350
output, 342	set_local_port, 348
patchbay, 342	set_new_peer, 350
prepare, 341	set_server_port_open, 349
proc_event, 342	io_tcp_sound_t, 352
proc_handle, 342	∼io_tcp_sound_t, <mark>353</mark>
process_frame, 342	check_sound_data_type, 354
release, 342	chunkbytes_in, 354
s_in, 342	fragsize, 355
s_out, 342	header, 354
start, 341	hton, 355
start_event, 342	io_tcp_sound_t, 353
start_handle, 342	ntoh, 354
started, 342	num_inchannels, 355
stop, 342	num_outchannels, 356
stop_event, 342	prepare, 354
stop handle, 342	release, 354
stopped, 342	s in, 356
io_portaudio_t	samplerate, 355
MHAIOPortAudio::io_portaudio_t, 549	io_tcp_sound_t::float_union, 356
io_tcp_fwcb_t, 343	c, 356
~io_tcp_fwcb_t, 344	f, 356
io_err, 346	i, 356
io_tcp_fwcb_t, 344	io_tcp_t, 357
proc_err, 346	~io_tcp_t, 358
proc event, 345	accept_loop, 358
proc_handle, 345	connection_loop, 358
process, 344	fwcb, 359
set_errnos, 344	io_tcp_t, 358
start, 344	notify release, 359
start_event, 345	notify_start, 359
start handle, 346	notify_stop, 359
stop, 345	parse, 359
stop_event, 345	parser, 359
stop handle, 346	prepare, 358
io_tcp_parser_t, 346	release, 358
~io_tcp_parser_t, 348	server, 359
connected, 351	sound, 359
debug, 351	start, 358
debug_file, 352	stop, 358
debug_filename, 352	thread, 359
get_connected, 349	iob
get_local_address, 348	
get_local_port, 348	MHAJack::port_t, 565 irslen
·	
get_server_port_open, 349	frequency_translator_t, 316
io_tcp_parser_t, 348	irslen_inner2outer
local_address, 351	MHAPlugin_Resampling::resampling_if + 607
local_port, 351 peer_address, 351	_t, 697
peei_auuiess, 30 i	irslen_outer2inner

MHAPlugin_Resampling::resampling_if←	k_outer
_t, 697	MHASignal::doublebuffer_t, 735
irswnd	kappa
MHAOvIFilter::overlap_save_filterbank_~	lpc_burglattice_config, 372
t::vars t, 594	kappa_block
smoothgains_bridge::overlapadd_if_←	lpc_burglattice_config, 372
t, 878	kappa_const
·	• • —
is_complex	timo_params, 904
MHA_AC::ac2matrix_helper_t, 379	timoSmooth, 910
mha_audio_descriptor_t, 394	keyword_list_t
is_playback_active	MHAParser::keyword_list_t, 630
MHASignal::loop_wavefragment_t, 744	kick_condition
is_prepared	MHAPlugin_Split::posix_threads_t, 708
adm_if_t, 190	kick_thread
MHAPlugin::plugin_t, 694	MHAPlugin_Split::dummy_threads_t, 705
PluginLoader::mhapluginloader_t, 847	MHAPlugin_Split::posix_threads_t, 708
is prepared	MHAPlugin_Split::thread_platform_t, 721
MHAPlugin::plugin_t, 695	kicked
is_same_size	MHAPlugin_Split::posix_threads_t, 709
	km
MHASignal::matrix_t, 749	
is_var	lpc_bl_predictor_config, 368
algo_comm_t, 196	kmax
MHAKernel::algo_comm_class_t, 567	hilbert_shifter_t, 329
iscomplex	kmin
MHASignal::matrix_t, 749	hilbert_shifter_t, 329
isempty	kth_smallest
AuditoryProfile::fmap_t, 207	MHASignal, 117
gaintable.cpp, 942	kw_index2type
MHAFilter::transfer_function_t, 535	transducers.cpp, 1036
isval	kw_t
MHAParser::kw_t, 634	 MHAParser::kw_t, 633, 634
iter	<u>.</u> , •••, ••
	L
prediction_error_config, 854	AuditoryProfile::parser_t, 209
iterator	AuditoryProfile::profile_t, 213
MHA_TCP::Event_Watcher, 442	I min
Saula anno Banallan	_
jack_error_handler	dc::wb_inhib_cfg_t, 247
mhajack.cpp, 1017	dc::wideband_inhib_vars_t, 248
jack_proc_cb	I_new
MHAJack::client_t, 561	addsndfile::level_adapt_t, 177
jack_xrun_cb	fader_wave::level_adapt_t, 309
MHAJack::client_t, 561	l_old
jc	addsndfile::level_adapt_t, 177
MHAJack::client_t, 562	fader_wave::level_adapt_t, 309
MHAJack::port_t, 565	LEVEL
jstate_prev	dc_simple, 82
-	LPSCALE
MHAJack::client_t, 562	timoconfig.cpp, 1034
k inner	LTASS_combined
k_inner	_
MHASignal::doublebuffer_t, 735	speechnoise_t, 889
k_nyquist	LTASS_female
dc::dc_t, 243	speechnoise_t, 889

LTASS_male	get_parser_tab, 360
speechnoise_t, 889	get_parser_var, 360
lambda	latex_doc_t, 360
lpc_burglattice, 370	latex_plugname, 361
lpc_burglattice_config, 372	loader, 361
lambda_ceps	parsername, 360
timoConfig, 907	plugin_macro, 361
lambda_ceps_AC	plugname, 361
timo_AC, 902	strdom, 360
lambda_ceps_prev	latex_plugname
timoConfig, 907	latex_doc_t, 361
lambda_ml_AC	len
timo_AC, 902	MHA_AC::acspace2matrix_t, 384
lambda_ml_ceps	MHAFilter::filter_t, 498
timoConfig, 907	MHATableLookup::linear_table_t, 791
lambda_ml_ceps_AC	plingploing::plingploing_t, 832
timo_AC, 902	len A
lambda_ml_full	MHAFilter::filter_t, 498
timoConfig, 907	len a
lambda_ml_smooth	hanning_ramps_t, 327
timoConfig, 907	len B
lambda_ml_smooth_AC	MHAFilter::filter_t, 498
timo_AC, 902	len_b
lambda_smoothing_power	hanning_ramps_t, 327
nlms_t, 815	length
lambda_spec	io_file_t, 335
timoConfig, 907	MHASignal::uint_vector_t, 774
lambda_spec_AC	lev
timo_AC, 902	noise_t, 817
lambda_thresh	- '
timo_params, 904	sine_t, 876 level
— ,	
timoSmooth, 910	addsndfile::addsndfile_if_t, 175
last_complex_bin	plingploing::if_t, 830
MHASignal::subsample_delay_t, 771	plingploing::plingploing_t, 833
last_config	rmslevel_t, 857
MHAPlugin::config_t, 689	level_adapt_t
last_errormsg	addsndfile::level_adapt_t, 176
MHAParser::parser_t, 655	fader_wave::level_adapt_t, 308
last_jack_err	level_adaptor
mhajack.cpp, 1017	addsndfile, 78
last_jack_err_msg	fader_wave, 85
mhajack.cpp, 1017	level_db
mhajack.h, 1019	rmslevel_t, 857
last_name	level_in_db
MHAParser::mhapluginloader_t, 647	dc::dc_t, 243
latex_doc_t, 359	level_in_db_adjusted
ac, 361	dc::dc_t, 243
get_ac, 360	level_mode_t
get_categories, 360	MHASignal::loop_wavefragment_t, 742
get_latex_doc, 360	level_mon
get_main_category, 360	droptect_t, 275

level_smoother_t	MHAOvlFilter::ShapeFun, 102
dc_simple::level_smoother_t, 258	softclipper_t, 882
level_spec	softclipper_variables_t, 884
dc_simple::level_smoother_t, 258	linear_table_t
level_wave	MHATableLookup::linear_table_t, 789
dc_simple::level_smoother_t, 258	Linearphase FIR
levelmode	ADM::Linearphase_FIR, 186
addsndfile::addsndfile if t, 175	list_dir
Levinson2	mha_os.cpp, 969
lpc.cpp, 946	mha os.h, 971
lib_data	lo addr
_ io_lib_t, 339	ac2osc_t, 139
PluginLoader::mhapluginloader_t, 847	load io lib
lib_err	fw_t, 320
io_lib_t, 339	load_plug
PluginLoader::mhapluginloader_t, 847	MHAParser::mhapluginloader t, 647
lib_handle	load_proc_lib
io lib t, 339	fw_t, 320
PluginLoader::mhapluginloader_t, 847	loader
lib_str_error	latex_doc_t, 361
io_lib_t, 339	loadlib
libdata	analysispath_if_t, 206
analysepath_t, 204	local_address
MHAParser::c_ifc_parser_t, 613	io_tcp_parser_t, 351
liberr	local_get_entries
MHAParser::c_ifc_parser_t, 613	MHAKernel::algo_comm_class_t, 568
libname	local_get_var
analysispath_if_t, 206	MHAKernel::algo_comm_class_t, 568
PluginLoader::config_file_splitter_t, 840	local_insert_var
library_paths	MHAKernel::algo_comm_class_t, 568
pluginbrowser_t, 837	local_is_var
like_ratio	MHAKernel::algo_comm_class_t, 568
acPooling_wave_config, 157	- — — — — —
like_ratio_name	local_port
_	io_tcp_parser_t, 351
acPooling_wave, 155 limit	local_remove_ref
	MHAKernel::algo_comm_class_t, 568
coherence::cohflt_t, 226	local_remove_var
coherence::vars_t, 228	MHAKernel::algo_comm_class_t, 568
MHASignal, 117	locate MUNIC lockdhyin iook t 545
MHASignal::quantizer_t, 756	MHAIOJackdb::io_jack_t, 545
MHASignal::waveform_t, 783	locate_end
limiter	MHASignal::loop_wavefragment_t, 744
dc_simple::dc_t, 253	lock_channels
limiter_threshold	fw_vars_t, 323
dc_simple::dc_t, 253	lock_srate_fragsize
dc_simple::dc_vars_t, 256	fw_vars_t, 323
lin2db	locked
Vector and matrix processing toolbox, 42	MHAParser::variable_t, 664
line_t	log_down
dc_simple::dc_t::line_t, 254	MHASignal::schroeder_t, 763
linear	log_lambda_spec

timoConfig, 907	lpc_order, 363
log_lambda_spec_AC	norm, <mark>363</mark>
timo_AC, 902	patchbay, 363
log_up	prepare, 362
MHASignal::schroeder_t, 763	process, 362
	•
logGLRFact	release, 363
noisePowProposedScale::noisePow←	shift, 363
Proposed, 821	update_cfg, 363
timoConfig, 907	lpc.cpp, 945
logfile	INSERT_PATCH, 946
mhaserver_t, 726	Levinson2, 946
logstring	PATCH VAR, 946
mhaserver_t, 725	lpc.h, 946
- :	•
longmsg	lpc_bl_predictor, 364
MHA_Error, 412	~lpc_bl_predictor, 365
lookup	lpc_bl_predictor, 365
MHATableLookup::linear_table_t, 789	lpc_order, 366
MHATableLookup::table_t, 792	name_b, 366
MHATableLookup::xy_table_t, 794	name_f, 366
loop	name_kappa, 366
addsndfile::addsndfile_if_t, 175	name_lpc_b, 366
	— · —
loop_wavefragment_t	name_lpc_f, 366
MHASignal::loop_wavefragment_t, 742	patchbay, 366
low_incl	prepare, 365
MHAParser::range_var_t, 658	process, 365
low_limit	release, 365
MHAParser::range_var_t, 658	update_cfg, 366
low_side_flat	lpc_bl_predictor.cpp, 946
MHAOvlFilter::band_descriptor_t, 576	INSERT PATCH, 946
low thresh	
_	PATCH_VAR, 946
acPooling_wave_config, 157	lpc_bl_predictor.h, 946
lower_threshold	EPSILON, 947
acPooling_wave, 155	lpc_bl_predictor_config, 366
lp	~lpc_bl_predictor_config, 367
DynComp::dc afterburn rt t, 280	ac, 367
lp1i	b_est, 367
coherence::cohflt_t, 226	backward, 367
lp1ltg	f_est, 367
	-
coherence::cohflt_t, 227	forward, 367
lp1r	km, 368
coherence::cohflt_t, 226	lpc_bl_predictor_config, 367
lp_coeffs	lpc_order, 367
adm_rtconfig_t, 193	name_b, 368
lp order	name_f, 367
adm_if_t, 190	name_km, 367
lpc, 361	process, 367
~lpc, 362	s_b, 368
• •	- :
algo_name, 363	s_f, 368
comp_each_iter, 363	lpc_buffer_size
lpc, 362	lpc, 363
lpc_buffer_size, 363	lpc_config, 374

lpc_	_burg-lattice.cpp, 947 INSERT_PATCH, 947	sample, 374 shift, 373
lpc_	PATCH_VAR, 947 _burg-lattice.h, 947 EPSILON, 947	lpc_order lpc, 363 lpc_bl_predictor, 366
lpc_	_burglattice, 368 ~lpc_burglattice, 369 lambda, 370 lpc_burglattice, 369 lpc_order, 370	lpc_bl_predictor_config, 367 lpc_burglattice, 370 lpc_burglattice_config, 372 prediction_error, 852 lpc_out
	name_b, 370	lpc_config, 374
	name_f, 370	Itgcomp
	name_kappa, 370	coherence::vars_t, 228
	patchbay, 370	Itgtau
	prepare, 370	coherence::vars_t, 228
	process, 370	Ival
	release, 370	MHAParser::expression_t, 620
	update_cfg, 370	m
lpc_	_burglattice_config, 371	dc_simple::dc_t::line_t, 254
	~lpc_burglattice_config, 371	matrixmixer::cfg_t, 375
	ac, 371	M_PI
	backward, 372	mha_defs.h, 956
	dm, 372	mha_signal.hh, 993
	forward, 371	m_alphas
	kappa, 372	ADM::Linearphase_FIR, 187
	kappa_block, 372 lambda, 372	m_beta
	lpc_burglattice_config, 371	ADM::ADM, 183
	lpc_order, 372	m_coeff
	name_b, 372	ADM::Delay, 185
	name_f, 372	m_decomb
	nm, 372	ADM::ADM, 183
	process, 371	m_delay_back
	s_b, 372	ADM::ADM, 183
	s_f, 372	m_delay_front ADM::ADM, 183
lpc	_config, 372	m fullsamples
1	~lpc_config, 373	ADM::Delay, 185
	A, 374	m_lp_bf
	comp_each_iter, 373	ADM::ADM, 183
	comp_iter, 374	m_lp_result
	corr_out, 374	ADM::ADM, 183
	insert, 373	m_mu_beta
	inwave, 374	ADM::ADM, 183
	lpc_buffer_size, 374	m_norm
	lpc_config, 373	ADM::Delay, 185
	lpc_out, 374	m_now
	N, 374	ADM::Linearphase_FIR, 187
	norm, 373	m_now_in
	order, 373	ADM::Delay, 185
	process, 373	m_order
	R, 374	ADM::Linearphase_FIR, 187

m_output	size, 384
ADM::Linearphase_FIR, 187	update, 384
m_powerfilter_coeff	MHA_AC::double_t, 384
ADM::ADM, 183	\sim double_t, 385
m_powerfilter_norm	ac, 385
ADM::ADM, 183	data, 385
m_powerfilter_state	double_t, 385
ADM::ADM, 183	MHA_AC::float_t, 386
m state	~float_t, 386
ADM::Delay, 185	ac, 386
MAX LINE LENGTH	data, 386
mhamain.cpp, 1020	float_t, 386
MAX_TCP_PORT_STR	MHA_AC::int_t, 387
	-
MHAIOTCP.cpp, 1015	~int_t, 387
MAX_TCP_PORT	ac, 387
MHAIOTCP.cpp, 1015	data, 387
MAX_USER_ERR	int_t, 387
MHAIOFile.cpp, 1001	MHA_AC::spectrum_t, 388
MHAIOJack.cpp, 1003	\sim spectrum_t, 389
MHAIOJackdb.cpp, 1006	ac, 390
MHAIOParser.cpp, 1009	insert, 389
MHAIOPortAudio.cpp, 1012	name, <mark>390</mark>
MHAIOTCP.cpp, 1015	spectrum_t, 389
mhajack.h, 1019	MHA_AC::stat_t, 390
MAX	insert, 391
mha defs.h, 957	mean, 391
MHA_AC::ac2matrix_helper_t, 378	stat_t, 391
ac, 379	std, 391
ac2matrix_helper_t, 378	update, 391
acvar, 379	MHA AC::waveform t, 391
getvar, 378	~waveform_t, 392
is_complex, 379	ac, 393
name, 379	insert, 393
size, 379	name, 393
username, 379	waveform_t, 392
MHA_AC::ac2matrix_t, 379	MHA_AC_CHAR
ac2matrix_t, 380	mha.h, 952
getname, 380	MHA_AC_DOUBLE
getusername, 381	mha.h, <mark>952</mark>
insert, 381	MHA_AC_FLOAT
update, 380	mha.h, 952
MHA_AC::acspace2matrix_t, 381	MHA_AC_INT
~acspace2matrix_t, 383	mha.h, 952
acspace2matrix_t, 382	MHA AC MHACOMPLEX
data, 384	 mha.h, <mark>952</mark>
frame, 384	MHA AC MHAREAL
frameno, 384	mha.h, 952
insert, 384	MHA AC UNKNOWN
len, 384	mha.h, 952
operator=, 383	MHA_AC_USER
operator[], 383	mha.h, 952
ορειαιοιμ, σοσ	IIIIa.II, JJL

MHA_AC_VEC_FLOAT	mha.h, 951
mha.h, 952	MHA_RESOLVE_CHECKED
MHA_AC, 85	mha_os.h, 971
MHA_CALLBACK_TEST_PREFIX	MHA_RESOLVE
mha.h, 950	mha_os.h, 971
MHA_CALLBACK_TEST	MHA_SPECTRUM
mha.h, 950	mha.h, 952
MHA DOMAIN MAX	MHA_STRUCT_SIZEMATCH
mha.h, 952	mha.h, 951
MHA DOMAIN UNKNOWN	MHA STRF
mha.h, 952	mha.h, 950
MHA EAR LEFT	MHA_TCP::Async_Notify, 431
mha defs.h, 957	~Async_Notify, 432
MHA_EAR_MAX	Async_Notify, 432
mha defs.h, 957	pipe, 432
MHA EAR RIGHT	reset, 432
mha defs.h, 957	set, 432
MHA_ERR_INVALID_HANDLE	MHA_TCP::Client, 432
mha errno.h, 959	Client, 433
MHA_ERR_NULL	MHA TCP::Connection, 434
mha_errno.h, 959	~Connection, 436
MHA ERR SUCCESS	buffered_incoming_bytes, 440
mha_errno.h, 959	buffered_outgoing_bytes, 440
MHA_ERR_UNKNOWN	can_read_bytes, 438
mha errno.h, 959	can_read_line, 438
MHA ERR USER	can_sysread, 436
mha errno.h, 959	can_syswrite, 436
MHA ERR VARFMT	closed, 440
mha errno.h, 959	Connection, 436
MHA ERR VARRANGE	eof, 437
mha_errno.h, 959	fd, 440
MHA_Error, 410	get_fd, 437
~MHA Error, 411	get_peer_address, 437
get_longmsg, 411	· —•
get msg, 411	get_peer_port, 437
0 = 0.	get_read_event, 437 get_write_event, 437
longmsg, 412	3 = - ,
MHA_Error, 411	inbuf, 440
msg, 412	init_peer_data, 436
operator=, 411	needs_write, 439
what, 411	outbuf, 440
MHA_ErrorMsg	peer_addr, 440
Error handling in the openMHA, 31	read_bytes, 439
MHA_ErrorMsg2	read_event, 440
MHAIOTCP.cpp, 1015	read_line, 438
MHA_ErrorMsg3	sysread, 436
MHAIOTCP.cpp, 1015	syswrite, 437
MHA_ID_MATRIX	try_write, 439
mha_signal.cpp, 984	write, 439
MHA_ID_UINT_VECTOR	write_event, 440
mha_signal.cpp, 984	MHA_TCP::Event_Watcher, 441
MHA_RELEASE_VERSION_STRING	\sim Event_Watcher, 442

Events, 442	MHA_TCP::Timeout_Event, 453
events, 442	end_time, 454
ignore, 442	get os event, 454
iterator, 442	Timeout_Event, 454
observe, 442	MHA TCP::Timeout Watcher, 454
wait, 442	~Timeout_Watcher, 455
MHA_TCP::OS_EVENT_TYPE, 443	timeout, 455
fd, 443	Timeout Watcher, 455
mode, 443	MHA_TCP::Wakeup_Event, 456
R, 443	~Wakeup_Event, 457
T, 443	get_os_event, 457
timeout, 443	ignored_by, 457
W, 443	observed_by, 457
X, 443	observed_by, 457
MHA_TCP::Server, 444	os_event, 458
~Server, 445	os_event_valid, 458
accept, 445	reset, 457
accept_event, 446	status, 458
get_accept_event, 445	Wakeup_Event, 457
get_interface, 445	MHA_TCP::sock_init_t, 446
get port, 445	sock init t, 447
iface, 446	MHA_TCP, 87
initialize, 445	dtime, 89
port, 446	G ERRNO, 89
Server, 444, 445	H ERRNO, 89
serversocket, 446	HSTRERROR, 88
sock_addr, 446	N_ERRNO, 89
try_accept, 446	SOCKET, 88
MHA_TCP::Sockaccept_Event, 447	STRERROR, 88
Sockaccept Event, 447	sock_initializer, 89
MHA_TCP::Sockread_Event, 448	stime, 89
Sockread_Event, 448	MHA_VERSION_BUILD
MHA_TCP::Sockwrite_Event, 449	mha.h, 951
Sockwrite_Event, 449	MHA_VERSION_MAJOR
MHA_TCP::Thread, 449	mha.h, 950
~Thread, 452	MHA VERSION MINOR
arg, 452	mha.h, 950
error, 453	MHA VERSION RELEASE
FINISHED, 451	mha.h, 951
PREPARED, 451	MHA_VERSION_STRING
RUNNING, 451	mha.h, 951
return_value, 452	MHA VERSION
run, 452	mha.h, 951
•	MHA WAVEFORM
state, 452 thr_f, 451	mha.h, 951
Thread, 451	MHA XSTRF
	_
thread_arg, 453	mha.h, 950
thread_attr, 452	MHA_assert
thread_finish_event, 452	Error handling in the openMHA, 32
thread_func, 453	MHA_assert_equal
thread_handle, 452	Error handling in the openMHA, 32

MHADestroy_cb	W, 478
PluginLoader::mhapluginloader_t, 847	X, 478
MHADestroy_t	MHAFilter::adapt_filter_t, 478
mha.h, 952	adapt_filter_t, 479
MHAEvents, 90	connector, 480
MHAEvents::connector_base_t, 469	err_in, 480
~connector_base_t, 469	filter, 479
connector_base_t, 469	mu, 480
emit_event, 470	nchannels, 480
emitter_die, 470	ntaps, 480
emitter_is_alive, 470	set_channelcnt, 479
MHAEvents::connector_t	update_mu, 479
~connector_t, 472	update_ntaps, 479
connector_t, 472	MHAFilter::blockprocessing_polyphase_←
emit_event, 472	resampling_t, 480
emitter, 473	~blockprocessing_polyphase_resampling
eventhandler, 473	_t, 481
eventhandler_s, 473	blockprocessing_polyphase_resampling ←
eventhandler_suu, 473	_t, 481
receiver, 473	can_read, 482
MHAEvents::connector_t< receiver_t >, 471	fragsize in, 482
MHAEvents::emitter_t, 473	fragsize_out, 482
\sim emitter_t, 474	num_channels, 482
connect, 474	read, 482
connections, 474	resampling, 482
disconnect, 474	write, 481
operator(), 474	MHAFilter::complex_bandpass_t, 483
MHAEvents::patchbay_t	A_, 485
~patchbay t, 475	B_, 485
connect, 475, 476	complex_bandpass_t, 484
cons, 476	creator_A, 484
MHAEvents::patchbay_t< receiver_t >, 475	creator_B, 484
MHAFilter, 90	filter, 484, 485
butter_stop_ord1, 92	get_weights, 484
gcd, 93	inspect, 485
make_friendly_number, 92	set_state, 484
o1 lp coeffs, 92	set weights, 484
resampling factors, 93	Yn, 485
sinc, 93	MHAFilter::diff_t, 485
spec2fir, 93	diff_t, 486
MHAFilter::adapt_filter_param_t, 476	MHAFilter::fftfilter_t, 486
adapt_filter_param_t, 477	~fftfilter t, 488
err_in, 477	channels, 489
mu, 477	fft, 490
MHAFilter::adapt_filter_state_t, 477	fftfilter_t, 487
• — — —	fftlen, 489
adapt_filter_state_t, 478	
filter, 478	filter, 488, 489
nchannels, 478	fragsize, 489
ntaps, 478	sInput, 490
od, 478	sWeights, 490
oy, 478	update_coeffs, 488

wIRS_fft, 490	operator(), 499, 500
wInput, 490	phase correction, 500
wInput_fft, 489	reset_state, 500
wOutput, 490	resynthesis_gain, 501
•	
wOutput_fft, 490	set_weights, 500
MHAFilter::fftfilterbank_t, 490	srate_, 501
\sim fftfilterbank_t, 492	MHAFilter::iir_filter_state_t, 501
fft, 494	iir_filter_state_t, 502
fftfilterbank_t, 491	MHAFilter::iir_filter_t, 502
fftlen, 493	A, 505
filter, 492, 493	B, 505
firchannels, 493	connector, 505
fragsize, 493	filter, 504
get_irs, 493	iir_filter_t, 503
Hs, 493	nchannels, 505
hw, 493	resize, 505
inputchannels, 493	update filter, 505
•	• = •
outputchannels, 493	MHAFilter::iir_ord1_real_t, 505
tail, 494	A_, 508
update_coeffs, 492	B_, 508
Xs, 493	iir_ord1_real_t, 506
xw, 493	operator(), 507
Ys, 494	set_state, 507
yw, 493	Yn, 508
yw_temp, 494	MHAFilter::o1_ar_filter_t, 508
· — · ·	
MHAFilter::filter_t, 494	c1_a, 511
~filter_t, 496	c1_r, 511
A, 497	c2_a, 511
B, 497	c2_r, 511
channels, 498	fs, 511
filter, 496, 497	o1_ar_filter_t, 509
filter t, 495, 496	operator(), 510, 511
get len A, 497	set tau attack, 510
get_len_B, 497	set tau release, 510
len, 498	MHAFilter::o1flt_lowpass_t, 511
•	— · —
len_A, 498	get_c1, 513
len_B, 498	get_last_output, 513
state, 498	o1flt_lowpass_t, 513
MHAFilter::gamma_flt_t, 498	set_tau, 513
\sim gamma_flt_t, 499	MHAFilter::o1flt_maxtrack_t, 514
A, 500	o1flt_maxtrack_t, 515
bw_, 501	set_tau, 515
cf_, 501	MHAFilter::o1flt_mintrack_t, 515
delay, 500	o1flt_mintrack_t, 517
• •	— — ·
envelope_delay, 501	set_tau, 517
gamma_flt_t, 499	MHAFilter::partitioned_convolution_t, 517
get_A, 500	\sim partitioned_convolution_t, 519
get_resynthesis_gain, 500	bookkeeping, 520
get_weights, 500	current_input_signal_buffer_half_index,
GF, 500	520
inspect, 500	current_output_partition_index, 520
1 ,	

fft, 521	cf_generator, 532
filter_partitions, 519	cfg_, 532
fragsize, 519	dup, 532
frequency_response, 520	fb, 533
input_signal_spec, 520	get_cf_hz, 532
input_signal_wave, 519	nbands, 532
nchannels in, 519	nchannels, 532
nchannels out, 519	out_chunk, 533
output_partitions, 519	out_chunk_im, 533
output_signal_spec, 520	process, 532
output_signal_wave, 520	thirdoctave_analyzer_t, 532
partitioned_convolution_t, 518	MHAFilter::transfer_function_t, 533
process, 519	impulse_response, 535
MHAFilter::partitioned_convolution_t::index	isempty, 535
t, 521	non_empty_partitions, 534
delay, <mark>522</mark>	partitions, 534
index t, 521, 522	source_channel_index, 535
source_channel_index, 522	target_channel_index, 535
target_channel_index, 522	transfer_function_t, 534
MHAFilter::polyphase_resampling_t, 522	MHAFilter::transfer_matrix_t, 536
downsampling_factor, 526	non_empty_partitions, 536
impulse_response, 526	partitions, 536
now_index, 526	MHAGetVersion_cb
polyphase_resampling_t, 524	PluginLoader::mhapluginloader_t, 847
read, 525	MHAGetVersion t
readable_frames, 525	mha.h, 952
ringbuffer, 526	MHAIOFile.cpp, 1000
underflow, 526	DEBUG, 1001
upsampling_factor, 526	dummy_interface_test, 1001, 1002
write, 525	ERR_IHANDLE, 1001
MHAFilter::resampling_filter_t, 527	ERR_SUCCESS, 1001
fragsize, 528	ERR_USER, 1001
fragsize_validator, 528	IODestroy, 1001, 1002
resampling_filter_t, 527	IOInit, 1001
MHAFilter::smoothspec_t, 528	IOPrepare, 1001
_linphase_asym, 531	IORelease, 1001, 1002
\sim smoothspec_t, 530	IOSetVar, 1001, 1002
fft, 531	IOStart, 1001, 1002
fftlen, 531	IOStop, 1001, 1002
internal_fir, 531	IOStrError, 1001, 1002
minphase, 531	MAX_USER_ERR, 1001
nchannels, 531	user_err_msg, 1002
smoothspec, 530	MHAIOJack, 94
smoothspec_t, 529	MHAIOJack.cpp, 1002
spec2fir, 530	dummy_interface_test, 1004, 1005
tmp_spec, 531	ERR_IHANDLE, 1003
tmp_wave, 531	ERR_SUCCESS, 1003
window, 531	ERR_USER, 1003
MHAFilter::thirdoctave_analyzer_t, 531	IODestroy, 1004, 1005
bw_generator, 532	IOInit, 1003, 1004
cf, 532	IOPrepare, 1004

16
41
544
r, 543
,
4
44
ts, <mark>543</mark>
orts, <mark>54</mark> 4
543
0.0
5
•
4
14
3
, 544
, •
1

state_xruns, 545	cmd_prepare, 549
use_jack_transport, 544	cmd_release, 550
MHAIOParser.cpp, 1008	cmd_start, 549
dummy_interface_test, 1009, 1010	cmd_start, 549
ERR_IHANDLE, 1009	device_index, 550
ERR_SUCCESS, 1009	device_index_updated, 549
ERR USER, 1009	device_index_updated, 549 device_info, 550
IODestroy, 1009, 1010	device_name, 550
IOInit, 1009	device_name_updated, 549
IOPrepare, 1009	fragsize, 550
IORelease, 1009, 1010	io_portaudio_t, 549
IOSetVar, 1009, 1010	nchannels_in, 550
IOStart, 1009	nchannels_out, 550
IOStop, 1009, 1010	patchbay, 550
IOStrError, 1009, 1010	portaudio_callback, 550
MAX_USER_ERR, 1009	portaudio_stream, 550
user_err_msg, 1010	proc_event, 550
MHAIOPortAudio, 94	proc_handle, 550
parserFriendlyName, 95	s_in, 550
MHAIOPortAudio.cpp, 1010	s_out, 550
dummy_interface_test, 1012, 1013	samplerate, 550
ERR_IHANDLE, 1012	start_event, 550
ERR_SUCCESS, 1012	start_handle, 550
ERR_USER, 1012	stop_event, 550
IODestroy, 1012, 1013	stop_handle, 550
IOInit, 1012	MHAIOTCP.cpp, 1013
IOPrepare, 1012	copy_error, 1016
IORelease, 1012, 1013	dummy_interface_test, 1015, 1016
IOSetVar, 1012, 1013	ERR_IHANDLE, 1015
IOStart, 1012, 1013	ERR_SUCCESS, 1015
IOStop, 1012, 1013	ERR_USER, 1015
IOStrError, 1012, 1013	IODestroy, 1015, 1016
MAX_USER_ERR, 1012	IOInit, 1015, 1016
portaudio_callback, 1012, 1013	IOPrepare, 1015, 1016
user_err_msg, 1013	IORelease, 1015, 1016
MHAIOPortAudio::device_info_t, 546	IOSetVar, 1015, 1016
defaultHighInputLatency, 547	IOStart, 1015, 1016
defaultHighOutputLatency, 547	IOStop, 1015, 1016
defaultLowInputLatency, 547	IOStrError, 1015, 1016
defaultLowOutputLatency, 547	MAX_TCP_PORT_STR, 1015
defaultSampleRate, 547	MAX_TCP_PORT, 1015
device_info_t, 547	MAX_USER_ERR, 1015
fill_info, 547	MHA ErrorMsg2, 1015
hostApi, 547	MHA ErrorMsg3, 1015
maxInputChannels, 547	MIN_TCP_PORT_STR, 1015
maxOutputChannels, 547	MIN_TCP_PORT, 1015
name, 547	thread_startup_function, 1016
numDevices, 547	user_err_msg, 1017
structVersion, 547	MHAInit cb
MHAIOPortAudio::io_portaudio_t, 548	PluginLoader::mhapluginloader_t, 847
~io_portaudio_t, 549	MHAInit t

mha.h, 952	get_srate, 560
MHAJACK_FW_STARTED	get_xruns, 560
mhajack.h, 1019	get_xruns_reset, 560
MHAJACK_STARTING	inch, 562
mhajack.h, 1019	input_portnames, 562
MHAJACK STOPPED	internal_start, 561
_	internal_start, 501
mhajack.h, 1019	<u> </u>
MHAJack, 95	jack_proc_cb, 561
get_port_capture_latency, 96	jack_xrun_cb, 561
get_port_capture_latency_int, 96	jc, 562
get_port_playback_latency, 97	jstate_prev, <mark>562</mark>
get_port_playback_latency_int, 97	nchannels_in, <mark>561</mark>
io, 96	nchannels_out, 561
MHAJack::client_avg_t, 551	num_xruns, 561
b_ready, 553	outch, 562
b_stopped, 553	output_portnames, 562
client_avg_t, 552	prepare, 558, 559
frag_out, 553	prepare_impl, 560
IOStoppedEvent, 553	proc event, 561
io, 552	proc_handle, 561
n, 553	release, 559
name, 553	s_in, 562
	- :
nrep, 553	s_out, 562
pos, 553	samplerate, 561
proc, 553	set_input_portnames, 560
sn_in, 553	set_output_portnames, 560
sn_out, 553	set_use_jack_transport, 560
MHAJack::client_noncont_t, 554	start, 559
b_stopped, 555	start_event, 562
client_noncont_t, 555	start_handle, 562
frag_out, 556	stop, 559
IOStoppedEvent, 555	stop_event, 562
io, 555	stop_handle, 562
name, 556	stopped, 561
pos, 555	str_error, 560
proc, 555	use_jack_transport, 562
sn_in, 555	MHAJack::port_t, 562
sn_out, 556	~port_t, 564
MHAJack::client t, 556	connect_to, 565
b prepared, 562	dir t, 563
— •	<u> </u>
client_t, 558	dir_type, 565
connect_input, 559	get_short_name, 565
connect_output, 559	input, 563
fail_on_async_jackerror, 562	iob, 565
flags, 562	jc, 565
fragsize, 561	mute, 564
get_cpu_load, 560	output, 563
get_fragsize, 559	port, 565
get_my_input_ports, 560	port_t, 563, 564
get_my_output_ports, 560	read, 564
get_ports, 560	write, 564
-	

MHAKernel, 97	hz2erb, 101
algo_comm_safe_cast, 97	hz2erb_glasberg1990, 101
MHAKernel::algo_comm_class_t, 566	hz2hz, 100
\sim algo_comm_class_t, 567	hz2khz, 100
ac, 569	hz2log, 101
algo_comm_class_t, 567	hz2octave, 100
algo_comm_id_string, 569	hz2third_octave, 100
algo_comm_id_string_len, 569	inv_scale, 101
get_c_handle, 567	MHAOvlFilter::ShapeFun, 102
get_entries, 568	expflt, 103
get_error, 568	gauss, 103
get_var, 568	hann, 103
get_var_float, 568	linear, 102
get_var_int, 568	rect, 102
insert_var, 567	MHAOvlFilter::band_descriptor_t, 575
insert_var_float, 567	cf, 576
insert_var_int, 567	cf_h, 576
is_var, 567	cf_l, 576
local_get_entries, 568	ef_h, 576
local_get_var, 568	ef_I, 576
local_insert_var, 568	high_side_flat, 576
local_is_var, 568	low_side_flat, 576
local_remove_ref, 568	MHAOvlFilter::barkscale, 99
local_remove_var, 568	vbark, 99
remove_ref, 567	vfreq, 99
remove_var, 567	MHAOvlFilter::barkscale::bark2hz_t, 576
size, 568	~bark2hz_t, 577
vars, 569	bark2hz_t, 577
MHAKernel::comm_var_map_t, 569	MHAOvlFilter::barkscale::hz2bark_t, 577
has_key, 569	~hz2bark_t, 578
MHAMultiSrc, 97	hz2bark_t, 578
MHAMultiSrc::base t, 570	MHAOvlFilter::fftfb_ac_info_t, 578
ac, 571	bwv, 579
base_t, 571	cLTASS, 579
select_source, 571	cfv, 578
MHAMultiSrc::channel_t, 571	efv, 578
channel, 571	fftfb ac info t, 578
name, 571	insert, 578
MHAMultiSrc::channels_t, 572	MHAOvlFilter::fftfb_t, 579
channels_t, 572	~fftfb_t, 580
MHAMultiSrc::spectrum_t, 573	apply_gains, 580
spectrum t, 573	bin1, 581
update, 573	bin2, 581
MHAMultiSrc::waveform_t, 574	fftfb_t, 580
update, 575	fftlen, 581
waveform_t, 575	get_fbpower, 580
MHAOvlFilter, 98	get_fbpower_db, 580
scale_fun_t, 99	get_fftlen, 581
MHAOvlFilter::FreqScaleFun, 99	get_ltass_gain_db, 581
hz2bark, 101	samplingrate, 581
hz2bark_analytic, 101	shape, 581

vbin1, 581	overlap_save_filterbank_analytic_t, 591
vbin2, 581	MHAOvIFilter::overlap_save_filterbank_t, 591
w, 581	channelconfig_out_, 593
MHAOvlFilter::fftfb_vars_t, 582	get_channelconfig, 593
cLTASS, 584	overlap_save_filterbank_t, 593
cf, 584	MHAOvlFilter::overlap_save_filterbank_t
ef, 584	::vars_t, 593
f, 583	fftlen, 594
fail_on_nonmonotonic, 584	irswnd, 594
fail_on_unique_bins, 584	phasemodel, 594
fftfb_vars_t, 583	vars_t, 594
fscale, 583	MHAOvIFilter::scale_var_t, 595
ftype, 583	add_fun, 596
normalize, 584	funs, 596
ovltype, 583	get_fun, 596
plateau, 583	get_name, 596
shapes, 584	hz2unit, 596
•	
MHAOvlFilter::fscale_bw_t, 584	names, 596
bw, 585	scale_var_t, 596
bw_hz, 585	unit2hz, 596
fscale_bw_t, 585	MHAPLATFORM
get_bw_hz, 585	mha_parser.cpp, 973
update_hz, 585	MHAPLUGIN_CALLBACKS_PREFIX
updater, 585	The openMHA Plugins (programming in-
MHAOvlFilter::fscale_t, 586	terface), 8
f, 587	MHAPLUGIN_CALLBACKS
f_hz, 587	The openMHA Plugins (programming in-
fscale_t, 587	terface), 8
get_f_hz, 587	MHAPLUGIN_DOCUMENTATION_PREFIX
unit, 587	mha_plugin.hh, 979
update_hz, 587	MHAPLUGIN_DOCUMENTATION
updater, 587	The openMHA Plugins (programming in-
MHAOvlFilter::fspacing_t, 587	terface), 9
bands, 589	MHAPLUGIN_INIT_CALLBACKS_PREFIX
cf2bands, 589	mha_plugin.hh, 979
ef2bands, 589	MHAPLUGIN_INIT_CALLBACKS
equidist2bands, 589	mha_plugin.hh, 979
fail_on_nonmonotonic_cf, 589	MHAPLUGIN_OVERLOAD_OUTDOMAIN
fail_on_unique_fftbins, 589	altplugs.cpp, 931
fs_, 589	mha_generic_chain.h, 967
fspacing_t, 589	split.cpp, 1032
get_cf_fftbin, 589	wave2spec.cpp, 1036
get_cf_hz, 589	MHAPLUGIN_PROC_CALLBACK_PREFIX
get_ef_hz, 589	mha_plugin.hh, 979
nbands, 589	MHAPLUGIN_PROC_CALLBACK
nfft_, 589	mha_plugin.hh, 979
symmetry_scale, 589	MHAParser, 103
MHAOvlFilter::overlap_save_filterbank_←	all_dump, 107
analytic_t, 590	all_ids, 107
filter_analytic, 591	c_parse_cmd_t, 107
imagfb, 591	c_parse_err_t, 107
inagio, oo i	o_paioo_oi1_i, 107

cfg_dump, 107	query_savefile_compact, 603
cfg_dump_short, 107	query_savemons, 603
commentate, 107	query_subst, 603
entry_map_t, 107	query_type, 602
envreplace, 108	query_val, 602
get_precision, 107	query_version, 603
mon_dump, 107	readaccess, 605
opact_map_t, 107	repl_list, 605
opact_t, 107	repl_list_t, 600
query_map_t, 107	rm_parent_on_remove, 604
query_t, 107	set_help, 604
strreplace, 107	set_node_id, 603
trim, 107	thefullname, 605
MHAParser::StrCnv, 108	valuechanged, 604
bracket_balance, 110	writeaccess, 604
num brackets, 109	MHAParser::base_t::replace_t, 606
str2val, 110, 111	a, 606
str2val< mha_real_t >, 110	b, 606
val2str, 111, 112	get_a, 606
MHAParser::base_t, 597	get_b, 606
~base_t, 600	replace, 606
activate_query, 604	replace_t, 606
add_parent_on_insert, 604	MHAParser::bool_mon_t, 607
add_replace_pair, 604	bool_mon_t, 607
base_t, 600	data, 608
data_is_initialized, 605	query_type, 608
fullname, 604	query_val, 608
help, 605	MHAParser::bool_t, 608
id str, 605	bool_t, 610
nested_lock, 605	data, 610
notify, 604	op_setval, 610
op_query, 601	query_type, 610
op_setval, 601	query_type, 010 query_val, 610
op_subparse, 601	MHAParser::c ifc parser t, 611
operators, 605	~c_ifc_parser_t, 612
oplist, 604	c_ifc_parser_t, 612
parent, 605	c_parse_cmd, 613
parent, 603 parse, 600, 601	c_parse_err, 613
prereadaccess, 605	libdata, 613
queries, 605	liberr, 613
query_addsubst, 603	modulename, 613
query_cmds, 603	
• •	op_query, 612
query_dump, 601	op_setval, 612
query_entries, 601	op_subparse, 612
query_help, 603	ret_size, 613
query_id, 603	retv, 613
query_listids, 603	set_parse_cb, 612
query_perm, 602	test_error, 612
query_range, 602	MHAParser::commit_t
query_readfile, 602	commit_t, 615
query_savefile, 602	extern_connector, 615

MHAParser::commit_t< receiver_t >, 613	keyword_list_t, 630
MHAParser::complex_mon_t, 615	set_entries, 631
complex_mon_t, 616	set_index, 631
data, 617	set value, 631
query_type, 616	size t, 630
query_val, 616	validate, 631
MHAParser::complex_t, 617	MHAParser::kw t, 632
complex_t, 618	data, 635
data, 619	isval, 634
op_setval, 618	kw_t, 633, 634
query_type, 618	op_setval, 634
query_val, 618	query_range, 634
MHAParser::entry_t, 619	query_type, 634
entry, 619	query_val, 634
entry_t, 619	set_range, 634
name, 619	validate, 634
MHAParser::expression t, 620	MHAParser::mcomplex_mon_t, 635
expression_t, 620	data, 636
lval, 620	mcomplex_mon_t, 636
op, 620	query_type, 636
rval, 620	query_val, 636
MHAParser::float_mon_t, 621	MHAParser::mcomplex_t, 637
data, 622	data, 638
float_mon_t, 621	mcomplex_t, 638
query_type, 622	op_setval, 638
query_val, 622	query_type, 638
MHAParser::float_t, 622	query_val, 638
data, 625	MHAParser::mfloat_mon_t, 639
float_t, 624	data, 640
op_setval, 624	mfloat_mon_t, 639
query_type, 624	query_type, 640
query_val, 624	query_val, 640
MHAParser::int_mon_t, 625	MHAParser::mfloat_t, 640
data, 627	data, 643
int_mon_t, 626	mfloat_t, 642
query_type, 626	op_setval, 642
query_val, 626	query_type, 642
MHAParser::int_t, 627	query_val, 642
data, 629	MHAParser::mhaconfig_mon_t, 643
int_t, 628	channels, 644
op_setval, 629	domain, 644
query_type, 629	fftlen, 644
query_val, 629	fragsize, 644
MHAParser::keyword_list_t, 629	mhaconfig_mon_t, 644
add_entry, 631	srate, 645
empty_string, 632	update, 644
entries, 632	wndlen, 644
get_entries, 631	MHAParser::mhapluginloader_t, 645
get_index, 631	~mhapluginloader_t, 646
get_value, 631	ac_, 647
index, 632	bookkeeping, 647

	cf_in_, 647	MHAParser::range_var_t, 656
	cf_out_, 647	check_low, 658
	connector, 647	check_range, 658
	get_cfin, 647	check_up, 658
	get_cfout, 647	low_incl, 658
	get_last_name, 647	low_limit, 658
	last_name, 647	query_range, 657
	load_plug, 647	range_var_t, 657
	mhapluginloader_t, 646	set_range, 657
	parent_, 647	up_incl, 658
	plug, 647	up_limit, 658
	plugname, 647	validate, 657, 658
	plugname_name_, 647	MHAParser::string_mon_t, 659
	prefix_, 647	data, 660
	prepare, 646	query_type, 660
	process, 646, 647	query_val, 660
	release, 646	string mon t, 659
\/I ⊢	IAParser::mint mon t, 648	MHAParser::string t, 660
IVII	data, 649	data, 662
	mint_mon_t, 648	op_setval, 662
	query_type, 649	query type, 662
	query_val, 649	query_val, 662
N /I L	IAParser::monitor_t, 649	string_t, 662
IVII	monitor_t, 650	MHAParser::variable_t, 663
	- :	locked, 664
	op_query, 650	op_setval, 664
	query_dump, 650	• —
N // L	query_perm, 650	query_perm, 664
IVII	IAParser::parser_t, 651	setlock, 664
	~parser_t, 653	variable_t, 664
	entries, 655	MHAParser::vcomplex_mon_t, 665
	force_remove_item, 653	data, 667
	id_string, 655	query_type, 667
	insert_item, 653	query_val, 667
	last_errormsg, 655	vcomplex_mon_t, 666
	op_query, 654	MHAParser::vcomplex_t, 667
	op_setval, 654	data, 669
	op_subparse, 654	op_setval, 669
	parser_t, 652	query_type, 669
	query_dump, 654	query_val, 669
	query_entries, 654	vcomplex_t, 669
	query_listids, 655	MHAParser::vfloat_mon_t, 670
	query_readfile, 654	data, 671
	query_savefile, 654	query_type, 671
	query_savefile_compact, 655	query_val, 671
	query_savemons, 655	vfloat_mon_t, 671
	query_type, 654	MHAParser::vfloat_t, 672
	query_val, 655	data, 674
	remove_item, 653, 654	op_setval, 673
	set_id_string, 655	query_type, 673
	srcfile, 655	query_val, 673
	srcline, 655	vfloat_t, 673

MHAParser::vint_mon_t, 674	last_config, 689
data, 675	poll_config, 689
query_type, 675	push_config, 689
query_val, 675	remove_all_cfg, 691
vint_mon_t, 675	MHAPlugin::config_t< runtime_cfg_t >, 686
MHAParser::vint_t, 676	MHAPlugin::plugin_t
data, 678	\sim plugin_t, 693
op_setval, 677	ac, 695
query_type, 677	input_cfg, 694
query_val, 677	input_cfg_, 695
vint_t, 677	is_prepared, 694
MHAParser::vstring_mon_t, 678	is prepared , 695
data, 679	mhaconfig_in, 695
query_type, 679	mhaconfig_out, 695
query_val, 679	output_cfg, 695
vstring mon t, 679	output_cfg_, 695
MHAParser::vstring_t, 680	plugin_t, 693
data, 681	prepare, 693
op_setval, 681	prepare_, 694
query_type, 681	release, 694
query_val, 681	release_, 694
vstring_t, 681	tftype, 695
MHAParser::window_t, 682	MHAPlugin::plugin_t< runtime_cfg_t >, 691
get_type, 684	MHAPlugin_Resampling, 113
get_window, 683, 684	MHAPlugin_Resampling::resampling_if_
user, 684	t, 696
window_t, 683	algo, 697
wnd_bartlett, 683	chain, 697
wnd_blackman, 683	fragsize, 697
wnd_hamming, 683	irslen_inner2outer, 697
wnd hann, 683	irslen_outer2inner, 697
wnd rect, 683	nyquist_ratio, 697
wnd_user, 683	plugloader, 697
wtype, 684	prepare, 697
wtype t, 683	process, 697
MHAPlugin, 112	release, 697
MHAPlugin::cfg_chain_t	resampling_if_t, 697
~cfg_chain_t, 686	srate, 697
cfg_chain_t, 686	MHAPlugin_Resampling::resampling_t, 698
data, 686	inner2outer_resampling, 699
next, 686	inner fragsize, 699
not_in_use, 686	inner_signal, 699
MHAPlugin::cfg_chain_t< runtime_cfg_t >,	inner_srate, 699
685	nchannels_in, 699
MHAPlugin::config_t	nchannels_out, 699
\sim config_t, 689	outer2inner_resampling, 699
cfg, 691	outer_fragsize, 698
cfg_chain, 691	outer_srate, 699
cfg_chain_current, 691	output_signal, 699
cleanup_unused_cfg, 691	plugloader, 699
config_t, 689	process, 698
U _ /	

resampling_t, 698	framework_thread_priority, 714
MHAPlugin_Split, 113	framework_thread_scheduler, 713
INVALID_THREAD_PRIORITY, 114	patchbay, 713
MHAPlugin_Split::domain_handler_t, 699	prepare_, 712
~domain_handler_t, 701	process, 712
deallocate_domains, 702	release_, 712
domain_handler_t, 701	signal_out, 713
get_signal, 703	spec_out, 714
operator=, 701	split_t, 712
process, 703	thread_platform, 713
processor, 704	trigger_processing, 712
put_signal, 702	update, 712
set_input_domain, 701	wave_out, 714
set_output_domain, 701	worker_thread_priority, 713
spec_in, 704	worker_thread_scheduler, 713
spec_out, 704	MHAPlugin_Split::splitted_part_t, 714
wave_in, 704	~splitted_part_t, 716
wave_out, 704	collect_result, 718
MHAPlugin_Split::dummy_threads_t, 704	domain, 718
catch_thread, 705	operator=, 717
dummy_threads_t, 705	parse, 717
kick_thread, 705	plug, 718
MHAPlugin_Split::posix_threads_t, 706	prepare, 717
~posix_threads_t, 708	release, 717
attr, 709	splitted_part_t, 716
catch_condition, 709	thread, 719
catch_thread, 708	trigger_processing, 718
current_thread_priority, 708	MHAPlugin_Split::thread_platform_t, 719
current_thread_scheduler, 708	\sim thread_platform_t, 720
kick_condition, 708	catch_thread, 721
kick_thread, 708	kick_thread, 721
kicked, 709	operator=, 721
main, 708	processor, 721
mutex, 708	thread_platform_t, 720
posix_threads_t, 707	MHAPlugin_Split::uni_processor_t, 722
priority, 709	\sim uni_processor_t, 722
processing_done, 709	process, 723
scheduler, 709	MHAPluginCategory_t
termination_request, 709	mha.h, 953
thread, 709	MHAPluginDocumentation_t
thread_start, 708	mha.h, 953
MHAPlugin_Split::split_t, 710	MHAPrepare_cb
∼split_t, 712	PluginLoader::mhapluginloader_t, 847
algos, 713	MHAPrepare_t
chains, 714	mha.h, 952
channels, 713	MHAProc_spec2spec_cb
clear_chains, 712	PluginLoader::mhapluginloader_t, 847
collect_result, 712	MHAProc_spec2spec_t
copy_output_spec, 712	mha.h, 953
copy_output_wave, 712	MHAProc_spec2wave_cb
delay, 714	PluginLoader::mhapluginloader_t, 848

MHAProc_spec2wave_t	MHASignal::delay_wave_t, 731
mha.h, 953	\sim delay_wave_t, 732
MHAProc_wave2spec_cb	buffer, 732
PluginLoader::mhapluginloader_t, 847	delay, <mark>732</mark>
MHAProc_wave2spec_t	delay_wave_t, 732
mha.h, 953	pos, 732
MHAProc_wave2wave_cb	process, 732
PluginLoader::mhapluginloader_t, 847	MHASignal::doublebuffer_t, 732
MHAProc_wave2wave_t	\sim doublebuffer_t, 734
mha.h, 953	ch, 735
MHARelease_cb	doublebuffer_t, 733
PluginLoader::mhapluginloader_t, 847	inner_in, 735
MHARelease_t	inner_out, 735
mha.h, 952	inner_process, 734
MHASet_cb	k_inner, 735
PluginLoader::mhapluginloader_t, 848	k_outer, 735
MHASet t	min, 734
mha.h, 952	outer_out, 735
MHASignal, 114	outer_process, 734
copy_permuted, 120	this_outer_out, 735
kth_smallest, 117	MHASignal::fft_t, 735
limit, 117	∼fft t, 736
mean, 119	backward, 737
median, 118	backward_scale, 737
quantile, 119	buf_in, 738
saveas_mat4, 119, 120	buf_out, 738
scale, 117	fft_t, 736
signal_counter, 121	fftw_plan_fft, 738
MHASignal::async_rmslevel_t, 726	fftw_plan_ifft, 738
async_rmslevel_t, 727	fftw_plan_spec2wave, 738
filled, 728	fftw_plan_wave2spec, 738
peaklevel, 728	forward, 736
pos, 728	forward_scale, 737
process, 728	n im, 738
rmslevel, 727	n_re, 738
MHASignal::delay_spec_t, 728	nfft, 738
~delay_spec_t, 729	scale, 738
buffer, 729	sort_fftw2spec, 737
delay, 729	sort_spec2fftw, 737
delay_spec_t, 729	spec2wave, 736
pos, 729	spec2wave scale, 737
process, 729	wave2spec, 736
MHASignal::delay_t, 729	wave2spec_scale, 737
~delay_t, 730	MHASignal::hilbert_fftw_t, 738
buffer, 731	buf_c_in, 739
channels, 731	buf_c_out, 739
	_ -
delay_t, 730	buf_r_in, 739
delays, 731	buf_r_out, 739
inspect, 731	hilbert, 739
pos, 731	hilbert_fftw_t, 739
process, 730	n, 739

p1, 739	real, 749–751
p2, 739	size, 749
sc, 739	write, 752
MHASignal::hilbert_t, 739	MHASignal::minphase_t, 753
\sim hilbert_t, 740	minphase_t, 754
h, 740	operator(), 754
hilbert_t, 740	phase, 755
operator(), 740	MHASignal::quantizer_t, 755
MHASignal::loop_wavefragment_t, 741	downscale, 756
add, 742	limit, 756
b_loop, 744	operator(), 756
get_mapping, 743	quantizer_t, 755
input, 742	up_limit, 756
intern_level, 744	upscale, 756
is_playback_active, 744	MHASignal::ringbuffer_t, 756
level mode t, 742	contained frames, 758
locate end, 744	discard, 759
loop_wavefragment_t, 742	next_read_frame_index, 759
mute, 742	next_write_frame_index, 760
peak, 742	ringbuffer_t, 758
•	<u> </u>
playback, 743, 744	value, 758
playback_channels, 744	write, 759
playback_mode_t, 742	MHASignal::schroeder_t, 760
pos, 744	down, 762
relative, 742	groupdelay_t, 761
replace, 742	identity, 763
rewind, 744	log_down, 763
rms, 742	log_up, 763
rms_limit40, 742	schroeder_t, 762
set_level_db, 744	sign_t, 762
set_level_lin, 744	up, 762
MHASignal::matrix_t, 745	MHASignal::spectrum_t, 763
\sim matrix_t, 748	\sim spectrum_t, 765
cdata, 753	copy, 766
complex_ofs, 753	copy_channel, 767
dimension, 749	export_to, 767
get_cdata, 753	operator(), 766
get_comm_var, 748	operator[], 766
get_index, 752	scale, 767
get_nelements, 749	scale_channel, 768
get_nreals, 752	spectrum_t, 765
get_rdata, 753	value, 766
imag, 750-752	MHASignal::stat_t, 768
is_same_size, 749	mean, 769
iscomplex, 749	mean_std, 769
matrix_t, 747, 748	n, 769
nelements, 753	push, 769
numbytes, 752	stat_t, 769
operator(), 750–752	sum, 769
operator=, 748	sum2, 769
rdata, 753	MHASignal::subsample_delay_t, 769
·	/_/

last_complex_bin, 771	MHATableLookup, 121
phase_gains, 771	MHATableLookup::linear_table_t, 787
process, 771	\sim linear_table_t, 789
subsample_delay_t, 770	add_entry, 790
MHASignal::uint_vector_t, 772	clear, 790
~uint_vector_t, 773	interp, 789
data, 774	len, 791
get_length, 774	linear_table_t, 789
getdata, 774	lookup, 789
length, 774	prepare, 790
numbytes, 774	scalefac, 791
operator=, 773	set_xmax, 790
operator==, 773	set_xmin, 789
operator[], 774	vec_y, 791
uint_vector_t, 773	vy, 791
write, 774	xmax, 791
MHASignal::waveform_t, 775	xmin, 791
~waveform_t, 777	MHATableLookup::table_t, 791
assign, 781	~table t, 792
assign_channel, 781	clear, 792
assign_frame, 781	interp, 792
copy, 782	lookup, 792
copy_channel, 782	table_t, 792
• • —	MHATableLookup::xy_table_t, 793
copy_from_at, 782	, , , —
export_to, 783	add_entry, 795
get_size, 785	clear, 795
limit, 783	get_xlimits, 796
operator(), 778, 779	interp, 794
operator=, 778	lookup, 794
operator[], 778	mXY, 796
power, 783	set_xfun, 795
powspec, 784	set_xyfun, 796
scale, 784	set_yfun, 796
scale_channel, 784	xfun, 796
scale_frame, 785	xy_table_t, 794
sum, 779, 780	xyfun, 796
sum_channel, 780	yfun, 796
sumsqr, 780	MHAWindow, 121
value, 778, 779	bartlett, 122
waveform_t, 777	blackman, 123
MHASndFile, 121	hamming, 123
MHASndFile::sf_t, 785	hanning, 123
∼sf_t, 786	rect, 122
sf, 786	MHAWindow::bartlett_t, 797
sf_t, 786	bartlett_t, 797
MHASndFile::sf_wave_t, 786	MHAWindow::base_t, 798
sf_wave_t, 787	base_t, 798, 799
MHAStrError_cb	operator(), 799
PluginLoader::mhapluginloader_t, 848	ramp_begin, 799
MHAStrError_t	ramp_end, 799
mha.h, 953	MHAWindow::blackman_t, 800

blackman_t, 800	mixer, 377
MHAWindow::fun_t, 801	patchbay, 377
fun_t, 801	prepare, 377
MHAWindow::hamming_t, 802	process, 377
hamming_t, 803	update_m, 377
MHAWindow::hanning_t, 803	max
hanning_t, 804	spec2wave.cpp, 1028
MHAWindow::rect_t, 804	Vector and matrix processing toolbox, 58
rect_t, 805	max_clipped
MHAWindow::user_t, 805	softclipper_variables_t, 884
user_t, 806	max_fill_count
MIN_TCP_PORT_STR	mha_fifo_t, 421
MHAIOTCP.cpp, 1015	max_frames
MIN_TCP_PORT	acsave::cfg_t, 162
MHAIOTCP.cpp, 1015	max_lag
MIN	doasym_feature_extraction, 271
	-
mha_defs.h, 956 mXY	max_level_difference
	dc::dc_t, 243
MHATableLookup::xy_table_t, 796	dc::dc_vars_t, 245
main	max_p_ind_name
analysemhaplugin.cpp, 931	doasvm_classification, 267
browsemhaplugins.cpp, 933	max_pool_ind_name
generatemhaplugindoc.cpp, 943	acPooling_wave, 155
MHAPlugin_Split::posix_threads_t, 708	max_q
mha.cpp, 948	timoConfig, 907
testalsadevice.c, 1033	max_q_AC
make_friendly_number	timo_AC, 902
MHAFilter, 92	max_val
mhajack.cpp, 1017	timoConfig, 907
make_friendly_number_by_limiting	max_val_AC
nlms_wave.cpp, 1023	timo_AC, 902
prediction_error.cpp, 1025	maxInputChannels
mapping	MHAIOPortAudio::device_info_t, 547
addsndfile::addsndfile_if_t, 175	maxOutputChannels
coherence::vars_t, 228	MHAIOPortAudio::device_info_t, 547
matmix_t	maxabs
matrixmixer::matmix_t, 377	Vector and matrix processing toolbox, 56,
matrix_t	57
MHASignal::matrix_t, 747, 748	maxframe
matrixmixer, 85	acsave::save_var_t, 164
matrixmixer.cpp, 947	maxgain
matrixmixer::cfg_t, 374	dc_simple::dc_t, 253
cfg_t, 375	dc_simple::dc_vars_t, 255
m, 375	DynComp::dc_afterburn_rt_t, 280
process, 375	DynComp::dc_afterburn_vars_t, 284
sout, 375	maximum_reader_xruns_in_succession_
wout, 375	before_stop
matrixmixer::matmix_t, 376	mha_drifter_fifo_t, 409
ci, 377	maximum_writer_xruns_in_succession_←
co, 377	before_stop
matmix_t, 377	mha_drifter_fifo_t, 409

maxlen	MHA_WAVEFORM, 951
plingploing::if_t, 830	MHA_XSTRF, 950
maxlen_	MHADestroy_t, 952
plingploing::plingploing_t, 832	MHAGetVersion_t, 952
mcomplex_mon_t	MHAInit_t, 952
MHAParser::mcomplex_mon_t, 636	MHAPluginCategory_t, 953
mcomplex_t	MHAPluginDocumentation_t, 953
MHAParser::mcomplex_t, 638	MHAPrepare_t, 952
mean	MHAProc_spec2spec_t, 953
MHA_AC::stat_t, 391	MHAProc spec2wave t, 953
MHASignal, 119	MHAProc wave2spec t, 953
MHASignal::stat_t, 769	MHAProc_wave2wave_t, 953
mean_std	MHARelease t, 952
MHASignal::stat_t, 769	MHASet_t, 952
median	MHAStrError_t, 953
MHASignal, 118	mha_domain_t, 952
mfloat_mon_t	mha_algo_comm.cpp, 953
MHAParser::mfloat_mon_t, 639	AC_DIM_MISMATCH, 953
mfloat_t	AC_INVALID_HANDLE, 953
MHAParser::mfloat_t, 642	AC INVALID NAME, 953
mha	AC INVALID OUTPTR, 953
speechnoise_t, 889	AC_STRING_TRUNCATED, 953
mha.cpp, 948	AC_SUCCESS, 953
main, 948	AC_TYPE_MISMATCH, 953
mhamain, 948	algo_comm_default, 953
mha.h, 948	mha_algo_comm.h, 953
algo_comm_t, 952	mha_algo_comm.hh, 955
MHA AC CHAR, 952	ALGO_COMM_ID_STR, 955
MHA_AC_DOUBLE, 952	algo_comm_default, 955
MHA AC FLOAT, 952	mha_alloc
MHA_AC_INT, 952	mha_ruby.cpp, 981
MHA_AC_MHACOMPLEX, 952	mha_audio_descriptor_t, 393
MHA_AC_MHAREAL, 952	cf, 394
MHA_AC_UNKNOWN, 952	chdir, 394
MHA AC USER, 952	dt, 394
MHA AC VEC FLOAT, 952	is_complex, 394
MHA CALLBACK TEST PREFIX, 950	n_channels, 394
MHA_CALLBACK_TEST, 950	n fregs, 394
MHA_DOMAIN_MAX, 952	n samples, 394
MHA DOMAIN UNKNOWN, 952	mha_audio_t, 394
MHA RELEASE VERSION STRING,	cdata, 395
951	descriptor, 395
MHA_SPECTRUM, 952	rdata, 395
MHA_STRUCT_SIZEMATCH, 951	mha_channel_info_t, 395
MHA STRF, 950	dir, 396
MHA VERSION BUILD, 951	id, 396
MHA VERSION MAJOR, 950	idstr, 396
MHA VERSION MINOR, 950	peaklevel, 396
MHA_VERSION_RELEASE, 951	side, 396
MHA_VERSION_STRING, 951	mha_complex
MHA VERSION, 951	Complex arithmetics in the openMHA,
	complex anumenes in the openion iA,

62

mha_complex_t, 397	mha_domain_t
im, 397	mha.h, 952
re, 397	mha_drifter_fifo_t
mha_dblbuf_t	desired_fill_count, 408
\sim mha_dblbuf_t, 400	get_available_space, 407
delay, 402	get_des_fill_count, 407
fifo_size, 402	get_fill_count, 407
get delay, 400	get_min_fill_count, 408
get_fifo_size, 400	maximum_reader_xruns_in_succession
get_inner_error, 400	before_stop, 409
get_inner_size, 400	maximum_writer_xruns_in_succession ←
get_input_channels, 400	before_stop, 409
get_input_fifo_fill_count, 400	mha_drifter_fifo_t, 406
get_input_fifo_space, 400	minimum_fill_count, 408
get_outer_size, 400	null data, 409
get_output_channels, 400	read, 407
get_output_fifo_fill_count, 400	reader_started, 408
get_output_fifo_space, 400	reader xruns in succession, 409
inner_error, 403	reader xruns since start, 409
inner_size, 402	reader xruns total, 409
input, 401	starting, 408
input_channels, 402	startup_zeros, 410
input_fifo, 402	stop, 408
mha_dblbuf_t, 399	write, 406
outer error, 403	writer_started, 408
outer_size, 402	writer_xruns_in_succession, 409
output, 401	writer_xruns_since_start, 409
output_channels, 402	writer_xruns_total, 409
output_fifo, 402	mha_drifter_fifo_t< T >, 404
process, 401	mha_errno.c, 957
provoke inner error, 401	cstr_strerror, 958
provoke_outer_error, 401	mha_set_user_error, 958
value_type, 399	mha_strerror, 958
mha_dblbuf_t< FIFO >, 397	next_except_str, 958
mha debug	STRLEN, 958
Error handling in the openMHA, 32	mha errno.h, 958
·	_ <i>,</i>
mha_defs.h, 955	MHA_ERR_INVALID_HANDLE, 959 MHA_ERR_NULL, 959
MHA_FUN, 956 declspec, 956	MHA_ERR_SUCCESS, 959
CHECK EXPR, 956	MHA_ERR_SOCCESS, 959 MHA ERR UNKNOWN, 959
<u> </u>	
CHECK_VAR, 956	MHA_ERR_USER, 959
M_PI, 956	MHA_ERR_VARRANCE_050
MAX, 957	MHA_ERR_VARRANGE, 959
MHA_EAR_LEFT, 957	mha_set_user_error, 959
MHA_EAR_MAX, 957	mha_strerror, 959
MHA_EAR_RIGHT, 957	mha_error.cpp, 959
MIN, 956	mha_error.hh, 960
mha_direction_t, 403	Getmsg, 961
azimuth, 403	mha_error_helpers, 86
distance, 404	digits, 86
elevation, 403	snprintf_required_length, 86

mha_event_emitter.h, 961	increase_condition, 417
mha_events.cpp, 961	increment, 416
mha_events.h, 961	mha_fifo_posix_threads_t, 416
mha_exit_request	mutex, 417
mha_ruby.cpp, 981	release_mutex, 416
mha_fft	wait_for_decrease, 416
timoConfig, 906	wait_for_increase, 416
mha_fft_backward	mha_fifo_t
Fast Fourier Transform functions, 74	~mha_fifo_t, 419
mha_fft_backward_scale	buf, 421
Fast Fourier Transform functions, 75	buf_uses_placement_new, 421
mha_fft_forward	clear, 421
Fast Fourier Transform functions, 74	get_available_space, 420
mha_fft_forward_scale	get_fill_count, 420
Fast Fourier Transform functions, 75	get_max_fill_count, 420
mha_fft_free	max fill count, 421
Fast Fourier Transform functions, 71	mha fifo t, 419
mha fft new	operator=, 420
Fast Fourier Transform functions, 71	read, 420
mha_fft_spec2wave	read_ptr, 421
Fast Fourier Transform functions, 73	value_type, 419
mha_fft_spec2wave_scale	write, 419
Fast Fourier Transform functions, 76	write_ptr, 421
mha_fft_t	mha_fifo_t< T >, 417
Fast Fourier Transform functions, 71	mha_fifo_thread_guard_t, 421
mha_fft_wave2spec	~mha_fifo_thread_guard_t, 422
Fast Fourier Transform functions, 72	mha_fifo_thread_guard_t, 422
mha_fft_wave2spec_scale	sync, 422
Fast Fourier Transform functions, 75	mha_fifo_thread_platform_implementation_t
mha_fftfb.cpp, 961	mha_fifo.h, 964
BARKSCALE_ENTRIES, 963	mha_fifo_thread_platform_t, 422
filtershapefun, 963	~mha_fifo_thread_platform_t, 423
mha_fftfb.hh, 963	aquire_mutex, 424
mha_fifo.cpp, 964	decrement, 424
mha_fifo.h, 964	increment, 424
mha_fifo_thread_platform_implementation <	
_t, 964	operator=, 425
mha_fifo_lw_t	release_mutex, 424
\sim mha_fifo_lw_t, 413	wait_for_decrease, 424
error, 415	wait_for_increase, 424
mha_fifo_lw_t, 413	mha_filter.cpp, 964
read, 414	diff_coeffs, 965
set_error, 414	mha_filter.hh, 965
sync, 414	mha_fragsize
write, 413	MHAIOJackdb::io_jack_t, 544
mha_fifo_lw_t $<$ T $>$, 412	mha_free
mha_fifo_posix_threads_t, 415	mha_ruby.cpp, 981
\sim mha_fifo_posix_threads_t, 416	mha_freelib
aquire_mutex, 416	mha_os.h, 970
decrease_condition, 417	mha_freelib_success
decrement, 416	mha_os.h, 970

mha_generic_chain.cpp, 966	list dir, 971
mhaconfig_compare, 967	MHA_RESOLVE_CHECKED, 971
mha_generic_chain.h, 967	MHA RESOLVE, 971
MHAPLUGIN_OVERLOAD_OUTDOM←	mha_freelib, 970
AIN, 967	mha_freelib_success, 970
mha_getenv	mha_getenv, 971
mha_os.cpp, 969	mha_getlibfun, 970
mha_os.h, 971	mha_getlibfun_checked, 971
mha_getlibfun	mha_hton, 971, 972
mha os.h, 970	mha_lib_extension, 971
	_ :
mha_getlibfun_checked	mha_libhandle_t, 971
mha_os.h, 971	mha_library_paths, 971
mha_hton	mha_loadlib, 970
mha_os.h, 971, 972	mha_loadlib_error, 971
mha_io_ifc.h, 967	mha_msleep, 971
IODestroy_t, 968	mha_ntoh, 972
IOInit_t, 968	mha_parse
IOPrepare_t, 968	mha_ruby.cpp, 981
IOProcessEvent_t, 968	mha_parser.cpp, 972
IORelease_t, 968	MHAPLATFORM, 973
IOSetVar_t, 968	parse_1_complex, 973
IOStart_t, 968	parse_1_float, 973
IOStartedEvent_t, 968	write_float, 973
IOStop_t, 968	mha_parser.hh, 973
IOStoppedEvent_t, 968	DEFAULT_RETSIZE, 977
IOStrError_t, 968	insert_member, 977
mha_lib_extension	mha_platform_tic
mha_os.h, 971	mha_profiling.c, 980
mha_libhandle_t	mha_profiling.h, 981
mha_os.h, 971	mha_platform_tictoc_t
mha library paths	mha_profiling.h, 981
mha_os.cpp, 969	mha_platform_toc
mha_os.h, 971	mha_profiling.c, 980
mha_loadlib	mha_profiling.h, 981
mha_os.h, 970	
_ :	mha_plugin.hh, 977
mha_loadlib_error	attribute, 979
mha_os.h, 971	declspec, 979
mha_min_1	GITCOMMITHASH, 979
mha_signal.hh, 993	HINSTANCE, 979
mha_msleep	MHAPLUGIN_DOCUMENTATION_PR
mha_os.h, 971	EFIX, 979
mha_multisrc.cpp, 968	MHAPLUGIN_INIT_CALLBACKS_PRE
mha_multisrc.h, 969	FIX, 979
mha_ntoh	MHAPLUGIN_INIT_CALLBACKS, 979
mha_os.h, 972	MHAPLUGIN_PROC_CALLBACK_PR↔
mha_os.cpp, 969	EFIX, 979
list_dir, 969	MHAPLUGIN_PROC_CALLBACK, 979
mha_getenv, 969	WINAPI, 979
mha_library_paths, 969	mha_profiling.c, 980
mha_os.h, 969	mha_platform_tic, 980
FMTsz, 971	mha_platform_toc, 980

mha_tic, 980	mha_round, 993
mha_toc, 980	operator<<, 993
mha_profiling.h, 980	operator>>, 993
mha_platform_tic, 981	safe_div, 993
mha_platform_tictoc_t, 981	set_minabs, 993
mha_platform_toc, 981	value, 993
mha real t	mha_signal_fft.h, 994
Vector and matrix processing toolbox, 41	mha_spec_t, 429
mha_round	buf, 430
mha_signal.hh, 993	channel_info, 430
mha_rt_fifo_element_t	num_channels, 430
~mha_rt_fifo_element_t, 426	num_frames, 430
abandonned, 426	_
•	mha_strerror
data, 426	mha_errno.c, 958
mha_rt_fifo_element_t, 425	mha_errno.h, 959
next, 426	mha_tablelookup.cpp, 994
mha_rt_fifo_element_t< T >, 425	mha_tablelookup.hh, 994
mha_rt_fifo_t	mha_tcp.cpp, 995
\sim mha_rt_fifo_t, 427	ASYNC_CONNECT_STARTED, 996
current, 429	closesocket, 996
mha_rt_fifo_t, 427	host_port_to_sock_addr, 996
poll, 428	INVALID_SOCKET, 996
poll_1, 428	SOCKET_ERROR, 996
push, 428	SOCKET, 996
remove_abandonned, 428	tcp_connect_to, 996
remove_all, 428	tcp_connect_to_with_timeout, 996
root, 429	thread_start_func, 996
mha_rt_fifo_t< T >, 426	mha_tcp.hh, 996
mha_ruby.cpp, 981	Sleep, 998
Init_mha_ruby, 981	mha_test_struct_size
mha_alloc, 981	PluginLoader::mhapluginloader_t, 847
mha_exit_request, 981	mha tic
mha_free, 981	mha_profiling.c, 980
mha_parse, 981	mha_tictoc_t, 458
_	— — ·
rb_f_t, 981	t, 458
mha_samplerate	tv1, 458
MHAIOJackdb::io_jack_t, 544	tv2, 458
mha_set_user_error	tz, 458
mha_errno.c, 958	mha_toc
mha_errno.h, 959	mha_profiling.c, 980
mha_signal.cpp, 981	mha_toolbox.h, 998
ASSERT_EQUAL_DIM_PTR, 984	mha_wave_t, 459
ASSERT_EQUAL_DIM, 984	buf, 460
intensity, 984	channel_info, 460
MHA_ID_MATRIX, 984	num_channels, 460
MHA_ID_UINT_VECTOR, 984	num_frames, 460
safe_div, 984	mha_windowparser.cpp, 998
set_minabs, 984	wnd_funs, 998
mha_signal.hh, 984	mha_windowparser.h, 998
M PI, 993	mhachain, 89
mha_min_1, 993	mhachain.cpp, 999

mhachain::chain_base_t, 460	PluginLoader, 125
algos, 462	mhaconfig_in
b_prepared, 462	MHAPlugin::plugin_t, 695
bprofiling, 462	mhaconfig_mon_t
cfin, 462	MHAParser::mhaconfig_mon_t, 644
cfout, 462	mhaconfig_out
chain, 462	MHAPlugin::plugin_t, 695
chain_base_t, 461	mhaconfig_t, 467
old_algos, 462	channels, 468
patchbay, 462	domain, 468
prepare, 462	fftlen, 468
process, 461, 462	fragsize, 468
release, 462	srate, 468
update, 462	wndlen, 468
mhachain::mhachain t, 463	mhafft
mhachain t, 463	hilbert_shifter_t, 329
mhachain::plugs t, 464	mhafw lib.cpp, 999
~plugs_t, 465	mhafw lib.h, 999
ac, 465	mhajack.cpp, 1017
algos, 465	dummy_jack_proc_cb, 1017
alloc_plugs, 465	jack_error_handler, 1017
b_prepared, 465	last_jack_err, 1017
b_use_profiling, 466	last_jack_err_msg, 1017
chain, 466	make_friendly_number, 1017
cleanup_plugs, 465	mhajack.h, 1017
parser, 465	IO_ERROR_JACK, 1019
plugs_t, 465	IO_ERROR_MHAJACKLIB, 1019
prepare, 465	last_jack_err_msg, 1019
prepared, 465	MAX USER ERR, 1019
proc_cnt, 466	MHAJACK FW STARTED, 1019
process, 465	MHAJACK STARTING, 1019
prof_algos, 466	MHAJACK STOPPED, 1019
prof_cfg, 466	mhamain
prof_init, 466	mha.cpp, 948
prof_load_con, 466	mhamain.cpp, 1020
prof_prepare, 466	mhamain.cpp, 1019
prof_process, 466	create lock, 1020
prof process load, 466	GREETING TEXT, 1020
prof_process_tt, 466	HELP TEXT, 1020
prof_release, 466	MAX_LINE_LENGTH, 1020
prof_tt_con, 466	mhamain, 1020
profiling, 466	remove_lock, 1020
release, 465	mhaplug_cfg_t, 685
tictoc, 466	~mhaplug_cfg_t, 685
update_proc_load, 465	mhaplug_cfg_t, 685
mhachain t	mhapluginloader.cpp, 1020
mhachain::mhachain_t, 463	mhapluginloader.h, 1020
mhachannels	mhapluginloader_t
addsndfile::addsndfile_if_t, 175	MHAParser::mhapluginloader_t, 646
mhaconfig_compare	PluginLoader::mhapluginloader_t, 845
mha generic chain.cpp. 967	mhaserver t. 723

\sim mhaserver_t, 725	ac2osc_t, 139
acceptor_started, 725	addsndfile::addsndfile_if_t, 175
ack_fail, 726	MHA_TCP::OS_EVENT_TYPE, 443
ack ok, 726	noise t, 817
announce_port, 726	sine_t, 876
logfile, 726	smoothgains_bridge::overlapadd_if_
logstring, 725	t, 878
mhaserver_t, 724	modified
pid_mon, 726	dc::dc vars t, 245
port, 726	dc_simple::dc_if_t, 251
•	modulename
received_group, 725	
run, 725	dynamiclib_t, 278
set_announce_port, 725	MHAParser::c_ifc_parser_t, 613
tcpserver, 726	mon
mhasndfile.cpp, 1021	acmon::ac_monitor_t, 149
validator_channels, 1021	mon_complex
validator_length, 1021	acmon::ac_monitor_t, 149
write_wave, 1021	mon_dump
mhasndfile.h, 1021	MHAParser, 107
write_wave, 1022	mon_g
mhastrdomain	dc_simple::dc_if_t, 251
PluginLoader, 125	dc_simple::dc_t, 253
min	mon_l
MHASignal::doublebuffer_t, 734	dc_simple::dc_if_t, 251
spec2wave.cpp, 1028	dc_simple::dc_t, 253
Vector and matrix processing toolbox, 58	mon_mat
minimum_fill_count	acmon::ac_monitor_t, 149
mha_drifter_fifo_t, 408	
:	mon_mat_complex
minlen	acmon::ac_monitor_t, 149
plingploing::if_t, 830	mon_t, 807
minlen_	mon_t, 807
plingploing::plingploing_t, 832	store, 807
minphase	monitor variable, 4
MHAFilter::smoothspec_t, 531	monitor_t
minphase_t	MHAParser::monitor_t, 650
MHASignal::minphase_t, 754	mpo
mint_mon_t	DynComp::dc_afterburn_vars_t, 284
MHAParser::mint_mon_t, 648	mpo_inv
minw_	DynComp::dc_afterburn_rt_t, 280
wavwriter_t, 920	msg
minwrite	MHA_Error, 412
wavrec_t, 919	mu
mix	MHAFilter::adapt_filter_param_t, 477
sine_cfg_t, 874	MHAFilter::adapt_filter_t, 480
mixer	mu_beta
matrixmixer::matmix_t, 377	adm_if_t, 190
mixw ref	multibandcompressor, 123
hilbert_shifter_t, 329	multibandcompressor.cpp, 1022
mixw shift	multibandcompressor::fftfb_plug_t, 808
_	
hilbert_shifter_t, 329	bwv, 809
mode	cfv, 809

efv, 809	overlapadd::overlapadd_t, 826
fftfb_plug_t, 809	n_pad2
insert, 809	overlapadd::overlapadd_t, 826
multibandcompressor::interface_t, 810	n_re
algo, 811	MHASignal::fft_t, 738
burn, 811	n_samples
interface_t, 811	mha_audio_descriptor_t, 394
num_channels, 811	n zero
patchbay, 811	overlapadd::overlapadd_t, 826
plug, 812	NORM DEFAULT
plug_sigs, 812	_
prepare, 811	nlms_wave.cpp, 1023
process, 811	NORM_NONE
release, 811	nlms_wave.cpp, 1023
update_cfg, 811	NORM_SUM
	nlms_wave.cpp, 1023
multibandcompressor::plugin_signals_t, 812	NORMALIZATION_TYPES
apply_gains, 812	nlms_wave.cpp, 1023
gain, 813	NUM_ENTR_LTASS
plug_level, 813	speechnoise.cpp, 1029
plug_output, 813	NUM_ENTR_MHAORIG
plugin_signals_t, 812	speechnoise.cpp, 1029
update_levels, 812	NUM_ENTR_OLNOISE
mute	speechnoise.cpp, 1029
MHAJack::port_t, 564	name
MHASignal::loop_wavefragment_t, 742	ac2wave_if_t, 141
mutex	ac2wave_t, 143
MHAPlugin_Split::posix_threads_t, 708	acmon::ac_monitor_t, 149
mha_fifo_posix_threads_t, 417	acsave::save_var_t, 164
mylogf	MHA_AC::ac2matrix_helper_t, 379
dc_afterburn.cpp, 935	—
_ ,,,	MHA_AC::spectrum_t, 390
N	MHA_AC::waveform_t, 393
lpc_config, 374	MHAIOPortAudio::device_info_t, 547
n	MHAJack::client_avg_t, 553
MHAJack::client_avg_t, 553	MHAJack::client_noncont_t, 556
MHASignal::hilbert_fftw_t, 739	MHAMultiSrc::channel_t, 571
MHASignal::stat_t, 769	MHAParser::entry_t, 619
N ERRNO	noisePowProposedScale::interface_t, 819
MHA_TCP, 89	plugindescription_t, 838
n_channels	rmslevel_if_t, 856
mha audio descriptor t, 394	shadowfilter_end::cfg_t, 871
n_freqs	name
mha_audio_descriptor_t, 394	AuditoryProfile::parser_t::fmap_t, 211
n_im	name_b
MHASignal::fft_t, 738	lpc_bl_predictor, 366
_	lpc_bl_predictor_config, 368
n_no_update	lpc_burglattice, 370
nlms_t, 815	. —
prediction_error, 852	lpc_burglattice_config, 372
n_no_update_	name_conAC
prediction_error_config, 854	acConcat_wave, 146
rt_nlms_t, 863	name_d
n_pad1	nlms_t, 815

name_d_	nbits
prediction_error_config, 854	calibrator_variables_t, 220
rt_nlms_t, 863	nch
name_e	shadowfilter_begin::cfg_t, 868
nlms_t, 815	shadowfilter_begin::shadowfilter_begin←
prediction_error, 851	_t, 870
name_e_	spec_fader_t, 888
rt_nlms_t, 863	nch_out
name_f	shadowfilter_end::cfg_t, 871
lpc_bl_predictor, 366	nchan
lpc_bl_predictor_config, 367	acSteer_config, 168
lpc_burglattice, 370	steerbf_config, 893
lpc_burglattice_config, 372	timoConfig, 906
nlms_t, 815	nchannels
prediction_error, 851	DynComp::gaintable_t, 288
name_kappa	fftfilterbank::fftfb_interface_t, 312
lpc_bl_predictor, 366	MHAFilter::adapt_filter_state_t, 478
lpc_burglattice, 370	MHAFilter::adapt_filter_t, 480
name_km	MHAFilter::iir_filter_t, 505
lpc_bl_predictor_config, 367	MHAFilter::smoothspec_t, 531
name_lpc	MHAFilter::thirdoctave_analyzer_t, 532
prediction_error, 851	nchannels_file_in
name_lpc_	io_file_t, 335
prediction_error_config, 854	nchannels_in
name_lpc_b	io_file_t, 335
lpc_bl_predictor, 366	io_parser_t, 342
name_lpc_f	MHAFilter::partitioned_convolution_t, 519
lpc_bl_predictor, 366	MHAIOPortAudio::io_portaudio_t, 550
• — —•	MHAJack::client_t, 561
name_u nlms_t, 815	MHAPlugin_Resampling::resampling_t,
	699
name_u_	
rt_nlms_t, 863	nchannels_out
namelen	fw_t, 321
acsave::mat4head_t, 162	io_file_t, 335
names	io_parser_t, 342
MHAOvlFilter::scale_var_t, 596	MHAFilter::partitioned_convolution_t, 519
nangle	MHAIOPortAudio::io_portaudio_t, 550
acSteer_config, 168	MHAJack::client_t, 561
steerbf_config, 893	MHAPlugin_Resampling::resampling_t,
naudiochannels	699
dc::dc_t, 243	ndim
nbands	acsave::save_var_t, 164
coherence::cohflt_t, 226	needs_write
combc_t, 231	MHA_TCP::Connection, 439
dc::dc_t, 243	neigh
dc_simple::dc_t, 253	acPooling_wave_config, 157
dc_simple::level_smoother_t, 258	neighbourhood
DynComp::gaintable_t, 288	acPooling_wave, 155
fftfilterbank::fftfb_interface_t, 312	nelements
MHAFilter::thirdoctave_analyzer_t, 532	MHASignal::matrix_t, 753
MHAOvIFilter::fspacing_t, 589	nested_lock

MHAParser::base_t, 605	NORM_NONE, 1023
newgains	NORM_SUM, 1023
fader_if_t, 305	NORMALIZATION_TYPES, 1023
next	nm
MHAPlugin::cfg_chain_t, 686	lpc_burglattice_config, 372
mha_rt_fifo_element_t, 426	no_iter
next_except_str	prediction_error_config, 854
mha errno.c, 958	rt_nlms_t, 863
next_read_frame_index	noise.cpp, 1023
MHASignal::ringbuffer_t, 759	noise_t, 816
next_write_frame_index	frozennoise_length, 817
MHASignal::ringbuffer_t, 760	lev, 817
nfft	mode, 817
MHASignal::fft_t, 738	noise_t, 817
overlapadd::overlapadd_if_t, 823	patchbay, 817
shadowfilter_end::cfg_t, 871	prepare, 817
spec2wave_t, 887	process, 817
wave2spec_if_t, 914	update_cfg, 817
nfft_	noise_type_t
MHAOvIFilter::fspacing_t, 589	speechnoise_t, 889
nframes	noisePow
acsave::save_var_t, 164	noisePowProposedScale::noisePow←
nfreq	Proposed, 821
acSteer_config, 168	timoConfig, 907
steerbf_config, 893	noisePow_name
timoConfig, 906	timo_params, 904
nlms_t, 813	timoSmooth, 911
algo, 815	noisePowProposed
c, 815	noisePowProposedScale::noisePow↔
estimtype, 815	Proposed, 820
lambda_smoothing_power, 815	noisePowProposedScale, 123
n_no_update, 815	noisePowProposedScale.cpp, 1023
name_d, 815	POWSPEC_FACTOR, 1024
name_e, 815	noisePowProposedScale::interface_t, 818
name f, 815	alphaPH1mean, 819
name u, 815	alphaPSD, 819
nlms_t, 814	interface_t, 819
normtype, 815	name, 819
• •	patchbay, 819
ntaps, 815	•
patchbay, 815	prepare, 819
prepare, 814	process, 819
process, 815	q, 819
release, 814	update_cfg, 819
rho, 815	xiOptDb, 819
update, 815	noisePowProposedScale::noisePowProposed
nlms_wave.cpp, 1022	820
ESTIM_CUR, 1023	alphaPH1mean_, 821
ESTIM_PREV, 1023	alphaPSD_, <mark>821</mark>
ESTIMATION_TYPES, 1023	estimateDebug, 821
make_friendly_number_by_limiting, 1023	frameno, 821
NORM_DEFAULT, 1023	GLRDebug, 821

GLRexp, 821	acSteer, 167
inputPow, 821	acSteer_config, 168
inputSpec, 821	nrep
insert, 820	MHAJack::client_avg_t, 553
logGLRFact, 821	nsteerchan
noisePow, 821	acSteer, 167
noisePowProposed, 820	acSteer_config, 168
noisyPer, 821	ntaps
PH1Debug, 821	MHAFilter::adapt_filter_state_t, 478
PH1mean, 821	MHAFilter::adapt_filter_t, 480
priorFact, 821	nlms_t, 815
process, 820	prediction_error, 851
snrPost1Debug, 821	prediction_error_config, 853
xiOpt, 821	rt_nlms_t, 862
noisyPer	ntoh
noisePowProposedScale::noisePow←	io_tcp_sound_t, 354
Proposed, 821	ntracks
non_empty_partitions	shadowfilter_begin::cfg_t, 868
MHAFilter::transfer_function_t, 534	shadowfilter_begin::shadowfilter_begin←
MHAFilter::transfer_matrix_t, 536	_t, 870
nondefault_labels	shadowfilter_end::cfg_t, 871
altplugs_t, 202	null_data
norm	mha_drifter_fifo_t, 409
lpc, 363	num_AC
lpc_config, 373	acConcat_wave, 146
normalize	num_adms
Complex arithmetics in the openMHA, 68	adm_rtconfig_t, 192
MHAOvlFilter::fftfb_vars_t, 584	num_brackets
normtype	MHAParser::StrCnv, 109
nlms_t, 815	num_channels
not_in_use	calibrator_variables_t, 220
MHAPlugin::cfg_chain_t, 686	DynComp::gaintable_t, 288
not_zero	MHAFilter::blockprocessing_polyphase←
dc_simple, 82	_resampling_t, 482
notify	mha_spec_t, 430
MHAParser::base_t, 604	mha_wave_t, 460
notify_release	multibandcompressor::interface_t, 811
io_tcp_t, 359	num_entries
notify_start	ac2lsl::save_var_t< mha_complex_t >,
io_tcp_t, 359	135
notify_stop	comm_var_t, 232
io_tcp_t, 359	testplugin::ac_parser_t, 895
now_index	num_F
MHAFilter::polyphase_resampling_t, 526	DynComp::gaintable_t, 288
npad1	num_frames
spec2wave_t, 886	mha_spec_t, 430
wave2spec_t, 916	mha_wave_t, 460
npad2	num_inchannels
spec2wave_t, 887	io_tcp_sound_t, 355
wave2spec_t, 916	num_L
nrefmic	DynComp::gaintable_t, 288

num_outchannels	acTransform_wave_config, 172
io_tcp_sound_t, 356	ola1
num_xruns	overlapadd::overlapadd_t, 825
MHAJack::client_t, 561	ola2
numDevices	overlapadd::overlapadd_t, 825
MHAIOPortAudio::device_info_t, 547	ola_powspec_scale
numSamples_AC	timoConfig, 906
acConcat_wave_config, 147	old_algos
numbytes	mhachain::chain_base_t, 462
MHASignal::matrix_t, 752	olnoise
MHASignal::uint_vector_t, 774	speechnoise_t, 889
numchannels	on_model_param_valuechanged
addsndfile::addsndfile_if_t, 175	timoSmooth, 910
numsamples	on_prereadaccess
acPooling_wave, 155	example3_t, 296
acTransform_wave, 171	example4_t, 300
nupsample	on_scale_ch_readaccess
doasvm_feature_extraction, 271	example3_t, 296
nvars	example4_t, 300
acsave::cfg_t, 162	on_scale_ch_valuechanged
nwnd	example3_t, 296
overlapadd::overlapadd_if_t, 823	exampled_t, 300
wave2spec_if_t, 914	on_scale_ch_writeaccess
wave2spec_t, 916	example3_t, 296
nwndshift	example3_t, 290 example4_t, 300
spec2wave_t, 887	. —
wave2spec_t, 916	op MHAParser::expression_t, 620
nyquist_ratio	• —
MHAPlugin_Resampling::resampling_if←	op_query MHAParser::base t, 601
_t, 697	<u> </u>
	MHAParser::c_ifc_parser_t, 612
o1_ar_filter_t	MHAParser::monitor_t, 650
MHAFilter::o1_ar_filter_t, 509	MHAParser::parser_t, 654
o1_lp_coeffs	op_setval
MHAFilter, 92	MHAParser::base_t, 601
o1flt_lowpass_t	MHAParser::bool_t, 610
MHAFilter::o1flt_lowpass_t, 513	MHAParser::c_ifc_parser_t, 612
o1flt_maxtrack_t	MHAParser::complex_t, 618
MHAFilter::o1flt_maxtrack_t, 515	MHAParser::float_t, 624
o1flt_mintrack_t	MHAParser::int_t, 629
MHAFilter::o1flt_mintrack_t, 517	MHAParser::kw_t, 634
OVERLAP_FACTOR	MHAParser::mcomplex_t, 638
timoconfig.cpp, 1034	MHAParser::mfloat_t, 642
observe	MHAParser::parser_t, 654
MHA_TCP::Event_Watcher, 442	MHAParser::string_t, 662
observed_by	MHAParser::variable_t, 664
MHA_TCP::Wakeup_Event, 457	MHAParser::vcomplex_t, 669
observers	MHAParser::vfloat_t, 673
MHA_TCP::Wakeup_Event, 458	MHAParser::vint_t, 677
od	MHAParser::vstring_t, 681
MHAFilter::adapt_filter_state_t, 478	op_subparse
offset	MHAParser::base_t, 601

MHAParser::c_ifc_parser_t, 612	67
MHAParser::parser_t, 654	operator/=
opact_map_t	Complex arithmetics in the openMHA, 66
MHAParser, 107	Vector and matrix processing toolbox, 54
opact_t	operator=
MHAParser, 107	MHA_AC::acspace2matrix_t, 383
operator!=	MHA_Error, 411
Complex arithmetics in the openMHA, 67	MHAPlugin_Split::domain_handler_t, 701
operator<	MHAPlugin_Split::splitted_part_t, 717
Complex arithmetics in the openMHA, 68	MHAPlugin_Split::thread_platform_t, 721
operator<<	MHASignal::matrix_t, 748
mha_signal.hh, 993	MHASignal::uint_vector_t, 773
operator>>	MHASignal::waveform_t, 778
mha_signal.hh, 993	mha_fifo_t, 420 mha_fifo_thread_platform_t, 425
operator* Complex arithmetics in the openMHA, 65,	operator==
66	Complex arithmetics in the openMHA, 67
operator*=	MHASignal::uint_vector_t, 773
Complex arithmetics in the openMHA, 65	operator[]
Vector and matrix processing toolbox, 53,	MHA_AC::acspace2matrix_t, 383
54	MHASignal::spectrum_t, 766
operator^=	MHASignal::uint_vector_t, 774
Vector and matrix processing toolbox, 55	MHASignal::waveform_t, 778
operator()	operators
dc_simple::dc_t::line_t, 254	MHAParser::base_t, 605
hanning_ramps_t, 327	oplist
MHAEvents::emitter_t, 474	MHAParser::base_t, 604
MHAFilter::gamma_flt_t, 499, 500	order
MHAFilter::iir_ord1_real_t, 507	lpc_config, 373
MHAFilter::01_ar_filter_t, 510, 511	origname
MHASignal::hilbert_t, 740	PluginLoader::config_file_splitter_t, 840
MHASignal::matrix_t, 750–752 MHASignal::minphase_t, 754	os_event MHA_TCP::Wakeup_Event, 458
MHASignal::quantizer_t, 756	os_event_valid
MHASignal::spectrum_t, 766	MHA_TCP::Wakeup_Event, 458
MHASignal::waveform_t, 778, 779	out
MHAWindow::base_t, 799	adm_if_t, 190
operator+	delaysum::delaysum_t, 264
Complex arithmetics in the openMHA, 64	out_buf
operator+=	overlapadd::overlapadd_t, 826
Complex arithmetics in the openMHA, 64	spec2wave_t, 887
Vector and matrix processing toolbox, 53,	out_chunk
54	MHAFilter::thirdoctave_analyzer_t, 533
operator-	out_chunk_im
Complex arithmetics in the openMHA, 64,	MHAFilter::thirdoctave_analyzer_t, 533
65, 67	out_spec
operator-=	shadowfilter_begin::cfg_t, 868
Complex arithmetics in the openMHA, 64	shadowfilter_end::cfg_t, 871
Vector and matrix processing toolbox, 53	outSpec
operator/	steerbf_config, 893
Complex arithmetics in the openMHA, 66,	outbuf

MHA_TCP::Connection, 440	output_signal_wave
outch	MHAFilter::partitioned_convolution_t, 520
MHAJack::client_t, 562	output_spec
outchannels	testplugin::signal_parser_t, 900
combc_if_t, 230	output_wave
outer2inner_resampling	testplugin::signal_parser_t, 900
MHAPlugin_Resampling::resampling_t,	outputchannels
699	MHAFilter::fftfilterbank_t, 493
outer_ac	overlap_save_filterbank_analytic_t
analysepath_t, 204	MHAOvlFilter::overlap_save_filterbank_~
outer_ac_copy	analytic_t, 591
analysepath_t, 204	overlap_save_filterbank_t
outer error	MHAOvlFilter::overlap_save_filterbank_t,
mha_dblbuf_t, 403	593
outer_fragsize	overlapadd, 123
MHAPlugin_Resampling::resampling_t,	overlapadd.cpp, 1024
698	overlapadd::overlapadd if t, 822
outer_out	~overlapadd if t, 823
MHASignal::doublebuffer_t, 735	algo, 824
outer_process	cf_in, 824
MHASignal::doublebuffer_t, 734	cf out, 824
outer_size	nfft, 823
mha_dblbuf_t, 402	nwnd, 823
outer_srate	overlapadd_if_t, 823
MHAPlugin_Resampling::resampling_t,	patchbay, 823
699	plugloader, 824
output	postscale, 824
io_parser_t, 342	prepare, 823
MHAJack::port_t, 563	prescale, 824
• —	•
mha_dblbuf_t, 401	process, 823
output_cfg	release, 823
MHAPlugin::plugin_t, 695	update, 823
output_cfg_	window, 824
MHAPlugin::plugin_t, 695	wndexp, 824
output_channels	wndpos, 824
mha_dblbuf_t, 402	zerowindow, 824
output_domain	overlapadd::overlapadd_t, 824
PluginLoader::mhapluginloader_t, 846	~overlapadd_t, 825
output_fifo	calc_out, 826
mha_dblbuf_t, 402	fft, 825
output_partitions	n_pad1, 826
MHAFilter::partitioned_convolution_t, 519	n_pad2, <mark>826</mark>
output_portnames	n_zero, <mark>826</mark>
MHAJack::client_t, 562	ola1, 825
output_sample_format	ola2, <mark>825</mark>
io_file_t, 335	out_buf, 826
output_signal	overlapadd_t, 825
MHAPlugin_Resampling::resampling_t,	postwnd, 825
699	prewnd, 825
output_signal_spec	spec_in, 826
MHAFilter::partitioned_convolution_t, 520	wave_in1, 825
· — — — — ·	

wave_out1, 826	timoconfig.cpp, 1034
write_buf, 826	PREPARED
overlapadd_if_t	MHA_TCP::Thread, 451
overlapadd::overlapadd_if_t, 823	pa22dbspl
smoothgains_bridge::overlapadd_if_←	Vector and matrix processing toolbox, 43
t, 877	pa2dbspl
overlapadd_t	Vector and matrix processing toolbox, 42
overlapadd::overlapadd_t, 825	params
ovltype	timoConfig, 906
MHAOvIFilter::fftfb_vars_t, 583	parent
oy	MHAParser::base_t, 605
MHAFilter::adapt_filter_state_t, 478	parent_
,	MHAParser::mhapluginloader_t, 647
p	parse
acPooling_wave_config, 157	altplugs_t, 201
doasvm_classification_config, 268	io_tcp_t, 359
pluginbrowser_t, 837	MHAParser::base t, 600, 601
p1	MHAPlugin_Split::splitted_part_t, 717
MHASignal::hilbert_fftw_t, 739	PluginLoader::fourway_processor_t, 843
p2	PluginLoader::mhapluginloader_t, 845
MHASignal::hilbert_fftw_t, 739	
P_Sum	parse_1_complex
rt_nlms_t, 863	mha_parser.cpp, 973
p_max	parse_1_float
acPooling_wave_config, 157	mha_parser.cpp, 973
doasvm_classification_config, 268	parser
p_name	io_tcp_t, 359
acPooling_wave, 155	mhachain::plugs_t, 465
doasvm_classification, 267	parser_int_dyn, 827
p_parser	parser_int_dyn, 827
acmon::ac_monitor_t, 150	set_max_angle_ind, 828
PATCH_VAR	parser_plugs
acConcat_wave.cpp, 925	altplugs_t, 202
acPooling_wave.cpp, 926	parser_t
acSteer.cpp, 927	AuditoryProfile::parser_t, 209
acTransform_wave.cpp, 928	MHAParser::parser_t, 652
doasvm_classification.cpp, 937	parserFriendlyName
doasvm_feature_extraction.cpp, 938	MHAIOPortAudio, 95
lpc.cpp, 946	parsername
lpc_bl_predictor.cpp, 946	latex_doc_t, 360
lpc_burg-lattice.cpp, 947	parserstate
prediction_error.cpp, 1025	fw_t, 321
steerbf.cpp, 1033	partitioned_convolution_t
timoSmooth.cpp, 1035	MHAFilter::partitioned_convolution_t, 518
PH1Debug	partitions
noisePowProposedScale::noisePow←	MHAFilter::transfer_function_t, 534
Proposed, 821	MHAFilter::transfer_matrix_t, 536
PH1mean	patchbay
noisePowProposedScale::noisePow←	ac2lsl::ac2lsl_t, 128
Proposed, 821	ac2osc_t, 139
POWSPEC_FACTOR	ac2wave_if_t, 141
noisePowProposedScale.cpp, 1024	acConcat_wave, 146

acPooling_wave, 155	t, 878
acSteer, 167	softclip_t, 881
acTransform_wave, 171	spec2wave_if_t, 885
acmon::acmon_t, 152	steerbf, 892
acsave::acsave_t, 160	testplugin::ac_parser_t, 895
addsndfile::addsndfile_if_t, 175	testplugin::if_t, 899
adm_if_t, 190	timoSmooth, 911
altplugs_t, 202	wave2spec_if_t, 914
analysispath_if_t, 206	wavrec_t, 919
AuditoryProfile::parser_t::fmap_t, 211	windowselector_t, 923
calibrator_t, 219	path
coherence::cohflt_if_t, 224	addsndfile::addsndfile_if_t, 175
db_if_t, 237	peak
dc::dc_if_t, 240	MHASignal::loop_wavefragment_t, 742
dc::wideband_inhib_vars_t, 249	rmslevel t, 857
dc_simple::dc_if_t, 251	peak_db
delay::interface_t, 260	rmslevel_t, 857
delaysum::delaysum_if_t, 263	peaklevel
doasvm_classification, 267	calibrator_variables_t, 220
doasym feature extraction, 271	MHASignal::async_rmslevel_t, 728
DynComp::dc_afterburn_t, 282	mha_channel_info_t, 396
example3_t, 297	peer_addr
example4_t, 301	MHA_TCP::Connection, 440
example6_t, 303	peer_address
fader_if_t, 305	io_tcp_parser_t, 351
fader_wave::fader_wave_if_t, 307	_ · _ ·
fftfilterbank::fftfb_interface_t, 312	peer_port
frequency_translator_t, 316	io_tcp_parser_t, 352
• •	period
fw_t, 322	droptect_t, 275
gain::gain_if_t, 325	pfragmentsize
io_parser_t, 342	fw_vars_t, 323
lpc, 363	phase
lpc_bl_predictor, 366	cpuload_t, 235
lpc_burglattice, 370	MHASignal::minphase_t, 755
MHAIOJack::io_jack_t, 540	phase_correction
MHAIOJackdb::io_jack_t, 545	MHAFilter::gamma_flt_t, 500
MHAIOPortAudio::io_portaudio_t, 550	phase_div_2pi
MHAPlugin_Split::split_t, 713	sine_t, 876
matrixmixer::matmix_t, 377	phase_gains
mhachain::chain_base_t, 462	MHASignal::subsample_delay_t, 771
multibandcompressor::interface_t, 811	phase_increment_div_2pi
nlms_t, 815	sine_cfg_t, 874
noise_t, 817	phasemode
noisePowProposedScale::interface_t, 819	frequency_translator_t, 316
overlapadd::overlapadd_if_t, 823	phasemodel
plingploing::if_t, 830	MHAOvIFilter::overlap_save_filterbank_<
plugin_interface_t, 836	t::vars_t, 594
prediction_error, 852	phi
route::interface_t, 859	hilbert_shifter_t, 329
sine_t, 876	PI
smoothgains_bridge::overlapadd_if_←	ADM, 80

hann.cpp, 944	update, 829
pid_mon	plingploing::plingploing_t, 831
mhaserver_t, 726	alph, 833
pinchannels	bass, 832
fw_vars_t, 323	bassmod_, 833
pink	bassperiod_, 833
speechnoise_t, 889	bt, 832
pipe	cf, 832
MHA_TCP::Async_Notify, 432	dist, 833
pitch	dist1, 833
plingploing::if_t, 830	dur_, 832
pitch_	freq, 832
plingploing::plingploing_t, 832	fun1, 833
pitch_set_first	fun1_key, 833
timoConfig, 907	fun1_range, 833
pitch_set_first_AC	fun2, 833
timo_AC, 902	fun2_key, 833
pitch_set_last	fun2_range, 833
timoConfig, 907	hann1, 833
pitch_set_last_AC	hann2, 833
timo_AC, 902	len, 832
plan_spec2analytic	level, 833
. — .	
hilbert_shifter_t, 329	maxlen_, 832
plateau	minlen_, 832
MHAOvIFilter::fftfb_vars_t, 583	pitch_, 832
playback MLIA Signalulana, wayafragmant t. 742	plingploing_t, 832
MHASignal::loop_wavefragment_t, 743, 744	process, 832
	rms, 833
playback_channels	t, 832
MHASignal::loop_wavefragment_t, 744	plingploing_t
playback_mode_t	plingploing::plingploing_t, 832
MHASignal::loop_wavefragment_t, 742	plug
plingploing, 124	analysispath_if_t, 206
drand, 124	MHAParser::mhapluginloader_t, 647
plingploing.cpp, 1024	MHAPlugin_Split::splitted_part_t, 718
plingploing::if_t, 828	multibandcompressor::interface_t, 812
bassmod, 830	testplugin::if_t, 899
bassperiod, 831	plug_level
bpm, 830	multibandcompressor::plugin_signals_t
fun1_key, 830	813
fun1_range, 830	plug_output
fun2_key, 830	multibandcompressor::plugin_signals_t,
fun2_range, 830	813
if_t, 829	plug_sigs
level, 830	multibandcompressor::interface_t, 812
maxlen, 830	plug_t, 833
minlen, 830	∼plug_t, 834
patchbay, 830	get_ac, 834
pitch, 830	get_handle, 834
prepare, 829	get_process_spec, 834
process, 829	get_process_wave, 834

plug_t, 834	get_documentation, 847
plugin_categories	getfullname, 846
PluginLoader::mhapluginloader_t, 848	has_parser, 846
plugin_documentation	has_process, 846
PluginLoader::mhapluginloader_t, 848	input_domain, 846
plugin_extension	is_prepared, 847
pluginbrowser_t, 837	lib_data, 847
plugin_interface_t, 835	lib_err, 847
factor, 836	lib_handle, 847
patchbay, 836	MHADestroy_cb, 847
plugin_interface_t, 836	MHAGetVersion_cb, 847
prepare, 836	MHAInit_cb, 847
process, 836	MHAPrepare_cb, 847
scale_ch, 836	MHAProc_spec2spec_cb, 847
update_cfg, 836	MHAProc_spec2wave_cb, 848
plugin_macro	MHAProc_wave2spec_cb, 847
latex doc t, 361	MHAProc_wave2wave_cb, 847
plugin_paths	MHARelease_cb, 847
fw t, 321	MHASet cb, 848
plugin_signals_t	MHAStrError_cb, 848
multibandcompressor::plugin_signals_t,	mha_test_struct_size, 847
812	mhapluginloader_t, 845
plugin_t	output_domain, 846
MHAPlugin::plugin_t, 693	parse, 845
PluginLoader, 124	plugin_categories, 848
mhaconfig_compare, 125	plugin_documentation, 848
mhastrdomain, 125	prepare, 846
PluginLoader::config_file_splitter_t, 839	process, 846
config_file_splitter_t, 839	release, 846
configfile, 840	resolve_and_init, 847
configname, 840	test_error, 847
get_configfile, 840	test_version, 847
get_configname, 839	pluginbrowser.cpp, 1025
get_libname, 840	pluginbrowser.h, 1025
get_origname, 840	pluginbrowser_t, 836
libname, 840	add_plugin, 837
origname, 840	add_plugins, 837
PluginLoader::fourway_processor_t, 840	clear_plugins, 837
~fourway_processor_t, 841	get_paths, 837
parse, 843	get_plugins, 837
prepare, 843	library_paths, 837
process, 841, 842	p, 837
release, 843	plugin_extension, 837
PluginLoader::mhapluginloader_t, 843	pluginbrowser_t, 837
~mhapluginloader_t, 845	plugins, 837
ac, 847	scan_plugin, 837
b_check_version, 848	scan_plugins, 837
b_is_prepared, 848	plugindescription_t, 838
cf_input, 848	categories, 838
cf_output, 848	documentation, 838
get_categories, 847	fullname, 838
go:_oa.ogooo, o 17	1411141110, 000

name, 838	pooling_size
queries, 838	acPooling_wave_config, 157
query_cmds, 838	pooling type
spec2spec, 838	acPooling_wave, 155
spec2wave, 838	pooling_wndlen
wave2spec, 838	acPooling_wave, 155
wave2wave, 838	port
pluginloader_t, 848	ac2osc t, 138
· ·	MHA TCP::Server, 446
~pluginloader_t, 849	
pluginloader_t, 849	MHAJack::port_t, 565
plugins	mhaserver_t, 726
fw_t, 321	port_t
pluginbrowser_t, 837	MHAJack::port_t, 563, 564
plugloader	portaudio_callback
bbcalib_interface_t, 215	MHAIOPortAudio.cpp, 1012, 1013
db_if_t, 237	MHAIOPortAudio::io_portaudio_t, 550
db_t, 238	portaudio_stream
MHAPlugin_Resampling::resampling_if←	MHAIOPortAudio::io_portaudio_t, 550
_t, 697	portnames_in
MHAPlugin_Resampling::resampling_t,	MHAIOJack::io_jack_t, 540
699	MHAIOJackdb::io_jack_t, 544
overlapadd::overlapadd_if_t, 824	portnames out
smoothgains_bridge::overlapadd_if_←	MHAIOJack::io_jack_t, 540
t, 878	MHAIOJackdb::io_jack_t, 544
plugname	ports_in_all
latex_doc_t, 361	MHAIOJack::io_jack_t, 540
MHAParser::mhapluginloader_t, 647	MHAIOJackdb::io_jack_t, 545
plugname_name_	ports_in_physical
MHAParser::mhapluginloader_t, 647	MHAIOJack::io_jack_t, 540
. •	_ _ ·
plugs	MHAIOJackdb::io_jack_t, 545
altplugs_t, 202	ports_out_all
plugs_t	MHAIOJack::io_jack_t, 540
mhachain::plugs_t, 465	MHAIOJackdb::io_jack_t, 545
pmode	ports_out_physical
calibrator_runtime_layer_t, 217	MHAIOJack::io_jack_t, 540
poll	MHAIOJackdb::io_jack_t, 545
mha_rt_fifo_t, 428	ports_parser
poll_1	MHAIOJack::io_jack_t, 540
mha_rt_fifo_t, 428	MHAIOJackdb::io_jack_t, 545
poll_config	pos
MHAPlugin::config_t, 689	addsndfile::level_adapt_t, 177
polyphase_resampling_t	cfg_t, 222
MHAFilter::polyphase_resampling_t, 524	fader_wave::level_adapt_t, 309
pool	MHAJack::client_avg_t, 553
acPooling_wave_config, 157	MHAJack::client_noncont_t, 555
pool_name	MHASignal::async_rmslevel_t, 728
acPooling_wave, 155	MHASignal::delay_spec_t, 729
pooling_ind	MHASignal::delay_t, 731
acPooling_wave_config, 157	MHASignal::delay_uave_t, 732
-	• • • • •
pooling_option	MHASignal::loop_wavefragment_t, 744
acPooling_wave_config, 157	posix_threads_t

MHAPlugin_Split::posix_threads_t, 707	F_Uflt, 854
posixthreads	frames, 853
split.cpp, 1032	insert, 853
postscale	iter, 854
overlapadd::overlapadd_if_t, 824	n_no_update_, 854
postwindow	name_d_, 854
spec2wave_t, 887	name_lpc_, 854
postwnd	no_iter, 854
overlapadd::overlapadd_t, 825	ntaps, 853
powSpec	prediction_error_config, 853
timoConfig, 907	process, 853
power	Pu, 854
MHASignal::waveform_t, 783	s_E_pred_err_delay, 854
powersum	s_LPC, 854
de::de t, 242	s_U_delay, 854
- -	s U delayfit, 854
dc::dc_vars_t, 244	,
powspec	s_Usmpl, 855
MHASignal::waveform_t, 784	s_Wflt, 854
pred_err_delay	s_Y_delay, 854
prediction_error, 852	s_Y_delayflt, 854
prediction_error, 849	s_E, 854
~prediction_error, 850	s_U, 854
c, 851	s_W, 854
delay_d, 852	smpl, 855
delay_w, 852	UPrew, 855
gains, 851	UPrewW, 855
lpc_order, 852	UbufferPrew, 854
n_no_update, 852	v_G, 854
name_e, 851	YPrew, 855
name_f, 851	prefix
name_lpc, 851	wavrec_t, 919
ntaps, 851	prefix_
patchbay, 852	MHAParser::mhapluginloader_t, 647
pred_err_delay, 852	prefix_names_AC
prediction_error, 850	acConcat_wave, 146
prepare, 851	prepare
process, 851	ac2lsl::ac2lsl_t, 127
release, 851	ac2osc_t, 137
rho, <mark>851</mark>	ac2wave_if_t, 141
update_cfg, 851	acConcat_wave, 144
prediction_error.cpp, 1025	acPooling_wave, 154
INSERT_PATCH, 1025	acSteer, 166
make_friendly_number_by_limiting, 1025	acTransform_wave, 170
PATCH_VAR, 1025	acmon::acmon_t, 151
prediction_error.h, 1025	acsave::acsave_t, 159
prediction_error_config, 852	addsndfile::addsndfile_if_t, 174
\sim prediction_error_config, 853	adm_if_t, 189
ac, 853	altplugs_t, 200
channels, 854	analysispath_if_t, 206
EPrew, 855	bbcalib_interface_t, 215
F, 854	calibrator_t, 218

coherence::cohflt_if_t, 224	PluginLoader::fourway_processor_t, 843
combc_if_t, 230	PluginLoader::mhapluginloader_t, 846
cpuload_t, 234	prediction_error, 851
db_if_t, 236	rmslevel_if_t, 856
dc::dc_if_t, 240	route::interface_t, 859
dc_simple::dc_if_t, 250	save_spec_t, 865
delay::interface_t, 260	save_wave_t, 867
delaysum::delaysum_if_t, 262	shadowfilter_begin::shadowfilter_begin-
doasvm_classification, 266	_t, 870
doasvm_feature_extraction, 270	shadowfilter_end::shadowfilter_end_←
droptect_t, 274	t, 873
ds_t, 277	sine_t, 875
example1_t, 290	smoothgains_bridge::overlapadd_if_←
example2_t, 293	t, 877
example3_t, 296	softclip_t, 881
example4_t, 300	spec2wave_if_t, 885
example6_t, 303	steerbf, 891
fader if t, 305	testplugin::if_t, 899
fader_wave::fader_wave_if_t, 307	timoSmooth, 910
fftfilterbank::fftfb_interface_t, 310	us_t, 912
frequency translator t, 316	wave2spec_if_t, 914
fw_t, 319	wavrec_t, 918
gain::gain_if_t, 325	prepare_
identity_t, 331	iirfilter_t, 332
io_file_t, 334	MHAPlugin::plugin_t, 694
io_lib_t, 338	MHAPlugin_Split::split_t, 712
io_parser_t, 341	prepare_impl
io_tcp_sound_t, 354	MHAJack::client_t, 560
io_tcp_t, 358	prepare_vars
lpc, 362	fw t, 321
lpc_bl_predictor, 365	prepared
lpc_burglattice, 370	ac2wave_if_t, 141
MHAIOJack::io_jack_t, 538	altplugs_t, 202
MHAIOJackdb::io_jack_t, 543	calibrator_t, 219
MHAJack::client_t, 558, 559	dc_simple::dc_if_t, 251
MHAParser::mhapluginloader_t, 646	example3_t, 297
MHAPlugin::plugin t, 693	example4_t, 301
MHAPlugin_Resampling::resampling_if↔	fader_wave::fader_wave_if_t, 307
t, 697	fftfilterbank::fftfb_interface_t, 312
MHAPlugin_Split::splitted_part_t, 717	mhachain::plugs_t, 465
MHATableLookup::linear_table_t, 790	route::interface_t, 859
matrixmixer::matmix_t, 377	timoSmooth, 911
mhachain::chain_base_t, 462	prereadaccess
mhachain::plugs_t, 465	MHAParser::base_t, 605
multibandcompressor::interface_t, 811	prescale
nlms_t, 814	overlapadd::overlapadd_if_t, 824
noise_t, 817	preset
noisePowProposedScale::interface_t, 819	dc::dc_vars_t, 245
overlapadd::overlapadd_if_t, 823	dc_simple::dc_if_t, 251
plingploing::if_t, 829	prewnd
plugin_interface_t, 836	overlapadd::overlapadd_t, 825
piagiiiiitoiiaoo_t, 000	51011apada51011apada_t, 020

print_ac	doasvm_feature_extraction_config, 272
analysemhaplugin.cpp, 931	process
prior_q	ADM::ADM, 182
timo_params, 904	ADM::Delay, 185
timoSmooth, 911	ADM::Linearphase_FIR, 187
priorFact	ac2lsl::ac2lsl_t, 127, 128
noisePowProposedScale::noisePow←	ac2lsl::cfg_t, 130
Proposed, 821	ac2osc_t, 137, 138
timoConfig, 907	ac2wave_if_t, 141
priority	ac2wave_t, 142
analysepath_t, 204	acConcat_wave, 144
analysispath_if_t, 206	acConcat_wave_config, 147
MHAPlugin_Split::posix_threads_t, 709	acPooling_wave, 154
proc	acPooling_wave_config, 156
MHAJack::client_avg_t, 553	acSteer, 166
MHAJack::client_noncont_t, 555	acTransform_wave, 170
proc_1	acTransform_wave_config, 172
smoothgains_bridge::smoothspec_←	acmon::acmon_t, 152
wrap_t, 879	acsave::acsave_t, 159, 160
proc 2	addsndfile::addsndfile_if_t, 174
smoothgains_bridge::smoothspec_←	adm_if_t, 189
wrap_t, 879	altplugs_t, 201
proc_cnt	analysispath_if_t, 206
mhachain::plugs_t, 466	•
	bbcalib_interface_t, 215
proc_err	calibrator_runtime_layer_t, 216
io_tcp_fwcb_t, 346	calibrator_t, 218
proc_error	cfg_t, 222
fw_t, 322	coherence::cohflt_if_t, 224
proc_error_string	coherence::cohflt_t, 226
fw_t, 322	combc_if_t, 230
proc_event	combc_t, 231
io_file_t, 335	cpuload_t, 234
io_parser_t, 342	db_if_t, 236
io_tcp_fwcb_t, 345	dc::dc_if_t, 240
MHAIOJackdb::io_jack_t, 544	dc::dc_t, 242
MHAIOPortAudio::io_portaudio_t, 550	dc_simple::dc_if_t, 250, 251
MHAJack::client_t, 561	dc_simple::dc_t, 253
proc_handle	dc_simple::level_smoother_t, 258
io_file_t, 335	delay::interface_t, 260
io_parser_t, 342	delaysum::delaysum_if_t, 262
io_tcp_fwcb_t, 345	delaysum::delaysum_t, 264
MHAIOJackdb::io_jack_t, 544	doasvm_classification, 266
MHAIOPortAudio::io_portaudio_t, 550	doasvm_classification_config, 268
MHAJack::client_t, 561	doasvm_feature_extraction, 270
proc_lib	doasvm_feature_extraction_config, 272
fw_t, 322	droptect_t, 274
proc_name	ds_t, 277
fw_t, 321	example1_t, 291
proc_ramp	example2_t, 293
altplugs_t, 201	example3_t, 297
proc_wave	example4_t, 300
	•

example5_t, 302	PluginLoader::mhapluginloader_t, 846
example6_t, 303	prediction_error, 851
fader_if_t, 305	prediction_error_config, 853
fader_wave::fader_wave_if_t, 307	rmslevel_if_t, 856
fftfilterbank::fftfb_interface_t, 312	rmslevel_t, 857
fftfilterbank::fftfb_plug_t, 314	route::interface_t, 859
frequency_translator_t, 316	route::process_t, 860
fw_t, 320	rt_nlms_t, 862
gain::gain_if_t, 325	save_spec_t, 865
hilbert_shifter_t, 329	save_wave_t, 867
identity_t, 330, 331	shadowfilter_begin::cfg_t, 868
iirfilter_t, 332	shadowfilter_begin::shadowfilter_begin ←
io_tcp_fwcb_t, 344	_t, 870
lpc, 362	shadowfilter_end::cfg_t, 871
lpc_bl_predictor, 365	shadowfilter_end::shadowfilter_end_←
lpc_bl_predictor_config, 367	t, 873
lpc_burglattice, 370	sine_t, 875
lpc_burglattice_config, 371	smoothgains_bridge::overlapadd_if_←
lpc_config, 373	t, 877
MHAFilter::partitioned_convolution_t, 519	softclip_t, 881
MHAFilter::thirdoctave_analyzer_t, 532	softclipper_t, 882
MHAParser::mhapluginloader_t, 646, 647	spec2wave_if_t, 885
MHAPlugin_Resampling::resampling_if←	spec2wave_t, 886
_t, 697	steerbf, 891
MHAPlugin_Resampling::resampling_t,	steerbf_config, 893
698	testplugin::if_t, 899
MHAPlugin_Split::domain_handler_t, 703	timoConfig, 906
MHAPlugin_Split::split_t, 712	timoSmooth, 909
MHAPlugin_Split::uni_processor_t, 723	us_t, 912
MHASignal::async_rmslevel_t, 728	wave2spec_if_t, 914
MHASignal::delay_spec_t, 729	wave2spec_t, 916
MHASignal::delay_t, 730	wavrec_t, 918
MHASignal::delay_wave_t, 732	wavwriter_t, 920
MHASignal::subsample_delay_t, 771	process_frame
matrixmixer::cfg_t, 375	io_parser_t, 342
matrixmixer::matmix_t, 377	process_t
mha_dblbuf_t, 401	route::process_t, 860
mhachain::chain_base_t, 461, 462	ProcessMutex
mhachain::plugs_t, 465	analysepath_t, 204
multibandcompressor::interface_t, 811	processing_done
nlms_t, 815	MHAPlugin_Split::posix_threads_t, 709
noise_t, 817	processor
noisePowProposedScale::interface_t, 819	MHAPlugin_Split::domain_handler_t, 704
noisePowProposedScale::noisePow←	MHAPlugin_Split::thread_platform_t, 721
Proposed, 820	prof_algos
overlapadd::overlapadd_if_t, 823	mhachain::plugs_t, 466
plingploing::if_t, 829	prof_cfg
plingploing::plingploing_t, 832	mhachain::plugs_t, 466
plugin_interface_t, 836	prof_init
PluginLoader::fourway_processor_t, 841,	mhachain::plugs_t, 466
842	prof_load_con

mhachain::plugs_t, 466	MHAParser::base_t, 603
prof_prepare	plugindescription_t, 838
mhachain::plugs_t, 466	query_dump
prof_process	MHAParser::base_t, 601
mhachain::plugs_t, 466	MHAParser::monitor_t, 650
prof_process_load	MHAParser::parser_t, 654
mhachain::plugs_t, 466	query_entries
prof_process_tt	MHAParser::base t, 601
mhachain::plugs_t, 466	MHAParser::parser_t, 654
prof_release	query_help
mhachain::plugs_t, 466	MHAParser::base_t, 603
prof_tt_con	query_id
mhachain::plugs_t, 466	MHAParser::base_t, 603
profiling	query_listids
mhachain::plugs_t, 466	MHAParser::base t, 603
provoke_inner_error	MHAParser::parser_t, 655
mha_dblbuf_t, 401	query_map_t
provoke_outer_error	MHAParser, 107
mha_dblbuf_t, 401	•
psrate	query_perm MHAParser::base_t, 602
fw_vars_t, 323	_ ·
Pu	MHAParser::monitor_t, 650
prediction_error_config, 854	MHAParser::variable_t, 664
rt_nlms_t, 862	query_range
push	MHAParser::base_t, 602
MHASignal::stat_t, 769	MHAParser::kw_t, 634
mha_rt_fifo_t, 428	MHAParser::range_var_t, 657
push_config	query_readfile
MHAPlugin::config_t, 689	MHAParser::base_t, 602
put_signal	MHAParser::parser_t, 654
MHAPlugin_Split::domain_handler_t, 702	query_savefile
pwinner_out	MHAParser::base_t, 602
MHAIOJackdb::io_jack_t, 545	MHAParser::parser_t, 654
	query_savefile_compact
q	MHAParser::base_t, 603
noisePowProposedScale::interface_t, 819	MHAParser::parser_t, 655
q_high	query_savemons
timoConfig, 906	MHAParser::base_t, 603
q_low	MHAParser::parser_t, 655
timoConfig, 906	query_subst
quant	MHAParser::base_t, 603
calibrator_runtime_layer_t, 216	query_t
quantile	MHAParser, 107
MHASignal, 119	query_type
quantizer_t	MHAParser::base_t, 602
MHASignal::quantizer_t, 755	MHAParser::bool_mon_t, 608
queries	MHAParser::bool_t, 610
MHAParser::base t, 605	MHAParser::complex_mon_t, 616
plugindescription_t, 838	MHAParser::complex_t, 618
query_addsubst	MHAParser::float_mon_t, 622
MHAParser::base_t, 603	MHAParser::float_t, 624
query_cmds	MHAParser::int_mon_t, 626
1 7—-	······································

	MHAParser::int_t, 629	AuditoryProfile::profile t, 213
	MHAParser::kw_t, 634	lpc_config, 374
	MHAParser::mcomplex_mon_t, 636	MHA_TCP::OS_EVENT_TYPE, 443
	MHAParser::mcomplex_t, 638	RUNNING
	MHAParser::mfloat mon t, 640	MHA_TCP::Thread, 451
	MHAParser::mfloat_t, 642	rad2smp
	MHAParser::mint_mon_t, 649	Vector and matrix processing toolbox, 45
	MHAParser::parser_t, 654	ramp_a
	MHAParser::string_mon_t, 660	hanning_ramps_t, 327
	MHAParser::string_t, 662	ramp_b
	MHAParser::vcomplex_mon_t, 667	hanning_ramps_t, 327
	MHAParser::vcomplex_t, 669	ramp_begin
	MHAParser::vfloat_mon_t, 671	MHAWindow::base_t, 799
	MHAParser::vfloat_t, 673	ramp_counter
	MHAParser::vint_mon_t, 675	altplugs_t, 202
	MHAParser::vint_t, 677	ramp_end
	MHAParser::vstring_mon_t, 679	MHAWindow::base_t, 799
	MHAParser::vstring_t, 681	ramp_len
que	ery_val	altplugs_t, 202
•	MHAParser::base_t, 602	ramplen
	MHAParser::bool mon t, 608	addsndfile::addsndfile_if_t, 175
	MHAParser::bool_t, 610	altplugs_t, 202
	MHAParser::complex_mon_t, 616	fader_wave::fader_wave_if_t, 307
	MHAParser::complex_t, 618	spec2wave_if_t, 885
	MHAParser::float_mon_t, 622	• — —
	MHAParser::float_t, 624	ramps spec2wave_t, 887
	MHAParser::int_mon_t, 626	•
	MHAParser::int_t, 629	range
	MHAParser::kw_t, 634	Vector and matrix processing toolbox, 41
	MHAParser::mcomplex_mon_t, 636	range_var_t MHAParser::range_var_t, 657
	MHAParser::mcomplex_t, 638	ratio
	MHAParser::mfloat_mon_t, 640	
	MHAParser::mfloat_t, 642	ds_t, 277
	MHAParser::mint_mon_t, 649	us_t, 912
	MHAParser::parser_t, 655	raw_p_max_name
	MHAParser::string_mon_t, 660	acTransform_wave, 171
	MHAParser::string_t, 662	acTransform_wave_config, 172
	MHAParser::vcomplex_mon_t, 667	raw_p_name acPooling wave config, 157
	MHAParser::vcomplex_t, 669	<u> </u>
	MHAParser::vfloat_mon_t, 671	acTransform_wave, 171
	MHAParser::vfloat_t, 673	acTransform_wave_config, 172
	MHAParser::vint_mon_t, 675	rb_f_t
	MHAParser::vint_t, 677	mha_ruby.cpp, 981
	MHAParser::vstring_mon_t, 679	rdata
	MHAParser::vstring_t, 681	MHASignal::matrix_t, 753
que	ery_version	mha_audio_t, 395
	MHAParser::base_t, 603	re
qui		mha_complex_t, 397
	fw_t, 320	read
R		MHAFilter::blockprocessing_polyphase _resampling_t, 482
11	AuditoryProfile::parser_t, 209	MHAFilter::polyphase_resampling_t, 525
	raditory rollioparsol_t, 203	wii in iitoipoiypiiase_iesaiiipiiiig_t, 323

MHAJack::port_t, 564	Complex arithmetics in the openMHA, 67
mha_drifter_fifo_t, 407	reclen
mha_fifo_lw_t, 414	acsave::acsave_t, 160
mha_fifo_t, 420	recmode
read_bytes	acmon::acmon_t, 152
MHA_TCP::Connection, 439	reconnect_inports
read_event	MHAIOJack::io_jack_t, 539
MHA_TCP::Connection, 440	MHAIOJackdb::io_jack_t, 543
read_get_cpu_load	reconnect_outports
MHAIOJack::io_jack_t, 539	MHAIOJack::io_jack_t, 539
MHAIOJackdb::io_jack_t, 544	MHAIOJackdb::io_jack_t, 543
read_get_scheduler	record
MHAIOJack::io_jack_t, 539	wavrec_t, 919
MHAIOJackdb::io_jack_t, 544	rect
read_get_xruns	MHAOvlFilter::ShapeFun, 102
MHAIOJack::io jack t, 539	MHAWindow, 122
MHAIOJackdb::io_jack_t, 544	rect_t
read_levels	MHAWindow::rect_t, 805
calibrator_t, 219	relative
read_line	MHASignal::loop_wavefragment_t, 742
MHA_TCP::Connection, 438	release
read_modified	ac2lsl::ac2lsl_t, 128
dc_simple::dc_if_t, 251	ac2osc_t, 138
read_ptr	ac2wave_if_t, 141
mha_fifo_t, 421	acConcat_wave, 146
readable_frames	acPooling_wave, 155
MHAFilter::polyphase_resampling_t, 525	acSteer, 166
readaccess	acTransform_wave, 170
MHAParser::base_t, 605	acmon::acmon_t, 151
reader_started	acsave::acsave t, 159
mha_drifter_fifo_t, 408	addsndfile::addsndfile_if_t, 174
reader_xruns_in_succession	adm_if_t, 189
mha_drifter_fifo_t, 409	altplugs_t, 200
reader_xruns_since_start	analysispath_if_t, 206
mha drifter fifo t, 409	bbcalib_interface_t, 215
reader_xruns_total	calibrator_t, 218
mha_drifter_fifo_t, 409	coherence::cohflt_if_t, 224
real	db if t, 236
MHASignal::matrix t, 749-751	dc simple::dc if t, 250
rear_channel	delaysum::delaysum if t, 262
adm_rtconfig_t, 193	doasym classification, 266
rear_channels	doasym_feature_extraction, 270
_ adm_if_t, 190	droptect_t, 274
adm_rtconfig_t, 193	ds_t, 277
rec_frames	example1_t, 290
acsave::cfg_t, 162	example2_t, 293
received_group	example3_t, 297
mhaserver_t, 725	example4_t, 300
receiver	fader_wave::fader_wave_if_t, 307
MHAEvents::connector_t, 473	fftfilterbank::fftfb_interface_t, 312
reciprocal	frequency_translator_t, 316

fw_t, 320	remove_ref
gain::gain_if_t, 325	algo_comm_t, 196
identity_t, 331	MHAKernel::algo_comm_class_t, 567
io_file_t, 334	remove_var
io_lib_t, 339	algo_comm_t, 195
io_parser_t, 342	MHAKernel::algo_comm_class_t, 567
io_tcp_sound_t, 354	repl_list
io_tcp_t, 358	MHAParser::base_t, 605
lpc, 363	repl list t
lpc_bl_predictor, 365	MHAParser::base_t, 600
lpc_burglattice, 370	replace
MHAIOJack::io_jack_t, 538	MHAParser::base_t::replace_t, 606
MHAIOJackdb::io_jack_t, 543	MHASignal::loop_wavefragment_t, 742
MHAJack::client_t, 559	replace_
MHAParser::mhapluginloader_t, 646	cfg_t, 222
MHAPlugin::plugin_t, 694	replace_t
MHAPlugin_Resampling::resampling_if←	MHAParser::base_t::replace_t, 606
_t, 697	resampled_num_frames
MHAPlugin_Split::splitted_part_t, 717	addsndfile, 79
mhachain::chain_base_t, 462	resampled_soundfile_t
mhachain::plugs_t, 465	addsndfile::resampled_soundfile_t, 178
multibandcompressor::interface_t, 811	resampling
nlms_t, 814	MHAFilter::blockprocessing_polyphase
overlapadd::overlapadd_if_t, 823	_resampling_t, 482
PluginLoader::fourway_processor_t, 843	resampling.cpp, 1026
PluginLoader::mhapluginloader_t, 846	resampling_factors
prediction_error, 851	MHAFilter, 93
route::interface_t, 859	resampling_filter_t
smoothgains_bridge::overlapadd_if_ ↔	MHAFilter::resampling_filter_t, 527
t, 877	resampling_if_t
steerbf, 892	MHAPlugin_Resampling::resampling_if←
timoSmooth, 910	_t, 697
us_t, 912	resampling_t
wavrec_t, 918	MHAPlugin_Resampling::resampling_t,
release_	698
iirfilter_t, 332	resamplingmode
MHAPlugin::plugin_t, 694	addsndfile::addsndfile_if_t, 175
MHAPlugin_Split::split_t, 712	reset
release_mutex	droptect_t, 275
mha fifo posix threads t, 416	MHA_TCP::Async_Notify, 432
mha_fifo_thread_platform_t, 424	MHA_TCP::Wakeup_Event, 457
remove_abandonned	reset_state
mha_rt_fifo_t, 428	MHAFilter::gamma_flt_t, 500
remove_all	resize
mha_rt_fifo_t, 428	MHAFilter::iir_filter_t, 505
remove_all_cfg	resolution
MHAPlugin::config_t, 691	acTransform_wave_config, 172
remove_item	resolve
MHAParser::parser_t, 653, 654	dynamiclib_t, 278
remove_lock	resolve_and_init
mhamain.cpp, 1020	PluginLoader::mhapluginloader_t, 847
	- 3

resolve_checked	level, 857
dynamiclib_t, 278	level_db, 857
result	peak, 857
cpuload_t, 235	peak_db, 857
resynthesis_gain	process, 857
MHAFilter::gamma_flt_t, 501	rmslevel_t, 857
ret_size	rmslevelmeter
MHAParser::c_ifc_parser_t, 613	transducers.cpp, 1036
return_imag	root
fftfilterbank::fftfb_interface_t, 312	mha_rt_fifo_t, 429
return_imag_	rotated_i
fftfilterbank::fftfb_plug_t, 314	acTransform_wave_config, 172
return_value	rotated_p
MHA_TCP::Thread, 452	acTransform_wave_config, 172
return_wave	rotated_p_max_name
wave2spec_if_t, 914	acTransform_wave, 171
retv	rotated p name
MHAParser::c_ifc_parser_t, 613	acTransform_wave, 171
rewind	route, 125
MHASignal::loop_wavefragment_t, 744	route.cpp, 1026
rho	route::interface_t, 858
nlms_t, 815	algo, 859
prediction_error, 851	cfac, 859
ringbuffer	cfin, 859
MHAFilter::polyphase_resampling_t, 526	cfout, 859
ringbuffer_t	interface_t, 859
MHASignal::ringbuffer_t, 758	patchbay, 859
rm_parent_on_remove	prepare, 859
MHAParser::base_t, 604	prepared, 859
rms	process, 859
MHASignal::loop_wavefragment_t, 742	release, 859
plingploing::plingploing_t, 833	route_ac, 859
rms_limit40	route_out, 859
MHASignal::loop_wavefragment_t, 742	stopped, 859
rmsdb	update, 859
example6_t, 303	route::process_t, 860
rmslevel	process, 860
calibrator_variables_t, 220	process_t, 860
dc::dc_t, 242	sout, 860
MHASignal::async rmslevel t, 727	sout ac, 860
Vector and matrix processing toolbox, 56,	wout, 860
57	wout_ac, 860
rmslevel.cpp, 1026	route_ac
rmslevel_if_t, 855	route::interface_t, 859
name, 856	route_out
prepare, 856	route::interface_t, 859
process, 856	rows
rmslevel_if_t, 856	acsave::mat4head_t, 162
rmslevel_t, 857	rt_nlms_t, 861
fftlen, 857	~rt_nlms_t, 862
insert, 857	ac, 862
	40, 002

channels, 862	prediction_error_config, 854
F, 862	s_Y_delayflt
frames, 862	prediction_error_config, 854
fu, 863	s_b
fu_previous, 863	lpc_bl_predictor_config, 368
fuflt, 863	lpc_burglattice_config, 372
insert, 862	s_E
n_no_update_, <mark>863</mark>	prediction_error_config, 854
name_d_, <mark>863</mark>	rt nlms t, 863
name_e_, 863	s_f
name_u_, <mark>863</mark>	lpc_bl_predictor_config, 368
no_iter, 863	lpc_burglattice_config, 372
ntaps, 862	s_file_in
P_Sum, 863	io_file_t, 336
process, 862	s_in
Pu, 862	io_file_t, 335
rt_nlms_t, 862	
s_E, 863	io_parser_t, 342
U, 862	io_tcp_sound_t, 356
Uflt, 862	MHAIOPortAudio::io_portaudio_t, 550
y_previous, 863	MHAJack::client_t, 562
rt_process	s_out
analysepath_t, 204	coherence::cohflt_t, 227
rt_strict	combc_t, 231
ac2lsl::ac2lsl_t, 128	fftfilterbank::fftfb_plug_t, 314
ac2osc_t, 139	io_file_t, 336
rtcalibrator	io_parser_t, 342
transducers.cpp, 1036	MHAIOPortAudio::io_portaudio_t, 550
rtmem	MHAJack::client_t, 562
ac2osc_t, 139	s_U
run	prediction_error_config, 854
MHA_TCP::Thread, 452	s_W
mhaserver_t, 725	prediction_error_config, 854
RunOnce, 863	sInput
RunOnce, 864	MHAFilter::fftfilter_t, 490
runtime configuration, 4	SOCKET_ERROR
rval	mha_tcp.cpp, 996
MHAParser::expression_t, 620	SOCKET
Wi i/ ti discrcxpression_t, 020	MHA_TCP, 88
s E pred err delay	mha_tcp.cpp, 996
prediction_error_config, 854	SPP
s LPC	timo_AC, 902
prediction_error_config, 854	START_BETA
s_U_delay	ADM, 80
prediction_error_config, 854	STRERROR
s_U_delayflt	MHA_TCP, 88
prediction_error_config, 854	STRLEN
s_Usmpl	mha_errno.c, 958
prediction_error_config, 855	sWeights
s_Wflt	MHAFilter::fftfilter_t, 490
prediction_error_config, 854	safe_div
s_Y_delay	Complex arithmetics in the openMHA, 66
<u> · _ ~ 0 · ~ J</u>	John prox and into too in the openini in,

mha_signal.cpp, 984	example3_t, 297
mha_signal.hh, 993	example4_t, 301
sample	plugin_interface_t, 836
lpc_config, 374	scale_channel
samplerate	MHASignal::spectrum_t, 768
io_file_t, 335	MHASignal::waveform_t, 784
io_tcp_sound_t, 355	scale_frame
MHAIOPortAudio::io_portaudio_t, 550	MHASignal::waveform_t, 785
MHAJack::client_t, 561	scale_fun_t
samples_AC	MHAOvlFilter, 99
acConcat_wave, 146	scale_var_t
samplingrate	MHAOvlFilter::scale_var_t, 596
MHAOvlFilter::fftfb_t, 581	scalefac
save_m	MHATableLookup::linear_table_t, 791
acsave::save_var_t, 164	scaler_t
save_mat4	gain::scaler_t, 326
acsave::save_var_t, 163	scan_dir
save_spec.cpp, 1026	addsndfile::addsndfile_if_t, 175
save_spec_t, 864	scan_plugin
basename, 865	pluginbrowser_t, 837
prepare, 865	scan_plugins
process, 865	pluginbrowser_t, 837
save_spec_t, 865	scheduler
save_txt	analysepath_t, 204
acsave::save_var_t, 163	MHAPlugin_Split::posix_threads_t, 709
save_var_t	schroeder_t
ac2lsl::save_var_t, 132	MHASignal::schroeder_t, 762
ac2lsl::save_var_t< mha_complex_t >,	search_pattern
134	addsndfile::addsndfile_if_t, 175
acsave::save_var_t, 163	search_result
save_vars	addsndfile::addsndfile_if_t, 175
acmon::acmon_t, 152	sec2smp
save_wave.cpp, 1026	Vector and matrix processing toolbox, 43
save_wave_t, 866	select_plug
basename, 867	altplugs_t, 202
prepare, 867	select_source
process, 867	MHAMultiSrc::base_t, 571
save_wave_t, 866	selected_plug
saveas_mat4	altplugs_t, 202
MHASignal, 119, 120	send_frame
SC	ac2lsl::save_var_base_t, 131
MHASignal::hilbert_fftw_t, 739	ac2lsl::save_var_t, 133
spec2wave_t, 887	ac2lsl::save_var_t< mha_complex_t >
scale	135
example5_t, 302	send_osc_float
MHASignal, 117	ac2osc_t, 138
MHASignal::fft_t, 738	Server
MHASignal::spectrum_t, 767	MHA_TCP::Server, 444, 445
MHASignal::waveform_t, 784	server
scale_ch	io_tcp_t, 359
example2_t, 294	server_fragsize

MHAIOJackdb::io_jack_t, 545	parser_int_dyn, 828
server_port_open	set_minabs
io_tcp_parser_t, 351	mha_signal.cpp, 984
server_srate	mha_signal.hh, 993
MHAIOJackdb::io_jack_t, 545	set_new_peer
servername	io_tcp_parser_t, 350
MHAIOJack::io_jack_t, 539	set_node_id
MHAIOJackdb::io_jack_t, 544	MHAParser::base_t, 603
serversocket	set_output_domain
MHA_TCP::Server, 446	MHAPlugin_Split::domain_handler_t, 701
set	set_output_portnames
Complex arithmetics in the openMHA, 62,	MHAJack::client_t, 560
63	set_parse_cb
MHA_TCP::Async_Notify, 432	MHAParser::c_ifc_parser_t, 612
testplugin::config_parser_t, 897	set_range
set_announce_port	MHAParser::kw t, 634
mhaserver_t, 725	MHAParser::range_var_t, 657
set_channelcnt	set_server_port_open
MHAFilter::adapt_filter_t, 479	io_tcp_parser_t, 349
set connected	set_state
io_tcp_parser_t, 350	MHAFilter::complex_bandpass_t, 484
set_entries	MHAFilter::iir_ord1_real_t, 507
MHAParser::keyword_list_t, 631	set_tau
set_errnos	MHAFilter::o1flt_lowpass_t, 513
io_tcp_fwcb_t, 344	MHAFilter::o1flt_maxtrack_t, 515
set_error	MHAFilter::o1flt_mintrack_t, 517
mha_fifo_lw_t, 414	set_tau_attack
set_fb_pars	MHAFilter::o1_ar_filter_t, 510
DynComp::dc_afterburn_t, 281	set_tau_release
set_help	MHAFilter::o1_ar_filter_t, 510
MHAParser::base_t, 604	set_use_jack_transport
set_id_string	MHAIOJackdb::io_jack_t, 544
MHAParser::parser_t, 655	MHAJack::client_t, 560
set_index	set_value
MHAParser::keyword_list_t, 631	MHAParser::keyword list t, 631
set_input_domain	set_weights
MHAPlugin_Split::domain_handler_t, 701	MHAFilter::complex_bandpass_t, 484
set_input_portnames	MHAFilter::gamma_flt_t, 500
MHAJack::client t, 560	set_xfun
set level	MHATableLookup::xy table t, 795
addsndfile::addsndfile if t, 175	set xmax
fader_wave::fader_wave_if_t, 307	MHATableLookup::linear table t, 790
set level db	set xmin
MHASignal::loop_wavefragment_t, 744	MHATableLookup::linear_table_t, 789
set level lin	• — —
	set_xyfun MHATablol ookup::xy/ tablo t 796
MHASignal::loop_wavefragment_t, 744	MHATableLookup::xy_table_t, 796
set_local_port	set_yfun MHATablol aakuniiwu tablo t 706
io_tcp_parser_t, 348	MHATableLookup::xy_table_t, 796 setchannels
set_locate MHAIO lackdbilio lack t 544	
MHAIOJackdb::io_jack_t, 544	dc::wideband_inhib_vars_t, 248
set_max_angle_ind	setlock

io_file_t, 334	basename, 873
MHAParser::variable_t, 664	prepare, 873
testplugin::config_parser_t, 897	process, 873
sf	shadowfilter_end_t, 872
MHASndFile::sf_t, 786	shadowfilter_end_t
wavwriter_t, 920	shadowfilter_end::shadowfilter_end_<
sf_in	t, 872
io_file_t, 336	shape
sf_out	MHAOvIFilter::fftfb_t, 581
io_file_t, 336	shapes
sf_t	MHAOvIFilter::fftfb_vars_t, 584
MHASndFile::sf_t, 786	shift
sf_wave_t	lpc, 363
MHASndFile::sf_wave_t, 787	lpc_config, 373
sfinf_in	shifted
io_file_t, 336	hilbert_shifter_t, 329
sfinf_out	side
io_file_t, 336	mha_channel_info_t, 396
shadowfilter_begin, 125	sign_t
shadowfilter_begin.cpp, 1027	MHASignal::schroeder_t, 762
shadowfilter_begin::cfg_t, 867	signal
cfg_t, 868	testplugin::if_t, 899
in_spec_copy, 868	signal_counter
nch, 868	MHASignal, 121
ntracks, 868	signal_out
out_spec, 868	MHAPlugin_Split::split_t, 713
process, 868	signal_parser_t
shadowfilter_begin::shadowfilter_begin_t, 869	testplugin::signal_parser_t, 900
basename, 870	sin125
nch, 870	speechnoise_t, 889
ntracks, 870	sin1k
prepare, 870	speechnoise_t, 889
process, 870	sin250
shadowfilter_begin_t, 869	speechnoise_t, 889
shadowfilter_begin_t	sin2k
shadowfilter_begin::shadowfilter_begin←	speechnoise_t, 889
_t, 869	sin4k
shadowfilter_end, 125	speechnoise_t, 889
shadowfilter_end.cpp, 1027	sin500
shadowfilter_end::cfg_t, 870	speechnoise_t, 889
ac, 871	sin8k
cfg_t, 871	speechnoise_t, 889
gains, 871	sinc
in_spec, 871	MHAFilter, 93
name, 871	sine.cpp, 1027
nch_out, 871	sine_cfg_t, 873
nfft, 871	amplitude, 874
ntracks, 871	channels, 874
out_spec, 871	mix, 874
process, 871	phase_increment_div_2pi, 874
shadowfilter_end::shadowfilter_end_t, 872	sine_cfg_t, 874

sine_t, 874	update, 878
\sim sine_t, 875	smoothgains_bridge::smoothspec_wrap_
channels, 876	t, 878
frequency, 876	proc_1, 879
lev, 876	proc_2, 879
mode, 876	smoothspec, 879
patchbay, 876	smoothspec_epsilon, 879
phase_div_2pi, 876	smoothspec_wrap_t, 879
prepare, 875	spec_in_copy, 879
process, 875	use_smoothspec, 879
sine_t, 875	smoothspec
update_cfg, 875	MHAFilter::smoothspec_t, 530
size	smoothgains_bridge::smoothspec_←
MHA_AC::ac2matrix_helper_t, 379	wrap_t, 879
MHA_AC::acspace2matrix_t, 384	smoothspec_epsilon
MHAKernel::algo_comm_class_t, 568	smoothgains_bridge::smoothspec_←
MHASignal::matrix_t, 749	wrap_t, 879
Vector and matrix processing toolbox, 47,	smoothspec_t
48	MHAFilter::smoothspec_t, 529
size_t	smoothspec_wrap_t
MHAParser::keyword list t, 630	smoothgains_bridge::smoothspec_←
skip	wrap_t, 879
ac2lsl::ac2lsl_t, 128	smp2rad
ac2lsl::cfg_t, 130	Vector and matrix processing toolbox, 44
ac2osc_t, 139	smp2sec
skipcnt	Vector and matrix processing toolbox, 43
ac2lsl::cfg_t, 130	smpl
ac2osc_t, 139	prediction_error_config, 855
Sleep	sn_in
mha_tcp.hh, 998	MHAJack::client avg t, 553
slope	MHAJack::client_noncont_t, 555
softclipper_t, 882	sn_out
softclipper_variables_t, 884	MHAJack::client_avg_t, 553
slope_db	MHAJack::client_avg_t, 556
softclip_t, 881	sndfile t
smoothgains_bridge, 126	addsndfile::sndfile_t, 179
	- ·
smoothgains_bridge.cpp, 1027	snprintf_required_length
smoothgains_bridge::overlapadd_if_t, 876	mha_error_helpers, 86
~overlapadd_if_t, 877	snrPost1Debug
algo, 878	noisePowProposedScale::noisePow←
cf_in, 878	Proposed, 821
cf_out, 878	sock_addr
epsilon, 878	MHA_TCP::Server, 446
irswnd, 878	sock_init_t
mode, 878	MHA_TCP::sock_init_t, 447
overlapadd_if_t, 877	sock_initializer
patchbay, 878	MHA_TCP, 89
plugloader, 878	Sockaccept_Event
prepare, 877	MHA_TCP::Sockaccept_Event, 447
process, 877	Sockread_Event
release, 877	MHA_TCP::Sockread_Event, 448

Sockwrite_Event	sout_ac
MHA_TCP::Sockwrite_Event, 449	route::process_t, 860
softclip	spec2fir
calibrator_runtime_layer_t, 216	MHAFilter, 93
calibrator_variables_t, 220	MHAFilter::smoothspec_t, 530
softclip.cpp, 1028	spec2spec
softclip_t, 880	plugindescription_t, 838
attack, 881	spec2wave
decay, 881	MHASignal::fft_t, 736
patchbay, 881	plugindescription_t, 838
prepare, 881	spec2wave.cpp, 1028
process, 881	max, 1028
slope_db, 881	min, 1028
softclip_t, 881	spec2wave_if_t, 884
start_limit, 881	patchbay, 885
tftype, 881	prepare, 885
update, 881	process, 885
softclipper_t, 881	ramplen, 885
attack, 882	spec2wave_if_t, 885
clipmeter, 882	update, 885
decay, 882	window_config, 885
hardlimit, 882	spec2wave_scale
linear, 882	MHASignal::fft_t, 737
process, 882	spec2wave_t, 886
slope, 882	\sim spec2wave_t, 886
softclipper_t, 882	calc_out, 887
threshold, 882	ft, 886
softclipper_variables_t, 883	nfft, 887
clipped, 884	npad1, 886
hardlimit, 884	npad2, <mark>887</mark>
linear, 884	nwndshift, 887
max_clipped, 884	out_buf, 887
slope, 884	postwindow, 887
softclipper_variables_t, 883	process, 886
tau_attack, 883	ramps, 887
tau_clip, 884	sc, 887
tau_decay, 884	spec2wave_t, 886
threshold, 884	write_buf, 887
sort_fftw2spec	spec_fader_t, 887
MHASignal::fft_t, 737	\sim spec_fader_t, 888
sort_spec2fftw	fr, 888
MHASignal::fft_t, 737	gains, 888
sound	nch, 888
io_tcp_t, 359	spec_fader_t, 888
source_channel_index	spec_in
MHAFilter::partitioned_convolution_t ———————————————————————————————————	MHAPlugin_Split::domain_handler_t, 704
::index_t, 522	overlapadd::overlapadd_t, 826
MHAFilter::transfer_function_t, 535	wave2spec_t, 917
sout	spec_in_copy
matrixmixer::cfg_t, 375	smoothgains_bridge::smoothspec_←
route::process_t, 860	wrap_t, 879

spec_out	TEN_SPL, 889
MHAPlugin_Split::domain_handler_t, 704	white, 889
MHAPlugin_Split::split_t, 714	split.cpp, 1031
timoConfig, 907	default_thread_platform_string, 1032
specSteer1	default_thread_platform_type, 1032
acSteer_config, 168	MHAPLUGIN OVERLOAD OUTDOM↔
specSteer2	AIN, 1032
acSteer_config, 168	posixthreads, 1032
spectrum_t	split_t
MHA_AC::spectrum_t, 389	MHAPlugin Split::split t, 712
MHAMultiSrc::spectrum_t, 573	splitted_part_t
MHASignal::spectrum_t, 765	MHAPlugin_Split::splitted_part_t, 716
speechnoise	spnoise_channels
calibrator_runtime_layer_t, 217	calibrator_variables_t, 220
speechnoise.cpp, 1028	spnoise_level
bandw_correction, 1030	calibrator_variables_t, 220
erb hz f hz, 1030	spnoise_mode
fhz2bandno, 1030	calibrator_variables_t, 220
hz2hz, 1030	spnoise_parser
NUM_ENTR_LTASS, 1029	calibrator_variables_t, 220
NUM_ENTR_MHAORIG, 1029	
NUM_ENTR_OLNOISE, 1029	spp timoSmooth, 911
vLTASS_combined_lev, 1031	srate
vLTASS_female_lev, 1031	adm_if_t, 190
vLTASS_freq, 1030	calibrator_variables_t, 220
vLTASS_male_lev, 1031	MHAParser::mhaconfig_mon_t, 645
vMHAOrigFreq, 1030	MHAPlugin_Resampling::resampling_if → 007
vMHAOrigSpec, 1030	_t, 697
vOlnoiseFreq, 1031	mhaconfig_t, 468
vOlnoiseLev, 1031	testplugin::config_parser_t, 897
speechnoise.h, 1031	srate_
speechnoise_t, 888	MHAFilter::gamma_flt_t, 501
brown, 889	srcfile
creator, 890	MHAParser::parser_t, 655
LTASS_combined, 889	srcline
LTASS_female, 889	MHAParser::parser_t, 655
LTASS_male, 889	start
mha, 889	fw_t, 319
noise_type_t, 889	io_file_t, 334
olnoise, 889	io_lib_t, 338
pink, 889	io_parser_t, 341
sin125, 889	io_tcp_fwcb_t, 344
sin1k, 889	io_tcp_t, 358
sin250, 889	MHAJack::client_t, 559
sin2k, 889	start_event
sin4k, 889	io_file_t, 335
sin500, 889	io_parser_t, 342
sin8k, 889	io_tcp_fwcb_t, 345
speechnoise_t, 890	MHAIOPortAudio::io_portaudio_t, 550
TEN_SPL_250_8k, 889	MHAJack::client_t, 562
TEN_SPL_50_16k, 889	start_handle
_	

io_file_t, 335	std
io_parser_t, 342	MHA_AC::stat_t, 391
io_tcp_fwcb_t, 346	std_vector_float
MHAIOPortAudio::io_portaudio_t, 550	Vector and matrix processing toolbox, 52
MHAJack::client_t, 562	std_vector_vector_complex
start limit	Vector and matrix processing toolbox, 53
softclip_t, 881	std_vector_vector_float
start_lin	Vector and matrix processing toolbox, 52
cfg_t, 222	stdcomplex
start_new_session	Complex arithmetics in the openMHA, 63
wavrec t, 918	steerFile
started	acSteer, 167
fw_t, 320	steerbf, 890
io_parser_t, 342	~steerbf, 891
starting	angle_ind, 892
mha_drifter_fifo_t, 408	angle_src, 892
startpos	bf_src, 892
addsndfile::addsndfile_if_t, 175	patchbay, 892
startsample	prepare, 891
•	process, 891
io_file_t, 335	•
startup_zeros	release, 892
mha_drifter_fifo_t, 410	steerbf, 891
stat_t	update_cfg, 892
MHA_AC::stat_t, 391	steerbf.cpp, 1032
MHASignal::stat_t, 769	INSERT_PATCH, 1033
state	PATCH_VAR, 1033
fw_t, 322	steerbf.h, 1033
MHA_TCP::Thread, 452	steerbf_config, 892
MHAFilter::filter_t, 498	_steerbf, 893
state_cpuload	∼steerbf_config, 893
MHAIOJack::io_jack_t, 540	ac, 893
MHAIOJackdb::io_jack_t, 545	bf_src_copy, 893
state_parser	bf_vec, 893
MHAIOJack::io_jack_t, 540	nangle, 893
MHAIOJackdb::io_jack_t, 545	nchan, <mark>893</mark>
state_priority	nfreq, 893
MHAIOJack::io_jack_t, 540	outSpec, 893
MHAIOJackdb::io_jack_t, 545	process, 893
state_scheduler	steerbf_config, 893
MHAIOJack::io_jack_t, 540	stime
MHAIOJackdb::io_jack_t, 545	MHA_TCP, 89
state_t	stop
fw_t, 319	fw_t, 319
state xruns	io file t, 334
MHAIOJack::io_jack_t, 540	io_lib_t, 338
MHAIOJackdb::io_jack_t, 545	io_parser_t, 342
staticgain	io_tcp_fwcb_t, 345
coherence::cohflt_t, 227	io_tcp_t, 358
coherence::vars_t, 228	MHAJack::client_t, 559
status	mha_drifter_fifo_t, 408
MHA_TCP::Wakeup_Event, 458	stop_event
	I —

io_file_t, 335	MHAIOPortAudio::device_info_t, 547
io_parser_t, 342	subsample_delay_t
io_tcp_fwcb_t, 345	MHASignal::subsample_delay_t, 770
MHAIOPortAudio::io_portaudio_t, 550	subsampledelay_coeff
MHAJack::client_t, 562	ADM, 79
stop_handle	sum
io_file_t, 335	MHASignal::stat_t, 769
io_parser_t, 342	MHASignal::waveform_t, 779, 780
io_tcp_fwcb_t, 346	sum2
MHAIOPortAudio::io portaudio t, 550	MHASignal::stat_t, 769
MHAJack::client t, 562	sum_channel
<u> </u>	
stopped	MHASignal::waveform_t, 780
fw_t, 320	sumsqr ANIA Signal mysys form 1, 700
io_file_t, 334	MHASignal::waveform_t, 780
io_parser_t, 342	sumsqr_channel
MHAJack::client_t, 561	Vector and matrix processing toolbox, 58
route::interface_t, 859	sumsqr_frame
store	Vector and matrix processing toolbox, 59
mon_t, 807	SVC
store_frame	analysepath_t, 204
acsave::cfg_t, 161	symmetry_scale
acsave::save_var_t, 163	MHAOvlFilter::fspacing_t, 589
str2val	sync
MHAParser::StrCnv, 110, 111	mha_fifo_lw_t, 414
str2val< mha_real_t >	mha_fifo_thread_guard_t, 422
MHAParser::StrCnv, 110	sysread
str_error	MHA_TCP::Connection, 436
MHAJack::client_t, 560	syswrite
strNames AC	MHA_TCP::Connection, 437
acConcat_wave_config, 147	_ ,
strdom	Т
analysemhaplugin.cpp, 931	MHA_TCP::OS_EVENT_TYPE, 443
latex_doc_t, 360	†
stream	acsave::mat4head_t, 162
ac2lsl::save_var_t, 133	mha tictoc t, 458
ac2lsl::save_var_t< mha_complex_t >,	plingploing::plingploing_t, 832
135	tAC
strict_channel_match	timoConfig, 906
io_file_t, 335	TEN_SPL_250_8k
strict srate match	speechnoise t, 889
io file t, 335	• = -
:	TEN_SPL_50_16k
stride	speechnoise_t, 889
comm_var_t, 233	TEN_SPL
testplugin::ac_parser_t, 895	speechnoise_t, 889
string_mon_t	table
MHAParser::string_mon_t, 659	cpuload_t, 235
string_t	table_t
MHAParser::string_t, 662	MHATableLookup::table_t, 792
strreplace	tail
MHAParser, 107	MHAFilter::fftfilterbank_t, 494
structVersion	target_channel_index

MHAFilter::partitioned_convolution_t ←	testplugin, 126
::index_t, 522	testplugin.cpp, 1033
MHAFilter::transfer_function_t, 535	testplugin::ac_parser_t, 894
tau	_MHA_AC_CHAR, 895
coherence::vars_t, 228	_MHA_AC_DOUBLE, 895
droptect_t, 275	_MHA_AC_FLOAT, 895
fader if t, 305	MHA AC INT, 895
tau attack	MHA AC MHACOMPLEX, 895
softclipper_variables_t, 883	MHA_AC_MHAREAL, 895
tau beta	_unknown, 895
_ adm_if_t, 190	ac_parser_t, 895
tau_clip	char_data, 895
softclipper_variables_t, 884	complex_data, 895
tau_decay	data_type, 895
softclipper_variables_t, 884	data_type_t, 895
tau_level	do_get_var, 895
calibrator variables t, 220	do_insert_var, 895
tau_unit	float_data, 895
coherence::vars_t, 228	get_var, 895
tauattack	insert_var, 895
dc::dc_vars_t, 244	int data, 895
dc_simple::dc_vars_t, 256	num_entries, 895
taudecay	patchbay, 895
dc::dc_vars_t, 245	stride, 895
dc_simple::dc_vars_t, 256	testplugin::config_parser_t, 896
taugain	channels, 897
DynComp::dc_afterburn_vars_t, 284	config_parser_t, 896
taurmslevel	domain, 897
dc::dc_vars_t, 244	fftlen, 897
tcp_connect_to	fragsize, 897
mha_tcp.cpp, 996	get, 897
tcp_connect_to_with_timeout	set, 897
• — — — —	setlock, 897
mha_tcp.cpp, 996	srate, 897
tcpserver mhaserver t, 726	
<u> </u>	wndlen, 897
termination_request	testplugin::if_t, 898
MHAPlugin_Split::posix_threads_t, 709	_prepare, 899
test_error	ac, 899
io_lib_t, 339	config_in, 899
MHAParser::c_ifc_parser_t, 612	config_out, 899
PluginLoader::mhapluginloader_t, 847	if_t, 899
test_fail	patchbay, 899
dc_simple, 82	plug, 899
test_prepare	prepare, 899
testplugin::if_t, 899	process, 899
test_process	signal, 899
testplugin::if_t, 899	test_prepare, 899
test_version	test_process, 899
PluginLoader::mhapluginloader_t, 847	testplugin::signal_parser_t, 900
testalsadevice.c, 1033	input_spec, 900
main, 1033	input_wave, 900

output_spec, 900	droptect_t, 275
output_wave, 900	softclipper_t, 882
signal_parser_t, 900	softclipper variables t, 884
tftype	tictoc
MHAPlugin::plugin_t, 695	mhachain::plugs_t, 466
softclip_t, 881	timeout
The MHA Framework interface, 26	MHA_TCP::OS_EVENT_TYPE, 443
The openMHA configuration language, 33	MHA TCP::Timeout Watcher, 455
The openMHA Plugins (programming inter-	Timeout_Event
face), 6	MHA_TCP::Timeout_Event, 454
MHAPLUGIN_CALLBACKS_PREFIX, 8	Timeout_Watcher
MHAPLUGIN_CALLBACKS, 8	MHA_TCP::Timeout_Watcher, 455
MHAPLUGIN_DOCUMENTATION, 9	timeshift
The openMHA Toolbox library, 34	Vector and matrix processing toolbox, 49
thefullname	timo_AC, 901
MHAParser::base t, 605	alpha_frame_AC, 902
thirdoctave_analyzer_t	alpha_hat_AC, 902
MHAFilter::thirdoctave_analyzer_t, 532	copy, 901
this_outer_out	gain_wiener_AC, 902
MHASignal::doublebuffer_t, 735	gamma_post_AC, 901
thr_f	insert, 901
MHA_TCP::Thread, 451	lambda_ceps_AC, 902
Thread	lambda_deps_AO, 302
MHA_TCP::Thread, 451	lambda_ml_ceps_AC, 902
thread	lambda_ml_smooth_AC, 902
analysepath_t, 204	lambda_m_smooth_AO, 902
io_tcp_t, 359	log_lambda_spec_AC, 902
MHAPlugin_Split::posix_threads_t, 709	max_q_AC, 902
MHAPlugin Split::splitted part t, 719	max_val_AC, 902
thread_arg	pitch_set_first_AC, 902
MHA_TCP::Thread, 453	pitch_set_last_AC, 902
thread_attr	SPP, 902
MHA_TCP::Thread, 452	timo_AC, 901
thread_finish_event	winF0_AC, 901
MHA TCP::Thread, 452	xi est AC, 902
<u> </u>	
thread_func	xi_ml_AC, 902
MHA_TCP::Thread, 453	timo_params, 903 alpha const limits hz, 904
thread_handle	alpha_const_innis_riz, 904 alpha const vals, 904
MHA_TCP::Thread, 452	• = = •
thread_platform	alpha_pitch, 904
MHAPlugin_Split::split_t, 713	beta_const, 904
thread_platform_t	delta_pitch, 904
MHAPlugin_Split::thread_platform_t, 720	f0_high, 904
thread_start	f0_low, 904
analysispath.cpp, 932	gain_min_db, 904
MHAPlugin_Split::posix_threads_t, 708	in_cfg, 904
thread_start_func	kappa_const, 904
mha_tcp.cpp, 996	lambda_thresh, 904
thread_startup_function	noisePow_name, 904
MHAIOTCP.cpp, 1016	prior_q, 904
threshold	timo_params, 903

winF0, 904	alpha_const_vals, 911
xi_min_db, 904	alpha_pitch, 910
xi_opt_db, 904	beta_const, 910
timoConfig, 904	delta_pitch, 910
∼timoConfig, 906	f0_high, 910
ac, 906	f0_low, 910
alpha_const, 906	gain_min_db, 911
alpha_frame, 907	kappa_const, 910
alpha_hat, 907	lambda_thresh, 910
alpha_prev, 907	noisePow_name, 911
copy_AC, 906	on_model_param_valuechanged, 910
fftlen, 906	patchbay, 911
GLRexp, 907	prepare, 910
GLR, 907	prepared, 911
gain_min, 906	prior_q, 911
gain wiener, 907	process, 909
gamma_post, 907	release, 910
lambda ceps, 907	
= . ,	spp, 911 timoSmooth, 909
lambda_ceps_prev, 907	•
lambda_ml_ceps, 907	update_cfg, 910
lambda_ml_full, 907	win_f0, 911
lambda_ml_smooth, 907	xi_min_db, 910
lambda_spec, 907	xi_opt_db, 911
log_lambda_spec, 907	timoSmooth.cpp, 1034
logGLRFact, 907	INSERT_PATCH, 1035
max_q, 907	INSERT_VAR, 1035
max_val, 907	PATCH_VAR, 1035
mha_fft, 906	timoconfig.cpp, 1034
nchan, 906	CHANLOOP, 1034
nfreq, 906	EPSILON, 1034
noisePow, 907	LPSCALE, 1034
ola_powspec_scale, 906	OVERLAP_FACTOR, 1034
params, 906	POWSPEC_FACTOR, 1034
pitch_set_first, 907	timoconfig.h, 1034
pitch_set_last, 907	timosmooth.h, 1035
powSpec, 907	tmp_spec
priorFact, 907	MHAFilter::smoothspec_t, 531
process, 906	tmp_wave
q_high, 906	MHAFilter::smoothspec_t, 531
q_low, 906	to_from
spec_out, 907	acTransform_wave, 171
tAC, 906	acTransform_wave_config, 172
timoConfig, 906	total_read
winF0, 906	io_file_t, 336
xi_est, 907	transducers.cpp, 1035
xi_min, 906	kw_index2type, 1036
xi_ml, 907	rmslevelmeter, 1036
xiOpt, 907	rtcalibrator, 1036
timoSmooth, 908	vint_0123n1, 1036
∼timoSmooth, 909	transfer_function_t
alpha_const_limits_hz, 911	MHAFilter::transfer_function_t, 534

trigger_processing	MHAParser::range_var_t, 658
MHAPlugin_Split::split_t, 712	MHASignal::quantizer_t, 756
MHAPlugin_Split::splitted_part_t, 718	up_thresh
trim	acPooling_wave_config, 157
MHAParser, 107	update
try_accept	ac2lsl::ac2lsl_t, 128
MHA_TCP::Server, 446	ac2wave_if_t, 141
try_write	addsndfile::addsndfile_if_t, 174
MHA_TCP::Connection, 439	adm_if_t, 189
ttl	calibrator_t, 219
ac2osc_t, 138	coherence::cohflt_if_t, 224
tv1	dc::dc_if_t, 240
mha_tictoc_t, 458	dc::wideband_inhib_vars_t, 248
tv2	delay::interface_t, 260
mha_tictoc_t, 458	DynComp::dc_afterburn_t, 282
tz	DynComp::gaintable_t, 287
mha_tictoc_t, 458	frequency_translator_t, 316
	MHA_AC::ac2matrix_t, 380
U	MHA_AC::acspace2matrix_t, 384
rt_nlms_t, 862	MHA_AC::stat_t, 391
UCL	MHAMultiSrc::spectrum_t, 573
AuditoryProfile::parser_t::ear_t, 210	MHAMultiSrc::waveform_t, 575
AuditoryProfile::profile_t::ear_t, 213	MHAParser::mhaconfig_mon_t, 644
UPrew	MHAPlugin_Split::split_t, 712
prediction_error_config, 855	mhachain::chain_base_t, 462
UPrewW	nlms_t, 815
prediction_error_config, 855	overlapadd::overlapadd_if_t, 823
UbufferPrew	plingploing::if_t, 829
prediction_error_config, 854	route::interface t, 859
Ufit	smoothgains_bridge::overlapadd_if_←
rt_nlms_t, 862	t, 878
uint_mode	softclip_t, 881
addsndfile::addsndfile_if_t, 175	spec2wave_if_t, 885
uint_vector_t	wave2spec if t, 914
MHASignal::uint_vector_t, 773	update_bbgain
underflow	gain::gain_if_t, 325
MHAFilter::polyphase_resampling_t, 526	update_burner
unit	DynComp::dc_afterburn_t, 281
MHAOvlFilter::fscale_t, 587	update cfg
unit2hz	acConcat_wave, 146
MHAOvlFilter::scale_var_t, 596	acPooling_wave, 155
unlock_channels	acSteer, 167
fw_vars_t, 323	acTransform_wave, 171
unlock_srate_fragsize	delaysum::delaysum_if_t, 262
fw_vars_t, 323	doasvm_classification, 267
unset_fb_pars	doasvm_feature_extraction, 271
DynComp::dc_afterburn_t, 281	·
MHASignal coobrander + 760	example6_t, 303
MHASignal::schroeder_t, 762	fader_if_t, 305
up_incl	fftfilterbank::fftfb_interface_t, 312
MHAParser::range_var_t, 658	lpc, 363
up_limit	lpc_bl_predictor, 366

lpc_burglattice, 370	update_recmode
multibandcompressor::interface_t, 811	acmon::acmon_t, 152
noise_t, 817	update_selector_list
noisePowProposedScale::interface_t, 819	altplugs_t, 201
plugin_interface_t, 836	update_tau_level
prediction_error, 851	calibrator_t, 219
sine_t, 875	updated
steerbf, 892	windowselector_t, 923
timoSmooth, 910	updater
update_coeffs	MHAOvIFilter::fscale_bw_t, 585
MHAFilter::fftfilter_t, 488	MHAOvIFilter::fscale t, 587
MHAFilter::fftfilterbank_t, 492	upper_threshold
update_dc	acPooling_wave, 155
dc_simple::dc_if_t, 251	upsample.cpp, 1036
update_filter	upsampling_factor
MHAFilter::iir_filter_t, 505	MHAFilter::polyphase_resampling_t, 526
update_frame	upscale
addsndfile::level_adapt_t, 177	MHASignal::quantizer_t, 756
fader_wave::level_adapt_t, 309	us_t, 911
update_gain	antialias, 912
gain::gain_if_t, 325	prepare, 912
update_gain_mon	process, 912
dc_simple::dc_if_t, 251	ratio, 912
update_hz	release, 912
MHAOvlFilter::fscale_bw_t, 585	us_t, 912
MHAOvlFilter::fscale_t, 587	use_date
update_level	wavrec_t, 919
dc_simple::dc_if_t, 251	use_frozen_
update_level_mon	cfg_t, 222
dc_simple::dc_if_t, 251	use_jack_transport
update_levels	MHAIOJackdb::io_jack_t, 544
multibandcompressor::plugin_signals_t,	MHAJack::client_t, 562
812	use_mat
update_m	acmon::ac_monitor_t, 150
matrixmixer::matmix_t, 377	use_own_ac
update_minmax	altplugs_t, 202
gain::gain_if_t, 325	use_sine
update_mode	cpuload_t, 235
ac2osc_t, 138	use_smoothspec
update_monitors	smoothgains bridge::smoothspec ←
dc::dc_if_t, 240	wrap_t, 879
update_mu	use_wbinhib
MHAFilter::adapt_filter_t, 479	dc::dc_vars_t, 245
update_ntaps	user
MHAFilter::adapt_filter_t, 479	MHAParser::window_t, 684
update_parser	user_err_msg
windowselector_t, 923	MHAIOFile.cpp, 1002
update_proc_load	MHAIOJack.cpp, 1005
mhachain::plugs_t, 465	MHAIOJackdb.cpp, 1007
update_ramplen	MHAIOParser.cpp, 1010
altplugs_t, 201	MHAIOPortAudio.cpp, 1013
· · · · ·	e e le le le ville de la company.

MHAIOTCP.cpp, 1017	MHASignal::spectrum_t, 766
user_t	MHASignal::waveform_t, 778, 779
MHAWindow::user t, 806	mha signal.hh, 993
username	Vector and matrix processing toolbox, 49-
MHA_AC::ac2matrix_helper_t, 379	52
userwnd	value_type
windowselector_t, 923	mha_dblbuf_t, 399
windowsciedtor_t, 020	mha_fifo_t, 419
v_G	
prediction_error_config, 854	valuechanged
vFlog	MHAParser::base_t, 604
DynComp::gaintable_t, 289	variable, 4
vGCC_ac	variable_t
doasym_feature_extraction_config, 272	MHAParser::variable_t, 664
vGCC_con	variables, 4
acConcat_wave_config, 147	acsave::acsave_t, 160
-	varlist
vGCC_name	ac2lsl::ac2lsl_t, 128
doasym_classification, 267	ac2lsl::cfg_t, 130
doasvm_feature_extraction, 271	acmon::acmon_t, 152
vGCC	acsave::acsave_t, 160
acConcat_wave_config, 147	acsave::cfg t, 162
doasvm_feature_extraction_config, 272	varlist_t
vLTASS_combined_lev	acsave::acsave_t, 159
speechnoise.cpp, 1031	vars
vLTASS_female_lev	
speechnoise.cpp, 1031	ac2lsl::ac2lsl_t, 128
vLTASS_freq	ac2osc_t, 139
speechnoise.cpp, 1030	acmon::acmon_t, 152
vLTASS_male_lev	analysispath_if_t, 206
speechnoise.cpp, 1031	calibrator_t, 219
vMHAOrigFreq	coherence::cohflt_if_t, 224
speechnoise.cpp, 1030	MHAKernel::algo_comm_class_t, 569
vMHAOrigSpec	vars_t
speechnoise.cpp, 1030	coherence::vars_t, 228
vOlnoiseFreq	MHAOvlFilter::overlap_save_filterbank_←
speechnoise.cpp, 1031	t::vars_t, 594
vOlnoiseLev	vbark
speechnoise.cpp, 1031	MHAOvlFilter::barkscale, 99
val2str	vbin1
MHAParser::StrCnv, 111, 112	MHAOvIFilter::fftfb_t, 581
validate	vbin2
AuditoryProfile::parser_t::fmap_t, 211	MHAOvIFilter::fftfb t, 581
MHAParser::keyword list t, 631	vcomplex_mon_t
MHAParser::kw_t, 634	MHAParser::vcomplex_mon_t, 666
_ :	vcomplex_t
MHAParser::range_var_t, 657, 658	• —
validator_channels	MHAParser::vcomplex_t, 669
mhasndfile.cpp, 1021	Vec
validator_length	ac2lsl::save_var_t< mha_complex_t >,
mhasndfile.cpp, 1021	135
value	vec_y
AuditoryProfile::parser_t::fmap_t, 211	MHATableLookup::linear_table_t, 791
MHASignal::ringbuffer_t, 758	Vector and matrix processing toolbox, 36

accian 49 40	vint man t
assign, 48, 49	vint_mon_t
bin2freq, 44 channels, 41	MHAParser::vint_mon_t, 675 vint_t
•	<u> </u>
clear, 48	MHAParser::vint_t, 677
colored_intensity, 56	VL
conjugate, 59	DynComp::gaintable_t, 288
copy_channel, 55	vmax
db2lin, 42	gain::gain_if_t, 325
dbspl2pa, <mark>43</mark>	vmin
dupvec, 45	gain::gain_if_t, 325
dupvec_chk, 46	vstring_mon_t
equal_dim, 46, 47	MHAParser::vstring_mon_t, 679
for_each, 42	vstring_t
freq2bin, 44	MHAParser::vstring_t, 681
integrate, 47	vy
lin2db, 42	MHATableLookup::linear_table_t, 791
max, 58	
maxabs, 56, 57	W
mha real t, 41	MHA_TCP::OS_EVENT_TYPE, 443
min, 58	MHAFilter::adapt_filter_state_t, 478
operator*=, 53, 54	W
•	ac2wave_t, 142
operator 55 54	doasvm_classification, 267
operator+=, 53, 54	MHAOvlFilter::fftfb_t, 581
operator-=, 53	w_out
operator/=, 54	combc_t, 231
pa22dbspl, 43	WINAPI
pa2dbspl, 42	mha_plugin.hh, 979
rad2smp, 45	wIRS fft
range, 41	MHAFilter::fftfilter t, 490
rmslevel, 56, 57	wInput
sec2smp, 43	MHAFilter::fftfilter_t, 490
size, 47, 48	wInput_fft
smp2rad, 44	MHAFilter::fftfilter_t, 489
smp2sec, 43	wOutput
std vector float, 52	MHAFilter::fftfilter_t, 490
std_vector_vector_complex	, 53 wOutput_fft
std vector vector float, 52	MHAFilter::fftfilter t, 490
sumsqr_channel, 58	wait
sumsqr_frame, 59	
timeshift, 49	MHA_TCP::Event_Watcher, 442
value, 49–52	wait_for_decrease
·	mha_fifo_posix_threads_t, 416
VF	mha_fifo_thread_platform_t, 424
DynComp::gaintable_t, 289	wait_for_increase
vfloat_mon_t	mha_fifo_posix_threads_t, 416
MHAParser::vfloat_mon_t, 6	
vfloat_t	Wakeup_Event
MHAParser::vfloat_t, 673	MHA_TCP::Wakeup_Event, 457
vfreq	wave2spec
MHAOvIFilter::barkscale, 99	MHASignal::fft_t, 736
vint_0123n1	plugindescription_t, 838
transducers.cpp, 1036	wave2spec.cpp, 1036

$MHAPLUGIN_OVERLOAD_OUTDOM_{\hookleftarrow}$	wavrec.cpp, 1036
AIN, 1036	DEBUG, 1037
wave2spec_if_t, 913	wavrec_t, 917
algo, 914	fifolen, 919
nfft, 914	minwrite, 919
nwnd, 914	patchbay, 919
patchbay, 914	prefix, 919
prepare, 914	prepare, 918
process, 914	process, 918
return_wave, 914	record, 919
update, 914	release, 918
wave2spec_if_t, 914	start_new_session, 918
window_config, 914	use_date, 919
wndpos, 914	wavrec_t, 918
wave2spec_scale	wavwriter t, 919
MHASignal::fft_t, 737	\sim wavwriter_t, 920
wave2spec_t, 915	act_, 920
~wave2spec_t, 916	cf_, <mark>920</mark>
calc_in, 917	close_session, 920
calc_pre_wnd, 916	data, 920
ft, 916	fifo, 920
in_buf, 917	minw_, 920
npad1, 916	process, 920
npad2, 916	sf, 920
nwnd, 916	wavwriter_t, 920
nwndshift, 916	write_thread, 920
process, 916	writethread, 920
spec_in, 917	wb_inhib_cfg_t
wave2spec_t, 916	dc::wb_inhib_cfg_t, 247
window, 917	wbinhib
wave2wave	dc::dc if t, 240
plugindescription_t, 838	weights
wave_fifo	dc::wb_inhib_cfg_t, 247
analysepath_t, 204	dc::wideband inhib vars t, 248
wave_in	delaysum::delaysum_if_t, 262
MHAPlugin Split::domain handler t, 704	delaysum::delaysum_t, 264
wave in1	what
overlapadd::overlapadd_t, 825	MHA Error, 411
wave_out	white
MHAPlugin_Split::domain_handler_t, 704	speechnoise_t, 889
MHAPlugin Split::split t, 714	wideband_inhib_vars_t
wave out1	dc::wideband_inhib_vars_t, 248
overlapadd::overlapadd_t, 826	win f0
wave_reader	timoSmooth, 911
addsndfile, 78	winF0
waveform_proxy_t	timo_params, 904
addsndfile::waveform_proxy_t, 181	timoConfig, 906
waveform t	winF0 AC
MHA_AC::waveform_t, 392	timo_AC, 902
MHAMultiSrc::waveform_t, 575	window
MHASignal::waveform_t, 777	MHAFilter::smoothspec_t, 531

overlapadd::overlapadd_if_t, 824	wndtype
wave2spec_t, 917	windowselector_t, 923
window_config	worker_thread_priority
spec2wave_if_t, 885	MHAPlugin_Split::split_t, 713
wave2spec_if_t, 914	worker_thread_scheduler
window_t	MHAPlugin_Split::split_t, 713
MHAParser::window_t, 683	wout
windowselector.cpp, 1037	matrixmixer::cfg_t, 375
windowselector.h, 1037	route::process_t, 860
windowselector_t, 921	wout_ac
\sim windowselector_t, 922	route::process_t, 860
get_window_data, 922	write
insert_items, 922	MHA_TCP::Connection, 439
invalidate_window_data, 923	MHAFilter::blockprocessing_polyphase←
patchbay, 923	_resampling_t, 481
update_parser, 923	MHAFilter::polyphase_resampling_t, 525
updated, 923	MHAJack::port_t, 564
userwnd, 923	MHASignal::matrix_t, 752
windowselector_t, 922	MHASignal::ringbuffer_t, 759
wnd, 923	MHASignal::uint_vector_t, 774
wndexp, 923	mha_drifter_fifo_t, 406
wndtype, 923	mha_fifo_lw_t, 413
wnd	mha_fifo_t, 419
addsndfile::level_adapt_t, 177	write_buf
fader_wave::level_adapt_t, 309	overlapadd::overlapadd_t, 826
windowselector_t, 923	spec2wave_t, 887
wnd_bartlett	write_event
MHAParser::window_t, 683	MHA_TCP::Connection, 440
wnd_blackman	write_float
MHAParser::window_t, 683	mha_parser.cpp, 973
wnd_funs	write_ptr
mha_windowparser.cpp, 998	mha_fifo_t, 421
wnd_hamming	write_thread
MHAParser::window_t, 683	wavwriter_t, 920
wnd_hann MHAParser::window t, 683	write_wave
wnd_rect	mhasndfile.cpp, 1021 mhasndfile.h, 1022
MHAParser::window t, 683	writeaccess
wnd_user	MHAParser::base_t, 604
MHAParser::window_t, 683	writer_started
wndexp	mha_drifter_fifo_t, 408
overlapadd::overlapadd_if_t, 824	writer_xruns_in_succession
windowselector_t, 923	mha_drifter_fifo_t, 409
wndlen	writer_xruns_since_start
doasym_feature_extraction_config, 272	mha_drifter_fifo_t, 409
MHAParser::mhaconfig_mon_t, 644	writer_xruns_total
mhaconfig_t, 468	mha_drifter_fifo_t, 409
testplugin::config_parser_t, 897	writethread
wndpos	wavwriter_t, 920
overlapadd::overlapadd_if_t, 824	Writing openMHA Plugins. A step-by-step tu-
wave2spec_if_t, 914	torial, 10

wtype	rt_nlms_t, 863
MHAParser::window_t, 684	YPrew
wtype_t	prediction_error_config, 855
MHAParser::window_t, 683	yfun
	MHATableLookup::xy_table_t, 796
X	Yn
MHA_TCP::OS_EVENT_TYPE, 443	MHAFilter::complex_bandpass_t, 485
MHAFilter::adapt_filter_state_t, 478	MHAFilter::iir_ord1_real_t, 508
X	Ys
doasvm_classification, 267	MHAFilter::fftfilterbank_t, 494
xfun	yw
MHATableLookup::xy_table_t, 796	MHAFilter::fftfilterbank_t, 493
xi_est	yw_temp
timoConfig, 907	MHAFilter::fftfilterbank_t, 494
xi_est_AC	
timo_AC, 902	zeros
xi_min	ac2wave_if_t, 141
timoConfig, 906	zerowindow
xi_min_db	overlapadd::overlapadd_if_t, 824
timo_params, 904	
timoSmooth, 910	
xi_ml	
timoConfig, 907	
xi ml AC	
timo_AC, 902	
xi_opt_db	
timo_params, 904	
timoSmooth, 911	
xiOpt	
noisePowProposedScale::noisePow↔	
Proposed, 821	
timoConfig, 907	
xiOptDb	
noisePowProposedScale::interface_t, 819	
•	
XMAX MUATable cakupulinear table + 701	
MHATableLookup::linear_table_t, 791	
xmin	
MHATableLookup::linear_table_t, 791	
Xs	
MHAFilter::fftfilterbank_t, 493	
XW	
MHAFilter::fftfilterbank_t, 493	
xy_table_t	
MHATableLookup::xy_table_t, 794	
xyfun	
MHATableLookup::xy_table_t, 796	
y	
doasvm_classification, 267	
y0	
dc_simple::dc_t::line_t, 254	
y_previous	