The Open Master Hearing Aid (openMHA)

4.6.4

Plugin Developers' Manual



© 2005-2018 by HörTech gGmbH, Marie-Curie-Str. 2, D-26129 Oldenburg, Germany

LICENSE AGREEMENT

This file is part of the HörTech Open Master Hearing Aid (openMHA) Copyright © 2005 2006 2007 2008 2009 2010 2012 2013 2014 2015 2016 HörTech gGmbH. Copyright © 2017 2018 HörTech gGmbH.

openMHA is free software: you can redistribute it and/or modify it under the terms of the GNU Affero General Public License as published by the Free Software Foundation, version 3 of the License.

openMHA is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Affero General Public License, version 3 for more details.

You should have received a copy of the GNU Affero General Public License, version 3 along with openMHA. If not, see http://www.gnu.org/licenses/>.

Contents

1	Over	view	1
	1.1		1
	1.2	Platform Services and Conventions	2
2	Todo	List	4
3	Modu	ule Documentation	4
	3.1	Concept of Variables and Data Exchange in the openMHA	4
	3.2	The openMHA Plugins (programming interface)	6
	3.3	Writing openMHA Plugins. A step-by-step tutorial	10
	3.4	The MHA Framework interface	26
	3.5	Communication between algorithms	27
	3.6	Error handling in the openMHA	31
	3.7	The openMHA configuration language	33
	3.8	The openMHA Toolbox library	34
	3.9		36
	3.10		60
	3.11	Fast Fourier Transform functions	70
4	Name	espace Documentation	77
	4.1	ac2lsl Namespace Reference	77
	4.2	and the state of t	77
	4.3	· · · · · · · · · · · · · · · · · · ·	78
	4.4	·	78
	4.5		79
	4.6		80
	4.7	· · · · · · · · · · · · · · · · · · ·	80
	4.8	· · · · · · · · · · · · · · · · · · ·	81
	4.9	_ '	81
	4.10		82
	4.11	· · · · · · · · · · · · · · · · · · ·	82
	4.12		83
		_	84
	4.14		85
	4.15 4.16	·	85 85
	4.17		ອວ 85
	4.17		86
	4.19	- '	30 87
	4.20	'	37 87
	4.21	-	90
	4.22		90
	4.23	· · · · · · · · · · · · · · · · · · ·	90
	4.24	•	95
	4.25		95
	4.26		95
	4.27	·	95
	4.28	•	97
	4.29	·	98
		•	98

		MHAOvIFilter::barkscale Namespace Reference
	4.32	MHAOvlFilter::FreqScaleFun Namespace Reference
	4.33	MHAOvlFilter::ShapeFun Namespace Reference
	4.34	MHAParser Namespace Reference
	4.35	MHAParser::StrCnv Namespace Reference
	4.36	MHAPlugin Namespace Reference
	4.37	MHAPlugin_Resampling Namespace Reference
	4.38	MHAPlugin_Split Namespace Reference
	4.39	MHASignal Namespace Reference
	4.40	MHASndFile Namespace Reference
	4.41	MHATableLookup Namespace Reference
	4.42	MHAWindow Namespace Reference
	4.43	multibandcompressor Namespace Reference
	4.44	noisePowProposedScale Namespace Reference
	4.45	overlapadd Namespace Reference
	4.46	plingploing Namespace Reference
	4.47	PluginLoader Namespace Reference
	4.48	route Namespace Reference
	4.49	shadowfilter_begin Namespace Reference
	4.50	shadowfilter_end Namespace Reference
	4.51	smoothgains_bridge Namespace Reference
	4.52	
		tootplagtamoopass riolerenes 11.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1
5	Class	S Documentation 126
	5.1	ac2lsl::ac2lsl_t Class Reference
	5.2	ac2lsl::cfg_t Class Reference
	5.3	ac2lsl::save_var_base_t Class Reference
	5.4	ac2lsl::save_var_t< T > Class Template Reference
	5.5	ac2lsl::save_var_t< mha_complex_t > Class Template Reference
	5.6	ac2osc_t Class Reference
	5.7	ac2wave_if_t Class Reference
	5.8	ac2wave_t Class Reference
	5.9	acConcat_wave Class Reference
	5.10	acConcat_wave_config Class Reference
	5.11	acmon::ac_monitor_t Class Reference
	5.12	acmon::acmon_t Class Reference
	5.13	acPooling_wave Class Reference
	5.14	acPooling_wave_config Class Reference
	5.15	acsave::acsave_t Class Reference
	5.16	acsave::cfg_t Class Reference
	5.17	acsave::mat4head_t Struct Reference
	5.18	acsave::save_var_t Class Reference
	5.19	acSteer Class Reference
	5.20	acSteer_config Class Reference
	5.21	acTransform wave Class Reference
	5.22	acTransform_wave_config Class Reference
	5.23	addsndfile::addsndfile_if_t Class Reference
	5.24	addsndfile::level_adapt_t Class Reference
	5.25	addsndfile::resampled_soundfile_t Class Reference
	5.26	addsndfile::sndfile_t Class Reference
	5.27	addsndfile::waveform_proxy_t Class Reference
		ADM::ADM $<$ F $>$ Class Template Reference
		/

vi CONTENTS

5.29	ADM::Delay< F > Class Template Reference	184
5.30	ADM::Linearphase_FIR< F > Class Template Reference	186
5.31	adm_if_t Class Reference	188
5.32	adm_rtconfig_t Class Reference	190
5.33	algo_comm_t Struct Reference	194
5.34	altplugs_t Class Reference	199
5.35	analysepath_t Class Reference	203
5.36	analysispath if t Class Reference	205
5.37	AuditoryProfile::fmap t Class Reference	
5.38	AuditoryProfile::parser_t Class Reference	208
5.39	AuditoryProfile::parser_t::ear_t Class Reference	
5.40	AuditoryProfile::parser_t::fmap_t Class Reference	
5.41	AuditoryProfile::profile_t Class Reference	
5.42	AuditoryProfile::profile_t::ear_t Class Reference	
5.43	bbcalib_interface_t Class Reference	
5.44	calibrator_runtime_layer_t Class Reference	
5.45	calibrator t Class Reference	
5.46	calibrator_variables_t Class Reference	
5.47	cfg t Class Reference	
5.48	coherence::cohflt_if_t Class Reference	
5.49	coherence::cohflt_t Class Reference	
5.50	coherence::vars_t Class Reference	
5.51	combc_if_t Class Reference	
5.52	combc_t Class Reference	
5.53	comm_var_t Struct Reference	
5.54	cpuload t Class Reference	
5.55	db if t Class Reference	
5.56	db_t Class Reference	
5.57	dc::dc_if_t Class Reference	
5.58	dc::dc t Class Reference	
5.59	dc::dc_vars_t Class Reference	
5.60	dc::dc_vars_validator_t Class Reference	
5.61	dc::wb_inhib_cfg_t Class Reference	
	dc::wideband_inhib_vars_t Class Reference	_
5.63	dc_simple::dc_if_t Class Reference	
5.64	dc simple::dc t Class Reference	
5.65	dc_simple::dc_t::line_t Class Reference	
5.66	dc_simple::dc_vars_t Class Reference	
5.67	dc_simple::dc_vars_validator_t Class Reference	
5.68	dc_simple::level_smoother_t Class Reference	
5.69	delay::interface_t Class Reference	
5.70	delaysum::delaysum_if_t Class Reference	
5.71	delaysum::delaysum_t Class Reference	
5.72	doasym classification Class Reference	
5.73	doasym_classification_config Class Reference	
5.74	doasym_feature_extraction Class Reference	
5.75	doasym_feature_extraction_config Class Reference	
5.76	droptect_t Class Reference	
5.77	ds_t Class Reference	
5.78	dynamiclib_t Class Reference	
5.79	DynComp::dc_afterburn_rt_t Class Reference	
5.78	Dynioumpuc_aiterbum_it_t Class neletefice	210

CONTENTS vii

5.80	DynComp::dc_afterburn_t Class Reference	
5.81	DynComp::dc_afterburn_vars_t Class Reference	. 282
5.82	DynComp::gaintable_t Class Reference	
5.83	example1_t Class Reference	. 289
5.84	example2_t Class Reference	. 291
5.85	example3_t Class Reference	. 294
5.86	example4_t Class Reference	. 298
5.87	example5_t Class Reference	. 301
5.88	example6_t Class Reference	
5.89	expression_t Class Reference	
5.90	fader if t Class Reference	
	fader_wave::fader_wave_if_t Class Reference	
5.92	fader_wave::level_adapt_t Class Reference	
5.93	fftfbpow::fftfbpow_interface_t Class Reference	
	fftfbpow::fftfbpow_t Class Reference	
	fftfilterbank::fftfb_interface_t Class Reference	
	fftfilterbank::fftfb_plug_t Class Reference	
	frequency_translator_t Class Reference	
	fw_t Class Reference	
	fw_vars_t Class Reference	
		
	gain::gain_if_t Class Reference	
	gain::scaler_t Class Reference	
	hanning_ramps_t Class Reference	
	hilbert_shifter_t Class Reference	
	identity_t Class Reference	
	iirfilter_t Class Reference	
	io_file_t Class Reference	
	io_lib_t Class Reference	
	io_parser_t Class Reference	
	io_tcp_fwcb_t Class Reference	
	io_tcp_parser_t Class Reference	
	io_tcp_sound_t Class Reference	
	io_tcp_sound_t::float_union Union Reference	
	io_tcp_t Class Reference	
	latex_doc_t Class Reference	
	Ipc Class Reference	
5.116	lpc_bl_predictor Class Reference	. 367
	lpc_bl_predictor_config Class Reference	
5.118	lpc_burglattice Class Reference	. 371
5.119	lpc_burglattice_config Class Reference	. 374
5.120	lpc_config Class Reference	. 375
5.121	matrixmixer::cfg_t Class Reference	. 377
5.122	matrixmixer::matmix_t Class Reference	. 379
5.123	MHA_AC::ac2matrix_helper_t Class Reference	. 381
	MHA_AC::ac2matrix_t Class Reference	
	MHA_AC::acspace2matrix_t Class Reference	
	MHA AC::double t Class Reference	
	MHA AC::float t Class Reference	
	MHA_AC::int_t Class Reference	
	MHA_AC::spectrum_t Class Reference	
	MHA_AC::stat_t Class Reference	

viii CONTENTS

5.131 MHA_AC::waveform_t Class Reference	. 394
5.132 mha_audio_descriptor_t Struct Reference	. 396
5.133 mha_audio_t Struct Reference	. 397
5.134 mha_channel_info_t Struct Reference	. 398
5.135 mha_complex_t Struct Reference	. 400
5.136 mha_dblbuf_t< FIFO > Class Template Reference	. 400
5.137 mha_direction_t Struct Reference	. 406
5.138 mha_drifter_fifo_t< T > Class Template Reference	. 407
5.139 MHA_Error Class Reference	
5.140 mha_fifo_lw_t< T > Class Template Reference	. 415
5.141 mha_fifo_posix_threads_t Class Reference	
5.142 mha_fifo_t< T > Class Template Reference	
5.143 mha_fifo_thread_guard_t Class Reference	
5.144 mha_fifo_thread_platform_t Class Reference	
5.145 mha_rt_fifo_element_t< T > Class Template Reference	
5.146 mha_rt_fifo_t< T > Class Template Reference	
5.147 mha_spec_t Struct Reference	
5.148 MHA_TCP::Async_Notify Class Reference	
5.149 MHA_TCP::Client Class Reference	
5.150 MHA_TCP::Connection Class Reference	
5.151 MHA_TCP::Event_Watcher Class Reference	
5.152 MHA_TCP::OS_EVENT_TYPE Struct Reference	
5.153 MHA TCP::Server Class Reference	
5.154 MHA_TCP::sock_init_t Class Reference	
5.155 MHA_TCP::Sockaccept_Event Class Reference	
5.156 MHA_TCP::Sockread_Event Class Reference	
5.157 MHA_TCP::Sockwrite_Event Class Reference	
5.158 MHA_TCP::Thread Class Reference	
5.159 MHA_TCP::Timeout_Event Class Reference	
5.160 MHA_TCP::Timeout_Watcher Class Reference	
5.161 MHA TCP::Wakeup Event Class Reference	
_ '-	
5.162 mha_tictoc_t Struct Reference	. 462
	_
5.164 mhachain::chain_base_t Class Reference	
5.165 mhachain::mhachain_t Class Reference	
5.167 mhaconfig_t Struct Reference	
5.168 MHAEvents::connector_base_t Class Reference	
5.169 MHAEvents::connector_t< receiver_t > Class Template Reference	
5.170 MHAEvents::emitter_t Class Reference	
5.171 MHAEvents::patchbay_t< receiver_t > Class Template Reference	
5.172 MHAFilter::adapt_filter_param_t Class Reference	
5.173 MHAFilter::adapt_filter_state_t Class Reference	
5.174 MHAFilter::adapt_filter_t Class Reference	
5.175 MHAFilter::blockprocessing_polyphase_resampling_t Class Reference	
5.176 MHAFilter::complex_bandpass_t Class Reference	
5.177 MHAFilter::diff_t Class Reference	
5.178 MHAFilter::fftfilter_t Class Reference	
5.179 MHAFilter::fftfilterbank_t Class Reference	
5.180 MHAFilter::filter_t Class Reference	
5.181 MHAFilter::gamma_flt_t Class Reference	. 501

CONTENTS ix

5.182 MHAFilter::iir_filter_state_t Class Reference	. 504
5.183 MHAFilter::iir_filter_t Class Reference	. 505
5.184 MHAFilter::iir_ord1_real_t Class Reference	. 508
5.185 MHAFilter::o1_ar_filter_t Class Reference	. 511
5.186 MHAFilter::o1flt_lowpass_t Class Reference	
5.187 MHAFilter::o1flt_maxtrack_t Class Reference	. 517
5.188 MHAFilter::o1flt_mintrack_t Class Reference	. 518
5.189 MHAFilter::partitioned convolution t Class Reference	
5.190 MHAFilter::partitioned_convolution_t::index_t Struct Reference	
5.191 MHAFilter::polyphase_resampling_t Class Reference	
5.192 MHAFilter::resampling_filter_t Class Reference	
5.193 MHAFilter::smoothspec_t Class Reference	
5.194 MHAFilter::thirdoctave_analyzer_t Class Reference	
5.195 MHAFilter::transfer_function_t Struct Reference	
5.196 MHAFilter::transfer_matrix_t Struct Reference	
5.197 MHAIOJack::io_jack_t Class Reference	
5.198 MHAIOJackdb::io_jack_t Class Reference	
5.199 MHAIOPortAudio::device_info_t Class Reference	
5.200 MHAIOPortAudio::io_portaudio_t Class Reference	
5.201 MHAJack::client_avg_t Class Reference	
5.202 MHAJack::client_noncont_t Class Reference	
5.203 MHAJack::client_t Class Reference	
5.204 MHAJack::port_t Class Reference	
5.205 MHAKernel::algo_comm_class_t Class Reference	
5.206 MHAKernel::comm_var_map_t Class Reference	
5.207 MHAMultiSrc::base_t Class Reference	
5.208 MHAMultiSrc::channel_t Class Reference	
5.209 MHAMultiSrc::channels_t Class Reference	
5.210 MHAMultiSrc::spectrum_t Class Reference	
5.211 MHAMultiSrc::waveform_t Class Reference	
5.212 MHAOvlFilter::band_descriptor_t Class Reference	
5.213 MHAOvlFilter::barkscale::bark2hz_t Class Reference	. 579
5.214 MHAOvlFilter::barkscale::hz2bark_t Class Reference	. 580
5.215 MHAOvlFilter::fftfb_ac_info_t Class Reference	
5.216 MHAOvlFilter::fftfb_t Class Reference	. 582
5.217 MHAOvlFilter::fftfb_vars_t Class Reference	. 585
5.218 MHAOvlFilter::fscale_bw_t Class Reference	
5.219 MHAOvlFilter::fscale_t Class Reference	. 589
5.220 MHAOvlFilter::fspacing_t Class Reference	. 591
5.221 MHAOvlFilter::overlap_save_filterbank_analytic_t Class Reference	. 593
5.222 MHAOvlFilter::overlap_save_filterbank_t Class Reference	. 594
5.223 MHAOvlFilter::overlap_save_filterbank_t::vars_t Class Reference	. 596
5.224 MHAOvlFilter::scale_var_t Class Reference	
5.225 MHAParser::base t Class Reference	
5.226 MHAParser::base_t::replace_t Class Reference	
5.227 MHAParser::bool_mon_t Class Reference	
5.228 MHAParser::bool_t Class Reference	
5.229 MHAParser::c_ifc_parser_t Class Reference	
5.230 MHAParser::commit_t< receiver_t > Class Template Reference	
5.231 MHAParser::complex_mon_t Class Reference	
5.232 MHAParser::complex_t Class Reference	
5.202 Million algoritothiplox_t Glass religional to 1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.	. 520

X CONTENTS

5.233 MHAParser::entry_t Class Reference	622
5.234 MHAParser::expression_t Class Reference	623
5.235 MHAParser::float_mon_t Class Reference	624
5.236 MHAParser::float_t Class Reference	625
5.237 MHAParser::int_mon_t Class Reference	628
5.238 MHAParser::int_t Class Reference	630
5.239 MHAParser::keyword_list_t Class Reference	632
5.240 MHAParser::kw_t Class Reference	
5.241 MHAParser::mcomplex_mon_t Class Reference	
5.242 MHAParser::mcomplex_t Class Reference	
5.243 MHAParser::mfloat_mon_t Class Reference	
5.244 MHAParser::mfloat_t Class Reference	
5.245 MHAParser::mhaconfig_mon_t Class Reference	
5.246 MHAParser::mhapluginloader_t Class Reference	
5.247 MHAParser::mint_mon_t Class Reference	
5.248 MHAParser::monitor t Class Reference	
5.249 MHAParser::parser_t Class Reference	
5.250 MHAParser::range_var_t Class Reference	
5.251 MHAParser::string_mon_t Class Reference	
5.252 MHAParser::string_t Class Reference	
	
5.253 MHAParser::variable_t Class Reference	
5.254 MHAParser::vcomplex_mon_t Class Reference	
5.255 MHAParser::vcomplex_t Class Reference	
5.256 MHAParser::vfloat_mon_t Class Reference	
5.257 MHAParser::vfloat_t Class Reference	
5.258 MHAParser::vint_mon_t Class Reference	
5.259 MHAParser::vint_t Class Reference	
5.260 MHAParser::vstring_mon_t Class Reference	
5.261 MHAParser::vstring_t Class Reference	
5.262 MHAParser::window_t Class Reference	
5.263 mhaplug_cfg_t Class Reference	
5.264 MHAPlugin::cfg_chain_t< runtime_cfg_t > Class Template Reference	
5.265 MHAPlugin::config_t < runtime_cfg_t > Class Template Reference	
5.266 MHAPlugin::plugin_t< runtime_cfg_t > Class Template Reference	
5.267 MHAPlugin_Resampling::resampling_if_t Class Reference	
5.268 MHAPlugin_Resampling::resampling_t Class Reference	
5.269 MHAPlugin_Split::domain_handler_t Class Reference	
5.270 MHAPlugin_Split::dummy_threads_t Class Reference	
5.271 MHAPlugin_Split::posix_threads_t Class Reference	
5.272 MHAPlugin_Split::split_t Class Reference	
5.273 MHAPlugin_Split::splitted_part_t Class Reference	717
5.274 MHAPlugin_Split::thread_platform_t Class Reference	722
5.275 MHAPlugin_Split::uni_processor_t Class Reference	725
5.276 mhaserver_t Class Reference	726
5.277 MHASignal::async_rmslevel_t Class Reference	729
5.278 MHASignal::delay_spec_t Class Reference	
5.279 MHASignal::delay_t Class Reference	
5.280 MHASignal::delay_wave_t Class Reference	
5.281 MHASignal::doublebuffer_t Class Reference	
5.282 MHASignal::fft_t Class Reference	
5.283 MHASignal::hilbert_fftw_t Class Reference	
-	

CONTENTS xi

5.284 MHASignal::hilbert_t Class Reference	. 742
5.285 MHASignal::loop_wavefragment_t Class Reference	. 744
5.286 MHASignal::matrix_t Class Reference	. 748
5.287 MHASignal::minphase_t Class Reference	. 756
5.288 MHASignal::quantizer_t Class Reference	. 758
5.289 MHASignal::ringbuffer_t Class Reference	
5.290 MHASignal::schroeder_t Class Reference	
5.291 MHASignal::spectrum_t Class Reference	
5.292 MHASignal::stat_t Class Reference	
5.293 MHASignal::subsample_delay_t Class Reference	
5.294 MHASignal::uint_vector_t Class Reference	
5.295 MHASignal::waveform_t Class Reference	
5.296 MHASndFile::sf_t Class Reference	
5.297 MHASndFile::sf_wave_t Class Reference	
5.298 MHATableLookup::linear_table_t Class Reference	
5.299 MHATableLookup::table_t Class Reference	
5.300 MHATableLookup::xy_table_t Class Reference	
5.301 MHAWindow::bartlett_t Class Reference	
5.302 MHAWindow::base_t Class Reference	
5.303 MHAWindow::blackman_t Class Reference	
5.304 MHAWindow::fun_t Class Reference	
5.305 MHAWindow::hamming_t Class Reference	
5.306 MHAWindow::hanning_t Class Reference	
5.307 MHAWindow::rect_t Class Reference	
5.308 MHAWindow::user_t Class Reference	
5.309 mon_t Class Reference	
5.310 multibandcompressor::fftfb_plug_t Class Reference	
5.311 multibandcompressor::interface_t Class Reference	. 813
5.312 multibandcompressor::plugin_signals_t Class Reference	. 815
5.313 nlms_t Class Reference	. 816
5.314 noise_t Class Reference	. 819
5.315 noisePowProposedScale::interface_t Class Reference	. 821
5.316 noisePowProposedScale::noisePowProposed Class Reference	. 823
5.317 overlapadd::overlapadd_if_t Class Reference	. 825
5.318 overlapadd::overlapadd_t Class Reference	
5.319 parser_int_dyn Class Reference	
5.320 plingploing::if_t Class Reference	
5.321 plingploing::plingploing_t Class Reference	
5.322 plug_t Class Reference	836
5.323 plugin_interface_t Class Reference	
5.324 pluginbrowser_t Class Reference	
5.325 plugindescription_t Class Reference	
5.326 PluginLoader::config_file_splitter_t Class Reference	
5.327 PluginLoader::fourway_processor_t Class Reference	
· · · · · · · · · · · · · · · · · · ·	
5.328 PluginLoader::mhapluginloader_t Class Reference	
5.329 pluginloader_t Class Reference	
5.330 prediction_error Class Reference	
5.331 prediction_error_config Class Reference	
5.332 rmslevel_if_t Class Reference	
5.333 rmslevel_t Class Reference	
5.334 route::interface_t Class Reference	. 861

xii CONTENTS

5.335 route::process_t Class Reference	863
5.336 rt nlms t Class Reference	
5.337 save_spec_t Class Reference	
5.338 save_wave_t Class Reference	
5.339 shadowfilter_begin::cfg_t Class Reference	
5.340 shadowfilter_begin::shadowfilter_begin_t Class Reference	
5.341 shadowfilter_end::cfg_t Class Reference	
5.342 shadowfilter_end::shadowfilter_end_t Class Reference	874
5.343 sine_cfg_t Struct Reference	
5.344 sine_t Class Reference	
5.345 smoothgains_bridge::overlapadd_if_t Class Reference	
5.346 smoothgains_bridge::smoothspec_wrap_t Class Reference	
5.347 softclip t Class Reference	
· —	
5.348 softclipper_t Class Reference	
5.349 softclipper_variables_t Class Reference	
5.350 spec2wave_if_t Class Reference	
5.351 spec2wave_t Class Reference	
5.352 spec_fader_t Class Reference	
5.353 speechnoise_t Class Reference	890
5.354 steerbf Class Reference	892
5.355 steerbf_config Class Reference	894
5.356 testplugin::ac_parser_t Class Reference	896
5.357 testplugin::config_parser_t Class Reference	
5.358 testplugin::if_t Class Reference	
5.359 testplugin::signal_parser_t Class Reference	
5.360 timo_AC Class Reference	
5.361 timo_params Class Reference	
5.362 timoConfig Class Reference	
5.363 timoSmooth Class Reference	
5.364 us_t Class Reference	
5.365 wave2spec_if_t Class Reference	
5.366 wave2spec_t Class Reference	917
5.367 wavrec_t Class Reference	919
5.368 wavwriter t Class Reference	921
5.369 windowselector_t Class Reference	923
File Documentation	926
6.1 ac2lsl.cpp File Reference	926
6.2 ac2osc.cpp File Reference	
6.3 ac2wave.cpp File Reference	
6.4 ac_monitor_type.cpp File Reference	
6.5 ac_monitor_type.hh File Reference	
6.6 acConcat_wave.cpp File Reference	
6.7 acConcat_wave.h File Reference	
6.8 acmon.cpp File Reference	
6.9 acPooling_wave.cpp File Reference	
6.10 acPooling_wave.h File Reference	
6.11 acsave.cpp File Reference	928
6.12 acSteer.cpp File Reference	
6.13 acSteer.h File Reference	
0.13 acoleel.II file nelelelice	. 929
6.14 acTransform_wave.cpp File Reference	929

6

CONTENTS xiii

6.16	addsndfile.cpp File Reference	
6.17	adm.cpp File Reference	931
6.18	adm.hh File Reference	931
6.19	altplugs.cpp File Reference	932
6.20	analysemhaplugin.cpp File Reference	932
6.21	analysispath.cpp File Reference	933
6.22	auditory_profile.cpp File Reference	933
6.23	auditory_profile.h File Reference	933
6.24	browsemhaplugins.cpp File Reference	934
6.25	coherence.cpp File Reference	934
6.26	combinechannels.cpp File Reference	
6.27	complex_filter.cpp File Reference	935
6.28	complex_filter.h File Reference	
6.29	cpuload.cpp File Reference	
6.30	db.cpp File Reference	
6.31	dc.cpp File Reference	
6.32	dc_afterburn.cpp File Reference	
6.33	dc_afterburn.h File Reference	
6.34	dc simple.cpp File Reference	
6.35	delay.cpp File Reference	
6.36	delaysum.cpp File Reference	
6.37	doasym_classification.cpp File Reference	
6.38	doasym_classification.h File Reference	
6.39	doasym_feature_extraction.cpp File Reference	
6.40	doasym_feature_extraction.h File Reference	
6.41	doc_appendix.h File Reference	
6.42	doc_examples.h File Reference	
6.43	doc_frameworks.h File Reference	
6.44	doc_general.h File Reference	
6.45	doc kernel.h File Reference	
6.46	doc_matlab.h File Reference	
6.47	doc mhamain.h File Reference	
6.48	doc parser.h File Reference	940
6.49	doc plugif.cpp File Reference	
6.50	doc plugins.h File Reference	
6.51	doc system.h File Reference	
6.52	doc toolbox.h File Reference	
6.53	downsample.cpp File Reference	
6.54	droptect.cpp File Reference	
6.55	example1.cpp File Reference	
6.56	example2.cpp File Reference	
6.57	example3.cpp File Reference	
6.58	example4.cpp File Reference	
6.59	example5.cpp File Reference	
6.60	example6.cpp File Reference	
6.61	fader_spec.cpp File Reference	
6.62	fader_wave.cpp File Reference	
6.63	fftfbpow.cpp File Reference	
6.64	fftfilterbank.cpp File Reference	
6.65	fshift_hilbert.cpp File Reference	
6.66	gain.cpp File Reference	544

xiv CONTENTS

6.67	gaintable.cpp File Reference	944
6.68	gaintable.h File Reference	944
6.69	generatemhaplugindoc.cpp File Reference	945
6.70	hann.cpp File Reference	945
6.71	hann.h File Reference	
6.72	identity.cpp File Reference	946
6.73	ifftshift.cpp File Reference	
6.74	ifftshift.h File Reference	
6.75	iirfilter.cpp File Reference	
6.76	lpc.cpp File Reference	
6.77	lpc.h File Reference	
6.78	lpc_bl_predictor.cpp File Reference	
6.79	lpc_bl_predictor.h File Reference	
6.80	lpc_burg-lattice.cpp File Reference	
6.81	lpc_burg-lattice.h File Reference	
6.82	matrixmixer.cpp File Reference	
6.83	mha.cpp File Reference	
6.84	mha.h File Reference	
6.85	mha_algo_comm.cpp File Reference	
6.86	mha_algo_comm.h File Reference	
6.87	mha_algo_comm.hh File Reference	
6.88	mha defs.h File Reference	
6.89	mha_errno.c File Reference	
6.90	mha_errno.h File Reference	
6.91	mha_error.cpp File Reference	
6.92	mha_error.hh File Reference	
6.93	mha_event_emitter.h File Reference	
6.94	mha_events.cpp File Reference	
6.95	mha events.h File Reference	
6.96	mha_fftfb.cpp File Reference	
6.97	mha_fftfb.hh File Reference	
6.98	mha fifo.cpp File Reference	
	mha_fifo.h File Reference	
	mha_filter.cpp File Reference	
	mha filter.hh File Reference	
	mha_generic_chain.cpp File Reference	
	mha_generic_chain.h File Reference	
	mha_io_ifc.h File Reference	
	mha_multisrc.cpp File Reference	
	mha_multisrc.h File Reference	
	mha_os.cpp File Reference	
	mha os.h File Reference	
	-	
	mha_parser.cpp File Reference	
	mha_parser.hh File Reference	
	mha_plugin.hh File Reference	
	mha_profiling.c File Reference	
	mha_profiling.h File Reference	
	mha_ruby.cpp File Reference	
	mha_signal.cpp File Reference	
	mha_signal.hh File Reference	
ס. 117	mha_signal_fft.h File Reference	996

CONTENTS xv

6.118 mha_tablelookup.cpp File Reference	. 996
6.119 mha_tablelookup.hh File Reference	. 996
6.120 mha_tcp.cpp File Reference	. 997
6.121 mha_tcp.hh File Reference	. 998
6.122 mha_toolbox.h File Reference	.1000
6.123 mha_windowparser.cpp File Reference	.1000
6.124 mha_windowparser.h File Reference	.1000
6.125 mhachain.cpp File Reference	.1001
6.126 mhafw_lib.cpp File Reference	.1001
6.127 mhafw_lib.h File Reference	.1001
6.128 MHAIOFile.cpp File Reference	.1002
6.129 MHAIOJack.cpp File Reference	.1004
6.130 MHAIOJackdb.cpp File Reference	.1007
6.131 MHAIOParser.cpp File Reference	
6.132 MHAIOPortAudio.cpp File Reference	.1012
6.133 MHAIOTCP.cpp File Reference	.1015
6.134 mhajack.cpp File Reference	.1019
6.135 mhajack.h File Reference	
6.136 mhamain.cpp File Reference	.1021
6.137 mhapluginloader.cpp File Reference	
6.138 mhapluginloader.h File Reference	
6.139 mhasndfile.cpp File Reference	
6.140 mhasndfile.h File Reference	
6.141 multibandcompressor.cpp File Reference	
6.142 nlms_wave.cpp File Reference	
6.143 noise.cpp File Reference	
6.144 noisePowProposedScale.cpp File Reference	
6.145 overlapadd.cpp File Reference	
6.146 plingploing.cpp File Reference	
6.147 pluginbrowser.cpp File Reference	
6.148 pluginbrowser.h File Reference	
6.149 prediction_error.cpp File Reference	
6.150 prediction_error.h File Reference	
6.151 resampling.cpp File Reference	
6.152 rmslevel.cpp File Reference	
6.153 route.cpp File Reference	
6.154 save_spec.cpp File Reference	
6.155 save wave.cpp File Reference	
6.156 shadowfilter_begin.cpp File Reference	
6.157 shadowfilter_end.cpp File Reference	
6.158 sine.cpp File Reference	
6.159 smoothgains_bridge.cpp File Reference	
6.160 softclip.cpp File Reference	
6.161 spec2wave.cpp File Reference	
6.162 speechnoise.cpp File Reference	
6.163 speechnoise.h File Reference	
6.164 split.cpp File Reference	
6.165 steerbf.cpp File Reference	
6.166 steerbf.h File Reference	
6.167 testalsadevice.c File Reference	
6.168 testplugin.cpp File Reference	
or roo tootplagililopp i ilo i tolororio	.1000

xvi CONTENTS

Ind	dex	1041
	6.178 windowselector.h File Reference	.1039
	6.177 windowselector.cpp File Reference	
	6.176 wavrec.cpp File Reference	
	6.175 wave2spec.cpp File Reference	
	6.174 upsample.cpp File Reference	.1038
	6.173 transducers.cpp File Reference	.1037
	6.172 timosmooth.h File Reference	.1037
	6.171 timoSmooth.cpp File Reference	.1036
	6.170 timoconfig.h File Reference	.1036
	6.169 timoconfig.cpp File Reference	.1036

1 Overview 1

1 Overview

The HörTech Open Master Hearing Aid (openMHA), is a development and evaluation software platform that is able to execute hearing aid signal processing in real-time on standard computing hardware with a low delay between sound input and output.

1.1 Structure

The openMHA can be split into four major components:

- The openMHA command line application (MHA) (p. 33)
- Signal processing plugins (p. 6)
- Audio input-output (IO) plugins (see io_file_t (p. 335), MHAIOJack (p. 95), io_parser_t (p. 343), io tcp parser t (p. 349))
- The openMHA toolbox library (p. 34)

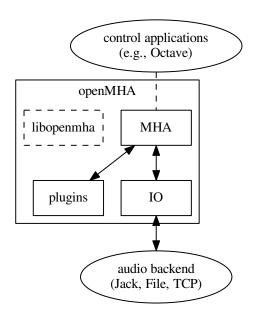


Figure 1 openMHA structure

The openMHA command line application (MHA) (p. 33) acts as a plugin host. It can load signal processing plugins as well as audio input-output (IO) plugins. Additionally, it provides the command line configuration interface and a TCP/IP based configuration interface. Several IO plugins exist: For real-time signal processing, commonly the openMHA MHAIOJack (p. 95) plugin (see plugins' manual) is used, which provides an interface to the Jack Audio Connection Kit (JACK). Other IO plugins provide audio file access or TCP/IP-based processing.

openMHA plugins (p. 6) provide the audio signal processing capabilities and audio signal handling. Typically, one openMHA plugin implements one specific algorithm. The complete virtual hearing aid signal processing can be achieved by a combination of several openMHA plugins.

1.2 Platform Services and Conventions

The openMHA platform offers some services and conventions to algorithms implemented in plugins, that make it especially well suited to develop hearing aid algorithms, while still supporting general-purpose signal processing.

1.2.1 Audio Signal Domains

As in most other plugin hosts, the audio signal in the openMHA is processed in audio chunks. However, plugins are not restricted to propagate audio signal as blocks of audio samples in the time domain another option is to propagate the audio signal in the short time Fourier transform (STFT) domain, i.e. as spectra of blocks of audio signal, so that not every plugin has to perform its own STFT analysis and synthesis. Since STFT analysis and re-synthesis of acceptable audio quality always introduces an algorithmic delay, sharing STFT data is a necessity for a hearing aid signal processing platform, because the overall delay of the complete processing has to be as short as possible.

Similar to some other platforms, the openMHA allows also arbitrary data to be exchanged between plugins through a mechanism called **algorithm communication variables** (p. 27) or short "AC vars". This mechanism is commonly used to share data such as filter coefficients or filter states.

1.2.2 Real-Time Safe Complex Configuration Changes

Hearing aid algorithms in the openMHA can export configuration settings that may be changed by the user at run time.

To ensure real-time safe signal processing, the audio processing will normally be done in a signal processing thread with real-time priority, while user interaction with configuration parameters would be performed in a configuration thread with normal priority, so that the audio processing does not get interrupted by configuration tasks. Two types of problems may occur when the user is changing parameters in such a setup:

- The change of a simple parameter exposed to the user may cause an involved recalculation of internal runtime parameters that the algorithm actually uses in processing. The duration required to perform this recalculation may be a significant portion of (or take even longer than) the time available to process one block of audio signal. In hearing aid usage, it is not acceptable to halt audio processing for the duration that the recalculation may require.
- If the user needs to change multiple parameters to reach a desired configuration state
 of an algorithm from the original configuration state, then it may not be acceptable that
 processing is performed while some of the parameters have already been changed while
 others still retain their original values. It is also not acceptable to interrupt signal processing until all pending configuration changes have been performed.

The openMHA provides a mechanism in its toolbox library to enable real-time safe configuration changes in openMHA plugins:

Basically, existing runtime configurations are used in the processing thread until the work of creating an updated runtime configuration has been completed in the configuration thread.

In hearing aids, it is more acceptable to continue to use an outdated configuration for a few more milliseconds than blocking all processing.

The openMHA toolbox library provides an easy-to-use mechanism to integrate real-time safe runtime configuration updates into every plugin.

1.2.3 Plugins can Themselves Host Other Plugins

An openMHA plugin can itself act as a plugin host. This allows to combine analysis and resynthesis methods in a single plugin. We call plugins that can themselves load other plugins "bridge plugins" in the openMHA.

When such a bridge plugin is then called by the openMHA to process one block of signal, it will first perform its analysis, then invoke (as a function call) the signal processing in the loaded plugin to process the block of signal in the analysis domain, wait to receive a processed block of signal in the analysis domain back from the loaded plugin when the signal processing function call to that plugin returns, then perform the re-synthesis transform, and finally return the block of processed signal in the original domain back to the caller of the bridge plugin.

1.2.4 Central Calibration

The purpose of hearing aid signal processing is to enhance the sound for hearing impaired listeners. Hearing impairment generally means that people suffering from it have increased hearing thresholds, i.e. soft sounds that are audible for normal hearing listeners may be imperceptible for hearing impaired listeners. To provide accurate signal enhancement for hearing impaired people, hearing aid signal processing algorithms have to be able to determine the absolute physical sound pressure level corresponding to a digital signal given to any openM← HA plugin for processing. Inside the openMHA, we achieve this with the following convention: The single-precision floating point time-domain sound signal samples, that are processed inside the openMHA plugins in blocks of short durations, have the physical pressure unit Pascal ($1Pa = 1N/m^2$). With this convention in place, all plugins can determine the absolute physical sound pressure level from the sound samples that they process. A derived convention is employed in the spectral domain for STFT signals. Due to the dependency of the calibration on the hardware used, it is the responsibility of the user of the openMHA to perform calibration measurements and adapt the openMHA settings to make sure that this calibration convention is met. We provide the plugin transducers which can be configured to perform the necessary signal adjustments.

2 Todo List

Class AuditoryProfile::profile t (p. 212)

Give more documentation; implement all parts of the auditory profile.

Class mhaconfig_t (p. 470)

Add information on number of bands and on center frequencies, or replace by **mha_audio** descriptor_t (p. 396).

Class MHAFilter::filter_t (p. 497)

Implement a more robust filter form.

Member MHAFilter::polyphase resampling t::now index (p. 529)

Index into what? What is the meaning of now?

```
Class MHAPlugin::plugin_t< runtime_cfg_t > (p. 694)
```

Describe all services provided by this class, so that the reason why it is recommended that all plugins use this class as their base is evident. Document all relevant methods and fields.

3 Module Documentation

3.1 Concept of Variables and Data Exchange in the openMHA

Accessibility of configuration variables and data exchange between plugins (processing blocks) are an important issue in the openMHA.

Accessibility of configuration variables and data exchange between plugins (processing blocks) are an important issue in the openMHA.

In general, variable types in the openMHA are distinguished by their different access methods. The variable types in the openMHA are:

- Configuration variables: Read and write accesses are possible through the openM← HA configuration language interface. Configuration variables are implemented as C++ classes with a public data member of the underlying C type. Configuration variables can be read and modified from "outside" using the configuration language. The plugin which provides the configuration variable can use the exposed data member directly. All accesses through the openMHA configuration language are checked for data type, valid range, and access restrictions.
- **Monitor variables**: Read access is possible through the openMHA configuration language. Write access is only possible from the C++ code. Internally, monitor variables have a similar C++ class interface as configuration variables.
- AC variables (algorithm communication variables (p. 27)): Any C or C++ data structure can be shared within an openMHA chain. Access management and name space is realised in openMHA chain plugin ('mhachain'). AC variables are not available to the openMHA configuration language interface, although a read-only converter plugin acmon is available.

• Runtime configuration: Algorithms usually derive more parameters (runtime configuration) from the openMHA configuration language variables. When a configuration variable changes through configuration language write access, then the runtime configuration has to be recomputed. Plugin developers are encouraged to encapsulate the runtime configuration in a C++ class, which recomputes the runtime configuration from configuration variables in the constructor. The openMHA supports lock-free and thread-safe replacement of the runtime configuration instance (see example5.cpp (p. 20) and references therein).

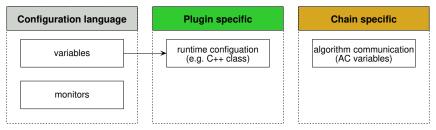


Figure 2 Variable types in the openMHA

The C++ data types are shown in the figure below. These variables can be accessed via the openMHA host application using the openMHA configuration language. For more details see 'Application engineers' manual'.

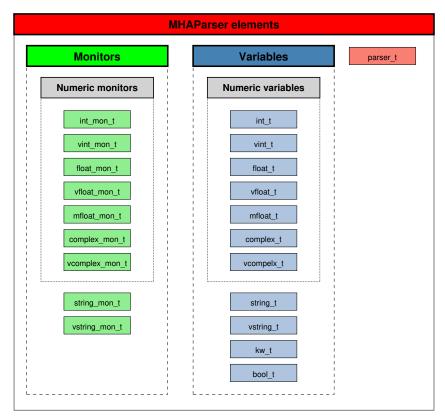


Figure 3 MHAParser elements

3.2 The openMHA Plugins (programming interface)

An openMHA plugin is the signal processing unit, usually an algorithm.

Classes

class MHAPlugin::plugin_t < runtime_cfg_t >
 The template class for C++ openMHA plugins.

Macros

- #define **MHAPLUGIN_CALLBACKS_PREFIX**(prefix, classname, indom, outdom)

 C++ wrapper macro for the plugin interface.
- #define MHAPLUGIN_CALLBACKS(plugname, classname, indom, outdom) MHAPLU
 GIN_CALLBACKS_PREFIX(MHA_STATIC_## plugname ## _,classname,indom,outdom)
 C++ wrapper macro for the plugin interface.
- #define MHAPLUGIN_DOCUMENTATION(plugname, cat, doc) MHAPLUGIN_DOCU
 MENTATION_PREFIX(MHA_STATIC_ ## plugname ## _,cat,doc)

Wrapper macro for the plugin documentation interface.

3.2.1 Detailed Description

An openMHA plugin is the signal processing unit, usually an algorithm.

openMHA plugins can be combined into processing chains. One of the configured chains can be selected for output which allows direct comparison of single algorithms or complex signal processing configurations. Algorithms within one chain can communicate with each other by sharing some of their variables, see section **Communication between algorithms** (p. 27).

The openMHA plugins can use the openMHA configuration language for their configuration. If they do so, the configuration can be changed through the framework even at run time. A description of this language can be found in section **The openMHA configuration language** (p. 33). If the algorithms should make use of the openMHA configuration language, they need to be written in C++ rather than pure C.

In the openMHA package a set of example plugins is included. These examples are the base of a step by step tutorial on how to write an openMHA plugin. See section **Writing openMHA Plugins. A step-by-step tutorial** (p. 10) for detailes.

openMHA plugins communicate with the openMHA using a simple ANSI-C interface. This way it is easy to mix plugins compiled with different C++ compilers. For convenience, we provide C++ classes which can be connected to the C++ interface. We strongly recommend the usage of these C++ wrappers. They include out-of-the box support exporting variables to the configuration interface and for thread safe configuration update.

The openMHA C++ plugin interface consists of a few number of method prototypes:

The output domain (spectrum or waveform) of an openMHA plugin will typically be the same as the input domain:

- mha_wave_t (p. 462) * process(mha_wave_t (p. 462) *): pure waveform processing
- mha_spec_t (p. 432) * process(mha_spec_t (p. 432) *): pure spectral processing

But it is also possible to implement domain transformations (from the time domain into spectrum or vice versa). The corresponding method signatures are:

- mha_spec_t (p. 432) * process(mha_wave_t (p. 462) *): Domain transformation from waveform to spectrum
- mha_wave_t (p. 462) * process(mha_spec_t (p. 432) *): Domain transformation from spectrum to waveform

For preparation and release of a plugin, the methods

- void prepare(mhaconfig_t (p. 470) &) and
- void release(void)

have to be implemented. The openMHA will call the <code>process()</code> method only ater the prepare method has returned and before <code>release()</code> is invoked. It is guarantteed by the open—MHA framework that signal processing is performed only between calls of <code>prepare()</code> and <code>release()</code>. Each call of <code>prepare()</code> is followed by a call of <code>release()</code> (after some optional signal processing).

For configuration purposes, the plugin class has to export a method called <code>parse()</code> which implements the openMHA configuration language. We strongly recommend that you do not implement this method yourself, but by inheriting from the class <code>MHAParser::parser_t</code> (p. 654) from the openMHA toolbox, directly or indirectly (inheriting from a class that itself inherits from <code>MHAParser::parser_t</code> (p. 654)).

3.2.2 Connecting the C++ class with the C Interface

A C++ class which provides the appropriate methods can be used as an openMHA Plugin by connecting it to the C interface using the **MHAPLUGIN_CALLBACKS** (p. 9) macro.

The openMHA Toolbox library provides a base class **MHAPlugin::plugin_t** (p. 694)<T> (a template class) which can be used as the base class for a plugin class. This base class implements some necessary features for openMHA plugin developers like integration into the openMHA configuration language environment (it inherits from **MHAParser::parser_t** (p. 654)) and thread-safe runtime configuration update.

3.2.3 Error reporting

When your plugin detects a situation that it cannot handle, like input signal of the wrong signal domain at preparation time, unsupported number of input channels at preparation time, unsupported combinations of values in the plugin's variables during configuration, it should throw a C++ exception. The exception should be of type MHAError. Exceptions of this type are caught by the **MHAPLUGIN_CALLBACKS** (p. 9) macro for further error Reporting.

Throwing exceptions in response to unsupported configuration changes does not stop the signal processing. The openMHA configuration language parser will restore the previous value of that variable and report an error to the configurator, while the signal processing continues. Throwing exceptions from the signal processing thread will terminate the signal processing. Therefore, you should generally avoid throwing exceptions from the process method. Only do this if you detected a defect in your plugin, and then you should include enough information in the error message to be able to fix the defect.

- 3.2.4 Contents of the openMHA Plugin programming interface
- 3.2.5 Macro Definition Documentation

C++ wrapper macro for the plugin interface.

Parameters

classname	The name of the plugin class
indom	Input domain (wave or spec)
outdom	Output domain (wave or spec)

This macro defines all required openMHA Plugin interface functions and passes calls of these functions to the corresponding member functions of the class <code>'classname'</code>. The parameters <code>'indom'</code> and <code>'outdom'</code> specify the input and output domain of the processing method. The <code>MHAInit()</code> and <code>MHADestroy()</code> functions will create or destroy an instance of the class. The approriate member functions have to be defined in the class. It is suggested to make usage of the <code>MHAPlugin::plugin_t(p.694)</code> template class. Exceptions of type <code>MHA_Error(p.413)</code> are caught and transformed into apropriate error codes with their corresponding error messages.

3.2.5.2 #define MHAPLUGIN CALLBACKS(

```
plugname,
classname,
indom,
outdom ) MHAPLUGIN_CALLBACKS_PREFIX(MHA_STATIC_ ## plugname
## _,classname,indom,outdom)
```

C++ wrapper macro for the plugin interface.

Parameters

plugname	The file name of the plugin without the .so or .dll extension
classname	The name of the plugin class
indom	Input domain (wave or spec)
outdom	Output domain (wave or spec)

This macro defines all required openMHA Plugin interface functions and passes calls of these functions to the corresponding member functions of the class 'classname'. The parameters 'indom' and 'outdom' specify the input and output domain of the processing method. The MHA← Init() and MHADestroy() functions will create or destroy an instance of the class. The approriate member functions have to be defined in the class. It is suggested to make usage of the MH← APlugin::plugin_t (p. 694) template class. Exceptions of type MHA_Error (p. 413) are caught and transformed into apropriate error codes with their corresponding error messages.

```
3.2.5.3 #define MHAPLUGIN_DOCUMENTATION(

plugname,
```

```
plugname,
cat,
doc ) MHAPLUGIN_DOCUMENTATION_PREFIX(MHA_STATIC_ ##
plugname ## _,cat,doc)
```

Wrapper macro for the plugin documentation interface.

Parameters

plugin	The file name of the plugin without the .so or .dll extension
cat	Space separated list of categories to which belong the plugin (as const char*)
doc Documentation of the plugin (as const char*)	

This macro defines the openMHA Plugin interface function for the documentation. The categories can be any space seperated list of category names. An empty string will categorize the plugin in the category 'other'.

The documentation should contain a description of the plugin including a description of the underlying models, and a paragraph containing hints for usage. The text should be LaTeX compatible (e.g., avoid or quote underscores in the text part); equations should be formatted as LaTeX.

3.3 Writing openMHA Plugins. A step-by-step tutorial

A step-by-step tutorial on writing openMHA plugins.

A step-by-step tutorial on writing openMHA plugins.

openMHA contains a small number of example plugins as C++ source code. They are meant to help developers in understanding the concepts of openMHA plugin programming starting from the simplest example and increasing in complexity. This tutorial explains the basic parts of the example files.

3.3.1 example1.cpp

The example plugin file <code>example1.cpp</code> (p. 941) demonstrates the easiest way to implement an openMHA Plugin. It attenuates the sound signal in the first channel by multiplying the sound samples with a factor. The plugin class <code>MHAPlugin::plugin_t</code> (p. 694) exports several methods, but only two of them need a non-empty implementation: <code>prepare()</code> method is a pure virtual function and <code>process()</code> is called when signal processing starts.

Every plugin implementation should include the 'mha_plugin.hh (p. 979)' header file. C++ helper classes for plugin development are declared in this header file, and most header files needed for plugin development are included by mha plugin.hh (p. 979).

The class plugin1_t inherits from the class **MHAPlugin::plugin_t** (p. 694), which then inherits from **MHAParser::parser_t** (p. 654) – the configuration language interface in the method "parse". Our plugin class therefore exports the working "parse" method inherited from **MHA**← **Parser::parser t** (p. 654), and the plugin is visible in the openMHA configuration tree.

The constructor has to accept 3 parameters of correct types. In this simple example, we do not make use of them.

The release() method is used to free resources after signal processing. In this simple example, we do not allocate resources, so there is no need to free them.

3.3.1.1 The prepare method

Parameters

signal_info	Contains information about the input signal's parameters, see mhaconfig_t
	(p. 470).

The prepare () method of the plugin is called before the signal processing starts, when the input signal parameters like domain, number of channels, frames per block, and sampling rate are known. The prepare () method can check these values and raise an exception if the plugin cannot cope with them, as is done here. The plugin can also change these values if the signal processing performed in the plugin results in an output signal with different parameters. This plugin does not change the signal's parameters, therefore they are not modified here.

3.3.1.2 The signal processing method

```
mha_wave_t * process(mha_wave_t * signal)
{
   unsigned int channel = 0; // channels and frames counting starts with 0
   float factor = 0.1f;
   unsigned int frame;

   // Scale channel number "channel" by "factor":
   for(frame = 0; frame < signal->num_frames; frame++) {
      // Waveform channels are stored interleaved.
      signal->buf[signal->num_channels * frame + channel] *= factor;
   }
   // Algorithms may process data in-place and return the input signal
   // structure as their output signal:
   return signal;
}
```

Parameters

signal Pointer to the input signal structure **mha_wave_t** (p. 462).

Returns

Pointer to the output signal structure. The input signal structure may be reused if the signal has the same domain and dimensions.

The plugin works with time domain input signal (indicated by the data type **mha_wave_t** (p. 462) of the process method's parameter). It scales the first channel by a factor of 0.1. The output signal reuses the structure that previously contained the input signal (in-place processing).

3.3.1.3 Connecting the C++ class with the C plugin interface

Plugins have to export C functions as their interface (to avoid C++ name-mangling issues and other incompatibilities when mixing plugins compiled with different C++ compilers).

```
MHAPLUGIN_CALLBACKS(example1, example1_t, wave, wave)
```

This macro takes care of accessing the C++ class from the C functions required as the plugin's interface. It implements the C funtions and calls the corresponding C++ instance methods. Plugin classes should be derived from the template class **MHAPlugin::plugin_t** (p. 694) to be compatible with the C interface wrapper.

This macro also catches C++ exceptions of type MHA_Error (p. 413), when raised in the methods of the plugin class, and reports the error using an error flag as the return value of the underlying C function. It is therefore important to note that only C++ exceptions of type MH← A_Error (p. 413) may be raised by your plugin. If your code uses different Exception classes, you will have to catch them yourself before control leaves your plugin class, and maybe report the error by throwing an instance of MHA_Error (p. 413). This is important, because: (1) C++ exceptions cannot cross the plugin interface, which is in C, and (2) there is no error handling code for your exception classes in the openMHA framework anyways.

3.3.2 example2.cpp

This is another simple example of openMHA plugin written in C++. This plugin also scales one channel of the input signal, working in the time domain. The scale factor and which channel to scale (index number) are made accessible to the configuration language.

The algorithm is again implemented as a C++ class.

Parameters

scale_ch	- the channel number to be scaled
factor	 the scale factor of the scaling.

This class again inherits from the template class **MHAPlugin::plugin_t** (p. 694) for intergration with the openMHA configuration language. The two data members serve as externally visible configuration variables. All methods of this class have a non-empty implementation.

3.3.2.1 Constructor

The constructor invokes the superclass constructor with a string parameter. This string parameter serves as the help text that describes the functionality of the plugin. The constructor registers configuration variables with the openMHA configuration tree and sets their default values and permitted ranges. The minimum permitted value for both variables is zero, and there is no maximum limit (apart from the limitations of the underlying C data type). The configuration variables have to be registered with the parser node instance using the MHAParser::parser←
_t::insert_item (p. 656) method.

3.3.2.2 The prepare method

Parameters

The user may have changed the configuration variables before preparing the openMHA plugin. A consequence of this is that it is not sufficient any more to check if the input signal has at least 1 audio channel.

Instead, this prepare method checks that the input signal has enough channels so that the current value of <code>scale_ch.data</code> is a valid channel index, i.e. $0 \le scale_ch.data < signal \leftarrow _info.channels$. The prepare method does not have to check that $0 \le scale_ch.data$, since this is guaranteed by the valid range setting of the configuration variable.

The prepare method then modifies the valid range of the <code>scale_ch</code> variable, it modifies the upper bound so that the user cannot set the variable to a channel index higher than the available channels. Setting the range is done using a string parameter. The prepare method contatenates a string of the form "[0,n[". n is the number of channels in the input signal, and is used here as an exclusive upper boundary. To convert the number of channels into a string, a helper function for string conversion from the openMHA Toolbox is used. This function is overloaded and works for several data types.

It is safe to assume that the value of configuration variables does not change while the prepare method executes, since openMHA preparation is triggered from a configuration language command, and the openMHA configuration language parser is busy and cannot accept other commands until all openMHA plugins are prepared (or one of them stops the process by raising an exception). As we will see later in this tutorial, the same assumption cannot be made for the process method.

3.3.2.3 The release method

```
void example2_t::release(void)
{
    scale_ch.set_range("[0,[");})
```

The release method should undo the state changes that were performed by the prepare method. In this example, the prepare method has reduced the valid range of the scale_ch, so that only valid channels could be selected during signal processing.

The release method reverts this change by setting the valid range back to its original value, "[0,[".

3.3.2.4 The signal processing method

```
mha_wave_t * example2_t::process(mha_wave_t * signal)
{
    unsigned int frame;
    for(frame = 0; frame < signal->num_frames; frame++)
        value(signal, frame, scale_ch.data) *= factor.data;
    return signal;
}
```

The processing function uses the current values of the configuration variables to scale every frame in the selected audio channel.

Note that the value of each configuration variable can change while the processing method executes, since the process method usually executes in a different thread than the configuration interface.

For this simple plugin, this is not a problem, but for more advanced plugins, it has to be taken into consideration. The next section takes a closer look at the problem.

Consistency

Assume that one thread reads the value stored in a variable while another thread writes a new value to that variable concurrently. In this case, you may have a consistency problem. You would perhaps expect that the value retrieved from the variable either (a) the old value, or (b) the new value, but not (c) something else. Yet generally case (c) is a possibility.

Fortunately, for some data types on PC systems, case (c) cannot happen. These are 32bit wide data types with a 4-byte alignment. Therefore, the values in **MHAParser::int_t** (p. 630) and **MHAParser::float_t** (p. 625) are always consistent, but this is not the case for vectors, strings, or complex values. With these, you can get a mixture of the bit patterns of old and new values, or you can even cause a memory access violation in case a vector or string grows and has to be reallocated to a different memory address.

There is also a consistency problem if you take the combination of two "safe" datatypes. The openMHA provides a mechanism that can cope with these types of problems. This thread-safe runtime configuration update mechanism is introduced in example 5.

3.3.3 example3.cpp

This example introduces the openMHA Event mechanism. Plugins that provide configuration variable can receive a callback from the parser base class when a configuration variable is accessed through the configuration language interface.

The third example performes the same processing as before, but now only even channel indices are permitted when selecting the audio channel to scale. This restriction cannot be ensured by setting the range of the channel index configuration variable. Instead, the event mechanism of openMHA configuration variables is used. Configuration variables emit 4 different events, and your plugin can connect callback methods that are called when the events are triggered. These events are:

writeaccess

triggered on write access to a configuration variable.

valuechanged

 triggered when write access to a configuration variable actually changes the value of this variable.

readaccess

triggered after the value of the configuration variable has been read.

prereadaccess

• triggered before the value of a configuration variable is read, i.e. the value of the requested variable can be changed by the callback to implement computation on demand.

All of these callbacks are executed in the configuration thread. Therefore, the callback implementation does not have to be realtime-safe. No other updates of configuration language variables through the configuration language can happen in parallel, but your processing method can execute in parallel and may change values.

3.3.3.1 Data member declarations

```
class example3_t : public MHAPlugin::plugin_t<int> {
    MHAParser::int_t scale_ch;
    MHAParser::float_t factor;
    MHAParser::int_mon_t prepared;

MHAEvents::patchbay_t<example3_t> patchbay;
```

This plugin exposes another configuration variable, "prepared", that keeps track of the prepared state of the plugin. This is a read-only (monitor) integer variable, i.e. its value can only be changed by your plugin's C++ code. When using the configuration language interface, the value of this variable can only be read, but not changed.

The patchbay member is an instance of a connector class that connects event sources with callbacks.

3.3.3.2 Method declarations

This plugin exposes 4 callback methods that are triggered by events. Multiple events (from the same or different configuration variables) can be connected to the same callback method, if desired.

This example plugin uses the valuechanged event to check that the scale_ch configuration variable is only set to valid values.

The other callbacks only cause log messages to stdout, but the comments in the logging callbacks give a hint when listening on the events would be useful.

3.3.3.3 Example 3 constructor

```
example3_t::example3_t(algo_comm_t & ac,
                       const std::string & chain_name,
                       const std::string & algo_name)
    : MHAPlugin::plugin_t<int>("This plugin multiplies the sound signal"
                               " in one audio channel by a factor", ac),
      scale_ch("Index of audio channel to scale. Indices start from 0."
               " Only channels with even indices may be scaled.",
               "O",
               "[0,["),
      factor ("The scaling factor that is applied to the selected channel.",
             "0.1",
             "[0,["),
     prepared("State of this plugin: 0 = unprepared, 1 = prepared")
    insert_item("channel", &scale_ch);
   insert_item("factor", &factor);
    prepared.data = 0;
    insert_item("prepared", &prepared);
    patchbay.connect(&scale_ch.writeaccess, this,
                     &example3 t::on scale ch writeaccess);
    patchbay.connect(&scale_ch.valuechanged, this,
                    &example3_t::on_scale_ch_valuechanged);
    patchbay.connect(&scale_ch.readaccess, this,
                     &example3_t::on_scale_ch_readaccess);
    patchbay.connect(&scale_ch.prereadaccess, this,
                     &example3_t::on_prereadaccess);
    patchbay.connect(&factor.prereadaccess, this,
                     &example3 t::on prereadaccess);
    patchbay.connect(&prepared.prereadaccess, this,
                    &example3_t::on_prereadaccess);
}
```

The constructor of monitor variables does not take a parameter for setting the initial value. The single parameter here is the help text describing the contents of the read-only variable. If the initial value should differ from 0, then the .data member of the configuration variable has to be set to the initial value in the plugin constructor's body explicitly, as is done here for demonstration although the initial value of this monitor variable is 0.

Events and callback methods are then connected using the patchbay member variable.

3.3.3.4 The prepare method

The prepare method checks wether the current setting of the scale_ch variable is possible with the input signal dimension. It does not adjust the range of the variable, since the range alone is not sufficient to ensure all future settings are also valid: The scale channel index has to be even.

3.3.3.5 The release method

```
void example3_t::release(void)
{
   prepared.data = 0;
}
```

The release method is needed for tracking the prepared state only in this example.

3.3.3.6 The signal processing method

```
mha_wave_t * example3_t::process(mha_wave_t * signal)
{
    unsigned int frame;
    for(frame = 0; frame < signal->num_frames; frame++)
        value(signal, frame, scale_ch.data) *= factor.data;
    return signal;
}
```

The signal processing member function is the same as in example 2.

3.3.3.7 The callback methods

```
void example3_t::on_scale_ch_writeaccess()
    printf("Write access: Attempt to set scale_ch=%d.\n", scale_ch.data);
    // Can be used to track any writeaccess to the configuration, even
    // if it does not change the value. E.g. setting the name of the
    // sound file in a string configuration variable can cause a sound
    // file player plugin to start playing the sound file from the
    // beginning.
void example3_t::on_scale_ch_valuechanged()
    if (scale_ch.data & 1)
       throw MHA_Error(__FILE__,__LINE_
                        "Attempt to set scale_ch to non-even value %d",
                        scale_ch.data);
    // Can be used to recompute a runtime configuration only if some
    // configuration variable actually changed.
void example3_t::on_scale_ch_readaccess()
    printf("scale_ch has been read.\n");
    // A configuration variable used as an accumulator can be reset
    // after it has been read.
void example3_t::on_prereadaccess()
    printf("A configuration language variable is about to be read.\n");
    // Can be used to compute the value on demand.
MHAPLUGIN_CALLBACKS (example3, example3_t, wave, wave)
```

When the writeaccess or valuechanged callbacks throw an MHAError exception, then the change made to the value of the configuration variable is reverted.

If multiple event sources are connected to a single callback method, then it is not possible to determine which event has caused the callback to execute. Often, this information is not crucial, i.e. when the answer to a change of any variable in a set of variables is the same, e.g. the recomputation of a new runtime configuration that takes all variables of this set as input.

3.3.4 example4.cpp

This plugin is the same as example 3 except that it works on the spectral domain (STFT).

3.3.4.1 The Prepare method

The prepare method now checks that the signal domain is MHA SPECTRUM.

3.3.4.2 The signal processing method

```
mha_spec_t * example4_t::process(mha_spec_t * signal)
{
    unsigned int bin;
    // spectral signal is stored non-interleaved.
    mha_complex_t * channeldata =
        signal->buf + signal->num_frames * scale_ch.data;
    for(bin = 0; bin < signal->num_frames; bin++)
        channeldata[bin] *= factor.data;
    return signal;
}
```

The signal processing member function works on the spectral signal instead of the wave signal as before.

The **mha_spec_t** (p. 432) instance stores the complex (**mha_complex_t** (p. 400)) spectral signal for positive frequences only (since the waveform signal is always real). The num_frames member of **mha_spec_t** (p. 432) actually denotes the number of STFT bins.

Please note that different from **mha_wave_t** (p. 462), a multichannel signal in **mha_spec_t** (p. 432) is stored non-interleaved in the signal buffer.

Some arithmetic operations are defined on struct **mha_complex_t** (p. 400) to facilitate efficient complex computations. The *= operator used here (defined for real and for complex arguments) is one of them.

3.3.4.3 Connecting the C++ class with the C plugin interface

```
MHAPLUGIN_CALLBACKS(example4, example4_t, spec, spec)
```

When connecting a class that performs spectral processing with the C interface, use spec instead of wave as the domain indicator.

3.3.5 example5.cpp

Many algorithms use complex operations to transform the user space variables into run time configurations. If this takes a noticeable time (e.g. more than 100-500 μ sec), the update of the runtime configuration can not take place in the real time processing thread. Furthermore, the parallel access to complex structures may cause unpredictable results if variables are read while only parts of them are written to memory (cf. section **Consistency** (p. 15)). To handle these situations, a special C++ template class **MHAPlugin::plugin_t** (p. 694) was designed. This class helps keeping all access to the configuration language variables in the **configuration** thread rather than in the **processing** thread.

The runtime configuration class <code>example5_t</code> (p. 301) is the parameter of the template class <code>MHAPlugin::plugin_t</code> (p. 694). Its constructor converts the user variables into a runtime configuration. Because the constructor executes in the configuration thread, there is no harm if the constructor takes a long time. All other member functions and data members of the runtime configurations are accessed only from the signal processing thread (real-time thread).

```
class example5_t {
public:
    example5_t (unsigned int,unsigned int,mha_real_t);
    mha_spec_t* process(mha_spec_t*);
private:
    unsigned int channel;
    mha_real_t scale;
};
```

The plugin interface class inherits from the plugin template class **MHAPlugin::plugin**_← **t** (p. 694), parameterised by the runtime configuration. Configuration changes (write access to the variables) will emit a write access event of the changed variables. These events can be connected to member functions of the interface class by the help of a **MHAEvents::patchbay**← **_t** (p. 478) instance.

```
class plugin_interface_t : public MHAPlugin::plugin_t<example5_t> {
public:
    plugin_interface_t(const algo_comm_t&,const std::string&,const std::string&);
    mha_spec_t* process(mha_spec_t*);
    void prepare(mhaconfig_t&);
private:
    void update_cfg();
    /* integer variable of MHA-parser: */
    MHAParser::int_t scale_ch;
    /* float variable of MHA-parser: */
    MHAParser::float_t factor;
    /* patch bay for connecting configuration parser
        events with local member functions: */
    MHAEvents::patchbay_t<plugin_interface_t> patchbay;
};
```

The constructor of the runtime configuration analyses and validates the user variables. If the configuration is invalid, an exception of type **MHA_Error** (p. 413) is thrown. This will cause the openMHA configuration language command which caused the change to fail: The modified configuration language variable is then reset to its original value, and the error message will contain the message string of the **MHA_Error** (p. 413) exception.

In this example, the run time configuration class example5_t (p. 301) has a signal processing member function. In this function, the selected channel is scaled by the given scaling factor.

```
mha_spec_t* example5_t::process(mha_spec_t* spec)
{
    /* Scale channel number "scale_ch" by "factor": */
    for(unsigned int fr = 0; fr < spec->num_frames; fr++) {
        spec->buf[fr + channel * spec->num_frames].re *= scale;
        spec->buf[fr + channel * spec->num_frames].im *= scale;
    }
    return spec;
}
```

The constructor of the example plugin class is similar to the previous examples. A callback triggered on write access to the variables is registered using the **MHAEvents::patchbay_t** (p. 478) instance.

```
plugin_interface_t::plugin_interface_t(
   const algo_comm_t& iac,
    const std::string&,const std::string&)
    : MHAPlugin::plugin_t<example5_t>("example plugin configuration structure",iac),
      /\star initialzing variable 'scale_ch' with MHAParser::int_t(char* name, .... ) \star/
      scale_ch("channel number to be scaled", "0", "[0, ["),
      /* initialzing variable 'factor' with MHAParser::float_t(char* name, .... ) */
     factor("scale factor","1.0","[0,2]")
    /\star Register variables to the configuration parser: \star/
    insert_item("channel", &scale_ch);
    insert_item("factor", &factor);
    * On write access to the parser variables a notify callback of
    \star this class will be called. That funtion will update the runtime
    * configuration.
    patchbay.connect(&scale_ch.writeaccess,this,&plugin_interface_t::update_cfg);
    patchbay.connect(&factor.writeaccess,this,&plugin_interface_t::update_cfg);
```

The processing function can gather the latest valid runtime configuration by a call of poll_config. On success, the class member cfg points to this configuration. On error, if there is no usable runtime configuration instance, an exception is thrown. In this example, the prepare method ensures that there is a valid runtime configuration, so that in this example, no error can be raised at this point. The prepare method is always executed before the process method is called. The runtime configuration class in this example provides a signal processing method. The process method of the plugin interface calls the process method of this instance to perform the actual signal processing.

```
mha_spec_t* plugin_interface_t::process(mha_spec_t* spec)
{
    poll_config();
    return cfg->process(spec);
}
```

The prepare method ensures that a valid runtime configuration exists by creating a new runtime configuration from the current configuration language variables. If the configuration is invalid, then an exception of type **MHA_Error** (p. 413) is raised and the preparation of the openMHA fails with an error message.

The update_cfg member function is called when the value of a configuration language variable changes, or from the prepare method. It allocates a new runtime configuration and registers it for later access from the real time processing thread. The function **push_config** (p. 692) stores the configuration in a FiFo queue of runtime configurations. Once they are inserted in the FiFo, the **MHAPlugin::plugin_t** (p. 694) template is responsible for deleting runtime configuration instances stored in the FiFo. You don't need to keep track of the created instances, and you must not delete them yourself.

```
void plugin_interface_t::update_cfg()
{
    if( tftype.channels )
        push_config(new example5_t(scale_ch.data,tftype.channels,factor.data));
}
```

In the end of the example code file, the macro **MHAPLUGIN_CALLBACKS** (p. 9) defines all ANSI-C interface functions and passes them to the corresponding C++ class member functions (partly defined by the **MHAPlugin::plugin_t** (p. 694) template class). All exceptions of type **MHA_Error** (p. 413) are caught and transformed into an appropriate error code and error message.

MHAPLUGIN_CALLBACKS(example5,plugin_interface_t,spec,spec)

3.3.6 example6.cpp

This last example is the same as the previous one, but it additionally creates an 'Algorithm Communication Variable' (AC variable). It calculates the RMS level of a given channel and stores it into this variable. The variable can be accessed by any other algorithm in the same chain. To store the data onto disk, the 'acsave' plugin can be used. 'acmon' is a plugin which converts AC variables into parsable monitor variables.

In the constructor of the plugin class the variable rmsdb is registered under the name example6_rmslev as a one-dimensional AC variable of type float. For registration of other types, read access and other detailed informations please see **Communication between algorithms** (p. 27).

```
example6_t::example6_t(const algo_comm_t& iac,
                        const std::string&,const std::string&)
    : MHAPlugin::plugin_t<cfg_t>("example plugin configuration structure",iac),
/* initialzing variable 'channel_no' with MHAParser::int_t(char* name, ....) */
      channel_no("channel in which the RMS level is measured", "0", "[0, [")
    /* Register variables to the configuration parser: */
    insert_item("channel", &channel_no);
     * On write access to the parser variables a notify callback of
     * this class will be called. That funtion will update the runtime
     * configuration.
    patchbay.connect(&channel_no.writeaccess,this,&example6_t::update_cfg);
     * Propagate the level variable to all algorithms in the
     * processing chain. If multiple instances of this algorithm are
     * required, than it is necessary to use different names for this
     * variable (i.e. prefixing the name with the algorithm name
     * passed to MHAInit).
    ac.insert_var_float( ac.handle, "example6_rmslev", &rmsdb );
```

3.3.7 Debugging openMHA plugins

Suppose you would want to step through the code of your openMHA plugin with a debugger. This example details how to use the linux gdb debugger to inspect the example6_t :: prepare() (p. 303) and example6_t::process() (p. 303) routines of example6.
cpp (p. 23) example 6.

First, make sure that your plugin is compiled with the compiler option to include debugging symbols: Apply the -ggdb switch to all gcc, g++ invocations.

Once the plugin is compiled, with debugging symbols, create a test configuration. For example 6, assuming there is an audio file named input.wav in your working directory, you could create a configuration file named 'debugexample6.cfg', with the following content:

```
# debugexample6.cfg
fragsize = 64
srate = 44100
nchannels_in = 2
iolib = MHAIOFile

io.in = input.wav
io.out = output.wav
mhalib = example6
mha.channel = 1
cmd=start
```

Assuming all your binaries and shared-object libraries are in your 'bin' directory (see READ← ME.md), you could start gdb using

```
$ export MHA_LIBRARY_PATH=$PWD/bin
$ gdb $MHA_LIBRARY_PATH/mha
```

Set breakpoints in prepare and process methods, and start execution. Note that specifying the breakpoint by symbol (example6_t::prepare (p. 303)) does not yet work, as the symbol lives in the openMHA plugin that has not yet been loaded. Specifying by line number works, however. Specifying the breakpoint by symbol also works once the plugin is loaded (i.e. when the debugger stops in the first break point). You can set the breakpoints like this (example shown here is run in gdb version 7.11.1):

```
(gdb) run ?read:debugexample6.cfg
Starting program: {openMHA_directory}/bin/mha ?read:debugexample6.cfg
[Thread debugging using libthread_db enabled]
Using host libthread_db library "/lib/x86_64-linux-gnu/libthread_db.so.1".
The Open Master Hearing Aid (openMHA) server
Copyright (c) 2005-2017 HoerTech gGmbH, D-26129 Oldenburg, Germany
This program comes with ABSOLUTELY NO WARRANTY; for details see file COPYING.
This is free software, and you are welcome to redistribute it
under the terms of the GNU AFFERO GENERAL PUBLIC LICENSE, Version 3;
for details see file COPYING.
Breakpoint 1, example6_t::prepare (this=0x6478b0, tfcfg=...)
   at example6.cpp:192
          if( tfcfg.domain != MHA_WAVEFORM )
(qdb) b example6.cpp:162
Breakpoint 2 at 0x7fffff589744a: file example6.cpp, line 162.
(gdb) c
Continuing.
```

Where '{openMHA_directory}' is the directory where openMHA is located (which should also be your working directory in this case). Next stop is the process() method. You can now examine and change the variables, step through the program as needed (using, for example 'n' to step in the next line):

3.4 The MHA Framework interface

3.5 Communication between algorithms

Algorithms within one chain can share variables for communication with other algorithms.

Collaboration diagram for Communication between algorithms:

Files

file mha_algo_comm.h

Header file for Algorithm Communication.

Namespaces

· MHA AC

Functions and classes for Algorithm Communication (AC) support.

Classes

class MHA AC::spectrum t

Insert a MHASignal::spectrum_t (p. 766) class into the AC space.

class MHA_AC::waveform_t

Insert a MHASignal::waveform_t (p. 778) class into the AC space.

class MHA AC::int t

Insert a integer variable into the AC space.

class MHA_AC::float_t

Insert a float point variable into the AC space.

class MHA_AC::double_t

Insert a double precision floating point variable into the AC space.

class MHA_AC::ac2matrix_t

Copy AC variable to a matrix.

class MHA_AC::acspace2matrix_t

Copy all or a subset of all numeric AC variables into an array of matrixes.

struct algo_comm_t

A reference handle for algorithm communication variables.

struct comm var t

Algorithm communication variable structure.

Functions

• mha_spec_t MHA_AC::get_var_spectrum (algo_comm_t ac, const std::string &name)

Convert an AC variable into a spectrum.

mha_wave_t MHA_AC::get_var_waveform (algo_comm_t ac, const std::string &name)

Convert an AC variable into a waveform.

- int MHA_AC::get_var_int (algo_comm_t ac, const std::string &name)
 - Return value of an integer scalar AC variable.
- float MHA_AC::get_var_float (algo_comm_t ac, const std::string &name)

 Return value of an floating point scalar AC variable.
- std::vector< float > MHA_AC::get_var_vfloat (algo_comm_t ac, const std::string &name)

Return value of an floating point vector AC variable as standard vector of floats.

3.5.1 Detailed Description

Algorithms within one chain can share variables for communication with other algorithms.

This mechanism allows interaction between algorithms (i.e. separation of noise estimation and noise reduction algorithms, combination of dynamic compression and noise estimation). Through a set of simple C functions, algorithms can propagate variables of any type, even C++ classes, to other algorithms.

An algorithm communication handle (algo_comm_t (p. 194)) is passed at initialisation time to the constructor of each plugin class constructor (p. 694). This handle contains a reference handle, algo_comm_t::handle (p. 194), and a number of function pointers, algo_comm_t ::insert_var (p. 194) etc.. An algorithm communication variable is an object of type comm_← var_t (p. 232).

For AC variables of numeric types, openMHA Plugins for conversion into parsable monitor variables, acmon, and storage into Matlab or text files, acsave, are available.

3.5.2 Function Documentation

Convert an AC variable into a spectrum.

This function reads an AC variable and tries to convert it into a valid spectrum. The Spectrum variable is granted to be valid only for one call of the processing function.

Parameters

ac	AC handle
name	Name of the variable

Returns

Spectrum structure

Convert an AC variable into a waveform.

This function reads an AC variable and tries to convert it into a valid waveform. The waveform variable is granted to be valid only for one call of the processing function.

Parameters

ac	AC handle
name	Name of the variable

Returns

waveform structure

Return value of an integer scalar AC variable.

Parameters

ac	AC handle	
name	Name of the variable	

Returns

Variable value

Return value of an floating point scalar AC variable.

Parameters

ac	AC handle
name	Name of the variable

Returns

Variable value

Return value of an floating point vector AC variable as standard vector of floats.

Parameters

ac	AC handle	
name	Name of the variable	


Returns

Variable value

3.6 Error handling in the openMHA

Errors are reported to the user via the MHA_Error (p. 413) exception.

Collaboration diagram for Error handling in the openMHA:

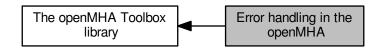

Classes

· class MHA Error

Error reporting exception class.

Macros

- #define MHA_ErrorMsg(x) MHA_Error(__FILE__,__LINE__,"%s",x)

 Throw an openMHA error with a text message.
- #define MHA_assert(x) if(!(x)) throw MHA_Error(__FILE__,__LINE__,"\"%s\" is false.",#x)

Assertion macro, which throws an **MHA_Error** (p. 413).

• #define MHA_assert_equal(a, b) if(a != b) throw MHA_Error(__FILE__,__LINE__ ,"\"%s == %s\" is false (%s = %g, %s = %g).",#a,#b,#a,(double)(a),#b,(double)(b))

Equality assertion macro, which throws an MHA_Error (p. 413) with the values.

Functions

• void **mha_debug** (const char *fmt,...)

Print an info message (stderr on Linux, OutputDebugString in Windows).

3.6.1 Detailed Description

Errors are reported to the user via the MHA_Error (p. 413) exception.

3.6.2 Macro Definition Documentation

Throw an openMHA error with a text message.

Parameters

```
x Text message.
```

```
3.6.2.2 #define MHA_assert(
```

```
x ) if(!(x)) throw MHA_Error(__FILE__,__LINE__,"\"%s\" is false.",#x)
```

Assertion macro, which throws an MHA_Error (p. 413).

Parameters

```
x Boolean expression which should be true.
```

3.6.2.3 #define MHA_assert_equal(

```
a,
b ) if( a != b ) throw MHA_Error(__FILE__,__LINE__,"\"%s == %s\" is false (%s = %g, %s = %g).",#a,#b,#a,(double)(a),#b,(double)(b))
```

Equality assertion macro, which throws an MHA_Error (p. 413) with the values.

Parameters

```
a Numeric expression which can be converted to double (for printing).b Numeric expression which should be equal to a
```

3.6.3 Function Documentation

```
3.6.3.1 void mha_debug ( const char * \textit{fmt}, ... )
```

Print an info message (stderr on Linux, OutputDebugString in Windows).

3.7 The openMHA configuration language

openMHA Plugins that should use the openMHA configuration language for their configuration have to be implemented in C++ and need to include **mha_parser.hh** (p. 975).

openMHA Plugins that should use the openMHA configuration language for their configuration have to be implemented in C++ and need to include **mha_parser.hh** (p. 975).

All required classes and functions for parser access are declared in the namespace MH← AParser (p. 104). The plugin class should be derived from the class MHAParser::parser_t (p. 654) (or MHAPlugin::plugin_t (p. 694)), which symbolises a sub-parser node in the open← MHA script hierarchy. Variables of many types can be registered to the sub-parser node by calling the member function insert_item (p. 656).


The openMHA Plugin template class **MHAPlugin::plugin_t** (p. 694) together with the Plugin macro **MHAPLUGIN_CALLBACKS** (p. 9) provide the callback mappings and correct inheritance. If your plugin is based on that template class, you simply have to use the insert_item command to give access to your variables, everything else is managed internally.

A complete list of all openMHA script items is given in the description of the **MHAParser** (p. 104) namespace.

3.8 The openMHA Toolbox library

The openMHA toolbox is a static C++ library which makes it more comfortable to develop openMHA plugins.

Collaboration diagram for The openMHA Toolbox library:

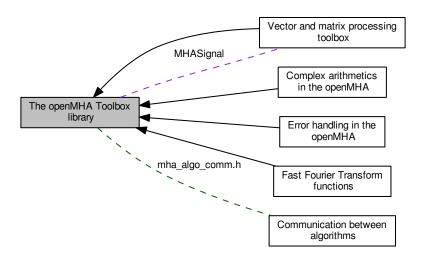

Modules

· Error handling in the openMHA

Errors are reported to the user via the MHA_Error (p. 413) exception.

Vector and matrix processing toolbox

The vector and matrix processing toolbox consists of a number of classes defined in the namespace **MHASignal** (p. 114), and many functions and operators for use with the structures **mha_wave_t** (p. 462) and **mha_spec_t** (p. 432).

- · Complex arithmetics in the openMHA
- · Fast Fourier Transform functions

Files

file mha_algo_comm.h

Header file for Algorithm Communication.

· file mha filter.hh

Header file for IIR filter classes.

file mha_signal.hh

Header file for audio signal handling and processing classes.

• file mha tablelookup.hh

Header file for table lookup classes.

Namespaces

MHAOvlFilter

Namespace for overlapping FFT based filter bank classes and functions.

MHAFilter

Namespace for IIR and FIR filter classes.

MHAParser

Name space for the openMHA-Parser configuration language.

MHASignal

Namespace for audio signal handling and processing classes.

MHATableLookup

Namespace for table lookup classes.

3.8.1 Detailed Description

The openMHA toolbox is a static C++ library which makes it more comfortable to develop openMHA plugins.

It contains the openMHA script language classes.

3.9 Vector and matrix processing toolbox

The vector and matrix processing toolbox consists of a number of classes defined in the namespace **MHASignal** (p. 114), and many functions and operators for use with the structures **mha**← **_wave_t** (p. 462) and **mha_spec_t** (p. 432).

Collaboration diagram for Vector and matrix processing toolbox:



Namespaces

MHASignal

Namespace for audio signal handling and processing classes.

MHAWindow

Collection of Window types.

Classes

struct mha_wave_t

Waveform signal structure.

struct mha_spec_t

Spectrum signal structure.

struct mha_audio_descriptor_t

Description of an audio fragment (planned as a replacement of mhaconfig_t (p. 470)).

struct mha_audio_t

An audio fragment in the openMHA (planned as a replacement of **mha_wave_t** (p. 462) and **mha_spec_t** (p. 432)).

class MHASignal::spectrum t

a signal processing class for spectral data (based on mha_spec_t (p. 432))

class MHASignal::waveform t

signal processing class for waveform data (based on mha_wave_t (p. 462))

class MHASignal::doublebuffer t

Double-buffering class.

class MHASignal::hilbert_t

Hilbert transformation of a waveform segment.

class MHASignal::minphase_t

Minimal phase function.

class MHASignal::uint_vector_t

Vector of unsigned values, used for size and index description of n-dimensional matrixes.

class MHASignal::matrix_t

n-dimensional matrix with real or complex floating point values.

class MHAParser::window t

MHA configuration interface for a window function generator.

class MHASignal::delay_wave_t

Delayline containing wave fragments.

• class MHASignal::async_rmslevel_t

Class for asynchronous level metering.

Typedefs

typedef float mha_real_t
 openMHA type for real numbers

Functions

- mha_wave_t range (mha_wave_t s, unsigned int k0, unsigned int len)

 Return a time interval from a waveform chunk.
- mha_spec_t channels (mha_spec_t s, unsigned int ch_start, unsigned int nch)

 Return a channel interval from a spectrum.
- void MHASignal::for_each (mha_wave_t *s, mha_real_t(*fun)(mha_real_t))
 Apply a function to each element of a mha_wave_t (p. 462).
- mha_real_t MHASignal::lin2db (mha_real_t x)

Conversion from linear scale to dB (no SPL reference)

mha_real_t MHASignal::db2lin (mha_real_t x)

Conversion from dB scale to linear (no SPL reference)

mha_real_t MHASignal::pa2dbspl (mha_real_t x)

Conversion from linear Pascal scale to dB SPL.

- mha_real_t MHASignal::pa22dbspl (mha_real_t x, mha_real_t eps=1e-20f)

 Conversion from squared Pascal scale to dB SPL.
- mha_real_t MHASignal::dbspl2pa (mha_real_t x)

Conversion from dB SPL to linear Pascal scale.

- mha_real_t MHASignal::smp2sec (mha_real_t n, mha_real_t srate)
 conversion from samples to seconds
- mha_real_t MHASignal::sec2smp (mha_real_t sec, mha_real_t srate)
 conversion from seconds to samples
- mha_real_t MHASignal::bin2freq (mha_real_t bin, unsigned fftlen, mha_real_t srate)
 conversion from fft bin index to frequency
- mha_real_t MHASignal::freq2bin (mha_real_t freq, unsigned fftlen, mha_real_t srate)
 conversion from frequency to fft bin index
- mha_real_t MHASignal::smp2rad (mha_real_t samples, unsigned bin, unsigned fftlen) conversion from delay in samples to phase shift

mha_real_t MHASignal::rad2smp (mha_real_t phase_shift, unsigned bin, unsigned fftlen)

conversion from phase shift to delay in samples

template < class elem_type >
 std::vector < elem_type > MHASignal::dupvec (std::vector < elem_type > vec, unsigned n)

Duplicate last vector element to match desired size.

template<class elem_type >

std::vector< elem_type > MHASignal::dupvec_chk (std::vector< elem_type > vec, unsigned n)

Duplicate last vector element to match desired size, check for dimension.

bool equal_dim (const mha_wave_t &a, const mha_wave_t &b)

Test for equal dimension of waveform structures.

• bool equal dim (const mha wave t &a, const mhaconfig t &b)

Test for match of waveform dimension with mhaconfig structure.

• bool equal_dim (const mha_spec_t &a, const mha_spec_t &b)

Test for equal dimension of spectrum structures.

bool equal_dim (const mha_spec_t &a, const mhaconfig_t &b)

Test for match of spectrum dimension with mhaconfig structure.

bool equal_dim (const mha_wave_t &a, const mha_spec_t &b)

Test for equal dimension of waveform/spectrum structures.

bool equal_dim (const mha_spec_t &a, const mha_wave_t &b)

Test for equal dimension of waveform/spectrum structures.

void integrate (mha_wave_t &s)

Numeric integration of a signal vector (real values)

void integrate (mha_spec_t &s)

Numeric integration of a signal vector (complex values)

unsigned int size (const mha wave t &s)

Return size of a waveform structure.

unsigned int size (const mha_spec_t &s)

Return size of a spectrum structure.

unsigned int size (const mha_wave_t *s)

Return size of a waveform structure.

unsigned int size (const mha spec t *s)

Return size of a spectrum structure.

void clear (mha_wave_t &s)

Set all values of waveform to zero.

void clear (mha wave t *s)

Set all values of waveform to zero.

void clear (mha spec t &s)

Set all values of spectrum to zero.

void clear (mha_spec_t *s)

Set all values of spectrum to zero.

void assign (mha wave t self, mha real t val)

Set all values of waveform 'self' to 'val'.

void assign (mha_wave_t self, const mha_wave_t &val)

Set all values of waveform 'self' to 'val'.

void assign (mha_spec_t self, const mha_spec_t &val)

Set all values of spectrum 'self' to 'val'.

void timeshift (mha wave t &self, int shift)

Time shift of waveform chunk.

mha_real_t & value (mha_wave_t *s, unsigned int fr, unsigned int ch)

Access an element of a waveform structure.

const mha_real_t & value (const mha_wave_t *s, unsigned int fr, unsigned int ch)

Constant access to an element of a waveform structure.

• mha complex t & value (mha spec t *s, unsigned int fr, unsigned int ch)

Access to an element of a spectrum.

- const **mha_complex_t** & **value** (const **mha_spec_t** *s, unsigned int fr, unsigned int ch)

 Constant access to an element of a spectrum.
- mha_real_t & value (mha_wave_t &s, unsigned int fr, unsigned int ch)

Access to an element of a waveform structure.

const mha_real_t & value (const mha_wave_t &s, unsigned int fr, unsigned int ch)

Constant access to an element of a waveform structure.

mha_complex_t & value (mha_spec_t &s, unsigned int fr, unsigned int ch)

Access to an element of a spectrum.

- const **mha_complex_t** & **value** (const **mha_spec_t** &s, unsigned int fr, unsigned int ch)

 Constant access to an element of a spectrum.
- std::vector< float > std_vector_float (const mha_wave_t &)

Converts a mha_wave_t (p. 462) structure into a std::vector<float> (interleaved order).

• std::vector< std::vector< float >> std_vector_vector_float (const mha_wave_t &)

Converts a **mha_wave_t** (p. 462) structure into a std::vector< std::vector< float> > (outer vector represents channels).

 std::vector< std::vector< mha_complex_t >> std_vector_vector_complex (const mha_spec_t &)

Converts a **mha_spec_t** (p. 432) structure into a std::vector< std::vector< mha_complex_t> > (outer vector represents channels).

mha_wave_t & operator+= (mha_wave_t &, const mha_real_t &)

Addition operator.

mha_wave_t & operator+= (mha_wave_t &, const mha_wave_t &)

Addition operator.

• mha wave t & operator-= (mha wave t &, const mha wave t &)

Subtraction operator.

mha_spec_t & operator-= (mha_spec_t &, const mha_spec_t &)

Subtraction operator.

• mha_wave_t & operator*= (mha_wave_t &, const mha_real_t &)

Element-wise multiplication operator.

• mha wave t & operator*= (mha wave t &, const mha wave t &)

Element-wise multiplication operator.

mha_spec_t & operator*= (mha_spec_t &, const mha_real_t &)

Element-wise multiplication operator.

mha_spec_t & operator*= (mha_spec_t &, const mha_wave_t &)

Element-wise multiplication operator.

mha_spec_t & operator*= (mha_spec_t &, const mha_spec_t &)

Element-wise multiplication operator.

mha_spec_t & operator/= (mha_spec_t &, const mha_spec_t &)

Element-wise division operator.

mha_wave_t & operator/= (mha_wave_t &, const mha_wave_t &)

Element-wise division operator.

• mha_spec_t & operator+= (mha_spec_t &, const mha_spec_t &)

Addition operator.

• mha spec t & operator+= (mha spec t &, const mha real t &)

Addition operator.

• mha wave t & operator = (mha wave t & self, const mha real t & arg)

Exponent operator.

void MHASignal::copy_channel (mha_spec_t &self, const mha_spec_t &src, unsigned sch, unsigned dch)

Copy one channel of a source signal.

• void MHASignal::copy_channel (mha_wave_t &self, const mha_wave_t &src, unsigned src_channel, unsigned dest_channel)

Copy one channel of a source signal.

mha_real_t MHASignal::rmslevel (const mha_spec_t &s, unsigned int channel, unsigned int fftlen)

Return RMS level of a spectrum channel.

mha_real_t MHASignal::colored_intensity (const mha_spec_t &s, unsigned int channel, unsigned int fftlen, mha_real_t sqfreq_response[])

Colored spectrum intensity.

• mha_real_t MHASignal::maxabs (const mha_spec_t &s, unsigned int channel)

Find maximal absolute value.

mha_real_t MHASignal::rmslevel (const mha_wave_t &s, unsigned int channel)

Return RMS level of a waveform channel.

mha_real_t MHASignal::maxabs (const mha_wave_t &s, unsigned int channel)

Find maximal absolute value.

mha_real_t MHASignal::maxabs (const mha_wave_t &s)

Find maximal absolute value.

mha_real_t MHASignal::max (const mha_wave_t &s)

Find maximal value.

• mha real t MHASignal::min (const mha wave t &s)

Find minimal value.

mha_real_t MHASignal::sumsqr_channel (const mha_wave_t &s, unsigned int channel)

Calculate sum of squared values in one channel.

• mha_real_t MHASignal::sumsqr_frame (const mha_wave_t &s, unsigned int frame)

Calculate sum over all channels of squared values.

void conjugate (mha spec t &self)

Replace (!) the value of this **mha_spec_t** (p. 432) with its conjugate.

3.9.1 Detailed Description

The vector and matrix processing toolbox consists of a number of classes defined in the namespace **MHASignal** (p. 114), and many functions and operators for use with the structures **mha**← **_wave_t** (p. 462) and **mha_spec_t** (p. 432).

- 3.9.2 Typedef Documentation
- 3.9.2.1 typedef float mha_real_t

openMHA type for real numbers

This type is expected to be allways the C-type 'float' (IEEE 754 single).

3.9.3 Function Documentation

Return a time interval from a waveform chunk.

A waveform chunk containing a time intervall of a larger waveform chunk is returned. The number of channels remains constant. The data of the output waveform structure points to the data of the input structure, i.e., write access to the output waveform chunk modifies the corresponding entries in the input chunk.

Parameters

s	Waveform structure
k0	Index of first value in output
len	Number of frames in output

Returns

Waveform structure representing the sub-interval.

Return a channel interval from a spectrum.

Parameters

s	Input spectrum
ch_start	Index of first channel in output
nch	Number of channels in output

Returns

Spectrum structure representing the sub-interval.

Apply a function to each element of a **mha_wave_t** (p. 462).

Parameters

s	Pointer to a mha_wave_t (p. 462) structure	
fun	Function to be applied (one argument)	

Conversion from linear scale to dB (no SPL reference)

Parameters

```
x Linear input.
```

Conversion from dB scale to linear (no SPL reference)

Parameters

```
x dB input.
```

Conversion from linear Pascal scale to dB SPL.

Parameters

```
x Linear input.
```

Conversion from squared Pascal scale to dB SPL.

Parameters

X	squared pascal input
eps	minimum squared-pascal value

Conversion from dB SPL to linear Pascal scale.

Parameters

conversion from samples to seconds

Parameters

n	number of samples
srate	sampling rate / Hz

conversion from seconds to samples

Parameters

sec	time in seconds	
srate	sampling rate / Hz	

Returns

number of samples, generally has non-zero fractional part

conversion from fft bin index to frequency

Parameters

bin	index of fft bin, index 0 has dc
fftlen	FFT length
srate	sampling frequency / Hz

Returns

frequency of fft bin / Hz

conversion from frequency to fft bin index

Parameters

freq	frequency / Hz
fftlen	FFT length
srate	sampling frequency / Hz

Returns

0-based index of fft bin, generally has non-zero fractional part

conversion from delay in samples to phase shift

Compute phase shift that needs to be applied to fft spectrum to achieve the desired delay.

Parameters

samples	delay in samples. Positive delay: shift current signal to future.
bin	index of fft bin, index 0 has dc (index 0 and nyqvist bin cannot be delayed)
fftlen	FFT length

Returns

The phase shift in radiant that needs to be applied to fft bin to achieve the desired delay. A positive delay requires a negative phase shift. If required phase shift is >pi or <-pi, then the desired delay cannot be applied in the fft domain with given parameters. Required phase shifts close to pi should not be used. If bin is 0 or nyqvist, returns 0 phase shift.

conversion from phase shift to delay in samples

Compute delay in samples that is achieved by a phase shift.

Parameters

phase_shift	phase shift in radiant
bin	index of fft bin, index 0 has dc (index 0 and nyqvist bin cannot be delayed)
fftlen	FFT length

Returns

The delay in samples achieved by applying the phase shift. A negative phase shift causes a positive delay: shifts current signal to future.

```
3.9.3.15 template < class elem_type > std::vector < elem_type > MHASignal::dupvec ( std::vector < elem_type > vec, unsigned n)
```

Duplicate last vector element to match desired size.

Parameters

vec	Input vector.
n	Target number of elements.

Return values

```
Resized vector.
```

```
3.9.3.16 template < class elem_type > std::vector < elem_type > MHASignal::dupvec_chk ( std::vector < elem_type > vec, unsigned n)
```

Duplicate last vector element to match desired size, check for dimension.

The input dimension can be either 1 or the target length.

Parameters

vec	Input vector.
n	Target number of elements.

Return values

```
Resized vector.
```

```
3.9.3.17 bool equal_dim (

const mha_wave_t & a,

const mha wave t & b ) [inline]
```

Test for equal dimension of waveform structures.

```
3.9.3.18 bool equal_dim (

const mha_wave_t & a,

const mhaconfig_t & b ) [inline]
```

Test for match of waveform dimension with mhaconfig structure.

```
3.9.3.19 bool equal_dim (

const mha_spec_t & a,

const mha spec_t & b) [inline]
```

Test for equal dimension of spectrum structures.

```
3.9.3.20 bool equal_dim (

const mha_spec_t & a,

const mhaconfig_t & b ) [inline]
```

Test for match of spectrum dimension with mhaconfig structure.

```
3.9.3.21 bool equal_dim (

const mha_wave_t & a,

const mha spec t & b ) [inline]
```

Test for equal dimension of waveform/spectrum structures.

Warning

Waveform structures **mha_wave_t** (p. 462) use interleaved data order, while spectrum structures **mha_spec_t** (p. 432) use non-interleaved.

```
3.9.3.22 bool equal_dim (

const mha_spec_t & a,

const mha_wave_t & b ) [inline]
```

Test for equal dimension of waveform/spectrum structures.

Warning

Waveform structures **mha_wave_t** (p. 462) use interleaved data order, while spectrum structures **mha_spec_t** (p. 432) use non-interleaved.

```
3.9.3.23 void integrate (
mha_wave_t & s )
```

Numeric integration of a signal vector (real values)

Parameters

```
s Input signal vector
```

```
3.9.3.24 void integrate (
mha_spec_t & s )
```

Numeric integration of a signal vector (complex values)

Parameters

```
s Input signal vector
```

```
3.9.3.25 unsigned int size (

const mha wave t & s ) [inline]
```

Return size of a waveform structure.

```
3.9.3.26 unsigned int size (
                    const mha_spec_t & s ) [inline]
Return size of a spectrum structure.
3.9.3.27 unsigned int size (
                    const mha_wave_t * s ) [inline]
Return size of a waveform structure.
3.9.3.28 unsigned int size (
                     const mha_spec_t * s ) [inline]
Return size of a spectrum structure.
3.9.3.29 void clear (
                     mha_wave_t & s ) [inline]
Set all values of waveform to zero.
3.9.3.30 void clear (
                     mha_wave_t * s ) [inline]
Set all values of waveform to zero.
3.9.3.31 void clear (
                     mha_spec_t & s ) [inline]
Set all values of spectrum to zero.
3.9.3.32 void clear (
                     mha_spec_t * s ) [inline]
Set all values of spectrum to zero.
3.9.3.33 void assign (
                     mha wave t self,
                     mha real t val ) [inline]
```

Set all values of waveform 'self' to 'val'.

Parameters

self	Waveform to be modified.
val	Value to be assigned to all entries of waveform.

```
3.9.3.34 void assign (

mha_wave_t self,

const mha_wave_t & val )
```

Set all values of waveform 'self' to 'val'.

Parameters

self	Waveform to be modified.
val	Source waveform structure.

```
3.9.3.35 void assign (

mha_spec_t self,

const mha_spec_t & val )
```

Set all values of spectrum 'self' to 'val'.

Parameters

self	Spectrum to be modified.
val	Source spectrum.

```
3.9.3.36 void timeshift (

mha_wave_t & self,

int shift )
```

Time shift of waveform chunk.

Shifted areas are filled with zeros.

Parameters

self	Waveform chunk to be shifted
shift	Shift amount, positive values shift to later times

Access an element of a waveform structure.

Parameters

s	Waveform structure
fr	Frame number
ch	Channel number

Returns

Reference to element

Constant access to an element of a waveform structure.

Parameters

s	Waveform structure
fr	Frame number
ch	Channel number

Returns

Reference to element

Access to an element of a spectrum.

Parameters

s	Spectrum structure
fr	Bin number
ch	Channel number

Returns

Reference to element

Constant access to an element of a spectrum.

Parameters

s	Spectrum structure
fr	Bin number
ch	Channel number

Returns

Reference to element

Access to an element of a waveform structure.

Parameters

s	Waveform structure
fr	Frame number
ch	Channel number

Returns

Reference to element

Constant access to an element of a waveform structure.

Parameters

s	Waveform structure
fr	Frame number
ch	Channel number

Returns

Reference to element

Access to an element of a spectrum.

Parameters

s	Spectrum structure
fr	Bin number
ch	Channel number

Returns

Reference to element

Constant access to an element of a spectrum.

Parameters

s	Spectrum structure
fr	Bin number
ch	Channel number

Returns

Reference to element

Converts a **mha_wave_t** (p. 462) structure into a std::vector<float> (interleaved order).

Warning

This function is not real-time safe. Do not use in signal processing thread.

Converts a **mha_wave_t** (p. 462) structure into a std::vector< std::vector<float> > (outer vector represents channels).

Warning

This function is not real-time safe. Do not use in signal processing thread.

Converts a **mha_spec_t** (p. 432) structure into a std::vector< std::vector<mha_complex_t>> (outer vector represents channels).

Warning

This function is not real-time safe. Do not use in signal processing thread.

Addition operator.

Addition operator.

Subtraction operator.

Subtraction operator.

```
3.9.3.52 mha_wave_t& operator*= (
                    mha_wave_t &,
                    const mha real t & )
Element-wise multiplication operator.
3.9.3.53 mha_wave_t& operator*= (
                    mha wave t&,
                    const mha wave t & )
Element-wise multiplication operator.
3.9.3.54 mha spec t& operator*= (
                    mha spec t&,
                    const mha real t & )
Element-wise multiplication operator.
3.9.3.55 mha_spec_t& operator*= (
                    mha_spec_t &,
                    const mha_wave_t & )
Element-wise multiplication operator.
3.9.3.56 mha_spec_t& operator*= (
                    mha_spec_t &,
                    const mha spec t & )
Element-wise multiplication operator.
3.9.3.57 mha_spec_t& operator/= (
                    mha_spec_t &,
                    const mha_spec_t & )
Element-wise division operator.
3.9.3.58 mha_wave_t& operator/= (
                    mha_wave_t &,
                    const mha_wave_t & )
Element-wise division operator.
3.9.3.59 mha spec t& operator+= (
                    mha_spec_t &,
                    const mha_spec_t & )
```

Addition operator.

Addition operator.

Exponent operator.

Warning

This overwrites the xor operator!

Copy one channel of a source signal.

Parameters

self	Destination.
src	Source
sch	Source channel number
dch	Destination channel number

Copy one channel of a source signal.

Parameters

self	Destination.
src	Source
src_channel	Source channel number
dest channel	Destination channel number

Return RMS level of a spectrum channel.

Parameters

S	Input spectrum
channel	Channel number to be tested
fftlen	FFT length (to correctly count the level of the Nyquist bin)

Returns

RMS level in Pa

Colored spectrum intensity.

computes the squared sum of the spectrum after filtering with the frequency response

Parameters

S	Input spectrum
channel	Channel number to be tested
fftlen	FFT length (to correctly count the level of the Nyquist bin)
sqfreq_response	A squared weighting factor for every fft bin.

Returns

sum of squares. Root of this is the colored level in Pa

Find maximal absolute value.

Parameters

S	Input signal
channel	Channel to be tested

Returns

maximum absolute value

Return RMS level of a waveform channel.

Parameters

s	Input waveform signal
channel	Channel number to be tested

Returns

RMS level in Pa

Find maximal absolute value.

Parameters

s Input signal	
channel	Channel to be tested

Returns

maximum absolute value

Find maximal absolute value.

Parameters

```
s Input signal
```

Returns

maximum absolute value

```
3.9.3.70 mha_real_t MHASignal::max (
const mha_wave_t & s )
```

Find maximal value.

Parameters

```
s Input signal
```

Returns

maximum absolute value

```
3.9.3.71 mha_real_t MHASignal::min (
const mha_wave_t & s )
```

Find minimal value.

Parameters

```
s Input signal
```

Returns

maximum absolute value

Calculate sum of squared values in one channel.

s	Input signal
channel	Channel

Returns

$$\sum x^2$$

Calculate sum over all channels of squared values.

Parameters

s	s Input signal	
frame	Frame number	


Returns

$$\sum x^2$$

Replace (!) the value of this **mha_spec_t** (p. 432) with its conjugate.

3.10 Complex arithmetics in the openMHA

Collaboration diagram for Complex arithmetics in the openMHA:

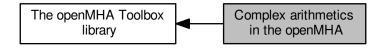

Classes

struct mha_complex_t

Type for complex floating point values.

Functions

- mha_complex_t & set (mha_complex_t &self, mha_real_t real, mha_real_t imag=0)

 Assign real and imaginary parts to a mha_complex_t (p. 400) variable.
- mha_complex_t mha_complex (mha_real_t real, mha_real_t imag=0)
 Create a new mha_complex_t (p. 400) with specified real and imaginary parts.
- mha_complex_t & set (mha_complex_t &self, const std::complex < mha_real_t > &stdcomplex)

Assign a **mha_complex_t** (p. 400) variable from a std::complex.

- std::complex < mha_real_t > stdcomplex (const mha_complex_t &self)
 Create a std::complex from mha complex t (p. 400).
- mha_complex_t & expi (mha_complex_t &self, mha_real_t angle)

 replaces the value of the given mha_complex_t (p. 400) with exp(i*b).
- double angle (const mha complex t &self)

Computes the angle of a complex number in the complex plane.

- mha_complex_t & operator+= (mha_complex_t &self, const mha_complex_t &other)

 Addition of two complex numbers, overwriting the first.
- mha_complex_t operator+ (const mha_complex_t &self, const mha_complex_
 t &other)

Addition of two complex numbers, result is a temporary object.

- mha_complex_t & operator+= (mha_complex_t &self, mha_real_t other_real)

 Addition of a complex and a real number, overwriting the complex.
- mha_complex_t operator+ (const mha_complex_t &self, mha_real_t other_real)

 Addition of a complex and a real number, result is a temporary object.
- mha_complex_t & operator-= (mha_complex_t &self, const mha_complex_t &other)

 Subtraction of two complex numbers, overwriting the first.

mha_complex_t operator- (const mha_complex_t &self, const mha_complex_
 t &other)

Subtraction of two complex numbers, result is a temporary object.

mha_complex_t & operator-= (mha_complex_t &self, mha_real_t other_real)

Subtraction of a complex and a real number, overwriting the complex.

• mha_complex_t operator- (const mha_complex_t &self, mha_real_t other_real)

Subtraction of a complex and a real number, result is a temporary object.

- mha_complex_t & operator*= (mha_complex_t &self, const mha_complex_t &other)

 Multiplication of two complex numbers, overwriting the first.
- mha_complex_t operator* (const mha_complex_t &self, const mha_complex_
 t &other)

Multiplication of two complex numbers, result is a temporary object.

• mha_complex_t & operator*= (mha_complex_t &self, mha_real_t other_real)

Multiplication of a complex and a real number, overwriting the complex.

- mha_complex_t & expi (mha_complex_t &self, mha_real_t angle, mha_real_t factor)
 replaces (!) the value of the given mha_complex_t (p. 400) with a * exp(i*b)
- mha_complex_t operator* (const mha_complex_t &self, mha_real_t other_real)

 Multiplication of a complex and a real number, result is a temporary object.
- mha_real_t abs2 (const mha_complex_t &self)

Compute the square of the absolute value of a complex value.

mha_real_t abs (const mha_complex_t &self)

Compute the absolute value of a complex value.

mha_complex_t & operator/= (mha_complex_t &self, mha_real_t other_real)

Division of a complex and a real number, overwriting the complex.

• mha_complex_t operator/ (const mha_complex_t &self, mha_real_t other_real)

Division of a complex and a real number, result is a temporary object.

 mha_complex_t & safe_div (mha_complex_t &self, const mha_complex_t &other, mha_real_t eps, mha_real_t eps2)

Safe division of two complex numbers, overwriting the first.

- mha_complex_t & operator/= (mha_complex_t &self, const mha_complex_t &other)

 Division of two complex numbers, overwriting the first.
- mha_complex_t operator/ (const mha_complex_t &self, const mha_complex_← t &other)

Division of two complex numbers, result is a temporary object.

• mha complex t operator- (const mha complex t &self)

Unary minus on a complex results in a negative temporary object.

• bool operator== (const mha_complex_t &x, const mha_complex_t &y)

Compare two complex numbers for equality.

• bool operator!= (const mha_complex_t &x, const mha_complex_t &y)

Compare two complex numbers for inequality.

void conjugate (mha_complex_t &self)

Replace (!) the value of this **mha** complex t (p. 400) with its conjugate.

mha_complex_t _conjugate (const mha_complex_t &self)

Compute the cojugate of this complex value.

void reciprocal (mha_complex_t &self)

Replace the value of this complex with its reciprocal.

mha_complex_t _reciprocal (const mha_complex_t &self)

compute the reciprocal of this complex value.

void normalize (mha_complex_t &self)

Divide a complex by its absolute value, thereby normalizing it (projecting onto the unit circle).

void normalize (mha_complex_t &self, mha_real_t margin)

Divide a complex by its absolute value, thereby normalizing it (projecting onto the unit circle), with a safety margin.

bool almost (const mha_complex_t &self, const mha_complex_t &other, mha_real_t times_epsilon=1e2)

Compare two complex numbers for equality except for a small relative error.

bool operator< (const mha_complex_t &x, const mha_complex_t &y)

Compares the absolute values of two complex numbers.

3.10.1 Detailed Description

3.10.2 Function Documentation

Assign real and imaginary parts to a **mha_complex_t** (p. 400) variable.

Parameters

self	The mha_complex_t (p. 400) variable whose value is about to change.
real	The new real part.
imag	The new imaginary part.

Returns

A reference to the changed variable.

Create a new **mha** complex t (p. 400) with specified real and imaginary parts.

real	The real part.
imag	The imaginary part.

Returns

The new value.

Assign a **mha_complex_t** (p. 400) variable from a std::complex.

Parameters

self	The mha_complex_t (p. 400) variable whose value is about to change.
stdcomplex	The new complex value.

Returns

A reference to the changed variable.

Create a std::complex from **mha_complex_t** (p. 400).

replaces the value of the given **mha_complex_t** (p. 400) with exp(i*b).

Parameters

self	The mha_complex_t (p. 400) variable whose value is about to change.
angle	The angle in the complex plane [rad].

Returns

A reference to the changed variable.

```
3.10.2.6 double angle ( const mha_complex_t & self ) [inline]
```

Computes the angle of a complex number in the complex plane.

Parameters

self The complex number whose angle is needed.

Returns

The angle of a complex number in the complex plane.

Addition of two complex numbers, overwriting the first.

Addition of two complex numbers, result is a temporary object.

Addition of a complex and a real number, overwriting the complex.

Addition of a complex and a real number, result is a temporary object.

Subtraction of two complex numbers, overwriting the first.

Subtraction of two complex numbers, result is a temporary object.

Subtraction of a complex and a real number, overwriting the complex.

```
3.10.2.14 mha_complex_t operator-(
const mha_complex_t & self,
mha_real_t other_real) [inline]
```

Subtraction of a complex and a real number, result is a temporary object.

Multiplication of two complex numbers, overwriting the first.

Multiplication of two complex numbers, result is a temporary object.

Multiplication of a complex and a real number, overwriting the complex.

replaces (!) the value of the given **mha_complex_t** (p. 400) with a * exp(i*b)

self	The mha_complex_t (p. 400) variable whose value is about to change.
angle	The imaginary exponent.
factor	The absolute value of the result.

Returns

A reference to the changed variable.

```
3.10.2.19 mha_complex_t operator* (

const mha_complex_t & self,

mha_real_t other_real ) [inline]
```

Multiplication of a complex and a real number, result is a temporary object.

```
3.10.2.20 mha_real_t abs2 (
const mha_complex_t & self ) [inline]
```

Compute the square of the absolute value of a complex value.

Returns

The square of the absolute value of self.

```
3.10.2.21 mha_real_t abs (

const mha complex t & self ) [inline]
```

Compute the absolute value of a complex value.

Returns

The absolute value of self.

Division of a complex and a real number, overwriting the complex.

```
3.10.2.23 mha_complex_t operator/ (

const mha_complex_t & self,

mha real t other real ) [inline]
```

Division of a complex and a real number, result is a temporary object.

Safe division of two complex numbers, overwriting the first.

If abs(divisor) < eps, then divisor is replaced by eps. eps2 = eps*eps.

```
3.10.2.25 mha_complex_t& operator/= (
                     mha_complex_t & self,
                     const mha complex t & other ) [inline]
Division of two complex numbers, overwriting the first.
3.10.2.26 mha_complex_t operator/ (
                     const mha complex t & self,
                     const mha complex t & other ) [inline]
Division of two complex numbers, result is a temporary object.
3.10.2.27 mha_complex_t operator- (
                     const mha_complex_t & self ) [inline]
Unary minus on a complex results in a negative temporary object.
3.10.2.28 bool operator== (
                     const mha_complex_t & x,
                     const mha_complex_t & y ) [inline]
Compare two complex numbers for equality.
3.10.2.29 bool operator!= (
                     const mha_complex_t & x,
                     const mha_complex_t & y ) [inline]
Compare two complex numbers for inequality.
3.10.2.30 void conjugate (
                     mha_complex_t & self ) [inline]
Replace (!) the value of this mha_complex_t (p. 400) with its conjugate.
3.10.2.31 mha_complex_t _conjugate (
                     const mha_complex_t & self ) [inline]
```

Returns

A temporary object holding the conjugate value.

Compute the cojugate of this complex value.

Replace the value of this complex with its reciprocal.

compute the reciprocal of this complex value.

Returns

A temporary object holding the reciprocal value.

```
3.10.2.34 void normalize (

mha_complex_t & self ) [inline]
```

Divide a complex by its absolute value, thereby normalizing it (projecting onto the unit circle).

```
3.10.2.35 void normalize (

mha_complex_t & self,

mha_real_t margin ) [inline]
```

Divide a complex by its absolute value, thereby normalizing it (projecting onto the unit circle), with a safety margin.

```
3.10.2.36 bool almost (

const mha_complex_t & self,

const mha_complex_t & other,

mha_real_t times_epsilon = 1e2 ) [inline]
```

Compare two complex numbers for equality except for a small relative error.

Parameters

self	The first complex number.
other	The second complex number.
times_epsilon	Permitted relative error is this number multiplied with the machine accuracy for this Floating point format (std::numeric_limits <mha_real_t>::epsilon)</mha_real_t>


Returns

true if the relative difference is below times_epsilon * std::numeric_limits<mha_real_t> \leftarrow ::epsilon

Compares the absolute values of two complex numbers.

3.11 Fast Fourier Transform functions

Collaboration diagram for Fast Fourier Transform functions:

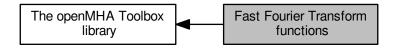

Typedefs

typedef void * mha_fft_t
 Handle for an FFT object.

Functions

mha_fft_t mha_fft_new (unsigned int n)

Create a new FFT handle.

void mha_fft_free (mha_fft_t h)

Destroy an FFT handle.

- void mha_fft_wave2spec (mha_fft_t h, const mha_wave_t *in, mha_spec_t *out)

 Tranform waveform segment into spectrum.
- void mha_fft_wave2spec (mha_fft_t h, const mha_wave_t *in, mha_spec_t *out, bool swaps)

Tranform waveform segment into spectrum.

- void mha_fft_spec2wave (mha_fft_t h, const mha_spec_t *in, mha_wave_t *out)

 Tranform spectrum into waveform segment.
- void mha_fft_spec2wave (mha_fft_t h, const mha_spec_t *in, mha_wave_t *out, unsigned int offset)

Tranform spectrum into waveform segment.

- void mha_fft_forward (mha_fft_t h, mha_spec_t *sIn, mha_spec_t *sOut)

 Complex to complex FFT (forward).
- void mha_fft_backward (mha_fft_t h, mha_spec_t *sIn, mha_spec_t *sOut)

 Complex to complex FFT (backward).
- void mha_fft_forward_scale (mha_fft_t h, mha_spec_t *sIn, mha_spec_t *sOut)

 Complex to complex FFT (forward).
- void mha_fft_backward_scale (mha_fft_t h, mha_spec_t *sIn, mha_spec_t *sOut)

 Complex to complex FFT (backward).
- void mha_fft_wave2spec_scale (mha_fft_t h, const mha_wave_t *in, mha_spec_← t *out)

Tranform waveform segment into spectrum.

void mha_fft_spec2wave_scale (mha_fft_t h, const mha_spec_t *in, mha_wave_←
t *out)

Tranform spectrum into waveform segment.

- 3.11.1 Detailed Description
- 3.11.2 Typedef Documentation
- 3.11.2.1 typedef void* mha_fft_t

Handle for an FFT object.

This FFT object is used by the functions mha_fft_wave2spec and mha_fft_spec2wave. The F← FT back-end is the FFTW library. The back-end is completely hidden, including external header files or linking external libraries is not required.

3.11.3 Function Documentation

Create a new FFT handle.

Parameters

```
n FFT length.
```

Create a new FFT handle.

Parameters

```
n FFT length
```

Return values

Destroy an FFT handle.

Parameters

```
h Handle to be destroyed.
```

Destroy an FFT handle.

Parameters

_		
ĺ	h	FFT object to be removed

Tranform waveform segment into spectrum.

Parameters

h	FFT handle.
in	Input waveform segment.
out	Output spectrum.

Tranform waveform segment into spectrum.

Parameters

h FFT object handlein pointer to input waveform signal		FFT object handle
		pointer to input waveform signal
	out	pointer to output spectrum signal (has to be allocated)

Tranform waveform segment into spectrum.

Like normal wave2spec, but swaps wave buffer halves before transforming if the swaps parameter is true.

Warning: These openMHA FFTs adopt a nonstandard scaling scheme in which the forward transform scales by 1/N and the backward does not scale. We would recommend using the '_scale' methods instead.

h	FFT handle.	
in	Input waveform segment.	
out	Output spectrum.	
swaps	waps Function swaps the first and second half of the waveform buffer before the FFT transform when this parameter is set to true.	

Tranform spectrum into waveform segment.

Warning: These openMHA FFTs adopt a nonstandard scaling scheme in which the forward transform scales by 1/N and the backward does not scale. We would recommend using the 'scale' methods instead.

Parameters

h	FFT handle.	
in	Input spectrum.	
out	Output waveform segment.	

Tranform spectrum into waveform segment.

Parameters

h	FFT object handle	
in	pointer to input spectrum	
out	pointer to output waveform signal (has to be allocated)	

Tranform spectrum into waveform segment.

out may have fewer number of frames than needed for a complete iFFT. Only as many frames are written into out as fit, starting with offset offset of the complete iFFT.

Warning: These openMHA FFTs adopt a nonstandard scaling scheme in which the forward transform scales by 1/N and the backward does not scale. We would recommend using the 'scale' methods instead.

h	FFT handle.
in	Input spectrum.
out	Output waveform segment.
offset	Offset into iFFT wave buffer

Tranform spectrum into waveform segment.

Only part of the iFFT is tranferred into the out buffer.

Out may have fewer number of freames than needed for a complete iFFT. Only as many frames are written into out as fit, starting with offset offset of the complete iFFT.

Parameters

h	FFT object handle	
in	pointer to input spectrum	
out	pointer to output waveform signal (has to be allocated)	
offset	Offset into complete iFFT buffer.	

Complex to complex FFT (forward).

sIn and sOut need to have nfft bins (please note that **mha_spec_t** (p. 432) typically has nfft/2+1 bins for half-complex representation).

Warning: These openMHA FFTs adopt a nonstandard scaling scheme in which the forward transform scales by 1/N and the backward does not scale. We would recommend using the 'scale' methods instead.

Parameters

h	FFT handle.
sIn	Input spectrum.
sOut	Output spectrum.

Complex to complex FFT (backward).

sln and sOut need to have nfft bins (please note that **mha_spec_t** (p. 432) typically has nfft/2+1 bins for half-complex representation).

Warning: These openMHA FFTs adopt a nonstandard scaling scheme in which the forward transform scales by 1/N and the backward does not scale. We would recommend using the '_scale' methods instead.

Parameters

h	FFT handle.
sIn	Input spectrum.
sOut	Output spectrum.

Complex to complex FFT (forward).

sIn and sOut need to have nfft bins (please note that **mha_spec_t** (p. 432) typically has nfft/2+1 bins for half-complex representation).

The _scale methods use standard DFT scaling: There is no scaling in the forward transformation, and 1/N scaling for the backward.

Parameters

h	FFT handle.
sIn	Input spectrum.
sOut	Output spectrum.

Complex to complex FFT (backward).

sIn and sOut need to have nfft bins (please note that **mha_spec_t** (p. 432) typically has nfft/2+1 bins for half-complex representation).

The _scale methods use standard DFT scaling: There is no scaling in the forward transformation, and 1/N scaling for the backward.

h	FFT handle.
sIn	Input spectrum.
sOut	Output spectrum.

Tranform waveform segment into spectrum.

The _scale methods use standard DFT scaling: There is no scaling in the forward transformation, and 1/N scaling for the backward.

Parameters

h	FFT handle.
in	Input waveform segment.
out	Output spectrum.

Tranform spectrum into waveform segment.

The _scale methods use standard DFT scaling: There is no scaling in the forward transformation, and 1/N scaling for the backward.

h	FFT handle.
in	Input spectrum.
out	Output waveform segment.

4 Namespace Documentation

4.1 ac2lsl Namespace Reference

All types for the **ac2IsI** (p. 77) plugins live in this namespace.

Classes

class ac2lsl_t

Plugin class of ac2lsl (p. 77).

· class cfg_t

Runtime configuration class of the ac2lsl (p. 77) plugin.

class save_var_base_t

Interface for ac to Isl bridge variable.

class save_var_t

Implementation for all ac to Isl bridges except complex types.

class save_var_t< mha_complex_t >

Template specialization of the ac2lsl (p. 77) bridge to take care of complex numbers.

4.1.1 Detailed Description

All types for the **ac2IsI** (p. 77) plugins live in this namespace.

4.2 acmon Namespace Reference

Namespace for displaying ac variables as parser monitors.

Classes

class ac_monitor_t

A class for converting AC variables to Parser monitors of correct type.

class acmon_t

4.2.1 Detailed Description

Namespace for displaying ac variables as parser monitors.

4.3 acsave Namespace Reference

Classes

- class acsave_t
- class cfg t
- struct mat4head t
- class save_var_t

4.4 addsndfile Namespace Reference

Classes

- · class addsndfile if t
- · class level_adapt_t
- class resampled_soundfile_t

Reads sound from file and resamples it if necessary and wanted.

- class sndfile t
- class waveform_proxy_t

Class helps to specify which instance of MHASignal_waveform_t parent instance is meant in **resampled_soundfile_t** (p. 177).

Typedefs

- typedef MHAPlugin::config_t< level_adapt_t > level_adaptor
- typedef MHAPlugin::plugin_t< sndfile_t > wave_reader

Enumerations

Functions

- static unsigned resampled_num_frames (unsigned num_source_frames, float source
 —rate, float target_rate, addsndfile_resampling_mode_t resampling_mode)
- 4.4.1 Typedef Documentation
- 4.4.1.1 typedef MHAPlugin::config_t<level_adapt_t> addsndfile::level_adaptor
- 4.4.1.2 typedef MHAPlugin::plugin_t<sndfile_t> addsndfile::wave_reader
- 4.4.2 Enumeration Type Documentation
- 4.4.2.1 enum addsndfile::addsndfile_resampling_mode_t

Specifies the resampling mode in **resampled_soundfile_t** (p. 177).

Enumerator

DONT_RESAMPLE_PERMISSIVE

DONT_RESAMPLE_STRICT Do not resample, if the sample rate of the MHA differs from the sample rate of the sound file, raise an error.

DO_RESAMPLE Resample.

4.4.3 Function Documentation

4.5 ADM Namespace Reference

Classes

class ADM

Adaptive differential microphone, working for speech frequency range.

class Delay

A delay-line class which can also do subsample-delays for a limited frequency range below fs/4.

• class Linearphase_FIR

An efficient linear-phase fir filter implementation.

Functions

• static double **subsampledelay_coeff** (double samples, double f_design, double fs=1.0) compute IIR coefficient for subsample delay

Variables

- const double **PI** = 3.14159265358979312
- const double **C** = 340
- const double DELAY_FREQ = 2000
- const double **START_BETA** = 0.5

4.5.1 Function Documentation

compute IIR coefficient for subsample delay

samples	Constraint: 0.0 <= samples < 1.0; Amount of sub-sample delay	
	design frequency (subsample delay is accurate for this frequency)	
© 2005-2018 Hör Tach group Haledenburg		

Returns

IIR coefficient for subsample delay

4.5.2 Variable Documentation

- 4.5.2.1 const double ADM::PI = 3.14159265358979312
- 4.5.2.2 const double ADM::C = 340
- 4.5.2.3 const double ADM::DELAY FREQ = 2000
- 4.5.2.4 const double ADM::START_BETA = 0.5

4.6 AuditoryProfile Namespace Reference

Namespace for classes and functions around the auditory profile (e.g., audiogram handling)

Classes

· class fmap t

A class to store frequency dependent data (e.g., HTL and UCL).

class parser_t

Class to make the auditory profile accessible through the parser interface.

class profile_t

The Auditory Profile class.

4.6.1 Detailed Description

Namespace for classes and functions around the auditory profile (e.g., audiogram handling)

The auditory profile as defined by HearCom or BMBF Modellbasierte Hoergeraete is stored in the class **AuditoryProfile::profile_t** (p. 212). Until a complete definition is available, only the currently needed elements are implemented.

4.7 coherence Namespace Reference

Classes

- · class cohflt if t
- · class cohflt t
- class vars t

Functions

 void getcipd (mha_complex_t &c, mha_real_t &a, const mha_complex_t &xl, const mha_complex_t &xr)

4.7.1 Function Documentation

```
4.7.1.1 void coherence::getcipd (

mha_complex_t & c,

mha_real_t & a,

const mha_complex_t & xl,

const mha_complex_t & xr ) [inline]
```

4.8 dc Namespace Reference

Classes

- · class dc_if_t
- class dc t
- class dc_vars_t
- class dc_vars_validator_t
- · class wb inhib cfg t
- class wideband_inhib_vars_t

Functions

unsigned int get_audiochannels (unsigned int totalchannels, std::string acname, algo
 _comm_t ac)

4.8.1 Function Documentation

4.9 dc_simple Namespace Reference

Classes

- · class dc if t
- class dc_t
- class dc_vars_t
- class dc_vars_validator_t
- class level_smoother_t

Typedefs

- typedef MHAPlugin::plugin_t< dc_t > DC
- typedef MHAPlugin::config_t< level_smoother_t > LEVEL

Functions

- void **test_fail** (const std::vector< float > &v, unsigned int s, const std::string &name)
- std::vector< float > force_resize (const std::vector< float > &v, unsigned int s, const std::string &name)
- mha_real_t not_zero (mha_real_t x, const std::string &comment="")
- 4.9.1 Typedef Documentation
- 4.9.1.1 typedef MHAPlugin::plugin_t<dc_t> dc_simple::DC
- 4.9.1.2 typedef MHAPlugin::config_t<level_smoother_t> dc_simple::LEVEL
- 4.9.2 Function Documentation
- 4.9.2.1 void dc_simple::test_fail (const std::vector< float > & v, unsigned int s, const std::string & name)
- 4.9.2.2 std::vector<float> dc_simple::force_resize (const std::vector< float > & v, unsigned int s, const std::string & name)
- 4.10 delay Namespace Reference

Classes

- class interface_t
- 4.11 delaysum Namespace Reference

This namespace contains the delaysum plugin.

Classes

• class delaysum_if_t

Interface class for the delaysum plugin.

class delaysum_t

Runtime configuration of the delaysum plugin.

4.11.1 Detailed Description

This namespace contains the delaysum plugin.

4.12 DynComp Namespace Reference

dynamic compression related classes and functions

Classes

class dc_afterburn_rt_t

Real-time class for after burn effect.

class dc_afterburn_t

Afterburn class, to be defined as a member of compressors.

class dc_afterburn_vars_t

Variables for dc_afterburn_t (p. 280) class.

class gaintable t

Gain table class.

Functions

mha_real_t interp1 (const std::vector< mha_real_t > &vX, const std::vector< mha_←
real_t > &vY, mha_real_t X)

One-dimensional linear interpolation.

mha_real_t interp2 (const std::vector< mha_real_t > &vX, const std::vector< mha←
 _real_t > &vY, const std::vector< std::vector< mha_real_t >> &mZ, mha_real_t X,
 mha_real_t Y)

Linear interpolation in a two-dimensional field.

4.12.1 Detailed Description

dynamic compression related classes and functions

4.12.2 Function Documentation

```
4.12.2.1 mha_real_t DynComp::interp1 ( const std::vector< mha_real_t > & vX, const std::vector< mha_real_t > & vY, mha_real_t X)
```

One-dimensional linear interpolation.

Parameters

νX	Vector with input samples.	
νY	Vector with values at input samples.	
Χ	Input value to be interpolated.	

Return values

Interpolated	value $Y(X)$ at position X .
--------------	--------------------------------

```
4.12.2.2 mha_real_t DynComp::interp2 (  const \ std::vector < mha\_real\_t > \& \ vX, \\ const \ std::vector < mha\_real\_t > \& \ vY, \\ const \ std::vector < std::vector < mha\_real\_t > & \ mZ, \\ mha\_real\_t \ X, \\ mha\_real\_t \ Y \ )
```

Linear interpolation in a two-dimensional field.

Parameters

νX	Vector with input samples, first dimension.	
νY	Vector with input samples, second dimension.	
mΖ	Field with values at input samples.	
X	First dimension of input value to be interpolated.	
Y	Second dimension of input value to be interpolated.	

Return values

```
Interpolated value Z(X,Y) at position X,Y.
```

4.13 fader_wave Namespace Reference

Classes

- class fader_wave_if_t
- class level_adapt_t

Typedefs

typedef MHAPlugin::plugin_t< level_adapt_t > level_adaptor

4.13.1 Typedef Documentation

4.13.1.1 typedef MHAPlugin::plugin_t<level_adapt_t> fader_wave::level_adaptor

4.14 fftfbpow Namespace Reference

Namespace for the fftfbpow plugin.

Classes

class fftfbpow_interface_t
 Interface class for fftfbpow plugin.

class fftfbpow_t

Run time configuration for the fftfbpow plugin.

4.14.1 Detailed Description

Namespace for the fftfbpow plugin.

4.15 fftfilterbank Namespace Reference

Classes

- class fftfb_interface_t
- class fftfb_plug_t

4.16 gain Namespace Reference

Classes

- class gain_if_t
- class scaler t

4.17 matrixmixer Namespace Reference

Classes

- class cfg_t
- class matmix_t

4.18 MHA_AC Namespace Reference

Functions and classes for Algorithm Communication (AC) support.

Classes

- class ac2matrix_helper_t
- class ac2matrix t

Copy AC variable to a matrix.

class acspace2matrix t

Copy all or a subset of all numeric AC variables into an array of matrixes.

· class double t

Insert a double precision floating point variable into the AC space.

class float t

Insert a float point variable into the AC space.

• class int t

Insert a integer variable into the AC space.

class spectrum_t

Insert a MHASignal::spectrum_t (p. 766) class into the AC space.

- · class stat t
- · class waveform t

Insert a MHASignal::waveform_t (p. 778) class into the AC space.

Functions

- mha_spec_t get_var_spectrum (algo_comm_t ac, const std::string &name)

 Convert an AC variable into a spectrum.
- mha_wave_t get_var_waveform (algo_comm_t ac, const std::string &name)
 Convert an AC variable into a waveform.
- int **get_var_int** (**algo_comm_t** ac, const std::string &name)

Return value of an integer scalar AC variable.

float get_var_float (algo_comm_t ac, const std::string &name)

Return value of an floating point scalar AC variable.

std::vector< float > get_var_vfloat (algo_comm_t ac, const std::string &name)
 Return value of an floating point vector AC variable as standard vector of floats.

4.18.1 Detailed Description

Functions and classes for Algorithm Communication (AC) support.

4.19 mha_error_helpers Namespace Reference

Functions

- unsigned digits (unsigned n)
 Compute number of decimal digits required to represent an unsigned integer.
- unsigned **snprintf_required_length** (const char *formatstring,...)

 snprintf_required_length Compute the number of bytes (excluding the terminating nul) required to store the result of an snprintf.

4.19.1 Function Documentation

```
4.19.1.1 unsigned mha_error_helpers::digits ( unsigned n )
```

Compute number of decimal digits required to represent an unsigned integer.

Parameters

n The unsigned integer that we want to know the number of required decimal digits for. return The number of decimal digits in n.

```
4.19.1.2 unsigned mha_error_helpers::snprintf_required_length ( const char * formatstring, ... )
```

snprintf_required_length Compute the number of bytes (excluding the terminating nul) required to store the result of an snprintf.

Parameters

۱	(t - t	The format string with standard printf formatstring
۱	tormatstring	The format string with standard brintt formatstring
- 1	ioimatetimg	The format caming with clarical a printe formationing

Returns

the number of bytes required by printf without the terminating nul

4.20 MHA_TCP Namespace Reference

A Namespace for TCP helper classes.

Classes

class Async_Notify

Portable Multiplexable cross-thread notification.

class Client

A portable class for a tcp client connections.

class Connection

Connection (p. 437) handles Communication between client and server, is used on both sides.

class Event_Watcher

OS-independent event watcher, uses select on Unix and WaitForMultipleObjects on Windows.

- struct OS EVENT TYPE
- class Server
- class sock_init_t
- class Sockaccept Event
- class Sockread Event

Watch socket for incoming data.

- class Sockwrite_Event
- · class Thread

A very simple class for portable threads.

- class Timeout_Event
- · class Timeout Watcher

OS-independent event watcher with internal fixed-end-time timeout.

class Wakeup_Event

A base class for asynchronous wakeup events.

Typedefs

typedef int SOCKET

Functions

std::string STRERROR (int err)

Portable conversion from error number to error string.

std::string HSTRERROR (int err)

Portable conversion from hostname error number to error string.

int **N_ERRNO** ()

Portable access to last network error number.

• int **H_ERRNO** ()

Portable access to last hostname error number.

int **G_ERRNO** ()

Portable access to last non-network error number.

• double dtime ()

Time access function for system's high resolution time, retrieve current time as double.

• double **dtime** (const struct timeval &tv)

Time access function for unix' high resolution time, converts struct timeval to double.

struct timeval stime (double d)

Time access function for unix' high resolution time, converts time from double to struct timeval.

Variables

```
    class MHA_TCP::sock_init_t sock_initializer
```

```
4.20.1 Detailed Description
```

A Namespace for TCP helper classes.

```
4.20.2 Typedef Documentation
```

```
4.20.2.1 typedef int MHA_TCP::SOCKET
```

4.20.3 Function Documentation

```
4.20.3.1 std::string MHA_TCP::STRERROR ( int err )
```

Portable conversion from error number to error string.

```
4.20.3.2 std::string MHA_TCP::HSTRERROR ( int err )
```

Portable conversion from hostname error number to error string.

```
4.20.3.3 int MHA_TCP::N_ERRNO ( )
```

Portable access to last network error number.

```
4.20.3.4 int MHA_TCP::H_ERRNO ( )
```

Portable access to last hostname error number.

```
4.20.3.5 int MHA_TCP::G_ERRNO ( )
```

Portable access to last non-network error number.

```
4.20.3.6 double MHA_TCP::dtime ( )
```

Time access function for system's high resolution time, retrieve current time as double.

```
4.20.3.7 double MHA_TCP::dtime ( const struct timeval & tv )
```

Time access function for unix' high resolution time, converts struct timeval to double.

4.20.3.8 struct timeval MHA_TCP::stime (double *d*)

Time access function for unix' high resolution time, converts time from double to struct timeval.

- 4.20.4 Variable Documentation
- 4.20.4.1 class MHA_TCP::sock_init_t MHA_TCP::sock_initializer
- 4.21 mhachain Namespace Reference

Classes

- class chain base t
- class mhachain_t
- · class plugs_t
- 4.22 MHAEvents Namespace Reference

Collection of event handling classes.

Classes

- class connector_base_t
- class connector_t
- · class emitter t

Class for emitting openMHA events.

class patchbay_t

Patchbay which connects any event emitter with any member function of the parameter class.

4.22.1 Detailed Description

Collection of event handling classes.

4.23 MHAFilter Namespace Reference

Namespace for IIR and FIR filter classes.

Classes

- class adapt_filter_param_t
- class adapt_filter_state_t
- class adapt_filter_t

Adaptive filter.

class blockprocessing_polyphase_resampling_t

A class that does polyphase resampling and takes into account block processing.

· class complex bandpass t

Complex bandpass filter.

class diff_t

Differentiator class (non-normalized)

class fftfilter_t

FFT based FIR filter implementation.

class fftfilterbank t

FFT based FIR filterbank implementation.

· class filter t

Generic IIR filter class.

class gamma_flt_t

Class for gammatone filter.

- class iir_filter_state_t
- class iir_filter_t

IIR filter class wrapper for integration into parser structure.

class iir_ord1_real_t

First order recursive filter.

class o1_ar_filter_t

First order attack-release lowpass filter.

class o1flt_lowpass_t

First order low pass filter.

class o1flt_maxtrack_t

First order maximum tracker.

class o1flt_mintrack_t

First order minimum tracker.

class partitioned_convolution_t

A filter class for partitioned convolution.

class polyphase_resampling_t

A class that performs polyphase resampling.

class resampling_filter_t

Hann shaped low pass filter for resampling.

class smoothspec t

Smooth spectral gains, create a windowed impulse response.

- class thirdoctave_analyzer_t
- struct transfer_function_t

a structure containing a source channel number, a target channel number, and an impulse response.

• struct transfer_matrix_t

A sparse matrix of transfer function partitionss.

Functions

- void make_friendly_number (mha_real_t &x)
- void make_friendly_number (mha_complex_t &x)
- void make_friendly_number (double &x)
- void o1_lp_coeffs (const mha_real_t tau, const mha_real_t fs, mha_real_t &c1, mha
 _real_t &c2)

Set first order filter coefficients from time constant and sampling rate.

- void **butter_stop_ord1** (double *A, double *B, double f1, double f2, double fs) Setup a first order butterworth band stop filter.
- MHASignal::waveform_t * spec2fir (const mha_spec_t *spec, const unsigned int fftlen, const MHAWindow::base_t &window, const bool minphase)

Create a windowed impulse response/FIR filter coefficients from a spectrum.

- unsigned **gcd** (unsigned a, unsigned b)
 - greatest common divisor
- double **sinc** (double x)

sin(x)/x function, coping with x=0.

• std::pair< unsigned, unsigned > **resampling_factors** (float source_sampling_rate, float target_sampling_rate, float factor=1.0f)

Computes rational resampling factor from two sampling rates.

4.23.1 Detailed Description

Namespace for IIR and FIR filter classes.

```
4.23.2 Function Documentation
```

Set first order filter coefficients from time constant and sampling rate.

Parameters

tau	Time constant
fs	Sampling rate

Return values

c1	Recursive filter coefficient
c2	Non-recursive filter coefficient

Setup a first order butterworth band stop filter.

This function calculates the filter coefficients of a first order butterworth band stop filter.

Return values

Α	recursive filter coefficients
В	non recursive filter coefficients

Parameters

f1	lower frequency
f2	upper frequency
fs	sample frequency

Create a windowed impulse response/FIR filter coefficients from a spectrum.

Parameters

spec	Input spectrum
fftlen	FFT length of spectrum
window	Window shape (with length, e.g. initialized with MHAWindow::hanning(54)).

Parameters

minphase	Flag, true if original phase should be discarded and replaced by a minimal	
	phase function.	

greatest common divisor

```
4.23.2.8 double MHAFilter::sinc ( double x )
```

 $\sin(x)/x$ function, coping with x=0.

This is the historical sinc function, not the normalized sinc function.

Computes rational resampling factor from two sampling rates.

The function will fail if either sampling_rate * factor is not an integer

Parameters

source_sampling_rate	The original sampling rate
target_sampling_rate	The desired sampling rate
factor	A helper factor to use for non-integer sampling rates

Returns

a pair that contains first the upsampling factor and second the downsampling factor required for the specified resampling.

Exceptions

MHA_Error (p. 413)	if no rational resampling factor can be found.

4.24 MHAIOJack Namespace Reference

JACK IO.

Classes

class io_jack_t
 Main class for JACK IO.

4.24.1 Detailed Description

JACK IO.

4.25 MHAIOJackdb Namespace Reference

Classes

class io_jack_t
 Main class for JACK IO.

4.26 MHAIOPortAudio Namespace Reference

Classes

- class device_info_t
- class io_portaudio_t

Main class for Portaudio sound IO.

Functions

• static std::string parserFriendlyName (const std::string &in)

4.26.1 Function Documentation

4.26.1.1 static std::string MHAIOPortAudio::parserFriendlyName (
const std::string & in) [static]

4.27 MHAJack Namespace Reference

Classes and functions for openMHA and JACK interaction.

Classes

class client_avg_t

Generic JACK client for averaging a system response across time.

class client noncont t

Generic client for synchronous playback and recording of waveform fragments.

· class client t

Generic asynchronous JACK client.

class port_t

Class for one channel/port.

Functions

void io (mha_wave_t *s_out, mha_wave_t *s_in, const std::string &name, const std
 ::vector< std::string > &p_out, const std::vector< std::string > &p_in, float *srate=NULL,
 unsigned int *fragsize=NULL, bool use_jack_transport=false)

Functional form of generic client for synchronous playback and recording of waveform fragments.

std::vector< unsigned int > get_port_capture_latency (const std::vector< std::string > &ports)

Return the JACK port latency of ports.

std::vector< int > get_port_capture_latency_int (const std::vector< std::string > &ports)

Return the JACK port latency of ports.

std::vector< unsigned int > get_port_playback_latency (const std::vector< std::string > &ports)

Return the JACK port latency of ports.

std::vector< int > get_port_playback_latency_int (const std::vector< std::string > &ports)

4.27.1 Detailed Description

Classes and functions for openMHA and JACK interaction.

4.27.2 Function Documentation

```
4.27.2.1 void MHAJack::io (

mha_wave_t * s_out,

mha_wave_t * s_in,

const std::string & name,

const std::vector < std::string > & p_out,

const std::vector < std::string > & p_in,

float * srate = NULL,

unsigned int * fragsize = NULL,

bool use_jack_transport = false )
```

Functional form of generic client for synchronous playback and recording of waveform fragments.

```
4.27.2.2 std::vector< unsigned int > MHAJack::get_port_capture_latency ( const std::vector< std::string > & ports )
```

Return the JACK port latency of ports.

Parameters

ports	Ports to be tested
-------	--------------------

Returns

Latency vector (one entry for each port)

Return the JACK port latency of ports.

Parameters

```
ports Ports to be tested
```

Returns

Latency vector (one entry for each port)

Return the JACK port latency of ports.

Parameters

```
ports | Ports to be tested
```

Returns

Latency vector (one entry for each port)

4.28 MHAKernel Namespace Reference

Classes

- class algo_comm_class_t
- class comm_var_map_t

Functions

algo_comm_class_t * algo_comm_safe_cast (void *)

4.28.1 Function Documentation

```
4.28.1.1 MHAKernel::algo_comm_class_t * MHAKernel::algo_comm_safe_cast ( void * h )
```

4.29 MHAMultiSrc Namespace Reference

Collection of classes for selecting audio chunks from multiple sources.

Classes

· class base_t

Base class for source selection.

- class channel_t
- class channels t
- class spectrum_t
- · class waveform_t

4.29.1 Detailed Description

Collection of classes for selecting audio chunks from multiple sources.

4.30 MHAOvIFilter Namespace Reference

Namespace for overlapping FFT based filter bank classes and functions.

Namespaces

- barkscale
- FreqScaleFun

Transform functions from linear scale in Hz to new frequency scales.

ShapeFun

Shape functions for overlapping filters.

Classes

- · class band descriptor t
- class fftfb_ac_info_t
- class fftfb_t

FFT based overlapping filter bank.

class fftfb_vars_t

Set of configuration variables for FFT-based overlapping filters.

- class fscale_bw_t
- · class fscale t
- class fspacing_t

Class for frequency spacing, used by filterbank shape generator class.

- class overlap_save_filterbank_analytic_t
- class overlap_save_filterbank_t

A time-domain minimal phase filter bank with frequency shapes from **MHAOvIFilter::fftfb_t** (p. 582).

class scale_var_t

Typedefs

typedef mha_real_t(scale_fun_t) (mha_real_t)

4.30.1 Detailed Description

Namespace for overlapping FFT based filter bank classes and functions.

- 4.30.2 Typedef Documentation
- 4.30.2.1 typedef mha_real_t(MHAOvlFilter::scale_fun_t) (mha_real_t)
- 4.31 MHAOvlFilter::barkscale Namespace Reference

Classes

- · class bark2hz t
- · class hz2bark t

Variables

- mha_real_t vfreq [BARKSCALE_ENTRIES]
- mha_real_t vbark [BARKSCALE_ENTRIES]

4.31.1 Variable Documentation

- 4.31.1.1 mha_real_t MHAOvlFilter::barkscale::vfreq
- 4.31.1.2 mha_real_t MHAOvIFilter::barkscale::vbark
- 4.32 MHAOvlFilter::FreqScaleFun Namespace Reference

Transform functions from linear scale in Hz to new frequency scales.

Functions

- mha real t hz2hz (mha real t x)
 - Dummy scale transformation Hz to Hz.
- mha_real_t hz2khz (mha_real_t x)
- mha_real_t hz2octave (mha_real_t x)
- mha_real_t hz2third_octave (mha_real_t x)
- mha_real_t hz2bark (mha_real_t x)

Transformation to bark scale.

- mha_real_t hz2bark_analytic (mha_real_t)
- mha real t hz2erb (mha real t)
- mha_real_t hz2erb_glasberg1990 (mha_real_t)
- mha_real_t hz2log (mha_real_t x)

Third octave frequency scale.

mha_real_t inv_scale (mha_real_t, mha_real_t(*)(mha_real_t))

4.32.1 Detailed Description

Transform functions from linear scale in Hz to new frequency scales.

4.32.2 Function Documentation

```
4.32.2.1 mha_real_t MHAOvlFilter::FreqScaleFun::hz2hz ( mha_real_t x )
```

Dummy scale transformation Hz to Hz.

This function implements a dummy scale transformation (linear frequency scale).

Parameters

x Input frequency in Hz

Returns

Frequency in Hz

Transformation to bark scale.

This function implements a critical band rate (bark) scale.

Parameters

```
x | Input frequency in Hz
```

Returns

Critical band rate in Bark

Third octave frequency scale.

This function implements a third octave scale. Frequencies below 16 Hz are mapped to 16 Hz.

Parameters

x Frequency in Hz

Returns

Third octaves relative to 1000 Hz

4.33 MHAOvlFilter::ShapeFun Namespace Reference

Shape functions for overlapping filters.

Functions

- mha_real_t rect (mha_real_t x)
 - Filter shape function for rectangular filters.
- mha_real_t linear (mha_real_t x)

Filter shape function for sawtooth filters.

mha_real_t hann (mha_real_t x)

Filter shape function for hanning shaped filters.

- mha_real_t expflt (mha_real_t)
- mha_real_t gauss (mha_real_t)

4.33.1 Detailed Description

Shape functions for overlapping filters.

4.33.2 Function Documentation

```
4.33.2.1 mha_real_t MHAOvlFilter::ShapeFun::rect ( mha_real_t x )
```

Filter shape function for rectangular filters.

This function creates rectangular filter shapes. The edge is exactly half way between two center frequencies (on a given scale).

Parameters

```
x Input value in the range [-1,1].
```

Returns

Weigth function in the range [0,1]

Filter shape function for sawtooth filters.

This function creates sawtooth filter shapes. They rise linearly form 0 to 1 in the interval from the lower neighbor center frequency to the band center frequency and from 1 to 0 in the interval from the band center frequency to the upper neighbour band center frequency. Linear means linear on a given frequency scale.

Parameters

```
x Input value in the range [-1,1].
```

Returns

Weigth function in the range [0,1]

```
4.33.2.3 mha_real_t MHAOvIFilter::ShapeFun::hann ( mha_real_t x )
```

Filter shape function for hanning shaped filters.

This function creates hanning window shaped filters.

Parameters

```
x Input value in the range [-1,1].
```

Returns

Weigth function in the range [0,1]

4.34 MHAParser Namespace Reference

Name space for the openMHA-Parser configuration language.

Namespaces

StrCnv

String converter namespace.

Classes

class base_t

Base class for all parser items.

class bool_mon_t

Monitor with string value.

class bool_t

Variable with a boolean value ("yes"/"no")

- class c_ifc_parser_t
- · class commit t

Parser variable with event-emission functionality.

class complex_mon_t

Monitor with complex value.

class complex_t

Variable with complex value.

- class entry_t
- class expression_t
- class float_mon_t

Monitor with float value.

class float_t

Variable with float value.

class int mon t

Monitor variable with int value.

· class int t

Variable with integer value.

class keyword_list_t

Keyword list class.

class kw_t

Variable with keyword list value.

class mcomplex_mon_t

Matrix of complex numbers monitor.

class mcomplex_t

Matrix variable with complex value.

· class mfloat_mon_t

Matrix of floats monitor.

· class mfloat_t

Matrix variable with float value.

- class mhaconfig_mon_t
- · class mhapluginloader_t

Class to create a plugin loader in a parser, including the load logic.

· class mint_mon_t

Matrix of ints monitor.

class monitor_t

Base class for monitors and variable nodes.

· class parser_t

Parser node class.

class range var t

Base class for all variables with a numeric value range.

class string_mon_t

Monitor with string value.

class string_t

Variable with a string value.

class variable_t

Base class for variable nodes.

class vcomplex_mon_t

Monitor with vector of complex values.

class vcomplex t

Vector variable with complex value.

class vfloat_mon_t

Vector of floats monitor.

class vfloat t

Vector variable with float value.

· class vint_mon_t

Vector of ints monitor.

· class vint t

Variable with vector<int> value.

class vstring_mon_t

Vector of monitors with string value.

class vstring_t

Vector variable with string values.

class window_t

MHA configuration interface for a window function generator.

Typedefs

- typedef std::string(base_t::* opact_t) (expression_t &)
- typedef std::string(base_t::* query_t) (const std::string &)
- typedef std::map< std::string, opact_t > opact_map_t
- typedef std::map< std::string, query_t > query_map_t
- typedef std::list< entry_t > entry_map_t
- typedef int(* c parse cmd t) (void *, const char *, char *, unsigned int)
- typedef const char *(* c_parse_err_t) (void *, int)

Functions

- int **get_precision** ()
- std::string commentate (const std::string &s)
- void **trim** (std::string &s)
- std::string cfg_dump (base_t *, const std::string &)
- std::string cfg_dump_short (base_t *, const std::string &)
- std::string all dump (base t *, const std::string &)
- std::string mon_dump (base_t *, const std::string &)
- std::string all_ids (base_t *, const std::string &, const std::string &="")
- void strreplace (std::string &, const std::string &, const std::string &)
 string replace function
- void **envreplace** (std::string &s)

4.34.1 Detailed Description

Name space for the openMHA-Parser configuration language.

This namespace contains all classes which are needed for the implementation of the open ← MHA configuration language. For details on the script language itself please see section **The openMHA configuration language** (p. 33).

4.34.2 List of valid MHAParser items

- Sub-parser: parser_t (p. 654)
- Variables:

```
Numeric variables: int_t (p. 630), vint_t (p. 679), float_t (p. 625), vfloat_t (p. 675), mfloat_t (p. 643)
Other variables: string_t (p. 663), vstring_t (p. 683), kw_t (p. 635), bool_t (p. 611)
```

Monitors:

```
Numeric monitors: int_mon_t (p. 628), vint_mon_t (p. 677), float_mon_t (p. 624), vfloat_mon_t (p. 673)
mfloat_mon_t (p. 642)
mcomplex_mon_t (p. 638)
Other monitors: bool_mon_t (p. 610), string_mon_t (p. 662), vstring_mon_t (p. 681)
```

Members can be inserted into the configuration namespace by using MHAParser::insert_item() or the **insert_member()** (p. 979) macro.

```
4.34.3 Typedef Documentation
4.34.3.1 typedef std::string(base_t::* MHAParser::opact_t) (expression t &)
4.34.3.2
         typedef std::string(base_t::* MHAParser::query_t) (const std::string &)
4.34.3.3 typedef std::map<std::string,opact_t> MHAParser::opact_map_t
4.34.3.4 typedef std::map<std::string,query_t> MHAParser::query_map_t
4.34.3.5 typedef std::list<entry_t> MHAParser::entry_map_t
4.34.3.6 typedef int(* MHAParser::c_parse_cmd_t) (void *, const char *, char *, unsigned int)
4.34.3.7 typedef const char*(* MHAParser::c_parse_err_t) (void *, int)
4.34.4 Function Documentation
4.34.4.1 int MHAParser::get_precision ( )
4.34.4.2 std::string MHAParser::commentate (
                      const std::string & s )
4.34.4.3 void MHAParser::trim (
                      std::string & s )
4.34.4.4 std::string MHAParser::cfg_dump (
                      base_t * p,
                      const std::string & pref )
4.34.4.5 std::string MHAParser::cfg_dump_short (
                      base_t * p,
                      const std::string & pref )
4.34.4.6 std::string MHAParser::all_dump (
                      base t*p,
                      const std::string & pref )
4.34.4.7 std::string MHAParser::mon_dump (
                      base t*p,
                      const std::string & pref )
4.34.4.8 std::string MHAParser::all_ids (
                      base_t * p,
                      const std::string & pref,
                      const std::string & id = " " )
4.34.4.9 void MHAParser::strreplace (
                      std::string & s,
                      const std::string & arg,
                      const std::string & rep )
```

string replace function

Parameters

s	target string
arg	search pattern
rep	replace pattern

4.34.4.10 void MHAParser::envreplace (std::string & s)

4.35 MHAParser::StrCnv Namespace Reference

String converter namespace.

Functions

• int **num_brackets** (const std::string &s)

Return number of brackets at beginning and end of string.

- int **bracket balance** (const std::string &s)
- void str2val (const std::string &, bool &)

Convert from string.

void str2val (const std::string &, float &)

Convert from string.

void str2val (const std::string &, mha_complex_t &)

Convert from string.

• void **str2val** (const std::string &, int &)

Convert from string.

void str2val (const std::string &, keyword_list_t &)

Convert from string.

void str2val (const std::string &, std::string &)

Convert from string.

template<class arg_t >

void **str2val** (const std::string &s, std::vector< arg_t > &val)

Converter for vector types.

• template<>

void **str2val**< **mha_real_t** > (const std::string &s, std::vector< **mha_real_t** > &v)

Converter for vector<mha real t> with Matlab-style expansion.

template<class arg_t >

void **str2val** (const std::string &s, std::vector< std::vector< arg t >> &val)

Converter for matrix types.

• std::string val2str (const bool &)

Convert to string.

std::string val2str (const float &)

Convert to string.

std::string val2str (const mha_complex_t &)

Convert to string.

std::string val2str (const int &)

Convert to string.

std::string val2str (const keyword_list_t &)

Convert to string.

• std::string val2str (const std::string &)

Convert to string.

std::string val2str (const std::vector< float > &)

Convert to string.

std::string val2str (const std::vector< mha_complex_t > &)

Convert to string.

std::string val2str (const std::vector< int > &)

Convert to string.

• std::string val2str (const std::vector< std::vector< int > > &)

Convert to string.

std::string val2str (const std::vector< std::string > &)

Convert to string.

std::string val2str (const std::vector< std::vector< float >> &)

Convert to string.

- std::string val2str (const std::vector< std::vector< mha_complex_t >> &)

Convert to string.

4.35.1 Detailed Description

String converter namespace.

The functions defined in this namespace manage the conversions from C++ variables to strings and back. It was tried to keep a matlab compatible string format for vectors and vectors of vectors.

4.35.2 Function Documentation

```
4.35.2.1 int MHAParser::StrCnv::num_brackets ( const std::string & s )
```

Return number of brackets at beginning and end of string.

Parameters

s String

Returns

```
Number of brackets, or -1 for empty string
```

```
4.35.2.2 int MHAParser::StrCnv::bracket_balance (
                      const std::string & s )
4.35.2.3 void MHAParser::StrCnv::str2val (
                      const std::string & s,
                      bool & v)
Convert from string.
4.35.2.4 void MHAParser::StrCnv::str2val (
                      const std::string & s,
                      float & v)
Convert from string.
4.35.2.5 void MHAParser::StrCnv::str2val (
                      const std::string & s,
                       mha_complex_t & v )
Convert from string.
4.35.2.6 void MHAParser::StrCnv::str2val (
                      const std::string & s,
                      int & v )
Convert from string.
4.35.2.7 void MHAParser::StrCnv::str2val (
                      const std::string & s,
                       MHAParser::keyword list t & v )
Convert from string.
4.35.2.8 void MHAParser::StrCnv::str2val (
                      const std::string & s,
                       std::string & v )
Convert from string.
4.35.2.9 template < class arg_t > void MHAParser::StrCnv::str2val (
                      const std::string & s,
                      std::vector< arg_t > & val )
```

Converter for vector types.

© 2005-2018 HörTech gGmbH, Oldenburg

```
4.35.2.10 template<> void MHAParser::StrCnv::str2val< mha_real_t > (
                       const std::string & s,
                        std::vector < mha real t > \& v)
Converter for vector<mha real t> with Matlab-style expansion.
4.35.2.11 template < class arg_t > void MHAParser::StrCnv::str2val (
                       const std::string & s,
                       std::vector< std::vector< arg_t >> & val )
Converter for matrix types.
4.35.2.12 std::string MHAParser::StrCnv::val2str (
                       const bool & v )
Convert to string.
4.35.2.13 std::string MHAParser::StrCnv::val2str (
                       const float & v )
Convert to string.
4.35.2.14 std::string MHAParser::StrCnv::val2str (
                       const mha_complex_t & v )
Convert to string.
4.35.2.15 std::string MHAParser::StrCnv::val2str (
                       const int & v )
Convert to string.
4.35.2.16 std::string MHAParser::StrCnv::val2str (
                       const keyword_list_t & v )
Convert to string.
4.35.2.17 std::string MHAParser::StrCnv::val2str (
                       const std::string & v )
Convert to string.
4.35.2.18 std::string MHAParser::StrCnv::val2str (
                       const std::vector< float > & \nu )
Convert to string.
```

```
4.35.2.19 std::string MHAParser::StrCnv::val2str (
                       const std::vector< mha_complex_t > & v )
Convert to string.
4.35.2.20 std::string MHAParser::StrCnv::val2str (
                       const std::vector< int > & \nu )
Convert to string.
4.35.2.21 std::string MHAParser::StrCnv::val2str (
                       const std::vector< std::vector< int > > & \nu )
Convert to string.
4.35.2.22 std::string MHAParser::StrCnv::val2str (
                       const std::vector< std::string > & \nu )
Convert to string.
4.35.2.23 std::string MHAParser::StrCnv::val2str (
                       const std::vector< std::vector< float >> & v )
Convert to string.
4.35.2.24 std::string MHAParser::StrCnv::val2str (
                       const std::vector< std::vector< mha_complex_t >> & v )
Convert to string.
4.36
      MHAPlugin Namespace Reference
Namespace for openMHA plugin class templates and thread-safe runtime configurations.
```

Classes

- class cfg_chain_t
- class config_t

Template class for thread safe configuration.

class plugin_t

The template class for C++ openMHA plugins.

4.36.1 Detailed Description

Namespace for openMHA plugin class templates and thread-safe runtime configurations.

4.37 MHAPlugin Resampling Namespace Reference

Classes

- class resampling_if_t
- · class resampling_t

4.38 MHAPlugin_Split Namespace Reference

Classes

class domain_handler_t

Handles domain-specific partial input and output signal.

class dummy_threads_t

Dummy specification of a thread platform: This class implements everything in a single thread.

class posix_threads_t

Posix threads specification of thread platform.

class split t

Implements split plugin.

class splitted_part_t

The **splitted_part_t** (p. 717) instance manages the plugin that performs processing on the reduced set of channels.

class thread platform t

Basic interface for encapsulating thread creation, thread priority setting, and synchronization on any threading platform (i.e., pthreads or win32threads).

class uni_processor_t

An interface to a class that sports a process method with no parameters and no return value.

Enumerations

4.38.1 Detailed Description

A namespace for the split plugin. Helps testability and documentation.

4.38.2 Enumeration Type Documentation

4.38.2.1 anonymous enum

Invalid thread priority.

Enumerator

INVALID_THREAD_PRIORITY

4.39 MHASignal Namespace Reference

Namespace for audio signal handling and processing classes.

Classes

class async_rmslevel_t

Class for asynchronous level metering.

- class delay_spec_t
- · class delay t

Class to realize a simple delay of waveform streams.

class delay_wave_t

Delayline containing wave fragments.

· class doublebuffer t

Double-buffering class.

- class fft_t
- class hilbert_fftw_t
- class hilbert_t

Hilbert transformation of a waveform segment.

class loop_wavefragment_t

Copy a fixed waveform fragment to a series of waveform fragments of other size.

class matrix_t

n-dimensional matrix with real or complex floating point values.

class minphase_t

Minimal phase function.

class quantizer_t

Simple simulation of fixpoint quantization.

class ringbuffer t

A ringbuffer class for time domain audio signal, which makes no assumptions with respect to fragment size.

· class schroeder t

Schroeder tone complex class.

class spectrum_t

a signal processing class for spectral data (based on **mha_spec_t** (p. 432))

- · class stat t
- class subsample_delay_t

implements subsample delay in spectral domain.

class uint_vector_t

Vector of unsigned values, used for size and index description of n-dimensional matrixes.

class waveform_t

signal processing class for waveform data (based on mha_wave_t (p. 462))

Functions

void for_each (mha_wave_t *s, mha_real_t(*fun)(mha_real_t))

Apply a function to each element of a mha wave t (p. 462).

mha_real_t lin2db (mha_real_t x)

Conversion from linear scale to dB (no SPL reference)

mha_real_t db2lin (mha_real_t x)

Conversion from dB scale to linear (no SPL reference)

mha_real_t pa2dbspl (mha_real_t x)

Conversion from linear Pascal scale to dB SPL.

mha_real_t pa22dbspl (mha_real_t x, mha_real_t eps=1e-20f)

Conversion from squared Pascal scale to dB SPL.

mha_real_t dbspl2pa (mha_real_t x)

Conversion from dB SPL to linear Pascal scale.

mha_real_t smp2sec (mha_real_t n, mha_real_t srate)

conversion from samples to seconds

mha_real_t sec2smp (mha_real_t sec, mha_real_t srate)

conversion from seconds to samples

• mha_real_t bin2freq (mha_real_t bin, unsigned fftlen, mha_real_t srate)

conversion from fft bin index to frequency

mha_real_t freq2bin (mha_real_t freq, unsigned fftlen, mha_real_t srate)

conversion from frequency to fft bin index

• mha_real_t smp2rad (mha_real_t samples, unsigned bin, unsigned fftlen)

conversion from delay in samples to phase shift

mha_real_t rad2smp (mha_real_t phase_shift, unsigned bin, unsigned fftlen)

conversion from phase shift to delay in samples

template < class elem type >

std::vector< elem_type > **dupvec** (std::vector< elem_type > vec, unsigned n)

Duplicate last vector element to match desired size.

template < class elem type >

std::vector< elem_type > dupvec_chk (std::vector< elem_type > vec, unsigned n)

Duplicate last vector element to match desired size, check for dimension.

void copy_channel (mha_spec_t &self, const mha_spec_t &src, unsigned sch, unsigned dch)

Copy one channel of a source signal.

void copy_channel (mha_wave_t &self, const mha_wave_t &src, unsigned src_
 channel, unsigned dest_channel)

Copy one channel of a source signal.

• mha_real_t rmslevel (const mha_spec_t &s, unsigned int channel, unsigned int fftlen)

Return RMS level of a spectrum channel.

mha_real_t colored_intensity (const mha_spec_t &s, unsigned int channel, unsigned int fftlen, mha_real_t sqfreq_response[])

Colored spectrum intensity.

mha_real_t maxabs (const mha_spec_t &s, unsigned int channel)

Find maximal absolute value.

mha_real_t rmslevel (const mha_wave_t &s, unsigned int channel)

Return RMS level of a waveform channel.

• mha real t maxabs (const mha wave t &s, unsigned int channel)

Find maximal absolute value.

• mha real t maxabs (const mha wave t &s)

Find maximal absolute value.

mha_real_t max (const mha_wave_t &s)

Find maximal value.

mha_real_t min (const mha_wave_t &s)

Find minimal value.

mha real t sumsqr channel (const mha wave t &s, unsigned int channel)

Calculate sum of squared values in one channel.

• mha_real_t sumsqr_frame (const mha_wave_t &s, unsigned int frame)

Calculate sum over all channels of squared values.

- void scale (mha spec t *dest, const mha wave t *src)
- void limit (mha_wave_t &s, const mha_real_t &min, const mha_real_t &max)

Limit the singal in the waveform buffer to the range [min, max].

template < class elem type >

elem_type kth_smallest (elem_type array[], unsigned n, unsigned k)

Fast search for the kth smallest element of an array.

• template<class elem type >

elem_type **median** (elem_type array[], unsigned n)

Fast median search.

template<class elem_type >

elem_type **mean** (const std::vector< elem_type > &data, elem_type start_val)

Calculate average of elements in a vector.

template < class elem type >

std::vector< elem_type > quantile (std::vector< elem_type > data, const std::vector< elem_type > &p)

Calculate quantile of elements in a vector.

- void saveas_mat4 (const mha_spec_t &data, const std::string &varname, FILE *fh)
 Save a openMHA spectrum as a variable in a Matlab4 file.
- void **saveas_mat4** (const **mha_wave_t** &data, const std::string &varname, FILE *fh)

 Save a openMHA waveform as a variable in a Matlab4 file.
- void saveas_mat4 (const std::vector< mha_real_t > &data, const std::string &varname,
 FILE *fh)

Save a float vector as a variable in a Matlab4 file.

void copy_permuted (mha_wave_t *dest, const mha_wave_t *src)

Copy contents of a waveform to a permuted waveform.

Variables

• unsigned long int **signal_counter** = 0

Signal counter to produce signal ID strings.

4.39.1 Detailed Description

Namespace for audio signal handling and processing classes.

4.39.2 Function Documentation

```
4.39.2.1 void MHASignal::scale (

mha_spec_t * dest,

const mha_wave_t * src )
```

```
4.39.2.2 void MHASignal::limit (

mha_wave_t & s,

const mha_real_t & min,

const mha_real_t & max )
```

Limit the singal in the waveform buffer to the range [min, max].

Parameters

s	The signal to limit. The signal in this wave buffer is modified.
min	lower limit
max	upper limit

Fast search for the kth smallest element of an array.

The order of elements is altered, but not completely sorted. Using the algorithm from N. Wirth, published in "Algorithms + data structures = programs", Prentice-Hall, 1976

Parameters

array	Element array
-------	---------------

Postcondition

The order of elements in the array is altered. array[k] then holds the result.

Parameters

n number of elements in array

Precondition

n >= 1

Parameters

k The k'th smalles element is returned: k = 0 returns the minimum, k = (n-1)/2 returns the median, k=(n-1) returns the maximum

Precondition

k < n

Returns

The kth smallest array element

Fast median search.

The order of elements is altered, but not completely sorted.

Parameters

array Element array

Postcondition

The order of elements in the array is altered. array[(n-1)/2] then holds the median.

Parameters

n number of elements in array

Precondition

```
n >= 1
```

Returns

The median of the array elements

Calculate average of elements in a vector.

Parameters

data	Input vector
start_val	Value for initialization of the return value before sum.

Returns

The average of the vector elements

Calculate quantile of elements in a vector.

Parameters

data	Input vector
р	Vector of probability values.

Returns

Vector of quantiles of input data, one entry for each probability value.

Save a openMHA spectrum as a variable in a Matlab4 file.

Parameters

data	openMHA spectrum to be saved.
varname	Matlab variable name (Matlab4 limitations on maximal length are not checked).
fh	File handle to Matlab4 file.

Save a openMHA waveform as a variable in a Matlab4 file.

Parameters

data	openMHA waveform to be saved.	
varname	Matlab variable name (Matlab4 limitations on maximal length are not checked).	
fh	File handle to Matlab4 file.	

```
4.39.2.9 void MHASignal::saveas_mat4 (  const\ std::vector < \ mha\_real\_t > \&\ data, \\ const\ std::string\ \&\ varname, \\ FILE * \textit{fh}\ )
```

Save a float vector as a variable in a Matlab4 file.

Parameters

data	Float vector to be saved.	
varname	Matlab variable name (Matlab4 limitations on maximal length are not checked).	
fh	File handle to Matlab4 file.	

Copy contents of a waveform to a permuted waveform.

Parameters

dest	Destination waveform
src	Source waveform

The total size of src and dest must be the same, num_frames and num_channels must be

exchanged in dest.

4.39.3 Variable Documentation

4.39.3.1 unsigned long int MHASignal::signal_counter = 0

Signal counter to produce signal ID strings.

4.40 MHASndFile Namespace Reference

Classes

- class sf_t
- class sf_wave_t

4.41 MHATableLookup Namespace Reference

Namespace for table lookup classes.

Classes

- class linear_table_t
 - Class for interpolation with equidistant x values.
- class table_t
- class xy_table_t

Class for interpolation with non-equidistant x values.

4.41.1 Detailed Description

Namespace for table lookup classes.

4.42 MHAWindow Namespace Reference

Collection of Window types.

Classes

· class bartlett t

Bartlett window.

class base t

Common base for window types.

· class blackman t

Blackman window.

class fun_t

Generic window based on a generator function.

• class hamming_t

Hamming window.

class hanning_t

von-Hann window

class rect_t

Rectangular window.

class user_t

User defined window.

Functions

· float rect (float)

Rectangular window function.

float bartlett (float)

Bartlett window function.

float hanning (float)

Hanning window function.

float hamming (float)

Hamming window function.

• float blackman (float)

Blackman window function.

4.42.1 Detailed Description

Collection of Window types.

4.42.2 Function Documentation

4.42.2.1 float MHAWindow::rect (float x)

Rectangular window function.

```
4.42.2.2 float MHAWindow::bartlett ( float x )
```

Bartlett window function.

```
4.42.2.3 float MHAWindow::hanning ( float x )
```

Hanning window function.

```
4.42.2.4 float MHAWindow::hamming ( float x )
```

Hamming window function.

```
4.42.2.5 float MHAWindow::blackman ( float x )
```

Blackman window function.

4.43 multibandcompressor Namespace Reference

Classes

- · class fftfb_plug_t
- class interface_t
- class plugin_signals_t

4.44 noisePowProposedScale Namespace Reference

Classes

- class interface_t
- class noisePowProposed

4.45 overlapadd Namespace Reference

Classes

- class overlapadd_if_t
- class overlapadd_t

4.46 plingploing Namespace Reference

All classes for the plingploing music generator live in this namespace.

Classes

· class if t

Plugin class of the plingploing music generator.

• class plingploing_t

Run-time configuration of the plingploing music generator.

Functions

double drand (double a, double b)

4.46.1 Detailed Description

All classes for the plingploing music generator live in this namespace.

```
4.46.2 Function Documentation
```

```
4.46.2.1 double plingploing::drand ( double a, double b )
```

4.47 PluginLoader Namespace Reference

Classes

- class config_file_splitter_t
- class fourway_processor_t

This abstract class defines the interface for classes that implement all types of signal domain processing supported by the MHA: wave2wave, spec2spec, wave2spec, and spec2wave.

• class mhapluginloader_t

Functions

- const char * mhastrdomain (mha_domain_t)
- void mhaconfig_compare (const mhaconfig_t &req, const mhaconfig_t &avail, const std::string &pref="")

Compare two mhaconfig_t (p. 470) structures, and report differences as an error.

4.47.1 Function Documentation

```
4.47.1.1 const char * PluginLoader::mhastrdomain ( mha_domain_t d )
```

Compare two **mhaconfig_t** (p. 470) structures, and report differences as an error.

Parameters

req	Expected mhaconfig_t (p. 470) structure
avail	Available mhaconfig_t (p. 470) structure
pref	Prefix for error messages

4.48 route Namespace Reference

Classes

- class interface_t
- · class process_t
- 4.49 shadowfilter_begin Namespace Reference

Classes

- · class cfg_t
- class shadowfilter_begin_t
- 4.50 shadowfilter_end Namespace Reference

Classes

- · class cfg_t
- class shadowfilter_end_t

4.51 smoothgains_bridge Namespace Reference

Classes

- class overlapadd_if_t
- class smoothspec_wrap_t

4.52 testplugin Namespace Reference

Classes


- · class ac_parser_t
- class config_parser_t
- class if_t
- class signal_parser_t

5 Class Documentation

5.1 ac2lsl::ac2lsl_t Class Reference

Plugin class of ac2lsl (p. 77).

Inheritance diagram for ac2lsl::ac2lsl_t:

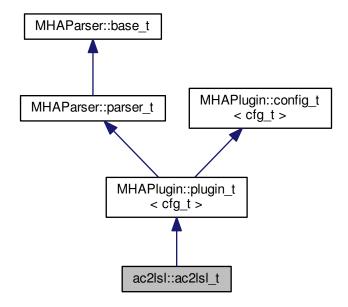

Public Member Functions

- ac2lsl_t (algo_comm_t iac, const char *chain, const char *algo)
- void prepare (mhaconfig_t &)

Prepare constructs the vector of bridge variables and locks the configuration, then calls **up-date()** (p. 129).

mha_wave_t * process (mha_wave_t *s)

Processing fct for waveforms.

mha_spec_t * process (mha_spec_t *s)

Processing fct for spectra.

void process ()

Process function.

• void release ()

Release fct.

Private Member Functions

• void update ()

Construct new runtime configuration.

Private Attributes

- MHAParser::vstring_t vars
- MHAParser::bool_t rt_strict
- MHAParser::bool_t activate
- MHAParser::int_t skip
- MHAEvents::patchbay_t< ac2lsl_t > patchbay
- std::vector< std::unique_ptr< save_var_base_t >> varlist
- std::once_flag rt_strict_flag

Additional Inherited Members

5.1.1 Detailed Description

Plugin class of ac2lsl (p. 77).

```
5.1.2 Constructor & Destructor Documentation
```

5.1.3 Member Function Documentation

Prepare constructs the vector of bridge variables and locks the configuration, then calls **up-date()** (p. 129).

Implements MHAPlugin::plugin $t < cfg \ t > (p. 696)$.

Processing fct for waveforms.

Calls **process(void)** (p. 128).

Processing fct for spectra.

Calls **process(void)** (p. 128).

```
5.1.3.4 void ac2lsl::ac2lsl_t::process ( void )
```

Process function.

Checks once if the plugin is run in a real-time thread and throws if rt_strict is true, then forwards to **cfg_t::process()** (p. 130).

```
5.1.3.5 void ac2lsl::ac2lsl_t::release() [virtual]
```

Release fct.

Unlocks variable name list

Reimplemented from **MHAPlugin::plugin_t**< **cfg_t** > (p. 697).

```
5.1.3.6 void ac2lsl::ac2lsl_t::update( ) [private]
```

Construct new runtime configuration.

5.1.4 Member Data Documentation

```
5.1.4.1 MHAParser::vstring t ac2lsl::ac2lsl_t::vars [private]
```

```
5.1.4.2 MHAParser::bool_t ac2lsl::ac2lsl_t::rt_strict [private]
```

```
5.1.4.3 MHAParser::bool t ac2lsl::ac2lsl_t::activate [private]
```

```
5.1.4.4 MHAParser::int_t ac2lsl::ac2lsl_t::skip [private]
```

```
5.1.4.5 MHAEvents::patchbay_t<ac2lsl_t> ac2lsl::ac2lsl_t::patchbay [private]
```

```
5.1.4.6 std::vector<std::unique_ptr<save var base t>> ac2lsl::ac2lsl_t::varlist [private]
```

```
5.1.4.7 std::once_flag ac2lsl::ac2lsl_t::rt_strict_flag [private]
```

The documentation for this class was generated from the following file:

ac2lsl.cpp

5.2 ac2lsl::cfg_t Class Reference

Runtime configuration class of the ac2lsl (p. 77) plugin.

Public Member Functions

```
• cfg_t (bool activate_, unsigned skipcnt_, std::vector< std::unique_ptr< save\_var\_{\leftarrow} base\_t >> *varlist\_)
```

C'tor of **ac2IsI** (p. 77) run time configuration.

• void **process** ()

Private Attributes

- std::vector< std::unique_ptr< save_var_base_t >> * varlist

 Pointer to vector of unique ptr's of ac to lsl bridges.
- unsigned skipcnt

Counter of frames to skip.

unsigned skip

Number of frames to skip after each send.

· bool activate

Activate/Deactivate sending to Isl.

5.2.1 Detailed Description

Runtime configuration class of the **ac2lsl** (p. 77) plugin.

5.2.2 Constructor & Destructor Documentation

C'tor of ac2lsI (p. 77) run time configuration.

Parameters

activate⇔	Activate/Deactivate sending
_	
skipcnt←	Number of frames to skip after each send
	·
varlist⇔	Pointer to vector of unique ptr's of ac to Isl bridges.
_	

5.2.3 Member Function Documentation

```
5.2.3.1 void cfg_t::process ( void )
```

5.2.4 Member Data Documentation

```
5.2.4.1 std::vector<std::unique_ptr<save_var_base_t>>* ac2lsl::cfg_t::varlist [private]
```

Pointer to vector of unique ptr's of ac to Isl bridges.

Raw pointer because we do not take ownership

```
5.2.4.2 unsigned ac2lsl::cfg_t::skipcnt [private]
```

Counter of frames to skip.

```
5.2.4.3 unsigned ac2lsl::cfg_t::skip [private]
```

Number of frames to skip after each send.

5.2.4.4 bool ac2lsl::cfg_t::activate [private]

Activate/Deactivate sending to Isl.


The documentation for this class was generated from the following file:

ac2lsl.cpp

5.3 ac2lsl::save_var_base_t Class Reference

Interface for ac to Isl bridge variable.

Inheritance diagram for ac2lsl::save_var_base_t:

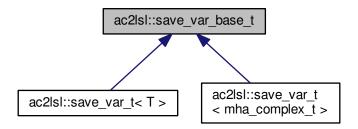

Public Member Functions

- virtual void send_frame ()=0
- virtual ~save_var_base_t ()=default

5.3.1 Detailed Description

Interface for ac to Isl bridge variable.

5.3.2 Constructor & Destructor Documentation

- **5.3.2.1** virtual ac2lsl::save_var_base_t::~save_var_base_t() [virtual], [default]
- 5.3.3 Member Function Documentation
- **5.3.3.1** virtual void ac2lsl::save var base t::send frame() [pure virtual]

Implemented in ac2ls1::save_var_t< mha_complex_t > (p. 135), and ac2ls1::save_var_t< T > (p. 133).


The documentation for this class was generated from the following file:

ac2lsl.cpp

5.4 ac2lsl::save_var_t < T > Class Template Reference

Implementation for all ac to Isl bridges except complex types.

Inheritance diagram for ac2lsl::save_var_t< T >:

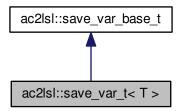

Public Member Functions

save_var_t (const std::string &name, const std::string &type, void *data, size_t num_← entries)

C'tor of generic ac to Isl bridge.

- virtual ~save_var_t ()=default
- virtual void send_frame ()

Send a frame to Isl.

Private Attributes

- lsl::stream_outlet **stream**
 - LSL stream outlet.
- T * buf

Pointer to data buffer of the ac variable.

5.4.1 Detailed Description

 $\label{template} \begin{tabular}{ll} template < typename T > \\ class ac2lsl::save_var_t < T > \\ \end{tabular}$

Implementation for all ac to Isl bridges except complex types.

5.4.2 Constructor & Destructor Documentation

C'tor of generic ac to Isl bridge.

Parameters

name	Name of variable as seen in Isl	
type	Type of variable as seen in Isl	
data	Pointer to data buffer of the ac variable	
num_entries	Number of entries if the ac variable is a vector. Should be set to one if not a	
	vector.	

```
5.4.2.2 template<typename T > virtual ac2lsl::save_var_t< T >::\simsave_var_t( ) [virtual], [default]
```

5.4.3 Member Function Documentation

Send a frame to Isl.

Implements ac2lsl::save_var_base_t (p. 131).

5.4.4 Member Data Documentation

```
5.4.4.1 template < typename T > Isl::stream_outlet ac2Isl::save var t < T >::stream [private]
```

LSL stream outlet.

Interface to Isl

```
5.4.4.2 template<typename T > T* ac2lsl::save_var_t < T >::buf [private]
```

Pointer to data buffer of the ac variable.


The documentation for this class was generated from the following file:

ac2lsl.cpp

5.5 ac2lsl::save_var_t < mha_complex_t > Class Template Reference

Template specialization of the **ac2lsl** (p. 77) bridge to take care of complex numbers.

Inheritance diagram for ac2lsl::save_var_t< mha_complex_t >:

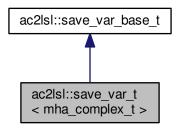

Public Member Functions

save_var_t (const std::string &name, const std::string &type, void *data, size_t _num_← entries)

C'tor of specialization for complex types.

- virtual ~save var t ()=default
- virtual void send_frame ()

Send a frame of complex types.

Private Attributes

• lsl::stream_outlet stream

LSL stream outlet.

std::vector< mha_real_t > vec

Vector that gets sent over to the Isl instead of the actual complex type.

mha complex t * buf

Pointer to data buffer of the ac variable.

size_t num_entries

Number of entries in the vector.

5.5.1 Detailed Description

template<> class ac2lsl::save_var_t< mha_complex_t >

Template specialization of the ac2lsI (p. 77) bridge to take care of complex numbers.

This specialization is needed because Isl does not support complex numbers. Order is [re(0), im(0), re(1), im(1),]

```
5.5.2 Constructor & Destructor Documentation
```

C'tor of specialization for complex types.

See generic c'tor for details.

5.5.3 Member Function Documentation

Send a frame of complex types.

Reorders real and imaginary parts into one vector.

```
Implements ac2lsl::save_var_base_t (p. 131).
```

5.5.4 Member Data Documentation

```
5.5.4.1 Isl::stream_outlet ac2Isl::save_var_t < mha_complex_t >::stream [private]
```

LSL stream outlet.

Interface to Isl

```
5.5.4.2 std::vector<mha_real_t> ac2lsl::save_var_t< mha_complex_t >::vec [private]
```

Vector that gets sent over to the Isl instead of the actual complex type.

```
5.5.4.3 mha_complex_t* ac2lsl::save_var_t < mha_complex_t >::buf [private]
```

Pointer to data buffer of the ac variable.

5.5.4.4 size_t ac2lsl::save_var_t < mha_complex_t >::num_entries [private]

Number of entries in the vector.


The documentation for this class was generated from the following file:

· ac2lsl.cpp

5.6 ac2osc_t Class Reference

Plugin class of the ac2osc plugin.

Inheritance diagram for ac2osc_t:

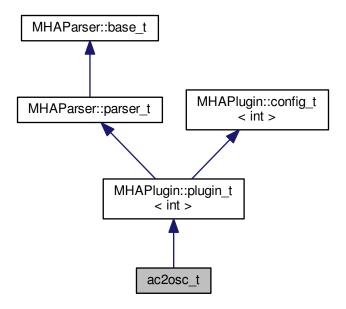

Public Member Functions

- ac2osc_t (algo_comm_t iac, const char *chain, const char *algo)

 C'tor of plugin class.
- void prepare (mhaconfig_t &)
- mha_wave_t * process (mha_wave_t *s)

Processing fct for waveforms.

• mha_spec_t * process (mha_spec_t *s)

Processing fct for spectra.

• void process ()

Process function.

• void release ()

Release frees osc related memory, does cleanup.

Private Member Functions

- void send_osc_float ()
- void update_mode ()

Start/Stop sending of messages.

Private Attributes

MHAParser::string_t host

OSC server host name.

MHAParser::string_t port

OSC server port.

MHAParser::int_t ttl

Time-to-live of UDP packages.

MHAParser::vstring_t vars

List of AC variables to be saved, empty for all.

MHAParser::kw_t mode

Record mode.

MHAParser::int_t skip

number of frames to skip after sending

MHAParser::bool_t rt_strict

abort if used in real-time thread?

- MHA AC::acspace2matrix t * acspace
- MHAEvents::patchbay_t< ac2osc_t > patchbay
- bool b_record
- uint8 t * rtmem
- · float framerate
- int skipcnt
- lo_address lo_addr
- std::once_flag rt_strict_flag

Additional Inherited Members

5.6.1 Detailed Description

Plugin class of the ac2osc plugin.

5.6.2 Constructor & Destructor Documentation

C'tor of plugin class.

```
5.6.3 Member Function Documentation
```

Implements MHAPlugin::plugin_t< int > (p. 696).

Processing fct for waveforms.

Calls process(void) (p. 138).

Processing fct for spectra.

Calls process(void) (p. 138).

```
5.6.3.4 void ac2osc_t::process ( void )
```

Process function.

Checks once if the plugin is run in a real-time thread and throws if rt_strict is true, sends osc messages according to config.

Release frees osc related memory, does cleanup.

Reimplemented from **MHAPlugin::plugin_t**< int > (p. 697).

```
5.6.3.6 void ac2osc_t::send_osc_float( ) [private]
```

```
5.6.3.7 void ac2osc_t::update_mode( ) [private]
```

Start/Stop sending of messages.

5.6.4 Member Data Documentation

5.6.4.1 MHAParser::string_t ac2osc_t::host [private]


OSC server host name.

```
5.6.4.2 MHAParser::string_t ac2osc_t::port [private]
OSC server port.
5.6.4.3 MHAParser::int_t ac2osc_t::ttl [private]
Time-to-live of UDP packages.
5.6.4.4 MHAParser::vstring_t ac2osc_t::vars [private]
List of AC variables to be saved, empty for all.
5.6.4.5 MHAParser::kw_t ac2osc_t::mode [private]
Record mode.
5.6.4.6 MHAParser::int_t ac2osc_t::skip [private]
number of frames to skip after sending
5.6.4.7 MHAParser::bool_t ac2osc_t::rt_strict [private]
abort if used in real-time thread?
5.6.4.8 MHA_AC::acspace2matrix_t* ac2osc_t::acspace [private]
5.6.4.9 MHAEvents::patchbay_t<ac2osc_t> ac2osc_t::patchbay [private]
5.6.4.10 bool ac2osc_t::b_record [private]
5.6.4.11 uint8_t* ac2osc_t::rtmem [private]
5.6.4.12 float ac2osc_t::framerate [private]
5.6.4.13 int ac2osc_t::skipcnt [private]
5.6.4.14 lo_address ac2osc_t::lo_addr [private]
5.6.4.15 std::once_flag ac2osc_t::rt_strict_flag [private]
The documentation for this class was generated from the following file:
```

· ac2osc.cpp

5.7 ac2wave_if_t Class Reference

Inheritance diagram for ac2wave_if_t:

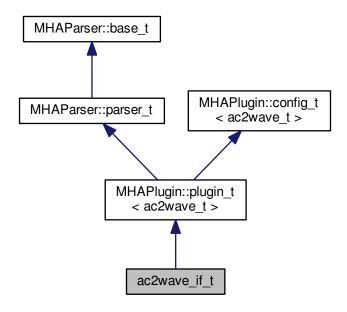

Public Member Functions

- ac2wave_if_t (const algo_comm_t &, const std::string &, const std::string &)
- mha_wave_t * process (mha_spec_t *)
- mha_wave_t * process (mha_wave_t *)
- void prepare (mhaconfig_t &)
- void release ()

Private Member Functions

• void update ()

Private Attributes

- MHAParser::string_t name
- MHAParser::float_t gain_in
- MHAParser::float_t gain_ac
- MHAParser::int_t delay_in
- MHAParser::int_t delay_ac
- MHASignal::waveform_t * zeros
- bool prepared
- MHAEvents::patchbay_t< ac2wave_if_t > patchbay

Additional Inherited Members

```
5.7.1 Constructor & Destructor Documentation
5.7.1.1 ac2wave if t::ac2wave if t(
                   const algo_comm_t & iac,
                   const std::string & ith,
                   const std::string & ial )
5.7.2 Member Function Documentation
5.7.2.1 mha_wave_t * ac2wave_if_t::process (
                   mha spec t*)
5.7.2.2 mha wave t * ac2wave if t::process (
                   mha_wave_t * s
5.7.2.3 void ac2wave_if_t::prepare (
                   mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin_t< ac2wave_t > (p. 696).
5.7.2.4 void ac2wave if t::release (
                   void ) [virtual]
Reimplemented from MHAPlugin::plugin_t< ac2wave_t > (p. 697).
5.7.2.5 void ac2wave_if_t::update( ) [private]
5.7.3 Member Data Documentation
5.7.3.1 MHAParser::string_t ac2wave_if_t::name [private]
5.7.3.2 MHAParser::float_t ac2wave_if_t::gain_in [private]
5.7.3.3 MHAParser::float_t ac2wave_if_t::gain_ac [private]
5.7.3.4 MHAParser::int_t ac2wave_if_t::delay_in [private]
5.7.3.5 MHAParser::int_t ac2wave_if_t::delay_ac [private]
5.7.3.6 MHASignal::waveform_t* ac2wave_if_t::zeros [private]
5.7.3.7 bool ac2wave if t::prepared [private]
5.7.3.8 MHAEvents::patchbay_t<ac2wave_if_t> ac2wave_if_t::patchbay [private]
The documentation for this class was generated from the following file:
```

ac2wave.cpp

5.8 ac2wave_t Class Reference

Public Member Functions

- ac2wave_t (unsigned int frames_, unsigned int channels_, algo_comm_t ac_, std::string name_, float gain_in_, float gain_ac_, unsigned int delay_in_, unsigned int delay_ac_)
- mha_wave_t * process (mha_wave_t *)

Private Attributes

- · unsigned int frames
- unsigned int channels
- · mha wave tw
- · algo_comm_t ac
- std::string name
- MHASignal::delay_wave_t delay_in
- MHASignal::delay_wave_t delay_ac
- mha_real_t gain_in
- · mha_real_t gain_ac
- 5.8.1 Constructor & Destructor Documentation

- 5.8.2 Member Function Documentation
- 5.8.2.1 mha_wave_t * ac2wave_t::process (mha_wave_t * s)
- 5.8.3 Member Data Documentation
- **5.8.3.1 unsigned int ac2wave_t::frames** [private]
- **5.8.3.2 unsigned int ac2wave_t::channels** [private]
- 5.8.3.3 mha wave tac2wave_t::w [private]


```
5.8.3.4 algo_comm_t ac2wave_t::ac [private]
5.8.3.5 std::string ac2wave_t::name [private]
5.8.3.6 MHASignal::delay_wave_t ac2wave_t::delay_in [private]
5.8.3.7 MHASignal::delay_wave_t ac2wave_t::delay_ac [private]
5.8.3.8 mha_real_t ac2wave_t::gain_in [private]
5.8.3.9 mha_real_t ac2wave_t::gain_ac [private]
```

The documentation for this class was generated from the following file:

· ac2wave.cpp

5.9 acConcat_wave Class Reference

Inheritance diagram for acConcat_wave:

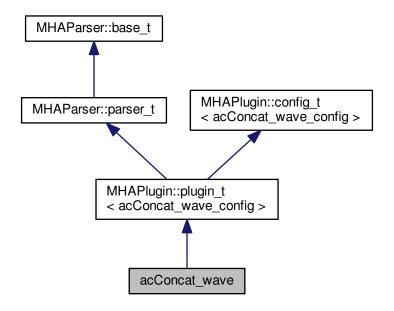

Public Member Functions

acConcat_wave (algo_comm_t &ac, const std::string &chain_name, const std::string &algo_name)

Constructs our plugin.

- ∼acConcat_wave ()
- mha wave t * process (mha wave t *)

Checks for the most recent configuration and defers processing to it.

void prepare (mhaconfig_t &)

Plugin preparation.

void release (void)

Public Attributes

- MHAParser::int_t num_AC
- MHAParser::string_t prefix_names_AC
- MHAParser::vint t samples AC
- MHAParser::string_t name_conAC

Private Member Functions

void update_cfg ()

Private Attributes

MHAEvents::patchbay_t< acConcat_wave > patchbay

Additional Inherited Members

```
5.9.1 Constructor & Destructor Documentation
```

Constructs our plugin.

```
5.9.1.2 acConcat_wave::~acConcat_wave()
```

5.9.2 Member Function Documentation

```
5.9.2.1 mha_wave_t * acConcat_wave::process ( mha wave t * signal )
```

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number of	1
	channels, frames per block, sampling rate.	

Implements MHAPlugin::plugin_t< acConcat_wave_config > (p. 696).

Reimplemented from MHAPlugin::plugin_t< acConcat_wave_config > (p. 697).

- 5.9.2.4 void acConcat_wave::update_cfg() [private]
- 5.9.3 Member Data Documentation
- 5.9.3.1 MHAParser::int_t acConcat_wave::num_AC
- 5.9.3.2 MHAParser::string_t acConcat_wave::prefix_names_AC
- 5.9.3.3 MHAParser::vint_t acConcat_wave::samples_AC
- 5.9.3.4 MHAParser::string_t acConcat_wave::name_conAC
- 5.9.3.5 MHAEvents::patchbay t<acConcat wave> acConcat_wave::patchbay [private]

The documentation for this class was generated from the following files:

- · acConcat wave.h
- acConcat_wave.cpp
- 5.10 acConcat_wave_config Class Reference

Public Member Functions

- acConcat_wave_config (algo_comm_t &ac, const mhaconfig_t in_cfg, acConcat_
 wave *_concat)
- ∼acConcat wave config ()
- mha_wave_t * process (mha_wave_t *)

Public Attributes

```
algo_comm_t & ac
```

- std::vector< std::string > strNames_AC
- std::vector< int > numSamples_AC
- mha_wave_t vGCC
- MHA_AC::waveform_t * vGCC_con

5.10.1 Constructor & Destructor Documentation

- 5.10.1.2 acConcat_wave_config::~acConcat_wave_config()
- 5.10.2 Member Function Documentation
- 5.10.3 Member Data Documentation
- 5.10.3.1 algo comm t& acConcat_wave_config::ac
- 5.10.3.2 std::vector<std::string> acConcat_wave_config::strNames_AC
- 5.10.3.3 std::vector<int> acConcat_wave_config::numSamples_AC
- 5.10.3.4 mha_wave_t acConcat_wave_config::vGCC
- 5.10.3.5 MHA_AC::waveform_t* acConcat_wave_config::vGCC_con

The documentation for this class was generated from the following files:

- acConcat_wave.h
- acConcat_wave.cpp
- 5.11 acmon::ac monitor t Class Reference

A class for converting AC variables to Parser monitors of correct type.

Public Member Functions

ac_monitor_t (MHAParser::parser_t &parent, const std::string &name_, algo_comm
 _t ac, bool use_matrix)

Converts AC variable to parser monitor.

void getvar (algo_comm_t ac)

Update values of monitor.

Public Attributes

• std::string name

name of AC variable and parser monitor

std::string dimstr

columns x rows

MHAParser::vfloat_mon_t mon

Monitor used for real vectors.

· MHAParser::mfloat mon t mon mat

Monitor used for real matrices.

MHAParser::vcomplex_mon_t mon_complex

monitor used for complex vectors

MHAParser::mcomplex_mon_t mon_mat_complex

monitor used for complex matrices

MHAParser::parser_t & p_parser

parent parser to insert monitor into

Private Attributes

· bool use mat

if true, use matrix monitor, else use vector monitor

5.11.1 Detailed Description

A class for converting AC variables to Parser monitors of correct type.

5.11.2 Constructor & Destructor Documentation

```
5.11.2.1 acmon::ac_monitor_t::ac_monitor_t (

MHAParser::parser_t & parent,

const std::string & name_,

algo_comm_t ac,

bool use_matrix )
```

Converts AC variable to parser monitor.

Parameters

parent	The parser to insert a monitor into
name_	The name of the AC variable and the monitor variable
ac	Handle to algorithm communication space
use_matrix	Indicates if a matrix monitor type should be used.

5.11.3 Member Function Documentation

Update values of monitor.

Parameters

ac	Handle to algorithm communication space
----	---

5.11.4 Member Data Documentation

5.11.4.1 std::string acmon::ac_monitor_t::name

name of AC variable and parser monitor

5.11.4.2 std::string acmon::ac_monitor_t::dimstr

columns x rows

5.11.4.3 MHAParser::vfloat_mon_t acmon::ac_monitor_t::mon

Monitor used for real vectors.

5.11.4.4 MHAParser::mfloat_mon_t acmon::ac_monitor_t::mon_mat

Monitor used for real matrices.

5.11.4.5 MHAParser::vcomplex_mon_t acmon::ac_monitor_t::mon_complex

monitor used for complex vectors

5.11.4.6 MHAParser::mcomplex_mon_t acmon::ac_monitor_t::mon_mat_complex

monitor used for complex matrices

5.11.4.7 MHAParser::parser_t& acmon::ac_monitor_t::p_parser

parent parser to insert monitor into


5.11.4.8 bool acmon::ac_monitor_t::use_mat [private]

if true, use matrix monitor, else use vector monitor

The documentation for this class was generated from the following files:

- ac_monitor_type.hh
- ac_monitor_type.cpp
- 5.12 acmon::acmon_t Class Reference

Inheritance diagram for acmon::acmon_t:

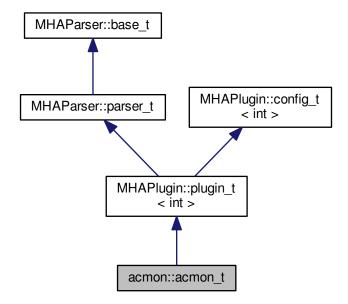

Public Member Functions

```
• acmon_t (const algo_comm_t &, const std::string &, const std::string &)
```

- ~acmon t ()
- void prepare (mhaconfig_t &)
- void release ()
- mha spec t * process (mha spec t *)
- mha_wave_t * process (mha_wave_t *)

Private Member Functions

- void save_vars ()
- void update_recmode ()

Private Attributes

- algo_comm_t ac
- MHAParser::vstring_mon_t varlist
- MHAParser::vstring_mon_t dimensions
- MHAParser::kw t dispmode
- MHAParser::kw_t recmode
- std::vector< ac_monitor_t * > vars
- MHAEvents::patchbay_t< acmon_t > patchbay
- std::string chain
- std::string algo
- bool b_cont
- bool b_snapshot

Additional Inherited Members

5.12.1 Constructor & Destructor Documentation

```
5.12.1.2 acmon::acmon_t::\simacmon_t ( void )
```

5.12.2 Member Function Documentation

Implements MHAPlugin::plugin_t< int > (p. 696).


```
5.12.2.2 void acmon::acmon t::release (
                   void ) [inline],[virtual]
Reimplemented from MHAPlugin::plugin_t< int > (p. 697).
5.12.2.3 mha_spec_t * acmon::acmon_t::process (
                   mha spec t * s)
5.12.2.4 mha wave t * acmon::acmon_t::process (
                   mha wave t * s)
5.12.2.5 void acmon::acmon_t::save_vars() [private]
5.12.2.6 void acmon::acmon_t::update_recmode( ) [private]
5.12.3 Member Data Documentation
5.12.3.1 algo_comm_t acmon::acmon_t::ac [private]
5.12.3.2 MHAParser::vstring mon t acmon::acmon t::varlist [private]
5.12.3.3
        MHAParser::vstring mon tacmon::acmon t::dimensions [private]
5.12.3.4
        MHAParser::kw_t acmon::acmon_t::dispmode [private]
        MHAParser::kw_t acmon::acmon_t::recmode [private]
5.12.3.5
5.12.3.6 std::vector<ac_monitor_t*> acmon::acmon_t::vars [private]
5.12.3.7 MHAEvents::patchbay_t<acmon_t> acmon::acmon_t::patchbay [private]
5.12.3.8
        std::string acmon::acmon_t::chain [private]
5.12.3.9 std::string acmon::acmon_t::algo [private]
5.12.3.10 bool acmon::acmon_t::b_cont [private]
5.12.3.11 bool acmon::acmon_t::b_snapshot [private]
```

The documentation for this class was generated from the following file:

· acmon.cpp

5.13 acPooling_wave Class Reference

Inheritance diagram for acPooling_wave:

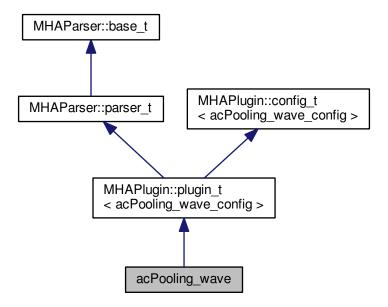

Public Member Functions

acPooling_wave (algo_comm_t &ac, const std::string &chain_name, const std::string &algo_name)

Constructs our plugin.

- ∼acPooling_wave ()
- mha_wave_t * process (mha_wave_t *)

Checks for the most recent configuration and defers processing to it.

void prepare (mhaconfig_t &)

Plugin preparation.

void release (void)

Public Attributes

- MHAParser::int_t numsamples
- MHAParser::int_t pooling_wndlen
- MHAParser::kw_t pooling_type
- MHAParser::float_t upper_threshold
- MHAParser::float_t lower_threshold
- MHAParser::int_t neighbourhood

```
    MHAParser::float_t alpha
```

- MHAParser::string_t p_name
- MHAParser::string_t p_biased_name
- MHAParser::string_t pool_name
- MHAParser::string_t max_pool_ind_name
- MHAParser::string_t like_ratio_name
- MHAParser::vfloat_t prob_bias

Private Member Functions

void update_cfg ()

Private Attributes

MHAEvents::patchbay_t< acPooling_wave > patchbay

Additional Inherited Members

```
5.13.1 Constructor & Destructor Documentation
```

Constructs our plugin.

```
5.13.1.2 acPooling_wave::~acPooling_wave( )
```

5.13.2 Member Function Documentation

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

Parameters

	signal_info	Structure containing a description of the form of the signal (domain, number of	
		channels, frames per block, sampling rate.	
١			

Implements MHAPlugin::plugin_t< acPooling_wave_config > (p. 696).

5.13.3.14 MHAEvents::patchbay_t<acPooling_wave> acPooling_wave::patchbay [private]

The documentation for this class was generated from the following files:

5.13.3.10 MHAParser::string_t acPooling_wave::pool_name

5.13.3.11 MHAParser::string_t acPooling_wave::max_pool_ind_name

5.13.3.12 MHAParser::string_t acPooling_wave::like_ratio_name

5.13.3.13 MHAParser::vfloat tacPooling wave::prob bias

- acPooling_wave.h
- acPooling_wave.cpp

5.14 acPooling_wave_config Class Reference

Public Member Functions

```
    acPooling_wave_config (algo_comm_t &ac, const mhaconfig_t in_cfg, acPooling
        —wave *_pooling)
```

- ~acPooling_wave_config ()
- mha_wave_t * process (mha_wave_t *)
- void insert ()

Public Attributes

- · algo comm t & ac
- std::string raw_p_name
- MHA_AC::waveform_t p
- MHA_AC::waveform_t p_biased
- MHA_AC::waveform_t p_max
- MHA_AC::waveform_t like_ratio
- · mha wave tc
- unsigned int pooling_ind
- unsigned int pooling_option
- unsigned int pooling_size
- float up_thresh
- float low thresh
- int neigh
- float alpha
- MHASignal::waveform_t pool
- MHASignal::waveform_t prob_bias_func

5.14.1 Constructor & Destructor Documentation

- 5.14.1.2 acPooling_wave_config::~acPooling_wave_config()
- 5.14.2 Member Function Documentation
- 5.14.2.1 mha_wave_t * acPooling_wave_config::process (mha_wave_t * wave)
- 5.14.2.2 void acPooling_wave_config::insert ()


- 5.14.3 Member Data Documentation
- 5.14.3.1 algo_comm_t& acPooling_wave_config::ac
- 5.14.3.2 std::string acPooling_wave_config::raw_p_name
- 5.14.3.3 MHA_AC::waveform_t acPooling_wave_config::p
- 5.14.3.4 MHA_AC::waveform_t acPooling_wave_config::p_biased
- 5.14.3.5 MHA_AC::waveform_t acPooling_wave_config::p_max
- 5.14.3.6 MHA AC::waveform tacPooling_wave_config::like_ratio
- 5.14.3.7 mha_wave_t acPooling_wave_config::c
- 5.14.3.8 unsigned int acPooling_wave_config::pooling_ind
- 5.14.3.9 unsigned int acPooling_wave_config::pooling_option
- 5.14.3.10 unsigned int acPooling_wave_config::pooling_size
- 5.14.3.11 float acPooling wave config::up thresh
- 5.14.3.12 float acPooling_wave_config::low_thresh
- 5.14.3.13 int acPooling_wave_config::neigh
- 5.14.3.14 float acPooling_wave_config::alpha
- 5.14.3.15 MHASignal::waveform_t acPooling_wave_config::pool
- 5.14.3.16 MHASignal::waveform_t acPooling_wave_config::prob_bias_func

The documentation for this class was generated from the following files:

- · acPooling wave.h
- acPooling_wave.cpp

5.15 acsave::acsave_t Class Reference

Inheritance diagram for acsave::acsave_t:

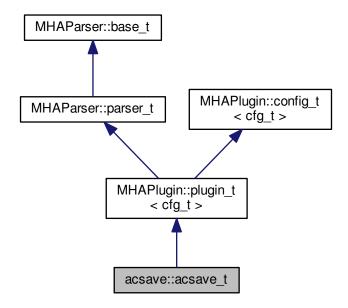

Public Member Functions

- acsave_t (const algo_comm_t &, const std::string &, const std::string &)
- void prepare (mhaconfig_t &)
- void release ()
- mha_spec_t * process (mha_spec_t *)
- mha_wave_t * process (mha_wave_t *)
- void event_start_recording ()
- void event_stop_and_flush ()

Private Types

typedef std::vector< save_var_t * > varlist_t

Private Member Functions

• void process ()

Private Attributes

```
MHAParser::bool_t bflush
MHAParser::kw_t fileformat
MHAParser::string_t fname
MHAParser::float_t reclen
MHAParser::vstring_t variables
varlist_t varlist
std::string chain
std::string algo
bool b_prepared
bool b_flushed
MHAEvents::patchbay_t< acsave_t > patchbay
```

Additional Inherited Members

Reimplemented from MHAPlugin::plugin_t < cfg_t > (p. 697).

```
5.15.3.3 mha_spec_t * acsave::acsave_t::process (
                    mha\_spec\_t * s)
5.15.3.4 mha_wave_t * acsave::acsave_t::process (
                    mha wave t * s)
5.15.3.5 void acsave::acsave_t::event_start_recording()
5.15.3.6 void acsave::acsave_t::event_stop_and_flush()
5.15.3.7 void acsave::acsave_t::process (
                    void ) [private]
5.15.4 Member Data Documentation
5.15.4.1 MHAParser::bool tacsave::acsave_t::bflush [private]
5.15.4.2 MHAParser::kw t acsave::acsave_t::fileformat [private]
5.15.4.3 MHAParser::string_t acsave::acsave_t::fname [private]
5.15.4.4 MHAParser::float tacsave::acsave_t::reclen [private]
5.15.4.5 MHAParser::vstring_t acsave::acsave_t::variables [private]
5.15.4.6 varlist tacsave::acsave_t::varlist [private]
        std::string acsave::acsave_t::chain [private]
5.15.4.8 std::string acsave::acsave_t::algo [private]
5.15.4.9 bool acsave::acsave_t::b_prepared [private]
5.15.4.10 bool acsave::acsave_t::b_flushed [private]
5.15.4.11 MHAEvents::patchbay_t<acsave_t> acsave_t::patchbay [private]
```

The documentation for this class was generated from the following file:

· acsave.cpp

5.16 acsave::cfg_t Class Reference

Public Member Functions

- cfg_t (const algo_comm_t &iac, unsigned int imax_frames, std::vector< std::string > &var_names)
- ~cfg_t ()
- void store_frame ()
- void flush_data (const std::string &, unsigned int)

Private Attributes

- · algo_comm_t ac
- · unsigned int nvars
- save_var_t ** varlist
- unsigned int rec_frames
- unsigned int max_frames

5.16.1 Constructor & Destructor Documentation

```
5.16.1.2 cfg_t::\simcfg_t()
```

5.16.2 Member Function Documentation

```
5.16.2.1 void cfg_t::store_frame ( )
```

This function is called in the processing thread.

This function is called in the configuration thread.

Parameters

filename	Output file name
fmt	Output file format

5.16.3 Member Data Documentation

```
5.16.3.1 algo_comm_t acsave::cfg_t::ac [private]
5.16.3.2 unsigned int acsave::cfg_t::nvars [private]
5.16.3.3 save_var_t** acsave::cfg_t::varlist [private]
5.16.3.4 unsigned int acsave::cfg_t::rec_frames [private]
```

5.16.3.5 unsigned int acsave::cfg_t::max_frames [private]

The documentation for this class was generated from the following file:

· acsave.cpp

5.17 acsave::mat4head t Struct Reference

Public Attributes

- int32_t t
- int32_t rows
- int32 t cols
- int32_t imag
- int32_t namelen

5.17.1 Member Data Documentation

- 5.17.1.1 int32 t acsave::mat4head t::t
- 5.17.1.2 int32_t acsave::mat4head_t::rows
- 5.17.1.3 int32_t acsave::mat4head_t::cols
- 5.17.1.4 int32_t acsave::mat4head_t::imag
- 5.17.1.5 int32_t acsave::mat4head_t::namelen

The documentation for this struct was generated from the following file:

· acsave.cpp

5.18 acsave::save_var_t Class Reference

Public Member Functions

```
• save_var_t (const std::string &, int, const algo_comm_t &)
```

- \sim save_var_t ()
- void store_frame ()
- void save_txt (FILE *, unsigned int)
- void save_mat4 (FILE *, unsigned int)
- void save_m (FILE *, unsigned int)

Public Attributes

• double * data

Private Attributes

- std::string name
- unsigned int **nframes**
- · unsigned int ndim
- · unsigned int maxframe
- algo_comm_t ac
- unsigned int framecnt
- bool b_complex

5.18.1 Constructor & Destructor Documentation

5.18.2 Member Function Documentation

```
5.18.2.1 void acsave::save_var_t::store_frame ( )
```


```
5.18.2.3 void acsave::save_var_t::save_mat4 (
                     FILE * fh,
                     unsigned int writeframes )
5.18.2.4 void acsave::save_var_t::save_m (
                     FILE * fh.
                     unsigned int writeframes )
5.18.3 Member Data Documentation
5.18.3.1 double* acsave::save_var_t::data
5.18.3.2 std::string acsave::save_var_t::name [private]
5.18.3.3 unsigned int acsave::save_var_t::nframes [private]
5.18.3.4 unsigned int acsave::save_var_t::ndim [private]
5.18.3.5 unsigned int acsave::save_var_t::maxframe [private]
5.18.3.6 algo_comm_t acsave::save_var_t::ac [private]
5.18.3.7 unsigned int acsave::save_var_t::framecnt [private]
5.18.3.8 bool acsave::save_var_t::b_complex [private]
```

The documentation for this class was generated from the following file:

acsave.cpp

5.19 acSteer Class Reference

Inheritance diagram for acSteer:

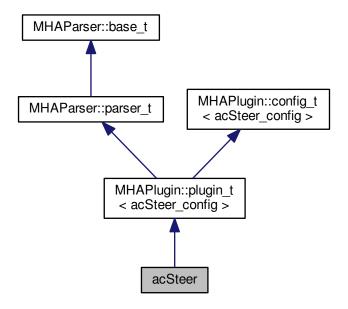

Public Member Functions

acSteer (algo_comm_t &ac, const std::string &chain_name, const std::string &algo_←
name)

Constructs our plugin.

- ~acSteer ()
- mha_spec_t * process (mha_spec_t *)

Thos method is a NOOP.

void prepare (mhaconfig_t &)

Plugin preparation.

void release (void)

Public Attributes

- MHAParser::string_t steerFile
- MHAParser::string_t acSteerName1
- MHAParser::string_t acSteerName2
- MHAParser::int_t nsteerchan
- MHAParser::int_t nrefmic

Private Member Functions

void update_cfg ()

Private Attributes

MHAEvents::patchbay_t< acSteer > patchbay

Additional Inherited Members

```
5.19.1 Constructor & Destructor Documentation
```

```
5.19.1.1 acSteer::acSteer (

algo_comm_t & ac,

const std::string & chain_name,

const std::string & algo name )
```

Constructs our plugin.

```
5.19.1.2 acSteer:: ~acSteer ( )
```

5.19.2 Member Function Documentation

Thos method is a NOOP.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number	
	channels, frames per block, sampling rate.	

Implements MHAPlugin::plugin_t< acSteer_config > (p. 696).

The documentation for this class was generated from the following files:

- · acSteer.h
- acSteer.cpp

5.20 acSteer_config Class Reference

Public Member Functions

- acSteer_config (algo_comm_t &ac, const mhaconfig_t in_cfg, acSteer *acSteer)
- ~acSteer_config ()
- void **insert** ()

Public Attributes

- unsigned int nchan
- unsigned int nfreq
- unsigned int **nsteerchan**
- · unsigned int nrefmic
- unsigned int nangle
- MHA_AC::spectrum_t specSteer1
- MHA_AC::spectrum_t specSteer2

```
5.20.1 Constructor & Destructor Documentation
```


- 5.20.1.2 acSteer_config::~acSteer_config()
- 5.20.2 Member Function Documentation
- 5.20.2.1 void acSteer_config::insert ()
- 5.20.3 Member Data Documentation
- 5.20.3.1 unsigned int acSteer_config::nchan
- 5.20.3.2 unsigned int acSteer_config::nfreq
- 5.20.3.3 unsigned int acSteer_config::nsteerchan
- 5.20.3.4 unsigned int acSteer_config::nrefmic
- 5.20.3.5 unsigned int acSteer_config::nangle
- 5.20.3.6 MHA_AC::spectrum_t acSteer_config::specSteer1
- 5.20.3.7 MHA_AC::spectrum_t acSteer_config::specSteer2

The documentation for this class was generated from the following files:

- · acSteer.h
- · acSteer.cpp

5.21 acTransform wave Class Reference

Inheritance diagram for acTransform_wave:

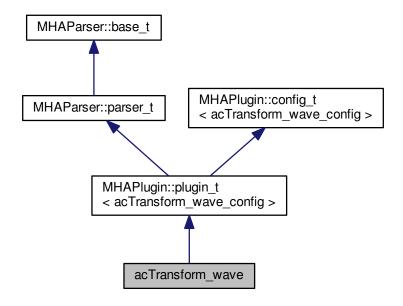

Public Member Functions

acTransform_wave (algo_comm_t &ac, const std::string &chain_name, const std
 ::string &algo_name)

Constructs our plugin.

- ~acTransform_wave ()
- mha_wave_t * process (mha_wave_t *)

Checks for the most recent configuration and defers processing to it.

void prepare (mhaconfig_t &)

Plugin preparation.

void release (void)

Public Attributes

- MHAParser::string_t ang_name
- MHAParser::string_t raw_p_name
- MHAParser::string_t raw_p_max_name
- MHAParser::string_t rotated_p_name
- MHAParser::string_t rotated_p_max_name
- MHAParser::int_t numsamples
- MHAParser::bool_t to_from

Private Member Functions

void update_cfg ()

Private Attributes

MHAEvents::patchbay_t< acTransform_wave > patchbay

Additional Inherited Members

```
5.21.1 Constructor & Destructor Documentation
```

Constructs our plugin.

```
5.21.1.2 acTransform_wave::~acTransform_wave( )
```

5.21.2 Member Function Documentation

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number	
	channels, frames per block, sampling rate.	

Implements MHAPlugin::plugin_t< acTransform_wave_config > (p. 696).

The documentation for this class was generated from the following files:

5.21.3.8 MHAEvents::patchbay_t<acTransform_wave> acTransform_wave::patchbay

· acTransform wave.h

[private]

- acTransform_wave.cpp
- 5.22 acTransform wave config Class Reference

Public Member Functions

- acTransform_wave_config (algo_comm_t &ac, const mhaconfig_t in_cfg, ac
 — Transform_wave *_transform)
- ~acTransform_wave_config ()
- mha_wave_t * process (mha_wave_t *)

Public Attributes

- · algo_comm_t & ac
- std::string ang_name
- std::string raw p name
- std::string raw p max name
- MHA_AC::waveform_t rotated_p
- MHA_AC::int_t rotated_i
- unsigned int offset
- unsigned int resolution
- · unsigned int to from
- 5.22.1 Constructor & Destructor Documentation


- 5.22.1.2 acTransform_wave_config::~acTransform_wave_config()
- 5.22.2 Member Function Documentation
- 5.22.3 Member Data Documentation
- 5.22.3.1 algo_comm_t& acTransform_wave_config::ac
- 5.22.3.2 std::string acTransform_wave_config::ang_name
- 5.22.3.3 std::string acTransform_wave_config::raw_p_name
- 5.22.3.4 std::string acTransform_wave_config::raw_p_max_name
- 5.22.3.5 MHA_AC::waveform_t acTransform_wave_config::rotated_p
- 5.22.3.6 MHA_AC::int_t acTransform_wave_config::rotated_i
- 5.22.3.7 unsigned int acTransform_wave_config::offset
- 5.22.3.8 unsigned int acTransform_wave_config::resolution
- 5.22.3.9 unsigned int acTransform_wave_config::to_from

The documentation for this class was generated from the following files:

- · acTransform wave.h
- acTransform_wave.cpp

5.23 addsndfile::addsndfile_if_t Class Reference

Inheritance diagram for addsndfile::addsndfile_if_t:

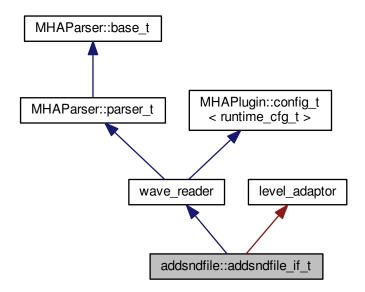

Public Member Functions

- addsndfile_if_t (algo_comm_t, const char *, const char *)
- mha_wave_t * process (mha_wave_t *)
- void prepare (mhaconfig_t &)
- void release ()

Private Member Functions

- void **update** ()
- void change_mode ()
- void set_level ()
- void scan_dir ()

Private Attributes

- MHAParser::string_t filename
- MHAParser::string_t path
- MHAParser::bool_t loop
- MHAParser::float_t level

```
    MHAParser::kw_t levelmode
```

- MHAParser::kw t resamplingmode
- MHAParser::vint t channels
- MHAParser::kw t mode
- MHAParser::float_t ramplen
- MHAParser::int_t startpos
- MHAParser::vint_mon_t mapping
- MHAParser::int_mon_t numchannels
- MHAParser::int_mon_t mhachannels
- MHAParser::int_mon_t active
- MHAParser::string_t search_pattern
- MHAParser::vstring_mon_t search_result
- unsigned int uint_mode
- MHAEvents::patchbay_t< addsndfile_if_t > patchbay

```
Additional Inherited Members
```

```
5.23.1 Constructor & Destructor Documentation
```

5.23.2 Member Function Documentation

Implements MHAPlugin::plugin_t< runtime_cfg_t > (p. 696).

Reimplemented from **MHAPlugin::plugin_t**< **runtime_cfg_t** > (p. 697).


```
5.23.2.4 void addsndfile::addsndfile_if_t::update( ) [private]
5.23.2.5 void addsndfile::addsndfile_if_t::change_mode( ) [private]
5.23.2.6 void addsndfile::addsndfile_if_t::set_level() [private]
5.23.2.7 void addsndfile::addsndfile_if_t::scan_dir( ) [private]
5.23.3 Member Data Documentation
        MHAParser::string_t addsndfile::addsndfile_if_t::filename [private]
5.23.3.1
5.23.3.2 MHAParser::string taddsndfile::addsndfile if t::path [private]
5.23.3.3
        MHAParser::bool taddsndfile::addsndfile_if_t::loop [private]
5.23.3.4
        MHAParser::float t addsndfile::addsndfile if t::level [private]
5.23.3.5
        MHAParser::kw t addsndfile::addsndfile_if_t::levelmode [private]
5.23.3.6
        MHAParser::kw t addsndfile::addsndfile_if_t::resamplingmode [private]
5.23.3.7
        MHAParser::vint t addsndfile::addsndfile if t::channels [private]
5.23.3.8
        MHAParser::kw t addsndfile::addsndfile_if_t::mode [private]
5.23.3.9
        MHAParser::float taddsndfile::addsndfile if t::ramplen [private]
5.23.3.10 MHAParser::int_t addsndfile::addsndfile_if_t::startpos [private]
5.23.3.11 MHAParser::vint mon taddsndfile::addsndfile_if_t::mapping [private]
5.23.3.12 MHAParser::int_mon_t addsndfile::addsndfile_if_t::numchannels [private]
5.23.3.13 MHAParser::int_mon_t addsndfile::addsndfile_if_t::mhachannels [private]
5.23.3.14 MHAParser::int mon taddsndfile::addsndfile_if_t::active [private]
5.23.3.15 MHAParser::string_t addsndfile::addsndfile_if_t::search_pattern [private]
5.23.3.16 MHAParser::vstring mon t addsndfile::addsndfile_if_t::search_result [private]
5.23.3.17 unsigned int addsndfile::addsndfile_if_t::uint_mode [private]
5.23.3.18 MHAEvents::patchbay_t<addsndfile_if_t> addsndfile::addsndfile_if_t::patchbay
         [private]
```

The documentation for this class was generated from the following file:

addsndfile.cpp

5.24 addsndfile::level_adapt_t Class Reference

Inheritance diagram for addsndfile::level_adapt_t:

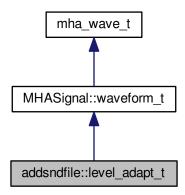

Public Member Functions

- level_adapt_t (mhaconfig_t cf, mha_real_t adapt_len, mha_real_t l_new_, mha_real _t l_old_)
- void update_frame ()
- mha_real_t get_level () const
- bool can_update () const

Private Attributes

- unsigned int ilen
- unsigned int pos
- MHAWindow::fun_t wnd
- mha_real_t l_new
- mha_real_t l_old

Additional Inherited Members

5.24.1 Constructor & Destructor Documentation


- 5.24.2 Member Function Documentation
- 5.24.2.1 void addsndfile::level_adapt_t::update_frame ()
- 5.24.2.2 mha_real_t addsndfile::level_adapt_t::get_level() const [inline]
- **5.24.2.3** bool addsndfile::level_adapt_t::can_update() const [inline]
- 5.24.3 Member Data Documentation
- **5.24.3.1** unsigned int addsndfile::level_adapt_t::ilen [private]
- **5.24.3.2 unsigned int addsndfile::level_adapt_t::pos** [private]
- **5.24.3.3 MHAWindow::fun_t addsndfile::level_adapt_t::wnd** [private]
- **5.24.3.4 mha real t addsndfile::level_adapt_t::l_new** [private]
- **5.24.3.5 mha_real_t** addsndfile::level_adapt_t::l_old [private]

The documentation for this class was generated from the following file:

addsndfile.cpp

5.25 addsndfile::resampled_soundfile_t Class Reference

Reads sound from file and resamples it if necessary and wanted. Inheritance diagram for addsndfile::resampled_soundfile_t:

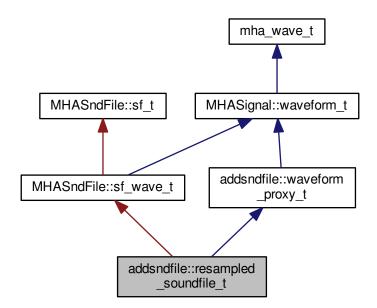

Public Member Functions

resampled_soundfile_t (const std::string &name, float mha_sampling_rate, addsndfile ←
 _resampling_mode_t resampling_mode)

Reads sound from file and resamples if necessary and wanted.

Additional Inherited Members

5.25.1 Detailed Description

Reads sound from file and resamples it if necessary and wanted.

Sound data can then be used by addsndfile.

5.25.2 Constructor & Destructor Documentation

Reads sound from file and resamples if necessary and wanted.

If the sound file does not specify a sampling rate, then the sound data is always used without resampling.

Parameters

name	Sound file name	
mha_sampling_rate	The sampling rate of the MHA signal processing at the point of the addsndfile plugin	
resampling_mode	DONT_RESAMPLE_STRICT: Do not resample, just use the samples from the sound file at the current sample rate, even if the sample rate of the sound file differs. DONT_RESAMPLE_PERMISSIVE: Do not resample, if the sample rate of the MHA differs from the sample rate of the sound file, raise an error. DO_RESAMPLE: Resample.	

Exceptions


MHA_Error (p. 413)	If the sampling rate of the file does not match the sampling rate of
	the MHA and DONT_RESAMPLE_STRICT was requested. If
	resampling failed (e.g. due to non-rational quotient of MHA sampling
	rate and sound file sampling rate).

The documentation for this class was generated from the following file:

addsndfile.cpp

5.26 addsndfile::sndfile t Class Reference

Inheritance diagram for addsndfile::sndfile_t:

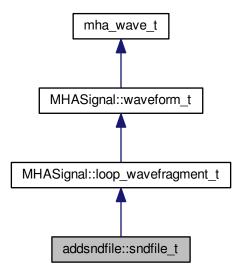

Public Member Functions

sndfile_t (const std::string &name, bool loop, unsigned int level_mode, std::vector< int > channels_, unsigned int nchannels, std::vector< int > &mapping, int &numchannels, unsigned int startpos, float mha_sampling_rate, addsndfile_resampling_mode_t resampling_mode)

Additional Inherited Members

5.26.1 Constructor & Destructor Documentation


The documentation for this class was generated from the following file:

· addsndfile.cpp

5.27 addsndfile::waveform_proxy_t Class Reference

Class helps to specify which instance of MHASignal_waveform_t parent instance is meant in **resampled_soundfile_t** (p. 177).

Inheritance diagram for addsndfile::waveform_proxy_t:

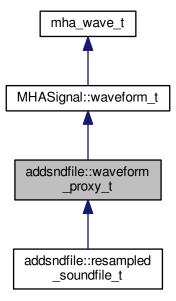

Public Member Functions

waveform_proxy_t (unsigned frames, unsigned channels)

Additional Inherited Members

5.27.1 Detailed Description

Class helps to specify which instance of MHASignal_waveform_t parent instance is meant in **resampled_soundfile_t** (p. 177).

5.27.2 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

· addsndfile.cpp

5.28 ADM::ADM < F > Class Template Reference

Adaptive differential microphone, working for speech frequency range.

Public Member Functions

- **ADM** (F fs, F dist, unsigned lp_order, const F *lp_alphas, unsigned decomb_order, const F *decomb_alphas, F tau_beta=F(50e-3), F mu_beta=F(1e-4))

 Create Adaptive Differential Microphone.
- F process (const F &front, const F &back, const F &external_beta=F(-1))
 ADM (p. 181) processes one frame.
- F beta () const

Private Attributes

- Delay
 F > m_delay_front
- Delay
 F > m_delay_back
- Linearphase_FIR< F > m_lp_bf
- Linearphase_FIR< F > m_lp_result
- Linearphase_FIR< F> m_decomb
- F m beta
- F m_mu_beta
- F m_powerfilter_coeff
- F m_powerfilter_norm
- F m_powerfilter_state

5.28.1 Detailed Description

```
template < class F> class ADM::ADM < F >
```

Adaptive differential microphone, working for speech frequency range.

5.28.2 Constructor & Destructor Documentation

```
5.28.2.1 template < class F > ADM::ADM< F >::ADM ( F fs, F dist, unsigned lp_order, const F * lp_alphas, unsigned decomb_order, const F * decomb_alphas, F tau_beta = F (50e-3), F mu_beta = F (1e-4)
```

Create Adaptive Differential Microphone.

Parameters

fs	Sampling rate / Hz
dist	Distance between physical microphones / m
lp_order	Filter order of FIR lowpass filter used for adaptation
lp_alphas	Pointer to array of alpha coefficients for the lowpass filter used for adaptation. Since this class uses linear phase FIR filters only, only the first half (order/2 + 1) of the coefficients will be read (coefficients for linear-phase FIR filters are symmetric).
decomb_order	Filter order of FIR compensation filter (compensates for comb filter characteristic)
decomb_alphas	Pointer to array of alpha coefficients for the compensation filter used to compensate for the comb filter characteristic. Since this class uses linear phase FIR filters only, only the first half (order/2 + 1)of the coefficients will be read (coefficients for linear-phase FIR filters are symmetric).
tau_beta	Time constant of the lowpass filter used for averaging the power of the output signal
mu_beta	adaption speed

5.28.3 Member Function Documentation

ADM (p. 181) processes one frame.

Parameters

front	The current front input signal sample	
back	The current rear input signal sample	
external_beta	If >= 0, this is used as the "beta" parameter for direction to filter out. Else, the beta parameter is adapted to filtered out a direction so that best reduction of signal intensity from the back hemisphere is achieved.	

Returns

The computed output sample

```
5.28.3.2 template < class F > F ADM::ADM < F >::beta ( ) const [inline]
5.28.4 Member Data Documentation
5.28.4.1 template < class F > Delay < F > ADM::ADM < F >::m_delay_front [private]
5.28.4.2 template < class F > Delay < F > ADM::ADM < F >::m_delay_back [private]
5.28.4.3 template < class F > Linearphase_FIR < F > ADM::ADM < F >::m_lp_bf [private]
5.28.4.4 template < class F > Linearphase_FIR < F > ADM::ADM < F >::m_lp_result [private]
5.28.4.5 template < class F > Linearphase_FIR < F > ADM::ADM < F >::m_decomb [private]
5.28.4.6 template < class F > F ADM::ADM < F >::m_beta [private]
5.28.4.7 template < class F > F ADM::ADM < F >::m_mu_beta [private]
5.28.4.8 template < class F > F ADM::ADM < F >::m_powerfilter_coeff [private]
5.28.4.9 template < class F > F ADM::ADM < F >::m_powerfilter_norm [private]
5.28.4.10 template < class F > F ADM::ADM < F >::m_powerfilter_state [private]
```

The documentation for this class was generated from the following file:

· adm.hh

5.29 ADM::Delay < F > Class Template Reference

A delay-line class which can also do subsample-delays for a limited frequency range below fs/4.

Public Member Functions

- Delay (F samples, F f_design, F fs)
 Create a signal delay object.
- ∼Delay ()
- F process (const F &in sample)

Apply delay to signal.

Private Attributes

unsigned m_fullsamples

Integer part of delay.

F m_coeff

coefficient for 1st order IIR lowpass filter which does the subsample delay

• F m_norm

normalization for the IIR subsample delay filter

• F * m_state

Ringbuffer: Delayline.

unsigned m_now_in

current position for inserting new samples into m_state ringbuffer

5.29.1 Detailed Description

```
template < class F> class ADM::Delay < F >
```

A delay-line class which can also do subsample-delays for a limited frequency range below fs/4.

5.29.2 Constructor & Destructor Documentation

Create a signal delay object.

Parameters

samples	number of samples to delay (may be non-integer)
f_design	subsampledelay is exact for this frequency
fs	sampling frequency

5.29.2.2 template
$$<$$
 class F $>$ ADM::Delay $<$ F $>$:: \sim Delay $($

5.29.3 Member Function Documentation

Apply delay to signal.

Parameters

ample The current input signal sample

Returns

The computed output sample

5.29.4 Member Data Documentation

5.29.4.1 template < class F > unsigned ADM::Delay < F >::m_fullsamples [private] Integer part of delay.

coefficient for 1st order IIR lowpass filter which does the subsample delay

5.29.4.3 template
$$<$$
 class $F > F$ ADM::Delay $< F >$::m_norm [private]

normalization for the IIR subsample delay filter

Ringbuffer: Delayline.

5.29.4.5 template < class F > unsigned ADM::Delay < F >::m_now_in [private]

current position for inserting new samples into m_state ringbuffer

The documentation for this class was generated from the following file:

· adm.hh

5.30 ADM::Linearphase_FIR< F > Class Template Reference

An efficient linear-phase fir filter implementation.

Public Member Functions

- Linearphase_FIR (unsigned order, const F *alphas)
 Create linear-phase FIR filter.
- ∼Linearphase_FIR ()
- F process (const F &in_sample)

Filter one sample with this linear-phase FIR filter.

Private Attributes

unsigned m_order

The filter order of this linear-phase FIR filter.

F * m_alphas

FIR filter coefficients.

• F * m output

Ringbuffer for building future output.

unsigned m now

current start of ringbuffer

5.30.1 Detailed Description

```
template < class F> class ADM::Linearphase_FIR < F >
```

An efficient linear-phase fir filter implementation.

5.30.2 Constructor & Destructor Documentation

```
5.30.2.1 template < class F > ADM::Linearphase_FIR < F > ::Linearphase_FIR (unsigned order, const F * alphas )
```

Create linear-phase FIR filter.

Parameters

order	filter order of this FIR filter. restriction: must be even.	
alphas	pointer to Array of alpha coefficients. Since this class is for linear phase FIR filters	
	only, only (order / 2 + 1) coefficients will be read. (Coefficients for linear-phase FIR	
	filters are symmetric.)	

5.30.2.2 template
$$<$$
 class F $>$ ADM::Linearphase_FIR $<$ F $>$:: \sim Linearphase_FIR $($

5.30.3 Member Function Documentation

5.30.3.1 template
$$<$$
 class F $>$ F ADM::Linearphase_FIR $<$ F $>$::process (const F & in_sample) [inline]

Filter one sample with this linear-phase FIR filter.

Parameters

in_sample	the current input sample
-----------	--------------------------

Returns

the computed output sample

5.30.4 Member Data Documentation

5.30.4.1 template < class F > unsigned ADM::Linearphase_FIR < F >::m_order [private]

The filter order of this linear-phase FIR filter.

5.30.4.2 template < class F > F* ADM::Linearphase_FIR < F >::m_alphas [private]

FIR filter coefficients.

Only m_order / 2 + 1 coefficients need to be stored since coefficients of linear-phase FIR filters are symmetric

5.30.4.3 template < class F > F* ADM::Linearphase_FIR < F >::m_output [private]

Ringbuffer for building future output.

5.30.4.4 template < class F > unsigned ADM::Linearphase_FIR < F >::m_now [private]


current start of ringbuffer

The documentation for this class was generated from the following file:

· adm.hh

5.31 adm_if_t Class Reference

Inheritance diagram for adm_if_t:

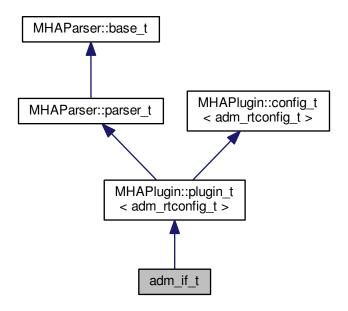

Public Member Functions

- adm_if_t (const algo_comm_t &ac, const std::string &thread_name, const std::string &algo_name)
- mha_wave_t * process (mha_wave_t *in)
- virtual void prepare (mhaconfig_t &)
- virtual void release ()

Private Member Functions

- void **update** ()
- bool is_prepared ()

Private Attributes

```
MHASignal::waveform_t * out
MHAParser::vint_t front_channels
MHAParser::vint_t rear_channels
MHAParser::vfloat_t distances
MHAParser::int_t lp_order
MHAParser::int_t decomb_order
MHAParser::int_t bypass
MHAParser::float_t beta
MHAParser::vfloat_t mu_beta
MHAParser::vfloat_t tau_beta
MHAParser::vfloat_mon_t coeff_lp
```

- unsigned input_channels
- · mha_real_t srate
- MHAEvents::patchbay_t< adm_if_t > patchbay

MHAParser::vfloat_mon_t coeff_decomb

Additional Inherited Members

```
5.31.1 Constructor & Destructor Documentation
```

5.31.2 Member Function Documentation

Implements MHAPlugin::plugin_t < adm_rtconfig_t > (p. 696).

Reimplemented from MHAPlugin::plugin_t< adm_rtconfig_t > (p. 697).

mhaconfig_t & cfg) [virtual]

```
5.31.2.4 void adm_if_t::update( ) [private]
5.31.2.5 bool adm_if_t::is_prepared() [inline], [private]
5.31.3 Member Data Documentation
        MHASignal::waveform t*adm_if_t::out [private]
5.31.3.2 MHAParser::vint tadm_if_t::front_channels [private]
5.31.3.3 MHAParser::vint_t adm_if_t::rear_channels [private]
5.31.3.4 MHAParser::vfloat_t adm_if_t::distances [private]
5.31.3.5 MHAParser::int_t adm_if_t::lp_order [private]
5.31.3.6 MHAParser::int_t adm_if_t::decomb_order [private]
5.31.3.7 MHAParser::int_t adm_if_t::bypass [private]
5.31.3.8 MHAParser::float_t adm_if_t::beta [private]
        MHAParser::vfloat_t adm_if_t::mu_beta [private]
5.31.3.10 MHAParser::vfloat_t adm_if_t::tau_beta [private]
5.31.3.11 MHAParser::vfloat mon tadm_if_t::coeff_lp [private]
5.31.3.12 MHAParser::vfloat mon tadm_if_t::coeff_decomb [private]
5.31.3.13 unsigned adm_if_t::input_channels [private]
5.31.3.14 mha_real_t adm_if_t::srate [private]
5.31.3.15 MHAEvents::patchbay_t<adm_if_t> adm_if_t::patchbay [private]
```

The documentation for this class was generated from the following file:

adm.cpp

5.32 adm_rtconfig_t Class Reference

Public Types

typedef ADM::ADM< mha_real_t > adm_t

Public Member Functions

adm_rtconfig_t (unsigned nchannels_in, unsigned nchannels_out, const std::vector< int > &front_channels, const std::vector< int > &rear_channels, const mha_real_t fs, const std::vector< mha_real_t > &distances, const int lp_order, const int decomb_order, const std::vector< mha_real_t > &tau_beta, const std::vector< mha_real_t > &mu_
beta)

Construct new ADMs.

- virtual ~adm rtconfig t ()
- size_t num_adms () const
- adm_t & adm (unsigned index)

Returns adm object number index.

• int front_channel (unsigned index) const

Returns index of front channel for adm number index.

• int rear channel (unsigned index) const

Returns index of rear channel for adm number index.

Private Member Functions

void check_index (unsigned index) const

Index checking for all internal arrays.

Private Attributes

std::vector< int > front_channels

Indices of channels containing the signals from the front microphones.

std::vector< int > rear_channels

Indices of channels containing the signals from the rear microphones.

MHASignal::waveform_t * lp_coeffs

Lowpass filter coefficients.

std::vector< MHASignal::waveform_t * > decomb_coeffs

Decomb-Filter coefficients.

std::vector< adm_t * > adms

ADMs.

- 5.32.1 Member Typedef Documentation
- 5.32.1.1 typedef ADM::ADM<mha_real_t> adm_rtconfig_t::adm_t
- 5.32.2 Constructor & Destructor Documentation

Construct new ADMs.

Used when configuration changes.

Parameters

nchannels_in	Number of input channels
nchannels_out	Number of output channels
front_channels	Parser's front_channels setting
rear_channels	Parser's front_channels setting
fs	Sampling rate / Hz
distances	Distances between microphones / m
lp_order	Filter order of FIR lowpass filter for adaptation
decomb_order	Filter order of FIR compensation filter (compensates for comb filter characteristic)
tau_beta	Time constants of the lowpass filter used for averaging the power of the output signal used for adaptation
mu_beta	Adaptation step sizes

```
5.32.2.2 adm_rtconfig_t::~adm_rtconfig_t() [virtual]
```

5.32.3 Member Function Documentation

Index checking for all internal arrays.

Exceptions

MHA_Error (p. 413)	if index out of range.
-----------------------------------	------------------------

```
5.32.3.2 size_t adm_rtconfig_t::num_adms() const [inline]
5.32.3.3 adm_t& adm_rtconfig_t::adm (
                    unsigned index ) [inline]
Returns adm object number index.
5.32.3.4 int adm_rtconfig_t::front_channel (
                    unsigned index ) const [inline]
Returns index of front channel for adm number index.
5.32.3.5 int adm_rtconfig_t::rear_channel (
                    unsigned index ) const [inline]
Returns index of rear channel for adm number index.
5.32.4 Member Data Documentation
5.32.4.1 std::vector<int> adm_rtconfig_t::front_channels [private]
Indices of channels containing the signals from the front microphones.
5.32.4.2 std::vector<int> adm_rtconfig_t::rear_channels [private]
Indices of channels containing the signals from the rear microphones.
5.32.4.3 MHASignal::waveform_t*adm_rtconfig_t::lp_coeffs [private]
Lowpass filter coefficients.
5.32.4.4 std::vector<MHASignal::waveform_t*>adm_rtconfig_t::decomb_coeffs [private]
Decomb-Filter coefficients.
5.32.4.5 std::vector<adm_t *> adm_rtconfig_t::adms [private]
ADMs.
```

The documentation for this class was generated from the following file:

adm.cpp

5.33 algo_comm_t Struct Reference

A reference handle for algorithm communication variables.

Public Attributes

• void * handle

AC variable control handle.

int(* insert_var)(void *, const char *, comm_var_t)

Register an AC variable.

int(* insert_var_int)(void *, const char *, int *)

Register an int as an AC variable.

int(* insert_var_float)(void *, const char *, float *)

Register a float as an AC variable.

int(* remove_var)(void *, const char *)

Remove an AC variable.

int(* remove_ref)(void *, void *)

Remove all AC variable which refer to address.

int(* is_var)(void *, const char *)

Test if an AC variable exists.

int(* get_var)(void *, const char *, comm_var_t *)

Get the variable handle of an AC variable.

int(* get_var_int)(void *, const char *, int *)

Get the value of an int AC variable.

int(* get_var_float)(void *, const char *, float *)

Get the value of a float AC variable.

int(* get entries)(void *, char *, unsigned int)

Return a space separated list of all variable names.

const char *(* get_error)(int)

Convert AC error codes into human readable error messages.

5.33.1 Detailed Description

A reference handle for algorithm communication variables.

This structure contains a coontrol handle and a set of function pointers for sharing variables within one processing chain. See also section **Communication between algorithms** (p. 27).

5.33.2 Member Data Documentation

5.33.2.1 algo_comm_t::handle

AC variable control handle.

5.33.2.2 algo_comm_t::insert_var

Register an AC variable.

This function can register a variable to be shared within one chain. If a variable of this name exists it will be overwritten.

Parameters

h	AC handle
n	name of variable. May not be empty. Must not contain space character. The name is
	copied, therefore it is allowed that the char array pointed to gets invalid after return.
V	variable handle of type comm_var_t (p. 232)

Returns

Error code or zero on success

5.33.2.3 algo_comm_t::insert_var_int

Register an int as an AC variable.

This function can register an int variable to be shared with other algorithms. It behaves similar to ac.insert_var.

Parameters

h	AC handle
n	name of variable
V	pointer on the variable

Returns

Error code or zero on success

5.33.2.4 algo_comm_t::insert_var_float

Register a float as an AC variable.

This function can register a float variable to be shared with other algorithms. It behaves similar to ac.insert_var.

Parameters

h	AC handle
n	name of variable
V	pointer on the variable

Returns

Error code or zero on success

5.33.2.5 algo_comm_t::remove_var

Remove an AC variable.

Remove (unregister) an AC variable. After calling this function, the variable is not available to ac.is_var or ac.get_var. The data pointer is not affected.

Parameters

h	AC handle
n	name of variable to be removed

Returns

Error code or zero on success

5.33.2.6 algo_comm_t::remove_ref

Remove all AC variable which refer to address.

This function removes all AC variables whos data field points to the given address.

Parameters

h	AC handle
p	address which should not be referred to any more

Returns

Error code or zero on success

5.33.2.7 algo_comm_t::is_var

Test if an AC variable exists.

This function tests if an AC variable of a given name exists. Use ac.get_var to get information about the variables type and dimension.

Parameters

h	AC handle
n	name of variable

Returns

1 if the variable exists, 0 otherwise

5.33.2.8 algo_comm_t::get_var

Get the variable handle of an AC variable.

This function returns the variable handle **comm_var_t** (p. 232) of a variable of the given name. If no variable of that name exists, an error code is returned.

Parameters

h	AC handle
n	name of variable
V	pointer to a AC variable object

Returns

Error code or zero on success

5.33.2.9 algo_comm_t::get_var_int

Get the value of an int AC variable.

This function returns the value of an int AC variable of the given name. If no variable exists, the variable type is mismatching or more than one entry is registered, a corresponding error code is returned. This is a special version of ac.get_var.

Parameters

h	AC handle
n	name of variable
V	pointer on an int variable to store the result

Returns

Error code or zero on success

5.33.2.10 algo_comm_t::get_var_float

Get the value of a float AC variable.

This function returns the value of a float AC variable of the given name. If no variable exists, the variable type is mismatching or more than one entry is registered, a corresponding error code is returned. This is a special version of ac.get_var.

Parameters

h	AC handle
n	name of variable
V	pointer on a float variable to store the result

Returns

Error code or zero on success

5.33.2.11 algo_comm_t::get_entries

Return a space separated list of all variable names.

This function returns the names of all registered variables, separated by a single space.

Parameters

h AC handle

Return values

ret Character buffer for return value

Parameters

len length of character buffer

Returns

Error code or zero on success. -1: invalid ac handle. -3: not enough room in character buffer to store all variable names.

5.33.2.12 algo_comm_t::get_error

Convert AC error codes into human readable error messages.

Parameters

e Error code

Returns


Error message

The documentation for this struct was generated from the following files:

- · mha.h
- mha_algo_comm.cpp

5.34 altplugs_t Class Reference

Inheritance diagram for altplugs_t:

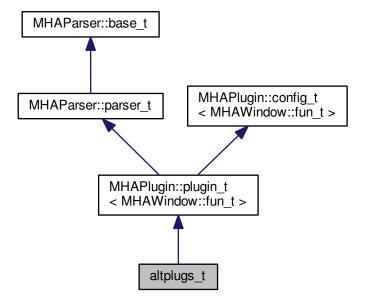

Public Member Functions

- altplugs_t (algo_comm_t iac, const char *chain, const char *algo)
- void prepare (mhaconfig_t &)
- void release ()
- void process (mha_wave_t *, mha_wave_t **)
- void process (mha_spec_t *, mha_wave_t **)
- void process (mha_wave_t *, mha_spec_t **)
- void process (mha_spec_t *, mha_spec_t **)
- virtual std::string parse (const std::string &arg)
- virtual void parse (const char *a1, char *a2, unsigned int a3)

Private Member Functions

```
void event_set_plugs ()
```

- void event_add_plug ()
- void event_delete_plug ()
- void event_select_plug ()
- void update selector list ()
- void update_ramplen ()
- void proc_ramp (mha_wave_t *s)

Private Attributes

- MHAParser::bool_t use_own_ac
- MHAParser::vstring t parser plugs
- MHAParser::string_t add_plug
- MHAParser::string_t delete_plug
- MHAParser::float t ramplen
- MHAParser::kw_t select_plug
- MHAParser::parser_t current
- MHAParser::vstring_mon_t nondefault_labels
- std::vector< mhaplug_cfg_t * > plugs
- mhaplug_cfg_t * selected_plug
- MHAEvents::patchbay t< altplugs t > patchbay
- MHASignal::waveform t * fallback wave
- MHASignal::spectrum_t * fallback_spec
- mhaconfig t cfin
- · mhaconfig_t cfout
- bool prepared
- · bool added via plugs
- unsigned int ramp_counter
- unsigned int ramp_len

Additional Inherited Members

```
5.34.1 Constructor & Destructor Documentation
```

5.34.2 Member Function Documentation

Implements MHAPlugin::plugin_t < MHAWindow::fun_t > (p. 696).

```
5.34.2.2 void altplugs_t::release (
                    void ) [virtual]
Reimplemented from MHAPlugin::plugin_t < MHAWindow::fun_t > (p. 697).
5.34.2.3 void altplugs t::process (
                     mha_wave_t * sln,
                     mha_wave_t ** sOut )
5.34.2.4 void altplugs_t::process (
                     mha_spec_t * sln,
                     mha_wave_t ** sOut )
5.34.2.5 void altplugs t::process (
                     mha_wave_t * sln,
                     mha_spec_t ** sOut )
5.34.2.6 void altplugs_t::process (
                     mha_spec_t * sln,
                     mha spec t ** sOut )
5.34.2.7 std::string altplugs_t::parse (
                    const std::string & arg ) [virtual]
Reimplemented from MHAParser::base_t (p. 603).
5.34.2.8 virtual void altplugs_t::parse (
                     const char * a1,
                     char * a2.
                     unsigned int a3 ) [inline], [virtual]
Reimplemented from MHAParser::base_t (p. 604).
5.34.2.9 void altplugs_t::event_set_plugs() [private]
5.34.2.10 void altplugs_t::event_add_plug( ) [private]
5.34.2.11
         void altplugs_t::event_delete_plug( ) [private]
5.34.2.12 void altplugs_t::event_select_plug( ) [private]
5.34.2.13 void altplugs_t::update_selector_list() [private]
5.34.2.14 void altplugs_t::update_ramplen() [private]
```

```
5.34.2.15 void altplugs_t::proc_ramp (
                     mha_wave_t * s ) [private]
5.34.3 Member Data Documentation
5.34.3.1
        MHAParser::bool_t altplugs_t::use_own_ac [private]
5.34.3.2 MHAParser::vstring_t altplugs_t::parser_plugs [private]
5.34.3.3
        MHAParser::string_t altplugs_t::add_plug [private]
5.34.3.4
        MHAParser::string t altplugs_t::delete_plug [private]
5.34.3.5
        MHAParser::float_t altplugs_t::ramplen [private]
5.34.3.6
        MHAParser::kw_t altplugs_t::select_plug [private]
5.34.3.7
        MHAParser::parser taltplugs_t::current [private]
5.34.3.8
        MHAParser::vstring_mon_t altplugs_t::nondefault_labels [private]
5.34.3.9 std::vector<mhaplug_cfg_t*> altplugs_t::plugs [private]
5.34.3.10 mhaplug_cfg_t* altplugs_t::selected_plug [private]
5.34.3.11 MHAEvents::patchbay_t<altplugs_t> altplugs_t::patchbay [private]
5.34.3.12 MHASignal::waveform_t* altplugs_t::fallback_wave [private]
5.34.3.13 MHASignal::spectrum_t* altplugs_t::fallback_spec [private]
5.34.3.14 mhaconfig taltplugs_t::cfin [private]
5.34.3.15 mhaconfig_t altplugs_t::cfout [private]
5.34.3.16 bool altplugs_t::prepared [private]
5.34.3.17 bool altplugs_t::added_via_plugs [private]
5.34.3.18 unsigned int altplugs_t::ramp_counter [private]
5.34.3.19 unsigned int altplugs_t::ramp_len [private]
```

The documentation for this class was generated from the following file:

· altplugs.cpp

5.35 analysepath_t Class Reference

Public Member Functions

- virtual ~analysepath_t ()
- void rt process (mha wave t *)
- virtual int svc ()

Private Attributes

- MHAProc wave2wave tinner process wave2wave
- MHAProc wave2spec tinner process wave2spec
- MHASignal::waveform_t inner_input
- void * libdata
- mha_fifo_t< mha_real_t > wave_fifo
- mha_fifo_t< MHA_AC::acspace2matrix_t > ac_fifo
- MHA_AC::acspace2matrix_t inner_ac_copy
- MHA_AC::acspace2matrix_t outer_ac_copy
- · algo_comm_t outer_ac
- mha_domain_t inner_out_domain
- MHA_Error inner_error
- bool has_inner_error
- bool flag_terminate_inner_thread
- int input_to_process
- pthread_mutex_t ProcessMutex
- pthread_attr_t attr
- struct sched param priority
- · int scheduler
- pthread_t thread
- pthread_cond_t cond_to_process

5.35.1 Constructor & Destructor Documentation


```
5.35.1.2 analysepath_t::~analysepath_t( ) [virtual]
5.35.2 Member Function Documentation
5.35.2.1 void analysepath_t::rt_process (
                    mha_wave_t * outer_input )
5.35.2.2 int analysepath_t::svc( ) [virtual]
5.35.3
      Member Data Documentation
5.35.3.1
        MHAProc_wave2wave_t analysepath_t::inner_process_wave2wave [private]
5.35.3.2
        MHAProc_wave2spec_t analysepath_t::inner_process_wave2spec [private]
5.35.3.3
        MHASignal::waveform_t analysepath_t::inner_input [private]
5.35.3.4 void* analysepath_t::libdata [private]
5.35.3.5
        mha_fifo_t<mha_real_t> analysepath_t::wave_fifo [private]
5.35.3.6
        mha_fifo_t<MHA_AC::acspace2matrix_t> analysepath_t::ac_fifo [private]
5.35.3.7
        MHA_AC::acspace2matrix_t analysepath_t::inner_ac_copy [private]
5.35.3.8
        MHA_AC::acspace2matrix_t analysepath_t::outer_ac_copy [private]
5.35.3.9
        algo_comm_t analysepath_t::outer_ac [private]
5.35.3.10 mha_domain_t analysepath_t::inner_out_domain [private]
5.35.3.11 MHA_Error analysepath_t::inner_error [private]
5.35.3.12 bool analysepath_t::has_inner_error [private]
5.35.3.13 bool analysepath_t::flag_terminate_inner_thread [private]
5.35.3.14 int analysepath_t::input_to_process [private]
5.35.3.15 pthread_mutex_t analysepath_t::ProcessMutex [private]
5.35.3.16
         pthread_attr_t analysepath_t::attr [private]
5.35.3.17
         struct sched_param analysepath_t::priority [private]
         int analysepath_t::scheduler [private]
5.35.3.18
5.35.3.19
         pthread_t analysepath_t::thread [private]
5.35.3.20
         pthread_cond_t analysepath_t::cond_to_process [private]
```

The documentation for this class was generated from the following file:

· analysispath.cpp

5.36 analysispath_if_t Class Reference

Inheritance diagram for analysispath_if_t:

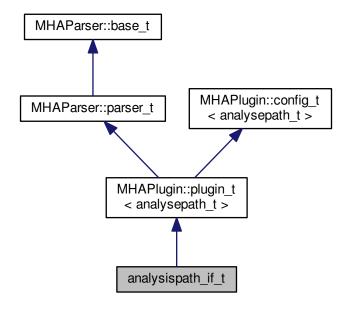

Public Member Functions

- analysispath_if_t (algo_comm_t, std::string, std::string)
- mha_wave_t * process (mha_wave_t *)
- void prepare (mhaconfig_t &)
- void release ()
- ~analysispath_if_t ()

Private Member Functions

• void loadlib ()

Private Attributes

- MHAEvents::patchbay_t< analysispath_if_t > patchbay
- MHAParser::string_t libname
- MHAParser::int_t fragsize
- MHAParser::int_t fifolen
- MHAParser::int_t priority
- MHAParser::vstring_t vars
- plug_t * plug
- std::string chain
- std::string algo
- MHA_AC::acspace2matrix_t * acspace_template

```
Additional Inherited Members
```

```
5.36.1 Constructor & Destructor Documentation
5.36.1.1 analysispath_if_t::analysispath_if_t (
                     algo comm t iac,
                     std::string th,
                     std::string al )
5.36.1.2 analysispath_if_t::~analysispath_if_t ( )
5.36.2 Member Function Documentation
5.36.2.1 mha_wave_t * analysispath_if_t::process (
                     mha_wave_t * s )
5.36.2.2 void analysispath_if_t::prepare (
                     mhaconfig_t & conf ) [virtual]
Implements MHAPlugin::plugin_t< analysepath_t > (p. 696).
5.36.2.3 void analysispath_if_t::release (
                    void ) [virtual]
Reimplemented from MHAPlugin::plugin_t< analysepath_t > (p. 697).
5.36.2.4 void analysispath_if_t::loadlib( ) [private]
5.36.3 Member Data Documentation
5.36.3.1
        MHAEvents::patchbay_t< analysispath_if_t > analysispath_if_t::patchbay
         [private]
5.36.3.2
        MHAParser::string_t analysispath_if_t::libname [private]
5.36.3.3 MHAParser::int_t analysispath_if_t::fragsize [private]
5.36.3.4 MHAParser::int tanalysispath if t::fifolen [private]
5.36.3.5 MHAParser::int_t analysispath_if_t::priority [private]
5.36.3.6 MHAParser::vstring_t analysispath_if_t::vars [private]
5.36.3.7 plug t* analysispath_if_t::plug [private]
5.36.3.8 std::string analysispath_if_t::chain [private]
5.36.3.9 std::string analysispath_if_t::algo [private]
5.36.3.10 MHA AC::acspace2matrix t* analysispath if t::acspace template [private]
```

The documentation for this class was generated from the following file:

analysispath.cpp

5.37 AuditoryProfile::fmap_t Class Reference

A class to store frequency dependent data (e.g., HTL and UCL).

Inherits map< mha_real_t, mha_real_t >.

Public Member Functions

- std::vector< mha_real_t > get_frequencies () const
 Return configured frequencies.
- std::vector < mha_real_t > get_values () const
 Return stored values corresponding to the frequencies.
- bool **isempty** () const

5.37.1 Detailed Description

A class to store frequency dependent data (e.g., HTL and UCL).

5.37.2 Member Function Documentation

5.37.2.1 std::vector < mha real t > AuditoryProfile::fmap t::get frequencies () const

Return configured frequencies.

5.37.2.2 std::vector< mha_real_t > AuditoryProfile::fmap_t::get_values () const

Return stored values corresponding to the frequencies.

5.37.2.3 bool AuditoryProfile::fmap_t::isempty() const [inline]


The documentation for this class was generated from the following files:

- · auditory profile.h
- auditory_profile.cpp

5.38 AuditoryProfile::parser_t Class Reference

Class to make the auditory profile accessible through the parser interface.

Inheritance diagram for AuditoryProfile::parser_t:

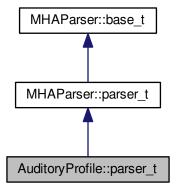

Classes

- · class ear t
- class fmap_t

Public Member Functions

- parser_t ()
- AuditoryProfile::profile_t get_current_profile ()

Private Attributes

- AuditoryProfile::parser_t::ear_t L
- AuditoryProfile::parser_t::ear_t R

Additional Inherited Members

5.38.1 Detailed Description


Class to make the auditory profile accessible through the parser interface.

- 5.38.2 Constructor & Destructor Documentation
- 5.38.2.1 AuditoryProfile::parser_t::parser_t ()
- 5.38.3 Member Function Documentation
- 5.38.3.1 AuditoryProfile::profile_t AuditoryProfile::parser_t::get_current_profile ()
- 5.38.4 Member Data Documentation
- **5.38.4.1 AuditoryProfile::parser_t::ear_t AuditoryProfile::parser_t::L** [private]
- **5.38.4.2 AuditoryProfile::parser_t::ear_t AuditoryProfile::parser_t::R** [private]

The documentation for this class was generated from the following files:

- auditory_profile.h
- auditory_profile.cpp
- 5.39 AuditoryProfile::parser_t::ear_t Class Reference

Inheritance diagram for AuditoryProfile::parser_t::ear_t:

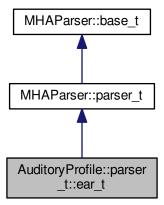

Public Member Functions

- ear_t ()
- AuditoryProfile::profile_t::ear_t get_ear () const

Private Attributes

- AuditoryProfile::parser_t::fmap_t HTL
- AuditoryProfile::parser_t::fmap_t UCL


Additional Inherited Members

- 5.39.1 Constructor & Destructor Documentation
- 5.39.1.1 AuditoryProfile::parser_t::ear_t::ear_t ()
- 5.39.2 Member Function Documentation
- 5.39.2.1 AuditoryProfile::profile_t::ear_t AuditoryProfile::parser_t::ear_t::get_ear() const
- 5.39.3 Member Data Documentation
- **5.39.3.1 AuditoryProfile::parser_t::fmap_t** AuditoryProfile::parser_t::ear_t::HTL [private]
- **5.39.3.2** AuditoryProfile::parser_t::fmap_t AuditoryProfile::parser_t::ear_t::UCL [private]

The documentation for this class was generated from the following files:

- · auditory_profile.h
- auditory_profile.cpp
- 5.40 AuditoryProfile::parser_t::fmap_t Class Reference

Inheritance diagram for AuditoryProfile::parser_t::fmap_t:

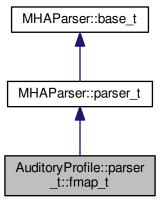

Public Member Functions

- fmap_t (const std::string &name, const std::string &help)
- AuditoryProfile::fmap t get fmap () const

Private Member Functions

• void validate ()

Private Attributes

- MHAEvents::patchbay_t< AuditoryProfile::parser_t::fmap_t > patchbay
- · MHAParser::vfloat tf
- MHAParser::vfloat t value
- std::string name_

Additional Inherited Members

```
5.40.1 Constructor & Destructor Documentation
```

- 5.40.2 Member Function Documentation
- 5.40.2.1 AuditoryProfile::fmap_t AuditoryProfile::parser_t::fmap_t::get_fmap() const
- **5.40.2.2 void AuditoryProfile::parser_t::fmap_t::validate()** [private]
- 5.40.3 Member Data Documentation
- 5.40.3.1 MHAEvents::patchbay_t<AuditoryProfile::parser_t::fmap_t>
 AuditoryProfile::parser_t::fmap_t::patchbay [private]
- **5.40.3.2** MHAParser::vfloat_t AuditoryProfile::parser_t::fmap_t::f [private]
- **5.40.3.3** MHAParser::vfloat_t AuditoryProfile::parser_t::fmap_t::value [private]
- **5.40.3.4 std::string AuditoryProfile::parser_t::fmap_t::name** [private]

The documentation for this class was generated from the following files:

- auditory_profile.h
- auditory_profile.cpp

5.41 AuditoryProfile::profile_t Class Reference

The Auditory Profile class.

Classes

class ear_t

Class for ear-dependent parameters, e.g., audiograms or unilateral loudness scaling.

Public Member Functions

• AuditoryProfile::profile_t::ear_t get_ear (unsigned int channel) const Return ear information of channel number.

Public Attributes

- AuditoryProfile::profile_t::ear_t L
 Left ear data.
- AuditoryProfile::profile_t::ear_t R

 Right ear data.
- 5.41.1 Detailed Description

The Auditory Profile class.

See definition of auditory profile

Todo Give more documentation; implement all parts of the auditory profile.

Currently only the audiogram data is stored.

- 5.41.2 Member Function Documentation

Return ear information of channel number.

5.41.3 Member Data Documentation

5.41.3.1 AuditoryProfile::profile_t::ear_t AuditoryProfile::profile_t::L

Left ear data.

5.41.3.2 AuditoryProfile::profile_t::ear_t AuditoryProfile::profile_t::R

Right ear data.

The documentation for this class was generated from the following file:

auditory_profile.h

5.42 AuditoryProfile::profile_t::ear_t Class Reference

Class for ear-dependent parameters, e.g., audiograms or unilateral loudness scaling.

Public Member Functions

void convert_empty2normal ()

Public Attributes

- AuditoryProfile::fmap_t HTL
- AuditoryProfile::fmap_t UCL
- 5.42.1 Detailed Description

Class for ear-dependent parameters, e.g., audiograms or unilateral loudness scaling.


- 5.42.2 Member Function Documentation
- 5.42.2.1 void AuditoryProfile::profile_t::ear_t::convert_empty2normal()
- 5.42.3 Member Data Documentation
- 5.42.3.1 AuditoryProfile::fmap_t AuditoryProfile::profile_t::ear_t::HTL
- 5.42.3.2 AuditoryProfile::fmap t AuditoryProfile::profile t::ear t::UCL

The documentation for this class was generated from the following files:

- auditory_profile.h
- auditory_profile.cpp

5.43 bbcalib_interface_t Class Reference

Inheritance diagram for bbcalib_interface_t:

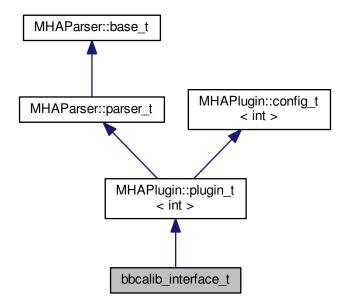

Public Member Functions

- bbcalib_interface_t (const algo_comm_t &, const std::string &, const std::string &)
- ~bbcalib_interface_t ()
- mha_wave_t * process (mha_wave_t *)
- void prepare (mhaconfig_t &)
- void release ()

Private Attributes

- calibrator_t calib_in
- calibrator_t calib_out
- MHAParser::mhapluginloader_t plugloader

Additional Inherited Members

```
5.43.1 Constructor & Destructor Documentation
5.43.1.1 bbcalib_interface_t::bbcalib_interface_t (
                     const algo_comm_t & iac,
                     const std::string & ,
                     const std::string & )
5.43.1.2 bbcalib interface t::~bbcalib interface t()
5.43.2 Member Function Documentation
5.43.2.1 mha_wave_t * bbcalib_interface_t::process (
                     mha_wave_t * s
5.43.2.2 void bbcalib_interface_t::prepare (
                     mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin_t< int > (p. 696).
5.43.2.3 void bbcalib_interface_t::release (
                     void ) [virtual]
Reimplemented from MHAPlugin::plugin_t< int > (p. 697).
5.43.3 Member Data Documentation
5.43.3.1 calibrator_t bbcalib_interface_t::calib_in [private]
5.43.3.2 calibrator t bbcalib_interface_t::calib_out [private]
5.43.3.3 MHAParser::mhapluginloader t bbcalib_interface_t::plugloader [private]
The documentation for this class was generated from the following file:

    transducers.cpp

5.44 calibrator_runtime_layer_t Class Reference
```

• calibrator_runtime_layer_t (bool is_input, const mhaconfig_t &tf, calibrator_

mha_real_t process (mha_wave_t **)

variables_t &vars)

Public Member Functions

Static Private Member Functions

- static unsigned int **firfirlen** (const std::vector< std::vector< float >> &)
- static unsigned int **firfir2fftlen** (unsigned int, const std::vector< std::vector< float >> &)

Private Attributes

- MHAFilter::fftfilter t fir
- MHASignal::quantizer_t quant
- MHASignal::waveform_t gain
- softclipper_t softclip
- bool b_is_input
- · bool b use fir
- bool b_use_clipping
- MHASignal::loop_wavefragment_t speechnoise
- MHASignal::loop wavefragment t::playback mode t pmode
- 5.44.1 Constructor & Destructor Documentation
- 5.44.2 Member Function Documentation
- 5.44.2.2 unsigned int calibrator_runtime_layer_t::firfirlen (
 - const std::vector < std::vector < float > > & fir) [static], [private]
- 5.44.2.3 unsigned int calibrator_runtime_layer_t::firfir2fftlen (unsigned int *fragsize*,

```
const std::vector < std::vector < float > > & fir ) [static], [private]
```

- 5.44.3 Member Data Documentation
- **5.44.3.1** MHAFilter::fftfilter_t calibrator_runtime_layer_t::fir [private]
- **5.44.3.2** MHASignal::quantizer_t calibrator_runtime_layer_t::quant [private]
- **5.44.3.3** MHASignal::waveform_t calibrator_runtime_layer_t::gain [private]


- **5.44.3.4 softclipper_t calibrator_runtime_layer_t::softclip** [private]
- **5.44.3.5** bool calibrator_runtime_layer_t::b_is_input [private]
- **5.44.3.6** bool calibrator_runtime_layer_t::b_use_fir [private]
- **5.44.3.7 bool calibrator_runtime_layer_t::b_use_clipping** [private]
- **5.44.3.8** MHASignal::loop_wavefragment_t calibrator_runtime_layer_t::speechnoise [private]

The documentation for this class was generated from the following file:

transducers.cpp

5.45 calibrator_t Class Reference

Inheritance diagram for calibrator_t:

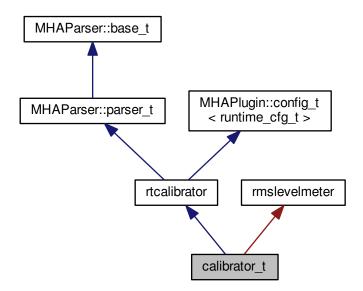

Public Member Functions

```
    calibrator_t (algo_comm_t, bool is_input)
```

- void prepare (mhaconfig_t &tf)
- void release ()
- mha_wave_t * process (mha_wave_t *s)

Private Member Functions

- void update ()
- void update_tau_level ()
- void read levels ()

Private Attributes

- bool b_is_input
- MHAEvents::patchbay_t< calibrator_t > patchbay
- calibrator_variables_t vars
- bool prepared

Additional Inherited Members

```
5.45.1 Constructor & Destructor Documentation
```

5.45.2 Member Function Documentation

Implements MHAPlugin::plugin_t < runtime_cfg_t > (p. 696).

Reimplemented from $MHAPlugin::plugin_t < runtime_cfg_t > (p. 697)$.

The documentation for this class was generated from the following file:

transducers.cpp

5.46 calibrator_variables_t Class Reference

Public Member Functions

calibrator_variables_t (bool is_input, MHAParser::parser_t &parent)

Public Attributes

- MHAParser::vfloat_t peaklevel
- MHAParser::mfloat t fir
- MHAParser::int t nbits
- MHAParser::float_t tau_level
- MHAParser::kw_t spnoise_mode
- MHAParser::vint_t spnoise_channels
- MHAParser::float_t spnoise_level
- MHAParser::vfloat mon t rmslevel
- MHAParser::parser_t spnoise_parser
- MHAParser::float_mon_t srate
- MHAParser::int_mon_t fragsize
- MHAParser::int_mon_t num_channels
- MHAParser::parser_t config_parser
- softclipper_variables_t softclip
- MHAParser::bool_t do_clipping

```
5.46.1 Constructor & Destructor Documentation
5.46.1.1 calibrator variables t::calibrator variables t (
                      bool is input,
                      MHAParser::parser t & parent )
5.46.2 Member Data Documentation
5.46.2.1
         MHAParser::vfloat_t calibrator_variables_t::peaklevel
5.46.2.2
         MHAParser::mfloat t calibrator_variables_t::fir
         MHAParser::int t calibrator_variables_t::nbits
5.46.2.3
         MHAParser::float t calibrator variables t::tau level
         MHAParser::kw_t calibrator_variables_t::spnoise_mode
5.46.2.5
5.46.2.6
         MHAParser::vint t calibrator_variables_t::spnoise_channels
5.46.2.7
         MHAParser::float t calibrator_variables_t::spnoise_level
5.46.2.8
         MHAParser::vfloat mon t calibrator_variables_t::rmslevel
         MHAParser::parser t calibrator variables t::spnoise parser
5.46.2.10 MHAParser::float mon t calibrator variables t::srate
5.46.2.11
         MHAParser::int mon t calibrator variables t::fragsize
5.46.2.12 MHAParser::int mon t calibrator_variables_t::num_channels
5.46.2.13 MHAParser::parser_t calibrator_variables_t::config_parser
5.46.2.14 softclipper_variables_t calibrator_variables_t::softclip
5.46.2.15 MHAParser::bool t calibrator variables t::do clipping
```

The documentation for this class was generated from the following file:

· transducers.cpp

5.47 cfg_t Class Reference

Public Member Functions

- cfg_t (mha_real_t tau_attack, mha_real_t tau_decay, unsigned int nch, mha_real_←
 t start_limit, mha_real_t slope_db, mha_real_t fs)
- cfg_t (unsigned int, unsigned int)
- cfg_t (mhaconfig_t chcfg, mha_real_t newlev, bool replace, mha_real_t len)
- void process (mha_wave_t *)
- void process (mha_spec_t *)

Public Attributes

- mha_real_t start_lin
- · mha_real_t alpha
- MHAFilter::o1flt_lowpass_t attack
- MHAFilter::o1flt_maxtrack_t decay
- · unsigned int channel

Private Attributes

- mha_real_t gain_wave_
- mha_real_t gain_spec_
- bool replace_
- bool use_frozen_
- MHASignal::waveform t frozen noise
- unsigned int pos

5.47.1 Constructor & Destructor Documentation

```
5.47.1.1 cfg_t::cfg_t (

mha_real_t tau_attack,
mha_real_t tau_decay,
unsigned int nch,
mha_real_t start_limit,
mha_real_t slope_db,
mha_real_t fs )

5.47.1.2 cfg_t::cfg_t (
```

unsigned int *ichannel*, unsigned int *numchannels*)


```
5.47.1.3 cfg_t::cfg_t (
                     mhaconfig_t chcfg,
                     mha real t newlev,
                     bool replace,
                     mha_real_t len )
5.47.2 Member Function Documentation
5.47.2.1 void cfg_t::process (
                     mha_wave_t * s ) [inline]
5.47.2.2 void cfg t::process (
                     mha_spec_t * s ) [inline]
5.47.3 Member Data Documentation
5.47.3.1 mha_real_t cfg_t::start_lin
5.47.3.2 mha_real_t cfg_t::alpha
5.47.3.3 MHAFilter::o1flt lowpass t cfg_t::attack
5.47.3.4
        MHAFilter::o1flt_maxtrack_t cfg_t::decay
5.47.3.5 unsigned int cfg t::channel
5.47.3.6
        mha_real_t cfg_t::gain_wave_ [private]
5.47.3.7 mha_real_t cfg_t::gain_spec_ [private]
5.47.3.8
        bool cfg_t::replace_ [private]
5.47.3.9 bool cfg_t::use_frozen_ [private]
5.47.3.10 MHASignal::waveform_t cfg_t::frozen_noise_ [private]
5.47.3.11 unsigned int cfg_t::pos [private]
```

The documentation for this class was generated from the following files:

- softclip.cpp
- example6.cpp
- noise.cpp

5.48 coherence::cohflt_if_t Class Reference

Inheritance diagram for coherence::cohflt_if_t:

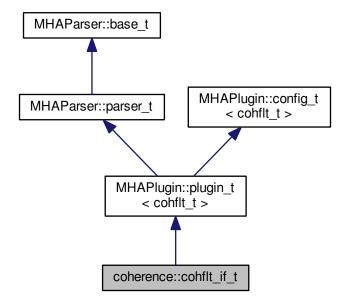

Public Member Functions

- cohflt_if_t (const algo_comm_t &, const std::string &, const std::string &)
- void prepare (mhaconfig_t &)
- void release ()
- mha_spec_t * process (mha_spec_t *)

Private Member Functions

• void update ()

Private Attributes

- MHAEvents::patchbay_t< cohflt_if_t > patchbay
- vars_t vars
- · const std::string algo

```
Additional Inherited Members
```


```
5.48.1 Constructor & Destructor Documentation
5.48.1.1 coherence::cohflt_if_t::cohflt_if_t (
                     const algo_comm_t & ac,
                     const std::string & th,
                     const std::string & al )
5.48.2 Member Function Documentation
5.48.2.1 void coherence::cohflt_if_t::prepare (
                     mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin t < cohflt t > (p. 696).
5.48.2.2 void coherence::cohflt_if_t::release (
                     void ) [virtual]
Reimplemented from MHAPlugin::plugin_t < cohflt_t > (p. 697).
5.48.2.3 mha spec t * coherence::cohflt_if_t::process (
                     mha_spec_t * s )
5.48.2.4 void coherence::cohflt_if_t::update( ) [private]
5.48.3 Member Data Documentation
5.48.3.1 MHAEvents::patchbay_t<cohflt_if_t> coherence::cohflt_if_t::patchbay [private]
5.48.3.2 vars_t coherence::cohflt_if_t::vars [private]
5.48.3.3 const std::string coherence::cohflt if t::algo [private]
```

The documentation for this class was generated from the following file:

coherence.cpp

5.49 coherence::cohflt_t Class Reference

Inheritance diagram for coherence::cohflt_t:

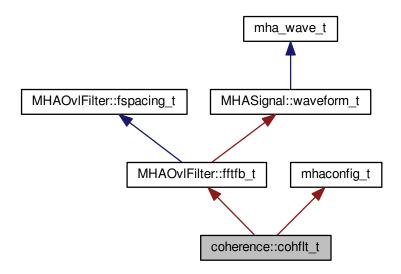

Public Member Functions

- cohflt_t (vars_t &v, const mhaconfig_t &icf, algo_comm_t iac, const std::string &name)
- mha spec t * process (mha spec t *)
- void insert ()

Private Attributes

- unsigned int **nbands**
- bool avg_ipd
- mha_complex_t cg
- float g
- float c_scale
- float **c_min**
- MHASignal::waveform_t alpha
- · float limit
- MHAFilter::o1flt_lowpass_t lp1r
- MHAFilter::o1flt_lowpass_t lp1i
- MHA_AC::spectrum_t coh_c
- MHA_AC::waveform_t coh_rlp
- MHASignal::waveform_t gain
- MHASignal::delay_wave_t gain_delay

- MHASignal::spectrum_t s_out
- bool binvert
- MHAFilter::o1flt_lowpass_t lp1ltg
- bool b_ltg
- std::vector< float > staticgain

Additional Inherited Members

```
5.49.1 Constructor & Destructor Documentation
5.49.1.1 coherence::cohflt_t::cohflt_t (
                     vars t& v,
                     const mhaconfig t & icf,
                     algo comm t iac,
                     const std::string & name )
5.49.2 Member Function Documentation
5.49.2.1 mha spec t * coherence::cohflt_t::process (
                     mha spec t * s)
5.49.2.2 void coherence::cohflt t::insert ( )
5.49.3 Member Data Documentation
5.49.3.1 unsigned int coherence::cohflt_t::nbands [private]
5.49.3.2 bool coherence::cohflt_t::avg_ipd [private]
5.49.3.3 mha_complex_t coherence::cohflt_t::cg [private]
5.49.3.4 float coherence::cohflt_t::g [private]
5.49.3.5 float coherence::cohflt_t::c_scale [private]
5.49.3.6 float coherence::cohflt_t::c_min [private]
5.49.3.7
        MHASignal::waveform_t coherence::cohflt_t::alpha [private]
5.49.3.8 float coherence::cohflt_t::limit [private]
```

5.49.3.9 MHAFilter::o1flt_lowpass_t coherence::cohflt_t::lp1r [private]


```
5.49.3.10 MHAFilter::o1flt_lowpass_t coherence::cohflt_t::lp1i [private]
5.49.3.11 MHA_AC::spectrum_t coherence::cohflt_t::coh_c [private]
5.49.3.12 MHA_AC::waveform_t coherence::cohflt_t::coh_rlp [private]
5.49.3.13 MHASignal::waveform_t coherence::cohflt_t::gain [private]
5.49.3.14 MHASignal::delay_wave_t coherence::cohflt_t::gain_delay [private]
5.49.3.15 MHASignal::spectrum_t coherence::cohflt_t::s_out [private]
5.49.3.16 bool coherence::cohflt_t::blnvert [private]
5.49.3.17 MHAFilter::o1flt_lowpass_t coherence::cohflt_t::lp1ltg [private]
5.49.3.18 bool coherence::cohflt_t::b_ltg [private]
5.49.3.19 std::vector<float> coherence::cohflt_t::staticgain [private]
```

The documentation for this class was generated from the following file:

coherence.cpp

5.50 coherence::vars_t Class Reference

Inheritance diagram for coherence::vars_t:

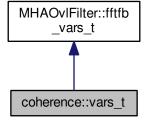

Public Member Functions

vars_t (MHAParser::parser_t *)

Public Attributes

- MHAParser::kw_t tau_unitMHAParser::vfloat t tau
- MHAParser::vfloat_t alpha
- MHAParser::float_t limit
- MHAParser::vfloat_t mapping
- MHAParser::kw t average
- MHAParser::bool_t invert
- MHAParser::bool_t ltgcomp
- MHAParser::vfloat_t ltgtau
- MHAParser::vfloat_t staticgain
- MHAParser::int_t delay
- 5.50.1 Constructor & Destructor Documentation
- 5.50.1.1 coherence::vars_t::vars_t (


 MHAParser::parser t * p)
- 5.50.2 Member Data Documentation
- 5.50.2.1 MHAParser::kw_t coherence::vars_t::tau_unit
- 5.50.2.2 MHAParser::vfloat_t coherence::vars_t::tau
- 5.50.2.3 MHAParser::vfloat_t coherence::vars_t::alpha
- 5.50.2.4 MHAParser::float_t coherence::vars_t::limit
- 5.50.2.5 MHAParser::vfloat t coherence::vars_t::mapping
- 5.50.2.6 MHAParser::kw_t coherence::vars_t::average
- 5.50.2.7 MHAParser::bool_t coherence::vars_t::invert
- 5.50.2.8 MHAParser::bool_t coherence::vars_t::ltgcomp
- 5.50.2.9 MHAParser::vfloat_t coherence::vars_t::ltgtau
- 5.50.2.10 MHAParser::vfloat t coherence::vars t::staticgain
- 5.50.2.11 MHAParser::int t coherence::vars_t::delay

The documentation for this class was generated from the following file:

· coherence.cpp

5.51 combc_if_t Class Reference

Inheritance diagram for combc_if_t:

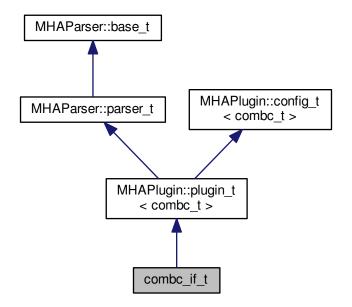

Public Member Functions

- combc_if_t (const algo_comm_t &, const std::string &, const std::string &)
- void prepare (mhaconfig_t &)
- mha_wave_t * process (mha_wave_t *)
- mha_spec_t * process (mha_spec_t *)

Private Attributes

- MHAParser::int_t outchannels
- MHAParser::bool_t interleaved
- MHAParser::string_t channel_gain_name
- MHAParser::string_t element_gain_name

Additional Inherited Members

```
5.51.1 Constructor & Destructor Documentation
5.51.1.1 combc_if_t::combc_if_t (
                    const algo comm t & iac,
                    const std::string & ,
                    const std::string & )
5.51.2 Member Function Documentation
5.51.2.1 void combc_if_t::prepare (
                    mhaconfig t&chcfg) [virtual]
Implements MHAPlugin::plugin_t < combc_t > (p. 696).
5.51.2.2 mha_wave_t * combc_if_t::process (
                    mha wave t * s)
5.51.2.3 mha_spec_t * combc_if_t::process (
                    mha\_spec\_t * s)
5.51.3 Member Data Documentation
5.51.3.1 MHAParser::int tcombc_if_t::outchannels [private]
5.51.3.2 MHAParser::bool_t combc_if_t::interleaved [private]
5.51.3.3 MHAParser::string t combc_if_t::channel_gain_name [private]
        MHAParser::string t combc if t::element gain name [private]
```

The documentation for this class was generated from the following file:

combinechannels.cpp

5.52 combc_t Class Reference

Public Member Functions

- combc_t (algo_comm_t ac, mhaconfig_t cfg_input, mhaconfig_t cfg_output, std ::vector < float > channel_gains, const std::string &element_gain_name, bool interleaved)
- mha_wave_t * process (mha_wave_t *s)
- mha_spec_t * process (mha_spec_t *s)

Private Attributes

```
    algo_comm_t ac_

    bool interleaved

    unsigned int nbands

    MHASignal::waveform_t w_out

    MHASignal::spectrum t s out

   std::vector< mha_real_t > channel_gains_
   std::string element_gain_name_
5.52.1 Constructor & Destructor Documentation
5.52.1.1 combc_t::combc_t (
                    algo_comm_t ac,
                    mhaconfig_t cfg_input,
                    mhaconfig t cfg_output,
                    std::vector< float > channel_gains,
                    const std::string & element_gain_name,
                    bool interleaved )
5.52.2 Member Function Documentation
5.52.2.1 mha_wave_t * combc_t::process (
                    mha_wave_t * s )
5.52.2.2 mha_spec_t * combc_t::process (
                    mha_spec_t * s )
5.52.3 Member Data Documentation
5.52.3.1 algo_comm_t combc_t::ac_ [private]
5.52.3.2 bool combc_t::interleaved_ [private]
5.52.3.3 unsigned int combc_t::nbands [private]
5.52.3.4
        MHASignal::waveform_t combc_t::w_out [private]
5.52.3.5 MHASignal::spectrum_t combc_t::s_out [private]
5.52.3.6 std::vector<mha_real_t> combc_t::channel_gains_ [private]
        std::string combc_t::element_gain_name_ [private]
```

The documentation for this class was generated from the following file:

combinechannels.cpp

5.53 comm_var_t Struct Reference

Algorithm communication variable structure.

Public Attributes

• unsigned int data_type

Type of data.

unsigned int num entries

Number of entries.

· unsigned int stride

length of one row (C interpretation) or of one column (Fortran interpretation)

void * data

Pointer to variable data.

5.53.1 Detailed Description

Algorithm communication variable structure.

Algorithm communication variables (AC variables) are objects of this type. The member data is a pointer to the variable 'data'. This pointer has to be valid for the lifetime of this AC variable. The member 'data_type' can be one of the predefined types or any user defined type. The member 'num_entries' describes the number of elements of this base type stored at the pointer address.

```
An AC variable can be registered with the \ref algo_comm_t::insert_var "insert_var" function.
```

5.53.2 Member Data Documentation

5.53.2.1 comm_var_t::data_type

Type of data.

This can be one of the predefined types

- MHA AC CHAR
- · MHA AC INT
- MHA AC MHAREAL
- · MHA AC FLOAT
- · MHA AC DOUBLE
- MHA AC MHACOMPLEX
- MHA AC VEC FLOAT or any user defined type with a value greater than
- MHA_AC_USER

5.53.2.2 comm_var_t::num_entries

Number of entries.

5.53.2.3 comm_var_t::stride

length of one row (C interpretation) or of one column (Fortran interpretation)

5.53.2.4 comm_var_t::data


Pointer to variable data.

The documentation for this struct was generated from the following files:

- · mha.h
- mha_algo_comm.cpp

5.54 cpuload_t Class Reference

Inheritance diagram for cpuload_t:

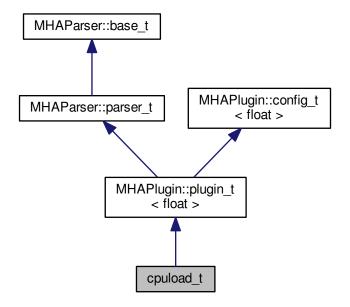

Public Member Functions

```
cpuload_t (algo_comm_t, const char *, const char *)
mha_spec_t * process (mha_spec_t *)
mha_wave_t * process (mha_wave_t *)
void prepare (mhaconfig_t &)
```

Private Member Functions

- void compute_something ()
- void compute_something_else ()

Private Attributes

- MHAParser::float_t factor
- MHAParser::bool_t use_sine
- · float phase
- · volatile float result
- std::vector< float > table

Additional Inherited Members

```
5.54.1 Constructor & Destructor Documentation
```

5.54.2 Member Function Documentation

Implements MHAPlugin::plugin_t< float > (p. 696).

mhaconfig_t & cf) [virtual]

```
5.54.2.4 void cpuload_t::compute_something() [inline], [private]
5.54.2.5 void cpuload_t::compute_something_else() [inline], [private]
5.54.3 Member Data Documentation
5.54.3.1 MHAParser::float_t cpuload_t::factor [private]
5.54.3.2 MHAParser::bool_t cpuload_t::use_sine [private]
5.54.3.3 float cpuload_t::phase [private]
5.54.3.4 volatile float cpuload_t::result [private]
```


The documentation for this class was generated from the following file:

5.54.3.5 std::vector<**float**> **cpuload_t::table** [private]

· cpuload.cpp

5.55 db_if_t Class Reference

Inheritance diagram for db_if_t:

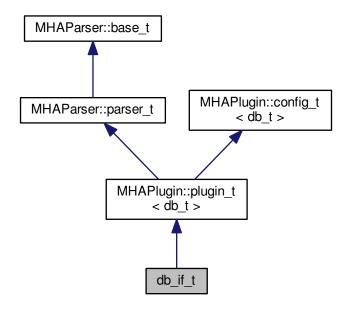

Public Member Functions

```
    db_if_t (algo_comm_t, std::string, std::string)
    mha_wave_t * process (mha_wave_t *)
```

- void prepare (mhaconfig_t &)
- void release ()
- ~db_if_t ()

Private Attributes

- MHAEvents::patchbay_t< db_if_t > patchbay
- MHAParser::int_t fragsize
- MHAParser::mhapluginloader_t plugloader
- std::string chain
- std::string algo
- bool bypass

Additional Inherited Members

```
5.55.1 Constructor & Destructor Documentation
```

```
mha_wave_t * s )
```

Implements MHAPlugin::plugin_t < $db_t > (p. 696)$.

Reimplemented from **MHAPlugin::plugin_t** < **db_t** > (p. 697).

5.55.3 Member Data Documentation

```
5.55.3.1 MHAEvents::patchbay_t < db_if_t > db_if_t::patchbay [private]
```

```
5.55.3.2 MHAParser::int_t db_if_t::fragsize [private]
```

5.55.3.3 MHAParser::mhapluginloader_t db_if_t::plugloader [private]

```
5.55.3.4 std::string db_if_t::chain [private]
```


5.55.3.5 std::string db_if_t::algo [private]

The documentation for this class was generated from the following file:

· db.cpp

5.56 db_t Class Reference

Inheritance diagram for db_t:

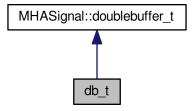

Public Member Functions

- **db_t** (unsigned int outer_fragsize, unsigned int inner_fragsize, unsigned int nch_in, unsigned int nch_out, **MHAParser::mhapluginloader_t** &plug)
- mha_wave_t * inner_process (mha_wave_t *)

Private Attributes

MHAParser::mhapluginloader_t & plugloader

Additional Inherited Members

```
5.56.1 Constructor & Destructor Documentation
```

5.56.2 Member Function Documentation

```
5.56.2.1 mha\_wave\_t * db\_t::inner\_process ( mha\_wave\_t * s )  [virtual]
```

Implements MHASignal::doublebuffer_t (p. 737).

5.56.3 Member Data Documentation


5.56.3.1 MHAParser::mhapluginloader_t& db_t::plugloader [private]

The documentation for this class was generated from the following file:

· db.cpp

5.57 dc::dc_if_t Class Reference

Inheritance diagram for dc::dc_if_t:

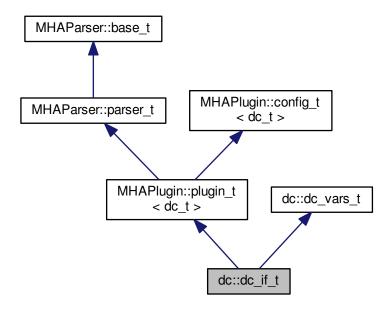

Public Member Functions

- dc_if_t (const algo_comm_t &ac_, const std::string &th_, const std::string &al_)
- void prepare (mhaconfig_t &tf)
- mha_wave_t * process (mha_wave_t *)
- mha_spec_t * process (mha_spec_t *)

Private Member Functions

- void update_monitors ()
 - Called from within the processing routines: updates the monitor variables.
- void update ()

Called by MHA configuration change event mechanism: creates new runtime configuration.

Private Attributes

- std::string algo
- wideband_inhib_vars_t wbinhib
- MHAEvents::patchbay_t< dc_if_t > patchbay

```
Additional Inherited Members
```


```
5.57.1 Constructor & Destructor Documentation
5.57.1.1 dc::dc_if_t::dc_if_t (
                     const algo_comm_t & ac_,
                     const std::string & th_,
                     const std::string & al )
5.57.2 Member Function Documentation
5.57.2.1 void dc::dc_if_t::prepare (
                     mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin t < dc \ t > (p. 696).
5.57.2.2 mha_wave_t * dc::dc_if_t::process (
                     mha_wave_t * s_in )
5.57.2.3 mha_spec_t * dc::dc_if_t::process (
                     mha spec t * s_in)
5.57.2.4 void dc::dc_if_t::update_monitors() [private]
Called from within the processing routines: updates the monitor variables.
5.57.2.5 void dc::dc if t::update() [private]
Called by MHA configuration change event mechanism: creates new runtime configuration.
5.57.3 Member Data Documentation
5.57.3.1 std::string dc::dc_if_t::algo [private]
        wideband inhib vars t dc::dc_if_t::wbinhib [private]
5.57.3.3 MHAEvents::patchbay_t<dc_if_t> dc::dc_if_t::patchbay [private]
```

The documentation for this class was generated from the following file:

dc.cpp

5.58 dc::dc t Class Reference

Inheritance diagram for dc::dc_t:

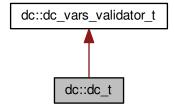

Public Member Functions

- dc_t (dc_vars_t vars, mha_real_t filter_rate, unsigned int nch, algo_comm_t ac, mha
 _domain_t domain, unsigned int fftlen, std::string algo)
- mha_wave_t * process (mha_wave_t *)
- mha_spec_t * process (mha_spec_t *, wb_inhib_cfg_t *wbinhib)
- void explicit_insert ()
- unsigned get_nbands () const

Number of frequency bands accessor.

- const MHASignal::waveform t & get level in db () const
- const MHASignal::waveform_t & get_level_in_db_adjusted () const

Private Attributes

- std::vector< MHATableLookup::linear_table_t > gt
- MHAFilter::o1flt lowpass t rmslevel
- MHAFilter::o1flt_lowpass_t attack
- MHAFilter::o1flt_maxtrack_t decay
- bool powersum
- bool bypass
- unsigned int naudiochannels
- unsigned int nbands
- MHA_AC::waveform_t level_in_db
- MHA_AC::waveform_t level_in_db_adjusted
- MHA_AC::waveform_t inhib_gain
- MHASignal::waveform_t max_level_difference
- unsigned int k_nyquist

Additional Inherited Members

```
5.58.1 Constructor & Destructor Documentation
5.58.1.1 dc::dc_t::dc_t (
                    dc vars t vars,
                    mha real t filter_rate,
                    unsigned int nch,
                    algo comm t ac,
                    mha_domain_t domain,
                    unsigned int fftlen,
                    std::string algo )
5.58.2 Member Function Documentation
5.58.2.1 mha wave t * dc::dc_t::process (
                    mha wave t * s)
5.58.2.2 mha_spec_t * dc::dc_t::process (
                    mha spec t * s,
                    wb_inhib_cfg_t * wbinhib )
5.58.2.3 void dc::dc_t::explicit_insert ( )
5.58.2.4 unsigned dc::dc_t::get_nbands ( ) const [inline]
Number of frequency bands accessor.
5.58.2.5 const MHASignal::waveform_t& dc::dc_t::get_level_in_db( ) const [inline]
5.58.2.6 const MHASignal::waveform_t& dc::dc_t::get_level_in_db_adjusted ( ) const
         [inline]
5.58.3 Member Data Documentation
5.58.3.1 std::vector<MHATableLookup::linear_table_t> dc::dc_t::gt [private]
5.58.3.2
        MHAFilter::o1flt lowpass t dc::dc_t::rmslevel [private]
5.58.3.3 MHAFilter::o1flt_lowpass_t dc::dc_t::attack [private]
5.58.3.4
        MHAFilter::o1flt_maxtrack_t dc::dc_t::decay [private]
5.58.3.5 booldc::dc_t::powersum [private]
```


```
5.58.3.6 bool dc::dc_t::bypass [private]
5.58.3.7 unsigned int dc::dc_t::naudiochannels [private]
5.58.3.8 unsigned int dc::dc_t::nbands [private]
5.58.3.9 MHA_AC::waveform_t dc::dc_t::level_in_db [private]
5.58.3.10 MHA_AC::waveform_t dc::dc_t::level_in_db_adjusted [private]
5.58.3.11 MHA_AC::waveform_t dc::dc_t::inhib_gain [private]
5.58.3.12 MHASignal::waveform_t dc::dc_t::max_level_difference [private]
5.58.3.13 unsigned int dc::dc_t::k_nyquist [private]
```

The documentation for this class was generated from the following file:

· dc.cpp

5.59 dc::dc_vars_t Class Reference

Inheritance diagram for dc::dc_vars_t:

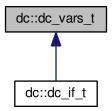

Public Member Functions

dc_vars_t (MHAParser::parser_t &)

Public Attributes

- MHAParser::bool t powersum
- MHAParser::mfloat_t gtdata
- MHAParser::vfloat t gtmin
- MHAParser::vfloat t gtstep
- MHAParser::vfloat_t taurmslevel
- MHAParser::vfloat t tauattack
- MHAParser::vfloat t taudecay
- MHAParser::string_t filterbank
- std::string cf_name
- std::string **ef_name**
- std::string bw name
- MHAParser::string t chname
- MHAParser::bool_t bypass
- MHAParser::string_t clientid
- MHAParser::string_t gainrule
- MHAParser::string t preset
- MHAParser::int mon t modified
- MHAParser::mfloat_t max_level_difference
- MHAParser::vfloat_mon_t input_level
- MHAParser::vfloat_mon_t filtered_level
- MHAParser::vfloat_mon_t center_frequencies
- MHAParser::vfloat_mon_t edge_frequencies
- MHAParser::vfloat mon t band weights
- · MHAParser::bool tuse wbinhib
- 5.59.1 Constructor & Destructor Documentation
- 5.59.1.1 dc::dc_vars_t::dc_vars_t (

 MHAParser::parser_t & p)
- 5.59.2 Member Data Documentation
- 5.59.2.1 MHAParser::bool_t dc::dc_vars_t::powersum
- 5.59.2.2 MHAParser::mfloat_t dc::dc_vars_t::gtdata
- 5.59.2.3 MHAParser::vfloat_t dc::dc_vars_t::gtmin
- 5.59.2.4 MHAParser::vfloat_t dc::dc_vars_t::gtstep
- 5.59.2.5 MHAParser::vfloat t dc::dc vars t::taurmslevel


5.59.2.6	MHAParser::vfloat_t dc::dc_vars_t::tauattack
5.59.2.7	MHAParser::vfloat_t dc::dc_vars_t::taudecay
5.59.2.8	MHAParser::string_t dc::dc_vars_t::filterbank
5.59.2.9	std::string dc::dc_vars_t::cf_name
5.59.2.10	std::string dc::dc_vars_t::ef_name
5.59.2.11	std::string dc::dc_vars_t::bw_name
5.59.2.12	MHAParser::string_t dc::dc_vars_t::chname
5.59.2.13	MHAParser::bool_t dc::dc_vars_t::bypass
5.59.2.14	MHAParser::string_t dc::dc_vars_t::clientid
5.59.2.15	MHAParser::string_t dc::dc_vars_t::gainrule
5.59.2.16	MHAParser::string_t dc::dc_vars_t::preset
5.59.2.17	MHAParser::int_mon_t dc::dc_vars_t::modified
5.59.2.18	MHAParser::mfloat_t dc::dc_vars_t::max_level_difference
5.59.2.19	MHAParser::vfloat_mon_t dc::dc_vars_t::input_level
5.59.2.20	MHAParser::vfloat_mon_t dc::dc_vars_t::filtered_level
5.59.2.21	MHAParser::vfloat_mon_t dc::dc_vars_t::center_frequencies
5.59.2.22	MHAParser::vfloat_mon_t dc::dc_vars_t::edge_frequencies
5.59.2.23	MHAParser::vfloat_mon_t dc::dc_vars_t::band_weights
5.59.2.24	MHAParser::bool_t dc::dc_vars_t::use_wbinhib

The documentation for this class was generated from the following file:

• dc.cpp

5.60 dc::dc_vars_validator_t Class Reference

Inheritance diagram for dc::dc_vars_validator_t:

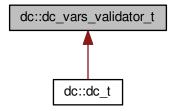

Public Member Functions

• dc_vars_validator_t (dc_vars_t &v, unsigned int s, mha_domain_t domain)

5.60.1 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

dc.cpp

5.61 dc::wb_inhib_cfg_t Class Reference

Public Member Functions

wb_inhib_cfg_t (const wideband_inhib_vars_t &vars)

Public Attributes

- std::vector< float > weights
- float dl_map_min
- float dl_map_max
- float dl diff
- float I_min
- std::vector< std::vector< float >> g_scale

5.61.1 Constructor & Destructor Documentation

5.61.2 Member Data Documentation


- 5.61.2.1 std::vector<float> dc::wb_inhib_cfg_t::weights
- 5.61.2.2 float dc::wb_inhib_cfg_t::dl_map_min
- 5.61.2.3 float dc::wb_inhib_cfg_t::dl_map_max
- 5.61.2.4 float dc::wb_inhib_cfg_t::dl_diff
- 5.61.2.5 float dc::wb_inhib_cfg_t::l_min
- 5.61.2.6 std::vector<std::vector<float> > dc::wb_inhib_cfg_t::g_scale

The documentation for this class was generated from the following file:

dc.cpp

5.62 dc::wideband_inhib_vars_t Class Reference

Inheritance diagram for dc::wideband_inhib_vars_t:

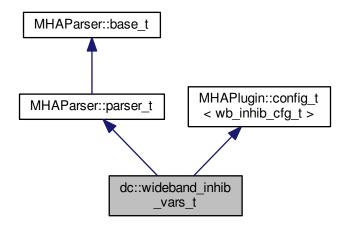

Public Member Functions

- wideband_inhib_vars_t ()
- void **setchannels** (unsigned int ch, unsigned int bnds)
- wb_inhib_cfg_t * current ()
- void update ()

Public Attributes

- MHAParser::vfloat_t weights
- MHAParser::float_t dl_map_min
- MHAParser::float_t dl_map_max
- MHAParser::float t1 min
- MHAParser::mfloat_t g_scale
- MHAEvents::patchbay_t< wideband_inhib_vars_t > patchbay
- unsigned int channels
- · unsigned int bands

Additional Inherited Members

```
5.62.1 Constructor & Destructor Documentation
```

- 5.62.1.1 dc::wideband_inhib_vars_t::wideband_inhib_vars_t()
- 5.62.2 Member Function Documentation
- 5.62.2.2 wb_inhib_cfg_t* dc::wideband_inhib_vars_t::current() [inline]
- 5.62.2.3 void dc::wideband_inhib_vars_t::update ()
- 5.62.3 Member Data Documentation
- 5.62.3.1 MHAParser::vfloat t dc::wideband inhib vars t::weights
- 5.62.3.2 MHAParser::float_t dc::wideband_inhib_vars_t::dl_map_min
- 5.62.3.3 MHAParser::float t dc::wideband_inhib_vars_t::dl_map_max
- 5.62.3.4 MHAParser::float t dc::wideband inhib vars t::1 min


- 5.62.3.5 MHAParser::mfloat_t dc::wideband_inhib_vars_t::g_scale
- 5.62.3.6 MHAEvents::patchbay_t<wideband_inhib_vars_t> dc::wideband_inhib_vars_t← ::patchbay
- 5.62.3.7 unsigned int dc::wideband_inhib_vars_t::channels
- 5.62.3.8 unsigned int dc::wideband_inhib_vars_t::bands

The documentation for this class was generated from the following file:

· dc.cpp

5.63 dc_simple::dc_if_t Class Reference

Inheritance diagram for dc_simple::dc_if_t:

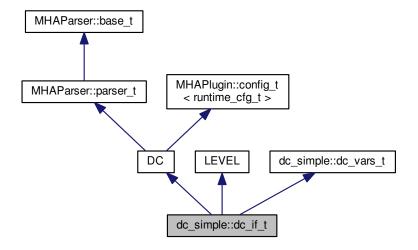

Public Member Functions

- dc_if_t (const algo_comm_t &ac_, const std::string &th_, const std::string &al_)
- void prepare (mhaconfig_t &tf)
- void release ()
- mha_spec_t * process (mha_spec_t *)
- mha_wave_t * process (mha_wave_t *)

Private Member Functions

```
void update_dc ()
```

- void update_level ()
- void has_been_modified ()
- void read_modified ()
- void update_level_mon ()
- void update gain mon ()

Private Attributes

- MHAParser::string_t clientid
- MHAParser::string t gainrule
- MHAParser::string_t preset
- · MHAParser::int mon t modified
- MHAParser::vfloat_mon_t mon_l
- MHAParser::vfloat_mon_t mon_g
- MHAParser::string t filterbank
- MHAParser::vfloat_mon_t center_frequencies
- MHAParser::vfloat mon t edge frequencies
- MHAEvents::patchbay_t< dc_if_t > patchbay
- bool prepared

Additional Inherited Members

```
5.63.1 Constructor & Destructor Documentation
```

5.63.2 Member Function Documentation

Implements MHAPlugin::plugin_t < runtime_cfg_t > (p. 696).

Reimplemented from MHAPlugin::plugin_t< runtime_cfg_t > (p. 697).


```
5.63.2.3 mha_spec_t * dc_simple::dc_if_t::process (
                    mha\_spec\_t * s)
5.63.2.4 mha_wave_t * dc_simple::dc_if_t::process (
                    mha_wave_t * s
5.63.2.5 void dc_simple::dc_if_t::update_dc( ) [private]
5.63.2.6 void dc_simple::dc_if_t::update_level( ) [private]
5.63.2.7 void dc_simple::dc_if_t::has_been_modified() [inline], [private]
5.63.2.8 void dc_simple::dc_if_t::read_modified() [inline], [private]
5.63.2.9 void dc_simple::dc_if_t::update_level_mon() [private]
5.63.2.10 void dc_simple::dc_if_t::update_gain_mon() [private]
5.63.3 Member Data Documentation
        MHAParser::string t dc_simple::dc_if_t::clientid [private]
        MHAParser::string t dc_simple::dc_if_t::gainrule [private]
5.63.3.3 MHAParser::string_t dc_simple::dc_if_t::preset [private]
5.63.3.4
        MHAParser::int_mon_t dc_simple::dc_if_t::modified [private]
5.63.3.5 MHAParser::vfloat_mon_t dc_simple::dc_if_t::mon_l [private]
5.63.3.6
        MHAParser::vfloat_mon_t dc_simple::dc_if_t::mon_g [private]
5.63.3.7
        MHAParser::string_t dc_simple::dc_if_t::filterbank [private]
5.63.3.8
        MHAParser::vfloat_mon_t dc_simple::dc_if_t::center_frequencies [private]
5.63.3.9 MHAParser::vfloat_mon_t dc_simple::dc_if_t::edge_frequencies [private]
5.63.3.10 MHAEvents::patchbay_t<dc_if_t> dc_simple::dc_if_t::patchbay [private]
5.63.3.11 bool dc_simple::dc_if_t::prepared [private]
```

The documentation for this class was generated from the following file:

dc_simple.cpp

5.64 dc_simple::dc_t Class Reference

Inheritance diagram for dc_simple::dc_t:

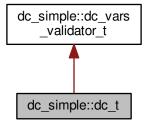

Classes

· class line_t

Public Member Functions

- dc_t (const dc_vars_t &vars, mha_real_t filter_rate, unsigned int nch, unsigned int fftlen)
- mha_spec_t * process (mha_spec_t *, mha_wave_t *level_db)
- mha_wave_t * process (mha_wave_t *, mha_wave_t *level_db)

Public Attributes

- std::vector< float > mon_l
- std::vector< float > mon_g

Private Attributes

- std::vector< mha_real_t > expansion_threshold
- std::vector< mha_real_t > limiter_threshold
- std::vector< line_t > compression
- std::vector< line_t > expansion
- std::vector< line_t > limiter
- std::vector< mha_real_t > maxgain
- unsigned int nbands

Additional Inherited Members

```
5.64.1 Constructor & Destructor Documentation
5.64.1.1 dc_simple::dc_t::dc_t (
                      const dc_vars_t & vars,
                      mha_real_t filter_rate,
                      unsigned int nch,
                      unsigned int fftlen )
5.64.2 Member Function Documentation
5.64.2.1 mha_spec_t * dc_simple::dc_t::process (
                      mha_spec_t * s,
                      mha_wave_t * level_db )
5.64.2.2 mha_wave_t * dc_simple::dc_t::process (
                      mha_wave_t * s,
                      mha wave t * level_db )
5.64.3 Member Data Documentation
5.64.3.1 std::vector<mha_real_t> dc_simple::dc_t::expansion_threshold [private]
5.64.3.2 std::vector<mha_real_t> dc_simple::dc_t::limiter_threshold [private]
\textbf{5.64.3.3} \quad \textbf{std::vector} < \textbf{line\_t} > \textbf{dc\_simple::dc\_t::compression} \quad \texttt{[private]}
5.64.3.4
         std::vector<line_t> dc_simple::dc_t::expansion [private]
5.64.3.5
         std::vector<line t> dc_simple::dc_t::limiter [private]
         std::vector<mha real t> dc simple::dc t::maxgain [private]
5.64.3.7
         unsigned int dc_simple::dc_t::nbands [private]
5.64.3.8
         std::vector<float> dc simple::dc t::mon l
5.64.3.9 std::vector<float> dc_simple::dc_t::mon_g
```

The documentation for this class was generated from the following file:

dc_simple.cpp

```
5.65 dc_simple::dc_t::line_t Class Reference
```

Public Member Functions

```
    line_t (mha_real_t x1, mha_real_t y1, mha_real_t x2, mha_real_t y2)
    line_t (mha_real_t x1, mha_real_t y1, mha_real_t slope)
    mha_real_t operator() (mha_real_t x)
```

Private Attributes

```
mha_real_t m
```

mha_real_t y0

```
5.65.1 Constructor & Destructor Documentation
```

```
5.65.1.1 dc_simple::dc_t::line_t::line_t (

mha_real_t x1,

mha_real_t y1,

mha_real_t x2,

mha_real_t y2 )

5.65.1.2 dc_simple::dc_t::line_t::line_t (
```

```
mha_real_t y1,
mha_real_t y1,
mha_real_t slope )
```

5.65.2 Member Function Documentation

5.65.3 Member Data Documentation

```
5.65.3.1 mha_real_t dc_simple::dc_t::line_t::m [private]
```


```
5.65.3.2 mha_real_t dc_simple::dc_t::line_t::y0 [private]
```

The documentation for this class was generated from the following file:

dc_simple.cpp

5.66 dc_simple::dc_vars_t Class Reference

Inheritance diagram for dc_simple::dc_vars_t:

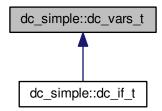

Public Member Functions

dc_vars_t (MHAParser::parser_t &)

Public Attributes

- MHAParser::vfloat_t g50
- MHAParser::vfloat_t g80
- MHAParser::vfloat_t maxgain
- MHAParser::vfloat_t expansion_threshold
- MHAParser::vfloat_t expansion_slope
- MHAParser::vfloat_t limiter_threshold
- MHAParser::vfloat t tauattack
- MHAParser::vfloat_t taudecay
- MHAParser::bool_t bypass

5.66.1 Constructor & Destructor Documentation

- 5.66.1.1 dc_simple::dc_vars_t::dc_vars_t (


 MHAParser::parser_t & p)
- 5.66.2 Member Data Documentation
- 5.66.2.1 MHAParser::vfloat_t dc_simple::dc_vars_t::g50
- 5.66.2.2 MHAParser::vfloat_t dc_simple::dc_vars_t::g80

- 5.66.2.3 MHAParser::vfloat_t dc_simple::dc_vars_t::maxgain
- 5.66.2.4 MHAParser::vfloat_t dc_simple::dc_vars_t::expansion_threshold
- 5.66.2.5 MHAParser::vfloat_t dc_simple::dc_vars_t::expansion_slope
- 5.66.2.6 MHAParser::vfloat t dc_simple::dc_vars_t::limiter_threshold
- 5.66.2.7 MHAParser::vfloat_t dc_simple::dc_vars_t::tauattack
- 5.66.2.8 MHAParser::vfloat_t dc_simple::dc_vars_t::taudecay
- 5.66.2.9 MHAParser::bool_t dc_simple::dc_vars_t::bypass

The documentation for this class was generated from the following file:

- · dc simple.cpp
- 5.67 dc simple::dc vars validator t Class Reference

Inheritance diagram for dc_simple::dc_vars_validator_t:

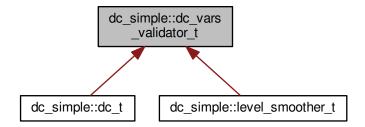

Public Member Functions

dc_vars_validator_t (const dc_vars_t &v, unsigned int s)


5.67.1 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

· dc_simple.cpp

5.68 dc_simple::level_smoother_t Class Reference

Inheritance diagram for dc_simple::level_smoother_t:

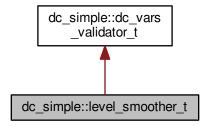

Public Member Functions

- level_smoother_t (const dc_vars_t &vars, mha_real_t filter_rate, mhaconfig_t buscfg)
- mha_wave_t * process (mha_spec_t *)
- mha_wave_t * process (mha_wave_t *)

Private Attributes

- MHAFilter::o1flt_lowpass_t attack
- MHAFilter::o1flt_maxtrack_t decay
- unsigned int nbands
- unsigned int fftlen
- MHASignal::waveform_t level_wave
- MHASignal::waveform_t level_spec

Additional Inherited Members


```
5.68.1 Constructor & Destructor Documentation
5.68.1.1 dc_simple::level_smoother_t::level_smoother_t (
                    const dc_vars_t & vars,
                    mha real t filter rate,
                    mhaconfig_t buscfg )
5.68.2 Member Function Documentation
5.68.2.1 mha wave t * dc_simple::level_smoother_t::process (
                    mha_spec_t * s )
5.68.2.2 mha_wave_t * dc_simple::level_smoother_t::process (
                    mha_wave_t * s
5.68.3 Member Data Documentation
5.68.3.1 MHAFilter::o1flt_lowpass_t dc_simple::level_smoother_t::attack [private]
5.68.3.2 MHAFilter::o1flt maxtrack tdc_simple::level_smoother_t::decay [private]
5.68.3.3
        unsigned int dc_simple::level_smoother_t::nbands [private]
5.68.3.4 unsigned int dc_simple::level_smoother_t::fftlen [private]
        MHASignal::waveform_t dc_simple::level_smoother_t::level_wave [private]
5.68.3.5
5.68.3.6 MHASignal::waveform t dc simple::level smoother t::level spec [private]
```

The documentation for this class was generated from the following file:

dc_simple.cpp

5.69 delay::interface_t Class Reference

Inheritance diagram for delay::interface_t:

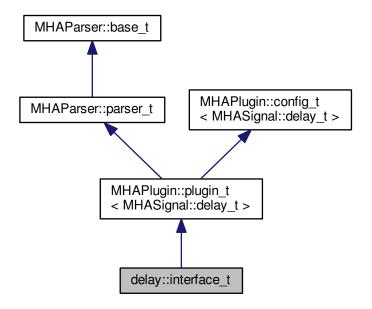

Public Member Functions

- interface_t (const algo_comm_t &, const std::string &, const std::string &)
- void prepare (mhaconfig_t &)
- mha_wave_t * process (mha_wave_t *)

Private Member Functions

• void update ()

Private Attributes


- MHAParser::vint_t delays
- MHAEvents::patchbay_t< interface_t > patchbay

```
Additional Inherited Members
```

Interface class for the delaysum plugin.

```
5.69.1 Constructor & Destructor Documentation
5.69.1.1 delay::interface_t::interface_t (
                     const algo comm t & iac,
                     const std::string & ,
                     const std::string & )
5.69.2 Member Function Documentation
5.69.2.1 void delay::interface_t::prepare (
                     mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin_t < MHASignal::delay_t > (p. 696).
5.69.2.2 mha wave t * delay::interface_t::process (
                     mha wave t * s)
5.69.2.3 void delay::interface_t::update() [private]
5.69.3 Member Data Documentation
        MHAParser::vint_t delay::interface_t::delays [private]
5.69.3.2 MHAEvents::patchbay_t<interface_t> delay::interface_t::patchbay [private]
The documentation for this class was generated from the following file:
   · delay.cpp
5.70
      delaysum::delaysum_if_t Class Reference
```

Inheritance diagram for delaysum::delaysum_if_t:

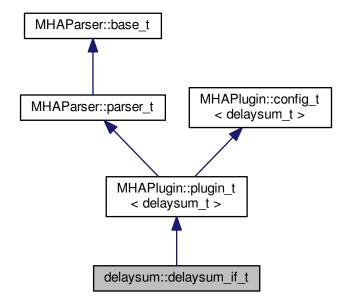

Public Member Functions

- delaysum_if_t (const algo_comm_t &, const std::string &, const std::string &)
- mha_wave_t * process (mha_wave_t *)
- void prepare (mhaconfig_t &)
- void release ()

Private Member Functions

void update_cfg ()

Private Attributes

MHAParser::vfloat_t weights

Linear weights to be multiplied with the audio signal, one factor for each channel.

MHAParser::vint_t delay

vector of channel-specific delays, in samples.

 $\bullet \ \ MHAE vents::patchbay_t < delaysum_if_t > patchbay$

The patchbay to react to config changes.

Additional Inherited Members

5.70.1 Detailed Description

Interface class for the delaysum plugin.

This plugin allows to delay and sum multiple input channels using individual delays and weights. After each channel gets delayed it is multiplied with the given weight and then added to the single outout channel.

```
5.70.2 Constructor & Destructor Documentation
5.70.2.1 delaysum::delaysum if t::delaysum if t (
                    const algo_comm_t & iac,
                     const std::string & ,
                     const std::string & )
5.70.3 Member Function Documentation
5.70.3.1 mha_wave_t * delaysum::delaysum_if_t::process (
                     mha_wave_t * wave )
5.70.3.2 void delaysum::delaysum if t::prepare (
                     mhaconfig t & tfcfg ) [virtual]
Implements MHAPlugin::plugin_t < delaysum_t > (p. 696).
5.70.3.3 void delaysum::delaysum_if_t::release (
                     void ) [virtual]
Reimplemented from MHAPlugin::plugin_t< delaysum_t > (p. 697).
5.70.3.4 void delaysum::delaysum_if_t::update_cfg (
                     void ) [private]
5.70.4 Member Data Documentation
5.70.4.1 MHAParser::vfloat_t delaysum::delaysum_if_t::weights [private]
Linear weights to be multiplied with the audio signal, one factor for each channel.
Order is [chan0, chan1, ...]
```

5.70.4.2 MHAParser::vint_t delaysum::delaysum_if_t::delay [private]

vector of channel-specific delays, in samples.

5.70.4.3 MHAEvents::patchbay_t<delaysum_if_t> delaysum::delaysum_if_t::patchbay [private]

The patchbay to react to config changes.


The documentation for this class was generated from the following file:

· delaysum.cpp

5.71 delaysum::delaysum_t Class Reference

Runtime configuration of the delaysum plugin.

Inheritance diagram for delaysum::delaysum_t:

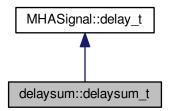

Public Member Functions

delaysum_t (unsigned int nch, unsigned int fragsize, const std::vector< mha_real_t > &weights_, const std::vector< int > &delays_)

Constructor of the runtime configuration.

mha_wave_t * process (mha_wave_t *)

Private Attributes

- std::vector< mha_real_t > weights
 Relative weights for each channel. Order is [chan0, chan1, ...].
- MHASignal::waveform_t out

Output waveform.

5.71.1 Detailed Description

Runtime configuration of the delaysum plugin.

Inherits from the already present delay_t class. The constructor initializes and validates the runtime configuration and forwards the delay vector to the delay_t class. The process function first calls delay_t::process and then multiplies every output channel with its weight and adds them into the output channel.

5.71.2 Constructor & Destructor Documentation

Constructor of the runtime configuration.

Parameters

nch	Number of input channels.
fragsize	Size of one input fragment in frames.
weights⇔ –	Vector of weights for each channel.
delays⇔	Vector of delays, one entry per channel.
_	

5.71.3 Member Function Documentation

```
5.71.3.1 mha_wave_t * delaysum::delaysum_t::process ( mha_wave_t * signal )
```

5.71.4 Member Data Documentation

```
5.71.4.1 std::vector<mha_real_t> delaysum::delaysum_t::weights [private]
```

Relative weights for each channel. Order is [chan0, chan1, ...].

```
5.71.4.2 MHASignal::waveform_t delaysum::delaysum_t::out [private]
```


Output waveform.

The documentation for this class was generated from the following file:

· delaysum.cpp

5.72 doasym_classification Class Reference

Inheritance diagram for doasym_classification:

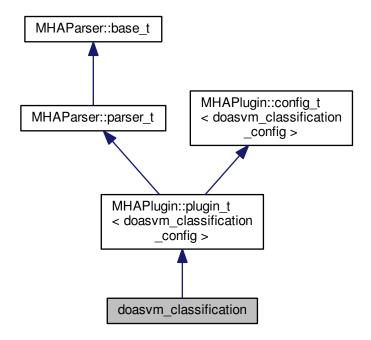

Public Member Functions

doasvm_classification (algo_comm_t &ac, const std::string &chain_name, const std
 ::string &algo_name)

Constructs our plugin.

- ~doasym_classification ()
- mha_wave_t * process (mha_wave_t *)

Checks for the most recent configuration and defers processing to it.

void prepare (mhaconfig_t &)

Plugin preparation.

void release (void)

Public Attributes

- MHAParser::vfloat_t angles
- MHAParser::mfloat_t w
- MHAParser::vfloat t b
- MHAParser::vfloat_t x
- MHAParser::vfloat_t y
- MHAParser::string_t p_name
- MHAParser::string_t max_p_ind_name
- MHAParser::string_t vGCC_name

Private Member Functions

void update_cfg ()

Private Attributes

MHAEvents::patchbay_t< doasym_classification > patchbay

Additional Inherited Members

```
5.72.1 Constructor & Destructor Documentation
```

Constructs our plugin.

```
5.72.1.2 doasym_classification::~doasym_classification()
```

5.72.2 Member Function Documentation

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

Parameters

signal_ini	Structure containing a description of the form of the signal (domain, number of
	channels, frames per block, sampling rate.

Implements MHAPlugin::plugin_t< doasym_classification_config > (p. 696).

```
5.72.2.3 void doasym_classification::release (
                    void ) [inline], [virtual]
Reimplemented from MHAPlugin::plugin_t< doasym_classification_config > (p. 697).
5.72.2.4 void doasvm_classification::update_cfg( ) [private]
5.72.3 Member Data Documentation
5.72.3.1 MHAParser::vfloat_t doasvm_classification::angles
5.72.3.2 MHAParser::mfloat_t doasym_classification::w
5.72.3.3 MHAParser::vfloat t doasvm_classification::b
5.72.3.4 MHAParser::vfloat_t doasym_classification::x
5.72.3.5 MHAParser::vfloat t doasym_classification::y
5.72.3.6 MHAParser::string_t doasym_classification::p_name
5.72.3.7 MHAParser::string_t doasym_classification::max_p_ind_name
5.72.3.8 MHAParser::string_t doasym_classification::vGCC_name
5.72.3.9 MHAEvents::patchbay_t<doasvm_classification> doasvm_classification::patchbay
```

The documentation for this class was generated from the following files:

· doasvm_classification.h

[private]

- doasym classification.cpp
- 5.73 doasym_classification_config Class Reference

Public Member Functions

- doasvm_classification_config (algo_comm_t &ac, const mhaconfig_t in_cfg, doasvm_classification *_doasvm)
- ~doasym_classification_config ()
- mha_wave_t * process (mha_wave_t *)

Public Attributes

```
· algo_comm_t & ac
```

doasym_classification * doasym

MHA AC::waveform t p

- MHA_AC::int_t p_max
- mha_wave_t c
- 5.73.1 Constructor & Destructor Documentation


- 5.73.1.2 doasym_classification_config::~doasym_classification_config()
- 5.73.2 Member Function Documentation
- 5.73.2.1 mha_wave_t * doasym_classification_config::process (mha_wave_t * wave)
- 5.73.3 Member Data Documentation
- 5.73.3.1 algo_comm_t& doasym_classification_config::ac
- 5.73.3.2 doasvm_classification* doasvm_classification_config::doasvm
- 5.73.3.3 MHA_AC::waveform_t doasym_classification_config::p
- 5.73.3.4 MHA_AC::int_t doasym_classification_config::p_max
- 5.73.3.5 mha_wave_t doasym_classification_config::c

The documentation for this class was generated from the following files:

- · doasym classification.h
- · doasvm_classification.cpp

5.74 doasym_feature_extraction Class Reference

Inheritance diagram for doasym_feature_extraction:

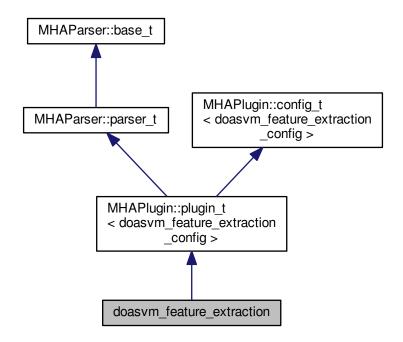

Public Member Functions

 doasvm_feature_extraction (algo_comm_t &ac, const std::string &chain_name, const std::string &algo_name)

Constructs our plugin.

- ~doasvm_feature_extraction ()
- mha wave t * process (mha wave t *)

Checks for the most recent configuration and defers processing to it.

void prepare (mhaconfig_t &)

Plugin preparation.

void release (void)

Public Attributes

- MHAParser::int_t fftlen
- MHAParser::int_t max_lag
- MHAParser::int_t nupsample
- MHAParser::string_t vGCC_name

Private Member Functions

void update_cfg ()

Private Attributes

MHAEvents::patchbay_t< doasvm_feature_extraction > patchbay

Additional Inherited Members

```
5.74.1 Constructor & Destructor Documentation
```

Constructs our plugin.

```
5.74.1.2 doasym_feature_extraction::~doasym_feature_extraction()
```

5.74.2 Member Function Documentation

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number of
	channels, frames per block, sampling rate.

Implements MHAPlugin::plugin_t< doasvm_feature_extraction_config > (p. 696).

The documentation for this class was generated from the following files:

- · doasvm_feature_extraction.h
- doasym feature extraction.cpp

5.75 doasym_feature_extraction_config Class Reference

Public Member Functions

- doasvm_feature_extraction_config (algo_comm_t &ac, const mhaconfig_t in_cfg, doasvm_feature_extraction *_doagcc)
- ~doasym feature extraction config ()
- mha_wave_t * process (mha_wave_t *)

Public Attributes

- doasym_feature_extraction * doagcc
- unsigned int wndlen
- · unsigned int fftlen
- unsigned int G_length
- unsigned int GCC_start
- unsigned int GCC_end
- MHA AC::waveform t vGCC ac
- mha_fft_t fft
- mha_fft_t ifft
- double hifftwin_sum
- MHASignal::waveform t proc wave
- MHASignal::waveform t hwin
- MHASignal::waveform_t hifftwin
- MHASignal::waveform_t vGCC
- MHASignal::spectrum t in spec
- MHASignal::spectrum_t G

```
5.75.1 Constructor & Destructor Documentation
5.75.1.1 doasym_feature_extraction_config::doasym_feature_extraction_config (
                     algo_comm_t & ac,
                     const mhaconfig_t in_cfg,
                     doasym feature extraction * _doagcc )
5.75.1.2 doasym_feature_extraction_config::~doasym_feature_extraction_config()
5.75.2 Member Function Documentation
5.75.2.1 mha_wave_t * doasym_feature_extraction_config::process (
                     mha_wave_t * wave )
       Member Data Documentation
5.75.3
        doasym_feature_extraction* doasym_feature_extraction_config::doagcc
5.75.3.2
        unsigned int doasym_feature_extraction_config::wndlen
5.75.3.3
        unsigned int doasym_feature_extraction_config::fftlen
5.75.3.4
        unsigned int doasym_feature_extraction_config::G_length
5.75.3.5
        unsigned int doasym feature extraction config::GCC start
5.75.3.6
        unsigned int doasym_feature_extraction_config::GCC_end
5.75.3.7
         MHA_AC::waveform_t doasym_feature_extraction_config::vGCC_ac
5.75.3.8
        mha fft t doasym_feature_extraction_config::fft
5.75.3.9
        mha fft t doasym feature extraction config::ifft
5.75.3.10 double doasym_feature_extraction_config::hifftwin_sum
5.75.3.11 MHASignal::waveform t doasym feature extraction config::proc wave
5.75.3.12 MHASignal::waveform t doasym_feature_extraction_config::hwin
5.75.3.13 MHASignal::waveform t doasym feature extraction config::hifftwin
5.75.3.14 MHASignal::waveform t doasym_feature_extraction_config::vGCC
5.75.3.15 MHASignal::spectrum t doasym feature extraction config::in spec
5.75.3.16 MHASignal::spectrum t doasym_feature_extraction_config::G
```


The documentation for this class was generated from the following files:

- · doasym feature extraction.h
- doasym_feature_extraction.cpp

5.76 droptect_t Class Reference

Detect dropouts in a signal with a constant spectrum.

Inheritance diagram for droptect_t:

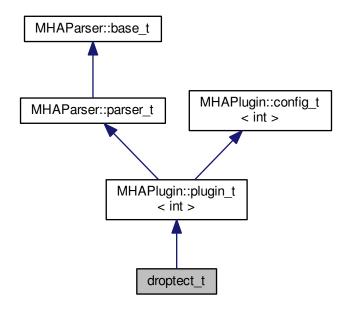

Public Member Functions

droptect_t (algo_comm_t &ac, const std::string &chain_name, const std::string &algo
 —name)

This constructor initializes the configuration language variables and inserts them into the MHA configuration tree.

- void prepare (mhaconfig_t &signal_info)
- void release (void)
- mha_spec_t * process (mha_spec_t *signal)

Private Attributes

- MHAParser::vint_mon_t dropouts
- MHAParser::vint_mon_t consecutive_dropouts
- MHAParser::int_mon_t blocks
- MHAParser::bool_t reset
- MHAParser::float_t threshold
- MHASignal::waveform_t * current_powspec

```
    MHASignal::waveform_t * filtered_powspec
```

- · MHAParser::float t tau
- std::vector< bool > filter_activated
- float period

The period of the process callback.

MHAParser::mfloat_mon_t filtered_powspec_mon

User access to filtered spectrum.

MHAParser::float mon t level mon

Additional Inherited Members

5.76.1 Detailed Description

Detect dropouts in a signal with a constant spectrum.

5.76.2 Constructor & Destructor Documentation

This constructor initializes the configuration language variables and inserts them into the MHA configuration tree.

```
5.76.3 Member Function Documentation
```

Implements MHAPlugin::plugin_t < int > (p. 696).

Reimplemented from **MHAPlugin::plugin_t**< int > (p. 697).

```
5.76.3.3 mha_spec_t * droptect_t::process (
                    mha_spec_t * signal )
5.76.4 Member Data Documentation
5.76.4.1 MHAParser::vint mon t droptect_t::dropouts [private]
5.76.4.2 MHAParser::vint_mon_t droptect_t::consecutive_dropouts [private]
5.76.4.3 MHAParser::int_mon_t droptect_t::blocks [private]
5.76.4.4 MHAParser::bool_t droptect_t::reset [private]
5.76.4.5 MHAParser::float_t droptect_t::threshold [private]
5.76.4.6 MHASignal::waveform_t* droptect_t::current_powspec [private]
5.76.4.7 MHASignal::waveform_t* droptect_t::filtered_powspec [private]
5.76.4.8 MHAParser::float_t droptect_t::tau [private]
5.76.4.9 std::vector<bool> droptect_t::filter_activated [private]
5.76.4.10 float droptect_t::period [private]
The period of the process callback.
5.76.4.11 MHAParser::mfloat_mon_t droptect_t::filtered_powspec_mon [private]
User access to filtered spectrum.
```


The documentation for this class was generated from the following file:

5.76.4.12 MHAParser::float mon t droptect t::level mon [private]

droptect.cpp

5.77 ds_t Class Reference

Inheritance diagram for ds_t:

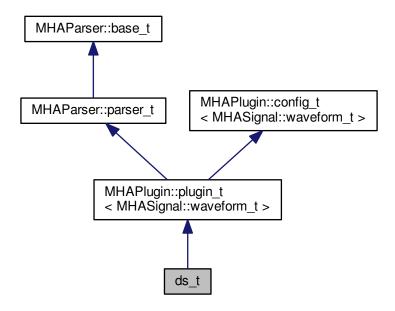

Public Member Functions

- ds_t (algo_comm_t, std::string, std::string)
- mha_wave_t * process (mha_wave_t *)
- void prepare (mhaconfig_t &)
- void release ()

Private Attributes

- MHAParser::int_t ratio
- MHAFilter::iir_filter_t antialias

Additional Inherited Members

5.77.1 Constructor & Destructor Documentation

```
5.77.1.1 ds_t::ds_t (
                    algo_comm_t iac,
                    std::string,
                    std::string )
5.77.2 Member Function Documentation
5.77.2.1 mha wave t * ds_t::process (
                    mha_wave_t * s )
5.77.2.2 void ds_t::prepare (
                    mhaconfig_t & cf ) [virtual]
Implements MHAPlugin::plugin_t< MHASignal::waveform_t > (p. 696).
5.77.2.3 void ds_t::release (
                    void ) [virtual]
Reimplemented from MHAPlugin::plugin_t < MHASignal::waveform_t > (p. 697).
5.77.3 Member Data Documentation
5.77.3.1
        MHAParser::int_t ds_t::ratio [private]
5.77.3.2 MHAFilter::iir_filter_t ds_t::antialias [private]
```

The documentation for this class was generated from the following file:

downsample.cpp

5.78 dynamiclib_t Class Reference

Public Member Functions

- dynamiclib_t (const std::string &)
- void * resolve (const std::string &)
- void * resolve_checked (const std::string &)
- ~dynamiclib_t ()
- const std::string & getmodulename () const
- const std::string & getname () const

Private Attributes

- std::string fullname
- std::string modulename
- mha_libhandle_t h

```
5.78.1 Constructor & Destructor Documentation
```

The documentation for this class was generated from the following files:

- · mha_os.h
- mha_os.cpp
- 5.79 DynComp::dc_afterburn_rt_t Class Reference

5.78.3.3 mha_libhandle_t dynamiclib_t::h [private]

Real-time class for after burn effect.

Public Member Functions

- dc_afterburn_rt_t (const std::vector< float > &cf, unsigned int channels, float srate, const dc_afterburn_vars_t &vars)
- void **burn** (float &Gin, float Lin, unsigned int band, unsigned int channel) gain modifier method (afterburn).

Private Attributes

```
std::vector< float > drain_inv
```

- std::vector< float > conflux
- std::vector< float > maxgain
- std::vector< float > mpo_inv
- std::vector< MHAFilter::o1flt_lowpass_t > lp

5.79.1 Detailed Description

Real-time class for after burn effect.

The constructor processes the parameters and creates pre-processed variables for efficient realtime processing.

5.79.2 Constructor & Destructor Documentation

5.79.3 Member Function Documentation

gain modifier method (afterburn).

Parameters

Gin	Linear gain.	
Lin	Input level (Pascal).	
band	Filter band number.	
≈ebænnel i	-Ghannel bumber burg	

© 2006-2048 Hörzedh g@hbH, Oldehburg

Output level for MPO is estimated by Gin * Lin.

5.79.4 Member Data Documentation

```
5.79.4.1 std::vector<float> DynComp::dc_afterburn_rt_t::drain_inv [private]

5.79.4.2 std::vector<float> DynComp::dc_afterburn_rt_t::conflux [private]

5.79.4.3 std::vector<float> DynComp::dc_afterburn_rt_t::maxgain [private]

5.79.4.4 std::vector<float> DynComp::dc_afterburn_rt_t::mpo_inv [private]
```

std::vector<MHAFilter::o1flt lowpass t> DynComp::dc_afterburn_rt_t::lp [private]


The documentation for this class was generated from the following files:

- · dc_afterburn.h
- dc_afterburn.cpp

5.80 DynComp::dc_afterburn_t Class Reference

Afterburn class, to be defined as a member of compressors.

Inheritance diagram for DynComp::dc_afterburn_t:

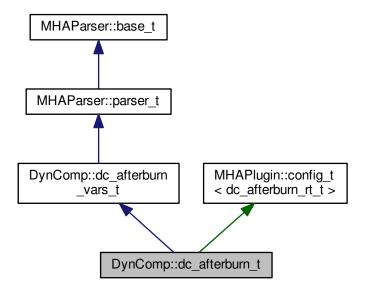

Public Member Functions

- dc afterburn t ()
- void **set_fb_pars** (const std::vector< float > &cf, unsigned int **channels**, float srate)
- void unset_fb_pars ()
- void update_burner ()
- void **burn** (float &Gin, float Lin, unsigned int band, unsigned int channel)

Private Member Functions

• void update ()

Private Attributes

- MHAEvents::patchbay_t< dc_afterburn_t > patchbay
- std::vector< float > _cf
- unsigned int _channels
- float srate
- bool commit_pending
- bool fb_pars_configured

Additional Inherited Members

5.80.1 Detailed Description

Afterburn class, to be defined as a member of compressors.

```
5.80.2 Constructor & Destructor Documentation
```

```
5.80.2.1 DynComp::dc_afterburn_t::dc_afterburn_t ( )
```

5.80.3 Member Function Documentation

```
5.80.3.2 void DynComp::dc_afterburn_t::unset_fb_pars ( )
```

5.80.3.3 void DynComp::dc_afterburn_t::update_burner() [inline]


```
5.80.3.4 void DynComp::dc_afterburn_t::burn (
                     float & Gin,
                     float Lin.
                     unsigned int band,
                     unsigned int channel ) [inline]
5.80.3.5 void DynComp::dc_afterburn_t::update( ) [private]
5.80.4 Member Data Documentation
5.80.4.1 MHAEvents::patchbay_t<dc_afterburn_t> DynComp::dc_afterburn_t::patchbay
         [private]
5.80.4.2 std::vector<float> DynComp::dc_afterburn_t::_cf [private]
5.80.4.3 unsigned int DynComp::dc_afterburn_t::_channels [private]
5.80.4.4 float DynComp::dc_afterburn_t::_srate [private]
5.80.4.5 bool DynComp::dc_afterburn_t::commit_pending [private]
5.80.4.6 bool DynComp::dc_afterburn_t::fb_pars_configured [private]
The documentation for this class was generated from the following files:
   · dc afterburn.h

    dc_afterburn.cpp
```

5.81 DynComp::dc_afterburn_vars_t Class Reference

Variables for dc_afterburn_t (p. 280) class.

Inheritance diagram for DynComp::dc_afterburn_vars_t:

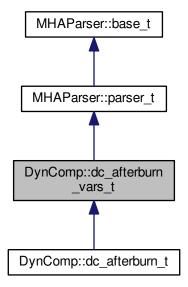

Public Member Functions

dc_afterburn_vars_t ()

Public Attributes

MHAParser::vfloat_t f

MHAParser::vfloat_t drain

MHAParser::vfloat_t conflux

MHAParser::vfloat_t maxgain

MHAParser::vfloat_t mpo

MHAParser::float_t taugain

MHAParser::kw_t commit

MHAParser::bool_t bypass

Additional Inherited Members

5.81.1 Detailed Description

Variables for dc_afterburn_t (p. 280) class.

5.81.2	Constructor & Destructor Documentation
5.81.2.1	DynComp::dc_afterburn_vars_t::dc_afterburn_vars_t ()
5.81.3	Member Data Documentation
5.81.3.1	MHAParser::vfloat_t DynComp::dc_afterburn_vars_t::f
5.81.3.2	MHAParser::vfloat_t DynComp::dc_afterburn_vars_t::drain
5.81.3.3	MHAParser::vfloat_t DynComp::dc_afterburn_vars_t::conflux
5.81.3.4	MHAParser::vfloat_t DynComp::dc_afterburn_vars_t::maxgain
5.81.3.5	MHAParser::vfloat_t DynComp::dc_afterburn_vars_t::mpo
5.81.3.6	MHAParser::float_t DynComp::dc_afterburn_vars_t::taugain
5.81.3.7	MHAParser::kw_t DynComp::dc_afterburn_vars_t::commit
5.81.3.8	MHAParser::bool_t DynComp::dc_afterburn_vars_t::bypass

The documentation for this class was generated from the following files:

- · dc_afterburn.h
- dc_afterburn.cpp
- 5.82 DynComp::gaintable_t Class Reference

Gain table class.

Public Member Functions

gaintable_t (const std::vector< mha_real_t > &LInput, const std::vector< mha_real_t > &FCenter, unsigned int channels)

Constructor.

- ∼gaintable t ()
- void update (std::vector< std::vector< mha_real_t >> > newGain)
 Update gains from an external table.
- mha_real_t get_gain (mha_real_t Lin, mha_real_t Fin, unsigned int channel)
 Read Gain from gain table.
- mha_real_t get_gain (mha_real_t Lin, unsigned int band, unsigned int channel)
 Read Gain from gain table.
- void **get_gain** (const **mha_wave_t** &Lin, **mha_wave_t** &Gain)

Read Gains from gain table.

• unsigned int nbands () const

Return number of frequency bands.

• unsigned int nchannels () const

Return number of audio channels.

- std::vector< std::vector< mha_real_t >> get_iofun () const
 Return current input-output function.
- std::vector< mha_real_t > get_vL () const
- std::vector< mha real t > get vF () const

Private Attributes

- unsigned int num_L
- unsigned int num F
- unsigned int num_channels
- std::vector< mha real t > vL
- std::vector< mha_real_t > vF
- std::vector< mha real t > vFlog
- std::vector< std::vector< mha_real_t >>> data

5.82.1 Detailed Description

Gain table class.

This gain table is intended to efficient table lookup, i.e, interpolation of levels, and optional interpolation of frequencies. Sample input levels and sample frequencies are given in the constructor. The gain entries can be updated with the **update()** (p. 287) member function via a gain prescription rule from an auditory profile.

5.82.2 Constructor & Destructor Documentation

Constructor.

Parameters

LInput	Input level samples, in equivalent LTASS_combined dB SPL.
FCenter	Frequency samples in Hz (e.g., center frequencies of filterbank).
channels	Number of audio channels (typically 2).

```
5.82.2.2 gaintable_t::~gaintable_t()
```

5.82.3 Member Function Documentation

```
5.82.3.1 void gaintable_t::update (  std::vector < std::vector < mha\_real\_t >> \textit{newGain} \ )
```

Update gains from an external table.

Parameters

newGain	New gain table entries.
---------	-------------------------

Dimension change is not allowed. The number of entries are checked.

Read Gain from gain table.

Parameters

Lin	Input level
Fin	Input frequency (no match required)
channel	Audio channel

Read Gain from gain table.

Parameters

Lin Input level	
-----------------	--

Parameters

band	Input frequency band
channel	Audio channel

```
5.82.3.4 void gaintable_t::get_gain (
const mha_wave_t & Lin,
mha_wave_t & Gain )
```

Read Gains from gain table.

Parameters

Lin	Input levels.
Gain	Output gain.

The number of channels in Lin and Gain must match the number of bands times number of channels in the gaintable.

```
5.82.3.5 unsigned int DynComp::gaintable_t::nbands ( ) const [inline]
```

Return number of frequency bands.

```
5.82.3.6 unsigned int DynComp::gaintable t::nchannels ( ) const [inline]
```

Return number of audio channels.

```
5.82.3.7 std::vector< std::vector< mha real t >> gaintable_t::get_iofun( ) const
```

Return current input-output function.

```
5.82.3.8 std::vector<mha_real_t> DynComp::gaintable_t::get_vL( ) const [inline]
```

```
5.82.3.9 std::vector<mha_real_t> DynComp::gaintable_t::get_vF( ) const [inline]
```

5.82.4 Member Data Documentation

```
5.82.4.1 unsigned int DynComp::gaintable_t::num_L [private]
```

5.82.4.2 unsigned int DynComp::gaintable_t::num_F [private]

5.82.4.3 unsigned int DynComp::gaintable_t::num_channels [private]

```
5.82.4.4 std::vector<mha_real_t> DynComp::gaintable_t::vL [private]
5.82.4.5 std::vector<mha_real_t> DynComp::gaintable_t::vF [private]
5.82.4.6 std::vector<mha_real_t> DynComp::gaintable_t::vFlog [private]
5.82.4.7 std::vector<std::vector<std::vector<mha_real_t> > DynComp::gaintable_t::data [private]
```


The documentation for this class was generated from the following files:

- · gaintable.h
- · gaintable.cpp

5.83 example1_t Class Reference

This C++ class implements the simplest example plugin for the step-by-step tutorial.

Inheritance diagram for example1_t:

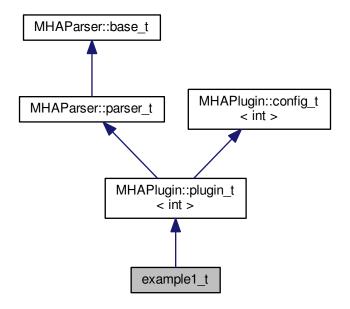

Public Member Functions

• example1_t (algo_comm_t &ac, const std::string &chain_name, const std::string &algo_name)

Do-nothing constructor.

void release (void)

Release may be empty.

void prepare (mhaconfig_t &signal_info)

Plugin preparation.

mha_wave_t * process (mha_wave_t *signal)

Signal processing performed by the plugin.

Additional Inherited Members

5.83.1 Detailed Description

This C++ class implements the simplest example plugin for the step-by-step tutorial.

It inherits from **MHAPlugin::plugin_t** (p. 694) for correct integration in the configuration language interface.

5.83.2 Constructor & Destructor Documentation

Do-nothing constructor.

The constructor has to take these three arguments, but it does not have to use them. However, the base class has to be initialized.

5.83.3 Member Function Documentation

Release may be empty.

Reimplemented from **MHAPlugin::plugin_t**< int > (p. 697).

Plugin preparation.

This plugin checks that the input signal has the waveform domain and contains at least one channel

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number of	
	channels, frames per block, sampling rate.	

Implements MHAPlugin::plugin_t< int > (p. 696).

Signal processing performed by the plugin.

This plugin multiplies the signal in the first audio channel by a factor 0.1.

Parameters

١	cianal	Pointer to the input signal structure.
	signai	Folliter to the input signal structure.

Returns

Returns a pointer to the input signal structure, with a the signal modified by this plugin. (In-place processing)


The documentation for this class was generated from the following file:

example1.cpp

5.84 example2_t Class Reference

This C++ class implements the second example plugin for the step-by-step tutorial.

Inheritance diagram for example2_t:

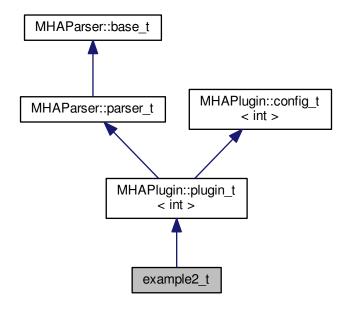

Public Member Functions

example2_t (algo_comm_t &ac, const std::string &chain_name, const std::string &algo_name)

This constructor initializes the configuration language variables and inserts them into the openMHA configuration tree.

void prepare (mhaconfig_t &signal_info)

Plugin preparation.

• void release (void)

Undo restrictions posed in prepare.

mha_wave_t * process (mha_wave_t *signal)

Signal processing performed by the plugin.

Private Attributes

MHAParser::int_t scale_ch

Index of audio channel to scale.

MHAParser::float_t factor

The scaling factor applied to the selected channel.

Additional Inherited Members

5.84.1 Detailed Description

This C++ class implements the second example plugin for the step-by-step tutorial.

It extends the first example by using configuration language variables to influence the processing.

5.84.2 Constructor & Destructor Documentation

This constructor initializes the configuration language variables and inserts them into the openMHA configuration tree.

5.84.3 Member Function Documentation

Plugin preparation.

This plugin checks that the input signal has the waveform domain and contains enough channels.

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number of
	channels, frames per block, sampling rate.

Implements MHAPlugin::plugin_t< int > (p. 696).

Undo restrictions posed in prepare.

Reimplemented from **MHAPlugin::plugin_t**< int > (p. 697).

```
5.84.3.3 mha_wave_t * example2_t::process ( mha_wave_t * signal )
```

Signal processing performed by the plugin.

This plugin multiplies the signal in the selected audio channel by the configured factor.

Parameters

```
signal Pointer to the input signal structure.
```

Returns

Returns a pointer to the input signal structure, with a the signal modified by this plugin. (In-place processing)

5.84.4 Member Data Documentation

```
5.84.4.1 MHAParser::int_t example2_t::scale_ch [private]
```

Index of audio channel to scale.

```
5.84.4.2 MHAParser::float_t example2_t::factor [private]
```

The scaling factor applied to the selected channel.


The documentation for this class was generated from the following file:

example2.cpp

5.85 example3 t Class Reference

A Plugin class using the openMHA Event mechanism.

Inheritance diagram for example3_t:

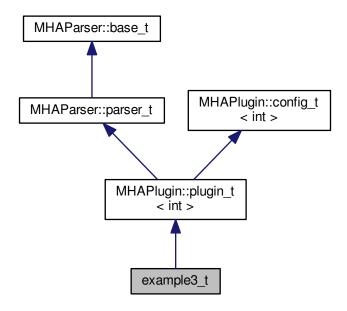

Public Member Functions

• example3_t (algo_comm_t &ac, const std::string &chain_name, const std::string &algo name)

This constructor initializes the configuration language variables and inserts them into the openMHA configuration tree.

void prepare (mhaconfig_t &signal_info)

Plugin preparation.

void release (void)

Bookkeeping only.

mha_wave_t * process (mha_wave_t *signal)

Signal processing performed by the plugin.

Private Member Functions

- void on_scale_ch_writeaccess ()
- void on_scale_ch_valuechanged ()
- void on_scale_ch_readaccess ()
- void on_prereadaccess ()

Private Attributes

MHAParser::int_t scale_ch

Index of audio channel to scale.

MHAParser::float t factor

The scaling factor applied to the selected channel.

MHAParser::int mon t prepared

Keep Track of the prepare/release calls.

MHAEvents::patchbay_t< example3_t > patchbay

The Event connector.

Additional Inherited Members

5.85.1 Detailed Description

A Plugin class using the openMHA Event mechanism.

This is the third example plugin for the step-by-step tutorial.

5.85.2 Constructor & Destructor Documentation

This constructor initializes the configuration language variables and inserts them into the openMHA configuration tree.

It connects the openMHA Events triggered by these configuration variables to the respective callbacks.

5.85.3 Member Function Documentation

Plugin preparation.

This plugin checks that the input signal has the waveform domain and contains enough channels.

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number of]
	channels, frames per block, sampling rate.	

Implements $MHAPlugin::plugin_t < int > (p. 696)$.

Bookkeeping only.

Reimplemented from **MHAPlugin::plugin_t**< int > (p. 697).

```
5.85.3.7 mha_wave_t * example3_t::process ( mha_wave_t * signal )
```

Signal processing performed by the plugin.

This plugin multiplies the signal in the selected audio channel by the configured factor.

Parameters

```
signal Pointer to the input signal structure.
```

Returns

Returns a pointer to the input signal structure, with a the signal modified by this plugin. (In-place processing)

5.85.4 Member Data Documentation

```
5.85.4.1 MHAParser::int_t example3_t::scale_ch [private]
```

Index of audio channel to scale.

```
5.85.4.2 MHAParser::float_t example3_t::factor [private]
```

The scaling factor applied to the selected channel.

```
5.85.4.3 MHAParser::int_mon_t example3_t::prepared [private]
```

Keep Track of the prepare/release calls.

5.85.4.4 MHAEvents::patchbay_t<example3_t> example3_t::patchbay [private]

The Event connector.


The documentation for this class was generated from the following file:

example3.cpp

5.86 example4_t Class Reference

A Plugin class using the spectral signal.

Inheritance diagram for example4_t:

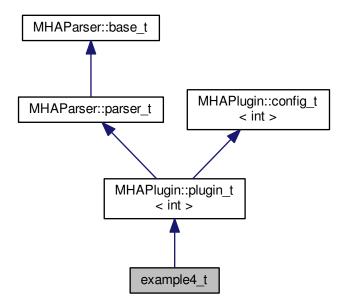

Public Member Functions

example4_t (algo_comm_t &ac, const std::string &chain_name, const std::string &algo_name)

This constructor initializes the configuration language variables and inserts them into the openMHA configuration tree.

void prepare (mhaconfig_t &signal_info)

Plugin preparation.

void release (void)

Bookkeeping only.

mha_spec_t * process (mha_spec_t *signal)

Signal processing performed by the plugin.

Private Member Functions

- void on_scale_ch_writeaccess ()
- void on_scale_ch_valuechanged ()
- void on_scale_ch_readaccess ()
- void on_prereadaccess ()

Private Attributes

MHAParser::int_t scale_ch

Index of audio channel to scale.

MHAParser::float_t factor

The scaling factor applied to the selected channel.

MHAParser::int_mon_t prepared

Keep Track of the prepare/release calls.

MHAEvents::patchbay_t< example4_t > patchbay

The Event connector.

Additional Inherited Members

5.86.1 Detailed Description

A Plugin class using the spectral signal.

This is the fourth example plugin for the step-by-step tutorial.

5.86.2 Constructor & Destructor Documentation

This constructor initializes the configuration language variables and inserts them into the openMHA configuration tree.

It connects the openMHA Events triggered by these configuration variables to the respective callbacks.

5.86.3 Member Function Documentation

Plugin preparation.

This plugin checks that the input signal has the waveform domain and contains enough channels.

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number of	
	channels, frames per block, sampling rate.	

Implements MHAPlugin::plugin t < int > (p. 696).

Bookkeeping only.

Reimplemented from **MHAPlugin::plugin** t < int > (p. 697).

```
5.86.3.7 mha_spec_t * example4_t::process ( mha_spec_t * signal )
```

Signal processing performed by the plugin.

This plugin multiplies the spectral signal in the selected audio channel by the configured factor.

Parameters

signal Pointer to the input signal structure.

Returns

Returns a pointer to the input signal structure, with a the signal modified by this plugin. (In-place processing)

5.86.4 Member Data Documentation

5.86.4.1 MHAParser::int_t example4_t::scale_ch [private]

Index of audio channel to scale.

5.86.4.2 MHAParser::float_t example4_t::factor [private]

The scaling factor applied to the selected channel.

5.86.4.3 MHAParser::int_mon_t example4_t::prepared [private]

Keep Track of the prepare/release calls.

5.86.4.4 MHAEvents::patchbay_t<example4_t> example4_t::patchbay [private]

The Event connector.

The documentation for this class was generated from the following file:

example4.cpp

5.87 example5_t Class Reference

Public Member Functions

- example5_t (unsigned int, unsigned int, mha_real_t)
- mha_spec_t * process (mha_spec_t *)

Private Attributes

- · unsigned int channel
- · mha_real_t scale

5.87.1 Constructor & Destructor Documentation

5.87.2 Member Function Documentation

5.87.3 Member Data Documentation


5.87.3.1 unsigned int example5_t::channel [private]

The documentation for this class was generated from the following file:

· example5.cpp

5.88 example6_t Class Reference

Inheritance diagram for example6_t:

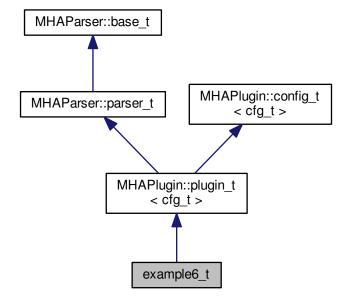

Public Member Functions

```
• example6_t (const algo_comm_t &, const std::string &, const std::string &)
```

- mha_wave_t * process (mha_wave_t *)
- void prepare (mhaconfig_t &)

Private Member Functions

void update_cfg ()

Private Attributes

- MHAParser::int_t channel_no
- · float rmsdb
- MHAEvents::patchbay_t< example6_t > patchbay

Additional Inherited Members

```
5.88.1 Constructor & Destructor Documentation
5.88.1.1 example6_t::example6_t (
                    const algo_comm_t & iac,
                    const std::string & ,
                    const std::string & )
5.88.2 Member Function Documentation
5.88.2.1 mha_wave_t * example6_t::process (
                    mha wave t * wave )
5.88.2.2 void example6_t::prepare (
                    mhaconfig_t & tfcfg ) [virtual]
Implements MHAPlugin::plugin_t < cfg_t > (p. 696).
5.88.2.3 void example6_t::update_cfg( ) [private]
5.88.3 Member Data Documentation
5.88.3.1 MHAParser::int t example6_t::channel_no [private]
5.88.3.2 float example6_t::rmsdb [private]
        MHAEvents::patchbay_t<example6_t> example6_t::patchbay [private]
```

The documentation for this class was generated from the following file:

example6.cpp

5.89 expression_t Class Reference

Class for separating a string into a left hand value and a right hand value.

5.89.1 Detailed Description

Class for separating a string into a left hand value and a right hand value.


A list of valid operators can be provided. After construction, the class members Ival, rval and op contain the apropriate contents.

The documentation for this class was generated from the following file:

mha_parser.cpp

5.90 fader_if_t Class Reference

Inheritance diagram for fader if t:

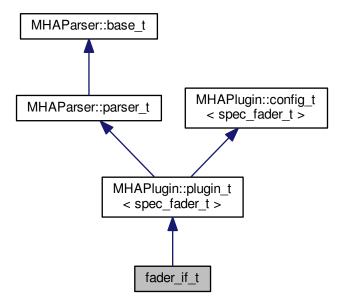

Public Member Functions

- fader_if_t (const algo_comm_t &, const std::string &, const std::string &)
- mha_spec_t * process (mha_spec_t *)
- void prepare (mhaconfig_t &)

Private Member Functions

void update_cfg ()

```
Private Attributes
```

```
    MHAEvents::patchbay_t< fader_if_t > patchbay
```

- · MHAParser::float t tau
- MHAParser::vfloat_t newgains
- mha_real_t * actgains

```
Additional Inherited Members
```

```
5.90.1 Constructor & Destructor Documentation
```

5.90.2 Member Function Documentation

```
5.90.2.1 mha_spec_t * fader_if_t::process (
mha_spec_t * s )
```

Implements MHAPlugin::plugin_t< spec_fader_t > (p. 696).

5.90.3 Member Data Documentation

```
5.90.3.1 MHAEvents::patchbay_t<fader_if_t> fader_if_t::patchbay [private]
```

5.90.3.2 MHAParser::float_t fader_if_t::tau [private]

5.90.3.3 MHAParser::vfloat_t fader_if_t::newgains [private]


5.90.3.4 mha_real_t* fader_if_t::actgains [private]

The documentation for this class was generated from the following file:

fader_spec.cpp

5.91 fader_wave::fader_wave_if_t Class Reference

Inheritance diagram for fader_wave::fader_wave_if_t:

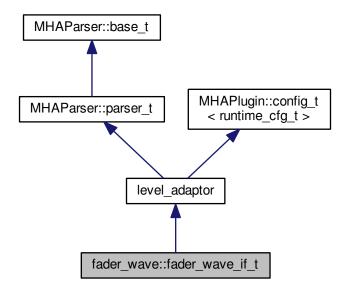

Public Member Functions

- fader_wave_if_t (algo_comm_t, const char *, const char *)
- mha_wave_t * process (mha_wave_t *)
- void prepare (mhaconfig_t &)
- void release ()

Private Member Functions

void set_level ()

Private Attributes

- MHAParser::vfloat_t gain
- MHAParser::float_t ramplen
- MHAEvents::patchbay_t< fader_wave_if_t > patchbay
- bool prepared

Additional Inherited Members


```
5.91.1 Constructor & Destructor Documentation
5.91.1.1 fader_wave::fader_wave_if_t::fader_wave_if_t (
                    algo comm t iac,
                    const char *,
                    const char * )
5.91.2 Member Function Documentation
5.91.2.1 mha_wave_t * fader_wave::fader_wave_if_t::process (
                    mha_wave_t * s )
5.91.2.2 void fader_wave::fader_wave_if_t::prepare (
                    mhaconfig t&tf) [virtual]
Implements MHAPlugin::plugin_t < runtime_cfg_t > (p. 696).
5.91.2.3 void fader_wave::fader_wave_if_t::release (
                    void ) [virtual]
Reimplemented from MHAPlugin::plugin_t< runtime_cfg_t > (p. 697).
5.91.2.4 void fader_wave::fader_wave_if_t::set_level( ) [private]
5.91.3 Member Data Documentation
5.91.3.1 MHAParser::vfloat_t fader_wave::fader_wave_if_t::gain [private]
5.91.3.2 MHAParser::float t fader_wave::fader_wave_if_t::ramplen [private]
5.91.3.3 MHAEvents::patchbay t<fader wave if t> fader_wave::fader_wave_if_t::patchbay
         [private]
5.91.3.4 bool fader_wave::fader_wave_if_t::prepared [private]
```

The documentation for this class was generated from the following file:

fader_wave.cpp

5.92 fader_wave::level_adapt_t Class Reference

Inheritance diagram for fader_wave::level_adapt_t:

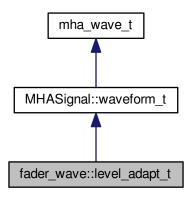

Public Member Functions

- level_adapt_t (mhaconfig_t cf, mha_real_t adapt_len, std::vector< float > l_new_← , std::vector< float > l_old_)
- void update_frame ()
- std::vector< float > get_level () const
- bool can_update () const

Private Attributes

- unsigned int ilen
- unsigned int pos
- MHAWindow::fun_t wnd
- std::vector< float > I new
- std::vector< float > I_old

Additional Inherited Members

5.92.1 Constructor & Destructor Documentation

5.92.2 Member Function Documentation

- 5.92.2.1 void fader_wave::level_adapt_t::update_frame ()
- 5.92.2.2 std::vector<float> fader_wave::level_adapt_t::get_level() const [inline]
- 5.92.2.3 bool fader_wave::level_adapt_t::can_update() const [inline]
- 5.92.3 Member Data Documentation
- **5.92.3.1** unsigned int fader_wave::level_adapt_t::ilen [private]
- **5.92.3.2 unsigned int fader_wave::level_adapt_t::pos** [private]
- **5.92.3.3 MHAWindow::fun_t fader_wave::level_adapt_t::wnd** [private]
- **5.92.3.4** std::vector<float> fader wave::level adapt t::l new [private]
- **5.92.3.5** std::vector<float> fader_wave::level_adapt_t::l_old [private]


The documentation for this class was generated from the following file:

fader_wave.cpp

5.93 fftfbpow::fftfbpow_interface_t Class Reference

Interface class for fftfbpow plugin.

Inheritance diagram for fftfbpow::fftfbpow_interface_t:

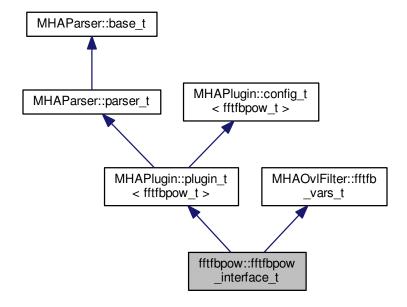

Public Member Functions

• fftfbpow_interface_t (const algo_comm_t &ac, const std::string &, const std::string &algo_name)

Constructor with standard MHA constructor parameters.

void prepare (mhaconfig_t &tf)

Standard MHA plugin prepare function.

mha_spec_t * process (mha_spec_t *s)

Standard MHA plugin process fct.

Private Member Functions

void update_cfg ()

Constructs new runtime configuration in thread-safe manner.

Private Attributes

std::string name

Configured name of this plugin instance.

MHAEvents::patchbay_t< fftfbpow_interface_t > patchbay

Patchbay to connect to MHA configuration interface.

Additional Inherited Members

5.93.1 Detailed Description

Interface class for fftfbpow plugin.

5.93.2 Constructor & Destructor Documentation

Constructor with standard MHA constructor parameters.

Parameters

ac	Handle to algorithm communication variable space
algo_name	Configured name of this plugin instance

5.93.3 Member Function Documentation

Standard MHA plugin prepare function.

Ensures that the input is in the frequency domain, calls **update_cfg()** (p. 311) and inserts fbpow into the AC space.

Parameters

tf | Incoming mha configuration structure, contains information about input signal

Implements MHAPlugin::plugin_t < fftfbpow_t > (p. 696).

Standard MHA plugin process fct.

Polls new config and calls **process()** (p. 311) of the runtime configuration.

Parameters

```
s Input spectrum
```

Returns

Unchanged input spectrum

Constructs new runtime configuration in thread-safe manner.

5.93.4 Member Data Documentation

5.93.4.1 std::string fftfbpow::fftfbpow_interface_t::name [private]

Configured name of this plugin instance.

5.93.4.2 MHAEvents::patchbay_t<fftfbpow_interface_t> fftfbpow::fftfbpow_interface_t ::patchbay [private]

Patchbay to connect to MHA configuration interface.


The documentation for this class was generated from the following file:

· fftfbpow.cpp

5.94 fftfbpow::fftfbpow_t Class Reference

Run time configuration for the fftfbpow plugin.

Inheritance diagram for fftfbpow::fftfbpow_t:

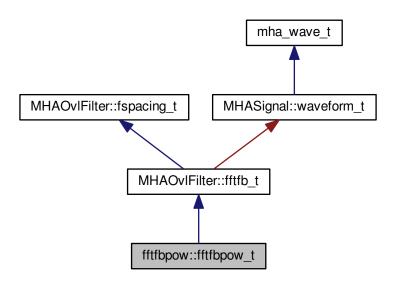

Public Member Functions

• fftfbpow_t (MHAOvIFilter::fftfb_vars_t &vars, unsigned int nch, unsigned int nfft, mha
—real_t fs, algo_comm_t ac, std::string name)

Constructor of the run time configuration.

Public Attributes

MHA_AC::waveform_t fbpow

AC variable containing the estimated power in each frequency band.

Additional Inherited Members

5.94.1 Detailed Description

Run time configuration for the fftfbpow plugin.

5.94.2 Constructor & Destructor Documentation

Constructor of the run time configuration.

Parameters

vars	Set of configuration variables for FFT-based overlapping filters
nch	Number of audio input channels
nfft	Length of FFT
fs	Sampling rate
ac	AC space
name	Configured name of plugin interface, used as prefix for AC variable names

5.94.3 Member Data Documentation

5.94.3.1 MHA_AC::waveform_t fftfbpow::fftfbpow_t::fbpow


AC variable containing the estimated power in each frequency band.

The documentation for this class was generated from the following file:

fftfbpow.cpp

5.95 fftfilterbank::fftfb_interface_t Class Reference

Inheritance diagram for fftfilterbank::fftfb_interface_t:

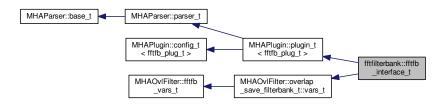

Public Member Functions

- fftfb_interface_t (const algo_comm_t &ac, const std::string &th, const std::string &al)

 Default values are set and MHA configuration variables registered into the parser.
- void prepare (mhaconfig_t &)

Prepare all variables for processing.

- void release ()
- mha_spec_t * process (mha_spec_t *)
- mha_wave_t * process (mha_wave_t *)

Private Member Functions

void update_cfg ()

Private Attributes

- MHAParser::bool_t return_imag
- MHAEvents::patchbay t< fftfb interface t > patchbay
- MHA_AC::int_t nchannels
- std::string algo
- bool prepared
- · unsigned int nbands

Additional Inherited Members

5.95.1 Constructor & Destructor Documentation

Default values are set and MHA configuration variables registered into the parser.

Parameters

ac	algorithm communication handle
th	chain name
al	algorithm name

5.95.2 Member Function Documentation

Prepare all variables for processing.

In this function, all variables are initialised and the filter shapes for each band are calculated. The filter shapes W(f) are defined as

$$W(f) = W(T(S(f))) = W(x), \quad x = T(S(f)) = T(\hat{f}),$$

W(x) beeing a symmetric window function in the interval [-1,1] and S(f) the transformation from the linear scale to the given frequency scale (see functions in FreqScaleFun). The function $T(\hat{f})$ transforms the frequency range between the center frequencies $[\hat{f}_{k-1}, \hat{f}_k]$ and $[\hat{f}_k, \hat{f}_{k+1}]$ into the interval [-1,0] and [0,1], respectively. This function is realised by the function linecale().

Parameters

tf Channel configuration

Implements MHAPlugin::plugin_t < fftfb_plug_t > (p. 696).

Reimplemented from MHAPlugin::plugin_t < fftfb_plug_t > (p. 697).


- 5.95.3 Member Data Documentation
- 5.95.3.1 MHAParser::bool t fftfilterbank::fftfb_interface_t::return_imag [private]
- **5.95.3.2 MHAEvents::patchbay_t**<**fftfb_interface_t**> **fftfilterbank::fftfb_interface_t::patchbay**[private]
- **5.95.3.3** MHA_AC::int_t fftfilterbank::fftfb_interface_t::nchannels [private]
- **5.95.3.4 std::string fftfilterbank::fftfb_interface_t::algo** [private]
- **5.95.3.5** bool fftfilterbank::fftfb_interface_t::prepared [private]
- **5.95.3.6** unsigned int fftfilterbank::fftfb_interface_t::nbands [private]

The documentation for this class was generated from the following file:

fftfilterbank.cpp

5.96 fftfilterbank::fftfb_plug_t Class Reference

Inheritance diagram for fftfilterbank::fftfb_plug_t:

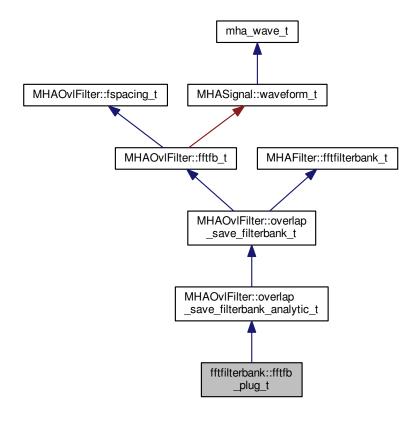

Public Member Functions

```
    fftfb_plug_t (MHAOvIFilter::overlap_save_filterbank_t::vars_t &, mhaconfig_←
t chcfg, algo_comm_t ac, std::string alg, bool return_imag)
```

- mha_spec_t * process (mha_spec_t *)
- mha_wave_t * process (mha_wave_t *)
- void insert ()

Private Attributes

- MHAOvIFilter::fftfb_ac_info_t fb_acinfo
- MHASignal::spectrum_t s_out
- MHA_AC::waveform_t imag
- bool return imag

Additional Inherited Members

```
5.96.1 Constructor & Destructor Documentation
```

```
5.96.1.1 fftfilterbank::fftfb_plug_t::fftfb_plug_t (

MHAOvIFilter::overlap_save_filterbank_t::vars_t & vars,

mhaconfig_t chcfg,

algo_comm_t ac,

std::string alg,

bool return_imag )
```

5.96.2 Member Function Documentation

```
5.96.2.1 mha_spec_t * fftfilterbank::fftfb_plug_t::process ( mha_spec_t * s )
```


- 5.96.2.3 void fftfilterbank::fftfb_plug_t::insert ()
- 5.96.3 Member Data Documentation
- **5.96.3.1** MHAOvlFilter::fftfb_ac_info_t fftfilterbank::fftfb_plug_t::fb_acinfo [private]
- **5.96.3.2** MHASignal::spectrum_t fftfilterbank::fftfb_plug_t::s_out [private]
- **5.96.3.3 MHA AC::waveform t fftfilterbank::fftfb_plug_t::imag** [private]
- **5.96.3.4 bool fftfilterbank::fftfb_plug_t::return_imag_** [private]

The documentation for this class was generated from the following file:

fftfilterbank.cpp

5.97 frequency_translator_t Class Reference

Inheritance diagram for frequency_translator_t:

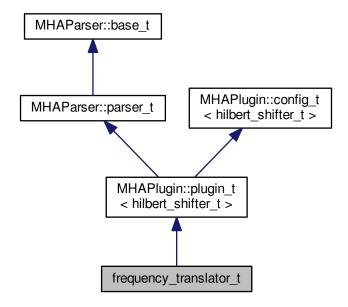

Public Member Functions

- frequency_translator_t (const algo_comm_t &, const std::string &, const std::string &)
- mha_spec_t * process (mha_spec_t *)
- void prepare (mhaconfig_t &)
- void release ()

Private Member Functions

• void update ()

Private Attributes

- MHAEvents::patchbay_t< frequency_translator_t > patchbay
- MHAParser::vfloat_t df
- MHAParser::float_t fmin
- MHAParser::float_t fmax
- MHAParser::int_t irslen
- MHAParser::kw_t phasemode

Additional Inherited Members


```
5.97.1 Constructor & Destructor Documentation
5.97.1.1 frequency translator t::frequency translator t (
                    const algo comm t & iac,
                    const std::string & ith,
                    const std::string & ial )
5.97.2 Member Function Documentation
5.97.2.1 mha_spec_t * frequency_translator_t::process (
                    mha\_spec\_t * s)
5.97.2.2 void frequency translator t::prepare (
                    mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin_t< hilbert_shifter_t > (p. 696).
5.97.2.3 void frequency_translator_t::release (
                    void ) [virtual]
Reimplemented from MHAPlugin::plugin_t< hilbert_shifter_t > (p. 697).
5.97.2.4 void frequency_translator_t::update( ) [private]
5.97.3 Member Data Documentation
5.97.3.1 MHAEvents::patchbay_t<frequency_translator_t> frequency_translator_t::patchbay
         [private]
5.97.3.2 MHAParser::vfloat_t frequency_translator_t::df [private]
5.97.3.3 MHAParser::float_t frequency_translator_t::fmin [private]
5.97.3.4 MHAParser::float_t frequency_translator_t::fmax [private]
5.97.3.5 MHAParser::int_t frequency_translator_t::irslen [private]
5.97.3.6 MHAParser::kw_t frequency_translator_t::phasemode [private]
```

fshift_hilbert.cpp

The documentation for this class was generated from the following file:

5.98 fw_t Class Reference

Inheritance diagram for fw_t:

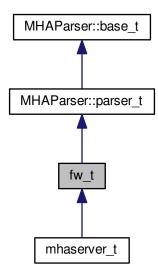

Public Member Functions

- fw_t ()
- ~fw_t ()
- bool exit_request () const

Protected Attributes

- int proc_error
- int io_error

Private Types

Private Member Functions

- void **prepare** () preparation for processing
- void **start** () start of processing
- void stop ()

stop/pause of processing

· void release ()

release of IO device

void quit ()

controlled quit

- void stopped (int, int)
- void started ()
- int process (mha_wave_t *, mha_wave_t **)
- void exec_fw_command ()
- void load_proc_lib ()
- void load_io_lib ()
- void fw_sleep_cmd ()
- void fw_until_cmd ()
- void get_input_signal_dimension ()
- void async_read ()
- void async_poll_msg ()
- void get_parserstate ()

Static Private Member Functions

- static void stopped (void *h, int proc_err, int io_err)
- static void started (void *h)
- static int process (void *h, mha_wave_t *sln, mha_wave_t **sOut)

Private Attributes

- fw_vars_t prepare_vars
- · MHAParser::int mon t nchannels out
- MHAParser::string_t proc_name
- MHAParser::string_t io_name
- MHAParser::bool_t exit_on_stop
- MHAParser::int_t fw_sleep
- MHAParser::string t fw until
- MHAParser::kw_t fw_cmd
- MHAParser::string_mon_t parserstate
- MHAParser::string t errorlog
- MHAParser::string_t fatallog
- MHAParser::vstring_t plugins
- MHAParser::vstring_t plugin_paths
- MHAParser::bool_t dump_mha
- MHAParser::string_t inst_name

A variable for naming MHA instances.

- MHAKernel::algo_comm_class_t ac
- PluginLoader::mhapluginloader_t * proc_lib
- io_lib_t * io_lib

- mhaconfig_t cfin
- · mhaconfig t cfout
- state_t state
- bool b_exit_request
- MHAParser::string_mon_t proc_error_string
- MHAEvents::patchbay_t< fw_t > patchbay

Additional Inherited Members

```
5.98.1 Member Enumeration Documentation
```

```
5.98.1.1 enum fw_t::state_t [private]
```

Enumerator

```
fw_unprepared
```

fw_stopped

fw_starting

fw_running

fw_stopping

fw_exiting

5.98.2 Constructor & Destructor Documentation

```
5.98.2.1 fw_t::fw_t ( )
```

5.98.3 Member Function Documentation

```
5.98.3.1 bool fw_t::exit_request() const [inline]
```

preparation for processing

```
5.98.3.3 void fw_t::start() [private]
```

start of processing

```
5.98.3.4 void fw_t::stop() [private]
stop/pause of processing
5.98.3.5 void fw_t::release( ) [private]
release of IO device
5.98.3.6 void fw_t::quit() [private]
controlled quit
5.98.3.7 static void fw_t::stopped (
                    void *h,
                    int proc_err,
                    int io_err ) [inline], [static], [private]
5.98.3.8 static void fw_t::started (
                    void * h ) [inline], [static], [private]
5.98.3.9 static int fw_t::process (
                    void *h,
                    mha wave t * sln,
                    mha_wave_t ** sOut ) [inline], [static], [private]
5.98.3.10 void fw_t::stopped (
                     int proc_err,
                     int io_err ) [private]
5.98.3.11 void fw_t::started( ) [private]
5.98.3.12 int fw_t::process (
                     mha_wave_t * s_in,
                     mha_wave_t ** s_out ) [private]
5.98.3.13 void fw_t::exec_fw_command() [private]
5.98.3.14 void fw_t::load_proc_lib( ) [private]
5.98.3.15 void fw_t::load_io_lib( ) [private]
5.98.3.16 void fw_t::fw_sleep_cmd( ) [private]
5.98.3.17 void fw_t::fw_until_cmd( ) [private]
```

```
5.98.3.18 void fw_t::get_input_signal_dimension() [private]
5.98.3.19 void fw_t::async_read( ) [inline], [private]
5.98.3.20 void fw_t::async_poll_msg( ) [private]
5.98.3.21 void fw_t::get_parserstate( ) [private]
5.98.4 Member Data Documentation
5.98.4.1 fw_vars_t fw_t::prepare_vars [private]
5.98.4.2 MHAParser::int_mon_t fw_t::nchannels_out [private]
5.98.4.3 MHAParser::string_t fw_t::proc_name [private]
5.98.4.4 MHAParser::string tfw_t::io_name [private]
5.98.4.5 MHAParser::bool_t fw_t::exit_on_stop [private]
5.98.4.6 MHAParser::int_t fw_t::fw_sleep [private]
5.98.4.7 MHAParser::string_t fw_t::fw_until [private]
5.98.4.8 MHAParser::kw_t fw_t::fw_cmd [private]
5.98.4.9
        MHAParser::string_mon_t fw_t::parserstate [private]
5.98.4.10 MHAParser::string_t fw_t::errorlog [private]
5.98.4.11 MHAParser::string_t fw_t::fatallog [private]
5.98.4.12 MHAParser::vstring tfw_t::plugins [private]
5.98.4.13 MHAParser::vstring_t fw_t::plugin_paths [private]
5.98.4.14 MHAParser::bool_t fw_t::dump_mha [private]
5.98.4.15 MHAParser::string_t fw_t::inst_name [private]
A variable for naming MHA instances.
```

```
5.98.4.16 MHAKernel::algo_comm_class_t fw_t::ac [private]
5.98.4.17 PluginLoader::mhapluginloader_t* fw_t::proc_lib [private]
5.98.4.18 io_lib_t* fw_t::io_lib [private]
5.98.4.19 mhaconfig_t fw_t::cfin [private]
5.98.4.20 mhaconfig_t fw_t::cfout [private]
5.98.4.21 state_t fw_t::state [private]
5.98.4.22 bool fw_t::b_exit_request [private]
5.98.4.23 int fw_t::proc_error [protected]
5.98.4.24 int fw_t::io_error [protected]
5.98.4.25 MHAParser::string_mon_t fw_t::proc_error_string [private]
5.98.4.26 MHAEvents::patchbay_t<fw_t> fw_t::patchbay [private]
```

The documentation for this class was generated from the following files:

- mhafw_lib.h
- mhafw_lib.cpp

5.99 fw_vars_t Class Reference

Public Member Functions

- fw_vars_t (MHAParser::parser_t &)
- void lock srate fragsize ()
- void lock_channels ()
- void unlock_srate_fragsize ()
- void unlock channels ()

Public Attributes

- MHAParser::int_t pinchannels
- MHAParser::int_t pfragmentsize
- MHAParser::float_t psrate

```
5.99.1 Constructor & Destructor Documentation
```

```
5.99.1.1 fw_vars_t::fw_vars_t (

MHAParser::parser_t & p )
```

5.99.2 Member Function Documentation

```
5.99.2.1 void fw_vars_t::lock_srate_fragsize ( )
```

5.99.2.2 void fw_vars_t::lock_channels ()

5.99.2.3 void fw_vars_t::unlock_srate_fragsize ()

5.99.2.4 void fw_vars_t::unlock_channels ()

5.99.3 Member Data Documentation

5.99.3.1 MHAParser::int_t fw_vars_t::pinchannels

5.99.3.2 MHAParser::int_t fw_vars_t::pfragmentsize


5.99.3.3 MHAParser::float_t fw_vars_t::psrate

The documentation for this class was generated from the following files:

- · mhafw_lib.h
- · mhafw_lib.cpp

5.100 gain::gain_if_t Class Reference

Inheritance diagram for gain::gain_if_t:

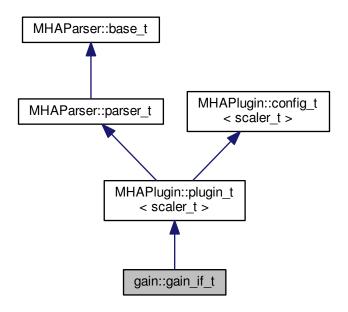

Public Member Functions

- gain_if_t (const algo_comm_t &, const std::string &, const std::string &)
- mha_wave_t * process (mha_wave_t *)
- mha_spec_t * process (mha_spec_t *)
- void prepare (mhaconfig_t &)
- void release ()

Private Member Functions

- void update_gain ()
- void update_bbgain ()
- void update_minmax ()

Private Attributes

- MHAEvents::patchbay_t< gain_if_t > patchbay
- MHAParser::vfloat_t gains
- MHAParser::float_t bbgain
- MHAParser::float_t vmin
- MHAParser::float_t vmax

Additional Inherited Members


```
5.100.1 Constructor & Destructor Documentation
5.100.1.1 gain::gain_if_t::gain_if_t (
                      const algo_comm_t & iac,
                      const std::string &,
                      const std::string & )
5.100.2 Member Function Documentation
5.100.2.1
         mha_wave_t * gain::gain_if_t::process (
                      mha_wave_t * s )
5.100.2.2 mha_spec_t * gain::gain_if_t::process (
                      mha_spec_t * s )
5.100.2.3 void gain::gain_if_t::prepare (
                      mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin t < scaler t > (p. 696).
5.100.2.4 void gain::gain_if_t::release (
                     void ) [virtual]
Reimplemented from MHAPlugin::plugin t < scaler t > (p. 697).
5.100.2.5 void gain::gain_if_t::update_gain() [private]
5.100.2.6
         void gain::gain_if_t::update_bbgain( ) [private]
5.100.2.7 void gain::gain if t::update minmax() [private]
5.100.3 Member Data Documentation
5.100.3.1
         MHAEvents::patchbay_t<gain_if_t> gain::gain_if_t::patchbay [private]
5.100.3.2 MHAParser::vfloat_t gain::gain_if_t::gains [private]
5.100.3.3 MHAParser::float_t gain::gain_if_t::bbgain [private]
5.100.3.4 MHAParser::float t gain::gain_if_t::vmin [private]
5.100.3.5 MHAParser::float t gain::gain_if_t::vmax [private]
```

The documentation for this class was generated from the following file:

• gain.cpp

5.101 gain::scaler_t Class Reference

Inheritance diagram for gain::scaler_t:

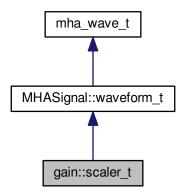

Public Member Functions

• scaler_t (const unsigned int &channels, const MHAParser::vfloat_t &gains)

Additional Inherited Members

5.101.1 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

· gain.cpp

5.102 hanning_ramps_t Class Reference

Public Member Functions

- hanning_ramps_t (unsigned int, unsigned int)
- ∼hanning_ramps_t ()
- void operator() (MHASignal::waveform_t &)

Private Attributes

```
• unsigned int len_a
```

```
unsigned int len_b
```

- mha_real_t * ramp_a
- mha_real_t * ramp_b

```
5.102.1 Constructor & Destructor Documentation
```

```
5.102.1.2 hanning_ramps_t::~hanning_ramps_t ( void )
```

5.102.2 Member Function Documentation

```
5.102.2.1 void hanning_ramps_t::operator() (

MHASignal::waveform_t & b)
```

5.102.3 Member Data Documentation

```
5.102.3.1 unsigned int hanning_ramps_t::len_a [private]
```

5.102.3.2 unsigned int hanning_ramps_t::len_b [private]

5.102.3.3 mha_real_t* **hanning_ramps_t::ramp_a** [private]


5.102.3.4 mha_real_t* **hanning_ramps_t::ramp_b** [private]

The documentation for this class was generated from the following file:

spec2wave.cpp

5.103 hilbert_shifter_t Class Reference

Inheritance diagram for hilbert_shifter_t:

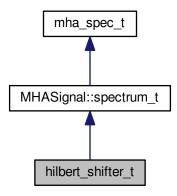

Public Member Functions

- hilbert_shifter_t (unsigned int fftlen, unsigned int channels, mha_real_t srate, unsigned int kmin, unsigned int kmax, std::vector< mha_real_t > dphi, unsigned int frameshift, unsigned int maxirslen, unsigned int phasemode)
- ∼hilbert shifter t()
- void process (mha_spec_t *)

Private Attributes

- MHASignal::spectrum_t fullspec
- MHASignal::spectrum t analytic
- MHASignal::waveform_t shifted
- MHASignal::spectrum_t mixw_shift
- MHASignal::spectrum_t mixw_ref
- fftw_plan plan_spec2analytic
- · mha fft t mhafft
- MHASignal::waveform_t phi
- MHASignal::waveform_t dphi
- unsigned int kmin
- unsigned int kmax
- unsigned int frameshift

Additional Inherited Members


```
5.103.1 Constructor & Destructor Documentation
5.103.1.1 hilbert shifter t::hilbert shifter t (
                      unsigned int fftlen,
                      unsigned int channels,
                      mha real t srate,
                      unsigned int kmin,
                      unsigned int kmax,
                      std::vector< mha_real_t > dphi,
                      unsigned int frameshift,
                      unsigned int maxirslen,
                      unsigned int phasemode )
5.103.1.2 hilbert_shifter_t::~hilbert_shifter_t()
5.103.2 Member Function Documentation
5.103.2.1
         void hilbert_shifter_t::process (
                      mha spec t * s)
5.103.3 Member Data Documentation
5.103.3.1
          MHASignal::spectrum_t hilbert_shifter_t::fullspec [private]
5.103.3.2 MHASignal::spectrum_t hilbert_shifter_t::analytic [private]
5.103.3.3 MHASignal::waveform t hilbert_shifter_t::shifted [private]
5.103.3.4 MHASignal::spectrum_t hilbert_shifter_t::mixw_shift [private]
5.103.3.5 MHASignal::spectrum_t hilbert_shifter_t::mixw_ref [private]
5.103.3.6 fftw_plan hilbert_shifter_t::plan_spec2analytic [private]
5.103.3.7 mha_fft_t hilbert_shifter_t::mhafft [private]
5.103.3.8 MHASignal::waveform_t hilbert_shifter_t::phi [private]
5.103.3.9 MHASignal::waveform t hilbert_shifter_t::dphi [private]
5.103.3.10 unsigned int hilbert_shifter_t::kmin [private]
5.103.3.11 unsigned int hilbert_shifter_t::kmax [private]
5.103.3.12 unsigned int hilbert_shifter_t::frameshift [private]
```

The documentation for this class was generated from the following file:

fshift hilbert.cpp

5.104 identity_t Class Reference

Inheritance diagram for identity_t:

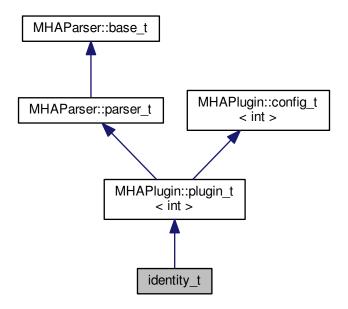

Public Member Functions

- identity_t (const algo_comm_t &, const std::string &, const std::string &)
- mha_wave_t * process (mha_wave_t *)
- mha_spec_t * process (mha_spec_t *)
- void prepare (mhaconfig_t &)
- void release ()

Additional Inherited Members

5.104.1 Constructor & Destructor Documentation

5.104.2 Member Function Documentation


Reimplemented from MHAPlugin::plugin_t< int > (p. 697).

The documentation for this class was generated from the following file:

· identity.cpp

5.105 iirfilter_t Class Reference

Inheritance diagram for iirfilter_t:

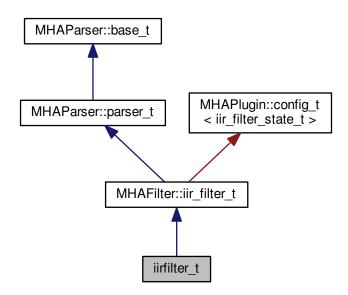

Public Member Functions

```
• iirfilter_t (const algo_comm_t &, const std::string &, const std::string &)
```

- void prepare_ (mhaconfig_t &)
- void release_()
- mha_wave_t * process (mha_wave_t *)

Additional Inherited Members

```
5.105.1 Constructor & Destructor Documentation
```

5.105.2 Member Function Documentation

The documentation for this class was generated from the following file:


mha_wave_t * s)

iirfilter.cpp

5.106 io_file_t Class Reference

File IO.

Inheritance diagram for io_file_t:

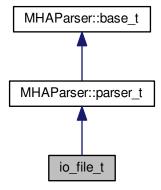

Public Member Functions

- io_file_t (int fragsize, float samplerate, IOProcessEvent_t proc_event, void *proc_←
 handle, IOStartedEvent_t start_event, void *start_handle, IOStoppedEvent_t stop←
 _event, void *stop_handle)
- ~io_file_t ()
- void prepare (int, int)

Allocate buffers, activate FILE client and install internal ports.

- void start ()
- void stop ()
- void release ()

Remove FILE client and deallocate internal ports and buffers.

Private Member Functions

- void stopped (int, int)
- void setlock (bool locked)

lock or unlock all parser variables.

Private Attributes

- int fragsize
- · float samplerate
- · int nchannels in
- int nchannels_file_in
- int nchannels out
- IOProcessEvent_t proc_event
- void * proc handle
- IOStartedEvent t start event
- void * start_handle
- IOStoppedEvent t stop event
- void * stop_handle
- MHAParser::string_t filename_input
- MHAParser::string_t filename_output
- MHAParser::kw t output sample format
- MHAParser::int_t startsample
- MHAParser::int_t length
- MHAParser::bool t strict channel match
- MHAParser::bool_t strict_srate_match
- MHASignal::waveform t * s in
- MHASignal::waveform_t * s_file_in
- mha_wave_t * s_out
- bool b prepared
- SNDFILE * sf in
- SNDFILE * sf out
- · SF INFO sfinf in
- SF_INFO sfinf_out
- · sf count t total read

```
Additional Inherited Members
```

```
5.106.1 Detailed Description
```

File IO.

```
5.106.2 Constructor & Destructor Documentation
```

```
5.106.2.2 io_file_t:: ~io_file_t ( )
```

5.106.3 Member Function Documentation

Allocate buffers, activate FILE client and install internal ports.

```
5.106.3.2 void io_file_t::start ( )

5.106.3.3 void io_file_t::stop ( )

5.106.3.4 void io_file_t::release ( void )
```

Remove FILE client and deallocate internal ports and buffers.

lock or unlock all parser variables.

Used in prepare/release.

Parameters

locked When true, locks. When false, unlocks.

```
5.106.4 Member Data Documentation
5.106.4.1 int io_file_t::fragsize [private]
5.106.4.2 float io_file_t::samplerate [private]
5.106.4.3 int io_file_t::nchannels_in [private]
5.106.4.4 int io_file_t::nchannels_file_in [private]
5.106.4.5 int io_file_t::nchannels_out [private]
5.106.4.6 IOProcessEvent_t io_file_t::proc_event [private]
5.106.4.7 void* io_file_t::proc_handle [private]
5.106.4.8 IOStartedEvent_t io_file_t::start_event [private]
5.106.4.9 void* io_file_t::start_handle [private]
5.106.4.10 IOStoppedEvent tio_file_t::stop_event [private]
5.106.4.11 void* io_file_t::stop_handle [private]
5.106.4.12 MHAParser::string_t io_file_t::filename_input [private]
5.106.4.13 MHAParser::string_t io_file_t::filename_output [private]
5.106.4.14 MHAParser::kw_t io_file_t::output_sample_format [private]
5.106.4.15 MHAParser::int_t io_file_t::startsample [private]
5.106.4.16 MHAParser::int_t io_file_t::length [private]
5.106.4.17 MHAParser::bool_t io_file_t::strict_channel_match [private]
5.106.4.18 MHAParser::bool_t io_file_t::strict_srate_match [private]
```

```
5.106.4.19 MHASignal::waveform_t*io_file_t::s_in [private]
5.106.4.20 MHASignal::waveform_t*io_file_t::s_file_in [private]
5.106.4.21 mha_wave_t*io_file_t::s_out [private]
5.106.4.22 bool io_file_t::b_prepared [private]
5.106.4.23 SNDFILE*io_file_t::sf_in [private]
5.106.4.24 SNDFILE*io_file_t::sf_out [private]
5.106.4.25 SF_INFO io_file_t::sfinf_in [private]
5.106.4.26 SF_INFO io_file_t::sfinf_out [private]
5.106.4.27 sf_count_t io_file_t::total_read [private]
```


The documentation for this class was generated from the following file:

MHAIOFile.cpp

5.107 io_lib_t Class Reference

Class for loading MHA sound IO module.

Inheritance diagram for io_lib_t:

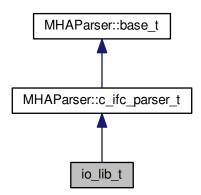

Public Member Functions

io_lib_t (int fragsize, float samplerate, IOProcessEvent_t proc_event, void *proc_
handle, IOStartedEvent_t start_event, void *start_handle, IOStoppedEvent_t stop_
event, void *stop_handle, std::string libname)

load and initialize MHA sound io module.

• ~io_lib_t ()

Deinitialize and unload this MHA sound io module.

• void **prepare** (unsigned int inch, unsigned int outch)

Prepare the sound io module.

• void start ()

Tell the sound io module to start sound processing.

- void stop ()
- void release ()
- std::string lib_str_error (int err)

Protected Member Functions

void test_error ()

Protected Attributes

- int lib_err
- · dynamiclib t lib handle
- void * lib data
- IOInit_t IOInit_cb
- IOPrepare_t IOPrepare_cb
- · IOStart t IOStart cb
- IOStop_t IOStop_cb
- IORelease_t IORelease_cb
- IOSetVar_t IOSetVar_cb
- IOStrError_t IOStrError_cb
- IODestroy_t IODestroy_cb

Additional Inherited Members

5.107.1 Detailed Description

Class for loading MHA sound IO module.

5.107.2 Constructor & Destructor Documentation

load and initialize MHA sound io module.

```
5.107.2.2 io_lib_t::~io_lib_t( )
```

Deinitialize and unload this MHA sound io module.

5.107.3 Member Function Documentation

Prepare the sound io module.

After preparation, the sound io module may start the sound processing at any time (external trigger). When the sound processing is started, the sound io module will call the start_event callback.

Parameters

inch	number of input channels
outch	number of output channels

```
5.107.3.2 void io_lib_t::start ( )
```

Tell the sound io module to start sound processing.

Some io modules need this, for others that wait for external events this method might do nothing.

```
5.107.3.3 void io_lib_t::stop ( )
5.107.3.4 void io_lib_t::release()
5.107.3.5 std::string io_lib_t::lib_str_error (
                      int err )
5.107.3.6 void io_lib_t::test_error() [protected]
5.107.4 Member Data Documentation
5.107.4.1 int io_lib_t::lib_err [protected]
5.107.4.2 dynamiclib tio_lib_t::lib_handle [protected]
5.107.4.3 void* io_lib_t::lib_data [protected]
5.107.4.4 IOInit_t io_lib_t::IOInit_cb [protected]
5.107.4.5 IOPrepare_t io_lib_t::IOPrepare_cb [protected]
5.107.4.6 IOStart_t io_lib_t::IOStart_cb [protected]
5.107.4.7 IOStop_t io_lib_t::IOStop_cb [protected]
5.107.4.8 | IORelease tio lib t::IORelease cb [protected]
5.107.4.9 IOSetVar_t io_lib_t::IOSetVar_cb [protected]
5.107.4.10 IOStrError_t io_lib_t::IOStrError_cb [protected]
5.107.4.11 IODestroy_t io_lib_t::IODestroy_cb [protected]
```


The documentation for this class was generated from the following files:

- · mhafw lib.h
- mhafw_lib.cpp

5.108 io_parser_t Class Reference

Main class for Parser IO.

Inheritance diagram for io parser t:

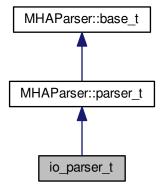

Public Member Functions

- io_parser_t (unsigned int fragsize, IOProcessEvent_t proc_event, void *proc_handle, IOStartedEvent_t start_event, void *start_handle, IOStoppedEvent_t stop_event, void *stop_handle)
- ~io_parser_t ()
- void **prepare** (int, int)

Allocate buffers, activate JACK client and install internal ports.

- void start ()
- void stop ()
- void release ()

Remove JACK client and deallocate internal ports and buffers.

Private Member Functions

- void stopped (int, int)
- void started ()
- void process_frame ()

Private Attributes

- · unsigned int fragsize
- unsigned int nchannels_in
- unsigned int nchannels_out
- IOProcessEvent_t proc_event
- void * proc handle
- IOStartedEvent_t start_event
- void * start_handle
- IOStoppedEvent_t stop_event
- void * stop handle
- MHAParser::mfloat_t input
- MHAParser::mfloat mon t output
- MHASignal::waveform_t * s_in
- mha_wave_t * s_out
- bool b_fw_started
- bool b_stopped
- bool b_prepared
- bool b_starting
- MHAEvents::patchbay_t< io_parser_t > patchbay

Additional Inherited Members

```
5.108.1 Detailed Description
```

Main class for Parser IO.

```
5.108.2 Constructor & Destructor Documentation
```

```
5.108.2.2 io_parser_t::\simio_parser_t ( )
```

5.108.3 Member Function Documentation

Allocate buffers, activate JACK client and install internal ports.

```
5.108.3.2 void io_parser_t::start ( )
5.108.3.3 void io_parser_t::stop ( )
5.108.3.4 void io_parser_t::release (
                     void )
Remove JACK client and deallocate internal ports and buffers.
5.108.3.5 void io_parser_t::stopped (
                     int proc_err,
                     int io_err ) [private]
5.108.3.6 void io_parser_t::started( ) [private]
5.108.3.7 void io_parser_t::process_frame() [private]
5.108.4 Member Data Documentation
5.108.4.1 unsigned int io parser t::fragsize [private]
5.108.4.2 unsigned int io_parser_t::nchannels_in [private]
5.108.4.3 unsigned int io_parser_t::nchannels_out [private]
5.108.4.4 IOProcessEvent_t io_parser_t::proc_event [private]
5.108.4.5 void*io_parser_t::proc_handle [private]
5.108.4.6 IOStartedEvent_t io_parser_t::start_event [private]
5.108.4.7 void* io_parser_t::start_handle [private]
5.108.4.8 IOStoppedEvent_tio_parser_t::stop_event [private]
5.108.4.9 void* io_parser_t::stop_handle [private]
5.108.4.10 MHAParser::mfloat_t io_parser_t::input [private]
5.108.4.11 MHAParser::mfloat_mon_t io_parser_t::output [private]
5.108.4.12 MHASignal::waveform_t* io_parser_t::s_in [private]
5.108.4.13 mha_wave_t* io_parser_t::s_out [private]
5.108.4.14 boolio_parser_t::b_fw_started [private]
5.108.4.15 bool io_parser_t::b_stopped [private]
5.108.4.16 bool io_parser_t::b_prepared [private]
5.108.4.17 bool io_parser_t::b_starting [private]
5.108.4.18 MHAEvents::patchbay_t<io_parser_t>io_parser_t::patchbay [private]
```

The documentation for this class was generated from the following file:

MHAIOParser.cpp

5.109 io_tcp_fwcb_t Class Reference

TCP sound-io library's interface to the framework callbacks.

Public Member Functions

io_tcp_fwcb_t (IOProcessEvent_t proc_event, void *proc_handle, IOStartedEvent
 _t start_event, void *start_handle, IOStoppedEvent_t stop_event, void *stop_
 handle)

Constructor stores framework handles and initializes error numbers to 0.

virtual ~io_tcp_fwcb_t ()

Do-nothing destructor.

virtual void start ()

Call the framework's start callback.

virtual int process (mha_wave_t *sln, mha_wave_t *&sOut)

Call the frameworks processing callback.

• virtual void set errnos (int proc err, int io err)

Save error numbers to use during.

• virtual void stop ()

Call the frameworks stop callback.

Private Attributes

IOProcessEvent_t proc_event

Pointer to signal processing callback function.

IOStartedEvent t start event

Pointer to start notification callback function.

IOStoppedEvent_t stop_event

Pointer to stop notification callback function.

void * proc_handle

Handles belonging to framework.

- void * start_handle
- void * stop handle
- int proc_err

Errors from the processing callback and from the TCP IO itself are stored here before closing Network handles.

int io_err

5.109.1 Detailed Description

TCP sound-io library's interface to the framework callbacks.

5.109.2 Constructor & Destructor Documentation

Constructor stores framework handles and initializes error numbers to 0.

```
5.109.2.2 virtual io_tcp_fwcb_t::~io_tcp_fwcb_t() [inline], [virtual]
```

Do-nothing destructor.

```
5.109.3 Member Function Documentation
```

```
5.109.3.1 void io_tcp_fwcb_t::start( ) [virtual]
```

Call the framework's start callback.

Call the frameworks processing callback.

Parameters

sIn	The input sound data just received from TCP.
sOut	A pointer to output sound data. Will point to the output sound data storage when the
	callback finishes.

Returns

Status, an error number from the signal processing callback. If this is != 0, then the connection should be closed.

Save error numbers to use during.

See also

```
stop (p. 348)
```

Parameters

```
proc_err The error number from the
```

See also

```
process (p. 347) callback.
```

Parameters

io_err	The error number from the io library itself.
--------	--

```
5.109.3.4 void io_tcp_fwcb_t::stop( ) [virtual]
```

Call the frameworks stop callback.

Uses the error numbers set previously with

See also

```
set_errnos (p. 347).
```

5.109.4 Member Data Documentation

```
5.109.4.1 IOProcessEvent_t io_tcp_fwcb_t::proc_event [private]
```

Pointer to signal processing callback function.

```
5.109.4.2 IOStartedEvent_t io_tcp_fwcb_t::start_event [private]
```

Pointer to start notification callback function.

Called when a new TCP connection is established or the user issues the start command while there is a connection.

```
5.109.4.3 IOStoppedEvent_tio_tcp_fwcb_t::stop_event [private]
```

Pointer to stop notification callback function.

Called when the connection is closed.

```
5.109.4.4 void* io_tcp_fwcb_t::proc_handle [private]
```

Handles belonging to framework.

```
5.109.4.5 void * io_tcp_fwcb_t::start_handle [private]
```

Errors from the processing callback and from the TCP IO itself are stored here before closing Network handles.

MHAIOTCP is notified by the server when the connection has been taken down, and calls

See also

stop (p. 348) from that callback. Within **stop** (p. 348), these error numbers are read again and transmitted to the framework.


The documentation for this class was generated from the following file:

MHAIOTCP.cpp

5.110 io_tcp_parser_t Class Reference

The parser interface of the IOTCP library.

Inheritance diagram for io_tcp_parser_t:

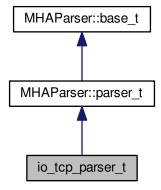

Public Member Functions

• virtual const std::string & get local address () const

Read parser variable local_address, this is the address of the network interface that should listen for incoming connections.

virtual unsigned short get_local_port () const

Read parser variable local_port, this is the TCP port that should be used for incoming connections.

virtual void set local port (unsigned short port)

Set parser variable local_port.

virtual bool get_server_port_open () const

Return the status of the server port as it is known to the parser.

virtual void set_server_port_open (bool open)

Inform the parser of the current status of the server socket.

virtual bool get_connected () const

Return the parser's knowledge concerning wether there currently exists an established sound data TCP connection or not.

virtual void set_connected (bool connected)

Inform the parser about the existance of a sound data connection.

virtual void set_new_peer (unsigned short port, const std::string &host)

Set parser monitor variables peer port and peer address, and calls set connected(true).

io_tcp_parser_t ()

Constructor initializes parser variables.

virtual ~io_tcp_parser_t ()

Do-nothing destructor.

virtual void debug (const std::string &message)

Private Attributes

MHAParser::string t local address

Lets the user set the local network interface to listen on.

MHAParser::int_t local_port

Lets the user choose the local tcp port to listen on.

MHAParser::int_mon_t server_port_open

Indicates wether the TCP server socket is currently open.

MHAParser::int mon t connected

Indicator if there currently is a sound data connection over TCP.

MHAParser::string_mon_t peer_address

Display the ip address of the currently connected sound data client.

MHAParser::int_mon_t peer_port

Display the tcp port used by the current sound data client.

MHAParser::string_t debug_filename

filename to write debugging info to (if non-empty)

• FILE * debug file

file handle to write debugging info to

Additional Inherited Members

5.110.1 Detailed Description

The parser interface of the IOTCP library.

5.110.2 Constructor & Destructor Documentation

```
5.110.2.1 io_tcp_parser_t::io_tcp_parser_t ( )
```

Constructor initializes parser variables.

```
5.110.2.2 virtual io_tcp_parser_t::~io_tcp_parser_t() [inline], [virtual]
```

Do-nothing destructor.

5.110.3 Member Function Documentation

```
5.110.3.1 virtual const std::string& io_tcp_parser_t::get_local_address ( ) const [inline], [virtual]
```

Read parser variable local_address, this is the address of the network interface that should listen for incoming connections.

Returns

A string containing the address of the local interface as it was set by the user.

```
5.110.3.2 unsigned short io_tcp_parser_t::get_local_port() const [virtual]
```

Read parser variable local_port, this is the TCP port that should be used for incoming connections.

Returns

The local tcp port to listen on as it was chosen by the user. The port number is between MIN_TCP_PORT and MAX_TCP_PORT.

Set parser variable local port.

This is needed when it was set to 0 before: In this case, the OS chooses a free port for the TCP server socket, and the port that it chose has to be published to the user via the parser interface.

Parameters

port	The TCP port number that is currently used. In the range [MIN_TCP_PORT,
	MAX_TCP_PORT], excluding 0.

Precondition

```
get_local_port() (p. 351) currently returns 0.
```

```
5.110.3.4 boolio_tcp_parser_t::get_server_port_open() const [virtual]
```

Return the status of the server port as it is known to the parser.

Returns

false after initialization, or the value most recently set via

See also

```
set_server_port_open (p. 352).
```

Inform the parser of the current status of the server socket.

Parameters

open Indicates wether the server socket has just been opened or closed.

Precondition

open may only have the value true if **get_server_port_open()** (p. 352) currently returns false.

Postcondition

See also

get_server_port_open (p. 352) returns the value (p. 52) of open.

```
5.110.3.6 bool io_tcp_parser_t::get_connected( ) const [virtual]
```

Return the parser's knowledge concerning wether there currently exists an established sound data TCP connection or not.

Returns

false after initialization, or the value most recently set via

See also

```
set_connected (p. 353).
```

Inform the parser about the existance of a sound data connection.

Parameters

```
connected Indicates wether there currently is a connection or not.
```

Precondition

connected must not have the same value that is currently returned by

See also

```
get_connected (p. 353).
```

Postcondition

See also

```
get_connected (p. 353) returns the value (p. 52) of open.
```

Set parser monitor variables peer_port and peer_address, and calls set_connected(true).

This method should be called when a new connection is established.

Parameters

port	The TCP port number used by the peer.
host	The Internet host where the peer is located.

Precondition

See also

get_connected (p. 353) currently returns false.

Postcondition

See also

get_connected (p. 353) returns true.

5.110.4 Member Data Documentation

```
5.110.4.1 MHAParser::string_t io_tcp_parser_t::local_address [private]
```

Lets the user set the local network interface to listen on.

```
5.110.4.2 MHAParser::int_t io_tcp_parser_t::local_port [private]
```

Lets the user choose the local tcp port to listen on.

```
5.110.4.3 MHAParser::int_mon_t io_tcp_parser_t::server_port_open [private]
```

Indicates wether the TCP server socket is currently open.

```
5.110.4.4 MHAParser::int_mon_t io_tcp_parser_t::connected [private]
```

Indicator if there currently is a sound data connection over TCP.

5.110.4.5 MHAParser::string_mon_t io_tcp_parser_t::peer_address [private]

Display the ip address of the currently connected sound data client.

5.110.4.6 MHAParser::int_mon_t io_tcp_parser_t::peer_port [private]

Display the tcp port used by the current sound data client.

5.110.4.7 MHAParser::string_t io_tcp_parser_t::debug_filename [private]

filename to write debugging info to (if non-empty)

5.110.4.8 FILE* **io_tcp_parser_t::debug_file** [private]

file handle to write debugging info to

The documentation for this class was generated from the following file:

MHAIOTCP.cpp

5.111 io_tcp_sound_t Class Reference

Sound data handling of io top library.

Classes

union float union

This union helps in conversion of floats from host byte order to network byte order and back again.

Public Member Functions

• io_tcp_sound_t (int fragsize, float samplerate)

Initialize sound data handling.

virtual ~io_tcp_sound_t ()

Do-nothing destructor.

virtual void prepare (int num_inchannels, int num_outchannels)

Called during prepare, sets number of audio channels and allocates sound data storage.

virtual void release ()

Called during release.

virtual int chunkbytes_in () const

Number of bytes that constitute one input sound chunk.

virtual std::string header () const

Create the tcp sound header lines.

virtual mha_wave_t * ntoh (const std::string &data)

Copy data received from tcp into mha_wave_t (p. 462) structure.

virtual std::string hton (const mha_wave_t *s_out)

Copy sound data from the output sound structure to a string.

Static Private Member Functions

static void check_sound_data_type ()

Check if mha_real_t is a usable 32-bit floating point type.

Private Attributes

• int fragsize

Number of sound samples in each channel expected and returned from processing callback.

float samplerate

Sampling rate.

• int num_inchannels

Number of input channels.

- int num outchannels
- MHASignal::waveform_t * s_in

Storage for input signal.

5.111.1 Detailed Description

Sound data handling of io tcp library.

5.111.2 Constructor & Destructor Documentation

Initialize sound data handling.

Checks sound data type by calling

See also

```
check_sound_data_type (p. 357).
```

Parameters

fragsize	Number of sound samples in each channel expected and returned from processing callback.
samplerate	Number of samples per second in each channel.

```
5.111.2.2 virtual io_tcp_sound_t::~io_tcp_sound_t( ) [inline], [virtual]
```

Do-nothing destructor.

5.111.3 Member Function Documentation

```
5.111.3.1 void io_tcp_sound_t::check_sound_data_type( ) [static], [private]
```

Check if mha_real_t is a usable 32-bit floating point type.

Exceptions

```
MHA_Error (p. 413) if mha_real_t is not compatible to 32-bit float.
```

Called during prepare, sets number of audio channels and allocates sound data storage.

Parameters

num_inchannels	Number of input audio channels.
num_outchannels	Number of output audio channels.

Called during release.

Deletes sound data storage.

```
5.111.3.4 int io_tcp_sound_t::chunkbytes_in() const [virtual]
```

Number of bytes that constitute one input sound chunk.

Returns

Number of bytes to read from TCP connection before invoking signal processing.

```
5.111.3.5 std::string io_tcp_sound_t::header( ) const [virtual]
```

Create the tcp sound header lines.

Copy data received from tcp into **mha_wave_t** (p. 462) structure.

Doing network-to-host byte order swapping in the process.

Parameters

```
data One chunk (
```

See also

```
chunkbytes_in (p. 357)) of sound data to process.
```

Returns

Pointer to the sound data storage.

Copy sound data from the output sound structure to a string.

Doing host-to-network byte order swapping while at it.

Parameters

```
s_out Pointer to the storage of the sound to put out.
```

Returns

The sound data in network byte order.

5.111.4 Member Data Documentation

```
5.111.4.1 int io_tcp_sound_t::fragsize [private]
```

Number of sound samples in each channel expected and returned from processing callback.

```
5.111.4.2 float io_tcp_sound_t::samplerate [private]
```

Sampling rate.

Number of samples per second in each channel.

5.111.4.3 int io_tcp_sound_t::num_inchannels [private]

Number of input channels.

Number of channels expected from and returned by signal processing callback.

```
5.111.4.4 int io_tcp_sound_t::num_outchannels [private]
```

5.111.4.5 MHASignal::waveform_t* io_tcp_sound_t::s_in [private]

Storage for input signal.

The documentation for this class was generated from the following file:

MHAIOTCP.cpp

5.112 io_tcp_sound_t::float_union Union Reference

This union helps in conversion of floats from host byte order to network byte order and back again.

Public Attributes

- float f
- unsigned int i
- char **c** [4]

5.112.1 Detailed Description

This union helps in conversion of floats from host byte order to network byte order and back again.

5.112.2 Member Data Documentation

5.112.2.1 float io tcp sound t::float union::f

5.112.2.2 unsigned int io_tcp_sound_t::float_union::i

5.112.2.3 char io_tcp_sound_t::float_union::c[4]

The documentation for this union was generated from the following file:

MHAIOTCP.cpp

5.113 io_tcp_t Class Reference

The tcp sound io library.

Public Member Functions

io_tcp_t (int fragsize, float samplerate, IOProcessEvent_t proc_event, void *proc_
handle, IOStartedEvent_t start_event, void *start_handle, IOStoppedEvent_t stop_
event, void *stop_handle)

• void **prepare** (int num_inchannels, int num_outchannels)

Allocate server socket and start thread waiting for sound data exchange.

• void start ()

Call frameworks start callback if there is a sound data connection at the moment.

• void stop ()

Close the current connection if there is one.

• void release ()

Close the current connection and close the server socket.

virtual void accept_loop ()

IO thread executes this method.

virtual void connection_loop (MHA_TCP::Connection *c)

IO thread executes this method for each connection.

virtual void parse (const char *cmd, char *retval, unsigned int len)

Parser interface.

virtual ~io_tcp_t ()

Private Attributes

- io_tcp_parser_t parser
- io_tcp_sound_t sound
- · io_tcp_fwcb_t fwcb
- MHA_TCP::Server * server
- MHA TCP::Thread * thread
- MHA TCP::Async Notify notify start
- MHA_TCP::Async_Notify_stop
- MHA_TCP::Async_Notify_release

5.113.1 Detailed Description

The tcp sound io library.

```
5.113.2 Constructor & Destructor Documentation
```

Allocate server socket and start thread waiting for sound data exchange.

int num_outchannels)

prepare opens the tcp server socket and starts the io thread that listens for audio data on the tcp socket after doing some sanity checks

```
5.113.3.2 void io_tcp_t::start ( )
```

Call frameworks start callback if there is a sound data connection at the moment.

```
5.113.3.3 void io_tcp_t::stop ( )
```

Close the current connection if there is one.

stop IO thread

```
5.113.3.4 void io_tcp_t::release ( void )
```

Close the current connection and close the server socket.

Stop IO thread and close server socket.

```
5.113.3.5 void io_tcp_t::accept_loop( ) [virtual]
```

IO thread executes this method.

IO thread executes this method for each connection.

Parameters

c pointer to connection. connection_loop deletes connection before exiting.

Parser interface.

```
5.113.4 Member Data Documentation
```

```
5.113.4.1 io_tcp_parser_t io_tcp_t::parser [private]
```

```
5.113.4.2 io_tcp_sound_t io_tcp_t::sound [private]
```

```
5.113.4.3 io tcp fwcb tio_tcp_t::fwcb [private]
```

```
5.113.4.4 MHA_TCP::Server* io_tcp_t::server [private]
```

```
5.113.4.5 MHA TCP::Thread*io_tcp_t::thread [private]
```

```
5.113.4.6 MHA_TCP::Async_Notify io_tcp_t::notify_start [private]
```

```
5.113.4.7 MHA_TCP::Async_Notify io_tcp_t::notify_stop [private]
```

5.113.4.8 MHA TCP::Async Notify io_tcp_t::notify_release [private]

The documentation for this class was generated from the following file:

MHAIOTCP.cpp

5.114 latex doc t Class Reference

Public Member Functions

- latex_doc_t (const std::string &plugname, const std::string &plugin_macro)
- std::string get_latex_doc ()
- std::string get_main_category ()
- std::vector< std::string > get_categories ()

Private Member Functions

- std::string strdom (mha domain t d)
- std::string get_ac (MHAKernel::algo_comm_class_t &ac, std::string txt)
- std::string parsername (std::string s)
- std::string get_parser_var (MHAParser::base_t *p, std::string name)
- std::string **get_parser_tab** (**MHAParser::base_t** *p, std::string prefix)

Private Attributes

- std::string plugname
- std::string latex_plugname
- · MHAKernel::algo comm class tac
- PluginLoader::mhapluginloader_t loader
- std::string plugin_macro


```
5.114.1 Constructor & Destructor Documentation
5.114.1.1 latex_doc_t::latex_doc_t (
                       const std::string & plugname,
                       const std::string & plugin_macro )
5.114.2 Member Function Documentation
5.114.2.1 std::string latex_doc_t::get_latex_doc()
5.114.2.2 std::string latex_doc_t::get_main_category ( )
5.114.2.3 std::vector< std::string > latex_doc_t::get_categories ( )
5.114.2.4 std::string latex_doc_t::strdom (
                       mha_domain_t d ) [private]
5.114.2.5 std::string latex_doc_t::get_ac (
                       MHAKernel::algo_comm_class_t & ac,
                       std::string txt ) [private]
5.114.2.6 std::string latex_doc_t::parsername (
                       std::string s ) [private]
5.114.2.7 std::string latex_doc_t::get_parser_var (
                       MHAParser::base t * p,
                       std::string name ) [private]
```

The documentation for this class was generated from the following file:

· generatemhaplugindoc.cpp

5.115 lpc Class Reference

Inheritance diagram for lpc:

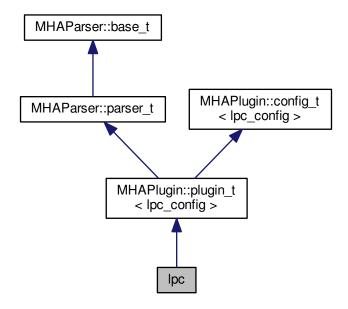

Public Member Functions

- **lpc** (**algo_comm_t** &ac, const std::string &chain_name, const std::string &algo_name)

 **Constructs our plugin.
- ~lpc ()
- mha_wave_t * process (mha_wave_t *)

Checks for the most recent configuration and defers processing to it.

void prepare (mhaconfig_t &)

Plugin preparation.

• void release (void)

Private Member Functions

void update_cfg ()

Private Attributes

- std::string algo name
- MHAParser::int t lpc order
- MHAParser::int_t lpc_buffer_size
- MHAParser::bool t shift
- MHAParser::int_t comp_each_iter
- MHAParser::bool_t norm
- MHAEvents::patchbay_t< lpc > patchbay

Additional Inherited Members

```
5.115.1 Constructor & Destructor Documentation
```

```
5.115.1.1 lpc::lpc (

algo_comm_t & ac,

const std::string & chain_name,

const std::string & algo_name )
```

Constructs our plugin.

```
5.115.1.2 lpc::\simlpc ( )
```

5.115.2 Member Function Documentation

```
5.115.2.1 mha_wave_t * lpc::process (
mha_wave_t * signal )
```

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

Parameters


signal_info	Structure containing a description of the form of the signal (domain, number of	
	channels, frames per block, sampling rate.	

```
Implements MHAPlugin::plugin_t< lpc_config > (p. 696).
5.115.2.3 void lpc::release (
                    void ) [inline], [virtual]
Reimplemented from MHAPlugin::plugin_t< lpc_config > (p. 697).
5.115.2.4 void lpc::update_cfg( ) [private]
5.115.3 Member Data Documentation
5.115.3.1 std::string lpc::algo_name [private]
5.115.3.2 MHAParser::int t lpc::lpc_order [private]
5.115.3.3 MHAParser::int_t lpc::lpc_buffer_size [private]
5.115.3.4 MHAParser::bool tlpc::shift [private]
5.115.3.5 MHAParser::int_t lpc::comp_each_iter [private]
5.115.3.6 MHAParser::bool_t lpc::norm [private]
5.115.3.7 MHAEvents::patchbay_t<lpc>lpc::patchbay [private]
```

The documentation for this class was generated from the following files:

- lpc.h
- lpc.cpp

Inheritance diagram for lpc_bl_predictor:

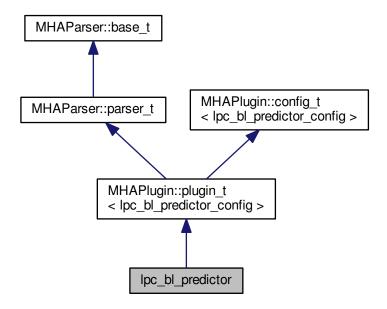

Public Member Functions

lpc_bl_predictor (algo_comm_t &ac, const std::string &chain_name, const std::string &algo_name)

Constructs our plugin.

- ∼lpc_bl_predictor ()
- mha_wave_t * process (mha_wave_t *)

Checks for the most recent configuration and defers processing to it.

- void prepare (mhaconfig_t &)
 - Plugin preparation.
- void release (void)

Public Attributes

- MHAParser::int_t lpc_order
- MHAParser::string_t name_kappa
- MHAParser::string_t name_lpc_f
- MHAParser::string_t name_lpc_b
- MHAParser::string_t name_f
- MHAParser::string_t name_b

Private Member Functions

void update_cfg ()

Private Attributes

MHAEvents::patchbay_t< lpc_bl_predictor > patchbay

Additional Inherited Members

```
5.116.1 Constructor & Destructor Documentation
```

Constructs our plugin.

```
5.116.1.2 lpc_bl_predictor::~lpc_bl_predictor()
```

5.116.2 Member Function Documentation

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number of
	channels, frames per block, sampling rate.

Implements MHAPlugin::plugin_t< lpc_bl_predictor_config > (p. 696).

The documentation for this class was generated from the following files:

- lpc_bl_predictor.h
- lpc_bl_predictor.cpp

[private]

5.117 lpc_bl_predictor_config Class Reference

Public Member Functions

- lpc_bl_predictor_config (algo_comm_t &iac, const mhaconfig_t in_cfg, lpc_bl_← predictor *_lpc)
- ~lpc_bl_predictor_config ()
- mha_wave_t * process (mha_wave_t *)

Private Attributes

```
· algo_comm_t ac

    MHA_AC::waveform_t f_est

    MHA_AC::waveform_t b_est

    MHASignal::waveform t forward

    MHASignal::waveform t backward

    int lpc order

    std::string name km

    std::string name f

   std::string name_b

    mha wave t km

   mha_wave_t s_f
   · mha wave ts b
5.117.1 Constructor & Destructor Documentation
5.117.1.1 lpc_bl_predictor_config::lpc_bl_predictor_config (
                     algo comm t & iac,
                     const mhaconfig_t in_cfg,
                     lpc_bl_predictor * _lpc )
5.117.1.2 lpc_bl_predictor_config::~lpc_bl_predictor_config( )
5.117.2 Member Function Documentation
5.117.2.1 mha wave t * lpc_bl_predictor_config::process (
                     mha wave t * wave )
5.117.3 Member Data Documentation
5.117.3.1 algo_comm_t lpc_bl_predictor_config::ac [private]
5.117.3.2 MHA AC::waveform tlpc_bl_predictor_config::f_est [private]
5.117.3.3 MHA_AC::waveform_t lpc_bl_predictor_config::b_est [private]
5.117.3.4 MHASignal::waveform t lpc_bl_predictor_config::forward [private]
5.117.3.5 MHASignal::waveform t lpc_bl_predictor_config::backward [private]
5.117.3.6 int lpc_bl_predictor_config::lpc_order [private]
```

5.117.3.7 std::string lpc_bl_predictor_config::name_km [private]


```
5.117.3.8 std::string lpc_bl_predictor_config::name_f [private]
5.117.3.9 std::string lpc_bl_predictor_config::name_b [private]
5.117.3.10 mha_wave_t lpc_bl_predictor_config::km [private]
5.117.3.11 mha_wave_t lpc_bl_predictor_config::s_f [private]
5.117.3.12 mha_wave_t lpc_bl_predictor_config::s_b [private]
```

The documentation for this class was generated from the following files:

- lpc_bl_predictor.h
- lpc_bl_predictor.cpp

5.118 lpc_burglattice Class Reference

Inheritance diagram for lpc_burglattice:

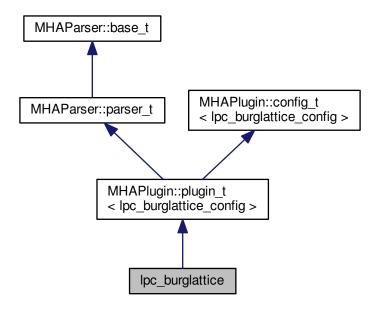

Public Member Functions

• **lpc_burglattice** (**algo_comm_t** &ac, const std::string &chain_name, const std::string &algo_name)

Constructs our plugin.

- ∼lpc_burglattice ()
- mha_wave_t * process (mha_wave_t *)

Checks for the most recent configuration and defers processing to it.

• void prepare (mhaconfig_t &)

Plugin preparation.

• void release (void)

Public Attributes

```
    MHAParser::int_t lpc_order
```

MHAParser::string_t name_kappa

MHAParser::string_t name_f

MHAParser::string_t name_b

MHAParser::float t lambda

Private Member Functions

void update_cfg ()

Private Attributes

MHAEvents::patchbay t< lpc burglattice > patchbay

Additional Inherited Members

5.118.1 Constructor & Destructor Documentation

Constructs our plugin.

```
5.118.1.2 lpc_burglattice::~lpc_burglattice ( )
5.118.2 Member Function Documentation
5.118.2.1 mha_wave_t * lpc_burglattice::process ( mha_wave_t * signal )
```

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number of	1
	channels, frames per block, sampling rate.	

```
Implements MHAPlugin::plugin_t< lpc_burglattice_config > (p. 696).
```

Reimplemented from MHAPlugin::plugin_t< lpc_burglattice_config > (p. 697).

```
5.118.2.4 void lpc_burglattice::update_cfg( ) [private]
```

5.118.3 Member Data Documentation

5.118.3.1 MHAParser::int_t lpc_burglattice::lpc_order

5.118.3.2 MHAParser::string_t lpc_burglattice::name_kappa

5.118.3.3 MHAParser::string_t lpc_burglattice::name_f

5.118.3.4 MHAParser::string t lpc_burglattice::name_b

5.118.3.5 MHAParser::float_t lpc_burglattice::lambda

5.118.3.6 MHAEvents::patchbay t<lpc burglattice>lpc_burglattice::patchbay [private]

The documentation for this class was generated from the following files:

- lpc_burg-lattice.h
- lpc_burg-lattice.cpp

5.119 lpc_burglattice_config Class Reference

Public Member Functions

- lpc_burglattice_config (algo_comm_t &iac, const mhaconfig_t in_cfg, lpc_← burglattice *_lpc)
- ~lpc burglattice config ()
- mha_wave_t * process (mha_wave_t *)

Private Attributes

- · algo_comm_t ac
- MHASignal::waveform_t forward
- MHASignal::waveform_t backward
- MHASignal::waveform_t kappa
- MHA_AC::waveform_t kappa_block
- MHASignal::waveform_t dm
- MHASignal::waveform_t nm
- mha_real_t lambda
- int lpc_order
- std::string name_f
- std::string name b
- mha_wave_t s_f
- · mha wave ts b
- 5.119.1 Constructor & Destructor Documentation
- 5.119.1.2 lpc_burglattice_config::~lpc_burglattice_config ()
- 5.119.2 Member Function Documentation
- 5.119.3 Member Data Documentation
- **5.119.3.1 algo_comm_t lpc_burglattice_config::ac** [private]

```
5.119.3.2 MHASignal::waveform_t lpc_burglattice_config::forward [private]
5.119.3.3 MHASignal::waveform_t lpc_burglattice_config::backward [private]
5.119.3.4 MHASignal::waveform_t lpc_burglattice_config::kappa [private]
5.119.3.5 MHA_AC::waveform_t lpc_burglattice_config::kappa_block [private]
5.119.3.6 MHASignal::waveform_t lpc_burglattice_config::dm [private]
5.119.3.7 MHASignal::waveform_t lpc_burglattice_config::nm [private]
5.119.3.8 mha_real_t lpc_burglattice_config::lambda [private]
5.119.3.9 int lpc_burglattice_config::lpc_order [private]
5.119.3.10 std::string lpc_burglattice_config::name_f [private]
5.119.3.11 std::string lpc_burglattice_config::name_b [private]
5.119.3.12 mha_wave_t lpc_burglattice_config::s_f [private]
5.119.3.13 mha_wave_t lpc_burglattice_config::s_b [private]
```

The documentation for this class was generated from the following files:

- lpc_burg-lattice.h
- lpc_burg-lattice.cpp

5.120 lpc_config Class Reference

Public Member Functions

- lpc_config (algo_comm_t &ac, const mhaconfig_t in_cfg, std::string &algo_name, unsigned int _order, unsigned int _lpc_buffer_size, bool _shift, unsigned int _comp_each _iter, bool _norm)
- ∼lpc_config ()
- mha_wave_t * process (mha_wave_t *)
- void insert ()

Private Attributes

- bool norm
- · bool shift
- unsigned int comp_each_iter
- unsigned int order
- unsigned int lpc_buffer_size
- · unsigned int N
- unsigned int comp_iter
- mha_wave_t sample
- std::vector< mha_real_t > R
- std::vector< mha_real_t > A
- MHASignal::ringbuffer_t inwave
- MHA_AC::waveform_t lpc_out
- MHA_AC::waveform_t corr_out

```
5.120.1 Constructor & Destructor Documentation
```

- 5.120.1.2 lpc_config::~lpc_config()
- 5.120.2 Member Function Documentation

```
5.120.2.1 mha_wave_t * lpc_config::process ( mha_wave_t * wave )
```

- 5.120.2.2 void lpc_config::insert ()
- 5.120.3 Member Data Documentation
- **5.120.3.1** boollpc_config::norm [private]
- 5.120.3.2 bool lpc_config::shift [private]
- **5.120.3.3 unsigned int lpc_config::comp_each_iter** [private]

```
5.120.3.4 unsigned int lpc_config::order [private]

5.120.3.5 unsigned int lpc_config::lpc_buffer_size [private]

5.120.3.6 unsigned int lpc_config::N [private]

5.120.3.7 unsigned int lpc_config::comp_iter [private]

5.120.3.8 mha_wave_t lpc_config::sample [private]

5.120.3.9 std::vector<mha_real_t> lpc_config::R [private]

5.120.3.10 std::vector<mha_real_t> lpc_config::A [private]

5.120.3.11 MHASignal::ringbuffer_t lpc_config::inwave [private]

5.120.3.12 MHA_AC::waveform_t lpc_config::lpc_out [private]

5.120.3.13 MHA_AC::waveform_t lpc_config::corr_out [private]
```

The documentation for this class was generated from the following files:

- lpc.h
- · lpc.cpp

5.121 matrixmixer::cfg_t Class Reference

Public Member Functions

- cfg_t (std::vector< std::vector< float > > imixer, unsigned int ci, unsigned int co, unsigned int fragsize, unsigned int nfft)
- mha_wave_t * process (mha_wave_t *)
- mha_spec_t * process (mha_spec_t *)

Private Attributes

- MHASignal::waveform_t m
- MHASignal::waveform_t wout
- MHASignal::spectrum_t sout

```
5.121.1 Constructor & Destructor Documentation
```

```
5.121.1.1 cfg_t::cfg_t (  std::vector < std::vector < float > > imixer, \\ unsigned int \textit{ci,} \\ unsigned int \textit{co,} \\ unsigned int \textit{fragsize,} \\ unsigned int \textit{nfft} \ )
```

5.121.2 Member Function Documentation

```
5.121.2.1 mha_wave_t * cfg_t::process (
mha_wave_t * s )
```

```
5.121.2.2 mha_spec_t * cfg_t::process (
mha_spec_t * s )
```

5.121.3 Member Data Documentation

```
5.121.3.1 MHASignal::waveform t matrixmixer::cfg_t::m [private]
```

5.121.3.2 MHASignal::waveform t matrixmixer::cfg t::wout [private]


5.121.3.3 MHASignal::spectrum_t matrixmixer::cfg_t::sout [private]

The documentation for this class was generated from the following file:

matrixmixer.cpp

5.122 matrixmixer::matmix_t Class Reference

Inheritance diagram for matrixmixer::matmix_t:

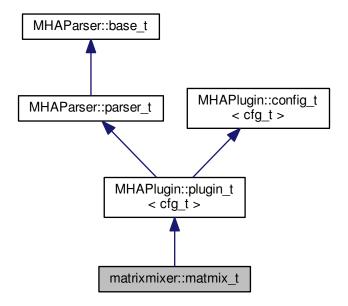

Public Member Functions

- matmix_t (const algo_comm_t &, const std::string &, const std::string &)
- void **prepare** (**mhaconfig_t** &)
- mha_wave_t * process (mha_wave_t *)
- mha_spec_t * process (mha_spec_t *)

Private Member Functions

void update_m ()

Private Attributes

- MHAEvents::patchbay_t< matmix_t > patchbay
- MHAParser::mfloat_t mixer
- unsigned int ci
- unsigned int co

Additional Inherited Members


```
5.122.1 Constructor & Destructor Documentation
5.122.1.1 matrixmixer::matmix t::matmix t(
                      const algo_comm_t & iac,
                      const std::string & ,
                      const std::string & )
5.122.2 Member Function Documentation
5.122.2.1 void matrixmixer::matmix t::prepare (
                      mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin t < cfg t > (p. 696).
5.122.2.2 mha wave t * matrixmixer::matmix_t::process (
                      mha_wave_t * s )
5.122.2.3 mha_spec_t * matrixmixer::matmix_t::process (
                      mha\_spec\_t * s)
5.122.2.4 void matrixmixer::matmix t::update m (
                     void ) [private]
5.122.3 Member Data Documentation
5.122.3.1 MHAEvents::patchbay_t<matmix_t> matrixmixer::matmix_t::patchbay [private]
5.122.3.2 MHAParser::mfloat t matrixmixer::matmix t::mixer [private]
5.122.3.3 unsigned int matrixmixer::matmix_t::ci [private]
5.122.3.4 unsigned int matrixmixer::matmix_t::co [private]
```

The documentation for this class was generated from the following file:

matrixmixer.cpp

5.123 MHA_AC::ac2matrix_helper_t Class Reference

Inheritance diagram for MHA_AC::ac2matrix_helper_t:

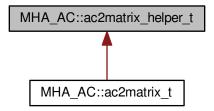

Public Member Functions

- ac2matrix_helper_t (algo_comm_t, const std::string &)
- void getvar ()

Public Attributes

- · algo_comm_t ac
- std::string name
- std::string username
- MHASignal::uint_vector_t size
- bool is_complex

Protected Attributes

comm_var_t acvar

5.123.1 Constructor & Destructor Documentation

5.123.2 Member Function Documentation

5.123.2.1 void MHA_AC::ac2matrix_helper_t::getvar ()

5.123.3 Member Data Documentation


- 5.123.3.1 algo_comm_t MHA_AC::ac2matrix_helper_t::ac
- 5.123.3.2 std::string MHA_AC::ac2matrix_helper_t::name
- 5.123.3.3 std::string MHA_AC::ac2matrix_helper_t::username
- 5.123.3.4 MHASignal::uint_vector_t MHA_AC::ac2matrix_helper_t::size
- 5.123.3.5 bool MHA_AC::ac2matrix_helper_t::is_complex
- **5.123.3.6 comm_var_t** MHA_AC::ac2matrix_helper_t::acvar [protected]

The documentation for this class was generated from the following files:

- mha_algo_comm.h
- mha_algo_comm.cpp
- 5.124 MHA_AC::ac2matrix_t Class Reference

Copy AC variable to a matrix.

Inheritance diagram for MHA_AC::ac2matrix_t:

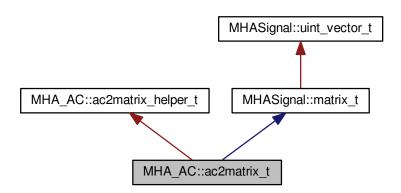

Public Member Functions

ac2matrix_t (algo_comm_t ac, const std::string &name)

Constructor.

• void **update** ()

Update contents of the matrix from the AC space.

• const std::string & getname () const

Return name of AC variable/matrix.

const std::string & getusername () const

Return user specified name of AC variable/matrix.

• void insert (algo_comm_t ac)

Insert matrix into an AC space (other than source AC space)

Additional Inherited Members

5.124.1 Detailed Description

Copy AC variable to a matrix.

This class constructs a matrix of same size as an AC variable and can copy the AC variable to itself. The **update()** (p. 383) function is real-time safe.

5.124.2 Constructor & Destructor Documentation

Constructor.

Parameters

ac	AC handle
name	Name of AC variable to be copied

5.124.3 Member Function Documentation

5.124.3.1 void MHA_AC::ac2matrix_t::update ()

Update contents of the matrix from the AC space.

This function is real-time safe. The copy operation performance is of the order of the number of elements in the matrix.

5.124.3.2 const std::string& MHA_AC::ac2matrix_t::getname() const [inline]

Return name of AC variable/matrix.

5.124.3.3 const std::string& MHA_AC::ac2matrix_t::getusername() const [inline]

Return user specified name of AC variable/matrix.

```
5.124.3.4 void MHA_AC::ac2matrix_t::insert ( algo_comm_t ac )
```

Insert matrix into an AC space (other than source AC space)

Parameters

ac | AC space handle to insert data

Note

The AC variable data buffer points to the data of the matrix. Modifications of the AC variable directly modify the data of the matrix; after deletion of the matrix, the data buffer is invalid.

The documentation for this class was generated from the following files:

- · mha algo comm.h
- mha_algo_comm.cpp

5.125 MHA_AC::acspace2matrix_t Class Reference

Copy all or a subset of all numeric AC variables into an array of matrixes.

Public Member Functions

- acspace2matrix_t (algo_comm_t ac, const std::vector< std::string > &names)
 Constructor.
- acspace2matrix_t (const MHA_AC::acspace2matrix_t &src)

Constructor with initialization from an instance.

- ∼acspace2matrix t ()
- MHA_AC::acspace2matrix_t & operator= (const MHA_AC::acspace2matrix_t &src)

 Copy all contents (deep copy).
- MHA_AC::ac2matrix_t & operator[] (unsigned int k)
 Access operator.

- const MHA_AC::ac2matrix_t & operator[] (unsigned int k) const Constant access operator.
- void update ()

Update function.

• unsigned int **size** () const

Number of matrixes in AC space.

• unsigned int frame () const

Actual frame number.

void insert (algo_comm_t ac)

Insert AC space copy into an AC space (other than source AC space)

Private Attributes

- unsigned int len
- MHA_AC::ac2matrix_t ** data
- · unsigned int frameno

5.125.1 Detailed Description

Copy all or a subset of all numeric AC variables into an array of matrixes.

5.125.2 Constructor & Destructor Documentation

Constructor.

Scan all given AC variables and allocate corresponding matrixes.

Parameters

ac	AC handle.
names	Names of AC variables, or empty for all.

Constructor with initialization from an instance.

Parameters

src Instance to be copied.

5.125.2.3 MHA_AC::acspace2matrix_t::~acspace2matrix_t ()

5.125.3 Member Function Documentation

Copy all contents (deep copy).

Parameters

src Array of matrixes to be copied.

Access operator.

Parameters

k index into array; should not exceed **size()** (p. 387)-1.

Return values

Reference to matrix.

Constant access operator.

Parameters

k index into array; should not exceed **size()** (p. 387)-1.

Return values

Constant reference to matrix.

```
5.125.3.4 void MHA_AC::acspace2matrix_t::update() [inline]
```

Update function.

This function updates all matrixes from their corresponding AC variables. It can be called from the MHA Framework prepare function or in the processing callback.

```
5.125.3.5 unsigned int MHA_AC::acspace2matrix_t::size() const [inline]
```

Number of matrixes in AC space.

```
5.125.3.6 unsigned int MHA_AC::acspace2matrix_t::frame() const [inline]
```

Actual frame number.

```
5.125.3.7 void MHA_AC::acspace2matrix_t::insert ( algo_comm_t ac )
```

Insert AC space copy into an AC space (other than source AC space)

Parameters

```
ac AC space handle to insert data
```

5.125.4 Member Data Documentation

```
5.125.4.1 unsigned int MHA_AC::acspace2matrix_t::len [private]
```

```
5.125.4.2 MHA_AC::ac2matrix_t** MHA_AC::acspace2matrix_t::data [private]
```

5.125.4.3 unsigned int MHA_AC::acspace2matrix_t::frameno [private]

The documentation for this class was generated from the following files:

- mha_algo_comm.h
- mha_algo_comm.cpp

5.126 MHA_AC::double_t Class Reference

Insert a double precision floating point variable into the AC space.

Public Member Functions

```
    double_t (algo_comm_t, std::string, double=0)
    ~double t ()
```

Public Attributes

· double data

Floating point value variable.

Private Attributes

· algo_comm_t ac

5.126.1 Detailed Description

Insert a double precision floating point variable into the AC space.

The variable is automatically removed on destruction.

```
5.126.2 Constructor & Destructor Documentation
```

```
5.126.2.2 MHA_AC::double_t::\simdouble_t()
```

5.126.3 Member Data Documentation

5.126.3.1 double MHA_AC::double_t::data

Floating point value variable.

```
5.126.3.2 algo_comm_t MHA_AC::double_t::ac [private]
```

The documentation for this class was generated from the following files:

```
mha_algo_comm.h
```

mha_algo_comm.cpp

5.127 MHA_AC::float_t Class Reference

Insert a float point variable into the AC space.

Public Member Functions

- float_t (algo_comm_t, std::string, float=0)

 Constructor.
- ~float_t ()

Public Attributes

float data

Floating point value variable.

Private Attributes

· algo_comm_t ac

5.127.1 Detailed Description

Insert a float point variable into the AC space.

The variable is automatically removed on destruction.

5.127.2 Constructor & Destructor Documentation

Constructor.

```
5.127.2.2 MHA_AC::float_t::~float_t()
```

5.127.3 Member Data Documentation

5.127.3.1 float MHA_AC::float_t::data

Floating point value variable.

```
5.127.3.2 algo_comm_t MHA_AC::float_t::ac [private]
```

The documentation for this class was generated from the following files:

- mha_algo_comm.h
- mha_algo_comm.cpp

5.128 MHA_AC::int_t Class Reference

Insert a integer variable into the AC space.

Public Member Functions

```
int_t (algo_comm_t, std::string, int=0)∼int_t ()
```

Public Attributes

• int data

Integer value variable.

Private Attributes

· algo_comm_t ac

5.128.1 Detailed Description

Insert a integer variable into the AC space.

The variable is automatically removed on destruction.

5.128.2 Constructor & Destructor Documentation

```
5.128.2.1 MHA_AC::int_t::int_t ( algo_comm_t iac, std::string n, int v = 0 )
```

- 5.128.2.2 MHA_AC::int_t::~int_t ()
- 5.128.3 Member Data Documentation
- 5.128.3.1 int MHA_AC::int_t::data

Integer value variable.

5.128.3.2 algo_comm_t MHA_AC::int_t::ac [private]


The documentation for this class was generated from the following files:

- mha_algo_comm.h
- mha_algo_comm.cpp

5.129 MHA_AC::spectrum_t Class Reference

Insert a MHASignal::spectrum_t (p. 766) class into the AC space.

Inheritance diagram for MHA_AC::spectrum_t:

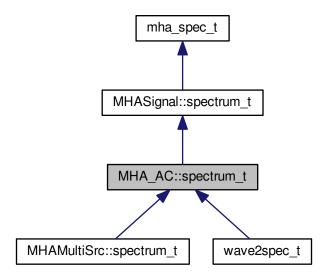

Public Member Functions

spectrum_t (algo_comm_t ac, std::string name, unsigned int bins, unsigned int channels, bool insert_now)

Create the AC variable.

- ~spectrum_t ()
- void **insert** ()

Insert AC variable into AC space.

Protected Attributes

- algo_comm_t ac
- std::string name

Additional Inherited Members

5.129.1 Detailed Description

Insert a MHASignal::spectrum_t (p. 766) class into the AC space.

The variable is automatically removed on destruction.

5.129.2 Constructor & Destructor Documentation

Create the AC variable.

Parameters

ac	AC handle
name	Name of variable in AC space
bins	Number of FFT bins in the waveform_t (p. 394) class
channels	Number of audio channels in the waveform_t (p. 394) class
insert_now	Insert implicitely in the constructor (true) or explicitely in the insert() (p. 392) function (false)

```
5.129.2.2 MHA_AC::spectrum_t::~spectrum_t (
void ) [virtual]
```

Reimplemented from MHASignal::spectrum_t (p. 768).

5.129.3 Member Function Documentation

5.129.3.1 void MHA_AC::spectrum_t::insert ()

Insert AC variable into AC space.

5.129.4 Member Data Documentation

5.129.4.1 algo_comm_t MHA_AC::spectrum_t::ac [protected]


5.129.4.2 std::string MHA_AC::spectrum_t::name [protected]

The documentation for this class was generated from the following files:

- mha_algo_comm.h
- mha_algo_comm.cpp

5.130 MHA_AC::stat_t Class Reference

Inheritance diagram for MHA_AC::stat_t:

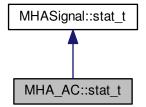

Public Member Functions

- stat_t (algo_comm_t ac, const std::string &name, const unsigned int &frames, const unsigned int &channels, bool insert_now)
- void update ()
- void insert ()

Private Attributes

- MHA_AC::waveform_t mean
- MHA_AC::waveform_t std

5.130.1 Constructor & Destructor Documentation


- 5.130.2 Member Function Documentation
- 5.130.2.1 void MHA_AC::stat_t::update ()
- 5.130.2.2 void MHA_AC::stat_t::insert ()
- 5.130.3 Member Data Documentation
- 5.130.3.1 MHA_AC::waveform_t MHA_AC::stat_t::mean [private]
- **5.130.3.2** MHA_AC::waveform_t MHA_AC::stat_t::std [private]

The documentation for this class was generated from the following files:

- mha_algo_comm.h
- mha_algo_comm.cpp

5.131 MHA_AC::waveform_t Class Reference

Insert a **MHASignal::waveform_t** (p. 778) class into the AC space. Inheritance diagram for MHA_AC::waveform_t:

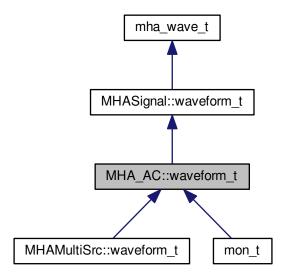

Public Member Functions

 waveform_t (algo_comm_t ac, std::string name, unsigned int frames, unsigned int channels, bool insert_now)

Create the AC variable.

- ~waveform t ()
- void insert ()

Insert AC variable into AC space.

Protected Attributes

- algo_comm_t ac
- std::string name

Additional Inherited Members

5.131.1 Detailed Description

Insert a MHASignal::waveform_t (p. 778) class into the AC space.

The variable is automatically removed on destruction.

5.131.2 Constructor & Destructor Documentation

Create the AC variable.

Parameters

ac	AC handle
name	Name of variable in AC space
frames	Number of frames in the waveform_t (p. 394) class
channels	Number of audio channels in the waveform_t (p. 394) class
insert_now	Insert implicitely in the constructor (true) or explicitely in the insert() (p. 396) function (false)

```
5.131.2.2 MHA_AC::waveform_t::\simwaveform_t ( void ) [virtual]
```

Reimplemented from MHASignal::waveform_t (p. 781).

5.131.3 Member Function Documentation

```
5.131.3.1 void MHA_AC::waveform_t::insert ( )
```

Insert AC variable into AC space.

5.131.4 Member Data Documentation

```
5.131.4.1 algo_comm_t MHA_AC::waveform_t::ac [protected]
```

```
5.131.4.2 std::string MHA_AC::waveform_t::name [protected]
```

The documentation for this class was generated from the following files:

- mha_algo_comm.h
- mha_algo_comm.cpp

5.132 mha_audio_descriptor_t Struct Reference

Description of an audio fragment (planned as a replacement of **mhaconfig t** (p. 470)).

Public Attributes

• unsigned int n samples

Number of samples.

unsigned int n channels

Number of audio channels.

unsigned int n_freqs

Number of frequency bands.

unsigned int is_complex

Flag about sample type.

mha_real_t dt

Time distance between samples (only equidistant samples allowed)

mha_real_t * cf

Center frequencies of frequency bands.

mha_real_t * chdir

Hint on source direction of channel, values below zero is left, values above zero is right, zero means unknown.

5.132.1 Detailed Description

Description of an audio fragment (planned as a replacement of **mhaconfig_t** (p. 470)).

5.132.2 Member Data Documentation

5.132.2.1 unsigned int mha_audio_descriptor_t::n_samples

Number of samples.

5.132.2.2 unsigned int mha_audio_descriptor_t::n_channels

Number of audio channels.

5.132.2.3 unsigned int mha_audio_descriptor_t::n_freqs

Number of frequency bands.

5.132.2.4 unsigned int mha_audio_descriptor_t::is_complex

Flag about sample type.

5.132.2.5 mha real t mha_audio_descriptor_t::dt

Time distance between samples (only equidistant samples allowed)

5.132.2.6 mha_real_t* mha_audio_descriptor_t::cf

Center frequencies of frequency bands.

5.132.2.7 mha_real_t* mha_audio_descriptor_t::chdir

Hint on source direction of channel, values below zero is left, values above zero is right, zero means unknown.

The documentation for this struct was generated from the following file:

· mha.h

5.133 mha_audio_t Struct Reference

An audio fragment in the openMHA (planned as a replacement of **mha_wave_t** (p. 462) and **mha_spec_t** (p. 432)).

Public Attributes

mha_audio_descriptor_t descriptor

Dimension and description of the data.

mha real t * rdata

Data pointer if flag mha_audio_descriptor_t::is_complex (p. 397) is unset.

mha_complex_t * cdata

Data pointer if flag mha_audio_descriptor_t::is_complex (p. 397) is set.

5.133.1 Detailed Description

An audio fragment in the openMHA (planned as a replacement of **mha_wave_t** (p. 462) and **mha_spec_t** (p. 432)).

The data alignment is $(t_0, c_0, f_0), (t_0, c_0, f_1), \dots, (t_0, c_0, f_{freqs}), (t_0, c_1, f_0), \dots$ This allows a direct cast of the current **mha_wave_t** (p. 462) and **mha_spec_t** (p. 432) data pointers into corresponding **mha audio t** (p. 397) objects.

5.133.2 Member Data Documentation

5.133.2.1 mha audio descriptor t mha_audio_t::descriptor

Dimension and description of the data.

5.133.2.2 mha real t* mha_audio_t::rdata

Data pointer if flag mha_audio_descriptor_t::is_complex (p. 397) is unset.

5.133.2.3 mha complex t* mha_audio_t::cdata

Data pointer if flag mha_audio_descriptor_t::is_complex (p. 397) is set.

The documentation for this struct was generated from the following file:

· mha.h

5.134 mha_channel_info_t Struct Reference

Channel information structure.

Public Attributes

• int id

channel id

• char idstr [32]

channel id

unsigned int side

side (left/right)

mha_direction_t dir

source direction

mha_real_t peaklevel

Peak level corresponds to this SPL (dB) level.

5.134.1 Detailed Description

Channel information structure.

5.134.2 Member Data Documentation

5.134.2.1 int mha_channel_info_t::id

channel id

5.134.2.2 char mha_channel_info_t::idstr[32]

channel id

5.134.2.3 unsigned int mha_channel_info_t::side

side (left/right)

5.134.2.4 mha_direction_t mha_channel_info_t::dir

source direction

5.134.2.5 mha_real_t mha_channel_info_t::peaklevel

Peak level corresponds to this SPL (dB) level.

The documentation for this struct was generated from the following file:

· mha.h

5.135 mha_complex_t Struct Reference

Type for complex floating point values.

Public Attributes

- mha_real_t re
 Real part.
- mha_real_t im
 Imaginary part.

5.135.1 Detailed Description

Type for complex floating point values.

5.135.2 Member Data Documentation

5.135.2.1 mha_real_t mha_complex_t::re

Real part.

5.135.2.2 mha_real_t mha_complex_t::im

Imaginary part.

The documentation for this struct was generated from the following file:

· mha.h

5.136 mha_dblbuf_t< FIFO > Class Template Reference

The doublebuffer adapts blocksizes between an outer process, which provides input data and takes output data, and an inner process, which processes the input signal and generates output data using a different block size than the outer process.

Public Types

typedef FIFO::value_type value_type
 The datatype exchanged by the FIFO and this doublebuffer.

Public Member Functions

- virtual unsigned get_inner_size () const
- virtual unsigned get_outer_size () const
- virtual unsigned get_delay () const
- virtual unsigned **get_fifo_size** () const
- virtual unsigned get input channels () const
- · virtual unsigned get output channels () const
- virtual unsigned get_input_fifo_fill_count () const
- virtual unsigned get_output_fifo_fill_count () const
- virtual unsigned **get_input_fifo_space** () const
- virtual unsigned get_output_fifo_space () const
- virtual MHA_Error * get_inner_error () const
- virtual void provoke_inner_error (const MHA_Error &)
- virtual void provoke_outer_error (const MHA_Error &)
- mha_dblbuf_t (unsigned outer_size, unsigned inner_size, unsigned delay, unsigned input_channels, unsigned output_channels, const value_type &delay_data)

Constructor creates FIFOs with specified delay.

- virtual ~mha_dblbuf_t ()
- virtual void process (const value_type *input_signal, value_type *output_signal, un-signed count)

The outer process has to call this method to propagate the input signal to the inner process, and receives back the output signal.

virtual void input (value_type *input_signal)

The inner process has to call this method to receive its input signal.

virtual void output (const value_type *output_signal)

The outer process has to call this method to deliver its output signal.

Private Attributes

unsigned outer size

The block size used by the outer process.

• unsigned inner size

The block size used by the inner process.

· unsigned delay

The delay introduced by bidirectional buffer size adaptation.

• unsigned fifo_size

The size of each of the FIFOs.

unsigned input_channels

The number of input channels.

unsigned output_channels

The number of output channels.

FIFO input_fifo

The FIFO for transporting the input signal from the outer process to the inner process.

FIFO output fifo

The FIFO for transporting the output signal from the inner process to the outer process.

MHA_Error * inner_error

Owned copy of exception to be thrown in inner thread.

MHA_Error * outer_error

Owned copy of exception to be thrown in outer thread.

5.136.1 Detailed Description

```
template < class FIFO > class mha_dblbuf_t < FIFO >
```

The doublebuffer adapts blocksizes between an outer process, which provides input data and takes output data, and an inner process, which processes the input signal and generates output data using a different block size than the outer process.

This class introduces the channels concept. Input and output may have different channel counts.

5.136.2 Member Typedef Documentation

5.136.2.1 template < class FIFO > typedef FIFO::value_type mha_dblbuf_t < FIFO >::value_type

The datatype exchanged by the FIFO and this doublebuffer.

5.136.3 Constructor & Destructor Documentation

Constructor creates FIFOs with specified delay.

Warning

The doublebuffer may block or raise an exception if the delay is too small. To avoid this, the delay should be

$$delay >= (inner_size - gcd(inner_size, outer_size))$$

.

Parameters

outer_size	The block size used by the outer process.
inner_size	The block size used by the inner process.
delay	The total delay
input_channels	Number of input channels
output_channels	Number of output channels
delay_data	The delay consists of copies of this value.

- 5.136.4 Member Function Documentation
- 5.136.4.1 template < class FIFO > virtual unsigned mha_dblbuf_t < FIFO >::get_inner_size () const [inline], [virtual]
- 5.136.4.2 template < class FIFO > virtual unsigned mha_dblbuf_t < FIFO >::get_outer_size () const [inline], [virtual]
- 5.136.4.3 template < class FIFO > virtual unsigned mha_dblbuf_t < FIFO >::get_delay () const [inline], [virtual]
- 5.136.4.4 template < class FIFO > virtual unsigned mha_dblbuf_t< FIFO >::get_fifo_size () const [inline], [virtual]
- 5.136.4.5 template < class FIFO > virtual unsigned mha_dblbuf_t< FIFO >::get_input_channels () const [inline], [virtual]
- 5.136.4.6 template < class FIFO > virtual unsigned mha_dblbuf_t < FIFO >::get_output_channels() const [inline], [virtual]
- 5.136.4.7 template < class FIFO > virtual unsigned mha_dblbuf_t < FIFO >::get_input_fifo_fill_count (
) const [inline], [virtual]
- 5.136.4.9 template < class FIFO > virtual unsigned mha_dblbuf_t < FIFO >::get_input_fifo_space() const [inline], [virtual]
- 5.136.4.10 template < class FIFO > virtual unsigned mha_dblbuf_t < FIFO >::get_output_fifo_space () const [inline], [virtual]

The outer process has to call this method to propagate the input signal to the inner process, and receives back the output signal.

Parameters

input_signal	Pointer to the input signal array.
output_signal	Pointer to the output signal array.
count	The number of data instances provided and expected, lower or equal to inner_size given to constructor.

Exceptions

MHA_Error (p. 413)	When count is > outer_size as given to constructor or the underlying
	fifo implementation detects an error.

```
5.136.4.15 template < class FIFO > void mha_dblbuf_t < FIFO >::input ( value_type * input_signal ) [virtual]
```

The inner process has to call this method to receive its input signal.

Parameters

Innut ciana	Array where the doublebuffer can store the signal.
iliput sigila	Array where the doubleburier can store the signal.

Exceptions

MHA_Error (p. 413) When the underlying fifo implementation detects an err

The outer process has to call this method to deliver its output signal.

Parameters

output_signal Array from which doublebuffer reads outputsignal.

Exceptions

5.136.5 Member Data Documentation

5.136.5.1 template < class FIFO > unsigned mha_dblbuf_t < FIFO >::outer_size [private]

The block size used by the outer process.

5.136.5.2 template < class FIFO > unsigned mha_dblbuf_t < FIFO >::inner_size [private]

The block size used by the inner process.

5.136.5.3 template < class FIFO > unsigned mha_dblbuf_t < FIFO >::delay [private]

The delay introduced by bidirectional buffer size adaptation.

5.136.5.4 template < class FIFO > unsigned mha_dblbuf_t < FIFO >::fifo_size [private]

The size of each of the FIFOs.

5.136.5.5 template < class FIFO > unsigned mha_dblbuf_t < FIFO >::input_channels [private]

The number of input channels.

5.136.5.6 template < class FIFO > unsigned mha_dblbuf_t < FIFO >::output_channels [private]

The number of output channels.

5.136.5.7 template < class FIFO > FIFO mha_dblbuf_t < FIFO >::input_fifo [private]

The FIFO for transporting the input signal from the outer process to the inner process.

5.136.5.8 template < class FIFO > FIFO mha_dblbuf_t < FIFO >::output_fifo [private]

The FIFO for transporting the output signal from the inner process to the outer process.

5.136.5.9 template < class FIFO > MHA_Error* mha_dblbuf_t < FIFO >::inner_error [private]

Owned copy of exception to be thrown in inner thread.

5.136.5.10 template < class FIFO > MHA_Error* mha_dblbuf_t < FIFO >::outer_error [private]

Owned copy of exception to be thrown in outer thread.

The documentation for this class was generated from the following files:

- · mha_fifo.h
- · mha_fifo.cpp

5.137 mha_direction_t Struct Reference

Channel source direction structure.

Public Attributes

- mha_real_t azimuth
 azimuth in radiants
- mha_real_t elevation
 elevation in radiants
- mha_real_t distance distance in meters

5.137.1 Detailed Description

Channel source direction structure.

5.137.2 Member Data Documentation

5.137.2.1 mha real t mha_direction_t::azimuth

azimuth in radiants

5.137.2.2 mha_real_t mha_direction_t::elevation

elevation in radiants

5.137.2.3 mha_real_t mha_direction_t::distance

distance in meters


The documentation for this struct was generated from the following file:

· mha.h

5.138 mha_drifter_fifo_t < T > Class Template Reference

A FIFO class for blocksize adaptation without Synchronization.

Inheritance diagram for mha_drifter_fifo_t< T >:

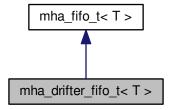

Public Member Functions

- virtual void write (const T *data, unsigned count)
 write data to fifo
- virtual void read (T *buf, unsigned count)

Read data from fifo.

virtual unsigned get_fill_count () const

Return fill_count, adding **mha_drifter_fifo_t**<**T**>::startup_zeros (p. 413) to the number of samples actually in the fifo's buffer.

virtual unsigned get_available_space () const

Return available space, subtracting number of **mha_drifter_fifo_t**<**T**>::**startup_zeros** (p. **413**) from the available_space actually present in the fifo's buffer.

virtual unsigned get des fill count () const

The desired fill count of this fifo.

virtual unsigned get_min_fill_count () const

The minimum fill count of this fifo.

virtual void stop ()

Called by **mha_drifter_fifo_t**<**T**>::**read** (p. 410) or **mha_drifter_fifo_t**<**T**>::**write** (p. 409) when their xrun in succession counter exceeds its limit.

virtual void starting ()

Called by mha_drifter_fifo_t<T>::read (p. 410) or mha_drifter_fifo_t<T>::write (p. 409) when the respective flag (mha_drifter_fifo_t<T>::reader_started (p. 412) or mha_drifter← fifo_t<T>::writer_started (p. 411)) is about to be toggled from false to true.

mha_drifter_fifo_t (unsigned min_fill_count, unsigned desired_fill_count, unsigned max_fill_count)

Create drifter FIFO.

mha_drifter_fifo_t (unsigned min_fill_count, unsigned desired_fill_count, unsigned max_fill_count, const T &t)

Create drifter FIFO where all (initially unused) copies of T are initialized as copies of t.

Private Attributes

const unsigned minimum_fill_count

The minimum fill count of this fifo.

const unsigned desired_fill_count

The desired fill count of the fifo.

bool writer started

Flag set to true when write is called the first time.

bool reader_started

Flag set to true when read is called for the first time.

unsigned writer xruns total

The number of xruns seen by the writer since object instantiation.

unsigned reader_xruns_total

The number of xruns seen by the reader since object instantiation.

unsigned writer_xruns_since_start

The number of xruns seen by the writer since the last start of processing.

• unsigned reader_xruns_since_start

The number of xruns seen by the reader since the last start of processing.

unsigned writer xruns in succession

The number of xruns seen by the writer in succession.

unsigned reader_xruns_in_succession

The number of xruns seen by the reader in succession.

unsigned maximum writer xruns in succession before stop

A limit to the number of xruns seen in succession during write before the data transmission through the FIFO is stopped.

unsigned maximum_reader_xruns_in_succession_before_stop

A limit to the number of xruns seen in succession during read before the data transmission through the FIFO is stopped.

mha fifo t< T>::value type null data

The value used in place of missing data.

unsigned startup_zeros

When processing starts, that is when both $mha_drifter_fifo_t < T>::reader_started$ (p. 412) and $mha_drifter_fifo_t < T>::writer_started$ (p. 411) are true, then first $mha_drifter_fifo \leftarrow _t < T>::desired_fill_count$ (p. 411) instances of $mha_drifter_fifo_t < T>::null_data$ (p. 413) are delivered to the reader.

Additional Inherited Members

5.138.1 Detailed Description

```
template < class T> class mha drifter fifo t< T>
```

A FIFO class for blocksize adaptation without Synchronization.

Features: delay concept (desired, minimum and maximum delay), drifting support by throwing away data or inserting zeroes.

5.138.2 Constructor & Destructor Documentation

Create drifter FIFO.

Create drifter FIFO where all (initially unused) copies of T are initialized as copies of t.

5.138.3 Member Function Documentation

```
5.138.3.1 template < class T > void mha_drifter_fifo_t< T >::write ( const T * data, unsigned count ) [virtual]
```

write data to fifo

Sets writer_started (p. 411) to true.

When processing has started, i.e. both **reader_started** (p. 412) and **writer_started** (p. 411) are true, write specified ammount of data to the fifo. If there is not enough space available, then the exceeding data is lost and the writer xrun counters are increased.

Processing is stopped when writer_xruns_in_succession (p. 412) exceeds maximum_ writer_xruns_in_succession_before_stop (p. 412).

Parameters

data	Pointer to source data.
count	Number of instances to copy

Reimplemented from $mha_fifo_t < T > (p. 422)$.

```
5.138.3.2 template < class T > void mha_drifter_fifo_t< T >::read ( T * buf, unsigned count ) [virtual]
```

Read data from fifo.

Sets reader_started (p. 412) to true.

When processing has started, i.e. both **reader_started** (p. 412) and **writer_started** (p. 411) are true, then read specified ammount of data from the fifo. As long as **startup_zeros** (p. 413) is > 0, **null_data** (p. 413) is delivered to the reader and **startup_zeros** (p. 413) is diminished. Only when **startup_zeros** (p. 413) has reached 0, data is actually read from the fifo's buffer.

If the read would cause the fifo's fill count to drop below **minimum_fill_count** (p. 411), then only so much data are read that **minimum_fill_count** (p. 411) entries remain in the fifo, the missing data is replaced with **null_data** (p. 413), and the reader xrun counters are increased.

Processing is stopped when reader_xruns_in_succession (p. 412) exceeds maximum_creader_xruns_in_succession_before_stop (p. 412).

Parameters

buf	Pointer to the target buffer
count	Number of instances to copy

Reimplemented from **mha fifo** t < T > (p. 423).

```
5.138.3.3 template < class T > unsigned mha_drifter_fifo_t < T >::get_fill_count ( ) const [virtual]
```

Return fill_count, adding **mha_drifter_fifo_t**<**T**>::**startup_zeros** (p. 413) to the number of samples actually in the fifo's buffer.

Reimplemented from $mha_fifo_t < T > (p. 423)$.

```
5.138.3.4 template < class T > unsigned mha_drifter_fifo_t < T > ::get_available_space ( ) const [virtual]
```

Return available space, subtracting number of **mha_drifter_fifo_t**<**T**>::**startup_zeros** (p. 413) from the available space actually present in the fifo's buffer.

TODO: uncertain if this is a good idea.

Reimplemented from $mha_fifo_t < T > (p. 423)$.

5.138.3.5 template < class T > virtual unsigned mha_drifter_fifo_t < T >::get_des_fill_count() const [inline], [virtual]

The desired fill count of this fifo.

5.138.3.6 template < class T > virtual unsigned mha_drifter_fifo_t < T > ::get_min_fill_count() const [inline], [virtual]

The minimum fill count of this fifo.

```
5.138.3.7 template < class T > void mha_drifter_fifo_t < T >::stop() [virtual]
```

Called by mha_drifter_fifo_t<T>::read (p. 410) or mha_drifter_fifo_t<T>::write (p. 409) when their xrun in succession counter exceeds its limit.

Called by **read** (p. 410) or **write** (p. 409) when their xrun in succession counter exceeds its limit.

May also be called explicitly.

```
5.138.3.8 template < class T > void mha_drifter_fifo_t < T >::starting() [virtual]
```

Called by $mha_drifter_fifo_t < T>::read$ (p. 410) or $mha_drifter_fifo_t < T>::write$ (p. 409) when the respective flag ($mha_drifter_fifo_t < T>::reader_started$ (p. 412) or $mha_drifter_t$ fifo_t < T>::writer_started (p. 411)) is about to be toggled from false to true.

The fifo's buffer is emptied, this method resets **startup_zeros** (p. 413) to **desired_fill_count** (p. 411), and it also resets **reader_xruns_since_start** (p. 412) and **writer_xruns_since_start** (p. 412) to 0.

5.138.4 Member Data Documentation

5.138.4.1 template < class T > const unsigned mha_drifter_fifo_t < T >::minimum_fill_count [private]

The minimum fill count of this fifo.

5.138.4.2 template < class T > const unsigned mha_drifter_fifo_t < T >::desired_fill_count [private]

The desired fill count of the fifo.

The fifo is initialized with this ammount of data when data transmission starts.

5.138.4.3 template < class T > bool mha_drifter_fifo_t < T >::writer_started [private]

Flag set to true when write is called the first time.

5.138.4.4 template < class T > bool mha_drifter_fifo_t < T >::reader_started [private]

Flag set to true when read is called for the first time.

5.138.4.5 template < class T > unsigned mha drifter fifo t < T >::writer_xruns_total [private]

The number of xruns seen by the writer since object instantiation.

5.138.4.6 template < class T > unsigned mha drifter fifo t < T >::reader_xruns_total [private]

The number of xruns seen by the reader since object instantiation.

5.138.4.7 template < class T > unsigned mha_drifter_fifo_t < T >::writer_xruns_since_start [private]

The number of xruns seen by the writer since the last start of processing.

5.138.4.8 template < class T > unsigned mha_drifter_fifo_t < T >::reader_xruns_since_start [private]

The number of xruns seen by the reader since the last start of processing.

5.138.4.9 template < class T > unsigned mha_drifter_fifo_t < T >::writer_xruns_in_succession [private]

The number of xruns seen by the writer in succession.

Reset to 0 every time a write succeeds without xrun.

5.138.4.10 template < class T > unsigned mha_drifter_fifo_t < T >::reader_xruns_in_succession [private]

The number of xruns seen by the reader in succession.

Reset to 0 every time a read succeeds without xrun.

5.138.4.11 template < class T > unsigned mha_drifter_fifo_t < T > ::maximum_writer_xruns_in_← succession_before_stop [private]

A limit to the number of xruns seen in succession during write before the data transmission through the FIFO is stopped.

5.138.4.12 template < class T > unsigned mha_drifter_fifo_t < T >::maximum_reader_xruns_in_ \leftarrow succession_before_stop [private]

A limit to the number of xruns seen in succession during read before the data transmission through the FIFO is stopped.

5.138.4.13 template < class T > mha_fifo_t < T > :: value_type mha_drifter_fifo_t < T > :: null_data [private]

The value used in place of missing data.

5.138.4.14 template < class T > unsigned mha_drifter_fifo_t < T >::startup_zeros [private]

When processing starts, that is when both $mha_drifter_fifo_t < T > :: reader_started$ (p. 412) and $mha_drifter_fifo_t < T > :: writer_started$ (p. 411) are true, then first $mha_drifter_fifo_t < \leftarrow T > :: desired_fill_count$ (p. 411) instances of $mha_drifter_fifo_t < T > :: null_data$ (p. 413) are delivered to the reader.

These **null_data** (p. 413) instances are not transmitted through the fifo because filling the fifo with enough **null_data** (p. 413) might not be realtime safe and this filling has to be initiated by **starting** (p. 411) or **stop** (p. 411) (this implementation: **starting** (p. 411)) which are be called with realtime constraints.

The documentation for this class was generated from the following file:

· mha_fifo.h

5.139 MHA_Error Class Reference

Error reporting exception class.

Inherits exception.

Public Member Functions

- MHA_Error (const char *file, int line, const char *fmt,...)
 Create an instance of a MHA_Error (p. 413).
- MHA_Error (const MHA_Error &)
- MHA_Error & operator= (const MHA_Error &)
- \sim MHA Error () throw ()
- const char * get_msg () const

Return the error message without source position.

const char * get_longmsg () const

Return the error message with source position.

const char * what () const throw ()
 overwrite std::execption::what()

Private Attributes

- char * msg
- char * longmsg

5.139.1 Detailed Description

Error reporting exception class.

This class is used for error handling in the openMHA. It is used by the openMHA kernel and by the openMHA toolbox library. Please note that exceptions should not be used accross ANSI-C interfaces. It is necessary to catch exceptions within the library.

The MHA_Error (p. 413) class holds source file name, line number and an error message.

5.139.2 Constructor & Destructor Documentation

```
5.139.2.1 MHA_Error::MHA_Error ( const char * s_file, int I, const char * fmt, ... )
```

Create an instance of a MHA_Error (p. 413).

Parameters

s_file	source file name (FILE)
1	source line (LINE)
fmt	format string for error message (as in printf)

5.139.3.3 const char* MHA_Error::get_longmsg() const [inline]

Return the error message with source position.

5.139.3.4 const char* MHA_Error::what () const throw) [inline]

overwrite std::execption::what()

5.139.4 Member Data Documentation

5.139.4.1 char* MHA_Error::msg [private]

5.139.4.2 char* **MHA_Error**::**longmsg** [private]


The documentation for this class was generated from the following files:

- mha_error.hh
- mha_error.cpp

5.140 mha_fifo_lw_t < T > Class Template Reference

This FIFO uses locks to synchronize access.

Inheritance diagram for mha_fifo_lw_t< T >:

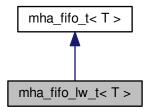

Public Member Functions

- virtual void write (const T *data, unsigned count)
 write specified ammount of data to the fifo.
- virtual void read (T *buf, unsigned count)
 read data from fifo.
- mha_fifo_lw_t (unsigned max_fill_count)
 Create FIFO with fixed buffer size.
- virtual ~mha_fifo_lw_t ()
 release synchronization object
- virtual void set_error (unsigned index, MHA_Error *error)
 Process waiting for more data or space should bail out, throwing this error.

Private Attributes

mha_fifo_thread_platform_t * sync
 platform specific thread synchronization

• MHA Error * error [2]

If waiting for synchronization should be aborted then exception to be thrown by reader process (index 0) or writer process (index 1) has to be placed here.

Additional Inherited Members

5.140.1 Detailed Description

```
\label{template} \begin{array}{l} \text{template} \! < \! \text{class T} \! > \\ \text{class mha\_fifo\_lw\_t} \! < \! \text{T} > \\ \end{array}
```

This FIFO uses locks to synchronize access.

Reading and writing can block until the operation can be executed.

5.140.2 Constructor & Destructor Documentation

Create FIFO with fixed buffer size.

```
5.140.2.2 template < class T > mha_fifo_lw_t < T >::\sim mha_fifo_lw_t ( ) [virtual]
```

release synchronization object

5.140.3 Member Function Documentation

```
5.140.3.1 template < class T > void mha_fifo_lw_t< T >::write ( const T * data, unsigned count ) [virtual]
```

write specified ammount of data to the fifo.

If there is not enough space, then wait for more space.

Parameters

data	Pointer to source data.	
count	Number of instances to copy.	

Exceptions

```
MHA_Error (p. 413) when detecting a deadlock situation.
```

Reimplemented from $mha_fifo_t < T > (p. 422)$.

5.140.3.2 template
$$<$$
 class T $>$ void mha_fifo_lw_t $<$ T $>$::read (T $*$ buf, unsigned count) [virtual]

read data from fifo.

If there is not enough data, then wait for more data.

Parameters

buf	Pointer to the target buffer.
count	Number of instances to copy.

Exceptions

MHA_Error (p. 413)	when detecting a deadlock situation.

Reimplemented from $mha_fifo_t < T > (p. 423)$.

5.140.3.3 template
$$<$$
 class T $>$ void mha_fifo_lw_t $<$ T $>$::set_error (unsigned index, MHA_Error $*$ error) [virtual]

Process waiting for more data or space should bail out, throwing this error.

Parameters

index	Use 0 for terminating reader, 1 for terminating writer.
error	MHA_Error (p. 413) to be thrown

5.140.4 Member Data Documentation

5.140.4.1 template < class T > mha_fifo_thread_platform_t* mha_fifo_lw_t < T >::sync [private]

platform specific thread synchronization


If waiting for synchronization should be aborted then exception to be thrown by reader process (index 0) or writer process (index 1) has to be placed here.

The documentation for this class was generated from the following files:

- · mha_fifo.h
- mha_fifo.cpp

5.141 mha_fifo_posix_threads_t Class Reference

Inheritance diagram for mha_fifo_posix_threads_t:

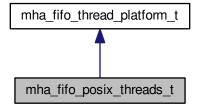

Public Member Functions

- mha_fifo_posix_threads_t ()
- virtual void aquire_mutex ()
- virtual void release_mutex ()
- virtual void wait_for_decrease ()
- virtual void wait for increase ()
- virtual void increment ()
- virtual void decrement ()
- virtual ~mha_fifo_posix_threads_t ()

Private Attributes

```
pthread_mutex_t mutex
```

- pthread_cond_t decrease_condition
- pthread_cond_t increase_condition

```
5.141.1 Constructor & Destructor Documentation
5.141.1.1 mha_fifo_posix_threads_t::mha_fifo_posix_threads_t( ) [inline]
5.141.1.2 virtual mha_fifo_posix_threads_t::~mha_fifo_posix_threads_t( ) [inline],
         [virtual]
5.141.2 Member Function Documentation
5.141.2.1 virtual void mha_fifo_posix_threads_t::aquire_mutex( ) [inline], [virtual]
Implements mha_fifo_thread_platform_t (p. 427).
5.141.2.2 virtual void mha fifo posix threads t::release mutex ( ) [inline], [virtual]
Implements mha_fifo_thread_platform_t (p. 427).
5.141.2.3 virtual void mha_fifo_posix_threads_t::wait_for_decrease( ) [inline], [virtual]
Implements mha_fifo_thread_platform_t (p. 427).
5.141.2.4 virtual void mha_fifo_posix_threads_t::wait_for_increase( ) [inline], [virtual]
Implements mha fifo thread platform t (p. 427).
5.141.2.5 virtual void mha_fifo_posix_threads_t::increment( ) [inline], [virtual]
Implements mha_fifo_thread_platform_t (p. 427).
5.141.2.6 virtual void mha_fifo_posix_threads_t::decrement() [inline], [virtual]
Implements mha_fifo_thread_platform_t (p. 428).
```

5.141.3 Member Data Documentation

5.141.3.1 pthread_mutex_t mha_fifo_posix_threads_t::mutex [private]

5.141.3.2 pthread_cond_t mha_fifo_posix_threads_t::decrease_condition [private]

5.141.3.3 pthread_cond_t mha_fifo_posix_threads_t::increase_condition [private]


The documentation for this class was generated from the following file:

· mha_fifo.h

5.142 mha_fifo_t < T > Class Template Reference

A FIFO class for blocksize adaptation Synchronization: None.

Inheritance diagram for mha_fifo_t< T >:

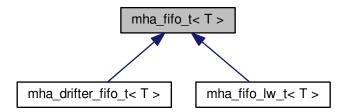

Public Types

• typedef T value_type

The data type exchanged by this fifo.

Public Member Functions

virtual void write (const T *data, unsigned count)

write specified ammount of data to the fifo.

virtual void read (T *buf, unsigned count)

read data from fifo

virtual unsigned get_fill_count () const

Read-only access to fill count.

• virtual unsigned get_available_space () const

Read-only access to available space.

virtual unsigned get_max_fill_count () const

The capacity of this fifo.

mha_fifo_t (unsigned max_fill_count)

Create FIFO with fixed buffer size.

mha_fifo_t (unsigned max_fill_count, const T &t)

Create FIFO with fixed buffer size, where all (initially unused) copies of T are initialized as copies of t.

mha_fifo_t (const mha_fifo_t &src)

Copy constructor.

virtual ~mha_fifo_t ()

Destroy FIFO.

mha_fifo_t< T > & operator= (const mha_fifo_t< T > &)

Assignment operator.

Protected Member Functions

• void clear ()

Empty the fifo at once.

Private Attributes

const unsigned max fill count

The maximum fill count of this FIFO.

• T * buf

The memory allocated to store the data.

• T * write ptr

points to location where to write next

const T * read ptr

points to location where to read next

bool buf uses placement new

wether buf was allocated using placement new or array new.

```
5.142.1 Detailed Description
```

```
template < class T > class mha_fifo_t < T >
```

A FIFO class for blocksize adaptation Synchronization: None.

Use external synchronisation or synchronization in inheriting class.

```
5.142.2 Member Typedef Documentation
```

```
5.142.2.1 template < class T > typedef T mha_fifo_t < T >::value_type
```

The data type exchanged by this fifo.

5.142.3 Constructor & Destructor Documentation

Create FIFO with fixed buffer size.

Create FIFO with fixed buffer size, where all (initially unused) copies of T are initialized as copies of t.

```
5.142.3.3 template < class T> mha_fifo_t < T>::mha_fifo_t ( const mha_fifo_t < T> & src )
```

Copy constructor.

```
5.142.3.4 template < class T > mha fifo t < T >::\sim mha fifo t () [virtual]
```

Destroy FIFO.

5.142.4 Member Function Documentation

```
5.142.4.1 template < class T > void mha_fifo_t < T >::write ( const T * data, unsigned count ) [virtual]
```

write specified ammount of data to the fifo.

Parameters

data	Pointer to source data.	
count	Number of instances to copy	

Exceptions

```
MHA_Error (p. 413) when there is not enough space available.
```

Reimplemented in $mha_fifo_lw_t < T > (p. 416)$, and $mha_drifter_fifo_t < T > (p. 409)$.

read data from fifo

Parameters

buf	Pointer to the target buffer	
count	Number of instances to copy	

Exceptions

```
MHA_Error (p. 413) when there is not enough data available.
```

Reimplemented in $mha_fifo_lw_t < T > (p. 417)$, and $mha_drifter_fifo_t < T > (p. 410)$.

Read-only access to fill count.

Reimplemented in **mha_drifter_fifo_t** < **T** > (p. 410).

Read-only access to available_space.

Reimplemented in **mha_drifter_fifo_t** < **T** > (p. 410).

The capacity of this fifo.

```
5.142.4.6 template < class T > mha_fifo_t < T > & mha_fifo_t < T > ::operator= ( const mha_fifo_t < T > & src )
```

Assignment operator.

5.142.4.7 template < class T > void mha_fifo_t < T >::clear() [inline], [protected]

Empty the fifo at once.

Should be called by the reader, or when the reader is inactive.

5.142.5 Member Data Documentation

5.142.5.1 template < class T > const unsigned mha_fifo_t < T >::max_fill_count [private]

The maximum fill count of this FIFO.

5.142.5.2 template < class T > T * mha_fifo_t < T >::buf [private]

The memory allocated to store the data.

max_fill_count + 1 locations are allocated: At least one location is always unused, because we have max_fill_count + 1 possible fillcounts [0:max_fill_count] that we need to distinguish.

5.142.5.3 template < class T > T * mha_fifo_t < T >::write_ptr [private]

points to location where to write next

5.142.5.4 template < class T > const T * mha_fifo_t < T >::read_ptr [private]

points to location where to read next

5.142.5.5 template < class T > bool mha_fifo_t < T >::buf_uses_placement_new [private]

wether buf was allocated using placement new or array new.

The documentation for this class was generated from the following file:

· mha fifo.h

5.143 mha_fifo_thread_guard_t Class Reference

Simple Mutex Guard Class.

Public Member Functions

- mha_fifo_thread_guard_t (mha_fifo_thread_platform_t *sync)
- ~mha_fifo_thread_guard_t ()

Private Attributes

mha fifo thread platform t * sync

5.143.1 Detailed Description

Simple Mutex Guard Class.

5.143.2 Constructor & Destructor Documentation


- **5.143.2.2** mha_fifo_thread_guard_t::~mha_fifo_thread_guard_t() [inline]
- 5.143.3 Member Data Documentation
- **5.143.3.1 mha_fifo_thread_platform_t*** **mha_fifo_thread_guard_t::sync** [private]

The documentation for this class was generated from the following file:

· mha_fifo.h

5.144 mha_fifo_thread_platform_t Class Reference

Abstract base class for synchronizing multithreaded (producer/consumer) fifo operations. Inheritance diagram for mha_fifo_thread_platform_t:

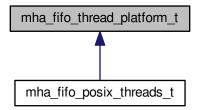

Public Member Functions

virtual void aquire mutex ()=0

Calling thread waits until it aquires the lock.

• virtual void release_mutex ()=0

Calling thread releases the lock.

virtual void wait_for_decrease ()=0

Calling producer thread must own the lock.

• virtual void wait for increase ()=0

Calling consumer thread must own the lock.

virtual void increment ()=0

To be called by producer thread after producing.

• virtual void decrement ()=0

To be called by consumer thread after consuming.

virtual ~mha_fifo_thread_platform_t ()

Make destructor virtual.

mha_fifo_thread_platform_t ()

Make default constructor accessible.

Private Member Functions

```
    mha_fifo_thread_platform_t (const mha_fifo_thread_platform_t &)
```

```
• mha fifo thread platform t & operator= (const mha fifo thread platform t &)
```

5.144.1 Detailed Description

Abstract base class for synchronizing multithreaded (producer/consumer) fifo operations.

Works only with single producer and single consumer.

```
5.144.2 Constructor & Destructor Documentation
```

```
5.144.2.1 virtual mha_fifo_thread_platform_t::~mha_fifo_thread_platform_t( ) [inline], [virtual]
```

Make destructor virtual.

```
5.144.2.3 mha_fifo_thread_platform_t::mha_fifo_thread_platform_t() [inline]
```

Make default constructor accessible.

```
5.144.3 Member Function Documentation
```

```
5.144.3.1 virtual void mha_fifo_thread_platform_t::aquire_mutex( ) [pure virtual]
```

Calling thread waits until it aquires the lock.

Must not be called when the lock is already aquired.

Implemented in **mha_fifo_posix_threads_t** (p. 419).

```
5.144.3.2 virtual void mha fifo thread platform t::release mutex ( ) [pure virtual]
```

Calling thread releases the lock.

May only be called when lock is owned.

Implemented in **mha_fifo_posix_threads_t** (p. 419).

```
5.144.3.3 virtual void mha_fifo_thread_platform_t::wait_for_decrease() [pure virtual]
```

Calling producer thread must own the lock.

Method releases lock, and waits for consumer thread to call decrease(). Then reaquires lock and returns

Implemented in **mha_fifo_posix_threads_t** (p. 419).

```
5.144.3.4 virtual void mha_fifo_thread_platform_t::wait_for_increase() [pure virtual]
```

Calling consumer thread must own the lock.

Method releases lock, and waits for producer thread to call increase(). Then reaquires lock and returns

```
Implemented in mha_fifo_posix_threads_t (p. 419).
```

```
5.144.3.5 virtual void mha_fifo_thread_platform_t::increment() [pure virtual]
```

To be called by producer thread after producing.

Producer thread needs to own the lock to call this method.

Implemented in **mha_fifo_posix_threads_t** (p. 419).

```
5.144.3.6 virtual void mha_fifo_thread_platform_t::decrement( ) [pure virtual]
To be called by consumer thread after consuming.
```

Consumer thread needs to own the lock to call this method.

Implemented in mha_fifo_posix_threads_t (p. 419).

The documentation for this class was generated from the following file:

· mha_fifo.h

```
5.145 mha_rt_fifo_element_t < T > Class Template Reference
```

Object wrapper for **mha_rt_fifo_t** (p. 429).

Public Member Functions

- mha_rt_fifo_element_t (T *data)
 Constructor.
- ~mha_rt_fifo_element_t ()

Public Attributes

- mha_rt_fifo_element_t < T > * next
 Pointer to next fifo element. NULL for the last (newest) fifo element.
- bool abandonned

Indicates that this element will no longer be used and may be deleted.

• T * data

Pointer to user data.

5.145.1 Detailed Description

```
\label{eq:template} \begin{split} \text{template} \! < \! \text{class T} \! > \\ \text{class mha\_rt\_fifo\_element\_t} \! < \! \text{T} > \end{split}
```

Object wrapper for **mha_rt_fifo_t** (p. 429).

5.145.2 Constructor & Destructor Documentation

Constructor.

This element assumes ownership of user data.

Parameters

data User data. Has to be allocated on the heap with standard operator new, because it will be deleted in this element's destructor.

5.145.2.2 template
$$<$$
 class T $>$ mha_rt_fifo_element_t $<$ T $>$:: \sim mha_rt_fifo_element_t () [inline]

5.145.3 Member Data Documentation

Pointer to next fifo element. NULL for the last (newest) fifo element.

Indicates that this element will no longer be used and may be deleted.

Pointer to user data.

The documentation for this class was generated from the following file:

· mha_fifo.h

5.146 mha rt fifo t < T > Class Template Reference

Template class for thread safe, half real time safe fifo without explixit locks.

Public Member Functions

mha_rt_fifo_t ()

Construct empty fifo.

• ~mha_rt_fifo_t ()

Destructor will delete all data currently in the fifo.

• T * poll ()

Retrieve the latest element in the Fifo.

• T * poll_1 ()

Retrieve the next element in the Fifo, if there is one, and mark the previous element as abandonned.

void push (T *data)

Add element to the Fifo.

Private Member Functions

void remove_abandonned ()

Deletes abandonned elements.

void remove_all ()

Deletes all elements.

Private Attributes

```
    mha_rt_fifo_element_t < T > * root
```

The first element in the fifo. Deleting elements starts here.

mha_rt_fifo_element_t< T > * current

The element most recently returned by **poll** (p. 431) or **poll** 1 (p. 431).

5.146.1 Detailed Description

```
template < class T > class mha_rt_fifo_t < T >
```

Template class for thread safe, half real time safe fifo without explixit locks.

Reading from this fifo is realtime safe, writing to it is not. This fifo is designed for objects that were constructed on the heap. It assumes ownership of these objects and calls delete on them when they are no longer used. Objects remain inside the Fifo while being used by the reader.

A new fifo element is inserted by using **push** (p. 431). The push operation is not real time safe, it allocates and deallocates memory. The latest element is retrieved by calling **poll** (p. 431). This operation will skip fifo elements if more than one **push** (p. 431) has been occured since the last poll. To avoid skipping, call the **poll_1** (p. 431) operation instead.

5.146.2 Constructor & Destructor Documentation

```
5.146.2.1 template < class T > mha_rt_fifo_t < T > ::mha_rt_fifo_t ( ) [inline]
```

Construct empty fifo.

```
5.146.2.2 template < class T > mha_rt_fifo_t < T >::~mha_rt_fifo_t ( ) [inline]
```

Destructor will delete all data currently in the fifo.

5.146.3 Member Function Documentation

Retrieve the latest element in the Fifo.

Will skip fifo elements if more than one element has been added since last poll invocation. Will return the same element as on last call if no elements have been added in the mean time. Marks former elements as abandonned.

Returns

The latest element in this Fifo. Returns NULL if the Fifo is empty.

Retrieve the next element in the Fifo, if there is one, and mark the previous element as abandonned.

Else, if there is no newer element, returns the same element as on last **poll()** (p. 431) or **poll_1()** (p. 431) invocation.

Returns

The next element in this Fifo, if there is one, or the same as before. Returns NULL if the Fifo is empty.

5.146.3.3 template
$$<$$
 class T $>$ void mha_rt_fifo_t $<$ T $>$::push (T $*$ data) [inline]

Add element to the Fifo.

Deletes abandonned elements in the fifo.

Parameters

data The new user data to place at the end of the fifo. After this invocation, the fifo is the owner of this object and will delete it when it is no longer used. data must have been allocated on the heap with standard operator new.

5.146.3.4 template
$$<$$
 class T $>$ void mha_rt_fifo_t $<$ T $>$::remove_abandonned () [inline], [private]

Deletes abandonned elements.

5.146.3.5 template < class T > void mha_rt_fifo_t < T >::remove_all() [inline], [private]

Deletes all elements.

5.146.4 Member Data Documentation

The first element in the fifo. Deleting elements starts here.

The element most recently returned by **poll** (p. 431) or **poll_1** (p. 431).

Searching for new elements starts here.


The documentation for this class was generated from the following file:

mha_fifo.h

5.147 mha_spec_t Struct Reference

Spectrum signal structure.

Inheritance diagram for mha_spec_t:

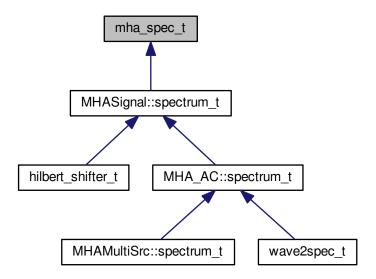

Public Attributes

mha_complex_t * buf

signal buffer

unsigned int num_channels

number of channels

• unsigned int num_frames

number of frames in each channel

mha_channel_info_t * channel_info

detailed channel description

5.147.1 Detailed Description

Spectrum signal structure.

This structure contains the short time fourier transform output of the windowed input signal. The member num_frames describes the number of frequency bins in each channel. For an even FFT length N, this is N/2+1. With odd FFT lengths, it is (N+1)/2. The imaginary part of the first bin is zero. For even FFT lengths, also the imaginary part at the Nyquist frequency is zero.

buf[k].re	Re(0)	Re(1)	Re(2)	Re(3)	Re(4)	 Re(n/2-1)	Re(n/2)
buf[k].im		Im(1)	Im(2)	Im(3)	Im(4)	 Im(n/2-1)	
k	0	1	2	3	4	n/2-1	n/2

Figure 4 Data order of FFT spectrum.

5.147.2 Member Data Documentation

5.147.2.1 mha_complex_t* mha_spec_t::buf

signal buffer

5.147.2.2 unsigned int mha_spec_t::num_channels

number of channels

5.147.2.3 unsigned int mha_spec_t::num_frames

number of frames in each channel

5.147.2.4 mha_channel_info_t* mha_spec_t::channel_info

detailed channel description


The documentation for this struct was generated from the following file:

· mha.h

5.148 MHA_TCP::Async_Notify Class Reference

Portable Multiplexable cross-thread notification.

Inheritance diagram for MHA_TCP::Async_Notify:

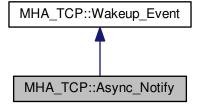

Public Member Functions

- Async_Notify ()
- virtual void reset ()
- virtual void set ()
- virtual ~Async_Notify ()

Private Attributes

• int **pipe** [2]

Additional Inherited Members

5.148.1 Detailed Description

Portable Multiplexable cross-thread notification.

5.148.2 Constructor & Destructor Documentation

5.148.2.1 Async_Notify::Async_Notify()

5.148.2.2 Async_Notify::~Async_Notify() [virtual]

5.148.3 Member Function Documentation

5.148.3.1 void Async_Notify::reset() [virtual]

Reimplemented from MHA_TCP::Wakeup_Event (p. 461).

5.148.3.2 void Async_Notify::set() [virtual]

5.148.4 Member Data Documentation

5.148.4.1 int MHA_TCP::Async_Notify::pipe[2] [private]


The documentation for this class was generated from the following files:

- mha_tcp.hh
- mha_tcp.cpp

5.149 MHA_TCP::Client Class Reference

A portable class for a tcp client connections.

Inheritance diagram for MHA_TCP::Client:

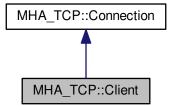

Public Member Functions

• **Client** (const std::string &host, unsigned short port)

Constructor connects to host, port via TCP.

• Client (const std::string &host, unsigned short port, Timeout_Watcher &timeout_← watcher)

Constructor connects to host, port via TCP, using a timeout.

Additional Inherited Members

5.149.1 Detailed Description

A portable class for a tcp client connections.

5.149.2 Constructor & Destructor Documentation

```
5.149.2.1 Client::Client (
const std::string & host,
unsigned short port )
```

Constructor connects to host, port via TCP.

Parameters

host	The hostname of the TCP Server (p. 447).
port	The port or the TCP Server (p. 447).

```
5.149.2.2 Client::Client (

const std::string & host,

unsigned short port,

Timeout Watcher & timeout_watcher )
```

Constructor connects to host, port via TCP, using a timeout.

Parameters

host	The hostname of the TCP Server (p. 447).	
port	The port or the TCP Server (p. 447).	
timeout_watcher	an Event watcher that implements a timeout.	

The documentation for this class was generated from the following files:


mha_tcp.hh

mha_tcp.cpp

5.150 MHA_TCP::Connection Class Reference

Connection (p. 437) handles Communication between client and server, is used on both sides.

Inheritance diagram for MHA TCP::Connection:

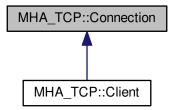

Public Member Functions

- Sockread_Event * get_read_event ()
- Sockwrite_Event * get_write_event ()
- std::string get_peer_address ()

Get peer's IP Address.

unsigned short get_peer_port ()

Get peer's TCP port.

• SOCKET get_fd () const

Return the (protected) file descriptor of the connection.

virtual ~Connection ()

Destructor closes the underlying file descriptor.

• bool **eof** ()

Checks if the peer has closed the connection.

bool can_read_line (char delim= '\n')

Checks if a full line of text has arrived by now.

bool can_read_bytes (unsigned howmany)

Checks if the specified ammount of data can be read.

std::string read_line (char delim= '\n')

Reads a single line of data from the socket.

std::string read_bytes (unsigned howmany)

Reads the specified ammount of dat from the socket.

void try_write (const std::string &data="")

Adds data to the internal "outgoing" buffer, and then tries to write as much data from that buffer to the socket as possible without blocking.

void write (const std::string &data="")

Adds data to the internal "outgoing" buffer, and then writes that that buffer to the socket, regardless of blocking.

bool needs_write ()

Checks if the internal "outgoing" buffer contains data.

• unsigned buffered_incoming_bytes () const

Returns the number of bytes in the internal "incoming" buffer.

• unsigned buffered_outgoing_bytes () const

Returns the number of bytes in the internal "outgoing" buffer.

Protected Member Functions

Connection (SOCKET _fd)

Create a connection instance from a socket filedescriptor.

Protected Attributes

SOCKET fd

The file descriptor of the TCP Socket.

Private Member Functions

• void init peer data ()

determine peer address and port

• bool can sysread ()

Determine wether at least 1 byte can be read without blocking.

• bool can_syswrite ()

Determine wether at least 1 byte can be written without blocking.

std::string sysread (unsigned bytes)

Call the system's read function and try to read bytes.

std::string syswrite (const std::string &data)

Call the system's write function and try to write all characters in the string data.

Private Attributes

- · std::string outbuf
- std::string inbuf
- Sockread Event * read event
- Sockwrite_Event * write_event
- bool closed
- struct sockaddr_in peer_addr

5.150.1 Detailed Description

Connection (p. 437) handles Communication between client and server, is used on both sides.

5.150.2 Constructor & Destructor Documentation

```
5.150.2.1 MHA_TCP::Connection::Connection (
SOCKET_fd) [protected]
```

Create a connection instance from a socket filedescriptor.

Parameters

```
    ← The file descriptor of the TCP Socket. This file descriptor is closed again in the destructor.
    fd
```

Exceptions

```
MHA_Error (p. 413) If the file descriptor is < 0.
```

5.150.2.2 Connection: Connection () [virtual]

Destructor closes the underlying file descriptor.

5.150.3 Member Function Documentation

5.150.3.1 void MHA_TCP::Connection::init_peer_data() [private]

determine peer address and port

5.150.3.2 bool Connection::can_sysread() [private]

Determine wether at least 1 byte can be read without blocking.

5.150.3.3 bool Connection::can_syswrite() [private]

Determine wether at least 1 byte can be written without blocking.

```
5.150.3.4 std::string Connection::sysread (
unsigned bytes ) [private]
```

Call the system's read function and try to read bytes.

This will block in a situation where can_sysread returns false.

Parameters

Returns

The characters read from the socket. The result may have fewer characters than specified by bytes. If the result is an empty string, then the socket has been closed by the peer.

```
5.150.3.5 std::string Connection::syswrite (
const std::string & data ) [private]
```

Call the system's write function and try to write all characters in the string data.

May write fewer characters, but will at least write one character.

Parameters

data A string of characters to write to the socket.

Returns

The rest of the characters that have not yet been written.

```
5.150.3.6 Sockread_Event * Connection::get_read_event()

5.150.3.7 Sockwrite_Event * Connection::get_write_event()

5.150.3.8 std::string Connection::get_peer_address()

Get peer's IP Address.

5.150.3.9 unsigned short Connection::get_peer_port()

Get peer's TCP port.

5.150.3.10 SOCKET MHA_TCP::Connection::get_fd() const [inline]
```

Return the (protected) file descriptor of the connection.

Will be required for SSL.

```
5.150.3.11 bool Connection::eof ( )
```

Checks if the peer has closed the connection.

As a side effect, this method fills the internal "incoming" buffer if it was empty and the socket is readable and not eof.

```
5.150.3.12 bool Connection::can_read_line ( char delim = '\n')
```

Checks if a full line of text has arrived by now.

This method reads data from the socket into the internal "incoming" buffer if it can be done without blocking.

Parameters

```
delim The line delimiter.
```

Returns

true if at least one full line of text is present in the internal buffer after this method call, false otherwise.

```
5.150.3.13 bool Connection::can_read_bytes ( unsigned howmany )
```

Checks if the specified ammount of data can be read.

This method reads data from the socket into an internal "incoming" buffer if it can be done without blocking.

Parameters

```
howmany The number of bytes that the caller wants to have checked.
```

Returns

true if at least the specified ammount of data is present in the internal buffer after this method call, false otherwise

```
5.150.3.14 std::string Connection::read_line ( char delim = ' \n ' )
```

Reads a single line of data from the socket.

Blocks if necessary.

Parameters

delim Th	e line delimiter.
----------	-------------------

Returns

The string of characters in this line, including the trailing delimiter. The delimiter may be missing if the last line before EOF does not have a delimiter.

```
5.150.3.15 std::string Connection::read_bytes ( unsigned howmany )
```

Reads the specified ammount of dat from the socket.

Blocks if necessary.

Parameters

howmany	The number of bytes to read.
---------	------------------------------

Returns

The string of characters read. The string may be shorter if EOF is encountered.

```
5.150.3.16 void Connection::try_write (
const std::string & data = " " )
```

Adds data to the internal "outgoing" buffer, and then tries to write as much data from that buffer to the socket as possible without blocking.

Parameters

```
data data to send over the socket.
```

```
5.150.3.17 void Connection::write (

const std::string & data = " " )
```

Adds data to the internal "outgoing" buffer, and then writes that that buffer to the socket, regardless of blocking.

Parameters

```
5.150.3.18 bool Connection::needs_write ( )
```

Checks if the internal "outgoing" buffer contains data.

```
5.150.3.19 unsigned Connection::buffered incoming bytes ( ) const
```

Returns the number of bytes in the internal "incoming" buffer.

```
5.150.3.20 unsigned Connection::buffered_outgoing_bytes ( ) const
```

Returns the number of bytes in the internal "outgoing" buffer.

5.150.4 Member Data Documentation

```
5.150.4.1 std::string MHA_TCP::Connection::outbuf [private]
```

5.150.4.2 std::string MHA_TCP::Connection::inbuf [private]

5.150.4.3 Sockread_Event* MHA_TCP::Connection::read_event [private]

5.150.4.4 Sockwrite_Event* MHA_TCP::Connection::write_event [private]

5.150.4.5 bool MHA_TCP::Connection::closed [private]

5.150.4.6 struct sockaddr_in MHA_TCP::Connection::peer_addr [private]

5.150.4.7 SOCKET MHA_TCP::Connection::fd [protected]

The file descriptor of the TCP Socket.


The documentation for this class was generated from the following files:

- mha_tcp.hh
- mha_tcp.cpp

5.151 MHA_TCP::Event_Watcher Class Reference

OS-independent event watcher, uses select on Unix and WaitForMultipleObjects on Windows.

Inheritance diagram for MHA_TCP::Event_Watcher:

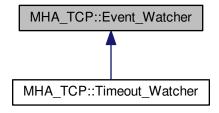

Public Types

- typedef std::set< Wakeup_Event * > Events
- typedef std::set< Wakeup_Event * >::iterator iterator

Public Member Functions

- void observe (Wakeup_Event *event)
 - Add an event to this observer.
- void ignore (Wakeup_Event *event)

Remove an event from this observer.

- std::set< Wakeup_Event * > wait ()
 - \ Wait for some event to occur.
- virtual ~Event_Watcher ()

Private Attributes

 $\bullet \ \, \text{std::set}{<} \ \, \text{Wakeup_Event} \, *> \text{events}$

The list of events to watch.

5.151.1 Detailed Description

OS-independent event watcher, uses select on Unix and WaitForMultipleObjects on Windows.

```
5.151.2 Member Typedef Documentation
```

```
5.151.2.1 typedef std::set<Wakeup_Event*> MHA_TCP::Event_Watcher::Events
```

```
5.151.2.2 typedef std::set<Wakeup_Event*>::iterator MHA_TCP::Event_Watcher::iterator
```

```
5.151.3 Constructor & Destructor Documentation
```

```
5.151.3.1 Event_Watcher::~Event_Watcher() [virtual]
```

5.151.4 Member Function Documentation

```
5.151.4.1 void Event_Watcher::observe (

Wakeup_Event * event )
```

Add an event to this observer.

```
5.151.4.2 void Event_Watcher::ignore (
Wakeup_Event * event )
```

Remove an event from this observer.

```
5.151.4.3 std::set < Wakeup_Event * > Event_Watcher::wait ( )
```

\ Wait for some event to occur.

Return all events that are ready

5.151.5 Member Data Documentation

```
5.151.5.1 std::set<Wakeup_Event*> MHA_TCP::Event_Watcher::events [private]
```

The list of events to watch.

The documentation for this class was generated from the following files:

- mha_tcp.hh
- mha_tcp.cpp

5.152 MHA_TCP::OS_EVENT_TYPE Struct Reference

Public Types

Public Attributes

```
    enum MHA_TCP::OS_EVENT_TYPE:: { ... } mode
    union {
        int fd
        double timeout
        };
```

- 5.152.1 Member Enumeration Documentation
- 5.152.1.1 anonymous enum

Enumerator

R

W

X

T

- 5.152.2 Member Data Documentation
- 5.152.2.1 enum { ... } MHA_TCP::OS_EVENT_TYPE::mode
- 5.152.2.2 int MHA_TCP::OS_EVENT_TYPE::fd
- 5.152.2.3 double MHA_TCP::OS_EVENT_TYPE::timeout
- 5.152.2.4 union { ... }

The documentation for this struct was generated from the following file:

mha_tcp.hh

5.153 MHA TCP::Server Class Reference

Public Member Functions

• Server (unsigned short port=0, const std::string &iface="0.0.0.0")

Create a TCP server socket.

Server (const std::string &iface, unsigned short port=0)

Create a TCP server socket.

• ∼Server ()

Close the TCP server socket.

• std::string **get_interface** () const

Get the name given in the constructor for the network interface.

unsigned short get_port () const

Get the port that the TCP server socket currently listens to.

Sockaccept_Event * get_accept_event ()

Produces an event that can be observed by an Event_Watcher (p. 444).

Connection * accept ()

Accept an incoming connection.

Connection * try_accept ()

Accept an incoming connection if it can be done without blocking.

Private Member Functions

• void initialize (const std::string &iface, unsigned short port)

Private Attributes

- sockaddr_in sock_addr
- SOCKET serversocket
- std::string iface
- unsigned short port
- Sockaccept_Event * accept_event

5.153.1 Constructor & Destructor Documentation

```
5.153.1.1 Server::Server (

unsigned short port = 0,

const std::string & iface = " 0 . 0 . 0 . 0 " )
```

Create a TCP server socket.

Parameters

port	The TCP port to listen to.
iface	The network interface to bind to.

```
5.153.1.2 Server::Server ( const std::string & iface, unsigned short port = 0 )
```

Create a TCP server socket.

Parameters

port	The TCP port to listen to.
iface	The network interface to bind to.

```
5.153.1.3 Server::∼Server ( )
```

Close the TCP server socket.

5.153.2 Member Function Documentation

5.153.2.2 std::string Server::get_interface () const

Get the name given in the constructor for the network interface.

5.153.2.3 unsigned short Server::get_port () const

Get the port that the TCP server socket currently listens to.

5.153.2.4 Sockaccept_Event * Server::get_accept_event()

Produces an event that can be observed by an **Event_Watcher** (p. 444).

This event signals incoming connections that can be accepted.

5.153.2.5 Connection * Server::accept ()

Accept an incoming connection.

blocks if necessary.

Returns

The new TCP connection. The connection has to be deleted by the caller.

```
5.153.2.6 Connection * Server::try_accept ( )
```

Accept an incoming connection if it can be done without blocking.

Returns

The new TCP connection or 0 if there is no immediate connection. The connection has to be deleted by the caller.

5.153.3 Member Data Documentation

```
5.153.3.1 sockaddr_in MHA_TCP::Server::sock_addr [private]
```

5.153.3.2 SOCKET MHA_TCP::Server::serversocket [private]

5.153.3.3 std::string MHA_TCP::Server::iface [private]

5.153.3.4 unsigned short MHA_TCP::Server::port [private]

5.153.3.5 Sockaccept_Event* MHA_TCP::Server::accept_event [private]

The documentation for this class was generated from the following files:

- mha_tcp.hh
- mha_tcp.cpp

5.154 MHA_TCP::sock_init_t Class Reference

Public Member Functions

sock_init_t ()


5.154.1 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

mha_tcp.cpp

5.155 MHA_TCP::Sockaccept_Event Class Reference

Inheritance diagram for MHA_TCP::Sockaccept_Event:

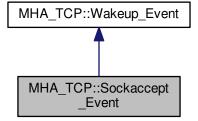

Public Member Functions

Sockaccept_Event (SOCKET)

Additional Inherited Members

5.155.1 Constructor & Destructor Documentation

5.155.1.1 MHA_TCP::Sockaccept_Event::Sockaccept_Event (SOCKET s)


The documentation for this class was generated from the following files:

- mha_tcp.hh
- mha_tcp.cpp

5.156 MHA_TCP::Sockread_Event Class Reference

Watch socket for incoming data.

Inheritance diagram for MHA_TCP::Sockread_Event:

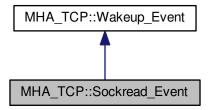

Public Member Functions

Sockread_Event (SOCKET s)

Set socket to watch for.

Additional Inherited Members

5.156.1 Detailed Description

Watch socket for incoming data.

5.156.2 Constructor & Destructor Documentation

5.156.2.1 MHA_TCP::Sockread_Event::Sockread_Event (SOCKET s)

Set socket to watch for.

Parameters


s The socket to observe incoming data on.

The documentation for this class was generated from the following files:

- · mha_tcp.hh
- · mha_tcp.cpp

5.157 MHA_TCP::Sockwrite_Event Class Reference

Inheritance diagram for MHA_TCP::Sockwrite_Event:

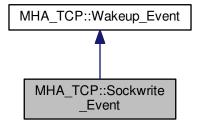

Public Member Functions

Sockwrite_Event (SOCKET s)

Additional Inherited Members

5.157.1 Constructor & Destructor Documentation

The documentation for this class was generated from the following files:

- mha_tcp.hh
- mha_tcp.cpp

5.158 MHA_TCP::Thread Class Reference

A very simple class for portable threads.

Public Types

typedef void *(* thr_f) (void *)

The thread function signature to use with this class.

Public Member Functions

Thread (thr_f func, void *arg=0)

Constructor starts a new thread.

virtual ∼Thread ()

The destructor should only be called when the Thread (p. 452) is finished.

virtual void run ()

The internal method that delegated the new thread to the registered **Thread** (p. 452) function.

Public Attributes

Async_Notify thread_finish_event

Event will be triggered when the thread exits.

enum MHA_TCP::Thread:: { ... } state

The current state of the thread.

thr_f thread_func

The thread function that the client has registered.

void * thread_arg

The argument that the client wants to be handed through to the thread function.

MHA_Error * error

The **MHA_Error** (p. 413) that caused the thread to abort, if any.

Protected Member Functions

Thread ()

Default constructor may only be used by derived classes that want to start the thread themselves.

Protected Attributes

void * arg

The argument for the client's thread function.

void * return value

The return value from the client's thread function is stored here When that function returns.

Private Attributes

pthread_t thread_handle

The posix thread handle.

pthread_attr_t thread_attr

The posix thread attribute structure.

5.158.1 Detailed Description

A very simple class for portable threads.

5.158.2 Member Typedef Documentation

```
5.158.2.1 typedef void*(* MHA_TCP::Thread::thr_f) (void *)
```

The thread function signature to use with this class.

Derive from this class and call protected standard constructor to start threads differently.

5.158.3 Member Enumeration Documentation

5.158.3.1 anonymous enum

The current state of the thread.

Enumerator

PREPARED RUNNING FINISHED

5.158.4 Constructor & Destructor Documentation

```
5.158.4.1 MHA_TCP::Thread::Thread( ) [protected]
```

Default constructor may only be used by derived classes that want to start the thread themselves.

Constructor starts a new thread.

Parameters

func	The function to be executed by the thread.
arg	The argument given to pass to the thread function.

```
5.158.4.3 Thread::~Thread() [virtual]
```

The destructor should only be called when the **Thread** (p. 452) is finished.

There is preliminary support for forceful thread cancellation in the destructor, but probably not very robust or portable..

5.158.5 Member Function Documentation

```
5.158.5.1 void Thread::run ( ) [virtual]
```

The internal method that delegated the new thread to the registered **Thread** (p. 452) function.

5.158.6 Member Data Documentation

```
5.158.6.1 pthread_t MHA_TCP::Thread::thread_handle [private]
```

The posix thread handle.

```
5.158.6.2 pthread_attr_t MHA_TCP::Thread::thread_attr [private]
```

The posix thread attribute structure.

Required for starting a thread in detached state. Detachment is required to eliminate the need for joining this thread.

```
5.158.6.3 void* MHA_TCP::Thread::arg [protected]
```

The argument for the client's thread function.

```
5.158.6.4 void* MHA_TCP::Thread::return_value [protected]
```

The return value from the client's thread function is stored here When that function returns.

5.158.6.5 Async_Notify MHA_TCP::Thread::thread_finish_event

Event will be triggered when the thread exits.

5.158.6.6 enum { ... } MHA_TCP::Thread::state

The current state of the thread.

5.158.6.7 thr_f MHA_TCP::Thread::thread_func

The thread function that the client has registered.

5.158.6.8 void* MHA_TCP::Thread::thread_arg

The argument that the client wants to be handed through to the thread function.

5.158.6.9 MHA_Error* MHA_TCP::Thread::error


The MHA_Error (p. 413) that caused the thread to abort, if any.

The documentation for this class was generated from the following files:

- mha_tcp.hh
- · mha_tcp.cpp

5.159 MHA_TCP::Timeout_Event Class Reference

Inheritance diagram for MHA_TCP::Timeout_Event:

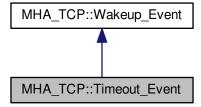

Public Member Functions

- Timeout_Event (double interval)
- virtual OS_EVENT_TYPE get_os_event ()

Private Attributes

double end_time

Additional Inherited Members

- 5.159.1 Constructor & Destructor Documentation
- 5.159.1.1 Timeout_Event::Timeout_Event (double *interval*)
- 5.159.2 Member Function Documentation
- 5.159.2.1 OS_EVENT_TYPE Timeout_Event::get_os_event() [virtual]

Reimplemented from MHA_TCP::Wakeup_Event (p. 460).


- 5.159.3 Member Data Documentation
- **5.159.3.1** double MHA_TCP::Timeout_Event::end_time [private]

The documentation for this class was generated from the following files:

- mha_tcp.hh
- mha_tcp.cpp
- 5.160 MHA_TCP::Timeout_Watcher Class Reference

OS-independent event watcher with internal fixed-end-time timeout.

Inheritance diagram for MHA TCP::Timeout Watcher:

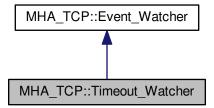

Public Member Functions

- Timeout_Watcher (double interval)
- virtual ~Timeout_Watcher ()

Private Attributes

Timeout Event timeout

Additional Inherited Members

5.160.1 Detailed Description

OS-independent event watcher with internal fixed-end-time timeout.

5.160.2 Constructor & Destructor Documentation

5.160.2.2 Timeout_Watcher::~Timeout_Watcher() [virtual]

5.160.3 Member Data Documentation

5.160.3.1 Timeout_Event MHA_TCP::Timeout_Watcher::timeout [private]


The documentation for this class was generated from the following files:

- · mha_tcp.hh
- mha_tcp.cpp

5.161 MHA_TCP::Wakeup_Event Class Reference

A base class for asynchronous wakeup events.

Inheritance diagram for MHA_TCP::Wakeup_Event:

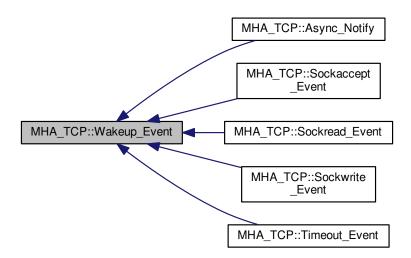

Public Member Functions

Wakeup_Event ()

Event Constructor.

virtual void observed_by (Event_Watcher *observer)

Called by the Event_Watcher (p. 444) when this event is added to its list of observed events.

virtual void ignored_by (Event_Watcher *observer)

Called by the **Event_Watcher** (p. 444) when this event is removed from its list of observed events.

virtual ~Wakeup Event ()

Destructor deregisters from observers.

virtual OS_EVENT_TYPE get_os_event ()

Get necessary information for the Event Watcher.

• virtual void reset ()

For pure notification events, reset the "signalled" status.

• virtual bool status ()

Query wether the event is in signalled state now.

Protected Attributes

- OS_EVENT_TYPE os_event
- bool os_event_valid

Private Attributes

```
    std::set< class Event Watcher * > observers
```

A list of all **Event_Watcher** (p. 444) instances that this **Wakeup_Event** (p. 459) is observed by (stored here for proper deregistering).

5.161.1 Detailed Description

A base class for asynchronous wakeup events.

```
5.161.2 Constructor & Destructor Documentation
```

```
5.161.2.1 Wakeup_Event::Wakeup_Event()
```

Event Constructor.

The new event has invalid state.

```
5.161.2.2 Wakeup_Event::~Wakeup_Event() [virtual]
```

Destructor deregisters from observers.

5.161.3 Member Function Documentation

Called by the **Event_Watcher** (p. 444) when this event is added to its list of observed events.

Called by the **Event_Watcher** (p. 444) when this event is removed from its list of observed events.

```
5.161.3.3 OS_EVENT_TYPE Wakeup_Event::get_os_event() [virtual]
```

Get necessary information for the Event Watcher.

Reimplemented in MHA_TCP::Timeout_Event (p. 457).

```
5.161.3.4 void Wakeup_Event::reset( ) [virtual]
```

For pure notification events, reset the "signalled" status.

Reimplemented in MHA_TCP::Async_Notify (p. 435).

```
5.161.3.5 bool Wakeup_Event::status() [virtual]
```

Query wether the event is in signalled state now.

5.161.4 Member Data Documentation

```
5.161.4.1 std::set<class Event_Watcher *> MHA_TCP::Wakeup_Event::observers [private]
```

A list of all **Event_Watcher** (p. 444) instances that this **Wakeup_Event** (p. 459) is observed by (stored here for proper deregistering).

```
5.161.4.2 OS_EVENT_TYPE MHA_TCP::Wakeup_Event::os_event [protected]
```

```
5.161.4.3 bool MHA_TCP::Wakeup_Event::os_event_valid [protected]
```

The documentation for this class was generated from the following files:

- mha_tcp.hh
- mha_tcp.cpp

5.162 mha_tictoc_t Struct Reference

Public Attributes

- struct timeval tv1
- struct timeval tv2
- struct timezone tz
- float t

5.162.1 Member Data Documentation

5.162.1.1 struct timeval mha_tictoc_t::tv1

5.162.1.2 struct timeval mha_tictoc_t::tv2

5.162.1.3 struct timezone mha tictoc t::tz

5.162.1.4 float mha_tictoc_t::t


The documentation for this struct was generated from the following file:

mha_profiling.h

5.163 mha_wave_t Struct Reference

Waveform signal structure.

Inheritance diagram for mha_wave_t:

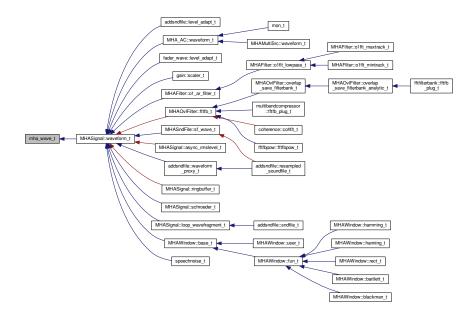

Public Attributes

mha_real_t * buf

signal buffer

unsigned int num_channels

number of channels

unsigned int num_frames

number of frames in each channel

mha_channel_info_t * channel_info

detailed channel description

5.163.1 Detailed Description

Waveform signal structure.

This structure contains one fragment of a waveform signal. The member num_frames describes the number of audio samples in each audio channel.

The field channel_info must be an array of num_channels entries or NULL.

5.163.2 Member Data Documentation

5.163.2.1 mha_real_t* mha_wave_t::buf

signal buffer

5.163.2.2 unsigned int mha_wave_t::num_channels

number of channels

5.163.2.3 unsigned int mha_wave_t::num_frames

number of frames in each channel

5.163.2.4 mha_channel_info_t* mha_wave_t::channel_info


detailed channel description

The documentation for this struct was generated from the following file:

mha.h

5.164 mhachain::chain_base_t Class Reference

Inheritance diagram for mhachain::chain_base_t:

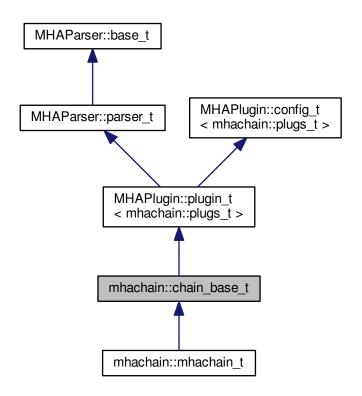

Public Member Functions

```
chain_base_t (algo_comm_t, const std::string &, const std::string &)
void process (mha_wave_t *, mha_wave_t **)
void process (mha_spec_t *, mha_wave_t **)
void process (mha_wave_t *, mha_spec_t **)
void process (mha_spec_t *, mha_spec_t **)
void prepare (mhaconfig_t &)
```

• void release ()

Protected Attributes

MHAParser::bool_t bprofilingMHAParser::vstring_t algos

Private Member Functions

• void update ()

Private Attributes

- std::vector< std::string > old_algos
- MHAEvents::patchbay t< mhachain::chain base t > patchbay
- · mhaconfig t cfin
- mhaconfig_t cfout
- bool b_prepared
- std::string chain

Additional Inherited Members

```
5.164.1 Constructor & Destructor Documentation
```

5.164.2 Member Function Documentation


```
5.164.2.2 void mhachain::chain_base_t::process (
                     mha_spec_t * sin,
                     mha wave t ** sout )
5.164.2.3 void mhachain::chain_base_t::process (
                     mha_wave_t * sin,
                     mha_spec_t ** sout )
5.164.2.4 void mhachain::chain base t::process (
                     mha spec t * sin,
                     mha_spec_t ** sout )
5.164.2.5 void mhachain::chain_base_t::prepare (
                     mhaconfig_t & cf ) [virtual]
Implements MHAPlugin::plugin_t< mhachain::plugs_t > (p. 696).
5.164.2.6 void mhachain::chain_base_t::release (
                     void ) [virtual]
Reimplemented from MHAPlugin::plugin t < mhachain::plugs t > (p. 697).
5.164.2.7 void mhachain::chain base t::update() [private]
5.164.3 Member Data Documentation
5.164.3.1 MHAParser::bool_t mhachain::chain_base_t::bprofiling [protected]
5.164.3.2 MHAParser::vstring t mhachain::chain_base_t::algos [protected]
5.164.3.3 std::vector<std::string> mhachain::chain_base_t::old_algos [private]
5.164.3.4 MHAEvents::patchbay t < mhachain::chain base t >
         mhachain::chain_base_t::patchbay [private]
5.164.3.5 mhaconfig t mhachain::chain_base_t::cfin [private]
5.164.3.6 mhaconfig t mhachain::chain base t::cfout [private]
5.164.3.7 bool mhachain::chain_base_t::b_prepared [private]
5.164.3.8 std::string mhachain::chain_base_t::chain [private]
```

The documentation for this class was generated from the following files:

- mha_generic_chain.h
- mha_generic_chain.cpp

5.165 mhachain::mhachain_t Class Reference

Inheritance diagram for mhachain::mhachain_t:

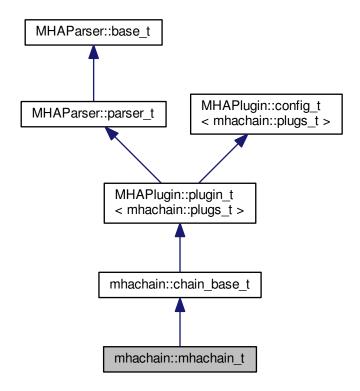

Public Member Functions

• mhachain t (algo comm t iac, const std::string &ichain, const std::string &ialgo)

Additional Inherited Members

5.165.1 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

· mhachain.cpp

5.166 mhachain::plugs_t Class Reference

Public Member Functions

- plugs_t (std::vector< std::string > algos, mhaconfig_t cfin, mhaconfig_t cfout, bool do_prepare, MHAParser::parser_t &p, algo_comm_t iac, std::string ichain, bool use_← profiling)
- ~plugs_t ()
- void prepare (mhaconfig t &)
- void release ()
- void process (mha_wave_t *, mha_spec_t *, mha_wave_t **, mha_spec_t **)
- bool **prepared** () const

Private Member Functions

- void alloc_plugs (std::vector< std::string > algos)
- void cleanup plugs ()
- void update_proc_load ()

Private Attributes

- bool b_prepared
- std::vector< PluginLoader::mhapluginloader_t * > algos
- MHAParser::parser_t & parser
- · algo comm tac
- std::string chain
- MHAParser::parser_t profiling
- MHAParser::vstring_mon_t prof_algos
- MHAParser::vfloat mon t prof init
- MHAParser::vfloat_mon_t prof_prepare
- MHAParser::vfloat_mon_t prof_release
- MHAParser::vfloat_mon_t prof_process
- MHAParser::float_mon_t prof_process_tt
- MHAParser::vfloat_mon_t prof_process_load
- unsigned int proc_cnt
- mhaconfig_t prof_cfg
- MHAEvents::connector t< mhachain::plugs t > prof load con
- MHAEvents::connector_t< mhachain::plugs_t > prof_tt_con
- bool b use profiling
- mha_platform_tictoc_t tictoc

```
5.166.1 Constructor & Destructor Documentation
5.166.1.1 mhachain::plugs_t::plugs_t (
                      std::vector < std::string > algos,
                      mhaconfig_t cfin,
                      mhaconfig t cfout,
                      bool do_prepare,
                      MHAParser::parser t & p,
                      algo_comm_t iac,
                      std::string ichain,
                      bool use_profiling )
5.166.1.2 mhachain::plugs_t::~plugs_t ( )
5.166.2 Member Function Documentation
5.166.2.1
         void mhachain::plugs_t::prepare (
                      mhaconfig t & tf)
5.166.2.2 void mhachain::plugs_t::release (
                      void )
5.166.2.3 void mhachain::plugs t::process (
                      mha_wave_t * win,
                      mha_spec_t * sin,
                      mha_wave_t ** wout,
                      mha spec t ** sout )
5.166.2.4 bool mhachain::plugs_t::prepared ( ) const [inline]
5.166.2.5 void mhachain::plugs_t::alloc_plugs (
                      std::vector < std::string > algos ) [private]
5.166.2.6
         void mhachain::plugs_t::cleanup_plugs( ) [private]
5.166.2.7 void mhachain::plugs_t::update_proc_load( ) [private]
5.166.3 Member Data Documentation
5.166.3.1 bool mhachain::plugs_t::b_prepared [private]
5.166.3.2 std::vector< PluginLoader::mhapluginloader_t* > mhachain::plugs_t::algos
          [private]
5.166.3.3 MHAParser::parser_t& mhachain::plugs_t::parser [private]
```

```
5.166.3.4 algo_comm_t mhachain::plugs_t::ac [private]
5.166.3.5 std::string mhachain::plugs_t::chain [private]
5.166.3.6 MHAParser::parser_t mhachain::plugs_t::profiling [private]
5.166.3.7 MHAParser::vstring_mon_t mhachain::plugs_t::prof_algos [private]
5.166.3.8 MHAParser::vfloat mon t mhachain::plugs_t::prof_init [private]
5.166.3.9 MHAParser::vfloat_mon_t mhachain::plugs_t::prof_prepare [private]
5.166.3.10 MHAParser::vfloat_mon_t mhachain::plugs_t::prof_release [private]
5.166.3.11 MHAParser::vfloat_mon_t mhachain::plugs_t::prof_process [private]
5.166.3.12 MHAParser::float_mon_t mhachain::plugs_t::prof_process_tt [private]
5.166.3.13 MHAParser::vfloat_mon_t mhachain::plugs_t::prof_process_load [private]
5.166.3.14 unsigned int mhachain::plugs_t::proc_cnt [private]
5.166.3.15 mhaconfig_t mhachain::plugs_t::prof_cfg [private]
5.166.3.16 MHAEvents::connector t<mhachain::plugs t> mhachain::plugs t::prof load con
          [private]
5.166.3.17 MHAEvents::connector_t<mhachain::plugs_t> mhachain::plugs_t::prof_tt_con
          [private]
5.166.3.18 bool mhachain::plugs_t::b_use_profiling [private]
5.166.3.19 mha_platform_tictoc_t mhachain::plugs_t::tictoc [private]
```


The documentation for this class was generated from the following files:

- mha_generic_chain.h
- mha_generic_chain.cpp

5.167 mhaconfig_t Struct Reference

MHA prepare configuration structure.

Inheritance diagram for mhaconfig_t:

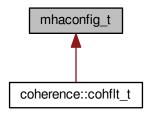

Public Attributes

· unsigned int channels

Number of audio channels.

unsigned int domain

Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)

· unsigned int fragsize

Fragment size of waveform data.

• unsigned int wndlen

Window length of spectral data.

· unsigned int fftlen

FFT length of spectral data.

mha_real_t srate

Sampling rate in Hz.

5.167.1 Detailed Description

MHA prepare configuration structure.

This structure contains information about channel number and domain for input and output signals of a openMHA Plugin. Each plugin can change any of these parameters, e.g. by resampling of the signal. The only limitation is that the callback frequency is fixed (except for the plugins db and dbasync).

Todo Add information on number of bands and on center frequencies, or replace by **mha**_← **audio_descriptor_t** (p. 396).


5.167.2 Member Data Documentation 5.167.2.1 unsigned int mhaconfig_t::channels Number of audio channels. 5.167.2.2 unsigned int mhaconfig_t::domain Signal domain (MHA_WAVEFORM or MHA_SPECTRUM) 5.167.2.3 unsigned int mhaconfig_t::fragsize Fragment size of waveform data. 5.167.2.4 unsigned int mhaconfig_t::wndlen Window length of spectral data. 5.167.2.5 unsigned int mhaconfig_t::fftlen FFT length of spectral data. 5.167.2.6 mha_real_t mhaconfig_t::srate Sampling rate in Hz.

The documentation for this struct was generated from the following file:

· mha.h

5.168 MHAEvents::connector_base_t Class Reference

Inheritance diagram for MHAEvents::connector_base_t:

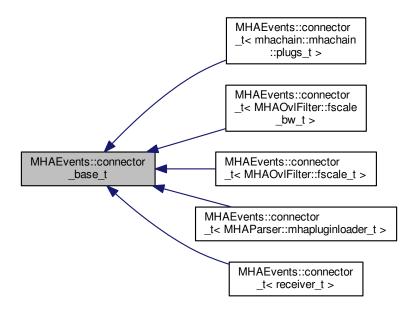

Public Member Functions

- connector_base_t ()
- virtual ~connector_base_t ()
- virtual void emit_event ()
- virtual void emit_event (const std::string &)
- virtual void emit_event (const std::string &, unsigned int, unsigned int)
- void emitter_die ()

Protected Attributes

• bool emitter_is_alive

5.168.1 Constructor & Destructor Documentation

- 5.168.1.1 MHAEvents::connector_base_t::connector_base_t ()
- 5.168.1.2 MHAEvents::connector_base_t::~connector_base_t() [virtual]

```
5.168.2 Member Function Documentation
5.168.2.1 void MHAEvents::connector_base_t::emit_event() [virtual]
Reimplemented in MHAEvents::connector_t< receiver_t >
                                                             (p. 475), MHAEvents ←
::connector_t< MHAOvIFilter::fscale_bw_t > (p. 475), MHAEvents::connector_t<
MHAParser::mhapluginloader_t > (p. 475), MHAEvents::connector_t < mhachain <--
::mhachain::plugs t > (p. 475), and MHAEvents::connector t < MHAOvIFilter::fscale <math>t >
(p. 475).
5.168.2.2 void MHAEvents::connector_base_t::emit_event (
                   const std::string & ) [virtual]
Reimplemented in MHAEvents::connector_t< receiver_t >
                                                             (p. 475), MHAEvents ←
::connector t < MHAOvIFilter::fscale bw t > (p. 475), MHAEvents::connector t <
MHAParser::mhapluginloader_t > (p. 475), MHAEvents::connector_t < mhachain ~
::mhachain::plugs_t > (p. 475), and MHAEvents::connector_t < MHAOvlFilter::fscale_t >
(p. 475).
5.168.2.3 void MHAEvents::connector_base_t::emit_event (
                   const std::string & ,
                    unsigned int,
                    unsigned int ) [virtual]
Reimplemented in MHAEvents::connector_t< receiver_t > (p. 475), MHAEvents
::connector_t< MHAOvlFilter::fscale_bw_t > (p. 475), MHAEvents::connector_t<
MHAParser::mhapluginloader_t > (p. 475), MHAEvents::connector_t< mhachain←
::mhachain::plugs_t > (p. 475), and MHAEvents::connector_t < MHAOvIFilter::fscale_t >
(p. 475).
5.168.2.4 void MHAEvents::connector_base_t::emitter_die ( )
5.168.3 Member Data Documentation
5.168.3.1 bool MHAEvents::connector_base_t::emitter_is_alive [protected]
```


· mha event emitter.h

The documentation for this class was generated from the following files:

mha_events.cpp

5.169 MHAEvents::connector_t< receiver_t > Class Template Reference

Inheritance diagram for MHAEvents::connector_t< receiver_t >:

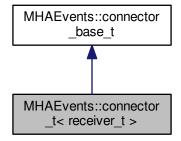

Public Member Functions

- connector_t (emitter_t *, receiver_t *, void(receiver_t::*)())
- connector_t (emitter_t *, receiver_t *, void(receiver_t::*)(const std::string &))
- connector_t (emitter_t *, receiver_t *, void(receiver_t::*)(const std::string &, unsigned int, unsigned int))
- ~connector_t ()

Private Member Functions

- void emit_event ()
- void emit_event (const std::string &)
- void emit_event (const std::string &, unsigned int, unsigned int)

Private Attributes

- emitter_t * emitter
- receiver t * receiver
- void(receiver_t::* eventhandler)()
- void(receiver t::* eventhandler s)(const std::string &)
- void(receiver_t::* eventhandler_suu)(const std::string &, unsigned int, unsigned int)

Additional Inherited Members

```
5.169.1 Constructor & Destructor Documentation
5.169.1.1 template < class receiver_t > MHAEvents::connector t < receiver_t >::connector t (
                       emitter t * e,
                       receiver_t * r,
                       void(receiver_t::*)() rfun )
5.169.1.2 template < class receiver_t > MHAEvents::connector_t < receiver_t >::connector_t (
                      emitter t * e.
                       receiver t * r.
                       void(receiver_t::*)(const std::string &) rfun )
5.169.1.3 template < class receiver_t > MHAEvents::connector t < receiver_t >::connector t (
                      emitter t * e,
                      receiver_t * r,
                       void(receiver_t::*)(const std::string &, unsigned int, unsigned int) rfun )
5.169.1.4 template < class receiver_t > MHAEvents::connector t < receiver_t >::~connector t (
          )
5.169.2 Member Function Documentation
5.169.2.1 template < class receiver_t > void MHAEvents::connector_t < receiver_t > ::emit_event (
          ) [private], [virtual]
Reimplemented from MHAEvents::connector base t (p. 473).
5.169.2.2 template < class receiver_t > void MHAEvents::connector t < receiver_t > ::emit_event (
                       const std::string & arg ) [private], [virtual]
Reimplemented from MHAEvents::connector_base_t (p. 473).
5.169.2.3 template < class receiver_t > void MHAEvents::connector t < receiver_t > ::emit_event (
                       const std::string & arg,
                       unsigned int arg2,
                       unsigned int arg3 ) [private], [virtual]
```

Reimplemented from **MHAEvents::connector_base_t** (p. 473).

5.169.3 Member Data Documentation

```
5.169.3.1 template < class receiver_t > emitter_t * MHAEvents::connector_t < receiver_t >::emitter [private]
```

```
5.169.3.2 template < class receiver_t > receiver_t * MHAEvents::connector_t < receiver_t >::receiver [private]
```

```
5.169.3.3 template < class receiver_t > void(receiver_t::* MHAEvents::connector_t < receiver_t >::eventhandler) () [private]
```

```
5.169.3.4 template < class receiver_t > void(receiver_t::* MHAEvents::connector_t < receiver_t >::eventhandler_s) (const std::string &) [private]
```

5.169.3.5 template < class receiver_t > void(receiver_t::* MHAEvents::connector_t < receiver_t >::eventhandler_suu) (const std::string &, unsigned int, unsigned int) [private]

The documentation for this class was generated from the following file:

· mha_events.h

5.170 MHAEvents::emitter t Class Reference

Class for emitting openMHA events.

Public Member Functions

- ~emitter_t ()
- void operator() ()

Emit an event without parameter.

• void **operator()** (const std::string &)

Emit an event with string parameter.

• void operator() (const std::string &, unsigned int, unsigned int)

Emit an event with string parameter and two unsigned int parameters.

- void connect (connector_base_t *)
- void disconnect (connector_base_t *)

Private Attributes

std::list< connector_base_t * > connections

```
5.170.1 Detailed Description
```

Class for emitting openMHA events.

Use the template class **MHAEvents::patchbay_t** (p. 478) for connecting to an emitter.

```
5.170.2 Constructor & Destructor Documentation
```

```
5.170.2.1 MHAEvents::emitter_t::~emitter_t ( )
```

5.170.3 Member Function Documentation

```
5.170.3.1 void MHAEvents::emitter_t::operator() ( )
```

Emit an event without parameter.

```
5.170.3.2 void MHAEvents::emitter_t::operator() ( const std::string & arg )
```

Emit an event with string parameter.

Emit an event with string parameter and two unsigned int parameters.

```
5.170.3.4 void MHAEvents::emitter_t::connect ( connector\_base\_t*c )
```

```
5.170.3.5 void MHAEvents::emitter_t::disconnect ( connector\_base\_t*c )
```

5.170.4 Member Data Documentation

```
5.170.4.1 std::list<connector_base_t*> MHAEvents::emitter_t::connections [private]
```

The documentation for this class was generated from the following files:

- mha_event_emitter.h
- mha_events.cpp

5.171 MHAEvents::patchbay_t < receiver_t > Class Template Reference

Patchbay which connects any event emitter with any member function of the parameter class.

Public Member Functions

- ~patchbay t ()
- void connect (emitter_t *, receiver_t *, void(receiver_t::*)())

Connect a receiver member function void (receiver_t::*)() with an event emitter.

- void connect (emitter_t *, receiver_t *, void(receiver_t::*)(const std::string &))
 Connect a receiver member function void (receiver_t::*)(const std::string&) with an event emitter
- void connect (emitter_t *, receiver_t *, void(receiver_t::*)(const std::string &, unsigned int, unsigned int))

Private Attributes

std::list< connector t< receiver t > * > cons

5.171.1 Detailed Description

```
template < class receiver_t > class MHAEvents::patchbay_t < receiver_t >
```

Patchbay which connects any event emitter with any member function of the parameter class.

The connections created by the **connect()** (p. 478) function are hold until the destructor is called. To avoid access to invalid function pointers, it is required to destruct the patchbay before the receiver, usually by declaring the patchbay as a member of the receiver.

The receiver can be any claas or structure; the event callback can be either a member function without arguments or with const std::string& argument.

```
5.171.2 Constructor & Destructor Documentation
```

```
5.171.2.1 template < class receiver_t > MHAEvents::patchbay_t < receiver_t >::\sim patchbay_t ( )
```

5.171.3 Member Function Documentation

Connect a receiver member function void (receiver_t::*)() with an event emitter.

Create a connection.

The connection is removed when the patchbay is destructed.

Parameters

е	Pointer to an event emitter
r	Pointer to the receiver
rfun	Pointer to a member function of the receiver class

Connect a receiver member function void (receiver_t::*)(const std::string&) with an event emitter.

Create a connection.

The connection is removed when the patchbay is destructed.

Parameters

e	Pointer to an event emitter
r	Pointer to the receiver
rfun	Pointer to a member function of the receiver class

5.171.4 Member Data Documentation

```
5.171.4.1 template < class receiver_t > std::list < connector_t < receiver_t > *> MHAEvents::patchbay_t < receiver_t > ::cons [private]
```

The documentation for this class was generated from the following file:

· mha_events.h

5.172 MHAFilter::adapt_filter_param_t Class Reference

Public Member Functions

adapt_filter_param_t (mha_real_t imu, bool ierr_in)

Public Attributes

- mha_real_t mu
- bool err_in
- 5.172.1 Constructor & Destructor Documentation

- 5.172.2 Member Data Documentation
- 5.172.2.1 mha_real_t MHAFilter::adapt_filter_param_t::mu
- 5.172.2.2 bool MHAFilter::adapt_filter_param_t::err_in

The documentation for this class was generated from the following files:

- mha_filter.hh
- mha_filter.cpp
- 5.173 MHAFilter::adapt_filter_state_t Class Reference

Public Member Functions

- adapt_filter_state_t (int ntaps, int nchannels)
- void filter (mha_wave_t y, mha_wave_t e, mha_wave_t x, mha_wave_t d, mha_real
 _t mu, bool err_in)

Private Attributes

- int ntaps
- int nchannels
- MHASignal::waveform t W
- MHASignal::waveform_t X
- · MHASignal::waveform t od
- MHASignal::waveform_t oy

```
5.173.1 Constructor & Destructor Documentation
```

5.173.2 Member Function Documentation

5.173.3 Member Data Documentation

```
5.173.3.1 int MHAFilter::adapt_filter_state_t::ntaps [private]
```

5.173.3.2 int MHAFilter::adapt_filter_state_t::nchannels [private]

5.173.3.3 MHASignal::waveform_t MHAFilter::adapt_filter_state_t::W [private]

5.173.3.4 MHASignal::waveform_t MHAFilter::adapt_filter_state_t::X [private]

5.173.3.5 MHASignal::waveform_t MHAFilter::adapt_filter_state_t::od [private]

5.173.3.6 MHASignal::waveform_t MHAFilter::adapt_filter_state_t::oy [private]


The documentation for this class was generated from the following files:

- mha_filter.hh
- mha_filter.cpp

5.174 MHAFilter::adapt_filter_t Class Reference

Adaptive filter.

Inheritance diagram for MHAFilter::adapt_filter_t:

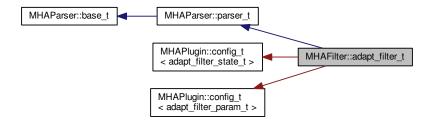

Public Member Functions

```
adapt_filter_t (std::string)
```

- void filter (mha_wave_t y, mha_wave_t e, mha_wave_t x, mha_wave_t d)
- void set_channelcnt (unsigned int)

Private Member Functions

- void update mu ()
- void update_ntaps ()

Private Attributes

```
    MHAParser::float_t mu
```

- MHAParser::int t ntaps
- MHAParser::bool_t err_in
- MHAEvents::patchbay_t< adapt_filter_t > connector
- unsigned int nchannels

Additional Inherited Members

5.174.1 Detailed Description

Adaptive filter.

```
5.174.2 Constructor & Destructor Documentation
```

```
5.174.2.1 MHAFilter::adapt_filter_t (
std::string help )
```

5.174.3 Member Function Documentation

```
5.174.3.1 void MHAFilter::adapt_filter_t::filter (

mha_wave_t y,

mha_wave_t e,

mha_wave_t x,

mha_wave_t d)
```

```
5.174.3.2 void MHAFilter::adapt_filter_t::set_channelcnt ( unsigned int nch )
```

5.174.3.3 void MHAFilter::adapt_filter_t::update_mu() [private]

5.175 MHAFilter::blockprocessing_polyphase_resampling_t Class Reference 483

```
5.174.3.4 void MHAFilter::adapt_filter_t::update_ntaps( ) [private]
5.174.4 Member Data Documentation
5.174.4.1 MHAParser::float_t MHAFilter::adapt_filter_t::mu [private]
5.174.4.2 MHAParser::int_t MHAFilter::adapt_filter_t::ntaps [private]
5.174.4.3 MHAParser::bool_t MHAFilter::adapt_filter_t::err_in [private]
5.174.4.4 MHAEvents::patchbay_t<adapt_filter_t> MHAFilter::adapt_filter_t::connector [private]
```

5.174.4.5 unsigned int MHAFilter::adapt_filter_t::nchannels [private]

The documentation for this class was generated from the following files:

- · mha filter.hh
- mha_filter.cpp
- 5.175 MHAFilter::blockprocessing_polyphase_resampling_t Class Reference

A class that does polyphase resampling and takes into account block processing.

Public Member Functions

 blockprocessing_polyphase_resampling_t (float source_srate, unsigned source_← fragsize, float target_srate, unsigned target_fragsize, float nyquist_ratio, float irslen, unsigned nchannels, bool add delay)

Contructs a polyphase resampling filter that can be used for blockprocessing with the given parameters.

- virtual ~blockprocessing polyphase resampling t ()
- void write (mha_wave_t &signal)

Write signal to the ringbuffer.

void read (mha_wave_t &signal)

Read resampled signal.

• bool can read () const

Checks if the resampling ring buffer can produce another output signal block.

Private Attributes

- polyphase_resampling_t * resampling
- · unsigned fragsize in
- unsigned fragsize_out
- unsigned num_channels

5.175.1 Detailed Description

A class that does polyphase resampling and takes into account block processing.

5.175.2 Constructor & Destructor Documentation

 $\textbf{5.175.2.1} \quad \textbf{MHAFilter::blockprocessing_polyphase_resampling_t::blockprocessing_polyphase_} \\ \leftarrow \\ \text{resampling_t} \ ($

float source_srate, unsigned source_fragsize, float target_srate, unsigned target_fragsize, float nyquist_ratio, float irslen, unsigned nchannels, bool add_delay)

Contructs a polyphase resampling filter that can be used for blockprocessing with the given parameters.

Parameters

source_srate	Source sampling rate / Hz
source_fragsize	Fragment size of incoming audio blocks / frames at source_srate
target_srate	Target sampling rate / Hz
target_fragsize	Fragment size of produced audio blocks / frames at target_srate
nyquist_ratio	Low pass filter cutoff frequency relative to the nyquist frequency of the smaller of the two sampling rates. Example values: 0.8, 0.9
irslen	Impulse response length used for low pass filtering / s
nchannels	Number of audio channels
add_delay	To avoid underruns, a delay is generally necessary for round trip block size adaptations. It is only necessary to add this delay to one of the two resampling chains. Set this parameter to true for the first resampling object of a round trip pair. It will add the necessary delay, and calculate the size of the ring buffer appropriately, When set to false, only the ringbuffer size will be set sufficiently.

```
5.175.2.2 virtual MHAFilter::blockprocessing_polyphase_resampling_t::~blockprocessing_polyphase ← _ resampling_t( ) [inline], [virtual]
```

5.175.3 Member Function Documentation

5.175.3.1 void MHAFilter::blockprocessing_polyphase_resampling_t::write (mha_wave_t & signal)

Write signal to the ringbuffer.

5.175 MHAFilter::blockprocessing_polyphase_resampling_t Class Reference 485

Parameters

signal	input signal in original sampling rate
9.151.	

Exceptions

MHA_Error (p. 413)	Raises exception if there is not enough room, if the number of
	channels does not match, or if the number of frames is not equal to
	the number specified in the constructor

5.175.3.2 void MHAFilter::blockprocessing_polyphase_resampling_t::read (mha_wave_t & signal)

Read resampled signal.

Will perform the resampling and remove no longer needed samples from the input buffer.

Parameters

signal	buffer to write the resampled signal to.
--------	--

Exceptions

MHA_Error (p. 413)	Raises exception if there is not enough input signal, if the number of
	channels of frames does not match.

5.175.3.3 bool MHAFilter::blockprocessing_polyphase_resampling_t::can_read() const [inline]

Checks if the resampling ring buffer can produce another output signal block.

- 5.175.4 Member Data Documentation
- 5.175.4.1 polyphase_resampling_t∗ MHAFilter::blockprocessing_polyphase_resampling_t
 ::resampling [private]
- **5.175.4.2** unsigned MHAFilter::blockprocessing_polyphase_resampling_t::fragsize_in [private]
- **5.175.4.3 unsigned MHAFilter::blockprocessing_polyphase_resampling_t::fragsize_out** [private]
- **5.175.4.4** unsigned MHAFilter::blockprocessing_polyphase_resampling_t::num_channels [private]

The documentation for this class was generated from the following files:

- mha filter.hh
- mha_filter.cpp

5.176 MHAFilter::complex_bandpass_t Class Reference

Complex bandpass filter.

Public Member Functions

complex_bandpass_t (std::vector< mha_complex_t > A, std::vector< mha_←
 complex_t > B)

Constructor with filter coefficients (one per channel)

- void set_state (mha_real_t val)
- void set state (std::vector< mha real t > val)
- void set_state (mha_complex_t val)
- void set_weights (std::vector< mha_complex_t > new_B)

Allow to modify the input weights at a later stage.

- std::vector< mha_complex_t > get_weights () const
- void filter (const mha_wave_t &X, mha_spec_t &Y)

Filter method for real value input.

void filter (const mha_wave_t &X, mha_wave_t &Yre, mha_wave_t &Yim)

Filter method for real value input.

void filter (const mha_spec_t &X, mha_spec_t &Y)

Filter method for complex value input.

 void filter (const mha_wave_t &Xre, const mha_wave_t &Xim, mha_wave_t &Yre, mha_wave_t &Yim)

Filter method for complex value input.

• std::string inspect () const

Static Public Member Functions

- static std::vector< mha_complex_t > creator_A (std::vector< mha_real_t > cf, std←
 ::vector< mha_real_t > bw, mha_real_t srate, unsigned int order)
- static std::vector< mha_complex_t > creator_B (std::vector< mha_complex_t > A, unsigned int order)

Private Attributes

- std::vector< mha_complex_t > A_
- std::vector< mha_complex_t > B_
- std::vector< mha complex t > Yn

5.176.1 Detailed Description

Complex bandpass filter.

```
5.176.2 Constructor & Destructor Documentation
```

Constructor with filter coefficients (one per channel)

Parameters

```
A complex filter coefficients, one per bandB complex weights
```

```
5.176.3 Member Function Documentation
```

```
5.176.3.3 void MHAFilter::complex_bandpass_t::set_state ( mha_real_t val )
```

```
5.176.3.4 void MHAFilter::complex_bandpass_t::set_state ( std::vector< mha_real_t > val )
```

```
5.176.3.5 void MHAFilter::complex_bandpass_t::set_state ( mha_complex_t val )
```

Allow to modify the input weights at a later stage.

```
5.176.3.7 std::vector<mha_complex_t> MHAFilter::complex_bandpass_t::get_weights ( ) const [inline]
```

Filter method for real value input.

Filter method for real value input.

Filter method for complex value input.

Filter method for complex value input.

```
5.176.3.12 std::string MHAFilter::complex_bandpass_t::inspect( ) const [inline]
```

5.176.4 Member Data Documentation

```
5.176.4.1 std::vector<mha_complex_t> MHAFilter::complex_bandpass_t::A_ [private]
```

5.176.4.2 std::vector<mha_complex_t> MHAFilter::complex_bandpass_t::B_ [private]

5.176.4.3 std::vector<mha complex t> MHAFilter::complex_bandpass_t::Yn [private]


The documentation for this class was generated from the following files:

- complex_filter.h
- complex_filter.cpp

5.177 MHAFilter::diff_t Class Reference

Differentiator class (non-normalized)

Inheritance diagram for MHAFilter::diff_t:

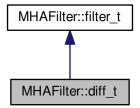

Public Member Functions

diff_t (unsigned int ch)

Additional Inherited Members

5.177.1 Detailed Description

Differentiator class (non-normalized)

5.177.2 Constructor & Destructor Documentation


The documentation for this class was generated from the following files:

- mha_filter.hh
- mha_filter.cpp

5.178 MHAFilter::fftfilter_t Class Reference

FFT based FIR filter implementation.

Inheritance diagram for MHAFilter::fftfilter_t:

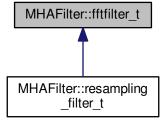

Public Member Functions

- fftfilter_t (unsigned int fragsize, unsigned int channels, unsigned int fftlen)
 Constructor.
- ∼fftfilter t ()
- void update_coeffs (const mha_wave_t *pwIRS)

Update the set of coefficients.

void filter (const mha_wave_t *pwln, mha_wave_t **ppwOut, const mha_wave_t *pw← IRS)

Apply filter with changing coefficients to a waveform fragment.

void filter (const mha_wave_t *pwln, mha_wave_t **ppwOut)

Apply filter to waveform fragment, without changing the coefficients.

void filter (const mha_wave_t *pwln, mha_wave_t **ppwOut, const mha_spec_t *ps
 Weights)

Apply filter with changing coefficients to a waveform fragment.

Private Attributes

- unsigned int fragsize
- unsigned int channels
- unsigned int fftlen
- MHASignal::waveform_t wInput_fft
- mha_wave_t wInput
- MHASignal::waveform t wOutput fft
- · mha wave twOutput
- MHASignal::spectrum_t sInput
- MHASignal::spectrum t sWeights
- MHASignal::waveform_t wIRS_fft
- mha_fft_t fft

5.178.1 Detailed Description

FFT based FIR filter implementation.

The maximal number of coefficients can be FFT length - fragsize + 1.

5.178.2 Constructor & Destructor Documentation

Constructor.

Parameters

fragsize	Number of frames expected in input signal (each cycle).
channels	Number of channels expected in input signal.
fftlen	FFT length of filter.

```
5.178.2.2 MHAFilter::fftfilter_t::~fftfilter_t ( )
```

5.178.3 Member Function Documentation

Update the set of coefficients.

Parameters

Note

The number of channels in h must match the number of channels given in the constructor. The filter length is limited to fftlen-fragsize+1 (longer IRS will be shortened).

Apply filter with changing coefficients to a waveform fragment.

Parameters

pw⊷	Input signal pointer.
In	

Return values

ſ	ppwQut	Pointer to output signal pointer, will be set to a valid signal.
- 1	P	i contente de compart organar por tron, tron de contre a tamb organar

Parameters

pwIRS	Pointer to FIR coefficients structure.
-------	--

Apply filter to waveform fragment, without changing the coefficients.

Parameters

```
pw lnput signal pointer.

In
```

Return values

```
ppwOut Pointer to output signal pointer, will be set to a valid signal
```

Apply filter with changing coefficients to a waveform fragment.

Parameters

ри⊷	Input signal pointer.
In	

Return values

-
Pointer to output signal pointer, will be set to a valid signal.
Folhier to outout Signal Dointer, will be set to a valid Signal.
. on to to output digital pointer, this be cot to a raine digital

Parameters

```
psWeights Pointer to filter weights structure.
```

5.178.4 Member Data Documentation

```
5.178.4.1 unsigned int MHAFilter::fftfilter_t::fragsize [private]
```

5.178.4.2 unsigned int MHAFilter::fftfilter_t::channels [private]

5.178.4.3 unsigned int MHAFilter::fftfilter_t::fftlen [private]

```
5.178.4.4 MHASignal::waveform_t MHAFilter::fftfilter_t::wlnput_fft [private]
5.178.4.5 mha_wave_t MHAFilter::fftfilter_t::wlnput [private]
5.178.4.6 MHASignal::waveform_t MHAFilter::fftfilter_t::wOutput_fft [private]
5.178.4.7 mha_wave_t MHAFilter::fftfilter_t::wOutput [private]
5.178.4.8 MHASignal::spectrum_t MHAFilter::fftfilter_t::slnput [private]
5.178.4.9 MHASignal::spectrum_t MHAFilter::fftfilter_t::sWeights [private]
5.178.4.10 MHASignal::waveform_t MHAFilter::fftfilter_t::wIRS_fft [private]
5.178.4.11 mha_fft_t MHAFilter::fftfilter_t::fft [private]
```


The documentation for this class was generated from the following files:

- mha_filter.hh
- mha_filter.cpp

5.179 MHAFilter::fftfilterbank_t Class Reference

FFT based FIR filterbank implementation.

Inheritance diagram for MHAFilter::fftfilterbank_t:

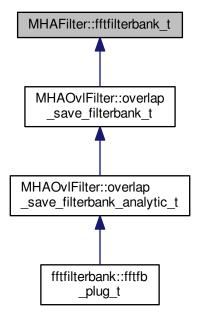

Public Member Functions

• fftfilterbank_t (unsigned int fragsize, unsigned int inputchannels, unsigned int firchannels, unsigned int fftlen)

Constructor.

- ∼fftfilterbank_t ()
- void update_coeffs (const mha_wave_t *h)

Update the set of coefficients.

void filter (const mha_wave_t *s_in, mha_wave_t **s_out, const mha_wave_t *h)
 Apply filter with changing coefficients to a waveform fragment.

void filter (const mha wave t *s in, mha wave t *s out)

Apply filter to waveform fragment, without changing the coefficients.

const mha_wave_t * get_irs () const

Return the current IRS.

Private Attributes

- · unsigned int fragsize
- unsigned int inputchannels
- · unsigned int firchannels
- unsigned int outputchannels
- · unsigned int fftlen
- MHASignal::waveform_t hw
- MHASignal::spectrum t Hs
- MHASignal::waveform_t xw
- MHASignal::spectrum_t Xs
- MHASignal::waveform_t yw
- MHASignal::spectrum t Ys
- MHASignal::waveform t yw temp
- MHASignal::waveform t tail
- · mha fft t fft

5.179.1 Detailed Description

FFT based FIR filterbank implementation.

This class convolves n input channels with m filter coefficient sets and returns n*m output channels.

The maximal number of coefficients can be FFT length - fragsize + 1.

5.179.2 Constructor & Destructor Documentation

Constructor.

Parameters

fragsize	Number of frames expected in input signal (each cycle).
inputchannels	Number of channels expected in input signal.
firchannels	Number of channels expected in FIR filter coefficients (= number of bands).
fftlen	FFT length of filter.

The number of output channels is inputchannels*firchannels.

```
5.179.2.2 MHAFilter::fftfilterbank_t::~fftfilterbank_t()
```

5.179.3 Member Function Documentation

Update the set of coefficients.

Parameters

h Coefficients structure

Note

The number of channels in h must match the number of channels given in the constructor, and the number of frames can not be more than fftlen-fragsize+1.

Apply filter with changing coefficients to a waveform fragment.

Parameters

<i>S</i> ⊷	Input signal pointer.
in	

Return values

pinter to output signal pointer, will be set to a valid signal
--

Parameters

```
h FIR coefficients
```

```
5.179.3.3 void MHAFilter::fftfilterbank_t::filter (

const mha_wave_t * s_in,

mha wave t ** s out )
```

Apply filter to waveform fragment, without changing the coefficients.

Parameters

<i>S</i> ⊷	Input signal pointer.
_in	

Return values

s_out	Pointer to output signal pointer, will be set to a valid signal
-------	---

5.179.3.4 const mha_wave_t* MHAFilter::fftfilterbank_t::get_irs() const [inline]

Return the current IRS.

5.179.4 Member Data Documentation

```
5.179.4.1 unsigned int MHAFilter::fftfilterbank_t::fragsize [private]
```

5.179.4.2 unsigned int MHAFilter::fftfilterbank_t::inputchannels [private]

5.179.4.3 unsigned int MHAFilter::fftfilterbank_t::firchannels [private]

5.179.4.4 unsigned int MHAFilter::fftfilterbank_t::outputchannels [private]

5.179.4.5 unsigned int MHAFilter::fftfilterbank_t::fftlen [private]

5.179.4.6 MHASignal::waveform t MHAFilter::fftfilterbank_t::hw [private]

5.179.4.7 MHASignal::spectrum_t MHAFilter::fftfilterbank_t::Hs [private]

5.179.4.8 MHASignal::waveform t MHAFilter::fftfilterbank_t::xw [private]

5.179.4.9 MHASignal::spectrum_t MHAFilter::fftfilterbank_t::Xs [private]


- 5.179.4.10 MHASignal::waveform_t MHAFilter::fftfilterbank_t::yw [private]
 5.179.4.11 MHASignal::spectrum_t MHAFilter::fftfilterbank_t::Ys [private]
 5.179.4.12 MHASignal::waveform_t MHAFilter::fftfilterbank_t::yw_temp [private]
 5.179.4.13 MHASignal::waveform_t MHAFilter::fftfilterbank_t::tail [private]
- **5.179.4.14 mha_fft_t** MHAFilter::fftfilterbank_t::fft [private]

The documentation for this class was generated from the following files:

- · mha_filter.hh
- · mha_filter.cpp
- 5.180 MHAFilter::filter_t Class Reference

Generic IIR filter class.

Inheritance diagram for MHAFilter::filter_t:

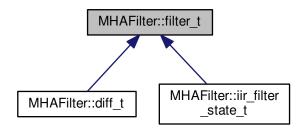

Public Member Functions

- **filter_t** (unsigned int ch, unsigned int lena, unsigned int lenb) *Constructor.*
- filter_t (unsigned int ch, const std::vector< mha_real_t > &vA, const std::vector< mha
 —real_t > &vB)

Constructor with initialization of coefficients.

- filter_t (const MHAFilter::filter_t &src)
- ∼filter t()
- void filter (mha_wave_t *out, const mha_wave_t *in)

Filter all channels in a waveform structure.

void filter (mha_real_t *dest, const mha_real_t *src, unsigned int dframes, unsigned int frame_dist, unsigned int channel_dist, unsigned int channel_begin, unsigned int channel end)

Filter parts of a waveform structure.

mha_real_t filter (mha_real_t x, unsigned int ch)

Filter one sample.

• unsigned int get_len_A () const

Return length of recursive coefficients.

• unsigned int get_len_B () const

Return length of non-recursive coefficients.

Public Attributes

double * A

Pointer to recursive coefficients.

• double * B

Pointer to non-recursive coefficients.

Private Attributes

- unsigned int len_A
- · unsigned int len B
- unsigned int len
- unsigned int channels
- double * state

5.180.1 Detailed Description

Generic IIR filter class.

This class implements a generic multichannel IIR filter. It is realized as direct form II. It can work on any float array or on **mha_wave_t** (p. 462) structs. The filter coefficients can be directly accessed.

Todo Implement a more robust filter form.

5.180.2 Constructor & Destructor Documentation

Constructor.

Parameters

ch Number of channels	
lena	Number of recursive coefficients
lenb	Number of non-recursive coefficients

Constructor with initialization of coefficients.

Parameters

ch	Number of channels.
vΑ	Recursive coefficients.
νB	Non-recursive coefficients.

Filter all channels in a waveform structure.

Parameters

out	Output signal
in	Input signal

Filter parts of a waveform structure.

Parameters

dest	Output signal.
src	Input signal.
dframes	Number of frames to be filtered.
frame_dist	Index distance between frames of one channel
channel_dist	Index distance between audio channels
channel_begin	Number of first channel to be processed
channel_end	Number of last channel to be processed

```
5.180.3.3 mha_real_t MHAFilter::filter(::filter(::filter_t::filter(::filter_t::filter), unsigned int ch )
```

Filter one sample.

Parameters

Х	Input value	
ch	Channel number to use in filter state	

5.180.3.4 unsigned int MHAFilter::filter_t::get_len_A () const [inline]

Return length of recursive coefficients.

5.180.3.5 unsigned int MHAFilter::filter_t::get_len_B () const [inline]

Return length of non-recursive coefficients.

5.180.4 Member Data Documentation

5.180.4.1 double * MHAFilter::filter_t::A

Pointer to recursive coefficients.

```
5.180.4.2 double * MHAFilter::filter_t::B
```

Pointer to non-recursive coefficients.

```
5.180.4.3 unsigned int MHAFilter::filter_t::len_A [private]
5.180.4.4 unsigned int MHAFilter::filter_t::len_B [private]
5.180.4.5 unsigned int MHAFilter::filter_t::len [private]
```

5.180.4.6 unsigned int MHAFilter::filter_t::channels [private]

```
5.180.4.7 double* MHAFilter::filter_t::state [private]
```

The documentation for this class was generated from the following files:

- · mha_filter.hh
- · mha filter.cpp

5.181 MHAFilter::gamma_flt_t Class Reference

Class for gammatone filter.

Public Member Functions

gamma_flt_t (std::vector < mha_real_t > cf, std::vector < mha_real_t > bw, mha_real ←
 _t srate, unsigned int order)

Constructor.

- ~gamma_flt_t ()
- void operator() (mha_wave_t &X, mha_spec_t &Y)

Filter method.

- void operator() (mha_wave_t &X, mha_wave_t &Yre, mha_wave_t &Yim) Filter method.
- void **operator()** (**mha_wave_t** &Yre, **mha_wave_t** &Yim, unsigned int stage) Filter method for specific stage.
- void phase_correction (unsigned int desired_delay, unsigned int inchannels)
- void set_weights (std::vector< mha_complex_t > new_B)
- void set weights (unsigned int stage, std::vector< mha complex t > new B)
- std::vector< $mha_complex_t > get_weights$ () const
- std::vector< **mha complex t** > **get weights** (unsigned int stage) const
- std::vector< mha_real_t > get_resynthesis_gain () const
- void reset_state ()
- const std::vector< mha_complex_t > & get_A ()
- std::string **inspect** () const

Private Attributes

```
    std::vector< mha complex t > A
```

- $\bullet \ \, \text{std::vector} < \textbf{complex_bandpass_t} > \textbf{GF}$
- MHASignal::delay_t * delay
- std::vector< int > envelope_delay
- std::vector< mha_real_t > resynthesis_gain
- std::vector< mha real t > cf
- std::vector< mha_real_t > bw_
- mha_real_t srate_

5.181.1 Detailed Description

Class for gammatone filter.

5.181.2 Constructor & Destructor Documentation

```
5.181.2.1 MHAFilter::gamma_flt_t::gamma_flt_t (  std::vector < mha\_real\_t > \textit{cf}, \\ std::vector < mha\_real\_t > \textit{bw}, \\ mha\_real\_t \; \textit{srate}, \\ unsigned int \; \textit{order} \; )
```

Constructor.

Parameters

cf	Center frequency in Hz.	
bw	Bandwidth in Hz (same number of entries as in cf).	
srate Sampling frequency in Hz.		
order	Filter order.	

```
5.181.2.2 MHAFilter::gamma_flt_t::~gamma_flt_t ( )
```

5.181.3 Member Function Documentation

Filter method.

```
5.181.3.2 void MHAFilter::gamma_flt_t::operator() (
                      mha_wave_t & X,
                      mha wave t & Yre,
                      mha_wave_t & Yim ) [inline]
Filter method.
5.181.3.3 void MHAFilter::gamma_flt_t::operator() (
                      mha wave t & Yre,
                      mha_wave_t & Yim,
                      unsigned int stage ) [inline]
Filter method for specific stage.
5.181.3.4 void MHAFilter::gamma_flt_t::phase_correction (
                      unsigned int desired_delay,
                      unsigned int inchannels )
5.181.3.5 void MHAFilter::gamma_flt_t::set_weights (
                      std::vector< mha_complex_t > new_B)
5.181.3.6 void MHAFilter::gamma_flt_t::set_weights (
                      unsigned int stage,
                      std::vector< mha complex t > new_B)
5.181.3.7 std::vector<mha complex t> MHAFilter::gamma flt t::get weights ( ) const
          [inline]
5.181.3.8 std::vector<mha complex t> MHAFilter::gamma_flt_t::get_weights (
                      unsigned int stage ) const [inline]
5.181.3.9 std::vector<mha_real_t> MHAFilter::gamma_flt_t::get_resynthesis_gain ( ) const
          [inline]
5.181.3.10 void MHAFilter::gamma_flt_t::reset_state ( )
5.181.3.11 const std::vector<mha_complex_t>& MHAFilter::gamma_flt_t::get_A( ) [inline]
5.181.3.12 std::string MHAFilter::gamma_flt_t::inspect ( ) const [inline]
5.181.4 Member Data Documentation
5.181.4.1 std::vector<mha_complex_t> MHAFilter::gamma_flt_t::A [private]
5.181.4.2 std::vector<complex_bandpass_t> MHAFilter::gamma_flt_t::GF [private]
```


```
5.181.4.3 MHASignal::delay_t* MHAFilter::gamma_flt_t::delay [private]
5.181.4.4 std::vector<int> MHAFilter::gamma_flt_t::envelope_delay [private]
5.181.4.5 std::vector<mha_real_t> MHAFilter::gamma_flt_t::resynthesis_gain [private]
5.181.4.6 std::vector<mha_real_t> MHAFilter::gamma_flt_t::cf_ [private]
5.181.4.7 std::vector<mha_real_t> MHAFilter::gamma_flt_t::bw_ [private]
5.181.4.8 mha_real_t MHAFilter::gamma_flt_t::srate_ [private]
```

The documentation for this class was generated from the following files:

- complex_filter.h
- complex_filter.cpp

5.182 MHAFilter::iir_filter_state_t Class Reference

Inheritance diagram for MHAFilter::iir_filter_state_t:

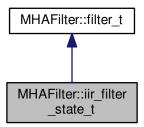

Public Member Functions

iir_filter_state_t (unsigned int channels, std::vector< float > cf_A, std::vector< float > cf_B)

Additional Inherited Members

5.182.1 Constructor & Destructor Documentation

```
5.182.1.1 MHAFilter::iir_filter_state_t::iir_filter_state_t ( unsigned int channels, std::vector< float > cf_A, std::vector< float > cf_B )
```


The documentation for this class was generated from the following files:

- mha_filter.hh
- · mha_filter.cpp

5.183 MHAFilter::iir filter t Class Reference

IIR filter class wrapper for integration into parser structure.

Inheritance diagram for MHAFilter::iir_filter_t:

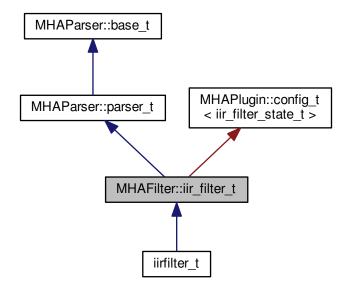

Public Member Functions

iir_filter_t (std::string help="IIR filter structure", std::string def_A="[1]", std::string def — B="[1]", unsigned int channels=1)

Constructor of the IIR filter.

void filter (mha_wave_t *y, const mha_wave_t *x)

The filter processes the audio signal.

• mha_real_t filter (mha_real_t x, unsigned int ch)

Filter a single audio sample.

void resize (unsigned int channels)

Change the number of channels after object creation.

Private Member Functions

void update_filter ()

Private Attributes

- MHAParser::vfloat_t A
- MHAParser::vfloat_t B
- MHAEvents::patchbay_t< iir_filter_t > connector
- unsigned int nchannels

Additional Inherited Members

5.183.1 Detailed Description

IIR filter class wrapper for integration into parser structure.

This class implements an infinite impulse response filter. Since it inherits from **MHAParser**← ::parser_t (p. 654), it can easily be integrated in the openMHA configuration tree. It provides the configuration language variables "A" (vector of recursive filter coefficients) and "B" (vector of non-recursive filter coefficients).

The filter instance reacts to changes in filter coefficients through the openMHA configuration language, and uses the updated coefficients in the next invocation of the filter method.

Update of the coefficients is thread-safe and non-blocking. Simply add this subparser to your parser items and use the "filter" member function. Filter states are reset to all 0 on update.

5.183.2 Constructor & Destructor Documentation

```
5.183.2.1 MHAFilter::iir_filter_t:(

std::string help = "IIR filter structure",

std::string def_A = "[1]",

std::string def_B = "[1]",

unsigned int channels = 1)
```

Constructor of the IIR filter.

Initialises the sub-parser structure and the memory for holding the filter's state.

Parameters

help	The help string for the parser that groups the configuration variables of this filter. Could be used to describe the purpose of this IIR filter.
def_A	The initial value of the vector of the recursive filter coefficients, represented as string.
def_B	The initial value of the vector of the non-recursive filter coefficients, represented as string.
channels	The number of indipendent audio channels to process with this filter. Needed to allocate a state vector for each audio channel.

5.183.3 Member Function Documentation

The filter processes the audio signal.

All channels in the audio signal are processed using the same filter coefficients. Indipendent state is stored between calls for each audio channel.

Parameters

У	Pointer to output signal holder. The output signal is stored here. Has to have the same signal dimensions as the input signal x. In-place processing (y and x pointing to the same signal holder) is possible.
λ	Pointer to input signal holder. Number of channels has to be the same as given to the constructor, or to the resize (p. 508) method.

Filter a single audio sample.

Parameters

X	The single audio sample	
ch	Zero-based channel index. Use and change the state of channel ch. ch has to be less	
	than the number of channels given to the constructor or the resize (p. 508) method.	

Returns

the filtered result sample.

```
5.183.3.3 void MHAFilter::iir_filter_t::resize ( unsigned int channels )
```

Change the number of channels after object creation.

Parameters

```
5.183.3.4 void MHAFilter::iir_filter_t::update_filter( ) [private]
```

5.183.4 Member Data Documentation

```
5.183.4.1 MHAParser::vfloat_t MHAFilter::iir_filter_t::A [private]
```

```
5.183.4.2 MHAParser::vfloat_t MHAFilter::iir_filter_t::B [private]
```

```
5.183.4.3 MHAEvents::patchbay_t<iir_filter_t> MHAFilter::iir_filter_t::connector [private]
```

5.183.4.4 unsigned int MHAFilter::iir_filter_t::nchannels [private]

The documentation for this class was generated from the following files:

- mha_filter.hh
- · mha_filter.cpp

5.184 MHAFilter::iir_ord1_real_t Class Reference

First order recursive filter.

Public Member Functions

- iir_ord1_real_t (std::vector< mha_real_t > A, std::vector< mha_real_t > B)
 Constructor with filter coefficients (one per channel)
- iir_ord1_real_t (std::vector< mha_real_t > tau, mha_real_t srate)

Constructor for low pass filter (one time constant per channel)

- void set_state (mha_real_t val)
- void set_state (std::vector< mha_real_t > val)
- void set_state (mha_complex_t val)
- mha_real_t operator() (unsigned int ch, mha_real_t x)

Filter method for real value input, one element.

mha_complex_t operator() (unsigned int ch, mha_complex_t x)

Filter method for complex input, one element.

void operator() (const mha_wave_t &X, mha_wave_t &Y)

Filter method for real value input.

void operator() (const mha_spec_t &X, mha_spec_t &Y)

Filter method for complex value input.

 void operator() (const mha_wave_t &Xre, const mha_wave_t &Xim, mha_wave_t &Yre, mha_wave_t &Yim)

Filter method for complex value input.

Private Attributes

- std::vector< mha real t > A
- std::vector< mha_real_t > B_
- std::vector< mha_complex_t > Yn

5.184.1 Detailed Description

First order recursive filter.

5.184.2 Constructor & Destructor Documentation

Constructor with filter coefficients (one per channel)

Constructor for low pass filter (one time constant per channel)

```
5.184.3 Member Function Documentation
5.184.3.1 void MHAFilter::iir_ord1_real_t::set_state (
                      mha_real_t val )
5.184.3.2 void MHAFilter::iir_ord1_real_t::set_state (
                      std::vector< mha real t > val )
5.184.3.3 void MHAFilter::iir_ord1_real_t::set_state (
                      mha_complex_t val )
5.184.3.4 mha_real_t MHAFilter::iir_ord1_real_t::operator() (
                      unsigned int ch,
                      mha_real_t x ) [inline]
Filter method for real value input, one element.
5.184.3.5 mha_complex_t MHAFilter::iir_ord1_real_t::operator() (
                      unsigned int ch,
                      mha_complex_t x ) [inline]
Filter method for complex input, one element.
5.184.3.6 void MHAFilter::iir_ord1_real_t::operator() (
                      const mha wave t & X,
                      mha wave t&Y) [inline]
Filter method for real value input.
5.184.3.7 void MHAFilter::iir ord1 real t::operator() (
                      const mha spec t & X,
                      mha_spec_t & Y ) [inline]
Filter method for complex value input.
5.184.3.8 void MHAFilter::iir_ord1_real_t::operator() (
                      const mha wave t & Xre,
                      const mha_wave_t & Xim,
                      mha wave t & Yre,
                      mha_wave_t & Yim ) [inline]
```

Filter method for complex value input.

5.184.4 Member Data Documentation

5.184.4.1 std::vector<mha_real_t> MHAFilter::iir_ord1_real_t::A_ [private]

5.184.4.2 std::vector<mha_real_t> MHAFilter::iir_ord1_real_t::B_ [private]

5.184.4.3 std::vector<mha_complex_t> MHAFilter::iir_ord1_real_t::Yn [private]


The documentation for this class was generated from the following files:

- mha_filter.hh
- · mha_filter.cpp

5.185 MHAFilter::o1_ar_filter_t Class Reference

First order attack-release lowpass filter.

Inheritance diagram for MHAFilter::o1_ar_filter_t:

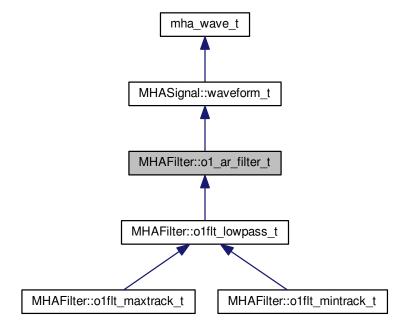

Public Member Functions

• o1_ar_filter_t (unsigned int channels, mha_real_t fs=1.0f, std::vector< mha_real_t > tau_a=std::vector< float >(1, 0.0f), std::vector< mha_real_t > tau_r=std::vector< float >(1, 0.0f))

Constructor, setting all taus to zero.

• void **set tau attack** (unsigned int ch, **mha real t** tau)

Set the attack time constant.

void set_tau_release (unsigned int ch, mha_real_t tau)

Set the release time constant.

mha_real_t operator() (unsigned int ch, mha_real_t x)

Apply filter to value x, using state channel ch.

void operator() (const mha_wave_t &in, mha_wave_t &out)

Apply filter to a **mha_wave_t** (p. 462) data.

Protected Attributes

```
    MHASignal::waveform_t c1_a
```

- MHASignal::waveform_t c2_a
- MHASignal::waveform_t c1_r
- MHASignal::waveform_t c2_r
- mha real t fs

Additional Inherited Members

5.185.1 Detailed Description

First order attack-release lowpass filter.

This filter is the base of first order lowpass filter, maximum tracker and minimum tracker.

5.185.2 Constructor & Destructor Documentation

Constructor, setting all taus to zero.

The filter state can be accessed through the member functions of **MHASignal::waveform_t** (p. 778).

Parameters

channels	Number of independent filters
fs	Sampling rate (optional, default = 1)
tau_a	Attack time constants (optional, default = 0)
tau_r	Release time constants (optional, default = 0)

5.185.3 Member Function Documentation

Set the attack time constant.

Parameters

ch	Channel number
tau	Time constant

Set the release time constant.

Parameters

ch	Channel number
tau	Time constant

Apply filter to value x, using state channel ch.

Parameters

ch	Cannel number
Χ	Input value

Returns

Output value

Apply filter to a **mha_wave_t** (p. 462) data.

Parameters

in	Input signal
out	Output signal

The number of channels must match the number of filter bands.

5.185.4 Member Data Documentation

```
5.185.4.1 MHASignal::waveform_t MHAFilter::o1_ar_filter_t::c1_a [protected]
```

5.185.4.2 MHASignal::waveform t MHAFilter::o1_ar_filter_t::c2_a [protected]

5.185.4.3 MHASignal::waveform_t MHAFilter::o1_ar_filter_t::c1_r [protected]

5.185.4.4 MHASignal::waveform_t MHAFilter::o1_ar_filter_t::c2_r [protected]

5.185.4.5 mha_real_t MHAFilter::o1_ar_filter_t::fs [protected]


The documentation for this class was generated from the following files:

- mha_filter.hh
- mha_filter.cpp

5.186 MHAFilter::o1flt_lowpass_t Class Reference

First order low pass filter.

Inheritance diagram for MHAFilter::o1flt_lowpass_t:

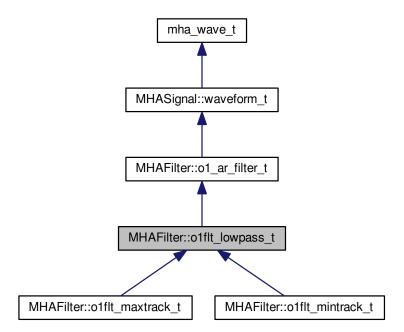

Public Member Functions

- o1flt_lowpass_t (const std::vector< mha_real_t > &, mha_real_t, mha_real_t=0)
 Constructor of low pass filter, sets sampling rate and time constants.
- void set_tau (unsigned int ch, mha_real_t tau)
 change the time constant in one channel
- void set_tau (mha_real_t tau)
 set time constant in all channels to tau
- mha_real_t get_c1 (unsigned int ch) const
- mha_real_t get_last_output (unsigned int ch) const

Additional Inherited Members

5.186.1 Detailed Description

First order low pass filter.

5.186.2 Constructor & Destructor Documentation

Constructor of low pass filter, sets sampling rate and time constants.

Parameters

tau	Vector of time constants
fs	Sampling rate
startval	Initial internal state value

5.186.3 Member Function Documentation

change the time constant in one channel

```
5.186.3.2 void MHAFilter::o1flt_lowpass_t::set_tau ( mha_real_t tau )
```

set time constant in all channels to tau


The documentation for this class was generated from the following files:

- · mha filter.hh
- · mha_filter.cpp

5.187 MHAFilter::o1flt_maxtrack_t Class Reference

First order maximum tracker.

Inheritance diagram for MHAFilter::o1flt_maxtrack_t:

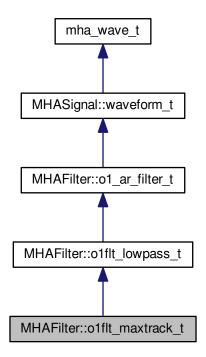

Public Member Functions

- o1flt_maxtrack_t (const std::vector< mha_real_t > &, mha_real_t, mha_real_t=0)

 Constructor of low pass filter, sets sampling rate and time constants.
- void set_tau (unsigned int ch, mha_real_t tau)
 change the time constant in one channel
- void set_tau (mha_real_t tau)
 set time constant in all channels to tau

Additional Inherited Members

5.187.1 Detailed Description

First order maximum tracker.

5.187.2 Constructor & Destructor Documentation

Constructor of low pass filter, sets sampling rate and time constants.

Parameters

tau	Vector of time constants
fs	Sampling rate
startval	Initial internal state value

5.187.3 Member Function Documentation

```
5.187.3.1 void MHAFilter::o1flt_maxtrack_t::set_tau (
unsigned int ch,
mha real t tau )
```

change the time constant in one channel

```
5.187.3.2 void MHAFilter::o1flt_maxtrack_t::set_tau ( mha real t tau )
```

set time constant in all channels to tau


The documentation for this class was generated from the following files:

- mha_filter.hh
- mha_filter.cpp

5.188 MHAFilter::o1flt_mintrack_t Class Reference

First order minimum tracker.

Inheritance diagram for MHAFilter::o1flt_mintrack_t:

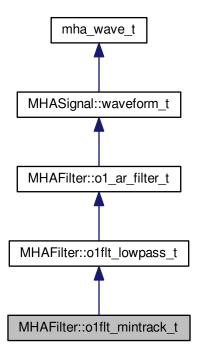

Public Member Functions

- o1flt_mintrack_t (const std::vector< mha_real_t > &, mha_real_t, mha_real_t=0)
- void set_tau (unsigned int ch, mha_real_t tau)
 change the time constant in one channel
- void set_tau (mha_real_t tau)
 set time constant in all channels to tau

Additional Inherited Members

5.188.1 Detailed Description

First order minimum tracker.

```
5.188.2 Constructor & Destructor Documentation
```

5.188.3 Member Function Documentation

change the time constant in one channel

```
5.188.3.2 void MHAFilter::o1flt_mintrack_t::set_tau ( mha_real_t tau )
```

set time constant in all channels to tau

The documentation for this class was generated from the following files:

- · mha filter.hh
- mha_filter.cpp
- 5.189 MHAFilter::partitioned_convolution_t Class Reference

A filter class for partitioned convolution.

Classes

struct index_t

Bookkeeping class.

Public Member Functions

• partitioned_convolution_t (unsigned int fragsize, unsigned int nchannels_in, unsigned int nchannels out, const transfer matrix t &transfer)

Create a new partitioned convolver.

~partitioned_convolution_t ()

Free fftw resource allocated in constructor.

mha_wave_t * process (const mha_wave_t *s_in)processing

Public Attributes

· unsigned int fragsize

Audio fragment size, always equal to partition size.

• unsigned int nchannels_in

Number of audio input channels.

unsigned int nchannels_out

Number of audio output channels.

unsigned int output partitions

The maximum number of partitions in any of the impulse responses.

unsigned int filter_partitions

The total number of non-zero impulse response partitions.

MHASignal::waveform_t input_signal_wave

Buffer for input signal.

unsigned int current_input_signal_buffer_half_index

A counter modulo 2.

MHASignal::spectrum_t input_signal_spec

Buffer for FFT transformed input signal.

MHASignal::spectrum_t frequency_response

Buffers for frequency response spectra of impulse response partitions.

std::vector< index_t > bookkeeping

Keeps track of input channels, output channels, impulse response partition, and delay.

std::vector< MHASignal::spectrum_t > output_signal_spec

Buffers for FFT transformed output signal.

unsigned int current_output_partition_index

A counter modulo output_partitions, indexing the "current" output partition.

MHASignal::waveform t output signal wave

Buffer for the wave output signal.

· mha fft t fft

The FFT transformer.

5.189.1 Detailed Description

A filter class for partitioned convolution.

Impulse responses are partitioned into sections of fragment size. Audio signal is convolved with every partition and delayed as needed. Convolution is done according to overlap-save. FFT length used is 2 times fragment size.

5.189.2 Constructor & Destructor Documentation

5.189.2.1 MHAFilter::partitioned_convolution_t::partitioned_convolution_t (

unsigned int fragsize, unsigned int nchannels_in, unsigned int nchannels_out,

const transfer matrix t & transfer)

Create a new partitioned convolver.

Parameters

fragsize	Audio fragment size, equal to partition size.
nchannels_in	Number of input audio channels.
nchannels_out	Number of output audio channels.
transfer	A sparse matrix of impulse responses.

5.189.2.2 MHAFilter::partitioned_convolution_t::~partitioned_convolution_t ()

Free fftw resource allocated in constructor.

5.189.3 Member Function Documentation

processing

5.189.4 Member Data Documentation

5.189.4.1 unsigned int MHAFilter::partitioned convolution t::fragsize

Audio fragment size, always equal to partition size.

5.189.4.2 unsigned int MHAFilter::partitioned_convolution_t::nchannels_in

Number of audio input channels.

5.189.4.3 unsigned int MHAFilter::partitioned convolution t::nchannels out

Number of audio output channels.

5.189.4.4 unsigned int MHAFilter::partitioned_convolution_t::output_partitions

The maximum number of partitions in any of the impulse responses.

Determines the size if the delay line.

5.189.4.5 unsigned int MHAFilter::partitioned_convolution_t::filter_partitions

The total number of non-zero impulse response partitions.

5.189.4.6 MHASignal::waveform_t MHAFilter::partitioned_convolution_t::input_signal_wave

Buffer for input signal.

Has nchannels_in channels and fragsize*2 frames

5.189.4.7 unsigned int MHAFilter::partitioned_convolution_t::current_input_signal_buffer_half_index

A counter modulo 2.

Indicates the buffer half in input signal wave into which to copy the current input signal.

5.189.4.8 MHASignal::spectrum_t MHAFilter::partitioned_convolution_t::input_signal_spec

Buffer for FFT transformed input signal.

Has nchannels_in channels and fragsize+1 frames (fft bins).

5.189.4.9 MHASignal::spectrum_t MHAFilter::partitioned_convolution_t::frequency_response

Buffers for frequency response spectra of impulse response partitions.

Each "channel" contains another partition of some impulse response. The bookkeeping array is used to keep track what to do with these frequency responses. This container has filter_ partitions channels and fragsize+1 frames (fft bins).

5.189.4.10 std::vector<index t> MHAFilter::partitioned convolution t::bookkeeping

Keeps track of input channels, output channels, impulse response partition, and delay.

The index into this array is the same as the "channel" index into the frequency_response array. Array has filter_partitions entries.

5.189.4.11 std::vector<MHASignal::spectrum_t> MHAFilter::partitioned_convolution_t::output_← signal_spec

Buffers for FFT transformed output signal.

For each array member, Number of channels is equal to nchannels_out, number of frames (fft bins) is equal to fragsize+1. Array size is equal to output partitions.

5.189.4.12 unsigned int MHAFilter::partitioned_convolution_t::current_output_partition_index

A counter modulo output_partitions, indexing the "current" output partition.

5.189.4.13 MHASignal::waveform_t MHAFilter::partitioned_convolution_t::output_signal_wave

Buffer for the wave output signal.

Number of channels is equal to nchannels_out, number of frames is equal to fragsize

5.189.4.14 mha fft t MHAFilter::partitioned_convolution_t::fft

The FFT transformer.

The documentation for this class was generated from the following files:

- · mha filter.hh
- · mha filter.cpp

5.190 MHAFilter::partitioned_convolution_t::index_t Struct Reference

Bookkeeping class.

Public Member Functions

- index_t (unsigned int src, unsigned int tgt, unsigned int dly)
 Data constructor.
- index t()

Default constructor for STL compatibility.

Public Attributes

unsigned int source_channel_index

The input channel index to apply the current partition to.

unsigned int target_channel_index

The index of the output channel to which the filter result should go.

unsigned int delay

The delay (in blocks) of this partition.

5.190.1 Detailed Description

Bookkeeping class.

For each impulse response partition, keeps track of which input to filter, which output channel to filter to, and the delay in blocks. Objects of class Index should be kept in an array with the same indices as the corresponding inpulse response partitions.

5.190.2 Constructor & Destructor Documentation

Data constructor.

Parameters

src	The input channel index to apply the current partition to.	
tgt	The index of the output channel to which the filter result should go.	
dly	The delay (in blocks) of this partition	

5.190.2.2 MHAFilter::partitioned_convolution_t::index_t::index_t() [inline]

Default constructor for STL compatibility.

5.190.3 Member Data Documentation

5.190.3.1 unsigned int MHAFilter::partitioned_convolution_t::index_t::source_channel_index

The input channel index to apply the current partition to.

5.190.3.2 unsigned int MHAFilter::partitioned_convolution_t::index_t::target_channel_index

The index of the output channel to which the filter result should go.

5.190.3.3 unsigned int MHAFilter::partitioned_convolution_t::index_t::delay

The delay (in blocks) of this partition.

The documentation for this struct was generated from the following file:

· mha filter.hh

5.191 MHAFilter::polyphase_resampling_t Class Reference

A class that performs polyphase resampling.

Public Member Functions

- polyphase_resampling_t (unsigned n_up, unsigned n_down, mha_real_t nyquist_ratio, unsigned n_irs, unsigned n_ringbuffer, unsigned n_channels, unsigned n_prefill)

 Construct a polyphase resampler instance.
- void write (mha_wave_t &signal)

Write signal to the ringbuffer.

void read (mha_wave_t &signal)

Read resampled signal.

unsigned readable_frames () const

Number of frames at target sampling rate that can be produced.

Private Attributes

unsigned upsampling factor

Integer upsampling factor.

unsigned downsampling_factor

Integer downsampling factor.

unsigned now index

Index of "now" in the interpolated sampling rate.

bool underflow

Set to true when an underflow has occurred.

MHAWindow::hanning_t impulse_response

Contains the impulse response of the lowpass filter needed for anti-aliasing.

MHASignal::ringbuffer_t ringbuffer

Storage of input signal.

5.191.1 Detailed Description

A class that performs polyphase resampling.

Background information: When resampling from one sampling rate to another, it helps when one sampling rate is a multiple of the other sampling rate: In the case of upsampling, the samples at the original rate are copied to the upsampled signal spread out with a constant number of zero samples between the originally adjacent samples. The signal is then low-pass filtered to avoid frequency aliasing and to fill the zero-samples with interpolated values. In the case of down-sampling, the signal is first low-pass filtered for anti-aliasing, and only every nth sample of the filtered output is used for the signal at the new sample rate. Of course, for finite-impulse-response (FIR) filters this means that only every nth sample needs to be computed.

When resampling from one sampling rate to another where neither is a multiple of the other, the signal first needs to be upsampled to a sampling rate that is a multiple of both (source and target) sampling rates, and then downsampled again to the target sampling rate. Instead of applying two separate lowpass filters directly after each other (one filter for upsampling and another for downsampling), it is sufficient to apply only one low-pass filter, when producing the output at the final target rate, with a cut-off frequency equal to the lower cut-off-frequency of the replaced two low-pass filters. Not filtering to produce a filtered signal already at the common multiple sampling rate has the side effect that this intermediate signal at the common multiple sampling rate keeps its filler zero samples unaltered. These zero samples can be taken advantage of when filtering to produce the output at the target rate: The zeros do not need to be multiplied with their corresponding filter coefficients, because the result is known to be zero again, and this zero product has no effect on the summation operation to compute a target sample at the target rate. To summarize, the following optimization techniques are available:

- The signal does not need to be stored in memory at the interpolation rate. It is sufficient to have the signal available at the source rate and to know where the zeros would be.
- The signal needs to be low-pass-filtered only once.
- The FIR low-pass filtering can take advantage of

- computing only filter outputs for the required samples at the target rate,
- skipping over zero-samples at the interpolation rate.

The procedure that takes advantage of these optimization possibilities is known as polyphase resampling.

This class implements polyphase resampling in this way for a source sampling rate and a target sampling rate that have common multiple, the interpolation sampling rate. Non-rational and drifting sample rates are outside the scope of this resampler.

5.191.2 Constructor & Destructor Documentation

Construct a polyphase resampler instance.

Allocates a ringbuffer with the given capacity $n_ringbuffer$. Client that triggers the constructor must ensure that the capacity $n_ringbuffer$ and the delay $n_prefill$ are sufficient, i.e. enough old and new samples are always available to compute sufficient samples in using an impulse response of length n_irs . Audio block sizes at both sides of the resampler have to be taken into account. Class MHASignal::blockprocessing_polyphase_resampling_t takes care of this, and it is recommended to use this class for block-based processing.

Based on *n_up*, *n_down*, *n_irs* and *nyquist_ratio*, a suitable sinc impulse response is computed and windowed with a hanning window to limit its extent.

The actual source sampling rate, target sampling rate, and interpolation sampling rate are not parameters to this constructors, because only their ratios matter.

Parameters

n_up	upsampling factor, ratio between interpolation rate and source rate.
n_down	downsampling factor, ratio between interpolation rate and target rate.
nyquist_ratio	low pass filter cutoff frequency relative to the nyquist frequency of the smaller of the two sampling rates. Example values: E.g. 0.8, 0.9
n_irs	length of impulse response (in samples at interpolation rate)
n_ringbuffer	length of ringbuffer, in samples at source sampling rate
n_channels	audio channels count
n_prefill	Prefill the ringbuffer with this many zero frames in samples at source sampling rate

5.191.3 Member Function Documentation

```
5.191.3.1 void MHAFilter::polyphase_resampling_t::write ( mha wave t & signal )
```

Write signal to the ringbuffer.

Signal contained in signal is appended to the audio frames already present in the ringbuffer.

Parameters

Exceptions

MHA_Error (p. 413)	MHA_Error (p. 413) Raises exception if there is not enough room or if the number of	
	channels does not match.	

```
5.191.3.2 void MHAFilter::polyphase_resampling_t::read ( mha_wave_t & signal )
```

Read resampled signal.

Will perform the resampling and remove no longer needed samples from the input buffer.

Parameters

	buffer to write the resampled signal to.
sianai	Duffer to write the resampled signal to
oigi iai	baner to write the recampled eighar to:

Exceptions

MHA_Error (p. 413)	Raises exception if there is not enough input signal or if the number
	of channels is too high.

5.191.3.3 unsigned MHAFilter::polyphase_resampling_t::readable_frames () const [inline]

Number of frames at target sampling rate that can be produced.

This method only checks for enough future samples present, therefore, this number can be positive and a read operation can still fail if there are not enough past samples present to perform the filtering for the first output sample. This could only happen if the constructor parameters $n_ringbuffer$ or $n_ringbuffer$ or $n_ringbuffer$ or $n_ringbuffer$ or $n_ringbuffer$ are present to compute the next target sample.

5.191.4 Member Data Documentation

5.191.4.1 unsigned MHAFilter::polyphase_resampling_t::upsampling_factor [private]

Integer upsampling factor.

Interpolation rate divided by source rate.

5.191.4.2 unsigned MHAFilter::polyphase_resampling_t::downsampling_factor [private]

Integer downsampling factor.

Interpolation rate divided by target rate.

5.191.4.3 unsigned MHAFilter::polyphase_resampling_t::now_index [private]

Index of "now" in the interpolated sampling rate.

Todo Index into what? What is the meaning of now?

5.191.4.4 bool MHAFilter::polyphase_resampling_t::underflow [private]

Set to true when an underflow has occurred.

When this is true, then the object can no longer be used. Underflows have to be avoided by clients, e.g. by checking that enough **readable_frames** (p. 528) are present before calling **read** (p. 528)

5.191.4.5 MHAWindow::hanning_t MHAFilter::polyphase_resampling_t::impulse_response [private]

Contains the impulse response of the lowpass filter needed for anti-aliasing.

The impulse response is stored at the interpolation sampling rate. We use an instance of $\mathbf{M} \leftarrow \mathbf{HAWindow::hanning_t}$ (p. 806) here because we are limiting the sinc impulse response with a Hanning window (otherwise the impulse response would extend indefinitely into past and future). And the samples inside an $\mathbf{MHAWindow::hanning_t}$ (p. 806) can be altered with *=, which our constructor does.

5.191.4.6 MHASignal::ringbuffer_t MHAFilter::polyphase_resampling_t::ringbuffer [private]

Storage of input signal.

Part of the polyphase resampling optimization is that apart from the FIR impulse response, nothing is stored at the interpolation rate, saving memory and computation cycles.


The documentation for this class was generated from the following files:

- mha filter.hh
- mha_filter.cpp

5.192 MHAFilter::resampling_filter_t Class Reference

Hann shaped low pass filter for resampling.

Inheritance diagram for MHAFilter::resampling_filter_t:

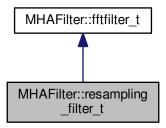

Public Member Functions

resampling_filter_t (unsigned int fftlen, unsigned int irslen, unsigned int channels, unsigned int Nup, unsigned int Ndown, double fCutOff)
 Constructor.

Static Public Member Functions

• static unsigned int fragsize validator (unsigned int fftlen, unsigned int irslen)

Private Attributes

· unsigned int fragsize

5.192.1 Detailed Description

Hann shaped low pass filter for resampling.

This class uses FFT filter at upsampled rate.

5.192.2 Constructor & Destructor Documentation

Constructor.

Parameters

fftlen	FFT length.
irslen	Length of filter.
channels	Number of channels to be filtered.
Nup	Upsampling ratio.
Ndown	Downsampling ratio.
fCutOff	Cut off frequency (relative to lower Nyquist Frequency)

5.192.3 Member Function Documentation

5.192.4 Member Data Documentation

5.192.4.1 unsigned int MHAFilter::resampling_filter_t::fragsize [private]

The documentation for this class was generated from the following files:

- mha_filter.hh
- · mha_filter.cpp

5.193 MHAFilter::smoothspec_t Class Reference

Smooth spectral gains, create a windowed impulse response.

Public Member Functions

Constructor.

- void **smoothspec** (const **mha_spec_t** &s_in, **mha_spec_t** &s_out)

 Create a smoothed spectrum.
- void smoothspec (mha_spec_t &spec)

Create a smoothed spectrum (in place)

void spec2fir (const mha_spec_t &spec, mha_wave_t &fir)

Return FIR coefficients.

∼smoothspec_t ()

Private Member Functions

void internal_fir (const mha_spec_t &)

Private Attributes

- · unsigned int fftlen
- unsigned int nchannels
- MHAWindow::base t window
- MHASignal::waveform_t tmp_wave
- MHASignal::spectrum_t tmp_spec
- MHASignal::minphase_t * minphase
- bool _linphase_asym
- mha_fft_t fft

5.193.1 Detailed Description

Smooth spectral gains, create a windowed impulse response.

Spectral gains are smoothed by multiplicating the impulse response with a window function.

If a minimal phase is used, then the original phase is discarded and replaced by the minimal phase function. In this case, the window is applied to the beginning of the inverse Fourier transform of the input spectrum, and the remaining signal set to zero. If the original phase is kept, the window is applied symmetrical arround zero, i.e. to the first and last samples of the inverse Fourier transform of the input spectrum. The **spec2fir()** (p. 533) function creates a causal impulse response by circular shifting the impulse response by half of the window length.

The signal dimensions of the arguments of **smoothspec()** (p. 533) must correspond to the FFT length and number of channels provided in the constructor. The function **spec2fir()** (p. 533) can fill signal structures with more than window length frames.

5.193.2 Constructor & Destructor Documentation

Constructor.

Parameters

fftlen	FFT length of input spectrum (fftlen/2+1 bins)
nchannels	Number of channels in input spectrum
window	Window used for smoothing
minphase	Use minimal phase (true) or original phase (false)
linphase_asym	Keep phase, but apply full window at beginning of IRS

```
5.193.2.2 MHAFilter::smoothspec_t::~smoothspec_t ( )
```

5.193.3 Member Function Documentation

Create a smoothed spectrum.

Parameters

S⇔	Input spectrum
_in	

Return values

```
s_out Output spectrum
```

Create a smoothed spectrum (in place)

Parameters

```
spec | Spectrum to be smoothed.
```

Return FIR coefficients.

Parameters

```
spec Input spectrum
```

Return values

```
fir | FIR coefficients, minimum length is window length
```

The documentation for this class was generated from the following files:

- · mha_filter.hh
- mha filter.cpp

5.194 MHAFilter::thirdoctave_analyzer_t Class Reference

Public Member Functions

- thirdoctave_analyzer_t (mhaconfig_t cfg)
- mha_wave_t * process (mha_wave_t *)
- unsigned int **nbands** ()
- unsigned int **nchannels** ()
- std::vector< mha_real_t > get_cf_hz ()

Static Public Member Functions

- static std::vector< mha_real_t > cf_generator (mhaconfig_t cfg)
- static std::vector< mha_real_t > bw_generator (mhaconfig_t cfg)
- static std::vector< mha_real_t > dup (std::vector< mha_real_t >, mhaconfig_t cfg)

Private Attributes

- mhaconfig_t cfg_
- std::vector< mha_real_t > cf
- MHAFilter::gamma_flt_t fb
- MHASignal::waveform_t out_chunk
- MHASignal::waveform_t out_chunk_im

```
5.194.1 Constructor & Destructor Documentation
```

5.194.2 Member Function Documentation

```
5.194.2.1 mha_wave_t * MHAFilter::thirdoctave_analyzer_t::process ( mha_wave_t * sln )
```

```
5.194.2.2 unsigned int MHAFilter::thirdoctave_analyzer_t::nbands ( )
```

```
5.194.2.3 unsigned int MHAFilter::thirdoctave_analyzer_t::nchannels ( )
```

```
5.194.2.4 std::vector< mha_real_t > MHAFilter::thirdoctave_analyzer_t::get_cf_hz( )
```

```
5.194.2.5 std::vector< mha_real_t > MHAFilter::thirdoctave_analyzer_t::cf_generator ( mhaconfig t cfg ) [static]
```

```
5.194.2.6 std::vector< mha_real_t > MHAFilter::thirdoctave_analyzer_t::bw_generator ( mhaconfig_t cfg ) [static]
```

5.194.3 Member Data Documentation

5.194.3.1 mhaconfig_t MHAFilter::thirdoctave_analyzer_t::cfg_ [private]

```
5.194.3.2 std::vector<mha_real_t> MHAFilter::thirdoctave_analyzer_t::cf [private]
5.194.3.3 MHAFilter::gamma_flt_t MHAFilter::thirdoctave_analyzer_t::fb [private]
5.194.3.4 MHASignal::waveform_t MHAFilter::thirdoctave_analyzer_t::out_chunk [private]
5.194.3.5 MHASignal::waveform_t MHAFilter::thirdoctave_analyzer_t::out_chunk_im
```

The documentation for this class was generated from the following files:

- · complex_filter.h
- complex_filter.cpp

[private]

5.195 MHAFilter::transfer_function_t Struct Reference

a structure containing a source channel number, a target channel number, and an impulse response.

Public Member Functions

transfer function t ()

Default constructor for STL conformity.

 transfer_function_t (unsigned int source_channel_index, unsigned int target_← channel_index, const std::vector< float > &impulse_response)

Data constructor.

- unsigned int **partitions** (unsigned int fragsize) const
 - for the given partition size, return the number of partitions of the impulse response.
- unsigned int non_empty_partitions (unsigned int fragsize) const
 - for the given partition size, return the number of non-empty partitions of the impulse response.
- bool isempty (unsigned int fragsize, unsigned int index) const checks if the partition contains only zeros

Public Attributes

• unsigned int source_channel_index

Source audio channel index for this transfer function.

unsigned int target_channel_index

Target audio channel index for this transfer function.

• std::vector< float > impulse response

Impulse response of transfer from source to target channel.

5.195.1 Detailed Description

a structure containing a source channel number, a target channel number, and an impulse response.

5.195.2 Constructor & Destructor Documentation

```
5.195.2.1 MHAFilter::transfer_function_t::transfer_function_t() [inline]
```

Default constructor for STL conformity.

Not used.

Data constructor.

Parameters

source_channel_index	Source audio channel index for this transfer function
target_channel_index	Target audio channel index for this transfer function
impulse_response	Impulse response of transfer from source to target channel

5.195.3 Member Function Documentation

for the given partition size, return the number of partitions of the impulse response.

Parameters

fragsize	partition size

Returns

number of partitions occupied by the impulse response

for the given partition size, return the number of non-empty partitions of the impulse response.

Parameters

fragsize partition size

Returns

the number of non-empty partitions of the impulse response, i.e. partitions containing only zeros are not counted.

checks if the partition contains only zeros

Parameters

fragsize	partition size
index	partition index

Returns

true when this partition of the impulse response contains only zeros.

- 5.195.4 Member Data Documentation
- 5.195.4.1 unsigned int MHAFilter::transfer_function_t::source_channel_index

Source audio channel index for this transfer function.

5.195.4.2 unsigned int MHAFilter::transfer_function_t::target_channel_index

Target audio channel index for this transfer function.

5.195.4.3 std::vector<float> MHAFilter::transfer_function_t::impulse_response

Impulse response of transfer from source to target channel.

The documentation for this struct was generated from the following files:

- mha filter.hh
- mha_filter.cpp

5.196 MHAFilter::transfer_matrix_t Struct Reference

A sparse matrix of transfer function partitionss.

Inherits vector< transfer_function_t >.

Public Member Functions

- std::valarray< unsigned int > partitions (unsigned fragsize) const
 Returns an array of the results of calling the partitions() (p. 539) method on every matrix member.
- std::valarray < unsigned int > non_empty_partitions (unsigned int fragsize) const
 Returns an array of the results of calling the non_empty_partitions() (p. 539) method on every
 matrix member.

5.196.1 Detailed Description

A sparse matrix of transfer function partitionss.

Each matrix element knows its position in the matrix, so they can be stored as a vector.

5.196.2 Member Function Documentation

```
5.196.2.1 std::valarray<unsigned int> MHAFilter::transfer_matrix_t::partitions ( unsigned fragsize ) const [inline]
```

Returns an array of the results of calling the **partitions()** (p. 539) method on every matrix member.

```
5.196.2.2 std::valarray<unsigned int> MHAFilter::transfer_matrix_t::non_empty_partitions ( unsigned int fragsize ) const [inline]
```

Returns an array of the results of calling the **non_empty_partitions()** (p. 539) method on every matrix member.


The documentation for this struct was generated from the following file:

· mha_filter.hh

5.197 MHAIOJack::io_jack_t Class Reference

Main class for JACK IO.

Inheritance diagram for MHAIOJack::io jack t:

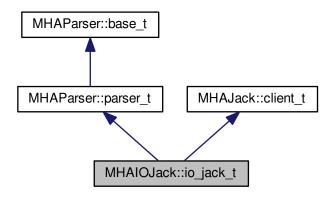

Public Member Functions

- io_jack_t (unsigned int fragsize, float samplerate, IOProcessEvent_t proc_event, void *proc_handle, IOStartedEvent_t start_event, void *start_handle, IOStoppedEvent← _t stop_event, void *stop_handle)
- void **prepare** (int, int)

 Allocate buffers, activate JACK client and install internal ports.
- void release ()

Private Member Functions

void reconnect_inports ()

Connect the input ports when connection variable is accessed.

void reconnect_outports ()

Connect the output ports when connection variable is accessed.

- void get_physical_input_ports ()
- void get_physical_output_ports ()
- void get_all_input_ports ()
- void get_all_output_ports ()
- void get delays in ()
- void get_delays_out ()
- void read_get_cpu_load ()
- void read_get_xruns ()
- void read_get_scheduler ()

Private Attributes

- unsigned int fw_fragsize
- float fw samplerate
- MHAParser::string_t servername
- MHAParser::string_t clientname
- MHAParser::vstring_t connections_in
- MHAParser::vint_mon_t delays_in
- MHAParser::vstring t connections out
- MHAParser::vint_mon_t delays_out
- MHAParser::vstring_t portnames_in
- MHAParser::vstring_t portnames_out
- MHAParser::vstring_mon_t ports_in_physical
- MHAParser::vstring_mon_t ports_out_physical
- MHAParser::vstring_mon_t ports_in_all
- MHAParser::vstring_mon_t ports_out_all
- MHAParser::parser_t ports_parser
- MHAParser::float_mon_t state_cpuload
- MHAParser::int_mon_t state_xruns
- MHAParser::int_mon_t state_priority
- MHAParser::string_mon_t state_scheduler
- MHAParser::parser_t state_parser
- MHAEvents::patchbay_t< io_jack_t > patchbay

Additional Inherited Members

5.197.1 Detailed Description

Main class for JACK IO.

This class registers a JACK client. JACK and framework states are managed by this class.

5.197.2 Constructor & Destructor Documentation

5.197.3 Member Function Documentation

Allocate buffers, activate JACK client and install internal ports.

```
5.197.3.2 void io_jack_t::release (
                     void )
5.197.3.3 void io_jack_t::reconnect_inports() [private]
Connect the input ports when connection variable is accessed.
5.197.3.4 void io_jack_t::reconnect_outports( ) [private]
Connect the output ports when connection variable is accessed.
5.197.3.5 void io_jack_t::get_physical_input_ports() [private]
5.197.3.6 void io_jack_t::get_physical_output_ports() [private]
5.197.3.7 void io_jack_t::get_all_input_ports( ) [private]
5.197.3.8 void io_jack_t::get_all_output_ports( ) [private]
5.197.3.9 void io_jack_t::get_delays_in( ) [private]
5.197.3.10 void io_jack_t::get_delays_out( ) [private]
5.197.3.11 void io_jack_t::read_get_cpu_load( ) [private]
5.197.3.12 void io_jack_t::read_get_xruns( ) [private]
5.197.3.13 void io_jack_t::read_get_scheduler( ) [private]
5.197.4 Member Data Documentation
5.197.4.1
         unsigned int MHAIOJack::io_jack_t::fw_fragsize [private]
5.197.4.2 float MHAIOJack::io_jack_t::fw_samplerate [private]
5.197.4.3 MHAParser::string_t MHAIOJack::io_jack_t::servername [private]
5.197.4.4 MHAParser::string_t MHAIOJack::io_jack_t::clientname [private]
5.197.4.5 MHAParser::vstring_t MHAIOJack::io_jack_t::connections_in [private]
5.197.4.6 MHAParser::vint_mon_t MHAIOJack::io_jack_t::delays_in [private]
```

```
5.197.4.7 MHAParser::vstring_t MHAIOJack::io_jack_t::connections_out [private]
5.197.4.8 MHAParser::vint_mon_t MHAIOJack::io_jack_t::delays_out [private]
5.197.4.9 MHAParser::vstring_t MHAIOJack::io_jack_t::portnames_in [private]
5.197.4.10 MHAParser::vstring_t MHAIOJack::io_jack_t::portnames_out [private]
5.197.4.11 MHAParser::vstring mon t MHAIOJack::io jack t::ports in physical [private]
5.197.4.12 MHAParser::vstring mon t MHAIOJack::io jack t::ports out physical [private]
5.197.4.13 MHAParser::vstring_mon_t MHAIOJack::io_jack_t::ports_in_all [private]
5.197.4.14 MHAParser::vstring_mon_t MHAIOJack::io_jack_t::ports_out_all [private]
5.197.4.15 MHAParser::parser_t MHAIOJack::io_jack_t::ports_parser [private]
5.197.4.16 MHAParser::float mon t MHAlOJack::io_jack_t::state_cpuload [private]
5.197.4.17 MHAParser::int mon t MHAIOJack::io_jack_t::state_xruns [private]
5.197.4.18 MHAParser::int_mon_t MHAIOJack::io_jack_t::state_priority [private]
5.197.4.19 MHAParser::string mon t MHAIOJack::io_jack_t::state_scheduler [private]
5.197.4.20 MHAParser::parser t MHAIOJack::io_jack_t::state_parser [private]
5.197.4.21 MHAEvents::patchbay t<io jack t> MHAIOJack::io_jack_t::patchbay [private]
```


The documentation for this class was generated from the following file:

MHAIOJack.cpp

5.198 MHAIOJackdb::io_jack_t Class Reference

Main class for JACK IO.

Inheritance diagram for MHAIOJackdb::io_jack_t:

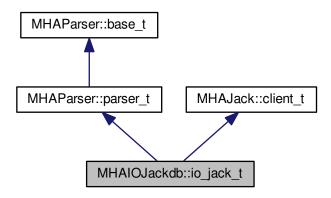

Public Member Functions

- io_jack_t (unsigned int fragsize, float samplerate, IOProcessEvent_t proc_event, void *proc_handle, IOStartedEvent_t start_event, void *start_handle, IOStoppedEvent← _t stop_event, void *stop_handle)
- void prepare (int, int)

Allocate buffers, activate JACK client and install internal ports.

- void release ()
- bool fail_on_async_jackerror () const

Private Member Functions

- int IOProcessEvent inner (mha wave t *sln, mha wave t **sOut)
- void reconnect_inports ()

Connect the input ports when connection variable is accessed.

void reconnect_outports ()

Connect the output ports when connection variable is accessed.

- void get physical input ports ()
- void get_physical_output_ports ()
- void get_all_input_ports ()
- void get all output ports ()
- void read_get_cpu_load ()
- void read_get_xruns ()
- void read_get_scheduler ()
- void set_use_jack_transport ()
- void set locate ()

Static Private Member Functions

static int IOProcessEvent_inner (void *handle, mha_wave_t *sIn, mha_wave_t **s
 — Out)

Private Attributes

- IOProcessEvent_t proc_event
- void * proc handle
- unsigned int mha_fragsize
- float mha_samplerate
- unsigned int fragsize_ratio
- MHAParser::string_t servername
- MHAParser::string_t clientname
- MHAParser::vstring_t connections_in
- MHAParser::vstring_t connections_out
- MHAParser::vstring_t portnames_in
- MHAParser::vstring_t portnames_out
- MHAParser::bool_t fail_on_async_jackerr
- MHAParser::bool_t use_jack_transport
- MHAParser::float_t locate
- MHAParser::float_mon_t server_srate
- MHAParser::int_mon_t server_fragsize
- MHAParser::vstring_mon_t ports_in_physical
- MHAParser::vstring_mon_t ports_out_physical
- MHAParser::vstring_mon_t ports_in_all
- MHAParser::vstring_mon_t ports_out_all
- MHAParser::parser_t ports_parser
- · MHAParser::float mon t state cpuload
- MHAParser::int_mon_t state_xruns
- MHAParser::int mon t state priority
- MHAParser::string_mon_t state_scheduler
- MHAParser::parser_t state_parser
- MHASignal::waveform_t * pwinner_out
- MHAEvents::patchbay_t< io_jack_t > patchbay

Additional Inherited Members

5.198.1 Detailed Description

Main class for JACK IO.

This class registers a JACK client. JACK and framework states are managed by this class.

```
5.198.2.1 io_jack_t::io_jack_t (
                      unsigned int fragsize,
                      float samplerate,
                      IOProcessEvent t proc event,
                      void * proc_handle,
                      IOStartedEvent_t start_event,
                      void * start_handle,
                      IOStoppedEvent t stop event,
                      void * stop_handle )
5.198.3 Member Function Documentation
5.198.3.1 void io_jack_t::prepare (
                      int nch_in,
                      int nch_out )
Allocate buffers, activate JACK client and install internal ports.
5.198.3.2 void io_jack_t::release (
                      void )
5.198.3.3 bool MHAIOJackdb::io_jack_t::fail_on_async_jackerror( ) const [inline]
5.198.3.4 int io_jack_t::IOProcessEvent_inner (
                      void * handle,
                      mha wave t * sln.
                      mha_wave_t ** sOut ) [static], [private]
5.198.3.5 int io_jack_t::IOProcessEvent_inner (
                      mha wave t * sln,
                      mha_wave_t ** sOut ) [private]
5.198.3.6 void io_jack_t::reconnect_inports() [private]
Connect the input ports when connection variable is accessed.
5.198.3.7 void io_jack_t::reconnect_outports() [private]
```

Connect the output ports when connection variable is accessed.

5.198.2 Constructor & Destructor Documentation

```
5.198.3.8 void io_jack_t::get_physical_input_ports() [private]
5.198.3.9 void io_jack_t::get_physical_output_ports( ) [private]
5.198.3.10 void io_jack_t::get_all_input_ports() [private]
5.198.3.11 void io_jack_t::get_all_output_ports( ) [private]
5.198.3.12 void io_jack_t::read_get_cpu_load( ) [private]
5.198.3.13 void io_jack_t::read_get_xruns( ) [private]
5.198.3.14 void io_jack_t::read_get_scheduler( ) [private]
5.198.3.15 void io_jack_t::set_use_jack_transport() [private]
5.198.3.16 void io_jack_t::set_locate() [private]
5.198.4 Member Data Documentation
5.198.4.1 IOProcessEvent_t MHAIOJackdb::io_jack_t::proc_event [private]
5.198.4.2 void* MHAIOJackdb::io_jack_t::proc_handle [private]
5.198.4.3 unsigned int MHAIOJackdb::io_jack_t::mha_fragsize [private]
5.198.4.4 float MHAIOJackdb::io_jack_t::mha_samplerate [private]
5.198.4.5 unsigned int MHAIOJackdb::io_jack_t::fragsize_ratio [private]
5.198.4.6
         MHAParser::string t MHAIOJackdb::io_jack_t::servername [private]
5.198.4.7 MHAParser::string t MHAIOJackdb::io_jack_t::clientname [private]
5.198.4.8 MHAParser::vstring t MHAIOJackdb::io_jack_t::connections_in [private]
5.198.4.9 MHAParser::vstring_t MHAIOJackdb::io_jack_t::connections_out [private]
5.198.4.10 MHAParser::vstring t MHAIOJackdb::io_jack_t::portnames_in [private]
5.198.4.11 MHAParser::vstring_t MHAIOJackdb::io_jack_t::portnames_out [private]
5.198.4.12 MHAParser::bool_t MHAlOJackdb::io_jack_t::fail_on_async_jackerr [private]
```


```
5.198.4.13 MHAParser::bool t MHAIOJackdb::io jack t::use jack transport [private]
5.198.4.14 MHAParser::float t MHAIOJackdb::io_jack_t::locate [private]
5.198.4.15 MHAParser::float mon t MHAIOJackdb::io_jack_t::server_srate [private]
5.198.4.16 MHAParser::int_mon_t MHAIOJackdb::io_jack_t::server_fragsize [private]
5.198.4.17 MHAParser::vstring mon t MHAlOJackdb::io_jack_t::ports_in_physical [private]
5.198.4.18 MHAParser::vstring mon t MHAlOJackdb::io jack t::ports out physical
          [private]
5.198.4.19 MHAParser::vstring mon t MHAIOJackdb::io_jack_t::ports_in_all [private]
5.198.4.20 MHAParser::vstring_mon_t MHAlOJackdb::io_jack_t::ports_out_all [private]
5.198.4.21 MHAParser::parser t MHAIOJackdb::io jack t::ports parser [private]
5.198.4.22 MHAParser::float mon t MHAIOJackdb::io_jack_t::state_cpuload [private]
5.198.4.23 MHAParser::int mon t MHAIOJackdb::io jack t::state xruns [private]
5.198.4.24 MHAParser::int_mon_t MHAIOJackdb::io_jack_t::state_priority [private]
5.198.4.25 MHAParser::string mon t MHAIOJackdb::io jack t::state scheduler [private]
5.198.4.26 MHAParser::parser t MHAlOJackdb::io_jack_t::state_parser [private]
5.198.4.27 MHASignal::waveform_t* MHAIOJackdb::io_jack_t::pwinner_out [private]
5.198.4.28 MHAEvents::patchbay_t<io_jack_t> MHAIOJackdb::io_jack_t::patchbay
          [private]
```

The documentation for this class was generated from the following file:

MHAIOJackdb.cpp

5.199 MHAIOPortAudio::device_info_t Class Reference

Inheritance diagram for MHAIOPortAudio::device_info_t:

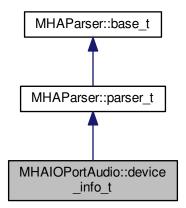

Public Member Functions

- device_info_t ()
- void fill_info ()

Public Attributes

- MHAParser::int_mon_t numDevices
- MHAParser::vint_mon_t structVersion
- MHAParser::vstring_mon_t name
- MHAParser::vint_mon_t hostApi
- MHAParser::vint_mon_t maxInputChannels
- MHAParser::vint_mon_t maxOutputChannels
- MHAParser::vfloat_mon_t defaultLowInputLatency
- MHAParser::vfloat_mon_t defaultLowOutputLatency
- MHAParser::vfloat_mon_t defaultHighInputLatency
- MHAParser::vfloat_mon_t defaultHighOutputLatency
- MHAParser::vfloat_mon_t defaultSampleRate

Additional Inherited Members


```
5.199.1 Constructor & Destructor Documentation
5.199.1.1 MHAIOPortAudio::device info t::device info t( ) [inline]
5.199.2 Member Function Documentation
5.199.2.1 void MHAIOPortAudio::device_info_t::fill_info() [inline]
5.199.3 Member Data Documentation
5.199.3.1 MHAParser::int mon t MHAIOPortAudio::device_info_t::numDevices
5.199.3.2 MHAParser::vint_mon_t MHAIOPortAudio::device_info_t::structVersion
5.199.3.3 MHAParser::vstring mon t MHAIOPortAudio::device info t::name
5.199.3.4 MHAParser::vint mon t MHAIOPortAudio::device_info_t::hostApi
5.199.3.5 MHAParser::vint_mon_t MHAIOPortAudio::device_info_t::maxInputChannels
5.199.3.6 MHAParser::vint mon t MHAIOPortAudio::device info t::maxOutputChannels
5.199.3.7 MHAParser::vfloat_mon_t MHAIOPortAudio::device_info_t::defaultLowInputLatency
5.199.3.8 MHAParser::vfloat mon t MHAIOPortAudio::device_info_t::defaultLowOutputLatency
5.199.3.9 MHAParser::vfloat mon t MHAIOPortAudio::device_info_t::defaultHighInputLatency
5.199.3.10 MHAParser::vfloat_mon_t MHAIOPortAudio::device_info_t::defaultHighOutputLatency
5.199.3.11 MHAParser::vfloat_mon_t MHAIOPortAudio::device_info_t::defaultSampleRate
The documentation for this class was generated from the following file:
```

MHAIOPortAudio.cpp

5.200 MHAIOPortAudio::io_portaudio_t Class Reference

Main class for Portaudio sound IO.

Inheritance diagram for MHAIOPortAudio::io_portaudio_t:

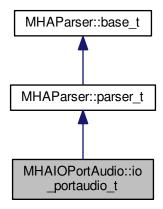

Public Member Functions

- io_portaudio_t (unsigned int fragsize, float samplerate, IOProcessEvent_t proc_⇔ event, void *proc_handle, IOStartedEvent_t start_event, void *start_handle, IO⇔ StoppedEvent_t stop_event, void *stop_handle)
- void device_name_updated ()
- void device_index_updated ()
- ~io portaudio t ()
- void cmd_prepare (int, int)
- void cmd_start ()
- void cmd_stop ()
- void cmd_release ()
- int **portaudio_callback** (const void *input, void *output, unsigned long frame_count, const PaStreamCallbackTimeInfo *time_info, PaStreamCallbackFlags status_flags)

Private Attributes

- · device_info_t device_info
- MHASignal::waveform_t * s_in
- mha_wave_t * s_out
- float samplerate
- unsigned int nchannels_out
- · unsigned int nchannels_in

- · unsigned int fragsize
- IOProcessEvent_t proc_event
- void * proc handle
- IOStartedEvent_t start_event
- void * start handle
- IOStoppedEvent_t stop_event
- void * stop_handle
- PaStream * portaudio_stream
- MHAParser::string_t device_name
- MHAParser::int_t device_index
- MHAEvents::patchbay_t< io_portaudio_t > patchbay

```
Additional Inherited Members
```

```
5.200.1 Detailed Description
```

Main class for Portaudio sound IO.

```
5.200.2 Constructor & Destructor Documentation
```

```
5.200.2.2 MHAIOPortAudio::io portaudio t::~io portaudio t() [inline]
```

5.200.3 Member Function Documentation

```
5.200.3.1 void MHAIOPortAudio::io_portaudio_t::device_name_updated( ) [inline]
```

5.200.3.2 void MHAIOPortAudio::io_portaudio_t::device_index_updated() [inline]

5.200.3.4 void MHAIOPortAudio::io_portaudio_t::cmd_start ()

```
5.200.3.5 void MHAIOPortAudio::io_portaudio_t::cmd_stop ( )
5.200.3.6 void MHAIOPortAudio::io portaudio t::cmd release ( )
5.200.3.7 int MHAIOPortAudio::io_portaudio_t::portaudio_callback (
                      const void * input,
                      void * output.
                      unsigned long frame_count,
                      const PaStreamCallbackTimeInfo * time info,
                      PaStreamCallbackFlags status_flags )
5.200.4 Member Data Documentation
5.200.4.1 device_info_t MHAIOPortAudio::io_portaudio_t::device_info [private]
5.200.4.2 MHASignal::waveform t* MHAIOPortAudio::io_portaudio_t::s_in [private]
5.200.4.3 mha wave t* MHAIOPortAudio::io_portaudio_t::s_out [private]
5.200.4.4 float MHAIOPortAudio::io_portaudio_t::samplerate [private]
5.200.4.5 unsigned int MHAIOPortAudio::io_portaudio_t::nchannels_out [private]
5.200.4.6 unsigned int MHAIOPortAudio::io_portaudio_t::nchannels_in [private]
5.200.4.7 unsigned int MHAIOPortAudio::io portaudio t::fragsize [private]
5.200.4.8 IOProcessEvent_t MHAIOPortAudio::io_portaudio_t::proc_event [private]
5.200.4.9 void* MHAIOPortAudio::io_portaudio_t::proc_handle [private]
5.200.4.10 IOStartedEvent_t MHAIOPortAudio::io_portaudio_t::start_event [private]
5.200.4.11 void* MHAIOPortAudio::io_portaudio_t::start_handle [private]
5.200.4.12 IOStoppedEvent tMHAIOPortAudio::io_portaudio_t::stop_event [private]
5.200.4.13 void* MHAIOPortAudio::io_portaudio_t::stop_handle [private]
5.200.4.14 PaStream * MHAIOPortAudio::io_portaudio_t::portaudio_stream [private]
5.200.4.15 MHAParser::string t MHAlOPortAudio::io_portaudio_t::device_name [private]
5.200.4.16 MHAParser::int_t MHAIOPortAudio::io_portaudio_t::device_index [private]
5.200.4.17
          MHAEvents::patchbay_t<io_portaudio_t> MHAIOPortAudio::io_portaudio_t \leftarrow
           ::patchbay [private]
```


The documentation for this class was generated from the following file:

MHAIOPortAudio.cpp

5.201 MHAJack::client_avg_t Class Reference

Generic JACK client for averaging a system response across time.

Inheritance diagram for MHAJack::client_avg_t:

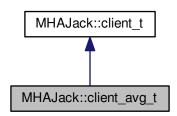

Public Member Functions

- client_avg_t (const std::string &name, const unsigned int &nrep_)
 Constructor for averaging client.
- void io (mha_wave_t *s_out, mha_wave_t *s_in, const std::vector< std::string
 &p_out, const std::vector< std::string
 &p_in, float *srate=NULL, unsigned int *fragsize=NULL)

Recording function.

Private Member Functions

- void proc (mha_wave_t *sIn, mha_wave_t **sOut)
- void IOStoppedEvent ()

Static Private Member Functions

- static int proc (void *handle, mha_wave_t *sln, mha_wave_t **sOut)
- static void IOStoppedEvent (void *handle, int proc_err, int io_err)

Private Attributes

- bool b_stopped
- unsigned int pos
- mha_wave_t * sn_in
- mha wave t * sn out
- std::string name
- MHASignal::waveform_t * frag_out
- const unsigned int nrep
- unsigned int **n**
- bool b_ready

Additional Inherited Members

5.201.1 Detailed Description

Generic JACK client for averaging a system response across time.

5.201.2 Constructor & Destructor Documentation

Constructor for averaging client.

Parameters

name⊷	Name of JACK client
_ nrep⊷	Number of repetitions
_	

5.201.3 Member Function Documentation

Recording function.

long-description

Parameters

is_out	Input (test) signal, which will be repeated
is_in	System response (averaged, same length as input required)
p_out	Ports to play back the test signal
p_in	Ports to record from the system response
srate	Pointer to sampling rate variable, will be filled with server sampling rate
fragsize	Pointer to fragment size variable, will be filled with server fragment size

```
5.201.3.2 int MHAJack::client_avg_t::proc (
                     void * handle,
                     mha wave_t * sln,
                     mha_wave_t ** sOut ) [static], [private]
5.201.3.3 void MHAJack::client_avg_t::IOStoppedEvent (
                     void * handle,
                     int proc err,
                     int io_err ) [static], [private]
5.201.3.4 void MHAJack::client_avg_t::proc (
                     mha wave t * sln,
                     mha_wave_t ** sOut ) [private]
5.201.3.5 void MHAJack::client_avg_t::IOStoppedEvent() [private]
5.201.4 Member Data Documentation
5.201.4.1 bool MHAJack::client_avg_t::b_stopped [private]
5.201.4.2 unsigned int MHAJack::client_avg_t::pos [private]
5.201.4.3 mha_wave_t* MHAJack::client_avg_t::sn_in [private]
5.201.4.4 mha wave t* MHAJack::client_avg_t::sn_out [private]
5.201.4.5 std::string MHAJack::client_avg_t::name [private]
5.201.4.6 MHASignal::waveform_t* MHAJack::client_avg_t::frag_out [private]
5.201.4.7 const unsigned int MHAJack::client_avg_t::nrep [private]
5.201.4.8 unsigned int MHAJack::client_avg_t::n [private]
5.201.4.9 bool MHAJack::client_avg_t::b_ready [private]
```


The documentation for this class was generated from the following files:

- · mhajack.h
- mhajack.cpp

5.202 MHAJack::client_noncont_t Class Reference

Generic client for synchronous playback and recording of waveform fragments.

Inheritance diagram for MHAJack::client_noncont_t:

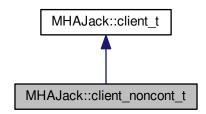

Public Member Functions

- client_noncont_t (const std::string &name, bool use_jack_transport=false)
- void io (mha_wave_t *s_out, mha_wave_t *s_in, const std::vector< std::string > &p_out, const std::vector< std::string > &p_in, float *srate=NULL, unsigned int *fragsize=NULL)

Private Member Functions

- void proc (mha_wave_t *sIn, mha_wave_t **sOut)
- void IOStoppedEvent ()

Static Private Member Functions

- static int proc (void *handle, mha_wave_t *sln, mha_wave_t **sOut)
- static void **IOStoppedEvent** (void *handle, int proc err, int io err)

Private Attributes

- bool b_stopped
- unsigned int pos
- mha_wave_t * sn_in
- mha_wave_t * sn_out
- std::string name
- MHASignal::waveform_t * frag_out

Additional Inherited Members

```
5.202.1 Detailed Description
```

Generic client for synchronous playback and recording of waveform fragments.

```
5.202.2 Constructor & Destructor Documentation
5.202.2.1 MHAJack::client_noncont_t::client_noncont_t (
                      const std::string & name,
                      bool use_jack_transport = false )
5.202.3 Member Function Documentation
5.202.3.1 void MHAJack::client_noncont_t::io (
                      mha wave t * s out,
                      mha wave t * s in,
                      const std::vector< std::string > & p_out,
                      const std::vector< std::string > & p_in,
                      float * srate = NULL,
                      unsigned int * fragsize = NULL )
5.202.3.2 int MHAJack::client noncont t::proc (
                      void * handle,
                      mha wave t * sln,
                      mha wave t ** sOut ) [static], [private]
5.202.3.3 void MHAJack::client_noncont_t::IOStoppedEvent (
                      void * handle,
                      int proc_err,
                      int io_err ) [static], [private]
5.202.3.4 void MHAJack::client_noncont_t::proc (
                      mha wave t * sln.
                      mha wave t ** sOut ) [private]
5.202.3.5 void MHAJack::client_noncont_t::lOStoppedEvent() [private]
5.202.4 Member Data Documentation
5.202.4.1 bool MHAJack::client_noncont_t::b_stopped [private]
5.202.4.2 unsigned int MHAJack::client_noncont_t::pos [private]
```

```
5.202.4.3 mha_wave_t* MHAJack::client_noncont_t::sn_in [private]
```

5.202.4.4 mha_wave_t* **MHAJack::client_noncont_t::sn_out** [private]

5.202.4.5 std::string MHAJack::client_noncont_t::name [private]

5.202.4.6 MHASignal::waveform_t* MHAJack::client_noncont_t::frag_out [private]


The documentation for this class was generated from the following files:

- · mhajack.h
- mhajack.cpp

5.203 MHAJack::client_t Class Reference

Generic asynchronous JACK client.

Inheritance diagram for MHAJack::client_t:

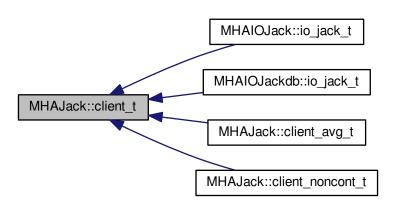

Public Member Functions

- client_t (IOProcessEvent_t proc_event, void *proc_handle=NULL, IOStartedEvent
 _t start_event=NULL, void *start_handle=NULL, IOStoppedEvent_t stop_event=N
 ULL, void *stop_handle=NULL, bool use_jack_transport=false)
- void **prepare** (const std::string &client_name, const unsigned int &**nchannels_in**, const unsigned int &**nchannels_out**)

Allocate buffers, activate JACK client and install internal ports.

void prepare (const std::string &server_name, const std::string &client_name, const unsigned int &nchannels_in, const unsigned int &nchannels_out)

Allocate buffers, ports, and activates JACK client.

void release ()

Remove JACK client and deallocate internal ports and buffers.

- void start (bool fail_on_async_jack_error=true)
- void stop ()
- void connect_input (const std::vector< std::string > &)

Connect the input ports when connection variable is accessed.

void connect_output (const std::vector< std::string > &)

Connect the output ports when connection variable is accessed.

- unsigned int get_fragsize () const
- float get srate () const
- unsigned long **get xruns** ()
- unsigned long get xruns reset ()
- std::string **str error** (int err)
- void get_ports (std::vector< std::string > &, unsigned long jack_flags)
 Get a list of Jack ports.
- std::vector< std::string > get_my_input_ports ()
- std::vector< std::string > get_my_output_ports ()
- void **set input portnames** (const std::vector< std::string > &)
- void set output portnames (const std::vector< std::string > &)
- float get_cpu_load ()
- void set use jack transport (bool ut)

Protected Attributes

• jack_client_t * jc

Private Member Functions

void prepare_impl (const char *server_name, const char *client_name, const unsigned int &nchannels_in, const unsigned int &nchannels_out)

Allocate buffers, activate JACK client and allocates jack ports Registers the jack client with the given server and activates it.

- void internal start ()
- void internal_stop ()
- void stopped (int, int)
- int jack_proc_cb (jack_nframes_t)

This is the main processing callback.

• int jack_xrun_cb ()

Static Private Member Functions

- static int jack_proc_cb (jack_nframes_t, void *)
- static int jack_xrun_cb (void *)

Private Attributes

- unsigned long num_xruns
- unsigned int fragsize
- float samplerate
- unsigned int nchannels_in
- unsigned int nchannels_out
- IOProcessEvent_t proc_event
- void * proc handle
- IOStartedEvent_t start_event
- void * start_handle
- IOStoppedEvent_t stop_event
- void * stop_handle
- MHASignal::waveform_t * s_in
- mha_wave_t * s_out
- MHAJack::port t ** inch
- MHAJack::port_t ** outch
- · unsigned int flags
- bool b_prepared
- bool use_jack_transport
- jack_transport_state_t jstate_prev
- std::vector< std::string > input portnames
- std::vector< std::string > output portnames
- bool fail_on_async_jackerror

5.203.1 Detailed Description

Generic asynchronous JACK client.

5.203.2 Constructor & Destructor Documentation

```
5.203.2.1 MHAJack::client t::client t (
```

```
IOProcessEvent_t proc_event, void * proc_handle = NULL,
```

IOStartedEvent t start event = NULL,

void * start handle = NULL,

IOStoppedEvent_t stop_event = NULL,

void * stop_handle = NULL,
bool use_jack_transport = false)

5.203.3 Member Function Documentation

```
5.203.3.1 void MHAJack::client_t::prepare (
```

const std::string & client_name, const unsigned int & nch_in, const unsigned int & nch_out)

Allocate buffers, activate JACK client and install internal ports.

Registers the jack client with the default jack server and activates it.

Parameters

client_name	Name of this jack client
nch_in	Input ports to register
nch_out	Output ports to register

Allocate buffers, ports, and activates JACK client.

Registers the jack client with specified jack server and activates it.

Parameters

server_name	r_name Name of the jack server to register with	
client_name	Name of this jack client	
nch_in	Input ports to register	
nch_out	Output ports to register	

```
5.203.3.3 void MHAJack::client_t::release ( void )
```

Remove JACK client and deallocate internal ports and buffers.

Connect the input ports when connection variable is accessed.

Connect the output ports when connection variable is accessed.

Get a list of Jack ports.

Parameters

res	Result string vector
jack_flags	Jack port flags (JackPortInput etc.)

Allocate buffers, activate JACK client and allocates jack ports Registers the jack client with the given server and activates it.

Parameters

server_name	Name of the jack server to register with
client_name	Name of this jack client
nch_in	Input ports to register
nch_out	Output ports to register

```
5.203.3.21 void MHAJack::client_t::internal_start() [private]
5.203.3.22 void MHAJack::client_t::internal_stop( ) [private]
5.203.3.23 void MHAJack::client_t::stopped (
                       int proc_err,
                       int io_err ) [private]
5.203.3.24 int MHAJack::client_t::jack_proc_cb (
                       jack_nframes_t n,
                       void * h ) [static], [private]
5.203.3.25 int MHAJack::client_t::jack_proc_cb (
                       jack_nframes_t n ) [private]
This is the main processing callback.
Here happens double buffering and downsampling.
5.203.3.26 int MHAJack::client_t::jack_xrun_cb (
                       void * h ) [static], [private]
5.203.3.27 int MHAJack::client_t::jack_xrun_cb() [inline], [private]
5.203.4 Member Data Documentation
5.203.4.1
         unsigned long MHAJack::client_t::num_xruns [private]
5.203.4.2 unsigned int MHAJack::client_t::fragsize [private]
5.203.4.3 float MHAJack::client_t::samplerate [private]
5.203.4.4 unsigned int MHAJack::client t::nchannels in [private]
5.203.4.5 unsigned int MHAJack::client_t::nchannels_out [private]
5.203.4.6 IOProcessEvent_t MHAJack::client_t::proc_event [private]
```

```
5.203.4.7 void* MHAJack::client_t::proc_handle [private]
5.203.4.8 IOStartedEvent_t MHAJack::client_t::start_event [private]
5.203.4.9 void* MHAJack::client_t::start_handle [private]
5.203.4.10 IOStoppedEvent_t MHAJack::client_t::stop_event [private]
5.203.4.11 void* MHAJack::client_t::stop_handle [private]
5.203.4.12 MHASignal::waveform_t* MHAJack::client_t::s_in [private]
5.203.4.13 mha_wave_t* MHAJack::client_t::s_out [private]
5.203.4.14 MHAJack::port_t** MHAJack::client_t::inch [private]
5.203.4.15 MHAJack::port_t** MHAJack::client_t::outch [private]
5.203.4.16 jack_client_t* MHAJack::client_t::jc [protected]
5.203.4.17 unsigned int MHAJack::client_t::flags [private]
5.203.4.18 bool MHAJack::client_t::b_prepared [private]
5.203.4.19 bool MHAJack::client_t::use_jack_transport [private]
5.203.4.20 jack_transport_state_t MHAJack::client_t::jstate_prev [private]
5.203.4.21 std::vector<std::string> MHAJack::client_t::input_portnames [private]
5.203.4.22 std::vector<std::string> MHAJack::client_t::output_portnames [private]
5.203.4.23 bool MHAJack::client_t::fail_on_async_jackerror [private]
```

The documentation for this class was generated from the following files:

- mhajack.h
- mhajack.cpp

5.204 MHAJack::port t Class Reference

Class for one channel/port.

Public Types

```
Public Member Functions
```

```
    port_t (jack_client_t *jc, dir_t dir, int id)
```

• port_t (jack_client_t *jc, dir_t dir, const std::string &id)

Constructor to create port with specific name.

• ~port t()

- void read (mha wave t *s, unsigned int ch)
- void write (mha_wave_t *s, unsigned int ch)
- void **mute** (unsigned int n)
- void **connect_to** (const char *pn)
- const char * get_short_name ()

Return the port name.

Private Attributes

```
· dir_t dir_type
```

- jack_port_t * port
- jack_default_audio_sample_t * iob
- jack client t * jc

5.204.1 Detailed Description

Class for one channel/port.

This class represents one JACK port. Double buffering for asynchronous process callbacks is managed by this class.

```
5.204.2 Member Enumeration Documentation
```

```
5.204.2.1 enum MHAJack::port_t::dir_t
```

Enumerator

input

output

5.204.3 Constructor & Destructor Documentation

Parameters

jc	JACK client.
dir	Direction (input/output).
id	Number in port name (starting with 1).

Constructor to create port with specific name.

Parameters

jc	JACK client.
dir	Direction (input/output).
id	Port name.

```
5.204.3.3 MHAJack::port_t::~port_t ( )
```

5.204.4 Member Function Documentation

Parameters

s	Signal structure to store the audio data.
ch	Channel number in audio data structure to be used.

```
5.204.4.2 void MHAJack::port_t::write ( mha_wave_t * s, unsigned int ch )
```

Parameters

s	Signal structure from which the audio data is read.
ch	Channel number in audio data structure to be used.

```
5.204.4.3 void MHAJack::port_t::mute ( unsigned int n )
```

Parameters

n Number of samples to be muted (must be the same as reported by Jack processing callback).

```
5.204.4.4 void MHAJack::port_t::connect_to ( const char * pn )
```

Parameters

pn | Port name to connect to

```
5.204.4.5 const char * MHAJack::port_t::get_short_name ( )
```

Return the port name.

5.204.5 Member Data Documentation

```
5.204.5.1 dir_t MHAJack::port_t::dir_type [private]
```

```
5.204.5.2 jack_port_t* MHAJack::port_t::port [private]
```

5.204.5.3 jack_default_audio_sample_t* MHAJack::port_t::iob [private]


5.204.5.4 jack_client_t* MHAJack::port_t::jc [private]

The documentation for this class was generated from the following files:

- · mhajack.h
- · mhajack.cpp

5.205 MHAKernel::algo_comm_class_t Class Reference

Inheritance diagram for MHAKernel::algo_comm_class_t:

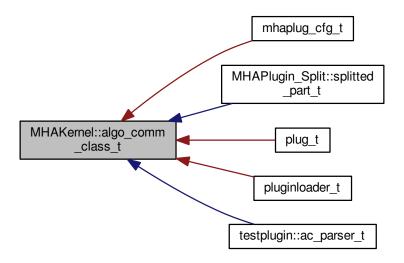

Public Member Functions

- algo_comm_class_t ()
- virtual ~algo comm class t ()
- algo_comm_t get_c_handle ()
- virtual void local_insert_var (const char *, comm_var_t)
- virtual void local_remove_var (const char *)
- virtual void local_remove_ref (void *)
- virtual bool local_is_var (const char *)
- virtual void local_get_var (const char *, comm_var_t *)
- virtual std::string local get entries ()
- virtual comm_var_map_t::size_type size () const

Static Public Member Functions

- static int insert_var (void *, const char *, comm_var_t)
- static int insert_var_int (void *, const char *, int *)
- static int insert_var_float (void *, const char *, float *)
- static int remove_var (void *, const char *)
- static int remove_ref (void *, void *)
- static int is_var (void *, const char *)
- static int get_var (void *, const char *, comm_var_t *)
- static int get_var_int (void *, const char *, int *)
- static int get_var_float (void *, const char *, float *)
- static int get entries (void *, char *, unsigned int)
- static const char * get_error (int)

Public Attributes

• char * algo_comm_id_string

Private Attributes

```
· algo comm tac
```

- int algo_comm_id_string_len
- · comm var map t vars

```
5.205.1 Constructor & Destructor Documentation
```

```
5.205.1.1 MHAKernel::algo_comm_class_t::algo_comm_class_t ( )
```

```
5.205.1.2 MHAKernel::algo_comm_class_t::~algo_comm_class_t( ) [virtual]
```

```
5.205.2 Member Function Documentation
```

```
5.205.2.1 algo_comm_t MHAKernel::algo_comm_class_t::get_c_handle ( )
```

```
const char * name,
int * ivar ) [static]
```

```
5.205.2.4 \quad int \ MHAKernel:: algo\_comm\_class\_t:: insert\_var\_float \ (
```

```
void * handle,
const char * name,
float * ivar ) [static]
```

```
5.205.2.5 int MHAKernel::algo_comm_class_t::remove_var ( void * handle,
```

```
const char * name ) [static]
```

5.205.2.6 int MHAKernel::algo_comm_class_t::remove_ref (void * handle,

```
void * ref ) [static]
```

```
5.205.2.7 int MHAKernel::algo_comm_class_t::is_var (
                      void * handle,
                      const char * name ) [static]
5.205.2.8 int MHAKernel::algo_comm_class_t::get_var (
                      void * handle.
                      const char * name,
                      comm var t * var ) [static]
5.205.2.9 int MHAKernel::algo_comm_class_t::get_var_int (
                      void * handle.
                      const char * name,
                      int * ivar ) [static]
5.205.2.10 int MHAKernel::algo comm class t::get var float (
                       void * handle,
                       const char * name.
                       float * ivar ) [static]
5.205.2.11 int MHAKernel::algo_comm_class_t::get_entries (
                       void * handle.
                       char * ret.
                       unsigned int len ) [static]
5.205.2.12 const char * MHAKernel::algo_comm_class_t::get_error (
                       int e ) [static]
5.205.2.13 void MHAKernel::algo comm class t::local insert var (
                       const char * name,
                       comm_var_t var ) [virtual]
5.205.2.14 void MHAKernel::algo_comm_class_t::local_remove_var (
                       const char * name ) [virtual]
5.205.2.15 void MHAKernel::algo_comm_class_t::local_remove_ref (
                       void * addr ) [virtual]
5.205.2.16 bool MHAKernel::algo_comm_class_t::local_is_var (
                       const char * name ) [virtual]
5.205.2.17 void MHAKernel::algo_comm_class_t::local_get_var (
                       const char * name,
                       comm_var_t * var ) [virtual]
5.205.2.18 std::string MHAKernel::algo_comm_class_t::local_get_entries() [virtual]
```

```
5.205.2.19 MHAKernel::comm_var_map_t::size_type MHAKernel::algo_comm_class_t::size ( ) const
           [virtual]
5.205.3 Member Data Documentation
5.205.3.1
         char* MHAKernel::algo_comm_class_t::algo_comm_id_string
5.205.3.2 algo_comm_t MHAKernel::algo_comm_class_t::ac [private]
5.205.3.3 int MHAKernel::algo_comm_class_t::algo_comm_id_string_len [private]
5.205.3.4
        comm_var_map_t MHAKernel::algo_comm_class_t::vars [private]
The documentation for this class was generated from the following files:
   · mha_algo_comm.hh
   mha_algo_comm.cpp
5.206
       MHAKernel::comm_var_map_t Class Reference
Inherits map< std::string, comm_var_t >.
Public Member Functions

    bool has key (const std::string &name)

5.206.1 Member Function Documentation
```

The documentation for this class was generated from the following file:

const std::string & name) [inline]


5.206.1.1 bool MHAKernel::comm_var_map_t::has_key (

mha_algo_comm.hh

5.207 MHAMultiSrc::base_t Class Reference

Base class for source selection.

Inheritance diagram for MHAMultiSrc::base_t:

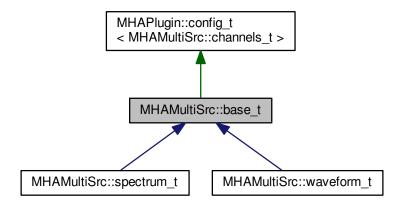

Public Member Functions

- base_t (algo_comm_t iac)
- void select_source (const std::vector< std::string > &src, int in_channels)
 Change the selection of input sources.

Protected Attributes

· algo_comm_t ac

Additional Inherited Members

5.207.1 Detailed Description

Base class for source selection.

See also

MHAMultiSrc::channel_t (p. 574) MHAMultiSrc::channels_t (p. 575)

5.207.2 Constructor & Destructor Documentation

```
5.207.2.1 MHAMultiSrc::base_t::base_t (
algo comm t iac )
```

5.207.3 Member Function Documentation

Change the selection of input sources.

This function is real-time and thread safe.

Parameters

src	List of input sources
in_channels	Number of input channels in direct input (the processed signal)

5.207.4 Member Data Documentation

```
5.207.4.1 algo_comm_t MHAMultiSrc::base_t::ac [protected]
```

The documentation for this class was generated from the following files:

- · mha_multisrc.h
- mha_multisrc.cpp

5.208 MHAMultiSrc::channel_t Class Reference

Public Attributes

- std::string name
- int channel

5.208.1 Member Data Documentation

5.208.1.1 std::string MHAMultiSrc::channel_t::name

5.208.1.2 int MHAMultiSrc::channel_t::channel

The documentation for this class was generated from the following file:

· mha_multisrc.h

5.209 MHAMultiSrc::channels_t Class Reference

Inherits vector< MHAMultiSrc::channel_t >.

Public Member Functions

• channels_t (const std::vector< std::string > &src, int in_channels)

Separate a list of input sources into a parsable channel list.

5.209.1 Constructor & Destructor Documentation

Separate a list of input sources into a parsable channel list.

The number of input channels if verified, a list of **MHAMultiSrc::channel_t** (p. 574) is filled.

Parameters


route	vector of source channel ids
in_channels	number of channels in the processed input signal

The documentation for this class was generated from the following files:

- · mha multisrc.h
- mha_multisrc.cpp

5.210 MHAMultiSrc::spectrum_t Class Reference

Inheritance diagram for MHAMultiSrc::spectrum_t:

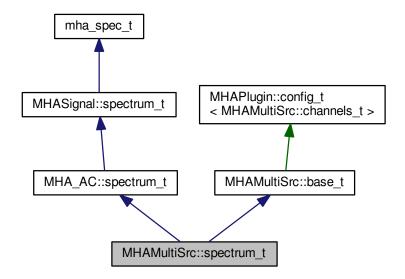

Public Member Functions

- spectrum_t (algo_comm_t iac, std::string name, unsigned int frames, unsigned int channels)
- mha_spec_t * update (mha_spec_t *s)

Update data of spectrum to hold actual input data.

Additional Inherited Members

5.210.1 Constructor & Destructor Documentation

5.210.2 Member Function Documentation

Update data of spectrum to hold actual input data.

Parameters

s Input signal chunk

Returns


Return pointer to spectrum structure

The documentation for this class was generated from the following files:

- · mha_multisrc.h
- · mha_multisrc.cpp

5.211 MHAMultiSrc::waveform_t Class Reference

Inheritance diagram for MHAMultiSrc::waveform_t:

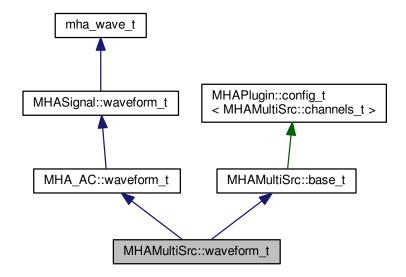

Public Member Functions

- waveform_t (algo_comm_t iac, std::string name, unsigned int frames, unsigned int channels)
- mha_wave_t * update (mha_wave_t *s)

Update data of waveform to hold actual input data.

Additional Inherited Members

```
5.211.1 Constructor & Destructor Documentation
```

5.211.2 Member Function Documentation

```
5.211.2.1 mha_wave_t * MHAMultiSrc::waveform_t::update ( mha_wave_t * s )
```

Update data of waveform to hold actual input data.

Parameters

```
s Input signal chunk
```

Returns

Return pointer to waveform structure

The documentation for this class was generated from the following files:

- · mha multisrc.h
- mha_multisrc.cpp

5.212 MHAOvIFilter::band_descriptor_t Class Reference

Public Attributes

```
mha_real_t cf_l
```

- mha_real_t ef_l
- mha_real_t cf
- · mha real tef h
- mha_real_t cf_h
- bool low side flat
- bool high_side_flat

5.212.1 Member Data Documentation

5.212.1.1 mha real t MHAOvlFilter::band descriptor t::cf l

5.212.1.2 mha_real_t MHAOvlFilter::band_descriptor_t::ef_l

5.212.1.3 mha_real_t MHAOvlFilter::band_descriptor_t::cf

5.212.1.4 mha_real_t MHAOvlFilter::band_descriptor_t::ef_h

5.212.1.5 mha_real_t MHAOvlFilter::band_descriptor_t::cf_h

5.212.1.6 bool MHAOvlFilter::band_descriptor_t::low_side_flat


5.212.1.7 bool MHAOvlFilter::band_descriptor_t::high_side_flat

The documentation for this class was generated from the following file:

· mha_fftfb.hh

5.213 MHAOvlFilter::barkscale::bark2hz_t Class Reference

Inheritance diagram for MHAOvIFilter::barkscale::bark2hz_t:

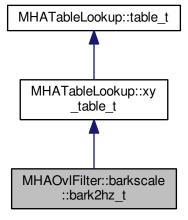

Public Member Functions

- bark2hz_t ()
- ~bark2hz_t ()


Additional Inherited Members

- 5.213.1 Constructor & Destructor Documentation
- 5.213.1.1 MHAOvlFilter::barkscale::bark2hz_t::bark2hz_t ()
- 5.213.1.2 MHAOvlFilter::barkscale::bark2hz_t::~bark2hz_t ()

The documentation for this class was generated from the following file:

- · mha_fftfb.cpp
- 5.214 MHAOvlFilter::barkscale::hz2bark_t Class Reference

Inheritance diagram for MHAOvIFilter::barkscale::hz2bark_t:

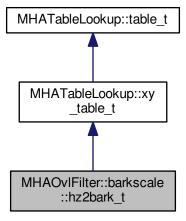

Public Member Functions

- hz2bark_t ()
- ~hz2bark_t ()

Additional Inherited Members

```
5.214.1 Constructor & Destructor Documentation
```

```
5.214.1.1 MHAOvlFilter::barkscale::hz2bark_t::hz2bark_t ( )
```

```
5.214.1.2 MHAOvlFilter::barkscale::hz2bark_t::~hz2bark_t ( )
```

The documentation for this class was generated from the following file:

· mha_fftfb.cpp

```
5.215 MHAOvlFilter::fftfb_ac_info_t Class Reference
```

Public Member Functions

- fftfb_ac_info_t (const MHAOvIFilter::fftfb_t &fb, algo_comm_t ac, const std::string &prefix)
- void **insert** ()

Private Attributes

MHA_AC::waveform_t cfv

vector of nominal center frequencies / Hz

MHA_AC::waveform_t efv

vector of edge frequencies / Hz

MHA_AC::waveform_t bwv

vector of band-weigths (sum of squared fft-bin-weigths)/num_frames

MHA_AC::waveform_t cLTASS

vector of LTASS correction

```
5.215.1 Constructor & Destructor Documentation
```

5.215.2 Member Function Documentation

```
5.215.2.1 void MHAOvlFilter::fftfb_ac_info_t::insert()
```

5.215.3 Member Data Documentation

5.215.3.1 MHA AC::waveform t MHAOvlFilter::fftfb_ac_info_t::cfv [private]

vector of nominal center frequencies / Hz

5.215.3.2 MHA_AC::waveform_t MHAOvlFilter::fftfb_ac_info_t::efv [private]

vector of edge frequencies / Hz

5.215.3.3 MHA_AC::waveform_t MHAOvlFilter::fftfb_ac_info_t::bwv [private]

vector of band-weigths (sum of squared fft-bin-weigths)/num_frames

5.215.3.4 MHA_AC::waveform_t MHAOvlFilter::fftfb_ac_info_t::cLTASS [private]

vector of LTASS correction

The documentation for this class was generated from the following files:

- · mha fftfb.hh
- mha_fftfb.cpp

5.216 MHAOvIFilter::fftfb_t Class Reference

FFT based overlapping filter bank.

Inheritance diagram for MHAOvIFilter::fftfb t:



Public Member Functions

- fftfb_t (MHAOvlFilter::fftfb_vars_t &par, unsigned int nfft, mha_real_t fs)

 Constructor for a FFT-based overlapping filter bank.
- ~fftfb t ()
- void apply_gains (mha_spec_t *s_out, const mha_spec_t *s_in, const mha_wave_t *gains)
- void get_fbpower (mha_wave_t *fbpow, const mha_spec_t *s_in)
- void get fbpower db (mha wave t *fbpow, const mha spec t *s in)
- std::vector< mha_real_t > get_ltass_gain_db () const
- unsigned int bin1 (unsigned int band) const

Return index of first non-zero filter shape window.

unsigned int bin2 (unsigned int band) const

Return index of first zero filter shape window above center frequency.

• unsigned int get_fftlen () const

Return fft length.

mha_real_t w (unsigned int k, unsigned int b) const

Return filter shape window at index k in band b.

Private Attributes

- unsigned int * vbin1
- unsigned int * vbin2
- mha_real_t(* shape)(mha_real_t)
- unsigned int fftlen
- mha_real_t samplingrate

Additional Inherited Members

5.216.1 Detailed Description

FFT based overlapping filter bank.

5.216.2 Constructor & Destructor Documentation

Constructor for a FFT-based overlapping filter bank.

Parameters

par	Parameters for the FFT filterbank that can not be deduced from the signal dimensions are taken from this set of configuration variables.
nfft	FFT length
fs	Sampling rate / Hz

```
5.216.2.2 MHAOvlFilter::fftfb_t::\simfftfb_t ( )
```

5.216.3 Member Function Documentation

Return filter shape window at index k in band b.

Parameters

k	Frequency index
b	Band index

```
5.216.4 Member Data Documentation
```

```
5.216.4.1 unsigned int* MHAOvlFilter::fftfb_t::vbin1 [private]
5.216.4.2 unsigned int* MHAOvlFilter::fftfb_t::vbin2 [private]
5.216.4.3 mha_real_t(* MHAOvlFilter::fftfb_t::shape) (mha_real_t) [private]
5.216.4.4 unsigned int MHAOvlFilter::fftfb_t::fftlen [private]
5.216.4.5 mha_real_t MHAOvlFilter::fftfb_t::samplingrate [private]
```


The documentation for this class was generated from the following files:

- mha fftfb.hh
- mha_fftfb.cpp

5.217 MHAOvlFilter::fftfb_vars_t Class Reference

Set of configuration variables for FFT-based overlapping filters.

Inheritance diagram for MHAOvIFilter::fftfb_vars_t:

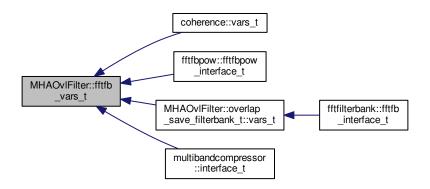

Public Member Functions

fftfb_vars_t (MHAParser::parser_t &p)

construct a set of openMHA configuration language variables suitable for configuring the FFT-based overlapping filterbank.

Public Attributes

scale_var_t fscale

Frequency scale type (lin/bark/log/erb).

scale_var_t ovltype

Filter shape (rect/lin/hann).

MHAParser::float_t plateau

relative plateau width.

MHAParser::kw_t ftype

Flag to decide wether edge or center frequencies are used.

fscale_t f

Frequency.

MHAParser::bool_t normalize

Normalize sum of channels.

MHAParser::bool_t fail_on_nonmonotonic

Fail if frequency entries are non-monotonic (otherwise sort)

MHAParser::bool_t fail_on_unique_bins

Fail if center frequencies share the same FFT bin.

MHAParser::vfloat_mon_t cf

Final center frequencies in Hz.

MHAParser::vfloat_mon_t ef

Final edge frequencies in Hz.

MHAParser::vfloat_mon_t cLTASS

Bandwidth correction for LTASS noise (level of 0 dB RMS LTASS noise)

MHAParser::mfloat_mon_t shapes

5.217.1 Detailed Description

Set of configuration variables for FFT-based overlapping filters.

This class enables easy configuration of the FFT-based overlapping filterbank. An instance of **fftfb_vars_t** (p. 585) creates openMHA configuration language variables needed for configuring the filterbank, and inserts these variables in the openMHA configuration tree.

This way, the variables are visible to the user and can be configured using the openMHA configuration language.

5.217.2 Constructor & Destructor Documentation

construct a set of openMHA configuration language variables suitable for configuring the FFT-based overlapping filterbank.

Parameters

p The node of the configuration tree where the variables created by this instance are inserted.

5.217.3 Member Data Documentation

5.217.3.1 scale_var_t MHAOvlFilter::fftfb_vars_t::fscale

Frequency scale type (lin/bark/log/erb).

5.217.3.2 scale_var_t MHAOvlFilter::fftfb_vars_t::ovltype

Filter shape (rect/lin/hann).

5.217.3.3 MHAParser::float_t MHAOvlFilter::fftfb_vars_t::plateau relative plateau width.

5.217.3.4 MHAParser::kw_t MHAOvIFilter::fftfb_vars_t::ftype

Flag to decide wether edge or center frequencies are used.

5.217.3.5 fscale_t MHAOvlFilter::fftfb_vars_t::f

Frequency.

5.217.3.6 MHAParser::bool_t MHAOvlFilter::fftfb_vars_t::normalize

Normalize sum of channels.

5.217.3.7 MHAParser::bool_t MHAOvlFilter::fftfb_vars_t::fail_on_nonmonotonic

Fail if frequency entries are non-monotonic (otherwise sort)

5.217.3.8 MHAParser::bool t MHAOvlFilter::fftfb_vars_t::fail_on_unique_bins

Fail if center frequencies share the same FFT bin.

5.217.3.9 MHAParser::vfloat_mon_t MHAOvlFilter::fftfb_vars_t::cf Final center frequencies in Hz.

5.217.3.10 MHAParser::vfloat_mon_t MHAOvlFilter::fftfb_vars_t::ef
Final edge frequencies in Hz.

5.217.3.11 MHAParser::vfloat_mon_t MHAOvlFilter::fftfb_vars_t::cLTASS

Bandwidth correction for LTASS noise (level of 0 dB RMS LTASS noise)


5.217.3.12 MHAParser::mfloat_mon_t MHAOvlFilter::fftfb_vars_t::shapes

The documentation for this class was generated from the following files:

- mha_fftfb.hh
- mha_fftfb.cpp

5.218 MHAOvlFilter::fscale_bw_t Class Reference

Inheritance diagram for MHAOvIFilter::fscale_bw_t:

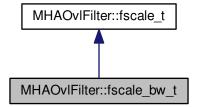

Public Member Functions

- fscale_bw_t (MHAParser::parser_t &parent)
- std::vector< mha_real_t > get_bw_hz () const

Protected Attributes

MHAParser::vfloat_t bw

MHAParser::vfloat_mon_t bw_hz

Private Member Functions

• void update_hz ()

Private Attributes

MHAEvents::connector_t< fscale_bw_t > updater

Additional Inherited Members

```
5.218.1 Constructor & Destructor Documentation
```

5.218.2 Member Function Documentation


5.218.3 Member Data Documentation

The documentation for this class was generated from the following files:

- · mha_fftfb.hh
- mha_fftfb.cpp

5.219 MHAOvlFilter::fscale_t Class Reference

Inheritance diagram for MHAOvIFilter::fscale_t:

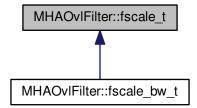

Public Member Functions

- fscale_t (MHAParser::parser_t &parent)
- std::vector< mha_real_t > get_f_hz () const

Public Attributes

- scale_var_t unit
- MHAParser::vfloat_t f
- MHAParser::vfloat_mon_t f_hz

Private Member Functions

void update_hz ()

Private Attributes

MHAEvents::connector_t< fscale_t > updater

```
5.219.1 Constructor & Destructor Documentation
```

```
5.219.1.1 MHAOvlFilter::fscale_t::fscale_t (
MHAParser::parser_t & parent )
```

- 5.219.2 Member Function Documentation
- 5.219.2.1 std::vector< mha_real_t > MHAOvlFilter::fscale_t::get_f_hz () const
- **5.219.2.2 void** MHAOvlFilter::fscale_t::update_hz() [private]
- 5.219.3 Member Data Documentation
- 5.219.3.1 scale_var_t MHAOvlFilter::fscale_t::unit
- 5.219.3.2 MHAParser::vfloat t MHAOvlFilter::fscale t::f
- 5.219.3.3 MHAParser::vfloat_mon_t MHAOvlFilter::fscale_t::f_hz
- **5.219.3.4** MHAEvents::connector_t<fscale_t> MHAOvlFilter::fscale_t::updater [private]

The documentation for this class was generated from the following files:

- · mha_fftfb.hh
- mha_fftfb.cpp

5.220 MHAOvIFilter::fspacing_t Class Reference

Class for frequency spacing, used by filterbank shape generator class.

Inheritance diagram for MHAOvIFilter::fspacing_t:



Public Member Functions

- fspacing_t (const MHAOvIFilter::fftfb_vars_t &par, unsigned int nfft, mha_real_t fs)
- std::vector< unsigned int > get_cf_fftbin () const
- std::vector< $mha_real_t > get_cf_hz$ () const
- std::vector< mha_real_t > get_ef_hz () const
- unsigned int **nbands** () const

Return number of bands in filter bank.

Protected Member Functions

- void fail_on_nonmonotonic_cf ()
- void fail_on_unique_fftbins ()

Protected Attributes

- std::vector< MHAOvIFilter::band descriptor t > bands
- mha_real_t(* symmetry_scale)(mha_real_t)

Private Member Functions

- void ef2bands (std::vector< mha_real_t > vef)
- void cf2bands (std::vector< mha_real_t > vcf)
- void equidist2bands (std::vector< mha_real_t > vcf)

Private Attributes

- unsigned int nfft_
- mha_real_t fs_

5.220.1 Detailed Description

Class for frequency spacing, used by filterbank shape generator class.


```
5.220.2 Constructor & Destructor Documentation
5.220.2.1 MHAOvlFilter::fspacing_t::fspacing_t (
                       const MHAOvIFilter::fftfb_vars_t & par,
                       unsigned int nfft,
                       mha real t fs )
5.220.3 Member Function Documentation
          std::vector< unsigned int > MHAOvlFilter::fspacing_t::get_cf_fftbin ( ) const
5.220.3.1
5.220.3.2 std::vector< mha_real_t > MHAOvlFilter::fspacing_t::get_cf_hz( ) const
5.220.3.3 std::vector< mha real t > MHAOvIFilter::fspacing_t::get_ef_hz( ) const
5.220.3.4 unsigned int MHAOvlFilter::fspacing_t::nbands ( ) const [inline]
Return number of bands in filter bank.
5.220.3.5 void MHAOvIFilter::fspacing_t::fail_on_nonmonotonic_cf( ) [protected]
5.220.3.6 void MHAOvlFilter::fspacing_t::fail_on_unique_fftbins() [protected]
5.220.3.7 void MHAOvlFilter::fspacing_t::ef2bands (
                       std::vector< mha real t > vef ) [private]
5.220.3.8 void MHAOvIFilter::fspacing t::cf2bands (
                       std::vector< mha_real_t > vcf ) [private]
5.220.3.9 void MHAOvlFilter::fspacing_t::equidist2bands (
                       std::vector < mha\_real\_t > \textit{vcf} \text{ }) \text{ } \texttt{[private]}
5.220.4 Member Data Documentation
5.220.4.1 std::vector<MHAOvIFilter::band descriptor t> MHAOvIFilter::fspacing t::bands
          [protected]
5.220.4.2 mha real t(* MHAOvIFilter::fspacing_t::symmetry_scale) (mha real t) [protected]
5.220.4.3 unsigned int MHAOvlFilter::fspacing_t::nfft_ [private]
5.220.4.4 mha_real_t MHAOvlFilter::fspacing_t::fs_ [private]
```

The documentation for this class was generated from the following files:

- mha fftfb.hh
- mha_fftfb.cpp

5.221 MHAOvlFilter::overlap_save_filterbank_analytic_t Class Reference

Inheritance diagram for MHAOvIFilter::overlap_save_filterbank_analytic_t:

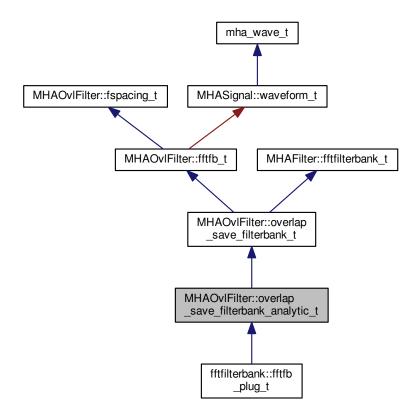

Public Member Functions

- void filter_analytic (const mha_wave_t *sln, mha_wave_t **fltRe, mha_wave_t **fltColor
 lm)

Private Attributes

MHAFilter::fftfilterbank_t imagfb

Additional Inherited Members

```
5.221.1 Constructor & Destructor Documentation
```

5.221.2 Member Function Documentation

5.221.3 Member Data Documentation

5.221.3.1 MHAFilter::fftfilterbank_t MHAOvlFilter::overlap_save_filterbank_analytic_t::imagfb [private]


The documentation for this class was generated from the following files:

- · mha_fftfb.hh
- mha_fftfb.cpp

5.222 MHAOvlFilter::overlap_save_filterbank_t Class Reference

A time-domain minimal phase filter bank with frequency shapes from **MHAOvIFilter::fftfb_t** (p. 582).

Inheritance diagram for MHAOvlFilter::overlap_save_filterbank_t:

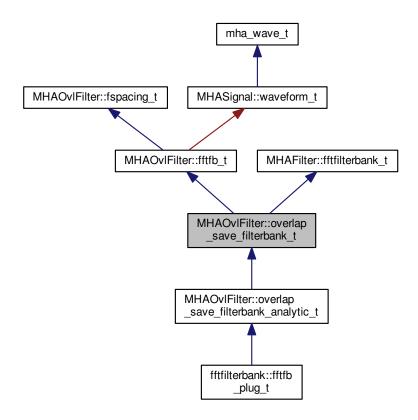

Classes

class vars_t

Public Member Functions

- overlap_save_filterbank_t (MHAOvIFilter::overlap_save_filterbank_t::vars_t &fbpar, mhaconfig_t channelconfig_in)
- mhaconfig_t get_channelconfig () const

Private Attributes

mhaconfig_t channelconfig_out_

Additional Inherited Members

5.222.1 Detailed Description


A time-domain minimal phase filter bank with frequency shapes from **MHAOvIFilter::fftfb_t** (p. 582).

- 5.222.2 Constructor & Destructor Documentation
- 5.222.3 Member Function Documentation
- 5.222.3.1 mhaconfig_t MHAOvlFilter::overlap_save_filterbank_t::get_channelconfig () const [inline]
- 5.222.4 Member Data Documentation
- **5.222.4.1 mhaconfig_t** MHAOvlFilter::overlap_save_filterbank_t::channelconfig_out_ [private]

The documentation for this class was generated from the following files:

- · mha fftfb.hh
- mha_fftfb.cpp
- 5.223 MHAOvlFilter::overlap_save_filterbank_t::vars_t Class Reference

Inheritance diagram for MHAOvIFilter::overlap_save_filterbank_t::vars_t:

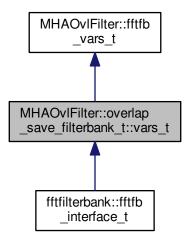

Public Member Functions

vars_t (MHAParser::parser_t &p)


Public Attributes

- MHAParser::int_t fftlen
- MHAParser::kw_t phasemodel
- MHAParser::window_t irswnd
- 5.223.1 Constructor & Destructor Documentation
- 5.223.2 Member Data Documentation
- 5.223.2.1 MHAParser::int_t MHAOvlFilter::overlap_save_filterbank_t::vars_t::fftlen
- 5.223.2.2 MHAParser::kw_t MHAOvlFilter::overlap_save_filterbank_t::vars_t::phasemodel
- 5.223.2.3 MHAParser::window_t MHAOvlFilter::overlap_save_filterbank_t::vars_t::irswnd

- mha_fftfb.hh
- · mha_fftfb.cpp

5.224 MHAOvlFilter::scale_var_t Class Reference

Inheritance diagram for MHAOvIFilter::scale_var_t:

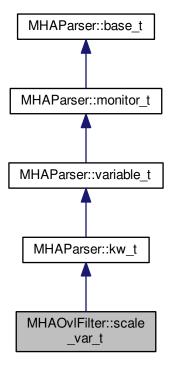

Public Member Functions

- scale_var_t (const std::string &help)
- void add_fun (const std::string &name, scale_fun_t *fun)
- std::string get_name () const
- scale_fun_t * get_fun () const
- mha_real_t hz2unit (mha_real_t x) const
- mha_real_t unit2hz (mha_real_t x) const

Private Attributes

- std::vector< std::string > names
- std::vector< scale_fun_t * > funs

Additional Inherited Members

```
5.224.1 Constructor & Destructor Documentation
```

5.224.2 Member Function Documentation

```
5.224.2.2 std::string MHAOvlFilter::scale_var_t::get_name( ) const [inline]
```

5.224.3 Member Data Documentation

```
5.224.3.1 std::vector<std::string> MHAOvlFilter::scale_var_t::names [private]
```


```
5.224.3.2 std::vector<scale_fun_t*> MHAOvlFilter::scale_var_t::funs [private]
```

- · mha_fftfb.hh
- mha_fftfb.cpp

5.225 MHAParser::base_t Class Reference

Base class for all parser items.

 $Inheritance\ diagram\ for\ MHAP arser::base_t:$

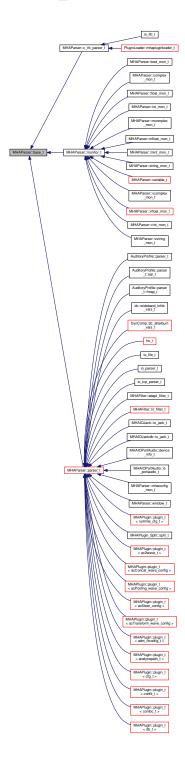

Classes

• class replace_t

Public Member Functions

base_t (const std::string &)

Constructor for base class of all parser nodes.

- base_t (const base_t &)
- virtual ~base t ()
- virtual std::string parse (const std::string &)

Causes this node to process a command in the openMHA configuration language.

virtual void parse (const char *, char *, unsigned int)

This function parses a command and writes the parsing result into a C character array.

- virtual void **parse** (const std::vector< std::string > &, std::vector< std::string > &)
- virtual std::string op_subparse (expression_t &)
- virtual std::string op_setval (expression_t &)
- virtual std::string op_query (expression_t &)
- virtual std::string query_dump (const std::string &)
- virtual std::string query_entries (const std::string &)
- virtual std::string query_perm (const std::string &)
- virtual std::string query_range (const std::string &)
- virtual std::string query_type (const std::string &)
- virtual std::string query_val (const std::string &)
- virtual std::string query_readfile (const std::string &)
- virtual std::string query savefile (const std::string &)
- virtual std::string query_savefile_compact (const std::string &)
- virtual std::string query_savemons (const std::string &)
- virtual std::string query_listids (const std::string &)
- std::string query_version (const std::string &)
- std::string query_id (const std::string &)
- std::string query_subst (const std::string &)
- std::string query addsubst (const std::string &)
- std::string query_help (const std::string &)
- std::string query_cmds (const std::string &)
- void set_node_id (const std::string &)

Set the identification string of this parser node.

void set_help (const std::string &)

Set the help comment of a variable or parser.

- void add_parent_on_insert (parser_t *, std::string)
- void rm_parent_on_remove (parser_t *)
- const std::string & fullname () const

Return the full dot-separated path name of this parser node in the openMHA configuration tree.

Public Attributes

MHAEvents::emitter t writeaccess

Event emitted on write access.

MHAEvents::emitter t valuechanged

Event emitted if the value has changed.

MHAEvents::emitter_t readaccess

Event emitted on read access.

MHAEvents::emitter_t prereadaccess

Event emitted on read access, before the data field is accessed.

Protected Member Functions

- void activate_query (const std::string &, query_t)
- void notify ()

Protected Attributes

- query_map_t queries
- bool data_is_initialized

Private Types

typedef std::vector< replace_t > repl_list_t

Private Member Functions

- void add_replace_pair (const std::string &, const std::string &)
- std::string oplist ()

Private Attributes

- std::string help
- std::string id_str
- opact_map_t operators
- repl_list_t repl_list
- bool nested lock
- parser_t * parent
- std::string thefullname

5.225.1 Detailed Description

Base class for all parser items.

The key method of the parser base class is the std::string **parse(const std::string&)** (p. 603) method. Parser proxy derivatives which overwrite any of the other **parse()** (p. 603) methods to be the key method must make sure that the original **parse()** (p. 603) method utilizes the new key method.

```
5.225.2 Member Typedef Documentation
```

```
5.225.2.1 typedef std::vector<replace_t> MHAParser::base_t::repl_list_t [private]
```

5.225.3 Constructor & Destructor Documentation

Constructor for base class of all parser nodes.

Parameters

h Help text describing this parser node. This help text is accessible to the configuration language through the "?help" query command.

Causes this node to process a command in the openMHA configuration language.

Parameters

```
cs The command to parse
```

Returns

The response to the command, if successful

Exceptions

```
MHA_Error (p. 413) If the command cannot be executed successfully. The reason for failure is given in the message string of the exception.
```

Reimplemented in **PluginLoader::mhapluginloader_t** (p. 849), and **altplugs_t** (p. 201).

This function parses a command and writes the parsing result into a C character array.

This base class implementation delegates to parse(const std::string &) (p. 603).

Parameters

cmd	Command to be parsed
retv	Buffer for the result
len	Length of buffer

```
Reimplemented in altplugs_t (p. 201).
```

```
5.225.4.3 void MHAParser::base_t::parse (
                     const std::vector< std::string > & cs,
                     std::vector < std::string > & retv ) [virtual]
5.225.4.4 std::string MHAParser::base t::op subparse (
                     expression t& ) [virtual]
Reimplemented in MHAParser::c_ifc_parser_t (p. 615), and MHAParser::parser_t (p. 657).
5.225.4.5 std::string MHAParser::base_t::op_setval (
                     expression_t & ) [virtual]
Reimplemented in MHAParser::mcomplex_t (p. 641), MHAParser::mfloat_t (p. 645), MH←
AParser::vcomplex_t (p. 672), MHAParser::vfloat_t (p. 676), MHAParser::vint_t (p. 680),
MHAParser::complex_t (p. 621), MHAParser::float_t (p. 627), MHAParser::int_t (p. 632),
MHAParser::bool_t (p. 613), MHAParser::vstring_t (p. 684), MHAParser::string_t (p. 665),
MHAParser::kw_t (p. 637), MHAParser::variable_t (p. 667), MHAParser::c_ifc_parser_
t (p. 615), and MHAParser::parser_t (p. 657).
5.225.4.6 std::string MHAParser::base_t::op_query (
                     expression t& ) [virtual]
Reimplemented in MHAParser::monitor t (p. 653), MHAParser::c ifc parser t (p. 615),
and MHAParser::parser_t (p. 657).
5.225.4.7 std::string MHAParser::base_t::query_dump (
                     const std::string & s ) [virtual]
```

Reimplemented in MHAParser::monitor_t (p. 653), and MHAParser::parser_t (p. 657).

```
5.225.4.8 std::string MHAParser::base_t::query_entries (
                    const std::string & s ) [virtual]
Reimplemented in MHAParser::parser_t (p. 657).
5.225.4.9 std::string MHAParser::base_t::query_perm (
                    const std::string & s ) [virtual]
Reimplemented in MHAParser::variable t (p. 667), and MHAParser::monitor t (p. 653).
5.225.4.10 std::string MHAParser::base t::query range (
                     const std::string & s ) [virtual]
Reimplemented in MHAParser::kw_t (p. 637), and MHAParser::range_var_t (p. 660).
5.225.4.11 std::string MHAParser::base_t::query_type (
                     const std::string & s ) [virtual]
Reimplemented in MHAParser::mcomplex_mon_t (p. 639), MHAParser::vcomplex_mon←
t (p. 670), MHAParser::complex mon t (p. 619), MHAParser::float mon t (p. 625), MH
AParser::mfloat_mon_t (p. 643), MHAParser::vfloat_mon_t (p. 674), MHAParser::mint←
_mon_t (p. 652), MHAParser::vint_mon_t (p. 678), MHAParser::vstring_mon_t (p. 682),
MHAParser::string_mon_t (p. 663), MHAParser::bool_mon_t (p. 611), MHAParser::int←
_mon_t (p. 629), MHAParser::mcomplex_t (p. 641), MHAParser::mfloat_t (p. 645), MH \infty
AParser::vcomplex_t (p. 672), MHAParser::vfloat_t (p. 676), MHAParser::vint t (p. 680),
MHAParser::complex_t (p. 621), MHAParser::float_t (p. 627), MHAParser::int_t (p. 632),
MHAParser::bool_t (p. 613), MHAParser::vstring_t (p. 684), MHAParser::string_t (p. 665),
MHAParser::kw_t (p. 637), and MHAParser::parser_t (p. 657).
5.225.4.12 std::string MHAParser::base_t::query_val (
                     const std::string & s ) [virtual]
Reimplemented in MHAParser::mcomplex mon t (p. 639), MHAParser::vcomplex mon ←
_t (p. 670), MHAParser::complex_mon_t (p. 619), MHAParser::float_mon_t (p. 625), MH←
AParser::mfloat_mon_t (p. 643), MHAParser::vfloat_mon_t (p. 674), MHAParser::mint←
_mon_t (p. 652), MHAParser::vint_mon_t (p. 678), MHAParser::vstring_mon_t (p. 682),
MHAParser::string mon t (p. 663), MHAParser::bool mon t (p. 611), MHAParser::int←
_mon_t (p. 629), MHAParser::mcomplex_t (p. 641), MHAParser::mfloat_t (p. 645), MH \leftarrow
AParser::vcomplex_t (p. 672), MHAParser::vfloat_t (p. 676), MHAParser::vint_t (p. 680),
MHAParser::complex_t (p. 621), MHAParser::float_t (p. 627), MHAParser::int_t (p. 632),
MHAParser::bool_t (p. 613), MHAParser::vstring_t (p. 684), MHAParser::string_t (p. 665),
MHAParser::kw_t (p. 637), and MHAParser::parser_t (p. 658).
5.225.4.13 std::string MHAParser::base_t::query_readfile (
                     const std::string & s ) [virtual]
Reimplemented in MHAParser::parser_t (p. 657).
```

```
5.225.4.14 std::string MHAParser::base_t::query_savefile (
                        const std::string & s ) [virtual]
Reimplemented in MHAParser::parser_t (p. 658).
5.225.4.15 std::string MHAParser::base_t::query_savefile_compact (
                        const std::string & s ) [virtual]
Reimplemented in MHAParser::parser_t (p. 658).
5.225.4.16 std::string MHAParser::base_t::query_savemons (
                        const std::string & s ) [virtual]
Reimplemented in MHAParser::parser t (p. 658).
5.225.4.17 std::string MHAParser::base_t::query_listids (
                        const std::string & s ) [virtual]
Reimplemented in MHAParser::parser t (p. 658).
5.225.4.18 std::string MHAParser::base_t::query_version (
                        const std::string & )
5.225.4.19 std::string MHAParser::base_t::query_id (
                        const std::string & )
5.225.4.20 std::string MHAParser::base_t::query_subst (
                        const std::string & s )
5.225.4.21 std::string MHAParser::base_t::query_addsubst (
                        const std::string & s )
5.225.4.22 std::string MHAParser::base_t::query_help (
                        const std::string & s )
5.225.4.23 std::string MHAParser::base_t::query_cmds (
                        const std::string & s )
5.225.4.24 void MHAParser::base t::set node id (
                        const std::string & s )
```

Set the identification string of this parser node.

The id can be queried from the configuration language using the ?id query command. Nodes can be found by id using the ?listid query command on a containing parser node.

Parameters

```
s The new identification string.
```

```
5.225.4.25 void MHAParser::base_t::set_help (
const std::string & s)
```

Set the help comment of a variable or parser.

Parameters

```
s New help comment.
```

Return the full dot-separated path name of this parser node in the openMHA configuration tree.

To connect a callback that is invoked on write access to this parser variable, use MHAEvents—::patchbay_t<receiver_t> method connect(&writeaccess,&receiver_t::callback) where callback is a method that expects no parameters and returns void.

Event emitted on write access.

5.225.5.2 MHAEvents::emitter t MHAParser::base_t::valuechanged

Event emitted if the value has changed.

To connect a callback that is invoked when write access to this parser variable actually changes its value, use MHAEvents::patchbay_t<receiver_t> method connect(&valuechanged,&receiver — t::callback) where callback is a method that expects no parameters and returns void.

5.225.5.3 MHAEvents::emitter_t MHAParser::base_t::readaccess

Event emitted on read access.

To connect a callback that is invoked after the value of this variable has been read through the configuration interface, use MHAEvents::patchbay_t<receiver_t> method connect(&readaccess,&receiver_t::callback) where callback is a method that expects no parameters and returns void.

5.225.5.4 MHAEvents::emitter_t MHAParser::base_t::prereadaccess

Event emitted on read access, before the data field is accessed.

To connect a callback that is invoked when the value of this variable is about to be read through the configuration interface, so that the callback can influence the value that is reported, use MHAEvents::patchbay_t<receiver_t> method connect(&prereadaccess,&receiver_t::callback) where callback is a method that expects no parameters and returns void.

```
5.225.5.5 query_map_t MHAParser::base_t::queries [protected]
5.225.5.6 bool MHAParser::base_t::data_is_initialized [protected]
5.225.5.7 std::string MHAParser::base_t::help [private]
5.225.5.8 std::string MHAParser::base_t::id_str [private]
5.225.5.9 opact_map_t MHAParser::base_t::operators [private]
5.225.5.10 repl_list_t MHAParser::base_t::repl_list [private]
5.225.5.11 bool MHAParser::base_t::nested_lock [private]
5.225.5.12 parser_t* MHAParser::base_t::parent [private]
5.225.5.13 std::string MHAParser::base_t::thefullname [private]
```

- mha_parser.hh
- mha parser.cpp

5.226 MHAParser::base_t::replace_t Class Reference

Public Member Functions

```
    replace_t (const std::string &, const std::string &)
```

- void replace (std::string &)
- const std::string & get_a () const
- const std::string & get_b () const

Private Attributes

- std::string a
- std::string b

5.226.1 Constructor & Destructor Documentation

5.226.2 Member Function Documentation

```
5.226.2.1 void MHAParser::base_t::replace_t::replace ( std::string & s )
```

```
5.226.2.2 const std::string& MHAParser::base_t::replace_t::get_a( ) const [inline]
```

5.226.2.3 const std::string& MHAParser::base_t::replace_t::get_b () const [inline]

5.226.3 Member Data Documentation

5.226.3.1 std::string MHAParser::base_t::replace_t::a [private]


5.226.3.2 std::string MHAParser::base_t::replace_t::b [private]

- · mha parser.hh
- mha_parser.cpp

5.227 MHAParser::bool_mon_t Class Reference

Monitor with string value.

Inheritance diagram for MHAParser::bool_mon_t:

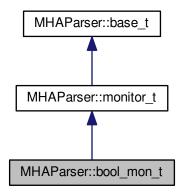

Public Member Functions

bool_mon_t (const std::string &hlp)
 Create a monitor variable for string values.

Public Attributes

• bool **data**Data field.

Protected Member Functions

- std::string query_val (const std::string &)
- std::string query_type (const std::string &)

Additional Inherited Members

5.227.1 Detailed Description

Monitor with string value.

5.227.2 Constructor & Destructor Documentation

5.227.2.1 MHAParser::bool_mon_t::bool_mon_t (const std::string & *hlp*)

Create a monitor variable for string values.

Parameters

hlp A help text describing this monitor variable.

5.227.3 Member Function Documentation

Reimplemented from MHAParser::base_t (p. 605).

Reimplemented from **MHAParser::base_t** (p. 605).

5.227.4 Member Data Documentation

5.227.4.1 bool MHAParser::bool_mon_t::data

Data field.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.228 MHAParser::bool_t Class Reference

Variable with a boolean value ("yes"/"no")

Inheritance diagram for MHAParser::bool_t:

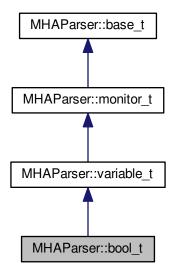

Public Member Functions

• **bool_t** (const std::string &help_text, const std::string &initial_value) Constructor for a configuration language variable for boolean values.

Public Attributes

• bool **data**Data field.

Protected Member Functions

- std::string op_setval (expression_t &)
- std::string query_type (const std::string &)
- std::string query_val (const std::string &)

Additional Inherited Members

5.228.1 Detailed Description

Variable with a boolean value ("yes"/"no")

5.228.2 Constructor & Destructor Documentation

Constructor for a configuration language variable for boolean values.

Parameters

help_text A human-readable text describing the purpose of		A human-readable text describing the purpose of this configuration variable.
	initial_value	The initial value for this variable as a string. The string representation of 'true'
		is either "yes" or "1". The string representation of 'false' is either "no" or "0".

5.228.3 Member Function Documentation

Reimplemented from **MHAParser::variable_t** (p. 667).

Reimplemented from MHAParser::base_t (p. 605).

Reimplemented from **MHAParser::base_t** (p. 605).

5.228.4 Member Data Documentation


5.228.4.1 bool MHAParser::bool_t::data

Data field.

- mha_parser.hh
- mha_parser.cpp

5.229 MHAParser::c_ifc_parser_t Class Reference

Inheritance diagram for MHAParser::c_ifc_parser_t:

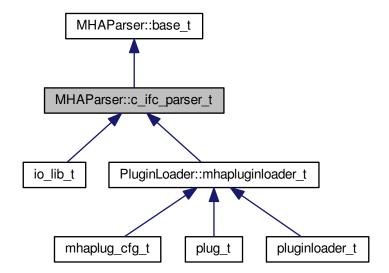

Public Member Functions

- c_ifc_parser_t (const std::string &modulename_)
- ~c_ifc_parser_t ()
- void set_parse_cb (c_parse_cmd_t, c_parse_err_t, void *)

Protected Member Functions

- std::string op_subparse (MHAParser::expression_t &)
- std::string op_setval (MHAParser::expression_t &)
- std::string op_query (MHAParser::expression_t &)

Private Member Functions

void test_error ()

Private Attributes

- std::string modulename
- c_parse_cmd_t c_parse_cmd
- · c_parse_err_t c_parse_err
- int liberr
- void * libdata
- unsigned int ret_size
- char * retv

Additional Inherited Members

```
5.229.1 Constructor & Destructor Documentation
5.229.1.1 MHAParser::c_ifc_parser_t::c_ifc_parser_t (
                     const std::string & modulename )
5.229.1.2 MHAParser::c_ifc_parser_t::~c_ifc_parser_t ( )
5.229.2 Member Function Documentation
5.229.2.1 void MHAParser::c_ifc_parser_t::set_parse_cb (
                     MHAParser::c parse cmd t cb,
                     MHAParser::c_parse_err_t strerr,
                     void * d)
5.229.2.2 std::string MHAParser::c_ifc_parser_t::op_subparse (
                     MHAParser::expression_t & x ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 604).
5.229.2.3 std::string MHAParser::c_ifc_parser_t::op_setval (
                     MHAParser::expression_t & x ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 604).
5.229.2.4 std::string MHAParser::c_ifc_parser_t::op_query (
                     MHAParser::expression_t & x ) [protected], [virtual]
```

Reimplemented from **MHAParser::base_t** (p. 604).

```
5.229.2.5 void MHAParser::c_ifc_parser_t::test_error( ) [private]
5.229.3 Member Data Documentation
5.229.3.1 std::string MHAParser::c_ifc_parser_t::modulename [private]
5.229.3.2 c_parse_cmd_t MHAParser::c_ifc_parser_t::c_parse_cmd [private]
5.229.3.3 c_parse_err_t MHAParser::c_ifc_parser_t::c_parse_err [private]
5.229.3.4 int MHAParser::c_ifc_parser_t::liberr [private]
5.229.3.5 void* MHAParser::c_ifc_parser_t::libdata [private]
5.229.3.6 unsigned int MHAParser::c_ifc_parser_t::ret_size [private]
5.229.3.7 char* MHAParser::c_ifc_parser_t::retv [private]
```


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.230 MHAParser::commit_t< receiver_t > Class Template Reference

Parser variable with event-emission functionality.

Inheritance diagram for MHAParser::commit_t< receiver_t >:

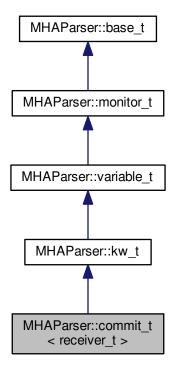

Public Member Functions

commit_t (receiver_t *, void(receiver_t::*)(), const std::string &help="Variable changes action")

Private Attributes

MHAEvents::connector_t< receiver_t > extern_connector

Additional Inherited Members

5.230.1 Detailed Description

```
\label{template} \begin{tabular}{ll} template < class receiver\_t > \\ class MHAParser::commit_t < receiver\_t > \\ \end{tabular}
```

Parser variable with event-emission functionality.

The **commit_t** (p. 616) variable can register an event receiver in its constructor, which is called whenever the variable is set to "commit".

5.230.2 Constructor & Destructor Documentation

5.230.3 Member Data Documentation

```
5.230.3.1 template < class receiver_t > MHAEvents::connector_t < receiver_t > MHAParser::commit_t < receiver_t > ::extern_connector [private]
```


The documentation for this class was generated from the following file:

· mha parser.hh

5.231 MHAParser::complex_mon_t Class Reference

Monitor with complex value.

Inheritance diagram for MHAParser::complex_mon_t:

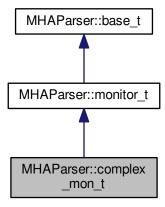

Public Member Functions

complex_mon_t (const std::string &hlp)

Create a complex monitor variable.

Public Attributes

mha_complex_t data

Data field.

Protected Member Functions

- std::string query_val (const std::string &)
- std::string query_type (const std::string &)

Additional Inherited Members

5.231.1 Detailed Description

Monitor with complex value.

5.231.2 Constructor & Destructor Documentation

5.231.2.1 MHAParser::complex_mon_t::complex_mon_t (const std::string & hlp)

Create a complex monitor variable.

Parameters

hlp A help text describing this monitor variable.

5.231.3 Member Function Documentation

Reimplemented from **MHAParser::base_t** (p. 605).

Reimplemented from **MHAParser::base_t** (p. 605).

5.231.4 Member Data Documentation

5.231.4.1 mha_complex_t MHAParser::complex_mon_t::data

Data field.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.232 MHAParser::complex_t Class Reference

Variable with complex value.

Inheritance diagram for MHAParser::complex_t:

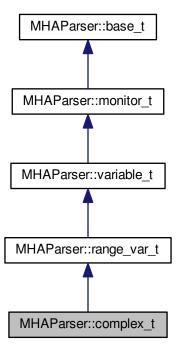

Public Member Functions

• complex_t (const std::string &, const std::string &, const std::string &="")

Public Attributes

```
    mha_complex_t data
    Data field.
```

Protected Member Functions

```
    std::string op_setval (expression_t &)
    std::string query_type (const std::string &)
```

• std::string query_val (const std::string &)

Additional Inherited Members

5.232.1 Detailed Description

Variable with complex value.

```
5.232.2 Constructor & Destructor Documentation
```

5.232.3 Member Function Documentation

Reimplemented from **MHAParser::variable_t** (p. 667).

Reimplemented from **MHAParser::base_t** (p. 605).

Reimplemented from **MHAParser::base_t** (p. 605).

```
5.232.4 Member Data Documentation
```

```
5.232.4.1 mha_complex_t MHAParser::complex_t::data
```

Data field.

The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.233 MHAParser::entry_t Class Reference

Public Member Functions

entry_t (const std::string &, base_t *)

Public Attributes

- std::string name
- base_t * entry
- 5.233.1 Constructor & Destructor Documentation

5.233.2 Member Data Documentation

5.233.2.1 std::string MHAParser::entry_t::name

5.233.2.2 base_t* MHAParser::entry_t::entry

- mha_parser.hh
- mha_parser.cpp

5.234 MHAParser::expression_t Class Reference

Public Member Functions

- expression_t (const std::string &, const std::string &)
 Constructor.
- expression_t ()

Public Attributes

- std::string Ival
- std::string rval
- std::string op

5.234.1 Constructor & Destructor Documentation

Constructor.

Parameters

s	String to be splitted
0	List of valid operators (single character only)


- 5.234.1.2 expression_t::expression_t()
- 5.234.2 Member Data Documentation
- 5.234.2.1 std::string MHAParser::expression_t::lval
- 5.234.2.2 std::string MHAParser::expression_t::rval
- 5.234.2.3 std::string MHAParser::expression_t::op

- mha_parser.hh
- mha_parser.cpp

5.235 MHAParser::float_mon_t Class Reference

Monitor with float value.

Inheritance diagram for MHAParser::float_mon_t:

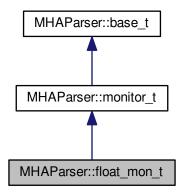

Public Member Functions

• float_mon_t (const std::string &hlp)
Initialize a floating point (32 bits) monitor variable.

Public Attributes

• float data

Data field.

Protected Member Functions

- std::string query_val (const std::string &)
- std::string query_type (const std::string &)

Additional Inherited Members

5.235.1 Detailed Description

Monitor with float value.

5.235.2 Constructor & Destructor Documentation

5.235.2.1 MHAParser::float_mon_t::float_mon_t (const std::string & hlp)

Initialize a floating point (32 bits) monitor variable.

Parameters

hlp A help text describing this monitor variable.

5.235.3 Member Function Documentation

Reimplemented from **MHAParser::base_t** (p. 605).

Reimplemented from **MHAParser::base_t** (p. 605).

5.235.4 Member Data Documentation

5.235.4.1 float MHAParser::float_mon_t::data

Data field.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.236 MHAParser::float_t Class Reference

Variable with float value.

Inheritance diagram for MHAParser::float_t:

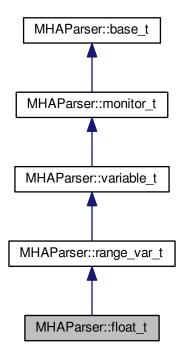

Public Member Functions

float_t (const std::string &help_text, const std::string &initial_value, const std::string &range="")

Constructor for a configuration language variable for 32bit ieee floating-point values.

Public Attributes

· float data

Data field.

Protected Member Functions

- std::string op_setval (expression_t &)
- std::string query_type (const std::string &)
- std::string query_val (const std::string &)

Additional Inherited Members

5.236.1 Detailed Description

Variable with float value.

5.236.2 Constructor & Destructor Documentation

Constructor for a configuration language variable for 32bit ieee floating-point values.

Parameters

help_text	A human-readable text describing the purpose of this configuration variable.
initial_value	The initial value for this variable as a string (decimal representation of the floating-point variable). If a range is given in the third parameter, then the initial value has to be within the range. A human-readable text describing the purpose of this configuration variable.
range	The range of values that this variable can hold can be restricted. A range is a string of the form "[a,b]", where a and b are decimal representations of the inclusive boundaries of the range. a<=b. In a range of the form "]a,b[", both boundaries are excluded. Mixed forms are permitted. a or b can also be omitted if there is no lower or upper limit. The range of values is always restricted by the representable range of the underlying C data type.

```
5.236.3 Member Function Documentation
```

Reimplemented from **MHAParser::variable_t** (p. 667).

Reimplemented from **MHAParser::base_t** (p. 605).

Reimplemented from **MHAParser::base_t** (p. 605).

5.236.4 Member Data Documentation

5.236.4.1 float MHAParser::float_t::data

Data field.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.237 MHAParser::int_mon_t Class Reference

Monitor variable with int value.

Inheritance diagram for MHAParser::int_mon_t:

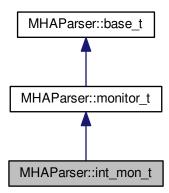

Public Member Functions

int_mon_t (const std::string &hlp)
 Create a monitor variable for integral values.

Public Attributes

• int data

Data field.

Protected Member Functions

```
std::string query_val (const std::string &)
```

std::string query_type (const std::string &)

Additional Inherited Members

5.237.1 Detailed Description

Monitor variable with int value.

Monitor variables can be of many types. These variables can be queried through the parser. The public data element contains the monitored state. Write access is only possible from the C++ code by direct access to the data field.

```
5.237.2 Constructor & Destructor Documentation
```

Create a monitor variable for integral values.

Parameters

```
hlp A help text describing this monitor variable.
```

```
5.237.3 Member Function Documentation
```

Reimplemented from **MHAParser::base_t** (p. 605).

Reimplemented from **MHAParser::base_t** (p. 605).

5.237.4 Member Data Documentation

5.237.4.1 int MHAParser::int_mon_t::data

Data field.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.238 MHAParser::int t Class Reference

Variable with integer value.

Inheritance diagram for MHAParser::int_t:

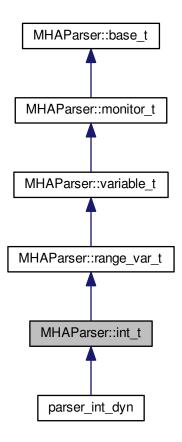

Public Member Functions

int_t (const std::string &help_text, const std::string &initial_value, const std::string &range="")

Constructor for a configuration language variable for integral values.

Public Attributes

• int data

Data field.

Protected Member Functions

- std::string op_setval (expression_t &)
- std::string query_type (const std::string &)
- std::string query_val (const std::string &)

Additional Inherited Members

5.238.1 Detailed Description

Variable with integer value.

5.238.2 Constructor & Destructor Documentation

Constructor for a configuration language variable for integral values.

Parameters

help_text	A human-readable text describing the purpose of this configuration variable.
initial_value	The initial value for this variable as a string (decimal representation of the integer variable). If a range is given in the third parameter, then the initial value has to be within the range.
range	The range of values that this variable can hold can be restricted. A range is a string of the form "[a,b]", where a and b are decimal representations of the integral inclusive boundaries of the range. a<=b. In a range of the form "]a,b[", both boundaries are excluded. Mixed forms are permitted. a or b can also be omitted if there is no lower or upper limit. The range of values is always restricted by the representable range of the underlying C data type
© 2005-2018 HörTe	(usually 32 bits, [-2147483648,2147483647]).

```
5.238.3 Member Function Documentation
5.238.3.1 std::string MHAParser::int_t::op_setval (
                     expression_t & x ) [protected], [virtual]
Reimplemented from MHAParser::variable_t (p. 667).
5.238.3.2 std::string MHAParser::int_t::query_type (
                     const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 605).
5.238.3.3 std::string MHAParser::int_t::query_val (
                     const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 605).
5.238.4 Member Data Documentation
5.238.4.1 int MHAParser::int_t::data
Data field.
The documentation for this class was generated from the following files:
   · mha parser.hh
   mha_parser.cpp
5.239 MHAParser::keyword_list_t Class Reference
Keyword list class.
Public Types
```

typedef std::vector< std::string >::size_type size_t

Public Member Functions

• void **set_value** (const std::string &)

Select a value from keyword list.

void set_entries (const std::string &)

Set keyword list entries.

const std::string & get_value () const

Return selected value.

const std::vector< std::string > & get_entries () const

Return keyword list.

const size_t & get_index () const

Return index of selected value.

- void set index (unsigned int)
- void validate () const

Check if index of selected value is valid.

- void **add_entry** (const std::string &en)
- keyword_list_t ()

Constructor.

Private Attributes

size_t index

Index into list.

std::vector< std::string > entries

List of valid entries.

std::string empty_string

5.239.1 Detailed Description

Keyword list class.

The stucture **keyword_list_t** (p. 632) defines a keyword list (vector of strings) with an index into the list. Used as **MHAParser::kw_t** (p. 635), it can be used to access a set of valid keywords through the parser (i.e. one of "pear apple banana").

```
5.239.2 Member Typedef Documentation
```

5.239.2.1 typedef std::vector<std::string>::size_type MHAParser::keyword_list_t::size_t

5.239.3 Constructor & Destructor Documentation

5.239.3.1 MHAParser::keyword_list_t::keyword_list_t ()

Constructor.

```
5.239.4 Member Function Documentation
```

```
5.239.4.1 void MHAParser::keyword_list_t::set_value ( const std::string & s )
```

Select a value from keyword list.

This function selects a value from the keyword list. The index is set to the last matching entry.

Parameters

```
s Value to be selected.
```

```
5.239.4.2 void MHAParser::keyword_list_t::set_entries ( const std::string & s )
```

Set keyword list entries.

With this function, the keyword list can be set from a space separated string list.

Parameters

```
|s| Space separated entry list.
```

```
5.239.4.3 const std::string & MHAParser::keyword_list_t::get_value ( ) const
```

Return selected value.

```
5.239.4.4 const std::vector< std::string > & MHAParser::keyword_list_t::get_entries ( ) const
```

Return keyword list.

```
5.239.4.5 const MHAParser::keyword_list_t::size_t & MHAParser::keyword_list_t::get_index ( ) const
```

Return index of selected value.

```
5.239.4.6 void MHAParser::keyword_list_t::set_index ( unsigned int idx )
```

5.239.4.7 void MHAParser::keyword_list_t::validate() const

Check if index of selected value is valid.

5.239.5 Member Data Documentation

5.239.5.1 size_t MHAParser::keyword_list_t::index [private]

Index into list.

5.239.5.2 std::vector<std::string> MHAParser::keyword_list_t::entries [private]

List of valid entries.

5.239.5.3 std::string MHAParser::keyword_list_t::empty_string [private]


The documentation for this class was generated from the following files:

- · mha parser.hh
- mha_parser.cpp

5.240 MHAParser::kw_t Class Reference

Variable with keyword list value.

Inheritance diagram for MHAParser::kw_t:

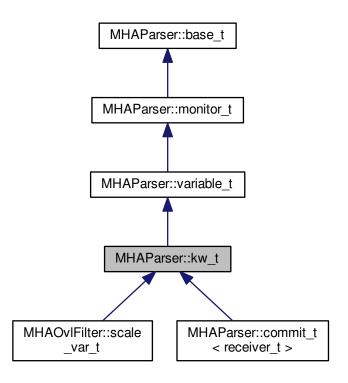

Public Member Functions

• **kw_t** (const std::string &, const std::string &, const std::string &)

Constructor of a keyword list openMHA configuration variable.

kw_t (const kw_t &)

Copy constructor.

• void **set_range** (const std::string &)

Set/change the list of valid entries.

bool isval (const std::string &) const

Test if the given value is selected.

Public Attributes

· keyword list t data

Variable data in its native type.

Protected Member Functions

- void validate (const keyword_list_t &)
- std::string op_setval (expression_t &)
- std::string query_range (const std::string &)
- std::string query_val (const std::string &)
- std::string query_type (const std::string &)

Additional Inherited Members

5.240.1 Detailed Description

Variable with keyword list value.

5.240.2 Constructor & Destructor Documentation

Constructor of a keyword list openMHA configuration variable.

Parameters

h	A help string describing the purpose of this variable.
V	The initial value, has to be a value from the list of possible values given in the last
	parameter. © 2005-2018 HörTech gGmbH, Oldenburg
rg	A string containing the list of valid entries. The entries have to be separated by spaces. The list of entries has to be delimited by brackets "[", "]".
	The list of entries has to be delimited by brackets [,].

```
5.240.2.2 MHAParser::kw_t::kw_t (
const kw_t & src )
```

Copy constructor.

5.240.3 Member Function Documentation

```
5.240.3.1 void MHAParser::kw_t::set_range ( const std::string & r )
```

Set/change the list of valid entries.

Parameters

A string containing the list of valid entries. The entries have to be separated by spaces. The list of entries has to be delimited by brackets "[", "]".

```
5.240.3.2 bool MHAParser::kw_t::isval (
                     const std::string & testval ) const
Test if the given value is selected.
5.240.3.3 void MHAParser::kw t::validate (
                     const keyword_list_t & s ) [protected]
5.240.3.4 std::string MHAParser::kw_t::op_setval (
                      expression_t & x ) [protected], [virtual]
Reimplemented from MHAParser::variable_t (p. 667).
5.240.3.5 std::string MHAParser::kw_t::query_range (
                     const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 605).
5.240.3.6 std::string MHAParser::kw_t::query_val (
                     const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 605).
5.240.3.7 std::string MHAParser::kw_t::query_type (
                      const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 605).
```

5.240.4 Member Data Documentation

5.240.4.1 keyword_list_t MHAParser::kw_t::data

Variable data in its native type.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.241 MHAParser::mcomplex_mon_t Class Reference

Matrix of complex numbers monitor.

Inheritance diagram for MHAParser::mcomplex_mon_t:

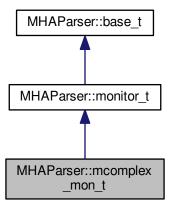

Public Member Functions

mcomplex_mon_t (const std::string &hlp)
 Create a matrix of complex floating point monitor values.

Public Attributes

std::vector< std::vector< mha_complex_t >> data
 Data field.

Protected Member Functions

```
std::string query_val (const std::string &)
```

std::string query_type (const std::string &)

Additional Inherited Members

5.241.1 Detailed Description

Matrix of complex numbers monitor.

5.241.2 Constructor & Destructor Documentation

5.241.2.1 MHAParser::mcomplex_mon_t::mcomplex_mon_t (const std::string & hlp)

Create a matrix of complex floating point monitor values.

Parameters

```
hlp A help text describing this monitor variable.
```

```
5.241.3 Member Function Documentation
```

Reimplemented from **MHAParser::base_t** (p. 605).

Reimplemented from **MHAParser::base_t** (p. 605).

5.241.4 Member Data Documentation

5.241.4.1 std::vector< std::vector<mha_complex_t>> MHAParser::mcomplex_mon_t::data

Data field.


The documentation for this class was generated from the following files:

- mha parser.hh
- mha_parser.cpp

5.242 MHAParser::mcomplex_t Class Reference

Matrix variable with complex value.

Inheritance diagram for MHAParser::mcomplex_t:

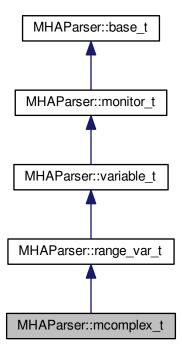

Public Member Functions

• mcomplex_t (const std::string &, const std::string &, const std::string &="")

Public Attributes

std::vector< std::vector< mha_complex_t >> data
 Data field.

Protected Member Functions

- std::string op_setval (expression_t &)
- std::string query_type (const std::string &)
- std::string query_val (const std::string &)

```
Additional Inherited Members
```

```
5.242.1 Detailed Description
```

Matrix variable with complex value.

```
5.242.2 Constructor & Destructor Documentation
```

5.242.3 Member Function Documentation

Reimplemented from **MHAParser::variable_t** (p. 667).

Reimplemented from MHAParser::base_t (p. 605).

Reimplemented from **MHAParser::base_t** (p. 605).

5.242.4 Member Data Documentation

```
5.242.4.1 std::vector<std::vector<mha_complex_t>> MHAParser::mcomplex_t::data
```

Data field.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.243 MHAParser::mfloat_mon_t Class Reference

Matrix of floats monitor.

Inheritance diagram for MHAParser::mfloat_mon_t:

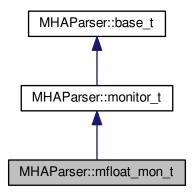

Public Member Functions

mfloat_mon_t (const std::string &hlp)
 Create a matrix of floating point monitor values.

Public Attributes

std::vector< std::vector< float > > data
 Data field.

Protected Member Functions

- std::string query_val (const std::string &)
- std::string query_type (const std::string &)

Additional Inherited Members

5.243.1 Detailed Description

Matrix of floats monitor.

5.243.2 Constructor & Destructor Documentation

5.243.2.1 MHAParser::mfloat_mon_t::mfloat_mon_t (const std::string & hlp)

Create a matrix of floating point monitor values.

Parameters

hlp A help text describing this monitor variable.

5.243.3 Member Function Documentation

Reimplemented from MHAParser::base_t (p. 605).

Reimplemented from **MHAParser::base_t** (p. 605).

5.243.4 Member Data Documentation

5.243.4.1 std::vector < std::vector < float > > MHAParser::mfloat_mon_t::data

Data field.


The documentation for this class was generated from the following files:

- · mha_parser.hh
- mha_parser.cpp

5.244 MHAParser::mfloat_t Class Reference

Matrix variable with float value.

Inheritance diagram for MHAParser::mfloat_t:

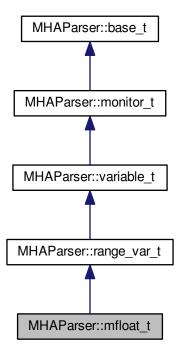

Public Member Functions

mfloat_t (const std::string &, const std::string &="")
 Create a float matrix parser variable.

Public Attributes

std::vector< std::vector< float > > data
 Data field.

Protected Member Functions

- std::string op_setval (expression_t &)
- std::string query_type (const std::string &)
- std::string query_val (const std::string &)

Additional Inherited Members

5.244.1 Detailed Description

Matrix variable with float value.

5.244.2 Constructor & Destructor Documentation

Create a float matrix parser variable.

Parameters

h	A human-readable text describing the purpose of this configuration variable.
V	The initial value of the variable, as a string, in openMHA configuration language: (e.g. "[[0 1]; [2 3]]" for a matrix), described in the "Multidimensional Variables" s2.1.3 section of the openMHA User Manual.
rg	The numeric range to enforce on all members of the matrix.

```
5.244.3 Member Function Documentation
```

Reimplemented from **MHAParser::variable_t** (p. 667).

Reimplemented from MHAParser::base_t (p. 605).

Reimplemented from **MHAParser::base_t** (p. 605).

5.244.4 Member Data Documentation

5.244.4.1 std::vector<std::vector<float> > MHAParser::mfloat_t::data


Data field.

The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.245 MHAParser::mhaconfig_mon_t Class Reference

Inheritance diagram for MHAParser::mhaconfig_mon_t:

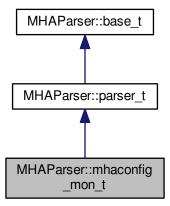

Public Member Functions

- mhaconfig_mon_t (const std::string &help="")
- void update (const mhaconfig_t &cf)

Private Attributes

MHAParser::int mon t channels

Number of audio channels.

MHAParser::string_mon_t domain

Signal domain (MHA WAVEFORM or MHA SPECTRUM)

MHAParser::int_mon_t fragsize

Fragment size of waveform data.

MHAParser::int_mon_t wndlen

Window length of spectral data.

MHAParser::int_mon_t fftlen

FFT length of spectral data.

MHAParser::float_mon_t srate

Sampling rate in Hz.

Additional Inherited Members

```
5.245.1 Constructor & Destructor Documentation
```

5.245.2 Member Function Documentation

```
5.245.2.1 void MHAParser::mhaconfig_mon_t::update ( const mhaconfig_t & cf )
```

5.245.3 Member Data Documentation

5.245.3.1 MHAParser::int_mon_t MHAParser::mhaconfig_mon_t::channels [private]

Number of audio channels.

5.245.3.2 MHAParser::string_mon_t MHAParser::mhaconfig_mon_t::domain [private]

Signal domain (MHA WAVEFORM or MHA SPECTRUM)

5.245.3.3 MHAParser::int_mon_t MHAParser::mhaconfig_mon_t::fragsize [private]

Fragment size of waveform data.

5.245.3.4 MHAParser::int_mon_t MHAParser::mhaconfig_mon_t::wndlen [private]

Window length of spectral data.

5.245.3.5 MHAParser::int_mon_t MHAParser::mhaconfig_mon_t::fftlen [private]

FFT length of spectral data.

5.245.3.6 MHAParser::float_mon_t MHAParser::mhaconfig_mon_t::srate [private]

Sampling rate in Hz.

The documentation for this class was generated from the following files:

- · mha parser.hh
- mha_parser.cpp

5.246 MHAParser::mhapluginloader_t Class Reference

Class to create a plugin loader in a parser, including the load logic.

Public Member Functions

- mhapluginloader_t (MHAParser::parser_t &parent, algo_comm_t ac, const std::string &plugname_name="plugin_name", const std::string &prefix="")
- ∼mhapluginloader_t ()
- void prepare (mhaconfig_t &cf)
- · void release ()
- void process (mha_wave_t *sIn, mha_wave_t **sOut)
- void process (mha_spec_t *sIn, mha_spec_t **sOut)
- void process (mha_wave_t *sln, mha_spec_t **sOut)
- void process (mha_spec_t *sln, mha_wave_t **sOut)
- mhaconfig_t get_cfin () const
- mhaconfig_t get_cfout () const
- const std::string & get_last_name () const

Protected Attributes

PluginLoader::mhapluginloader_t * plug

Private Member Functions

void load_plug ()

Private Attributes

- MHAParser::parser_t & parent_
- MHAParser::string_t plugname
- std::string prefix
- MHAEvents::connector_t< mhapluginloader_t > connector
- · algo_comm_t ac_
- std::string last_name
- std::string plugname_name_
- mhaconfig_t cf_in_
- mhaconfig_t cf_out_

Static Private Attributes

static double bookkeeping

5.246.1 Detailed Description

Class to create a plugin loader in a parser, including the load logic.

```
5.246.2 Constructor & Destructor Documentation
```

- 5.246.2.2 MHAParser::mhapluginloader_t::~mhapluginloader_t ()
- 5.246.3 Member Function Documentation
- 5.246.3.1 void MHAParser::mhapluginloader_t::prepare (mhaconfig_t & cf)
- 5.246.3.2 void MHAParser::mhapluginloader_t::release ()

```
5.246.3.5 void MHAParser::mhapluginloader t::process (
                     mha_wave_t * sln,
                     mha spec t ** sOut ) [inline]
5.246.3.6 void MHAParser::mhapluginloader_t::process (
                     mha spec t * sln,
                     mha_wave_t ** sOut ) [inline]
5.246.3.7 mhaconfig_t MHAParser::mhapluginloader_t::get_cfin( ) const [inline]
5.246.3.8
         mhaconfig t MHAParser::mhapluginloader_t::get_cfout( ) const [inline]
5.246.3.9 const std::string& MHAParser::mhapluginloader_t::get_last_name( ) const [inline]
5.246.3.10 void MHAParser::mhapluginloader_t::load_plug( ) [private]
5.246.4 Member Data Documentation
5.246.4.1 PluginLoader::mhapluginloader_t* MHAParser::mhapluginloader_t::plug
         [protected]
5.246.4.2 MHAParser::parser_t& MHAParser::mhapluginloader_t::parent_ [private]
5.246.4.3 MHAParser::string_t MHAParser::mhapluginloader_t::plugname [private]
5.246.4.4 std::string MHAParser::mhapluginloader_t::prefix_ [private]
5.246.4.5 MHAEvents::connector t<mhapluginloader t> MHAParser::mhapluginloader_t ←
         ::connector [private]
5.246.4.6 algo_comm_t MHAParser::mhapluginloader_t::ac_ [private]
5.246.4.7 std::string MHAParser::mhapluginloader_t::last_name [private]
5.246.4.8 std::string MHAParser::mhapluginloader_t::plugname_name_ [private]
5.246.4.9 mhaconfig_t MHAParser::mhapluginloader_t::cf_in_ [private]
5.246.4.10 mhaconfig_t MHAParser::mhapluginloader_t::cf_out_ [private]
5.246.4.11 double MHAParser::mhapluginloader_t::bookkeeping [static], [private]
```


The documentation for this class was generated from the following files:

- mhapluginloader.h
- mhapluginloader.cpp

5.247 MHAParser::mint_mon_t Class Reference

Matrix of ints monitor.

Inheritance diagram for MHAParser::mint_mon_t:

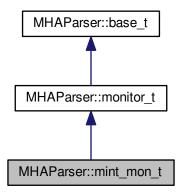

Public Member Functions

mint_mon_t (const std::string &hlp)
 Create a matrix of integer monitor values.

Public Attributes

std::vector< std::vector< int > > data
 Data field.

Protected Member Functions

- std::string query_val (const std::string &)
- std::string query_type (const std::string &)

Additional Inherited Members

5.247.1 Detailed Description

Matrix of ints monitor.

5.247.2 Constructor & Destructor Documentation

Create a matrix of integer monitor values.

Parameters

hlp A help text describing this monitor variable.

5.247.3 Member Function Documentation

Reimplemented from MHAParser::base_t (p. 605).

Reimplemented from **MHAParser::base_t** (p. 605).

5.247.4 Member Data Documentation

5.247.4.1 std::vector< std::vector<int> > MHAParser::mint_mon_t::data

Data field.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.248 MHAParser::monitor_t Class Reference

Base class for monitors and variable nodes.

Inheritance diagram for MHAParser::monitor_t:

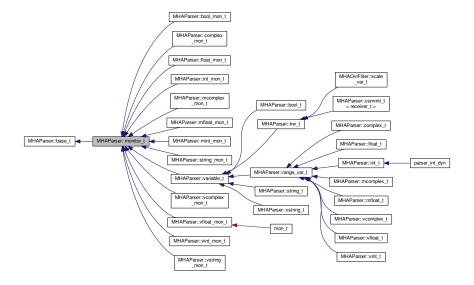

```
Public Member Functions

    monitor_t (const std::string &)

   monitor_t (const monitor_t &)
   std::string op_query (expression_t &)

    std::string query_dump (const std::string &)

   • std::string query_perm (const std::string &)
Additional Inherited Members
5.248.1 Detailed Description
Base class for monitors and variable nodes.
5.248.2 Constructor & Destructor Documentation
5.248.2.1 MHAParser::monitor_t::monitor_t (
                      const std::string & h )
5.248.2.2 MHAParser::monitor_t::monitor_t (
                      const monitor_t & src )
5.248.3 Member Function Documentation
5.248.3.1 std::string MHAParser::monitor_t::op_query (
                      expression t&x) [virtual]
```

Reimplemented from **MHAParser::base_t** (p. 604).

```
5.248.3.2 std::string MHAParser::monitor_t::query_dump (
                       const std::string & s ) [virtual]
```

Reimplemented from **MHAParser::base_t** (p. 604).

```
5.248.3.3 std::string MHAParser::monitor_t::query_perm (
                      const std::string & s ) [virtual]
```

Reimplemented from **MHAParser::base_t** (p. 605).

Reimplemented in MHAParser::variable_t (p. 667).

The documentation for this class was generated from the following files:

- · mha parser.hh
- mha_parser.cpp

5.249 MHAParser::parser_t Class Reference

Parser node class.

Inherits MHAParser::base_t.

Inherited by AuditoryProfile::parser t, AuditoryProfile::parser t::ear t, AuditoryProfile ← ::parser t::fmap t, dc::wideband inhib vars t, DynComp::dc afterburn vars t, fw-_t, io_file_t, io_parser_t, io_tcp_parser_t, MHAFilter::adapt_filter_t, MHAFilter::iir_← filter_t, MHAIOJack::io_jack_t, MHAIOJackdb::io_jack_t, MHAIOPortAudio::device_ info t, MHAIOPortAudio::io portaudio t, MHAParser::mhaconfig mon t, MHAParser← ::window t, MHAPlugin::plugin t< runtime cfg t >, MHAPlugin Split::split t, MHA-Plugin::plugin_t< ac2wave_t >, MHAPlugin::plugin_t< acConcat_wave_config >, M← HAPlugin::plugin_t< acPooling_wave_config >, MHAPlugin::plugin_t< acSteer_config >, MHAPlugin::plugin t< acTransform wave config >, MHAPlugin::plugin t< adm← _rtconfig_t >, MHAPlugin::plugin_t< analysepath_t >, MHAPlugin::plugin t< cfg t >, MHAPlugin::plugin_t< cohflt_t >, MHAPlugin::plugin_t< combc_t >, MHAPlugin \leftarrow ::plugin_t< db_t >, MHAPlugin::plugin_t< dc_t >, MHAPlugin::plugin_t< delaysum _t >, MHAPlugin::plugin_t< doasvm_classification_config >, MHAPlugin::plugin_t< doasym_feature_extraction_config >, MHAPlugin::plugin_t< example5_t >, MHA-Plugin::plugin t< fftfb plug t >, MHAPlugin::plugin t< fftfbpow t >, MHAPlugin← ::plugin_t< float >, MHAPlugin::plugin_t< hilbert_shifter t >, MHAPlugin::plugin == t< int >, MHAPlugin::plugin t< lpc_bl_predictor_config >, MHAPlugin::plugin_t< lpc burglattice config >, MHAPlugin::plugin t< lpc config >, MHAPlugin::plugin← $_{t}$ < MHA_AC::spectrum_t >, MHAPlugin::plugin_t< MHA_AC::waveform_t >, MH $_{\leftarrow}$ APlugin::plugin_t< mhachain::plugs_t >, MHAPlugin::plugin_t< MHASignal::delay_t >, MHAPluqin::pluqin t< MHASiqnal::waveform t >, MHAPluqin::pluqin t< MHA← Window::fun t >, MHAPlugin::plugin t < noisePowProposed >, MHAPlugin::plugin ← _t< overlapadd_t >, MHAPlugin::plugin_t< plingploing_t >, MHAPlugin::plugin_t< prediction_error_config >, MHAPlugin::plugin_t < resampling_t >, MHAPlugin::plugin ~ _t< rmslevel_t >, MHAPlugin::plugin_t< route::process_t >, MHAPlugin::plugin_t< rt_nlms_t >, MHAPlugin::plugin_t < scaler_t >, MHAPlugin::plugin_t < sine_cfg_t >, MHAPlugin::plugin_t< smoothspec_wrap_t >, MHAPlugin::plugin_t< spec2wave_t >, $\label{eq:mapping} \mbox{MHAPlugin::plugin} \ t < \mbox{ spec_fader_t } >, \ \mbox{MHAPlugin::plugin_t} < \mbox{ steerbf_config } >, \ \mbox{MH} \leftarrow$ APlugin::plugin t< timoConfig >, MHAPlugin::plugin t< wave2spec t >, MHAPlugin⊷ ::plugin t< wavwriter t >, softclipper variables t, testplugin::ac parser t, testplugin ← ::config_parser_t, and testplugin::signal_parser_t.

Public Member Functions

- parser_t (const std::string &help_text="")
 Construct detached node to be used in the configuration tree.
- ~parser_t ()
- void insert_item (const std::string &, base_t *)

Register a parser item into this sub-parser.

void remove_item (const std::string &)
 Remove an item by name.

void force_remove_item (const std::string &)

Remove an item by name.

void remove_item (const base_t *)

Remove an item by address.

Protected Member Functions

- std::string op_subparse (expression_t &)
- std::string op_setval (expression_t &)
- std::string op_query (expression_t &)
- std::string query_type (const std::string &)
- std::string query_dump (const std::string &)
- std::string query entries (const std::string &)
- std::string query_readfile (const std::string &)
- std::string query_savefile (const std::string &)
- std::string query_savefile_compact (const std::string &)
- std::string query_savemons (const std::string &)
- std::string query_val (const std::string &)
- std::string query_listids (const std::string &)
- void set_id_string (const std::string &)

Private Attributes

- entry_map_t entries
- std::string id_string identification string
- std::string srcfile
- unsigned int srcline
- std::string last errormsg

Additional Inherited Members

5.249.1 Detailed Description

Parser node class.

A parser_t (p. 654) instance is a node in the configuration tree. A parser node can contain any number of other parser_t (p. 654) instances or configuration language variables. These items are inserted into a parser node using the parser_t::insert_item (p. 656) method.

5.249.2 Constructor & Destructor Documentation

```
5.249.2.1 MHAParser::parser_t::parser_t (
const std::string & help_text = " " )
```

Construct detached node to be used in the configuration tree.

Parameters

help_text	A text describing this node. E.g. if this node lives at the root of some openMHA
	plugin, then the help text should describe the functionality of the plugin.

```
5.249.2.2 MHAParser::parser_t::~parser_t ( )
5.249.3 Member Function Documentation
5.249.3.1 void MHAParser::parser_t::insert_item (
```

const std::string & n,

MHAParser::base_t * e)

Register a parser item into this sub-parser.

This function registers an item under a given name into this sub-parser and makes it accessible to the parser interface.

Parameters

n	Name of the item in the configuration tree
е	C++ pointer to the item instance. e can either point to a variable, to a monitor, or to
	another sub-parser.

```
5.249.3.2 void MHAParser::parser_t::remove_item ( const std::string & n )
```

Remove an item by name.

If the item does not exist, an error is being reported.

Parameters

n Name of parser item to be removed from list.

```
5.249.3.3 void MHAParser::parser_t::force_remove_item ( const std::string & n )
```

Remove an item by name.

Non-existing items are ignored.

Parameters

n Name of parser item to be removed from list.

```
5.249.3.4 void MHAParser::parser_t::remove_item ( const base_t * addr )
```

Remove an item by address.

The item belonging to an address is being removed from the list of items.

Parameters

```
addr
        Address of parser item to be removed.
5.249.3.5 std::string MHAParser::parser_t::op_subparse (
                     expression_t & x ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 604).
5.249.3.6 std::string MHAParser::parser_t::op_setval (
                     expression_t & x ) [protected], [virtual]
Reimplemented from MHAParser::base t (p. 604).
5.249.3.7 std::string MHAParser::parser_t::op_query (
                     expression t&x ) [protected],[virtual]
Reimplemented from MHAParser::base t (p. 604).
5.249.3.8 std::string MHAParser::parser_t::query_type (
                     const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base t (p. 605).
5.249.3.9 std::string MHAParser::parser_t::query_dump (
                     const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 604).
5.249.3.10 std::string MHAParser::parser_t::query_entries (
                      const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 605).
5.249.3.11 std::string MHAParser::parser_t::query_readfile (
                      const std::string & fname ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 605).
```

```
5.249.3.12 std::string MHAParser::parser_t::query_savefile (
                       const std::string & fname ) [protected], [virtual]
Reimplemented from MHAParser::base t (p. 606).
5.249.3.13 std::string MHAParser::parser t::query savefile compact (
                       const std::string & fname ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 606).
5.249.3.14 std::string MHAParser::parser_t::query_savemons (
                       const std::string & fname ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 606).
5.249.3.15 std::string MHAParser::parser t::query val (
                       const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base t (p. 605).
5.249.3.16 std::string MHAParser::parser t::query listids (
                       const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 606).
5.249.3.17 void MHAParser::parser_t::set_id_string (
                       const std::string & s ) [protected]
5.249.4 Member Data Documentation
5.249.4.1 entry_map_t MHAParser::parser_t::entries [private]
5.249.4.2 std::string MHAParser::parser_t::id_string [private]
identification string
5.249.4.3 std::string MHAParser::parser_t::srcfile [private]
5.249.4.4 unsigned int MHAParser::parser_t::srcline [private]
5.249.4.5 std::string MHAParser::parser_t::last_errormsg [private]
```


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.250 MHAParser::range_var_t Class Reference

Base class for all variables with a numeric value range.

Inheritance diagram for MHAParser::range_var_t:

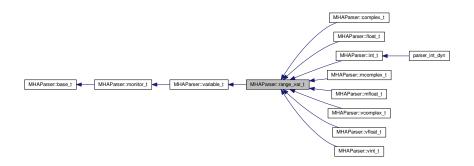

Public Member Functions

- range_var_t (const std::string &, const std::string &="")
- range_var_t (const range_var_t &)
- std::string query_range (const std::string &)
- void set_range (const std::string &r)

Change the valid range of a variable.

- void validate (const int &)
- void validate (const float &)
- void validate (const mha_complex_t &)
- void validate (const std::vector< int > &)
- void validate (const std::vector< float > &)
- void validate (const std::vector< mha_complex_t > &)
- void validate (const std::vector< std::vector< float > > &)
- void validate (const std::vector< std::vector< mha_complex_t >> &)

Protected Attributes

float low_limit

Lower limit of range.

float up_limit

Upper limit of range.

bool low_incl

Lower limit is included (or excluded) in range.

bool up_incl

Upper limit is included (or excluded) in range.

· bool check low

Check lower limit.

bool check_up

Check upper limit.

bool check_range

Range checking is active.

Additional Inherited Members

```
5.250.1 Detailed Description
```

Base class for all variables with a numeric value range.

```
5.250.2 Constructor & Destructor Documentation
```

5.250.3 Member Function Documentation

Reimplemented from MHAParser::base_t (p. 605).

```
5.250.3.2 void MHAParser::range_var_t::set_range ( const std::string & r )
```

Change the valid range of a variable.

Parameters

```
r | New range of the variable (string representation)
```

```
5.250.3.3 void MHAParser::range_var_t::validate ( const int & v )
```

```
5.250.3.4 void MHAParser::range_var_t::validate ( const float & v )
```

5.250.3.6 void MHAParser::range_var_t::validate (const std::vector< int > & ν)

```
5.250.3.7 void MHAParser::range_var_t::validate (
                      const std::vector< float > & v )
5.250.3.8 void MHAParser::range_var_t::validate (
                      const std::vector< mha_complex_t > & v )
5.250.3.9 void MHAParser::range_var_t::validate (
                      const std::vector< std::vector< float > > & \nu
5.250.3.10 void MHAParser::range_var_t::validate (
                       const std::vector< std::vector< mha complex t>> & \nu)
5.250.4 Member Data Documentation
5.250.4.1 float MHAParser::range_var_t::low_limit [protected]
Lower limit of range.
5.250.4.2 float MHAParser::range_var_t::up_limit [protected]
Upper limit of range.
5.250.4.3 bool MHAParser::range_var_t::low_incl [protected]
Lower limit is included (or excluded) in range.
5.250.4.4 bool MHAParser::range var t::up incl [protected]
Upper limit is included (or excluded) in range.
5.250.4.5 bool MHAParser::range_var_t::check_low [protected]
Check lower limit.
5.250.4.6 bool MHAParser::range_var_t::check_up [protected]
Check upper limit.
5.250.4.7 bool MHAParser::range_var_t::check_range [protected]
Range checking is active.
```


The documentation for this class was generated from the following files:

- · mha parser.hh
 - mha_parser.cpp

5.251 MHAParser::string_mon_t Class Reference

Monitor with string value.

Inheritance diagram for MHAParser::string_mon_t:

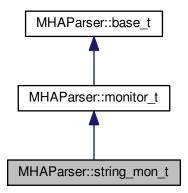

Public Member Functions

string_mon_t (const std::string &hlp)
 Create a monitor variable for string values.

Public Attributes

• std::string data

Data field.

Protected Member Functions

- std::string query_val (const std::string &)
- std::string query_type (const std::string &)

Additional Inherited Members

5.251.1 Detailed Description

Monitor with string value.

5.251.2 Constructor & Destructor Documentation

Create a monitor variable for string values.

Parameters

hlp A help text describing this monitor variable.

5.251.3 Member Function Documentation

Reimplemented from MHAParser::base_t (p. 605).

Reimplemented from **MHAParser::base_t** (p. 605).

5.251.4 Member Data Documentation

5.251.4.1 std::string MHAParser::string_mon_t::data

Data field.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.252 MHAParser::string_t Class Reference

Variable with a string value.

Inheritance diagram for MHAParser::string_t:

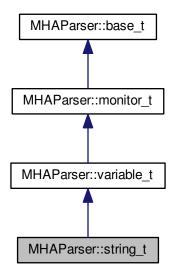

Public Member Functions

• **string_t** (const std::string &, const std::string &)

Constructor of a openMHA configuration variable for string values.

Public Attributes

• std::string data

Data field.

Protected Member Functions

- std::string op_setval (expression_t &)
- std::string query_type (const std::string &)
- std::string query_val (const std::string &)

Additional Inherited Members

5.252.1 Detailed Description

Variable with a string value.

5.252.2 Constructor & Destructor Documentation

Constructor of a openMHA configuration variable for string values.

Parameters

h	A help string describing the purpose of this variable.
V	The initial string value

5.252.3 Member Function Documentation

Reimplemented from **MHAParser::variable_t** (p. 667).

Reimplemented from MHAParser::base_t (p. 605).

Reimplemented from **MHAParser::base_t** (p. 605).

5.252.4 Member Data Documentation

5.252.4.1 std::string MHAParser::string_t::data

Data field.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.253 MHAParser::variable_t Class Reference

Base class for variable nodes.

Inheritance diagram for MHAParser::variable_t:

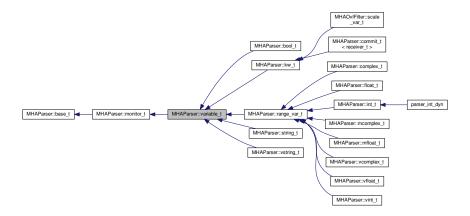

Public Member Functions

- variable_t (const std::string &)
- std::string op_setval (expression_t &)
- std::string query_perm (const std::string &)
- void setlock (const bool &)

Lock a variable against write access.

Private Attributes

bool locked

Additional Inherited Members

5.253.1 Detailed Description

Base class for variable nodes.

```
5.253.2 Constructor & Destructor Documentation
5.253.2.1 MHAParser::variable_t::variable_t (
                     const std::string & h)
5.253.3 Member Function Documentation
5.253.3.1 std::string MHAParser::variable_t::op_setval (
                     expression_t & x ) [virtual]
Reimplemented from MHAParser::base_t (p. 604).
Reimplemented in MHAParser::mcomplex_t (p. 641), MHAParser::mfloat_t (p. 645), MH←
AParser::vcomplex_t (p. 672), MHAParser::vfloat_t (p. 676), MHAParser::vint_t (p. 680),
MHAParser::complex_t (p. 621), MHAParser::float_t (p. 627), MHAParser::int_t (p. 632),
MHAParser::bool_t (p. 613), MHAParser::vstring_t (p. 684), MHAParser::string_t (p. 665),
and MHAParser::kw_t (p. 637).
5.253.3.2 std::string MHAParser::variable_t::query_perm (
                     const std::string & s ) [virtual]
Reimplemented from MHAParser::monitor_t (p. 653).
5.253.3.3 void MHAParser::variable_t::setlock (
                     const bool & b)
Lock a variable against write access.
Parameters
 b Lock state
5.253.4 Member Data Documentation
5.253.4.1 bool MHAParser::variable t::locked [private]
The documentation for this class was generated from the following files:
```


© 2005-2018 HörTech gGmbH, Oldenburg

mha_parser.hhmha_parser.cpp

5.254 MHAParser::vcomplex_mon_t Class Reference

Monitor with vector of complex values.

Inheritance diagram for MHAParser::vcomplex_mon_t:

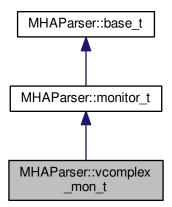

Public Member Functions

vcomplex_mon_t (const std::string &hlp)
 Create a vector of complex monitor values.

Public Attributes

std::vector< mha_complex_t > data
 Data field.

Protected Member Functions

- std::string query_val (const std::string &)
- std::string query_type (const std::string &)

Additional Inherited Members

5.254.1 Detailed Description

Monitor with vector of complex values.

5.254.2 Constructor & Destructor Documentation

5.254.2.1 MHAParser::vcomplex_mon_t::vcomplex_mon_t (const std::string & hlp)

Create a vector of complex monitor values.

hlp A help text describing this monitor variable.

5.254.3 Member Function Documentation

Reimplemented from MHAParser::base_t (p. 605).

Reimplemented from **MHAParser::base_t** (p. 605).

5.254.4 Member Data Documentation

```
5.254.4.1 std::vector<mha_complex_t> MHAParser::vcomplex_mon_t::data
```

Data field.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.255 MHAParser::vcomplex_t Class Reference

Vector variable with complex value.

Inheritance diagram for MHAParser::vcomplex_t:

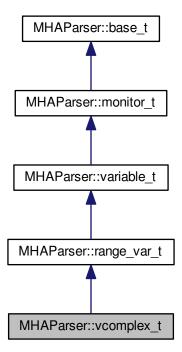

Public Member Functions

vcomplex_t (const std::string &, const std::string &, const std::string &="")

Public Attributes

std::vector< mha_complex_t > data
 Data field.

Protected Member Functions

- std::string op_setval (expression_t &)
- std::string query_type (const std::string &)
- std::string query_val (const std::string &)

Additional Inherited Members

5.255.1 Detailed Description

Vector variable with complex value.


```
5.255.2 Constructor & Destructor Documentation
5.255.2.1 MHAParser::vcomplex_t::vcomplex_t (
                      const std::string & h,
                      const std::string & v,
                      const std::string & rg = " " )
5.255.3 Member Function Documentation
5.255.3.1 std::string MHAParser::vcomplex_t::op_setval (
                      expression_t & x ) [protected], [virtual]
Reimplemented from MHAParser::variable_t (p. 667).
5.255.3.2 std::string MHAParser::vcomplex_t::query_type (
                      const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base t (p. 605).
5.255.3.3 std::string MHAParser::vcomplex_t::query_val (
                      const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base t (p. 605).
5.255.4 Member Data Documentation
5.255.4.1 std::vector<mha_complex_t> MHAParser::vcomplex_t::data
Data field.
The documentation for this class was generated from the following files:
```

- mha_parser.hh
- mha_parser.cpp

5.256 MHAParser::vfloat_mon_t Class Reference

Vector of floats monitor.

Inheritance diagram for MHAParser::vfloat_mon_t:

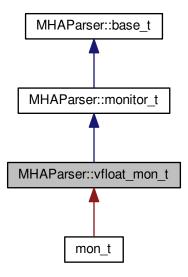

Public Member Functions

vfloat_mon_t (const std::string &hlp)
 Create a vector of floating point monitor values.

Public Attributes

std::vector< float > data
 Data field.

Protected Member Functions

- std::string query_val (const std::string &)
- std::string query_type (const std::string &)

Additional Inherited Members

5.256.1 Detailed Description

Vector of floats monitor.

```
5.256.2 Constructor & Destructor Documentation
```

```
5.256.2.1 MHAParser::vfloat_mon_t::vfloat_mon_t ( const std::string & hlp )
```

Create a vector of floating point monitor values.

Parameters

```
hlp A help text describing this monitor variable.
```

```
5.256.3 Member Function Documentation
```

Reimplemented from **MHAParser::base_t** (p. 605).

Reimplemented from **MHAParser::base_t** (p. 605).

5.256.4 Member Data Documentation

5.256.4.1 std::vector<float> MHAParser::vfloat_mon_t::data

Data field.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.257 MHAParser::vfloat_t Class Reference

Vector variable with float value.

Inheritance diagram for MHAParser::vfloat_t:

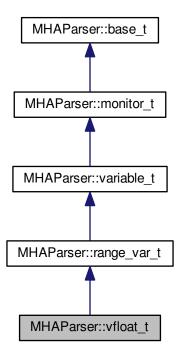

Public Member Functions

vfloat_t (const std::string &, const std::string &="")
 Create a float vector parser variable.

Public Attributes

std::vector< float > data
 Data field.

Protected Member Functions

- std::string op_setval (expression_t &)
- std::string query_type (const std::string &)
- std::string query_val (const std::string &)

Additional Inherited Members

```
5.257.1 Detailed Description
```

Vector variable with float value.

```
5.257.2 Constructor & Destructor Documentation
```

Create a float vector parser variable.

Parameters

h	A human-readable text describing the purpose of this configuration variable.	
V	The minute range of the range age.	
	(e.g. "[0 1 2.1 3]" for a vector), described in the "Multidimensional Variables"	
	s2.1.3 section of the openMHA User Manual.	
rg	The numeric range to enforce on all members of the vector.	

5.257.3 Member Function Documentation

Reimplemented from **MHAParser::variable_t** (p. 667).

Reimplemented from MHAParser::base_t (p. 605).

Reimplemented from **MHAParser::base_t** (p. 605).

5.257.4 Member Data Documentation

5.257.4.1 std::vector<float> MHAParser::vfloat_t::data

Data field.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.258 MHAParser::vint_mon_t Class Reference

Vector of ints monitor.

Inheritance diagram for MHAParser::vint_mon_t:

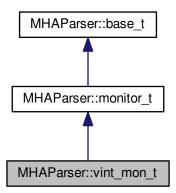

Public Member Functions

vint_mon_t (const std::string &hlp)
 Create a vector of integer monitor values.

Public Attributes

std::vector< int > data
 Data field.

Protected Member Functions

```
std::string query_val (const std::string &)
```

std::string query_type (const std::string &)

Additional Inherited Members

5.258.1 Detailed Description

Vector of ints monitor.

5.258.2 Constructor & Destructor Documentation

```
5.258.2.1 MHAParser::vint_mon_t::vint_mon_t ( const std::string & hlp )
```

Create a vector of integer monitor values.

Parameters

```
hlp A help text describing this monitor variable.
```

```
5.258.3 Member Function Documentation
```

Reimplemented from MHAParser::base_t (p. 605).

Reimplemented from **MHAParser::base_t** (p. 605).

5.258.4 Member Data Documentation

5.258.4.1 std::vector<int> MHAParser::vint_mon_t::data

Data field.


The documentation for this class was generated from the following files:

- · mha parser.hh
- mha_parser.cpp

5.259 MHAParser::vint_t Class Reference

Variable with vector<int> value.

Inheritance diagram for MHAParser::vint_t:

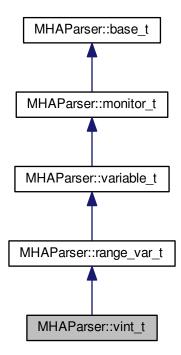

Public Member Functions

vint_t (const std::string &, const std::string &="")
 Constructor.

Public Attributes

std::vector< int > data
 Data field.

Protected Member Functions

- std::string op_setval (expression_t &)
- std::string query_type (const std::string &)
- std::string query_val (const std::string &)

Additional Inherited Members

```
5.259.1 Detailed Description
```

Variable with vector<int> value.

5.259.2 Constructor & Destructor Documentation

Constructor.

Parameters

h	help string	
V	initial value	
rg	optional: range constraint for all elements	

5.259.3 Member Function Documentation

Reimplemented from **MHAParser::variable_t** (p. 667).

Reimplemented from **MHAParser::base_t** (p. 605).

Reimplemented from **MHAParser::base_t** (p. 605).

5.259.4 Member Data Documentation

5.259.4.1 std::vector<int> MHAParser::vint_t::data

Data field.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.260 MHAParser::vstring_mon_t Class Reference

Vector of monitors with string value.

Inheritance diagram for MHAParser::vstring_mon_t:

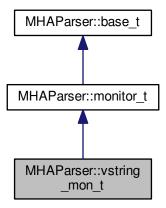

Public Member Functions

vstring_mon_t (const std::string &hlp)
 Create a vector of string monitor values.

Public Attributes

std::vector< std::string > data
 Data field.

Protected Member Functions

```
std::string query_val (const std::string &)
```

std::string query_type (const std::string &)

Additional Inherited Members

5.260.1 Detailed Description

Vector of monitors with string value.

5.260.2 Constructor & Destructor Documentation

5.260.2.1 MHAParser::vstring_mon_t::vstring_mon_t (const std::string & hlp)

Create a vector of string monitor values.

Parameters

```
hlp A help text describing this monitor variable.
```

```
5.260.3 Member Function Documentation
```

Reimplemented from **MHAParser::base_t** (p. 605).

Reimplemented from **MHAParser::base_t** (p. 605).

5.260.4 Member Data Documentation

5.260.4.1 std::vector<std::string> MHAParser::vstring_mon_t::data

Data field.


The documentation for this class was generated from the following files:

- · mha parser.hh
- mha_parser.cpp

5.261 MHAParser::vstring_t Class Reference

Vector variable with string values.

Inheritance diagram for MHAParser::vstring_t:

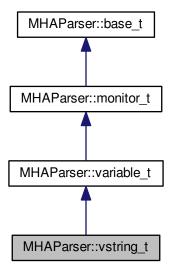

Public Member Functions

vstring_t (const std::string &, const std::string &)

Public Attributes

std::vector< std::string > data
 Data field.

Protected Member Functions

- std::string op_setval (expression_t &)
- std::string query_type (const std::string &)
- std::string query_val (const std::string &)

Additional Inherited Members

5.261.1 Detailed Description

Vector variable with string values.


```
5.261.2 Constructor & Destructor Documentation
5.261.2.1 MHAParser::vstring_t::vstring_t (
                      const std::string & h,
                      const std::string & v )
5.261.3 Member Function Documentation
5.261.3.1 std::string MHAParser::vstring_t::op_setval (
                      expression_t & x ) [protected], [virtual]
Reimplemented from MHAParser::variable_t (p. 667).
5.261.3.2 std::string MHAParser::vstring_t::query_type (
                      const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 605).
5.261.3.3 std::string MHAParser::vstring_t::query_val (
                      const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 605).
5.261.4 Member Data Documentation
5.261.4.1 std::vector<std::string> MHAParser::vstring_t::data
Data field.
The documentation for this class was generated from the following files:
```

- mha_parser.hh
- mha_parser.cpp

5.262 MHAParser::window_t Class Reference

MHA configuration interface for a window function generator.

Inheritance diagram for MHAParser::window_t:

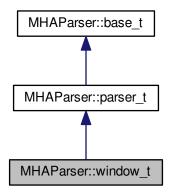

Public Types

Public Member Functions

- window_t (const std::string &help="Window type configuration.")
 Constructor to create parser class.
- MHAWindow::base_t get_window (unsigned int len) const Create a window instance, use default parameters.
- MHAWindow::base_t get_window (unsigned int len, float xmin) const Create a window instance.
- MHAWindow::base_t get_window (unsigned int len, float xmin, float xmax) const Create a window instance.
- MHAWindow::base_t get_window (unsigned int len, float xmin, float xmax, bool minincluded) const

Create a window instance.

• MHAWindow::base_t get_window (unsigned int len, float xmin, float xmax, bool minincluded, bool maxincluded) const

Create a window instance.

MHAParser::window_t::wtype_t get_type () const

Return currently selected window type.

Private Attributes

MHAParser::kw_t wtypeMHAParser::vfloat_t user

Additional Inherited Members

5.262.1 Detailed Description

MHA configuration interface for a window function generator.

This class implements a configuration interface (sub-parser) for window type selection and user-defined window type. It provides member functions to generate an instance of **MHA** Window::base_t (p. 801) based on the values provided by the configuration interface.

The configuration interface is derived from **MHAParser::parser_t** (p. 654) and can thus be inserted into the configuration tree using the **insert_item()** (p. 656) method of the parent parser.

If one of the pre-defined window types is used, then the window is generated using the **MHA** \leftarrow **Window::fun_t** (p. 804) class constructor; for the user-defined type the values from the "user" variable are copied.

```
5.262.2 Member Enumeration Documentation
```

```
5.262.2.1 enum MHAParser::window_t::wtype_t
```

Enumerator

```
wnd_rect
wnd_hann
wnd_hamming
wnd_blackman
wnd_bartlett
wnd_user
```

5.262.3 Constructor & Destructor Documentation

Constructor to create parser class.

5.262.4 Member Function Documentation

```
5.262.4.1 MHAWindow::base_t MHAParser::window_t::get_window ( unsigned int len ) const
```

Create a window instance, use default parameters.

Create a window instance.

Create a window instance.

Create a window instance.

Create a window instance.

```
5.262.4.6 MHAParser::window_t::wtype_t MHAParser::window_t::get_type ( ) const
```

Return currently selected window type.

```
5.262.5 Member Data Documentation
```

```
5.262.5.1 MHAParser::kw_t MHAParser::window_t::wtype [private]
```


```
5.262.5.2 MHAParser::vfloat_t MHAParser::window_t::user [private]
```

The documentation for this class was generated from the following files:

- mha_windowparser.h
- mha_windowparser.cpp

5.263 mhaplug_cfg_t Class Reference

Inheritance diagram for mhaplug_cfg_t:

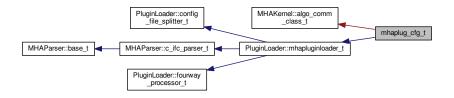

Public Member Functions

- mhaplug_cfg_t (algo_comm_t iac, const std::string &libname, bool use_own_ac)
- ~mhaplug_cfg_t () throw ()

Additional Inherited Members

5.263.1 Constructor & Destructor Documentation

5.263.1.2 mhaplug_cfg_t::~mhaplug_cfg_t() throw) [inline]

The documentation for this class was generated from the following file:

- altplugs.cpp
- 5.264 MHAPlugin::cfg_chain_t < runtime_cfg_t > Class Template Reference

Public Member Functions

- cfg_chain_t (runtime_cfg_t *id)
- ~cfg_chain_t ()

Public Attributes

```
cfg_chain_t< runtime_cfg_t > * next
```


- bool not_in_use
- runtime_cfg_t * data
- 5.264.1 Constructor & Destructor Documentation
- 5.264.1.1 template < class runtime_cfg_t > ::cfg_chain_t < runtime_cfg_t > ::cfg_chain_t (runtime_cfg_t * id)
- 5.264.1.2 template < class runtime_cfg_t > MHAPlugin::cfg_chain_t < runtime_cfg_t >:: \sim cfg_chain_t ()
- 5.264.2 Member Data Documentation
- $\label{eq:continuous} \begin{array}{lll} \textbf{5.264.2.1} & \textbf{template} < \textbf{class runtime_cfg_t} > \textbf{cfg_chain_t} < \textbf{runtime_cfg_t} > * \\ & \textbf{MHAPlugin::cfg_chain_t} < \textbf{runtime_cfg_t} > :: \textbf{next} \end{array}$
- 5.264.2.2 template < class runtime_cfg_t > bool MHAPlugin::cfg_chain_t < runtime_cfg_t >::not_in_use
- 5.264.2.3 template < class runtime_cfg_t > runtime_cfg_t * MHAPlugin::cfg_chain_t < runtime_cfg_t > ::data

The documentation for this class was generated from the following file:

- mha_plugin.hh
- 5.265 MHAPlugin::config_t< runtime_cfg_t > Class Template Reference

Template class for thread safe configuration.

Inheritance diagram for MHAPlugin::config_t< runtime_cfg_t >:

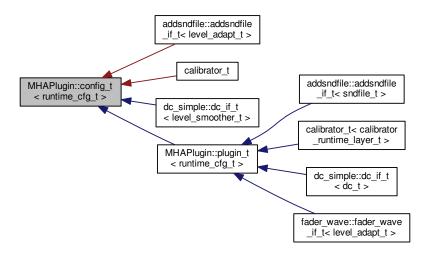

Public Member Functions

- · config_t ()
- ~config_t ()

Protected Member Functions

- runtime_cfg_t * poll_config ()
- Receive the latest run time configuration.
 runtime_cfg_t * last_config ()

Receive the latest run time configuration.

void push_config (runtime_cfg_t *ncfg)

Push a new run time configuration into the configuration fifo.

void cleanup_unused_cfg ()

Protected Attributes

• runtime_cfg_t * cfg

Private Member Functions

void remove_all_cfg ()

Private Attributes

- MHAPlugin::cfg_chain_t< runtime_cfg_t > * cfg_chain
- MHAPlugin::cfg_chain_t< runtime_cfg_t > * cfg_chain_current

5.265.1 Detailed Description

```
template < class runtime_cfg_t > class MHAPlugin::config_t < runtime_cfg_t >
```

Template class for thread safe configuration.

This template class provides a mechanism for the handling of thread safe configuration which is required for run time configuration changes of the openMHA plugins.

The template parameter runtime_cfg_t is the run time configuration class of the openMHA plugin. The constructor of that class should transform the **MHAParser** (p. 104) variables into derived runtime configuration. The constructor should fail if the configuration is invalid by any reason.

A new runtime configuration is provided by the function **push_config()** (p. 692). In the processing thread, the actual configuration can be received by a call of **poll_config()** (p. 692).

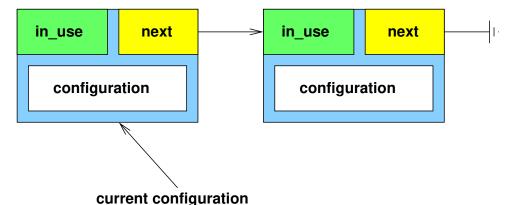


Figure 5 Schematic drawing of runtime configuration update: configuration updated, but not used yet.

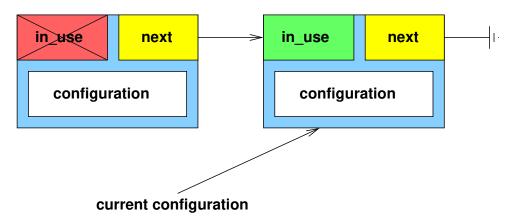


Figure 6 Schematic drawing of runtime configuration update: configuration in use.

```
5.265.2 Constructor & Destructor Documentation
```

```
5.265.2.1 template < class runtime_cfg_t > MHAPlugin::config_t < runtime_cfg_t > :::config_t ( )

5.265.2.2 template < class runtime_cfg_t > MHAPlugin::config_t < runtime_cfg_t > :::~config_t ( )

5.265.3 Member Function Documentation
```

```
5.265.3.1 template < class runtime_cfg_t > runtime_cfg_t * MHAPlugin::config_t < runtime_cfg_t > ::poll_config( ) [protected]
```

Receive the latest run time configuration.

This function stores the latest run time configuration into the protected class member variable 'cfg'. If no configuration exists, then an exception will be thrown. If no changes occured, then the value of 'cfg' will be untouched. This function should be called before any access to the 'cfg' variable, typically once in each signal processing call.

This function should be only called from the *processing* thread.

Exceptions

```
MHA_Error (p. 413) if the resulting runtime configuration is NULL. This usually means that no push_config has occured.
```

```
5.265.3.2 template < class runtime_cfg_t > runtime_cfg_t * MHAPlugin::config_t < runtime_cfg_t >::last config() [protected]
```

Receive the latest run time configuration.

This function stores the latest run time configuration into the protected class member variable 'cfg'. If no configuration exists, then an exception will be thrown. If no changes occured, then the value of 'cfg' will be untouched. This function may be called instead of poll config.

The difference between poll_config and last_config is that poll_config marks previous configurations as ready for deletion, while this function does not. Therefore, memory usage of all runtime configurations will accumulate if only this function is called, but it enables safe access to previous runtime configurations.

Also, last config does not raise an Exception when the latest run time configuration is NULL.

```
5.265.3.3 template < class runtime_cfg_t > void MHAPlugin::config_t < runtime_cfg_t >::push_config ( runtime_cfg_t * ncfg ) [protected]
```

Push a new run time configuration into the configuration fifo.

5.265	MHAPlugin::config_t < runtime_cfg_t > Class Template	
Refere	nce	693

This function adds a new run time configuration. The next time **poll_config** (p. 692) is called, this configuration will be available. Configurations which are not in use or are outdated will be removed.

This function should be only called from the *configuration* thread.

Parameters

ncfg pointer on a new configuration

Warning

The runtime configuration passed to this function will be removed by the internal garbage collector. Do not free manually.

- 5.265.3.4 template < class runtime_cfg_t > void MHAPlugin::config_t < runtime_cfg_t > ::cleanup_unused_cfg() [protected]
- 5.265.3.5 template < class runtime_cfg_t > void MHAPlugin::config_t < runtime_cfg_t >::remove_all_cfg() [private]
- 5.265.4 Member Data Documentation
- 5.265.4.1 template < class runtime_cfg_t > runtime_cfg_t * MHAPlugin::config_t < runtime_cfg_t >::cfg [protected]
- 5.265.4.2 template<class runtime_cfg_t> MHAPlugin::cfg_chain_t<runtime_cfg_t>* MHAPlugin::config_t< runtime_cfg_t >::cfg_chain [private]
- 5.265.4.3 template < class runtime_cfg_t > MHAPlugin::cfg_chain_t < runtime_cfg_t > * MHAPlugin::config_t < runtime_cfg_t > ::cfg_chain_current [private]


The documentation for this class was generated from the following file:

mha_plugin.hh

5.266 MHAPlugin::plugin t< runtime cfg t > Class Template Reference

The template class for C++ openMHA plugins.

Inheritance diagram for MHAPlugin::plugin t< runtime cfg t >:

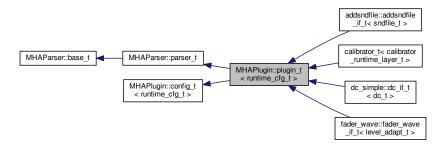

Public Member Functions

- plugin_t (const std::string &, const algo_comm_t &)
 Constructor of plugin template.
- virtual ~plugin t ()
- virtual void prepare (mhaconfig_t &)=0
- virtual void release ()
- void prepare_ (mhaconfig_t &)
- void release_()
- bool is_prepared () const

Flag, if the prepare method is successfully called (or currently evaluated)

mhaconfig_t input_cfg () const

Current input channel configuration.

mhaconfig_t output_cfg () const

Current output channel configuration.

Protected Attributes

mhaconfig_t tftype

Member for storage of plugin interface configuration.

algo_comm_t ac

AC handle of the chain.

Private Attributes

- bool is prepared
- mhaconfig_t input_cfg_
- mhaconfig_t output_cfg_
- MHAParser::mhaconfig mon t mhaconfig in
- MHAParser::mhaconfig_mon_t mhaconfig_out

Additional Inherited Members

5.266.1 Detailed Description

```
\label{lem:condition} \begin{split} & template {<} class \ runtime\_cfg\_t {>} \\ & class \ MHAPlugin::plugin\_t {<} \ runtime\_cfg\_t {>} \\ \end{split}
```

The template class for C++ openMHA plugins.

Template Parameters

runtime_ ←	run-time configuration.
cfg_t	

Todo Describe all services provided by this class, so that the reason why it is recommended that all plugins use this class as their base is evident. Document all relevant methods and fields.

This template class provides thread safe configuration handling and standard methods to be compatible to the C++ openMHA plugin wrapper macro **MHAPLUGIN_CALLBACKS** (p. 9).

The template parameter runtime_cfg_t should be the runtime configuration of the plugin.

See **MHAPlugin::config_t** (p. 689) for details on the thread safe communication update mechanism.

```
5.266.2 Constructor & Destructor Documentation
```

```
5.266.2.1 template < class runtime_cfg_t > MHAPlugin::plugin_t < runtime_cfg_t >::plugin_t ( const std::string & help, const algo_comm_t & iac )
```

Constructor of plugin template.

Parameters

help	Help comment to provide some general information about the plugin.
iac	AC space handle (will be stored into the member variable ac).

```
5.266.2.2 template < class runtime_cfg_t > MHAPlugin::plugin_t < runtime_cfg_t >::\sim plugin_t ( ) [virtual]
```

5.266.3 Member Function Documentation

```
5.266.3.1 template < class runtime_cfg_t > virtual void MHAPlugin::plugin_t < runtime_cfg_t >::prepare (

mhaconfig_t & ) [pure virtual]
```

```
Implemented in bbcalib_interface_t (p. 215), calibrator_t (p. 218), addsndfile::addsndfile ← _if_t (p. 174), testplugin::if_t (p. 901), analysispath_if_t (p. 206), adm_if_t (p. 189),
```

```
overlapadd::overlapadd if t
                              (p. 826), frequency_translator_t
                                                                  (p. 319), noisePow←
ProposedScale::interface_t
                              (p. 822), ac2lsl::ac2lsl_t
                                                          (p. 128), dc_simple::dc_if_←
t (p. 250), dc::dc if t (p. 240), multibandcompressor::interface t (p. 814), plingploing
::if t (p. 832), combc if t (p. 230), coherence::cohflt if t (p. 224), plugin interface t
(p. 839), example6_t (p. 303), smoothgains_bridge::overlapadd_if_t (p. 879), MHA←
Plugin_Resampling::resampling_if_t (p. 700), shadowfilter_end::shadowfilter_end_t
(p. 875), ac2wave if t (p. 141), noise t (p. 820), nlms t (p. 817), prediction error (p. 854),
spec2wave if t (p. 887), mhachain::chain base t (p. 465), acsave::acsave t (p. 159),
fader_wave::fader_wave_if_t (p. 307), doasym_feature_extraction (p. 270), rmslevel←
_if_t (p. 859), shadowfilter_begin::shadowfilter_begin_t (p. 872), example3_t (p. 296),
example4_t (p. 300), lpc_bl_predictor (p. 368), lpc_burglattice (p. 373), acPooling_
wave (p. 154), steerbf (p. 893), delaysum::delaysum_if_t (p. 262), lpc (p. 365), fader_if_t
(p. 305), acConcat_wave (p. 145), db_if_t (p. 236), acSteer (p. 166), acTransform_wave
(p. 170), wave2spec_if_t (p. 916), gain::gain_if_t (p. 328), fftfbpow::fftfbpow_interface_t
(p. 311), droptect_t (p. 274), example1_t (p. 290), sine_t (p. 877), doasym_classification
(p. 266), example2_t (p. 293), wavrec_t (p. 920), fftfilterbank::fftfb_interface_t (p. 315),
route::interface t (p. 862), matrixmixer::matmix t (p. 380), altplugs t (p. 200), softclip t
(p. 883), ac2osc_t (p. 138), save_spec_t (p. 868), save_wave_t (p. 869), acmon::acmon_t
(p. 151), timoSmooth (p. 912), identity_t (p. 334), delay::interface_t (p. 260), cpuload_t
(p. 234), ds t (p. 277), and us t (p. 914).
```

```
5.266.3.2 template < class runtime_cfg_t > void MHAPlugin::plugin_t < runtime_cfg_t >::release (
         ) [virtual]
```

Reimplemented in **bbcalib interface t** (p. 215), **calibrator t** (p. 218), addsndfile ::addsndfile_if_t (p. 174), analysispath_if_t (p. 206), adm_if_t (p. 189), overlapadd ::overlapadd_if_t (p. 826), frequency_translator_t (p. 319), ac2lsl::ac2lsl_t (p. 128), dc_ simple::dc_if_t (p. 250), multibandcompressor::interface_t (p. 814), coherence::cohflt _if_t (p. 224), smoothgains_bridge::overlapadd_if_t (p. 879), MHAPlugin_Resampling ← ::resampling if t (p. 700), ac2wave if t (p. 141), nlms t (p. 818), prediction error (p. 854), mhachain::chain_base_t (p. 465), acsave::acsave_t (p. 159), fader_wave← ::fader_wave_if_t (p. 307), doasym_feature_extraction (p. 271), example3_t (p. 297), example4 t (p. 300), lpc bl predictor (p. 369), lpc burglattice (p. 373), acPooling wave (p. 155), steerbf (p. 894), delaysum::delaysum_if_t (p. 262), lpc (p. 366), acConcat_wave (p. 146), db_if_t (p. 236), acSteer (p. 167), acTransform_wave (p. 171), droptect_t (p. 274), gain::gain_if_t (p. 328), example2_t (p. 293), doasym_classification (p. 267), wavrec t (p. 920), fftfilterbank::fftfb interface t (p. 315), route::interface t (p. 862), ac2osc t (p. 138), example1_t (p. 290), altplugs_t (p. 201), acmon::acmon_t (p. 152), timoSmooth (p. 912), identity_t (p. 334), ds_t (p. 277), and us_t (p. 914).

```
template < class runtime_cfg_t > void MHAPlugin::plugin_t < runtime_cfg_t >::prepare_(
                      mhaconfig_t & cf )
5.266.3.4
         template < class runtime_cfg_t > void MHAPlugin::plugin_t < runtime_cfg_t >::release_(
          )
         template < class runtime_cfg_t > bool MHAPlugin::plugin_t < runtime_cfg_t
5.266.3.5
```

Flag, if the prepare method is successfully called (or currently evaluated)

>::is_prepared() const [inline]

5.266.3.3

5.266.3.6 template < class runtime_cfg_t > mhaconfig_t MHAPlugin::plugin_t < runtime_cfg_t >::input_cfg() const [inline]

Current input channel configuration.

5.266.3.7 template < class runtime_cfg_t > mhaconfig_t MHAPlugin::plugin_t < runtime_cfg_t >::output_cfg() const [inline]

Current output channel configuration.

- 5.266.4 Member Data Documentation
- 5.266.4.1 template < class runtime_cfg_t > mhaconfig_t MHAPlugin::plugin_t < runtime_cfg_t > ::tftype [protected]

Member for storage of plugin interface configuration.

This member is defined for convenience of the developer. Typically, the actual contents of **mhaconfig_t** (p. 470) are stored in this member in the **prepare()** (p. 696) method.

Note

This member is likely to be removed in later versions, use **input_cfg()** (p. 698) and **output_cfg()** (p. 698) instead.

5.266.4.2 template < class runtime_cfg_t > algo_comm_t MHAPlugin::plugin_t < runtime_cfg_t >::ac [protected]

AC handle of the chain.

This variable is initialized in the constructor and can be used by derived plugins to access the AC space. Its contents should not be modified.

```
5.266.4.3 template < class runtime_cfg_t > bool MHAPlugin::plugin_t < runtime_cfg_t >::is_prepared_ [private]
```


- 5.266.4.4 template < class runtime_cfg_t > mhaconfig_t MHAPlugin::plugin_t < runtime_cfg_t > ::input cfg [private]
- 5.266.4.5 template < class runtime_cfg_t > mhaconfig_t MHAPlugin::plugin_t < runtime_cfg_t >::output_cfg_ [private]

The documentation for this class was generated from the following file:

· mha plugin.hh

5.267 MHAPlugin_Resampling::resampling_if_t Class Reference

Inheritance diagram for MHAPlugin_Resampling::resampling_if_t:

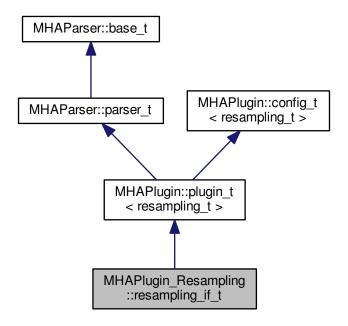

Public Member Functions

- resampling_if_t (algo_comm_t, std::string, std::string)
- mha_wave_t * process (mha_wave_t *)
- void prepare (mhaconfig_t &)
- void release ()

Private Attributes

- MHAParser::float_t srate
- MHAParser::int_t fragsize
- MHAParser::float_t nyquist_ratio
- MHAParser::float_t irslen_outer2inner
- MHAParser::float t irslen inner2outer
- MHAParser::mhapluginloader_t plugloader
- std::string chain
- std::string algo

```
Additional Inherited Members
```

```
5.267.1 Constructor & Destructor Documentation
5.267.1.1 MHAPlugin Resampling::resampling if t::resampling if t(
                      algo comm t iac,
                      std::string th,
                      std::string al )
5.267.2 Member Function Documentation
5.267.2.1 mha wave t * MHAPlugin_Resampling::resampling_if_t::process (
                      mha wave t * s)
5.267.2.2 void MHAPlugin Resampling::resampling if t::prepare (
                      mhaconfig t&conf) [virtual]
Implements MHAPlugin::plugin_t < resampling_t > (p. 696).
5.267.2.3 void MHAPlugin_Resampling::resampling_if_t::release (
                     void ) [virtual]
Reimplemented from MHAPlugin::plugin t < resampling t > (p. 697).
5.267.3 Member Data Documentation
5.267.3.1 MHAParser::float_t MHAPlugin_Resampling::resampling_if_t::srate [private]
5.267.3.2 MHAParser::int t MHAPlugin Resampling::resampling if t::fragsize [private]
5.267.3.3 MHAParser::float t MHAPlugin_Resampling::resampling_if_t::nyquist_ratio
          [private]
5.267.3.4 MHAParser::float t MHAPlugin_Resampling::resampling_if_t::irslen_outer2inner
          [private]
5.267.3.5 MHAParser::float t MHAPlugin Resampling::resampling if t::irslen inner2outer
          [private]
5.267.3.6 MHAParser::mhapluginloader t MHAPlugin Resampling::resampling if t::plugloader
          [private]
5.267.3.7 std::string MHAPlugin_Resampling::resampling_if_t::chain [private]
5.267.3.8 std::string MHAPlugin_Resampling::resampling_if_t::algo [private]
The documentation for this class was generated from the following file:
```

· resampling.cpp

5.268 MHAPlugin Resampling::resampling t Class Reference

Public Member Functions

- resampling_t (unsigned int outer_fragsize, float outer_srate, unsigned int inner_← fragsize, float inner_scrate, unsigned int nch_in, float filter_length_in, unsigned int nch← _out, float filter_length_out, float nyquist_ratio, MHAParser::mhapluginloader_t &plug)
- mha wave t * process (mha wave t *)

Private Attributes

- unsigned outer_fragsize
- unsigned inner fragsize
- float outer_srate
- float inner srate
- · unsigned nchannels in
- unsigned nchannels_out
- MHAFilter::blockprocessing polyphase resampling t outer2inner resampling
- MHAFilter::blockprocessing_polyphase_resampling_t inner2outer_resampling
- MHAParser::mhapluginloader_t & plugloader
- MHASignal::waveform_t inner_signal
- MHASignal::waveform_t output_signal

5.268.1 Constructor & Destructor Documentation

```
MHAPlugin_Resampling::resampling_t::resampling_t (
5.268.1.1
                        unsigned int outer_fragsize,
                        float outer_srate,
                        unsigned int inner fragsize,
                        float inner scrate,
                        unsigned int nch_in,
                        float filter_length_in,
                        unsigned int nch out,
                        float filter length out,
                        float nyquist_ratio,
                        MHAParser::mhapluginloader_t & plug )
```

5.268.2 Member Function Documentation

```
5.268.2.1 mha_wave_t * MHAPlugin_Resampling::resampling_t::process (
                     mha_wave_t * s )
```

5.268.3 Member Data Documentation

5.268.3.1	<pre>unsigned MHAPlugin_Resampling::resampling_t::outer_fragsize [private]</pre>
5.268.3.2	unsigned MHAPlugin_Resampling::resampling_t::inner_fragsize [private]
5.268.3.3	float MHAPlugin_Resampling::resampling_t::outer_srate [private]
5.268.3.4	float MHAPlugin_Resampling::resampling_t::inner_srate [private]
5.268.3.5	<pre>unsigned MHAPlugin_Resampling::resampling_t::nchannels_in [private]</pre>
5.268.3.6	<pre>unsigned MHAPlugin_Resampling::resampling_t::nchannels_out [private]</pre>
5.268.3.7	MHAFilter::blockprocessing_polyphase_resampling_t MHAPlugin_Resampling::resampling_t::outer2inner_resampling [private]
5.268.3.8	MHAFilter::blockprocessing_polyphase_resampling_t MHAPlugin_Resampling::resampling_t::inner2outer_resampling [private]
5.268.3.9	MHAParser::mhapluginloader_t& MHAPlugin_Resampling::resampling_t::plugloader [private]
5.268.3.10	MHASignal::waveform_t MHAPlugin_Resampling::resampling_t::inner_signal [private]
5.268.3.11	MHASignal::waveform_t MHAPlugin_Resampling::resampling_t::output_signal [private]


The documentation for this class was generated from the following file:

resampling.cpp

5.269 MHAPlugin_Split::domain_handler_t Class Reference

Handles domain-specific partial input and output signal.

Inheritance diagram for MHAPlugin_Split::domain_handler_t:

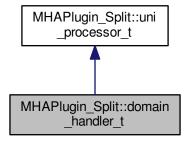

Public Member Functions

void set_input_domain (const mhaconfig_t &settings_in)

Set parameters of input signal.

void set_output_domain (const mhaconfig_t &settings_out)

Set output signal parameters.

void deallocate domains ()

Deallocate domain indicators and signal holders.

domain_handler_t (const mhaconfig_t &settings_in, const mhaconfig_t &settings_out,
 PluginLoader::fourway_processor_t *processor)

Construct a new domain handler once the domains and dimensions of input and output signal of one of the child plugins of split are known.

virtual ~domain_handler_t ()

Deallocation of signal holders.

• unsigned **put_signal** (**mha_wave_t** *s_in, unsigned start_channel)

Store the relevant channels from the input signal for processing.

unsigned put_signal (mha_spec_t *s_in, unsigned start_channel)

Store the relevant channels from the input signal for processing.

• unsigned **get_signal** (**MHASignal::waveform_t** *s_out, unsigned start_channel)

Store all partial signal output channels in the combined waveform signal with the given channel offset.

unsigned get_signal (MHASignal::spectrum_t *s_out, unsigned start_channel)

Store all partial signal output channels in the combined spectrum signal with the given channel offset.

void process ()

Call the processing method of the processor with configured input/output signal domains.

Public Attributes

MHASignal::waveform t * wave in

Partial wave input signal.

mha_wave_t ** wave_out

Partial wave output signal.

MHASignal::spectrum t * spec in

Partial spec input signal.

mha_spec_t ** spec_out

Partial spec input signal.

PluginLoader::fourway_processor_t * processor_

The domain-specific signal processing methods are implemented here.

Private Member Functions

domain handler t (const domain handler t &)

Disallow copy constructor.

domain_handler_t & operator= (const domain_handler_t &)

Disallow assignment operator.

5.269.1 Detailed Description

Handles domain-specific partial input and output signal.

```
5.269.2 Constructor & Destructor Documentation
```

Disallow copy constructor.

Construct a new domain handler once the domains and dimensions of input and output signal of one of the child plugins of split are known.

```
5.269.2.3 virtual MHAPlugin_Split::domain_handler_t::~domain_handler_t ( ) [inline], [virtual]
```

Deallocation of signal holders.

5.269.3 Member Function Documentation

Disallow assignment operator.

Set parameters of input signal.

Parameters

settings⇔	domain and dimensions of partial input signal
in	

Set output signal parameters.

Parameters

settings_out domain and dimensions of partial

```
5.269.3.4 void MHAPlugin_Split::domain_handler_t::deallocate_domains() [inline]
```

Deallocate domain indicators and signal holders.

Store the relevant channels from the input signal for processing.

The number of channels to store is taken from the dimensions of the partial input signal holder **wave_in** (p. 707).

Parameters

s_in T	The combined waveform input signal.
_	The index (0-based) of the first channel in s_in to be copied to the partial input signal.

Returns

The number of channels that were copied from the input signal

Store the relevant channels from the input signal for processing.

The number of channels to store is taken from the dimensions of the partial input signal holder **spec_in** (p. 707).

Parameters

s_in	The combined spectrum input signal.
start_channel	The index (0-based) of the first channel in s_in to be copied to the partial
	input signal.

Returns

The number of channels that were copied from the input signal

Store all partial signal output channels in the combined waveform signal with the given channel offset.

All channels present in **wave_out** (p. 707) will be copied. Caller may use (*wave_out)->numchannels to check the number of channels in advance.

Parameters

s_out	The combined waveform output signal.
start_channel	The channel offset (0-based) in s_out.

Returns

The number of channels that were copied to the output signal

Store all partial signal output channels in the combined spectrum signal with the given channel offset.

All channels present in **spec_out** (p. 707) will be copied. Caller may use (*spec_out)->numcohannels to check the number of channels in advance.

Parameters

s_out	The combined spectrum output signal.
start_channel	The channel offset (0-based) in s_out.

Returns

The number of channels that were copied to the output signal

Call the processing method of the processor with configured input/output signal domains.

The input signal has to be stored using **put_signal** (p. 705) before this method may be called. Implements **MHAPlugin_Split::uni_processor_t** (p. 726).

5.269.4 Member Data Documentation

5.269.4.1 MHASignal::waveform t* MHAPlugin_Split::domain_handler_t::wave_in

Partial wave input signal.

5.269.4.2 mha_wave_t** MHAPlugin_Split::domain_handler_t::wave_out

Partial wave output signal.

5.269.4.3 MHASignal::spectrum_t* MHAPlugin_Split::domain_handler_t::spec_in

Partial spec input signal.

5.269.4.4 mha_spec_t** MHAPlugin_Split::domain_handler_t::spec_out

Partial spec input signal.

5.269.4.5 PluginLoader::fourway_processor_t* MHAPlugin_Split::domain_handler_t::processor


The domain-specific signal processing methods are implemented here.

The documentation for this class was generated from the following file:

split.cpp

5.270 MHAPlugin_Split::dummy_threads_t Class Reference

Dummy specification of a thread platform: This class implements everything in a single thread. Inheritance diagram for MHAPlugin_Split::dummy_threads_t:

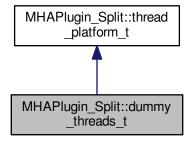

Public Member Functions

void kick_thread ()

perform signal processing immediately (no multiple threads in this dummy class)

void catch thread ()

No implementation needed: Processing has been completed during ummy_threads_t::kick_← thread

 dummy_threads_t (uni_processor_t *proc, const std::string &thread_scheduler, int thread_priority)

Constructor.

Additional Inherited Members

5.270.1 Detailed Description

Dummy specification of a thread platform: This class implements everything in a single thread.

5.270.2 Constructor & Destructor Documentation

Constructor.

Parameters

proc	Pointer to the associated plugin loader
thread_scheduler	Unused in dummy thread platform
thread_priority	Unused in dummy thread platform

5.270.3 Member Function Documentation

```
5.270.3.1 void MHAPlugin_Split::dummy_threads_t::kick_thread( ) [inline], [virtual]
```

perform signal processing immediately (no multiple threads in this dummy class)

Implements MHAPlugin_Split::thread_platform_t (p. 724).

5.270.3.2 void MHAPlugin_Split::dummy_threads_t::catch_thread() [inline], [virtual]

No implementation needed: Processing has been completed during ummy_threads_t::kick_ thread.

Implements MHAPlugin_Split::thread_platform_t (p. 724).


The documentation for this class was generated from the following file:

split.cpp

5.271 MHAPlugin_Split::posix_threads_t Class Reference

Posix threads specification of thread platform.

Inheritance diagram for MHAPlugin_Split::posix_threads_t:

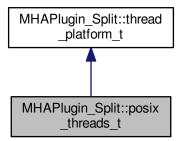

Public Member Functions

void kick_thread ()

Start signal processing in separate thread.

void catch_thread ()

Wait for signal processing to finish.

 posix_threads_t (uni_processor_t *proc, const std::string &thread_scheduler, int thread_priority)

Constructor.

~posix_threads_t ()

Terminate thread.

• void main ()

Thread main loop. Wait for process/termination trigger, then act.

Static Public Member Functions

static void * thread_start (void *thr)

Thread start function.

- static std::string current_thread_scheduler ()
- static int current_thread_priority ()

Private Attributes

pthread_mutex_t mutex

The mutex.

pthread_cond_t kick_condition

The condition for signalling the kicking and termination.

pthread_cond_t catch_condition

The condition for signalling the processing is finished.

• pthread_attr_t attr

Thread attributes.

struct sched_param priority

Thread scheduling priority.

- · int scheduler
- pthread_t thread

The thread object.

bool kicked

A flag that is set to true by kick_thread and to false by the thread after it has woken up from the kicking.

• bool processing_done

A flag that is set to true by the thread when it returns from processing and to false by catch_
thread after it has waited for that return.

bool termination request

Set to true by the destructor.

Additional Inherited Members

5.271.1 Detailed Description

Posix threads specification of thread platform.

5.271.2 Constructor & Destructor Documentation

Constructor.

Parameters

proc	Pointer to the associated signal processor instance
thread_scheduler	A string describing the posix thread scheduler. Possible values:
	"SCHED_OTHER", "SCHED_RR", "SCHED_FIFO".
thread_priority	The scheduling priority of the new thread.

5.271.2.2 MHAPlugin_Split::posix_threads_t::~posix_threads_t() [inline]

Terminate thread.

5.271.3 Member Function Documentation

5.271.3.1 void MHAPlugin_Split::posix_threads_t::kick_thread() [inline], [virtual]

Start signal processing in separate thread.

Implements MHAPlugin_Split::thread_platform_t (p. 724).

5.271.3.2 void MHAPlugin_Split::posix_threads_t::catch_thread() [inline], [virtual]

Wait for signal processing to finish.

Implements MHAPlugin_Split::thread_platform_t (p. 724).

```
5.271.3.3 static void* MHAPlugin_Split::posix_threads_t::thread_start ( void * thr ) [inline], [static]
```

Thread start function.

5.271.3.4 void MHAPlugin_Split::posix_threads_t::main() [inline]

Thread main loop. Wait for process/termination trigger, then act.

```
5.271.3.5 static std::string MHAPlugin_Split::posix_threads_t::current_thread_scheduler( ) [inline], [static]
```

5.271.3.6 static int MHAPlugin_Split::posix_threads_t::current_thread_priority() [inline], [static]

5.271.4 Member Data Documentation

5.271.4.1 pthread_mutex_t MHAPlugin_Split::posix_threads_t::mutex [private]

The mutex.

5.271.4.2 pthread_cond_t MHAPlugin_Split::posix_threads_t::kick_condition [private]

The condition for signalling the kicking and termination.

5.271.4.3 pthread_cond_t MHAPlugin_Split::posix_threads_t::catch_condition [private]

The condition for signalling the processing is finished.

5.271.4.4 pthread_attr_t MHAPlugin_Split::posix_threads_t::attr [private]

Thread attributes.

5.271.4.5 struct sched_param MHAPlugin_Split::posix_threads_t::priority [private]

Thread scheduling priority.

5.271.4.6 int MHAPlugin_Split::posix_threads_t::scheduler [private]

5.271.4.7 pthread_t MHAPlugin_Split::posix_threads_t::thread [private]

The thread object.

5.271.4.8 bool MHAPlugin_Split::posix_threads_t::kicked [private]

A flag that is set to true by kick_thread and to false by the thread after it has woken up from the kicking.

5.271.4.9 bool MHAPlugin_Split::posix_threads_t::processing_done [private]

A flag that is set to true by the thread when it returns from processing and to false by catch_ thread after it has waited for that return.

5.271.4.10 bool MHAPlugin_Split::posix_threads_t::termination_request [private]

Set to true by the destructor.


The documentation for this class was generated from the following file:

split.cpp

5.272 MHAPlugin_Split::split_t Class Reference

Implements split plugin.

Inheritance diagram for MHAPlugin_Split::split_t:

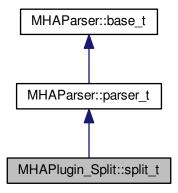

Public Member Functions

- **split_t** (**algo_comm_t** iac, const std::string &chain_name, const std::string &algo_name) *Plugin constructor.*
- ~split_t ()

Plugin destructor. Unloads nested plugins.

void prepare_ (mhaconfig_t &)

Check signal parameters, prepare chains, and allocate output signal holders.

void release_ ()

Delete output signal holder and release chains.

template<class SigTypeIn , class SigTypeOut > void process (SigTypeIn *, SigTypeOut **)

Let the parallel plugins process channel groups of the input signal.

Private Member Functions

• void update ()

Load plugins in response to a value change in the algos variable.

void clear_chains ()

Unload the plugins.

- mha_wave_t * copy_output_wave ()
- mha_spec_t * copy_output_spec ()

template<class SigType >

void trigger_processing (SigType *s_in)

Split the argument input signal to groups of channels for the plugins and initiate signal processing.

template<class SigType >

void collect_result (SigType *s_out)

Combine the output signal from the plugins.

MHASignal::waveform_t * signal_out (mha_wave_t **)

Waveform domain output signal structure accessor.

MHASignal::spectrum_t * signal_out (mha_spec_t **)

Spectrum domain output signal structure. Parameter is ignored.

Private Attributes

MHAEvents::patchbay_t< split_t > patchbay

Reload plugins when the algos variable changes.

MHAParser::vstring_t algos

Vector of plugins to load in parallel.

• MHAParser::vint t channels

Number of channels to route through each plugin.

MHAParser::kw t thread platform

Thread platform chooser.

MHAParser::kw_t worker_thread_scheduler

Scheduler used for worker threads.

MHAParser::int_t worker_thread_priority

Priority of worker threads.

MHAParser::string_mon_t framework_thread_scheduler

Scheduler of the signal processing thread.

MHAParser::int_mon_t framework_thread_priority

Priority of signal processing thread.

MHAParser::bool t delay

Switch to activate parallel processing of plugins at the cost of one block of additional delay.

std::vector< splitted_part_t * > chains

Interfaces to parallel plugins.

MHASignal::waveform_t * wave_out

Combined output waveforms structure.

MHASignal::spectrum_t * spec_out

Combined output spectra structure.

Additional Inherited Members

5.272.1 Detailed Description

Implements split plugin.

An instance of class **split_t** (p. 713) implements the split plugin functionality: The audio channels are splitted and groups of audio channels are processed by different plugins in parallel.

```
5.272.2 Constructor & Destructor Documentation
5.272.2.1 MHAPlugin_Split::split_t::split_t (
                       algo_comm_t iac,
                       const std::string & chain_name,
                       const std::string & algo_name )
Plugin constructor.
5.272.2.2 MHAPlugin_Split::split_t::~split_t()
Plugin destructor. Unloads nested plugins.
5.272.3 Member Function Documentation
5.272.3.1 void MHAPlugin_Split::split_t::prepare_(
                       mhaconfig t & signal_parameters )
Check signal parameters, prepare chains, and allocate output signal holders.
5.272.3.2 void MHAPlugin_Split::split_t::release_( )
Delete output signal holder and release chains.
5.272.3.3 template < class SigTypeIn , class SigTypeOut > void MHAPlugin_Split::split_t::process (
                       SigTypeIn * s_in,
                       SigTypeOut ** s out )
Let the parallel plugins process channel groups of the input signal.
5.272.3.4 void MHAPlugin Split::split t::update( ) [private]
Load plugins in response to a value change in the algos variable.
5.272.3.5 void MHAPlugin_Split::split_t::clear_chains( ) [private]
Unload the plugins.
5.272.3.6 mha wave t* MHAPlugin Split::split t::copy output wave( ) [private]
```

Split the argument input signal to groups of channels for the plugins and initiate signal processing.

5.272.3.7 mha_spec_t* MHAPlugin_Split::split_t::copy_output_spec() [private]

5.272.3.8 template < class SigType > void MHAPlugin_Split::split_t::trigger_processing (

SigType * s_in) [private]

Combine the output signal from the plugins.

Waveform domain output signal structure accessor.

Parameter is only for domain disambiguation and is ignored.

Spectrum domain output signal structure. Parameter is ignored.

5.272.4 Member Data Documentation

5.272.4.1 MHAEvents::patchbay_t<split_t> MHAPlugin_Split::split_t::patchbay [private]

Reload plugins when the algos variable changes.

5.272.4.2 MHAParser::vstring_t MHAPlugin_Split::split_t::algos [private]

Vector of plugins to load in parallel.

5.272.4.3 MHAParser::vint_t MHAPlugin_Split::split_t::channels [private]

Number of channels to route through each plugin.

5.272.4.4 MHAParser::kw t MHAPlugin_Split::split_t::thread_platform [private]

Thread platform chooser.

5.272.4.5 MHAParser::kw_t MHAPlugin_Split::split_t::worker_thread_scheduler [private]

Scheduler used for worker threads.

5.272.4.6 MHAParser::int t MHAPlugin_Split::split_t::worker_thread_priority [private]

Priority of worker threads.

5.272.4.7 MHAParser::string_mon_t MHAPlugin_Split::split_t::framework_thread_scheduler [private]

Scheduler of the signal processing thread.

5.272.4.8 MHAParser::int_mon_t MHAPlugin_Split::split_t::framework_thread_priority [private]

Priority of signal processing thread.

5.272.4.9 MHAParser::bool t MHAPlugin_Split::split_t::delay [private]

Switch to activate parallel processing of plugins at the cost of one block of additional delay.

5.272.4.10 std::vector<splitted_part_t*> MHAPlugin_Split::split_t::chains [private]

Interfaces to parallel plugins.

5.272.4.11 MHASignal::waveform t* MHAPlugin_Split::split_t::wave_out [private]

Combined output waveforms structure.

5.272.4.12 MHASignal::spectrum_t* MHAPlugin_Split::split_t::spec_out [private]

Combined output spectra structure.


The documentation for this class was generated from the following file:

split.cpp

5.273 MHAPlugin_Split::splitted_part_t Class Reference

The **splitted_part_t** (p. 717) instance manages the plugin that performs processing on the reduced set of channels.

Inheritance diagram for MHAPlugin_Split::splitted_part_t:

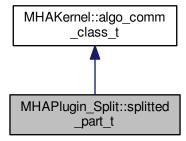

Public Member Functions

• splitted_part_t (const std::string &plugname, MHAParser::parser_t *parent)

Load the plugin for this partial signal path.

splitted_part_t (PluginLoader::fourway_processor_t *plugin)

Create the handler for the partial signal.

• ~splitted part t () throw ()

Destructor. Deletes the plugin plug (p. 721).

 void prepare (mhaconfig_t &signal_parameters, const std::string &thread_platform, const std::string &thread_scheduler, int thread_priority)

Delegates the prepare method to the plugin and allocates a suitable **MHAPlugin_Split ::domain_handler_t** (p. 702) instance.

• void release ()

Delegates the release method to the plugin and deletes the **MHAPlugin_Split::domain_**← **handler_t** (p. 702) instance.

• std::string parse (const std::string &str)

Delegates parser incovation to plugin.

template<class SigType >

unsigned **trigger_processing** (SigType *s_in, unsigned start_channel)

The domain handler copies the input signal channels.

template<class SigType >

unsigned collect_result (SigType *s_out, unsigned start_channel)

Wait until processing is finished, then copy the output data.

Private Member Functions

splitted_part_t (const splitted_part_t &)

Disallow copy constructor.

splitted_part_t & operator= (const splitted_part_t &)

Disallow assignment operator.

Private Attributes

PluginLoader::fourway_processor_t * plug

The plugin that performs the signal processing on the prepared channels.

domain_handler_t * domain

The domain specific signal handler, allocated from prepare when input and output domains and signal parameters are known.

thread platform t * thread

The platform-dependent thread synchronization implementation.

Additional Inherited Members

5.273.1 Detailed Description

The **splitted_part_t** (p. 717) instance manages the plugin that performs processing on the reduced set of channels.

The signal is split by channels by this instance, but the signal is combined again by the calling class.

5.273.2 Constructor & Destructor Documentation

Disallow copy constructor.

Load the plugin for this partial signal path.

Loads the MHA plugin for a signal path of these audio channels.

Parameters

plugname	The name of the MHA plugin, optionally followed by a colon and the algorithm	
	name.	
parent	The parser node where the configuration of the new plugin is inserted. The plugin's parser name is the configured name (colon syntax).	

Create the handler for the partial signal.

The plugin is loaded by the caller, but it will be deleted by the destructor of this class. This constructor exists solely for testing purposes.

Parameters

plugin	The plugin used for processing the signal. The new splitted_part_t (p. 719)
	instance will take ownership of this instance and release it in the destructor.

```
5.273.2.4 MHAPlugin_Split::splitted_part_t::~splitted_part_t ( ) throw )
```

Destructor. Deletes the plugin **plug** (p. 721).

5.273.3 Member Function Documentation

Disallow assignment operator.

Delegates the prepare method to the plugin and allocates a suitable **MHAPlugin_Split** ::domain_handler_t (p. 702) instance.

Prepare the loaded plugin.

Plugin preparation.

Parameters

signal_parameters	The signal description parameters for this path.
thread_platform	The name of the thread platform to use. Possible values: "posix", "win32", "dummy".
thread_scheduler	The name of the scheduler to use. Posix threads support "SCHED_OTHER", "SCHED_RR", "SCHED_FIFO". The other thread platforms do not support different thread schedulers. This value is not used for platforms other than "posix".
thread_priority	The new thread priority. Interpretation and permitted range depend on the thread platform and possibly on the scheduler.

```
5.273.3.3 void MHAPlugin_Split::splitted_part_t::release ( void )
```

Delegates the release method to the plugin and deletes the **MHAPlugin_Split::domain_** \leftarrow **handler_t** (p. 702) instance.

Release the loaded plugin.

Plugin release.

Delegates parser incovation to plugin.

```
5.273.3.5 template < class SigType > unsigned MHAPlugin_Split::splitted_part_t::trigger_processing ( SigType * s_in, unsigned start_channel ) [inline]
```

The domain handler copies the input signal channels.

Then, processing is initiated.

Parameters

s_in	The combined input signal.
start_channel	The index (0-based) of the first channel in s_in to be copied to the partial input signal.

Returns

The number of channels that were copied from the input signal

Wait until processing is finished, then copy the output data.

Parameters

s_out	The combined waveform output signal.
start_channel	The channel offset (0-based) in s_out.

Returns

The number of channels that were copied to the output signal

5.273.4 Member Data Documentation

5.273.4.1 PluginLoader::fourway_processor_t* MHAPlugin_Split::splitted_part_t::plug [private]

The plugin that performs the signal processing on the prepared channels.

5.273.4.2 domain_handler_t* MHAPlugin_Split::splitted_part_t::domain [private]

The domain specific signal handler, allocated from prepare when input and output domains and signal parameters are known.

5.273.4.3 thread_platform_t* MHAPlugin_Split::splitted_part_t::thread [private]

The platform-dependent thread synchronization implementation.


The documentation for this class was generated from the following file:

split.cpp

5.274 MHAPlugin_Split::thread_platform_t Class Reference

Basic interface for encapsulating thread creation, thread priority setting, and synchronization on any threading platform (i.e., pthreads or win32threads).

Inheritance diagram for MHAPlugin_Split::thread_platform_t:

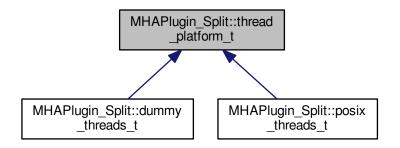

Public Member Functions

thread_platform_t (uni_processor_t *proc)

Constructor.

virtual ~thread_platform_t ()

Make derived classes destructable via pointer to this base class.

• virtual void kick thread ()=0

Derived classes notify their processing thread that it should call processor->process().

• virtual void catch_thread ()=0

Derived classes wait for their signal processing thread to return from the call to part->process().

Protected Attributes

uni_processor_t * processor

A pointer to the plugin loader that processes the sound data in the channels for which this thread was created.

Private Member Functions

- thread_platform_t (const thread_platform_t &)
 Disallow copy constructor.
- thread_platform_t & operator= (const thread_platform_t &)

Disallow assignment operator.

5.274.1 Detailed Description

Basic interface for encapsulating thread creation, thread priority setting, and synchronization on any threading platform (i.e., pthreads or win32threads).

Derived classes specialize in the actual thread platform.

```
5.274.2 Constructor & Destructor Documentation
```

Disallow copy constructor.

Constructor.

Derived classes create the thread in the constructor.

Parameters

```
Pointer to the associated plugin loader. This plugin loader has to live at least as long as this instance. This instance does not take possession of the plugin loader. In production code, this thread platform and the plugin loader are both created and destroyed by the MHAPlugin_Split::splitted_part_t (p. 717) instance.
```

```
5.274.2.3 virtual MHAPlugin_Split::thread_platform_t::~thread_platform_t ( ) [inline], [virtual]
```

Make derived classes destructable via pointer to this base class.

Derived classes' destructors notify the thread that it should terminate itself, and wait for the termination to occur.

5.274.3 Member Function Documentation

Disallow assignment operator.

```
5.274.3.2 virtual void MHAPlugin_Split::thread_platform_t::kick_thread() [pure virtual]
```

Derived classes notify their processing thread that it should call processor->process().

Implemented in MHAPlugin_Split::posix_threads_t (p. 711), and MHAPlugin_Split

::dummy_threads_t (p. 708).

```
5.274.3.3 virtual void MHAPlugin Split::thread platform t::catch thread ( ) [pure virtual]
```

Derived classes wait for their signal processing thread to return from the call to part->process().

Implemented in MHAPlugin_Split::posix_threads_t (p. 711), and MHAPlugin_Split

::dummy threads t (p. 709).

5.274.4 Member Data Documentation

```
5.274.4.1 uni processor t* MHAPlugin_Split::thread_platform_t::processor [protected]
```

A pointer to the plugin loader that processes the sound data in the channels for which this thread was created.

Using the **MHAPlugin_Split::uni_processor_t** (p. 725) interface instead of the mhaplugin-loader class directly for testability (no need to load real plugins for testing the thread platform).


The documentation for this class was generated from the following file:

· split.cpp

5.275 MHAPlugin_Split::uni_processor_t Class Reference

An interface to a class that sports a process method with no parameters and no return value.

Inheritance diagram for MHAPlugin_Split::uni_processor_t:

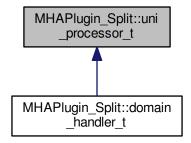

Public Member Functions

• virtual void process ()=0

This method uses some input signal, performs processing and stores the output signal somewhere.

virtual ~uni_processor_t ()

Classes containing virtual methods need virtual destructors.

5.275.1 Detailed Description

An interface to a class that sports a process method with no parameters and no return value.

No signal transfer occurs through this interface, because the signal transfer is performed in another thread than the processing.

5.275.2 Constructor & Destructor Documentation

5.275.2.1 virtual MHAPlugin_Split::uni_processor_t::~uni_processor_t() [inline], [virtual]

Classes containing virtual methods need virtual destructors.

5.275.3 Member Function Documentation

5.275.3.1 virtual void MHAPlugin_Split::uni_processor_t::process() [pure virtual]

This method uses some input signal, performs processing and stores the output signal somewhere.

This method also has to dispatch the process call based on the configured domains.

Signal transfer and domain configuration have to be done in derived class in different methods.

Implemented in MHAPlugin_Split::domain_handler_t (p. 706).


The documentation for this class was generated from the following file:

split.cpp

5.276 mhaserver_t Class Reference

MHA Framework listening on TCP port for commands.

Inheritance diagram for mhaserver_t:

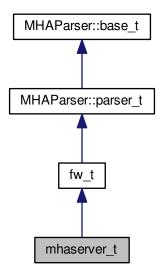

Public Member Functions

- mhaserver_t (const std::string &ao, const std::string &af, const std::string &lf)
- ~mhaserver t()
- virtual std::string received_group (const std::string &line)

A line of text was received from network client.

virtual void acceptor_started (int status)

Notification: "TCP port is open".

virtual void set_announce_port (unsigned short announce_port)

If set to nonzero, the spawning process has asked to be notified of the TCP port used by this process.

void logstring (const std::string &)

Log a message to log file.

int run (unsigned short port, const std::string &_interface)

Accept network connections and act on commands.

Public Attributes

MHAParser::int_t port

Private Attributes

- MHA_TCP::Server * tcpserver
- std::string ack_ok
- std::string ack_fail
- std::string logfile
- unsigned short announce_port
- MHAParser::int_mon_t pid_mon

Additional Inherited Members

5.276.1 Detailed Description

MHA Framework listening on TCP port for commands.

5.276.2 Constructor & Destructor Documentation

Parameters

а	0	Acknowledgement string at end of successful command respons	
a	f	Achknoledgement string at end of failed command responses	
lf		File system path of file to use as log file. MHA appends.	

Accept network connections and act on commands.

unsigned short port,

const std::string & _interface)

5.276.3.5 int mhaserver_t::run (

Calls **acceptor_started()** (p. 728) when the TCP port is opened. Calls received_group for every line received.

Returns

exit code that can be used as process exit code

5.276.4 Member Data Documentation

```
5.276.4.1 MHA_TCP::Server* mhaserver_t::tcpserver [private]
```

5.276.4.2 std::string mhaserver_t::ack_ok [private]

5.276.4.3 std::string mhaserver_t::ack_fail [private]

5.276.4.4 std::string mhaserver_t::logfile [private]

5.276.4.5 unsigned short mhaserver_t::announce_port [private]

5.276.4.6 MHAParser::int_mon_t mhaserver_t::pid_mon [private]

5.276.4.7 MHAParser::int_t mhaserver_t::port


The documentation for this class was generated from the following file:

· mhamain.cpp

5.277 MHASignal::async_rmslevel_t Class Reference

Class for asynchronous level metering.

Inheritance diagram for MHASignal::async_rmslevel_t:

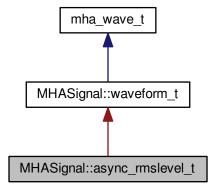

Public Member Functions

• async_rmslevel_t (unsigned int frames, unsigned int channels)

Constructor for level metering class.

• std::vector< float > rmslevel () const

Read-only function for querying the current RMS level.

• std::vector< float > peaklevel () const

Read-only function for querying the current peak level.

void process (mha_wave_t *s)

Function to store a chunk of audio in the level meter.

Private Attributes

- unsigned int pos
- unsigned int filled

Additional Inherited Members

5.277.1 Detailed Description

Class for asynchronous level metering.

5.277.2 Constructor & Destructor Documentation

Constructor for level metering class.

Allocate memory for metering. The RMS integration time corresponds to the number of frames in the buffer.

Parameters

frames	Number of frames to integrate.
channels	Number of channels used for level-metering.

5.277.3 Member Function Documentation

5.277.3.1 std::vector< float > MHASignal::async_rmslevel_t::rmslevel () const

Read-only function for querying the current RMS level.

Returns

Vector of floats, one value for each channel, containing the RMS level in dB (SPL if calibrated properly).

5.277.3.2 std::vector< float > MHASignal::async_rmslevel_t::peaklevel () const

Read-only function for querying the current peak level.

Returns

Vector of floats, one value for each channel, containing the peak level in dB (SPL if calibrated properly).

Function to store a chunk of audio in the level meter.

Parameters

s | Audio chunk (same number of channels required as given in the constructor).

5.277.4 Member Data Documentation

5.277.4.1 unsigned int MHASignal::async_rmslevel_t::pos [private]

5.277.4.2 unsigned int MHASignal::async_rmslevel_t::filled [private]

The documentation for this class was generated from the following files:

- mha_signal.hh
- · mha_signal.cpp

5.278 MHASignal::delay_spec_t Class Reference

Public Member Functions

- delay_spec_t (unsigned int delay, unsigned int frames, unsigned int channels)
- ~delay spec t ()
- mha_spec_t * process (mha_spec_t *)

Private Attributes


- · unsigned int delay
- MHASignal::spectrum_t ** buffer
- unsigned int pos
- 5.278.1 Constructor & Destructor Documentation
- 5.278.1.2 MHASignal::delay_spec_t::~delay_spec_t()
- 5.278.2 Member Function Documentation
- 5.278.2.1 mha_spec_t * MHASignal::delay_spec_t::process (mha_spec_t * s)
- 5.278.3 Member Data Documentation
- **5.278.3.1 unsigned int MHASignal::delay_spec_t::delay** [private]
- **5.278.3.2** MHASignal::spectrum_t** MHASignal::delay_spec_t::buffer [private]
- **5.278.3.3 unsigned int MHASignal::delay spec t::pos** [private]

The documentation for this class was generated from the following files:

- mha_signal.hh
- · mha signal.cpp
- 5.279 MHASignal::delay_t Class Reference

Class to realize a simple delay of waveform streams.

Inheritance diagram for MHASignal::delay_t:

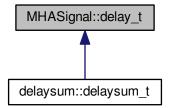

Public Member Functions

- delay_t (std::vector< int > delays, unsigned int channels)
 Constructor.
- mha_wave_t * process (mha_wave_t *s)
 Processing method.
- ~delay_t ()
- std::string inspect () const

Private Attributes

- · unsigned int channels
- unsigned int * delays
- unsigned int * pos
- mha_real_t ** buffer

5.279.1 Detailed Description

Class to realize a simple delay of waveform streams.

5.279.2 Constructor & Destructor Documentation

Constructor.

Parameters

delays	Vector of delays, one entry for each channel.
channels	Number of channels expected.

```
5.279.2.2 MHASignal::delay_t::~delay_t()
```

5.279.3 Member Function Documentation

Processing method.

Parameters

s | Input waveform fragment, with number of channels provided in constructor.

Returns

Output waveform fragment.

```
5.279.3.2 std::string MHASignal::delay_t::inspect() const [inline]
5.279.4 Member Data Documentation
5.279.4.1 unsigned int MHASignal::delay_t::channels [private]
5.279.4.2 unsigned int* MHASignal::delay_t::delays [private]
5.279.4.3 unsigned int* MHASignal::delay_t::pos [private]
5.279.4.4 mha_real_t** MHASignal::delay_t::buffer [private]
```

The documentation for this class was generated from the following files:

- · mha_signal.hh
- · mha signal.cpp

5.280 MHASignal::delay_wave_t Class Reference

Delayline containing wave fragments.

Public Member Functions

- delay_wave_t (unsigned int delay, unsigned int frames, unsigned int channels)
- ~delay_wave_t ()
- mha_wave_t * process (mha_wave_t *)

Private Attributes

- unsigned int delay
- MHASignal::waveform_t ** buffer
- unsigned int pos

5.280.1 Detailed Description

Delayline containing wave fragments.

The delayline contains waveform fragments. The delay can be configured in integer fragments (sample delay or sub-sample delay is not possible).

```
5.280.2 Constructor & Destructor Documentation
```

5.280.3 Member Function Documentation

```
5.280.3.1 mha_wave_t * MHASignal::delay_wave_t::process ( mha wave t * s )
```

5.280.4 Member Data Documentation

```
5.280.4.1 unsigned int MHASignal::delay_wave_t::delay [private]
```

5.280.4.2 MHASignal::waveform_t** MHASignal::delay_wave_t::buffer [private]

5.280.4.3 unsigned int MHASignal::delay_wave_t::pos [private]


The documentation for this class was generated from the following files:

- · mha signal.hh
- mha_signal.cpp

5.281 MHASignal::doublebuffer_t Class Reference

Double-buffering class.

Inheritance diagram for MHASignal::doublebuffer_t:

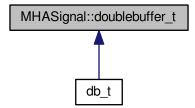

Public Member Functions

 doublebuffer_t (unsigned int nchannels_in, unsigned int nchannels_out, unsigned int outer_fragsize, unsigned int inner_fragsize)

Constructor of double buffer.

- virtual ~doublebuffer t ()
- mha wave t * outer process (mha wave t *s)

Method to pass audio fragments into the inner layer.

Protected Member Functions

• virtual **mha_wave_t** * **inner_process** (**mha_wave_t** *s)=0 *Method to realize inner processing callback.*

Private Member Functions

• unsigned int **min** (unsigned int a, unsigned int b)

Private Attributes

- waveform_t outer_out
- · mha wave t this outer out
- · waveform tinner in
- waveform_t inner_out
- unsigned int k inner
- unsigned int k_outer
- unsigned int **ch**

5.281.1 Detailed Description

Double-buffering class.

This class has two layers: The outer layer, with an outer fragment size, and an inner layer, with its own fragment size. Data is passed into the inner layer through the doublebuffer_t.::outr_process() callback. The pure virtual method **doublebuffer_t::inner_process()** (p. 737) is called whenever enough data is available.

5.281.2 Constructor & Destructor Documentation

Constructor of double buffer.

Parameters

nchannels_in	Number of channels at the input (both layers).
nchannels_out	Number of channels at the output (both layers).
outer_fragsize	Fragment size of the outer layer (e.g., hardware fragment size)
inner_fragsize	Fragment size of the inner layer (e.g., software fragment size)

5.281.2.2 MHASignal::doublebuffer_t::~doublebuffer_t() [virtual]

5.281.3 Member Function Documentation

Method to pass audio fragments into the inner layer.

Parameters

s | Pointer to input waveform fragment.

Returns

Pointer to output waveform fragment.

Method to realize inner processing callback.

To be overwritten by derived classes.

Parameters

s Pointer to input waveform fragment.

Returns

Pointer to output waveform fragment.

Implemented in **db_t** (p. 238).

The documentation for this class was generated from the following files:

- mha_signal.hh
- mha_signal.cpp

5.282 MHASignal::fft_t Class Reference

Public Member Functions

- fft_t (const unsigned int &)
- ∼fft_t ()
- void wave2spec (const mha_wave_t *, mha_spec_t *, bool swap)
 fast fourier transform.
- void spec2wave (const mha_spec_t *, mha_wave_t *)
- void **spec2wave** (const **mha_spec_t** *, **mha_wave_t** *, unsigned int offset) wave may have fewer number of frames than needed for a complete iFFT.
- void forward (mha_spec_t *sIn, mha_spec_t *sOut)
- void backward (mha_spec_t *sOut)
- void wave2spec_scale (const mha_wave_t *, mha_spec_t *, bool swap)
- void spec2wave_scale (const mha_spec_t *, mha_wave_t *)
- void forward_scale (mha_spec_t *sIn, mha_spec_t *sOut)
- void backward_scale (mha_spec_t *sIn, mha_spec_t *sOut)

Private Member Functions

- void **sort_fftw2spec** (fftw_real *s_fftw, **mha_spec_t** *s_spec, unsigned int ch)

 Arrange the order of an fftw spectrum to the internal order.
- void **sort_spec2fftw** (fftw_real *s_fftw, const **mha_spec_t** *s_spec, unsigned int ch)

 Arrange the order of an internal spectrum to the fftw order.

Private Attributes

- unsigned int nfft
- unsigned int n_re
- unsigned int n_im
- · mha real t scale
- mha_real_t * buf_in
- mha_real_t * buf_out
- rfftw_plan_wave2spec
- rfftw_plan_spec2wave
- fftw_plan fftw_plan_fft
- fftw_plan fftw_plan_ifft

```
5.282.1 Constructor & Destructor Documentation
```

bool swap)

fast fourier transform.

if swap is set, the buffer halfes of the wave signal are exchanged before computing the fft.

wave may have fewer number of frames than needed for a complete iFFT.

Only as many frames are written into wave as fit, starting with offset offset of the complete iFFT.

```
5.282.2.4 void MHASignal::fft_t::forward (
                       mha_spec_t * sln,
                       mha spec t * sOut )
5.282.2.5 void MHASignal::fft_t::backward (
                       mha spec t * sln,
                       mha_spec_t * sOut )
5.282.2.6 void MHASignal::fft_t::wave2spec_scale (
                       const mha_wave_t * wave,
                       mha_spec_t * spec,
                       bool swap )
5.282.2.7 void MHASignal::fft_t::spec2wave_scale (
                       const mha spec t * spec,
                       mha wave t * wave )
5.282.2.8 void MHASignal::fft t::forward scale (
                       mha_spec_t * sln,
                       mha_spec_t * sOut )
5.282.2.9 void MHASignal::fft_t::backward_scale (
                       mha_spec_t * sln,
                       mha_spec_t * sOut )
5.282.2.10 void MHASignal::fft_t::sort_fftw2spec (
                        fftw_real * s_fftw,
                        mha spec t * s\_spec,
                        unsigned int ch ) [private]
Arrange the order of an fftw spectrum to the internal order.
The fftw spectrum is arranged [r0 r1 r2 ... rn-1 in in-1 ... i1], while the interal order is [r0 - r1 i1
r2 i2 ... rn-1 in-1 rn –].
5.282.2.11 void MHASignal::fft_t::sort_spec2fftw (
                        fftw real * s fftw,
                        const mha_spec_t * s_spec,
```

Arrange the order of an internal spectrum to the fftw order.

unsigned int ch) [private]

```
5.282.3.1 unsigned int MHASignal::fft_t::nfft [private]
5.282.3.2 unsigned int MHASignal::fft_t::n_re [private]
5.282.3.3 unsigned int MHASignal::fft_t::n_im [private]
5.282.3.4 mha_real_t MHASignal::fft_t::scale [private]
5.282.3.5 mha_real_t* MHASignal::fft_t::buf_in [private]
5.282.3.6 mha_real_t* MHASignal::fft_t::buf_out [private]
5.282.3.7 rfftw_plan MHASignal::fft_t::fftw_plan_wave2spec [private]
5.282.3.8 rfftw_plan MHASignal::fft_t::fftw_plan_spec2wave [private]
5.282.3.9 fftw_plan MHASignal::fft_t::fftw_plan_fft [private]
5.282.3.10 fftw_plan MHASignal::fft_t::fftw_plan_ifft [private]
```

The documentation for this class was generated from the following files:

- mha_signal_fft.h
- mha_signal.cpp

5.283 MHASignal::hilbert_fftw_t Class Reference

Public Member Functions

- hilbert_fftw_t (unsigned int len)
- void hilbert (const mha_wave_t *, mha_wave_t *)

Private Attributes

- unsigned int n
- rfftw_plan p1
- fftw_plan p2
- fftw real * buf r in
- fftw_real * buf_r_out
- fftw_complex * buf_c_in
- fftw_complex * buf_c_out
- mha_real_t sc

```
5.283.1 Constructor & Destructor Documentation
5.283.1.1
          MHASignal::hilbert_fftw_t::hilbert_fftw_t (
                      unsigned int len )
5.283.2 Member Function Documentation
5.283.2.1
          void MHASignal::hilbert_fftw_t::hilbert (
                       const mha_wave_t * s_in,
                      mha wave t * s out)
5.283.3
        Member Data Documentation
5.283.3.1
          unsigned int MHASignal::hilbert_fftw_t::n [private]
5.283.3.2
          rfftw_plan MHASignal::hilbert_fftw_t::p1 [private]
5.283.3.3
         fftw_plan MHASignal::hilbert_fftw_t::p2 [private]
5.283.3.4
         fftw_real* MHASignal::hilbert_fftw_t::buf_r_in [private]
5.283.3.5
         fftw_real* MHASignal::hilbert_fftw_t::buf_r_out [private]
5.283.3.6
         fftw_complex* MHASignal::hilbert_fftw_t::buf_c_in [private]
5.283.3.7
          fftw_complex* MHASignal::hilbert_fftw_t::buf_c_out [private]
5.283.3.8 mha_real_t MHASignal::hilbert_fftw_t::sc [private]
```


The documentation for this class was generated from the following file:

mha_signal.cpp

5.284 MHASignal::hilbert t Class Reference

Hilbert transformation of a waveform segment.

Inheritance diagram for MHASignal::hilbert t:

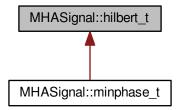

Public Member Functions

- hilbert t (unsigned int len)
- ∼hilbert_t ()
- void operator() (const mha_wave_t *, mha_wave_t *)

Apply Hilbert transformation on a waveform segment.

Private Attributes

• void * **h**

5.284.1 Detailed Description

Hilbert transformation of a waveform segment.

Returns the imaginary part of the inverse Fourier transformation of the Fourier transformed input signal with negative frequencies set to zero.

```
5.284.2 Constructor & Destructor Documentation
```

```
5.284.2.1 MHASignal::hilbert_t::hilbert_t ( unsigned int len )
```

Parameters

```
len Length of waveform segment
```

```
5.284.2.2 MHASignal::hilbert_t::~hilbert_t()
```

5.284.3 Member Function Documentation

Apply Hilbert transformation on a waveform segment.

5.284.4 Member Data Documentation

```
5.284.4.1 void* MHASignal::hilbert_t::h [private]
```


The documentation for this class was generated from the following files:

- · mha signal.hh
- mha_signal.cpp

5.285 MHASignal::loop_wavefragment_t Class Reference

Copy a fixed waveform fragment to a series of waveform fragments of other size.

Inheritance diagram for MHASignal::loop_wavefragment_t:

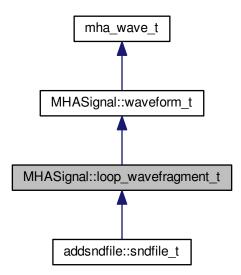

Public Types

Public Member Functions

 loop_wavefragment_t (const mha_wave_t &src, bool loop, level_mode_t level_mode, std::vector< int > channels, unsigned int startpos=0)

Constructor to create an instance of **loop_wavefragment_t** (p. 744) based on an existing waveform block.

- std::vector< int > get_mapping (unsigned int channels)
- void playback (mha_wave_t *s, playback_mode_t pmode, mha_wave_t *level_pa, const std::vector< int > &channels)

Add source waveform block to an output block.

- void playback (mha_wave_t *s, playback_mode_t pmode, mha_wave_t *level_pa)

 Add source waveform block to an output block.
- void playback (mha_wave_t *s, playback_mode_t pmode)

Add source waveform block to an output block.

- void set_level_lin (mha_real_t l)
- void set_level_db (mha_real_t l)
- void rewind ()
- void locate_end ()
- bool is_playback_active () const

Private Attributes

- std::vector< int > playback channels
- bool b loop
- unsigned int **pos**
- MHASignal::waveform_t intern_level

Additional Inherited Members

5.285.1 Detailed Description

Copy a fixed waveform fragment to a series of waveform fragments of other size.

This class is designed to continously play back a waveform to an output stream, with variable output block size.

5.285.2 Member Enumeration Documentation

```
5.285.2.1 enum MHASignal::loop_wavefragment_t::level_mode_t
```

Switch for playback level mode.

Enumerator

```
relative The nominal level is applied as a gain to the source signal.
peak The nominal level is the peak level of source signal in Pascal.
rms The nominal level is the RMS level of the source signal in Pascal.
rms_limit40
```

5.285.2.2 enum MHASignal::loop_wavefragment_t::playback_mode_t

Switch for playback mode.

Enumerator

```
add Add source signal to output stream.
replace Replace output stream by source signal.
input Do nothing, keep output stream (source position is unchanged).
mute Mute output stream (source position is unchanged).
```

5.285.3 Constructor & Destructor Documentation

Constructor to create an instance of **loop_wavefragment_t** (p. 744) based on an existing waveform block.

Parameters

src	Waveform block to copy data from.
Іоор	Flag whether the block should be looped or played once.
level_mode	Configuration of playback level (see
	MHASignal::loop_wavefragment_t::level_mode_t (p. 745) for details)
channels	Mapping of input to output channels.

5.285.4 Member Function Documentation

```
5.285.4.1 std::vector< int > MHASignal::loop_wavefragment_t::get_mapping ( unsigned int channels )
```

Add source waveform block to an output block.

Parameters

S	Output block (streamed signal).
pmode	Playback mode (add, replace, input, mute).
level_pa	Linear output level/gain (depending on level_mode parameter in constructor); one value for each sample in output block.
channels	Output channels

Add source waveform block to an output block.

Parameters

S	Output block (streamed signal).
pmode	Playback mode (add, replace, input, mute).
level_pa	Linear output level/gain (depending on level_mode parameter in constructor); one value for each sample in output block.

Add source waveform block to an output block.

Parameters

s	Output block (streamed signal).
pmode	Playback mode (add, replace, input, mute).


The documentation for this class was generated from the following files:

- · mha signal.hh
- mha_signal.cpp

5.286 MHASignal::matrix_t Class Reference

n-dimensional matrix with real or complex floating point values.

Inheritance diagram for MHASignal::matrix_t:

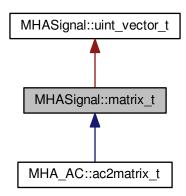

Public Member Functions

- matrix t (unsigned int nrows, unsigned int ncols, bool b is complex=true) Create a two-dimensional matrix.
- matrix_t (const mha_spec_t &spec)

Create a two-dimensional matrix from a spectrum, copy values.

- matrix_t (const MHASignal::uint_vector_t &size, bool b_is_complex=true)
 - Create n-dimensional matrix, descriped by size argument.
- matrix t (const MHASignal::matrix t &)
- matrix t (const uint8 t *buf, unsigned int len)

Construct from memory area.

- ∼matrix t ()
- MHASignal::matrix t & operator= (const MHASignal::matrix t &)
- MHASignal::matrix_t & operator= (const comm_var_t &v)

Fill matrix with data of an AC variable object.

comm_var_t get_comm_var ()

Return a AC communication variable pointing to the data of the current matrix.

• unsigned int dimension () const

Return the dimension of the matrix.

• unsigned int size (unsigned int k) const

Return the size of the matrix.

• unsigned int get nelements () const

Return total number of elements.

bool is_same_size (const MHASignal::matrix_t &)

Test if matrix has same size as other.

• bool **iscomplex** () const

Return information about complexity.

mha_real_t & real (const MHASignal::uint_vector_t &index)

Access real part of an element in a n-dimensional matrix.

mha real t & imag (const MHASignal::uint vector t &index)

Access imaginary part of an element in a n-dimensional matrix.

mha_complex_t & operator() (const MHASignal::uint_vector_t &index)

Access complex value of an element in a n-dimensional matrix.

const mha_real_t & real (const MHASignal::uint_vector_t &index) const
 Access real part of an element in a n-dimensional matrix.

const mha_real_t & imag (const MHASignal::uint_vector_t &index) const

Access imaginary part of an element in a n-dimensional matrix.

• const mha_complex_t & operator() (const MHASignal::uint_vector_t &index) const Access complex value of an element in a n-dimensional matrix.

• mha_real_t & real (unsigned int row, unsigned int col)

Access real part of an element in a two-dimensional matrix.

mha_real_t & imag (unsigned int row, unsigned int col)

Access imaginary part of an element in a two-dimensional matrix.

mha_complex_t & operator() (unsigned int row, unsigned int col)

Access complex value of an element in a two-dimensional matrix.

• const mha_real_t & real (unsigned int row, unsigned int col) const

Access real part of an element in a two-dimensional matrix.

• const mha_real_t & imag (unsigned int row, unsigned int col) const

Access imaginary part of an element in a two-dimensional matrix.

• const mha_complex_t & operator() (unsigned int row, unsigned int col) const

Access complex value of an element in a two-dimensional matrix.

- unsigned int **get_nreals** () const
- unsigned int get_index (unsigned int row, unsigned int col) const
- unsigned int **get_index** (const **MHASignal::uint_vector_t** &index) const
- unsigned int **numbytes** () const

Return number of bytes needed to store into memory.

unsigned int write (uint8_t *buf, unsigned int len) const

Copy to memory area.

const mha_real_t * get_rdata () const

Return pointer of real data.

const mha_complex_t * get_cdata () const

Return pointer of complex data.

Private Attributes

```
uint32_t complex_ofs
uint32_t nelements
union {
    mha_real_t * rdata
    mha_complex_t * cdata
};
```

Additional Inherited Members

5.286.1 Detailed Description

n-dimensional matrix with real or complex floating point values.

Warning

The member functions **imag()** (p. 753) and operator() should only be called if the matrix is defined to hold complex values.

5.286.2 Constructor & Destructor Documentation

Create a two-dimensional matrix.

Parameters

nrows	Number of rows
ncols	Number of columns
b_is_complex	Add space for complex values

Create a two-dimensional matrix from a spectrum, copy values.

Parameters

spec	Source spectrum structure
------	---------------------------

Create n-dimensional matrix, descriped by size argument.

Parameters

size	Size vector
b_is_complex	Add space for complex values

Construct from memory area.

Warning

This constructor is not real time safe

```
5.286.2.6 MHASignal::matrix_t::~matrix_t ( )
```

5.286.3 Member Function Documentation

Fill matrix with data of an AC variable object.

Parameters

```
v Source AC variable (comm_var_t (p. 232))
```

Note

The type and dimension of the AC variable must match the type and dimension of the matrix.

```
5.286.3.3 comm_var_t MHASignal::matrix_t::get_comm_var( )
```

Return a AC communication variable pointing to the data of the current matrix.

Returns

AC variable object (**comm_var_t** (p. 232)), valid for the life time of the matrix.

```
5.286.3.4 unsigned int MHASignal::matrix_t::dimension ( ) const [inline]
```

Return the dimension of the matrix.

Returns

Dimension of the matrix

Return the size of the matrix.

Parameters

```
k Dimension
```

Returns

Size of the matrix in dimension k

```
5.286.3.6 unsigned int MHASignal::matrix_t::get_nelements ( ) const
```

Return total number of elements.

Test if matrix has same size as other.

```
5.286.3.8 bool MHASignal::matrix_t::iscomplex( ) const [inline]
```

Return information about complexity.

Access real part of an element in a n-dimensional matrix.

Parameters

index	Index vector
-------	--------------

```
5.286.3.10 mha_real_t& MHASignal::matrix_t::imag (

const MHASignal::uint_vector_t & index ) [inline]
```

Access imaginary part of an element in a n-dimensional matrix.

Parameters

```
index Index vector
```

Access complex value of an element in a n-dimensional matrix.

Parameters

Access real part of an element in a n-dimensional matrix.

Parameters

Access imaginary part of an element in a n-dimensional matrix.

Parameters

index	Index vector

Access complex value of an element in a n-dimensional matrix.

Parameters

```
index Index vector
```

Access real part of an element in a two-dimensional matrix.

Parameters

row	Row number of element
col	Column number of element

Access imaginary part of an element in a two-dimensional matrix.

Parameters

row	Row number of element
col	Column number of element

Access complex value of an element in a two-dimensional matrix.

Parameters

row	Row number of element
col	Column number of element

Access real part of an element in a two-dimensional matrix.

Parameters

row	Row number of element
col	Column number of element

Access imaginary part of an element in a two-dimensional matrix.

Parameters

row	′	Row number of element
col		Column number of element

Access complex value of an element in a two-dimensional matrix.

Parameters

row	Row number of element
col	Column number of element

Return number of bytes needed to store into memory.

```
5.286.3.25 unsigned int MHASignal::matrix_t::write ( uint8_t * buf, unsigned int len ) const
```

Copy to memory area.

```
5.286.3.26 const mha_real_t* MHASignal::matrix_t::get_rdata() const [inline]
```

Return pointer of real data.

Return pointer of complex data.

```
5.286.4 Member Data Documentation
```

```
5.286.4.1 uint32 t MHASignal::matrix t::complex ofs [private]
```


The documentation for this class was generated from the following files:

- mha_signal.hh
- mha_signal.cpp

5.287 MHASignal::minphase_t Class Reference

Minimal phase function.

Inheritance diagram for MHASignal::minphase t:

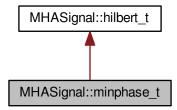

Public Member Functions

- minphase_t (unsigned int fftlen, unsigned int ch)
 Constructor.
- void operator() (mha_spec_t *s)

Transform input spectrum to a minimal-phase spectrum, discarding the original phase.

Private Attributes

MHASignal::waveform_t phase

Additional Inherited Members

5.287.1 Detailed Description

Minimal phase function.

The output spectrum Y(f) is

$$Y(f) = |X(f)|e^{i\mathcal{H}\{\log|X(f)|\}},$$

with the input spectrum X(f) and the Hilbert transformation $\mathcal{H}\{\cdots\}$.

5.287.2 Constructor & Destructor Documentation

Constructor.

Parameters

fftlen	FFT length
ch	Number of channels

5.287.3 Member Function Documentation

Transform input spectrum to a minimal-phase spectrum, discarding the original phase.

Parameters

s Spectrum to operate on.

5.287.4 Member Data Documentation

5.287.4.1 MHASignal::waveform_t MHASignal::minphase_t::phase [private]

The documentation for this class was generated from the following files:

- mha_signal.hh
- mha_signal.cpp

5.288 MHASignal::quantizer_t Class Reference

Simple simulation of fixpoint quantization.

Public Member Functions

- quantizer_t (unsigned int num_bits)
 Constructor.
- void operator() (mha_wave_t &s)
 Quantization of a waveform fragment.

Private Attributes

- · bool limit
- mha_real_t upscale
- mha_real_t downscale
- · mha real tup limit

5.288.1 Detailed Description

Simple simulation of fixpoint quantization.

- 5.288.2 Constructor & Destructor Documentation
- 5.288.2.1 MHASignal::quantizer_t::quantizer_t (unsigned int *num_bits*)

Constructor.

Parameters

num_bits Nu	umber of bits to simulate,	or zero for limiting to [-1,1] only.
-------------	----------------------------	--------------------------------------

5.288.3 Member Function Documentation

```
5.288.3.1 void MHASignal::quantizer_t::operator() (
mha_wave_t & s )
```

Quantization of a waveform fragment.

Parameters

 $s \mid$ Waveform fragment to be quantized.

5.288.4 Member Data Documentation

```
5.288.4.1 bool MHASignal::quantizer_t::limit [private]
```

```
5.288.4.2 mha real t MHASignal::quantizer_t::upscale [private]
```

5.288.4.3 mha_real_t MHASignal::quantizer_t::downscale [private]

```
5.288.4.4 mha_real_t MHASignal::quantizer_t::up_limit [private]
```


The documentation for this class was generated from the following files:

- mha_signal.hh
- mha signal.cpp

5.289 MHASignal::ringbuffer_t Class Reference

A ringbuffer class for time domain audio signal, which makes no assumptions with respect to fragment size.

Inheritance diagram for MHASignal::ringbuffer_t:

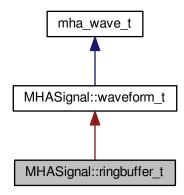

Public Member Functions

- ringbuffer_t (unsigned frames, unsigned channels, unsigned prefilled_frames)

 Creates new ringbuffer for time domain signal.
- unsigned contained_frames () const number of currently contained frames
- mha_real_t & value (unsigned frame, unsigned channel)

Access to value stored in ringbuffer.

void discard (unsigned frames)

Discards the oldest frames.

void write (mha_wave_t &signal)

Copies the contents of the signal into the ringbuffer if there is enough space.

Private Attributes

• unsigned **next_read_frame_index**Index of oldest frame in underlying storage for the ringbuffer.

unsigned next_write_frame_index

Index of first free frame in underlying storage.

Additional Inherited Members

5.289.1 Detailed Description

A ringbuffer class for time domain audio signal, which makes no assumptions with respect to fragment size.

Blocks of audio signal can be placed into the ringbuffer using the **write** (p. 762) method. Individual audio samples can be accessed and altered using the **value** (p. 761) method. Blocks of audio data can be deleted from the ringbuffer using the **discard** (p. 762) method.

5.289.2 Constructor & Destructor Documentation

Creates new ringbuffer for time domain signal.

Constructor allocates enough storage so that *frames* audio samples can be stored in the ring-buffer.

Parameters

frames	Size of ringbuffer in samples per channel. Maximum number of frames that can be stored in the ringbuffer at one time. This number cannot be changed after instance creation.
channels	Number of audio channels.
prefilled_frames	Number of frames to be prefilled with zero values. Many applications of a ringbuffer require the introduction of a delay. In practice, this delay is achieved by inserting silence audio samples (zeros) into the ringbuffer before the start of the actual signal is inserted for the first time.

Exceptions

```
MHA_Error (p. 413) | if prefilled_frames > frames
```

5.289.3 Member Function Documentation

```
5.289.3.1 unsigned MHASignal::ringbuffer_t::contained_frames ( ) const [inline]
```

number of currently contained frames

Access to value stored in ringbuffer.

frame index is relative to the oldest frame stored in the ringbuffer, therefore, the meaning of the *frame* changes when the **discard** (p. 762) method is called.

Parameters

frame	frame index, 0 corresponds to oldest frame stored.
channel	audio channel

Returns

reference to contained sample value

Exceptions

```
MHA_Error (p. 413) if channel or frame out of bounds.
```

```
5.289.3.3 void MHASignal::ringbuffer_t::discard (
unsigned frames ) [inline]
```

Discards the oldest frames.

Makes room for new write (p. 762), alters base frame index for value (p. 761)

Parameters

```
frames how many frames to discard.
```

Exceptions

```
MHA_Error (p. 413) if frames > contained_frames (p. 761)
```

```
5.289.3.4 void MHASignal::ringbuffer_t::write (

mha_wave_t & signal) [inline]
```

Copies the contents of the signal into the ringbuffer if there is enough space.

Parameters

signal	New signal to be appended to the signal already present in the ringbuffer

Exceptions

MHA_Error (p. 413)	if there is not enough space or if the channel count mismatches.
	Nothing is copied if the space is insufficient.

5.289.4 Member Data Documentation

5.289.4.1 unsigned MHASignal::ringbuffer_t::next_read_frame_index [private]

Index of oldest frame in underlying storage for the ringbuffer.

This value is added to the frame parameter of the **value** (p. 761) method, and this value is altered when **discard** (p. 762) is called.

5.289.4.2 unsigned MHASignal::ringbuffer_t::next_write_frame_index [private]

Index of first free frame in underlying storage.

Next frame to be stored will be placed here.


The documentation for this class was generated from the following files:

- mha_signal.hh
- mha_signal.cpp

5.290 MHASignal::schroeder_t Class Reference

Schroeder tone complex class.

Inheritance diagram for MHASignal::schroeder_t:

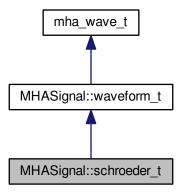

Public Types

• typedef float(* **groupdelay_t**) (float f, float fmin, float fmax)

Function type for group delay definition.

Public Member Functions

 schroeder_t (unsigned int len, unsigned int channels=1, schroeder_t::sign_t sign=up, mha_real_t speed=1)

Constructor.

• schroeder_t (unsigned int len, unsigned int channels=1, schroeder_t::groupdelay_t freqfun=MHASignal::schroeder_t::identity, float fmin=0, float fmax=1, float eps=1e-10)

Construct create Schroeder tone complex from a given frequency function.

Static Public Member Functions

- static float identity (float x, float, float)
- static float **log_up** (float x, float fmin, float fmax)
- static float **log_down** (float x, float fmin, float fmax)

Additional Inherited Members

5.290.1 Detailed Description

Schroeder tone complex class.

The Schroeder tone complex is a sweep defined in the sampled spectrum:

$$\Phi(f) = \sigma 2\pi \tau (2f/f_s)^{2\alpha}, \quad S(f) = e^{i\Phi(f)}$$

f is the sampled frequency in Hz, σ is the sign of the sweep (-1 for up sweep, +1 for down sweep), τ is the sweep duration in samples, f_s is the sampling rate in Hz and α is the relative sweep speed.

5.290.2 Member Typedef Documentation

5.290.2.1 typedef float(* MHASignal::schroeder t::groupdelay t) (float f, float fmin, float fmax)

Function type for group delay definition.

Parameters

f	Frequency relative to Nyquist frequency.
fmin	Minimum frequency relative to Nyquist frequency.
fmax	Maximum frequency relative to Nyquist frequency.

5.290.3 Member Enumeration Documentation

```
5.290.3.1 enum MHASignal::schroeder_t::sign_t
```

Enumerator for sign of Schroeder tone complex sweep direction.

Enumerator

```
up Sweep from zero to Nyquist frequency ( \sigma = -1) down Sweep from Nyquist frequency to zero ( \sigma = +1)
```

5.290.4 Constructor & Destructor Documentation

Constructor.

Parameters of the Schroeder tone complex are configured in the constructor.

Parameters

len	Length $ au$ of the Schroeder tone complex in samples
channels	Number of channels
sign	Sign σ of Schroeder sweep
speed	Relative speed α (curvature of phase function)

Construct create Schroeder tone complex from a given frequency function.

The frequency function g(f) defines the sweep speed and sign (based on the group delay). It must be defined in the interval [0,1) and should return values in the interval [0,1].

$$\Phi(f) = -4\pi\tau \int\limits_0^\tau g(f)\,\mathrm{d}f, \quad S(f) = e^{i\Phi(f)}$$

Parameters

len	Length $ au$ of the Schroeder tone complex in samples.
channels	Number of channels.
freqfun	Frequency function $g(f)$.
fmin	Start frequency (relative to Nyquist frequency).
fmax	End frequency (relative to Nyquist frequency).
eps	Stability constant for frequency ranges not covered by Schroeder tone complex.

5.290.5 Member Function Documentation

float *x*, float *fmin*,


The documentation for this class was generated from the following files:

float fmax) [inline],[static]

- mha_signal.hh
- · mha_signal.cpp
- 5.291 MHASignal::spectrum_t Class Reference

a signal processing class for spectral data (based on **mha_spec_t** (p. 432))

Inheritance diagram for MHASignal::spectrum_t:

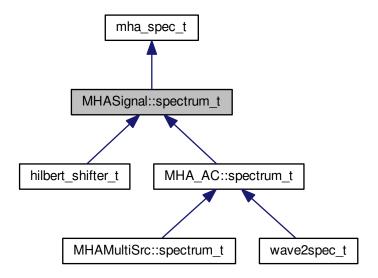

Public Member Functions

- spectrum_t (const unsigned int &frames, const unsigned int &channels)
 constructor of spectrum class
- spectrum_t (const mha_spec_t &)

Copy constructor.

spectrum_t (const MHASignal::spectrum_t &)

Copy constructor.

- spectrum_t (const std::vector< mha_complex_t > &)
- virtual ~spectrum_t (void)
- mha_complex_t & operator() (unsigned int f, unsigned int ch)

Access to element.

mha_complex_t & operator[] (unsigned int k)

Access to a single element, direct index into data buffer.

• mha_complex_t & value (unsigned int f, unsigned int ch)

Access to element.

void copy (const mha_spec_t &)

copy all elements from a spectrum

• void **copy_channel** (const **mha_spec_t** &s, unsigned sch, unsigned dch)

Copy one channel of a given spectrum signal to a target channel.

void export_to (mha_spec_t &)

copy elements to spectrum structure

void scale (const unsigned int &, const unsigned int &, const unsigned int &, const mha
 —real_t &)

```
scale section [a,b) in channel "ch" by "val"
```

void scale_channel (const unsigned int &, const mha_real_t &)
 scale all elements in one channel

Additional Inherited Members

```
5.291.1 Detailed Description
```

a signal processing class for spectral data (based on **mha_spec_t** (p. 432))

5.291.2 Constructor & Destructor Documentation

constructor of spectrum class

Allocates buffers and initializes memory to zeros.

Parameters

frames	number of frames (fft bins) in one channel. Number of Frames is usually fftlen / 2 + 1
channels	number of channels

Copy constructor.

```
5.291.2.4 spectrum_t::spectrum_t ( const\ std::vector < mha\_complex\_t > \&\ src\ ) 5.291.2.5 spectrum_t::\simspectrum_t ( void\ )\ [virtual]
```

Reimplemented in MHA_AC::spectrum_t (p. 392).

5.291.3 Member Function Documentation

Access to element.

Parameters

f	Bin number
ch	Channel number

Returns

Reference to element

Access to a single element, direct index into data buffer.

Parameters

Returns

Reference to element

Access to element.

Parameters

f	Bin number
ch	Channel number

Returns

Reference to element

```
5.291.3.4 void spectrum_t::copy (
const mha_spec_t & src )
```

copy all elements from a spectrum

Parameters

src	input spectrum
-----	----------------

Copy one channel of a given spectrum signal to a target channel.

Parameters

S	Input spectrum signal
sch	Channel index in source signal
dch	Channel index in destination (this) signal

copy elements to spectrum structure

Parameters

```
dest destination spectrum structure
```

scale section [a,b) in channel "ch" by "val"

Parameters

а	starting frame
b	end frame (excluded)
ch	channel number
val	scale factor

scale all elements in one channel

Parameters


ch	channel number
src	scale factor

The documentation for this class was generated from the following files:

- · mha_signal.hh
- mha_signal.cpp

5.292 MHASignal::stat_t Class Reference

Inheritance diagram for MHASignal::stat_t:

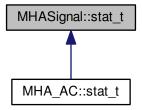

Public Member Functions

- stat_t (const unsigned int &frames, const unsigned int &channels)
- void mean (mha_wave_t &m)
- void mean std (mha wave t &m, mha wave t &s)
- void push (const mha_wave_t &)
- void **push** (const **mha_real_t** &x, const unsigned int &k, const unsigned int &ch)

Private Attributes

- MHASignal::waveform_t n
- MHASignal::waveform_t sum
- MHASignal::waveform_t sum2

```
5.292.1 Constructor & Destructor Documentation
5.292.1.1 MHASignal::stat_t::stat_t (
                      const unsigned int & frames,
                      const unsigned int & channels )
5.292.2 Member Function Documentation
5.292.2.1 void MHASignal::stat_t::mean (
                      mha wave t \& m)
5.292.2.2 void MHASignal::stat_t::mean_std (
                      mha_wave_t & m,
                      mha_wave_t & s)
5.292.2.3 void MHASignal::stat_t::push (
                      const mha_wave_t & x )
5.292.2.4 void MHASignal::stat_t::push (
                      const mha_real_t & x,
                      const unsigned int & k,
                      const unsigned int & ch )
5.292.3 Member Data Documentation
5.292.3.1
          MHASignal::waveform_t MHASignal::stat_t::n [private]
5.292.3.2
         MHASignal::waveform t MHASignal::stat_t::sum [private]
5.292.3.3
          MHASignal::waveform_t MHASignal::stat_t::sum2 [private]
The documentation for this class was generated from the following files:
   mha_signal.hh
   · mha signal.cpp
```

5.293 MHASignal::subsample_delay_t Class Reference

implements subsample delay in spectral domain.

Public Member Functions

- **subsample_delay_t** (const std::vector< float > &subsample_delay, unsigned fftlen)

 Constructor computes complex phase factors to apply to achieve subsample delay.
- void process (mha_spec_t *s)

Apply the phase_gains to s to achieve the subsample delay.

void process (mha_spec_t *s, unsigned idx)

Apply the pase gains to channel idx in s to achieve the subsample delay in channel idx.

Public Attributes

spectrum_t phase_gains

The complex factors to apply to achieve the necessary phase shift.

Private Attributes

• unsigned last_complex_bin

index of the last complex fft bin for the used fft length.

5.293.1 Detailed Description

implements subsample delay in spectral domain.

When transformed back to the time domain, the signal is delayed by the configured fraction of a sample. This operation must not be used in a smoothgains bracket.

5.293.2 Constructor & Destructor Documentation

Constructor computes complex phase factors to apply to achieve subsample delay.

Parameters

subsample_delay	The subsample delay to apply0.5 <= subsample_delay <= 0.5
fftlen	FFT length

Exceptions

MHA_Error (p. 413)	if the parameters are out of range
---------------------------	------------------------------------

5.293.3 Member Function Documentation

```
5.293.3.1 void MHASignal::subsample_delay_t::process ( mha spec t * s )
```

Apply the phase_gains to s to achieve the subsample delay.

```
5.293.3.2 void MHASignal::subsample_delay_t::process ( mha_spec_t * s, unsigned idx )
```

Apply the pase gains to channel idx in s to achieve the subsample delay in channel idx.

Parameters

s	signal
idx	channel index, 0-based

Exceptions

```
MHA_Error (p. 413) if idx >= s->num_channels
```

5.293.4 Member Data Documentation

5.293.4.1 spectrum_t MHASignal::subsample_delay_t::phase_gains

The complex factors to apply to achieve the necessary phase shift.

5.293.4.2 unsigned MHASignal::subsample_delay_t::last_complex_bin [private]

index of the last complex fft bin for the used fft length.


The documentation for this class was generated from the following files:

- · mha_signal.hh
- mha_signal.cpp

5.294 MHASignal::uint_vector_t Class Reference

Vector of unsigned values, used for size and index description of n-dimensional matrixes.

Inheritance diagram for MHASignal::uint_vector_t:

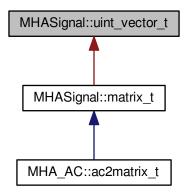

Public Member Functions

- uint_vector_t (unsigned int len)
 - Constructor, initializes all elements to zero.
- uint_vector_t (const uint_vector_t &)
- uint_vector_t (const uint8_t *buf, unsigned int len)
 Construct from memory area.
- ∼uint vector t ()
- bool operator== (const uint_vector_t &) const Check for equality.
- uint vector t & operator= (const uint vector t &)

Assign from other uint_vector_t (p. 775).

• unsigned int get length () const

Return the length of the vector.

const uint32_t & operator[] (unsigned int k) const

Read-only access to elements.

uint32_t & operator[] (unsigned int k)

Access to elements.

unsigned int numbytes () const

Return number of bytes needed to store into memory.

• unsigned int **write** (uint8_t *buf, unsigned int len) const

Copy to memory area.

• const uint32_t * **getdata** () const

Return pointer to the data field.

Protected Attributes

```
• uint32_t length
```

```
• uint32_t * data
```

5.294.1 Detailed Description

Vector of unsigned values, used for size and index description of n-dimensional matrixes.

```
5.294.2 Constructor & Destructor Documentation
```

```
5.294.2.1 MHASignal::uint_vector_t::uint_vector_t ( unsigned int len )
```

Constructor, initializes all elements to zero.

Parameters

```
len Length of vector.
```

Construct from memory area.

Warning

This constructor is not real time safe

```
5.294.2.4 MHASignal::uint_vector_t::~uint_vector_t ( )
```

5.294.3 Member Function Documentation

Check for equality.

Assign from other **uint_vector_t** (p. 775).

Warning

This assignment will fail if the lengths mismatch.

```
5.294.3.3 unsigned int MHASignal::uint_vector_t::get_length() const [inline]
```

Return the length of the vector.

Read-only access to elements.

Access to elements.

5.294.3.6 unsigned int MHASignal::uint_vector_t::numbytes () const

Return number of bytes needed to store into memory.

Copy to memory area.

```
5.294.3.8 const uint32_t* MHASignal::uint_vector_t::getdata( ) const [inline]
```

Return pointer to the data field.

5.294.4 Member Data Documentation

```
5.294.4.1 uint32_t MHASignal::uint_vector_t::length [protected]
```

5.294.4.2 uint32_t* MHASignal::uint_vector_t::data [protected]


The documentation for this class was generated from the following files:

- mha_signal.hh
- mha_signal.cpp

5.295 MHASignal::waveform_t Class Reference

signal processing class for waveform data (based on mha_wave_t (p. 462))

Inheritance diagram for MHASignal::waveform_t:

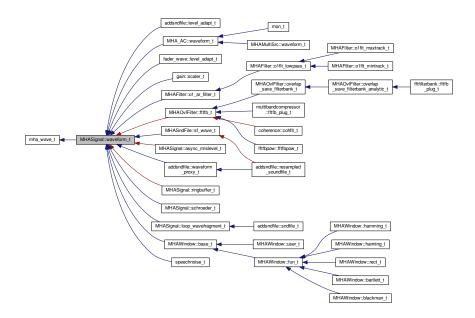

Public Member Functions

- waveform_t (const unsigned int &frames, const unsigned int &channels)
 constructor of waveform_t (p. 778)
- waveform_t (const mhaconfig_t &cf)

Constructor to create a waveform from plugin configuration.

waveform_t (const mha_wave_t &src)

Copy contructor for **mha_wave_t** (p. 462) source.

- waveform_t (const MHASignal::waveform_t &src)
 Copy contructor.
- waveform_t (const std::vector< mha_real_t > &src)

Copy contructor for std::vector<mha real t> source.

- virtual ~waveform_t (void)
- void operator= (const mha_real_t &v)
- mha_real_t & operator[] (unsigned int k)
- const mha_real_t & operator[] (unsigned int k) const
- mha_real_t & value (unsigned int t, unsigned int ch)

Element accessor.

mha_real_t & operator() (unsigned int t, unsigned int ch)
 Element accessor.

• const mha_real_t & value (unsigned int t, unsigned int ch) const

Constant element accessor.

• const mha_real_t & operator() (unsigned int t, unsigned int ch) const

Constant element accessor.

mha_real_t sum (const unsigned int &a, const unsigned int &b)

sum of all elements between [a,b) in all channels

• mha_real_t sum (const unsigned int &a, const unsigned int &b, const unsigned int &ch) sum of all elements between [a,b) in channel ch

mha_real_t sum ()

sum of all elements

• mha real t sumsqr ()

sum of square of all elements

• mha_real_t sum_channel (const unsigned int &)

return sum of all elements in one channel

void assign (const unsigned int &k, const unsigned int &ch, const mha_real_t &val)
 set frame "k" in channel "ch" to value "val"

void assign (const mha_real_t &)

set all elements to value

void assign_frame (const unsigned int &k, const mha_real_t &val)

assign value "val" to frame k in all channels

void assign_channel (const unsigned int &c, const mha_real_t &val)

assign value "val" to channel ch in all frames

- void copy (const std::vector< mha_real_t > &v)
- void copy (const mha_wave_t &)

copy data from source into current waveform

- void copy (const mha_wave_t *)
- void copy_channel (const mha_wave_t &, unsigned int, unsigned int)

Copy one channel of a given waveform signal to a target channel.

void copy_from_at (unsigned int, unsigned int, const mha_wave_t &, unsigned int)

Copy part of the source signal into part of this waveform object.

void export_to (mha_wave_t &)

copy data into allocated **mha_wave_t** (p. 462) structure

void limit (const mha_real_t &min, const mha_real_t &max)

limit target to range [min,max]

void power (const waveform_t &)

transform waveform signal (in Pa) to squared signal (in W/m^2)

void powspec (const mha_spec_t &)

get the power spectrum (in W/m\2) from a complex spectrum

 void scale (const unsigned int &a, const unsigned int &b, const unsigned int &ch, const mha_real_t &val)

scale section [a,b) in channel "ch" by "val"

• void **scale** (const unsigned int &k, const unsigned int &ch, const **mha_real_t** &val)

scale one element

void scale_channel (const unsigned int &, const mha_real_t &)

scale one channel of target with a scalar

- void scale_frame (const unsigned int &, const mha_real_t &)
- unsigned int get_size () const

Additional Inherited Members

5.295.1 Detailed Description

signal processing class for waveform data (based on mha wave t (p. 462))

5.295.2 Constructor & Destructor Documentation

```
constructor of waveform_t (p. 778)
```

Allocates buffer memory and initializes values to zero.

Parameters

frames	number of frames in each channel
channels	number of channels

```
5.295.2.2 waveform_t::waveform_t(

const mhaconfig_t & cf ) [explicit]
```

Constructor to create a waveform from plugin configuration.

Parameters

```
cf Plugin configuration
```

Copy contructor for **mha_wave_t** (p. 462) source.

Copy contructor.

Copy contructor for std::vector<mha_real_t> source.

A waveform structure with a single channel is created, the length is equal to the number of elements in the source vector.

```
5.295.2.6 waveform_t::\sim waveform_t ( void ) [virtual]
```

Reimplemented in MHA_AC::waveform_t (p. 396).

5.295.3 Member Function Documentation

Element accessor.

Parameters

t	Frame number	
ch	Channel number	

Returns

Reference to element

Element accessor.

t	Frame number	
ch	Channel number	

Returns

Reference to element

Constant element accessor.

Parameters

t	Frame number
ch	Channel number

Returns

Reference to element

Constant element accessor.

Parameters

t	Frame number
ch	Channel number

Returns

Reference to element

sum of all elements between [a,b) in all channels

а	starting frame	
b	end frame (excluded)	

```
Returns
```

sum

sum of all elements between [a,b) in channel ch

Parameters

а	starting frame
b	end frame (exluded)
ch	channel number

Returns

sum

```
5.295.3.10 mha_real_t waveform_t::sum ( )
```

sum of all elements

Returns

sum of all elements

```
5.295.3.11 mha_real_t waveform_t::sumsqr()
```

sum of square of all elements

Returns

sum of square of all elements

return sum of all elements in one channel

Parameters

ch	channel	number
0,,	O I I CI	110111001

Returns

sum

set frame "k" in channel "ch" to value "val"

Parameters

k	frame number
ch	channel number
val	new value

set all elements to value

Parameters

```
val new value
```

assign value "val" to frame k in all channels

k	frame number
val	new value

assign value "val" to channel ch in all frames

Parameters

ch	channel number
val	new value

copy data from source into current waveform

Parameters

Copy one channel of a given waveform signal to a target channel.

src	Input waveform signal
src_channel	Channel in source signal
dest_channel	Channel number in destination signal

Copy part of the source signal into part of this waveform object.

Source and target have to have the same number of channels.

Parameters

to_pos	Offset in target
len	Number of frames copied
src	Source
from_pos	Offset in source

copy data into allocated mha_wave_t (p. 462) structure

Parameters

```
dest destination structure
```

```
5.295.3.23 void waveform_t::limit (
const mha_real_t & min,
const mha_real_t & max )
```

limit target to range [min,max]

Parameters

min	lower limit
max	upper limit

```
5.295.3.24 void waveform_t::power (
const waveform t & src )
```

transform waveform signal (in Pa) to squared signal (in W/m²)

src	linear waveform signal (in Pa)
-----	--------------------------------

```
5.295.3.25 void waveform_t::powspec (
const mha_spec_t & src )
```

get the power spectrum (in W/m²) from a complex spectrum

Parameters

```
src | complex spectrum (normalized to Pa)
```

scale section [a,b) in channel "ch" by "val"

Parameters

а	starting frame
b	end frame (excluded)
ch	channel number
val	scale factor

scale one element

Parameters

k	frame number
ch	channel number
val	scale factor

scale one channel of target with a scalar

Parameters

ch	channel number
src	factor


5.295.3.30 unsigned int MHASignal::waveform_t::get_size() const [inline]

The documentation for this class was generated from the following files:

- · mha_signal.hh
- mha_signal.cpp

5.296 MHASndFile::sf_t Class Reference

Inheritance diagram for MHASndFile::sf_t:

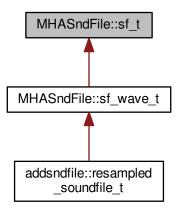

Public Member Functions

- **sf_t** (const std::string &fname)
- \sim sf_t ()

Public Attributes

• SNDFILE * sf

5.296.1 Constructor & Destructor Documentation

5.296.1.1 MHASndFile::sf_t::sf_t (
const std::string & fname)

5.296.1.2 MHASndFile::sf_t::~sf_t()

5.296.2 Member Data Documentation


5.296.2.1 SNDFILE* MHASndFile::sf_t::sf

The documentation for this class was generated from the following files:

- · mhasndfile.h
- · mhasndfile.cpp

5.297 MHASndFile::sf_wave_t Class Reference

Inheritance diagram for MHASndFile::sf_wave_t:

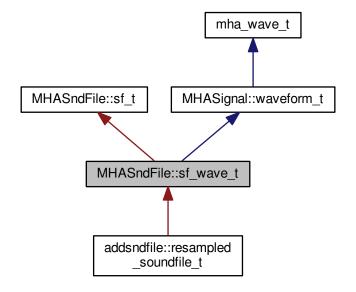

Public Member Functions

• **sf_wave_t** (const std::string &fname, **mha_real_t** peaklevel_db, unsigned int maxlen=std::numeric_limits< unsigned int >::**max**(), unsigned int startpos=0, std← ::vector< int > channel map=std::vector< int >())

Additional Inherited Members


5.297.1 Constructor & Destructor Documentation

The documentation for this class was generated from the following files:

- · mhasndfile.h
- · mhasndfile.cpp
- 5.298 MHATableLookup::linear_table_t Class Reference

Class for interpolation with equidistant x values.

Inheritance diagram for MHATableLookup::linear_table_t:

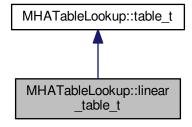

Public Member Functions

linear_table_t (void)

contructor creates an empty linear_table_t (p. 790) object.

mha_real_t lookup (mha_real_t x) const

look up the y value that is stored for the mesh point where x is lower than or equal to the x value given here.

mha_real_t interp (mha_real_t x) const

interpolate y value for the given x value.

• ∼linear_table_t (void)

destructor

void set_xmin (mha_real_t xmin)

set the x value for the first mesh point.

void add_entry (mha_real_t y)

set the y value for the next mesh point.

void set xmax (mha real t xmax)

this sets the x value for a past-the-end, not added mesh point.

void prepare (void)

prepare computes the x distance of the mesh points based on the values given to set_xmin, set_xmax, and the number of times that add_entry was called.

void clear (void)

clear resets the state of this object to the state directly after construction.

Protected Attributes

- mha_real_t * vy
- unsigned int len

Private Attributes

- vector< mha_real_t > vec_y
- mha_real_t xmin
- mha_real_t xmax
- · mha_real_t scalefac

Additional Inherited Members

5.298.1 Detailed Description

Class for interpolation with equidistant x values.

This class can be used for linear interpolation tasks where the mesh points are known for equidistant x values.

Before the class can be used for interpolation, it has to be filled with the y values for the mesh points, the x range has to be specified, and when all values are given, the prepare method has to be called so that the object can determine the distance between x values from the range and the number of mesh points given.

Only after prepare has returned, the object may be used for interpolation.

5.298.2 Constructor & Destructor Documentation

```
5.298.2.1 linear_table_t::linear_table_t ( void )
```

contructor creates an empty linear_table_t (p. 790) object.

add_entry, set_xmin, set_xmax and prepare methods have to be called before the object can be used to lookup and interpolate values.

```
5.298.2.2 linear_table_t::\simlinear_table_t ( void )
```

destructor

5.298.3 Member Function Documentation

look up the y value that is stored for the mesh point where x is lower than or equal to the x value given here.

This method does not extrapolate, so for x < xmin, the y value for xmin is returned. For all x greater than the x of the last mesh point, the y value of the last mesh point is returned.

Precondition

prepare must have been called before lookup may be called.

Implements MHATableLookup::table_t (p. 795).

interpolate y value for the given x value.

The y values for the neighbouring mesh points are looked up and linearly interpolated. For x values outside the range of mesh points, the y value is extrapolated from the nearest two mesh points.

Precondition

prepare must have been called before interp may be called.

Implements MHATableLookup::table_t (p. 795).

```
5.298.3.3 void linear_table_t::set_xmin (
mha_real_t xmin )
```

set the x value for the first mesh point.

Must be called before prepare can be called.

```
5.298.3.4 void linear_table_t::add_entry (
mha real t y )
```

set the y value for the next mesh point.

Must be called at least twice before prepare can be called.

```
5.298.3.5 void linear_table_t::set_xmax (
mha_real_t xmax )
```

this sets the x value for a past-the-end, not added mesh point.

Example:

prepare computes the x distance of the mesh points based on the values given to set_xmin, set_xmax, and the number of times that add_entry was called.

Precondition

set_xmin, set_xmax, add_entry functions must have been called before calling prepare, add_entry must have been called at least twice.

Only after this method has been called, interp or lookup may be called.

clear resets the state of this object to the state directly after construction.

mesh entries and x range are deleted.

interp and lookup may not be called after this function has been called unless prepare and before that its precondition methods are called again.

Implements MHATableLookup::table_t (p. 795).

```
5.298.4 Member Data Documentation
```


```
5.298.4.1 mha_real_t* MHATableLookup::linear_table_t::vy [protected]
5.298.4.2 unsigned int MHATableLookup::linear_table_t::len [protected]
5.298.4.3 vector<mha_real_t> MHATableLookup::linear_table_t::vec_y [private]
5.298.4.4 mha_real_t MHATableLookup::linear_table_t::xmin [private]
5.298.4.5 mha_real_t MHATableLookup::linear_table_t::xmax [private]
5.298.4.6 mha_real_t MHATableLookup::linear_table_t::scalefac [private]
```

The documentation for this class was generated from the following files:

- mha tablelookup.hh
- mha_tablelookup.cpp

5.299 MHATableLookup::table_t Class Reference

Inheritance diagram for MHATableLookup::table_t:

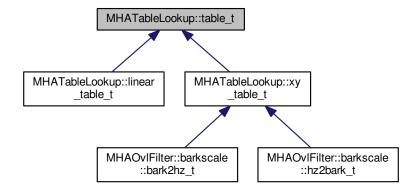

Public Member Functions

```
    table_t (void)
    virtual ~table_t (void)
    virtual mha_real_t lookup (mha_real_t) const =0
    virtual mha_real_t interp (mha_real_t) const =0
    Protected Member Functions
    virtual void clear (void)=0
```

```
5.299.1 Constructor & Destructor Documentation
5.299.1.1 table_t::table_t (
                     void )
5.299.1.2 table_t:: ~table_t (
                     void ) [virtual]
5.299.2 Member Function Documentation
5.299.2.1 virtual mha_real_t MHATableLookup::table_t::lookup (
                     mha_real_t )const [pure virtual]
Implemented in MHATableLookup::xy_table_t (p. 797), and MHATableLookup::linear_ 
table_t (p. 792).
5.299.2.2 virtual mha real t MHATableLookup::table t::interp (
                     mha_real_t )const [pure virtual]
Implemented in MHATableLookup::xy_table_t (p. 798), and MHATableLookup::linear_ 
table_t (p. 792).
5.299.2.3 virtual void MHATableLookup::table_t::clear (
                     void ) [protected], [pure virtual]
```

The documentation for this class was generated from the following files:

Implemented in MHATableLookup::xy_table_t (p. 798), and MHATableLookup::linear_ <--

mha_tablelookup.hh


table_t (p. 794).

mha_tablelookup.cpp

5.300 MHATableLookup::xy_table_t Class Reference

Class for interpolation with non-equidistant x values.

Inheritance diagram for MHATableLookup::xy_table_t:

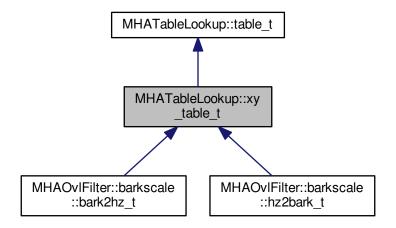

Public Member Functions

- xy_table_t ()
- mha_real_t lookup (mha_real_t x) const

Return the y-value at the position of the nearest x value below input.

mha_real_t interp (mha_real_t x) const

Linear interpolation function.

void add_entry (mha_real_t x, mha_real_t y)

Add a single x-y pair entry.

void add_entry (mha_real_t *pVX, mha_real_t *pVY, unsigned int len)

Add multiple entries at once.

• void clear ()

Clear the table and transformation functions.

void set_xfun (float(*pXFun)(float))

Set transformation function for x values.

void set yfun (float(*pYFun)(float))

Set transformation function for y values during insertion.

void set_xyfun (float(*pYFun)(float, float))

Set transformation function for y values during insertion, based on x and y values.

std::pair< mha_real_t, mha_real_t > get_xlimits () const

returns the min and max x of all mesh points that are stored in the lookup table, i.e.

Private Attributes

- std::map< mha_real_t, mha_real_t > mXY
- float(* xfun)(float)
- float(* yfun)(float)
- float(* xyfun)(float, float)

Additional Inherited Members

5.300.1 Detailed Description

Class for interpolation with non-equidistant x values.

Linear interpolation of the x-y table is performed. A transformation of x and y-values is possible; if a transformation function is provided for the x-values, the same function is applied to the argument of **xy_table_t::interp()** (p. 798) and **xy_table_t::lookup()** (p. 797). The transformation of y values is applied only during insertion into the table. Two functions for y-transformation can be provided: a simple transformation which depends only on the y values, or a transformation which takes both (non-transformed) x and y value as an argument. The two-argument transformation is applied before the one-argument transformation.

```
5.300.2 Constructor & Destructor Documentation
```

```
5.300.2.1 xy_table_t::xy_table_t ( )
```

5.300.3 Member Function Documentation

Return the y-value at the position of the nearest x value below input.

Parameters

```
x Input value
```

Returns

y value at nearest x value below input.

Implements MHATableLookup::table_t (p. 795).

Linear interpolation function.

Parameters

```
x x value
```

Returns

interpolated y value

Implements MHATableLookup::table_t (p. 795).

Add a single x-y pair entry.

Parameters

X	x value
У	corresponding y value

Add multiple entries at once.

Parameters

pVX	array of x values
pVY	array of y values
uLength	Length of x and y arrays

Clear the table and transformation functions.

Implements MHATableLookup::table_t (p. 795).

```
5.300.3.6 void xy_table_t::set_xfun (
float(*)(float) fun )
```

Set transformation function for x values.

Parameters

```
fun Transformation function.
```

Set transformation function for y values during insertion.

Parameters

```
fun Transformation function.
```

Set transformation function for y values during insertion, based on x and y values.

Parameters

```
fun Transformation function.
```

```
5.300.3.9 std::pair<mha_real_t,mha_real_t> MHATableLookup::xy_table_t::get_xlimits ( ) const [inline]
```

returns the min and max x of all mesh points that are stored in the lookup table, i.e. after transformation with xfun, if any. Not real-time safe

```
5.300.4 Member Data Documentation
```

```
5.300.4.1 std::map<mha_real_t,mha_real_t> MHATableLookup::xy_table_t::mXY [private]
```

5.300.4.2 float(* MHATableLookup::xy_table_t::xfun) (float) [private]

5.300.4.3 float(* MHATableLookup::xy_table_t::yfun) (float) [private]

5.300.4.4 float(* MHATableLookup::xy_table_t::xyfun) (float, float) [private]


The documentation for this class was generated from the following files:

- mha tablelookup.hh
- mha_tablelookup.cpp

5.301 MHAWindow::bartlett_t Class Reference

Bartlett window.

Inheritance diagram for MHAWindow::bartlett_t:

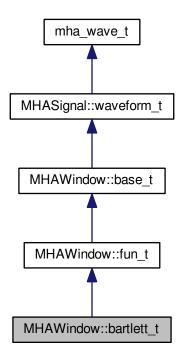

Public Member Functions

bartlett_t (unsigned int n)

Additional Inherited Members

5.301.1 Detailed Description

Bartlett window.

5.301.2 Constructor & Destructor Documentation

5.301.2.1 MHAWindow::bartlett_t::bartlett_t (unsigned int *n*) [inline]


The documentation for this class was generated from the following file:

mha_windowparser.h

5.302 MHAWindow::base_t Class Reference

Common base for window types.

Inheritance diagram for MHAWindow::base_t:

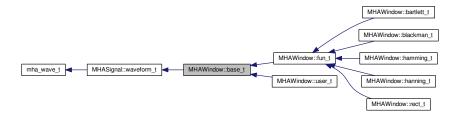

Public Member Functions

base_t (unsigned int len)

Constructor.

base_t (const MHAWindow::base_t &src)

Copy constructor.

void operator() (mha_wave_t &) const

Apply window to waveform segment (reference)

void operator() (mha_wave_t *) const

Apply window to waveform segment (pointer)

void ramp_begin (mha_wave_t &) const

Apply a ramp at the begining.

void ramp_end (mha_wave_t &) const
 Apply a ramp at the end.

Additional Inherited Members

5.302.1 Detailed Description

Common base for window types.

5.302.2 Constructor & Destructor Documentation

5.302.2.1 MHAWindow::base_t::base_t (unsigned int *len*)

Constructor.

Parameters

```
len Window length in samples.
```

Copy constructor.

Parameters

```
src | Source to be copied
```

```
5.302.3 Member Function Documentation
```

```
5.302.3.1 void MHAWindow::base_t::operator() (
mha_wave_t & s ) const
```

Apply window to waveform segment (reference)

```
5.302.3.2 void MHAWindow::base_t::operator() (
mha_wave_t * s ) const
```

Apply window to waveform segment (pointer)

Apply a ramp at the begining.

```
5.302.3.4 void MHAWindow::base_t::ramp_end ( mha_wave_t & s ) const
```

Apply a ramp at the end.


The documentation for this class was generated from the following files:

- mha_windowparser.h
- mha_windowparser.cpp

5.303 MHAWindow::blackman_t Class Reference

Blackman window.

Inheritance diagram for MHAWindow::blackman_t:

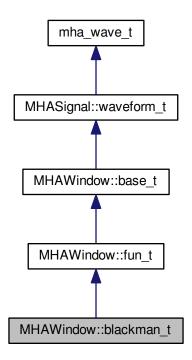

Public Member Functions

blackman_t (unsigned int n)

Additional Inherited Members

5.303.1 Detailed Description

Blackman window.

5.303.2 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

mha_windowparser.h

5.304 MHAWindow::fun_t Class Reference

Generic window based on a generator function.

Inheritance diagram for MHAWindow::fun_t:



Public Member Functions

fun_t (unsigned int n, float(*fun)(float), float xmin=-1, float xmax=1, bool min_← included=true, bool max_included=false)
 Constructor.

Additional Inherited Members

5.304.1 Detailed Description

Generic window based on a generator function.

The generator function should return a valid window function in the interval [-1,1].

5.304.2 Constructor & Destructor Documentation

Constructor.

Parameters

n	Window length
fun	Generator function, i.e. MHAWindow::hanning() (p. 123)
xmin	Start value of window, i.e1 for full window or 0 for fade-out ramp.
xmax	Last value of window, i.e. 1 for full window
min_included	Flag if minimum value is included
max_included	Flag if maximum value is included


The documentation for this class was generated from the following files:

- mha_windowparser.h
- mha_windowparser.cpp

5.305 MHAWindow::hamming_t Class Reference

Hamming window.

Inheritance diagram for MHAWindow::hamming_t:

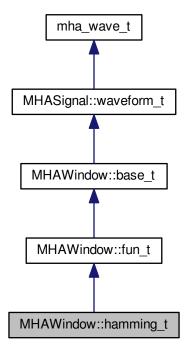

Public Member Functions

• hamming_t (unsigned int n)

Additional Inherited Members

5.305.1 Detailed Description

Hamming window.

5.305.2 Constructor & Destructor Documentation


The documentation for this class was generated from the following file:

mha_windowparser.h

5.306 MHAWindow::hanning_t Class Reference

von-Hann window

Inheritance diagram for MHAWindow::hanning_t:

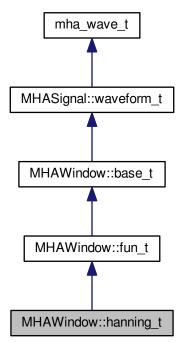

Public Member Functions

• hanning_t (unsigned int n)

Additional Inherited Members

5.306.1 Detailed Description

von-Hann window

5.306.2 Constructor & Destructor Documentation

5.306.2.1 MHAWindow::hanning_t::hanning_t (
unsigned int n) [inline]


The documentation for this class was generated from the following file:

mha_windowparser.h

5.307 MHAWindow::rect_t Class Reference

Rectangular window.

Inheritance diagram for MHAWindow::rect_t:

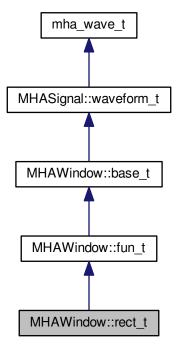

Public Member Functions

rect_t (unsigned int n)

Additional Inherited Members

5.307.1 Detailed Description

Rectangular window.

5.307.2 Constructor & Destructor Documentation


The documentation for this class was generated from the following file:

mha_windowparser.h

5.308 MHAWindow::user_t Class Reference

User defined window.

Inheritance diagram for MHAWindow::user_t:

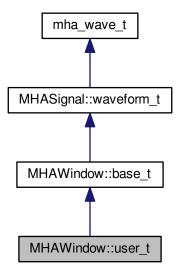

Public Member Functions

user_t (const std::vector< mha_real_t > &wnd)
 Constructor.

Additional Inherited Members

5.308.1 Detailed Description

User defined window.

5.308.2 Constructor & Destructor Documentation

Constructor.

Parameters


wnd User defined window

The documentation for this class was generated from the following files:

- mha_windowparser.h
- mha_windowparser.cpp

5.309 mon_t Class Reference

Inheritance diagram for mon_t:

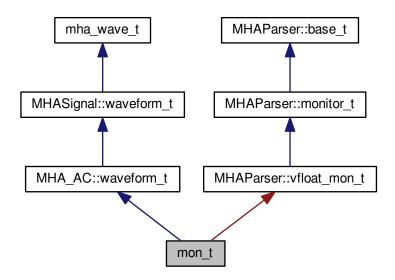

Public Member Functions

- mon_t (unsigned int nch, std::string name, algo_comm_t ac, std::string base, MHA←
 Parser::parser_t &p, std::string help)
- void store ()

Additional Inherited Members

5.309.1 Constructor & Destructor Documentation

5.309.2 Member Function Documentation


```
5.309.2.1 void mon_t::store ( )
```

The documentation for this class was generated from the following file:

rmslevel.cpp

5.310 multibandcompressor::fftfb_plug_t Class Reference

Inheritance diagram for multibandcompressor::fftfb_plug_t:

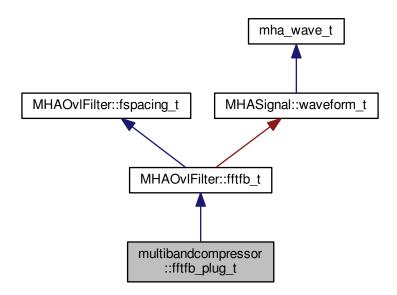

Public Member Functions

- fftfb_plug_t (MHAOvlFilter::fftfb_vars_t &, const mhaconfig_t &cfg, algo_comm_← t ac, std::string alg)
- void insert ()

Private Attributes

- MHA_AC::waveform_t cfv
 vector of nominal center frequencies / Hz
- MHA_AC::waveform_t efv
 vector of edge frequencies / Hz
- MHA_AC::waveform_t bwv vector of band-weigths (sum of squared fft-bin-weigths)/num_frames


```
Additional Inherited Members
```

```
5.310.1 Constructor & Destructor Documentation
5.310.1.1 multibandcompressor::fftfb_plug_t::fftfb_plug_t (
                      MHAOvIFilter::fftfb vars t & vars,
                      const mhaconfig_t & cfg,
                      algo_comm_t ac,
                      std::string alg )
5.310.2 Member Function Documentation
5.310.2.1 void multibandcompressor::fftfb plug t::insert ( )
5.310.3 Member Data Documentation
5.310.3.1 MHA_AC::waveform_t multibandcompressor::fftfb_plug_t::cfv [private]
vector of nominal center frequencies / Hz
5.310.3.2 MHA_AC::waveform_t multibandcompressor::fftfb_plug_t::efv [private]
vector of edge frequencies / Hz
5.310.3.3 MHA_AC::waveform_t multibandcompressor::fftfb_plug_t::bwv [private]
vector of band-weigths (sum of squared fft-bin-weigths)/num_frames
The documentation for this class was generated from the following file:
```

multibandcompressor.cpp

5.311 multibandcompressor::interface_t Class Reference

Inheritance diagram for multibandcompressor::interface_t:

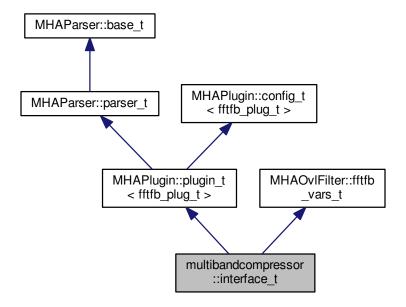

Public Member Functions

- interface_t (const algo_comm_t &, const std::string &, const std::string &)
- void prepare (mhaconfig_t &)
- void release ()
- mha_spec_t * process (mha_spec_t *)

Private Member Functions

void update_cfg ()

Private Attributes

- int num_channels
- DynComp::dc_afterburn_t burn
- MHAEvents::patchbay_t< interface_t > patchbay
- std::string algo
- MHAParser::mhapluginloader_t plug
- plugin_signals_t * plug_sigs

Additional Inherited Members

```
5.311.1 Constructor & Destructor Documentation
```

Default values are set and MHA configuration variables registered into the parser.

Parameters

ac⊷	algorithm communication handle
_	
th	chain name
al	algorithm name

5.311.2 Member Function Documentation

Implements MHAPlugin::plugin_t < fftfb_plug_t > (p. 696).

Reimplemented from **MHAPlugin::plugin_t** < **fftfb_plug_t** > (p. 697).

```
5.311.2.3 mha_spec_t * multibandcompressor::interface_t::process ( mha_spec_t * s )
```

- **5.311.2.4** void multibandcompressor::interface_t::update_cfg() [private]
- 5.311.3 Member Data Documentation
- **5.311.3.1** int multibandcompressor::interface_t::num_channels [private]
- **5.311.3.2 DynComp::dc_afterburn_t** multibandcompressor::interface_t::burn [private]
- **5.311.3.3 MHAE**vents::patchbay_t<interface_t> multibandcompressor::interface_t::patchbay [private]

5.312 multibandcompressor::plugin_signals_t Class Reference 815

```
5.311.3.4 std::string multibandcompressor::interface_t::algo [private]
5.311.3.5 MHAParser::mhapluginloader_t multibandcompressor::interface_t::plug [private]
5.311.3.6 plugin_signals_t* multibandcompressor::interface_t::plug_sigs [private]
The documentation for this class was generated from the following file:

    multibandcompressor.cpp

5.312 multibandcompressor::plugin_signals_t Class Reference
Public Member Functions
   • plugin_signals_t (unsigned int channels, unsigned int bands)

    void update levels (MHAOvlFilter::fftfb t *, mha spec t *s in)

   • void apply_gains (MHAOvlFilter::fftfb_t *, DynComp::dc_afterburn_t &burn, mha_ <--
     spec_t *s_out)
Public Attributes

    mha wave t * plug output

Private Attributes

    MHASignal::waveform_t plug_level

    MHASignal::waveform_t gain

5.312.1 Constructor & Destructor Documentation
5.312.1.1 multibandcompressor::plugin_signals_t::plugin_signals_t (
                      unsigned int channels,
```

5.312.2 Member Function Documentation

unsigned int bands)

5.312.2.1 void multibandcompressor::plugin_signals_t::update_levels (

mha_spec_t * s_in)

MHAOvlFilter::fftfb t * pFb,


- 5.312.3 Member Data Documentation
- **5.312.3.1 MHASignal::waveform_t** multibandcompressor::plugin_signals_t::plug_level [private]
- **5.312.3.2** MHASignal::waveform_t multibandcompressor::plugin_signals_t::gain [private]
- 5.312.3.3 mha wave t* multibandcompressor::plugin_signals_t::plug_output

The documentation for this class was generated from the following file:

multibandcompressor.cpp

5.313 nlms_t Class Reference

Inheritance diagram for nlms_t:

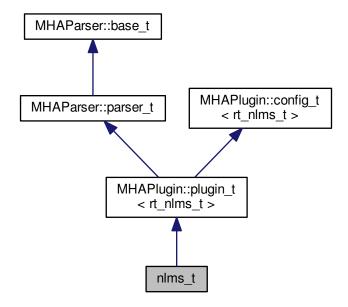

Public Member Functions

```
    nlms_t (algo_comm_t, const char *, const char *)
    void prepare (mhaconfig_t &)
```

- void release ()
- mha_wave_t * process (mha_wave_t *)

Private Member Functions

• void update ()

Private Attributes

```
    MHAParser::float_t rho
```

- MHAParser::float_t c
- MHAParser::int_t ntaps
- MHAParser::string_t name_u
- MHAParser::string_t name_d
- MHAParser::kw_t normtype
- MHAParser::kw_t estimtype
- MHAParser::float_t lambda_smoothing_power
- MHAParser::string t name e
- MHAParser::string_t name_f
- MHAParser::int_t n_no_update
- std::string algo
- MHAEvents::patchbay_t< nlms_t > patchbay

Additional Inherited Members

```
5.313.1 Constructor & Destructor Documentation
```

5.313.2 Member Function Documentation

Implements MHAPlugin::plugin_t < rt_nlms_t > (p. 696).


```
5.313.2.2 void nlms t::release (
                    void ) [virtual]
Reimplemented from MHAPlugin::plugin_t< rt_nlms_t > (p. 697).
5.313.2.3 mha_wave_t * nlms_t::process (
                    mha_wave_t * s
5.313.2.4 void nlms_t::update() [private]
5.313.3 Member Data Documentation
5.313.3.1 MHAParser::float t nlms_t::rho [private]
5.313.3.2 MHAParser::float_t nlms_t::c [private]
5.313.3.3 MHAParser::int t nlms_t::ntaps [private]
5.313.3.4 MHAParser::string_t nlms_t::name_u [private]
5.313.3.5 MHAParser::string_t nlms_t::name_d [private]
5.313.3.6 MHAParser::kw_t nlms_t::normtype [private]
5.313.3.7 MHAParser::kw t nlms_t::estimtype [private]
5.313.3.8 MHAParser::float t nlms_t::lambda_smoothing_power [private]
5.313.3.9 MHAParser::string_t nlms_t::name_e [private]
5.313.3.10 MHAParser::string_t nlms_t::name_f [private]
5.313.3.11 MHAParser::int_t nlms_t::n_no_update [private]
5.313.3.12 std::string nlms_t::algo [private]
5.313.3.13 MHAEvents::patchbay t<nlms t> nlms_t::patchbay [private]
```

The documentation for this class was generated from the following file:

nlms_wave.cpp

5.314 noise_t Class Reference

Inheritance diagram for noise_t:

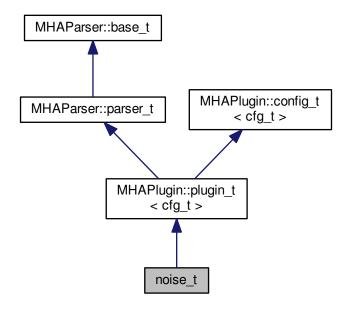

Public Member Functions

- noise_t (const algo_comm_t &, const std::string &, const std::string &)
- mha_wave_t * process (mha_wave_t *)
- mha_spec_t * process (mha_spec_t *)
- void prepare (mhaconfig_t &)
- void update_cfg ()

Private Attributes

- MHAParser::float_t lev
- MHAParser::kw_t mode
- MHAParser::float_t frozennoise_length
- MHAEvents::patchbay_t< noise_t > patchbay

Additional Inherited Members


```
5.314.1 Constructor & Destructor Documentation
5.314.1.1 noise_t::noise_t (
                     const algo_comm_t & iac,
                     const std::string &,
                     const std::string & )
5.314.2 Member Function Documentation
5.314.2.1 mha_wave_t * noise_t::process (
                     mha_wave_t * s )
5.314.2.2 mha_spec_t * noise_t::process (
                     mha spec t * s)
5.314.2.3 void noise t::prepare (
                     mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin_t < cfg_t > (p. 696).
5.314.2.4 void noise_t::update_cfg()
5.314.3 Member Data Documentation
5.314.3.1 MHAParser::float_t noise_t::lev [private]
5.314.3.2 MHAParser::kw_t noise_t::mode [private]
5.314.3.3 MHAParser::float t noise_t::frozennoise_length [private]
5.314.3.4 MHAEvents::patchbay_t<noise_t> noise_t::patchbay [private]
```

The documentation for this class was generated from the following file:

noise.cpp

5.315 noisePowProposedScale::interface_t Class Reference

Inheritance diagram for noisePowProposedScale::interface_t:

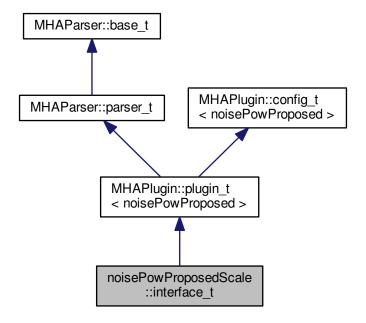

Public Member Functions

- interface_t (const algo_comm_t &, const std::string &, const std::string &)
- mha_spec_t * process (mha_spec_t *)
- void prepare (mhaconfig_t &)

Private Member Functions

void update_cfg ()

Private Attributes

- MHAParser::float_t alphaPH1mean
- MHAParser::float t alphaPSD
- MHAParser::float_t q
- MHAParser::float_t xiOptDb
- std::string name
- MHAEvents::patchbay_t< interface_t > patchbay

```
Additional Inherited Members
```

```
5.315.1 Constructor & Destructor Documentation
5.315.1.1 noisePowProposedScale::interface t:interface t(
                     const algo comm t & iac,
                     const std::string & ,
                     const std::string & iname )
5.315.2 Member Function Documentation
5.315.2.1 mha_spec_t * noisePowProposedScale::interface_t::process (
                     mha\_spec\_t * s)
5.315.2.2 void noisePowProposedScale::interface_t::prepare (
                     mhaconfig t&cf) [virtual]
Implements MHAPlugin::plugin_t< noisePowProposed > (p. 696).
5.315.2.3 void noisePowProposedScale::interface_t::update_cfg (
                     void ) [private]
5.315.3 Member Data Documentation
5.315.3.1 MHAParser::float_t noisePowProposedScale::interface_t::alphaPH1mean [private]
5.315.3.2 MHAParser::float t noisePowProposedScale::interface t::alphaPSD [private]
5.315.3.3 MHAParser::float_t noisePowProposedScale::interface_t::q [private]
5.315.3.4 MHAParser::float t noisePowProposedScale::interface_t::xiOptDb [private]
5.315.3.5 std::string noisePowProposedScale::interface_t::name [private]
5.315.3.6 MHAEvents::patchbay t<interface t> noisePowProposedScale::interface_t::patchbay
          [private]
```

The documentation for this class was generated from the following file:

noisePowProposedScale.cpp

5.316 noisePowProposedScale::noisePowProposed Class Reference

Public Member Functions

- noisePowProposed (const mhaconfig_t &cf, algo_comm_t ac, const std::string &name, float alphaPH1mean, float alphaPSD, float q, float xiOptDb)
- void **process** (**mha spec t** *noisyDftFrame)
- void **insert** ()

Private Attributes

- MHASignal::waveform_t noisyPer
- MHASignal::waveform t PH1mean
- MHA_AC::waveform_t noisePow
- MHA_AC::waveform_t inputPow
- MHA_AC::waveform_t snrPost1Debug
- MHA_AC::waveform_t GLRDebug
- MHA_AC::waveform_t PH1Debug
- MHA_AC::waveform_t estimateDebug
- MHA_AC::spectrum_t inputSpec
- float alphaPH1mean_
- float alphaPSD_
- float priorFact
- float xiOpt
- float logGLRFact
- float GLRexp
- int frameno

5.316.1 Constructor & Destructor Documentation

5.316.2 Member Function Documentation

```
5.316.2.1 void noisePowProposedScale::noisePowProposed::process ( mha_spec_t * noisyDftFrame )
```


5.316.2.2	void noisePowProposedScale::noisePowProposed::insert() [inline]
5.316.3 N	lember Data Documentation
5.316.3.1	MHASignal::waveform_t noisePowProposedScale::noisePowProposed::noisyPer [private]
5.316.3.2	MHASignal::waveform_t noisePowProposedScale::noisePowProposed::PH1mean [private]
5.316.3.3	MHA_AC::waveform_t noisePowProposedScale::noisePowProposed::noisePow [private]
5.316.3.4	MHA_AC::waveform_t noisePowProposedScale::noisePowProposed::inputPow [private]
5.316.3.5	MHA_AC::waveform_t noisePowProposedScale::noisePowProposed::snrPost1Debug [private]
5.316.3.6	MHA_AC::waveform_t noisePowProposedScale::noisePowProposed::GLRDebug [private]
5.316.3.7	MHA_AC::waveform_t noisePowProposedScale::noisePowProposed::PH1Debug [private]
5.316.3.8	MHA_AC::waveform_t noisePowProposedScale::noisePowProposed::estimateDebug [private]
5.316.3.9	MHA_AC::spectrum_t noisePowProposedScale::noisePowProposed::inputSpec [private]
5.316.3.10	float noisePowProposedScale::noisePowProposed::alphaPH1mean_ [private]
5.316.3.11	float noisePowProposedScale::noisePowProposed::alphaPSD_ [private]
5.316.3.12	float noisePowProposedScale::noisePowProposed::priorFact [private]
5.316.3.13	float noisePowProposedScale::noisePowProposed::xiOpt [private]
5.316.3.14	float noisePowProposedScale::noisePowProposed::logGLRFact [private]
5.316.3.15	float noisePowProposedScale::noisePowProposed::GLRexp [private]
5.316.3.16	<pre>int noisePowProposedScale::noisePowProposed::frameno [private]</pre>

The documentation for this class was generated from the following file:

noisePowProposedScale.cpp

5.317 overlapadd::overlapadd_if_t Class Reference

Inheritance diagram for overlapadd::overlapadd_if_t:

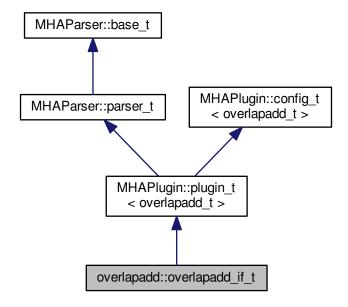

Public Member Functions

- overlapadd_if_t (const algo_comm_t &, const std::string &, const std::string &)
- ∼overlapadd_if_t ()
- void prepare (mhaconfig_t &)
- void release ()
- mha_wave_t * process (mha_wave_t *)

Private Member Functions

• void update ()

Private Attributes

- MHAEvents::patchbay_t< overlapadd_if_t > patchbay
- MHAParser::int_t nfft

FFT length to be used, zero-padding is FFT length-wndlength.

MHAParser::int_t nwnd

Window length to be used (overlap is 1-fragsize/wndlength)

```
    MHAParser::float_t wndpos
```

Relative position of zero padding (0 end, 0.5 center, 1 start)

- MHAParser::window t window
- MHAParser::float_t wndexp
- MHAParser::window t zerowindow
- MHAParser::mhapluginloader_t plugloader
- MHAParser::float_mon_t prescale
- MHAParser::float mon t postscale
- std::string algo
- mhaconfig_t cf_in
- · mhaconfig t cf out

Additional Inherited Members

```
5.317.1 Constructor & Destructor Documentation
```

- 5.317.1.2 overlapadd::overlapadd_if_t::~overlapadd_if_t ()
- 5.317.2 Member Function Documentation

Implements MHAPlugin::plugin t < overlapadd t > (p. 696).

Reimplemented from MHAPlugin::plugin_t< overlapadd_t > (p. 697).

```
5.317.2.3 mha_wave_t * overlapadd::overlapadd_if_t::process ( mha_wave_t * wave_in )
```

- **5.317.2.4 void overlapadd::overlapadd_if_t::update()** [private]
- 5.317.3 Member Data Documentation
- **5.317.3.1 MHAEvents::patchbay_t**<overlapadd_if_t> overlapadd::overlapadd_if_t::patchbay [private]
- **5.317.3.2** MHAParser::int_t overlapadd::overlapadd_if_t::nfft [private]

FFT length to be used, zero-padding is FFT length-wndlength.

```
5.317.3.3 MHAParser::int_t overlapadd::overlapadd_if_t::nwnd [private]
Window length to be used (overlap is 1-fragsize/wndlength)
5.317.3.4 MHAParser::float t overlapadd::overlapadd_if_t::wndpos [private]
Relative position of zero padding (0 end, 0.5 center, 1 start)
5.317.3.5 MHAParser::window toverlapadd::overlapadd_if_t::window [private]
5.317.3.6 MHAParser::float toverlapadd::overlapadd_if_t::wndexp [private]
5.317.3.7 MHAParser::window t overlapadd::overlapadd_if_t::zerowindow [private]
5.317.3.8 MHAParser::mhapluginloader toverlapadd::overlapadd_if_t::plugloader [private]
5.317.3.9 MHAParser::float_mon_t overlapadd::overlapadd_if_t::prescale [private]
5.317.3.10 MHAParser::float_mon_t overlapadd::overlapadd_if_t::postscale [private]
5.317.3.11 std::string overlapadd::overlapadd_if_t::algo [private]
5.317.3.12 mhaconfig toverlapadd::overlapadd if t::cf in [private]
5.317.3.13 mhaconfig_t overlapadd::overlapadd_if_t::cf_out [private]
```

The documentation for this class was generated from the following file:

overlapadd.cpp

5.318 overlapadd::overlapadd_t Class Reference

Public Member Functions

- overlapadd_t (mhaconfig_t spar_in, mhaconfig_t spar_out, float wexp, float wnd-pos, const MHAParser::window_t &window, const MHAParser::window_t &zerowindow, float &prescale_fac, float &postscale_fac)
- ∼overlapadd_t ()
- mha_spec_t * ola1 (mha_wave_t *)
- mha_wave_t * ola2 (mha_spec_t *)

Private Attributes

```
· mha fft t fft

    MHAWindow::base t prewnd

    MHAWindow::base_t postwnd

    MHASignal::waveform t wave in1

    MHASignal::waveform_t wave_out1

    MHASignal::spectrum t spec in

    MHASignal::waveform t calc out

    MHASignal::waveform_t out_buf

    MHASignal::waveform t write buf

    unsigned int n zero

    unsigned int n_pad1

    unsigned int n pad2

5.318.1 Constructor & Destructor Documentation
5.318.1.1 overlapadd::overlapadd_t::overlapadd_t (
                      mhaconfig t spar_in,
                      mhaconfig_t spar_out,
                      float wexp,
                      float wndpos,
                      const MHAParser::window t & window,
                      const MHAParser::window t & zerowindow,
                      float & prescale fac,
                      float & postscale_fac )
5.318.1.2 overlapadd::overlapadd_t::~overlapadd_t ( )
5.318.2 Member Function Documentation
5.318.2.1 mha spec t * overlapadd::overlapadd_t::ola1 (
                      mha wave t * s)
5.318.2.2 mha_wave_t * overlapadd::overlapadd_t::ola2 (
                      mha\_spec\_t * s)
5.318.3 Member Data Documentation
5.318.3.1 mha_fft_t overlapadd::overlapadd_t::fft [private]
5.318.3.2 MHAWindow::base_t overlapadd::overlapadd_t::prewnd [private]
```

5.318.3.3 MHAWindow::base_t overlapadd::overlapadd_t::postwnd [private]


```
5.318.3.4 MHASignal::waveform_t overlapadd::overlapadd_t::wave_in1 [private]
5.318.3.5 MHASignal::waveform_t overlapadd::overlapadd_t::wave_out1 [private]
5.318.3.6 MHASignal::spectrum_t overlapadd::overlapadd_t::spec_in [private]
5.318.3.7 MHASignal::waveform_t overlapadd::overlapadd_t::calc_out [private]
5.318.3.8 MHASignal::waveform_t overlapadd::overlapadd_t::out_buf [private]
5.318.3.9 MHASignal::waveform_t overlapadd::overlapadd_t::write_buf [private]
5.318.3.10 unsigned int overlapadd::overlapadd_t::n_zero [private]
5.318.3.11 unsigned int overlapadd::overlapadd_t::n_pad1 [private]
5.318.3.12 unsigned int overlapadd::overlapadd_t::n_pad2 [private]
```

The documentation for this class was generated from the following file:

overlapadd.cpp

5.319 parser_int_dyn Class Reference

Inheritance diagram for parser_int_dyn:

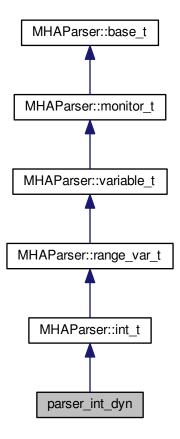

Public Member Functions

- parser_int_dyn (const std::string &help_text, const std::string &initial_value, const std
 ::string &range)
- void set_max_angle_ind (unsigned int max_ind)

Additional Inherited Members

5.319.1 Constructor & Destructor Documentation

5.319.2 Member Function Documentation


The documentation for this class was generated from the following file:

· steerbf.h

5.320 plingploing::if_t Class Reference

Plugin class of the plingploing music generator.

Inheritance diagram for plingploing::if_t:

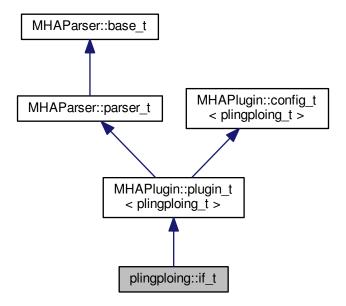

Public Member Functions

- if_t (algo_comm_t, const char *, const char *)
- mha_wave_t * process (mha_wave_t *)
- void prepare (mhaconfig_t &cf)

Private Member Functions

• void update ()

Private Attributes

MHAEvents::patchbay_t< if_t > patchbay

MHAParser::float_t level

Output level in dB SPL.

MHAParser::float_t pitch

Bass pitch in Hz.

MHAParser::float_t fun1_key
 Key1.

• MHAParser::float_t fun1_range Range1.

MHAParser::float_t fun2_key
 Key 2.

• MHAParser::float_t fun2_range Range 2.

MHAParser::float_t bpm

Speed in beats per minute (bpm)

MHAParser::float_t minlen

Minimum note length in beats.

MHAParser::float_t maxlen

Maximum note length in beats.

MHAParser::float_t bassmod

Bass key modulation depth.

MHAParser::float_t bassperiod

Bass key modulation period.

Additional Inherited Members

5.320.1 Detailed Description

Plugin class of the plingploing music generator.

```
5.320.2 Constructor & Destructor Documentation
```

5.320.3 Member Function Documentation

leaden at MIADississas a sala adam de como de como

Implements MHAPlugin::plugin_t< plingploing_t > (p. 696).

mhaconfig_t & cf) [virtual]

```
5.320.3.3 void plingploing::if_t::update( ) [private]
5.320.4 Member Data Documentation
5.320.4.1 MHAEvents::patchbay_t<if_t> plingploing::if_t::patchbay [private]
5.320.4.2 MHAParser::float_t plingploing::if_t::level [private]
Output level in dB SPL.
5.320.4.3 MHAParser::float_t plingploing::if_t::pitch [private]
Bass pitch in Hz.
5.320.4.4 MHAParser::float_t plingploing::if_t::fun1_key [private]
Key1.
5.320.4.5 MHAParser::float_t plingploing::if_t::fun1_range [private]
Range1.
5.320.4.6 MHAParser::float_t plingploing::if_t::fun2_key [private]
Key 2.
5.320.4.7 MHAParser::float_t plingploing::if_t::fun2_range [private]
Range 2.
5.320.4.8 MHAParser::float_t plingploing::if_t::bpm [private]
Speed in beats per minute (bpm)
5.320.4.9 MHAParser::float_t plingploing::if_t::minlen [private]
Minimum note length in beats.
5.320.4.10 MHAParser::float_t plingploing::if_t::maxlen [private]
Maximum note length in beats.
```

5.320.4.11 MHAParser::float_t plingploing::if_t::bassmod [private]

Bass key modulation depth.

5.320.4.12 MHAParser::float_t plingploing::if_t::bassperiod [private]

Bass key modulation period.

The documentation for this class was generated from the following file:

· plingploing.cpp

5.321 plingploing::plingploing_t Class Reference

Run-time configuration of the plingploing music generator.

Public Member Functions

- plingploing_t (mhaconfig_t, mha_real_t level, mha_real_t pitch, mha_real_t k1, mha_real_t k2, mha_real_t i1, mha_real_t i2, mha_real_t bpm, mha_real_t minlen, mha_real_t maxlen, mha_real_t bassmod, mha_real_t bassperiod)
- void process (mha wave t *)

Private Attributes

- · mhaconfig_t cf
- mha_real_t pitch_
- · unsigned int bt
- unsigned int t
- unsigned int len
- mha_real_t dur_
- mha real t minlen
- mha_real_t maxlen_
- mha_real_t bass
- mha_real_t freq
- mha_real_t fun1_key
- mha_real_t fun1_range
- · mha real t fun1
- mha_real_t fun2
- mha real t fun2 key
- mha_real_t fun2_range
- mha_real_t dist
- mha real t dist1
- mha_real_t alph
- · mha real trms
- mha_real_t bassmod_
- mha_real_t bassperiod_
- MHAWindow::hanning t hann1
- MHAWindow::hanning t hann2
- mha_real_t level

5.321.1 Detailed Description

Run-time configuration of the plingploing music generator.

```
5.321.2 Constructor & Destructor Documentation
5.321.2.1 plingploing::plingploing t::plingploing t (
                      mhaconfig_t c,
                      mha_real_t level,
                      mha_real_t pitch,
                      mha_real_t k1,
                      mha real t k2,
                      mha real t i1,
                      mha_real_t i2,
                      mha real t bpm,
                      mha_real_t minlen,
                      mha_real_t maxlen,
                      mha_real_t bassmod,
                      mha_real_t bassperiod )
5.321.3 Member Function Documentation
5.321.3.1 void plingploing::plingploing_t::process (
                      mha_wave_t * s )
5.321.4 Member Data Documentation
5.321.4.1
         mhaconfig_t plingploing::plingploing_t::cf [private]
5.321.4.2 mha_real_t plingploing::plingploing_t::pitch_ [private]
5.321.4.3 unsigned int plingploing::plingploing_t::bt [private]
5.321.4.4 unsigned int plingploing::plingploing_t::t [private]
5.321.4.5 unsigned int plingploing::plingploing_t::len [private]
5.321.4.6 mha_real_t plingploing::plingploing_t::dur_ [private]
5.321.4.7 mha real t plingploing::plingploing t::minlen [private]
5.321.4.8 mha_real_t plingploing::plingploing_t::maxlen_ [private]
5.321.4.9 mha_real_t plingploing::plingploing_t::bass [private]
```


```
5.321.4.10
          mha_real_t plingploing::plingploing_t::freq [private]
5.321.4.11
          mha_real_t plingploing::plingploing_t::fun1_key [private]
5.321.4.12 mha_real_t plingploing::plingploing_t::fun1_range [private]
5.321.4.13
          mha_real_t plingploing::plingploing_t::fun1 [private]
5.321.4.14
          mha_real_t plingploing::plingploing_t::fun2 [private]
5.321.4.15 mha_real_t plingploing::plingploing_t::fun2_key [private]
5.321.4.16 mha_real_t plingploing::plingploing_t::fun2_range [private]
5.321.4.17
          mha_real_t plingploing::plingploing_t::dist [private]
5.321.4.18 mha_real_t plingploing::plingploing_t::dist1 [private]
5.321.4.19 mha_real_t plingploing::plingploing_t::alph [private]
5.321.4.20
          mha_real_t plingploing::plingploing_t::rms [private]
5.321.4.21
          mha real t plingploing::plingploing_t::bassmod_ [private]
5.321.4.22
          mha_real_t plingploing::plingploing_t::bassperiod_ [private]
5.321.4.23
          MHAWindow::hanning_t plingploing::plingploing_t::hann1 [private]
5.321.4.24
          MHAWindow::hanning_t plingploing::plingploing_t::hann2 [private]
5.321.4.25
          mha_real_t plingploing::plingploing_t::level [private]
```

The documentation for this class was generated from the following file:

plingploing.cpp

5.322 plug_t Class Reference

Inheritance diagram for plug_t:

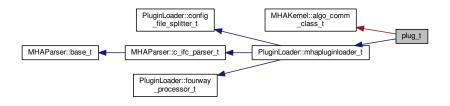

Public Member Functions

```
    plug_t (const std::string &libname, const std::string &chain, const std::string &algo)
    ~plug_t () throw ()
```

- MHAProc_wave2wave_t get_process_wave ()
- MHAProc_wave2spec_t get_process_spec ()
- void * get_handle ()
- algo_comm_t get_ac ()

Additional Inherited Members

```
5.322.1 Constructor & Destructor Documentation
```

5.322.2.4 algo_comm_t plug_t::get_ac() [inline]


The documentation for this class was generated from the following file:

analysispath.cpp

5.322.2.3 void * plug_t::get_handle ()

5.323 plugin_interface_t Class Reference

Inheritance diagram for plugin_interface_t:

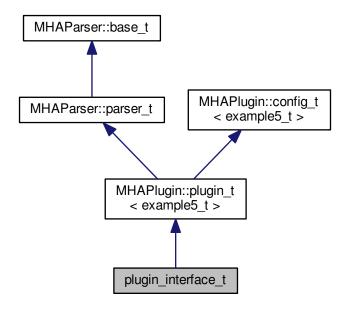

Public Member Functions

- plugin_interface_t (const algo_comm_t &, const std::string &, const std::string &)
- mha_spec_t * process (mha_spec_t *)
- void prepare (mhaconfig_t &)

Private Member Functions

void update_cfg ()

Private Attributes

- MHAParser::int_t scale_ch
- MHAParser::float_t factor
- MHAEvents::patchbay_t< plugin_interface_t > patchbay

Additional Inherited Members

```
5.323.1 Constructor & Destructor Documentation
5.323.1.1 plugin_interface_t::plugin_interface_t (
                      const algo_comm_t & iac,
                      const std::string & ,
                      const std::string & )
5.323.2 Member Function Documentation
5.323.2.1 mha spec t * plugin_interface_t::process (
                      mha_spec_t * spec )
5.323.2.2 void plugin_interface_t::prepare (
                      mhaconfig_t & tfcfg ) [virtual]
Implements MHAPlugin::plugin_t< example5_t > (p. 696).
5.323.2.3 void plugin_interface_t::update_cfg( ) [private]
5.323.3 Member Data Documentation
5.323.3.1 MHAParser::int_t plugin_interface_t::scale_ch [private]
5.323.3.2 MHAParser::float_t plugin_interface_t::factor [private]
5.323.3.3 MHAEvents::patchbay_t<plugin_interface_t> plugin_interface_t::patchbay
          [private]
```

The documentation for this class was generated from the following file:

example5.cpp

5.324 pluginbrowser_t Class Reference

Public Member Functions

- pluginbrowser t()
- void get_paths ()
- plugindescription_t scan_plugin (const std::string &name)
- void add_plugins ()
- void clear_plugins ()
- void scan_plugins ()
- void add_plugin (const std::string &name)
- std::list< plugindescription_t > get_plugins () const

Private Attributes

```
• std::string plugin_extension
```

- std::list< std::string > library_paths
- std::list< plugindescription_t > plugins
- std::map< std::string, pluginloader_t * > p

```
5.324.1 Constructor & Destructor Documentation
5.324.1.1
          pluginbrowser_t::pluginbrowser_t ( )
5.324.2 Member Function Documentation
          void pluginbrowser_t::get_paths ( )
5.324.2.1
5.324.2.2 plugindescription t pluginbrowser_t::scan_plugin (
                       const std::string & name )
5.324.2.3 void pluginbrowser_t::add_plugins ( )
5.324.2.4
          void pluginbrowser_t::clear_plugins ( )
5.324.2.5 void pluginbrowser_t::scan_plugins ( )
5.324.2.6 void pluginbrowser_t::add_plugin (
                       const std::string & name )
5.324.2.7 std::list<plugindescription_t> pluginbrowser_t::get_plugins( ) const [inline]
5.324.3 Member Data Documentation
5.324.3.1
          std::string pluginbrowser_t::plugin_extension [private]
5.324.3.2
          std::list<std::string> pluginbrowser_t::library_paths [private]
5.324.3.3 std::list<plugindescription_t> pluginbrowser_t::plugins [private]
5.324.3.4 std::map<std::string,pluginloader t*> pluginbrowser_t::p [private]
```

The documentation for this class was generated from the following files:

- · pluginbrowser.h
- pluginbrowser.cpp

5.325 plugindescription_t Class Reference

Public Attributes

- std::string name
- std::string fullname
- std::string documentation
- std::vector< std::string > categories
- bool wave2wave
- bool wave2spec
- bool spec2wave
- bool spec2spec
- std::vector< std::string > query_cmds
- std::map< std::string, std::string > queries

5.325.1 Member Data Documentation


- 5.325.1.1 std::string plugindescription_t::name
- 5.325.1.2 std::string plugindescription_t::fullname
- 5.325.1.3 std::string plugindescription_t::documentation
- 5.325.1.4 std::vector<std::string> plugindescription_t::categories
- 5.325.1.5 bool plugindescription_t::wave2wave
- 5.325.1.6 bool plugindescription_t::wave2spec
- 5.325.1.7 bool plugindescription t::spec2wave
- 5.325.1.8 bool plugindescription_t::spec2spec
- 5.325.1.9 std::vector<std::string> plugindescription_t::query_cmds
- 5.325.1.10 std::map<std::string,std::string> plugindescription_t::queries

The documentation for this class was generated from the following file:

· pluginbrowser.h

5.326 PluginLoader::config_file_splitter_t Class Reference

Inheritance diagram for PluginLoader::config_file_splitter_t:

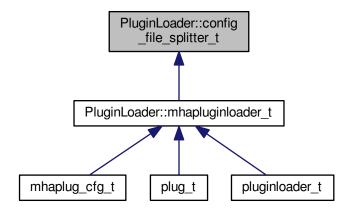

Public Member Functions

- config_file_splitter_t (const std::string &name)
- const std::string & get_configname () const
- const std::string & get_libname () const
- const std::string & get_origname () const
- const std::string & get_configfile () const

Private Attributes

- std::string libname
- std::string configname
- std::string origname
- std::string configfile

5.326.1 Constructor & Destructor Documentation

- 5.326.1.1 PluginLoader::config_file_splitter_t (const std::string & name)
- 5.326.2 Member Function Documentation

```
5.326.2.1
          const std::string& PluginLoader::config_file_splitter_t::get_configname ( ) const
           [inline]
          const std::string& PluginLoader::config_file_splitter_t::get_libname( ) const [inline]
5.326.2.2
          const std::string& PluginLoader::config file splitter t::get origname( ) const [inline]
5.326.2.3
5.326.2.4
          const std::string& PluginLoader::config_file_splitter_t::get_configfile( ) const [inline]
5.326.3 Member Data Documentation
5.326.3.1
          std::string PluginLoader::config_file_splitter_t::libname [private]
5.326.3.2
          std::string PluginLoader::config file splitter t::configname [private]
5.326.3.3
          std::string PluginLoader::config_file_splitter_t::origname [private]
5.326.3.4
          std::string PluginLoader::config_file_splitter_t::configfile [private]
```


The documentation for this class was generated from the following files:

- · mhapluginloader.h
- mhapluginloader.cpp

5.327 PluginLoader::fourway_processor_t Class Reference

This abstract class defines the interface for classes that implement all types of signal domain processing supported by the MHA: wave2wave, spec2spec, wave2spec, and spec2wave.

Inheritance diagram for PluginLoader::fourway_processor_t:

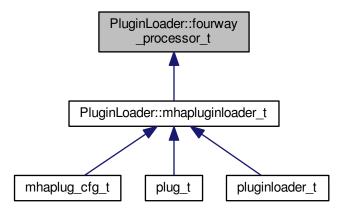

Public Member Functions

- virtual void process (mha_wave_t *s_in, mha_wave_t **s_out)=0
 Pure waveform processing.
- virtual void **process** (**mha_spec_t** *s_in, **mha_spec_t** **s_out)=0 *Pure spectrum processing.*
- virtual void **process** (**mha_wave_t** *s_in, **mha_spec_t** **s_out)=0

 Signal processing with domain transformation from waveform to spectrum.
- virtual void **process** (**mha_spec_t** *s_in, **mha_wave_t** **s_out)=0

 Signal processing with domain transformation from spectrum to waveform.
- virtual void prepare (mhaconfig_t &settings)=0
 Prepares the processor for signal processing.
- virtual void release ()=0

Resources allocated for signal processing in **fourway_processor_t::prepare** (p. 846) are released here in **fourway_processor_t::release** (p. 846).

- virtual std::string **parse** (const std::string &query)=0

 Parser interface.
- virtual ~fourway_processor_t ()

Classes with virtual methods need virtual destructor.

5.327.1 Detailed Description

This abstract class defines the interface for classes that implement all types of signal domain processing supported by the MHA: wave2wave, spec2spec, wave2spec, and spec2wave.

For supporting different output domains for the same input domain, the processing methods are overloaded with respect to input domain and output domain.

```
5.327.2 Constructor & Destructor Documentation
```

```
5.327.2.1 virtual PluginLoader::fourway_processor_t::\simfourway_processor_t ( ) [inline], [virtual]
```

Classes with virtual methods need virtual destructor.

This destructor is empty.

5.327.3 Member Function Documentation

Pure waveform processing.

Parameters

s_in	input waveform signal
s_out	output waveform signal

Implemented in **PluginLoader::mhapluginloader_t** (p. 849).

Pure spectrum processing.

Parameters

s_in	input spectrum signal
s_out	output spectrum signal

Implemented in PluginLoader::mhapluginloader_t (p. 849).

Signal processing with domain transformation from waveform to spectrum.

Parameters

s_in	input waveform signal
s_out	output spectrum signal

Implemented in **PluginLoader::mhapluginloader_t** (p. 849).

Signal processing with domain transformation from spectrum to waveform.

Parameters

s_in	input spectrum signal
s_out	output waveform signal

Implemented in PluginLoader::mhapluginloader_t (p. 849).

Prepares the processor for signal processing.

Parameters

settings	domain and dimensions of the signal. The contents of settings may be modified
	by the prepare implementation. Upon calling fourway_processor_t::prepare
	(p. 846), settings reflects domain and dimensions of the input signal. When
	fourway_processor_t::prepare (p. 846) returns, settings reflects domain and
	dimensions of the output signal.

Implemented in PluginLoader::mhapluginloader_t (p. 849).

```
5.327.3.6 virtual void PluginLoader::fourway processor t::release() [pure virtual]
```

Resources allocated for signal processing in **fourway_processor_t::prepare** (p. 846) are released here in **fourway_processor_t::release** (p. 846).

Implemented in PluginLoader::mhapluginloader_t (p. 849).

Parser interface.


Implemented in PluginLoader::mhapluginloader_t (p. 849).

The documentation for this class was generated from the following file:

mhapluginloader.h

5.328 PluginLoader::mhapluginloader_t Class Reference

Inheritance diagram for PluginLoader::mhapluginloader_t:

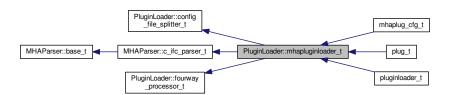

Public Member Functions

- std::string parse (const std::string &str)
- mhapluginloader_t (algo_comm_t iac, const std::string &libname, bool check_← version=true)

Loads and initializes mha plugin and establishes interface.

- ~mhapluginloader_t () throw ()
- bool has_process (mha_domain_t in, mha_domain_t out) const
- bool has parser () const
- mha_domain_t input_domain () const
- mha_domain_t output_domain () const
- void prepare (mhaconfig_t &)
- void release ()
- void process (mha_wave_t *, mha_wave_t **)
- void process (mha_spec_t *, mha_spec_t **)
- void process (mha_wave_t *, mha_spec_t **)
- void process (mha spec t *, mha wave t **)
- std::string getfullname () const
- std::string get_documentation () const
- std::vector< std::string > get_categories () const
- bool **is_prepared** () const

Protected Member Functions

- void test error ()
- void test_version ()
- void mha_test_struct_size (unsigned int s)
- void resolve_and_init ()

Protected Attributes

- int lib_err
- · algo_comm_t ac
- dynamiclib_t lib_handle
- void * lib_data
- MHAGetVersion t MHAGetVersion cb
- · MHAInit t MHAInit cb
- MHADestroy_t MHADestroy_cb
- MHAPrepare_t MHAPrepare_cb
- MHARelease t MHARelease cb
- MHAProc_wave2wave_t MHAProc_wave2wave_cb
- MHAProc_spec2spec_t MHAProc_spec2spec_cb
- MHAProc_wave2spec_t MHAProc_wave2spec_cb
- MHAProc_spec2wave_t MHAProc_spec2wave_cb
- MHASet_t MHASet_cb
- MHAStrError_t MHAStrError_cb

- mhaconfig_t cf_input
- · mhaconfig_t cf_output
- std::string plugin_documentation
- std::vector< std::string > plugin_categories
- bool b_check_version
- bool b is prepared

Additional Inherited Members

5.328.1 Constructor & Destructor Documentation

Loads and initializes mha plugin and establishes interface.

Parameters

iac	AC space (algorithm communication variables)
libname	Either file name of MHA plugin without platform-specific extension (i.e. "identity" for "identity.so" or "identity.dll") to be found on the MHA_LIBRARY_PATH (which is an environment variable). Or the same file name without extension followed by a colon ":" followed by the "configuration name" of the MHA plugin, which may be used to differentiate between multiple identical MHA plugins or to give the plugin a self-documenting name that fits its purpose. The library name - configuration name expression can be followed by a "<" followed by a configuration file name, which will be read after initialization of the plugin.

Example: "overlapadd:agc<compression.cfg" will load the plugin "overlapadd.so" or "overlapadd.dll", insert it as the configuration node "agc", and reads the configuration file "compression.cfg" into that node.

Parameters

check_version	Pluginloader will not check that the plugin was built using a known
	compatible MHA version if this flag is set to false. Disabling version check
	is discouraged.

5.328.1.2 PluginLoader::mhapluginloader_t::~mhapluginloader_t () throw)

5.328.2 Member Function Documentation

```
5.328.2.1 std::string PluginLoader::mhapluginloader_t::parse (
                     const std::string & str ) [inline], [virtual]
Implements PluginLoader::fourway processor t (p. 846).
5.328.2.2 bool PluginLoader::mhapluginloader t::has process (
                     mha_domain_t in,
                     mha domain t out ) const
5.328.2.3 bool PluginLoader::mhapluginloader_t::has_parser ( ) const
5.328.2.4 mha domain t PluginLoader::mhapluginloader_t::input_domain ( ) const
5.328.2.5 mha_domain_t PluginLoader::mhapluginloader_t::output_domain() const
5.328.2.6 void PluginLoader::mhapluginloader_t::prepare (
                     mhaconfig_t & tf ) [virtual]
Implements PluginLoader::fourway processor t (p. 846).
5.328.2.7 void PluginLoader::mhapluginloader t::release ( ) [virtual]
Implements PluginLoader::fourway processor t (p. 846).
5.328.2.8 void PluginLoader::mhapluginloader_t::process (
                     mha wave t * s_in,
                     mha_wave_t ** s_out ) [virtual]
Implements PluginLoader::fourway_processor_t (p. 844).
5.328.2.9 void PluginLoader::mhapluginloader_t::process (
                     mha spec t * s_in,
                     mha_spec_t ** s_out ) [virtual]
Implements PluginLoader::fourway_processor_t (p. 845).
5.328.2.10 void PluginLoader::mhapluginloader t::process (
                      mha wave t * s_in,
                      mha_spec_t ** s_out ) [virtual]
Implements PluginLoader::fourway processor t (p. 845).
5.328.2.11 void PluginLoader::mhapluginloader t::process (
                      mha_spec_t * s_in,
                      mha_wave_t ** s_out ) [virtual]
Implements PluginLoader::fourway_processor_t (p. 845).
```

```
5.328.2.12
          std::string PluginLoader::mhapluginloader_t::getfullname ( ) const [inline]
5.328.2.13 std::string PluginLoader::mhapluginloader_t::get_documentation() const [inline]
5.328.2.14
          std::vector<std::string> PluginLoader::mhapluginloader t::get categories ( ) const
           [inline]
5.328.2.15 bool PluginLoader::mhapluginloader_t::is_prepared() const [inline]
5.328.2.16 void PluginLoader::mhapluginloader_t::test_error() [protected]
5.328.2.17 void PluginLoader::mhapluginloader_t::test_version() [protected]
5.328.2.18 void PluginLoader::mhapluginloader_t::mha_test_struct_size (
                      unsigned int s ) [protected]
5.328.2.19 void PluginLoader::mhapluginloader_t::resolve_and_init() [protected]
5.328.3 Member Data Documentation
         int PluginLoader::mhapluginloader_t::lib_err [protected]
5.328.3.1
5.328.3.2
         algo_comm_t PluginLoader::mhapluginloader_t::ac [protected]
5.328.3.3
         dynamiclib_t PluginLoader::mhapluginloader_t::lib_handle [protected]
5.328.3.4 void* PluginLoader::mhapluginloader_t::lib_data [protected]
5.328.3.5
         MHAGetVersion_t PluginLoader::mhapluginloader_t::MHAGetVersion_cb
          [protected]
5.328.3.6 MHAInit t PluginLoader::mhapluginloader_t::MHAInit_cb [protected]
5.328.3.7
         MHADestroy_t PluginLoader::mhapluginloader_t::MHADestroy_cb [protected]
5.328.3.8
         MHAPrepare t PluginLoader::mhapluginloader_t::MHAPrepare_cb [protected]
5.328.3.9 MHARelease t PluginLoader::mhapluginloader_t::MHARelease_cb [protected]
5.328.3.10
          MHAProc wave2wave t PluginLoader::mhapluginloader_t::MHAProc_wave2wave_cb
           [protected]
5.328.3.11
          MHAProc spec2spec t PluginLoader::mhapluginloader_t::MHAProc_spec2spec_cb
           [protected]
```

```
5.328.3.12 MHAProc_wave2spec_t PluginLoader::mhapluginloader_t::MHAProc_wave2spec_cb [protected]

5.328.3.13 MHAProc_spec2wave_t PluginLoader::mhapluginloader_t::MHAProc_spec2wave_cb [protected]

5.328.3.14 MHASet_t PluginLoader::mhapluginloader_t::MHASet_cb [protected]

5.328.3.15 MHAStrError_t PluginLoader::mhapluginloader_t::MHAStrError_cb [protected]

5.328.3.16 mhaconfig_t PluginLoader::mhapluginloader_t::cf_input [protected]

5.328.3.17 mhaconfig_t PluginLoader::mhapluginloader_t::cf_output [protected]

5.328.3.18 std::string PluginLoader::mhapluginloader_t::plugin_documentation [protected]

5.328.3.19 std::vector<std::string> PluginLoader::mhapluginloader_t::plugin_categories [protected]

5.328.3.20 bool PluginLoader::mhapluginloader_t::b_check_version [protected]


5.328.3.21 bool PluginLoader::mhapluginloader_t::b_is_prepared [protected]
```

The documentation for this class was generated from the following files:

- mhapluginloader.h
- mhapluginloader.cpp

5.329 pluginloader_t Class Reference

Inheritance diagram for pluginloader t:

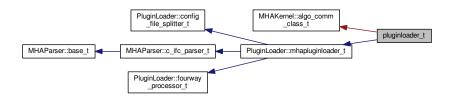

Public Member Functions

- pluginloader_t (const std::string &name)
- ~pluginloader_t () throw ()

Additional Inherited Members

5.329.1 Constructor & Destructor Documentation


5.329.1.2 pluginloader_t::~pluginloader_t () throw)

The documentation for this class was generated from the following files:

- · pluginbrowser.h
- · pluginbrowser.cpp

5.330 prediction_error Class Reference

Inheritance diagram for prediction_error:

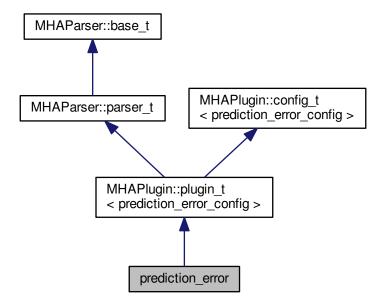

Public Member Functions

prediction_error (algo_comm_t &ac, const std::string &chain_name, const std::string &algo_name)

Constructs our plugin.

- ~prediction_error ()
- mha_wave_t * process (mha_wave_t *)

Checks for the most recent configuration and defers processing to it.

void prepare (mhaconfig_t &)

Plugin preparation.

void release (void)

Public Attributes

```
    MHAParser::float t rho
```

· MHAParser::float t c

MHAParser::int_t ntaps

MHAParser::vfloat_t gains

• MHAParser::string t name e

MHAParser::string_t name_f

MHAParser::string_t name_lpc

MHAParser::int_t lpc_order

MHAParser::vint_t pred_err_delay

MHAParser::vint_t delay_w

MHAParser::vint_t delay_d

MHAParser::int_t n_no_update

Private Member Functions

• void update cfg ()

Private Attributes

MHAEvents::patchbay_t< prediction_error > patchbay

Additional Inherited Members

```
5.330.1 Constructor & Destructor Documentation
```

Constructs our plugin.

```
5.330.1.2 prediction error::~prediction error()
5.330.2 Member Function Documentation
         mha_wave_t * prediction_error::process (
5.330.2.1
                      mha wave t * signal )
Checks for the most recent configuration and defers processing to it.
5.330.2.2 void prediction_error::prepare (
                      mhaconfig_t & signal_info ) [virtual]
Plugin preparation.
An opportunity to validate configuration parameters before instantiating a configuration.
Parameters
              Structure containing a description of the form of the signal (domain, number of
 signal info
              channels, frames per block, sampling rate.
Implements MHAPlugin::plugin t < prediction error config > (p. 696).
5.330.2.3 void prediction_error::release (
                      void ) [inline], [virtual]
Reimplemented from MHAPlugin::plugin_t< prediction_error_config > (p. 697).
         void prediction_error::update_cfg( ) [private]
5.330.2.4
5.330.3 Member Data Documentation
5.330.3.1 MHAParser::float_t prediction_error::rho
5.330.3.2 MHAParser::float_t prediction_error::c
5.330.3.3 MHAParser::int_t prediction_error::ntaps
5.330.3.4 MHAParser::vfloat_t prediction_error::gains
```

5.330.3.5 MHAParser::string_t prediction_error::name_e

5.330.3.6 MHAParser::string_t prediction_error::name_f

```
5.330.3.7 MHAParser::string_t prediction_error::name_lpc
5.330.3.8 MHAParser::int_t prediction_error::lpc_order
5.330.3.9 MHAParser::vint_t prediction_error::pred_err_delay
5.330.3.10 MHAParser::vint_t prediction_error::delay_w
5.330.3.11 MHAParser::vint_t prediction_error::delay_d
5.330.3.12 MHAParser::int_t prediction_error::n_no_update
5.330.3.13 MHAEvents::patchbay_tprediction_error::patchbay_[private]
```

The documentation for this class was generated from the following files:

- · prediction_error.h
- prediction_error.cpp

5.331 prediction_error_config Class Reference

Public Member Functions

- prediction_error_config (algo_comm_t &ac, const mhaconfig_t in_cfg, prediction
 —error *pred_err)
- ~prediction_error_config ()
- mha_wave_t * process (mha_wave_t *s_Y, mha_real_t rho, mha_real_t c)
- void insert ()

Private Attributes

- · algo_comm_t ac
- unsigned int ntaps
- · unsigned int frames
- unsigned int channels
- MHA AC::waveform ts E
- MHA_AC::waveform_t F
- MHASignal::waveform_t Pu

Power of input signal delayline.

- std::string name_d_
- std::string name_lpc_
- int n_no_update_
- int no_iter

```
    int iter
```

- · MHASignal::waveform t v G
- MHASignal::waveform_t s_U
- MHASignal::delay_t s_E_pred_err_delay
- MHASignal::delay_t s_W
- MHASignal::ringbuffer ts Wflt
- MHASignal::delay_t s_U_delay
- MHASignal::ringbuffer_t s_U_delayflt
- MHASignal::waveform_t F_Uflt
- MHASignal::delay_t s_Y_delay
- MHASignal::ringbuffer_t s_Y_delayflt
- MHASignal::ringbuffer_t UbufferPrew
- · mha wave ts LPC
- mha_wave_t UPrew
- · mha wave t YPrew
- mha_wave_t EPrew
- mha_wave_t UPrewW
- · mha wave t smpl
- mha_wave_t * s_Usmpl
- 5.331.1 Constructor & Destructor Documentation
- 5.331.1.2 prediction_error_config::~prediction_error_config()
- 5.331.2 Member Function Documentation
- 5.331.2.2 void prediction_error_config::insert ()
- 5.331.3 Member Data Documentation
- **5.331.3.1** algo_comm_t prediction_error_config::ac [private]
- **5.331.3.2 unsigned int prediction_error_config::ntaps** [private]

```
5.331.3.3
         unsigned int prediction_error_config::frames [private]
5.331.3.4 unsigned int prediction_error_config::channels [private]
5.331.3.5 MHA_AC::waveform_t prediction_error_config::s_E [private]
5.331.3.6 MHA_AC::waveform_t prediction_error_config::F [private]
5.331.3.7 MHASignal::waveform_t prediction_error_config::Pu [private]
Power of input signal delayline.
5.331.3.8 std::string prediction_error_config::name_d_ [private]
5.331.3.9 std::string prediction_error_config::name_lpc_ [private]
5.331.3.10 int prediction_error_config::n_no_update_ [private]
5.331.3.11 int prediction_error_config::no_iter [private]
5.331.3.12 int prediction_error_config::iter [private]
5.331.3.13 MHASignal::waveform_t prediction_error_config::v_G [private]
5.331.3.14 MHASignal::waveform_t prediction_error_config::s_U [private]
5.331.3.15 MHASignal::delay_t prediction_error_config::s_E_pred_err_delay [private]
5.331.3.16 MHASignal::delay_t prediction_error_config::s_W [private]
5.331.3.17 MHASignal::ringbuffer_t prediction_error_config::s_Wflt [private]
5.331.3.18 MHASignal::delay_t prediction_error_config::s_U_delay [private]
5.331.3.19 MHASignal::ringbuffer_t prediction_error_config::s_U_delayflt [private]
5.331.3.20 MHASignal::waveform_t prediction_error_config::F_Uflt [private]
5.331.3.21 MHASignal::delay_t prediction_error_config::s_Y_delay [private]
5.331.3.22 MHASignal::ringbuffer_t prediction_error_config::s_Y_delayflt [private]
5.331.3.23 MHASignal::ringbuffer_t prediction_error_config::UbufferPrew [private]
```


```
5.331.3.24 mha_wave_t prediction_error_config::s_LPC [private]
5.331.3.25 mha_wave_t prediction_error_config::UPrew [private]
5.331.3.26 mha_wave_t prediction_error_config::YPrew [private]
5.331.3.27 mha_wave_t prediction_error_config::EPrew [private]
5.331.3.28 mha_wave_t prediction_error_config::UPrewW [private]
5.331.3.29 mha_wave_t prediction_error_config::smpl [private]
5.331.3.30 mha_wave_t* prediction_error_config::s_Usmpl [private]
```

The documentation for this class was generated from the following files:

- · prediction_error.h
- prediction_error.cpp

5.332 rmslevel_if_t Class Reference

Inheritance diagram for rmslevel_if_t:

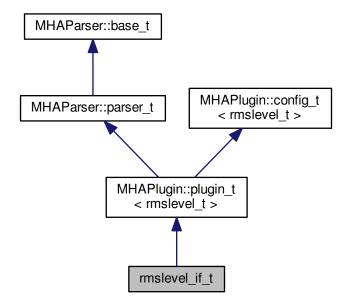

Public Member Functions

```
    rmslevel_if_t (const algo_comm_t &, const std::string &, const std::string &)

   mha_spec_t * process (mha_spec_t *)
   mha_wave_t * process (mha_wave_t *)
   void prepare (mhaconfig_t &)
Private Attributes

    std::string name

Additional Inherited Members
5.332.1 Constructor & Destructor Documentation
5.332.1.1 rmslevel_if_t::rmslevel_if_t (
                      const algo_comm_t & iac,
                      const std::string & ith,
                      const std::string & ial )
5.332.2 Member Function Documentation
5.332.2.1 mha_spec_t * rmslevel_if_t::process (
                      mha\_spec\_t * s)
5.332.2.2 mha_wave_t * rmslevel_if_t::process (
                      mha_wave_t * s )
5.332.2.3 void rmslevel_if_t::prepare (
                      mhaconfig_t & tf ) [virtual]
```

Implements MHAPlugin::plugin_t < rmslevel_t > (p. 696).

5.332.3 Member Data Documentation

5.332.3.1 std::string rmslevel_if_t::name [private]

The documentation for this class was generated from the following file:

rmslevel.cpp

5.333 rmslevel_t Class Reference

```
Public Member Functions
```

```
    rmslevel_t (unsigned int nch, algo_comm_t ac, std::string name, MHAParser::parser
        _t &p, unsigned int fftlen_)
```

- mha_spec_t * process (mha_spec_t *)
- mha_wave_t * process (mha_wave_t *)
- void insert ()

Private Attributes

- mon_t level_db
- · mon_t peak_db
- mon_t level
- mon_t peak
- · unsigned int fftlen

```
5.333.1 Constructor & Destructor Documentation
```

5.333.2 Member Function Documentation

```
5.333.2.1 mha_spec_t * rmslevel_t::process ( mha_spec_t * s )
```

5.333.2.3 void rmslevel_t::insert ()

5.333.3 Member Data Documentation

```
5.333.3.1 mon_t rmslevel_t::level_db [private]
```

5.333.3.2 mon_t rmslevel_t::peak_db [private]

5.333.3.3 mon_t rmslevel_t::level [private]

5.333.3.4 mon_t rmslevel_t::peak [private]


5.333.3.5 unsigned int rmslevel_t::fftlen [private]

The documentation for this class was generated from the following file:

rmslevel.cpp

5.334 route::interface_t Class Reference

Inheritance diagram for route::interface_t:

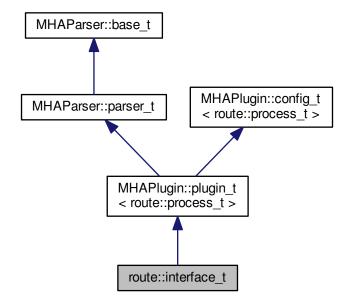

Public Member Functions

- interface_t (algo_comm_t iac, const std::string &, const std::string &)
- void prepare (mhaconfig_t &)
- void release ()
- mha_wave_t * process (mha_wave_t *)
- mha_spec_t * process (mha_spec_t *)

Private Member Functions

• void update ()

Private Attributes

- MHAEvents::patchbay_t< route::interface_t > patchbay
- MHAParser::vstring_t route_out
- MHAParser::vstring_t route_ac
- mhaconfig_t cfin
- mhaconfig_t cfout
- mhaconfig_t cfac
- bool prepared
- · bool stopped
- std::string algo

```
Additional Inherited Members
```

```
5.334.1 Constructor & Destructor Documentation
5.334.1.1 route::interface_t::interface_t (
                      algo comm t iac,
                      const std::string & ,
                      const std::string & ialg )
5.334.2 Member Function Documentation
5.334.2.1 void route::interface_t::prepare (
                      mhaconfig_t & cf ) [virtual]
Implements MHAPlugin::plugin t < route::process t > (p. 696).
5.334.2.2 void route::interface_t::release (
                      void ) [virtual]
Reimplemented from MHAPlugin::plugin t < route::process t > (p. 697).
5.334.2.3 mha wave t * route::interface_t::process (
                      mha wave t * s)
5.334.2.4
         mha spec t * route::interface t::process (
                      mha spec t * s)
5.334.2.5 void route::interface_t::update() [private]
5.334.3 Member Data Documentation
5.334.3.1 MHAEvents::patchbay_t<route::interface_t> route::interface_t::patchbay
          [private]
5.334.3.2 MHAParser::vstring t route::interface_t::route_out [private]
5.334.3.3 MHAParser::vstring_t route::interface_t::route_ac [private]
5.334.3.4 mhaconfig t route::interface_t::cfin [private]
5.334.3.5 mhaconfig_t route::interface_t::cfout [private]
5.334.3.6 mhaconfig_t route::interface_t::cfac [private]
5.334.3.7 bool route::interface t::prepared [private]
5.334.3.8 bool route::interface_t::stopped [private]
5.334.3.9 std::string route::interface_t::algo [private]
```

The documentation for this class was generated from the following file:

route.cpp

5.335 route::process_t Class Reference

Public Member Functions

- process_t (algo_comm_t iac, const std::string acname, const std::vector< std::string
 &r_out, const std::vector< std::string > &r_ac, const mhaconfig_t &cf_in, const mhaconfig_t &cf_out, const mhaconfig_t &cf_ac, bool sync)
- mha_wave_t * process (mha_wave_t *)
- mha_spec_t * process (mha_spec_t *)

Private Attributes

- MHAMultiSrc::waveform_t wout
- MHAMultiSrc::spectrum_t sout
- · MHAMultiSrc::waveform t wout ac
- MHAMultiSrc::spectrum_t sout_ac

5.335.1 Constructor & Destructor Documentation

5.335.2 Member Function Documentation

5.335.3 Member Data Documentation

```
5.335.3.1 MHAMultiSrc::waveform_t route::process_t::wout [private]
```

5.335.3.2 MHAMultiSrc::spectrum_t route::process_t::sout [private]

5.335.3.3 MHAMultiSrc::waveform t route::process_t::wout_ac [private]

5.335.3.4 MHAMultiSrc::spectrum_t route::process_t::sout_ac [private]

The documentation for this class was generated from the following file:

route.cpp

5.336 rt_nlms_t Class Reference

Public Member Functions

rt_nlms_t (algo_comm_t iac, const std::string &name, const mhaconfig_t &cfg, unsigned int ntaps_, const std::string &name_u, const std::string &name_d, const std::string &name_e, const std::string &name_f, const int n_no_update)

- ~rt_nlms_t ()
- mha_wave_t * process (mha_wave_t *sUD, mha_real_t rho, mha_real_t c, unsigned int norm_type, unsigned int estim_type, mha_real_t lambda_smooth)
- void **insert** ()

Private Attributes

- · algo_comm_t ac
- unsigned int ntaps
- · unsigned int frames
- · unsigned int channels
- MHA_AC::waveform_t F
- MHASignal::waveform_t U

Input signal cache.

MHASignal::waveform_t Uflt

Input signal cache (second filter)

MHASignal::waveform t Pu

Power of input signal delayline.

MHASignal::waveform_t fu

Filtered input signal.

MHASignal::waveform_t fuflt

Filtered input signal.

- MHASignal::waveform_t fu_previous
- MHASignal::waveform_t y_previous
- MHASignal::waveform_t P_Sum
- std::string name_u_
- std::string name d
- std::string name_e_
- int n_no_update_
- int no iter
- mha_wave_t s_E

```
5.336.1 Constructor & Destructor Documentation
5.336.1.1 rt_nlms_t::rt_nlms_t (
                      algo_comm_t iac,
                      const std::string & name,
                      const mhaconfig_t & cfg,
                      unsigned int ntaps_,
                      const std::string & name u,
                      const std::string & name_d,
                      const std::string & name_e,
                      const std::string & name_f,
                      const int n_no_update )
5.336.1.2 rt_nlms_t::~rt_nlms_t() [inline]
5.336.2 Member Function Documentation
5.336.2.1 mha_wave_t * rt_nlms_t::process (
                      mha wave t * sUD,
                      mha_real_t rho,
                      mha_real_t c,
                      unsigned int norm_type,
                      unsigned int estim_type,
                      mha real t lambda_smooth )
5.336.2.2 void rt nlms t::insert ( )
5.336.3 Member Data Documentation
5.336.3.1
         algo_comm_t rt_nlms_t::ac [private]
5.336.3.2 unsigned int rt_nlms_t::ntaps [private]
5.336.3.3 unsigned int rt_nlms_t::frames [private]
5.336.3.4 unsigned int rt nlms t::channels [private]
5.336.3.5 MHA AC::waveform trt_nlms_t::F [private]
5.336.3.6 MHASignal::waveform_t rt_nlms_t::U [private]
Input signal cache.
5.336.3.7 MHASignal::waveform_t rt_nlms_t::Uflt [private]
Input signal cache (second filter)
```

```
5.336.3.8 MHASignal::waveform_t rt_nlms_t::Pu [private]
Power of input signal delayline.
5.336.3.9 MHASignal::waveform_t rt_nlms_t::fu [private]
Filtered input signal.
5.336.3.10 MHASignal::waveform_t rt_nlms_t::fuflt [private]
Filtered input signal.
5.336.3.11 MHASignal::waveform_t rt_nlms_t::fu_previous [private]
5.336.3.12 MHASignal::waveform_t rt_nlms_t::y_previous [private]
5.336.3.13 MHASignal::waveform_t rt_nlms_t::P_Sum [private]
5.336.3.14 std::string rt_nlms_t::name_u_ [private]
5.336.3.15 std::string rt_nlms_t::name_d_ [private]
5.336.3.16 std::string rt_nlms_t::name_e_ [private]
```

5.336.3.18 int rt_nlms_t::no_iter [private]

5.336.3.17 int rt_nlms_t::n_no_update_ [private]


5.336.3.19 mha_wave_t rt_nlms_t::s_E [private]

The documentation for this class was generated from the following file:

nlms_wave.cpp

5.337 save_spec_t Class Reference

Inheritance diagram for save_spec_t:

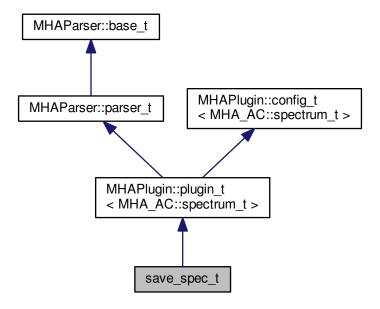

Public Member Functions

- save_spec_t (const algo_comm_t &iac, const std::string &ith, const std::string &ial)
- mha_spec_t * process (mha_spec_t *s)
- void prepare (mhaconfig_t &tf)

Private Attributes

std::string basename

Additional Inherited Members

5.337.1 Constructor & Destructor Documentation

5.337.2 Member Function Documentation

Implements $MHAPlugin::plugin_t < MHA_AC::spectrum_t > (p. 696).$


5.337.3 Member Data Documentation

The documentation for this class was generated from the following file:

save_spec.cpp

5.338 save_wave_t Class Reference

Inheritance diagram for save_wave_t:

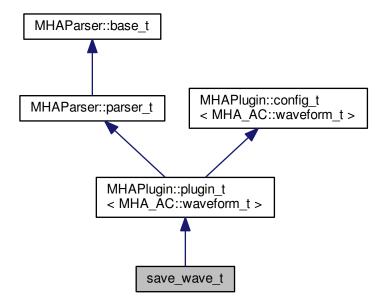

Public Member Functions

```
• save_wave_t (const algo_comm_t &iac, const std::string &ith, const std::string &ial)
```

- mha_wave_t * process (mha_wave_t *s)
- void prepare (mhaconfig_t &tf)

Private Attributes

• std::string basename

Additional Inherited Members

```
5.338.1 Constructor & Destructor Documentation
```

5.338.2 Member Function Documentation

Implements MHAPlugin::plugin_t< MHA_AC::waveform_t > (p. 696).

5.338.3 Member Data Documentation

```
5.338.3.1 std::string save_wave_t::basename [private]
```

The documentation for this class was generated from the following file:

save_wave.cpp

5.339 shadowfilter_begin::cfg_t Class Reference

Public Member Functions

```
• cfg_t (int nfft, int inch, int outch, algo_comm_t ac, std::string name)
```

```
mha_spec_t * process (mha_spec_t *)
```

Private Attributes

MHA_AC::spectrum_t in_spec_copy

```
    MHASignal::spectrum_t out_spec

   · MHA AC::int t nch

    MHA_AC::int_t ntracks


5.339.1 Constructor & Destructor Documentation
5.339.1.1 cfg_t::cfg_t (
                     int nfft,
                     int inch.
                      int outch,
                      algo_comm_t ac,
                      std::string name )
5.339.2 Member Function Documentation
5.339.2.1 mha_spec_t * cfg_t::process (
                      mha spec t * s)
5.339.3 Member Data Documentation
5.339.3.1 MHA AC::spectrum t shadowfilter_begin::cfg_t::in_spec_copy [private]
5.339.3.2 MHASignal::spectrum_t shadowfilter_begin::cfg_t::out_spec [private]
5.339.3.3 MHA_AC::int_t shadowfilter_begin::cfg_t::nch [private]
5.339.3.4 MHA AC::int t shadowfilter_begin::cfg_t::ntracks [private]
```

The documentation for this class was generated from the following file:

shadowfilter_begin.cpp

5.340 shadowfilter_begin::shadowfilter_begin_t Class Reference

Inheritance diagram for shadowfilter_begin::shadowfilter_begin_t:

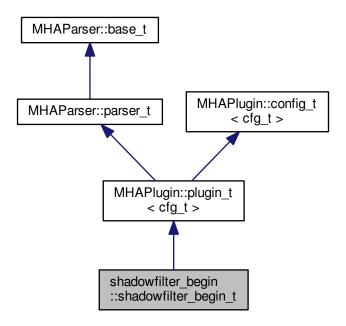

Public Member Functions

- shadowfilter_begin_t (const algo_comm_t &, const std::string &, const std::string &)
- mha_spec_t * process (mha_spec_t *)
- void prepare (mhaconfig_t &)

Private Attributes

- std::string basename
- MHAParser::int_t nch
- MHAParser::int_t ntracks

Additional Inherited Members

5.340.1 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

shadowfilter begin.cpp

5.341 shadowfilter_end::cfg_t Class Reference

Public Member Functions

```
cfg_t (int nfft_, algo_comm_t ac_, std::string name_)
```

mha_spec_t * process (mha_spec_t *)

Private Attributes

- algo comm t ac
- std::string name
- int **nfft**
- int ntracks
- int nch_out
- mha_spec_t in_spec
- MHASignal::spectrum_t out_spec
- MHA_AC::spectrum_t gains

```
5.341.1 Constructor & Destructor Documentation
```

5.341.2 Member Function Documentation

```
5.341.2.1 mha_spec_t * cfg_t::process (
mha spec t * s )
```

5.341.3 Member Data Documentation

```
5.341.3.1 algo_comm_t shadowfilter_end::cfg_t::ac [private]
```

5.341.3.2 std::string shadowfilter_end::cfg_t::name [private]

5.341.3.3 int shadowfilter_end::cfg_t::nfft [private]

5.341.3.4 int shadowfilter_end::cfg_t::ntracks [private]

5.341.3.5 int shadowfilter_end::cfg_t::nch_out [private]

5.341.3.6 mha_spec_t shadowfilter_end::cfg_t::in_spec [private]

5.341.3.7 MHASignal::spectrum t shadowfilter_end::cfg_t::out_spec [private]


5.341.3.8 MHA_AC::spectrum_t shadowfilter_end::cfg_t::gains [private]

The documentation for this class was generated from the following file:

shadowfilter_end.cpp

5.342 shadowfilter_end::shadowfilter_end_t Class Reference

Inheritance diagram for shadowfilter_end::shadowfilter_end_t:

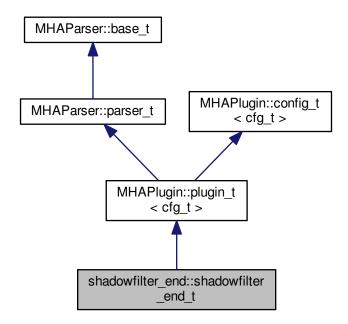

Public Member Functions

- shadowfilter_end_t (const algo_comm_t &, const std::string &, const std::string &)
- mha_spec_t * process (mha_spec_t *)
- void prepare (mhaconfig_t &)

Private Attributes

MHAParser::string_t basename

Additional Inherited Members

5.342.1 Constructor & Destructor Documentation

```
5.342.2 Member Function Documentation
```

Implements MHAPlugin::plugin_t < cfg_t > (p. 696).

5.342.3 Member Data Documentation

5.342.3.1 MHAParser::string_t shadowfilter_end::shadowfilter_end_t::basename [private]

The documentation for this class was generated from the following file:

shadowfilter_end.cpp

5.343 sine_cfg_t Struct Reference

Public Member Functions

• sine_cfg_t (double sampling_rate, mha_real_t frequency, mha_real_t newlev, int _mix, const std::vector< int > &_channels)

Public Attributes

- double phase_increment_div_2pi
- double amplitude
- int mix
- const std::vector< int > channels

5.343.1 Constructor & Destructor Documentation

5.343.2 Member Data Documentation


- 5.343.2.1 double sine_cfg_t::phase_increment_div_2pi
- 5.343.2.2 double sine_cfg_t::amplitude
- 5.343.2.3 int sine_cfg_t::mix
- 5.343.2.4 const std::vector<int> sine_cfg_t::channels

The documentation for this struct was generated from the following file:

sine.cpp

5.344 sine_t Class Reference

Inheritance diagram for sine_t:

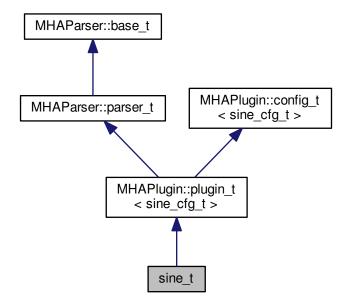

Public Member Functions

```
    sine_t (const algo_comm_t &, const std::string &chain_name, const std::string &algo← name)
```

- ~sine_t ()
- mha_wave_t * process (mha_wave_t *)
- void prepare (mhaconfig_t &)

Private Member Functions

void update_cfg ()

Private Attributes

- MHAParser::float_t lev
- MHAParser::float_t frequency
- MHAParser::kw_t mode
- MHAParser::vint_t channels
- double phase_div_2pi
- MHAEvents::patchbay_t< sine_t > patchbay

Additional Inherited Members

```
5.344.1 Constructor & Destructor Documentation
```

Implements MHAPlugin::plugin_t< sine_cfg_t > (p. 696).


```
5.344.2.3 void sine_t::update_cfg( ) [private]
5.344.3 Member Data Documentation
5.344.3.1 MHAParser::float_t sine_t::lev [private]
5.344.3.2 MHAParser::float_t sine_t::frequency [private]
5.344.3.3 MHAParser::kw_t sine_t::mode [private]
5.344.3.4 MHAParser::vint_t sine_t::channels [private]
5.344.3.5 double sine_t::phase_div_2pi [private]
5.344.3.6 MHAEvents::patchbay_t < sine_t > sine_t::patchbay [private]
```

The documentation for this class was generated from the following file:

· sine.cpp

5.345 smoothgains_bridge::overlapadd_if_t Class Reference

Inheritance diagram for smoothgains_bridge::overlapadd_if_t:

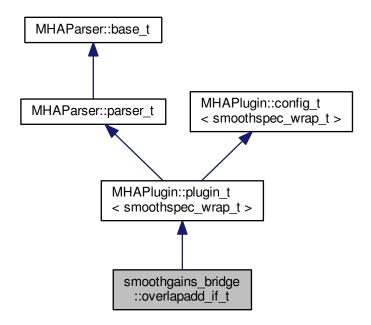

Public Member Functions

- overlapadd_if_t (const algo_comm_t &, const std::string &, const std::string &)
- ∼overlapadd if t ()
- void prepare (mhaconfig_t &)
- void release ()
- mha_spec_t * process (mha_spec_t *)

Private Member Functions

• void update ()

Private Attributes

- MHAEvents::patchbay_t< overlapadd_if_t > patchbay
- MHAParser::kw t mode
- MHAParser::window_t irswnd
- MHAParser::float_t epsilon
- MHAParser::mhapluginloader_t plugloader
- std::string algo
- mhaconfig_t cf_in
- mhaconfig_t cf_out

Additional Inherited Members

```
5.345.1 Constructor & Destructor Documentation
```

- 5.345.1.2 smoothgains_bridge::overlapadd_if_t::~overlapadd_if_t ()
- 5.345.2 Member Function Documentation
- 5.345.2.1 void smoothgains_bridge::overlapadd_if_t::prepare (mhaconfig_t & t) [virtual]

Implements MHAPlugin::plugin_t < smoothspec_wrap_t > (p. 696).

5.345.2.2 void smoothgains_bridge::overlapadd_if_t::release (void) [virtual]

Reimplemented from MHAPlugin::plugin_t < smoothspec_wrap_t > (p. 697).

```
5.345.2.3 mha spec t * smoothgains bridge::overlapadd if t::process (
                     mha_spec_t * spec )
5.345.2.4
         void smoothgains bridge::overlapadd if t::update( ) [private]
5.345.3 Member Data Documentation
5.345.3.1
         MHAEvents::patchbay t<overlapadd if t> smoothgains bridge::overlapadd if t←
         ::patchbay [private]
5.345.3.2 MHAParser::kw t smoothgains bridge::overlapadd if t::mode [private]
5.345.3.3 MHAParser::window t smoothgains_bridge::overlapadd_if_t::irswnd [private]
5.345.3.4 MHAParser::float t smoothgains_bridge::overlapadd_if_t::epsilon [private]
5.345.3.5 MHAParser::mhapluginloader t smoothgains_bridge::overlapadd_if_t::plugloader
         [private]
5.345.3.6 std::string smoothgains_bridge::overlapadd_if_t::algo [private]
5.345.3.7 mhaconfig t smoothgains_bridge::overlapadd_if_t::cf_in [private]
5.345.3.8 mhaconfig t smoothgains_bridge::overlapadd_if_t::cf_out [private]
```

The documentation for this class was generated from the following file:

- smoothgains_bridge.cpp
- 5.346 smoothgains_bridge::smoothspec_wrap_t Class Reference

Public Member Functions

- smoothspec_wrap_t (mhaconfig_t spar_in, mhaconfig_t spar_out, const MHA←
 Parser::kw_t &mode, const MHAParser::window_t &irswnd, const MHAParser::float←
 t &epsilon)
- mha_spec_t * proc_1 (mha_spec_t *)
- mha_spec_t * proc_2 (mha_spec_t *)

Private Attributes

- MHASignal::spectrum_t spec_in_copy
 Copy of input spectrum for smoothspec.
- MHAFilter::smoothspec_t smoothspec Smoothspec calculator.
- bool use smoothspec
- · float smoothspec epsilon

5.346 smoothgains_bridge::smoothspec_wrap_t Class Reference81


```
5.346.1 Constructor & Destructor Documentation
5.346.1.1 smoothgains_bridge::smoothspec_wrap_t::smoothspec_wrap_t (
                     mhaconfig t spar in,
                     mhaconfig_t spar_out,
                     const MHAParser::kw t & mode,
                     const MHAParser::window_t & irswnd,
                     const MHAParser::float t & epsilon )
5.346.2 Member Function Documentation
5.346.2.1 mha_spec_t * smoothgains_bridge::smoothspec_wrap_t::proc_1 (
                     mha spec t * s)
5.346.2.2 mha spec t * smoothgains_bridge::smoothspec_wrap_t::proc_2 (
                     mha spec t * s)
5.346.3 Member Data Documentation
5.346.3.1 MHASignal::spectrum_t smoothgains_bridge::smoothspec_wrap_t::spec_in_copy
         [private]
Copy of input spectrum for smoothspec.
5.346.3.2 MHAFilter::smoothspec_t smoothgains_bridge::smoothspec_wrap_t::smoothspec
         [private]
Smoothspec calculator.
5.346.3.3 bool smoothgains_bridge::smoothspec_wrap_t::use_smoothspec [private]
5.346.3.4 float smoothgains_bridge::smoothspec_wrap_t::smoothspec_epsilon [private]
The documentation for this class was generated from the following file:
```

© 2005-2018 HörTech gGmbH, Oldenburg

smoothgains_bridge.cpp

5.347 softclip_t Class Reference

Inheritance diagram for softclip_t:

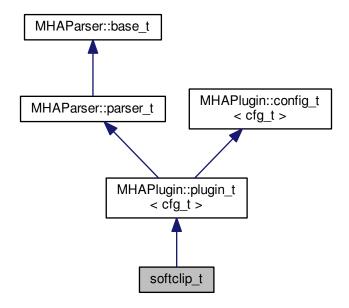

Public Member Functions

- softclip_t (const algo_comm_t &, const std::string &, const std::string &)
- mha_wave_t * process (mha_wave_t *)
- void prepare (mhaconfig_t &)
- void update ()

Private Attributes

- mhaconfig_t tftype
- MHAParser::float_t attack
- MHAParser::float_t decay
- MHAParser::float_t start_limit
- MHAParser::float_t slope_db
- MHAEvents::patchbay_t< softclip_t > patchbay

Additional Inherited Members

```
5.347.1 Constructor & Destructor Documentation
5.347.1.1 softclip_t::softclip_t (
                      const algo comm t & iac,
                      const std::string & chain,
                      const std::string & name )
5.347.2 Member Function Documentation
5.347.2.1 mha_wave_t * softclip_t::process (
                      mha_wave_t * s )
5.347.2.2 void softclip_t::prepare (
                      mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin_t < cfg_t > (p. 696).
5.347.2.3 void softclip_t::update ( )
5.347.3 Member Data Documentation
5.347.3.1
         mhaconfig t softclip_t::tftype [private]
5.347.3.2 MHAParser::float_t softclip_t::attack [private]
5.347.3.3 MHAParser::float_t softclip_t::decay [private]
5.347.3.4 MHAParser::float_t softclip_t::start_limit [private]
5.347.3.5 MHAParser::float_t softclip_t::slope_db [private]
5.347.3.6 MHAEvents::patchbay_t<softclip_t> softclip_t::patchbay [private]
```

The documentation for this class was generated from the following file:

softclip.cpp

5.348 softclipper_t Class Reference

Public Member Functions

- softclipper_t (const softclipper_variables_t &v, const mhaconfig_t &)
- mha_real_t process (mha_wave_t *)

Private Attributes

```
    MHAFilter::o1flt_lowpass_t attack
```

- MHAFilter::o1flt_maxtrack_t decay
- MHAFilter::o1flt lowpass t clipmeter
- mha_real_t threshold
- · mha real t hardlimit
- · mha real t slope
- bool linear

```
5.348.1 Constructor & Destructor Documentation
```

5.348.2 Member Function Documentation

5.348.3 Member Data Documentation

```
5.348.3.1 MHAFilter::o1flt_lowpass_t softclipper_t::attack [private]
```

```
5.348.3.2 MHAFilter::o1flt_maxtrack_t softclipper_t::decay [private]
```

```
5.348.3.3 MHAFilter::o1flt_lowpass_t softclipper_t::clipmeter [private]
```

```
5.348.3.4 mha real t softclipper t::threshold [private]
```

```
5.348.3.5 mha_real_t softclipper_t::hardlimit [private]
```

5.348.3.6 mha_real_t softclipper_t::slope [private]


5.348.3.7 bool softclipper_t::linear [private]

The documentation for this class was generated from the following file:

· transducers.cpp

5.349 softclipper_variables_t Class Reference

Inheritance diagram for softclipper_variables_t:

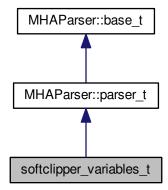

Public Member Functions

softclipper_variables_t ()

Public Attributes

- MHAParser::float_t tau_attack
- MHAParser::float_t tau_decay
- MHAParser::float_t tau_clip
- MHAParser::float t threshold
- MHAParser::float_t hardlimit
- MHAParser::float_t slope
- MHAParser::bool_t linear
- MHAParser::float_mon_t clipped
- MHAParser::float_t max_clipped

Additional Inherited Members

5.349.1 Constructor & Destructor Documentation

5.349.1.1 softclipper_variables_t::softclipper_variables_t()

5.349.2 Member Data Documentation


5.349.2.1	MHAParser::float_t softclipper_variables_t::tau_attack
5.349.2.2	MHAParser::float_t softclipper_variables_t::tau_decay
5.349.2.3	MHAParser::float_t softclipper_variables_t::tau_clip
5.349.2.4	MHAParser::float_t softclipper_variables_t::threshold
5.349.2.5	MHAParser::float_t softclipper_variables_t::hardlimit
5.349.2.6	MHAParser::float_t softclipper_variables_t::slope
5.349.2.7	MHAParser::bool_t softclipper_variables_t::linear
5.349.2.8	MHAParser::float_mon_t softclipper_variables_t::clipped
5.349.2.9	MHAParser::float_t softclipper_variables_t::max_clipped

The documentation for this class was generated from the following file:

· transducers.cpp

5.350 spec2wave_if_t Class Reference

Inheritance diagram for spec2wave_if_t:

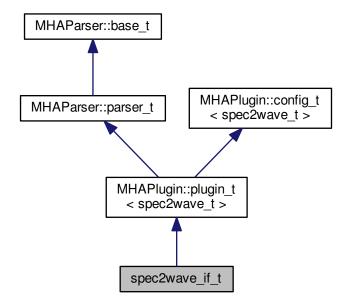

Public Member Functions

- spec2wave_if_t (const algo_comm_t &, const std::string &, const std::string &)
- void prepare (mhaconfig_t &)
- mha_wave_t * process (mha_spec_t *)

Private Member Functions

• void update ()

Private Attributes

- MHAEvents::patchbay_t< spec2wave_if_t > patchbay
- MHAParser::float t ramplen
- · windowselector_t window_config

Additional Inherited Members

```
5.350.1 Constructor & Destructor Documentation
5.350.1.1 spec2wave_if_t::spec2wave_if_t (
                     const algo_comm_t & iac,
                     const std::string & ,
                     const std::string & )
5.350.2 Member Function Documentation
5.350.2.1 void spec2wave_if_t::prepare (
                     mhaconfig t&t) [virtual]
Implements MHAPlugin::plugin_t< spec2wave_t > (p. 696).
5.350.2.2 mha wave t * spec2wave_if_t::process (
                     mha_spec_t * spec_in )
5.350.2.3 void spec2wave_if_t::update() [private]
5.350.3 Member Data Documentation
5.350.3.1 MHAEvents::patchbay_t<spec2wave_if_t> spec2wave_if_t::patchbay [private]
5.350.3.2 MHAParser::float_t spec2wave_if_t::ramplen [private]
5.350.3.3 windowselector_t spec2wave_if_t::window_config [private]
```

The documentation for this class was generated from the following file:

• spec2wave.cpp

5.351 spec2wave_t Class Reference

Public Member Functions

• spec2wave_t (unsigned int nfft_, unsigned int nwnd_, unsigned int nwndshift_, unsigned int nch, mha_real_t ramplen, const MHAWindow::base_t &postwin)

```
• ∼spec2wave t()
```

mha wave t * process (mha spec t *)

Private Attributes

· mha fft t ft

FFT class.

unsigned int npad1

length of zero padding before window

unsigned int npad2

length of zero padding after window

- hanning_ramps_t ramps
- MHASignal::waveform t calc out
- MHASignal::waveform t out buf
- MHASignal::waveform_t write_buf
- mha_real_t sc
- · unsigned int nfft
- unsigned int nwndshift
- MHAWindow::base_t postwindow

```
5.351.1 Constructor & Destructor Documentation
```

```
5.351.1.1 spec2wave t::spec2wave t(
                      unsigned int nfft,
                      unsigned int nwnd_,
                      unsigned int nwndshift_,
                      unsigned int nch,
                      mha real t ramplen,
                      const MHAWindow::base_t & postwin )
5.351.1.2 spec2wave_t::~spec2wave_t ( )
5.351.2 Member Function Documentation
```

```
5.351.2.1 mha wave t * spec2wave t::process (
                     mha_spec_t * spec_in )
```

5.351.3 Member Data Documentation

5.351.3.1 mha_fft_t spec2wave_t::ft [private]

FFT class.

```
5.351.3.2 unsigned int spec2wave_t::npad1 [private]
length of zero padding before window
5.351.3.3 unsigned int spec2wave_t::npad2 [private]
length of zero padding after window
5.351.3.4 hanning_ramps_t spec2wave_t::ramps [private]
5.351.3.5 MHASignal::waveform_t spec2wave_t::calc_out [private]
5.351.3.6 MHASignal::waveform_t spec2wave_t::out_buf [private]
5.351.3.7 MHASignal::waveform_t spec2wave_t::write_buf [private]
5.351.3.8 mha_real_t spec2wave_t::sc [private]
5.351.3.9 unsigned int spec2wave_t::nfft [private]
5.351.3.10 unsigned int spec2wave_t::nwndshift [private]
```

The documentation for this class was generated from the following file:

5.351.3.11 MHAWindow::base_t spec2wave_t::postwindow [private]

spec2wave.cpp

5.352 spec_fader_t Class Reference

Public Member Functions

- spec_fader_t (unsigned int ch, mha_real_t fr, MHAParser::vfloat_t &ng, MHAParser ← ::float_t &t)
- \sim spec_fader_t ()

Public Attributes

- unsigned int nch
- mha_real_t * gains
- unsigned int fr

5.352.1 Constructor & Destructor Documentation

unsigned int spec_fader_t::fr


The documentation for this class was generated from the following file:

fader_spec.cpp

5.352.2.3

5.353 speechnoise_t Class Reference

Inheritance diagram for speechnoise_t:

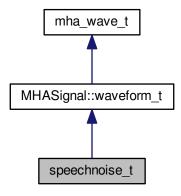

Public Types

Public Member Functions

- speechnoise_t (float duration, float srate, unsigned int channels, speechnoise_t
 ::noise_type_t noise_type=speechnoise_t::mha)
- speechnoise_t (unsigned int length_samples, float srate, unsigned int channels, speechnoise_t::noise_type_t noise_type=speechnoise_t::mha)

Private Member Functions

• void **creator** (**speechnoise_t::noise_type_t** noise_type, float srate)

Additional Inherited Members

```
5.353.1 Member Enumeration Documentation
```

```
5.353.1.1 enum speechnoise_t::noise_type_t
```

Enumerator

```
mha
```

olnoise

LTASS_combined

LTASS_female

LTASS male

white

pink

brown

TEN_SPL

TEN_SPL_250_8k

TEN_SPL_50_16k

sin125

sin250

sin500

sin1k

sin2k

sin4k

sin8k


5.353.2 Constructor & Destructor Documentation

The documentation for this class was generated from the following files:

- · speechnoise.h
- · speechnoise.cpp

5.354 steerbf Class Reference

Inheritance diagram for steerbf:

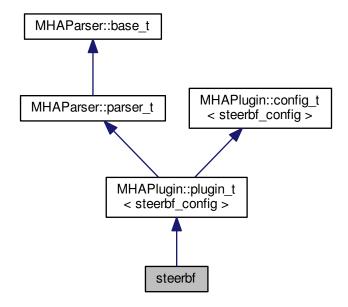

Public Member Functions

steerbf (algo_comm_t &ac, const std::string &chain_name, const std::string &algo_←
name)

Constructs our plugin.

- ∼steerbf ()
- mha_spec_t * process (mha_spec_t *)

Defers to configuration class.

void prepare (mhaconfig_t &)

Plugin preparation.

• void release (void)

Public Attributes

- MHAParser::string_t bf_src
- · parser int dyn angle ind
- MHAParser::string_t angle_src

Private Member Functions

void update_cfg ()

Private Attributes

MHAEvents::patchbay_t< steerbf > patchbay

Additional Inherited Members

```
5.354.1 Constructor & Destructor Documentation
```

```
5.354.1.1 steerbf::steerbf (

algo_comm_t & ac,

const std::string & chain_name,

const std::string & algo_name )
```

Constructs our plugin.

```
5.354.1.2 steerbf::∼steerbf ( )
```

5.354.2 Member Function Documentation

```
5.354.2.1 mha_spec_t * steerbf::process (
mha_spec_t * signal )
```

Defers to configuration class.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number of	1
	channels, frames per block, sampling rate.	

```
Implements MHAPlugin::plugin_t< steerbf_config > (p. 696).
```

Reimplemented from MHAPlugin::plugin_t< steerbf_config > (p. 697).

```
5.354.2.4 void steerbf::update_cfg( ) [private]
```

5.354.3 Member Data Documentation

```
5.354.3.1 MHAParser::string_t steerbf::bf_src
```

5.354.3.2 parser int dyn steerbf::angle_ind

5.354.3.3 MHAParser::string_t steerbf::angle_src

5.354.3.4 MHAEvents::patchbay_t<steerbf> steerbf::patchbay [private]

The documentation for this class was generated from the following files:

- · steerbf.h
- steerbf.cpp

5.355 steerbf_config Class Reference

Public Member Functions

- steerbf_config (algo_comm_t &ac, const mhaconfig_t in_cfg, steerbf) *steerbf)
- ~steerbf_config ()
- mha_spec_t * process (mha_spec_t *)

Private Attributes

- unsigned int nchan
- unsigned int nfreq
- MHASignal::spectrum t outSpec
- mha_spec_t bf_vec
- unsigned int nangle
- steerbf * steerbf
- · algo_comm_t & ac
- std::string bf_src_copy


```
5.355.1 Constructor & Destructor Documentation
5.355.1.1 steerbf_config::steerbf_config (
                      algo_comm_t & ac,
                      const mhaconfig_t in_cfg,
                      steerbf * steerbf )
5.355.1.2 steerbf_config::~steerbf_config()
5.355.2 Member Function Documentation
5.355.2.1 mha_spec_t * steerbf_config::process (
                      mha_spec_t * inSpec )
5.355.3 Member Data Documentation
5.355.3.1 unsigned int steerbf_config::nchan [private]
5.355.3.2 unsigned int steerbf_config::nfreq [private]
5.355.3.3 MHASignal::spectrum_t steerbf_config::outSpec [private]
5.355.3.4 mha_spec_t steerbf_config::bf_vec [private]
5.355.3.5 unsigned int steerbf_config::nangle [private]
5.355.3.6 steerbf* steerbf_config::_steerbf [private]
5.355.3.7
         algo_comm_t& steerbf_config::ac [private]
5.355.3.8 std::string steerbf_config::bf_src_copy [private]
```

The documentation for this class was generated from the following files:

- · steerbf.h
- steerbf.cpp

5.356 testplugin::ac_parser_t Class Reference

Inheritance diagram for testplugin::ac_parser_t:

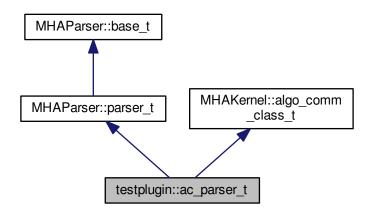

Public Types

Public Member Functions

- ac_parser_t ()
- void do_insert_var ()
 Insert variable into AC space.
- void do_get_var ()

Public Attributes

- MHAParser::string_t insert_var
- MHAParser::string_t get_var
- MHAParser::kw_t data_type
- MHAParser::int_t num_entries
- MHAParser::int_t stride
- MHAParser::string_t char_data
- MHAParser::vint_t int_data
- MHAParser::vfloat_t float_data
- MHAParser::vcomplex_t complex_data
- MHAEvents::patchbay_t< ac_parser_t > patchbay

```
Additional Inherited Members
```

```
5.356.1 Member Enumeration Documentation
```

5.356.1.1 enum testplugin::ac_parser_t::data_type_t

Enumerator

```
_MHA_AC_CHAR
_MHA_AC_INT
_MHA_AC_MHAREAL
_MHA_AC_FLOAT
_MHA_AC_DOUBLE
_MHA_AC_MHACOMPLEX
unknown
```

5.356.2 Constructor & Destructor Documentation

```
5.356.2.1 testplugin::ac_parser_t::ac_parser_t() [inline]
```

5.356.3 Member Function Documentation

5.356.3.1 void testplugin::ac_parser_t::do_insert_var() [inline]

Insert variable into AC space.

This leaks memory by design, as the plugin is for testing only

```
5.356.3.2 void testplugin::ac_parser_t::do_get_var( ) [inline]
```

5.356.4 Member Data Documentation

```
5.356.4.1 MHAParser::string_t testplugin::ac_parser_t::insert_var
```

5.356.4.2 MHAParser::string_t testplugin::ac_parser_t::get_var

5.356.4.3 MHAParser::kw_t testplugin::ac_parser_t::data_type

5.356.4.4 MHAParser::int_t testplugin::ac_parser_t::num_entries

5.356.4.5 MHAParser::int t testplugin::ac_parser_t::stride

5.356.4.6 MHAParser::string_t testplugin::ac_parser_t::char_data

5.356.4.7 MHAParser::vint_t testplugin::ac_parser_t::int_data

5.356.4.8 MHAParser::vfloat_t testplugin::ac_parser_t::float_data

5.356.4.9 MHAParser::vcomplex_t testplugin::ac_parser_t::complex_data


5.356.4.10 MHAEvents::patchbay t<ac parser t> testplugin::ac_parser_t::patchbay

The documentation for this class was generated from the following file:

testplugin.cpp

5.357 testplugin::config_parser_t Class Reference

Inheritance diagram for testplugin::config_parser_t:

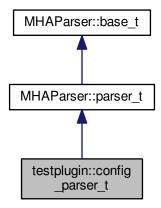

Public Member Functions

- void setlock (const bool &b)
- config_parser_t ()
- mhaconfig_t get () const
- void set (mhaconfig_t c)

Public Attributes

- MHAParser::int_t channels
- MHAParser::kw t domain
- MHAParser::int_t fragsize
- MHAParser::int_t wndlen
- MHAParser::int t fftlen
- MHAParser::float_t srate

Additional Inherited Members

5.357.1 Constructor & Destructor Documentation

5.357.1.1 testplugin::config_parser_t::config_parser_t() [inline]

```
5.357.2 Member Function Documentation
```

```
5.357.2.2 mhaconfig_t testplugin::config_parser_t::get( ) const [inline]
```

```
5.357.2.3 void testplugin::config_parser_t::set (

mhaconfig_t c) [inline]
```

5.357.3 Member Data Documentation

```
5.357.3.1 MHAParser::int_t testplugin::config_parser_t::channels
```

5.357.3.2 MHAParser::kw t testplugin::config_parser_t::domain

5.357.3.3 MHAParser::int_t testplugin::config_parser_t::fragsize

5.357.3.4 MHAParser::int_t testplugin::config_parser_t::wndlen

5.357.3.5 MHAParser::int t testplugin::config_parser_t::fftlen


5.357.3.6 MHAParser::float_t testplugin::config_parser_t::srate

The documentation for this class was generated from the following file:

testplugin.cpp

5.358 testplugin::if_t Class Reference

Inheritance diagram for testplugin::if_t:

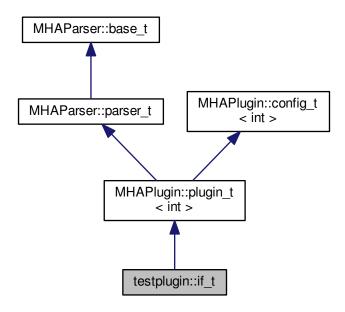

Public Member Functions

- if_t (const algo_comm_t &iac, const std::string &ith, const std::string &ial)
- mha_spec_t * process (mha_spec_t *s_in)
- mha wave t * process (mha wave t *s in)
- void prepare (mhaconfig_t &)

Private Member Functions

- void test_prepare ()
- void test_process ()

Private Attributes

- config_parser_t config_in
- · config_parser_t config_out
- ac_parser_t ac
- signal_parser_t signal
- MHAParser::bool_t _prepare
- MHAEvents::patchbay_t< if_t > patchbay
- MHAParser::mhapluginloader_t plug

Additional Inherited Members


```
5.358.1 Constructor & Destructor Documentation
5.358.1.1 testplugin::if_t::if_t (
                      const algo_comm_t & iac,
                      const std::string & ith,
                      const std::string & ial )
5.358.2 Member Function Documentation
5.358.2.1
         mha_spec_t* testplugin::if_t::process (
                      mha_spec_t * s_in ) [inline]
5.358.2.2 mha_wave_t* testplugin::if_t::process (
                      mha_wave_t * s_in ) [inline]
5.358.2.3 void testplugin::if_t::prepare (
                      mhaconfig_t & ) [inline], [virtual]
Implements MHAPlugin::plugin_t< int > (p. 696).
5.358.2.4 void testplugin::if_t::test_prepare( ) [private]
5.358.2.5 void testplugin::if_t::test_process() [private]
5.358.3 Member Data Documentation
5.358.3.1 config_parser_t testplugin::if_t::config_in [private]
5.358.3.2 config parser t testplugin::if_t::config_out [private]
5.358.3.3 ac_parser_t testplugin::if_t::ac [private]
5.358.3.4 signal_parser_t testplugin::if_t::signal [private]
5.358.3.5 MHAParser::bool t testplugin::if_t::_prepare [private]
5.358.3.6 MHAEvents::patchbay_t<if_t> testplugin::if_t::patchbay [private]
5.358.3.7 MHAParser::mhapluginloader_t testplugin::if_t::plug [private]
```

The documentation for this class was generated from the following file:

testplugin.cpp

5.359 testplugin::signal_parser_t Class Reference

Inheritance diagram for testplugin::signal_parser_t:

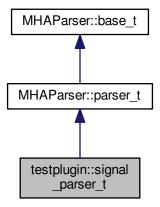

Public Member Functions

signal_parser_t ()

Public Attributes

- MHAParser::mfloat_t input_wave
- MHAParser::mcomplex t input spec
- MHAParser::mfloat mon t output wave
- MHAParser::mcomplex_mon_t output_spec

Additional Inherited Members

- 5.359.1 Constructor & Destructor Documentation
- 5.359.1.1 testplugin::signal_parser_t::signal_parser_t() [inline]
- 5.359.2 Member Data Documentation
- 5.359.2.1 MHAParser::mfloat_t testplugin::signal_parser_t::input_wave
- 5.359.2.2 MHAParser::mcomplex_t testplugin::signal_parser_t::input_spec
- 5.359.2.3 MHAParser::mfloat_mon_t testplugin::signal_parser_t::output_wave
- 5.359.2.4 MHAParser::mcomplex mon t testplugin::signal_parser_t::output_spec

The documentation for this class was generated from the following file:

· testplugin.cpp

5.360 timo_AC Class Reference

Public Member Functions

- timo_AC (algo_comm_t &ac, unsigned int fftlen, unsigned int nfreq, unsigned int nchan)
- void copy ()
- void insert ()

Public Attributes

```
    MHA_AC::waveform_t gamma_post_AC
```

- MHA_AC::waveform_t xi_ml_AC
- MHA_AC::spectrum_t lambda_ml_AC
- MHA_AC::spectrum_t lambda_ml_ceps_AC
- MHA_AC::waveform_t lambda_ml_smooth_AC
- MHA_AC::waveform_t max_q_AC
- MHA_AC::waveform_t max_val_AC
- · MHA AC::waveform t pitch set first AC
- MHA_AC::waveform_t pitch_set_last_AC
- MHA_AC::waveform_t alpha_hat_AC
- MHA_AC::waveform_t alpha_frame_AC
- MHA_AC::spectrum_t lambda_ceps_AC
- MHA_AC::spectrum_t log_lambda_spec_AC
- MHA_AC::waveform_t lambda_spec_AC
- MHA_AC::waveform_t xi_est_AC
- MHA_AC::waveform_t gain_wiener_AC
- MHA_AC::waveform_t winF0_AC
- MHA AC::waveform t SPP

5.360.1 Constructor & Destructor Documentation

5.360.2 Member Function Documentation

```
5.360.2.1 void timo_AC::copy ( )
```

5.360.2.2 void timo_AC::insert ()

5.360.3 Member Data Documentation

```
5.360.3.1
         MHA_AC::waveform_t timo_AC::gamma_post_AC
5.360.3.2
        MHA_AC::waveform_t timo_AC::xi_ml_AC
5.360.3.3
         MHA AC::spectrum t timo AC::lambda ml AC
5.360.3.4
         MHA_AC::spectrum_t timo_AC::lambda_ml_ceps_AC
5.360.3.5
         MHA_AC::waveform_t timo_AC::lambda_ml_smooth_AC
5.360.3.6
         MHA_AC::waveform_t timo_AC::max_q_AC
5.360.3.7
        MHA AC::waveform t timo_AC::max_val_AC
5.360.3.8 MHA AC::waveform t timo_AC::pitch_set_first_AC
5.360.3.9 MHA_AC::waveform_t timo_AC::pitch_set_last_AC
5.360.3.10 MHA_AC::waveform_t timo_AC::alpha_hat_AC
5.360.3.11
          MHA_AC::waveform_t timo_AC::alpha_frame_AC
5.360.3.12
          MHA AC::spectrum t timo_AC::lambda_ceps_AC
5.360.3.13
          MHA AC::spectrum t timo_AC::log_lambda_spec_AC
5.360.3.14 MHA_AC::waveform_t timo_AC::lambda_spec_AC
5.360.3.15 MHA_AC::waveform_t timo_AC::xi_est_AC
5.360.3.16 MHA AC::waveform t timo_AC::gain_wiener_AC
          MHA AC::waveform t timo_AC::winF0_AC
5.360.3.17
5.360.3.18
          MHA AC::waveform t timo_AC::SPP
```

The documentation for this class was generated from the following files:

- · timoconfig.h
- timoconfig.cpp

5.361 timo params Class Reference

Public Member Functions

timo_params (const mhaconfig_t &_in_cfg, float _xi_min_db, float _f0_low, float _f0_ ← high, float _delta_pitch, float _lambda_thresh, float _alpha_pitch, float _beta_const, float _kappa_const, float _prior_q, float _xi_opt_db, float _gain_min_db, std::vector< float > &_winF0, std::vector< float > &_alpha_const_vals, std::vector< float > &_alpha_const ← _limits_hz, std::string &_noisePow_name)

Public Attributes

- const mhaconfig_t in_cfg
- float xi min db
- · float f0 low
- float f0 high
- float delta_pitch
- float lambda thresh
- · float alpha pitch
- float beta_const
- float kappa_const
- float prior_q
- float xi_opt_db
- float gain_min_db
- std::vector< float > winF0
- std::vector< float > alpha_const_vals
- std::vector< float > alpha_const_limits_hz
- std::string noisePow name

5.361.1 Constructor & Destructor Documentation

```
5.361.1.1 timo_params::timo_params (
                        const mhaconfig_t & _in_cfg,
                        float _xi_min_db,
                        float _f0_low,
                        float _f0_high,
                        float delta pitch,
                        float _lambda_thresh,
                        float _alpha_pitch,
                        float _beta_const,
                        float kappa const,
                        float _prior_q,
                        float _xi_opt_db,
                        float _gain_min_db,
                        std::vector< float > & _winF0,
                        std::vector< float > & _alpha_const_vals,
                        std::vector< float > & _alpha_const_limits_hz,
                        std::string & _noisePow_name ) [inline]
```

5.361.2 N	Member Data Documentation
5.361.2.1	const mhaconfig_t timo_params::in_cfg
5.361.2.2	float timo_params::xi_min_db
5.361.2.3	float timo_params::f0_low
5.361.2.4	float timo_params::f0_high
5.361.2.5	float timo_params::delta_pitch
5.361.2.6	float timo_params::lambda_thresh
5.361.2.7	float timo_params::alpha_pitch
5.361.2.8	float timo_params::beta_const
5.361.2.9	float timo_params::kappa_const
5.361.2.10	float timo_params::prior_q
5.361.2.11	float timo_params::xi_opt_db
5.361.2.12	float timo_params::gain_min_db
5.361.2.13	std::vector <float> timo_params::winF0</float>
5.361.2.14	std::vector <float> timo_params::alpha_const_vals</float>
5.361.2.15	std::vector <float> timo_params::alpha_const_limits_hz</float>
5.361.2.16	std::string timo_params::noisePow_name

The documentation for this class was generated from the following file:

· timoconfig.h

5.362 timoConfig Class Reference

Public Member Functions

- timoConfig (algo_comm_t &ac, timo_params ¶ms)
- ∼timoConfig ()
- mha_spec_t * process (mha_spec_t *)

Private Member Functions

void copy_AC (timo_AC &tAC)

Private Attributes

- · algo_comm_t ac
- timo_params params
- unsigned int fftlen
- · mha_fft_t mha_fft
- · unsigned int nfreq
- unsigned int nchan
- · timo AC tAC
- float ola_powspec_scale
- float q_low
- float q_high
- MHASignal::waveform_t winF0
- float xi min
- float gain_min
- MHASignal::waveform_t alpha_const
- MHASignal::waveform_t alpha_prev
- MHASignal::waveform t noisePow
- MHASignal::waveform t powSpec
- MHASignal::waveform_t gamma_post
- MHASignal::waveform_t xi_ml
- MHASignal::spectrum_t lambda_ml_full
- MHASignal::spectrum_t lambda_ml_ceps
- MHASignal::waveform_t lambda_ml_smooth
- MHASignal::waveform_t alpha_hat
- MHASignal::waveform_t alpha_frame
- MHASignal::spectrum_t lambda_ceps
- MHASignal::waveform_t lambda_ceps_prev
- MHASignal::spectrum_t log_lambda_spec
- MHASignal::waveform_t lambda_spec
- MHASignal::waveform_t xi_est
- MHASignal::waveform_t gain_wiener
- MHASignal::spectrum_t spec_out
- double * max_val
- int * max q
- int * pitch_set_first
- int * pitch_set_last
- float priorFact
- · float xiOpt
- float logGLRFact
- float GLRexp
- MHASignal::waveform_t GLR

```
5.362.1 Constructor & Destructor Documentation
5.362.1.1 timoConfig::timoConfig (
                     algo comm t & ac,
                     timo params & params )
5.362.1.2 timoConfig::~timoConfig()
5.362.2 Member Function Documentation
         mha spec t * timoConfig::process (
                     mha_spec_t * noisyFrame )
5.362.2.2 void timoConfig::copy_AC (
                     timo_AC & tAC ) [private]
5.362.3 Member Data Documentation
5.362.3.1
         algo comm t timoConfig::ac [private]
5.362.3.2
         timo_params timoConfig::params [private]
5.362.3.3
         unsigned int timoConfig::fftlen [private]
5.362.3.4
         mha_fft_t timoConfig::mha_fft [private]
5.362.3.5
         unsigned int timoConfig::nfreq [private]
5.362.3.6
         unsigned int timoConfig::nchan [private]
         timo AC timoConfig::tAC [private]
5.362.3.7
5.362.3.8
         float timoConfig::ola_powspec_scale [private]
5.362.3.9 float timoConfig::q_low [private]
5.362.3.10 float timoConfig::q_high [private]
5.362.3.11 MHASignal::waveform_t timoConfig::winF0 [private]
5.362.3.12 float timoConfig::xi_min [private]
5.362.3.13 float timoConfig::gain_min [private]
```


```
MHASignal::waveform_t timoConfig::alpha_const [private]
5.362.3.14
5.362.3.15 MHASignal::waveform_t timoConfig::alpha_prev [private]
5.362.3.16 MHASignal::waveform t timoConfig::noisePow [private]
5.362.3.17 MHASignal::waveform_t timoConfig::powSpec [private]
5.362.3.18 MHASignal::waveform_t timoConfig::gamma_post [private]
5.362.3.19 MHASignal::waveform_t timoConfig::xi_ml [private]
5.362.3.20 MHASignal::spectrum_t timoConfig::lambda_ml_full [private]
5.362.3.21 MHASignal::spectrum_t timoConfig::lambda_ml_ceps [private]
5.362.3.22 MHASignal::waveform_t timoConfig::lambda_ml_smooth [private]
5.362.3.23 MHASignal::waveform_t timoConfig::alpha_hat [private]
5.362.3.24 MHASignal::waveform_t timoConfig::alpha_frame [private]
5.362.3.25 MHASignal::spectrum_t timoConfig::lambda_ceps [private]
5.362.3.26 MHASignal::waveform_t timoConfig::lambda_ceps_prev [private]
5.362.3.27 MHASignal::spectrum_t timoConfig::log_lambda_spec [private]
5.362.3.28 MHASignal::waveform_t timoConfig::lambda_spec [private]
5.362.3.29 MHASignal::waveform_t timoConfig::xi_est [private]
5.362.3.30 MHASignal::waveform_t timoConfig::gain_wiener [private]
5.362.3.31 MHASignal::spectrum_t timoConfig::spec_out [private]
5.362.3.32 double* timoConfig::max_val [private]
5.362.3.33 int* timoConfig::max_q [private]
5.362.3.34 int* timoConfig::pitch_set_first [private]
5.362.3.35 int* timoConfig::pitch set last [private]
5.362.3.36 float timoConfig::priorFact [private]
5.362.3.37 float timoConfig::xiOpt [private]
5.362.3.38 float timoConfig::logGLRFact [private]
5.362.3.39 float timoConfig::GLRexp [private]
5.362.3.40 MHASignal::waveform_t timoConfig::GLR [private]
```

The documentation for this class was generated from the following files:

- · timoconfig.h
- timoconfig.cpp

5.363 timoSmooth Class Reference

Inheritance diagram for timoSmooth:

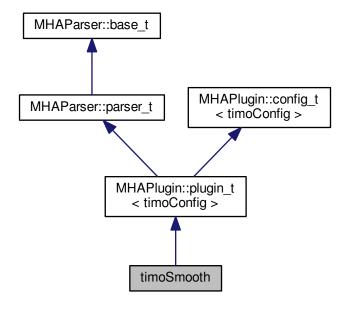

Public Member Functions

• timoSmooth (algo_comm_t &ac, const std::string &chain_name, const std::string &algo_name)

Constructs the beamforming plugin.

- ∼timoSmooth ()
- mha_spec_t * process (mha_spec_t *)

This plugin implements noise reduction using spectral subtraction: by nonnegative subtraction from the output magnitude of the estimated noise magnitude spectrum.

void prepare (mhaconfig_t &)

Plugin preparation.

void release (void)

Private Member Functions

- void update_cfg ()
- void on_model_param_valuechanged ()

Private Attributes

- MHAParser::float_t xi_min_db
 MHAParser::float_t f0_low
 MHAParser::float_t f0_high
 MHAParser::float_t delta_pitch
 MHAParser::float_t lambda_thresh
 MHAParser::float_t alpha_pitch
 MHAParser::float_t beta_const
 MHAParser::float_t kappa_const
 MHAParser::float_t gain_min_db
 MHAParser::vfloat_t win_f0
 MHAParser::vfloat_t alpha_const_limits_hz
- MHAParser::string_t noisePow_nameMHAParser::parser t spp
- MHAParser::float_t prior_q
- MHAParser::float_t xi_opt_db
- MHAEvents::patchbay_t< timoSmooth > patchbay
- bool prepared

Additional Inherited Members

```
5.363.1 Constructor & Destructor Documentation
```

Constructs the beamforming plugin.

```
5.363.1.2 timoSmooth::~timoSmooth ( )
5.363.2 Member Function Documentation
5.363.2.1 mha_spec_t * timoSmooth::process ( mha_spec_t * signal )
```

This plugin implements noise reduction using spectral subtraction: by nonnegative subtraction from the output magnitude of the estimated noise magnitude spectrum.

Parameters

```
signal Pointer to the input signal structure.
```

Returns

Returns a pointer to the input signal structure, with a the signal modified by this plugin.

Plugin preparation.

This plugin checks that the input signal has the spectral domain and contains at least one channel

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number of	
	channels, frames per block, sampling rate.	

```
Implements MHAPlugin::plugin_t < timoConfig > (p. 696).
```

Reimplemented from **MHAPlugin::plugin_t**< **timoConfig** > (p. 697).

```
5.363.2.5 void timoSmooth::on_model_param_valuechanged( ) [private]
```

5.363.3 Member Data Documentation

```
5.363.3.1 MHAParser::float_t timoSmooth::xi_min_db [private]
```

5.363.3.2 MHAParser::float_t timoSmooth::f0_low [private]

5.363.3.3 MHAParser::float_t timoSmooth::f0_high [private]

5.363.3.4 MHAParser::float_t timoSmooth::delta_pitch [private]

5.363.3.5 MHAParser::float_t timoSmooth::lambda_thresh [private]

5.363.3.6 MHAParser::float_t timoSmooth::alpha_pitch [private]

5.363.3.7 MHAParser::float t timoSmooth::beta_const [private]


```
5.363.3.8 MHAParser::float_t timoSmooth::kappa_const [private]
5.363.3.9 MHAParser::float_t timoSmooth::gain_min_db [private]
5.363.3.10 MHAParser::vfloat_t timoSmooth::win_f0 [private]
5.363.3.11 MHAParser::vfloat_t timoSmooth::alpha_const_vals [private]
5.363.3.12 MHAParser::vfloat_t timoSmooth::alpha_const_limits_hz [private]
5.363.3.13 MHAParser::string_t timoSmooth::noisePow_name [private]
5.363.3.14 MHAParser::parser_t timoSmooth::spp [private]
5.363.3.15 MHAParser::float_t timoSmooth::prior_q [private]
5.363.3.16 MHAParser::float_t timoSmooth::xi_opt_db [private]
5.363.3.17 MHAEvents::patchbay_t < timoSmooth > timoSmooth::patchbay [private]
5.363.3.18 bool timoSmooth::prepared [private]
```

The documentation for this class was generated from the following files:

- · timosmooth.h
- · timoSmooth.cpp

5.364 us t Class Reference

Inheritance diagram for us_t:

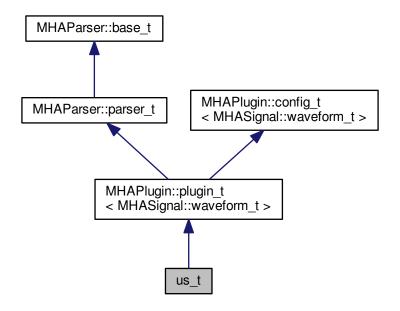

Public Member Functions

```
    us_t (algo_comm_t, std::string, std::string)
    mha_wave_t * process (mha_wave_t *)
    void prepare (mhaconfig_t &)
    void release ()
```

Private Attributes

- MHAParser::int_t ratio
- MHAFilter::iir_filter_t antialias

Additional Inherited Members

```
5.364.1 Constructor & Destructor Documentation
```

```
5.364.1.1 us_t::us_t (

algo_comm_t iac,
std::string ,
std::string )
```

5.364.2 Member Function Documentation

Implements MHAPlugin::plugin_t < MHASignal::waveform_t > (p. 696).

Reimplemented from MHAPlugin::plugin_t < MHASignal::waveform_t > (p. 697).

5.364.3 Member Data Documentation

```
5.364.3.1 MHAParser::int_t us_t::ratio [private]
```


```
5.364.3.2 MHAFilter::iir_filter_t us_t::antialias [private]
```

The documentation for this class was generated from the following file:

· upsample.cpp

5.365 wave2spec_if_t Class Reference

Inheritance diagram for wave2spec_if_t:

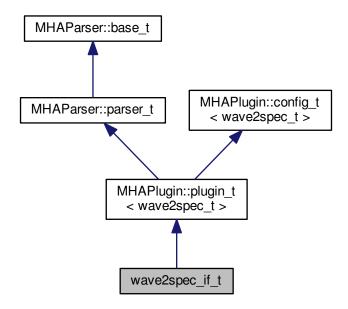

Public Member Functions

- wave2spec_if_t (const algo_comm_t &, const std::string &, const std::string &)
- void prepare (mhaconfig_t &)
- void process (mha_wave_t *, mha_spec_t **)
- void process (mha_wave_t *, mha_wave_t **)

Private Member Functions

• void update ()

Private Attributes

- MHAEvents::patchbay_t< wave2spec_if_t > patchbay
- MHAParser::int_t nfft
- MHAParser::int_t nwnd
- MHAParser::float_t wndpos
- windowselector_t window_config
- MHAParser::bool_t return_wave
- std::string algo

Additional Inherited Members


```
5.365.1 Constructor & Destructor Documentation
5.365.1.1 wave2spec_if_t::wave2spec_if_t (
                     const algo_comm_t & iac,
                     const std::string & ,
                     const std::string & ialg )
5.365.2 Member Function Documentation
5.365.2.1 void wave2spec_if_t::prepare (
                     mhaconfig_t & t ) [virtual]
Implements MHAPlugin::plugin_t< wave2spec_t > (p. 696).
5.365.2.2 void wave2spec_if_t::process (
                     mha_wave_t * wave_in,
                     mha spec t ** sout )
5.365.2.3 void wave2spec_if_t::process (
                     mha_wave_t * wave_in,
                     mha_wave_t ** sout )
5.365.2.4 void wave2spec_if_t::update( ) [private]
5.365.3 Member Data Documentation
5.365.3.1
         MHAEvents::patchbay t<wave2spec if t> wave2spec if t::patchbay [private]
5.365.3.2 MHAParser::int t wave2spec if t::nfft [private]
5.365.3.3 MHAParser::int t wave2spec_if_t::nwnd [private]
5.365.3.4 MHAParser::float t wave2spec_if_t::wndpos [private]
5.365.3.5 windowselector t wave2spec_if_t::window_config [private]
5.365.3.6 MHAParser::bool_t wave2spec_if_t::return_wave [private]
5.365.3.7 std::string wave2spec_if_t::algo [private]
```

The documentation for this class was generated from the following file:

· wave2spec.cpp

5.366 wave2spec_t Class Reference

Inheritance diagram for wave2spec_t:

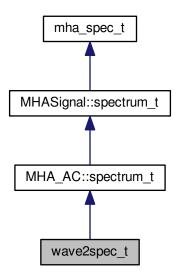

Public Member Functions

- wave2spec_t (unsigned int nfft, unsigned int nwnd_, unsigned int nwndshift_, unsigned int nch, mha_real_t wndpos, const MHAWindow::base_t &window, algo_comm_t ac, std::string algo)
- mha_spec_t * process (mha_wave_t *)
- ~wave2spec_t ()

Private Member Functions

void calc_pre_wnd (MHASignal::waveform_t &, const MHASignal::waveform_t &)

Private Attributes

- unsigned int nwnd
- · unsigned int nwndshift
- mha_fft_t ft

FFT class.

- unsigned int npad1
 - length of zero padding before window
- unsigned int npad2

length of zero padding after window

```
    MHAWindow::base_t window
    MHASignal::waveform_t calc_in
    MHASignal::waveform_t in_buf
    MHASignal::spectrum_t spec_in
non-interleaved, complex, fftlen
```

Additional Inherited Members

length of zero padding before window

```
5.366.1 Constructor & Destructor Documentation
5.366.1.1 wave2spec_t::wave2spec_t (
                     unsigned int nfft.
                     unsigned int nwnd_,
                     unsigned int nwndshift_,
                     unsigned int nch,
                     mha real t wndpos,
                     const MHAWindow::base t & window,
                     algo_comm_t ac,
                     std::string algo )
5.366.1.2 wave2spec_t::~wave2spec_t()
5.366.2 Member Function Documentation
5.366.2.1 mha_spec_t * wave2spec_t::process (
                     mha_wave_t * wave_in )
5.366.2.2 void wave2spec_t::calc_pre_wnd (
                     MHASignal::waveform_t & dest,
                     const MHASignal::waveform_t & src ) [private]
5.366.3 Member Data Documentation
5.366.3.1
         unsigned int wave2spec_t::nwnd [private]
5.366.3.2 unsigned int wave2spec_t::nwndshift [private]
5.366.3.3 mha fft t wave2spec_t::ft [private]
FFT class.
5.366.3.4 unsigned int wave2spec_t::npad1 [private]
```

5.366.3.5 unsigned int wave2spec_t::npad2 [private]

length of zero padding after window

5.366.3.6 MHAWindow::base_t wave2spec_t::window [private]

5.366.3.7 MHASignal::waveform_t wave2spec_t::calc_in [private]

5.366.3.8 MHASignal::waveform_t wave2spec_t::in_buf [private]

5.366.3.9 MHASignal::spectrum_t wave2spec_t::spec_in [private]


non-interleaved, complex, fftlen

The documentation for this class was generated from the following file:

wave2spec.cpp

5.367 wavrec t Class Reference

Inheritance diagram for wavrec_t:

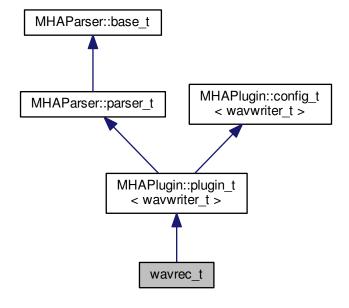

Public Member Functions

```
mha_wave_t * process (mha_wave_t *)
```

- void prepare (mhaconfig_t &cf)
- void release ()
- wavrec_t (const algo_comm_t &iac, const std::string &, const std::string &)

Private Member Functions

• void start_new_session ()

Private Attributes

- MHAParser::bool_t record
- MHAParser::int_t fifolen
- MHAParser::int t minwrite
- MHAParser::string_t prefix
- MHAParser::bool_t use_date
- MHAEvents::patchbay_t< wavrec_t > patchbay

Additional Inherited Members

```
5.367.1 Constructor & Destructor Documentation
```

5.367.2 Member Function Documentation

5.367.2.2 void wavrec_t::prepare (

mhaconfig_t & cf) [virtual]

Implements $MHAPlugin::plugin_t < wavwriter_t > (p. 696)$.

Reimplemented from MHAPlugin::plugin_t< wavwriter_t > (p. 697).

```
5.367.2.4 void wavrec_t::start_new_session() [private]
5.367.3 Member Data Documentation
5.367.3.1 MHAParser::bool_t wavrec_t::record [private]
5.367.3.2 MHAParser::int_t wavrec_t::fifolen [private]
5.367.3.3 MHAParser::int_t wavrec_t::minwrite [private]
5.367.3.4 MHAParser::string_t wavrec_t::prefix [private]
5.367.3.5 MHAParser::bool_t wavrec_t::use_date [private]
5.367.3.6 MHAEvents::patchbay_t<wavrec_t> wavrec_t::patchbay [private]
```

The documentation for this class was generated from the following file:

· wavrec.cpp

5.368 wavwriter_t Class Reference

Public Member Functions

- wavwriter_t (bool active, const mhaconfig_t &cf, unsigned int fifosize, unsigned int minwrite, const std::string &prefix, bool use_date)
- ~wavwriter_t ()
- void process (mha_wave_t *)

Private Member Functions

void write_thread ()

Static Private Member Functions

static void * write_thread (void *this_)

Private Attributes

```
• bool close session

    bool act

   · mhaconfig_t cf_
   • SNDFILE * sf
   mha fifo_t< mha_real_t > fifo

    unsigned int minw

    · pthread t writethread
    • float * data
5.368.1 Constructor & Destructor Documentation
5.368.1.1 wavwriter_t::wavwriter_t (
                      bool active.
                      const mhaconfig_t & cf,
                      unsigned int fifosize,
                      unsigned int minwrite,
                      const std::string & prefix,
                      bool use date )
5.368.1.2 wavwriter_t::~wavwriter_t ( )
5.368.2 Member Function Documentation
5.368.2.1 void wavwriter_t::process (
                      mha wave t * s)
5.368.2.2 static void* wavwriter_t::write_thread (
                      void * this_ ) [inline],[static],[private]
5.368.2.3 void wavwriter_t::write_thread( ) [private]
5.368.3 Member Data Documentation
5.368.3.1
         bool wavwriter t::close session [private]
5.368.3.2 bool wavwriter_t::act_ [private]
5.368.3.3 mhaconfig_t wavwriter_t::cf_ [private]
5.368.3.4 SNDFILE* wavwriter_t::sf [private]
5.368.3.5 mha_fifo_t<mha_real_t> wavwriter_t::fifo [private]
5.368.3.6 unsigned int wavwriter_t::minw_ [private]
5.368.3.7 pthread_t wavwriter_t::writethread [private]
5.368.3.8 float* wavwriter_t::data [private]
```

The documentation for this class was generated from the following file:

wavrec.cpp

5.369 windowselector_t Class Reference

A combination of mha parser variables to describe an overalapadd analysis window.

Public Member Functions

- windowselector_t (const std::string &default_type)
 constructor creates the mha parser variables that describe an overlapadd analysis window.
- ~windowselector_t ()

destructor frees window data that were allocated

- const **MHAWindow::base_t** & **get_window_data** (unsigned length) re-computes the window if required.
- void insert_items (MHAParser::parser_t *p)

insert the window parameters "wndtype", "wndexp", and "userwnd" as mha configuration parameters into the given mha configuration parser.

Public Attributes

MHAEvents::emitter_t updated

A collector event that fires when any of the window parameters managed here is written to.

Private Member Functions

void invalidate_window_data ()

invalidates any allocated window samples.

void update_parser ()

invoked when a parser parameter changes.

Private Attributes

MHAWindow::base t * wnd

Storage for the window data returned by **get_window_data()** (p. 924)

MHAParser::kw_t wndtype

parser variable for window type

MHAParser::float_t wndexp

parser variable for window exponent

MHAParser::vfloat_t userwnd

parser variable for user window samples to use

MHAEvents::patchbay_t< windowselector_t > patchbay

patchbay to watch for changes for the parser variables

5.369.1 Detailed Description

A combination of mha parser variables to describe an overalapadd analysis window.

Provides a method to get the window samples as an instance of **MHAWindow::base_t** (p. 801) when needed.

```
5.369.2 Constructor & Destructor Documentation
```

constructor creates the mha parser variables that describe an overlapadd analysis window.

Parameters

default_type	name of the default analysis window type. Must be one of: "rect", "bartlett",
	"hanning", "hamming", "blackman"

```
5.369.2.2 windowselector t::~windowselector t()
```

destructor frees window data that were allocated

5.369.3 Member Function Documentation

```
5.369.3.1 const MHAWindow::base_t & windowselector_t::get_window_data ( unsigned length )
```

re-computes the window if required.

Parameters

the desired window length in samples return the window's samples as a constref to **MHAWindow::base_t** (p. 801) instance. The referenced instance lives until the window parameters are changed, or this **windowselector_t** (p. 923) instance is destroyed.

insert the window parameters "wndtype", "wndexp", and "userwnd" as mha configuration parameters into the given mha configuration parser.

Parameters

p The configuration parser where to insert the window parameters. E.g. the plugin wave2spec's interface class.

5.369.3.3 void windowselector_t::invalidate_window_data() [private]

invalidates any allocated window samples.

5.369.3.4 void windowselector_t::update_parser() [private]

invoked when a parser parameter changes.

Calls invalidate_window_data() (p. 925) and emits the updated event.

5.369.4 Member Data Documentation

5.369.4.1 MHAEvents::emitter_t windowselector_t::updated

A collector event that fires when any of the window parameters managed here is written to.

5.369.4.2 MHAWindow::base_t* windowselector_t::wnd [private]

Storage for the window data returned by **get_window_data()** (p. 924)

5.369.4.3 MHAParser::kw_t windowselector_t::wndtype [private]

parser variable for window type

5.369.4.4 MHAParser::float twindowselector_t::wndexp [private]

parser variable for window exponent

5.369.4.5 MHAParser::vfloat_t windowselector_t::userwnd [private]

parser variable for user window samples to use

5.369.4.6 MHAEvents::patchbay_t<windowselector_t> windowselector_t::patchbay [private]

patchbay to watch for changes for the parser variables

The documentation for this class was generated from the following files:

- · windowselector.h
- windowselector.cpp

6 File Documentation

6.1 ac2lsl.cpp File Reference

Classes

• class ac2lsl::save_var_base_t

Interface for ac to Isl bridge variable.

class ac2lsl::save_var_t < T >

Implementation for all ac to Isl bridges except complex types.

class ac2lsl::save_var_t< mha_complex_t >

Template specialization of the ac2lsl (p. 77) bridge to take care of complex numbers.

· class ac2lsl::cfg_t

Runtime configuration class of the ac2lsl (p. 77) plugin.

· class ac2lsl::ac2lsl t

Plugin class of ac2lsl (p. 77).

Namespaces

· ac2lsl

All types for the ac2lsI (p. 77) plugins live in this namespace.

6.2 ac2osc.cpp File Reference

Classes

· class ac2osc t

Plugin class of the ac2osc plugin.

6.3 ac2wave.cpp File Reference

Classes

- class ac2wave t
- class ac2wave_if_t
- 6.4 ac_monitor_type.cpp File Reference
- 6.5 ac monitor type.hh File Reference

Classes

· class acmon::ac_monitor_t

A class for converting AC variables to Parser monitors of correct type.

Namespaces

· acmon

Namespace for displaying ac variables as parser monitors.

6.6 acConcat_wave.cpp File Reference

Macros

- #define PATCH_VAR(var) patchbay.connect(&var.valuechanged, this, &acConcat_← wave::update_cfg)
- #define INSERT_PATCH(var) insert_member(var); PATCH_VAR(var)
- 6.6.1 Macro Definition Documentation
- 6.6.1.1 #define PATCH_VAR(

 var) patchbay.connect(&var.valuechanged, this, &acConcat_wave::update

 _cfg)
- 6.6.1.2 #define INSERT_PATCH(

 var) insert_member(var); PATCH_VAR(var)
- 6.7 acConcat_wave.h File Reference

Classes

- class acConcat_wave_config
- class acConcat_wave
- 6.8 acmon.cpp File Reference

Classes

class acmon::acmon_t

Namespaces

acmon

Namespace for displaying ac variables as parser monitors.

6.9 acPooling_wave.cpp File Reference

Macros

- #define PATCH_VAR(var) patchbay.connect(&var.valuechanged, this, &acPooling_←
 wave::update_cfg)
- #define INSERT_PATCH(var) insert_member(var); PATCH_VAR(var)
- 6.9.1 Macro Definition Documentation
- 6.9.1.1 #define PATCH_VAR(

 var) patchbay.connect(&var.valuechanged, this, &acPooling_wave::update

 _cfg)
- 6.9.1.2 #define INSERT_PATCH(

 var) insert_member(var); PATCH_VAR(var)
- 6.10 acPooling_wave.h File Reference

Classes

- class acPooling_wave_config
- class acPooling_wave
- 6.11 acsave.cpp File Reference

Classes

- class acsave::save_var_t
- class acsave::cfg t
- class acsave::acsave_t
- struct acsave::mat4head_t

Namespaces

acsave

Macros

- #define ACSAVE_FMT_TXT 0
- #define ACSAVE_SFMT_TXT "txt"
- #define ACSAVE FMT MAT4 1
- #define ACSAVE_SFMT_MAT4 "mat4"
- #define ACSAVE FMT M 2
- #define ACSAVE_SFMT_M "m"

- 6.11.1 Macro Definition Documentation
- 6.11.1.1 #define ACSAVE FMT TXT 0
- 6.11.1.2 #define ACSAVE_SFMT_TXT "txt"
- 6.11.1.3 #define ACSAVE_FMT_MAT4 1
- 6.11.1.4 #define ACSAVE SFMT MAT4 "mat4"
- 6.11.1.5 #define ACSAVE FMT M 2
- 6.11.1.6 #define ACSAVE SFMT M "m"
- 6.12 acSteer.cpp File Reference

Macros

- #define INSERT_PATCH(var) insert_member(var); PATCH_VAR(var)
- 6.12.1 Macro Definition Documentation
- 6.12.1.1 #define PATCH_VAR(

var) patchbay.connect(&var.valuechanged, this, &acSteer::update_cfg)

6.12.1.2 #define INSERT_PATCH(

var) insert_member(var); PATCH_VAR(var)

6.13 acSteer.h File Reference

Classes

- class acSteer config
- · class acSteer
- 6.14 acTransform_wave.cpp File Reference

Macros

- #define PATCH_VAR(var) patchbay.connect(&var.valuechanged, this, &acTransform_
 wave::update_cfg)
- #define INSERT_PATCH(var) insert_member(var); PATCH_VAR(var)

6.14.1 Macro Definition Documentation

6.14.1.1 #define PATCH_VAR(

var) patchbay.connect(&var.valuechanged, this, &acTransform_wave
::update cfg)

6.14.1.2 #define INSERT_PATCH(

var) insert_member(var); PATCH_VAR(var)

6.15 acTransform_wave.h File Reference

Classes

- class acTransform_wave_config
- class acTransform_wave
- 6.16 addsndfile.cpp File Reference

Classes

class addsndfile::waveform proxy t

Class helps to specify which instance of MHASignal_waveform_t parent instance is meant in **resampled_soundfile_t** (p. 177).

· class addsndfile::resampled soundfile t

Reads sound from file and resamples it if necessary and wanted.

- · class addsndfile::sndfile_t
- class addsndfile::level_adapt_t
- class addsndfile::addsndfile_if_t

Namespaces

addsndfile

Macros

#define **DEBUG**(x) std::cerr << __FILE__ << ":" << __LINE__ << " " #x "=" << x << std::endl

Typedefs

- typedef MHAPlugin::config_t< level_adapt_t > addsndfile::level_adaptor
- typedef MHAPlugin::plugin_t< sndfile_t > addsndfile::wave_reader

Enumerations

Functions

static unsigned addsndfile::resampled_num_frames (unsigned num_source_frames, float source_rate, float target_rate, addsndfile_resampling_mode_t resampling_mode)

6.16.1 Macro Definition Documentation

6.17 adm.cpp File Reference

Classes

- class adm_rtconfig_t
- class adm_if_t

Functions

- MHASignal::waveform_t * adm_fir_lp (unsigned int fs, unsigned f_pass, unsigned int f stop, unsigned int order)
- MHASignal::waveform_t * adm_fir_decomb (unsigned int fs, float dist_m, unsigned int order)

6.17.1 Function Documentation

6.18 adm.hh File Reference

Classes

class ADM::Linearphase_FIR< F >

An efficient linear-phase fir filter implementation.

class ADM::Delay< F >

A delay-line class which can also do subsample-delays for a limited frequency range below fs/4.

class ADM::ADMF >

Adaptive differential microphone, working for speech frequency range.

Namespaces

ADM

Functions

static double ADM::subsampledelay_coeff (double samples, double f_design, double fs=1.0)

compute IIR coefficient for subsample delay

Variables

- const double **ADM::PI** = 3.14159265358979312
- const double ADM::C = 340
- const double **ADM::DELAY_FREQ** = 2000
- const double **ADM::START_BETA** = 0.5

6.19 altplugs.cpp File Reference

Classes

- · class mhaplug_cfg_t
- class altplugs_t

Macros

- #define MHAPLUGIN_OVERLOAD_OUTDOMAIN
- 6.19.1 Macro Definition Documentation
- 6.19.1.1 #define MHAPLUGIN_OVERLOAD_OUTDOMAIN
- 6.20 analysemhaplugin.cpp File Reference

Functions

- std::string strdom (mha_domain_t d)
- void print_ac (MHAKernel::algo_comm_class_t &ac, std::string txt)
- int **main** (int argc, char **argv)

static void * thread start (void *instance)

```
6.21.1 Function Documentation
```

- 6.22 auditory_profile.cpp File Reference
- 6.23 auditory_profile.h File Reference

Classes

class AuditoryProfile::fmap_t

A class to store frequency dependent data (e.g., HTL and UCL).

class AuditoryProfile::profile_t

The Auditory Profile class.

class AuditoryProfile::profile_t::ear_t

Class for ear-dependent parameters, e.g., audiograms or unilateral loudness scaling.

class AuditoryProfile::parser_t

Class to make the auditory profile accessible through the parser interface.

- class AuditoryProfile::parser_t::fmap_t
- class AuditoryProfile::parser_t::ear_t

Namespaces

AuditoryProfile

Namespace for classes and functions around the auditory profile (e.g., audiogram handling)

6.24 browsemhaplugins.cpp File Reference

Macros

• #define **DEBUG**(x) std::cerr << __FILE__ << ":" << __LINE__ << " " << #x << "=" << x << std::endl

Functions

• int **main** (int argc, char **argv)

6.24.1 Macro Definition Documentation

6.24.2 Function Documentation

6.25 coherence.cpp File Reference

Classes

- class coherence::vars_t
- class coherence::cohflt_t
- class coherence::cohflt_if_t

Namespaces

coherence

Functions

- void coherence::getcipd (mha_complex_t &c, mha_real_t &a, const mha_complex←
 _t &xl, const mha_complex_t &xr)
- 6.26 combinechannels.cpp File Reference

Classes

- · class combc t
- class combc_if_t
- 6.27 complex_filter.cpp File Reference
- 6.28 complex_filter.h File Reference

Classes

- class MHAFilter::complex_bandpass_t
 Complex bandpass filter.
- class MHAFilter::gamma_flt_t
 Class for gammatone filter.
- class MHAFilter::thirdoctave_analyzer_t

Namespaces

MHAFilter

Namespace for IIR and FIR filter classes.

6.29 cpuload.cpp File Reference

Classes

- · class cpuload_t
- 6.30 db.cpp File Reference

Classes

- class db_t
- · class db_if_t

6.31 dc.cpp File Reference

Classes

```
• class dc::wb_inhib_cfg_t
```

- · class dc::wideband inhib vars t
- class dc::dc_vars_t
- class dc::dc_vars_validator_t
- · class dc::dc t
- class dc::dc_if_t

Namespaces

• dc

Macros

#define DUPVEC(x) v.x.data = MHASignal::dupvec_chk(v.x.data,s)

Functions

- unsigned int dc::get_audiochannels (unsigned int totalchannels, std::string acname, algo_comm_t ac)
- 6.31.1 Macro Definition Documentation
- 6.32 dc_afterburn.cpp File Reference

Namespaces

DynComp

dynamic compression related classes and functions

Functions

float mylogf (float x)

6.32.1 Function Documentation

```
6.32.1.1 float mylogf ( float x )
```

6.33 dc_afterburn.h File Reference

Classes

class DynComp::dc_afterburn_vars_t
 Variables for dc_afterburn_t (p. 280) class.

class DynComp::dc_afterburn_rt_t

Real-time class for after burn effect.

class DynComp::dc_afterburn_t

Afterburn class, to be defined as a member of compressors.

Namespaces

DynComp

dynamic compression related classes and functions

6.34 dc_simple.cpp File Reference

Classes

- class dc_simple::dc_vars_t
- class dc_simple::dc_vars_validator_t
- class dc_simple::level_smoother_t
- class dc_simple::dc_t
- class dc_simple::dc_t::line_t
- class dc_simple::dc_if_t

Namespaces

dc_simple

Typedefs

- typedef MHAPlugin::plugin_t< dc_t > dc_simple::DC
- typedef MHAPlugin::config_t< level_smoother_t > dc_simple::LEVEL

Functions

 void dc_simple::test_fail (const std::vector< float > &v, unsigned int s, const std::string &name)

- std::vector< float > dc_simple::force_resize (const std::vector< float > &v, unsigned int s, const std::string &name)
- mha_real_t dc_simple::not_zero (mha_real_t x, const std::string &comment="")

6.35 delay.cpp File Reference

Classes

· class delay::interface_t

Namespaces

delay

6.36 delaysum.cpp File Reference

Classes

· class delaysum::delaysum t

Runtime configuration of the delaysum plugin.

class delaysum::delaysum if t

Interface class for the delaysum plugin.

Namespaces

delaysum

This namespace contains the delaysum plugin.

6.37 doasym_classification.cpp File Reference

Macros

- #define PATCH_VAR(var) patchbay.connect(&var.valuechanged, this, &doasvm_← classification::update_cfg)
- #define INSERT_PATCH(var) insert_member(var); PATCH_VAR(var)

6.37.1 Macro Definition Documentation

6.37.1.1 #define PATCH_VAR(

var) patchbay.connect(&var.valuechanged, this, &doasvm_classification
::update_cfg)

6.37.1.2 #define INSERT PATCH(

var) insert_member(var); PATCH_VAR(var)

6.38 doasym_classification.h File Reference

Classes

- class doasvm_classification_config
- · class doasvm_classification
- 6.39 doasym_feature_extraction.cpp File Reference

Macros

- #define PATCH_VAR(var) patchbay.connect(&var.valuechanged, this, &doasvm_
 feature_extraction::update_cfg)
- #define INSERT_PATCH(var) insert_member(var); PATCH_VAR(var)
- 6.39.1 Macro Definition Documentation
- 6.39.1.1 #define PATCH_VAR(

var) patchbay.connect(&var.valuechanged, this, &doasvm_feature_←
extraction::update_cfg)

6.39.1.2 #define INSERT_PATCH(

var) insert_member(var); PATCH_VAR(var)

6.40 doasym_feature_extraction.h File Reference

Classes

- class doasvm_feature_extraction_config
- class doasvm_feature_extraction

6.41	doc_appendix.h File Reference
6.42	doc_examples.h File Reference
6.43	doc_frameworks.h File Reference
6.44	doc_general.h File Reference
6.45	doc_kernel.h File Reference
6.46	doc_matlab.h File Reference
6.47	doc_mhamain.h File Reference
6.48	doc_parser.h File Reference
6.49	doc_plugif.cpp File Reference
6.50	doc_plugins.h File Reference
6.51	doc_system.h File Reference
6.52	doc_toolbox.h File Reference
6.53	downsample.cpp File Reference
Class	es
•	class ds_t
6.54	droptect.cpp File Reference
Class	es

• class droptect_t

Detect dropouts in a signal with a constant spectrum.

6.55 example1.cpp File Reference

Classes

· class example1_t

This C++ class implements the simplest example plugin for the step-by-step tutorial.

6.56 example2.cpp File Reference

Classes

class example2_t

This C++ class implements the second example plugin for the step-by-step tutorial.

6.57 example3.cpp File Reference

Classes

· class example3_t

A Plugin class using the openMHA Event mechanism.

6.58 example4.cpp File Reference

Classes

class example4_t

A Plugin class using the spectral signal.

6.59 example5.cpp File Reference

Classes

- · class example5_t
- class plugin_interface_t

Macros

#define ___declspec(p)

6.59.1 Macro Definition Documentation

6.60 example6.cpp File Reference

Classes

- class cfg_t
- class example6_t

Macros

- #define __declspec(p)
- 6.60.1 Macro Definition Documentation

6.61 fader_spec.cpp File Reference

Classes

- class spec_fader_t
- · class fader if t
- 6.62 fader_wave.cpp File Reference

Classes

- class fader_wave::level_adapt_t
- class fader_wave::fader_wave_if_t

Namespaces

· fader_wave

Macros

#define **DEBUG**(x) std::cerr << __FILE__ << ":" << __LINE__ << " " #x "=" << x << std::endl

Typedefs

typedef MHAPlugin::plugin_t< level_adapt_t > fader_wave::level_adaptor

6.62.1 Macro Definition Documentation

6.63 fftfbpow.cpp File Reference

Classes

class fftfbpow::fftfbpow_t

Run time configuration for the fftfbpow plugin.

class fftfbpow::fftfbpow_interface_t

Interface class for fftfbpow plugin.

Namespaces

fftfbpow

Namespace for the fftfbpow plugin.

6.64 fftfilterbank.cpp File Reference

Classes

- class fftfilterbank::fftfb_plug_t
- class fftfilterbank::fftfb_interface_t

Namespaces

fftfilterbank

6.65 fshift_hilbert.cpp File Reference

Classes

- class hilbert_shifter_t
- class frequency_translator_t

6.66 gain.cpp File Reference

Classes

- class gain::scaler_t
- · class gain::gain_if_t

Namespaces

• gain

6.67 gaintable.cpp File Reference

Functions

- std::vector< mha_real_t > convert_f2logf (const std::vector< mha_real_t > &vF)
- bool isempty (const std::vector< std::vector< mha_real_t >> &arg)
- 6.67.1 Function Documentation

6.67.1.2 bool isempty (

const std::vector< std::vector< mha_real_t >> & arg)

6.68 gaintable.h File Reference

Classes

• class DynComp::gaintable_t

Gain table class.

Namespaces

DynComp

dynamic compression related classes and functions

Functions

mha_real_t DynComp::interp1 (const std::vector< mha_real_t > &vX, const std
 ::vector< mha_real_t > &vY, mha_real_t X)

One-dimensional linear interpolation.

mha_real_t DynComp::interp2 (const std::vector< mha_real_t > &vX, const std
 ::vector< mha_real_t > &vY, const std::vector< std::vector< mha_real_t > &mZ,
 mha_real_t X, mha_real_t Y)

Linear interpolation in a two-dimensional field.

6.69 generatemhaplugindoc.cpp File Reference

Classes

class latex_doc_t

Functions

- std::string conv2latex (std::string s, bool iscolored=false)
- void create_latex_doc (std::map< std::string, std::string > &doc, const std::string &plug-name, const std::string &plugin_macro)
- int **main** (int argc, char **argv)

```
6.69.1 Function Documentation
```

6.70 hann.cpp File Reference

Macros

#define PI 3.14159265358979323846

Functions

```
    float * hannf (const unsigned int N)
```

• double * hann (const unsigned int N)

```
6.70.1 Macro Definition Documentation
```

```
6.70.1.1 #define PI 3.14159265358979323846
```

6.70.2 Function Documentation

```
6.70.2.1 float* hannf ( const unsigned int N )
```

```
6.70.2.2 double * hann ( const unsigned int N )
```

6.71 hann.h File Reference

Functions

- float * hannf (const unsigned int N)
- double * hann (const unsigned int N)

6.71.1 Function Documentation

```
6.71.1.1 float* hannf ( const unsigned int N )
```

```
6.71.1.2 double* hann ( const unsigned int N )
```

6.72 identity.cpp File Reference

Classes

class identity_t

6.73 ifftshift.cpp File Reference

Functions

void ifftshift (mha_wave_t *spec)

```
6.73.1 Function Documentation
```

```
6.73.1.1 void ifftshift ( mha_wave_t * spec )
```

6.74 ifftshift.h File Reference

Functions

void ifftshift (mha_wave_t *spec)

6.74.1 Function Documentation

```
6.74.1.1 void ifftshift (

mha_wave_t * spec )
```

6.75 iirfilter.cpp File Reference

Classes

class iirfilter_t

Macros

- #define PATCH_VAR(var) patchbay.connect(&var.valuechanged, this, &lpc::update_←
 cfg)
- #define INSERT_PATCH(var) insert_member(var); PATCH_VAR(var)

Functions

void Levinson2 (unsigned int P, const std::vector< mha_real_t > &R, std::vector< mha←
 _real_t > &A)

```
6.76.1 Macro Definition Documentation
6.76.1.1 #define PATCH_VAR(
                     var ) patchbay.connect(&var.valuechanged, this, &lpc::update_cfg)
6.76.1.2 #define INSERT_PATCH(
                     var ) insert member(var); PATCH VAR(var)
6.76.2 Function Documentation
6.76.2.1 void Levinson2 (
                     unsigned int P,
                     const std::vector< mha_real_t > & R,
                     std::vector< mha_real_t > & A )
6.77 lpc.h File Reference
Classes
   · class lpc config
   • class Ipc
6.78 lpc_bl_predictor.cpp File Reference
Macros

    #define PATCH_VAR(var) patchbay.connect(&var.valuechanged, this, &lpc_bl_←

     predictor::update cfg)
   • #define INSERT_PATCH(var) insert_member(var); PATCH_VAR(var)
6.78.1 Macro Definition Documentation
6.78.1.1 #define PATCH_VAR(
                     var ) patchbay.connect(&var.valuechanged, this, &lpc_bl_predictor←
         ::update_cfg)
6.78.1.2 #define INSERT_PATCH(
                     var ) insert member(var); PATCH VAR(var)
6.79 lpc_bl_predictor.h File Reference
Classes
```

class lpc_bl_predictor_config

class lpc_bl_predictor

Macros

- #define EPSILON 1e-10
- 6.79.1 Macro Definition Documentation
- 6.79.1.1 #define EPSILON 1e-10
- 6.80 **Ipc_burg-lattice.cpp** File Reference

Macros

- #define PATCH_VAR(var) patchbay.connect(&var.valuechanged, this, &lpc_burglattice
 ::update_cfg)
- #define INSERT_PATCH(var) insert_member(var); PATCH_VAR(var)
- 6.80.1 Macro Definition Documentation
- 6.80.1.1 #define PATCH_VAR(

 var) patchbay.connect(&var.valuechanged, this, &lpc_burglattice::update

 _cfg)
- 6.80.1.2 #define INSERT_PATCH(

 var) insert_member(var); PATCH_VAR(var)
- 6.81 lpc_burg-lattice.h File Reference

Classes

- class lpc_burglattice_config
- class lpc_burglattice

Macros

- #define EPSILON 1e-10
- 6.81.1 Macro Definition Documentation
- 6.81.1.1 #define EPSILON 1e-10
- 6.82 matrixmixer.cpp File Reference

Classes

- class matrixmixer::cfg_t
- class matrixmixer::matmix_t

Namespaces

matrixmixer

6.83 mha.cpp File Reference

Functions

- int **mhamain** (int argc, char *argv[])
- int main (int argc, char *argv[])

6.83.1 Function Documentation

6.84 mha.h File Reference

common types for MHA kernel, MHA framework applications and external plugins

Classes

struct mha_complex_t

Type for complex floating point values.

struct mha_direction_t

Channel source direction structure.

struct mha_channel_info_t

Channel information structure.

struct mha_wave_t

Waveform signal structure.

struct mha_spec_t

Spectrum signal structure.

struct mha_audio_descriptor_t

Description of an audio fragment (planned as a replacement of mhaconfig_t (p. 470)).

struct mha_audio_t

An audio fragment in the openMHA (planned as a replacement of **mha_wave_t** (p. 462) and **mha_spec_t** (p. 432)).

struct mhaconfig_t

MHA prepare configuration structure.

• struct comm_var_t

Algorithm communication variable structure.

struct algo_comm_t

A reference handle for algorithm communication variables.

Macros

#define MHA_CALLBACK_TEST(x)

Test macro to compare function type definition and declaration.

- #define MHA_CALLBACK_TEST_PREFIX(prefix, x)
- #define MHA_XSTRF(x) MHA_STRF(x)
- #define MHA_STRF(x) #x
- #define MHA_VERSION_MAJOR 4

Major version number of MHA.

#define MHA_VERSION_MINOR 6

Minor version number of MHA.

#define MHA_VERSION_RELEASE 4

Release number of MHA.

#define MHA VERSION BUILD 0

Build number of MHA (currently unused)

#define MHA_STRUCT_SIZEMATCH (unsigned int)((sizeof(mha_real_t)==4)+2*(sizeof(mha complex_t)==8)+4*(sizeof(mha_wave_t)==8+2*sizeof(void*))+8*(sizeof(mha_spec complex_t)==8+2*sizeof(void*))+16*(sizeof(mhaconfig_t)==24))

Test number for structure sizes.

#define MHA_VERSION (unsigned int)((MHA_STRUCT_SIZEMATCH | (MHA_VERS → ION_RELEASE << 8) | (MHA_VERSION_MINOR << 16) | (MHA_VERSION_MAJOR << 24)))

Full version number of MHA kernel.

#define MHA_VERSION_STRING MHA_XSTRF(MHA_VERSION_MAJOR) "." MHA_←
XSTRF(MHA_VERSION_MINOR)

Version string of MHA kernel (major.minor)

#define MHA_RELEASE_VERSION_STRING MHA_XSTRF(MHA_VERSION_MAJOR)
 "." MHA_XSTRF(MHA_VERSION_MINOR)
 "." MHA_XSTRF(MHA_VERSION_RELE ASE)

Version string of MHA kernel (major.minor.release)

- #define MHA_WAVEFORM 0
- #define MHA SPECTRUM 1
- #define MHA DOMAIN MAX 2
- #define MHA DOMAIN UNKNOWN MHA DOMAIN MAX
- #define MHA_AC_UNKNOWN 0
- #define MHA AC CHAR 1
- #define MHA_AC_INT 2
- #define MHA AC MHAREAL 3
- #define MHA AC FLOAT 4
- #define MHA AC DOUBLE 5
- #define MHA AC MHACOMPLEX 6
- #define MHA AC VEC FLOAT 51
- #define MHA_AC_USER 1000

Typedefs

- typedef unsigned int mha_domain_t
- typedef float mha_real_t

openMHA type for real numbers

typedef void * mha_fft_t
 Handle for an FFT object.

- typedef struct algo comm t algo comm t
- typedef unsigned int(* MHAGetVersion_t) (void)
- typedef int(* MHAInit_t) (algo_comm_t algo_comm, const char *chain, const char *algo, void **h)
- typedef int(* MHAPrepare_t) (void *h, mhaconfig_t *cfg)
- typedef int(* MHARelease_t) (void *h)
- typedef void(* MHADestroy_t) (void *h)
- typedef int(* MHASet_t) (void *h, const char *cmd, char *retval, unsigned int len)
- typedef const char *(* MHAStrError_t) (void *h, int err)
- typedef int(* MHAProc_wave2wave_t) (void *h, mha_wave_t *sIn, mha_wave_t **s⊷
 Out)
- typedef int(* MHAProc_wave2spec_t) (void *h, mha_wave_t *sIn, mha_spec_t **s
 Out)
- typedef int(* MHAProc_spec2wave_t) (void *h, mha_spec_t *sIn, mha_wave_t **s
 Out)
- typedef int(* MHAProc_spec2spec_t) (void *h, mha_spec_t *sln, mha_spec_t **sOut)
- typedef const char *(* MHAPluginDocumentation_t) (void)
- typedef const char *(* MHAPluginCategory t) (void)

6.84.1 Detailed Description

common types for MHA kernel, MHA framework applications and external plugins

6.84.2 Macro Definition Documentation

Test macro to compare function type definition and declaration.

```
6.84.2.2 #define MHA_CALLBACK_TEST_PREFIX(

prefix,

x )
```

6.84.2.3 #define MHA_XSTRF(x) MHA_STRF(x)

6.84.2.5 #define MHA VERSION MAJOR 4

Major version number of MHA.

6.84.2.6 #define MHA_VERSION_MINOR 6

Minor version number of MHA.

6.84.2.7 #define MHA_VERSION_RELEASE 4

Release number of MHA.

6.84.2.8 #define MHA_VERSION_BUILD 0

Build number of MHA (currently unused)

6.84.2.9 #define MHA_STRUCT_SIZEMATCH (unsigned int)((sizeof(mha_real_t)==4)+2*(sizeof(mha← _complex_t)==8)+4*(sizeof(mha_wave_t)==8+2*sizeof(void*))+8*(sizeof(mha_spec_← t)==8+2*sizeof(void*))+16*(sizeof(mhaconfig_t)==24))

Test number for structure sizes.

6.84.2.10 #define MHA_VERSION (unsigned int)((MHA_STRUCT_SIZEMATCH | (MHA_VERSION_RELEASE << 8) | (MHA_VERSION_MINOR << 16) | (MHA_VERSION_MAJOR << 24)))

Full version number of MHA kernel.

6.84.2.11 #define MHA_VERSION_STRING MHA_XSTRF(MHA_VERSION_MAJOR) "." MHA_XSTRF(MHA_VERSION_MINOR)

Version string of MHA kernel (major.minor)

6.84.2.12 #define MHA_RELEASE_VERSION_STRING MHA_XSTRF(MHA_VE← RSION_MAJOR) "." MHA_XSTRF(MHA_VERSION_MINOR) "." MHA_XSTRF(MHA_VERSION_RELEASE)

Version string of MHA kernel (major.minor.release)

6.84.2.13	#define MHA_WAVEFORM 0	
6.84.2.14	#define MHA_SPECTRUM 1	
6.84.2.15	#define MHA_DOMAIN_MAX 2	
6.84.2.16	#define MHA_DOMAIN_UNKNOWN MHA_DOMAIN_MAX	
6.84.2.17	#define MHA_AC_UNKNOWN 0	
6.84.2.18	#define MHA_AC_CHAR 1	
6.84.2.19	#define MHA_AC_INT 2	
6.84.2.20	#define MHA_AC_MHAREAL 3	
6.84.2.21	#define MHA_AC_FLOAT 4	
6.84.2.22	#define MHA_AC_DOUBLE 5	
6.84.2.23	#define MHA_AC_MHACOMPLEX 6	
6.84.2.24	#define MHA_AC_VEC_FLOAT 51	
6.84.2.25	#define MHA_AC_USER 1000	
6.84.3 Typedef Documentation		
6.84.3.1	typedef unsigned int mha_domain_t	
6.84.3.2	typedef struct algo_comm_t algo_comm_t	
6.84.3.3	typedef unsigned int(* MHAGetVersion_t) (void)	
6.84.3.4	typedef int(* MHAInit_t) (algo_comm_t algo_comm, const char *chain, const char *algo, void **h)	
6.84.3.5	typedef int(* MHAPrepare_t) (void *h, mhaconfig_t *cfg)	
6.84.3.6	typedef int(* MHARelease_t) (void *h)	
6.84.3.7	typedef void(* MHADestroy_t) (void *h)	

- typedef int(* MHASet_t) (void *h, const char *cmd, char *retval, unsigned int len)
 typedef const char*(* MHAStrError_t) (void *h, int err)
 typedef int(* MHAProc_wave2wave_t) (void *h, mha_wave_t *sln, mha_wave_t **sOut)
 typedef int(* MHAProc_wave2spec_t) (void *h, mha_wave_t *sln, mha_spec_t **sOut)
 typedef int(* MHAProc_spec2wave_t) (void *h, mha_spec_t *sln, mha_wave_t **sOut)
 typedef int(* MHAProc_spec2wave_t) (void *h, mha_spec_t *sln, mha_spec_t **sOut)
 typedef int(* MHAProc_spec2spec_t) (void *h, mha_spec_t *sln, mha_spec_t **sOut)
- 6.84.3.14 typedef const char*(* MHAPluginDocumentation_t) (void)
- 6.84.3.15 typedef const char*(* MHAPluginCategory_t) (void)
- 6.85 mha algo comm.cpp File Reference

Macros

- #define AC_SUCCESS 0
- #define AC_INVALID_HANDLE -1
- #define AC_INVALID_NAME -2
- #define AC_STRING_TRUNCATED -3
- #define AC_INVALID_OUTPTR -4
- #define AC_TYPE_MISMATCH -5
- #define AC_DIM_MISMATCH -6

Variables

- algo_comm_t algo_comm_default
- 6.85.1 Macro Definition Documentation
- 6.85.1.1 #define AC_SUCCESS 0
- 6.85.1.2 #define AC_INVALID_HANDLE -1
- 6.85.1.3 #define AC_INVALID_NAME -2
- 6.85.1.4 #define AC_STRING_TRUNCATED -3
- 6.85.1.5 #define AC_INVALID_OUTPTR -4
- 6.85.1.6 #define AC_TYPE_MISMATCH -5
- 6.85.1.7 #define AC_DIM_MISMATCH -6
- 6.85.2 Variable Documentation
- 6.85.2.1 algo_comm_t algo_comm_default
- 6.86 mha_algo_comm.h File Reference

Header file for Algorithm Communication.

Classes

class MHA AC::spectrum t

Insert a MHASignal::spectrum_t (p. 766) class into the AC space.

class MHA AC::waveform t

Insert a MHASignal::waveform_t (p. 778) class into the AC space.

class MHA AC::int t

Insert a integer variable into the AC space.

class MHA_AC::float_t

Insert a float point variable into the AC space.

class MHA_AC::double_t

Insert a double precision floating point variable into the AC space.

- class MHA_AC::stat_t
- class MHA_AC::ac2matrix_helper_t
- class MHA_AC::ac2matrix_t

Copy AC variable to a matrix.

class MHA_AC::acspace2matrix_t

Copy all or a subset of all numeric AC variables into an array of matrixes.

Namespaces

· MHA AC

Functions and classes for Algorithm Communication (AC) support.

Functions

- mha_spec_t MHA_AC::get_var_spectrum (algo_comm_t ac, const std::string &name)

 Convert an AC variable into a spectrum.
- mha_wave_t MHA_AC::get_var_waveform (algo_comm_t ac, const std::string &name)

Convert an AC variable into a waveform.

• int MHA_AC::get_var_int (algo_comm_t ac, const std::string &name)

Return value of an integer scalar AC variable.

• float MHA_AC::get_var_float (algo_comm_t ac, const std::string &name)

Return value of an floating point scalar AC variable.

std::vector< float > MHA_AC::get_var_vfloat (algo_comm_t ac, const std::string &name)

Return value of an floating point vector AC variable as standard vector of floats.

6.86.1 Detailed Description

Header file for Algorithm Communication.

6.87 mha_algo_comm.hh File Reference

Classes

- class MHAKernel::comm_var_map_t
- class MHAKernel::algo_comm_class_t

Namespaces

MHAKernel

Macros

#define ALGO_COMM_ID_STR "MFVK3jL5rmeus1XtggEl971aXCR/GU7RRehKz4k
 Qtrg="

Functions

• algo_comm_class_t * MHAKernel::algo_comm_safe_cast (void *)

Variables

- algo_comm_t algo_comm_default
- 6.87.1 Macro Definition Documentation
- 6.87.1.1 #define ALGO_COMM_ID_STR "MFVK3jL5rmeus1XtggEl971aXCR/GU7RRehKz4kQtrg="
- 6.87.2 Variable Documentation
- 6.87.2.1 algo_comm_t algo_comm_default
- 6.88 mha_defs.h File Reference

Preprocessor definitions common to all MHA components.

Macros

- #define __MHA_FUN__ __FUNC__
- #define CHECK_EXPR(x) {if(!(x)){throw MHA_Error(__FILE__,_LINE__,"The expression \"" #x "\" is invalid.");}}
- #define CHECK_VAR(x) {if(!(x)){throw MHA_Error(__FILE__,__LINE__,"The variable \"" #x "\" is not defined.");}}
- #define **declspec**(p)
- #define M PI 3.14159265358979323846

Define pi if it is not defined yet.

• #define **MIN**(a, b) (((a)<(b))?(a):(b))

Macro for minimum function.

• #define **MAX**(a, b) (((a)>(b))?(a):(b))

Macro for maximum function.

- #define MHA_EAR_LEFT 0
- #define MHA EAR RIGHT 1
- #define MHA EAR MAX 2

6.88.1 Detailed Description

Preprocessor definitions common to all MHA components.

This file contains all preprocessor and type definitions which are common to all Master Hearing Aid components.

```
6.88.2 Macro Definition Documentation
```

```
6.88.2.1 #define __MHA_FUN___FUNC__
```

6.88.2.2 #define CHECK EXPR(

```
x ) {if(!(x)){throw MHA_Error(__FILE__,__LINE__,"The expression \"" \#x "\" is invalid.");}}
```

6.88.2.3 #define CHECK_VAR(

```
x ) {if(!(x)){throw MHA_Error(__FILE__,__LINE__,"The variable \"" #x "\" is not defined.");}}
```

6.88.2.4 #define __declspec(p)

6.88.2.5 #define M_PI 3.14159265358979323846

Define pi if it is not defined yet.

6.88.2.6 #define MIN(

Macro for minimum function.

6.88.2.7 #define MAX(

Macro for maximum function.

6.88.2.8 #define MHA_EAR_LEFT 0

6.88.2.9 #define MHA_EAR_RIGHT 1

6.88.2.10 #define MHA_EAR_MAX 2

6.89 mha_errno.c File Reference

Macros

• #define STRLEN 0x1000

Functions

- const char * mha_strerror (int mhaerrno)
- void mha_set_user_error (const char *str)

Variables

- char next_except_str [STRLEN] = ""
- const char * cstr_strerror [MHA_ERR_USER]

```
6.89.1 Macro Definition Documentation
```

- 6.89.1.1 #define STRLEN 0x1000
- 6.89.2 Function Documentation
- 6.89.2.1 const char* mha_strerror (int *mhaerrno*)
- 6.89.2.2 void mha_set_user_error (const char * str)
- 6.89.3 Variable Documentation
- 6.89.3.1 char next_except_str[STRLEN] = ""
- 6.89.3.2 const char* cstr_strerror[MHA_ERR_USER]
- 6.90 mha_errno.h File Reference

Macros

- #define MHA_ERR_SUCCESS 0
- #define MHA_ERR_UNKNOWN 1
- #define MHA_ERR_INVALID_HANDLE 2
- #define MHA ERR NULL 3
- #define MHA_ERR_VARRANGE 4
- #define MHA_ERR_VARFMT 5
- #define MHA_ERR_USER 10000

Functions

- const char * mha_strerror (int mhaerrno)
- void mha_set_user_error (const char *str)

```
6.90.1 Macro Definition Documentation
6.90.1.1
        #define MHA_ERR_SUCCESS 0
6.90.1.2 #define MHA_ERR_UNKNOWN 1
6.90.1.3
        #define MHA_ERR_INVALID_HANDLE 2
6.90.1.4
        #define MHA_ERR_NULL 3
6.90.1.5 #define MHA_ERR_VARRANGE 4
6.90.1.6
        #define MHA_ERR_VARFMT 5
6.90.1.7 #define MHA_ERR_USER 10000
6.90.2 Function Documentation
6.90.2.1 const char* mha_strerror (
                     int mhaerrno )
6.90.2.2 void mha_set_user_error (
                     const char * str )
6.91
      mha_error.cpp File Reference
```

Implementation of openMHA error handling.

Namespaces

· mha error helpers

Functions

- unsigned mha_error_helpers::digits (unsigned n)
 Compute number of decimal digits required to represent an unsigned integer.
- unsigned mha_error_helpers::snprintf_required_length (const char *formatstring,...)
 snprintf_required_length Compute the number of bytes (excluding the terminating nul) required to store the result of an snprintf.
- void mha_debug (const char *fmt,...)
 Print an info message (stderr on Linux, OutputDebugString in Windows).

6.91.1 Detailed Description

Implementation of openMHA error handling.

This file forms a seperate library.

6.92 mha error.hh File Reference

Classes

class MHA_Error

Error reporting exception class.

Namespaces

mha_error_helpers

Macros

- #define Getmsg(e) ((e).get_msg())
- #define MHA_ErrorMsg(x) MHA_Error(__FILE__,__LINE__,"%s",x)

 Throw an openMHA error with a text message.

• #define MHA_assert(x) if(!(x)) throw MHA_Error(__FILE__,__LINE__,"\"%s\" is false.",#x)

Assertion macro, which throws an MHA_Error (p. 413).

• #define MHA_assert_equal(a, b) if(a != b) throw MHA_Error(__FILE__,__LINE__ \leftarrow ,"\"%s == %s\" is false (%s = %g, %s = %g).",#a,#b,#a,(double)(a),#b,(double)(b))

Equality assertion macro, which throws an MHA_Error (p. 413) with the values.

Functions

void mha_debug (const char *fmt,...)

Print an info message (stderr on Linux, OutputDebugString in Windows).

• unsigned **mha_error_helpers::digits** (unsigned n)

Compute number of decimal digits required to represent an unsigned integer.

• unsigned **mha_error_helpers::snprintf_required_length** (const char *formatstring,...)

snprintf_required_length Compute the number of bytes (excluding the terminating nul) required to store the result of an snprintf.

6.92.1 Macro Definition Documentation

```
6.92.1.1 #define Getmsg(

e ) ((e).get_msg())
```

6.93 mha_event_emitter.h File Reference

Classes

- class MHAEvents::connector_base_t
- class MHAEvents::emitter_t

Class for emitting openMHA events.

Namespaces

MHAEvents

Collection of event handling classes.

- 6.94 mha_events.cpp File Reference
- 6.95 mha events.h File Reference

Classes

- class MHAEvents::connector_t< receiver_t >
- class MHAEvents::patchbay_t< receiver_t >

Patchbay which connects any event emitter with any member function of the parameter class.

Namespaces

MHAEvents

Collection of event handling classes.

6.96 mha_fftfb.cpp File Reference

Classes

- class MHAOvlFilter::barkscale::hz2bark_t
- class MHAOvIFilter::barkscale::bark2hz_t

Namespaces

MHAOvIFilter

Namespace for overlapping FFT based filter bank classes and functions.

- MHAOvlFilter::barkscale
- MHAOvlFilter::FreqScaleFun

Transform functions from linear scale in Hz to new frequency scales.

MHAOvlFilter::ShapeFun

Shape functions for overlapping filters.

Macros

#define BARKSCALE ENTRIES 50

Functions

mha_real_t MHAOvlFilter::FreqScaleFun::hz2hz (mha_real_t x)

Dummy scale transformation Hz to Hz.

- mha real t MHAOvIFilter::FreqScaleFun::hz2khz (mha real t x)
- mha real t MHAOvIFilter::FreqScaleFun::hz2octave (mha real t x)
- mha_real_t MHAOvlFilter::FreqScaleFun::hz2third_octave (mha_real_t x)
- mha real t MHAOvlFilter::FreqScaleFun::hz2bark (mha real t x)

Transformation to bark scale.

- mha_real_t MHAOvlFilter::FreqScaleFun::hz2bark_analytic (mha_real_t)
- mha_real_t MHAOvIFilter::FreqScaleFun::hz2erb (mha_real_t)
- mha_real_t MHAOvlFilter::FreqScaleFun::hz2erb_glasberg1990 (mha_real_t)
- mha real t MHAOvlFilter::FreqScaleFun::hz2log (mha real t x)

Third octave frequency scale.

- mha_real_t MHAOvlFilter::FreqScaleFun::inv_scale (mha_real_t, mha_real_← t(*)(mha_real_t))
- mha_real_t MHAOvlFilter::ShapeFun::rect (mha_real_t x)

Filter shape function for rectangular filters.

mha_real_t MHAOvlFilter::ShapeFun::linear (mha_real_t x)

Filter shape function for sawtooth filters.

• mha real t MHAOvlFilter::ShapeFun::hann (mha real t x)

Filter shape function for hanning shaped filters.

- mha_real_t MHAOvlFilter::ShapeFun::expflt (mha_real_t)
- mha_real_t MHAOvIFilter::ShapeFun::gauss (mha_real_t)
- mha_real_t filtershapefun (mha_real_t f, MHAOvlFilter::band_descriptor_t b, mha
 _real_t plateau)

Variables

- mha_real_t MHAOvlFilter::barkscale::vfreq [BARKSCALE_ENTRIES]
- mha_real_t MHAOvlFilter::barkscale::vbark [BARKSCALE_ENTRIES]

Classes

- class MHAOvIFilter::band_descriptor_t
- class MHAOvIFilter::scale_var_t
- class MHAOvIFilter::fscale_t

6.97 mha_fftfb.hh File Reference

- class MHAOvIFilter::fscale_bw_t
- class MHAOvIFilter::fftfb_vars_t

Set of configuration variables for FFT-based overlapping filters.

class MHAOvIFilter::fspacing_t

Class for frequency spacing, used by filterbank shape generator class.

class MHAOvIFilter::fftfb_t

FFT based overlapping filter bank.

class MHAOvlFilter::overlap_save_filterbank_t

A time-domain minimal phase filter bank with frequency shapes from **MHAOvIFilter::fftfb_t** (p. 582).

- class MHAOvlFilter::overlap save filterbank t::vars t
- class MHAOvlFilter::overlap_save_filterbank_analytic_t
- class MHAOvIFilter::fftfb_ac_info_t

Namespaces

MHAOvlFilter

Namespace for overlapping FFT based filter bank classes and functions.

Typedefs

typedef mha_real_t(MHAOvlFilter::scale_fun_t) (mha_real_t)

- 6.98 mha_fifo.cpp File Reference
- 6.99 mha fifo.h File Reference

Classes

class mha_fifo_t< T >

A FIFO class for blocksize adaptation Synchronization: None.

class mha drifter fifo t< T >

A FIFO class for blocksize adaptation without Synchronization.

class mha_fifo_thread_platform_t

Abstract base class for synchronizing multithreaded (producer/consumer) fifo operations.

- class mha_fifo_posix_threads_t
- class mha_fifo_thread_guard_t

Simple Mutex Guard Class.

class mha_fifo_lw_t< T >

This FIFO uses locks to synchronize access.

class mha_dblbuf_t< FIFO >

The doublebuffer adapts blocksizes between an outer process, which provides input data and takes output data, and an inner process, which processes the input signal and generates output data using a different block size than the outer process.

class mha_rt_fifo_element_t< T >

Object wrapper for **mha_rt_fifo_t** (p. 429).

class mha_rt_fifo_t< T >

Template class for thread safe, half real time safe fifo without explixit locks.

Macros

- #define mha_fifo_thread_platform_implementation_t mha_fifo_posix_threads_t
- 6.99.1 Macro Definition Documentation
- 6.99.1.1 #define mha_fifo_thread_platform_implementation_t mha_fifo_posix_threads_t
- 6.100 mha filter.cpp File Reference

Functions

std::vector< mha_real_t > diff_coeffs ()

6.100.1 Function Documentation

6.100.1.1 std::vector<mha_real_t> diff_coeffs ()

6.101 mha_filter.hh File Reference

Header file for IIR filter classes.

Classes

· class MHAFilter::filter t

Generic IIR filter class.

• class MHAFilter::diff t

Differentiator class (non-normalized)

· class MHAFilter::o1_ar_filter_t

First order attack-release lowpass filter.

· class MHAFilter::o1flt lowpass t

First order low pass filter.

class MHAFilter::o1flt_maxtrack_t

First order maximum tracker.

class MHAFilter::o1flt_mintrack_t

First order minimum tracker.

- class MHAFilter::iir_filter_state_t
- class MHAFilter::iir_filter_t

IIR filter class wrapper for integration into parser structure.

- class MHAFilter::adapt filter state t
- class MHAFilter::adapt_filter_param_t
- class MHAFilter::adapt_filter_t

Adaptive filter.

class MHAFilter::fftfilter_t

FFT based FIR filter implementation.

class MHAFilter::fftfilterbank_t

FFT based FIR filterbank implementation.

struct MHAFilter::transfer function t

a structure containing a source channel number, a target channel number, and an impulse response.

struct MHAFilter::transfer_matrix_t

A sparse matrix of transfer function partitionss.

class MHAFilter::partitioned_convolution_t

A filter class for partitioned convolution.

struct MHAFilter::partitioned_convolution_t::index_t

Bookkeeping class.

class MHAFilter::smoothspec_t

Smooth spectral gains, create a windowed impulse response.

class MHAFilter::resampling_filter_t

Hann shaped low pass filter for resampling.

class MHAFilter::polyphase_resampling_t

A class that performs polyphase resampling.

class MHAFilter::blockprocessing_polyphase_resampling_t

A class that does polyphase resampling and takes into account block processing.

class MHAFilter::iir_ord1_real_t

First order recursive filter.

Namespaces

MHAFilter

Namespace for IIR and FIR filter classes.

Functions

- void MHAFilter::make_friendly_number (mha_real_t &x)
- void MHAFilter::make_friendly_number (mha_complex_t &x)
- void MHAFilter::make_friendly_number (double &x)
- void MHAFilter::o1_lp_coeffs (const mha_real_t tau, const mha_real_t fs, mha_real t &c1, mha_real_t &c2)

Set first order filter coefficients from time constant and sampling rate.

void MHAFilter::butter_stop_ord1 (double *A, double *B, double f1, double f2, double fs)

Setup a first order butterworth band stop filter.

• MHASignal::waveform_t * MHAFilter::spec2fir (const mha_spec_t *spec, const unsigned int fftlen, const MHAWindow::base_t &window, const bool minphase)

Create a windowed impulse response/FIR filter coefficients from a spectrum.

unsigned MHAFilter::gcd (unsigned a, unsigned b)

greatest common divisor

double MHAFilter::sinc (double x)

sin(x)/x function, coping with x=0.

std::pair< unsigned, unsigned > MHAFilter::resampling_factors (float source_
 sampling_rate, float target_sampling_rate, float factor=1.0f)

Computes rational resampling factor from two sampling rates.

6.101.1 Detailed Description

Header file for IIR filter classes.

6.102 mha_generic_chain.cpp File Reference

Functions

• void mhaconfig_compare (mhaconfig_t req, mhaconfig_t avail, const char *cpref)

```
6.102.1 Function Documentation
```

6.103 mha_generic_chain.h File Reference

Classes

- class mhachain::plugs_t
- · class mhachain::chain base t

Namespaces

mhachain

Macros

- #define MHAPLUGIN_OVERLOAD_OUTDOMAIN
- 6.103.1 Macro Definition Documentation
- 6.103.1.1 #define MHAPLUGIN_OVERLOAD_OUTDOMAIN
- 6.104 mha_io_ifc.h File Reference

Typedefs

typedef int(* IOProcessEvent_t) (void *handle, mha_wave_t *sIn, mha_wave_t **s
 Out)

Event handler for signal stream.

• typedef void(* IOStoppedEvent_t) (void *handle, int proc_err, int io_err)

Event handler for stop event.

typedef void(* IOStartedEvent_t) (void *handle)

Event handler for start event.

- typedef int(* IOInit_t) (int fragsize, float samplerate, IOProcessEvent_t proc_event, void *proc_handle, IOStartedEvent_t start_event, void *start_handle, IOStoppedEvent_← t stop_event, void *stop_handle, void **handle)
- typedef int(* **IOPrepare_t**) (void *handle, int num_inchannels, int num_outchannels)
- typedef int(* IOStart t) (void *handle)
- typedef int(* IOStop_t) (void *handle)
- typedef int(* IORelease_t) (void *handle)
- typedef int(* IOSetVar t) (void *handle, const char *cmd, char *retval, unsigned int len)
- typedef const char *(* IOStrError_t) (void *handle, int err)
- typedef void(* IODestroy_t) (void *handle)

6.104.1 Typedef Documentation

6.104.1.1 typedef int(* IOProcessEvent_t) (void *handle, mha_wave_t *sln, mha_wave_t **sOut)

Event handler for signal stream.

This event handler needs to be realtime compatible. All signal path processing will be performed in this callback.

6.104.1.2 typedef void(* IOStoppedEvent_t) (void *handle, int proc_err, int io_err)

Event handler for stop event.

This event handler needs to be realtime compatible. The function must return immediatly.

6.104.1.3 typedef void(* IOStartedEvent_t) (void *handle)

Event handler for start event.

This event handler needs to be realtime compatible. The function must return immediatly.

- 6.104.1.4 typedef int(* IOInit_t) (int fragsize, float samplerate, IOProcessEvent_t proc_event, void *proc_handle, IOStartedEvent_t start_event, void *start_handle, IOStoppedEvent_t stop_event, void *stop_handle, void **handle)
- 6.104.1.5 typedef int(* IOPrepare_t) (void *handle, int num_inchannels, int num_outchannels)
- 6.104.1.6 typedef int(* IOStart_t) (void *handle)
- 6.104.1.7 typedef int(* IOStop_t) (void *handle)
- 6.104.1.8 typedef int(* IORelease_t) (void *handle)
- 6.104.1.9 typedef int(* IOSetVar_t) (void *handle, const char *cmd, char *retval, unsigned int len)
- 6.104.1.10 typedef const char*(* IOStrError_t) (void *handle, int err)
- 6.104.1.11 typedef void(* IODestroy t) (void *handle)
- 6.105 mha_multisrc.cpp File Reference

Namespaces

MHAMultiSrc

Collection of classes for selecting audio chunks from multiple sources.

6.106 mha multisrc.h File Reference

Classes

- class MHAMultiSrc::channel_t
 class MHAMultiSrc::channels_t
 class MHAMultiSrc::base_t
 - Base class for source selection.
- class MHAMultiSrc::waveform_tclass MHAMultiSrc::spectrum_t

Namespaces

MHAMultiSrc

Collection of classes for selecting audio chunks from multiple sources.

6.107 mha_os.cpp File Reference

Functions

- std::string mha_getenv (std::string envvar)
- std::list< std::string > mha_library_paths ()
- std::list< std::string > list_dir (const std::string &path, const std::string &pattern)

```
6.107.1 Function Documentation
```

```
6.107.1.1 std::string mha_getenv ( std::string envvar )
```

```
6.107.1.2 std::list<std::string> mha_library_paths ( )
```

6.108 mha_os.h File Reference

Classes

class dynamiclib_t

Macros

- #define mha loadlib(x) dlopen(x,RTLD NOW)
- #define mha_freelib(x) dlclose(x)
- #define **mha_freelib_success**(x) (x == 0)
- #define mha_getlibfun(h, x) x ## _cb = (x ## _t)dlsym(h,#x)
- #define mha_getlibfun_checked(h, x) x ## _cb = (x ## _t)dlsym(h,#x);if(! x ## _cb) throw MHA_Error(__FILE__,_LINE__,"Function " #x " is undefined.")
- #define mha_loadlib_error(x) dlerror()
- #define mha_lib_extension ".so"
- #define mha msleep(milliseconds) usleep((milliseconds)*1000)
- #define FMTsz "%zu"

printf modifier to print integers of type size_t

- #define MHA_RESOLVE(h, t) t ## _cb = (t ## _t)(h->resolve(#t))
- #define MHA RESOLVE CHECKED(h, t) t ## cb = (t ## t)(h->resolve checked(#t))

Typedefs

typedef void * mha_libhandle_t

Functions

- std::string mha_getenv (std::string envvar)
- std::list< std::string > mha_library_paths ()
- std::list< std::string > list_dir (const std::string &path, const std::string &pattern)
- void mha_hton (float *data, unsigned int len)
- void mha_ntoh (float *data, unsigned int len)
- void mha_hton (uint32_t *data, unsigned int len)
- void **mha ntoh** (uint32 t *data, unsigned int len)
- void mha_hton (int32_t *data, unsigned int len)
- void mha_ntoh (int32_t *data, unsigned int len)
- 6.108.1 Macro Definition Documentation
- 6.108.1.1 #define mha_loadlib(

x) dlopen(x,RTLD_NOW)

6.108.1.2 #define mha freelib(

x) dlclose(x)

6.108.1.3 #define mha_freelib_success(

x) (x == 0)

```
6.108.1.4 #define mha_getlibfun(
                        x ) x ## _cb = (x ## _t)dlsym(h,#x)
6.108.1.5 #define mha_getlibfun_checked(
                         x ) x ## _cb = (x ## _t)dlsym(h,#x);if(! x ## _cb) throw
           MHA_Error(__FILE__,__LINE__,"Function " #x " is undefined.")
6.108.1.6 #define mha loadlib error(
                        x ) dlerror()
6.108.1.7 #define mha_lib_extension ".so"
6.108.1.8 #define mha_msleep(
                        milliseconds ) usleep((milliseconds)*1000)
6.108.1.9 #define FMTsz "%zu"
printf modifier to print integers of type size_t
6.108.1.10 #define MHA_RESOLVE(
                          t ) t ## _cb = (t ## _t)(h->resolve(#t))
6.108.1.11 #define MHA RESOLVE CHECKED(
                          t ) t ## _cb = (t ## _t)(h->resolve_checked(#t))
6.108.2 Typedef Documentation
6.108.2.1 typedef void* mha libhandle t
6.108.3 Function Documentation
6.108.3.1 std::string mha_getenv (
                        std::string envvar )
6.108.3.2 std::list<std::string> mha_library_paths ( )
6.108.3.3 std::list<std::string> list_dir (
                        const std::string & path,
                        const std::string & pattern )
```

```
6.108.3.4 void mha hton (
                       float * data,
                       unsigned int len ) [inline]
6.108.3.5 void mha ntoh (
                       float * data,
                       unsigned int len ) [inline]
6.108.3.6 void mha_hton (
                       uint32 t * data,
                       unsigned int len ) [inline]
6.108.3.7 void mha ntoh (
                       uint32 t * data,
                       unsigned int len ) [inline]
6.108.3.8 void mha hton (
                       int32_t * data,
                       unsigned int len ) [inline]
6.108.3.9 void mha ntoh (
                       int32_t * data,
                       unsigned int len ) [inline]
6.109
       mha parser.cpp File Reference
```

Namespaces

MHAParser

Name space for the openMHA-Parser configuration language.

MHAParser::StrCnv

String converter namespace.

Macros

• #define MHAPLATFORM "undefined-linux"

Functions

- int MHAParser::get_precision ()
- int MHAParser::StrCnv::num_brackets (const std::string &s)

Return number of brackets at beginning and end of string.

- int MHAParser::StrCnv::bracket_balance (const std::string &s)
- static std::ostream & write_float (std::ostream &o, const float &f)
- static std::string parse_1_float (const std::string &s, mha_real_t &v)

This internal function parses a floating point number from the beginning of a string.

static std::string parse_1_complex (const std::string &s, mha_complex_t &v)

This internal function parses a complex number from the beginning of a string.

```
6.109.1 Macro Definition Documentation
```

6.109.1.1 #define MHAPLATFORM "undefined-linux"

6.109.2 Function Documentation

This internal function parses a floating point number from the beginning of a string.

Parameters

s	The string to parse
V	The float variable to fill with a value

Returns

The rest of the string.

This internal function parses a complex number from the beginning of a string.

Parameters

s	The string to parse
V	The complex variable to fill with a value

Returns

The rest of the string.

6.110 mha_parser.hh File Reference

Header file for the MHA-Parser script language.

Classes

class MHAParser::keyword_list_t

Keyword list class.

- class MHAParser::expression t
- class MHAParser::entry_t
- class MHAParser::base_t

Base class for all parser items.

- class MHAParser::base_t::replace_t
- class MHAParser::parser_t

Parser node class.

- class MHAParser::c_ifc_parser_t
- class MHAParser::monitor t

Base class for monitors and variable nodes.

class MHAParser::variable_t

Base class for variable nodes.

class MHAParser::range_var_t

Base class for all variables with a numeric value range.

class MHAParser::kw_t

Variable with keyword list value.

class MHAParser::string_t

Variable with a string value.

class MHAParser::vstring_t

Vector variable with string values.

class MHAParser::bool t

Variable with a boolean value ("yes"/"no")

class MHAParser::int_t

Variable with integer value.

class MHAParser::float_t

Variable with float value.

class MHAParser::complex t

Variable with complex value.

class MHAParser::vint_t

Variable with vector<int> value.

class MHAParser::vfloat t

Vector variable with float value.

class MHAParser::vcomplex t

Vector variable with complex value.

· class MHAParser::mfloat_t

Matrix variable with float value.

class MHAParser::mcomplex_t

Matrix variable with complex value.

class MHAParser::int_mon_t

Monitor variable with int value.

class MHAParser::bool_mon_t

Monitor with string value.

class MHAParser::string_mon_t

Monitor with string value.

class MHAParser::vstring_mon_t

Vector of monitors with string value.

class MHAParser::vint_mon_t

Vector of ints monitor.

class MHAParser::mint_mon_t

Matrix of ints monitor.

class MHAParser::vfloat_mon_t

Vector of floats monitor.

class MHAParser::mfloat mon t

Matrix of floats monitor.

class MHAParser::float mon t

Monitor with float value.

class MHAParser::complex mon t

Monitor with complex value.

class MHAParser::vcomplex_mon_t

Monitor with vector of complex values.

class MHAParser::mcomplex_mon_t

Matrix of complex numbers monitor.

class MHAParser::commit t< receiver t >

Parser variable with event-emission functionality.

class MHAParser::mhaconfig_mon_t

Namespaces

MHAParser

Name space for the openMHA-Parser configuration language.

MHAParser::StrCnv

String converter namespace.

Macros

- #define **DEFAULT RETSIZE** 0x100000
- #define insert_member(x) insert_item(#x,&x)

Macro to insert a member variable into a parser.

Typedefs

- typedef std::string(base t::* MHAParser::opact t) (expression t &)
- typedef std::string(base t::* MHAParser::query t) (const std::string &)
- typedef std::map< std::string, opact_t > MHAParser::opact_map_t
- typedef std::map< std::string, query_t > MHAParser::query_map_t
- typedef std::list< entry_t > MHAParser::entry_map_t
- typedef int(* MHAParser::c parse cmd t) (void *, const char *, char *, unsigned int)
- typedef const char *(* MHAParser::c_parse_err_t) (void *, int)

Functions

- std::string MHAParser::commentate (const std::string &s)
- void MHAParser::trim (std::string &s)
- std::string MHAParser::cfg_dump (base_t *, const std::string &)
- std::string MHAParser::cfg_dump_short (base_t *, const std::string &)
- std::string MHAParser::all_dump (base_t *, const std::string &)
- std::string **MHAParser::mon_dump** (base_t *, const std::string &)
- std::string MHAParser::all_ids (base_t *, const std::string &, const std::string &="")
- void MHAParser::strreplace (std::string &, const std::string &, const std::string &)
 string replace function
- void MHAParser::envreplace (std::string &s)
- void MHAParser::StrCnv::str2val (const std::string &, bool &)

Convert from string.

• void MHAParser::StrCnv::str2val (const std::string &, float &)

Convert from string.

void MHAParser::StrCnv::str2val (const std::string &, mha_complex_t &)

Convert from string.

• void MHAParser::StrCnv::str2val (const std::string &, int &)

Convert from string.

• void MHAParser::StrCnv::str2val (const std::string &, keyword list t &)

Convert from string.

• void MHAParser::StrCnv::str2val (const std::string &, std::string &)

Convert from string.

template<class arg t >

void **MHAParser::StrCnv::str2val** (const std::string &s, std::vector< arg_t > &val)

Converter for vector types.

template<>

void MHAParser::StrCnv::str2val< mha_real_t > (const std::string &s, std::vector< mha_real_t > &v)

Converter for vector<mha_real_t> with Matlab-style expansion.

template<class arg_t >

void **MHAParser::StrCnv::str2val** (const std::string &s, std::vector< std::vector< arg_t >> &val)

Converter for matrix types.

• std::string MHAParser::StrCnv::val2str (const bool &)

Convert to string.

• std::string MHAParser::StrCnv::val2str (const float &)

Convert to string.

• std::string MHAParser::StrCnv::val2str (const mha complex t &)

Convert to string.

• std::string MHAParser::StrCnv::val2str (const int &)

Convert to string.

std::string MHAParser::StrCnv::val2str (const keyword_list_t &)

Convert to string.

std::string MHAParser::StrCnv::val2str (const std::string &)

Convert to string.

- std::string MHAParser::StrCnv::val2str (const std::vector< float > &)
 Convert to string.
- std::string MHAParser::StrCnv::val2str (const std::vector< mha_complex_t > &)
 Convert to string.
- std::string MHAParser::StrCnv::val2str (const std::vector< int > &)
 Convert to string.
- std::string MHAParser::StrCnv::val2str (const std::vector< std::vector< int > > &)
 Convert to string.
- std::string MHAParser::StrCnv::val2str (const std::vector< std::string > &)
 Convert to string.
- std::string MHAParser::StrCnv::val2str (const std::vector< std::vector< float > > &)
 Convert to string.
- std::string MHAParser::StrCnv::val2str (const std::vector< std::vector< mha_ \hookleftarrow complex_t >> &)

Convert to string.

6.110.1 Detailed Description

Header file for the MHA-Parser script language.

- 6.110.2 Macro Definition Documentation
- 6.110.2.1 #define DEFAULT RETSIZE 0x100000
- 6.110.2.2 #define insert_member(x) insert_item(#x,&x)

Macro to insert a member variable into a parser.

Parameters

x Member variable to be inserted. Name of member variable will be used as configuration name.

See also MHAParser::parser_t::insert_item() (p. 656).

6.111 mha_plugin.hh File Reference

Header file for MHA C++ plugin class templates.

Classes

- class MHAPlugin::cfg_chain_t< runtime_cfg_t >
- class MHAPlugin::config_t< runtime_cfg_t >

Template class for thread safe configuration.

class MHAPlugin::plugin_t< runtime_cfg_t >

The template class for C++ openMHA plugins.

Namespaces

MHAPlugin

Namespace for openMHA plugin class templates and thread-safe runtime configurations.

Macros

- #define **declspec**(p)
- #define WINAPI
- #define HINSTANCE int
- #define GITCOMMITHASH "independent-plugin-build"
- #define MHAPLUGIN_PROC_CALLBACK_PREFIX(prefix, classname, indom, outdom)
- #define MHAPLUGIN INIT CALLBACKS PREFIX(prefix, classname)
- #define **MHAPLUGIN_CALLBACKS_PREFIX**(prefix, classname, indom, outdom)

 C++ wrapper macro for the plugin interface.
- #define MHAPLUGIN_DOCUMENTATION_PREFIX(prefix, cat, doc)
- #define MHAPLUGIN_PROC_CALLBACK(plugname, classname, indom, outdom) M←
 HAPLUGIN_PROC_CALLBACK_PREFIX(MHA_STATIC_ ## plugname ## _←
 ,classname,indom,outdom)
- #define MHAPLUGIN_INIT_CALLBACKS(plugname, classname) MHAPLUGIN_INIT
 —CALLBACKS_PREFIX(MHA_STATIC_## plugname ## _,classname)
- #define MHAPLUGIN_CALLBACKS(plugname, classname, indom, outdom) MHAPLU
 GIN_CALLBACKS_PREFIX(MHA_STATIC_## plugname ## _,classname,indom,outdom)
 C++ wrapper macro for the plugin interface.
- #define MHAPLUGIN_DOCUMENTATION(plugname, cat, doc) MHAPLUGIN_DOCU
 MENTATION_PREFIX(MHA_STATIC_## plugname ## _,cat,doc)

Wrapper macro for the plugin documentation interface.

Functions

__attribute__ ((unused)) static const char *mha_git_commit_hash
 store git commit hash in every binary plgin to support reproducible research

6.111.1 Detailed Description

Header file for MHA C++ plugin class templates.

This file defines useful macros and template classes for the development of MHA plugins. A set of macros wraps a C++ interface around the ANSI-C plugin interface. The plugin_t template class defines a corresponding C++ class with all required members. This class can make use of thread safe configurations (config_t).

```
6.111.2 Macro Definition Documentation
6.111.2.1 #define __declspec(
                      p)
6.111.2.2 #define WINAPI
6.111.2.3 #define HINSTANCE int
6.111.2.4 #define GITCOMMITHASH "independent-plugin-build"
6.111.2.5 #define MHAPLUGIN PROC CALLBACK PREFIX(
                      prefix,
                      classname,
                      indom,
                      outdom )
6.111.2.6 #define MHAPLUGIN_INIT_CALLBACKS_PREFIX(
                      prefix,
                      classname )
6.111.2.7 #define MHAPLUGIN_DOCUMENTATION_PREFIX(
                      prefix,
                      cat,
                      doc )
6.111.2.8 #define MHAPLUGIN_PROC_CALLBACK(
                      plugname,
                      classname,
                      indom.
                      outdom ) MHAPLUGIN PROC CALLBACK PREFIX(MHA_STATIC_##
          plugname ## _,classname,indom,outdom)
6.111.2.9 #define MHAPLUGIN_INIT_CALLBACKS(
                      plugname,
                      classname ) MHAPLUGIN INIT CALLBACKS PREFIX(MHA STATIC
          ## plugname ## ,classname)
6.111.3 Function Documentation
6.111.3.1
         attribute (
                     (unused) ) const
store git commit hash in every binary plgin to support reproducible research
```

6.112 mha_profiling.c File Reference

Functions

```
void mha_tic (mha_tictoc_t *t)
```

- void mha_platform_tic (mha_platform_tictoc_t *t)
- float mha_toc (mha_tictoc_t *t)
- float mha_platform_toc (mha_platform_tictoc_t *t)

```
6.112.1 Function Documentation
```

```
6.112.1.3 float mha_toc ( mha_tictoc_t *t )
```

```
6.112.1.4 float mha_platform_toc (
mha_platform_tictoc_t * t )
```

6.113 mha_profiling.h File Reference

Classes

struct mha_tictoc_t

Typedefs

typedef mha_tictoc_t mha_platform_tictoc_t

Functions

- void mha_platform_tic (mha_platform_tictoc_t *t)
- float mha_platform_toc (mha_platform_tictoc_t *t)

```
6.113.1 Typedef Documentation
6.113.1.1 typedef mha_tictoc_t mha_platform_tictoc_t
6.113.2 Function Documentation
6.113.2.1 void mha_platform_tic (
                      mha_platform_tictoc_t * t )
6.113.2.2 float mha_platform_toc (
                      mha_platform_tictoc_t * t )
6.114
       mha_ruby.cpp File Reference
Typedefs
   typedef VALUE(* rb_f_t) (...)
Functions

    static void mha_free (void *mha)

    static VALUE mha_alloc (VALUE klass)

    static VALUE mha_exit_request (VALUE self)

    static VALUE mha_parse (VALUE self, VALUE request)

   void Init_mha_ruby ()
6.114.1 Typedef Documentation
6.114.1.1 typedef VALUE(* rb_f_t) (...)
6.114.2 Function Documentation
6.114.2.1 static void mha_free (
                      void * mha ) [static]
6.114.2.2 static VALUE mha_alloc (
                      VALUE klass ) [static]
6.114.2.3 static VALUE mha_exit_request (
                      VALUE self ) [static]
6.114.2.4 static VALUE mha_parse (
                      VALUE self,
                      VALUE request ) [static]
6.114.2.5 void Init_mha_ruby ( )
6.115 mha_signal.cpp File Reference
Classes
```

© 2005-2018 HörTech gGmbH, Oldenburg

class MHASignal::hilbert_fftw_t

Namespaces

MHASignal

Namespace for audio signal handling and processing classes.

Macros

- #define MHA ID UINT VECTOR "MHASignal::uint vector t"
- #define MHA_ID_MATRIX "MHASignal::matrix_t"
- #define ASSERT EQUAL DIM(a, b)
- #define ASSERT_EQUAL_DIM_PTR(a, b)

Functions

- void set minabs (mha spec t &self, const mha real t &m)
- mha_wave_t & operator+= (mha_wave_t &self, const mha_real_t &v)
 Addition operator.
- mha_wave_t & operator*= (mha_wave_t &self, const mha_real_t &v)
 Element-wise multiplication operator.
- mha_spec_t & operator*= (mha_spec_t &self, const mha_real_t &v)
 Element-wise multiplication operator.
- mha_wave_t & operator*= (mha_wave_t &self, const mha_wave_t &v)

 Element-wise multiplication operator.
- mha_spec_t & operator*= (mha_spec_t &self, const mha_wave_t &v)

 Element-wise multiplication operator.
- mha_spec_t & operator*= (mha_spec_t &self, const mha_spec_t &v)

 Element-wise multiplication operator.
- mha_spec_t & safe_div (mha_spec_t &self, const mha_spec_t &v, mha_real_t eps)
 In-Place division with lower limit on divisor.
- mha_spec_t & operator/= (mha_spec_t &self, const mha_spec_t &v)
 Element-wise division operator.
- mha_wave_t & operator/= (mha_wave_t &self, const mha_wave_t &v)
 Element-wise division operator.
- mha_spec_t & operator+= (mha_spec_t &self, const mha_spec_t &v)
 Addition operator.
- mha_spec_t & operator+= (mha_spec_t &self, const mha_real_t &v)
 Addition operator.
- mha_wave_t & operator+= (mha_wave_t &self, const mha_wave_t &v)
 Addition operator.
- mha_wave_t & operator-= (mha_wave_t &self, const mha_wave_t &v)
 Subtraction operator.
- mha_spec_t & operator-= (mha_spec_t &self, const mha_spec_t &v)
 Subtraction operator.
- mha_fft_t mha_fft_new (unsigned int n)

Create a new instance of an FFT object.

void mha_fft_free (mha_fft_t h)

Remove an FFT object.

• void mha_fft_wave2spec (mha_fft_t h, const mha_wave_t *in, mha_spec_t *out)

Perform an FFT on each channel of input waveform signal.

void mha_fft_wave2spec (mha_fft_t h, const mha_wave_t *in, mha_spec_t *out, bool swap)

Tranform waveform segment into spectrum.

- void mha_fft_spec2wave (mha_fft_t h, const mha_spec_t *in, mha_wave_t *out)

 Perform an inverse FFT on each channel of input spectrum.
- void mha_fft_spec2wave (mha_fft_t h, const mha_spec_t *in, mha_wave_t *out, unsigned int offset)

Perform an inverse FFT on each channel of input spectrum.

- void mha_fft_forward (mha_fft_t h, mha_spec_t *sIn, mha_spec_t *sOut)

 Complex to complex FFT (forward).
- void mha_fft_backward (mha_fft_t h, mha_spec_t *sIn, mha_spec_t *sOut)

 Complex to complex FFT (backward).
- void mha_fft_forward_scale (mha_fft_t h, mha_spec_t *sIn, mha_spec_t *sOut)

 Complex to complex FFT (forward).
- void mha_fft_backward_scale (mha_fft_t h, mha_spec_t *sIn, mha_spec_t *sOut)

 Complex to complex FFT (backward).
- void mha_fft_wave2spec_scale (mha_fft_t h, const mha_wave_t *in, mha_spec_←
 t *out)

Tranform waveform segment into spectrum.

void mha_fft_spec2wave_scale (mha_fft_t h, const mha_spec_t *in, mha_wave_←
t *out)

Tranform spectrum into waveform segment.

- std::vector< float > std_vector_float (const mha_wave_t &w)
 - Converts a mha_wave_t (p. 462) structure into a std::vector<float> (interleaved order).
- std::vector< std::vector< float >> std_vector_vector_float (const mha_wave_t &w)
 Converts a mha_wave_t (p. 462) structure into a std::vector< std::vector<float>> (outer vector represents channels).
- std::vector< std::vector< mha_complex_t >> std_vector_vector_complex (const mha_spec_t &w)

Converts a **mha_spec_t** (p. 432) structure into a std::vector< std::vector< mha_complex_t> > (outer vector represents channels).

- static mha_real_t intensity (const mha_spec_t &s, unsigned int channel, unsigned int fftlen, mha_real_t *sqfreq_response=0)
- void integrate (mha_wave_t &s)

Numeric integration of a signal vector (real values)

void integrate (mha_spec_t &s)

Numeric integration of a signal vector (complex values)

- mha_wave_t & operator^= (mha_wave_t &self, const mha_real_t &arg)
 Exponent operator.
- mha_wave_t range (mha_wave_t s, unsigned int k0, unsigned int len)

Return a time interval from a waveform chunk.

```
    mha_spec_t channels (mha_spec_t s, unsigned int ch_start, unsigned int nch)

        Return a channel interval from a spectrum.
   void assign (mha_wave_t self, const mha_wave_t &val)
         Set all values of waveform 'self' to 'val'.
   void assign (mha_spec_t self, const mha_spec_t &val)
         Set all values of spectrum 'self' to 'val'.
   void timeshift (mha_wave_t &self, int shift)
         Time shift of waveform chunk.
6.115.1 Macro Definition Documentation
6.115.1.1 #define MHA_ID_UINT_VECTOR "MHASignal::uint_vector_t"
6.115.1.2 #define MHA_ID_MATRIX "MHASignal::matrix_t"
6.115.1.3 #define ASSERT EQUAL DIM(
                       b)
6.115.1.4 #define ASSERT_EQUAL_DIM_PTR(
                       a,
                       b)
6.115.2 Function Documentation
6.115.2.1 void set_minabs (
                      mha_spec_t & self,
                      const mha real t & m)
6.115.2.2 mha_spec_t& safe_div (
                      mha_spec_t & self,
                      const mha spec t & v,
                      mha_real_t eps )
In-Place division with lower limit on divisor.
6.115.2.3 static mha_real_t intensity (
                      const mha_spec_t & s,
                      unsigned int channel,
```

mha real t * sqfreq_response = 0) [static]

6.116 mha_signal.hh File Reference

Header file for audio signal handling and processing classes.

unsigned int fftlen,

Classes

class MHASignal::spectrum_t

a signal processing class for spectral data (based on **mha_spec_t** (p. 432))

class MHASignal::waveform_t

signal processing class for waveform data (based on mha_wave_t (p. 462))

class MHASignal::doublebuffer_t

Double-buffering class.

class MHASignal::ringbuffer_t

A ringbuffer class for time domain audio signal, which makes no assumptions with respect to fragment size.

class MHASignal::hilbert_t

Hilbert transformation of a waveform segment.

class MHASignal::minphase_t

Minimal phase function.

- class MHASignal::stat_t
- class MHASignal::delay_wave_t

Delayline containing wave fragments.

- · class MHASignal::delay spec t
- class MHASignal::async_rmslevel_t

Class for asynchronous level metering.

class MHASignal::uint_vector_t

Vector of unsigned values, used for size and index description of n-dimensional matrixes.

class MHASignal::matrix_t

n-dimensional matrix with real or complex floating point values.

class MHASignal::schroeder_t

Schroeder tone complex class.

class MHASignal::quantizer_t

Simple simulation of fixpoint quantization.

class MHASignal::loop_wavefragment_t

Copy a fixed waveform fragment to a series of waveform fragments of other size.

class MHASignal::delay_t

Class to realize a simple delay of waveform streams.

class MHASignal::subsample_delay_t

implements subsample delay in spectral domain.

Namespaces

MHASignal

Namespace for audio signal handling and processing classes.

Macros

- #define M_PI 3.14159265358979323846
- #define mha_round(x) (int)((float)x+0.5)

Functions

void MHASignal::for_each (mha_wave_t *s, mha_real_t(*fun)(mha_real_t))
 Apply a function to each element of a mha_wave_t (p. 462).

mha_real_t MHASignal::lin2db (mha_real_t x)

Conversion from linear scale to dB (no SPL reference)

mha_real_t MHASignal::db2lin (mha_real_t x)

Conversion from dB scale to linear (no SPL reference)

mha_real_t MHASignal::pa2dbspl (mha_real_t x)

Conversion from linear Pascal scale to dB SPL.

• mha_real_t MHASignal::pa22dbspl (mha_real_t x, mha_real_t eps=1e-20f)

Conversion from squared Pascal scale to dB SPL.

mha_real_t MHASignal::dbspl2pa (mha_real_t x)

Conversion from dB SPL to linear Pascal scale.

mha_real_t MHASignal::smp2sec (mha_real_t n, mha_real_t srate)
 conversion from samples to seconds

mha_real_t MHASignal::sec2smp (mha_real_t sec, mha_real_t srate)

conversion from seconds to samples

- mha_real_t MHASignal::bin2freq (mha_real_t bin, unsigned fftlen, mha_real_t srate)
 conversion from fft bin index to frequency
- mha_real_t MHASignal::freq2bin (mha_real_t freq, unsigned fftlen, mha_real_t srate)
 conversion from frequency to fft bin index
- mha_real_t MHASignal::smp2rad (mha_real_t samples, unsigned bin, unsigned fftlen)
 conversion from delay in samples to phase shift
- mha_real_t MHASignal::rad2smp (mha_real_t phase_shift, unsigned bin, unsigned fftlen)

conversion from phase shift to delay in samples

template < class elem_type > std::vector < elem_type > MHASignal::dupvec (std::vector < elem_type > vec, unsigned n)

Duplicate last vector element to match desired size.

template<class elem_type >

std::vector< elem_type > MHASignal::dupvec_chk (std::vector< elem_type > vec, unsigned n)

Duplicate last vector element to match desired size, check for dimension.

bool equal_dim (const mha_wave_t &a, const mha_wave_t &b)

Test for equal dimension of waveform structures.

bool equal dim (const mha wave t &a, const mhaconfig t &b)

Test for match of waveform dimension with mhaconfig structure.

• bool equal_dim (const mha_spec_t &a, const mha_spec_t &b)

Test for equal dimension of spectrum structures.

• bool equal_dim (const mha_spec_t &a, const mhaconfig_t &b)

Test for match of spectrum dimension with mhaconfig structure.

bool equal_dim (const mha_wave_t &a, const mha_spec_t &b)

Test for equal dimension of waveform/spectrum structures.

bool equal_dim (const mha_spec_t &a, const mha_wave_t &b)

Test for equal dimension of waveform/spectrum structures.

void integrate (mha_wave_t &s)

Numeric integration of a signal vector (real values)

void integrate (mha_spec_t &s)

Numeric integration of a signal vector (complex values)

- unsigned int mha_min_1 (unsigned int a)
- unsigned int size (const mha_wave_t &s)

Return size of a waveform structure.

unsigned int size (const mha_spec_t &s)

Return size of a spectrum structure.

unsigned int size (const mha_wave_t *s)

Return size of a waveform structure.

unsigned int size (const mha_spec_t *s)

Return size of a spectrum structure.

void clear (mha_wave_t &s)

Set all values of waveform to zero.

void clear (mha_wave_t *s)

Set all values of waveform to zero.

void clear (mha_spec_t &s)

Set all values of spectrum to zero.

void clear (mha_spec_t *s)

Set all values of spectrum to zero.

void assign (mha_wave_t self, mha_real_t val)

Set all values of waveform 'self' to 'val'.

void assign (mha_wave_t self, const mha_wave_t &val)

Set all values of waveform 'self' to 'val'.

void assign (mha_spec_t self, const mha_spec_t &val)

Set all values of spectrum 'self' to 'val'.

void timeshift (mha_wave_t &self, int shift)

Time shift of waveform chunk.

mha_wave_t range (mha_wave_t s, unsigned int k0, unsigned int len)

Return a time interval from a waveform chunk.

• mha_spec_t channels (mha_spec_t s, unsigned int ch_start, unsigned int nch)

Return a channel interval from a spectrum.

mha real t & value (mha wave t *s, unsigned int fr, unsigned int ch)

Access an element of a waveform structure.

• const mha_real_t & value (const mha_wave_t *s, unsigned int fr, unsigned int ch)

Constant access to an element of a waveform structure.

- mha real t & value (mha wave t *s, unsigned int k)
- mha complex t & value (mha spec t *s, unsigned int k)
- mha_complex_t & value (mha_spec_t *s, unsigned int fr, unsigned int ch)

Access to an element of a spectrum.

const mha_complex_t & value (const mha_spec_t *s, unsigned int fr, unsigned int ch)

Constant access to an element of a spectrum.

mha_real_t & value (mha_wave_t &s, unsigned int fr, unsigned int ch)

Access to an element of a waveform structure.

• const mha_real_t & value (const mha_wave_t &s, unsigned int fr, unsigned int ch)

Constant access to an element of a waveform structure.

• mha_complex_t & value (mha_spec_t &s, unsigned int fr, unsigned int ch)

Access to an element of a spectrum.

- const mha_complex_t & value (const mha_spec_t &s, unsigned int fr, unsigned int ch)

 Constant access to an element of a spectrum.
- std::vector< float > std_vector_float (const mha_wave_t &)
 Converts a mha_wave_t (p. 462) structure into a std::vector<float> (interleaved order).
- std::vector< std::vector< float >> std_vector_vector_float (const mha_wave_t &)

 Converts a mha_wave_t (n_462) structure into a std::vector< std::vector< float> > (outer vector)

Converts a **mha_wave_t** (p. 462) structure into a std::vector< std::vector< float> > (outer vector represents channels).

std::vector< std::vector< mha_complex_t > > std_vector_vector_complex (const mha_spec_t &)

Converts a **mha_spec_t** (p. 432) structure into a std::vector< std::vector< mha_complex_t> > (outer vector represents channels).

- mha_wave_t & operator+= (mha_wave_t &, const mha_real_t &)
 Addition operator.
- mha_wave_t & operator+= (mha_wave_t &, const mha_wave_t &)
 Addition operator.
- mha_wave_t & operator-= (mha_wave_t &, const mha_wave_t &)
 Subtraction operator.
- mha_spec_t & operator-= (mha_spec_t &, const mha_spec_t &)
 Subtraction operator.
- mha_wave_t & operator*= (mha_wave_t &, const mha_real_t &)

 Element-wise multiplication operator.
- mha_wave_t & operator*= (mha_wave_t &, const mha_wave_t &)

 Element-wise multiplication operator.
- mha_spec_t & operator*= (mha_spec_t &, const mha_real_t &)

 Element-wise multiplication operator.
- mha_spec_t & operator*= (mha_spec_t &, const mha_wave_t &)
 Element-wise multiplication operator.
- mha_spec_t & operator*= (mha_spec_t &, const mha_spec_t &)

 Element-wise multiplication operator.
- mha_spec_t & operator/= (mha_spec_t &, const mha_spec_t &)
 Element-wise division operator.
- mha_wave_t & operator/= (mha_wave_t &, const mha_wave_t &)
 Element-wise division operator.
- mha_spec_t & operator+= (mha_spec_t &, const mha_spec_t &)
 Addition operator.
- mha_spec_t & operator+= (mha_spec_t &, const mha_real_t &)
 Addition operator.
- void set_minabs (mha_spec_t &, const mha_real_t &)
- mha_spec_t & safe_div (mha_spec_t &self, const mha_spec_t &v, mha_real_t eps)

 In-Place division with lower limit on divisor.

mha_wave_t & operator^= (mha_wave_t &self, const mha_real_t &arg)
 Exponent operator.

void MHASignal::copy_channel (mha_spec_t &self, const mha_spec_t &src, unsigned sch, unsigned dch)

Copy one channel of a source signal.

• void MHASignal::copy_channel (mha_wave_t &self, const mha_wave_t &src, unsigned src_channel, unsigned dest_channel)

Copy one channel of a source signal.

mha_real_t MHASignal::rmslevel (const mha_spec_t &s, unsigned int channel, unsigned int fftlen)

Return RMS level of a spectrum channel.

mha_real_t MHASignal::colored_intensity (const mha_spec_t &s, unsigned int channel, unsigned int fftlen, mha_real_t sqfreq_response[])

Colored spectrum intensity.

mha_real_t MHASignal::maxabs (const mha_spec_t &s, unsigned int channel)
 Find maximal absolute value.

• mha_real_t MHASignal::rmslevel (const mha_wave_t &s, unsigned int channel)

Return RMS level of a waveform channel.

mha_real_t MHASignal::maxabs (const mha_wave_t &s, unsigned int channel)
 Find maximal absolute value.

mha_real_t MHASignal::maxabs (const mha_wave_t &s)

Find maximal absolute value.

• mha real t MHASignal::max (const mha wave t &s)

Find maximal value.

mha_real_t MHASignal::min (const mha_wave_t &s)

Find minimal value.

mha_real_t MHASignal::sumsqr_channel (const mha_wave_t &s, unsigned int channel)

Calculate sum of squared values in one channel.

- mha_real_t MHASignal::sumsqr_frame (const mha_wave_t &s, unsigned int frame)

 Calculate sum over all channels of squared values.
- void MHASignal::scale (mha_spec_t *dest, const mha_wave_t *src)
- void MHASignal::limit (mha_wave_t &s, const mha_real_t &min, const mha_real_t &max)

Limit the singal in the waveform buffer to the range [min, max].

- mha_complex_t & set (mha_complex_t &self, mha_real_t real, mha_real_t imag=0)

 Assign real and imaginary parts to a mha_complex_t (p. 400) variable.
- mha_complex_t mha_complex (mha_real_t real, mha_real_t imag=0)

Create a new mha_complex_t (p. 400) with specified real and imaginary parts.

mha_complex_t & set (mha_complex_t &self, const std::complex < mha_real_t > &stdcomplex)

Assign a mha_complex_t (p. 400) variable from a std::complex.

std::complex< mha_real_t > stdcomplex (const mha_complex_t &self)

Create a std::complex from mha_complex_t (p. 400).

mha_complex_t & expi (mha_complex_t &self, mha_real_t angle)

replaces the value of the given **mha_complex_t** (p. 400) with exp(i*b).

double angle (const mha_complex_t &self)

Computes the angle of a complex number in the complex plane.

• mha_complex_t & operator+= (mha_complex_t &self, const mha_complex_t &other)

Addition of two complex numbers, overwriting the first.

mha_complex_t operator+ (const mha_complex_t &self, const mha_complex_
 t &other)

Addition of two complex numbers, result is a temporary object.

mha_complex_t & operator+= (mha_complex_t &self, mha_real_t other_real)

Addition of a complex and a real number, overwriting the complex.

• mha_complex_t operator+ (const mha_complex_t &self, mha_real_t other_real)

Addition of a complex and a real number, result is a temporary object.

- mha_complex_t & operator-= (mha_complex_t &self, const mha_complex_t &other)

 Subtraction of two complex numbers, overwriting the first.
- mha_complex_t operator- (const mha_complex_t &self, const mha_complex_← t &other)

Subtraction of two complex numbers, result is a temporary object.

- mha_complex_t & operator-= (mha_complex_t &self, mha_real_t other_real)

 Subtraction of a complex and a real number, overwriting the complex.
- mha_complex_t operator- (const mha_complex_t &self, mha_real_t other_real)

 Subtraction of a complex and a real number, result is a temporary object.
- mha_complex_t & operator*= (mha_complex_t &self, const mha_complex_t &other)
 Multiplication of two complex numbers, overwriting the first.
- mha_complex_t operator* (const mha_complex_t &self, const mha_complex_
 t &other)

Multiplication of two complex numbers, result is a temporary object.

- mha_complex_t & operator*= (mha_complex_t &self, mha_real_t other_real)

 Multiplication of a complex and a real number, overwriting the complex.
- mha_complex_t & expi (mha_complex_t &self, mha_real_t angle, mha_real_t factor)
 replaces (!) the value of the given mha_complex_t (p. 400) with a * exp(i*b)
- mha_complex_t operator* (const mha_complex_t &self, mha_real_t other_real)

 Multiplication of a complex and a real number, result is a temporary object.
- mha_real_t abs2 (const mha_complex_t &self)

Compute the square of the absolute value of a complex value.

mha_real_t abs (const mha_complex_t &self)

Compute the absolute value of a complex value.

- mha_complex_t & operator/= (mha_complex_t &self, mha_real_t other_real)

 Division of a complex and a real number, overwriting the complex.
- mha_complex_t operator/ (const mha_complex_t &self, mha_real_t other_real)

 Division of a complex and a real number, result is a temporary object.
- mha_complex_t & safe_div (mha_complex_t &self, const mha_complex_t &other, mha_real_t eps, mha_real_t eps2)

Safe division of two complex numbers, overwriting the first.

- mha_complex_t & operator/= (mha_complex_t &self, const mha_complex_t &other)

 Division of two complex numbers, overwriting the first.
- mha_complex_t operator/ (const mha_complex_t &self, const mha_complex_← t &other)

Division of two complex numbers, result is a temporary object.

mha_complex_t operator- (const mha_complex_t &self)

Unary minus on a complex results in a negative temporary object.

• bool operator== (const mha_complex_t &x, const mha_complex_t &y)

Compare two complex numbers for equality.

• bool operator!= (const mha_complex_t &x, const mha_complex_t &y)

Compare two complex numbers for inequality.

void conjugate (mha_complex_t &self)

Replace (!) the value of this **mha_complex_t** (p. 400) with its conjugate.

void conjugate (mha_spec_t &self)

Replace (!) the value of this **mha_spec_t** (p. 432) with its conjugate.

mha_complex_t _conjugate (const mha_complex_t &self)

Compute the cojugate of this complex value.

void reciprocal (mha_complex_t &self)

Replace the value of this complex with its reciprocal.

• mha_complex_t _reciprocal (const mha_complex_t &self)

compute the reciprocal of this complex value.

void normalize (mha complex t &self)

Divide a complex by its absolute value, thereby normalizing it (projecting onto the unit circle).

void normalize (mha_complex_t &self, mha_real_t margin)

Divide a complex by its absolute value, thereby normalizing it (projecting onto the unit circle), with a safety margin.

bool almost (const mha_complex_t &self, const mha_complex_t &other, mha_real_t times epsilon=1e2)

Compare two complex numbers for equality except for a small relative error.

• bool operator< (const mha_complex_t &x, const mha_complex_t &y)

Compares the absolute values of two complex numbers.

• std::ostream & operator<< (std::ostream &o, const mha_complex_t &c)

ostream operator for **mha_complex_t** (p. 400)

std::istream & operator>> (std::istream &i, mha_complex_t &c)

preliminary istream operator for mha_complex_t (p. 400) without error checking

mha_fft_t mha_fft_new (unsigned int n)

Create a new FFT handle.

void mha_fft_free (mha_fft_t h)

Destroy an FFT handle.

 $\bullet \ \ \mathsf{void} \ \ \mathsf{mha_fft_wave2spec} \ \ (\mathsf{mha_fft_t} \ \ \mathsf{h}, \ \mathsf{const} \ \ \mathsf{mha_wave_t} \ \ast \mathsf{in}, \ \mathsf{mha_spec_t} \ \ast \mathsf{out})$

Tranform waveform segment into spectrum.

void mha_fft_wave2spec (mha_fft_t h, const mha_wave_t *in, mha_spec_t *out, bool swaps)

Tranform waveform segment into spectrum.

void mha_fft_spec2wave (mha_fft_t h, const mha_spec_t *in, mha_wave_t *out)

Tranform spectrum into waveform segment.

void mha_fft_spec2wave (mha_fft_t h, const mha_spec_t *in, mha_wave_t *out, unsigned int offset)

Tranform spectrum into waveform segment.

• void mha_fft_forward (mha_fft_t h, mha_spec_t *sIn, mha_spec_t *sOut)

Complex to complex FFT (forward).

• void mha_fft_backward (mha_fft_t h, mha_spec_t *sIn, mha_spec_t *sOut)

Complex to complex FFT (backward).

- void mha_fft_forward_scale (mha_fft_t h, mha_spec_t *sIn, mha_spec_t *sOut)

 Complex to complex FFT (forward).
- void mha_fft_backward_scale (mha_fft_t h, mha_spec_t *sIn, mha_spec_t *sOut)

 Complex to complex FFT (backward).
- void mha_fft_wave2spec_scale (mha_fft_t h, const mha_wave_t *in, mha_spec_←
 t *out)

Tranform waveform segment into spectrum.

void mha_fft_spec2wave_scale (mha_fft_t h, const mha_spec_t *in, mha_wave_←
t *out)

Tranform spectrum into waveform segment.

template<class elem_type >

elem_type MHASignal::kth_smallest (elem_type array[], unsigned n, unsigned k)

Fast search for the kth smallest element of an array.

template<class elem_type >

elem_type **MHASignal::median** (elem_type array[], unsigned n)

Fast median search.

template < class elem_type >

elem_type **MHASignal::mean** (const std::vector< elem_type > &data, elem_type start ← _val)

Calculate average of elements in a vector.

template<class elem_type >

std::vector< elem_type > MHASignal::quantile (std::vector< elem_type > data, const std::vector< elem_type > &p)

Calculate quantile of elements in a vector.

 void MHASignal::saveas_mat4 (const mha_spec_t &data, const std::string &varname, FILE *fh)

Save a openMHA spectrum as a variable in a Matlab4 file.

 void MHASignal::saveas_mat4 (const mha_wave_t &data, const std::string &varname, FILE *fh)

Save a openMHA waveform as a variable in a Matlab4 file.

Save a float vector as a variable in a Matlab4 file.

void MHASignal::copy permuted (mha wave t *dest, const mha wave t *src)

Copy contents of a waveform to a permuted waveform.

Variables

unsigned long int MHASignal::signal counter = 0

Signal counter to produce signal ID strings.

6.116.1 Detailed Description

Header file for audio signal handling and processing classes.

The classes for waveform, spectrum and filterbank signals defined in this file are "intelligent" versions of the basic waveform, spectrum and filterbank structures used in the C function calls.

```
6.116.2 Macro Definition Documentation
6.116.2.1 #define M_PI 3.14159265358979323846
6.116.2.2 #define mha_round(
                      x ) (int)((float)x+0.5)
6.116.3 Function Documentation
6.116.3.1 unsigned int mha_min_1 (
                      unsigned int a ) [inline]
6.116.3.2 mha real t& value (
                      mha_wave_t * s,
                      unsigned int k ) [inline]
6.116.3.3 mha_complex_t& value (
                      mha_spec_t * s,
                      unsigned int k ) [inline]
6.116.3.4 void set_minabs (
                      mha_spec_t &,
                      const mha_real_t & )
6.116.3.5 mha_spec_t& safe_div (
                      mha_spec_t & self,
                      const mha_spec_t & v,
                      mha_real_t eps )
In-Place division with lower limit on divisor.
6.116.3.6 std::ostream& operator<< (
                      std::ostream & o,
                      const mha_complex_t & c ) [inline]
ostream operator for mha_complex_t (p. 400)
```

preliminary istream operator for mha_complex_t (p. 400) without error checking

6.117 mha_signal_fft.h File Reference

Classes

class MHASignal::fft_t

Namespaces

MHASignal

Namespace for audio signal handling and processing classes.

- 6.118 mha_tablelookup.cpp File Reference
- 6.119 mha_tablelookup.hh File Reference

Header file for table lookup classes.

Classes

- class MHATableLookup::table_t
- class MHATableLookup::linear_table_t

Class for interpolation with equidistant x values.

class MHATableLookup::xy_table_t

Class for interpolation with non-equidistant x values.

Namespaces

MHATableLookup

Namespace for table lookup classes.

6.119.1 Detailed Description

Header file for table lookup classes.

6.120 mha_tcp.cpp File Reference

Classes

class MHA_TCP::sock_init_t

Namespaces

MHA TCP

A Namespace for TCP helper classes.

Macros

- #define INVALID_SOCKET (-1)
- #define SOCKET ERROR (-1)
- #define closesocket(fd) (close((fd)))
- #define ASYNC_CONNECT_STARTED EINPROGRESS

Typedefs

· typedef int SOCKET

Functions

std::string MHA_TCP::STRERROR (int err)

Portable conversion from error number to error string.

std::string MHA_TCP::HSTRERROR (int err)

Portable conversion from hostname error number to error string.

• int MHA_TCP::N_ERRNO ()

Portable access to last network error number.

int MHA_TCP::H_ERRNO ()

Portable access to last hostname error number.

• int MHA_TCP::G_ERRNO ()

Portable access to last non-network error number.

- static sockaddr_in host_port_to_sock_addr (const std::string &host, unsigned short port)
- static SOCKET tcp_connect_to (const std::string &host, unsigned short port)
- static SOCKET tcp_connect_to_with_timeout (const std::string &host, unsigned short port, Timeout_Watcher &timeout_watcher)
- static void * thread_start_func (void *thread)

Variables

class MHA_TCP::sock_init_t MHA_TCP::sock_initializer

```
6.120.1 Macro Definition Documentation
6.120.1.1 #define INVALID_SOCKET (-1)
6.120.1.2 #define SOCKET_ERROR (-1)
6.120.1.3 #define closesocket(
                       fd ) (close((fd)))
6.120.1.4 #define ASYNC_CONNECT_STARTED EINPROGRESS
6.120.2 Typedef Documentation
6.120.2.1 typedef int SOCKET
6.120.3 Function Documentation
6.120.3.1 static sockaddr_in host_port_to_sock_addr (
                      const std::string & host,
                      unsigned short port ) [static]
6.120.3.2 static SOCKET tcp_connect_to (
                      const std::string & host,
                      unsigned short port ) [static]
6.120.3.3 static SOCKET tcp_connect_to_with_timeout (
                      const std::string & host,
                      unsigned short port,
                      Timeout_Watcher & timeout_watcher ) [static]
6.120.3.4 static void* thread_start_func (
                      void * thread ) [static]
6.121
       mha tcp.hh File Reference
```

Classes

- struct MHA TCP::OS EVENT TYPE
- class MHA_TCP::Wakeup_Event

A base class for asynchronous wakeup events.

class MHA_TCP::Async_Notify

Portable Multiplexable cross-thread notification.

class MHA_TCP::Event_Watcher

OS-independent event watcher, uses select on Unix and WaitForMultipleObjects on Windows.

class MHA_TCP::Timeout_Event

• class MHA_TCP::Timeout_Watcher

OS-independent event watcher with internal fixed-end-time timeout.

class MHA_TCP::Sockread_Event

Watch socket for incoming data.

- class MHA_TCP::Sockwrite_Event
- class MHA TCP::Sockaccept Event
- class MHA_TCP::Connection

Connection (p. 437) handles Communication between client and server, is used on both sides.

- class MHA TCP::Server
- class MHA_TCP::Client

A portable class for a tcp client connections.

class MHA_TCP::Thread

A very simple class for portable threads.

Namespaces

MHA_TCP

A Namespace for TCP helper classes.

Macros

• #define **Sleep**(x) usleep((x)*1000);

Typedefs

typedef int MHA_TCP::SOCKET

Functions

• std::string MHA_TCP::STRERROR (int err)

Portable conversion from error number to error string.

std::string MHA_TCP::HSTRERROR (int err)

Portable conversion from hostname error number to error string.

int MHA_TCP::N_ERRNO ()

Portable access to last network error number.

• int MHA_TCP::H_ERRNO ()

Portable access to last hostname error number.

• int MHA_TCP::G_ERRNO ()

Portable access to last non-network error number.

double MHA_TCP::dtime ()

Time access function for system's high resolution time, retrieve current time as double.

double MHA TCP::dtime (const struct timeval &tv)

Time access function for unix' high resolution time, converts struct timeval to double.

• struct timeval MHA_TCP::stime (double d)

Time access function for unix' high resolution time, converts time from double to struct timeval.

6.121.1 Macro Definition Documentation

6.121.1.1 #define Sleep(

x) usleep((x)*1000);

- 6.122 mha_toolbox.h File Reference
- 6.123 mha_windowparser.cpp File Reference

Variables

float(* wnd_funs [])(float)

6.123.1 Variable Documentation

6.123.1.1 float(* wnd_funs[])(float)

6.124 mha_windowparser.h File Reference

Classes

· class MHAWindow::base_t

Common base for window types.

class MHAWindow::fun_t

Generic window based on a generator function.

class MHAWindow::rect_t

Rectangular window.

class MHAWindow::bartlett_t

Bartlett window.

class MHAWindow::hanning_t

von-Hann window

class MHAWindow::hamming_t

Hamming window.

class MHAWindow::blackman t

Blackman window.

class MHAWindow::user t

User defined window.

class MHAParser::window t

MHA configuration interface for a window function generator.

Namespaces

MHAWindow

Collection of Window types.

MHAParser

Name space for the openMHA-Parser configuration language.

Functions

float MHAWindow::rect (float)

Rectangular window function.

float MHAWindow::bartlett (float)

Bartlett window function.

float MHAWindow::hanning (float)

Hanning window function.

float MHAWindow::hamming (float)

Hamming window function.

float MHAWindow::blackman (float)

Blackman window function.

6.125 mhachain.cpp File Reference

Classes

class mhachain::mhachain_t

Namespaces

- mhachain
- 6.126 mhafw_lib.cpp File Reference
- 6.127 mhafw_lib.h File Reference

Classes

· class io_lib_t

Class for loading MHA sound IO module.

- class fw_vars_t
- class fw_t

6.128 MHAIOFile.cpp File Reference

Classes

• class io_file_t
File IO.

Macros

- #define DEBUG(x) std::cerr << __FILE__ << ":" << __LINE__ << " " << #x " = " << x
 << std::endl
- #define ERR SUCCESS 0
- #define ERR_IHANDLE -1
- #define ERR_USER -1000
- #define MAX USER ERR 0x500
- #define IOInit MHA_STATIC_MHAIOFile_IOInit
- #define IOPrepare MHA_STATIC_MHAIOFile_IOPrepare
- #define IOStart MHA_STATIC_MHAIOFile_IOStart
- #define IOStop MHA STATIC MHAIOFile IOStop
- #define IORelease MHA STATIC MHAIOFile IORelease
- #define IOSetVar MHA STATIC MHAIOFile IOSetVar
- #define IOStrError MHA_STATIC_MHAIOFile_IOStrError
- #define IODestroy MHA_STATIC_MHAIOFile_IODestroy
- #define dummy_interface_test MHA_STATIC_MHAIOFile_dummy_interface_test

Functions

- int IOInit (int fragsize, float samplerate, IOProcessEvent_t proc_event, void *proc_←
 handle, IOStartedEvent_t start_event, void *start_handle, IOStoppedEvent_t stop_←
 event, void *stop handle, void **handle)
- int IOPrepare (void *handle, int nch_in, int nch_out)
- int IOStart (void *handle)
- int IOStop (void *handle)
- int IORelease (void *handle)
- int IOSetVar (void *handle, const char *command, char *retval, unsigned int maxretlen)
- const char * IOStrError (void *handle, int err)
- void IODestroy (void *handle)
- void dummy_interface_test (void)

Variables

static char user_err_msg [MAX_USER_ERR]

```
6.128.1 Macro Definition Documentation
6.128.1.1 #define DEBUG(
                       x ) std::cerr << FILE << ":" << LINE << " " << #x " = " << x <<
          std::endl
6.128.1.2 #define ERR SUCCESS 0
6.128.1.3 #define ERR IHANDLE -1
6.128.1.4 #define ERR_USER -1000
6.128.1.5 #define MAX_USER_ERR 0x500
6.128.1.6 #define IOInit MHA_STATIC_MHAIOFile_IOInit
6.128.1.7 #define IOPrepare MHA_STATIC_MHAIOFile_IOPrepare
6.128.1.8 #define IOStart MHA_STATIC_MHAIOFile_IOStart
6.128.1.9 #define IOStop MHA_STATIC_MHAIOFile_IOStop
6.128.1.10 #define IORelease MHA_STATIC_MHAIOFile_IORelease
6.128.1.11 #define IOSetVar MHA_STATIC_MHAIOFile_IOSetVar
6.128.1.12 #define IOStrError MHA_STATIC_MHAIOFile_IOStrError
6.128.1.13 #define IODestroy MHA_STATIC_MHAIOFile_IODestroy
6.128.1.14 #define dummy_interface_test MHA_STATIC_MHAIOFile_dummy_interface_test
6.128.2 Function Documentation
6.128.2.1 int IOInit (
                      int fragsize,
                      float samplerate,
                      IOProcessEvent t proc_event,
                      void * proc_handle,
                      IOStartedEvent t start_event,
                      void * start_handle,
                      IOStoppedEvent t stop_event,
                      void * stop_handle,
                      void ** handle )
```

```
6.128.2.2 int IOPrepare (
                        void * handle,
                       int nch_in,
                       int nch_out )
6.128.2.3 int IOStart (
                        void * handle )
6.128.2.4 int IOStop (
                       void * handle )
6.128.2.5 int IORelease (
                        void * handle )
6.128.2.6 int IOSetVar (
                        void * handle,
                       const char * command,
                        char * retval,
                        unsigned int maxretlen )
6.128.2.7 const char* IOStrError (
                        void * handle,
                       int err )
6.128.2.8 void IODestroy (
                       void * handle )
6.128.2.9 void dummy_interface_test (
                        void )
6.128.3 Variable Documentation
6.128.3.1 char user_err_msg[MAX_USER_ERR] [static]
       MHAIOJack.cpp File Reference
6.129
Classes

    class MHAIOJack::io_jack_t

         Main class for JACK IO.
```

Namespaces

MHAIOJack

JACK IO.

Macros

- #define ERR SUCCESS 0
- #define ERR IHANDLE -1
- #define ERR_USER -1000
- #define MAX USER ERR 0x500
- #define IOInit MHA_STATIC_MHAIOJack_IOInit
- #define IOPrepare MHA_STATIC_MHAIOJack_IOPrepare
- #define IOStart MHA_STATIC_MHAIOJack_IOStart
- #define IOStop MHA_STATIC_MHAIOJack_IOStop
- #define IORelease MHA_STATIC_MHAIOJack_IORelease
- #define IOSetVar MHA_STATIC_MHAIOJack_IOSetVar
- #define IOStrError MHA_STATIC_MHAIOJack_IOStrError
- #define IODestroy MHA_STATIC_MHAIOJack_IODestroy
- #define dummy_interface_test MHA_STATIC_MHAIOJack_dummy_interface_test

Functions

- int IOInit (int fragsize, float samplerate, IOProcessEvent_t proc_event, void *proc_
 handle, IOStartedEvent_t start_event, void *start_handle, IOStoppedEvent_t stop_
 event, void *stop_handle, void **handle)
- int IOPrepare (void *handle, int nch_in, int nch_out)
- int IOStart (void *handle)
- int IOStop (void *handle)
- int **IORelease** (void *handle)
- int IOSetVar (void *handle, const char *command, char *retval, unsigned int maxretlen)
- const char * IOStrError (void *handle, int err)
- void IODestroy (void *handle)
- void dummy_interface_test (void)

Variables

static char user_err_msg [MAX_USER_ERR] = ""

6.129.1 Macro Definition Documentation

- 6.129.1.1 #define ERR_SUCCESS 0
- 6.129.1.2 #define ERR_IHANDLE -1
- 6.129.1.3 #define ERR_USER -1000
- 6.129.1.4 #define MAX USER ERR 0x500

```
6.129.1.5
          #define IOInit MHA_STATIC_MHAIOJack_IOInit
6.129.1.6
          #define IOPrepare MHA_STATIC_MHAIOJack_IOPrepare
6.129.1.7
         #define IOStart MHA_STATIC_MHAIOJack_IOStart
6.129.1.8 #define IOStop MHA_STATIC_MHAIOJack_IOStop
6.129.1.9 #define IORelease MHA_STATIC_MHAIOJack_IORelease
6.129.1.10 #define IOSetVar MHA_STATIC_MHAIOJack_IOSetVar
6.129.1.11 #define IOStrError MHA_STATIC_MHAIOJack_IOStrError
6.129.1.12 #define IODestroy MHA_STATIC_MHAIOJack_IODestroy
6.129.1.13 #define dummy_interface_test MHA_STATIC_MHAIOJack_dummy_interface_test
6.129.2 Function Documentation
6.129.2.1 int IOInit (
                       int fragsize,
                       float samplerate,
                       IOProcessEvent_t proc_event,
                       void * proc_handle,
                       IOStartedEvent t start event,
                       void * start handle,
                       IOStoppedEvent_t stop_event,
                       void * stop_handle,
                       void ** handle )
6.129.2.2 int IOPrepare (
                       void * handle,
                       int nch in,
                       int nch_out )
6.129.2.3 int IOStart (
                       void * handle )
6.129.2.4 int IOStop (
                       void * handle )
6.129.2.5 int IORelease (
                       void * handle )
```

Classes

class MHAIOJackdb::io_jack_t
 Main class for JACK IO.

Namespaces

MHAIOJackdb

Macros

- #define ERR_SUCCESS 0
- #define ERR IHANDLE -1
- #define ERR USER -1000
- #define MAX_USER_ERR 0x500
- #define IOInit MHA_STATIC_MHAIOJackdb_IOInit
- #define IOPrepare MHA STATIC MHAIOJackdb IOPrepare
- #define IOStart MHA_STATIC_MHAIOJackdb_IOStart
- #define IOStop MHA_STATIC_MHAIOJackdb_IOStop
- #define IORelease MHA_STATIC_MHAIOJackdb_IORelease
- #define IOSetVar MHA_STATIC_MHAIOJackdb_IOSetVar
- #define IOStrError MHA_STATIC_MHAIOJackdb_IOStrError
- #define IODestroy MHA_STATIC_MHAIOJackdb_IODestroy
- #define dummy_interface_test MHA_STATIC_MHAIOJackdb_dummy_interface_test

Functions

int IOInit (int fragsize, float samplerate, IOProcessEvent_t proc_event, void *proc_
handle, IOStartedEvent_t start_event, void *start_handle, IOStoppedEvent_t stop_
event, void *stop_handle, void **handle)

- int IOPrepare (void *handle, int nch_in, int nch_out)
- int IOStart (void *handle)
- int **IOStop** (void *handle)
- int IORelease (void *handle)
- int IOSetVar (void *handle, const char *command, char *retval, unsigned int maxretlen)
- const char * IOStrError (void *handle, int err)
- void **IODestroy** (void *handle)
- void dummy_interface_test (void)

Variables

• static char user_err_msg [MAX_USER_ERR] = ""

6.130.1 I	Macro Definition Documentation
6.130.1.1	#define ERR_SUCCESS 0
6.130.1.2	#define ERR_IHANDLE -1
6.130.1.3	#define ERR_USER -1000
6.130.1.4	#define MAX_USER_ERR 0x500
6.130.1.5	#define IOInit MHA_STATIC_MHAIOJackdb_IOInit
6.130.1.6	#define IOPrepare MHA_STATIC_MHAIOJackdb_IOPrepare
6.130.1.7	#define IOStart MHA_STATIC_MHAIOJackdb_IOStart
6.130.1.8	#define IOStop MHA_STATIC_MHAIOJackdb_IOStop
6.130.1.9	#define IORelease MHA_STATIC_MHAIOJackdb_IORelease
6.130.1.10	#define IOSetVar MHA_STATIC_MHAIOJackdb_IOSetVar
6.130.1.11	#define IOStrError MHA_STATIC_MHAIOJackdb_IOStrError
6.130.1.12	#define IODestroy MHA_STATIC_MHAIOJackdb_IODestroy

```
#define dummy_interface_test MHA_STATIC_MHAIOJackdb_dummy_interface_test
6.130.2 Function Documentation
6.130.2.1
         int IOInit (
                        int fragsize,
                        float samplerate,
                        IOProcessEvent_t proc_event,
                        void * proc_handle,
                        IOStartedEvent t start event,
                        void * start_handle,
                        IOStoppedEvent_t stop_event,
                        void * stop_handle,
                        void ** handle )
6.130.2.2 int IOPrepare (
                        void * handle,
                        int nch_in,
                        int nch_out )
6.130.2.3 int IOStart (
                        void * handle )
6.130.2.4 int IOStop (
                        void * handle )
6.130.2.5 int IORelease (
                        void * handle )
6.130.2.6 int IOSetVar (
                        void * handle,
                        const char * command,
                        char * retval,
                        unsigned int maxretlen )
6.130.2.7 const char* IOStrError (
                        void * handle,
                        int err )
6.130.2.8 void IODestroy (
                        void * handle )
6.130.2.9 void dummy_interface_test (
                        void )
6.130.3 Variable Documentation
```

6.130.3.1 char user_err_msg[MAX USER ERR] = "" [static]

6.131 MHAIOParser.cpp File Reference

Classes

· class io parser t

Main class for Parser IO.

Macros

- #define ERR_SUCCESS 0
- #define ERR IHANDLE -1
- #define ERR_USER -1000
- #define MAX USER ERR 0x500
- #define IOInit MHA_STATIC_MHAIOParser_IOInit
- #define IOPrepare MHA STATIC MHAIOParser IOPrepare
- #define IOStart MHA_STATIC_MHAIOParser_IOStart
- #define IOStop MHA STATIC MHAIOParser IOStop
- #define IORelease MHA STATIC MHAIOParser IORelease
- #define IOSetVar MHA STATIC MHAIOParser IOSetVar
- #define IOStrError MHA_STATIC_MHAIOParser_IOStrError
- #define IODestroy MHA STATIC MHAIOParser IODestroy
- #define dummy_interface_test MHA_STATIC_MHAIOParser_dummy_interface_test

Functions

- int IOInit (int fragsize, float, IOProcessEvent_t proc_event, void *proc_handle, IO
 StartedEvent_t start_event, void *start_handle, IOStoppedEvent_t stop_event, void *stop_handle, void **handle)
- int IOPrepare (void *handle, int nch_in, int nch_out)
- int **IOStart** (void *handle)
- int IOStop (void *handle)
- int IORelease (void *handle)
- int IOSetVar (void *handle, const char *command, char *retval, unsigned int maxretlen)
- const char * IOStrError (void *handle, int err)
- void IODestroy (void *handle)
- void dummy_interface_test (void)

Variables

static char user_err_msg [MAX_USER_ERR]

```
6.131.1 Macro Definition Documentation
6.131.1.1 #define ERR_SUCCESS 0
6.131.1.2 #define ERR_IHANDLE -1
6.131.1.3 #define ERR_USER -1000
6.131.1.4 #define MAX_USER_ERR 0x500
6.131.1.5 #define IOInit MHA_STATIC_MHAIOParser_IOInit
6.131.1.6 #define IOPrepare MHA_STATIC_MHAIOParser_IOPrepare
6.131.1.7 #define IOStart MHA_STATIC_MHAIOParser_IOStart
6.131.1.8 #define IOStop MHA_STATIC_MHAIOParser_IOStop
6.131.1.9 #define IORelease MHA STATIC MHAIOParser IORelease
6.131.1.10 #define IOSetVar MHA_STATIC_MHAIOParser_IOSetVar
6.131.1.11 #define IOStrError MHA_STATIC_MHAIOParser_IOStrError
6.131.1.12 #define IODestroy MHA STATIC MHAIOParser IODestroy
6.131.1.13 #define dummy_interface_test MHA_STATIC_MHAIOParser_dummy_interface_test
6.131.2 Function Documentation
6.131.2.1 int IOInit (
                      int fragsize,
                      float,
                      IOProcessEvent_t proc_event,
                      void * proc_handle,
                      IOStartedEvent t start_event,
                      void * start_handle,
                      IOStoppedEvent_t stop_event,
                      void * stop handle,
                      void ** handle )
6.131.2.2 int IOPrepare (
                      void * handle,
                      int nch in,
                      int nch_out )
```

```
6.131.2.3 int IOStart (
                       void * handle )
6.131.2.4 int IOStop (
                       void * handle )
6.131.2.5 int IORelease (
                       void * handle )
6.131.2.6 int IOSetVar (
                       void * handle,
                       const char * command,
                       char * retval,
                       unsigned int maxretlen )
6.131.2.7 const char* IOStrError (
                       void * handle,
                       int err )
6.131.2.8 void IODestroy (
                       void * handle )
6.131.2.9 void dummy_interface_test (
                       void )
6.131.3 Variable Documentation
6.131.3.1 char user_err_msg[MAX_USER_ERR] [static]
6.132 MHAIOPortAudio.cpp File Reference
```

Classes

- class MHAIOPortAudio::device_info_t
- class MHAIOPortAudio::io_portaudio_t

Main class for Portaudio sound IO.

Namespaces

MHAIOPortAudio

Macros

- #define ERR_SUCCESS 0
- #define ERR IHANDLE -1
- #define ERR USER -1000
- #define MAX_USER_ERR 0x500
- #define IOInit MHA STATIC MHAIOPortAudio IOInit
- #define IOPrepare MHA_STATIC_MHAIOPortAudio_IOPrepare
- #define IOStart MHA_STATIC_MHAIOPortAudio_IOStart
- #define IOStop MHA_STATIC_MHAIOPortAudio_IOStop
- #define IORelease MHA_STATIC_MHAIOPortAudio_IORelease
- #define IOSetVar MHA_STATIC_MHAIOPortAudio_IOSetVar
- #define IOStrError MHA_STATIC_MHAIOPortAudio_IOStrError
- #define IODestroy MHA_STATIC_MHAIOPortAudio_IODestroy
- #define dummy_interface_test MHA_STATIC_MHAIOPortAudio_dummy_interface_
 test

Functions

- static std::string MHAIOPortAudio::parserFriendlyName (const std::string &in)
- int portaudio_callback (const void ∗input, void ∗output, unsigned long frameCount, const PaStreamCallbackTimeInfo ∗timeInfo, PaStreamCallbackFlags statusFlags, void ∗user← Data)
- int IOInit (int fragsize, float samplerate, IOProcessEvent_t proc_event, void *proc_
 handle, IOStartedEvent_t start_event, void *start_handle, IOStoppedEvent_t stop_
 event, void *stop_handle, void **handle)
- int IOPrepare (void *handle, int nch_in, int nch_out)
- int IOStart (void *handle)
- int IOStop (void *handle)
- int IORelease (void *handle)
- int IOSetVar (void *handle, const char *command, char *retval, unsigned int maxretlen)
- const char * IOStrError (void *handle, int err)
- void IODestroy (void *handle)
- void dummy_interface_test (void)

Variables

- static char user_err_msg [MAX_USER_ERR] = ""
- PaStreamCallback portaudio callback

```
6.132.1 Macro Definition Documentation
6.132.1.1 #define ERR_SUCCESS 0
6.132.1.2 #define ERR IHANDLE -1
6.132.1.3 #define ERR_USER -1000
6.132.1.4 #define MAX_USER_ERR 0x500
6.132.1.5 #define IOInit MHA_STATIC_MHAIOPortAudio_IOInit
6.132.1.6 #define IOPrepare MHA STATIC MHAIOPortAudio IOPrepare
6.132.1.7 #define IOStart MHA_STATIC_MHAIOPortAudio_IOStart
6.132.1.8 #define IOStop MHA_STATIC_MHAIOPortAudio_IOStop
6.132.1.9 #define IORelease MHA_STATIC_MHAIOPortAudio_IORelease
6.132.1.10 #define IOSetVar MHA_STATIC_MHAIOPortAudio_IOSetVar
6.132.1.11 #define IOStrError MHA_STATIC_MHAIOPortAudio_IOStrError
6.132.1.12 #define IODestroy MHA_STATIC_MHAIOPortAudio_IODestroy
6.132.1.13 #define dummy_interface_test MHA_STATIC_MHAIOPortAudio_dummy_interface_test
6.132.2 Function Documentation
6.132.2.1 int portaudio_callback (
                      const void * input,
                      void * output,
                      unsigned long frameCount,
                      const PaStreamCallbackTimeInfo * timeInfo,
                      PaStreamCallbackFlags statusFlags,
                      void * userData )
6.132.2.2 int IOInit (
                      int fragsize,
                      float samplerate.
                      IOProcessEvent t proc_event,
                      void * proc_handle,
                      IOStartedEvent t start_event,
                      void * start handle.
                      IOStoppedEvent t stop_event,
                      void * stop handle,
                      void ** handle )
```

```
6.132.2.3 int IOPrepare (
                        void * handle,
                        int nch_in,
                        int nch_out )
6.132.2.4 int IOStart (
                        void * handle )
6.132.2.5 int IOStop (
                        void * handle )
6.132.2.6 int IORelease (
                        void * handle )
6.132.2.7 int IOSetVar (
                        void * handle,
                        const char * command,
                        char * retval,
                        unsigned int maxretlen )
6.132.2.8 const char* IOStrError (
                        void * handle,
                        int err )
6.132.2.9 void IODestroy (
                        void * handle )
6.132.2.10 void dummy_interface_test (
                         void )
6.132.3 Variable Documentation
6.132.3.1
          char user_err_msg[MAX_USER_ERR] = "" [static]
6.132.3.2 PaStreamCallback portaudio_callback
6.133 MHAIOTCP.cpp File Reference
```

Classes

class io_tcp_parser_t

The parser interface of the IOTCP library.

class io_tcp_sound_t

Sound data handling of io tcp library.

union io_tcp_sound_t::float_union

This union helps in conversion of floats from host byte order to network byte order and back again.

class io_tcp_fwcb_t

TCP sound-io library's interface to the framework callbacks.

class io_tcp_t

The tcp sound io library.

Macros

- #define ERR_SUCCESS 0
- #define ERR IHANDLE -1
- #define ERR USER -1000
- #define MAX_USER_ERR 0x2000
- #define MHA_ErrorMsg2(x, y) MHA_Error(__FILE__,_LINE__,(x),(y))
- #define MHA_ErrorMsg3(x, y, z) MHA_Error(__FILE___,__LINE___,(x),(y),(z))
- #define MIN_TCP_PORT 0
- #define MIN TCP PORT STR "0"
- #define MAX_TCP_PORT 65535
- #define MAX_TCP_PORT_STR "65535"
- #define IOInit MHA_STATIC_MHAIOTCP_IOInit
- #define IOPrepare MHA_STATIC_MHAIOTCP_IOPrepare
- #define IOStart MHA STATIC MHAIOTCP IOStart
- #define IOStop MHA_STATIC_MHAIOTCP_IOStop
- #define IORelease MHA STATIC MHAIOTCP IORelease
- #define IOSetVar MHA_STATIC_MHAIOTCP_IOSetVar
- #define IOStrError MHA_STATIC_MHAIOTCP_IOStrError
- #define IODestroy MHA_STATIC_MHAIOTCP_IODestroy
- #define dummy_interface_test MHA_STATIC_MHAIOTCP_dummy_interface_test

Functions

- static int copy error (MHA Error &e)
- static void * thread_startup_function (void *parameter)
- int IOInit (int fragsize, float samplerate, IOProcessEvent_t proc_event, void *proc_
 handle, IOStartedEvent_t start_event, void *start_handle, IOStoppedEvent_t stop_
 event, void *stop_handle, void **handle)
- int IOPrepare (void *handle, int num inchannels, int num outchannels)
- int IOStart (void *handle)
- int IOStop (void *handle)
- int IORelease (void *handle)
- int IOSetVar (void *handle, const char *cmd, char *retval, unsigned int len)
- const char * IOStrError (void *handle, int err)
- void IODestroy (void *handle)
- void dummy_interface_test (void)

Variables

static char user_err_msg [MAX_USER_ERR]

```
6.133.1 Macro Definition Documentation
6.133.1.1 #define ERR_SUCCESS 0
6.133.1.2 #define ERR_IHANDLE -1
6.133.1.3 #define ERR_USER -1000
6.133.1.4 #define MAX_USER_ERR 0x2000
6.133.1.5 #define MHA_ErrorMsg2(
                      y ) MHA_Error(__FILE__,_LINE__,(x),(y))
6.133.1.6 #define MHA_ErrorMsg3(
                      z ) MHA_Error(__FILE__,__LINE__,(x),(y),(z))
6.133.1.7 #define MIN_TCP_PORT 0
6.133.1.8 #define MIN_TCP_PORT_STR "0"
6.133.1.9 #define MAX_TCP_PORT 65535
6.133.1.10 #define MAX_TCP_PORT_STR "65535"
6.133.1.11 #define IOInit MHA_STATIC_MHAIOTCP_IOInit
6.133.1.12 #define IOPrepare MHA_STATIC_MHAIOTCP_IOPrepare
6.133.1.13 #define IOStart MHA_STATIC_MHAIOTCP_IOStart
6.133.1.14 #define IOStop MHA_STATIC_MHAIOTCP_IOStop
6.133.1.15 #define IORelease MHA_STATIC_MHAIOTCP_IORelease
6.133.1.16 #define IOSetVar MHA_STATIC_MHAIOTCP_IOSetVar
6.133.1.17 #define IOStrError MHA STATIC MHAIOTCP IOStrError
6.133.1.18 #define IODestroy MHA_STATIC_MHAIOTCP_IODestroy
6.133.1.19 #define dummy_interface_test MHA_STATIC_MHAIOTCP_dummy_interface_test
```

```
6.133.2 Function Documentation
6.133.2.1 static int copy_error (
                        MHA_Error & e ) [static]
6.133.2.2 static void* thread_startup_function (
                        void * parameter ) [static]
6.133.2.3 int IOInit (
                        int fragsize,
                        float samplerate,
                        IOProcessEvent_t proc_event,
                        void * proc handle,
                        IOStartedEvent_t start_event,
                        void * start_handle,
                        IOStoppedEvent_t stop_event,
                        void * stop_handle,
                        void ** handle )
6.133.2.4 int IOPrepare (
                        void * handle,
                        int num_inchannels,
                        int num_outchannels )
6.133.2.5 int IOStart (
                        void * handle )
6.133.2.6 int IOStop (
                        void * handle )
6.133.2.7 int IORelease (
                        void * handle )
6.133.2.8 int IOSetVar (
                        void * handle,
                        const char * cmd,
                        char * retval,
                        unsigned int len )
6.133.2.9 const char* IOStrError (
                        void * handle,
                        int err )
6.133.2.10 void IODestroy (
                         void * handle )
```

Functions

- static void jack_error_handler (const char *msg)
- static int dummy_jack_proc_cb (jack_nframes_t, void *)
- void make_friendly_number (jack_default_audio_sample_t &x)

Variables

- char last_jack_err_msg [MAX_USER_ERR] = ""
- int last_jack_err = 0
- 6.134.1 Function Documentation

- 6.134.2 Variable Documentation
- 6.134.2.1 char last_jack_err_msg[MAX_USER_ERR] = ""
- 6.134.2.2 int last_jack_err = 0
- 6.135 mhajack.h File Reference

Classes

class MHAJack::port t

Class for one channel/port.

class MHAJack::client_t

Generic asynchronous JACK client.

class MHAJack::client_noncont_t

Generic client for synchronous playback and recording of waveform fragments.

class MHAJack::client_avg_t

Generic JACK client for averaging a system response across time.

Namespaces

MHAJack

Classes and functions for openMHA and JACK interaction.

Macros

- #define MHAJACK FW STARTED 1
- #define MHAJACK STOPPED 2
- #define MHAJACK_STARTING 8
- #define IO ERROR JACK 11
- #define IO_ERROR_MHAJACKLIB 12
- #define MAX USER ERR 0x500

Functions

void MHAJack::io (mha_wave_t *s_out, mha_wave_t *s_in, const std::string &name, const std::vector< std::string > &p_out, const std::vector< std::string > &p_in, float *srate=NULL, unsigned int *fragsize=NULL, bool use_jack_transport=false)

Functional form of generic client for synchronous playback and recording of waveform fragments.

std::vector< unsigned int > MHAJack::get_port_capture_latency (const std::vector< std::string > &ports)

Return the JACK port latency of ports.

Return the JACK port latency of ports.

std::vector< unsigned int > MHAJack::get_port_playback_latency (const std::vector< std::string > &ports)

Return the JACK port latency of ports.

std::vector< int > MHAJack::get_port_playback_latency_int (const std::vector< std
 ::string > &ports)

Variables

char last_jack_err_msg [MAX_USER_ERR]

- **6.135.1** Macro Definition Documentation
- 6.135.1.1 #define MHAJACK_FW_STARTED 1
- 6.135.1.2 #define MHAJACK STOPPED 2
- 6.135.1.3 #define MHAJACK_STARTING 8
- 6.135.1.4 #define IO_ERROR_JACK 11
- 6.135.1.5 #define IO_ERROR_MHAJACKLIB 12
- 6.135.1.6 #define MAX_USER_ERR 0x500
- 6.135.2 Variable Documentation
- 6.135.2.1 char last_jack_err_msg[MAX_USER_ERR]
- 6.136 mhamain.cpp File Reference

Classes

· class mhaserver t

MHA Framework listening on TCP port for commands.

Macros

- #define MAX_LINE_LENGTH 0x100000
- #define **HELP_TEXT**
- #define GREETING_TEXT

Functions

- void **create_lock** (unsigned int p, std::string s)
- void remove_lock (unsigned int p)
- int **mhamain** (int argc, char *argv[])

6.137 mhapluginloader.cpp File Reference

int argc, char * argv[])

6.138 mhapluginloader.h File Reference

Classes

6.136.2.3 int mhamain (

- class PluginLoader::config_file_splitter_t
- class PluginLoader::fourway_processor_t

This abstract class defines the interface for classes that implement all types of signal domain processing supported by the MHA: wave2wave, spec2spec, wave2spec, and spec2wave.

- class PluginLoader::mhapluginloader t
- class MHAParser::mhapluginloader_t

Class to create a plugin loader in a parser, including the load logic.

Namespaces

- PluginLoader
- MHAParser

Name space for the openMHA-Parser configuration language.

Functions

- const char * PluginLoader::mhastrdomain (mha_domain_t)
- void PluginLoader::mhaconfig_compare (const mhaconfig_t &req, const mhaconfig←
 _t &avail, const std::string &pref="")

Compare two **mhaconfig_t** (p. 470) structures, and report differences as an error.

6.139 mhasndfile.cpp File Reference

Functions

- void write_wave (const mha_wave_t &sig, const char *fname, const float &srate, const int &format)
- unsigned int validator_channels (std::vector< int > channel_map, unsigned int channels)
- unsigned int validator_length (unsigned int maxlen, unsigned int frames, unsigned int startpos)

6.139.1 Function Documentation

```
6.139.1.1 void write_wave (

const mha_wave_t & sig,
const char * fname,
const float & srate,
const int & format )
```

6.140 mhasndfile.h File Reference

Classes

```
class MHASndFile::sf_tclass MHASndFile::sf wave t
```

Namespaces

MHASndFile

Functions

 void write_wave (const mha_wave_t &sig, const char *fname, const float &srate=44100, const int &format=SF_FORMAT_WAV|SF_FORMAT_FLOAT|SF_ENDIAN_FILE)

```
6.140.1 Function Documentation
```

```
6.140.1.1 void write_wave (

const mha_wave_t & sig,

const char * fname,

const float & srate = 44100,

const int & format = SF_FORMAT_WAV|SF_FORMAT_FLOAT|SF_ENDIAN←

_FILE )
```

6.141 multibandcompressor.cpp File Reference

Classes

- class multibandcompressor::plugin_signals_t
- class multibandcompressor::fftfb_plug_t
- class multibandcompressor::interface t

Namespaces

- multibandcompressor
- 6.142 nlms wave.cpp File Reference

Classes

- · class rt nlms t
- · class nlms_t

Macros

- #define NORMALIZATION_TYPES "[none default sum]"
- #define NORM NONE 0
- #define NORM DEFAULT 1
- #define NORM_SUM 2
- #define ESTIMATION_TYPES "[previous current]"
- #define ESTIM_PREV 0
- #define ESTIM_CUR 1

Functions

```
    void make_friendly_number_by_limiting (mha_real_t &x)
```

```
6.142.1 Macro Definition Documentation
```

```
6.142.1.1 #define NORMALIZATION_TYPES "[none default sum]"
```

```
6.142.1.2 #define NORM NONE 0
```

```
6.142.1.3 #define NORM_DEFAULT 1
```

```
6.142.1.4 #define NORM_SUM 2
```

```
6.142.1.5 #define ESTIMATION_TYPES "[previous current]"
```

```
6.142.1.6 #define ESTIM_PREV 0
```

```
6.142.1.7 #define ESTIM CUR 1
```

6.142.2 Function Documentation

6.143 noise.cpp File Reference

Classes

- · class cfg_t
- class noise_t

6.144 noisePowProposedScale.cpp File Reference

Classes

- class noisePowProposedScale::noisePowProposed
- class noisePowProposedScale::interface t

Namespaces

noisePowProposedScale

Macros

• #define **POWSPEC_FACTOR** 0.0025

6.144.1 Macro Definition Documentation

6.144.1.1 #define POWSPEC_FACTOR 0.0025

6.145 overlapadd.cpp File Reference

Classes

- class overlapadd::overlapadd_t
- class overlapadd::overlapadd_if_t

Namespaces

- overlapadd
- 6.146 plingploing.cpp File Reference

Classes

class plingploing::plingploing_t

Run-time configuration of the plingploing music generator.

• class plingploing::if_t

Plugin class of the plingploing music generator.

Namespaces

plingploing

All classes for the plingploing music generator live in this namespace.

Functions

• double plingploing::drand (double a, double b)

- 6.147 pluginbrowser.cpp File Reference
- 6.148 pluginbrowser.h File Reference

Classes

- class plugindescription_t
- · class pluginloader_t
- class pluginbrowser_t
- 6.149 prediction_error.cpp File Reference

Macros

- #define PATCH_VAR(var) patchbay.connect(&var.valuechanged, this, &prediction_
 error::update_cfg)
- #define INSERT_PATCH(var) insert_member(var); PATCH_VAR(var)

Functions

- void make_friendly_number_by_limiting (mha_real_t &x)
- 6.149.1 Macro Definition Documentation
- 6.149.1.2 #define INSERT_PATCH(

 var) insert_member(var); PATCH_VAR(var)
- 6.149.2 Function Documentation
- 6.150 prediction_error.h File Reference

Classes

- class prediction_error_config
- class prediction_error

6.151 resampling.cpp File Reference

Classes

- class MHAPlugin_Resampling::resampling_t
- class MHAPlugin_Resampling::resampling_if_t

Namespaces

- MHAPlugin_Resampling
- 6.152 rmslevel.cpp File Reference

Classes

- class mon_t
- class rmslevel_t
- · class rmslevel_if_t
- 6.153 route.cpp File Reference

Classes

- class route::process t
- class route::interface_t

Namespaces

- route
- 6.154 save_spec.cpp File Reference

Classes

- class save_spec_t
- 6.155 save_wave.cpp File Reference

Classes

class save_wave_t

6.156 shadowfilter_begin.cpp File Reference

Classes

- class shadowfilter_begin::cfg_t
- class shadowfilter_begin::shadowfilter_begin_t

Namespaces

- shadowfilter_begin
- 6.157 shadowfilter_end.cpp File Reference

Classes

- class shadowfilter_end::cfg_t
- class shadowfilter_end::shadowfilter_end_t

Namespaces

- · shadowfilter_end
- 6.158 sine.cpp File Reference

Classes

- struct sine_cfg_t
- class sine_t
- 6.159 smoothgains_bridge.cpp File Reference

Classes

- class smoothgains_bridge::smoothspec_wrap_t
- class smoothgains_bridge::overlapadd_if_t

Namespaces

smoothgains_bridge

1030 CONTENTS

6.160 softclip.cpp File Reference

Classes

- · class cfg_t
- · class softclip_t

6.161 spec2wave.cpp File Reference

Classes

- class hanning_ramps_t
- class spec2wave_t
- class spec2wave_if_t

Functions

- unsigned int **max** (unsigned int a, unsigned int b)
- unsigned int **min** (unsigned int a, unsigned int b)
- 6.161.1 Function Documentation

- 6.162 speechnoise.cpp File Reference

Macros

- #define NUM ENTR MHAORIG 76
- #define **NUM_ENTR_LTASS** 25
- #define NUM_ENTR_OLNOISE 49

Functions

- float **fhz2bandno** (float x)
- float erb_hz_f_hz (float f_hz)
- float hz2hz (float x)

Dummy scale transformation Hz to Hz.

float bandw_correction (float f, float ldb)

Variables

- float vMHAOrigSpec [NUM_ENTR_MHAORIG] = {-1.473, 0, -4.939, -10.14, -13.94, -14.83, -14.27, -15.66, -16.16, -18.22, -20.5, -21.23, -22.13, -22.58, -23.98, -26.58, -26.4, -25.15, -23.89, -25.54, -27, -30.15, -31.68, -30.14, -27.55, -25.79, -25.89, -26.11, -27. ← 48, -30.37, -33.13, -36.23, -36.64, -36.35, -35.03, -35.48, -36.35, -37.95, -40.53, -42.37, -41.29, -38.49, -36.32, -34.85, -34.05, -33.81, -33.48, -34.1, -35.19, -36.29, -36.94, -37. ← 53, -38.71, -38.7, -38.92, -40.36, -41.26, -42.19, -43.65, -44.37, -43.95, -43.15, -42.57, -41.57, -41.86, -42.34, -42.87, -42.35, -42.71, -42.85, -43.47, -47.43, -67.54, -76.3, -77. ← 43, -77.43}
- float vMHAOrigFreq [NUM_ENTR_MHAORIG] = $\{172.266,344.532,516.797,689.\leftarrow 063,861.329,1033.59,1205.86,1378.13,1550.39,1722.66,1894.92,2067.19,2239.\leftarrow 46,2411.72,2583.99,2756.25,2928.52,3100.78,3273.05,3445.32,3617.58,3789.85,3962.\leftarrow 11,4134.38,4306.64,4478.91,4651.18,4823.44,4995.71,5167.97,5340.24,5512.51,5684.\leftarrow 77,5857.04,6029.3,6201.57,6373.83,6546.1,6718.37,6890.63,7062.9,7235.16,7407.\leftarrow 43,7579.69,7751.96,7924.23,8096.49,8268.76,8441.02,8613.29,8785.56,8957.82,9130.\leftarrow 09,9302.35,9474.62,9646.88,9819.15,9991.42,10163.7,10335.9,10508.2,10680.\leftarrow 5,10852.7,11025,11197.3,11369.5,11541.8,11714.1,11886.3,12058.6,12230.9,12403.\leftarrow 1,12575.4,12747.7,12919.9,13092.2\}$
- float vLTASS_freq [NUM_ENTR_LTASS] = {63, 80, 100, 125, 160, 200, 250, 315, 400, 500, 630, 800, 1000, 1250, 1600, 2000, 2500, 3150, 4000, 5000, 6300, 8000, 10000, 12500, 16000}
- float vLTASS_combined_lev [NUM_ENTR_LTASS] = {38.6, 43.5, 54.4, 57.7, 56.8, 60.2, 60.3, 59.0, 62.1, 62.1, 60.5, 56.8, 53.7, 53.0, 52.0, 48.7, 48.1, 46.8, 45.6, 44.5, 44.3, 43.7, 43.4, 41.3, 40.7}
- float vLTASS_female_lev [NUM_ENTR_LTASS] = $\{37.0,36.0,37.5,40.1,53.4,62.2,60. \leftarrow 9,58.1,61.7,61.7,60.4,58,54.3,52.3,51.7,48.8,47.3,46.7,45.3,44.6,45.2,44.9,45.0,42. \leftarrow 8,41.1\}$
- float vLTASS_male_lev [NUM_ENTR_LTASS] = $\{38.6, 43.5, 54.4, 57.7, 56.8, 58.2, 59. \leftarrow 7,60.0,62.4,62.6,60.6,55.7,53.1,53.7,52.3,48.7,48.9,47.0,46.0,44.4,43.3,42.4,41.9,39. \leftarrow 8.40.4\}$
- float **vOlnoiseFreq** [**NUM_ENTR_OLNOISE**] = $\{62.5, 70.1539, 78.7451, 88.3884, 99. \leftarrow 2126, 111.362, 125, 140.308, 157.49, 176.777, 198.425, 222.725, 250, 280.616, 314.98, 353. \leftarrow 553, 396.85, 445.449, 500, 561.231, 629.961, 707.107, 793.701, 890.899, 1000, 1122. \leftarrow 46, 1259.92, 1414.21, 1587.4, 1781.8, 2000, 2244.92, 2519.84, 2828.43, 3174.8, 3563. \leftarrow 59, 4000, 4489.85, 5039.68, 5656.85, 6349.6, 7127.19, 8000, 8979.7, 10079.4, 11313. \leftarrow 7, 12699.2, 14254.4, 16000$
- float vOlnoiseLev [NUM_ENTR_OLNOISE] = $\{45.9042,38.044,48.9444,61.3697,67. \leftarrow 6953,69.7451,71.6201,71.2431,65.2754,63.2547,70.2264,72.1434,73.4433,73.2659,69. \leftarrow 8424,71.0132,70.9577,70.3492,68.691,64.8436,64.0435,64.2879,60.5889,60.6596,60. \leftarrow 3727,61.2003,61.8477,61.1478,61.2312,58.6584,57.2892,56.8299,56.0191,53.3018,56. \leftarrow 0525,54.3592,50.8823,55.992,54.6768,47.2616,46.9914,45.209,50.413,47.5848,43. \leftarrow 3215,43.754,38.5773,-0.39427,5.74224\}$
- 6.162.1 Macro Definition Documentation
- 6.162.1.1 #define NUM_ENTR_MHAORIG 76
- 6.162.1.2 #define NUM ENTR LTASS 25

1032 CONTENTS

```
6.162.1.3 #define NUM_ENTR_OLNOISE 496.162.2 Function Documentation
```

```
6.162.2.1 float fhz2bandno ( float x )
```

```
6.162.2.2 float erb_hz_f_hz ( float f_hz )
```

```
6.162.2.3 float hz2hz ( float x )
```

Dummy scale transformation Hz to Hz.

This function implements a dummy scale transformation (linear frequency scale).

Parameters

```
x | Input frequency in Hz
```

Returns

Frequency in Hz

```
6.162.2.4 float bandw_correction (
float f,
float ldb )
```

- 6.162.3 Variable Documentation
- 6.162.3.1 float vMHAOrigSpec[NUM_ENTR_MHAORIG] = {-1.473, 0, -4.939, -10.14, -13.94, -14.83, -14.27, -15.66, -16.16, -18.22, -20.5, -21.23, -22.13, -22.58, -23.98, -26.58, -26.4, -25.15, -23.89, -25.54, -27, -30.15, -31.68, -30.14, -27.55, -25.79, -25.89, -26.11, -27.48, -30.37, -33.13, -36.23, -36.64, -36.35, -35.03, -35.48, -36.35, -37.95, -40.53, -42.37, -41.29, -38.49, -36.32, -34.85, -34.05, -33.81, -33.48, -34.1, -35.19, -36.29, -36.94, -37.53, -38.71, -38.7, -38.92, -40.36, -41.26, -42.19, -43.65, -44.37, -43.95, -43.15, -42.57, -41.57, -41.86, -42.34, -42.87, -42.35, -42.71, -42.85, -43.47, -47.43, -67.54, -76.3, -77.43, -77.43}
- 6.162.3.2 float vMHAOrigFreq[NUM_ENTR_MHAORIG] = $\{172.266,344.532,516.797,689.063,861. \leftarrow 329,1033.59,1205.86,1378.13,1550.39,1722.66,1894.92,2067.19,2239.46,2411.72,2583.99,2756. \leftarrow 25,2928.52,3100.78,3273.05,3445.32,3617.58,3789.85,3962.11,4134.38,4306.64,4478.91,4651. \leftarrow 18,4823.44,4995.71,5167.97,5340.24,5512.51,5684.77,5857.04,6029.3,6201.57,6373.83,6546. \leftarrow 1,6718.37,6890.63,7062.9,7235.16,7407.43,7579.69,7751.96,7924.23,8096.49,8268.76,8441. \leftarrow 02,8613.29,8785.56,8957.82,9130.09,9302.35,9474.62,9646.88,9819.15,9991.42,10163.7,10335. \leftarrow 9,10508.2,10680.5,10852.7,11025,11197.3,11369.5,11541.8,11714.1,11886.3,12058.6,12230. \leftarrow 9,12403.1,12575.4,12747.7,12919.9,13092.2\}$

- 6.162.3.3 float vLTASS_freq[NUM_ENTR_LTASS] = {63, 80, 100, 125, 160, 200, 250, 315, 400, 500, 630, 800, 1000, 1250, 1600, 2000, 2500, 3150, 4000, 5000, 6300, 8000, 10000, 12500, 16000}
- 6.162.3.4 float vLTASS_combined_lev[NUM_ENTR_LTASS] = {38.6, 43.5, 54.4, 57.7, 56.8, 60.2, 60.3, 59.0, 62.1, 62.1, 60.5, 56.8, 53.7, 53.0, 52.0, 48.7, 48.1, 46.8, 45.6, 44.5, 44.3, 43.7, 43.4, 41.3, 40.7}
- 6.162.3.5 float vLTASS_female_lev[NUM_ENTR_LTASS] = {37.0,36.0,37.5,40.1,53.4,62.2,60.9,58. ← 1,61.7,61.7,60.4,58,54.3,52.3,51.7,48.8,47.3,46.7,45.3,44.6,45.2,44.9,45.0,42.8,41.1}
- 6.162.3.6 float vLTASS_male_lev[NUM_ENTR_LTASS] = {38.6,43.5,54.4,57.7,56.8,58.2,59.7,60.0,62. 4,62.6,60.6,55.7,53.1,53.7,52.3,48.7,48.9,47.0,46.0,44.4,43.3,42.4,41.9,39.8,40.4}
- 6.162.3.7 float vOlnoiseFreq[NUM_ENTR_OLNOISE] = $\{62.5, 70.1539, 78.7451, 88.3884, 99.2126, 111. \leftarrow 362, 125, 140.308, 157.49, 176.777, 198.425, 222.725, 250, 280.616, 314.98, 353.553, 396.85, 445. \leftarrow 449, 500, 561.231, 629.961, 707.107, 793.701, 890.899, 1000, 1122.46, 1259.92, 1414.21, 1587.4, 1781. \leftarrow 8, 2000, 2244.92, 2519.84, 2828.43, 3174.8, 3563.59, 4000, 4489.85, 5039.68, 5656.85, 6349.6, 7127. \leftarrow 19, 8000, 8979.7, 10079.4, 11313.7, 12699.2, 14254.4, 16000$
- 6.162.3.8 float vOlnoiseLev[NUM_ENTR_OLNOISE] = $\{45.9042,38.044,48.9444,61.3697,67.6953,69. \leftarrow 7451,71.6201,71.2431,65.2754,63.2547,70.2264,72.1434,73.4433,73.2659,69.8424,71.0132,70. \leftarrow 9577,70.3492,68.691,64.8436,64.0435,64.2879,60.5889,60.6596,60.3727,61.2003,61.8477,61. \leftarrow 1478,61.2312,58.6584,57.2892,56.8299,56.0191,53.3018,56.0525,54.3592,50.8823,55.992,54. \leftarrow 6768,47.2616,46.9914,45.209,50.413,47.5848,43.3215,43.754,38.5773,-0.39427,5.74224\}$
- 6.163 speechnoise.h File Reference

Classes

- class speechnoise t
- 6.164 split.cpp File Reference

Classes

class MHAPlugin_Split::uni_processor_t

An interface to a class that sports a process method with no parameters and no return value.

class MHAPlugin Split::thread platform t

Basic interface for encapsulating thread creation, thread priority setting, and synchronization on any threading platform (i.e., pthreads or win32threads).

class MHAPlugin Split::dummy threads t

Dummy specification of a thread platform: This class implements everything in a single thread.

class MHAPlugin_Split::posix_threads_t

Posix threads specification of thread platform.

class MHAPlugin_Split::domain_handler_t

Handles domain-specific partial input and output signal.

class MHAPlugin_Split::splitted_part_t

The **splitted_part_t** (p. 717) instance manages the plugin that performs processing on the reduced set of channels.

class MHAPlugin_Split::split_t

Implements split plugin.

1034 CONTENTS

Namespaces

MHAPlugin_Split

Macros

#define MHAPLUGIN_OVERLOAD_OUTDOMAIN

This define modifies the definition of MHAPLUGIN_CALLBACKS and friends.

- #define posixthreads 1
- #define default_thread_platform_string "posix"
- #define default_thread_platform_type posix_threads_t

Enumerations

6.164.1 Detailed Description

Source code for the split plugin. The split plugin splits the audio signal by channel. The splitted paths execute in parallel.

- 6.164.2 Macro Definition Documentation
- 6.164.2.1 #define MHAPLUGIN_OVERLOAD_OUTDOMAIN

This define modifies the definition of MHAPLUGIN_CALLBACKS and friends.

The output signal is transferred through a second parameter to the process method, enabling all four domain transformations in a single plugin.

- 6.164.2.2 #define posixthreads 1
- 6.164.2.3 #define default_thread_platform_string "posix"
- 6.164.2.4 #define default_thread_platform_type posix_threads_t
- 6.165 steerbf.cpp File Reference

Macros

- #define INSERT_PATCH(var) insert_member(var); PATCH_VAR(var)

6.167 testalsadevice.c File Reference

Functions

- int **main** (int argc, char **argv)
- 6.167.1 Function Documentation
- 6.167.1.1 int main (int *argc*, char ** *argv*)
- 6.168 testplugin.cpp File Reference

Classes

- class testplugin::config_parser_t
- class testplugin::ac_parser_t
- class testplugin::signal_parser_t
- · class testplugin::if_t

Namespaces

testplugin

1036 CONTENTS

6.169 timoconfig.cpp File Reference

Macros

- #define LPSCALE (5.2429e+007)
- #define **POWSPEC_FACTOR** 0.0025
- #define OVERLAP FACTOR 2
- #define **EPSILON** (1e-10)
- #define **CHANLOOP** for (unsigned int c=0; c<nchan; ++c)
- 6.169.1 Macro Definition Documentation
- 6.169.1.1 #define LPSCALE (5.2429e+007)
- 6.169.1.2 #define POWSPEC_FACTOR 0.0025
- 6.169.1.3 #define OVERLAP_FACTOR 2
- 6.169.1.4 #define EPSILON (1e-10)
- 6.169.1.5 #define CHANLOOP for (unsigned int c=0; c<nchan; ++c)
- 6.170 timoconfig.h File Reference

Classes

- · class timo_AC
- class timo_params
- class timoConfig
- 6.171 timoSmooth.cpp File Reference

Macros

- #define INSERT_VAR(var) insert_item(#var, &var)
- #define PATCH_VAR(var) patchbay.connect(&var.valuechanged, this, &timoSmooth← ::on_model_param_valuechanged)
- #define INSERT_PATCH(var) INSERT_VAR(var); PATCH_VAR(var)

6.171.1 Macro Definition Documentation

6.171.1.1 #define INSERT_VAR(

var) insert_item(#var, &var)

6.171.1.2 #define PATCH_VAR(

var) patchbay.connect(&var.valuechanged, this, &timoSmooth::on_model_param_valuechanged)

6.171.1.3 #define INSERT_PATCH(

var) INSERT_VAR(var); PATCH_VAR(var)

6.172 timosmooth.h File Reference

Classes

class timoSmooth

6.173 transducers.cpp File Reference

Classes

- class softclipper_variables_t
- class softclipper_t
- · class calibrator_variables_t
- class calibrator_runtime_layer_t
- class calibrator_t
- · class bbcalib interface t

Typedefs

- typedef MHAPlugin::config_t< MHASignal::async_rmslevel_t > rmslevelmeter
- typedef MHAPlugin::plugin_t< calibrator_runtime_layer_t > rtcalibrator

Functions

- speechnoise_t::noise_type_t kw_index2type (unsigned int idx)
- std::vector< int > vint_0123n1 (unsigned int n)

1038 CONTENTS

```
6.173.1 Typedef Documentation

6.173.1.1 typedef MHAPlugin::config_t<MHASignal::async_rmslevel_t> rmslevelmeter
```

- 6.173.1.2 typedef MHAPlugin::plugin_t<calibrator_runtime_layer_t> rtcalibrator
- 6.173.2 Function Documentation
- 6.173.2.1 speechnoise_t::noise_type_t kw_index2type (unsigned int *idx*)
- 6.173.2.2 std::vector<int> vint_0123n1 (unsigned int n)
- 6.174 upsample.cpp File Reference

Classes

- class us_t
- 6.175 wave2spec.cpp File Reference

Classes

- class wave2spec_t
- · class wave2spec if t

Macros

- #define MHAPLUGIN_OVERLOAD_OUTDOMAIN
- 6.175.1 Macro Definition Documentation
- 6.175.1.1 #define MHAPLUGIN_OVERLOAD_OUTDOMAIN
- 6.176 wavrec.cpp File Reference

Classes

- class wavwriter_t
- class wavrec_t

Macros

- 6.176.1 Macro Definition Documentation
- 6.177 windowselector.cpp File Reference
- 6.178 windowselector.h File Reference

Classes

• class windowselector_t

A combination of mha parser variables to describe an overalapadd analysis window.

Index

_MHA_AC_CHAR	ADM::Linearphase_FIR, 187
testplugin::ac_parser_t, 897	\sim MHA_Error
_MHA_AC_DOUBLE	MHA_Error, 414
testplugin::ac_parser_t, 897	~Server
_MHA_AC_FLOAT	MHA_TCP::Server, 448
testplugin::ac_parser_t, 897	\sim Thread
_MHA_AC_INT	MHA_TCP::Thread, 455
testplugin::ac_parser_t, 897	\sim Timeout_Watcher
_MHA_AC_MHACOMPLEX	MHA_TCP::Timeout_Watcher, 458
testplugin::ac_parser_t, 897	\sim Wakeup_Event
_MHA_AC_MHAREAL	MHA_TCP::Wakeup_Event, 460
testplugin::ac_parser_t, 897	\sim acConcat_wave
MHA_FUN	acConcat_wave, 144
mha_defs.h, 958	\sim acConcat_wave_config
attribute	acConcat_wave_config, 147
mha_plugin.hh, 981	\sim acPooling_wave
declspec	acPooling_wave, 154
example5.cpp, 942	\sim acPooling_wave_config
example6.cpp, 942	acPooling_wave_config, 156
mha_defs.h, 958	\sim acSteer
mha_plugin.hh, 981	acSteer, 166
_cf	\sim acSteer_config
DynComp::dc_afterburn_t, 282	acSteer_config, 168
_channels	\sim acTransform_wave
DynComp::dc_afterburn_t, 282	acTransform_wave, 170
_conjugate	~acTransform_wave_config
Complex arithmetics in the openMHA, 67	acTransform_wave_config, 172
_linphase_asym	~acmon_t
MHAFilter::smoothspec_t, 534	acmon::acmon_t, 151
_prepare	~acspace2matrix_t
testplugin::if_t, 901	MHA_AC::acspace2matrix_t, 386
_reciprocal	~adm_rtconfig_t
Complex arithmetics in the openMHA, 68	adm_rtconfig_t, 192
_srate	~algo_comm_class_t
DynComp::dc_afterburn_t, 282	MHAKernel::algo_comm_class_t, 570
_steerbf	~analysepath_t
steerbf_config, 895	analysepath_t, 203
_unknown	~analysispath_if_t
testplugin::ac_parser_t, 897	analysispath_if_t, 206
~Async_Notify	~bark2hz_t
MHA_TCP::Async_Notify, 435	MHAOvlFilter::barkscale::bark2hz_t, 580
~Connection	~base_t
MHA_TCP::Connection, 439	MHAParser::base_t, 603
~Delay	~bbcalib_interface_t
ADM::Delay, 185	bbcalib_interface_t, 215
~Event_Watcher MHA_TCP::Event_Watcher, 445	~blockprocessing_polyphase_resampling_t MHAFilter::blockprocessing_polyphase
~Linearphase_FIR	resampling_t, 484
~~Linearphase_i in	_165ampiing_t, 404

~c_ifc_parser_t	PluginLoader::fourway_processor_t, 844
MHAParser::c_ifc_parser_t, 615	\sim fw_t
~cfg_chain_t	fw_t, 322
MHAPlugin::cfg_chain_t, 689	\sim gaintable_t
\sim cfg_t	DynComp::gaintable_t, 287
acsave::cfg_t, 161	\sim gamma_flt_t
~config_t	MHAFilter::gamma_flt_t, 502
MHAPlugin::config_t, 692	~hanning_ramps_t
~connector_base_t	hanning_ramps_t, 330
MHAEvents::connector_base_t, 472	~hilbert_shifter_t
~connector_t	hilbert_shifter_t, 332
MHAEvents::connector_t, 475	\sim hilbert_t
\sim db_if_t	MHASignal::hilbert_t, 743
 db_if_t, 236	~hz2bark t
~delay_spec_t	MHAOvlFilter::barkscale::hz2bark_t, 581
MHASignal::delay_spec_t, 732	~int_t
~delay_t	
MHASignal::delay_t, 733	~io_file_t
~delay_wave_t	io_file_t, 337
MHASignal::delay_wave_t, 735	~io lib t
~doasym classification	io lib t, 341
doasym_classification, 266	~io_parser_t
~doasvm_classification_config	io_parser_t, 344
doasym_classification_config, 268	~io_portaudio_t
~doasvm_feature_extraction	MHAIOPortAudio::io_portaudio_t, 552
doasym_feature_extraction, 270	~io_tcp_fwcb_t
~doasvm_feature_extraction_config	io_tcp_fwcb_t, 347
doasym_feature_extraction_config, 272	~io_tcp_parser_t
~domain handler t	io_tcp_parser_t, 351
MHAPlugin_Split::domain_handler_t, 704	~io_tcp_sound_t
~double_t	io_tcp_sound_t, 356
MHA_AC::double_t, 388	~io_tcp_t
~doublebuffer t	io_tcp_t, 361
MHASignal::doublebuffer_t, 737	~linear_table_t
~dynamiclib_t	MHATableLookup::linear_table_t, 792
dynamiclib_t, 278	~lpc
~emitter_t	lpc, 365
MHAEvents::emitter_t, 477	~lpc_bl_predictor
~fft t	lpc_bl_predictor, 368
MHASignal::fft_t, 739	~lpc_bl_predictor_config
~fftfb_t	lpc_bl_predictor_config, 370
MHAOvIFilter::fftfb_t, 583	~lpc_burglattice
~fftfilter_t	lpc_burglattice, 372
MHAFilter::fftfilter_t, 491	~lpc_burglattice_config
~fftfilterbank t	lpc_burglattice_config, 374
MHAFilter::fftfilterbank_t, 495	~lpc_config
- :	• — •
~filter_t	lpc_config, 376
MHAFilter::filter_t, 499	~matrix_t
~float_t	MHASignal::matrix_t, 751
MHA_AC::float_t, 389	~mha_dblbuf_t
\sim fourway_processor_t	mha_dblbuf_t, 403

\sim mha_fifo_lw_t	~save_var_base_t
mha_fifo_lw_t, 416	ac2lsl::save_var_base_t, 131
\sim mha_fifo_posix_threads_t	\sim save_var_t
mha_fifo_posix_threads_t, 419	ac2lsl::save_var_t, 133
\sim mha fifo t	ac2lsl::save_var_t< mha_complex_t >
mha_fifo_t, 422	135
~mha_fifo_thread_guard_t	acsave::save_var_t, 163
mha_fifo_thread_guard_t, 425	~sf_t
~mha_fifo_thread_platform_t	MHASndFile::sf_t, 789
mha_fifo_thread_platform_t, 426	~sine_t
~mha_rt_fifo_element_t	sine_t, 877
mha_rt_fifo_element_t, 429	~smoothspec_t
~mha_rt_fifo_t	MHAFilter::smoothspec_t, 533
mha_rt_fifo_t, 430	~spec2wave_t
~mhaplug_cfg_t	spec2wave_t, 888
mhaplug_cfg_t, 688	~spec_fader_t
~mhapluginloader_t	spec_fader_t, 890
MHAParser::mhapluginloader_t, 649	~spectrum_t
PluginLoader::mhapluginloader_t, 848	MHA AC::spectrum t, 392
	MHASignal::spectrum_t, 768
~mhaserver_t	~split_t
mhaserver_t, 728	MHAPlugin_Split::split_t, 715
~overlapadd_if_t	~splitted_part_t
overlapadd::overlapadd_if_t, 826	MHAPlugin_Split::splitted_part_t, 719
smoothgains_bridge::overlapadd_if_←	~steerbf
t, 879	steerbf, 893
~overlapadd_t	~steerbf_config
overlapadd::overlapadd_t, 828	steerbf_config, 895
~parser_t	~table t
MHAParser::parser_t, 656	MHATableLookup::table_t, 795
~partitioned_convolution_t	~thread_platform_t
MHAFilter::partitioned_convolution_t, 522	MHAPlugin_Split::thread_platform_t, 723
~patchbay_t	~timoConfig
MHAEvents::patchbay_t, 478	timoConfig, 908
~plug_t	~timoSmooth
plug_t, 837	timoSmooth, 911
~plugin_t	~uint_vector_t
MHAPlugin::plugin_t, 696	MHASignal::uint_vector_t, 776
~pluginloader_t	~uni_processor_t
pluginloader_t, 852	MHAPlugin_Split::uni_processor_t, 725
~plugs_t	~wave2spec_t
mhachain::plugs_t, 468	wave2spec_t, 918
~port_t	~waveform_t
MHAJack::port_t, 567	MHA_AC::waveform_t, 395
\sim posix_threads_t	MHASignal::waveform_t, 780
MHAPlugin_Split::posix_threads_t, 711	~wavwriter t
\sim prediction_error	wavwriter_t, 922
prediction_error, 853	~windowselector_t
~prediction_error_config	windowselector_t, 924
prediction_error_config, 856	Wildowsciootol_t, 527
~rt_nlms_t	A
 rt_nlms_t, 865	lpc_config, 377
– –·	

MHAFilter::filter_t, 500	Delay, 184
MHAFilter::gamma_flt_t, 503	m_coeff, 185
MHAFilter::iir_filter_t, 508	m_fullsamples, 185
a	m_norm, 185
MHAParser::base_t::replace_t, 609	m_now_in, 185
A_	m_state, 185
MHAFilter::complex_bandpass_t, 488	process, 185
MHAFilter::iir_ord1_real_t, 511	ADM::Delay< F >, 184
AC DIM MISMATCH	ADM::Linearphase_FIR< F >, 186
mha_algo_comm.cpp, 955	ADM::Linearphase_FIR
AC_INVALID_HANDLE	~Linearphase_FIR, 187
mha_algo_comm.cpp, 955	Linearphase_FIR, 186
AC INVALID NAME	m_alphas, 187
mha_algo_comm.cpp, 955	m_now, 187
AC_INVALID_OUTPTR	m_order, 187
mha_algo_comm.cpp, 955	m_output, 187
AC STRING TRUNCATED	process, 187
mha_algo_comm.cpp, 955	ADM, 79
AC SUCCESS	ADM::ADM, 182
mha_algo_comm.cpp, 955	C, 80
AC_TYPE_MISMATCH	DELAY_FREQ, 80
mha_algo_comm.cpp, 955	PI, 80
ACSAVE_FMT_MAT4	START_BETA, 80
acsave.cpp, 929	subsampledelay_coeff, 79
ACSAVE_FMT_TXT	ALGO_COMM_ID_STR
acsave.cpp, 929	mha_algo_comm.hh, 957
ACSAVE_FMT_M	ASSERT_EQUAL_DIM_PTR
acsave.cpp, 929	mha_signal.cpp, 986
ACSAVE SFMT MAT4	ASSERT EQUAL DIM
acsave.cpp, 929	mha_signal.cpp, 986
ACSAVE_SFMT_TXT	ASYNC_CONNECT_STARTED
acsave.cpp, 929	mha_tcp.cpp, 998
ACSAVE_SFMT_M	abandonned
acsave.cpp, 929	mha_rt_fifo_element_t, 429
ADM::ADM< F >, 181	abs
ADM::ADM	Complex arithmetics in the openMHA, 66
ADM, 182	abs2
beta, 183	Complex arithmetics in the openMHA, 66
m_beta, 183	ac
m_decomb, 183	ac2wave_t, 142
m delay back, 183	acConcat_wave_config, 147
m_delay_back, 183	acPooling_wave_config, 157
_ •	<u> </u>
m_lp_bf, 183 m_lp_result, 183	acTransform_wave_config, 172
	acmon::acmon_t, 152
m_mu_beta, 183	acsave::cfg_t, 162
m_powerfilter_coeff, 183	acsave::save_var_t, 164
m_powerfilter_norm, 183	doasvm_classification_config, 268
m_powerfilter_state, 183	fw_t, 324
process, 182	latex_doc_t, 364
ADM::Delay	lpc_bl_predictor_config, 370
\sim Delay, 185	lpc_burglattice_config, 374

MHA_AC::ac2matrix_helper_t, 382	buf, 135
MHA_AC::double_t, 388	num_entries, 135
MHA_AC::float_t, 389	save_var_t, 135
MHA_AC::int_t, 390	send_frame, 135
MHA_AC::spectrum_t, 393	stream, 135
MHA_AC::waveform_t, 396	vec, 135
MHAKernel::algo_comm_class_t, 572	ac2lsl::save_var_t< T >, 132
MHAMultiSrc::base_t, 574	ac2lsl t
MHAPlugin::plugin_t, 698	ac2lsl::ac2lsl_t, 128
mhachain::plugs_t, 468	ac2matrix_helper_t
PluginLoader::mhapluginloader_t, 850	MHA_AC::ac2matrix_helper_t, 381
prediction_error_config, 856	ac2matrix t
rt_nlms_t, 865	MHA_AC::ac2matrix_t, 383
shadowfilter_end::cfg_t, 873	ac2osc.cpp, 926
steerbf_config, 895	ac2osc_t, 136
testplugin::if_t, 901	ac2osc t, 137
timoConfig, 908	acspace, 139
AC variable, 4	b_record, 139
ac2lsl, 77	framerate, 139
ac2lsl.cpp, 926	host, 138
ac2lsl::ac2lsl_t, 126	lo addr, 139
ac2lsl_t, 128	mode, 139
activate, 129	patchbay, 139
patchbay, 129	port, 138
prepare, 128	prepare, 138
process, 128	process, 138
release, 128	release, 138
rt_strict, 129	rt_strict, 139
rt_strict_flag, 129	rt strict flag, 139
skip, 129	rtmem, 139
update, 128	send_osc_float, 138
varlist, 129	skip, 139
vars, 129	skipcnt, 139
ac2lsl::cfg_t, 129	ttl, 139
activate, 130	update_mode, 138
cfg_t, 130	vars, 139
process, 130	ac2wave.cpp, 926
skip, 130	ac2wave_if_t, 140
skipcnt, 130	ac2wave_if_t, 141
varlist, 130	delay_ac, 141
ac2lsl::save_var_base_t, 131	delay_in, 141
~save_var_base_t, 131	gain ac, 141
send_frame, 131	gain_in, 141
ac2lsl::save_var_t	name, 141
~save_var_t, 133	patchbay, 141
buf, 133	prepare, 141
save_var_t, 133	prepared, 141
send_frame, 133	process, 141
stream, 133	release, 141
ac2lsl::save_var_t< mha_complex_t >, 134	update, 141
~save_var_t, 135	zeros, 141
_ ′	•

ac2wave_t, 142 ac, 142	alpha, 155 like_ratio_name, 155
ac2wave_t, 142	lower_threshold, 155
channels, 142	max_pool_ind_name, 155
delay_ac, 143	neighbourhood, 155
delay_in, 143	numsamples, 155
frames, 142	p_biased_name, 155
gain ac, 143	p name, 155
gain_in, 143	patchbay, 155
name, 143	pool_name, 155
process, 142	pooling_type, 155
w, 142	pooling_wndlen, 155
ac_	prepare, 154
 combc_t, 231	prob_bias, 155
MHAParser::mhapluginloader_t, 650	process, 154
ac_fifo	release, 155
analysepath_t, 204	update cfg, 155
ac_monitor_t	upper_threshold, 155
acmon::ac_monitor_t, 148	acPooling_wave.cpp, 928
ac_monitor_type.cpp, 926	INSERT_PATCH, 928
ac_monitor_type.hh, 926	PATCH_VAR, 928
ac_parser_t	acPooling_wave.h, 928
testplugin::ac_parser_t, 897	acPooling_wave_config, 156
acConcat_wave, 143	\sim acPooling_wave_config, 156
∼acConcat_wave, 144	ac, 157
acConcat_wave, 144	acPooling_wave_config, 156
name_conAC, 146	alpha, 157
num_AC, 146	c, 157
patchbay, 146	insert, 156
prefix_names_AC, 146	like_ratio, 157
prepare, 144	low_thresh, 157
process, 144	neigh, 157
release, 146 samples AC, 146	p, 157
update_cfg, 146	p_biased, 157 p_max, 157
acConcat_wave.cpp, 927	p_max, 157 pool, 157
INSERT_PATCH, 927	pooling_ind, 157
PATCH VAR, 927	pooling_ind, 157 pooling_option, 157
acConcat_wave.h, 927	pooling_size, 157
acConcat wave config, 146	prob_bias_func, 157
~acConcat_wave_config, 147	process, 156
ac, 147	raw_p_name, 157
acConcat_wave_config, 147	up_thresh, 157
numSamples_AC, 147	acSteer, 165
process, 147	~acSteer, 166
strNames_AC, 147	acSteer, 166
vGCC con, 147	acSteerName1, 167
vGCC, 147	acSteerName2, 167
acPooling_wave, 153	nrefmic, 167
∼acPooling_wave, 154	nsteerchan, 167
acPooling_wave, 154	patchbay, 167

prepare, 166	raw_p_name, 172
process, 166	resolution, 172
release, 166	rotated_i, 172
steerFile, 167	rotated_p, 172
update_cfg, 167	to_from, 172
acSteer.cpp, 929	accept
INSERT_PATCH, 929	MHA_TCP::Server, 448
PATCH_VAR, 929	accept_event
acSteer.h, 929	MHA_TCP::Server, 449
acSteer_config, 167	accept_loop
\sim acSteer_config, 168	io_tcp_t, <mark>361</mark>
acSteer_config, 168	acceptor_started
insert, 168	mhaserver_t, 728
nangle, 168	ack_fail
nchan, 168	mhaserver_t, 729
nfreq, 168	ack_ok
nrefmic, 168	mhaserver_t, 729
nsteerchan, 168	acmon, 77
specSteer1, 168	acmon.cpp, 927
specSteer2, 168	acmon::ac_monitor_t, 147
acSteerName1	ac_monitor_t, 148
acSteer, 167	dimstr, 149
acSteerName2	getvar, 149
acSteer, 167	mon, 149
acTransform_wave, 169	mon_complex, 149
~acTransform_wave, 170	mon_mat, 149
acTransform_wave, 170	mon_mat_complex, 149
ang_name, 171	name, 149
numsamples, 171	p_parser, 150
patchbay, 171	use_mat, 150
prepare, 170	acmon::acmon_t, 150
process, 170	~acmon_t, 151
raw_p_max_name, 171	ac, 152
raw_p_name, 171	acmon_t, 151
release, 170	algo, 152
rotated_p_max_name, 171	b_cont, 152
rotated_p_name, 171	b_snapshot, 152
to_from, 171	chain, 152
update_cfg, 171	dimensions, 152
acTransform_wave.cpp, 929	dispmode, 152
INSERT_PATCH, 930	patchbay, 152
PATCH_VAR, 930	prepare, 151
acTransform_wave.h, 930	process, 152
acTransform_wave_config, 171	recmode, 152
~acTransform_wave_config, 172	release, 151
ac, 172	save_vars, 152
acTransform_wave_config, 172	update_recmode, 152
ang_name, 172	varlist, 152
offset, 172	vars, 152
process, 172	acmon_t
raw_p_max_name, 172	acmon::acmon_t, 151

acsave, 78	ndim, 164
acsave.cpp, 928	nframes, 164
ACSAVE_FMT_MAT4, 929	save_m, 164
ACSAVE FMT TXT, 929	save_mat4, 163
ACSAVE FMT M, 929	save_txt, 163
ACSAVE SFMT MAT4, 929	save_var_t, 163
ACSAVE_SFMT_TXT, 929	store_frame, 163
ACSAVE_SFMT_M, 929	acsave_t
	_
acsave::acsave_t, 158	acsave::acsave_t, 159
acsave_t, 159	acspace
algo, 160	ac2osc_t, 139
b_flushed, 160	acspace2matrix_t
b_prepared, 160	MHA_AC::acspace2matrix_t, 385
bflush, 160	acspace_template
chain, 160	analysispath_if_t, 206
event_start_recording, 160	act
event_stop_and_flush, 160	wavwriter t, 922
fileformat, 160	actgains
fname, 160	fader_if_t, 305
patchbay, 160	activate
prepare, 159	ac2lsl::ac2lsl t, 129
• •	<u> </u>
process, 159, 160	ac2lsl::cfg_t, 130
reclen, 160	activate_query
release, 159	MHAParser::base_t, 607
variables, 160	active
varlist, 160	addsndfile::addsndfile_if_t, 175
varlist_t, 159	acvar
acsave::cfg_t, 161	MHA_AC::ac2matrix_helper_t, 382
\sim cfg_t, 161	adapt_filter_param_t
ac, 162	MHAFilter::adapt_filter_param_t, 480
cfg_t, 161	adapt_filter_state_t
flush_data, 161	MHAFilter::adapt_filter_state_t, 481
max_frames, 162	adapt_filter_t
nvars, 162	MHAFilter::adapt_filter_t, 482
rec_frames, 162	add
store_frame, 161	MHASignal::loop_wavefragment_t, 745
varlist, 162	add_entry
acsave::mat4head_t, 162	MHAParser::keyword list t, 634
cols, 162	MHATableLookup::linear_table_t, 793
imag, 162	MHATableLookup::xy_table_t, 798
	• • • —
namelen, 162	add_fun
rows, 162	MHAOvlFilter::scale_var_t, 599
t, 162	add_parent_on_insert
acsave::save_var_t, 163	MHAParser::base_t, 607
~save_var_t, 163	add_plug
ac, 164	altplugs_t, 202
b_complex, 164	add_plugin
data, 164	pluginbrowser_t, 840
framecnt, 164	add_plugins
maxframe, 164	pluginbrowser_t, 840
name, 164	add_replace_pair

MHAParser::base_t, 607	resampled_soundfile_t, 178
added_via_plugs	addsndfile::sndfile_t, 179
altplugs_t, 202	sndfile_t, 179
addsndfile, 78	addsndfile::waveform_proxy_t, 180
addsndfile_resampling_mode_t, 78	waveform_proxy_t, 181
DO RESAMPLE, 78	addsndfile_if_t
DONT RESAMPLE PERMISSIVE, 78	addsndfile::addsndfile_if_t, 174
DONT_RESAMPLE_STRICT, 78	addsndfile_resampling_mode_t
level adaptor, 78	addsndfile, 78
resampled num frames, 79	adm
wave_reader, 78	adm_rtconfig_t, 193
addsndfile.cpp, 930	adm.cpp, 931
DEBUG, 931	adm_fir_decomb, 931
addsndfile::addsndfile_if_t, 173	adm_fir_lp, 931
active, 175	adm.hh, 931
addsndfile_if_t, 174	adm_fir_decomb
change_mode, 175	adm.cpp, 931
channels, 175	adm_fir_lp
filename, 175	adm.cpp, 931
level, 175	adm_if_t, 188
levelmode, 175	adm_if_t, 189
loop, 175	beta, 190
mapping, 175	bypass, 190
mhachannels, 175	coeff_decomb, 190
mode, 175	coeff_lp, 190
numchannels, 175	decomb_order, 190
patchbay, 175	distances, 190
path, 175	front_channels, 190
prepare, 174	input_channels, 190
process, 174	is_prepared, 190
ramplen, 175	lp_order, 190
release, 174	mu beta, 190
	out, 190
resamplingmode, 175	•
scan_dir, 175	patchbay, 190
search_pattern, 175	prepare, 189
search_result, 175	process, 189
set_level, 175	rear_channels, 190
startpos, 175	release, 189
uint_mode, 175	srate, 190
update, 174	tau_beta, 190
addsndfile::level_adapt_t, 176	update, 189
can_update, 177	adm_rtconfig_t, 190
get_level, 177	~adm_rtconfig_t, 192
ilen, 177	adm, 193
I_new, 177	adm_rtconfig_t, 191
l_old, 177	adm_t, 191
level_adapt_t, 176	adms, 193
pos, 177	check_index, 192
update_frame, 177	decomb_coeffs, 193
wnd, 177	front_channel, 193
addsndfile::resampled_soundfile_t, 177	front_channels, 193

lp_coeffs, 193	lpc, 366
num_adms, 192	algos
rear_channel, 193	MHAPlugin_Split::split_t, 716
rear_channels, 193	mhachain::chain_base_t, 465
adm t	mhachain::plugs_t, 468
adm_rtconfig_t, 191	all_dump
adms	MHAParser, 107
adm_rtconfig_t, 193	all_ids
algo	MHAParser, 107
acmon::acmon_t, 152	alloc_plugs
acsave::acsave_t, 160	mhachain::plugs_t, 468
analysispath_if_t, 206	almost
coherence::cohflt_if_t, 224	Complex arithmetics in the openMHA, 68
db_if_t, 237	alph
dc::dc_if_t, 240	plingploing::plingploing_t, 836
fftfilterbank::fftfb_interface_t, 316	alpha
MHAPlugin_Resampling::resampling_if	acPooling_wave, 155
t, 700	acPooling wave config, 157
- :	<u> </u>
multibandcompressor::interface_t, 814	cfg_t, 222
nlms_t, 818	coherence::cohflt_t, 226
overlapadd::overlapadd_if_t, 827	coherence::vars_t, 228
route::interface_t, 862	alpha_const
smoothgains_bridge::overlapadd_if_←	timoConfig, 908
t, 880	alpha_const_limits_hz
wave2spec_if_t, 916	timo_params, 906
algo_comm_class_t	timoSmooth, 913
MHAKernel::algo_comm_class_t, 570	alpha_const_vals
algo_comm_default	timo_params, 906
mha_algo_comm.cpp, 955	timoSmooth, 913
mha_algo_comm.hh, 957	alpha_frame
algo_comm_id_string	timoConfig, 909
MHAKernel::algo_comm_class_t, 572	alpha_frame_AC
algo_comm_id_string_len	timo_AC, 904
MHAKernel::algo_comm_class_t, 572	alpha_hat
algo_comm_safe_cast	timoConfig, 909
MHAKernel, 98	alpha_hat_AC
algo_comm_t, 194	timo_AC, 904
get_entries, 198	alpha_pitch
get_error, 198	timo_params, 906
get_var, 197	timoSmooth, 912
get_var_float, 197	alpha_prev
get_var_int, 197	timoConfig, 909
handle, 194	alphaPH1mean
insert_var, 194	noisePowProposedScale::interface_t, 822
insert var float, 195	alphaPH1mean_
insert_var_int, 195	noisePowProposedScale::noisePow↔
is_var, 196	Proposed, 824
mha.h, 954	alphaPSD_
remove_ref, 196	noisePowProposedScale::noisePow↔
remove_var, 195	Proposed, 824
algo_name	alphaPSD
0	

noisePowProposedScale::interface_t, 822	inner_error, 204
altplugs.cpp, 932	inner_input, 204
MHAPLUGIN_OVERLOAD_OUTDOM↔	inner_out_domain, 204
AIN, 932	inner_process_wave2spec, 204
altplugs_t, 199	inner_process_wave2wave, 204
add_plug, 202	input_to_process, 204
added_via_plugs, 202	libdata, 204
altplugs_t, 200	outer_ac, 204
cfin, 202	outer_ac_copy, 204
cfout, 202	priority, 204
current, 202	ProcessMutex, 204
delete_plug, 202	rt_process, 204
event_add_plug, 201	scheduler, 204
event_delete_plug, 201	svc, 204
event_select_plug, 201	thread, 204
event_set_plugs, 201	wave_fifo, 204
fallback_spec, 202	analysispath.cpp, 933
fallback_wave, 202	thread start, 933
nondefault labels, 202	analysispath_if_t, 205
parse, 201	~analysispath_if_t, 206
parser_plugs, 202	acspace_template, 206
patchbay, 202	algo, 206
plugs, 202	analysispath_if_t, 206
prepare, 200	chain, 206
• •	
prepared, 202	fifolen, 206
proc_ramp, 201	fragsize, 206
process, 201	libname, 206
ramp_counter, 202	loadlib, 206
ramp_len, 202	patchbay, 206
ramplen, 202	plug, 206
release, 200	prepare, 206
select_plug, 202	priority, 206
selected_plug, 202	process, 206
update_ramplen, 201	release, 206
update_selector_list, 201	vars, 206
use_own_ac, 202	analytic
amplitude	hilbert_shifter_t, 332
sine_cfg_t, 876	ang_name
analysemhaplugin.cpp, 932	acTransform_wave, 171
main, 933	acTransform_wave_config, 172
print_ac, 933	angle
strdom, 933	Complex arithmetics in the openMHA, 63
analysepath_t, 203	angle_ind
\sim analysepath_t, 203	steerbf, 894
ac_fifo, 204	angle_src
analysepath_t, 203	steerbf, 894
attr, 204	angles
cond_to_process, 204	doasvm_classification, 267
flag_terminate_inner_thread, 204	announce_port
has_inner_error, 204	mhaserver_t, 729
inner_ac_copy, 204	antialias
— · · ·	

ds_t, 277	HTL, 210
us_t, 914	UCL, 210
apply_gains	AuditoryProfile::parser_t::fmap_t, 210
MHAOvlFilter::fftfb_t, 583	f, 211
multibandcompressor::plugin_signals_t,	fmap_t, 211
815	get_fmap, 211
aquire_mutex	name_, <mark>211</mark>
mha_fifo_posix_threads_t, 419	patchbay, 211
mha_fifo_thread_platform_t, 427	validate, 211
arg	value, 211
MHA_TCP::Thread, 455	AuditoryProfile::profile_t, 212
assign	get_ear, 212
MHASignal::waveform_t, 784	L, 213
Vector and matrix processing toolbox, 48,	R, 213
49	AuditoryProfile::profile_t::ear_t, 213
assign_channel	convert_empty2normal, 213
MHASignal::waveform_t, 784	HTL, 213
assign_frame	UCL, 213
MHASignal::waveform_t, 784	average
Async_Notify	coherence::vars_t, 228
MHA_TCP::Async_Notify, 435	avg_ipd
async_poll_msg	coherence::cohflt_t, 226
fw_t, 324	azimuth
async_read	mha_direction_t, 406
fw_t, 324	В
async_rmslevel_t	MHAFilter::filter t, 500
MHASignal::async_rmslevel_t, 730	MHAFilter::iir_filter_t, 508
attack	b
cfg_t, 222	doasvm_classification, 267
dc::dc_t, 242	MHAParser::base_t::replace_t, 609
dc_simple::level_smoother_t, 258	В
softclip_t, 883	MHAFilter::complex_bandpass_t, 488
softclipper_t, 884	MHAFilter::iir_ord1_real_t, 511
attr	b_check_version
analysepath_t, 204	PluginLoader::mhapluginloader_t, 851
MHAPlugin_Split::posix_threads_t, 712	b_complex
auditory_profile.cpp, 933	acsave::save_var_t, 164
auditory_profile.h, 933	b_cont
AuditoryProfile, 80	acmon::acmon_t, 152
AuditoryProfile::fmap_t, 207	b_est
get_frequencies, 207	lpc_bl_predictor_config, 370
get_values, 207	b_exit_request
isempty, 207	fw_t, 325
AuditoryProfile::parser_t, 208	b_flushed
get_current_profile, 209	acsave::acsave_t, 160
L, 209	b_fw_started
parser_t, 209	io_parser_t, 345
R, 209	b_is_input
AuditoryProfile::parser_t::ear_t, 209	calibrator_runtime_layer_t, 217
ear_t, <mark>210</mark>	calibrator_t, 219
get_ear, 210	b_is_prepared

PluginLoader::mhapluginloader_t, 851	bartlett_t
b_loop	MHAWindow::bartlett_t, 800
MHASignal::loop_wavefragment_t, 747	base_t
b_ltg	MHAMultiSrc::base_t, 574
coherence::cohflt_t, 227	MHAN/indow//hass_t_801_803
b_prepared	MHAWindow::base_t, 801, 802
acsave::acsave_t, 160	basename
io_file_t, 339	save_spec_t, 868
io_parser_t, 345	save_wave_t, 869
MHAJack::client_t, 565	shadowfilter_begin::shadowfilter_begin + 970
mhachain::chain_base_t, 465	_t, 872
mhachain::plugs_t, 468	shadowfilter_end::shadowfilter_end_←
b_ready	t, 875
MHAJack::client_avg_t, 556	bass
b_record	plingploing::plingploing_t, 835
ac2osc_t, 139	bassmod
b_snapshot	plingploing::if_t, 833
acmon::acmon_t, 152	bassmod_
b_starting	plingploing::plingploing_t, 836
io_parser_t, 345	bassperiod
b_stopped	plingploing::if_t, 834
io_parser_t, 345	bassperiod_
MHAJack::client_avg_t, 556	plingploing::plingploing_t, 836
MHAJack::client_noncont_t, 558	bbcalib_interface_t, 214
b_use_clipping	~bbcalib_interface_t, 215
calibrator_runtime_layer_t, 217	bbcalib_interface_t, 215
b_use_fir	calib_in, 215
calibrator_runtime_layer_t, 217	calib_out, 215
b_use_profiling	plugloader, 215
mhachain::plugs_t, 469	prepare, 215
BARKSCALE_ENTRIES	process, 215
mha_fftfb.cpp, 965	release, 215
blnvert	bbgain
coherence::cohflt_t, 227	gain::gain_if_t, 328
backward	beta
lpc_bl_predictor_config, 370	ADM::ADM, 183
lpc_burglattice_config, 375	adm_if_t, 190
MHASignal::fft_t, 740	beta_const
backward_scale	timo_params, 906
MHASignal::fft_t, 740	timoSmooth, 912
band_weights	bf_src
dc::dc_vars_t, 245	steerbf, 894
bands	bf_src_copy
dc::wideband_inhib_vars_t, 249	steerbf_config, 895
MHAOvlFilter::fspacing_t, 592	bf_vec
bandw_correction	steerbf_config, 895
speechnoise.cpp, 1032	bflush
bark2hz_t	acsave::acsave_t, 160
MHAOvIFilter::barkscale::bark2hz_t, 580	bin1
bartlett	MHAOvlFilter::fftfb_t, 584
MHAWindow, 122	bin2

MHAOvlFilter::fftfb_t, 584	buf_uses_placement_new
bin2freq	mha_fifo_t, 424
Vector and matrix processing toolbox, 44	buffer
blackman	MHASignal::delay_spec_t, 732
MHAWindow, 123	MHASignal::delay_t, 734
blackman t	MHASignal::delay_wave_t, 735
MHAWindow::blackman_t, 803	buffered_incoming_bytes
blockprocessing_polyphase_resampling_t	MHA_TCP::Connection, 443
	buffered_outgoing_bytes
MHAFilter::blockprocessing_polyphase ### A 404	MHA_TCP::Connection, 443
_resampling_t, 484	burn
blocks	
droptect_t, 275	DynComp::dc_afterburn_rt_t, 279
bookkeeping	DynComp::dc_afterburn_t, 281
MHAFilter::partitioned_convolution_t, 523	multibandcompressor::interface_t, 814
MHAParser::mhapluginloader_t, 650	butter_stop_ord1
bool_mon_t	MHAFilter, 93
MHAParser::bool mon t, 610	bw
bool t	MHAOvlFilter::fscale_bw_t, 589
MHAParser::bool_t, 613	bw_
bpm	MHAFilter::gamma_flt_t, 504
·	bw_generator
plingploing::if_t, 833	MHAFilter::thirdoctave_analyzer_t, 535
bprofiling	bw hz
mhachain::chain_base_t, 465	MHAOvlFilter::fscale_bw_t, 589
bracket_balance	bw_name
MHAParser::StrCnv, 110	dc::dc_vars_t, 245
L	
brown	
speechnoise_t, 891	bwv
	bwv MHAOvlFilter::fftfb_ac_info_t, 582
speechnoise_t, 891	bwv MHAOvlFilter::fftfb_ac_info_t, 582 multibandcompressor::fftfb_plug_t, 812
speechnoise_t, 891 browsemhaplugins.cpp, 934 DEBUG, 934	bwv MHAOvlFilter::fftfb_ac_info_t, 582 multibandcompressor::fftfb_plug_t, 812 bypass
speechnoise_t, 891 browsemhaplugins.cpp, 934 DEBUG, 934 main, 934	bwv MHAOvlFilter::fftfb_ac_info_t, 582 multibandcompressor::fftfb_plug_t, 812 bypass adm_if_t, 190
speechnoise_t, 891 browsemhaplugins.cpp, 934 DEBUG, 934 main, 934 bt	bwv MHAOvlFilter::fftfb_ac_info_t, 582 multibandcompressor::fftfb_plug_t, 812 bypass adm_if_t, 190 db_if_t, 237
speechnoise_t, 891 browsemhaplugins.cpp, 934 DEBUG, 934 main, 934 bt plingploing::plingploing_t, 835	bwv MHAOvlFilter::fftfb_ac_info_t, 582 multibandcompressor::fftfb_plug_t, 812 bypass adm_if_t, 190 db_if_t, 237 dc::dc_t, 242
speechnoise_t, 891 browsemhaplugins.cpp, 934 DEBUG, 934 main, 934 bt plingploing::plingploing_t, 835 buf	bwv MHAOvlFilter::fftfb_ac_info_t, 582 multibandcompressor::fftfb_plug_t, 812 bypass adm_if_t, 190 db_if_t, 237
speechnoise_t, 891 browsemhaplugins.cpp, 934 DEBUG, 934 main, 934 bt plingploing::plingploing_t, 835 buf ac2lsl::save_var_t, 133	bwv MHAOvlFilter::fftfb_ac_info_t, 582 multibandcompressor::fftfb_plug_t, 812 bypass adm_if_t, 190 db_if_t, 237 dc::dc_t, 242
speechnoise_t, 891 browsemhaplugins.cpp, 934 DEBUG, 934 main, 934 bt plingploing::plingploing_t, 835 buf ac2lsl::save_var_t, 133 ac2lsl::save_var_t < mha_complex_t >,	bwv MHAOvlFilter::fftfb_ac_info_t, 582 multibandcompressor::fftfb_plug_t, 812 bypass adm_if_t, 190 db_if_t, 237 dc::dc_t, 242 dc::dc_vars_t, 245
speechnoise_t, 891 browsemhaplugins.cpp, 934 DEBUG, 934 main, 934 bt plingploing::plingploing_t, 835 buf ac2lsl::save_var_t, 133 ac2lsl::save_var_t< mha_complex_t >, 135	bwv MHAOvlFilter::fftfb_ac_info_t, 582 multibandcompressor::fftfb_plug_t, 812 bypass adm_if_t, 190 db_if_t, 237 dc::dc_t, 242 dc::dc_vars_t, 245 dc_simple::dc_vars_t, 256 DynComp::dc_afterburn_vars_t, 284
speechnoise_t, 891 browsemhaplugins.cpp, 934 DEBUG, 934 main, 934 bt plingploing::plingploing_t, 835 buf ac2lsl::save_var_t, 133 ac2lsl::save_var_t< mha_complex_t >, 135 mha_fifo_t, 424	bwv MHAOvlFilter::fftfb_ac_info_t, 582 multibandcompressor::fftfb_plug_t, 812 bypass adm_if_t, 190 db_if_t, 237 dc::dc_t, 242 dc::dc_vars_t, 245 dc_simple::dc_vars_t, 256
speechnoise_t, 891 browsemhaplugins.cpp, 934 DEBUG, 934 main, 934 bt plingploing::plingploing_t, 835 buf ac2lsl::save_var_t, 133 ac2lsl::save_var_t < mha_complex_t >, 135 mha_fifo_t, 424 mha_spec_t, 433	bwv MHAOvlFilter::fftfb_ac_info_t, 582 multibandcompressor::fftfb_plug_t, 812 bypass adm_if_t, 190 db_if_t, 237 dc::dc_t, 242 dc::dc_vars_t, 245 dc_simple::dc_vars_t, 256 DynComp::dc_afterburn_vars_t, 284
speechnoise_t, 891 browsemhaplugins.cpp, 934 DEBUG, 934 main, 934 bt plingploing::plingploing_t, 835 buf ac2lsl::save_var_t, 133 ac2lsl::save_var_t< mha_complex_t >, 135 mha_fifo_t, 424 mha_spec_t, 433 mha_wave_t, 463	bwv MHAOvlFilter::fftfb_ac_info_t, 582 multibandcompressor::fftfb_plug_t, 812 bypass adm_if_t, 190 db_if_t, 237 dc::dc_t, 242 dc::dc_vars_t, 245 dc_simple::dc_vars_t, 256 DynComp::dc_afterburn_vars_t, 284 C
speechnoise_t, 891 browsemhaplugins.cpp, 934 DEBUG, 934 main, 934 bt plingploing::plingploing_t, 835 buf ac2lsl::save_var_t, 133 ac2lsl::save_var_t < mha_complex_t >, 135 mha_fifo_t, 424 mha_spec_t, 433	bwv MHAOvlFilter::fftfb_ac_info_t, 582 multibandcompressor::fftfb_plug_t, 812 bypass adm_if_t, 190 db_if_t, 237 dc::dc_t, 242 dc::dc_vars_t, 245 dc_simple::dc_vars_t, 256 DynComp::dc_afterburn_vars_t, 284 C ADM, 80
speechnoise_t, 891 browsemhaplugins.cpp, 934 DEBUG, 934 main, 934 bt plingploing::plingploing_t, 835 buf ac2lsl::save_var_t, 133 ac2lsl::save_var_t< mha_complex_t >, 135 mha_fifo_t, 424 mha_spec_t, 433 mha_wave_t, 463	bwv MHAOvlFilter::fftfb_ac_info_t, 582 multibandcompressor::fftfb_plug_t, 812 bypass adm_if_t, 190 db_if_t, 237 dc::dc_t, 242 dc::dc_vars_t, 245 dc_simple::dc_vars_t, 256 DynComp::dc_afterburn_vars_t, 284 C ADM, 80 c acPooling_wave_config, 157
speechnoise_t, 891 browsemhaplugins.cpp, 934 DEBUG, 934 main, 934 bt plingploing::plingploing_t, 835 buf ac2lsl::save_var_t, 133 ac2lsl::save_var_t< mha_complex_t >, 135 mha_fifo_t, 424 mha_spec_t, 433 mha_wave_t, 463 buf_c_in	bwv MHAOvlFilter::fftfb_ac_info_t, 582 multibandcompressor::fftfb_plug_t, 812 bypass adm_if_t, 190 db_if_t, 237 dc::dc_t, 242 dc::dc_vars_t, 245 dc_simple::dc_vars_t, 256 DynComp::dc_afterburn_vars_t, 284 C ADM, 80 c acPooling_wave_config, 157 doasvm_classification_config, 268
speechnoise_t, 891 browsemhaplugins.cpp, 934 DEBUG, 934 main, 934 bt plingploing::plingploing_t, 835 buf ac2lsl::save_var_t, 133 ac2lsl::save_var_t< mha_complex_t >, 135 mha_fifo_t, 424 mha_spec_t, 433 mha_wave_t, 463 buf_c_in MHASignal::hilbert_fftw_t, 742 buf_c_out	bwv MHAOvlFilter::fftfb_ac_info_t, 582 multibandcompressor::fftfb_plug_t, 812 bypass adm_if_t, 190 db_if_t, 237 dc::dc_t, 242 dc::dc_vars_t, 245 dc_simple::dc_vars_t, 256 DynComp::dc_afterburn_vars_t, 284 C ADM, 80 C acPooling_wave_config, 157 doasvm_classification_config, 268 io_tcp_sound_t::float_union, 359
speechnoise_t, 891 browsemhaplugins.cpp, 934 DEBUG, 934 main, 934 bt plingploing::plingploing_t, 835 buf ac2lsl::save_var_t, 133 ac2lsl::save_var_t< mha_complex_t >, 135 mha_fifo_t, 424 mha_spec_t, 433 mha_wave_t, 463 buf_c_in MHASignal::hilbert_fftw_t, 742 buf_c_out MHASignal::hilbert_fftw_t, 742	bwv MHAOvlFilter::fftfb_ac_info_t, 582 multibandcompressor::fftfb_plug_t, 812 bypass adm_if_t, 190 db_if_t, 237 dc::dc_t, 242 dc::dc_vars_t, 245 dc_simple::dc_vars_t, 256 DynComp::dc_afterburn_vars_t, 284 C ADM, 80 c acPooling_wave_config, 157 doasvm_classification_config, 268 io_tcp_sound_t::float_union, 359 nlms_t, 818
speechnoise_t, 891 browsemhaplugins.cpp, 934 DEBUG, 934 main, 934 bt plingploing::plingploing_t, 835 buf ac2lsl::save_var_t, 133 ac2lsl::save_var_t< mha_complex_t >, 135 mha_fifo_t, 424 mha_spec_t, 433 mha_wave_t, 463 buf_c_in MHASignal::hilbert_fftw_t, 742 buf_c_out MHASignal::hilbert_fftw_t, 742 buf_in	bwv MHAOvlFilter::fftfb_ac_info_t, 582 multibandcompressor::fftfb_plug_t, 812 bypass adm_if_t, 190 db_if_t, 237 dc::dc_t, 242 dc::dc_vars_t, 245 dc_simple::dc_vars_t, 256 DynComp::dc_afterburn_vars_t, 284 C ADM, 80 c acPooling_wave_config, 157 doasvm_classification_config, 268 io_tcp_sound_t::float_union, 359 nlms_t, 818 prediction_error, 854
speechnoise_t, 891 browsemhaplugins.cpp, 934 DEBUG, 934 main, 934 bt plingploing::plingploing_t, 835 buf ac2lsl::save_var_t, 133 ac2lsl::save_var_t< mha_complex_t >, 135 mha_fifo_t, 424 mha_spec_t, 433 mha_wave_t, 463 buf_c_in MHASignal::hilbert_fftw_t, 742 buf_c_out MHASignal::hilbert_fftw_t, 742 buf_in MHASignal::fft_t, 741	bwv MHAOvlFilter::fftfb_ac_info_t, 582 multibandcompressor::fftfb_plug_t, 812 bypass adm_if_t, 190 db_if_t, 237 dc::dc_t, 242 dc::dc_vars_t, 245 dc_simple::dc_vars_t, 256 DynComp::dc_afterburn_vars_t, 284 C ADM, 80 C acPooling_wave_config, 157 doasvm_classification_config, 268 io_tcp_sound_t::float_union, 359 nlms_t, 818 prediction_error, 854 c1_a
speechnoise_t, 891 browsemhaplugins.cpp, 934 DEBUG, 934 main, 934 bt plingploing::plingploing_t, 835 buf ac2lsl::save_var_t, 133 ac2lsl::save_var_t< mha_complex_t >, 135 mha_fifo_t, 424 mha_spec_t, 433 mha_wave_t, 463 buf_c_in MHASignal::hilbert_fftw_t, 742 buf_c_out MHASignal::hilbert_fftw_t, 742 buf_in MHASignal::fft_t, 741 buf_out	bwv MHAOvlFilter::fftfb_ac_info_t, 582 multibandcompressor::fftfb_plug_t, 812 bypass adm_if_t, 190 db_if_t, 237 dc::dc_t, 242 dc::dc_vars_t, 245 dc_simple::dc_vars_t, 256 DynComp::dc_afterburn_vars_t, 284 C ADM, 80 c acPooling_wave_config, 157 doasvm_classification_config, 268 io_tcp_sound_t::float_union, 359 nlms_t, 818 prediction_error, 854 c1_a MHAFilter::o1_ar_filter_t, 514
speechnoise_t, 891 browsemhaplugins.cpp, 934 DEBUG, 934 main, 934 bt plingploing::plingploing_t, 835 buf ac2lsl::save_var_t, 133 ac2lsl::save_var_t< mha_complex_t >, 135 mha_fifo_t, 424 mha_spec_t, 433 mha_wave_t, 463 buf_c_in MHASignal::hilbert_fftw_t, 742 buf_c_out MHASignal::hilbert_fftw_t, 742 buf_in MHASignal::fft_t, 741 buf_out MHASignal::fft_t, 741	bwv MHAOvlFilter::fftfb_ac_info_t, 582 multibandcompressor::fftfb_plug_t, 812 bypass adm_if_t, 190 db_if_t, 237 dc::dc_t, 242 dc::dc_vars_t, 245 dc_simple::dc_vars_t, 256 DynComp::dc_afterburn_vars_t, 284 C ADM, 80 c acPooling_wave_config, 157 doasvm_classification_config, 268 io_tcp_sound_t::float_union, 359 nlms_t, 818 prediction_error, 854 c1_a MHAFilter::o1_ar_filter_t, 514 c1_r
speechnoise_t, 891 browsemhaplugins.cpp, 934 DEBUG, 934 main, 934 bt plingploing::plingploing_t, 835 buf ac2lsl::save_var_t, 133 ac2lsl::save_var_t< mha_complex_t >, 135 mha_fifo_t, 424 mha_spec_t, 433 mha_wave_t, 463 buf_c_in MHASignal::hilbert_fftw_t, 742 buf_c_out MHASignal::hilbert_fftw_t, 742 buf_in MHASignal::fft_t, 741 buf_out MHASignal::fft_t, 741 buf_r_in	bwv MHAOvlFilter::fftfb_ac_info_t, 582 multibandcompressor::fftfb_plug_t, 812 bypass adm_if_t, 190 db_if_t, 237 dc::dc_t, 242 dc::dc_vars_t, 245 dc_simple::dc_vars_t, 256 DynComp::dc_afterburn_vars_t, 284 C ADM, 80 C acPooling_wave_config, 157 doasvm_classification_config, 268 io_tcp_sound_t::float_union, 359 nlms_t, 818 prediction_error, 854 c1_a MHAFilter::o1_ar_filter_t, 514 c1_r MHAFilter::o1_ar_filter_t, 514
speechnoise_t, 891 browsemhaplugins.cpp, 934 DEBUG, 934 main, 934 bt plingploing::plingploing_t, 835 buf ac2lsl::save_var_t, 133 ac2lsl::save_var_t< mha_complex_t >, 135 mha_fifo_t, 424 mha_spec_t, 433 mha_wave_t, 463 buf_c_in MHASignal::hilbert_fftw_t, 742 buf_c_out MHASignal::fft_t, 741 buf_out MHASignal::fft_t, 741 buf_r_in MHASignal::hilbert_fftw_t, 742	bwv MHAOvlFilter::fftfb_ac_info_t, 582 multibandcompressor::fftfb_plug_t, 812 bypass adm_if_t, 190 db_if_t, 237 dc::dc_t, 242 dc::dc_vars_t, 245 dc_simple::dc_vars_t, 256 DynComp::dc_afterburn_vars_t, 284 C ADM, 80 C acPooling_wave_config, 157 doasvm_classification_config, 268 io_tcp_sound_t::float_union, 359 nlms_t, 818 prediction_error, 854 c1_a MHAFilter::o1_ar_filter_t, 514 c1_r MHAFilter::o1_ar_filter_t, 514 c2_a
speechnoise_t, 891 browsemhaplugins.cpp, 934 DEBUG, 934 main, 934 bt plingploing::plingploing_t, 835 buf ac2lsl::save_var_t, 133 ac2lsl::save_var_t< mha_complex_t >, 135 mha_fifo_t, 424 mha_spec_t, 433 mha_wave_t, 463 buf_c_in MHASignal::hilbert_fftw_t, 742 buf_c_out MHASignal::hilbert_fftw_t, 742 buf_in MHASignal::fft_t, 741 buf_out MHASignal::fft_t, 741 buf_r_in	bwv MHAOvlFilter::fftfb_ac_info_t, 582 multibandcompressor::fftfb_plug_t, 812 bypass adm_if_t, 190 db_if_t, 237 dc::dc_t, 242 dc::dc_vars_t, 245 dc_simple::dc_vars_t, 256 DynComp::dc_afterburn_vars_t, 284 C ADM, 80 C acPooling_wave_config, 157 doasvm_classification_config, 268 io_tcp_sound_t::float_union, 359 nlms_t, 818 prediction_error, 854 c1_a MHAFilter::o1_ar_filter_t, 514 c1_r MHAFilter::o1_ar_filter_t, 514

MHAFilter::o1 ar filter t, 514	calibrator_t, 218
c_ifc_parser_t	patchbay, 219
MHAParser::c_ifc_parser_t, 615	prepare, 218
c_min	prepared, 219
coherence::cohflt_t, 226	process, 218
c_parse_cmd	read_levels, 219
MHAParser::c_ifc_parser_t, 616	release, 218
c parse cmd t	update, 219
MHAParser, 107	update_tau_level, 219
c_parse_err	vars, 219
MHAParser::c_ifc_parser_t, 616	calibrator_variables_t, 219
c_parse_err_t	calibrator_variables_t, 220
MHAParser, 107	config_parser, 220
c_scale	do_clipping, 220
coherence::cohflt_t, 226	fir, 220
CHANLOOP	fragsize, 220
timoconfig.cpp, 1036	nbits, 220
CHECK_EXPR	num_channels, 220
mha_defs.h, 958	peaklevel, 220
CHECK_VAR	rmslevel, 220
-	
mha_defs.h, 958 cLTASS	softclip, 220
	spnoise_channels, 220
MHAOvIFilter::fftfb_ac_info_t, 582	spnoise_level, 220
MHAOvlFilter::fftfb_vars_t, 587	spnoise_mode, 220
calc_in	spnoise_parser, 220
wave2spec_t, 919	srate, 220
calc_out	tau_level, 220
overlapadd::overlapadd_t, 829	can_read
spec2wave_t, 889	MHAFilter::blockprocessing_polyphase ←
calc_pre_wnd	_resampling_t, 485
wave2spec_t, 918	can_read_bytes
calib_in	MHA_TCP::Connection, 441
bbcalib_interface_t, 215	can_read_line
calib_out	MHA_TCP::Connection, 441
bbcalib_interface_t, 215	can_sysread
calibrator_runtime_layer_t, 215	MHA_TCP::Connection, 439
b_is_input, 217	can_syswrite
b_use_clipping, 217	MHA_TCP::Connection, 439
b_use_fir, 217	can_update
calibrator_runtime_layer_t, 216	addsndfile::level_adapt_t, 177
fir, 216	fader_wave::level_adapt_t, 309
firfir2fftlen, 216	catch_condition
firfirlen, 216	MHAPlugin_Split::posix_threads_t, 712
gain, 216	catch_thread
pmode, 217	MHAPlugin_Split::dummy_threads_t, 708
process, 216	MHAPlugin_Split::posix_threads_t, 711
quant, 216	MHAPlugin_Split::thread_platform_t, 724
softclip, 216	categories
speechnoise, 217	plugindescription_t, 841
calibrator_t, 217	cdata
b_is_input, 219	MHASignal::matrix_t, 756

mha_audio_t, 398	cfg_dump
center_frequencies	MHAParser, 107
dc::dc_vars_t, 245	cfg_dump_short
dc_simple::dc_if_t, 251	MHAParser, 107
cf	cfg_t, 221
MHAFilter::thirdoctave_analyzer_t, 535	ac2lsl::cfg_t, 130
MHAOvIFilter::band_descriptor_t, 579	acsave::cfg_t, 161
MHAOvlFilter::fftfb_vars_t, 587	alpha, 222
mha_audio_descriptor_t, 397	attack, 222
plingploing::plingploing t, 835	cfg_t, 221
cf2bands	channel, 222
MHAOvIFilter::fspacing_t, 592	decay, 222
cf_	frozen_noise_, 222
MHAFilter::gamma_flt_t, 504	gain_spec_, <mark>222</mark>
wavwriter_t, 922	gain_wave_, 222
cf_generator	matrixmixer::cfg_t, 378
MHAFilter::thirdoctave_analyzer_t, 535	pos, 222
cf_h	process, 222
MHAOvlFilter::band_descriptor_t, 579	replace_, 222
cf_in	shadowfilter_begin::cfg_t, 870
overlapadd::overlapadd_if_t, 827	shadowfilter_end::cfg_t, 873
smoothgains_bridge::overlapadd_if_ ↔	start_lin, 222
t, 880	use_frozen_, 222
cf_in_	cfin
MHAParser::mhapluginloader_t, 650	altplugs_t, 202
cf_input	fw_t, 325
PluginLoader::mhapluginloader_t, 851	mhachain::chain_base_t, 465
cf_l	route::interface_t, 862
MHAOvIFilter::band descriptor t, 579	cfout
cf_name	altplugs_t, 202
dc::dc_vars_t, 245	fw t, 325
cf_out	mhachain::chain_base_t, 465
overlapadd::overlapadd_if_t, 827	route::interface_t, 862
smoothgains_bridge::overlapadd_if_	cfv
t, 880	MHAOvlFilter::fftfb ac info t, 581
cf_out_	multibandcompressor::fftfb plug t, 812
MHAParser::mhapluginloader_t, 650	cg
cf_output	coherence::cohflt t, 226
PluginLoader::mhapluginloader_t, 851	ch
cfac	MHASignal::doublebuffer_t, 738
route::interface_t, 862	chain
cfg	acmon::acmon_t, 152
MHAPlugin::config_t, 694	acsave::acsave_t, 160
cfg_	analysispath_if_t, 206
MHAFilter::thirdoctave_analyzer_t, 535	db_if_t, 237
cfg_chain	MHAPlugin_Resampling::resampling_if
MHAPlugin::config_t, 694	_t, 700
cfg_chain_current	mhachain::chain_base_t, 465
MHAPlugin::config_t, 694	mhachain::plugs_t, 469
cfg_chain_t	chain_base_t
MHAPlugin::cfg_chain_t, 689	mhachain::chain_base_t, 464

chains	MHAParser::range_var_t, 661
MHAPlugin_Split::split_t, 717	chname
change_mode	dc::dc_vars_t, 245
addsndfile::addsndfile_if_t, 175	chunkbytes_in
channel	io_tcp_sound_t, 357
cfg_t, 222	ci
example5_t, 302	matrixmixer::matmix_t, 380
MHAMultiSrc::channel_t, 574	cleanup_plugs
channel_gain_name	mhachain::plugs_t, 468
combc_if_t, 230	cleanup_unused_cfg
channel_gains_	MHAPlugin::config_t, 694
combc_t, 231	clear
channel_info	MHATableLookup::linear_table_t, 793
mha_spec_t, 433	MHATableLookup::table_t, 795
mha_wave_t, 463	MHATableLookup::xy_table_t, 798
channel_no	mha_fifo_t, 424
example6_t, 303	Vector and matrix processing toolbox, 48
channelconfig_out_	clear_chains
MHAOvlFilter::overlap_save_filterbank_t,	MHAPlugin_Split::split_t, 715
596	clear_plugins
channels	pluginbrowser_t, 840
ac2wave_t, 142	Client
addsndfile::addsndfile_if_t, 175	MHA_TCP::Client, 436
dc::wideband_inhib_vars_t, 249	client_avg_t
MHAFilter::fftfilter_t, 492	MHAJack::client_avg_t, 555
MHAFilter::filter_t, 501	client_noncont_t
MHAParser::mhaconfig_mon_t, 647	MHAJack::client_noncont_t, 558
MHAPlugin_Split::split_t, 716	client_t
MHASignal::delay_t, 734	MHAJack::client_t, 561
mhaconfig_t, 471	clientid
prediction_error_config, 857	dc::dc_vars_t, 245
rt_nlms_t, 865	dc_simple::dc_if_t, 251
sine_cfg_t, 876	clientname
sine_t, 878	MHAIOJack::io_jack_t, 542
testplugin::config_parser_t, 899	MHAIOJackdb::io_jack_t, 547
Vector and matrix processing toolbox, 41	clipmeter
channels_t	softclipper_t, 884
MHAMultiSrc::channels_t, 575	clipped
char_data	softclipper_variables_t, 886
testplugin::ac_parser_t, 897	close session
chdir	wavwriter t, 922
mha_audio_descriptor_t, 397	closed
check index	MHA_TCP::Connection, 443
adm_rtconfig_t, 192	closesocket
check_low	mha_tcp.cpp, 998
MHAParser::range_var_t, 661	cmd_prepare
check_range	MHAIOPortAudio::io_portaudio_t, 552
MHAParser::range_var_t, 661	cmd_release
check_sound_data_type	MHAIOPortAudio::io_portaudio_t, 553
io_tcp_sound_t, 357	cmd_start
check_up	MHAIOPortAudio::io_portaudio_t, 552

amd stap	invert, 228
cmd_stop MHAIOPortAudio::io_portaudio_t, 552	limit, 228
co	Itgcomp, 228
matrixmixer::matmix t, 380	Itgtau, 228
coeff_decomb	mapping, 228
	staticgain, 228
adm_if_t, 190	
coeff_lp adm_if_t, 190	tau, 228 tau_unit, 228
coh_c	vars t, 228
coherence::cohflt_t, 227	cohflt_if_t
coh_rlp	coherence::cohflt_if_t, 224
coherence::cohflt_t, 227	confirmencecomic_ii_t, 224
coherence, 80	coherence::cohflt_t, 226
getcipd, 81	collect_result
coherence.cpp, 934	MHAPlugin_Split::split_t, 715
coherence::cohflt_if_t, 223	MHAPlugin_Split::splitted_part_t, 721
algo, 224	colored_intensity
cohflt if t, 224	Vector and matrix processing toolbox, 56
patchbay, 224	cols
prepare, 224	acsave::mat4head_t, 162
process, 224	combc_if_t, 229
release, 224	channel_gain_name, 230
update, 224	combc_if_t, 230
vars, 224	element_gain_name, 230
coherence::cohflt_t, 225	interleaved, 230
alpha, 226	outchannels, 230
avg_ipd, 226	prepare, 230
b_ltg, 227	process, 230
blnvert, 227	combc_t, 230
c_min, 226	ac_, 231
c_scale, 226	channel_gains_, 231
cg, 226	combc_t, 231
coh_c, 227	element gain name , 231
coh_rlp, 227	interleaved , 231
cohflt t, 226	nbands, 231
g, 226	process, 231
gain, 227	s_out, 231
gain delay, 227	w_out, 231
insert, 226	combinechannels.cpp, 935
limit, 226	comm_var_t, 232
lp1i, 226	data, 233
lp1ltg, 227	data_type, 232
lp1r, 226	num_entries, 232
nbands, 226	stride, 233
process, 226	commentate
s_out, 227	MHAParser, 107
staticgain, 227	commit
coherence::vars_t, 227	DynComp::dc_afterburn_vars_t, 284
alpha, 228	commit_pending
average, 228	DynComp::dc_afterburn_t, 282
delay, 228	commit_t

MHAParser::commit_t, 618	dc_simple::dc_t, 253
Communication between algorithms, 27	compute_something
get_var_float, 29	cpuload_t, 234
get_var_int, 29	compute_something_else
get_var_spectrum, 28	cpuload_t, 235
· ·	Concept of Variables and Data Exchange in
get_var_vfloat, 30	
get_var_waveform, 29	the openMHA, 4
comp_each_iter	cond_to_process
lpc, 366	analysepath_t, 204
lpc_config, 376	config_file_splitter_t
comp_iter	PluginLoader::config_file_splitter_t, 842
lpc_config, 377	config_in
Complex arithmetics in the openMHA, 60	testplugin::if_t, 901
_conjugate, 67	config_out
_reciprocal, 68	testplugin::if_t, 901
abs, 66	config_parser
abs2, 66	calibrator_variables_t, 220
almost, 68	config_parser_t
angle, 63	testplugin::config_parser_t, 898
conjugate, 67	config_t
expi, 63, 65	MHAPlugin::config_t, 692
mha_complex, 62	configfile
normalize, 68	PluginLoader::config_file_splitter_t, 843
operator!=, 67	configname
operator<, 68	PluginLoader::config_file_splitter_t, 843
operator*, 65, 66	configuration, 4
operator*=, 65	configuration variable, 4
operator+, 64	conflux
operator+=, 64	DynComp::dc afterburn rt t, 280
operator-, 64, 65, 67	DynComp::dc afterburn vars t, 284
operator-=, 64	conjugate
operator/, 66, 67	Complex arithmetics in the openMHA, 67
operator/=, 66	Vector and matrix processing toolbox, 59
operator==, 67	connect
reciprocal, 67	MHAEvents::emitter_t, 477
safe_div, 66	MHAEvents::patchbay_t, 478, 479
set, 62, 63	connect_input
stdcomplex, 63	MHAJack::client_t, 562
complex bandpass t	connect_output
MHAFilter::complex_bandpass_t, 487	MHAJack::client_t, 562
complex data	connect_to
• =	MHAJack::port_t, 568
testplugin::ac_parser_t, 897	• —
complex_filter.cpp, 935	connected
complex_filter.h, 935	io_tcp_parser_t, 354
complex_mon_t	Connection AULA TORUCARRACTION 400
MHAParser::complex_mon_t, 619	MHA_TCP::Connection, 439
complex_ofs	connection_loop
MHASignal::matrix_t, 756	io_tcp_t, 361
complex_t	connections
MHAParser::complex_t, 621	MHAEvents::emitter_t, 477
compression	connections_in

MHAIOJack::io_jack_t, 542	cpuload_t, 234
MHAIOJackdb::io_jack_t, 547	factor, 235
connections_out	phase, 235
MHAIOJack::io_jack_t, 542	prepare, 234
MHAIOJackdb::io_jack_t, 547	process, 234
connector	result, 235
MHAFilter::adapt_filter_t, 483	table, 235
MHAFilter::iir_filter_t, 508	use_sine, 235
MHAParser::mhapluginloader_t, 650	create latex doc
connector_base_t	generatemhaplugindoc.cpp, 945
MHAEvents::connector_base_t, 472	create_lock
connector_t	mhamain.cpp, 1022
MHAEvents::connector_t, 475	creator
cons	speechnoise_t, 892
MHAEvents::patchbay_t, 479	creator_A
consecutive_dropouts	MHAFilter::complex bandpass t, 487
<u> </u>	creator B
droptect_t, 275	MHAFilter::complex_bandpass_t, 487
contained_frames	cstr_strerror
MHASignal::ringbuffer_t, 761	mha_errno.c, 960
conv2latex	current
generatemhaplugindoc.cpp, 945	altplugs_t, 202
convert_empty2normal	dc::wideband_inhib_vars_t, 248
AuditoryProfile::profile_t::ear_t, 213	mha_rt_fifo_t, 432
convert_f2logf	current_input_signal_buffer_half_index
gaintable.cpp, 944	MHAFilter::partitioned_convolution_t, 523
copy	current_output_partition_index
MHASignal::spectrum_t, 769	MHAFilter::partitioned_convolution_t, 523
MHASignal::waveform_t, 785	current_powspec
timo_AC, 903	droptect_t, 275
copy_AC	current_thread_priority
timoConfig, 908	MHAPlugin_Split::posix_threads_t, 711
copy_channel	current_thread_scheduler
MHASignal::spectrum_t, 770	MHAPlugin_Split::posix_threads_t, 711
MHASignal::waveform_t, 785	With the lagin_opinpoolx_throado_t, 711
Vector and matrix processing toolbox, 55	DEBUG
copy_error	addsndfile.cpp, 931
MHAIOTCP.cpp, 1018	browsemhaplugins.cpp, 934
copy_from_at	fader wave.cpp, 943
MHASignal::waveform_t, 785	MHAIOFile.cpp, 1003
copy_output_spec	wavrec.cpp, 1039
MHAPlugin_Split::split_t, 715	DEFAULT_RETSIZE
copy_output_wave	mha_parser.hh, 979
MHAPlugin_Split::split_t, 715	DELAY FREQ
copy_permuted	ADM, 80
MHASignal, 120	DO RESAMPLE
corr_out	addsndfile, 78
_ lpc_config, 377	DONT RESAMPLE PERMISSIVE
cpuload.cpp, 935	addsndfile, 78
cpuload_t, 233	DONT_RESAMPLE_STRICT
compute_something, 234	addsndfile, 78
compute_something_else, 235	DUPVEC

dc.cpp, 936	chain, 237
data	db_if_t, 236
acsave::save_var_t, 164	fragsize, 237
comm_var_t, 233	patchbay, 237
DynComp::gaintable_t, 289	plugloader, 237
MHA_AC::acspace2matrix_t, 387	prepare, 236
MHA_AC::double_t, 388	process, 236
MHA_AC::float_t, 389	release, 236
MHA_AC::int_t, 390	db t, 237
MHAParser::bool_mon_t, 611	db_t, 238
MHAParser::bool_t, 613	inner_process, 238
MHAParser::complex_mon_t, 620	plugloader, 238
MHAParser::complex_t, 622	dbspl2pa
MHAParser::float_mon_t, 625	Vector and matrix processing toolbox, 43
MHAParser::float_t, 628	DC
MHAParser::int mon t, 630	dc simple, 82
MHAParser::int t, 632	dc, 81
MHAParser::kw_t, 638	get_audiochannels, 81
MHAParser::mcomplex_mon_t, 639	dc.cpp, 936
MHAParser::mcomplex_t, 641	DUPVEC, 936
MHAParser::mfloat mon t, 643	dc::dc if t, 239
MHAParser::mfloat_t, 646	algo, 240
MHAParser::mint_mon_t, 652	dc_if_t, 240
MHAParser::string_mon_t, 663	patchbay, 240
MHAParser::string_t, 665	prepare, 240
MHAParser::vcomplex_mon_t, 670	process, 240
MHAParser::vcomplex_t, 672	update, 240
MHAParser::vfloat_mon_t, 674	update_monitors, 240
MHAParser::vfloat_t, 677	wbinhib, 240
MHAParser::vint_mon_t, 678	dc::dc_t, 241
MHAParser::vint_t, 681	attack, 242
MHAParser::vstring_mon_t, 682	bypass, 242
MHAParser::vstring_t, 684	dc_t, 242
MHAPlugin::cfg_chain_t, 689	decay, 242
MHASignal::uint_vector_t, 777	explicit insert, 242
mha_rt_fifo_element_t, 429	get_level_in_db, 242
wavwriter_t, 922	get_level_in_db_adjusted, 242
data is initialized	get_nbands, 242
MHAParser::base_t, 608	gt, 242
data_type	inhib_gain, 243
comm_var_t, 232	k nyquist, 243
testplugin::ac_parser_t, 897	level_in_db, 243
data_type_t	level_in_db_adjusted, 243
testplugin::ac_parser_t, 897	max_level_difference, 243
db.cpp, 935	naudiochannels, 243
db2lin	nbands, 243
Vector and matrix processing toolbox, 42	powersum, 242
db_if_t, 235	process, 242
\sim db_if_t, 236	rmslevel, 242
algo, 237	dc::dc_vars_t, 243
bypass, 237	band_weights, 245

bw_name, 245	DynComp::dc_afterburn_rt_t, 279
bypass, 245	dc_afterburn_t
center_frequencies, 245	DynComp::dc_afterburn_t, 281
cf_name, 245	dc_afterburn_vars_t
chname, 245	DynComp::dc_afterburn_vars_t, 284
clientid, 245	dc_if_t
dc_vars_t, 244	 dc::dc_if_t, 240
edge_frequencies, 245	dc simple::dc if t, 250
ef_name, 245	dc_simple, 81
filterbank, 245	DC, 82
filtered_level, 245	force_resize, 82
gainrule, 245	LEVEL, 82
gtdata, 244	not_zero, 82
gtmin, 244	test_fail, 82
gtstep, 244	dc_simple.cpp, 937
•	_ , ,,
input_level, 245	dc_simple::dc_if_t, 249
max_level_difference, 245	center_frequencies, 251
modified, 245	clientid, 251
powersum, 244	dc_if_t, 250
preset, 245	edge_frequencies, 251
tauattack, 244	filterbank, 251
taudecay, 245	gainrule, <mark>251</mark>
taurmslevel, 244	has_been_modified, 251
use_wbinhib, 245	modified, 251
dc::dc_vars_validator_t, 246	mon_g, 251
dc_vars_validator_t, 246	mon_I, 251
dc::wb_inhib_cfg_t, 246	patchbay, 251
dl_diff, 247	prepare, 250
dl_map_max, 247	prepared, 251
dl map min, 247	preset, 251
g_scale, 247	process, 250, 251
I min, 247	read_modified, 251
wb_inhib_cfg_t, 247	release, 250
weights, 247	update dc, 251
dc::wideband_inhib_vars_t, 247	update gain mon, 251
bands, 249	update_level, 251
channels, 249	update_level_mon, 251
current, 248	dc_simple::dc_t, 252
dl_map_max, 248	compression, 253
dl_map_min, 248	dc_t, 253
g scale, 248	expansion, 253
<u> </u>	•
I_min, 248	expansion_threshold, 253
patchbay, 249	limiter, 253
setchannels, 248	limiter_threshold, 253
update, 248	maxgain, 253
weights, 248	mon_g, 253
wideband_inhib_vars_t, 248	mon_l, 253
dc_afterburn.cpp, 936	nbands, 253
mylogf, 937	process, 253
dc_afterburn.h, 937	dc_simple::dc_t::line_t, 254
dc_afterburn_rt_t	line_t, 254

m, 254	adm_if_t, 190
operator(), 254	decrease condition
y0, 254	mha_fifo_posix_threads_t, 420
dc_simple::dc_vars_t, 255	decrement
bypass, 256	mha_fifo_posix_threads_t, 419
dc_vars_t, 255	mha_fifo_thread_platform_t, 427
expansion_slope, 256	default_thread_platform_string
expansion_threshold, 256	split.cpp, 1034
g50, 255	default_thread_platform_type
g80, 255	split.cpp, 1034
limiter_threshold, 256	defaultHighInputLatency
maxgain, 255	MHAIOPortAudio::device_info_t, 550
tauattack, 256	defaultHighOutputLatency
taudecay, 256	MHAIOPortAudio::device_info_t, 550
dc_simple::dc_vars_validator_t, 256	defaultLowInputLatency
dc_vars_validator_t, 257	MHAIOPortAudio::device_info_t, 550
dc_simple::level_smoother_t, 257	defaultLowOutputLatency
attack, 258	MHAIOPortAudio::device_info_t, 550
decay, 258	defaultSampleRate
fftlen, 258	MHAIOPortAudio::device_info_t, 550
level smoother t, 258	Delay
level_spec, 258	ADM::Delay, 184
level_wave, 258	delay, 82
nbands, 258	coherence::vars_t, 228
process, 258	delaysum::delaysum_if_t, 262
dc_t	MHAFilter::gamma_flt_t, 503
dc::dc_t, 242	MHAFilter::partitioned_convolution_t ←
dc_simple::dc_t, 253	::index_t, 525
dc_vars_t	MHAPlugin_Split::split_t, 717
dc::dc_vars_t, 244	MHASignal::delay_spec_t, 732
dc_simple::dc_vars_t, 255	MHASignal::delay_wave_t, 735
dc_vars_validator_t	mha_dblbuf_t, 405
dc::dc_vars_validator_t, 246	delay.cpp, 938
dc_simple::dc_vars_validator_t, 257	delay::interface_t, 259
deallocate_domains	delays, 260
MHAPlugin_Split::domain_handler_t, 705	interface_t, 260
debug	patchbay, 260
io_tcp_parser_t, 354	prepare, 260
debug_file	process, 260
io_tcp_parser_t, 355	update, 260
debug_filename	delay_ac
io_tcp_parser_t, 355	ac2wave_if_t, 141
decay	ac2wave_t, 143
cfg_t, 222	delay_d
dc::dc_t, 242	prediction_error, 855
dc_simple::level_smoother_t, 258	delay_in
softclip_t, 883	ac2wave_if_t, 141
softclipper_t, 884	ac2wave_t, 143
decomb_coeffs	delay_spec_t
adm_rtconfig_t, 193	MHASignal::delay_spec_t, 732
decomb_order	delay_t

MHASignal::delay_t, 733	device_name_updated
delay_w	MHAIOPortAudio::io_portaudio_t, 552
prediction_error, 855	df
delay_wave_t	frequency_translator_t, 319
MHASignal::delay_wave_t, 735	diff_coeffs
delays	mha_filter.cpp, 967
delay::interface_t, 260	diff_t
MHASignal::delay_t, 734	MHAFilter::diff_t, 489
delays_in	digits
MHAIOJack::io_jack_t, 542	mha_error_helpers, 87
delays_out	dimension
MHAIOJack::io_jack_t, 543	MHASignal::matrix_t, 752
delaysum, 82	dimensions
delaysum.cpp, 938	acmon::acmon_t, 152
delaysum::delaysum_if_t, 260	dimstr
delay, 262	acmon::ac_monitor_t, 149
delaysum_if_t, 262	dir
patchbay, 263	mha_channel_info_t, 399
prepare, 262	dir t
process, 262	MHAJack::port_t, 566
release, 262	dir_type
update_cfg, 262	MHAJack::port_t, 568
weights, 262	discard
delaysum::delaysum_t, 263	MHASignal::ringbuffer_t, 762
delaysum_t, 264	disconnect
out, 264	MHAEvents::emitter_t, 477
process, 264	dispmode
weights, 264	acmon::acmon_t, 152
delaysum_if_t	dist
delaysum::delaysum_if_t, 262	plingploing::plingploing_t, 836
delaysum_t	dist1
delaysum::delaysum_t, 264	plingploing::plingploing_t, 836
delete_plug	distance
altplugs_t, 202	mha_direction_t, 407
delta_pitch	distances
timo_params, 906	adm_if_t, 190
timoSmooth, 912	dl diff
descriptor	dc::wb_inhib_cfg_t, 247
mha_audio_t, 398	dl_map_max
desired fill count	dc::wb_inhib_cfg_t, 247
mha drifter fifo t, 411	dc::wideband inhib vars t, 248
device_index	dl_map_min
MHAIOPortAudio::io_portaudio_t, 553	dc::wb_inhib_cfg_t, 247
_	— — — — — — ·
device_index_updated MHAIOPortAudio::io_portaudio_t, 552	dc::wideband_inhib_vars_t, 248 dm
— — — — ·	
device_info	lpc_burglattice_config, 375
MHAIOPortAudio::io_portaudio_t, 553	do_clipping
device_info_t MHAIOPortAudio::device_info_t_550	calibrator_variables_t, 220
MHAIOPortAudio::device_info_t, 550	do_get_var
device_name MHAIOPortAudionio portaudio t 552	testplugin::ac_parser_t, 897
MHAIOPortAudio::io_portaudio_t, 553	do_insert_var

testplugin::ac_parser_t, 897	\sim doasvm_feature_extraction_config, 272
doagcc	doagcc, 272
doasvm_feature_extraction_config, 272	doasvm_feature_extraction_config, 272
doasvm	fft, 272
doasvm_classification_config, 268	fftlen, 272
doasym_classification, 265	G, 272
~doasvm_classification, 266	G_length, 272
angles, 267	GCC end, 272
b, 267	GCC_start, 272
doasvm_classification, 266	hifftwin, 272
max_p_ind_name, 267	hifftwin_sum, 272
p_name, 267	hwin, 272
patchbay, 267	ifft, 272
prepare, 266	in_spec, 272
process, 266	proc_wave, 272
release, 266	process, 272
update_cfg, 267	vGCC_ac, 272
vGCC_name, 267	vGCC, 272
w, 267	wndlen, 272
x, 267	doc_appendix.h, 940
y, 267	doc examples.h, 940
doasym_classification.cpp, 938	doc_frameworks.h, 940
INSERT_PATCH, 939	doc_general.h, 940
PATCH_VAR, 939	doc_kernel.h, 940
doasym_classification.h, 939	doc_matlab.h, 940
doasym_classification_config, 267	doc_mhamain.h, 940
~doasvm_classification_config, 268	doc_parser.h, 940
ac, 268	doc_plugif.cpp, 940
c, 268	doc_plugins.h, 940
doasym, 268	doc_system.h, 940
doasym_classification_config, 268	doc_toolbox.h, 940
p, 268	documentation
p_max, 268	plugindescription_t, 841
process, 268	domain
doasym_feature_extraction, 269	MHAParser::mhaconfig_mon_t, 647
~doasym_feature_extraction, 270	MHAPlugin_Split::splitted_part_t, 721
doasym_feature_extraction, 270	mhaconfig t, 471
fftlen, 271	testplugin::config parser t, 899
max_lag, 271	domain_handler_t
nupsample, 271	MHAPlugin_Split::domain_handler_t, 704
patchbay, 271	double_t
prepare, 270	MHA_AC::double_t, 388
process, 270	doublebuffer t
release, 270	MHASignal::doublebuffer_t, 736
update_cfg, 271	down
vGCC_name, 271	MHASignal::schroeder_t, 765
doasym_feature_extraction.cpp, 939	downsample.cpp, 940
INSERT_PATCH, 939	downsampling_factor
PATCH_VAR, 939	MHAFilter::polyphase_resampling_t, 529
doasym_feature_extraction.h, 939	downscale
doasym_feature_extraction_config, 271	MHASignal::quantizer_t, 759
acacrin_locatoro_contraction_coning, 27 1	wii ii toigilaiquailii201_i, 100

dphi	fw_t, 324
hilbert_shifter_t, 332	dup
drain	MHAFilter::thirdoctave_analyzer_t, 535
DynComp::dc_afterburn_vars_t, 284	dupvec
drain_inv	Vector and matrix processing toolbox, 45
DynComp::dc_afterburn_rt_t, 280	dupvec_chk
drand	Vector and matrix processing toolbox, 46
plingploing, 124	dur_
dropouts	plingploing::plingploing_t, 835
droptect_t, 275	DynComp, 83
droptect.cpp, 940	interp1, 83
droptect_t, 273	interp2, 84
blocks, 275	DynComp::dc_afterburn_rt_t, 278
consecutive_dropouts, 275	burn, 279
current_powspec, 275	conflux, 280
dropouts, 275	dc_afterburn_rt_t, 279
droptect_t, 274	drain_inv, 280
filter_activated, 275	lp, 280
filtered_powspec, 275	maxgain, 280
filtered powspec mon, 275	mpo_inv, 280
level_mon, 275	DynComp::dc_afterburn_t, 280
period, 275	_cf, 282
prepare, 274	_channels, 282
process, 274	_srate, 282
release, 274	burn, 281
reset, 275	commit_pending, 282
tau, 275	dc_afterburn_t, 281
threshold, 275	fb_pars_configured, 282
ds_t, 276	patchbay, 282
antialias, 277	set_fb_pars, 281
ds_t, 276	unset_fb_pars, 281
prepare, 277	update, 282
• •	update_burner, 281
process, 277	• —
ratio, 277	DynComp::dc_afterburn_vars_t, 282
release, 277	bypass, 284 commit, 284
dt mba audia descriptor t 207	
mha_audio_descriptor_t, 397 dtime	conflux, 284
	dc_afterburn_vars_t, 284
MHA_TCP, 89	drain, 284
dummy_interface_test	f, 284
MHAIOFile.cpp, 1003, 1004	maxgain, 284
MHAIOJack.cpp, 1006, 1007	mpo, 284
MHAIOJackdb.cpp, 1008, 1009	taugain, 284
MHAIOPartAvdia ann 1014 1015	DynComp::gaintable_t, 284
MHAIOPortAudio.cpp, 1014, 1015	~gaintable_t, 287
MHAIOTCP.cpp, 1017, 1018	data, 289
dummy_jack_proc_cb	gaintable_t, 286
mhajack.cpp, 1019	get_gain, 287, 288
dummy_threads_t	get_iofun, 288
MHAPlugin_Split::dummy_threads_t, 708	get_vF, 288
dump_mha	get_vL, 288

nbands, 288	nlms_wave.cpp, 1025
nchannels, 288	ear_t
num_channels, 288	AuditoryProfile::parser_t::ear_t, 210
num_F, 288	edge_frequencies
num_L, 288	dc::dc vars t, 245
update, 287	dc_simple::dc_if_t, 251
vFlog, 289	ef
vF, 289	MHAOvlFilter::fftfb_vars_t, 587
vL, 288	ef2bands
dynamiclib_t, 277	MHAOvlFilter::fspacing_t, 592
~dynamiclib_t, 278	ef_h
dynamiclib_t, 278	MHAOvlFilter::band_descriptor_t, 579
fullname, 278	ef I
getmodulename, 278	MHAOvlFilter::band_descriptor_t, 579
getname, 278	ef name
h, 278	dc::dc_vars_t, 245
modulename, 278	efv
resolve, 278	MHAOvIFilter::fftfb ac info t, 581
resolve_checked, 278	multibandcompressor::fftfb_plug_t, 812
	element_gain_name
EPSILON	combc_if_t, 230
lpc_bl_predictor.h, 949	element_gain_name_
lpc_burg-lattice.h, 949	combc_t, 231
timoconfig.cpp, 1036	elevation
EPrew	mha_direction_t, 406
prediction_error_config, 858	emit event
ERR_IHANDLE	MHAEvents::connector_base_t, 473
MHAIOFile.cpp, 1003	MHAEvents::connector t, 475
MHAIOJack.cpp, 1005	emitter
MHAIOJackdb.cpp, 1008	MHAEvents::connector_t, 476
MHAIOParser.cpp, 1011	emitter die
MHAIOPortAudio.cpp, 1014	MHAEvents::connector_base_t, 473
MHAIOTCP.cpp, 1017	emitter_is_alive
ERR_SUCCESS	MHAEvents::connector_base_t, 473
MHAIOFile.cpp, 1003	empty_string
MHAIOJack.cpp, 1005	MHAParser::keyword list t, 635
MHAIOJackdb.cpp, 1008	end_time
MHAIOParser.cpp, 1011 MHAIOPortAudio.cpp, 1014	MHA TCP::Timeout Event, 457
MHAIOTCP.cpp, 1017	entries
ERR_USER	MHAParser::keyword_list_t, 635
MHAIOFile.cpp, 1003	MHAParser::parser_t, 658
MHAIOJack.cpp, 1005	entry
MHAIOJackdb.cpp, 1008	MHAParser::entry_t, 622
MHAIOParser.cpp, 1011	entry_map_t
MHAIOPortAudio.cpp, 1014	MHAParser, 107
MHAIOT Offaddio.cpp, 1017	entry_t
ESTIM_CUR	MHAParser::entry_t, 622
nlms_wave.cpp, 1025	envelope_delay
ESTIM PREV	MHAFilter::gamma_flt_t, 504
nlms_wave.cpp, 1025	envreplace
ESTIMATION TYPES	MHAParser, 108
	ivii i/ ti diooi, 100

eof	MHA_TCP::Event_Watcher, 445
MHA_TCP::Connection, 440	example1.cpp, 941
epsilon	example1_t, 289
smoothgains_bridge::overlapadd_if_←	example1_t, 290
t, 880	prepare, 290
equal_dim	process, 291
Vector and matrix processing toolbox, 46,	release, 290
47	example2.cpp, 941
equidist2bands	example2_t, 291
MHAOvlFilter::fspacing_t, 592	example2_t, 293
erb_hz_f_hz	factor, 294
speechnoise.cpp, 1032	prepare, 293
err in	process, 293
MHAFilter::adapt_filter_param_t, 480	release, 293
MHAFilter::adapt_filter_t, 483	scale_ch, 294
error	example3.cpp, 941
MHA TCP::Thread, 456	example3_t, 294
mha_fifo_lw_t, 418	example3_t, 296
Error handling in the openMHA, 31	factor, 297
MHA_ErrorMsg, 31	on_prereadaccess, 296
MHA_assert, 32	on_scale_ch_readaccess, 296
MHA_assert_equal, 32	on_scale_ch_valuechanged, 296
mha_debug, 32	on_scale_ch_writeaccess, 296
errorlog	patchbay, 297
fw_t, 324	prepare, 296
estimateDebug	prepared, 297
noisePowProposedScale::noisePow←	process, 297
Proposed, 824	release, 297
estimtype	scale_ch, 297
nlms_t, 818	example4.cpp, 941
event_add_plug	example4_t, 298
altplugs_t, 201	example4_t, 299
event_delete_plug	factor, 301
altplugs_t, 201	on prereadaccess, 300
event_select_plug	on_scale_ch_readaccess, 300
altplugs_t, 201	on_scale_ch_valuechanged, 300
event_set_plugs	on_scale_ch_writeaccess, 300
altplugs_t, 201	patchbay, 301
event_start_recording	prepare, 300
acsave::acsave_t, 160	prepared, 301
event_stop_and_flush	process, 300
acsave::acsave_t, 160	release, 300
eventhandler	scale_ch, 301
MHAEvents::connector_t, 476	example5.cpp, 941
eventhandler_s	declspec, 942
MHAEvents::connector_t, 476	example5_t, 301
eventhandler_suu	channel, 302
MHAEvents::connector_t, 476	example5_t, 302
Events	process, 302
MHA_TCP::Event_Watcher, 445	scale, 302
events	example6.cpp, 942

declspec, 942	F_Uflt
example6_t, 302	prediction_error_config, 857
channel_no, 303	f_est
example6_t, 303	lpc_bl_predictor_config, 370
patchbay, 303	f hz
prepare, 303	MHAOvIFilter::fscale_t, 590
process, 303	FINISHED
rmsdb, 303	MHA_TCP::Thread, 454
update_cfg, 303	FMTsz
exec_fw_command	mha_os.h, 973
fw_t, 323	factor
exit_on_stop	cpuload_t, 235
fw_t, 324	example2_t, 294
exit_request	example3_t, 297
fw_t, 322	example4_t, 301
expansion	plugin_interface_t, 839
dc_simple::dc_t, 253	fader_if_t, 304
expansion_slope	actgains, 305
dc_simple::dc_vars_t, 256	fader_if_t, 305
expansion_threshold	newgains, 305
dc simple::dc t, 253	patchbay, 305
dc_simple::dc_vars_t, 256	•
expflt	prepare, 305
MHAOvlFilter::ShapeFun, 103	process, 305
expi	tau, 305
Complex arithmetics in the openMHA, 63,	update_cfg, 305
65	fader_spec.cpp, 942
explicit_insert	fader_wave, 84
dc::dc_t, 242	level_adaptor, 85
export_to	fader_wave.cpp, 942
MHASignal::spectrum_t, 770	DEBUG, 943
MHASignal::waveform_t, 786	fader_wave::fader_wave_if_t, 306
expression_t, 304	fader_wave_if_t, 307
MHAParser::expression_t, 623	gain, 307
extern_connector	patchbay, 307
MHAParser::commit_t, 618	prepare, 307
	prepared, 307
F	process, 307
prediction_error_config, 857	ramplen, 307
rt_nlms_t, 865	release, 307
f	set_level, 307
AuditoryProfile::parser_t::fmap_t, 211	fader_wave::level_adapt_t, 308
DynComp::dc_afterburn_vars_t, 284	can_update, 309
io_tcp_sound_t::float_union, 359	get_level, 309
MHAOvIFilter::fftfb_vars_t, 587	ilen, 309
MHAOvlFilter::fscale_t, 590	I_new, 309
f0_high	l_old, 309
timo_params, 906	level_adapt_t, 308
timoSmooth, 912	pos, 309
f0_low	update_frame, 309
timo_params, 906	wnd, 309
timoSmooth, 912	fader_wave_if_t

fader_wave::fader_wave_if_t, 307	MHASignal::fft_t, 739
fail_on_async_jackerr	fftfb_ac_info_t
MHAIOJackdb::io_jack_t, 547	MHAOvlFilter::fftfb_ac_info_t, 581
fail_on_async_jackerror	fftfb_interface_t
MHAIOJackdb::io_jack_t, 546	fftfilterbank::fftfb_interface_t, 314
MHAJack::client_t, 565	fftfb_plug_t
fail_on_nonmonotonic	fftfilterbank::fftfb_plug_t, 317
MHAOvlFilter::fftfb_vars_t, 587	multibandcompressor::fftfb_plug_t, 812
fail_on_nonmonotonic_cf	fftfb_t
MHAOvlFilter::fspacing_t, 592	MHAOvlFilter::fftfb_t, 583
fail_on_unique_bins	fftfb vars t
MHAOvlFilter::fftfb_vars_t, 587	MHAOvlFilter::fftfb_vars_t, 586
fail_on_unique_fftbins	fftfbpow, 85
MHAOvlFilter::fspacing_t, 592	fftfbpow.cpp, 943
fallback_spec	fftfbpow::fftfbpow_interface_t, 309
altplugs_t, 202	fftfbpow_interface_t, 310
fallback_wave	name, 311
altplugs_t, 202	patchbay, 311
Fast Fourier Transform functions, 70	prepare, 311
mha fft backward, 74	process, 311
mha_fft_backward_scale, 75	update_cfg, 311
mha_fft_forward, 74	fftfbpow::fftfbpow_t, 312
mha_fft_forward_scale, 75	fbpow, 313
mha_fft_free, 71	fftfbpow_t, 313
mha_fft_new, 71	fftfbpow_interface_t
mha_fft_spec2wave, 73	fftfbpow::fftfbpow_interface_t, 310
mha_fft_spec2wave_scale, 76	fftfbpow_t
mha_fft_t, 71	fftfbpow::fftfbpow_t, 313
mha_fft_wave2spec, 72	fftfilter t
mha_fft_wave2spec_scale, 75	MHAFilter::fftfilter_t, 490
fatallog	fftfilterbank, 85
fw_t, 324	fftfilterbank.cpp, 943
fb	fftfilterbank::fftfb_interface_t, 314
MHAFilter::thirdoctave_analyzer_t, 536	algo, 316
fb_acinfo	fftfb_interface_t, 314
fftfilterbank::fftfb_plug_t, 317	nbands, 316
fb_pars_configured	nchannels, 316
DynComp::dc_afterburn_t, 282	patchbay, 316
fbpow	prepare, 315
fftfbpow::fftfbpow_t, 313	prepared, 316
fd	process, 315
MHA TCP::Connection, 443	release, 315
MHA_TCP::OS_EVENT_TYPE, 446	return_imag, 316
fft	update_cfg, 315
doasvm_feature_extraction_config, 272	fftfilterbank::fftfb_plug_t, 316
MHAFilter::fftfilter_t, 493	fb_acinfo, 317
MHAFilter::fftfilterbank_t, 497	fftfb_plug_t, 317
MHAFilter::partitioned_convolution_t, 524	imag, 317
MHAFilter::smoothspec_t, 534	insert, 317
overlapadd::overlapadd_t, 828	process, 317
fft_t	return_imag_, 317

s_out, 317	488
fftfilterbank_t	MHAFilter::fftfilter_t, 491, 492
MHAFilter::fftfilterbank t, 494	MHAFilter::fftfilterbank t, 495, 496
fftlen	MHAFilter::filter_t, 499, 500
dc_simple::level_smoother_t, 258	MHAFilter::iir_filter_t, 507
doasym_feature_extraction, 271	filter_activated
doasvm_feature_extraction_config, 272	droptect_t, 275
MHAFilter::fftfilter_t, 492	filter analytic
MHAFilter::fftfilterbank_t, 496	MHAOvlFilter::overlap_save_filterbank_←
MHAFilter::smoothspec_t, 534	analytic_t, 594
MHAOvlFilter::fftfb t, 584	filter_partitions
MHAOvlFilter::overlap_save_filterbank_	MHAFilter::partitioned_convolution_t, 522
t::vars_t, 597	filter t
MHAParser::mhaconfig_mon_t, 647	MHAFilter::filter_t, 498, 499
mhaconfig_t, 471	filterbank
rmslevel_t, 860	dc::dc_vars_t, 245
testplugin::config_parser_t, 899	dc_simple::dc_if_t, 251
timoConfig, 908	filtered level
fftw plan fft	dc::dc vars t, 245
MHASignal::fft_t, 741	filtered powspec
fftw_plan_ifft	droptect_t, 275
MHASignal::fft_t, 741	filtered_powspec_mon
fftw_plan_spec2wave	droptect_t, 275
MHASignal::fft_t, 741	filtershapefun
fftw_plan_wave2spec	mha_fftfb.cpp, 965
MHASignal::fft_t, 741	fir
fhz2bandno	calibrator_runtime_layer_t, 216
speechnoise.cpp, 1032	calibrator_variables_t, 220
fifo	firchannels
wavwriter_t, 922	MHAFilter::fftfilterbank_t, 496
fifo_size	firfir2fftlen
mha_dblbuf_t, 405	calibrator_runtime_layer_t, 216
fifolen	firfirlen
analysispath_if_t, 206	calibrator_runtime_layer_t, 216
wavrec_t, 921	flag_terminate_inner_thread
fileformat	analysepath_t, 204
acsave::acsave_t, 160	flags
filename	MHAJack::client_t, 565
addsndfile::addsndfile_if_t, 175	float_data
filename_input	testplugin::ac_parser_t, 897
io_file_t, 338	float_mon_t
filename_output	MHAParser::float_mon_t, 624
io_file_t, 338	float_t
fill_info	MHA_AC::float_t, 389
MHAIOPortAudio::device_info_t, 550	MHAParser::float_t, 627
filled	flush_data
MHASignal::async_rmslevel_t, 731	acsave::cfg_t, 161
filter	fmap_t
MHAFilter::adapt_filter_state_t, 481	AuditoryProfile::parser_t::fmap_t, 211
MHAFilter::adapt_filter_t, 482	fmax
MHAFilter::complex_bandpass_t, 487,	frequency_translator_t, 319

fmin	framecnt
frequency_translator_t, 319	acsave::save_var_t, 164
fname	frameno
acsave::acsave_t, 160	MHA_AC::acspace2matrix_t, 387
for_each	noisePowProposedScale::noisePow←
Vector and matrix processing toolbox, 42	Proposed, 824
force_remove_item	framerate
MHAParser::parser_t, 656	ac2osc_t, 139
force_resize	frames
dc_simple, 82	ac2wave_t, 142
forward	prediction_error_config, 856
lpc_bl_predictor_config, 370	rt_nlms_t, 865
lpc_burglattice_config, 374	frameshift
MHASignal::fft_t, 739	hilbert_shifter_t, 332
forward_scale	framework thread priority
MHASignal::fft_t, 740	MHAPlugin_Split::split_t, 717
fr	framework_thread_scheduler
spec_fader_t, 890	MHAPlugin_Split::split_t, 716
frag_out	freq
MHAJack::client avg t, 556	plingploing::plingploing_t, 835
MHAJack::client_noncont_t, 559	freq2bin
fragsize	Vector and matrix processing toolbox, 44
analysispath_if_t, 206	frequency
calibrator_variables_t, 220	sine_t, 878
db_if_t, 237	frequency_response
io_file_t, 338	MHAFilter::partitioned_convolution_t, 523
io_nio_t, 000 io_parser_t, 345	frequency_translator_t, 318
io_tcp_sound_t, 358	df, 319
MHAFilter::fftfilter_t, 492	fmax, 319
MHAFilter::fftfilterbank_t, 496	fmin, 319
MHAFilter::partitioned_convolution_t, 522	frequency_translator_t, 319
MHAFilter::resampling_filter_t, 531	irslen, 319
MHAIOPortAudio::io_portaudio_t, 553	patchbay, 319
MHAJack::client_t, 564	phasemode, 319
MHAParser::mhaconfig_mon_t, 647	prepare, 319
MHAPlugin Resampling::resampling if↔	process, 319
_t, 700	release, 319
رز , 700 mhaconfig_t, 471	update, 319
testplugin::config_parser_t, 899	front_channel
fragsize_in	adm_rtconfig_t, 193
MHAFilter::blockprocessing_polyphase←	front channels
_resampling_t, 485	adm_if_t, 190
fragsize_out	adm_rtconfig_t, 193
MHAFilter::blockprocessing_polyphase↔	frozen_noise_
_resampling_t, 485	cfg_t, 222
fragsize_ratio	frozennoise_length
MHAIOJackdb::io_jack_t, 547	noise_t, 820
fragsize_validator	fs
MHAFilter::resampling_filter_t, 531	MHAFilter::o1_ar_filter_t, 514
frame	fs_
MHA_AC::acspace2matrix_t, 387	MHAOvlFilter::fspacing_t, 592
wii in_noauspaueziiiatiix_t, 307	ivii inovii illeiispaoliig_l, 332

fscale	MHAIOJack::io_jack_t, 542
MHAOvlFilter::fftfb_vars_t, 586	fw_running
fscale_bw_t	fw_t, 322
MHAOvlFilter::fscale_bw_t, 589	fw_samplerate
fscale_t	MHAIOJack::io_jack_t, 542
MHAOvlFilter::fscale t, 590	fw sleep
fshift_hilbert.cpp, 943	fw_t, 324
fspacing_t	fw_sleep_cmd
MHAOvIFilter::fspacing_t, 592	fw_t, 323
ft	fw_starting
spec2wave_t, 888	fw_t, 322
wave2spec_t, 918	fw_stopped
ftype	fw_t, 322
MHAOvlFilter::fftfb_vars_t, 587	fw_stopping
fu	fw_t, 322
rt_nlms_t, 866	fw_t, 320
— — — ·	
fu_previous	~fw_t, 322
rt_nlms_t, 866	ac, 324
fufit	async_poll_msg, 324
rt_nlms_t, 866	async_read, 324
fullname	b_exit_request, 325
dynamiclib_t, 278	ofin, 325
MHAParser::base_t, 607	cfout, 325
plugindescription_t, 841	dump_mha, 324
fullspec	errorlog, 324
hilbert_shifter_t, 332	exec_fw_command, 323
fun1	exit_on_stop, 324
plingploing::plingploing_t, 836	exit_request, 322
fun1_key	fatallog, 324
plingploing::if_t, 833	fw_cmd, 324
plingploing::plingploing_t, 836	fw_exiting, 322
fun1_range	fw_running, 322
plingploing::if_t, 833	fw_sleep, 324
plingploing::plingploing_t, 836	fw_sleep_cmd, 323
fun2	fw_starting, 322
plingploing::plingploing_t, 836	fw stopped, 322
fun2 key	fw_stopping, 322
plingploing::if_t, 833	fw t, 322
plingploing::plingploing_t, 836	fw_unprepared, 322
fun2 range	fw_until, 324
plingploing::if_t, 833	fw_until_cmd, 323
plingploing::plingploing_t, 836	get_input_signal_dimension, 323
fun_t	get_parserstate, 324
MHAWindow::fun_t, 804	inst_name, 324
funs	
	io_error, 325
MHAOvlFilter::scale_var_t, 599	io_lib, 325
fw_cmd	io_name, 324
fw_t, 324	load_io_lib, 323
fw_exiting	load_proc_lib, 323
fw_t, 322	nchannels_out, 324
fw_fragsize	parserstate, 324

patchbay, 325	doasvm_feature_extraction_config, 272
plugin_paths, 324	GCC_start
plugins, 324	doasvm_feature_extraction_config, 272
prepare, 322	GITCOMMITHASH
prepare_vars, 324	mha_plugin.hh, 981
proc_error, 325	GLRDebug
proc_error_string, 325	noisePowProposedScale::noisePow←
proc_lib, 325	Proposed, 824
proc_name, 324	GLRexp
process, 323	noisePowProposedScale::noisePow←
quit, 323	Proposed, 824
release, 323	timoConfig, 909
start, 322	GLR
started, 323	timoConfig, 909
state, 325	GREETING_TEXT
state_t, 322	mhamain.cpp, 1022
stop, 322	gain, 85
stopped, 323	calibrator_runtime_layer_t, 216
fw_unprepared	coherence::cohflt_t, 227
fw_t, 322	fader_wave::fader_wave_if_t, 307
fw_until	multibandcompressor::plugin_signals_t,
fw_t, 324	816
fw_until_cmd	gain.cpp, 944
fw_t, 323	gain::gain_if_t, 327
fw_vars_t, 325	bbgain, 328
fw_vars_t, 326	gain_if_t, 328
lock_channels, 326	gains, 328
lock_srate_fragsize, 326	patchbay, 328
pfragmentsize, 326	prepare, 328
pinchannels, 326	process, 328
psrate, 326	release, 328
unlock_channels, 326	update_bbgain, 328
unlock_srate_fragsize, 326	update_bbgain, 328
fwcb	•
io_tcp_t, 362	update_minmax, 328
	vmax, 328
G	vmin, 328
doasvm_feature_extraction_config, 272	gain::scaler_t, 329
g	scaler_t, 329
coherence::cohflt_t, 226	gain_ac
g50	ac2wave_if_t, 141
dc_simple::dc_vars_t, 255	ac2wave_t, 143
g80	gain_delay
dc_simple::dc_vars_t, 255	coherence::cohflt_t, 227
G_ERRNO	gain_if_t
MHA_TCP, 89	gain::gain_if_t, 328
G_length	gain_in
doasvm_feature_extraction_config, 272	ac2wave_if_t, 141
g_scale	ac2wave_t, 143
dc::wb_inhib_cfg_t, 247	gain_min
dc::wideband_inhib_vars_t, 248	timoConfig, 908
GCC_end	gain_min_db

timo_params, 906	MHAIOJackdb::io_jack_t, 547
timoSmooth, 913	get_all_output_ports
gain_spec_	MHAIOJack::io_jack_t, 542
cfg_t, 222	MHAIOJackdb::io_jack_t, 547
gain_wave_	get_audiochannels
cfg_t, 222	dc, 81
gain_wiener	get_available_space
timoConfig, 909	mha drifter fifo t, 410
gain_wiener_AC	mha_fifo_t, 423
timo AC, 904	get_b
gainrule	MHAParser::base_t::replace_t, 609
dc::dc_vars_t, 245	get_bw_hz
dc_simple::dc_if_t, 251	MHAOvlFilter::fscale_bw_t, 589
gains	get_c1
gain::gain_if_t, 328	MHAFilter::o1flt_lowpass_t, 516
prediction_error, 854	get_c_handle
shadowfilter_end::cfg_t, 873	MHAKernel::algo_comm_class_t, 570
spec_fader_t, 890	get_categories
gaintable.cpp, 944	latex_doc_t, 363
convert_f2logf, 944	PluginLoader::mhapluginloader_t, 850
isempty, 944	get_cdata
gaintable.h, 944	MHASignal::matrix_t, 756
gaintable_t	get_cf_fftbin
DynComp::gaintable_t, 286	MHAOvlFilter::fspacing_t, 592
gamma_flt_t	get_cf_hz
MHAFilter::gamma_flt_t, 502	MHAFilter::thirdoctave_analyzer_t, 535
gamma_post	MHAOvlFilter::fspacing_t, 592
timoConfig, 909	get_cfin
gamma_post_AC	MHAParser::mhapluginloader_t, 650
timo_AC, 903	get_cfout
gauss	MHAParser::mhapluginloader_t, 650
MHAOvlFilter::ShapeFun, 103	get_channelconfig
gcd	MHAOvIFilter::overlap_save_filterbank_t
MHAFilter, 94	596
generatemhaplugindoc.cpp, 945	get_comm_var
conv2latex, 945	MHASignal::matrix_t, 751
create_latex_doc, 945	get_configfile
main, 945	PluginLoader::config_file_splitter_t, 843
get	get_configname
testplugin::config_parser_t, 899	PluginLoader::config_file_splitter_t, 842
get_A	get_connected
MHAFilter::gamma_flt_t, 503	io_tcp_parser_t, 352
get_a	get_cpu_load
MHAParser::base_t::replace_t, 609	MHAJack::client_t, 563
get_ac	get_current_profile
latex_doc_t, 363	AuditoryProfile::parser_t, 209
plug_t, 837	get_delay
get_accept_event	mha_dblbuf_t, 403
MHA_TCP::Server, 448	get_delays_in
get_all_input_ports	MHAIOJack::io_jack_t, 542
MHAIOJack::io_jack_t, 542	get_delays_out
	3

	MHAIOJack::io_jack_t, 542	get_input_channels
get	_des_fill_count	mha_dblbuf_t, 403
	mha_drifter_fifo_t, 410	get_input_fifo_fill_count
get	_documentation	mha_dblbuf_t, 403
	PluginLoader::mhapluginloader_t, 850	get_input_fifo_space
get	ear	mha_dblbuf_t, 403
-	AuditoryProfile::parser_t::ear_t, 210	get_input_signal_dimension
	AuditoryProfile::profile t, 212	fw_t, 323
get	_ef_hz	get interface
-	MHAOvIFilter::fspacing_t, 592	MHA_TCP::Server, 448
aet	_entries	get_iofun
J -	algo_comm_t, 198	DynComp::gaintable_t, 288
	MHAKernel::algo_comm_class_t, 571	get_irs
	MHAParser::keyword_list_t, 634	MHAFilter::fftfilterbank_t, 496
aet	_error	get_last_name
901_	algo_comm_t, 198	MHAParser::mhapluginloader_t, 650
	MHAKernel::algo_comm_class_t, 571	get_last_output
aet	f_hz	MHAFilter::o1flt_lowpass_t, 516
901_	MHAOvlFilter::fscale_t, 590	get_latex_doc
net	_fbpower	latex_doc_t, 363
gcı_	MHAOvlFilter::fftfb_t, 583	get_len_A
net	fbpower_db	MHAFilter::filter_t, 500
gei_	MHAOvIFilter::fftfb_t, 583	get_len_B
get		MHAFilter::filter_t, 500
gei_	MHA_TCP::Connection, 440	get_length
apt	fftlen	MHASignal::uint_vector_t, 777
gei_	MHAOvlFilter::fftfb_t, 584	get_level
aet	fifo_size	addsndfile::level_adapt_t, 177
gei_	mha_dblbuf_t, 403	fader wave::level adapt t, 309
ant	fill_count	get_level_in_db
ge ₁	_m_count mha_drifter_fifo_t, 410	dc::dc_t, 242
		- :
aat	mha_fifo_t, 423	get_level_in_db_adjusted
geı_	_fmap _AuditoryProfile::narger_t::fmap_t_211	dc::dc_t, 242
a a t	AuditoryProfile::parser_t::fmap_t, 211	get_libname
geı_	_fragsize	PluginLoader::config_file_splitter_t, 843
~~+	MHAJack::client_t, 562	get_local_address
geı_	_frequencies	io_tcp_parser_t, 351
~~+	AuditoryProfile::fmap_t, 207	get_local_port
geı_	_fun MUA OudFiltorwoodlo war t. 500	io_tcp_parser_t, 351
~~+	MHAOvlFilter::scale_var_t, 599	get_longmsg
get_	_gain	MHA_Error, 414
1	DynComp::gaintable_t, 287, 288	get_ltass_gain_db
get	_handle	MHAOvlFilter::fftfb_t, 584
	plug_t, 837	get_main_category
get	_index	latex_doc_t, 363
	MHAParser::keyword_list_t, 634	get_mapping
	MHASignal::matrix_t, 755	MHASignal::loop_wavefragment_t, 746
get_	_inner_error	get_max_fill_count
	mha_dblbuf_t, 403	mha_fifo_t, 423
get	_inner_size	get_min_fill_count
	mha_dblbuf_t, 403	mha_drifter_fifo_t, 411

get	_msg	get	_port_capture_latency_int
~~+	MHA_Error, 414	~~+	MHAJack, 97
get	_my_input_ports MHAJack::client_t, 563	get_	_port_playback_latency MHAJack, 97
not	my_output_ports	not	_port_playback_latency_int
yei <u>.</u>	_my_output_ports MHAJack::client_t, 563	gei_	MHAJack, 97
aet	_name	aet	ports
9	MHAOvIFilter::scale_var_t, 599	9	MHAJack::client_t, 563
aet	nbands	aet	_precision
9	dc::dc_t, 242	9	MHAParser, 107
aet	nelements	aet	_process_spec
9	MHASignal::matrix_t, 752	9	plug_t, 837
aet	_nreals	aet	_process_wave
90.	MHASignal::matrix_t, 755	901_	plug_t, 837
aet	_origname	aet	rdatar
9	PluginLoader::config_file_splitter_t, 843	9	MHASignal::matrix_t, 756
aet	os event	aet	read_event
901	MHA_TCP::Timeout_Event, 457	901_	MHA_TCP::Connection, 440
	MHA_TCP::Wakeup_Event, 460	aet	_resynthesis_gain
aet	_outer_size	901_	MHAFilter::gamma_flt_t, 503
901	mha_dblbuf_t, 403	net	_server_port_open
net	output_channels	goi_	io_tcp_parser_t, 352
goi <u>.</u>	mha_dblbuf_t, 403	net	_short_name
net	_output_fifo_fill_count	goi_	MHAJack::port_t, 568
goi <u>.</u>	mha_dblbuf_t, 403	net	_signal
net	_output_fifo_space	goi_	_signal MHAPlugin_Split::domain_handler_t, 706
goi <u>.</u>	mha_dblbuf_t, 403	net	size
net	_parser_tab	goi_	MHASignal::waveform_t, 788
gu	latex_doc_t, 363	net	_srate
net	_parser_var	gci_	MHAJack::client_t, 563
gci_	latex_doc_t, 363	net	_type
net	_parserstate	gci_	MHAParser::window_t, 687
gei	fw_t, 324	aet	_value
not	_paths	gci_	_value MHAParser::keyword_list_t, 634
gei	_patris pluginbrowser_t, 840	aet	values
net	_peer_address	gci_	AuditoryProfile::fmap_t, 207
gu	MHA TCP::Connection, 440	net	var
aet	_peer_port	gci_	algo_comm_t, 197
gci_	MHA_TCP::Connection, 440		MHAKernel::algo_comm_class_t, 571
aet	_physical_input_ports		testplugin::ac_parser_t, 897
gci_	MHAIOJack::io_jack_t, 542	net	_var_float
	MHAIOJackdb::io_jack_t, 546	gei_	_var_noat algo_comm_t, 197
ant	_physical_output_ports		Communication between algorithms, 29
gei	MHAIOJack::io_jack_t, 542		MHAKernel::algo_comm_class_t, 571
	— -	ant	
act	MHAIOJackdb::io_jack_t, 547	yeı_	_var_int algo_comm_t, 197
yeı_	_plugins pluginbrowser_t, 840		Communication between algorithms, 29
act	. •		
yeı _.	_port MHA_TCP::Server, 448	aot	MHAKernel::algo_comm_class_t, 571
act	— · · · · · · · · · · · · · · · · · · ·	yeı_	_var_spectrum Communication between algorithms 28
yeı _.	_port_capture_latency MHAJack. 96	a o t	Communication between algorithms, 28 var vfloat
	IVII IMUALA. JU	uei	vai viiUal

Communication between algorithms, 30	dc::dc_vars_t, 244
get_var_waveform	
Communication between algorithms, 29	h
get_vF	dynamiclib_t, 278
DynComp::gaintable_t, 288	MHASignal::hilbert_t, 743
get_vL	H_ERRNO
DynComp::gaintable_t, 288	MHA_TCP, 89
get_weights	HELP_TEXT
MHAFilter::complex_bandpass_t, 487	mhamain.cpp, 1022
MHAFilter::gamma flt t, 503	HINSTANCE
get_window	mha_plugin.hh, 981
MHAParser::window_t, 686, 687	HSTRERROR
get_window_data	MHA_TCP, 89
windowselector_t, 924	HTL
get_write_event	AuditoryProfile::parser_t::ear_t, 210
MHA_TCP::Connection, 440	AuditoryProfile::profile_t::ear_t, 213
get_xlimits	hamming
MHATableLookup::xy_table_t, 799	MHAWindow, 123
	hamming_t
get_xruns	MHAWindow::hamming_t, 806
MHAJack::client_t, 563	handle
get_xruns_reset	algo_comm_t, 194
MHAJack::client_t, 563	hann
getcipd	hann.cpp, 946
coherence, 81	hann.h, 946
getdata	MHAOvlFilter::ShapeFun, 103
MHASignal::uint_vector_t, 777	hann.cpp, 945
getfullname	hann, 946
PluginLoader::mhapluginloader_t, 849	hannf, 946
getmodulename	PI, 946
dynamiclib_t, 278	hann.h, 946
Getmsg	hann, 946
mha_error.hh, 963	hannf, 946
getname	hann1
dynamiclib_t, 278	plingploing::plingploing_t, 836
MHA_AC::ac2matrix_t, 383	hann2
getusername	plingploing::plingploing_t, 836
MHA_AC::ac2matrix_t, 384	hannf
getvar	hann.cpp, 946
acmon::ac_monitor_t, 149	hann.h, 946
MHA_AC::ac2matrix_helper_t, 381	hanning
GF	MHAWindow, 123
MHAFilter::gamma_flt_t, 503	hanning_ramps_t, 329
groupdelay_t	~hanning_ramps_t, 330
MHASignal::schroeder_t, 764	hanning_ramps_t, 330
gt	len_a, 330
dc::dc_t, 242	len_b, 330
gtdata	operator(), 330
dc::dc_vars_t, 244	ramp_a, 330
gtmin	ramp_b, 330
dc::dc_vars_t, 244	hanning_t
gtstep	MHAWindow::hanning_t, 807

hardlimit	Hs
softclipper_t, 884	MHAFilter::fftfilterbank_t, 496
softclipper_variables_t, 886	hton
has been modified	io_tcp_sound_t, 358
dc_simple::dc_if_t, 251	hw
has inner error	MHAFilter::fftfilterbank_t, 496
analysepath_t, 204	hwin
has_key	doasvm_feature_extraction_config, 272
MHAKernel::comm_var_map_t, 572	hz2bark
has_parser	MHAOvIFilter::FreqScaleFun, 101
PluginLoader::mhapluginloader_t, 849	hz2bark_analytic
has_process	MHAOvIFilter::FreqScaleFun, 101
PluginLoader::mhapluginloader_t, 849	hz2bark_t
header	MHAOvlFilter::barkscale::hz2bark_t, 58
io_tcp_sound_t, 357	hz2erb
help	MHAOvlFilter::FreqScaleFun, 101
MHAParser::base_t, 608	hz2erb_glasberg1990
hifftwin	MHAOvlFilter::FreqScaleFun, 101
doasvm_feature_extraction_config, 272	hz2hz
hifftwin_sum	MHAOvlFilter::FreqScaleFun, 100
doasvm_feature_extraction_config, 272	speechnoise.cpp, 1032
high_side_flat	hz2khz
MHAOvlFilter::band_descriptor_t, 579	MHAOvlFilter::FreqScaleFun, 101
hilbert	hz2log
MHASignal::hilbert_fftw_t, 742	MHAOvlFilter::FreqScaleFun, 101 hz2octave
hilbert_fftw_t	MHAOvlFilter::FreqScaleFun, 101
MHASignal::hilbert_fftw_t, 742	hz2third_octave
hilbert_shifter_t, 331	MHAOvlFilter::FreqScaleFun, 101
~hilbert_shifter_t, 332	hz2unit
analytic, 332	MHAOvIFilter::scale var t, 599
dphi, 332	1411 1/10 411 11101 1100d10_4d1_t, 000
frameshift, 332	i
fullspec, 332	io_tcp_sound_t::float_union, 359
hilbert_shifter_t, 332	INSERT_PATCH
kmax, 332	acConcat_wave.cpp, 927
kmin, 332	acPooling_wave.cpp, 928
mhafft, 332	acSteer.cpp, 929
mixw_ref, 332	acTransform_wave.cpp, 930
mixw_shift, 332	doasvm_classification.cpp, 939
phi, 332	doasvm_feature_extraction.cpp, 939
plan_spec2analytic, 332	lpc.cpp, 948
process, 332	lpc_bl_predictor.cpp, 948
shifted, 332	lpc_burg-lattice.cpp, 949
hilbert_t	prediction_error.cpp, 1027
MHASignal::hilbert_t, 743	steerbf.cpp, 1035
host	timoSmooth.cpp, 1037
ac2osc_t, 138	INSERT_VAR
host_port_to_sock_addr	timoSmooth.cpp, 1037
mha_tcp.cpp, 998	INVALID_SOCKET
hostApi	mha_tcp.cpp, 998
MHAIOPortAudio::device_info_t, 550	INVALID_THREAD_PRIORITY

MHAPlugin_Split, 114	IORelease_t
IO ERROR JACK	mha_io_ifc.h, 970
mhajack.h, 1021	IOSetVar
IO_ERROR_MHAJACKLIB	MHAIOFile.cpp, 1003, 1004
mhajack.h, 1021	MHAIOJack.cpp, 1006
IODestroy	MHAIOJackdb.cpp, 1008, 1009
MHAIOFile.cpp, 1003, 1004	MHAIOParser.cpp, 1011, 1012
MHAIOJack.cpp, 1006, 1007	MHAIOPortAudio.cpp, 1014, 1015
MHAIOJackdb.cpp, 1008, 1009	MHAIOTCP.cpp, 1017, 1018
MHAIOParser.cpp, 1011, 1012	IOSetVar_cb
MHAIOPortAudio.cpp, 1014, 1015	io lib t, 342
MHAIOTCP.cpp, 1017, 1018	IOSetVar_t
IODestroy_cb	mha_io_ifc.h, 970
io_lib_t, 342	IOStart
IODestroy t	MHAIOFile.cpp, 1003, 1004
mha io ifc.h, 970	MHAIOJack.cpp, 1006
IOInit	MHAIOJackdb.cpp, 1008, 1009
MHAIOFile.cpp, 1003	MHAIOParser.cpp, 1011
MHAIOJack.cpp, 1005, 1006	MHAIOPortAudio.cpp, 1014, 1015
MHAIOJackdb.cpp, 1008, 1009	MHAIOTCP.cpp, 1017, 1018
MHAIOParser.cpp, 1011	IOStart_cb
MHAIOPortAudio.cpp, 1014	io_lib_t, 342
MHAIOTCP.cpp, 1017, 1018	IOStart t
IOInit_cb	mha_io_ifc.h, 970
io_lib_t, 342	IOStartedEvent_t
IOInit t	mha_io_ifc.h, 970
mha_io_ifc.h, 970	IOStop
IOPrepare	MHAIOFile.cpp, 1003, 1004
MHAIOFile.cpp, 1003	MHAIOJack.cpp, 1006
MHAIOJack.cpp, 1006	MHAIOJackdb.cpp, 1008, 1009
MHAIOJackdb.cpp, 1008, 1009	MHAIOParser.cpp, 1011, 1012
MHAIOParser.cpp, 1011	MHAIOPortAudio.cpp, 1014, 1015
MHAIOPortAudio.cpp, 1014	MHAIOTCP.cpp, 1017, 1018
MHAIOTCP.cpp, 1017, 1018	IOStop_cb
IOPrepare_cb	io_lib_t, 342
io_lib_t, 342	IOStop_t
IOPrepare_t	mha_io_ifc.h, 970
mha io ifc.h, 970	IOStoppedEvent
IOProcessEvent inner	MHAJack::client_avg_t, 556
MHAIOJackdb::io_jack_t, 546	MHAJack::client_noncont_t, 558
IOProcessEvent_t	IOStoppedEvent_t
mha io ifc.h, 970	mha io ifc.h, 970
IORelease	IOStrError
MHAIOFile.cpp, 1003, 1004	MHAIOFile.cpp, 1003, 1004
MHAIOJack.cpp, 1006	MHAIOJack.cpp, 1006, 1007
MHAIOJackdb.cpp, 1008, 1009	MHAIOJackdb.cpp, 1008, 1009
MHAIOPartAvelia area 4014 4015	MHAIOPartAudia and 1011, 1012
MHAIOPortAudio.cpp, 1014, 1015	MHAIOPortAudio.cpp, 1014, 1015
MHAIOTCP.cpp, 1017, 1018	MHAIOTCP.cpp, 1017, 1018
IORelease_cb	IOStrError_cb
io_lib_t, 342	io_lib_t, 342

IOStrError_t	im
mha_io_ifc.h, 970	mha_complex_t, 400
id	imag
mha_channel_info_t, 399	acsave::mat4head_t, 162
id_str	fftfilterbank::fftfb_plug_t, 317
MHAParser::base_t, 608	MHASignal::matrix_t, 753-755
id_string	imagfb
MHAParser::parser_t, 658	MHAOvIFilter::overlap_save_filterbank_
identity	analytic_t, 594
MHASignal::schroeder_t, 766	impulse response
identity.cpp, 946	MHAFilter::polyphase_resampling_t, 529
identity_t, 333	MHAFilter::transfer_function_t, 538
identity_t, 333	in_buf
prepare, 334	wave2spec_t, 919
process, 333, 334	in_cfg
release, 334	timo_params, 906
idstr	in_spec
mha_channel_info_t, 399	doasym feature extraction config. 272
if_t	shadowfilter_end::cfg_t, 873
plingploing::if_t, 832	in_spec_copy
testplugin::if t, 901	shadowfilter_begin::cfg_t, 870
iface	inbuf
MHA_TCP::Server, 449	MHA_TCP::Connection, 443
ifft	inch
doasvm_feature_extraction_config, 272	MHAJack::client_t, 565
ifftshift	increase_condition
ifftshift.cpp, 947	mha_fifo_posix_threads_t, 420
ifftshift.h, 947	increment
ifftshift.cpp, 946	mha_fifo_posix_threads_t, 419
ifftshift, 947	mha_fifo_thread_platform_t, 427
ifftshift.h, 947	index
ifftshift, 947	MHAParser::keyword_list_t, 635
ignore	index_t
MHA_TCP::Event_Watcher, 445	$\stackrel{-}{MHAFilter::partitioned_convolution_t}\leftarrow$
ignored by	::index t, 524, 525
MHA_TCP::Wakeup_Event, 460	inhib_gain
iir_filter_state_t	dc::dc_t, 243
MHAFilter::iir_filter_state_t, 505	Init_mha_ruby
iir_filter_t	mha_ruby.cpp, 983
MHAFilter::iir_filter_t, 506	init peer data
iir_ord1_real_t	MHA_TCP::Connection, 439
MHAFilter::iir_ord1_real_t, 509	initialize
iirfilter.cpp, 947	MHA_TCP::Server, 448
iirfilter_t, 334	inner2outer_resampling
iirfilter_t, 335	MHAPlugin_Resampling::resampling_t,
prepare_, 335	702
process, 335	inner_ac_copy
release_, 335	analysepath_t, 204
ilen	inner_error
addsndfile::level_adapt_t, 177	analysepath_t, 204
fader_wave::level_adapt_t, 309	mha_dblbuf_t, 406
· _ ·	·

inner_fragsize	testplugin::signal_parser_t, 902
MHAPlugin_Resampling::resampling_t,	input_to_process
702	analysepath_t, 204
inner_in	input_wave
MHASignal::doublebuffer t, 738	testplugin::signal_parser_t, 902
inner_input	inputPow
analysepath_t, 204	noisePowProposedScale::noisePow←
inner_out	Proposed, 824
MHASignal::doublebuffer_t, 738	inputSpec
inner out domain	noisePowProposedScale::noisePow←
analysepath_t, 204	Proposed, 824
inner_process	inputchannels
db_t, 238	MHAFilter::fftfilterbank_t, 496
MHASignal::doublebuffer_t, 737	insert
inner_process_wave2spec	acPooling_wave_config, 156
analysepath_t, 204	acSteer_config, 168
inner_process_wave2wave	coherence::cohflt t, 226
analysepath_t, 204	fftfilterbank::fftfb_plug_t, 317
inner_signal	lpc_config, 376
_ •	MHA AC::ac2matrix t, 384
MHAPlugin_Resampling::resampling_t, 702	<u> </u>
	MHA_AC::acspace2matrix_t, 387
inner_size	MHA_AC::spectrum_t, 392
mha_dblbuf_t, 405	MHA_AC::stat_t, 394
inner_srate	MHA_AC::waveform_t, 396
MHAPlugin_Resampling::resampling_t,	MHAOvIFilter::fftfb_ac_info_t, 581
702	multibandcompressor::fftfb_plug_t, 812
input	noisePowProposedScale::noisePow
io_parser_t, 345	Proposed, 823
MHAJack::port_t, 566	prediction_error_config, 856
MHASignal::loop_wavefragment_t, 745	rmslevel_t, 860
mha_dblbuf_t, 404	rt_nlms_t, 865
input_cfg	timo_AC, 903
MHAPlugin::plugin_t, 697	insert_item
input_cfg_	MHAParser::parser_t, 656
MHAPlugin::plugin_t, 698	insert_items
input_channels	windowselector_t, 924
adm_if_t, 190	insert_member
mha_dblbuf_t, 405	mha_parser.hh, 979
input_domain	insert_var
PluginLoader::mhapluginloader_t, 849	algo_comm_t, 194
input_fifo	MHAKernel::algo_comm_class_t, 570
mha_dblbuf_t, 405	testplugin::ac_parser_t, 897
input_level	insert_var_float
dc::dc_vars_t, 245	algo_comm_t, 195
input_portnames	MHAKernel::algo_comm_class_t, 570
MHAJack::client_t, 565	insert_var_int
input_signal_spec	algo_comm_t, 195
MHAFilter::partitioned_convolution_t, 523	MHAKernel::algo_comm_class_t, 570
input_signal_wave	inspect
MHAFilter::partitioned_convolution_t, 522	MHAFilter::complex_bandpass_t, 488
input_spec	MHAFilter::gamma_flt_t, 503
i = 10 0 0	· · · · · · · · · · · · · · · · · · ·

MHASignal::delay_t, 734	io_err
inst_name	io_tcp_fwcb_t, 349
fw_t, 324	io_error
int data	fw_t, 325
testplugin::ac_parser_t, 897	io_file_t, 335
int_mon_t	~io_file_t, 337
MHAParser::int_mon_t, 629	b_prepared, 339
int_t	filename_input, 338
MHA_AC::int_t, 390	filename_output, 338
MHAParser::int_t, 631	fragsize, 338
integrate	io file t, 337
Vector and matrix processing toolbox, 47	length, 338
intensity	nchannels_file_in, 338
mha_signal.cpp, 986	nchannels_in, 338
	- :
interface_t	nchannels_out, 338
delay::interface_t, 260	output_sample_format, 338
multibandcompressor::interface_t, 814	prepare, 337
noisePowProposedScale::interface_t, 822	proc_event, 338
route::interface_t, 862	proc_handle, 338
interleaved	release, 337
combc_if_t, 230	s_file_in, 339
interleaved_	s_in, <mark>338</mark>
combc_t, 231	s_out, <mark>339</mark>
intern_level	samplerate, 338
MHASignal::loop_wavefragment_t, 747	setlock, 337
internal_fir	sf_in, 339
MHAFilter::smoothspec_t, 534	sf_out, 339
internal_start	sfinf_in, 339
MHAJack::client t, 564	sfinf out, 339
internal stop	start, 337
MHAJack::client_t, 564	start_event, 338
interp	start_handle, 338
MHATableLookup::linear_table_t, 792	startsample, 338
MHATableLookup::table t, 795	stop, 337
MHATableLookup::xy_table_t, 797	stop event, 338
interp1	stop_handle, 338
DynComp, 83	stopped, 337
interp2	strict_channel_match, 338
DynComp, 84	strict srate match, 338
inv_scale	total_read, 339
MHAOvIFilter::FreqScaleFun, 102	
•	io_jack_t
invalidate_window_data	MHAIOJack::io_jack_t, 541
windowselector_t, 925	MHAIOJackdb::io_jack_t, 546
invert	io_lib
coherence::vars_t, 228	fw_t, 325
inwave	io_lib_t, 339
lpc_config, 377	\sim io_lib_t, 341
io	IODestroy_cb, 342
MHAJack, 96	IOInit_cb, 342
MHAJack::client_avg_t, 555	IOPrepare_cb, 342
MHAJack::client_noncont_t, 558	IORelease_cb, 342

IOSetVar_cb, 342	proc_event, 348
IOStart_cb, 342	proc_handle, 348
IOStop_cb, 342	process, 347
IOStrError_cb, 342	set_errnos, 347
io_lib_t, 341	start, 347
lib_data, 342	start_event, 348
lib err, 342	start_handle, 349
lib handle, 342	stop, 348
lib_str_error, 342	stop_event, 348
prepare, 341	stop handle, 349
release, 342	io_tcp_parser_t, 349
start, 341	~io_tcp_parser_t, 351
stop, 341	connected, 354
test error, 342	debug, 354
io_name	debug_file, 355
fw t, 324	debug_filename, 355
<u> </u>	-
io_parser_t, 343	get_connected, 352
~io_parser_t, 344	get_local_address, 351
b_fw_started, 345	get_local_port, 351
b_prepared, 345	get_server_port_open, 352
b_starting, 345	io_tcp_parser_t, 351
b_stopped, 345	local_address, 354
fragsize, 345	local_port, 354
input, 345	peer_address, 354
io_parser_t, 344	peer_port, 355
nchannels_in, 345	server_port_open, 354
nchannels_out, 345	set_connected, 353
output, 345	set_local_port, 351
patchbay, 345	set_new_peer, 353
prepare, 344	set_server_port_open, 352
proc_event, 345	io_tcp_sound_t, 355
proc_handle, 345	\sim io_tcp_sound_t, 356
process_frame, 345	check_sound_data_type, 357
release, 345	chunkbytes_in, 357
s_in, 345	fragsize, 358
s_out, 345	header, 357
start, 344	hton, 358
start_event, 345	io_tcp_sound_t, 356
start_handle, 345	ntoh, 357
started, 345	num_inchannels, 358
stop, 345	num_outchannels, 359
stop_event, 345	prepare, 357
stop_handle, 345	release, 357
stopped, 345	s_in, 359
io_portaudio_t	samplerate, 358
MHAIOPortAudio::io_portaudio_t, 552	io_tcp_sound_t::float_union, 359
io_tcp_fwcb_t, 346	c, 359
~io_tcp_fwcb_t, 347	f, 359
io_err, 349	i, 359
io_tcp_fwcb_t, 347	io_tcp_t, 360
proc_err, 349	~io_tcp_t, 361
F.00_0, 0.10	.00p, 00 !

accept_loop, 361 connection_loop, 361 fwcb, 362 io_tcp_t, 361 notify_release, 362 notify_start, 362 notify_stop, 362 parse, 362 parser, 362 prepare, 361 release, 361 server, 362 sound, 362 start, 361	gaintable.cpp, 944 MHAFilter::transfer_function_t, 538 isval MHAParser::kw_t, 637 iter prediction_error_config, 857 iterator MHA_TCP::Event_Watcher, 445 jack_error_handler mhajack.cpp, 1019 jack_proc_cb MHAJack::client_t, 564 jack_xrun_cb MHAJack::client_t, 564
stop, 361 thread, 362	jc
iob	MHAJack::client_t, 565
MHAJack::port_t, 568	MHAJack::port_t, 568 jstate_prev
irslen	MHAJack::client_t, 565
frequency_translator_t, 319	
irslen_inner2outer MHAPlugin_Resampling::resampling_if →	k_inner
t, 700	MHASignal::doublebuffer_t, 738
irslen_outer2inner	k_nyquist
MHAPlugin_Resampling::resampling_if↔	dc::dc_t, 243 k_outer
_t, 700	MHASignal::doublebuffer_t, 738
irswnd	kappa
MHAOvlFilter::overlap_save_filterbank_	lpc_burglattice_config, 375
t::vars_t, 597	kappa_block
smoothgains_bridge::overlapadd_if_←	lpc_burglattice_config, 375
t, 880	kappa_const
is_complex MHA_AC::ac2matrix_helper_t, 382	timo_params, 906
mha_audio_descriptor_t, 397	timoSmooth, 912
is_playback_active	keyword_list_t
MHASignal::loop_wavefragment_t, 747	MHAParser::keyword_list_t, 633 kick_condition
is_prepared	MHAPlugin Split::posix threads t, 711
adm_if_t, 190	kick_thread
MHAPlugin::plugin_t, 697	MHAPlugin_Split::dummy_threads_t, 708
PluginLoader::mhapluginloader_t, 850	MHAPlugin_Split::posix_threads_t, 711
is_prepared_	MHAPlugin_Split::thread_platform_t, 724
MHAPlugin::plugin_t, 698	kicked
is_same_size	MHAPlugin_Split::posix_threads_t, 712
MHASignal::matrix_t, 752	km
is_var	lpc_bl_predictor_config, 371
algo_comm_t, 196	kmax
MHAKernel::algo_comm_class_t, 570 iscomplex	hilbert_shifter_t, 332 kmin
MHASignal::matrix_t, 752	hilbert_shifter_t, 332
isempty	kth_smallest
AuditoryProfile::fmap_t, 207	MHASignal, 117

kw_index2type	lambda_spec_AC
transducers.cpp, 1038	timo_AC, 904
kw_t	lambda thresh
MHAParser::kw_t, 636, 637	timo_params, 906
- '	timoSmooth, 912
L	last_complex_bin
AuditoryProfile::parser_t, 209	MHASignal::subsample_delay_t, 774
AuditoryProfile::profile_t, 213	last_config
I_min	MHAPlugin::config_t, 692
dc::wb_inhib_cfg_t, 247	last errormsg
dc::wideband_inhib_vars_t, 248	MHAParser::parser_t, 658
I_new	last_jack_err
addsndfile::level_adapt_t, 177	mhajack.cpp, 1019
fader_wave::level_adapt_t, 309	last_jack_err_msg
I_old	mhajack.cpp, 1019
addsndfile::level_adapt_t, 177	mhajack.h, 1021
fader_wave::level_adapt_t, 309	
LEVEL	last_name
dc_simple, 82	MHAParser::mhapluginloader_t, 650
LPSCALE	latex_doc_t, 362
timoconfig.cpp, 1036	ac, 364
LTASS_combined	get_ac, 363
speechnoise_t, 891	get_categories, 363
LTASS_female	get_latex_doc, 363
speechnoise_t, 891	get_main_category, 363
LTASS_male	get_parser_tab, 363
speechnoise_t, 891	get_parser_var, 363
lambda	latex_doc_t, 363
lpc_burglattice, 373	latex_plugname, 364
lpc_burglattice_config, 375	loader, 364
lambda_ceps	parsername, 363
timoConfig, 909	plugin_macro, 364
lambda_ceps_AC	plugname, 364
timo_AC, 904	strdom, 363
lambda_ceps_prev	latex_plugname
timoConfig, 909	latex_doc_t, 364
lambda_ml_AC	len
timo_AC, 904	MHA_AC::acspace2matrix_t, 387
lambda_ml_ceps	MHAFilter::filter_t, 501
timoConfig, 909	MHATableLookup::linear_table_t, 794
lambda_ml_ceps_AC	plingploing::plingploing_t, 835
timo_AC, 904	len_A
lambda ml full	MHAFilter::filter_t, 501
timoConfig, 909	len_a
lambda ml smooth	hanning_ramps_t, 330
timoConfig, 909	len_B
lambda ml smooth AC	MHAFilter::filter_t, 501
timo_AC, 904	len_b
lambda_smoothing_power	hanning_ramps_t, 330
nlms_t, 818	length
lambda_spec	io_file_t, 338
timoConfig, 909	MHASignal::uint_vector_t, 777

lev	analysispath_if_t, 206
noise_t, 820	PluginLoader::config_file_splitter_t, 843
sine_t, 878	library_paths
level	pluginbrowser_t, 840
addsndfile::addsndfile_if_t, 175	like_ratio
plingploing::if_t, 833	acPooling_wave_config, 157
plingploing::plingploing_t, 836	like ratio name
rmslevel_t, 860	acPooling_wave, 155
level_adapt_t	limit
addsndfile::level_adapt_t, 176	coherence::cohflt_t, 226
fader_wave::level_adapt_t, 308	coherence::vars_t, 228
level_adaptor	MHASignal, 117
addsndfile, 78	MHASignal::quantizer_t, 759
fader_wave, 85	MHASignal::waveform_t, 786
level db	limiter
rmslevel_t, 860	dc_simple::dc_t, 253
level_in_db	limiter_threshold
dc::dc_t, 243	dc_simple::dc_t, 253
level_in_db_adjusted	dc_simple::dc_vars_t, 256
de::de t, 243	lin2db
level mode t	Vector and matrix processing toolbox, 42
MHASignal::loop_wavefragment_t, 745	line t
level mon	dc_simple::dc_t::line_t, 254
_	linear
droptect_t, 275	MHAOvlFilter::ShapeFun, 103
level_smoother_t	•
dc_simple::level_smoother_t, 258	softclipper_t, 884
level_spec	softclipper_variables_t, 886
dc_simple::level_smoother_t, 258	linear_table_t
level_wave	MHATableLookup::linear_table_t, 792
dc_simple::level_smoother_t, 258	Linearphase_FIR
levelmode	ADM::Linearphase_FIR, 186
addsndfile::addsndfile_if_t, 175	list_dir
Levinson2	mha_os.cpp, 971
lpc.cpp, 948	mha_os.h, 973
lib_data	lo_addr
io_lib_t, 342	ac2osc_t, 139
PluginLoader::mhapluginloader_t, 850	load_io_lib
lib_err	fw_t, 323
io_lib_t, 342	load_plug
PluginLoader::mhapluginloader_t, 850	MHAParser::mhapluginloader_t, 650
lib_handle	load_proc_lib
io_lib_t, 342	fw_t, 323
PluginLoader::mhapluginloader_t, 850	loader
lib_str_error	latex_doc_t, 364
io_lib_t, 342	loadlib
libdata	analysispath_if_t, 206
analysepath_t, 204	local_address
MHAParser::c_ifc_parser_t, 616	io_tcp_parser_t, 354
liberr	local_get_entries
MHAParser::c_ifc_parser_t, 616	MHAKernel::algo_comm_class_t, 571
libname	local_get_var

MHAKernel::algo_comm_class_t, 571	low_side_flat
local_insert_var	MHAOvIFilter::band_descriptor_t, 579
MHAKernel::algo_comm_class_t, 571	low_thresh
local_is_var	acPooling_wave_config, 157
MHAKernel::algo_comm_class_t, 571	lower_threshold
local_port	acPooling_wave, 155
io_tcp_parser_t, 354	lp
local_remove_ref	DynComp::dc_afterburn_rt_t, 280
MHAKernel::algo_comm_class_t, 571	lp1i
local_remove_var	coherence::cohflt_t, 226
MHAKernel::algo_comm_class_t, 571	lp1ltg
locate	coherence::cohflt_t, 227
MHAIOJackdb::io_jack_t, 548	lp1r
locate_end	coherence::cohflt_t, 226
MHASignal::loop_wavefragment_t, 747	lp_coeffs
lock_channels	adm_rtconfig_t, 193
fw_vars_t, 326	lp_order
lock_srate_fragsize	adm_if_t, 190
fw vars t, 326	lpc, 364
locked	~lpc, 365
MHAParser::variable_t, 667	algo_name, 366
log_down	comp_each_iter, 366
MHASignal::schroeder_t, 766	lpc, 365
log_lambda_spec	lpc_buffer_size, 366
timoConfig, 909	lpc_order, 366
log_lambda_spec_AC	norm, 366
timo_AC, 904	patchbay, 366
log_up	prepare, 365
MHASignal::schroeder_t, 766	process, 365
logGLRFact	release, 366
noisePowProposedScale::noisePow←	shift, 366
Proposed, 824	update_cfg, 366
timoConfig, 909	lpc.cpp, 947
logfile	INSERT_PATCH, 948
mhaserver t, 729	Levinson2, 948
logstring	PATCH_VAR, 948
mhaserver_t, 728	lpc.h, 948
longmsg	lpc_bl_predictor, 367
MHA_Error, 415	~lpc_bl_predictor, 368
lookup	lpc_bl_predictor, 368
MHATableLookup::linear_table_t, 792	lpc_order, 369
MHATableLookup::table_t, 795	name b, 369
MHATableLookup::xy_table_t, 797	name_f, 369
loop	name_kappa, 369
addsndfile::addsndfile_if_t, 175	name_lpc_b, 369
loop_wavefragment_t	name_lpc_f, 369
. — • —	— · —
MHASignal::loop_wavefragment_t, 745	patchbay, 369
Iow_incl MHAParear::range_var_t_661	prepare, 368
MHAParser::range_var_t, 661 low_limit	process, 368 release, 368
MHAParser::range_var_t, 661	update_cfg, 369
ivii ini aiseiiaiiye_vai_l, 001	upuale_oig, sos

Ipc_bl_predictor.cpp, 948 INSERT_PATCH, 948 PATCH VAR, 948	lpc_burglattice_config, 374 lpc_order, 375 name_b, 375
Ipc_bl_predictor.h, 948 EPSILON, 949	name_f, 375 nm, 375
lpc_bl_predictor_config, 369	process, 374
~lpc_bl_predictor_config, 370	s_b, 375
ac, 370	s_f, 375
b_est, 370	lpc config, 375
backward, 370	~lpc_config, 376
f_est, 370	A, 377
forward, 370	comp_each_iter, 376
km, 371	comp_iter, 377
·	corr_out, 377
lpc_bl_predictor_config, 370	insert, 376
lpc_order, 370	inwave, 377
name_b, 371	lpc_buffer_size, 377
name_f, 370	lpc_config, 376
name_km, 370	lpc_out, 377
process, 370	N, 377
s_b, 371	norm, 376
s_f, 371	order, 376
lpc_buffer_size	process, 376
lpc, 366	R, 377
lpc_config, 377	sample, 377
lpc_burg-lattice.cpp, 949	shift, 376
INSERT_PATCH, 949	lpc_order
PATCH_VAR, 949	lpc, 366
lpc_burg-lattice.h, 949	lpc_bl_predictor, 369
EPSILON, 949	
lpc_burglattice, 371	lpc_bl_predictor_config, 370 lpc_burglattice, 373
\sim lpc_burglattice, 372	
lambda, 373	lpc_burglattice_config, 375 prediction_error, 855
lpc_burglattice, 372	lpc_out
lpc_order, 373	lpc_config, 377
name_b, 373	• — •
name_f, 373	Itgcomp coherence::vars_t, 228
name_kappa, <mark>373</mark>	Itgtau
patchbay, 373	•
prepare, 373	coherence::vars_t, 228 Ival
process, 373	MHAParser::expression t, 623
release, 373	WITAFaiseiexpiessioii_i, 623
update_cfg, 373	m
lpc_burglattice_config, 374	dc_simple::dc_t::line_t, 254
~lpc_burglattice_config, 374	matrixmixer::cfg_t, 378
ac, 374	M PI
backward, 375	mha_defs.h, 958
dm, 375	mha_signal.hh, 995
forward, 374	m_alphas
kappa, 375	ADM::Linearphase_FIR, 187
kappa_block, 375	m_beta
lambda, 375	ADM::ADM, 183
.aiinaa, vi v	

	000
m_coeff	ac, 382
ADM::Delay, 185	ac2matrix_helper_t, 381
m_decomb	acvar, 382
ADM::ADM, 183	getvar, <mark>381</mark>
m_delay_back	is_complex, 382
ADM::ADM, 183	name, <mark>382</mark>
m_delay_front	size, 382
ADM::ADM, 183	username, 382
m_fullsamples	MHA_AC::ac2matrix_t, 382
ADM::Delay, 185	ac2matrix t, 383
m_lp_bf	getname, 383
ADM::ADM, 183	getusername, 384
m_lp_result	insert, 384
ADM::ADM, 183	update, 383
	•
m_mu_beta	MHA_AC::acspace2matrix_t, 384
ADM::ADM, 183	~acspace2matrix_t, 386
m_norm	acspace2matrix_t, 385
ADM::Delay, 185	data, 387
m_now	frame, 387
ADM::Linearphase_FIR, 187	frameno, 387
m_now_in	insert, 387
ADM::Delay, 185	len, 387
m_order	operator=, 386
ADM::Linearphase_FIR, 187	operator[], 386
m_output	size, 387
ADM::Linearphase_FIR, 187	update, 387
m_powerfilter_coeff	MHA_AC::double_t, 387
ADM::ADM, 183	~double_t, 388
m_powerfilter_norm	ac, 388
ADM::ADM, 183	data, 388
•	
m_powerfilter_state	double_t, 388
ADM::ADM, 183	MHA_AC::float_t, 389
m_state	∼float_t, 389
ADM::Delay, 185	ac, 389
MAX_LINE_LENGTH	data, 389
mhamain.cpp, 1022	float_t, 389
MAX_TCP_PORT_STR	MHA_AC::int_t, 390
MHAIOTCP.cpp, 1017	∼int_t, <mark>390</mark>
MAX_TCP_PORT	ac, 390
MHAIOTCP.cpp, 1017	data, 390
MAX_USER_ERR	int_t, 390
MHAIOFile.cpp, 1003	MHA AC::spectrum t, 391
MHAIOJack.cpp, 1005	~spectrum_t, 392
MHAIOJackdb.cpp, 1008	ac, 393
MHAIOParser.cpp, 1011	insert, 392
MHAIOPortAudio.cpp, 1014	name, 393
MHAIOTOP.cpp, 1017	spectrum_t, 392
• • •	-
mhajack.h, 1021	MHA_AC::stat_t, 393
MAX	insert, 394
mha_defs.h, 959	mean, 394
MHA_AC::ac2matrix_helper_t, 381	stat_t, 394

std, 394	MHA_ERR_VARFMT
update, 394	mha_errno.h, 961
MHA AC::waveform t, 394	MHA ERR VARRANGE
~waveform t, 395	mha errno.h, 961
ac, 396	MHA Error, 413
insert, 396	~MHA_Error, 414
name, 396	get_longmsg, 414
waveform_t, 395	get_msg, 414
MHA_AC_CHAR	longmsg, 415
mha.h, 954	MHA_Error, 414
MHA AC DOUBLE	msg, 415
mha.h, 954	operator=, 414
MHA_AC_FLOAT	what, 414
mha.h, 954	MHA_ErrorMsg
MHA AC INT	Error handling in the openMHA, 31
mha.h, 954	MHA_ErrorMsg2
MHA AC MHACOMPLEX	
	MHAIOTCP.cpp, 1017
mha.h, 954	MHA_ErrorMsg3
MHA_AC_MHAREAL	MHAIOTCP.cpp, 1017
mha.h, 954	MHA_ID_MATRIX
MHA_AC_UNKNOWN	mha_signal.cpp, 986
mha.h, 954	MHA_ID_UINT_VECTOR
MHA_AC_USER	mha_signal.cpp, 986
mha.h, 954	MHA_RELEASE_VERSION_STRING
MHA_AC_VEC_FLOAT	mha.h, 953
mha.h, 954	MHA_RESOLVE_CHECKED
MHA_AC, 86	mha_os.h, 973
MHA_CALLBACK_TEST_PREFIX	MHA_RESOLVE
mha.h, 952	mha_os.h, <mark>973</mark>
MHA_CALLBACK_TEST	MHA_SPECTRUM
mha.h, 952	mha.h, 954
MHA_DOMAIN_MAX	MHA_STRUCT_SIZEMATCH
mha.h, 954	mha.h, 953
MHA_DOMAIN_UNKNOWN	MHA_STRF
mha.h, 954	mha.h, 952
MHA_EAR_LEFT	MHA_TCP::Async_Notify, 434
mha_defs.h, 959	~Async_Notify, 435
MHA EAR MAX	Async_Notify, 435
mha defs.h, 959	pipe, 435
MHA_EAR_RIGHT	reset, 435
mha defs.h, 959	set, 435
MHA ERR INVALID HANDLE	MHA TCP::Client, 435
mha errno.h, 961	Client, 436
MHA_ERR_NULL	MHA TCP::Connection, 437
mha errno.h, 961	~Connection, 439
MHA_ERR_SUCCESS	buffered_incoming_bytes, 443
mha errno.h, 961	buffered_outgoing_bytes, 443
MHA ERR UNKNOWN	can_read_bytes, 441
mha_errno.h, 961	can_read_line, 441
MHA ERR USER	can_sysread, 439
	— ·
mha_errno.h, 961	can_syswrite, 439

closed, 443	try_accept, 449
Connection, 439	MHA_TCP::Sockaccept_Event, 450
eof, 440	Sockaccept_Event, 450
fd, 443	MHA_TCP::Sockread_Event, 451
get_fd, 440	Sockread_Event, 451
get_peer_address, 440	MHA TCP::Sockwrite Event, 452
get_peer_port, 440	Sockwrite Event, 452
get read event, 440	MHA TCP::Thread, 452
get_write_event, 440	\sim Thread, 455
inbuf, 443	arg, 455
init_peer_data, 439	error, 456
needs_write, 442	FINISHED, 454
outbuf, 443	PREPARED, 454
peer_addr, 443	RUNNING, 454
read bytes, 442	return_value, 455
read event, 443	run, 455
read_line, 441	state, 455
sysread, 439	thr_f, 454
syswrite, 440	Thread, 454
try write, 442	thread_arg, 456
write, 442	thread_attr, 455
write event, 443	thread_finish_event, 455
MHA_TCP::Event_Watcher, 444	thread_func, 456
~Event Watcher, 445	thread_handle, 455
Events, 445	MHA_TCP::Timeout_Event, 456
events, 445	end time, 457
ignore, 445	get_os_event, 457
iterator, 445	Timeout_Event, 457
observe, 445	MHA_TCP::Timeout_Watcher, 457
wait, 445	~Timeout_Watcher, 458
MHA_TCP::OS_EVENT_TYPE, 446	timeout, 458
fd, 446	Timeout_Watcher, 458
mode, 446	MHA_TCP::Wakeup_Event, 459
R, 446	~Wakeup_Event, 460
T, 446	get_os_event, 460
timeout, 446	ignored_by, 460
W, 446	observed_by, 460
X, 446	observers, 461
MHA TCP::Server, 447	os event, 461
~Server, 448	os_event_valid, 461
accept, 448	reset, 460
accept_event, 449	status, 461
get_accept_event, 448	Wakeup_Event, 460
get_interface, 448	MHA TCP::sock init t, 449
get_port, 448	sock init t, 450
iface, 449	MHA_TCP, 87
initialize, 448	dtime, 89
port, 449	G_ERRNO, 89
Server, 447, 448	H ERRNO, 89
serversocket, 449	HSTRERROR, 89
sock_addr, 449	N ERRNO, 89
	= ,

SOCKET, 89	MHAEvents::patchbay_t
STRERROR, 89	~patchbay_t, 478
sock_initializer, 90 stime, 89	connect, 478, 479
MHA_VERSION_BUILD	cons, 479
mha.h, 953	MHAEvents::patchbay_t< receiver_t >, 478 MHAFilter, 90
MHA_VERSION_MAJOR	·
mha.h, 952	butter_stop_ord1, 93
MHA_VERSION_MINOR	gcd, 94 make friendly number, 92
mha.h, 952	o1_lp_coeffs, 92
MHA_VERSION_RELEASE	resampling_factors, 94
mha.h, 953	sinc, 94
MHA_VERSION_STRING	•
mha.h, 953	spec2fir, 93
	MHAFilter::adapt_filter_param_t, 479
MHA_VERSION	adapt_filter_param_t, 480
mha.h, 953	err_in, 480
MHA_WAVEFORM	mu, 480
mha.h, 953	MHAFilter::adapt_filter_state_t, 480
MHA_XSTRF	adapt_filter_state_t, 481
mha.h, 952	filter, 481
MHA_assert	nchannels, 481
Error handling in the openMHA, 32	ntaps, 481
MHA_assert_equal	od, 481
Error handling in the openMHA, 32	oy, 481
MHADestroy_cb	W, 481
PluginLoader::mhapluginloader_t, 850	X, 481
MHADestroy_t	MHAFilter::adapt_filter_t, 481
mha.h, 954	adapt_filter_t, 482
MHAEvents, 90	connector, 483
MHAEvents::connector_base_t, 472	err_in, 483
\sim connector_base_t, 472	filter, 482
connector_base_t, 472	mu, 483
emit_event, 473	nchannels, 483
emitter_die, 473	ntaps, 483
emitter_is_alive, 473	set_channelcnt, 482
MHAEvents::connector_t	update_mu, 482
\sim connector_t, 475	update_ntaps, 482
connector_t, 475	MHAFilter::blockprocessing_polyphase_←
emit_event, 475	resampling_t, 483
emitter, 476	~blockprocessing_polyphase_resampling~
eventhandler, 476	_t, 484
eventhandler_s, 476	blockprocessing_polyphase_resampling
eventhandler_suu, 476	_t, 484
receiver, 476	can read, 485
MHAEvents::connector_t< receiver_t >, 474	fragsize_in, 485
MHAEvents::emitter_t, 476	fragsize_out, 485
∼emitter_t, 477	num_channels, 485
connect, 477	read, 485
connections, 477	resampling, 485
disconnect, 477	write, 484
operator(), 477	MHAFilter::complex_bandpass_t, 486
- · · · · · · · · · · · · · · · · · · ·	· — · — ·

A_, 488	A, 500
B_, 488	B, 500
complex_bandpass_t, 487	channels, 501
creator_A, 487	filter, 499, 500
creator_B, 487	filter_t, 498, 499
filter, 487, 488	get_len_A, 500
get weights, 487	get_len_B, 500
inspect, 488	len, 501
set state, 487	len_A, 501
set_weights, 487	len_B, 501
Yn, 488	state, 501
•	•
MHAFilter::diff_t, 488	MHAFilter::gamma_flt_t, 501
diff_t, 489	~gamma_flt_t, 502
MHAFilter::fftfilter_t, 489	A, 503
\sim fftfilter_t, 491	bw_, 504
channels, 492	cf_, 504
fft, 493	delay, 503
fftfilter_t, 490	envelope_delay, 504
fftlen, 492	gamma_flt_t, 502
filter, 491, 492	get_A, 503
fragsize, 492	get_resynthesis_gain, 503
sInput, 493	get_weights, 503
sWeights, 493	GF, 503
update_coeffs, 491	inspect, 503
wIRS_fft, 493	operator(), 502, 503
	•
winput, 493	phase_correction, 503
wInput_fft, 492	reset_state, 503
wOutput, 493	resynthesis_gain, 504
wOutput_fft, 493	set_weights, 503
MHAFilter::fftfilterbank_t, 493	srate_, 504
\sim fftfilterbank_t, 495	MHAFilter::iir_filter_state_t, 504
fft, 497	iir_filter_state_t, 505
fftfilterbank_t, 494	MHAFilter::iir_filter_t, 505
fftlen, 496	A, 508
filter, 495, 496	B, 508
firchannels, 496	connector, 508
fragsize, 496	filter, 507
get_irs, 496	iir_filter_t, 506
Hs, 496	nchannels, 508
hw, 496	resize, 508
inputchannels, 496	update_filter, 508
outputchannels, 496	MHAFilter::iir_ord1_real_t, 508
•	
tail, 497	A_, 511
update_coeffs, 495	B_, 511
Xs, 496	iir_ord1_real_t, 509
xw, 496	operator(), 510
Ys, 497	set_state, 510
yw, 496	Yn, 511
yw_temp, 497	MHAFilter::o1_ar_filter_t, 511
MHAFilter::filter_t, 497	c1_a, 514
\sim filter_t, 499	c1_r, 514

c2_a, 514	underflow, 529
c2_r, 514	upsampling_factor, 529
fs, 514	write, 528
o1_ar_filter_t, 512	MHAFilter::resampling_filter_t, 530
operator(), 513, 514	fragsize, 531
set_tau_attack, 513	fragsize_validator, 531
set_tau_release, 513	resampling_filter_t, 530
MHAFilter::01flt_lowpass_t, 514	MHAFilter::smoothspec_t, 531
get c1, 516	_linphase_asym, 534
get_last_output, 516	~smoothspec_t, 533
o1flt_lowpass_t, 516	fft, 534
set_tau, 516	fftlen, 534
MHAFilter::o1flt_maxtrack_t, 517	internal_fir, 534
o1flt_maxtrack_t, 518	minphase, 534
set_tau, 518	nchannels, 534
MHAFilter::01flt_mintrack_t, 518	smoothspec, 533
	•
o1flt_mintrack_t, 520	smoothspec_t, 532
set_tau, 520	spec2fir, 533
MHAFilter::partitioned_convolution_t, 520	tmp_spec, 534
~partitioned_convolution_t, 522	tmp_wave, 534
bookkeeping, 523	window, 534
current_input_signal_buffer_half_index,	MHAFilter::thirdoctave_analyzer_t, 534
523	bw_generator, 535
current_output_partition_index, 523	cf, 535
fft, 524	cf_generator, 535
filter_partitions, 522	cfg_, 535
fragsize, 522	dup, 535
frequency_response, 523	fb, 536
input_signal_spec, 523	get_cf_hz, 535
input_signal_wave, 522	nbands, 535
nchannels_in, 522	nchannels, 535
nchannels_out, 522	out_chunk, 536
output_partitions, 522	out_chunk_im, 536
output_signal_spec, 523	process, 535
output_signal_wave, 523	thirdoctave_analyzer_t, 535
partitioned_convolution_t, 521	MHAFilter::transfer_function_t, 536
process, 522	impulse_response, 538
MHAFilter::partitioned_convolution_t::index↔	isempty, 538
_t, 524	non_empty_partitions, 537
delay, 525	partitions, 537
index_t, 524, 525	source_channel_index, 538
source_channel_index, 525	target_channel_index, 538
target_channel_index, 525	transfer_function_t, 537
MHAFilter::polyphase_resampling_t, 525	MHAFilter::transfer_matrix_t, 539
downsampling_factor, 529	non_empty_partitions, 539
impulse_response, 529	partitions, 539
now_index, 529	MHAGetVersion_cb
polyphase_resampling_t, 527	PluginLoader::mhapluginloader_t, 850
read, 528	MHAGetVersion t
readable_frames, 528	mha.h, 954
ringbuffer, 529	MHAIOFile.cpp, 1002
9501101, 020	

DEBUG, 1003 dummy_interface_test, 1003, 1004 ERR IHANDLE, 1003	ports_out_all, 543 ports_out_physical, 543 ports_parser, 543
ERR SUCCESS, 1003	prepare, 541
ERR USER, 1003	read_get_cpu_load, 542
IODestroy, 1003, 1004	read_get_scheduler, 542
IOInit, 1003	read_get_xruns, 542
IOPrepare, 1003	reconnect_inports, 542
IORelease, 1003, 1004	reconnect outports, 542
IOSetVar, 1003, 1004	release, 541
IOStart, 1003, 1004	servername, 542
IOStop, 1003, 1004	state_cpuload, 543
IOStrError, 1003, 1004	state_parser, 543
MAX_USER_ERR, 1003	state_priority, 543
user err msg, 1004	state scheduler, 543
MHAIOJack, 95	
•	state_xruns, 543
MHAIOJack.cpp, 1004 dummy_interface_test, 1006, 1007	MHAIOJackdb, 95 MHAIOJackdb.cpp, 1007
ERR IHANDLE, 1005	• • •
ERR SUCCESS, 1005	dummy_interface_test, 1008, 1009 ERR_IHANDLE, 1008
	<u> </u>
ERR_USER, 1005	ERR_SUCCESS, 1008
IODestroy, 1006, 1007	ERR_USER, 1008
IOInit, 1005, 1006	IODestroy, 1008, 1009
IOPrepare, 1006	IOInit, 1008, 1009
IORelease, 1006	IOPrepare, 1008, 1009
IOSetVar, 1006	IORelease, 1008, 1009
IOStart, 1006	IOSetVar, 1008, 1009
IOStop, 1006	IOStart, 1008, 1009
IOStrError, 1006, 1007	IOStop, 1008, 1009
MAX_USER_ERR, 1005	IOStrError, 1008, 1009
user_err_msg, 1007	MAX_USER_ERR, 1008
MHAIOJack::io_jack_t, 540	user_err_msg, 1009
clientname, 542	MHAIOJackdb::io_jack_t, 544
connections_in, 542	clientname, 547
connections_out, 542	connections_in, 547
delays_in, 542	connections_out, 547
delays_out, 543	fail_on_async_jackerr, 547
fw_fragsize, 542	fail_on_async_jackerror, 546
fw_samplerate, 542	fragsize_ratio, 547
get_all_input_ports, 542	get_all_input_ports, 547
get_all_output_ports, 542	get_all_output_ports, 547
get_delays_in, 542	get_physical_input_ports, 546
get_delays_out, 542	get_physical_output_ports, 547
get_physical_input_ports, 542	IOProcessEvent_inner, 546
get_physical_output_ports, 542	io_jack_t, 546
io_jack_t, 541	locate, 548
patchbay, 543	mha_fragsize, 547
portnames_in, 543	mha_samplerate, 547
portnames_out, 543	patchbay, 548
ports_in_all, 543	portnames_in, 547
ports_in_physical, 543	portnames_out, 547

ports_in_all, 548	IORelease, 1014, 1015
ports_in_physical, 548	IOSetVar, 1014, 1015
ports out all, 548	IOStart, 1014, 1015
ports_out_physical, 548	IOStop, 1014, 1015
ports_parser, 548	IOStrError, 1014, 1015
prepare, 546	MAX USER ERR, 1014
proc_event, 547	portaudio_callback, 1014, 1015
proc_handle, 547	user err msg, 1015
pwinner out, 548	MHAIOPortAudio::device_info_t, 549
read_get_cpu_load, 547	defaultHighInputLatency, 550
read_get_scheduler, 547	defaultHighOutputLatency, 550
read_get_xruns, 547	defaultLowInputLatency, 550
reconnect_inports, 546	defaultLowOutputLatency, 550
reconnect_outports, 546	defaultSampleRate, 550
release, 546	device info t, 550
server_fragsize, 548	fill info, 550
server_srate, 548	hostApi, 550
servername, 547	maxInputChannels, 550
set locate, 547	maxOutputChannels, 550
set_use_jack_transport, 547	name, 550
state_cpuload, 548	numDevices, 550
state_parser, 548	structVersion, 550
state_priority, 548	MHAIOPortAudio::io_portaudio_t, 551
state_scheduler, 548	~io_portaudio_t, 552
state_xruns, 548	cmd_prepare, 552
use_jack_transport, 547	cmd_release, 553
MHAIOParser.cpp, 1010	cmd_start, 552
dummy_interface_test, 1011, 1012	cmd_stop, 552
ERR_IHANDLE, 1011	device_index, 553
ERR_SUCCESS, 1011	device_index_updated, 552
ERR_USER, 1011	device_info, 553
IODestroy, 1011, 1012	device_name, 553
IOInit, 1011	device_name_updated, 552
IOPrepare, 1011	fragsize, 553
IORelease, 1011, 1012	io_portaudio_t, 552
IOSetVar, 1011, 1012	nchannels_in, 553
IOStart, 1011	nchannels_out, 553
IOStop, 1011, 1012	patchbay, 553
IOStrError, 1011, 1012	portaudio_callback, 553
MAX_USER_ERR, 1011	portaudio_stream, 553
user_err_msg, 1012	proc_event, 553
MHAIOPortAudio, 95	proc_handle, 553
parserFriendlyName, 95	s_in, 553
MHAIOPortAudio.cpp, 1012	s_out, 553
dummy_interface_test, 1014, 1015	samplerate, 553
ERR_IHANDLE, 1014	start_event, 553
ERR_SUCCESS, 1014	start_handle, 553
ERR_USER, 1014	stop_event, 553
IODestroy, 1014, 1015	stop_handle, 553
IOInit, 1014	MHAIOTCP.cpp, 1015
IOPrepare, 1014	copy_error, 1018
•	• • —

dummy_interface_test, 1017, 1018	MHAJack::client_noncont_t, 557
ERR IHANDLE, 1017	b_stopped, 558
ERR SUCCESS, 1017	client_noncont_t, 558
ERR USER, 1017	— — — ·
<u> </u>	frag_out, 559
IODestroy, 1017, 1018	IOStoppedEvent, 558
IOInit, 1017, 1018	io, 558
IOPrepare, 1017, 1018	name, 559
IORelease, 1017, 1018	pos, 558
IOSetVar, 1017, 1018	proc, 558
IOStart, 1017, 1018	sn_in, 558
IOStop, 1017, 1018	sn_out, 559
IOStrError, 1017, 1018	MHAJack::client_t, 559
MAX_TCP_PORT_STR, 1017	b_prepared, 565
MAX_TCP_PORT, 1017	client_t, 561
MAX_USER_ERR, 1017	connect_input, 562
MHA_ErrorMsg2, 1017	connect_output, 562
MHA_ErrorMsg3, 1017	fail_on_async_jackerror, 565
MIN_TCP_PORT_STR, 1017	flags, 565
MIN_TCP_PORT, 1017	fragsize, 564
thread_startup_function, 1018	get_cpu_load, <mark>563</mark>
user_err_msg, 1019	get_fragsize, 562
MHAInit_cb	get_my_input_ports, 563
PluginLoader::mhapluginloader_t, 850	get_my_output_ports, 563
MHAInit_t	get_ports, 563
mha.h, 954	get_srate, 563
MHAJACK_FW_STARTED	get_xruns, 563
mhajack.h, 1021	get_xruns_reset, 563
MHAJACK_STARTING	inch, 565
mhajack.h, 1021	input_portnames, 565
MHAJACK_STOPPED	internal_start, 564
mhajack.h, 1021	internal_stop, 564
MHAJack, 95	jack_proc_cb, 564
get_port_capture_latency, 96	jack_xrun_cb, 564
get_port_capture_latency_int, 97	jc, 565
get_port_playback_latency, 97	jstate_prev, 565
get_port_playback_latency_int, 97	nchannels_in, 564
io, 96	nchannels_out, 564
MHAJack::client_avg_t, 554	num_xruns, 564
b_ready, 556	outch, 565
b_stopped, 556	output_portnames, 565
client_avg_t, 555	prepare, 561, 562
frag_out, 556	prepare_impl, 563
IOStoppedEvent, 556	proc_event, 564
io, 555	proc_handle, 564
n, 556	release, 562
name, 556	s_in, 565
nrep, 556	s_out, 565
pos, 556	samplerate, 564
proc, 556	set_input_portnames, 563
sn_in, 556	set_output_portnames, 563
sn_out, 556	set_use_jack_transport, 563
	-

start, 562	vars, 572
start_event, 565	MHAKernel::comm_var_map_t, 572
start_handle, 565	has key, 572
stop, 562	MHAMultiSrc, 98
stop_event, 565	MHAMultiSrc::base_t, 573
stop_handle, 565	ac, 574
stopped, 564	base_t, 574
str error, 563	select_source, 574
use_jack_transport, 565	MHAMultiSrc::channel t, 574
MHAJack::port_t, 565	channel, 574
~port t, 567	name, 574
connect_to, 568	MHAMultiSrc::channels_t, 575
dir_t, 566	channels_t, 575
dir_type, 568	MHAMultiSrc::spectrum_t, 576
get_short_name, 568	spectrum_t, 576
input, 566	update, 576
iob, 568	MHAMultiSrc::waveform_t, 577
jc, 568	update, 578
mute, 567	waveform_t, 578
output, 566	MHAOvlFilter, 98
port, 568	scale_fun_t, 99
port_t, 566, 567	MHAOvlFilter::FreqScaleFun, 100
read, 567	hz2bark, 101
write, 567	hz2bark_analytic, 101
MHAKernel, 97	hz2erb, 101
algo_comm_safe_cast, 98	hz2erb_glasberg1990, 101
MHAKernel::algo_comm_class_t, 569	hz2hz, 100
~algo_comm_class_t, 570	hz2khz, 101
ac, <u>572</u>	hz2log, 101
algo_comm_class_t, 570	hz2octave, 101
algo_comm_id_string, 572	hz2third_octave, 101
algo_comm_id_string_len, 572	inv_scale, 102
get_c_handle, 570	MHAOvlFilter::ShapeFun, 102
get_entries, 571	expflt, 103
get_error, 571	gauss, 103
get_var, 571	hann, 103
get_var_float, 571	linear, 103
get var int, 571	rect, 102
insert_var, 570	MHAOvlFilter::band_descriptor_t, 578
insert_var_float, 570	cf, 579
insert_var_int, 570	cf h, 579
is_var, 570	cf_l, 579
local_get_entries, 571	ef_h, 579
local_get_var, 571	ef I, 579
local_insert_var, 571	high_side_flat, 579
local_is_var, 571	low_side_flat, 579
local_remove_ref, 571	MHAOvlFilter::barkscale, 99
local_remove_var, 571	vbark, 100
remove_ref, 570	vfreq, 100
remove_var, 570	MHAOvlFilter::barkscale::bark2hz_t, 579
size, 571	~bark2hz_t, 580
,	,

bark2hz_t, 580	fscale_t, 590
MHAOvlFilter::barkscale::hz2bark_t, 580	get_f_hz, 590
\sim hz2bark t, 581	unit, 590
hz2bark t, 581	update_hz, 590
MHAOvlFilter::fftfb_ac_info_t, 581	updater, 590
bwv, 582	MHAOvlFilter::fspacing_t, 591
cLTASS, 582	bands, 592
cfv, 581	cf2bands, 592
efv, 581	ef2bands, 592
fftfb_ac_info_t, 581	equidist2bands, 592
insert, 581	fail_on_nonmonotonic_cf, 592
MHAOvlFilter::fftfb_t, 582	fail_on_unique_fftbins, 592
∼fftfb_t, 583	fs_, 592
apply_gains, 583	fspacing_t, 592
bin1, 584	get_cf_fftbin, 592
bin2, 584	get_cf_hz, 592
fftfb_t, 583	get_ef_hz, 592
fftlen, 584	nbands, 592
get_fbpower, 583	nfft_, 592
get_fbpower_db, 583	symmetry scale, 592
get_fftlen, 584	MHAOvlFilter::overlap_save_filterbank_
get_ltass_gain_db, 584	analytic_t, 593
samplingrate, 584	filter_analytic, 594
shape, 584	imagfb, 594
vbin1, 584	overlap_save_filterbank_analytic_t, 594
vbin2, 584	MHAOvlFilter::overlap_save_filterbank_t, 594
w, 584	channelconfig_out_, 596
MHAOvIFilter::fftfb_vars_t, 585	get_channelconfig, 596
cLTASS, 587	overlap_save_filterbank_t, 596
cf, 587	MHAOvlFilter::overlap save filterbank t←
ef, 587	::vars_t, 596
f, 587	fftlen, 597
fail_on_nonmonotonic, 587	irswnd, 597
fail_on_unique_bins, 587	phasemodel, 597
fftfb_vars_t, 586	vars_t, 597
fscale, 586	MHAOvlFilter::scale_var_t, 598
ftype, 587	add_fun, 599
normalize, 587	funs, 599
ovltype, 586	get_fun, 599
plateau, 586	get_name, 599
shapes, 587	hz2unit, 599
MHAOvIFilter::fscale_bw_t, 588	names, 599
bw, 589	scale_var_t, 599
bw_hz, 589	unit2hz, 599
fscale_bw_t, 589	MHAPLATFORM
get_bw_hz, 589	mha_parser.cpp, 975
update_hz, 589	MHAPLUGIN_CALLBACKS_PREFIX
updater, 589	The openMHA Plugins (programming in-
MHAOvIFilter::fscale_t, 589	terface), 8
f, 590	MHAPLUGIN_CALLBACKS
f_hz, 590	The openMHA Plugins (programming in-
1_112, 330	The openional riugins (programming in-

terface), 8	help, 608
MHAPLUGIN_DOCUMENTATION_PREFIX	id_str, 608
mha plugin.hh, 981	nested_lock, 608
MHAPLUGIN DOCUMENTATION	notify, 607
The openMHA Plugins (programming in-	op_query, 604
terface), 9	op_setval, 604
MHAPLUGIN_INIT_CALLBACKS_PREFIX	op_subparse, 604
mha_plugin.hh, 981	operators, 608
MHAPLUGIN_INIT_CALLBACKS	oplist, 607
mha_plugin.hh, 981	parent, 608
MHAPLUGIN_OVERLOAD_OUTDOMAIN	parse, 603, 604
altplugs.cpp, 932	prereadaccess, 608
mha_generic_chain.h, 969	queries, 608
split.cpp, 1034	query_addsubst, 606
wave2spec.cpp, 1038	query_cmds, 606
MHAPLUGIN_PROC_CALLBACK_PREFIX	query_dump, 604
mha_plugin.hh, 981	query entries, 604
MHAPLUGIN_PROC_CALLBACK	query_help, 606
mha_plugin.hh, 981	query_id, 606
MHAParser, 104	query_listids, 606
all_dump, 107	query_perm, 605
all_ids, 107	query_range, 605
c_parse_cmd_t, 107	query_readfile, 605
c_parse_err_t, 107	query_savefile, 605
cfg_dump, 107	query_savefile_compact, 606
cfg_dump_short, 107	query_savemons, 606
commentate, 107	query_subst, 606
entry_map_t, 107	query_type, 605
envreplace, 108	query_val, 605
get_precision, 107	query_version, 606
mon_dump, 107	readaccess, 608
opact_map_t, 107	repl_list, 608
opact_t, 107	repl_list_t, 603
query_map_t, 107	rm_parent_on_remove, 607
query_t, 107	set_help, 607
strreplace, 107	set_node_id, 606
trim, 107	thefullname, 608
MHAParser::StrCnv, 108	valuechanged, 607
bracket_balance, 110	writeaccess, 607
num brackets, 109	MHAParser::base_t::replace_t, 609
str2val, 110, 111	a, 609
$str2val < mha_real_t > 110$	b, 609
val2str, 111, 112	get_a, 609
MHAParser::base_t, 600	get_b, 609
~base_t, 603	replace, 609
activate_query, 607	replace_t, 609
add_parent_on_insert, 607	MHAParser::bool_mon_t, 610
add_replace_pair, 607	bool_mon_t, 610
base_t, 603	data, 611
data_is_initialized, 608	query_type, 611
fullname, 607	query_type, 011 query_val, 611
iamiamo, oor	quoi y_vai, o i i

MHAParser::bool_t, 611	data, 628
bool_t, 613	float_t, 627
data, 613	op_setval, 627
op_setval, 613	query_type, 627
query_type, 613	query_val, 627
query_val, 613	MHAParser::int_mon_t, 628
MHAParser::c_ifc_parser_t, 614	data, 630
~c_ifc_parser_t, 615	int_mon_t, 629
c_ifc_parser_t, 615	query_type, 629
c_parse_cmd, 616	query_val, 629
c_parse_err, 616	MHAParser::int_t, 630
libdata, 616	data, 632
liberr, 616	int_t, 631
modulename, 616	op_setval, 632
op_query, 615	query_type, 632
op_setval, 615	query_val, 632
op_subparse, 615	MHAParser::keyword_list_t, 632
ret_size, 616	add entry, 634
retv, 616	empty_string, 635
set parse cb, 615	entries, 635
test_error, 615	get_entries, 634
MHAParser::commit t	get_index, 634
commit_t, 618	get_value, 634
extern_connector, 618	index, 635
MHAParser::commit_t< receiver_t >, 616	keyword_list_t, 633
MHAParser::complex_mon_t, 618	set_entries, 634
complex_mon_t, 619	set_index, 634
• — —	set value, 634
data, 620	
query_type, 619	size_t, 633
query_val, 619	validate, 634
MHAParser::complex_t, 620	MHAParser::kw_t, 635
complex_t, 621	data, 638
data, 622	isval, 637
op_setval, 621	kw_t, 636, 637
query_type, 621	op_setval, 637
query_val, 621	query_range, 637
MHAParser::entry_t, 622	query_type, 637
entry, 622	query_val, 637
entry_t, 622	set_range, 637
name, 622	validate, 637
MHAParser::expression_t, 623	MHAParser::mcomplex_mon_t, 638
expression_t, 623	data, 639
Ival, 623	mcomplex_mon_t, 639
op, 623	query_type, 639
rval, 623	query_val, 639
MHAParser::float_mon_t, 624	MHAParser::mcomplex_t, 640
data, 625	data, 641
float_mon_t, 624	mcomplex_t, 641
query_type, 625	op_setval, 641
query_val, 625	query_type, 641
MHAParser::float_t, 625	query_val, 641
- ·	• •

MHAParser::mfloat_mon_t, 642	MHAParser::parser_t, 654
data, 643	~parser_t, 656
mfloat_mon_t, 642	entries, 658
query type, 643	force_remove_item, 656
query_val, 643	id_string, 658
MHAParser::mfloat_t, 643	insert_item, 656
data, 646	last_errormsg, 658
mfloat_t, 645	op_query, 657
op_setval, 645	op_setval, 657
query_type, 645	op_subparse, 657
query_val, 645	parser_t, 655
MHAParser::mhaconfig_mon_t, 646	query_dump, 657
channels, 647	query_entries, 657
domain, 647	query_listids, 658
fftlen, 647	query_readfile, 657
fragsize, 647	query_savefile, 657
mhaconfig_mon_t, 647	query_savefile_compact, 658
srate, 648	query_savemons, 658
update, 647	query_type, 657
wndlen, 647	query val, 658
MHAParser::mhapluginloader_t, 648	remove item, 656, 657
~mhapluginloader_t, 649	set_id_string, 658
ac_, 650	srcfile, 658
bookkeeping, 650	srcline, 658
cf_in_, 650	MHAParser::range_var_t, 659
cf_out_, 650	check_low, 661
connector, 650	check_range, 661
get_cfin, 650	check_up, 661
get_cfout, 650	low_incl, 661
get_last_name, 650	low_limit, 661
last_name, 650	query_range, 660
load_plug, 650	range_var_t, 660
mhapluginloader_t, 649	set_range, 660
parent_, 650	up_incl, 661
plug, 650	up limit, 661
plugname, 650	validate, 660, 661
plugname name , 650	MHAParser::string mon t, 662
prefix_, 650	data, 663
prepare, 649	query_type, 663
process, 649, 650	query_val, 663
release, 649	string mon t, 662
MHAParser::mint_mon_t, 651	MHAParser::string t, 663
data, 652	data, 665
mint_mon_t, 651	op_setval, 665
query_type, 652	query_type, 665
query_val, 652	query_val, 665
MHAParser::monitor_t, 652	string_t, 665
monitor_t, 653	MHAParser::variable_t, 666
op_query, 653	locked, 667
$\cdot - \cdot$	
query_dump, 653	op_setval, 667
query_perm, 653	query_perm, 667

U 1 007	1.1. II. II. II. 200
setlock, 667	wnd_bartlett, 686
variable_t, 667	wnd_blackman, 686
MHAParser::vcomplex_mon_t, 668	wnd_hamming, 686
data, 670	wnd_hann, 686
query_type, 670	wnd_rect, 686
query_val, 670	wnd_user, 686
vcomplex_mon_t, 669	wtype, 687
MHAParser::vcomplex_t, 670	wtype_t, 686
data, 672	MHAPlugin, 112
op_setval, 672	MHAPlugin::cfg_chain_t
query_type, 672	\sim cfg_chain_t, 689
query_val, 672	cfg_chain_t, 689
vcomplex t, 672	data, 689
MHAParser::vfloat_mon_t, 673	next, 689
data, 674	not_in_use, 689
query_type, 674	MHAPlugin::cfg_chain_t< runtime_cfg_t >,
query_val, 674	688
vfloat_mon_t, 674	MHAPlugin::config_t
MHAParser::vfloat_t, 675	∼config_t, 692
data, 677	cfg, 694
op setval, 676	cfg_chain, 694
query_type, 676	cfg_chain_current, 694
query_val, 676	cleanup_unused_cfg, 694
vfloat_t, 676	config_t, 692
MHAParser::vint_mon_t, 677	last_config, 692
data, 678	poll_config, 692
query_type, 678	push_config, 692
query_val, 678	remove_all_cfg, 694
vint mon t, 678	MHAPlugin::config_t< runtime_cfg_t >, 689
MHAParser::vint_t, 679	MHAPlugin::plugin t
data, 681	~plugin_t, 696
op setval, 680	ac, 698
query_type, 680	input_cfg, 697
query_val, 680	input_cfg_, 698
vint_t, 680	is_prepared, 697
MHAParser::vstring_mon_t, 681	is_prepared_, 698
data, 682	mhaconfig_in, 698
query_type, 682	mhaconfig out, 698
query_val, 682	output_cfg, 698
vstring_mon_t, 682	output_cfg_, 698
MHAParser::vstring_t, 683	plugin_t, 696
data, 684	prepare, 696
op_setval, 684	prepare_, 697
query_type, 684	release, 697
query_type, 004 query_val, 684	release_, 697
vstring_t, 684	tftype, 698
MHAParser::window_t, 685	MHAPlugin::plugin_t< runtime_cfg_t >, 694
get_type, 687	MHAPlugin_Resampling, 113
get_type, 607 get_window, 686, 687	MHAPlugin_Resampling::resampling_if_←
user, 687	t, 699
window_t, 686	algo, 700
	a.gc, . cc

chain, 700	current_thread_priority, 711
fragsize, 700	current_thread_scheduler, 711
irslen_inner2outer, 700	kick_condition, 711
irslen_outer2inner, 700	kick_thread, 711
nyquist_ratio, 700	kicked, 712
plugloader, 700	main, 711
prepare, 700	mutex, 711
process, 700	posix_threads_t, 710
release, 700	priority, 712
resampling_if_t, 700	processing_done, 712
srate, 700	scheduler, 712
MHAPlugin_Resampling::resampling_t, 701	termination_request, 712
inner2outer_resampling, 702	thread, 712
inner_fragsize, 702	thread_start, 711
inner_signal, 702	MHAPlugin_Split::split_t, 713
inner_srate, 702	~split_t, 715
nchannels_in, 702	algos, 716
nchannels_out, 702	chains, 717
outer2inner_resampling, 702	channels, 716
outer fragsize, 701	clear chains, 715
outer_srate, 702	collect result, 715
output_signal, 702	copy_output_spec, 715
plugloader, 702	copy_output_wave, 715
process, 701	delay, 717
resampling_t, 701	framework_thread_priority, 717
MHAPlugin_Split, 113	framework_thread_scheduler, 716
INVALID_THREAD_PRIORITY, 114	patchbay, 716
MHAPlugin_Split::domain_handler_t, 702	prepare_, 715
~domain_handler_t, 704	process, 715
deallocate_domains, 705	release_, 715
deallocate_domains, 703 domain_handler_t, 704	signal_out, 716
— — ·	_
get_signal, 706	spec_out, 717
operator=, 704	split_t, 715
process, 706	thread_platform, 716
processor, 707	trigger_processing, 715
put_signal, 705	update, 715
set_input_domain, 704	wave_out, 717
set_output_domain, 704	worker_thread_priority, 716
spec_in, 707	worker_thread_scheduler, 716
spec_out, 707	MHAPlugin_Split::splitted_part_t, 717
wave_in, 707	~splitted_part_t, 719
wave_out, 707	collect_result, 721
MHAPlugin_Split::dummy_threads_t, 707	domain, 721
catch_thread, 708	operator=, 720
dummy_threads_t, 708	parse, 720
kick_thread, 708	plug, 721
MHAPlugin_Split::posix_threads_t, 709	prepare, 720
\sim posix_threads_t, 711	release, 720
attr, 712	splitted_part_t, 719
catch_condition, 712	thread, 722
catch_thread, 711	trigger_processing, 721

MHAPlugin_Split::thread_platform_t, 722	signal_counter, 121
~thread_platform_t, 723	MHASignal::async_rmslevel_t, 729
catch_thread, 724	async_rmslevel_t, 730
kick_thread, 724	filled, 731
operator=, 724	peaklevel, 731
processor, 724	pos, 731
thread_platform_t, 723	process, 731
MHAPlugin_Split::uni_processor_t, 725	rmslevel, 730
~uni_processor_t, 725	MHASignal::delay_spec_t, 731
process, 726	\sim delay_spec_t, 732
MHAPluginCategory_t	buffer, 732
mha.h, 955	delay, <mark>732</mark>
MHAPluginDocumentation_t	delay_spec_t, 732
mha.h, 955	pos, 7 <mark>32</mark>
MHAPrepare_cb	process, 732
PluginLoader::mhapluginloader_t, 850	MHASignal::delay_t, 732
MHAPrepare_t	\sim delay_t, 733
mha.h, 954	buffer, 734
MHAProc_spec2spec_cb	channels, 734
PluginLoader::mhapluginloader_t, 850	delay_t, 733
MHAProc_spec2spec_t	delays, 734
mha.h, 955	inspect, 734
MHAProc_spec2wave_cb	pos, 734
PluginLoader::mhapluginloader_t, 851	process, 733
MHAProc_spec2wave_t	MHASignal::delay_wave_t, 734
mha.h, 955	~delay_wave_t, 735
MHAProc_wave2spec_cb	buffer, 735
PluginLoader::mhapluginloader_t, 850	delay, 735
MHAProc wave2spec t	delay_wave_t, 735
mha.h, 955	pos, 735
MHAProc_wave2wave_cb	process, 735
PluginLoader::mhapluginloader_t, 850	MHASignal::doublebuffer_t, 735
MHAProc_wave2wave_t	~doublebuffer_t, 737
mha.h, 955	ch, 738
MHARelease cb	doublebuffer_t, 736
PluginLoader::mhapluginloader_t, 850	inner_in, 738
MHARelease t	inner_out, 738
mha.h, 954	inner_process, 737
MHASet cb	k_inner, 738
PluginLoader::mhapluginloader_t, 851	k_outer, 738
MHASet t	min, 737
mha.h, 954	outer_out, 738
MHASignal, 114	_ · · ·
	outer_process, 737
copy_permuted, 120 kth_smallest, 117	this_outer_out, 738 MHASignal::fft_t, 738
— · · · · · · · · · · · · · · · · · · ·	<u> </u>
limit, 117	~fft_t, 739
mean, 119	backward, 740
median, 118	backward_scale, 740
quantile, 119	buf_in, 741
saveas_mat4, 119, 120	buf_out, 741
scale, 117	fft_t, 739

fftw_plan_fft, 741	rms, 745
fftw_plan_ifft, 741	rms_limit40, 745
fftw_plan_spec2wave, 741	set_level_db, 747
fftw plan wave2spec, 741	set level lin, 747
forward, 739	MHASignal::matrix_t, 748
forward_scale, 740	\sim matrix_t, 751
n_im, 741	cdata, 756
n_re, 741	complex ofs, 756
nfft, 741	dimension, 752
scale, 741	get_cdata, 756
sort_fftw2spec, 740	get_comm_var, 751
sort_spec2fftw, 740	get_index, 755
spec2wave, 739	get_nelements, 752
spec2wave_scale, 740	get_nreals, 755
wave2spec, 739	get_rdata, 756
wave2spec scale, 740	imag, 753–755
MHASignal::hilbert_fftw_t, 741	is_same_size, 752
buf_c_in, 742	iscomplex, 752
buf_c_out, 742	matrix_t, 750, 751
bul_c_out, 742 buf_r_in, 742	nelements, 756
 :	•
buf_r_out, 742	numbytes, 755
hilbert, 742	operator(), 753–755
hilbert_fftw_t, 742	operator=, 751
n, 742	rdata, 756
p1, 742	real, 752–754
p2, 742	size, 752
sc, 742	write, 755
MHASignal::hilbert_t, 742	MHASignal::minphase_t, 756
~hilbert_t, 743	minphase_t, 757
h, 743	operator(), 757
hilbert_t, 743	phase, 758
operator(), 743	MHASignal::quantizer_t, 758
MHASignal::loop_wavefragment_t, 744	downscale, 759
add, 745	limit, 759
b_loop, 747	operator(), 759
get_mapping, 746	quantizer_t, 758
input, 745	up_limit, 759
intern_level, 747	upscale, 759
is_playback_active, 747	MHASignal::ringbuffer_t, 759
level_mode_t, 745	contained_frames, 761
locate_end, 747	discard, 762
loop_wavefragment_t, 745	next_read_frame_index, 762
mute, 745	next_write_frame_index, 763
peak, 745	ringbuffer_t, 761
playback, 746, 747	value, 761
playback_channels, 747	write, 762
playback_mode_t, 745	MHASignal::schroeder_t, 763
pos, 747	down, 765
relative, 745	groupdelay_t, 764
replace, 745	identity, 766
rewind, 747	log_down, 766

log_up, 766	operator(), 781, 782
schroeder t, 765	operator=, 781
sign_t, 765	operator[], 781
up, 765	power, 786
MHASignal::spectrum t, 766	powspec, 787
• · · · · · · · · · · · · · · · · · · ·	•
~spectrum_t, 768	scale, 787
copy, 769	scale_channel, 787
copy_channel, 770	scale_frame, 788
export_to, 770	sum, 782, 783
operator(), 769	sum_channel, 783
operator[], 769	sumsqr, 783
scale, 770	value, 781, 782
scale_channel, 771	waveform t, 780
spectrum_t, 768	MHASndFile, 121
value, 769	MHASndFile::sf_t, 788
•	~sf_t, 789
MHASignal::stat_t, 771	_ :
mean, 772	sf, 789
mean_std, 772	sf_t, 789
n, 772	MHASndFile::sf_wave_t, 789
push, 772	sf_wave_t, 790
stat_t, 772	MHAStrError_cb
sum, 772	PluginLoader::mhapluginloader_t, 851
sum2, 772	MHAStrError_t
MHASignal::subsample_delay_t, 772	mha.h, 955
last_complex_bin, 774	MHATableLookup, 121
phase_gains, 774	MHATableLookup::linear_table_t, 790
process, 774	~linear_table_t, 792
subsample_delay_t, 773	-
• — •—	add_entry, 793
MHASignal::uint_vector_t, 775	clear, 793
~uint_vector_t, 776	interp, 792
data, 777	len, 794
get_length, 777	linear_table_t, 792
getdata, 777	lookup, 792
length, 777	prepare, 793
numbytes, 777	scalefac, 794
operator=, 776	set_xmax, 793
operator==, 776	set xmin, 792
operator[], 777	vec_y, 794
uint_vector_t, 776	vy, 794
:	
write, 777	xmax, 794
MHASignal::waveform_t, 778	xmin, 794
~waveform_t, 780	MHATableLookup::table_t, 794
assign, 784	\sim table_t, 795
assign_channel, 784	clear, 795
assign_frame, 784	interp, 795
copy, 785	lookup, 795
copy_channel, 785	table_t, 795
copy_from_at, 785	MHATableLookup::xy_table_t, 796
export_to, 786	add_entry, 798
get_size, 788	clear, 798
limit, 786	get_xlimits, 799
mm, 700	961_11111113, 733

interp, 797	MHAFilter, 92
lookup, 797	mhajack.cpp, 1019
mXY, 799	make_friendly_number_by_limiting
set_xfun, 798	nlms_wave.cpp, 1025
set_xyfun, 799	prediction_error.cpp, 1027
set_yfun, 799	mapping
xfun, 799	addsndfile::addsndfile_if_t, 175
xy_table_t, 797	coherence::vars_t, 228
xyfun, 799	matmix_t
yfun, 799	matrixmixer::matmix_t, 380
MHAWindow, 121	matrix t
bartlett, 122	MHASignal::matrix_t, 750, 751
blackman, 123	matrixmixer, 85
hamming, 123	
•	matrixmixer.cpp, 949
hanning, 123	matrixmixer::cfg_t, 377
rect, 122	cfg_t, 378
MHAWindow::bartlett_t, 800	m, 378
bartlett_t, 800	process, 378
MHAWindow::base_t, 801	sout, 378
base_t, 801, 802	wout, 378
operator(), 802	matrixmixer::matmix_t, 379
ramp_begin, 802	ci, 380
ramp_end, 802	co, 380
MHAWindow::blackman_t, 803	matmix_t, 380
blackman_t, 803	mixer, 380
MHAWindow::fun_t, 804	patchbay, 380
fun_t, 804	prepare, 380
MHAWindow::hamming_t, 805	process, 380
hamming_t, 806	update_m, 380
MHAWindow::hanning_t, 806	max
hanning_t, 807	spec2wave.cpp, 1030
MHAWindow::rect_t, 807	Vector and matrix processing toolbox, 58
rect_t, 808	max_clipped
MHAWindow::user_t, 808	softclipper_variables_t, 886
user t, 809	max fill count
MIN_TCP_PORT_STR	mha fifo t, 424
MHAIOTCP.cpp, 1017	max_frames
MIN TCP PORT	acsave::cfg_t, 162
MHAIOTCP.cpp, 1017	max_lag
MIN	doasvm_feature_extraction, 271
mha_defs.h, 958	max_level_difference
mXY	dc::dc_t, 243
MHATableLookup::xy_table_t, 799	dc::dc_vars_t, 245
	— — ·
main	max_p_ind_name
analysemhaplugin.cpp, 933	doasym_classification, 267
browsemhaplugins.cpp, 934	max_pool_ind_name
generatemhaplugindoc.cpp, 945	acPooling_wave, 155
MHAPlugin_Split::posix_threads_t, 711	max_q
mha.cpp, 950	timoConfig, 909
testalsadevice.c, 1035	max_q_AC
make_friendly_number	timo_AC, 904

max_val	MHA_AC_CHAR, 954
timoConfig, 909	MHA_AC_DOUBLE, 954
max_val_AC	MHA_AC_FLOAT, 954
timo_AC, 904	MHA_AC_INT, 954
maxInputChannels	MHA_AC_MHACOMPLEX, 954
MHAIOPortAudio::device_info_t, 550	MHA_AC_MHAREAL, 954
maxOutputChannels	MHA_AC_UNKNOWN, 954
MHAIOPortAudio::device_info_t, 550	MHA AC USER, 954
maxabs	MHA AC VEC FLOAT, 954
Vector and matrix processing toolbox, 56,	MHA_CALLBACK_TEST_PREFIX, 952
57	MHA_CALLBACK_TEST, 952
maxframe	MHA_DOMAIN_MAX, 954
acsave::save_var_t, 164	MHA_DOMAIN_UNKNOWN, 954
maxgain	MHA_RELEASE_VERSION_STRING,
dc_simple::dc_t, 253	953
dc_simple::dc_vars_t, 255	MHA_SPECTRUM, 954
DynComp::dc_afterburn_rt_t, 280	MHA_STRUCT_SIZEMATCH, 953
DynComp::dc_afterburn_vars_t, 284	MHA STRF, 952
maximum reader xruns in succession ←	MHA_VERSION_BUILD, 953
before_stop	MHA VERSION MAJOR, 952
mha_drifter_fifo_t, 412	MHA_VERSION_MINOR, 952
maximum_writer_xruns_in_succession_ ←	MHA VERSION RELEASE, 953
before_stop	MHA_VERSION_STRING, 953
mha_drifter_fifo_t, 412	MHA VERSION, 953
maxlen	MHA WAVEFORM, 953
plingploing::if_t, 833	MHA_XSTRF, 952
maxlen	MHADestroy_t, 954
plingploing::plingploing_t, 835	MHAGetVersion_t, 954
mcomplex_mon_t	MHAInit_t, 954
MHAParser::mcomplex mon t, 639	MHAPluginCategory_t, 955
mcomplex_t	MHAPluginDocumentation t, 955
MHAParser::mcomplex t, 641	MHAPrepare t, 954
mean	MHAProc_spec2spec_t, 955
MHA AC::stat t, 394	MHAProc_spec2wave_t, 955
MHASignal, 119	MHAProc_wave2spec_t, 955
MHASignal::stat_t, 772	MHAProc_wave2wave_t, 955
mean_std	MHARelease t, 954
MHASignal::stat_t, 772	MHASet t, 954
median	MHAStrError_t, 955
MHASignal, 118	mha_domain_t, 954
mfloat_mon_t	mha_algo_comm.cpp, 955
MHAParser::mfloat_mon_t, 642	AC DIM MISMATCH, 955
mfloat t	AC INVALID HANDLE, 955
MHAParser::mfloat_t, 645	AC INVALID NAME, 955
mha	AC INVALID OUTPTR, 955
speechnoise_t, 891	AC_STRING_TRUNCATED, 955
mha.cpp, 950	AC SUCCESS, 955
main, 950	AC TYPE MISMATCH, 955
mhamain, 950	algo_comm_default, 955
mha.h, 950	mha_algo_comm.h, 955
algo comm t. 954	mha algo comm.hh. 957

ALGO_COMM_ID_STR, 957	output_channels, 405
algo_comm_default, 957	output_fifo, 405
mha_alloc	process, 404
mha_ruby.cpp, 983	provoke_inner_error, 404
mha_audio_descriptor_t, 396	provoke_outer_error, 404
cf, 397	value type, 402
chdir, 397	mha_dblbuf_t< FIFO >, 400
dt, 397	mha_debug
is_complex, 397	Error handling in the openMHA, 32
n_channels, 397	mha_defs.h, 957
n_freqs, 397	MHA FUN , 958
n_samples, 397	
mha_audio_t, 397	CHECK EXPR, 958
cdata, 398	CHECK VAR, 958
descriptor, 398	M_PI, 958
•	MAX, 959
rdata, 398	•
mha_channel_info_t, 398	MHA_EAR_LEFT, 959
dir, 399	MHA_EAR_MAX, 959
id, 399	MHA_EAR_RIGHT, 959
idstr, 399	MIN, 958
peaklevel, 399	mha_direction_t, 406
side, 399	azimuth, 406
mha_complex	distance, 407
Complex arithmetics in the openMHA, 62	elevation, 406
mha_complex_t, 400	mha_domain_t
im, 400	mha.h, 954
re, 400	mha_drifter_fifo_t
mha_dblbuf_t	desired_fill_count, 411
\sim mha_dblbuf_t, 403	get_available_space, 410
delay, 405	get_des_fill_count, 410
fifo_size, 405	get_fill_count, 410
get_delay, 403	get_min_fill_count, 411
get_fifo_size, 403	maximum_reader_xruns_in_succession
get_inner_error, 403	_before_stop, 412
get_inner_size, 403	maximum_writer_xruns_in_succession ←
get_input_channels, 403	_before_stop, 412
get_input_fifo_fill_count, 403	mha_drifter_fifo_t, 409
get_input_fifo_space, 403	minimum_fill_count, 411
get_outer_size, 403	null_data, 412
get_output_channels, 403	read, 410
get_output_fifo_fill_count, 403	reader_started, 411
get_output_fifo_space, 403	reader_xruns_in_succession, 412
inner_error, 406	reader_xruns_since_start, 412
inner_size, 405	reader_xruns_total, 412
input, 404	starting, 411
input_channels, 405	startup_zeros, 413
input_fifo, 405	stop, 411
mha_dblbuf_t, 402	write, 409
outer_error, 406	writer_started, 411
outer_size, 405	writer_xruns_in_succession, 412
output, 404	writer_xruns_since_start, 412
ουιραι, 404	willer_xruns_since_start, 412

writer_xruns_total, 412	mha_fft_wave2spec_scale
mha_drifter_fifo_t< T >, 407	Fast Fourier Transform functions, 75
mha errno.c, 959	mha_fftfb.cpp, 963
cstr_strerror, 960	BARKSCALE_ENTRIES, 965
mha_set_user_error, 960	filtershapefun, 965
mha_strerror, 960	mha_fftfb.hh, 965
next_except_str, 960	mha_fifo.cpp, 966
STRLEN, 960	mha_fifo.h, 966
mha_errno.h, 960	mha_fifo_thread_platform_implementation ←
MHA_ERR_INVALID_HANDLE, 961	_t, 966
MHA ERR NULL, 961	mha fifo lw_t
MHA_ERR_SUCCESS, 961	~mha_fifo_lw_t, 416
MHA ERR UNKNOWN, 961	error, 418
MHA_ERR_USER, 961	mha_fifo_lw_t, 416
MHA_ERR_VARFMT, 961	read, 417
MHA ERR VARRANGE, 961	set_error, 417
mha set user error, 961	sync, 417
mha strerror, 961	write, 416
mha_strendi, 301 mha_error.cpp, 961	mha_fifo_lw_t< T >, 415
mha_error.hh, 962	mha_fifo_posix_threads_t, 418
Getmsg, 963	~mha_fifo_posix_threads_t, 419
mha_error_helpers, 87	aquire_mutex, 419
	• —
digits, 87	decrease_condition, 420
snprintf_required_length, 87	decrement, 419
mha_event_emitter.h, 963	increase_condition, 420
mha_events.cpp, 963	increment, 419
mha_events.h, 963	mha_fifo_posix_threads_t, 419
mha_exit_request	mutex, 420
mha_ruby.cpp, 983	release_mutex, 419
mha_fft	wait_for_decrease, 419
timoConfig, 908	wait_for_increase, 419
mha_fft_backward	mha_fifo_t
Fast Fourier Transform functions, 74	~mha_fifo_t, 422
mha_fft_backward_scale	buf, 424
Fast Fourier Transform functions, 75	buf_uses_placement_new, 424
mha_fft_forward	clear, 424
Fast Fourier Transform functions, 74	get_available_space, 423
mha_fft_forward_scale	get_fill_count, 423
Fast Fourier Transform functions, 75	get_max_fill_count, 423
mha_fft_free	max_fill_count, 424
Fast Fourier Transform functions, 71	mha_fifo_t, 422
mha_fft_new	operator=, 423
Fast Fourier Transform functions, 71	read, 423
mha_fft_spec2wave	read_ptr, 424
Fast Fourier Transform functions, 73	value_type, 422
mha_fft_spec2wave_scale	write, 422
Fast Fourier Transform functions, 76	write_ptr, 424
mha_fft_t	$mha_fifo_t < T >, 420$
Fast Fourier Transform functions, 71	mha_fifo_thread_guard_t, 424
mha_fft_wave2spec	~mha_fifo_thread_guard_t, 425
Fast Fourier Transform functions, 72	mha_fifo_thread_guard_t, 425

sync, 425	mha_os.h, 973
mha_fifo_thread_platform_implementation_t	mha_libhandle_t
mha_fifo.h, 966	mha_os.h, 973
mha_fifo_thread_platform_t, 425	mha_library_paths
~mha_fifo_thread_platform_t, 426	mha_os.cpp, 971
aguire_mutex, 427	mha_os.h, 973
decrement, 427	mha_loadlib
increment, 427	mha_os.h, 972
mha_fifo_thread_platform_t, 426	mha loadlib error
operator=, 428	mha_os.h, 973
release mutex, 427	mha_min_1
wait_for_decrease, 427	mha_signal.hh, 995
wait_for_increase, 427	mha_msleep
mha_filter.cpp, 966	mha_os.h, 973
diff_coeffs, 967	mha_multisrc.cpp, 970
— · · · · · · · · · · · · · · · · · · ·	mha multisrc.h, 971
mha_filter.hh, 967	
mha_fragsize	mha_ntoh
MHAIOJackdb::io_jack_t, 547	mha_os.h, 974
mha_free	mha_os.cpp, 971
mha_ruby.cpp, 983	list_dir, 971
mha_freelib	mha_getenv, 971
mha_os.h, 972	mha_library_paths, 971
mha_freelib_success	mha_os.h, 971
mha_os.h, 972	FMTsz, 973
mha_generic_chain.cpp, 968	list_dir, 973
mhaconfig_compare, 969	MHA_RESOLVE_CHECKED, 973
mha_generic_chain.h, 969	MHA_RESOLVE, 973
MHAPLUGIN_OVERLOAD_OUTDOM←	mha_freelib, 972
AIN, 969	mha_freelib_success, 972
mha_getenv	mha_getenv, 973
mha_os.cpp, 971	mha_getlibfun, 972
mha_os.h, 973	mha_getlibfun_checked, 973
mha getlibfun	mha_hton, 973, 974
mha_os.h, 972	mha_lib_extension, 973
mha_getlibfun_checked	mha libhandle t, 973
mha os.h, 973	mha library paths, 973
mha_hton	mha loadlib, 972
mha_os.h, 973, 974	mha_loadlib_error, 973
mha_io_ifc.h, 969	mha_msleep, 973
IODestroy t, 970	mha_ntoh, 974
IOInit t, 970	mha_parse
IOPrepare_t, 970	mha_ruby.cpp, 983
IOProcessEvent_t, 970	mha_parser.cpp, 974
IORelease_t, 970	MHAPLATFORM, 975
- ·	•
IOSetVar_t, 970	parse_1_complex, 975
IOStart_t, 970	parse_1_float, 975
IOStartedEvent_t, 970	write_float, 975
IOStop_t, 970	mha_parser.hh, 975
IOStoppedEvent_t, 970	DEFAULT_RETSIZE, 979
IOStrError_t, 970	insert_member, 979
mha_lib_extension	mha_platform_tic

mha_profiling.c, 982	mha_rt_fifo_t $<$ T $>$, 429
mha_profiling.h, 983	mha_ruby.cpp, 983
mha_platform_tictoc_t	Init_mha_ruby, 983
mha_profiling.h, 983	mha_alloc, 983
mha_platform_toc	mha_exit_request, 983
mha_profiling.c, 982	mha_free, 983
mha_profiling.h, 983	mha_parse, 983
mha_plugin.hh, 979	rb_f_t, 983
attribute, 981	mha_samplerate
declspec, 981	MHAIOJackdb::io_jack_t, 547
GITCOMMITHASH, 981	mha set user error
HINSTANCE, 981	mha errno.c, 960
MHAPLUGIN_DOCUMENTATION_PR↔	mha_errno.h, 961
EFIX, 981	mha_signal.cpp, 983
MHAPLUGIN_INIT_CALLBACKS_PRE↔	ASSERT_EQUAL_DIM_PTR, 986
FIX, 981	ASSERT EQUAL DIM, 986
MHAPLUGIN_INIT_CALLBACKS, 981	intensity, 986
MHAPLUGIN PROC CALLBACK PR↔	MHA ID MATRIX, 986
EFIX, 981	MHA_ID_UINT_VECTOR, 986
MHAPLUGIN_PROC_CALLBACK, 981	safe_div, 986
WINAPI, 981	set_minabs, 986
mha_profiling.c, 982	mha_signal.hh, 986
mha_platform_tic, 982	M_PI, 995
mha_platform_toc, 982	mha_min_1, 995
mha_tic, 982	mha_round, 995
mha_toc, 982	operator<<, 995
mha_profiling.h, 982	operator>>, 995
mha_platform_tic, 983	safe_div, 995
mha_platform_tictoc_t, 983	set minabs, 995
mha_platform_toc, 983	value, 995
mha_real_t	mha_signal_fft.h, 996
Vector and matrix processing toolbox, 41	mha_spec_t, 432
mha_round	buf, 433
mha_signal.hh, 995	channel info, 433
mha_rt_fifo_element_t	num_channels, 433
~mha_rt_fifo_element_t, 429	num_frames, 433
abandonned, 429	mha_strerror
data, 429	mha_errno.c, 960
mha_rt_fifo_element_t, 428	mha errno.h, 961
next, 429	mha_tablelookup.cpp, 996
mha_rt_fifo_element_t< T >, 428	mha_tablelookup.hh, 996
mha_rt_fifo_t	mha_tcp.cpp, 997
~mha_rt_fifo_t, 430	ASYNC_CONNECT_STARTED, 998
current, 432	closesocket, 998
mha_rt_fifo_t, 430	host_port_to_sock_addr, 998
poll, 431	INVALID SOCKET, 998
poll_1, 431	SOCKET_ERROR, 998
push, 431	SOCKET, 998
remove_abandonned, 431	tcp_connect_to, 998
remove_all, 431	tcp_connect_to_with_timeout, 998
root, 432	thread_start_func, 998

mha_tcp.hh, 998	prepare, 468
Sleep, 1000	prepared, 468
mha_test_struct_size	proc_cnt, 469
PluginLoader::mhapluginloader_t, 850	process, 468
mha_tic	prof_algos, 469
mha_profiling.c, 982	prof_cfg, 469
mha_tictoc_t, 461	prof_init, 469
t, 461	prof_load_con, 469
tv1, 461	prof_prepare, 469
tv2, 461	prof_process, 469
tz, 461	prof_process_load, 469
mha_toc	prof_process_tt, 469
mha_profiling.c, 982	prof_release, 469
mha_toolbox.h, 1000	prof_tt_con, 469
mha_wave_t, 462	profiling, 469
buf, 463	release, 468
channel_info, 463	tictoc, 469
num_channels, 463	update_proc_load, 468
num_frames, 463	mhachain_t
mha_windowparser.cpp, 1000	mhachain::mhachain_t, 466
wnd_funs, 1000	mhachannels
mha_windowparser.h, 1000	addsndfile::addsndfile_if_t, 175
mhachain, 90	mhaconfig_compare
mhachain.cpp, 1001	mha_generic_chain.cpp, 969
mhachain::chain_base_t, 463	PluginLoader, 125
algos, 465	mhaconfig_in
b_prepared, 465	MHAPlugin::plugin_t, 698
bprofiling, 465	mhaconfig_mon_t
cfin, 465	MHAParser::mhaconfig mon t, 647
cfout, 465	mhaconfig_out
chain, 465	MHAPlugin::plugin_t, 698
chain_base_t, 464	mhaconfig_t, 470
old algos, 465	channels, 471
patchbay, 465	domain, 471
•	fftlen, 471
prepare, 465 process, 464, 465	•
•	fragsize, 471
release, 465	srate, 471
update, 465	wndlen, 471
mhachain::mhachain_t, 466	mhafft
mhachain_t, 466	hilbert_shifter_t, 332
mhachain::plugs_t, 467	mhafw_lib.cpp, 1001
∼plugs_t, 468	mhafw_lib.h, 1001
ac, 468	mhajack.cpp, 1019
algos, 468	dummy_jack_proc_cb, 1019
alloc_plugs, 468	jack_error_handler, 1019
b_prepared, 468	last_jack_err, 1019
b_use_profiling, 469	last_jack_err_msg, 1019
chain, 469	make_friendly_number, 1019
cleanup_plugs, 468	mhajack.h, 1019
parser, 468	IO_ERROR_JACK, 1021
plugs_t, 468	IO_ERROR_MHAJACKLIB, 1021

last_jack_err_msg, 1021	mha_drifter_fifo_t, 411
MAX_USER_ERR, 1021	minlen
MHAJACK FW STARTED, 1021	plingploing::if_t, 833
MHAJACK STARTING, 1021	minlen
MHAJACK_STOPPED, 1021	plingploing::plingploing_t, 835
mhamain	minphase
mha.cpp, 950	MHAFilter::smoothspec_t, 534
mhamain.cpp, 1022	minphase_t
mhamain.cpp, 1021	MHASignal::minphase_t, 757
create_lock, 1022	mint_mon_t
GREETING_TEXT, 1022	MHAParser::mint_mon_t, 651
HELP_TEXT, 1022	minw
MAX_LINE_LENGTH, 1022	wavwriter_t, 922
mhamain, 1022	minwrite
remove_lock, 1022	wavrec t, 921
mhaplug_cfg_t, 688	mix
~mhaplug_cfg_t, 688	sine cfg t, 876
mhaplug_cfg_t, 688	mixer
mhapluginloader.cpp, 1022	matrixmixer::matmix_t, 380
mhapluginloader.h, 1022	mixw ref
mhapluginloader_t	_
MHAParser::mhapluginloader_t, 649	hilbert_shifter_t, 332 mixw_shift
PluginLoader::mhapluginloader_t, 848	_
	hilbert_shifter_t, 332
mhaserver_t, 726	mode
~mhaserver_t, 728	ac2osc_t, 139
acceptor_started, 728	addsndfile::addsndfile_if_t, 175
ack_fail, 729	MHA_TCP::OS_EVENT_TYPE, 446
ack_ok, 729	noise_t, 820
announce_port, 729	sine_t, 878
logfile, 729	smoothgains_bridge::overlapadd_if_
logstring, 728	t, 880
mhaserver_t, 727	modified
pid_mon, 729	dc::dc_vars_t, 245
port, 729	dc_simple::dc_if_t, 251
received_group, 728	modulename
run, 728	dynamiclib_t, 278
set_announce_port, 728	MHAParser::c_ifc_parser_t, 616
tcpserver, 729	mon
mhasndfile.cpp, 1023	acmon::ac_monitor_t, 149
validator_channels, 1023	mon_complex
validator_length, 1023	acmon::ac_monitor_t, 149
write_wave, 1023	mon_dump
mhasndfile.h, 1023	MHAParser, 107
write_wave, 1024	mon_g
mhastrdomain	dc_simple::dc_if_t, 251
PluginLoader, 125	dc_simple::dc_t, 253
min	mon_l
MHASignal::doublebuffer_t, 737	dc_simple::dc_if_t, 251
spec2wave.cpp, 1030	dc_simple::dc_t, 253
Vector and matrix processing toolbox, 58	mon_mat
minimum_fill_count	acmon::ac_monitor_t, 149

mon_mat_complex	mha_fifo_posix_threads_t, 420
acmon::ac_monitor_t, 149	mylogf
mon_t, 810	dc_afterburn.cpp, 937
mon_t, 810	
store, 810	N
monitor variable, 4	lpc_config, 377
monitor_t	n
MHAParser::monitor_t, 653	MHAJack::client_avg_t, 556
mpo	MHASignal::hilbert_fftw_t, 742
DynComp::dc_afterburn_vars_t, 284	MHASignal::stat_t, 772
mpo_inv	N_ERRNO
DynComp::dc_afterburn_rt_t, 280	MHA_TCP, 89
msg	n_channels
MHA_Error, 415	mha_audio_descriptor_t, 397
mu	n_freqs
MHAFilter::adapt_filter_param_t, 480	mha_audio_descriptor_t, 397
MHAFilter::adapt_filter_t, 483	n_im
mu_beta	MHASignal::fft_t, 741
adm_if_t, 190	n_no_update
multibandcompressor, 123	nlms_t, 818
multibandcompressor.cpp, 1024	prediction_error, 855
• • • • • • • • • • • • • • • • • • • •	n_no_update_
multibandcompressor::fftfb_plug_t, 811	prediction_error_config, 857
bwv, 812	rt_nlms_t, 866
cfv, 812	n_pad1
efv, 812	overlapadd::overlapadd_t, 829
fftfb_plug_t, 812	n_pad2
insert, 812	overlapadd::overlapadd_t, 829
multibandcompressor::interface_t, 813	n_re
algo, 814	MHASignal::fft_t, 741
burn, 814	n_samples
interface_t, 814	mha_audio_descriptor_t, 397
num_channels, 814	n_zero
patchbay, 814	overlapadd::overlapadd_t, 829
plug, 815	NORM_DEFAULT
plug_sigs, 815	nlms_wave.cpp, 1025
prepare, 814	NORM_NONE
process, 814	nlms_wave.cpp, 1025
release, 814	NORM_SUM
update_cfg, 814	nlms_wave.cpp, 1025
multibandcompressor::plugin_signals_t, 815	NORMALIZATION TYPES
apply_gains, 815	nlms_wave.cpp, 1025
gain, 816	NUM ENTR LTASS
plug_level, 816	speechnoise.cpp, 1031
plug_output, 816	NUM ENTR MHAORIG
plugin_signals_t, 815	speechnoise.cpp, 1031
update_levels, 815	NUM_ENTR_OLNOISE
mute	speechnoise.cpp, 1031
MHAJack::port_t, 567	name
MHASignal::loop_wavefragment_t, 745	ac2wave_if_t, 141
mutex	ac2wave t, 143
MHAPlugin_Split::posix_threads_t, 711	acmon::ac_monitor_t, 149
- - · · ·	·

acsave::save_var_t, 164	name_lpc_f
fftfbpow::fftfbpow_interface_t, 311	lpc_bl_predictor, 369
MHA_AC::ac2matrix_helper_t, 382	name_u
MHA_AC::spectrum_t, 393	nlms_t, 818
MHA_AC::waveform_t, 396	name_u_
MHAIOPortAudio::device_info_t, 550	rt_nlms_t, 866
MHAJack::client_avg_t, 556	namelen
MHAJack::client_noncont_t, 559	acsave::mat4head_t, 162
MHAMultiSrc::channel_t, 574	names
MHAParser::entry_t, 622	MHAOvlFilter::scale_var_t, 599
noisePowProposedScale::interface_t, 822	nangle
plugindescription_t, 841	acSteer_config, 168
rmslevel_if_t, 859	steerbf_config, 895
shadowfilter_end::cfg_t, 873	naudiochannels
name_	dc::dc_t, 243
AuditoryProfile::parser_t::fmap_t, 211	nbands
name_b	coherence::cohflt_t, 226
lpc_bl_predictor, 369	combc_t, 231
lpc_bl_predictor_config, 371	dc::dc_t, 243
lpc_burglattice, 373	dc_simple::dc_t, 253
lpc_burglattice_config, 375	dc_simple::level_smoother_t, 258
name_conAC	DynComp::gaintable_t, 288
acConcat_wave, 146	fftfilterbank::fftfb_interface_t, 316
name_d	MHAFilter::thirdoctave_analyzer_t, 535
nlms_t, 818	MHAOvlFilter::fspacing_t, 592
name_d_	nbits
prediction_error_config, 857	calibrator_variables_t, 220
rt_nlms_t, 866	nch
name_e	shadowfilter_begin::cfg_t, 870
nlms_t, 818	shadowfilter_begin::shadowfilter_begin →
prediction_error, 854	_t, 872
name_e_	spec_fader_t, 890
rt_nlms_t, 866	nch_out
name_f	shadowfilter_end::cfg_t, 873
lpc_bl_predictor, 369	nchan
lpc_bl_predictor_config, 370	acSteer_config, 168
lpc_burglattice, 373	steerbf_config, 895
lpc_burglattice_config, 375	timoConfig, 908
nlms_t, 818	nchannels
prediction_error, 854	DynComp::gaintable_t, 288
name_kappa	fftfilterbank::fftfb_interface_t, 316
lpc_bl_predictor, 369	MHAFilter::adapt_filter_state_t, 481
lpc_burglattice, 373	MHAFilter::adapt_filter_t, 483
name_km	MHAFilter::iir_filter_t, 508
lpc_bl_predictor_config, 370	MHAFilter::smoothspec_t, 534
name_lpc	MHAFilter::thirdoctave_analyzer_t, 535
prediction_error, 854	nchannels_file_in
name_lpc_	io_file_t, 338
prediction_error_config, 857	nchannels_in
name_lpc_b	io_file_t, 338
lpc_bl_predictor, 369	io_parser_t, 345

MHAFilter::partitioned_convolution_t, 522 MHAIOPortAudio::io_portaudio_t, 553	nlms_t, 816 algo, 818
MHAJack::client_t, 564	c, 818
MHAPlugin_Resampling::resampling_t,	estimtype, 818
702	lambda_smoothing_power, 818
nchannels_out	n_no_update, 818
fw_t, 324	name_d, 818
io_file_t, 338	name_e, 818
io_parser_t, 345	name_f, 818
MHAFilter::partitioned_convolution_t, 522	name_u, 818
MHAIOPortAudio::io portaudio t, 553	nlms_t, 817
MHAJack::client_t, 564	normtype, 818
MHAPlugin_Resampling::resampling_t,	ntaps, 818
702	patchbay, 818
ndim	prepare, 817
acsave::save_var_t, 164	process, 818
needs_write	•
_	release, 817
MHA_TCP::Connection, 442	rho, 818
neigh	update, 818
acPooling_wave_config, 157	nlms_wave.cpp, 1024
neighbourhood	ESTIM_CUR, 1025
acPooling_wave, 155	ESTIM_PREV, 1025
nelements	ESTIMATION_TYPES, 1025
MHASignal::matrix_t, 756	make_friendly_number_by_limiting, 1025
nested_lock	NORM_DEFAULT, 1025
MHAParser::base_t, 608	NORM_NONE, 1025
newgains	NORM_SUM, 1025
fader_if_t, 305	NORMALIZATION_TYPES, 1025
next	nm
MHAPlugin::cfg_chain_t, 689	lpc_burglattice_config, 375
mha_rt_fifo_element_t, 429	no_iter
next_except_str	prediction_error_config, 857
mha errno.c, 960	rt_nlms_t, 866
next_read_frame_index	noise.cpp, 1025
MHASignal::ringbuffer_t, 762	noise_t, 819
next write frame index	frozennoise_length, 820
MHASignal::ringbuffer_t, 763	lev, 820
nfft	mode, 820
MHASignal::fft_t, 741	noise_t, 820
overlapadd::overlapadd_if_t, 826	—··
shadowfilter end::cfg t, 873	patchbay, 820
	prepare, 820
spec2wave_t, 889	process, 820
wave2spec_if_t, 916	update_cfg, 820
nfft_	noise_type_t
MHAOvIFilter::fspacing_t, 592	speechnoise_t, 891
nframes	noisePow
acsave::save_var_t, 164	noisePowProposedScale::noisePow⊷
nfreq	Proposed, 824
acSteer_config, 168	timoConfig, 909
steerbf_config, 895	noisePow_name
timoConfig, 908	timo_params, 906

timoSmooth, 913	Complex arithmetics in the openMHA, 68
noisePowProposed	MHAOvIFilter::fftfb_vars_t, 587
noisePowProposedScale::noisePow←	normtype
Proposed, 823	nlms_t, 818
noisePowProposedScale, 123	not_in_use
noisePowProposedScale.cpp, 1025	MHAPlugin::cfg_chain_t, 689
POWSPEC_FACTOR, 1026	not_zero
noisePowProposedScale::interface_t, 821	dc_simple, 82
alphaPH1mean, 822	notify
alphaPSD, 822	MHAParser::base_t, 607
interface_t, 822	notify_release
name, 822	io_tcp_t, 362
patchbay, 822	notify_start
prepare, 822	io_tcp_t, 362
process, 822	notify_stop
q, 822	io_tcp_t, 362
update_cfg, 822	now_index
xiOptDb, 822	MHAFilter::polyphase_resampling_t, 529
noisePowProposedScale::noisePowProposed,	•
823	spec2wave_t, 888
alphaPH1mean_, 824	wave2spec_t, 918
alphaPSD_, 824	npad2
estimateDebug, 824	spec2wave_t, 889
frameno, 824	wave2spec_t, 918
GLRDebug, 824	nrefmic
GLRexp, 824	acSteer, 167
inputPow, 824	acSteer_config, 168
inputSpec, 824	nrep
insert, 823	MHAJack::client_avg_t, 556 nsteerchan
logGLRFact, 824	
noisePow, 824	acSteer, 167
noisePowProposed, 823 noisyPer, 824	acSteer_config, 168
PH1Debug, 824	ntaps MHAFilter::adapt_filter_state_t, 481
PH1mean, 824	MHAFilter::adapt_filter_t, 483
priorFact, 824	nlms_t, 818
process, 823	prediction_error, 854
snrPost1Debug, 824	prediction_error_config, 856
xiOpt, 824	rt_nlms_t, 865
noisyPer	ntoh
noisePowProposedScale::noisePow←	io_tcp_sound_t, 357
Proposed, 824	ntracks
non_empty_partitions	shadowfilter_begin::cfg_t, 870
MHAFilter::transfer_function_t, 537	shadowfilter_begin::shadowfilter_begin
MHAFilter::transfer_matrix_t, 539	_t, 872
nondefault_labels	shadowfilter_end::cfg_t, 873
altplugs_t, 202	null data
norm	mha_drifter_fifo_t, 412
lpc, 366	num AC
lpc_config, 376	acConcat_wave, 146
normalize	num_adms

adm_rtconfig_t, 192	wave2spec_t, 918
num_brackets	nyquist_ratio
MHAParser::StrCnv, 109	MHAPlugin_Resampling::resampling_if
num_channels	_t, 700
calibrator_variables_t, 220	-
DynComp::gaintable_t, 288	o1_ar_filter_t
MHAFilter::blockprocessing_polyphase←	MHAFilter::o1_ar_filter_t, 512
_resampling_t, 485	o1_lp_coeffs
mha_spec_t, 433	MHAFilter, 92
_ · _	o1flt_lowpass_t
mha_wave_t, 463	MHAFilter::o1flt_lowpass_t, 516
multibandcompressor::interface_t, 814	o1flt_maxtrack_t
num_entries	MHAFilter::o1flt_maxtrack_t, 518
ac2lsl::save_var_t< mha_complex_t >,	o1flt_mintrack_t
135	MHAFilter::o1flt_mintrack_t, 520
comm_var_t, 232	OVERLAP FACTOR
testplugin::ac_parser_t, 897	timoconfig.cpp, 1036
num_F	observe
DynComp::gaintable_t, 288	MHA_TCP::Event_Watcher, 445
num_frames	observed_by
mha_spec_t, 433	MHA TCP::Wakeup Event, 460
mha_wave_t, 463	observers
num_inchannels	
io_tcp_sound_t, 358	MHA_TCP::Wakeup_Event, 461
num_L	od
	MHAFilter::adapt_filter_state_t, 481
num outchannels	offset
io_tcp_sound_t, 359	acTransform_wave_config, 172
num_xruns	ola1
MHAJack::client_t, 564	overlapadd::overlapadd_t, 828
numDevices	ola2
	overlapadd::overlapadd_t, 828
MHAIOPortAudio::device_info_t, 550	ola_powspec_scale
numSamples_AC	timoConfig, 908
acConcat_wave_config, 147	old_algos
numbytes	mhachain::chain_base_t, 465
MHASignal::matrix_t, 755	olnoise
MHASignal::uint_vector_t, 777	speechnoise_t, 891
numchannels	on_model_param_valuechanged
addsndfile::addsndfile_if_t, 175	timoSmooth, 912
numsamples	on_prereadaccess
acPooling_wave, 155	example3 t, 296
acTransform_wave, 171	example4_t, 300
nupsample	on_scale_ch_readaccess
doasvm_feature_extraction, 271	example3_t, 296
nvars	example4_t, 300
acsave::cfg_t, 162	on_scale_ch_valuechanged
nwnd	example3_t, 296
overlapadd::overlapadd_if_t, 826	· —
	example4_t, 300
wave2spec_if_t, 916	on_scale_ch_writeaccess
wave2spec_t, 918	example3_t, 296
nwndshift	example4_t, 300
spec2wave_t, 889	ор

NALIA D	
MHAParser::expression_t, 623	MHAEvents::emitter_t, 477
op_query	MHAFilter::gamma_flt_t, 502, 503
MHAParser::base_t, 604	MHAFilter::iir_ord1_real_t, 510
MHAParser::c_ifc_parser_t, 615	MHAFilter::o1_ar_filter_t, 513, 514
MHAParser::monitor_t, 653	MHASignal::hilbert_t, 743
MHAParser::parser_t, 657	MHASignal::matrix_t, 753-755
op_setval	MHASignal::minphase_t, 757
MHAParser::base_t, 604	MHASignal::quantizer_t, 759
MHAParser::bool_t, 613	MHASignal::spectrum_t, 769
MHAParser::c_ifc_parser_t, 615	MHASignal::waveform_t, 781, 782
MHAParser::complex_t, 621	MHAWindow::base_t, 802
MHAParser::float_t, 627	operator+
MHAParser::int_t, 632	Complex arithmetics in the openMHA, 64
MHAParser::kw_t, 637	operator+=
MHAParser::mcomplex_t, 641	Complex arithmetics in the openMHA, 64
MHAParser::mfloat_t, 645	Vector and matrix processing toolbox, 53,
MHAParser::parser_t, 657	54
MHAParser::string_t, 665	operator-
MHAParser::variable_t, 667	Complex arithmetics in the openMHA, 64,
MHAParser::vcomplex_t, 672	65, 67
MHAParser::vfloat_t, 676	operator-=
MHAParser::vint_t, 680	Complex arithmetics in the openMHA, 64
MHAParser::vstring_t, 684	Vector and matrix processing toolbox, 53
op_subparse	operator/
MHAParser::base_t, 604	Complex arithmetics in the openMHA, 66,
MHAParser::c_ifc_parser_t, 615	67
MHAParser::parser_t, 657	operator/=
opact_map_t	Complex arithmetics in the openMHA, 66
MHAParser, 107	Vector and matrix processing toolbox, 54
opact_t	
NALIA D 4 0 7	operator=
MHAParser, 107	MHA_AC::acspace2matrix_t, 386
operator!=	MHA_AC::acspace2matrix_t, 386 MHA_Error, 414
operator!= Complex arithmetics in the openMHA, 67	MHA_AC::acspace2matrix_t, 386 MHA_Error, 414 MHAPlugin_Split::domain_handler_t, 704
operator!= Complex arithmetics in the openMHA, 67 operator<	MHA_AC::acspace2matrix_t, 386 MHA_Error, 414 MHAPlugin_Split::domain_handler_t, 704 MHAPlugin_Split::splitted_part_t, 720
operator!= Complex arithmetics in the openMHA, 67 operator< Complex arithmetics in the openMHA, 68	MHA_AC::acspace2matrix_t, 386 MHA_Error, 414 MHAPlugin_Split::domain_handler_t, 704 MHAPlugin_Split::splitted_part_t, 720 MHAPlugin_Split::thread_platform_t, 724
operator!= Complex arithmetics in the openMHA, 67 operator< Complex arithmetics in the openMHA, 68 operator<<	MHA_AC::acspace2matrix_t, 386 MHA_Error, 414 MHAPlugin_Split::domain_handler_t, 704 MHAPlugin_Split::splitted_part_t, 720 MHAPlugin_Split::thread_platform_t, 724 MHASignal::matrix_t, 751
operator!= Complex arithmetics in the openMHA, 67 operator< Complex arithmetics in the openMHA, 68 operator<< mha_signal.hh, 995	MHA_AC::acspace2matrix_t, 386 MHA_Error, 414 MHAPlugin_Split::domain_handler_t, 704 MHAPlugin_Split::splitted_part_t, 720 MHAPlugin_Split::thread_platform_t, 724 MHASignal::matrix_t, 751 MHASignal::uint_vector_t, 776
operator!= Complex arithmetics in the openMHA, 67 operator< Complex arithmetics in the openMHA, 68 operator<< mha_signal.hh, 995 operator>>	MHA_AC::acspace2matrix_t, 386 MHA_Error, 414 MHAPlugin_Split::domain_handler_t, 704 MHAPlugin_Split::splitted_part_t, 720 MHAPlugin_Split::thread_platform_t, 724 MHASignal::matrix_t, 751 MHASignal::uint_vector_t, 776 MHASignal::waveform_t, 781
operator!= Complex arithmetics in the openMHA, 67 operator< Complex arithmetics in the openMHA, 68 operator<< mha_signal.hh, 995 operator>> mha_signal.hh, 995	MHA_AC::acspace2matrix_t, 386 MHA_Error, 414 MHAPlugin_Split::domain_handler_t, 704 MHAPlugin_Split::splitted_part_t, 720 MHAPlugin_Split::thread_platform_t, 724 MHASignal::matrix_t, 751 MHASignal::uint_vector_t, 776 MHASignal::waveform_t, 781 mha_fifo_t, 423
operator!= Complex arithmetics in the openMHA, 67 operator< Complex arithmetics in the openMHA, 68 operator<< mha_signal.hh, 995 operator>> mha_signal.hh, 995 operator*	MHA_AC::acspace2matrix_t, 386 MHA_Error, 414 MHAPlugin_Split::domain_handler_t, 704 MHAPlugin_Split::splitted_part_t, 720 MHAPlugin_Split::thread_platform_t, 724 MHASignal::matrix_t, 751 MHASignal::uint_vector_t, 776 MHASignal::waveform_t, 781 mha_fifo_t, 423 mha_fifo_thread_platform_t, 428
operator!= Complex arithmetics in the openMHA, 67 operator< Complex arithmetics in the openMHA, 68 operator<< mha_signal.hh, 995 operator>> mha_signal.hh, 995 operator* Complex arithmetics in the openMHA, 65,	MHA_AC::acspace2matrix_t, 386 MHA_Error, 414 MHAPlugin_Split::domain_handler_t, 704 MHAPlugin_Split::splitted_part_t, 720 MHAPlugin_Split::thread_platform_t, 724 MHASignal::matrix_t, 751 MHASignal::uint_vector_t, 776 MHASignal::waveform_t, 781 mha_fifo_t, 423 mha_fifo_thread_platform_t, 428 operator==
operator!= Complex arithmetics in the openMHA, 67 operator< Complex arithmetics in the openMHA, 68 operator<< mha_signal.hh, 995 operator>> mha_signal.hh, 995 operator* Complex arithmetics in the openMHA, 65, 66	MHA_AC::acspace2matrix_t, 386 MHA_Error, 414 MHAPlugin_Split::domain_handler_t, 704 MHAPlugin_Split::splitted_part_t, 720 MHAPlugin_Split::thread_platform_t, 724 MHASignal::matrix_t, 751 MHASignal::uint_vector_t, 776 MHASignal::waveform_t, 781 mha_fifo_t, 423 mha_fifo_thread_platform_t, 428 operator== Complex arithmetics in the openMHA, 67
operator!= Complex arithmetics in the openMHA, 67 operator< Complex arithmetics in the openMHA, 68 operator<< mha_signal.hh, 995 operator>> mha_signal.hh, 995 operator* Complex arithmetics in the openMHA, 65, 66 operator*=	MHA_AC::acspace2matrix_t, 386 MHA_Error, 414 MHAPlugin_Split::domain_handler_t, 704 MHAPlugin_Split::splitted_part_t, 720 MHAPlugin_Split::thread_platform_t, 724 MHASignal::matrix_t, 751 MHASignal::uint_vector_t, 776 MHASignal::waveform_t, 781 mha_fifo_t, 423 mha_fifo_thread_platform_t, 428 operator== Complex arithmetics in the openMHA, 67 MHASignal::uint_vector_t, 776
operator!= Complex arithmetics in the openMHA, 67 operator< Complex arithmetics in the openMHA, 68 operator<< mha_signal.hh, 995 operator>> mha_signal.hh, 995 operator* Complex arithmetics in the openMHA, 65, 66 operator*= Complex arithmetics in the openMHA, 65	MHA_AC::acspace2matrix_t, 386 MHA_Error, 414 MHAPlugin_Split::domain_handler_t, 704 MHAPlugin_Split::splitted_part_t, 720 MHAPlugin_Split::thread_platform_t, 724 MHASignal::matrix_t, 751 MHASignal::uint_vector_t, 776 MHASignal::waveform_t, 781 mha_fifo_t, 423 mha_fifo_thread_platform_t, 428 operator== Complex arithmetics in the openMHA, 67 MHASignal::uint_vector_t, 776 operator[]
operator!= Complex arithmetics in the openMHA, 67 operator< Complex arithmetics in the openMHA, 68 operator<< mha_signal.hh, 995 operator>> mha_signal.hh, 995 operator* Complex arithmetics in the openMHA, 65, 66 operator*= Complex arithmetics in the openMHA, 65 Vector and matrix processing toolbox, 53,	MHA_AC::acspace2matrix_t, 386 MHA_Error, 414 MHAPlugin_Split::domain_handler_t, 704 MHAPlugin_Split::splitted_part_t, 720 MHAPlugin_Split::thread_platform_t, 724 MHASignal::matrix_t, 751 MHASignal::uint_vector_t, 776 MHASignal::waveform_t, 781 mha_fifo_t, 423 mha_fifo_thread_platform_t, 428 operator== Complex arithmetics in the openMHA, 67 MHASignal::uint_vector_t, 776 operator[] MHA_AC::acspace2matrix_t, 386
operator!= Complex arithmetics in the openMHA, 67 operator< Complex arithmetics in the openMHA, 68 operator<< mha_signal.hh, 995 operator>> mha_signal.hh, 995 operator* Complex arithmetics in the openMHA, 65, 66 operator*= Complex arithmetics in the openMHA, 65 Vector and matrix processing toolbox, 53, 54	MHA_AC::acspace2matrix_t, 386 MHA_Error, 414 MHAPlugin_Split::domain_handler_t, 704 MHAPlugin_Split::splitted_part_t, 720 MHAPlugin_Split::thread_platform_t, 724 MHASignal::matrix_t, 751 MHASignal::uint_vector_t, 776 MHASignal::waveform_t, 781 mha_fifo_t, 423 mha_fifo_thread_platform_t, 428 operator== Complex arithmetics in the openMHA, 67 MHASignal::uint_vector_t, 776 operator[] MHA_AC::acspace2matrix_t, 386 MHASignal::spectrum_t, 769
operator!= Complex arithmetics in the openMHA, 67 operator< Complex arithmetics in the openMHA, 68 operator<< mha_signal.hh, 995 operator>> mha_signal.hh, 995 operator* Complex arithmetics in the openMHA, 65, 66 operator*= Complex arithmetics in the openMHA, 65 Vector and matrix processing toolbox, 53, 54 operator^=	MHA_AC::acspace2matrix_t, 386 MHA_Error, 414 MHAPlugin_Split::domain_handler_t, 704 MHAPlugin_Split::splitted_part_t, 720 MHAPlugin_Split::thread_platform_t, 724 MHASignal::matrix_t, 751 MHASignal::uint_vector_t, 776 MHASignal::waveform_t, 781 mha_fifo_t, 423 mha_fifo_thread_platform_t, 428 operator== Complex arithmetics in the openMHA, 67 MHASignal::uint_vector_t, 776 operator[] MHA_AC::acspace2matrix_t, 386 MHASignal::spectrum_t, 769 MHASignal::uint_vector_t, 777
operator!= Complex arithmetics in the openMHA, 67 operator< Complex arithmetics in the openMHA, 68 operator<< mha_signal.hh, 995 operator>> mha_signal.hh, 995 operator* Complex arithmetics in the openMHA, 65, 66 operator*= Complex arithmetics in the openMHA, 65 Vector and matrix processing toolbox, 53, 54 operator^= Vector and matrix processing toolbox, 55	MHA_AC::acspace2matrix_t, 386 MHA_Error, 414 MHAPlugin_Split::domain_handler_t, 704 MHAPlugin_Split::splitted_part_t, 720 MHAPlugin_Split::thread_platform_t, 724 MHASignal::matrix_t, 751 MHASignal::uint_vector_t, 776 MHASignal::waveform_t, 781 mha_fifo_t, 423 mha_fifo_thread_platform_t, 428 operator== Complex arithmetics in the openMHA, 67 MHASignal::uint_vector_t, 776 operator[] MHA_AC::acspace2matrix_t, 386 MHASignal::spectrum_t, 769 MHASignal::uint_vector_t, 777 MHASignal::waveform_t, 781
operator!= Complex arithmetics in the openMHA, 67 operator< Complex arithmetics in the openMHA, 68 operator<< mha_signal.hh, 995 operator>> mha_signal.hh, 995 operator* Complex arithmetics in the openMHA, 65, 66 operator*= Complex arithmetics in the openMHA, 65 Vector and matrix processing toolbox, 53, 54 operator^= Vector and matrix processing toolbox, 55 operator()	MHA_AC::acspace2matrix_t, 386 MHA_Error, 414 MHAPlugin_Split::domain_handler_t, 704 MHAPlugin_Split::splitted_part_t, 720 MHAPlugin_Split::thread_platform_t, 724 MHASignal::matrix_t, 751 MHASignal::uint_vector_t, 776 MHASignal::waveform_t, 781 mha_fifo_t, 423 mha_fifo_thread_platform_t, 428 operator== Complex arithmetics in the openMHA, 67 MHASignal::uint_vector_t, 776 operator[] MHA_AC::acspace2matrix_t, 386 MHASignal::spectrum_t, 769 MHASignal::uint_vector_t, 777 MHASignal::waveform_t, 781 operators
operator!= Complex arithmetics in the openMHA, 67 operator< Complex arithmetics in the openMHA, 68 operator<< mha_signal.hh, 995 operator>> mha_signal.hh, 995 operator* Complex arithmetics in the openMHA, 65, 66 operator*= Complex arithmetics in the openMHA, 65 Vector and matrix processing toolbox, 53, 54 operator^= Vector and matrix processing toolbox, 55	MHA_AC::acspace2matrix_t, 386 MHA_Error, 414 MHAPlugin_Split::domain_handler_t, 704 MHAPlugin_Split::splitted_part_t, 720 MHAPlugin_Split::thread_platform_t, 724 MHASignal::matrix_t, 751 MHASignal::uint_vector_t, 776 MHASignal::waveform_t, 781 mha_fifo_t, 423 mha_fifo_thread_platform_t, 428 operator== Complex arithmetics in the openMHA, 67 MHASignal::uint_vector_t, 776 operator[] MHA_AC::acspace2matrix_t, 386 MHASignal::spectrum_t, 769 MHASignal::uint_vector_t, 777 MHASignal::waveform_t, 781

MHAParser::base_t, 607	output
order	io_parser_t, 345
lpc_config, 376	MHAJack::port_t, 566
origname	mha_dblbuf_t, 404
PluginLoader::config_file_splitter_t, 843	output_cfg
os_event	MHAPlugin::plugin_t, 698
MHA_TCP::Wakeup_Event, 461	output_cfg_
os_event_valid	MHAPlugin::plugin_t, 698
MHA_TCP::Wakeup_Event, 461	output_channels
out	mha_dblbuf_t, 405
adm_if_t, 190	output_domain
delaysum::delaysum_t, 264	PluginLoader::mhapluginloader_t, 849
out_buf	output_fifo
overlapadd::overlapadd_t, 829	mha_dblbuf_t, 405
spec2wave_t, 889	output_partitions
out_chunk	MHAFilter::partitioned_convolution_t, 522
MHAFilter::thirdoctave_analyzer_t, 536	output_portnames
out_chunk_im	MHAJack::client_t, 565
MHAFilter::thirdoctave_analyzer_t, 536	output_sample_format
out_spec	io_file_t, 338
shadowfilter_begin::cfg_t, 870	output_signal
shadowfilter_end::cfg_t, 873	MHAPlugin_Resampling::resampling_t,
outSpec	702
steerbf_config, 895	output_signal_spec
outbuf	MHAFilter::partitioned_convolution_t, 523
MHA_TCP::Connection, 443	output_signal_wave
outch	MHAFilter::partitioned_convolution_t, 523
MHAJack::client_t, 565 outchannels	output_spec
	testplugin::signal_parser_t, 902
combc_if_t, 230 outer2inner_resampling	output_wave testplugin::signal_parser_t, 902
MHAPlugin_Resampling::resampling_t,	outputchannels
702	MHAFilter::fftfilterbank t, 496
outer_ac	overlap_save_filterbank_analytic_t
analysepath t, 204	MHAOvlFilter::overlap save filterbank ←
outer_ac_copy	analytic_t, 594
analysepath_t, 204	overlap_save_filterbank_t
outer_error	MHAOvlFilter::overlap_save_filterbank_t,
mha_dblbuf_t, 406	596
outer_fragsize	overlapadd, 123
MHAPlugin_Resampling::resampling_t,	overlapadd.cpp, 1026
701	overlapadd::overlapadd_if_t, 825
outer_out	~overlapadd_if_t, 826
MHASignal::doublebuffer_t, 738	algo, 827
outer_process	cf_in, 827
MHASignal::doublebuffer_t, 737	cf_out, 827
outer_size	nfft, 826
mha_dblbuf_t, 405	nwnd, 826
outer_srate	overlapadd_if_t, 826
MHAPlugin_Resampling::resampling_t,	patchbay, 826
702	plugloader, 827

postscale, 827	p_max
prepare, 826	acPooling_wave_config, 157
prescale, 827	doasym classification config. 268
process, 826	p_name
release, 826	acPooling_wave, 155
update, 826	doasym_classification, 267
window, 827	p_parser
wndexp, 827	acmon::ac_monitor_t, 150
wndpos, 827	PATCH VAR
zerowindow, 827	acConcat_wave.cpp, 927
overlapadd::overlapadd_t, 827	acPooling wave.cpp, 928
~overlapadd_t, 828	acSteer.cpp, 929
calc_out, 829	acTransform_wave.cpp, 930
fft, 828	
n_pad1, 829	doasym_classification.cpp, 939
n pad2, 829	doasvm_feature_extraction.cpp, 939
n_zero, 829	lpc.cpp, 948
ola1, 828	lpc_bl_predictor.cpp, 948
ola2, 828	lpc_burg-lattice.cpp, 949
out_buf, 829	prediction_error.cpp, 1027
overlapadd_t, 828	steerbf.cpp, 1035
postwnd, 828	timoSmooth.cpp, 1037
prewnd, 828	PH1Debug
spec_in, 829	noisePowProposedScale::noisePow
• –	Proposed, 824
wave_in1, 828	PH1mean
wave_out1, 829	noisePowProposedScale::noisePow←
write_buf, 829	Proposed, 824
overlapadd_if_t	POWSPEC_FACTOR
overlapadd::overlapadd_if_t, 826	noisePowProposedScale.cpp, 1026
smoothgains_bridge::overlapadd_if_←	timoconfig.cpp, 1036
t, 879	PREPARED
overlapadd_t	MHA_TCP::Thread, 454
overlapadd::overlapadd_t, 828	pa22dbspl
ovltype	Vector and matrix processing toolbox, 43
MHAOvlFilter::fftfb_vars_t, 586	pa2dbspl
oy	Vector and matrix processing toolbox, 42
MHAFilter::adapt_filter_state_t, 481	params
n	timoConfig, 908
p acPooling_wave_config, 157	parent
	MHAParser::base_t, 608
doasym_classification_config, 268	parent_
pluginbrowser_t, 840	MHAParser::mhapluginloader_t, 650
p1	
MHASignal::hilbert_fftw_t, 742	parse
p2	altplugs_t, 201
MHASignal::hilbert_fftw_t, 742	io_tcp_t, 362
P_Sum	MHAParser::base_t, 603, 604
rt_nlms_t, 866	MHAPlugin_Split::splitted_part_t, 720
p_biased	PluginLoader::fourway_processor_t, 846
acPooling_wave_config, 157	PluginLoader::mhapluginloader_t, 848
p_biased_name	parse_1_complex
acPooling_wave, 155	mha_parser.cpp, 975

parse_1_float	example4_t, 301
mha_parser.cpp, 975	example6_t, 303
parser	fader_if_t, 305
io_tcp_t, 362	fader wave::fader wave if t, 307
mhachain::plugs_t, 468	fftfbpow::fftfbpow_interface_t, 311
parser_int_dyn, 830	fftfilterbank::fftfb interface t, 316
parser_int_dyn, 830	frequency_translator_t, 319
set_max_angle_ind, 831	fw_t, 325
parser_plugs	gain::gain_if_t, 328
altplugs_t, 202	io_parser_t, 345
parser_t	lpc, 366
AuditoryProfile::parser_t, 209	lpc_bl_predictor, 369
MHAParser::parser_t, 655	lpc_burglattice, 373
parserFriendlyName	MHAIOJack::io_jack_t, 543
•	
MHAIOPortAudio, 95	MHAIOJackdb::io_jack_t, 548
parsername	MHAIOPortAudio::io_portaudio_t, 553
latex_doc_t, 363	MHAPlugin_Split::split_t, 716
parserstate	matrixmixer::matmix_t, 380
fw_t, 324	mhachain::chain_base_t, 465
partitioned_convolution_t	multibandcompressor::interface_t, 814
MHAFilter::partitioned_convolution_t, 521	nlms_t, 818
partitions	noise_t, 820
MHAFilter::transfer_function_t, 537	noisePowProposedScale::interface_t, 822
MHAFilter::transfer_matrix_t, 539	overlapadd::overlapadd_if_t, 826
patchbay	plingploing::if_t, 833
ac2lsl::ac2lsl_t, 129	plugin_interface_t, 839
ac2osc_t, 139	prediction_error, 855
ac2wave_if_t, 141	route::interface_t, 862
acConcat_wave, 146	sine_t, 878
acPooling_wave, 155	smoothgains_bridge::overlapadd_if_←
acSteer, 167	t, 880
acTransform_wave, 171	softclip_t, 883
acmon::acmon_t, 152	spec2wave_if_t, 887
acsave::acsave_t, 160	steerbf, 894
addsndfile::addsndfile_if_t, 175	testplugin::ac_parser_t, 897
— — ·	testplugin::dc_parser_t, 097
adm_if_t, 190	. • = -
altplugs_t, 202	timoSmooth, 913
analysispath_if_t, 206	wave2spec_if_t, 916
AuditoryProfile::parser_t::fmap_t, 211	wavrec_t, 921
calibrator_t, 219	windowselector_t, 925
coherence::cohflt_if_t, 224	path
db_if_t, 237	addsndfile::addsndfile_if_t, 175
dc::dc_if_t, 240	peak
dc::wideband_inhib_vars_t, 249	MHASignal::loop_wavefragment_t, 745
dc_simple::dc_if_t, 251	rmslevel_t, 860
delay::interface_t, 260	peak_db
delaysum::delaysum_if_t, 263	rmslevel_t, 860
doasvm_classification, 267	peaklevel
doasvm_feature_extraction, 271	calibrator_variables_t, 220
DynComp::dc_afterburn_t, 282	MHASignal::async_rmslevel_t, 731
example3_t, 297	mha_channel_info_t, 399
· —	·

peer_addr	plan_spec2analytic
MHA_TCP::Connection, 443	hilbert_shifter_t, 332
peer_address	plateau
io_tcp_parser_t, 354	MHAOvlFilter::fftfb_vars_t, 586
peer_port	playback
io_tcp_parser_t, 355	MHASignal::loop_wavefragment_t, 746
period	747
droptect_t, 275	playback_channels
pfragmentsize	MHASignal::loop_wavefragment_t, 747
fw vars t, 326	playback_mode_t
phase	MHASignal::loop_wavefragment_t, 745
cpuload_t, 235	plingploing, 124
MHASignal::minphase_t, 758	drand, 124
phase_correction	plingploing.cpp, 1026
MHAFilter::gamma_flt_t, 503	plingploing::if_t, 831
phase_div_2pi	bassmod, 833
sine_t, 878	bassperiod, 834
phase_gains	bpm, 833
MHASignal::subsample_delay_t, 774	fun1 key, 833
phase_increment_div_2pi	fun1_range, 833
sine_cfg_t, 876	fun2_key, 833
phasemode	fun2_range, 833
frequency_translator_t, 319	if_t, 832
phasemodel	level, 833
MHAOvlFilter::overlap_save_filterbank_	maxlen, 833
t::vars_t, 597	minlen, 833
phi	patchbay, 833
hilbert_shifter_t, 332	pitch, 833
PI	prepare, 832
ADM, 80	process, 832
hann.cpp, 946	update, 832
pid_mon	plingploing::plingploing_t, 834
mhaserver_t, 729	alph, 836
pinchannels	bass, 835
fw vars t, 326	bassmod_, 836
pink	bassperiod_, 836
speechnoise_t, 891	bt, 835
pipe	cf, 835
MHA_TCP::Async_Notify, 435	dist, 836
pitch	dist1, 836
plingploing::if_t, 833	dur_, 835
pitch	freq, 835
. –	•
plingploing::plingploing_t, 835	fun1, 836
pitch_set_first	fun1_key, 836
timoConfig, 909	fun1_range, 836
pitch_set_first_AC	fun2, 836
timo_AC, 904	fun2_key, 836
pitch_set_last	fun2_range, 836
timoConfig, 909	hann1, 836
pitch_set_last_AC	hann2, 836
timo_AC, 904	len, 835

level, 836	815
maxlen_, 835	plugin_t
minlen_, 835	MHAPlugin::plugin_t, 696
pitch_, 835	PluginLoader, 124
plingploing_t, 835	mhaconfig_compare, 125
process, 835	mhastrdomain, 125
rms, 836	PluginLoader::config_file_splitter_t, 842
t, 835	config_file_splitter_t, 842
plingploing_t	configfile, 843
plingploing::plingploing_t, 835	configname, 843
plug	get_configfile, 843
analysispath_if_t, 206	get_configname, 842
MHAParser::mhapluginloader_t, 650	get_libname, 843
MHAPlugin_Split::splitted_part_t, 721	get_origname, 843
multibandcompressor::interface_t, 721	libname, 843
testplugin::if_t, 901	origname, 843
	PluginLoader::fourway_processor_t, 843
plug_level	~fourway_processor_t, 844
multibandcompressor::plugin_signals_t, 816	· — ·
	parse, 846
plug_output	prepare, 846
multibandcompressor::plugin_signals_t,	process, 844, 845
816	release, 846
plug_sigs	PluginLoader::mhapluginloader_t, 846
multibandcompressor::interface_t, 815	~mhapluginloader_t, 848
plug_t, 836	ac, 850
~plug_t, 837	b_check_version, 851
get_ac, 837	b_is_prepared, 851
get_handle, 837	cf_input, 851
get_process_spec, 837	cf_output, 851
get_process_wave, 837	get_categories, 850
plug_t, 837	get_documentation, 850
plugin_categories	getfullname, 849
PluginLoader::mhapluginloader_t, 851	has_parser, 849
plugin_documentation	has_process, 849
PluginLoader::mhapluginloader_t, 851	input_domain, 849
plugin_extension	is_prepared, 850
pluginbrowser_t, 840	lib_data, 850
plugin_interface_t, 838	lib_err, 850
factor, 839	lib_handle, 850
patchbay, 839	MHADestroy_cb, 850
plugin_interface_t, 839	MHAGetVersion_cb, 850
prepare, 839	MHAInit_cb, 850
process, 839	MHAPrepare_cb, 850
scale_ch, 839	MHAProc_spec2spec_cb, 850
update_cfg, 839	MHAProc_spec2wave_cb, 851
plugin_macro	MHAProc_wave2spec_cb, 850
latex_doc_t, 364	MHAProc_wave2wave_cb, 850
plugin_paths	MHARelease_cb, 850
fw_t, 324	MHASet_cb, 851
plugin_signals_t	MHAStrError_cb, 851
multibandcompressor::plugin_signals_t,	mha_test_struct_size, 850
	<u> </u>

mhapluginloader_t, 848 output_domain, 849 parse, 848	overlapadd::overlapadd_if_t, 827 smoothgains_bridge::overlapadd_if_← t, 880
plugin_categories, 851	plugname
plugin_documentation, 851	latex_doc_t, 364
prepare, 849	MHAParser::mhapluginloader_t, 650
process, 849	plugname_name_
release, 849	MHAParser::mhapluginloader_t, 650
resolve_and_init, 850	plugs
test error, 850	altplugs_t, 202
test version, 850	plugs_t
pluginbrowser.cpp, 1027	mhachain::plugs_t, 468
pluginbrowser.h, 1027	pmode
pluginbrowser_t, 839	calibrator_runtime_layer_t, 217
add_plugin, 840	poll
add_plugins, 840	mha_rt_fifo_t, 431
clear_plugins, 840	poll_1
get_paths, 840	mha_rt_fifo_t, 431
get plugins, 840	poll_config
library_paths, 840	MHAPlugin::config_t, 692
p, 840	polyphase_resampling_t
plugin_extension, 840	MHAFilter::polyphase_resampling_t, 527
pluginbrowser_t, 840	pool
plugins, 840	acPooling_wave_config, 157
scan_plugin, 840	pool_name
scan_plugins, 840	acPooling_wave, 155
plugindescription_t, 841	pooling_ind
categories, 841	acPooling_wave_config, 157
documentation, 841	pooling_option
fullname, 841	acPooling_wave_config, 157
name, 841	pooling_size
queries, 841	acPooling_wave_config, 157
query_cmds, 841	pooling_type
spec2spec, 841	acPooling_wave, 155
spec2wave, 841	pooling_wndlen
wave2spec, 841	acPooling_wave, 155
wave2wave, 841	port
pluginloader_t, 851	ac2osc t, 138
~pluginloader_t, 852	MHA_TCP::Server, 449
pluginloader_t, 852	MHAJack::port_t, 568
plugins	mhaserver_t, 729
fw_t, 324	port_t
pluginbrowser_t, 840	MHAJack::port_t, 566, 567
plugloader	portaudio_callback
bbcalib_interface_t, 215	MHAIOPortAudio.cpp, 1014, 1015
db_if_t, 237	MHAIOPortAudio::io_portaudio_t, 553
db_t, 238	portaudio_stream
MHAPlugin_Resampling::resampling_if←	MHAIOPortAudio::io_portaudio_t, 553
_t, 700	portnames_in
, 700 MHAPlugin_Resampling::resampling_t,	MHAIOJack::io_jack_t, 543
702	MHAIOJackdb::io_jack_t, 547

portnames_out	~prediction_error, 853
MHAIOJack::io_jack_t, 543	c, 854
MHAIOJackdb::io_jack_t, 547	delay_d, 855
ports_in_all	delay_w, 855
MHAIOJack::io_jack_t, 543	gains, 854
MHAIOJackdb::io_jack_t, 548	lpc_order, 855
ports_in_physical	n_no_update, 855
MHAIOJack::io_jack_t, 543	name_e, 854
MHAIOJackdb::io jack t, 548	name_f, 854
ports_out_all	name_lpc, 854
MHAIOJack::io_jack_t, 543	ntaps, 854
MHAIOJackdb::io_jack_t, 548	patchbay, 855
ports_out_physical	pred_err_delay, 855
. – – •	. – – •
MHAIOJack::io_jack_t, 543	prediction_error, 853
MHAIOJackdb::io_jack_t, 548	prepare, 854
ports_parser	process, 854
MHAIOJack::io_jack_t, 543	release, 854
MHAIOJackdb::io_jack_t, 548	rho, 854
pos	update_cfg, 854
addsndfile::level_adapt_t, 177	prediction_error.cpp, 1027
cfg_t, 222	INSERT_PATCH, 1027
fader_wave::level_adapt_t, 309	make_friendly_number_by_limiting, 1027
MHAJack::client_avg_t, 556	PATCH_VAR, 1027
MHAJack::client_noncont_t, 558	prediction_error.h, 1027
MHASignal::async_rmslevel_t, 731	prediction_error_config, 855
MHASignal::delay_spec_t, 732	~prediction_error_config, 856
MHASignal::delay_t, 734	ac, 856
MHASignal::delay_wave_t, 735	channels, 857
MHASignal::loop_wavefragment_t, 747	EPrew, 858
posix_threads_t	F, 857
MHAPlugin_Split::posix_threads_t, 710	F_Uflt, 857
posixthreads	frames, 856
split.cpp, 1034	insert, 856
postscale	iter, 857
overlapadd::overlapadd_if_t, 827	n_no_update_, 857
postwindow	name_d_, 857
spec2wave_t, 889	name_lpc_, 857
postwnd	no_iter, 857
overlapadd::overlapadd_t, 828	ntaps, 856
powSpec	prediction_error_config, 856
timoConfig, 909	process, 856
power	Pu, 857
MHASignal::waveform_t, 786	s_E_pred_err_delay, 857
powersum	s LPC, 857
dc::dc_t, 242	s_U_delay, 857
dc::dc_vars_t, 244	s_U_delayflt, 857
powspec	s_Usmpl, 858
MHASignal::waveform_t, 787	s_Wflt, 857
pred_err_delay	s_Y_delay, 857
prediction_error, 855	s_Y_delayfit, 857
prediction_error, 852	s_E, 857
•	_ ;

s_U, 857	frequency_translator_t, 319
s_W, 857	fw_t, 322
smpl, 858	gain::gain_if_t, 328
UPrew, 858	identity t, 334
UPrewW, 858	io_file_t, 337
UbufferPrew, 857	io_lib_t, 341
v G, 857	io_parser_t, 344
YPrew, 858	io_tcp_sound_t, 357
prefix	io_tcp_t, 361
wavrec_t, 921	lpc, 365
prefix_	lpc_bl_predictor, 368
MHAParser::mhapluginloader_t, 650	lpc_burglattice, 373
	• — •
prefix_names_AC	MHAIOJack::io_jack_t, 541
acConcat_wave, 146	MHAIOJackdb::io_jack_t, 546
prepare	MHAJack::client_t, 561, 562
ac2lsl::ac2lsl_t, 128	MHAParser::mhapluginloader_t, 649
ac2osc_t, 138	MHAPlugin::plugin_t, 696
ac2wave_if_t, 141	MHAPlugin_Resampling::resampling_if←
acConcat_wave, 144	_t, 700
acPooling_wave, 154	MHAPlugin_Split::splitted_part_t, 720
acSteer, 166	MHATableLookup::linear_table_t, 793
acTransform_wave, 170	matrixmixer::matmix_t, 380
acmon::acmon_t, 151	mhachain::chain_base_t, 465
acsave::acsave_t, 159	mhachain::plugs_t, 468
addsndfile::addsndfile_if_t, 174	multibandcompressor::interface_t, 814
adm_if_t, 189	nlms_t, 817
altplugs_t, 200	noise_t, 820
analysispath_if_t, 206	noisePowProposedScale::interface_t, 822
bbcalib_interface_t, 215	overlapadd::overlapadd_if_t, 826
calibrator_t, 218	plingploing::if_t, 832
coherence::cohflt_if_t, 224	plugin_interface_t, 839
combc if t, 230	PluginLoader::fourway_processor_t, 846
;	
cpuload_t, 234	PluginLoader::mhapluginloader_t, 849
db_if_t, 236	prediction_error, 854
dc::dc_if_t, 240	rmslevel_if_t, 859
dc_simple::dc_if_t, 250	route::interface_t, 862
delay::interface_t, 260	save_spec_t, 868
delaysum::delaysum_if_t, 262	save_wave_t, 869
doasvm_classification, 266	shadowfilter_begin::shadowfilter_begin ←
doasvm_feature_extraction, 270	_t, 872
droptect_t, 274	shadowfilter_end::shadowfilter_end_←
ds_t, 277	t, 875
example1_t, 290	sine_t, 877
example2_t, 293	smoothgains_bridge::overlapadd_if_←
example3_t, 296	t, 879
example4_t, 300	softclip_t, 883
example6_t, 303	spec2wave_if_t, 887
fader_if_t, 305	steerbf, 893
fader_wave::fader_wave_if_t, 307	testplugin::if_t, 901
fftfbpow::fftfbpow_interface_t, 311	timoSmooth, 912
fftfilterbank::fftfb_interface_t, 315	us_t, 914
	<u>~~~</u> , •

wave2spec_if_t, 916	proc_1
wavrec_t, 920	smoothgains_bridge::smoothspec_
prepare_	wrap_t, 881
iirfilter_t, 335	proc_2
MHAPlugin::plugin_t, 697	smoothgains_bridge::smoothspec_
MHAPlugin_Split::split_t, 715	wrap_t, 881
prepare_impl	proc_cnt
MHAJack::client_t, 563	mhachain::plugs_t, 469
prepare_vars	proc_err
fw_t, 324	io_tcp_fwcb_t, 349
prepared	proc_error
ac2wave_if_t, 141	fw_t, 325
altplugs_t, 202	proc_error_string
calibrator_t, 219	fw_t, 325
dc_simple::dc_if_t, 251	proc_event
example3_t, 297	io_file_t, 338
example4_t, 301	io_parser_t, 345
fader_wave::fader_wave_if_t, 307	io_tcp_fwcb_t, 348
fftfilterbank::fftfb_interface_t, 316	MHAIOJackdb::io_jack_t, 547
mhachain::plugs_t, 468	MHAIOPortAudio::io_portaudio_t, 553
route::interface t, 862	MHAJack::client t, 564
timoSmooth, 913	proc_handle
prereadaccess	io_file_t, 338
MHAParser::base_t, 608	io_parser_t, 345
prescale	io_tcp_fwcb_t, 348
overlapadd::overlapadd_if_t, 827	MHAIOJackdb::io_jack_t, 547
preset	MHAIOPortAudio::io_portaudio_t, 553
dc::dc_vars_t, 245	MHAJack::client_t, 564
dc_simple::dc_if_t, 251	proc_lib
prewnd	fw_t, 325
overlapadd::overlapadd_t, 828	proc_name
print_ac	fw_t, 324
analysemhaplugin.cpp, 933	proc_ramp
prior_q	altplugs_t, 201
timo_params, 906	proc_wave
timoSmooth, 913	doasvm_feature_extraction_config, 272
priorFact	process
noisePowProposedScale::noisePow←	ADM::ADM, 182
Proposed, 824	ADM::Delay, 185
timoConfig, 909	ADM::Linearphase_FIR, 187
priority	ac2lsl::ac2lsl_t, 128
analysepath_t, 204	ac2lsl::cfg_t, 130
analysispath_if_t, 206	ac2osc_t, 138
MHAPlugin_Split::posix_threads_t, 712	ac2wave_if_t, 141
prob_bias	ac2wave_t, 142
acPooling_wave, 155	acConcat_wave, 144
prob_bias_func	acConcat_wave_config, 147
acPooling_wave_config, 157	acPooling_wave, 154
proc	acPooling_wave_config, 156
MHAJack::client_avg_t, 556	acSteer, 166
MHAJack::client_noncont_t, 558	acTransform_wave, 170

acTransform_wave_config, 172	lpc_bl_predictor_config, 370
acmon::acmon_t, 152	lpc_burglattice, 373
acsave::acsave_t, 159, 160	lpc_burglattice_config, 374
addsndfile::addsndfile_if_t, 174	lpc_config, 376
adm_if_t, 189	MHAFilter::partitioned_convolution_t, 522
altplugs_t, 201	MHAFilter::thirdoctave_analyzer_t, 535
analysispath_if_t, 206	MHAParser::mhapluginloader_t, 649, 650
bbcalib_interface_t, 215	$MHAP lugin_Resampling:: resampling_if \leftarrow$
calibrator_runtime_layer_t, 216	_t, 700
calibrator_t, 218	MHAPlugin_Resampling::resampling_t,
cfg_t, 222	701
coherence::cohflt_if_t, 224	MHAPlugin_Split::domain_handler_t, 706
coherence::cohflt_t, 226	MHAPlugin_Split::split_t, 715
combc_if_t, 230	MHAPlugin_Split::uni_processor_t, 726
combc_t, 231	MHASignal::async_rmslevel_t, 731
cpuload_t, 234	MHASignal::delay_spec_t, 732
db_if_t, 236	MHASignal::delay_t, 733
dc::dc_if_t, 240	MHASignal::delay_wave_t, 735
dc::dc_t, 242	MHASignal::subsample_delay_t, 774
dc_simple::dc_if_t, 250, 251	matrixmixer::cfg_t, 378
dc_simple::dc_t, 253	matrixmixer::matmix_t, 380
dc_simple::level_smoother_t, 258	mha_dblbuf_t, 404
delay::interface_t, 260	mhachain::chain_base_t, 464, 465
delaysum::delaysum_if_t, 262	mhachain::plugs_t, 468
delaysum::delaysum_t, 264	multibandcompressor::interface_t, 814
doasvm_classification, 266	nlms_t, 818
doasvm_classification_config, 268	noise_t, 820
doasvm_feature_extraction, 270	noisePowProposedScale::interface_t, 822
doasvm_feature_extraction_config, 272	noisePowProposedScale::noisePow←
droptect_t, 274	Proposed, 823
ds_t, 277	overlapadd::overlapadd_if_t, 826
example1_t, 291	plingploing::if_t, 832
example2_t, 293	plingploing::plingploing_t, 835
example3_t, 297	plugin_interface_t, 839
example4_t, 300	PluginLoader::fourway_processor_t, 844,
example5_t, 302	845
example6_t, 303	PluginLoader::mhapluginloader_t, 849
fader_if_t, 305	prediction_error, 854
fader_wave::fader_wave_if_t, 307	prediction_error_config, 856
fftfbpow::fftfbpow_interface_t, 311	rmslevel_if_t, 859
fftfilterbank::fftfb_interface_t, 315	rmslevel_t, 860
fftfilterbank::fftfb_plug_t, 317	route::interface_t, 862
frequency_translator_t, 319	route::process_t, 863
fw_t, 323	rt_nlms_t, 865
gain::gain_if_t, 328	save_spec_t, 868
hilbert_shifter_t, 332	save_wave_t, 869
identity_t, 333, 334	shadowfilter_begin::cfg_t, 870
iirfilter_t, 335	shadowfilter_begin::shadowfilter_begin ←
io_tcp_fwcb_t, 347	_t, 872
lpc, 365	shadowfilter_end::cfg_t, 873
lpc_bl_predictor, 368	shadowfilter_end::shadowfilter_end_←

t, 875	provoke_inner_error
sine_t, 877	mha_dblbuf_t, 404
smoothgains_bridge::overlapadd_if_←	provoke_outer_error
t, 879	mha_dblbuf_t, 404
softclip_t, 883	psrate
softclipper_t, 884	fw_vars_t, 326 Pu
spec2wave_if_t, 887	prediction_error_config, 857
spec2wave_t, 888	rt_nlms_t, 865
steerbf, 893 steerbf_config, 895	push
testplugin::if_t, 901	MHASignal::stat_t, 772
timoConfig, 908	mha_rt_fifo_t, 431
timoSmooth, 911	push_config
us_t, 914	MHAPlugin::config_t, 692
wave2spec_if_t, 916	put_signal
wave2spec_t, 918	MHAPlugin_Split::domain_handler_t, 705
wavrec t, 920	pwinner_out
wavwriter_t, 922	MHAIOJackdb::io_jack_t, 548
process_frame	
io_parser_t, 345	q
process_t	noisePowProposedScale::interface_t, 822
route::process_t, 863	q_high timoConfig, 908
ProcessMutex	q_low
analysepath_t, 204	timoConfig, 908
processing_done	quant
MHAPlugin_Split::posix_threads_t, 712	calibrator_runtime_layer_t, 216
processor	quantile
MHAPlugin_Split::domain_handler_t, 707	MHASignal, 119
MHAPlugin_Split::thread_platform_t, 724	quantizer_t
prof_algos	MHASignal::quantizer_t, 758
mhachain::plugs_t, 469	queries
prof_cfg	MHAParser::base_t, 608
mhachain::plugs_t, 469	plugindescription_t, 841
prof_init	query_addsubst
mhachain::plugs_t, 469 prof_load_con	MHAParser::base_t, 606
mhachain::plugs_t, 469	query_cmds
prof_prepare	MHAParser::base_t, 606
mhachain::plugs_t, 469	plugindescription_t, 841
prof_process	query_dump MHAParser::base_t, 604
mhachain::plugs_t, 469	MHAParser::monitor_t, 653
prof_process_load	MHAParser::parser_t, 657
mhachain::plugs_t, 469	query_entries
prof_process_tt	MHAParser::base_t, 604
mhachain::plugs_t, 469	MHAParser::parser_t, 657
prof_release	query_help
mhachain::plugs_t, 469	MHAParser::base_t, 606
prof_tt_con	query_id
mhachain::plugs_t, 469	MHAParser::base_t, 606
profiling	query_listids
mhachain::plugs_t, 469	MHAParser::base_t, 606

MHAParser::parser_t, 658	MHAParser::vint_t, 680
query_map_t	MHAParser::vstring_mon_t, 682
MHAParser, 107	MHAParser::vstring_t, 684
query_perm	query_val
MHAParser::base t, 605	MHAParser::base t, 605
MHAParser::monitor_t, 653	MHAParser::bool_mon_t, 611
MHAParser::variable_t, 667	MHAParser::bool_t, 613
query_range	MHAParser::complex_mon_t, 619
MHAParser::base t, 605	MHAParser::complex_t, 621
MHAParser::kw t, 637	MHAParser::float_mon_t, 625
MHAParser::range_var_t, 660	MHAParser::float t, 627
query_readfile	MHAParser::int_mon_t, 629
MHAParser::base_t, 605	MHAParser::int_t, 632
MHAParser::parser_t, 657	MHAParser::kw_t, 637
query_savefile	MHAParser::mcomplex_mon_t, 639
MHAParser::base_t, 605	MHAParser::mcomplex_t, 641
MHAParser::parser_t, 657	MHAParser::mfloat_mon_t, 643
query_savefile_compact	MHAParser::mfloat_t, 645
MHAParser::base t, 606	MHAParser::mint_mon_t, 652
MHAParser::parser_t, 658	MHAParser::parser_t, 658
• —	MHAParser::string_mon_t, 663
query_savemons	MHAParser::string_t, 665
MHAParser::base_t, 606	MHAParser::vcomplex_mon_t, 670
MHAParser::parser_t, 658	MHAParser::vcomplex_t, 672
query_subst	MHAParser::vfloat_mon_t, 674
MHAParser::base_t, 606	MHAParser::vfloat_t, 676
query_t	MHAParser::vint_mon_t, 678
MHAParser, 107	MHAParser::vint_t, 680
query_type	MHAParser::vstring_mon_t, 682
MHAParser::base_t, 605	MHAParser::vstring_t, 684
MHAParser::bool_mon_t, 611	query_version
MHAParser::bool_t, 613	MHAParser::base_t, 606
MHAParser::complex_mon_t, 619	quit
MHAParser::complex_t, 621	fw t, 323
MHAParser::float_mon_t, 625	_ ′
MHAParser::float_t, 627	R
MHAParser::int_mon_t, 629	AuditoryProfile::parser_t, 209
MHAParser::int_t, 632	AuditoryProfile::profile_t, 213
MHAParser::kw_t, 637	lpc_config, 377
MHAParser::mcomplex_mon_t, 639	MHA_TCP::OS_EVENT_TYPE, 446
MHAParser::mcomplex_t, 641	RUNNING
MHAParser::mfloat_mon_t, 643	MHA_TCP::Thread, 454
MHAParser::mfloat_t, 645	rad2smp
MHAParser::mint_mon_t, 652	Vector and matrix processing toolbox, 45
MHAParser::parser_t, 657	ramp_a
MHAParser::string_mon_t, 663	hanning_ramps_t, 330
MHAParser::string_t, 665	ramp_b
MHAParser::vcomplex_mon_t, 670	hanning_ramps_t, 330
MHAParser::vcomplex_t, 672	ramp_begin
MHAParser::vfloat_mon_t, 674	MHAWindow::base_t, 802
MHAParser::vfloat_t, 676	ramp_counter
MHAParser::vint_mon_t, 678	altplugs_t, 202

ramp_end	MHAIOJack::io_jack_t, 542
MHAWindow::base_t, 802	MHAIOJackdb::io_jack_t, 547
ramp_len	read_levels
altplugs_t, 202	calibrator_t, 219
ramplen	read_line
addsndfile::addsndfile_if_t, 175	MHA_TCP::Connection, 441
altplugs_t, 202	read modified
fader_wave::fader_wave_if_t, 307	dc_simple::dc_if_t, 251
spec2wave_if_t, 887	read_ptr
ramps	mha_fifo_t, 424
spec2wave t, 889	readable_frames
range	MHAFilter::polyphase_resampling_t, 528
Vector and matrix processing toolbox, 41	readaccess
range_var_t	MHAParser::base_t, 608
MHAParser::range_var_t, 660	reader_started
ratio	mha drifter fifo t, 411
ds_t, 277	reader_xruns_in_succession
us_t, 914	mha_drifter_fifo_t, 412
_ ·	reader_xruns_since_start
raw_p_max_name acTransform_wave, 171	mha drifter fifo t, 412
acTransform wave config. 172	:
	reader_xruns_total
raw_p_name	mha_drifter_fifo_t, 412
acPooling_wave_config, 157	real
acTransform_wave, 171	MHASignal::matrix_t, 752–754
acTransform_wave_config, 172	rear_channel
rb_f_t	adm_rtconfig_t, 193
mha_ruby.cpp, 983	rear_channels
rdata	adm_if_t, 190
MHASignal::matrix_t, 756	adm_rtconfig_t, 193
mha_audio_t, 398	rec_frames
re	acsave::cfg_t, 162
mha_complex_t, 400	received_group
read	mhaserver_t, 728
MHAFilter::blockprocessing_polyphase ←	receiver
_resampling_t, 485	MHAEvents::connector_t, 476
MHAFilter::polyphase_resampling_t, 528	reciprocal
MHAJack::port_t, 567	Complex arithmetics in the openMHA, 67
mha_drifter_fifo_t, 410	reclen
mha_fifo_lw_t, 417	acsave::acsave_t, 160
mha_fifo_t, 423	recmode
read_bytes	acmon::acmon_t, 152
MHA_TCP::Connection, 442	reconnect_inports
read_event	MHAIOJack::io_jack_t, 542
MHA_TCP::Connection, 443	MHAIOJackdb::io_jack_t, 546
read_get_cpu_load	reconnect_outports
MHAIOJack::io_jack_t, 542	MHAIOJack::io_jack_t, 542
MHAIOJackdb::io_jack_t, 547	MHAIOJackdb::io_jack_t, 546
read_get_scheduler	record
MHAIOJack::io_jack_t, 542	wavrec_t, 921
MHAIOJackdb::io_jack_t, 547	rect
read_get_xruns	MHAOvlFilter::ShapeFun, 102

MHAWindow, 122	MHAPlugin::plugin_t, 697
rect_t	MHAPlugin_Resampling::resampling_if-
MHAWindow::rect_t, 808	_t, 700
relative	MHAPlugin_Split::splitted_part_t, 720
MHASignal::loop_wavefragment_t, 745	mhachain::chain_base_t, 465
release	mhachain::plugs_t, 468
ac2lsl::ac2lsl_t, 128	multibandcompressor::interface_t, 814
ac2osc_t, 138	nlms_t, 817
ac2wave_if_t, 141	overlapadd::overlapadd_if_t, 826
acConcat_wave, 146	PluginLoader::fourway_processor_t, 846
acPooling wave, 155	PluginLoader::mhapluginloader_t, 849
acSteer, 166	prediction_error, 854
acTransform_wave, 170	route::interface_t, 862
acmon::acmon_t, 151	smoothgains_bridge::overlapadd_if_←
acsave::acsave_t, 159	t, 879
addsndfile::addsndfile_if_t, 174	steerbf, 894
adm_if_t, 189	timoSmooth, 912
altplugs_t, 200	us t, 914
analysispath_if_t, 206	wavrec_t, 920
bbcalib_interface_t, 215	release_
calibrator t, 218	iirfilter_t, 335
coherence::cohflt_if_t, 224	MHAPlugin::plugin_t, 697
db_if_t, 236	MHAPlugin_Split::split_t, 715
dc_simple::dc_if_t, 250	release_mutex
delaysum::delaysum_if_t, 262	mha_fifo_posix_threads_t, 419
doasym_classification, 266	mha_fifo_thread_platform_t, 427
doasym_feature_extraction, 270	remove_abandonned
droptect_t, 274	mha_rt_fifo_t, 431
ds_t, 277	remove all
example1_t, 290	mha_rt_fifo_t, 431
example2_t, 293	remove all cfg
example3_t, 297	MHAPlugin::config t, 694
example4_t, 300	remove_item
fader_wave::fader_wave_if_t, 307	MHAParser::parser_t, 656, 657
fftfilterbank::fftfb interface t, 315	remove lock
frequency_translator_t, 319	mhamain.cpp, 1022
fw_t, 323	remove_ref
gain::gain_if_t, 328	algo_comm_t, 196
identity_t, 334	MHAKernel::algo comm class t, 570
io_file_t, 337	remove_var
io_lib_t, 342	algo_comm_t, 195
io_parser_t, 345	MHAKernel::algo_comm_class_t, 570
io_tcp_sound_t, 357	repl_list
io_tcp_t, 361	MHAParser::base_t, 608
lpc, 366	repl_list_t
lpc_bl_predictor, 368	MHAParser::base_t, 603
lpc_burglattice, 373	replace
MHAIOJack::io_jack_t, 541	MHAParser::base_t::replace_t, 609
MHAIOJackdb::io_jack_t, 546	MHASignal::loop_wavefragment_t, 745
MHAJack::client_t, 562	replace_
MHAParser::mhapluginloader_t, 649	cfg_t, 222
wii wii arooriiiiapiagiiiioadei_t, 0+3	019_t, <u></u>

replace_t	wave2spec_if_t, 916
MHAParser::base_t::replace_t, 609	retv
resampled_num_frames	MHAParser::c_ifc_parser_t, 616
addsndfile, 79	rewind
resampled_soundfile_t	MHASignal::loop_wavefragment_t, 747
addsndfile::resampled_soundfile_t, 178	rho
resampling	nlms_t, 818
MHAFilter::blockprocessing_polyphase←	prediction_error, 854
_resampling_t, 485	ringbuffer
resampling.cpp, 1028	MHAFilter::polyphase_resampling_t, 529
resampling_factors	ringbuffer_t
MHAFilter, 94	MHASignal::ringbuffer_t, 761
resampling_filter_t	rm_parent_on_remove
MHAFilter::resampling_filter_t, 530	MHAParser::base_t, 607
resampling_if_t	rms
MHAPlugin_Resampling::resampling_if←	MHASignal::loop_wavefragment_t, 745
_t, 700	plingploing::plingploing_t, 836
resampling_t	rms_limit40
MHAPlugin_Resampling::resampling_t,	MHASignal::loop_wavefragment_t, 745
701	rmsdb
resamplingmode	example6_t, 303
addsndfile::addsndfile_if_t, 175	rmslevel
reset	calibrator_variables_t, 220
droptect_t, 275	dc::dc_t, 242
MHA_TCP::Async_Notify, 435	MHASignal::async_rmslevel_t, 730
MHA_TCP::Wakeup_Event, 460	Vector and matrix processing toolbox, 56,
reset_state	57
MHAFilter::gamma_flt_t, 503	rmslevel.cpp, 1028
resize	rmslevel_if_t, 858
MHAFilter::iir_filter_t, 508	name, 859
resolution	prepare, 859
acTransform_wave_config, 172	process, 859
resolve	rmslevel_if_t, 859
dynamiclib_t, 278	rmslevel_t, 860
resolve_and_init	fftlen, 860
PluginLoader::mhapluginloader_t, 850	insert, 860
resolve_checked	level, 860
dynamiclib_t, 278	level_db, 860
result	peak, 860
cpuload_t, 235	peak_db, 860
resynthesis_gain	process, 860
MHAFilter::gamma_flt_t, 504	rmslevel_t, 860
ret_size	rmslevelmeter
MHAParser::c_ifc_parser_t, 616	transducers.cpp, 1038
return_imag	root
fftfilterbank::fftfb_interface_t, 316	mha_rt_fifo_t, 432
return_imag_	rotated_i
fftfilterbank::fftfb_plug_t, 317	acTransform_wave_config, 172
return_value	rotated_p
MHA_TCP::Thread, 455	acTransform_wave_config, 172
return_wave	rotated_p_max_name

acTransform_wave, 171	Pu, 865
rotated_p_name	rt_nlms_t, 865
acTransform_wave, 171	s_E, 866
route, 125	U, 865
route.cpp, 1028	Uflt, 865
route::interface_t, 861	y_previous, 866
algo, 862	rt_process
cfac, 862	analysepath_t, 204
cfin, 862	rt_strict
cfout, 862	_ ac2lsl::ac2lsl_t, 129
interface_t, 862	ac2osc_t, 139
patchbay, 862	rt_strict_flag
prepare, 862	ac2lsl::ac2lsl_t, 129
prepared, 862	ac2osc_t, 139
process, 862	rtcalibrator
•	transducers.cpp, 1038
release, 862	rtmem
route_ac, 862	ac2osc t, 139
route_out, 862	run
stopped, 862	MHA_TCP::Thread, 455
update, 862	mhaserver_t, 728
route::process_t, 863	runtime configuration, 4
process, 863	rval
process_t, 863	
sout, 863	MHAParser::expression_t, 623
sout_ac, 863	s_E_pred_err_delay
wout, 863	prediction_error_config, 857
wout_ac, 863	s LPC
route_ac	prediction_error_config, 857
route::interface_t, 862	s_U_delay
route_out	prediction_error_config, 857
route::interface_t, 862	s_U_delayflt
rows	prediction_error_config, 857
acsave::mat4head_t, 162	s Usmpl
rt nlms t, 864	prediction_error_config, 858
~rt_nlms_t, 865	s Wflt
ac, 865	_
channels, 865	prediction_error_config, 857
F, 865	s_Y_delay
frames, 865	prediction_error_config, 857
fu, 866	s_Y_delayfit
fu previous, 866	prediction_error_config, 857
fuflt, 866	s_b
insert, 865	lpc_bl_predictor_config, 371
	lpc_burglattice_config, 375
n_no_update_, 866	s_E
name_d_, 866	prediction_error_config, 857
name_e_, 866	rt_nlms_t, 866
name_u_, 866	s_f
no_iter, 866	lpc_bl_predictor_config, 371
ntaps, 865	lpc_burglattice_config, 375
P_Sum, 866	s_file_in
process, 865	io_file_t, 339

s_in	acsave::save_var_t, 164
io_file_t, 338	save_mat4
io_parser_t, 345	acsave::save_var_t, 163
io_tcp_sound_t, 359	save_spec.cpp, 1028
MHAIOPortAudio::io_portaudio_t, 553	save_spec_t, 867
MHAJack::client_t, 565	basename, 868
s_out	prepare, 868
coherence::cohflt_t, 227	process, 868
combc_t, 231	save_spec_t, 867
fftfilterbank::fftfb_plug_t, 317	save_txt
io_file_t, 339	acsave::save_var_t, 163
io_parser_t, 345	save_var_t
MHAIOPortAudio::io_portaudio_t, 553	ac2lsl::save_var_t, 133
MHAJack::client_t, 565	— — ·
- ·	ac2lsl::save_var_t< mha_complex_t >, 135
s_U	acsave::save_var_t, 163
prediction_error_config, 857 s_W	— — ·
prediction_error_config, 857	save_vars acmon::acmon t, 152
. – – •	<u> </u>
sInput MHAFiltor::fftfiltor: + 403	save_wave.cpp, 1028
MHAFilter::fftfilter_t, 493	save_wave_t, 868
SOCKET_ERROR	basename, 869
mha_tcp.cpp, 998	prepare, 869
SOCKET	process, 869
MHA_TCP, 89	save_wave_t, 869
mha_tcp.cpp, 998	saveas_mat4
SPP	MHASignal, 119, 120
timo_AC, 904	SC NAME OF THE PROPERTY OF THE
START_BETA	MHASignal::hilbert_fftw_t, 742
ADM, 80	spec2wave_t, 889
STRERROR	scale
MHA_TCP, 89	example5_t, 302
STRLEN	MHASignal, 117
mha_errno.c, 960	MHASignal::fft_t, 741
sWeights	MHASignal::spectrum_t, 770
MHAFilter::fftfilter_t, 493	MHASignal::waveform_t, 787
safe_div	scale_ch
Complex arithmetics in the openMHA, 66	example2_t, 294
mha_signal.cpp, 986	example3_t, 297
mha_signal.hh, 995	example4_t, 301
sample	plugin_interface_t, 839
lpc_config, 377	scale_channel
samplerate	MHASignal::spectrum_t, 771
io_file_t, 338	MHASignal::waveform_t, 787
io_tcp_sound_t, 358	scale_frame
MHAIOPortAudio::io_portaudio_t, 553	MHASignal::waveform_t, 788
MHAJack::client_t, 564	scale_fun_t
samples_AC	MHAOvlFilter, 99
acConcat_wave, 146	scale_var_t
samplingrate	MHAOvlFilter::scale_var_t, 599
MHAOvIFilter::fftfb_t, 584	scalefac
save_m	MHATableLookup::linear_table_t, 794

scaler_t	testplugin::config_parser_t, 899
gain::scaler_t, 329	set_announce_port
scan_dir	mhaserver_t, 728
addsndfile::addsndfile_if_t, 175	set_channelcnt
scan_plugin	MHAFilter::adapt_filter_t, 482
pluginbrowser_t, 840	set_connected
scan_plugins	io_tcp_parser_t, <mark>353</mark>
pluginbrowser_t, 840	set_entries
scheduler	MHAParser::keyword_list_t, 634
analysepath_t, 204	set_errnos
MHAPlugin_Split::posix_threads_t, 712	io_tcp_fwcb_t, 347
schroeder t	set_error
MHASignal::schroeder_t, 765	mha_fifo_lw_t, 417
search_pattern	set_fb_pars
addsndfile::addsndfile_if_t, 175	DynComp::dc_afterburn_t, 281
search_result	set_help
	_ ·
addsndfile::addsndfile_if_t, 175	MHAParser::base_t, 607
sec2smp	set_id_string
Vector and matrix processing toolbox, 43	MHAParser::parser_t, 658
select_plug	set_index
altplugs_t, 202	MHAParser::keyword_list_t, 634
select_source	set_input_domain
MHAMultiSrc::base_t, 574	MHAPlugin_Split::domain_handler_t, 704
selected_plug	set_input_portnames
altplugs_t, 202	MHAJack::client_t, 563
send_frame	set_level
ac2lsl::save_var_base_t, 131	addsndfile::addsndfile_if_t, 175
ac2lsl::save_var_t, 133	fader_wave::fader_wave_if_t, 307
ac2lsl::save_var_t< mha_complex_t >,	set_level_db
135	MHASignal::loop_wavefragment_t, 747
send_osc_float	set_level_lin
ac2osc_t, 138	MHASignal::loop_wavefragment_t, 747
Server	set_local_port
MHA_TCP::Server, 447, 448	io_tcp_parser_t, 351
server	set locate
io_tcp_t, 362	MHAIOJackdb::io_jack_t, 547
server_fragsize	set_max_angle_ind
MHAIOJackdb::io_jack_t, 548	parser_int_dyn, 831
server_port_open	set minabs
io_tcp_parser_t, 354	mha_signal.cpp, 986
server srate	mha_signal.hh, 995
MHAIOJackdb::io_jack_t, 548	set_new_peer
servername	io_tcp_parser_t, 353
MHAIOJack::io_jack_t, 542	set_node_id
MHAIOJackdb::io_jack_t, 547	MHAParser::base_t, 606
serversocket	
	set_output_domain
MHA_TCP::Server, 449	MHAPlugin_Split::domain_handler_t, 704
Complex crithmetics in the enerMHA 60	set_output_portnames
Complex arithmetics in the openMHA, 62,	MHAJack::client_t, 563
63	set_parse_cb
MHA_TCP::Async_Notify, 435	MHAParser::c_ifc_parser_t, 615

set_range	sfinf_in
MHAParser::kw_t, 637	io_file_t, 339
MHAParser::range_var_t, 660	sfinf_out
set_server_port_open	io_file_t, 339
io_tcp_parser_t, 352	shadowfilter_begin, 125
set_state	shadowfilter_begin.cpp, 1029
MHAFilter::complex_bandpass_t, 487	shadowfilter_begin::cfg_t, 869
MHAFilter::iir ord1 real t, 510	cfg_t, 870
set_tau	in_spec_copy, 870
MHAFilter::o1flt_lowpass_t, 516	nch, 870
MHAFilter::o1flt_maxtrack_t, 518	ntracks, 870
MHAFilter::o1flt_mintrack_t, 520	out_spec, 870
set_tau_attack	process, 870
 MHAFilter::o1_ar_filter_t, 513	shadowfilter_begin::shadowfilter_begin_t, 871
set_tau_release	basename, 872
 MHAFilter::o1_ar_filter_t, 513	nch, 872
set_use_jack_transport	ntracks, 872
MHAIOJackdb::io_jack_t, 547	prepare, 872
MHAJack::client t, 563	process, 872
set_value	shadowfilter_begin_t, 871
MHAParser::keyword_list_t, 634	shadowfilter_begin_t
set_weights	shadowfilter_begin::shadowfilter_begin←
MHAFilter::complex_bandpass_t, 487	_t, 871
MHAFilter::gamma_flt_t, 503	shadowfilter_end, 125
set_xfun	shadowfilter_end.cpp, 1029
MHATableLookup::xy_table_t, 798	shadowfilter_end::cfg_t, 872
set_xmax	ac, 873
MHATableLookup::linear_table_t, 793	cfg_t, 873
set_xmin	gains, 873
MHATableLookup::linear_table_t, 792	in_spec, 873
set_xyfun	name, 873
MHATableLookup::xy_table_t, 799	nch_out, 873
set_yfun	nfft, 873
MHATableLookup::xy_table_t, 799	ntracks, 873
setchannels	out spec, 873
dc::wideband_inhib_vars_t, 248	process, 873
setlock	shadowfilter_end::shadowfilter_end_t, 874
io_file_t, 337	basename, 875
MHAParser::variable_t, 667	prepare, 875
testplugin::config_parser_t, 899	process, 875
sf	shadowfilter_end_t, 874
MHASndFile::sf_t, 789	shadowfilter end t
wavwriter_t, 922	shadowfilter_end::shadowfilter_end_←
sf_in	t, 874
io_file_t, 339	shape
sf_out	MHAOvlFilter::fftfb_t, 584
io_file_t, 339	shapes
sf_t	MHAOvlFilter::fftfb_vars_t, 587
MHASndFile::sf_t, 789	shift
sf_wave_t	lpc, 366
MHASndFile::sf_wave_t, 790	lpc_config, 376
	.po_001g, 07 0

shifted	MHA_AC::acspace2matrix_t, 387
hilbert_shifter_t, 332	MHAKernel::algo_comm_class_t, 571
side	MHASignal::matrix_t, 752
mha_channel_info_t, 399	Vector and matrix processing toolbox, 47
sign_t	48
MHASignal::schroeder_t, 765	size_t
signal	MHAParser::keyword_list_t, 633
testplugin::if_t, 901	skip
signal_counter	ac2lsl::ac2lsl_t, 129
MHASignal, 121	ac2lsl::cfg_t, 130
signal_out	ac2osc_t, 139
MHAPlugin_Split::split_t, 716	skipcnt
signal_parser_t	ac2lsl::cfg_t, 130
testplugin::signal_parser_t, 902	ac2osc_t, 139
sin125	Sleep
speechnoise_t, 891	mha_tcp.hh, 1000
sin1k	slope
speechnoise_t, 891	softclipper_t, 884
sin250	softclipper variables t, 886
speechnoise_t, 891	slope_db
sin2k	softclip_t, 883
speechnoise_t, 891	smoothgains_bridge, 126
sin4k	smoothgains_bridge.cpp, 1029
speechnoise_t, 891	smoothgains_bridge::overlapadd_if_t, 878
sin500	~overlapadd_if_t, 879
speechnoise_t, 891	algo, 880
sin8k	cf_in, 880
speechnoise_t, 891	cf_out, 880
sinc	epsilon, 880
MHAFilter, 94	irswnd, 880
sine.cpp, 1029	mode, 880
• • •	
sine_cfg_t, 875	overlapadd_if_t, 879
amplitude, 876	patchbay, 880
channels, 876	plugloader, 880
mix, 876	prepare, 879
phase_increment_div_2pi, 876	process, 879
sine_cfg_t, 876	release, 879
sine_t, 876	update, 880
~sine_t, 877	smoothgains_bridge::smoothspec_wrap_ →
channels, 878	t, 880
frequency, 878	proc_1, 881
lev, 878	proc_2, 881
mode, 878	smoothspec, 881
patchbay, 878	smoothspec_epsilon, 881
phase_div_2pi, 878	smoothspec_wrap_t, 881
prepare, 877	spec_in_copy, 881
process, 877	use_smoothspec, 881
sine_t, 877	smoothspec
update_cfg, 877	MHAFilter::smoothspec_t, 533
size	smoothgains_bridge::smoothspec_←
MHA_AC::ac2matrix_helper_t, 382	wrap_t, 881

smoothspec_epsilon	start_limit, 883
smoothgains_bridge::smoothspec_←	tftype, 883
wrap_t, 881	update, 883
smoothspec_t	softclipper_t, 883
MHAFilter::smoothspec_t, 532	attack, 884
smoothspec_wrap_t	clipmeter, 884
smoothgains_bridge::smoothspec_←	decay, 884
wrap_t, 881	hardlimit, 884
smp2rad	linear, 884
Vector and matrix processing toolbox, 44	process, 884
smp2sec	slope, 884
Vector and matrix processing toolbox, 43	softclipper_t, 884
smpl	threshold, 884
prediction_error_config, 858	softclipper_variables_t, 885
sn_in	clipped, 886
MHAJack::client_avg_t, 556	hardlimit, 886
MHAJack::client_noncont_t, 558	linear, 886
	•
sn_out MHAJack::client avg t, 556	max_clipped, 886
MHAJack::client_avg_t, 556 MHAJack::client_noncont_t, 559	slope, 886
<u> </u>	softclipper_variables_t, 885
sndfile_t	tau_attack, 885
addsndfile::sndfile_t, 179	tau_clip, 886
snprintf_required_length	tau_decay, 886
mha_error_helpers, 87	threshold, 886
snrPost1Debug	sort_fftw2spec
noisePowProposedScale::noisePow←	MHASignal::fft_t, 740
Proposed, 824	sort_spec2fftw
sock_addr	MHASignal::fft_t, 740
MHA_TCP::Server, 449	sound
sock_init_t	io_tcp_t, 362
MHA_TCP::sock_init_t, 450	source_channel_index
sock_initializer	$MHAFilter::partitioned_convolution_t \leftarrow$
MHA_TCP, 90	::index_t, 525
Sockaccept_Event	MHAFilter::transfer_function_t, 538
MHA_TCP::Sockaccept_Event, 450	sout
Sockread_Event	matrixmixer::cfg_t, 378
MHA_TCP::Sockread_Event, 451	route::process_t, 863
Sockwrite_Event	sout_ac
MHA_TCP::Sockwrite_Event, 452	route::process_t, 863
softclip	spec2fir
calibrator_runtime_layer_t, 216	MHAFilter, 93
calibrator_variables_t, 220	MHAFilter::smoothspec_t, 533
softclip.cpp, 1030	spec2spec
softclip_t, 882	plugindescription_t, 841
attack, 883	spec2wave
decay, 883	MHASignal::fft_t, 739
patchbay, 883	plugindescription_t, 841
prepare, 883	spec2wave.cpp, 1030
process, 883	max, 1030
slope_db, 883	min, 1030
softclip_t, 883	spec2wave_if_t, 886
-	-l

patchbay, 887	speechnoise.cpp, 1030
prepare, 887	bandw_correction, 1032
process, 887	erb_hz_f_hz, 1032
ramplen, 887	fhz2bandno, 1032
spec2wave_if_t, 887	hz2hz, 1032
update, 887	NUM_ENTR_LTASS, 1031
window config, 887	NUM ENTR MHAORIG, 1031
spec2wave_scale	NUM_ENTR_OLNOISE, 1031
MHASignal::fft_t, 740	vLTASS_combined_lev, 1033
spec2wave_t, 888	vLTASS_female_lev, 1033
~spec2wave_t, 888	vLTASS_freq, 1032
calc_out, 889	vLTASS_male_lev, 1033
ft, 888	vMHAOrigFreq, 1032
nfft, 889	vMHAOrigSpec, 1032
npad1, 888	vOlnoiseFreq, 1033
npad2, 889	vOlnoiseLev, 1033
nwndshift, 889	speechnoise.h, 1033
out_buf, 889	speechnoise_t, 890
postwindow, 889	brown, 891
process, 888	creator, 892
ramps, 889	LTASS_combined, 891
sc, 889	LTASS_female, 891
spec2wave_t, 888	LTASS_male, 891
write_buf, 889	mha, 891
spec_fader_t, 889	noise_type_t, 891
\sim spec_fader_t, 890	olnoise, 891
fr, 890	pink, 891
gains, 890	sin125, 891
nch, 890	sin1k, 891
spec_fader_t, 890	sin250, 891
spec_in	sin2k, 891
MHAPlugin_Split::domain_handler_t, 707	sin4k, 891
overlapadd::overlapadd_t, 829	sin500, 891
wave2spec_t, 919	sin8k, <mark>891</mark>
spec_in_copy	speechnoise_t, 892
smoothgains_bridge::smoothspec_←	TEN_SPL_250_8k, 891
wrap_t, 881	TEN_SPL_50_16k, 891
spec_out	TEN SPL, 891
MHAPlugin_Split::domain_handler_t, 707	white, 891
MHAPlugin_Split::split_t, 717	split.cpp, 1033
timoConfig, 909	default thread platform string, 1034
specSteer1	,
·	default_thread_platform_type, 1034
acSteer_config, 168	MHAPLUGIN_OVERLOAD_OUTDOM↔
specSteer2	AIN, 1034
acSteer_config, 168	posixthreads, 1034
spectrum_t	split_t
MHA_AC::spectrum_t, 392	MHAPlugin_Split::split_t, 715
MHAMultiSrc::spectrum_t, 576	splitted_part_t
MHASignal::spectrum_t, 768	MHAPlugin_Split::splitted_part_t, 719
speechnoise	spnoise_channels
calibrator_runtime_layer_t, 217	calibrator_variables_t, 220

spnoise_level	starting
calibrator_variables_t, 220	mha_drifter_fifo_t, 411
spnoise mode	startpos
calibrator_variables_t, 220	addsndfile::addsndfile_if_t, 175
spnoise_parser	startsample
calibrator_variables_t, 220	io_file_t, 338
spp	startup_zeros
timoSmooth, 913	mha_drifter_fifo_t, 413
srate	stat t
adm_if_t, 190	
calibrator_variables_t, 220	MHASignal::stat_t, 772
MHAParser::mhaconfig_mon_t, 648	state
MHAPlugin_Resampling::resampling_if←	fw_t, 325
_t, 700	MHA_TCP::Thread, 455
mhaconfig_t, 471	MHAFilter::filter_t, 501
testplugin::config_parser_t, 899	state_cpuload
srate_	MHAIOJack::io jack t, 543
MHAFilter::gamma_flt_t, 504	MHAIOJackdb::io_jack_t, 548
srcfile	state_parser
MHAParser::parser_t, 658	MHAIOJack::io_jack_t, 543
srcline	MHAIOJackdb::io_jack_t, 548
MHAParser::parser_t, 658	state_priority
start	MHAIOJack::io_jack_t, 543
fw_t, 322	MHAIOJackdb::io_jack_t, 548
io_file_t, 337	state_scheduler
io_lib_t, 341	MHAIOJack::io_jack_t, 543
io_parser_t, 344	MHAIOJackdb::io_jack_t, 548
io_tcp_fwcb_t, 347	state_t
io_tcp_t, 361	fw t, 322
MHAJack::client_t, 562	state_xruns
start_event	MHAIOJack::io_jack_t, 543
io_file_t, 338	MHAIOJackdb::io_jack_t, 548
io_parser_t, 345	staticgain
io_tcp_fwcb_t, 348	-
MHAIOPortAudio::io_portaudio_t, 553	coherence::cohflt_t, 227
MHAJack::client_t, 565	coherence::vars_t, 228
start_handle	status MHA_TCP::Wakeup_Event, 461
-	std
io_file_t, 338	
io_parser_t, 345	MHA_AC::stat_t, 394
io_tcp_fwcb_t, 349	std_vector_float
MHAIOPortAudio::io_portaudio_t, 553	Vector and matrix processing toolbox, 52
MHAJack::client_t, 565	std_vector_vector_complex
start_limit	Vector and matrix processing toolbox, 53
softclip_t, 883	std_vector_vector_float
start_lin	Vector and matrix processing toolbox, 52
cfg_t, 222	stdcomplex
start_new_session	Complex arithmetics in the openMHA, 63
wavrec_t, 920	steerFile
started	acSteer, 167
fw_t, 323	steerbf, 892
io_parser_t, 345	\sim steerbf, 893

angle_ind, 894 angle_src, 894	io_parser_t, 345 MHAJack::client_t, 564
bf_src, 894	route::interface t, 862
patchbay, 894	store
•	
prepare, 893	mon_t, 810
process, 893	store_frame
release, 894	acsave::cfg_t, 161
steerbf, 893	acsave::save_var_t, 163
update_cfg, 894	str2val
steerbf.cpp, 1034	MHAParser::StrCnv, 110, 111
INSERT_PATCH, 1035	str2val< mha_real_t >
PATCH_VAR, 1035	MHAParser::StrCnv, 110
steerbf.h, 1035	str_error
steerbf_config, 894	MHAJack::client_t, 563
_steerbf, 895	strNames_AC
\sim steerbf_config, 895	acConcat_wave_config, 147
ac, 895	strdom
bf_src_copy, 895	analysemhaplugin.cpp, 933
bf_vec, 895	latex_doc_t, 363
nangle, 895	stream
nchan, 895	ac2lsl::save_var_t, 133
nfreq, 895	ac2lsl::save_var_t< mha_complex_t >
outSpec, 895	135
process, 895	strict_channel_match
steerbf_config, 895	io_file_t, 338
stime	strict_srate_match
MHA_TCP, 89	io_file_t, 338
stop	stride
fw_t, 322	comm_var_t, 233
io_file_t, 337	testplugin::ac_parser_t, 897
io_lib_t, 341	string_mon_t
io_parser_t, 345	MHAParser::string mon t, 662
io_tcp_fwcb_t, 348	string_t
io_tcp_t, 361	MHAParser::string_t, 665
MHAJack::client_t, 562	strreplace
mha_drifter_fifo_t, 411	MHAParser, 107
stop_event	structVersion
io_file_t, 338	MHAIOPortAudio::device_info_t, 550
io_parser_t, 345	subsample_delay_t
io_tcp_fwcb_t, 348	MHASignal::subsample_delay_t, 773
MHAIOPortAudio::io_portaudio_t, 553	subsampledelay_coeff
MHAJack::client_t, 565	ADM, 79
stop_handle	sum
• —	MHASignal::stat_t, 772
io_file_t, 338	_
io_parser_t, 345	MHASignal::waveform_t, 782, 783
io_tcp_fwcb_t, 349	Sum2
MHAIOPortAudio::io_portaudio_t, 553	MHASignal::stat_t, 772
MHAJack::client_t, 565	sum_channel
stopped	MHASignal::waveform_t, 783
fw_t, 323	sumsqr
io_file_t, 337	MHASignal::waveform_t, 783

sumsqr_channel	tau_level
Vector and matrix processing toolbox, 58	calibrator_variables_t, 220
sumsqr_frame	tau_unit
Vector and matrix processing toolbox, 59	coherence::vars_t, 228
SVC	tauattack
analysepath_t, 204	dc::dc_vars_t, 244
symmetry_scale	dc_simple::dc_vars_t, 256
MHAOvlFilter::fspacing_t, 592	taudecay
sync	dc::dc vars t, 245
mha_fifo_lw_t, 417	dc_simple::dc_vars_t, 256
mha_fifo_thread_guard_t, 425	taugain
sysread	DynComp::dc_afterburn_vars_t, 284
MHA_TCP::Connection, 439	taurmslevel
syswrite	dc::dc_vars_t, 244
MHA_TCP::Connection, 440	tcp_connect_to
	mha_tcp.cpp, 998
Т	tcp_connect_to_with_timeout
MHA_TCP::OS_EVENT_TYPE, 446	mha_tcp.cpp, 998
t	tcpserver
acsave::mat4head_t, 162	mhaserver_t, 729
mha_tictoc_t, 461	termination_request
plingploing::plingploing_t, 835	MHAPlugin_Split::posix_threads_t, 712
tAC	test_error
timoConfig, 908	io_lib_t, 342
TEN_SPL_250_8k	— — :
speechnoise_t, 891	MHAParser::c_ifc_parser_t, 615 PluginLoader::mhapluginloader_t, 850
TEN_SPL_50_16k	
speechnoise_t, 891	test_fail
TEN_SPL	dc_simple, 82
speechnoise_t, 891	test_prepare
table	testplugin::if_t, 901
cpuload_t, 235	test_process
table_t	testplugin::if_t, 901
MHATableLookup::table_t, 795	test_version
tail	PluginLoader::mhapluginloader_t, 850
MHAFilter::fftfilterbank_t, 497	testalsadevice.c, 1035
target_channel_index	main, 1035
$MHAFilter::partitioned_convolution_t \leftarrow$	testplugin, 126
::index_t, 525	testplugin.cpp, 1035
MHAFilter::transfer_function_t, 538	testplugin::ac_parser_t, 896
tau	_MHA_AC_CHAR, 897
coherence::vars_t, 228	_MHA_AC_DOUBLE, 897
droptect_t, 275	_MHA_AC_FLOAT, 897
fader_if_t, 305	_MHA_AC_INT, 897
tau_attack	_MHA_AC_MHACOMPLEX, 897
softclipper_variables_t, 885	_MHA_AC_MHAREAL, 897
tau_beta	_unknown, 897
adm_if_t, 190	ac_parser_t, 897
tau_clip	char_data, 897
softclipper_variables_t, 886	complex_data, 897
tau_decay	data_type, 897
softclipper_variables_t, 886	data_type_t, 897

do_get_var, 897	MHAParser::base_t, 608
do_insert_var, 897	thirdoctave_analyzer_t
float_data, 897	MHAFilter::thirdoctave_analyzer_t, 535
get_var, 897	this_outer_out
insert_var, 897	MHASignal::doublebuffer_t, 738
int_data, 897	thr f
num_entries, 897	MHA_TCP::Thread, 454
patchbay, 897	Thread
stride, 897	MHA_TCP::Thread, 454
testplugin::config_parser_t, 898	thread
channels, 899	analysepath_t, 204
config_parser_t, 898	io_tcp_t, 362
domain, 899	MHAPlugin_Split::posix_threads_t, 712
fftlen, 899	MHAPlugin_Split::splitted_part_t, 722
fragsize, 899	thread_arg
get, 899	MHA TCP::Thread, 456
set, 899	thread attr
setlock, 899	MHA_TCP::Thread, 455
srate, 899	thread_finish_event
wndlen, 899	MHA_TCP::Thread, 455
testplugin::if_t, 900	thread_func
_prepare, 901	MHA_TCP::Thread, 456
ac, 901	thread_handle
config_in, 901	MHA_TCP::Thread, 455
config_out, 901	thread_platform
if_t, 901	MHAPlugin_Split::split_t, 716
patchbay, 901	thread_platform_t
plug, 901	MHAPlugin_Split::thread_platform_t, 723
prepare, 901	thread_start
process, 901	analysispath.cpp, 933
signal, 901	MHAPlugin_Split::posix_threads_t, 711
test_prepare, 901	thread_start_func
test_process, 901	mha_tcp.cpp, 998
testplugin::signal_parser_t, 902	thread_startup_function
input_spec, 902	MHAIOTCP.cpp, 1018
input wave, 902	threshold
output_spec, 902	droptect_t, 275
output wave, 902	softclipper_t, 884
signal_parser_t, 902	softclipper_variables_t, 886
tftype	tictoc
MHAPlugin::plugin_t, 698	mhachain::plugs_t, 469
softclip_t, 883	timeout
The MHA Framework interface, 26	MHA_TCP::OS_EVENT_TYPE, 446
The openMHA configuration language, 33	MHA_TCP::Timeout_Watcher, 458
The openMHA Plugins (programming inter-	Timeout_Event
face), 6	MHA_TCP::Timeout_Event, 457
MHAPLUGIN_CALLBACKS_PREFIX, 8	Timeout Watcher
MHAPLUGIN CALLBACKS, 8	MHA_TCP::Timeout_Watcher, 458
MHAPLUGIN_DOCUMENTATION, 9	timeshift
The openMHA Toolbox library, 34	Vector and matrix processing toolbox, 49
thefullname	timo_AC, 903

	alpha_frame_AC, 904	gain_wiener, 909
	alpha_hat_AC, 904	gamma_post, 909
	copy, 903	lambda_ceps, 909
	gain_wiener_AC, 904	lambda_ceps_prev, 909
	gamma_post_AC, 903	lambda_ml_ceps, 909
	insert, 903	lambda_ml_full, 909
	lambda_ceps_AC, 904	lambda_ml_smooth, 909
	lambda ml AC, 904	lambda_spec, 909
	lambda_ml_ceps_AC, 904	log_lambda_spec, 909
	lambda_ml_smooth_AC, 904	logGLRFact, 909
	lambda spec AC, 904	max_q, 909
	log_lambda_spec_AC, 904	max_val, 909
	max_q_AC, 904	mha fft, 908
	max_val_AC, 904	nchan, 908
	pitch_set_first_AC, 904	nfreq, 908
	pitch_set_last_AC, 904	noisePow, 909
	SPP, 904	ola_powspec_scale, 908
	timo_AC, 903	params, 908
	winF0 AC, 904	pitch_set_first, 909
	xi_est_AC, 904	pitch_set_last, 909
	xi_est_AC, 904 xi ml AC, 904	. — —
tim	,	powSpec, 909
נוווו	o_params, 905	priorFact, 909
	alpha_const_limits_hz, 906	process, 908
	alpha_const_vals, 906	q_high, 908
	alpha_pitch, 906	q_low, 908
	beta_const, 906	spec_out, 909
	delta_pitch, 906	tAC, 908
	f0_high, 906	timoConfig, 908
	f0_low, 906	winF0, 908
	gain_min_db, 906	xi_est, 909
	in_cfg, 906	xi_min, 908
	kappa_const, 906	xi_ml, 909
	lambda_thresh, 906	xiOpt, 909
	noisePow_name, 906	timoSmooth, 910
	prior_q, 906	∼timoSmooth, 911
	timo_params, 905	alpha_const_limits_hz, 913
	winF0, 906	alpha_const_vals, 913
	xi_min_db, 906	alpha_pitch, 912
	xi_opt_db, 906	beta_const, 912
tim	oConfig, 906	delta_pitch, 912
	∼timoConfig, 908	f0_high, 912
	ac, 908	f0_low, 912
	alpha_const, 908	gain_min_db, 913
	alpha_frame, 909	kappa_const, 912
	alpha_hat, 909	lambda_thresh, 912
	alpha_prev, 909	noisePow_name, 913
	copy_AC, 908	on_model_param_valuechanged, 91
	fftlen, 908	patchbay, 913
	GLRexp, 909	prepare, 912
	GLR, 909	prepared, 913
	gain_min, 908	prior_q, 913

process, 911	tz
release, 912	mha_tictoc_t, 461
spp, 913	
timoSmooth, 911	U
update_cfg, 912	rt_nlms_t, 865
win_f0, 913	UCL
xi_min_db, 912	AuditoryProfile::parser_t::ear_t, 210
xi_opt_db, 913	AuditoryProfile::profile_t::ear_t, 213
timoSmooth.cpp, 1036	UPrew
INSERT_PATCH, 1037	prediction_error_config, 858
INSERT_VAR, 1037	UPrewW
PATCH VAR, 1037	prediction_error_config, 858
timoconfig.cpp, 1036	UbufferPrew
CHANLOOP, 1036	prediction_error_config, 857
EPSILON, 1036	Uflt
LPSCALE, 1036	rt_nlms_t, 865
OVERLAP FACTOR, 1036	uint_mode
POWSPEC_FACTOR, 1036	addsndfile::addsndfile_if_t, 175
timoconfig.h, 1036	uint_vector_t
timosmooth.h, 1037	MHASignal::uint_vector_t, 776
	underflow
tmp_spec	MHAFilter::polyphase_resampling_t, 529
MHAFilter::smoothspec_t, 534	unit
tmp_wave	MHAOvlFilter::fscale_t, 590
MHAFilter::smoothspec_t, 534	unit2hz
to_from	MHAOvlFilter::scale_var_t, 599
acTransform_wave, 171	unlock_channels
acTransform_wave_config, 172	fw_vars_t, 326
total_read	unlock_srate_fragsize
io_file_t, 339	fw_vars_t, 326
transducers.cpp, 1037	unset_fb_pars
kw_index2type, 1038	DynComp::dc_afterburn_t, 281
rmslevelmeter, 1038	up
rtcalibrator, 1038	MHASignal::schroeder_t, 765
vint_0123n1, 1038	up_incl
transfer_function_t	MHAParser::range_var_t, 661
MHAFilter::transfer_function_t, 537	up_limit
trigger_processing	MHAParser::range_var_t, 661
MHAPlugin_Split::split_t, 715	MHASignal::quantizer_t, 759
MHAPlugin_Split::splitted_part_t, 721	up_thresh
trim	acPooling_wave_config, 157
MHAParser, 107	update
try_accept	ac2lsl::ac2lsl_t, 128
MHA_TCP::Server, 449	ac2wave_if_t, 141
try_write	addsndfile::addsndfile_if_t, 174
MHA_TCP::Connection, 442	adm_if_t, 189
ttl	calibrator_t, 219
ac2osc_t, 139	coherence::cohflt_if_t, 224
tv1	dc::dc_if_t, 240
mha_tictoc_t, 461	
	dc::wideband_inhib_vars_t, 248
tv2	delay::interface_t, 260
mha_tictoc_t, 461	DynComp::dc_afterburn_t, 282

DynComp::gaintable_t, 287	update_filter
frequency_translator_t, 319	MHAFilter::iir_filter_t, 508
MHA_AC::ac2matrix_t, 383	update_frame
MHA_AC::acspace2matrix_t, 387	addsndfile::level_adapt_t, 177
MHA_AC::stat_t, 394	fader_wave::level_adapt_t, 309
MHAMultiSrc::spectrum_t, 576	update_gain
MHAMultiSrc::waveform_t, 578	gain::gain_if_t, 328
MHAParser::mhaconfig_mon_t, 647	update_gain_mon
MHAPlugin Split::split t, 715	dc_simple::dc_if_t, 251
mhachain::chain_base_t, 465	update_hz
nlms_t, 818	MHAOvIFilter::fscale_bw_t, 589
overlapadd::overlapadd_if_t, 826	MHAOvlFilter::fscale_t, 590
plingploing::if_t, 832	update_level
route::interface_t, 862	dc_simple::dc_if_t, 251
smoothgains_bridge::overlapadd_if_←	update_level_mon
t, 880	dc_simple::dc_if_t, 251
softclip_t, 883	update_levels
spec2wave_if_t, 887	multibandcompressor::plugin_signals_t,
wave2spec_if_t, 916	815
update_bbgain	
gain::gain_if_t, 328	update_m matrixmixer::matmix_t, 380
	- ·
update_burner	update_minmax
DynComp::dc_afterburn_t, 281	gain::gain_if_t, 328
update_cfg	update_mode
acConcat_wave, 146	ac2osc_t, 138
acPooling_wave, 155	update_monitors
acSteer, 167	dc::dc_if_t, 240
acTransform_wave, 171	update_mu
delaysum::delaysum_if_t, 262	MHAFilter::adapt_filter_t, 482
doasym_classification, 267	update_ntaps
doasvm_feature_extraction, 271	MHAFilter::adapt_filter_t, 482
example6_t, 303	update_parser
fader_if_t, 305	windowselector_t, 925
fftfbpow::fftfbpow_interface_t, 311	update_proc_load
fftfilterbank::fftfb_interface_t, 315	mhachain::plugs_t, 468
lpc, 366	update_ramplen
lpc_bl_predictor, 369	altplugs_t, 201
lpc_burglattice, 373	update_recmode
multibandcompressor::interface_t, 814	acmon::acmon_t, 152
noise_t, 820	update_selector_list
noisePowProposedScale::interface_t, 822	altplugs_t, 201
plugin_interface_t, 839	update_tau_level
prediction_error, 854	calibrator_t, 219
sine_t, 877	updated
steerbf, 894	windowselector_t, 925
timoSmooth, 912	updater
update_coeffs	MHAOvlFilter::fscale_bw_t, 589
MHAFilter::fftfilter_t, 491	MHAOvlFilter::fscale_t, 590
MHAFilter::fftfilterbank_t, 495	upper_threshold
update_dc	acPooling_wave, 155
dc_simple::dc_if_t, 251	upsample.cpp, 1038

upsampling_factor MHAFilter::polyphase_resampling_t, 529	acConcat_wave_config, 147 vGCC_name
upscale	doasym_classification, 267
MHASignal::quantizer_t, 759	doasvm_feature_extraction, 271
us_t, 913	vGCC
antialias, 914	acConcat_wave_config, 147
prepare, 914	doasvm_feature_extraction_config, 272
process, 914	vLTASS_combined_lev
ratio, 914	speechnoise.cpp, 1033
release, 914	vLTASS_female_lev
us_t, 914	speechnoise.cpp, 1033
use_date	vLTASS_freq
wavrec_t, 921	speechnoise.cpp, 1032
use_frozen_	vLTASS_male_lev
cfg_t, 222	speechnoise.cpp, 1033
use_jack_transport	vMHAOrigFreq
MHAIOJackdb::io_jack_t, 547	speechnoise.cpp, 1032
MHAJack::client_t, 565	· · · · · · · · · · · · · · · · · · ·
use_mat	vMHAOrigSpec
acmon::ac_monitor_t, 150	speechnoise.cpp, 1032
use_own_ac	vOlnoiseFreq
altplugs_t, 202	speechnoise.cpp, 1033
use_sine	vOlnoiseLev
cpuload_t, 235	speechnoise.cpp, 1033
use_smoothspec	val2str
smoothgains_bridge::smoothspec_←	MHAParser::StrCnv, 111, 112
wrap_t, 881	validate
use_wbinhib	AuditoryProfile::parser_t::fmap_t, 211
dc::dc_vars_t, 245	MHAParser::keyword_list_t, 634
user	MHAParser::kw_t, 637
MHAParser::window_t, 687	MHAParser::range_var_t, 660, 661
user_err_msg	validator_channels
MHAIOFile.cpp, 1004	mhasndfile.cpp, 1023
MHAIOJack.cpp, 1007	validator_length
MHAIOJackdb.cpp, 1009	mhasndfile.cpp, 1023
MHAIOParser.cpp, 1012	value
MHAIOPortAudio.cpp, 1015	AuditoryProfile::parser_t::fmap_t, 211
MHAIOTCP.cpp, 1019	MHASignal::ringbuffer_t, 761
user_t	MHASignal::spectrum_t, 769
MHAWindow::user_t, 809	MHASignal::waveform_t, 781, 782
username	mha_signal.hh, 995
MHA_AC::ac2matrix_helper_t, 382	Vector and matrix processing toolbox, 49-
userwnd	52
windowselector_t, 925	value_type
······ac···cciccici_i, c_c	mha_dblbuf_t, 402
v_G	mha_fifo_t, 422
prediction_error_config, 857	valuechanged
vFlog	MHAParser::base_t, 607
DynComp::gaintable_t, 289	variable, 4
vGCC_ac	variable_t
doasvm_feature_extraction_config, 272	MHAParser::variable_t, 667
vGCC_con	variables, 4

acsave::acsave_t, 160	integrate, 47
varlist	lin2db, 42
ac2lsl::ac2lsl_t, 129	max, 58
ac2lsl::cfg_t, 130	maxabs, 56, 57
acmon::acmon_t, 152	mha_real_t, 41
acsave::acsave_t, 160	min, 58
acsave::cfg_t, 162	operator*=, 53, 54
varlist_t	operator [∧] =, <mark>55</mark>
acsave::acsave_t, 159	operator+=, 53, 54
vars	operator-=, 53
ac2lsl::ac2lsl_t, 129	operator/=, 54
ac2osc_t, 139	pa22dbspl, 43
acmon::acmon_t, 152	pa2dbspl, <mark>42</mark>
analysispath_if_t, 206	rad2smp, 45
calibrator_t, 219	range, 41
coherence::cohflt_if_t, 224	rmslevel, 56, 57
MHAKernel::algo_comm_class_t, 572	sec2smp, 43
vars_t	size, 47, 48
coherence::vars_t, 228	smp2rad, 44
MHAOvlFilter::overlap_save_filterbank_	smp2sec, 43
t::vars t, 597	std_vector_float, 52
vbark	std_vector_vector_complex, 53
MHAOvlFilter::barkscale, 100	std_vector_vector_float, 52
vbin1	
	sumsqr_channel, 58
MHAOvlFilter::fftfb_t, 584	sumsqr_frame, 59
vbin2	timeshift, 49
MHAOvlFilter::fftfb_t, 584	value, 49–52
vcomplex_mon_t	vF
MHAParser::vcomplex_mon_t, 669	DynComp::gaintable_t, 289
vcomplex_t	vfloat_mon_t
MHAParser::vcomplex_t, 672	MHAParser::vfloat_mon_t, 674
vec	vfloat_t
ac2lsl::save_var_t< mha_complex_t >,	MHAParser::vfloat_t, 676
135	vfreq
vec_y	MHAOvlFilter::barkscale, 100
MHATableLookup::linear_table_t, 794	vint_0123n1
Vector and matrix processing toolbox, 36	transducers.cpp, 1038
assign, 48, 49	vint_mon_t
bin2freg, 44	MHAParser::vint mon t, 678
channels, 41	vint t
clear, 48	 MHAParser::vint_t, 680
colored_intensity, 56	vL
conjugate, 59	DynComp::gaintable_t, 288
copy_channel, 55	vmax
db2lin, 42	gain::gain_if_t, 328
dbspl2pa, 43	vmin
• •	
dupvec, 45	gain::gain_if_t, 328
dupvec_chk, 46	vstring_mon_t
equal_dim, 46, 47	MHAParser::vstring_mon_t, 682
for_each, 42	vstring_t
freq2bin, 44	MHAParser::vstring_t, 684

vy	MILATable actionalizacy table t 704	wave2spec_scale
	MHATableLookup::linear_table_t, 794	MHASignal::fft_t, 740 wave2spec_t, 917
W		• — ;
	MHA_TCP::OS_EVENT_TYPE, 446	~wave2spec_t, 918
	MHAFilter::adapt_filter_state_t, 481	calc_in, 919
w		calc_pre_wnd, 918
•••	ac2wave_t, 142	ft, 918
	doasym_classification, 267	in_buf, 919
	MHAOvIFilter::fftfb_t, 584	npad1, 918
w_c	- '	npad2, 918
··_c	combc_t, 231	nwnd, 918
WIN	JAPI	nwndshift, 918
••••	mha_plugin.hh, 981	process, 918
wIR	S_fft	spec_in, 919
*****	MHAFilter::fftfilter_t, 493	wave2spec_t, 918
wln		window, 919
VV 11 1	MHAFilter::fftfilter t, 493	wave2wave
wln	put_fft	plugindescription_t, 841
VVIII	MHAFilter::fftfilter_t, 492	wave_fifo
wO	utput	analysepath_t, 204
WO	MHAFilter::fftfilter t, 493	wave_in
wO.	utput_fft	MHAPlugin_Split::domain_handler_t, 707
WO	MHAFilter::fftfilter_t, 493	wave_in1
wait		overlapadd::overlapadd_t, 828
wan	MHA_TCP::Event_Watcher, 445	wave_out
woit	-	MHAPlugin_Split::domain_handler_t, 707
wan	t_for_decrease	MHAPlugin_Split::split_t, 717
	mha_fifo_posix_threads_t, 419	wave_out1
	mha_fifo_thread_platform_t, 427	overlapadd::overlapadd_t, 829
wan	t_for_increase	wave_reader
	mha_fifo_posix_threads_t, 419	addsndfile, 78
14/01	mha_fifo_thread_platform_t, 427	waveform_proxy_t
vvai	keup_Event	addsndfile::waveform_proxy_t, 181
	MHA_TCP::Wakeup_Event, 460	waveform t
wav	re2spec	MHA_AC::waveform_t, 395
	MHASignal::fft_t, 739	MHAMultiSrc::waveform_t, 578
	plugindescription_t, 841	MHASignal::waveform_t, 780
wav	re2spec.cpp, 1038	wavrec.cpp, 1038
	MHAPLUGIN_OVERLOAD_OUTDOM AND 1000	DEBUG, 1039
	AIN, 1038	wavrec_t, 919
wav	re2spec_if_t, 915	fifolen, 921
	algo, 916	minwrite, 921
	nfft, 916	,
	nwnd, 916	patchbay, 921
	patchbay, 916	prefix, 921
	prepare, 916	prepare, 920
	process, 916	process, 920
	return_wave, 916	record, 921
	update, 916	release, 920
	wave2spec_if_t, 916	start_new_session, 920
	window_config, 916	use_date, 921
	wndpos, 916	wavrec_t, 920

wavwriter_t, 921	patchbay, 925
~wavwriter_t, 922	update_parser, 925
act_, 922	updated, 925
cf_, 922	userwnd, 925
close_session, 922	windowselector t, 924
data, 922	wnd, 925
fifo, 922	wndexp, 925
minw , 922	wndtype, 925
process, 922	wnd
sf, 922	addsndfile::level_adapt_t, 177
wavwriter_t, 922	fader_wave::level_adapt_t, 309
write_thread, 922	windowselector_t, 925
writethread, 922	wnd bartlett
wb_inhib_cfg_t	MHAParser::window_t, 686
dc::wb_inhib_cfg_t, 247	wnd_blackman
wbinhib	MHAParser::window_t, 686
dc::dc_if_t, 240	wnd_funs
weights	mha_windowparser.cpp, 1000
dc::wb_inhib_cfg_t, 247	wnd_hamming
dc::wideband_inhib_vars_t, 248	MHAParser::window_t, 686
delaysum::delaysum_if_t, 262	wnd_hann
delaysum::delaysum_t, 264	MHAParser::window_t, 686
what	wnd_rect
MHA_Error, 414	MHAParser::window_t, 686
white	wnd_user
speechnoise_t, 891	MHAParser::window_t, 686
wideband_inhib_vars_t	wndexp
dc::wideband_inhib_vars_t, 248	overlapadd::overlapadd_if_t, 827
win_f0	windowselector_t, 925
timoSmooth, 913	wndlen
winF0	doasvm_feature_extraction_config, 272
timo_params, 906	MHAParser::mhaconfig_mon_t, 647
timoConfig, 908	mhaconfig_t, 471
winF0_AC	testplugin::config_parser_t, 899
timo_AC, 904	wndpos
window	overlapadd::overlapadd_if_t, 827
MHAFilter::smoothspec_t, 534	wave2spec_if_t, 916
overlapadd::overlapadd_if_t, 827	wndtype
wave2spec_t, 919	windowselector_t, 925
window_config	worker_thread_priority
spec2wave_if_t, 887	MHAPlugin_Split::split_t, 716
wave2spec_if_t, 916	worker_thread_scheduler
window_t	MHAPlugin_Split::split_t, 716
MHAParser::window_t, 686	wout
windowselector.cpp, 1039	matrixmixer::cfg_t, 378
windowselector.h, 1039	route::process_t, 863
windowselector_t, 923	wout_ac
~windowselector_t, 924	route::process_t, 863
get_window_data, 924	write
insert_items, 924	MHA_TCP::Connection, 442
invalidate_window_data, 925	MHAFilter::blockprocessing_polyphase

_resampling_t, 484	timo AC, 904
MHAFilter::polyphase_resampling_t, 528	<u> </u>
MHAJack::port t, 567	xi_min
MHASignal::matrix_t, 755	timoConfig, 908
<u> </u>	xi_min_db
MHASignal::ringbuffer_t, 762	timo_params, 906
MHASignal::uint_vector_t, 777	timoSmooth, 912
mha_drifter_fifo_t, 409	xi_ml
mha_fifo_lw_t, 416	timoConfig, 909
mha_fifo_t, 422	xi_ml_AC
write_buf	timo_AC, 904
overlapadd::overlapadd_t, 829	xi_opt_db
spec2wave_t, 889	timo_params, 906
write_event	timoSmooth, 913
MHA_TCP::Connection, 443	xiOpt
write_float	noisePowProposedScale::noisePow←
mha_parser.cpp, 975	Proposed, 824
write_ptr	timoConfig, 909
mha_fifo_t, 424	xiOptDb
write_thread	noisePowProposedScale::interface_t, 822
wavwriter_t, 922	xmax
write_wave	MHATableLookup::linear_table_t, 794
mhasndfile.cpp, 1023	xmin
mhasndfile.h, 1024	MHATableLookup::linear_table_t, 794
writeaccess	Xs
MHAParser::base_t, 607	MHAFilter::fftfilterbank_t, 496
writer_started	XW
mha_drifter_fifo_t, 411	MHAFilter::fftfilterbank_t, 496
writer_xruns_in_succession	xy_table_t
mha_drifter_fifo_t, 412	MHATableLookup::xy_table_t, 797
writer_xruns_since_start	xyfun
mha_drifter_fifo_t, 412	MHATableLookup::xy_table_t, 799
writer_xruns_total	MHA Table Lookupxy_table_t, 799
mha_drifter_fifo_t, 412	
writethread	y
wavwriter_t, 922	doasvm_classification, 267
Writing openMHA Plugins. A step-by-step tu-	y0
torial, 10	dc_simple::dc_t::line_t, 254
wtype	y_previous
MHAParser::window_t, 687	rt_nlms_t, 866
wtype_t	YPrew
MHAParser::window t, 686	prediction_error_config, 858
	yfun
X	MHATableLookup::xy_table_t, 799
MHA_TCP::OS_EVENT_TYPE, 446	Yn
MHAFilter::adapt_filter_state_t, 481	MHAFilter::complex_bandpass_t, 488
X	MHAFilter::iir_ord1_real_t, 511
doasvm_classification, 267	Ys
xfun	MHAFilter::fftfilterbank_t, 497
MHATableLookup::xy_table_t, 799	yw
xi_est	MHAFilter::fftfilterbank_t, 496
timoConfig, 909	yw_temp
xi_est_AC	MHAFilter::fftfilterbank_t, 497
- -	<u> </u>

```
zeros
ac2wave_if_t, 141
zerowindow
overlapadd::overlapadd_if_t, 827
```