The Open Master Hearing Aid (openMHA)

4.5.8

Plugin Developers' Manual



© 2005-2018 by HörTech gGmbH, Marie-Curie-Str. 2, D-26129 Oldenburg, Germany

LICENSE AGREEMENT

This file is part of the HörTech Open Master Hearing Aid (openMHA) Copyright © 2005 2006 2007 2008 2009 2010 2012 2013 2014 2015 2016 HörTech gGmbH. Copyright © 2017 2018 HörTech gGmbH.

openMHA is free software: you can redistribute it and/or modify it under the terms of the GNU Affero General Public License as published by the Free Software Foundation, version 3 of the License.

openMHA is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Affero General Public License, version 3 for more details.

You should have received a copy of the GNU Affero General Public License, version 3 along with openMHA. If not, see http://www.gnu.org/licenses/>.

Contents

1	Over	view	1
	1.1	Structure	1
	1.2	Platform Services and Conventions	2
2	Todo	List	4
3	Modu	ule Documentation	4
	3.1	Concept of Variables and Data Exchange in the openMHA	4
	3.2		6
	3.3		10
	3.4		26
	3.5		27
	3.6	lacksquare	31
	3.7	5 1	33
	3.8		34
	3.9	a april a series a se	36
	3.10		60
	3.11		70
	0.11	Tast Found Transform functions	, 0
4	Name		77
	4.1		77
	4.2	· · · · · · · · · · · · · · · · · · ·	77
	4.3	·	78
	4.4	· · · · · · · · · · · · · · · · · · ·	78
	4.5	·	79
	4.6		80
	4.7	·	80
	4.8		81
	4.9	_	81
	4.10		82
	4.11		82
	4.12		83
		_	84
	4.14	·	85
	4.15		85
	4.16	·	85
	4.17	-	85
	4.18	'	86
	4.19	-	87
	4.20	·	89
	4.21	· · · · · · · · · · · · · · · · · · ·	89
	4.22	· ·	90
	4.23	·	94
	4.24		94
	4.25	· · · · · · · · · · · · · · · · · · ·	94
	4.26	·	95
	4.27	· · · · · · · · · · · · · · · · · · ·	97
	4.28	· · · · · · · · · · · · · · · · · · ·	97
	4.29	•	98
	4.30	MHAOvIFilter::barkscale Namespace Reference	99

	4.31	MHAOvlFilter::FreqScaleFun Namespace Reference	99
	4.32	MHAOvlFilter::ShapeFun Namespace Reference	02
	4.33	MHAParser Namespace Reference	03
	4.34	MHAParser::StrCnv Namespace Reference	80
	4.35	MHAPlugin Namespace Reference	12
	4.36	MHAPlugin_Resampling Namespace Reference	12
	4.37	MHAPlugin_Split Namespace Reference	
	4.38	MHASignal Namespace Reference	
	4.39	MHASndFile Namespace Reference	
	4.40	MHATableLookup Namespace Reference	
	4.41	MHAWindow Namespace Reference	
	4.42	multibandcompressor Namespace Reference	
	4.43	noisePowProposedScale Namespace Reference	
	4.44	overlapadd Namespace Reference	
	4.45	PluginLoader Namespace Reference	
	4.46	route Namespace Reference	
	4.47	shadowfilter_begin Namespace Reference	
	4.48	shadowfilter_end Namespace Reference	
	4.49	smoothgains_bridge Namespace Reference	
	4.45	smootingains_bridge Namespace reference	25
5	Class	s Documentation 1	26
	5.1	ac2lsl::ac2lsl_t Class Reference	26
	5.2	ac2lsl::cfg_t Class Reference	
	5.3	ac2lsl::save_var_base_t Class Reference	
	5.4	ac2lsl::save_var_t< T > Class Template Reference	
	5.5	ac2lsl::save_var_t< mha_complex_t > Class Template Reference	
	5.6	ac2wave if t Class Reference	
	5.7	ac2wave t Class Reference	
	5.8	acConcat_wave Class Reference	
	5.9	acConcat_wave_config Class Reference	
	5.10	acmon::ac monitor t Class Reference	
	5.11	acmon::acmon t Class Reference	
	_	acPooling_wave Class Reference	
		acPooling_wave_config Class Reference	
	5.14	acsave::acsave t Class Reference	
	5.15	acsave::cfg_t Class Reference	
	5.16	acsave::mat4head_t Struct Reference	
	5.17	acsave::save_var_t Class Reference	
	5.18	acSteer Class Reference	
	5.19	acSteer_config Class Reference	
	5.19	acTransform wave Class Reference	
	5.21	acTransform_wave_config Class Reference	
	5.22	addsndfile::addsndfile_if_t Class Reference	
	5.23	addsndfile::level_adapt_t Class Reference	
		— · —	
	5.24	addsndfile::resampled_soundfile_t Class Reference	
	5.25	addsndfile::sndfile_t Class Reference	
	5.26	addsndfile::waveform_proxy_t Class Reference	
	5.27	ADM::ADM < F > Class Template Reference	
	5.28	ADM::Delay< F > Class Template Reference	
	5.29	ADM::Linearphase_FIR< F > Class Template Reference	
	5.30	adm_if_t Class Reference	
	5.31	adm_rtconfig_t Class Reference	86

vi CONTENTS

5.32	algo_comm_t Struct Reference	190
5.33	altplugs_t Class Reference	195
5.34	analysepath_t Class Reference	199
5.35	analysispath_if_t Class Reference	201
5.36	AuditoryProfile::fmap_t Class Reference	203
5.37	AuditoryProfile::parser_t Class Reference	204
5.38	AuditoryProfile::parser_t::ear_t Class Reference	205
5.39	AuditoryProfile::parser_t::fmap_t Class Reference	206
5.40	AuditoryProfile::profile_t Class Reference	208
5.41	AuditoryProfile::profile_t::ear_t Class Reference	209
5.42	bbcalib_interface_t Class Reference	
5.43	calibrator_runtime_layer_t Class Reference	211
5.44	calibrator t Class Reference	213
5.45	calibrator_variables_t Class Reference	215
5.46	cfg_t Class Reference	
5.47	coherence::cohflt_if_t Class Reference	
5.48	coherence::cohflt_t Class Reference	
5.49	coherence::vars_t Class Reference	
5.50	combc if t Class Reference	
5.51	combc t Class Reference	
5.52	comm_var_t Struct Reference	
5.53	cpuload_t Class Reference	
5.54	db if t Class Reference	
5.55	db_t Class Reference	
5.56	dc::dc_if_t Class Reference	
5.57	dc::dc t Class Reference	
5.58	dc::dc_vars_t Class Reference	
5.59	dc::dc_vars_validator_t Class Reference	
5.60	dc::wb inhib cfg t Class Reference	
5.61	dc::wideband_inhib_vars_t Class Reference	
5.62	dc_simple::dc_if_t Class Reference	
5.63	dc_simple::dc_t Class Reference	
5.64		
	dc_simple::dc_vars_t Class Reference	
5.66	dc_simple::dc_vars_validator_t Class Reference	
5.67	dc_simple::level_smoother_t Class Reference	
5.68	delay::interface_t Class Reference	
5.69	delaysum::delaysum_if_t Class Reference	
5.70	delaysum::delaysum_t Class Reference	
5.71	doasym classification Class Reference	
5.72	doasvm_classification_config Class Reference	
5.73	doasym_feature_extraction Class Reference	
5.74	doasym_feature_extraction_config Class Reference	
5.75	droptect_t Class Reference	
5.76	ds_t Class Reference	
5.77	dynamiclib_t Class Reference	
5.78	DynComp::dc_afterburn_rt_t Class Reference	
5.79	DynComp::dc_afterburn_t Class Reference	
5.80	DynComp::dc_afterburn_vars_t Class Reference	
5.81	DynComp::gaintable_t Class Reference	
5.82	example1_t Class Reference	
5.02	champion_t Olass Helefellos	200

CONTENTS vii

5.83	example2_t Class Reference	287
5.84	example3_t Class Reference	290
5.85	example4_t Class Reference	294
5.86	example5_t Class Reference	297
5.87	example6_t Class Reference	298
5.88	expression_t Class Reference	300
5.89	fader_if_t Class Reference	300
5.90	fader_wave::fader_wave_if_t Class Reference	302
5.91	fader_wave::level_adapt_t Class Reference	304
5.92	fftfilterbank::fftfb_interface_t Class Reference	305
5.93	fftfilterbank::fftfb_plug_t Class Reference	309
5.94	frequency_translator_t Class Reference	
5.95	fw t Class Reference	
5.96	fw_vars_t Class Reference	
5.97	gain::gain_if_t Class Reference	
5.98	gain::scaler_t Class Reference	
	hanning_ramps_t Class Reference	
	hilbert_shifter_t Class Reference	
	identity_t Class Reference	
	iirfilter_t Class Reference	
	io_file_t Class Reference	
	io_lib_t Class Reference	
	io_parser_t Class Reference	
	io_tcp_fwcb_t Class Reference	
	io_tcp_parser_t Class Reference	
	io_tcp_sound_t Class Reference	
	io_tcp_sound_t::float_union Union Reference	
	io_tcp_t Class Reference	
	latex_doc_t Class Reference	
	Ipc Class Reference	
	lpc_bl_predictor Class Reference	
	lpc_bl_predictor_config Class Reference	
	lpc burglattice Class Reference	364
	Ipc_burglattice_config Class Reference	
	Ipc_config Class Reference	
	matrixmixer::cfg_t Class Reference	
	matrixmixer::matmix t Class Reference	
	MHA_AC::ac2matrix_helper_t Class Reference	
	MHA_AC::ac2matrix_t Class Reference	
	MHA_AC::acspace2matrix_t Class Reference	
	MHA_AC::double_t Class Reference	
	MHA_AC::float_t Class Reference	
	MHA AC::int t Class Reference	
	MHA_AC::spectrum_t Class Reference	
	MHA_AC::stat_t Class Reference	
	MHA_AC::waveform_t Class Reference	
	mha_audio_descriptor_t Struct Reference	
	mha_audio_t Struct Reference	
	mha_channel_info_t Struct Reference	
	mha_complex_t Struct Reference	
5.133	$\label{eq:mha_dblbuf_t} \mbox{mha_dblbuf_t} < \mbox{FIFO} > \mbox{Class Template Reference} \qquad . \qquad . \qquad . \qquad . \qquad . \qquad . \\$	393

viii CONTENTS

5.134 mha_direction_t Struct Reference	399
5.135 mha_drifter_fifo_t< T > Class Template Reference	400
5.136 MHA_Error Class Reference	406
5.137 mha_fifo_lw_t< T > Class Template Reference $\dots \dots \dots \dots \dots \dots \dots$	408
5.138 mha_fifo_posix_threads_t Class Reference	411
5.139 mha_fifo_t $<$ T $>$ Class Template Reference	413
5.140 mha_fifo_thread_guard_t Class Reference	417
5.141 mha_fifo_thread_platform_t Class Reference	418
5.142 mha_rt_fifo_element_t< T > Class Template Reference	421
5.143 mha_rt_fifo_t< T > Class Template Reference	422
5.144 mha_spec_t Struct Reference	425
5.145 MHA_TCP::Async_Notify Class Reference	427
5.146 MHA TCP::Client Class Reference	
5.147 MHA_TCP::Connection Class Reference	430
5.148 MHA_TCP::Event_Watcher Class Reference	
5.149 MHA_TCP::OS_EVENT_TYPE Struct Reference	
5.150 MHA TCP::Server Class Reference	
5.151 MHA_TCP::Sockaccept_Event Class Reference	
5.152 MHA_TCP::Sockread_Event Class Reference	
5.153 MHA TCP::Sockwrite Event Class Reference	
5.154 MHA_TCP::Thread Class Reference	
5.155 MHA_TCP::Timeout_Event Class Reference	
5.156 MHA_TCP::Timeout_Watcher Class Reference	
5.157 MHA_TCP::Wakeup_Event Class Reference	
5.158 mha_tictoc_t Struct Reference	
5.159 mha_wave_t Struct Reference	
5.160 mhachain::chain_base_t Class Reference	
5.161 mhachain::mhachain_t Class Reference	
5.162 mhachain::plugs_t Class Reference	
5.163 mhaconfig_t Struct Reference	
5.164 MHAEvents::connector_base_t Class Reference	
5.165 MHAEvents::connector_t< receiver_t > Class Template Reference	
5.166 MHAEvents::emitter t Class Reference	469
5.167 MHAEvents::patchbay_t< receiver_t > Class Template Reference	
5.168 MHAFilter::adapt_filter_param_t Class Reference	
5.169 MHAFilter::adapt_filter_state_t Class Reference	
5.170 MHAFilter::adapt_filter_t Class Reference	
5.171 MHAFilter::blockprocessing_polyphase_resampling_t Class Reference	
5.172 MHAFilter::complex_bandpass_t Class Reference	
5.173 MHAFilter::diff_t Class Reference	
5.174 MHAFilter::fftfilter_t Class Reference	
5.175 MHAFilter::fftfilterbank_t Class Reference	
5.176 MHAFilter::filter t Class Reference	
5.177 MHAFilter::gamma_flt_t Class Reference	
5.178 MHAFilter::iir_filter_state_t Class Reference	
5.179 MHAFilter::iir_filter_t Class Reference	
5.180 MHAFilter::iir_ord1_real_t Class Reference	
5.181 MHAFilter::01_ar_filter_t Class Reference	
5.182 MHAFilter::01flt_lowpass_t Class Reference	
5.183 MHAFilter::01flt_maxtrack_t Class Reference	
5.184 MHAFilter::o1flt_mintrack_t Class Reference	ЭH

CONTENTS ix

5.185 MHAFilter::partitioned_convolution_t Class Reference	513
5.186 MHAFilter::partitioned_convolution_t::index_t Struct Reference	. 517
5.187 MHAFilter::polyphase_resampling_t Class Reference	518
5.188 MHAFilter::resampling_filter_t Class Reference	523
5.189 MHAFilter::smoothspec_t Class Reference	
5.190 MHAFilter::thirdoctave analyzer t Class Reference	
5.191 MHAFilter::transfer_function_t Struct Reference	
5.192 MHAFilter::transfer_matrix_t Struct Reference	
5.193 MHAIOJack::io_jack_t Class Reference	
5.194 MHAIOJackdb::io_jack_t Class Reference	
5.195 MHAIOPortAudio::device_info_t Class Reference	
5.196 MHAIOPortAudio::io_portaudio_t Class Reference	
5.197 MHAJack::client_avg_t Class Reference	
5.198 MHAJack::client_noncont_t Class Reference	
5.199 MHAJack::client_t Class Reference	
5.200 MHAJack::port_t Class Reference	
5.201 MHAKernel::algo_comm_class_t Class Reference	
5.202 MHAKernel::comm_var_map_t Class Reference	
5.203 MHAMultiSrc::base_t Class Reference	
5.204 MHAMultiSrc::channel_t Class Reference	
5.205 MHAMultiSrc::channels_t Class Reference	
5.206 MHAMultiSrc::spectrum_t Class Reference	
5.207 MHAMultiSrc::waveform_t Class Reference	
5.208 MHAOvlFilter::band_descriptor_t Class Reference	
5.209 MHAOvlFilter::barkscale::bark2hz_t Class Reference	
5.210 MHAOvlFilter::barkscale::hz2bark_t Class Reference	
5.211 MHAOvlFilter::fftfb_ac_info_t Class Reference	
5.212 MHAOvlFilter::fftfb_t Class Reference	
5.213 MHAOvlFilter::fftfb_vars_t Class Reference	
5.214 MHAOvlFilter::fscale_bw_t Class Reference	
5.215 MHAOvlFilter::fscale_t Class Reference	
5.216 MHAOvlFilter::fspacing_t Class Reference	
5.217 MHAOvlFilter::overlap_save_filterbank_analytic_t Class Reference	. 585
5.218 MHAOvlFilter::overlap_save_filterbank_t Class Reference	
5.219 MHAOvlFilter::overlap_save_filterbank_t::vars_t Class Reference	. 588
5.220 MHAOvlFilter::scale_var_t Class Reference	
5.221 MHAParser::base_t Class Reference	
5.222 MHAParser::base_t::replace_t Class Reference	601
5.223 MHAParser::bool_mon_t Class Reference	602
5.224 MHAParser::bool_t Class Reference	603
5.225 MHAParser::c_ifc_parser_t Class Reference	606
5.226 MHAParser::commit_t< receiver_t > Class Template Reference	608
5.227 MHAParser::complex_mon_t Class Reference	
5.228 MHAParser::complex_t Class Reference	
5.229 MHAParser::entry_t Class Reference	
5.230 MHAParser::expression_t Class Reference	
5.231 MHAParser::float_mon_t Class Reference	
5.232 MHAParser::float_t Class Reference	
5.233 MHAParser::int_mon_t Class Reference	
5.234 MHAParser::int t Class Reference	
5.235 MHAParser::keyword_list_t Class Reference	
5.255 4.65765	- U- 1

X CONTENTS

5.236 MHAParser::kw_t Class Reference	627
5.237 MHAParser::mcomplex_mon_t Class Reference	630
5.238 MHAParser::mcomplex_t Class Reference	632
5.239 MHAParser::mfloat_mon_t Class Reference	634
5.240 MHAParser::mfloat_t Class Reference	635
5.241 MHAParser::mhaconfig_mon_t Class Reference	638
5.242 MHAParser::mhapluginloader_t Class Reference	640
5.243 MHAParser::monitor_t Class Reference	
5.244 MHAParser::parser_t Class Reference	
5.245 MHAParser::range_var_t Class Reference	
5.246 MHAParser::string_mon_t Class Reference	
5.247 MHAParser::string_t Class Reference	
5.248 MHAParser::variable_t Class Reference	
5.249 MHAParser::vcomplex_mon_t Class Reference	
5.250 MHAParser::vcomplex_t Class Reference	
5.251 MHAParser::vfloat_mon_t Class Reference	
5.252 MHAParser::vfloat_t Class Reference	
5.253 MHAParser::vint_mon_t Class Reference	
5.254 MHAParser::vint_t Class Reference	
5.255 MHAParser::vstring_mon_t Class Reference	
5.256 MHAParser::vstring_troil_t Class Reference	
	
5.257 MHAParser::window_t Class Reference	
5.258 mhaplug_cfg_t Class Reference	
5.259 MHAPlugin::cfg_chain_t< runtime_cfg_t > Class Template Reference	
5.260 MHAPlugin::config_t < runtime_cfg_t > Class Template Reference	
5.261 MHAPlugin::plugin_t< runtime_cfg_t > Class Template Reference	
5.262 MHAPlugin_Resampling::resampling_if_t Class Reference	
5.263 MHAPlugin_Resampling::resampling_t Class Reference	
5.264 MHAPlugin_Split::domain_handler_t Class Reference	
5.265 MHAPlugin_Split::dummy_threads_t Class Reference	
5.266 MHAPlugin_Split::posix_threads_t Class Reference	
2 7 1 1 2 1 2 1 1 1 1 1 1 1 1 1 1 1 1 1	
	706
5.269 MHAPlugin_Split::thread_platform_t Class Reference	
5.270 MHAPlugin_Split::uni_processor_t Class Reference	
5.271 mhaserver_t Class Reference	
5.272 MHASignal::async_rmslevel_t Class Reference	
5.273 MHASignal::delay_spec_t Class Reference	
5.274 MHASignal::delay_t Class Reference	
5.275 MHASignal::delay_wave_t Class Reference	
5.276 MHASignal::doublebuffer_t Class Reference	
5.277 MHASignal::fft_t Class Reference	
5.278 MHASignal::hilbert_fftw_t Class Reference	
5.279 MHASignal::hilbert_t Class Reference	731
5.280 MHASignal::loop_wavefragment_t Class Reference	700
	/33
5.281 MHASignal::matrix_t Class Reference	
· · · · · · · · · · · · · · · · · · ·	737
5.281 MHASignal::matrix_t Class Reference	737 745
5.281 MHASignal::matrix_t Class Reference	737 745 747
5.281 MHASignal::matrix_t Class Reference	737 745 747 748
5.281 MHASignal::matrix_t Class Reference 5.282 MHASignal::minphase_t Class Reference 5.283 MHASignal::quantizer_t Class Reference 5.284 MHASignal::ringbuffer_t Class Reference	737 745 747 748 752

CONTENTS xi

5.287 MHASignal::stat_t Class Reference	. 760
5.288 MHASignal::subsample_delay_t Class Reference	. 761
5.289 MHASignal::uint_vector_t Class Reference	. 764
5.290 MHASignal::waveform_t Class Reference	. 767
5.291 MHASndFile::sf t Class Reference	
5.292 MHASndFile::sf_wave_t Class Reference	. 778
5.293 MHATableLookup::linear_table_t Class Reference	
5.294 MHATableLookup::table_t Class Reference	
5.295 MHATableLookup::xy_table_t Class Reference	
5.296 MHAWindow::bartlett_t Class Reference	
5.297 MHAWindow::base_t Class Reference	
5.298 MHAWindow::blackman_t Class Reference	
5.299 MHAWindow::fun t Class Reference	
5.300 MHAWindow::hamming_t Class Reference	
5.301 MHAWindow::hanning_t Class Reference	
5.302 MHAWindow::rect_t Class Reference	
5.303 MHAWindow::user_t Class Reference	
5.304 mon_t Class Reference	
5.305 multibandcompressor::fftfb_plug_t Class Reference	
5.306 multibandcompressor::interface_t Class Reference	
5.307 multibandcompressor::plugin_signals_t Class Reference	
5.308 nlms_t Class Reference	
5.309 noise_t Class Reference	
5.310 noisePowProposedScale::interface_t Class Reference	
5.311 noisePowProposedScale::noisePowProposed Class Reference	
5.312 overlapadd_if_t Class Reference	
5.313 overlapadd_t Class Reference	
5.314 parser_int_dyn Class Reference	
5.315 plug_t Class Reference	. 820
5.316 plugin_interface_t Class Reference	
5.317 pluginbrowser_t Class Reference	. 823
5.318 plugindescription_t Class Reference	. 824
5.319 PluginLoader::config_file_splitter_t Class Reference	. 825
5.320 PluginLoader::fourway_processor_t Class Reference	. 826
5.321 PluginLoader::mhapluginloader_t Class Reference	. 829
5.322 pluginloader_t Class Reference	. 834
5.323 prediction_error Class Reference	. 835
5.324 prediction_error_config Class Reference	
5.325 rmslevel_if_t Class Reference	
5.326 rmslevel_t Class Reference	
5.327 route::interface_t Class Reference	
5.328 route::process_t Class Reference	
5.329 rt nlms t Class Reference	
5.330 RunOnce Struct Reference	
5.331 save_spec_t Class Reference	
5.332 save_wave_t Class Reference	
5.333 shadowfilter_begin::cfg_t Class Reference	
_ * *	
5.334 shadowfilter_begin::shadowfilter_begin_t Class Reference	
5.335 shadowfilter_end::cfg_t Class Reference	
5.336 shadowfilter_end::shadowfilter_end_t Class Reference	
5.337 sine_cfg_t Struct Reference	. 859

xii CONTENTS

	5.338	sine_t Class Reference	860
		smoothgains_bridge::overlapadd_if_t Class Reference	
		smoothgains_bridge::smoothspec_wrap_t Class Reference	
		softclip_t Class Reference	
		softclipper t Class Reference	
		softclipper_variables_t Class Reference	
		spec2wave_if_t Class Reference	
		spec2wave_t Class Reference	
		spec_fader_t Class Reference	
		speechnoise_t Class Reference	
		steerbf Class Reference	
		steerbf_config Class Reference	
		timo_AC Class Reference	
		timo_params Class Reference	
		timoConfig Class Reference	
		timoSmooth Class Reference	
		us_t Class Reference	
		wave2spec_if_t Class Reference	
		wave2spec_t Class Reference	
		wavrec_t Class Reference	
		wavwriter_t Class Reference	
		windowselector_t Class Reference	
	5.558	windowselector_t class helerence	900
6	File D	Occumentation	903
	6.1	ac2lsl.cpp File Reference	
	6.2	ac2wave.cpp File Reference	
	6.3	ac_monitor_type.cpp File Reference	
	6.4	ac_monitor_type.hh File Reference	
	6.5	acConcat_wave.cpp File Reference	
	6.6	acConcat_wave.h File Reference	
	6.7	acmon.cpp File Reference	
	6.8	acPooling_wave.cpp File Reference	
	6.9	acPooling_wave.h File Reference	
	6.10	acsave.cpp File Reference	
	6.11	acSteer.cpp File Reference	
	6.12	acSteer.h File Reference	
	6.13	acTransform_wave.cpp File Reference	
	6.14	acTransform_wave.h File Reference	
	6.15	addsndfile.cpp File Reference	
	6.16	adm.cpp File Reference	
	6.17	adm.hh File Reference	
	6.18	altplugs.cpp File Reference	
	6.19	analysemhaplugin.cpp File Reference	
	6.20	analysispath.cpp File Reference	
	6.21	auditory_profile.cpp File Reference	
	6.22	auditory_profile.h File Reference	
		• • • • • • • • • • • • • • • • • • •	
	6.23	browsemhaplugins.cpp File Reference	
	6.24	coherence.cpp File Reference	
	6.25	combinechannels.cpp File Reference	
	6.26	complex_filter.cpp File Reference	
	6.27	complex_filter.h File Reference	
	6.28	cpuload.cpp File Reference	912

CONTENTS xiii

6.29	db.cpp File Reference	
6.30	dc.cpp File Reference	913
6.31	dc_afterburn.cpp File Reference	913
6.32	dc_afterburn.h File Reference	914
6.33	dc_simple.cpp File Reference	914
6.34	delay.cpp File Reference	915
6.35	delaysum.cpp File Reference	915
6.36	doasym_classification.cpp File Reference	
6.37	doasym_classification.h File Reference	
6.38	doasvm_feature_extraction.cpp File Reference	
6.39	doasym_feature_extraction.h File Reference	
6.40	doc_appendix.h File Reference	
6.41	doc_examples.h File Reference	
6.42	doc_frameworks.h File Reference	
6.43	doc_general.h File Reference	
6.44	doc kernel.h File Reference	
6.45	doc matlab.h File Reference	
6.46	doc_mhamain.h File Reference	
6.47	doc_parser.h File Reference	
6.48	doc plugif.cpp File Reference	
6.49	doc_plugins.h File Reference	
6.50	doc_system.h File Reference	
6.51	doc_toolbox.h File Reference	
6.52	downsample.cpp File Reference	
6.53		
6.54	droptect.cpp File Reference	
6.55	example1.cpp File Reference	
6.56	example3.cpp File Reference	
6.57	example4.cpp File Reference	
6.58	example5.cpp File Reference	
6.59	example6.cpp File Reference	
6.60	fader_spec.cpp File Reference	
6.61	fader_wave.cpp File Reference	919
	fftfilterbank.cpp File Reference	
6.63	fshift_hilbert.cpp File Reference	
6.64	gain.cpp File Reference	
6.65	gaintable.cpp File Reference	
6.66	gaintable.h File Reference	
6.67	generatemhaplugindoc.cpp File Reference	
6.68	hann.cpp File Reference	
6.69	hann.h File Reference	
6.70	identity.cpp File Reference	
6.71	ifftshift.cpp File Reference	
6.72	ifftshift.h File Reference	923
6.73	iirfilter.cpp File Reference	923
6.74	lpc.cpp File Reference	924
6.75	lpc.h File Reference	924
6.76	lpc_bl_predictor.cpp File Reference	924
6.77	lpc_bl_predictor.h File Reference	
6.78	lpc_burg-lattice.cpp File Reference	925
6.79	lpc_burg-lattice.h File Reference	925

xiv CONTENTS

6.80	matrixmixer.cpp File Reference	926
6.81	mha.cpp File Reference	926
6.82	mha.h File Reference	926
6.83	mha_algo_comm.cpp File Reference	931
6.84	mha_algo_comm.h File Reference	932
6.85	mha_algo_comm.hh File Reference	933
6.86	mha_defs.h File Reference	934
6.87	mha_errno.c File Reference	
6.88	mha_errno.h File Reference	936
6.89	mha_error.cpp File Reference	937
6.90	mha_error.hh File Reference	
6.91	mha_event_emitter.h File Reference	939
6.92	mha_events.cpp File Reference	
6.93	mha_events.h File Reference	
6.94	mha_fftfb.cpp File Reference	
6.95	mha_fftfb.hh File Reference	941
6.96	mha_fifo.cpp File Reference	
6.97	mha_fifo.h File Reference	
6.98	mha_filter.cpp File Reference	
6.99	mha_filter.hh File Reference	
	mha_generic_chain.cpp File Reference	
	mha_generic_chain.h File Reference	
	mha_io_ifc.h File Reference	
	mha_multisrc.cpp File Reference	
	mha_multisrc.h File Reference	
	mha_os.cpp File Reference	
	mha_os.h File Reference	
	mha_parser.cpp File Reference	
	mha_parser.hh File Reference	
	mha_plugin.hh File Reference	
	mha_profiling.c File Reference	
	mha_profiling.h File Reference	
	mha_ruby.cpp File Reference	
	mha_signal.cpp File Reference	
	mha_signal.hh File Reference	
	mha_signal_fft.h File Reference	
	mha_tablelookup.cpp File Reference	
	mha_tablelookup.hh File Reference	
	mha_tcp.cpp File Reference	
	mha_tcp.hh File Reference	
	mha_toolbox.h File Reference	
	mha_windowparser.cpp File Reference	
	mha_windowparser.h File Reference	
	mhachain.cpp File Reference	
	mhafw_lib.cpp File Reference	
	mhafw_lib.h File Reference	
	MHAIOFile.cpp File Reference	
	MHAIOJack.cpp File Reference	
	MHAIOJackdb.cpp File Reference	
	MHAIOParser.cpp File Reference	
6.130	MHAIOPortAudio.cpp File Reference	988

CONTENTS xv

6.131 MHAIOTCP.cpp File Reference	
6.132 mhajack.cpp File Reference	
6.133 mhajack.h File Reference	
6.134 mhamain.cpp File Reference	997
6.135 mhapluginloader.cpp File Reference	998
6.136 mhapluginloader.h File Reference	998
6.137 mhasndfile.cpp File Reference	999
6.138 mhasndfile.h File Reference	999
6.139 multibandcompressor.cpp File Reference	1000
6.140 nlms_wave.cpp File Reference	
6.141 noise.cpp File Reference	
6.142 noisePowProposedScale.cpp File Reference	
6.143 overlapadd.cpp File Reference	
6.144 pluginbrowser.cpp File Reference	
6.145 pluginbrowser.h File Reference	
6.146 prediction_error.cpp File Reference	
6.147 prediction_error.h File Reference	
6.148 resampling.cpp File Reference	
6.149 rmslevel.cpp File Reference	
6.150 route.cpp File Reference	
6.151 save_spec.cpp File Reference	
6.152 save_wave.cpp File Reference	
6.153 shadowfilter_begin.cpp File Reference	
6.154 shadowfilter_end.cpp File Reference	
6.155 sine.cpp File Reference	
6.156 smoothgains_bridge.cpp File Reference	
6.157 softclip.cpp File Reference	
6.158 spec2wave.cpp File Reference	
6.159 speechnoise.cpp File Reference	
6.160 speechnoise.h File Reference	
6.161 split.cpp File Reference	
6.162 steerbf.cpp File Reference	
6.163 steerbf.h File Reference	
6.164 testalsadevice.c File Reference	
6.165 timoconfig.cpp File Reference	
6.166 timoconfig.h File Reference	
6.167 timoSmooth.cpp File Reference	
6.168 timosmooth.h File Reference	
6.169 transducers.cpp File Reference	
6.170 upsample.cpp File Reference	
6.171 wave2spec.cpp File Reference	
6.172 wavrec.cpp File Reference	
6.173 windowselector.cpp File Reference	
6.174 windowselector.h File Reference	
C. 17 1 WINDOWS CHOICE THE PROPERTY OF THE PRO	
Index	1015

1 Overview 1

1 Overview

The HörTech Open Master Hearing Aid (openMHA), is a development and evaluation software platform that is able to execute hearing aid signal processing in real-time on standard computing hardware with a low delay between sound input and output.

1.1 Structure

The openMHA can be split into four major components:

- The openMHA command line application (MHA) (p. 33)
- Signal processing plugins (p. 6)
- Audio input-output (IO) plugins (see io_file_t (p. 328), MHAIOJack (p. 94), io_parser_t (p. 336), io tcp parser t (p. 342))
- The openMHA toolbox library (p. 34)

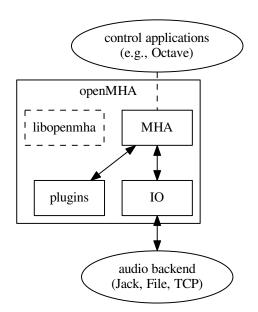


Figure 1 openMHA structure

The openMHA command line application (MHA) (p. 33) acts as a plugin host. It can load signal processing plugins as well as audio input-output (IO) plugins. Additionally, it provides the command line configuration interface and a TCP/IP based configuration interface. Several IO plugins exist: For real-time signal processing, commonly the openMHA MHAIOJack (p. 94) plugin (see plugins' manual) is used, which provides an interface to the Jack Audio Connection Kit (JACK). Other IO plugins provide audio file access or TCP/IP-based processing.

openMHA plugins (p. 6) provide the audio signal processing capabilities and audio signal handling. Typically, one openMHA plugin implements one specific algorithm. The complete virtual hearing aid signal processing can be achieved by a combination of several openMHA plugins.

1.2 Platform Services and Conventions

The openMHA platform offers some services and conventions to algorithms implemented in plugins, that make it especially well suited to develop hearing aid algorithms, while still supporting general-purpose signal processing.

1.2.1 Audio Signal Domains

As in most other plugin hosts, the audio signal in the openMHA is processed in audio chunks. However, plugins are not restricted to propagate audio signal as blocks of audio samples in the time domain another option is to propagate the audio signal in the short time Fourier transform (STFT) domain, i.e. as spectra of blocks of audio signal, so that not every plugin has to perform its own STFT analysis and synthesis. Since STFT analysis and re-synthesis of acceptable audio quality always introduces an algorithmic delay, sharing STFT data is a necessity for a hearing aid signal processing platform, because the overall delay of the complete processing has to be as short as possible.

Similar to some other platforms, the openMHA allows also arbitrary data to be exchanged between plugins through a mechanism called **algorithm communication variables** (p. 27) or short "AC vars". This mechanism is commonly used to share data such as filter coefficients or filter states.

1.2.2 Real-Time Safe Complex Configuration Changes

Hearing aid algorithms in the openMHA can export configuration settings that may be changed by the user at run time.

To ensure real-time safe signal processing, the audio processing will normally be done in a signal processing thread with real-time priority, while user interaction with configuration parameters would be performed in a configuration thread with normal priority, so that the audio processing does not get interrupted by configuration tasks. Two types of problems may occur when the user is changing parameters in such a setup:

- The change of a simple parameter exposed to the user may cause an involved recalculation of internal runtime parameters that the algorithm actually uses in processing. The duration required to perform this recalculation may be a significant portion of (or take even longer than) the time available to process one block of audio signal. In hearing aid usage, it is not acceptable to halt audio processing for the duration that the recalculation may require.
- If the user needs to change multiple parameters to reach a desired configuration state
 of an algorithm from the original configuration state, then it may not be acceptable that
 processing is performed while some of the parameters have already been changed while
 others still retain their original values. It is also not acceptable to interrupt signal processing until all pending configuration changes have been performed.

The openMHA provides a mechanism in its toolbox library to enable real-time safe configuration changes in openMHA plugins:

Basically, existing runtime configurations are used in the processing thread until the work of creating an updated runtime configuration has been completed in the configuration thread.

In hearing aids, it is more acceptable to continue to use an outdated configuration for a few more milliseconds than blocking all processing.

The openMHA toolbox library provides an easy-to-use mechanism to integrate real-time safe runtime configuration updates into every plugin.

1.2.3 Plugins can Themselves Host Other Plugins

An openMHA plugin can itself act as a plugin host. This allows to combine analysis and resynthesis methods in a single plugin. We call plugins that can themselves load other plugins "bridge plugins" in the openMHA.

When such a bridge plugin is then called by the openMHA to process one block of signal, it will first perform its analysis, then invoke (as a function call) the signal processing in the loaded plugin to process the block of signal in the analysis domain, wait to receive a processed block of signal in the analysis domain back from the loaded plugin when the signal processing function call to that plugin returns, then perform the re-synthesis transform, and finally return the block of processed signal in the original domain back to the caller of the bridge plugin.

1.2.4 Central Calibration

The purpose of hearing aid signal processing is to enhance the sound for hearing impaired listeners. Hearing impairment generally means that people suffering from it have increased hearing thresholds, i.e. soft sounds that are audible for normal hearing listeners may be imperceptible for hearing impaired listeners. To provide accurate signal enhancement for hearing impaired people, hearing aid signal processing algorithms have to be able to determine the absolute physical sound pressure level corresponding to a digital signal given to any openM← HA plugin for processing. Inside the openMHA, we achieve this with the following convention: The single-precision floating point time-domain sound signal samples, that are processed inside the openMHA plugins in blocks of short durations, have the physical pressure unit Pascal ($1Pa = 1N/m^2$). With this convention in place, all plugins can determine the absolute physical sound pressure level from the sound samples that they process. A derived convention is employed in the spectral domain for STFT signals. Due to the dependency of the calibration on the hardware used, it is the responsibility of the user of the openMHA to perform calibration measurements and adapt the openMHA settings to make sure that this calibration convention is met. We provide the plugin transducers which can be configured to perform the necessary signal adjustments.

2 Todo List

Class AuditoryProfile::profile_t (p. 208)

Give more documentation; implement all parts of the auditory profile.

Class mhaconfig_t (p. 463)

Add information on number of bands and on center frequencies, or replace by **mha_audio**← **_descriptor_t** (p. 389).

Class MHAFilter::filter_t (p. 490)

Implement a more robust filter form.

Member MHAFilter::polyphase resampling t::now index (p. 522)

Index into what? What is the meaning of now?

```
Class MHAPlugin::plugin_t< runtime_cfg_t > (p. 683)
```

Describe all services provided by this class, so that the reason why it is recommended that all plugins use this class as their base is evident. Document all relevant methods and fields.

3 Module Documentation

3.1 Concept of Variables and Data Exchange in the openMHA

Accessibility of configuration variables and data exchange between plugins (processing blocks) are an important issue in the openMHA.

Accessibility of configuration variables and data exchange between plugins (processing blocks) are an important issue in the openMHA.

In general, variable types in the openMHA are distinguished by their different access methods. The variable types in the openMHA are:

- Configuration variables: Read and write accesses are possible through the openM← HA configuration language interface. Configuration variables are implemented as C++ classes with a public data member of the underlying C type. Configuration variables can be read and modified from "outside" using the configuration language. The plugin which provides the configuration variable can use the exposed data member directly. All accesses through the openMHA configuration language are checked for data type, valid range, and access restrictions.
- **Monitor variables**: Read access is possible through the openMHA configuration language. Write access is only possible from the C++ code. Internally, monitor variables have a similar C++ class interface as configuration variables.
- AC variables (algorithm communication variables (p. 27)): Any C or C++ data structure can be shared within an openMHA chain. Access management and name space is realised in openMHA chain plugin ('mhachain'). AC variables are not available to the openMHA configuration language interface, although a read-only converter plugin acmon is available.

• Runtime configuration: Algorithms usually derive more parameters (runtime configuration) from the openMHA configuration language variables. When a configuration variable changes through configuration language write access, then the runtime configuration has to be recomputed. Plugin developers are encouraged to encapsulate the runtime configuration in a C++ class, which recomputes the runtime configuration from configuration variables in the constructor. The openMHA supports lock-free and thread-safe replacement of the runtime configuration instance (see example5.cpp (p. 20) and references therein).

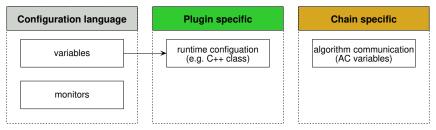


Figure 2 Variable types in the openMHA

The C++ data types are shown in the figure below. These variables can be accessed via the openMHA host application using the openMHA configuration language. For more details see 'Application engineers' manual'.

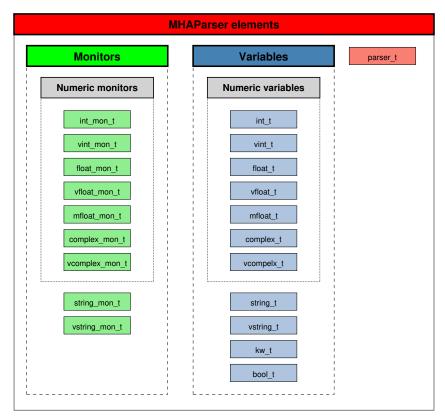


Figure 3 MHAParser elements

3.2 The openMHA Plugins (programming interface)

An openMHA plugin is the signal processing unit, usually an algorithm.

Classes

class MHAPlugin::plugin_t < runtime_cfg_t >
 The template class for C++ openMHA plugins.

Macros

- #define **MHAPLUGIN_CALLBACKS_PREFIX**(prefix, classname, indom, outdom)

 C++ wrapper macro for the plugin interface.
- #define MHAPLUGIN_CALLBACKS(plugname, classname, indom, outdom) MHAPLU
 GIN_CALLBACKS_PREFIX(MHA_STATIC_## plugname ## _,classname,indom,outdom)
 C++ wrapper macro for the plugin interface.
- #define MHAPLUGIN_DOCUMENTATION(plugname, cat, doc) MHAPLUGIN_DOCU
 MENTATION_PREFIX(MHA_STATIC_ ## plugname ## _,cat,doc)

Wrapper macro for the plugin documentation interface.

3.2.1 Detailed Description

An openMHA plugin is the signal processing unit, usually an algorithm.

openMHA plugins can be combined into processing chains. One of the configured chains can be selected for output which allows direct comparison of single algorithms or complex signal processing configurations. Algorithms within one chain can communicate with each other by sharing some of their variables, see section **Communication between algorithms** (p. 27).

The openMHA plugins can use the openMHA configuration language for their configuration. If they do so, the configuration can be changed through the framework even at run time. A description of this language can be found in section **The openMHA configuration language** (p. 33). If the algorithms should make use of the openMHA configuration language, they need to be written in C++ rather than pure C.

In the openMHA package a set of example plugins is included. These examples are the base of a step by step tutorial on how to write an openMHA plugin. See section **Writing openMHA Plugins. A step-by-step tutorial** (p. 10) for detailes.

openMHA plugins communicate with the openMHA using a simple ANSI-C interface. This way it is easy to mix plugins compiled with different C++ compilers. For convenience, we provide C++ classes which can be connected to the C++ interface. We strongly recommend the usage of these C++ wrappers. They include out-of-the box support exporting variables to the configuration interface and for thread safe configuration update.

The openMHA C++ plugin interface consists of a few number of method prototypes:

The output domain (spectrum or waveform) of an openMHA plugin will typically be the same as the input domain:

- mha_wave_t (p. 455) * process(mha_wave_t (p. 455) *): pure waveform processing
- mha_spec_t (p. 425) * process(mha_spec_t (p. 425) *): pure spectral processing

But it is also possible to implement domain transformations (from the time domain into spectrum or vice versa). The corresponding method signatures are:

- mha_spec_t (p. 425) * process(mha_wave_t (p. 455) *): Domain transformation from waveform to spectrum
- mha_wave_t (p. 455) * process(mha_spec_t (p. 425) *): Domain transformation from spectrum to waveform

For preparation and release of a plugin, the methods

- void prepare(mhaconfig_t (p. 463) &) and
- void release(void)

have to be implemented. The openMHA will call the process() method only ater the prepare method has returned and before release() is invoked. It is guarantteed by the open \leftarrow MHA framework that signal processing is performed only between calls of prepare() and release(). Each call of prepare() is followed by a call of release() (after some optional signal processing).

For configuration purposes, the plugin class has to export a method called <code>parse()</code> which implements the openMHA configuration language. We strongly recommend that you do not implement this method yourself, but by inheriting from the class <code>MHAParser::parser_t</code> (p. 644) from the openMHA toolbox, directly or indirectly (inheriting from a class that itself inherits from <code>MHAParser::parser_t</code> (p. 644)).

3.2.2 Connecting the C++ class with the C Interface

A C++ class which provides the appropriate methods can be used as an openMHA Plugin by connecting it to the C interface using the **MHAPLUGIN_CALLBACKS** (p. 9) macro.

The openMHA Toolbox library provides a base class **MHAPlugin::plugin_t** (p. 683)<T> (a template class) which can be used as the base class for a plugin class. This base class implements some necessary features for openMHA plugin developers like integration into the openMHA configuration language environment (it inherits from **MHAParser::parser_t** (p. 644)) and thread-safe runtime configuration update.

3.2.3 Error reporting

When your plugin detects a situation that it cannot handle, like input signal of the wrong signal domain at preparation time, unsupported number of input channels at preparation time, unsupported combinations of values in the plugin's variables during configuration, it should throw a C++ exception. The exception should be of type MHAError. Exceptions of this type are caught by the **MHAPLUGIN_CALLBACKS** (p. 9) macro for further error Reporting.

Throwing exceptions in response to unsupported configuration changes does not stop the signal processing. The openMHA configuration language parser will restore the previous value of that variable and report an error to the configurator, while the signal processing continues. Throwing exceptions from the signal processing thread will terminate the signal processing. Therefore, you should generally avoid throwing exceptions from the process method. Only do this if you detected a defect in your plugin, and then you should include enough information in the error message to be able to fix the defect.

- 3.2.4 Contents of the openMHA Plugin programming interface
- 3.2.5 Macro Definition Documentation

C++ wrapper macro for the plugin interface.

Parameters

classname	The name of the plugin class
indom	Input domain (wave or spec)
outdom	Output domain (wave or spec)

This macro defines all required openMHA Plugin interface functions and passes calls of these functions to the corresponding member functions of the class `classname'. The parameters `indom' and `outdom' specify the input and output domain of the processing method. The MHAInit() and MHADestroy() functions will create or destroy an instance of the class. The approriate member functions have to be defined in the class. It is suggested to make usage of the MHAPlugin::plugin_t (p. 683) template class. Exceptions of type MHA_Error (p. 406) are caught and transformed into apropriate error codes with their corresponding error messages.

3.2.5.2 #define MHAPLUGIN CALLBACKS(

```
plugname,
classname,
indom,
outdom ) MHAPLUGIN_CALLBACKS_PREFIX(MHA_STATIC_ ## plugname
## _,classname,indom,outdom)
```

C++ wrapper macro for the plugin interface.

Parameters

plugname	The file name of the plugin without the .so or .dll extension
classname	The name of the plugin class
indom	Input domain (wave or spec)
outdom	Output domain (wave or spec)

This macro defines all required openMHA Plugin interface functions and passes calls of these functions to the corresponding member functions of the class 'classname'. The parameters 'indom' and 'outdom' specify the input and output domain of the processing method. The MHA← Init() and MHADestroy() functions will create or destroy an instance of the class. The approriate member functions have to be defined in the class. It is suggested to make usage of the MH← APlugin::plugin_t (p. 683) template class. Exceptions of type MHA_Error (p. 406) are caught and transformed into apropriate error codes with their corresponding error messages.

Wrapper macro for the plugin documentation interface.

plugname ## _,cat,doc)

Parameters

plugin	The file name of the plugin without the .so or .dll extension
cat	Space separated list of categories to which belong the plugin (as const char*)
doc	Documentation of the plugin (as const char*)

This macro defines the openMHA Plugin interface function for the documentation. The categories can be any space seperated list of category names. An empty string will categorize the plugin in the category 'other'.

The documentation should contain a description of the plugin including a description of the underlying models, and a paragraph containing hints for usage. The text should be LaTeX compatible (e.g., avoid or quote underscores in the text part); equations should be formatted as LaTeX.

3.3 Writing openMHA Plugins. A step-by-step tutorial

A step-by-step tutorial on writing openMHA plugins.

A step-by-step tutorial on writing openMHA plugins.

openMHA contains a small number of example plugins as C++ source code. They are meant to help developers in understanding the concepts of openMHA plugin programming starting from the simplest example and increasing in complexity. This tutorial explains the basic parts of the example files.

3.3.1 example1.cpp

The example plugin file <code>example1.cpp</code> (p. 918) demonstrates the easiest way to implement an openMHA Plugin. It attenuates the sound signal in the first channel by multiplying the sound samples with a factor. The plugin class <code>MHAPlugin::plugin_t</code> (p. 683) exports several methods, but only two of them need a non-empty implementation: <code>prepare()</code> method is a pure virtual function and <code>process()</code> is called when signal processing starts.

Every plugin implementation should include the 'mha_plugin.hh (p. 955)' header file. C++ helper classes for plugin development are declared in this header file, and most header files needed for plugin development are included by mha plugin.hh (p. 955).

The class plugin1_t inherits from the class **MHAPlugin::plugin_t** (p. 683), which then inherits from **MHAParser::parser_t** (p. 644) – the configuration language interface in the method "parse". Our plugin class therefore exports the working "parse" method inherited from **MHA** Parser::parser t (p. 644), and the plugin is visible in the openMHA configuration tree.

The constructor has to accept 3 parameters of correct types. In this simple example, we do not make use of them.

The release() method is used to free resources after signal processing. In this simple example, we do not allocate resources, so there is no need to free them.

3.3.1.1 The prepare method

Parameters

signal_info	Contains information about the input signal's parameters, see mhaconfig_t	
	(p. 463).	

The prepare () method of the plugin is called before the signal processing starts, when the input signal parameters like domain, number of channels, frames per block, and sampling rate are known. The prepare () method can check these values and raise an exception if the plugin cannot cope with them, as is done here. The plugin can also change these values if the signal processing performed in the plugin results in an output signal with different parameters. This plugin does not change the signal's parameters, therefore they are not modified here.

3.3.1.2 The signal processing method

```
mha_wave_t * process(mha_wave_t * signal)
{
   unsigned int channel = 0; // channels and frames counting starts with 0
   float factor = 0.1f;
   unsigned int frame;

   // Scale channel number "channel" by "factor":
   for(frame = 0; frame < signal->num_frames; frame++) {
      // Waveform channels are stored interleaved.
      signal->buf[signal->num_channels * frame + channel] *= factor;
   }
   // Algorithms may process data in-place and return the input signal
   // structure as their output signal:
   return signal;
}
```

Parameters

signal Pointer to the input signal structure **mha_wave_t** (p. 455).

Returns

Pointer to the output signal structure. The input signal structure may be reused if the signal has the same domain and dimensions.

The plugin works with time domain input signal (indicated by the data type **mha_wave_t** (p. 455) of the process method's parameter). It scales the first channel by a factor of 0.1. The output signal reuses the structure that previously contained the input signal (in-place processing).

3.3.1.3 Connecting the C++ class with the C plugin interface

Plugins have to export C functions as their interface (to avoid C++ name-mangling issues and other incompatibilities when mixing plugins compiled with different C++ compilers).

```
MHAPLUGIN_CALLBACKS(example1,example1_t,wave,wave)
```

This macro takes care of accessing the C++ class from the C functions required as the plugin's interface. It implements the C funtions and calls the corresponding C++ instance methods. Plugin classes should be derived from the template class **MHAPlugin::plugin_t** (p. 683) to be compatible with the C interface wrapper.

This macro also catches C++ exceptions of type **MHA_Error** (p. 406), when raised in the methods of the plugin class, and reports the error using an error flag as the return value of the underlying C function. It is therefore important to note that only C++ exceptions of type **MH** \leftarrow **A_Error** (p. 406) may be raised by your plugin. If your code uses different Exception classes, you will have to catch them yourself before control leaves your plugin class, and maybe report the error by throwing an instance of **MHA_Error** (p. 406). This is important, because: (1) C++ exceptions cannot cross the plugin interface, which is in C, and (2) there is no error handling code for your exception classes in the openMHA framework anyways.

3.3.2 example2.cpp

This is another simple example of openMHA plugin written in C++. This plugin also scales one channel of the input signal, working in the time domain. The scale factor and which channel to scale (index number) are made accessible to the configuration language.

The algorithm is again implemented as a C++ class.

Parameters

scale_ch	- the channel number to be scaled
factor	 the scale factor of the scaling.

This class again inherits from the template class **MHAPlugin::plugin_t** (p. 683) for intergration with the openMHA configuration language. The two data members serve as externally visible configuration variables. All methods of this class have a non-empty implementation.

3.3.2.1 Constructor

The constructor invokes the superclass constructor with a string parameter. This string parameter serves as the help text that describes the functionality of the plugin. The constructor registers configuration variables with the openMHA configuration tree and sets their default values and permitted ranges. The minimum permitted value for both variables is zero, and there is no maximum limit (apart from the limitations of the underlying C data type). The configuration variables have to be registered with the parser node instance using the MHAParser::parser←
_t::insert_item (p. 646) method.

3.3.2.2 The prepare method

Parameters

The user may have changed the configuration variables before preparing the openMHA plugin. A consequence of this is that it is not sufficient any more to check if the input signal has at least 1 audio channel.

Instead, this prepare method checks that the input signal has enough channels so that the current value of <code>scale_ch.data</code> is a valid channel index, i.e. $0 \le scale_ch.data < signal \leftarrow _info.channels$. The prepare method does not have to check that $0 \le scale_ch.data$, since this is guaranteed by the valid range setting of the configuration variable.

The prepare method then modifies the valid range of the <code>scale_ch</code> variable, it modifies the upper bound so that the user cannot set the variable to a channel index higher than the available channels. Setting the range is done using a string parameter. The prepare method contatenates a string of the form "[0,n[". n is the number of channels in the input signal, and is used here as an exclusive upper boundary. To convert the number of channels into a string, a helper function for string conversion from the openMHA Toolbox is used. This function is overloaded and works for several data types.

It is safe to assume that the value of configuration variables does not change while the prepare method executes, since openMHA preparation is triggered from a configuration language command, and the openMHA configuration language parser is busy and cannot accept other commands until all openMHA plugins are prepared (or one of them stops the process by raising an exception). As we will see later in this tutorial, the same assumption cannot be made for the process method.

3.3.2.3 The release method

```
void example2_t::release(void)
{
    scale_ch.set_range("[0,[");})
```

The release method should undo the state changes that were performed by the prepare method. In this example, the prepare method has reduced the valid range of the scale_ch, so that only valid channels could be selected during signal processing.

The release method reverts this change by setting the valid range back to its original value, "[0,[".

3.3.2.4 The signal processing method

```
mha_wave_t * example2_t::process(mha_wave_t * signal)
{
    unsigned int frame;
    for(frame = 0; frame < signal->num_frames; frame++)
        value(signal, frame, scale_ch.data) *= factor.data;
    return signal;
}
```

The processing function uses the current values of the configuration variables to scale every frame in the selected audio channel.

Note that the value of each configuration variable can change while the processing method executes, since the process method usually executes in a different thread than the configuration interface.

For this simple plugin, this is not a problem, but for more advanced plugins, it has to be taken into consideration. The next section takes a closer look at the problem.

Consistency

Assume that one thread reads the value stored in a variable while another thread writes a new value to that variable concurrently. In this case, you may have a consistency problem. You would perhaps expect that the value retrieved from the variable either (a) the old value, or (b) the new value, but not (c) something else. Yet generally case (c) is a possibility.

Fortunately, for some data types on PC systems, case (c) cannot happen. These are 32bit wide data types with a 4-byte alignment. Therefore, the values in **MHAParser::int_t** (p. 622) and **MHAParser::float_t** (p. 617) are always consistent, but this is not the case for vectors, strings, or complex values. With these, you can get a mixture of the bit patterns of old and new values, or you can even cause a memory access violation in case a vector or string grows and has to be reallocated to a different memory address.

There is also a consistency problem if you take the combination of two "safe" datatypes. The openMHA provides a mechanism that can cope with these types of problems. This thread-safe runtime configuration update mechanism is introduced in example 5.

3.3.3 example3.cpp

This example introduces the openMHA Event mechanism. Plugins that provide configuration variable can receive a callback from the parser base class when a configuration variable is accessed through the configuration language interface.

The third example performes the same processing as before, but now only even channel indices are permitted when selecting the audio channel to scale. This restriction cannot be ensured by setting the range of the channel index configuration variable. Instead, the event mechanism of openMHA configuration variables is used. Configuration variables emit 4 different events, and your plugin can connect callback methods that are called when the events are triggered. These events are:

writeaccess

• triggered on write access to a configuration variable.

valuechanged

 triggered when write access to a configuration variable actually changes the value of this variable.

readaccess

triggered after the value of the configuration variable has been read.

prereadaccess

• triggered before the value of a configuration variable is read, i.e. the value of the requested variable can be changed by the callback to implement computation on demand.

All of these callbacks are executed in the configuration thread. Therefore, the callback implementation does not have to be realtime-safe. No other updates of configuration language variables through the configuration language can happen in parallel, but your processing method can execute in parallel and may change values.

3.3.3.1 Data member declarations

```
class example3_t : public MHAPlugin::plugin_t<int> {
    MHAParser::int_t scale_ch;
    MHAParser::float_t factor;
    MHAParser::int_mon_t prepared;

MHAEvents::patchbay_t<example3_t> patchbay;
```

This plugin exposes another configuration variable, "prepared", that keeps track of the prepared state of the plugin. This is a read-only (monitor) integer variable, i.e. its value can only be changed by your plugin's C++ code. When using the configuration language interface, the value of this variable can only be read, but not changed.

The patchbay member is an instance of a connector class that connects event sources with callbacks.

3.3.3.2 Method declarations

This plugin exposes 4 callback methods that are triggered by events. Multiple events (from the same or different configuration variables) can be connected to the same callback method, if desired.

This example plugin uses the valuechanged event to check that the scale_ch configuration variable is only set to valid values.

The other callbacks only cause log messages to stdout, but the comments in the logging callbacks give a hint when listening on the events would be useful.

3.3.3.3 Example 3 constructor

```
example3_t::example3_t(algo_comm_t & ac,
                       const std::string & chain_name,
                       const std::string & algo_name)
    : MHAPlugin::plugin_t<int>("This plugin multiplies the sound signal"
                               " in one audio channel by a factor", ac),
      scale_ch("Index of audio channel to scale. Indices start from 0."
               " Only channels with even indices may be scaled.",
               "O",
               "[0,["),
      factor ("The scaling factor that is applied to the selected channel.",
             "0.1",
             "[0,["),
     prepared("State of this plugin: 0 = unprepared, 1 = prepared")
    insert_item("channel", &scale_ch);
   insert_item("factor", &factor);
    prepared.data = 0;
    insert_item("prepared", &prepared);
    patchbay.connect(&scale_ch.writeaccess, this,
                     &example3 t::on scale ch writeaccess);
    patchbay.connect(&scale_ch.valuechanged, this,
                    &example3_t::on_scale_ch_valuechanged);
    patchbay.connect(&scale_ch.readaccess, this,
                     &example3_t::on_scale_ch_readaccess);
    patchbay.connect(&scale_ch.prereadaccess, this,
                     &example3_t::on_prereadaccess);
    patchbay.connect(&factor.prereadaccess, this,
                     &example3 t::on prereadaccess);
    patchbay.connect(&prepared.prereadaccess, this,
                    &example3_t::on_prereadaccess);
}
```

The constructor of monitor variables does not take a parameter for setting the initial value. The single parameter here is the help text describing the contents of the read-only variable. If the initial value should differ from 0, then the .data member of the configuration variable has to be set to the initial value in the plugin constructor's body explicitly, as is done here for demonstration although the initial value of this monitor variable is 0.

Events and callback methods are then connected using the patchbay member variable.

3.3.3.4 The prepare method

The prepare method checks wether the current setting of the scale_ch variable is possible with the input signal dimension. It does not adjust the range of the variable, since the range alone is not sufficient to ensure all future settings are also valid: The scale channel index has to be even.

3.3.3.5 The release method

```
void example3_t::release(void)
{
   prepared.data = 0;
}
```

The release method is needed for tracking the prepared state only in this example.

3.3.3.6 The signal processing method

```
mha_wave_t * example3_t::process(mha_wave_t * signal)
{
    unsigned int frame;
    for(frame = 0; frame < signal->num_frames; frame++)
        value(signal,frame,scale_ch.data) *= factor.data;
    return signal;
}
```

The signal processing member function is the same as in example 2.

3.3.3.7 The callback methods

```
void example3_t::on_scale_ch_writeaccess()
    printf("Write access: Attempt to set scale_ch=%d.\n", scale_ch.data);
    // Can be used to track any writeaccess to the configuration, even
    // if it does not change the value. E.g. setting the name of the
    // sound file in a string configuration variable can cause a sound
    // file player plugin to start playing the sound file from the
    // beginning.
void example3_t::on_scale_ch_valuechanged()
    if (scale_ch.data & 1)
       throw MHA_Error(__FILE__,__LINE_
                        "Attempt to set scale_ch to non-even value %d",
                        scale_ch.data);
    // Can be used to recompute a runtime configuration only if some
    // configuration variable actually changed.
void example3_t::on_scale_ch_readaccess()
    printf("scale_ch has been read.\n");
    // A configuration variable used as an accumulator can be reset
    // after it has been read.
void example3_t::on_prereadaccess()
    printf("A configuration language variable is about to be read.\n");
    // Can be used to compute the value on demand.
MHAPLUGIN_CALLBACKS (example3, example3_t, wave, wave)
```

When the writeaccess or valuechanged callbacks throw an MHAError exception, then the change made to the value of the configuration variable is reverted.

If multiple event sources are connected to a single callback method, then it is not possible to determine which event has caused the callback to execute. Often, this information is not crucial, i.e. when the answer to a change of any variable in a set of variables is the same, e.g. the recomputation of a new runtime configuration that takes all variables of this set as input.

3.3.4 example4.cpp

This plugin is the same as example 3 except that it works on the spectral domain (STFT).

3.3.4.1 The Prepare method

The prepare method now checks that the signal domain is MHA SPECTRUM.

3.3.4.2 The signal processing method

```
mha_spec_t * example4_t::process(mha_spec_t * signal)
{
    unsigned int bin;
    // spectral signal is stored non-interleaved.
    mha_complex_t * channeldata =
        signal->buf + signal->num_frames * scale_ch.data;
    for(bin = 0; bin < signal->num_frames; bin++)
        channeldata[bin] *= factor.data;
    return signal;
}
```

The signal processing member function works on the spectral signal instead of the wave signal as before.

The **mha_spec_t** (p. 425) instance stores the complex (**mha_complex_t** (p. 393)) spectral signal for positive frequences only (since the waveform signal is always real). The num_frames member of **mha_spec_t** (p. 425) actually denotes the number of STFT bins.

Please note that different from **mha_wave_t** (p. 455), a multichannel signal in **mha_spec_t** (p. 425) is stored non-interleaved in the signal buffer.

Some arithmetic operations are defined on struct **mha_complex_t** (p. 393) to facilitate efficient complex computations. The *= operator used here (defined for real and for complex arguments) is one of them.

3.3.4.3 Connecting the C++ class with the C plugin interface

```
MHAPLUGIN_CALLBACKS(example4, example4_t, spec, spec)
```

When connecting a class that performs spectral processing with the C interface, use spec instead of wave as the domain indicator.

3.3.5 example5.cpp

Many algorithms use complex operations to transform the user space variables into run time configurations. If this takes a noticeable time (e.g. more than 100-500 μ sec), the update of the runtime configuration can not take place in the real time processing thread. Furthermore, the parallel access to complex structures may cause unpredictable results if variables are read while only parts of them are written to memory (cf. section **Consistency** (p. 15)). To handle these situations, a special C++ template class **MHAPlugin::plugin_t** (p. 683) was designed. This class helps keeping all access to the configuration language variables in the **configuration** thread rather than in the **processing** thread.

The runtime configuration class <code>example5_t</code> (p. 297) is the parameter of the template class <code>MHAPlugin::plugin_t</code> (p. 683). Its constructor converts the user variables into a runtime configuration. Because the constructor executes in the configuration thread, there is no harm if the constructor takes a long time. All other member functions and data members of the runtime configurations are accessed only from the signal processing thread (real-time thread).

```
class example5_t {
public:
    example5_t (unsigned int,unsigned int,mha_real_t);
    mha_spec_t* process(mha_spec_t*);
private:
    unsigned int channel;
    mha_real_t scale;
};
```

The plugin interface class inherits from the plugin template class **MHAPlugin::plugin**_← **t** (p. 683), parameterised by the runtime configuration. Configuration changes (write access to the variables) will emit a write access event of the changed variables. These events can be connected to member functions of the interface class by the help of a **MHAEvents::patchbay**← **t** (p. 471) instance.

```
class plugin_interface_t : public MHAPlugin::plugin_t<example5_t> {
public:
    plugin_interface_t(const algo_comm_t&,const std::string&,const std::string&);
    mha_spec_t* process(mha_spec_t*);
    void prepare(mhaconfig_t&);
private:
    void update_cfg();
    /* integer variable of MHA-parser: */
    MHAParser::int_t scale_ch;
    /* float variable of MHA-parser: */
    MHAParser::float_t factor;
    /* patch bay for connecting configuration parser
        events with local member functions: */
    MHAEvents::patchbay_t<plugin_interface_t> patchbay;
};
```

The constructor of the runtime configuration analyses and validates the user variables. If the configuration is invalid, an exception of type **MHA_Error** (p. 406) is thrown. This will cause the openMHA configuration language command which caused the change to fail: The modified configuration language variable is then reset to its original value, and the error message will contain the message string of the **MHA_Error** (p. 406) exception.

In this example, the run time configuration class **example5_t** (p. 297) has a signal processing member function. In this function, the selected channel is scaled by the given scaling factor.

```
mha_spec_t* example5_t::process(mha_spec_t* spec)
{
    /* Scale channel number "scale_ch" by "factor": */
    for(unsigned int fr = 0; fr < spec->num_frames; fr++) {
        spec->buf[fr + channel * spec->num_frames].re *= scale;
        spec->buf[fr + channel * spec->num_frames].im *= scale;
    }
    return spec;
}
```

The constructor of the example plugin class is similar to the previous examples. A callback triggered on write access to the variables is registered using the **MHAEvents::patchbay_t** (p. 471) instance.

```
plugin_interface_t::plugin_interface_t(
   const algo_comm_t& iac,
    const std::string&,const std::string&)
    : MHAPlugin::plugin_t<example5_t>("example plugin configuration structure",iac),
      /\star initialzing variable 'scale_ch' with MHAParser::int_t(char* name, .... ) \star/
      scale_ch("channel number to be scaled", "0", "[0, ["),
      /* initialzing variable 'factor' with MHAParser::float_t(char* name, .... ) */
     factor("scale factor","1.0","[0,2]")
    /\star Register variables to the configuration parser: \star/
    insert_item("channel", &scale_ch);
    insert_item("factor", &factor);
    * On write access to the parser variables a notify callback of
    \star this class will be called. That funtion will update the runtime
    * configuration.
    patchbay.connect(&scale_ch.writeaccess,this,&plugin_interface_t::update_cfg);
    patchbay.connect(&factor.writeaccess,this,&plugin_interface_t::update_cfg);
```

The processing function can gather the latest valid runtime configuration by a call of poll_config. On success, the class member cfg points to this configuration. On error, if there is no usable runtime configuration instance, an exception is thrown. In this example, the prepare method ensures that there is a valid runtime configuration, so that in this example, no error can be raised at this point. The prepare method is always executed before the process method is called. The runtime configuration class in this example provides a signal processing method. The process method of the plugin interface calls the process method of this instance to perform the actual signal processing.

```
mha_spec_t* plugin_interface_t::process(mha_spec_t* spec)
{
    poll_config();
    return cfg->process(spec);
}
```

The prepare method ensures that a valid runtime configuration exists by creating a new runtime configuration from the current configuration language variables. If the configuration is invalid, then an exception of type **MHA_Error** (p. 406) is raised and the preparation of the openMHA fails with an error message.

The update_cfg member function is called when the value of a configuration language variable changes, or from the prepare method. It allocates a new runtime configuration and registers it for later access from the real time processing thread. The function **push_config** (p. 681) stores the configuration in a FiFo queue of runtime configurations. Once they are inserted in the FiFo, the **MHAPlugin::plugin_t** (p. 683) template is responsible for deleting runtime configuration instances stored in the FiFo. You don't need to keep track of the created instances, and you must not delete them yourself.

```
void plugin_interface_t::update_cfg()
{
    if( tftype.channels )
        push_config(new example5_t(scale_ch.data,tftype.channels,factor.data));
}
```

In the end of the example code file, the macro **MHAPLUGIN_CALLBACKS** (p. 9) defines all ANSI-C interface functions and passes them to the corresponding C++ class member functions (partly defined by the **MHAPlugin::plugin_t** (p. 683) template class). All exceptions of type **MHA_Error** (p. 406) are caught and transformed into an appropriate error code and error message.

MHAPLUGIN_CALLBACKS(example5,plugin_interface_t,spec,spec)

3.3.6 example6.cpp

This last example is the same as the previous one, but it additionally creates an 'Algorithm Communication Variable' (AC variable). It calculates the RMS level of a given channel and stores it into this variable. The variable can be accessed by any other algorithm in the same chain. To store the data onto disk, the 'acsave' plugin can be used. 'acmon' is a plugin which converts AC variables into parsable monitor variables.

In the constructor of the plugin class the variable rmsdb is registered under the name example6_rmslev as a one-dimensional AC variable of type float. For registration of other types, read access and other detailed informations please see **Communication between algorithms** (p. 27).

```
example6_t::example6_t(const algo_comm_t& iac,
                        const std::string&,const std::string&)
    : MHAPlugin::plugin_t<cfg_t>("example plugin configuration structure",iac),
/* initialzing variable 'channel_no' with MHAParser::int_t(char* name, ....) */
      channel_no("channel in which the RMS level is measured", "0", "[0, [")
    /* Register variables to the configuration parser: */
    insert_item("channel", &channel_no);
     * On write access to the parser variables a notify callback of
     * this class will be called. That funtion will update the runtime
     * configuration.
    patchbay.connect(&channel_no.writeaccess,this,&example6_t::update_cfg);
     * Propagate the level variable to all algorithms in the
     * processing chain. If multiple instances of this algorithm are
     * required, than it is necessary to use different names for this
     * variable (i.e. prefixing the name with the algorithm name
     * passed to MHAInit).
    ac.insert_var_float( ac.handle, "example6_rmslev", &rmsdb );
```

3.3.7 Debugging openMHA plugins

Suppose you would want to step through the code of your openMHA plugin with a debugger. This example details how to use the linux gdb debugger to inspect the example6_t ::prepare() (p. 299) and example6_t::process() (p. 299) routines of example6. ← cpp (p. 23) example 6.

First, make sure that your plugin is compiled with the compiler option to include debugging symbols: Apply the -ggdb switch to all gcc, g++ invocations.

Once the plugin is compiled, with debugging symbols, create a test configuration. For example 6, assuming there is an audio file named input.wav in your working directory, you could create a configuration file named 'debugexample6.cfg', with the following content:

```
# debugexample6.cfg
fragsize = 64
srate = 44100
nchannels_in = 2
iolib = MHAIOFile

io.in = input.wav
io.out = output.wav
mhalib = example6
mha.channel = 1
cmd=start
```

Assuming all your binaries and shared-object libraries are in your 'bin' directory (see READ← ME.md), you could start gdb using

```
$ export MHA_LIBRARY_PATH=$PWD/bin
$ gdb $MHA_LIBRARY_PATH/mha
```

Set breakpoints in prepare and process methods, and start execution. Note that specifying the breakpoint by symbol (example6_t::prepare (p. 299)) does not yet work, as the symbol lives in the openMHA plugin that has not yet been loaded. Specifying by line number works, however. Specifying the breakpoint by symbol also works once the plugin is loaded (i.e. when the debugger stops in the first break point). You can set the breakpoints like this (example shown here is run in gdb version 7.11.1):

```
(gdb) run ?read:debugexample6.cfg
Starting program: {openMHA_directory}/bin/mha ?read:debugexample6.cfg
[Thread debugging using libthread_db enabled]
Using host libthread_db library "/lib/x86_64-linux-gnu/libthread_db.so.1".
The Open Master Hearing Aid (openMHA) server
Copyright (c) 2005-2017 HoerTech gGmbH, D-26129 Oldenburg, Germany
This program comes with ABSOLUTELY NO WARRANTY; for details see file COPYING.
This is free software, and you are welcome to redistribute it
under the terms of the GNU AFFERO GENERAL PUBLIC LICENSE, Version 3;
for details see file COPYING.
Breakpoint 1, example6_t::prepare (this=0x6478b0, tfcfg=...)
   at example6.cpp:192
          if( tfcfg.domain != MHA_WAVEFORM )
(qdb) b example6.cpp:162
Breakpoint 2 at 0x7fffff589744a: file example6.cpp, line 162.
(gdb) c
Continuing.
```

Where '{openMHA_directory}' is the directory where openMHA is located (which should also be your working directory in this case). Next stop is the process() method. You can now examine and change the variables, step through the program as needed (using, for example 'n' to step in the next line):

3.4 The MHA Framework interface

3.5 Communication between algorithms

Algorithms within one chain can share variables for communication with other algorithms.

Collaboration diagram for Communication between algorithms:

Files

file mha_algo_comm.h

Header file for Algorithm Communication.

Namespaces

· MHA AC

Functions and classes for Algorithm Communication (AC) support.

Classes

class MHA_AC::spectrum_t

Insert a MHASignal::spectrum_t (p. 755) class into the AC space.

class MHA_AC::waveform_t

Insert a MHASignal::waveform_t (p. 767) class into the AC space.

class MHA AC::int t

Insert a integer variable into the AC space.

class MHA_AC::float_t

Insert a float point variable into the AC space.

class MHA_AC::double_t

Insert a double precision floating point variable into the AC space.

class MHA_AC::ac2matrix_t

Copy AC variable to a matrix.

class MHA_AC::acspace2matrix_t

Copy all or a subset of all numeric AC variables into an array of matrixes.

struct algo_comm_t

A reference handle for algorithm communication variables.

struct comm var t

Algorithm communication variable structure.

Functions

• mha_spec_t MHA_AC::get_var_spectrum (algo_comm_t ac, const std::string &name)

Convert an AC variable into a spectrum.

mha_wave_t MHA_AC::get_var_waveform (algo_comm_t ac, const std::string &name)

Convert an AC variable into a waveform.

- int MHA_AC::get_var_int (algo_comm_t ac, const std::string &name)
 - Return value of an integer scalar AC variable.
- float MHA_AC::get_var_float (algo_comm_t ac, const std::string &name)

 Return value of an floating point scalar AC variable.
- std::vector< float > MHA_AC::get_var_vfloat (algo_comm_t ac, const std::string &name)

Return value of an floating point vector AC variable as standard vector of floats.

3.5.1 Detailed Description

Algorithms within one chain can share variables for communication with other algorithms.

This mechanism allows interaction between algorithms (i.e. separation of noise estimation and noise reduction algorithms, combination of dynamic compression and noise estimation). Through a set of simple C functions, algorithms can propagate variables of any type, even C++ classes, to other algorithms.

An algorithm communication handle (algo_comm_t (p. 190)) is passed at initialisation time to the constructor of each plugin class constructor (p. 683). This handle contains a reference handle, algo_comm_t::handle (p. 190), and a number of function pointers, algo_comm_t ::insert_var (p. 190) etc.. An algorithm communication variable is an object of type comm_← var_t (p. 228).

For AC variables of numeric types, openMHA Plugins for conversion into parsable monitor variables, acmon, and storage into Matlab or text files, acsave, are available.

3.5.2 Function Documentation

Convert an AC variable into a spectrum.

This function reads an AC variable and tries to convert it into a valid spectrum. The Spectrum variable is granted to be valid only for one call of the processing function.

Parameters

ac	AC handle
name	Name of the variable

Returns

Spectrum structure

Convert an AC variable into a waveform.

This function reads an AC variable and tries to convert it into a valid waveform. The waveform variable is granted to be valid only for one call of the processing function.

Parameters

ac	AC handle
name	Name of the variable

Returns

waveform structure

Return value of an integer scalar AC variable.

Parameters

ac	AC handle	
name	Name of the variable	

Returns

Variable value

Return value of an floating point scalar AC variable.

Parameters

ac	AC handle
name	Name of the variable

Returns

Variable value

Return value of an floating point vector AC variable as standard vector of floats.

Parameters

ac AC handle	
name	Name of the variable


Returns

Variable value

3.6 Error handling in the openMHA

Errors are reported to the user via the MHA_Error (p. 406) exception.

Collaboration diagram for Error handling in the openMHA:

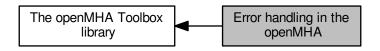

Classes

class MHA_Error

Error reporting exception class.

Macros

- #define MHA_ErrorMsg(x) MHA_Error(__FILE__,__LINE__,"%s",x)

 Throw an openMHA error with a text message.
- #define MHA_assert(x) if(!(x)) throw MHA_Error(__FILE__,__LINE__,"\"%s\" is false.",#x)

Assertion macro, which throws an MHA_Error (p. 406).

• #define MHA_assert_equal(a, b) if(a != b) throw MHA_Error(__FILE__,__LINE__ ,"\"%s == %s\" is false (%s = %g, %s = %g).",#a,#b,#a,(double)(a),#b,(double)(b))

Equality assertion macro, which throws an MHA_Error (p. 406) with the values.

Functions

• void **mha_debug** (const char *fmt,...)

Print an info message (stderr on Linux, OutputDebugString in Windows).

3.6.1 Detailed Description

Errors are reported to the user via the **MHA_Error** (p. 406) exception.

3.6.2 Macro Definition Documentation

Throw an openMHA error with a text message.

Parameters

```
x Text message.
```

```
3.6.2.2 #define MHA_assert(
```

```
x ) if(!(x)) throw MHA_Error(__FILE__,__LINE__,"\"%s\" is false.",#x)
```

Assertion macro, which throws an MHA_Error (p. 406).

Parameters

```
x Boolean expression which should be true.
```

3.6.2.3 #define MHA_assert_equal(

```
a,
b) if( a != b) throw MHA_Error(__FILE__,__LINE__,"\"%s == %s\" is false (%s = %g, %s = %g).",#a,#b,#a,(double)(a),#b,(double)(b))
```

Equality assertion macro, which throws an MHA_Error (p. 406) with the values.

Parameters

```
a Numeric expression which can be converted to double (for printing).b Numeric expression which should be equal to a
```

3.6.3 Function Documentation

```
3.6.3.1 void mha_debug ( const char * \textit{fmt}, ... )
```

Print an info message (stderr on Linux, OutputDebugString in Windows).

3.7 The openMHA configuration language

openMHA Plugins that should use the openMHA configuration language for their configuration have to be implemented in C++ and need to include **mha_parser.hh** (p. 951).

openMHA Plugins that should use the openMHA configuration language for their configuration have to be implemented in C++ and need to include **mha_parser.hh** (p. 951).

All required classes and functions for parser access are declared in the namespace MH← AParser (p. 103). The plugin class should be derived from the class MHAParser::parser_t (p. 644) (or MHAPlugin::plugin_t (p. 683)), which symbolises a sub-parser node in the open← MHA script hierarchy. Variables of many types can be registered to the sub-parser node by calling the member function insert_item (p. 646).


The openMHA Plugin template class **MHAPlugin::plugin_t** (p. 683) together with the Plugin macro **MHAPLUGIN_CALLBACKS** (p. 9) provide the callback mappings and correct inheritance. If your plugin is based on that template class, you simply have to use the insert_item command to give access to your variables, everything else is managed internally.

A complete list of all openMHA script items is given in the description of the **MHAParser** (p. 103) namespace.

3.8 The openMHA Toolbox library

The openMHA toolbox is a static C++ library which makes it more comfortable to develop openMHA plugins.

Collaboration diagram for The openMHA Toolbox library:

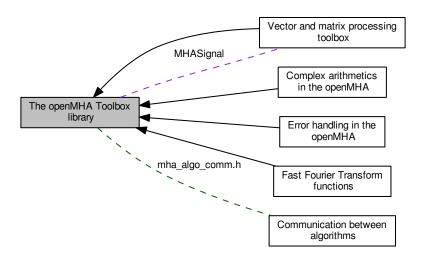

Modules

Error handling in the openMHA

Errors are reported to the user via the MHA_Error (p. 406) exception.

Vector and matrix processing toolbox

The vector and matrix processing toolbox consists of a number of classes defined in the namespace **MHASignal** (p. 113), and many functions and operators for use with the structures **mha_wave_t** (p. 455) and **mha_spec_t** (p. 425).

- · Complex arithmetics in the openMHA
- · Fast Fourier Transform functions

Files

file mha_algo_comm.h

Header file for Algorithm Communication.

· file mha filter.hh

Header file for IIR filter classes.

file mha_signal.hh

Header file for audio signal handling and processing classes.

• file mha tablelookup.hh

Header file for table lookup classes.

Namespaces

MHAOvlFilter

Namespace for overlapping FFT based filter bank classes and functions.

MHAFilter

Namespace for IIR and FIR filter classes.

MHAParser

Name space for the openMHA-Parser configuration language.

MHASignal

Namespace for audio signal handling and processing classes.

MHATableLookup

Namespace for table lookup classes.

3.8.1 Detailed Description

The openMHA toolbox is a static C++ library which makes it more comfortable to develop openMHA plugins.

It contains the openMHA script language classes.

3.9 Vector and matrix processing toolbox

The vector and matrix processing toolbox consists of a number of classes defined in the namespace **MHASignal** (p. 113), and many functions and operators for use with the structures **mha**← **_wave_t** (p. 455) and **mha_spec_t** (p. 425).

Collaboration diagram for Vector and matrix processing toolbox:



Namespaces

MHASignal

Namespace for audio signal handling and processing classes.

MHAWindow

Collection of Window types.

Classes

struct mha_wave_t

Waveform signal structure.

struct mha_spec_t

Spectrum signal structure.

struct mha_audio_descriptor_t

Description of an audio fragment (planned as a replacement of mhaconfig_t (p. 463)).

struct mha_audio_t

An audio fragment in the openMHA (planned as a replacement of **mha_wave_t** (p. 455) and **mha_spec_t** (p. 425)).

class MHASignal::spectrum t

a signal processing class for spectral data (based on **mha_spec_t** (p. 425))

class MHASignal::waveform t

signal processing class for waveform data (based on mha_wave_t (p. 455))

class MHASignal::doublebuffer t

Double-buffering class.

class MHASignal::hilbert_t

Hilbert transformation of a waveform segment.

class MHASignal::minphase_t

Minimal phase function.

class MHASignal::uint_vector_t

Vector of unsigned values, used for size and index description of n-dimensional matrixes.

class MHASignal::matrix_t

n-dimensional matrix with real or complex floating point values.

class MHAParser::window_t

MHA configuration interface for a window function generator.

class MHASignal::delay_wave_t

Delayline containing wave fragments.

• class MHASignal::async_rmslevel_t

Class for asynchronous level metering.

Typedefs

typedef float mha_real_t
 openMHA type for real numbers

Functions

- mha_wave_t range (mha_wave_t s, unsigned int k0, unsigned int len)

 Return a time interval from a waveform chunk.
- mha_spec_t channels (mha_spec_t s, unsigned int ch_start, unsigned int nch)

 Return a channel interval from a spectrum.
- void MHASignal::for_each (mha_wave_t *s, mha_real_t(*fun)(mha_real_t))
 Apply a function to each element of a mha_wave_t (p. 455).
- mha_real_t MHASignal::lin2db (mha_real_t x)

Conversion from linear scale to dB (no SPL reference)

mha_real_t MHASignal::db2lin (mha_real_t x)

Conversion from dB scale to linear (no SPL reference)

mha_real_t MHASignal::pa2dbspl (mha_real_t x)

Conversion from linear Pascal scale to dB SPL.

- mha_real_t MHASignal::pa22dbspl (mha_real_t x, mha_real_t eps=1e-20f)

 Conversion from squared Pascal scale to dB SPL.
- mha_real_t MHASignal::dbspl2pa (mha_real_t x)

Conversion from dB SPL to linear Pascal scale.

- mha_real_t MHASignal::smp2sec (mha_real_t n, mha_real_t srate)
 conversion from samples to seconds
- mha_real_t MHASignal::sec2smp (mha_real_t sec, mha_real_t srate)
 conversion from seconds to samples
- mha_real_t MHASignal::bin2freq (mha_real_t bin, unsigned fftlen, mha_real_t srate)
 conversion from fft bin index to frequency
- mha_real_t MHASignal::freq2bin (mha_real_t freq, unsigned fftlen, mha_real_t srate)
 conversion from frequency to fft bin index
- mha_real_t MHASignal::smp2rad (mha_real_t samples, unsigned bin, unsigned fftlen)
 conversion from delay in samples to phase shift

mha_real_t MHASignal::rad2smp (mha_real_t phase_shift, unsigned bin, unsigned fftlen)

conversion from phase shift to delay in samples

template < class elem_type >
 std::vector < elem_type > MHASignal::dupvec (std::vector < elem_type > vec, unsigned n)

Duplicate last vector element to match desired size.

template<class elem_type >

std::vector< elem_type > MHASignal::dupvec_chk (std::vector< elem_type > vec, unsigned n)

Duplicate last vector element to match desired size, check for dimension.

bool equal_dim (const mha_wave_t &a, const mha_wave_t &b)

Test for equal dimension of waveform structures.

• bool equal dim (const mha wave t &a, const mhaconfig t &b)

Test for match of waveform dimension with mhaconfig structure.

• bool equal_dim (const mha_spec_t &a, const mha_spec_t &b)

Test for equal dimension of spectrum structures.

bool equal_dim (const mha_spec_t &a, const mhaconfig_t &b)

Test for match of spectrum dimension with mhaconfig structure.

bool equal_dim (const mha_wave_t &a, const mha_spec_t &b)

Test for equal dimension of waveform/spectrum structures.

bool equal_dim (const mha_spec_t &a, const mha_wave_t &b)

Test for equal dimension of waveform/spectrum structures.

void integrate (mha_wave_t &s)

Numeric integration of a signal vector (real values)

void integrate (mha_spec_t &s)

Numeric integration of a signal vector (complex values)

unsigned int size (const mha wave t &s)

Return size of a waveform structure.

unsigned int size (const mha_spec_t &s)

Return size of a spectrum structure.

unsigned int size (const mha_wave_t *s)

Return size of a waveform structure.

unsigned int size (const mha spec t *s)

Return size of a spectrum structure.

void clear (mha_wave_t &s)

Set all values of waveform to zero.

void clear (mha wave t *s)

Set all values of waveform to zero.

void clear (mha spec t &s)

Set all values of spectrum to zero.

void clear (mha_spec_t *s)

Set all values of spectrum to zero.

void assign (mha wave t self, mha real t val)

Set all values of waveform 'self' to 'val'.

void assign (mha_wave_t self, const mha_wave_t &val)

Set all values of waveform 'self' to 'val'.

void assign (mha_spec_t self, const mha_spec_t &val)

Set all values of spectrum 'self' to 'val'.

void timeshift (mha wave t &self, int shift)

Time shift of waveform chunk.

• mha real t & value (mha wave t *s, unsigned int fr, unsigned int ch)

Access an element of a waveform structure.

const mha_real_t & value (const mha_wave_t *s, unsigned int fr, unsigned int ch)

Constant access to an element of a waveform structure.

• mha complex t & value (mha spec t *s, unsigned int fr, unsigned int ch)

Access to an element of a spectrum.

- const **mha_complex_t** & **value** (const **mha_spec_t** *s, unsigned int fr, unsigned int ch)

 Constant access to an element of a spectrum.
- mha_real_t & value (mha_wave_t &s, unsigned int fr, unsigned int ch)

Access to an element of a waveform structure.

const mha_real_t & value (const mha_wave_t &s, unsigned int fr, unsigned int ch)

Constant access to an element of a waveform structure.

mha_complex_t & value (mha_spec_t &s, unsigned int fr, unsigned int ch)

Access to an element of a spectrum.

- const **mha_complex_t** & **value** (const **mha_spec_t** &s, unsigned int fr, unsigned int ch)

 Constant access to an element of a spectrum.
- std::vector< float > std_vector_float (const mha_wave_t &)

Converts a mha_wave_t (p. 455) structure into a std::vector<float> (interleaved order).

• std::vector< std::vector< float >> std_vector_vector_float (const mha_wave_t &)

Converts a **mha_wave_t** (p. 455) structure into a std::vector< std::vector< float> > (outer vector represents channels).

 std::vector< std::vector< mha_complex_t >> std_vector_vector_complex (const mha_spec_t &)

Converts a **mha_spec_t** (p. 425) structure into a std::vector< std::vector< mha_complex_t> > (outer vector represents channels).

mha_wave_t & operator+= (mha_wave_t &, const mha_real_t &)

Addition operator.

mha_wave_t & operator+= (mha_wave_t &, const mha_wave_t &)

Addition operator.

• mha wave t & operator-= (mha wave t &, const mha wave t &)

Subtraction operator.

mha_spec_t & operator-= (mha_spec_t &, const mha_spec_t &)

Subtraction operator.

• mha_wave_t & operator*= (mha_wave_t &, const mha_real_t &)

Element-wise multiplication operator.

• mha wave t & operator*= (mha wave t &, const mha wave t &)

Element-wise multiplication operator.

mha_spec_t & operator*= (mha_spec_t &, const mha_real_t &)

Element-wise multiplication operator.

mha_spec_t & operator*= (mha_spec_t &, const mha_wave_t &)

Element-wise multiplication operator.

mha_spec_t & operator*= (mha_spec_t &, const mha_spec_t &)

Element-wise multiplication operator.

mha_spec_t & operator/= (mha_spec_t &, const mha_spec_t &)

Element-wise division operator.

mha_wave_t & operator/= (mha_wave_t &, const mha_wave_t &)

Element-wise division operator.

• mha_spec_t & operator+= (mha_spec_t &, const mha_spec_t &)

Addition operator.

• mha spec t & operator+= (mha spec t &, const mha real t &)

Addition operator.

• mha wave t & operator = (mha wave t & self, const mha real t & arg)

Exponent operator.

void MHASignal::copy_channel (mha_spec_t &self, const mha_spec_t &src, unsigned sch, unsigned dch)

Copy one channel of a source signal.

• void MHASignal::copy_channel (mha_wave_t &self, const mha_wave_t &src, unsigned src_channel, unsigned dest_channel)

Copy one channel of a source signal.

mha_real_t MHASignal::rmslevel (const mha_spec_t &s, unsigned int channel, unsigned int fftlen)

Return RMS level of a spectrum channel.

mha_real_t MHASignal::colored_intensity (const mha_spec_t &s, unsigned int channel, unsigned int fftlen, mha_real_t sqfreq_response[])

Colored spectrum intensity.

• mha_real_t MHASignal::maxabs (const mha_spec_t &s, unsigned int channel)

Find maximal absolute value.

mha_real_t MHASignal::rmslevel (const mha_wave_t &s, unsigned int channel)

Return RMS level of a waveform channel.

mha real t MHASignal::maxabs (const mha wave t &s, unsigned int channel)

Find maximal absolute value.

mha_real_t MHASignal::maxabs (const mha_wave_t &s)

Find maximal absolute value.

mha_real_t MHASignal::max (const mha_wave_t &s)

Find maximal value.

• mha real t MHASignal::min (const mha wave t &s)

Find minimal value.

mha_real_t MHASignal::sumsqr_channel (const mha_wave_t &s, unsigned int channel)

Calculate sum of squared values in one channel.

• mha_real_t MHASignal::sumsqr_frame (const mha_wave_t &s, unsigned int frame)

Calculate sum over all channels of squared values.

void conjugate (mha spec t &self)

Replace (!) the value of this **mha_spec_t** (p. 425) with its conjugate.

3.9.1 Detailed Description

The vector and matrix processing toolbox consists of a number of classes defined in the namespace **MHASignal** (p. 113), and many functions and operators for use with the structures **mha**← **_wave_t** (p. 455) and **mha_spec_t** (p. 425).

- 3.9.2 Typedef Documentation
- 3.9.2.1 typedef float mha_real_t

openMHA type for real numbers

This type is expected to be allways the C-type 'float' (IEEE 754 single).

3.9.3 Function Documentation

```
3.9.3.1 mha_wave_t range (
    mha_wave_t s,
    unsigned int k0,
    unsigned int len )
```

Return a time interval from a waveform chunk.

A waveform chunk containing a time intervall of a larger waveform chunk is returned. The number of channels remains constant. The data of the output waveform structure points to the data of the input structure, i.e., write access to the output waveform chunk modifies the corresponding entries in the input chunk.

Parameters

s	Waveform structure
k0	Index of first value in output
len	Number of frames in output

Returns

Waveform structure representing the sub-interval.

Return a channel interval from a spectrum.

Parameters

s	Input spectrum
ch_start	Index of first channel in output
nch	Number of channels in output

Returns

Spectrum structure representing the sub-interval.

Apply a function to each element of a mha_wave_t (p. 455).

Parameters

s	Pointer to a mha_wave_t (p. 455) structure	
fun	Function to be applied (one argument)	

Conversion from linear scale to dB (no SPL reference)

Parameters

```
x Linear input.
```

Conversion from dB scale to linear (no SPL reference)

Parameters

```
x dB input.
```

Conversion from linear Pascal scale to dB SPL.

Parameters

```
x Linear input.
```

Conversion from squared Pascal scale to dB SPL.

Parameters

X	squared pascal input
eps	minimum squared-pascal value

Conversion from dB SPL to linear Pascal scale.

Parameters

conversion from samples to seconds

Parameters

n	number of samples
srate	sampling rate / Hz

conversion from seconds to samples

Parameters

sec	time in seconds	
srate	sampling rate / Hz	

Returns

number of samples, generally has non-zero fractional part

conversion from fft bin index to frequency

Parameters

bin	index of fft bin, index 0 has dc
fftlen	FFT length
srate	sampling frequency / Hz

Returns

frequency of fft bin / Hz

conversion from frequency to fft bin index

Parameters

freq	frequency / Hz
fftlen	FFT length
srate	sampling frequency / Hz

Returns

0-based index of fft bin, generally has non-zero fractional part

conversion from delay in samples to phase shift

Compute phase shift that needs to be applied to fft spectrum to achieve the desired delay.

Parameters

samples	delay in samples. Positive delay: shift current signal to future.
bin	index of fft bin, index 0 has dc (index 0 and nyqvist bin cannot be delayed)
fftlen	FFT length

Returns

The phase shift in radiant that needs to be applied to fft bin to achieve the desired delay. A positive delay requires a negative phase shift. If required phase shift is >pi or <-pi, then the desired delay cannot be applied in the fft domain with given parameters. Required phase shifts close to pi should not be used. If bin is 0 or nyqvist, returns 0 phase shift.

conversion from phase shift to delay in samples

Compute delay in samples that is achieved by a phase shift.

Parameters

phase_shift	phase shift in radiant
bin	index of fft bin, index 0 has dc (index 0 and nyqvist bin cannot be delayed)
fftlen	FFT length

Returns

The delay in samples achieved by applying the phase shift. A negative phase shift causes a positive delay: shifts current signal to future.

```
3.9.3.15 template < class elem_type > std::vector < elem_type > MHASignal::dupvec ( std::vector < elem_type > vec, unsigned n)
```

Duplicate last vector element to match desired size.

Parameters

vec	Input vector.
n	Target number of elements.

Return values

```
Resized vector.
```

```
3.9.3.16 template < class elem_type > std::vector < elem_type > MHASignal::dupvec_chk ( std::vector < elem_type > vec, unsigned n)
```

Duplicate last vector element to match desired size, check for dimension.

The input dimension can be either 1 or the target length.

Parameters

vec	Input vector.
n	Target number of elements.

Return values

```
Resized vector.
```

```
3.9.3.17 bool equal_dim (

const mha_wave_t & a,

const mha wave t & b ) [inline]
```

Test for equal dimension of waveform structures.

```
3.9.3.18 bool equal_dim (

const mha_wave_t & a,

const mhaconfig_t & b ) [inline]
```

Test for match of waveform dimension with mhaconfig structure.

```
3.9.3.19 bool equal_dim (

const mha_spec_t & a,

const mha spec_t & b) [inline]
```

Test for equal dimension of spectrum structures.

```
3.9.3.20 bool equal_dim (

const mha_spec_t & a,

const mhaconfig_t & b ) [inline]
```

Test for match of spectrum dimension with mhaconfig structure.

```
3.9.3.21 bool equal_dim (

const mha_wave_t & a,

const mha spec t & b ) [inline]
```

Test for equal dimension of waveform/spectrum structures.

Warning

Waveform structures **mha_wave_t** (p. 455) use interleaved data order, while spectrum structures **mha_spec_t** (p. 425) use non-interleaved.

```
3.9.3.22 bool equal_dim (

const mha_spec_t & a,

const mha_wave_t & b ) [inline]
```

Test for equal dimension of waveform/spectrum structures.

Warning

Waveform structures **mha_wave_t** (p. 455) use interleaved data order, while spectrum structures **mha_spec_t** (p. 425) use non-interleaved.

```
3.9.3.23 void integrate (
mha_wave_t & s )
```

Numeric integration of a signal vector (real values)

Parameters

```
s Input signal vector
```

```
3.9.3.24 void integrate (
mha_spec_t & s )
```

Numeric integration of a signal vector (complex values)

Parameters

```
s Input signal vector
```

```
3.9.3.25 unsigned int size (

const mha wave t & s ) [inline]
```

Return size of a waveform structure.

```
3.9.3.26 unsigned int size (
                    const mha_spec_t & s ) [inline]
Return size of a spectrum structure.
3.9.3.27 unsigned int size (
                    const mha_wave_t * s ) [inline]
Return size of a waveform structure.
3.9.3.28 unsigned int size (
                     const mha_spec_t * s ) [inline]
Return size of a spectrum structure.
3.9.3.29 void clear (
                     mha_wave_t & s ) [inline]
Set all values of waveform to zero.
3.9.3.30 void clear (
                     mha_wave_t * s ) [inline]
Set all values of waveform to zero.
3.9.3.31 void clear (
                     mha_spec_t & s ) [inline]
Set all values of spectrum to zero.
3.9.3.32 void clear (
                     mha_spec_t * s ) [inline]
Set all values of spectrum to zero.
3.9.3.33 void assign (
                     mha wave t self,
                     mha real t val ) [inline]
```

Set all values of waveform 'self' to 'val'.

Parameters

self	Waveform to be modified.
val	Value to be assigned to all entries of waveform.

```
3.9.3.34 void assign (

mha_wave_t self,

const mha_wave_t & val )
```

Set all values of waveform 'self' to 'val'.

Parameters

self	Waveform to be modified.
val	Source waveform structure.

```
3.9.3.35 void assign (

mha_spec_t self,

const mha_spec_t & val )
```

Set all values of spectrum 'self' to 'val'.

Parameters

self	Spectrum to be modified.
val	Source spectrum.

```
3.9.3.36 void timeshift (

mha_wave_t & self,

int shift )
```

Time shift of waveform chunk.

Shifted areas are filled with zeros.

Parameters

self	Waveform chunk to be shifted
shift	Shift amount, positive values shift to later times

Access an element of a waveform structure.

Parameters

s	Waveform structure
fr	Frame number
ch	Channel number

Returns

Reference to element

Constant access to an element of a waveform structure.

Parameters

s	Waveform structure
fr	Frame number
ch	Channel number

Returns

Reference to element

Access to an element of a spectrum.

Parameters

s	Spectrum structure
fr	Bin number
ch	Channel number

Returns

Reference to element

Constant access to an element of a spectrum.

Parameters

s	Spectrum structure
fr	Bin number
ch	Channel number

Returns

Reference to element

Access to an element of a waveform structure.

Parameters

s	Waveform structure
fr	Frame number
ch	Channel number

Returns

Reference to element

Constant access to an element of a waveform structure.

Parameters

s	Waveform structure
fr	Frame number
ch	Channel number

Returns

Reference to element

Access to an element of a spectrum.

Parameters

s	Spectrum structure	
fr	Bin number	
ch	Channel number	

Returns

Reference to element

Constant access to an element of a spectrum.

Parameters

s	Spectrum structure
fr	Bin number
ch	Channel number

Returns

Reference to element

Converts a **mha_wave_t** (p. 455) structure into a std::vector<float> (interleaved order).

Warning

This function is not real-time safe. Do not use in signal processing thread.

Converts a **mha_wave_t** (p. 455) structure into a std::vector< std::vector<float> > (outer vector represents channels).

Warning

This function is not real-time safe. Do not use in signal processing thread.

Converts a **mha_spec_t** (p. 425) structure into a std::vector< std::vector<mha_complex_t>> (outer vector represents channels).

Warning

This function is not real-time safe. Do not use in signal processing thread.

Addition operator.

Addition operator.

Subtraction operator.

Subtraction operator.

```
3.9.3.52 mha_wave_t& operator*= (
                    mha_wave_t &,
                    const mha real t & )
Element-wise multiplication operator.
3.9.3.53 mha_wave_t& operator*= (
                    mha wave t&,
                    const mha wave t & )
Element-wise multiplication operator.
3.9.3.54 mha spec t& operator*= (
                    mha spec t&,
                    const mha real t & )
Element-wise multiplication operator.
3.9.3.55 mha_spec_t& operator*= (
                    mha_spec_t &,
                    const mha_wave_t & )
Element-wise multiplication operator.
3.9.3.56 mha_spec_t& operator*= (
                    mha_spec_t &,
                    const mha spec t & )
Element-wise multiplication operator.
3.9.3.57 mha_spec_t& operator/= (
                    mha_spec_t &,
                    const mha_spec_t & )
Element-wise division operator.
3.9.3.58 mha_wave_t& operator/= (
                    mha_wave_t &,
                    const mha_wave_t & )
Element-wise division operator.
3.9.3.59 mha spec t& operator+= (
                    mha_spec_t &,
                    const mha_spec_t & )
```

Addition operator.

Addition operator.

Exponent operator.

Warning

This overwrites the xor operator!

Copy one channel of a source signal.

Parameters

self	Destination.
src	Source
sch	Source channel number
dch	Destination channel number

Copy one channel of a source signal.

Parameters

self	Destination.
src	Source
src_channel	Source channel number
dest channel	Destination channel number

Return RMS level of a spectrum channel.

Parameters

S	Input spectrum
channel	Channel number to be tested
fftlen	FFT length (to correctly count the level of the Nyquist bin)

Returns

RMS level in Pa

Colored spectrum intensity.

computes the squared sum of the spectrum after filtering with the frequency response

Parameters

S	Input spectrum
channel	Channel number to be tested
fftlen	FFT length (to correctly count the level of the Nyquist bin)
sqfreq_response	A squared weighting factor for every fft bin.

Returns

sum of squares. Root of this is the colored level in Pa

Find maximal absolute value.

Parameters

S	Input signal
channel	Channel to be tested

Returns

maximum absolute value

Return RMS level of a waveform channel.

Parameters

s	Input waveform signal
channel	Channel number to be tested

Returns

RMS level in Pa

Find maximal absolute value.

Parameters

s	Input signal
channel	Channel to be tested

Returns

maximum absolute value

Find maximal absolute value.

Parameters

```
s Input signal
```

Returns

maximum absolute value

```
3.9.3.70 mha_real_t MHASignal::max (
const mha_wave_t & s )
```

Find maximal value.

Parameters

```
s Input signal
```

Returns

maximum absolute value

Find minimal value.

Parameters

```
s Input signal
```

Returns

maximum absolute value

Calculate sum of squared values in one channel.

s	Input signal
channel	Channel

Returns

$$\sum x^2$$

Calculate sum over all channels of squared values.

Parameters

s	Input signal
frame	Frame number


Returns

$$\sum x^2$$

Replace (!) the value of this **mha_spec_t** (p. 425) with its conjugate.

3.10 Complex arithmetics in the openMHA

Collaboration diagram for Complex arithmetics in the openMHA:

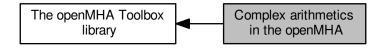

Classes

struct mha_complex_t

Type for complex floating point values.

Functions

- mha_complex_t & set (mha_complex_t &self, mha_real_t real, mha_real_t imag=0)

 Assign real and imaginary parts to a mha_complex_t (p. 393) variable.
- mha_complex_t mha_complex (mha_real_t real, mha_real_t imag=0)
 Create a new mha_complex_t (p. 393) with specified real and imaginary parts.
- mha_complex_t & set (mha_complex_t &self, const std::complex < mha_real_t > &stdcomplex)

Assign a mha_complex_t (p. 393) variable from a std::complex.

- std::complex < mha_real_t > stdcomplex (const mha_complex_t &self)
 Create a std::complex from mha complex t (p. 393).
- mha_complex_t & expi (mha_complex_t &self, mha_real_t angle)

 replaces the value of the given mha_complex_t (p. 393) with exp(i*b).
- double angle (const mha complex t &self)

Computes the angle of a complex number in the complex plane.

- mha_complex_t & operator+= (mha_complex_t &self, const mha_complex_t &other)

 Addition of two complex numbers, overwriting the first.
- mha_complex_t operator+ (const mha_complex_t &self, const mha_complex_
 t &other)

Addition of two complex numbers, result is a temporary object.

- mha_complex_t & operator+= (mha_complex_t &self, mha_real_t other_real)

 Addition of a complex and a real number, overwriting the complex.
- mha_complex_t operator+ (const mha_complex_t &self, mha_real_t other_real)

 Addition of a complex and a real number, result is a temporary object.
- mha_complex_t & operator-= (mha_complex_t &self, const mha_complex_t &other)

 Subtraction of two complex numbers, overwriting the first.

mha_complex_t operator- (const mha_complex_t &self, const mha_complex_
 t &other)

Subtraction of two complex numbers, result is a temporary object.

mha_complex_t & operator-= (mha_complex_t &self, mha_real_t other_real)

Subtraction of a complex and a real number, overwriting the complex.

• mha_complex_t operator- (const mha_complex_t &self, mha_real_t other_real)

Subtraction of a complex and a real number, result is a temporary object.

- mha_complex_t & operator*= (mha_complex_t &self, const mha_complex_t &other)

 Multiplication of two complex numbers, overwriting the first.
- mha_complex_t operator* (const mha_complex_t &self, const mha_complex_
 t &other)

Multiplication of two complex numbers, result is a temporary object.

mha_complex_t & operator*= (mha_complex_t &self, mha_real_t other_real)

Multiplication of a complex and a real number, overwriting the complex.

- mha_complex_t & expi (mha_complex_t &self, mha_real_t angle, mha_real_t factor)
 replaces (!) the value of the given mha_complex_t (p. 393) with a * exp(i*b)
- mha_complex_t operator* (const mha_complex_t &self, mha_real_t other_real)

 Multiplication of a complex and a real number, result is a temporary object.
- mha_real_t abs2 (const mha_complex_t &self)

Compute the square of the absolute value of a complex value.

mha_real_t abs (const mha_complex_t &self)

Compute the absolute value of a complex value.

mha_complex_t & operator/= (mha_complex_t &self, mha_real_t other_real)

Division of a complex and a real number, overwriting the complex.

• mha_complex_t operator/ (const mha_complex_t &self, mha_real_t other_real)

Division of a complex and a real number, result is a temporary object.

 mha_complex_t & safe_div (mha_complex_t &self, const mha_complex_t &other, mha_real_t eps, mha_real_t eps2)

Safe division of two complex numbers, overwriting the first.

- mha_complex_t & operator/= (mha_complex_t &self, const mha_complex_t &other)

 Division of two complex numbers, overwriting the first.
- mha_complex_t operator/ (const mha_complex_t &self, const mha_complex_← t &other)

Division of two complex numbers, result is a temporary object.

• mha complex t operator- (const mha complex t &self)

Unary minus on a complex results in a negative temporary object.

bool operator== (const mha_complex_t &x, const mha_complex_t &y)

Compare two complex numbers for equality.

• bool operator!= (const mha_complex_t &x, const mha_complex_t &y)

Compare two complex numbers for inequality.

void conjugate (mha_complex_t &self)

Replace (!) the value of this **mha** complex t (p. 393) with its conjugate.

mha_complex_t _conjugate (const mha_complex_t &self)

Compute the cojugate of this complex value.

void reciprocal (mha_complex_t &self)

Replace the value of this complex with its reciprocal.

mha_complex_t _reciprocal (const mha_complex_t &self)

compute the reciprocal of this complex value.

void normalize (mha_complex_t &self)

Divide a complex by its absolute value, thereby normalizing it (projecting onto the unit circle).

void normalize (mha_complex_t &self, mha_real_t margin)

Divide a complex by its absolute value, thereby normalizing it (projecting onto the unit circle), with a safety margin.

bool almost (const mha_complex_t &self, const mha_complex_t &other, mha_real_t times_epsilon=1e2)

Compare two complex numbers for equality except for a small relative error.

bool operator< (const mha_complex_t &x, const mha_complex_t &y)

Compares the absolute values of two complex numbers.

3.10.1 Detailed Description

3.10.2 Function Documentation

Assign real and imaginary parts to a **mha_complex_t** (p. 393) variable.

Parameters

self	The mha_complex_t (p. 393) variable whose value is about to change.
real	The new real part.
imag	The new imaginary part.

Returns

A reference to the changed variable.

Create a new **mha** complex t (p. 393) with specified real and imaginary parts.

real	The real part.
imag	The imaginary part.

Returns

The new value.

Assign a **mha_complex_t** (p. 393) variable from a std::complex.

Parameters

self	The mha_complex_t (p. 393) variable whose value is about to change.
stdcomplex	The new complex value.

Returns

A reference to the changed variable.

Create a std::complex from **mha_complex_t** (p. 393).

replaces the value of the given **mha_complex_t** (p. 393) with exp(i*b).

Parameters

self	The mha_complex_t (p. 393) variable whose value is about to change.
angle	The angle in the complex plane [rad].

Returns

A reference to the changed variable.

```
3.10.2.6 double angle ( const mha_complex_t & self ) [inline]
```

Computes the angle of a complex number in the complex plane.

Parameters

self The complex number whose angle is needed.

Returns

The angle of a complex number in the complex plane.

Addition of two complex numbers, overwriting the first.

Addition of two complex numbers, result is a temporary object.

Addition of a complex and a real number, overwriting the complex.

Addition of a complex and a real number, result is a temporary object.

Subtraction of two complex numbers, overwriting the first.

Subtraction of two complex numbers, result is a temporary object.

Subtraction of a complex and a real number, overwriting the complex.

```
3.10.2.14 mha_complex_t operator-(
const mha_complex_t & self,
mha_real_t other_real) [inline]
```

Subtraction of a complex and a real number, result is a temporary object.

Multiplication of two complex numbers, overwriting the first.

Multiplication of two complex numbers, result is a temporary object.

Multiplication of a complex and a real number, overwriting the complex.

replaces (!) the value of the given **mha_complex_t** (p. 393) with a * exp(i*b)

self	The mha_complex_t (p. 393) variable whose value is about to change.
angle	The imaginary exponent.
factor	The absolute value of the result.

Returns

A reference to the changed variable.

```
3.10.2.19 mha_complex_t operator* (

const mha_complex_t & self,

mha_real_t other_real ) [inline]
```

Multiplication of a complex and a real number, result is a temporary object.

```
3.10.2.20 mha_real_t abs2 (
const mha_complex_t & self ) [inline]
```

Compute the square of the absolute value of a complex value.

Returns

The square of the absolute value of self.

```
3.10.2.21 mha_real_t abs (

const mha complex t & self ) [inline]
```

Compute the absolute value of a complex value.

Returns

The absolute value of self.

Division of a complex and a real number, overwriting the complex.

```
3.10.2.23 mha_complex_t operator/ (

const mha_complex_t & self,

mha real t other real ) [inline]
```

Division of a complex and a real number, result is a temporary object.

Safe division of two complex numbers, overwriting the first.

If abs(divisor) < eps, then divisor is replaced by eps. eps2 = eps*eps.

```
3.10.2.25 mha_complex_t& operator/= (
                     mha_complex_t & self,
                     const mha complex t & other ) [inline]
Division of two complex numbers, overwriting the first.
3.10.2.26 mha_complex_t operator/ (
                     const mha complex t & self,
                     const mha complex t & other ) [inline]
Division of two complex numbers, result is a temporary object.
3.10.2.27 mha_complex_t operator- (
                     const mha_complex_t & self ) [inline]
Unary minus on a complex results in a negative temporary object.
3.10.2.28 bool operator== (
                     const mha_complex_t & x,
                     const mha_complex_t & y ) [inline]
Compare two complex numbers for equality.
3.10.2.29 bool operator!= (
                     const mha_complex_t & x,
                     const mha_complex_t & y ) [inline]
Compare two complex numbers for inequality.
3.10.2.30 void conjugate (
                     mha_complex_t & self ) [inline]
Replace (!) the value of this mha_complex_t (p. 393) with its conjugate.
3.10.2.31 mha_complex_t _conjugate (
                     const mha_complex_t & self ) [inline]
```

Returns

A temporary object holding the conjugate value.

Compute the cojugate of this complex value.

Replace the value of this complex with its reciprocal.

compute the reciprocal of this complex value.

Returns

A temporary object holding the reciprocal value.

```
3.10.2.34 void normalize (

mha_complex_t & self ) [inline]
```

Divide a complex by its absolute value, thereby normalizing it (projecting onto the unit circle).

```
3.10.2.35 void normalize (

mha_complex_t & self,

mha_real_t margin ) [inline]
```

Divide a complex by its absolute value, thereby normalizing it (projecting onto the unit circle), with a safety margin.

```
3.10.2.36 bool almost (

const mha_complex_t & self,

const mha_complex_t & other,

mha_real_t times_epsilon = 1e2 ) [inline]
```

Compare two complex numbers for equality except for a small relative error.

Parameters

self	The first complex number.
other	The second complex number.
times_epsilon	Permitted relative error is this number multiplied with the machine accuracy for this Floating point format (std::numeric_limits <mha_real_t>::epsilon)</mha_real_t>


Returns

true if the relative difference is below times_epsilon * std::numeric_limits<mha_real_t> \leftarrow ::epsilon

Compares the absolute values of two complex numbers.

3.11 Fast Fourier Transform functions

Collaboration diagram for Fast Fourier Transform functions:

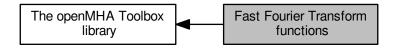

Typedefs

typedef void * mha_fft_t
 Handle for an FFT object.

Functions

mha_fft_t mha_fft_new (unsigned int n)

Create a new FFT handle.

void mha_fft_free (mha_fft_t h)

Destroy an FFT handle.

- void mha_fft_wave2spec (mha_fft_t h, const mha_wave_t *in, mha_spec_t *out)

 Tranform waveform segment into spectrum.
- void mha_fft_wave2spec (mha_fft_t h, const mha_wave_t *in, mha_spec_t *out, bool swaps)

Tranform waveform segment into spectrum.

- void mha_fft_spec2wave (mha_fft_t h, const mha_spec_t *in, mha_wave_t *out)

 Tranform spectrum into waveform segment.
- void mha_fft_spec2wave (mha_fft_t h, const mha_spec_t *in, mha_wave_t *out, unsigned int offset)

Tranform spectrum into waveform segment.

- void mha_fft_forward (mha_fft_t h, mha_spec_t *sIn, mha_spec_t *sOut)

 Complex to complex FFT (forward).
- void mha_fft_backward (mha_fft_t h, mha_spec_t *sIn, mha_spec_t *sOut)

 Complex to complex FFT (backward).
- void mha_fft_forward_scale (mha_fft_t h, mha_spec_t *sIn, mha_spec_t *sOut)

 Complex to complex FFT (forward).
- void mha_fft_backward_scale (mha_fft_t h, mha_spec_t *sIn, mha_spec_t *sOut)

 Complex to complex FFT (backward).
- void mha_fft_wave2spec_scale (mha_fft_t h, const mha_wave_t *in, mha_spec_← t *out)

Tranform waveform segment into spectrum.

void mha_fft_spec2wave_scale (mha_fft_t h, const mha_spec_t *in, mha_wave_←
t *out)

Tranform spectrum into waveform segment.

- 3.11.1 Detailed Description
- 3.11.2 Typedef Documentation
- 3.11.2.1 typedef void* mha_fft_t

Handle for an FFT object.

This FFT object is used by the functions mha_fft_wave2spec and mha_fft_spec2wave. The F← FT back-end is the FFTW library. The back-end is completely hidden, including external header files or linking external libraries is not required.

3.11.3 Function Documentation

Create a new FFT handle.

Parameters

```
n FFT length.
```

Create a new FFT handle.

Parameters

```
n FFT length
```

Return values

Destroy an FFT handle.

Parameters

```
h Handle to be destroyed.
```

Destroy an FFT handle.

Parameters

_		
ĺ	h	FFT object to be removed

Tranform waveform segment into spectrum.

Parameters

h	FFT handle.
in	Input waveform segment.
out	Output spectrum.

Tranform waveform segment into spectrum.

Parameters

h	FFT object handle
in	pointer to input waveform signal
out	pointer to output spectrum signal (has to be allocated)

Tranform waveform segment into spectrum.

Like normal wave2spec, but swaps wave buffer halves before transforming if the swaps parameter is true.

Warning: These openMHA FFTs adopt a nonstandard scaling scheme in which the forward transform scales by 1/N and the backward does not scale. We would recommend using the '_scale' methods instead.

h	FFT handle.
in	Input waveform segment.
out	Output spectrum.
swaps	Function swaps the first and second half of the waveform buffer before the FFT transform when this parameter is set to true.

Tranform spectrum into waveform segment.

Warning: These openMHA FFTs adopt a nonstandard scaling scheme in which the forward transform scales by 1/N and the backward does not scale. We would recommend using the 'scale' methods instead.

Parameters

h	FFT handle.
in	Input spectrum.
out	Output waveform segment.

Tranform spectrum into waveform segment.

Parameters

h	FFT object handle
in	pointer to input spectrum
out	pointer to output waveform signal (has to be allocated)

Tranform spectrum into waveform segment.

out may have fewer number of frames than needed for a complete iFFT. Only as many frames are written into out as fit, starting with offset offset of the complete iFFT.

Warning: These openMHA FFTs adopt a nonstandard scaling scheme in which the forward transform scales by 1/N and the backward does not scale. We would recommend using the 'scale' methods instead.

h	FFT handle.
in	Input spectrum.
out	Output waveform segment.
offset	Offset into iFFT wave buffer

Tranform spectrum into waveform segment.

Only part of the iFFT is tranferred into the out buffer.

Out may have fewer number of freames than needed for a complete iFFT. Only as many frames are written into out as fit, starting with offset offset of the complete iFFT.

Parameters

h	FFT object handle
in	pointer to input spectrum
out	pointer to output waveform signal (has to be allocated)
offset	Offset into complete iFFT buffer.

Complex to complex FFT (forward).

sIn and sOut need to have nfft bins (please note that **mha_spec_t** (p. 425) typically has nfft/2+1 bins for half-complex representation).

Warning: These openMHA FFTs adopt a nonstandard scaling scheme in which the forward transform scales by 1/N and the backward does not scale. We would recommend using the 'scale' methods instead.

Parameters

h	FFT handle.
sIn	Input spectrum.
sOut	Output spectrum.

Complex to complex FFT (backward).

sln and sOut need to have nfft bins (please note that **mha_spec_t** (p. 425) typically has nfft/2+1 bins for half-complex representation).

Warning: These openMHA FFTs adopt a nonstandard scaling scheme in which the forward transform scales by 1/N and the backward does not scale. We would recommend using the '_scale' methods instead.

Parameters

h	FFT handle.
sIn	Input spectrum.
sOut	Output spectrum.

Complex to complex FFT (forward).

sIn and sOut need to have nfft bins (please note that **mha_spec_t** (p. 425) typically has nfft/2+1 bins for half-complex representation).

The _scale methods use standard DFT scaling: There is no scaling in the forward transformation, and 1/N scaling for the backward.

Parameters

h	FFT handle.
sIn	Input spectrum.
sOut	Output spectrum.

Complex to complex FFT (backward).

sIn and sOut need to have nfft bins (please note that **mha_spec_t** (p. 425) typically has nfft/2+1 bins for half-complex representation).

The _scale methods use standard DFT scaling: There is no scaling in the forward transformation, and 1/N scaling for the backward.

h	FFT handle.
sIn	Input spectrum.
sOut	Output spectrum.

Tranform waveform segment into spectrum.

The _scale methods use standard DFT scaling: There is no scaling in the forward transformation, and 1/N scaling for the backward.

Parameters

h	FFT handle.
in	Input waveform segment.
out	Output spectrum.

Tranform spectrum into waveform segment.

The _scale methods use standard DFT scaling: There is no scaling in the forward transformation, and 1/N scaling for the backward.

h	FFT handle.
in	Input spectrum.
out	Output waveform segment.

4 Namespace Documentation

4.1 ac2lsl Namespace Reference

All types for the **ac2IsI** (p. 77) plugins live in this namespace.

Classes

class ac2lsl_t

Plugin class of ac2lsl (p. 77).

· class cfg_t

Runtime configuration class of the ac2lsl (p. 77) plugin.

class save_var_base_t

Interface for ac to Isl bridge variable.

class save_var_t

Implementation for all ac to Isl bridges except complex types.

class save_var_t< mha_complex_t >

Template specialization of the ac2lsl (p. 77) bridge to take care of complex numbers.

4.1.1 Detailed Description

All types for the **ac2IsI** (p. 77) plugins live in this namespace.

4.2 acmon Namespace Reference

Namespace for displaying ac variables as parser monitors.

Classes

class ac_monitor_t

A class for converting AC variables to Parser monitors of correct type.

class acmon_t

4.2.1 Detailed Description

Namespace for displaying ac variables as parser monitors.

4.3 acsave Namespace Reference

Classes

- class acsave_t
- class cfg t
- struct mat4head t
- class save_var_t

4.4 addsndfile Namespace Reference

Classes

- · class addsndfile if t
- · class level_adapt_t
- class resampled_soundfile_t

Reads sound from file and resamples it if necessary and wanted.

- class sndfile t
- class waveform_proxy_t

Class helps to specify which instance of MHASignal_waveform_t parent instance is meant in **resampled_soundfile_t** (p. 173).

Typedefs

- typedef MHAPlugin::config_t< level_adapt_t > level_adaptor
- typedef MHAPlugin::plugin_t< sndfile_t > wave_reader

Enumerations

Functions

- static unsigned resampled_num_frames (unsigned num_source_frames, float source
 —rate, float target_rate, addsndfile_resampling_mode_t resampling_mode)
- 4.4.1 Typedef Documentation
- 4.4.1.1 typedef MHAPlugin::config_t<level_adapt_t> addsndfile::level_adaptor
- 4.4.1.2 typedef MHAPlugin::plugin_t<sndfile_t> addsndfile::wave_reader
- 4.4.2 Enumeration Type Documentation
- 4.4.2.1 enum addsndfile::addsndfile_resampling_mode_t

Specifies the resampling mode in **resampled_soundfile_t** (p. 173).

Enumerator

DONT_RESAMPLE_PERMISSIVE

DONT_RESAMPLE_STRICT Do not resample, if the sample rate of the MHA differs from the sample rate of the sound file, raise an error.

DO_RESAMPLE Resample.

4.4.3 Function Documentation

4.5 ADM Namespace Reference

Classes

class ADM

Adaptive differential microphone, working for speech frequency range.

class Delay

A delay-line class which can also do subsample-delays for a limited frequency range below fs/4.

• class Linearphase_FIR

An efficient linear-phase fir filter implementation.

Functions

• static double **subsampledelay_coeff** (double samples, double f_design, double fs=1.0) compute IIR coefficient for subsample delay

Variables

- const double **PI** = 3.14159265358979312
- const double **C** = 340
- const double DELAY_FREQ = 2000
- const double **START_BETA** = 0.5

4.5.1 Function Documentation

compute IIR coefficient for subsample delay

samples	Constraint: 0.0 <= samples < 1.0; Amount of sub-sample delay
	design frequency (subsample delay is accurate for this frequency)
© 2005-2018 H	örJachgambHatlenburg

Returns

IIR coefficient for subsample delay

4.5.2 Variable Documentation

- 4.5.2.1 const double ADM::PI = 3.14159265358979312
- 4.5.2.2 const double ADM::C = 340
- 4.5.2.3 const double ADM::DELAY FREQ = 2000
- 4.5.2.4 const double ADM::START_BETA = 0.5

4.6 AuditoryProfile Namespace Reference

Namespace for classes and functions around the auditory profile (e.g., audiogram handling)

Classes

· class fmap t

A class to store frequency dependent data (e.g., HTL and UCL).

class parser_t

Class to make the auditory profile accessible through the parser interface.

class profile t

The Auditory Profile class.

4.6.1 Detailed Description

Namespace for classes and functions around the auditory profile (e.g., audiogram handling)

The auditory profile as defined by HearCom or BMBF Modellbasierte Hoergeraete is stored in the class **AuditoryProfile::profile_t** (p. 208). Until a complete definition is available, only the currently needed elements are implemented.

4.7 coherence Namespace Reference

Classes

- · class cohflt if t
- · class cohflt t
- class vars t

Functions

 void getcipd (mha_complex_t &c, mha_real_t &a, const mha_complex_t &xl, const mha_complex_t &xr)

4.7.1 Function Documentation

```
4.7.1.1 void coherence::getcipd (

mha_complex_t & c,

mha_real_t & a,

const mha_complex_t & xl,

const mha_complex_t & xr ) [inline]
```

4.8 dc Namespace Reference

Classes

- · class dc_if_t
- class dc t
- class dc_vars_t
- class dc_vars_validator_t
- · class wb inhib cfg t
- class wideband_inhib_vars_t

Functions

unsigned int get_audiochannels (unsigned int totalchannels, std::string acname, algo
 _comm_t ac)

4.8.1 Function Documentation

4.9 dc_simple Namespace Reference

Classes

- · class dc if t
- class dc_t
- class dc_vars_t
- class dc_vars_validator_t
- class level_smoother_t

Typedefs

- typedef MHAPlugin::plugin_t< dc_t > DC
- typedef MHAPlugin::config_t< level_smoother_t > LEVEL

Functions

- void **test_fail** (const std::vector< float > &v, unsigned int s, const std::string &name)
- std::vector< float > force_resize (const std::vector< float > &v, unsigned int s, const std::string &name)
- mha_real_t not_zero (mha_real_t x, const std::string &comment="")
- 4.9.1 Typedef Documentation
- 4.9.1.1 typedef MHAPlugin::plugin_t<dc_t> dc_simple::DC
- 4.9.1.2 typedef MHAPlugin::config_t<level_smoother_t> dc_simple::LEVEL
- 4.9.2 Function Documentation
- 4.9.2.1 void dc_simple::test_fail (const std::vector< float > & v, unsigned int s, const std::string & name)
- 4.9.2.2 std::vector<float> dc_simple::force_resize (const std::vector< float > & v, unsigned int s, const std::string & name)
- 4.10 delay Namespace Reference

Classes

- class interface_t
- 4.11 delaysum Namespace Reference

This namespace contains the delaysum plugin.

Classes

• class delaysum_if_t

Interface class for the delaysum plugin.

class delaysum_t

Runtime configuration of the delaysum plugin.

4.11.1 Detailed Description

This namespace contains the delaysum plugin.

4.12 DynComp Namespace Reference

dynamic compression related classes and functions

Classes

class dc_afterburn_rt_t

Real-time class for after burn effect.

class dc_afterburn_t

Afterburn class, to be defined as a member of compressors.

class dc afterburn vars t

Variables for dc_afterburn_t (p. 276) class.

class gaintable t

Gain table class.

Functions

mha_real_t interp1 (const std::vector< mha_real_t > &vX, const std::vector< mha_←
real_t > &vY, mha_real_t X)

One-dimensional linear interpolation.

mha_real_t interp2 (const std::vector< mha_real_t > &vX, const std::vector< mha←
 _real_t > &vY, const std::vector< std::vector< mha_real_t > &mZ, mha_real_t X,
 mha_real_t Y)

Linear interpolation in a two-dimensional field.

4.12.1 Detailed Description

dynamic compression related classes and functions

4.12.2 Function Documentation

```
4.12.2.1 mha_real_t DynComp::interp1 ( const std::vector< mha_real_t > & vX, const std::vector< mha_real_t > & vY, mha_real_t X)
```

One-dimensional linear interpolation.

Parameters

νX	Vector with input samples.
νY	Vector with values at input samples.
X	Input value to be interpolated.

Return values

Interpolated	value $Y(X)$ at position X .
--------------	--------------------------------

```
4.12.2.2 mha_real_t DynComp::interp2 (  const \ std::vector < mha\_real\_t > \& \ vX, \\ const \ std::vector < mha\_real\_t > \& \ vY, \\ const \ std::vector < std::vector < mha\_real\_t > & \ mZ, \\ mha\_real\_t \ X, \\ mha\_real\_t \ Y \ )
```

Linear interpolation in a two-dimensional field.

Parameters

νX	Vector with input samples, first dimension.
νY	Vector with input samples, second dimension.
mΖ	Field with values at input samples.
X	First dimension of input value to be interpolated.
Y	Second dimension of input value to be interpolated.

Return values

```
Interpolated value Z(X,Y) at position X,Y.
```

4.13 fader_wave Namespace Reference

Classes

- class fader_wave_if_t
- class level_adapt_t

Typedefs

typedef MHAPlugin::plugin_t< level_adapt_t > level_adaptor

4.13.1 Typedef Documentation

4.13.1.1 typedef MHAPlugin::plugin_t<level_adapt_t> fader_wave::level_adaptor

4.14 fftfilterbank Namespace Reference

Classes

- class fftfb_interface_t
- class fftfb_plug_t

4.15 gain Namespace Reference

Classes

- class gain_if_t
- · class scaler_t

4.16 matrixmixer Namespace Reference

Classes

- class cfg_t
- · class matmix t

4.17 MHA_AC Namespace Reference

Functions and classes for Algorithm Communication (AC) support.

Classes

- · class ac2matrix helper t
- class ac2matrix_t

Copy AC variable to a matrix.

class acspace2matrix_t

Copy all or a subset of all numeric AC variables into an array of matrixes.

class double_t

Insert a double precision floating point variable into the AC space.

class float_t

Insert a float point variable into the AC space.

class int_t

Insert a integer variable into the AC space.

class spectrum_t

Insert a MHASignal::spectrum_t (p. 755) class into the AC space.

- class stat_t
- · class waveform t

Insert a MHASignal::waveform_t (p. 767) class into the AC space.

Functions

• mha_spec_t get_var_spectrum (algo_comm_t ac, const std::string &name)

Convert an AC variable into a spectrum.

mha_wave_t get_var_waveform (algo_comm_t ac, const std::string &name)
 Convert an AC variable into a waveform.

• int **get_var_int** (**algo_comm_t** ac, const std::string &name)

Return value of an integer scalar AC variable.

• float **get_var_float** (**algo_comm_t** ac, const std::string &name)

Return value of an floating point scalar AC variable.

• std::vector< float > **get_var_vfloat** (**algo_comm_t** ac, const std::string &name)

Return value of an floating point vector AC variable as standard vector of floats.

4.17.1 Detailed Description

Functions and classes for Algorithm Communication (AC) support.

4.18 mha_error_helpers Namespace Reference

Functions

unsigned digits (unsigned n)
 Compute number of decimal digits required to represent an unsigned integer.

unsigned snprintf_required_length (const char *formatstring,...)
 snprintf_required_length Compute the number of bytes (excluding the terminating nul) required to store the result of an snprintf.

4.18.1 Function Documentation

4.18.1.1 unsigned mha_error_helpers::digits (unsigned n)

Compute number of decimal digits required to represent an unsigned integer.

Parameters

n The unsigned integer that we want to know the number of required decimal digits for. return The number of decimal digits in n.

snprintf_required_length Compute the number of bytes (excluding the terminating nul) required to store the result of an snprintf.

Parameters

formatstring	The format string with standard printf formatstring
--------------	---

Returns

the number of bytes required by printf without the terminating nul

4.19 MHA_TCP Namespace Reference

A Namespace for TCP helper classes.

Classes

class Async_Notify

Portable Multiplexable cross-thread notification.

class Client

A portable class for a tcp client connections.

· class Connection

Connection (p. 430) handles Communication between client and server, is used on both sides.

· class Event Watcher

OS-independent event watcher, uses select on Unix and WaitForMultipleObjects on Windows.

- struct OS EVENT TYPE
- class Server
- class Sockaccept_Event
- class Sockread Event

Watch socket for incoming data.

- class Sockwrite Event
- class Thread

A very simple class for portable threads.

- · class Timeout Event
- class Timeout_Watcher

OS-independent event watcher with internal fixed-end-time timeout.

class Wakeup_Event

A base class for asynchronous wakeup events.

Typedefs

typedef int SOCKET

Functions

• std::string **STRERROR** (int err)

Portable conversion from error number to error string.

std::string HSTRERROR (int err)

Portable conversion from hostname error number to error string.

• int **N_ERRNO** ()

Portable access to last network error number.

• int **H ERRNO** ()

Portable access to last hostname error number.

• int G ERRNO ()

Portable access to last non-network error number.

• double dtime ()

Time access function for system's high resolution time, retrieve current time as double.

double dtime (const struct timeval &tv)

Time access function for unix' high resolution time, converts struct timeval to double.

struct timeval stime (double d)

Time access function for unix' high resolution time, converts time from double to struct timeval.

4.19.1 Detailed Description

A Namespace for TCP helper classes.

- 4.19.2 Typedef Documentation
- 4.19.2.1 typedef int MHA_TCP::SOCKET
- 4.19.3 Function Documentation
- 4.19.3.1 std::string MHA_TCP::STRERROR (int *err*)

Portable conversion from error number to error string.

```
4.19.3.2 std::string MHA_TCP::HSTRERROR ( int err )
```

Portable conversion from hostname error number to error string.

```
4.19.3.3 int MHA_TCP::N_ERRNO ( )
```

Portable access to last network error number.

```
4.19.3.4 int MHA_TCP::H_ERRNO ( )
```

Portable access to last hostname error number.

```
4.19.3.5 int MHA_TCP::G_ERRNO ( )
```

Portable access to last non-network error number.

```
4.19.3.6 double MHA_TCP::dtime ( )
```

Time access function for system's high resolution time, retrieve current time as double.

```
4.19.3.7 double MHA_TCP::dtime (
const struct timeval & tv )
```

Time access function for unix' high resolution time, converts struct timeval to double.

```
4.19.3.8 struct timeval MHA_TCP::stime ( double d )
```

Time access function for unix' high resolution time, converts time from double to struct timeval.

4.20 mhachain Namespace Reference

Classes

- · class chain_base_t
- class mhachain_t
- · class plugs t

4.21 MHAEvents Namespace Reference

Collection of event handling classes.

Classes

- class connector_base_t
- class connector_t
- · class emitter t

Class for emitting openMHA events.

class patchbay_t

Patchbay which connects any event emitter with any member function of the parameter class.

4.21.1 Detailed Description

Collection of event handling classes.

4.22 MHAFilter Namespace Reference

Namespace for IIR and FIR filter classes.

Classes

- class adapt_filter_param_t
- · class adapt_filter_state_t
- class adapt_filter_t

Adaptive filter.

class blockprocessing_polyphase_resampling_t

A class that does polyphase resampling and takes into account block processing.

class complex_bandpass_t

Complex bandpass filter.

· class diff t

Differentiator class (non-normalized)

· class fftfilter t

FFT based FIR filter implementation.

• class fftfilterbank t

FFT based FIR filterbank implementation.

· class filter t

Generic IIR filter class.

class gamma_flt_t

Class for gammatone filter.

- class iir_filter_state_t
- · class iir filter t

IIR filter class wrapper for integration into parser structure.

class iir_ord1_real_t

First order recursive filter.

class o1_ar_filter_t

First order attack-release lowpass filter.

• class o1flt_lowpass_t

First order low pass filter.

class o1flt_maxtrack_t

First order maximum tracker.

class o1flt_mintrack_t

First order minimum tracker.

class partitioned_convolution_t

A filter class for partitioned convolution.

class polyphase_resampling_t

A class that performs polyphase resampling.

class resampling_filter_t

Hann shaped low pass filter for resampling.

class smoothspec_t

Smooth spectral gains, create a windowed impulse response.

- class thirdoctave_analyzer_t
- struct transfer_function_t

a structure containing a source channel number, a target channel number, and an impulse response.

struct transfer_matrix_t

A sparse matrix of transfer function partitionss.

Functions

- void make_friendly_number (mha_real_t &x)
- void make friendly number (mha complex t &x)
- void make_friendly_number (double &x)
- void o1_lp_coeffs (const mha_real_t tau, const mha_real_t fs, mha_real_t &c1, mha
 _real_t &c2)

Set first order filter coefficients from time constant and sampling rate.

• void **butter_stop_ord1** (double *A, double *B, double f1, double f2, double fs)

Setup a first order butterworth band stop filter.

• MHASignal::waveform_t * spec2fir (const mha_spec_t *spec, const unsigned int fftlen, const MHAWindow::base t &window, const bool minphase)

Create a windowed impulse response/FIR filter coefficients from a spectrum.

unsigned gcd (unsigned a, unsigned b)

greatest common divisor

• double **sinc** (double x)

sin(x)/x function, coping with x=0.

std::pair< unsigned, unsigned > resampling_factors (float source_sampling_rate, float target_sampling_rate, float factor=1.0f)

Computes rational resampling factor from two sampling rates.

4.22.1 Detailed Description

Namespace for IIR and FIR filter classes.

4.22.2 Function Documentation

Set first order filter coefficients from time constant and sampling rate.

Parameters

tau	Time constant
fs	Sampling rate

Return values

C	1	Recursive filter coefficient
C	2	Non-recursive filter coefficient

Setup a first order butterworth band stop filter.

This function calculates the filter coefficients of a first order butterworth band stop filter.

Return values

Α	recursive filter coefficients
В	non recursive filter coefficients

Parameters

f1	lower frequency
f2	upper frequency
fs	sample frequency

Create a windowed impulse response/FIR filter coefficients from a spectrum.

Parameters

spec	Input spectrum
fftlen	FFT length of spectrum
window	Window shape (with length, e.g. initialized with MHAWindow::hanning(54)).
minphase	Flag, true if original phase should be discarded and replaced by a minimal phase function.

greatest common divisor

```
4.22.2.8 double MHAFilter::sinc ( double x )
```

 $\sin(x)/x$ function, coping with x=0.

This is the historical sinc function, not the normalized sinc function.

Computes rational resampling factor from two sampling rates.

The function will fail if either sampling_rate * factor is not an integer

Parameters

source_sampling_rate The original sampling rate	
target_sampling_rate	The desired sampling rate
factor	A helper factor to use for non-integer sampling rates

Returns

a pair that contains first the upsampling factor and second the downsampling factor required for the specified resampling.

Exceptions

4.23 MHAIOJack Namespace Reference

JACK IO.

Classes

class io_jack_t
 Main class for JACK IO.

4.23.1 Detailed Description

JACK IO.

4.24 MHAIOJackdb Namespace Reference

Classes

class io_jack_t
 Main class for JACK IO.

4.25 MHAIOPortAudio Namespace Reference

Classes

- class device_info_t
- class io_portaudio_t

Main class for Portaudio sound IO.

Functions

static std::string parserFriendlyName (const std::string &in)

4.25.1 Function Documentation

4.25.1.1 static std::string MHAIOPortAudio::parserFriendlyName (
const std::string & in) [static]

4.26 MHAJack Namespace Reference

Classes and functions for openMHA and JACK interaction.

Classes

class client_avg_t

Generic JACK client for averaging a system response across time.

class client_noncont_t

Generic client for synchronous playback and recording of waveform fragments.

· class client t

Generic asynchronous JACK client.

class port_t

Class for one channel/port.

Functions

void io (mha_wave_t *s_out, mha_wave_t *s_in, const std::string &name, const std
 ::vector< std::string > &p_out, const std::vector< std::string > &p_in, float *srate=NULL,
 unsigned int *fragsize=NULL, bool use_jack_transport=false)

Functional form of generic client for synchronous playback and recording of waveform fragments.

std::vector< unsigned int > get_port_capture_latency (const std::vector< std::string > &ports)

Return the JACK port latency of ports.

std::vector< int > get_port_capture_latency_int (const std::vector< std::string > &ports)

Return the JACK port latency of ports.

std::vector< unsigned int > get_port_playback_latency (const std::vector< std::string > &ports)

Return the JACK port latency of ports.

std::vector< int > get_port_playback_latency_int (const std::vector< std::string > &ports)

4.26.1 Detailed Description

Classes and functions for openMHA and JACK interaction.

4.26.2 Function Documentation

```
4.26.2.1 void MHAJack::io (

mha_wave_t * s_out,

mha_wave_t * s_in,

const std::string & name,

const std::vector< std::string > & p_out,

const std::vector< std::string > & p_in,

float * srate = NULL,

unsigned int * fragsize = NULL,

bool use jack transport = false )
```

Functional form of generic client for synchronous playback and recording of waveform fragments.

```
4.26.2.2 std::vector< unsigned int > MHAJack::get_port_capture_latency ( const std::vector< std::string > & ports )
```

Return the JACK port latency of ports.

Parameters

```
ports Ports to be tested
```

Returns

Latency vector (one entry for each port)

```
4.26.2.3 std::vector< int > MHAJack::get_port_capture_latency_int ( const std::vector< std::string > & ports )
```

Return the JACK port latency of ports.

Parameters

ports	Ports to be tested
-------	--------------------

Returns

Latency vector (one entry for each port)

Return the JACK port latency of ports.

Parameters

ports	Ports to be tested
-------	--------------------

Returns

Latency vector (one entry for each port)

4.27 MHAKernel Namespace Reference

Classes

- class algo_comm_class_t
- class comm_var_map_t

Functions

```
    algo_comm_class_t * algo_comm_safe_cast (void *)
```

4.27.1 Function Documentation

4.28 MHAMultiSrc Namespace Reference

Collection of classes for selecting audio chunks from multiple sources.

Classes

· class base t

Base class for source selection.

- · class channel t
- · class channels t
- class spectrum_t
- · class waveform t

4.28.1 Detailed Description

Collection of classes for selecting audio chunks from multiple sources.

4.29 MHAOvIFilter Namespace Reference

Namespace for overlapping FFT based filter bank classes and functions.

Namespaces

- barkscale
- FreqScaleFun

Transform functions from linear scale in Hz to new frequency scales.

ShapeFun

Shape functions for overlapping filters.

Classes

- class band_descriptor_t
- class fftfb_ac_info_t
- class fftfb_t

FFT based overlapping filter bank.

class fftfb_vars_t

Set of configuration variables for FFT-based overlapping filters.

- · class fscale bw t
- · class fscale t
- class fspacing_t

Class for frequency spacing, used by filterbank shape generator class.

- class overlap_save_filterbank_analytic_t
- class overlap_save_filterbank_t

A time-domain minimal phase filter bank with frequency shapes from **MHAOvIFilter::fftfb_t** (p. 574).

· class scale_var_t

Typedefs

typedef mha_real_t(scale_fun_t) (mha_real_t)

4.29.1 Detailed Description

Namespace for overlapping FFT based filter bank classes and functions.

- 4.29.2 Typedef Documentation
- 4.29.2.1 typedef mha_real_t(MHAOvlFilter::scale_fun_t) (mha_real_t)
- 4.30 MHAOvlFilter::barkscale Namespace Reference

Classes

- class bark2hz_t
- class hz2bark_t

Variables

- mha_real_t vfreq [BARKSCALE_ENTRIES]
- mha_real_t vbark [BARKSCALE_ENTRIES]
- 4.30.1 Variable Documentation
- 4.30.1.1 mha_real_t MHAOvlFilter::barkscale::vfreq
- 4.30.1.2 mha_real_t MHAOvlFilter::barkscale::vbark
- 4.31 MHAOvIFilter::FreqScaleFun Namespace Reference

Transform functions from linear scale in Hz to new frequency scales.

Functions

```
mha_real_t hz2hz (mha_real_t x)
```

Dummy scale transformation Hz to Hz.

- mha real t hz2khz (mha real t x)
- mha_real_t hz2octave (mha_real_t x)
- mha_real_t hz2third_octave (mha_real_t x)
- mha_real_t hz2bark (mha_real_t x)

Transformation to bark scale.

- mha real t hz2bark analytic (mha real t)
- mha real t hz2erb (mha real t)
- mha_real_t hz2erb_glasberg1990 (mha_real_t)
- mha_real_t hz2log (mha_real_t x)

Third octave frequency scale.

• mha real t inv scale (mha real t, mha real t(*)(mha real t))

4.31.1 Detailed Description

Transform functions from linear scale in Hz to new frequency scales.

4.31.2 Function Documentation

```
4.31.2.1 mha_real_t MHAOvlFilter::FreqScaleFun::hz2hz ( mha_real_t x )
```

Dummy scale transformation Hz to Hz.

This function implements a dummy scale transformation (linear frequency scale).

Parameters

```
x Input frequency in Hz
```

Returns

Frequency in Hz

```
    4.31.2.4 mha_real_t MHAOvlFilter::FreqScaleFun::hz2third_octave ( mha_real_t x )
    4.31.2.5 mha_real_t MHAOvlFilter::FreqScaleFun::hz2bark ( mha_real_t x )
```

Transformation to bark scale.

This function implements a critical band rate (bark) scale.

Parameters

```
x Input frequency in Hz
```

Returns

Critical band rate in Bark

Third octave frequency scale.

This function implements a third octave scale. Frequencies below 16 Hz are mapped to 16 Hz.

Parameters

```
x Frequency in Hz
```

Returns

Third octaves relative to 1000 Hz

4.32 MHAOvIFilter::ShapeFun Namespace Reference

Shape functions for overlapping filters.

Functions

```
mha_real_t rect (mha_real_t x)
```

Filter shape function for rectangular filters.

mha_real_t linear (mha_real_t x)

Filter shape function for sawtooth filters.

mha_real_t hann (mha_real_t x)

Filter shape function for hanning shaped filters.

- mha_real_t expflt (mha_real_t)
- mha_real_t gauss (mha_real_t)

4.32.1 Detailed Description

Shape functions for overlapping filters.

4.32.2 Function Documentation

```
4.32.2.1 mha_real_t MHAOvlFilter::ShapeFun::rect ( mha_real_t x )
```

Filter shape function for rectangular filters.

This function creates rectangular filter shapes. The edge is exactly half way between two center frequencies (on a given scale).

Parameters

```
x Input value in the range [-1,1].
```

Returns

Weigth function in the range [0,1]

Filter shape function for sawtooth filters.

This function creates sawtooth filter shapes. They rise linearly form 0 to 1 in the interval from the lower neighbor center frequency to the band center frequency and from 1 to 0 in the interval from the band center frequency to the upper neighbour band center frequency. Linear means linear on a given frequency scale.

Parameters

```
x Input value in the range [-1,1].
```

Returns

Weigth function in the range [0,1]

Filter shape function for hanning shaped filters.

This function creates hanning window shaped filters.

Parameters

```
x Input value in the range [-1,1].
```

Returns

Weigth function in the range [0,1]

```
4.32.2.4 mha_real_t MHAOvIFilter::ShapeFun::expflt (
mha_real_t x )
```

4.33 MHAParser Namespace Reference

Name space for the openMHA-Parser configuration language.

Namespaces

StrCnv

String converter namespace.

Classes

· class base t

Base class for all parser items.

class bool_mon_t

Monitor with string value.

· class bool_t

Variable with a boolean value ("yes"/"no")

- class c_ifc_parser_t
- · class commit t

Parser variable with event-emission functionality.

class complex_mon_t

Monitor with complex value.

class complex t

Variable with complex value.

- · class entry_t
- class expression_t
- class float_mon_t

Monitor with float value.

· class float t

Variable with float value.

· class int_mon_t

Monitor variable with int value.

· class int t

Variable with integer value.

class keyword list t

Keyword list class.

class kw_t

Variable with keyword list value.

class mcomplex_mon_t

Matrix of complex numbers monitor.

· class mcomplex_t

Matrix variable with complex value.

class mfloat_mon_t

Matrix of floats monitor.

· class mfloat t

Matrix variable with float value.

- · class mhaconfig_mon_t
- class mhapluginloader_t

Class to create a plugin loader in a parser, including the load logic.

class monitor t

Base class for monitors and variable nodes.

class parser_t

Parser node class.

class range_var_t

Base class for all variables with a numeric value range.

class string_mon_t

Monitor with string value.

class string_t

Variable with a string value.

class variable_t

Base class for variable nodes.

• class vcomplex_mon_t

Monitor with vector of complex values.

class vcomplex t

Vector variable with complex value.

class vfloat_mon_t

Vector of floats monitor.

· class vfloat t

Vector variable with float value.

class vint mon t

Vector of ints monitor.

· class vint t

Variable with vector<int> value.

class vstring_mon_t

Vector of monitors with string value.

class vstring_t

Vector variable with string values.

class window_t

MHA configuration interface for a window function generator.

Typedefs

- typedef std::string(base_t::* opact_t) (expression_t &)
- typedef std::string(base_t::* query_t) (const std::string &)
- typedef std::map< std::string, opact_t > opact_map_t
- typedef std::map< std::string, query_t > query_map_t
- typedef std::list< entry_t > entry_map_t
- typedef int(* c_parse_cmd_t) (void *, const char *, char *, unsigned int)
- typedef const char *(* c_parse_err_t) (void *, int)

Functions

- int **get_precision** ()
- std::string commentate (const std::string &s)
- void **trim** (std::string &s)
- std::string cfg_dump (base_t *, const std::string &)
- std::string cfg_dump_short (base_t *, const std::string &)
- std::string all_dump (base_t *, const std::string &)
- std::string mon_dump (base_t *, const std::string &)
- std::string all_ids (base_t *, const std::string &, const std::string &="")
- void **strreplace** (std::string &, const std::string &, const std::string &) string replace function
- void envreplace (std::string &s)

4.33.1 Detailed Description

Name space for the openMHA-Parser configuration language.

This namespace contains all classes which are needed for the implementation of the open← MHA configuration language. For details on the script language itself please see section **The openMHA configuration language** (p. 33).

4.33.2 List of valid MHAParser items

```
• Sub-parser: parser_t (p. 644)
```

```
    Variables:
```

```
Numeric variables: int_t (p. 622), vint_t (p. 668), float_t (p. 617), vfloat_t (p. 664), mfloat_t (p. 635)

Other variables: string_t (p. 654), vstring_t (p. 672), kw_t (p. 627), bool_t (p. 603)
```

Monitors:

```
Numeric monitors: int_mon_t (p. 620), vint_mon_t (p. 666), float_mon_t (p. 616), vfloat_mon_t (p. 662)
mfloat_mon_t (p. 634)
mcomplex_mon_t (p. 630)
Other monitors: bool_mon_t (p. 602), string_mon_t (p. 652), vstring_mon_t (p. 670)
```

Members can be inserted into the configuration namespace by using MHAParser::insert_item() or the **insert member()** (p. 955) macro.

```
4.33.3 Typedef Documentation
```

```
4.33.3.1 typedef std::string(base_t::* MHAParser::opact_t) (expression t &)
```

```
4.33.3.2 typedef std::string(base_t::* MHAParser::query_t) (const std::string &)
```

- 4.33.3.3 typedef std::map<std::string,opact_t> MHAParser::opact_map_t
- 4.33.3.4 typedef std::map<std::string,query_t> MHAParser::query_map_t
- 4.33.3.5 typedef std::list<entry t> MHAParser::entry map t
- 4.33.3.6 typedef int(* MHAParser::c_parse_cmd_t) (void *, const char *, char *, unsigned int)
- 4.33.3.7 typedef const char*(* MHAParser::c_parse_err_t) (void *, int)

4.33.4 Function Documentation

```
4.33.4.1 int MHAParser::get_precision ( )
4.33.4.2 std::string MHAParser::commentate (
                       const std::string & s )
4.33.4.3 void MHAParser::trim (
                       std::string & s )
4.33.4.4 std::string MHAParser::cfg_dump (
                       base_t * p,
                       const std::string & pref )
4.33.4.5 std::string MHAParser::cfg_dump_short (
                       base t*p,
                       const std::string & pref )
4.33.4.6 std::string MHAParser::all_dump (
                       base_t * p,
                       const std::string & pref )
4.33.4.7 std::string MHAParser::mon_dump (
                       base t*p,
                       const std::string & pref )
4.33.4.8 std::string MHAParser::all_ids (
                       base_t * p,
                       const std::string & pref,
                       const std::string & id = " " )
4.33.4.9 void MHAParser::strreplace (
                       std::string & s,
                       const std::string & arg,
                       const std::string & rep )
```

string replace function

Parameters

s	target string	
arg	search pattern	
rep	replace pattern	

4.33.4.10 void MHAParser::envreplace (std::string & s)

4.34 MHAParser::StrCnv Namespace Reference

String converter namespace.

Functions

• int num_brackets (const std::string &s)

Return number of brackets at beginning and end of string.

- int bracket_balance (const std::string &s)
- void str2val (const std::string &, bool &)

Convert from string.

void str2val (const std::string &, float &)

Convert from string.

void str2val (const std::string &, mha_complex_t &)

Convert from string.

void str2val (const std::string &, int &)

Convert from string.

void str2val (const std::string &, keyword_list_t &)

Convert from string.

void str2val (const std::string &, std::string &)

Convert from string.

template<class arg_t >

void **str2val** (const std::string &s, std::vector< arg_t > &val)

Converter for vector types.

template<>

void **str2val**< **mha_real_t** > (const std::string &s, std::vector< **mha_real_t** > &v)

Converter for vector<mha real t> with Matlab-style expansion.

template<class arg_t >

void **str2val** (const std::string &s, std::vector< std::vector< arg_t >> &val)

Converter for matrix types.

std::string val2str (const bool &)

Convert to string.

std::string val2str (const float &)

Convert to string.

std::string val2str (const mha_complex_t &)

Convert to string.

• std::string val2str (const int &)

Convert to string.

• std::string val2str (const keyword list t &)

Convert to string.

std::string val2str (const std::string &)

Convert to string.

std::string val2str (const std::vector< float > &)

Convert to string.

```
    std::string val2str (const std::vector< mha_complex_t > &)
    Convert to string.
```

std::string val2str (const std::vector< int > &)

Convert to string.

std::string val2str (const std::vector< std::string > &)

Convert to string.

- std::string val2str (const std::vector< std::vector< float >> &)

Convert to string.

std::string val2str (const std::vector< std::vector< mha_complex_t >> &)
 Convert to string.

4.34.1 Detailed Description

String converter namespace.

The functions defined in this namespace manage the conversions from C++ variables to strings and back. It was tried to keep a matlab compatible string format for vectors and vectors of vectors.

4.34.2 Function Documentation

```
4.34.2.1 int MHAParser::StrCnv::num_brackets ( const std::string & s )
```

Return number of brackets at beginning and end of string.

Parameters

```
s String
```

Returns

Number of brackets, or -1 for empty string

```
4.34.2.2 int MHAParser::StrCnv::bracket_balance ( const std::string & s )
```

```
4.34.2.3 void MHAParser::StrCnv::str2val ( const std::string & s, bool & v )
```

Convert from string.

```
4.34.2.4 void MHAParser::StrCnv::str2val (
                      const std::string & s,
                      float & v )
Convert from string.
4.34.2.5 void MHAParser::StrCnv::str2val (
                      const std::string & s.
                      mha complex t&v)
Convert from string.
4.34.2.6 void MHAParser::StrCnv::str2val (
                      const std::string & s,
                      int & v )
Convert from string.
4.34.2.7 void MHAParser::StrCnv::str2val (
                      const std::string & s,
                      MHAParser::keyword_list_t & v )
Convert from string.
4.34.2.8 void MHAParser::StrCnv::str2val (
                      const std::string & s,
                      std::string & v )
Convert from string.
4.34.2.9 template < class arg_t > void MHAParser::StrCnv::str2val (
                      const std::string & s,
                      std::vector< arg t > & val )
Converter for vector types.
4.34.2.10 template<> void MHAParser::StrCnv::str2val< mha real t > (
                       const std::string & s,
                       std::vector< mha_real_t > & v )
Converter for vector<mha_real_t> with Matlab-style expansion.
4.34.2.11 template < class arg_t > void MHAParser::StrCnv::str2val (
                       const std::string & s,
                       std::vector< std::vector< arg_t >> & val )
Converter for matrix types.
```

```
4.34.2.12 std::string MHAParser::StrCnv::val2str (
                        const bool & v )
Convert to string.
4.34.2.13 std::string MHAParser::StrCnv::val2str (
                        const float & v )
Convert to string.
4.34.2.14 std::string MHAParser::StrCnv::val2str (
                        const mha complex t & v)
Convert to string.
4.34.2.15 std::string MHAParser::StrCnv::val2str (
                        const int & v )
Convert to string.
4.34.2.16 std::string MHAParser::StrCnv::val2str (
                        const keyword_list_t & v )
Convert to string.
4.34.2.17 std::string MHAParser::StrCnv::val2str (
                        const std::string & v )
Convert to string.
4.34.2.18 std::string MHAParser::StrCnv::val2str (
                        const std::vector< float > & v )
Convert to string.
4.34.2.19 std::string MHAParser::StrCnv::val2str (
                        const std::vector< mha_complex_t > & v )
Convert to string.
4.34.2.20 std::string MHAParser::StrCnv::val2str (
                        const std::vector< int > & \nu )
Convert to string.
```

```
4.34.2.21 std::string MHAParser::StrCnv::val2str ( const std::vector< std::string > & \nu )
```

Convert to string.

```
4.34.2.22 std::string MHAParser::StrCnv::val2str ( const std::vector< std::vector< float > > & \nu )
```

Convert to string.

```
4.34.2.23 std::string MHAParser::StrCnv::val2str ( const std::vector< std::vector< mha_complex_t >> & \nu )
```

Convert to string.

4.35 MHAPlugin Namespace Reference

Namespace for openMHA plugin class templates and thread-safe runtime configurations.

Classes

- class cfg_chain_t
- class config_t

Template class for thread safe configuration.

· class plugin_t

The template class for C++ openMHA plugins.

4.35.1 Detailed Description

Namespace for openMHA plugin class templates and thread-safe runtime configurations.

4.36 MHAPlugin_Resampling Namespace Reference

Classes

- · class resampling if t
- class resampling_t

4.37 MHAPlugin_Split Namespace Reference

Classes

· class domain_handler_t

Handles domain-specific partial input and output signal.

class dummy_threads_t

Dummy specification of a thread platform: This class implements everything in a single thread.

class posix_threads_t

Posix threads specification of thread platform.

class split_t

Implements split plugin.

class splitted_part_t

The **splitted_part_t** (p. 706) instance manages the plugin that performs processing on the reduced set of channels.

class thread_platform_t

Basic interface for encapsulating thread creation, thread priority setting, and synchronization on any threading platform (i.e., pthreads or win32threads).

· class uni_processor_t

An interface to a class that sports a process method with no parameters and no return value.

Enumerations

4.37.1 Detailed Description

A namespace for the split plugin. Helps testability and documentation.

4.37.2 Enumeration Type Documentation

4.37.2.1 anonymous enum

Invalid thread priority.

Enumerator

INVALID_THREAD_PRIORITY

4.38 MHASignal Namespace Reference

Namespace for audio signal handling and processing classes.

Classes

• class async_rmslevel_t

Class for asynchronous level metering.

- class delay_spec_t
- class delay t

Class to realize a simple delay of waveform streams.

class delay_wave_t

Delayline containing wave fragments.

· class doublebuffer t

Double-buffering class.

- · class fft t
- class hilbert_fftw_t
- class hilbert_t

Hilbert transformation of a waveform segment.

class loop_wavefragment_t

Copy a fixed waveform fragment to a series of waveform fragments of other size.

class matrix_t

n-dimensional matrix with real or complex floating point values.

class minphase_t

Minimal phase function.

· class quantizer t

Simple simulation of fixpoint quantization.

class ringbuffer_t

A ringbuffer class for time domain audio signal, which makes no assumptions with respect to fragment size.

class schroeder_t

Schroeder tone complex class.

class spectrum_t

a signal processing class for spectral data (based on mha_spec_t (p. 425))

- · class stat t
- class subsample delay t

implements subsample delay in spectral domain.

class uint_vector_t

Vector of unsigned values, used for size and index description of n-dimensional matrixes.

· class waveform t

signal processing class for waveform data (based on mha_wave_t (p. 455))

Functions

void for_each (mha_wave_t *s, mha_real_t(*fun)(mha_real_t))

Apply a function to each element of a **mha_wave_t** (p. 455).

mha_real_t lin2db (mha_real_t x)

Conversion from linear scale to dB (no SPL reference)

mha_real_t db2lin (mha_real_t x)

Conversion from dB scale to linear (no SPL reference)

mha_real_t pa2dbspl (mha_real_t x)

Conversion from linear Pascal scale to dB SPL.

mha_real_t pa22dbspl (mha_real_t x, mha_real_t eps=1e-20f)

Conversion from squared Pascal scale to dB SPL.

mha_real_t dbspl2pa (mha_real_t x)

Conversion from dB SPL to linear Pascal scale.

mha_real_t smp2sec (mha_real_t n, mha_real_t srate)

conversion from samples to seconds

mha_real_t sec2smp (mha_real_t sec, mha_real_t srate)

conversion from seconds to samples

mha_real_t bin2freq (mha_real_t bin, unsigned fftlen, mha_real_t srate)

conversion from fft bin index to frequency

mha_real_t freq2bin (mha_real_t freq, unsigned fftlen, mha_real_t srate)

conversion from frequency to fft bin index

mha_real_t smp2rad (mha_real_t samples, unsigned bin, unsigned fftlen)

conversion from delay in samples to phase shift

• mha_real_t rad2smp (mha_real_t phase_shift, unsigned bin, unsigned fftlen)

conversion from phase shift to delay in samples

template<class elem type >

std::vector< elem_type > **dupvec** (std::vector< elem_type > vec, unsigned n)

Duplicate last vector element to match desired size.

template<class elem_type >

std::vector< elem_type > dupvec_chk (std::vector< elem_type > vec, unsigned n)

Duplicate last vector element to match desired size, check for dimension.

void copy_channel (mha_spec_t &self, const mha_spec_t &src, unsigned sch, unsigned dch)

Copy one channel of a source signal.

void copy_channel (mha_wave_t &self, const mha_wave_t &src, unsigned src_← channel, unsigned dest channel)

Copy one channel of a source signal.

• mha_real_t rmslevel (const mha_spec_t &s, unsigned int channel, unsigned int fftlen)

Return RMS level of a spectrum channel.

mha_real_t colored_intensity (const mha_spec_t &s, unsigned int channel, unsigned int fftlen, mha_real_t sqfreq_response[])

Colored spectrum intensity.

• mha_real_t maxabs (const mha_spec_t &s, unsigned int channel)

Find maximal absolute value.

mha_real_t rmslevel (const mha_wave_t &s, unsigned int channel)

Return RMS level of a waveform channel.

mha_real_t maxabs (const mha_wave_t &s, unsigned int channel)

Find maximal absolute value.

mha_real_t maxabs (const mha_wave_t &s)

Find maximal absolute value.

mha_real_t max (const mha_wave_t &s)

Find maximal value.

• mha real t min (const mha wave t &s)

Find minimal value.

• mha real t sumsqr channel (const mha wave t &s, unsigned int channel)

Calculate sum of squared values in one channel.

• mha real t sumsqr frame (const mha wave t &s, unsigned int frame)

Calculate sum over all channels of squared values.

- void scale (mha spec t *dest, const mha wave t *src)
- void limit (mha_wave_t &s, const mha_real_t &min, const mha_real_t &max)

Limit the singal in the waveform buffer to the range [min, max].

template<class elem_type >

elem_type kth_smallest (elem_type array[], unsigned n, unsigned k)

Fast search for the kth smallest element of an array.

template < class elem type >

elem_type **median** (elem_type array[], unsigned n)

Fast median search.

template < class elem type >

elem_type **mean** (const std::vector< elem_type > &data, elem_type start_val)

Calculate average of elements in a vector.

template<class elem_type >

std::vector< elem_type > quantile (std::vector< elem_type > data, const std::vector< elem_type > &p)

Calculate quantile of elements in a vector.

- void saveas_mat4 (const mha_spec_t &data, const std::string &varname, FILE *fh)
 Save a openMHA spectrum as a variable in a Matlab4 file.
- void **saveas_mat4** (const **mha_wave_t** &data, const std::string &varname, FILE *fh)

 Save a openMHA waveform as a variable in a Matlab4 file.
- void saveas_mat4 (const std::vector< mha_real_t > &data, const std::string &varname,
 FILE *fh)

Save a float vector as a variable in a Matlab4 file.

void copy permuted (mha wave t *dest, const mha wave t *src)

Copy contents of a waveform to a permuted waveform.

Variables

• unsigned long int **signal_counter** = 0

Signal counter to produce signal ID strings.

4.38.1 Detailed Description

Namespace for audio signal handling and processing classes.

4.38.2 Function Documentation

```
4.38.2.1 void MHASignal::scale (

mha_spec_t * dest,

const mha_wave_t * src )

4.38.2.2 void MHASignal::limit (

mha_wave_t & s,

const mha_real_t & min,

const mha_real_t & max )
```

Limit the singal in the waveform buffer to the range [min, max].

Parameters

s	The signal to limit. The signal in this wave buffer is modified.
min	lower limit
max	upper limit

Fast search for the kth smallest element of an array.

The order of elements is altered, but not completely sorted. Using the algorithm from N. Wirth, published in "Algorithms + data structures = programs", Prentice-Hall, 1976

Parameters

array	Element array

Postcondition

The order of elements in the array is altered. array[k] then holds the result.

Parameters

n	number of elements in array
---	-----------------------------

Precondition

n >= 1

Parameters

k The k'th smalles element is returned: k = 0 returns the minimum, k = (n-1)/2 returns the median, k=(n-1) returns the maximum

Precondition

k < n

Returns

The kth smallest array element

```
4.38.2.4 template < class elem_type > elem_type MHASignal::median ( elem_type array[], unsigned n ) [inline]
```

Fast median search.

The order of elements is altered, but not completely sorted.

Parameters

```
array Element array
```

Postcondition

The order of elements in the array is altered. array[(n-1)/2] then holds the median.

Parameters

n number of elements in array

Precondition

n >= 1

Returns

The median of the array elements

Calculate average of elements in a vector.

Parameters

data	Input vector
start_val	Value for initialization of the return value before sum.

Returns

The average of the vector elements

Calculate quantile of elements in a vector.

Parameters

data	Input vector
р	Vector of probability values.

Returns

Vector of quantiles of input data, one entry for each probability value.

Save a openMHA spectrum as a variable in a Matlab4 file.

Parameters

data	openMHA spectrum to be saved.
varname	Matlab variable name (Matlab4 limitations on maximal length are not checked).
fh	File handle to Matlab4 file.

Save a openMHA waveform as a variable in a Matlab4 file.

Parameters

data	openMHA waveform to be saved.
varname	Matlab variable name (Matlab4 limitations on maximal length are not checked).
fh	File handle to Matlab4 file.

Save a float vector as a variable in a Matlab4 file.

Parameters

data	Float vector to be saved.
varname	Matlab variable name (Matlab4 limitations on maximal length are not checked).
fh	File handle to Matlab4 file.

Copy contents of a waveform to a permuted waveform.

Parameters

dest	Destination waveform
src	Source waveform

The total size of src and dest must be the same, num_frames and num_channels must be exchanged in dest.

4.38.3 Variable Documentation

4.38.3.1 unsigned long int MHASignal::signal_counter = 0

Signal counter to produce signal ID strings.

4.39 MHASndFile Namespace Reference

Classes

- class sf t
- class sf_wave_t

4.40 MHATableLookup Namespace Reference

Namespace for table lookup classes.

Classes

• class linear_table_t

Class for interpolation with equidistant x values.

- · class table_t
- · class xy_table_t

Class for interpolation with non-equidistant x values.

4.40.1 Detailed Description

Namespace for table lookup classes.

4.41 MHAWindow Namespace Reference

Collection of Window types.

Classes

class bartlett_t

Bartlett window.

class base_t

Common base for window types.

· class blackman_t

Blackman window.

· class fun_t

Generic window based on a generator function.

class hamming_t

Hamming window.

class hanning_t

von-Hann window

· class rect t

Rectangular window.

class user_t

User defined window.

Functions

· float rect (float)

Rectangular window function.

float bartlett (float)

Bartlett window function.

float hanning (float)

Hanning window function.

float hamming (float)

Hamming window function.

float blackman (float)

Blackman window function.

4.41.1 Detailed Description

Collection of Window types.

4.41.2 Function Documentation

```
4.41.2.1 float MHAWindow::rect ( float x )
```

Rectangular window function.

```
4.41.2.2 float MHAWindow::bartlett ( float x )
```

Bartlett window function.

```
4.41.2.3 float MHAWindow::hanning ( float x )
```

Hanning window function.

```
4.41.2.4 float MHAWindow::hamming ( float x )
```

Hamming window function.

```
4.41.2.5 float MHAWindow::blackman ( float x )
```

Blackman window function.

4.42 multibandcompressor Namespace Reference

Classes

- class fftfb_plug_t
- · class interface t
- class plugin_signals_t

4.43 noisePowProposedScale Namespace Reference

Classes

- class interface t
- class noisePowProposed

4.44 overlapadd Namespace Reference

Classes

- class overlapadd_if_t
- class overlapadd_t

4.45 PluginLoader Namespace Reference

Classes

- · class config_file_splitter_t
- class fourway_processor_t

This abstract class defines the interface for classes that implement all types of signal domain processing supported by the MHA: wave2wave, spec2spec, wave2spec, and spec2wave.

• class mhapluginloader_t

Functions

- const char * mhastrdomain (mha_domain_t)
- void mhaconfig_compare (const mhaconfig_t &req, const mhaconfig_t &avail, const std::string &pref="")

Compare two **mhaconfig_t** (p. 463) structures, and report differences as an error.

4.45.1 Function Documentation

```
4.45.1.1 const char * PluginLoader::mhastrdomain ( mha_domain_t d )
4.45.1.2 void PluginLoader::mhaconfig_compare ( const mhaconfig_t & req, const mhaconfig_t & avail, const std::string & pref = " " )
```

Compare two **mhaconfig_t** (p. 463) structures, and report differences as an error.

Parameters

req	Expected mhaconfig_t (p. 463) structure
avail	Available mhaconfig_t (p. 463) structure
pref	Prefix for error messages

4.46 route Namespace Reference

Classes

- class interface_t
- class process_t

4.47 shadowfilter_begin Namespace Reference

Classes

- class cfg_t
- class shadowfilter_begin_t

4.48 shadowfilter_end Namespace Reference

Classes

- class cfg_t
- class shadowfilter_end_t

4.49 smoothgains_bridge Namespace Reference

Classes


- · class overlapadd_if_t
- class smoothspec_wrap_t

5 Class Documentation

5.1 ac2lsl::ac2lsl_t Class Reference

Plugin class of ac2lsl (p. 77).

Inheritance diagram for ac2lsl::ac2lsl_t:

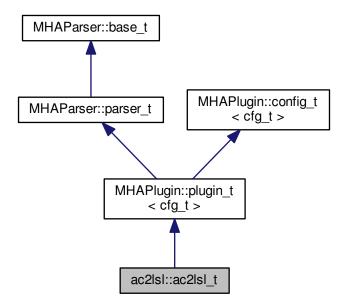

Public Member Functions

- ac2lsl_t (algo_comm_t iac, const char *chain, const char *algo)
- void prepare (mhaconfig_t &)

Prepare constructs the vector of bridge variables and locks the configuration, then calls **update()** (p. 128).

mha_wave_t * process (mha_wave_t *s)

Processing fct for waveforms.

mha_spec_t * process (mha_spec_t *s)

Processing fct for spectra.

void process ()

Process function.

• void release ()

Release fct.

Private Member Functions

• void update ()

Construct new runtime configuration.

Private Attributes

- MHAParser::vstring_t varsMHAParser::bool_t rt_strict
- MHAParser::bool_t activate
- MHAParser::int_t skip
- MHAEvents::patchbay_t< ac2lsl_t > patchbay
- std::vector< std::unique_ptr< save_var_base_t >> varlist

Additional Inherited Members

5.1.1 Detailed Description

Plugin class of ac2lsl (p. 77).

- 5.1.2 Constructor & Destructor Documentation
- 5.1.2.1 ac2lsl::ac2lsl_t:(algo_comm_t iac, const char * chain, const char * algo)
- 5.1.3 Member Function Documentation

Prepare constructs the vector of bridge variables and locks the configuration, then calls **up-date()** (p. 128).

```
Implements MHAPlugin::plugin_t < cfg_t > (p. 685).
```

Processing fct for waveforms.

Calls process(void) (p. 128).

```
5.1.3.3 mha_spec_t* ac2lsl::ac2lsl_t::process (
                    mha_spec_t * s ) [inline]
Processing fct for spectra.
Calls process(void) (p. 128).
5.1.3.4 void ac2lsl::ac2lsl_t::process (
                    void )
Process function.
Checks once if the plugin is run in a real-time thread and throws if rt_strict is true, then forwards
to cfg_t::process() (p. 130).
5.1.3.5 void ac2lsl::ac2lsl_t::release( ) [virtual]
Release fct.
Unlocks variable name list
Reimplemented from MHAPlugin::plugin_t < cfg_t > (p. 686).
5.1.3.6 void ac2lsl::ac2lsl_t::update( ) [private]
Construct new runtime configuration.
5.1.4 Member Data Documentation
5.1.4.1 MHAParser::vstring_t ac2lsl::ac2lsl_t::vars [private]
5.1.4.2 MHAParser::bool_t ac2lsl::ac2lsl_t::rt_strict [private]
5.1.4.3 MHAParser::bool_t ac2lsl::ac2lsl_t::activate [private]
5.1.4.4 MHAParser::int tac2lsl::ac2lsl_t::skip [private]
5.1.4.5 MHAEvents::patchbay_t<ac2lsl_t> ac2lsl::ac2lsl_t::patchbay [private]
5.1.4.6 std::vector<std::unique_ptr<save_var_base_t>> ac2lsl::ac2lsl_t::varlist [private]
```

The documentation for this class was generated from the following file:

ac2lsl.cpp

5.2 ac2lsl::cfg_t Class Reference

Runtime configuration class of the **ac2lsl** (p. 77) plugin.

Public Member Functions

```
    cfg_t (bool activate_, unsigned skipcnt_, std::vector< std::unique_ptr< save_var_← base_t >> *varlist_)
```

C'tor of ac2lsI (p. 77) run time configuration.

• void **process** ()

Private Attributes

- std::vector< std::unique_ptr< save_var_base_t >> * varlist

 Pointer to vector of unique ptr's of ac to lsl bridges.
- unsigned skipcnt

Counter of frames to skip.

unsigned skip

Number of frames to skip after each send.

· bool activate

Activate/Deactivate sending to Isl.

5.2.1 Detailed Description

Runtime configuration class of the ac2lsl (p. 77) plugin.

5.2.2 Constructor & Destructor Documentation

C'tor of ac2lsl (p. 77) run time configuration.

Parameters

activate⇔	Activate/Deactivate sending
_	
skipcnt⊷	Number of frames to skip after each send
	·
varlist⇔	Pointer to vector of unique ptr's of ac to Isl bridges.

5.2.3 Member Function Documentation

5.2.3.1 void cfg_t::process (void)

5.2.4 Member Data Documentation

5.2.4.1 std::vector<std::unique_ptr<save_var_base_t>>* ac2lsl::cfg_t::varlist [private]

Pointer to vector of unique ptr's of ac to Isl bridges.

Raw pointer because we do not take ownership

5.2.4.2 unsigned ac2lsl::cfg_t::skipcnt [private]

Counter of frames to skip.

5.2.4.3 unsigned ac2lsl::cfg_t::skip [private]

Number of frames to skip after each send.

5.2.4.4 bool ac2lsl::cfg_t::activate [private]

Activate/Deactivate sending to Isl.


The documentation for this class was generated from the following file:

· ac2lsl.cpp

5.3 ac2lsl::save_var_base_t Class Reference

Interface for ac to Isl bridge variable.

Inheritance diagram for ac2lsl::save_var_base_t:

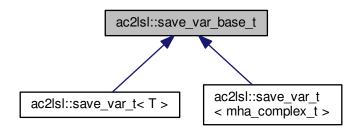

Public Member Functions

- virtual void send frame ()=0
- virtual ~save_var_base_t ()=default

5.3.1 Detailed Description

Interface for ac to Isl bridge variable.

5.3.2 Constructor & Destructor Documentation

- **5.3.2.1** virtual ac2lsl::save_var_base_t::~save_var_base_t() [virtual], [default]
- 5.3.3 Member Function Documentation
- **5.3.3.1 virtual void ac2lsl::save_var_base_t::send_frame()** [pure virtual]

Implemented in ac2lsl::save_var_t< mha_complex_t > (p. 135), and ac2lsl::save_var_t< T > (p. 133).


The documentation for this class was generated from the following file:

· ac2lsl.cpp

5.4 ac2lsl::save_var_t < T > Class Template Reference

Implementation for all ac to Isl bridges except complex types.

Inheritance diagram for ac2lsl::save_var_t< T >:

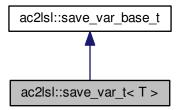

Public Member Functions

save_var_t (const std::string &name, const std::string &type, void *data, size_t num_
entries)

C'tor of generic ac to Isl bridge.

- virtual ~save_var_t ()=default
- virtual void send_frame ()

Send a frame to Isl.

Private Attributes

• Isl::stream_outlet **stream**LSL stream outlet.

• T * buf

Pointer to data buffer of the ac variable.

5.4.1 Detailed Description

```
template<typename T> class ac2lsl::save_var_t< T>
```

Implementation for all ac to Isl bridges except complex types.

5.4.2 Constructor & Destructor Documentation

C'tor of generic ac to Isl bridge.

Parameters

name	Name of variable as seen in Isl
type	Type of variable as seen in Isl
data	Pointer to data buffer of the ac variable
num_entries	Number of entries if the ac variable is a vector. Should be set to one if not a vector.

5.4.2.2 template < typename T > virtual ac2lsl::save_var_t < T > :: \sim save_var_t () [virtual], [default]

- 5.4.3 Member Function Documentation

Send a frame to Isl.

Implements ac2lsl::save_var_base_t (p. 131).

- 5.4.4 Member Data Documentation
- **5.4.4.1** template<typename T > Isl::stream_outlet ac2Isl::save_var_t< T >::stream [private]

LSL stream outlet.

Interface to Isl

5.4.4.2 template<typename T > T* ac2lsl::save_var_t < T >::buf [private]


Pointer to data buffer of the ac variable.

The documentation for this class was generated from the following file:

- ac2lsl.cpp
- 5.5 ac2lsl::save_var_t < mha_complex_t > Class Template Reference

Template specialization of the ac2lsl (p. 77) bridge to take care of complex numbers.

Inheritance diagram for ac2lsl::save_var_t< mha_complex_t >:

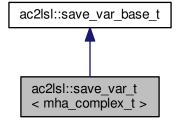

Public Member Functions

save_var_t (const std::string &name, const std::string &type, void *data, size_t _num_← entries)

C'tor of specialization for complex types.

- virtual ~save_var_t ()=default
- virtual void send_frame ()

Send a frame of complex types.

Private Attributes

• lsl::stream_outlet stream

LSL stream outlet.

std::vector< mha_real_t > vec

Vector that gets sent over to the Isl instead of the actual complex type.

mha_complex_t * buf

Pointer to data buffer of the ac variable.

size_t num_entries

Number of entries in the vector.

5.5.1 Detailed Description

```
template<> class ac2lsl::save_var_t< mha_complex_t >
```

Template specialization of the **ac2lsl** (p. 77) bridge to take care of complex numbers.

This specialization is needed because Isl does not support complex numbers. Order is [re(0), im(0), re(1), im(1), ...]

5.5.2 Constructor & Destructor Documentation

C'tor of specialization for complex types.

See generic c'tor for details.

135

5.5.3 Member Function Documentation

Send a frame of complex types.

Reorders real and imaginary parts into one vector.

Implements ac2lsl::save_var_base_t (p. 131).

5.5.4 Member Data Documentation

5.5.4.1 Isl::stream_outlet ac2lsl::save_var_t < mha_complex_t >::stream [private]

LSL stream outlet.

Interface to Isl

5.5.4.2 std::vector<mha_real_t> ac2lsl::save_var_t< mha_complex_t>::vec [private]

Vector that gets sent over to the Isl instead of the actual complex type.

5.5.4.3 mha_complex_t* ac2lsl::save_var_t< mha_complex_t >::buf [private]

Pointer to data buffer of the ac variable.

5.5.4.4 size_t ac2lsl::save_var_t < mha_complex_t >::num_entries [private]


Number of entries in the vector.

The documentation for this class was generated from the following file:

ac2lsl.cpp

5.6 ac2wave_if_t Class Reference

Inheritance diagram for ac2wave_if_t:

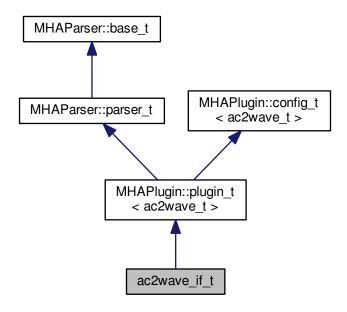

Public Member Functions

- ac2wave_if_t (const algo_comm_t &, const std::string &, const std::string &)
- mha_wave_t * process (mha_spec_t *)
- mha_wave_t * process (mha_wave_t *)
- void prepare (mhaconfig_t &)
- void release ()

Private Member Functions

• void update ()

Private Attributes

- MHAParser::string_t name
- MHAParser::float_t gain_in
- MHAParser::float_t gain_ac
- MHAParser::int_t delay_in
- MHAParser::int_t delay_ac
- MHASignal::waveform_t * zeros
- · bool prepared
- MHAEvents::patchbay_t< ac2wave_if_t > patchbay

Additional Inherited Members

```
5.6.1 Constructor & Destructor Documentation
5.6.1.1 ac2wave_if_t::ac2wave_if_t (
                   const algo_comm_t & iac,
                   const std::string & ith,
                   const std::string & ial )
5.6.2 Member Function Documentation
5.6.2.1 mha_wave_t * ac2wave_if_t::process (
                   mha spec t * )
5.6.2.2 mha wave t * ac2wave if t::process (
                   mha_wave_t * s )
5.6.2.3 void ac2wave if t::prepare (
                   mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin t < ac2wave \ t > (p. 685).
5.6.2.4 void ac2wave_if_t::release( ) [virtual]
Reimplemented from MHAPlugin::plugin t < ac2wave t > (p. 686).
5.6.2.5 void ac2wave_if_t::update( ) [private]
5.6.3 Member Data Documentation
5.6.3.1 MHAParser::string_t ac2wave_if_t::name [private]
5.6.3.2 MHAParser::float_t ac2wave_if_t::gain_in [private]
5.6.3.3 MHAParser::float_t ac2wave_if_t::gain_ac [private]
5.6.3.4 MHAParser::int t ac2wave_if_t::delay_in [private]
5.6.3.5 MHAParser::int t ac2wave_if_t::delay_ac [private]
5.6.3.6 MHASignal::waveform t* ac2wave if t::zeros [private]
5.6.3.7 bool ac2wave_if_t::prepared [private]
5.6.3.8 MHAEvents::patchbay_t<ac2wave_if_t> ac2wave_if_t::patchbay [private]
```

The documentation for this class was generated from the following file:

ac2wave.cpp

5.7 ac2wave_t Class Reference

Public Member Functions

- ac2wave_t (unsigned int frames_, unsigned int channels_, algo_comm_t ac_, std::string name_, float gain_in_, float gain_ac_, unsigned int delay_in_, unsigned int delay_ac_)
- mha_wave_t * process (mha_wave_t *)

Private Attributes

- · unsigned int frames
- unsigned int channels
- · mha wave tw
- · algo_comm_t ac
- std::string name
- MHASignal::delay_wave_t delay_in
- MHASignal::delay_wave_t delay_ac
- · mha_real_t gain_in
- · mha_real_t gain_ac
- 5.7.1 Constructor & Destructor Documentation

- 5.7.2 Member Function Documentation
- 5.7.2.1 mha_wave_t * ac2wave_t::process (mha_wave_t * s)
- 5.7.3 Member Data Documentation
- **5.7.3.1 unsigned int ac2wave_t::frames** [private]
- **5.7.3.2 unsigned int ac2wave_t::channels** [private]
- 5.7.3.3 mha wave tac2wave_t::w [private]


```
5.7.3.4 algo_comm_t ac2wave_t::ac [private]
5.7.3.5 std::string ac2wave_t::name [private]
5.7.3.6 MHASignal::delay_wave_t ac2wave_t::delay_in [private]
5.7.3.7 MHASignal::delay_wave_t ac2wave_t::delay_ac [private]
5.7.3.8 mha_real_t ac2wave_t::gain_in [private]
5.7.3.9 mha_real_t ac2wave_t::gain_ac [private]
```

The documentation for this class was generated from the following file:

· ac2wave.cpp

5.8 acConcat_wave Class Reference

Inheritance diagram for acConcat_wave:

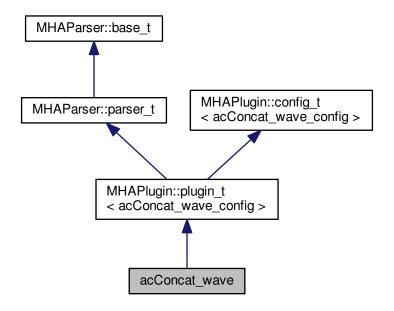

Public Member Functions

acConcat_wave (algo_comm_t &ac, const std::string &chain_name, const std::string &algo_name)

Constructs our plugin.

- ∼acConcat_wave ()
- mha wave t * process (mha wave t *)

Checks for the most recent configuration and defers processing to it.

void prepare (mhaconfig_t &)

Plugin preparation.

void release (void)

Public Attributes

- MHAParser::int_t num_AC
- MHAParser::string_t prefix_names_AC
- MHAParser::vint_t samples_AC
- MHAParser::string_t name_conAC

Private Member Functions

void update_cfg ()

Private Attributes

MHAEvents::patchbay_t< acConcat_wave > patchbay

Additional Inherited Members

```
5.8.1 Constructor & Destructor Documentation
```

Constructs our plugin.

```
5.8.1.2 acConcat_wave::~acConcat_wave()
```

5.8.2 Member Function Documentation

```
5.8.2.1 mha_wave_t * acConcat_wave::process ( mha wave t * signal )
```

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number of]
	channels, frames per block, sampling rate.	

Implements MHAPlugin::plugin_t< acConcat_wave_config > (p. 685).

Reimplemented from MHAPlugin::plugin_t < acConcat_wave_config > (p. 686).

- 5.8.2.4 void acConcat_wave::update_cfg() [private]
- 5.8.3 Member Data Documentation
- 5.8.3.1 MHAParser::int_t acConcat_wave::num_AC
- 5.8.3.2 MHAParser::string t acConcat_wave::prefix_names_AC
- 5.8.3.3 MHAParser::vint_t acConcat_wave::samples_AC
- 5.8.3.4 MHAParser::string_t acConcat_wave::name_conAC
- 5.8.3.5 MHAEvents::patchbay t<acConcat wave> acConcat_wave::patchbay [private]

The documentation for this class was generated from the following files:

- · acConcat wave.h
- acConcat_wave.cpp
- 5.9 acConcat_wave_config Class Reference

Public Member Functions

- acConcat_wave_config (algo_comm_t &ac, const mhaconfig_t in_cfg, acConcat_
 wave *_concat)
- ~acConcat_wave_config ()
- mha_wave_t * process (mha_wave_t *)

Public Attributes

- algo_comm_t & ac
- std::vector< std::string > strNames_AC
- std::vector< int > numSamples_AC
- mha_wave_t vGCC
- MHA_AC::waveform_t * vGCC_con
- 5.9.1 Constructor & Destructor Documentation
- 5.9.1.2 acConcat_wave_config::~acConcat_wave_config()
- 5.9.2 Member Function Documentation
- 5.9.3 Member Data Documentation
- 5.9.3.1 algo comm t& acConcat_wave_config::ac
- 5.9.3.2 std::vector<std::string> acConcat_wave_config::strNames_AC
- 5.9.3.3 std::vector<int> acConcat_wave_config::numSamples_AC
- 5.9.3.4 mha_wave_t acConcat_wave_config::vGCC
- 5.9.3.5 MHA_AC::waveform_t* acConcat_wave_config::vGCC_con

The documentation for this class was generated from the following files:

- acConcat_wave.h
- acConcat_wave.cpp
- 5.10 acmon::ac_monitor_t Class Reference

A class for converting AC variables to Parser monitors of correct type.

Public Member Functions

ac_monitor_t (MHAParser::parser_t &parent, const std::string &name_, algo_comm
 _t ac, bool use_matrix)

Converts AC variable to parser monitor.

void getvar (algo_comm_t ac)

Update values of monitor.

Public Attributes

• std::string name

name of AC variable and parser monitor

• std::string dimstr

columns x rows

MHAParser::vfloat_mon_t mon

Monitor used for real vectors.

· MHAParser::mfloat mon t mon mat

Monitor used for real matrices.

MHAParser::vcomplex_mon_t mon_complex

monitor used for complex vectors

MHAParser::mcomplex_mon_t mon_mat_complex

monitor used for complex matrices

MHAParser::parser_t & p_parser

parent parser to insert monitor into

Private Attributes

· bool use mat

if true, use matrix monitor, else use vector monitor

5.10.1 Detailed Description

A class for converting AC variables to Parser monitors of correct type.

5.10.2 Constructor & Destructor Documentation

```
5.10.2.1 acmon::ac_monitor_t::ac_monitor_t (

MHAParser::parser_t & parent,

const std::string & name_,

algo_comm_t ac,

bool use_matrix )
```

Converts AC variable to parser monitor.

Parameters

parent	The parser to insert a monitor into
name_	The name of the AC variable and the monitor variable
ac	Handle to algorithm communication space
use_matrix	Indicates if a matrix monitor type should be used.

5.10.3 Member Function Documentation

Update values of monitor.

Parameters

ac	Handle to algorithm communication space
----	---

5.10.4 Member Data Documentation

5.10.4.1 std::string acmon::ac_monitor_t::name

name of AC variable and parser monitor

5.10.4.2 std::string acmon::ac_monitor_t::dimstr

columns x rows

5.10.4.3 MHAParser::vfloat_mon_t acmon::ac_monitor_t::mon

Monitor used for real vectors.

5.10.4.4 MHAParser::mfloat_mon_t acmon::ac_monitor_t::mon_mat

Monitor used for real matrices.

5.10.4.5 MHAParser::vcomplex_mon_t acmon::ac_monitor_t::mon_complex

monitor used for complex vectors

5.10.4.6 MHAParser::mcomplex_mon_t acmon::ac_monitor_t::mon_mat_complex

monitor used for complex matrices

5.10.4.7 MHAParser::parser_t& acmon::ac_monitor_t::p_parser

parent parser to insert monitor into

5.10.4.8 bool acmon::ac_monitor_t::use_mat [private]


if true, use matrix monitor, else use vector monitor

The documentation for this class was generated from the following files:

- ac_monitor_type.hh
- ac_monitor_type.cpp

5.11 acmon::acmon_t Class Reference

Inheritance diagram for acmon::acmon_t:

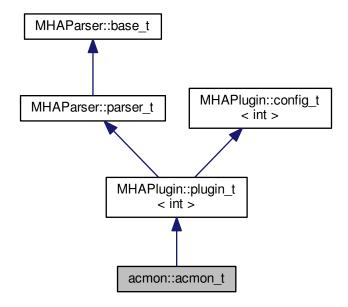

Public Member Functions

```
• acmon_t (const algo_comm_t &, const std::string &, const std::string &)
```

- ~acmon_t ()
- void prepare (mhaconfig_t &)
- void release ()
- mha spec t * process (mha spec t *)
- mha_wave_t * process (mha_wave_t *)

Private Member Functions

- void save_vars ()
- void update_recmode ()

Private Attributes

- · algo_comm_t ac
- MHAParser::vstring_mon_t varlist
- MHAParser::vstring_mon_t dimensions
- MHAParser::kw t dispmode
- MHAParser::kw_t recmode
- std::vector< ac_monitor_t * > vars
- MHAEvents::patchbay t< acmon t > patchbay
- std::string chain
- std::string algo
- bool b_cont
- bool b_snapshot

Additional Inherited Members

5.11.1 Constructor & Destructor Documentation

```
5.11.1.2 acmon::acmon_t::\simacmon_t ( void )
```

5.11.2 Member Function Documentation

Implements MHAPlugin::plugin_t< int > (p. 685).


```
5.11.2.2 void acmon::acmon t::release (
                   void ) [inline],[virtual]
Reimplemented from MHAPlugin::plugin_t< int > (p. 686).
5.11.2.3 mha_spec_t * acmon::acmon_t::process (
                   mha spec t * s)
5.11.2.4 mha wave t * acmon::acmon_t::process (
                   mha wave t * s)
5.11.2.5 void acmon::acmon_t::save_vars() [private]
5.11.2.6 void acmon::acmon_t::update_recmode( ) [private]
5.11.3 Member Data Documentation
5.11.3.1 algo_comm_t acmon::acmon_t::ac [private]
5.11.3.2 MHAParser::vstring mon tacmon::acmon t::varlist [private]
5.11.3.3
        MHAParser::vstring mon tacmon::acmon t::dimensions [private]
5.11.3.4
        MHAParser::kw_t acmon::acmon_t::dispmode [private]
        MHAParser::kw_t acmon::acmon_t::recmode [private]
5.11.3.5
5.11.3.6 std::vector<ac monitor t*> acmon::acmon_t::vars [private]
5.11.3.7 MHAEvents::patchbay_t<acmon_t> acmon::acmon_t::patchbay [private]
        std::string acmon::acmon_t::chain [private]
5.11.3.9 std::string acmon::acmon_t::algo [private]
5.11.3.10 bool acmon::acmon_t::b_cont [private]
5.11.3.11 bool acmon::acmon_t::b_snapshot [private]
```

The documentation for this class was generated from the following file:

· acmon.cpp

5.12 acPooling_wave Class Reference

Inheritance diagram for acPooling_wave:

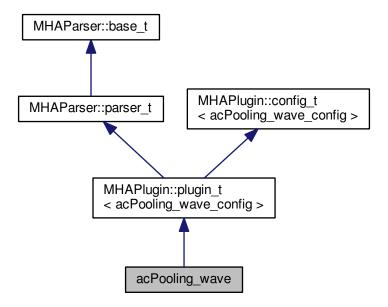

Public Member Functions

acPooling_wave (algo_comm_t &ac, const std::string &chain_name, const std::string &algo_name)

Constructs our plugin.

- ∼acPooling_wave ()
- mha_wave_t * process (mha_wave_t *)

Checks for the most recent configuration and defers processing to it.

void prepare (mhaconfig_t &)

Plugin preparation.

void release (void)

Public Attributes

- MHAParser::int_t numsamples
- MHAParser::int_t pooling_wndlen
- MHAParser::kw_t pooling_type
- MHAParser::float_t upper_threshold
- MHAParser::float_t lower_threshold
- MHAParser::int_t neighbourhood

```
    MHAParser::float_t alpha
```

- MHAParser::string_t p_name
- MHAParser::string_t pool_name
- MHAParser::string_t max_pool_ind_name
- · MHAParser::string t like ratio name

Private Member Functions

void update_cfg ()

Private Attributes

MHAEvents::patchbay_t< acPooling_wave > patchbay

Additional Inherited Members

```
5.12.1 Constructor & Destructor Documentation
```

Constructs our plugin.

```
5.12.1.2 acPooling_wave::~acPooling_wave()
```

5.12.2 Member Function Documentation

```
5.12.2.1 mha_wave_t * acPooling_wave::process ( mha_wave_t * signal )
```

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number of	
	channels, frames per block, sampling rate.	

Implements MHAPlugin::plugin_t< acPooling_wave_config > (p. 685).

Reimplemented from MHAPlugin::plugin_t< acPooling_wave_config > (p. 686).

```
5.12.2.4 void acPooling_wave::update_cfg( ) [private]
```

5.12.3 Member Data Documentation

```
5.12.3.1 MHAParser::int_t acPooling_wave::numsamples
```

5.12.3.2 MHAParser::int_t acPooling_wave::pooling_wndlen

5.12.3.3 MHAParser::kw t acPooling_wave::pooling_type

5.12.3.4 MHAParser::float_t acPooling_wave::upper_threshold

5.12.3.5 MHAParser::float tacPooling_wave::lower_threshold

5.12.3.6 MHAParser::int tacPooling wave::neighbourhood

5.12.3.7 MHAParser::float_t acPooling_wave::alpha

5.12.3.8 MHAParser::string_t acPooling_wave::p_name

5.12.3.9 MHAParser::string_t acPooling_wave::pool_name

5.12.3.10 MHAParser::string_t acPooling_wave::max_pool_ind_name

5.12.3.11 MHAParser::string_t acPooling_wave::like_ratio_name

5.12.3.12 MHAEvents::patchbay_t<acPooling_wave> acPooling_wave::patchbay [private]

The documentation for this class was generated from the following files:

- acPooling_wave.h
- acPooling_wave.cpp

5.13 acPooling_wave_config Class Reference

Public Member Functions

- acPooling_wave_config (algo_comm_t &ac, const mhaconfig_t in_cfg, acPooling
 —wave *_pooling)
- ~acPooling_wave_config ()
- mha_wave_t * process (mha_wave_t *)
- void insert ()

Public Attributes

- · algo comm t & ac
- std::string raw_p_name
- MHA_AC::waveform_t p
- MHA AC::waveform t p max
- MHA_AC::waveform_t like_ratio
- mha_wave_t c
- unsigned int pooling_ind
- unsigned int pooling_option
- unsigned int pooling_size
- float up_thresh
- float low thresh
- int neigh
- float alpha
- MHASignal::waveform_t pool
- 5.13.1 Constructor & Destructor Documentation

- 5.13.1.2 acPooling_wave_config::~acPooling_wave_config()
- 5.13.2 Member Function Documentation
- 5.13.2.1 mha_wave_t * acPooling_wave_config::process (mha_wave_t * wave)
- 5.13.2.2 void acPooling_wave_config::insert ()
- 5.13.3 Member Data Documentation


5.13.3.1	algo_comm_t& acPooling_wave_config::ac
5.13.3.2	std::string acPooling_wave_config::raw_p_name
5.13.3.3	MHA_AC::waveform_t acPooling_wave_config::p
5.13.3.4	MHA_AC::waveform_t acPooling_wave_config::p_max
5.13.3.5	MHA_AC::waveform_t acPooling_wave_config::like_ratio
5.13.3.6	mha_wave_t acPooling_wave_config::c
5.13.3.7	unsigned int acPooling_wave_config::pooling_ind
5.13.3.8	unsigned int acPooling_wave_config::pooling_option
5.13.3.9	unsigned int acPooling_wave_config::pooling_size
5.13.3.10	float acPooling_wave_config::up_thresh
5.13.3.11	float acPooling_wave_config::low_thresh
5.13.3.12	int acPooling_wave_config::neigh
5.13.3.13	float acPooling_wave_config::alpha
5.13.3.14	MHASignal::waveform_t acPooling_wave_config::pool

The documentation for this class was generated from the following files:

- · acPooling_wave.h
- acPooling_wave.cpp

5.14 acsave::acsave_t Class Reference

Inheritance diagram for acsave::acsave_t:

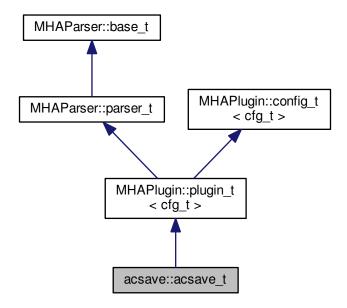

Public Member Functions

- acsave_t (const algo_comm_t &, const std::string &, const std::string &)
- void prepare (mhaconfig_t &)
- void release ()
- mha_spec_t * process (mha_spec_t *)
- mha_wave_t * process (mha_wave_t *)
- void event_start_recording ()
- void event_stop_and_flush ()

Private Types

typedef std::vector< save_var_t * > varlist_t

Private Member Functions

• void process ()

Private Attributes

```
MHAParser::bool_t bflush
MHAParser::kw_t fileformat
MHAParser::string_t fname
MHAParser::float_t reclen
MHAParser::vstring_t variables
varlist_t varlist
std::string chain
std::string algo
bool b_prepared
bool b_flushed
MHAEvents::patchbay_t< acsave_t > patchbay
```

Additional Inherited Members

Reimplemented from MHAPlugin::plugin_t < cfg_t > (p. 686).

```
5.14.3.3 mha_spec_t * acsave::acsave_t::process (
                    mha\_spec\_t * s)
5.14.3.4 mha_wave_t * acsave::acsave_t::process (
                    mha wave t * s)
5.14.3.5 void acsave::acsave_t::event_start_recording()
5.14.3.6 void acsave::acsave_t::event_stop_and_flush()
5.14.3.7 void acsave::acsave_t::process (
                    void ) [private]
5.14.4 Member Data Documentation
5.14.4.1 MHAParser::bool tacsave::acsave_t::bflush [private]
5.14.4.2 MHAParser::kw tacsave::acsave_t::fileformat [private]
5.14.4.3 MHAParser::string_t acsave::acsave_t::fname [private]
5.14.4.4 MHAParser::float tacsave::acsave_t::reclen [private]
5.14.4.5 MHAParser::vstring_t acsave::acsave_t::variables [private]
5.14.4.6 varlist t acsave::acsave_t::varlist [private]
5.14.4.7 std::string acsave::acsave_t::chain [private]
5.14.4.8 std::string acsave::acsave_t::algo [private]
5.14.4.9 bool acsave::acsave_t::b_prepared [private]
5.14.4.10 bool acsave::acsave_t::b_flushed [private]
5.14.4.11 MHAEvents::patchbay_t<acsave_t> acsave::acsave_t::patchbay [private]
```

The documentation for this class was generated from the following file:

· acsave.cpp

5.15 acsave::cfg_t Class Reference

Public Member Functions

- cfg_t (const algo_comm_t &iac, unsigned int imax_frames, std::vector< std::string > &var_names)
- ~cfg_t ()
- void store_frame ()
- void flush_data (const std::string &, unsigned int)

Private Attributes

- · algo_comm_t ac
- · unsigned int nvars
- save_var_t ** varlist
- unsigned int rec_frames
- unsigned int max_frames

5.15.1 Constructor & Destructor Documentation

```
5.15.1.2 cfg_t::\simcfg_t()
```

5.15.2 Member Function Documentation

```
5.15.2.1 void cfg_t::store_frame ( )
```

This function is called in the processing thread.

This function is called in the configuration thread.

Parameters

filename	Output file name
fmt	Output file format

5.15.3 Member Data Documentation

```
5.15.3.1 algo_comm_t acsave::cfg_t::ac [private]
5.15.3.2 unsigned int acsave::cfg_t::nvars [private]
5.15.3.3 save_var_t** acsave::cfg_t::varlist [private]
5.15.3.4 unsigned int acsave::cfg_t::rec_frames [private]
```

5.15.3.5 unsigned int acsave::cfg_t::max_frames [private]

The documentation for this class was generated from the following file:

· acsave.cpp

5.16 acsave::mat4head t Struct Reference

Public Attributes

- int32_t t
- int32_t rows
- int32 t cols
- int32_t imag
- int32_t namelen

5.16.1 Member Data Documentation

```
5.16.1.1 int32 t acsave::mat4head t::t
```

5.16.1.2 int32_t acsave::mat4head_t::rows

5.16.1.3 int32_t acsave::mat4head_t::cols

5.16.1.4 int32_t acsave::mat4head_t::imag

5.16.1.5 int32_t acsave::mat4head_t::namelen

The documentation for this struct was generated from the following file:

· acsave.cpp

5.17 acsave::save_var_t Class Reference

Public Member Functions

```
• save_var_t (const std::string &, int, const algo_comm_t &)
```

- \sim save_var_t ()
- void store_frame ()
- void save_txt (FILE *, unsigned int)
- void save_mat4 (FILE *, unsigned int)
- void save_m (FILE *, unsigned int)

Public Attributes

• double * data

Private Attributes

- std::string name
- unsigned int **nframes**
- · unsigned int ndim
- · unsigned int maxframe
- algo_comm_t ac
- unsigned int framecnt
- bool b_complex

5.17.1 Constructor & Destructor Documentation

```
5.17.1.2 acsave::save_var_t::~save_var_t()
```

5.17.2 Member Function Documentation

```
5.17.2.1 void acsave::save_var_t::store_frame ( )
```


```
5.17.2.3 void acsave::save_var_t::save_mat4 (
                     FILE * fh,
                     unsigned int writeframes )
5.17.2.4 void acsave::save_var_t::save_m (
                     FILE * fh.
                     unsigned int writeframes )
5.17.3 Member Data Documentation
5.17.3.1 double* acsave::save_var_t::data
5.17.3.2 std::string acsave::save_var_t::name [private]
5.17.3.3 unsigned int acsave::save_var_t::nframes [private]
5.17.3.4 unsigned int acsave::save_var_t::ndim [private]
5.17.3.5 unsigned int acsave::save_var_t::maxframe [private]
5.17.3.6 algo_comm_t acsave::save_var_t::ac [private]
5.17.3.7 unsigned int acsave::save_var_t::framecnt [private]
5.17.3.8 bool acsave::save_var_t::b_complex [private]
```

The documentation for this class was generated from the following file:

acsave.cpp

5.18 acSteer Class Reference

Inheritance diagram for acSteer:

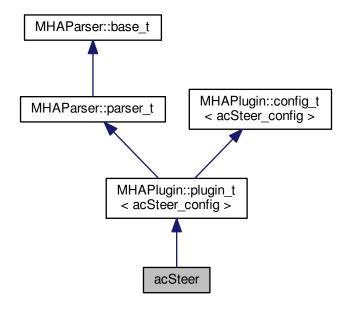

Public Member Functions

acSteer (algo_comm_t &ac, const std::string &chain_name, const std::string &algo_←
name)

Constructs our plugin.

- ~acSteer ()
- mha_spec_t * process (mha_spec_t *)

Thos method is a NOOP.

void prepare (mhaconfig_t &)

Plugin preparation.

void release (void)

Public Attributes

- MHAParser::string_t steerFile
- MHAParser::string_t acSteerName1
- MHAParser::string_t acSteerName2
- MHAParser::int_t nsteerchan
- MHAParser::int_t nrefmic

Private Member Functions

void update_cfg ()

Private Attributes

MHAEvents::patchbay_t< acSteer > patchbay

Additional Inherited Members

```
5.18.1 Constructor & Destructor Documentation
```

```
5.18.1.1 acSteer::acSteer (

algo_comm_t & ac,

const std::string & chain_name,

const std::string & algo name )
```

Constructs our plugin.

```
5.18.1.2 acSteer:: ~acSteer ( )
```

5.18.2 Member Function Documentation

Thos method is a NOOP.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number of
	channels, frames per block, sampling rate.

Implements MHAPlugin::plugin_t< acSteer_config > (p. 685).

The documentation for this class was generated from the following files:

- · acSteer.h
- acSteer.cpp

5.19 acSteer_config Class Reference

Public Member Functions

- acSteer_config (algo_comm_t &ac, const mhaconfig_t in_cfg, acSteer *acSteer)
- ~acSteer_config ()
- void **insert** ()

Public Attributes

- unsigned int nchan
- unsigned int nfreq
- unsigned int **nsteerchan**
- · unsigned int nrefmic
- unsigned int nangle
- MHA_AC::spectrum_t specSteer1
- MHA_AC::spectrum_t specSteer2

```
5.19.1 Constructor & Destructor Documentation
```


- 5.19.1.2 acSteer_config::~acSteer_config()
- 5.19.2 Member Function Documentation
- 5.19.2.1 void acSteer_config::insert ()
- 5.19.3 Member Data Documentation
- 5.19.3.1 unsigned int acSteer_config::nchan
- 5.19.3.2 unsigned int acSteer_config::nfreq
- 5.19.3.3 unsigned int acSteer_config::nsteerchan
- 5.19.3.4 unsigned int acSteer_config::nrefmic
- 5.19.3.5 unsigned int acSteer_config::nangle
- 5.19.3.6 MHA_AC::spectrum_t acSteer_config::specSteer1
- 5.19.3.7 MHA_AC::spectrum_t acSteer_config::specSteer2

The documentation for this class was generated from the following files:

- · acSteer.h
- · acSteer.cpp

5.20 acTransform wave Class Reference

Inheritance diagram for acTransform_wave:

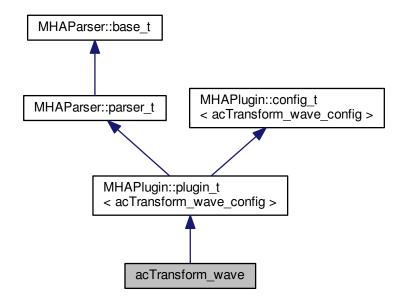

Public Member Functions

acTransform_wave (algo_comm_t &ac, const std::string &chain_name, const std
 ::string &algo_name)

Constructs our plugin.

- ~acTransform_wave ()
- mha_wave_t * process (mha_wave_t *)

Checks for the most recent configuration and defers processing to it.

void prepare (mhaconfig_t &)

Plugin preparation.

void release (void)

Public Attributes

- MHAParser::string_t ang_name
- MHAParser::string_t raw_p_name
- MHAParser::string_t raw_p_max_name
- MHAParser::string_t rotated_p_name
- MHAParser::string_t rotated_p_max_name
- MHAParser::int_t numsamples
- MHAParser::bool_t to_from

Private Member Functions

void update_cfg ()

Private Attributes

MHAEvents::patchbay_t< acTransform_wave > patchbay

Additional Inherited Members

```
5.20.1 Constructor & Destructor Documentation
```

Constructs our plugin.

```
5.20.1.2 acTransform_wave::~acTransform_wave( )
```

5.20.2 Member Function Documentation

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number of	
	channels, frames per block, sampling rate.	

Implements MHAPlugin::plugin_t< acTransform_wave_config > (p. 685).

```
5.20.2.3 void acTransform_wave::release (
                   void ) [inline], [virtual]
Reimplemented from MHAPlugin::plugin t < acTransform wave config > (p. 686).
5.20.2.4 void acTransform_wave::update_cfg( ) [private]
5.20.3 Member Data Documentation
5.20.3.1 MHAParser::string tacTransform_wave::ang_name
5.20.3.2 MHAParser::string_t acTransform_wave::raw_p_name
5.20.3.3 MHAParser::string_t acTransform_wave::raw_p_max_name
5.20.3.4
        MHAParser::string_t acTransform_wave::rotated_p_name
5.20.3.5 MHAParser::string_t acTransform_wave::rotated_p_max_name
5.20.3.6 MHAParser::int t acTransform wave::numsamples
5.20.3.7 MHAParser::bool_t acTransform_wave::to_from
5.20.3.8 MHAEvents::patchbay_t<acTransform_wave> acTransform_wave::patchbay
```

The documentation for this class was generated from the following files:

· acTransform wave.h

[private]

- acTransform_wave.cpp
- 5.21 acTransform wave config Class Reference

Public Member Functions

- acTransform_wave_config (algo_comm_t &ac, const mhaconfig_t in_cfg, ac
 — Transform_wave *_transform)
- ~acTransform_wave_config ()
- mha_wave_t * process (mha_wave_t *)

Public Attributes

- · algo_comm_t & ac
- std::string ang_name
- std::string raw p name
- std::string raw p max name
- MHA_AC::waveform_t rotated_p
- MHA_AC::int_t rotated_i
- unsigned int offset
- unsigned int resolution
- · unsigned int to from
- 5.21.1 Constructor & Destructor Documentation


- 5.21.1.2 acTransform_wave_config::~acTransform_wave_config()
- 5.21.2 Member Function Documentation
- 5.21.3 Member Data Documentation
- 5.21.3.1 algo_comm_t& acTransform_wave_config::ac
- 5.21.3.2 std::string acTransform_wave_config::ang_name
- 5.21.3.3 std::string acTransform_wave_config::raw_p_name
- 5.21.3.4 std::string acTransform_wave_config::raw_p_max_name
- 5.21.3.5 MHA_AC::waveform_t acTransform_wave_config::rotated_p
- 5.21.3.6 MHA_AC::int_t acTransform_wave_config::rotated_i
- 5.21.3.7 unsigned int acTransform_wave_config::offset
- 5.21.3.8 unsigned int acTransform_wave_config::resolution
- 5.21.3.9 unsigned int acTransform_wave_config::to_from

The documentation for this class was generated from the following files:

- · acTransform wave.h
- acTransform_wave.cpp

5.22 addsndfile::addsndfile_if_t Class Reference

Inheritance diagram for addsndfile::addsndfile_if_t:

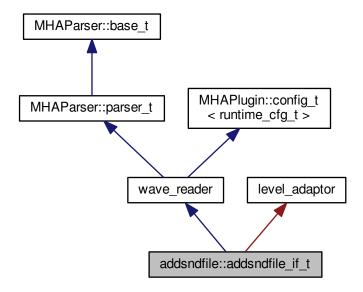

Public Member Functions

- $addsndfile_if_t$ ($algo_comm_t$, const char *, const char *)
- mha_wave_t * process (mha_wave_t *)
- void prepare (mhaconfig_t &)
- void release ()

Private Member Functions

- void **update** ()
- void change_mode ()
- void set_level ()
- void scan_dir ()

Private Attributes

- MHAParser::string_t filename
- MHAParser::string_t path
- MHAParser::bool_t loop
- MHAParser::float_t level

```
    MHAParser::kw_t levelmode
```

- MHAParser::kw t resamplingmode
- MHAParser::vint t channels
- MHAParser::kw t mode
- MHAParser::float_t ramplen
- MHAParser::int_t startpos
- MHAParser::vint_mon_t mapping
- MHAParser::int_mon_t numchannels
- MHAParser::int_mon_t mhachannels
- MHAParser::int_mon_t active
- MHAParser::string_t search_pattern
- MHAParser::vstring_mon_t search_result
- unsigned int uint_mode
- MHAEvents::patchbay_t< addsndfile_if_t > patchbay

```
Additional Inherited Members
```

```
5.22.1 Constructor & Destructor Documentation
```

5.22.2 Member Function Documentation

Implements MHAPlugin::plugin_t< runtime_cfg_t > (p. 685).

Reimplemented from MHAPlugin::plugin_t< runtime_cfg_t > (p. 686).


```
5.22.2.4 void addsndfile::addsndfile_if_t::update( ) [private]
5.22.2.5 void addsndfile::addsndfile_if_t::change_mode( ) [private]
5.22.2.6 void addsndfile::addsndfile_if_t::set_level( ) [private]
5.22.2.7 void addsndfile::addsndfile_if_t::scan_dir( ) [private]
5.22.3 Member Data Documentation
        MHAParser::string_t addsndfile::addsndfile_if_t::filename [private]
5.22.3.2 MHAParser::string t addsndfile::addsndfile if t::path [private]
5.22.3.3
        MHAParser::bool taddsndfile::addsndfile_if_t::loop [private]
5.22.3.4 MHAParser::float t addsndfile::addsndfile if t::level [private]
5.22.3.5
        MHAParser::kw t addsndfile::addsndfile_if_t::levelmode [private]
5.22.3.6
        MHAParser::kw t addsndfile::addsndfile_if_t::resamplingmode [private]
5.22.3.7
        MHAParser::vint t addsndfile::addsndfile if t::channels [private]
5.22.3.8
        MHAParser::kw t addsndfile::addsndfile_if_t::mode [private]
5.22.3.9
        MHAParser::float taddsndfile::addsndfile if t::ramplen [private]
5.22.3.10 MHAParser::int_t addsndfile::addsndfile_if_t::startpos [private]
5.22.3.11 MHAParser::vint mon taddsndfile::addsndfile_if_t::mapping [private]
5.22.3.12 MHAParser::int_mon_t addsndfile::addsndfile_if_t::numchannels [private]
5.22.3.13 MHAParser::int_mon_t addsndfile::addsndfile_if_t::mhachannels [private]
5.22.3.14 MHAParser::int mon taddsndfile::addsndfile_if_t::active [private]
5.22.3.15 MHAParser::string_t addsndfile::addsndfile_if_t::search_pattern [private]
5.22.3.16 MHAParser::vstring_mon_t addsndfile::addsndfile_if_t::search_result [private]
5.22.3.17 unsigned int addsndfile::addsndfile_if_t::uint_mode [private]
5.22.3.18 MHAEvents::patchbay_t<addsndfile_if_t> addsndfile::addsndfile_if_t::patchbay
         [private]
```

The documentation for this class was generated from the following file:

addsndfile.cpp

5.23 addsndfile::level_adapt_t Class Reference

Inheritance diagram for addsndfile::level_adapt_t:

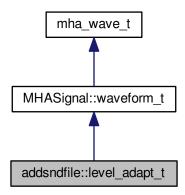

Public Member Functions

- level_adapt_t (mhaconfig_t cf, mha_real_t adapt_len, mha_real_t l_new_, mha_real _t l_old_)
- void update_frame ()
- mha_real_t get_level () const
- bool can_update () const

Private Attributes

- unsigned int ilen
- unsigned int pos
- MHAWindow::fun_t wnd
- mha_real_t l_new
- mha_real_t l_old

Additional Inherited Members

5.23.1 Constructor & Destructor Documentation


- 5.23.2 Member Function Documentation
- 5.23.2.1 void addsndfile::level_adapt_t::update_frame ()
- 5.23.2.2 mha_real_t addsndfile::level_adapt_t::get_level() const [inline]
- **5.23.2.3** bool addsndfile::level_adapt_t::can_update() const [inline]
- 5.23.3 Member Data Documentation
- **5.23.3.1** unsigned int addsndfile::level_adapt_t::ilen [private]
- **5.23.3.2 unsigned int addsndfile::level_adapt_t::pos** [private]
- **5.23.3.3 MHAWindow::fun_t addsndfile::level_adapt_t::wnd** [private]
- **5.23.3.4 mha real t addsndfile::level_adapt_t::l_new** [private]
- **5.23.3.5 mha_real_t** addsndfile::level_adapt_t::l_old [private]

The documentation for this class was generated from the following file:

addsndfile.cpp

5.24 addsndfile::resampled_soundfile_t Class Reference

Reads sound from file and resamples it if necessary and wanted. Inheritance diagram for addsndfile::resampled_soundfile_t:

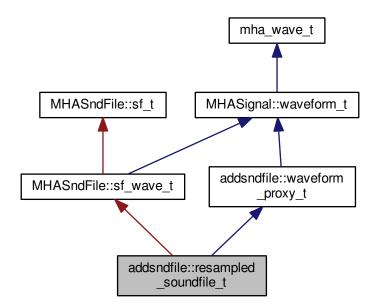

Public Member Functions

resampled_soundfile_t (const std::string &name, float mha_sampling_rate, addsndfile ←
 _resampling_mode_t resampling_mode)

Reads sound from file and resamples if necessary and wanted.

Additional Inherited Members

5.24.1 Detailed Description

Reads sound from file and resamples it if necessary and wanted.

Sound data can then be used by addsndfile.

5.24.2 Constructor & Destructor Documentation

Reads sound from file and resamples if necessary and wanted.

If the sound file does not specify a sampling rate, then the sound data is always used without resampling.

Parameters

name	Sound file name
mha_sampling_rate	The sampling rate of the MHA signal processing at the point of the addsndfile plugin
resampling_mode	DONT_RESAMPLE_STRICT: Do not resample, just use the samples from the sound file at the current sample rate, even if the sample rate of the sound file differs. DONT_RESAMPLE_PERMISSIVE: Do not resample, if the sample rate of the MHA differs from the sample rate of the sound file, raise an error. DO_RESAMPLE: Resample.

Exceptions


MHA_Error (p. 406) If the sampling rate of the file does not match the sampling rate	
	the MHA and DONT_RESAMPLE_STRICT was requested. If
	resampling failed (e.g. due to non-rational quotient of MHA sampling
	rate and sound file sampling rate).

The documentation for this class was generated from the following file:

addsndfile.cpp

5.25 addsndfile::sndfile t Class Reference

Inheritance diagram for addsndfile::sndfile_t:

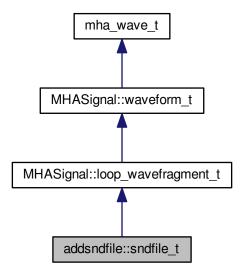

Public Member Functions

sndfile_t (const std::string &name, bool loop, unsigned int level_mode, std::vector< int > channels_, unsigned int nchannels, std::vector< int > &mapping, int &numchannels, unsigned int startpos, float mha_sampling_rate, addsndfile_resampling_mode_t resampling_mode)

Additional Inherited Members

5.25.1 Constructor & Destructor Documentation


The documentation for this class was generated from the following file:

· addsndfile.cpp

5.26 addsndfile::waveform_proxy_t Class Reference

Class helps to specify which instance of MHASignal_waveform_t parent instance is meant in **resampled_soundfile_t** (p. 173).

Inheritance diagram for addsndfile::waveform_proxy_t:

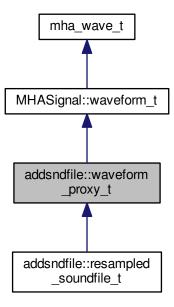

Public Member Functions

waveform_proxy_t (unsigned frames, unsigned channels)

Additional Inherited Members

5.26.1 Detailed Description

Class helps to specify which instance of MHASignal_waveform_t parent instance is meant in **resampled_soundfile_t** (p. 173).

5.26.2 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

· addsndfile.cpp

5.27 ADM::ADM < F > Class Template Reference

Adaptive differential microphone, working for speech frequency range.

Public Member Functions

- **ADM** (F fs, F dist, unsigned lp_order, const F *lp_alphas, unsigned decomb_order, const F *decomb_alphas, F tau_beta=F(50e-3), F mu_beta=F(1e-4))

 Create Adaptive Differential Microphone.
- F **process** (const F &front, const F &back, const F &external_beta=F(-1))

 **ADM* (p. 177) processes one frame.
- F beta () const

Private Attributes

- Delay
 F > m_delay_front
- Delay
 F > m_delay_back
- Linearphase_FIR
 F > m_lp_bf
- Linearphase_FIR< F > m_lp_result
- Linearphase_FIR< F> m_decomb
- Fm beta
- F m_mu_beta
- F m_powerfilter_coeff
- F m_powerfilter_norm
- F m_powerfilter_state

5.27.1 Detailed Description

```
template < class F> class ADM::ADM < F >
```

Adaptive differential microphone, working for speech frequency range.

5.27.2 Constructor & Destructor Documentation

```
5.27.2.1 template < class F > ADM::ADM< F >::ADM ( F fs, F dist, unsigned lp\_order, const F * lp\_alphas, unsigned decomb\_order, const F * decomb\_alphas, F tau\_beta = F (50e-3), F mu\_beta = F (1e-4)
```

Create Adaptive Differential Microphone.

Parameters

fs	Sampling rate / Hz
dist	Distance between physical microphones / m
lp_order	Filter order of FIR lowpass filter used for adaptation
lp_alphas	Pointer to array of alpha coefficients for the lowpass filter used for adaptation. Since this class uses linear phase FIR filters only, only the first half (order/2 + 1) of the coefficients will be read (coefficients for linear-phase FIR filters are symmetric).
decomb_order	Filter order of FIR compensation filter (compensates for comb filter characteristic)
decomb_alphas	Pointer to array of alpha coefficients for the compensation filter used to compensate for the comb filter characteristic. Since this class uses linear phase FIR filters only, only the first half (order/2 + 1)of the coefficients will be read (coefficients for linear-phase FIR filters are symmetric).
tau_beta	Time constant of the lowpass filter used for averaging the power of the output signal
mu_beta	adaption speed

5.27.3 Member Function Documentation

ADM (p. 177) processes one frame.

Parameters

front	The current front input signal sample	
back	The current rear input signal sample	
external_beta	If >= 0, this is used as the "beta" parameter for direction to filter out. Else, the beta parameter is adapted to filtered out a direction so that best reduction of signal intensity from the back hemisphere is achieved.	

Returns

The computed output sample

```
5.27.3.2 template < class F > F ADM::ADM < F >::beta ( ) const [inline]
5.27.4 Member Data Documentation
5.27.4 template < class F > Delay < F > ADM::ADM < F >::m_delay_front [private]
5.27.4.2 template < class F > Delay < F > ADM::ADM < F >::m_delay_back [private]
5.27.4.3 template < class F > Linearphase_FIR < F > ADM::ADM < F >::m_lp_bf [private]
5.27.4.4 template < class F > Linearphase_FIR < F > ADM::ADM < F >::m_lp_result [private]
5.27.4.5 template < class F > Linearphase_FIR < F > ADM::ADM < F >::m_decomb [private]
5.27.4.6 template < class F > F ADM::ADM < F >::m_beta [private]
5.27.4.7 template < class F > F ADM::ADM < F >::m_mu_beta [private]
5.27.4.8 template < class F > F ADM::ADM < F >::m_powerfilter_coeff [private]
5.27.4.9 template < class F > F ADM::ADM < F >::m_powerfilter_norm [private]
5.27.4.10 template < class F > F ADM::ADM < F >::m_powerfilter_state [private]
```

The documentation for this class was generated from the following file:

· adm.hh

5.28 ADM::Delay < F > Class Template Reference

A delay-line class which can also do subsample-delays for a limited frequency range below fs/4.

Public Member Functions

- Delay (F samples, F f_design, F fs)
 Create a signal delay object.
- ∼Delay ()
- F process (const F &in_sample)

Apply delay to signal.

Private Attributes

unsigned m_fullsamples

Integer part of delay.

F m_coeff

coefficient for 1st order IIR lowpass filter which does the subsample delay

• F m_norm

normalization for the IIR subsample delay filter

• F * m_state

Ringbuffer: Delayline.

unsigned m_now_in

current position for inserting new samples into m_state ringbuffer

5.28.1 Detailed Description

```
template < class F> class ADM::Delay < F >
```

A delay-line class which can also do subsample-delays for a limited frequency range below fs/4.

5.28.2 Constructor & Destructor Documentation

Create a signal delay object.

Parameters

samples	amples number of samples to delay (may be non-integer)	
f_design	subsampledelay is exact for this frequency	
fs	sampling frequency	

5.28.2.2 template
$$<$$
 class F $>$ ADM::Delay $<$ F $>$:: \sim Delay $($

5.28.3 Member Function Documentation

Apply delay to signal.

Parameters

in_sample The current input signal

Returns

The computed output sample

5.28.4 Member Data Documentation

5.28.4.1 template < class F > unsigned ADM::Delay < F > ::m_fullsamples [private] Integer part of delay.

coefficient for 1st order IIR lowpass filter which does the subsample delay

5.28.4.3 template
$$<$$
 class $F > F$ ADM::Delay $< F >$::m_norm [private]

normalization for the IIR subsample delay filter

Ringbuffer: Delayline.

5.28.4.5 template < class F > unsigned ADM::Delay < F >::m_now_in [private]

current position for inserting new samples into m_state ringbuffer

The documentation for this class was generated from the following file:

· adm.hh

5.29 ADM::Linearphase_FIR< F > Class Template Reference

An efficient linear-phase fir filter implementation.

Public Member Functions

- Linearphase_FIR (unsigned order, const F *alphas)
 Create linear-phase FIR filter.
- ∼Linearphase_FIR ()
- F process (const F &in_sample)

Filter one sample with this linear-phase FIR filter.

Private Attributes

unsigned m_order

The filter order of this linear-phase FIR filter.

• F * m_alphas

FIR filter coefficients.

• F * m output

Ringbuffer for building future output.

unsigned m now

current start of ringbuffer

5.29.1 Detailed Description

```
template < class F> class ADM::Linearphase_FIR < F >
```

An efficient linear-phase fir filter implementation.

5.29.2 Constructor & Destructor Documentation

```
5.29.2.1 template < class F > ADM::Linearphase_FIR < F > ::Linearphase_FIR ( unsigned order, const F * alphas )
```

Create linear-phase FIR filter.

Parameters

order	filter order of this FIR filter. restriction: must be even.	
alphas	pointer to Array of alpha coefficients. Since this class is for linear phase FIR filters	
	only, only (order / 2 + 1) coefficients will be read. (Coefficients for linear-phase FIR	
	filters are symmetric.)	

5.29.2.2 template
$$<$$
 class F $>$ ADM::Linearphase_FIR $<$ F $>$:: \sim Linearphase_FIR $($

5.29.3 Member Function Documentation

5.29.3.1 template
$$<$$
 class F $>$ F ADM::Linearphase_FIR $<$ F $>$::process (const F & in_sample) [inline]

Filter one sample with this linear-phase FIR filter.

Parameters

in_sample	the current input sample
-----------	--------------------------

Returns

the computed output sample

5.29.4 Member Data Documentation

5.29.4.1 template < class F > unsigned ADM::Linearphase_FIR < F >::m_order [private]

The filter order of this linear-phase FIR filter.

5.29.4.2 template < class F > F* ADM::Linearphase_FIR < F >::m_alphas [private]

FIR filter coefficients.

Only m_order / 2 + 1 coefficients need to be stored since coefficients of linear-phase FIR filters are symmetric

5.29.4.3 template < class F > F* ADM::Linearphase_FIR < F >::m_output [private]

Ringbuffer for building future output.

5.29.4.4 template < class F > unsigned ADM::Linearphase_FIR < F >::m_now [private]


current start of ringbuffer

The documentation for this class was generated from the following file:

· adm.hh

5.30 adm_if_t Class Reference

Inheritance diagram for adm_if_t:

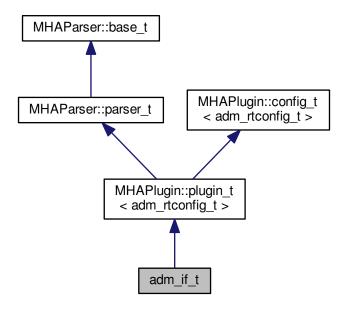

Public Member Functions

- adm_if_t (const algo_comm_t &ac, const std::string &thread_name, const std::string &algo_name)
- mha_wave_t * process (mha_wave_t *in)
- virtual void prepare (mhaconfig_t &)
- virtual void release ()

Private Member Functions

- void update ()
- bool is_prepared ()

Private Attributes

```
MHASignal::waveform_t * out
MHAParser::vint_t front_channels
MHAParser::vint_t rear_channels
MHAParser::vfloat_t distances
MHAParser::int_t lp_order
MHAParser::int_t decomb_order
MHAParser::int_t bypass
MHAParser::float_t beta
MHAParser::vfloat_t mu_beta
MHAParser::vfloat_t tau_beta
MHAParser::vfloat_mon_t coeff_lp
```

- unsigned input_channels
- · mha_real_t srate
- MHAEvents::patchbay_t< adm_if_t > patchbay

MHAParser::vfloat_mon_t coeff_decomb

Additional Inherited Members

```
5.30.1 Constructor & Destructor Documentation
```

5.30.2 Member Function Documentation

Implements MHAPlugin::plugin_t < adm_rtconfig_t > (p. 685).

Reimplemented from MHAPlugin::plugin_t< adm_rtconfig_t > (p. 686).

```
5.30.2.4 void adm_if_t::update( ) [private]
5.30.2.5 bool adm_if_t::is_prepared() [inline], [private]
5.30.3 Member Data Documentation
        MHASignal::waveform t*adm_if_t::out [private]
5.30.3.2 MHAParser::vint tadm_if_t::front_channels [private]
5.30.3.3 MHAParser::vint_t adm_if_t::rear_channels [private]
5.30.3.4 MHAParser::vfloat_t adm_if_t::distances [private]
5.30.3.5 MHAParser::int_t adm_if_t::lp_order [private]
5.30.3.6 MHAParser::int_t adm_if_t::decomb_order [private]
5.30.3.7 MHAParser::int_t adm_if_t::bypass [private]
5.30.3.8
        MHAParser::float_t adm_if_t::beta [private]
        MHAParser::vfloat_t adm_if_t::mu_beta [private]
5.30.3.10 MHAParser::vfloat_t adm_if_t::tau_beta [private]
5.30.3.11 MHAParser::vfloat mon tadm_if_t::coeff_lp [private]
5.30.3.12 MHAParser::vfloat mon tadm_if_t::coeff_decomb [private]
5.30.3.13 unsigned adm_if_t::input_channels [private]
5.30.3.14 mha_real_t adm_if_t::srate [private]
5.30.3.15 MHAEvents::patchbay_t<adm_if_t> adm_if_t::patchbay [private]
```

The documentation for this class was generated from the following file:

adm.cpp

5.31 adm_rtconfig_t Class Reference

Public Types

typedef ADM::ADM< mha_real_t > adm_t

Public Member Functions

adm_rtconfig_t (unsigned nchannels_in, unsigned nchannels_out, const std::vector< int > &front_channels, const std::vector< int > &rear_channels, const mha_real_t fs, const std::vector< mha_real_t > &distances, const int lp_order, const int decomb_order, const std::vector< mha_real_t > &tau_beta, const std::vector< mha_real_t > &mu_
beta)

Construct new ADMs.

- virtual ~adm rtconfig t ()
- size_t num_adms () const
- adm_t & adm (unsigned index)

Returns adm object number index.

• int front_channel (unsigned index) const

Returns index of front channel for adm number index.

• int rear channel (unsigned index) const

Returns index of rear channel for adm number index.

Private Member Functions

void check_index (unsigned index) const

Index checking for all internal arrays.

Private Attributes

std::vector< int > front_channels

Indices of channels containing the signals from the front microphones.

std::vector< int > rear_channels

Indices of channels containing the signals from the rear microphones.

MHASignal::waveform_t * lp_coeffs

Lowpass filter coefficients.

std::vector< MHASignal::waveform_t * > decomb_coeffs

Decomb-Filter coefficients.

std::vector< adm_t * > adms

ADMs.

- 5.31.1 Member Typedef Documentation
- 5.31.1.1 typedef ADM::ADM<mha_real_t> adm_rtconfig_t::adm_t
- 5.31.2 Constructor & Destructor Documentation

Construct new ADMs.

Used when configuration changes.

Parameters

nchannels_in	Number of input channels
nchannels_out	Number of output channels
front_channels	Parser's front_channels setting
rear_channels	Parser's front_channels setting
fs	Sampling rate / Hz
distances	Distances between microphones / m
lp_order	Filter order of FIR lowpass filter for adaptation
decomb_order	Filter order of FIR compensation filter (compensates for comb filter characteristic)
tau_beta	Time constants of the lowpass filter used for averaging the power of the output signal used for adaptation
mu_beta	Adaptation step sizes

```
5.31.2.2 adm_rtconfig_t::~adm_rtconfig_t() [virtual]
```

5.31.3 Member Function Documentation

Index checking for all internal arrays.

Exceptions

MHA_Error (p. 406)	if index out of range.
---------------------------	------------------------

```
5.31.3.2 size_t adm_rtconfig_t::num_adms() const [inline]
5.31.3.3 adm_t& adm_rtconfig_t::adm (
                    unsigned index ) [inline]
Returns adm object number index.
5.31.3.4 int adm_rtconfig_t::front_channel (
                    unsigned index ) const [inline]
Returns index of front channel for adm number index.
5.31.3.5 int adm_rtconfig_t::rear_channel (
                    unsigned index ) const [inline]
Returns index of rear channel for adm number index.
5.31.4 Member Data Documentation
5.31.4.1 std::vector<int> adm_rtconfig_t::front_channels [private]
Indices of channels containing the signals from the front microphones.
5.31.4.2 std::vector<int> adm_rtconfig_t::rear_channels [private]
Indices of channels containing the signals from the rear microphones.
5.31.4.3 MHASignal::waveform_t*adm_rtconfig_t::lp_coeffs [private]
Lowpass filter coefficients.
5.31.4.4 std::vector<MHASignal::waveform_t*>adm_rtconfig_t::decomb_coeffs [private]
Decomb-Filter coefficients.
5.31.4.5 std::vector<adm_t *> adm_rtconfig_t::adms [private]
ADMs.
```

The documentation for this class was generated from the following file:

adm.cpp

5.32 algo_comm_t Struct Reference

A reference handle for algorithm communication variables.

Public Attributes

• void * handle

AC variable control handle.

int(* insert_var)(void *, const char *, comm_var_t)

Register an AC variable.

int(* insert_var_int)(void *, const char *, int *)

Register an int as an AC variable.

int(* insert_var_float)(void *, const char *, float *)

Register a float as an AC variable.

int(* remove_var)(void *, const char *)

Remove an AC variable.

int(* remove_ref)(void *, void *)

Remove all AC variable which refer to address.

int(* is_var)(void *, const char *)

Test if an AC variable exists.

int(* get_var)(void *, const char *, comm_var_t *)

Get the variable handle of an AC variable.

int(* get_var_int)(void *, const char *, int *)

Get the value of an int AC variable.

int(* get_var_float)(void *, const char *, float *)

Get the value of a float AC variable.

int(* get entries)(void *, char *, unsigned int)

Return a space separated list of all variable names.

const char *(* get_error)(int)

Convert AC error codes into human readable error messages.

5.32.1 Detailed Description

A reference handle for algorithm communication variables.

This structure contains a coontrol handle and a set of function pointers for sharing variables within one processing chain. See also section **Communication between algorithms** (p. 27).

5.32.2 Member Data Documentation

5.32.2.1 algo_comm_t::handle

AC variable control handle.

5.32.2.2 algo_comm_t::insert_var

Register an AC variable.

This function can register a variable to be shared within one chain. If a variable of this name exists it will be overwritten.

Parameters

h	AC handle
n	name of variable. May not be empty. Must not contain space character. The name is
	copied, therefore it is allowed that the char array pointed to gets invalid after return.
V	variable handle of type comm_var_t (p. 228)

Returns

Error code or zero on success

5.32.2.3 algo_comm_t::insert_var_int

Register an int as an AC variable.

This function can register an int variable to be shared with other algorithms. It behaves similar to ac.insert_var.

Parameters

h	AC handle
n	name of variable
V	pointer on the variable

Returns

Error code or zero on success

5.32.2.4 algo_comm_t::insert_var_float

Register a float as an AC variable.

This function can register a float variable to be shared with other algorithms. It behaves similar to ac.insert_var.

Parameters

h	AC handle
n	name of variable
V	pointer on the variable

Returns

Error code or zero on success

5.32.2.5 algo_comm_t::remove_var

Remove an AC variable.

Remove (unregister) an AC variable. After calling this function, the variable is not available to ac.is_var or ac.get_var. The data pointer is not affected.

Parameters

h	AC handle
n	name of variable to be removed

Returns

Error code or zero on success

5.32.2.6 algo_comm_t::remove_ref

Remove all AC variable which refer to address.

This function removes all AC variables whos data field points to the given address.

Parameters

	h	AC handle
1	g	address which should not be referred to any more

Returns

Error code or zero on success

5.32.2.7 algo_comm_t::is_var

Test if an AC variable exists.

This function tests if an AC variable of a given name exists. Use ac.get_var to get information about the variables type and dimension.

Parameters

h	AC handle
n	name of variable

Returns

1 if the variable exists, 0 otherwise

5.32.2.8 algo_comm_t::get_var

Get the variable handle of an AC variable.

This function returns the variable handle **comm_var_t** (p. 228) of a variable of the given name. If no variable of that name exists, an error code is returned.

Parameters

h	AC handle
n	name of variable
V	pointer to a AC variable object

Returns

Error code or zero on success

5.32.2.9 algo_comm_t::get_var_int

Get the value of an int AC variable.

This function returns the value of an int AC variable of the given name. If no variable exists, the variable type is mismatching or more than one entry is registered, a corresponding error code is returned. This is a special version of ac.get_var.

Parameters

h	AC handle
n	name of variable
V	pointer on an int variable to store the result

Returns

Error code or zero on success

5.32.2.10 algo_comm_t::get_var_float

Get the value of a float AC variable.

This function returns the value of a float AC variable of the given name. If no variable exists, the variable type is mismatching or more than one entry is registered, a corresponding error code is returned. This is a special version of ac.get_var.

Parameters

h	AC handle
n	name of variable
V	pointer on a float variable to store the result

Returns

Error code or zero on success

5.32.2.11 algo_comm_t::get_entries

Return a space separated list of all variable names.

This function returns the names of all registered variables, separated by a single space.

Parameters

h AC handle

Return values

ret Character buffer for return value

Parameters

len length of character buffer

Returns

Error code or zero on success. -1: invalid ac handle. -3: not enough room in character buffer to store all variable names.

5.32.2.12 algo_comm_t::get_error

Convert AC error codes into human readable error messages.

Parameters

e Error code

Returns


Error message

The documentation for this struct was generated from the following files:

- · mha.h
- mha_algo_comm.cpp

5.33 altplugs_t Class Reference

Inheritance diagram for altplugs_t:

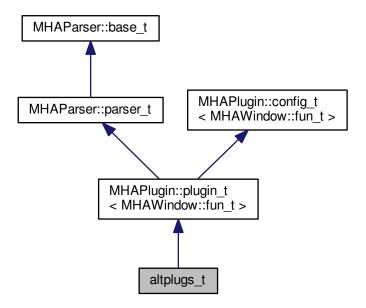

Public Member Functions

- altplugs_t (algo_comm_t iac, const char *chain, const char *algo)
- void prepare (mhaconfig_t &)
- void release ()
- void process (mha_wave_t *, mha_wave_t **)
- void process (mha_spec_t *, mha_wave_t **)
- void process (mha_wave_t *, mha_spec_t **)
- void process (mha_spec_t *, mha_spec_t **)
- virtual std::string parse (const std::string &arg)
- virtual void parse (const char *a1, char *a2, unsigned int a3)

Private Member Functions

```
void event_set_plugs ()
```

- void event_add_plug ()
- void event delete plug ()
- void event_select_plug ()
- void update_selector_list ()
- void update_ramplen ()
- void proc_ramp (mha_wave_t *s)

Private Attributes

- MHAParser::bool_t use_own_ac
- MHAParser::vstring t parser plugs
- MHAParser::string_t add_plug
- MHAParser::string_t delete_plug
- MHAParser::float t ramplen
- MHAParser::kw_t select_plug
- MHAParser::parser_t current
- MHAParser::vstring_mon_t nondefault_labels
- std::vector< mhaplug_cfg_t * > plugs
- mhaplug_cfg_t * selected_plug
- MHAEvents::patchbay t< altplugs t > patchbay
- MHASignal::waveform t * fallback wave
- MHASignal::spectrum_t * fallback_spec
- mhaconfig t cfin
- · mhaconfig_t cfout
- bool prepared
- bool added via plugs
- unsigned int ramp_counter
- unsigned int ramp_len

Additional Inherited Members

```
5.33.1 Constructor & Destructor Documentation
```

5.33.2 Member Function Documentation

Implements MHAPlugin::plugin_t < MHAWindow::fun_t > (p. 685).

```
5.33.2.2 void altplugs_t::release (
                    void ) [virtual]
Reimplemented from MHAPlugin::plugin_t < MHAWindow::fun_t > (p. 686).
5.33.2.3 void altplugs t::process (
                     mha_wave_t * sln,
                     mha_wave_t ** sOut )
5.33.2.4 void altplugs_t::process (
                     mha_spec_t * sln,
                     mha_wave_t ** sOut )
5.33.2.5 void altplugs t::process (
                     mha_wave_t * sln,
                     mha_spec_t ** sOut )
5.33.2.6 void altplugs_t::process (
                     mha_spec_t * sln,
                     mha spec t ** sOut )
5.33.2.7 std::string altplugs_t::parse (
                    const std::string & arg ) [virtual]
Reimplemented from MHAParser::base_t (p. 595).
5.33.2.8 virtual void altplugs_t::parse (
                     const char * a1,
                     char * a2.
                     unsigned int a3 ) [inline], [virtual]
Reimplemented from MHAParser::base_t (p. 596).
5.33.2.9 void altplugs_t::event_set_plugs ( ) [private]
5.33.2.10 void altplugs_t::event_add_plug( ) [private]
5.33.2.11
         void altplugs_t::event_delete_plug( ) [private]
5.33.2.12 void altplugs_t::event_select_plug( ) [private]
5.33.2.13 void altplugs_t::update_selector_list() [private]
5.33.2.14 void altplugs_t::update_ramplen() [private]
```

```
5.33.2.15 void altplugs_t::proc_ramp (
                     mha_wave_t * s ) [private]
5.33.3 Member Data Documentation
5.33.3.1
        MHAParser::bool_t altplugs_t::use_own_ac [private]
5.33.3.2
        MHAParser::vstring_t altplugs_t::parser_plugs [private]
5.33.3.3
        MHAParser::string_t altplugs_t::add_plug [private]
5.33.3.4
        MHAParser::string t altplugs_t::delete_plug [private]
5.33.3.5
        MHAParser::float_t altplugs_t::ramplen [private]
5.33.3.6
        MHAParser::kw_t altplugs_t::select_plug [private]
5.33.3.7
        MHAParser::parser taltplugs_t::current [private]
5.33.3.8
        MHAParser::vstring_mon_t altplugs_t::nondefault_labels [private]
5.33.3.9 std::vector<mhaplug_cfg_t*> altplugs_t::plugs [private]
5.33.3.10 mhaplug_cfg_t* altplugs_t::selected_plug [private]
5.33.3.11 MHAEvents::patchbay_t<altplugs_t> altplugs_t::patchbay [private]
5.33.3.12 MHASignal::waveform_t* altplugs_t::fallback_wave [private]
5.33.3.13 MHASignal::spectrum_t* altplugs_t::fallback_spec [private]
5.33.3.14 mhaconfig taltplugs_t::cfin [private]
5.33.3.15 mhaconfig_t altplugs_t::cfout [private]
5.33.3.16 bool altplugs_t::prepared [private]
5.33.3.17 bool altplugs_t::added_via_plugs [private]
5.33.3.18 unsigned int altplugs_t::ramp_counter [private]
5.33.3.19 unsigned int altplugs_t::ramp_len [private]
```

The documentation for this class was generated from the following file:

· altplugs.cpp

5.34 analysepath t Class Reference

Public Member Functions

- analysepath_t (unsigned int nchannels_in, unsigned int outer_fragsize, unsigned int inner_fragsize, int priority, MHAProc_wave2wave_t inner_proc_wave2wave, MHA← Proc_wave2spec_t inner_proc_wave2spec, void *ilibdata, algo_comm_t outer_ac, const MHA_AC::acspace2matrix_t &acspace_template, mha_domain_t inner_out_← domain, unsigned int fifo_len_blocks)
- virtual ~analysepath_t ()
- void rt process (mha wave t *)
- virtual int **svc** ()

Private Attributes

- MHAProc_wave2wave_t inner_process_wave2wave
- MHAProc wave2spec tinner process wave2spec
- · MHASignal::waveform tinner input
- void * libdata
- mha_fifo_t< mha_real_t > wave_fifo
- mha_fifo_t< MHA_AC::acspace2matrix_t > ac_fifo
- MHA_AC::acspace2matrix_t inner_ac_copy
- MHA_AC::acspace2matrix_t outer_ac_copy
- · algo_comm_t outer_ac
- mha_domain_t inner_out_domain
- MHA_Error inner_error
- bool has_inner_error
- bool flag_terminate_inner_thread
- int input_to_process
- pthread_mutex_t ProcessMutex
- pthread_attr_t attr
- struct sched param priority
- · int scheduler
- pthread_t thread
- pthread_cond_t cond_to_process

5.34.1 Constructor & Destructor Documentation


```
5.34.1.2 analysepath_t::~analysepath_t( ) [virtual]
5.34.2 Member Function Documentation
5.34.2.1 void analysepath_t::rt_process (
                    mha_wave_t * outer_input )
5.34.2.2 int analysepath_t::svc( ) [virtual]
5.34.3 Member Data Documentation
5.34.3.1
        MHAProc_wave2wave_t analysepath_t::inner_process_wave2wave [private]
5.34.3.2
        MHAProc wave2spec tanalysepath_t::inner_process_wave2spec [private]
5.34.3.3
        MHASignal::waveform_t analysepath_t::inner_input [private]
5.34.3.4 void* analysepath_t::libdata [private]
5.34.3.5
        mha fifo t<mha real t> analysepath_t::wave_fifo [private]
5.34.3.6
        mha_fifo_t<MHA_AC::acspace2matrix_t> analysepath_t::ac_fifo [private]
5.34.3.7
        MHA_AC::acspace2matrix_t analysepath_t::inner_ac_copy [private]
5.34.3.8
        MHA_AC::acspace2matrix_t analysepath_t::outer_ac_copy [private]
        algo comm_t analysepath_t::outer_ac [private]
5.34.3.9
5.34.3.10 mha_domain_t analysepath_t::inner_out_domain [private]
5.34.3.11 MHA_Error analysepath_t::inner_error [private]
5.34.3.12 bool analysepath_t::has_inner_error [private]
5.34.3.13 bool analysepath_t::flag_terminate_inner_thread [private]
5.34.3.14 int analysepath_t::input_to_process [private]
5.34.3.15 pthread_mutex_t analysepath_t::ProcessMutex [private]
5.34.3.16
         pthread_attr_t analysepath_t::attr [private]
5.34.3.17
         struct sched_param analysepath_t::priority [private]
5.34.3.18
        int analysepath_t::scheduler [private]
5.34.3.19
         pthread_t analysepath_t::thread [private]
5.34.3.20 pthread_cond_t analysepath_t::cond_to_process [private]
```

The documentation for this class was generated from the following file:

· analysispath.cpp

5.35 analysispath_if_t Class Reference

Inheritance diagram for analysispath_if_t:

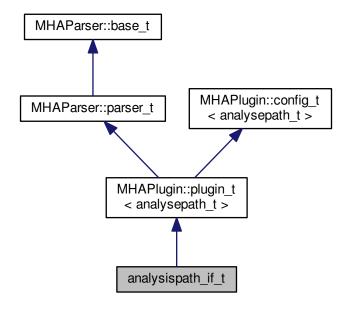

Public Member Functions

- analysispath_if_t (algo_comm_t, std::string, std::string)
- mha_wave_t * process (mha_wave_t *)
- void prepare (mhaconfig_t &)
- void release ()
- ~analysispath_if_t ()

Private Member Functions

• void loadlib ()

Private Attributes

- MHAEvents::patchbay_t< analysispath_if_t > patchbay
- MHAParser::string_t libname
- MHAParser::int_t fragsize
- MHAParser::int_t fifolen
- MHAParser::int_t priority
- MHAParser::vstring_t vars
- plug_t * plug
- std::string chain
- std::string algo
- MHA_AC::acspace2matrix_t * acspace_template

```
Additional Inherited Members
```

```
5.35.1 Constructor & Destructor Documentation
5.35.1.1 analysispath_if_t::analysispath_if_t (
                     algo comm t iac,
                     std::string th,
                     std::string al )
5.35.1.2 analysispath_if_t::~analysispath_if_t ( )
5.35.2 Member Function Documentation
5.35.2.1 mha_wave_t * analysispath_if_t::process (
                     mha_wave_t * s )
5.35.2.2 void analysispath_if_t::prepare (
                     mhaconfig_t & conf ) [virtual]
Implements MHAPlugin::plugin_t< analysepath_t > (p. 685).
5.35.2.3 void analysispath_if_t::release (
                    void ) [virtual]
Reimplemented from MHAPlugin::plugin_t< analysepath_t > (p. 686).
5.35.2.4 void analysispath_if_t::loadlib( ) [private]
5.35.3 Member Data Documentation
5.35.3.1
        MHAEvents::patchbay_t< analysispath_if_t > analysispath_if_t::patchbay
         [private]
5.35.3.2
        MHAParser::string_t analysispath_if_t::libname [private]
5.35.3.3 MHAParser::int_t analysispath_if_t::fragsize [private]
5.35.3.4 MHAParser::int tanalysispath if t::fifolen [private]
5.35.3.5 MHAParser::int_t analysispath_if_t::priority [private]
5.35.3.6 MHAParser::vstring_t analysispath_if_t::vars [private]
5.35.3.7 plug t* analysispath_if_t::plug [private]
5.35.3.8 std::string analysispath_if_t::chain [private]
5.35.3.9 std::string analysispath_if_t::algo [private]
5.35.3.10 MHA AC::acspace2matrix t* analysispath if t::acspace template [private]
```

The documentation for this class was generated from the following file:

· analysispath.cpp

5.36 AuditoryProfile::fmap_t Class Reference

A class to store frequency dependent data (e.g., HTL and UCL).

Inherits map< mha_real_t, mha_real_t >.

Public Member Functions

- std::vector< mha_real_t > get_frequencies () const
 Return configured frequencies.
- std::vector < mha_real_t > get_values () const
 Return stored values corresponding to the frequencies.
- bool **isempty** () const

5.36.1 Detailed Description

A class to store frequency dependent data (e.g., HTL and UCL).

5.36.2 Member Function Documentation

5.36.2.1 std::vector< mha real t > AuditoryProfile::fmap t::get frequencies () const

Return configured frequencies.

5.36.2.2 std::vector< mha_real_t > AuditoryProfile::fmap_t::get_values () const

Return stored values corresponding to the frequencies.

5.36.2.3 bool AuditoryProfile::fmap_t::isempty() const [inline]


The documentation for this class was generated from the following files:

- · auditory profile.h
- auditory_profile.cpp

5.37 AuditoryProfile::parser_t Class Reference

Class to make the auditory profile accessible through the parser interface.

Inheritance diagram for AuditoryProfile::parser_t:

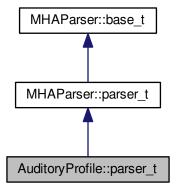

Classes

- · class ear t
- class fmap_t

Public Member Functions

- parser_t ()
- AuditoryProfile::profile_t get_current_profile ()

Private Attributes

- AuditoryProfile::parser_t::ear_t L
- AuditoryProfile::parser_t::ear_t R

Additional Inherited Members

5.37.1 Detailed Description


Class to make the auditory profile accessible through the parser interface.

- 5.37.2 Constructor & Destructor Documentation
- 5.37.2.1 AuditoryProfile::parser_t::parser_t ()
- 5.37.3 Member Function Documentation
- 5.37.3.1 AuditoryProfile::profile_t AuditoryProfile::parser_t::get_current_profile ()
- 5.37.4 Member Data Documentation
- **5.37.4.1 AuditoryProfile::parser_t::ear_t AuditoryProfile::parser_t::L** [private]
- **5.37.4.2 AuditoryProfile::parser_t::ear_t AuditoryProfile::parser_t::R** [private]

The documentation for this class was generated from the following files:

- auditory_profile.h
- auditory_profile.cpp
- 5.38 AuditoryProfile::parser_t::ear_t Class Reference

Inheritance diagram for AuditoryProfile::parser_t::ear_t:

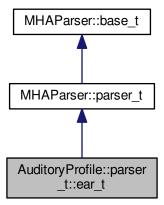

Public Member Functions

- ear_t ()
- AuditoryProfile::profile_t::ear_t get_ear () const

Private Attributes

- AuditoryProfile::parser_t::fmap_t HTL
- AuditoryProfile::parser_t::fmap_t UCL


Additional Inherited Members

- 5.38.1 Constructor & Destructor Documentation
- 5.38.1.1 AuditoryProfile::parser_t::ear_t::ear_t ()
- 5.38.2 Member Function Documentation
- 5.38.2.1 AuditoryProfile::profile_t::ear_t AuditoryProfile::parser_t::ear_t::get_ear() const
- 5.38.3 Member Data Documentation
- **5.38.3.1 AuditoryProfile::parser_t::fmap_t** AuditoryProfile::parser_t::ear_t::HTL [private]
- **5.38.3.2** AuditoryProfile::parser_t::fmap_t AuditoryProfile::parser_t::ear_t::UCL [private]

The documentation for this class was generated from the following files:

- · auditory_profile.h
- auditory_profile.cpp
- 5.39 AuditoryProfile::parser_t::fmap_t Class Reference

Inheritance diagram for AuditoryProfile::parser_t::fmap_t:

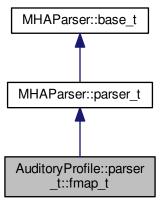

Public Member Functions

- fmap_t (const std::string &name, const std::string &help)
- AuditoryProfile::fmap_t get_fmap () const

Private Member Functions

• void validate ()

Private Attributes

- MHAEvents::patchbay_t< AuditoryProfile::parser_t::fmap_t > patchbay
- MHAParser::vfloat t f
- MHAParser::vfloat t value
- std::string name_

Additional Inherited Members

```
5.39.1 Constructor & Destructor Documentation
```

- 5.39.2 Member Function Documentation
- 5.39.2.1 AuditoryProfile::fmap_t AuditoryProfile::parser_t::fmap_t::get_fmap () const
- **5.39.2.2 void AuditoryProfile::parser_t::fmap_t::validate()** [private]
- 5.39.3 Member Data Documentation
- **5.39.3.1** MHAEvents::patchbay_t<AuditoryProfile::parser_t::fmap_t> AuditoryProfile::parser_t::fmap_t::patchbay [private]
- **5.39.3.2** MHAParser::vfloat_t AuditoryProfile::parser_t::fmap_t::f [private]
- **5.39.3.3** MHAParser::vfloat_t AuditoryProfile::parser_t::fmap_t::value [private]
- **5.39.3.4 std::string AuditoryProfile::parser_t::fmap_t::name** [private]

The documentation for this class was generated from the following files:

- auditory_profile.h
- auditory_profile.cpp

5.40 AuditoryProfile::profile_t Class Reference

The Auditory Profile class.

Classes

class ear_t

Class for ear-dependent parameters, e.g., audiograms or unilateral loudness scaling.

Public Member Functions

• AuditoryProfile::profile_t::ear_t get_ear (unsigned int channel) const Return ear information of channel number.

Public Attributes

- AuditoryProfile::profile_t::ear_t L
 Left ear data.
- AuditoryProfile::profile_t::ear_t R
 Right ear data.
- 5.40.1 Detailed Description

The Auditory Profile class.

See definition of auditory profile

Todo Give more documentation; implement all parts of the auditory profile.

Currently only the audiogram data is stored.

- 5.40.2 Member Function Documentation

Return ear information of channel number.

5.40.3 Member Data Documentation

5.40.3.1 AuditoryProfile::profile_t::ear_t AuditoryProfile::profile_t::L

Left ear data.

5.40.3.2 AuditoryProfile::profile_t::ear_t AuditoryProfile::profile_t::R

Right ear data.

The documentation for this class was generated from the following file:

auditory_profile.h

5.41 AuditoryProfile::profile_t::ear_t Class Reference

Class for ear-dependent parameters, e.g., audiograms or unilateral loudness scaling.

Public Member Functions

void convert_empty2normal ()

Public Attributes

- AuditoryProfile::fmap_t HTL
- AuditoryProfile::fmap_t UCL
- 5.41.1 Detailed Description

Class for ear-dependent parameters, e.g., audiograms or unilateral loudness scaling.


- 5.41.2 Member Function Documentation
- 5.41.2.1 void AuditoryProfile::profile_t::ear_t::convert_empty2normal()
- 5.41.3 Member Data Documentation
- 5.41.3.1 AuditoryProfile::fmap_t AuditoryProfile::profile_t::ear_t::HTL
- 5.41.3.2 AuditoryProfile::fmap_t AuditoryProfile::profile_t::ear_t::UCL

The documentation for this class was generated from the following files:

- auditory_profile.h
- auditory_profile.cpp

5.42 bbcalib_interface_t Class Reference

Inheritance diagram for bbcalib_interface_t:

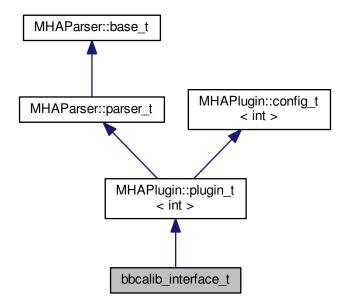

Public Member Functions

- bbcalib_interface_t (const algo_comm_t &, const std::string &, const std::string &)
- ~bbcalib_interface_t ()
- mha_wave_t * process (mha_wave_t *)
- void prepare (mhaconfig_t &)
- void release ()

Private Attributes

- calibrator_t calib_in
- calibrator_t calib_out
- MHAParser::mhapluginloader_t plugloader

Additional Inherited Members

```
5.42.1 Constructor & Destructor Documentation
5.42.1.1 bbcalib_interface_t::bbcalib_interface_t (
                     const algo_comm_t & iac,
                     const std::string & ,
                     const std::string & )
5.42.1.2 bbcalib interface t::~bbcalib interface t()
5.42.2 Member Function Documentation
5.42.2.1 mha_wave_t * bbcalib_interface_t::process (
                     mha wave t * s)
5.42.2.2 void bbcalib_interface_t::prepare (
                     mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin_t< int > (p. 685).
5.42.2.3 void bbcalib_interface_t::release (
                     void ) [virtual]
Reimplemented from MHAPlugin::plugin_t< int > (p. 686).
5.42.3 Member Data Documentation
5.42.3.1 calibrator_t bbcalib_interface_t::calib_in [private]
5.42.3.2 calibrator t bbcalib_interface_t::calib_out [private]
5.42.3.3 MHAParser::mhapluginloader t bbcalib_interface_t::plugloader [private]
The documentation for this class was generated from the following file:

    transducers.cpp

5.43 calibrator_runtime_layer_t Class Reference
Public Member Functions
```

• calibrator_runtime_layer_t (bool is_input, const mhaconfig_t &tf, calibrator_

mha_real_t process (mha_wave_t **)

variables_t &vars)

Static Private Member Functions

- static unsigned int **firfirlen** (const std::vector< std::vector< float >> &)
- static unsigned int **firfir2fftlen** (unsigned int, const std::vector< std::vector< float >> &)

Private Attributes

- MHAFilter::fftfilter t fir
- MHASignal::quantizer_t quant
- MHASignal::waveform_t gain
- softclipper_t softclip
- bool b_is_input
- · bool b use fir
- bool b_use_clipping
- MHASignal::loop_wavefragment_t speechnoise
- MHASignal::loop wavefragment t::playback mode t pmode
- 5.43.1 Constructor & Destructor Documentation
- 5.43.2 Member Function Documentation
- 5.43.2.2 unsigned int calibrator_runtime_layer_t::firfirlen (

const std::vector < std::vector < float > > & fir) [static], [private]

5.43.2.3 unsigned int calibrator_runtime_layer_t::firfir2fftlen (

unsigned int fragsize,
const std::vector< std::vector< float > > & fir) [static], [private]

- 5.43.3 Member Data Documentation
- **5.43.3.1 MHAFilter::fftfilter_t** calibrator_runtime_layer_t::fir [private]
- **5.43.3.2** MHASignal::quantizer_t calibrator_runtime_layer_t::quant [private]
- **5.43.3.3** MHASignal::waveform_t calibrator_runtime_layer_t::gain [private]


- **5.43.3.4 softclipper_t calibrator_runtime_layer_t::softclip** [private]
- **5.43.3.5** bool calibrator_runtime_layer_t::b_is_input [private]
- **5.43.3.6** bool calibrator_runtime_layer_t::b_use_fir [private]
- **5.43.3.7** bool calibrator_runtime_layer_t::b_use_clipping [private]
- **5.43.3.8 MHASignal::loop_wavefragment_t calibrator_runtime_layer_t::speechnoise** [private]

The documentation for this class was generated from the following file:

transducers.cpp

5.44 calibrator_t Class Reference

Inheritance diagram for calibrator_t:

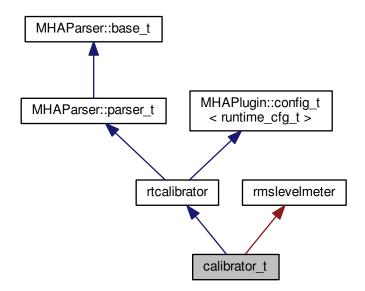

Public Member Functions

```
    calibrator_t (algo_comm_t, bool is_input)
```

- void prepare (mhaconfig_t &tf)
- void release ()
- mha_wave_t * process (mha_wave_t *s)

Private Member Functions

- void update ()
- void update_tau_level ()
- void read levels ()

Private Attributes

- bool b_is_input
- MHAEvents::patchbay_t< calibrator_t > patchbay
- calibrator_variables_t vars
- bool prepared

Additional Inherited Members

```
5.44.1 Constructor & Destructor Documentation
```

5.44.2 Member Function Documentation

Implements MHAPlugin::plugin_t < runtime_cfg_t > (p. 685).

Reimplemented from MHAPlugin::plugin_t< runtime_cfg_t > (p. 686).

The documentation for this class was generated from the following file:

transducers.cpp

5.45 calibrator_variables_t Class Reference

Public Member Functions

calibrator_variables_t (bool is_input, MHAParser::parser_t &parent)

Public Attributes

- MHAParser::vfloat_t peaklevel
- MHAParser::mfloat t fir
- MHAParser::int t nbits
- MHAParser::float_t tau_level
- MHAParser::kw_t spnoise_mode
- MHAParser::vint_t spnoise_channels
- MHAParser::float_t spnoise_level
- MHAParser::vfloat mon t rmslevel
- MHAParser::parser_t spnoise_parser
- MHAParser::float_mon_t srate
- MHAParser::int_mon_t fragsize
- MHAParser::int_mon_t num_channels
- MHAParser::parser_t config_parser
- softclipper_variables_t softclip
- MHAParser::bool_t do_clipping

```
5.45.1 Constructor & Destructor Documentation
5.45.1.1 calibrator variables t::calibrator variables t (
                     bool is input,
                      MHAParser::parser t & parent )
5.45.2 Member Data Documentation
5.45.2.1
         MHAParser::vfloat t calibrator_variables_t::peaklevel
5.45.2.2
         MHAParser::mfloat t calibrator_variables_t::fir
         MHAParser::int t calibrator_variables_t::nbits
5.45.2.3
         MHAParser::float t calibrator variables t::tau level
         MHAParser::kw_t calibrator_variables_t::spnoise_mode
5.45.2.5
5.45.2.6
         MHAParser::vint t calibrator_variables_t::spnoise_channels
5.45.2.7
         MHAParser::float t calibrator_variables_t::spnoise_level
5.45.2.8
         MHAParser::vfloat mon t calibrator_variables_t::rmslevel
         MHAParser::parser t calibrator variables t::spnoise parser
5.45.2.10 MHAParser::float mon t calibrator variables t::srate
5.45.2.11
         MHAParser::int mon t calibrator variables t::fragsize
5.45.2.12 MHAParser::int mon t calibrator_variables_t::num_channels
5.45.2.13 MHAParser::parser_t calibrator_variables_t::config_parser
5.45.2.14 softclipper_variables_t calibrator_variables_t::softclip
5.45.2.15 MHAParser::bool t calibrator variables t::do clipping
```

The documentation for this class was generated from the following file:

· transducers.cpp

5.46 cfg_t Class Reference

Public Member Functions

```
    cfg_t (mha_real_t tau_attack, mha_real_t tau_decay, unsigned int nch, mha_real_←
    t start_limit, mha_real_t slope_db, mha_real_t fs)
```

- cfg_t (unsigned int, unsigned int)
- cfg_t (mhaconfig_t chcfg, mha_real_t newlev, bool replace, mha_real_t len)
- void process (mha_wave_t *)
- void process (mha_spec_t *)

Public Attributes

- · mha_real_t start_lin
- mha_real_t alpha
- MHAFilter::o1flt_lowpass_t attack
- MHAFilter::o1flt_maxtrack_t decay
- · unsigned int channel

Private Attributes

- mha_real_t gain_wave_
- mha_real_t gain_spec_
- bool replace_
- bool use_frozen_
- MHASignal::waveform_t frozen_noise_
- unsigned int pos

5.46.1 Constructor & Destructor Documentation

```
5.46.1.1 cfg_t::cfg_t (

mha_real_t tau_attack,
mha_real_t tau_decay,
unsigned int nch,
mha_real_t start_limit,
mha_real_t slope_db,
mha_real_t fs )

5.46.1.2 cfg_t::cfg_t (
```

unsigned int *ichannel*, unsigned int *numchannels*)


```
5.46.1.3 cfg_t::cfg_t (
                    mhaconfig_t chcfg,
                    mha real t newlev,
                    bool replace,
                    mha_real_t len )
5.46.2 Member Function Documentation
5.46.2.1 void cfg_t::process (
                    mha_wave_t * s ) [inline]
5.46.2.2 void cfg t::process (
                    mha_spec_t * s ) [inline]
5.46.3 Member Data Documentation
5.46.3.1 mha_real_t cfg_t::start_lin
5.46.3.2 mha_real_t cfg_t::alpha
5.46.3.3
        MHAFilter::o1flt lowpass t cfg_t::attack
5.46.3.4
        MHAFilter::o1flt_maxtrack_t cfg_t::decay
5.46.3.5 unsigned int cfg t::channel
5.46.3.6
        mha_real_t cfg_t::gain_wave_ [private]
5.46.3.7 mha_real_t cfg_t::gain_spec_ [private]
5.46.3.8
        bool cfg_t::replace_ [private]
5.46.3.9 bool cfg_t::use_frozen_ [private]
5.46.3.10 MHASignal::waveform_t cfg_t::frozen_noise_ [private]
5.46.3.11 unsigned int cfg_t::pos [private]
```

The documentation for this class was generated from the following files:

- softclip.cpp
- example6.cpp
- noise.cpp

5.47 coherence::cohflt_if_t Class Reference

Inheritance diagram for coherence::cohflt_if_t:

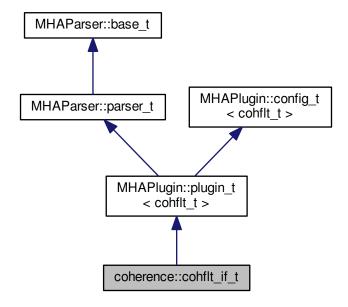

Public Member Functions

- cohflt_if_t (const algo_comm_t &, const std::string &, const std::string &)
- void prepare (mhaconfig_t &)
- void release ()
- mha_spec_t * process (mha_spec_t *)

Private Member Functions

• void update ()

Private Attributes

- MHAEvents::patchbay_t< cohflt_if_t > patchbay
- vars_t vars
- · const std::string algo

```
Additional Inherited Members
```


```
5.47.1 Constructor & Destructor Documentation
5.47.1.1 coherence::cohflt_if_t::cohflt_if_t (
                     const algo_comm_t & ac,
                     const std::string & th,
                     const std::string & al )
5.47.2 Member Function Documentation
5.47.2.1 void coherence::cohflt_if_t::prepare (
                     mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin t < cohflt t > (p. 685).
5.47.2.2 void coherence::cohflt_if_t::release (
                     void ) [virtual]
Reimplemented from MHAPlugin::plugin_t < cohflt_t > (p. 686).
5.47.2.3 mha spec t * coherence::cohflt_if_t::process (
                     mha_spec_t * s )
5.47.2.4 void coherence::cohflt_if_t::update() [private]
5.47.3 Member Data Documentation
5.47.3.1 MHAEvents::patchbay_t<cohflt_if_t> coherence::cohflt_if_t::patchbay [private]
5.47.3.2 vars t coherence::cohflt_if_t::vars [private]
5.47.3.3 const std::string coherence::cohflt if t::algo [private]
```

The documentation for this class was generated from the following file:

coherence.cpp

5.48 coherence::cohflt_t Class Reference

Inheritance diagram for coherence::cohflt_t:

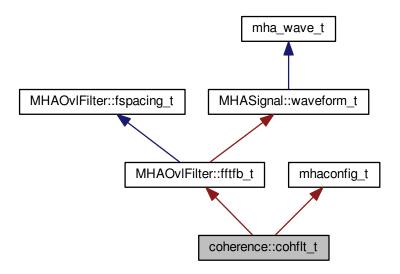

Public Member Functions

- cohflt_t (vars_t &v, const mhaconfig_t &icf, algo_comm_t iac, const std::string &name)
- mha spec t * process (mha spec t *)
- void insert ()

Private Attributes

- unsigned int **nbands**
- bool avg_ipd
- mha_complex_t cg
- float g
- float c_scale
- float **c_min**
- MHASignal::waveform_t alpha
- · float limit
- MHAFilter::o1flt_lowpass_t lp1r
- MHAFilter::o1flt_lowpass_t lp1i
- MHA_AC::spectrum_t coh_c
- MHA_AC::waveform_t coh_rlp
- MHASignal::waveform_t gain
- MHASignal::delay_wave_t gain_delay

- MHASignal::spectrum_t s_out
- bool binvert
- MHAFilter::o1flt_lowpass_t lp1ltg
- bool b_ltg
- std::vector< float > staticgain

Additional Inherited Members

```
5.48.1 Constructor & Destructor Documentation
5.48.1.1 coherence::cohflt_t::cohflt_t (
                     vars t& v,
                     const mhaconfig t & icf,
                     algo comm t iac,
                     const std::string & name )
5.48.2 Member Function Documentation
5.48.2.1 mha spec t * coherence::cohflt_t::process (
                     mha spec t * s)
5.48.2.2 void coherence::cohflt t::insert ( )
5.48.3 Member Data Documentation
5.48.3.1 unsigned int coherence::cohflt_t::nbands [private]
5.48.3.2 bool coherence::cohflt_t::avg_ipd [private]
5.48.3.3 mha_complex_t coherence::cohflt_t::cg [private]
5.48.3.4 float coherence::cohflt_t::g [private]
5.48.3.5 float coherence::cohflt_t::c_scale [private]
5.48.3.6 float coherence::cohflt_t::c_min [private]
5.48.3.7
        MHASignal::waveform_t coherence::cohflt_t::alpha [private]
5.48.3.8 float coherence::cohflt_t::limit [private]
```

5.48.3.9 MHAFilter::o1flt_lowpass_t coherence::cohflt_t::lp1r [private]


```
5.48.3.10 MHAFilter::o1flt_lowpass_t coherence::cohflt_t::lp1i [private]
5.48.3.11 MHA_AC::spectrum_t coherence::cohflt_t::coh_c [private]
5.48.3.12 MHA_AC::waveform_t coherence::cohflt_t::coh_rlp [private]
5.48.3.13 MHASignal::waveform_t coherence::cohflt_t::gain [private]
5.48.3.14 MHASignal::delay_wave_t coherence::cohflt_t::gain_delay [private]
5.48.3.15 MHASignal::spectrum_t coherence::cohflt_t::s_out [private]
5.48.3.16 bool coherence::cohflt_t::blnvert [private]
5.48.3.17 MHAFilter::o1flt_lowpass_t coherence::cohflt_t::lp1ltg [private]
5.48.3.18 bool coherence::cohflt_t::b_ltg [private]
5.48.3.19 std::vector<float> coherence::cohflt_t::staticgain [private]
```

The documentation for this class was generated from the following file:

coherence.cpp

5.49 coherence::vars_t Class Reference

Inheritance diagram for coherence::vars_t:

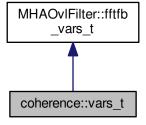

Public Member Functions

vars_t (MHAParser::parser_t *)

Public Attributes

MHAParser::kw_t tau_unit

MHAParser::vfloat_t tau

MHAParser::vfloat_t alpha

MHAParser::float_t limit

MHAParser::vfloat_t mapping

MHAParser::kw t average

MHAParser::bool t invert

MHAParser::bool_t ltgcomp

MHAParser::vfloat_t ltgtau

MHAParser::vfloat_t staticgain

MHAParser::int_t delay

5.49.1 Constructor & Destructor Documentation

```
5.49.1.1 coherence::vars_t::vars_t (

MHAParser::parser t * p )
```

5.49.2 Member Data Documentation

```
5.49.2.1 MHAParser::kw_t coherence::vars_t::tau_unit
```

5.49.2.2 MHAParser::vfloat_t coherence::vars_t::tau

5.49.2.3 MHAParser::vfloat_t coherence::vars_t::alpha

5.49.2.4 MHAParser::float_t coherence::vars_t::limit

5.49.2.5 MHAParser::vfloat t coherence::vars_t::mapping

5.49.2.6 MHAParser::kw_t coherence::vars_t::average

5.49.2.7 MHAParser::bool_t coherence::vars_t::invert

5.49.2.8 MHAParser::bool_t coherence::vars_t::ltgcomp

5.49.2.9 MHAParser::vfloat_t coherence::vars_t::ltgtau

5.49.2.10 MHAParser::vfloat_t coherence::vars_t::staticgain


5.49.2.11 MHAParser::int t coherence::vars_t::delay

The documentation for this class was generated from the following file:

· coherence.cpp

5.50 combc_if_t Class Reference

Inheritance diagram for combc_if_t:

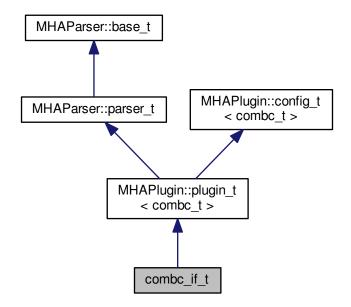

Public Member Functions

- combc_if_t (const algo_comm_t &, const std::string &, const std::string &)
- void prepare (mhaconfig_t &)
- mha_wave_t * process (mha_wave_t *)
- mha_spec_t * process (mha_spec_t *)

Private Attributes

- MHAParser::int_t outchannels
- MHAParser::bool_t interleaved
- MHAParser::string_t channel_gain_name
- MHAParser::string_t element_gain_name

Additional Inherited Members

```
5.50.1 Constructor & Destructor Documentation
5.50.1.1 combc_if_t::combc_if_t (
                    const algo comm t & iac,
                    const std::string & ,
                    const std::string & )
5.50.2 Member Function Documentation
5.50.2.1 void combc_if_t::prepare (
                    mhaconfig t&chcfg) [virtual]
Implements MHAPlugin::plugin_t < combc_t > (p. 685).
5.50.2.2 mha_wave_t * combc_if_t::process (
                    mha wave t * s)
5.50.2.3 mha_spec_t * combc_if_t::process (
                    mha\_spec\_t * s)
5.50.3 Member Data Documentation
5.50.3.1 MHAParser::int tcombc_if_t::outchannels [private]
5.50.3.2 MHAParser::bool_t combc_if_t::interleaved [private]
5.50.3.3 MHAParser::string_t combc_if_t::channel_gain_name [private]
        MHAParser::string t combc if t::element gain name [private]
```

The documentation for this class was generated from the following file:

combinechannels.cpp

5.51 combc_t Class Reference

Public Member Functions

- combc_t (algo_comm_t ac, mhaconfig_t cfg_input, mhaconfig_t cfg_output, std ::vector < float > channel_gains, const std::string &element_gain_name, bool interleaved)
- mha_wave_t * process (mha_wave_t *s)
- mha_spec_t * process (mha_spec_t *s)

algo_comm_t ac_

Private Attributes

```
    bool interleaved

    unsigned int nbands

    MHASignal::waveform_t w_out

    MHASignal::spectrum t s out

   std::vector< mha_real_t > channel_gains_
   std::string element_gain_name_
5.51.1 Constructor & Destructor Documentation
5.51.1.1 combc_t::combc_t (
                    algo_comm_t ac,
                    mhaconfig_t cfg_input,
                    mhaconfig t cfg_output,
                    std::vector< float > channel_gains,
                    const std::string & element_gain_name,
                    bool interleaved )
5.51.2 Member Function Documentation
5.51.2.1 mha_wave_t * combc_t::process (
                    mha_wave_t * s )
5.51.2.2 mha_spec_t * combc_t::process (
                    mha_spec_t * s )
5.51.3 Member Data Documentation
5.51.3.1 algo_comm_t combc_t::ac_ [private]
5.51.3.2 bool combc_t::interleaved_ [private]
5.51.3.3 unsigned int combc_t::nbands [private]
        MHASignal::waveform_t combc_t::w_out [private]
5.51.3.5 MHASignal::spectrum_t combc_t::s_out [private]
5.51.3.6 std::vector<mha_real_t> combc_t::channel_gains_ [private]
5.51.3.7 std::string combc_t::element_gain_name_ [private]
```

The documentation for this class was generated from the following file:

combinechannels.cpp

5.52 comm_var_t Struct Reference

Algorithm communication variable structure.

Public Attributes

• unsigned int data_type

Type of data.

unsigned int num entries

Number of entries.

· unsigned int stride

length of one row (C interpretation) or of one column (Fortran interpretation)

void * data

Pointer to variable data.

5.52.1 Detailed Description

Algorithm communication variable structure.

Algorithm communication variables (AC variables) are objects of this type. The member data is a pointer to the variable 'data'. This pointer has to be valid for the lifetime of this AC variable. The member 'data_type' can be one of the predefined types or any user defined type. The member 'num_entries' describes the number of elements of this base type stored at the pointer address.

```
An AC variable can be registered with the \ref algo_comm_t::insert_var "insert_var" function.
```

5.52.2 Member Data Documentation

5.52.2.1 comm_var_t::data_type

Type of data.

This can be one of the predefined types

- MHA AC CHAR
- · MHA AC INT
- MHA AC MHAREAL
- MHA AC FLOAT
- · MHA AC DOUBLE
- MHA AC MHACOMPLEX
- MHA AC VEC FLOAT or any user defined type with a value greater than
- MHA_AC_USER

5.52.2.2 comm_var_t::num_entries

Number of entries.

5.52.2.3 comm_var_t::stride

length of one row (C interpretation) or of one column (Fortran interpretation)

5.52.2.4 comm_var_t::data


Pointer to variable data.

The documentation for this struct was generated from the following files:

- · mha.h
- mha_algo_comm.cpp

5.53 cpuload_t Class Reference

Inheritance diagram for cpuload_t:

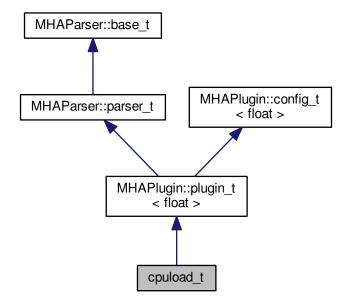

Public Member Functions

```
cpuload_t (algo_comm_t, const char *, const char *)
mha_spec_t * process (mha_spec_t *)
mha_wave_t * process (mha_wave_t *)
void prepare (mhaconfig_t &)
```

Private Member Functions

- void compute_something ()
- void compute_something_else ()

Private Attributes

- MHAParser::float_t factor
- MHAParser::bool_t use_sine
- · float phase
- · volatile float result
- std::vector< float > table

Additional Inherited Members

```
5.53.1 Constructor & Destructor Documentation
```

5.53.2 Member Function Documentation

Implements MHAPlugin::plugin_t< float > (p. 685).

mhaconfig_t & cf) [virtual]

```
5.53.2.4 void cpuload_t::compute_something() [inline], [private]
5.53.2.5 void cpuload_t::compute_something_else() [inline], [private]
5.53.3 Member Data Documentation
5.53.3.1 MHAParser::float_t cpuload_t::factor [private]
5.53.3.2 MHAParser::bool_t cpuload_t::use_sine [private]
5.53.3.3 float cpuload_t::phase [private]
5.53.3.4 volatile float cpuload_t::result [private]
```


The documentation for this class was generated from the following file:

5.53.3.5 std::vector<**float**> **cpuload_t::table** [private]

· cpuload.cpp

5.54 db_if_t Class Reference

Inheritance diagram for db_if_t:

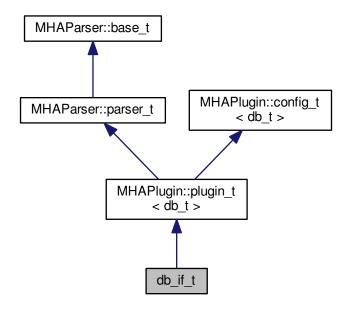

Public Member Functions

```
db_if_t (algo_comm_t, std::string, std::string)
mha_wave_t * process (mha_wave_t *)
void prepare (mhaconfig_t &)
```

- void release ()
- ~db_if_t ()

Private Attributes

- MHAEvents::patchbay_t< db_if_t > patchbay
- MHAParser::int_t fragsize
- MHAParser::mhapluginloader_t plugloader
- std::string chain
- std::string algo
- bool bypass

Additional Inherited Members

5.54.2.3 void db_if_t::release (

```
5.54.1 Constructor & Destructor Documentation
```

```
5.54.1.1 db_if_t::db_if_t (
                     algo comm t iac,
                     std::string th,
                     std::string al )
5.54.1.2 db_if_t::\simdb_if_t ( )
5.54.2 Member Function Documentation
5.54.2.1 mha_wave_t * db_if_t::process (
                     mha_wave_t * s )
5.54.2.2 void db_if_t::prepare (
                     mhaconfig_t & conf ) [virtual]
Implements MHAPlugin::plugin_t < db_t > (p. 685).
```

Reimplemented from **MHAPlugin::plugin_t** < **db_t** > (p. 686).

void) [virtual]

5.54.3 Member Data Documentation

```
5.54.3.1 MHAEvents::patchbay_t < db_if_t > db_if_t::patchbay [private]
```

```
5.54.3.2 MHAParser::int_t db_if_t::fragsize [private]
```

5.54.3.3 MHAParser::mhapluginloader_t db_if_t::plugloader [private]

```
5.54.3.4 std::string db_if_t::chain [private]
```


5.54.3.5 std::string db_if_t::algo [private]

The documentation for this class was generated from the following file:

· db.cpp

5.55 db_t Class Reference

Inheritance diagram for db_t:

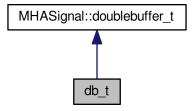

Public Member Functions

- **db_t** (unsigned int outer_fragsize, unsigned int inner_fragsize, unsigned int nch_in, unsigned int nch_out, **MHAParser::mhapluginloader_t** &plug)
- mha_wave_t * inner_process (mha_wave_t *)

Private Attributes

MHAParser::mhapluginloader_t & plugloader

Additional Inherited Members

```
5.55.1 Constructor & Destructor Documentation
```

5.55.2 Member Function Documentation

Implements MHASignal::doublebuffer_t (p. 726).

5.55.3 Member Data Documentation


5.55.3.1 MHAParser::mhapluginloader t& db_t::plugloader [private]

The documentation for this class was generated from the following file:

· db.cpp

5.56 dc::dc_if_t Class Reference

Inheritance diagram for dc::dc_if_t:

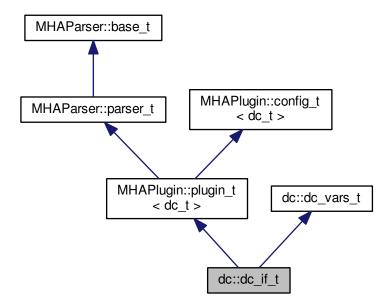

Public Member Functions

- dc_if_t (const algo_comm_t &ac_, const std::string &th_, const std::string &al_)
- void prepare (mhaconfig_t &tf)
- mha_wave_t * process (mha_wave_t *)
- mha_spec_t * process (mha_spec_t *)

Private Member Functions

- void update_monitors ()
 - Called from within the processing routines: updates the monitor variables.
- void update ()

Called by MHA configuration change event mechanism: creates new runtime configuration.

Private Attributes

- std::string algo
- wideband_inhib_vars_t wbinhib
- MHAEvents::patchbay_t< dc_if_t > patchbay

```
Additional Inherited Members
```


```
5.56.1 Constructor & Destructor Documentation
5.56.1.1 dc::dc_if_t::dc_if_t (
                     const algo_comm_t & ac_,
                     const std::string & th_,
                     const std::string & al )
5.56.2 Member Function Documentation
5.56.2.1 void dc::dc_if_t::prepare (
                     mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin t < dc \ t > (p. 685).
5.56.2.2 mha_wave_t * dc::dc_if_t::process (
                     mha_wave_t * s_in )
5.56.2.3 mha_spec_t * dc::dc_if_t::process (
                     mha_spec_t * s_in )
5.56.2.4 void dc::dc_if_t::update_monitors() [private]
Called from within the processing routines: updates the monitor variables.
5.56.2.5 void dc::dc if t::update() [private]
Called by MHA configuration change event mechanism: creates new runtime configuration.
5.56.3 Member Data Documentation
5.56.3.1 std::string dc::dc_if_t::algo [private]
5.56.3.2
        wideband inhib vars t dc::dc_if_t::wbinhib [private]
        MHAEvents::patchbay_t<dc_if_t> dc::dc_if_t::patchbay [private]
```

The documentation for this class was generated from the following file:

· dc.cpp

5.57 dc::dc t Class Reference

Inheritance diagram for dc::dc_t:

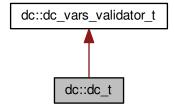

Public Member Functions

- dc_t (dc_vars_t vars, mha_real_t filter_rate, unsigned int nch, algo_comm_t ac, mha
 _domain_t domain, unsigned int fftlen, std::string algo)
- mha_wave_t * process (mha_wave_t *)
- mha_spec_t * process (mha_spec_t *, wb_inhib_cfg_t *wbinhib)
- void explicit_insert ()
- unsigned get_nbands () const

Number of frequency bands accessor.

- const MHASignal::waveform t & get level in db () const
- const MHASignal::waveform_t & get_level_in_db_adjusted () const

Private Attributes

- std::vector< MHATableLookup::linear_table_t > gt
- MHAFilter::o1flt lowpass t rmslevel
- MHAFilter::o1flt_lowpass_t attack
- MHAFilter::o1flt_maxtrack_t decay
- bool powersum
- bool bypass
- unsigned int naudiochannels
- unsigned int nbands
- MHA_AC::waveform_t level_in_db
- MHA_AC::waveform_t level_in_db_adjusted
- MHA_AC::waveform_t inhib_gain
- MHASignal::waveform_t max_level_difference
- unsigned int k_nyquist

Additional Inherited Members

```
5.57.1 Constructor & Destructor Documentation
5.57.1.1 dc::dc_t::dc_t (
                    dc vars t vars,
                    mha real t filter_rate,
                    unsigned int nch,
                    algo comm t ac,
                    mha_domain_t domain,
                    unsigned int fftlen,
                    std::string algo )
5.57.2 Member Function Documentation
5.57.2.1 mha wave t * dc::dc_t::process (
                    mha wave t * s)
5.57.2.2 mha_spec_t * dc::dc_t::process (
                    mha spec t * s,
                    wb_inhib_cfg_t * wbinhib )
5.57.2.3 void dc::dc_t::explicit_insert ( )
5.57.2.4 unsigned dc::dc_t::get_nbands ( ) const [inline]
Number of frequency bands accessor.
5.57.2.5 const MHASignal::waveform_t& dc::dc_t::get_level_in_db( ) const [inline]
5.57.2.6 const MHASignal::waveform_t& dc::dc_t::get_level_in_db_adjusted ( ) const
         [inline]
5.57.3 Member Data Documentation
5.57.3.1 std::vector<MHATableLookup::linear_table_t> dc::dc_t::gt [private]
5.57.3.2
        MHAFilter::o1flt lowpass t dc::dc_t::rmslevel [private]
5.57.3.3 MHAFilter::o1flt_lowpass_t dc::dc_t::attack [private]
5.57.3.4
        MHAFilter::o1flt_maxtrack_t dc::dc_t::decay [private]
5.57.3.5 booldc::dc_t::powersum [private]
```


```
5.57.3.6 bool dc::dc_t::bypass [private]
5.57.3.7 unsigned int dc::dc_t::naudiochannels [private]
5.57.3.8 unsigned int dc::dc_t::nbands [private]
5.57.3.9 MHA_AC::waveform_t dc::dc_t::level_in_db [private]
5.57.3.10 MHA_AC::waveform_t dc::dc_t::level_in_db_adjusted [private]
5.57.3.11 MHA_AC::waveform_t dc::dc_t::inhib_gain [private]
5.57.3.12 MHASignal::waveform_t dc::dc_t::max_level_difference [private]
5.57.3.13 unsigned int dc::dc_t::k_nyquist [private]
```

The documentation for this class was generated from the following file:

· dc.cpp

5.58 dc::dc_vars_t Class Reference

Inheritance diagram for dc::dc_vars_t:

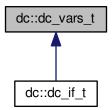

Public Member Functions

dc_vars_t (MHAParser::parser_t &)

Public Attributes

- MHAParser::bool t powersum
- MHAParser::mfloat_t gtdata
- MHAParser::vfloat t gtmin
- MHAParser::vfloat t gtstep
- MHAParser::vfloat_t taurmslevel
- MHAParser::vfloat t tauattack
- MHAParser::vfloat t taudecay
- MHAParser::string_t filterbank
- std::string cf_name
- std::string ef_name
- std::string bw name
- MHAParser::string t chname
- MHAParser::bool_t bypass
- MHAParser::string_t clientid
- MHAParser::string_t gainrule
- MHAParser::string t preset
- MHAParser::int mon t modified
- MHAParser::mfloat_t max_level_difference
- MHAParser::vfloat_mon_t input_level
- MHAParser::vfloat_mon_t filtered_level
- MHAParser::vfloat_mon_t center_frequencies
- MHAParser::vfloat_mon_t edge_frequencies
- MHAParser::vfloat mon t band weights
- · MHAParser::bool tuse wbinhib
- 5.58.1 Constructor & Destructor Documentation
- 5.58.1.1 dc::dc_vars_t::dc_vars_t (

 MHAParser::parser_t & p)
- 5.58.2 Member Data Documentation
- 5.58.2.1 MHAParser::bool_t dc::dc_vars_t::powersum
- 5.58.2.2 MHAParser::mfloat_t dc::dc_vars_t::gtdata
- 5.58.2.3 MHAParser::vfloat_t dc::dc_vars_t::gtmin
- 5.58.2.4 MHAParser::vfloat_t dc::dc_vars_t::gtstep
- 5.58.2.5 MHAParser::vfloat t dc::dc vars t::taurmslevel


5.58.2.6	MHAParser::vfloat_t dc::dc_vars_t::tauattack
5.58.2.7	MHAParser::vfloat_t dc::dc_vars_t::taudecay
5.58.2.8	MHAParser::string_t dc::dc_vars_t::filterbank
5.58.2.9	std::string dc::dc_vars_t::cf_name
5.58.2.10	std::string dc::dc_vars_t::ef_name
5.58.2.11	std::string dc::dc_vars_t::bw_name
5.58.2.12	MHAParser::string_t dc::dc_vars_t::chname
5.58.2.13	MHAParser::bool_t dc::dc_vars_t::bypass
5.58.2.14	MHAParser::string_t dc::dc_vars_t::clientid
5.58.2.15	MHAParser::string_t dc::dc_vars_t::gainrule
5.58.2.16	MHAParser::string_t dc::dc_vars_t::preset
5.58.2.17	MHAParser::int_mon_t dc::dc_vars_t::modified
5.58.2.18	MHAParser::mfloat_t dc::dc_vars_t::max_level_difference
5.58.2.19	MHAParser::vfloat_mon_t dc::dc_vars_t::input_level
5.58.2.20	MHAParser::vfloat_mon_t dc::dc_vars_t::filtered_level
5.58.2.21	MHAParser::vfloat_mon_t dc::dc_vars_t::center_frequencies
5.58.2.22	MHAParser::vfloat_mon_t dc::dc_vars_t::edge_frequencies
5.58.2.23	MHAParser::vfloat_mon_t dc::dc_vars_t::band_weights
5.58.2.24	MHAParser::bool_t dc::dc_vars_t::use_wbinhib

The documentation for this class was generated from the following file:

• dc.cpp

5.59 dc::dc_vars_validator_t Class Reference

Inheritance diagram for dc::dc_vars_validator_t:

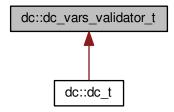

Public Member Functions

• dc_vars_validator_t (dc_vars_t &v, unsigned int s, mha_domain_t domain)

5.59.1 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

dc.cpp

5.60 dc::wb_inhib_cfg_t Class Reference

Public Member Functions

wb_inhib_cfg_t (const wideband_inhib_vars_t &vars)

Public Attributes

- std::vector< float > weights
- float dl_map_min
- float dl_map_max
- float dl diff
- float I_min
- std::vector< std::vector< float >> g_scale

5.60.1 Constructor & Destructor Documentation

5.60.2 Member Data Documentation


- 5.60.2.1 std::vector<float> dc::wb_inhib_cfg_t::weights
- 5.60.2.2 float dc::wb_inhib_cfg_t::dl_map_min
- 5.60.2.3 float dc::wb_inhib_cfg_t::dl_map_max
- 5.60.2.4 float dc::wb_inhib_cfg_t::dl_diff
- 5.60.2.5 float dc::wb_inhib_cfg_t::l_min
- 5.60.2.6 std::vector<std::vector<float> > dc::wb_inhib_cfg_t::g_scale

The documentation for this class was generated from the following file:

· dc.cpp

5.61 dc::wideband_inhib_vars_t Class Reference

Inheritance diagram for dc::wideband_inhib_vars_t:

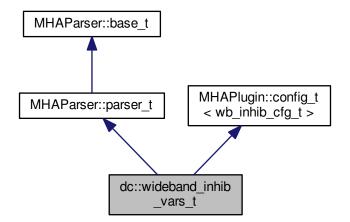

Public Member Functions

- wideband inhib vars t()
- void **setchannels** (unsigned int ch, unsigned int bnds)
- wb_inhib_cfg_t * current ()
- void update ()

Public Attributes

- MHAParser::vfloat_t weights
- · MHAParser::float t dl map min
- MHAParser::float_t dl_map_max
- MHAParser::float t1 min
- MHAParser::mfloat_t g_scale
- MHAEvents::patchbay_t< wideband_inhib_vars_t > patchbay
- unsigned int channels
- · unsigned int bands

Additional Inherited Members

```
5.61.1 Constructor & Destructor Documentation
```

```
5.61.1.1 dc::wideband_inhib_vars_t::wideband_inhib_vars_t()
```

5.61.2 Member Function Documentation

```
5.61.2.2 wb_inhib_cfg_t* dc::wideband_inhib_vars_t::current() [inline]
```

- 5.61.2.3 void dc::wideband_inhib_vars_t::update ()
- 5.61.3 Member Data Documentation
- 5.61.3.1 MHAParser::vfloat t dc::wideband inhib vars t::weights
- 5.61.3.2 MHAParser::float_t dc::wideband_inhib_vars_t::dl_map_min
- 5.61.3.3 MHAParser::float_t dc::wideband_inhib_vars_t::dl_map_max
- 5.61.3.4 MHAParser::float t dc::wideband inhib vars t::1 min


- 5.61.3.5 MHAParser::mfloat_t dc::wideband_inhib_vars_t::g_scale
- 5.61.3.6 MHAEvents::patchbay_t<wideband_inhib_vars_t> dc::wideband_inhib_vars_t← ::patchbay
- 5.61.3.7 unsigned int dc::wideband_inhib_vars_t::channels
- 5.61.3.8 unsigned int dc::wideband_inhib_vars_t::bands

The documentation for this class was generated from the following file:

· dc.cpp

5.62 dc_simple::dc_if_t Class Reference

Inheritance diagram for dc_simple::dc_if_t:

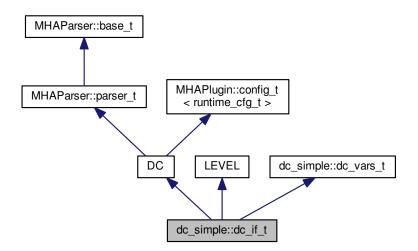

Public Member Functions

- dc_if_t (const algo_comm_t &ac_, const std::string &th_, const std::string &al_)
- void prepare (mhaconfig_t &tf)
- void release ()
- mha_spec_t * process (mha_spec_t *)
- mha_wave_t * process (mha_wave_t *)

Private Member Functions

```
    void update dc ()
```

- void update_level ()
- void has_been_modified ()
- void read_modified ()
- void update_level_mon ()
- void update gain mon ()

Private Attributes

- MHAParser::string_t clientid
- MHAParser::string t gainrule
- MHAParser::string_t preset
- · MHAParser::int mon t modified
- MHAParser::vfloat_mon_t mon_l
- MHAParser::vfloat_mon_t mon_g
- MHAParser::string t filterbank
- MHAParser::vfloat_mon_t center_frequencies
- MHAParser::vfloat_mon_t edge_frequencies
- MHAEvents::patchbay_t< dc_if_t > patchbay
- bool prepared

Additional Inherited Members

```
5.62.1 Constructor & Destructor Documentation
```

5.62.2 Member Function Documentation

Implements MHAPlugin::plugin_t < runtime_cfg_t > (p. 685).

Reimplemented from MHAPlugin::plugin_t< runtime_cfg_t > (p. 686).


```
5.62.2.3 mha_spec_t * dc_simple::dc_if_t::process (
                    mha\_spec\_t * s)
5.62.2.4 mha_wave_t * dc_simple::dc_if_t::process (
                    mha_wave_t * s
5.62.2.5 void dc_simple::dc_if_t::update_dc( ) [private]
5.62.2.6 void dc_simple::dc_if_t::update_level() [private]
5.62.2.7 void dc_simple::dc_if_t::has_been_modified( ) [inline], [private]
5.62.2.8 void dc_simple::dc_if_t::read_modified() [inline], [private]
5.62.2.9 void dc_simple::dc_if_t::update_level_mon() [private]
5.62.2.10 void dc_simple::dc_if_t::update_gain_mon() [private]
5.62.3 Member Data Documentation
        MHAParser::string t dc_simple::dc_if_t::clientid [private]
        MHAParser::string t dc_simple::dc_if_t::gainrule [private]
5.62.3.3 MHAParser::string_t dc_simple::dc_if_t::preset [private]
5.62.3.4 MHAParser::int_mon_t dc_simple::dc_if_t::modified [private]
5.62.3.5 MHAParser::vfloat_mon_t dc_simple::dc_if_t::mon_l [private]
5.62.3.6
        MHAParser::vfloat mon t dc_simple::dc_if_t::mon_g [private]
5.62.3.7
        MHAParser::string_t dc_simple::dc_if_t::filterbank [private]
5.62.3.8
        MHAParser::vfloat_mon_t dc_simple::dc_if_t::center_frequencies [private]
5.62.3.9 MHAParser::vfloat_mon_t dc_simple::dc_if_t::edge_frequencies [private]
5.62.3.10 MHAEvents::patchbay_t<dc_if_t> dc_simple::dc_if_t::patchbay [private]
5.62.3.11 bool dc_simple::dc_if_t::prepared [private]
```

The documentation for this class was generated from the following file:

dc_simple.cpp

5.63 dc_simple::dc_t Class Reference

Inheritance diagram for dc_simple::dc_t:

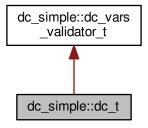

Classes

· class line_t

Public Member Functions

- dc_t (const dc_vars_t &vars, mha_real_t filter_rate, unsigned int nch, unsigned int fftlen)
- mha_spec_t * process (mha_spec_t *, mha_wave_t *level_db)
- mha_wave_t * process (mha_wave_t *, mha_wave_t *level_db)

Public Attributes

- std::vector< float > mon_l
- std::vector< float > mon_g

Private Attributes

- std::vector< mha_real_t > expansion_threshold
- std::vector< mha_real_t > limiter_threshold
- std::vector< line_t > compression
- std::vector< line_t > expansion
- std::vector< line_t > limiter
- $std::vector < mha_real_t > maxgain$
- unsigned int nbands

Additional Inherited Members

```
5.63.1 Constructor & Destructor Documentation
5.63.1.1 dc_simple::dc_t::dc_t (
                      const dc_vars_t & vars,
                      mha_real_t filter_rate,
                      unsigned int nch,
                      unsigned int fftlen )
5.63.2 Member Function Documentation
5.63.2.1 mha_spec_t * dc_simple::dc_t::process (
                      mha_spec_t * s,
                      mha_wave_t * level_db )
5.63.2.2 mha_wave_t * dc_simple::dc_t::process (
                      mha_wave_t * s,
                      mha wave t * level_db )
5.63.3 Member Data Documentation
5.63.3.1 std::vector<mha_real_t> dc_simple::dc_t::expansion_threshold [private]
5.63.3.2 std::vector<mha_real_t> dc_simple::dc_t::limiter_threshold [private]
\textbf{5.63.3.3} \quad \textbf{std::vector} < \textbf{line\_t} > \textbf{dc\_simple::dc\_t::compression} \quad \texttt{[private]}
5.63.3.4
         std::vector<line_t> dc_simple::dc_t::expansion [private]
5.63.3.5
         std::vector<line t> dc_simple::dc_t::limiter [private]
         std::vector<mha real t> dc simple::dc t::maxgain [private]
5.63.3.7
         unsigned int dc_simple::dc_t::nbands [private]
5.63.3.8
         std::vector<float> dc simple::dc t::mon l
5.63.3.9 std::vector<float> dc_simple::dc_t::mon_g
```

The documentation for this class was generated from the following file:

dc_simple.cpp

```
5.64 dc_simple::dc_t::line_t Class Reference
```

Public Member Functions

```
    line_t (mha_real_t x1, mha_real_t y1, mha_real_t x2, mha_real_t y2)
    line_t (mha_real_t x1, mha_real_t y1, mha_real_t slope)
    mha_real_t operator() (mha_real_t x)
```

Private Attributes

```
mha_real_t m
```

```
mha_real_t y0
```

5.64.1 Constructor & Destructor Documentation

5.64.2 Member Function Documentation

mha_real_t slope)

5.64.3 Member Data Documentation

```
5.64.3.1 mha_real_t dc_simple::dc_t::line_t::m [private]
```


```
5.64.3.2 mha_real_t dc_simple::dc_t::line_t::y0 [private]
```

The documentation for this class was generated from the following file:

dc_simple.cpp

5.65 dc_simple::dc_vars_t Class Reference

Inheritance diagram for dc_simple::dc_vars_t:

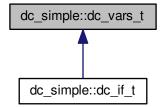

Public Member Functions

dc_vars_t (MHAParser::parser_t &)

Public Attributes

- MHAParser::vfloat_t g50
- MHAParser::vfloat_t g80
- MHAParser::vfloat_t maxgain
- MHAParser::vfloat_t expansion_threshold
- MHAParser::vfloat_t expansion_slope
- MHAParser::vfloat_t limiter_threshold
- MHAParser::vfloat t tauattack
- MHAParser::vfloat_t taudecay
- MHAParser::bool_t bypass

5.65.1 Constructor & Destructor Documentation

5.65.2 Member Data Documentation

- 5.65.2.1 MHAParser::vfloat_t dc_simple::dc_vars_t::g50
- 5.65.2.2 MHAParser::vfloat_t dc_simple::dc_vars_t::g80


- 5.65.2.3 MHAParser::vfloat_t dc_simple::dc_vars_t::maxgain
- 5.65.2.4 MHAParser::vfloat_t dc_simple::dc_vars_t::expansion_threshold
- 5.65.2.5 MHAParser::vfloat_t dc_simple::dc_vars_t::expansion_slope
- 5.65.2.6 MHAParser::vfloat t dc_simple::dc_vars_t::limiter_threshold
- 5.65.2.7 MHAParser::vfloat_t dc_simple::dc_vars_t::tauattack
- 5.65.2.8 MHAParser::vfloat t dc_simple::dc_vars_t::taudecay
- 5.65.2.9 MHAParser::bool_t dc_simple::dc_vars_t::bypass

The documentation for this class was generated from the following file:

· dc simple.cpp

5.66 dc simple::dc vars validator t Class Reference

Inheritance diagram for dc_simple::dc_vars_validator_t:

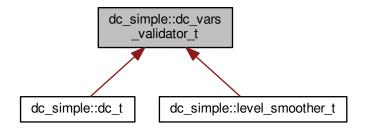

Public Member Functions

dc_vars_validator_t (const dc_vars_t &v, unsigned int s)


5.66.1 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

· dc_simple.cpp

5.67 dc_simple::level_smoother_t Class Reference

Inheritance diagram for dc_simple::level_smoother_t:

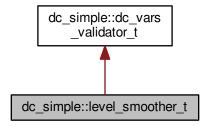

Public Member Functions

- level_smoother_t (const dc_vars_t &vars, mha_real_t filter_rate, mhaconfig_t buscfg)
- mha_wave_t * process (mha_spec_t *)
- mha_wave_t * process (mha_wave_t *)

Private Attributes

- MHAFilter::o1flt_lowpass_t attack
- MHAFilter::o1flt_maxtrack_t decay
- unsigned int nbands
- unsigned int fftlen
- MHASignal::waveform_t level_wave
- MHASignal::waveform_t level_spec

Additional Inherited Members


```
5.67.1 Constructor & Destructor Documentation
5.67.1.1 dc_simple::level_smoother_t::level_smoother_t (
                    const dc_vars_t & vars,
                     mha real t filter rate,
                     mhaconfig_t buscfg )
5.67.2 Member Function Documentation
5.67.2.1 mha wave t * dc_simple::level_smoother_t::process (
                     mha_spec_t * s )
5.67.2.2 mha_wave_t * dc_simple::level_smoother_t::process (
                     mha_wave_t * s )
5.67.3 Member Data Documentation
5.67.3.1 MHAFilter::o1flt_lowpass_t dc_simple::level_smoother_t::attack [private]
5.67.3.2 MHAFilter::o1flt maxtrack tdc_simple::level_smoother_t::decay [private]
5.67.3.3 unsigned int dc_simple::level_smoother_t::nbands [private]
5.67.3.4 unsigned int dc_simple::level_smoother_t::fftlen [private]
5.67.3.5 MHASignal::waveform_t dc_simple::level_smoother_t::level_wave [private]
5.67.3.6 MHASignal::waveform t dc simple::level smoother t::level spec [private]
```

The documentation for this class was generated from the following file:

dc_simple.cpp

5.68 delay::interface_t Class Reference

Inheritance diagram for delay::interface_t:

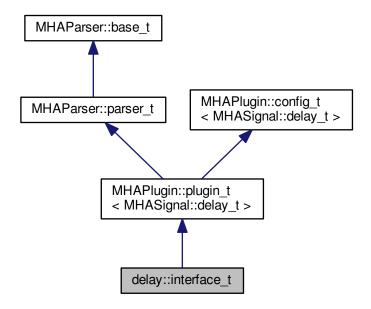

Public Member Functions

- interface_t (const algo_comm_t &, const std::string &, const std::string &)
- void prepare (mhaconfig_t &)
- mha_wave_t * process (mha_wave_t *)

Private Member Functions

• void update ()


Private Attributes

- MHAParser::vint_t delays
- MHAEvents::patchbay_t< interface_t > patchbay

```
Additional Inherited Members
```

```
5.68.1 Constructor & Destructor Documentation
5.68.1.1 delay::interface_t::interface_t (
                     const algo comm t & iac,
                     const std::string & ,
                     const std::string & )
5.68.2 Member Function Documentation
5.68.2.1 void delay::interface_t::prepare (
                     mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin_t < MHASignal::delay_t > (p. 685).
5.68.2.2 mha wave t * delay::interface_t::process (
                     mha wave t * s)
5.68.2.3 void delay::interface_t::update() [private]
5.68.3 Member Data Documentation
        MHAParser::vint_t delay::interface_t::delays [private]
5.68.3.2 MHAEvents::patchbay_t<interface_t> delay::interface_t::patchbay [private]
The documentation for this class was generated from the following file:
   · delay.cpp
5.69
      delaysum::delaysum_if_t Class Reference
Interface class for the delaysum plugin.
```

Inheritance diagram for delaysum::delaysum_if_t:

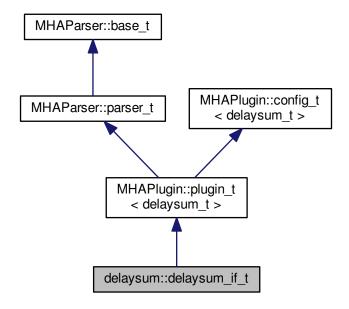

Public Member Functions

- delaysum_if_t (const algo_comm_t &, const std::string &, const std::string &)
- mha_wave_t * process (mha_wave_t *)
- void prepare (mhaconfig_t &)
- void release ()

Private Member Functions

• void update_cfg ()

Private Attributes

MHAParser::vfloat_t weights

Linear weights to be multiplied with the audio signal, one factor for each channel.

MHAParser::vint_t delay

vector of channel-specific delays, in samples.

MHAEvents::patchbay_t< delaysum_if_t > patchbay

The patchbay to react to config changes.

Additional Inherited Members

5.69.1 Detailed Description

Interface class for the delaysum plugin.

This plugin allows to delay and sum multiple input channels using individual delays and weights. After each channel gets delayed it is multiplied with the given weight and then added to the single outout channel.

```
5.69.2 Constructor & Destructor Documentation
5.69.2.1 delaysum::delaysum if t::delaysum if t (
                     const algo_comm_t & iac,
                     const std::string & ,
                     const std::string & )
5.69.3 Member Function Documentation
5.69.3.1 mha_wave_t * delaysum::delaysum_if_t::process (
                     mha_wave_t * wave )
5.69.3.2 void delaysum::delaysum if t::prepare (
                     mhaconfig t & tfcfg ) [virtual]
Implements MHAPlugin::plugin_t < delaysum_t > (p. 685).
5.69.3.3 void delaysum::delaysum_if_t::release (
                     void ) [virtual]
Reimplemented from MHAPlugin::plugin_t < delaysum_t > (p. 686).
5.69.3.4 void delaysum::delaysum_if_t::update_cfg (
                     void ) [private]
5.69.4 Member Data Documentation
5.69.4.1 MHAParser::vfloat_t delaysum::delaysum_if_t::weights [private]
Linear weights to be multiplied with the audio signal, one factor for each channel.
Order is [chan0, chan1, ...]
```

5.69.4.2 MHAParser::vint_t delaysum::delaysum_if_t::delay [private]

vector of channel-specific delays, in samples.

5.69.4.3 MHAEvents::patchbay_t<delaysum_if_t> delaysum::delaysum_if_t::patchbay [private]

The patchbay to react to config changes.


The documentation for this class was generated from the following file:

· delaysum.cpp

5.70 delaysum::delaysum_t Class Reference

Runtime configuration of the delaysum plugin.

Inheritance diagram for delaysum::delaysum_t:

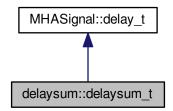

Public Member Functions

delaysum_t (unsigned int nch, unsigned int fragsize, const std::vector< mha_real_t > &weights_, const std::vector< int > &delays_)

Constructor of the runtime configuration.

mha_wave_t * process (mha_wave_t *)

Private Attributes

- std::vector< mha_real_t > weights
 Relative weights for each channel. Order is [chan0, chan1, ...].
- MHASignal::waveform_t out

Output waveform.

5.70.1 Detailed Description

Runtime configuration of the delaysum plugin.

Inherits from the already present delay_t class. The constructor initializes and validates the runtime configuration and forwards the delay vector to the delay_t class. The process function first calls delay_t::process and then multiplies every output channel with its weight and adds them into the output channel.

5.70.2 Constructor & Destructor Documentation

Constructor of the runtime configuration.

Parameters

nch	Number of input channels.
fragsize	Size of one input fragment in frames.
weights⊷	Vector of weights for each channel.
_	_
delays⊷	Vector of delays, one entry per channel.

5.70.3 Member Function Documentation

```
5.70.3.1 mha_wave_t * delaysum::delaysum_t::process ( mha_wave_t * signal )
```

5.70.4 Member Data Documentation

```
5.70.4.1 std::vector<mha_real_t> delaysum::delaysum_t::weights [private]
```

Relative weights for each channel. Order is [chan0, chan1, ...].

```
5.70.4.2 MHASignal::waveform_t delaysum::delaysum_t::out [private]
```


Output waveform.

The documentation for this class was generated from the following file:

· delaysum.cpp

5.71 doasym_classification Class Reference

Inheritance diagram for doasym_classification:

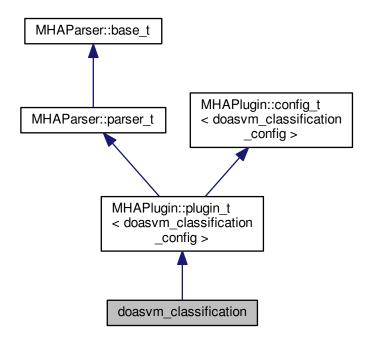

Public Member Functions

doasvm_classification (algo_comm_t &ac, const std::string &chain_name, const std
 ::string &algo_name)

Constructs our plugin.

- ~doasym_classification ()
- mha_wave_t * process (mha_wave_t *)

Checks for the most recent configuration and defers processing to it.

void prepare (mhaconfig_t &)

Plugin preparation.

void release (void)

Public Attributes

- MHAParser::vfloat_t angles
- MHAParser::mfloat_t w
- MHAParser::vfloat t b
- MHAParser::vfloat_t x
- MHAParser::vfloat_t y
- MHAParser::string_t p_name
- MHAParser::string_t max_p_ind_name
- MHAParser::string_t vGCC_name

Private Member Functions

void update_cfg ()

Private Attributes

MHAEvents::patchbay_t< doasym_classification > patchbay

Additional Inherited Members

```
5.71.1 Constructor & Destructor Documentation
```

Constructs our plugin.

```
5.71.1.2 doasym_classification::~doasym_classification()
```

5.71.2 Member Function Documentation

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number of
	channels, frames per block, sampling rate.

Implements MHAPlugin::plugin_t< doasym_classification_config > (p. 685).

5.71.3.9 MHAEvents::patchbay_t<doasvm_classification> doasvm_classification::patchbay

The documentation for this class was generated from the following files:

· doasvm_classification.h

[private]

- doasym classification.cpp
- 5.72 doasym_classification_config Class Reference

Public Member Functions

- doasvm_classification_config (algo_comm_t &ac, const mhaconfig_t in_cfg, doasvm_classification *_doasvm)
- ~doasym_classification_config ()
- mha_wave_t * process (mha_wave_t *)

Public Attributes

```
· algo_comm_t & ac
```

doasym_classification * doasym

```
    MHA AC::waveform t p
```

- MHA_AC::int_t p_max
- mha_wave_t c
- 5.72.1 Constructor & Destructor Documentation


- 5.72.1.2 doasym_classification_config::~doasym_classification_config()
- 5.72.2 Member Function Documentation
- 5.72.2.1 mha_wave_t * doasym_classification_config::process (mha_wave_t * wave)
- 5.72.3 Member Data Documentation
- 5.72.3.1 algo_comm_t& doasym_classification_config::ac
- 5.72.3.2 doasvm_classification* doasvm_classification_config::doasvm
- 5.72.3.3 MHA_AC::waveform_t doasym_classification_config::p
- 5.72.3.4 MHA_AC::int_t doasym_classification_config::p_max
- 5.72.3.5 mha_wave_t doasym_classification_config::c

The documentation for this class was generated from the following files:

- · doasym classification.h
- · doasvm_classification.cpp

5.73 doasym_feature_extraction Class Reference

Inheritance diagram for doasym_feature_extraction:

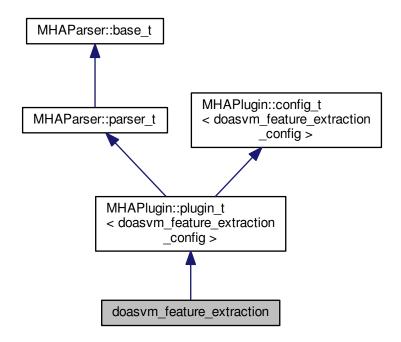

Public Member Functions

 doasvm_feature_extraction (algo_comm_t &ac, const std::string &chain_name, const std::string &algo_name)

Constructs our plugin.

- ~doasvm_feature_extraction ()
- mha wave t * process (mha wave t *)

Checks for the most recent configuration and defers processing to it.

void prepare (mhaconfig_t &)

Plugin preparation.

void release (void)

Public Attributes

- MHAParser::int_t fftlen
- MHAParser::int_t max_lag
- MHAParser::int_t nupsample
- MHAParser::string_t vGCC_name

Private Member Functions

void update_cfg ()

Private Attributes

MHAEvents::patchbay_t< doasym_feature_extraction > patchbay

Additional Inherited Members

```
5.73.1 Constructor & Destructor Documentation
```

Constructs our plugin.

```
5.73.1.2 doasym_feature_extraction::~doasym_feature_extraction()
```

5.73.2 Member Function Documentation

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

Parameters

signal_ini	Structure containing a description of the form of the signal (domain, number of
	channels, frames per block, sampling rate.

Implements MHAPlugin::plugin_t< doasym_feature_extraction_config > (p. 685).

The documentation for this class was generated from the following files:

- · doasym_feature_extraction.h
- doasym feature extraction.cpp

5.74 doasym_feature_extraction_config Class Reference

Public Member Functions

- doasvm_feature_extraction_config (algo_comm_t &ac, const mhaconfig_t in_cfg, doasvm_feature_extraction *_doagcc)
- ~doasym feature extraction config ()
- mha_wave_t * process (mha_wave_t *)

Public Attributes

- doasym_feature_extraction * doagcc
- unsigned int wndlen
- · unsigned int fftlen
- unsigned int G_length
- unsigned int GCC_start
- unsigned int GCC_end
- MHA AC::waveform t vGCC ac
- mha_fft_t fft
- mha_fft_t ifft
- double hifftwin_sum
- MHASignal::waveform t proc wave
- MHASignal::waveform t hwin
- MHASignal::waveform_t hifftwin
- MHASignal::waveform_t vGCC
- MHASignal::spectrum t in spec
- MHASignal::spectrum_t G

```
5.74.1 Constructor & Destructor Documentation
5.74.1.1 doasym_feature_extraction_config::doasym_feature_extraction_config (
                     algo_comm_t & ac,
                     const mhaconfig_t in_cfg,
                     doasym feature extraction * _doagcc )
5.74.1.2 doasym_feature_extraction_config::~doasym_feature_extraction_config()
5.74.2 Member Function Documentation
5.74.2.1 mha_wave_t * doasym_feature_extraction_config::process (
                     mha_wave_t * wave )
       Member Data Documentation
5.74.3
        doasym_feature_extraction* doasym_feature_extraction_config::doagcc
5.74.3.2
        unsigned int doasym_feature_extraction_config::wndlen
5.74.3.3
        unsigned int doasym_feature_extraction_config::fftlen
5.74.3.4
        unsigned int doasym_feature_extraction_config::G_length
5.74.3.5
        unsigned int doasym feature extraction config::GCC start
5.74.3.6
        unsigned int doasym_feature_extraction_config::GCC_end
5.74.3.7
         MHA_AC::waveform_t doasym_feature_extraction_config::vGCC_ac
5.74.3.8 mha fft t doasym_feature_extraction_config::fft
5.74.3.9 mha fft t doasym feature extraction config::ifft
5.74.3.10 double doasym_feature_extraction_config::hifftwin_sum
5.74.3.11 MHASignal::waveform t doasym feature extraction config::proc wave
5.74.3.12 MHASignal::waveform t doasym_feature_extraction_config::hwin
5.74.3.13 MHASignal::waveform t doasym feature extraction config::hifftwin
5.74.3.14 MHASignal::waveform t doasym_feature_extraction_config::vGCC
5.74.3.15 MHASignal::spectrum t doasym feature extraction config::in spec
5.74.3.16 MHASignal::spectrum t doasym_feature_extraction_config::G
```


The documentation for this class was generated from the following files:

- · doasym feature extraction.h
- doasym_feature_extraction.cpp

5.75 droptect_t Class Reference

Detect dropouts in a signal with a constant spectrum.

Inheritance diagram for droptect_t:

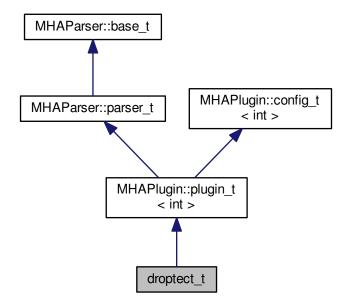

Public Member Functions

droptect_t (algo_comm_t &ac, const std::string &chain_name, const std::string &algo
 —name)

This constructor initializes the configuration language variables and inserts them into the MHA configuration tree.

- void prepare (mhaconfig_t &signal_info)
- void release (void)
- mha_spec_t * process (mha_spec_t *signal)

Private Attributes

- MHAParser::vint_mon_t dropouts
- MHAParser::vint_mon_t consecutive_dropouts
- MHAParser::int_mon_t blocks
- MHAParser::bool_t reset
- MHAParser::float_t threshold
- MHASignal::waveform_t * current_powspec

```
    MHASignal::waveform_t * filtered_powspec
```

- · MHAParser::float t tau
- std::vector< bool > filter_activated
- float period

The period of the process callback.

MHAParser::mfloat_mon_t filtered_powspec_mon

User access to filtered spectrum.

MHAParser::float mon t level mon

Additional Inherited Members

5.75.1 Detailed Description

Detect dropouts in a signal with a constant spectrum.

5.75.2 Constructor & Destructor Documentation

This constructor initializes the configuration language variables and inserts them into the MHA configuration tree.

```
5.75.3 Member Function Documentation
```

Implements MHAPlugin::plugin_t < int > (p. 685).

Reimplemented from **MHAPlugin::plugin_t**< int > (p. 686).

```
5.75.3.3 mha_spec_t * droptect_t::process (
                    mha_spec_t * signal )
5.75.4 Member Data Documentation
5.75.4.1 MHAParser::vint mon t droptect_t::dropouts [private]
5.75.4.2 MHAParser::vint_mon_t droptect_t::consecutive_dropouts [private]
5.75.4.3 MHAParser::int_mon_t droptect_t::blocks [private]
5.75.4.4 MHAParser::bool_t droptect_t::reset [private]
5.75.4.5 MHAParser::float_t droptect_t::threshold [private]
5.75.4.6 MHASignal::waveform_t* droptect_t::current_powspec [private]
5.75.4.7 MHASignal::waveform_t* droptect_t::filtered_powspec [private]
5.75.4.8 MHAParser::float_t droptect_t::tau [private]
5.75.4.9 std::vector<bool> droptect_t::filter_activated [private]
5.75.4.10 float droptect_t::period [private]
The period of the process callback.
5.75.4.11 MHAParser::mfloat_mon_t droptect_t::filtered_powspec_mon [private]
User access to filtered spectrum.
```


5.75.4.12 MHAParser::float mon t droptect t::level mon [private]

The documentation for this class was generated from the following file:

droptect.cpp

5.76 ds_t Class Reference

Inheritance diagram for ds_t:

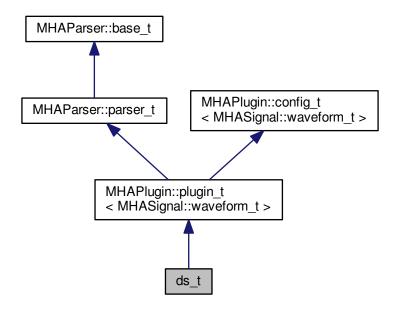

Public Member Functions

- ds_t (algo_comm_t, std::string, std::string)
- mha_wave_t * process (mha_wave_t *)
- void prepare (mhaconfig_t &)
- void release ()

Private Attributes

- MHAParser::int_t ratio
- MHAFilter::iir_filter_t antialias

Additional Inherited Members

5.76.1 Constructor & Destructor Documentation

```
5.76.1.1 ds_t::ds_t (
                    algo_comm_t iac,
                    std::string,
                    std::string )
5.76.2 Member Function Documentation
5.76.2.1 mha wave t * ds_t::process (
                    mha_wave_t * s )
5.76.2.2 void ds_t::prepare (
                    mhaconfig_t & cf ) [virtual]
Implements MHAPlugin::plugin_t< MHASignal::waveform_t > (p. 685).
5.76.2.3 void ds_t::release (
                    void ) [virtual]
Reimplemented from MHAPlugin::plugin_t < MHASignal::waveform_t > (p. 686).
5.76.3 Member Data Documentation
5.76.3.1
        MHAParser::int_t ds_t::ratio [private]
5.76.3.2 MHAFilter::iir_filter_t ds_t::antialias [private]
```

The documentation for this class was generated from the following file:

downsample.cpp

5.77 dynamiclib_t Class Reference

Public Member Functions

- dynamiclib_t (const std::string &)
- void * resolve (const std::string &)
- void * resolve_checked (const std::string &)
- ~dynamiclib_t ()
- const std::string & getmodulename () const
- const std::string & getname () const

Private Attributes

- std::string fullname
- std::string modulename
- mha_libhandle_t h

```
5.77.1 Constructor & Destructor Documentation
```

The documentation for this class was generated from the following files:

- · mha_os.h
- mha_os.cpp
- 5.78 DynComp::dc_afterburn_rt_t Class Reference

5.77.3.2 std::string dynamiclib_t::modulename [private]

5.77.3.3 mha_libhandle_t dynamiclib_t::h [private]

Real-time class for after burn effect.

Public Member Functions

- dc_afterburn_rt_t (const std::vector< float > &cf, unsigned int channels, float srate, const dc_afterburn_vars_t &vars)
- void **burn** (float &Gin, float Lin, unsigned int band, unsigned int channel) gain modifier method (afterburn).

Private Attributes

```
std::vector< float > drain_inv
```

- std::vector< float > conflux
- std::vector< float > maxgain
- std::vector< float > mpo_inv
- std::vector< MHAFilter::o1flt_lowpass_t > lp

5.78.1 Detailed Description

Real-time class for after burn effect.

The constructor processes the parameters and creates pre-processed variables for efficient realtime processing.

5.78.2 Constructor & Destructor Documentation

5.78.3 Member Function Documentation

gain modifier method (afterburn).

Parameters

Gin	Linear gain.
Lin	Input level (Pascal).
band	Filter band number.
© 6008-50048 I	Hörleangonhall, rolae hourg

Output level for MPO is estimated by Gin * Lin.

5.78.4 Member Data Documentation

```
5.78.4.1 std::vector<float> DynComp::dc_afterburn_rt_t::drain_inv [private]

5.78.4.2 std::vector<float> DynComp::dc_afterburn_rt_t::conflux [private]

5.78.4.3 std::vector<float> DynComp::dc_afterburn_rt_t::maxgain [private]

5.78.4.4 std::vector<float> DynComp::dc_afterburn_rt_t::mpo_inv [private]
```

std::vector<MHAFilter::o1flt lowpass t> DynComp::dc_afterburn_rt_t::lp [private]


The documentation for this class was generated from the following files:

- · dc_afterburn.h
- dc_afterburn.cpp

5.79 DynComp::dc_afterburn_t Class Reference

Afterburn class, to be defined as a member of compressors.

Inheritance diagram for DynComp::dc_afterburn_t:

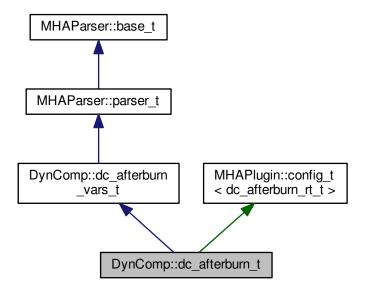

Public Member Functions

- dc afterburn t ()
- void **set_fb_pars** (const std::vector< float > &cf, unsigned int **channels**, float srate)
- void unset_fb_pars ()
- void update_burner ()
- void **burn** (float &Gin, float Lin, unsigned int band, unsigned int channel)

Private Member Functions

• void update ()

Private Attributes

- MHAEvents::patchbay_t< dc_afterburn_t > patchbay
- std::vector< float > _cf
- unsigned int _channels
- float srate
- bool commit_pending
- · bool fb_pars_configured

Additional Inherited Members

5.79.1 Detailed Description

Afterburn class, to be defined as a member of compressors.

```
5.79.2 Constructor & Destructor Documentation
```

```
5.79.2.1 DynComp::dc_afterburn_t::dc_afterburn_t ( )
```

5.79.3 Member Function Documentation

```
5.79.3.2 void DynComp::dc_afterburn_t::unset_fb_pars ( )
```

5.79.3.3 void DynComp::dc_afterburn_t::update_burner() [inline]


```
5.79.3.4 void DynComp::dc_afterburn_t::burn (
                    float & Gin,
                    float Lin.
                     unsigned int band,
                     unsigned int channel ) [inline]
5.79.3.5 void DynComp::dc_afterburn_t::update( ) [private]
5.79.4 Member Data Documentation
5.79.4.1 MHAEvents::patchbay_t<dc_afterburn_t> DynComp::dc_afterburn_t::patchbay
         [private]
5.79.4.2 std::vector<float> DynComp::dc_afterburn_t::_cf [private]
5.79.4.3 unsigned int DynComp::dc_afterburn_t::_channels [private]
5.79.4.4 float DynComp::dc_afterburn_t::_srate [private]
5.79.4.5 bool DynComp::dc_afterburn_t::commit_pending [private]
5.79.4.6 bool DynComp::dc_afterburn_t::fb_pars_configured [private]
The documentation for this class was generated from the following files:
   · dc afterburn.h

    dc_afterburn.cpp

5.80 DynComp::dc_afterburn_vars_t Class Reference
```

Variables for dc_afterburn_t (p. 276) class.

Inheritance diagram for DynComp::dc_afterburn_vars_t:

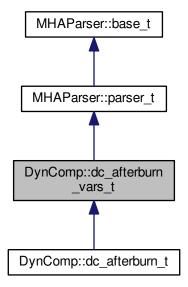

Public Member Functions

dc_afterburn_vars_t ()

Public Attributes

MHAParser::vfloat_t f

MHAParser::vfloat_t drain

MHAParser::vfloat_t conflux

MHAParser::vfloat_t maxgain

MHAParser::vfloat_t mpo

MHAParser::float_t taugain

MHAParser::kw_t commit

MHAParser::bool_t bypass

Additional Inherited Members

5.80.1 Detailed Description

Variables for dc_afterburn_t (p. 276) class.

5.80.2 Constructor & Destructor Documentation 5.80.2.1 DynComp::dc afterburn vars t::dc afterburn vars t() 5.80.3 Member Data Documentation 5.80.3.1 MHAParser::vfloat_t DynComp::dc_afterburn_vars_t::f 5.80.3.2 MHAParser::vfloat_t DynComp::dc_afterburn_vars_t::drain 5.80.3.3 MHAParser::vfloat t DynComp::dc_afterburn_vars_t::conflux 5.80.3.4 MHAParser::vfloat t DynComp::dc_afterburn_vars_t::maxgain 5.80.3.5 MHAParser::vfloat t DynComp::dc_afterburn_vars_t::mpo 5.80.3.6 MHAParser::float_t DynComp::dc_afterburn_vars_t::taugain 5.80.3.7 MHAParser::kw_t DynComp::dc_afterburn_vars_t::commit

The documentation for this class was generated from the following files:

5.80.3.8 MHAParser::bool_t DynComp::dc_afterburn_vars_t::bypass

- · dc_afterburn.h
- dc_afterburn.cpp
- 5.81 DynComp::gaintable_t Class Reference

Gain table class.

Public Member Functions

gaintable_t (const std::vector< mha_real_t > &LInput, const std::vector< mha_real_t > &FCenter, unsigned int channels)

Constructor.

- ∼gaintable t ()
- void update (std::vector< std::vector< mha_real_t >> > newGain)
 Update gains from an external table.
- mha_real_t get_gain (mha_real_t Lin, mha_real_t Fin, unsigned int channel)
 Read Gain from gain table.
- mha_real_t get_gain (mha_real_t Lin, unsigned int band, unsigned int channel)
 Read Gain from gain table.
- void **get_gain** (const **mha_wave_t** &Lin, **mha_wave_t** &Gain)

Read Gains from gain table.

• unsigned int nbands () const

Return number of frequency bands.

· unsigned int nchannels () const

Return number of audio channels.

- std::vector< std::vector< mha_real_t >> get_iofun () const Return current input-output function.
- std::vector< mha_real_t > get_vL () const
- std::vector< mha real t > get vF () const

Private Attributes

- unsigned int num_L
- unsigned int num_F
- unsigned int num_channels
- std::vector< mha real t > vL
- std::vector< mha_real_t > vF
- std::vector< mha real t > vFlog
- std::vector< std::vector< mha_real_t >>> data

5.81.1 Detailed Description

Gain table class.

This gain table is intended to efficient table lookup, i.e, interpolation of levels, and optional interpolation of frequencies. Sample input levels and sample frequencies are given in the constructor. The gain entries can be updated with the **update()** (p. 283) member function via a gain prescription rule from an auditory profile.

5.81.2 Constructor & Destructor Documentation

```
5.81.2.1 gaintable_t::gaintable_t (  const\ std::vector < mha\_real\_t > \&\ \textit{LInput}, \\ const\ std::vector < mha\_real\_t > \&\ \textit{FCenter}, \\ unsigned\ int\ \textit{channels}\ )
```

Constructor.

Parameters

LInput	Input level samples, in equivalent LTASS_combined dB SPL.
FCenter	Frequency samples in Hz (e.g., center frequencies of filterbank).
channels	Number of audio channels (typically 2).

```
5.81.2.2 gaintable_t::~gaintable_t()
```

5.81.3 Member Function Documentation

```
5.81.3.1 void gaintable_t::update (  std::vector < std::vector < mha\_real\_t >> \textit{newGain} \ )
```

Update gains from an external table.

Parameters

newGain	New gain table entries.
---------	-------------------------

Dimension change is not allowed. The number of entries are checked.

Read Gain from gain table.

Parameters

Lin	Input level
Fin	Input frequency (no match required)
channel	Audio channel

Read Gain from gain table.

Parameters

Lin	Input level
-----	-------------

Parameters

band	Input frequency band
channel	Audio channel

```
5.81.3.4 void gaintable_t::get_gain (
const mha_wave_t & Lin,
mha_wave_t & Gain )
```

Read Gains from gain table.

Parameters

Lin	Input levels.
Gain	Output gain.

The number of channels in Lin and Gain must match the number of bands times number of channels in the gaintable.

```
5.81.3.5 unsigned int DynComp::gaintable_t::nbands ( ) const [inline]
```

Return number of frequency bands.

```
5.81.3.6 unsigned int DynComp::gaintable t::nchannels ( ) const [inline]
```

Return number of audio channels.

```
5.81.3.7 std::vector< std::vector< mha real t >> gaintable_t::get_iofun( ) const
```

Return current input-output function.

```
5.81.3.8 std::vector<mha_real_t> DynComp::gaintable_t::get_vL( ) const [inline]
```

```
5.81.3.9 std::vector<mha_real_t> DynComp::gaintable_t::get_vF( ) const [inline]
```

5.81.4 Member Data Documentation

```
5.81.4.1 unsigned int DynComp::gaintable_t::num_L [private]
```

5.81.4.2 unsigned int DynComp::gaintable_t::num_F [private]

5.81.4.3 unsigned int DynComp::gaintable_t::num_channels [private]

```
5.81.4.4 std::vector<mha_real_t> DynComp::gaintable_t::vL [private]
5.81.4.5 std::vector<mha_real_t> DynComp::gaintable_t::vF [private]
5.81.4.6 std::vector<mha_real_t> DynComp::gaintable_t::vFlog [private]
5.81.4.7 std::vector<std::vector<std::vector<mha_real_t> > DynComp::gaintable_t::data [private]
```


The documentation for this class was generated from the following files:

- · gaintable.h
- · gaintable.cpp

5.82 example1_t Class Reference

This C++ class implements the simplest example plugin for the step-by-step tutorial.

Inheritance diagram for example1_t:

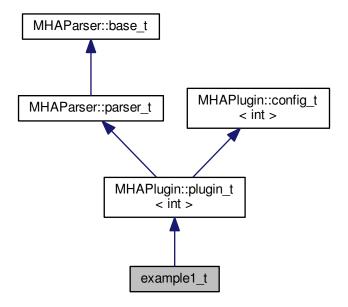

Public Member Functions

• example1_t (algo_comm_t &ac, const std::string &chain_name, const std::string &algo_name)

Do-nothing constructor.

void release (void)

Release may be empty.

void prepare (mhaconfig_t &signal_info)

Plugin preparation.

mha_wave_t * process (mha_wave_t *signal)

Signal processing performed by the plugin.

Additional Inherited Members

5.82.1 Detailed Description

This C++ class implements the simplest example plugin for the step-by-step tutorial.

It inherits from **MHAPlugin::plugin_t** (p. 683) for correct integration in the configuration language interface.

5.82.2 Constructor & Destructor Documentation

Do-nothing constructor.

The constructor has to take these three arguments, but it does not have to use them. However, the base class has to be initialized.

5.82.3 Member Function Documentation

Release may be empty.

Reimplemented from **MHAPlugin::plugin_t**< int > (p. 686).

Plugin preparation.

This plugin checks that the input signal has the waveform domain and contains at least one channel

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number of
	channels, frames per block, sampling rate.

Implements MHAPlugin::plugin_t< int > (p. 685).

Signal processing performed by the plugin.

This plugin multiplies the signal in the first audio channel by a factor 0.1.

Parameters

Returns

Returns a pointer to the input signal structure, with a the signal modified by this plugin. (In-place processing)


The documentation for this class was generated from the following file:

example1.cpp

5.83 example2_t Class Reference

This C++ class implements the second example plugin for the step-by-step tutorial.

Inheritance diagram for example2_t:

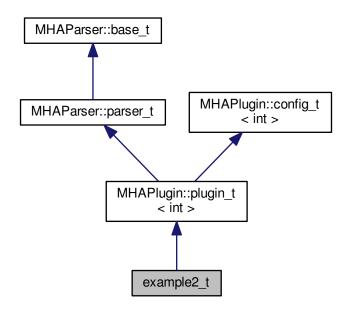

Public Member Functions

example2_t (algo_comm_t &ac, const std::string &chain_name, const std::string &algo_name)

This constructor initializes the configuration language variables and inserts them into the openMHA configuration tree.

void prepare (mhaconfig_t &signal_info)

Plugin preparation.

• void release (void)

Undo restrictions posed in prepare.

mha_wave_t * process (mha_wave_t *signal)

Signal processing performed by the plugin.

Private Attributes

MHAParser::int_t scale_ch

Index of audio channel to scale.

MHAParser::float_t factor

The scaling factor applied to the selected channel.

Additional Inherited Members

5.83.1 Detailed Description

This C++ class implements the second example plugin for the step-by-step tutorial.

It extends the first example by using configuration language variables to influence the processing.

5.83.2 Constructor & Destructor Documentation

This constructor initializes the configuration language variables and inserts them into the openMHA configuration tree.

5.83.3 Member Function Documentation

Plugin preparation.

This plugin checks that the input signal has the waveform domain and contains enough channels.

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number of
	channels, frames per block, sampling rate.

Implements MHAPlugin::plugin_t< int > (p. 685).

Undo restrictions posed in prepare.

Reimplemented from **MHAPlugin::plugin_t**< int > (p. 686).

Signal processing performed by the plugin.

This plugin multiplies the signal in the selected audio channel by the configured factor.

Parameters

```
signal Pointer to the input signal structure.
```

Returns

Returns a pointer to the input signal structure, with a the signal modified by this plugin. (In-place processing)

5.83.4 Member Data Documentation

```
5.83.4.1 MHAParser::int_t example2_t::scale_ch [private]
```

Index of audio channel to scale.

```
5.83.4.2 MHAParser::float_t example2_t::factor [private]
```

The scaling factor applied to the selected channel.


The documentation for this class was generated from the following file:

example2.cpp

5.84 example3_t Class Reference

A Plugin class using the openMHA Event mechanism.

Inheritance diagram for example3_t:

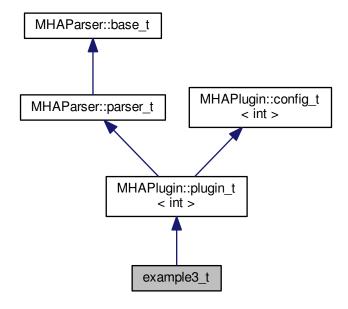

Public Member Functions

• example3_t (algo_comm_t &ac, const std::string &chain_name, const std::string &algo name)

This constructor initializes the configuration language variables and inserts them into the openMHA configuration tree.

void prepare (mhaconfig_t &signal_info)

Plugin preparation.

void release (void)

Bookkeeping only.

mha_wave_t * process (mha_wave_t *signal)

Signal processing performed by the plugin.

Private Member Functions

- void on_scale_ch_writeaccess ()
- void on_scale_ch_valuechanged ()
- void on_scale_ch_readaccess ()
- void on_prereadaccess ()

Private Attributes

MHAParser::int_t scale_ch

Index of audio channel to scale.

MHAParser::float_t factor

The scaling factor applied to the selected channel.

MHAParser::int mon t prepared

Keep Track of the prepare/release calls.

MHAEvents::patchbay_t< example3_t > patchbay

The Event connector.

Additional Inherited Members

5.84.1 Detailed Description

A Plugin class using the openMHA Event mechanism.

This is the third example plugin for the step-by-step tutorial.

5.84.2 Constructor & Destructor Documentation

This constructor initializes the configuration language variables and inserts them into the openMHA configuration tree.

It connects the openMHA Events triggered by these configuration variables to the respective callbacks.

5.84.3 Member Function Documentation

Plugin preparation.

This plugin checks that the input signal has the waveform domain and contains enough channels.

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number of	
	channels, frames per block, sampling rate.	

Implements $MHAPlugin::plugin_t < int > (p. 685)$.

Bookkeeping only.

Reimplemented from **MHAPlugin::plugin_t**< int > (p. 686).

```
5.84.3.7 mha_wave_t * example3_t::process ( mha_wave_t * signal )
```

Signal processing performed by the plugin.

This plugin multiplies the signal in the selected audio channel by the configured factor.

Parameters

```
signal Pointer to the input signal structure.
```

Returns

Returns a pointer to the input signal structure, with a the signal modified by this plugin. (In-place processing)

5.84.4 Member Data Documentation

```
5.84.4.1 MHAParser::int_t example3_t::scale_ch [private]
```

Index of audio channel to scale.

```
5.84.4.2 MHAParser::float_t example3_t::factor [private]
```

The scaling factor applied to the selected channel.

```
5.84.4.3 MHAParser::int_mon_t example3_t::prepared [private]
```

Keep Track of the prepare/release calls.

5.84.4.4 MHAEvents::patchbay_t<example3_t> example3_t::patchbay [private]

The Event connector.


The documentation for this class was generated from the following file:

example3.cpp

5.85 example4_t Class Reference

A Plugin class using the spectral signal.

Inheritance diagram for example4_t:

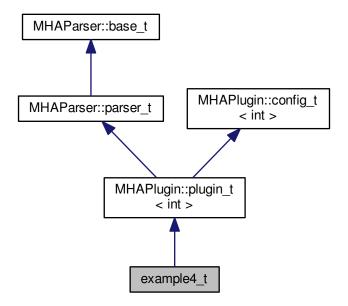

Public Member Functions

• example4_t (algo_comm_t &ac, const std::string &chain_name, const std::string &algo_name)

This constructor initializes the configuration language variables and inserts them into the openMHA configuration tree.

void prepare (mhaconfig_t &signal_info)

Plugin preparation.

void release (void)

Bookkeeping only.

mha_spec_t * process (mha_spec_t *signal)

Signal processing performed by the plugin.

Private Member Functions

- void on_scale_ch_writeaccess ()
- void on_scale_ch_valuechanged ()
- void on_scale_ch_readaccess ()
- void on_prereadaccess ()

Private Attributes

MHAParser::int_t scale_ch

Index of audio channel to scale.

MHAParser::float_t factor

The scaling factor applied to the selected channel.

MHAParser::int_mon_t prepared

Keep Track of the prepare/release calls.

MHAEvents::patchbay_t< example4_t > patchbay

The Event connector.

Additional Inherited Members

5.85.1 Detailed Description

A Plugin class using the spectral signal.

This is the fourth example plugin for the step-by-step tutorial.

5.85.2 Constructor & Destructor Documentation

This constructor initializes the configuration language variables and inserts them into the openMHA configuration tree.

It connects the openMHA Events triggered by these configuration variables to the respective callbacks.

5.85.3 Member Function Documentation

Plugin preparation.

This plugin checks that the input signal has the waveform domain and contains enough channels.

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number of	
	channels, frames per block, sampling rate.	

Implements MHAPlugin::plugin t < int > (p. 685).

Bookkeeping only.

Reimplemented from **MHAPlugin::plugin** t < int > (p. 686).

```
5.85.3.7 mha_spec_t * example4_t::process ( mha_spec_t * signal )
```

Signal processing performed by the plugin.

This plugin multiplies the spectral signal in the selected audio channel by the configured factor.

Parameters

signal Pointer to the input signal structure.

Returns

Returns a pointer to the input signal structure, with a the signal modified by this plugin. (In-place processing)

5.85.4 Member Data Documentation

5.85.4.1 MHAParser::int_t example4_t::scale_ch [private]

Index of audio channel to scale.

5.85.4.2 MHAParser::float_t example4_t::factor [private]

The scaling factor applied to the selected channel.

5.85.4.3 MHAParser::int_mon_t example4_t::prepared [private]

Keep Track of the prepare/release calls.

5.85.4.4 MHAEvents::patchbay_t<example4_t> example4_t::patchbay [private]

The Event connector.

The documentation for this class was generated from the following file:

example4.cpp

5.86 example5_t Class Reference

Public Member Functions

- example5_t (unsigned int, unsigned int, mha_real_t)
- mha_spec_t * process (mha_spec_t *)

Private Attributes

- unsigned int channel
- · mha_real_t scale

5.86.1 Constructor & Destructor Documentation

5.86.2 Member Function Documentation

5.86.3 Member Data Documentation


5.86.3.1 unsigned int example5_t::channel [private]

The documentation for this class was generated from the following file:

· example5.cpp

5.87 example6_t Class Reference

Inheritance diagram for example6_t:

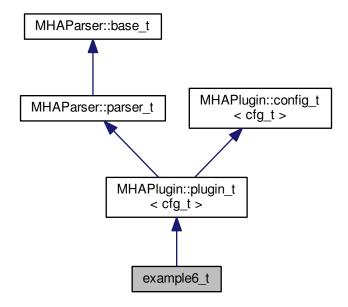

Public Member Functions

```
• example6_t (const algo_comm_t &, const std::string &, const std::string &)
```

- mha_wave_t * process (mha_wave_t *)
- void prepare (mhaconfig t &)

Private Member Functions

void update_cfg ()

Private Attributes

- MHAParser::int_t channel_no
- · float rmsdb
- MHAEvents::patchbay_t< example6_t > patchbay

const std::string &)

Additional Inherited Members

5.87.1 Constructor & Destructor Documentation

5.87.2 Member Function Documentation

```
5.87.2.1 mha_wave_t * example6_t::process ( mha_wave_t * wave )
```

Implements MHAPlugin::plugin_t < cfg_t > (p. 685).

```
5.87.2.3 void example6_t::update_cfg( ) [private]
```

5.87.3 Member Data Documentation

```
5.87.3.1 MHAParser::int t example6_t::channel_no [private]
```

5.87.3.2 float example6_t::rmsdb [private]

5.87.3.3 MHAEvents::patchbay_t<example6_t> example6_t::patchbay [private]

The documentation for this class was generated from the following file:

example6.cpp

5.88 expression_t Class Reference

Class for separating a string into a left hand value and a right hand value.

5.88.1 Detailed Description

Class for separating a string into a left hand value and a right hand value.


A list of valid operators can be provided. After construction, the class members Ival, rval and op contain the apropriate contents.

The documentation for this class was generated from the following file:

mha_parser.cpp

5.89 fader_if_t Class Reference

Inheritance diagram for fader if t:

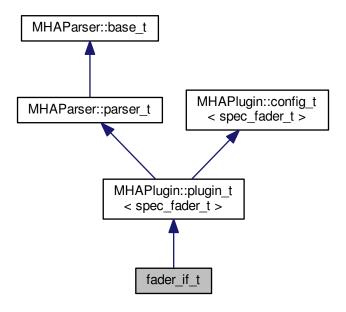

Public Member Functions

- fader_if_t (const algo_comm_t &, const std::string &, const std::string &)
- mha_spec_t * process (mha_spec_t *)
- void prepare (mhaconfig_t &)

Private Member Functions

void update_cfg ()

Private Attributes

```
    MHAEvents::patchbay_t< fader_if_t > patchbay
```

- · MHAParser::float t tau
- MHAParser::vfloat_t newgains
- mha_real_t * actgains

Additional Inherited Members

```
5.89.1 Constructor & Destructor Documentation
```

5.89.2 Member Function Documentation

```
5.89.2.1 mha_spec_t * fader_if_t::process (
mha_spec_t * s )
```

Implements MHAPlugin::plugin_t< spec_fader_t > (p. 685).

5.89.3 Member Data Documentation

```
5.89.3.1 MHAEvents::patchbay_t<fader_if_t> fader_if_t::patchbay [private]
```

5.89.3.2 MHAParser::float_t fader_if_t::tau [private]

5.89.3.3 MHAParser::vfloat_t fader_if_t::newgains [private]


5.89.3.4 mha_real_t* **fader_if_t**::actgains [private]

The documentation for this class was generated from the following file:

fader_spec.cpp

5.90 fader_wave::fader_wave_if_t Class Reference

Inheritance diagram for fader_wave::fader_wave_if_t:

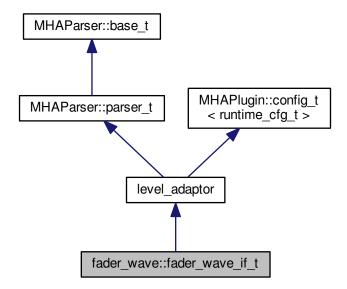

Public Member Functions

- fader_wave_if_t (algo_comm_t, const char *, const char *)
- mha_wave_t * process (mha_wave_t *)
- void prepare (mhaconfig_t &)
- void release ()

Private Member Functions

void set_level ()

Private Attributes

- MHAParser::vfloat_t gain
- MHAParser::float_t ramplen
- MHAEvents::patchbay_t< fader_wave_if_t > patchbay
- bool prepared

Additional Inherited Members


```
5.90.1 Constructor & Destructor Documentation
5.90.1.1 fader_wave::fader_wave_if_t::fader_wave_if_t (
                    algo comm t iac,
                    const char *,
                    const char * )
5.90.2 Member Function Documentation
5.90.2.1 mha_wave_t * fader_wave::fader_wave_if_t::process (
                    mha_wave_t * s )
5.90.2.2 void fader_wave::fader_wave_if_t::prepare (
                    mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin_t < runtime_cfg_t > (p. 685).
5.90.2.3 void fader_wave::fader_wave_if_t::release (
                    void ) [virtual]
Reimplemented from MHAPlugin::plugin_t< runtime_cfg_t > (p. 686).
5.90.2.4 void fader_wave::fader_wave_if_t::set_level() [private]
5.90.3 Member Data Documentation
5.90.3.1 MHAParser::vfloat_t fader_wave::fader_wave_if_t::gain [private]
5.90.3.2 MHAParser::float t fader_wave::fader_wave_if_t::ramplen [private]
5.90.3.3 MHAEvents::patchbay t<fader wave if t> fader_wave::fader_wave_if_t::patchbay
         [private]
5.90.3.4 bool fader_wave::fader_wave_if_t::prepared [private]
```

The documentation for this class was generated from the following file:

fader_wave.cpp

5.91 fader_wave::level_adapt_t Class Reference

Inheritance diagram for fader_wave::level_adapt_t:

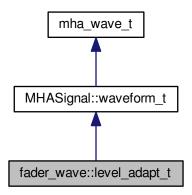

Public Member Functions

- level_adapt_t (mhaconfig_t cf, mha_real_t adapt_len, std::vector< float > l_new_←
 , std::vector< float > l_old_)
- void update_frame ()
- std::vector< float > get_level () const
- bool can_update () const

Private Attributes

- unsigned int ilen
- unsigned int pos
- MHAWindow::fun_t wnd
- std::vector< float > I new
- std::vector< float > I_old

Additional Inherited Members

5.91.1 Constructor & Destructor Documentation

5.91.2 Member Function Documentation


- 5.91.2.1 void fader_wave::level_adapt_t::update_frame ()
- 5.91.2.2 std::vector<float> fader_wave::level_adapt_t::get_level() const [inline]
- 5.91.2.3 bool fader_wave::level_adapt_t::can_update() const [inline]
- 5.91.3 Member Data Documentation
- 5.91.3.1 unsigned int fader_wave::level_adapt_t::ilen [private]
- **5.91.3.2 unsigned int fader_wave::level_adapt_t::pos** [private]
- 5.91.3.3 MHAWindow::fun_t fader_wave::level_adapt_t::wnd [private]
- **5.91.3.4** std::vector<float> fader_wave::level_adapt_t::l_new [private]
- **5.91.3.5** std::vector<float> fader_wave::level_adapt_t::l_old [private]

The documentation for this class was generated from the following file:

fader_wave.cpp

5.92 fftfilterbank::fftfb_interface_t Class Reference

Inheritance diagram for fftfilterbank::fftfb_interface_t:

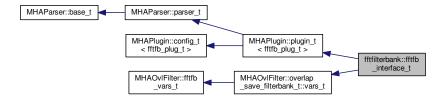

Public Member Functions

- fftfb_interface_t (const algo_comm_t &ac, const std::string &th, const std::string &al)

 Default values are set and MHA configuration variables registered into the parser.
- void prepare (mhaconfig_t &)
 Prepare all variables for processing.
- void release ()
- mha_spec_t * process (mha_spec_t *)
- mha_wave_t * process (mha_wave_t *)

Private Member Functions

void update_cfg ()

Private Attributes

- MHAParser::bool_t return_imag
- MHAEvents::patchbay_t< fftfb_interface_t > patchbay
- MHA AC::int t nchannels
- std::string algo
- bool prepared
- unsigned int nbands

Additional Inherited Members

5.92.1 Constructor & Destructor Documentation

Default values are set and MHA configuration variables registered into the parser.

Parameters

ac	algorithm communication handle
th	chain name
al	algorithm name

5.92.2 Member Function Documentation

Prepare all variables for processing.

In this function, all variables are initialised and the filter shapes for each band are calculated. The filter shapes W(f) are defined as

$$W(f) = W(T(S(f))) = W(x), \quad x = T(S(f)) = T(\hat{f}),$$

W(x) beeing a symmetric window function in the interval [-1,1] and S(f) the transformation from the linear scale to the given frequency scale (see functions in FreqScaleFun). The function $T(\hat{f})$ transforms the frequency range between the center frequencies $[\hat{f}_{k-1},\hat{f}_k]$ and $[\hat{f}_k,\hat{f}_{k+1}]$ into the interval [-1,0] and [0,1], respectively. This function is realised by the function linscale().

Parameters

```
tf | Channel configuration
```


```
Implements MHAPlugin::plugin_t < fftfb_plug_t > (p. 685).
5.92.2.2 void fftfilterbank::fftfb_interface_t::release (
                     void ) [virtual]
Reimplemented from MHAPlugin::plugin_t< fftfb_plug_t > (p. 686).
5.92.2.3 mha_spec_t * fftfilterbank::fftfb_interface_t::process (
                     mha\_spec\_t * s)
5.92.2.4 mha_wave_t * fftfilterbank::fftfb_interface_t::process (
                     mha_wave_t * s )
5.92.2.5 void fftfilterbank::fftfb_interface_t::update_cfg (
                     void ) [private]
5.92.3 Member Data Documentation
         MHAParser::bool tfftfilterbank::fftfb_interface_t::return_imag [private]
5.92.3.1
5.92.3.2 MHAEvents::patchbay t<fftfb interface t> fftfilterbank::fftfb_interface_t::patchbay
         [private]
5.92.3.3 MHA AC::int tftfilterbank::ftftb_interface_t::nchannels [private]
5.92.3.4 std::string fftfilterbank::fftfb_interface_t::algo [private]
5.92.3.5 bool fftfilterbank::fftfb_interface_t::prepared [private]
5.92.3.6
         unsigned int fftfilterbank::fftfb interface t::nbands [private]
```

The documentation for this class was generated from the following file:

fftfilterbank.cpp

5.93 fftfilterbank::fftfb_plug_t Class Reference

Inheritance diagram for fftfilterbank::fftfb_plug_t:

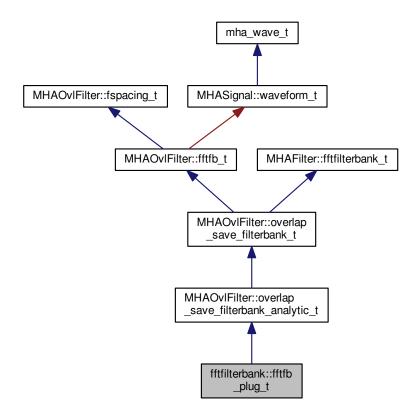

Public Member Functions

- fftfb_plug_t (MHAOvlFilter::overlap_save_filterbank_t::vars_t &, mhaconfig_← t chcfg, algo_comm_t ac, std::string alg, bool return_imag)
- mha_spec_t * process (mha_spec_t *)
- mha_wave_t * process (mha_wave_t *)
- void insert ()

Private Attributes

- MHAOvlFilter::fftfb_ac_info_t fb_acinfo
- MHASignal::spectrum_t s_out
- MHA_AC::waveform_t imag
- bool return_imag_

Additional Inherited Members


```
5.93.1 Constructor & Destructor Documentation
5.93.1.1 fftfilterbank::fftfb_plug_t::fftfb_plug_t (
                      MHAOvIFilter::overlap_save_filterbank_t::vars_t & vars,
                      mhaconfig_t chcfg,
                      algo comm t ac,
                      std::string alg,
                      bool return_imag )
5.93.2 Member Function Documentation
5.93.2.1 mha spec t * fftfilterbank::fftfb_plug_t::process (
                      mha spec t * s)
5.93.2.2 mha_wave_t * fftfilterbank::fftfb_plug_t::process (
                      mha wave t * s)
5.93.2.3 void fftfilterbank::fftfb_plug_t::insert ( )
5.93.3 Member Data Documentation
5.93.3.1 MHAOvlFilter::fftfb_ac_info_t fftfilterbank::fftfb_plug_t::fb_acinfo [private]
5.93.3.2 MHASignal::spectrum_t fftfilterbank::fftfb_plug_t::s_out [private]
5.93.3.3 MHA AC::waveform t fftfilterbank::fftfb plug t::imag [private]
5.93.3.4 bool fftfilterbank::fftfb_plug_t::return_imag_ [private]
```

The documentation for this class was generated from the following file:

fftfilterbank.cpp

5.94 frequency_translator_t Class Reference

Inheritance diagram for frequency_translator_t:

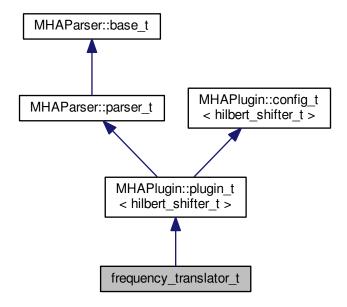

Public Member Functions

- frequency_translator_t (const algo_comm_t &, const std::string &, const std::string &)
- mha_spec_t * process (mha_spec_t *)
- void prepare (mhaconfig_t &)
- void release ()

Private Member Functions

• void update ()

Private Attributes

- MHAEvents::patchbay_t< frequency_translator_t > patchbay
- MHAParser::vfloat t df
- MHAParser::float_t fmin
- MHAParser::float_t fmax
- MHAParser::int_t irslen
- MHAParser::kw_t phasemode

```
Additional Inherited Members
```


```
5.94.1 Constructor & Destructor Documentation
5.94.1.1 frequency translator t::frequency translator t (
                    const algo comm t & iac,
                    const std::string & ith,
                    const std::string & ial )
5.94.2 Member Function Documentation
5.94.2.1 mha_spec_t * frequency_translator_t::process (
                    mha spec t * s)
5.94.2.2 void frequency translator t::prepare (
                    mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin_t< hilbert_shifter_t > (p. 685).
5.94.2.3 void frequency_translator_t::release (
                    void ) [virtual]
Reimplemented from MHAPlugin::plugin_t< hilbert_shifter_t > (p. 686).
5.94.2.4 void frequency_translator_t::update() [private]
5.94.3 Member Data Documentation
5.94.3.1 MHAEvents::patchbay_t<frequency_translator_t> frequency_translator_t::patchbay
         [private]
5.94.3.2 MHAParser::vfloat_t frequency_translator_t::df [private]
5.94.3.3 MHAParser::float_t frequency_translator_t::fmin [private]
5.94.3.4 MHAParser::float_t frequency_translator_t::fmax [private]
5.94.3.5 MHAParser::int_t frequency_translator_t::irslen [private]
5.94.3.6 MHAParser::kw_t frequency_translator_t::phasemode [private]
```

fshift hilbert.cpp

The documentation for this class was generated from the following file:

5.95 fw_t Class Reference

Inheritance diagram for fw_t:

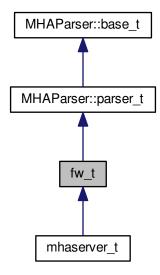

Public Member Functions

- fw_t ()
- ~fw_t ()
- bool exit_request () const

Protected Attributes

- int proc_error
- int io_error

Private Types

Private Member Functions

- void **prepare** () preparation for processing
- void **start** () start of processing
- void stop ()

stop/pause of processing

· void release ()

release of IO device

void quit ()

controlled quit

- void stopped (int, int)
- void started ()
- int process (mha_wave_t *, mha_wave_t **)
- void exec_fw_command ()
- void load proc lib ()
- void load_io_lib ()
- void fw_sleep_cmd ()
- void fw_until_cmd ()
- void get_input_signal_dimension ()
- void async_read ()
- void async_poll_msg ()
- void get_parserstate ()

Static Private Member Functions

- static void stopped (void *h, int proc_err, int io_err)
- static void started (void *h)
- static int process (void *h, mha_wave_t *sln, mha_wave_t **sOut)

Private Attributes

- fw vars t prepare vars
- · MHAParser::int mon t nchannels out
- MHAParser::string_t proc_name
- MHAParser::string_t io_name
- MHAParser::bool_t exit_on_stop
- MHAParser::int_t fw_sleep
- MHAParser::string_t fw_until
- MHAParser::kw_t fw_cmd
- MHAParser::string_mon_t parserstate
- MHAParser::string t errorlog
- MHAParser::string_t fatallog
- MHAParser::vstring_t plugins
- · MHAParser::vstring t plugin paths
- MHAParser::bool_t dump_mha
- MHAParser::string_t inst_name

A variable for naming MHA instances.

- MHAKernel::algo comm class t ac
- PluginLoader::mhapluginloader_t * proc_lib
- io_lib_t * io_lib

- mhaconfig_t cfin
- mhaconfig_t cfout
- state_t state
- bool b_exit_request
- MHAParser::string_mon_t proc_error_string
- MHAEvents::patchbay_t< fw_t > patchbay

Additional Inherited Members

5.95.1 Member Enumeration Documentation

```
5.95.1.1 enum fw_t::state_t [private]
```

Enumerator

fw_unprepared

fw_stopped

fw_starting

fw_running

fw_stopping

fw_exiting

5.95.2 Constructor & Destructor Documentation

```
5.95.2.1 fw_t::fw_t ( )
```

5.95.3 Member Function Documentation

```
5.95.3.1 boolfw_t::exit_request() const [inline]
```

preparation for processing

```
5.95.3.3 void fw_t::start() [private]
```

start of processing

```
5.95.3.4 void fw_t::stop() [private]
stop/pause of processing
5.95.3.5 void fw_t::release( ) [private]
release of IO device
5.95.3.6 void fw_t::quit() [private]
controlled quit
5.95.3.7 static void fw_t::stopped (
                    void * h.
                    int proc_err,
                    int io_err ) [inline], [static], [private]
5.95.3.8 static void fw_t::started (
                    void * h ) [inline],[static],[private]
5.95.3.9 static int fw_t::process (
                    void *h.
                    mha wave t * sln,
                    mha_wave_t ** sOut ) [inline], [static], [private]
5.95.3.10 void fw_t::stopped (
                     int proc_err,
                     int io_err ) [private]
5.95.3.11 void fw_t::started() [private]
5.95.3.12 int fw_t::process (
                     mha_wave_t * s_in,
                     mha_wave_t ** s_out ) [private]
5.95.3.13 void fw_t::exec_fw_command( ) [private]
5.95.3.14 void fw_t::load_proc_lib( ) [private]
5.95.3.15 void fw_t::load_io_lib( ) [private]
5.95.3.16 void fw_t::fw_sleep_cmd( ) [private]
5.95.3.17 void fw_t::fw_until_cmd( ) [private]
```

```
5.95.3.18 void fw_t::get_input_signal_dimension( ) [private]
5.95.3.19 void fw_t::async_read( ) [inline], [private]
5.95.3.20 void fw_t::async_poll_msg( ) [private]
5.95.3.21 void fw_t::get_parserstate( ) [private]
5.95.4 Member Data Documentation
5.95.4.1 fw_vars_t fw_t::prepare_vars [private]
5.95.4.2 MHAParser::int_mon_t fw_t::nchannels_out [private]
5.95.4.3 MHAParser::string_t fw_t::proc_name [private]
5.95.4.4 MHAParser::string tfw_t::io_name [private]
5.95.4.5 MHAParser::bool_t fw_t::exit_on_stop [private]
5.95.4.6 MHAParser::int_t fw_t::fw_sleep [private]
5.95.4.7 MHAParser::string_t fw_t::fw_until [private]
5.95.4.8 MHAParser::kw_t fw_t::fw_cmd [private]
5.95.4.9 MHAParser::string_mon_t fw_t::parserstate [private]
5.95.4.10 MHAParser::string_t fw_t::errorlog [private]
5.95.4.11 MHAParser::string_t fw_t::fatallog [private]
5.95.4.12 MHAParser::vstring tfw_t::plugins [private]
5.95.4.13 MHAParser::vstring_t fw_t::plugin_paths [private]
5.95.4.14 MHAParser::bool_t fw_t::dump_mha [private]
5.95.4.15 MHAParser::string_t fw_t::inst_name [private]
A variable for naming MHA instances.
```

```
5.95.4.16 MHAKernel::algo_comm_class_t fw_t::ac [private]
5.95.4.17 PluginLoader::mhapluginloader_t* fw_t::proc_lib [private]
5.95.4.18 io_lib_t* fw_t::io_lib [private]
5.95.4.19 mhaconfig_t fw_t::cfin [private]
5.95.4.20 mhaconfig_t fw_t::cfout [private]
5.95.4.21 state_t fw_t::state [private]
5.95.4.22 bool fw_t::b_exit_request [private]
5.95.4.23 int fw_t::proc_error [protected]
5.95.4.24 int fw_t::io_error [protected]
5.95.4.25 MHAParser::string_mon_t fw_t::proc_error_string [private]
5.95.4.26 MHAEvents::patchbay_t<fw_t> fw_t::patchbay [private]
```

The documentation for this class was generated from the following files:

- · mhafw lib.h
- mhafw_lib.cpp

5.96 fw_vars_t Class Reference

Public Member Functions

- fw_vars_t (MHAParser::parser_t &)
- void lock srate fragsize ()
- void lock_channels ()
- void unlock_srate_fragsize ()
- void unlock channels ()

Public Attributes

- MHAParser::int_t pinchannels
- MHAParser::int_t pfragmentsize
- MHAParser::float_t psrate

```
5.96.1 Constructor & Destructor Documentation
```

```
5.96.1.1 fw_vars_t::fw_vars_t (

MHAParser::parser_t & p)
```

5.96.2 Member Function Documentation

```
5.96.2.1 void fw_vars_t::lock_srate_fragsize ( )
```

```
5.96.2.2 void fw_vars_t::lock_channels ( )
```


- 5.96.2.4 void fw_vars_t::unlock_channels ()
- 5.96.3 Member Data Documentation
- 5.96.3.1 MHAParser::int_t fw_vars_t::pinchannels
- 5.96.3.2 MHAParser::int_t fw_vars_t::pfragmentsize
- 5.96.3.3 MHAParser::float_t fw_vars_t::psrate

The documentation for this class was generated from the following files:

- · mhafw_lib.h
- mhafw_lib.cpp

5.97 gain::gain_if_t Class Reference

Inheritance diagram for gain::gain_if_t:

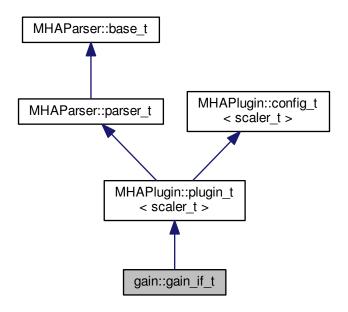

Public Member Functions

- gain_if_t (const algo_comm_t &, const std::string &, const std::string &)
- mha_wave_t * process (mha_wave_t *)
- mha_spec_t * process (mha_spec_t *)
- void prepare (mhaconfig_t &)
- void release ()

Private Member Functions

- void update_gain ()
- void update_bbgain ()
- void update_minmax ()

Private Attributes

- MHAEvents::patchbay_t< gain_if_t > patchbay
- MHAParser::vfloat_t gains
- MHAParser::float_t bbgain
- MHAParser::float_t vmin
- MHAParser::float_t vmax

Additional Inherited Members


```
5.97.1 Constructor & Destructor Documentation
5.97.1.1 gain::gain_if_t::gain_if_t (
                    const algo_comm_t & iac,
                    const std::string &,
                    const std::string & )
5.97.2 Member Function Documentation
5.97.2.1 mha_wave_t * gain::gain_if_t::process (
                    mha_wave_t * s )
5.97.2.2 mha_spec_t * gain::gain_if_t::process (
                    mha_spec_t * s )
5.97.2.3 void gain::gain_if_t::prepare (
                    mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin_t < scaler_t > (p. 685).
5.97.2.4 void gain::gain_if_t::release (
                    void ) [virtual]
Reimplemented from MHAPlugin::plugin t < scaler t > (p. 686).
5.97.2.5 void gain::gain_if_t::update_gain( ) [private]
5.97.2.6 void gain::gain_if_t::update_bbgain() [private]
5.97.2.7 void gain::gain_if_t::update_minmax() [private]
5.97.3 Member Data Documentation
        MHAEvents::patchbay_t<gain_if_t> gain::gain_if_t::patchbay [private]
5.97.3.2 MHAParser::vfloat_t gain::gain_if_t::gains [private]
5.97.3.3 MHAParser::float_t gain::gain_if_t::bbgain [private]
5.97.3.4 MHAParser::float_t gain::gain_if_t::vmin [private]
5.97.3.5 MHAParser::float_t gain::gain_if_t::vmax [private]
```

The documentation for this class was generated from the following file:

gain.cpp

5.98 gain::scaler_t Class Reference

Inheritance diagram for gain::scaler_t:

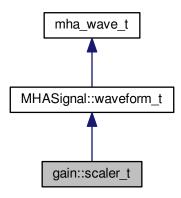

Public Member Functions

• scaler_t (const unsigned int &channels, const MHAParser::vfloat_t &gains)

Additional Inherited Members

5.98.1 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

· gain.cpp

5.99 hanning_ramps_t Class Reference

Public Member Functions

- hanning_ramps_t (unsigned int, unsigned int)
- ∼hanning_ramps_t ()
- void operator() (MHASignal::waveform_t &)

Private Attributes

```
• unsigned int len_a
```

```
• unsigned int len_b
```

```
mha_real_t * ramp_a
```

5.99.1 Constructor & Destructor Documentation

5.99.1.2 hanning_ramps_t::
$$\sim$$
hanning_ramps_t (void)

5.99.2 Member Function Documentation

```
5.99.2.1 void hanning_ramps_t::operator() (

MHASignal::waveform_t & b)
```

5.99.3 Member Data Documentation

```
5.99.3.1 unsigned int hanning_ramps_t::len_a [private]
```


```
5.99.3.2 unsigned int hanning_ramps_t::len_b [private]
```

The documentation for this class was generated from the following file:

spec2wave.cpp

5.100 hilbert_shifter_t Class Reference

Inheritance diagram for hilbert_shifter_t:

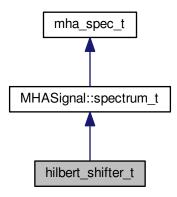

Public Member Functions

- hilbert_shifter_t (unsigned int fftlen, unsigned int channels, mha_real_t srate, unsigned int kmin, unsigned int kmax, std::vector< mha_real_t > dphi, unsigned int frameshift, unsigned int maxirslen, unsigned int phasemode)
- ∼hilbert_shifter_t ()
- void process (mha_spec_t *)

Private Attributes

- MHASignal::spectrum_t fullspec
- MHASignal::spectrum_t analytic
- MHASignal::waveform_t shifted
- MHASignal::spectrum_t mixw_shift
- MHASignal::spectrum_t mixw_ref
- fftw_plan plan_spec2analytic
- · mha fft t mhafft
- MHASignal::waveform_t phi
- MHASignal::waveform_t dphi
- unsigned int kmin
- unsigned int kmax
- unsigned int frameshift

Additional Inherited Members


```
5.100.1 Constructor & Destructor Documentation
5.100.1.1 hilbert_shifter_t::hilbert_shifter_t (
                      unsigned int fftlen,
                      unsigned int channels,
                      mha real t srate,
                      unsigned int kmin,
                      unsigned int kmax,
                      std::vector< mha_real_t > dphi,
                      unsigned int frameshift,
                      unsigned int maxirslen,
                      unsigned int phasemode )
5.100.1.2 hilbert_shifter_t::~hilbert_shifter_t()
5.100.2 Member Function Documentation
5.100.2.1 void hilbert_shifter_t::process (
                      mha spec t * s)
5.100.3 Member Data Documentation
5.100.3.1
         MHASignal::spectrum t hilbert_shifter_t::fullspec [private]
5.100.3.2 MHASignal::spectrum_t hilbert_shifter_t::analytic [private]
5.100.3.3 MHASignal::waveform_t hilbert_shifter_t::shifted [private]
5.100.3.4 MHASignal::spectrum_t hilbert_shifter_t::mixw_shift [private]
5.100.3.5 MHASignal::spectrum_t hilbert_shifter_t::mixw_ref [private]
5.100.3.6 fftw_plan hilbert_shifter_t::plan_spec2analytic [private]
5.100.3.7 mha fft t hilbert_shifter_t::mhafft [private]
5.100.3.8 MHASignal::waveform_t hilbert_shifter_t::phi [private]
5.100.3.9 MHASignal::waveform t hilbert_shifter_t::dphi [private]
5.100.3.10 unsigned int hilbert_shifter_t::kmin [private]
5.100.3.11 unsigned int hilbert_shifter_t::kmax [private]
5.100.3.12 unsigned int hilbert_shifter_t::frameshift [private]
```

The documentation for this class was generated from the following file:

fshift_hilbert.cpp

5.101 identity_t Class Reference

Inheritance diagram for identity_t:

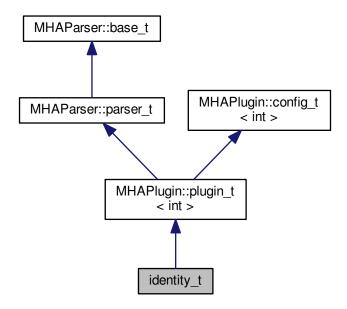

Public Member Functions

- identity_t (const algo_comm_t &, const std::string &, const std::string &)
- mha_wave_t * process (mha_wave_t *)
- mha_spec_t * process (mha_spec_t *)
- void prepare (mhaconfig_t &)
- void release ()

Additional Inherited Members

5.101.1 Constructor & Destructor Documentation

5.101.2 Member Function Documentation


Reimplemented from **MHAPlugin::plugin_t**< int > (p. 686).

The documentation for this class was generated from the following file:

· identity.cpp

5.102 iirfilter_t Class Reference

Inheritance diagram for iirfilter_t:

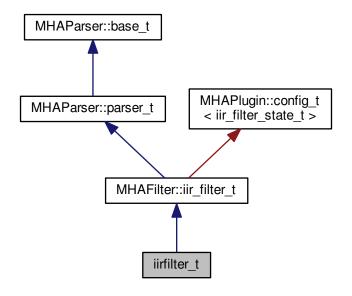

Public Member Functions

```
• iirfilter_t (const algo_comm_t &, const std::string &, const std::string &)
```

- void prepare_ (mhaconfig_t &)
- void release_()
- mha_wave_t * process (mha_wave_t *)

Additional Inherited Members

```
5.102.1 Constructor & Destructor Documentation
```

5.102.2 Member Function Documentation


The documentation for this class was generated from the following file:

· iirfilter.cpp

5.103 io_file_t Class Reference

File IO.

Inheritance diagram for io file t:

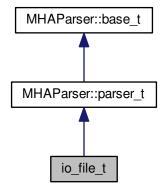

Public Member Functions

- io_file_t (int fragsize, float samplerate, IOProcessEvent_t proc_event, void *proc_←
 handle, IOStartedEvent_t start_event, void *start_handle, IOStoppedEvent_t stop←
 _event, void *stop_handle)
- ~io_file_t ()
- void prepare (int, int)

Allocate buffers, activate FILE client and install internal ports.

- void start ()
- void stop ()
- void release ()

Remove FILE client and deallocate internal ports and buffers.

Private Member Functions

- void stopped (int, int)
- void setlock (bool locked)

lock or unlock all parser variables.

Private Attributes

- int fragsize
- · float samplerate
- int nchannels_in
- int nchannels_file_in
- int nchannels out
- IOProcessEvent_t proc_event
- void * proc handle
- IOStartedEvent_t start_event
- void * start_handle
- IOStoppedEvent t stop event
- void * stop_handle
- MHAParser::string_t filename_input
- MHAParser::string_t filename_output
- MHAParser::kw_t output_sample_format
- MHAParser::int_t startsample
- MHAParser::int_t length
- MHAParser::bool t strict channel match
- MHAParser::bool_t strict_srate_match
- MHASignal::waveform t * s in
- MHASignal::waveform_t * s_file_in
- mha_wave_t * s_out
- bool b prepared
- SNDFILE * sf in
- SNDFILE * sf out
- · SF INFO sfinf in
- SF_INFO sfinf_out
- sf_count_t total_read

```
Additional Inherited Members
```

```
5.103.1 Detailed Description
File IO.
5.103.2 Constructor & Destructor Documentation
5.103.2.1 io_file_t::io_file_t (
                        int fragsize,
                        float samplerate,
                        IOProcessEvent_t proc_event,
                        void * proc_handle,
                        IOStartedEvent_t start_event,
                        void * start_handle,
                        IOStoppedEvent_t stop_event,
                        void * stop handle )
5.103.2.2 io_file_t::~io_file_t( )
5.103.3 Member Function Documentation
5.103.3.1 void io_file_t::prepare (
                        int nch in,
                        int nch_out )
Allocate buffers, activate FILE client and install internal ports.
5.103.3.2 void io_file_t::start ( )
5.103.3.3 void io_file_t::stop ( )
5.103.3.4 void io_file_t::release (
                        void )
Remove FILE client and deallocate internal ports and buffers.
5.103.3.5 void io_file_t::stopped (
                        int proc_err,
                        int io_err ) [private]
5.103.3.6 void io_file_t::setlock (
                        bool locked ) [private]
```

lock or unlock all parser variables.

Used in prepare/release.

Parameters

locked When true, locks. When false, unlocks.

```
5.103.4 Member Data Documentation
5.103.4.1 int io_file_t::fragsize [private]
5.103.4.2 float io_file_t::samplerate [private]
5.103.4.3 int io_file_t::nchannels_in [private]
5.103.4.4 int io_file_t::nchannels_file_in [private]
5.103.4.5 int io_file_t::nchannels_out [private]
5.103.4.6 IOProcessEvent tio_file_t::proc_event [private]
5.103.4.7 void*io_file_t::proc_handle [private]
5.103.4.8 IOStartedEvent_t io_file_t::start_event [private]
5.103.4.9 void* io_file_t::start_handle [private]
5.103.4.10 IOStoppedEvent_t io_file_t::stop_event [private]
5.103.4.11 void* io_file_t::stop_handle [private]
5.103.4.12 MHAParser::string_t io_file_t::filename_input [private]
5.103.4.13 MHAParser::string_t io_file_t::filename_output [private]
5.103.4.14 MHAParser::kw_t io_file_t::output_sample_format [private]
5.103.4.15 MHAParser::int_t io_file_t::startsample [private]
5.103.4.16 MHAParser::int_t io_file_t::length [private]
5.103.4.17 MHAParser::bool_t io_file_t::strict_channel_match [private]
5.103.4.18 MHAParser::bool tio_file_t::strict_srate_match [private]
```

```
5.103.4.19 MHASignal::waveform_t*io_file_t::s_in [private]
5.103.4.20 MHASignal::waveform_t*io_file_t::s_file_in [private]
5.103.4.21 mha_wave_t*io_file_t::s_out [private]
5.103.4.22 bool io_file_t::b_prepared [private]
5.103.4.23 SNDFILE*io_file_t::sf_in [private]
5.103.4.24 SNDFILE*io_file_t::sf_out [private]
5.103.4.25 SF_INFO io_file_t::sfinf_in [private]
5.103.4.26 SF_INFO io_file_t::sfinf_out [private]
5.103.4.27 sf_count_t io_file_t::total_read [private]
```


The documentation for this class was generated from the following file:

MHAIOFile.cpp

5.104 io_lib_t Class Reference

Class for loading MHA sound IO module.

Inheritance diagram for io_lib_t:

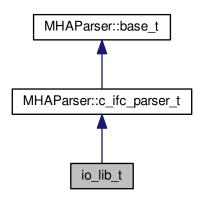

Public Member Functions

io_lib_t (int fragsize, float samplerate, IOProcessEvent_t proc_event, void *proc_←
handle, IOStartedEvent_t start_event, void *start_handle, IOStoppedEvent_t stop_←
event, void *stop_handle, std::string libname)

load and initialize MHA sound io module.

• ~io_lib_t ()

Deinitialize and unload this MHA sound io module.

void prepare (unsigned int inch, unsigned int outch)

Prepare the sound io module.

• void start ()

Tell the sound io module to start sound processing.

- void stop ()
- void release ()
- std::string lib_str_error (int err)

Protected Member Functions

void test_error ()

Protected Attributes

- int lib_err
- · dynamiclib_t lib_handle
- void * lib_data
- IOInit_t IOInit_cb
- IOPrepare_t IOPrepare_cb
- · IOStart t IOStart cb
- IOStop_t IOStop_cb
- IORelease_t IORelease_cb
- IOSetVar_t IOSetVar_cb
- IOStrError_t IOStrError_cb
- IODestroy_t IODestroy_cb

Additional Inherited Members

5.104.1 Detailed Description

Class for loading MHA sound IO module.

5.104.2 Constructor & Destructor Documentation

load and initialize MHA sound io module.

```
5.104.2.2 io_lib_t::~io_lib_t ( )
```

Deinitialize and unload this MHA sound io module.

5.104.3 Member Function Documentation

Prepare the sound io module.

After preparation, the sound io module may start the sound processing at any time (external trigger). When the sound processing is started, the sound io module will call the start_event callback.

Parameters

inch	number of input channels
outch	number of output channels

```
5.104.3.2 void io_lib_t::start ( )
```

Tell the sound io module to start sound processing.

Some io modules need this, for others that wait for external events this method might do nothing.

```
5.104.3.3 void io_lib_t::stop()
5.104.3.4 void io_lib_t::release ( )
5.104.3.5 std::string io_lib_t::lib_str_error (
                     int err )
5.104.3.6 void io_lib_t::test_error() [protected]
5.104.4 Member Data Documentation
5.104.4.1 int io_lib_t::lib_err [protected]
5.104.4.2 dynamiclib tio_lib_t::lib_handle [protected]
5.104.4.3 void* io_lib_t::lib_data [protected]
5.104.4.4 IOInit_t io_lib_t::IOInit_cb [protected]
5.104.4.5 IOPrepare_t io_lib_t::IOPrepare_cb [protected]
5.104.4.6 IOStart_t io_lib_t::IOStart_cb [protected]
5.104.4.7 IOStop_t io_lib_t::IOStop_cb [protected]
5.104.4.8 IORelease_t io_lib_t::IORelease_cb [protected]
5.104.4.9 IOSetVar_t io_lib_t::IOSetVar_cb [protected]
5.104.4.10 IOStrError_t io_lib_t::IOStrError_cb [protected]
5.104.4.11 IODestroy_t io_lib_t::IODestroy_cb [protected]
```


The documentation for this class was generated from the following files:

- · mhafw_lib.h
- mhafw_lib.cpp

5.105 io_parser_t Class Reference

Main class for Parser IO.

Inheritance diagram for io_parser_t:

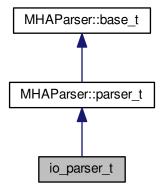

Public Member Functions

- io_parser_t (unsigned int fragsize, IOProcessEvent_t proc_event, void *proc_handle, IOStartedEvent_t start_event, void *start_handle, IOStoppedEvent_t stop_event, void *stop_handle)
- ~io_parser_t ()
- void **prepare** (int, int)

Allocate buffers, activate JACK client and install internal ports.

- void start ()
- void stop ()
- void release ()

Remove JACK client and deallocate internal ports and buffers.

Private Member Functions

- void stopped (int, int)
- void started ()
- void process_frame ()

Private Attributes

```
· unsigned int fragsize
```

- unsigned int nchannels_in
- unsigned int nchannels_out
- IOProcessEvent_t proc_event
- void * proc handle
- IOStartedEvent_t start_event
- void * start_handle
- IOStoppedEvent_t stop_event
- void * stop handle
- MHAParser::mfloat_t input
- MHAParser::mfloat mon t output
- MHASignal::waveform_t * s_in
- mha_wave_t * s_out
- bool b_fw_started
- bool b_stopped
- bool b_prepared
- bool b_starting
- MHAEvents::patchbay_t< io_parser_t > patchbay

Additional Inherited Members

```
5.105.1 Detailed Description
```

Main class for Parser IO.

```
5.105.2 Constructor & Destructor Documentation
```

```
5.105.2.2 io_parser_t::~io_parser_t ( )
```

5.105.3 Member Function Documentation

Allocate buffers, activate JACK client and install internal ports.

```
5.105.3.2 void io_parser_t::start ( )
5.105.3.3 void io_parser_t::stop ( )
5.105.3.4 void io_parser_t::release (
                     void )
Remove JACK client and deallocate internal ports and buffers.
5.105.3.5 void io parser t::stopped (
                     int proc_err,
                     int io_err ) [private]
5.105.3.6 void io_parser_t::started( ) [private]
5.105.3.7
         void io_parser_t::process_frame( ) [private]
5.105.4 Member Data Documentation
5.105.4.1
         unsigned int io parser t::fragsize [private]
5.105.4.2 unsigned int io_parser_t::nchannels_in [private]
5.105.4.3 unsigned int io_parser_t::nchannels_out [private]
5.105.4.4 IOProcessEvent_tio_parser_t::proc_event [private]
5.105.4.5 void*io_parser_t::proc_handle [private]
5.105.4.6 IOStartedEvent_t io_parser_t::start_event [private]
5.105.4.7 void* io_parser_t::start_handle [private]
5.105.4.8 IOStoppedEvent_t io_parser_t::stop_event [private]
5.105.4.9 void* io_parser_t::stop_handle [private]
5.105.4.10 MHAParser::mfloat_t io_parser_t::input [private]
5.105.4.11 MHAParser::mfloat_mon_t io_parser_t::output [private]
5.105.4.12 MHASignal::waveform_t*io_parser_t::s_in [private]
5.105.4.13 mha_wave_t* io_parser_t::s_out [private]
5.105.4.14 bool io_parser_t::b_fw_started [private]
5.105.4.15 boolio_parser_t::b_stopped [private]
5.105.4.16 bool io parser t::b prepared [private]
5.105.4.17 bool io parser t::b starting [private]
5.105.4.18 MHAEvents::patchbay_t<io_parser_t>io_parser_t::patchbay [private]
```

The documentation for this class was generated from the following file:

MHAIOParser.cpp

5.106 io_tcp_fwcb_t Class Reference

TCP sound-io library's interface to the framework callbacks.

Public Member Functions

io_tcp_fwcb_t (IOProcessEvent_t proc_event, void *proc_handle, IOStartedEvent
 _t start_event, void *start_handle, IOStoppedEvent_t stop_event, void *stop_
 handle)

Constructor stores framework handles and initializes error numbers to 0.

virtual ~io_tcp_fwcb_t ()

Do-nothing destructor.

virtual void start ()

Call the framework's start callback.

virtual int process (mha_wave_t *sln, mha_wave_t *&sOut)

Call the frameworks processing callback.

virtual void set_errnos (int proc_err, int io_err)

Save error numbers to use during.

• virtual void stop ()

Call the frameworks stop callback.

Private Attributes

IOProcessEvent_t proc_event

Pointer to signal processing callback function.

IOStartedEvent t start event

Pointer to start notification callback function.

IOStoppedEvent_t stop_event

Pointer to stop notification callback function.

void * proc_handle

Handles belonging to framework.

- void * start_handle
- void * stop handle
- int proc_err

Errors from the processing callback and from the TCP IO itself are stored here before closing Network handles.

int io_err

5.106.1 Detailed Description

TCP sound-io library's interface to the framework callbacks.

5.106.2 Constructor & Destructor Documentation

Constructor stores framework handles and initializes error numbers to 0.

```
5.106.2.2 virtual io_tcp_fwcb_t::~io_tcp_fwcb_t() [inline], [virtual]
```

Do-nothing destructor.

```
5.106.3 Member Function Documentation
```

```
5.106.3.1 void io_tcp_fwcb_t::start( ) [virtual]
```

Call the framework's start callback.

Call the frameworks processing callback.

Parameters

sIn	The input sound data just received from TCP.	
sOut	A pointer to output sound data. Will point to the output sound data storage when the callback finishes.	

Returns

Status, an error number from the signal processing callback. If this is != 0, then the connection should be closed.

Save error numbers to use during.

See also

```
stop (p. 341)
```

Parameters

```
proc_err | The error number from the
```

See also

```
process (p. 340) callback.
```

Parameters

io err	The error number from the io library itself.
.0_0	in the circi named nom the lement in the second

```
5.106.3.4 void io_tcp_fwcb_t::stop( ) [virtual]
```

Call the frameworks stop callback.

Uses the error numbers set previously with

See also

```
set_errnos (p. 340).
```

5.106.4 Member Data Documentation

```
5.106.4.1 IOProcessEvent_t io_tcp_fwcb_t::proc_event [private]
```

Pointer to signal processing callback function.

```
5.106.4.2 IOStartedEvent_t io_tcp_fwcb_t::start_event [private]
```

Pointer to start notification callback function.

Called when a new TCP connection is established or the user issues the start command while there is a connection.

```
5.106.4.3 IOStoppedEvent_tio_tcp_fwcb_t::stop_event [private]
```

Pointer to stop notification callback function.

Called when the connection is closed.

```
5.106.4.4 void* io_tcp_fwcb_t::proc_handle [private]
```

Handles belonging to framework.

```
5.106.4.5 void * io_tcp_fwcb_t::start_handle [private]
```

Errors from the processing callback and from the TCP IO itself are stored here before closing Network handles.

MHAIOTCP is notified by the server when the connection has been taken down, and calls

See also

stop (p. 341) from that callback. Within **stop** (p. 341), these error numbers are read again and transmitted to the framework.


The documentation for this class was generated from the following file:

MHAIOTCP.cpp

5.107 io_tcp_parser_t Class Reference

The parser interface of the IOTCP library.

Inheritance diagram for io_tcp_parser_t:

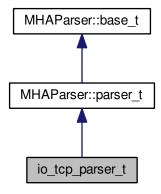

Public Member Functions

virtual const std::string & get_local_address () const

Read parser variable local_address, this is the address of the network interface that should listen for incoming connections.

virtual unsigned short get_local_port () const

Read parser variable local_port, this is the TCP port that should be used for incoming connections

virtual void set local port (unsigned short port)

Set parser variable local_port.

virtual bool get_server_port_open () const

Return the status of the server port as it is known to the parser.

virtual void set_server_port_open (bool open)

Inform the parser of the current status of the server socket.

• virtual bool get_connected () const

Return the parser's knowledge concerning wether there currently exists an established sound data TCP connection or not.

virtual void set_connected (bool connected)

Inform the parser about the existance of a sound data connection.

virtual void set_new_peer (unsigned short port, const std::string &host)

Set parser monitor variables peer_port and peer_address, and calls set_connected(true).

io_tcp_parser_t ()

Constructor initializes parser variables.

virtual ~io_tcp_parser_t ()

Do-nothing destructor.

virtual void debug (const std::string &message)

Private Attributes

MHAParser::string t local address

Lets the user set the local network interface to listen on.

MHAParser::int_t local_port

Lets the user choose the local tcp port to listen on.

MHAParser::int_mon_t server_port_open

Indicates wether the TCP server socket is currently open.

MHAParser::int_mon_t connected

Indicator if there currently is a sound data connection over TCP.

MHAParser::string_mon_t peer_address

Display the ip address of the currently connected sound data client.

MHAParser::int_mon_t peer_port

Display the tcp port used by the current sound data client.

MHAParser::string_t debug_filename

filename to write debugging info to (if non-empty)

FILE * debug file

file handle to write debugging info to

Additional Inherited Members

5.107.1 Detailed Description

The parser interface of the IOTCP library.

5.107.2 Constructor & Destructor Documentation

```
5.107.2.1 io_tcp_parser_t::io_tcp_parser_t()
```

Constructor initializes parser variables.

```
5.107.2.2 virtual io_tcp_parser_t::~io_tcp_parser_t() [inline], [virtual]
```

Do-nothing destructor.

5.107.3 Member Function Documentation

```
5.107.3.1 virtual const std::string& io_tcp_parser_t::get_local_address ( ) const [inline], [virtual]
```

Read parser variable local_address, this is the address of the network interface that should listen for incoming connections.

Returns

A string containing the address of the local interface as it was set by the user.

```
5.107.3.2 unsigned short io_tcp_parser_t::get_local_port( ) const [virtual]
```

Read parser variable local_port, this is the TCP port that should be used for incoming connections.

Returns

The local tcp port to listen on as it was chosen by the user. The port number is between MIN_TCP_PORT and MAX_TCP_PORT.

Set parser variable local port.

This is needed when it was set to 0 before: In this case, the OS chooses a free port for the TCP server socket, and the port that it chose has to be published to the user via the parser interface.

Parameters

port	The TCP port number that is currently used. In the range [MIN_TCP_PORT,
	MAX_TCP_PORT], excluding 0.

Precondition

```
get_local_port() (p. 344) currently returns 0.
```

```
5.107.3.4 boolio_tcp_parser_t::get_server_port_open() const [virtual]
```

Return the status of the server port as it is known to the parser.

Returns

false after initialization, or the value most recently set via

See also

```
set_server_port_open (p. 345).
```

Inform the parser of the current status of the server socket.

Parameters

open Indicates wether the server socket has just been opened or closed.

Precondition

open may only have the value true if **get_server_port_open()** (p. 345) currently returns false.

Postcondition

See also

get_server_port_open (p. 345) returns the value (p. 52) of open.

```
5.107.3.6 bool io_tcp_parser_t::get_connected( ) const [virtual]
```

Return the parser's knowledge concerning wether there currently exists an established sound data TCP connection or not.

Returns

false after initialization, or the value most recently set via

See also

```
set connected (p. 346).
```

Inform the parser about the existance of a sound data connection.

Parameters

```
connected Indicates wether there currently is a connection or not.
```

Precondition

connected must not have the same value that is currently returned by

See also

```
get_connected (p. 346).
```

Postcondition

See also

```
get_connected (p. 346) returns the value (p. 52) of open.
```

Set parser monitor variables peer_port and peer_address, and calls set_connected(true).

This method should be called when a new connection is established.

Parameters

port	The TCP port number used by the peer.
host	The Internet host where the peer is located.

Precondition

See also

get_connected (p. 346) currently returns false.

Postcondition

See also

get_connected (p. 346) returns true.

5.107.4 Member Data Documentation

5.107.4.1 MHAParser::string_t io_tcp_parser_t::local_address [private]

Lets the user set the local network interface to listen on.

5.107.4.2 MHAParser::int_t io_tcp_parser_t::local_port [private]

Lets the user choose the local tcp port to listen on.

5.107.4.3 MHAParser::int_mon_t io_tcp_parser_t::server_port_open [private]

Indicates wether the TCP server socket is currently open.

5.107.4.4 MHAParser::int_mon_t io_tcp_parser_t::connected [private]

Indicator if there currently is a sound data connection over TCP.

5.107.4.5 MHAParser::string_mon_t io_tcp_parser_t::peer_address [private]

Display the ip address of the currently connected sound data client.

5.107.4.6 MHAParser::int_mon_t io_tcp_parser_t::peer_port [private]

Display the tcp port used by the current sound data client.

5.107.4.7 MHAParser::string_t io_tcp_parser_t::debug_filename [private]

filename to write debugging info to (if non-empty)

5.107.4.8 FILE* io_tcp_parser_t::debug_file [private]

file handle to write debugging info to

The documentation for this class was generated from the following file:

MHAIOTCP.cpp

5.108 io_tcp_sound_t Class Reference

Sound data handling of io top library.

Classes

union float union

This union helps in conversion of floats from host byte order to network byte order and back again.

Public Member Functions

• io_tcp_sound_t (int fragsize, float samplerate)

Initialize sound data handling.

virtual ~io_tcp_sound_t ()

Do-nothing destructor.

virtual void prepare (int num_inchannels, int num_outchannels)

Called during prepare, sets number of audio channels and allocates sound data storage.

virtual void release ()

Called during release.

virtual int chunkbytes_in () const

Number of bytes that constitute one input sound chunk.

virtual std::string header () const

Create the tcp sound header lines.

virtual mha_wave_t * ntoh (const std::string &data)

Copy data received from tcp into mha_wave_t (p. 455) structure.

virtual std::string hton (const mha_wave_t *s_out)

Copy sound data from the output sound structure to a string.

Static Private Member Functions

static void check_sound_data_type ()

Check if mha_real_t is a usable 32-bit floating point type.

Private Attributes

• int fragsize

Number of sound samples in each channel expected and returned from processing callback.

float samplerate

Sampling rate.

• int num_inchannels

Number of input channels.

- int num outchannels
- MHASignal::waveform_t * s_in

Storage for input signal.

5.108.1 Detailed Description

Sound data handling of io tcp library.

5.108.2 Constructor & Destructor Documentation

Initialize sound data handling.

Checks sound data type by calling

See also

```
check_sound_data_type (p. 350).
```

Parameters

fragsize	Number of sound samples in each channel expected and returned from
	processing callback.
samplerate	Number of samples per second in each channel.

```
5.108.2.2 virtual io_tcp_sound_t::~io_tcp_sound_t( ) [inline], [virtual]
```

Do-nothing destructor.

5.108.3 Member Function Documentation

```
5.108.3.1 void io_tcp_sound_t::check_sound_data_type( ) [static], [private]
```

Check if mha_real_t is a usable 32-bit floating point type.

Exceptions

```
MHA_Error (p. 406) if mha_real_t is not compatible to 32-bit float.
```

Called during prepare, sets number of audio channels and allocates sound data storage.

Parameters

num_inchannels	Number of input audio channels.	
num_outchannels	Number of output audio channels.	

Called during release.

Deletes sound data storage.

```
5.108.3.4 int io_tcp_sound_t::chunkbytes_in() const [virtual]
```

Number of bytes that constitute one input sound chunk.

Returns

Number of bytes to read from TCP connection before invoking signal processing.

```
5.108.3.5 std::string io_tcp_sound_t::header( ) const [virtual]
```

Create the tcp sound header lines.

Copy data received from tcp into **mha_wave_t** (p. 455) structure.

Doing network-to-host byte order swapping in the process.

Parameters

```
data One chunk (
```

See also

chunkbytes_in (p. 350)) of sound data to process.

Returns

Pointer to the sound data storage.

Copy sound data from the output sound structure to a string.

Doing host-to-network byte order swapping while at it.

Parameters

```
s_out Pointer to the storage of the sound to put out.
```

Returns

The sound data in network byte order.

5.108.4 Member Data Documentation

```
5.108.4.1 int io_tcp_sound_t::fragsize [private]
```

Number of sound samples in each channel expected and returned from processing callback.

```
5.108.4.2 float io_tcp_sound_t::samplerate [private]
```

Sampling rate.

Number of samples per second in each channel.

```
5.108.4.3 int io_tcp_sound_t::num_inchannels [private]
```

Number of input channels.

Number of channels expected from and returned by signal processing callback.

```
5.108.4.4 int io_tcp_sound_t::num_outchannels [private]
```

```
5.108.4.5 MHASignal::waveform t*io_tcp_sound_t::s_in [private]
```

Storage for input signal.

The documentation for this class was generated from the following file:

MHAIOTCP.cpp

```
5.109 io_tcp_sound_t::float_union Union Reference
```

This union helps in conversion of floats from host byte order to network byte order and back again.

Public Attributes

- float f
- unsigned int i
- char **c** [4]

5.109.1 Detailed Description

This union helps in conversion of floats from host byte order to network byte order and back again.

```
5.109.2 Member Data Documentation
```

```
5.109.2.1 float io tcp sound t::float union::f
```

5.109.2.2 unsigned int io_tcp_sound_t::float_union::i

5.109.2.3 char io_tcp_sound_t::float_union::c[4]

The documentation for this union was generated from the following file:

MHAIOTCP.cpp

5.110 io_tcp_t Class Reference

The tcp sound io library.

Public Member Functions

- io_tcp_t (int fragsize, float samplerate, IOProcessEvent_t proc_event, void *proc_←
 handle, IOStartedEvent_t start_event, void *start_handle, IOStoppedEvent_t stop_←
 event, void *stop_handle)
- void **prepare** (int num_inchannels, int num_outchannels)

Allocate server socket and start thread waiting for sound data exchange.

• void start ()

Call frameworks start callback if there is a sound data connection at the moment.

• void stop ()

Close the current connection if there is one.

• void release ()

Close the current connection and close the server socket.

virtual void accept_loop ()

IO thread executes this method.

virtual void connection_loop (MHA_TCP::Connection *c)

IO thread executes this method for each connection.

virtual void parse (const char *cmd, char *retval, unsigned int len)

Parser interface.

virtual ~io_tcp_t ()

Private Attributes

- io_tcp_parser_t parser
- io_tcp_sound_t sound
- · io_tcp_fwcb_t fwcb
- MHA_TCP::Server * server
- MHA_TCP::Thread * thread
- MHA TCP::Async Notify notify start
- MHA_TCP::Async_Notify_stop
- MHA_TCP::Async_Notify_release

5.110.1 Detailed Description

The tcp sound io library.

```
5.110.2 Constructor & Destructor Documentation
```

Allocate server socket and start thread waiting for sound data exchange.

prepare opens the tcp server socket and starts the io thread that listens for audio data on the tcp socket after doing some sanity checks

```
5.110.3.2 void io_tcp_t::start ( )
```

Call frameworks start callback if there is a sound data connection at the moment.

```
5.110.3.3 void io_tcp_t::stop ( )
```

Close the current connection if there is one.

stop IO thread

```
5.110.3.4 void io_tcp_t::release ( void )
```

Close the current connection and close the server socket.

Stop IO thread and close server socket.

```
5.110.3.5 void io_tcp_t::accept_loop( ) [virtual]
```

IO thread executes this method.

IO thread executes this method for each connection.

Parameters

c pointer to connection. connection_loop deletes connection before exiting.

Parser interface.

```
5.110.4 Member Data Documentation
```

```
5.110.4.1 io_tcp_parser_t io_tcp_t::parser [private]
```

```
5.110.4.2 io_tcp_sound_t io_tcp_t::sound [private]
```

```
5.110.4.3 io_tcp_fwcb_t io_tcp_t::fwcb [private]
```

```
5.110.4.4 MHA TCP::Server*io_tcp_t::server [private]
```

```
5.110.4.5 MHA_TCP::Thread*io_tcp_t::thread [private]
```

```
5.110.4.6 MHA_TCP::Async_Notify io_tcp_t::notify_start [private]
```

5.110.4.7 MHA_TCP::Async_Notify io_tcp_t::notify_stop [private]

5.110.4.8 MHA TCP::Async Notify io_tcp_t::notify_release [private]

The documentation for this class was generated from the following file:

MHAIOTCP.cpp

5.111 latex_doc_t Class Reference

Public Member Functions

- latex_doc_t (const std::string &plugname, const std::string &plugin_macro)
- std::string get_latex_doc ()
- std::string get_main_category ()
- std::vector< std::string > get_categories ()

Private Member Functions

- std::string strdom (mha_domain_t d)
- std::string get_ac (MHAKernel::algo_comm_class_t &ac, std::string txt)
- std::string parsername (std::string s)
- std::string get parser var (MHAParser::base t *p, std::string name)
- std::string **get_parser_tab** (**MHAParser::base_t** *p, std::string prefix)

Private Attributes

- std::string plugname
- std::string latex_plugname
- MHAKernel::algo_comm_class_t ac
- PluginLoader::mhapluginloader_t loader
- std::string plugin_macro


```
5.111.1 Constructor & Destructor Documentation
5.111.1.1 | latex_doc_t::latex_doc_t (
                       const std::string & plugname,
                       const std::string & plugin_macro )
5.111.2 Member Function Documentation
5.111.2.1 std::string latex doc t::get latex doc ( )
5.111.2.2 std::string latex_doc_t::get_main_category ( )
5.111.2.3 std::vector< std::string > latex_doc_t::get_categories ( )
5.111.2.4 std::string latex doc t::strdom (
                       mha_domain_t d ) [private]
5.111.2.5 std::string latex_doc_t::get_ac (
                       MHAKernel::algo_comm_class_t & ac,
                       std::string txt ) [private]
5.111.2.6 std::string latex doc t::parsername (
                       std::string s ) [private]
5.111.2.7 std::string latex_doc_t::get_parser_var (
                       MHAParser::base t * p,
                       std::string name ) [private]
```

The documentation for this class was generated from the following file:

5.111.3.5 std::string latex_doc_t::plugin_macro [private]

· generatemhaplugindoc.cpp

Inheritance diagram for lpc:

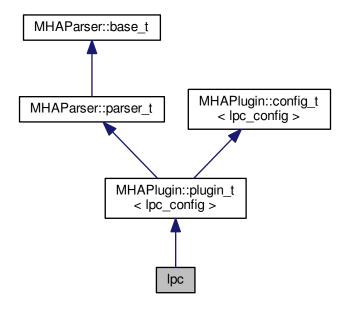

Public Member Functions

- **lpc** (**algo_comm_t** &ac, const std::string &chain_name, const std::string &algo_name)

 **Constructs our plugin.
- ~lpc ()
- mha_wave_t * process (mha_wave_t *)

Checks for the most recent configuration and defers processing to it.

void prepare (mhaconfig_t &)

Plugin preparation.

void release (void)

Private Member Functions

void update_cfg ()

Private Attributes

- std::string algo name
- MHAParser::int t lpc order
- MHAParser::int_t lpc_buffer_size
- MHAParser::bool t shift
- MHAParser::int_t comp_each_iter
- MHAParser::bool t norm
- MHAEvents::patchbay_t< lpc > patchbay

Additional Inherited Members

```
5.112.1 Constructor & Destructor Documentation
```

```
5.112.1.1 lpc::lpc (

algo_comm_t & ac,

const std::string & chain_name,

const std::string & algo name )
```

Constructs our plugin.

```
5.112.1.2 lpc::\simlpc ( )
```

5.112.2 Member Function Documentation

```
5.112.2.1 mha_wave_t * lpc::process (
mha_wave_t * signal )
```

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number of]
	channels, frames per block, sampling rate.	

```
Implements MHAPlugin::plugin_t< lpc_config > (p. 685).
5.112.2.3 void lpc::release (
                    void ) [inline],[virtual]
Reimplemented from MHAPlugin::plugin_t < lpc_config > (p. 686).
5.112.2.4 void lpc::update_cfg( ) [private]
5.112.3 Member Data Documentation
5.112.3.1 std::string lpc::algo_name [private]
5.112.3.2 MHAParser::int_t lpc::lpc_order [private]
5.112.3.3 MHAParser::int_t lpc::lpc_buffer_size [private]
5.112.3.4 MHAParser::bool tlpc::shift [private]
5.112.3.5 MHAParser::int_t lpc::comp_each_iter [private]
5.112.3.6 MHAParser::bool_t lpc::norm [private]
```


The documentation for this class was generated from the following files:

5.112.3.7 MHAEvents::patchbay_t<lpc> lpc::patchbay [private]

- lpc.h
- lpc.cpp

5.113 lpc_bl_predictor Class Reference

Inheritance diagram for lpc_bl_predictor:

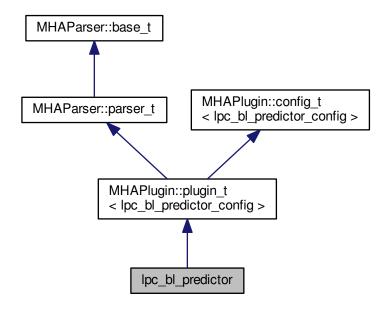

Public Member Functions

• **lpc_bl_predictor** (**algo_comm_t** &ac, const std::string &chain_name, const std::string &algo_name)

Constructs our plugin.

- ~lpc_bl_predictor ()
- mha_wave_t * process (mha_wave_t *)

Checks for the most recent configuration and defers processing to it.

void prepare (mhaconfig_t &)

Plugin preparation.

void release (void)

Public Attributes

- MHAParser::int_t lpc_order
- MHAParser::string_t name_kappa
- MHAParser::string_t name_lpc_f
- MHAParser::string_t name_lpc_b
- MHAParser::string_t name_f
- MHAParser::string_t name_b

Private Member Functions

• void update_cfg ()

Private Attributes

MHAEvents::patchbay_t< lpc_bl_predictor > patchbay

Additional Inherited Members

```
5.113.1 Constructor & Destructor Documentation
```

Constructs our plugin.

```
5.113.1.2 lpc_bl_predictor::~lpc_bl_predictor()
```

5.113.2 Member Function Documentation

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number of
	channels, frames per block, sampling rate.

Implements MHAPlugin::plugin_t< lpc_bl_predictor_config > (p. 685).

The documentation for this class was generated from the following files:

5.113.3.7 MHAEvents::patchbay_t<lpc_bl_predictor> lpc_bl_predictor::patchbay

- · lpc bl predictor.h
- lpc bl predictor.cpp

[private]

5.114 lpc_bl_predictor_config Class Reference

Public Member Functions

- lpc_bl_predictor_config (algo_comm_t &iac, const mhaconfig_t in_cfg, lpc_bl_← predictor *_lpc)
- ~lpc bl predictor config ()
- mha_wave_t * process (mha_wave_t *)

Private Attributes

```
· algo_comm_t ac

    MHA_AC::waveform_t f_est

    MHA_AC::waveform_t b_est

    MHASignal::waveform_t forward

    MHASignal::waveform_t backward

   • int lpc order
   std::string name_km
   std::string name_f
   std::string name_b
   mha_wave_t km
   mha_wave_t s_f

    mha wave ts b

5.114.1 Constructor & Destructor Documentation
5.114.1.1 lpc_bl_predictor_config::lpc_bl_predictor_config (
                     algo comm t & iac,
                     const mhaconfig_t in_cfg,
                     lpc_bl_predictor * _lpc )
5.114.1.2 lpc_bl_predictor_config::~lpc_bl_predictor_config( )
5.114.2 Member Function Documentation
5.114.2.1 mha wave t * lpc_bl_predictor_config::process (
                     mha wave t * wave )
5.114.3 Member Data Documentation
5.114.3.1 algo_comm_t lpc_bl_predictor_config::ac [private]
5.114.3.2 MHA_AC::waveform_t lpc_bl_predictor_config::f_est [private]
5.114.3.3 MHA_AC::waveform_t lpc_bl_predictor_config::b_est [private]
5.114.3.4 MHASignal::waveform t lpc_bl_predictor_config::forward [private]
5.114.3.5 MHASignal::waveform t lpc_bl_predictor_config::backward [private]
5.114.3.6 int lpc_bl_predictor_config::lpc_order [private]
5.114.3.7 std::string lpc_bl_predictor_config::name_km [private]
```


```
5.114.3.8 std::string lpc_bl_predictor_config::name_f [private]
5.114.3.9 std::string lpc_bl_predictor_config::name_b [private]
5.114.3.10 mha_wave_t lpc_bl_predictor_config::km [private]
5.114.3.11 mha_wave_t lpc_bl_predictor_config::s_f [private]
5.114.3.12 mha_wave_t lpc_bl_predictor_config::s_b [private]
```

The documentation for this class was generated from the following files:

- lpc_bl_predictor.h
- lpc_bl_predictor.cpp

5.115 lpc_burglattice Class Reference

Inheritance diagram for lpc_burglattice:

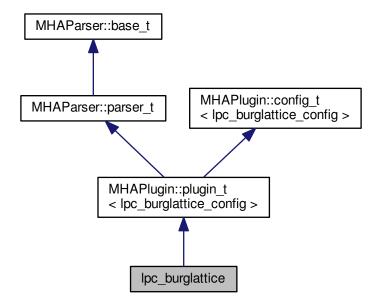

Public Member Functions

• **lpc_burglattice** (**algo_comm_t** &ac, const std::string &chain_name, const std::string &algo_name)

Constructs our plugin.

- ~lpc_burglattice ()
- mha_wave_t * process (mha_wave_t *)

Checks for the most recent configuration and defers processing to it.

void prepare (mhaconfig_t &)

Plugin preparation.

• void release (void)

Public Attributes

```
    MHAParser::int_t lpc_order
```

MHAParser::string_t name_kappa

MHAParser::string_t name_f

MHAParser::string_t name_b

MHAParser::float_t lambda

Private Member Functions

void update_cfg ()

Private Attributes

MHAEvents::patchbay_t< lpc_burglattice > patchbay

Additional Inherited Members

5.115.1 Constructor & Destructor Documentation

Constructs our plugin.

```
5.115.1.2 lpc_burglattice::~lpc_burglattice ( )
5.115.2 Member Function Documentation
5.115.2.1 mha_wave_t * lpc_burglattice::process ( mha_wave_t * signal )
```

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number of
	channels, frames per block, sampling rate.

Implements MHAPlugin::plugin_t< lpc_burglattice_config > (p. 685).

Reimplemented from MHAPlugin::plugin_t< lpc_burglattice_config > (p. 686).

```
5.115.2.4 void lpc_burglattice::update_cfg( ) [private]
```

5.115.3 Member Data Documentation

5.115.3.1 MHAParser::int_t lpc_burglattice::lpc_order

5.115.3.2 MHAParser::string_t lpc_burglattice::name_kappa

5.115.3.3 MHAParser::string_t lpc_burglattice::name_f

5.115.3.4 MHAParser::string t lpc_burglattice::name_b

5.115.3.5 MHAParser::float_t lpc_burglattice::lambda

5.115.3.6 MHAEvents::patchbay t<lpc burglattice>lpc_burglattice::patchbay [private]

The documentation for this class was generated from the following files:

- · lpc_burg-lattice.h
- lpc_burg-lattice.cpp

Public Member Functions

- lpc_burglattice_config (algo_comm_t &iac, const mhaconfig_t in_cfg, lpc_← burglattice *_lpc)
- ~lpc burglattice config ()
- mha_wave_t * process (mha_wave_t *)

Private Attributes

- algo_comm_t ac
- MHASignal::waveform_t forward
- MHASignal::waveform_t backward
- MHASignal::waveform_t kappa
- MHA_AC::waveform_t kappa_block
- MHASignal::waveform_t dm
- MHASignal::waveform_t nm
- mha_real_t lambda
- int lpc_order
- std::string name_f
- std::string name_b
- mha_wave_t s_f
- · mha wave ts b

5.116.1 Constructor & Destructor Documentation

- 5.116.1.2 lpc_burglattice_config::~lpc_burglattice_config ()
- 5.116.2 Member Function Documentation
- 5.116.3 Member Data Documentation
- **5.116.3.1 algo_comm_t lpc_burglattice_config::ac** [private]

```
5.116.3.2 MHASignal::waveform_t lpc_burglattice_config::forward [private]
5.116.3.3
         MHASignal::waveform_t lpc_burglattice_config::backward [private]
5.116.3.4
         MHASignal::waveform t lpc_burglattice_config::kappa [private]
5.116.3.5
         MHA_AC::waveform_t lpc_burglattice_config::kappa_block [private]
5.116.3.6
         MHASignal::waveform_t lpc_burglattice_config::dm [private]
5.116.3.7
         MHASignal::waveform t lpc burglattice config::nm [private]
5.116.3.8 mha real t lpc_burglattice_config::lambda [private]
5.116.3.9
         int lpc_burglattice_config::lpc_order [private]
5.116.3.10 std::string lpc_burglattice_config::name_f [private]
5.116.3.11 std::string lpc_burglattice_config::name_b [private]
5.116.3.12 mha_wave_t lpc_burglattice_config::s_f [private]
5.116.3.13 mha wave tlpc_burglattice_config::s_b [private]
```

The documentation for this class was generated from the following files:

- lpc_burg-lattice.h
- lpc_burg-lattice.cpp

5.117 **lpc_config Class Reference**

Public Member Functions

- lpc_config (algo_comm_t &ac, const mhaconfig_t in_cfg, std::string &algo_name, unsigned int _order, unsigned int _lpc_buffer_size, bool _shift, unsigned int _comp_each _iter, bool _norm)
- ∼lpc_config ()
- mha_wave_t * process (mha_wave_t *)
- void insert ()

Private Attributes

- bool norm
- · bool shift
- unsigned int comp_each_iter
- · unsigned int order
- unsigned int lpc_buffer_size
- · unsigned int N
- unsigned int comp_iter
- mha_wave_t sample
- std::vector< mha_real_t > R
- std::vector< mha_real_t > A
- MHASignal::ringbuffer_t inwave
- MHA_AC::waveform_t lpc_out
- MHA_AC::waveform_t corr_out

5.117.1 Constructor & Destructor Documentation

- 5.117.1.2 lpc_config::~lpc_config()
- 5.117.2 Member Function Documentation
- 5.117.2.1 mha_wave_t * lpc_config::process (mha_wave_t * wave)
- 5.117.2.2 void lpc_config::insert ()
- 5.117.3 Member Data Documentation
- **5.117.3.1 boollpc_config::norm** [private]
- 5.117.3.2 bool lpc_config::shift [private]
- **5.117.3.3 unsigned int lpc_config::comp_each_iter** [private]

```
5.117.3.4 unsigned int lpc_config::order [private]
5.117.3.5 unsigned int lpc_config::lpc_buffer_size [private]
5.117.3.6 unsigned int lpc_config::N [private]
5.117.3.7 unsigned int lpc_config::comp_iter [private]
5.117.3.8 mha_wave_t lpc_config::sample [private]
5.117.3.9 std::vector<mha_real_t>lpc_config::R [private]
5.117.3.10 std::vector<mha_real_t>lpc_config::A [private]
5.117.3.11 MHASignal::ringbuffer_t lpc_config::inwave [private]
5.117.3.12 MHA_AC::waveform_t lpc_config::lpc_out [private]
5.117.3.13 MHA AC::waveform_t lpc_config::corr_out [private]
```

The documentation for this class was generated from the following files:

- lpc.h
- lpc.cpp

5.118 matrixmixer::cfg_t Class Reference

Public Member Functions

- cfg_t (std::vector< std::vector< float > > imixer, unsigned int ci, unsigned int co, unsigned int fragsize, unsigned int nfft)
- mha_wave_t * process (mha_wave_t *)
- mha_spec_t * process (mha_spec_t *)

Private Attributes

- MHASignal::waveform_t m
- MHASignal::waveform_t wout
- MHASignal::spectrum_t sout

5.118.1 Constructor & Destructor Documentation

```
5.118.1.1 cfg_t::cfg_t (  std::vector < std::vector < float > > imixer, \\ unsigned int \textit{ci,} \\ unsigned int \textit{co,} \\ unsigned int \textit{fragsize,} \\ unsigned int \textit{nfft} \ )
```

5.118.2 Member Function Documentation

```
5.118.2.1 mha_wave_t * cfg_t::process (
mha_wave_t * s )
```

5.118.3 Member Data Documentation

```
5.118.3.1 MHASignal::waveform t matrixmixer::cfg_t::m [private]
```

5.118.3.2 MHASignal::waveform_t matrixmixer::cfg_t::wout [private]


5.118.3.3 MHASignal::spectrum_t matrixmixer::cfg_t::sout [private]

The documentation for this class was generated from the following file:

matrixmixer.cpp

5.119 matrixmixer::matmix_t Class Reference

Inheritance diagram for matrixmixer::matmix_t:

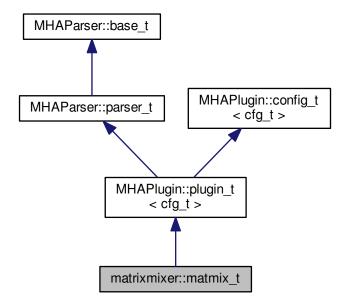

Public Member Functions

- matmix_t (const algo_comm_t &, const std::string &, const std::string &)
- void prepare (mhaconfig_t &)
- mha_wave_t * process (mha_wave_t *)
- mha_spec_t * process (mha_spec_t *)

Private Member Functions

• void update_m ()

Private Attributes

- MHAEvents::patchbay_t< matmix_t > patchbay
- MHAParser::mfloat_t mixer
- unsigned int ci
- · unsigned int co

```
Additional Inherited Members
```


```
5.119.1 Constructor & Destructor Documentation
5.119.1.1 matrixmixer::matmix t::matmix t(
                     const algo_comm_t & iac,
                      const std::string & ,
                      const std::string & )
5.119.2 Member Function Documentation
5.119.2.1 void matrixmixer::matmix_t::prepare (
                      mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin t < cfg t > (p. 685).
5.119.2.2 mha_wave_t * matrixmixer::matmix_t::process (
                      mha_wave_t * s
5.119.2.3 mha_spec_t * matrixmixer::matmix_t::process (
                      mha\_spec\_t * s)
5.119.2.4 void matrixmixer::matmix t::update m (
                     void ) [private]
5.119.3 Member Data Documentation
5.119.3.1 MHAEvents::patchbay_t<matmix_t> matrixmixer::matmix_t::patchbay [private]
5.119.3.2 MHAParser::mfloat_t matrixmixer::matmix_t::mixer [private]
5.119.3.3 unsigned int matrixmixer::matmix_t::ci [private]
5.119.3.4 unsigned int matrixmixer::matmix_t::co [private]
```

The documentation for this class was generated from the following file:

matrixmixer.cpp

5.120 MHA_AC::ac2matrix_helper_t Class Reference

Inheritance diagram for MHA_AC::ac2matrix_helper_t:

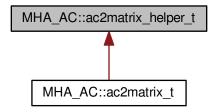

Public Member Functions

- ac2matrix_helper_t (algo_comm_t, const std::string &)
- void getvar ()

Public Attributes

- · algo_comm_t ac
- std::string name
- std::string username
- MHASignal::uint_vector_t size
- bool is_complex

Protected Attributes

- comm_var_t acvar
- 5.120.1 Constructor & Destructor Documentation
- 5.120.2 Member Function Documentation
- 5.120.2.1 void MHA_AC::ac2matrix_helper_t::getvar ()


- 5.120.3 Member Data Documentation
- 5.120.3.1 algo_comm_t MHA_AC::ac2matrix_helper_t::ac
- 5.120.3.2 std::string MHA_AC::ac2matrix_helper_t::name
- 5.120.3.3 std::string MHA_AC::ac2matrix_helper_t::username
- 5.120.3.4 MHASignal::uint_vector_t MHA_AC::ac2matrix_helper_t::size
- 5.120.3.5 bool MHA_AC::ac2matrix_helper_t::is_complex
- **5.120.3.6 comm_var_t** MHA_AC::ac2matrix_helper_t::acvar [protected]

The documentation for this class was generated from the following files:

- mha_algo_comm.h
- mha_algo_comm.cpp
- 5.121 MHA_AC::ac2matrix_t Class Reference

Copy AC variable to a matrix.

Inheritance diagram for MHA_AC::ac2matrix_t:

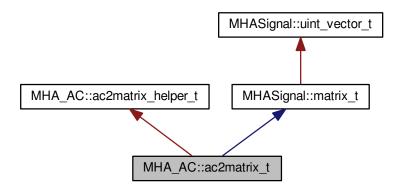

Public Member Functions

ac2matrix_t (algo_comm_t ac, const std::string &name)

Constructor.

• void update ()

Update contents of the matrix from the AC space.

• const std::string & getname () const

Return name of AC variable/matrix.

• const std::string & getusername () const

Return user specified name of AC variable/matrix.

void insert (algo_comm_t ac)

Insert matrix into an AC space (other than source AC space)

Additional Inherited Members

5.121.1 Detailed Description

Copy AC variable to a matrix.

This class constructs a matrix of same size as an AC variable and can copy the AC variable to itself. The **update()** (p. 376) function is real-time safe.

5.121.2 Constructor & Destructor Documentation

Constructor.

Parameters

ac	AC handle
name	Name of AC variable to be copied

5.121.3 Member Function Documentation

```
5.121.3.1 void MHA_AC::ac2matrix_t::update ( )
```

Update contents of the matrix from the AC space.

This function is real-time safe. The copy operation performance is of the order of the number of elements in the matrix.

5.121.3.2 const std::string& MHA_AC::ac2matrix_t::getname() const [inline]

Return name of AC variable/matrix.

5.121.3.3 const std::string& MHA_AC::ac2matrix_t::getusername() const [inline]

Return user specified name of AC variable/matrix.

```
5.121.3.4 void MHA_AC::ac2matrix_t::insert ( algo_comm_t ac )
```

Insert matrix into an AC space (other than source AC space)

Parameters

ac AC space handle to insert data

Note

The AC variable data buffer points to the data of the matrix. Modifications of the AC variable directly modify the data of the matrix; after deletion of the matrix, the data buffer is invalid.

The documentation for this class was generated from the following files:

- · mha algo comm.h
- · mha algo comm.cpp

5.122 MHA_AC::acspace2matrix_t Class Reference

Copy all or a subset of all numeric AC variables into an array of matrixes.

Public Member Functions

- acspace2matrix_t (algo_comm_t ac, const std::vector< std::string > &names)
 Constructor.
- acspace2matrix_t (const MHA_AC::acspace2matrix_t &src)

Constructor with initialization from an instance.

- ∼acspace2matrix t ()
- MHA_AC::acspace2matrix_t & operator= (const MHA_AC::acspace2matrix_t &src)

 Copy all contents (deep copy).
- MHA_AC::ac2matrix_t & operator[] (unsigned int k)
 Access operator.

• const MHA_AC::ac2matrix_t & operator[] (unsigned int k) const

Constant access operator.

• void **update** ()

Update function.

• unsigned int size () const

Number of matrixes in AC space.

• unsigned int frame () const

Actual frame number.

void insert (algo_comm_t ac)

Insert AC space copy into an AC space (other than source AC space)

Private Attributes

- unsigned int len
- MHA_AC::ac2matrix_t ** data
- · unsigned int frameno

5.122.1 Detailed Description

Copy all or a subset of all numeric AC variables into an array of matrixes.

5.122.2 Constructor & Destructor Documentation

Constructor.

Scan all given AC variables and allocate corresponding matrixes.

Parameters

ac	AC handle.
names	Names of AC variables, or empty for all.

Constructor with initialization from an instance.

Parameters

src Instance to be copied.

5.122.2.3 MHA_AC::acspace2matrix_t::~acspace2matrix_t ()

5.122.3 Member Function Documentation

Copy all contents (deep copy).

Parameters

src Array of matrixes to be copied.

Access operator.

Parameters

k index into array; should not exceed **size()** (p. 380)-1.

Return values

Reference to matrix.

Constant access operator.

Parameters

 $k \mid$ index into array; should not exceed **size()** (p. 380)-1.

Return values

Constant reference to matrix.

```
5.122.3.4 void MHA_AC::acspace2matrix_t::update() [inline]
```

Update function.

This function updates all matrixes from their corresponding AC variables. It can be called from the MHA Framework prepare function or in the processing callback.

```
5.122.3.5 unsigned int MHA_AC::acspace2matrix_t::size() const [inline]
```

Number of matrixes in AC space.

```
5.122.3.6 unsigned int MHA_AC::acspace2matrix_t::frame() const [inline]
```

Actual frame number.

```
5.122.3.7 void MHA_AC::acspace2matrix_t::insert ( algo_comm_t ac )
```

Insert AC space copy into an AC space (other than source AC space)

Parameters

```
ac AC space handle to insert data
```

```
5.122.4 Member Data Documentation
```

```
5.122.4.1 unsigned int MHA_AC::acspace2matrix_t::len [private]
```

```
5.122.4.2 MHA_AC::ac2matrix_t** MHA_AC::acspace2matrix_t::data [private]
```

```
5.122.4.3 unsigned int MHA_AC::acspace2matrix_t::frameno [private]
```

The documentation for this class was generated from the following files:

- mha_algo_comm.h
- mha_algo_comm.cpp

5.123 MHA_AC::double_t Class Reference

Insert a double precision floating point variable into the AC space.

Public Member Functions

```
    double_t (algo_comm_t, std::string, double=0)
    ~double t ()
```

Public Attributes

· double data

Floating point value variable.

Private Attributes

algo_comm_t ac

5.123.1 Detailed Description

Insert a double precision floating point variable into the AC space.

The variable is automatically removed on destruction.

```
5.123.2 Constructor & Destructor Documentation
```

```
5.123.2.2 MHA_AC::double_t::\simdouble_t()
```

5.123.3 Member Data Documentation

5.123.3.1 double MHA_AC::double_t::data

Floating point value variable.

```
5.123.3.2 algo_comm_t MHA_AC::double_t::ac [private]
```

The documentation for this class was generated from the following files:

- mha_algo_comm.h
- mha_algo_comm.cpp

5.124 MHA_AC::float_t Class Reference

Insert a float point variable into the AC space.

Public Member Functions

```
• float_t (algo_comm_t, std::string, float=0) 
Constructor.
```

```
• ~float_t ()
```

Public Attributes

float data

Floating point value variable.

Private Attributes

algo_comm_t ac

5.124.1 Detailed Description

Insert a float point variable into the AC space.

The variable is automatically removed on destruction.

5.124.2 Constructor & Destructor Documentation

Constructor.

```
5.124.2.2 MHA_AC::float_t::~float_t()
```

5.124.3 Member Data Documentation

5.124.3.1 float MHA_AC::float_t::data

Floating point value variable.

```
5.124.3.2 algo_comm_t MHA_AC::float_t::ac [private]
```

The documentation for this class was generated from the following files:

- mha_algo_comm.h
- mha_algo_comm.cpp

5.125 MHA_AC::int_t Class Reference

Insert a integer variable into the AC space.

Public Member Functions

```
int_t (algo_comm_t, std::string, int=0)∼int_t ()
```

Public Attributes

• int data

Integer value variable.

Private Attributes

· algo_comm_t ac

5.125.1 Detailed Description

Insert a integer variable into the AC space.

The variable is automatically removed on destruction.

5.125.2 Constructor & Destructor Documentation

```
5.125.2.2 MHA_AC::int_t::~int_t ( )
```

5.125.3 Member Data Documentation

5.125.3.1 int MHA_AC::int_t::data

Integer value variable.

5.125.3.2 algo_comm_t MHA_AC::int_t::ac [private]


The documentation for this class was generated from the following files:

- · mha_algo_comm.h
- mha_algo_comm.cpp

5.126 MHA_AC::spectrum_t Class Reference

Insert a MHASignal::spectrum_t (p. 755) class into the AC space.

Inheritance diagram for MHA_AC::spectrum_t:

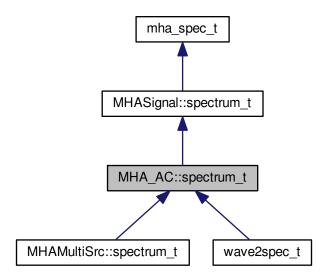

Public Member Functions

spectrum_t (algo_comm_t ac, std::string name, unsigned int bins, unsigned int channels, bool insert_now)

Create the AC variable.

- ~spectrum_t ()
- void **insert** ()

Insert AC variable into AC space.

Protected Attributes

- algo_comm_t ac
- std::string name

Additional Inherited Members

5.126.1 Detailed Description

Insert a MHASignal::spectrum_t (p. 755) class into the AC space.

The variable is automatically removed on destruction.

5.126.2 Constructor & Destructor Documentation

Create the AC variable.

Parameters

ac	AC handle
name	Name of variable in AC space
bins	Number of FFT bins in the waveform_t (p. 387) class
channels	Number of audio channels in the waveform_t (p. 387) class
insert_now	Insert implicitely in the constructor (true) or explicitely in the insert() (p. 385) function (false)

Reimplemented from **MHASignal::spectrum_t** (p. 757).

5.126.3 Member Function Documentation

5.126.3.1 void MHA_AC::spectrum_t::insert ()

Insert AC variable into AC space.

5.126.4 Member Data Documentation

5.126.4.1 algo_comm_t MHA_AC::spectrum_t::ac [protected]


5.126.4.2 std::string MHA_AC::spectrum_t::name [protected]

The documentation for this class was generated from the following files:

- mha_algo_comm.h
- mha_algo_comm.cpp

5.127 MHA_AC::stat_t Class Reference

Inheritance diagram for MHA_AC::stat_t:

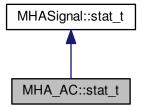

Public Member Functions

- stat_t (algo_comm_t ac, const std::string &name, const unsigned int &frames, const unsigned int &channels, bool insert_now)
- void update ()
- void insert ()

Private Attributes

- MHA_AC::waveform_t mean
- MHA_AC::waveform_t std

5.127.1 Constructor & Destructor Documentation


- 5.127.2 Member Function Documentation
- 5.127.2.1 void MHA_AC::stat_t::update ()
- 5.127.2.2 void MHA_AC::stat_t::insert ()
- 5.127.3 Member Data Documentation
- 5.127.3.1 MHA_AC::waveform_t MHA_AC::stat_t::mean [private]
- **5.127.3.2** MHA_AC::waveform_t MHA_AC::stat_t::std [private]

The documentation for this class was generated from the following files:

- mha_algo_comm.h
- mha_algo_comm.cpp

5.128 MHA_AC::waveform_t Class Reference

Insert a **MHASignal::waveform_t** (p. 767) class into the AC space. Inheritance diagram for MHA_AC::waveform_t:

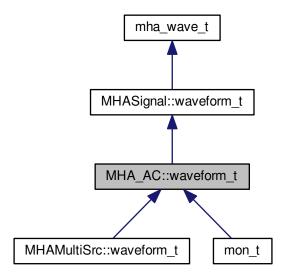

Public Member Functions

 waveform_t (algo_comm_t ac, std::string name, unsigned int frames, unsigned int channels, bool insert_now)

Create the AC variable.

- ~waveform t()
- void insert ()

Insert AC variable into AC space.

Protected Attributes

- algo_comm_t ac
- std::string name

Additional Inherited Members

5.128.1 Detailed Description

Insert a MHASignal::waveform_t (p. 767) class into the AC space.

The variable is automatically removed on destruction.

5.128.2 Constructor & Destructor Documentation

Create the AC variable.

Parameters

ac	AC handle
name	Name of variable in AC space
frames	Number of frames in the waveform_t (p. 387) class
channels	Number of audio channels in the waveform_t (p. 387) class
insert_now	Insert implicitely in the constructor (true) or explicitely in the insert() (p. 389) function (false)

```
5.128.2.2 MHA_AC::waveform_t::~waveform_t (
void ) [virtual]
```

Reimplemented from **MHASignal::waveform_t** (p. 770).

5.128.3 Member Function Documentation

```
5.128.3.1 void MHA_AC::waveform_t::insert ( )
```

Insert AC variable into AC space.

5.128.4 Member Data Documentation

```
5.128.4.1 algo_comm_t MHA_AC::waveform_t::ac [protected]
```

```
5.128.4.2 std::string MHA_AC::waveform_t::name [protected]
```

The documentation for this class was generated from the following files:

- mha_algo_comm.h
- mha_algo_comm.cpp

5.129 mha_audio_descriptor_t Struct Reference

Description of an audio fragment (planned as a replacement of **mhaconfig t** (p. 463)).

Public Attributes

unsigned int n_samples

Number of samples.

unsigned int n channels

Number of audio channels.

unsigned int n_freqs

Number of frequency bands.

unsigned int is_complex

Flag about sample type.

mha_real_t dt

Time distance between samples (only equidistant samples allowed)

mha_real_t * cf

Center frequencies of frequency bands.

mha_real_t * chdir

Hint on source direction of channel, values below zero is left, values above zero is right, zero means unknown.

5.129.1 Detailed Description

Description of an audio fragment (planned as a replacement of **mhaconfig_t** (p. 463)).

5.129.2 Member Data Documentation

5.129.2.1 unsigned int mha_audio_descriptor_t::n_samples

Number of samples.

5.129.2.2 unsigned int mha_audio_descriptor_t::n_channels

Number of audio channels.

5.129.2.3 unsigned int mha_audio_descriptor_t::n_freqs

Number of frequency bands.

5.129.2.4 unsigned int mha_audio_descriptor_t::is_complex

Flag about sample type.

5.129.2.5 mha real t mha_audio_descriptor_t::dt

Time distance between samples (only equidistant samples allowed)

5.129.2.6 mha_real_t* mha_audio_descriptor_t::cf

Center frequencies of frequency bands.

5.129.2.7 mha_real_t* mha_audio_descriptor_t::chdir

Hint on source direction of channel, values below zero is left, values above zero is right, zero means unknown.

The documentation for this struct was generated from the following file:

· mha.h

5.130 mha_audio_t Struct Reference

An audio fragment in the openMHA (planned as a replacement of **mha_wave_t** (p. 455) and **mha_spec_t** (p. 425)).

Public Attributes

mha_audio_descriptor_t descriptor

Dimension and description of the data.

mha real t * rdata

Data pointer if flag mha_audio_descriptor_t::is_complex (p. 390) is unset.

mha complex t * cdata

Data pointer if flag mha_audio_descriptor_t::is_complex (p. 390) is set.

5.130.1 Detailed Description

An audio fragment in the openMHA (planned as a replacement of **mha_wave_t** (p. 455) and **mha_spec_t** (p. 425)).

The data alignment is $(t_0, c_0, f_0), (t_0, c_0, f_1), \ldots, (t_0, c_0, f_{freqs}), (t_0, c_1, f_0), \ldots$ This allows a direct cast of the current **mha_wave_t** (p. 455) and **mha_spec_t** (p. 425) data pointers into corresponding **mha_audio_t** (p. 390) objects.

5.130.2 Member Data Documentation

5.130.2.1 mha audio descriptor t mha_audio_t::descriptor

Dimension and description of the data.

5.130.2.2 mha_real_t* mha_audio_t::rdata

Data pointer if flag mha_audio_descriptor_t::is_complex (p. 390) is unset.

5.130.2.3 mha complex t* mha_audio_t::cdata

Data pointer if flag mha_audio_descriptor_t::is_complex (p. 390) is set.

The documentation for this struct was generated from the following file:

· mha.h

5.131 mha_channel_info_t Struct Reference

Channel information structure.

Public Attributes

• int id

channel id

• char idstr [32]

channel id

• unsigned int side

side (left/right)

mha_direction_t dir

source direction

mha_real_t peaklevel

Peak level corresponds to this SPL (dB) level.

5.131.1 Detailed Description

Channel information structure.

5.131.2 Member Data Documentation

5.131.2.1 int mha_channel_info_t::id

channel id

5.131.2.2 char mha_channel_info_t::idstr[32]

channel id

5.131.2.3 unsigned int mha_channel_info_t::side

side (left/right)

5.131.2.4 mha_direction_t mha_channel_info_t::dir

source direction

5.131.2.5 mha_real_t mha_channel_info_t::peaklevel

Peak level corresponds to this SPL (dB) level.

The documentation for this struct was generated from the following file:

· mha.h

5.132 mha_complex_t Struct Reference

Type for complex floating point values.

Public Attributes

- mha_real_t re
 Real part.
- mha_real_t im Imaginary part.

5.132.1 Detailed Description

Type for complex floating point values.

5.132.2 Member Data Documentation

5.132.2.1 mha_real_t mha_complex_t::re

Real part.

5.132.2.2 mha_real_t mha_complex_t::im

Imaginary part.

The documentation for this struct was generated from the following file:

· mha.h

5.133 mha_dblbuf_t < FIFO > Class Template Reference

The doublebuffer adapts blocksizes between an outer process, which provides input data and takes output data, and an inner process, which processes the input signal and generates output data using a different block size than the outer process.

Public Types

typedef FIFO::value_type value_type
 The datatype exchanged by the FIFO and this doublebuffer.

Public Member Functions

- virtual unsigned get inner size () const
- virtual unsigned get_outer_size () const
- virtual unsigned get_delay () const
- virtual unsigned get_fifo_size () const
- virtual unsigned get input channels () const
- · virtual unsigned get output channels () const
- virtual unsigned get_input_fifo_fill_count () const
- virtual unsigned get_output_fifo_fill_count () const
- virtual unsigned get_input_fifo_space () const
- virtual unsigned get_output_fifo_space () const
- virtual MHA_Error * get_inner_error () const
- virtual void provoke_inner_error (const MHA_Error &)
- virtual void provoke_outer_error (const MHA_Error &)
- mha_dblbuf_t (unsigned outer_size, unsigned inner_size, unsigned delay, unsigned input channels, unsigned output channels, const value type &delay data)

Constructor creates FIFOs with specified delay.

- virtual ~mha_dblbuf_t ()
- virtual void process (const value_type *input_signal, value_type *output_signal, unsigned count)

The outer process has to call this method to propagate the input signal to the inner process, and receives back the output signal.

virtual void input (value_type *input_signal)

The inner process has to call this method to receive its input signal.

virtual void output (const value_type *output_signal)

The outer process has to call this method to deliver its output signal.

Private Attributes

unsigned outer size

The block size used by the outer process.

• unsigned inner size

The block size used by the inner process.

· unsigned delay

The delay introduced by bidirectional buffer size adaptation.

unsigned fifo_size

The size of each of the FIFOs.

unsigned input_channels

The number of input channels.

unsigned output_channels

The number of output channels.

FIFO input fifo

The FIFO for transporting the input signal from the outer process to the inner process.

FIFO output fifo

The FIFO for transporting the output signal from the inner process to the outer process.

MHA_Error * inner_error

Owned copy of exception to be thrown in inner thread.

MHA_Error * outer_error

Owned copy of exception to be thrown in outer thread.

5.133.1 Detailed Description

```
template < class FIFO > class mha_dblbuf_t < FIFO >
```

The doublebuffer adapts blocksizes between an outer process, which provides input data and takes output data, and an inner process, which processes the input signal and generates output data using a different block size than the outer process.

This class introduces the channels concept. Input and output may have different channel counts.

5.133.2 Member Typedef Documentation

```
5.133.2.1 template < class FIFO > typedef FIFO::value_type mha_dblbuf_t < FIFO >::value_type
```

The datatype exchanged by the FIFO and this doublebuffer.

5.133.3 Constructor & Destructor Documentation

Constructor creates FIFOs with specified delay.

Warning

The doublebuffer may block or raise an exception if the delay is too small. To avoid this, the delay should be

$$delay >= (inner_size - gcd(inner_size, outer_size))$$

.

Parameters

outer_size	The block size used by the outer process.
inner_size	The block size used by the inner process.
delay	The total delay
input_channels	Number of input channels
output_channels	Number of output channels
delay_data	The delay consists of copies of this value.

)const [inline],[virtual]

```
5.133.3.2 template < class FIFO > mha dblbuf t < FIFO >::~mha dblbuf t() [virtual]
5.133.4 Member Function Documentation
5.133.4.1
         template < class FIFO > virtual unsigned mha_dblbuf_t < FIFO >::get_inner_size ( ) const
          [inline],[virtual]
5.133.4.2 template < class FIFO > virtual unsigned mha dblbuf t < FIFO >::get_outer_size ( ) const
          [inline],[virtual]
5.133.4.3 template < class FIFO > virtual unsigned mha_dblbuf_t < FIFO >::get_delay ( ) const
          [inline],[virtual]
5.133.4.4 template < class FIFO > virtual unsigned mha dblbuf t < FIFO >::get_fifo_size ( ) const
          [inline],[virtual]
5.133.4.5 template < class FIFO > virtual unsigned mha dblbuf t < FIFO >::get_input_channels ( )
          const [inline],[virtual]
5.133.4.6 template < class FIFO > virtual unsigned mha dblbuf t < FIFO >::get output channels ( )
          const [inline],[virtual]
5.133.4.7 template < class FIFO > virtual unsigned mha dblbuf t < FIFO >::get_input_fifo_fill_count (
          )const [inline],[virtual]
5.133.4.8 template < class FIFO > virtual unsigned mha_dblbuf_t < FIFO >::get_output_fifo_fill_count
          ( ) const [inline], [virtual]
5.133.4.9 template < class FIFO > virtual unsigned mha dblbuf t < FIFO >::get_input_fifo_space ( )
          const [inline],[virtual]
5.133.4.10 template < class FIFO > virtual unsigned mha_dblbuf_t < FIFO >::get_output_fifo_space (
```

The outer process has to call this method to propagate the input signal to the inner process, and receives back the output signal.

Parameters

input_signal	Pointer to the input signal array.
output_signal	Pointer to the output signal array.
count	The number of data instances provided and expected, lower or equal to inner_size given to constructor.

Exceptions

MHA_Error (p. 406)	When count is > outer_size as given to constructor or the underlying
	fifo implementation detects an error.

```
5.133.4.15 template < class FIFO > void mha_dblbuf_t< FIFO >::input ( value_type * input_signal ) [virtual]
```

The inner process has to call this method to receive its input signal.

Parameters

Innut ciana	Array where the doublebuffer can store the signal.
iliput sigila	Array where the doubleburier can store the signal.

Exceptions

MHA Error (p. 406)	When the underlying fifo implementation detects an error.
	The state of the

The outer process has to call this method to deliver its output signal.

Parameters

output_signal | Array from which doublebuffer reads outputsignal.

Exceptions

5.133.5 Member Data Documentation

5.133.5.1 template < class FIFO > unsigned mha_dblbuf_t < FIFO >::outer_size [private]

The block size used by the outer process.

5.133.5.2 template < class FIFO > unsigned mha_dblbuf_t < FIFO >::inner_size [private]

The block size used by the inner process.

5.133.5.3 template < class FIFO > unsigned mha_dblbuf_t < FIFO >::delay [private]

The delay introduced by bidirectional buffer size adaptation.

5.133.5.4 template < class FIFO > unsigned mha_dblbuf_t < FIFO >::fifo_size [private]

The size of each of the FIFOs.

5.133.5.5 template < class FIFO > unsigned mha_dblbuf_t < FIFO >::input_channels [private]

The number of input channels.

5.133.5.6 template < class FIFO > unsigned mha_dblbuf_t < FIFO >::output_channels [private]

The number of output channels.

5.133.5.7 template < class FIFO > FIFO mha_dblbuf_t < FIFO >::input_fifo [private]

The FIFO for transporting the input signal from the outer process to the inner process.

5.133.5.8 template < class FIFO > FIFO mha_dblbuf_t < FIFO >::output_fifo [private]

The FIFO for transporting the output signal from the inner process to the outer process.

5.133.5.9 template < class FIFO > MHA_Error* mha_dblbuf_t < FIFO >::inner_error [private]

Owned copy of exception to be thrown in inner thread.

5.133.5.10 template < class FIFO > MHA_Error* mha_dblbuf_t < FIFO >::outer_error [private]

Owned copy of exception to be thrown in outer thread.

The documentation for this class was generated from the following files:

- · mha_fifo.h
- · mha fifo.cpp

5.134 mha_direction_t Struct Reference

Channel source direction structure.

Public Attributes

- mha_real_t azimuth
 azimuth in radiants
- mha_real_t elevation
 elevation in radiants
- mha_real_t distance distance in meters

5.134.1 Detailed Description

Channel source direction structure.

5.134.2 Member Data Documentation

5.134.2.1 mha_real_t mha_direction_t::azimuth

azimuth in radiants

5.134.2.2 mha_real_t mha_direction_t::elevation

elevation in radiants

5.134.2.3 mha_real_t mha_direction_t::distance

distance in meters


The documentation for this struct was generated from the following file:

· mha.h

5.135 mha_drifter_fifo_t < T > Class Template Reference

A FIFO class for blocksize adaptation without Synchronization.

Inheritance diagram for mha_drifter_fifo_t< T >:

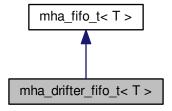

Public Member Functions

- virtual void write (const T *data, unsigned count)
 - write data to fifo
- virtual void read (T *buf, unsigned count)

Read data from fifo.

virtual unsigned get_fill_count () const

Return fill_count, adding **mha_drifter_fifo_t**<**T**>::startup_zeros (p. 406) to the number of samples actually in the fifo's buffer.

• virtual unsigned **get_available_space** () const

Return available space, subtracting number of **mha_drifter_fifo_t**<**T**>::**startup_zeros** (p. 406) from the available_space actually present in the fifo's buffer.

· virtual unsigned get des fill count () const

The desired fill count of this fifo.

virtual unsigned get_min_fill_count () const

The minimum fill count of this fifo.

virtual void stop ()

Called by **mha_drifter_fifo_t**<**T**>::**read** (p. 403) or **mha_drifter_fifo_t**<**T**>::**write** (p. 402) when their xrun in succession counter exceeds its limit.

virtual void starting ()

Called by mha_drifter_fifo_t<T>::read (p. 403) or mha_drifter_fifo_t<T>::write (p. 402) when the respective flag (mha_drifter_fifo_t<T>::reader_started (p. 405) or mha_drifter—fifo_t<T>::writer_started (p. 404)) is about to be toggled from false to true.

mha_drifter_fifo_t (unsigned min_fill_count, unsigned desired_fill_count, unsigned max_fill_count)

Create drifter FIFO.

mha_drifter_fifo_t (unsigned min_fill_count, unsigned desired_fill_count, unsigned max fill count, const T &t)

Create drifter FIFO where all (initially unused) copies of T are initialized as copies of t.

Private Attributes

const unsigned minimum_fill_count

The minimum fill count of this fifo.

const unsigned desired_fill_count

The desired fill count of the fifo.

bool writer started

Flag set to true when write is called the first time.

bool reader_started

Flag set to true when read is called for the first time.

unsigned writer_xruns_total

The number of xruns seen by the writer since object instantiation.

• unsigned reader xruns total

The number of xruns seen by the reader since object instantiation.

unsigned writer_xruns_since_start

The number of xruns seen by the writer since the last start of processing.

unsigned reader_xruns_since_start

The number of xruns seen by the reader since the last start of processing.

unsigned writer xruns in succession

The number of xruns seen by the writer in succession.

unsigned reader_xruns_in_succession

The number of xruns seen by the reader in succession.

unsigned maximum writer xruns in succession before stop

A limit to the number of xruns seen in succession during write before the data transmission through the FIFO is stopped.

unsigned maximum_reader_xruns_in_succession_before_stop

A limit to the number of xruns seen in succession during read before the data transmission through the FIFO is stopped.

mha fifo t< T>::value type null data

The value used in place of missing data.

unsigned startup_zeros

When processing starts, that is when both mha_drifter_fifo_t<T>::reader_started (p. 405) and mha_drifter_fifo_t<T>::writer_started (p. 404) are true, then first mha_drifter_fifo — _t<T>::desired_fill_count (p. 404) instances of mha_drifter_fifo_t<T>::null_data (p. 406) are delivered to the reader.

Additional Inherited Members

5.135.1 Detailed Description

```
template < class T> class mha drifter fifo t< T>
```

A FIFO class for blocksize adaptation without Synchronization.

Features: delay concept (desired, minimum and maximum delay), drifting support by throwing away data or inserting zeroes.

5.135.2 Constructor & Destructor Documentation

Create drifter FIFO.

Create drifter FIFO where all (initially unused) copies of T are initialized as copies of t.

5.135.3 Member Function Documentation

```
5.135.3.1 template < class T > void mha_drifter_fifo_t < T >::write ( const T * data, unsigned count ) [virtual]
```

write data to fifo

Sets writer_started (p. 404) to true.

When processing has started, i.e. both **reader_started** (p. 405) and **writer_started** (p. 404) are true, write specified ammount of data to the fifo. If there is not enough space available, then the exceeding data is lost and the writer xrun counters are increased.

Processing is stopped when writer_xruns_in_succession (p. 405) exceeds maximum_ writer_xruns_in_succession_before_stop (p. 405).

Parameters

data	Pointer to source data.
count	Number of instances to copy

Reimplemented from $mha_fifo_t < T > (p. 415)$.

Read data from fifo.

Sets reader_started (p. 405) to true.

When processing has started, i.e. both **reader_started** (p. 405) and **writer_started** (p. 404) are true, then read specified ammount of data from the fifo. As long as **startup_zeros** (p. 406) is > 0, **null_data** (p. 406) is delivered to the reader and **startup_zeros** (p. 406) is diminished. Only when **startup_zeros** (p. 406) has reached 0, data is actually read from the fifo's buffer.

If the read would cause the fifo's fill count to drop below **minimum_fill_count** (p. 404), then only so much data are read that **minimum_fill_count** (p. 404) entries remain in the fifo, the missing data is replaced with **null_data** (p. 406), and the reader xrun counters are increased.

Processing is stopped when **reader_xruns_in_succession** (p. 405) exceeds **maximum_** reader_xruns_in_succession_before_stop (p. 405).

Parameters

buf	Pointer to the target buffer
count	Number of instances to copy

Reimplemented from **mha fifo** t < T > (p.416).

```
5.135.3.3 template < class T > unsigned mha_drifter_fifo_t < T >::get_fill_count ( ) const [virtual]
```

Return fill_count, adding **mha_drifter_fifo_t**<**T**>::startup_zeros (p. 406) to the number of samples actually in the fifo's buffer.

Reimplemented from $mha_fifo_t < T > (p. 416)$.

```
5.135.3.4 template < class T > unsigned mha_drifter_fifo_t < T > ::get_available_space ( ) const [virtual]
```

Return available space, subtracting number of **mha_drifter_fifo_t**<**T**>::**startup_zeros** (p. 406) from the available space actually present in the fifo's buffer.

TODO: uncertain if this is a good idea.

Reimplemented from **mha_fifo_t**< **T**> (p. 416).

5.135.3.5 template < class T > virtual unsigned mha_drifter_fifo_t < T >::get_des_fill_count() const [inline], [virtual]

The desired fill count of this fifo.

5.135.3.6 template < class T > virtual unsigned mha_drifter_fifo_t < T > ::get_min_fill_count() const [inline], [virtual]

The minimum fill count of this fifo.

```
5.135.3.7 template < class T > void mha_drifter_fifo_t < T >::stop() [virtual]
```

Called by mha_drifter_fifo_t<T>::read (p. 403) or mha_drifter_fifo_t<T>::write (p. 402) when their xrun in succession counter exceeds its limit.

Called by **read** (p. 403) or **write** (p. 402) when their xrun in succession counter exceeds its limit.

May also be called explicitly.

```
5.135.3.8 template < class T > void mha_drifter_fifo_t < T >::starting() [virtual]
```

Called by $mha_drifter_fifo_t < T>::read$ (p. 403) or $mha_drifter_fifo_t < T>::write$ (p. 402) when the respective flag ($mha_drifter_fifo_t < T>::reader_started$ (p. 405) or $mha_drifter_t$ fifo t < T>::writer started (p. 404)) is about to be toggled from false to true.

The fifo's buffer is emptied, this method resets **startup_zeros** (p. 406) to **desired_fill_count** (p. 404), and it also resets **reader_xruns_since_start** (p. 405) and **writer_xruns_since_start** (p. 405) to 0.

5.135.4 Member Data Documentation

5.135.4.1 template < class T > const unsigned mha_drifter_fifo_t < T $>::minimum_fill_count [private]$

The minimum fill count of this fifo.

5.135.4.2 template < class T > const unsigned mha_drifter_fifo_t < T >::desired_fill_count [private]

The desired fill count of the fifo.

The fifo is initialized with this ammount of data when data transmission starts.

5.135.4.3 template < class T > bool mha_drifter_fifo_t < T >::writer_started [private]

Flag set to true when write is called the first time.

5.135.4.4 template < class T > bool mha_drifter_fifo_t < T >::reader_started [private]

Flag set to true when read is called for the first time.

5.135.4.5 template < class T > unsigned mha_drifter_fifo_t < T >::writer_xruns_total [private]

The number of xruns seen by the writer since object instantiation.

5.135.4.6 template < class T > unsigned mha_drifter_fifo_t < T >::reader_xruns_total [private]

The number of xruns seen by the reader since object instantiation.

5.135.4.7 template < class T > unsigned mha_drifter_fifo_t < T >::writer_xruns_since_start [private]

The number of xruns seen by the writer since the last start of processing.

5.135.4.8 template < class T > unsigned mha_drifter_fifo_t < T >::reader_xruns_since_start [private]

The number of xruns seen by the reader since the last start of processing.

5.135.4.9 template < class T > unsigned mha_drifter_fifo_t < T >::writer_xruns_in_succession [private]

The number of xruns seen by the writer in succession.

Reset to 0 every time a write succeeds without xrun.

5.135.4.10 template < class T > unsigned mha_drifter_fifo_t < T >::reader_xruns_in_succession [private]

The number of xruns seen by the reader in succession.

Reset to 0 every time a read succeeds without xrun.

5.135.4.11 template < class T > unsigned mha_drifter_fifo_t < T >::maximum_writer_xruns_in_ \leftarrow succession_before_stop [private]

A limit to the number of xruns seen in succession during write before the data transmission through the FIFO is stopped.

5.135.4.12 template < class T > unsigned mha_drifter_fifo_t < T >::maximum_reader_xruns_in_ \leftarrow succession_before_stop [private]

A limit to the number of xruns seen in succession during read before the data transmission through the FIFO is stopped.

5.135.4.13 template < class T > mha_fifo_t < T >::value_type mha_drifter_fifo_t < T >::null_data [private]

The value used in place of missing data.

5.135.4.14 template < class T > unsigned mha_drifter_fifo_t < T >::startup_zeros [private]

When processing starts, that is when both $mha_drifter_fifo_t < T > :: reader_started$ (p. 405) and $mha_drifter_fifo_t < T > :: writer_started$ (p. 404) are true, then first $mha_drifter_fifo_t < \leftarrow T > :: desired_fill_count$ (p. 404) instances of $mha_drifter_fifo_t < T > :: null_data$ (p. 406) are delivered to the reader.

These **null_data** (p. 406) instances are not transmitted through the fifo because filling the fifo with enough **null_data** (p. 406) might not be realtime safe and this filling has to be initiated by **starting** (p. 404) or **stop** (p. 404) (this implementation: **starting** (p. 404)) which are be called with realtime constraints.

The documentation for this class was generated from the following file:

mha_fifo.h

5.136 MHA_Error Class Reference

Error reporting exception class.

Inherits exception.

Public Member Functions

- MHA_Error (const char *file, int line, const char *fmt,...)

 Create an instance of a MHA_Error (p. 406).
- MHA_Error (const MHA_Error &)
- MHA_Error & operator= (const MHA_Error &)
- \sim MHA Error () throw ()
- const char * get_msg () const

Return the error message without source position.

const char * get_longmsg () const

Return the error message with source position.

const char * what () const throw ()
 overwrite std::execption::what()

Private Attributes

- char * msg
- char * longmsg

5.136.1 Detailed Description

Error reporting exception class.

This class is used for error handling in the openMHA. It is used by the openMHA kernel and by the openMHA toolbox library. Please note that exceptions should not be used accross ANSI-C interfaces. It is necessary to catch exceptions within the library.

The MHA_Error (p. 406) class holds source file name, line number and an error message.

5.136.2 Constructor & Destructor Documentation

Create an instance of a MHA_Error (p. 406).

Parameters

s_file	source file name (FILE)
1	source line (LINE)
fmt	format string for error message (as in printf)

Return the error message without source position.

```
5.136.3.3 const char* MHA_Error::get_longmsg() const [inline]
```

Return the error message with source position.

5.136.3.4 const char* MHA_Error::what () const throw) [inline]

overwrite std::execption::what()

5.136.4 Member Data Documentation

5.136.4.1 char* MHA_Error::msg [private]

5.136.4.2 char* MHA_Error::longmsg [private]


The documentation for this class was generated from the following files:

- mha_error.hh
- mha_error.cpp

5.137 mha_fifo_lw_t < T > Class Template Reference

This FIFO uses locks to synchronize access.

Inheritance diagram for mha_fifo_lw_t< T >:

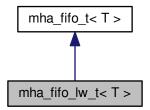

Public Member Functions

- virtual void write (const T *data, unsigned count)
 write specified ammount of data to the fifo.
- virtual void read (T *buf, unsigned count)
 read data from fifo.
- mha_fifo_lw_t (unsigned max_fill_count)
 Create FIFO with fixed buffer size.
- virtual ~mha_fifo_lw_t ()
 release synchronization object
- virtual void $\mathbf{set_error}$ (unsigned index, $\mathbf{MHA_Error} * \mathbf{error}$)

Process waiting for more data or space should bail out, throwing this error.

Private Attributes

- mha_fifo_thread_platform_t * sync
 platform specific thread synchronization
- MHA_Error * error [2]

If waiting for synchronization should be aborted then exception to be thrown by reader process (index 0) or writer process (index 1) has to be placed here.

Additional Inherited Members

5.137.1 Detailed Description

```
\label{template} \begin{array}{l} \text{template} \! < \! \text{class T} \! > \\ \text{class mha\_fifo\_lw\_t} \! < \! \text{T} \! > \\ \end{array}
```

This FIFO uses locks to synchronize access.

Reading and writing can block until the operation can be executed.

5.137.2 Constructor & Destructor Documentation

Create FIFO with fixed buffer size.

```
5.137.2.2 template < class T > mha_fifo_lw_t < T >::\sim mha_fifo_lw_t ( ) [virtual]
```

release synchronization object

5.137.3 Member Function Documentation

write specified ammount of data to the fifo.

If there is not enough space, then wait for more space.

Parameters

data	Pointer to source data.
count	Number of instances to copy.

Exceptions

Reimplemented from **mha_fifo_t**< **T**> (p. 415).

5.137.3.2 template
$$<$$
 class T $>$ void mha_fifo_lw_t $<$ T $>$::read (T $*$ buf, unsigned count) [virtual]

read data from fifo.

If there is not enough data, then wait for more data.

Parameters

buf	Pointer to the target buffer.
count	Number of instances to copy.

Exceptions

MHA_Error (p. 406)	when detecting a deadlock situation.
---------------------------	--------------------------------------

Reimplemented from $mha_fifo_t < T > (p. 416)$.

```
5.137.3.3 template < class T > void mha_fifo_lw_t < T >::set_error ( unsigned index, MHA_Error * error ) [virtual]
```

Process waiting for more data or space should bail out, throwing this error.

Parameters

index	Use 0 for terminating reader, 1 for terminating writer.
error	MHA_Error (p. 406) to be thrown

5.137.4 Member Data Documentation

platform specific thread synchronization


If waiting for synchronization should be aborted then exception to be thrown by reader process (index 0) or writer process (index 1) has to be placed here.

The documentation for this class was generated from the following files:

- mha_fifo.h
- mha_fifo.cpp

5.138 mha_fifo_posix_threads_t Class Reference

Inheritance diagram for mha_fifo_posix_threads_t:

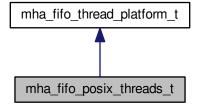

Public Member Functions

- mha_fifo_posix_threads_t ()
- virtual void aquire_mutex ()
- virtual void release_mutex ()
- virtual void wait_for_decrease ()
- virtual void wait for increase ()
- virtual void increment ()
- virtual void decrement ()
- virtual ~mha_fifo_posix_threads_t ()

Private Attributes

```
pthread_mutex_t mutex
```

- pthread_cond_t decrease_condition
- pthread_cond_t increase_condition

```
5.138.1 Constructor & Destructor Documentation
5.138.1.1 mha_fifo_posix_threads_t::mha_fifo_posix_threads_t( ) [inline]
5.138.1.2 virtual mha_fifo_posix_threads_t::~mha_fifo_posix_threads_t( ) [inline],
         [virtual]
5.138.2 Member Function Documentation
5.138.2.1 virtual void mha_fifo_posix_threads_t::aquire_mutex( ) [inline], [virtual]
Implements mha_fifo_thread_platform_t (p. 420).
5.138.2.2 virtual void mha fifo posix threads t::release mutex ( ) [inline], [virtual]
Implements mha_fifo_thread_platform_t (p. 420).
5.138.2.3 virtual void mha_fifo_posix_threads_t::wait_for_decrease() [inline], [virtual]
Implements mha_fifo_thread_platform_t (p. 420).
5.138.2.4 virtual void mha_fifo_posix_threads_t::wait_for_increase( ) [inline], [virtual]
Implements mha fifo thread platform t (p. 420).
5.138.2.5 virtual void mha_fifo_posix_threads_t::increment( ) [inline], [virtual]
Implements mha_fifo_thread_platform_t (p. 420).
5.138.2.6 virtual void mha_fifo_posix_threads_t::decrement() [inline], [virtual]
Implements mha_fifo_thread_platform_t (p. 421).
```

5.138.3 Member Data Documentation

5.138.3.1 pthread_mutex_t mha_fifo_posix_threads_t::mutex [private]

5.138.3.2 pthread_cond_t mha_fifo_posix_threads_t::decrease_condition [private]

5.138.3.3 pthread_cond_t mha_fifo_posix_threads_t::increase_condition [private]


The documentation for this class was generated from the following file:

mha_fifo.h

5.139 mha_fifo_t < T > Class Template Reference

A FIFO class for blocksize adaptation Synchronization: None.

Inheritance diagram for mha_fifo_t< T >:

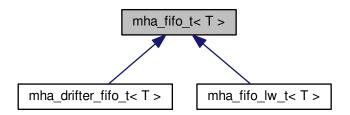

Public Types

typedef T value_type

The data type exchanged by this fifo.

Public Member Functions

virtual void write (const T *data, unsigned count)

write specified ammount of data to the fifo.

virtual void read (T *buf, unsigned count)

read data from fifo

virtual unsigned get_fill_count () const

Read-only access to fill count.

• virtual unsigned get_available_space () const

Read-only access to available space.

virtual unsigned get_max_fill_count () const

The capacity of this fifo.

mha_fifo_t (unsigned max_fill_count)

Create FIFO with fixed buffer size.

mha_fifo_t (unsigned max_fill_count, const T &t)

Create FIFO with fixed buffer size, where all (initially unused) copies of T are initialized as copies of t.

mha_fifo_t (const mha_fifo_t &src)

Copy constructor.

virtual ~mha_fifo_t ()

Destroy FIFO.

mha_fifo_t < T > & operator= (const mha_fifo_t < T > &)

Assignment operator.

Protected Member Functions

void clear ()

Empty the fifo at once.

Private Attributes

const unsigned max fill count

The maximum fill count of this FIFO.

T * buf

The memory allocated to store the data.

• T * write ptr

points to location where to write next

const T * read ptr

points to location where to read next

bool buf uses placement new

wether buf was allocated using placement new or array new.

```
5.139.1 Detailed Description
```

```
template < class T > class mha_fifo_t < T >
```

A FIFO class for blocksize adaptation Synchronization: None.

Use external synchronisation or synchronization in inheriting class.

```
5.139.2 Member Typedef Documentation
```

```
5.139.2.1 template < class T > typedef T mha_fifo_t < T >::value_type
```

The data type exchanged by this fifo.

```
5.139.3 Constructor & Destructor Documentation
```

```
5.139.3.1 template < class T > mha_fifo_t < T >::mha_fifo_t ( unsigned max_fill_count ) [explicit]
```

Create FIFO with fixed buffer size.

Create FIFO with fixed buffer size, where all (initially unused) copies of T are initialized as copies of t.

```
5.139.3.3 template < class T > mha_fifo_t < T >::mha_fifo_t ( const mha_fifo_t < T > & src )
```

Copy constructor.

```
5.139.3.4 template < class T > mha fifo t < T >::\sim mha fifo t () [virtual]
```

Destroy FIFO.

5.139.4 Member Function Documentation

```
5.139.4.1 template < class T> void mha_fifo_t < T>:: write ( const T * data, unsigned count ) [virtual]
```

write specified ammount of data to the fifo.

Parameters

data	Pointer to source data.
count	Number of instances to copy

Exceptions

Reimplemented in $mha_fifo_lw_t < T > (p. 409)$, and $mha_drifter_fifo_t < T > (p. 402)$.

```
5.139.4.2 template < class T> void mha_fifo_t< T>::read ( T * buf, unsigned count ) [virtual]
```

read data from fifo

Parameters

buf	Pointer to the target buffer
count	Number of instances to copy

Exceptions

```
MHA_Error (p. 406) when there is not enough data available.
```

Reimplemented in $mha_fifo_lw_t < T > (p. 410)$, and $mha_drifter_fifo_t < T > (p. 403)$.

5.139.4.3 template < class T > unsigned mha_fifo_t < T >::get_fill_count() const [virtual]

Read-only access to fill count.

Reimplemented in **mha_drifter_fifo_t**< T > (p. 403).

Read-only access to available_space.

Reimplemented in **mha_drifter_fifo_t** < **T** > (p. 403).

5.139.4.5 template < class T> virtual unsigned mha_fifo_t< T>:: get_max_fill_count() const [inline], [virtual]

The capacity of this fifo.

```
5.139.4.6 template < class T > mha_fifo_t < T > & mha_fifo_t < T > ::operator = ( const mha_fifo_t < T > & src )
```

Assignment operator.

5.139.4.7 template < class T > void mha_fifo_t < T >::clear() [inline], [protected]

Empty the fifo at once.

Should be called by the reader, or when the reader is inactive.

5.139.5 Member Data Documentation

 $\textbf{5.139.5.1} \quad \textbf{template} < \textbf{class T} > \textbf{const unsigned mha_fifo_t} < \textbf{T} > \textbf{::max_fill_count} \quad \texttt{[private]}$

The maximum fill count of this FIFO.

5.139.5.2 template < class T > T * mha_fifo_t < T >::buf [private]

The memory allocated to store the data.

max_fill_count + 1 locations are allocated: At least one location is always unused, because we have max_fill_count + 1 possible fillcounts [0:max_fill_count] that we need to distinguish.

5.139.5.3 template < class T > T * mha_fifo_t < T >::write_ptr [private]

points to location where to write next

5.139.5.4 template < class T > const T * mha_fifo_t < T >::read_ptr [private]

points to location where to read next

5.139.5.5 template < class T > bool mha_fifo_t < T >::buf_uses_placement_new [private]

wether buf was allocated using placement new or array new.

The documentation for this class was generated from the following file:

mha_fifo.h

5.140 mha_fifo_thread_guard_t Class Reference

Simple Mutex Guard Class.

Public Member Functions

- mha_fifo_thread_guard_t (mha_fifo_thread_platform_t *sync)
- ~mha_fifo_thread_guard_t ()

Private Attributes

• mha fifo thread platform t * sync

5.140.1 Detailed Description

Simple Mutex Guard Class.

5.140.2 Constructor & Destructor Documentation

- **5.140.2.2** mha_fifo_thread_guard_t::~mha_fifo_thread_guard_t() [inline]
- 5.140.3 Member Data Documentation
- **5.140.3.1 mha_fifo_thread_platform_t*** **mha_fifo_thread_guard_t::sync** [private]


The documentation for this class was generated from the following file:

· mha_fifo.h

5.141 mha_fifo_thread_platform_t Class Reference

Abstract base class for synchronizing multithreaded (producer/consumer) fifo operations.

Inheritance diagram for mha_fifo_thread_platform_t:

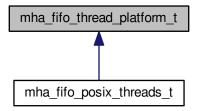

Public Member Functions

• virtual void aquire_mutex ()=0

Calling thread waits until it aquires the lock.

virtual void release_mutex ()=0

Calling thread releases the lock.

virtual void wait_for_decrease ()=0

Calling producer thread must own the lock.

virtual void wait_for_increase ()=0

Calling consumer thread must own the lock.

• virtual void increment ()=0

To be called by producer thread after producing.

• virtual void decrement ()=0

To be called by consumer thread after consuming.

virtual ~mha_fifo_thread_platform_t ()

Make destructor virtual.

mha_fifo_thread_platform_t ()

Make default constructor accessible.

Private Member Functions

```
    mha_fifo_thread_platform_t (const mha_fifo_thread_platform_t &)
```

```
• mha_fifo_thread_platform_t & operator= (const mha_fifo_thread_platform_t &)
```

5.141.1 Detailed Description

Abstract base class for synchronizing multithreaded (producer/consumer) fifo operations.

Works only with single producer and single consumer.

```
5.141.2 Constructor & Destructor Documentation
```

```
5.141.2.1 virtual mha_fifo_thread_platform_t::~mha_fifo_thread_platform_t( ) [inline], [virtual]
```

Make destructor virtual.

5.141.2.3 mha_fifo_thread_platform_t::mha_fifo_thread_platform_t() [inline]

Make default constructor accessible.

```
5.141.3 Member Function Documentation
```

```
5.141.3.1 virtual void mha_fifo_thread_platform_t::aquire_mutex() [pure virtual]
```

Calling thread waits until it aquires the lock.

Must not be called when the lock is already aquired.

```
Implemented in mha_fifo_posix_threads_t (p. 412).
```

```
5.141.3.2 virtual void mha_fifo_thread_platform_t::release_mutex() [pure virtual]
```

Calling thread releases the lock.

May only be called when lock is owned.

Implemented in **mha fifo posix threads t** (p. 412).

```
5.141.3.3 virtual void mha_fifo_thread_platform_t::wait_for_decrease( ) [pure virtual]
```

Calling producer thread must own the lock.

Method releases lock, and waits for consumer thread to call decrease(). Then reaquires lock and returns

```
Implemented in mha_fifo_posix_threads_t (p. 412).
```

```
5.141.3.4 virtual void mha_fifo_thread_platform_t::wait_for_increase( ) [pure virtual]
```

Calling consumer thread must own the lock.

Method releases lock, and waits for producer thread to call increase(). Then reaquires lock and returns

```
Implemented in mha_fifo_posix_threads_t (p. 412).
```

```
5.141.3.5 virtual void mha_fifo_thread_platform_t::increment() [pure virtual]
```

To be called by producer thread after producing.

Producer thread needs to own the lock to call this method.

Implemented in **mha_fifo_posix_threads_t** (p. 412).

```
5.141.3.6 virtual void mha_fifo_thread_platform_t::decrement() [pure virtual]
```

To be called by consumer thread after consuming.

Consumer thread needs to own the lock to call this method.

Implemented in **mha_fifo_posix_threads_t** (p. 412).

The documentation for this class was generated from the following file:

· mha_fifo.h

```
5.142 mha_rt_fifo_element_t < T > Class Template Reference
```

Object wrapper for mha_rt_fifo_t (p. 422).

Public Member Functions

- mha_rt_fifo_element_t (T *data)
 Constructor.
- ∼mha rt fifo element t ()

Public Attributes

- mha_rt_fifo_element_t < T > * next
 - Pointer to next fifo element. NULL for the last (newest) fifo element.
- bool abandonned

Indicates that this element will no longer be used and may be deleted.

• T * data

Pointer to user data.

5.142.1 Detailed Description

```
\label{template} \begin{array}{l} \text{template}{<} \text{class T}{>} \\ \text{class mha\_rt\_fifo\_element\_t}{<} \text{ T}{>} \\ \end{array}
```

Object wrapper for **mha_rt_fifo_t** (p. 422).

5.142.2 Constructor & Destructor Documentation

5.142.2.1 template
$$<$$
 class T $>$ mha_rt_fifo_element_t $<$ T $>$::mha_rt_fifo_element_t (T $*$ data) [inline]

Constructor.

This element assumes ownership of user data.

Parameters

data User data. Has to be allocated on the heap with standard operator new, because it will be deleted in this element's destructor.

5.142.2.2 template < class T > mha_rt_fifo_element_t < T >:: \sim mha_rt_fifo_element_t () [inline]

5.142.3 Member Data Documentation

5.142.3.1 template < class T > mha_rt_fifo_element_t < T > * mha_rt_fifo_element_t < T > ::next

Pointer to next fifo element. NULL for the last (newest) fifo element.

5.142.3.2 template < class T > bool mha_rt_fifo_element_t < T >::abandonned

Indicates that this element will no longer be used and may be deleted.

5.142.3.3 template < class T > T* mha_rt_fifo_element_t < T >::data

Pointer to user data.

The documentation for this class was generated from the following file:

· mha_fifo.h

5.143 mha_rt_fifo_t< T > Class Template Reference

Template class for thread safe, half real time safe fifo without explixit locks.

Public Member Functions

mha_rt_fifo_t ()

Construct empty fifo.

• ~mha_rt_fifo_t ()

Destructor will delete all data currently in the fifo.

• T * poll ()

Retrieve the latest element in the Fifo.

• T * poll_1 ()

Retrieve the next element in the Fifo, if there is one, and mark the previous element as abandonned.

void push (T *data)

Add element to the Fifo.

Private Member Functions

void remove_abandonned ()

Deletes abandonned elements.

void remove_all ()

Deletes all elements.

Private Attributes

mha_rt_fifo_element_t < T > * root

The first element in the fifo. Deleting elements starts here.

mha_rt_fifo_element_t< T > * current

The element most recently returned by **poll** (p. 424) or **poll_1** (p. 424).

5.143.1 Detailed Description

```
template < class T > class mha_rt_fifo_t < T >
```

Template class for thread safe, half real time safe fifo without explixit locks.

Reading from this fifo is realtime safe, writing to it is not. This fifo is designed for objects that were constructed on the heap. It assumes ownership of these objects and calls delete on them when they are no longer used. Objects remain inside the Fifo while being used by the reader.

A new fifo element is inserted by using **push** (p. 424). The push operation is not real time safe, it allocates and deallocates memory. The latest element is retrieved by calling **poll** (p. 424). This operation will skip fifo elements if more than one **push** (p. 424) has been occured since the last poll. To avoid skipping, call the **poll_1** (p. 424) operation instead.

5.143.2 Constructor & Destructor Documentation

```
5.143.2.1 template < class T > mha_rt_fifo_t < T > ::mha_rt_fifo_t ( ) [inline]
```

Construct empty fifo.

```
5.143.2.2 template < class T > mha_rt_fifo_t < T >::~mha_rt_fifo_t ( ) [inline]
```

Destructor will delete all data currently in the fifo.

5.143.3 Member Function Documentation

```
5.143.3.1 template < class T > T* mha_rt_fifo_t < T >::poll( ) [inline]
```

Retrieve the latest element in the Fifo.

Will skip fifo elements if more than one element has been added since last poll invocation. Will return the same element as on last call if no elements have been added in the mean time. Marks former elements as abandonned.

Returns

The latest element in this Fifo. Returns NULL if the Fifo is empty.

```
5.143.3.2 template < class T > T* mha_rt_fifo_t < T > ::poll_1() [inline]
```

Retrieve the next element in the Fifo, if there is one, and mark the previous element as abandonned.

Else, if there is no newer element, returns the same element as on last **poll()** (p. 424) or **poll_1()** (p. 424) invocation.

Returns

The next element in this Fifo, if there is one, or the same as before. Returns NULL if the Fifo is empty.

5.143.3.3 template
$$<$$
 class T $>$ void mha_rt_fifo_t $<$ T $>$::push (T $*$ data) [inline]

Add element to the Fifo.

Deletes abandonned elements in the fifo.

Parameters

data The new user data to place at the end of the fifo. After this invocation, the fifo is the owner of this object and will delete it when it is no longer used. data must have been allocated on the heap with standard operator new.

5.143.3.4 template
$$<$$
 class T $>$ void mha_rt_fifo_t $<$ T $>$::remove_abandonned() [inline], [private]

Deletes abandonned elements.

5.143.3.5 template < class T > void mha_rt_fifo_t < T >::remove_all() [inline], [private]

Deletes all elements.

5.143.4 Member Data Documentation

The first element in the fifo. Deleting elements starts here.

The element most recently returned by **poll** (p. 424) or **poll_1** (p. 424).

Searching for new elements starts here.


The documentation for this class was generated from the following file:

mha_fifo.h

5.144 mha_spec_t Struct Reference

Spectrum signal structure.

Inheritance diagram for mha_spec_t:

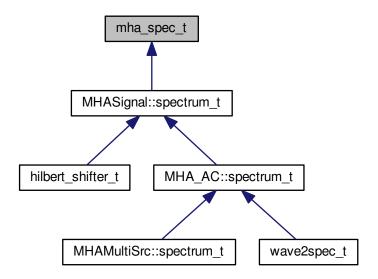

Public Attributes

mha complex t * buf

signal buffer

unsigned int num_channels

number of channels

• unsigned int num_frames

number of frames in each channel

mha_channel_info_t * channel_info

detailed channel description

5.144.1 Detailed Description

Spectrum signal structure.

This structure contains the short time fourier transform output of the windowed input signal. The member num_frames describes the number of frequency bins in each channel. For an even FFT length N, this is N/2+1. With odd FFT lengths, it is (N+1)/2. The imaginary part of the first bin is zero. For even FFT lengths, also the imaginary part at the Nyquist frequency is zero.

buf[k].re	Re(0)	Re(1)	Re(2)	Re(3)	Re(4)	 Re(n/2-1)	Re(n/2)
buf[k].im		Im(1)	Im(2)	Im(3)	Im(4)	 Im(n/2-1)	
k	0	1	2	3	4	n/2-1	n/2

Figure 4 Data order of FFT spectrum.

5.144.2 Member Data Documentation

5.144.2.1 mha_complex_t* mha_spec_t::buf

signal buffer

5.144.2.2 unsigned int mha_spec_t::num_channels

number of channels

5.144.2.3 unsigned int mha_spec_t::num_frames

number of frames in each channel

5.144.2.4 mha_channel_info_t* mha_spec_t::channel_info

detailed channel description


The documentation for this struct was generated from the following file:

· mha.h

5.145 MHA_TCP::Async_Notify Class Reference

Portable Multiplexable cross-thread notification.

Inheritance diagram for MHA_TCP::Async_Notify:

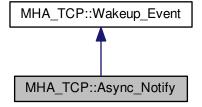

Public Member Functions

- Async_Notify ()
- virtual void reset ()
- virtual void set ()
- virtual ~Async_Notify ()

Private Attributes

• int **pipe** [2]

Additional Inherited Members

5.145.1 Detailed Description

Portable Multiplexable cross-thread notification.

5.145.2 Constructor & Destructor Documentation

```
5.145.2.1 Async_Notify::Async_Notify()
```

5.145.3 Member Function Documentation

Reimplemented from MHA_TCP::Wakeup_Event (p. 454).

```
5.145.3.2 void Async_Notify::set( ) [virtual]
```

5.145.4 Member Data Documentation


The documentation for this class was generated from the following files:

- · mha_tcp.hh
- · mha_tcp.cpp

5.146 MHA_TCP::Client Class Reference

A portable class for a tcp client connections.

Inheritance diagram for MHA_TCP::Client:

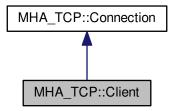

Public Member Functions

- **Client** (const std::string &host, unsigned short port)

 Constructor connects to host, port via TCP.
- Client (const std::string &host, unsigned short port, Timeout_Watcher &timeout_← watcher)

Constructor connects to host, port via TCP, using a timeout.

Additional Inherited Members

5.146.1 Detailed Description

A portable class for a tcp client connections.

5.146.2 Constructor & Destructor Documentation

```
5.146.2.1 Client::Client (

const std::string & host,

unsigned short port )
```

Constructor connects to host, port via TCP.

Parameters

host	The hostname of the TCP Server (p. 440).
port	The port or the TCP Server (p. 440).

```
5.146.2.2 Client::Client (

const std::string & host,

unsigned short port,

Timeout Watcher & timeout_watcher )
```

Constructor connects to host, port via TCP, using a timeout.

Parameters

host	The hostname of the TCP Server (p. 440).
port	The port or the TCP Server (p. 440).
timeout_watcher	an Event watcher that implements a timeout.

The documentation for this class was generated from the following files:


mha_tcp.hh

mha_tcp.cpp

5.147 MHA_TCP::Connection Class Reference

Connection (p. 430) handles Communication between client and server, is used on both sides.

Inheritance diagram for MHA TCP::Connection:

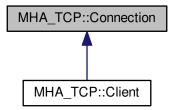

Public Member Functions

- Sockread_Event * get_read_event ()
- Sockwrite_Event * get_write_event ()
- std::string get_peer_address ()

Get peer's IP Address.

unsigned short get_peer_port ()

Get peer's TCP port.

• SOCKET get_fd () const

Return the (protected) file descriptor of the connection.

virtual ~Connection ()

Destructor closes the underlying file descriptor.

• bool **eof** ()

Checks if the peer has closed the connection.

bool can_read_line (char delim= '\n')

Checks if a full line of text has arrived by now.

bool can_read_bytes (unsigned howmany)

Checks if the specified ammount of data can be read.

std::string read_line (char delim= '\n')

Reads a single line of data from the socket.

std::string read_bytes (unsigned howmany)

Reads the specified ammount of dat from the socket.

void try_write (const std::string &data="")

Adds data to the internal "outgoing" buffer, and then tries to write as much data from that buffer to the socket as possible without blocking.

void write (const std::string &data="")

Adds data to the internal "outgoing" buffer, and then writes that that buffer to the socket, regardless of blocking.

bool needs_write ()

Checks if the internal "outgoing" buffer contains data.

• unsigned buffered_incoming_bytes () const

Returns the number of bytes in the internal "incoming" buffer.

• unsigned buffered_outgoing_bytes () const

Returns the number of bytes in the internal "outgoing" buffer.

Protected Member Functions

Connection (SOCKET _fd)

Create a connection instance from a socket filedescriptor.

Protected Attributes

SOCKET fd

The file descriptor of the TCP Socket.

Private Member Functions

• void init peer data ()

determine peer address and port

bool can sysread ()

Determine wether at least 1 byte can be read without blocking.

• bool can_syswrite ()

Determine wether at least 1 byte can be written without blocking.

std::string sysread (unsigned bytes)

Call the system's read function and try to read bytes.

std::string syswrite (const std::string &data)

Call the system's write function and try to write all characters in the string data.

Private Attributes

- · std::string outbuf
- std::string inbuf
- Sockread_Event * read_event
- Sockwrite_Event * write_event
- bool closed
- struct sockaddr_in peer_addr

5.147.1 Detailed Description

Connection (p. 430) handles Communication between client and server, is used on both sides.

```
5.147.2 Constructor & Destructor Documentation
```

```
5.147.2.1 MHA_TCP::Connection::Connection (
SOCKET_fd) [protected]
```

Create a connection instance from a socket filedescriptor.

Parameters

```
    ← The file descriptor of the TCP Socket. This file descriptor is closed again in the destructor.
    fd
```

Exceptions

```
MHA_Error (p. 406) If the file descriptor is < 0.
```

```
5.147.2.2 Connection::~Connection() [virtual]
```

Destructor closes the underlying file descriptor.

5.147.3 Member Function Documentation

```
5.147.3.1 void MHA_TCP::Connection::init_peer_data( ) [private]
```

determine peer address and port

```
5.147.3.2 bool Connection::can_sysread() [private]
```

Determine wether at least 1 byte can be read without blocking.

```
5.147.3.3 bool Connection::can_syswrite() [private]
```

Determine wether at least 1 byte can be written without blocking.

```
5.147.3.4 std::string Connection::sysread (
unsigned bytes) [private]
```

Call the system's read function and try to read bytes.

This will block in a situation where can_sysread returns false.

Parameters

bytes The desired number of characters	3 .
--	------------

Returns

The characters read from the socket. The result may have fewer characters than specified by bytes. If the result is an empty string, then the socket has been closed by the peer.

```
5.147.3.5 std::string Connection::syswrite (
const std::string & data ) [private]
```

Call the system's write function and try to write all characters in the string data.

May write fewer characters, but will at least write one character.

Parameters

Returns

The rest of the characters that have not yet been written.

```
5.147.3.6 Sockread_Event * Connection::get_read_event()

5.147.3.7 Sockwrite_Event * Connection::get_write_event()

5.147.3.8 std::string Connection::get_peer_address()

Get peer's IP Address.

5.147.3.9 unsigned short Connection::get_peer_port()

Get peer's TCP port.

5.147.3.10 SOCKET MHA_TCP::Connection::get_fd() const [inline]
```

Return the (protected) file descriptor of the connection.

Will be required for SSL.

```
5.147.3.11 bool Connection::eof ( )
```

Checks if the peer has closed the connection.

As a side effect, this method fills the internal "incoming" buffer if it was empty and the socket is readable and not eof.

```
5.147.3.12 bool Connection::can_read_line ( char delim = ' \n ' )
```

Checks if a full line of text has arrived by now.

This method reads data from the socket into the internal "incoming" buffer if it can be done without blocking.

Parameters

```
delim The line delimiter.
```

Returns

true if at least one full line of text is present in the internal buffer after this method call, false otherwise.

```
5.147.3.13 bool Connection::can_read_bytes ( unsigned howmany )
```

Checks if the specified ammount of data can be read.

This method reads data from the socket into an internal "incoming" buffer if it can be done without blocking.

Parameters

	howmany	The number of bytes that the caller wants to have checked.
--	---------	--

Returns

true if at least the specified ammount of data is present in the internal buffer after this method call, false otherwise

```
5.147.3.14 std::string Connection::read_line ( char delim = ' \n ' )
```

Reads a single line of data from the socket.

Blocks if necessary.

Parameters

<i>delim</i> The line delimiter.

Returns

The string of characters in this line, including the trailing delimiter. The delimiter may be missing if the last line before EOF does not have a delimiter.

```
5.147.3.15 std::string Connection::read_bytes ( unsigned howmany )
```

Reads the specified ammount of dat from the socket.

Blocks if necessary.

Parameters

Returns

The string of characters read. The string may be shorter if EOF is encountered.

```
5.147.3.16 void Connection::try_write (
const std::string & data = " " )
```

Adds data to the internal "outgoing" buffer, and then tries to write as much data from that buffer to the socket as possible without blocking.

Parameters

```
data data to send over the socket.
```

```
5.147.3.17 void Connection::write (

const std::string & data = " " )
```

Adds data to the internal "outgoing" buffer, and then writes that that buffer to the socket, regardless of blocking.

Parameters

data	data to send over the socket.

```
5.147.3.18 bool Connection::needs_write ( )
Checks if the internal "outgoing" buffer contains data.
5.147.3.19 unsigned Connection::buffered incoming bytes ( ) const
Returns the number of bytes in the internal "incoming" buffer.
5.147.3.20 unsigned Connection::buffered_outgoing_bytes ( ) const
Returns the number of bytes in the internal "outgoing" buffer.
5.147.4 Member Data Documentation
5.147.4.1 std::string MHA_TCP::Connection::outbuf [private]
5.147.4.2 std::string MHA_TCP::Connection::inbuf [private]
5.147.4.3 Sockread Event* MHA TCP::Connection::read event [private]
5.147.4.4 Sockwrite_Event* MHA_TCP::Connection::write_event [private]
5.147.4.5 bool MHA_TCP::Connection::closed [private]
5.147.4.6 struct sockaddr_in MHA_TCP::Connection::peer_addr [private]
```

The file descriptor of the TCP Socket.

The documentation for this class was generated from the following files:


5.147.4.7 SOCKET MHA_TCP::Connection::fd [protected]

- mha tcp.hh
- mha_tcp.cpp

5.148 MHA_TCP::Event_Watcher Class Reference

OS-independent event watcher, uses select on Unix and WaitForMultipleObjects on Windows.

Inheritance diagram for MHA_TCP::Event_Watcher:

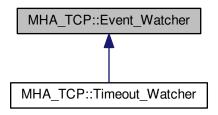

Public Types

- typedef std::set< Wakeup_Event * > Events
- typedef std::set< Wakeup_Event * >::iterator iterator

Public Member Functions

- void observe (Wakeup_Event *event)
 - Add an event to this observer.
- void ignore (Wakeup_Event *event)

Remove an event from this observer.

- std::set< Wakeup_Event * > wait ()
 - \ Wait for some event to occur.
- virtual ~Event_Watcher ()

Private Attributes

std::set< Wakeup_Event * > events

The list of events to watch.

5.148.1 Detailed Description

OS-independent event watcher, uses select on Unix and WaitForMultipleObjects on Windows.

```
5.148.2 Member Typedef Documentation
5.148.2.1 typedef std::set<Wakeup_Event*> MHA_TCP::Event_Watcher::Events
5.148.2.2 typedef std::set<Wakeup_Event*>::iterator MHA_TCP::Event_Watcher::iterator
5.148.3 Constructor & Destructor Documentation
5.148.3.1 Event_Watcher::~Event_Watcher() [virtual]
5.148.4 Member Function Documentation
5.148.4.1 void Event_Watcher::observe (
                     Wakeup Event * event )
Add an event to this observer.
5.148.4.2 void Event_Watcher::ignore (
                     Wakeup_Event * event )
Remove an event from this observer.
5.148.4.3 std::set< Wakeup_Event * > Event_Watcher::wait ( )
\ Wait for some event to occur.
Return all events that are ready
5.148.5 Member Data Documentation
        std::set<Wakeup_Event*> MHA_TCP::Event_Watcher::events [private]
The list of events to watch.
```

The documentation for this class was generated from the following files:

- mha_tcp.hh
- mha_tcp.cpp

5.149 MHA_TCP::OS_EVENT_TYPE Struct Reference

Public Types

Public Attributes

```
    enum MHA_TCP::OS_EVENT_TYPE:: { ... } mode
    union {
        int fd
        double timeout
        };
```

5.149.1 Member Enumeration Documentation

5.149.1.1 anonymous enum

Enumerator

R

W

X

T

5.149.2 Member Data Documentation

```
5.149.2.1 enum { ... } MHA_TCP::OS_EVENT_TYPE::mode
```

5.149.2.2 int MHA_TCP::OS_EVENT_TYPE::fd

5.149.2.3 double MHA_TCP::OS_EVENT_TYPE::timeout

5.149.2.4 union { ... }

The documentation for this struct was generated from the following file:

mha_tcp.hh

5.150 MHA_TCP::Server Class Reference

Public Member Functions

• Server (unsigned short port=0, const std::string &iface="0.0.0.0")

Create a TCP server socket.

Server (const std::string &iface, unsigned short port=0)

Create a TCP server socket.

• ∼Server ()

Close the TCP server socket.

• std::string **get_interface** () const

Get the name given in the constructor for the network interface.

• unsigned short **get_port** () const

Get the port that the TCP server socket currently listens to.

Sockaccept_Event * get_accept_event ()

Produces an event that can be observed by an **Event_Watcher** (p. 437).

Connection * accept ()

Accept an incoming connection.

Connection * try_accept ()

Accept an incoming connection if it can be done without blocking.

Private Member Functions

• void initialize (const std::string &iface, unsigned short port)

Private Attributes

- sockaddr_in sock_addr
- SOCKET serversocket
- std::string iface
- unsigned short port
- Sockaccept_Event * accept_event

5.150.1 Constructor & Destructor Documentation

```
5.150.1.1 Server::Server (

unsigned short port = 0,

const std::string & iface = " 0 . 0 . 0 . 0 " )
```

Create a TCP server socket.

Parameters

port	The TCP port to listen to.
iface	The network interface to bind to.

```
5.150.1.2 Server::Server (

const std::string & iface,

unsigned short port = 0 )
```

Create a TCP server socket.

Parameters

port	The TCP port to listen to.
iface	The network interface to bind to.

```
5.150.1.3 Server::∼Server ( )
```

Close the TCP server socket.

5.150.2 Member Function Documentation

5.150.2.2 std::string Server::get_interface () const

Get the name given in the constructor for the network interface.

5.150.2.3 unsigned short Server::get_port () const

Get the port that the TCP server socket currently listens to.

5.150.2.4 Sockaccept_Event * Server::get_accept_event()

Produces an event that can be observed by an **Event_Watcher** (p. 437).

This event signals incoming connections that can be accepted.

```
5.150.2.5 Connection * Server::accept ( )
```

Accept an incoming connection.

blocks if necessary.

Returns

The new TCP connection. The connection has to be deleted by the caller.

```
5.150.2.6 Connection * Server::try_accept ( )
```

Accept an incoming connection if it can be done without blocking.

Returns

The new TCP connection or 0 if there is no immediate connection. The connection has to be deleted by the caller.

```
5.150.3 Member Data Documentation
```

```
5.150.3.1 sockaddr_in MHA_TCP::Server::sock_addr [private]
```

```
5.150.3.2 SOCKET MHA_TCP::Server::serversocket [private]
```

```
5.150.3.3 std::string MHA_TCP::Server::iface [private]
```

5.150.3.4 unsigned short MHA_TCP::Server::port [private]


5.150.3.5 Sockaccept Event* MHA_TCP::Server::accept_event [private]

The documentation for this class was generated from the following files:

- mha_tcp.hh
- mha_tcp.cpp

5.151 MHA_TCP::Sockaccept_Event Class Reference

Inheritance diagram for MHA_TCP::Sockaccept_Event:

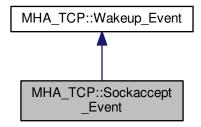

Public Member Functions

Sockaccept_Event (SOCKET)

Additional Inherited Members

5.151.1 Constructor & Destructor Documentation


The documentation for this class was generated from the following files:

- · mha_tcp.hh
- mha_tcp.cpp

5.152 MHA_TCP::Sockread_Event Class Reference

Watch socket for incoming data.

Inheritance diagram for MHA_TCP::Sockread_Event:

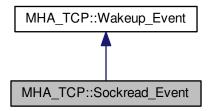

Public Member Functions

Sockread_Event (SOCKET s)

Set socket to watch for.

Additional Inherited Members

5.152.1 Detailed Description

Watch socket for incoming data.

5.152.2 Constructor & Destructor Documentation

5.152.2.1 MHA_TCP::Sockread_Event::Sockread_Event (SOCKET s)

Set socket to watch for.

Parameters


s The socket to observe incoming data on.

The documentation for this class was generated from the following files:

- · mha_tcp.hh
- mha_tcp.cpp

5.153 MHA_TCP::Sockwrite_Event Class Reference

Inheritance diagram for MHA_TCP::Sockwrite_Event:

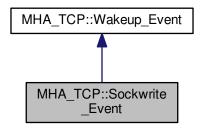

Public Member Functions

• Sockwrite_Event (SOCKET s)

Additional Inherited Members

5.153.1 Constructor & Destructor Documentation

The documentation for this class was generated from the following files:

- mha_tcp.hh
- mha_tcp.cpp

5.154 MHA_TCP::Thread Class Reference

A very simple class for portable threads.

Public Types

typedef void *(* thr_f) (void *)
 The thread function signature to use with this class.

Public Member Functions

• Thread (thr f func, void *arg=0)

Constructor starts a new thread.

virtual ∼Thread ()

The destructor should only be called when the Thread (p. 445) is finished.

• virtual void **run** ()

The internal method that delegated the new thread to the registered **Thread** (p. 445) function.

Public Attributes

Async_Notify thread_finish_event

Event will be triggered when the thread exits.

enum MHA_TCP::Thread:: { ... } state

The current state of the thread.

thr_f thread_func

The thread function that the client has registered.

void * thread_arg

The argument that the client wants to be handed through to the thread function.

MHA_Error * error

The MHA_Error (p. 406) that caused the thread to abort, if any.

Protected Member Functions

• Thread ()

Default constructor may only be used by derived classes that want to start the thread themselves.

Protected Attributes

void * arg

The argument for the client's thread function.

void * return_value

The return value from the client's thread function is stored here When that function returns.

Private Attributes

pthread_t thread_handle

The posix thread handle.

pthread_attr_t thread_attr

The posix thread attribute structure.

5.154.1 Detailed Description

A very simple class for portable threads.

5.154.2 Member Typedef Documentation

5.154.2.1 typedef void*(* MHA_TCP::Thread::thr_f) (void *)

The thread function signature to use with this class.

Derive from this class and call protected standard constructor to start threads differently.

5.154.3 Member Enumeration Documentation

5.154.3.1 anonymous enum

The current state of the thread.

Enumerator

PREPARED RUNNING FINISHED

5.154.4 Constructor & Destructor Documentation

5.154.4.1 MHA_TCP::Thread::Thread() [protected]

Default constructor may only be used by derived classes that want to start the thread themselves.

```
5.154.4.2 Thread::Thread (
Thread::thr_f func,
void * arg = 0)
```

Constructor starts a new thread.

Parameters

func	The function to be executed by the thread.
arg	The argument given to pass to the thread function.

```
5.154.4.3 Thread::~Thread() [virtual]
```

The destructor should only be called when the **Thread** (p. 445) is finished.

There is preliminary support for forceful thread cancellation in the destructor, but probably not very robust or portable..

5.154.5 Member Function Documentation

```
5.154.5.1 void Thread::run() [virtual]
```

The internal method that delegated the new thread to the registered **Thread** (p. 445) function.

5.154.6 Member Data Documentation

```
5.154.6.1 pthread_t MHA_TCP::Thread::thread_handle [private]
```

The posix thread handle.

```
5.154.6.2 pthread_attr_t MHA_TCP::Thread::thread_attr [private]
```

The posix thread attribute structure.

Required for starting a thread in detached state. Detachment is required to eliminate the need for joining this thread.

```
5.154.6.3 void* MHA TCP::Thread::arg [protected]
```

The argument for the client's thread function.

```
5.154.6.4 void* MHA_TCP::Thread::return_value [protected]
```

The return value from the client's thread function is stored here When that function returns.

5.154.6.5 Async_Notify MHA_TCP::Thread::thread_finish_event

Event will be triggered when the thread exits.

5.154.6.6 enum { ... } MHA_TCP::Thread::state

The current state of the thread.

5.154.6.7 thr_f MHA_TCP::Thread::thread_func

The thread function that the client has registered.

5.154.6.8 void* MHA_TCP::Thread::thread_arg

The argument that the client wants to be handed through to the thread function.

5.154.6.9 MHA_Error* MHA_TCP::Thread::error


The **MHA_Error** (p. 406) that caused the thread to abort, if any.

The documentation for this class was generated from the following files:

- mha_tcp.hh
- mha_tcp.cpp

5.155 MHA_TCP::Timeout_Event Class Reference

Inheritance diagram for MHA_TCP::Timeout_Event:

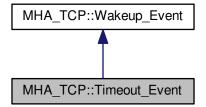

Public Member Functions

- Timeout_Event (double interval)
- virtual OS_EVENT_TYPE get_os_event ()

Private Attributes

double end_time

Additional Inherited Members

5.155.1 Constructor & Destructor Documentation

5.155.1.1 Timeout_Event::Timeout_Event (double *interval*)

5.155.2 Member Function Documentation

5.155.2.1 OS_EVENT_TYPE Timeout_Event::get_os_event() [virtual]

Reimplemented from MHA_TCP::Wakeup_Event (p. 453).

5.155.3 Member Data Documentation

5.155.3.1 double MHA_TCP::Timeout_Event::end_time [private]


The documentation for this class was generated from the following files:

- mha_tcp.hh
- mha_tcp.cpp

5.156 MHA_TCP::Timeout_Watcher Class Reference

OS-independent event watcher with internal fixed-end-time timeout.

Inheritance diagram for MHA_TCP::Timeout_Watcher:

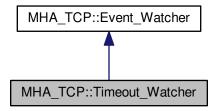

Public Member Functions

- Timeout_Watcher (double interval)
- virtual ~Timeout_Watcher ()

Private Attributes

• Timeout Event timeout

Additional Inherited Members

5.156.1 Detailed Description

OS-independent event watcher with internal fixed-end-time timeout.

5.156.2 Constructor & Destructor Documentation

5.156.2.2 Timeout_Watcher::~Timeout_Watcher() [virtual]

5.156.3 Member Data Documentation

5.156.3.1 Timeout_Event MHA_TCP::Timeout_Watcher::timeout [private]


The documentation for this class was generated from the following files:

- mha_tcp.hh
- mha_tcp.cpp

5.157 MHA_TCP::Wakeup_Event Class Reference

A base class for asynchronous wakeup events.

Inheritance diagram for MHA_TCP::Wakeup_Event:

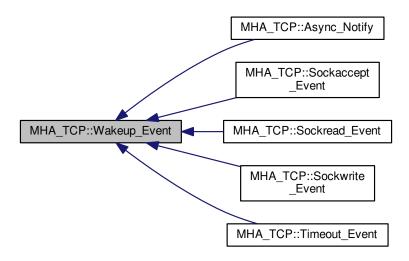

Public Member Functions

Wakeup_Event ()

Event Constructor.

virtual void observed_by (Event_Watcher *observer)

Called by the Event_Watcher (p. 437) when this event is added to its list of observed events.

virtual void ignored_by (Event_Watcher *observer)

Called by the **Event_Watcher** (p. 437) when this event is removed from its list of observed events.

virtual ~Wakeup Event ()

Destructor deregisters from observers.

virtual OS_EVENT_TYPE get_os_event ()

Get necessary information for the Event Watcher.

• virtual void reset ()

For pure notification events, reset the "signalled" status.

• virtual bool status ()

Query wether the event is in signalled state now.

Protected Attributes

- OS_EVENT_TYPE os_event
- bool os_event_valid

Private Attributes

std::set< class Event Watcher * > observers

A list of all **Event_Watcher** (p. 437) instances that this **Wakeup_Event** (p. 452) is observed by (stored here for proper deregistering).

5.157.1 Detailed Description

A base class for asynchronous wakeup events.

5.157.2 Constructor & Destructor Documentation

```
5.157.2.1 Wakeup_Event::Wakeup_Event()
```

Event Constructor.

The new event has invalid state.

```
5.157.2.2 Wakeup_Event::~Wakeup_Event() [virtual]
```

Destructor deregisters from observers.

5.157.3 Member Function Documentation

Called by the **Event_Watcher** (p. 437) when this event is added to its list of observed events.

Called by the **Event_Watcher** (p. 437) when this event is removed from its list of observed events.

```
5.157.3.3 OS_EVENT_TYPE Wakeup_Event::get_os_event( ) [virtual]
```

Get necessary information for the Event Watcher.

Reimplemented in MHA_TCP::Timeout_Event (p. 450).

```
5.157.3.4 void Wakeup_Event::reset( ) [virtual]
```

For pure notification events, reset the "signalled" status.

Reimplemented in MHA_TCP::Async_Notify (p. 428).

```
5.157.3.5 bool Wakeup_Event::status() [virtual]
```

Query wether the event is in signalled state now.

5.157.4 Member Data Documentation

```
5.157.4.1 std::set<class Event_Watcher *> MHA_TCP::Wakeup_Event::observers [private]
```

A list of all **Event_Watcher** (p. 437) instances that this **Wakeup_Event** (p. 452) is observed by (stored here for proper deregistering).

```
5.157.4.2 OS_EVENT_TYPE MHA_TCP::Wakeup_Event::os_event [protected]
```

```
5.157.4.3 bool MHA_TCP::Wakeup_Event::os_event_valid [protected]
```

The documentation for this class was generated from the following files:

- mha_tcp.hh
- · mha_tcp.cpp

5.158 mha_tictoc_t Struct Reference

Public Attributes

- struct timeval tv1
- struct timeval tv2
- struct timezone tz
- float t

5.158.1 Member Data Documentation

5.158.1.1 struct timeval mha_tictoc_t::tv1

5.158.1.2 struct timeval mha_tictoc_t::tv2

5.158.1.3 struct timezone mha tictoc t::tz

5.158.1.4 float mha_tictoc_t::t


The documentation for this struct was generated from the following file:

· mha profiling.h

5.159 mha_wave_t Struct Reference

Waveform signal structure.

Inheritance diagram for mha_wave_t:

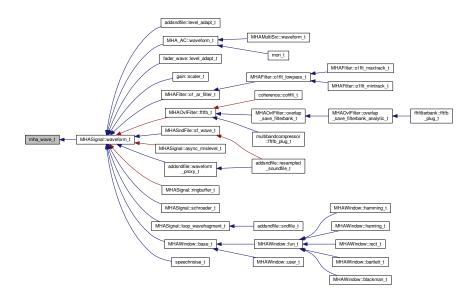

Public Attributes

- mha_real_t * buf
 - signal buffer
- unsigned int num_channels

number of channels

• unsigned int num_frames

number of frames in each channel

mha_channel_info_t * channel_info

detailed channel description

5.159.1 Detailed Description

Waveform signal structure.

This structure contains one fragment of a waveform signal. The member num_frames describes the number of audio samples in each audio channel.

The field channel_info must be an array of num_channels entries or NULL.

5.159.2 Member Data Documentation

5.159.2.1 mha_real_t* mha_wave_t::buf

signal buffer

5.159.2.2 unsigned int mha_wave_t::num_channels

number of channels

5.159.2.3 unsigned int mha_wave_t::num_frames

number of frames in each channel

5.159.2.4 mha_channel_info_t* mha_wave_t::channel_info


detailed channel description

The documentation for this struct was generated from the following file:

· mha.h

5.160 mhachain::chain_base_t Class Reference

Inheritance diagram for mhachain::chain_base_t:

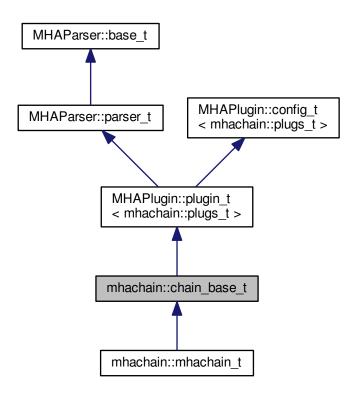

Public Member Functions

```
chain_base_t (algo_comm_t, const std::string &, const std::string &)
void process (mha_wave_t *, mha_wave_t **)
void process (mha_spec_t *, mha_wave_t **)
void process (mha_wave_t *, mha_spec_t **)
void process (mha_spec_t *, mha_spec_t **)
void prepare (mhaconfig_t &)
```

Protected Attributes

• void release ()

MHAParser::bool_t bprofilingMHAParser::vstring_t algos

Private Member Functions

• void update ()

Private Attributes

- std::vector< std::string > old_algos
- MHAEvents::patchbay t< mhachain::chain base t > patchbay
- · mhaconfig_t cfin
- mhaconfig_t cfout
- bool b prepared
- std::string chain

Additional Inherited Members

```
5.160.1 Constructor & Destructor Documentation
```

5.160.2 Member Function Documentation


```
5.160.2.2 void mhachain::chain base t::process (
                     mha_spec_t * sin,
                     mha wave t ** sout )
5.160.2.3 void mhachain::chain_base_t::process (
                     mha wave t * sin,
                     mha spec t ** sout )
5.160.2.4 void mhachain::chain base t::process (
                     mha spec t * sin,
                     mha_spec_t ** sout )
5.160.2.5 void mhachain::chain_base_t::prepare (
                     mhaconfig_t & cf ) [virtual]
Implements MHAPlugin::plugin t < mhachain::plugs t > (p. 685).
5.160.2.6 void mhachain::chain base t::release (
                     void ) [virtual]
Reimplemented from MHAPlugin::plugin t < mhachain::plugs t > (p. 686).
5.160.2.7 void mhachain::chain base t::update() [private]
5.160.3 Member Data Documentation
5.160.3.1 MHAParser::bool_t mhachain::chain_base_t::bprofiling [protected]
5.160.3.2 MHAParser::vstring t mhachain::chain_base_t::algos [protected]
5.160.3.3 std::vector<std::string> mhachain::chain_base_t::old_algos [private]
5.160.3.4 MHAEvents::patchbay t < mhachain::chain base t >
         mhachain::chain_base_t::patchbay [private]
5.160.3.5 mhaconfig t mhachain::chain_base_t::cfin [private]
5.160.3.6 mhaconfig t mhachain::chain base t::cfout [private]
5.160.3.7 bool mhachain::chain_base_t::b_prepared [private]
5.160.3.8 std::string mhachain::chain_base_t::chain [private]
```

The documentation for this class was generated from the following files:

- · mha_generic_chain.h
- mha_generic_chain.cpp

5.161 mhachain::mhachain_t Class Reference

Inheritance diagram for mhachain::mhachain_t:

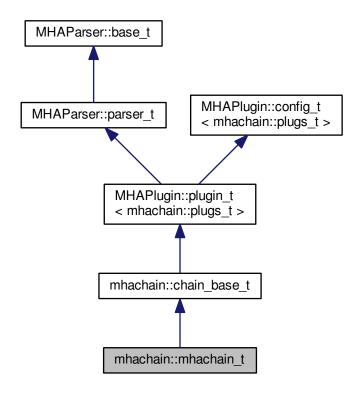

Public Member Functions

• mhachain_t (algo_comm_t iac, const std::string &ichain, const std::string &ialgo)

Additional Inherited Members

5.161.1 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

mhachain.cpp

5.162 mhachain::plugs_t Class Reference

Public Member Functions

- plugs_t (std::vector< std::string > algos, mhaconfig_t cfin, mhaconfig_t cfout, bool do_prepare, MHAParser::parser_t &p, algo_comm_t iac, std::string ichain, bool use_← profiling)
- ~plugs_t ()
- void prepare (mhaconfig t &)
- void release ()
- void process (mha_wave_t *, mha_spec_t *, mha_wave_t **, mha_spec_t **)
- bool **prepared** () const

Private Member Functions

- void alloc_plugs (std::vector< std::string > algos)
- void cleanup plugs ()
- void update_proc_load ()

Private Attributes

- bool b_prepared
- std::vector< PluginLoader::mhapluginloader_t * > algos
- MHAParser::parser_t & parser
- · algo comm tac
- std::string chain
- MHAParser::parser_t profiling
- MHAParser::vstring_mon_t prof_algos
- MHAParser::vfloat mon t prof init
- MHAParser::vfloat_mon_t prof_prepare
- MHAParser::vfloat_mon_t prof_release
- MHAParser::vfloat_mon_t prof_process
- · MHAParser::float mon t prof process tt
- MHAParser::vfloat_mon_t prof_process_load
- unsigned int proc cnt
- mhaconfig_t prof_cfg
- MHAEvents::connector t< mhachain::plugs t > prof load con
- MHAEvents::connector_t< mhachain::plugs_t > prof_tt_con
- bool b use profiling
- mha_platform_tictoc_t tictoc

```
5.162.1 Constructor & Destructor Documentation
5.162.1.1 mhachain::plugs_t::plugs_t (
                      std::vector < std::string > algos,
                      mhaconfig_t cfin,
                      mhaconfig_t cfout,
                      bool do_prepare,
                      MHAParser::parser t & p,
                      algo_comm_t iac,
                      std::string ichain,
                      bool use_profiling )
5.162.1.2 mhachain::plugs_t::~plugs_t ( )
5.162.2 Member Function Documentation
5.162.2.1 void mhachain::plugs_t::prepare (
                      mhaconfig t & tf)
5.162.2.2 void mhachain::plugs_t::release (
                      void )
5.162.2.3 void mhachain::plugs t::process (
                      mha_wave_t * win,
                      mha_spec_t * sin,
                      mha_wave_t ** wout,
                      mha_spec_t ** sout )
5.162.2.4 bool mhachain::plugs_t::prepared ( ) const [inline]
5.162.2.5 void mhachain::plugs_t::alloc_plugs (
                      std::vector < std::string > algos ) [private]
5.162.2.6 void mhachain::plugs_t::cleanup_plugs() [private]
5.162.2.7 void mhachain::plugs_t::update_proc_load( ) [private]
5.162.3 Member Data Documentation
5.162.3.1 bool mhachain::plugs_t::b_prepared [private]
5.162.3.2 std::vector< PluginLoader::mhapluginloader_t* > mhachain::plugs_t::algos
          [private]
5.162.3.3 MHAParser::parser_t& mhachain::plugs_t::parser [private]
```

```
5.162.3.4 algo_comm_t mhachain::plugs_t::ac [private]
5.162.3.5 std::string mhachain::plugs_t::chain [private]
5.162.3.6 MHAParser::parser t mhachain::plugs t::profiling [private]
5.162.3.7 MHAParser::vstring_mon_t mhachain::plugs_t::prof_algos [private]
5.162.3.8 MHAParser::vfloat mon t mhachain::plugs_t::prof_init [private]
5.162.3.9 MHAParser::vfloat_mon_t mhachain::plugs_t::prof_prepare [private]
5.162.3.10 MHAParser::vfloat_mon_t mhachain::plugs_t::prof_release [private]
5.162.3.11 MHAParser::vfloat mon t mhachain::plugs_t::prof_process [private]
5.162.3.12 MHAParser::float_mon_t mhachain::plugs_t::prof_process_tt [private]
5.162.3.13 MHAParser::vfloat_mon_t mhachain::plugs_t::prof_process_load [private]
5.162.3.14 unsigned int mhachain::plugs_t::proc_cnt [private]
5.162.3.15 mhaconfig_t mhachain::plugs_t::prof_cfg [private]
5.162.3.16 MHAEvents::connector t<mhachain::plugs t> mhachain::plugs t::prof load con
          [private]
5.162.3.17 MHAEvents::connector_t<mhachain::plugs_t> mhachain::plugs_t::prof_tt_con
          [private]
5.162.3.18 bool mhachain::plugs_t::b_use_profiling [private]
5.162.3.19 mha_platform_tictoc_t mhachain::plugs_t::tictoc [private]
```


The documentation for this class was generated from the following files:

- · mha generic chain.h
- mha_generic_chain.cpp

5.163 mhaconfig_t Struct Reference

MHA prepare configuration structure.

Inheritance diagram for mhaconfig_t:

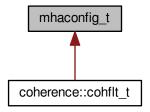

Public Attributes

· unsigned int channels

Number of audio channels.

unsigned int domain

Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)

· unsigned int fragsize

Fragment size of waveform data.

unsigned int wndlen

Window length of spectral data.

· unsigned int fftlen

FFT length of spectral data.

· mha_real_t srate

Sampling rate in Hz.

5.163.1 Detailed Description

MHA prepare configuration structure.

This structure contains information about channel number and domain for input and output signals of a openMHA Plugin. Each plugin can change any of these parameters, e.g. by resampling of the signal. The only limitation is that the callback frequency is fixed (except for the plugins db and dbasync).


Todo Add information on number of bands and on center frequencies, or replace by **mha**_← **audio_descriptor_t** (p. 389).

5.163.2 Member Data Documentation
5.163.2.1 unsigned int mhaconfig_t::channels
Number of audio channels.
5.163.2.2 unsigned int mhaconfig_t::domain
Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)
5.163.2.3 unsigned int mhaconfig_t::fragsize
Fragment size of waveform data.
5.163.2.4 unsigned int mhaconfig_t::wndlen
Window length of spectral data.
5.163.2.5 unsigned int mhaconfig_t::fftlen
FFT length of spectral data.
5.163.2.6 mha_real_t mhaconfig_t::srate
Sampling rate in Hz.
The documentation for this struct was generated from the following file:

• mha.h

5.164 MHAEvents::connector_base_t Class Reference

Inheritance diagram for MHAEvents::connector_base_t:

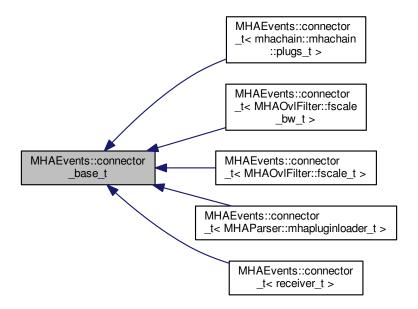

Public Member Functions

- connector_base_t ()
- virtual ~connector_base_t ()
- virtual void emit_event ()
- virtual void emit_event (const std::string &)
- virtual void emit_event (const std::string &, unsigned int, unsigned int)
- void emitter_die ()

Protected Attributes

• bool emitter_is_alive

5.164.1 Constructor & Destructor Documentation


- 5.164.1.1 MHAEvents::connector_base_t::connector_base_t ()
- 5.164.1.2 MHAEvents::connector_base_t::~connector_base_t() [virtual]

```
5.164.2 Member Function Documentation
5.164.2.1 void MHAEvents::connector_base_t::emit_event() [virtual]
Reimplemented in MHAEvents::connector_t< receiver_t >
                                                             (p. 468), MHAEvents↔
::connector t< MHAOvlFilter::fscale bw t >
                                                (p. 468), MHAEvents::connector t<
MHAParser::mhapluginloader_t > (p. 468), MHAEvents::connector_t< mhachain -
::mhachain::plugs t > (p. 468), and MHAEvents::connector t < MHAOvIFilter::fscale t >
(p. 468).
5.164.2.2 void MHAEvents::connector_base_t::emit_event (
                   const std::string & ) [virtual]
Reimplemented in MHAEvents::connector_t< receiver_t >
                                                             (p. 468), MHAEvents←
::connector t < MHAOvIFilter::fscale bw t > (p. 468), MHAEvents::connector t <
MHAParser::mhapluginloader_t > (p. 468), MHAEvents::connector_t< mhachain -
::mhachain::plugs_t > (p. 468), and MHAEvents::connector_t < MHAOvlFilter::fscale_t >
(p. 468).
5.164.2.3 void MHAEvents::connector_base_t::emit_event (
                   const std::string & ,
                   unsigned int,
                   unsigned int ) [virtual]
Reimplemented in MHAEvents::connector_t< receiver_t > (p. 468), MHAEvents
::connector_t< MHAOvlFilter::fscale_bw_t >
                                                (p. 468), MHAEvents::connector t<
MHAParser::mhapluginloader t > (p. 468), MHAEvents::connector t< mhachain←
::mhachain::plugs t > (p. 468), and MHAEvents::connector t < MHAOvIFilter::fscale t >
(p. 468).
5.164.2.4 void MHAEvents::connector_base_t::emitter_die ( )
5.164.3 Member Data Documentation
5.164.3.1 bool MHAEvents::connector_base_t::emitter_is_alive [protected]
The documentation for this class was generated from the following files:
```

- mha_event_emitter.h
- mha_events.cpp

5.165 MHAEvents::connector_t< receiver_t > Class Template Reference

Inheritance diagram for MHAEvents::connector_t< receiver_t >:

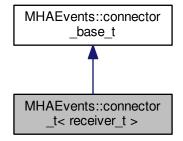

Public Member Functions

- connector_t (emitter_t *, receiver_t *, void(receiver_t::*)())
- connector_t (emitter_t *, receiver_t *, void(receiver_t::*)(const std::string &))
- connector_t (emitter_t *, receiver_t *, void(receiver_t::*)(const std::string &, unsigned int, unsigned int))
- ~connector_t ()

Private Member Functions

- void emit_event ()
- void emit_event (const std::string &)
- void emit_event (const std::string &, unsigned int, unsigned int)

Private Attributes

- emitter_t * emitter
- receiver t * receiver
- void(receiver_t::* eventhandler)()
- void(receiver_t::* eventhandler_s)(const std::string &)
- void(receiver_t::* eventhandler_suu)(const std::string &, unsigned int, unsigned int)

Additional Inherited Members

```
5.165.1 Constructor & Destructor Documentation
5.165.1.1 template < class receiver_t > MHAEvents::connector t < receiver_t >::connector t (
                      emitter t * e,
                      receiver_t * r,
                      void(receiver_t::*)() rfun )
5.165.1.2 template < class receiver_t > MHAEvents::connector_t < receiver_t >::connector_t (
                      emitter t * e.
                      receiver t * r.
                      void(receiver_t::*)(const std::string &) rfun )
5.165.1.3 template < class receiver_t > MHAEvents::connector t < receiver_t >::connector t (
                      emitter t * e,
                      receiver_t * r,
                      void(receiver_t::*)(const std::string &, unsigned int, unsigned int) rfun )
5.165.1.4 template < class receiver_t > MHAEvents::connector t < receiver_t >::~connector t (
5.165.2 Member Function Documentation
5.165.2.1 template < class receiver_t > void MHAEvents::connector_t < receiver_t > ::emit_event (
          ) [private], [virtual]
Reimplemented from MHAEvents::connector base t (p. 466).
5.165.2.2 template < class receiver_t > void MHAEvents::connector t < receiver_t > ::emit_event (
                      const std::string & arg ) [private], [virtual]
Reimplemented from MHAEvents::connector base t (p. 466).
5.165.2.3 template < class receiver_t > void MHAEvents::connector t < receiver_t > ::emit_event (
                      const std::string & arg,
                      unsigned int arg2,
                      unsigned int arg3 ) [private], [virtual]
```

Reimplemented from **MHAEvents::connector_base_t** (p. 466).

5.165.3 Member Data Documentation

```
5.165.3.1 template < class receiver_t > emitter_t * MHAEvents::connector_t < receiver_t >::emitter [private]
```

```
5.165.3.2 template < class receiver_t > receiver_t * MHAEvents::connector_t < receiver_t >::receiver [private]
```

```
5.165.3.3 template < class receiver_t > void(receiver_t::* MHAEvents::connector_t < receiver_t >::eventhandler) () [private]
```

- 5.165.3.4 template < class receiver_t > void(receiver_t::* MHAEvents::connector_t < receiver_t >::eventhandler_s) (const std::string &) [private]
- 5.165.3.5 template < class receiver_t > void(receiver_t::* MHAEvents::connector_t < receiver_t >::eventhandler_suu) (const std::string &, unsigned int, unsigned int) [private]

The documentation for this class was generated from the following file:

· mha_events.h

5.166 MHAEvents::emitter_t Class Reference

Class for emitting openMHA events.

Public Member Functions

- ~emitter_t ()
- void operator() ()

Emit an event without parameter.

• void **operator()** (const std::string &)

Emit an event with string parameter.

• void **operator()** (const std::string &, unsigned int, unsigned int)

Emit an event with string parameter and two unsigned int parameters.

- void connect (connector_base_t *)
- void disconnect (connector_base_t *)

Private Attributes

std::list< connector_base_t * > connections

```
5.166.1 Detailed Description
```

Class for emitting openMHA events.

Use the template class **MHAEvents::patchbay_t** (p. 471) for connecting to an emitter.

```
5.166.2 Constructor & Destructor Documentation
```

```
5.166.2.1 MHAEvents::emitter_t::~emitter_t ( )
```

5.166.3 Member Function Documentation

```
5.166.3.1 void MHAEvents::emitter_t::operator() ( )
```

Emit an event without parameter.

Emit an event with string parameter.

Emit an event with string parameter and two unsigned int parameters.

```
5.166.3.4 void MHAEvents::emitter_t::connect ( connector\_base\_t*c )
```

```
5.166.3.5 void MHAEvents::emitter_t::disconnect ( connector\_base\_t*c )
```

5.166.4 Member Data Documentation

```
5.166.4.1 std::list<connector_base_t*> MHAEvents::emitter_t::connections [private]
```

The documentation for this class was generated from the following files:

- mha_event_emitter.h
- mha_events.cpp

5.167 MHAEvents::patchbay_t< receiver_t > Class Template Reference

Patchbay which connects any event emitter with any member function of the parameter class.

Public Member Functions

- ∼patchbay t ()
- void connect (emitter_t *, receiver_t *, void(receiver_t::*)())

Connect a receiver member function void (receiver_t::*)() with an event emitter.

- void connect (emitter_t *, receiver_t *, void(receiver_t::*)(const std::string &))
 Connect a receiver member function void (receiver_t::*)(const std::string&) with an event emitter
- void connect (emitter_t *, receiver_t *, void(receiver_t::*)(const std::string &, unsigned int, unsigned int))

Private Attributes

std::list< connector t< receiver t > * > cons

5.167.1 Detailed Description

```
template < class receiver_t > class MHAEvents::patchbay_t < receiver_t >
```

Patchbay which connects any event emitter with any member function of the parameter class.

The connections created by the **connect()** (p. 471) function are hold until the destructor is called. To avoid access to invalid function pointers, it is required to destruct the patchbay before the receiver, usually by declaring the patchbay as a member of the receiver.

The receiver can be any claas or structure; the event callback can be either a member function without arguments or with const std::string& argument.

```
5.167.2 Constructor & Destructor Documentation
```

```
5.167.2.1 template < class receiver_t > MHAEvents::patchbay_t < receiver_t >::~patchbay_t ( )
```

5.167.3 Member Function Documentation

Connect a receiver member function void (receiver_t::*)() with an event emitter.

Create a connection.

The connection is removed when the patchbay is destructed.

Parameters

е	Pointer to an event emitter
r	Pointer to the receiver
rfun	Pointer to a member function of the receiver class

Connect a receiver member function void (receiver_t::*)(const std::string&) with an event emitter.

Create a connection.

The connection is removed when the patchbay is destructed.

Parameters

е	Pointer to an event emitter	
r	Pointer to the receiver	
rfun	Pointer to a member function of the receiver class	

5.167.4 Member Data Documentation

```
5.167.4.1 template < class receiver_t > std::list < connector_t < receiver_t > *> MHAEvents::patchbay_t < receiver_t > ::cons [private]
```

The documentation for this class was generated from the following file:

· mha_events.h

5.168 MHAFilter::adapt_filter_param_t Class Reference

Public Member Functions

adapt_filter_param_t (mha_real_t imu, bool ierr_in)

Public Attributes

```
mha_real_t mu
```

```
bool err_in
```

```
5.168.1 Constructor & Destructor Documentation
```

```
5.168.2 Member Data Documentation
```

```
5.168.2.1 mha_real_t MHAFilter::adapt_filter_param_t::mu
```

5.168.2.2 bool MHAFilter::adapt_filter_param_t::err_in

The documentation for this class was generated from the following files:

```
· mha_filter.hh
```

mha_filter.cpp

5.169 MHAFilter::adapt_filter_state_t Class Reference

Public Member Functions

- adapt_filter_state_t (int ntaps, int nchannels)
- void filter (mha_wave_t y, mha_wave_t e, mha_wave_t x, mha_wave_t d, mha_real
 _t mu, bool err_in)

Private Attributes

- int ntaps
- int nchannels
- MHASignal::waveform t W
- MHASignal::waveform_t X
- MHASignal::waveform_t od
- MHASignal::waveform_t oy

```
5.169.1 Constructor & Destructor Documentation
5.169.1.1
          MHAFilter::adapt filter state t::adapt filter state t (
                       int ntaps.
                       int nchannels )
5.169.2 Member Function Documentation
5.169.2.1
          void MHAFilter::adapt_filter_state_t::filter (
                       mha_wave_t y,
                       mha wave te,
                       mha_wave_t x,
                       mha_wave_t d,
                       mha_real_t mu,
                       bool err in )
5.169.3
        Member Data Documentation
5.169.3.1
          int MHAFilter::adapt_filter_state_t::ntaps [private]
5.169.3.2
          int MHAFilter::adapt_filter_state_t::nchannels [private]
5.169.3.3
          MHASignal::waveform_t MHAFilter::adapt_filter_state_t::W [private]
5.169.3.4
          MHASignal::waveform_t MHAFilter::adapt_filter_state_t::X [private]
          MHASignal::waveform t MHAFilter::adapt_filter_state_t::od [private]
5.169.3.5
```

The documentation for this class was generated from the following files:

MHASignal::waveform_t MHAFilter::adapt_filter_state_t::oy [private]


- · mha filter.hh
- mha_filter.cpp

5.170 MHAFilter::adapt_filter_t Class Reference

Adaptive filter.

5.169.3.6

Inheritance diagram for MHAFilter::adapt_filter_t:

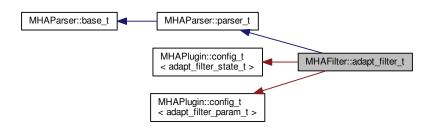

Public Member Functions

- adapt_filter_t (std::string)
- void filter (mha_wave_t y, mha_wave_t e, mha_wave_t x, mha_wave_t d)
- void set_channelcnt (unsigned int)

Private Member Functions

- void update_mu ()
- void update_ntaps ()

Private Attributes

```
    MHAParser::float_t mu
```

MHAParser::int_t ntaps

- MHAParser::bool_t err_in
- MHAEvents::patchbay_t< adapt_filter_t > connector
- unsigned int nchannels

Additional Inherited Members

5.170.1 Detailed Description

Adaptive filter.

```
5.170.2 Constructor & Destructor Documentation
```

```
5.170.2.1 MHAFilter::adapt_filter_t (
std::string help )
```

5.170.3 Member Function Documentation

```
5.170.3.1 void MHAFilter::adapt_filter_t::filter (

mha_wave_t y,

mha_wave_t e,

mha_wave_t x,

mha_wave_t d)
```

```
5.170.3.2 void MHAFilter::adapt_filter_t::set_channelcnt ( unsigned int nch )
```

5.170.3.3 void MHAFilter::adapt_filter_t::update_mu() [private]

```
5.170.3.4 void MHAFilter::adapt_filter_t::update_ntaps() [private]
5.170.4 Member Data Documentation
5.170.4.1 MHAParser::float_t MHAFilter::adapt_filter_t::mu [private]
5.170.4.2 MHAParser::int_t MHAFilter::adapt_filter_t::ntaps [private]
5.170.4.3 MHAParser::bool_t MHAFilter::adapt_filter_t::err_in [private]
5.170.4.4 MHAEvents::patchbay_t<adapt_filter_t> MHAFilter::adapt_filter_t::connector [private]
5.170.4.5 unsigned int MHAFilter::adapt_filter_t::nchannels [private]
```

The documentation for this class was generated from the following files:

- · mha filter.hh
- mha_filter.cpp
- 5.171 MHAFilter::blockprocessing_polyphase_resampling_t Class Reference

A class that does polyphase resampling and takes into account block processing.

Public Member Functions

 blockprocessing_polyphase_resampling_t (float source_srate, unsigned source_← fragsize, float target_srate, unsigned target_fragsize, float nyquist_ratio, float irslen, unsigned nchannels, bool add delay)

Contructs a polyphase resampling filter that can be used for blockprocessing with the given parameters.

- virtual ~blockprocessing polyphase resampling t ()
- void write (mha_wave_t &signal)

Write signal to the ringbuffer.

void read (mha_wave_t &signal)

Read resampled signal.

• bool can_read () const

Checks if the resampling ring buffer can produce another output signal block.

Private Attributes

- polyphase_resampling_t * resampling
- · unsigned fragsize in
- unsigned fragsize_out
- unsigned num_channels

5.171 MHAFilter::blockprocessing_polyphase_resampling_t Class Reference 477

5.171.1 Detailed Description

A class that does polyphase resampling and takes into account block processing.

5.171.2 Constructor & Destructor Documentation

5.171.2.1 MHAFilter::blockprocessing_polyphase_resampling_t::blockprocessing_polyphase_← resampling_t (

float source_srate, unsigned source_fragsize, float target_srate, unsigned target_fragsize, float nyquist_ratio, float irslen, unsigned nchannels, bool add_delay)

Contructs a polyphase resampling filter that can be used for blockprocessing with the given parameters.

Parameters

source_srate	Source sampling rate / Hz
source_fragsize	Fragment size of incoming audio blocks / frames at source_srate
target_srate	Target sampling rate / Hz
target_fragsize	Fragment size of produced audio blocks / frames at target_srate
nyquist_ratio	Low pass filter cutoff frequency relative to the nyquist frequency of the smaller of the two sampling rates. Example values: 0.8, 0.9
irslen	Impulse response length used for low pass filtering / s
nchannels	Number of audio channels
add_delay	To avoid underruns, a delay is generally necessary for round trip block size adaptations. It is only necessary to add this delay to one of the two resampling chains. Set this parameter to true for the first resampling object of a round trip pair. It will add the necessary delay, and calculate the size of the ring buffer appropriately, When set to false, only the ringbuffer size will be set sufficiently.

```
5.171.2.2 virtual MHAFilter::blockprocessing_polyphase_resampling_t::~blockprocessing_polyphase ← _ resampling_t( ) [inline], [virtual]
```

5.171.3 Member Function Documentation

5.171.3.1 void MHAFilter::blockprocessing_polyphase_resampling_t::write (mha_wave_t & signal)

Write signal to the ringbuffer.

vinte signal to the impound

Parameters

Exceptions

MHA_Error (p. 406)	Raises exception if there is not enough room, if the number of
	channels does not match, or if the number of frames is not equal to
	the number specified in the constructor

5.171.3.2 void MHAFilter::blockprocessing_polyphase_resampling_t::read (mha_wave_t & signal)

Read resampled signal.

Will perform the resampling and remove no longer needed samples from the input buffer.

Parameters

	signal	buffer to write the resampled signal to.
--	--------	--

Exceptions

MHA_Error (p. 406)	Raises exception if there is not enough input signal, if the number of
	channels of frames does not match.

5.171.3.3 bool MHAFilter::blockprocessing_polyphase_resampling_t::can_read() const [inline]

Checks if the resampling ring buffer can produce another output signal block.

- 5.171.4 Member Data Documentation
- 5.171.4.1 polyphase_resampling_t ∗ MHAFilter::blockprocessing_polyphase_resampling_t ← ::resampling [private]
- **5.171.4.2** unsigned MHAFilter::blockprocessing_polyphase_resampling_t::fragsize_in [private]
- **5.171.4.3** unsigned MHAFilter::blockprocessing_polyphase_resampling_t::fragsize_out [private]
- **5.171.4.4** unsigned MHAFilter::blockprocessing_polyphase_resampling_t::num_channels [private]

The documentation for this class was generated from the following files:

- mha filter.hh
- mha_filter.cpp

5.172 MHAFilter::complex bandpass t Class Reference

Complex bandpass filter.

Public Member Functions

complex_bandpass_t (std::vector< mha_complex_t > A, std::vector< mha_← complex_t > B)

Constructor with filter coefficients (one per channel)

- void set_state (mha_real_t val)
- void set_state (std::vector< mha_real_t > val)
- void set_state (mha_complex_t val)
- void set_weights (std::vector< mha_complex_t > new_B)

Allow to modify the input weights at a later stage.

- std::vector< mha_complex_t > get_weights () const
- void filter (const mha_wave_t &X, mha_spec_t &Y)

Filter method for real value input.

void filter (const mha_wave_t &X, mha_wave_t &Yre, mha_wave_t &Yim)

Filter method for real value input.

void filter (const mha_spec_t &X, mha_spec_t &Y)

Filter method for complex value input.

 void filter (const mha_wave_t &Xre, const mha_wave_t &Xim, mha_wave_t &Yre, mha_wave_t &Yim)

Filter method for complex value input.

• std::string inspect () const

Static Public Member Functions

- static std::vector< mha_complex_t > creator_A (std::vector< mha_real_t > cf, std←
 ::vector< mha_real_t > bw, mha_real_t srate, unsigned int order)
- static std::vector< mha_complex_t > creator_B (std::vector< mha_complex_t > A, unsigned int order)

Private Attributes

- std::vector< mha_complex_t > A_
- std::vector< mha_complex_t > B_
- std::vector< mha complex t > Yn

5.172.1 Detailed Description

Complex bandpass filter.

```
5.172.2 Constructor & Destructor Documentation
```

Constructor with filter coefficients (one per channel)

Parameters

```
A complex filter coefficients, one per bandB complex weights
```

```
5.172.3 Member Function Documentation
```

```
5.172.3.3 void MHAFilter::complex_bandpass_t::set_state ( mha real t val )
```

```
5.172.3.4 void MHAFilter::complex_bandpass_t::set_state ( std::vector< mha_real_t > val )
```

```
5.172.3.5 void MHAFilter::complex_bandpass_t::set_state ( mha_complex_t val )
```

Allow to modify the input weights at a later stage.

```
\textbf{5.172.3.7} \quad \textbf{std::vector} < \textbf{mha\_complex\_t} > \textbf{MHAFilter::complex\_bandpass\_t::get\_weights ( ) const} \\ \quad [\texttt{inline}]
```

Filter method for real value input.

Filter method for real value input.

Filter method for complex value input.

Filter method for complex value input.

```
5.172.3.12 std::string MHAFilter::complex_bandpass_t::inspect( ) const [inline]
```

5.172.4 Member Data Documentation

```
5.172.4.1 std::vector<mha_complex_t> MHAFilter::complex_bandpass_t::A_ [private]
```


The documentation for this class was generated from the following files:

- complex filter.h
- complex_filter.cpp

5.173 MHAFilter::diff_t Class Reference

Differentiator class (non-normalized)

Inheritance diagram for MHAFilter::diff_t:

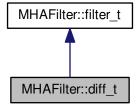

Public Member Functions

• diff_t (unsigned int ch)

Additional Inherited Members

5.173.1 Detailed Description

Differentiator class (non-normalized)

5.173.2 Constructor & Destructor Documentation


The documentation for this class was generated from the following files:

- mha_filter.hh
- mha_filter.cpp

5.174 MHAFilter::fftfilter_t Class Reference

FFT based FIR filter implementation.

Inheritance diagram for MHAFilter::fftfilter_t:

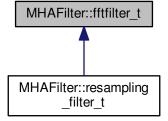

Public Member Functions

- fftfilter_t (unsigned int fragsize, unsigned int channels, unsigned int fftlen)
 Constructor.
- \sim fftfilter t ()
- void update_coeffs (const mha_wave_t *pwIRS)

Update the set of coefficients.

void filter (const mha_wave_t *pwln, mha_wave_t **ppwOut, const mha_wave_t *pw← IRS)

Apply filter with changing coefficients to a waveform fragment.

void filter (const mha_wave_t *pwln, mha_wave_t **ppwOut)

Apply filter to waveform fragment, without changing the coefficients.

void filter (const mha_wave_t *pwln, mha_wave_t **ppwOut, const mha_spec_t *ps
 Weights)

Apply filter with changing coefficients to a waveform fragment.

Private Attributes

- unsigned int fragsize
- · unsigned int channels
- unsigned int fftlen
- MHASignal::waveform_t wInput_fft
- mha_wave_t wInput
- MHASignal::waveform_t wOutput_fft
- mha_wave_t wOutput
- MHASignal::spectrum_t sInput
- MHASignal::spectrum_t sWeights
- MHASignal::waveform_t wIRS_fft
- mha_fft_t fft

5.174.1 Detailed Description

FFT based FIR filter implementation.

The maximal number of coefficients can be FFT length - fragsize + 1.

5.174.2 Constructor & Destructor Documentation

Constructor.

Parameters

fragsize	size Number of frames expected in input signal (each cyc	
channels	Number of channels expected in input signal.	
fftlen	FFT length of filter.	

```
5.174.2.2 MHAFilter::fftfilter_t::~fftfilter_t()
```

5.174.3 Member Function Documentation

Update the set of coefficients.

Parameters

Note

The number of channels in h must match the number of channels given in the constructor. The filter length is limited to fftlen-fragsize+1 (longer IRS will be shortened).

Apply filter with changing coefficients to a waveform fragment.

Parameters

pw⇔	Input signal pointer.
In	
111	

Return values

Parameters

pwIRS	Pointer to FIR coefficients structure.
-------	--

Apply filter to waveform fragment, without changing the coefficients.

Parameters

ри⊷	Input signal pointer.
In	

Return values

Apply filter with changing coefficients to a waveform fragment.

Parameters

pw⊷	Input signal pointer.
In	

Return values

-
Pointer to output signal pointer, will be set to a valid signal.
FOILUELTO OLIDUI SIGNAL DOILUEL WIILDE SELTO A VAIIO SIGNAL
. on to to output digital pointer, will be cot to a raile digital

Parameters

```
psWeights Pointer to filter weights structure.
```

5.174.4 Member Data Documentation

```
5.174.4.1 unsigned int MHAFilter::fftfilter_t::fragsize [private]
```

5.174.4.2 unsigned int MHAFilter::fftfilter_t::channels [private]

5.174.4.3 unsigned int MHAFilter::fftfilter_t::fftlen [private]


```
5.174.4.4 MHASignal::waveform_t MHAFilter::fftfilter_t::wlnput [private]
5.174.4.5 mha_wave_t MHAFilter::fftfilter_t::wlnput [private]
5.174.4.6 MHASignal::waveform_t MHAFilter::fftfilter_t::wOutput_fft [private]
5.174.4.7 mha_wave_t MHAFilter::fftfilter_t::wOutput [private]
5.174.4.8 MHASignal::spectrum_t MHAFilter::fftfilter_t::slnput [private]
5.174.4.9 MHASignal::spectrum_t MHAFilter::fftfilter_t::sWeights [private]
5.174.4.10 MHASignal::waveform_t MHAFilter::fftfilter_t::wIRS_fft [private]
5.174.4.11 mha_fft_t MHAFilter::fftfilter_t::fft [private]
```

The documentation for this class was generated from the following files:

- · mha filter.hh
- mha_filter.cpp
- 5.175 MHAFilter::fftfilterbank_t Class Reference

FFT based FIR filterbank implementation.

Inheritance diagram for MHAFilter::fftfilterbank_t:

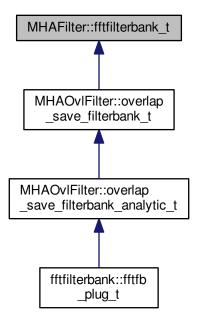

Public Member Functions

fftfilterbank_t (unsigned int fragsize, unsigned int inputchannels, unsigned int firchannels, unsigned int fftlen)

Constructor.

- →fftfilterbank t ()
- void update_coeffs (const mha_wave_t *h)

Update the set of coefficients.

- void filter (const mha_wave_t *s_in, mha_wave_t **s_out, const mha_wave_t *h)
 Apply filter with changing coefficients to a waveform fragment.
- void filter (const mha_wave_t *s_in, mha_wave_t **s_out)

Apply filter to waveform fragment, without changing the coefficients.

const mha_wave_t * get_irs () const

Return the current IRS.

Private Attributes

- · unsigned int fragsize
- unsigned int inputchannels
- · unsigned int firchannels
- unsigned int outputchannels
- · unsigned int fftlen
- MHASignal::waveform_t hw
- MHASignal::spectrum_t Hs
- MHASignal::waveform t xw
- MHASignal::spectrum_t Xs
- MHASignal::waveform_t yw
- MHASignal::spectrum t Ys
- MHASignal::waveform_t yw_temp
- MHASignal::waveform_t tail
- mha_fft_t fft

5.175.1 Detailed Description

FFT based FIR filterbank implementation.

This class convolves n input channels with m filter coefficient sets and returns n*m output channels.

The maximal number of coefficients can be FFT length - fragsize + 1.

5.175.2 Constructor & Destructor Documentation

Constructor.

Parameters

fragsize	Number of frames expected in input signal (each cycle).
inputchannels	Number of channels expected in input signal.
firchannels	Number of channels expected in FIR filter coefficients (= number of bands).
fftlen	FFT length of filter.

The number of output channels is inputchannels*firchannels.

```
5.175.2.2 MHAFilter::fftfilterbank_t::~fftfilterbank_t()
```

5.175.3 Member Function Documentation

Update the set of coefficients.

Parameters

h Coefficients structure

Note

The number of channels in h must match the number of channels given in the constructor, and the number of frames can not be more than fftlen-fragsize+1.

Apply filter with changing coefficients to a waveform fragment.

Parameters

S⊷	Input signal pointer.
_in	

Return values

s_out Pointer to output signal pointer, will be set to a valid signal

Parameters

```
h FIR coefficients
```

```
5.175.3.3 void MHAFilter::fftfilterbank_t::filter (

const mha_wave_t * s_in,

mha wave t ** s out )
```

Apply filter to waveform fragment, without changing the coefficients.

Parameters

<i>S</i> ⇔	Input signal pointer.
_in	

Return values

 $\textbf{5.175.3.4} \quad \textbf{const mha_wave_t} * \text{ MHAFilter::fftfilterbank_t::get_irs () const} \quad \texttt{[inline]}$

Return the current IRS.

5.175.4 Member Data Documentation

```
5.175.4.1 unsigned int MHAFilter::fftfilterbank_t::fragsize [private]
```

5.175.4.2 unsigned int MHAFilter::fftfilterbank_t::inputchannels [private]

5.175.4.3 unsigned int MHAFilter::fftfilterbank_t::firchannels [private]

5.175.4.4 unsigned int MHAFilter::fftfilterbank_t::outputchannels [private]

5.175.4.5 unsigned int MHAFilter::fftfilterbank_t::fftlen [private]

5.175.4.6 MHASignal::waveform t MHAFilter::fftfilterbank_t::hw [private]

5.175.4.7 MHASignal::spectrum_t MHAFilter::fftfilterbank_t::Hs [private]

5.175.4.8 MHASignal::waveform t MHAFilter::fftfilterbank_t::xw [private]

5.175.4.9 MHASignal::spectrum_t MHAFilter::fftfilterbank_t::Xs [private]


- **5.175.4.10** MHASignal::waveform_t MHAFilter::fftfilterbank_t::yw [private]
- **5.175.4.11 MHASignal::spectrum_t MHAFilter::fftfilterbank_t::Ys** [private]
- **5.175.4.12** MHASignal::waveform_t MHAFilter::fftfilterbank_t::yw_temp [private]
- **5.175.4.13** MHASignal::waveform_t MHAFilter::fftfilterbank_t::tail [private]
- **5.175.4.14 mha fft t MHAFilter::fftfilterbank_t::fft** [private]

The documentation for this class was generated from the following files:

- · mha_filter.hh
- · mha_filter.cpp
- 5.176 MHAFilter::filter_t Class Reference

Generic IIR filter class.

Inheritance diagram for MHAFilter::filter_t:

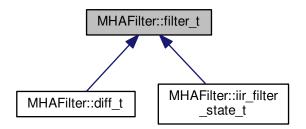

Public Member Functions

- filter_t (unsigned int ch, unsigned int lena, unsigned int lenb)
 Constructor.
- filter_t (unsigned int ch, const std::vector< mha_real_t > &vA, const std::vector< mha←
 _real_t > &vB)

Constructor with initialization of coefficients.

- filter_t (const MHAFilter::filter_t &src)
- ∼filter t()
- void filter (mha_wave_t *out, const mha_wave_t *in)

Filter all channels in a waveform structure.

void filter (mha_real_t *dest, const mha_real_t *src, unsigned int dframes, unsigned int frame_dist, unsigned int channel_dist, unsigned int channel_begin, unsigned int channel end)

Filter parts of a waveform structure.

• mha real t filter (mha real t x, unsigned int ch)

Filter one sample.

unsigned int get_len_A () const

Return length of recursive coefficients.

• unsigned int get_len_B () const

Return length of non-recursive coefficients.

Public Attributes

double * A

Pointer to recursive coefficients.

• double * B

Pointer to non-recursive coefficients.

Private Attributes

- unsigned int len_A
- unsigned int len_B
- unsigned int len
- unsigned int channels
- double * state

5.176.1 Detailed Description

Generic IIR filter class.

This class implements a generic multichannel IIR filter. It is realized as direct form II. It can work on any float array or on **mha_wave_t** (p. 455) structs. The filter coefficients can be directly accessed.

Todo Implement a more robust filter form.

5.176.2 Constructor & Destructor Documentation

Constructor.

Parameters

ch	Number of channels
lena	Number of recursive coefficients
lenb	Number of non-recursive coefficients

```
5.176.2.2 MHAFilter::filter_t: filter_t ( unsigned int \it ch, const std::vector< mha_real_t > & \it vA, const std::vector< mha_real_t > & \it vB)
```

Constructor with initialization of coefficients.

Parameters

ch	Number of channels.
vΑ	Recursive coefficients.
νB	Non-recursive coefficients.

Filter all channels in a waveform structure.

Parameters

out	Output signal
in	Input signal

Filter parts of a waveform structure.

Parameters

dest	Output signal.
src	Input signal.
dframes	Number of frames to be filtered.
frame_dist	Index distance between frames of one channel
channel_dist	Index distance between audio channels
channel_begin	Number of first channel to be processed
channel_end	Number of last channel to be processed

Filter one sample.

Parameters

Х	Input value
ch	Channel number to use in filter state

5.176.3.4 unsigned int MHAFilter::filter_t::get_len_A () const [inline]

Return length of recursive coefficients.

5.176.3.5 unsigned int MHAFilter::filter_t::get_len_B () const [inline]

Return length of non-recursive coefficients.

5.176.4 Member Data Documentation

5.176.4.1 double * MHAFilter::filter_t::A

Pointer to recursive coefficients.

```
5.176.4.2 double * MHAFilter::filter_t::B
```

Pointer to non-recursive coefficients.

```
5.176.4.3 unsigned int MHAFilter::filter_t::len_A [private]
```

5.176.4.4 unsigned int MHAFilter::filter_t::len_B [private]

5.176.4.5 unsigned int MHAFilter::filter_t::len [private]

5.176.4.6 unsigned int MHAFilter::filter_t::channels [private]

5.176.4.7 double* MHAFilter::filter_t::state [private]

The documentation for this class was generated from the following files:

- mha_filter.hh
- · mha filter.cpp

5.177 MHAFilter::gamma_flt_t Class Reference

Class for gammatone filter.

Public Member Functions

gamma_flt_t (std::vector< mha_real_t > cf, std::vector< mha_real_t > bw, mha_real = t srate, unsigned int order)

Constructor.

- ~gamma_flt_t ()
- void operator() (mha_wave_t &X, mha_spec_t &Y)

Filter method.

- void **operator()** (**mha_wave_t** &X, **mha_wave_t** &Yre, **mha_wave_t** &Yim) *Filter method.*
- void **operator()** (**mha_wave_t** &Yre, **mha_wave_t** &Yim, unsigned int stage) Filter method for specific stage.
- void phase_correction (unsigned int desired_delay, unsigned int inchannels)
- void set_weights (std::vector< mha_complex_t > new_B)
- void set weights (unsigned int stage, std::vector< mha complex t > new B)
- std::vector< mha_complex_t > get_weights () const
- std::vector< **mha complex t** > **get weights** (unsigned int stage) const
- std::vector< mha_real_t > get_resynthesis_gain () const
- void reset_state ()
- const std::vector< mha_complex_t > & get_A ()
- std::string inspect () const

Private Attributes

```
std::vector< mha_complex_t > A
```

std::vector< complex_bandpass_t > GF

- MHASignal::delay_t * delay
- std::vector< int > envelope_delay
- std::vector< mha_real_t > resynthesis_gain
- std::vector< mha real t > cf
- std::vector< mha_real_t > bw_
- · mha_real_t srate_

5.177.1 Detailed Description

Class for gammatone filter.

5.177.2 Constructor & Destructor Documentation

```
5.177.2.1 MHAFilter::gamma_flt_t::gamma_flt_t (  std::vector < mha\_real\_t > \textit{cf}, \\ std::vector < mha\_real\_t > \textit{bw}, \\ mha\_real\_t \; \textit{srate}, \\ unsigned int \; \textit{order} \; )
```

Constructor.

Parameters

cf	Center frequency in Hz.	
bw	Bandwidth in Hz (same number of entries as in cf).	
srate	Sampling frequency in Hz.	
order	Filter order.	

```
5.177.2.2 MHAFilter::gamma_flt_t::~gamma_flt_t ( )
```

5.177.3 Member Function Documentation

Filter method.


```
5.177.3.2 void MHAFilter::gamma_flt_t::operator() (
                      mha_wave_t & X,
                      mha wave t & Yre,
                      mha_wave_t & Yim ) [inline]
Filter method.
5.177.3.3 void MHAFilter::gamma_flt_t::operator() (
                      mha wave t & Yre,
                      mha_wave_t & Yim,
                      unsigned int stage ) [inline]
Filter method for specific stage.
5.177.3.4 void MHAFilter::gamma_flt_t::phase_correction (
                      unsigned int desired_delay,
                      unsigned int inchannels )
5.177.3.5 void MHAFilter::gamma_flt_t::set_weights (
                      std::vector< mha_complex_t > new_B)
5.177.3.6 void MHAFilter::gamma_flt_t::set_weights (
                      unsigned int stage,
                      std::vector< mha complex t > new_B)
5.177.3.7 std::vector<mha complex t> MHAFilter::gamma flt t::get weights ( ) const
          [inline]
5.177.3.8 std::vector<mha complex t> MHAFilter::gamma_flt_t::get_weights (
                      unsigned int stage ) const [inline]
5.177.3.9 std::vector<mha real t> MHAFilter::gamma flt t::get resynthesis gain ( ) const
          [inline]
5.177.3.10 void MHAFilter::gamma_flt_t::reset_state ( )
5.177.3.11 const std::vector<mha_complex_t>& MHAFilter::gamma_flt_t::get_A( ) [inline]
5.177.3.12 std::string MHAFilter::gamma_flt_t::inspect() const [inline]
5.177.4 Member Data Documentation
5.177.4.1 std::vector<mha_complex_t> MHAFilter::gamma_flt_t::A [private]
5.177.4.2 std::vector<complex_bandpass_t> MHAFilter::gamma_flt_t::GF [private]
```

```
5.177.4.3 MHASignal::delay_t* MHAFilter::gamma_flt_t::delay [private]
5.177.4.4 std::vector<int> MHAFilter::gamma_flt_t::envelope_delay [private]
5.177.4.5 std::vector<mha_real_t> MHAFilter::gamma_flt_t::resynthesis_gain [private]
5.177.4.6 std::vector<mha_real_t> MHAFilter::gamma_flt_t::cf_ [private]
5.177.4.7 std::vector<mha_real_t> MHAFilter::gamma_flt_t::bw_ [private]
5.177.4.8 mha_real_t MHAFilter::gamma_flt_t::srate_ [private]
```

The documentation for this class was generated from the following files:

- · complex_filter.h
- complex_filter.cpp
- 5.178 MHAFilter::iir_filter_state_t Class Reference

Inheritance diagram for MHAFilter::iir_filter_state_t:

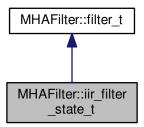

Public Member Functions

iir_filter_state_t (unsigned int channels, std::vector< float > cf_A, std::vector< float > cf_B)

Additional Inherited Members

5.178.1 Constructor & Destructor Documentation

```
5.178.1.1 MHAFilter::iir_filter_state_t::iir_filter_state_t ( unsigned int channels, std::vector< float > cf_A, std::vector< float > cf_B )
```


The documentation for this class was generated from the following files:

- mha_filter.hh
- · mha_filter.cpp

5.179 MHAFilter::iir filter t Class Reference

IIR filter class wrapper for integration into parser structure.

Inheritance diagram for MHAFilter::iir_filter_t:

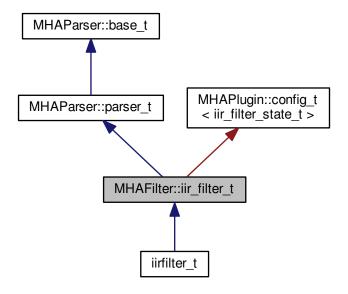

Public Member Functions

iir_filter_t (std::string help="IIR filter structure", std::string def_A="[1]", std::string def
 _B="[1]", unsigned int channels=1)

Constructor of the IIR filter.

void filter (mha_wave_t *y, const mha_wave_t *x)

The filter processes the audio signal.

• mha_real_t filter (mha_real_t x, unsigned int ch)

Filter a single audio sample.

void resize (unsigned int channels)

Change the number of channels after object creation.

Private Member Functions

void update_filter ()

Private Attributes

- MHAParser::vfloat_t A
- MHAParser::vfloat_t B
- MHAEvents::patchbay t< iir filter t > connector
- unsigned int nchannels

Additional Inherited Members

5.179.1 Detailed Description

IIR filter class wrapper for integration into parser structure.

This class implements an infinite impulse response filter. Since it inherits from **MHAParser**← ::parser_t (p. 644), it can easily be integrated in the openMHA configuration tree. It provides the configuration language variables "A" (vector of recursive filter coefficients) and "B" (vector of non-recursive filter coefficients).

The filter instance reacts to changes in filter coefficients through the openMHA configuration language, and uses the updated coefficients in the next invocation of the filter method.

Update of the coefficients is thread-safe and non-blocking. Simply add this subparser to your parser items and use the "filter" member function. Filter states are reset to all 0 on update.

5.179.2 Constructor & Destructor Documentation

```
5.179.2.1 MHAFilter::iir_filter_t:(

std::string help = "IIR filter structure",

std::string def_A = "[1]",

std::string def_B = "[1]",

unsigned int channels = 1)
```

Constructor of the IIR filter.

Initialises the sub-parser structure and the memory for holding the filter's state.

Parameters

help	The help string for the parser that groups the configuration variables of this filter. Could be used to describe the purpose of this IIR filter.
def_A	The initial value of the vector of the recursive filter coefficients, represented as string.
def_B	The initial value of the vector of the non-recursive filter coefficients, represented as string.
channels	The number of indipendent audio channels to process with this filter. Needed to allocate a state vector for each audio channel.

5.179.3 Member Function Documentation

The filter processes the audio signal.

All channels in the audio signal are processed using the same filter coefficients. Indipendent state is stored between calls for each audio channel.

Parameters

```
    y Pointer to output signal holder. The output signal is stored here. Has to have the same signal dimensions as the input signal x. In-place processing (y and x pointing to the same signal holder) is possible.
    x Pointer to input signal holder. Number of channels has to be the same as given to the constructor, or to the resize (p. 501) method.
```

Filter a single audio sample.

Parameters

X	The single audio sample
ch	Zero-based channel index. Use and change the state of channel ch. ch has to be less
	than the number of channels given to the constructor or the resize (p. 501) method.

Returns

the filtered result sample.

5.179.3.3 void MHAFilter::iir_filter_t::resize (unsigned int *channels*)

Change the number of channels after object creation.

Parameters

5.179.3.4 void MHAFilter::iir_filter_t::update_filter() [private]

5.179.4 Member Data Documentation

5.179.4.1 MHAParser::vfloat_t MHAFilter::iir_filter_t::A [private]

5.179.4.2 MHAParser::vfloat_t MHAFilter::iir_filter_t::B [private]

5.179.4.3 MHAEvents::patchbay_t<iir_filter_t> MHAFilter::iir_filter_t::connector [private]

5.179.4.4 unsigned int MHAFilter::iir_filter_t::nchannels [private]

The documentation for this class was generated from the following files:

- mha_filter.hh
- · mha_filter.cpp

5.180 MHAFilter::iir_ord1_real_t Class Reference

First order recursive filter.

Public Member Functions

• iir_ord1_real_t (std::vector< mha_real_t > A, std::vector< mha_real_t > B)

Constructor with filter coefficients (one per channel)

iir_ord1_real_t (std::vector< mha_real_t > tau, mha_real_t srate)

Constructor for low pass filter (one time constant per channel)

- void set_state (mha_real_t val)
- void set state (std::vector< mha real t > val)
- void set_state (mha_complex_t val)
- mha_real_t operator() (unsigned int ch, mha_real_t x)

Filter method for real value input, one element.

mha_complex_t operator() (unsigned int ch, mha_complex_t x)

Filter method for complex input, one element.

void operator() (const mha_wave_t &X, mha_wave_t &Y)

Filter method for real value input.

void operator() (const mha_spec_t &X, mha_spec_t &Y)

Filter method for complex value input.

 void operator() (const mha_wave_t &Xre, const mha_wave_t &Xim, mha_wave_t &Yre, mha_wave_t &Yim)

Filter method for complex value input.

Private Attributes

- std::vector< mha real t > A
- std::vector< mha real t > B
- std::vector< mha_complex_t > Yn

5.180.1 Detailed Description

First order recursive filter.

5.180.2 Constructor & Destructor Documentation

Constructor with filter coefficients (one per channel)

Constructor for low pass filter (one time constant per channel)

```
5.180.3 Member Function Documentation
5.180.3.1 void MHAFilter::iir_ord1_real_t::set_state (
                      mha_real_t val )
5.180.3.2 void MHAFilter::iir_ord1_real_t::set_state (
                      std::vector< mha real t > val )
5.180.3.3 void MHAFilter::iir_ord1_real_t::set_state (
                      mha_complex_t val )
5.180.3.4 mha_real_t MHAFilter::iir_ord1_real_t::operator() (
                      unsigned int ch,
                      mha_real_t x ) [inline]
Filter method for real value input, one element.
5.180.3.5 mha_complex_t MHAFilter::iir_ord1_real_t::operator() (
                      unsigned int ch,
                      mha_complex_t x ) [inline]
Filter method for complex input, one element.
5.180.3.6 void MHAFilter::iir_ord1_real_t::operator() (
                      const mha wave t & X,
                      mha wave t&Y) [inline]
Filter method for real value input.
5.180.3.7 void MHAFilter::iir ord1 real t::operator() (
                      const mha spec t & X,
                      mha_spec_t & Y ) [inline]
Filter method for complex value input.
5.180.3.8 void MHAFilter::iir_ord1_real_t::operator() (
                      const mha wave t & Xre,
                      const mha_wave_t & Xim,
                      mha wave t & Yre,
                      mha_wave_t & Yim ) [inline]
```

Filter method for complex value input.

5.180.4 Member Data Documentation

```
5.180.4.1 std::vector<mha_real_t> MHAFilter::iir_ord1_real_t::A_ [private]
```

5.180.4.2 std::vector<mha_real_t> MHAFilter::iir_ord1_real_t::B_ [private]

5.180.4.3 std::vector<mha_complex_t> MHAFilter::lir_ord1_real_t::Yn [private]


The documentation for this class was generated from the following files:

- mha_filter.hh
- · mha_filter.cpp

5.181 MHAFilter::o1_ar_filter_t Class Reference

First order attack-release lowpass filter.

Inheritance diagram for MHAFilter::o1_ar_filter_t:

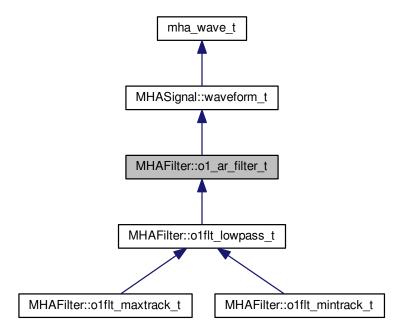

Public Member Functions

• o1_ar_filter_t (unsigned int channels, mha_real_t fs=1.0f, std::vector< mha_real_t > tau_a=std::vector< float >(1, 0.0f), std::vector< mha_real_t > tau_r=std::vector< float >(1, 0.0f))

Constructor, setting all taus to zero.

void set_tau_attack (unsigned int ch, mha_real_t tau)

Set the attack time constant.

void set_tau_release (unsigned int ch, mha_real_t tau)

Set the release time constant.

mha_real_t operator() (unsigned int ch, mha_real_t x)

Apply filter to value x, using state channel ch.

void operator() (const mha_wave_t &in, mha_wave_t &out)

Apply filter to a **mha_wave_t** (p. 455) data.

Protected Attributes

```
    MHASignal::waveform_t c1_a
```

- MHASignal::waveform_t c2_a
- MHASignal::waveform_t c1_r
- MHASignal::waveform_t c2_r
- mha real t fs

Additional Inherited Members

5.181.1 Detailed Description

First order attack-release lowpass filter.

This filter is the base of first order lowpass filter, maximum tracker and minimum tracker.

5.181.2 Constructor & Destructor Documentation

Constructor, setting all taus to zero.

The filter state can be accessed through the member functions of **MHASignal::waveform_t** (p. 767).

Parameters

channels	Number of independent filters
fs	Sampling rate (optional, default = 1)
tau_a	Attack time constants (optional, default = 0)
tau_r	Release time constants (optional, default = 0)

5.181.3 Member Function Documentation

Set the attack time constant.

Parameters

ch	Channel number
tau	Time constant

Set the release time constant.

Parameters

ch	Channel number
tau	Time constant

Apply filter to value x, using state channel ch.

Parameters

ch	Cannel number
X	Input value

Returns

Output value

Apply filter to a **mha_wave_t** (p. 455) data.

Parameters

in	Input signal
out	Output signal

The number of channels must match the number of filter bands.

5.181.4 Member Data Documentation

5.181.4.1 MHASignal::waveform_t MHAFilter::o1_ar_filter_t::c1_a [protected]
5.181.4.2 MHASignal::waveform_t MHAFilter::o1_ar_filter_t::c2_a [protected]
5.181.4.3 MHASignal::waveform_t MHAFilter::o1_ar_filter_t::c1_r [protected]
5.181.4.4 MHASignal::waveform_t MHAFilter::o1_ar_filter_t::c2_r [protected]

5.181.4.5 mha_real_t MHAFilter::o1_ar_filter_t::fs [protected]


The documentation for this class was generated from the following files:

- mha_filter.hh
- mha_filter.cpp

5.182 MHAFilter::o1flt_lowpass_t Class Reference

First order low pass filter.

Inheritance diagram for MHAFilter::o1flt_lowpass_t:

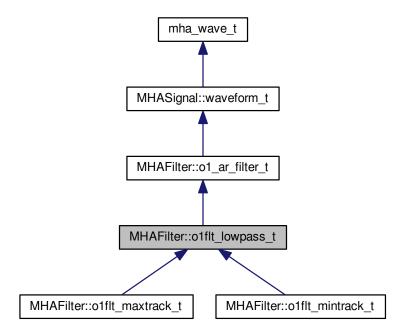

Public Member Functions

- o1flt_lowpass_t (const std::vector< mha_real_t > &, mha_real_t, mha_real_t=0)
 Constructor of low pass filter, sets sampling rate and time constants.
- void set_tau (unsigned int ch, mha_real_t tau)
 change the time constant in one channel
- void set_tau (mha_real_t tau)
 set time constant in all channels to tau
- mha_real_t get_c1 (unsigned int ch) const
- mha_real_t get_last_output (unsigned int ch) const

Additional Inherited Members

5.182.1 Detailed Description

First order low pass filter.

5.182.2 Constructor & Destructor Documentation

Constructor of low pass filter, sets sampling rate and time constants.

Parameters

tau	Vector of time constants
fs	Sampling rate
startval	Initial internal state value

5.182.3 Member Function Documentation

change the time constant in one channel

```
5.182.3.2 void MHAFilter::o1flt_lowpass_t::set_tau ( mha_real_t tau )
```

set time constant in all channels to tau


The documentation for this class was generated from the following files:

- · mha filter.hh
- mha_filter.cpp

5.183 MHAFilter::o1flt_maxtrack_t Class Reference

First order maximum tracker.

Inheritance diagram for MHAFilter::o1flt_maxtrack_t:

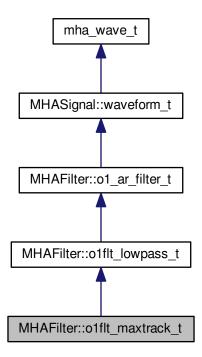

Public Member Functions

- o1flt_maxtrack_t (const std::vector< mha_real_t > &, mha_real_t, mha_real_t=0)

 Constructor of low pass filter, sets sampling rate and time constants.
- void set_tau (unsigned int ch, mha_real_t tau)
 change the time constant in one channel
- void set_tau (mha_real_t tau)
 set time constant in all channels to tau

Additional Inherited Members

5.183.1 Detailed Description

First order maximum tracker.

5.183.2 Constructor & Destructor Documentation

Constructor of low pass filter, sets sampling rate and time constants.

Parameters

tau	Vector of time constants
fs	Sampling rate
startval	Initial internal state value

5.183.3 Member Function Documentation

change the time constant in one channel

```
5.183.3.2 void MHAFilter::o1flt_maxtrack_t::set_tau ( mha_real_t tau )
```

set time constant in all channels to tau


The documentation for this class was generated from the following files:

- mha_filter.hh
- mha_filter.cpp

5.184 MHAFilter::o1flt_mintrack_t Class Reference

First order minimum tracker.

Inheritance diagram for MHAFilter::o1flt_mintrack_t:

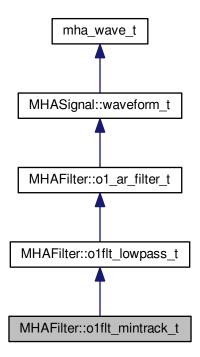

Public Member Functions

- o1flt_mintrack_t (const std::vector< mha_real_t > &, mha_real_t, mha_real_t=0)
- void set_tau (unsigned int ch, mha_real_t tau)
 change the time constant in one channel
- void set_tau (mha_real_t tau)
 set time constant in all channels to tau

Additional Inherited Members

5.184.1 Detailed Description

First order minimum tracker.

5.184.2 Constructor & Destructor Documentation

5.184.3 Member Function Documentation

```
5.184.3.1 void MHAFilter::o1flt_mintrack_t::set_tau (
unsigned int ch,
mha real t tau )
```

change the time constant in one channel

```
5.184.3.2 void MHAFilter::o1flt_mintrack_t::set_tau ( mha_real_t tau )
```

set time constant in all channels to tau

The documentation for this class was generated from the following files:

- · mha filter.hh
- mha_filter.cpp

5.185 MHAFilter::partitioned_convolution_t Class Reference

A filter class for partitioned convolution.

Classes

• struct index_t

Bookkeeping class.

Public Member Functions

• partitioned_convolution_t (unsigned int fragsize, unsigned int nchannels_in, unsigned int nchannels_out, const transfer_matrix_t &transfer)

Create a new partitioned convolver.

~partitioned_convolution_t ()

Free fftw resource allocated in constructor.

mha_wave_t * process (const mha_wave_t *s_in)processing

Public Attributes

• unsigned int fragsize

Audio fragment size, always equal to partition size.

• unsigned int nchannels_in

Number of audio input channels.

unsigned int nchannels_out

Number of audio output channels.

unsigned int output_partitions

The maximum number of partitions in any of the impulse responses.

· unsigned int filter_partitions

The total number of non-zero impulse response partitions.

MHASignal::waveform_t input_signal_wave

Buffer for input signal.

unsigned int current_input_signal_buffer_half_index

A counter modulo 2.

MHASignal::spectrum_t input_signal_spec

Buffer for FFT transformed input signal.

MHASignal::spectrum t frequency response

Buffers for frequency response spectra of impulse response partitions.

std::vector< index_t > bookkeeping

Keeps track of input channels, output channels, impulse response partition, and delay.

std::vector< MHASignal::spectrum_t > output_signal_spec

Buffers for FFT transformed output signal.

unsigned int current_output_partition_index

A counter modulo output partitions, indexing the "current" output partition.

MHASignal::waveform t output signal wave

Buffer for the wave output signal.

mha fft t fft

The FFT transformer.

5.185.1 Detailed Description

A filter class for partitioned convolution.

Impulse responses are partitioned into sections of fragment size. Audio signal is convolved with every partition and delayed as needed. Convolution is done according to overlap-save. FFT length used is 2 times fragment size.

5.185.2 Constructor & Destructor Documentation

5.185.2.1 MHAFilter::partitioned_convolution_t::partitioned_convolution_t (

unsigned int fragsize, unsigned int nchannels_in, unsigned int nchannels_out,

const transfer_matrix_t & transfer)

Create a new partitioned convolver.

Parameters

fragsize	Audio fragment size, equal to partition size.
nchannels_in	Number of input audio channels.
nchannels_out	Number of output audio channels.
transfer	A sparse matrix of impulse responses.

5.185.2.2 MHAFilter::partitioned_convolution_t::~partitioned_convolution_t ()

Free fftw resource allocated in constructor.

5.185.3 Member Function Documentation

processing

5.185.4 Member Data Documentation

5.185.4.1 unsigned int MHAFilter::partitioned convolution t::fragsize

Audio fragment size, always equal to partition size.

5.185.4.2 unsigned int MHAFilter::partitioned_convolution_t::nchannels_in

Number of audio input channels.

5.185.4.3 unsigned int MHAFilter::partitioned_convolution_t::nchannels_out

Number of audio output channels.

5.185.4.4 unsigned int MHAFilter::partitioned_convolution_t::output_partitions

The maximum number of partitions in any of the impulse responses.

Determines the size if the delay line.

5.185.4.5 unsigned int MHAFilter::partitioned_convolution_t::filter_partitions

The total number of non-zero impulse response partitions.

5.185.4.6 MHASignal::waveform_t MHAFilter::partitioned_convolution_t::input_signal_wave

Buffer for input signal.

Has nchannels_in channels and fragsize*2 frames

5.185.4.7 unsigned int MHAFilter::partitioned_convolution_t::current_input_signal_buffer_half_index

A counter modulo 2.

Indicates the buffer half in input signal wave into which to copy the current input signal.

5.185.4.8 MHASignal::spectrum_t MHAFilter::partitioned_convolution_t::input_signal_spec

Buffer for FFT transformed input signal.

Has nchannels_in channels and fragsize+1 frames (fft bins).

5.185.4.9 MHASignal::spectrum_t MHAFilter::partitioned_convolution_t::frequency_response

Buffers for frequency response spectra of impulse response partitions.

Each "channel" contains another partition of some impulse response. The bookkeeping array is used to keep track what to do with these frequency responses. This container has filter_ partitions channels and fragsize+1 frames (fft bins).

5.185.4.10 std::vector<index t> MHAFilter::partitioned convolution t::bookkeeping

Keeps track of input channels, output channels, impulse response partition, and delay.

The index into this array is the same as the "channel" index into the frequency_response array. Array has filter_partitions entries.

5.185.4.11 std::vector<MHASignal::spectrum_t> MHAFilter::partitioned_convolution_t::output_← signal_spec

Buffers for FFT transformed output signal.

For each array member, Number of channels is equal to nchannels_out, number of frames (fft bins) is equal to fragsize+1. Array size is equal to output partitions.

5.185.4.12 unsigned int MHAFilter::partitioned_convolution_t::current_output_partition_index

A counter modulo output_partitions, indexing the "current" output partition.

517

5.185.4.13 MHASignal::waveform_t MHAFilter::partitioned_convolution_t::output_signal_wave

Buffer for the wave output signal.

Number of channels is equal to nchannels_out, number of frames is equal to fragsize

5.185.4.14 mha fft t MHAFilter::partitioned_convolution_t::fft

The FFT transformer.

The documentation for this class was generated from the following files:

- · mha filter.hh
- mha_filter.cpp

5.186 MHAFilter::partitioned_convolution_t::index_t Struct Reference

Bookkeeping class.

Public Member Functions

- index_t (unsigned int src, unsigned int tgt, unsigned int dly)
 Data constructor.
- index t()

Default constructor for STL compatibility.

Public Attributes

unsigned int source_channel_index

The input channel index to apply the current partition to.

unsigned int target_channel_index

The index of the output channel to which the filter result should go.

unsigned int delay

The delay (in blocks) of this partition.

5.186.1 Detailed Description

Bookkeeping class.

For each impulse response partition, keeps track of which input to filter, which output channel to filter to, and the delay in blocks. Objects of class Index should be kept in an array with the same indices as the corresponding inpulse response partitions.

5.186.2 Constructor & Destructor Documentation

Data constructor.

Parameters

src	The input channel index to apply the current partition to.
tgt	The index of the output channel to which the filter result should go.
dly	The delay (in blocks) of this partition

5.186.2.2 MHAFilter::partitioned_convolution_t::index_t::index_t() [inline]

Default constructor for STL compatibility.

5.186.3 Member Data Documentation

5.186.3.1 unsigned int MHAFilter::partitioned_convolution_t::index_t::source_channel_index

The input channel index to apply the current partition to.

5.186.3.2 unsigned int MHAFilter::partitioned_convolution_t::index_t::target_channel_index

The index of the output channel to which the filter result should go.

5.186.3.3 unsigned int MHAFilter::partitioned_convolution_t::index_t::delay

The delay (in blocks) of this partition.

The documentation for this struct was generated from the following file:

· mha filter.hh

5.187 MHAFilter::polyphase_resampling_t Class Reference

A class that performs polyphase resampling.

Public Member Functions

- polyphase_resampling_t (unsigned n_up, unsigned n_down, mha_real_t nyquist_ratio, unsigned n_irs, unsigned n_ringbuffer, unsigned n_channels, unsigned n_prefill)
 Construct a polyphase resampler instance.
- void write (mha_wave_t &signal)

Write signal to the ringbuffer.

void read (mha_wave_t &signal)

Read resampled signal.

unsigned readable_frames () const

Number of frames at target sampling rate that can be produced.

Private Attributes

• unsigned upsampling_factor

Integer upsampling factor.

unsigned downsampling_factor

Integer downsampling factor.

unsigned now_index

Index of "now" in the interpolated sampling rate.

bool underflow

Set to true when an underflow has occurred.

MHAWindow::hanning_t impulse_response

Contains the impulse response of the lowpass filter needed for anti-aliasing.

MHASignal::ringbuffer_t ringbuffer

Storage of input signal.

5.187.1 Detailed Description

A class that performs polyphase resampling.

Background information: When resampling from one sampling rate to another, it helps when one sampling rate is a multiple of the other sampling rate: In the case of upsampling, the samples at the original rate are copied to the upsampled signal spread out with a constant number of zero samples between the originally adjacent samples. The signal is then low-pass filtered to avoid frequency aliasing and to fill the zero-samples with interpolated values. In the case of down-sampling, the signal is first low-pass filtered for anti-aliasing, and only every nth sample of the filtered output is used for the signal at the new sample rate. Of course, for finite-impulse-response (FIR) filters this means that only every nth sample needs to be computed.

When resampling from one sampling rate to another where neither is a multiple of the other, the signal first needs to be upsampled to a sampling rate that is a multiple of both (source and target) sampling rates, and then downsampled again to the target sampling rate. Instead of applying two separate lowpass filters directly after each other (one filter for upsampling and another for downsampling), it is sufficient to apply only one low-pass filter, when producing the output at the final target rate, with a cut-off frequency equal to the lower cut-off-frequency of the replaced two low-pass filters. Not filtering to produce a filtered signal already at the common multiple sampling rate has the side effect that this intermediate signal at the common multiple sampling rate keeps its filler zero samples unaltered. These zero samples can be taken advantage of when filtering to produce the output at the target rate: The zeros do not need to be multiplied with their corresponding filter coefficients, because the result is known to be zero again, and this zero product has no effect on the summation operation to compute a target sample at the target rate. To summarize, the following optimization techniques are available:

- The signal does not need to be stored in memory at the interpolation rate. It is sufficient to have the signal available at the source rate and to know where the zeros would be.
- The signal needs to be low-pass-filtered only once.
- The FIR low-pass filtering can take advantage of

- computing only filter outputs for the required samples at the target rate,
- skipping over zero-samples at the interpolation rate.

The procedure that takes advantage of these optimization possibilities is known as polyphase resampling.

This class implements polyphase resampling in this way for a source sampling rate and a target sampling rate that have common multiple, the interpolation sampling rate. Non-rational and drifting sample rates are outside the scope of this resampler.

5.187.2 Constructor & Destructor Documentation

Construct a polyphase resampler instance.

Allocates a ringbuffer with the given capacity $n_ringbuffer$. Client that triggers the constructor must ensure that the capacity $n_ringbuffer$ and the delay $n_prefill$ are sufficient, i.e. enough old and new samples are always available to compute sufficient samples in using an impulse response of length n_irs . Audio block sizes at both sides of the resampler have to be taken into account. Class MHASignal::blockprocessing_polyphase_resampling_t takes care of this, and it is recommended to use this class for block-based processing.

Based on *n_up*, *n_down*, *n_irs* and *nyquist_ratio*, a suitable sinc impulse response is computed and windowed with a hanning window to limit its extent.

The actual source sampling rate, target sampling rate, and interpolation sampling rate are not parameters to this constructors, because only their ratios matter.

Parameters

n_up	upsampling factor, ratio between interpolation rate and source rate.
n_down	downsampling factor, ratio between interpolation rate and target rate.
nyquist_ratio	low pass filter cutoff frequency relative to the nyquist frequency of the smaller of the two sampling rates. Example values: E.g. 0.8, 0.9
n_irs	length of impulse response (in samples at interpolation rate)
n_ringbuffer	length of ringbuffer, in samples at source sampling rate
n_channels	audio channels count
n_prefill	Prefill the ringbuffer with this many zero frames in samples at source sampling rate

5.187.3 Member Function Documentation

```
5.187.3.1 void MHAFilter::polyphase_resampling_t::write ( mha_wave_t & signal )
```

Write signal to the ringbuffer.

Signal contained in signal is appended to the audio frames already present in the ringbuffer.

Parameters

signal	input signal in original sampling rate
--------	--

Exceptions

MHA_Error (p. 406)	Raises exception if there is not enough room or if the number of
	channels does not match.

```
5.187.3.2 void MHAFilter::polyphase_resampling_t::read ( mha_wave_t & signal )
```

Read resampled signal.

Will perform the resampling and remove no longer needed samples from the input buffer.

Parameters

	1 66 1 11 11 1 11
sıanal	buffer to write the resampled signal to.
oigilai	bandi to write the resumpted signal to:

Exceptions

MHA_Error (p. 406)	Raises exception if there is not enough input signal or if the number
	of channels is too high.

5.187.3.3 unsigned MHAFilter::polyphase_resampling_t::readable_frames () const [inline]

Number of frames at target sampling rate that can be produced.

This method only checks for enough future samples present, therefore, this number can be positive and a read operation can still fail if there are not enough past samples present to perform the filtering for the first output sample. This could only happen if the constructor parameters $n_ringbuffer$ or $n_ringbuffer$ or $n_ringbuffer$ or $n_ringbuffer$ or $n_ringbuffer$ are present to compute the next target sample.

5.187.4 Member Data Documentation

5.187.4.1 unsigned MHAFilter::polyphase_resampling_t::upsampling_factor [private]

Integer upsampling factor.

Interpolation rate divided by source rate.

5.187.4.2 unsigned MHAFilter::polyphase_resampling_t::downsampling_factor [private]

Integer downsampling factor.

Interpolation rate divided by target rate.

5.187.4.3 unsigned MHAFilter::polyphase_resampling_t::now_index [private]

Index of "now" in the interpolated sampling rate.

Todo Index into what? What is the meaning of now?

5.187.4.4 bool MHAFilter::polyphase_resampling_t::underflow [private]

Set to true when an underflow has occurred.

When this is true, then the object can no longer be used. Underflows have to be avoided by clients, e.g. by checking that enough **readable_frames** (p. 521) are present before calling **read** (p. 521)

5.187.4.5 MHAWindow::hanning_t MHAFilter::polyphase_resampling_t::impulse_response [private]

Contains the impulse response of the lowpass filter needed for anti-aliasing.

The impulse response is stored at the interpolation sampling rate. We use an instance of $M \leftarrow HAWindow::hanning_t$ (p. 795) here because we are limiting the sinc impulse response with a Hanning window (otherwise the impulse response would extend indefinitely into past and future). And the samples inside an $MHAWindow::hanning_t$ (p. 795) can be altered with *=, which our constructor does.

5.187.4.6 MHASignal::ringbuffer_t MHAFilter::polyphase_resampling_t::ringbuffer [private]

Storage of input signal.

Part of the polyphase resampling optimization is that apart from the FIR impulse response, nothing is stored at the interpolation rate, saving memory and computation cycles.


The documentation for this class was generated from the following files:

- mha_filter.hh
- mha filter.cpp

5.188 MHAFilter::resampling_filter_t Class Reference

Hann shaped low pass filter for resampling.

Inheritance diagram for MHAFilter::resampling_filter_t:

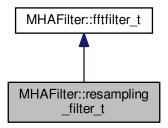

Public Member Functions

resampling_filter_t (unsigned int fftlen, unsigned int irslen, unsigned int channels, unsigned int Nup, unsigned int Ndown, double fCutOff)
 Constructor.

Static Public Member Functions

• static unsigned int fragsize validator (unsigned int fftlen, unsigned int irslen)

Private Attributes

· unsigned int fragsize

5.188.1 Detailed Description

Hann shaped low pass filter for resampling.

This class uses FFT filter at upsampled rate.

5.188.2 Constructor & Destructor Documentation

Constructor.

Parameters

fftlen	FFT length.
irslen	Length of filter.
channels	Number of channels to be filtered.
Nup	Upsampling ratio.
Ndown	Downsampling ratio.
fCutOff	Cut off frequency (relative to lower Nyquist Frequency)

5.188.3 Member Function Documentation

5.188.4 Member Data Documentation

5.188.4.1 unsigned int MHAFilter::resampling_filter_t::fragsize [private]

The documentation for this class was generated from the following files:

- · mha filter.hh
- mha_filter.cpp

5.189 MHAFilter::smoothspec_t Class Reference

Smooth spectral gains, create a windowed impulse response.

Public Member Functions

• smoothspec_t (unsigned int fftlen, unsigned int nchannels, const MHAWindow ::base_t &window, bool minphase, bool linphase_asym=false)

Constructor.

• void **smoothspec** (const **mha_spec_t** &s_in, **mha_spec_t** &s_out)

Create a smoothed spectrum.

void smoothspec (mha_spec_t &spec)

Create a smoothed spectrum (in place)

• void **spec2fir** (const **mha_spec_t** &spec, **mha_wave_t** &fir)

Return FIR coefficients.

∼smoothspec_t ()

Private Member Functions

void internal_fir (const mha_spec_t &)

Private Attributes

- · unsigned int fftlen
- unsigned int nchannels
- MHAWindow::base t window
- MHASignal::waveform_t tmp_wave
- MHASignal::spectrum_t tmp_spec
- MHASignal::minphase_t * minphase
- bool _linphase_asym
- mha_fft_t fft

5.189.1 Detailed Description

Smooth spectral gains, create a windowed impulse response.

Spectral gains are smoothed by multiplicating the impulse response with a window function.

If a minimal phase is used, then the original phase is discarded and replaced by the minimal phase function. In this case, the window is applied to the beginning of the inverse Fourier transform of the input spectrum, and the remaining signal set to zero. If the original phase is kept, the window is applied symmetrical arround zero, i.e. to the first and last samples of the inverse Fourier transform of the input spectrum. The **spec2fir()** (p. 526) function creates a causal impulse response by circular shifting the impulse response by half of the window length.

The signal dimensions of the arguments of **smoothspec()** (p. 526) must correspond to the FFT length and number of channels provided in the constructor. The function **spec2fir()** (p. 526) can fill signal structures with more than window length frames.

5.189.2 Constructor & Destructor Documentation

Constructor.

Parameters

fftlen	FFT length of input spectrum (fftlen/2+1 bins)
nchannels	Number of channels in input spectrum
window	Window used for smoothing
minphase	Use minimal phase (true) or original phase (false)
linphase_asym	Keep phase, but apply full window at beginning of IRS

```
5.189.2.2 MHAFilter::smoothspec_t::~smoothspec_t ( )
```

5.189.3 Member Function Documentation

Create a smoothed spectrum.

Parameters

S⇔	Input spectrum
_in	

Return values

```
s_out Output spectrum
```

Create a smoothed spectrum (in place)

Parameters

```
spec | Spectrum to be smoothed.
```

Return FIR coefficients.

Parameters

```
spec Input spectrum
```

Return values

```
fir FIR coefficients, minimum length is window length
```

The documentation for this class was generated from the following files:

- mha_filter.hh
- mha filter.cpp

5.190 MHAFilter::thirdoctave_analyzer_t Class Reference

Public Member Functions

- thirdoctave_analyzer_t (mhaconfig_t cfg)
- mha_wave_t * process (mha_wave_t *)
- unsigned int **nbands** ()
- unsigned int **nchannels** ()
- std::vector< mha_real_t > get_cf_hz ()

Static Public Member Functions

```
• static std::vector< mha real t > cf generator (mhaconfig t cfg)
```

- static std::vector< mha_real_t > bw_generator (mhaconfig_t cfg)
- static std::vector< mha_real_t > dup (std::vector< mha_real_t >, mhaconfig_t cfg)

Private Attributes

- mhaconfig_t cfg_
- std::vector< mha_real_t > cf
- MHAFilter::gamma_flt_t fb
- MHASignal::waveform_t out_chunk
- MHASignal::waveform_t out_chunk_im

```
5.190.1 Constructor & Destructor Documentation
```

5.190.2 Member Function Documentation

```
5.190.2.1 mha_wave_t * MHAFilter::thirdoctave_analyzer_t::process ( mha_wave_t * sln )
```

- 5.190.2.2 unsigned int MHAFilter::thirdoctave_analyzer_t::nbands ()
- 5.190.2.3 unsigned int MHAFilter::thirdoctave_analyzer_t::nchannels ()
- 5.190.2.4 std::vector< mha_real_t > MHAFilter::thirdoctave_analyzer_t::get_cf_hz()
- 5.190.2.6 std::vector< mha_real_t > MHAFilter::thirdoctave_analyzer_t::bw_generator (mhaconfig_t cfg) [static]
- 5.190.3 Member Data Documentation
- **5.190.3.1 mhaconfig_t** MHAFilter::thirdoctave_analyzer_t::cfg_ [private]

5.190.3.2 std::vector<mha_real_t> MHAFilter::thirdoctave_analyzer_t::cf [private]
5.190.3.3 MHAFilter::gamma_flt_t MHAFilter::thirdoctave_analyzer_t::fb [private]
5.190.3.4 MHASignal::waveform_t MHAFilter::thirdoctave_analyzer_t::out_chunk [private]
5.190.3.5 MHASignal::waveform_t MHAFilter::thirdoctave_analyzer_t::out_chunk_im [private]

The documentation for this class was generated from the following files:

- complex_filter.h
- complex_filter.cpp
- 5.191 MHAFilter::transfer_function_t Struct Reference

a structure containing a source channel number, a target channel number, and an impulse response.

Public Member Functions

transfer function t ()

Default constructor for STL conformity.

 transfer_function_t (unsigned int source_channel_index, unsigned int target_← channel_index, const std::vector< float > &impulse_response)

Data constructor.

- unsigned int **partitions** (unsigned int fragsize) const
 - for the given partition size, return the number of partitions of the impulse response.
- unsigned int non_empty_partitions (unsigned int fragsize) const
 - for the given partition size, return the number of non-empty partitions of the impulse response.
- bool isempty (unsigned int fragsize, unsigned int index) const checks if the partition contains only zeros

Public Attributes

unsigned int source_channel_index

Source audio channel index for this transfer function.

unsigned int target_channel_index

Target audio channel index for this transfer function.

std::vector< float > impulse response

Impulse response of transfer from source to target channel.

5.191.1 Detailed Description

a structure containing a source channel number, a target channel number, and an impulse response.

5.191.2 Constructor & Destructor Documentation

```
5.191.2.1 MHAFilter::transfer_function_t::transfer_function_t() [inline]
```

Default constructor for STL conformity.

Not used.

Data constructor.

Parameters

source_channel_index	Source audio channel index for this transfer function
target_channel_index	Target audio channel index for this transfer function
impulse_response	Impulse response of transfer from source to target channel

5.191.3 Member Function Documentation

for the given partition size, return the number of partitions of the impulse response.

Parameters

fragsize	partition size

Returns

number of partitions occupied by the impulse response

for the given partition size, return the number of non-empty partitions of the impulse response.

Parameters

Returns

the number of non-empty partitions of the impulse response, i.e. partitions containing only zeros are not counted.

checks if the partition contains only zeros

Parameters

fragsize	partition size
index	partition index

Returns

true when this partition of the impulse response contains only zeros.

5.191.4 Member Data Documentation

5.191.4.1 unsigned int MHAFilter::transfer_function_t::source_channel_index

Source audio channel index for this transfer function.

5.191.4.2 unsigned int MHAFilter::transfer_function_t::target_channel_index

Target audio channel index for this transfer function.

5.191.4.3 std::vector<float> MHAFilter::transfer_function_t::impulse_response

Impulse response of transfer from source to target channel.

The documentation for this struct was generated from the following files:

- mha filter.hh
- mha_filter.cpp

5.192 MHAFilter::transfer_matrix_t Struct Reference

A sparse matrix of transfer function partitionss.

Inherits vector< transfer_function_t >.

Public Member Functions

- std::valarray< unsigned int > partitions (unsigned fragsize) const
 Returns an array of the results of calling the partitions() (p. 532) method on every matrix member.
- std::valarray < unsigned int > non_empty_partitions (unsigned int fragsize) const
 Returns an array of the results of calling the non_empty_partitions() (p. 532) method on every
 matrix member.

5.192.1 Detailed Description

A sparse matrix of transfer function partitionss.

Each matrix element knows its position in the matrix, so they can be stored as a vector.

5.192.2 Member Function Documentation

```
5.192.2.1 std::valarray<unsigned int> MHAFilter::transfer_matrix_t::partitions ( unsigned fragsize ) const [inline]
```

Returns an array of the results of calling the **partitions()** (p. 532) method on every matrix member.

```
5.192.2.2 std::valarray<unsigned int> MHAFilter::transfer_matrix_t::non_empty_partitions ( unsigned int fragsize ) const [inline]
```

Returns an array of the results of calling the **non_empty_partitions()** (p. 532) method on every matrix member.


The documentation for this struct was generated from the following file:

· mha_filter.hh

5.193 MHAIOJack::io_jack_t Class Reference

Main class for JACK IO.

Inheritance diagram for MHAIOJack::io jack t:

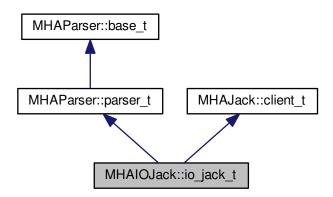

Public Member Functions

- io_jack_t (unsigned int fragsize, float samplerate, IOProcessEvent_t proc_event, void *proc_handle, IOStartedEvent_t start_event, void *start_handle, IOStoppedEvent← _t stop_event, void *stop_handle)
- void prepare (int, int)
 Allocate buffers, activate JACK client and install internal ports.
- void release ()

Private Member Functions

- void reconnect inports ()
 - Connect the input ports when connection variable is accessed.
- void reconnect_outports ()
 - Connect the output ports when connection variable is accessed.
- void get_physical_input_ports ()
- void get_physical_output_ports ()
- void get_all_input_ports ()
- void get_all_output_ports ()
- void get delays in ()
- void get_delays_out ()
- void read_get_cpu_load ()
- void read_get_xruns ()
- void read_get_scheduler ()

Private Attributes

- unsigned int fw_fragsize
- float fw samplerate
- MHAParser::string_t servername
- MHAParser::string t clientname
- MHAParser::vstring t connections in
- MHAParser::vint mon t delays in
- MHAParser::vstring t connections out
- MHAParser::vint mon t delays out
- MHAParser::vstring t portnames in
- MHAParser::vstring_t portnames_out
- MHAParser::vstring_mon_t ports_in_physical
- MHAParser::vstring_mon_t ports_out_physical
- MHAParser::vstring_mon_t ports_in_all
- MHAParser::vstring_mon_t ports_out_all
- MHAParser::parser_t ports_parser
- MHAParser::float_mon_t state_cpuload
- MHAParser::int_mon_t state_xruns
- MHAParser::int_mon_t state_priority
- MHAParser::string_mon_t state_scheduler
- MHAParser::parser_t state_parser
- MHAEvents::patchbay_t< io_jack_t > patchbay

Additional Inherited Members

5.193.1 Detailed Description

Main class for JACK IO.

This class registers a JACK client. JACK and framework states are managed by this class.

5.193.2 Constructor & Destructor Documentation

5.193.3 Member Function Documentation

Allocate buffers, activate JACK client and install internal ports.

```
5.193.3.2 void io_jack_t::release (
                     void )
5.193.3.3 void io_jack_t::reconnect_inports( ) [private]
Connect the input ports when connection variable is accessed.
5.193.3.4 void io_jack_t::reconnect_outports ( ) [private]
Connect the output ports when connection variable is accessed.
5.193.3.5 void io_jack_t::get_physical_input_ports() [private]
5.193.3.6 void io_jack_t::get_physical_output_ports( ) [private]
5.193.3.7 void io_jack_t::get_all_input_ports( ) [private]
5.193.3.8 void io_jack_t::get_all_output_ports( ) [private]
5.193.3.9 void io_jack_t::get_delays_in( ) [private]
5.193.3.10 void io_jack_t::get_delays_out( ) [private]
5.193.3.11 void io_jack_t::read_get_cpu_load( ) [private]
5.193.3.12 void io_jack_t::read_get_xruns( ) [private]
5.193.3.13 void io_jack_t::read_get_scheduler( ) [private]
5.193.4 Member Data Documentation
5.193.4.1 unsigned int MHAIOJack::io_jack_t::fw_fragsize [private]
5.193.4.2 float MHAIOJack::io_jack_t::fw_samplerate [private]
5.193.4.3 MHAParser::string_t MHAIOJack::io_jack_t::servername [private]
5.193.4.4 MHAParser::string_t MHAIOJack::io_jack_t::clientname [private]
5.193.4.5 MHAParser::vstring_t MHAIOJack::io_jack_t::connections_in [private]
5.193.4.6 MHAParser::vint_mon_t MHAIOJack::io_jack_t::delays_in [private]
```


```
5.193.4.7 MHAParser::vstring t MHAIOJack::io jack t::connections out [private]
5.193.4.8 MHAParser::vint_mon_t MHAIOJack::io_jack_t::delays_out [private]
5.193.4.9 MHAParser::vstring_t MHAIOJack::io_jack_t::portnames_in [private]
5.193.4.10 MHAParser::vstring t MHAIOJack::io jack t::portnames out [private]
5.193.4.11 MHAParser::vstring mon t MHAIOJack::io jack t::ports in physical [private]
5.193.4.12 MHAParser::vstring mon t MHAIOJack::io jack t::ports out physical [private]
5.193.4.13 MHAParser::vstring mon t MHAIOJack::io jack t::ports in all [private]
5.193.4.14 MHAParser::vstring_mon_t MHAIOJack::io_jack_t::ports_out_all [private]
5.193.4.15 MHAParser::parser_t MHAIOJack::io_jack_t::ports_parser [private]
5.193.4.16 MHAParser::float mon t MHAIOJack::io_jack_t::state_cpuload [private]
5.193.4.17 MHAParser::int mon t MHAIOJack::io_jack_t::state_xruns [private]
5.193.4.18 MHAParser::int mon t MHAIOJack::io_jack_t::state_priority [private]
5.193.4.19 MHAParser::string mon t MHAIOJack::io_jack_t::state_scheduler [private]
5.193.4.20 MHAParser::parser t MHAIOJack::io_jack_t::state_parser [private]
5.193.4.21 MHAEvents::patchbay t<io jack t> MHAIOJack::io_jack_t::patchbay [private]
The documentation for this class was generated from the following file:
```

MHAIOJack.cpp

5.194 MHAIOJackdb::io_jack_t Class Reference

Main class for JACK IO.

Inheritance diagram for MHAIOJackdb::io_jack_t:

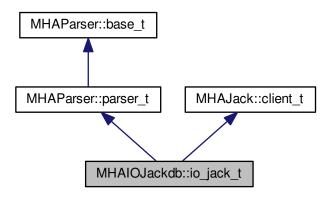

Public Member Functions

- io_jack_t (unsigned int fragsize, float samplerate, IOProcessEvent_t proc_event, void *proc_handle, IOStartedEvent_t start_event, void *start_handle, IOStoppedEvent← _t stop_event, void *stop_handle)
- void prepare (int, int)

Allocate buffers, activate JACK client and install internal ports.

- void release ()
- bool fail_on_async_jackerror () const

Private Member Functions

- int IOProcessEvent inner (mha wave t *sln, mha wave t **sOut)
- void reconnect_inports ()

Connect the input ports when connection variable is accessed.

void reconnect_outports ()

Connect the output ports when connection variable is accessed.

- void get physical input ports ()
- void get_physical_output_ports ()
- void get_all_input_ports ()
- void get_all_output_ports ()
- void read_get_cpu_load ()
- void read_get_xruns ()
- void read_get_scheduler ()
- void set_use_jack_transport ()
- void set_locate ()

Static Private Member Functions

static int IOProcessEvent_inner (void *handle, mha_wave_t *sIn, mha_wave_t **s
 — Out)

Private Attributes

- IOProcessEvent_t proc_event
- void * proc handle
- unsigned int mha_fragsize
- float mha_samplerate
- · unsigned int fragsize ratio
- MHAParser::string_t servername
- MHAParser::string_t clientname
- MHAParser::vstring_t connections_in
- MHAParser::vstring_t connections_out
- MHAParser::vstring_t portnames_in
- MHAParser::vstring_t portnames_out
- MHAParser::bool_t fail_on_async_jackerr
- MHAParser::bool_t use_jack_transport
- MHAParser::float t locate
- MHAParser::float_mon_t server_srate
- MHAParser::int_mon_t server_fragsize
- MHAParser::vstring_mon_t ports_in_physical
- MHAParser::vstring_mon_t ports_out_physical
- MHAParser::vstring_mon_t ports_in_all
- MHAParser::vstring mon t ports out all
- MHAParser::parser_t ports_parser
- MHAParser::float_mon_t state_cpuload
- MHAParser::int_mon_t state_xruns
- MHAParser::int mon t state priority
- MHAParser::string_mon_t state_scheduler
- MHAParser::parser_t state_parser
- MHASignal::waveform_t * pwinner_out
- MHAEvents::patchbay_t< io_jack_t > patchbay

Additional Inherited Members

5.194.1 Detailed Description

Main class for JACK IO.

This class registers a JACK client. JACK and framework states are managed by this class.

```
5.194.2 Constructor & Destructor Documentation
5.194.2.1 io_jack_t::io_jack_t (
                      unsigned int fragsize,
                      float samplerate,
                      IOProcessEvent_t proc_event,
                      void * proc_handle,
                      IOStartedEvent_t start_event,
                      void * start_handle,
                      IOStoppedEvent t stop event,
                      void * stop_handle )
5.194.3 Member Function Documentation
5.194.3.1 void io_jack_t::prepare (
                      int nch_in,
                      int nch_out )
Allocate buffers, activate JACK client and install internal ports.
5.194.3.2 void io_jack_t::release (
                      void )
5.194.3.3 bool MHAIOJackdb::io_jack_t::fail_on_async_jackerror( ) const [inline]
5.194.3.4 int io_jack_t::IOProcessEvent_inner (
                      void * handle,
                      mha wave t * sln,
                      mha_wave_t ** sOut ) [static], [private]
5.194.3.5 int io_jack_t::IOProcessEvent_inner (
                      mha wave t * sln,
                      mha_wave_t ** sOut ) [private]
5.194.3.6 void io_jack_t::reconnect_inports() [private]
Connect the input ports when connection variable is accessed.
5.194.3.7 void io_jack_t::reconnect_outports() [private]
```

Connect the output ports when connection variable is accessed.

```
5.194.3.8 void io_jack_t::get_physical_input_ports() [private]
5.194.3.9 void io_jack_t::get_physical_output_ports( ) [private]
5.194.3.10 void io_jack_t::get_all_input_ports( ) [private]
5.194.3.11 void io_jack_t::get_all_output_ports( ) [private]
5.194.3.12 void io_jack_t::read_get_cpu_load( ) [private]
5.194.3.13 void io_jack_t::read_get_xruns( ) [private]
5.194.3.14 void io_jack_t::read_get_scheduler( ) [private]
5.194.3.15 void io_jack_t::set_use_jack_transport() [private]
5.194.3.16 void io_jack_t::set_locate() [private]
5.194.4 Member Data Documentation
5.194.4.1 IOProcessEvent_t MHAIOJackdb::io_jack_t::proc_event [private]
5.194.4.2 void* MHAIOJackdb::io_jack_t::proc_handle [private]
5.194.4.3 unsigned int MHAIOJackdb::io_jack_t::mha_fragsize [private]
5.194.4.4 float MHAIOJackdb::io_jack_t::mha_samplerate [private]
5.194.4.5 unsigned int MHAIOJackdb::io_jack_t::fragsize_ratio [private]
5.194.4.6
         MHAParser::string t MHAIOJackdb::io_jack_t::servername [private]
5.194.4.7 MHAParser::string t MHAIOJackdb::io_jack_t::clientname [private]
5.194.4.8 MHAParser::vstring t MHAIOJackdb::io_jack_t::connections_in [private]
5.194.4.9 MHAParser::vstring t MHAIOJackdb::io_jack_t::connections_out [private]
5.194.4.10 MHAParser::vstring t MHAIOJackdb::io_jack_t::portnames_in [private]
5.194.4.11 MHAParser::vstring_t MHAIOJackdb::io_jack_t::portnames_out [private]
5.194.4.12 MHAParser::bool_t MHAlOJackdb::io_jack_t::fail_on_async_jackerr [private]
```


```
5.194.4.13 MHAParser::bool_t MHAIOJackdb::io_jack_t::use_jack_transport [private]
5.194.4.14 MHAParser::float_t MHAIOJackdb::io_jack_t::locate [private]
5.194.4.15 MHAParser::float_mon_t MHAlOJackdb::io_jack_t::server_srate [private]
5.194.4.16 MHAParser::int_mon_t MHAIOJackdb::io_jack_t::server_fragsize [private]
5.194.4.17 MHAParser::vstring mon t MHAlOJackdb::io_jack_t::ports_in_physical [private]
5.194.4.18 MHAParser::vstring mon t MHAIOJackdb::io jack t::ports out physical
          [private]
5.194.4.19 MHAParser::vstring mon t MHAIOJackdb::io_jack_t::ports_in_all [private]
5.194.4.20 MHAParser::vstring_mon_t MHAlOJackdb::io_jack_t::ports_out_all [private]
5.194.4.21 MHAParser::parser_t MHAIOJackdb::io_jack_t::ports_parser [private]
5.194.4.22 MHAParser::float mon t MHAIOJackdb::io_jack_t::state_cpuload [private]
5.194.4.23 MHAParser::int_mon_t MHAIOJackdb::io_jack_t::state_xruns [private]
5.194.4.24 MHAParser::int_mon_t MHAIOJackdb::io_jack_t::state_priority [private]
5.194.4.25 MHAParser::string mon t MHAIOJackdb::io jack t::state scheduler [private]
5.194.4.26 MHAParser::parser t MHAlOJackdb::io_jack_t::state_parser [private]
5.194.4.27 MHASignal::waveform_t* MHAIOJackdb::io_jack_t::pwinner_out [private]
5.194.4.28 MHAEvents::patchbay_t<io_jack_t> MHAIOJackdb::io_jack_t::patchbay
          [private]
```

The documentation for this class was generated from the following file:

MHAIOJackdb.cpp

5.195 MHAIOPortAudio::device_info_t Class Reference

Inheritance diagram for MHAIOPortAudio::device_info_t:

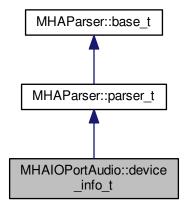

Public Member Functions

- device_info_t ()
- void fill_info ()

Public Attributes

- MHAParser::int_mon_t numDevices
- MHAParser::vint_mon_t structVersion
- MHAParser::vstring_mon_t name
- MHAParser::vint_mon_t hostApi
- MHAParser::vint_mon_t maxInputChannels
- MHAParser::vint_mon_t maxOutputChannels
- MHAParser::vfloat_mon_t defaultLowInputLatency
- MHAParser::vfloat_mon_t defaultLowOutputLatency
- MHAParser::vfloat_mon_t defaultHighInputLatency
- MHAParser::vfloat_mon_t defaultHighOutputLatency
- MHAParser::vfloat_mon_t defaultSampleRate

Additional Inherited Members


5.195.1 Constructor & Destructor Documentation	
5.195.1.1 MHAIOPortAudio::device_info_t::device_info_t() [inline]	
5.195.2 Member Function Documentation	
5.195.2.1 void MHAIOPortAudio::device_info_t::fill_info() [inline]	
5.195.3 Member Data Documentation	
5.195.3.1 MHAParser::int_mon_t MHAIOPortAudio::device_info_t::numDevices	
5.195.3.2 MHAParser::vint_mon_t MHAIOPortAudio::device_info_t::structVersion	
5.195.3.3 MHAParser::vstring_mon_t MHAIOPortAudio::device_info_t::name	
5.195.3.4 MHAParser::vint_mon_t MHAIOPortAudio::device_info_t::hostApi	
5.195.3.5 MHAParser::vint_mon_t MHAIOPortAudio::device_info_t::maxInputChannels	
5.195.3.6 MHAParser::vint_mon_t MHAIOPortAudio::device_info_t::maxOutputChannels	
5.195.3.7 MHAParser::vfloat_mon_t MHAIOPortAudio::device_info_t::defaultLowInputLatency	
5.195.3.8 MHAParser::vfloat_mon_t MHAIOPortAudio::device_info_t::defaultLowOutputLatency	
5.195.3.9 MHAParser::vfloat_mon_t MHAIOPortAudio::device_info_t::defaultHighInputLatency	
5.195.3.10 MHAParser::vfloat_mon_t MHAIOPortAudio::device_info_t::defaultHighOutputLatency	
5.195.3.11 MHAParser::vfloat_mon_t MHAIOPortAudio::device_info_t::defaultSampleRate	
The documentation for this class was generated from the following file:	

MHAIOPortAudio.cpp

5.196 MHAIOPortAudio::io_portaudio_t Class Reference

Main class for Portaudio sound IO.

Inheritance diagram for MHAIOPortAudio::io_portaudio_t:

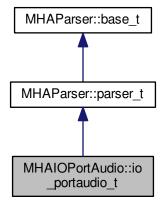

Public Member Functions

- io_portaudio_t (unsigned int fragsize, float samplerate, IOProcessEvent_t proc_
 event, void *proc_handle, IOStartedEvent_t start_event, void *start_handle, IO←
 StoppedEvent_t stop_event, void *stop_handle)
- void device_name_updated ()
- void device_index_updated ()
- ~io portaudio t ()
- void cmd_prepare (int, int)
- void cmd_start ()
- void cmd_stop ()
- void cmd_release ()
- int **portaudio_callback** (const void *input, void *output, unsigned long frame_count, const PaStreamCallbackTimeInfo *time_info, PaStreamCallbackFlags status_flags)

Private Attributes

- · device_info_t device_info
- MHASignal::waveform_t * s_in
- mha_wave_t * s_out
- · float samplerate
- unsigned int nchannels_out
- · unsigned int nchannels_in

- · unsigned int fragsize
- IOProcessEvent_t proc_event
- void * proc_handle
- IOStartedEvent_t start_event
- void * start handle
- IOStoppedEvent_t stop_event
- void * stop_handle
- PaStream * portaudio_stream
- MHAParser::string_t device_name
- MHAParser::int_t device_index
- MHAEvents::patchbay_t< io_portaudio_t > patchbay

Additional Inherited Members

5.196.1 Detailed Description

Main class for Portaudio sound IO.

```
5.196.2 Constructor & Destructor Documentation
```

```
5.196.2.2 MHAIOPortAudio::io_portaudio_t::~io_portaudio_t( ) [inline]
```

5.196.3 Member Function Documentation

```
5.196.3.1 void MHAIOPortAudio::io_portaudio_t::device_name_updated( ) [inline]
```

5.196.3.2 void MHAIOPortAudio::io_portaudio_t::device_index_updated() [inline]

5.196.3.4 void MHAIOPortAudio::io_portaudio_t::cmd_start ()

```
5.196.3.5 void MHAIOPortAudio::io portaudio t::cmd stop ( )
5.196.3.6 void MHAIOPortAudio::io portaudio t::cmd release ( )
5.196.3.7 int MHAIOPortAudio::io_portaudio_t::portaudio_callback (
                      const void * input,
                      void * output.
                      unsigned long frame_count,
                      const PaStreamCallbackTimeInfo * time info,
                      PaStreamCallbackFlags status_flags )
5.196.4 Member Data Documentation
5.196.4.1
         device info t MHAIOPortAudio::io portaudio t::device info [private]
5.196.4.2 MHASignal::waveform t*MHAIOPortAudio::io_portaudio_t::s_in [private]
5.196.4.3 mha wave t* MHAIOPortAudio::io portaudio t::s out [private]
5.196.4.4 float MHAIOPortAudio::io_portaudio_t::samplerate [private]
5.196.4.5 unsigned int MHAIOPortAudio::io_portaudio_t::nchannels_out [private]
5.196.4.6
         unsigned int MHAIOPortAudio::io_portaudio_t::nchannels_in [private]
5.196.4.7
         unsigned int MHAIOPortAudio::io portaudio t::fragsize [private]
5.196.4.8 IOProcessEvent t MHAIOPortAudio::io portaudio t::proc event [private]
5.196.4.9 void* MHAIOPortAudio::io_portaudio_t::proc_handle [private]
5.196.4.10 IOStartedEvent_t MHAIOPortAudio::io_portaudio_t::start_event [private]
5.196.4.11 void* MHAIOPortAudio::io portaudio t::start handle [private]
5.196.4.12 IOStoppedEvent tMHAIOPortAudio::io_portaudio_t::stop_event [private]
5.196.4.13 void* MHAIOPortAudio::io portaudio t::stop handle [private]
5.196.4.14 PaStream * MHAIOPortAudio::io_portaudio_t::portaudio_stream [private]
5.196.4.15 MHAParser::string t MHAIOPortAudio::io_portaudio_t::device_name [private]
5.196.4.16 MHAParser::int_t MHAIOPortAudio::io_portaudio_t::device_index [private]
5.196.4.17
          MHAEvents::patchbay_t<io_portaudio_t> MHAIOPortAudio::io_portaudio_t \leftarrow
           ::patchbay [private]
```


The documentation for this class was generated from the following file:

MHAIOPortAudio.cpp

5.197 MHAJack::client_avg_t Class Reference

Generic JACK client for averaging a system response across time.

Inheritance diagram for MHAJack::client_avg_t:

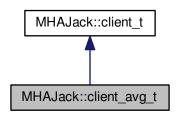

Public Member Functions

- client_avg_t (const std::string &name, const unsigned int &nrep_)
 Constructor for averaging client.
- void io (mha_wave_t *s_out, mha_wave_t *s_in, const std::vector< std::string > &p_out, const std::vector< std::string > &p_in, float *srate=NULL, unsigned int *fragsize=NULL)

Recording function.

Private Member Functions

- void proc (mha_wave_t *sIn, mha_wave_t **sOut)
- void IOStoppedEvent ()

Static Private Member Functions

- static int proc (void *handle, mha_wave_t *sln, mha_wave_t **sOut)
- static void IOStoppedEvent (void *handle, int proc_err, int io_err)

Private Attributes

- bool b stopped
- unsigned int pos
- mha_wave_t * sn_in
- mha wave t * sn out
- std::string name
- MHASignal::waveform_t * frag_out
- const unsigned int nrep
- unsigned int **n**
- bool b_ready

Additional Inherited Members

5.197.1 Detailed Description

Generic JACK client for averaging a system response across time.

```
5.197.2 Constructor & Destructor Documentation
```

Constructor for averaging client.

Parameters

name⊷	Name of JACK client
_ nrep⇔	Number of repetitions
_	rtamber of repetitions

5.197.3 Member Function Documentation

Recording function.

long-description

Parameters

is_out	Input (test) signal, which will be repeated
is_in	System response (averaged, same length as input required)
p_out	Ports to play back the test signal
p_in	Ports to record from the system response
srate	Pointer to sampling rate variable, will be filled with server sampling rate
fragsize	Pointer to fragment size variable, will be filled with server fragment size

```
5.197.3.2 int MHAJack::client_avg_t::proc (
                     void * handle,
                     mha wave t * sln,
                     mha_wave_t ** sOut ) [static], [private]
5.197.3.3 void MHAJack::client_avg_t::IOStoppedEvent (
                     void * handle,
                     int proc_err,
                     int io_err ) [static], [private]
5.197.3.4 void MHAJack::client_avg_t::proc (
                     mha_wave_t * sln,
                     mha_wave_t ** sOut ) [private]
5.197.3.5 void MHAJack::client_avg_t::IOStoppedEvent( ) [private]
5.197.4 Member Data Documentation
5.197.4.1 bool MHAJack::client_avg_t::b_stopped [private]
5.197.4.2 unsigned int MHAJack::client_avg_t::pos [private]
5.197.4.3 mha_wave_t* MHAJack::client_avg_t::sn_in [private]
5.197.4.4 mha wave t* MHAJack::client_avg_t::sn_out [private]
5.197.4.5 std::string MHAJack::client_avg_t::name [private]
5.197.4.6 MHASignal::waveform_t* MHAJack::client_avg_t::frag_out [private]
5.197.4.7 const unsigned int MHAJack::client_avg_t::nrep [private]
5.197.4.8 unsigned int MHAJack::client_avg_t::n [private]
5.197.4.9 bool MHAJack::client_avg_t::b_ready [private]
```


The documentation for this class was generated from the following files:

- · mhajack.h
- mhajack.cpp

5.198 MHAJack::client noncont t Class Reference

Generic client for synchronous playback and recording of waveform fragments.

Inheritance diagram for MHAJack::client_noncont_t:

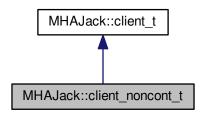

Public Member Functions

- client_noncont_t (const std::string &name, bool use_jack_transport=false)
- void io (mha_wave_t *s_out, mha_wave_t *s_in, const std::vector< std::string
 &p_out, const std::vector< std::string
 &p_in, float *srate=NULL, unsigned int *fragsize=NULL)

Private Member Functions

- void proc (mha_wave_t *sln, mha_wave_t **sOut)
- void IOStoppedEvent ()

Static Private Member Functions

- static int proc (void *handle, mha_wave_t *sln, mha_wave_t **sOut)
- static void **IOStoppedEvent** (void *handle, int proc err, int io err)

Private Attributes

- bool b_stopped
- unsigned int pos
- mha_wave_t * sn_in
- mha_wave_t * sn_out
- std::string name
- MHASignal::waveform_t * frag_out

Additional Inherited Members

```
5.198.1 Detailed Description
```

Generic client for synchronous playback and recording of waveform fragments.

```
5.198.2 Constructor & Destructor Documentation
5.198.2.1 MHAJack::client_noncont_t::client_noncont_t (
                      const std::string & name,
                      bool use_jack_transport = false )
5.198.3 Member Function Documentation
5.198.3.1 void MHAJack::client_noncont_t::io (
                      mha wave t * s out,
                      mha wave t * s in,
                      const std::vector< std::string > & p_out,
                      const std::vector< std::string > & p_in,
                      float * srate = NULL,
                      unsigned int * fragsize = NULL )
5.198.3.2 int MHAJack::client_noncont_t::proc (
                      void * handle,
                      mha wave t * sln,
                      mha wave t ** sOut ) [static], [private]
5.198.3.3 void MHAJack::client_noncont_t::IOStoppedEvent (
                      void * handle,
                      int proc_err,
                      int io_err ) [static], [private]
5.198.3.4 void MHAJack::client_noncont_t::proc (
                      mha wave t * sln.
                      mha wave t ** sOut ) [private]
5.198.3.5 void MHAJack::client_noncont_t::lOStoppedEvent() [private]
5.198.4 Member Data Documentation
5.198.4.1 bool MHAJack::client_noncont_t::b_stopped [private]
5.198.4.2 unsigned int MHAJack::client_noncont_t::pos [private]
```

```
5.198.4.3 mha_wave_t* MHAJack::client_noncont_t::sn_in [private]
```

5.198.4.4 mha_wave_t* MHAJack::client_noncont_t::sn_out [private]

5.198.4.5 std::string MHAJack::client_noncont_t::name [private]

5.198.4.6 MHASignal::waveform_t* MHAJack::client_noncont_t::frag_out [private]


The documentation for this class was generated from the following files:

- · mhajack.h
- mhajack.cpp

5.199 MHAJack::client_t Class Reference

Generic asynchronous JACK client.

Inheritance diagram for MHAJack::client t:

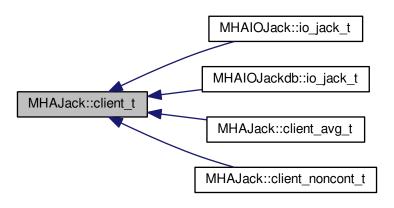

Public Member Functions

- void **prepare** (const std::string &client_name, const unsigned int &**nchannels_in**, const unsigned int &**nchannels_out**)

Allocate buffers, activate JACK client and install internal ports.

void prepare (const std::string &server_name, const std::string &client_name, const unsigned int &nchannels_in, const unsigned int &nchannels_out)

Allocate buffers, ports, and activates JACK client.

void release ()

Remove JACK client and deallocate internal ports and buffers.

- void start (bool fail_on_async_jack_error=true)
- void stop ()
- void connect_input (const std::vector< std::string > &)

Connect the input ports when connection variable is accessed.

void connect_output (const std::vector< std::string > &)

Connect the output ports when connection variable is accessed.

- unsigned int get_fragsize () const
- float get_srate () const
- unsigned long **get xruns** ()
- unsigned long get xruns reset ()
- std::string **str_error** (int err)
- void get_ports (std::vector< std::string > &, unsigned long jack_flags)
 Get a list of Jack ports.
- std::vector< std::string > get_my_input_ports ()
- std::vector< std::string > get_my_output_ports ()
- void **set input portnames** (const std::vector< std::string > &)
- void set_output_portnames (const std::vector< std::string > &)
- float get_cpu_load ()
- void set use jack transport (bool ut)

Protected Attributes

• jack client t * jc

Private Member Functions

void prepare_impl (const char *server_name, const char *client_name, const unsigned int &nchannels_in, const unsigned int &nchannels_out)

Allocate buffers, activate JACK client and allocates jack ports Registers the jack client with the given server and activates it.

- void internal start ()
- void internal_stop ()
- void stopped (int, int)
- int jack_proc_cb (jack_nframes_t)

This is the main processing callback.

• int jack_xrun_cb ()

Static Private Member Functions

- static int jack_proc_cb (jack_nframes_t, void *)
- static int jack_xrun_cb (void *)

Private Attributes

- unsigned long num xruns
- · unsigned int fragsize
- float samplerate
- unsigned int nchannels_in
- · unsigned int nchannels out
- IOProcessEvent_t proc_event
- void * proc handle
- IOStartedEvent_t start_event
- void * start_handle
- IOStoppedEvent t stop event
- void * stop handle
- MHASignal::waveform_t * s_in
- mha_wave_t * s_out
- MHAJack::port t ** inch
- MHAJack::port_t ** outch
- · unsigned int flags
- bool b_prepared
- bool use_jack_transport
- jack_transport_state_t jstate_prev
- std::vector< std::string > input portnames
- std::vector< std::string > output portnames
- bool fail_on_async_jackerror

5.199.1 Detailed Description

Generic asynchronous JACK client.

```
5.199.2 Constructor & Destructor Documentation
```

```
5.199.2.1 MHAJack::client t::client t (
```

```
IOProcessEvent_t proc_event,
```

void * proc_handle = NULL,

IOStartedEvent_t start_event = NULL,

void * start_handle = NULL,

IOStoppedEvent_t stop_event = NULL,

void * stop_handle = NULL,

bool use_jack_transport = false)

5.199.3 Member Function Documentation

```
5.199.3.1 void MHAJack::client_t::prepare (
```

const std::string & client_name, const unsigned int & nch_in, const unsigned int & nch_out)

Allocate buffers, activate JACK client and install internal ports.

Registers the jack client with the default jack server and activates it.

Parameters

client_name	Name of this jack client
nch_in	Input ports to register
nch_out	Output ports to register

Allocate buffers, ports, and activates JACK client.

Registers the jack client with specified jack server and activates it.

Parameters

server_name	Name of the jack server to register with
client_name	Name of this jack client
nch_in	Input ports to register
nch_out	Output ports to register

Remove JACK client and deallocate internal ports and buffers.

Connect the input ports when connection variable is accessed.

Connect the output ports when connection variable is accessed.

```
5.199.3.8 unsigned int MHAJack::client_t::get_fragsize( ) const [inline]
5.199.3.9 float MHAJack::client_t::get_srate( ) const [inline]
5.199.3.10 unsigned long MHAJack::client_t::get_xruns( ) [inline]
5.199.3.11 unsigned long MHAJack::client_t::get_xruns_reset( )
5.199.3.12 std::string MHAJack::client_t::str_error( int err )
5.199.3.13 void MHAJack::client_t::get_ports( std::vector< std::string > & res, unsigned long jack_flags )
```

Get a list of Jack ports.

Parameters

res	Result string vector
jack_flags	Jack port flags (JackPortInput etc.)

Allocate buffers, activate JACK client and allocates jack ports Registers the jack client with the given server and activates it.

Parameters

server_name	Name of the jack server to register with
client_name	Name of this jack client
nch_in	Input ports to register
nch_out	Output ports to register

5.199.3.21 void MHAJack::client_t::internal_start() [private]

```
5.199.3.22 void MHAJack::client_t::internal_stop( ) [private]
5.199.3.23 void MHAJack::client_t::stopped (
                       int proc_err,
                       int io_err ) [private]
5.199.3.24 int MHAJack::client_t::jack_proc_cb (
                       jack_nframes_t n,
                       void * h ) [static], [private]
5.199.3.25 int MHAJack::client_t::jack_proc_cb (
                       jack_nframes_t n ) [private]
This is the main processing callback.
Here happens double buffering and downsampling.
5.199.3.26 int MHAJack::client_t::jack_xrun_cb (
                       void * h ) [static], [private]
5.199.3.27 int MHAJack::client_t::jack_xrun_cb() [inline], [private]
5.199.4 Member Data Documentation
5.199.4.1
         unsigned long MHAJack::client_t::num_xruns [private]
5.199.4.2 unsigned int MHAJack::client_t::fragsize [private]
5.199.4.3 float MHAJack::client_t::samplerate [private]
5.199.4.4 unsigned int MHAJack::client t::nchannels in [private]
5.199.4.5 unsigned int MHAJack::client_t::nchannels_out [private]
5.199.4.6 IOProcessEvent_t MHAJack::client_t::proc_event [private]
```

```
5.199.4.7 void* MHAJack::client_t::proc_handle [private]
5.199.4.8 IOStartedEvent_t MHAJack::client_t::start_event [private]
5.199.4.9 void* MHAJack::client_t::start_handle [private]
5.199.4.10 IOStoppedEvent tMHAJack::client_t::stop_event [private]
5.199.4.11 void* MHAJack::client_t::stop_handle [private]
5.199.4.12 MHASignal::waveform_t* MHAJack::client_t::s_in [private]
5.199.4.13 mha_wave_t* MHAJack::client_t::s_out [private]
5.199.4.14 MHAJack::port_t** MHAJack::client_t::inch [private]
5.199.4.15 MHAJack::port_t** MHAJack::client_t::outch [private]
5.199.4.16 jack_client_t* MHAJack::client_t::jc [protected]
5.199.4.17 unsigned int MHAJack::client_t::flags [private]
5.199.4.18 bool MHAJack::client_t::b_prepared [private]
5.199.4.19 bool MHAJack::client_t::use_jack_transport [private]
5.199.4.20 jack_transport_state_t MHAJack::client_t::jstate_prev [private]
5.199.4.21 std::vector<std::string> MHAJack::client_t::input_portnames [private]
5.199.4.22 std::vector<std::string> MHAJack::client_t::output_portnames [private]
5.199.4.23 bool MHAJack::client_t::fail_on_async_jackerror [private]
```

The documentation for this class was generated from the following files:

- mhajack.h
- mhajack.cpp

5.200 MHAJack::port t Class Reference

Class for one channel/port.

Public Types

```
Public Member Functions
```

```
    port_t (jack_client_t *jc, dir_t dir, int id)
    port_t (jack_client_t *jc, dir_t dir, const std::string &id)
    Constructor to create port with specific name.
```

• ~port t()

- void read (mha wave t *s, unsigned int ch)
- void write (mha_wave_t *s, unsigned int ch)
- void **mute** (unsigned int n)
- void connect_to (const char *pn)
- const char * get_short_name ()

Return the port name.

Private Attributes

```
    dir_t dir_type
```

- jack_port_t * port
- jack_default_audio_sample_t * iob
- jack_client_t * jc

5.200.1 Detailed Description

Class for one channel/port.

This class represents one JACK port. Double buffering for asynchronous process callbacks is managed by this class.

```
5.200.2 Member Enumeration Documentation
```

```
5.200.2.1 enum MHAJack::port_t::dir_t
```

Enumerator

input

output

5.200.3 Constructor & Destructor Documentation

Parameters

jc	JACK client.
dir	Direction (input/output).
id	Number in port name (starting with 1).

Constructor to create port with specific name.

Parameters

jc	JACK client.
dir	Direction (input/output).
id	Port name.

```
5.200.3.3 MHAJack::port_t::~port_t ( )
```

5.200.4 Member Function Documentation

Parameters

S	Signal structure to store the audio data.
ch	Channel number in audio data structure to be used.

Parameters

s	Signal structure from which the audio data is read.
ch	Channel number in audio data structure to be used.

```
5.200.4.3 void MHAJack::port_t::mute ( unsigned int n )
```

Parameters

n Number of samples to be muted (must be the same as reported by Jack processing callback).

Parameters

pn | Port name to connect to

5.200.4.5 const char * MHAJack::port_t::get_short_name ()

Return the port name.

5.200.5 Member Data Documentation

```
5.200.5.1 dir_t MHAJack::port_t::dir_type [private]
```

5.200.5.2 jack_port_t* MHAJack::port_t::port [private]

5.200.5.3 jack_default_audio_sample_t* MHAJack::port_t::iob [private]


5.200.5.4 jack_client_t* MHAJack::port_t::jc [private]

The documentation for this class was generated from the following files:

- · mhajack.h
- · mhajack.cpp

5.201 MHAKernel::algo_comm_class_t Class Reference

Inheritance diagram for MHAKernel::algo_comm_class_t:

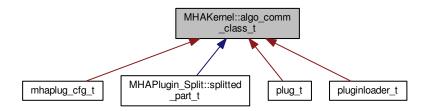

Public Member Functions

- algo_comm_class_t ()
- virtual ~algo_comm_class_t ()
- algo_comm_t get_c_handle ()
- virtual void local_insert_var (const char *, comm_var_t)
- virtual void local_remove_var (const char *)
- virtual void local_remove_ref (void *)
- virtual bool local_is_var (const char *)
- virtual void local_get_var (const char *, comm_var_t *)
- virtual std::string local_get_entries ()
- virtual comm var map t::size type size () const

Static Public Member Functions

- static int insert_var (void *, const char *, comm_var_t)
- static int insert var int (void *, const char *, int *)
- static int insert_var_float (void *, const char *, float *)
- static int remove_var (void *, const char *)
- static int **remove ref** (void *, void *)
- static int is_var (void *, const char *)
- static int get_var (void *, const char *, comm_var_t *)
- static int get_var_int (void *, const char *, int *)
- static int get_var_float (void *, const char *, float *)
- static int get entries (void *, char *, unsigned int)
- static const char * get_error (int)

Public Attributes

char * algo_comm_id_string

Private Attributes

- · algo_comm_t ac
- int algo_comm_id_string_len
- comm_var_map_t vars

```
5.201.1 Constructor & Destructor Documentation
5.201.1.1 MHAKernel::algo_comm_class_t::algo_comm_class_t ( )
5.201.1.2 MHAKernel::algo_comm_class_t::~algo_comm_class_t( ) [virtual]
5.201.2 Member Function Documentation
5.201.2.1 algo comm t MHAKernel::algo_comm_class_t::get_c_handle()
5.201.2.2 int MHAKernel::algo comm class t::insert var (
                      void * handle,
                      const char * name,
                      comm_var_t var ) [static]
5.201.2.3 int MHAKernel::algo_comm_class_t::insert_var_int (
                      void * handle,
                      const char * name.
                      int * ivar ) [static]
5.201.2.4 int MHAKernel::algo_comm_class_t::insert_var_float (
                      void * handle,
                      const char * name,
                      float * ivar ) [static]
5.201.2.5 int MHAKernel::algo_comm_class_t::remove_var (
                      void * handle,
                      const char * name ) [static]
5.201.2.6 int MHAKernel::algo_comm_class_t::remove_ref (
                      void * handle,
                      void * ref ) [static]
5.201.2.7 int MHAKernel::algo_comm_class_t::is_var (
                      void * handle.
                      const char * name ) [static]
5.201.2.8 int MHAKernel::algo_comm_class_t::get_var (
                      void * handle,
                      const char * name,
                      comm_var_t * var ) [static]
5.201.2.9 int MHAKernel::algo_comm_class_t::get_var_int (
                      void * handle,
                      const char * name,
                      int * ivar ) [static]
```

```
5.201.2.10 int MHAKernel::algo_comm_class_t::get_var_float (
                       void * handle,
                       const char * name.
                       float * ivar ) [static]
5.201.2.11 int MHAKernel::algo_comm_class_t::get_entries (
                       void * handle,
                       char * ret.
                       unsigned int len ) [static]
5.201.2.12 const char * MHAKernel::algo_comm_class_t::get_error (
                       int e ) [static]
5.201.2.13 void MHAKernel::algo comm class t::local insert var (
                       const char * name.
                       comm_var_t var ) [virtual]
5.201.2.14 void MHAKernel::algo_comm_class_t::local_remove_var (
                       const char * name ) [virtual]
5.201.2.15 void MHAKernel::algo_comm_class_t::local_remove_ref (
                       void * addr ) [virtual]
5.201.2.16 bool MHAKernel::algo_comm_class_t::local_is_var (
                       const char * name ) [virtual]
5.201.2.17 void MHAKernel::algo comm class t::local get var (
                       const char * name,
                       comm_var_t * var ) [virtual]
5.201.2.18 std::string MHAKernel::algo comm class t::local get entries ( ) [virtual]
5.201.2.19 MHAKernel::comm var map t::size type MHAKernel::algo comm class t::size ( ) const
           [virtual]
5.201.3 Member Data Documentation
5.201.3.1 char* MHAKernel::algo_comm_class_t::algo_comm_id_string
5.201.3.2 algo_comm_t MHAKernel::algo_comm_class_t::ac [private]
5.201.3.3 int MHAKernel::algo_comm_class_t::algo_comm_id_string_len [private]
5.201.3.4 comm_var_map_t MHAKernel::algo_comm_class_t::vars [private]
```

- mha_algo_comm.hh
- mha_algo_comm.cpp

5.202 MHAKernel::comm_var_map_t Class Reference

Inherits map < std::string, comm_var_t >.

Public Member Functions

bool has_key (const std::string &name)

5.202.1 Member Function Documentation


The documentation for this class was generated from the following file:

mha_algo_comm.hh

5.203 MHAMultiSrc::base_t Class Reference

Base class for source selection.

Inheritance diagram for MHAMultiSrc::base_t:

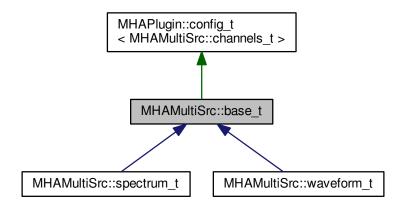

Public Member Functions

- base_t (algo_comm_t iac)
- void **select_source** (const std::vector< std::string > &src, int in_channels)

 Change the selection of input sources.

Protected Attributes

· algo_comm_t ac

Additional Inherited Members

5.203.1 Detailed Description

Base class for source selection.

See also

```
MHAMultiSrc::channel_t (p. 567)
MHAMultiSrc::channels t (p. 567)
```

5.203.2 Constructor & Destructor Documentation

```
5.203.2.1 MHAMultiSrc::base_t::base_t (
algo comm t iac)
```

5.203.3 Member Function Documentation

```
5.203.3.1 void MHAMultiSrc::base_t::select_source ( const std::vector < std::string > & src, int in_channels )
```

Change the selection of input sources.

This function is real-time and thread safe.

Parameters

src	List of input sources
in_channels	Number of input channels in direct input (the processed signal)

5.203.4 Member Data Documentation

```
5.203.4.1 algo_comm_t MHAMultiSrc::base_t::ac [protected]
```

- · mha_multisrc.h
- mha_multisrc.cpp

5.204 MHAMultiSrc::channel_t Class Reference

Public Attributes

- std::string name
- int channel
- 5.204.1 Member Data Documentation
- 5.204.1.1 std::string MHAMultiSrc::channel_t::name
- 5.204.1.2 int MHAMultiSrc::channel_t::channel

The documentation for this class was generated from the following file:

mha_multisrc.h

5.205 MHAMultiSrc::channels t Class Reference

Inherits vector< MHAMultiSrc::channel_t >.

Public Member Functions

- channels_t (const std::vector< std::string > &src, int in_channels)

 Separate a list of input sources into a parsable channel list.
- 5.205.1 Constructor & Destructor Documentation

Separate a list of input sources into a parsable channel list.

The number of input channels if verified, a list of **MHAMultiSrc::channel_t** (p. 567) is filled.

Parameters


route	vector of source channel ids
in_channels	number of channels in the processed input signal

The documentation for this class was generated from the following files:

- · mha multisrc.h
- mha_multisrc.cpp

5.206 MHAMultiSrc::spectrum_t Class Reference

Inheritance diagram for MHAMultiSrc::spectrum_t:

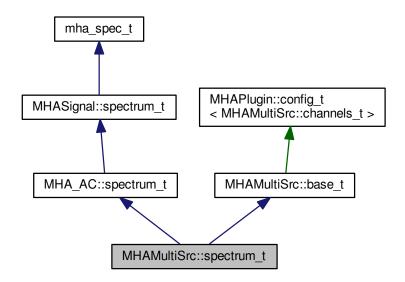

Public Member Functions

- spectrum_t (algo_comm_t iac, std::string name, unsigned int frames, unsigned int channels)
- mha_spec_t * update (mha_spec_t *s)

Update data of spectrum to hold actual input data.

Additional Inherited Members

5.206.1 Constructor & Destructor Documentation

5.206.2 Member Function Documentation

Update data of spectrum to hold actual input data.

Parameters

Returns


Return pointer to spectrum structure

The documentation for this class was generated from the following files:

- · mha_multisrc.h
- mha_multisrc.cpp

5.207 MHAMultiSrc::waveform_t Class Reference

Inheritance diagram for MHAMultiSrc::waveform_t:

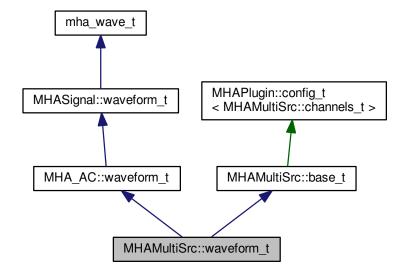

Public Member Functions

waveform_t (algo_comm_t iac, std::string name, unsigned int frames, unsigned int channels)

```
mha_wave_t * update (mha_wave_t *s)
```

Update data of waveform to hold actual input data.

Additional Inherited Members

```
5.207.1 Constructor & Destructor Documentation
```

5.207.2 Member Function Documentation

```
5.207.2.1 mha_wave_t * MHAMultiSrc::waveform_t::update ( mha_wave_t * s )
```

Update data of waveform to hold actual input data.

Parameters

```
s | Input signal chunk
```

Returns

Return pointer to waveform structure

The documentation for this class was generated from the following files:

- · mha_multisrc.h
- mha_multisrc.cpp
- 5.208 MHAOvlFilter::band_descriptor_t Class Reference

Public Attributes

```
mha_real_t cf_l
```

mha_real_t ef_l


- mha_real_t cf
- mha_real_t ef_h
- mha_real_t cf_h
- bool low_side_flat
- bool high_side_flat
- 5.208.1 Member Data Documentation
- 5.208.1.1 mha_real_t MHAOvlFilter::band_descriptor_t::cf_l
- 5.208.1.2 mha real t MHAOvlFilter::band_descriptor_t::ef_l
- 5.208.1.3 mha_real_t MHAOvlFilter::band_descriptor_t::cf
- 5.208.1.4 mha_real_t MHAOvIFilter::band_descriptor_t::ef_h
- 5.208.1.5 mha_real_t MHAOvlFilter::band_descriptor_t::cf_h
- 5.208.1.6 bool MHAOvlFilter::band_descriptor_t::low_side_flat
- 5.208.1.7 bool MHAOvlFilter::band_descriptor_t::high_side_flat

The documentation for this class was generated from the following file:

· mha_fftfb.hh

5.209 MHAOvlFilter::barkscale::bark2hz t Class Reference

Inheritance diagram for MHAOvIFilter::barkscale::bark2hz_t:

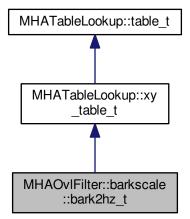

Public Member Functions

- bark2hz_t ()
- ~bark2hz_t ()

Additional Inherited Members

5.209.1 Constructor & Destructor Documentation

5.209.1.1 MHAOvlFilter::barkscale::bark2hz_t::bark2hz_t ()


5.209.1.2 MHAOvlFilter::barkscale::bark2hz_t::~bark2hz_t ()

The documentation for this class was generated from the following file:

· mha_fftfb.cpp

5.210 MHAOvlFilter::barkscale::hz2bark_t Class Reference

Inheritance diagram for MHAOvIFilter::barkscale::hz2bark_t:

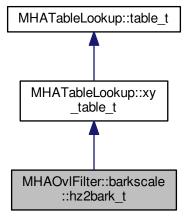

Public Member Functions

- hz2bark_t ()
- ~hz2bark_t ()

Additional Inherited Members

```
5.210.1 Constructor & Destructor Documentation
5.210.1.1 MHAOvlFilter::barkscale::hz2bark_t::hz2bark_t ( )
5.210.1.2 MHAOvlFilter::barkscale::hz2bark_t::~hz2bark_t ( )
```

The documentation for this class was generated from the following file:

· mha_fftfb.cpp

5.211 MHAOvlFilter::fftfb_ac_info_t Class Reference

Public Member Functions

- fftfb_ac_info_t (const MHAOvIFilter::fftfb_t &fb, algo_comm_t ac, const std::string &prefix)
- void **insert** ()

Private Attributes

MHA_AC::waveform_t cfv
 vector of nominal center frequencies / Hz

• MHA_AC::waveform_t efv vector of edge frequencies / Hz

• MHA AC::waveform t bwv

vector of band-weigths (sum of squared fft-bin-weigths)/num_frames

MHA_AC::waveform_t cLTASS

vector of LTASS correction

- 5.211.1 Constructor & Destructor Documentation
- 5.211.2 Member Function Documentation
- 5.211.2.1 void MHAOvlFilter::fftfb_ac_info_t::insert()
- 5.211.3 Member Data Documentation
- **5.211.3.1** MHA AC::waveform t MHAOvlFilter::fftfb_ac_info_t::cfv [private]

vector of nominal center frequencies / Hz

5.211.3.2 MHA_AC::waveform_t MHAOvlFilter::fftfb_ac_info_t::efv [private]

vector of edge frequencies / Hz

5.211.3.3 MHA_AC::waveform_t MHAOvlFilter::fftfb_ac_info_t::bwv [private]

vector of band-weigths (sum of squared fft-bin-weigths)/num_frames

5.211.3.4 MHA_AC::waveform_t MHAOvlFilter::fftfb_ac_info_t::cLTASS [private]

vector of LTASS correction


The documentation for this class was generated from the following files:

- · mha fftfb.hh
- · mha_fftfb.cpp

5.212 MHAOvlFilter::fftfb_t Class Reference

FFT based overlapping filter bank.

Inheritance diagram for MHAOvIFilter::fftfb_t:

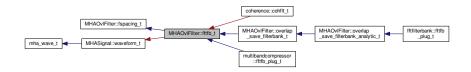

Public Member Functions

- fftfb_t (MHAOvIFilter::fftfb_vars_t &par, unsigned int nfft, mha_real_t fs)

 Constructor for a FFT-based overlapping filter bank.
- ∼fftfb_t ()
- void apply_gains (mha_spec_t *s_out, const mha_spec_t *s_in, const mha_wave_t *gains)
- void get_fbpower (mha_wave_t *fbpow, const mha_spec_t *s_in)
- void get_fbpower_db (mha_wave_t *fbpow, const mha_spec_t *s_in)
- std::vector< mha_real_t > get_ltass_gain_db () const
- unsigned int bin1 (unsigned int band) const

Return index of first non-zero filter shape window.

unsigned int bin2 (unsigned int band) const

Return index of first zero filter shape window above center frequency.

• unsigned int **get_fftlen** () const

Return fft length.

mha_real_t w (unsigned int k, unsigned int b) const

Return filter shape window at index k in band b.

Private Attributes

- unsigned int * vbin1
- unsigned int * vbin2
- mha_real_t(* shape)(mha_real_t)
- unsigned int fftlen
- mha_real_t samplingrate

Additional Inherited Members

5.212.1 Detailed Description

FFT based overlapping filter bank.

5.212.2 Constructor & Destructor Documentation

Constructor for a FFT-based overlapping filter bank.

Parameters

par	Parameters for the FFT filterbank that can not be deduced from the signal dimensions are taken from this set of configuration variables.
nfft	FFT length
fs	Sampling rate / Hz

```
5.212.2.2 MHAOvlFilter::fftfb_t::~fftfb_t ( )
```

5.212.3 Member Function Documentation

Return filter shape window at index k in band b.

Parameters

k	Frequency index
b	Band index

```
5.212.4 Member Data Documentation
```


```
5.212.4.1 unsigned int* MHAOvlFilter::fftfb_t::vbin1 [private]
5.212.4.2 unsigned int* MHAOvlFilter::fftfb_t::vbin2 [private]
5.212.4.3 mha_real_t(* MHAOvlFilter::fftfb_t::shape) (mha_real_t) [private]
5.212.4.4 unsigned int MHAOvlFilter::fftfb_t::fftlen [private]
5.212.4.5 mha_real_t MHAOvlFilter::fftfb_t::samplingrate [private]
```

- mha fftfb.hh
- mha_fftfb.cpp

5.213 MHAOvlFilter::fftfb vars t Class Reference

Set of configuration variables for FFT-based overlapping filters.

Inheritance diagram for MHAOvIFilter::fftfb_vars_t:

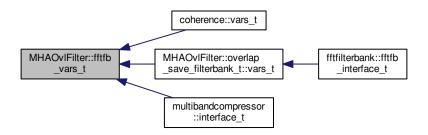

Public Member Functions

fftfb_vars_t (MHAParser::parser_t &p)

construct a set of openMHA configuration language variables suitable for configuring the FFT-based overlapping filterbank.

Public Attributes

scale_var_t fscale

Frequency scale type (lin/bark/log/erb).

scale_var_t ovltype

Filter shape (rect/lin/hann).

MHAParser::float_t plateau

relative plateau width.

MHAParser::kw_t ftype

Flag to decide wether edge or center frequencies are used.

fscale_t f

Frequency.

MHAParser::bool t normalize

Normalize sum of channels.

MHAParser::bool t fail on nonmonotonic

Fail if frequency entries are non-monotonic (otherwise sort)

MHAParser::bool_t fail_on_unique_bins

Fail if center frequencies share the same FFT bin.

MHAParser::vfloat mon t cf

Final center frequencies in Hz.

MHAParser::vfloat_mon_t ef

Final edge frequencies in Hz.

MHAParser::vfloat_mon_t cLTASS

Bandwidth correction for LTASS noise (level of 0 dB RMS LTASS noise)

MHAParser::mfloat_mon_t shapes

5.213.1 Detailed Description

Set of configuration variables for FFT-based overlapping filters.

This class enables easy configuration of the FFT-based overlapping filterbank. An instance of **fftfb_vars_t** (p. 577) creates openMHA configuration language variables needed for configuring the filterbank, and inserts these variables in the openMHA configuration tree.

This way, the variables are visible to the user and can be configured using the openMHA configuration language.

5.213.2 Constructor & Destructor Documentation

```
5.213.2.1 MHAOvlFilter::fftfb_vars_t::fftfb_vars_t (
MHAParser::parser_t & p )
```

construct a set of openMHA configuration language variables suitable for configuring the FFT-based overlapping filterbank.

Parameters

p The node of the configuration tree where the variables created by this instance are inserted.

5.213.3 Member Data Documentation

5.213.3.1 scale_var_t MHAOvlFilter::fftfb_vars_t::fscale

Frequency scale type (lin/bark/log/erb).

5.213.3.2 scale_var_t MHAOvlFilter::fftfb_vars_t::ovltype

Filter shape (rect/lin/hann).

5.213.3.3 MHAParser::float_t MHAOvlFilter::fftfb_vars_t::plateau

relative plateau width.

5.213.3.4 MHAParser::kw_t MHAOvlFilter::fftfb_vars_t::ftype

Flag to decide wether edge or center frequencies are used.

5.213.3.5 fscale_t MHAOvlFilter::fftfb_vars_t::f

Frequency.

5.213.3.6 MHAParser::bool_t MHAOvlFilter::fftfb_vars_t::normalize

5.213.3.7 MHAParser::bool_t MHAOvlFilter::fftfb_vars_t::fail_on_nonmonotonic

Fail if frequency entries are non-monotonic (otherwise sort)

5.213.3.8 MHAParser::bool_t MHAOvlFilter::fftfb_vars_t::fail_on_unique_bins

Fail if center frequencies share the same FFT bin.

5.213.3.9 MHAParser::vfloat_mon_t MHAOvlFilter::fftfb_vars_t::cf

Final center frequencies in Hz.

Normalize sum of channels.

5.213.3.10 MHAParser::vfloat_mon_t MHAOvlFilter::fftfb_vars_t::ef

Final edge frequencies in Hz.

5.213.3.11 MHAParser::vfloat_mon_t MHAOvlFilter::fftfb_vars_t::cLTASS

Bandwidth correction for LTASS noise (level of 0 dB RMS LTASS noise)


5.213.3.12 MHAParser::mfloat_mon_t MHAOvlFilter::fftfb_vars_t::shapes

The documentation for this class was generated from the following files:

- mha_fftfb.hh
- · mha_fftfb.cpp

5.214 MHAOvIFilter::fscale_bw_t Class Reference

Inheritance diagram for MHAOvIFilter::fscale bw t:

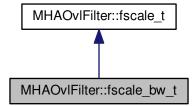

Public Member Functions

- fscale_bw_t (MHAParser::parser_t &parent)
- std::vector< mha_real_t > get_bw_hz () const

Protected Attributes

- MHAParser::vfloat t bw
- MHAParser::vfloat_mon_t bw_hz

Private Member Functions

void update_hz ()

Private Attributes

MHAEvents::connector_t< fscale_bw_t > updater

Additional Inherited Members

```
5.214.1 Constructor & Destructor Documentation
```


```
5.214.1.1 MHAOvlFilter::fscale_bw_t::fscale_bw_t (
MHAParser::parser_t & parent )
```

- 5.214.2 Member Function Documentation
- 5.214.2.1 std::vector< mha_real_t > MHAOvlFilter::fscale_bw_t::get_bw_hz () const
- **5.214.2.2 void** MHAOvlFilter::fscale_bw_t::update_hz() [private]
- 5.214.3 Member Data Documentation
- **5.214.3.1 MHAParser::vfloat_t** MHAOvlFilter::fscale_bw_t::bw [protected]
- **5.214.3.2** MHAParser::vfloat_mon_t MHAOvlFilter::fscale_bw_t::bw_hz [protected]
- **5.214.3.3 MHAEvents::connector_t**<**fscale_bw_t**> MHAOvlFilter::fscale_bw_t::updater [private]

- · mha_fftfb.hh
- mha_fftfb.cpp

5.215 MHAOvlFilter::fscale_t Class Reference

Inheritance diagram for MHAOvIFilter::fscale_t:

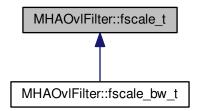

Public Member Functions

- fscale_t (MHAParser::parser_t &parent)
- std::vector< mha_real_t > get_f_hz () const

Public Attributes

- scale_var_t unit
- MHAParser::vfloat_t f
- MHAParser::vfloat_mon_t f_hz

Private Member Functions

void update_hz ()

Private Attributes

MHAEvents::connector_t< fscale_t > updater

5.215.1 Constructor & Destructor Documentation

5.215.1.1 MHAOvlFilter::fscale_t::fscale_t (
MHAParser::parser_t & parent)

5.215.2 Member Function Documentation

5.215.2.1 std::vector< mha_real_t > MHAOvlFilter::fscale_t::get_f_hz () const

5.215.2.2 void MHAOvlFilter::fscale_t::update_hz() [private]

5.215.3 Member Data Documentation

5.215.3.1 scale_var_t MHAOvlFilter::fscale_t::unit

5.215.3.2 MHAParser::vfloat t MHAOvlFilter::fscale_t::f

5.215.3.3 MHAParser::vfloat_mon_t MHAOvlFilter::fscale_t::f_hz

5.215.3.4 MHAEvents::connector_t<fscale_t> MHAOvlFilter::fscale_t::updater [private]

The documentation for this class was generated from the following files:

- · mha fftfb.hh
- mha_fftfb.cpp

5.216 MHAOvIFilter::fspacing_t Class Reference

Class for frequency spacing, used by filterbank shape generator class.

Inheritance diagram for MHAOvIFilter::fspacing_t:



Public Member Functions

- fspacing_t (const MHAOvIFilter::fftfb_vars_t &par, unsigned int nfft, mha_real_t fs)
- std::vector< unsigned int > get_cf_fftbin () const
- std::vector< mha_real_t > get_cf_hz () const
- std::vector< mha_real_t > get_ef_hz () const
- unsigned int **nbands** () const

Return number of bands in filter bank.

Protected Member Functions

- void fail_on_nonmonotonic_cf ()
- void fail_on_unique_fftbins ()

Protected Attributes

- std::vector< MHAOvIFilter::band_descriptor_t > bands
- mha real t(* symmetry scale)(mha real t)

Private Member Functions

- void ef2bands (std::vector< mha_real_t > vef)
- void cf2bands (std::vector< mha_real_t > vcf)
- void equidist2bands (std::vector< mha_real_t > vcf)

Private Attributes

- · unsigned int nfft_
- mha_real_t fs_

5.216.1 Detailed Description


Class for frequency spacing, used by filterbank shape generator class.

```
5.216.2 Constructor & Destructor Documentation
5.216.2.1 MHAOvlFilter::fspacing t::fspacing t (
                      const MHAOvIFilter::fftfb_vars_t & par,
                      unsigned int nfft.
                      mha real t fs )
5.216.3 Member Function Documentation
5.216.3.1 std::vector< unsigned int > MHAOvIFilter::fspacing t::get cf fftbin ( ) const
5.216.3.2 std::vector< mha_real_t > MHAOvlFilter::fspacing_t::get_cf_hz( ) const
5.216.3.3 std::vector< mha real t > MHAOvIFilter::fspacing t::get ef hz ( ) const
5.216.3.4 unsigned int MHAOvIFilter::fspacing t::nbands ( ) const [inline]
Return number of bands in filter bank.
5.216.3.5 void MHAOvIFilter::fspacing_t::fail_on_nonmonotonic_cf() [protected]
5.216.3.6 void MHAOvIFilter::fspacing_t::fail_on_unique_fftbins() [protected]
5.216.3.7 void MHAOvIFilter::fspacing t::ef2bands (
                      std::vector< mha_real_t > vef ) [private]
5.216.3.8 void MHAOvlFilter::fspacing t::cf2bands (
                      std::vector< mha_real_t > vcf ) [private]
5.216.3.9 void MHAOvIFilter::fspacing t::equidist2bands (
                      std::vector< mha_real_t > vcf ) [private]
5.216.4 Member Data Documentation
5.216.4.1 std::vector<MHAOvIFilter::band descriptor t> MHAOvIFilter::fspacing t::bands
          [protected]
5.216.4.2 mha real t(* MHAOvIFilter::fspacing t::symmetry scale) (mha real t) [protected]
5.216.4.3 unsigned int MHAOvlFilter::fspacing_t::nfft_ [private]
5.216.4.4 mha_real_t MHAOvlFilter::fspacing_t::fs_ [private]
```

- · mha fftfb.hh
- mha_fftfb.cpp

5.217 MHAOvlFilter::overlap_save_filterbank_analytic_t Class Reference

Inheritance diagram for MHAOvIFilter::overlap_save_filterbank_analytic_t:

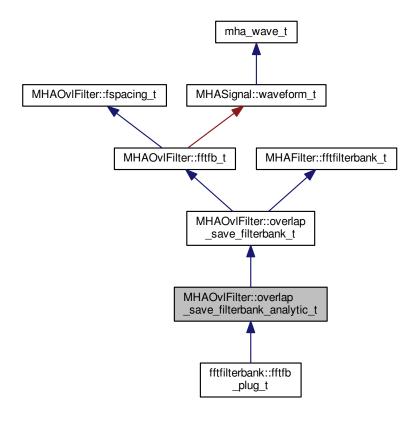

Public Member Functions

- void filter_analytic (const mha_wave_t *sln, mha_wave_t **fltRe, mha_wave_t **fltColor
 lm)

Private Attributes

MHAFilter::fftfilterbank_t imagfb

Additional Inherited Members

```
5.217.1 Constructor & Destructor Documentation
```

5.217.2 Member Function Documentation

5.217.3 Member Data Documentation

5.217.3.1 MHAFilter::fftfilterbank_t MHAOvlFilter::overlap_save_filterbank_analytic_t::imagfb [private]


The documentation for this class was generated from the following files:

- · mha_fftfb.hh
- mha_fftfb.cpp

5.218 MHAOvlFilter::overlap_save_filterbank_t Class Reference

A time-domain minimal phase filter bank with frequency shapes from **MHAOvIFilter::fftfb_t** (p. 574).

Inheritance diagram for MHAOvlFilter::overlap_save_filterbank_t:

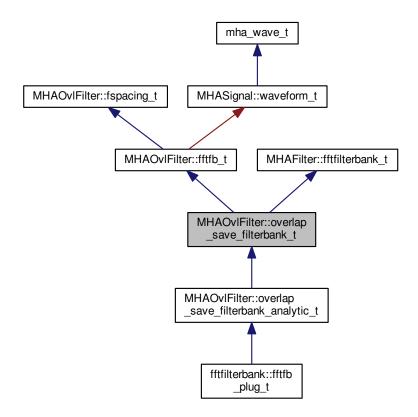

Classes

class vars_t

Public Member Functions

- overlap_save_filterbank_t (MHAOvlFilter::overlap_save_filterbank_t::vars_t &fbpar, mhaconfig_t channelconfig_in)
- mhaconfig_t get_channelconfig () const

Private Attributes

mhaconfig_t channelconfig_out_

Additional Inherited Members

5.218.1 Detailed Description


A time-domain minimal phase filter bank with frequency shapes from **MHAOvIFilter::fftfb_t** (p. 574).

- 5.218.2 Constructor & Destructor Documentation
- 5.218.3 Member Function Documentation
- 5.218.3.1 mhaconfig_t MHAOvlFilter::overlap_save_filterbank_t::get_channelconfig () const [inline]
- 5.218.4 Member Data Documentation
- **5.218.4.1 mhaconfig_t** MHAOvlFilter::overlap_save_filterbank_t::channelconfig_out_ [private]

The documentation for this class was generated from the following files:

- · mha fftfb.hh
- mha_fftfb.cpp
- 5.219 MHAOvlFilter::overlap_save_filterbank_t::vars_t Class Reference

Inheritance diagram for MHAOvIFilter::overlap_save_filterbank_t::vars_t:

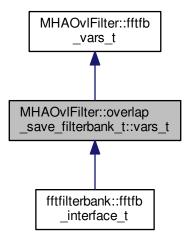

Public Member Functions

vars_t (MHAParser::parser_t &p)


Public Attributes

- MHAParser::int_t fftlen
- MHAParser::kw_t phasemodel
- MHAParser::window_t irswnd
- 5.219.1 Constructor & Destructor Documentation
- 5.219.2 Member Data Documentation
- 5.219.2.1 MHAParser::int_t MHAOvlFilter::overlap_save_filterbank_t::vars_t::fftlen
- 5.219.2.2 MHAParser::kw_t MHAOvlFilter::overlap_save_filterbank_t::vars_t::phasemodel
- 5.219.2.3 MHAParser::window_t MHAOvlFilter::overlap_save_filterbank_t::vars_t::irswnd

- mha_fftfb.hh
- · mha_fftfb.cpp

5.220 MHAOvlFilter::scale_var_t Class Reference

Inheritance diagram for MHAOvIFilter::scale_var_t:

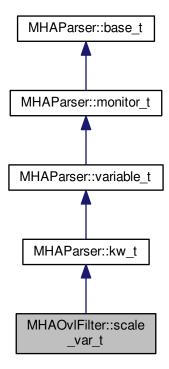

Public Member Functions

- scale_var_t (const std::string &help)
- void add_fun (const std::string &name, scale_fun_t *fun)
- std::string get_name () const
- scale_fun_t * get_fun () const
- mha_real_t hz2unit (mha_real_t x) const
- mha_real_t unit2hz (mha_real_t x) const

Private Attributes

- std::vector< std::string > names
- std::vector< scale_fun_t * > funs

Additional Inherited Members

```
5.220.1 Constructor & Destructor Documentation
```

5.220.2 Member Function Documentation

```
5.220.2.2 std::string MHAOvlFilter::scale_var_t::get_name( ) const [inline]
```

5.220.3 Member Data Documentation

```
5.220.3.1 std::vector<std::string> MHAOvlFilter::scale_var_t::names [private]
```


```
5.220.3.2 std::vector<scale_fun_t*> MHAOvlFilter::scale_var_t::funs [private]
```

- · mha_fftfb.hh
- mha_fftfb.cpp

5.221 MHAParser::base_t Class Reference

Base class for all parser items.

 $Inheritance\ diagram\ for\ MHAP arser::base_t:$

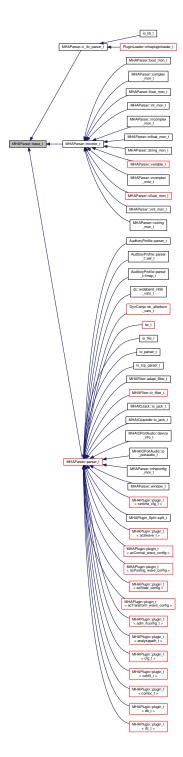

Classes

• class replace_t

Public Member Functions

base_t (const std::string &)

Constructor for base class of all parser nodes.

- base_t (const base_t &)
- virtual ~base t ()
- virtual std::string parse (const std::string &)

Causes this node to process a command in the openMHA configuration language.

virtual void parse (const char *, char *, unsigned int)

This function parses a command and writes the parsing result into a C character array.

- virtual void **parse** (const std::vector< std::string > &, std::vector< std::string > &)
- virtual std::string op_subparse (expression_t &)
- virtual std::string op_setval (expression_t &)
- virtual std::string op_query (expression_t &)
- virtual std::string query_dump (const std::string &)
- virtual std::string query_entries (const std::string &)
- virtual std::string query_perm (const std::string &)
- virtual std::string query_range (const std::string &)
- virtual std::string query_type (const std::string &)
- virtual std::string query_val (const std::string &)
- virtual std::string query_readfile (const std::string &)
- virtual std::string query savefile (const std::string &)
- virtual std::string query_savefile_compact (const std::string &)
- virtual std::string query_savemons (const std::string &)
- virtual std::string query_listids (const std::string &)
- std::string query_version (const std::string &)
- std::string query_id (const std::string &)
- std::string query_subst (const std::string &)
- std::string query addsubst (const std::string &)
- std::string query_help (const std::string &)
- std::string query_cmds (const std::string &)
- void set_node_id (const std::string &)

Set the identification string of this parser node.

void set_help (const std::string &)

Set the help comment of a variable or parser.

- void add_parent_on_insert (parser_t *, std::string)
- void rm_parent_on_remove (parser_t *)
- const std::string & fullname () const

Return the full dot-separated path name of this parser node in the openMHA configuration tree.

Public Attributes

MHAEvents::emitter t writeaccess

Event emitted on write access.

MHAEvents::emitter t valuechanged

Event emitted if the value has changed.

MHAEvents::emitter_t readaccess

Event emitted on read access.

MHAEvents::emitter_t prereadaccess

Event emitted on read access, before the data field is accessed.

Protected Member Functions

- void activate_query (const std::string &, query_t)
- void **notify** ()

Protected Attributes

- query_map_t queries
- bool data_is_initialized

Private Types

typedef std::vector< replace_t > repl_list_t

Private Member Functions

- void add_replace_pair (const std::string &, const std::string &)
- std::string oplist ()

Private Attributes

- std::string help
- std::string id str
- opact_map_t operators
- repl_list_t repl_list
- bool nested lock
- parser_t * parent
- std::string thefullname

5.221.1 Detailed Description

Base class for all parser items.

The key method of the parser base class is the std::string **parse(const std::string&)** (p. 595) method. Parser proxy derivatives which overwrite any of the other **parse()** (p. 595) methods to be the key method must make sure that the original **parse()** (p. 595) method utilizes the new key method.

```
5.221.2 Member Typedef Documentation
```

```
\textbf{5.221.2.1} \quad typedef \ std::vector < replace\_t > MHAParser::base\_t::repl\_list\_t \quad \texttt{[private]}
```

5.221.3 Constructor & Destructor Documentation

Constructor for base class of all parser nodes.

Parameters

h Help text describing this parser node. This help text is accessible to the configuration language through the "?help" query command.

Causes this node to process a command in the openMHA configuration language.

Parameters

```
cs The command to parse
```

Returns

The response to the command, if successful

Exceptions

MHA_Error (p. 406)	If the command cannot be executed successfully. The reason for
	failure is given in the message string of the exception.

Reimplemented in **PluginLoader::mhapluginloader_t** (p. 832), and **altplugs_t** (p. 197).

This function parses a command and writes the parsing result into a C character array.

This base class implementation delegates to parse(const std::string &) (p. 595).

Parameters

cmd	Command to be parsed
retv	Buffer for the result
len	Length of buffer

```
Reimplemented in altplugs_t (p. 197).
```

```
5.221.4.3 void MHAParser::base_t::parse (
                     const std::vector< std::string > & cs,
                     std::vector < std::string > & retv ) [virtual]
5.221.4.4 std::string MHAParser::base t::op subparse (
                     expression t& ) [virtual]
Reimplemented in MHAParser::c_ifc_parser_t (p. 607), and MHAParser::parser_t (p. 647).
5.221.4.5 std::string MHAParser::base_t::op_setval (
                     expression_t & ) [virtual]
Reimplemented in MHAParser::mcomplex_t (p. 633), MHAParser::mfloat_t (p. 637), MH←
AParser::vcomplex_t (p. 661), MHAParser::vfloat_t (p. 665), MHAParser::vint_t (p. 669),
MHAParser::complex_t (p. 613), MHAParser::float_t (p. 619), MHAParser::int_t (p. 624),
MHAParser::bool_t (p. 605), MHAParser::vstring_t (p. 673), MHAParser::string_t (p. 655),
MHAParser::kw_t (p. 629), MHAParser::variable_t (p. 657), MHAParser::c_ifc_parser_
t (p. 607), and MHAParser::parser_t (p. 647).
5.221.4.6 std::string MHAParser::base_t::op_query (
                     expression t& ) [virtual]
Reimplemented in MHAParser::monitor t (p. 643), MHAParser::c ifc parser t (p. 607),
and MHAParser::parser_t (p. 647).
5.221.4.7 std::string MHAParser::base_t::query_dump (
                     const std::string & s ) [virtual]
```

Reimplemented in MHAParser::monitor_t (p. 644), and MHAParser::parser_t (p. 647).

```
5.221.4.8 std::string MHAParser::base_t::query_entries (
                    const std::string & s ) [virtual]
Reimplemented in MHAParser::parser_t (p. 648).
5.221.4.9 std::string MHAParser::base_t::query_perm (
                    const std::string & s ) [virtual]
Reimplemented in MHAParser::variable t (p. 657), and MHAParser::monitor t (p. 644).
5.221.4.10 std::string MHAParser::base t::query range (
                     const std::string & s ) [virtual]
Reimplemented in MHAParser::kw_t (p. 629), and MHAParser::range_var_t (p. 650).
5.221.4.11 std::string MHAParser::base_t::query_type (
                     const std::string & s ) [virtual]
Reimplemented in MHAParser::mcomplex mon t (p. 631), MHAParser::vcomplex mon ←
t (p. 659), MHAParser::complex mon t (p. 611), MHAParser::float mon t (p. 617),
MHAParser::mfloat mon t (p. 635), MHAParser::vfloat mon t (p. 663), MHAParser⊹
::vint_mon_t (p. 667), MHAParser::vstring_mon_t (p. 671), MHAParser::string_mon \infty
_t (p. 653), MHAParser::bool_mon_t (p. 603), MHAParser::int_mon_t (p. 621), MH←
AParser::mcomplex_t (p. 633), MHAParser::mfloat_t (p. 637), MHAParser::vcomplex_t
(p. 661), MHAParser::vfloat t (p. 665), MHAParser::vint t (p. 669), MHAParser::complex←
_t (p. 613), MHAParser::float_t (p. 619), MHAParser::int_t (p. 624), MHAParser::bool_t
(p. 605), MHAParser::vstring_t (p. 673), MHAParser::string_t (p. 655), MHAParser::kw_t
(p. 629), and MHAParser::parser_t (p. 647).
5.221.4.12 std::string MHAParser::base_t::query_val (
                     const std::string & s ) [virtual]
Reimplemented in MHAParser::mcomplex mon t (p. 631), MHAParser::vcomplex mon ←
_t (p. 659), MHAParser::complex_mon_t (p. 611), MHAParser::float_mon_t (p. 617),
MHAParser::mfloat_mon_t (p. 635), MHAParser::vfloat_mon_t (p. 663), MHAParser
::vint_mon_t (p. 667), MHAParser::vstring_mon_t (p. 671), MHAParser::string_mon \infty
t (p. 653), MHAParser::bool mon t (p. 603), MHAParser::int mon t (p. 621), MH←
AParser::mcomplex_t (p. 633), MHAParser::mfloat_t (p. 637), MHAParser::vcomplex_t
(p. 661), MHAParser::vfloat_t (p. 665), MHAParser::vint_t (p. 669), MHAParser::complex
_t (p. 613), MHAParser::float_t (p. 619), MHAParser::int_t (p. 624), MHAParser::bool_t
(p. 605), MHAParser::vstring_t (p. 673), MHAParser::string_t (p. 655), MHAParser::kw_t
(p. 629), and MHAParser::parser_t (p. 648).
5.221.4.13 std::string MHAParser::base_t::query_readfile (
                     const std::string & s ) [virtual]
Reimplemented in MHAParser::parser_t (p. 648).
```

```
5.221.4.14 std::string MHAParser::base_t::query_savefile (
                        const std::string & s ) [virtual]
Reimplemented in MHAParser::parser_t (p. 648).
5.221.4.15 std::string MHAParser::base_t::query_savefile_compact (
                        const std::string & s ) [virtual]
Reimplemented in MHAParser::parser_t (p. 648).
5.221.4.16 std::string MHAParser::base_t::query_savemons (
                        const std::string & s ) [virtual]
Reimplemented in MHAParser::parser t (p. 648).
5.221.4.17 std::string MHAParser::base_t::query_listids (
                        const std::string & s ) [virtual]
Reimplemented in MHAParser::parser t (p. 648).
5.221.4.18 std::string MHAParser::base_t::query_version (
                        const std::string & )
5.221.4.19 std::string MHAParser::base_t::query_id (
                        const std::string & )
5.221.4.20 std::string MHAParser::base_t::query_subst (
                        const std::string & s )
5.221.4.21 std::string MHAParser::base_t::query_addsubst (
                        const std::string & s )
5.221.4.22 std::string MHAParser::base_t::query_help (
                        const std::string & s )
5.221.4.23 std::string MHAParser::base_t::query_cmds (
                        const std::string & s )
5.221.4.24 void MHAParser::base t::set node id (
                        const std::string & s )
```

Set the identification string of this parser node.

The id can be queried from the configuration language using the ?id query command. Nodes can be found by id using the ?listid query command on a containing parser node.

Parameters

```
s The new identification string.
```

```
5.221.4.25 void MHAParser::base_t::set_help (
const std::string & s)
```

Set the help comment of a variable or parser.

Parameters

```
s | New help comment.
```

Return the full dot-separated path name of this parser node in the openMHA configuration tree.

5.221.5.1 MHAEvents::emitter_t MHAParser::base_t::writeaccess

Event emitted on write access.

To connect a callback that is invoked on write access to this parser variable, use MHAEvents—::patchbay_t<receiver_t> method connect(&writeaccess,&receiver_t::callback) where callback is a method that expects no parameters and returns void.

5.221.5.2 MHAEvents::emitter t MHAParser::base t::valuechanged

Event emitted if the value has changed.

To connect a callback that is invoked when write access to this parser variable actually changes its value, use MHAEvents::patchbay_t<receiver_t> method connect(&valuechanged,&receiver — t::callback) where callback is a method that expects no parameters and returns void.

5.221.5.3 MHAEvents::emitter_t MHAParser::base_t::readaccess

Event emitted on read access.

To connect a callback that is invoked after the value of this variable has been read through the configuration interface, use MHAEvents::patchbay_t<receiver_t> method connect(&readaccess,&receiver_t::callback) where callback is a method that expects no parameters and returns void.

5.221.5.4 MHAEvents::emitter_t MHAParser::base_t::prereadaccess

Event emitted on read access, before the data field is accessed.

To connect a callback that is invoked when the value of this variable is about to be read through the configuration interface, so that the callback can influence the value that is reported, use MHAEvents::patchbay_t<receiver_t> method connect(&prereadaccess,&receiver_t::callback) where callback is a method that expects no parameters and returns void.

```
5.221.5.5 query_map_t MHAParser::base_t::queries [protected]
5.221.5.6 bool MHAParser::base_t::data_is_initialized [protected]
5.221.5.7 std::string MHAParser::base_t::help [private]
5.221.5.8 std::string MHAParser::base_t::id_str [private]
5.221.5.9 opact_map_t MHAParser::base_t::operators [private]
5.221.5.10 repl_list_t MHAParser::base_t::repl_list [private]
5.221.5.11 bool MHAParser::base_t::nested_lock [private]
5.221.5.12 parser_t* MHAParser::base_t::parent [private]
5.221.5.13 std::string MHAParser::base_t::thefullname [private]
```

The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.222 MHAParser::base_t::replace_t Class Reference

Public Member Functions

- replace_t (const std::string &, const std::string &)
- void replace (std::string &)
- const std::string & get_a () const
- const std::string & get_b () const

Private Attributes

- std::string a
- std::string b
- 5.222.1 Constructor & Destructor Documentation
- 5.222.2 Member Function Documentation
- 5.222.2.1 void MHAParser::base_t::replace_t::replace (std::string & s)
- 5.222.2.2 const std::string& MHAParser::base_t::replace_t::get_a() const [inline]
- 5.222.2.3 const std::string& MHAParser::base_t::replace_t::get_b() const [inline]
- 5.222.3 Member Data Documentation
- **5.222.3.1** std::string MHAParser::base_t::replace_t::a [private]
- **5.222.3.2** std::string MHAParser::base_t::replace_t::b [private]


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.223 MHAParser::bool_mon_t Class Reference

Monitor with string value.

Inheritance diagram for MHAParser::bool_mon_t:

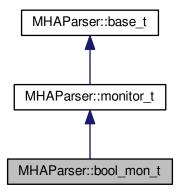

Public Member Functions

bool_mon_t (const std::string &hlp)
 Create a monitor variable for string values.

Public Attributes

• bool **data**Data field.

Protected Member Functions

- std::string query_val (const std::string &)
- std::string query_type (const std::string &)

Additional Inherited Members

5.223.1 Detailed Description

Monitor with string value.

5.223.2 Constructor & Destructor Documentation

5.223.2.1 MHAParser::bool_mon_t::bool_mon_t (const std::string & hlp)

Create a monitor variable for string values.

Parameters

hlp A help text describing this monitor variable.

5.223.3 Member Function Documentation

Reimplemented from MHAParser::base_t (p. 597).

Reimplemented from **MHAParser::base_t** (p. 597).

5.223.4 Member Data Documentation

5.223.4.1 bool MHAParser::bool_mon_t::data

Data field.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.224 MHAParser::bool_t Class Reference

Variable with a boolean value ("yes"/"no")

Inheritance diagram for MHAParser::bool_t:

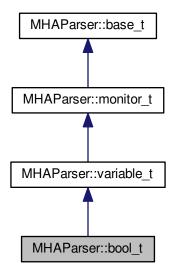

Public Member Functions

• **bool_t** (const std::string &help_text, const std::string &initial_value)

Constructor for a configuration language variable for boolean values.

Public Attributes

• bool **data**Data field.

Protected Member Functions

- std::string op_setval (expression_t &)
- std::string query_type (const std::string &)
- std::string query_val (const std::string &)

Additional Inherited Members

5.224.1 Detailed Description

Variable with a boolean value ("yes"/"no")

5.224.2 Constructor & Destructor Documentation

Constructor for a configuration language variable for boolean values.

Parameters

help_text	A human-readable text describing the purpose of this configuration variable.	
initial_value	The initial value for this variable as a string. The string representation of 'true'	
	is either "yes" or "1". The string representation of 'false' is either "no" or "0".	

5.224.3 Member Function Documentation

Reimplemented from **MHAParser::variable_t** (p. 657).

Reimplemented from MHAParser::base_t (p. 597).

Reimplemented from **MHAParser::base_t** (p. 597).

5.224.4 Member Data Documentation

5.224.4.1 bool MHAParser::bool_t::data


Data field.

The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.225 MHAParser::c_ifc_parser_t Class Reference

Inheritance diagram for MHAParser::c_ifc_parser_t:

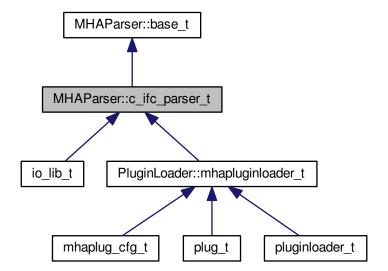

Public Member Functions

- c_ifc_parser_t (const std::string &modulename_)
- ~c_ifc_parser_t ()
- void set_parse_cb (c_parse_cmd_t, c_parse_err_t, void *)

Protected Member Functions

- std::string op_subparse (MHAParser::expression_t &)
- std::string op_setval (MHAParser::expression_t &)
- std::string op_query (MHAParser::expression_t &)

Private Member Functions

void test_error ()

Private Attributes

- std::string modulename
- c_parse_cmd_t c_parse_cmd
- c_parse_err_t c_parse_err
- int liberr
- void * libdata
- unsigned int ret_size
- char * retv

Additional Inherited Members

```
5.225.1 Constructor & Destructor Documentation
5.225.1.1 MHAParser::c_ifc_parser_t::c_ifc_parser_t (
                     const std::string & modulename )
5.225.1.2 MHAParser::c_ifc_parser_t::~c_ifc_parser_t ( )
5.225.2 Member Function Documentation
5.225.2.1 void MHAParser::c_ifc_parser_t::set_parse_cb (
                     MHAParser::c parse cmd t cb,
                     MHAParser::c_parse_err_t strerr,
                     void * d)
5.225.2.2 std::string MHAParser::c_ifc_parser_t::op_subparse (
                     MHAParser::expression_t & x ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 596).
5.225.2.3 std::string MHAParser::c_ifc_parser_t::op_setval (
                     MHAParser::expression_t & x ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 596).
5.225.2.4 std::string MHAParser::c_ifc_parser_t::op_query (
                     MHAParser::expression_t & x ) [protected], [virtual]
```

Reimplemented from **MHAParser::base_t** (p. 596).


```
5.225.2.5 void MHAParser::c_ifc_parser_t::test_error( ) [private]
5.225.3 Member Data Documentation
5.225.3.1 std::string MHAParser::c_ifc_parser_t::modulename [private]
5.225.3.2 c_parse_cmd_t MHAParser::c_ifc_parser_t::c_parse_cmd [private]
5.225.3.3 c_parse_err_t MHAParser::c_ifc_parser_t::c_parse_err [private]
5.225.3.4 int MHAParser::c_ifc_parser_t::liberr [private]
5.225.3.5 void* MHAParser::c_ifc_parser_t::libdata [private]
5.225.3.6 unsigned int MHAParser::c_ifc_parser_t::ret_size [private]
5.225.3.7 char* MHAParser::c_ifc_parser_t::retv [private]
```

The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp
- 5.226 MHAParser::commit_t< receiver_t > Class Template Reference

Parser variable with event-emission functionality.

Inheritance diagram for MHAParser::commit_t< receiver_t >:

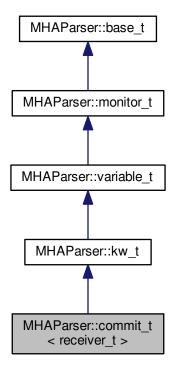

Public Member Functions

commit_t (receiver_t *, void(receiver_t::*)(), const std::string &help="Variable changes action")

Private Attributes

MHAEvents::connector_t< receiver_t > extern_connector

Additional Inherited Members

5.226.1 Detailed Description

```
\label{template} \begin{tabular}{ll} template < class receiver\_t > \\ class MHAParser::commit_t < receiver\_t > \\ \end{tabular}
```

Parser variable with event-emission functionality.

The **commit_t** (p. 608) variable can register an event receiver in its constructor, which is called whenever the variable is set to "commit".

5.226.2 Constructor & Destructor Documentation

5.226.3 Member Data Documentation

```
5.226.3.1 template < class receiver_t > MHAEvents::connector_t < receiver_t > MHAParser::commit t < receiver_t > ::extern_connector [private]
```


The documentation for this class was generated from the following file:

· mha parser.hh

5.227 MHAParser::complex_mon_t Class Reference

Monitor with complex value.

Inheritance diagram for MHAParser::complex_mon_t:

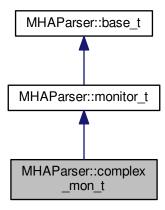

Public Member Functions

• complex_mon_t (const std::string &hlp)

Create a complex monitor variable.

Public Attributes

mha_complex_t data

Data field.

Protected Member Functions

- std::string query_val (const std::string &)
- std::string query_type (const std::string &)

Additional Inherited Members

5.227.1 Detailed Description

Monitor with complex value.

5.227.2 Constructor & Destructor Documentation

5.227.2.1 MHAParser::complex_mon_t::complex_mon_t (const std::string & hlp)

Create a complex monitor variable.

Parameters

```
hlp A help text describing this monitor variable.
```

5.227.3 Member Function Documentation

Reimplemented from **MHAParser::base_t** (p. 597).

Reimplemented from **MHAParser::base_t** (p. 597).

5.227.4 Member Data Documentation

5.227.4.1 mha_complex_t MHAParser::complex_mon_t::data

Data field.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.228 MHAParser::complex_t Class Reference

Variable with complex value.

Inheritance diagram for MHAParser::complex_t:

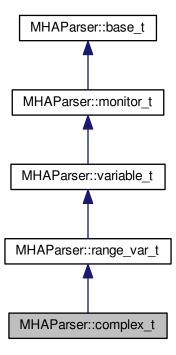

Public Member Functions

• complex_t (const std::string &, const std::string &, const std::string &="")

Public Attributes

mha_complex_t data
 Data field.

Protected Member Functions

```
std::string op_setval (expression_t &)
```

- std::string query_type (const std::string &)
- std::string query_val (const std::string &)

Additional Inherited Members

5.228.1 Detailed Description

Variable with complex value.

```
5.228.2 Constructor & Destructor Documentation
```

5.228.3 Member Function Documentation

Reimplemented from **MHAParser::variable_t** (p. 657).

Reimplemented from **MHAParser::base_t** (p. 597).

Reimplemented from **MHAParser::base_t** (p. 597).

```
5.228.4 Member Data Documentation
```

```
5.228.4.1 mha_complex_t MHAParser::complex_t::data
```

Data field.

The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.229 MHAParser::entry_t Class Reference

Public Member Functions

entry_t (const std::string &, base_t *)

Public Attributes

- std::string name
- base_t * entry
- 5.229.1 Constructor & Destructor Documentation

5.229.2 Member Data Documentation

5.229.2.1 std::string MHAParser::entry_t::name

5.229.2.2 base_t* MHAParser::entry_t::entry

The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.230 MHAParser::expression_t Class Reference

Public Member Functions

- expression_t (const std::string &, const std::string &)
 Constructor.
- expression_t ()

Public Attributes

- std::string Ival
- std::string rval
- std::string op

5.230.1 Constructor & Destructor Documentation

Constructor.

Parameters

s	String to be splitted
0	List of valid operators (single character only)

- 5.230.1.2 expression_t::expression_t()
- 5.230.2 Member Data Documentation
- 5.230.2.1 std::string MHAParser::expression_t::lval
- 5.230.2.2 std::string MHAParser::expression_t::rval
- 5.230.2.3 std::string MHAParser::expression_t::op


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.231 MHAParser::float_mon_t Class Reference

Monitor with float value.

Inheritance diagram for MHAParser::float_mon_t:

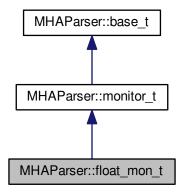

Public Member Functions

float_mon_t (const std::string &hlp)
 Initialize a floating point (32 bits) monitor variable.

Public Attributes

• float data

Data field.

Protected Member Functions

- std::string query_val (const std::string &)
- std::string query_type (const std::string &)

Additional Inherited Members

5.231.1 Detailed Description

Monitor with float value.

5.231.2 Constructor & Destructor Documentation

5.231.2.1 MHAParser::float_mon_t::float_mon_t (const std::string & hlp)

Initialize a floating point (32 bits) monitor variable.

Parameters

hlp A help text describing this monitor variable.

5.231.3 Member Function Documentation

Reimplemented from **MHAParser::base_t** (p. 597).

Reimplemented from **MHAParser::base_t** (p. 597).

5.231.4 Member Data Documentation

5.231.4.1 float MHAParser::float_mon_t::data

Data field.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.232 MHAParser::float_t Class Reference

Variable with float value.

Inheritance diagram for MHAParser::float_t:

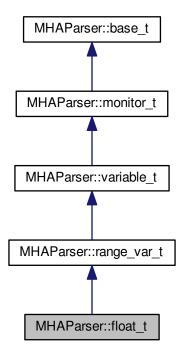

Public Member Functions

float_t (const std::string &help_text, const std::string &initial_value, const std::string &range="")

Constructor for a configuration language variable for 32bit ieee floating-point values.

Public Attributes

· float data

Data field.

Protected Member Functions

- std::string op_setval (expression_t &)
- std::string query_type (const std::string &)
- std::string query_val (const std::string &)

Additional Inherited Members

5.232.1 Detailed Description

Variable with float value.

5.232.2 Constructor & Destructor Documentation

Constructor for a configuration language variable for 32bit ieee floating-point values.

Parameters

help_text	A human-readable text describing the purpose of this configuration variable.
initial_value	The initial value for this variable as a string (decimal representation of the floating-point variable). If a range is given in the third parameter, then the initial value has to be within the range. A human-readable text describing the purpose of this configuration variable.
range	The range of values that this variable can hold can be restricted. A range is a string of the form "[a,b]", where a and b are decimal representations of the inclusive boundaries of the range. a<=b. In a range of the form "]a,b[", both boundaries are excluded. Mixed forms are permitted. a or b can also be omitted if there is no lower or upper limit. The range of values is always restricted by the representable range of the underlying C data type.

```
5.232.3 Member Function Documentation
```

Reimplemented from **MHAParser::base_t** (p. 597).

Reimplemented from **MHAParser::base_t** (p. 597).

5.232.4 Member Data Documentation

5.232.4.1 float MHAParser::float_t::data

Data field.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.233 MHAParser::int_mon_t Class Reference

Monitor variable with int value.

Inheritance diagram for MHAParser::int_mon_t:

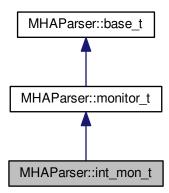

Public Member Functions

int_mon_t (const std::string &hlp)
 Create a monitor variable for integral values.

Public Attributes

• int data

Data field.

Protected Member Functions

```
std::string query_val (const std::string &)
```

```
    std::string query_type (const std::string &)
```

Additional Inherited Members

5.233.1 Detailed Description

Monitor variable with int value.

Monitor variables can be of many types. These variables can be queried through the parser. The public data element contains the monitored state. Write access is only possible from the C++ code by direct access to the data field.

```
5.233.2 Constructor & Destructor Documentation
```

Create a monitor variable for integral values.

Parameters

```
hlp A help text describing this monitor variable.
```

```
5.233.3 Member Function Documentation
```

Reimplemented from **MHAParser::base_t** (p. 597).

Reimplemented from **MHAParser::base_t** (p. 597).

5.233.4 Member Data Documentation

5.233.4.1 int MHAParser::int_mon_t::data

Data field.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.234 MHAParser::int_t Class Reference

Variable with integer value.

Inheritance diagram for MHAParser::int_t:

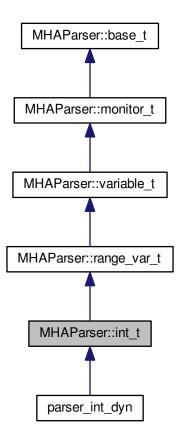

Public Member Functions

int_t (const std::string &help_text, const std::string &initial_value, const std::string &range="")

Constructor for a configuration language variable for integral values.

Public Attributes

• int data

Data field.

Protected Member Functions

- std::string op_setval (expression_t &)
- std::string query_type (const std::string &)
- std::string query_val (const std::string &)

Additional Inherited Members

5.234.1 Detailed Description

Variable with integer value.

5.234.2 Constructor & Destructor Documentation

Constructor for a configuration language variable for integral values.

Parameters

help_text	A human-readable text describing the purpose of this configuration variable.
initial_value	The initial value for this variable as a string (decimal representation of the integer variable). If a range is given in the third parameter, then the initial value has to be within the range.
range	The range of values that this variable can hold can be restricted. A range is a string of the form "[a,b]", where a and b are decimal representations of the integral inclusive boundaries of the range. a<=b. In a range of the form "]a,b[", both boundaries are excluded. Mixed forms are permitted. a or b can also be omitted if there is no lower or upper limit. The range of values is always restricted by the representable range of the underlying C data type
© 2005-2018 HörTe	(usually 32 bits, [-2147483648,2147483647]).

```
5.234.3 Member Function Documentation
5.234.3.1 std::string MHAParser::int_t::op_setval (
                      expression_t & x ) [protected], [virtual]
Reimplemented from MHAParser::variable_t (p. 657).
5.234.3.2 std::string MHAParser::int_t::query_type (
                     const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 597).
5.234.3.3 std::string MHAParser::int_t::query_val (
                     const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 597).
5.234.4 Member Data Documentation
5.234.4.1 int MHAParser::int_t::data
Data field.
The documentation for this class was generated from the following files:
   · mha parser.hh
   mha_parser.cpp
5.235
      MHAParser::keyword_list_t Class Reference
Keyword list class.
Public Types
```

typedef std::vector< std::string >::size_type size_t

Public Member Functions

void set_value (const std::string &)

Select a value from keyword list.

void set_entries (const std::string &)

Set keyword list entries.

const std::string & get_value () const

Return selected value.

- const std::vector< std::string > & get_entries () const

Return keyword list.

const size_t & get_index () const

Return index of selected value.

- void set index (unsigned int)
- void validate () const

Check if index of selected value is valid.

- void add_entry (const std::string &en)
- keyword_list_t ()

Constructor.

Private Attributes

size_t index

Index into list.

std::vector< std::string > entries

List of valid entries.

std::string empty string

5.235.1 Detailed Description

Keyword list class.

The stucture **keyword_list_t** (p. 624) defines a keyword list (vector of strings) with an index into the list. Used as **MHAParser::kw_t** (p. 627), it can be used to access a set of valid keywords through the parser (i.e. one of "pear apple banana").

```
5.235.2 Member Typedef Documentation
```

5.235.2.1 typedef std::vector<std::string>::size_type MHAParser::keyword_list_t::size_t

5.235.3 Constructor & Destructor Documentation

5.235.3.1 MHAParser::keyword_list_t::keyword_list_t ()

Constructor.

```
5.235.4 Member Function Documentation
```

```
5.235.4.1 void MHAParser::keyword_list_t::set_value ( const std::string & s )
```

Select a value from keyword list.

This function selects a value from the keyword list. The index is set to the last matching entry.

Parameters

```
s Value to be selected.
```

```
5.235.4.2 void MHAParser::keyword_list_t::set_entries ( const std::string & s )
```

Set keyword list entries.

With this function, the keyword list can be set from a space separated string list.

Parameters

```
s Space separated entry list.
```

```
5.235.4.3 const std::string & MHAParser::keyword_list_t::get_value ( ) const
```

Return selected value.

```
5.235.4.4 const std::vector< std::string > & MHAParser::keyword_list_t::get_entries ( ) const
```

Return keyword list.

```
5.235.4.5 const MHAParser::keyword_list_t::size_t & MHAParser::keyword_list_t::get_index ( ) const
```

Return index of selected value.

```
5.235.4.6 void MHAParser::keyword_list_t::set_index ( unsigned int idx )
```

5.235.4.7 void MHAParser::keyword_list_t::validate() const

Check if index of selected value is valid.

5.235.5 Member Data Documentation

5.235.5.1 size_t MHAParser::keyword_list_t::index [private]

Index into list.

5.235.5.2 std::vector<std::string> MHAParser::keyword_list_t::entries [private]

List of valid entries.

5.235.5.3 std::string MHAParser::keyword_list_t::empty_string [private]


The documentation for this class was generated from the following files:

- · mha parser.hh
- mha_parser.cpp

5.236 MHAParser::kw_t Class Reference

Variable with keyword list value.

Inheritance diagram for MHAParser::kw_t:

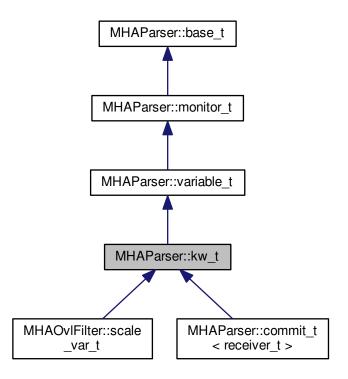

Public Member Functions

• **kw_t** (const std::string &, const std::string &, const std::string &)

Constructor of a keyword list openMHA configuration variable.

kw_t (const kw_t &)

Copy constructor.

• void **set_range** (const std::string &)

Set/change the list of valid entries.

bool isval (const std::string &) const

Test if the given value is selected.

Public Attributes

keyword_list_t data

Variable data in its native type.

Protected Member Functions

- void validate (const keyword_list_t &)
- std::string op_setval (expression_t &)
- std::string query_range (const std::string &)
- std::string query_val (const std::string &)
- std::string query_type (const std::string &)

Additional Inherited Members

5.236.1 Detailed Description

Variable with keyword list value.

5.236.2 Constructor & Destructor Documentation

Constructor of a keyword list openMHA configuration variable.

Parameters

h	A help string describing the purpose of this variable.		
V	The initial value, has to be a value from the list of possible values given in the last		
	parameter. © 2005-2018 HörTech gGmbH, Oldenburg		
rg	A string containing the list of valid entries. The entries have to be separated by space		
	The list of entries has to be delimited by brackets "[", "]".		

```
5.236.2.2 MHAParser::kw_t::kw_t (
const kw_t & src )
```

Copy constructor.

5.236.3 Member Function Documentation

```
5.236.3.1 void MHAParser::kw_t::set_range ( const std::string & r )
```

Set/change the list of valid entries.

Parameters

A string containing the list of valid entries. The entries have to be separated by spaces. The list of entries has to be delimited by brackets "[", "]".

```
5.236.3.2 bool MHAParser::kw_t::isval (
                     const std::string & testval ) const
Test if the given value is selected.
5.236.3.3 void MHAParser::kw t::validate (
                     const keyword_list_t & s ) [protected]
5.236.3.4 std::string MHAParser::kw_t::op_setval (
                      expression_t & x ) [protected], [virtual]
Reimplemented from MHAParser::variable_t (p. 657).
5.236.3.5 std::string MHAParser::kw_t::query_range (
                     const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 597).
5.236.3.6 std::string MHAParser::kw_t::query_val (
                     const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 597).
5.236.3.7 std::string MHAParser::kw_t::query_type (
                      const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 597).
```

5.236.4 Member Data Documentation

5.236.4.1 keyword_list_t MHAParser::kw_t::data

Variable data in its native type.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.237 MHAParser::mcomplex_mon_t Class Reference

Matrix of complex numbers monitor.

Inheritance diagram for MHAParser::mcomplex_mon_t:

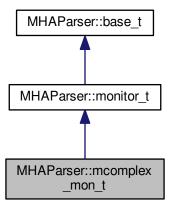

Public Member Functions

mcomplex_mon_t (const std::string &hlp)
 Create a matrix of complex floating point monitor values.

Public Attributes

std::vector< std::vector< mha_complex_t >> data
 Data field.

Protected Member Functions

```
    std::string query_val (const std::string &)
```

• std::string query_type (const std::string &)

Additional Inherited Members

5.237.1 Detailed Description

Matrix of complex numbers monitor.

5.237.2 Constructor & Destructor Documentation

```
5.237.2.1 MHAParser::mcomplex_mon_t::mcomplex_mon_t ( const std::string & hlp )
```

Create a matrix of complex floating point monitor values.

Parameters

```
hlp A help text describing this monitor variable.
```

```
5.237.3 Member Function Documentation
```

Reimplemented from MHAParser::base_t (p. 597).

Reimplemented from **MHAParser::base_t** (p. 597).

5.237.4 Member Data Documentation

 $5.237.4.1 \quad std:: vector < mha_complex_t >> MHAParser:: mcomplex_mon_t:: data$

Data field.


The documentation for this class was generated from the following files:

- mha parser.hh
- mha_parser.cpp

5.238 MHAParser::mcomplex_t Class Reference

Matrix variable with complex value.

Inheritance diagram for MHAParser::mcomplex_t:

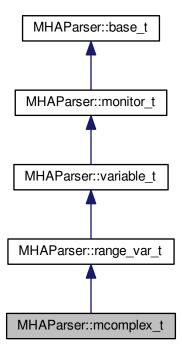

Public Member Functions

mcomplex_t (const std::string &, const std::string &="")

Public Attributes

std::vector< std::vector< mha_complex_t >> data
 Data field.

Protected Member Functions

- std::string op_setval (expression_t &)
- std::string query_type (const std::string &)
- std::string query_val (const std::string &)

```
Additional Inherited Members
```

```
5.238.1 Detailed Description
```

Matrix variable with complex value.

```
5.238.2 Constructor & Destructor Documentation
```

5.238.3 Member Function Documentation

Reimplemented from **MHAParser::variable_t** (p. 657).

Reimplemented from MHAParser::base_t (p. 597).

Reimplemented from **MHAParser::base_t** (p. 597).

5.238.4 Member Data Documentation

```
5.238.4.1 std::vector<std::vector<mha_complex_t>> MHAParser::mcomplex_t::data
```

Data field.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.239 MHAParser::mfloat_mon_t Class Reference

Matrix of floats monitor.

Inheritance diagram for MHAParser::mfloat_mon_t:

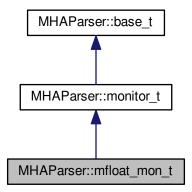

Public Member Functions

mfloat_mon_t (const std::string &hlp)
 Create a matrix of floating point monitor values.

Public Attributes

std::vector< std::vector< float > > data
 Data field.

Protected Member Functions

- std::string query_val (const std::string &)
- std::string query_type (const std::string &)

Additional Inherited Members

5.239.1 Detailed Description

Matrix of floats monitor.

5.239.2 Constructor & Destructor Documentation

5.239.2.1 MHAParser::mfloat_mon_t::mfloat_mon_t (const std::string & hlp)

Create a matrix of floating point monitor values.

Parameters

hlp A help text describing this monitor variable.

5.239.3 Member Function Documentation

Reimplemented from MHAParser::base_t (p. 597).

Reimplemented from **MHAParser::base_t** (p. 597).

5.239.4 Member Data Documentation

```
5.239.4.1 std::vector < std::vector < float > > MHAParser::mfloat_mon_t::data
```

Data field.


The documentation for this class was generated from the following files:

- · mha_parser.hh
- mha_parser.cpp

5.240 MHAParser::mfloat_t Class Reference

Matrix variable with float value.

Inheritance diagram for MHAParser::mfloat_t:

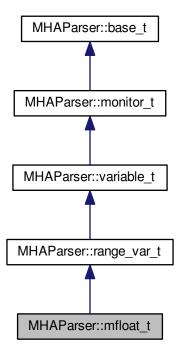

Public Member Functions

mfloat_t (const std::string &, const std::string &="")
 Create a float matrix parser variable.

Public Attributes

std::vector< std::vector< float > > data
 Data field.

Protected Member Functions

- std::string op_setval (expression_t &)
- std::string query_type (const std::string &)
- std::string query_val (const std::string &)

Additional Inherited Members

5.240.1 Detailed Description

Matrix variable with float value.

5.240.2 Constructor & Destructor Documentation

Create a float matrix parser variable.

Parameters

h	A human-readable text describing the purpose of this configuration variable.
V	The initial value of the variable, as a string, in openMHA configuration language: (e.g. "[[0 1]; [2 3]]" for a matrix), described in the "Multidimensional Variables" s2.1.3 section of the openMHA User Manual.
rg	The numeric range to enforce on all members of the matrix.

```
5.240.3 Member Function Documentation
```

Reimplemented from **MHAParser::variable_t** (p. 657).

Reimplemented from MHAParser::base_t (p. 597).

Reimplemented from **MHAParser::base_t** (p. 597).

5.240.4 Member Data Documentation

 $\textbf{5.240.4.1} \quad \textbf{std::vector} < \textbf{std::vector} < \textbf{float} >> \textbf{MHAParser::mfloat_t::data}$


Data field.

The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.241 MHAParser::mhaconfig_mon_t Class Reference

Inheritance diagram for MHAParser::mhaconfig_mon_t:

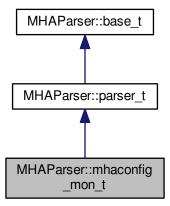

Public Member Functions

- mhaconfig_mon_t (const std::string &help="")
- void update (const mhaconfig_t &cf)

Private Attributes

• MHAParser::int mon t channels

Number of audio channels.

MHAParser::string_mon_t domain

Signal domain (MHA WAVEFORM or MHA SPECTRUM)

MHAParser::int_mon_t fragsize

Fragment size of waveform data.

MHAParser::int_mon_t wndlen

Window length of spectral data.

MHAParser::int_mon_t fftlen

FFT length of spectral data.

MHAParser::float_mon_t srate

Sampling rate in Hz.

Additional Inherited Members

```
5.241.1 Constructor & Destructor Documentation
```

5.241.2 Member Function Documentation

```
5.241.2.1 void MHAParser::mhaconfig_mon_t::update ( const mhaconfig_t & cf )
```

5.241.3 Member Data Documentation

```
5.241.3.1 MHAParser::int_mon_t MHAParser::mhaconfig_mon_t::channels [private]
```

Number of audio channels.

```
5.241.3.2 MHAParser::string_mon_t MHAParser::mhaconfig_mon_t::domain [private]
```

Signal domain (MHA WAVEFORM or MHA SPECTRUM)

5.241.3.3 MHAParser::int_mon_t MHAParser::mhaconfig_mon_t::fragsize [private]

Fragment size of waveform data.

5.241.3.4 MHAParser::int_mon_t MHAParser::mhaconfig_mon_t::wndlen [private]

Window length of spectral data.

5.241.3.5 MHAParser::int_mon_t MHAParser::mhaconfig_mon_t::fftlen [private]

FFT length of spectral data.

5.241.3.6 MHAParser::float_mon_t MHAParser::mhaconfig_mon_t::srate [private]

Sampling rate in Hz.

The documentation for this class was generated from the following files:

- · mha parser.hh
- mha_parser.cpp

5.242 MHAParser::mhapluginloader_t Class Reference

Class to create a plugin loader in a parser, including the load logic.

Public Member Functions

- mhapluginloader_t (MHAParser::parser_t &parent, algo_comm_t ac, const std::string &plugname_name="plugin_name", const std::string &prefix="")
- ∼mhapluginloader_t ()
- void prepare (mhaconfig_t &cf)
- · void release ()
- void process (mha_wave_t *sIn, mha_wave_t **sOut)
- void process (mha_spec_t *sIn, mha_spec_t **sOut)
- void process (mha_wave_t *sln, mha_spec_t **sOut)
- void process (mha_spec_t *sln, mha_wave_t **sOut)
- mhaconfig_t get_cfin () const
- mhaconfig_t get_cfout () const
- const std::string & get_last_name () const

Protected Attributes

PluginLoader::mhapluginloader_t * plug

Private Member Functions

void load_plug ()

Private Attributes

- MHAParser::parser_t & parent_
- MHAParser::string_t plugname
- std::string prefix_
- MHAEvents::connector_t< mhapluginloader_t > connector
- · algo_comm_t ac_
- std::string last_name
- std::string plugname name
- mhaconfig_t cf_in_
- mhaconfig_t cf_out_

Static Private Attributes

static double bookkeeping

5.242.1 Detailed Description

Class to create a plugin loader in a parser, including the load logic.

```
5.242.2 Constructor & Destructor Documentation
```

- 5.242.2.2 MHAParser::mhapluginloader_t::~mhapluginloader_t ()
- 5.242.3 Member Function Documentation

```
5.242.3.1 void MHAParser::mhapluginloader_t::prepare ( mhaconfig_t & cf )
```

```
5.242.3.2 void MHAParser::mhapluginloader_t::release ( )
```

```
5.242.3.5 void MHAParser::mhapluginloader t::process (
                     mha_wave_t * sln,
                     mha spec t ** sOut ) [inline]
5.242.3.6 void MHAParser::mhapluginloader_t::process (
                     mha spec t * sln,
                     mha_wave_t ** sOut ) [inline]
5.242.3.7 mhaconfig_t MHAParser::mhapluginloader_t::get_cfin( ) const [inline]
5.242.3.8
         mhaconfig t MHAParser::mhapluginloader_t::get_cfout( ) const [inline]
5.242.3.9 const std::string& MHAParser::mhapluginloader_t::get_last_name( ) const [inline]
5.242.3.10 void MHAParser::mhapluginloader_t::load_plug( ) [private]
5.242.4 Member Data Documentation
5.242.4.1 PluginLoader::mhapluginloader_t* MHAParser::mhapluginloader_t::plug
         [protected]
5.242.4.2 MHAParser::parser_t& MHAParser::mhapluginloader_t::parent_ [private]
5.242.4.3 MHAParser::string_t MHAParser::mhapluginloader_t::plugname [private]
5.242.4.4 std::string MHAParser::mhapluginloader_t::prefix_ [private]
5.242.4.5 MHAEvents::connector t<mhapluginloader t> MHAParser::mhapluginloader_t ←
         ::connector [private]
5.242.4.6 algo_comm_t MHAParser::mhapluginloader_t::ac_ [private]
5.242.4.7 std::string MHAParser::mhapluginloader_t::last_name [private]
5.242.4.8 std::string MHAParser::mhapluginloader_t::plugname_name_ [private]
5.242.4.9 mhaconfig_t MHAParser::mhapluginloader_t::cf_in_ [private]
5.242.4.10 mhaconfig_t MHAParser::mhapluginloader_t::cf_out_ [private]
5.242.4.11 double MHAParser::mhapluginloader_t::bookkeeping [static], [private]
```


The documentation for this class was generated from the following files:

- mhapluginloader.h
- mhapluginloader.cpp

5.243 MHAParser::monitor t Class Reference

Base class for monitors and variable nodes.

Inheritance diagram for MHAParser::monitor_t:

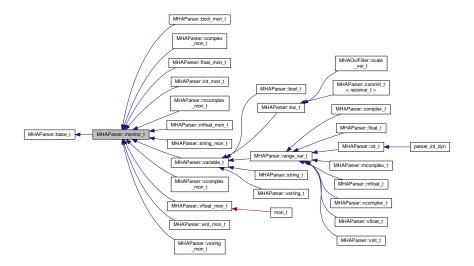

Public Member Functions

- monitor_t (const std::string &)
- monitor_t (const monitor_t &)
- std::string op_query (expression_t &)
- std::string query_dump (const std::string &)
- std::string query_perm (const std::string &)

Additional Inherited Members

5.243.1 Detailed Description

Base class for monitors and variable nodes.

```
5.243.2 Constructor & Destructor Documentation
```

5.243.3 Member Function Documentation

Reimplemented from MHAParser::base_t (p. 596).

Reimplemented from **MHAParser::base_t** (p. 596).

Reimplemented from **MHAParser::base_t** (p. 597).

Reimplemented in **MHAParser::variable_t** (p. 657).

The documentation for this class was generated from the following files:

- mha parser.hh
- mha_parser.cpp

5.244 MHAParser::parser t Class Reference

Parser node class.

Inherits MHAParser::base_t.

Inherited by AuditoryProfile::parser_t, AuditoryProfile::parser_t::ear_t, AuditoryProfile ::parser t::fmap t, dc::wideband inhib vars t, DynComp::dc afterburn vars t, fw t, io file t, io parser t, io tcp parser t, MHAFilter::adapt filter t, MHAFilter::iir filter t, MHAIOJack::io jack t, MHAIOJackdb::io jack t, MHAIOPortAudio::device info t, MH← AIOPortAudio::io_portaudio_t, MHAParser::mhaconfig_mon_t, MHAParser::window_t, MHAPlugin::plugin t< runtime cfg t>, MHAPlugin Split::split t, MHAPlugin::plugin ← t< ac2wave_t >, MHAPlugin::plugin_t< acConcat_wave_config >, MHAPlugin::plugin == _t< acPooling_wave_config >, MHAPlugin::plugin_t< acSteer_config >, MHAPlugin \leftarrow ::plugin_t< acTransform_wave_config >, MHAPlugin::plugin_t< adm_rtconfig_t >, M← HAPlugin::plugin t< analysepath t >, MHAPlugin::plugin t< cfg t >, MHAPlugin \leftarrow ::plugin_t< cohflt_t >, MHAPlugin::plugin_t< combc_t >, MHAPlugin::plugin_t< db_t >, MHAPlugin::plugin_t< dc_t >, MHAPlugin::plugin_t< delaysum_t >, MHAPlugin-::plugin_t< doasym_classification_config >, MHAPlugin::plugin_t< doasym_feature extraction config >, MHAPlugin::plugin t< example5 t >, MHAPlugin::plugin t< fftfb plug t >, MHAPlugin::plugin t< float >, MHAPlugin::plugin t< hilbert shifter t >, MHAPlugin::plugin t< int >, MHAPlugin::plugin t< lpc bl predictor config >, MHAPlugin::plugin_t< lpc_burglattice_config >, MHAPlugin::plugin_t< lpc_config >, MHAPlugin::plugin t< MHA AC::spectrum t >, MHAPlugin::plugin t< MHA AC-::waveform t >, MHAPlugin::plugin t< mhachain::plugs t >, MHAPlugin::plugin t< $\label{eq:mass_mass_mass_mass_mass} \begin{subarray}{ll} MHAS ignal::waveform_t>, MHAP lugin_t < MH$::plugin_t< MHAWindow::fun_t >, MHAPlugin::plugin_t< noisePowProposed >, M← HAPlugin::plugin_t< overlapadd_t >, MHAPlugin::plugin_t< prediction_error_config >, MHAPlugin::plugin_t< resampling_t >, MHAPlugin::plugin_t< rmslevel_t >, MHA-Plugin::plugin_t < route::process_t >, MHAPlugin::plugin_t < rt_nlms_t >, MHAPlugin ← ::plugin_t< scaler_t >, MHAPlugin::plugin_t< sine_cfg_t >, MHAPlugin::plugin_t< smoothspec_wrap_t >, MHAPlugin::plugin_t< spec2wave_t >, MHAPlugin::plugin_t< spec fader t >, MHAPlugin::plugin t< steerbf config >, MHAPlugin::plugin t< timo← Config >, MHAPlugin::plugin t< wave2spec t >, MHAPlugin::plugin t< wavwriter t >, and softclipper_variables_t.

Public Member Functions

- parser_t (const std::string &help_text="")
 - Construct detached node to be used in the configuration tree.
- \sim parser t()
- void insert_item (const std::string &, base_t *)

Register a parser item into this sub-parser.

void remove_item (const std::string &)

Remove an item by name.

void force_remove_item (const std::string &)

Remove an item by name.

void remove_item (const base_t *)

Remove an item by address.

Protected Member Functions

- std::string op_subparse (expression_t &)
- std::string op_setval (expression_t &)
- std::string op_query (expression_t &)
- std::string query_type (const std::string &)
- std::string query_dump (const std::string &)
- std::string query_entries (const std::string &)
- std::string query_readfile (const std::string &)
- std::string query_savefile (const std::string &)
- std::string query_savefile_compact (const std::string &)
- std::string query_savemons (const std::string &)
- std::string query_val (const std::string &)
- std::string query_listids (const std::string &)
- void set_id_string (const std::string &)

Private Attributes

- entry_map_t entries
- std::string id_string

identification string

- std::string srcfile
- unsigned int srcline
- std::string last errormsg

Additional Inherited Members

5.244.1 Detailed Description

Parser node class.

A **parser_t** (p. 644) instance is a node in the configuration tree. A parser node can contain any number of other **parser_t** (p. 644) instances or configuration language variables. These items are inserted into a parser node using the **parser_t::insert_item** (p. 646) method.

5.244.2 Constructor & Destructor Documentation

```
5.244.2.1 MHAParser::parser_t::parser_t (
const std::string & help_text = " " )
```

Construct detached node to be used in the configuration tree.

Parameters

help_text	A text describing this node. E.g. if this node lives at the root of some openMHA
	plugin, then the help text should describe the functionality of the plugin.

```
5.244.2.2 MHAParser::parser_t::~parser_t ( )
```

5.244.3 Member Function Documentation

Register a parser item into this sub-parser.

This function registers an item under a given name into this sub-parser and makes it accessible to the parser interface.

Parameters

n	Name of the item in the configuration tree
е	C++ pointer to the item instance. e can either point to a variable, to a monitor, or to
	another sub-parser.

```
5.244.3.2 void MHAParser::parser_t::remove_item ( const std::string & n )
```

Remove an item by name.

If the item does not exist, an error is being reported.

Parameters

n Name of parser item to be removed from list.

```
5.244.3.3 void MHAParser::parser_t::force_remove_item ( const std::string & n )
```

Remove an item by name.

Non-existing items are ignored.

Parameters

```
n Name of parser item to be removed from list.
```

```
5.244.3.4 void MHAParser::parser_t::remove_item ( const base_t * addr )
```

Remove an item by address.

The item belonging to an address is being removed from the list of items.

Parameters

```
addr Address of parser item to be removed.
```

const std::string & s) [protected], [virtual]

5.244.3.9 std::string MHAParser::parser_t::query_dump (

Reimplemented from **MHAParser::base_t** (p. 596).

```
5.244.3.10 std::string MHAParser::parser_t::query_entries (
                       const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 597).
5.244.3.11 std::string MHAParser::parser_t::query_readfile (
                       const std::string & fname ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 597).
5.244.3.12 std::string MHAParser::parser_t::query_savefile (
                       const std::string & fname ) [protected], [virtual]
Reimplemented from MHAParser::base t (p. 598).
5.244.3.13 std::string MHAParser::parser_t::query_savefile_compact (
                       const std::string & fname ) [protected], [virtual]
Reimplemented from MHAParser::base t (p. 598).
5.244.3.14 std::string MHAParser::parser t::query savemons (
                       const std::string & fname ) [protected], [virtual]
Reimplemented from MHAParser::base t (p. 598).
5.244.3.15 std::string MHAParser::parser t::query val (
                       const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base t (p. 597).
5.244.3.16 std::string MHAParser::parser_t::query_listids (
                       const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base t (p. 598).
5.244.3.17 void MHAParser::parser_t::set_id_string (
                       const std::string & s ) [protected]
5.244.4 Member Data Documentation
5.244.4.1 entry_map_t MHAParser::parser_t::entries [private]
5.244.4.2 std::string MHAParser::parser_t::id_string [private]
identification string
```

- **5.244.4.3 std::string** MHAParser::parser_t::srcfile [private]
- **5.244.4.4** unsigned int MHAParser::parser_t::srcline [private]
- **5.244.4.5** std::string MHAParser::parser_t::last_errormsg [private]


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.245 MHAParser::range_var_t Class Reference

Base class for all variables with a numeric value range.

Inheritance diagram for MHAParser::range_var_t:

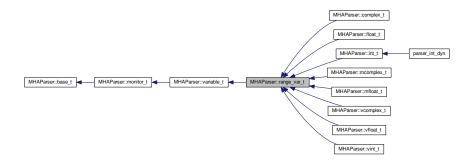

Public Member Functions

- range_var_t (const std::string &, const std::string &="")
- range var t (const range var t &)
- std::string query_range (const std::string &)
- void set_range (const std::string &r)
 Change the valid range of a variable.
- void validate (const int &)
- void validate (const float &)
- void validate (const mha_complex_t &)
- void validate (const std::vector< int > &)
- void validate (const std::vector< float > &)
- void validate (const std::vector< mha_complex_t > &)
- void validate (const std::vector< std::vector< float > > &)
- void validate (const std::vector< std::vector< mha_complex_t >> &)

Protected Attributes

float low_limit

Lower limit of range.

float up_limit

Upper limit of range.

bool low_incl

Lower limit is included (or excluded) in range.

bool up_incl

Upper limit is included (or excluded) in range.

· bool check_low

Check lower limit.

bool check_up

Check upper limit.

bool check range

Range checking is active.

Additional Inherited Members

5.245.1 Detailed Description

Base class for all variables with a numeric value range.

```
5.245.2 Constructor & Destructor Documentation
```

5.245.3 Member Function Documentation

Reimplemented from MHAParser::base_t (p. 597).

```
5.245.3.2 void MHAParser::range_var_t::set_range ( const std::string & r )
```

Change the valid range of a variable.

New range of the variable (string representation)

Parameters

```
5.245.3.3 void MHAParser::range_var_t::validate (
                       const int & v )
5.245.3.4 void MHAParser::range_var_t::validate (
                       const float & v )
5.245.3.5 void MHAParser::range_var_t::validate (
                       const mha_complex_t & v )
5.245.3.6 void MHAParser::range_var_t::validate (
                       const std::vector< int > & v )
5.245.3.7 void MHAParser::range_var_t::validate (
                       const std::vector< float > & v )
5.245.3.8 void MHAParser::range var t::validate (
                       const std::vector< mha_complex_t > & v )
5.245.3.9 void MHAParser::range var t::validate (
                       const std::vector< std::vector< float > > & \nu )
5.245.3.10 void MHAParser::range var t::validate (
                        const std::vector< std::vector< mha_complex_t >> & v )
5.245.4 Member Data Documentation
5.245.4.1 float MHAParser::range_var_t::low_limit [protected]
Lower limit of range.
5.245.4.2 float MHAParser::range_var_t::up_limit [protected]
Upper limit of range.
5.245.4.3 bool MHAParser::range_var_t::low_incl [protected]
Lower limit is included (or excluded) in range.
5.245.4.4 bool MHAParser::range_var_t::up_incl [protected]
Upper limit is included (or excluded) in range.
```

5.245.4.5 bool MHAParser::range_var_t::check_low [protected]

Check lower limit.

5.245.4.6 bool MHAParser::range_var_t::check_up [protected]

Check upper limit.

5.245.4.7 bool MHAParser::range_var_t::check_range [protected]

Range checking is active.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.246 MHAParser::string_mon_t Class Reference

Monitor with string value.

Inheritance diagram for MHAParser::string_mon_t:

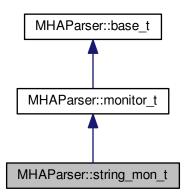

Public Member Functions

string_mon_t (const std::string &hlp)
 Create a monitor variable for string values.

```
Public Attributes
```

• std::string data

Data field.

Protected Member Functions

- std::string query_val (const std::string &)
- std::string query_type (const std::string &)

Additional Inherited Members

5.246.1 Detailed Description

Monitor with string value.

5.246.2 Constructor & Destructor Documentation

```
5.246.2.1 MHAParser::string_mon_t::string_mon_t ( const std::string & hlp )
```

Create a monitor variable for string values.

Parameters

```
hlp A help text describing this monitor variable.
```

5.246.3 Member Function Documentation

Reimplemented from **MHAParser::base_t** (p. 597).

Reimplemented from **MHAParser::base_t** (p. 597).

5.246.4 Member Data Documentation

5.246.4.1 std::string MHAParser::string_mon_t::data

Data field.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.247 MHAParser::string_t Class Reference

Variable with a string value.

Inheritance diagram for MHAParser::string_t:

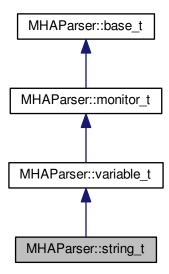

Public Member Functions

string_t (const std::string &, const std::string &)
 Constructor of a openMHA configuration variable for string values.

Public Attributes

• std::string data

Data field.

Protected Member Functions

```
• std::string op_setval (expression_t &)
```

- std::string query_type (const std::string &)
- std::string query_val (const std::string &)

Additional Inherited Members

5.247.1 Detailed Description

Variable with a string value.

5.247.2 Constructor & Destructor Documentation

Constructor of a openMHA configuration variable for string values.

Parameters

```
h A help string describing the purpose of this variable.v The initial string value
```

5.247.3 Member Function Documentation

Reimplemented from **MHAParser::variable_t** (p. 657).

Reimplemented from **MHAParser::base_t** (p. 597).

Reimplemented from **MHAParser::base_t** (p. 597).

5.247.4 Member Data Documentation

5.247.4.1 std::string MHAParser::string_t::data

Data field.


The documentation for this class was generated from the following files:

- · mha_parser.hh
- mha_parser.cpp

5.248 MHAParser::variable_t Class Reference

Base class for variable nodes.

Inheritance diagram for MHAParser::variable_t:

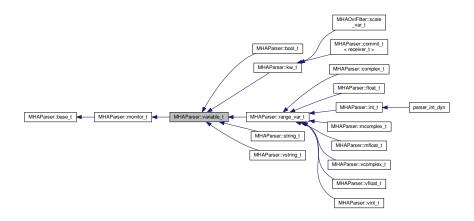

Public Member Functions

- variable_t (const std::string &)
- std::string op_setval (expression_t &)
- std::string query_perm (const std::string &)
- void **setlock** (const bool &)

Lock a variable against write access.

Private Attributes

• bool locked

```
Additional Inherited Members
5.248.1 Detailed Description
Base class for variable nodes.
5.248.2 Constructor & Destructor Documentation
5.248.2.1 MHAParser::variable_t::variable_t (
                     const std::string & h )
5.248.3 Member Function Documentation
5.248.3.1 std::string MHAParser::variable_t::op_setval (
                     expression_t & x ) [virtual]
Reimplemented from MHAParser::base_t (p. 596).
Reimplemented in MHAParser::mcomplex_t (p. 633), MHAParser::mfloat_t (p. 637), MH
AParser::vcomplex_t (p. 661), MHAParser::vfloat_t (p. 665), MHAParser::vint_t (p. 669),
MHAParser::complex_t (p. 613), MHAParser::float_t (p. 619), MHAParser::int_t (p. 624),
MHAParser::bool_t (p. 605), MHAParser::vstring_t (p. 673), MHAParser::string_t (p. 655),
and MHAParser::kw_t (p. 629).
5.248.3.2 std::string MHAParser::variable_t::query_perm (
                     const std::string & s ) [virtual]
Reimplemented from MHAParser::monitor_t (p. 644).
5.248.3.3 void MHAParser::variable_t::setlock (
                     const bool & b)
Lock a variable against write access.
Parameters
    Lock state
5.248.4 Member Data Documentation
```

The documentation for this class was generated from the following files:


5.248.4.1 bool MHAParser::variable t::locked [private]

- mha_parser.hh
- mha_parser.cpp

5.249 MHAParser::vcomplex_mon_t Class Reference

Monitor with vector of complex values.

Inheritance diagram for MHAParser::vcomplex_mon_t:

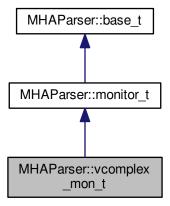

Public Member Functions

vcomplex_mon_t (const std::string &hlp)
 Create a vector of complex monitor values.

Public Attributes

std::vector < mha_complex_t > data
 Data field.

Protected Member Functions

- std::string query_val (const std::string &)
- std::string query_type (const std::string &)

Additional Inherited Members

5.249.1 Detailed Description

Monitor with vector of complex values.

5.249.2 Constructor & Destructor Documentation

5.249.2.1 MHAParser::vcomplex_mon_t::vcomplex_mon_t (const std::string & hlp)

Create a vector of complex monitor values.

Parameters

hlp A help text describing this monitor variable.

5.249.3 Member Function Documentation

Reimplemented from **MHAParser::base_t** (p. 597).

Reimplemented from MHAParser::base_t (p. 597).

5.249.4 Member Data Documentation

5.249.4.1 std::vector<mha_complex_t> MHAParser::vcomplex_mon_t::data

Data field.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.250 MHAParser::vcomplex_t Class Reference

Vector variable with complex value.

Inheritance diagram for MHAParser::vcomplex_t:

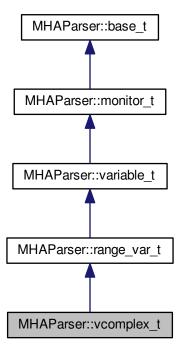

Public Member Functions

• vcomplex_t (const std::string &, const std::string &, const std::string &="")

Public Attributes

std::vector < mha_complex_t > data
 Data field.

Protected Member Functions

- std::string op_setval (expression_t &)
- std::string query_type (const std::string &)
- std::string query_val (const std::string &)

```
Additional Inherited Members
```

```
5.250.1 Detailed Description
```

Vector variable with complex value.

```
5.250.2 Constructor & Destructor Documentation
```

5.250.3 Member Function Documentation

Reimplemented from **MHAParser::variable_t** (p. 657).

Reimplemented from MHAParser::base_t (p. 597).

Reimplemented from **MHAParser::base_t** (p. 597).

5.250.4 Member Data Documentation

5.250.4.1 std::vector<mha_complex_t> MHAParser::vcomplex_t::data

Data field.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.251 MHAParser::vfloat_mon_t Class Reference

Vector of floats monitor.

Inheritance diagram for MHAParser::vfloat_mon_t:

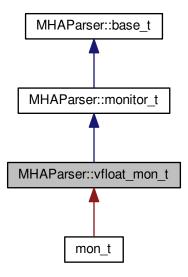

Public Member Functions

vfloat_mon_t (const std::string &hlp)
 Create a vector of floating point monitor values.

Public Attributes

std::vector< float > data
 Data field.

Protected Member Functions

- std::string query_val (const std::string &)
- std::string query_type (const std::string &)

Additional Inherited Members

5.251.1 Detailed Description

Vector of floats monitor.

```
5.251.2 Constructor & Destructor Documentation
```

```
5.251.2.1 MHAParser::vfloat_mon_t::vfloat_mon_t ( const std::string & hlp )
```

Create a vector of floating point monitor values.

Parameters

```
hlp A help text describing this monitor variable.
```

5.251.3 Member Function Documentation

Reimplemented from **MHAParser::base_t** (p. 597).

Reimplemented from **MHAParser::base_t** (p. 597).

5.251.4 Member Data Documentation

5.251.4.1 std::vector<float> MHAParser::vfloat_mon_t::data

Data field.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.252 MHAParser::vfloat_t Class Reference

Vector variable with float value.

Inheritance diagram for MHAParser::vfloat_t:

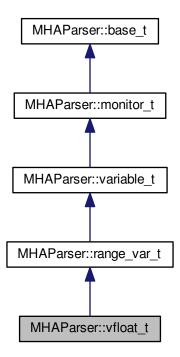

Public Member Functions

vfloat_t (const std::string &, const std::string &="")
 Create a float vector parser variable.

Public Attributes

std::vector< float > data
 Data field.

Protected Member Functions

- std::string op_setval (expression_t &)
- std::string query_type (const std::string &)
- std::string query_val (const std::string &)

Additional Inherited Members

5.252.1 Detailed Description

Vector variable with float value.

5.252.2 Constructor & Destructor Documentation

Create a float vector parser variable.

Parameters

h	A human-readable text describing the purpose of this configuration variable.
V	The initial value of the variable, as a string, in openMHA configuration language:
	(e.g. "[0 1 2.1 3]" for a vector), described in the "Multidimensional Variables"
	s2.1.3 section of the openMHA User Manual.
rg	The numeric range to enforce on all members of the vector.

5.252.3 Member Function Documentation

Reimplemented from **MHAParser::variable_t** (p. 657).

Reimplemented from **MHAParser::base_t** (p. 597).

Reimplemented from **MHAParser::base_t** (p. 597).

5.252.4 Member Data Documentation

5.252.4.1 std::vector<float> MHAParser::vfloat_t::data

Data field.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.253 MHAParser::vint_mon_t Class Reference

Vector of ints monitor.

Inheritance diagram for MHAParser::vint_mon_t:

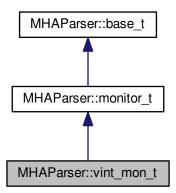

Public Member Functions

vint_mon_t (const std::string &hlp)
 Create a vector of integer monitor values.

Public Attributes

• std::vector< int > **data**Data field.

Protected Member Functions

```
    std::string query_val (const std::string &)
```

std::string query_type (const std::string &)

Additional Inherited Members

5.253.1 Detailed Description

Vector of ints monitor.

5.253.2 Constructor & Destructor Documentation

```
5.253.2.1 MHAParser::vint_mon_t::vint_mon_t ( const std::string & hlp )
```

Create a vector of integer monitor values.

Parameters

```
hlp A help text describing this monitor variable.
```

```
5.253.3 Member Function Documentation
```

Reimplemented from MHAParser::base_t (p. 597).

Reimplemented from **MHAParser::base_t** (p. 597).

5.253.4 Member Data Documentation

5.253.4.1 std::vector<int> MHAParser::vint_mon_t::data

Data field.


The documentation for this class was generated from the following files:

- mha parser.hh
- mha_parser.cpp

5.254 MHAParser::vint_t Class Reference

Variable with vector<int> value.

Inheritance diagram for MHAParser::vint_t:

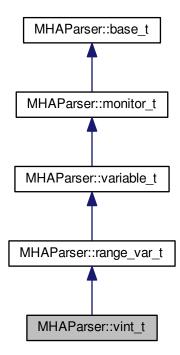

Public Member Functions

vint_t (const std::string &, const std::string &="")
 Constructor.

Public Attributes

std::vector< int > data
 Data field.

Protected Member Functions

- std::string op_setval (expression_t &)
- std::string query_type (const std::string &)
- std::string query_val (const std::string &)

Additional Inherited Members

5.254.1 Detailed Description

Variable with vector<int> value.

5.254.2 Constructor & Destructor Documentation

```
5.254.2.1 MHAParser::vint_t::vint_t (

const std::string & h,

const std::string & v,

const std::string & rg = " " )
```

Constructor.

Parameters

h	help string
V	initial value
rg	optional: range constraint for all elements

5.254.3 Member Function Documentation

Reimplemented from **MHAParser::variable_t** (p. 657).

Reimplemented from **MHAParser::base_t** (p. 597).

Reimplemented from **MHAParser::base_t** (p. 597).

5.254.4 Member Data Documentation

5.254.4.1 std::vector<int> MHAParser::vint_t::data

Data field.


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.255 MHAParser::vstring_mon_t Class Reference

Vector of monitors with string value.

Inheritance diagram for MHAParser::vstring_mon_t:

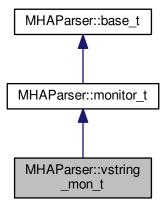

Public Member Functions

vstring_mon_t (const std::string &hlp)
 Create a vector of string monitor values.

Public Attributes

std::vector< std::string > data
 Data field.

Protected Member Functions

```
std::string query_val (const std::string &)
```

std::string query_type (const std::string &)

Additional Inherited Members

5.255.1 Detailed Description

Vector of monitors with string value.

5.255.2 Constructor & Destructor Documentation

5.255.2.1 MHAParser::vstring_mon_t::vstring_mon_t (const std::string & hlp)

Create a vector of string monitor values.

Parameters

```
hlp A help text describing this monitor variable.
```

```
5.255.3 Member Function Documentation
```

Reimplemented from **MHAParser::base_t** (p. 597).

Reimplemented from **MHAParser::base_t** (p. 597).

5.255.4 Member Data Documentation

5.255.4.1 std::vector<std::string> MHAParser::vstring_mon_t::data

Data field.


The documentation for this class was generated from the following files:

- mha parser.hh
- mha_parser.cpp

5.256 MHAParser::vstring_t Class Reference

Vector variable with string values.

Inheritance diagram for MHAParser::vstring_t:

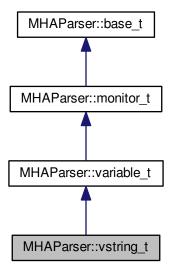

Public Member Functions

• vstring_t (const std::string &, const std::string &)

Public Attributes

std::vector< std::string > data
 Data field.

Protected Member Functions

- std::string op_setval (expression_t &)
- std::string query_type (const std::string &)
- std::string query_val (const std::string &)

Additional Inherited Members

5.256.1 Detailed Description

Vector variable with string values.

```
5.256.2 Constructor & Destructor Documentation
5.256.2.1 MHAParser::vstring_t::vstring_t (
                      const std::string & h,
                      const std::string & v )
5.256.3 Member Function Documentation
5.256.3.1 std::string MHAParser::vstring_t::op_setval (
                      expression_t & x ) [protected], [virtual]
Reimplemented from MHAParser::variable_t (p. 657).
5.256.3.2 std::string MHAParser::vstring_t::query_type (
                      const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 597).
5.256.3.3 std::string MHAParser::vstring_t::query_val (
                      const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 597).
5.256.4 Member Data Documentation
5.256.4.1 std::vector<std::string> MHAParser::vstring_t::data
Data field.
```


The documentation for this class was generated from the following files:

- mha_parser.hh
- mha_parser.cpp

5.257 MHAParser::window_t Class Reference

MHA configuration interface for a window function generator.

Inheritance diagram for MHAParser::window_t:

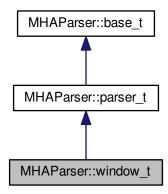

Public Types

Public Member Functions

- window_t (const std::string &help="Window type configuration.")
 Constructor to create parser class.
- MHAWindow::base_t get_window (unsigned int len) const Create a window instance, use default parameters.
- MHAWindow::base_t get_window (unsigned int len, float xmin) const Create a window instance.
- MHAWindow::base_t get_window (unsigned int len, float xmin, float xmax) const Create a window instance.
- MHAWindow::base_t get_window (unsigned int len, float xmin, float xmax, bool minincluded) const

Create a window instance.

 MHAWindow::base_t get_window (unsigned int len, float xmin, float xmax, bool minincluded, bool maxincluded) const

Create a window instance.

MHAParser::window_t::wtype_t get_type () const

Return currently selected window type.

Private Attributes

MHAParser::kw_t wtypeMHAParser::vfloat t user

Additional Inherited Members

5.257.1 Detailed Description

MHA configuration interface for a window function generator.

This class implements a configuration interface (sub-parser) for window type selection and user-defined window type. It provides member functions to generate an instance of **MHA**← **Window::base_t** (p. 790) based on the values provided by the configuration interface.

The configuration interface is derived from **MHAParser::parser_t** (p. 644) and can thus be inserted into the configuration tree using the **insert_item()** (p. 646) method of the parent parser.

If one of the pre-defined window types is used, then the window is generated using the **MHA** \leftarrow **Window::fun_t** (p. 793) class constructor; for the user-defined type the values from the "user" variable are copied.

```
5.257.2 Member Enumeration Documentation
```

```
5.257.2.1 enum MHAParser::window_t::wtype_t
```

Enumerator

```
wnd_rect
wnd_hann
wnd_hamming
wnd_blackman
wnd_bartlett
wnd_user
```

5.257.3 Constructor & Destructor Documentation

Constructor to create parser class.

5.257.4 Member Function Documentation

```
5.257.4.1 MHAWindow::base_t MHAParser::window_t::get_window ( unsigned int len ) const
```

Create a window instance, use default parameters.

float xmax) const

Create a window instance.

Create a window instance.

Create a window instance.

```
5.257.4.6 MHAParser::window_t::wtype_t MHAParser::window_t::get_type ( ) const
```

Return currently selected window type.

```
5.257.5 Member Data Documentation
```

```
5.257.5.1 MHAParser::kw_t MHAParser::window_t::wtype [private]
```


5.257.5.2 MHAParser::vfloat_t MHAParser::window_t::user [private]

The documentation for this class was generated from the following files:

- mha_windowparser.h
- mha_windowparser.cpp

5.258 mhaplug_cfg_t Class Reference

Inheritance diagram for mhaplug_cfg_t:

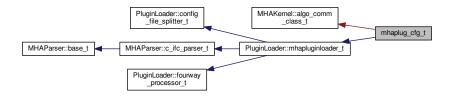

Public Member Functions

- mhaplug_cfg_t (algo_comm_t iac, const std::string &libname, bool use_own_ac)
- ~mhaplug_cfg_t () throw ()

Additional Inherited Members

5.258.1 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

altplugs.cpp

5.259 MHAPlugin::cfg_chain_t< runtime_cfg_t > Class Template Reference

Public Member Functions

- cfg_chain_t (runtime_cfg_t *id)
- ~cfg_chain_t ()

Public Attributes

```
• cfg_chain_t< runtime_cfg_t > * next
```

- bool not_in_use
- runtime_cfg_t * data
- 5.259.1 Constructor & Destructor Documentation

```
5.259.1.2 template < class runtime_cfg_t > MHAPlugin::cfg_chain_t < runtime_cfg_t >::~cfg_chain_t( )
```


- 5.259.2 Member Data Documentation
- 5.259.2.1 template < class runtime_cfg_t > cfg_chain_t < runtime_cfg_t >* MHAPlugin::cfg_chain_t < runtime_cfg_t >::next
- 5.259.2.2 template < class runtime_cfg_t > bool MHAPlugin::cfg_chain_t < runtime_cfg_t >::not_in_use
- 5.259.2.3 template < class runtime_cfg_t > runtime_cfg_t * MHAPlugin::cfg_chain_t < runtime_cfg_t >::data

The documentation for this class was generated from the following file:

- mha_plugin.hh
- 5.260 MHAPlugin::config_t< runtime_cfg_t > Class Template Reference

Template class for thread safe configuration.

Inheritance diagram for MHAPlugin::config_t< runtime_cfg_t >:

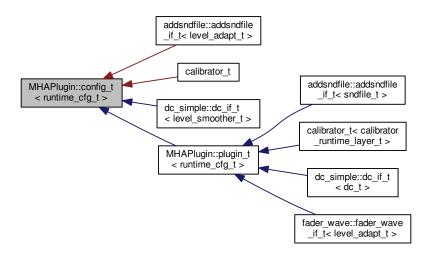

Public Member Functions

- · config_t ()
- ~config_t ()

Protected Member Functions

- runtime_cfg_t * poll_config ()
 Receive the latest run time configuration.
- runtime_cfg_t * last_config ()
 Receive the latest run time configuration.
- void push_config (runtime_cfg_t *ncfg)
 Push a new run time configuration into the configuration fifo.
- void cleanup_unused_cfg ()

Protected Attributes

runtime_cfg_t * cfg

Private Member Functions

void remove_all_cfg ()

Private Attributes

- MHAPlugin::cfg_chain_t< runtime_cfg_t > * cfg_chain
- MHAPlugin::cfg_chain_t< runtime_cfg_t > * cfg_chain_current

5.260.1 Detailed Description

```
template < class runtime_cfg_t > class MHAPlugin::config_t < runtime_cfg_t >
```

Template class for thread safe configuration.

This template class provides a mechanism for the handling of thread safe configuration which is required for run time configuration changes of the openMHA plugins.

The template parameter runtime_cfg_t is the run time configuration class of the openMHA plugin. The constructor of that class should transform the **MHAParser** (p. 103) variables into derived runtime configuration. The constructor should fail if the configuration is invalid by any reason.

A new runtime configuration is provided by the function **push_config()** (p. 681). In the processing thread, the actual configuration can be received by a call of **poll_config()** (p. 681).

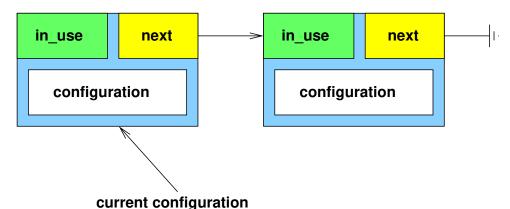


Figure 5 Schematic drawing of runtime configuration update: configuration updated, but not used yet.

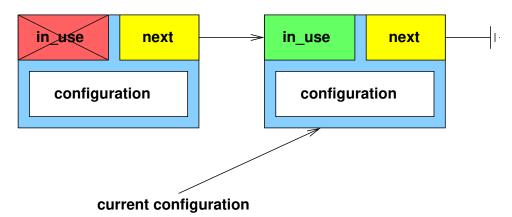


Figure 6 Schematic drawing of runtime configuration update: configuration in use.

```
5.260.2 Constructor & Destructor Documentation
```

```
5.260.2.1 template < class runtime_cfg_t > MHAPlugin::config_t < runtime_cfg_t > ::config_t ( )

5.260.2.2 template < class runtime_cfg_t > MHAPlugin::config_t < runtime_cfg_t > ::~config_t ( )

5.260.3 Member Function Documentation
```

```
\label{eq:config} \begin{array}{lll} \textbf{5.260.3.1} & \textbf{template} < \textbf{class runtime\_cfg\_t} > \textbf{runtime\_cfg\_t} * \textbf{MHAPlugin::config\_t} < \textbf{runtime\_cfg\_t} \\ & > \textbf{::poll\_config()} & \textbf{protected]} \end{array}
```

Receive the latest run time configuration.

This function stores the latest run time configuration into the protected class member variable 'cfg'. If no configuration exists, then an exception will be thrown. If no changes occured, then the value of 'cfg' will be untouched. This function should be called before any access to the 'cfg' variable, typically once in each signal processing call.

This function should be only called from the *processing* thread.

Exceptions

MHA_Error (p. 406) if the resulting runtime configuration is NULL. This usually means	
	that no push_config has occured.

```
5.260.3.2 template < class runtime_cfg_t > runtime_cfg_t * MHAPlugin::config_t < runtime_cfg_t >::last_config( ) [protected]
```

Receive the latest run time configuration.

This function stores the latest run time configuration into the protected class member variable 'cfg'. If no configuration exists, then an exception will be thrown. If no changes occured, then the value of 'cfg' will be untouched. This function may be called instead of poll_config.

The difference between poll_config and last_config is that poll_config marks previous configurations as ready for deletion, while this function does not. Therefore, memory usage of all runtime configurations will accumulate if only this function is called, but it enables safe access to previous runtime configurations.

Also, last config does not raise an Exception when the latest run time configuration is NULL.

```
5.260.3.3 template < class runtime_cfg_t > void MHAPlugin::config_t < runtime_cfg_t > ::push_config (  runtime\_cfg\_t * \textit{ncfg} ) \quad [\texttt{protected}]
```

Push a new run time configuration into the configuration fifo.

This function adds a new run time configuration. The next time **poll_config** (p. 681) is called, this configuration will be available. Configurations which are not in use or are outdated will be removed.

This function should be only called from the *configuration* thread.

Parameters

ncfg pointer on a new configuration

Warning

The runtime configuration passed to this function will be removed by the internal garbage collector. Do not free manually.

- 5.260.3.4 template < class runtime_cfg_t > void MHAPlugin::config_t < runtime_cfg_t >::cleanup_unused_cfg() [protected]
- 5.260.3.5 template < class runtime_cfg_t > void MHAPlugin::config_t < runtime_cfg_t >::remove_all_cfg() [private]
- 5.260.4 Member Data Documentation
- 5.260.4.1 template < class runtime_cfg_t > runtime_cfg_t * MHAPlugin::config_t < runtime_cfg_t >::cfg [protected]
- 5.260.4.2 template < class runtime_cfg_t > MHAPlugin::cfg_chain_t < runtime_cfg_t > * MHAPlugin::config_t < runtime_cfg_t > ::cfg_chain [private]
- 5.260.4.3 template < class runtime_cfg_t > MHAPlugin::cfg_chain_t < runtime_cfg_t > * MHAPlugin::config_t < runtime_cfg_t > ::cfg_chain_current [private]


The documentation for this class was generated from the following file:

mha_plugin.hh

5.261 MHAPlugin::plugin_t< runtime_cfg_t > Class Template Reference

The template class for C++ openMHA plugins.

Inheritance diagram for MHAPlugin::plugin t< runtime cfg t >:

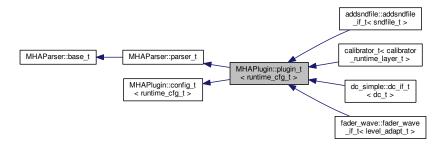

Public Member Functions

plugin_t (const std::string &, const algo_comm_t &)

Constructor of plugin template.

- virtual ~plugin t ()
- virtual void prepare (mhaconfig_t &)=0
- virtual void release ()
- void prepare_ (mhaconfig_t &)
- void release ()
- bool is_prepared () const

Flag, if the prepare method is successfully called (or currently evaluated)

• mhaconfig_t input_cfg () const

Current input channel configuration.

mhaconfig_t output_cfg () const

Current output channel configuration.

Protected Attributes

mhaconfig_t tftype

Member for storage of plugin interface configuration.

algo_comm_t ac

AC handle of the chain.

Private Attributes

- bool is prepared
- mhaconfig_t input_cfg_
- mhaconfig_t output_cfg_
- MHAParser::mhaconfig mon t mhaconfig in
- MHAParser::mhaconfig_mon_t mhaconfig_out

Additional Inherited Members

5.261.1 Detailed Description

```
\label{lem:continuous} \begin{tabular}{ll} template < class runtime\_cfg\_t > \\ class MHAPlugin::plugin\_t < runtime\_cfg\_t > \\ \end{tabular}
```

The template class for C++ openMHA plugins.

Template Parameters

runtime	run-time configuration.
cfg_t	

Todo Describe all services provided by this class, so that the reason why it is recommended that all plugins use this class as their base is evident. Document all relevant methods and fields.

This template class provides thread safe configuration handling and standard methods to be compatible to the C++ openMHA plugin wrapper macro **MHAPLUGIN_CALLBACKS** (p. 9).

The template parameter runtime_cfg_t should be the runtime configuration of the plugin.

See **MHAPlugin::config_t** (p. 678) for details on the thread safe communication update mechanism.

```
5.261.2 Constructor & Destructor Documentation
```

```
5.261.2.1 template < class runtime_cfg_t > MHAPlugin::plugin_t < runtime_cfg_t >::plugin_t ( const std::string & help, const algo_comm_t & iac )
```

Constructor of plugin template.

Parameters

help	Help comment to provide some general information about the plugin	
iac	AC space handle (will be stored into the member variable ac).	

```
5.261.2.2 template < class runtime_cfg_t > MHAPlugin::plugin_t < runtime_cfg_t > :: \sim plugin_t ( ) [virtual]
```

5.261.3 Member Function Documentation

```
5.261.3.1 template < class runtime_cfg_t > virtual void MHAPlugin::plugin_t < runtime_cfg_t >::prepare (

mhaconfig_t & ) [pure virtual]
```

```
Implemented in bbcalib_interface_t (p. 211), calibrator_t (p. 214), addsndfile::addsndfile \leftarrow _if_t (p. 170), analysispath_if_t (p. 202), adm_if_t (p. 185), overlapadd::overlapadd_\leftarrow if_t (p. 815), frequency_translator_t (p. 312), noisePowProposedScale::interface_\leftarrow t (p. 811), ac2lsl::ac2lsl_t (p. 127), dc_simple::dc_if_t (p. 246), dc::dc_if_t (p. 236),
```

multibandcompressor::interface_t (p. 803), combc_if_t (p. 226), coherence::cohflt← (p. 220), plugin_interface_t (p. 822), example6_t (p. 299), smoothgains_← bridge::overlapadd if t (p. 863), MHAPlugin Resampling::resampling if t shadowfilter end::shadowfilter end t (p. 859), ac2wave if t (p. 137), noise t (p. 809), nlms_t (p. 806), prediction_error (p. 837), spec2wave_if_t (p. 871), mhachain::chain -_base_t (p. 458), acsave::acsave_t (p. 155), fader_wave::fader_wave_if_t (p. 303), (p. 266), rmslevel if t doasym feature extraction (p. 842), shadowfilter begin ← ::shadowfilter begin t (p. 856), example3 t (p. 292), example4 t (p. 296), lpc bl \leftarrow predictor (p. 361), lpc_burglattice (p. 366), steerbf (p. 877), delaysum::delaysum_if (e. 877), delaysum::delaysum_if (e. 877) _t (p. 258), acPooling_wave (p. 150), lpc (p. 358), fader_if_t (p. 301), acConcat_wave (p. 141), db_if_t (p. 232), acSteer (p. 162), acTransform_wave (p. 166), wave2spec if t (p. 893), gain::gain_if_t (p. 321), droptect_t (p. 270), example1_t (p. 286), sine t (p. 861), doasvm classification (p. 262), example2_t (p. 289), wavrec_t (p. 897), fftfilterbank ::fftfb_interface_t (p. 306), route::interface_t (p. 845), matrixmixer::matmix_t (p. 373), altplugs_t (p. 196), softclip_t (p. 867), save_spec_t (p. 851), save_wave_t (p. 853), acmon::acmon_t (p. 147), timoSmooth (p. 889), identity_t (p. 327), delay::interface_t (p. 256), **cpuload t** (p. 230), **ds t** (p. 273), and **us t** (p. 891).

```
5.261.3.2 template < class runtime_cfg_t > void MHAPlugin::plugin_t < runtime_cfg_t >::release (
) [virtual]
```

Reimplemented in bbcalib_interface_t (p.211), calibrator_t (p.214), addsndfile \leftarrow ::addsndfile_if_t (p.170), analysispath_if_t (p.202), adm_if_t (p.185), overlapadd \leftarrow ::overlapadd_if_t (p.815), frequency_translator_t (p.312), ac2lsl::ac2lsl_t (p.128), dc_ \leftarrow simple::dc_if_t (p.246), multibandcompressor::interface_t (p.803), coherence::cohflt \leftarrow if_t (p.220), smoothgains_bridge::overlapadd_if_t (p.863), MHAPlugin_Resampling \leftarrow ::resampling_if_t (p.689), ac2wave_if_t (p.137), nlms_t (p.807), prediction_error (p.837), mhachain::chain_base_t (p.458), acsave::acsave_t (p.155), fader_wave \leftarrow ::fader_wave_if_t (p.303), doasvm_feature_extraction (p.267), example3_t (p.293), example4_t (p.296), lpc_bl_predictor (p.362), lpc_burglattice (p.366), steerbf (p.878), delaysum::delaysum_if_t (p.258), acPooling_wave (p.151), lpc (p.359), acConcat_wave (p.142), db_if_t (p.232), acSteer (p.163), acTransform_wave (p.167), droptect_t (p.270), gain::gain_if_t (p.321), example2_t (p.289), doasvm_classification (p.263), wavrec_t (p.897), fftfilterbank::fftfb_interface_t (p.308), route::interface_t (p.845), example1_t (p.286), altplugs_t (p.197), acmon::acmon_t (p.148), timoSmooth (p.889), identity_t (p.327), ds_t (p.273), and us_t (p.891).

```
5.261.3.3 template < class runtime_cfg_t > void MHAPlugin::plugin_t < runtime_cfg_t >::prepare_( mhaconfig_t & cf )
```

```
5.261.3.4 template < class runtime_cfg_t > void MHAPlugin::plugin_t < runtime_cfg_t >::release_(
)
```

```
5.261.3.5 template < class runtime_cfg_t > bool MHAPlugin::plugin_t < runtime_cfg_t >::is_prepared ( ) const [inline]
```

Flag, if the prepare method is successfully called (or currently evaluated)

5.261.3.6 template < class runtime_cfg_t > mhaconfig_t MHAPlugin::plugin_t < runtime_cfg_t >::input_cfg() const [inline]

Current input channel configuration.

5.261.3.7 template < class runtime_cfg_t > mhaconfig_t MHAPlugin::plugin_t < runtime_cfg_t >::output_cfg() const [inline]

Current output channel configuration.

- 5.261.4 Member Data Documentation
- 5.261.4.1 template < class runtime_cfg_t > mhaconfig_t MHAPlugin::plugin_t < runtime_cfg_t > ::tftype [protected]

Member for storage of plugin interface configuration.

This member is defined for convenience of the developer. Typically, the actual contents of **mhaconfig_t** (p. 463) are stored in this member in the **prepare()** (p. 685) method.

Note

This member is likely to be removed in later versions, use **input_cfg()** (p. 687) and **output_cfg()** (p. 687) instead.

5.261.4.2 template < class runtime_cfg_t > algo_comm_t MHAPlugin::plugin_t < runtime_cfg_t >::ac [protected]

AC handle of the chain.

This variable is initialized in the constructor and can be used by derived plugins to access the AC space. Its contents should not be modified.


- 5.261.4.3 template < class runtime_cfg_t > bool MHAPlugin::plugin_t < runtime_cfg_t >::is_prepared_ [private]
- 5.261.4.4 template < class runtime_cfg_t > mhaconfig_t MHAPlugin::plugin_t < runtime_cfg_t > ::input_cfg_ [private]
- 5.261.4.5 template < class runtime_cfg_t > mhaconfig_t MHAPlugin::plugin_t < runtime_cfg_t >::output_cfg_ [private]

The documentation for this class was generated from the following file:

mha_plugin.hh

5.262 MHAPlugin_Resampling::resampling_if_t Class Reference

Inheritance diagram for MHAPlugin_Resampling::resampling_if_t:

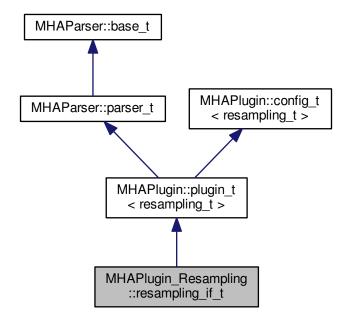

Public Member Functions

- resampling_if_t (algo_comm_t, std::string, std::string)
- mha_wave_t * process (mha_wave_t *)
- void prepare (mhaconfig_t &)
- void release ()

Private Attributes

- MHAParser::float_t srate
- MHAParser::int_t fragsize
- MHAParser::float_t nyquist_ratio
- MHAParser::float_t irslen_outer2inner
- MHAParser::float t irslen inner2outer
- MHAParser::mhapluginloader_t plugloader
- std::string chain
- std::string algo

```
Additional Inherited Members
```

```
5.262.1 Constructor & Destructor Documentation
5.262.1.1 MHAPlugin Resampling::resampling if t::resampling if t(
                     algo_comm_t iac,
                     std::string th,
                     std::string al )
5.262.2 Member Function Documentation
5.262.2.1 mha wave t * MHAPlugin_Resampling::resampling_if_t::process (
                     mha wave t * s)
5.262.2.2 void MHAPlugin Resampling::resampling if t::prepare (
                     mhaconfig t&conf) [virtual]
Implements MHAPlugin::plugin_t < resampling_t > (p. 685).
5.262.2.3 void MHAPlugin_Resampling::resampling_if_t::release (
                     void ) [virtual]
Reimplemented from MHAPlugin::plugin t < resampling t > (p. 686).
5.262.3 Member Data Documentation
5.262.3.1 MHAParser::float_t MHAPlugin_Resampling::resampling_if_t::srate [private]
5.262.3.2 MHAParser::int_t MHAPlugin_Resampling::resampling_if_t::fragsize [private]
5.262.3.3 MHAParser::float_t MHAPlugin_Resampling::resampling_if_t::nyquist_ratio
         [private]
5.262.3.4 MHAParser::float_t MHAPlugin_Resampling::resampling_if_t::irslen_outer2inner
         [private]
5.262.3.5 MHAParser::float t MHAPlugin Resampling::resampling if t::irslen inner2outer
         [private]
5.262.3.6 MHAParser::mhapluginloader t MHAPlugin Resampling::resampling if t::plugloader
          [private]
5.262.3.7 std::string MHAPlugin_Resampling::resampling_if_t::chain [private]
5.262.3.8 std::string MHAPlugin_Resampling::resampling_if_t::algo [private]
The documentation for this class was generated from the following file:
```

© 2005-2018 HörTech gGmbH, Oldenburg

resampling.cpp

5.263 MHAPlugin_Resampling::resampling_t Class Reference

Public Member Functions

- resampling_t (unsigned int outer_fragsize, float outer_srate, unsigned int inner_
 fragsize, float inner_scrate, unsigned int nch_in, float filter_length_in, unsigned int nch
 out, float filter_length_out, float nyquist_ratio, MHAParser::mhapluginloader_t &plug)
- mha_wave_t * process (mha_wave_t *)

Private Attributes

- · unsigned outer_fragsize
- unsigned inner_fragsize
- float outer_srate
- float inner_srate
- unsigned nchannels_in
- unsigned nchannels_out
- MHAFilter::blockprocessing polyphase resampling touter2inner resampling
- MHAFilter::blockprocessing_polyphase_resampling_t inner2outer_resampling
- MHAParser::mhapluginloader_t & plugloader
- MHASignal::waveform_t inner_signal
- MHASignal::waveform_t output_signal

```
5.263.1 Constructor & Destructor Documentation
```

5.263.2 Member Function Documentation

```
5.263.2.1 mha_wave_t * MHAPlugin_Resampling::resampling_t::process ( mha_wave_t * s )
```

5.263.3 Member Data Documentation

```
5.263.3.1
         unsigned MHAPlugin Resampling::resampling t::outer fragsize [private]
5.263.3.2
         unsigned MHAPlugin_Resampling::resampling_t::inner_fragsize [private]
5.263.3.3
         float MHAPlugin_Resampling::resampling_t::outer_srate [private]
5.263.3.4
         float MHAPlugin Resampling::resampling t::inner srate [private]
5.263.3.5 unsigned MHAPlugin_Resampling::resampling_t::nchannels_in [private]
5.263.3.6 unsigned MHAPlugin Resampling ::resampling t::nchannels out [private]
5.263.3.7
         MHAFilter::blockprocessing_polyphase_resampling_t
         MHAPlugin_Resampling::resampling_t::outer2inner_resampling [private]
5.263.3.8
         MHAFilter::blockprocessing polyphase resampling t
         MHAPlugin_Resampling::resampling_t::inner2outer_resampling [private]
5.263.3.9 MHAParser::mhapluginloader t& MHAPlugin Resampling::resampling t::plugloader
         [private]
5.263.3.10 MHASignal::waveform_t MHAPlugin_Resampling::resampling_t::inner_signal
          [private]
5.263.3.11
          MHASignal::waveform t MHAPlugin_Resampling::resampling_t::output_signal
           [private]
```


The documentation for this class was generated from the following file:

· resampling.cpp

5.264 MHAPlugin_Split::domain_handler_t Class Reference

Handles domain-specific partial input and output signal.

Inheritance diagram for MHAPlugin_Split::domain_handler_t:

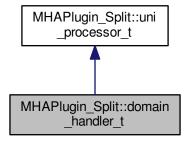

Public Member Functions

void set_input_domain (const mhaconfig_t &settings_in)

Set parameters of input signal.

void set_output_domain (const mhaconfig_t &settings_out)

Set output signal parameters.

void deallocate domains ()

Deallocate domain indicators and signal holders.

domain_handler_t (const mhaconfig_t &settings_in, const mhaconfig_t &settings_out,
 PluginLoader::fourway processor t *processor)

Construct a new domain handler once the domains and dimensions of input and output signal of one of the child plugins of split are known.

virtual ~domain_handler_t ()

Deallocation of signal holders.

unsigned put_signal (mha_wave_t *s_in, unsigned start_channel)

Store the relevant channels from the input signal for processing.

unsigned put_signal (mha_spec_t *s_in, unsigned start_channel)

Store the relevant channels from the input signal for processing.

• unsigned **get_signal** (**MHASignal::waveform_t** *s_out, unsigned start_channel)

Store all partial signal output channels in the combined waveform signal with the given channel offset.

• unsigned **get_signal** (MHASignal::spectrum_t *s_out, unsigned start_channel)

Store all partial signal output channels in the combined spectrum signal with the given channel offset.

void process ()

Call the processing method of the processor with configured input/output signal domains.

Public Attributes

MHASignal::waveform_t * wave_in

Partial wave input signal.

mha_wave_t ** wave_out

Partial wave output signal.

MHASignal::spectrum t * spec in

Partial spec input signal.

mha_spec_t ** spec_out

Partial spec input signal.

PluginLoader::fourway_processor_t * processor_

The domain-specific signal processing methods are implemented here.

Private Member Functions

domain handler t (const domain handler t &)

Disallow copy constructor.

domain handler t & operator= (const domain handler t &)

Disallow assignment operator.

5.264.1 Detailed Description

Handles domain-specific partial input and output signal.

```
5.264.2 Constructor & Destructor Documentation
```

Disallow copy constructor.

Construct a new domain handler once the domains and dimensions of input and output signal of one of the child plugins of split are known.

```
5.264.2.3 virtual MHAPlugin_Split::domain_handler_t::~domain_handler_t ( ) [inline], [virtual]
```

Deallocation of signal holders.

5.264.3 Member Function Documentation

Disallow assignment operator.

Set parameters of input signal.

Parameters

settings⇔	domain and dimensions of partial input signal
in	

Set output signal parameters.

Parameters

settings_out domain and dimensions of partial output signa	
--	--

```
5.264.3.4 void MHAPlugin_Split::domain_handler_t::deallocate_domains() [inline]
```

Deallocate domain indicators and signal holders.

Store the relevant channels from the input signal for processing.

The number of channels to store is taken from the dimensions of the partial input signal holder **wave_in** (p. 696).

Parameters

s_in	The combined waveform input signal.
start_channel	The index (0-based) of the first channel in s_in to be copied to the partial input signal.

Returns

The number of channels that were copied from the input signal

Store the relevant channels from the input signal for processing.

The number of channels to store is taken from the dimensions of the partial input signal holder **spec_in** (p. 696).

Parameters

s_in	The combined spectrum input signal.	
start_channel	The index (0-based) of the first channel in s_in to be copied to the partial	
	input signal.	

Returns

The number of channels that were copied from the input signal

Store all partial signal output channels in the combined waveform signal with the given channel offset.

All channels present in **wave_out** (p. 696) will be copied. Caller may use (*wave_out)->numchannels to check the number of channels in advance.

Parameters

s_out	The combined waveform output signal.
start_channel	The channel offset (0-based) in s_out.

Returns

The number of channels that were copied to the output signal

Store all partial signal output channels in the combined spectrum signal with the given channel offset.

All channels present in **spec_out** (p. 696) will be copied. Caller may use (*spec_out)->numchannels to check the number of channels in advance.

Parameters

s_out	The combined spectrum output signal.
start_channel	The channel offset (0-based) in s_out.

Returns

The number of channels that were copied to the output signal

Call the processing method of the processor with configured input/output signal domains.

The input signal has to be stored using **put_signal** (p. 694) before this method may be called. Implements **MHAPlugin_Split::uni_processor_t** (p. 715).

5.264.4 Member Data Documentation

5.264.4.1 MHASignal::waveform_t* MHAPlugin_Split::domain_handler_t::wave_in

Partial wave input signal.

5.264.4.2 mha wave t** MHAPlugin Split::domain handler t::wave out

Partial wave output signal.

5.264.4.3 MHASignal::spectrum_t* MHAPlugin_Split::domain_handler_t::spec_in

Partial spec input signal.

5.264.4.4 mha_spec_t** MHAPlugin_Split::domain_handler_t::spec_out

Partial spec input signal.

5.264.4.5 PluginLoader::fourway_processor_t* MHAPlugin_Split::domain_handler_t::processor


The domain-specific signal processing methods are implemented here.

The documentation for this class was generated from the following file:

split.cpp

5.265 MHAPlugin_Split::dummy_threads_t Class Reference

Dummy specification of a thread platform: This class implements everything in a single thread. Inheritance diagram for MHAPlugin_Split::dummy_threads_t:

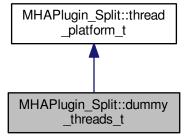

Public Member Functions

- void kick_thread ()
 perform signal processing immediately (no multiple threads in this dummy class)
- void catch_thread ()

 No implementation needed: Processing has been completed during ummy_threads_t::kick_←
- dummy_threads_t (uni_processor_t *proc, const std::string &thread_scheduler, int thread_priority)

Constructor.

Additional Inherited Members

5.265.1 Detailed Description

Dummy specification of a thread platform: This class implements everything in a single thread.

5.265.2 Constructor & Destructor Documentation

Constructor.

Parameters

proc	Pointer to the associated plugin loader
thread_scheduler	Unused in dummy thread platform
thread_priority	Unused in dummy thread platform

5.265.3 Member Function Documentation

```
5.265.3.1 void MHAPlugin_Split::dummy_threads_t::kick_thread( ) [inline], [virtual]
```

perform signal processing immediately (no multiple threads in this dummy class)

Implements MHAPlugin_Split::thread_platform_t (p. 713).

5.265.3.2 void MHAPlugin_Split::dummy_threads_t::catch_thread() [inline], [virtual]

No implementation needed: Processing has been completed during ummy_threads_t::kick_← thread.

Implements MHAPlugin_Split::thread_platform_t (p. 713).


The documentation for this class was generated from the following file:

split.cpp

5.266 MHAPlugin_Split::posix_threads_t Class Reference

Posix threads specification of thread platform.

Inheritance diagram for MHAPlugin_Split::posix_threads_t:

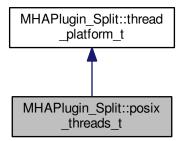

Public Member Functions

void kick_thread ()

Start signal processing in separate thread.

void catch_thread ()

Wait for signal processing to finish.

 posix_threads_t (uni_processor_t *proc, const std::string &thread_scheduler, int thread_priority)

Constructor.

~posix_threads_t ()

Terminate thread.

• void main ()

Thread main loop. Wait for process/termination trigger, then act.

Static Public Member Functions

static void * thread_start (void *thr)

Thread start function.

- static std::string current_thread_scheduler ()
- static int current_thread_priority ()

Private Attributes

pthread_mutex_t mutex

The mutex.

pthread_cond_t kick_condition

The condition for signalling the kicking and termination.

pthread_cond_t catch_condition

The condition for signalling the processing is finished.

pthread_attr_t attr

Thread attributes.

struct sched_param priority

Thread scheduling priority.

- · int scheduler
- pthread t thread

The thread object.

bool kicked

A flag that is set to true by kick_thread and to false by the thread after it has woken up from the kicking.

• bool processing_done

A flag that is set to true by the thread when it returns from processing and to false by catch_← thread after it has waited for that return.

bool termination_request

Set to true by the destructor.

Additional Inherited Members

5.266.1 Detailed Description

Posix threads specification of thread platform.

5.266.2 Constructor & Destructor Documentation

Constructor.

Parameters

proc	Pointer to the associated signal processor instance
thread_scheduler	A string describing the posix thread scheduler. Possible values: "SCHED_OTHER", "SCHED_RR", "SCHED_FIFO".
thread_priority	The scheduling priority of the new thread.

```
5.266.2.2 MHAPlugin_Split::posix_threads_t::~posix_threads_t() [inline]
```

Terminate thread.

```
5.266.3 Member Function Documentation
```

```
5.266.3.1 void MHAPlugin_Split::posix_threads_t::kick_thread( ) [inline], [virtual]
```

Start signal processing in separate thread.

Implements MHAPlugin_Split::thread_platform_t (p. 713).

```
5.266.3.2 void MHAPlugin_Split::posix_threads_t::catch_thread( ) [inline], [virtual]
```

Wait for signal processing to finish.

Implements MHAPlugin_Split::thread_platform_t (p. 713).

Thread start function.

```
5.266.3.4 void MHAPlugin_Split::posix_threads_t::main() [inline]
```

Thread main loop. Wait for process/termination trigger, then act.

```
5.266.3.5 static std::string MHAPlugin_Split::posix_threads_t::current_thread_scheduler( ) [inline], [static]
```

```
5.266.3.6 static int MHAPlugin_Split::posix_threads_t::current_thread_priority( ) [inline], [static]
```

5.266.4 Member Data Documentation

5.266.4.1 pthread_mutex_t MHAPlugin_Split::posix_threads_t::mutex [private]

The mutex.

5.266.4.2 pthread_cond_t MHAPlugin_Split::posix_threads_t::kick_condition [private]

The condition for signalling the kicking and termination.

5.266.4.3 pthread_cond_t MHAPlugin_Split::posix_threads_t::catch_condition [private]

The condition for signalling the processing is finished.

5.266.4.4 pthread_attr_t MHAPlugin_Split::posix_threads_t::attr [private]

Thread attributes.

5.266.4.5 struct sched_param MHAPlugin_Split::posix_threads_t::priority [private]

Thread scheduling priority.

5.266.4.6 int MHAPlugin_Split::posix_threads_t::scheduler [private]

5.266.4.7 pthread_t MHAPlugin_Split::posix_threads_t::thread [private]

The thread object.

5.266.4.8 bool MHAPlugin_Split::posix_threads_t::kicked [private]

A flag that is set to true by kick_thread and to false by the thread after it has woken up from the kicking.

5.266.4.9 bool MHAPlugin_Split::posix_threads_t::processing_done [private]

A flag that is set to true by the thread when it returns from processing and to false by catch_ thread after it has waited for that return.

5.266.4.10 bool MHAPlugin_Split::posix_threads_t::termination_request [private]

Set to true by the destructor.


The documentation for this class was generated from the following file:

split.cpp

5.267 MHAPlugin_Split::split_t Class Reference

Implements split plugin.

Inheritance diagram for MHAPlugin_Split::split_t:

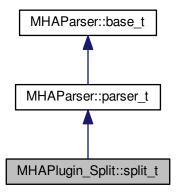

Public Member Functions

- **split_t** (**algo_comm_t** iac, const std::string &chain_name, const std::string &algo_name) *Plugin constructor.*
- ∼split_t ()

Plugin destructor. Unloads nested plugins.

void prepare_ (mhaconfig_t &)

Check signal parameters, prepare chains, and allocate output signal holders.

• void release_()

Delete output signal holder and release chains.

template<class SigTypeIn , class SigTypeOut > void process (SigTypeIn *, SigTypeOut **)

Let the parallel plugins process channel groups of the input signal.

Private Member Functions

• void update ()

Load plugins in response to a value change in the algos variable.

void clear_chains ()

Unload the plugins.

- mha_wave_t * copy_output_wave ()
- mha_spec_t * copy_output_spec ()

template < class SigType >

void trigger_processing (SigType *s_in)

Split the argument input signal to groups of channels for the plugins and initiate signal processing.

template<class SigType >

void collect_result (SigType *s_out)

Combine the output signal from the plugins.

MHASignal::waveform_t * signal_out (mha_wave_t **)

Waveform domain output signal structure accessor.

MHASignal::spectrum_t * signal_out (mha_spec_t **)

Spectrum domain output signal structure. Parameter is ignored.

Private Attributes

MHAEvents::patchbay_t< split_t > patchbay

Reload plugins when the algos variable changes.

MHAParser::vstring_t algos

Vector of plugins to load in parallel.

• MHAParser::vint t channels

Number of channels to route through each plugin.

MHAParser::kw_t thread_platform

Thread platform chooser.

MHAParser::kw_t worker_thread_scheduler

Scheduler used for worker threads.

MHAParser::int_t worker_thread_priority

Priority of worker threads.

MHAParser::string_mon_t framework_thread_scheduler

Scheduler of the signal processing thread.

MHAParser::int_mon_t framework_thread_priority

Priority of signal processing thread.

MHAParser::bool t delay

Switch to activate parallel processing of plugins at the cost of one block of additional delay.

std::vector< splitted_part_t * > chains

Interfaces to parallel plugins.

MHASignal::waveform_t * wave_out

Combined output waveforms structure.

MHASignal::spectrum_t * spec_out

Combined output spectra structure.

Additional Inherited Members

5.267.1 Detailed Description

Implements split plugin.

An instance of class **split_t** (p. 702) implements the split plugin functionality: The audio channels are splitted and groups of audio channels are processed by different plugins in parallel.

```
5.267.2 Constructor & Destructor Documentation
5.267.2.1 MHAPlugin_Split::split_t::split_t (
                       algo_comm_t iac,
                       const std::string & chain name.
                       const std::string & algo name )
Plugin constructor.
5.267.2.2 MHAPlugin_Split::split_t::~split_t()
Plugin destructor. Unloads nested plugins.
5.267.3 Member Function Documentation
5.267.3.1 void MHAPlugin_Split::split_t::prepare_(
                       mhaconfig t & signal_parameters )
Check signal parameters, prepare chains, and allocate output signal holders.
5.267.3.2 void MHAPlugin_Split::split_t::release_( )
Delete output signal holder and release chains.
5.267.3.3 template < class SigTypeIn , class SigTypeOut > void MHAPlugin_Split::split_t::process (
                       SigTypeIn * s_in,
                       SigTypeOut ** s out )
Let the parallel plugins process channel groups of the input signal.
5.267.3.4 void MHAPlugin Split::split t::update( ) [private]
Load plugins in response to a value change in the algos variable.
5.267.3.5 void MHAPlugin_Split::split_t::clear_chains( ) [private]
Unload the plugins.
5.267.3.6 mha wave t* MHAPlugin Split::split t::copy output wave( ) [private]
5.267.3.7 mha spec t* MHAPlugin_Split::split_t::copy_output_spec( ) [private]
5.267.3.8 template < class SigType > void MHAPlugin_Split::split_t::trigger_processing (
```

Split the argument input signal to groups of channels for the plugins and initiate signal processing.

SigType * s_in) [private]

Combine the output signal from the plugins.

Waveform domain output signal structure accessor.

Parameter is only for domain disambiguation and is ignored.

Spectrum domain output signal structure. Parameter is ignored.

5.267.4 Member Data Documentation

5.267.4.1 MHAEvents::patchbay_t<split_t> MHAPlugin_Split::split_t::patchbay [private]

Reload plugins when the algos variable changes.

5.267.4.2 MHAParser::vstring_t MHAPlugin_Split::split_t::algos [private]

Vector of plugins to load in parallel.

5.267.4.3 MHAParser::vint_t MHAPlugin_Split::split_t::channels [private]

Number of channels to route through each plugin.

5.267.4.4 MHAParser::kw t MHAPlugin_Split::split_t::thread_platform [private]

Thread platform chooser.

5.267.4.5 MHAParser::kw_t MHAPlugin_Split::split_t::worker_thread_scheduler [private]

Scheduler used for worker threads.

5.267.4.6 MHAParser::int_t MHAPlugin_Split::split_t::worker_thread_priority [private]

Priority of worker threads.

5.267.4.7 MHAParser::string_mon_t MHAPlugin_Split::split_t::framework_thread_scheduler [private]

Scheduler of the signal processing thread.

5.267.4.8 MHAParser::int_mon_t MHAPlugin_Split::split_t::framework_thread_priority [private]

Priority of signal processing thread.

5.267.4.9 MHAParser::bool t MHAPlugin_Split::split_t::delay [private]

Switch to activate parallel processing of plugins at the cost of one block of additional delay.

5.267.4.10 std::vector<splitted_part_t*> MHAPlugin_Split::split_t::chains [private]

Interfaces to parallel plugins.

5.267.4.11 MHASignal::waveform t* MHAPlugin_Split::split_t::wave_out [private]

Combined output waveforms structure.

5.267.4.12 MHASignal::spectrum_t* MHAPlugin_Split::split_t::spec_out [private]

Combined output spectra structure.


The documentation for this class was generated from the following file:

split.cpp

5.268 MHAPlugin_Split::splitted_part_t Class Reference

The **splitted_part_t** (p. 706) instance manages the plugin that performs processing on the reduced set of channels.

Inheritance diagram for MHAPlugin Split::splitted part t:

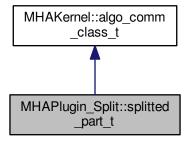

Public Member Functions

• splitted_part_t (const std::string &plugname, MHAParser::parser_t *parent)

Load the plugin for this partial signal path.

splitted_part_t (PluginLoader::fourway_processor_t *plugin)

Create the handler for the partial signal.

• ~splitted part t () throw ()

Destructor. Deletes the plugin plug (p. 710).

 void prepare (mhaconfig_t &signal_parameters, const std::string &thread_platform, const std::string &thread_scheduler, int thread_priority)

Delegates the prepare method to the plugin and allocates a suitable **MHAPlugin_Split**← ::domain_handler_t (p. 691) instance.

• void release ()

Delegates the release method to the plugin and deletes the **MHAPlugin_Split::domain_**← **handler_t** (p. 691) instance.

• std::string parse (const std::string &str)

Delegates parser incovation to plugin.

template<class SigType >

unsigned **trigger_processing** (SigType *s_in, unsigned start_channel)

The domain handler copies the input signal channels.

template<class SigType >

unsigned **collect_result** (SigType *s_out, unsigned start_channel)

Wait until processing is finished, then copy the output data.

Private Member Functions

splitted_part_t (const splitted_part_t &)

Disallow copy constructor.

splitted_part_t & operator= (const splitted_part_t &)

Disallow assignment operator.

Private Attributes

PluginLoader::fourway_processor_t * plug

The plugin that performs the signal processing on the prepared channels.

domain_handler_t * domain

The domain specific signal handler, allocated from prepare when input and output domains and signal parameters are known.

thread platform t * thread

The platform-dependent thread synchronization implementation.

Additional Inherited Members

5.268.1 Detailed Description

The **splitted_part_t** (p. 706) instance manages the plugin that performs processing on the reduced set of channels.

The signal is split by channels by this instance, but the signal is combined again by the calling class.

5.268.2 Constructor & Destructor Documentation

Disallow copy constructor.

Load the plugin for this partial signal path.

Loads the MHA plugin for a signal path of these audio channels.

Parameters

plugname	The name of the MHA plugin, optionally followed by a colon and the algorithm
	name.
parent	The parser node where the configuration of the new plugin is inserted. The plugin's parser name is the configured name (colon syntax).

Create the handler for the partial signal.

The plugin is loaded by the caller, but it will be deleted by the destructor of this class. This constructor exists solely for testing purposes.

Parameters

plugin	The plugin used for processing the signal. The new splitted_part_t (p. 708)
	instance will take ownership of this instance and release it in the destructor.

```
5.268.2.4 MHAPlugin_Split::splitted_part_t::~splitted_part_t ( ) throw )
```

Destructor. Deletes the plugin **plug** (p. 710).

5.268.3 Member Function Documentation

Disallow assignment operator.

Delegates the prepare method to the plugin and allocates a suitable **MHAPlugin_Split** ::domain_handler_t (p. 691) instance.

Prepare the loaded plugin.

Plugin preparation.

Parameters

signal_parameters	The signal description parameters for this path.
thread_platform	The name of the thread platform to use. Possible values: "posix", "win32", "dummy".
thread_scheduler	The name of the scheduler to use. Posix threads support "SCHED_OTHER", "SCHED_RR", "SCHED_FIFO". The other thread platforms do not support different thread schedulers. This value is not used for platforms other than "posix".
thread_priority	The new thread priority. Interpretation and permitted range depend on the thread platform and possibly on the scheduler.

```
5.268.3.3 void MHAPlugin_Split::splitted_part_t::release ( void )
```

Delegates the release method to the plugin and deletes the **MHAPlugin_Split::domain_** \leftarrow **handler_t** (p. 691) instance.

Release the loaded plugin.

Plugin release.

```
5.268.3.4 std::string MHAPlugin_Split::splitted_part_t::parse ( const std::string & str ) [inline]
```

Delegates parser incovation to plugin.

```
5.268.3.5 template < class SigType > unsigned MHAPlugin_Split::splitted_part_t::trigger_processing ( SigType * s_in, unsigned start_channel ) [inline]
```

The domain handler copies the input signal channels.

Then, processing is initiated.

Parameters

s_in	The combined input signal.
start_channel	The index (0-based) of the first channel in s_in to be copied to the partial input signal.

Returns

The number of channels that were copied from the input signal

Wait until processing is finished, then copy the output data.

Parameters

s_out	The combined waveform output signal.
start_channel	The channel offset (0-based) in s_out.

Returns

The number of channels that were copied to the output signal

5.268.4 Member Data Documentation

5.268.4.1 PluginLoader::fourway_processor_t* MHAPlugin_Split::splitted_part_t::plug [private]

The plugin that performs the signal processing on the prepared channels.

5.268.4.2 domain_handler_t* MHAPlugin_Split::splitted_part_t::domain [private]

The domain specific signal handler, allocated from prepare when input and output domains and signal parameters are known.

5.268.4.3 thread_platform_t* MHAPlugin_Split::splitted_part_t::thread [private]

The platform-dependent thread synchronization implementation.


The documentation for this class was generated from the following file:

split.cpp

5.269 MHAPlugin_Split::thread_platform_t Class Reference

Basic interface for encapsulating thread creation, thread priority setting, and synchronization on any threading platform (i.e., pthreads or win32threads).

Inheritance diagram for MHAPlugin_Split::thread_platform_t:

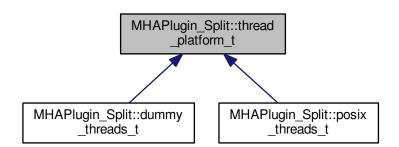

Public Member Functions

thread_platform_t (uni_processor_t *proc)

Constructor.

virtual ~thread_platform_t ()

Make derived classes destructable via pointer to this base class.

virtual void kick_thread ()=0

Derived classes notify their processing thread that it should call processor->process().

• virtual void catch_thread ()=0

Derived classes wait for their signal processing thread to return from the call to part->process().

Protected Attributes

uni_processor_t * processor

A pointer to the plugin loader that processes the sound data in the channels for which this thread was created.

Private Member Functions

- thread_platform_t (const thread_platform_t &)
 Disallow copy constructor.
- thread_platform_t & operator= (const thread_platform_t &)

Disallow assignment operator.

5.269.1 Detailed Description

Basic interface for encapsulating thread creation, thread priority setting, and synchronization on any threading platform (i.e., pthreads or win32threads).

Derived classes specialize in the actual thread platform.

```
5.269.2 Constructor & Destructor Documentation
```

Disallow copy constructor.

Constructor.

Derived classes create the thread in the constructor.

Parameters

Pointer to the associated plugin loader. This plugin loader has to live at least as long as this instance. This instance does not take possession of the plugin loader. In production code, this thread platform and the plugin loader are both created and destroyed by the MHAPlugin_Split::splitted_part_t (p. 706) instance.

```
5.269.2.3 virtual MHAPlugin_Split::thread_platform_t::~thread_platform_t ( ) [inline], [virtual]
```

Make derived classes destructable via pointer to this base class.

Derived classes' destructors notify the thread that it should terminate itself, and wait for the termination to occur.

5.269.3 Member Function Documentation

Disallow assignment operator.

```
5.269.3.2 virtual void MHAPlugin_Split::thread_platform_t::kick_thread() [pure virtual]
```

Derived classes notify their processing thread that it should call processor->process().

Implemented in MHAPlugin_Split::posix_threads_t (p. 700), and MHAPlugin_Split ::dummy_threads_t (p. 697).

```
5.269.3.3 virtual void MHAPlugin Split::thread platform t::catch thread ( ) [pure virtual]
```

Derived classes wait for their signal processing thread to return from the call to part->process().

Implemented in MHAPlugin_Split::posix_threads_t (p. 700), and MHAPlugin_Split

::dummy threads t (p. 698).

5.269.4 Member Data Documentation

```
5.269.4.1 uni processor t* MHAPlugin_Split::thread_platform_t::processor [protected]
```

A pointer to the plugin loader that processes the sound data in the channels for which this thread was created.

Using the **MHAPlugin_Split::uni_processor_t** (p. 714) interface instead of the mhaplugin-loader class directly for testability (no need to load real plugins for testing the thread platform).


The documentation for this class was generated from the following file:

split.cpp

5.270 MHAPlugin_Split::uni_processor_t Class Reference

An interface to a class that sports a process method with no parameters and no return value.

Inheritance diagram for MHAPlugin_Split::uni_processor_t:

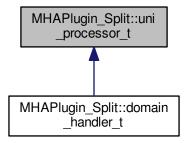

Public Member Functions

• virtual void process ()=0

This method uses some input signal, performs processing and stores the output signal somewhere.

virtual ~uni_processor_t ()

Classes containing virtual methods need virtual destructors.

5.270.1 Detailed Description

An interface to a class that sports a process method with no parameters and no return value.

No signal transfer occurs through this interface, because the signal transfer is performed in another thread than the processing.

5.270.2 Constructor & Destructor Documentation

5.270.2.1 virtual MHAPlugin_Split::uni_processor_t::~uni_processor_t() [inline], [virtual]

Classes containing virtual methods need virtual destructors.

5.270.3 Member Function Documentation

5.270.3.1 virtual void MHAPlugin_Split::uni_processor_t::process() [pure virtual]

This method uses some input signal, performs processing and stores the output signal somewhere.

This method also has to dispatch the process call based on the configured domains.

Signal transfer and domain configuration have to be done in derived class in different methods.

Implemented in MHAPlugin_Split::domain_handler_t (p. 695).


The documentation for this class was generated from the following file:

split.cpp

5.271 mhaserver_t Class Reference

MHA Framework listening on TCP port for commands.

Inheritance diagram for mhaserver_t:

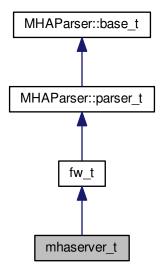

Public Member Functions

- mhaserver_t (const std::string &ao, const std::string &af, const std::string &lf)
- ~mhaserver t()
- virtual std::string received_group (const std::string &line)

A line of text was received from network client.

virtual void acceptor_started (int status)

Notification: "TCP port is open".

virtual void set_announce_port (unsigned short announce_port)

If set to nonzero, the spawning process has asked to be notified of the TCP port used by this process.

• void **logstring** (const std::string &)

Log a message to log file.

• int **run** (unsigned short **port**, const std::string &_interface)

Accept network connections and act on commands.

Public Attributes

MHAParser::int_t port

Private Attributes

- MHA TCP::Server * tcpserver
- std::string ack_ok
- std::string ack_fail
- std::string logfile
- unsigned short announce_port
- MHAParser::int mon t pid mon

Additional Inherited Members

5.271.1 Detailed Description

MHA Framework listening on TCP port for commands.

5.271.2 Constructor & Destructor Documentation

Parameters

	ao	Acknowledgement string at end of successful command responses
Ī	af	Achknoledgement string at end of failed command responses
Ī	lf	File system path of file to use as log file. MHA appends.

```
5.271.2.2 mhaserver_t::~mhaserver_t ( )5.271.3 Member Function Documentation
```

A line of text was received from network client.

Notification: "TCP port is open".

If set to nonzero, the spawning process has asked to be notified of the TCP port used by this process.

```
5.271.3.4 void mhaserver_t::logstring (
const std::string & s ) [inline]
```

Log a message to log file.

Accept network connections and act on commands.

Calls **acceptor_started()** (p. 717) when the TCP port is opened. Calls received_group for every line received.

Returns

exit code that can be used as process exit code

5.271.4 Member Data Documentation

```
5.271.4.1 MHA_TCP::Server* mhaserver_t::tcpserver [private]
```

5.271.4.2 std::string mhaserver_t::ack_ok [private]

5.271.4.3 std::string mhaserver_t::ack_fail [private]

5.271.4.4 std::string mhaserver_t::logfile [private]

5.271.4.5 unsigned short mhaserver_t::announce_port [private]

5.271.4.6 MHAParser::int_mon_t mhaserver_t::pid_mon [private]

5.271.4.7 MHAParser::int_t mhaserver_t::port


The documentation for this class was generated from the following file:

· mhamain.cpp

5.272 MHASignal::async_rmslevel_t Class Reference

Class for asynchronous level metering.

Inheritance diagram for MHASignal::async_rmslevel_t:

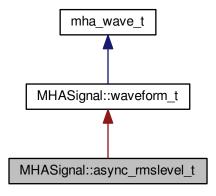

Public Member Functions

• async_rmslevel_t (unsigned int frames, unsigned int channels)

Constructor for level metering class.

• std::vector< float > rmslevel () const

Read-only function for querying the current RMS level.

• std::vector< float > peaklevel () const

Read-only function for querying the current peak level.

void process (mha_wave_t *s)

Function to store a chunk of audio in the level meter.

Private Attributes

- unsigned int pos
- unsigned int filled

Additional Inherited Members

5.272.1 Detailed Description

Class for asynchronous level metering.

5.272.2 Constructor & Destructor Documentation

5.272.2.1 MHASignal::async_rmslevel_t:(async_rmslevel_t (unsigned int *frames,* unsigned int *channels*)

Constructor for level metering class.

Allocate memory for metering. The RMS integration time corresponds to the number of frames in the buffer.

Parameters

frames	Number of frames to integrate.
channels	Number of channels used for level-metering.

5.272.3 Member Function Documentation

```
5.272.3.1 std::vector< float > MHASignal::async_rmslevel_t::rmslevel ( ) const
```

Read-only function for querying the current RMS level.

Returns

Vector of floats, one value for each channel, containing the RMS level in dB (SPL if calibrated properly).

```
5.272.3.2 std::vector< float > MHASignal::async_rmslevel_t::peaklevel ( ) const
```

Read-only function for querying the current peak level.

Returns

Vector of floats, one value for each channel, containing the peak level in dB (SPL if calibrated properly).

```
5.272.3.3 void MHASignal::async_rmslevel_t::process ( mha_wave_t * s )
```

Function to store a chunk of audio in the level meter.

Parameters

s Audio chunk (same number of channels required as given in the constructor).

```
5.272.4 Member Data Documentation
```

```
5.272.4.1 unsigned int MHASignal::async_rmslevel_t::pos [private]
```

5.272.4.2 unsigned int MHASignal::async_rmslevel_t::filled [private]

The documentation for this class was generated from the following files:

- mha_signal.hh
- · mha_signal.cpp

5.273 MHASignal::delay_spec_t Class Reference

Public Member Functions

- delay_spec_t (unsigned int delay, unsigned int frames, unsigned int channels)
- ~delay spec t ()
- mha_spec_t * process (mha_spec_t *)

Private Attributes


- · unsigned int delay
- MHASignal::spectrum_t ** buffer
- unsigned int pos
- 5.273.1 Constructor & Destructor Documentation
- 5.273.1.2 MHASignal::delay_spec_t::~delay_spec_t()
- 5.273.2 Member Function Documentation
- 5.273.2.1 mha_spec_t * MHASignal::delay_spec_t::process (mha_spec_t * s)
- 5.273.3 Member Data Documentation
- **5.273.3.1 unsigned int MHASignal::delay_spec_t::delay** [private]
- **5.273.3.2** MHASignal::spectrum_t** MHASignal::delay_spec_t::buffer [private]
- **5.273.3.3** unsigned int MHASignal::delay_spec_t::pos [private]

The documentation for this class was generated from the following files:

- · mha_signal.hh
- · mha_signal.cpp
- 5.274 MHASignal::delay_t Class Reference

Class to realize a simple delay of waveform streams.

Inheritance diagram for MHASignal::delay_t:

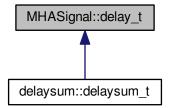

Public Member Functions

- delay_t (std::vector< int > delays, unsigned int channels)
 Constructor.
- mha_wave_t * process (mha_wave_t *s)
 Processing method.
- ~delay_t ()
- std::string inspect () const

Private Attributes

- · unsigned int channels
- unsigned int * delays
- unsigned int * pos
- mha_real_t ** buffer

5.274.1 Detailed Description

Class to realize a simple delay of waveform streams.

5.274.2 Constructor & Destructor Documentation

Constructor.

Parameters

delays	Vector of delays, one entry for each channel.
channels	Number of channels expected.

```
5.274.2.2 MHASignal::delay_t::~delay_t()
```

5.274.3 Member Function Documentation

```
5.274.3.1 mha_wave_t * MHASignal::delay_t::process ( mha_wave_t * s )
```

Processing method.

Parameters

s | Input waveform fragment, with number of channels provided in constructor.

Returns

Output waveform fragment.

```
5.274.3.2 std::string MHASignal::delay_t::inspect( ) const [inline]
5.274.4 Member Data Documentation
5.274.4.1 unsigned int MHASignal::delay_t::channels [private]
5.274.4.2 unsigned int* MHASignal::delay_t::delays [private]
```

5.274.4.3 unsigned int* MHASignal::delay_t::pos [private]

5.274.4.4 mha_real_t** **MHASignal::delay_t::buffer** [private]

The documentation for this class was generated from the following files:

- · mha_signal.hh
- · mha_signal.cpp

5.275 MHASignal::delay_wave_t Class Reference

Delayline containing wave fragments.

Public Member Functions

- delay_wave_t (unsigned int delay, unsigned int frames, unsigned int channels)
- ~delay_wave_t ()
- mha_wave_t * process (mha_wave_t *)

Private Attributes

- unsigned int delay
- MHASignal::waveform_t ** buffer
- unsigned int pos

5.275.1 Detailed Description

Delayline containing wave fragments.

The delayline contains waveform fragments. The delay can be configured in integer fragments (sample delay or sub-sample delay is not possible).

```
5.275.2 Constructor & Destructor Documentation
```

- 5.275.2.2 MHASignal::delay wave t::~delay wave t()
- 5.275.3 Member Function Documentation
- 5.275.4 Member Data Documentation
- **5.275.4.1 unsigned int MHASignal::delay_wave_t::delay** [private]
- **5.275.4.2** MHASignal::waveform_t** MHASignal::delay_wave_t::buffer [private]
- **5.275.4.3 unsigned int MHASignal::delay_wave_t::pos** [private]


The documentation for this class was generated from the following files:

- · mha signal.hh
- mha_signal.cpp

5.276 MHASignal::doublebuffer_t Class Reference

Double-buffering class.

Inheritance diagram for MHASignal::doublebuffer t:

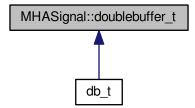

Public Member Functions

 doublebuffer_t (unsigned int nchannels_in, unsigned int nchannels_out, unsigned int outer_fragsize, unsigned int inner_fragsize)

Constructor of double buffer.

- virtual ~doublebuffer t ()
- mha wave t * outer process (mha wave t *s)

Method to pass audio fragments into the inner layer.

Protected Member Functions

• virtual mha_wave_t * inner_process (mha_wave_t *s)=0

Method to realize inner processing callback.

Private Member Functions

• unsigned int **min** (unsigned int a, unsigned int b)

Private Attributes

- waveform_t outer_out
- mha_wave_t this_outer_out
- waveform_t inner_in
- waveform_t inner_out
- unsigned int k inner
- unsigned int k_outer
- unsigned int **ch**

5.276.1 Detailed Description

Double-buffering class.

This class has two layers: The outer layer, with an outer fragment size, and an inner layer, with its own fragment size. Data is passed into the inner layer through the doublebuffer_t::outr_process() callback. The pure virtual method **doublebuffer_t::inner_process()** (p. 726) is called whenever enough data is available.

5.276.2 Constructor & Destructor Documentation

Constructor of double buffer.

Parameters

nchannels_in	Number of channels at the input (both layers).
nchannels_out	Number of channels at the output (both layers).
outer_fragsize	Fragment size of the outer layer (e.g., hardware fragment size)
inner_fragsize	Fragment size of the inner layer (e.g., software fragment size)

```
5.276.2.2 MHASignal::doublebuffer_t::~doublebuffer_t() [virtual]
```

5.276.3 Member Function Documentation

Method to pass audio fragments into the inner layer.

Parameters

s Pointer to input waveform fragment.

Returns

Pointer to output waveform fragment.

Method to realize inner processing callback.

To be overwritten by derived classes.

Parameters

s Pointer to input waveform fragment.

Returns

Pointer to output waveform fragment.

Implemented in **db_t** (p. 234).

The documentation for this class was generated from the following files:

- mha_signal.hh
- · mha_signal.cpp

5.277 MHASignal::fft_t Class Reference

Public Member Functions

- fft_t (const unsigned int &)
- ∼fft_t ()
- void wave2spec (const mha_wave_t *, mha_spec_t *, bool swap)
 fast fourier transform.
- void spec2wave (const mha_spec_t *, mha_wave_t *)
- void spec2wave (const mha_spec_t *, mha_wave_t *, unsigned int offset)
 wave may have fewer number of frames than needed for a complete iFFT.
- void forward (mha_spec_t *sIn, mha_spec_t *sOut)
- void backward (mha spec t *sIn, mha spec t *sOut)
- void wave2spec_scale (const mha_wave_t *, mha_spec_t *, bool swap)
- void spec2wave_scale (const mha_spec_t *, mha_wave_t *)
- void forward_scale (mha_spec_t *sIn, mha_spec_t *sOut)
- void backward_scale (mha_spec_t *sIn, mha_spec_t *sOut)

Private Member Functions

- void **sort_fftw2spec** (fftw_real *s_fftw, **mha_spec_t** *s_spec, unsigned int ch)

 Arrange the order of an fftw spectrum to the internal order.
- void **sort_spec2fftw** (fftw_real *s_fftw, const **mha_spec_t** *s_spec, unsigned int ch)

 Arrange the order of an internal spectrum to the fftw order.

Private Attributes

- · unsigned int nfft
- unsigned int n re
- unsigned int n_im
- · mha real t scale
- mha_real_t * buf_in
- mha_real_t * buf_out
- rfftw_plan_wave2spec
- rfftw_plan_spec2wave
- fftw_plan fftw_plan_fft
- fftw_plan fftw_plan_ifft
- 5.277.1 Constructor & Destructor Documentation

```
5.277.1.1 MHASignal::fft_t::fft_t ( const unsigned int & n )
```

- 5.277.1.2 MHASignal::fft_t::∼fft_t ()
- 5.277.2 Member Function Documentation

fast fourier transform.

if swap is set, the buffer halfes of the wave signal are exchanged before computing the fft.

wave may have fewer number of frames than needed for a complete iFFT.

Only as many frames are written into wave as fit, starting with offset offset of the complete iFFT.

```
5.277.2.4 void MHASignal::fft_t::forward (
                       mha_spec_t * sln,
                       mha spec t * sOut)
5.277.2.5 void MHASignal::fft_t::backward (
                       mha spec t * sln,
                       mha_spec_t * sOut )
5.277.2.6 void MHASignal::fft_t::wave2spec_scale (
                       const mha_wave_t * wave,
                       mha_spec_t * spec,
                       bool swap )
5.277.2.7 void MHASignal::fft_t::spec2wave_scale (
                       const mha spec t * spec,
                       mha wave t * wave )
5.277.2.8 void MHASignal::fft t::forward scale (
                       mha_spec_t * sln,
                       mha_spec_t * sOut )
5.277.2.9 void MHASignal::fft_t::backward_scale (
                       mha_spec_t * sln,
                       mha_spec_t * sOut )
5.277.2.10 void MHASignal::fft_t::sort_fftw2spec (
                        fftw_real * s_fftw,
                        mha_spec_t * s_spec,
                        unsigned int ch ) [private]
Arrange the order of an fftw spectrum to the internal order.
The fftw spectrum is arranged [r0 r1 r2 ... rn-1 in in-1 ... i1], while the interal order is [r0 - r1 i1
r2 i2 ... rn-1 in-1 rn –].
5.277.2.11 void MHASignal::fft_t::sort_spec2fftw (
                        fftw real * s fftw,
```

Arrange the order of an internal spectrum to the fftw order.

const mha_spec_t * s_spec,
unsigned int ch) [private]

```
5.277.3 Member Data Documentation
```

```
5.277.3.1 unsigned int MHASignal::fft_t::nfft [private]
5.277.3.2 unsigned int MHASignal::fft_t::n_re [private]
5.277.3.3 unsigned int MHASignal::fft_t::n_im [private]
5.277.3.4 mha_real_t MHASignal::fft_t::scale [private]
5.277.3.5 mha_real_t* MHASignal::fft_t::buf_in [private]
5.277.3.6 mha_real_t* MHASignal::fft_t::buf_out [private]
5.277.3.7 rfftw_plan MHASignal::fft_t::fftw_plan_wave2spec [private]
5.277.3.8 rfftw_plan MHASignal::fft_t::fftw_plan_spec2wave [private]
5.277.3.9 fftw_plan MHASignal::fft_t::fftw_plan_fft [private]
```

The documentation for this class was generated from the following files:

5.277.3.10 fftw_plan MHASignal::fft_t::fftw_plan_ifft [private]

- mha_signal_fft.h
- mha_signal.cpp

5.278 MHASignal::hilbert_fftw_t Class Reference

Public Member Functions

- hilbert_fftw_t (unsigned int len)
- void hilbert (const mha_wave_t *, mha_wave_t *)

Private Attributes

- unsigned int n
- rfftw plan p1
- fftw_plan **p2**
- fftw real * buf r in
- fftw_real * buf_r_out
- fftw_complex * buf_c_in
- fftw_complex * buf_c_out
- · mha real t sc

```
5.278.1 Constructor & Destructor Documentation
```

5.278.2 Member Function Documentation

5.278.3 Member Data Documentation

```
5.278.3.1 unsigned int MHASignal::hilbert_fftw_t::n [private]
```


The documentation for this class was generated from the following file:

mha_signal.cpp

5.279 MHASignal::hilbert t Class Reference

Hilbert transformation of a waveform segment.

Inheritance diagram for MHASignal::hilbert t:

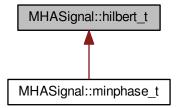

Public Member Functions

- hilbert t (unsigned int len)
- ∼hilbert_t ()
- void operator() (const mha_wave_t *, mha_wave_t *)

Apply Hilbert transformation on a waveform segment.

Private Attributes

• void * **h**

5.279.1 Detailed Description

Hilbert transformation of a waveform segment.

Returns the imaginary part of the inverse Fourier transformation of the Fourier transformed input signal with negative frequencies set to zero.

```
5.279.2 Constructor & Destructor Documentation
```

```
5.279.2.1 MHASignal::hilbert_t::hilbert_t ( unsigned int len )
```

Parameters

```
len Length of waveform segment
```

```
5.279.2.2 MHASignal::hilbert_t::~hilbert_t ( )
```

5.279.3 Member Function Documentation

Apply Hilbert transformation on a waveform segment.

5.279.4 Member Data Documentation

```
5.279.4.1 void* MHASignal::hilbert_t::h [private]
```


The documentation for this class was generated from the following files:

- · mha signal.hh
- mha_signal.cpp

5.280 MHASignal::loop_wavefragment_t Class Reference

Copy a fixed waveform fragment to a series of waveform fragments of other size.

Inheritance diagram for MHASignal::loop_wavefragment_t:

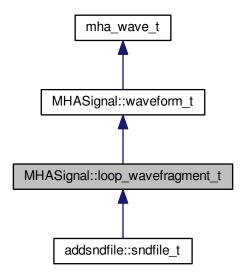

Public Types

Public Member Functions

 loop_wavefragment_t (const mha_wave_t &src, bool loop, level_mode_t level_mode, std::vector< int > channels, unsigned int startpos=0)

Constructor to create an instance of **loop_wavefragment_t** (p. 733) based on an existing waveform block.

- std::vector< int > get_mapping (unsigned int channels)
- void playback (mha_wave_t *s, playback_mode_t pmode, mha_wave_t *level_pa, const std::vector< int > &channels)

Add source waveform block to an output block.

- void playback (mha_wave_t *s, playback_mode_t pmode, mha_wave_t *level_pa)

 Add source waveform block to an output block.
- void playback (mha_wave_t *s, playback_mode_t pmode)

Add source waveform block to an output block.

- void set_level_lin (mha_real_t l)
- void set_level_db (mha_real_t l)
- void rewind ()
- void locate_end ()
- bool is_playback_active () const

Private Attributes

- std::vector< int > playback channels
- bool b_loop
- unsigned int pos
- MHASignal::waveform_t intern_level

Additional Inherited Members

5.280.1 Detailed Description

Copy a fixed waveform fragment to a series of waveform fragments of other size.

This class is designed to continously play back a waveform to an output stream, with variable output block size.

```
5.280.2 Member Enumeration Documentation
```

```
5.280.2.1 enum MHASignal::loop wavefragment t::level mode t
```

Switch for playback level mode.

Enumerator

```
relative The nominal level is applied as a gain to the source signal.
peak The nominal level is the peak level of source signal in Pascal.
rms The nominal level is the RMS level of the source signal in Pascal.
rms_limit40
```

5.280.2.2 enum MHASignal::loop_wavefragment_t::playback_mode_t

Switch for playback mode.

Enumerator

```
add Add source signal to output stream.
replace Replace output stream by source signal.
input Do nothing, keep output stream (source position is unchanged).
mute Mute output stream (source position is unchanged).
```

5.280.3 Constructor & Destructor Documentation

Constructor to create an instance of **loop_wavefragment_t** (p. 733) based on an existing waveform block.

Parameters

src	Waveform block to copy data from.
Іоор	Flag whether the block should be looped or played once.
level_mode	Configuration of playback level (see MHASignal::loop_wavefragment_t::level_mode_t (p. 734) for details)
channels	Mapping of input to output channels.
startpos	Starting position

5.280.4 Member Function Documentation

```
5.280.4.1 std::vector< int > MHASignal::loop_wavefragment_t::get_mapping ( unsigned int channels )
```

Add source waveform block to an output block.

Parameters

S	Output block (streamed signal).
pmode	Playback mode (add, replace, input, mute).
level_pa	Linear output level/gain (depending on level_mode parameter in constructor); one value for each sample in output block.
channels	Output channels

Add source waveform block to an output block.

Parameters

S	Output block (streamed signal).
pmode	Playback mode (add, replace, input, mute).
level_pa	Linear output level/gain (depending on level_mode parameter in constructor); one value for each sample in output block.

Add source waveform block to an output block.

Parameters

S	Output block (streamed signal).	
pmode	Playback mode (add, replace, input, mute).	


The documentation for this class was generated from the following files:

- · mha signal.hh
- mha_signal.cpp

5.281 MHASignal::matrix_t Class Reference

n-dimensional matrix with real or complex floating point values.

Inheritance diagram for MHASignal::matrix_t:

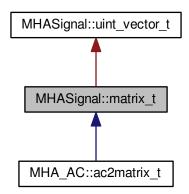

Public Member Functions

- matrix_t (unsigned int nrows, unsigned int ncols, bool b_is_complex=true)
 Create a two-dimensional matrix.
- matrix_t (const mha_spec_t &spec)

Create a two-dimensional matrix from a spectrum, copy values.

- matrix_t (const MHASignal::uint_vector_t &size, bool b_is_complex=true)
 Create n-dimensional matrix, descriped by size argument.
- matrix_t (const MHASignal::matrix_t &)
- matrix_t (const uint8_t *buf, unsigned int len)

Construct from memory area.

- ∼matrix t ()
- MHASignal::matrix t & operator= (const MHASignal::matrix t &)
- MHASignal::matrix_t & operator= (const comm_var_t &v)

Fill matrix with data of an AC variable object.

comm_var_t get_comm_var ()

Return a AC communication variable pointing to the data of the current matrix.

unsigned int dimension () const

Return the dimension of the matrix.

• unsigned int size (unsigned int k) const

Return the size of the matrix.

• unsigned int **get_nelements** () const

Return total number of elements.

bool is_same_size (const MHASignal::matrix_t &)

Test if matrix has same size as other.

• bool **iscomplex** () const

Return information about complexity.

mha_real_t & real (const MHASignal::uint_vector_t &index)

Access real part of an element in a n-dimensional matrix.

mha_real_t & imag (const MHASignal::uint_vector_t &index)

Access imaginary part of an element in a n-dimensional matrix.

mha_complex_t & operator() (const MHASignal::uint_vector_t &index)

Access complex value of an element in a n-dimensional matrix.

const mha_real_t & real (const MHASignal::uint_vector_t &index) const

Access real part of an element in a n-dimensional matrix.

const mha_real_t & imag (const MHASignal::uint_vector_t &index) const

Access imaginary part of an element in a n-dimensional matrix.

• const mha_complex_t & operator() (const MHASignal::uint_vector_t &index) const

Access complex value of an element in a n-dimensional matrix.

• mha_real_t & real (unsigned int row, unsigned int col)

Access real part of an element in a two-dimensional matrix.

mha_real_t & imag (unsigned int row, unsigned int col)

Access imaginary part of an element in a two-dimensional matrix.

mha_complex_t & operator() (unsigned int row, unsigned int col)

Access complex value of an element in a two-dimensional matrix.

• const mha_real_t & real (unsigned int row, unsigned int col) const

Access real part of an element in a two-dimensional matrix.

• const mha_real_t & imag (unsigned int row, unsigned int col) const

Access imaginary part of an element in a two-dimensional matrix.

• const mha_complex_t & operator() (unsigned int row, unsigned int col) const

Access complex value of an element in a two-dimensional matrix.

- unsigned int get nreals () const
- unsigned int get_index (unsigned int row, unsigned int col) const
- unsigned int get index (const MHASignal::uint vector t &index) const
- unsigned int **numbytes** () const

Return number of bytes needed to store into memory.

unsigned int write (uint8_t *buf, unsigned int len) const

Copy to memory area.

const mha_real_t * get_rdata () const

Return pointer of real data.

const mha_complex_t * get_cdata () const

Return pointer of complex data.

Private Attributes

```
uint32_t complex_ofs
uint32_t nelements
union {
    mha_real_t * rdata
    mha_complex_t * cdata
};
```

Additional Inherited Members

5.281.1 Detailed Description

n-dimensional matrix with real or complex floating point values.

Warning

The member functions **imag()** (p. 742) and operator() should only be called if the matrix is defined to hold complex values.

5.281.2 Constructor & Destructor Documentation

Create a two-dimensional matrix.

Parameters

nrows	Number of rows
ncols	Number of columns
b_is_complex	Add space for complex values

Create a two-dimensional matrix from a spectrum, copy values.

Parameters

spec	Source spectrum structure
------	---------------------------

Create n-dimensional matrix, descriped by size argument.

Parameters

size	Size vector
b_is_complex	Add space for complex values

const uint8_t * buf,
unsigned int len)

Construct from memory area.

Warning

This constructor is not real time safe

```
5.281.2.6 MHASignal::matrix_t::~matrix_t ( )
```

5.281.3 Member Function Documentation

Fill matrix with data of an AC variable object.

Parameters

```
v Source AC variable (comm_var_t (p. 228))
```

Note

The type and dimension of the AC variable must match the type and dimension of the matrix.

```
5.281.3.3 comm_var_t MHASignal::matrix_t::get_comm_var( )
```

Return a AC communication variable pointing to the data of the current matrix.

Returns

AC variable object (**comm_var_t** (p. 228)), valid for the life time of the matrix.

```
5.281.3.4 unsigned int MHASignal::matrix_t::dimension ( ) const [inline]
```

Return the dimension of the matrix.

Returns

Dimension of the matrix

Return the size of the matrix.

Parameters

```
k Dimension
```

Returns

Size of the matrix in dimension k

```
5.281.3.6 unsigned int MHASignal::matrix_t::get_nelements ( ) const
```

Return total number of elements.

Test if matrix has same size as other.

```
5.281.3.8 bool MHASignal::matrix_t::iscomplex( ) const [inline]
```

Return information about complexity.

Access real part of an element in a n-dimensional matrix.

Parameters

<i>index</i> Ir	ndex vector
-----------------	-------------

Access imaginary part of an element in a n-dimensional matrix.

Parameters

```
index Index vector
```

Access complex value of an element in a n-dimensional matrix.

Parameters

```
index Index vector
```

Access real part of an element in a n-dimensional matrix.

Parameters

```
index Index vector
```

Access imaginary part of an element in a n-dimensional matrix.

indox	Inday, vaatar
inaex	Index vector

Access complex value of an element in a n-dimensional matrix.

Parameters

Access real part of an element in a two-dimensional matrix.

Parameters

row	Row number of element
col	Column number of element

Access imaginary part of an element in a two-dimensional matrix.

Parameters

row	Row number of element
col	Column number of element

Access complex value of an element in a two-dimensional matrix.

row	Row number of element
col	Column number of element

Access real part of an element in a two-dimensional matrix.

Parameters

row	Row number of element
col	Column number of element

Access imaginary part of an element in a two-dimensional matrix.

Parameters

row	Row number of element
col	Column number of element

Access complex value of an element in a two-dimensional matrix.

Parameters

row	Row number of element
col	Column number of element

Return number of bytes needed to store into memory.

Copy to memory area.

Return pointer of real data.

Return pointer of complex data.

5.281.4 Member Data Documentation

```
5.281.4.1 uint32_t MHASignal::matrix_t::complex_ofs [private]
```


The documentation for this class was generated from the following files:

- mha_signal.hh
- mha_signal.cpp

5.282 MHASignal::minphase_t Class Reference

Minimal phase function.

Inheritance diagram for MHASignal::minphase t:

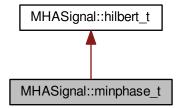

Public Member Functions

minphase_t (unsigned int fftlen, unsigned int ch)
 Constructor.

void operator() (mha_spec_t *s)

Transform input spectrum to a minimal-phase spectrum, discarding the original phase.

Private Attributes

MHASignal::waveform_t phase

Additional Inherited Members

5.282.1 Detailed Description

Minimal phase function.

The output spectrum Y(f) is

$$Y(f) = |X(f)|e^{i\mathcal{H}\{\log|X(f)|\}},$$

with the input spectrum X(f) and the Hilbert transformation $\mathcal{H}\{\cdots\}$.

5.282.2 Constructor & Destructor Documentation

Constructor.

Parameters

fftlen	FFT length	
ch	Number of channels	

5.282.3 Member Function Documentation

Transform input spectrum to a minimal-phase spectrum, discarding the original phase.

Parameters

s | Spectrum to operate on.

5.282.4 Member Data Documentation

5.282.4.1 MHASignal::waveform_t MHASignal::minphase_t::phase [private]

The documentation for this class was generated from the following files:

- mha_signal.hh
- mha_signal.cpp

5.283 MHASignal::quantizer_t Class Reference

Simple simulation of fixpoint quantization.

Public Member Functions

- quantizer_t (unsigned int num_bits)
 Constructor.
- void operator() (mha_wave_t &s)
 Quantization of a waveform fragment.

Private Attributes

- bool limit
- mha_real_t upscale
- mha_real_t downscale
- · mha real tup limit

5.283.1 Detailed Description

Simple simulation of fixpoint quantization.

5.283.2 Constructor & Destructor Documentation

5.283.2.1 MHASignal::quantizer_t::quantizer_t (unsigned int *num_bits*)

Constructor.

Parameters

num_bits Nu	umber of bits to simulate,	or zero for limiting to [-1,1] only.
-------------	----------------------------	--------------------------------------

5.283.3 Member Function Documentation

Quantization of a waveform fragment.

Parameters

s | Waveform fragment to be quantized.

5.283.4 Member Data Documentation

```
5.283.4.1 bool MHASignal::quantizer_t::limit [private]
```

```
5.283.4.2 mha real t MHASignal::quantizer_t::upscale [private]
```

```
5.283.4.3 mha_real_t MHASignal::quantizer_t::downscale [private]
```

```
5.283.4.4 mha_real_t MHASignal::quantizer_t::up_limit [private]
```


The documentation for this class was generated from the following files:

- mha_signal.hh
- · mha signal.cpp

5.284 MHASignal::ringbuffer_t Class Reference

A ringbuffer class for time domain audio signal, which makes no assumptions with respect to fragment size.

Inheritance diagram for MHASignal::ringbuffer_t:

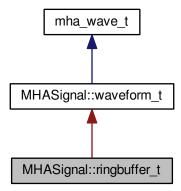

Public Member Functions

- ringbuffer_t (unsigned frames, unsigned channels, unsigned prefilled_frames)

 Creates new ringbuffer for time domain signal.
- unsigned **contained_frames** () const number of currently contained frames
- mha_real_t & value (unsigned frame, unsigned channel)

Access to value stored in ringbuffer.

void discard (unsigned frames)

Discards the oldest frames.

void write (mha_wave_t &signal)

Copies the contents of the signal into the ringbuffer if there is enough space.

Private Attributes

- unsigned next_read_frame_index
 Index of oldest frame in underlying storage for the ringbuffer.
- unsigned next_write_frame_index
 Index of first free frame in underlying storage.

Additional Inherited Members

5.284.1 Detailed Description

A ringbuffer class for time domain audio signal, which makes no assumptions with respect to fragment size.

Blocks of audio signal can be placed into the ringbuffer using the **write** (p. 751) method. Individual audio samples can be accessed and altered using the **value** (p. 750) method. Blocks of audio data can be deleted from the ringbuffer using the **discard** (p. 751) method.

5.284.2 Constructor & Destructor Documentation

Creates new ringbuffer for time domain signal.

Constructor allocates enough storage so that *frames* audio samples can be stored in the ring-buffer.

Parameters

frames	Size of ringbuffer in samples per channel. Maximum number of frames that can be stored in the ringbuffer at one time. This number cannot be changed after instance creation.
channels	Number of audio channels.
prefilled_frames	Number of frames to be prefilled with zero values. Many applications of a ringbuffer require the introduction of a delay. In practice, this delay is achieved by inserting silence audio samples (zeros) into the ringbuffer before the start of the actual signal is inserted for the first time.

Exceptions

```
MHA_Error (p. 406) if prefilled_frames > frames
```

5.284.3 Member Function Documentation

```
5.284.3.1 unsigned MHASignal::ringbuffer_t::contained_frames() const [inline]
```

number of currently contained frames

Access to value stored in ringbuffer.

frame index is relative to the oldest frame stored in the ringbuffer, therefore, the meaning of the *frame* changes when the **discard** (p. 751) method is called.

frame	frame index, 0 corresponds to oldest frame stored.
channel	audio channel

751

Returns

reference to contained sample value

Exceptions

```
MHA_Error (p. 406) if channel or frame out of bounds.
```

```
5.284.3.3 void MHASignal::ringbuffer_t::discard (
unsigned frames ) [inline]
```

Discards the oldest frames.

Makes room for new write (p. 751), alters base frame index for value (p. 750)

Parameters

```
frames how many frames to discard.
```

Exceptions

```
MHA_Error (p. 406) if frames > contained_frames (p. 750)
```

```
5.284.3.4 void MHASignal::ringbuffer_t::write (

mha_wave_t & signal) [inline]
```

Copies the contents of the signal into the ringbuffer if there is enough space.

Parameters

signal New signal to be appended to the signal already present in the ringbuffer

Exceptions

MHA_Error (p. 406)	if there is not enough space or if the channel count mismatches.
	Nothing is copied if the space is insufficient.

5.284.4 Member Data Documentation

5.284.4.1 unsigned MHASignal::ringbuffer_t::next_read_frame_index [private]

Index of oldest frame in underlying storage for the ringbuffer.

This value is added to the frame parameter of the **value** (p. 750) method, and this value is altered when **discard** (p. 751) is called.

5.284.4.2 unsigned MHASignal::ringbuffer_t::next_write_frame_index [private]

Index of first free frame in underlying storage.

Next frame to be stored will be placed here.


The documentation for this class was generated from the following files:

- mha_signal.hh
- mha_signal.cpp

5.285 MHASignal::schroeder_t Class Reference

Schroeder tone complex class.

Inheritance diagram for MHASignal::schroeder_t:

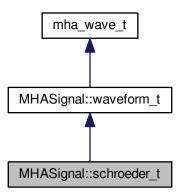

Public Types

• typedef float(* **groupdelay_t**) (float f, float fmin, float fmax)

Function type for group delay definition.

Public Member Functions

 schroeder_t (unsigned int len, unsigned int channels=1, schroeder_t::sign_t sign=up, mha_real_t speed=1)

Constructor.

• schroeder_t (unsigned int len, unsigned int channels=1, schroeder_t::groupdelay_t freqfun=MHASignal::schroeder_t::identity, float fmin=0, float fmax=1, float eps=1e-10)

Construct create Schroeder tone complex from a given frequency function.

Static Public Member Functions

- static float identity (float x, float, float)
- static float **log_up** (float x, float fmin, float fmax)
- static float **log_down** (float x, float fmin, float fmax)

Additional Inherited Members

5.285.1 Detailed Description

Schroeder tone complex class.

The Schroeder tone complex is a sweep defined in the sampled spectrum:

$$\Phi(f) = \sigma 2\pi \tau (2f/f_s)^{2\alpha}, \quad S(f) = e^{i\Phi(f)}$$

f is the sampled frequency in Hz, σ is the sign of the sweep (-1 for up sweep, +1 for down sweep), τ is the sweep duration in samples, f_s is the sampling rate in Hz and α is the relative sweep speed.

5.285.2 Member Typedef Documentation

5.285.2.1 typedef float(* MHASignal::schroeder t::groupdelay t) (float f, float fmin, float fmax)

Function type for group delay definition.

f	Frequency relative to Nyquist frequency.	
fmin	Minimum frequency relative to Nyquist frequency.	
fmax	Maximum frequency relative to Nyquist frequency.	

5.285.3 Member Enumeration Documentation

5.285.3.1 enum MHASignal::schroeder_t::sign_t

Enumerator for sign of Schroeder tone complex sweep direction.

Enumerator

```
up Sweep from zero to Nyquist frequency ( \sigma = -1) down Sweep from Nyquist frequency to zero ( \sigma = +1)
```

5.285.4 Constructor & Destructor Documentation

Constructor.

Parameters of the Schroeder tone complex are configured in the constructor.

Parameters

len	Length $ au$ of the Schroeder tone complex in samples
channels	Number of channels
sign	Sign σ of Schroeder sweep
speed	Relative speed α (curvature of phase function)

Construct create Schroeder tone complex from a given frequency function.

The frequency function g(f) defines the sweep speed and sign (based on the group delay). It must be defined in the interval [0,1) and should return values in the interval [0,1].

$$\Phi(f) = -4\pi\tau \int\limits_0^\tau g(f)\,\mathrm{d}f, \quad S(f) = e^{i\Phi(f)}$$

Parameters

len	Length $ au$ of the Schroeder tone complex in samples.
channels	Number of channels.
freqfun	Frequency function $g(f)$.
fmin	Start frequency (relative to Nyquist frequency).
fmax	End frequency (relative to Nyquist frequency).
eps	Stability constant for frequency ranges not covered by Schroeder tone complex.

5.285.5 Member Function Documentation


The documentation for this class was generated from the following files:

- mha_signal.hh
- mha_signal.cpp

5.286 MHASignal::spectrum_t Class Reference

a signal processing class for spectral data (based on **mha_spec_t** (p. 425))

Inheritance diagram for MHASignal::spectrum_t:

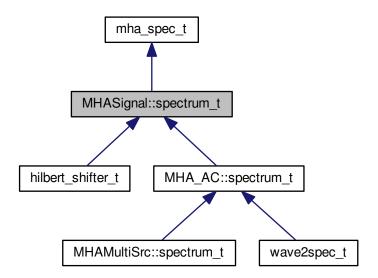

Public Member Functions

- spectrum_t (const unsigned int &frames, const unsigned int &channels)
 constructor of spectrum class
- spectrum_t (const mha_spec_t &)

Copy constructor.

spectrum_t (const MHASignal::spectrum_t &)

Copy constructor.

- spectrum_t (const std::vector< mha_complex_t > &)
- virtual ~spectrum_t (void)
- mha_complex_t & operator() (unsigned int f, unsigned int ch)

Access to element.

mha_complex_t & operator[] (unsigned int k)

Access to a single element, direct index into data buffer.

• mha_complex_t & value (unsigned int f, unsigned int ch)

Access to element.

void copy (const mha_spec_t &)

copy all elements from a spectrum

• void **copy_channel** (const **mha_spec_t** &s, unsigned sch, unsigned dch)

Copy one channel of a given spectrum signal to a target channel.

void export_to (mha_spec_t &)

copy elements to spectrum structure

void scale (const unsigned int &, const unsigned int &, const unsigned int &, const mha
 —real_t &)

scale section [a,b) in channel "ch" by "val"
 void scale_channel (const unsigned int &, const mha_real_t &)
 scale all elements in one channel

Additional Inherited Members

5.286.1 Detailed Description

a signal processing class for spectral data (based on **mha_spec_t** (p. 425))

5.286.2 Constructor & Destructor Documentation

constructor of spectrum class

Allocates buffers and initializes memory to zeros.

Parameters

frames	number of frames (fft bins) in one channel. Number of Frames is usually fftlen / 2 + 1
channels	number of channels

void) [virtual]

Reimplemented in MHA_AC::spectrum_t (p. 385).

5.286.2.5 spectrum_t::~spectrum_t (

5.286.3 Member Function Documentation

Access to element.

Parameters

f	Bin number
ch	Channel number

Returns

Reference to element

```
5.286.3.2 mha_complex_t& MHASignal::spectrum_t::operator[]( unsigned int k) [inline]
```

Access to a single element, direct index into data buffer.

Parameters

```
k Buffer index
```

Returns

Reference to element

Access to element.

Parameters

f	Bin number
ch	Channel number

Returns

Reference to element

```
5.286.3.4 void spectrum_t::copy (
const mha_spec_t & src )
```

copy all elements from a spectrum

Parameters

src	input spectrum
-----	----------------

Copy one channel of a given spectrum signal to a target channel.

Parameters

s	Input spectrum signal
sch	Channel index in source signal
dch	Channel index in destination (this) signal

copy elements to spectrum structure

Parameters

dest	destination spectrum structure
------	--------------------------------

scale section [a,b) in channel "ch" by "val"

а	starting frame
b	end frame (excluded)
ch	channel number
val	scale factor

scale all elements in one channel

Parameters


ch	channel number
src	scale factor

The documentation for this class was generated from the following files:

- · mha_signal.hh
- mha_signal.cpp

5.287 MHASignal::stat_t Class Reference

Inheritance diagram for MHASignal::stat_t:

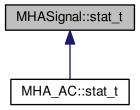

Public Member Functions

- stat_t (const unsigned int &frames, const unsigned int &channels)
- void mean (mha_wave_t &m)
- void mean std (mha wave t &m, mha wave t &s)
- void push (const mha_wave_t &)
- void **push** (const **mha_real_t** &x, const unsigned int &k, const unsigned int &ch)

Private Attributes

- · MHASignal::waveform t n
- MHASignal::waveform_t sum
- MHASignal::waveform_t sum2

```
5.287.1 Constructor & Destructor Documentation
5.287.1.1 MHASignal::stat_t::stat_t (
                      const unsigned int & frames,
                      const unsigned int & channels )
5.287.2 Member Function Documentation
5.287.2.1 void MHASignal::stat_t::mean (
                      mha wave t \& m)
5.287.2.2 void MHASignal::stat_t::mean_std (
                      mha_wave_t & m,
                      mha_wave_t & s)
5.287.2.3 void MHASignal::stat_t::push (
                      const mha_wave_t & x )
5.287.2.4 void MHASignal::stat_t::push (
                      const mha_real_t & x,
                      const unsigned int & k,
                      const unsigned int & ch )
5.287.3 Member Data Documentation
5.287.3.1
         MHASignal::waveform_t MHASignal::stat_t::n [private]
5.287.3.2 MHASignal::waveform t MHASignal::stat_t::sum [private]
5.287.3.3
         MHASignal::waveform_t MHASignal::stat_t::sum2 [private]
The documentation for this class was generated from the following files:
   mha_signal.hh
   mha_signal.cpp
```

© 2005-2018 HörTech gGmbH, Oldenburg

MHASignal::subsample_delay_t Class Reference

implements subsample delay in spectral domain.

5.288

Public Member Functions

• **subsample_delay_t** (const std::vector< float > &subsample_delay, unsigned fftlen)

Constructor computes complex phase factors to apply to achieve subsample delay.

void process (mha_spec_t *s)

Apply the phase_gains to s to achieve the subsample delay.

void process (mha_spec_t *s, unsigned idx)

Apply the pase gains to channel idx in s to achieve the subsample delay in channel idx.

Public Attributes

· spectrum t phase gains

The complex factors to apply to achieve the necessary phase shift.

Private Attributes

• unsigned last_complex_bin

index of the last complex fft bin for the used fft length.

5.288.1 Detailed Description

implements subsample delay in spectral domain.

When transformed back to the time domain, the signal is delayed by the configured fraction of a sample. This operation must not be used in a smoothgains bracket.

5.288.2 Constructor & Destructor Documentation

Constructor computes complex phase factors to apply to achieve subsample delay.

Parameters

subsample_delay	The subsample delay to apply0.5 <= subsample_delay <= 0.5
fftlen	FFT length

Exceptions

MHA_Error (p. 406)	if the parameters are out of range
---------------------------	------------------------------------

5.288.3 Member Function Documentation

Apply the phase_gains to s to achieve the subsample delay.

Apply the pase gains to channel idx in s to achieve the subsample delay in channel idx.

Parameters

s	signal
idx	channel index, 0-based

Exceptions

```
MHA\_Error (p. 406) if idx >= s->num_channels
```

5.288.4 Member Data Documentation

5.288.4.1 spectrum_t MHASignal::subsample_delay_t::phase_gains

The complex factors to apply to achieve the necessary phase shift.

5.288.4.2 unsigned MHASignal::subsample_delay_t::last_complex_bin [private]

index of the last complex fft bin for the used fft length.


The documentation for this class was generated from the following files:

- · mha_signal.hh
- mha_signal.cpp

5.289 MHASignal::uint_vector_t Class Reference

Vector of unsigned values, used for size and index description of n-dimensional matrixes.

Inheritance diagram for MHASignal::uint_vector_t:

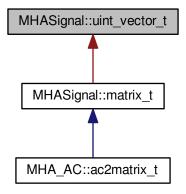

Public Member Functions

uint_vector_t (unsigned int len)

Constructor, initializes all elements to zero.

- uint_vector_t (const uint_vector_t &)
- uint_vector_t (const uint8_t *buf, unsigned int len)

Construct from memory area.

- ∼uint vector t ()
- bool operator== (const uint_vector_t &) const

Check for equality.

• uint vector t & operator= (const uint vector t &)

Assign from other uint_vector_t (p. 764).

unsigned int get_length () const

Return the length of the vector.

const uint32_t & operator[] (unsigned int k) const

Read-only access to elements.

uint32_t & operator[] (unsigned int k)

Access to elements.

unsigned int numbytes () const

Return number of bytes needed to store into memory.

unsigned int write (uint8_t *buf, unsigned int len) const

Copy to memory area.

• const uint32_t * **getdata** () const

Return pointer to the data field.

Protected Attributes

```
uint32_t length
```

```
• uint32_t * data
```

5.289.1 Detailed Description

Vector of unsigned values, used for size and index description of n-dimensional matrixes.

```
5.289.2 Constructor & Destructor Documentation
```

Constructor, initializes all elements to zero.

Parameters

```
len Length of vector.
```

Construct from memory area.

Warning

This constructor is not real time safe

```
5.289.2.4 MHASignal::uint_vector_t::~uint_vector_t ( )
```

5.289.3 Member Function Documentation

Check for equality.

```
5.289.3.2 uint_vector_t & MHASignal::uint_vector_t::operator= (
                       const uint_vector_t & src )
Assign from other uint_vector_t (p. 764).
Warning
      This assignment will fail if the lengths mismatch.
5.289.3.3
          unsigned int MHASignal::uint_vector_t::get_length() const [inline]
Return the length of the vector.
5.289.3.4 const uint32_t& MHASignal::uint_vector_t::operator[] (
                       unsigned int k ) const [inline]
Read-only access to elements.
5.289.3.5 uint32_t& MHASignal::uint_vector_t::operator[](
                       unsigned int k ) [inline]
Access to elements.
5.289.3.6 unsigned int MHASignal::uint_vector_t::numbytes ( ) const
Return number of bytes needed to store into memory.
5.289.3.7 unsigned int MHASignal::uint_vector_t::write (
                       uint8 t * buf.
                       unsigned int len ) const
Copy to memory area.
5.289.3.8 const uint32_t* MHASignal::uint_vector_t::getdata( ) const [inline]
Return pointer to the data field.
5.289.4 Member Data Documentation
         uint32_t MHASignal::uint_vector_t::length [protected]
5.289.4.1
5.289.4.2 uint32_t* MHASignal::uint_vector_t::data [protected]
```


The documentation for this class was generated from the following files:

- mha_signal.hh
- mha_signal.cpp

5.290 MHASignal::waveform_t Class Reference

signal processing class for waveform data (based on mha_wave_t (p. 455))

Inheritance diagram for MHASignal::waveform_t:

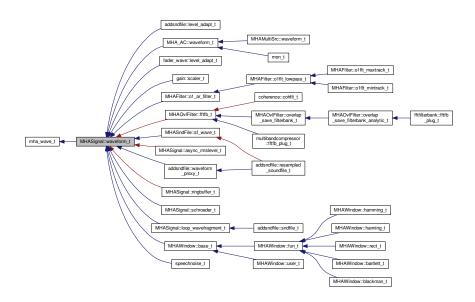

Public Member Functions

- waveform_t (const unsigned int &frames, const unsigned int &channels)
 constructor of waveform_t (p. 767)
- waveform_t (const mhaconfig_t &cf)
 Constructor to create a waveform from plugin configuration.
- waveform_t (const mha_wave_t &src)

Copy contructor for **mha_wave_t** (p. 455) source.

waveform_t (const MHASignal::waveform_t &src)

Copy contructor.

- waveform_t (const std::vector< mha_real_t > &src)
 Copy contructor for std::vector< mha_real_t > source.
- virtual ~waveform_t (void)
- void operator= (const mha_real_t &v)
- mha_real_t & operator[] (unsigned int k)
- const mha_real_t & operator[] (unsigned int k) const
- mha_real_t & value (unsigned int t, unsigned int ch)
 Element accessor.
- mha_real_t & operator() (unsigned int t, unsigned int ch)
 Element accessor.
- const mha_real_t & value (unsigned int t, unsigned int ch) const
 Constant element accessor.

const mha_real_t & operator() (unsigned int t, unsigned int ch) const

Constant element accessor.

mha_real_t sum (const unsigned int &a, const unsigned int &b)

sum of all elements between [a,b) in all channels

• mha_real_t sum (const unsigned int &a, const unsigned int &b, const unsigned int &ch) sum of all elements between [a,b) in channel ch

mha_real_t sum ()

sum of all elements

mha_real_t sumsqr ()

sum of square of all elements

mha_real_t sum_channel (const unsigned int &)

return sum of all elements in one channel

void assign (const unsigned int &k, const unsigned int &ch, const mha_real_t &val)

set frame "k" in channel "ch" to value "val"void assign (const mha real t &)

set all elements to value

void assign_frame (const unsigned int &k, const mha_real_t &val)

assign value "val" to frame k in all channels

void assign_channel (const unsigned int &c, const mha_real_t &val)

assign value "val" to channel ch in all frames

- void copy (const std::vector< mha real t > &v)
- void copy (const mha_wave_t &)

copy data from source into current waveform

- void copy (const mha_wave_t *)
- void copy_channel (const mha_wave_t &, unsigned int, unsigned int)

Copy one channel of a given waveform signal to a target channel.

void copy_from_at (unsigned int, unsigned int, const mha_wave_t &, unsigned int)

Copy part of the source signal into part of this waveform object.

void export_to (mha_wave_t &)

copy data into allocated mha_wave_t (p. 455) structure

void limit (const mha_real_t &min, const mha_real_t &max)

limit target to range [min,max]

void power (const waveform_t &)

transform waveform signal (in Pa) to squared signal (in W/m^2)

void powspec (const mha_spec_t &)

get the power spectrum (in W/m²) from a complex spectrum

 void scale (const unsigned int &a, const unsigned int &b, const unsigned int &ch, const mha_real_t &val)

scale section [a,b) in channel "ch" by "val"

void scale (const unsigned int &k, const unsigned int &ch, const mha_real_t &val)
 scale one element

• void scale channel (const unsigned int &, const mha real t &)

scale one channel of target with a scalar

- void scale_frame (const unsigned int &, const mha_real_t &)
- unsigned int get_size () const

Additional Inherited Members

```
5.290.1 Detailed Description
```

signal processing class for waveform data (based on mha_wave_t (p. 455))

5.290.2 Constructor & Destructor Documentation

```
constructor of waveform_t (p. 767)
```

Allocates buffer memory and initializes values to zero.

Parameters

frames	number of frames in each channel
channels	number of channels

```
5.290.2.2 waveform_t::waveform_t (

const mhaconfig_t & cf ) [explicit]
```

Constructor to create a waveform from plugin configuration.

Parameters

```
cf Plugin configuration
```

Copy contructor for **mha_wave_t** (p. 455) source.

Copy contructor.

Copy contructor for std::vector<mha_real_t> source.

A waveform structure with a single channel is created, the length is equal to the number of elements in the source vector.

5.290.3 Member Function Documentation

Element accessor.

Parameters

t	Frame number
ch	Channel number

Returns

Reference to element

Element accessor.

t	Frame number
ch	Channel number

Returns

Reference to element

Constant element accessor.

Parameters

t	Frame number
ch	Channel number

Returns

Reference to element

Constant element accessor.

Parameters

t	Frame number
ch	Channel number

Returns

Reference to element

sum of all elements between [a,b) in all channels

а	starting frame
b	end frame (excluded)

```
Returns
```

sum

sum of all elements between [a,b) in channel ch

Parameters

а	starting frame
b	end frame (exluded)
ch	channel number

Returns

sum

```
5.290.3.10 mha_real_t waveform_t::sum ( )
```

sum of all elements

Returns

sum of all elements

```
5.290.3.11 mha_real_t waveform_t::sumsqr()
```

sum of square of all elements

Returns

sum of square of all elements

```
5.290.3.12 mha_real_t waveform_t::sum_channel ( const unsigned int & ch )
```

return sum of all elements in one channel

Parameters

ch	channel number	
011	orialition harrison	

Returns

sum

```
5.290.3.13 void waveform_t::assign (
const unsigned int & k,
const unsigned int & ch,
const mha_real_t & val )
```

set frame "k" in channel "ch" to value "val"

Parameters

k	frame number
ch	channel number
val	new value

set all elements to value

Parameters

```
val new value
```

assign value "val" to frame k in all channels

k	frame number
val	new value

assign value "val" to channel ch in all frames

Parameters

ch	channel number
val	new value

```
5.290.3.17 void waveform_t::copy (  const\ std::vector < mha\_real\_t > \&\ \nu\ )  5.290.3.18 void waveform_t::copy (  const\ mha\_wave\_t\ \&\ src\ )
```

copy data from source into current waveform

Parameters

src	input data (need to be same size as target)
-----	---

Copy one channel of a given waveform signal to a target channel.

src	Input waveform signal
src_channel	Channel in source signal
dest_channel	Channel number in destination signal

Copy part of the source signal into part of this waveform object.

Source and target have to have the same number of channels.

Parameters

to_pos	Offset in target
len	Number of frames copied
src	Source
from_pos	Offset in source

```
5.290.3.22 void waveform_t::export_to (
mha_wave_t & dest )
```

copy data into allocated **mha_wave_t** (p. 455) structure

Parameters

dest	destination structure
------	-----------------------

```
5.290.3.23 void waveform_t::limit (
const mha_real_t & min,
const mha_real_t & max )
```

limit target to range [min,max]

Parameters

min	lower limit
max	upper limit

```
5.290.3.24 void waveform_t::power (
const waveform t & src )
```

transform waveform signal (in Pa) to squared signal (in W/m²)

src	linear waveform signal (in Pa)
-----	--------------------------------

```
5.290.3.25 void waveform_t::powspec (
const mha_spec_t & src )
```

get the power spectrum (in W/m^2) from a complex spectrum

Parameters

```
src | complex spectrum (normalized to Pa)
```

scale section [a,b) in channel "ch" by "val"

Parameters

а	starting frame
b	end frame (excluded)
ch	channel number
val	scale factor

scale one element

Parameters

k	frame number
ch	channel number
val	scale factor

scale one channel of target with a scalar

Parameters

ch	channel number
src	factor


5.290.3.30 unsigned int MHASignal::waveform_t::get_size() const [inline]

The documentation for this class was generated from the following files:

- mha_signal.hh
- mha_signal.cpp

5.291 MHASndFile::sf_t Class Reference

Inheritance diagram for MHASndFile::sf_t:

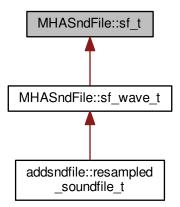

Public Member Functions

- sf_t (const std::string &fname)
- \sim sf_t ()

Public Attributes

• SNDFILE * sf

5.291.1 Constructor & Destructor Documentation

5.291.1.2 MHASndFile::sf_t::~sf_t ()

5.291.2 Member Data Documentation


5.291.2.1 SNDFILE* MHASndFile::sf_t::sf

The documentation for this class was generated from the following files:

- · mhasndfile.h
- · mhasndfile.cpp

5.292 MHASndFile::sf_wave_t Class Reference

Inheritance diagram for MHASndFile::sf_wave_t:

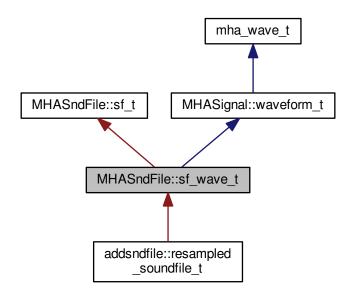

Public Member Functions

• **sf_wave_t** (const std::string &fname, **mha_real_t** peaklevel_db, unsigned int maxlen=std::numeric_limits< unsigned int >::**max**(), unsigned int startpos=0, std← ::vector< int > channel_map=std::vector< int >())

Additional Inherited Members

5.292.1 Constructor & Destructor Documentation


The documentation for this class was generated from the following files:

- · mhasndfile.h
- mhasndfile.cpp

5.293 MHATableLookup::linear_table_t Class Reference

Class for interpolation with equidistant x values.

Inheritance diagram for MHATableLookup::linear_table_t:

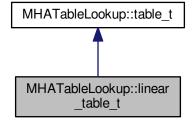

Public Member Functions

linear_table_t (void)

contructor creates an empty linear_table_t (p. 779) object.

mha real t lookup (mha real t x) const

look up the y value that is stored for the mesh point where x is lower than or equal to the x value given here.

mha_real_t interp (mha_real_t x) const

interpolate y value for the given x value.

• ∼linear_table_t (void)

destructor

void set_xmin (mha_real_t xmin)

set the x value for the first mesh point.

void add_entry (mha_real_t y)

set the y value for the next mesh point.

void set xmax (mha real t xmax)

this sets the x value for a past-the-end, not added mesh point.

void prepare (void)

prepare computes the x distance of the mesh points based on the values given to set_xmin, set_xmax, and the number of times that add_entry was called.

void clear (void)

clear resets the state of this object to the state directly after construction.

Protected Attributes

- mha_real_t * vy
- unsigned int len

Private Attributes

- vector< mha_real_t > vec_y
- mha_real_t xmin
- mha_real_t xmax
- · mha real t scalefac

Additional Inherited Members

5.293.1 Detailed Description

Class for interpolation with equidistant x values.

This class can be used for linear interpolation tasks where the mesh points are known for equidistant x values.

Before the class can be used for interpolation, it has to be filled with the y values for the mesh points, the x range has to be specified, and when all values are given, the prepare method has to be called so that the object can determine the distance between x values from the range and the number of mesh points given.

Only after prepare has returned, the object may be used for interpolation.

5.293.2 Constructor & Destructor Documentation

```
5.293.2.1 linear_table_t::linear_table_t ( void )
```

contructor creates an empty linear_table_t (p. 779) object.

add_entry, set_xmin, set_xmax and prepare methods have to be called before the object can be used to lookup and interpolate values.

```
5.293.2.2 linear_table_t::~linear_table_t ( void )
```

destructor

5.293.3 Member Function Documentation

look up the y value that is stored for the mesh point where x is lower than or equal to the x value given here.

This method does not extrapolate, so for x < xmin, the y value for xmin is returned. For all x greater than the x of the last mesh point, the y value of the last mesh point is returned.

Precondition

prepare must have been called before lookup may be called.

Implements MHATableLookup::table_t (p. 784).

interpolate y value for the given x value.

The y values for the neighbouring mesh points are looked up and linearly interpolated. For x values outside the range of mesh points, the y value is extrapolated from the nearest two mesh points.

Precondition

prepare must have been called before interp may be called.

Implements MHATableLookup::table_t (p. 784).

```
5.293.3.3 void linear_table_t::set_xmin (
mha_real_t xmin)
```

set the x value for the first mesh point.

Must be called before prepare can be called.

```
5.293.3.4 void linear_table_t::add_entry (
mha real t y )
```

set the y value for the next mesh point.

Must be called at least twice before prepare can be called.

```
5.293.3.5 void linear_table_t::set_xmax (
mha real t xmax )
```

this sets the x value for a past-the-end, not added mesh point.

Example:

prepare computes the x distance of the mesh points based on the values given to set_xmin, set_xmax, and the number of times that add_entry was called.

Precondition

set_xmin, set_xmax, add_entry functions must have been called before calling prepare, add entry must have been called at least twice.

Only after this method has been called, interp or lookup may be called.

clear resets the state of this object to the state directly after construction.

mesh entries and x range are deleted.

interp and lookup may not be called after this function has been called unless prepare and before that its precondition methods are called again.

Implements MHATableLookup::table_t (p. 784).

```
5.293.4 Member Data Documentation
```


```
5.293.4.1 mha_real_t* MHATableLookup::linear_table_t::vy [protected]
5.293.4.2 unsigned int MHATableLookup::linear_table_t::len [protected]
5.293.4.3 vector<mha_real_t> MHATableLookup::linear_table_t::vec_y [private]
5.293.4.4 mha_real_t MHATableLookup::linear_table_t::xmin [private]
5.293.4.5 mha_real_t MHATableLookup::linear_table_t::xmax [private]
5.293.4.6 mha_real_t MHATableLookup::linear_table_t::scalefac [private]
```

The documentation for this class was generated from the following files:

- mha tablelookup.hh
- mha_tablelookup.cpp

5.294 MHATableLookup::table_t Class Reference

Inheritance diagram for MHATableLookup::table_t:

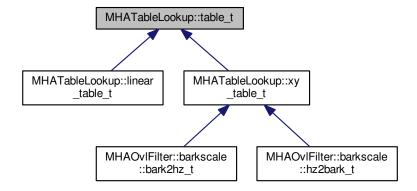

Public Member Functions

```
    table_t (void)
    virtual ~table_t (void)
    virtual mha_real_t lookup (mha_real_t) const =0
    virtual mha real t interp (mha real t) const =0
```

Protected Member Functions

• virtual void clear (void)=0

```
5.294.1 Constructor & Destructor Documentation
5.294.1.1 table t::table t (
                     void )
5.294.1.2 table_t:: ~table_t (
                     void ) [virtual]
5.294.2 Member Function Documentation
5.294.2.1 virtual mha_real_t MHATableLookup::table_t::lookup (
                     mha_real_t )const [pure virtual]
Implemented in MHATableLookup::xy_table_t (p. 786), and MHATableLookup::linear_ <--
table_t (p. 781).
5.294.2.2 virtual mha real t MHATableLookup::table t::interp (
                     mha_real_t )const [pure virtual]
Implemented in MHATableLookup::xy_table_t (p. 787), and MHATableLookup::linear_ 
table_t (p. 781).
5.294.2.3 virtual void MHATableLookup::table_t::clear (
                     void ) [protected], [pure virtual]
Implemented in MHATableLookup::xy_table_t (p. 787), and MHATableLookup::linear_ <--
```

The documentation for this class was generated from the following files:

mha_tablelookup.hh


table_t (p. 783).

mha_tablelookup.cpp

5.295 MHATableLookup::xy_table_t Class Reference

Class for interpolation with non-equidistant x values.

Inheritance diagram for MHATableLookup::xy_table_t:

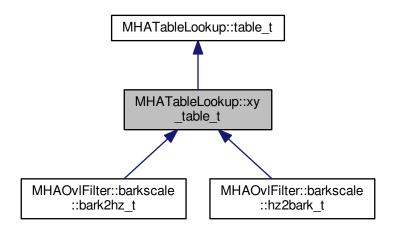

Public Member Functions

- xy_table_t ()
- mha_real_t lookup (mha_real_t x) const

Return the y-value at the position of the nearest x value below input.

mha_real_t interp (mha_real_t x) const

Linear interpolation function.

void add_entry (mha_real_t x, mha_real_t y)

Add a single x-y pair entry.

- void add_entry (mha_real_t *pVX, mha_real_t *pVY, unsigned int len)
 Add multiple entries at once.
- void clear ()

Clear the table and transformation functions.

void set_xfun (float(*pXFun)(float))

Set transformation function for x values.

void set yfun (float(*pYFun)(float))

Set transformation function for y values during insertion.

void set_xyfun (float(*pYFun)(float, float))

Set transformation function for y values during insertion, based on x and y values.

std::pair< mha_real_t, mha_real_t > get_xlimits () const
 returns the min and max x of all mesh points that are stored in the lookup table, i.e.

Private Attributes

- std::map< mha real t, mha real t > mXY
- float(* xfun)(float)
- float(* yfun)(float)
- float(* xyfun)(float, float)

Additional Inherited Members

5.295.1 Detailed Description

Class for interpolation with non-equidistant x values.

Linear interpolation of the x-y table is performed. A transformation of x and y-values is possible; if a transformation function is provided for the x-values, the same function is applied to the argument of **xy_table_t::interp()** (p. 787) and **xy_table_t::lookup()** (p. 786). The transformation of y values is applied only during insertion into the table. Two functions for y-transformation can be provided: a simple transformation which depends only on the y values, or a transformation which takes both (non-transformed) x and y value as an argument. The two-argument transformation is applied before the one-argument transformation.

```
5.295.2 Constructor & Destructor Documentation
```

```
5.295.2.1 xy_table_t::xy_table_t ( )
```

5.295.3 Member Function Documentation

Return the y-value at the position of the nearest x value below input.

Parameters

```
x Input value
```

Returns

y value at nearest x value below input.

Implements MHATableLookup::table_t (p. 784).

Linear interpolation function.

Parameters

```
x x value
```

Returns

interpolated y value

Implements MHATableLookup::table_t (p. 784).

Add a single x-y pair entry.

Parameters

X	x value
У	corresponding y value

Add multiple entries at once.

Parameters

pVX	array of x values
pVY	array of y values
uLength	Length of x and y arrays

Clear the table and transformation functions.

Implements MHATableLookup::table_t (p. 784).

```
5.295.3.6 void xy_table_t::set_xfun ( float(*)(float) fun )
```

Set transformation function for x values.

Parameters

```
fun Transformation function.
```

Set transformation function for y values during insertion.

Parameters

```
fun Transformation function.
```

Set transformation function for y values during insertion, based on x and y values.

Parameters

```
fun Transformation function.
```

```
5.295.3.9 std::pair<mha_real_t,mha_real_t> MHATableLookup::xy_table_t::get_xlimits ( ) const [inline]
```

returns the min and max x of all mesh points that are stored in the lookup table, i.e. after transformation with xfun, if any. Not real-time safe

```
5.295.4 Member Data Documentation
```

```
5.295.4.1 std::map<mha_real_t,mha_real_t> MHATableLookup::xy_table_t::mXY [private]
```

```
5.295.4.2 float(* MHATableLookup::xy_table_t::xfun) (float) [private]
```

5.295.4.3 float(* MHATableLookup::xy_table_t::yfun) (float) [private]

5.295.4.4 float(* MHATableLookup::xy_table_t::xyfun) (float, float) [private]


The documentation for this class was generated from the following files:

- mha tablelookup.hh
- mha_tablelookup.cpp

5.296 MHAWindow::bartlett_t Class Reference

Bartlett window.

Inheritance diagram for MHAWindow::bartlett_t:

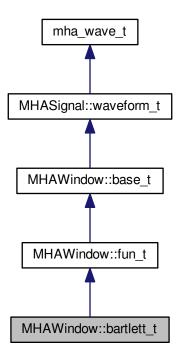

Public Member Functions

bartlett_t (unsigned int n)

Additional Inherited Members

5.296.1 Detailed Description

Bartlett window.

5.296.2 Constructor & Destructor Documentation

5.296.2.1 MHAWindow::bartlett_t::bartlett_t (unsigned int *n*) [inline]


The documentation for this class was generated from the following file:

mha_windowparser.h

5.297 MHAWindow::base_t Class Reference

Common base for window types.

Inheritance diagram for MHAWindow::base_t:

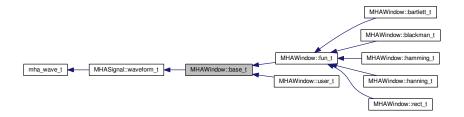

Public Member Functions

base_t (unsigned int len)

Constructor.

base_t (const MHAWindow::base_t &src)

Copy constructor.

• void **operator()** (**mha_wave_t** &) const

Apply window to waveform segment (reference)

• void operator() (mha_wave_t *) const

Apply window to waveform segment (pointer)

void ramp_begin (mha_wave_t &) const

Apply a ramp at the begining.

void ramp_end (mha_wave_t &) const

Apply a ramp at the end.

Additional Inherited Members

5.297.1 Detailed Description

Common base for window types.

5.297.2 Constructor & Destructor Documentation

5.297.2.1 MHAWindow::base_t::base_t (unsigned int *len*)

Constructor.

Parameters

```
len Window length in samples.
```

Copy constructor.

Parameters

```
src | Source to be copied
```

5.297.3 Member Function Documentation

```
5.297.3.1 void MHAWindow::base_t::operator() (
mha_wave_t & s ) const
```

Apply window to waveform segment (reference)

```
5.297.3.2 void MHAWindow::base_t::operator() (
mha_wave_t * s ) const
```

Apply window to waveform segment (pointer)

```
5.297.3.3 void MHAWindow::base_t::ramp_begin ( mha_wave_t & s ) const
```

Apply a ramp at the begining.

```
5.297.3.4 void MHAWindow::base_t::ramp_end (
mha_wave_t & s ) const
```

Apply a ramp at the end.


The documentation for this class was generated from the following files:

- mha_windowparser.h
- mha_windowparser.cpp

5.298 MHAWindow::blackman_t Class Reference

Blackman window.

Inheritance diagram for MHAWindow::blackman_t:

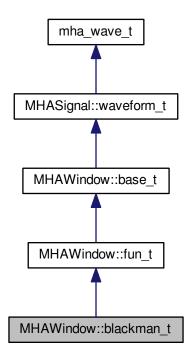

Public Member Functions

blackman_t (unsigned int n)

Additional Inherited Members

5.298.1 Detailed Description

Blackman window.

5.298.2 Constructor & Destructor Documentation

5.298.2.1 MHAWindow::blackman_t::blackman_t (unsigned int *n*) [inline]

The documentation for this class was generated from the following file:

mha_windowparser.h

5.299 MHAWindow::fun_t Class Reference

Generic window based on a generator function.

Inheritance diagram for MHAWindow::fun_t:



Public Member Functions

fun_t (unsigned int n, float(*fun)(float), float xmin=-1, float xmax=1, bool min_← included=true, bool max_included=false)
 Constructor.

Additional Inherited Members

5.299.1 Detailed Description

Generic window based on a generator function.

The generator function should return a valid window function in the interval [-1,1[.

5.299.2 Constructor & Destructor Documentation

Constructor.

Parameters

n	Window length
fun	Generator function, i.e. MHAWindow::hanning() (p. 123)
xmin	Start value of window, i.e1 for full window or 0 for fade-out ramp.
xmax	Last value of window, i.e. 1 for full window
min_included	Flag if minimum value is included
max_included	Flag if maximum value is included


The documentation for this class was generated from the following files:

- mha_windowparser.h
- mha_windowparser.cpp

5.300 MHAWindow::hamming_t Class Reference

Hamming window.

Inheritance diagram for MHAWindow::hamming_t:

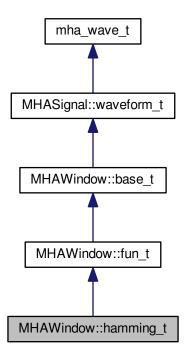

Public Member Functions

• hamming_t (unsigned int n)

Additional Inherited Members

5.300.1 Detailed Description

Hamming window.

5.300.2 Constructor & Destructor Documentation

5.300.2.1 MHAWindow::hamming_t::hamming_t (
unsigned int n) [inline]


The documentation for this class was generated from the following file:

mha_windowparser.h

5.301 MHAWindow::hanning_t Class Reference

von-Hann window

Inheritance diagram for MHAWindow::hanning_t:

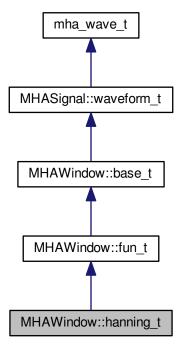

Public Member Functions

• hanning_t (unsigned int n)

Additional Inherited Members

5.301.1 Detailed Description

von-Hann window

5.301.2 Constructor & Destructor Documentation

5.301.2.1 MHAWindow::hanning_t::hanning_t (
unsigned int n) [inline]


The documentation for this class was generated from the following file:

mha_windowparser.h

5.302 MHAWindow::rect_t Class Reference

Rectangular window.

Inheritance diagram for MHAWindow::rect_t:

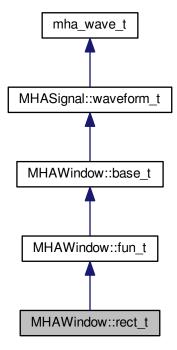

Public Member Functions

rect_t (unsigned int n)

Additional Inherited Members

5.302.1 Detailed Description

Rectangular window.

5.302.2 Constructor & Destructor Documentation

```
5.302.2.1 MHAWindow::rect_t::rect_t (
unsigned int n ) [inline]
```


The documentation for this class was generated from the following file:

mha_windowparser.h

5.303 MHAWindow::user_t Class Reference

User defined window.

Inheritance diagram for MHAWindow::user_t:

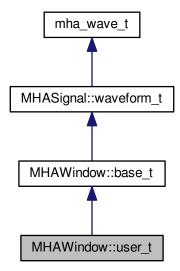

Public Member Functions

user_t (const std::vector< mha_real_t > &wnd)
 Constructor.

Additional Inherited Members

5.303.1 Detailed Description

User defined window.

5.303.2 Constructor & Destructor Documentation

```
5.303.2.1 MHAWindow::user_t::user_t (  {\tt const\ std::vector} < {\tt mha\_real\_t} > \& {\it wnd} \ )
```

Constructor.

Parameters


wnd User defined window

The documentation for this class was generated from the following files:

- mha_windowparser.h
- mha_windowparser.cpp

5.304 mon_t Class Reference

Inheritance diagram for mon_t:

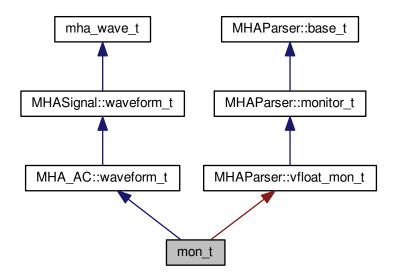

Public Member Functions

- mon_t (unsigned int nch, std::string name, algo_comm_t ac, std::string base, MHA←
 Parser::parser_t &p, std::string help)
- void store ()

Additional Inherited Members

5.304.1 Constructor & Destructor Documentation

5.304.2 Member Function Documentation


```
5.304.2.1 void mon_t::store ( )
```

The documentation for this class was generated from the following file:

rmslevel.cpp

5.305 multibandcompressor::fftfb_plug_t Class Reference

Inheritance diagram for multibandcompressor::fftfb_plug_t:

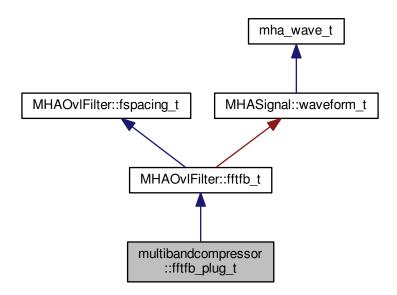

Public Member Functions

- fftfb_plug_t (MHAOvlFilter::fftfb_vars_t &, const mhaconfig_t &cfg, algo_comm_← t ac, std::string alg)
- void insert ()

Private Attributes

- MHA_AC::waveform_t cfv
 vector of nominal center frequencies / Hz
- MHA_AC::waveform_t efv
 vector of edge frequencies / Hz
- MHA_AC::waveform_t bwv
 vector of band-weigths (sum of squared fft-bin-weigths)/num_frames

```
Additional Inherited Members
```

```
5.305.1 Constructor & Destructor Documentation
```

```
5.305.1.1 multibandcompressor::fftfb_plug_t::fftfb_plug_t (

MHAOvIFilter::fftfb_vars_t & vars,

const mhaconfig_t & cfg,

algo_comm_t ac,

std::string alg )
```

5.305.2 Member Function Documentation

```
5.305.2.1 void multibandcompressor::fftfb_plug_t::insert()
```

5.305.3 Member Data Documentation

```
5.305.3.1 MHA_AC::waveform_t multibandcompressor::fftfb_plug_t::cfv [private]
```

vector of nominal center frequencies / Hz

```
5.305.3.2 MHA_AC::waveform_t multibandcompressor::fftfb_plug_t::efv [private]
```

vector of edge frequencies / Hz

5.305.3.3 MHA_AC::waveform_t multibandcompressor::fftfb_plug_t::bwv [private]


vector of band-weigths (sum of squared fft-bin-weigths)/num_frames

The documentation for this class was generated from the following file:

multibandcompressor.cpp

5.306 multibandcompressor::interface_t Class Reference

Inheritance diagram for multibandcompressor::interface_t:

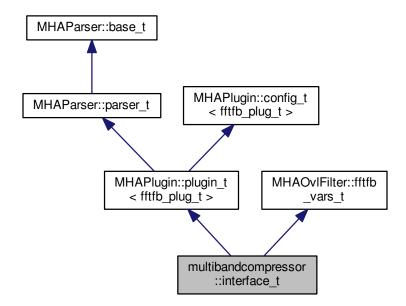

Public Member Functions

- interface_t (const algo_comm_t &, const std::string &, const std::string &)
- void prepare (mhaconfig_t &)
- void release ()
- mha_spec_t * process (mha_spec_t *)

Private Member Functions

void update_cfg ()

Private Attributes

- int num channels
- DynComp::dc_afterburn_t burn
- MHAEvents::patchbay_t< interface_t > patchbay
- std::string algo
- MHAParser::mhapluginloader_t plug
- plugin_signals_t * plug_sigs

Additional Inherited Members

```
5.306.1 Constructor & Destructor Documentation
```

Default values are set and MHA configuration variables registered into the parser.

Parameters

ac⊷	algorithm communication handle
_	
th	chain name
al	algorithm name

5.306.2 Member Function Documentation

Implements MHAPlugin::plugin_t < fftfb_plug_t > (p. 685).

```
5.306.2.2 void multibandcompressor::interface_t::release ( void ) [virtual]
```

Reimplemented from MHAPlugin::plugin_t< fftfb_plug_t > (p. 686).

5.306.2.4 void multibandcompressor::interface_t::update_cfg() [private]

5.306.3 Member Data Documentation

5.306.3.1 int multibandcompressor::interface_t::num_channels [private]

5.306.3.2 DynComp::dc_afterburn_t multibandcompressor::interface_t::burn [private]

5.306.3.3 MHAEvents::patchbay_t<interface_t> multibandcompressor::interface_t::patchbay[private]

```
5.306.3.4 std::string multibandcompressor::interface_t::algo [private]
5.306.3.5 MHAParser::mhapluginloader_t multibandcompressor::interface_t::plug [private]
5.306.3.6 plugin_signals_t* multibandcompressor::interface_t::plug_sigs [private]
The documentation for this class was generated from the following file:

    multibandcompressor.cpp

5.307
       multibandcompressor::plugin_signals_t Class Reference
Public Member Functions
   • plugin_signals_t (unsigned int channels, unsigned int bands)

    void update levels (MHAOvlFilter::fftfb t *, mha spec t *s in)

   • void apply_gains (MHAOvIFilter::fftfb_t *, DynComp::dc_afterburn_t &burn, mha_
     spec t *s out)
Public Attributes

    mha wave t * plug output

Private Attributes

    MHASignal::waveform t plug level

    MHASignal::waveform_t gain

5.307.1 Constructor & Destructor Documentation
5.307.1.1 multibandcompressor::plugin_signals_t::plugin_signals_t (
                      unsigned int channels,
                      unsigned int bands )
```

5.307.2 Member Function Documentation

mha_spec_t * s_in)

5.307.2.1

5.307.3 Member Data Documentation

5.307.3.1 MHASignal::waveform_t multibandcompressor::plugin_signals_t::plug_level [private]

5.307.3.2 MHASignal::waveform_t multibandcompressor::plugin_signals_t::gain [private]


5.307.3.3 mha_wave_t* multibandcompressor::plugin_signals_t::plug_output

The documentation for this class was generated from the following file:

multibandcompressor.cpp

5.308 nlms_t Class Reference

Inheritance diagram for nlms_t:

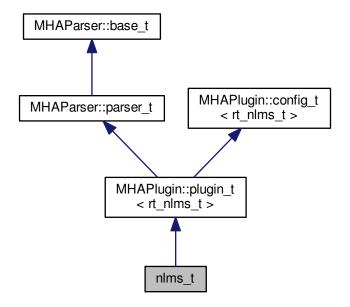

Public Member Functions

```
nlms_t (algo_comm_t, const char *, const char *)
void prepare (mhaconfig_t &)
void release ()
mha_wave_t * process (mha_wave_t *)
```

Private Member Functions

• void update ()

Private Attributes

```
MHAParser::float_t rho
MHAParser::int_t ntaps
MHAParser::string_t name_u
MHAParser::string_t name_d
MHAParser::kw_t normtype
MHAParser::kw_t estimtype
MHAParser::float_t lambda_smoothing_power
MHAParser::string_t name_e
MHAParser::string_t name_f
MHAParser::int_t n_no_update
std::string_algo
```

MHAEvents::patchbay_t< nlms_t > patchbay

Additional Inherited Members

Implements MHAPlugin::plugin_t < rt_nlms_t > (p. 685).


```
5.308.2.2 void nlms_t::release (
                    void ) [virtual]
Reimplemented from MHAPlugin::plugin_t< rt_nlms_t > (p. 686).
5.308.2.3 mha_wave_t * nlms_t::process (
                    mha_wave_t * s
5.308.2.4 void nlms_t::update() [private]
5.308.3 Member Data Documentation
5.308.3.1 MHAParser::float_t nlms_t::rho [private]
5.308.3.2 MHAParser::float_t nlms_t::c [private]
5.308.3.3 MHAParser::int t nlms_t::ntaps [private]
5.308.3.4 MHAParser::string_t nlms_t::name_u [private]
5.308.3.5 MHAParser::string_t nlms_t::name_d [private]
5.308.3.6 MHAParser::kw_t nlms_t::normtype [private]
5.308.3.7 MHAParser::kw_t nlms_t::estimtype [private]
5.308.3.8 MHAParser::float_t nlms_t::lambda_smoothing_power [private]
5.308.3.9 MHAParser::string_t nlms_t::name_e [private]
5.308.3.10 MHAParser::string_t nlms_t::name_f [private]
5.308.3.11 MHAParser::int_t nlms_t::n_no_update [private]
5.308.3.12 std::string nlms_t::algo [private]
5.308.3.13 MHAEvents::patchbay t<nlms t> nlms_t::patchbay [private]
```

The documentation for this class was generated from the following file:

nlms_wave.cpp

5.309 noise_t Class Reference

Inheritance diagram for noise_t:

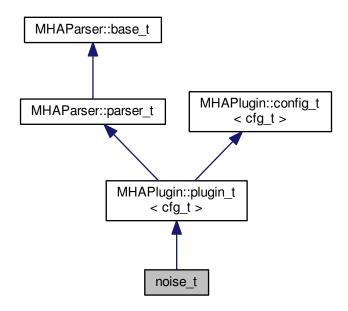

Public Member Functions

- noise_t (const algo_comm_t &, const std::string &, const std::string &)
- mha_wave_t * process (mha_wave_t *)
- mha_spec_t * process (mha_spec_t *)
- void prepare (mhaconfig_t &)
- void update_cfg ()

Private Attributes

- MHAParser::float_t lev
- MHAParser::kw_t mode
- MHAParser::float_t frozennoise_length
- MHAEvents::patchbay_t< noise_t > patchbay

Additional Inherited Members


```
5.309.1 Constructor & Destructor Documentation
5.309.1.1 noise_t::noise_t (
                     const algo_comm_t & iac,
                     const std::string &,
                     const std::string & )
5.309.2 Member Function Documentation
5.309.2.1 mha_wave_t * noise_t::process (
                     mha_wave_t * s )
5.309.2.2 mha_spec_t * noise_t::process (
                     mha\_spec\_t * s)
5.309.2.3 void noise_t::prepare (
                     mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin_t < cfg_t > (p. 685).
5.309.2.4 void noise_t::update_cfg()
5.309.3 Member Data Documentation
5.309.3.1 MHAParser::float_t noise_t::lev [private]
5.309.3.2 MHAParser::kw_t noise_t::mode [private]
5.309.3.3 MHAParser::float_t noise_t::frozennoise_length [private]
5.309.3.4 MHAEvents::patchbay_t<noise_t> noise_t::patchbay [private]
```

The documentation for this class was generated from the following file:

noise.cpp

5.310 noisePowProposedScale::interface_t Class Reference

Inheritance diagram for noisePowProposedScale::interface_t:

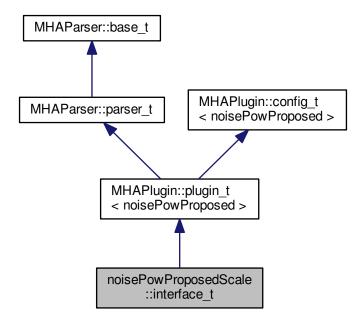

Public Member Functions

- interface_t (const algo_comm_t &, const std::string &, const std::string &)
- mha_spec_t * process (mha_spec_t *)
- void prepare (mhaconfig_t &)

Private Member Functions

void update_cfg ()

Private Attributes

- MHAParser::float_t alphaPH1mean
- MHAParser::float t alphaPSD
- MHAParser::float_t q
- MHAParser::float_t xiOptDb
- std::string name
- MHAEvents::patchbay_t< interface_t > patchbay

```
Additional Inherited Members
```

```
5.310.1 Constructor & Destructor Documentation
5.310.1.1 noisePowProposedScale::interface t:interface t(
                     const algo comm t & iac,
                     const std::string & ,
                     const std::string & iname )
5.310.2 Member Function Documentation
5.310.2.1 mha_spec_t * noisePowProposedScale::interface_t::process (
                     mha\_spec\_t * s)
5.310.2.2 void noisePowProposedScale::interface_t::prepare (
                     mhaconfig t&cf) [virtual]
Implements MHAPlugin::plugin_t< noisePowProposed > (p. 685).
5.310.2.3 void noisePowProposedScale::interface_t::update_cfg (
                     void ) [private]
5.310.3 Member Data Documentation
5.310.3.1 MHAParser::float_t noisePowProposedScale::interface_t::alphaPH1mean [private]
5.310.3.2 MHAParser::float t noisePowProposedScale::interface t::alphaPSD [private]
5.310.3.3 MHAParser::float_t noisePowProposedScale::interface_t::q [private]
5.310.3.4 MHAParser::float t noisePowProposedScale::interface_t::xiOptDb [private]
5.310.3.5 std::string noisePowProposedScale::interface_t::name [private]
5.310.3.6 MHAEvents::patchbay t<interface t> noisePowProposedScale::interface_t::patchbay
          [private]
```

The documentation for this class was generated from the following file:

noisePowProposedScale.cpp

5.311 noisePowProposedScale::noisePowProposed Class Reference

Public Member Functions

- noisePowProposed (const mhaconfig_t &cf, algo_comm_t ac, const std::string &name, float alphaPH1mean, float alphaPSD, float q, float xiOptDb)
- void process (mha_spec_t *noisyDftFrame)
- void **insert** ()

Private Attributes

- MHASignal::waveform_t noisyPer
- MHASignal::waveform t PH1mean
- MHA_AC::waveform_t noisePow
- MHA_AC::waveform_t inputPow
- MHA AC::waveform t snrPost1Debug
- MHA_AC::waveform_t GLRDebug
- MHA_AC::waveform_t PH1Debug
- MHA_AC::waveform_t estimateDebug
- MHA_AC::spectrum_t inputSpec
- float alphaPH1mean_
- float alphaPSD_
- float priorFact
- float xiOpt
- float logGLRFact
- float GLRexp
- int frameno

5.311.1 Constructor & Destructor Documentation

5.311.2 Member Function Documentation

```
5.311.2.1 void noisePowProposedScale::noisePowProposed::process ( mha_spec_t * noisyDftFrame )
```


5.311.2.2	void noisePowProposedScale::noisePowProposed::insert() [inline]
5.311.3 N	lember Data Documentation
5.311.3.1	MHASignal::waveform_t noisePowProposedScale::noisePowProposed::noisyPer [private]
5.311.3.2	MHASignal::waveform_t noisePowProposedScale::noisePowProposed::PH1mean [private]
5.311.3.3	<pre>MHA_AC::waveform_t noisePowProposedScale::noisePowProposed::noisePow [private]</pre>
5.311.3.4	<pre>MHA_AC::waveform_t noisePowProposedScale::noisePowProposed::inputPow [private]</pre>
5.311.3.5	$\begin{tabular}{ll} MHA_AC::waveform_t\ noisePowProposedScale::noisePowProposed::snrPost1Debug\ [private] \end{tabular}$
5.311.3.6	MHA_AC::waveform_t noisePowProposedScale::noisePowProposed::GLRDebug [private]
5.311.3.7	MHA_AC::waveform_t noisePowProposedScale::noisePowProposed::PH1Debug [private]
5.311.3.8	$\begin{tabular}{ll} MHA_AC::waveform_t\ noisePowProposedScale::noisePowProposed::estimateDebug \\ [private] \end{tabular}$
5.311.3.9	MHA_AC::spectrum_t noisePowProposedScale::noisePowProposed::inputSpec [private]
5.311.3.10	float noisePowProposedScale::noisePowProposed::alphaPH1mean_ [private]
5.311.3.11	float noisePowProposedScale::noisePowProposed::alphaPSD_ [private]
5.311.3.12	float noisePowProposedScale::noisePowProposed::priorFact [private]
5.311.3.13	float noisePowProposedScale::noisePowProposed::xiOpt [private]
5.311.3.14	float noisePowProposedScale::noisePowProposed::logGLRFact [private]
5.311.3.15	float noisePowProposedScale::noisePowProposed::GLRexp [private]
5.311.3.16	<pre>int noisePowProposedScale::noisePowProposed::frameno [private]</pre>

noisePowProposedScale.cpp

The documentation for this class was generated from the following file:

5.312 overlapadd::overlapadd_if_t Class Reference

Inheritance diagram for overlapadd::overlapadd_if_t:

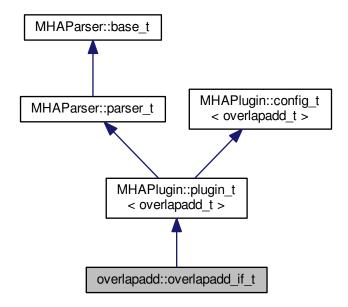

Public Member Functions

- overlapadd_if_t (const algo_comm_t &, const std::string &, const std::string &)
- ∼overlapadd_if_t ()
- void prepare (mhaconfig_t &)
- void release ()
- mha_wave_t * process (mha_wave_t *)

Private Member Functions

• void update ()

Private Attributes

- MHAEvents::patchbay_t< overlapadd_if_t > patchbay
- MHAParser::int_t nfft

FFT length to be used, zero-padding is FFT length-wndlength.

MHAParser::int_t nwnd

Window length to be used (overlap is 1-fragsize/wndlength)

```
    MHAParser::float_t wndpos
```

Relative position of zero padding (0 end, 0.5 center, 1 start)

- MHAParser::window_t window
- MHAParser::float_t wndexp
- MHAParser::window t zerowindow
- MHAParser::mhapluginloader_t plugloader
- MHAParser::float_mon_t prescale
- MHAParser::float mon t postscale
- std::string algo
- mhaconfig_t cf_in
- · mhaconfig t cf out

Additional Inherited Members

```
5.312.1 Constructor & Destructor Documentation
```

- 5.312.1.2 overlapadd::overlapadd_if_t::~overlapadd_if_t ()
- 5.312.2 Member Function Documentation

Implements MHAPlugin::plugin t < overlapadd t > (p. 685).

Reimplemented from MHAPlugin::plugin_t< overlapadd_t > (p. 686).

```
5.312.2.3 mha_wave_t * overlapadd::overlapadd_if_t::process ( mha_wave_t * wave_in )
```

- **5.312.2.4 void overlapadd::overlapadd_if_t::update()** [private]
- 5.312.3 Member Data Documentation
- **5.312.3.1 MHAEvents::patchbay_t**<overlapadd_if_t> overlapadd::overlapadd_if_t::patchbay [private]
- **5.312.3.2 MHAParser::int_t** overlapadd::overlapadd_if_t::nfft [private]

FFT length to be used, zero-padding is FFT length-wndlength.

```
5.312.3.3 MHAParser::int toverlapadd::overlapadd if t::nwnd [private]
Window length to be used (overlap is 1-fragsize/wndlength)
5.312.3.4 MHAParser::float toverlapadd::overlapadd_if_t::wndpos [private]
Relative position of zero padding (0 end, 0.5 center, 1 start)
5.312.3.5 MHAParser::window toverlapadd::overlapadd_if_t::window [private]
5.312.3.6 MHAParser::float toverlapadd::overlapadd_if_t::wndexp [private]
5.312.3.7 MHAParser::window t overlapadd::overlapadd_if_t::zerowindow [private]
5.312.3.8 MHAParser::mhapluginloader toverlapadd::overlapadd_if_t::plugloader [private]
5.312.3.9 MHAParser::float_mon_t overlapadd::overlapadd_if_t::prescale [private]
5.312.3.10 MHAParser::float_mon_t overlapadd::overlapadd_if_t::postscale [private]
5.312.3.11 std::string overlapadd::overlapadd_if_t::algo [private]
5.312.3.12 mhaconfig toverlapadd::overlapadd if t::cf in [private]
5.312.3.13 mhaconfig toverlapadd::overlapadd if t::cf out [private]
```

The documentation for this class was generated from the following file:

overlapadd.cpp

5.313 overlapadd::overlapadd t Class Reference

Public Member Functions

- overlapadd_t (mhaconfig_t spar_in, mhaconfig_t spar_out, float wexp, float wnd-pos, const MHAParser::window_t &window, const MHAParser::window_t &zerowindow, float &prescale_fac, float &postscale_fac)
- ∼overlapadd_t ()
- mha_spec_t * ola1 (mha_wave_t *)
- mha_wave_t * ola2 (mha_spec_t *)

Private Attributes

```
· mha fft t fft

    MHAWindow::base_t prewnd

    MHAWindow::base_t postwnd

    MHASignal::waveform t wave in1

    MHASignal::waveform_t wave_out1

    MHASignal::spectrum t spec in

    MHASignal::waveform_t calc_out

    MHASignal::waveform_t out_buf

    MHASignal::waveform_t write_buf

   • unsigned int n_zero
   unsigned int n_pad1
   unsigned int n_pad2
5.313.1 Constructor & Destructor Documentation
5.313.1.1 overlapadd::overlapadd_t::overlapadd_t (
                     mhaconfig t spar_in,
                     mhaconfig_t spar_out,
                     float wexp,
                     float wndpos,
                     const MHAParser::window_t & window,
                     const MHAParser::window t & zerowindow,
                     float & prescale_fac,
                     float & postscale_fac )
5.313.1.2 overlapadd::overlapadd_t::~overlapadd_t ( )
5.313.2 Member Function Documentation
5.313.2.1 mha spec t * overlapadd::overlapadd_t::ola1 (
                     mha_wave_t * s )
5.313.2.2 mha_wave_t * overlapadd::overlapadd_t::ola2 (
                     mha\_spec\_t * s)
5.313.3 Member Data Documentation
5.313.3.1 mha_fft_t overlapadd::overlapadd_t::fft [private]
5.313.3.2 MHAWindow::base_t overlapadd::overlapadd_t::prewnd [private]
```

5.313.3.3 MHAWindow::base_t overlapadd::overlapadd_t::postwnd [private]


```
5.313.3.4 MHASignal::waveform_t overlapadd::overlapadd_t::wave_in1 [private]
5.313.3.5 MHASignal::waveform_t overlapadd::overlapadd_t::wave_out1 [private]
5.313.3.6 MHASignal::spectrum_t overlapadd::overlapadd_t::spec_in [private]
5.313.3.7 MHASignal::waveform toverlapadd::overlapadd t::calc out [private]
5.313.3.8 MHASignal::waveform_t overlapadd::overlapadd_t::out_buf [private]
5.313.3.9 MHASignal::waveform_t overlapadd::overlapadd_t::write_buf [private]
5.313.3.10 unsigned int overlapadd::overlapadd_t::n_zero [private]
5.313.3.11 unsigned int overlapadd::overlapadd_t::n_pad1 [private]
5.313.3.12 unsigned int overlapadd::overlapadd_t::n_pad2 [private]
```

The documentation for this class was generated from the following file:

overlapadd.cpp

5.314 parser_int_dyn Class Reference

Inheritance diagram for parser_int_dyn:

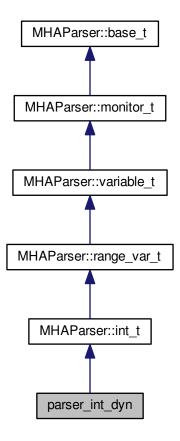

Public Member Functions

- parser_int_dyn (const std::string &help_text, const std::string &initial_value, const std
 ::string &range)
- void set_max_angle_ind (unsigned int max_ind)

Additional Inherited Members

5.314.1 Constructor & Destructor Documentation


5.314.2 Member Function Documentation

The documentation for this class was generated from the following file:

· steerbf.h

5.315 plug_t Class Reference

Inheritance diagram for plug t:

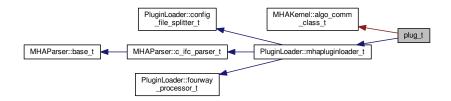

Public Member Functions

- plug_t (const std::string &libname, const std::string &chain, const std::string &algo)
- ~plug_t () throw ()
- MHAProc_wave2wave_t get_process_wave ()
- MHAProc_wave2spec_t get_process_spec ()
- void * get_handle ()
- algo_comm_t get_ac ()

Additional Inherited Members

5.315.1 Constructor & Destructor Documentation

5.315.2 Member Function Documentation


```
5.315.2.1 MHAProc_wave2wave_t plug_t::get_process_wave()
5.315.2.2 MHAProc_wave2spec_t plug_t::get_process_spec()
5.315.2.3 void * plug_t::get_handle()
5.315.2.4 algo_comm_t plug_t::get_ac() [inline]
```

The documentation for this class was generated from the following file:

· analysispath.cpp

5.316 plugin_interface_t Class Reference

Inheritance diagram for plugin_interface_t:

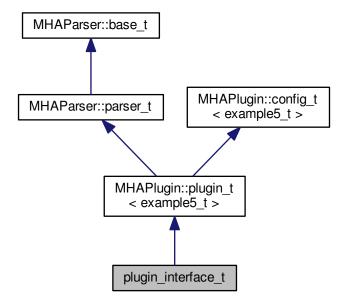

Public Member Functions

- plugin_interface_t (const algo_comm_t &, const std::string &, const std::string &)
- mha_spec_t * process (mha_spec_t *)
- void prepare (mhaconfig_t &)

Private Member Functions

• void update cfg ()

Private Attributes

```
    MHAParser::int_t scale_ch
    MHAParser::float_t factor
    MHAEvents::patchbay_t< plugin_interface_t > patchbay
```

Additional Inherited Members

```
5.316.1 Constructor & Destructor Documentation
5.316.1.1 plugin_interface_t::plugin_interface_t (
                      const algo comm t & iac,
                      const std::string & ,
                      const std::string & )
5.316.2 Member Function Documentation
5.316.2.1 mha_spec_t * plugin_interface_t::process (
                      mha spec t * spec )
5.316.2.2 void plugin_interface_t::prepare (
                      mhaconfig_t & tfcfg ) [virtual]
Implements MHAPlugin::plugin_t < example5_t > (p. 685).
5.316.2.3 void plugin_interface_t::update_cfg( ) [private]
5.316.3 Member Data Documentation
5.316.3.1 MHAParser::int_t plugin_interface_t::scale_ch [private]
5.316.3.2 MHAParser::float_t plugin_interface_t::factor [private]
5.316.3.3 MHAEvents::patchbay t<plugin interface t> plugin_interface_t::patchbay
          [private]
```

The documentation for this class was generated from the following file:

example5.cpp

5.317 pluginbrowser_t Class Reference

Public Member Functions

- pluginbrowser_t ()
- void get_paths ()
- plugindescription_t scan_plugin (const std::string &name)
- void add_plugins ()
- void clear_plugins ()
- void scan plugins ()
- void add_plugin (const std::string &name)
- std::list< plugindescription_t > get_plugins () const

Private Attributes

- std::string plugin_extension
- std::list< std::string > library_paths
- std::list< plugindescription_t > plugins
- std::map< std::string, pluginloader_t * > p

```
5.317.1 Constructor & Destructor Documentation
```

```
5.317.1.1 pluginbrowser_t::pluginbrowser_t ( )
```

- 5.317.2 Member Function Documentation
- 5.317.2.1 void pluginbrowser_t::get_paths ()
- 5.317.2.3 void pluginbrowser_t::add_plugins ()
- 5.317.2.4 void pluginbrowser_t::clear_plugins ()
- 5.317.2.5 void pluginbrowser_t::scan_plugins ()
- 5.317.2.7 std::list<plugindescription_t> pluginbrowser_t::get_plugins() const [inline]
- 5.317.3 Member Data Documentation

```
5.317.3.1 std::string pluginbrowser_t::plugin_extension [private]
5.317.3.2 std::list<std::string> pluginbrowser_t::library_paths [private]
5.317.3.3 std::list<plugindescription_t> pluginbrowser_t::plugins [private]
5.317.3.4 std::map<std::string,pluginloader t*> pluginbrowser_t::p [private]
```

The documentation for this class was generated from the following files:

- pluginbrowser.h
- pluginbrowser.cpp

5.318 plugindescription_t Class Reference

Public Attributes

- std::string name
- std::string fullname
- std::string documentation
- std::vector< std::string > categories
- bool wave2wave
- bool wave2spec
- bool spec2wave
- bool spec2spec
- std::vector< std::string > query_cmds
- std::map< std::string, std::string > queries

5.318.1	Member Data Documentation
5.318.1.1	std::string plugindescription_t::name
5.318.1.2	std::string plugindescription_t::fullname
5.318.1.3	std::string plugindescription_t::documentation
5.318.1.4	std::vector <std::string> plugindescription_t::categories</std::string>
5.318.1.5	bool plugindescription_t::wave2wave
5.318.1.6	bool plugindescription_t::wave2spec
5.318.1.7	bool plugindescription_t::spec2wave
5.318.1.8	bool plugindescription_t::spec2spec
5.318.1.9	std::vector <std::string> plugindescription_t::query_cmds</std::string>


5.318.1.10 std::map<std::string,std::string> plugindescription_t::queries

The documentation for this class was generated from the following file:

· pluginbrowser.h

5.319 PluginLoader::config_file_splitter_t Class Reference

Inheritance diagram for PluginLoader::config_file_splitter_t:

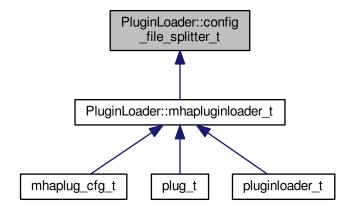

Public Member Functions

- config_file_splitter_t (const std::string &name)
- const std::string & get_configname () const
- const std::string & get_libname () const
- const std::string & get_origname () const
- const std::string & get_configfile () const

Private Attributes

- std::string libname
- std::string configname
- std::string origname
- std::string configfile

5.319.1 Constructor & Destructor Documentation

5.319.1.1 PluginLoader::config_file_splitter_t (const std::string & name)

5.319.2 Member Function Documentation

```
const std::string& PluginLoader::config file splitter t::get configname ( ) const
           [inline]
5.319.2.2
          const std::string& PluginLoader::config_file_splitter_t::get_libname( ) const [inline]
5.319.2.3
          const std::string& PluginLoader::config file splitter t::get origname( ) const [inline]
5.319.2.4
          const std::string& PluginLoader::config_file_splitter_t::get_configfile( ) const [inline]
5.319.3 Member Data Documentation
5.319.3.1
          std::string PluginLoader::config_file_splitter_t::libname [private]
5.319.3.2
          std::string PluginLoader::config file splitter t::configname [private]
5.319.3.3
          std::string PluginLoader::config_file_splitter_t::origname [private]
          std::string PluginLoader::config_file_splitter_t::configfile [private]
```


The documentation for this class was generated from the following files:

- · mhapluginloader.h
- mhapluginloader.cpp

5.320 PluginLoader::fourway_processor_t Class Reference

This abstract class defines the interface for classes that implement all types of signal domain processing supported by the MHA: wave2wave, spec2spec, wave2spec, and spec2wave.

Inheritance diagram for PluginLoader::fourway_processor_t:

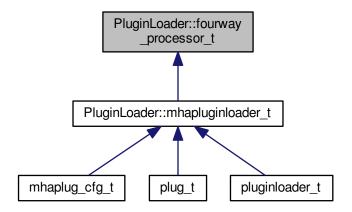

Public Member Functions

- virtual void process (mha_wave_t *s_in, mha_wave_t **s_out)=0
 Pure waveform processing.
- virtual void **process** (**mha_spec_t** *s_in, **mha_spec_t** **s_out)=0 *Pure spectrum processing.*
- virtual void **process** (**mha_wave_t** *s_in, **mha_spec_t** **s_out)=0

 Signal processing with domain transformation from waveform to spectrum.
- virtual void **process** (**mha_spec_t** *s_in, **mha_wave_t** **s_out)=0

 Signal processing with domain transformation from spectrum to waveform.
- virtual void prepare (mhaconfig_t &settings)=0
 Prepares the processor for signal processing.
- virtual void release ()=0

Resources allocated for signal processing in **fourway_processor_t::prepare** (p. 829) are released here in **fourway_processor_t::release** (p. 829).

- virtual std::string **parse** (const std::string &query)=0

 Parser interface.
- virtual ~fourway_processor_t ()

Classes with virtual methods need virtual destructor.

5.320.1 Detailed Description

This abstract class defines the interface for classes that implement all types of signal domain processing supported by the MHA: wave2wave, spec2spec, wave2spec, and spec2wave.

For supporting different output domains for the same input domain, the processing methods are overloaded with respect to input domain and output domain.

```
5.320.2 Constructor & Destructor Documentation
```

```
5.320.2.1 virtual PluginLoader::fourway_processor_t::∼fourway_processor_t( ) [inline], [virtual]
```

Classes with virtual methods need virtual destructor.

This destructor is empty.

5.320.3 Member Function Documentation

Pure waveform processing.

Parameters

s_in	input waveform signal
s_out	output waveform signal

Implemented in PluginLoader::mhapluginloader_t (p. 832).

Pure spectrum processing.

Parameters

s_in	input spectrum signal
s_out	output spectrum signal

Implemented in PluginLoader::mhapluginloader_t (p. 832).

Signal processing with domain transformation from waveform to spectrum.

Parameters

s_in	input waveform signal
s_out	output spectrum signal

Implemented in **PluginLoader::mhapluginloader_t** (p. 832).

Signal processing with domain transformation from spectrum to waveform.

Parameters

s_in	input spectrum signal
s_out	output waveform signal

Implemented in **PluginLoader::mhapluginloader_t** (p. 832).

Prepares the processor for signal processing.

Parameters

setting	domain and dimensions of the signal. The contents of settings may be modified
	by the prepare implementation. Upon calling fourway_processor_t::prepare
	(p. 829), settings reflects domain and dimensions of the input signal. When
	fourway_processor_t::prepare (p. 829) returns, settings reflects domain and
	dimensions of the output signal.

Implemented in **PluginLoader::mhapluginloader_t** (p. 832).

```
5.320.3.6 virtual void PluginLoader::fourway processor t::release() [pure virtual]
```

Resources allocated for signal processing in **fourway_processor_t::prepare** (p. 829) are released here in **fourway_processor_t::release** (p. 829).

Implemented in PluginLoader::mhapluginloader_t (p. 832).

Parser interface.


Implemented in PluginLoader::mhapluginloader_t (p. 832).

The documentation for this class was generated from the following file:

mhapluginloader.h

5.321 PluginLoader::mhapluginloader_t Class Reference

Inheritance diagram for PluginLoader::mhapluginloader_t:

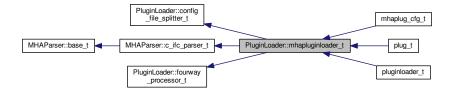

Public Member Functions

- std::string **parse** (const std::string &str)
- mhapluginloader_t (algo_comm_t iac, const std::string &libname, bool check_← version=true)

Loads and initializes mha plugin and establishes interface.

- ~mhapluginloader t () throw ()
- bool has process (mha domain t in, mha domain t out) const
- bool has parser () const
- mha_domain_t input_domain () const
- mha_domain_t output_domain () const
- void prepare (mhaconfig_t &)
- void release ()
- void process (mha_wave_t *, mha_wave_t **)
- void process (mha_spec_t *, mha_spec_t **)
- void process (mha_wave_t *, mha_spec_t **)
- void process (mha spec t *, mha wave t **)
- std::string getfullname () const
- std::string get_documentation () const
- std::vector< std::string > get_categories () const
- bool **is_prepared** () const

Protected Member Functions

- void test error ()
- void test_version ()
- void mha_test_struct_size (unsigned int s)
- void resolve and init ()

Protected Attributes

- int lib err
- · algo_comm_t ac
- · dynamiclib t lib handle
- void * lib_data
- MHAGetVersion t MHAGetVersion cb
- · MHAInit t MHAInit cb
- MHADestroy t MHADestroy cb
- MHAPrepare_t MHAPrepare_cb
- MHARelease t MHARelease cb
- MHAProc_wave2wave_t MHAProc_wave2wave_cb
- MHAProc_spec2spec_t MHAProc_spec2spec_cb
- MHAProc_wave2spec_t MHAProc_wave2spec_cb
- MHAProc_spec2wave_t MHAProc_spec2wave_cb
- MHASet_t MHASet_cb
- MHAStrError_t MHAStrError_cb

- mhaconfig_t cf_input
- mhaconfig_t cf_output
- std::string plugin_documentation
- std::vector< std::string > plugin_categories
- bool b_check_version
- bool b_is_prepared

Additional Inherited Members

5.321.1 Constructor & Destructor Documentation

Loads and initializes mha plugin and establishes interface.

Parameters

iac	AC space (algorithm communication variables)
libname	Either file name of MHA plugin without platform-specific extension (i.e. "identity" for "identity.so" or "identity.dll") to be found on the MHA_LIBRARY_PATH (which is an environment variable). Or the same file name without extension followed by a colon ":" followed by the "configuration name" of the MHA plugin, which may be used to differentiate between multiple identical MHA plugins or to give the plugin a self-documenting name that fits its purpose. The library name - configuration name expression can be followed by a "<" followed by a configuration file name, which will be read after initialization of the plugin.

Example: "overlapadd:agc<compression.cfg" will load the plugin "overlapadd.so" or "overlapadd.dll", insert it as the configuration node "agc", and reads the configuration file "compression.cfg" into that node.

Parameters

check_version	Pluginloader will not check that the plugin was built using a known
	compatible MHA version if this flag is set to false. Disabling version check
	is discouraged.

5.321.1.2 PluginLoader::mhapluginloader_t::~mhapluginloader_t () throw)

5.321.2 Member Function Documentation

```
5.321.2.1 std::string PluginLoader::mhapluginloader t::parse (
                     const std::string & str ) [inline], [virtual]
Implements PluginLoader::fourway processor t (p. 829).
5.321.2.2 bool PluginLoader::mhapluginloader t::has process (
                     mha_domain_t in,
                     mha domain t out ) const
5.321.2.3 bool PluginLoader::mhapluginloader_t::has_parser ( ) const
5.321.2.4 mha domain t PluginLoader::mhapluginloader_t::input_domain ( ) const
5.321.2.5 mha_domain_t PluginLoader::mhapluginloader_t::output_domain ( ) const
5.321.2.6 void PluginLoader::mhapluginloader_t::prepare (
                     mhaconfig_t & tf ) [virtual]
Implements PluginLoader::fourway processor t (p. 829).
5.321.2.7 void PluginLoader::mhapluginloader t::release() [virtual]
Implements PluginLoader::fourway processor t (p. 829).
5.321.2.8 void PluginLoader::mhapluginloader_t::process (
                     mha wave t * s_in,
                     mha_wave_t ** s_out ) [virtual]
Implements PluginLoader::fourway_processor_t (p. 827).
5.321.2.9 void PluginLoader::mhapluginloader_t::process (
                     mha spec t * s_in,
                     mha_spec_t ** s_out ) [virtual]
Implements PluginLoader::fourway processor t (p. 828).
5.321.2.10 void PluginLoader::mhapluginloader t::process (
                      mha wave t * s_in,
                      mha_spec_t ** s_out ) [virtual]
Implements PluginLoader::fourway processor t (p. 828).
5.321.2.11 void PluginLoader::mhapluginloader t::process (
                      mha_spec_t * s_in,
                      mha_wave_t ** s_out ) [virtual]
Implements PluginLoader::fourway_processor_t (p. 828).
```

```
5.321.2.12 std::string PluginLoader::mhapluginloader_t::getfullname() const [inline]
5.321.2.13 std::string PluginLoader::mhapluginloader_t::get_documentation() const [inline]
5.321.2.14 std::vector<std::string> PluginLoader::mhapluginloader t::get categories ( ) const
           [inline]
5.321.2.15 bool PluginLoader::mhapluginloader_t::is_prepared( ) const [inline]
5.321.2.16 void PluginLoader::mhapluginloader_t::test_error() [protected]
5.321.2.17 void PluginLoader::mhapluginloader_t::test_version() [protected]
5.321.2.18 void PluginLoader::mhapluginloader_t::mha_test_struct_size (
                      unsigned int s ) [protected]
5.321.2.19 void PluginLoader::mhapluginloader_t::resolve_and_init() [protected]
5.321.3 Member Data Documentation
         int PluginLoader::mhapluginloader_t::lib_err [protected]
5.321.3.1
5.321.3.2 algo_comm_t PluginLoader::mhapluginloader_t::ac [protected]
5.321.3.3 dynamiclib_t PluginLoader::mhapluginloader_t::lib_handle [protected]
5.321.3.4 void* PluginLoader::mhapluginloader_t::lib_data [protected]
5.321.3.5 MHAGetVersion_t PluginLoader::mhapluginloader_t::MHAGetVersion_cb
         [protected]
5.321.3.6 MHAInit_t PluginLoader::mhapluginloader_t::MHAInit_cb [protected]
5.321.3.7 MHADestroy_t PluginLoader::mhapluginloader_t::MHADestroy_cb [protected]
5.321.3.8 MHAPrepare t PluginLoader::mhapluginloader_t::MHAPrepare_cb [protected]
5.321.3.9 MHARelease_t PluginLoader::mhapluginloader_t::MHARelease_cb [protected]
5.321.3.10 MHAProc wave2wave t PluginLoader::mhapluginloader_t::MHAProc_wave2wave_cb
           [protected]
5.321.3.11
          MHAProc spec2spec t PluginLoader::mhapluginloader_t::MHAProc_spec2spec_cb
           [protected]
```

5.321.3.12	MHAProc_wave2spec_t PluginLoader::mhapluginloader_t::MHAProc_wave2spec_cb [protected]
5.321.3.13	MHAProc_spec2wave_t PluginLoader::mhapluginloader_t::MHAProc_spec2wave_cb [protected]
5.321.3.14	MHASet_t PluginLoader::mhapluginloader_t::MHASet_cb [protected]
5.321.3.15	MHAStrError_t PluginLoader::mhapluginloader_t::MHAStrError_cb [protected]
5.321.3.16	<pre>mhaconfig_t PluginLoader::mhapluginloader_t::cf_input [protected]</pre>
5.321.3.17	<pre>mhaconfig_t PluginLoader::mhapluginloader_t::cf_output [protected]</pre>
5.321.3.18	std::string PluginLoader::mhapluginloader_t::plugin_documentation [protected]
5.321.3.19	<pre>std::vector<std::string> PluginLoader::mhapluginloader_t::plugin_categories [protected]</std::string></pre>
5.321.3.20	bool PluginLoader::mhapluginloader_t::b_check_version [protected]


bool PluginLoader::mhapluginloader_t::b_is_prepared [protected]

The documentation for this class was generated from the following files:

- · mhapluginloader.h
- mhapluginloader.cpp

5.322 pluginloader_t Class Reference

Inheritance diagram for pluginloader_t:

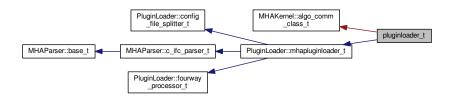

Public Member Functions

- pluginloader_t (const std::string &name)
- ∼pluginloader_t () throw ()

Additional Inherited Members

5.322.1 Constructor & Destructor Documentation


5.322.1.2 pluginloader_t::~pluginloader_t () throw)

The documentation for this class was generated from the following files:

- · pluginbrowser.h
- · pluginbrowser.cpp

5.323 prediction_error Class Reference

Inheritance diagram for prediction_error:

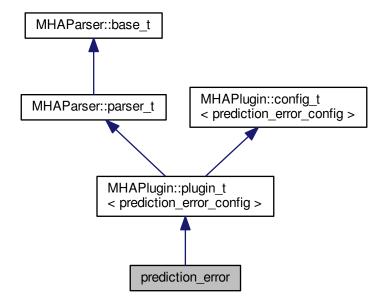

Public Member Functions

prediction_error (algo_comm_t &ac, const std::string &chain_name, const std::string &algo_name)

Constructs our plugin.

- ~prediction_error ()
- mha_wave_t * process (mha_wave_t *)

Checks for the most recent configuration and defers processing to it.

void prepare (mhaconfig t &)

Plugin preparation.

• void release (void)

Public Attributes

```
    MHAParser::float t rho
```

· MHAParser::float t c

MHAParser::int_t ntaps

MHAParser::vfloat t gains

• MHAParser::string t name e

MHAParser::string_t name_f

MHAParser::string_t name_lpc

MHAParser::int t lpc order

MHAParser::vint_t pred_err_delay

MHAParser::vint_t delay_w

MHAParser::vint_t delay_d

MHAParser::int_t n_no_update

Private Member Functions

void update cfg ()

Private Attributes

MHAEvents::patchbay_t< prediction_error > patchbay

Additional Inherited Members

```
5.323.1 Constructor & Destructor Documentation
```

Constructs our plugin.

```
5.323.1.2 prediction_error::~prediction_error()
5.323.2 Member Function Documentation
5.323.2.1 mha_wave_t * prediction_error::process (
                      mha_wave_t * signal )
Checks for the most recent configuration and defers processing to it.
5.323.2.2 void prediction_error::prepare (
                      mhaconfig_t & signal_info ) [virtual]
Plugin preparation.
An opportunity to validate configuration parameters before instantiating a configuration.
Parameters
 signal info
              Structure containing a description of the form of the signal (domain, number of
              channels, frames per block, sampling rate.
Implements MHAPlugin::plugin_t< prediction_error_config > (p. 685).
5.323.2.3 void prediction_error::release (
                      void ) [inline],[virtual]
Reimplemented from MHAPlugin::plugin_t< prediction_error_config > (p. 686).
        void prediction_error::update_cfg( ) [private]
5.323.2.4
5.323.3 Member Data Documentation
5.323.3.1 MHAParser::float_t prediction_error::rho
5.323.3.2 MHAParser::float_t prediction_error::c
5.323.3.3 MHAParser::int_t prediction_error::ntaps
5.323.3.4 MHAParser::vfloat_t prediction_error::gains
```

5.323.3.5 MHAParser::string_t prediction_error::name_e

5.323.3.6 MHAParser::string_t prediction_error::name_f

```
5.323.3.7 MHAParser::string_t prediction_error::name_lpc
5.323.3.8 MHAParser::int_t prediction_error::lpc_order
5.323.3.9 MHAParser::vint_t prediction_error::pred_err_delay
5.323.3.10 MHAParser::vint_t prediction_error::delay_w
5.323.3.11 MHAParser::vint_t prediction_error::delay_d
5.323.3.12 MHAParser::int_t prediction_error::n_no_update
5.323.3.13 MHAEvents::patchbay_tprediction_error::patchbay_private
```

The documentation for this class was generated from the following files:

- · prediction_error.h
- prediction_error.cpp

5.324 prediction_error_config Class Reference

Public Member Functions

- prediction_error_config (algo_comm_t &ac, const mhaconfig_t in_cfg, prediction
 —error *pred_err)
- $\bullet \ \, \sim\! prediction_error_config \ ()$
- mha_wave_t * process (mha_wave_t *s_Y, mha_real_t rho, mha_real_t c)
- void insert ()

Private Attributes

- · algo_comm_t ac
- unsigned int ntaps
- · unsigned int frames
- unsigned int channels
- MHA AC::waveform ts E
- MHA_AC::waveform_t F
- MHASignal::waveform_t Pu

Power of input signal delayline.

- std::string name_d_
- std::string name_lpc_
- int n_no_update_
- int no iter

- int iter
- MHASignal::waveform_t v_G
- MHASignal::waveform_t s_U
- MHASignal::delay_t s_E_pred_err_delay
- MHASignal::delay_t s_W
- MHASignal::ringbuffer_t s_Wflt
- MHASignal::delay_t s_U_delay
- MHASignal::ringbuffer_t s_U_delayflt
- MHASignal::waveform_t F_Uflt
- MHASignal::delay_t s_Y_delay
- MHASignal::ringbuffer_t s_Y_delayflt
- MHASignal::ringbuffer_t UbufferPrew
- mha wave ts LPC
- mha_wave_t UPrew
- mha_wave_t YPrew
- mha_wave_t EPrew
- mha_wave_t UPrewW
- mha_wave_t smpl
- mha_wave_t * s_Usmpl
- 5.324.1 Constructor & Destructor Documentation
- 5.324.1.2 prediction_error_config::~prediction_error_config()
- 5.324.2 Member Function Documentation
- 5.324.2.2 void prediction_error_config::insert ()
- 5.324.3 Member Data Documentation
- **5.324.3.1 algo_comm_t** prediction_error_config::ac [private]
- **5.324.3.2 unsigned int prediction_error_config::ntaps** [private]

```
5.324.3.3
         unsigned int prediction_error_config::frames [private]
5.324.3.4
         unsigned int prediction_error_config::channels [private]
5.324.3.5 MHA_AC::waveform_t prediction_error_config::s_E [private]
5.324.3.6
         MHA_AC::waveform_t prediction_error_config::F [private]
5.324.3.7 MHASignal::waveform_t prediction_error_config::Pu [private]
Power of input signal delayline.
5.324.3.8 std::string prediction_error_config::name_d_ [private]
5.324.3.9 std::string prediction_error_config::name_lpc_ [private]
5.324.3.10 int prediction_error_config::n_no_update_ [private]
5.324.3.11 int prediction_error_config::no_iter [private]
5.324.3.12 int prediction_error_config::iter [private]
5.324.3.13
          MHASignal::waveform_t prediction_error_config::v_G [private]
5.324.3.14 MHASignal::waveform t prediction_error_config::s_U [private]
5.324.3.15 MHASignal::delay_t prediction_error_config::s_E_pred_err_delay [private]
5.324.3.16 MHASignal::delay_t prediction_error_config::s_W [private]
5.324.3.17
          MHASignal::ringbuffer_t prediction_error_config::s_Wflt [private]
5.324.3.18
          MHASignal::delay t prediction_error_config::s_U_delay [private]
5.324.3.19 MHASignal::ringbuffer_t prediction_error_config::s_U_delayflt [private]
5.324.3.20
          MHASignal::waveform_t prediction_error_config::F_Uflt [private]
5.324.3.21
          MHASignal::delay_t prediction_error_config::s_Y_delay [private]
          MHASignal::ringbuffer_t prediction_error_config::s_Y_delayflt [private]
5.324.3.22
5.324.3.23 MHASignal::ringbuffer_t prediction_error_config::UbufferPrew [private]
```


```
5.324.3.24 mha_wave_t prediction_error_config::s_LPC [private]
5.324.3.25 mha_wave_t prediction_error_config::UPrew [private]
5.324.3.26 mha_wave_t prediction_error_config::YPrew [private]
5.324.3.27 mha_wave_t prediction_error_config::EPrew [private]
5.324.3.28 mha_wave_t prediction_error_config::UPrewW [private]
5.324.3.29 mha_wave_t prediction_error_config::smpl [private]
5.324.3.30 mha_wave_t* prediction_error_config::s_Usmpl [private]
```

The documentation for this class was generated from the following files:

- · prediction_error.h
- prediction_error.cpp

5.325 rmslevel_if_t Class Reference

Inheritance diagram for rmslevel_if_t:

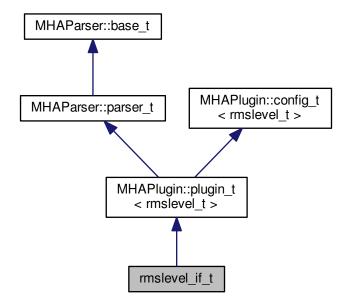

Public Member Functions

```
    rmslevel_if_t (const algo_comm_t &, const std::string &, const std::string &)
    mha_spec_t * process (mha_spec_t *)
    mha_wave_t * process (mha_wave_t *)
    void prepare (mhaconfig_t &)
```

Private Attributes

std::string name

```
Additional Inherited Members
```

```
5.325.1 Constructor & Destructor Documentation
```

5.325.2 Member Function Documentation

```
5.325.2.1 mha_spec_t * rmslevel_if_t::process ( mha_spec_t * s )
```

```
5.325.2.2 mha_wave_t * rmslevel_if_t::process ( mha_wave_t * s )
```

Implements MHAPlugin::plugin_t < rmslevel_t > (p. 685).

5.325.3 Member Data Documentation

```
5.325.3.1 std::string rmslevel_if_t::name [private]
```

The documentation for this class was generated from the following file:

rmslevel.cpp

5.326 rmslevel t Class Reference

Public Member Functions

```
    rmslevel_t (unsigned int nch, algo_comm_t ac, std::string name, MHAParser::parser
        _t &p, unsigned int fftlen_)
```

- mha_spec_t * process (mha_spec_t *)
- mha_wave_t * process (mha_wave_t *)
- void insert ()

Private Attributes

- mon_t level_db
- · mon_t peak_db
- mon_t level
- mon_t peak
- · unsigned int fftlen

```
5.326.1 Constructor & Destructor Documentation
```

5.326.2 Member Function Documentation

```
5.326.2.2 mha_wave_t * rmslevel_t::process ( mha_wave_t * s )
```

```
5.326.2.3 void rmslevel_t::insert ( )
```

5.326.3 Member Data Documentation

```
5.326.3.1 mon_t rmslevel_t::level_db [private]
```

5.326.3.2 mon_t rmslevel_t::peak_db [private]

5.326.3.3 mon_t rmslevel_t::level [private]

5.326.3.4 mon_t rmslevel_t::peak [private]


5.326.3.5 unsigned int rmslevel_t::fftlen [private]

The documentation for this class was generated from the following file:

rmslevel.cpp

5.327 route::interface_t Class Reference

Inheritance diagram for route::interface_t:

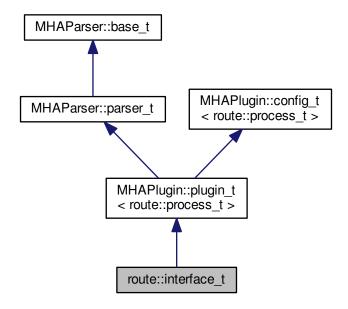

Public Member Functions

- interface_t (algo_comm_t iac, const std::string &, const std::string &)
- void prepare (mhaconfig_t &)
- void release ()
- mha_wave_t * process (mha_wave_t *)
- mha_spec_t * process (mha_spec_t *)

Private Member Functions

• void update ()

Private Attributes

- MHAEvents::patchbay_t< route::interface_t > patchbay
- MHAParser::vstring_t route_out
- MHAParser::vstring_t route_ac
- · mhaconfig_t cfin
- mhaconfig_t cfout
- mhaconfig_t cfac
- bool prepared
- · bool stopped
- std::string algo

```
Additional Inherited Members
5.327.1 Constructor & Destructor Documentation
5.327.1.1 route::interface_t::interface_t (
                      algo_comm_t iac,
                      const std::string & ,
                      const std::string & ialg )
5.327.2 Member Function Documentation
5.327.2.1 void route::interface_t::prepare (
                      mhaconfig_t & cf ) [virtual]
Implements MHAPlugin::plugin t < route::process t > (p. 685).
5.327.2.2 void route::interface_t::release (
                      void ) [virtual]
Reimplemented from MHAPlugin::plugin_t< route::process_t > (p. 686).
5.327.2.3 mha_wave_t * route::interface_t::process (
                      mha_wave_t * s )
5.327.2.4 mha spec t * route::interface t::process (
                      mha\_spec\_t * s)
5.327.2.5 void route::interface_t::update() [private]
5.327.3 Member Data Documentation
5.327.3.1 MHAEvents::patchbay_t<route::interface_t> route::interface_t::patchbay
          [private]
5.327.3.2 MHAParser::vstring t route::interface_t::route_out [private]
5.327.3.3 MHAParser::vstring_t route::interface_t::route_ac [private]
5.327.3.4 mhaconfig t route::interface_t::cfin [private]
5.327.3.5 mhaconfig_t route::interface_t::cfout [private]
5.327.3.6 mhaconfig_t route::interface_t::cfac [private]
5.327.3.7 bool route::interface t::prepared [private]
5.327.3.8 bool route::interface_t::stopped [private]
```

The documentation for this class was generated from the following file:

5.327.3.9 std::string route::interface_t::algo [private]

route.cpp

5.328 route::process_t Class Reference

Public Member Functions

- process_t (algo_comm_t iac, const std::string acname, const std::vector< std::string > &r_out, const std::vector< std::string > &r_ac, const mhaconfig_t &cf_in, const mhaconfig_t &cf_out, const mhaconfig_t &cf_ac, bool sync)
- mha_wave_t * process (mha_wave_t *)
- mha_spec_t * process (mha_spec_t *)

Private Attributes

- MHAMultiSrc::waveform_t wout
- MHAMultiSrc::spectrum_t sout
- MHAMultiSrc::waveform_t wout_ac
- MHAMultiSrc::spectrum t sout ac

5.328.1 Constructor & Destructor Documentation

```
5.328.1.1 route::process_t::process_t ( algo\_comm\_t \ iac, \\ const \ std::string \ acname, \\ const \ std::vector < std::string > \& \ r\_out, \\ const \ std::vector < std::string > \& \ r\_ac, \\ const \ mhaconfig\_t \& \ cf\_in, \\ const \ mhaconfig\_t \& \ cf\_out, \\ const \ mhaconfig\_t \& \ cf\_ac, \\ bool \ sync \ )
```

5.328.2 Member Function Documentation

```
5.328.2.1 mha_wave_t * route::process_t::process ( mha_wave_t * s )
```

5.328.3 Member Data Documentation

```
5.328.3.1 MHAMultiSrc::waveform_t route::process_t::wout [private]
```

5.328.3.2 MHAMultiSrc::spectrum_t route::process_t::sout [private]

5.328.3.3 MHAMultiSrc::waveform t route::process_t::wout_ac [private]

5.328.3.4 MHAMultiSrc::spectrum_t route::process_t::sout_ac [private]

The documentation for this class was generated from the following file:

route.cpp

5.329 rt nlms t Class Reference

Public Member Functions

- rt_nlms_t (algo_comm_t iac, const std::string &name, const mhaconfig_t &cfg, unsigned int ntaps_, const std::string &name_u, const std::string &name_d, const std::string &name_e, const std::string &name_f, const int n_no_update)
- ~rt_nlms_t ()
- mha_wave_t * process (mha_wave_t *sUD, mha_real_t rho, mha_real_t c, unsigned int norm_type, unsigned int estim_type, mha_real_t lambda_smooth)
- void **insert** ()

Private Attributes

- algo_comm_t ac
- unsigned int ntaps
- · unsigned int frames
- unsigned int channels
- MHA_AC::waveform_t F
- MHASignal::waveform_t U

Input signal cache.

MHASignal::waveform_t Uflt

Input signal cache (second filter)

MHASignal::waveform t Pu

Power of input signal delayline.

MHASignal::waveform_t fu

Filtered input signal.

MHASignal::waveform_t fuflt

Filtered input signal.

- MHASignal::waveform_t fu_previous
- MHASignal::waveform_t y_previous
- MHASignal::waveform_t P_Sum
- std::string name_u_
- std::string name d
- std::string name_e_
- int n_no_update_
- int no iter
- mha_wave_t s_E

```
5.329.1 Constructor & Destructor Documentation
5.329.1.1 rt_nlms_t::rt_nlms_t (
                      algo comm t iac,
                      const std::string & name,
                      const mhaconfig t & cfg,
                      unsigned int ntaps_,
                      const std::string & name u,
                      const std::string & name_d,
                      const std::string & name_e,
                      const std::string & name_f,
                      const int n_no_update )
5.329.1.2 rt_nlms_t::~rt_nlms_t( ) [inline]
5.329.2 Member Function Documentation
5.329.2.1 mha_wave_t * rt_nlms_t::process (
                      mha wave t * sUD,
                      mha real t rho,
                      mha_real_t c,
                      unsigned int norm_type,
                      unsigned int estim_type,
                      mha real t lambda_smooth )
5.329.2.2 void rt nlms t::insert ( )
5.329.3 Member Data Documentation
5.329.3.1
          algo_comm_t rt_nlms_t::ac [private]
5.329.3.2
         unsigned int rt_nlms_t::ntaps [private]
5.329.3.3 unsigned int rt_nlms_t::frames [private]
5.329.3.4 unsigned int rt nlms t::channels [private]
5.329.3.5 MHA AC::waveform trt_nlms_t::F [private]
5.329.3.6 MHASignal::waveform_t rt_nlms_t::U [private]
Input signal cache.
5.329.3.7 MHASignal::waveform_t rt_nlms_t::Uflt [private]
Input signal cache (second filter)
```

```
5.329.3.8 MHASignal::waveform_t rt_nlms_t::Pu [private]
Power of input signal delayline.
5.329.3.9 MHASignal::waveform_t rt_nlms_t::fu [private]
Filtered input signal.
5.329.3.10 MHASignal::waveform_t rt_nlms_t::fuflt [private]
Filtered input signal.
5.329.3.11 MHASignal::waveform_t rt_nlms_t::fu_previous [private]
5.329.3.12 MHASignal::waveform_t rt_nlms_t::y_previous [private]
5.329.3.13 MHASignal::waveform_t rt_nlms_t::P_Sum [private]
5.329.3.14 std::string rt_nlms_t::name_u_ [private]
5.329.3.15 std::string rt_nlms_t::name_d_ [private]
5.329.3.16 std::string rt_nlms_t::name_e_ [private]
5.329.3.17 int rt_nlms_t::n_no_update_ [private]
5.329.3.18 int rt_nlms_t::no_iter [private]
```

The documentation for this class was generated from the following file:

5.329.3.19 mha_wave_t rt_nlms_t::s_E [private]

nlms_wave.cpp

5.330 RunOnce Struct Reference

Public Member Functions

template<typename T, typename... Args>
 RunOnce (T &&f, Args...args)


5.330.1 Constructor & Destructor Documentation

The documentation for this struct was generated from the following file:

· ac2lsl.cpp

5.331 save_spec_t Class Reference

Inheritance diagram for save_spec_t:

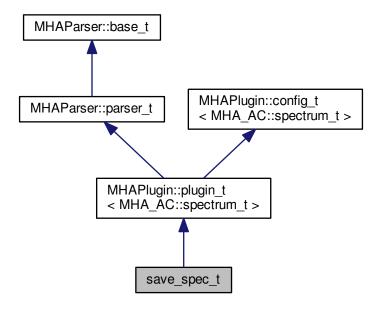

Public Member Functions

- save_spec_t (const algo_comm_t &iac, const std::string &ith, const std::string &ial)
- mha_spec_t * process (mha_spec_t *s)
- void prepare (mhaconfig_t &tf)

Private Attributes

std::string basename

Additional Inherited Members

```
5.331.1 Constructor & Destructor Documentation
```

5.331.2 Member Function Documentation

Implements MHAPlugin::plugin_t< MHA_AC::spectrum_t > (p. 685).

5.331.3 Member Data Documentation


5.331.3.1 std::string save_spec_t::basename [private]

The documentation for this class was generated from the following file:

save_spec.cpp

5.332 save_wave_t Class Reference

Inheritance diagram for save_wave_t:

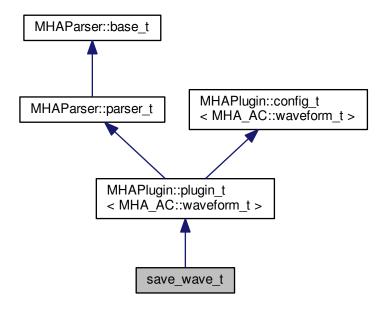

Public Member Functions

- save_wave_t (const algo_comm_t &iac, const std::string &ith, const std::string &ial)
- mha_wave_t * process (mha_wave_t *s)
- void prepare (mhaconfig_t &tf)

Private Attributes

std::string basename

Additional Inherited Members

5.332.1 Constructor & Destructor Documentation

```
5.332.2 Member Function Documentation
```

Implements MHAPlugin::plugin_t< MHA_AC::waveform_t > (p. 685).

5.332.3 Member Data Documentation

```
5.332.3.1 std::string save_wave_t::basename [private]
```

The documentation for this class was generated from the following file:

save_wave.cpp

5.333 shadowfilter_begin::cfg_t Class Reference

Public Member Functions

- cfg_t (int nfft, int inch, int outch, algo_comm_t ac, std::string name)
- mha_spec_t * process (mha_spec_t *)

Private Attributes

- MHA_AC::spectrum_t in_spec_copy
- MHASignal::spectrum_t out_spec
- · MHA AC::int t nch
- MHA_AC::int_t ntracks

```
5.333.1 Constructor & Destructor Documentation
```

```
5.333.1.1 cfg_t::cfg_t (
                      int nfft,
                     int inch.
                      int outch,
                      algo comm t ac,
                      std::string name )
5.333.2 Member Function Documentation
5.333.2.1 mha_spec_t * cfg_t::process (
                      mha_spec_t * s )
5.333.3 Member Data Documentation
5.333.3.1 MHA_AC::spectrum_t shadowfilter_begin::cfg_t::in_spec_copy [private]
5.333.3.2 MHASignal::spectrum_t shadowfilter_begin::cfg_t::out_spec [private]
5.333.3.3 MHA_AC::int_t shadowfilter_begin::cfg_t::nch [private]
```


The documentation for this class was generated from the following file:

5.333.3.4 MHA_AC::int_t shadowfilter_begin::cfg_t::ntracks [private]

shadowfilter_begin.cpp

5.334 shadowfilter_begin::shadowfilter_begin_t Class Reference

Inheritance diagram for shadowfilter_begin::shadowfilter_begin_t:

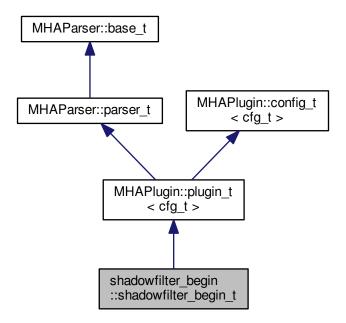

Public Member Functions

- shadowfilter_begin_t (const algo_comm_t &, const std::string &, const std::string &)
- mha_spec_t * process (mha_spec_t *)
- void prepare (mhaconfig_t &)

Private Attributes

- std::string basename
- MHAParser::int_t nch
- MHAParser::int_t ntracks

Additional Inherited Members

5.334.1 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

shadowfilter_begin.cpp

5.335 shadowfilter_end::cfg_t Class Reference

Public Member Functions

- cfg_t (int nfft_, algo_comm_t ac_, std::string name_)
- mha_spec_t * process (mha_spec_t *)

Private Attributes

- algo comm t ac
- std::string name
- int **nfft**
- int ntracks
- int nch_out
- mha_spec_t in_spec
- MHASignal::spectrum_t out_spec
- MHA_AC::spectrum_t gains

```
5.335.1 Constructor & Destructor Documentation
```

5.335.2 Member Function Documentation

```
5.335.2.1 mha_spec_t * cfg_t::process (
mha_spec_t * s )
```

5.335.3 Member Data Documentation

```
5.335.3.1 algo_comm_t shadowfilter_end::cfg_t::ac [private]
```

5.335.3.2 std::string shadowfilter_end::cfg_t::name [private]

5.335.3.3 int shadowfilter_end::cfg_t::nfft [private]

5.335.3.4 int shadowfilter_end::cfg_t::ntracks [private]

5.335.3.5 int shadowfilter_end::cfg_t::nch_out [private]

5.335.3.6 mha_spec_t shadowfilter_end::cfg_t::in_spec [private]

5.335.3.7 MHASignal::spectrum t shadowfilter_end::cfg_t::out_spec [private]


5.335.3.8 MHA_AC::spectrum_t shadowfilter_end::cfg_t::gains [private]

The documentation for this class was generated from the following file:

shadowfilter_end.cpp

5.336 shadowfilter_end::shadowfilter_end_t Class Reference

Inheritance diagram for shadowfilter_end::shadowfilter_end_t:

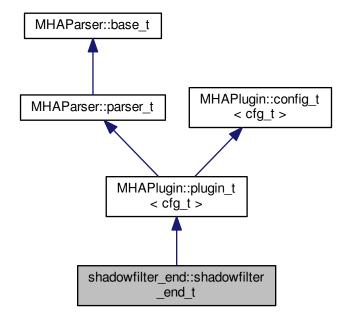

Public Member Functions

- shadowfilter_end_t (const algo_comm_t &, const std::string &, const std::string &)
- mha_spec_t * process (mha_spec_t *)
- void prepare (mhaconfig_t &)

Private Attributes

MHAParser::string_t basename

Additional Inherited Members

5.336.1 Constructor & Destructor Documentation

```
5.336.2 Member Function Documentation
```

Implements MHAPlugin::plugin_t< cfg_t > (p. 685).

5.336.3 Member Data Documentation

5.336.3.1 MHAParser::string_t shadowfilter_end::shadowfilter_end_t::basename [private]

The documentation for this class was generated from the following file:

shadowfilter_end.cpp

5.337 sine_cfg_t Struct Reference

Public Member Functions

• sine_cfg_t (double sampling_rate, mha_real_t frequency, mha_real_t newlev, int _mix, const std::vector< int > &_channels)

Public Attributes

- double phase_increment_div_2pi
- double amplitude
- int mix
- const std::vector< int > channels

5.337.1 Constructor & Destructor Documentation

5.337.2 Member Data Documentation


- 5.337.2.1 double sine_cfg_t::phase_increment_div_2pi
- 5.337.2.2 double sine_cfg_t::amplitude
- 5.337.2.3 int sine_cfg_t::mix
- 5.337.2.4 const std::vector<int> sine_cfg_t::channels

The documentation for this struct was generated from the following file:

sine.cpp

5.338 sine_t Class Reference

Inheritance diagram for sine_t:

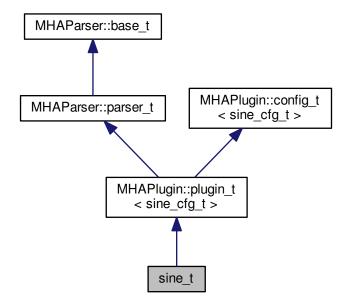

Public Member Functions

```
    sine_t (const algo_comm_t &, const std::string &chain_name, const std::string &algo
        —name)
```

- ~sine_t ()
- mha_wave_t * process (mha_wave_t *)
- void prepare (mhaconfig_t &)

Private Member Functions

void update_cfg ()

Private Attributes

- MHAParser::float_t lev
- MHAParser::float_t frequency
- MHAParser::kw_t mode
- MHAParser::vint_t channels
- double phase_div_2pi
- MHAEvents::patchbay_t< sine_t > patchbay

Additional Inherited Members

```
5.338.1 Constructor & Destructor Documentation
```

Implements MHAPlugin::plugin_t < $sine_cfg_t > (p. 685)$.


```
5.338.2.3 void sine_t::update_cfg( ) [private]
5.338.3 Member Data Documentation
5.338.3.1 MHAParser::float_t sine_t::lev [private]
5.338.3.2 MHAParser::float_t sine_t::frequency [private]
5.338.3.3 MHAParser::kw_t sine_t::mode [private]
5.338.3.4 MHAParser::vint_t sine_t::channels [private]
5.338.3.5 double sine_t::phase_div_2pi [private]
5.338.3.6 MHAEvents::patchbay_t < sine_t > sine_t::patchbay [private]
```

The documentation for this class was generated from the following file:

· sine.cpp

5.339 smoothgains_bridge::overlapadd_if_t Class Reference

Inheritance diagram for smoothgains_bridge::overlapadd_if_t:

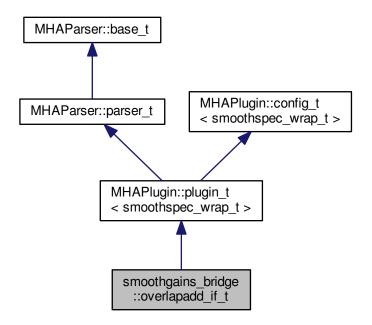

Public Member Functions

- overlapadd_if_t (const algo_comm_t &, const std::string &, const std::string &)
- ~overlapadd_if_t ()
- void prepare (mhaconfig_t &)
- void release ()
- mha_spec_t * process (mha_spec_t *)

Private Member Functions

• void update ()

Private Attributes

- MHAEvents::patchbay_t< overlapadd_if_t > patchbay
- MHAParser::kw t mode
- MHAParser::window_t irswnd

5.339.1 Constructor & Destructor Documentation

- MHAParser::float_t epsilon
- MHAParser::mhapluginloader_t plugloader
- std::string algo
- mhaconfig_t cf_in
- mhaconfig_t cf_out

Additional Inherited Members

Implements MHAPlugin::plugin_t < smoothspec_wrap_t > (p. 685).

Reimplemented from MHAPlugin::plugin_t < smoothspec_wrap_t > (p. 686).

```
5.339.2.3 mha spec t * smoothgains bridge::overlapadd if t::process (
                     mha_spec_t * spec )
5.339.2.4
         void smoothgains bridge::overlapadd if t::update( ) [private]
5.339.3 Member Data Documentation
         MHAEvents::patchbay t<overlapadd if t> smoothgains bridge::overlapadd if t←
5.339.3.1
         ::patchbay [private]
5.339.3.2 MHAParser::kw t smoothgains bridge::overlapadd if t::mode [private]
5.339.3.3 MHAParser::window t smoothgains_bridge::overlapadd_if_t::irswnd [private]
5.339.3.4 MHAParser::float t smoothgains_bridge::overlapadd_if_t::epsilon [private]
5.339.3.5 MHAParser::mhapluginloader t smoothgains_bridge::overlapadd_if_t::plugloader
         [private]
5.339.3.6 std::string smoothgains_bridge::overlapadd_if_t::algo [private]
5.339.3.7 mhaconfig t smoothgains_bridge::overlapadd_if_t::cf_in [private]
5.339.3.8 mhaconfig t smoothgains_bridge::overlapadd_if_t::cf_out [private]
```

The documentation for this class was generated from the following file:

- smoothgains_bridge.cpp
- 5.340 smoothgains_bridge::smoothspec_wrap_t Class Reference

Public Member Functions

- smoothspec_wrap_t (mhaconfig_t spar_in, mhaconfig_t spar_out, const MHA←
 Parser::kw_t &mode, const MHAParser::window_t &irswnd, const MHAParser::float←
 t &epsilon)
- mha_spec_t * proc_1 (mha_spec_t *)
- mha_spec_t * proc_2 (mha_spec_t *)

Private Attributes

- MHASignal::spectrum_t spec_in_copy
 Copy of input spectrum for smoothspec.
- MHAFilter::smoothspec_t smoothspec Smoothspec calculator.
- bool use smoothspec
- float smoothspec epsilon


5.340 smoothgains_bridge::smoothspec_wrap_t Class Reference65

```
5.340.1 Constructor & Destructor Documentation
5.340.1.1 smoothgains_bridge::smoothspec_wrap_t::smoothspec_wrap_t (
                     mhaconfig t spar in,
                     mhaconfig_t spar_out,
                     const MHAParser::kw_t & mode,
                     const MHAParser::window_t & irswnd,
                     const MHAParser::float t & epsilon )
5.340.2 Member Function Documentation
5.340.2.1 mha_spec_t * smoothgains_bridge::smoothspec_wrap_t::proc_1 (
                     mha spec t * s)
5.340.2.2 mha spec t * smoothgains_bridge::smoothspec_wrap_t::proc_2 (
                     mha spec t * s)
5.340.3 Member Data Documentation
5.340.3.1 MHASignal::spectrum_t smoothgains_bridge::smoothspec_wrap_t::spec_in_copy
         [private]
Copy of input spectrum for smoothspec.
5.340.3.2 MHAFilter::smoothspec_t smoothgains_bridge::smoothspec_wrap_t::smoothspec
         [private]
Smoothspec calculator.
5.340.3.3 bool smoothgains_bridge::smoothspec_wrap_t::use_smoothspec [private]
5.340.3.4 float smoothgains_bridge::smoothspec_wrap_t::smoothspec_epsilon [private]
The documentation for this class was generated from the following file:
```

smoothgains_bridge.cpp

5.341 softclip_t Class Reference

Inheritance diagram for softclip_t:

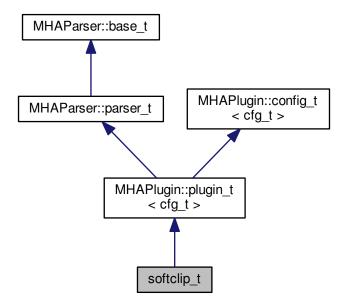

Public Member Functions

- softclip_t (const algo_comm_t &, const std::string &, const std::string &)
- mha_wave_t * process (mha_wave_t *)
- void prepare (mhaconfig_t &)
- void update ()

Private Attributes

- mhaconfig_t tftype
- MHAParser::float_t attack
- MHAParser::float_t decay
- MHAParser::float_t start_limit
- MHAParser::float_t slope_db
- MHAEvents::patchbay_t< softclip_t > patchbay

Additional Inherited Members

```
5.341.1 Constructor & Destructor Documentation
5.341.1.1 softclip_t::softclip_t (
                      const algo comm t & iac,
                      const std::string & chain,
                      const std::string & name )
5.341.2 Member Function Documentation
5.341.2.1 mha_wave_t * softclip_t::process (
                      mha_wave_t * s )
5.341.2.2 void softclip_t::prepare (
                      mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin_t < cfg_t > (p. 685).
5.341.2.3 void softclip_t::update ( )
5.341.3 Member Data Documentation
5.341.3.1
         mhaconfig t softclip_t::tftype [private]
5.341.3.2 MHAParser::float_t softclip_t::attack [private]
5.341.3.3 MHAParser::float_t softclip_t::decay [private]
5.341.3.4 MHAParser::float_t softclip_t::start_limit [private]
5.341.3.5 MHAParser::float_t softclip_t::slope_db [private]
5.341.3.6 MHAEvents::patchbay_t<softclip_t> softclip_t::patchbay [private]
```

The documentation for this class was generated from the following file:

softclip.cpp

5.342 softclipper_t Class Reference

Public Member Functions

- softclipper_t (const softclipper_variables_t &v, const mhaconfig_t &)
- mha_real_t process (mha_wave_t *)

Private Attributes

```
    MHAFilter::o1flt_lowpass_t attack
```

- MHAFilter::o1flt_maxtrack_t decay
- MHAFilter::o1flt lowpass t clipmeter
- mha_real_t threshold
- mha_real_t hardlimit
- · mha real t slope
- bool linear

```
5.342.1 Constructor & Destructor Documentation
```

5.342.2 Member Function Documentation

5.342.3 Member Data Documentation

```
5.342.3.1 MHAFilter::o1flt_lowpass_t softclipper_t::attack [private]
```

```
5.342.3.2 MHAFilter::o1flt_maxtrack_t softclipper_t::decay [private]
```

```
5.342.3.3 MHAFilter::o1flt_lowpass_t softclipper_t::clipmeter [private]
```

```
5.342.3.4 mha real t softclipper t::threshold [private]
```

```
5.342.3.5 mha_real_t softclipper_t::hardlimit [private]
```

5.342.3.6 mha_real_t softclipper_t::slope [private]


5.342.3.7 bool softclipper_t::linear [private]

The documentation for this class was generated from the following file:

· transducers.cpp

5.343 softclipper_variables_t Class Reference

Inheritance diagram for softclipper_variables_t:

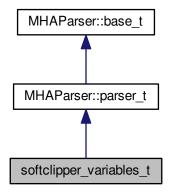

Public Member Functions

softclipper_variables_t ()

Public Attributes

- MHAParser::float_t tau_attack
- MHAParser::float_t tau_decay
- MHAParser::float_t tau_clip
- MHAParser::float t threshold
- MHAParser::float_t hardlimit
- MHAParser::float_t slope
- MHAParser::bool_t linear
- MHAParser::float_mon_t clipped
- MHAParser::float_t max_clipped

Additional Inherited Members

5.343.1 Constructor & Destructor Documentation

5.343.1.1 softclipper_variables_t::softclipper_variables_t()

5.343.2 Member Data Documentation


5.343.2.1 MHAParser::float_t softclipper_variables_t::tau_attack
5.343.2.2 MHAParser::float_t softclipper_variables_t::tau_decay
5.343.2.3 MHAParser::float_t softclipper_variables_t::tau_clip
5.343.2.4 MHAParser::float_t softclipper_variables_t::threshold
5.343.2.5 MHAParser::float_t softclipper_variables_t::hardlimit
5.343.2.6 MHAParser::float_t softclipper_variables_t::slope
5.343.2.7 MHAParser::bool_t softclipper_variables_t::linear
5.343.2.8 MHAParser::float_mon_t softclipper_variables_t::clipped
5.343.2.9 MHAParser::float_t softclipper_variables_t::max_clipped

The documentation for this class was generated from the following file:

transducers.cpp

5.344 spec2wave_if_t Class Reference

Inheritance diagram for spec2wave_if_t:

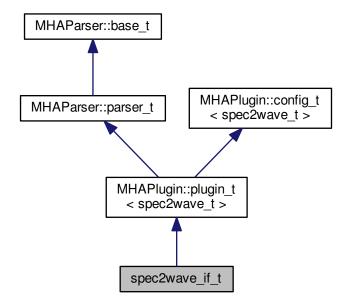

Public Member Functions

- spec2wave_if_t (const algo_comm_t &, const std::string &, const std::string &)
- void prepare (mhaconfig_t &)
- mha_wave_t * process (mha_spec_t *)

Private Member Functions

• void update ()

Private Attributes

- MHAEvents::patchbay_t< spec2wave_if_t > patchbay
- MHAParser::float t ramplen
- · windowselector_t window_config

Additional Inherited Members

5.344.3.3 windowselector_t spec2wave_if_t::window_config [private]

The documentation for this class was generated from the following file:

• spec2wave.cpp

5.345 spec2wave_t Class Reference

Public Member Functions

• **spec2wave_t** (unsigned int nfft_, unsigned int nwnd_, unsigned int nwndshift_, unsigned int nch, **mha_real_t** ramplen, const **MHAWindow::base_t** &postwin)

```
    ~spec2wave_t ()
```

mha_wave_t * process (mha_spec_t *)

Private Attributes

· mha fft t ft

FFT class.

unsigned int npad1

length of zero padding before window

• unsigned int npad2

length of zero padding after window

- hanning_ramps_t ramps
- MHASignal::waveform_t calc_out
- MHASignal::waveform t out buf
- MHASignal::waveform_t write_buf
- · mha_real_t sc
- · unsigned int nfft
- unsigned int nwndshift
- MHAWindow::base_t postwindow

```
5.345.1 Constructor & Destructor Documentation
```

```
5.345.1.2 spec2wave_t::\simspec2wave_t ( )
```

5.345.2 Member Function Documentation

5.345.3 Member Data Documentation

5.345.3.1 mha_fft_t spec2wave_t::ft [private]

FFT class.

```
length of zero padding before window

5.345.3.3 unsigned int spec2wave_t::npad2 [private]

length of zero padding after window

5.345.3.4 hanning_ramps_t spec2wave_t::ramps [private]

5.345.3.5 MHASignal::waveform_t spec2wave_t::calc_out [private]

5.345.3.6 MHASignal::waveform_t spec2wave_t::out_buf [private]

5.345.3.7 MHASignal::waveform_t spec2wave_t::write_buf [private]

5.345.3.8 mha_real_t spec2wave_t::sc [private]

5.345.3.9 unsigned int spec2wave_t::nfft [private]

5.345.3.10 unsigned int spec2wave_t::nwndshift [private]
```

The documentation for this class was generated from the following file:

5.345.3.11 MHAWindow::base_t spec2wave_t::postwindow [private]

spec2wave.cpp

5.346 spec_fader_t Class Reference

Public Member Functions

- spec_fader_t (unsigned int ch, mha_real_t fr, MHAParser::vfloat_t &ng, MHAParser ← ::float_t &t)
- \sim spec_fader_t ()

Public Attributes

- unsigned int nch
- mha_real_t * gains
- unsigned int fr

5.346.1 Constructor & Destructor Documentation

unsigned int spec_fader_t::fr


The documentation for this class was generated from the following file:

fader_spec.cpp

5.346.2.3

5.347 speechnoise_t Class Reference

Inheritance diagram for speechnoise_t:

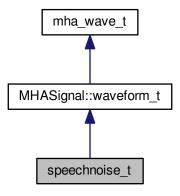

Public Types

Public Member Functions

- speechnoise_t (float duration, float srate, unsigned int channels, speechnoise_t
 ::noise_type_t noise_type=speechnoise_t::mha)
- speechnoise_t (unsigned int length_samples, float srate, unsigned int channels, speechnoise_t::noise_type_t noise_type=speechnoise_t::mha)

Private Member Functions

• void **creator** (**speechnoise_t::noise_type_t** noise_type, float srate)

Additional Inherited Members

```
5.347.1 Member Enumeration Documentation
```

```
5.347.1.1 enum speechnoise_t::noise_type_t
```

Enumerator

```
mha
```

olnoise

LTASS_combined

LTASS_female

LTASS male

white

pink

brown

TEN_SPL

TEN_SPL_250_8k

TEN_SPL_50_16k

sin125

sin250

sin500

sin1k

sin2k

sin4k

sin8k


5.347.2 Constructor & Destructor Documentation

The documentation for this class was generated from the following files:

- · speechnoise.h
- speechnoise.cpp

5.348 steerbf Class Reference

Inheritance diagram for steerbf:

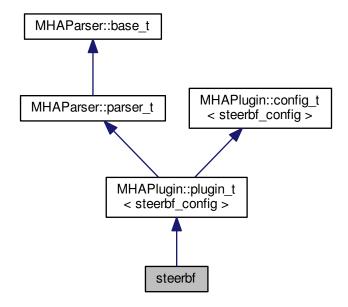

Public Member Functions

steerbf (algo_comm_t &ac, const std::string &chain_name, const std::string &algo_←
name)

Constructs our plugin.

- ∼steerbf ()
- mha_spec_t * process (mha_spec_t *)

Defers to configuration class.

void prepare (mhaconfig_t &)

Plugin preparation.

• void release (void)

Public Attributes

- MHAParser::string_t bf_src
- · parser int dyn angle ind
- MHAParser::string_t angle_src

Private Member Functions

void update_cfg ()

Private Attributes

MHAEvents::patchbay_t< steerbf > patchbay

Additional Inherited Members

```
5.348.1 Constructor & Destructor Documentation
```

```
5.348.1.1 steerbf::steerbf (

algo_comm_t & ac,

const std::string & chain_name,

const std::string & algo_name )
```

Constructs our plugin.

```
5.348.1.2 steerbf::∼steerbf ( )
```

5.348.2 Member Function Documentation

```
5.348.2.1 mha_spec_t * steerbf::process (
mha_spec_t * signal )
```

Defers to configuration class.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number of	
	channels, frames per block, sampling rate.	

Implements MHAPlugin::plugin_t< steerbf_config > (p. 685).

Reimplemented from MHAPlugin::plugin_t < steerbf_config > (p. 686).

```
5.348.2.4 void steerbf::update_cfg( ) [private]
```

5.348.3 Member Data Documentation

```
5.348.3.1 MHAParser::string_t steerbf::bf_src
```

5.348.3.2 parser int dyn steerbf::angle_ind

5.348.3.3 MHAParser::string_t steerbf::angle_src

5.348.3.4 MHAEvents::patchbay_t<steerbf> steerbf::patchbay [private]

The documentation for this class was generated from the following files:

- · steerbf.h
- steerbf.cpp

5.349 steerbf_config Class Reference

Public Member Functions

- steerbf_config (algo_comm_t &ac, const mhaconfig_t in_cfg, steerbf) *steerbf)
- ∼steerbf config ()
- mha_spec_t * process (mha_spec_t *)

Private Attributes

- unsigned int nchan
- unsigned int nfreq
- MHASignal::spectrum t outSpec
- mha_spec_t bf_vec
- unsigned int nangle
- steerbf * _steerbf
- · algo_comm_t & ac
- std::string bf_src_copy

```
5.349.1 Constructor & Destructor Documentation
5.349.1.1 steerbf_config::steerbf_config (
                     algo_comm_t & ac,
                      const mhaconfig t in_cfg,
                      steerbf * steerbf )
5.349.1.2 steerbf_config::~steerbf_config()
5.349.2 Member Function Documentation
5.349.2.1 mha_spec_t * steerbf_config::process (
                      mha_spec_t * inSpec )
5.349.3 Member Data Documentation
5.349.3.1
         unsigned int steerbf_config::nchan [private]
5.349.3.2 unsigned int steerbf_config::nfreq [private]
5.349.3.3 MHASignal::spectrum_t steerbf_config::outSpec [private]
5.349.3.4 mha spec t steerbf_config::bf_vec [private]
5.349.3.5 unsigned int steerbf_config::nangle [private]
5.349.3.6 steerbf* steerbf_config::_steerbf [private]
5.349.3.7 algo_comm_t& steerbf_config::ac [private]
         std::string steerbf_config::bf_src_copy [private]
```

The documentation for this class was generated from the following files:

- · steerbf.h
- steerbf.cpp

5.350 timo_AC Class Reference

Public Member Functions

- timo_AC (algo_comm_t &ac, unsigned int fftlen, unsigned int nfreq, unsigned int nchan)
- void copy ()
- void insert ()

Public Attributes

```
    MHA AC::waveform t gamma post AC

    MHA AC::waveform t xi ml AC

    MHA_AC::spectrum_t lambda_ml_AC

    MHA AC::spectrum t lambda ml ceps AC

    MHA AC::waveform t lambda ml smooth AC

    MHA_AC::waveform_t max_q_AC

    MHA AC::waveform t max val AC

    MHA AC::waveform t pitch set first AC

    MHA AC::waveform t pitch set last AC

    MHA AC::waveform t alpha hat AC

    MHA AC::waveform t alpha frame AC

    MHA AC::spectrum t lambda ceps AC

    MHA_AC::spectrum_t log_lambda_spec_AC

    MHA_AC::waveform_t lambda_spec_AC

    MHA_AC::waveform_t xi_est_AC

    MHA_AC::waveform_t gain_wiener_AC

    MHA_AC::waveform_t winF0_AC

    MHA AC::waveform t SPP

5.350.1 Constructor & Destructor Documentation
5.350.1.1 timo_AC::timo_AC (
                    algo_comm_t & ac,
                    unsigned int fftlen,
                    unsigned int nfreq,
                    unsigned int nchan ) [inline]
5.350.2 Member Function Documentation
5.350.2.1 void timo_AC::copy ( )
5.350.2.2 void timo_AC::insert ( )
5.350.3 Member Data Documentation
5.350.3.1 MHA AC::waveform t timo AC::gamma post AC
5.350.3.2 MHA_AC::waveform_t timo_AC::xi_ml_AC
5.350.3.3 MHA_AC::spectrum_t timo_AC::lambda_ml_AC
```

5.350.3.4 MHA_AC::spectrum_t timo_AC::lambda_ml_ceps_AC

```
5.350.3.5 MHA_AC::waveform_t timo_AC::lambda_ml_smooth_AC
5.350.3.6 MHA_AC::waveform_t timo_AC::max_q_AC
5.350.3.7 MHA_AC::waveform_t timo_AC::max_val_AC
5.350.3.8 MHA_AC::waveform_t timo_AC::pitch_set_first_AC
5.350.3.9 MHA_AC::waveform_t timo_AC::pitch_set_last_AC
5.350.3.10 MHA AC::waveform t timo_AC::alpha_hat_AC
5.350.3.11 MHA AC::waveform t timo_AC::alpha_frame_AC
5.350.3.12 MHA AC::spectrum t timo_AC::lambda_ceps_AC
5.350.3.13 MHA AC::spectrum t timo_AC::log_lambda_spec_AC
5.350.3.14 MHA AC::waveform t timo_AC::lambda_spec_AC
5.350.3.15 MHA_AC::waveform_t timo_AC::xi_est_AC
5.350.3.16 MHA_AC::waveform_t timo_AC::gain_wiener_AC
5.350.3.17 MHA_AC::waveform_t timo_AC::winF0_AC
5.350.3.18 MHA_AC::waveform_t timo_AC::SPP
```

The documentation for this class was generated from the following files:

- · timoconfig.h
- · timoconfig.cpp

5.351 timo_params Class Reference

Public Member Functions

timo_params (const mhaconfig_t &_in_cfg, float _xi_min_db, float _f0_low, float _f0_← high, float _delta_pitch, float _lambda_thresh, float _alpha_pitch, float _beta_const, float _kappa_const, float _prior_q, float _xi_opt_db, float _gain_min_db, std::vector< float > &_winF0, std::vector< float > &_alpha_const_vals, std::vector< float > &_alpha_const← _limits_hz, std::string &_noisePow_name)

Public Attributes

- · const mhaconfig_t in_cfg
- float xi_min_db
- float f0_low
- · float f0 high
- · float delta pitch
- float lambda_thresh
- · float alpha pitch
- · float beta const
- float kappa_const
- float prior_q
- float xi_opt_db
- float gain_min_db
- std::vector< float > winF0
- std::vector< float > alpha_const_vals
- std::vector< float > alpha_const_limits_hz
- std::string noisePow_name

5.351.1 Constructor & Destructor Documentation

```
5.351.1.1 timo_params::timo_params (
                        const mhaconfig t & _in_cfg,
                        float _xi_min_db,
                        float _f0_low,
                        float _f0_high,
                        float _delta_pitch,
                        float _lambda_thresh,
                        float alpha pitch,
                        float _beta_const,
                        float _kappa_const,
                        float _prior_q,
                        float _xi_opt_db,
                        float _gain_min_db,
                        std::vector< float > & winF0,
                        std::vector< float > & _alpha_const_vals,
                        std::vector< float > & _alpha_const_limits_hz,
                        std::string & _noisePow_name ) [inline]
```

5.351.2 Member Data Documentation

- 5.351.2.1 const mhaconfig_t timo_params::in_cfg
- 5.351.2.2 float timo_params::xi_min_db
- 5.351.2.3 float timo_params::f0_low

```
5.351.2.4 float timo_params::f0_high

5.351.2.5 float timo_params::delta_pitch

5.351.2.6 float timo_params::lambda_thresh

5.351.2.7 float timo_params::alpha_pitch

5.351.2.8 float timo_params::beta_const

5.351.2.9 float timo_params::kappa_const

5.351.2.10 float timo_params::prior_q

5.351.2.11 float timo_params::xi_opt_db

5.351.2.12 float timo_params::gain_min_db

5.351.2.13 std::vector<float> timo_params::winF0

5.351.2.14 std::vector<float> timo_params::alpha_const_vals

5.351.2.15 std::vector<float> timo_params::alpha_const_limits_hz

5.351.2.16 std::string timo_params::noisePow_name
```

The documentation for this class was generated from the following file:

· timoconfig.h

5.352 timoConfig Class Reference

Public Member Functions

- timoConfig (algo_comm_t &ac, timo_params ¶ms)
- ∼timoConfig ()
- mha_spec_t * process (mha_spec_t *)

Private Member Functions

void copy_AC (timo_AC &tAC)

Private Attributes

- · algo_comm_t ac
- timo_params params
- unsigned int fftlen
- mha_fft_t mha_fft
- unsigned int nfreq
- unsigned int nchan
- · timo AC tAC
- float ola_powspec_scale
- float q low
- float q_high
- MHASignal::waveform t winF0
- · float xi min
- float gain_min
- MHASignal::waveform_t alpha_const
- MHASignal::waveform_t alpha_prev
- MHASignal::waveform_t noisePow
- MHASignal::waveform t powSpec
- MHASignal::waveform_t gamma_post
- MHASignal::waveform_t xi_ml
- MHASignal::spectrum t lambda ml full
- MHASignal::spectrum_t lambda_ml_ceps
- MHASignal::waveform_t lambda_ml_smooth
- MHASignal::waveform_t alpha_hat
- MHASignal::waveform t alpha frame
- MHASignal::spectrum_t lambda_ceps
- MHASignal::waveform t lambda ceps prev
- MHASignal::spectrum_t log_lambda_spec
- MHASignal::waveform t lambda spec
- MHASignal::waveform_t xi_est
- MHASignal::waveform_t gain_wiener
- MHASignal::spectrum_t spec_out
- double * max_val
- int * max_q
- int * pitch_set_first
- int * pitch set last
- float priorFact
- float xiOpt
- float logGLRFact
- float GLRexp
- MHASignal::waveform_t GLR

```
5.352.1 Constructor & Destructor Documentation
5.352.1.1 timoConfig::timoConfig (
                     algo_comm_t & ac,
                     timo_params & params )
5.352.1.2 timoConfig::~timoConfig()
5.352.2 Member Function Documentation
         mha_spec_t * timoConfig::process (
                     mha_spec_t * noisyFrame )
5.352.2.2 void timoConfig::copy_AC (
                     timo_AC & tAC ) [private]
5.352.3 Member Data Documentation
5.352.3.1
         algo_comm_t timoConfig::ac [private]
5.352.3.2 timo_params timoConfig::params [private]
5.352.3.3
         unsigned int timoConfig::fftlen [private]
5.352.3.4
         mha_fft_t timoConfig::mha_fft [private]
5.352.3.5
         unsigned int timoConfig::nfreq [private]
5.352.3.6
         unsigned int timoConfig::nchan [private]
5.352.3.7
         timo AC timoConfig::tAC [private]
5.352.3.8 float timoConfig::ola_powspec_scale [private]
5.352.3.9 float timoConfig::q_low [private]
5.352.3.10 float timoConfig::q_high [private]
5.352.3.11 MHASignal::waveform_t timoConfig::winF0 [private]
5.352.3.12 float timoConfig::xi_min [private]
5.352.3.13 float timoConfig::gain_min [private]
```


```
5.352.3.14
          MHASignal::waveform ttimoConfig::alpha const [private]
5.352.3.15 MHASignal::waveform_t timoConfig::alpha_prev [private]
5.352.3.16 MHASignal::waveform t timoConfig::noisePow [private]
5.352.3.17
         MHASignal::waveform t timoConfig::powSpec [private]
5.352.3.18
         MHASignal::waveform_t timoConfig::gamma_post [private]
5.352.3.19
          MHASignal::waveform ttimoConfig::xi_ml [private]
5.352.3.20
         MHASignal::spectrum_t timoConfig::lambda_ml_full [private]
5.352.3.21
         MHASignal::spectrum t timoConfig::lambda ml ceps [private]
5.352.3.22 MHASignal::waveform t timoConfig::lambda ml smooth [private]
5.352.3.23
         MHASignal::waveform t timoConfig::alpha_hat [private]
5.352.3.24
          MHASignal::waveform ttimoConfig::alpha_frame [private]
5.352.3.25
          MHASignal::spectrum_t timoConfig::lambda_ceps [private]
5.352.3.26
         MHASignal::waveform_t timoConfig::lambda_ceps_prev [private]
5.352.3.27
         MHASignal::spectrum t timoConfig::log_lambda_spec [private]
5.352.3.28 MHASignal::waveform_t timoConfig::lambda_spec [private]
5.352.3.29
         MHASignal::waveform_t timoConfig::xi_est [private]
5.352.3.30 MHASignal::waveform_t timoConfig::gain_wiener [private]
5.352.3.31 MHASignal::spectrum_t timoConfig::spec_out [private]
5.352.3.32 double* timoConfig::max_val [private]
5.352.3.33 int* timoConfig::max_q [private]
5.352.3.34 int* timoConfig::pitch_set_first [private]
5.352.3.35 int* timoConfig::pitch set last [private]
5.352.3.36 float timoConfig::priorFact [private]
5.352.3.37 float timoConfig::xiOpt [private]
5.352.3.38 float timoConfig::logGLRFact [private]
5.352.3.39 float timoConfig::GLRexp [private]
5.352.3.40 MHASignal::waveform ttimoConfig::GLR [private]
```

The documentation for this class was generated from the following files:

- · timoconfig.h
- timoconfig.cpp

5.353 timoSmooth Class Reference

Inheritance diagram for timoSmooth:

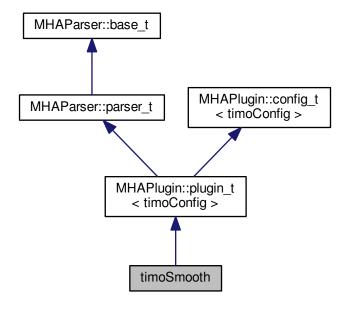

Public Member Functions

• timoSmooth (algo_comm_t &ac, const std::string &chain_name, const std::string &algo_name)

Constructs the beamforming plugin.

- ∼timoSmooth ()
- mha_spec_t * process (mha_spec_t *)

This plugin implements noise reduction using spectral subtraction: by nonnegative subtraction from the output magnitude of the estimated noise magnitude spectrum.

void prepare (mhaconfig_t &)

Plugin preparation.

void release (void)

Private Member Functions

- void update_cfg ()
- void on_model_param_valuechanged ()

Private Attributes

```
    MHAParser::float_t xi_min_db
```

MHAParser::float_t f0_low

- MHAParser::float_t f0_high
- MHAParser::float t delta pitch
- MHAParser::float_t lambda_thresh
- · MHAParser::float t alpha pitch
- MHAParser::float t beta const
- MHAParser::float_t kappa_const
- MHAParser::float_t gain_min_db
- MHAParser::vfloat_t win_f0
- MHAParser::vfloat_t alpha_const_vals
- MHAParser::vfloat_t alpha_const_limits_hz
- MHAParser::string_t noisePow_name
- MHAParser::parser_t spp
- MHAParser::float t prior q
- MHAParser::float_t xi_opt_db
- MHAEvents::patchbay_t< timoSmooth > patchbay
- bool prepared

Additional Inherited Members

```
5.353.1 Constructor & Destructor Documentation
```

Constructs the beamforming plugin.

```
5.353.1.2 timoSmooth::~timoSmooth()
```

5.353.2 Member Function Documentation

```
5.353.2.1 mha_spec_t * timoSmooth::process (
mha_spec_t * signal )
```

This plugin implements noise reduction using spectral subtraction: by nonnegative subtraction from the output magnitude of the estimated noise magnitude spectrum.

Parameters

signal Pointer to the input signal structure.

Returns

Returns a pointer to the input signal structure, with a the signal modified by this plugin.

Plugin preparation.

This plugin checks that the input signal has the spectral domain and contains at least one channel

Parameters

signal_info	Structure containing a description of the form of the signal (domain, number of	
	channels, frames per block, sampling rate.	

```
Implements MHAPlugin::plugin_t < timoConfig > (p. 685).
```

Reimplemented from **MHAPlugin::plugin_t**< **timoConfig** > (p. 686).

```
5.353.2.5 void timoSmooth::on_model_param_valuechanged( ) [private]
```

5.353.3 Member Data Documentation

```
5.353.3.1 MHAParser::float_t timoSmooth::xi_min_db [private]
```

```
5.353.3.2 MHAParser::float_t timoSmooth::f0_low [private]
```

5.353.3.3 MHAParser::float ttimoSmooth::f0_high [private]

5.353.3.4 MHAParser::float_t timoSmooth::delta_pitch [private]

 $\textbf{5.353.3.5} \quad \textbf{MHAParser::float_t timoSmooth::lambda_thresh} \quad \texttt{[private]}$

5.353.3.6 MHAParser::float_t timoSmooth::alpha_pitch [private]

5.353.3.7 MHAParser::float ttimoSmooth::beta_const [private]


```
5.353.3.8 MHAParser::float_t timoSmooth::kappa_const [private]
5.353.3.9 MHAParser::float_t timoSmooth::gain_min_db [private]
5.353.3.10 MHAParser::vfloat_t timoSmooth::win_f0 [private]
5.353.3.11 MHAParser::vfloat_t timoSmooth::alpha_const_vals [private]
5.353.3.12 MHAParser::vfloat_t timoSmooth::alpha_const_limits_hz [private]
5.353.3.13 MHAParser::string_t timoSmooth::noisePow_name [private]
5.353.3.14 MHAParser::parser_t timoSmooth::spp [private]
5.353.3.15 MHAParser::float_t timoSmooth::prior_q [private]
5.353.3.16 MHAParser::float_t timoSmooth::xi_opt_db [private]
5.353.3.17 MHAEvents::patchbay_t < timoSmooth > timoSmooth::patchbay [private]
5.353.3.18 bool timoSmooth::prepared [private]
```

The documentation for this class was generated from the following files:

- · timosmooth.h
- · timoSmooth.cpp

5.354 us t Class Reference

Inheritance diagram for us_t:

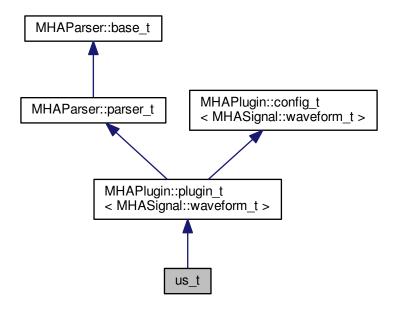

Public Member Functions

```
    us_t (algo_comm_t, std::string, std::string)
    mha_wave_t * process (mha_wave_t *)
    void prepare (mhaconfig_t &)
    void release ()
```

Private Attributes

- MHAParser::int_t ratio
- MHAFilter::iir_filter_t antialias

Additional Inherited Members

```
5.354.1 Constructor & Destructor Documentation
```

```
5.354.1.1 us_t::us_t (

algo_comm_t iac,

std::string ,

std::string )
```

5.354.2 Member Function Documentation

Implements MHAPlugin::plugin_t < MHASignal::waveform_t > (p. 685).

Reimplemented from MHAPlugin::plugin_t < MHASignal::waveform_t > (p. 686).

5.354.3 Member Data Documentation

```
5.354.3.1 MHAParser::int_t us_t::ratio [private]
```


```
5.354.3.2 MHAFilter::iir_filter_t us_t::antialias [private]
```

The documentation for this class was generated from the following file:

upsample.cpp

5.355 wave2spec_if_t Class Reference

Inheritance diagram for wave2spec_if_t:

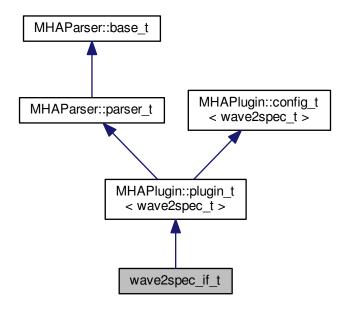

Public Member Functions

- wave2spec_if_t (const algo_comm_t &, const std::string &, const std::string &)
- void prepare (mhaconfig_t &)
- void process (mha_wave_t *, mha_spec_t **)
- void process (mha_wave_t *, mha_wave_t **)

Private Member Functions

• void update ()

Private Attributes

- MHAEvents::patchbay_t< wave2spec_if_t > patchbay
- MHAParser::int_t nfft
- MHAParser::int t nwnd
- MHAParser::float t wndpos
- windowselector_t window_config
- MHAParser::bool_t return_wave
- std::string algo

Additional Inherited Members


```
5.355.1 Constructor & Destructor Documentation
5.355.1.1 wave2spec_if_t::wave2spec_if_t (
                     const algo_comm_t & iac,
                     const std::string & ,
                     const std::string & ialg )
5.355.2 Member Function Documentation
5.355.2.1 void wave2spec_if_t::prepare (
                     mhaconfig_t & t ) [virtual]
Implements MHAPlugin::plugin_t< wave2spec_t > (p. 685).
5.355.2.2 void wave2spec_if_t::process (
                     mha_wave_t * wave_in,
                     mha_spec_t ** sout )
5.355.2.3 void wave2spec_if_t::process (
                     mha_wave_t * wave_in,
                     mha_wave_t ** sout )
5.355.2.4 void wave2spec_if_t::update( ) [private]
5.355.3 Member Data Documentation
5.355.3.1
         MHAEvents::patchbay_t<wave2spec_if_t> wave2spec_if_t::patchbay [private]
5.355.3.2 MHAParser::int_t wave2spec_if_t::nfft [private]
5.355.3.3 MHAParser::int t wave2spec_if_t::nwnd [private]
5.355.3.4 MHAParser::float_t wave2spec_if_t::wndpos [private]
5.355.3.5 windowselector_t wave2spec_if_t::window_config [private]
5.355.3.6 MHAParser::bool_t wave2spec_if_t::return_wave [private]
5.355.3.7 std::string wave2spec_if_t::algo [private]
```

The documentation for this class was generated from the following file:

wave2spec.cpp

5.356 wave2spec_t Class Reference

Inheritance diagram for wave2spec_t:

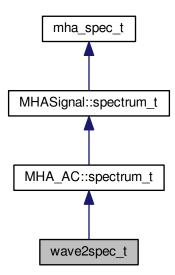

Public Member Functions

- wave2spec_t (unsigned int nfft, unsigned int nwnd_, unsigned int nwndshift_, unsigned int nch, mha_real_t wndpos, const MHAWindow::base_t &window, algo_comm_t ac, std::string algo)
- mha_spec_t * process (mha_wave_t *)
- ~wave2spec_t ()

Private Member Functions

void calc_pre_wnd (MHASignal::waveform_t &, const MHASignal::waveform_t &)

Private Attributes

- unsigned int nwnd
- · unsigned int nwndshift
- mha_fft_t ft

FFT class.

unsigned int npad1
 length of zero padding before window

unsigned int npad2

length of zero padding after window

- MHAWindow::base_t window
- MHASignal::waveform t calc in
- MHASignal::waveform_t in_buf
- MHASignal::spectrum_t spec_in

non-interleaved, complex, fftlen

Additional Inherited Members

```
5.356.1 Constructor & Destructor Documentation
5.356.1.1 wave2spec_t::wave2spec_t (
                      unsigned int nfft.
                      unsigned int nwnd_,
                      unsigned int nwndshift_,
                      unsigned int nch,
                      mha_real_t wndpos,
                      const MHAWindow::base_t & window,
                      algo_comm_t ac,
                      std::string algo )
5.356.1.2 wave2spec_t::~wave2spec_t ( )
5.356.2 Member Function Documentation
5.356.2.1 mha_spec_t * wave2spec_t::process (
                      mha_wave_t * wave_in )
5.356.2.2 void wave2spec_t::calc_pre_wnd (
                      MHASignal::waveform_t & dest,
                      const MHASignal::waveform_t & src ) [private]
5.356.3 Member Data Documentation
5.356.3.1 unsigned int wave2spec_t::nwnd [private]
5.356.3.2 unsigned int wave2spec_t::nwndshift [private]
5.356.3.3 mha fft t wave2spec_t::ft [private]
FFT class.
5.356.3.4 unsigned int wave2spec_t::npad1 [private]
```

length of zero padding before window

5.356.3.5 unsigned int wave2spec_t::npad2 [private]

length of zero padding after window

```
5.356.3.6 MHAWindow::base_t wave2spec_t::window [private]
```

5.356.3.7 MHASignal::waveform_t wave2spec_t::calc_in [private]

5.356.3.8 MHASignal::waveform_t wave2spec_t::in_buf [private]

5.356.3.9 MHASignal::spectrum_t wave2spec_t::spec_in [private]


non-interleaved, complex, fftlen

The documentation for this class was generated from the following file:

wave2spec.cpp

5.357 wavrec t Class Reference

Inheritance diagram for wavrec_t:

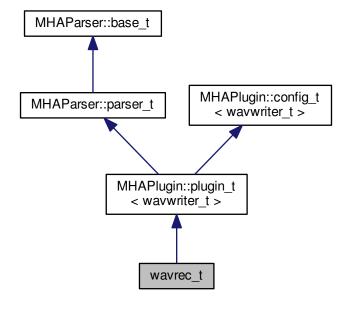

Public Member Functions

```
mha_wave_t * process (mha_wave_t *)
```

- void prepare (mhaconfig_t &cf)
- void release ()
- wavrec_t (const algo_comm_t &iac, const std::string &, const std::string &)

Private Member Functions

• void start_new_session ()

Private Attributes

- MHAParser::bool_t record
- MHAParser::int_t fifolen
- · MHAParser::int t minwrite
- MHAParser::string_t prefix
- MHAParser::bool_t use_date
- MHAEvents::patchbay_t< wavrec_t > patchbay

Additional Inherited Members

```
5.357.1 Constructor & Destructor Documentation
```

5.357.2 Member Function Documentation

 $Implements \ \textbf{MHAPlugin::plugin_t} < \textbf{wavwriter_t} > \ (p. \ 685).$

Reimplemented from MHAPlugin::plugin_t< wavwriter_t > (p. 686).

```
5.357.2.4 void wavrec_t::start_new_session( ) [private]
5.357.3 Member Data Documentation
5.357.3.1 MHAParser::bool_t wavrec_t::record [private]
5.357.3.2 MHAParser::int_t wavrec_t::fifolen [private]
5.357.3.3 MHAParser::int_t wavrec_t::minwrite [private]
5.357.3.4 MHAParser::string_t wavrec_t::prefix [private]
5.357.3.5 MHAParser::bool_t wavrec_t::use_date [private]
5.357.3.6 MHAEvents::patchbay_t<wavrec_t> wavrec_t::patchbay [private]
```

The documentation for this class was generated from the following file:

· wavrec.cpp

5.358 wavwriter_t Class Reference

Public Member Functions

- wavwriter_t (bool active, const mhaconfig_t &cf, unsigned int fifosize, unsigned int minwrite, const std::string &prefix, bool use_date)
- ~wavwriter_t ()
- void process (mha_wave_t *)

Private Member Functions

void write_thread ()

Static Private Member Functions

static void * write_thread (void *this_)

```
Private Attributes
```

```
    bool close session

    bool act

    mhaconfig_t cf_

   • SNDFILE * sf
   mha_fifo_t< mha_real_t > fifo

    unsigned int minw_

    · pthread t writethread
    float * data
5.358.1 Constructor & Destructor Documentation
5.358.1.1 wavwriter_t::wavwriter_t (
                      bool active,
                      const mhaconfig_t & cf,
                      unsigned int fifosize,
                      unsigned int minwrite,
                      const std::string & prefix,
                      bool use_date )
5.358.1.2 wavwriter_t::~wavwriter_t ( )
5.358.2 Member Function Documentation
5.358.2.1 void wavwriter_t::process (
                      mha_wave_t * s )
5.358.2.2 static void* wavwriter_t::write_thread (
                      void * this_ ) [inline], [static], [private]
5.358.2.3 void wavwriter_t::write_thread() [private]
5.358.3 Member Data Documentation
5.358.3.1 bool wavwriter_t::close_session [private]
5.358.3.2 bool wavwriter_t::act_ [private]
5.358.3.3 mhaconfig_t wavwriter_t::cf_ [private]
5.358.3.4 SNDFILE* wavwriter_t::sf [private]
5.358.3.5 mha_fifo_t<mha_real_t> wavwriter_t::fifo [private]
5.358.3.6 unsigned int wavwriter_t::minw_ [private]
5.358.3.7 pthread_t wavwriter_t::writethread [private]
5.358.3.8 float* wavwriter_t::data [private]
The documentation for this class was generated from the following file:
```

wavrec.cpp

5.359 windowselector_t Class Reference

A combination of mha parser variables to describe an overalapadd analysis window.

Public Member Functions

windowselector_t (const std::string &default_type)
 constructor creates the mha parser variables that describe an overlapadd analysis window.

∼windowselector t ()

destructor frees window data that were allocated

• const **MHAWindow::base_t** & **get_window_data** (unsigned length) re-computes the window if required.

void insert_items (MHAParser::parser_t *p)

insert the window parameters "wndtype", "wndexp", and "userwnd" as mha configuration parameters into the given mha configuration parser.

Public Attributes

MHAEvents::emitter_t updated

A collector event that fires when any of the window parameters managed here is written to.

Private Member Functions

void invalidate_window_data ()

invalidates any allocated window samples.

void update_parser ()

invoked when a parser parameter changes.

Private Attributes

MHAWindow::base t * wnd

Storage for the window data returned by **get_window_data()** (p. 901)

MHAParser::kw_t wndtype

parser variable for window type

MHAParser::float_t wndexp

parser variable for window exponent

MHAParser::vfloat_t userwnd

parser variable for user window samples to use

MHAEvents::patchbay_t< windowselector_t > patchbay

patchbay to watch for changes for the parser variables

5.359.1 Detailed Description

A combination of mha parser variables to describe an overalapadd analysis window.

Provides a method to get the window samples as an instance of **MHAWindow::base_t** (p. 790) when needed.

```
5.359.2 Constructor & Destructor Documentation
```

constructor creates the mha parser variables that describe an overlapadd analysis window.

Parameters

default_type	name of the default analysis window type. Must be one of: "rect", "bartlett",]
	"hanning", "hamming", "blackman"	

```
5.359.2.2 windowselector t::~windowselector t()
```

destructor frees window data that were allocated

5.359.3 Member Function Documentation

```
5.359.3.1 const MHAWindow::base_t & windowselector_t::get_window_data ( unsigned length )
```

re-computes the window if required.

Parameters

the desired window length in samples return the window's samples as a constref to **MHAWindow::base_t** (p. 790) instance. The referenced instance lives until the window parameters are changed, or this **windowselector_t** (p. 900) instance is destroyed.

insert the window parameters "wndtype", "wndexp", and "userwnd" as mha configuration parameters into the given mha configuration parser.

Parameters

p The configuration parser where to insert the window parameters. E.g. the plugin wave2spec's interface class.

```
5.359.3.3 void windowselector_t::invalidate_window_data() [private]
```

invalidates any allocated window samples.

```
5.359.3.4 void windowselector_t::update_parser( ) [private]
```

invoked when a parser parameter changes.

Calls invalidate_window_data() (p. 902) and emits the updated event.

5.359.4 Member Data Documentation

5.359.4.1 MHAEvents::emitter_t windowselector_t::updated

A collector event that fires when any of the window parameters managed here is written to.

```
5.359.4.2 MHAWindow::base_t* windowselector_t::wnd [private]
```

Storage for the window data returned by **get window data()** (p. 901)

```
5.359.4.3 MHAParser::kw twindowselector_t::wndtype [private]
```

parser variable for window type

```
5.359.4.4 MHAParser::float twindowselector_t::wndexp [private]
```

parser variable for window exponent

```
5.359.4.5 MHAParser::vfloat_t windowselector_t::userwnd [private]
```

parser variable for user window samples to use

```
5.359.4.6 MHAEvents::patchbay_t<windowselector_t> windowselector_t::patchbay [private]
```

patchbay to watch for changes for the parser variables

The documentation for this class was generated from the following files:

- · windowselector.h
- · windowselector.cpp

6 File Documentation

6.1 ac2lsl.cpp File Reference

Classes

• class ac2lsl::save_var_base_t

Interface for ac to Isl bridge variable.

class ac2lsl::save_var_t< T >

Implementation for all ac to Isl bridges except complex types.

class ac2lsl::save_var_t< mha_complex_t >

Template specialization of the ac2lsl (p. 77) bridge to take care of complex numbers.

• class ac2lsl::cfg_t

Runtime configuration class of the ac2lsl (p. 77) plugin.

class ac2lsl::ac2lsl_t

Plugin class of ac2lsl (p. 77).

struct RunOnce

Namespaces

· ac2lsl

All types for the ac2lsI (p. 77) plugins live in this namespace.

6.2 ac2wave.cpp File Reference

Classes

- class ac2wave t
- class ac2wave_if_t
- 6.3 ac_monitor_type.cpp File Reference
- 6.4 ac_monitor_type.hh File Reference

Classes

class acmon::ac_monitor_t

A class for converting AC variables to Parser monitors of correct type.

Namespaces

acmon

Namespace for displaying ac variables as parser monitors.

6.5 acConcat_wave.cpp File Reference

Macros

- #define PATCH_VAR(var) patchbay.connect(&var.valuechanged, this, &acConcat_←
 wave::update_cfg)
- #define INSERT_PATCH(var) insert_member(var); PATCH_VAR(var)
- 6.5.1 Macro Definition Documentation
- 6.5.1.1 #define PATCH_VAR(

 var) patchbay.connect(&var.valuechanged, this, &acConcat_wave::update

 _cfg)
- 6.5.1.2 #define INSERT_PATCH(

 var) insert_member(var); PATCH_VAR(var)
- 6.6 acConcat wave.h File Reference

Classes

- class acConcat_wave_config
- · class acConcat wave
- 6.7 acmon.cpp File Reference

Classes

· class acmon::acmon t

Namespaces

acmon

Namespace for displaying ac variables as parser monitors.

6.8 acPooling_wave.cpp File Reference

- #define PATCH_VAR(var) patchbay.connect(&var.valuechanged, this, &acPooling_
 wave::update_cfg)
- #define INSERT_PATCH(var) insert_member(var); PATCH_VAR(var)

6.8.1 Macro Definition Documentation

6.8.1.1 #define PATCH_VAR(var) patchbay.connect(&var.valuechanged, this, &acPooling_wave::update _cfg)

6.8.1.2 #define INSERT_PATCH(var) insert_member(var); PATCH_VAR(var)

6.9 acPooling_wave.h File Reference

Classes

- class acPooling_wave_config
- class acPooling_wave
- 6.10 acsave.cpp File Reference

Classes

- class acsave::save_var_t
- class acsave::cfg_t
- class acsave::acsave_t
- struct acsave::mat4head t

Namespaces

· acsave

- #define ACSAVE FMT TXT 0
- #define ACSAVE_SFMT_TXT "txt"
- #define ACSAVE_FMT_MAT4 1
- #define ACSAVE_SFMT_MAT4 "mat4"
- #define ACSAVE_FMT_M 2
- #define ACSAVE_SFMT_M "m"

- 6.10.1 Macro Definition Documentation
- 6.10.1.1 #define ACSAVE FMT TXT 0
- 6.10.1.2 #define ACSAVE_SFMT_TXT "txt"
- 6.10.1.3 #define ACSAVE_FMT_MAT4 1
- 6.10.1.4 #define ACSAVE SFMT MAT4 "mat4"
- 6.10.1.5 #define ACSAVE FMT M 2
- 6.10.1.6 #define ACSAVE SFMT M "m"
- 6.11 acSteer.cpp File Reference

Macros

- #define INSERT PATCH(var) insert member(var); PATCH VAR(var)
- 6.11.1 Macro Definition Documentation
- 6.11.1.1 #define PATCH_VAR(

var) patchbay.connect(&var.valuechanged, this, &acSteer::update_cfg)

6.11.1.2 #define INSERT_PATCH(

var) insert_member(var); PATCH_VAR(var)

6.12 acSteer.h File Reference

Classes

- class acSteer config
- · class acSteer
- 6.13 acTransform_wave.cpp File Reference

- #define PATCH_VAR(var) patchbay.connect(&var.valuechanged, this, &acTransform_← wave::update_cfg)
- #define INSERT_PATCH(var) insert_member(var); PATCH_VAR(var)

6.13.1 Macro Definition Documentation

6.13.1.1 #define PATCH_VAR(

var) patchbay.connect(&var.valuechanged, this, &acTransform_wave
::update cfg)

6.13.1.2 #define INSERT_PATCH(

var) insert_member(var); PATCH_VAR(var)

6.14 acTransform_wave.h File Reference

Classes

- class acTransform_wave_config
- class acTransform_wave
- 6.15 addsndfile.cpp File Reference

Classes

class addsndfile::waveform_proxy_t

Class helps to specify which instance of MHASignal_waveform_t parent instance is meant in **resampled_soundfile_t** (p. 173).

class addsndfile::resampled_soundfile_t

Reads sound from file and resamples it if necessary and wanted.

- · class addsndfile::sndfile_t
- class addsndfile::level_adapt_t
- class addsndfile::addsndfile_if_t

Namespaces

· addsndfile

Macros

#define **DEBUG**(x) std::cerr << __FILE__ << ":" << __LINE__ << " " #x "=" << x << std::endl

Typedefs

- typedef MHAPlugin::config_t< level_adapt_t > addsndfile::level_adaptor
- typedef MHAPlugin::plugin_t< sndfile_t > addsndfile::wave_reader

Enumerations

Functions

• static unsigned **addsndfile::resampled_num_frames** (unsigned num_source_frames, float source_rate, float target_rate, addsndfile_resampling_mode_t resampling_mode)

```
6.15.1 Macro Definition Documentation
```

6.16 adm.cpp File Reference

Classes

- class adm_rtconfig_t
- class adm_if_t

Functions

- MHASignal::waveform_t * adm_fir_lp (unsigned int fs, unsigned f_pass, unsigned int f stop, unsigned int order)
- MHASignal::waveform_t * adm_fir_decomb (unsigned int fs, float dist_m, unsigned int order)
- 6.16.1 Function Documentation

6.17 adm.hh File Reference

Classes

class ADM::Linearphase_FIR< F >

An efficient linear-phase fir filter implementation.

class ADM::DelayF >

A delay-line class which can also do subsample-delays for a limited frequency range below fs/4.

class ADM::ADMF >

Adaptive differential microphone, working for speech frequency range.

Namespaces

ADM

Functions

static double ADM::subsampledelay_coeff (double samples, double f_design, double fs=1.0)

compute IIR coefficient for subsample delay

Variables

- const double **ADM::PI** = 3.14159265358979312
- const double ADM::C = 340
- const double **ADM::DELAY_FREQ** = 2000
- const double **ADM::START_BETA** = 0.5

6.18 altplugs.cpp File Reference

Classes

- · class mhaplug_cfg_t
- class altplugs_t

Macros

- #define MHAPLUGIN_OVERLOAD_OUTDOMAIN
- 6.18.1 Macro Definition Documentation
- 6.18.1.1 #define MHAPLUGIN_OVERLOAD_OUTDOMAIN
- 6.19 analysemhaplugin.cpp File Reference

Functions

- std::string strdom (mha_domain_t d)
- void print_ac (MHAKernel::algo_comm_class_t &ac, std::string txt)
- int **main** (int argc, char **argv)

```
6.19.1 Function Documentation
6.19.1.1 std::string strdom (
                      mha_domain_t d)
6.19.1.2 void print_ac (
                      MHAKernel::algo_comm_class_t & ac,
                      std::string txt )
6.19.1.3 int main (
                      int argc,
                      char ** argv )
6.20 analysispath.cpp File Reference
Classes
    · class analysepath_t
    class plug_t
    class analysispath_if_t
Functions

    static void * thread start (void *instance)

6.20.1 Function Documentation
6.20.1.1 static void* thread_start (
                      void * instance ) [static]
6.21
      auditory_profile.cpp File Reference
6.22
      auditory_profile.h File Reference
Classes

    class AuditoryProfile::fmap_t

         A class to store frequency dependent data (e.g., HTL and UCL).

    class AuditoryProfile::profile_t

         The Auditory Profile class.

    class AuditoryProfile::profile_t::ear_t

         Class for ear-dependent parameters, e.g., audiograms or unilateral loudness scaling.

    class AuditoryProfile::parser_t
```

Class to make the auditory profile accessible through the parser interface.

class AuditoryProfile::parser_t::fmap_t
 class AuditoryProfile::parser_t::ear_t

Namespaces

AuditoryProfile

Namespace for classes and functions around the auditory profile (e.g., audiogram handling)

6.23 browsemhaplugins.cpp File Reference

Macros

#define **DEBUG**(x) std::cerr << __FILE__ << ":" << __LINE__ << " " << #x << "=" << x << std::endl

Functions

• int **main** (int argc, char **argv)

6.23.1 Macro Definition Documentation

6.23.2 Function Documentation

```
6.23.2.1 int main ( int argc, char ** argv )
```

6.24 coherence.cpp File Reference

Classes

- class coherence::vars_t
- class coherence::cohflt_t
- class coherence::cohflt_if_t

Namespaces

coherence

Functions

void coherence::getcipd (mha_complex_t &c, mha_real_t &a, const mha_complex←
 _t &xl, const mha_complex_t &xr)

6.25 combinechannels.cpp File Reference

Classes

- · class combc t
- class combc_if_t
- 6.26 complex_filter.cpp File Reference
- 6.27 complex_filter.h File Reference

Classes

- class MHAFilter::complex_bandpass_t
 Complex bandpass filter.
- class MHAFilter::gamma_flt_t

Class for gammatone filter.

class MHAFilter::thirdoctave_analyzer_t

Namespaces

MHAFilter

Namespace for IIR and FIR filter classes.

6.28 cpuload.cpp File Reference

Classes

- · class cpuload_t
- 6.29 db.cpp File Reference

Classes

- class db_t
- · class db_if_t

6.30 dc.cpp File Reference

Classes

- class dc::wb_inhib_cfg_t
- class dc::wideband_inhib_vars_t
- class dc::dc_vars_t
- class dc::dc_vars_validator_t
- class dc::dc_t
- class dc::dc_if_t

Namespaces

• dc

Macros

#define DUPVEC(x) v.x.data = MHASignal::dupvec_chk(v.x.data,s)

Functions

- unsigned int dc::get_audiochannels (unsigned int totalchannels, std::string acname, algo_comm_t ac)
- 6.30.1 Macro Definition Documentation
- 6.31 dc_afterburn.cpp File Reference

Namespaces

DynComp

dynamic compression related classes and functions

Functions

float mylogf (float x)

6.31.1 Function Documentation

```
6.31.1.1 float mylogf ( float x )
```

6.32 dc_afterburn.h File Reference

Classes

class DynComp::dc_afterburn_vars_t
 Variables for dc_afterburn_t (p. 276) class.

• class DynComp::dc_afterburn_rt_t

Real-time class for after burn effect.

class DynComp::dc_afterburn_t

Afterburn class, to be defined as a member of compressors.

Namespaces

DynComp

dynamic compression related classes and functions

6.33 dc simple.cpp File Reference

Classes

- class dc_simple::dc_vars_t
- class dc_simple::dc_vars_validator_t
- class dc_simple::level_smoother_t
- class dc_simple::dc_t
- class dc_simple::dc_t::line_t
- class dc_simple::dc_if_t

Namespaces

dc_simple

Typedefs

- typedef MHAPlugin::plugin_t< dc_t > dc_simple::DC
- typedef MHAPlugin::config_t< level_smoother_t > dc_simple::LEVEL

Functions

- void dc_simple::test_fail (const std::vector< float > &v, unsigned int s, const std::string &name)
- std::vector< float > dc_simple::force_resize (const std::vector< float > &v, unsigned int s, const std::string &name)
- mha_real_t dc_simple::not_zero (mha_real_t x, const std::string &comment="")

6.34 delay.cpp File Reference

Classes

class delay::interface_t

Namespaces

delay

6.35 delaysum.cpp File Reference

Classes

class delaysum::delaysum_t

Runtime configuration of the delaysum plugin.

class delaysum::delaysum if t

Interface class for the delaysum plugin.

Namespaces

delaysum

This namespace contains the delaysum plugin.

6.36 doasym_classification.cpp File Reference

- #define PATCH_VAR(var) patchbay.connect(&var.valuechanged, this, &doasvm_← classification::update_cfg)
- #define INSERT_PATCH(var) insert_member(var); PATCH_VAR(var)

```
6.36.1 Macro Definition Documentation
```

6.36.1.1 #define PATCH_VAR(

var) patchbay.connect(&var.valuechanged, this, &doasvm_classification
::update_cfg)

6.36.1.2 #define INSERT PATCH(

var) insert_member(var); PATCH_VAR(var)

6.37 doasym_classification.h File Reference

Classes

- class doasvm_classification_config
- · class doasvm_classification
- 6.38 doasym_feature_extraction.cpp File Reference

Macros

- #define PATCH_VAR(var) patchbay.connect(&var.valuechanged, this, &doasvm_
 feature_extraction::update_cfg)
- #define INSERT_PATCH(var) insert_member(var); PATCH_VAR(var)
- 6.38.1 Macro Definition Documentation
- 6.38.1.1 #define PATCH_VAR(

var) patchbay.connect(&var.valuechanged, this, &doasvm_feature_←
extraction::update_cfg)

6.38.1.2 #define INSERT_PATCH(

var) insert member(var); PATCH VAR(var)

6.39 doasym_feature_extraction.h File Reference

Classes

- class doasvm_feature_extraction_config
- class doasvm_feature_extraction

6.40	doc_appendix.h File Reference		
6.41	doc_examples.h File Reference		
6.42	doc_frameworks.h File Reference		
6.43	doc_general.h File Reference		
6.44	doc_kernel.h File Reference		
6.45	doc_matlab.h File Reference		
6.46	doc_mhamain.h File Reference		
6.47	doc_parser.h File Reference		
6.48	doc_plugif.cpp File Reference		
6.49	doc_plugins.h File Reference		
6.50	doc_system.h File Reference		
6.51	doc_toolbox.h File Reference		
6.52	downsample.cpp File Reference		
Classes			
•	class ds_t		
6.53	droptect.cpp File Reference		

class droptect_t

Classes

Detect dropouts in a signal with a constant spectrum.

6.54 example1.cpp File Reference

Classes

· class example1_t

This C++ class implements the simplest example plugin for the step-by-step tutorial.

6.55 example2.cpp File Reference

Classes

class example2_t

This C++ class implements the second example plugin for the step-by-step tutorial.

6.56 example3.cpp File Reference

Classes

· class example3_t

A Plugin class using the openMHA Event mechanism.

6.57 example4.cpp File Reference

Classes

class example4_t

A Plugin class using the spectral signal.

6.58 example5.cpp File Reference

Classes

- · class example5 t
- · class plugin_interface_t

Macros

• #define __declspec(p)

6.58.1 Macro Definition Documentation

6.59 example6.cpp File Reference

Classes

- class cfg_t
- class example6_t

Macros

- #define ___declspec(p)
- 6.59.1 Macro Definition Documentation

6.60 fader_spec.cpp File Reference

Classes

- class spec_fader_t
- · class fader if t
- 6.61 fader_wave.cpp File Reference

Classes

- class fader_wave::level_adapt_t
- class fader_wave::fader_wave_if_t

Namespaces

fader_wave

Macros

#define **DEBUG**(x) std::cerr << __FILE__ << ":" << __LINE__ << " " #x "=" << x << std::endl

Typedefs

typedef MHAPlugin::plugin_t< level_adapt_t > fader_wave::level_adaptor

6.61.1 Macro Definition Documentation

6.62 fftfilterbank.cpp File Reference

Classes

- class fftfilterbank::fftfb_plug_t
- class fftfilterbank::fftfb_interface_t

Namespaces

- fftfilterbank
- 6.63 fshift_hilbert.cpp File Reference

Classes

- class hilbert_shifter_t
- class frequency_translator_t
- 6.64 gain.cpp File Reference

Classes

- class gain::scaler_t
- class gain::gain_if_t

Namespaces

• gain

6.65 gaintable.cpp File Reference

Functions

- std::vector< mha_real_t > convert_f2logf (const std::vector< mha_real_t > &vF)
- bool isempty (const std::vector< std::vector< mha_real_t >> &arg)
- 6.65.1 Function Documentation

6.65.1.2 bool isempty (

const std::vector< std::vector< mha_real_t >> & arg)

6.66 gaintable.h File Reference

Classes

• class DynComp::gaintable_t

Gain table class.

Namespaces

DynComp

dynamic compression related classes and functions

Functions

• mha_real_t DynComp::interp1 (const std::vector< mha_real_t > &vX, const std ::vector< mha_real_t > &vY, mha_real_t X)

One-dimensional linear interpolation.

mha_real_t DynComp::interp2 (const std::vector< mha_real_t > &vX, const std
 ::vector< mha_real_t > &vY, const std::vector< std::vector< mha_real_t > > &mZ,
 mha_real_t X, mha_real_t Y)

Linear interpolation in a two-dimensional field.

6.67 generatemhaplugindoc.cpp File Reference

Classes

class latex_doc_t

Functions

- std::string conv2latex (std::string s, bool iscolored=false)
- void create_latex_doc (std::map< std::string, std::string > &doc, const std::string &plug-name, const std::string &plugin_macro)
- int **main** (int argc, char **argv)

```
6.67.1 Function Documentation
```

char ** argv)

6.68 hann.cpp File Reference

Macros

• #define PI 3.14159265358979323846

Functions

- float * hannf (const unsigned int N)
- double * hann (const unsigned int N)
- 6.68.1 Macro Definition Documentation
- 6.68.1.1 #define PI 3.14159265358979323846
- 6.68.2 Function Documentation
- 6.68.2.1 float* hannf (const unsigned int N)
- 6.68.2.2 double* hann (const unsigned int N)
- 6.69 hann.h File Reference

Functions

- float * hannf (const unsigned int N)
- double * hann (const unsigned int N)

```
6.69.1 Function Documentation
6.69.1.1 float* hannf (
                      const unsigned int N)
6.69.1.2 double* hann (
                      const unsigned int N)
6.70 identity.cpp File Reference
Classes

    class identity_t

6.71 ifftshift.cpp File Reference
Functions
    void ifftshift (mha_wave_t *spec)
6.71.1 Function Documentation
6.71.1.1 void ifftshift (
                      mha_wave_t * spec )
6.72 ifftshift.h File Reference
Functions
   void ifftshift (mha_wave_t *spec)
6.72.1 Function Documentation
6.72.1.1 void ifftshift (
                      mha_wave_t * spec )
6.73 iirfilter.cpp File Reference
Classes
    · class iirfilter_t
```

6.74 lpc.cpp File Reference

Macros

- #define PATCH_VAR(var) patchbay.connect(&var.valuechanged, this, &lpc::update_←
 cfg)
- #define INSERT PATCH(var) insert member(var); PATCH VAR(var)

Functions

```
    void Levinson2 (unsigned int P, const std::vector < mha_real_t > &R, std::vector < mha←real_t > &A)
```

- 6.74.1 Macro Definition Documentation
- 6.74.1.1 #define PATCH_VAR(

 var) patchbay.connect(&var.valuechanged, this, &lpc::update cfg)
- 6.74.1.2 #define INSERT_PATCH(

 var) insert member(var); PATCH VAR(var)
- 6.74.2 Function Documentation
- 6.75 lpc.h File Reference

Classes

- class lpc_config
- class **lpc**
- 6.76 | lpc_bl_predictor.cpp File Reference

Macros

- #define PATCH_VAR(var) patchbay.connect(&var.valuechanged, this, &lpc_bl_← predictor::update_cfg)
- #define INSERT_PATCH(var) insert_member(var); PATCH_VAR(var)

6.76.1 Macro Definition Documentation

6.76.1.1 #define PATCH_VAR(

var) patchbay.connect(&var.valuechanged, this, &lpc_bl_predictor
::update cfg)

6.76.1.2 #define INSERT_PATCH(

var) insert_member(var); PATCH_VAR(var)

6.77 lpc_bl_predictor.h File Reference

Classes

- class lpc_bl_predictor_config
- class lpc_bl_predictor

Macros

- #define **EPSILON** 1e-10
- 6.77.1 Macro Definition Documentation
- 6.77.1.1 #define EPSILON 1e-10
- 6.78 lpc burg-lattice.cpp File Reference

Macros

- #define PATCH_VAR(var) patchbay.connect(&var.valuechanged, this, &lpc_burglattice
 ::update_cfg)
- #define INSERT_PATCH(var) insert_member(var); PATCH_VAR(var)
- 6.78.1 Macro Definition Documentation
- 6.78.1.1 #define PATCH_VAR(

_cfg)

var) patchbay.connect(&var.valuechanged, this, &lpc_burglattice::update←

6.78.1.2 #define INSERT_PATCH(

var) insert_member(var); PATCH_VAR(var)

6.79 lpc_burg-lattice.h File Reference

Classes

- class lpc_burglattice_config
- class lpc_burglattice

Macros

- #define EPSILON 1e-10
- 6.79.1 Macro Definition Documentation
- 6.79.1.1 #define EPSILON 1e-10
- 6.80 matrixmixer.cpp File Reference

Classes

- class matrixmixer::cfg_t
- class matrixmixer::matmix_t

Namespaces

- matrixmixer
- 6.81 mha.cpp File Reference

Functions

- int **mhamain** (int argc, char *argv[])
- int main (int argc, char *argv[])
- 6.81.1 Function Documentation

- 6.82 mha.h File Reference

common types for MHA kernel, MHA framework applications and external plugins

Classes

struct mha_complex_t

Type for complex floating point values.

struct mha_direction_t

Channel source direction structure.

struct mha_channel_info_t

Channel information structure.

struct mha_wave_t

Waveform signal structure.

struct mha spec t

Spectrum signal structure.

struct mha_audio_descriptor_t

Description of an audio fragment (planned as a replacement of mhaconfig_t (p. 463)).

struct mha audio t

An audio fragment in the openMHA (planned as a replacement of **mha_wave_t** (p. 455) and **mha_spec_t** (p. 425)).

struct mhaconfig_t

MHA prepare configuration structure.

struct comm_var_t

Algorithm communication variable structure.

struct algo_comm_t

A reference handle for algorithm communication variables.

Macros

#define MHA_CALLBACK_TEST(x)

Test macro to compare function type definition and declaration.

- #define MHA CALLBACK TEST PREFIX(prefix, x)
- #define MHA_XSTRF(x) MHA_STRF(x)
- #define MHA STRF(x) #x
- #define MHA_VERSION_MAJOR 4

Major version number of MHA.

#define MHA VERSION MINOR 5

Minor version number of MHA.

#define MHA VERSION RELEASE 8

Release number of MHA.

#define MHA_VERSION_BUILD 0

Build number of MHA (currently unused)

#define MHA_STRUCT_SIZEMATCH (unsigned int)((sizeof(mha_real_t)==4)+2*(sizeof(mha complex_t)==8)+4*(sizeof(mha_wave_t)==8+2*sizeof(void*))+8*(sizeof(mha_spec t)==8+2*sizeof(void*))+16*(sizeof(mhaconfig_t)==24))

Test number for structure sizes.

#define MHA_VERSION (unsigned int)((MHA_STRUCT_SIZEMATCH | (MHA_VERS → ION_RELEASE << 8) | (MHA_VERSION_MINOR << 16) | (MHA_VERSION_MAJOR << 24)))

Full version number of MHA kernel.

#define MHA_VERSION_STRING MHA_XSTRF(MHA_VERSION_MAJOR) "." MHA_

 XSTRF(MHA_VERSION_MINOR)

Version string of MHA kernel (major.minor)

#define MHA_RELEASE_VERSION_STRING MHA_XSTRF(MHA_VERSION_MAJOR)
 "." MHA_XSTRF(MHA_VERSION_MINOR)
 "." MHA_XSTRF(MHA_VERSION_RELE ASE)

Version string of MHA kernel (major.minor.release)

- #define MHA WAVEFORM 0
- #define MHA SPECTRUM 1
- #define MHA DOMAIN MAX 2
- #define MHA DOMAIN_UNKNOWN MHA_DOMAIN_MAX
- #define MHA AC UNKNOWN 0
- #define MHA AC CHAR 1
- #define MHA_AC_INT 2
- #define MHA AC MHAREAL 3
- #define MHA AC FLOAT 4
- #define MHA_AC_DOUBLE 5
- #define MHA_AC_MHACOMPLEX 6
- #define MHA AC VEC FLOAT 51
- #define MHA AC USER 1000

Typedefs

- typedef unsigned int mha domain t
- typedef float mha_real_t

openMHA type for real numbers

typedef void * mha_fft_t

Handle for an FFT object.

- typedef struct algo comm t algo comm t
- typedef unsigned int(* MHAGetVersion_t) (void)
- typedef int(* MHAInit_t) (algo_comm_t algo_comm, const char *chain, const char *algo, void **h)
- typedef int(* MHAPrepare t) (void *h, mhaconfig t *cfg)
- typedef int(* MHARelease_t) (void *h)
- typedef void(* MHADestroy t) (void *h)
- typedef int(* MHASet t) (void *h, const char *cmd, char *retval, unsigned int len)
- typedef const char *(* MHAStrError_t) (void *h, int err)
- typedef int(* MHAProc_wave2wave_t) (void *h, mha_wave_t *sIn, mha_wave_t **s
 — Out)
- typedef int(* MHAProc_wave2spec_t) (void *h, mha_wave_t *sln, mha_spec_t **s
 Out)
- typedef int(* MHAProc_spec2wave_t) (void *h, mha_spec_t *sIn, mha_wave_t **s
 — Out)
- typedef int(* MHAProc_spec2spec_t) (void *h, mha_spec_t *sIn, mha_spec_t **sOut)
- typedef const char *(* MHAPluginDocumentation_t) (void)
- typedef const char *(* MHAPluginCategory_t) (void)

6.82.1 Detailed Description

common types for MHA kernel, MHA framework applications and external plugins

6.82.2 Macro Definition Documentation

Test macro to compare function type definition and declaration.

6.82.2.5 #define MHA_VERSION_MAJOR 4

Major version number of MHA.

6.82.2.6 #define MHA_VERSION_MINOR 5

Minor version number of MHA.

6.82.2.7 #define MHA_VERSION_RELEASE 8

Release number of MHA.

6.82.2.8 #define MHA_VERSION_BUILD 0

Build number of MHA (currently unused)

6.82.2.9 #define MHA_STRUCT_SIZEMATCH (unsigned int)((sizeof(mha_real_t)==4)+2*(sizeof(mha ← complex_t)==8)+4*(sizeof(mha_wave_t)==8+2*sizeof(void*))+8*(sizeof(mha_spec_← t)==8+2*sizeof(void*))+16*(sizeof(mhaconfig_t)==24))

Test number for structure sizes.

6.82.2.10 #define MHA_VERSION (unsigned int)((MHA_STRUCT_SIZEMATCH | (MHA_VERSION_RELEASE << 8) | (MHA_VERSION_MINOR << 16) | (MHA_VERSION_MAJOR << 24)))

Full version number of MHA kernel.

6.82.2.11 #define MHA_VERSION_STRING MHA_XSTRF(MHA_VERSION_MAJOR) "." MHA_XSTRF(MHA_VERSION_MINOR)

Version string of MHA kernel (major.minor)

6.82.2.12 #define MHA_RELEASE_VERSION_STRING MHA_XSTRF(MHA_VE← RSION_MAJOR) "." MHA_XSTRF(MHA_VERSION_MINOR) "." MHA_XSTRF(MHA_VERSION_RELEASE)

Version string of MHA kernel (major.minor.release)

- 6.82.2.13 #define MHA_WAVEFORM 0
- 6.82.2.14 #define MHA_SPECTRUM 1
- 6.82.2.15 #define MHA_DOMAIN_MAX 2
- 6.82.2.16 #define MHA_DOMAIN_UNKNOWN MHA DOMAIN MAX
- 6.82.2.17 #define MHA AC UNKNOWN 0
- 6.82.2.18 #define MHA_AC_CHAR 1
- 6.82.2.19 #define MHA AC INT 2
- 6.82.2.20 #define MHA AC MHAREAL 3
- 6.82.2.21 #define MHA_AC_FLOAT 4
- 6.82.2.22 #define MHA_AC_DOUBLE 5
- 6.82.2.23 #define MHA_AC_MHACOMPLEX 6
- 6.82.2.24 #define MHA_AC_VEC_FLOAT 51
- 6.82.2.25 #define MHA AC USER 1000
- 6.82.3 Typedef Documentation

- 6.82.3.1 typedef unsigned int mha_domain_t
- 6.82.3.2 typedef struct algo_comm_t algo_comm_t
- 6.82.3.3 typedef unsigned int(* MHAGetVersion_t) (void)
- 6.82.3.4 typedef int(* MHAInit_t) (algo_comm_t algo_comm, const char *chain, const char *algo, void **h)
- 6.82.3.5 typedef int(* MHAPrepare_t) (void *h, mhaconfig_t *cfg)
- 6.82.3.6 typedef int(* MHARelease_t) (void *h)
- 6.82.3.7 typedef void(* MHADestroy_t) (void *h)
- 6.82.3.8 typedef int(* MHASet_t) (void *h, const char *cmd, char *retval, unsigned int len)
- 6.82.3.9 typedef const char*(* MHAStrError t) (void *h, int err)
- 6.82.3.10 typedef int(* MHAProc_wave2wave_t) (void *h, mha_wave_t *sln, mha_wave_t **sOut)
- 6.82.3.11 typedef int(* MHAProc_wave2spec_t) (void *h, mha_wave_t *sln, mha_spec_t **sOut)
- 6.82.3.12 typedef int(* MHAProc_spec2wave_t) (void *h, mha_spec_t *sln, mha_wave_t **sOut)
- 6.82.3.13 typedef int(* MHAProc_spec2spec_t) (void *h, mha_spec_t *sln, mha_spec_t **sOut)
- 6.82.3.14 typedef const char*(* MHAPluginDocumentation_t) (void)
- 6.82.3.15 typedef const char*(* MHAPluginCategory_t) (void)
- 6.83 mha_algo_comm.cpp File Reference

Macros

- #define AC SUCCESS 0
- #define AC_INVALID_HANDLE -1
- #define AC INVALID NAME -2
- #define AC STRING TRUNCATED -3
- #define AC_INVALID_OUTPTR -4
- #define **AC_TYPE_MISMATCH** -5
- #define AC_DIM_MISMATCH -6

Variables

algo_comm_t algo_comm_default

```
6.83.1 Macro Definition Documentation
```

- 6.83.1.1 #define AC_SUCCESS 0
- 6.83.1.2 #define AC_INVALID_HANDLE -1
- 6.83.1.3 #define AC_INVALID_NAME -2
- 6.83.1.4 #define AC_STRING_TRUNCATED -3
- 6.83.1.5 #define AC_INVALID_OUTPTR -4
- 6.83.1.6 #define AC_TYPE_MISMATCH -5
- 6.83.1.7 #define AC_DIM_MISMATCH -6
- 6.83.2 Variable Documentation
- 6.83.2.1 algo_comm_t algo_comm_default
- 6.84 mha_algo_comm.h File Reference

Header file for Algorithm Communication.

Classes

class MHA_AC::spectrum_t

Insert a MHASignal::spectrum_t (p. 755) class into the AC space.

class MHA_AC::waveform_t

Insert a MHASignal::waveform_t (p. 767) class into the AC space.

class MHA_AC::int_t

Insert a integer variable into the AC space.

· class MHA AC::float t

Insert a float point variable into the AC space.

class MHA_AC::double_t

Insert a double precision floating point variable into the AC space.

- · class MHA AC::stat t
- class MHA_AC::ac2matrix_helper_t
- class MHA_AC::ac2matrix_t

Copy AC variable to a matrix.

class MHA_AC::acspace2matrix_t

Copy all or a subset of all numeric AC variables into an array of matrixes.

Namespaces

· MHA AC

Functions and classes for Algorithm Communication (AC) support.

Functions

- mha_spec_t MHA_AC::get_var_spectrum (algo_comm_t ac, const std::string &name)

 Convert an AC variable into a spectrum.
- mha_wave_t MHA_AC::get_var_waveform (algo_comm_t ac, const std::string &name)

Convert an AC variable into a waveform.

• int MHA_AC::get_var_int (algo_comm_t ac, const std::string &name)

Return value of an integer scalar AC variable.

- float MHA_AC::get_var_float (algo_comm_t ac, const std::string &name)

 Return value of an floating point scalar AC variable.
- std::vector< float > MHA_AC::get_var_vfloat (algo_comm_t ac, const std::string &name)

Return value of an floating point vector AC variable as standard vector of floats.

6.84.1 Detailed Description

Header file for Algorithm Communication.

6.85 mha_algo_comm.hh File Reference

Classes

- class MHAKernel::comm_var_map_t
- class MHAKernel::algo_comm_class_t

Namespaces

MHAKernel

Macros

#define ALGO_COMM_ID_STR "MFVK3jL5rmeus1XtggEl971aXCR/GU7RRehKz4k
 Qtrg="

Functions

algo_comm_class_t * MHAKernel::algo_comm_safe_cast (void *)

Variables

algo_comm_t algo_comm_default

6.85.1 Macro Definition Documentation

6.85.1.1 #define ALGO COMM ID STR "MFVK3jL5rmeus1XtggEl971aXCR/GU7RRehKz4kQtrg="

6.85.2 Variable Documentation

6.85.2.1 algo_comm_t algo_comm_default

6.86 mha defs.h File Reference

Preprocessor definitions common to all MHA components.

Macros

- #define __MHA_FUN__ _FUNC__
- #define CHECK_EXPR(x) {if(!(x)){throw MHA_Error(__FILE__,__LINE__,"The expression \"" #x "\" is invalid.");}}
- #define CHECK_VAR(x) {if(!(x)){throw MHA_Error(__FILE__,__LINE__,"The variable \"" #x "\" is not defined.");}}
- #define __declspec(p)
- #define M_PI 3.14159265358979323846

Define pi if it is not defined yet.

• #define **MIN**(a, b) (((a)<(b))?(a):(b))

Macro for minimum function.

• #define **MAX**(a, b) (((a)>(b))?(a):(b))

Macro for maximum function.

- #define MHA EAR LEFT 0
- #define MHA EAR RIGHT 1
- #define MHA EAR MAX 2

6.86.1 Detailed Description

Preprocessor definitions common to all MHA components.

This file contains all preprocessor and type definitions which are common to all Master Hearing Aid components.

```
6.86.2 Macro Definition Documentation
```

```
6.86.2.1 #define __MHA_FUN__ __FUNC__
```

6.86.2.2 #define CHECK_EXPR(

x) {if(!(x)){throw MHA_Error(__FILE__,_LINE__,"The expression \"" #x "\" is invalid.");}}

6.86.2.3 #define CHECK_VAR(x) {if(!(x)){throw MHA_Error(__FILE__,_LINE__,"The variable \"" #x "\" is not defined.");}}

6.86.2.5 #define M_PI 3.14159265358979323846

b)(((a)<(b))?(a):(b))

Define pi if it is not defined yet.

Macro for minimum function.

Macro for maximum function.

6.86.2.8 #define MHA_EAR_LEFT 0

6.86.2.9 #define MHA_EAR_RIGHT 1

6.86.2.10 #define MHA_EAR_MAX 2

6.87 mha_errno.c File Reference

Macros

• #define STRLEN 0x1000

Functions

- const char * **mha strerror** (int mhaerrno)
- void mha_set_user_error (const char *str)

Variables

- char next_except_str [STRLEN] = ""
- const char * cstr_strerror [MHA_ERR_USER]
- 6.87.1 Macro Definition Documentation
- 6.87.1.1 #define STRLEN 0x1000
- 6.87.2 Function Documentation
- 6.87.2.1 const char* mha_strerror (int *mhaerrno*)
- 6.87.2.2 void mha_set_user_error (const char * str)
- 6.87.3 Variable Documentation
- 6.87.3.1 char next_except_str[STRLEN] = ""
- 6.87.3.2 const char* cstr_strerror[MHA_ERR_USER]
- 6.88 mha errno.h File Reference

Macros

- #define MHA_ERR_SUCCESS 0
- #define MHA ERR UNKNOWN 1
- #define MHA_ERR_INVALID_HANDLE 2
- #define MHA_ERR_NULL 3
- #define MHA ERR VARRANGE 4
- #define MHA_ERR_VARFMT 5
- #define MHA_ERR_USER 10000

Functions

- const char * mha_strerror (int mhaerrno)
- void mha_set_user_error (const char *str)

```
6.88.1 Macro Definition Documentation
6.88.1.1
        #define MHA_ERR_SUCCESS 0
        #define MHA_ERR_UNKNOWN 1
6.88.1.2
6.88.1.3
        #define MHA_ERR_INVALID_HANDLE 2
6.88.1.4
        #define MHA_ERR_NULL 3
6.88.1.5
        #define MHA_ERR_VARRANGE 4
6.88.1.6
        #define MHA_ERR_VARFMT 5
6.88.1.7 #define MHA_ERR_USER 10000
6.88.2 Function Documentation
6.88.2.1 const char* mha_strerror (
                     int mhaerrno )
6.88.2.2 void mha_set_user_error (
                    const char * str )
6.89
      mha_error.cpp File Reference
```

Implementation of openMHA error handling.

Namespaces

· mha error helpers

Functions

- unsigned mha_error_helpers::digits (unsigned n)
 Compute number of decimal digits required to represent an unsigned integer.
- unsigned **mha_error_helpers::snprintf_required_length** (const char *formatstring,...)

 snprintf_required_length Compute the number of bytes (excluding the terminating nul) required to store the result of an snprintf.
- void mha_debug (const char *fmt,...)
 Print an info message (stderr on Linux, OutputDebugString in Windows).

6.89.1 Detailed Description

Implementation of openMHA error handling.

This file forms a seperate library.

6.90 mha error.hh File Reference

Classes

class MHA_Error

Error reporting exception class.

Namespaces

mha_error_helpers

Macros

- #define Getmsg(e) ((e).get_msg())
- #define MHA_ErrorMsg(x) MHA_Error(__FILE__,__LINE__,"%s",x)

Throw an openMHA error with a text message.

#define MHA_assert(x) if(!(x)) throw MHA_Error(__FILE__,__LINE__,"\"%s\" is false.",#x)

Assertion macro, which throws an MHA_Error (p. 406).

• #define MHA_assert_equal(a, b) if(a != b) throw MHA_Error(__FILE__,__LINE__ \leftarrow ,"\"%s == %s\" is false (%s = %g, %s = %g).",#a,#b,#a,(double)(a),#b,(double)(b))

Equality assertion macro, which throws an **MHA_Error** (p. 406) with the values.

Functions

void mha_debug (const char *fmt,...)

Print an info message (stderr on Linux, OutputDebugString in Windows).

- unsigned **mha_error_helpers::digits** (unsigned n)
 - Compute number of decimal digits required to represent an unsigned integer.
- unsigned **mha_error_helpers::snprintf_required_length** (const char *formatstring,...)

 snprintf_required_length Compute the number of bytes (excluding the terminating nul) required to store the result of an snprintf.

6.90.1 Macro Definition Documentation

```
6.90.1.1 #define Getmsg(

e ) ((e).get_msg())
```

6.91 mha_event_emitter.h File Reference

Classes

- class MHAEvents::connector_base_t
- class MHAEvents::emitter_t

Class for emitting openMHA events.

Namespaces

MHAEvents

Collection of event handling classes.

- 6.92 mha_events.cpp File Reference
- 6.93 mha_events.h File Reference

Classes

- class MHAEvents::connector_t< receiver_t >
- class MHAEvents::patchbay_t< receiver_t >

Patchbay which connects any event emitter with any member function of the parameter class.

Namespaces

MHAEvents

Collection of event handling classes.

6.94 mha_fftfb.cpp File Reference

Classes

- class MHAOvlFilter::barkscale::hz2bark_t
- class MHAOvIFilter::barkscale::bark2hz_t

Namespaces

MHAOvIFilter

Namespace for overlapping FFT based filter bank classes and functions.

- MHAOvlFilter::barkscale
- MHAOvlFilter::FreqScaleFun

Transform functions from linear scale in Hz to new frequency scales.

MHAOvlFilter::ShapeFun

Shape functions for overlapping filters.

Macros

#define BARKSCALE ENTRIES 50

Functions

mha_real_t MHAOvIFilter::FreqScaleFun::hz2hz (mha_real_t x)

Dummy scale transformation Hz to Hz.

- mha real t MHAOvIFilter::FreqScaleFun::hz2khz (mha real t x)
- mha real t MHAOvIFilter::FreqScaleFun::hz2octave (mha real t x)
- mha_real_t MHAOvlFilter::FreqScaleFun::hz2third_octave (mha_real_t x)
- mha_real_t MHAOvlFilter::FreqScaleFun::hz2bark (mha_real_t x)

Transformation to bark scale.

- mha_real_t MHAOvlFilter::FreqScaleFun::hz2bark_analytic (mha_real_t)
- mha_real_t MHAOvIFilter::FreqScaleFun::hz2erb (mha_real_t)
- mha_real_t MHAOvlFilter::FreqScaleFun::hz2erb_glasberg1990 (mha_real_t)
- mha real t MHAOvlFilter::FreqScaleFun::hz2log (mha real t x)

Third octave frequency scale.

- mha_real_t MHAOvlFilter::FreqScaleFun::inv_scale (mha_real_t, mha_real_
 —
 t(*)(mha_real_t))
- mha_real_t MHAOvlFilter::ShapeFun::rect (mha_real_t x)

Filter shape function for rectangular filters.

mha_real_t MHAOvlFilter::ShapeFun::linear (mha_real_t x)

Filter shape function for sawtooth filters.

• mha real t MHAOvlFilter::ShapeFun::hann (mha real t x)

Filter shape function for hanning shaped filters.

- mha real t MHAOvlFilter::ShapeFun::expflt (mha real t)
- mha_real_t MHAOvIFilter::ShapeFun::gauss (mha_real_t)
- mha_real_t filtershapefun (mha_real_t f, MHAOvlFilter::band_descriptor_t b, mha
 _real_t plateau)

Variables

- mha_real_t MHAOvlFilter::barkscale::vfreq [BARKSCALE_ENTRIES]
- mha_real_t MHAOvIFilter::barkscale::vbark [BARKSCALE_ENTRIES]

6.95 mha_fftfb.hh File Reference

Classes

- class MHAOvlFilter::band_descriptor_t
- class MHAOvIFilter::scale_var_t
- class MHAOvIFilter::fscale_t
- class MHAOvIFilter::fscale_bw_t
- class MHAOvIFilter::fftfb_vars_t

Set of configuration variables for FFT-based overlapping filters.

class MHAOvIFilter::fspacing_t

Class for frequency spacing, used by filterbank shape generator class.

class MHAOvIFilter::fftfb_t

FFT based overlapping filter bank.

class MHAOvlFilter::overlap_save_filterbank_t

A time-domain minimal phase filter bank with frequency shapes from **MHAOvIFilter::fftfb_t** (p. 574).

- class MHAOvlFilter::overlap save filterbank t::vars t
- class MHAOvlFilter::overlap_save_filterbank_analytic_t
- class MHAOvIFilter::fftfb_ac_info_t

Namespaces

MHAOvlFilter

Namespace for overlapping FFT based filter bank classes and functions.

Typedefs

typedef mha_real_t(MHAOvlFilter::scale_fun_t) (mha_real_t)

- 6.96 mha_fifo.cpp File Reference
- 6.97 mha_fifo.h File Reference

Classes

class mha_fifo_t< T >

A FIFO class for blocksize adaptation Synchronization: None.

class mha_drifter_fifo_t< T >

A FIFO class for blocksize adaptation without Synchronization.

class mha_fifo_thread_platform_t

Abstract base class for synchronizing multithreaded (producer/consumer) fifo operations.

- class mha_fifo_posix_threads_t
- class mha_fifo_thread_guard_t

Simple Mutex Guard Class.

class mha_fifo_lw_t< T >

This FIFO uses locks to synchronize access.

class mha_dblbuf_t< FIFO >

The doublebuffer adapts blocksizes between an outer process, which provides input data and takes output data, and an inner process, which processes the input signal and generates output data using a different block size than the outer process.

class mha_rt_fifo_element_t< T >

Object wrapper for **mha_rt_fifo_t** (p. 422).

class mha_rt_fifo_t< T >

Template class for thread safe, half real time safe fifo without explixit locks.

Macros

- #define mha_fifo_thread_platform_implementation_t mha_fifo_posix_threads_t
- 6.97.1 Macro Definition Documentation
- 6.97.1.1 #define mha_fifo_thread_platform_implementation_t mha_fifo_posix_threads_t
- 6.98 mha filter.cpp File Reference

Functions

std::vector< mha_real_t > diff_coeffs ()

6.98.1 Function Documentation
6.98.1.1 std::vector<mha_real_t> diff_coeffs ()

6.99 mha filter.hh File Reference

Header file for IIR filter classes.

Classes

· class MHAFilter::filter t

Generic IIR filter class.

• class MHAFilter::diff t

Differentiator class (non-normalized)

• class MHAFilter::o1_ar_filter_t

First order attack-release lowpass filter.

· class MHAFilter::o1flt lowpass t

First order low pass filter.

class MHAFilter::o1flt_maxtrack_t

First order maximum tracker.

class MHAFilter::o1flt_mintrack_t

First order minimum tracker.

- class MHAFilter::iir_filter_state_t
- class MHAFilter::iir_filter_t

IIR filter class wrapper for integration into parser structure.

- class MHAFilter::adapt filter state t
- class MHAFilter::adapt_filter_param_t
- class MHAFilter::adapt_filter_t

Adaptive filter.

class MHAFilter::fftfilter_t

FFT based FIR filter implementation.

class MHAFilter::fftfilterbank_t

FFT based FIR filterbank implementation.

struct MHAFilter::transfer function t

a structure containing a source channel number, a target channel number, and an impulse response.

struct MHAFilter::transfer_matrix_t

A sparse matrix of transfer function partitionss.

class MHAFilter::partitioned_convolution_t

A filter class for partitioned convolution.

struct MHAFilter::partitioned_convolution_t::index_t

Bookkeeping class.

class MHAFilter::smoothspec_t

Smooth spectral gains, create a windowed impulse response.

class MHAFilter::resampling_filter_t

Hann shaped low pass filter for resampling.

class MHAFilter::polyphase_resampling_t

A class that performs polyphase resampling.

class MHAFilter::blockprocessing_polyphase_resampling_t

A class that does polyphase resampling and takes into account block processing.

class MHAFilter::iir_ord1_real_t

First order recursive filter.

Namespaces

MHAFilter

Namespace for IIR and FIR filter classes.

Functions

- void MHAFilter::make_friendly_number (mha_real_t &x)
- void MHAFilter::make_friendly_number (mha_complex_t &x)
- void MHAFilter::make_friendly_number (double &x)
- void MHAFilter::o1_lp_coeffs (const mha_real_t tau, const mha_real_t fs, mha_real t &c1, mha_real_t &c2)

Set first order filter coefficients from time constant and sampling rate.

void MHAFilter::butter_stop_ord1 (double *A, double *B, double f1, double f2, double fs)

Setup a first order butterworth band stop filter.

• MHASignal::waveform_t * MHAFilter::spec2fir (const mha_spec_t *spec, const unsigned int fftlen, const MHAWindow::base_t &window, const bool minphase)

Create a windowed impulse response/FIR filter coefficients from a spectrum.

unsigned MHAFilter::gcd (unsigned a, unsigned b)

greatest common divisor

double MHAFilter::sinc (double x)

 $\sin(x)/x$ function, coping with x=0.

std::pair< unsigned, unsigned > MHAFilter::resampling_factors (float source_
 sampling_rate, float target_sampling_rate, float factor=1.0f)

Computes rational resampling factor from two sampling rates.

6.99.1 Detailed Description

Header file for IIR filter classes.

6.100 mha_generic_chain.cpp File Reference

Functions

• void mhaconfig_compare (mhaconfig_t req, mhaconfig_t avail, const char *cpref)

```
6.100.1 Function Documentation
```

6.101 mha_generic_chain.h File Reference

Classes

- class mhachain::plugs_t
- · class mhachain::chain base t

Namespaces

mhachain

Macros

- #define MHAPLUGIN_OVERLOAD_OUTDOMAIN
- 6.101.1 Macro Definition Documentation
- 6.101.1.1 #define MHAPLUGIN_OVERLOAD_OUTDOMAIN
- 6.102 mha_io_ifc.h File Reference

Typedefs

typedef int(* IOProcessEvent_t) (void *handle, mha_wave_t *sIn, mha_wave_t **s
 — Out)

Event handler for signal stream.

 $\bullet \ \ typedef\ void(*\ \textbf{IOStoppedEvent_t})\ (void\ *handle,\ int\ proc_err,\ int\ io_err)$

Event handler for stop event.

typedef void(* IOStartedEvent_t) (void *handle)

Event handler for start event.

- typedef int(* IOInit_t) (int fragsize, float samplerate, IOProcessEvent_t proc_event, void *proc_handle, IOStartedEvent_t start_event, void *start_handle, IOStoppedEvent_← t stop_event, void *stop_handle, void **handle)
- typedef int(* **IOPrepare_t**) (void *handle, int num_inchannels, int num_outchannels)
- typedef int(* IOStart t) (void *handle)
- typedef int(* IOStop_t) (void *handle)
- typedef int(* IORelease_t) (void *handle)
- typedef int(* IOSetVar_t) (void *handle, const char *cmd, char *retval, unsigned int len)
- typedef const char *(* IOStrError_t) (void *handle, int err)
- typedef void(* IODestroy_t) (void *handle)

6.102.1 Typedef Documentation

6.102.1.1 typedef int(* IOProcessEvent_t) (void *handle, mha_wave_t *sln, mha_wave_t **sOut)

Event handler for signal stream.

This event handler needs to be realtime compatible. All signal path processing will be performed in this callback.

6.102.1.2 typedef void(* IOStoppedEvent_t) (void *handle, int proc_err, int io_err)

Event handler for stop event.

This event handler needs to be realtime compatible. The function must return immediatly.

6.102.1.3 typedef void(* IOStartedEvent_t) (void *handle)

Event handler for start event.

This event handler needs to be realtime compatible. The function must return immediatly.

- 6.102.1.4 typedef int(* IOInit_t) (int fragsize, float samplerate, IOProcessEvent_t proc_event, void *proc_handle, IOStartedEvent_t start_event, void *start_handle, IOStoppedEvent_t stop event, void *stop handle, void **handle)
- 6.102.1.5 typedef int(* IOPrepare_t) (void *handle, int num_inchannels, int num_outchannels)
- 6.102.1.6 typedef int(* IOStart_t) (void *handle)
- 6.102.1.7 typedef int(* IOStop_t) (void *handle)
- 6.102.1.8 typedef int(* IORelease_t) (void *handle)
- 6.102.1.9 typedef int(* IOSetVar_t) (void *handle, const char *cmd, char *retval, unsigned int len)
- 6.102.1.10 typedef const char*(* IOStrError_t) (void *handle, int err)
- 6.102.1.11 typedef void(* IODestroy_t) (void *handle)
- 6.103 mha multisrc.cpp File Reference

Namespaces

MHAMultiSrc

Collection of classes for selecting audio chunks from multiple sources.

6.104 mha_multisrc.h File Reference

Classes

- class MHAMultiSrc::channel_t
 class MHAMultiSrc::channels_t
 class MHAMultiSrc::base_t
 - Base class for source selection.

class MHAMultiSrc::waveform_tclass MHAMultiSrc::spectrum_t

Namespaces

MHAMultiSrc

Collection of classes for selecting audio chunks from multiple sources.

6.105 mha_os.cpp File Reference

Functions

- std::string mha_getenv (std::string envvar)
- std::list< std::string > mha_library_paths ()
- std::list< std::string > list_dir (const std::string &path, const std::string &pattern)

```
6.105.1 Function Documentation
```

```
6.105.1.1 std::string mha_getenv (
std::string envvar )
```

```
6.105.1.2 std::list<std::string> mha_library_paths ( )
```

6.106 mha_os.h File Reference

Classes

class dynamiclib_t

Macros

- #define mha loadlib(x) dlopen(x,RTLD NOW)
- #define mha_freelib(x) dlclose(x)
- #define **mha freelib success**(x) (x == 0)
- #define **mha getlibfun**(h, x) x ## cb = (x ## t)dlsym(h,#x)
- #define mha getlibfun_checked(h, x) x ## _cb = (x ## _t)dlsym(h,#x);if(! x ## _cb) throw **MHA Error**(FILE , LINE ,"Function " #x " is undefined.")
- #define mha_loadlib_error(x) dlerror()
- #define mha_lib_extension ".so"
- #define mha msleep(milliseconds) usleep((milliseconds)*1000)
- #define FMTsz "%zu"

printf modifier to print integers of type size t

- #define MHA_RESOLVE(h, t) t ## _cb = (t ## _t)(h->resolve(#t))
- #define MHA RESOLVE CHECKED(h, t) t ## cb = (t ## t)(h->resolve checked(#t))

Typedefs

typedef void * mha libhandle t

Functions

- std::string mha getenv (std::string envvar)
- std::list< std::string > mha_library_paths ()
- std::list< std::string > list_dir (const std::string &path, const std::string &pattern)
- void **mha hton** (float *data, unsigned int len)
- void mha_ntoh (float *data, unsigned int len)
- void mha_hton (uint32_t *data, unsigned int len)
- void **mha ntoh** (uint32 t *data, unsigned int len)
- void mha_hton (int32_t *data, unsigned int len)
- void **mha ntoh** (int32 t *data, unsigned int len)

6.106.1 Macro Definition Documentation

```
6.106.1.1 #define mha_loadlib(
                       x) dlopen(x,RTLD NOW)
```

6.106.1.2 #define mha freelib(

6.106.1.3 #define mha freelib success(

x) (x == 0)

x) dlclose(x)

```
6.106.1.4 #define mha_getlibfun(
                        x ) x ## _cb = (x ## _t)dlsym(h,#x)
6.106.1.5 #define mha_getlibfun_checked(
                         x ) x ## _cb = (x ## _t)dlsym(h,#x);if(! x ## _cb) throw
           MHA_Error(__FILE__,__LINE__,"Function " #x " is undefined.")
6.106.1.6 #define mha loadlib error(
                        x ) dlerror()
6.106.1.7 #define mha_lib_extension ".so"
6.106.1.8 #define mha_msleep(
                        milliseconds ) usleep((milliseconds)*1000)
6.106.1.9 #define FMTsz "%zu"
printf modifier to print integers of type size_t
6.106.1.10 #define MHA_RESOLVE(
                          t ) t ## _cb = (t ## _t)(h->resolve(#t))
6.106.1.11 #define MHA RESOLVE CHECKED(
                          t ) t ## _cb = (t ## _t)(h->resolve_checked(#t))
6.106.2 Typedef Documentation
6.106.2.1 typedef void* mha libhandle t
6.106.3 Function Documentation
6.106.3.1 std::string mha_getenv (
                        std::string envvar )
6.106.3.2 std::list<std::string> mha_library_paths ( )
6.106.3.3 std::list<std::string> list_dir (
                        const std::string & path,
                        const std::string & pattern )
```

```
6.106.3.4 void mha hton (
                       float * data,
                       unsigned int len ) [inline]
6.106.3.5 void mha ntoh (
                       float * data,
                       unsigned int len ) [inline]
6.106.3.6 void mha_hton (
                       uint32 t * data,
                       unsigned int len ) [inline]
6.106.3.7 void mha ntoh (
                       uint32 t * data,
                       unsigned int len ) [inline]
6.106.3.8 void mha hton (
                       int32_t * data,
                       unsigned int len ) [inline]
6.106.3.9 void mha ntoh (
                       int32_t * data,
                       unsigned int len ) [inline]
6.107
       mha parser.cpp File Reference
```

Namespaces

MHAParser

Name space for the openMHA-Parser configuration language.

MHAParser::StrCnv

String converter namespace.

Macros

#define MHAPLATFORM "undefined-linux"

Functions

- int MHAParser::get_precision ()
- int MHAParser::StrCnv::num_brackets (const std::string &s)

Return number of brackets at beginning and end of string.

- int MHAParser::StrCnv::bracket_balance (const std::string &s)
- static std::ostream & write float (std::ostream &o, const float &f)
- static std::string parse_1_float (const std::string &s, mha_real_t &v)

This internal function parses a floating point number from the beginning of a string. static std::string parse_1_complex (const std::string &s, mha_complex_t &v)

This internal function parses a complex number from the beginning of a string.

```
6.107.1 Macro Definition Documentation
```

```
6.107.1.1 #define MHAPLATFORM "undefined-linux"
```

6.107.2 Function Documentation

This internal function parses a floating point number from the beginning of a string.

Parameters

s	The string to parse
V	The float variable to fill with a value

Returns

The rest of the string.

This internal function parses a complex number from the beginning of a string.

Parameters

s	The string to parse
V	The complex variable to fill with a value

Returns

The rest of the string.

6.108 mha_parser.hh File Reference

Header file for the MHA-Parser script language.

Classes

class MHAParser::keyword_list_t

Keyword list class.

- class MHAParser::expression t
- class MHAParser::entry_t
- class MHAParser::base_t

Base class for all parser items.

- class MHAParser::base_t::replace_t
- class MHAParser::parser_t

Parser node class.

- class MHAParser::c_ifc_parser_t
- class MHAParser::monitor t

Base class for monitors and variable nodes.

class MHAParser::variable_t

Base class for variable nodes.

class MHAParser::range_var_t

Base class for all variables with a numeric value range.

class MHAParser::kw_t

Variable with keyword list value.

class MHAParser::string_t

Variable with a string value.

class MHAParser::vstring_t

Vector variable with string values.

class MHAParser::bool t

Variable with a boolean value ("yes"/"no")

class MHAParser::int_t

Variable with integer value.

class MHAParser::float_t

Variable with float value.

class MHAParser::complex t

Variable with complex value.

class MHAParser::vint_t

Variable with vector<int> value.

class MHAParser::vfloat t

Vector variable with float value.

class MHAParser::vcomplex t

Vector variable with complex value.

· class MHAParser::mfloat_t

Matrix variable with float value.

class MHAParser::mcomplex_t

Matrix variable with complex value.

class MHAParser::int_mon_t

Monitor variable with int value.

class MHAParser::bool mon t

Monitor with string value.

class MHAParser::string_mon_t

Monitor with string value.

class MHAParser::vstring_mon_t

Vector of monitors with string value.

class MHAParser::vint_mon_t

Vector of ints monitor.

class MHAParser::vfloat_mon_t

Vector of floats monitor.

class MHAParser::mfloat mon t

Matrix of floats monitor.

class MHAParser::float mon t

Monitor with float value.

class MHAParser::complex_mon_t

Monitor with complex value.

class MHAParser::vcomplex_mon_t

Monitor with vector of complex values.

class MHAParser::mcomplex_mon_t

Matrix of complex numbers monitor.

class MHAParser::commit_t< receiver_t >

Parser variable with event-emission functionality.

class MHAParser::mhaconfig_mon_t

Namespaces

MHAParser

Name space for the openMHA-Parser configuration language.

MHAParser::StrCnv

String converter namespace.

Macros

- #define **DEFAULT_RETSIZE** 0x100000
- #define insert_member(x) insert_item(#x,&x)

Macro to insert a member variable into a parser.

Typedefs

- typedef std::string(base_t::* MHAParser::opact_t) (expression_t &)
- typedef std::string(base_t::* MHAParser::query_t) (const std::string &)
- typedef std::map< std::string, opact_t > MHAParser::opact_map_t
- typedef std::map< std::string, query_t > MHAParser::query_map_t
- typedef std::list< entry_t > MHAParser::entry_map_t
- typedef int(* MHAParser::c_parse_cmd_t) (void *, const char *, char *, unsigned int)
- typedef const char *(* MHAParser::c_parse_err_t) (void *, int)

Functions

- std::string MHAParser::commentate (const std::string &s)
- void MHAParser::trim (std::string &s)
- std::string MHAParser::cfg_dump (base_t *, const std::string &)
- std::string MHAParser::cfg_dump_short (base_t *, const std::string &)
- std::string MHAParser::all_dump (base_t *, const std::string &)
- std::string MHAParser::mon dump (base t*, const std::string &)
- std::string MHAParser::all_ids (base_t *, const std::string &, const std::string &="")
- void **MHAParser::strreplace** (std::string &, const std::string &, const std::string &) string replace function
- void MHAParser::envreplace (std::string &s)
- void MHAParser::StrCnv::str2val (const std::string &, bool &)

Convert from string.

• void MHAParser::StrCnv::str2val (const std::string &, float &)

Convert from string.

void MHAParser::StrCnv::str2val (const std::string &, mha_complex_t &)

Convert from string.

void MHAParser::StrCnv::str2val (const std::string &, int &)

Convert from string.

void MHAParser::StrCnv::str2val (const std::string &, keyword_list_t &)

Convert from string.

• void **MHAParser::StrCnv::str2val** (const std::string &, std::string &)

Convert from string.

template<class arg t >

void MHAParser::StrCnv::str2val (const std::string &s, std::vector< arg_t > &val)

Converter for vector types.

template<>

void MHAParser::StrCnv::str2val< mha_real_t > (const std::string &s, std::vector< mha_real_t > &v)

Converter for vector<mha_real_t> with Matlab-style expansion.

template<class arg_t >

void **MHAParser::StrCnv::str2val** (const std::string &s, std::vector< std::vector< arg_t >> &val)

Converter for matrix types.

• std::string MHAParser::StrCnv::val2str (const bool &)

Convert to string.

• std::string MHAParser::StrCnv::val2str (const float &)

Convert to string.

• std::string MHAParser::StrCnv::val2str (const mha complex t &)

Convert to string.

• std::string MHAParser::StrCnv::val2str (const int &)

Convert to string.

std::string MHAParser::StrCnv::val2str (const keyword_list_t &)

Convert to string.

std::string MHAParser::StrCnv::val2str (const std::string &)

Convert to string.

- std::string MHAParser::StrCnv::val2str (const std::vector< float > &)
 Convert to string.
- std::string MHAParser::StrCnv::val2str (const std::vector< mha_complex_t > &)
 Convert to string.
- std::string MHAParser::StrCnv::val2str (const std::vector< int > &)
 Convert to string.
- std::string MHAParser::StrCnv::val2str (const std::vector< std::string > &) Convert to string.
- std::string MHAParser::StrCnv::val2str (const std::vector< std::vector< float > > &)
 Convert to string.
- std::string MHAParser::StrCnv::val2str (const std::vector< std::vector< mha_ \leftarrow complex_t >> &)

Convert to string.

6.108.1 Detailed Description

Header file for the MHA-Parser script language.

- 6.108.2 Macro Definition Documentation
- 6.108.2.1 #define DEFAULT RETSIZE 0x100000

Macro to insert a member variable into a parser.

Parameters

x Member variable to be inserted. Name of member variable will be used as configuration name.

See also MHAParser::parser_t::insert_item() (p. 646).

6.109 mha plugin.hh File Reference

Header file for MHA C++ plugin class templates.

Classes

- class MHAPlugin::cfg_chain_t< runtime_cfg_t >
- class MHAPlugin::config_t< runtime_cfg_t >

Template class for thread safe configuration.

class MHAPlugin::plugin t< runtime cfg t >

The template class for C++ openMHA plugins.

Namespaces

MHAPlugin

Namespace for openMHA plugin class templates and thread-safe runtime configurations.

Macros

- #define **declspec**(p)
- #define WINAPI
- #define HINSTANCE int
- #define GITCOMMITHASH "independent-plugin-build"
- #define MHAPLUGIN_PROC_CALLBACK_PREFIX(prefix, classname, indom, outdom)
- #define MHAPLUGIN INIT CALLBACKS PREFIX(prefix, classname)
- #define **MHAPLUGIN_CALLBACKS_PREFIX**(prefix, classname, indom, outdom)

 C++ wrapper macro for the plugin interface.
- #define MHAPLUGIN_DOCUMENTATION_PREFIX(prefix, cat, doc)
- #define MHAPLUGIN_INIT_CALLBACKS(plugname, classname) MHAPLUGIN_INIT
 —CALLBACKS_PREFIX(MHA_STATIC_## plugname ## _,classname)
- #define MHAPLUGIN_CALLBACKS(plugname, classname, indom, outdom) MHAPLU
 GIN_CALLBACKS_PREFIX(MHA_STATIC_## plugname ## _,classname,indom,outdom)
 C++ wrapper macro for the plugin interface.
- #define MHAPLUGIN_DOCUMENTATION(plugname, cat, doc) MHAPLUGIN_DOCU
 MENTATION_PREFIX(MHA_STATIC_## plugname ## _,cat,doc)

Wrapper macro for the plugin documentation interface.

Functions

__attribute__ ((unused)) static const char *mha_git_commit_hash
 store git commit hash in every binary plgin to support reproducible research

6.109.1 Detailed Description

Header file for MHA C++ plugin class templates.

This file defines useful macros and template classes for the development of MHA plugins. A set of macros wraps a C++ interface around the ANSI-C plugin interface. The plugin_t template class defines a corresponding C++ class with all required members. This class can make use of thread safe configurations (config_t).

```
6.109.2 Macro Definition Documentation
6.109.2.1
        #define __declspec(
                      p)
6.109.2.2 #define WINAPI
6.109.2.3 #define HINSTANCE int
6.109.2.4 #define GITCOMMITHASH "independent-plugin-build"
6.109.2.5 #define MHAPLUGIN PROC CALLBACK PREFIX(
                      prefix,
                      classname,
                      indom,
                      outdom )
6.109.2.6 #define MHAPLUGIN_INIT_CALLBACKS_PREFIX(
                      prefix,
                      classname )
6.109.2.7 #define MHAPLUGIN DOCUMENTATION PREFIX(
                      prefix,
                      cat,
                      doc )
6.109.2.8 #define MHAPLUGIN_PROC_CALLBACK(
                      plugname,
                      classname,
                      indom.
                      outdom ) MHAPLUGIN PROC CALLBACK PREFIX(MHA_STATIC_##
          plugname ## _,classname,indom,outdom)
6.109.2.9
         #define MHAPLUGIN_INIT_CALLBACKS(
                      plugname,
                      classname ) MHAPLUGIN INIT CALLBACKS PREFIX(MHA STATIC
          ## plugname ## ,classname)
6.109.3 Function Documentation
6.109.3.1
         attribute (
                     (unused) ) const
store git commit hash in every binary plgin to support reproducible research
```

6.110 mha_profiling.c File Reference

Functions

```
void mha_tic (mha_tictoc_t *t)
```

- void mha_platform_tic (mha_platform_tictoc_t *t)
- float mha_toc (mha_tictoc_t *t)
- float mha_platform_toc (mha_platform_tictoc_t *t)

```
6.110.1 Function Documentation
```

```
6.110.1.3 float mha_toc ( mha_tictoc_t *t )
```

```
6.110.1.4 float mha_platform_toc (
mha_platform_tictoc_t * t )
```

6.111 mha_profiling.h File Reference

Classes

struct mha_tictoc_t

Typedefs

typedef mha_tictoc_t mha_platform_tictoc_t

Functions

- void mha_platform_tic (mha_platform_tictoc_t *t)
- float mha_platform_toc (mha_platform_tictoc_t *t)

```
6.111.1 Typedef Documentation
6.111.1.1 typedef mha_tictoc_t mha_platform_tictoc_t
6.111.2 Function Documentation
6.111.2.1 void mha_platform_tic (
                      mha_platform_tictoc_t * t )
6.111.2.2 float mha_platform_toc (
                      mha_platform_tictoc_t * t )
6.112 mha_ruby.cpp File Reference
Typedefs
   typedef VALUE(* rb_f_t) (...)
Functions

    static void mha_free (void *mha)

    static VALUE mha_alloc (VALUE klass)

    static VALUE mha_exit_request (VALUE self)

    static VALUE mha_parse (VALUE self, VALUE request)

   void Init_mha_ruby ()
6.112.1 Typedef Documentation
6.112.1.1 typedef VALUE(* rb_f_t) (...)
6.112.2 Function Documentation
6.112.2.1 static void mha_free (
                      void * mha ) [static]
6.112.2.2 static VALUE mha_alloc (
                      VALUE klass ) [static]
6.112.2.3 static VALUE mha_exit_request (
                      VALUE self ) [static]
6.112.2.4 static VALUE mha_parse (
                      VALUE self,
                      VALUE request ) [static]
6.112.2.5 void Init_mha_ruby ( )
6.113 mha_signal.cpp File Reference
Classes
```

class MHASignal::hilbert_fftw_t

Namespaces

MHASignal

Namespace for audio signal handling and processing classes.

Macros

- #define MHA ID UINT VECTOR "MHASignal::uint vector t"
- #define MHA_ID_MATRIX "MHASignal::matrix_t"
- #define ASSERT EQUAL DIM(a, b)
- #define ASSERT_EQUAL_DIM_PTR(a, b)

Functions

- void set minabs (mha spec t &self, const mha real t &m)
- mha_wave_t & operator+= (mha_wave_t &self, const mha_real_t &v)
 Addition operator.
- mha_wave_t & operator*= (mha_wave_t &self, const mha_real_t &v)
 Element-wise multiplication operator.
- mha_spec_t & operator*= (mha_spec_t &self, const mha_real_t &v)
 Element-wise multiplication operator.
- mha_wave_t & operator*= (mha_wave_t &self, const mha_wave_t &v)

 Element-wise multiplication operator.
- mha_spec_t & operator*= (mha_spec_t &self, const mha_wave_t &v)
 Element-wise multiplication operator.
- mha_spec_t & operator*= (mha_spec_t &self, const mha_spec_t &v)

 Element-wise multiplication operator.
- mha_spec_t & safe_div (mha_spec_t &self, const mha_spec_t &v, mha_real_t eps)
 In-Place division with lower limit on divisor.
- mha_spec_t & operator/= (mha_spec_t &self, const mha_spec_t &v)
 Element-wise division operator.
- mha_wave_t & operator/= (mha_wave_t &self, const mha_wave_t &v)
 Element-wise division operator.
- mha_spec_t & operator+= (mha_spec_t &self, const mha_spec_t &v)
 Addition operator.
- mha_spec_t & operator+= (mha_spec_t &self, const mha_real_t &v)
 Addition operator.
- mha_wave_t & operator+= (mha_wave_t &self, const mha_wave_t &v)
 Addition operator.
- mha_wave_t & operator-= (mha_wave_t &self, const mha_wave_t &v)
 Subtraction operator.
- mha_spec_t & operator-= (mha_spec_t &self, const mha_spec_t &v)
 Subtraction operator.
- mha_fft_t mha_fft_new (unsigned int n)

Create a new instance of an FFT object.

void mha_fft_free (mha_fft_t h)

Remove an FFT object.

- void mha_fft_wave2spec (mha_fft_t h, const mha_wave_t *in, mha_spec_t *out)

 Perform an FFT on each channel of input waveform signal.
- void mha_fft_wave2spec (mha_fft_t h, const mha_wave_t *in, mha_spec_t *out, bool swap)

Tranform waveform segment into spectrum.

- void mha_fft_spec2wave (mha_fft_t h, const mha_spec_t *in, mha_wave_t *out)

 Perform an inverse FFT on each channel of input spectrum.
- void mha_fft_spec2wave (mha_fft_t h, const mha_spec_t *in, mha_wave_t *out, unsigned int offset)

Perform an inverse FFT on each channel of input spectrum.

- void mha_fft_forward (mha_fft_t h, mha_spec_t *sIn, mha_spec_t *sOut)

 Complex to complex FFT (forward).
- void mha_fft_backward (mha_fft_t h, mha_spec_t *sIn, mha_spec_t *sOut)

 Complex to complex FFT (backward).
- void mha_fft_forward_scale (mha_fft_t h, mha_spec_t *sIn, mha_spec_t *sOut)

 Complex to complex FFT (forward).
- void mha_fft_backward_scale (mha_fft_t h, mha_spec_t *sIn, mha_spec_t *sOut)

 Complex to complex FFT (backward).
- void mha_fft_wave2spec_scale (mha_fft_t h, const mha_wave_t *in, mha_spec_←
 t *out)

Tranform waveform segment into spectrum.

void mha_fft_spec2wave_scale (mha_fft_t h, const mha_spec_t *in, mha_wave_←
t *out)

Tranform spectrum into waveform segment.

- std::vector< float > std_vector_float (const mha_wave_t &w)
 - Converts a mha_wave_t (p. 455) structure into a std::vector<float> (interleaved order).
- std::vector< std::vector< float >> std_vector_vector_float (const mha_wave_t &w)
 Converts a mha_wave_t (p. 455) structure into a std::vector< std::vector<float>> (outer vector represents channels).
- std::vector< std::vector< mha_complex_t >> std_vector_vector_complex (const mha_spec_t &w)

Converts a **mha_spec_t** (p. 425) structure into a std::vector< std::vector< mha_complex_t> > (outer vector represents channels).

- static mha_real_t intensity (const mha_spec_t &s, unsigned int channel, unsigned int fftlen, mha_real_t *sqfreq_response=0)
- void integrate (mha_wave_t &s)

Numeric integration of a signal vector (real values)

void integrate (mha_spec_t &s)

Numeric integration of a signal vector (complex values)

- mha_wave_t & operator^= (mha_wave_t &self, const mha_real_t &arg)
 Exponent operator.
- mha_wave_t range (mha_wave_t s, unsigned int k0, unsigned int len)

Return a time interval from a waveform chunk.

```
    mha_spec_t channels (mha_spec_t s, unsigned int ch_start, unsigned int nch)

        Return a channel interval from a spectrum.
   void assign (mha_wave_t self, const mha_wave_t &val)
         Set all values of waveform 'self' to 'val'.
   void assign (mha_spec_t self, const mha_spec_t &val)
         Set all values of spectrum 'self' to 'val'.
   void timeshift (mha_wave_t &self, int shift)
         Time shift of waveform chunk.
6.113.1 Macro Definition Documentation
6.113.1.1 #define MHA_ID_UINT_VECTOR "MHASignal::uint_vector_t"
6.113.1.2 #define MHA_ID_MATRIX "MHASignal::matrix_t"
6.113.1.3 #define ASSERT EQUAL DIM(
                       b)
6.113.1.4 #define ASSERT_EQUAL_DIM_PTR(
                       a,
                       b)
6.113.2 Function Documentation
6.113.2.1 void set_minabs (
                      mha_spec_t & self,
                      const mha real t & m)
6.113.2.2 mha_spec_t& safe_div (
                      mha_spec_t & self,
                      const mha spec t & v,
                      mha_real_t eps )
In-Place division with lower limit on divisor.
6.113.2.3 static mha_real_t intensity (
                      const mha_spec_t & s,
                      unsigned int channel,
```

mha real t * sqfreq_response = 0) [static]

6.114 mha_signal.hh File Reference

Header file for audio signal handling and processing classes.

unsigned int fftlen,

Classes

class MHASignal::spectrum_t

a signal processing class for spectral data (based on **mha_spec_t** (p. 425))

class MHASignal::waveform_t

signal processing class for waveform data (based on mha_wave_t (p. 455))

class MHASignal::doublebuffer_t

Double-buffering class.

class MHASignal::ringbuffer_t

A ringbuffer class for time domain audio signal, which makes no assumptions with respect to fragment size.

class MHASignal::hilbert_t

Hilbert transformation of a waveform segment.

class MHASignal::minphase_t

Minimal phase function.

- class MHASignal::stat t
- class MHASignal::delay_wave_t

Delayline containing wave fragments.

- · class MHASignal::delay spec t
- class MHASignal::async_rmslevel_t

Class for asynchronous level metering.

class MHASignal::uint_vector_t

Vector of unsigned values, used for size and index description of n-dimensional matrixes.

class MHASignal::matrix_t

n-dimensional matrix with real or complex floating point values.

class MHASignal::schroeder_t

Schroeder tone complex class.

class MHASignal::quantizer_t

Simple simulation of fixpoint quantization.

class MHASignal::loop_wavefragment_t

Copy a fixed waveform fragment to a series of waveform fragments of other size.

class MHASignal::delay_t

Class to realize a simple delay of waveform streams.

• class MHASignal::subsample_delay_t

implements subsample delay in spectral domain.

Namespaces

MHASignal

Namespace for audio signal handling and processing classes.

Macros

- #define M_PI 3.14159265358979323846
- #define mha_round(x) (int)((float)x+0.5)

Functions

void MHASignal::for_each (mha_wave_t *s, mha_real_t(*fun)(mha_real_t))
 Apply a function to each element of a mha_wave_t (p. 455).

mha_real_t MHASignal::lin2db (mha_real_t x)

Conversion from linear scale to dB (no SPL reference)

mha_real_t MHASignal::db2lin (mha_real_t x)

Conversion from dB scale to linear (no SPL reference)

mha_real_t MHASignal::pa2dbspl (mha_real_t x)

Conversion from linear Pascal scale to dB SPL.

• mha_real_t MHASignal::pa22dbspl (mha_real_t x, mha_real_t eps=1e-20f)

Conversion from squared Pascal scale to dB SPL.

mha_real_t MHASignal::dbspl2pa (mha_real_t x)

Conversion from dB SPL to linear Pascal scale.

mha_real_t MHASignal::smp2sec (mha_real_t n, mha_real_t srate)

conversion from samples to seconds

• mha_real_t MHASignal::sec2smp (mha_real_t sec, mha_real_t srate)

conversion from seconds to samples

- mha_real_t MHASignal::bin2freq (mha_real_t bin, unsigned fftlen, mha_real_t srate)
 conversion from fft bin index to frequency
- mha_real_t MHASignal::freq2bin (mha_real_t freq, unsigned fftlen, mha_real_t srate)
 conversion from frequency to fft bin index
- mha_real_t MHASignal::smp2rad (mha_real_t samples, unsigned bin, unsigned fftlen)
 conversion from delay in samples to phase shift
- mha_real_t MHASignal::rad2smp (mha_real_t phase_shift, unsigned bin, unsigned fftlen)

conversion from phase shift to delay in samples

template < class elem_type > std::vector < elem_type > MHASignal::dupvec (std::vector < elem_type > vec, unsigned n)

Duplicate last vector element to match desired size.

template < class elem type >

std::vector< elem_type > MHASignal::dupvec_chk (std::vector< elem_type > vec, unsigned n)

Duplicate last vector element to match desired size, check for dimension.

bool equal_dim (const mha_wave_t &a, const mha_wave_t &b)

Test for equal dimension of waveform structures.

• bool equal dim (const mha wave t &a, const mhaconfig t &b)

Test for match of waveform dimension with mhaconfig structure.

• bool equal_dim (const mha_spec_t &a, const mha_spec_t &b)

Test for equal dimension of spectrum structures.

• bool equal_dim (const mha_spec_t &a, const mhaconfig_t &b)

Test for match of spectrum dimension with mhaconfig structure.

bool equal_dim (const mha_wave_t &a, const mha_spec_t &b)

Test for equal dimension of waveform/spectrum structures.

bool equal_dim (const mha_spec_t &a, const mha_wave_t &b)

Test for equal dimension of waveform/spectrum structures.

void integrate (mha_wave_t &s)

Numeric integration of a signal vector (real values)

void integrate (mha_spec_t &s)

Numeric integration of a signal vector (complex values)

- unsigned int **mha_min_1** (unsigned int a)
- unsigned int size (const mha_wave_t &s)

Return size of a waveform structure.

unsigned int size (const mha_spec_t &s)

Return size of a spectrum structure.

unsigned int size (const mha_wave_t *s)

Return size of a waveform structure.

unsigned int size (const mha_spec_t *s)

Return size of a spectrum structure.

void clear (mha_wave_t &s)

Set all values of waveform to zero.

void clear (mha_wave_t *s)

Set all values of waveform to zero.

void clear (mha_spec_t &s)

Set all values of spectrum to zero.

void clear (mha_spec_t *s)

Set all values of spectrum to zero.

void assign (mha_wave_t self, mha_real_t val)

Set all values of waveform 'self' to 'val'.

void assign (mha_wave_t self, const mha_wave_t &val)

Set all values of waveform 'self' to 'val'.

void assign (mha_spec_t self, const mha_spec_t &val)

Set all values of spectrum 'self' to 'val'.

void timeshift (mha_wave_t &self, int shift)

Time shift of waveform chunk.

mha_wave_t range (mha_wave_t s, unsigned int k0, unsigned int len)

Return a time interval from a waveform chunk.

• mha_spec_t channels (mha_spec_t s, unsigned int ch_start, unsigned int nch)

Return a channel interval from a spectrum.

mha real t & value (mha wave t *s, unsigned int fr, unsigned int ch)

Access an element of a waveform structure.

• const mha_real_t & value (const mha_wave_t *s, unsigned int fr, unsigned int ch)

Constant access to an element of a waveform structure.

- mha real t & value (mha wave t *s, unsigned int k)
- mha_complex_t & value (mha_spec_t *s, unsigned int k)
- mha_complex_t & value (mha_spec_t *s, unsigned int fr, unsigned int ch)

Access to an element of a spectrum.

const mha_complex_t & value (const mha_spec_t *s, unsigned int fr, unsigned int ch)

Constant access to an element of a spectrum.

mha_real_t & value (mha_wave_t &s, unsigned int fr, unsigned int ch)

Access to an element of a waveform structure.

• const mha_real_t & value (const mha_wave_t &s, unsigned int fr, unsigned int ch)

Constant access to an element of a waveform structure.

mha_complex_t & value (mha_spec_t &s, unsigned int fr, unsigned int ch)
 Access to an element of a spectrum.

- const mha_complex_t & value (const mha_spec_t &s, unsigned int fr, unsigned int ch)

 Constant access to an element of a spectrum.
- std::vector< float > std_vector_float (const mha_wave_t &)
 Converts a mha_wave_t (p. 455) structure into a std::vector<float> (interleaved order).
- std::vector< std::vector< float >> std_vector_vector_float (const mha_wave_t &)
 Converts a mha_wave_t (p. 455) structure into a std::vector< std::vector<float>> (outer vector represents channels).
- std::vector< std::vector< mha_complex_t > > std_vector_vector_complex (const mha_spec_t &)

Converts a **mha_spec_t** (p. 425) structure into a std::vector< std::vector< mha_complex_t> > (outer vector represents channels).

- mha_wave_t & operator+= (mha_wave_t &, const mha_real_t &)
 Addition operator.
- mha_wave_t & operator+= (mha_wave_t &, const mha_wave_t &)
 Addition operator.
- mha_wave_t & operator-= (mha_wave_t &, const mha_wave_t &)
 Subtraction operator.
- mha_spec_t & operator-= (mha_spec_t &, const mha_spec_t &)
 Subtraction operator.
- mha_wave_t & operator*= (mha_wave_t &, const mha_real_t &)
 Element-wise multiplication operator.
- mha_wave_t & operator*= (mha_wave_t &, const mha_wave_t &)
 Element-wise multiplication operator.
- mha_spec_t & operator*= (mha_spec_t &, const mha_real_t &)
 Element-wise multiplication operator.
- mha_spec_t & operator*= (mha_spec_t &, const mha_wave_t &)
 Element-wise multiplication operator.
- mha_spec_t & operator*= (mha_spec_t &, const mha_spec_t &)

 Element-wise multiplication operator.
- mha_spec_t & operator/= (mha_spec_t &, const mha_spec_t &)
 Element-wise division operator.
- mha_wave_t & operator/= (mha_wave_t &, const mha_wave_t &)
 Element-wise division operator.
- mha_spec_t & operator+= (mha_spec_t &, const mha_spec_t &)
 Addition operator.
- mha_spec_t & operator+= (mha_spec_t &, const mha_real_t &)
 Addition operator.
- void set_minabs (mha_spec_t &, const mha_real_t &)
- mha_spec_t & safe_div (mha_spec_t &self, const mha_spec_t &v, mha_real_t eps)

 In-Place division with lower limit on divisor.

mha_wave_t & operator^= (mha_wave_t &self, const mha_real_t &arg)
 Exponent operator.

void MHASignal::copy_channel (mha_spec_t &self, const mha_spec_t &src, unsigned sch, unsigned dch)

Copy one channel of a source signal.

• void MHASignal::copy_channel (mha_wave_t &self, const mha_wave_t &src, unsigned src_channel, unsigned dest_channel)

Copy one channel of a source signal.

mha_real_t MHASignal::rmslevel (const mha_spec_t &s, unsigned int channel, unsigned int fftlen)

Return RMS level of a spectrum channel.

mha_real_t MHASignal::colored_intensity (const mha_spec_t &s, unsigned int channel, unsigned int fftlen, mha_real_t sqfreq_response[])

Colored spectrum intensity.

mha_real_t MHASignal::maxabs (const mha_spec_t &s, unsigned int channel)
 Find maximal absolute value.

mha_real_t MHASignal::rmslevel (const mha_wave_t &s, unsigned int channel)
 Return RMS level of a waveform channel.

mha_real_t MHASignal::maxabs (const mha_wave_t &s, unsigned int channel)
 Find maximal absolute value.

mha_real_t MHASignal::maxabs (const mha_wave_t &s)

Find maximal absolute value.

• mha real t MHASignal::max (const mha wave t &s)

Find maximal value.

mha_real_t MHASignal::min (const mha_wave_t &s)

Find minimal value.

mha_real_t MHASignal::sumsqr_channel (const mha_wave_t &s, unsigned int channel)

Calculate sum of squared values in one channel.

- mha_real_t MHASignal::sumsqr_frame (const mha_wave_t &s, unsigned int frame)

 Calculate sum over all channels of squared values.
- void MHASignal::scale (mha_spec_t *dest, const mha_wave_t *src)
- void MHASignal::limit (mha_wave_t &s, const mha_real_t &min, const mha_real_t &max)

Limit the singal in the waveform buffer to the range [min, max].

- mha_complex_t & set (mha_complex_t &self, mha_real_t real, mha_real_t imag=0)

 Assign real and imaginary parts to a mha_complex_t (p. 393) variable.
- mha_complex_t mha_complex (mha_real_t real, mha_real_t imag=0)

Create a new mha_complex_t (p. 393) with specified real and imaginary parts.

mha_complex_t & set (mha_complex_t &self, const std::complex < mha_real_t > &stdcomplex)

Assign a **mha_complex_t** (p. 393) variable from a std::complex.

std::complex< mha_real_t > stdcomplex (const mha_complex_t &self)

Create a std::complex from mha_complex_t (p. 393).

mha_complex_t & expi (mha_complex_t &self, mha_real_t angle)

replaces the value of the given **mha_complex_t** (p. 393) with exp(i*b).

double angle (const mha_complex_t &self)

Computes the angle of a complex number in the complex plane.

• mha_complex_t & operator+= (mha_complex_t &self, const mha_complex_t &other)

Addition of two complex numbers, overwriting the first.

mha_complex_t operator+ (const mha_complex_t &self, const mha_complex_
 t &other)

Addition of two complex numbers, result is a temporary object.

mha_complex_t & operator+= (mha_complex_t &self, mha_real_t other_real)

Addition of a complex and a real number, overwriting the complex.

• mha_complex_t operator+ (const mha_complex_t &self, mha_real_t other_real)

Addition of a complex and a real number, result is a temporary object.

- mha_complex_t & operator-= (mha_complex_t &self, const mha_complex_t &other)

 Subtraction of two complex numbers, overwriting the first.
- mha_complex_t operator- (const mha_complex_t &self, const mha_complex_← t &other)

Subtraction of two complex numbers, result is a temporary object.

- mha_complex_t & operator-= (mha_complex_t &self, mha_real_t other_real)

 Subtraction of a complex and a real number, overwriting the complex.
- mha_complex_t operator- (const mha_complex_t &self, mha_real_t other_real)

 Subtraction of a complex and a real number, result is a temporary object.
- mha_complex_t & operator*= (mha_complex_t &self, const mha_complex_t &other)
 Multiplication of two complex numbers, overwriting the first.
- mha_complex_t operator* (const mha_complex_t &self, const mha_complex_
 t &other)

Multiplication of two complex numbers, result is a temporary object.

- mha_complex_t & operator*= (mha_complex_t &self, mha_real_t other_real)

 Multiplication of a complex and a real number, overwriting the complex.
- mha_complex_t & expi (mha_complex_t &self, mha_real_t angle, mha_real_t factor)
 replaces (!) the value of the given mha_complex_t (p. 393) with a * exp(i*b)
- mha_complex_t operator* (const mha_complex_t &self, mha_real_t other_real)

 Multiplication of a complex and a real number, result is a temporary object.
- mha_real_t abs2 (const mha_complex_t &self)

Compute the square of the absolute value of a complex value.

mha_real_t abs (const mha_complex_t &self)

Compute the absolute value of a complex value.

- mha_complex_t & operator/= (mha_complex_t &self, mha_real_t other_real)

 Division of a complex and a real number, overwriting the complex.
- mha_complex_t operator/ (const mha_complex_t &self, mha_real_t other_real)

 Division of a complex and a real number, result is a temporary object.
- mha_complex_t & safe_div (mha_complex_t &self, const mha_complex_t &other, mha_real_t eps, mha_real_t eps2)

Safe division of two complex numbers, overwriting the first.

- mha_complex_t & operator/= (mha_complex_t &self, const mha_complex_t &other)

 Division of two complex numbers, overwriting the first.
- mha_complex_t operator/ (const mha_complex_t &self, const mha_complex_← t &other)

Division of two complex numbers, result is a temporary object.

mha_complex_t operator- (const mha_complex_t &self)

Unary minus on a complex results in a negative temporary object.

bool operator== (const mha_complex_t &x, const mha_complex_t &y)

Compare two complex numbers for equality.

• bool operator!= (const mha_complex_t &x, const mha_complex_t &y)

Compare two complex numbers for inequality.

void conjugate (mha_complex_t &self)

Replace (!) the value of this **mha_complex_t** (p. 393) with its conjugate.

void conjugate (mha_spec_t &self)

Replace (!) the value of this **mha_spec_t** (p. 425) with its conjugate.

mha_complex_t _conjugate (const mha_complex_t &self)

Compute the cojugate of this complex value.

void reciprocal (mha_complex_t &self)

Replace the value of this complex with its reciprocal.

• mha_complex_t _reciprocal (const mha_complex_t &self)

compute the reciprocal of this complex value.

void normalize (mha complex t &self)

Divide a complex by its absolute value, thereby normalizing it (projecting onto the unit circle).

void normalize (mha_complex_t &self, mha_real_t margin)

Divide a complex by its absolute value, thereby normalizing it (projecting onto the unit circle), with a safety margin.

bool almost (const mha_complex_t &self, const mha_complex_t &other, mha_real_t times epsilon=1e2)

Compare two complex numbers for equality except for a small relative error.

• bool operator< (const mha_complex_t &x, const mha_complex_t &y)

Compares the absolute values of two complex numbers.

std::ostream & operator<< (std::ostream &o, const mha_complex_t &c)
 ostream operator for mha_complex_t (p. 393)

• std::istream & operator>> (std::istream &i, mha complex t &c)

preliminary istream operator for mha_complex_t (p. 393) without error checking

mha_fft_t mha_fft_new (unsigned int n)

Create a new FFT handle.

void mha_fft_free (mha_fft_t h)

Destroy an FFT handle.

 $\bullet \ \ \mathsf{void} \ \ \boldsymbol{\mathsf{mha_fft_wave2spec}} \ (\boldsymbol{\mathsf{mha_fft_t}} \ \mathsf{h}, \, \mathsf{const} \ \boldsymbol{\mathsf{mha_wave_t}} \ *\mathsf{in}, \, \boldsymbol{\mathsf{mha_spec_t}} \ *\mathsf{out})$

Tranform waveform segment into spectrum.

void mha_fft_wave2spec (mha_fft_t h, const mha_wave_t *in, mha_spec_t *out, bool swaps)

Tranform waveform segment into spectrum.

void mha_fft_spec2wave (mha_fft_t h, const mha_spec_t *in, mha_wave_t *out)

Tranform spectrum into waveform segment.

void mha_fft_spec2wave (mha_fft_t h, const mha_spec_t *in, mha_wave_t *out, unsigned int offset)

Tranform spectrum into waveform segment.

• void mha_fft_forward (mha_fft_t h, mha_spec_t *sIn, mha_spec_t *sOut)

Complex to complex FFT (forward).

• void mha_fft_backward (mha_fft_t h, mha_spec_t *sIn, mha_spec_t *sOut)

Complex to complex FFT (backward).

- void mha_fft_forward_scale (mha_fft_t h, mha_spec_t *sIn, mha_spec_t *sOut)

 Complex to complex FFT (forward).
- void mha_fft_backward_scale (mha_fft_t h, mha_spec_t *sIn, mha_spec_t *sOut)

 Complex to complex FFT (backward).
- void mha_fft_wave2spec_scale (mha_fft_t h, const mha_wave_t *in, mha_spec_←
 t *out)

Tranform waveform segment into spectrum.

void mha_fft_spec2wave_scale (mha_fft_t h, const mha_spec_t *in, mha_wave_←
t *out)

Tranform spectrum into waveform segment.

template<class elem_type >

elem_type MHASignal::kth_smallest (elem_type array[], unsigned n, unsigned k)

Fast search for the kth smallest element of an array.

template < class elem type >

elem_type **MHASignal::median** (elem_type array[], unsigned n)

Fast median search.

template < class elem type >

elem_type **MHASignal::mean** (const std::vector< elem_type > &data, elem_type start ← _val)

Calculate average of elements in a vector.

template<class elem_type >

std::vector< elem_type > MHASignal::quantile (std::vector< elem_type > data, const std::vector< elem_type > &p)

Calculate quantile of elements in a vector.

 void MHASignal::saveas_mat4 (const mha_spec_t &data, const std::string &varname, FILE *fh)

Save a openMHA spectrum as a variable in a Matlab4 file.

 void MHASignal::saveas_mat4 (const mha_wave_t &data, const std::string &varname, FILE *fh)

Save a openMHA waveform as a variable in a Matlab4 file.

Save a float vector as a variable in a Matlab4 file.

void MHASignal::copy permuted (mha wave t *dest, const mha wave t *src)

Copy contents of a waveform to a permuted waveform.

Variables

unsigned long int MHASignal::signal counter = 0

Signal counter to produce signal ID strings.

6.114.2 Macro Definition Documentation

6.114.1 Detailed Description

Header file for audio signal handling and processing classes.

The classes for waveform, spectrum and filterbank signals defined in this file are "intelligent" versions of the basic waveform, spectrum and filterbank structures used in the C function calls.

```
6.114.2.1 #define M_PI 3.14159265358979323846
6.114.2.2 #define mha_round(
                      x ) (int)((float)x+0.5)
6.114.3 Function Documentation
6.114.3.1 unsigned int mha_min_1 (
                      unsigned int a ) [inline]
6.114.3.2 mha real t& value (
                      mha_wave_t * s,
                      unsigned int k ) [inline]
6.114.3.3 mha_complex_t& value (
                      mha_spec_t * s,
                      unsigned int k ) [inline]
6.114.3.4 void set_minabs (
                      mha_spec_t &,
                      const mha_real_t & )
6.114.3.5 mha_spec_t& safe_div (
                      mha_spec_t & self,
                      const mha_spec_t & v,
                      mha_real_t eps )
In-Place division with lower limit on divisor.
6.114.3.6 std::ostream& operator<< (
                      std::ostream & o,
                      const mha_complex_t & c ) [inline]
ostream operator for mha_complex_t (p. 393)
```

preliminary istream operator for mha_complex_t (p. 393) without error checking

6.115 mha_signal_fft.h File Reference

Classes

class MHASignal::fft_t

Namespaces

MHASignal

Namespace for audio signal handling and processing classes.

- 6.116 mha_tablelookup.cpp File Reference
- 6.117 mha_tablelookup.hh File Reference

Header file for table lookup classes.

Classes

- class MHATableLookup::table_t
- class MHATableLookup::linear_table_t

Class for interpolation with equidistant x values.

class MHATableLookup::xy_table_t

Class for interpolation with non-equidistant x values.

Namespaces

MHATableLookup

Namespace for table lookup classes.

6.117.1 Detailed Description

Header file for table lookup classes.

6.118 mha_tcp.cpp File Reference

Namespaces

MHA_TCP

A Namespace for TCP helper classes.

Macros

- #define INVALID_SOCKET (-1)
- #define SOCKET_ERROR (-1)
- #define closesocket(fd) (close((fd)))
- #define ASYNC_CONNECT_STARTED EINPROGRESS

Typedefs

· typedef int SOCKET

Functions

std::string MHA_TCP::STRERROR (int err)

Portable conversion from error number to error string.

std::string MHA_TCP::HSTRERROR (int err)

Portable conversion from hostname error number to error string.

• int MHA_TCP::N_ERRNO ()

Portable access to last network error number.

• int MHA TCP::H ERRNO ()

Portable access to last hostname error number.

• int MHA TCP::G ERRNO ()

Portable access to last non-network error number.

- static sockaddr_in host_port_to_sock_addr (const std::string &host, unsigned short port)
- static **SOCKET tcp_connect_to** (const std::string &host, unsigned short port)
- static SOCKET tcp_connect_to_with_timeout (const std::string &host, unsigned short port, Timeout_Watcher &timeout_watcher)
- static void * thread_start_func (void *thread)

```
6.118.1 Macro Definition Documentation
6.118.1.1 #define INVALID_SOCKET (-1)
6.118.1.2 #define SOCKET_ERROR (-1)
6.118.1.3 #define closesocket(
                       fd ) (close((fd)))
6.118.1.4 #define ASYNC_CONNECT_STARTED EINPROGRESS
6.118.2 Typedef Documentation
6.118.2.1 typedef int SOCKET
6.118.3 Function Documentation
6.118.3.1 static sockaddr_in host_port_to_sock_addr (
                      const std::string & host,
                      unsigned short port ) [static]
6.118.3.2 static SOCKET tcp_connect_to (
                      const std::string & host,
                      unsigned short port ) [static]
6.118.3.3 static SOCKET tcp_connect_to_with_timeout (
                      const std::string & host,
                      unsigned short port,
                      Timeout_Watcher & timeout_watcher ) [static]
6.118.3.4 static void* thread_start_func (
                      void * thread ) [static]
6.119
       mha tcp.hh File Reference
Classes
```

- struct MHA TCP::OS EVENT TYPE
- class MHA_TCP::Wakeup_Event

A base class for asynchronous wakeup events.

class MHA_TCP::Async_Notify

Portable Multiplexable cross-thread notification.

class MHA_TCP::Event_Watcher

OS-independent event watcher, uses select on Unix and WaitForMultipleObjects on Windows.

class MHA_TCP::Timeout_Event

class MHA_TCP::Timeout_Watcher

OS-independent event watcher with internal fixed-end-time timeout.

class MHA_TCP::Sockread_Event

Watch socket for incoming data.

- class MHA_TCP::Sockwrite_Event
- class MHA TCP::Sockaccept Event
- class MHA_TCP::Connection

Connection (p. 430) handles Communication between client and server, is used on both sides.

- class MHA TCP::Server
- class MHA TCP::Client

A portable class for a tcp client connections.

class MHA_TCP::Thread

A very simple class for portable threads.

Namespaces

MHA_TCP

A Namespace for TCP helper classes.

Macros

• #define **Sleep**(x) usleep((x)*1000);

Typedefs

typedef int MHA_TCP::SOCKET

Functions

• std::string MHA_TCP::STRERROR (int err)

Portable conversion from error number to error string.

std::string MHA_TCP::HSTRERROR (int err)

Portable conversion from hostname error number to error string.

int MHA_TCP::N_ERRNO ()

Portable access to last network error number.

• int MHA_TCP::H_ERRNO ()

Portable access to last hostname error number.

• int MHA_TCP::G_ERRNO ()

Portable access to last non-network error number.

double MHA_TCP::dtime ()

Time access function for system's high resolution time, retrieve current time as double.

double MHA TCP::dtime (const struct timeval &tv)

Time access function for unix' high resolution time, converts struct timeval to double.

• struct timeval MHA_TCP::stime (double d)

Time access function for unix' high resolution time, converts time from double to struct timeval.

6.119.1 Macro Definition Documentation

6.119.1.1 #define Sleep(

x) usleep((x)*1000);

- 6.120 mha_toolbox.h File Reference
- 6.121 mha_windowparser.cpp File Reference

Variables

- float(* wnd_funs [])(float)
- 6.121.1 Variable Documentation
- 6.121.1.1 float(* wnd_funs[])(float)
- 6.122 mha_windowparser.h File Reference

Classes

· class MHAWindow::base_t

Common base for window types.

class MHAWindow::fun_t

Generic window based on a generator function.

class MHAWindow::rect_t

Rectangular window.

class MHAWindow::bartlett_t

Bartlett window.

class MHAWindow::hanning_t

von-Hann window

class MHAWindow::hamming_t

Hamming window.

class MHAWindow::blackman_t

Blackman window.

class MHAWindow::user t

User defined window.

class MHAParser::window t

MHA configuration interface for a window function generator.

Namespaces

MHAWindow

Collection of Window types.

MHAParser

Name space for the openMHA-Parser configuration language.

Functions

float MHAWindow::rect (float)

Rectangular window function.

float MHAWindow::bartlett (float)

Bartlett window function.

float MHAWindow::hanning (float)

Hanning window function.

float MHAWindow::hamming (float)

Hamming window function.

float MHAWindow::blackman (float)

Blackman window function.

6.123 mhachain.cpp File Reference

Classes

class mhachain::mhachain_t

Namespaces

- mhachain
- 6.124 mhafw_lib.cpp File Reference
- 6.125 mhafw_lib.h File Reference

Classes

· class io_lib_t

Class for loading MHA sound IO module.

- class fw_vars_t
- class fw_t

6.126 MHAIOFile.cpp File Reference

Classes

• class io_file_t
File IO.

Macros

- #define DEBUG(x) std::cerr << __FILE__ << ":" << __LINE__ << " " << #x " = " << x< << std::endl
- #define ERR SUCCESS 0
- #define ERR_IHANDLE -1
- #define ERR_USER -1000
- #define MAX USER ERR 0x500
- #define IOInit MHA_STATIC_MHAIOFile_IOInit
- #define IOPrepare MHA STATIC MHAIOFile IOPrepare
- #define IOStart MHA_STATIC_MHAIOFile_IOStart
- #define IOStop MHA STATIC MHAIOFile IOStop
- #define IORelease MHA STATIC MHAIOFile IORelease
- #define IOSetVar MHA STATIC MHAIOFile IOSetVar
- #define IOStrError MHA_STATIC_MHAIOFile_IOStrError
- #define IODestroy MHA_STATIC_MHAIOFile_IODestroy
- #define dummy_interface_test MHA_STATIC_MHAIOFile_dummy_interface_test

Functions

- int IOInit (int fragsize, float samplerate, IOProcessEvent_t proc_event, void *proc_←
 handle, IOStartedEvent_t start_event, void *start_handle, IOStoppedEvent_t stop_←
 event, void *stop handle, void **handle)
- int IOPrepare (void *handle, int nch_in, int nch_out)
- int IOStart (void *handle)
- int IOStop (void *handle)
- int IORelease (void *handle)
- int IOSetVar (void *handle, const char *command, char *retval, unsigned int maxretlen)
- const char * IOStrError (void *handle, int err)
- void IODestroy (void *handle)
- void dummy_interface_test (void)

Variables

static char user_err_msg [MAX_USER_ERR]

```
6.126.1 Macro Definition Documentation
6.126.1.1 #define DEBUG(
                       x ) std::cerr << FILE << ":" << LINE << " " << #x " = " << x <<
          std::endl
6.126.1.2 #define ERR SUCCESS 0
6.126.1.3 #define ERR IHANDLE -1
6.126.1.4 #define ERR_USER -1000
6.126.1.5 #define MAX_USER_ERR 0x500
6.126.1.6 #define IOInit MHA_STATIC_MHAIOFile_IOInit
6.126.1.7 #define IOPrepare MHA_STATIC_MHAIOFile_IOPrepare
6.126.1.8 #define IOStart MHA_STATIC_MHAIOFile_IOStart
6.126.1.9 #define IOStop MHA_STATIC_MHAIOFile_IOStop
6.126.1.10 #define IORelease MHA_STATIC_MHAIOFile_IORelease
6.126.1.11 #define IOSetVar MHA_STATIC_MHAIOFile_IOSetVar
6.126.1.12 #define IOStrError MHA_STATIC_MHAIOFile_IOStrError
6.126.1.13 #define IODestroy MHA_STATIC_MHAIOFile_IODestroy
6.126.1.14 #define dummy_interface_test MHA_STATIC_MHAIOFile_dummy_interface_test
6.126.2 Function Documentation
6.126.2.1 int IOInit (
                      int fragsize,
                      float samplerate,
                      IOProcessEvent t proc_event,
                      void * proc_handle,
                      IOStartedEvent t start_event,
                      void * start_handle,
                      IOStoppedEvent t stop_event,
                      void * stop_handle,
                      void ** handle )
```

```
6.126.2.2 int IOPrepare (
                        void * handle,
                       int nch_in,
                       int nch_out )
6.126.2.3 int IOStart (
                        void * handle )
6.126.2.4 int IOStop (
                       void * handle )
6.126.2.5 int IORelease (
                        void * handle )
6.126.2.6 int IOSetVar (
                        void * handle,
                       const char * command,
                        char * retval,
                        unsigned int maxretlen )
6.126.2.7 const char* IOStrError (
                        void * handle,
                       int err )
6.126.2.8 void IODestroy (
                       void * handle )
6.126.2.9 void dummy_interface_test (
                        void )
6.126.3 Variable Documentation
6.126.3.1 char user_err_msg[MAX_USER_ERR] [static]
6.127 MHAIOJack.cpp File Reference
Classes

    class MHAIOJack::io_jack_t

         Main class for JACK IO.
```

Namespaces

MHAIOJack

JACK IO.

Macros

- #define ERR SUCCESS 0
- #define ERR IHANDLE -1
- #define ERR_USER -1000
- #define MAX_USER_ERR 0x500
- #define IOInit MHA_STATIC_MHAIOJack_IOInit
- #define IOPrepare MHA_STATIC_MHAIOJack_IOPrepare
- #define IOStart MHA_STATIC_MHAIOJack_IOStart
- #define IOStop MHA_STATIC_MHAIOJack_IOStop
- #define IORelease MHA_STATIC_MHAIOJack_IORelease
- #define IOSetVar MHA_STATIC_MHAIOJack_IOSetVar
- #define IOStrError MHA_STATIC_MHAIOJack_IOStrError
- #define IODestroy MHA_STATIC_MHAIOJack_IODestroy
- #define dummy_interface_test MHA_STATIC_MHAIOJack_dummy_interface_test

Functions

- int IOInit (int fragsize, float samplerate, IOProcessEvent_t proc_event, void *proc_
 handle, IOStartedEvent_t start_event, void *start_handle, IOStoppedEvent_t stop_
 event, void *stop_handle, void **handle)
- int IOPrepare (void *handle, int nch_in, int nch_out)
- int IOStart (void *handle)
- int IOStop (void *handle)
- int **IORelease** (void *handle)
- int IOSetVar (void *handle, const char *command, char *retval, unsigned int maxretlen)
- const char * IOStrError (void *handle, int err)
- void IODestroy (void *handle)
- void dummy_interface_test (void)

Variables

static char user_err_msg [MAX_USER_ERR] = ""

6.127.1 Macro Definition Documentation

- 6.127.1.1 #define ERR_SUCCESS 0
- 6.127.1.2 #define ERR_IHANDLE -1
- 6.127.1.3 #define ERR_USER -1000
- 6.127.1.4 #define MAX USER ERR 0x500

```
6.127.1.5
         #define IOInit MHA_STATIC_MHAIOJack_IOInit
6.127.1.6
         #define IOPrepare MHA_STATIC_MHAIOJack_IOPrepare
6.127.1.7
         #define IOStart MHA_STATIC_MHAIOJack_IOStart
6.127.1.8 #define IOStop MHA_STATIC_MHAIOJack_IOStop
6.127.1.9 #define IORelease MHA STATIC MHAIOJack IORelease
6.127.1.10 #define IOSetVar MHA_STATIC_MHAIOJack_IOSetVar
6.127.1.11 #define IOStrError MHA_STATIC_MHAIOJack_IOStrError
6.127.1.12 #define IODestroy MHA_STATIC_MHAIOJack_IODestroy
6.127.1.13 #define dummy_interface_test MHA_STATIC_MHAIOJack_dummy_interface_test
6.127.2 Function Documentation
6.127.2.1 int IOInit (
                       int fragsize,
                      float samplerate,
                       IOProcessEvent_t proc_event,
                       void * proc_handle,
                       IOStartedEvent t start event,
                       void * start handle,
                       IOStoppedEvent_t stop_event,
                       void * stop_handle,
                       void ** handle )
6.127.2.2 int IOPrepare (
                       void * handle,
                      int nch in,
                       int nch_out )
6.127.2.3 int IOStart (
                       void * handle )
6.127.2.4 int IOStop (
                       void * handle )
6.127.2.5 int IORelease (
                       void * handle )
```

```
6.127.2.6 int IOSetVar (
                       void * handle,
                       const char * command,
                       char * retval,
                       unsigned int maxretlen )
6.127.2.7 const char* IOStrError (
                       void * handle,
                       int err )
6.127.2.8 void IODestroy (
                       void * handle )
6.127.2.9 void dummy_interface_test (
                       void )
6.127.3 Variable Documentation
          char user_err_msg[MAX_USER_ERR] = "" [static]
6.128
       MHAIOJackdb.cpp File Reference
```

Classes

class MHAIOJackdb::io_jack_t
 Main class for JACK IO.

Namespaces

MHAIOJackdb

Macros

- #define ERR_SUCCESS 0
- #define ERR IHANDLE -1
- #define ERR USER -1000
- #define MAX_USER_ERR 0x500
- #define IOInit MHA_STATIC_MHAIOJackdb_IOInit
- #define IOPrepare MHA STATIC MHAIOJackdb IOPrepare
- #define IOStart MHA_STATIC_MHAIOJackdb_IOStart
- #define IOStop MHA_STATIC_MHAIOJackdb_IOStop
- #define IORelease MHA_STATIC_MHAIOJackdb_IORelease
- #define IOSetVar MHA_STATIC_MHAIOJackdb_IOSetVar
- #define IOStrError MHA_STATIC_MHAIOJackdb_IOStrError
- #define IODestroy MHA_STATIC_MHAIOJackdb_IODestroy
- #define dummy_interface_test MHA_STATIC_MHAIOJackdb_dummy_interface_test

Functions

int IOInit (int fragsize, float samplerate, IOProcessEvent_t proc_event, void *proc_
handle, IOStartedEvent_t start_event, void *start_handle, IOStoppedEvent_t stop_
event, void *stop_handle, void **handle)

- int IOPrepare (void *handle, int nch_in, int nch_out)
- int IOStart (void *handle)
- int **IOStop** (void *handle)
- int IORelease (void *handle)
- int IOSetVar (void *handle, const char *command, char *retval, unsigned int maxretlen)
- const char * IOStrError (void *handle, int err)
- void **IODestroy** (void *handle)
- void dummy_interface_test (void)

Variables

• static char user_err_msg [MAX_USER_ERR] = ""

6.128.1 I	Macro Definition Documentation
6.128.1.1	#define ERR_SUCCESS 0
6.128.1.2	#define ERR_IHANDLE -1
6.128.1.3	#define ERR_USER -1000
6.128.1.4	#define MAX_USER_ERR 0x500
6.128.1.5	#define IOInit MHA_STATIC_MHAIOJackdb_IOInit
6.128.1.6	#define IOPrepare MHA_STATIC_MHAIOJackdb_IOPrepare
6.128.1.7	#define IOStart MHA_STATIC_MHAIOJackdb_IOStart
6.128.1.8	#define IOStop MHA_STATIC_MHAIOJackdb_IOStop
6.128.1.9	#define IORelease MHA_STATIC_MHAIOJackdb_IORelease
6.128.1.10	#define IOSetVar MHA_STATIC_MHAIOJackdb_IOSetVar
6.128.1.11	#define IOStrError MHA_STATIC_MHAIOJackdb_IOStrError
6.128.1.12	#define IODestroy MHA_STATIC_MHAIOJackdb_IODestroy

```
#define dummy_interface_test MHA_STATIC_MHAIOJackdb_dummy_interface_test
6.128.2 Function Documentation
6.128.2.1
         int IOInit (
                        int fragsize,
                        float samplerate,
                        IOProcessEvent_t proc_event,
                        void * proc_handle,
                        IOStartedEvent t start event,
                        void * start_handle,
                        IOStoppedEvent_t stop_event,
                        void * stop_handle,
                        void ** handle )
6.128.2.2 int IOPrepare (
                        void * handle,
                        int nch_in,
                        int nch_out )
6.128.2.3 int IOStart (
                        void * handle )
6.128.2.4 int IOStop (
                        void * handle )
6.128.2.5 int IORelease (
                        void * handle )
6.128.2.6 int IOSetVar (
                        void * handle,
                        const char * command,
                        char * retval,
                        unsigned int maxretlen )
6.128.2.7 const char* IOStrError (
                        void * handle,
                        int err )
6.128.2.8 void IODestroy (
                        void * handle )
6.128.2.9 void dummy_interface_test (
                        void )
6.128.3 Variable Documentation
```

6.128.3.1 char user_err_msg[MAX USER ERR] = "" [static]

6.129 MHAIOParser.cpp File Reference

Classes

· class io parser t

Main class for Parser IO.

Macros

- #define ERR_SUCCESS 0
- #define ERR IHANDLE -1
- #define ERR_USER -1000
- #define MAX USER ERR 0x500
- #define IOInit MHA_STATIC_MHAIOParser_IOInit
- #define IOPrepare MHA STATIC MHAIOParser IOPrepare
- #define IOStart MHA_STATIC_MHAIOParser_IOStart
- #define IOStop MHA STATIC MHAIOParser IOStop
- #define IORelease MHA STATIC MHAIOParser IORelease
- #define IOSetVar MHA_STATIC_MHAIOParser_IOSetVar
- #define IOStrError MHA_STATIC_MHAIOParser_IOStrError
- #define IODestroy MHA STATIC MHAIOParser IODestroy
- #define dummy_interface_test MHA_STATIC_MHAIOParser_dummy_interface_test

Functions

- int IOInit (int fragsize, float, IOProcessEvent_t proc_event, void *proc_handle, IO
 StartedEvent_t start_event, void *start_handle, IOStoppedEvent_t stop_event, void *stop_handle, void **handle)
- int IOPrepare (void *handle, int nch_in, int nch_out)
- int **IOStart** (void *handle)
- int IOStop (void *handle)
- int IORelease (void *handle)
- int IOSetVar (void *handle, const char *command, char *retval, unsigned int maxretlen)
- const char * IOStrError (void *handle, int err)
- void IODestroy (void *handle)
- void dummy_interface_test (void)

Variables

static char user_err_msg [MAX_USER_ERR]

```
6.129.1 Macro Definition Documentation
6.129.1.1
         #define ERR_SUCCESS 0
6.129.1.2 #define ERR_IHANDLE -1
6.129.1.3 #define ERR_USER -1000
6.129.1.4 #define MAX_USER_ERR 0x500
6.129.1.5 #define IOInit MHA_STATIC_MHAIOParser_IOInit
6.129.1.6
         #define IOPrepare MHA_STATIC_MHAIOParser_IOPrepare
6.129.1.7
          #define IOStart MHA_STATIC_MHAIOParser_IOStart
6.129.1.8 #define IOStop MHA_STATIC_MHAIOParser_IOStop
6.129.1.9 #define IORelease MHA STATIC MHAIOParser IORelease
6.129.1.10 #define IOSetVar MHA_STATIC_MHAIOParser_IOSetVar
6.129.1.11 #define IOStrError MHA_STATIC_MHAIOParser_IOStrError
6.129.1.12 #define IODestroy MHA STATIC MHAIOParser IODestroy
6.129.1.13 #define dummy_interface_test MHA_STATIC_MHAIOParser_dummy_interface_test
6.129.2 Function Documentation
6.129.2.1 int IOInit (
                      int fragsize,
                      float,
                      IOProcessEvent_t proc_event,
                      void * proc_handle,
                      IOStartedEvent t start_event,
                      void * start_handle,
                      IOStoppedEvent_t stop_event,
                      void * stop handle,
                      void ** handle )
6.129.2.2 int IOPrepare (
                      void * handle,
                      int nch in,
                      int nch_out )
```

```
6.129.2.3 int IOStart (
                       void * handle )
6.129.2.4 int IOStop (
                       void * handle )
6.129.2.5 int IORelease (
                       void * handle )
6.129.2.6 int IOSetVar (
                       void * handle,
                       const char * command,
                       char * retval,
                       unsigned int maxretlen )
6.129.2.7 const char* IOStrError (
                       void * handle,
                       int err )
6.129.2.8 void IODestroy (
                       void * handle )
6.129.2.9 void dummy_interface_test (
                       void )
6.129.3 Variable Documentation
6.129.3.1 char user_err_msg[MAX_USER_ERR] [static]
6.130
       MHAIOPortAudio.cpp File Reference
```

Classes

- class MHAIOPortAudio::device_info_t
- class MHAIOPortAudio::io_portaudio_t

Main class for Portaudio sound IO.

Namespaces

MHAIOPortAudio

Macros

- #define ERR_SUCCESS 0
- #define ERR_IHANDLE -1
- #define ERR USER -1000
- #define MAX_USER_ERR 0x500
- #define IOInit MHA STATIC MHAIOPortAudio IOInit
- #define IOPrepare MHA_STATIC_MHAIOPortAudio_IOPrepare
- #define IOStart MHA_STATIC_MHAIOPortAudio_IOStart
- #define IOStop MHA_STATIC_MHAIOPortAudio_IOStop
- #define IORelease MHA_STATIC_MHAIOPortAudio_IORelease
- #define IOSetVar MHA_STATIC_MHAIOPortAudio_IOSetVar
- #define IOStrError MHA_STATIC_MHAIOPortAudio_IOStrError
- #define IODestroy MHA_STATIC_MHAIOPortAudio_IODestroy
- #define dummy_interface_test MHA_STATIC_MHAIOPortAudio_dummy_interface_
 test

Functions

- static std::string MHAIOPortAudio::parserFriendlyName (const std::string &in)
- int portaudio_callback (const void ∗input, void ∗output, unsigned long frameCount, const PaStreamCallbackTimeInfo ∗timeInfo, PaStreamCallbackFlags statusFlags, void ∗user← Data)
- int IOInit (int fragsize, float samplerate, IOProcessEvent_t proc_event, void *proc_
 handle, IOStartedEvent_t start_event, void *start_handle, IOStoppedEvent_t stop_
 event, void *stop_handle, void **handle)
- int IOPrepare (void *handle, int nch_in, int nch_out)
- int IOStart (void *handle)
- int IOStop (void *handle)
- int IORelease (void *handle)
- int IOSetVar (void *handle, const char *command, char *retval, unsigned int maxretlen)
- const char * IOStrError (void *handle, int err)
- void IODestroy (void *handle)
- void dummy_interface_test (void)

Variables

- static char user_err_msg [MAX_USER_ERR] = ""
- PaStreamCallback portaudio callback

```
6.130.1 Macro Definition Documentation
6.130.1.1 #define ERR_SUCCESS 0
6.130.1.2 #define ERR IHANDLE -1
6.130.1.3 #define ERR_USER -1000
6.130.1.4 #define MAX_USER_ERR 0x500
6.130.1.5 #define IOInit MHA_STATIC_MHAIOPortAudio_IOInit
6.130.1.6 #define IOPrepare MHA STATIC MHAIOPortAudio IOPrepare
6.130.1.7 #define IOStart MHA_STATIC_MHAIOPortAudio_IOStart
6.130.1.8 #define IOStop MHA_STATIC_MHAIOPortAudio_IOStop
6.130.1.9 #define IORelease MHA_STATIC_MHAIOPortAudio_IORelease
6.130.1.10 #define IOSetVar MHA_STATIC_MHAIOPortAudio_IOSetVar
6.130.1.11 #define IOStrError MHA_STATIC_MHAIOPortAudio_IOStrError
6.130.1.12 #define IODestroy MHA_STATIC_MHAIOPortAudio_IODestroy
6.130.1.13 #define dummy_interface_test MHA_STATIC_MHAIOPortAudio_dummy_interface_test
6.130.2 Function Documentation
6.130.2.1 int portaudio_callback (
                      const void * input,
                      void * output,
                      unsigned long frameCount,
                      const PaStreamCallbackTimeInfo * timeInfo,
                      PaStreamCallbackFlags statusFlags,
                      void * userData )
6.130.2.2 int IOInit (
                      int fragsize,
                      float samplerate.
                      IOProcessEvent t proc_event,
                      void * proc_handle,
                      IOStartedEvent t start_event,
                      void * start handle.
                      IOStoppedEvent t stop_event,
                      void * stop handle,
                      void ** handle )
```

```
6.130.2.3 int IOPrepare (
                        void * handle,
                        int nch_in,
                        int nch_out )
6.130.2.4 int IOStart (
                        void * handle )
6.130.2.5 int IOStop (
                        void * handle )
6.130.2.6 int IORelease (
                        void * handle )
6.130.2.7 int IOSetVar (
                        void * handle,
                        const char * command,
                        char * retval,
                        unsigned int maxretlen )
6.130.2.8 const char* IOStrError (
                        void * handle,
                        int err )
6.130.2.9 void IODestroy (
                        void * handle )
6.130.2.10 void dummy_interface_test (
                         void )
6.130.3 Variable Documentation
6.130.3.1
         char user_err_msg[MAX_USER_ERR] = "" [static]
6.130.3.2 PaStreamCallback portaudio_callback
6.131
        MHAIOTCP.cpp File Reference
```

Classes

class io_tcp_parser_t

The parser interface of the IOTCP library.

class io_tcp_sound_t

Sound data handling of io tcp library.

union io_tcp_sound_t::float_union

This union helps in conversion of floats from host byte order to network byte order and back again.

class io_tcp_fwcb_t

TCP sound-io library's interface to the framework callbacks.

class io_tcp_t

The tcp sound io library.

Macros

- #define ERR_SUCCESS 0
- #define ERR IHANDLE -1
- #define ERR USER -1000
- #define MAX USER ERR 0x2000
- #define MHA_ErrorMsg2(x, y) MHA_Error(__FILE__,_LINE__,(x),(y))
- #define MHA_ErrorMsg3(x, y, z) MHA_Error(__FILE___,__LINE___,(x),(y),(z))
- #define MIN_TCP_PORT 0
- #define MIN TCP PORT STR "0"
- #define MAX_TCP_PORT 65535
- #define MAX_TCP_PORT_STR "65535"
- #define IOInit MHA_STATIC_MHAIOTCP_IOInit
- #define IOPrepare MHA_STATIC_MHAIOTCP_IOPrepare
- #define IOStart MHA STATIC MHAIOTCP IOStart
- #define IOStop MHA_STATIC_MHAIOTCP_IOStop
- #define IORelease MHA STATIC MHAIOTCP IORelease
- #define IOSetVar MHA_STATIC_MHAIOTCP_IOSetVar
- #define IOStrError MHA_STATIC_MHAIOTCP_IOStrError
- #define IODestroy MHA_STATIC_MHAIOTCP_IODestroy
- #define dummy_interface_test MHA_STATIC_MHAIOTCP_dummy_interface_test

Functions

- static int copy error (MHA Error &e)
- static void * thread_startup_function (void *parameter)
- int IOInit (int fragsize, float samplerate, IOProcessEvent_t proc_event, void *proc_
 handle, IOStartedEvent_t start_event, void *start_handle, IOStoppedEvent_t stop_
 event, void *stop_handle, void **handle)
- int IOPrepare (void *handle, int num inchannels, int num outchannels)
- int IOStart (void *handle)
- int IOStop (void *handle)
- int **IORelease** (void *handle)
- int IOSetVar (void *handle, const char *cmd, char *retval, unsigned int len)
- const char * IOStrError (void *handle, int err)
- void IODestroy (void *handle)
- void dummy_interface_test (void)

Variables

static char user_err_msg [MAX_USER_ERR]

```
6.131.1 Macro Definition Documentation
6.131.1.1 #define ERR_SUCCESS 0
6.131.1.2 #define ERR_IHANDLE -1
6.131.1.3 #define ERR_USER -1000
6.131.1.4 #define MAX_USER_ERR 0x2000
6.131.1.5 #define MHA_ErrorMsg2(
                      y ) MHA_Error(__FILE__,_LINE__,(x),(y))
6.131.1.6 #define MHA_ErrorMsg3(
                      z ) MHA_Error(__FILE__,__LINE__,(x),(y),(z))
6.131.1.7 #define MIN_TCP_PORT 0
6.131.1.8 #define MIN_TCP_PORT_STR "0"
6.131.1.9 #define MAX_TCP_PORT 65535
6.131.1.10 #define MAX_TCP_PORT_STR "65535"
6.131.1.11 #define IOInit MHA_STATIC_MHAIOTCP_IOInit
6.131.1.12 #define IOPrepare MHA_STATIC_MHAIOTCP_IOPrepare
6.131.1.13 #define IOStart MHA_STATIC_MHAIOTCP_IOStart
6.131.1.14 #define IOStop MHA_STATIC_MHAIOTCP_IOStop
6.131.1.15 #define IORelease MHA_STATIC_MHAIOTCP_IORelease
6.131.1.16 #define IOSetVar MHA_STATIC_MHAIOTCP_IOSetVar
6.131.1.17 #define IOStrError MHA STATIC MHAIOTCP IOStrError
6.131.1.18 #define IODestroy MHA_STATIC_MHAIOTCP_IODestroy
6.131.1.19 #define dummy_interface_test MHA_STATIC_MHAIOTCP_dummy_interface_test
```

```
6.131.2 Function Documentation
6.131.2.1 static int copy_error (
                        MHA_Error & e ) [static]
6.131.2.2 static void* thread_startup_function (
                        void * parameter ) [static]
6.131.2.3 int IOInit (
                        int fragsize,
                        float samplerate,
                        IOProcessEvent_t proc_event,
                        void * proc handle,
                        IOStartedEvent_t start_event,
                        void * start_handle,
                        IOStoppedEvent_t stop_event,
                        void * stop_handle,
                        void ** handle )
6.131.2.4 int IOPrepare (
                        void * handle,
                        int num_inchannels,
                        int num_outchannels )
6.131.2.5 int IOStart (
                        void * handle )
6.131.2.6 int IOStop (
                        void * handle )
6.131.2.7 int IORelease (
                        void * handle )
6.131.2.8 int IOSetVar (
                        void * handle,
                        const char * cmd,
                        char * retval,
                        unsigned int len )
6.131.2.9 const char* IOStrError (
                        void * handle,
                        int err )
6.131.2.10 void IODestroy (
                         void * handle )
```

```
6.131.2.11 void dummy_interface_test (
                      void )
6.131.3 Variable Documentation
6.131.3.1 char user_err_msg[MAX_USER_ERR] [static]
6.132 mhajack.cpp File Reference
```

Functions

- static void jack_error_handler (const char *msg)
- static int dummy_jack_proc_cb (jack_nframes_t, void *)
- void make_friendly_number (jack_default_audio_sample_t &x)

Variables

- char last_jack_err_msg [MAX_USER_ERR] = ""
- int last_jack_err = 0
- 6.132.1 Function Documentation
- 6.132.1.1 static void jack_error_handler (const char * msg) [static]
- 6.132.1.2 static int dummy_jack_proc_cb (jack_nframes_t,
- void *) [static]
- 6.132.1.3 void make_friendly_number (jack_default_audio_sample_t & x) [inline]
- 6.132.2 Variable Documentation
- 6.132.2.1 char last_jack_err_msg[MAX_USER_ERR] = ""
- 6.132.2.2 int last_jack_err = 0
- 6.133 mhajack.h File Reference

Classes

class MHAJack::port t

Class for one channel/port.

class MHAJack::client_t

Generic asynchronous JACK client.

class MHAJack::client_noncont_t

Generic client for synchronous playback and recording of waveform fragments.

class MHAJack::client avg t

Generic JACK client for averaging a system response across time.

Namespaces

MHAJack

Classes and functions for openMHA and JACK interaction.

Macros

- #define MHAJACK FW STARTED 1
- #define MHAJACK STOPPED 2
- #define MHAJACK_STARTING 8
- #define IO ERROR JACK 11
- #define IO_ERROR_MHAJACKLIB 12
- #define MAX USER ERR 0x500

Functions

void MHAJack::io (mha_wave_t *s_out, mha_wave_t *s_in, const std::string &name, const std::vector< std::string > &p_out, const std::vector< std::string > &p_in, float *srate=NULL, unsigned int *fragsize=NULL, bool use_jack_transport=false)

Functional form of generic client for synchronous playback and recording of waveform fragments.

std::vector< unsigned int > MHAJack::get_port_capture_latency (const std::vector< std::string > &ports)

Return the JACK port latency of ports.

Return the JACK port latency of ports.

std::vector< unsigned int > MHAJack::get_port_playback_latency (const std::vector< std::string > &ports)

Return the JACK port latency of ports.

std::vector< int > MHAJack::get_port_playback_latency_int (const std::vector< std
 ::string > &ports)

Variables

char last_jack_err_msg [MAX_USER_ERR]

- 6.133.1 Macro Definition Documentation
- 6.133.1.1 #define MHAJACK_FW_STARTED 1
- 6.133.1.2 #define MHAJACK STOPPED 2
- 6.133.1.3 #define MHAJACK_STARTING 8
- 6.133.1.4 #define IO_ERROR_JACK 11
- 6.133.1.5 #define IO_ERROR_MHAJACKLIB 12
- 6.133.1.6 #define MAX_USER_ERR 0x500
- 6.133.2 Variable Documentation
- 6.133.2.1 char last_jack_err_msg[MAX_USER_ERR]
- 6.134 mhamain.cpp File Reference

Classes

· class mhaserver t

MHA Framework listening on TCP port for commands.

Macros

- #define MAX_LINE_LENGTH 0x100000
- #define **HELP_TEXT**
- #define GREETING_TEXT

Functions

- void **create_lock** (unsigned int p, std::string s)
- void **remove_lock** (unsigned int p)
- int mhamain (int argc, char *argv[])

- 6.135 mhapluginloader.cpp File Reference
- 6.136 mhapluginloader.h File Reference

Classes

- class PluginLoader::config_file_splitter_t
- class PluginLoader::fourway_processor_t

This abstract class defines the interface for classes that implement all types of signal domain processing supported by the MHA: wave2wave, spec2spec, wave2spec, and spec2wave.

- class PluginLoader::mhapluginloader t
- class MHAParser::mhapluginloader_t

Class to create a plugin loader in a parser, including the load logic.

Namespaces

- PluginLoader
- MHAParser

Name space for the openMHA-Parser configuration language.

Functions

- const char * PluginLoader::mhastrdomain (mha_domain_t)
- void PluginLoader::mhaconfig_compare (const mhaconfig_t &req, const mhaconfig_
 _t &avail, const std::string &pref="")

Compare two **mhaconfig_t** (p. 463) structures, and report differences as an error.

6.137 mhasndfile.cpp File Reference

Functions

- void write_wave (const mha_wave_t &sig, const char *fname, const float &srate, const int &format)
- unsigned int validator_channels (std::vector< int > channel_map, unsigned int channels)
- unsigned int **validator_length** (unsigned int maxlen, unsigned int frames, unsigned int startpos)

6.137.1 Function Documentation

```
6.137.1.1 void write_wave (

const mha_wave_t & sig,
const char * fname,
const float & srate,
const int & format )
```

6.138 mhasndfile.h File Reference

Classes

```
class MHASndFile::sf_tclass MHASndFile::sf wave t
```

Namespaces

MHASndFile

Functions

 void write_wave (const mha_wave_t &sig, const char *fname, const float &srate=44100, const int &format=SF_FORMAT_WAV|SF_FORMAT_FLOAT|SF_ENDIAN_FILE)

```
6.138.1 Function Documentation
```

```
6.138.1.1 void write_wave (

const mha_wave_t & sig,

const char * fname,

const float & srate = 44100,

const int & format = SF_FORMAT_WAV|SF_FORMAT_FLOAT|SF_ENDIAN←

_FILE )
```

6.139 multibandcompressor.cpp File Reference

Classes

- class multibandcompressor::plugin_signals_t
- class multibandcompressor::fftfb_plug_t
- class multibandcompressor::interface t

Namespaces

- multibandcompressor
- 6.140 nlms wave.cpp File Reference

Classes

- · class rt nlms t
- · class nlms_t

Macros

- #define NORMALIZATION_TYPES "[none default sum]"
- #define NORM NONE 0
- #define NORM DEFAULT 1
- #define NORM_SUM 2
- #define ESTIMATION_TYPES "[previous current]"
- #define ESTIM_PREV 0
- #define ESTIM_CUR 1

Functions

```
    void make_friendly_number_by_limiting (mha_real_t &x)
```

```
6.140.1 Macro Definition Documentation
```

```
6.140.1.1 #define NORMALIZATION_TYPES "[none default sum]"
```

```
6.140.1.2 #define NORM_NONE 0
```

6.140.1.3 #define NORM_DEFAULT 1

```
6.140.1.4 #define NORM_SUM 2
```

6.140.1.5 #define ESTIMATION_TYPES "[previous current]"

```
6.140.1.6 #define ESTIM_PREV 0
```

6.140.1.7 #define ESTIM_CUR 1

6.140.2 Function Documentation

6.141 noise.cpp File Reference

Classes

- · class cfg_t
- class noise_t

6.142 noisePowProposedScale.cpp File Reference

Classes

- class noisePowProposedScale::noisePowProposed
- class noisePowProposedScale::interface t

Namespaces

noisePowProposedScale

Macros

• #define POWSPEC FACTOR 0.0025

- 6.142.1 Macro Definition Documentation
- 6.142.1.1 #define POWSPEC_FACTOR 0.0025
- 6.143 overlapadd.cpp File Reference

Classes

- class overlapadd::overlapadd_t
- class overlapadd::overlapadd_if_t

Namespaces

- overlapadd
- 6.144 pluginbrowser.cpp File Reference
- 6.145 pluginbrowser.h File Reference

Classes

- · class plugindescription_t
- class pluginloader_t
- · class pluginbrowser t
- 6.146 prediction_error.cpp File Reference

Macros

- #define PATCH_VAR(var) patchbay.connect(&var.valuechanged, this, &prediction_← error::update_cfg)
- #define INSERT_PATCH(var) insert_member(var); PATCH_VAR(var)

Functions

void make_friendly_number_by_limiting (mha_real_t &x)

```
6.146.1 Macro Definition Documentation
```

```
6.146.1.1 #define PATCH_VAR(

var ) patchbay.connect(&var.valuechanged, this,

&prediction_error::update_cfg)
```

```
6.146.1.2 #define INSERT_PATCH(

var ) insert_member(var); PATCH_VAR(var)
```

6.146.2 Function Documentation

6.147 prediction_error.h File Reference

Classes

- class prediction_error_config
- class prediction_error
- 6.148 resampling.cpp File Reference

Classes

- class MHAPlugin_Resampling::resampling_t
- class MHAPlugin_Resampling::resampling_if_t

Namespaces

MHAPlugin_Resampling

6.149 rmslevel.cpp File Reference

Classes

- class mon_t
- class rmslevel_t
- class rmslevel_if_t

6.150 route.cpp File Reference

Classes

class route::process_tclass route::interface_t

Namespaces

route

6.151 save_spec.cpp File Reference

Classes

- class save_spec_t
- 6.152 save_wave.cpp File Reference

Classes

- class save_wave_t
- 6.153 shadowfilter_begin.cpp File Reference

Classes

- class shadowfilter_begin::cfg_t
- class shadowfilter_begin::shadowfilter_begin_t

Namespaces

- shadowfilter_begin
- 6.154 shadowfilter_end.cpp File Reference

Classes

- class shadowfilter_end::cfg_t
- class shadowfilter_end::shadowfilter_end_t

Namespaces

· shadowfilter_end

6.155 sine.cpp File Reference

Classes

- struct sine_cfg_t
- class sine_t

6.156 smoothgains_bridge.cpp File Reference

Classes

- class smoothgains_bridge::smoothspec_wrap_t
- class smoothgains_bridge::overlapadd_if_t

Namespaces

smoothgains_bridge

6.157 softclip.cpp File Reference

Classes

- class cfg_t
- · class softclip_t

6.158 spec2wave.cpp File Reference

Classes

- class hanning_ramps_t
- class spec2wave_t
- class spec2wave_if_t

Functions

- unsigned int max (unsigned int a, unsigned int b)
- unsigned int **min** (unsigned int a, unsigned int b)

6.158.1 Function Documentation

6.159 speechnoise.cpp File Reference

Macros

- #define NUM ENTR MHAORIG 76
- #define NUM ENTR LTASS 25
- #define NUM ENTR OLNOISE 49

Functions

- float fhz2bandno (float x)
- float erb hz f hz (float f hz)
- float hz2hz (float x)

Dummy scale transformation Hz to Hz.

float bandw_correction (float f, float ldb)

Variables

- float vMHAOrigSpec [NUM_ENTR_MHAORIG] = {-1.473, 0, -4.939, -10.14, -13.94, -14.83, -14.27, -15.66, -16.16, -18.22, -20.5, -21.23, -22.13, -22.58, -23.98, -26.58, -26.4, -25.15, -23.89, -25.54, -27, -30.15, -31.68, -30.14, -27.55, -25.79, -25.89, -26.11, -27. ←48, -30.37, -33.13, -36.23, -36.64, -36.35, -35.03, -35.48, -36.35, -37.95, -40.53, -42.37, -41.29, -38.49, -36.32, -34.85, -34.05, -33.81, -33.48, -34.1, -35.19, -36.29, -36.94, -37. ←53, -38.71, -38.7, -38.92, -40.36, -41.26, -42.19, -43.65, -44.37, -43.95, -43.15, -42.57, -41.57, -41.86, -42.34, -42.87, -42.35, -42.71, -42.85, -43.47, -47.43, -67.54, -76.3, -77. ←43, -77.43}
- float vMHAOrigFreq [NUM_ENTR_MHAORIG] = $\{172.266,344.532,516.797,689.\leftarrow 063,861.329,1033.59,1205.86,1378.13,1550.39,1722.66,1894.92,2067.19,2239.\leftarrow 46,2411.72,2583.99,2756.25,2928.52,3100.78,3273.05,3445.32,3617.58,3789.85,3962.\leftarrow 11,4134.38,4306.64,4478.91,4651.18,4823.44,4995.71,5167.97,5340.24,5512.51,5684.\leftarrow 77,5857.04,6029.3,6201.57,6373.83,6546.1,6718.37,6890.63,7062.9,7235.16,7407.\leftarrow 43,7579.69,7751.96,7924.23,8096.49,8268.76,8441.02,8613.29,8785.56,8957.82,9130.\leftarrow 09,9302.35,9474.62,9646.88,9819.15,9991.42,10163.7,10335.9,10508.2,10680.\leftarrow 5,10852.7,11025,11197.3,11369.5,11541.8,11714.1,11886.3,12058.6,12230.9,12403.\leftarrow 1,12575.4,12747.7,12919.9,13092.2\}$

- float vLTASS_freq [NUM_ENTR_LTASS] = {63, 80, 100, 125, 160, 200, 250, 315, 400, 500, 630, 800, 1000, 1250, 1600, 2000, 2500, 3150, 4000, 5000, 6300, 8000, 10000, 12500, 16000}
- float vLTASS_combined_lev [NUM_ENTR_LTASS] = {38.6, 43.5, 54.4, 57.7, 56.8, 60.2, 60.3, 59.0, 62.1, 62.1, 60.5, 56.8, 53.7, 53.0, 52.0, 48.7, 48.1, 46.8, 45.6, 44.5, 44.3, 43.7, 43.4, 41.3, 40.7}
- float vLTASS_female_lev [NUM_ENTR_LTASS] = $\{37.0, 36.0, 37.5, 40.1, 53.4, 62.2, 60. \leftarrow 9,58.1,61.7,61.7,60.4,58,54.3,52.3,51.7,48.8,47.3,46.7,45.3,44.6,45.2,44.9,45.0,42. \leftarrow 8,41.1\}$
- float vLTASS_male_lev [NUM_ENTR_LTASS] = $\{38.6, 43.5, 54.4, 57.7, 56.8, 58.2, 59. \leftarrow 7,60.0,62.4,62.6,60.6,55.7,53.1,53.7,52.3,48.7,48.9,47.0,46.0,44.4,43.3,42.4,41.9,39. \leftarrow 8,40.4\}$
- float **vOlnoiseFreq** [**NUM_ENTR_OLNOISE**] = $\{62.5,70.1539,78.7451,88.3884,99. \Leftrightarrow 2126,111.362,125,140.308,157.49,176.777,198.425,222.725,250,280.616,314.98,353. \Leftrightarrow 553,396.85,445.449,500,561.231,629.961,707.107,793.701,890.899,1000,1122. \Leftrightarrow 46,1259.92,1414.21,1587.4,1781.8,2000,2244.92,2519.84,2828.43,3174.8,3563. \Leftrightarrow 59,4000,4489.85,5039.68,5656.85,6349.6,7127.19,8000,8979.7,10079.4,11313. \Leftrightarrow 7,12699.2,14254.4,16000}$
- float vOlnoiseLev [NUM_ENTR_OLNOISE] = $\{45.9042,38.044,48.9444,61.3697,67. \leftarrow 6953,69.7451,71.6201,71.2431,65.2754,63.2547,70.2264,72.1434,73.4433,73.2659,69. \leftarrow 8424,71.0132,70.9577,70.3492,68.691,64.8436,64.0435,64.2879,60.5889,60.6596,60. \leftarrow 3727,61.2003,61.8477,61.1478,61.2312,58.6584,57.2892,56.8299,56.0191,53.3018,56. \leftarrow 0525,54.3592,50.8823,55.992,54.6768,47.2616,46.9914,45.209,50.413,47.5848,43. \leftarrow 3215,43.754,38.5773,-0.39427,5.74224\}$

```
6.159.1 Macro Definition Documentation
```

```
6.159.1.1 #define NUM_ENTR_MHAORIG 76
```

6.159.1.2 #define NUM_ENTR_LTASS 25

6.159.1.3 #define NUM ENTR OLNOISE 49

6.159.2 Function Documentation

6.159.2.1 float fhz2bandno (float *x*)

6.159.2.2 float erb_hz_f_hz (float f_hz)

6.159.2.3 float hz2hz (float x)

Dummy scale transformation Hz to Hz.

This function implements a dummy scale transformation (linear frequency scale).

Parameters

x | Input frequency in Hz

Returns

Frequency in Hz

- 6.159.2.4 float bandw_correction (
 float f,
 float ldb)
- 6.159.3 Variable Documentation
- 6.159.3.1 float vMHAOrigSpec[NUM_ENTR_MHAORIG] = {-1.473, 0, -4.939, -10.14, -13.94, -14.83, -14.27, -15.66, -16.16, -18.22, -20.5, -21.23, -22.13, -22.58, -23.98, -26.58, -26.4, -25.15, -23.89, -25.54, -27, -30.15, -31.68, -30.14, -27.55, -25.79, -25.89, -26.11, -27.48, -30.37, -33.13, -36.23, -36.64, -36.35, -35.03, -35.48, -36.35, -37.95, -40.53, -42.37, -41.29, -38.49, -36.32, -34.85, -34.05, -33.81, -33.48, -34.1, -35.19, -36.29, -36.94, -37.53, -38.71, -38.7, -38.92, -40.36, -41.26, -42.19, -43.65, -44.37, -43.95, -43.15, -42.57, -41.57, -41.86, -42.34, -42.87, -42.35, -42.71, -42.85, -43.47, -47.43, -67.54, -76.3, -77.43, -77.43}
- 6.159.3.2 float vMHAOrigFreq[NUM_ENTR_MHAORIG] = {172.266,344.532,516.797,689.063,861. \leftarrow 329,1033.59,1205.86,1378.13,1550.39,1722.66,1894.92,2067.19,2239.46,2411.72,2583.99,2756. \leftarrow 25,2928.52,3100.78,3273.05,3445.32,3617.58,3789.85,3962.11,4134.38,4306.64,4478.91,4651. \leftarrow 18,4823.44,4995.71,5167.97,5340.24,5512.51,5684.77,5857.04,6029.3,6201.57,6373.83,6546. \leftarrow 1,6718.37,6890.63,7062.9,7235.16,7407.43,7579.69,7751.96,7924.23,8096.49,8268.76,8441. \leftarrow 02,8613.29,8785.56,8957.82,9130.09,9302.35,9474.62,9646.88,9819.15,9991.42,10163.7,10335. \leftarrow 9,10508.2,10680.5,10852.7,11025,11197.3,11369.5,11541.8,11714.1,11886.3,12058.6,12230. \leftarrow 9,12403.1,12575.4,12747.7,12919.9,13092.2}
- 6.159.3.3 float vLTASS_freq[NUM_ENTR_LTASS] = {63, 80, 100, 125, 160, 200, 250, 315, 400, 500, 630, 800, 1000, 1250, 1600, 2000, 2500, 3150, 4000, 5000, 6300, 8000, 10000, 12500, 16000}
- 6.159.3.4 float vLTASS_combined_lev[NUM_ENTR_LTASS] = {38.6, 43.5, 54.4, 57.7, 56.8, 60.2, 60.3, 59.0, 62.1, 62.1, 60.5, 56.8, 53.7, 53.0, 52.0, 48.7, 48.1, 46.8, 45.6, 44.5, 44.3, 43.7, 43.4, 41.3, 40.7}
- 6.159.3.5 float vLTASS_female_lev[NUM_ENTR_LTASS] = $\{37.0,36.0,37.5,40.1,53.4,62.2,60.9,58. \leftarrow 1,61.7,61.7,60.4,58,54.3,52.3,51.7,48.8,47.3,46.7,45.3,44.6,45.2,44.9,45.0,42.8,41.1\}$
- 6.159.3.6 float vLTASS_male_lev[NUM_ENTR_LTASS] = {38.6,43.5,54.4,57.7,56.8,58.2,59.7,60.0,62. ← 4.62.6,60.6,55.7,53.1,53.7,52.3,48.7,48.9,47.0,46.0,44.4,43.3,42.4,41.9,39.8,40.4}
- 6.159.3.7 float vOlnoiseFreq[NUM_ENTR_OLNOISE] = $\{62.5, 70.1539, 78.7451, 88.3884, 99.2126, 111. \leftarrow 362, 125, 140.308, 157.49, 176.777, 198.425, 222.725, 250, 280.616, 314.98, 353.553, 396.85, 445. \leftarrow 449, 500, 561.231, 629.961, 707.107, 793.701, 890.899, 1000, 1122.46, 1259.92, 1414.21, 1587.4, 1781. \leftarrow 8, 2000, 2244.92, 2519.84, 2828.43, 3174.8, 3563.59, 4000, 4489.85, 5039.68, 5656.85, 6349.6, 7127. \leftarrow 19, 8000, 8979.7, 10079.4, 11313.7, 12699.2, 14254.4, 16000$

6.159.3.8 float vOlnoiseLev[NUM_ENTR_OLNOISE] = $\{45.9042,38.044,48.9444,61.3697,67.6953,69. \leftarrow 7451,71.6201,71.2431,65.2754,63.2547,70.2264,72.1434,73.4433,73.2659,69.8424,71.0132,70. \leftarrow 9577,70.3492,68.691,64.8436,64.0435,64.2879,60.5889,60.6596,60.3727,61.2003,61.8477,61. \leftarrow 1478,61.2312,58.6584,57.2892,56.8299,56.0191,53.3018,56.0525,54.3592,50.8823,55.992,54. \leftarrow 6768,47.2616,46.9914,45.209,50.413,47.5848,43.3215,43.754,38.5773,-0.39427,5.74224\}$

6.160 speechnoise.h File Reference

Classes

class speechnoise t

6.161 split.cpp File Reference

Classes

• class MHAPlugin_Split::uni_processor_t

An interface to a class that sports a process method with no parameters and no return value.

class MHAPlugin_Split::thread_platform_t

Basic interface for encapsulating thread creation, thread priority setting, and synchronization on any threading platform (i.e., pthreads or win32threads).

class MHAPlugin_Split::dummy_threads_t

Dummy specification of a thread platform: This class implements everything in a single thread.

class MHAPlugin_Split::posix_threads_t

Posix threads specification of thread platform.

class MHAPlugin_Split::domain_handler_t

Handles domain-specific partial input and output signal.

class MHAPlugin_Split::splitted_part_t

The **splitted_part_t** (p. 706) instance manages the plugin that performs processing on the reduced set of channels.

class MHAPlugin Split::split t

Implements split plugin.

Namespaces

MHAPlugin_Split

Macros

#define MHAPLUGIN_OVERLOAD_OUTDOMAIN

This define modifies the definition of MHAPLUGIN_CALLBACKS and friends.

- #define posixthreads 1
- #define default_thread_platform_string "posix"
- #define default_thread_platform_type posix_threads_t

Enumerations

6.161.1 Detailed Description

Source code for the split plugin. The split plugin splits the audio signal by channel. The splitted paths execute in parallel.

6.161.2 Macro Definition Documentation

6.161.2.1 #define MHAPLUGIN OVERLOAD OUTDOMAIN

This define modifies the definition of MHAPLUGIN_CALLBACKS and friends.

The output signal is transferred through a second parameter to the process method, enabling all four domain transformations in a single plugin.

6.161.2.2 #define posixthreads 1

6.161.2.3 #define default_thread_platform_string "posix"

6.161.2.4 #define default_thread_platform_type posix_threads_t

6.162 steerbf.cpp File Reference

Macros

- #define PATCH_VAR(var) patchbay.connect(&var.valuechanged, this, &steerbf← ::update cfq)
- #define INSERT_PATCH(var) insert_member(var); PATCH_VAR(var)
- 6.162.1 Macro Definition Documentation
- 6.162.1.1 #define PATCH_VAR(

var) patchbay.connect(&var.valuechanged, this, &steerbf::update_cfg)

6.162.1.2 #define INSERT_PATCH(

var) insert_member(var); PATCH_VAR(var)

6.163 steerbf.h File Reference

Classes

- class parser_int_dyn
- · class steerbf config
- · class steerbf

6.164 testalsadevice.c File Reference

Functions

- int main (int argc, char **argv)
- 6.164.1 Function Documentation
- 6.164.1.1 int main (int *argc*, char ** *argv*)
- 6.165 timoconfig.cpp File Reference

Macros

- #define LPSCALE (5.2429e+007)
- #define POWSPEC_FACTOR 0.0025
- #define OVERLAP_FACTOR 2
- #define **EPSILON** (1e-10)
- #define CHANLOOP for (unsigned int c=0; c<nchan; ++c)
- 6.165.1 Macro Definition Documentation
- 6.165.1.1 #define LPSCALE (5.2429e+007)
- 6.165.1.2 #define POWSPEC_FACTOR 0.0025
- 6.165.1.3 #define OVERLAP_FACTOR 2
- 6.165.1.4 #define EPSILON (1e-10)
- 6.165.1.5 #define CHANLOOP for (unsigned int c=0; c<nchan; ++c)
- 6.166 timoconfig.h File Reference

Classes

- class timo_AC
- class timo_params
- class timoConfig

6.167 timoSmooth.cpp File Reference

Macros

- #define INSERT_VAR(var) insert_item(#var, &var)
- #define INSERT_PATCH(var) INSERT_VAR(var); PATCH_VAR(var)
- 6.167.1 Macro Definition Documentation
- 6.167.1.1 #define INSERT_VAR(

 var) insert_item(#var, &var)
- 6.167.1.3 #define INSERT_PATCH(

 var) INSERT_VAR(var); PATCH_VAR(var)
- 6.168 timosmooth.h File Reference

Classes

- · class timoSmooth
- 6.169 transducers.cpp File Reference

Classes

- class softclipper_variables_t
- class softclipper_t
- class calibrator_variables_t
- class calibrator_runtime_layer_t
- · class calibrator t
- class bbcalib_interface_t

Typedefs

- typedef MHAPlugin::config_t< MHASignal::async_rmslevel_t > rmslevelmeter
- typedef MHAPlugin::plugin_t< calibrator_runtime_layer_t > rtcalibrator

Functions

```
    speechnoise_t::noise_type_t kw_index2type (unsigned int idx)
```

```
std::vector< int > vint 0123n1 (unsigned int n)
```

```
6.169.1 Typedef Documentation
```

```
6.169.1.1 typedef MHAPlugin::config_t<MHASignal::async_rmslevel_t> rmslevelmeter
```

```
6.169.1.2 typedef MHAPlugin::plugin_t<calibrator_runtime_layer_t> rtcalibrator
```

```
6.169.2 Function Documentation
```

```
6.169.2.1 speechnoise_t::noise_type_t kw_index2type ( unsigned int idx )
```

```
6.169.2.2 std::vector<int> vint_0123n1 ( unsigned int n )
```

6.170 upsample.cpp File Reference

Classes

• class us_t

6.171 wave2spec.cpp File Reference

Classes

- class wave2spec_t
- class wave2spec_if_t

Macros

#define MHAPLUGIN_OVERLOAD_OUTDOMAIN

```
6.171.1 Macro Definition Documentation
```

6.171.1.1 #define MHAPLUGIN_OVERLOAD_OUTDOMAIN

6.172 wavrec.cpp File Reference

Classes

- · class wavwriter_t
- class wavrec_t

Macros

• #define **DEBUG**(x) std::cerr << __FILE__ << ":" << __LINE__ << " " << #x << "=" << x << std::endl

- 6.172.1 Macro Definition Documentation
- 6.173 windowselector.cpp File Reference
- 6.174 windowselector.h File Reference

Classes

• class windowselector_t

A combination of mha parser variables to describe an overalapadd analysis window.

Index

MHA_FUN	acPooling_wave, 150
mha_defs.h, 935	~acPooling wave config
attribute	acPooling_wave_config, 152
mha_plugin.hh, 957	~acSteer
declspec	acSteer, 162
example5.cpp, 919	~acSteer_config
example6.cpp, 919	acSteer_config, 164
mha_defs.h, 935	~acTransform wave
mha plugin.hh, 957	acTransform_wave, 166
_cf	~acTransform_wave_config
DynComp::dc_afterburn_t, 278	acTransform wave config, 168
_channels	~acmon_t
	-
DynComp::dc_afterburn_t, 278	acmon::acmon_t, 147
_conjugate	~acspace2matrix_t
Complex arithmetics in the openMHA, 67	MHA_AC::acspace2matrix_t, 379
_linphase_asym	~adm_rtconfig_t
MHAFilter::smoothspec_t, 527	adm_rtconfig_t, 188
_reciprocal	~algo_comm_class_t
Complex arithmetics in the openMHA, 68	MHAKernel::algo_comm_class_t, 563
_srate	\sim analysepath_t
DynComp::dc_afterburn_t, 278	analysepath_t, 199
_steerbf	\sim analysispath_if_t
steerbf_config, 879	analysispath_if_t, 202
~Async_Notify	~bark2hz_t
MHA_TCP::Async_Notify, 428	MHAOvlFilter::barkscale::bark2hz_t, 572
~Connection	~base_t
MHA_TCP::Connection, 432	MHAParser::base_t, 595
\sim Delay	~bbcalib_interface_t
ADM::Delay, 181	bbcalib_interface_t, 211
~Event_Watcher	~blockprocessing_polyphase_resampling_t
MHA_TCP::Event_Watcher, 438	MHAFilter::blockprocessing_polyphase ←
~Linearphase_FIR	_resampling_t, 477
ADM::Linearphase_FIR, 183	~c_ifc_parser_t
~MHA Error	MHAParser::c_ifc_parser_t, 607
MHA Error, 407	~cfg_chain_t
~Server	MHAPlugin::cfg_chain_t, 678
MHA_TCP::Server, 441	~cfg_t
~Thread	acsave::cfg_t, 157
MHA TCP::Thread, 447	~config t
_ :	0
~Timeout_Watcher	MHAPlugin::config_t, 681
MHA_TCP::Timeout_Watcher, 451	~connector_base_t
~Wakeup_Event	MHAEvents::connector_base_t, 465
MHA_TCP::Wakeup_Event, 453	~connector_t
~acConcat_wave	MHAEvents::connector_t, 468
acConcat_wave, 140	~db_if_t
~acConcat_wave_config	db_if_t, 232
acConcat_wave_config, 143	~delay_spec_t
~acPooling_wave	MHASignal::delay_spec_t, 721

~delay_t	MHA_AC::int_t, 383
MHASignal::delay_t, 722	~io_file_t
~delay_wave_t	io_file_t, 330
MHASignal::delay_wave_t, 724	~io_lib_t
~doasym_classification	io_lib_t, 334
doasvm_classification, 262	~io_parser_t
~doasvm_classification_config	io_parser_t, 337
doasvm_classification_config, 264	~io_portaudio_t
~doasvm_feature_extraction	MHAIOPortAudio::io_portaudio_t, 545
doasvm_feature_extraction, 266	~io_tcp_fwcb_t
~doasym_feature_extraction_config	io_tcp_fwcb_t, 340
doasvm_feature_extraction_config, 268	~io_tcp_parser_t
~domain_handler_t	io_tcp_parser_t, 344
MHAPlugin_Split::domain_handler_t, 693	~io_tcp_sound_t
~double_t	io_tcp_sound_t, 349
MHA_AC::double_t, 381	~io tcp t
~doublebuffer_t	io_tcp_t, 354
MHASignal::doublebuffer_t, 726	~linear_table_t
~dynamiclib t	MHATableLookup::linear_table_t, 781
dynamiclib_t, 274	~lpc
~emitter_t	lpc, 358
MHAEvents::emitter_t, 470	~lpc_bl_predictor
∼fft t	lpc_bl_predictor, 361
MHASignal::fft_t, 728	~lpc_bl_predictor_config
∼fftfb t	lpc_bl_predictor_config, 363
MHAOvlFilter::fftfb_t, 575	~lpc_burglattice
~fftfilter_t	lpc_burglattice, 365
MHAFilter::fftfilter_t, 484	~lpc_burglattice_config
~fftfilterbank t	lpc_burglattice_config, 367
MHAFilter::fftfilterbank t, 488	~lpc_config
~filter_t	lpc_config, 369
MHAFilter::filter_t, 492	~matrix_t
~float_t	MHASignal::matrix_t, 740
MHA_AC::float_t, 382	~mha dblbuf t
~fourway_processor_t	mha_dblbuf_t, 396
PluginLoader::fourway_processor_t, 827	~mha_fifo_lw_t
~fw t	mha_fifo_lw_t, 409
fw_t, 315	~mha_fifo_posix_threads_t
~gaintable_t	mha_fifo_posix_threads_t, 412
DynComp::gaintable_t, 283	~mha fifo t
~gamma_flt_t	mha_fifo_t, 415
MHAFilter::gamma_flt_t, 495	~mha_fifo_thread_guard_t
~hanning_ramps_t	mha_fifo_thread_guard_t, 418
hanning_ramps_t, 323	~mha_fifo_thread_platform_t
~hilbert_shifter_t	mha_fifo_thread_platform_t, 419
hilbert_shifter_t, 325	~mha_rt_fifo_element_t
~hilbert t	mha_rt_fifo_element_t, 422
MHASignal::hilbert_t, 732	~mha_rt_fifo_t
~hz2bark t	mha_rt_fifo_t, 423
MHAOvlFilter::barkscale::hz2bark t, 573	~mhaplug_cfg_t
∼int_t	mhaplug_cfg_t, 677

\sim mhapluginloader_t	spec_fader_t, 874
MHAParser::mhapluginloader_t, 641	~spectrum_t
PluginLoader::mhapluginloader_t, 831	MHA_AC::spectrum_t, 385
~mhaserver_t	MHASignal::spectrum_t, 757
mhaserver_t, 717	~split_t
~overlapadd_if_t	MHAPlugin_Split::split_t, 704
overlapadd::overlapadd_if_t, 815	~splitted_part_t
smoothgains_bridge::overlapadd_if_←	MHAPlugin_Split::splitted_part_t, 708
t, 863	~steerbf
	steerbf, 877
~overlapadd_t	~steerbf_config
overlapadd::overlapadd_t, 817	steerbf_config, 879
~parser_t	_
MHAParser::parser_t, 646	~table_t
~partitioned_convolution_t	MHATableLookup::table_t, 784
MHAFilter::partitioned_convolution_t, 515	~thread_platform_t
\sim patchbay_t	MHAPlugin_Split::thread_platform_t, 712
MHAEvents::patchbay_t, 471	~timoConfig
~plug_t	timoConfig, 885
plug_t, 820	~timoSmooth
~plugin_t	timoSmooth, 888
MHAPlugin::plugin_t, 685	~uint_vector_t
~pluginloader_t	MHASignal::uint_vector_t, 765
pluginloader_t, 835	~uni_processor_t
~plugs_t	MHAPlugin_Split::uni_processor_t, 714
mhachain::plugs_t, 461	~wave2spec_t
~port_t	wave2spec_t, 895
MHAJack::port_t, 560	\sim waveform_t
• —	MHA_AC::waveform_t, 388
~posix_threads_t	MHASignal::waveform_t, 769
MHAPlugin_Split::posix_threads_t, 700	\sim wavwriter_t
~prediction_error	wavwriter_t, 899
prediction_error, 836	~windowselector_t
~prediction_error_config	windowselector_t, 901
prediction_error_config, 839	
~rt_nlms_t	A
rt_nlms_t, 848	lpc config, 370
~save_var_base_t	MHAFilter::filter_t, 493
ac2lsl::save_var_base_t, 131	MHAFilter::gamma_flt_t, 496
\sim save_var_t	MHAFilter::iir_filter_t, 501
ac2lsl::save_var_t, 132	a
ac2lsl::save_var_t< mha_complex_t >,	MHAParser::base_t::replace_t, 601
134	A_
acsave::save_var_t, 159	MHAFilter::complex_bandpass_t, 481
~sf_t	MHAFilter::iir_ord1_real_t, 504
MHASndFile::sf_t, 778	AC DIM MISMATCH
~sine_t	
sine_t, 861	mha_algo_comm.cpp, 932
- '	AC_INVALID_HANDLE
~smoothspec_t	mha_algo_comm.cpp, 932
MHAFilter::smoothspec_t, 526	AC_INVALID_NAME
~spec2wave_t	mha_algo_comm.cpp, 932
spec2wave_t, 872	AC_INVALID_OUTPTR
~spec_fader_t	mha_algo_comm.cpp, 932

AC_STRING_TRUNCATED	process, 183
mha_algo_comm.cpp, 932	ADM, 79
AC_SUCCESS	ADM::ADM, 178
mha_algo_comm.cpp, 932	C, 80
AC_TYPE_MISMATCH	DELAY_FREQ, 80
mha_algo_comm.cpp, 932	PI, 80
ACSAVE_FMT_MAT4	START_BETA, 80
acsave.cpp, 906	subsampledelay_coeff, 79
ACSAVE_FMT_TXT	ALGO_COMM_ID_STR
acsave.cpp, 906	mha_algo_comm.hh, 934
ACSAVE FMT M	ASSERT_EQUAL_DIM_PTR
acsave.cpp, 906	mha_signal.cpp, 962
ACSAVE_SFMT_MAT4	ASSERT EQUAL DIM
acsave.cpp, 906	mha_signal.cpp, 962
ACSAVE_SFMT_TXT	ASYNC_CONNECT_STARTED
acsave.cpp, 906	mha tcp.cpp, 974
ACSAVE_SFMT_M	abandonned
acsave.cpp, 906	mha_rt_fifo_element_t, 422
ADM::ADM< F >, 177	abs
ADM::ADM	Complex arithmetics in the openMHA, 66
ADM, 178	abs2
beta, 179	Complex arithmetics in the openMHA, 66
m_beta, 179	ac
m_decomb, 179	ac2wave_t, 138
m_delay_back, 179	acConcat_wave_config, 143
m_delay_front, 179	acPooling_wave_config, 152
m_lp_bf, 179	acTransform_wave_config, 168
m_lp_result, 179	acmon::acmon_t, 148
m_mu_beta, 179	acsave::cfg_t, 158
_ :	<u> </u>
m_powerfilter_coeff, 179 m_powerfilter_norm, 179	acsave::save_var_t, 160
	doasvm_classification_config, 264
m_powerfilter_state, 179	fw_t, 317
process, 178	latex_doc_t, 357
ADM::Delay	lpc_bl_predictor_config, 363
∼Delay, 181	lpc_burglattice_config, 367
Delay, 180	MHA_AC::ac2matrix_helper_t, 375
m_coeff, 181	MHA_AC::double_t, 381
m_fullsamples, 181	MHA_AC::float_t, 382
m_norm, 181	MHA_AC::int_t, 383
m_now_in, 181	MHA_AC::spectrum_t, 386
m_state, 181	MHA_AC::waveform_t, 389
process, 181	MHAKernel::algo_comm_class_t, 564
ADM::Delay< F >, 180	MHAMultiSrc::base_t, 566
ADM::Linearphase_FIR< F >, 182	MHAPlugin::plugin_t, 687
ADM::Linearphase_FIR	mhachain::plugs_t, 461
~Linearphase_FIR, 183	PluginLoader::mhapluginloader_t, 833
Linearphase_FIR, 182	prediction_error_config, 839
m_alphas, 183	rt_nlms_t, 848
m_now, 183	shadowfilter_end::cfg_t, 857
m_order, 183	steerbf_config, 879
m_output, 183	timoConfig, 885

AC variable 4	gain as 127
AC variable, 4	gain_ac, 137
ac2lsl, 77	gain_in, 137
ac2lsl.cpp, 903	name, 137
ac2lsl::ac2lsl_t, 126	patchbay, 137
ac2lsl_t, 127	prepare, 137
activate, 128	prepared, 137
patchbay, 128	process, 137
prepare, 127	release, 137
process, 127, 128	update, 137
release, 128	zeros, 137
rt_strict, 128	ac2wave_t, 138
skip, 128	ac, 138
update, 128	ac2wave_t, 138
varlist, 128	channels, 138
vars, 128	delay_ac, 139
ac2lsl::cfg_t, 129	delay_in, 139
activate, 130	frames, 138
cfg_t, 129	gain_ac, 139
process, 130	gain_in, 139
skip, 130	name, 139
skipcnt, 130	process, 138
varlist, 130	w, 138
ac2lsl::save_var_base_t, 130	ac_
∼save_var_base_t, 131	combc_t, 227
send_frame, 131	MHAParser::mhapluginloader_t, 642
ac2lsl::save_var_t	ac_fifo
~save_var_t, 132	analysepath_t, 200
buf, 133	ac_monitor_t
save_var_t, 132	acmon::ac monitor t, 144
send_frame, 133	ac_monitor_type.cpp, 903
stream, 133	ac_monitor_type.hh, 903
ac2lsl::save_var_t< mha_complex_t >, 133	acConcat_wave, 139
	~acConcat_wave, 140
~save_var_t, 134	- · · · ·
buf, 135	acConcat_wave, 140
num_entries, 135	name_conAC, 142
save_var_t, 134	num_AC, 142
send_frame, 135	patchbay, 142
stream, 135	prefix_names_AC, 142
vec, 135	prepare, 140
ac2lsl::save_var_t< T >, 131	process, 140
ac2lsl_t	release, 142
ac2lsl::ac2lsl_t, 127	samples_AC, 142
ac2matrix_helper_t	update_cfg, 142
MHA_AC::ac2matrix_helper_t, 374	acConcat_wave.cpp, 904
ac2matrix_t	INSERT_PATCH, 904
MHA_AC::ac2matrix_t, 376	PATCH_VAR, 904
ac2wave.cpp, 903	acConcat_wave.h, 904
ac2wave_if_t, 136	acConcat_wave_config, 142
ac2wave_if_t, 137	\sim acConcat_wave_config, 143
delay_ac, 137	ac, 143
delay_in, 137	acConcat_wave_config, 143

numSamples_AC, 143	acSteerName2, 163
process, 143	nrefmic, 163
strNames_AC, 143	nsteerchan, 163
vGCC con, 143	patchbay, 163
vGCC, 143	prepare, 162
acPooling_wave, 149	process, 162
~acPooling_wave, 150	release, 162
acPooling_wave, 150	steerFile, 163
alpha, 151	update_cfg, 163
•	acSteer.cpp, 906
like_ratio_name, 151	117
lower_threshold, 151	INSERT_PATCH, 906
max_pool_ind_name, 151	PATCH_VAR, 906
neighbourhood, 151	acSteer.h, 906
numsamples, 151	acSteer_config, 163
p_name, 151	\sim acSteer_config, 164
patchbay, 151	acSteer_config, 164
pool_name, 151	insert, 164
pooling_type, 151	nangle, 164
pooling_wndlen, 151	nchan, 164
prepare, 150	nfreq, 164
process, 150	nrefmic, 164
release, 151	nsteerchan, 164
update_cfg, 151	specSteer1, 164
upper_threshold, 151	specSteer2, 164
acPooling_wave.cpp, 904	acSteerName1
INSERT_PATCH, 905	acSteer, 163
PATCH_VAR, 905	acSteerName2
acPooling_wave.h, 905	acSteer, 163
acPooling_wave_ri, 303 acPooling_wave_config, 152	acTransform_wave, 165
	~acTransform_wave, 166
~acPooling_wave_config, 152	_ ,
ac, 152	acTransform_wave, 166
acPooling_wave_config, 152	ang_name, 167
alpha, 153	numsamples, 167
c, 153	patchbay, 167
insert, 152	prepare, 166
like_ratio, 153	process, 166
low_thresh, 153	raw_p_max_name, 167
neigh, 153	raw_p_name, 167
p, 153	release, 166
p_max, 153	rotated_p_max_name, 167
pool, 153	rotated_p_name, 167
pooling_ind, 153	to from, 167
pooling_option, 153	update_cfg, 167
pooling_size, 153	acTransform_wave.cpp, 906
process, 152	INSERT_PATCH, 907
raw_p_name, 153	PATCH_VAR, 907
up_thresh, 153	acTransform wave.h, 907
acSteer, 161	acTransform_wave_config, 167
~acSteer, 162	~acTransform_wave_config, 168
acSteer, 162	ac, 168
acSteerName1, 163	acTransform_wave_config, 168
acoteenvanier, 100	ac transionin_wave_coming, 100

ang_name, 168	varlist, 148
offset, 168	vars, 148
process, 168	acmon_t
raw_p_max_name, 168	acmon::acmon_t, 147
raw_p_name, 168	acsave, 78
resolution, 168	acsave.cpp, 905
rotated_i, 168	ACSAVE_FMT_MAT4, 906
rotated p, 168	ACSAVE FMT TXT, 906
to_from, 168	ACSAVE_FMT_M, 906
accept	ACSAVE_SFMT_MAT4, 906
MHA_TCP::Server, 441	ACSAVE SFMT TXT, 906
accept_event	ACSAVE_SFMT_M, 906
MHA_TCP::Server, 442	acsave::acsave_t, 154
accept_loop	acsave_t, 155
io tcp t, 354	algo, 156
acceptor_started	b flushed, 156
mhaserver_t, 717	b_prepared, 156
ack fail	bflush, 156
mhaserver_t, 718	chain, 156
ack ok	event_start_recording, 156
mhaserver_t, 718	event_stop_and_flush, 156
acmon, 77	fileformat, 156
acmon.cpp, 904	fname, 156
acmon::ac_monitor_t, 143	patchbay, 156
ac_monitor_t, 144	prepare, 155
dimstr, 145	process, 155, 156
getvar, 145	reclen, 156
mon, 145	release, 155
mon_complex, 145	variables, 156
mon_mat, 145	varlist, 156
mon_mat_complex, 145	varlist_t, 155
name, 145	acsave::cfg_t, 157
p_parser, 146	∼cfg_t, 157
use_mat, 146	ac, 158
acmon::acmon_t, 146	cfg_t, 157
~acmon_t, 147	flush_data, 157
ac, 148	max_frames, 158
acmon_t, 147	nvars, 158
algo, 148	rec_frames, 158
b_cont, 148	store_frame, 157
b_snapshot, 148	varlist, 158
chain, 148	acsave::mat4head_t, 158
dimensions, 148	cols, 158
dispmode, 148	imag, 158
patchbay, 148	namelen, 158
prepare, 147	rows, 158
process, 148	t, 158
recmode, 148	acsave::save_var_t, 159
release, 147	∼save_var_t, 159
save_vars, 148	ac, 160
update_recmode, 148	b_complex, 160
-	-

data, 160	pluginbrowser_t, 823
framecnt, 160	add_replace_pair
maxframe, 160	MHAParser::base_t, 599
name, 160	added_via_plugs
ndim, 160	altplugs_t, 198
nframes, 160	addsndfile, 78
save_m, 160	addsndfile_resampling_mode_t, 78
save_mat4, 159	DO_RESAMPLE, 78
save_txt, 159	DONT_RESAMPLE_PERMISSIVE, 78
save_var_t, 159	DONT_RESAMPLE_STRICT, 78
store frame, 159	level_adaptor, 78
acsave_t	resampled_num_frames, 79
acsave::acsave_t, 155	wave_reader, 78
acspace2matrix_t	addsndfile.cpp, 907
MHA_AC::acspace2matrix_t, 378	DEBUG, 908
acspace_template	addsndfile::addsndfile_if_t, 169
analysispath_if_t, 202	active, 171
act	addsndfile_if_t, 170
wavwriter_t, 899	change_mode, 171
actgains	channels, 171
fader_if_t, 301	filename, 171
activate	level, 171
ac2lsl::ac2lsl_t, 128	levelmode, 171
ac2lsl::cfg_t, 130	loop, 171
activate_query	mapping, 171
MHAParser::base_t, 599	mhachannels, 171
active	mode, 171
addsndfile::addsndfile_if_t, 171	numchannels, 171
acvar	patchbay, 171
MHA_AC::ac2matrix_helper_t, 375	path, 171
adapt_filter_param_t	prepare, 170
MHAFilter::adapt_filter_param_t, 473	process, 170
adapt_filter_state_t	ramplen, 171
MHAFilter::adapt_filter_state_t, 474	release, 170
adapt filter t	resamplingmode, 171
MHAFilter::adapt_filter_t, 475	scan_dir, 171
add	search_pattern, 171
MHASignal::loop_wavefragment_t, 734	search_result, 171
add_entry	set_level, 171
MHAParser::keyword list t, 626	startpos, 171
MHATableLookup::linear table t, 782	uint_mode, 171
MHATableLookup::xy_table_t, 787	update, 170
add_fun	addsndfile::level_adapt_t, 172
MHAOvlFilter::scale_var_t, 591	can_update, 173
add_parent_on_insert	get_level, 173
MHAParser::base_t, 599	ilen, 173
add_plug	I_new, 173
altplugs_t, 198	I_old, 173
add_plugin	level_adapt_t, 172
pluginbrowser_t, 823	pos, 173
add_plugins	update_frame, 173
-	· · · · · · · · · · · · · · · · · · ·

wnd, 173	front_channel, 189
addsndfile::resampled_soundfile_t, 173	front_channels, 189
resampled_soundfile_t, 174	lp_coeffs, 189
addsndfile::sndfile_t, 175	num_adms, 188
sndfile_t, 175	rear_channel, 189
addsndfile::waveform_proxy_t, 176	rear_channels, 189
waveform_proxy_t, 177	adm t
addsndfile_if_t	adm_rtconfig_t, 187
addsndfile::addsndfile_if_t, 170	adms
addsndfile_resampling_mode_t	adm_rtconfig_t, 189
addsndfile, 78	algo
adm	acmon::acmon_t, 148
adm_rtconfig_t, 189	acsave::acsave_t, 156
adm.cpp, 908	analysispath_if_t, 202
adm_fir_decomb, 908	coherence::cohflt_if_t, 220
adm_fir_lp, 908	db_if_t, 233
— —·	
adm.hh, 908	dc::dc_if_t, 236
adm_fir_decomb	fftfilterbank::fftfb_interface_t, 308
adm.cpp, 908	MHAPlugin_Resampling::resampling_if
adm_fir_lp	_t, 689
adm.cpp, 908	multibandcompressor::interface_t, 803
adm_if_t, 184	nlms_t, 807
adm_if_t, 185	overlapadd::overlapadd_if_t, 816
beta, 186	route::interface_t, 845
bypass, 186	smoothgains_bridge::overlapadd_if_
coeff_decomb, 186	t, 864
coeff_lp, 186	wave2spec_if_t, 893
decomb_order, 186	algo_comm_class_t
distances, 186	MHAKernel::algo_comm_class_t, 563
front_channels, 186	algo_comm_default
input_channels, 186	mha_algo_comm.cpp, 932
is_prepared, 186	mha_algo_comm.hh, 934
lp_order, 186	algo_comm_id_string
mu_beta, 186	MHAKernel::algo_comm_class_t, 564
out, 186	algo_comm_id_string_len
patchbay, 186	MHAKernel::algo_comm_class_t, 564
prepare, 185	algo_comm_safe_cast
process, 185	MHAKernel, 97
rear_channels, 186	algo_comm_t, 190
release, 185	get_entries, 194
srate, 186	get_error, 194
tau_beta, 186	get_var, 193
update, 185	get_var_float, 193
adm_rtconfig_t, 186	get_var_int, 193
~adm_rtconfig_t, 188	handle, 190
adm, 189	insert_var, 190
adm_rtconfig_t, 187	insert_var_float, 191
adm t, 187	insert var int, 191
adm_t, 107 adms, 189	is_var, 192
check_index, 188	mha.h, 931
decomb coeffs, 189	remove_ref, 192
uecomb_coens, 108	16111076_161, 134

remove_var, 191	noisePowProposedScale::interface_t, 811
algo_name	altplugs.cpp, 909
lpc, 359	MHAPLUGIN_OVERLOAD_OUTDOM↔
algos	AIN, 909
MHAPlugin_Split::split_t, 705	altplugs_t, 195
mhachain::chain_base_t, 458	add_plug, 198
mhachain::plugs_t, 461	added_via_plugs, 198
all_dump	altplugs_t, 196
MHAParser, 107	cfin, 198
all_ids	cfout, 198
MHAParser, 107	current, 198
alloc_plugs	delete_plug, 198
mhachain::plugs_t, 461	event_add_plug, 197
almost	event_delete_plug, 197
Complex arithmetics in the openMHA, 68	event_select_plug, 197
alpha	event_set_plugs, 197
acPooling_wave, 151	fallback_spec, 198
acPooling_wave_config, 153	fallback_wave, 198
cfg_t, 218	nondefault_labels, 198
coherence::cohflt_t, 222	parse, 197
coherence::vars t, 224	parser_plugs, 198
alpha_const	patchbay, 198
timoConfig, 885	plugs, 198
alpha_const_limits_hz	prepare, 196
timo_params, 883	prepared, 198
timoSmooth, 890	proc_ramp, 197
alpha_const_vals	process, 197
timo_params, 883	ramp_counter, 198
timoSmooth, 890	ramp_len, 198
alpha_frame	ramplen, 198
timoConfig, 886	release, 196
alpha_frame_AC	select_plug, 198
timo_AC, 881	selected_plug, 198
alpha_hat	update_ramplen, 197
timoConfig, 886	update_selector_list, 197
alpha hat AC	use own ac, 198
timo_AC, 881	amplitude
alpha_pitch	sine_cfg_t, 860
timo_params, 883	analysemhaplugin.cpp, 909
timoSmooth, 889	main, 910
alpha_prev	print_ac, 910
timoConfig, 886	strdom, 910
alphaPH1mean	analysepath_t, 199
noisePowProposedScale::interface_t, 811	~analysepath_t, 199
alphaPH1mean_	ac_fifo, 200
noisePowProposedScale::noisePow←	analysepath_t, 199
Proposed, 813	attr, 200
alphaPSD_	cond_to_process, 200
noisePowProposedScale::noisePow⊷	flag_terminate_inner_thread, 200
Proposed, 813	has_inner_error, 200
alphaPSD	inner_ac_copy, 200
•	—

inner_error, 200	ds_t, 273
inner_input, 200	us_t, 891
inner out domain, 200	apply_gains
inner_process_wave2spec, 200	MHAOvlFilter::fftfb_t, 575
inner_process_wave2wave, 200	multibandcompressor::plugin_signals_t,
input_to_process, 200	804
libdata, 200	aquire_mutex
outer_ac, 200	mha_fifo_posix_threads_t, 412
outer_ac_copy, 200	mha_fifo_thread_platform_t, 420
priority, 200	arg
ProcessMutex, 200	MHA_TCP::Thread, 448
rt_process, 200	assign
scheduler, 200	MHASignal::waveform_t, 773
svc, 200	Vector and matrix processing toolbox, 48
thread, 200	49
wave_fifo, 200	assign_channel
analysispath.cpp, 910	MHASignal::waveform_t, 773
thread_start, 910	assign_frame
analysispath_if_t, 201	MHASignal::waveform t, 773
~analysispath_if_t, 202	Async_Notify
	MHA_TCP::Async_Notify, 428
acspace_template, 202	async_poll_msg
algo, 202	
analysispath_if_t, 202	fw_t, 317
chain, 202	async_read
fifolen, 202	fw_t, 317
fragsize, 202	async_rmslevel_t
libname, 202	MHASignal::async_rmslevel_t, 719
loadlib, 202	attack
patchbay, 202	cfg_t, 218
plug, 202	dc::dc_t, 238
prepare, 202	dc_simple::level_smoother_t, 254
priority, 202	softclip_t, 867
process, 202	softclipper_t, 868
release, 202	attr
vars, 202	analysepath_t, 200
analytic	MHAPlugin_Split::posix_threads_t, 701
hilbert_shifter_t, 325	auditory_profile.cpp, 910
ang_name	auditory_profile.h, 910
acTransform_wave, 167	AuditoryProfile, 80
acTransform_wave_config, 168	AuditoryProfile::fmap_t, 203
angle	get_frequencies, 203
Complex arithmetics in the openMHA, 63	get_values, 203
angle_ind	isempty, 203
steerbf, 878	AuditoryProfile::parser_t, 204
angle_src	get_current_profile, 205
steerbf, 878	L, 205
angles	parser_t, 205
doasvm_classification, 263	R, 205
announce_port	AuditoryProfile::parser_t::ear_t, 205
mhaserver_t, 718	ear_t, 206
antialias	get_ear, 206

HTL, 206	PluginLoader::mhapluginloader_t, 834
UCL, 206	b_loop
AuditoryProfile::parser_t::fmap_t, 206	MHASignal::loop_wavefragment_t, 736
f, 207	b_ltg
fmap t, 207	coherence::cohflt_t, 223
get_fmap, 207	b_prepared
name_, 207	acsave::acsave_t, 156
patchbay, 207	io_file_t, 332
validate, 207	— — ·
value, 207	io_parser_t, 338
AuditoryProfile::profile_t, 208	MHAJack::client_t, 558
get_ear, 208	mhachain::chain_base_t, 458
L, 209	mhachain::plugs_t, 461
R, 209	b_ready
AuditoryProfile::profile_t::ear_t, 209	MHAJack::client_avg_t, 549
convert empty2normal, 209	b_snapshot
HTL, 209	acmon::acmon_t, 148
	b_starting
UCL, 209	io_parser_t, <mark>338</mark>
average	b_stopped
coherence::vars_t, 224	io_parser_t, <mark>338</mark>
avg_ipd	MHAJack::client_avg_t, 549
coherence::cohflt_t, 222	MHAJack::client_noncont_t, 551
azimuth	b_use_clipping
mha_direction_t, 399	calibrator_runtime_layer_t, 213
В	b_use_fir
MHAFilter::filter_t, 493	calibrator_runtime_layer_t, 213
MHAFilter::iir_filter_t, 501	b_use_profiling
:	mhachain::plugs_t, 462
b doasym_classification, 263	BARKSCALE ENTRIES
	mha_fftfb.cpp, 941
MHAParser::base_t::replace_t, 601	blnvert
B_ MUAFilterusempley bandness t 481	coherence::cohflt_t, 223
MHAFilter::complex_bandpass_t, 481	backward
MHAFilter::iir_ord1_real_t, 504	lpc_bl_predictor_config, 363
b_check_version	lpc_burglattice_config, 368
PluginLoader::mhapluginloader_t, 834	MHASignal::fft t, 729
b_complex	backward_scale
acsave::save_var_t, 160	MHASignal::fft_t, 729
b_cont	band weights
acmon::acmon_t, 148	dc::dc_vars_t, 241
b_est	bands
lpc_bl_predictor_config, 363	
b_exit_request	dc::wideband_inhib_vars_t, 245
fw_t, 318	MHAOvlFilter::fspacing_t, 584
b_flushed	bandw_correction
acsave::acsave_t, 156	speechnoise.cpp, 1008
b_fw_started	bark2hz_t
io_parser_t, 338	MHAOvlFilter::barkscale::bark2hz_t, 572
b_is_input	bartlett
calibrator_runtime_layer_t, 213	MHAWindow, 123
calibrator_t, 215	bartlett_t
b_is_prepared	MHAWindow::bartlett_t, 789

base_t	bookkeeping
MHAMultiSrc::base_t, 566	MHAFilter::partitioned_convolution_t, 516
MHAParser::base_t, 595	MHAParser::mhapluginloader_t, 642
MHAWindow::base_t, 790, 791	bool_mon_t
basename	MHAParser::bool_mon_t, 602
save_spec_t, 851	bool_t
save_wave_t, 853	MHAParser::bool_t, 605
shadowfilter_begin::shadowfilter_begin ←	bprofiling
_t, 856	mhachain::chain_base_t, 458
shadowfilter_end::shadowfilter_end_←	bracket balance
t, 859	MHAParser::StrCnv, 109
bbcalib_interface_t, 210	brown
~bbcalib_interface_t, 211	speechnoise_t, 875
bbcalib_interface_t, 211	browsemhaplugins.cpp, 911
calib_in, 211	DEBUG, 911
calib_out, 211	main, 911
plugloader, 211	buf
prepare, 211	ac2lsl::save_var_t, 133
process, 211	ac2lsl::save var t< mha complex t >,
release, 211	135
bbgain	mha fifo t, 417
gain::gain_if_t, 321	mha_spec_t, 426
beta	mha_spec_t, 420 mha_wave_t, 456
ADM::ADM, 179	buf_c_in
adm_if_t, 186	MHASignal::hilbert_fftw_t, 731
beta_const	buf_c_out
timo_params, 883	MHASignal::hilbert_fftw_t, 731
timoSmooth, 889	buf in
bf_src	MHASignal::fft_t, 730
steerbf, 878	buf_out
bf src copy	MHASignal::fft_t, 730
— — · ·	<u> </u>
steerbf_config, 879	buf_r_in MHASignal::bilbort ffty, t 721
bf_vec steerbf config, 879	MHASignal::hilbert_fftw_t, 731
= 0,	buf_r_out MHASignal::bilbort fftw t 721
bflush	MHASignal::hilbert_fftw_t, 731
acsave::acsave_t, 156 bin1	buf_uses_placement_new
	mha_fifo_t, 417 buffer
MHAOvlFilter::fftfb_t, 576	
bin2	MHASignal::delay_spec_t, 721
MHAOvlFilter::fftfb_t, 576	MHASignal::delay_t, 723
bin2freq	MHASignal::delay_wave_t, 724
Vector and matrix processing toolbox, 44	buffered_incoming_bytes
blackman 100	MHA_TCP::Connection, 436
MHAWindow, 123	buffered_outgoing_bytes
blackman_t	MHA_TCP::Connection, 436
MHAWindow::blackman_t, 792	burn
blockprocessing_polyphase_resampling_t	DynComp::dc_afterburn_rt_t, 275
MHAFilter::blockprocessing_polyphase	DynComp::dc_afterburn_t, 277
_resampling_t, 477	multibandcompressor::interface_t, 803
blocks	butter_stop_ord1
droptect_t, 271	MHAFilter, 92

bw	timoconfig.cpp, 1011
MHAOvIFilter::fscale_bw_t, 580	CHECK_EXPR
bw_	mha_defs.h, 935
MHAFilter::gamma_flt_t, 497	CHECK_VAR
bw_generator	mha_defs.h, 935
MHAFilter::thirdoctave_analyzer_t, 528	cLTASS
bw_hz	MHAOvlFilter::fftfb_ac_info_t, 574
MHAOvlFilter::fscale_bw_t, 580	MHAOvlFilter::fftfb_vars_t, 579
bw_name	calc_in
dc::dc_vars_t, 241	wave2spec_t, 896
bwv	calc_out
MHAOvIFilter::fftfb_ac_info_t, 574	overlapadd::overlapadd_t, 818
multibandcompressor::fftfb_plug_t, 801	spec2wave_t, 873
bypass and the trace	calc_pre_wnd
adm_if_t, 186	wave2spec_t, 895
db_if_t, 233	calib_in
dc::dc_t, 238	bbcalib_interface_t, 211
dc::dc_vars_t, 241	calib_out
dc_simple::dc_vars_t, 252 DynComp::dc_afterburn_vars_t, 280	bbcalib_interface_t, 211
Dynoonipuc_anerbum_vars_t, 200	calibrator_runtime_layer_t, 211
C	b_is_input, 213
ADM, 80	b_use_clipping, 213
C	b_use_fir, 213
acPooling_wave_config, 153	calibrator_runtime_layer_t, 212
doasvm_classification_config, 264	fir, 212
io_tcp_sound_t::float_union, 352	firfir2fftlen, 212
nlms_t, 807	firfirlen, 212
prediction_error, 837	gain, 212
c1_a	pmode, 213
MHAFilter::o1_ar_filter_t, 507	process, 212
c1_r	quant, 212
MHAFilter::o1_ar_filter_t, 507	softclip, 212
c2_a	speechnoise, 213 calibrator t, 213
MHAFilter::o1_ar_filter_t, 507	b is input, 215
c2_r	calibrator t, 214
MHAFilter::o1_ar_filter_t, 507	patchbay, 215
c_ifc_parser_t	prepare, 214
MHAParser::c_ifc_parser_t, 607	prepared, 215
c_min	process, 214
coherence::cohflt_t, 222 c parse cmd	read_levels, 215
MHAParser::c_ifc_parser_t, 608	release, 214
c_parse_cmd_t	update, 215
MHAParser, 106	update_tau_level, 215
c_parse_err	vars, 215
MHAParser::c_ifc_parser_t, 608	calibrator_variables_t, 215
c_parse_err_t	calibrator_variables_t, 216
MHAParser, 106	config_parser, 216
c_scale	do_clipping, 216
coherence::cohflt_t, 222	fir, 216
CHANLOOP	fragsize, 216

nbits, 216	cf_h
num_channels, 216	MHAOvlFilter::band_descriptor_t, 571
peaklevel, 216	cf_in
rmslevel, 216	overlapadd::overlapadd_if_t, 816
softclip, 216	smoothgains_bridge::overlapadd_if_
spnoise_channels, 216	t, 864
spnoise_level, 216	cf in
spnoise mode, 216	MHAParser::mhapluginloader_t, 642
spnoise_parser, 216	cf_input
srate, 216	PluginLoader::mhapluginloader t, 834
tau_level, 216	cf_l
can_read	MHAOvlFilter::band_descriptor_t, 571
 MHAFilter::blockprocessing_polyphase←	cf name
_resampling_t, 478	dc::dcvarst, 241
can_read_bytes	cf_out
MHA TCP::Connection, 434	overlapadd::overlapadd_if_t, 816
can read line	smoothgains_bridge::overlapadd_if_
MHA_TCP::Connection, 434	t, 864
can sysread	cf_out_
MHA_TCP::Connection, 432	MHAParser::mhapluginloader_t, 642
can_syswrite	cf_output
MHA_TCP::Connection, 432	PluginLoader::mhapluginloader_t, 834
can_update	cfac
addsndfile::level_adapt_t, 173	route::interface_t, 845
fader_wave::level_adapt_t, 305	cfg
catch_condition	MHAPlugin::config_t, 683
MHAPlugin_Split::posix_threads_t, 701	cfg_
catch_thread	MHAFilter::thirdoctave_analyzer_t, 528
MHAPlugin_Split::dummy_threads_t, 697	cfg_chain
MHAPlugin_Split::posix_threads_t, 700	MHAPlugin::config_t, 683
MHAPlugin_Split::thread_platform_t, 713	cfg_chain_current
categories	MHAPlugin::config_t, 683
plugindescription_t, 824	cfg_chain_t
cdata	MHAPlugin::cfg_chain_t, 678
MHASignal::matrix t, 745	cfg_dump
mha_audio_t, 391	MHAParser, 107
center frequencies	cfg_dump_short
dc::dc_vars_t, 241	MHAParser, 107
dc_simple::dc_if_t, 247	cfg_t, 217
cf	ac2lsl::cfg_t, 129
MHAFilter::thirdoctave analyzer t, 528	acsave::cfg_t, 157
MHAOvlFilter::band_descriptor_t, 571	alpha, 218
MHAOvlFilter::fftfb_vars_t, 579	attack, 218
mha_audio_descriptor_t, 390	cfg_t, 217
cf2bands	channel, 218
MHAOvlFilter::fspacing_t, 584	decay, 218
cf_	frozen_noise_, 218
MHAFilter::gamma_flt_t, 497	gain_spec_, 218
wavwriter_t, 899	gain_wave_, 218
cf_generator	matrixmixer::cfg_t, 371
MHAFilter::thirdoctave_analyzer_t, 528	pos, 218
_ , _ ,	• •

	process, 218	channelconfig_out_
	replace_, 218	MHAOvlFilter::overlap_save_filterbank_t,
	shadowfilter_begin::cfg_t, 854	588
	shadowfilter_end::cfg_t, 857	channels
	start_lin, 218	ac2wave_t, 138
	use_frozen_, 218	addsndfile::addsndfile_if_t, 171
cfin	— — — ·	dc::wideband_inhib_vars_t, 245
	altplugs_t, 198	MHAFilter::fftfilter t, 485
	fw_t, 318	MHAFilter::filter_t, 494
	mhachain::chain_base_t, 458	MHAParser::mhaconfig_mon_t, 639
	route::interface_t, 845	MHAPlugin_Split::split_t, 705
cfou	- ·	MHASignal::delay_t, 723
0100	altplugs_t, 198	mhaconfig_t, 464
	fw_t, 318	prediction_error_config, 840
	mhachain::chain_base_t, 458	rt nlms t, 848
	route::interface_t, 845	sine_cfg_t, 860
cfv	Touteinternace_t, 045	sine_t, 862
CIV	MHAQuEiltor::fftfb oo info t 579	Vector and matrix processing toolbox, 41
	MHAOvlFilter::fftfb_ac_info_t, 573 multibandcompressor::fftfb_plug_t, 801	
	mullibandcompressorntib_plug_t, 801	channels_t
cg		MHAMultiSrc::channels_t, 567
	coherence::cohflt_t, 222	chdir
ch	AULAO:	mha_audio_descriptor_t, 390
	MHASignal::doublebuffer_t, 727	check_index
cha		adm_rtconfig_t, 188
	acmon::acmon_t, 148	check_low
	acsave::acsave_t, 156	MHAParser::range_var_t, 651
	analysispath_if_t, 202	check_range
	db_if_t, 233	MHAParser::range_var_t, 652
	MHAPlugin_Resampling::resampling_if↔	check_sound_data_type
	_t, 689	io_tcp_sound_t, 350
	mhachain::chain_base_t, 458	check_up
	mhachain::plugs_t, 462	MHAParser::range_var_t, 652
cha	in_base_t	chname
	mhachain::chain_base_t, 457	dc::dc_vars_t, 241
cha	ins	chunkbytes_in
	MHAPlugin_Split::split_t, 706	io_tcp_sound_t, 350
cha	nge_mode	ci
	addsndfile::addsndfile_if_t, 171	matrixmixer::matmix_t, 373
cha	nnel	cleanup_plugs
	cfg_t, 218	mhachain::plugs_t, 461
	example5_t, 298	cleanup_unused_cfg
	MHAMultiSrc::channel_t, 567	MHAPlugin::config_t, 683
cha	nnel_gain_name	clear
	combc_if_t, 226	MHATableLookup::linear_table_t, 782
cha	nnel_gains_	MHATableLookup::table_t, 784
	combc_t, 227	MHATableLookup::xy_table_t, 787
cha	nnel info	mha_fifo_t, 417
	mha_spec_t, 426	Vector and matrix processing toolbox, 48
	mha_wave_t, 456	clear_chains
cha	nnel_no	MHAPlugin_Split::split_t, 704
	example6_t, 299	clear_plugins
		2.2 2 —I2.0.2

pluginbrowser_t, 823	process, 220
Client	release, 220
MHA_TCP::Client, 429	update, 220
client_avg_t	vars, 220
MHAJack::client_avg_t, 548	coherence::cohflt_t, 221
client_noncont_t	alpha, <mark>222</mark>
MHAJack::client_noncont_t, 551	avg_ipd, 222
client_t	b_ltg, 223
MHAJack::client_t, 554	blnvert, 223
clientid	c_min, 222
dc::dc_vars_t, 241	c_scale, 222
dc_simple::dc_if_t, 247	cg, 222
clientname	coh_c, 223
MHAIOJack::io_jack_t, 535	coh_rlp, 223
MHAIOJackdb::io_jack_t, 540	cohflt_t, 222
clipmeter	g, 222
softclipper_t, 868	gain, 223
clipped	gain_delay, 223
softclipper variables t, 870	insert, 222
close_session	limit, 222
wavwriter_t, 899	lp1i, 222
closed	lp1ltg, 223
MHA_TCP::Connection, 436	lp1r, 222
closesocket	nbands, 222
mha_tcp.cpp, 974	process, 222
cmd_prepare	s_out, 223
MHAIOPortAudio::io_portaudio_t, 545	staticgain, 223
cmd_release	coherence::vars_t, 223
MHAIOPortAudio::io_portaudio_t, 546	alpha, 224
cmd_start	average, 224
MHAIOPortAudio::io_portaudio_t, 545	delay, 224
cmd_stop	invert, 224
MHAIOPortAudio::io_portaudio_t, 545	limit, 224
co	ltgcomp, 224
matrixmixer::matmix t, 373	ltgtau, 224
coeff_decomb	mapping, 224
adm_if_t, 186	staticgain, 224
coeff_lp	tau, 224
 •	•
adm_if_t, 186	tau_unit, 224 vars t, 224
coh_c	<u> </u>
coherence::cohflt_t, 223	cohflt_if_t
coh_rlp	coherence::cohflt_if_t, 220
coherence::cohflt_t, 223	cohflt_t
coherence, 80	coherence::cohflt_t, 222
getcipd, 81	collect_result
coherence.cpp, 911	MHAPlugin_Split::split_t, 704
coherence::cohflt_if_t, 219	MHAPlugin_Split::splitted_part_t, 710
algo, 220	colored_intensity
cohflt_if_t, 220	Vector and matrix processing toolbox, 56
patchbay, 220	cols
prepare, 220	acsave::mat4head_t, 158

combc_if_t, 225	expi, 63, 65
channel_gain_name, 226	mha_complex, 62
combc_if_t, 226	normalize, 68
element_gain_name, 226	operator!=, 67
interleaved, 226	operator<, 68
outchannels, 226	operator*, 65, 66
prepare, 226	operator*=, 65
process, 226	operator+, 64
combc_t, 226	operator+=, 64
ac_, <mark>227</mark>	operator-, 64, 65, 67
channel_gains_, 227	operator-=, 64
combc_t, 227	operator/, 66, 67
element_gain_name_, 227	operator/=, 66
interleaved_, 227	operator==, 67
nbands, 227	reciprocal, 67
process, 227	safe_div, 66
s_out, 227	set, 62, 63
w_out, 227	stdcomplex, 63
combinechannels.cpp, 912	complex_bandpass_t
comm_var_t, 228	MHAFilter::complex_bandpass_t, 480
data, 229	complex_filter.cpp, 912
data_type, 228	complex_filter.h, 912
num_entries, 228	complex_mon_t
stride, 229	MHAParser::complex_mon_t, 611
commentate	complex_ofs
MHAParser, 107	MHASignal::matrix_t, 745
commit	complex_t
DynComp::dc_afterburn_vars_t, 280	MHAParser::complex_t, 613
commit_pending	compression
DynComp::dc_afterburn_t, 278	dc_simple::dc_t, 249
commit_t	compute_something
MHAParser::commit_t, 610	cpuload_t, 230
Communication between algorithms, 27	compute_something_else
get_var_float, 29	cpuload_t, 231
get_var_int, 29	Concept of Variables and Data Exchange in
get_var_spectrum, 28	the openMHA, 4
get_var_vfloat, 30	cond_to_process
get_var_waveform, 29	analysepath_t, 200
comp_each_iter	config_file_splitter_t
lpc, 359	PluginLoader::config_file_splitter_t, 825
lpc_config, 369	config_parser
comp_iter	calibrator_variables_t, 216
lpc_config, 370	config_t
Complex arithmetics in the openMHA, 60	MHAPlugin::config_t, 681
_conjugate, 67	configfile
_reciprocal, 68	PluginLoader::config_file_splitter_t, 826
abs, 66	configname
abs2, 66	PluginLoader::config_file_splitter_t, 826
almost, 68	configuration, 4
angle, 63	configuration variable, 4
conjugate, 67	conflux

DynComp::dc_afterburn_rt_t, 276	timo_AC, 880
DynComp::dc_afterburn_vars_t, 280	copy_AC
conjugate	timoConfig, 885
Complex arithmetics in the openMHA, 67	copy_channel
Vector and matrix processing toolbox, 59	MHASignal::spectrum_t, 759
connect	MHASignal::waveform_t, 774
MHAEvents::emitter_t, 470	Vector and matrix processing toolbox, 55
MHAEvents::patchbay_t, 471, 472	copy_error
connect_input	MHAIOTCP.cpp, 994
MHAJack::client_t, 555	copy_from_at
connect_output	MHASignal::waveform_t, 774
MHAJack::client_t, 555	copy_output_spec
connect_to	MHAPlugin_Split::split_t, 704
MHAJack::port_t, 561	copy_output_wave
connected	MHAPlugin_Split::split_t, 704
io_tcp_parser_t, 347	copy_permuted
Connection	MHASignal, 121
MHA_TCP::Connection, 432	corr_out
connection_loop	lpc_config, 370
io_tcp_t, 354	cpuload.cpp, 912
connections	cpuload_t, 229
MHAEvents::emitter_t, 470	compute_something, 230
connections_in	compute_something_else, 231
MHAIOJack::io_jack_t, 535	cpuload_t, 230
MHAIOJackdb::io_jack_t, 540	factor, 231
connections_out	phase, 231
MHAIOJack::io_jack_t, 535	prepare, 230
MHAIOJackdb::io_jack_t, 540	process, 230
connector	result, 231
MHAFilter::adapt_filter_t, 476	table, 231
MHAFilter::iir_filter_t, 501	use_sine, 231
MHAParser::mhapluginloader_t, 642	create_latex_doc
connector_base_t	generatemhaplugindoc.cpp, 922
MHAEvents::connector_base_t, 465	create_lock
connector t	mhamain.cpp, 998
MHAEvents::connector t, 468	creator
<u>—</u> ·	speechnoise_t, 876
MHAEvents::patchbay_t, 472	creator_A
• • •	MHAFilter::complex bandpass t, 480
consecutive_dropouts	• = • = •
droptect_t, 271	creator_B
contained_frames	MHAFilter::complex_bandpass_t, 480
MHASignal::ringbuffer_t, 750	cstr_strerror
conv2latex	mha_errno.c, 936
generatemhaplugindoc.cpp, 922	current
convert_empty2normal	altplugs_t, 198
AuditoryProfile::profile_t::ear_t, 209	dc::wideband_inhib_vars_t, 244
convert_f2logf	mha_rt_fifo_t, 425
gaintable.cpp, 921	current_input_signal_buffer_half_index
сору	MHAFilter::partitioned_convolution_t, 516
MHASignal::spectrum_t, 758	current_output_partition_index
MHASignal::waveform_t, 774	MHAFilter::partitioned_convolution_t, 516

current_powspec	MHAParser::vint_mon_t, 667
droptect_t, 271	MHAParser::vint_t, 670
current_thread_priority	MHAParser::vstring_mon_t, 671
MHAPlugin_Split::posix_threads_t, 700	MHAParser::vstring_t, 673
current_thread_scheduler	MHAPlugin::cfg_chain_t, 678
MHAPlugin_Split::posix_threads_t, 700	MHASignal::uint_vector_t, 766
	mha rt fifo element t, 422
DEBUG	wavwriter_t, 899
addsndfile.cpp, 908	data_is_initialized
browsemhaplugins.cpp, 911	MHAParser::base_t, 600
fader_wave.cpp, 920	data_type
MHAIOFile.cpp, 979	comm_var_t, 228
wavrec.cpp, 1014	db.cpp, 912
DEFAULT_RETSIZE	db2lin
mha_parser.hh, 955	Vector and matrix processing toolbox, 42
DELAY_FREQ	
ADM, 80	db_if_t, 231
DO RESAMPLE	~db_if_t, 232
addsndfile, 78	algo, 233
DONT RESAMPLE PERMISSIVE	bypass, 233
addsndfile, 78	chain, 233
DONT_RESAMPLE_STRICT	db_if_t, 232
addsndfile, 78	fragsize, 233
DUPVEC	patchbay, 233
dc.cpp, 913	plugloader, 233
data	prepare, 232
acsave::save_var_t, 160	process, 232
comm_var_t, 229	release, 232
DynComp::gaintable_t, 285	db_t, 233
MHA_AC::acspace2matrix_t, 380	db_t, 234
MHA_AC::double_t, 381	inner_process, 234
MHA_AC::float_t, 382	plugloader, 234
MHA_AC::int_t, 383	dbspl2pa
MHAParser::bool_mon_t, 603	Vector and matrix processing toolbox, 43
MHAParser::bool t, 605	DC
MHAParser::complex mon t, 612	dc_simple, 82
MHAParser::complex_t, 614	dc, 81
MHAParser::float_mon_t, 617	get_audiochannels, 81
MHAParser::float t, 620	dc.cpp, 913
MHAParser::int_mon_t, 622	DUPVEC, 913
MHAParser::int t, 624	dc::dc_if_t, 235
MHAParser::kw t, 630	algo, 236
MHAParser::mcomplex mon t, 631	dc_if_t, 236
MHAParser::mcomplex_t, 633	patchbay, 236
MHAParser::mfloat_mon_t, 635	prepare, 236
<u> </u>	process, 236
MHAParser::mfloat_t, 638	update, 236
MHAParser::string_mon_t, 654	•
MHAParser::string_t, 656	update_monitors, 236
MHAParser::vcomplex_mon_t, 659	wbinhib, 236
MHAParser::vcomplex_t, 661	dc::dc_t, 237
MHAParser::vfloat_mon_t, 663	attack, 238
MHAParser::vfloat_t, 666	bypass, 238

dc_t, 238	wb inhib cfg t, 243
decay, 238	weights, 243
explicit_insert, 238	dc::wideband_inhib_vars_t, 243
get_level_in_db, 238	bands, 245
get_level_in_db_adjusted, 238	channels, 245
get_nbands, 238	current, 244
gt, 238	dl_map_max, 244
inhib gain, 239	dl_map_min, 244
k_nyquist, 239	g_scale, 244
level_in_db, 239	I min, 244
level_in_db_adjusted, 239	patchbay, 245
max_level_difference, 239	setchannels, 244
naudiochannels, 239	update, 244
nbands, 239	weights, 244
powersum, 238	wideband inhib vars t, 244
process, 238	dc afterburn.cpp, 913
rmslevel, 238	mylogf, 914
dc::dc_vars_t, 239	dc afterburn.h, 914
band_weights, 241	dc_afterburn_rt_t
_ •	— — — — — — — — — — — — — — — — — — —
bw_name, 241	DynComp::dc_afterburn_rt_t, 275
bypass, 241	dc_afterburn_t
center_frequencies, 241	DynComp::dc_afterburn_t, 277
cf_name, 241	dc_afterburn_vars_t
chname, 241	DynComp::dc_afterburn_vars_t, 280
clientid, 241	dc_if_t
dc_vars_t, 240	dc::dc_if_t, 236
edge_frequencies, 241	dc_simple::dc_if_t, 246
ef_name, 241	dc_simple, 81
filterbank, 241	DC, 82
filtered_level, 241	force_resize, 82
gainrule, 241	LEVEL, 82
gtdata, 240	not_zero, 82
gtmin, 240	test_fail, 82
gtstep, 240	dc_simple.cpp, 914
input_level, 241	dc_simple::dc_if_t, 245
max_level_difference, 241	center_frequencies, 247
modified, 241	clientid, 247
powersum, 240	dc_if_t, 246
preset, 241	edge_frequencies, 247
tauattack, 240	filterbank, 247
taudecay, 241	gainrule, 247
taurmslevel, 240	has_been_modified, 247
use_wbinhib, 241	modified, 247
dc::dc_vars_validator_t, 242	mon_g, 247
dc_vars_validator_t, 242	mon_l, 247
dc::wb_inhib_cfg_t, 242	patchbay, 247
dl_diff, 243	prepare, 246
dl_map_max, 243	prepared, 247
dl_map_min, 243	preset, 247
g_scale, 243	process, 246, 247
I_min, 243	read_modified, 247

release, 246	dc::dc_vars_validator_t, 242
update_dc, 247	dc_simple::dc_vars_validator_t, 253
update_gain_mon, 247	deallocate_domains
update_level, 247	MHAPlugin_Split::domain_handler_t, 694
update_level_mon, 247	debug
dc_simple::dc_t, 248	io_tcp_parser_t, 347
compression, 249	debug_file
dc_t, 249	io_tcp_parser_t, 348
expansion, 249	debug_filename
expansion_threshold, 249	io_tcp_parser_t, 348
limiter, 249	decay
limiter_threshold, 249	cfg_t, 218
maxgain, 249	dc::dc_t, 238
mon_g, <mark>249</mark>	dc_simple::level_smoother_t, 254
mon_l, 249	softclip_t, 867
nbands, 249	softclipper_t, 868
process, 249	decomb_coeffs
dc_simple::dc_t::line_t, 250	adm_rtconfig_t, 189
line_t, 250	decomb_order
m, 250	adm_if_t, 186
operator(), 250	decrease_condition
y0, <mark>250</mark>	mha_fifo_posix_threads_t, 413
dc_simple::dc_vars_t, 251	decrement
bypass, <mark>252</mark>	mha_fifo_posix_threads_t, 412
dc_vars_t, 251	mha_fifo_thread_platform_t, 420
expansion_slope, 252	default_thread_platform_string
expansion_threshold, 252	split.cpp, 1010
g50, <mark>251</mark>	default_thread_platform_type
g80, <mark>251</mark>	split.cpp, 1010
limiter_threshold, 252	defaultHighInputLatency
maxgain, 251	MHAIOPortAudio::device_info_t, 543
tauattack, 252	defaultHighOutputLatency
taudecay, 252	MHAIOPortAudio::device_info_t, 543
dc_simple::dc_vars_validator_t, 252	defaultLowInputLatency
dc_vars_validator_t, 253	MHAIOPortAudio::device_info_t, 543
dc_simple::level_smoother_t, 253	defaultLowOutputLatency
attack, 254	MHAIOPortAudio::device_info_t, 543
decay, 254	defaultSampleRate
fftlen, 254	MHAIOPortAudio::device_info_t, 543
level_smoother_t, 254	Delay
level_spec, 254	ADM::Delay, 180
level_wave, 254	delay, 82
nbands, 254	coherence::vars_t, 224
process, 254	delaysum::delaysum_if_t, 258
dc_t	MHAFilter::gamma_flt_t, 496
dc::dc_t, 238	MHAFilter::partitioned_convolution_t
dc_simple::dc_t, 249	::index_t, 518
dc_vars_t	MHAPlugin_Split::split_t, 706
dc::dc_vars_t, 240	MHASignal::delay_spec_t, 721
dc_simple::dc_vars_t, 251	MHASignal::delay_wave_t, 724
dc_vars_validator_t	mha_dblbuf_t, 398

delay.cpp, 915	delete_plug
delay::interface_t, 255	altplugs_t, 198
delays, 256	delta_pitch
interface_t, 256	timo_params, 883
patchbay, 256	timoSmooth, 889
prepare, 256	descriptor
process, 256	mha_audio_t, 391
update, 256	desired_fill_count
delay_ac	mha_drifter_fifo_t, 404
ac2wave_if_t, 137	device index
ac2wave_t, 139	MHAIOPortAudio::io_portaudio_t, 546
delay_d	device_index_updated
prediction_error, 838	MHAIOPortAudio::io_portaudio_t, 545
delay_in	device_info
ac2wave_if_t, 137	MHAIOPortAudio::io_portaudio_t, 546
ac2wave_t, 139	device info t
delay_spec_t	MHAIOPortAudio::device_info_t, 543
MHASignal::delay_spec_t, 721	device_name
delay_t	MHAIOPortAudio::io_portaudio_t, 546
· —	device_name_updated
MHASignal::delay_t, 722	_ ·
delay_w	MHAIOPortAudio::io_portaudio_t, 545 df
prediction_error, 838	
delay_wave_t	frequency_translator_t, 312
MHASignal::delay_wave_t, 724	diff_coeffs
delays	mha_filter.cpp, 943
delay::interface_t, 256	diff_t
MHASignal::delay_t, 723	MHAFilter::diff_t, 482
delays_in	digits
MHAIOJack::io_jack_t, 535	mha_error_helpers, 86
delays_out	dimension
MHAIOJack::io_jack_t, 536	MHASignal::matrix_t, 741
delaysum, 82	dimensions
delaysum.cpp, 915	acmon::acmon_t, 148
delaysum::delaysum_if_t, 256	dimstr
delay, 258	acmon::ac_monitor_t, 145
delaysum_if_t, 258	dir
patchbay, 259	mha_channel_info_t, 392
prepare, 258	dir_t
process, 258	MHAJack::port_t, 559
release, 258	dir_type
update_cfg, 258	MHAJack::port_t, 561
weights, 258	discard
delaysum::delaysum_t, 259	MHASignal::ringbuffer_t, 751
delaysum_t, 260	disconnect
out, 260	MHAEvents::emitter_t, 470
process, 260	dispmode
weights, 260	acmon::acmon_t, 148
delaysum_if_t	distance
delaysum::delaysum_if_t, 258	mha_direction_t, 400
delaysum_t	distances
delaysum::delaysum_t, 260	adm_if_t, 186

dl_diff	patchbay, 267
dc::wb_inhib_cfg_t, 243	prepare, 266
dl_map_max	process, 266
dc::wb_inhib_cfg_t, 243	release, 266
dc::wideband_inhib_vars_t, 244	update_cfg, 267
dl_map_min	vGCC_name, 267
dc::wb_inhib_cfg_t, 243	doasvm_feature_extraction.cpp, 916
dc::wideband_inhib_vars_t, 244	INSERT_PATCH, 916
dm	PATCH_VAR, 916
lpc_burglattice_config, 368	doasvm_feature_extraction.h, 916
do_clipping	doasvm_feature_extraction_config, 267
calibrator_variables_t, 216	~doasvm_feature_extraction_config, 268
doagcc	doagcc, 268
doasvm_feature_extraction_config, 268	doasvm_feature_extraction_config, 268
doasvm	fft, 268
doasvm_classification_config, 264	fftlen, 268
doasym classification, 261	G, 268
~doasvm_classification, 262	G_length, 268
angles, 263	GCC end, 268
b, 263	GCC_start, 268
doasvm classification, 262	hifftwin, 268
max_p_ind_name, 263	hifftwin_sum, 268
p_name, 263	hwin, 268
patchbay, 263	ifft, 268
prepare, 262	in_spec, 268
process, 262	proc_wave, 268
release, 262	process, 268
update_cfg, 263	vGCC_ac, 268
vGCC_name, 263	vGCC, 268
w, 263	wndlen, 268
x, 263	doc_appendix.h, 917
y, 263	doc_examples.h, 917
doasym_classification.cpp, 915	doc_frameworks.h, 917
INSERT_PATCH, 916	doc general.h, 917
PATCH_VAR, 916	doc_kernel.h, 917
doasym_classification.h, 916	doc_matlab.h, 917
doasym_classification_config, 263	doc_mhamain.h, 917
~doasym_classification_config, 264	doc_parser.h, 917
ac, 264	doc plugif.cpp, 917
c, 264	doc_plugins.h, 917
doasym, 264	doc_system.h, 917
doasvm_classification_config, 264	doc toolbox.h, 917
p, 264	documentation
p_max, 264	plugindescription_t, 824
process, 264	domain
doasym_feature_extraction, 265	MHAParser::mhaconfig_mon_t, 639
~doasym_feature_extraction, 266	MHAPlugin_Split::splitted_part_t, 710
doasvm_feature_extraction, 266	mhaconfig t, 464
fftlen, 267	domain_handler_t
max_lag, 267	MHAPlugin_Split::domain_handler_t, 693
nupsample, 267	double_t

MHA_AC::double_t, 381	MHAIOParser.cpp, 987, 988
doublebuffer_t	MHAIOPortAudio.cpp, 990, 991
MHASignal::doublebuffer t, 725	MHAIOTCP.cpp, 993, 994
down	dummy_jack_proc_cb
MHASignal::schroeder_t, 754	mhajack.cpp, 995
downsample.cpp, 917	dummy threads t
downsampling_factor	MHAPlugin_Split::dummy_threads_t, 697
MHAFilter::polyphase_resampling_t, 522	dump_mha
downscale	fw_t, 317
MHASignal::quantizer_t, 748	dup
	•
dphi	MHAFilter::thirdoctave_analyzer_t, 528
hilbert_shifter_t, 325	dupvec
drain	Vector and matrix processing toolbox, 45
DynComp::dc_afterburn_vars_t, 280	dupvec_chk
drain_inv	Vector and matrix processing toolbox, 46
DynComp::dc_afterburn_rt_t, 276	DynComp, 83
dropouts	interp1, 83
droptect_t, 271	interp2, 84
droptect.cpp, 917	DynComp::dc_afterburn_rt_t, 274
droptect_t, 269	burn, 275
blocks, 271	conflux, 276
consecutive_dropouts, 271	dc_afterburn_rt_t, 275
current_powspec, 271	drain_inv, 276
dropouts, 271	lp, 276
droptect_t, 270	maxgain, 276
filter_activated, 271	mpo_inv, 276
filtered_powspec, 271	DynComp::dc_afterburn_t, 276
filtered_powspec_mon, 271	_cf, 278
level_mon, 271	_channels, 278
period, 271	_srate, 278
prepare, 270	burn, 277
process, 270	commit_pending, 278
release, 270	dc_afterburn_t, 277
reset, 271	fb_pars_configured, 278
•	_,
tau, 271	patchbay, 278
threshold, 271	set_fb_pars, 277
ds_t, 272	unset_fb_pars, 277
antialias, 273	update, 278
ds_t, 272	update_burner, 277
prepare, 273	DynComp::dc_afterburn_vars_t, 278
process, 273	bypass, 280
ratio, 273	commit, 280
release, 273	conflux, 280
dt	dc_afterburn_vars_t, 280
mha_audio_descriptor_t, 390	drain, 280
dtime	f, 280
MHA_TCP, 89	maxgain, 280
dummy_interface_test	mpo, 280
MHAIOFile.cpp, 979, 980	taugain, 280
MHAIOJack.cpp, 982, 983	DynComp::gaintable_t, 280
MHAIOJackdb.cpp, 984, 985	~gaintable_t, 283
	9

data, 285	MHAIOTCP.cpp, 993
gaintable_t, 282	ESTIM_CUR
get_gain, 283, 284	nlms_wave.cpp, 1001
get_iofun, 284	ESTIM_PREV
get_vF, <mark>284</mark>	nlms_wave.cpp, 1001
get_vL, 284	ESTIMATION_TYPES
nbands, 284	nlms_wave.cpp, 1001
nchannels, 284	ear_t
num_channels, 284	AuditoryProfile::parser_t::ear_t, 206
num_F, 284	edge_frequencies
num_L, 284	dc::dc_vars_t, 241
update, 283	dc_simple::dc_if_t, 247
vFlog, <mark>285</mark>	ef
vF, 285	MHAOvlFilter::fftfb_vars_t, 579
vL, 284	ef2bands
dynamiclib_t, 273	MHAOvlFilter::fspacing_t, 584
~dynamiclib_t, 274	ef_h
dynamiclib_t, 274	MHAOvlFilter::band_descriptor_t, 571
fullname, 274	ef_l
getmodulename, 274	MHAOvlFilter::band_descriptor_t, 571
getname, 274	ef_name
h, 274	dc::dc_vars_t, 241
modulename, 274	efv
resolve, 274	MHAOvlFilter::fftfb_ac_info_t, 573
resolve_checked, 274	multibandcompressor::fftfb_plug_t, 801
EPSILON	element_gain_name
lpc_bl_predictor.h, 925	combc_if_t, 226
lpc_burg-lattice.h, 926	element_gain_name_
timoconfig.cpp, 1011	combc_t, 227
EPrew	elevation
prediction_error_config, 841	mha_direction_t, 399
ERR IHANDLE	emit_event
MHAIOFile.cpp, 979	MHAEvents::connector_base_t, 466
MHAIOJack.cpp, 981	MHAEvents::connector_t, 468
MHAIOJackdb.cpp, 984	emitter
MHAIOParser.cpp, 987	MHAEvents::connector_t, 469
MHAIOPortAudio.cpp, 990	emitter_die
MHAIOTCP.cpp, 993	MHAEvents::connector_base_t, 466
ERR_SUCCESS	emitter_is_alive
MHAIOFile.cpp, 979	MHAEvents::connector_base_t, 466
MHAIOJack.cpp, 981	empty_string
MHAIOJackdb.cpp, 984	MHAParser::keyword_list_t, 627
MHAIOParser.cpp, 987	end_time
MHAIOPortAudio.cpp, 990	MHA_TCP::Timeout_Event, 450
MHAIOTCP.cpp, 993	entries
ERR_USER	MHAParser::keyword_list_t, 627
MHAIOFile.cpp, 979	MHAParser::parser_t, 648
MHAIOJack.cpp, 981	entry
MHAIOJackdb.cpp, 984	MHAParser::entry_t, 614
MHAIOParser.cpp, 987	entry_map_t
MHAIOPortAudio.cpp, 990	MHAParser, 106

entry_t	MHAEvents::connector_t, 469
MHAParser::entry_t, 614	eventhandler_suu
envelope_delay	MHAEvents::connector_t, 469
MHAFilter::gamma_flt_t, 497	Events
envreplace	MHA_TCP::Event_Watcher, 438
MHAParser, 107	events
eof	MHA_TCP::Event_Watcher, 438
MHA_TCP::Connection, 433	example1.cpp, 918
epsilon	example1_t, 285
smoothgains_bridge::overlapadd_if_ ↔	example1_t, 286
t, 864	prepare, 286
equal_dim	process, 287
Vector and matrix processing toolbox, 46,	release, 286
47	example2.cpp, 918
equidist2bands	example2_t, 287
MHAOvlFilter::fspacing_t, 584	example2_t, 289
erb_hz_f_hz	factor, 290
speechnoise.cpp, 1007	prepare, 289
err_in	process, 289
MHAFilter::adapt_filter_param_t, 473	release, 289
MHAFilter::adapt_inter_param_t, 476	scale_ch, 290
error	example3.cpp, 918
MHA_TCP::Thread, 449	example3_t, 290
mha fifo lw t, 411	example3_t, 292
Error handling in the openMHA, 31	factor, 293
MHA_ErrorMsg, 31	
_	on_prereadaccess, 292
MHA_assert, 32	on_scale_ch_readaccess, 292
MHA_assert_equal, 32	on_scale_ch_valuechanged, 292
mha_debug, 32	on_scale_ch_writeaccess, 292
errorlog	patchbay, 293
fw_t, 317	prepare, 292
estimateDebug	prepared, 293
noisePowProposedScale::noisePow Proposed 012	process, 293
Proposed, 813	release, 293
estimtype	scale_ch, 293
nlms_t, 807	example4.cpp, 918
event_add_plug	example4_t, 294
altplugs_t, 197	example4_t, 295
event_delete_plug	factor, 297
altplugs_t, 197	on_prereadaccess, 296
event_select_plug	on_scale_ch_readaccess, 296
altplugs_t, 197	on_scale_ch_valuechanged, 296
event_set_plugs	on_scale_ch_writeaccess, 296
altplugs_t, 197	patchbay, 297
event_start_recording	prepare, 296
acsave::acsave_t, 156	prepared, 297
event_stop_and_flush	process, 296
acsave::acsave_t, 156	release, 296
eventhandler	scale_ch, 297
MHAEvents::connector_t, 469	example5.cpp, 918
eventhandler_s	declspec, 919

example5_t, 297	f0_high
channel, 298	timo_params, 882
example5_t, 298	timoSmooth, 889
process, 298	f0_low
scale, 298	timo_params, 882
example6.cpp, 919	timoSmooth, 889
declspec, 919	F Uflt
example6_t, 298	prediction_error_config, 840
channel no, 299	f_est
example6_t, 299	lpc_bl_predictor_config, 363
patchbay, 299	f hz
prepare, 299	MHAOvlFilter::fscale_t, 582
process, 299	FINISHED
rmsdb, 299	MHA_TCP::Thread, 447
update_cfg, 299	FMTsz
exec fw command	mha_os.h, 949
fw_t, 316	factor
exit_on_stop	
fw_t, 317	cpuload_t, 231
exit_request	example2_t, 290
fw t, 315	example3_t, 293
expansion	example4_t, 297
dc_simple::dc_t, 249	plugin_interface_t, 822
expansion_slope	fader_if_t, 300
dc_simple::dc_vars_t, 252	actgains, 301
expansion_threshold	fader_if_t, 301
dc_simple::dc_t, 249	newgains, 301
dc_simple::dc_vars_t, 252	patchbay, 301
expflt	prepare, 301
MHAOvlFilter::ShapeFun, 103	process, 301
	tau, <mark>301</mark>
expi Complex arithmetics in the openMHA, 63,	update_cfg, 301
65	fader_spec.cpp, 919
explicit_insert	fader_wave, 84
dc::dc_t, 238	level_adaptor, 85
— ·	fader_wave.cpp, 919
export_to MHASignal::spectrum_t, 759	DEBUG, 920
<u> </u>	fader_wave::fader_wave_if_t, 302
MHASignal::waveform_t, 775	fader wave if t, 303
expression_t, 300	gain, 303
MHAParser::expression_t, 615	patchbay, 303
extern_connector	prepare, 303
MHAParser::commit_t, 610	prepared, 303
F	process, 303
prediction_error_config, 840	ramplen, 303
rt_nlms_t, 848	release, 303
f	set_level, 303
AuditoryProfile::parser_t::fmap_t, 207	fader_wave::level_adapt_t, 304
• • • • • •	can_update, 305
DynComp::dc_afterburn_vars_t, 280	get_level, 305
io_tcp_sound_t::float_union, 352	ilen, 305
MHAOvIFilter::fftfb_vars_t, 578	
MHAOvlFilter::fscale_t, 582	I_new, 305

	I_old, 305	MHAFilter::partitioned_convolution_t, 517
	level_adapt_t, 304	MHAFilter::smoothspec_t, 527
	pos, 305	overlapadd::overlapadd_t, 817
	update_frame, 305	fft_t
	wnd, 305	MHASignal::fft_t, 728
fade	er_wave_if_t	fftfb_ac_info_t
	fader_wave::fader_wave_if_t, 303	MHAOvIFilter::fftfb_ac_info_t, 573
fail_	_on_async_jackerr	fftfb_interface_t
	MHAIOJackdb::io_jack_t, 540	fftfilterbank::fftfb_interface_t, 306
fail_	_on_async_jackerror	fftfb_plug_t
	MHAIOJackdb::io_jack_t, 539	fftfilterbank::fftfb_plug_t, 310
	MHAJack::client_t, 558	multibandcompressor::fftfb_plug_t, 801
fail_	on_nonmonotonic	fftfb_t
	MHAOvlFilter::fftfb_vars_t, 579	MHAOvlFilter::fftfb_t, 575
fail_	on_nonmonotonic_cf	fftfb_vars_t
	MHAOvlFilter::fspacing_t, 584	MHAOvlFilter::fftfb_vars_t, 578
fail_	on_unique_bins	fftfilter_t
	MHAOvIFilter::fftfb_vars_t, 579	MHAFilter::fftfilter_t, 483
fail_	on_unique_fftbins	fftfilterbank, 85
	MHAOvlFilter::fspacing_t, 584	fftfilterbank.cpp, 920
fallb	pack_spec	fftfilterbank::fftfb_interface_t, 305
	altplugs_t, 198	algo, 308
fallb	pack_wave	fftfb_interface_t, 306
	altplugs_t, 198	nbands, 308
Fas	t Fourier Transform functions, 70	nchannels, 308
	mha_fft_backward, 74	patchbay, 308
	mha_fft_backward_scale, 75	prepare, 306
	mha_fft_forward, 74	prepared, 308
	mha_fft_forward_scale, 75	process, 308
	mha_fft_free, 71	release, 308
	mha_fft_new, 71	return_imag, 308
	mha_fft_spec2wave, 73	update_cfg, 308
	mha_fft_spec2wave_scale, 76	fftfilterbank::fftfb_plug_t, 309
	mha_fft_t, 71	fb_acinfo, 310
	mha_fft_wave2spec, 72	fftfb_plug_t, 310
	mha_fft_wave2spec_scale, 75	imag, 310
fata	llog	insert, 310
	fw_t, 317	process, 310
fb		return_imag_, 310
	MHAFilter::thirdoctave_analyzer_t, 529	s_out, 310
fb_a	acinfo	fftfilterbank_t
	fftfilterbank::fftfb_plug_t, 310	MHAFilter::fftfilterbank_t, 487
fb_p	pars_configured	fftlen
	DynComp::dc_afterburn_t, 278	dc_simple::level_smoother_t, 254
fd		doasvm_feature_extraction, 267
	MHA_TCP::Connection, 436	doasvm_feature_extraction_config, 268
	MHA_TCP::OS_EVENT_TYPE, 439	MHAFilter::fftfilter_t, 485
fft		MHAFilter::fftfilterbank_t, 489
	doasvm_feature_extraction_config, 268	MHAFilter::smoothspec_t, 527
	MHAFilter::fftfilter_t, 486	MHAOvlFilter::fftfb_t, 576
	MHAFilter::fftfilterbank_t, 490	MHAOvlFilter::overlap_save_filterbank_←

t::vars_t, 589	MHAFilter::filter_t, 491, 492
MHAParser::mhaconfig_mon_t, 639	filterbank
mhaconfig_t, 464	dc::dc_vars_t, 241
rmslevel_t, 843	dc_simple::dc_if_t, 247
timoConfig, 885	filtered_level
fftw_plan_fft	dc::dc_vars_t, 241
MHASignal::fft_t, 730	filtered_powspec
fftw_plan_ifft	droptect_t, 271
MHASignal::fft_t, 730	filtered_powspec_mon
fftw_plan_spec2wave	droptect_t, 271
MHASignal::fft_t, 730	filtershapefun
fftw_plan_wave2spec	mha_fftfb.cpp, 941 fir
MHASignal::fft_t, 730 fhz2bandno	
speechnoise.cpp, 1007	calibrator_runtime_layer_t, 212 calibrator_variables_t, 216
fifo	firchannels
wavwriter_t, 899	MHAFilter::fftfilterbank t, 489
fifo_size	firfir2fftlen
_	calibrator_runtime_layer_t, 212
mha_dblbuf_t, 398 fifolen	firfirlen
analysispath_if_t, 202	calibrator_runtime_layer_t, 212
wavrec_t, 898	flag_terminate_inner_thread
fileformat	analysepath_t, 200
acsave::acsave_t, 156	flags
filename	MHAJack::client_t, 558
addsndfile::addsndfile_if_t, 171	float_mon_t
filename_input	MHAParser::float_mon_t, 616
io_file_t, 331	float_t
filename_output	MHA AC::float t, 382
io_file_t, 331	MHAParser::float_t, 619
fill_info	flush_data
MHAIOPortAudio::device_info_t, 543	acsave::cfg_t, 157
filled	fmap_t
MHASignal::async_rmslevel_t, 720	AuditoryProfile::parser_t::fmap_t, 207
filter	fmax
MHAFilter::adapt_filter_state_t, 474	frequency_translator_t, 312
MHAFilter::adapt_filter_t, 475	fmin
MHAFilter::complex_bandpass_t, 480,	frequency_translator_t, 312
481	fname
MHAFilter::fftfilter_t, 484, 485	acsave::acsave_t, 156
MHAFilter::fftfilterbank t, 488, 489	for_each
MHAFilter::filter_t, 492, 493	Vector and matrix processing toolbox, 42
MHAFilter::iir_filter_t, 500	force_remove_item
filter_activated	MHAParser::parser_t, 646
droptect_t, 271	force_resize
filter_analytic	dc_simple, 82
MHAOvlFilter::overlap_save_filterbank_	forward
analytic_t, 586	lpc_bl_predictor_config, 363
filter_partitions	lpc_burglattice_config, 367
MHAFilter::partitioned_convolution_t, 515	MHASignal::fft_t, 728
filter_t	forward_scale

MHASignal::fft_t, 729	freq2bin
fr	Vector and matrix processing toolbox, 44
spec_fader_t, 874	frequency
frag_out	sine_t, 862
MHAJack::client_avg_t, 549	frequency_response
MHAJack::client_noncont_t, 552	MHAFilter::partitioned_convolution_t, 516
fragsize	frequency_translator_t, 311
analysispath_if_t, 202	df, 312
calibrator_variables_t, 216	fmax, 312
db_if_t, 233	fmin, 312
io_file_t, 331	frequency_translator_t, 312
io_parser_t, 338	irslen, 312
io_tcp_sound_t, 351	patchbay, 312
MHAFilter::fftfilter_t, 485	phasemode, 312
MHAFilter::fftfilterbank_t, 489	prepare, 312
MHAFilter::partitioned_convolution_t, 515	process, 312
MHAFilter::resampling filter t, 524	release, 312
MHAIOPortAudio::io_portaudio_t, 546	update, 312
MHAJack::client t, 557	front_channel
MHAParser::mhaconfig mon t, 639	adm_rtconfig_t, 189
MHAPlugin Resampling::resampling if↔	front channels
_t, 689	adm_if_t, 186
mhaconfig_t, 464	adm_rtconfig_t, 189
fragsize_in	frozen_noise_
MHAFilter::blockprocessing_polyphase←	cfg_t, 218
_resampling_t, 478	frozennoise_length
fragsize_out	noise_t, 809
MHAFilter::blockprocessing_polyphase↔	fs
_resampling_t, 478	MHAFilter::o1 ar filter t, 507
fragsize_ratio	fs_
MHAIOJackdb::io_jack_t, 540	MHAOvIFilter::fspacing_t, 584
fragsize_validator	fscale
MHAFilter::resampling_filter_t, 524	MHAOvlFilter::fftfb_vars_t, 578
frame	fscale_bw_t
MHA AC::acspace2matrix t, 380	MHAOvIFilter::fscale bw t, 580
framecnt	fscale_t
acsave::save_var_t, 160	MHAOvlFilter::fscale_t, 582
frameno	fshift_hilbert.cpp, 920
MHA AC::acspace2matrix t, 380	fspacing_t
noisePowProposedScale::noisePow↔	MHAOvlFilter::fspacing_t, 584
Proposed, 813	ft
frames	spec2wave_t, 872
ac2wave_t, 138	wave2spec_t, 895
prediction_error_config, 839	ftype
rt_nlms_t, 848	MHAOvlFilter::fftfb_vars_t, 578
frameshift	fu
hilbert shifter t, 325	
framework thread_priority	rt_nlms_t, 849 fu previous
MHAPlugin_Split::split_t, 706	rt_nlms_t, 849
framework thread_scheduler	fuflt
MHAPlugin_Split::split_t, 705	
wii izi Tugin_opiitspiit_t, 700	rt_nlms_t, 849

fullname	fw_stopping, 315
dynamiclib_t, 274	fw_t, 315
MHAParser::base_t, 599	fw_unprepared, 315
plugindescription_t, 824	fw_until, 317
fullspec	fw_until_cmd, 316
hilbert_shifter_t, 325	get_input_signal_dimension, 316
fun_t	get_parserstate, 317
MHAWindow::fun_t, 793	inst_name, 317
funs	io_error, 318
MHAOvlFilter::scale_var_t, 591	io_lib, 318
fw cmd	io_name, 317
fw_t, 317	load_io_lib, 316
fw_exiting	load_proc_lib, 316
fw_t, 315	nchannels_out, 317
fw_fragsize	parserstate, 317
MHAIOJack::io_jack_t, 535	patchbay, 318
fw_running	plugin_paths, 317
fw_t, 315	plugins, 317
fw samplerate	prepare, 315
MHAIOJack::io_jack_t, 535	prepare_vars, 317
fw_sleep	proc_error, 318
fw t, 317	proc_error_string, 318
fw_sleep_cmd	proc_lib, 318
fw t, 316	proc_name, 317
fw_starting	process, 316
fw_t, 315	quit, 316
fw_stopped	release, 316
fw_t, 315	start, 315
fw_stopping	started, 316
fw_t, 315	state, 318
fw_t, 313	state_t, 315
~fw_t, 315	stop, 315
ac, 317	stopped, 316
async_poll_msg, 317	fw_unprepared
async_read, 317	fw_t, 315
b_exit_request, 318	fw_until
cfin, 318	fw_t, 317
cfout, 318	fw_until_cmd
dump_mha, 317	fw_t, 316
errorlog, 317	fw_vars_t, 318
exec_fw_command, 316	fw_vars_t, 319
exit_on_stop, 317	lock_channels, 319
exit_request, 315	lock_srate_fragsize, 319
fatallog, 317	pfragmentsize, 319
fw_cmd, 317	pinchannels, 319
fw_exiting, 315	psrate, 319
fw_running, 315	unlock_channels, 319
fw_sleep, 317	unlock_srate_fragsize, 319
fw_sleep_cmd, 316	fwcb
fw_starting, 315	io_tcp_t, 355
fw_stopped, 315	G
···_otoppou, o to	∽

	doasvm_feature_extraction_config, 268	gain::scaler_t, 322
g		scaler_t, 322
	coherence::cohflt_t, 222	gain_ac
g50		ac2wave_if_t, 137
•	dc_simple::dc_vars_t, 251	ac2wave_t, 139
g80	_ ·	gain_delay
0	dc_simple::dc_vars_t, 251	coherence::cohflt_t, 223
G F	ERRNO	gain_if_t
<u> </u>	MHA TCP, 89	gain::gain_if_t, 321
GI	ength	gain_in
<u>~_</u> .	doasvm_feature_extraction_config, 268	ac2wave_if_t, 137
n e	cale	ac2wave_t, 139
9_0	dc::wb_inhib_cfg_t, 243	gain_min
	dc::wideband_inhib_vars_t, 244	timoConfig, 885
CC		
GC	C_end	gain_min_db
~~	doasvm_feature_extraction_config, 268	timo_params, 883
GC	C_start	timoSmooth, 890
<u> </u>	doasvm_feature_extraction_config, 268	gain_spec_
GH	COMMITHASH	cfg_t, 218
	mha_plugin.hh, 957	gain_wave_
GLI	RDebug	cfg_t, 218
	noisePowProposedScale::noisePow ←	gain_wiener
	Proposed, 813	timoConfig, 886
GL	Rexp	gain_wiener_AC
	noisePowProposedScale::noisePow←	timo_AC, 881
	Proposed, 813	gainrule
	timoConfig, 886	dc::dc_vars_t, 241
GL	₹	dc_simple::dc_if_t, 247
	timoConfig, 886	gains
GR	EETING TEXT	gain::gain_if_t, 321
	mhamain.cpp, 998	prediction_error, 837
gair	n, 85	shadowfilter_end::cfg_t, 857
	calibrator_runtime_layer_t, 212	spec_fader_t, 874
	coherence::cohflt_t, 223	gaintable.cpp, 921
	fader_wave::fader_wave_if_t, 303	convert_f2logf, 921
	multibandcompressor::plugin_signals_t,	isempty, 921
	805	gaintable.h, 921
nair	n.cpp, 920	gaintable_t
_	n.cpp, 320 n::gain_if_t, 320	DynComp::gaintable_t, 282
yan	bbgain, 321	
	•	gamma_flt_t
	gain_if_t, 321	MHAFilter::gamma_flt_t, 495
	gains, 321	gamma_post
	patchbay, 321	timoConfig, 886
	prepare, 321	gamma_post_AC
	process, 321	timo_AC, 880
	release, 321	gauss
	update_bbgain, 321	MHAOvlFilter::ShapeFun, 103
	update_gain, 321	gcd
	update_minmax, 321	MHAFilter, 93
	vmax, 321	generatemhaplugindoc.cpp, 921
	vmin, 321	conv2latex, 922

	create_latex_doc, 922	get	_configname
	main, 922		PluginLoader::config_file_splitter_t, 825
get		get	_connected
	MHAFilter::gamma_flt_t, 496		io_tcp_parser_t, 345
get		get	_cpu_load
	MHAParser::base_t::replace_t, 601		MHAJack::client_t, 556
get		get	_current_profile
	latex_doc_t, 356		AuditoryProfile::parser_t, 205
	plug_t, 821	get	_delay
get	_accept_event		mha_dblbuf_t, 396
	MHA_TCP::Server, 441	get	_delays_in
get	_all_input_ports		MHAIOJack::io_jack_t, 535
	MHAIOJack::io_jack_t, 535	get	_delays_out
	MHAIOJackdb::io_jack_t, 540		MHAIOJack::io_jack_t, 535
get	_all_output_ports	get	_des_fill_count
	MHAIOJack::io_jack_t, 535		mha_drifter_fifo_t, 403
	MHAIOJackdb::io_jack_t, 540	get	_documentation
get	_audiochannels		PluginLoader::mhapluginloader_t, 833
	dc, 81	get	_ear
get	_available_space		AuditoryProfile::parser_t::ear_t, 206
	mha_drifter_fifo_t, 403		AuditoryProfile::profile_t, 208
	mha_fifo_t, 416	get	_ef_hz
get			MHAOvlFilter::fspacing_t, 584
	MHAParser::base_t::replace_t, 601	get	_entries
get_	_bw_hz		algo_comm_t, 194
	MHAOvlFilter::fscale_bw_t, 580		MHAKernel::algo_comm_class_t, 564
get			MHAParser::keyword_list_t, 626
	MHAFilter::o1flt_lowpass_t, 509	get	_error
get	_c_handle		algo_comm_t, 194
	MHAKernel::algo_comm_class_t, 563		MHAKernel::algo_comm_class_t, 564
get	_categories	get	_f_hz
	latex_doc_t, 356		MHAOvlFilter::fscale_t, 582
~~+	PluginLoader::mhapluginloader_t, 833	gei_	_fbpower
geı_	_cdata		MHAOvlFilter::fftfb_t, 575
~~+	MHASignal::matrix_t, 745	gei_	_fbpower_db _MUAO:dFilter:uffffb_t_575
geı_	_cf_fftbin	act	MHAOvlFilter::fftfb_t, 575
aat	MHAOvlFilter::fspacing_t, 584	get	MHA_TCP::Connection, 433
geı_	_cf_hz MHAFilter::thirdoctave_analyzer_t, 528	aot	fftlen
	MHAOvIFilter::fspacing_t, 584	gei_	MHAOvIFilter::fftfb_t, 576
apt	_cfin	net	fifo_size
gci_	MHAParser::mhapluginloader_t, 642	gci_	mha dblbuf t, 396
net	_cfout	net	_fill_count
got_	MHAParser::mhapluginloader_t, 642	goi <u>.</u>	mha_drifter_fifo_t, 403
net	_channelconfig		mha_fifo_t, 416
got_	MHAOvlFilter::overlap_save_filterbank_t,	aet	_fmap
	588	901	AuditoryProfile::parser_t::fmap_t, 207
aet	_comm_var	aet	_fragsize
J-1_	MHASignal::matrix_t, 740	9-1	MHAJack::client_t, 555
get	configfile	get	_frequencies
-	PluginLoader::config_file_splitter_t, 826	-	AuditoryProfile::fmap_t, 203

get_fun	io_tcp_parser_t, 344
MHAOvlFilter::scale_var_t, 591	get_longmsg
get_gain	MHA_Error, 407
DynComp::gaintable_t, 283, 284	get_ltass_gain_db
get_handle	MHAOvlFilter::fftfb_t, 576
plug_t, 821	get_main_category
get_index	latex_doc_t, 356
MHAParser::keyword list t, 626	get_mapping
MHASignal::matrix_t, 744	MHASignal::loop_wavefragment_t, 735
get_inner_error	get_max_fill_count
mha_dblbuf_t, 396	mha_fifo_t, 416
get_inner_size	get_min_fill_count
mha_dblbuf_t, 396	mha_drifter_fifo_t, 404
get_input_channels	get_msg
mha_dblbuf_t, 396	MHA_Error, 407
get_input_fifo_fill_count	get_my_input_ports
mha dblbuf t, 396	MHAJack::client_t, 556
get input fifo space	get_my_output_ports
mha_dblbuf_t, 396	MHAJack::client_t, 556
get_input_signal_dimension	get_name
fw t, 316	MHAOvlFilter::scale_var_t, 591
get_interface	get_nbands
MHA_TCP::Server, 441	dc::dc_t, 238
get_iofun	get_nelements
DynComp::gaintable_t, 284	MHASignal::matrix_t, 741
get_irs	get_nreals
MHAFilter::fftfilterbank_t, 489	MHASignal::matrix_t, 744
get_last_name	get_origname
MHAParser::mhapluginloader_t, 642	PluginLoader::config_file_splitter_t, 826
get_last_output	get_os_event
MHAFilter::o1flt_lowpass_t, 509	MHA_TCP::Timeout_Event, 450
get_latex_doc	MHA_TCP::Wakeup_Event, 453
latex_doc_t, 356	get_outer_size
get_len_A	mha dblbuf t, 396
MHAFilter::filter_t, 493	get output channels
get_len_B	mha dblbuf t, 396
MHAFilter::filter_t, 493	get_output_fifo_fill_count
get_length	mha_dblbuf_t, 396
MHASignal::uint_vector_t, 766	get_output_fifo_space
get_level	mha_dblbuf_t, 396
addsndfile::level_adapt_t, 173	get_parser_tab
fader_wave::level_adapt_t, 305	latex_doc_t, 356
get_level_in_db	get_parser_var
dc::dc t, 238	latex_doc_t, 356
get_level_in_db_adjusted	get_parserstate
dc::dc_t, 238	fw_t, 317
get_libname	get_paths
PluginLoader::config_file_splitter_t, 826	pluginbrowser_t, 823
get_local_address	get_peer_address
io_tcp_parser_t, 344	MHA_TCP::Connection, 433
get_local_port	get_peer_port
9000ai_poi.t	90p00p01.

MHA_TCP::Connection, 433 get_physical_input_ports MHAIOJack::io_jack_t, 535 MHAIOJackdb::io_jack_t, 539	MHAKernel::algo_comm_class_t, 563 get_var_float algo_comm_t, 193 Communication between algorithms, 29
get_physical_output_ports MHAIOJack::io_jack_t, 535 MHAIOJackdb::io_jack_t, 540	MHAKernel::algo_comm_class_t, 563 get_var_int algo_comm_t, 193
get_plugins pluginbrowser_t, 823	Communication between algorithms, 29 MHAKernel::algo_comm_class_t, 563
get_port MHA_TCP::Server, 441	get_var_spectrum Communication between algorithms, 28
get_port_capture_latency MHAJack, 96	get_var_vfloat Communication between algorithms, 30
get_port_capture_latency_int MHAJack, 96	get_var_waveform Communication between algorithms, 29
get_port_playback_latency MHAJack, 97	get_vF DynComp::gaintable_t, 284
get_port_playback_latency_int MHAJack, 97	get_vL DynComp::gaintable_t, 284
get_ports MHAJack::client_t, 556	get_weights MHAFilter::complex_bandpass_t, 480
get_precision MHAParser, 106	MHAFilter::gamma_flt_t, 496 get_window
get_process_spec plug_t, 821	MHAParser::window_t, 675, 676 get_window_data
get_process_wave plug_t, 821 get_rdata	windowselector_t, 901 get_write_event MHA_TCP::Connection, 433
MHASignal::matrix_t, 745 get_read_event	get_xlimits MHATableLookup::xy_table_t, 788
MHA_TCP::Connection, 433 get_resynthesis_gain	get_xruns MHAJack::client_t, 556
MHAFilter::gamma_flt_t, 496 get_server_port_open	get_xruns_reset MHAJack::client_t, 556
io_tcp_parser_t, 345 get_short_name	getcipd coherence, 81
MHAJack::port_t, 561 get_signal	getdata MHASignal::uint vector t, 766
MHAPlugin_Split::domain_handler_t, 695 get_size	getfullname PluginLoader::mhapluginloader_t, 832
MHASignal::waveform_t, 777 get_srate	getmodulename dynamiclib_t, 274
MHAJack::client_t, 556 get_type	Getmsg mha_error.hh, 939
MHAParser::window_t, 676 get_value	getname dynamiclib_t, 274
MHAParser::keyword_list_t, 626 get_values	MHA_AC::ac2matrix_t, 376 getusername
AuditoryProfile::fmap_t, 203 get_var	MHA_AC::ac2matrix_t, 377 getvar
algo_comm_t, 193	acmon::ac_monitor_t, 145

MHA_AC::ac2matrix_helper_t, 374 GF	hanning_ramps_t, 323 len_a, 323
MHAFilter::gamma_flt_t, 496	len_b, 323
groupdelay_t	operator(), 323
MHASignal::schroeder_t, 753	ramp_a, 323
gt	ramp_b, 323
dc::dc_t, 238	hanning_t
gtdata	MHAWindow::hanning_t, 796
dc::dc_vars_t, 240	hardlimit
gtmin	softclipper_t, 868
dc::dc_vars_t, 240	softclipper_variables_t, 870
gtstep	has_been_modified
dc::dc_vars_t, 240	dc_simple::dc_if_t, 247
	has_inner_error
h	analysepath_t, 200
dynamiclib_t, 274	has_key
MHASignal::hilbert_t, 732	MHAKernel::comm_var_map_t, 565
H_ERRNO	has_parser
MHA_TCP, 89	PluginLoader::mhapluginloader_t, 832
HELP_TEXT	has_process
mhamain.cpp, 998	PluginLoader::mhapluginloader_t, 832
HINSTANCE	header
mha_plugin.hh, 957	io_tcp_sound_t, 350
HSTRERROR	help
MHA_TCP, 88	MHAParser::base_t, 600
HTL Auditory Profile upgrage types t 206	hifftwin
AuditoryProfile::parser_t::ear_t, 206	doasvm_feature_extraction_config, 268
AuditoryProfile::profile_t::ear_t, 209	hifftwin_sum
hamming MHAWindow, 123	doasym_feature_extraction_config, 268
hamming_t	high_side_flat
MHAWindow::hamming_t, 795	MHAOvlFilter::band_descriptor_t, 571
handle	hilbert
algo_comm_t, 190	MHASignal::hilbert_fftw_t, 731
hann	hilbert_fftw_t
hann.cpp, 922	MHASignal::hilbert_fftw_t, 731
hann.h, 923	hilbert_shifter_t, 324
MHAOvlFilter::ShapeFun, 103	~hilbert_shifter_t, 325
hann.cpp, 922	analytic, 325
hann, 922	dphi, 325
hannf, 922	frameshift, 325
PI, 922	fullspec, 325
hann.h, 922	hilbert_shifter_t, 325
hann, 923	kmax, 325
hannf, 923	kmin, 325
hannf	mhafft, 325
hann.cpp, 922	mixw_ref, 325
hann.h, 923	mixw_shift, 325
hanning	phi, 325
MHAWindow, 123	plan_spec2analytic, 325
hanning_ramps_t, 322	process, 325
~hanning_ramps_t, 323	shifted, 325

hilbert_t	timoSmooth.cpp, 1012
MHASignal::hilbert_t, 732	INSERT_VAR
host_port_to_sock_addr	timoSmooth.cpp, 1012
mha_tcp.cpp, 974	INVALID_SOCKET
hostApi	mha_tcp.cpp, 974
MHAIOPortAudio::device_info_t, 543	INVALID THREAD PRIORITY
Hs	MHAPlugin_Split, 113
MHAFilter::fftfilterbank t, 489	IO ERROR JACK
hton	mhajack.h, 997
io_tcp_sound_t, 351	IO_ERROR_MHAJACKLIB
hw	mhajack.h, 997
MHAFilter::fftfilterbank_t, 489	IODestroy
hwin	MHAIOFile.cpp, 979, 980
doasvm_feature_extraction_config, 268	MHAIOJack.cpp, 982, 983
hz2bark	MHAIOJackdb.cpp, 984, 985
MHAOvlFilter::FreqScaleFun, 101	• • •
hz2bark_analytic	MHAIOPartAudia and 000, 001
MHAOvlFilter::FreqScaleFun, 101	MHAIOPortAudio.cpp, 990, 991
hz2bark t	MHAIOTCP.cpp, 993, 994
MHAOvlFilter::barkscale::hz2bark t, 573	IODestroy_cb
hz2erb	io_lib_t, 335
MHAOvlFilter::FreqScaleFun, 101	IODestroy_t
hz2erb_glasberg1990	mha_io_ifc.h, 946
MHAOvlFilter::FreqScaleFun, 101	IOInit
hz2hz	MHAIOFile.cpp, 979
MHAOvlFilter::FreqScaleFun, 100	MHAIOJack.cpp, 981, 982
·	MHAIOJackdb.cpp, 984, 985
speechnoise.cpp, 1007	MHAIOParser.cpp, 987
hz2khz	MHAIOPortAudio.cpp, 990
MHAOvlFilter::FreqScaleFun, 100	MHAIOTCP.cpp, 993, 994
hz2log	IOInit_cb
MHAOvlFilter::FreqScaleFun, 101	io_lib_t, 335
hz2octave	IOInit_t
MHAOvlFilter::FreqScaleFun, 100	mha_io_ifc.h, 946
hz2third_octave	IOPrepare
MHAOvlFilter::FreqScaleFun, 100	MHAIOFile.cpp, 979
hz2unit	MHAIOJack.cpp, 982
MHAOvlFilter::scale_var_t, 591	MHAIOJackdb.cpp, 984, 985
i	MHAIOParser.cpp, 987
is top sound triflest union 252	MHAIOPortAudio.cpp, 990
io_tcp_sound_t::float_union, 352	MHAIOTCP.cpp, 993, 994
INSERT_PATCH	IOPrepare_cb
acConcat_wave.cpp, 904	io_lib_t, 335
acPooling_wave.cpp, 905	IOPrepare_t
acSteer.cpp, 906	• —
acTransform_wave.cpp, 907	mha_io_ifc.h, 946
doasvm_classification.cpp, 916	IOProcessEvent_inner
doasym_feature_extraction.cpp, 916	MHAIOJackdb::io_jack_t, 539
lpc.cpp, 924	IOProcessEvent_t
lpc_bl_predictor.cpp, 925	mha_io_ifc.h, 946
lpc_burg-lattice.cpp, 925	IORelease
prediction_error.cpp, 1003	MHAIOFile.cpp, 979, 980
steerbf.cpp, 1010	MHAIOJack.cpp, 982

MHAIOJackdb.cpp, 984, 985	MHAIOJackdb.cpp, 984, 985
MHAIOParser.cpp, 987, 988	MHAIOParser.cpp, 987, 988
MHAIOPortAudio.cpp, 990, 991	MHAIOPortAudio.cpp, 990, 991
MHAIOTCP.cpp, 993, 994	MHAIOTCP.cpp, 993, 994
IORelease cb	IOStrError cb
io_lib_t, 335	io_lib_t, 335
IORelease t	IOStrError t
mha io ifc.h, 946	mha io ifc.h, 946
IOSetVar	id
MHAIOFile.cpp, 979, 980	mha channel info t, 392
MHAIOJack.cpp, 982	id_str
MHAIOJackdb.cpp, 984, 985	MHAParser::base_t, 600
MHAIOParser.cpp, 987, 988	id_string
MHAIOPortAudio.cpp, 990, 991	MHAParser::parser_t, 648
MHAIOTCP.cpp, 993, 994	• —
• • • • • • • • • • • • • • • • • • • •	identity
IOSetVar_cb	MHASignal::schroeder_t, 755
io_lib_t, 335	identity.cpp, 923
IOSetVar_t	identity_t, 326
mha_io_ifc.h, 946	identity_t, 326
IOStart	prepare, 327
MHAIOFile.cpp, 979, 980	process, 326, 327
MHAIOJack.cpp, 982	release, 327
MHAIOJackdb.cpp, 984, 985	idstr
MHAIOParser.cpp, 987	mha_channel_info_t, 392
MHAIOPortAudio.cpp, 990, 991	iface
MHAIOTCP.cpp, 993, 994	MHA_TCP::Server, 442
IOStart_cb	ifft
io_lib_t, 335	doasvm_feature_extraction_config, 268
IOStart_t	ifftshift
mha_io_ifc.h, 946	ifftshift.cpp, 923
IOStartedEvent_t	ifftshift.h, 923
mha_io_ifc.h, 946	ifftshift.cpp, 923
IOStop	ifftshift, 923
MHAIOFile.cpp, 979, 980	ifftshift.h, 923
MHAIOJack.cpp, 982	ifftshift, 923
MHAIOJackdb.cpp, 984, 985	ignore
MHAIOParser.cpp, 987, 988	MHA_TCP::Event_Watcher, 438
MHAIOPortAudio.cpp, 990, 991	ignored by
MHAIOTCP.cpp, 993, 994	MHA_TCP::Wakeup_Event, 453
IOStop_cb	iir_filter_state_t
io_lib_t, 335	MHAFilter::iir filter state t, 498
IOStop_t	iir filter t
mha_io_ifc.h, 946	MHAFilter::iir_filter_t, 499
IOStoppedEvent	iir_ord1_real_t
MHAJack::client_avg_t, 549	MHAFilter::iir_ord1_real_t, 502
MHAJack::client_noncont_t, 551	
— — — :	iirfilter.cpp, 923
IOStoppedEvent_t	iirfilter_t, 327
mha_io_ifc.h, 946	iirfilter_t, 328
IOStrError	prepare_, 328
MHAIOFile.cpp, 979, 980	process, 328
MHAIOJack.cpp, 982, 983	release_, 328

ilen	inner_error
addsndfile::level_adapt_t, 173	analysepath_t, 200
fader_wave::level_adapt_t, 305	mha_dblbuf_t, 399
im	inner_fragsize
mha_complex_t, 393	MHAPlugin_Resampling::resampling_t,
imag	691
acsave::mat4head_t, 158	inner_in
fftfilterbank::fftfb_plug_t, 310	MHASignal::doublebuffer_t, 727
MHASignal::matrix t, 742-744	inner_input
imagfb	analysepath_t, 200
MHAOvlFilter::overlap_save_filterbank_	inner out
analytic_t, 586	MHASignal::doublebuffer_t, 727
impulse_response	inner_out_domain
MHAFilter::polyphase_resampling_t, 522	analysepath_t, 200
MHAFilter::transfer_function_t, 531	inner_process
in_buf	db_t, 234
wave2spec_t, 896	MHASignal::doublebuffer_t, 726
in_cfg	inner_process_wave2spec
timo_params, 882	analysepath_t, 200
in_spec	inner_process_wave2wave
doasym_feature_extraction_config, 268	analysepath_t, 200
shadowfilter_end::cfg_t, 857	inner_signal
in_spec_copy	MHAPlugin_Resampling::resampling_t,
shadowfilter_begin::cfg_t, 854	691
inbuf	inner_size
MHA_TCP::Connection, 436	mha_dblbuf_t, 398
inch	inner_srate
MHAJack::client_t, 558	MHAPlugin_Resampling::resampling_t,
increase_condition	691
mha_fifo_posix_threads_t, 413	input
increment	io_parser_t, 338
mha_fifo_posix_threads_t, 412	MHAJack::port_t, 559
mha_fifo_thread_platform_t, 420	MHASignal::loop_wavefragment_t, 734
index	mha dblbuf t, 397
MHAParser::keyword list t, 627	input_cfg
index t	MHAPlugin::plugin_t, 686
MHAFilter::partitioned_convolution_t↔	input_cfg_
::index_t, 517, 518	MHAPlugin::plugin_t, 687
inhib_gain	input_channels
dc::dc_t, 239	adm_if_t, 186
Init_mha_ruby	mha_dblbuf_t, 398
mha_ruby.cpp, 959	input_domain
init_peer_data	PluginLoader::mhapluginloader_t, 832
MHA_TCP::Connection, 432	input_fifo
initialize	mha_dblbuf_t, 398
MHA_TCP::Server, 441	input_level
inner2outer_resampling	dc::dc_vars_t, 241
MHAPlugin_Resampling::resampling_t,	input_portnames
691	MHAJack::client_t, 558
inner_ac_copy	input_signal_spec
analysepath_t, 200	MHAFilter::partitioned_convolution_t, 516
anary 50 parin_t, 200	with a mortipartition of _oon void tion_t, 510

input_signal_wave	fw_t, 317
MHAFilter::partitioned_convolution_t, 515	int_mon_t
input_to_process	MHAParser::int_mon_t, 621
analysepath_t, 200	int_t
inputPow	MHA_AC::int_t, 383
noisePowProposedScale::noisePow←	MHAParser::int_t, 623
Proposed, 813	integrate
inputSpec	Vector and matrix processing toolbox, 47
noisePowProposedScale::noisePow←	intensity
Proposed, 813	mha_signal.cpp, 962
inputchannels	interface t
MHAFilter::fftfilterbank_t, 489	delay::interface_t, 256
insert	multibandcompressor::interface_t, 803
acPooling_wave_config, 152	noisePowProposedScale::interface_t, 811
acSteer_config, 164	route::interface_t, 845
coherence::cohflt t, 222	interleaved
fftfilterbank::fftfb_plug_t, 310	combc_if_t, 226
lpc_config, 369	interleaved
MHA_AC::ac2matrix_t, 377	combc_t, 227
MHA_AC::acspace2matrix_t, 380	intern_level
MHA_AC::spectrum_t, 385	MHASignal::loop_wavefragment_t, 736
MHA_AC::stat_t, 387	internal_fir
MHA_AC::waveform_t, 389	MHAFilter::smoothspec_t, 527
MHAOvIFilter::fftfb_ac_info_t, 573	internal_start
multibandcompressor::fftfb_plug_t, 801	MHAJack::client_t, 557
noisePowProposedScale::noisePow↔	internal_stop
Proposed, 812	MHAJack::client_t, 557
prediction_error_config, 839	interp
rmslevel_t, 843	MHATableLookup::linear_table_t, 781
rt_nlms_t, 848	MHATableLookup::table_t, 784
timo_AC, 880	
insert_item	MHATableLookup::xy_table_t, 786 interp1
-	•
MHAParser::parser_t, 646	DynComp, 83
insert_items	interp2
windowselector_t, 901	DynComp, 84
insert_member	inv_scale
mha_parser.hh, 955	MHAOvlFilter::FreqScaleFun, 101
insert_var	invalidate_window_data
algo_comm_t, 190	windowselector_t, 902
MHAKernel::algo_comm_class_t, 563	invert
insert_var_float	coherence::vars_t, 224
algo_comm_t, 191	inwave
MHAKernel::algo_comm_class_t, 563	lpc_config, 370
insert_var_int	io
algo_comm_t, 191	MHAJack, 96
MHAKernel::algo_comm_class_t, 563	MHAJack::client_avg_t, 548
inspect	MHAJack::client_noncont_t, 551
MHAFilter::complex_bandpass_t, 481	io_err
MHAFilter::gamma_flt_t, 496	io_tcp_fwcb_t, 342
MHASignal::delay_t, 723	io_error
inst_name	fw_t, 318

io_file_t, 328	io_lib_t, 334
\sim io_file_t, 330	lib_data, 335
b_prepared, 332	lib_err, 335
filename_input, 331	lib handle, 335
filename_output, 331	lib_str_error, 335
fragsize, 331	prepare, 334
io_file_t, 330	release, 335
length, 331	start, 334
nchannels_file_in, 331	stop, 334
nchannels_in, 331	test_error, 335
nchannels_out, 331	- ' '
- :	io_name
output_sample_format, 331	fw_t, 317
prepare, 330	io_parser_t, 336
proc_event, 331	~io_parser_t, 337
proc_handle, 331	b_fw_started, 338
release, 330	b_prepared, 338
s_file_in, 332	b_starting, 338
s_in, 331	b_stopped, 338
s_out, 332	fragsize, 338
samplerate, 331	input, 338
setlock, 330	io_parser_t, 337
sf_in, 332	nchannels_in, 338
sf_out, 332	nchannels_out, 338
sfinf_in, 332	output, 338
sfinf_out, 332	patchbay, 338
start, 330	prepare, 337
start_event, 331	proc_event, 338
start_handle, 331	proc_handle, 338
startsample, 331	process_frame, 338
•	release, 338
stop, 330	•
stop_event, 331	s_in, 338
stop_handle, 331	s_out, 338
stopped, 330	start, 337
strict_channel_match, 331	start_event, 338
strict_srate_match, 331	start_handle, 338
total_read, 332	started, 338
io_jack_t	stop, 338
MHAIOJack::io_jack_t, 534	stop_event, 338
MHAIOJackdb::io_jack_t, 539	stop_handle, 338
io_lib	stopped, 338
fw_t, 318	io_portaudio_t
io_lib_t, 332	MHAIOPortAudio::io_portaudio_t, 545
~io_lib_t, 334	io_tcp_fwcb_t, 339
IODestroy_cb, 335	∼io_tcp_fwcb_t, 340
IOInit_cb, 335	io_err, 342
IOPrepare_cb, 335	io_tcp_fwcb_t, 340
IORelease_cb, 335	proc_err, 342
IOSetVar_cb, 335	proc_event, 341
IOStart_cb, 335	proc_handle, 341
IOStop_cb, 335	process, 340
IOStrError_cb, 335	set_errnos, 340

start, 340	notify_release, 355
start_event, 341	notify_start, 355
start_handle, 342	notify_stop, 355
stop, 341	parse, 355
stop_event, 341	parser, 355
stop_handle, 342	prepare, 354
io_tcp_parser_t, 342	release, 354
~io_tcp_parser_t, 344	server, 355
connected, 347	sound, 355
debug, 347	start, 354
debug_file, 348	stop, 354
debug_filename, 348	thread, 355
get_connected, 345	iob
get_local_address, 344	MHAJack::port_t, 561
get_local_port, 344	irslen
get_server_port_open, 345	frequency_translator_t, 312
io_tcp_parser_t, 344	irslen inner2outer
local_address, 347	MHAPlugin_Resampling::resampling_if←
-	
local_port, 347	_t, 689
peer_address, 347	irslen_outer2inner
peer_port, 348	MHAPlugin_Resampling::resampling_if
server_port_open, 347	_t, 689
set_connected, 346	irswnd
set_local_port, 344	MHAOvlFilter::overlap_save_filterbank_
set_new_peer, 346	t::vars_t, 589
set_server_port_open, 345	smoothgains_bridge::overlapadd_if_←
io_tcp_sound_t, 348	t, 864
∼io_tcp_sound_t, 349	is_complex
check_sound_data_type, 350	MHA_AC::ac2matrix_helper_t, 375
chunkbytes_in, 350	mha_audio_descriptor_t, 390
fragsize, 351	is_playback_active
header, 350	MHASignal::loop_wavefragment_t, 736
hton, 351	is_prepared
io_tcp_sound_t, 349	adm_if_t, 186
ntoh, 350	MHAPlugin::plugin_t, 686
num_inchannels, 351	PluginLoader::mhapluginloader_t, 833
num_outchannels, 352	is_prepared_
prepare, 350	MHAPlugin::plugin_t, 687
release, 350	is_same_size
s_in, 352	MHASignal::matrix_t, 741
samplerate, 351	is_var
io_tcp_sound_t::float_union, 352	algo_comm_t, 192
c, 352	MHAKernel::algo_comm_class_t, 563
f, 352	iscomplex
i, 352	MHASignal::matrix_t, 741
io_tcp_t, 353	isempty
~io_tcp_t, 354	AuditoryProfile::fmap_t, 203
accept_loop, 354	gaintable.cpp, 921
connection_loop, 354	MHAFilter::transfer_function_t, 531
fwcb, 355	isval
io_tcp_t, 354	MHAParser::kw_t, 629
— I — ' '	

iter	L
prediction_error_config, 840	AuditoryProfile::parser_t, 205
iterator	AuditoryProfile::profile_t, 209
MHA_TCP::Event_Watcher, 438	I min
	dc::wb_inhib_cfg_t, 243
jack_error_handler	dc::wideband_inhib_vars_t, 244
mhajack.cpp, 995	I new
jack_proc_cb	addsndfile::level_adapt_t, 173
MHAJack::client_t, 557	fader wave::level adapt t, 305
jack_xrun_cb	I_old
MHAJack::client_t, 557	addsndfile::level_adapt_t, 173
jc	fader_wave::level_adapt_t, 305
MHAJack::client_t, 558	LEVEL
MHAJack::port_t, 561	dc_simple, 82
jstate_prev	LPSCALE
MHAJack::client_t, 558	
	timoconfig.cpp, 1011
k_inner	LTASS_combined
MHASignal::doublebuffer_t, 727	speechnoise_t, 875
k_nyquist	LTASS_female
dc::dc_t, 239	speechnoise_t, 875
k_outer	LTASS_male
MHASignal::doublebuffer_t, 727	speechnoise_t, 875
kappa	lambda
lpc_burglattice_config, 368	lpc_burglattice, 366
kappa_block	lpc_burglattice_config, 368
lpc_burglattice_config, 368	lambda_ceps
kappa_const	timoConfig, 886
timo_params, 883	lambda_ceps_AC
timoSmooth, 889	timo_AC, 881
keyword_list_t	lambda_ceps_prev
MHAParser::keyword_list_t, 625	timoConfig, 886
kick_condition	lambda_ml_AC
MHAPlugin_Split::posix_threads_t, 700	timo_AC, 880
kick_thread	lambda_ml_ceps
MHAPlugin_Split::dummy_threads_t, 697	timoConfig, 886
MHAPlugin_Split::posix_threads_t, 700	lambda_ml_ceps_AC
MHAPlugin_Split::thread_platform_t, 713	timo_AC, 880
kicked	lambda_ml_full
MHAPlugin_Split::posix_threads_t, 701	timoConfig, 886
km	lambda_ml_smooth
lpc_bl_predictor_config, 364	timoConfig, 886
kmax	lambda_ml_smooth_AC
hilbert_shifter_t, 325	timo_AC, 880
kmin	lambda_smoothing_power
hilbert_shifter_t, 325	nlms_t, 807
kth_smallest	lambda_spec
	timoConfig, 886
kw_index2type	lambda_spec_AC
transducers.cpp, 1013	timo_AC, <mark>881</mark>
kw_t	lambda_thresh
	timo_params, 883

timoSmooth, 889	rmslevel_t, 843
last_complex_bin	level adapt t
MHASignal::subsample_delay_t, 763	addsndfile::level_adapt_t, 172
last_config	fader_wave::level_adapt_t, 304
MHAPlugin::config_t, 681	level adaptor
last_errormsg	addsndfile, 78
MHAParser::parser_t, 649	fader_wave, 85
• —	level db
last_jack_err mhajack.cpp, 995	rmslevel t, 843
last_jack_err_msg	level_in_db
mhajack.cpp, 995	dc::dc_t, 239
mhajack.cpp, 993 mhajack.h, 997	level_in_db_adjusted
	·
last_name MHAParaer::mhaplugiplander_t_642	dc::dc_t, 239
MHAParser::mhapluginloader_t, 642	level_mode_t
latex_doc_t, 355	MHASignal::loop_wavefragment_t, 734
ac, 357	level_mon
get_ac, 356	droptect_t, 271
get_categories, 356	level_smoother_t
get_latex_doc, 356	dc_simple::level_smoother_t, 254
get_main_category, 356	level_spec
get_parser_tab, 356	dc_simple::level_smoother_t, 254
get_parser_var, 356	level_wave
latex_doc_t, 356	dc_simple::level_smoother_t, 254
latex_plugname, 357	levelmode
loader, 357	addsndfile::addsndfile_if_t, 171
parsername, 356	Levinson2
plugin_macro, 357	lpc.cpp, 924
plugname, 357	lib_data
strdom, 356	io_lib_t, 335
latex_plugname	PluginLoader::mhapluginloader_t, 833
latex_doc_t, 357	lib_err
len	io_lib_t, 335
MHA_AC::acspace2matrix_t, 380	PluginLoader::mhapluginloader_t, 833
MHAFilter::filter_t, 494	lib_handle
MHATableLookup::linear_table_t, 783	io_lib_t, 335
len_A	PluginLoader::mhapluginloader_t, 833
MHAFilter::filter_t, 494	lib_str_error
len_a	io_lib_t, 335
hanning_ramps_t, 323	libdata
len_B	analysepath_t, 200
MHAFilter::filter_t, 494	MHAParser::c_ifc_parser_t, 608
len_b	liberr
hanning_ramps_t, 323	MHAParser::c_ifc_parser_t, 608
length	libname
io_file_t, 331	analysispath_if_t, 202
MHASignal::uint_vector_t, 766	PluginLoader::config_file_splitter_t, 826
lev	library_paths
noise_t, 809	pluginbrowser_t, 824
sine_t, 862	like_ratio
level	acPooling_wave_config, 153
addsndfile::addsndfile_if_t, 171	like_ratio_name

acPooling_wave, 151	local_remove_var
limit	MHAKernel::algo_comm_class_t, 564
coherence::cohflt_t, 222	locate
coherence::vars_t, 224	MHAIOJackdb::io_jack_t, 541
MHASignal, 117	locate end
MHASignal::quantizer_t, 748	MHASignal::loop_wavefragment_t, 736
MHASignal::waveform_t, 775	lock_channels
limiter	fw_vars_t, 319
dc_simple::dc_t, 249	lock_srate_fragsize
limiter threshold	fw vars t, 319
dc_simple::dc_t, 249	locked
dc_simple::dc_vars_t, 252	MHAParser::variable_t, 657
lin2db	log_down
Vector and matrix processing toolbox, 42	MHASignal::schroeder_t, 755
line_t	log_lambda_spec
_	- ·
dc_simple::dc_t::line_t, 250	timoConfig, 886
linear ANDA Cullibrary Shana Fun 100	log_lambda_spec_AC
MHAOvlFilter::ShapeFun, 102	timo_AC, 881
softclipper_t, 868	log_up
softclipper_variables_t, 870	MHASignal::schroeder_t, 755
linear_table_t	logGLRFact
MHATableLookup::linear_table_t, 781	noisePowProposedScale::noisePow←
Linearphase_FIR	Proposed, 813
ADM::Linearphase_FIR, 182	timoConfig, 886
list_dir	logfile
mha_os.cpp, 947	mhaserver_t, 718
mha_os.h, 949	logstring
load_io_lib	mhaserver_t, 717
fw_t, 316	longmsg
load_plug	MHA_Error, 408
MHAParser::mhapluginloader_t, 642	lookup
load_proc_lib	MHATableLookup::linear_table_t, 781
fw_t, 316	MHATableLookup::table_t, 784
loader	MHATableLookup::xy table t, 786
latex_doc_t, 357	loop
loadlib	addsndfile::addsndfile_if_t, 171
analysispath_if_t, 202	loop_wavefragment_t
local_address	MHASignal::loop_wavefragment_t, 734
io_tcp_parser_t, 347	low_incl
local_get_entries	MHAParser::range_var_t, 651
MHAKernel::algo_comm_class_t, 564	low_limit
local_get_var	MHAParser::range_var_t, 651
MHAKernel::algo_comm_class_t, 564	low_side_flat
local_insert_var	MHAOvlFilter::band_descriptor_t, 571
MHAKernel::algo_comm_class_t, 564	
y — — — — :	low_thresh
local_is_var	acPooling_wave_config, 153
MHAKernel::algo_comm_class_t, 564	lower_threshold
local_port	acPooling_wave, 151
io_tcp_parser_t, 347	lp
local_remove_ref	DynComp::dc_afterburn_rt_t, 276
MHAKernel::algo_comm_class_t, 564	lp1i

coherence::cohflt_t, 222	backward, 363
lp1ltg	f_est, 363
coherence::cohflt_t, 223	forward, 363
lp1r	km, 364
coherence::cohflt_t, 222	lpc_bl_predictor_config, 363
lp_coeffs	lpc_order, 363
adm_rtconfig_t, 189	name_b, 364
lp_order	name_f, 363
adm_if_t, 186	name_km, 363
lpc, 357	process, 363
~lpc, 358	s_b, 364
algo_name, 359	s_f, 364
comp_each_iter, 359	lpc_buffer_size
lpc, 358	lpc, 359
lpc_buffer_size, 359	lpc_config, 370
lpc_order, 359	lpc_burg-lattice.cpp, 925
norm, 359	INSERT_PATCH, 925
patchbay, 359	PATCH_VAR, 925
prepare, 358	lpc_burg-lattice.h, 925
process, 358	EPSILON, 926
release, 359	lpc_burglattice, 364
shift, 359	\sim lpc_burglattice, 365
update_cfg, 359	lambda, 366
lpc.cpp, 924	lpc_burglattice, 365
INSERT_PATCH, 924	lpc_order, 366
Levinson2, 924	name_b, 366
PATCH_VAR, 924	name_f, 366
lpc.h, 924	name_kappa, <mark>366</mark>
lpc_bl_predictor, 360	patchbay, 366
~lpc_bl_predictor, 361	prepare, 366
lpc_bl_predictor, 361	process, 366
lpc order, 362	release, 366
name_b, 362	update_cfg, 366
name_f, 362	lpc_burglattice_config, 367
name_kappa, 362	~lpc_burglattice_config, 367
name_lpc_b, 362	ac, 367
name_lpc_f, 362	backward, 368
patchbay, 362	dm, 368
prepare, 361	forward, 367
process, 361	kappa, 368
release, 361	kappa_block, 368
update_cfg, 362	lambda, 368
lpc_bl_predictor.cpp, 924	
	lpc_burglattice_config, 367
INSERT_PATCH, 925	lpc_order, 368
PATCH_VAR, 925	name_b, 368
lpc_bl_predictor.h, 925	name_f, 368
EPSILON, 925	nm, 368
lpc_bl_predictor_config, 362	process, 367
~lpc_bl_predictor_config, 363	s_b, 368
ac, 363	s_f, 368
b_est, 363	lpc_config, 368

~lpc_config, 369	ADM::Delay, 181
A, 370	m_lp_bf
comp_each_iter, 369	ADM::ADM, 179
comp iter, 370	m_lp_result
corr_out, 370	ADM::ADM, 179
insert, 369	m_mu_beta
inwave, 370	ADM::ADM, 179
lpc_buffer_size, 370	m norm
lpc_config, 369	ADM::Delay, 181
lpc_out, 370	m_now
N, 370	ADM::Linearphase_FIR, 183
norm, 369	m_now_in
order, 369	ADM::Delay, 181
process, 369	m order
R, 370	ADM::Linearphase FIR, 183
sample, 370	m_output
shift, 369	ADM::Linearphase FIR, 183
lpc_order	m_powerfilter_coeff
lpc, 359	ADM::ADM, 179
lpc_bl_predictor, 362	m_powerfilter_norm
lpc_bl_predictor_config, 363	ADM::ADM, 179
lpc_burglattice, 366	m_powerfilter_state
lpc_burglattice_config, 368	ADM::ADM, 179
prediction_error, 838	m_state
lpc_out	ADM::Delay, 181
lpc_config, 370	MAX LINE LENGTH
Itgcomp	mhamain.cpp, 998
coherence::vars_t, 224	MAX TCP PORT STR
Itgtau	MHAIOTCP.cpp, 993
coherence::vars_t, 224	MAX TCP PORT
Ival	MHAIOTCP.cpp, 993
MHAParser::expression_t, 615	MAX USER ERR
m	MHAIOFile.cpp, 979
m dc_simple::dc_t::line_t, 250	MHAIOJack.cpp, 981
matrixmixer::cfg_t, 371	MHAIOJackdb.cpp, 984
M_PI	MHAIOParser.cpp, 987
mha_defs.h, 935	MHAIOPortAudio.cpp, 990
mha_signal.hh, 971	MHAIOTCP.cpp, 993
m_alphas	mhajack.h, 997
ADM::Linearphase_FIR, 183	MAX
m beta	mha_defs.h, 935
ADM::ADM, 179	MHA_AC::ac2matrix_helper_t, 374
m_coeff	ac, 375
ADM::Delay, 181	ac2matrix_helper_t, 374
m decomb	acvar, 375
ADM::ADM, 179	getvar, 374
m_delay_back	is_complex, 375
ADM::ADM, 179	name, 375
m_delay_front	size, 375
ADM::ADM, 179	username, 375
m_fullsamples	MHA_AC::ac2matrix_t, 375
•	<u> </u>

ac2matrix_t, 376	mha.h, 930
getname, 376	MHA_AC_DOUBLE
getusername, 377	mha.h, 930
insert, 377	MHA AC FLOAT
update, 376	mha.h, 930
MHA_AC::acspace2matrix_t, 377	MHA_AC_INT
~acspace2matrix_t, 379	mha.h, 930
acspace2matrix_t, 378	MHA AC MHACOMPLEX
data, 380	mha.h, 930
frame, 380	MHA_AC_MHAREAL
frameno, 380	mha.h, 930
insert, 380	MHA AC UNKNOWN
len, 380	mha.h, 930
operator=, 379	MHA_AC_USER
operator[], 379	mha.h, 930
size, 380	MHA_AC_VEC_FLOAT
update, 380	mha.h, 930
MHA_AC::double_t, 380	MHA_AC, 85
~double_t, 381	MHA_CALLBACK_TEST_PREFIX
ac, 381	mha.h, 929
data, 381	MHA CALLBACK TEST
data, 381 double t, 381	mha.h, 929
MHA_AC::float_t, 382	MHA_DOMAIN_MAX
— — ·	mha.h, 930
∼float_t, 382	·
ac, 382	MHA_DOMAIN_UNKNOWN
data, 382	mha.h, 930
float_t, 382	MHA_EAR_LEFT
MHA_AC::int_t, 383	mha_defs.h, 935
∼int_t, 383	MHA_EAR_MAX
ac, 383	mha_defs.h, 935
data, 383	MHA_EAR_RIGHT
int_t, 383	mha_defs.h, 935
MHA_AC::spectrum_t, 384	MHA_ERR_INVALID_HANDLE
~spectrum_t, 385	mha_errno.h, 937
ac, 386	MHA_ERR_NULL
insert, 385	mha_errno.h, 937
name, 386	MHA_ERR_SUCCESS
spectrum_t, 385	mha_errno.h, 937
MHA_AC::stat_t, 386	MHA_ERR_UNKNOWN
insert, 387	mha_errno.h, 937
mean, 387	MHA_ERR_USER
stat_t, 387	mha_errno.h, 937
std, 387	MHA_ERR_VARFMT
update, 387	mha_errno.h, 937
MHA_AC::waveform_t, 387	MHA_ERR_VARRANGE
\sim waveform_t, 388	mha_errno.h, 937
ac, 389	MHA_Error, 406
insert, 389	\sim MHA_Error, 407
name, 389	get_longmsg, 407
waveform_t, 388	get_msg, 407
MHA_AC_CHAR	longmsg, 408

MHA_Error, 407	inbuf, 436
msg, 408	init_peer_data, 432
operator=, 407	needs_write, 435
what, 407	outbuf, 436
MHA_ErrorMsg	peer_addr, 436
Error handling in the openMHA, 31	read_bytes, 435
MHA_ErrorMsg2	read_event, 436
MHAIOTCP.cpp, 993	read_line, 434
MHA_ErrorMsg3	sysread, 432
MHAIOTCP.cpp, 993	syswrite, 433
MHA_ID_MATRIX	try_write, 435
mha_signal.cpp, 962	write, 435
MHA_ID_UINT_VECTOR	write_event, 436
mha_signal.cpp, 962	MHA TCP::Event Watcher, 437
MHA RELEASE VERSION STRING	\sim Event_Watcher, 438
mha.h, 930	Events, 438
MHA_RESOLVE_CHECKED	events, 438
mha_os.h, 949	ignore, 438
MHA_RESOLVE	iterator, 438
mha_os.h, 949	observe, 438
MHA SPECTRUM	wait, 438
mha.h, 930	MHA_TCP::OS_EVENT_TYPE, 439
MHA_STRUCT_SIZEMATCH	fd, 439
mha.h, 929	mode, 439
MHA STRF	R, 439
mha.h, 929	T, 439
•	timeout, 439
MHA_TCP::Async_Notify, 427	•
~Async_Notify, 428	W, 439
Async_Notify, 428	X, 439
pipe, 428	MHA_TCP::Server, 440
reset, 428	∼Server, 441
set, 428	accept, 441
MHA_TCP::Client, 428	accept_event, 442
Client, 429	get_accept_event, 441
MHA_TCP::Connection, 430	get_interface, 441
~Connection, 432	get_port, 441
buffered_incoming_bytes, 436	iface, 442
buffered_outgoing_bytes, 436	initialize, 441
can_read_bytes, 434	port, 442
can_read_line, 434	Server, 440, 441
can_sysread, 432	serversocket, 442
can_syswrite, 432	sock_addr, 442
closed, 436	try_accept, 442
Connection, 432	MHA_TCP::Sockaccept_Event, 443
eof, 433	Sockaccept_Event, 443
fd, 436	MHA_TCP::Sockread_Event, 443
get_fd, 433	Sockread_Event, 444
get_peer_address, 433	MHA_TCP::Sockwrite_Event, 445
get_peer_port, 433	Sockwrite_Event, 445
get_read_event, 433	MHA_TCP::Thread, 445
get_write_event, 433	\sim Thread, 447
5 – – <i>'</i>	•

arg, 448	MHA_VERSION_STRING
error, 449	mha.h, 930
FINISHED, 447	MHA_VERSION
PREPARED, 447	mha.h, 929
RUNNING, 447	MHA_WAVEFORM
return_value, 448	mha.h, 930
run, 448	MHA XSTRF
state, 448	mha.h, 929
thr_f, 447	MHA_assert
Thread, 447	Error handling in the openMHA, 32
thread_arg, 449	MHA assert equal
thread attr, 448	Error handling in the openMHA, 32
thread_finish_event, 448	MHADestroy cb
thread_func, 448	PluginLoader::mhapluginloader_t, 833
thread_handle, 448	MHADestroy t
MHA_TCP::Timeout_Event, 449	mha.h, 931
end_time, 450	MHAEvents, 89
get_os_event, 450	MHAEvents::connector_base_t, 465
Timeout Event, 450	~connector_base_t, 465
MHA_TCP::Timeout_Watcher, 450	connector_base_t, 465
~Timeout Watcher, 451	emit_event, 466
timeout, 451	emitter_die, 466
Timeout_Watcher, 451	emitter_is_alive, 466
MHA_TCP::Wakeup_Event, 452	MHAEvents::connector t
~Wakeup_Event, 453	~connector_t, 468
get_os_event, 453	connector_t, 468
ignored_by, 453	emit_event, 468
observed_by, 453	emitter, 469
observers, 454	eventhandler, 469
os_event, 454	eventhandler_s, 469
os_event_valid, 454	eventhandler suu, 469
reset, 453	receiver, 469
status, 454	MHAEvents::connector_t< receiver_t >, 467
Wakeup_Event, 453	MHAEvents::emitter_t, 469
MHA_TCP, 87	~emitter_t, 470
dtime, 89	connect, 470
G ERRNO, 89	connections, 470
H ERRNO, 89	disconnect, 470
HSTRERROR, 88	operator(), 470
N ERRNO, 88	MHAEvents::patchbay_t
SOCKET, 88	∼patchbay_t, 471
STRERROR, 88	connect, 471, 472
stime, 89	cons, 472
MHA_VERSION_BUILD	MHAEvents::patchbay_t< receiver_t >, 471
mha.h, 929	MHAFilter, 90
MHA_VERSION_MAJOR	butter_stop_ord1, 92
mha.h, 929	gcd, 93
MHA_VERSION_MINOR	make_friendly_number, 92
mha.h, 929	o1_lp_coeffs, 92
MHA_VERSION_RELEASE	resampling_factors, 93
mha.h, 929	sinc, 93
•	•

ana aOfin OO	4:tt + 400
spec2fir, 93	diff_t, 482
MHAFilter::adapt_filter_param_t, 472	MHAFilter::fftfilter_t, 482
adapt_filter_param_t, 473	∼fftfilter_t, 484
err_in, 473	channels, 485
mu, 473	fft, 486
MHAFilter::adapt_filter_state_t, 473	fftfilter_t, 483
adapt_filter_state_t, 474	fftlen, 485
filter, 474	filter, 484, 485
nchannels, 474	fragsize, 485
ntaps, 474	sInput, 486
od, 474	sWeights, 486
oy, 474	update_coeffs, 484
W, 474	wIRS fft, 486
X, 474	wInput, 486
MHAFilter::adapt_filter_t, 474	wInput fft, 485
adapt_filter_t, 475	wOutput, 486
connector, 476	wOutput_fft, 486
err_in, 476	MHAFilter::fftfilterbank_t, 486
filter, 475	~fftfilterbank_t, 488
mu, 476	fft, 490
nchannels, 476	fftfilterbank_t, 487
ntaps, 476	fftlen, 489
set_channelcnt, 475	filter, 488, 489
update_mu, 475	firchannels, 489
• —	
update_ntaps, 475	fragsize, 489
MHAFilter::blockprocessing_polyphase_←	get_irs, 489
resampling_t, 476	Hs, 489
~blockprocessing_polyphase_resampling	
_t, 477	inputchannels, 489
blockprocessing_polyphase_resampling →	outputchannels, 489
_t, 477	tail, 490
can_read, 478	update_coeffs, 488
fragsize_in, 478	Xs, 489
fragsize_out, 478	xw, 489
num_channels, 478	Ys, 490
read, 478	yw, 489
resampling, 478	yw_temp, 490
write, 477	MHAFilter::filter_t, 490
MHAFilter::complex_bandpass_t, 479	∼filter_t, 492
A_, 481	A, 493
B_, 481	B, 493
complex_bandpass_t, 480	channels, 494
creator_A, 480	filter, 492, 493
creator_B, 480	filter_t, 491, 492
filter, 480, 481	get_len_A, 493
get_weights, 480	get_len_B, 493
inspect, 481	len, 494
set_state, 480	len_A, 494
set_weights, 480	len_B, 494
Yn, 481	state, 494
MHAFilter::diff_t, 481	MHAFilter::gamma_flt_t, 494

\sim gamma_flt_t, 495	MHAFilter::o1flt_maxtrack_t, 510
A, 496	o1flt_maxtrack_t, 511
bw_, 497	set_tau, 511
cf_, 497	MHAFilter::o1flt_mintrack_t, 511
delay, 496	o1flt_mintrack_t, 513
envelope_delay, 497	set_tau, 513
gamma_flt_t, 495	MHAFilter::partitioned_convolution_t, 513
get_A, 496	~partitioned_convolution_t, 515
get resynthesis gain, 496	bookkeeping, 516
get_weights, 496	current input signal buffer half index,
GF, 496	516
inspect, 496	current_output_partition_index, 516
operator(), 495, 496	fft, 517
phase_correction, 496	filter_partitions, 515
reset_state, 496	fragsize, 515
resynthesis gain, 497	frequency_response, 516
set_weights, 496	input_signal_spec, 516
srate_, 497	input_signal_wave, 515
MHAFilter::iir_filter_state_t, 497	nchannels_in, 515
iir_filter_state_t, 498	nchannels_out, 515
MHAFilter::iir filter t, 498	output_partitions, 515
	• —
A, 501	output_signal_spec, 516
B, 501	output_signal_wave, 516
connector, 501	partitioned_convolution_t, 514
filter, 500	process, 515
iir_filter_t, 499	MHAFilter::partitioned_convolution_t::index↔
nchannels, 501	_t, 517
resize, 501	delay, 518
update_filter, 501	index_t, 517, 518
MHAFilter::iir_ord1_real_t, 501	source_channel_index, 518
A_, 504	target_channel_index, 518
B_, 504	MHAFilter::polyphase_resampling_t, 518
iir_ord1_real_t, 502	downsampling_factor, 522
operator(), 503	impulse_response, 522
set_state, 503	now_index, 522
Yn, 504	polyphase_resampling_t, 520
MHAFilter::o1_ar_filter_t, 504	read, 521
c1_a, 5 07	readable_frames, 521
c1_r, 5 07	ringbuffer, 522
c2_a, 5 07	underflow, 522
c2_r, 5 07	upsampling_factor, 522
fs, 507	write, 521
o1_ar_filter_t, 505	MHAFilter::resampling_filter_t, 523
operator(), 506, 507	fragsize, 524
set_tau_attack, 506	fragsize_validator, 524
set_tau_release, 506	resampling_filter_t, 523
MHAFilter::o1flt_lowpass_t, 507	MHAFilter::smoothspec_t, 524
get_c1, 509	_linphase_asym, 527
get_last_output, 509	~smoothspec_t, 526
o1flt_lowpass_t, 509	fft, 527
set_tau, 509	fftlen, 527

internal_fir, 527	IOStrError, 979, 980
minphase, 527	MAX_USER_ERR, 979
nchannels, 527	user_err_msg, 980
smoothspec, 526	MHAIOJack, 94
smoothspec_t, 525	MHAIOJack.cpp, 980
spec2fir, 526	dummy_interface_test, 982, 983
tmp_spec, 527	ERR IHANDLE, 981
tmp wave, 527	ERR SUCCESS, 981
window, 527	ERR_USER, 981
MHAFilter::thirdoctave_analyzer_t, 527	IODestroy, 982, 983
bw_generator, 528	IOInit, 981, 982
_ _	
cf, 528	IOPrepare, 982
cf_generator, 528	IORelease, 982
cfg_, 528	IOSetVar, 982
dup, 528	IOStart, 982
fb, 529	IOStop, 982
get_cf_hz, 528	IOStrError, 982, 983
nbands, 528	MAX_USER_ERR, 981
nchannels, 528	user_err_msg, 983
out_chunk, 529	MHAIOJack::io_jack_t, 533
out_chunk_im, 529	clientname, 535
process, 528	connections_in, 535
thirdoctave_analyzer_t, 528	connections_out, 535
MHAFilter::transfer_function_t, 529	delays_in, 535
impulse_response, 531	delays_out, 536
isempty, 531	fw_fragsize, 535
non_empty_partitions, 530	fw_samplerate, 535
partitions, 530	get_all_input_ports, 535
•	· · - ·
source_channel_index, 531	get_all_output_ports, 535
target_channel_index, 531	get_delays_in, 535
transfer_function_t, 530	get_delays_out, 535
MHAFilter::transfer_matrix_t, 532	get_physical_input_ports, 535
non_empty_partitions, 532	get_physical_output_ports, 535
partitions, 532	io_jack_t, 534
MHAGetVersion_cb	patchbay, 536
PluginLoader::mhapluginloader_t, 833	portnames_in, 536
MHAGetVersion_t	portnames_out, 536
mha.h, 931	ports_in_all, 536
MHAIOFile.cpp, 978	ports_in_physical, 536
DEBUG, 979	ports_out_all, 536
dummy interface test, 979, 980	ports_out_physical, 536
ERR IHANDLE, 979	ports_parser, 536
ERR_SUCCESS, 979	prepare, 534
ERR USER, 979	read_get_cpu_load, 535
IODestroy, 979, 980	read_get_scheduler, 535
IOInit, 979	read_get_xruns, 535
IOPrepare, 979	reconnect_inports, 535
IORelease, 979, 980	- •
	reconnect_outports, 535
IOSetVar, 979, 980	release, 534
IOStart, 979, 980	servername, 535
IOStop, 979, 980	state_cpuload, 536

state_parser, 536	reconnect_inports, 539
state_priority, 536	reconnect_outports, 539
state_scheduler, 536	release, 539
state xruns, 536	server_fragsize, 541
MHAIOJackdb, 94	server srate, 541
MHAIOJackdb.cpp, 983	servername, 540
dummy_interface_test, 984, 985	set_locate, 540
ERR IHANDLE, 984	set use jack transport, 540
ERR_SUCCESS, 984	state_cpuload, 541
ERR USER, 984	state_parser, 541
IODestroy, 984, 985	state priority, 541
IOInit, 984, 985	state_scheduler, 541
IOPrepare, 984, 985	state xruns, 541
IORelease, 984, 985	use_jack_transport, 540
IOSetVar, 984, 985	MHAIOParser.cpp, 986
IOStart, 984, 985	dummy_interface_test, 987, 988
IOStop, 984, 985	ERR IHANDLE, 987
IOStrError, 984, 985	ERR_SUCCESS, 987
MAX_USER_ERR, 984	ERR USER, 987
user err msg, 985	IODestroy, 987, 988
MHAIOJackdb::io_jack_t, 537	IOInit, 987
clientname, 540	IOPrepare, 987
connections_in, 540	IORelease, 987, 988
connections_ut, 540	IOSetVar, 987, 988
fail_on_async_jackerr, 540	IOSetVal, 987, 988
fail_on_async_jackerror, 539	IOStart, 987
fragsize_ratio, 540	IOStop, 987, 988
_	MAX_USER_ERR, 987
get_all_input_ports, 540 get_all_output_ports, 540	user_err_msg, 988
get physical input ports, 539	MHAIOPortAudio, 94
get_physical_input_ports, 559 get_physical_output_ports, 540	parserFriendlyName, 95
IOProcessEvent_inner, 539	MHAIOPortAudio.cpp, 988
io_jack_t, 539	dummy_interface_test, 990, 991
— -	ERR IHANDLE, 990
locate, 541	ERR SUCCESS, 990
mha_fragsize, 540 mha_samplerate, 540	ERR_USER, 990
- •	IODestroy, 990, 991
patchbay, 541 portnames_in, 540	IODestroy, 990, 991
portnames out, 540	•
· = /	IOPrepare, 990 IORelease, 990, 991
ports_in_all, 541	• •
ports_in_physical, 541	IOSetVar, 990, 991
ports_out_all, 541	IOStart, 990, 991
ports_out_physical, 541	IOStop, 990, 991
ports_parser, 541	IOStrError, 990, 991
prepare, 539	MAX_USER_ERR, 990
proc_event, 540	portaudio_callback, 990, 991
proc_handle, 540	user_err_msg, 991
pwinner_out, 541	MHAIOPortAudio::device_info_t, 542
read_get_cpu_load, 540	defaultHighInputLatency, 543
read_get_scheduler, 540	defaultHighOutputLatency, 543
read_get_xruns, 540	defaultLowInputLatency, 543

defaultLowOutputLatency, 543	MAX_TCP_PORT_STR, 993
defaultSampleRate, 543	MAX_TCP_PORT, 993
device_info_t, 543	MAX_USER_ERR, 993
fill_info, 543	MHA_ErrorMsg2, 993
hostApi, 543	MHA_ErrorMsg3, 993
maxInputChannels, 543	MIN_TCP_PORT_STR, 993
maxOutputChannels, 543	MIN_TCP_PORT, 993
name, 543	thread_startup_function, 994
numDevices, 543	user_err_msg, 995
structVersion, 543	MHAInit_cb
MHAIOPortAudio::io_portaudio_t, 544	PluginLoader::mhapluginloader_t, 833
\sim io_portaudio_t, 545	MHAInit_t
cmd_prepare, 545	mha.h, 931
cmd_release, 546	MHAJACK_FW_STARTED
cmd_start, 545	mhajack.h, 997
cmd_stop, 545	MHAJACK_STARTING
device_index, 546	mhajack.h, 997
device_index_updated, 545	MHAJACK_STOPPED
device_info, 546	mhajack.h, 997
device_name, 546	MHAJack, 95
device_name_updated, 545	get_port_capture_latency, 96
fragsize, 546	get_port_capture_latency_int, 96
io_portaudio_t, 545	get_port_playback_latency, 97
nchannels_in, 546	get_port_playback_latency_int, 97
nchannels_out, 546	io, 96
patchbay, 546	MHAJack::client_avg_t, 547
portaudio_callback, 546	b_ready, 549
portaudio_stream, 546	b_stopped, 549
proc_event, 546	client_avg_t, 548
proc_handle, 546	frag_out, 549
s_in, 546	IOStoppedEvent, 549
s_out, 546	io, 548
samplerate, 546	n, 549
start_event, 546	name, 549
start_handle, 546	nrep, 549
stop_event, 546	pos, 549
stop_handle, 546	proc, 549
MHAIOTCP.cpp, 991	sn_in, 549
copy_error, 994	sn_out, 549
dummy_interface_test, 993, 994	MHAJack::client_noncont_t, 550
ERR_IHANDLE, 993	b_stopped, 551
ERR_SUCCESS, 993	client_noncont_t, 551
ERR_USER, 993	frag_out, 552
IODestroy, 993, 994	IOStoppedEvent, 551
IOInit, 993, 994	io, 551
IOPrepare, 993, 994	name, 552
IORelease, 993, 994	pos, 551
IOSetVar, 993, 994	proc, 551
IOStart, 993, 994	sn_in, 551
IOStop, 993, 994	sn_out, 552
IOStrError, 993, 994	MHAJack::client_t, 552

	b_prepared, 558	dir_t, 559
	client_t, 554	dir_type, 561
	connect_input, 555	get_short_name, 561
	connect output, 555	input, 559
	fail_on_async_jackerror, 558	iob, 561
	flags, 558	jc, <mark>561</mark>
	fragsize, 557	mute, 560
	get_cpu_load, 556	output, 559
	get_fragsize, 555	port, 561
	get_my_input_ports, 556	port_t, 559, 560
	get_my_output_ports, 556	read, 560
	get_ports, 556	write, 560
	get_srate, 556	MHAKernel, 97
	get_xruns, 556	algo_comm_safe_cast, 97
	get xruns reset, 556	MHAKernel::algo_comm_class_t, 561
	inch, 558	~algo_comm_class_t, 563
	input portnames, 558	ac, 564
	internal_start, 557	,
	internal_start, 557	algo_comm_class_t, 563
	— · ·	algo_comm_id_string, 564
	jack_proc_cb, 557	algo_comm_id_string_len, 564
	jack_xrun_cb, 557	get_c_handle, 563
	jc, 558	get_entries, 564
	jstate_prev, 558	get_error, 564
	nchannels_in, 557	get_var, 563
	nchannels_out, 557	get_var_float, 563
	num_xruns, 557	get_var_int, 563
	outch, 558	insert_var, 563
	output_portnames, 558	insert_var_float, 563
	prepare, 554, 555	insert_var_int, 563
	prepare_impl, 556	is_var, 563
	proc_event, 557	local_get_entries, 564
	proc_handle, 557	local_get_var, 564
	release, 555	local_insert_var, 564
	s_in, 558	local_is_var, 564
	s_out, 558	local_remove_ref, 564
	samplerate, 557	local_remove_var, 564
	set_input_portnames, 556	remove_ref, 563
	set_output_portnames, 556	remove_var, 563
	set_use_jack_transport, 556	size, <mark>564</mark>
	start, 555	vars, 564
	start_event, 558	MHAKernel::comm_var_map_t, 565
	start_handle, 558	has_key, 565
	stop, 555	MHAMultiSrc, 97
	stop_event, 558	MHAMultiSrc::base_t, 565
	stop_handle, 558	ac, 566
	stopped, 557	base_t, 566
	str_error, 556	select_source, 566
	use jack transport, 558	MHAMultiSrc::channel_t, 567
МН	AJack::port_t, 558	channel, 567
	~port_t, 560	name, 567
	connect_to, 561	MHAMultiSrc::channels_t, 567
	33100i_t0, 00 i	

channels_t, 567	\sim fftfb_t, 575
MHAMultiSrc::spectrum_t, 568	apply_gains, 575
spectrum_t, 568	bin1, 576
update, 569	bin2, <u>576</u>
MHAMultiSrc::waveform_t, 569	fftfb_t, 575
update, 570	fftlen, 576
waveform_t, 570	get_fbpower, 575
MHAOvIFilter, 98	get_fbpower_db, 575
scale_fun_t, 99	get_fftlen, 576
MHAOvlFilter::FreqScaleFun, 99	_
· ·	get_ltass_gain_db, 576
hz2bark, 101	samplingrate, 576
hz2bark_analytic, 101	shape, 576
hz2erb, 101	vbin1, 576
hz2erb_glasberg1990, 101	vbin2, 576
hz2hz, 100	w, 576
hz2khz, 100	MHAOvlFilter::fftfb_vars_t, 577
hz2log, 101	cLTASS, 579
hz2octave, 100	cf, 579
hz2third_octave, 100	ef, 579
inv_scale, 101	f, 578
MHAOvlFilter::ShapeFun, 102	fail_on_nonmonotonic, 579
expflt, 103	fail_on_unique_bins, 579
gauss, 103	fftfb_vars_t, 578
hann, 103	fscale, 578
linear, 102	ftype, 578
rect, 102	normalize, 579
MHAOvIFilter::band_descriptor_t, 570	ovltype, 578
cf, 571	plateau, 578
of h, 571	shapes, 579
of I, 571	MHAOvIFilter::fscale_bw_t, 579
ef_h, 571	bw, 580
ef_l, 571	bw_hz, 580
high_side_flat, 571	fscale_bw_t, 580
low_side_flat, 571	get_bw_hz, 580
MHAOvlFilter::barkscale, 99	update_hz, 580
vbark, 99	updater, 580
vfreq, 99	MHAOvlFilter::fscale_t, 581
MHAOvIFilter::barkscale::bark2hz_t, 571	f, 582
\sim bark2hz_t, 572	f_hz, 582
bark2hz_t, 572	fscale_t, 582
MHAOvlFilter::barkscale::hz2bark_t, 572	get_f_hz, 582
\sim hz2bark_t, 573	unit, 582
hz2bark_t, 573	update_hz, 582
MHAOvlFilter::fftfb_ac_info_t, 573	updater, 582
bwv, 574	MHAOvIFilter::fspacing_t, 582
cLTASS, 574	bands, 584
cfv, 573	cf2bands, 584
efv, 573	ef2bands, 584
fftfb_ac_info_t, 573	equidist2bands, 584
insert, 573	fail_on_nonmonotonic_cf, 584
MHAOvIFilter::fftfb_t, 574	fail_on_unique_fftbins, 584
	iaori_ariiqao_ritoriio, oo+

fs_, 584	mha_generic_chain.h, 945
fspacing_t, 584	split.cpp, 1010
get_cf_fftbin, 584	wave2spec.cpp, 1013
get_cf_hz, 584	MHAPLUGIN_PROC_CALLBACK_PREFIX
get_ef_hz, 584	mha_plugin.hh, 957
nbands, 584	MHAPLUGIN_PROC_CALLBACK
nfft_, 584	mha_plugin.hh, 957
symmetry_scale, 584	MHAParser, 103
MHAOvIFilter::overlap_save_filterbank_	all_dump, 107
analytic_t, 585	all ids, 107
filter_analytic, 586	c_parse_cmd_t, 106
imagfb, 586	c_parse_cmd_t, 100 c_parse_err_t, 106
overlap_save_filterbank_analytic_t, 586	cfg_dump, 107
MHAOvIFilter::overlap_save_filterbank_t, 586	cfg_dump_short, 107
channelconfig_out_, 588	commentate, 107
get_channelconfig, 588	entry_map_t, 106
overlap_save_filterbank_t, 588	entry_map_t, 100 envreplace, 107
MHAOvIFilter::overlap_save_filterbank_t↔	get_precision, 106
::vars_t, 588	mon dump, 107
fftlen, 589	opact_map_t, 106
irswnd, 589	opact_t, 106
phasemodel, 589	query_map_t, 106
vars_t, 589	query_t, 106
MHAOvIFilter::scale_var_t, 590	strreplace, 107
add_fun, 591	trim, 107
funs, 591	MHAParser::StrCnv, 108
get_fun, 591	bracket_balance, 109
get_name, 591	num_brackets, 109
hz2unit, 591	str2val, 109, 110
names, 591	str2val< mha_real_t >, 110
scale_var_t, 591	val2str, 110–112
unit2hz, 591	MHAParser::base_t, 592
MHAPLATFORM	~base t, 595
mha_parser.cpp, 951	activate_query, 599
MHAPLUGIN CALLBACKS PREFIX	add_parent_on_insert, 599
The openMHA Plugins (programming in-	add_replace_pair, 599
terface), 8	base t, 595
MHAPLUGIN_CALLBACKS	data_is_initialized, 600
The openMHA Plugins (programming in-	fullname, 599
terface), 8	help, 600
MHAPLUGIN_DOCUMENTATION_PREFIX	id_str, 600
mha_plugin.hh, 957	nested_lock, 600
MHAPLUGIN_DOCUMENTATION	notify, 599
The openMHA Plugins (programming in-	op_query, 596
terface), 9	op_setval, 596
MHAPLUGIN_INIT_CALLBACKS_PREFIX	op_subparse, 596
mha_plugin.hh, 957	operators, 600
MHAPLUGIN_INIT_CALLBACKS	oplist, 599
mha_plugin.hh, 957	parent, 600
MHAPLUGIN_OVERLOAD_OUTDOMAIN	parse, 595, 596
altplugs.cpp, 909	prereadaccess, 600

	lik a mar 000
queries, 600	liberr, 608
query_addsubst, 598	modulename, 608
query_cmds, 598	op_query, 607
query_dump, 596	op_setval, 607
query_entries, 596	op_subparse, 607
query_help, 598	ret_size, 608
query_id, 598	retv, 608
query_listids, 598	set_parse_cb, 607
query_perm, 597	test_error, 607
query_range, 597	MHAParser::commit_t
query_readfile, 597	commit_t, 610
query_savefile, 597	extern_connector, 610
query_savefile_compact, 598	MHAParser::commit_t< receiver_t >, 608
query_savemons, 598	MHAParser::complex_mon_t, 610
query_subst, 598	complex_mon_t, 611
query_type, 597	data, 612
query_val, 597	query_type, 611
query_version, 598	query_val, 611
readaccess, 600	MHAParser::complex_t, 612
repl_list, 600	complex_t, 613
repl list t, 595	data, 614
rm_parent_on_remove, 599	op_setval, 613
set_help, 599	query_type, 613
set_node_id, 598	query_val, 613
thefullname, 600	MHAParser::entry_t, 614
valuechanged, 599	entry, 614
writeaccess, 599	entry_t, 614
MHAParser::base_t::replace_t, 601	name, 614
a, 601	MHAParser::expression_t, 615
b, 601	expression t, 615
get_a, 601	Ival, 615
get_b, 601	op, 615
replace, 601	rval, 615
replace_t, 601	MHAParser::float_mon_t, 616
MHAParser::bool_mon_t, 602	data, 617
bool_mon_t, 602	float_mon_t, 616
data, 603	query_type, 617
query_type, 603	query_type, 617 query_val, 617
query_val, 603	MHAParser::float_t, 617
MHAParser::bool_t, 603	data, 620
- '	float t, 619
bool_t, 605	<u>-</u> ·
data, 605	op_setval, 619
op_setval, 605	query_type, 619
query_type, 605	query_val, 619
query_val, 605	MHAParser::int_mon_t, 620
MHAParser::c_ifc_parser_t, 606	data, 622
~c_ifc_parser_t, 607	int_mon_t, 621
c_ifc_parser_t, 607	query_type, 621
c_parse_cmd, 608	query_val, 621
c_parse_err, 608	MHAParser::int_t, 622
libdata, 608	data, 624

int_t, 623	channels, 639
op_setval, 624	domain, 639
query_type, 624	fftlen, 639
query_val, 624	fragsize, 639
MHAParser::keyword_list_t, 624	mhaconfig_mon_t, 639
add_entry, 626	srate, 640
empty_string, 627	update, 639
entries, 627	wndlen, 639
get_entries, 626	MHAParser::mhapluginloader_t, 640
get index, 626	~mhapluginloader_t, 641
get_value, 626	ac_, 642
index, 627	bookkeeping, 642
keyword_list_t, 625	cf_in_, 642
set_entries, 626	cf_out_, 642
set_index, 626	connector, 642
set_value, 626	get_cfin, 642
size_t, 625	get cfout, 642
validate, 626	get_last_name, 642
MHAParser::kw_t, 627	last_name, 642
data, 630	load_plug, 642
isval, 629	mhapluginloader_t, 641
kw_t, 628, 629	parent_, 642
op_setval, 629	plug, 642
query_range, 629	plugname, 642
query_type, 629	plugname_name_, 642
query_val, 629	prefix_, 642
set_range, 629	prepare, 641
validate, 629	process, 641, 642
MHAParser::mcomplex_mon_t, 630	release, 641
data, 631	MHAParser::monitor_t, 643
mcomplex_mon_t, 631	monitor_t, 643
query_type, 631	op_query, 643
query_val, 631	query_dump, 643
MHAParser::mcomplex_t, 632	query_perm, 644
data, 633	MHAParser::parser_t, 644
mcomplex_t, 633	~parser_t, 646
op_setval, 633	entries, 648
query_type, 633	force_remove_item, 646
query_val, 633	id_string, 648
MHAParser::mfloat_mon_t, 634	insert_item, 646
data, 635	last_errormsg, 649
mfloat_mon_t, 634	op_query, 647
query_type, 635	op_setval, 647
query_val, 635	op_subparse, 647
MHAParser::mfloat_t, 635	parser_t, 646
data, 638	query_dump, 647
mfloat_t, 637	query_entries, 647
op_setval, 637	query_listids, 648
query_type, 637	query_readfile, 648
query_val, 637	query_savefile, 648
MHAParser::mhaconfig_mon_t, 638	query_savefile_compact, 648

query_savemons, 648	vfloat_mon_t, 663
query_type, 647	MHAParser::vfloat_t, 664
query_val, 648	data, 666
remove_item, 646, 647	op_setval, 665
set_id_string, 648	query_type, 665
srcfile, 648	query_val, 665
srcline, 649	vfloat_t, 665
MHAParser::range_var_t, 649	MHAParser::vint_mon_t, 666
check_low, 651	data, 667
check_range, 652	query_type, 667
check_up, 652	query_val, 667
low_incl, 651	vint_mon_t, 667
low_limit, 651	MHAParser::vint_t, 668
query_range, 650	data, 670
range_var_t, 650	op_setval, 669
set_range, 650	query_type, 669
up_incl, 651	query_val, 669
up_limit, 651	vint_t, 669
validate, 651	MHAParser::vstring_mon_t, 670
MHAParser::string_mon_t, 652	data, 671
data, 654	query_type, 671
query_type, 653	query_val, 671
query_val, 653	vstring_mon_t, 671
string_mon_t, 653	MHAParser::vstring_t, 672
MHAParser::string_t, 654	data, 673
data, 656	op_setval, 673
op_setval, 655	query_type, 673
query_type, 655	query_val, 673
query_val, 655	vstring_t, 673
string_t, 655	MHAParser::window_t, 674
MHAParser::variable_t, 656	get_type, 676
locked, 657	get_window, 675, 676
op_setval, 657	user, 676
query_perm, 657	window_t, 675
setlock, 657	wnd_bartlett, 675
variable_t, 657	wnd_blackman, 675
MHAParser::vcomplex_mon_t, 658	wnd_hamming, 675
data, 659	wnd_hann, 675
query_type, 659	wnd_rect, 675
query_val, 659	wnd_user, 675
vcomplex_mon_t, 659	wtype, 676
MHAParser::vcomplex_t, 660	wtype_t, 675
data, 661	MHAPlugin, 112
op_setval, 661	MHAPlugin::cfg_chain_t
query_type, 661	\sim cfg_chain_t, 678
query_val, 661	cfg_chain_t, 678
vcomplex_t, 661	data, 678
MHAParser::vfloat_mon_t, 662	next, 678
data, 663	not_in_use, 678
query_type, 663	MHAPlugin::cfg_chain_t< runtime_cfg_t >,
query_val, 663	677

MHAPlugin::config_t	nchannels_out, 691
∼config_t, 681	outer2inner_resampling, 691
cfg, 683	outer_fragsize, 690
cfg_chain, 683	outer_srate, 691
cfg_chain_current, 683	output_signal, 691
cleanup_unused_cfg, 683	plugloader, 691
config_t, 681	process, 690
last_config, 681	resampling_t, 690
poll_config, 681	MHAPlugin_Split, 113
push_config, 681	INVALID_THREAD_PRIORITY, 113
remove_all_cfg, 683	MHAPlugin_Split::domain_handler_t, 691
MHAPlugin::config_t< runtime_cfg_t >, 678	~domain_handler_t, 693
MHAPlugin::plugin_t	deallocate_domains, 694
~plugin_t, 685	domain_handler_t, 693
ac, 687	get_signal, 695
input_cfg, 686	operator=, 693
input_cfg_, 687	process, 695
is_prepared, 686	processor, 696
is_prepared_, 687	put_signal, 694
mhaconfig_in, 687	set_input_domain, 693
mhaconfig_out, 687	set_output_domain, 693
output_cfg, 687	spec_in, 696
output_cfg_, 687	spec_out, 696
plugin_t, 685	wave_in, 696
prepare, 685	wave_out, 696
prepare_, 686	MHAPlugin_Split::dummy_threads_t, 696
release, 686	catch_thread, 697
release_, 686	dummy_threads_t, 697
tftype, 687	kick_thread, 697
MHAPlugin::plugin_t< runtime_cfg_t >, 683	MHAPlugin_Split::posix_threads_t, 698
MHAPlugin_Resampling, 112	~posix_threads_t, 700
MHAPlugin_Resampling::resampling_if_←	attr, 701
t, 688	catch_condition, 701
algo, 689	catch_thread, 700
chain, 689	current_thread_priority, 700
fragsize, 689	current_thread_scheduler, 700
irslen_inner2outer, 689	kick_condition, 700
irslen_outer2inner, 689	kick_thread, 700
nyquist_ratio, 689	kicked, 701
plugloader, 689	main, 700
prepare, 689	mutex, 700
process, 689	posix_threads_t, 699
release, 689	priority, 701
resampling_if_t, 689	processing_done, 701
srate, 689	scheduler, 701
MHAPlugin_Resampling::resampling_t, 690	termination_request, 701
inner2outer_resampling, 691	thread, 701
inner_fragsize, 691	thread start, 700
inner_iragsize, 691 inner_signal, 691	MHAPlugin_Split::split_t, 702
inner_signal, 691 inner_srate, 691	~split_t, 704
-	• —
nchannels_in, 691	algos, 705

chains, 706	mha.h, 931
channels, 705	MHAProc_spec2spec_cb
clear_chains, 704	PluginLoader::mhapluginloader_t, 833
collect_result, 704	MHAProc_spec2spec_t
copy_output_spec, 704	mha.h, 931
copy_output_wave, 704	MHAProc_spec2wave_cb
delay, 706	PluginLoader::mhapluginloader_t, 834
framework_thread_priority, 706	MHAProc spec2wave t
framework_thread_scheduler, 705	mha.h, 931
patchbay, 705	MHAProc_wave2spec_cb
prepare_, 704	PluginLoader::mhapluginloader t, 833
process, 704	MHAProc_wave2spec_t
release_, 704	mha.h, 931
signal_out, 705	MHAProc_wave2wave_cb
spec_out, 706	PluginLoader::mhapluginloader_t, 833
split_t, 704	MHAProc_wave2wave_t
thread_platform, 705	mha.h, 931
trigger_processing, 704	MHARelease_cb
update, 704	PluginLoader::mhapluginloader_t, 833
•	MHARelease t
wave_out, 706	<u> </u>
worker_thread_priority, 705	mha.h, 931
worker_thread_scheduler, 705	MHASet_cb
MHAPlugin_Split::splitted_part_t, 706	PluginLoader::mhapluginloader_t, 834
~splitted_part_t, 708	MHASet_t
collect_result, 710	mha.h, 931
domain, 710	MHASignal, 113
operator=, 709	copy_permuted, 121
parse, 709	kth_smallest, 117
plug, 710	limit, 117
prepare, 709	mean, 118
release, 709	median, 118
splitted_part_t, 708	quantile, 120
thread, 711	saveas_mat4, 120, 121
trigger_processing, 710	scale, 117
MHAPlugin_Split::thread_platform_t, 711	signal_counter, 121
\sim thread_platform_t, 712	MHASignal::async_rmslevel_t, 718
catch_thread, 713	async_rmslevel_t, 719
kick_thread, 713	filled, 720
operator=, 713	peaklevel, 720
processor, 713	pos, 720
thread_platform_t, 712	process, 720
MHAPlugin_Split::uni_processor_t, 714	rmslevel, 719
\sim uni_processor_t, 714	MHASignal::delay_spec_t, 720
process, 715	\sim delay_spec_t, 721
MHAPluginCategory_t	buffer, 721
mha.h, 931	delay, <mark>721</mark>
MHAPluginDocumentation_t	delay_spec_t, 721
mha.h, 931	pos, 721
MHAPrepare_cb	process, 721
PluginLoader::mhapluginloader_t, 833	MHASignal::delay_t, 721
MHAPrepare_t	\sim delay_t, 722

buffer, 723	buf_c_in, 731
channels, 723	buf_c_out, 731
delay_t, 722	buf_r_in, 731
delays, 723	buf_r_out, 731
inspect, 723	hilbert, 731
pos, 723	hilbert_fftw_t, 731
process, 722	n, 731
MHASignal::delay wave t, 723	p1, 731
~delay_wave_t, 724	p2, 731
buffer, 724	sc, 731
delay, 724	MHASignal::hilbert_t, 731
	<u> </u>
delay_wave_t, 724	~hilbert_t, 732
pos, 724	h, 732
process, 724	hilbert_t, 732
MHASignal::doublebuffer_t, 724	operator(), 732
~doublebuffer_t, 726	MHASignal::loop_wavefragment_t, 733
ch, 727	add, 734
doublebuffer_t, 725	b_loop, 736
inner_in, 727	get_mapping, 735
inner_out, 727	input, 734
inner_process, 726	intern_level, 736
k_inner, 727	is_playback_active, 736
k_outer, 727	level_mode_t, 734
min, 726	locate_end, 736
outer_out, 727	loop_wavefragment_t, 734
outer_process, 726	mute, 734
this_outer_out, 727	peak, 734
MHASignal::fft_t, 727	playback, 735, 736
~fft t, 728	playback_channels, 736
backward, 729	playback_mode_t, 734
backward_scale, 729	pos, 736
buf_in, 730	relative, 734
buf out, 730	replace, 734
_ '	•
fft_t, 728	rewind, 736
fftw_plan_fft, 730	rms, 734
fftw_plan_ifft, 730	rms_limit40, 734
fftw_plan_spec2wave, 730	set_level_db, 736
fftw_plan_wave2spec, 730	set_level_lin, 736
forward, 728	MHASignal::matrix_t, 737
forward_scale, 729	\sim matrix_t, 740
n_im, 730	cdata, 745
n_re, 730	complex_ofs, 745
nfft, 730	dimension, 741
scale, 730	get_cdata, 745
sort_fftw2spec, 729	get_comm_var, 740
sort_spec2fftw, 729	get_index, 744
spec2wave, 728	get_nelements, 741
spec2wave_scale, 729	get_nreals, 744
wave2spec, 728	get_rdata, 745
wave2spec_scale, 729	imag, 742-744
MHASignal::hilbert_fftw_t, 730	is_same_size, 741
<u> </u>	

iscomplex, 741	mean_std, 761
matrix_t, 739, 740	n, 761
nelements, 745	push, 761
numbytes, 744	stat_t, 761
operator(), 742–744	sum, 761
operator=, 740	sum2, 761
rdata, 745	MHASignal::subsample_delay_t, 761
real, 741–743	last_complex_bin, 763
size, 741	phase_gains, 763
write, 744	process, 763
•	·
MHASignal::minphase_t, 745	subsample_delay_t, 762
minphase_t, 746	MHASignal::uint_vector_t, 764
operator(), 746	~uint_vector_t, 765
phase, 747	data, 766
MHASignal::quantizer_t, 747	get_length, 766
downscale, 748	getdata, 766
limit, 748	length, 766
operator(), 748	numbytes, 766
quantizer_t, 747	operator=, 765
up_limit, 748	operator==, 765
upscale, 748	operator[], 766
MHASignal::ringbuffer_t, 748	uint_vector_t, 765
contained_frames, 750	write, 766
discard, 751	MHASignal::waveform_t, 767
next_read_frame_index, 751	~waveform_t, 769
next_write_frame_index, 752	assign, 773
	<u> </u>
ringbuffer_t, 750	assign_channel, 773
value, 750	assign_frame, 773
write, 751	copy, 774
MHASignal::schroeder_t, 752	copy_channel, 774
down, 754	copy_from_at, 774
groupdelay_t, 753	export_to, 775
identity, 755	get_size, 777
log_down, 755	limit, 775
log_up, 755	operator(), 770, 771
schroeder_t, 754	operator=, 770
sign_t, 754	operator[], 770
up, 754	power, 775
MHASignal::spectrum_t, 755	powspec, 776
~spectrum_t, 757	scale, 776
copy, 758	scale channel, 776
copy_channel, 759	scale_frame, 777
export_to, 759	sum, 771, 772
operator(), 758	sum_channel, 772
•	_
operator[], 758	sumsqr, 772
scale, 759	value, 770, 771
scale_channel, 760	waveform_t, 769
spectrum_t, 757	MHASndFile, 121
value, 758	MHASndFile::sf_t, 777
MHASignal::stat_t, 760	∼sf_t, 778
mean, 761	sf, 778

sf_t, 778	bartlett_t, 789
MHASndFile::sf_wave_t, 778	MHAWindow::base_t, 790
sf wave t, 779	base_t, 790, 791
MHAStrError_cb	operator(), 791
PluginLoader::mhapluginloader_t, 834	ramp_begin, 791
MHAStrError t	ramp_end, 791
mha.h, 931	MHAWindow::blackman_t, 792
MHATableLookup, 122	blackman_t, 792
MHATableLookup::linear_table_t, 779	MHAWindow::fun_t, 793
~linear table t, 781	fun_t, 793
add_entry, 782	MHAWindow::hamming_t, 794
clear, 782	hamming_t, 795
	MHAWindow::hanning_t, 795
interp, 781	<u> </u>
len, 783	hanning_t, 796
linear_table_t, 781	MHAWindow::rect_t, 796
lookup, 781	rect_t, 797
prepare, 782	MHAWindow::user_t, 797
scalefac, 783	user_t, 798
set_xmax, 782	MIN_TCP_PORT_STR
set_xmin, 781	MHAIOTCP.cpp, 993
vec_y, 783	MIN_TCP_PORT
vy, 783	MHAIOTCP.cpp, 993
xmax, 783	MIN
xmin, 783	mha_defs.h, 935
MHATableLookup::table_t, 783	mXY
\sim table_t, 784	MHATableLookup::xy_table_t, 788
clear, 784	main
interp, 784	analysemhaplugin.cpp, 910
lookup, 784	browsemhaplugins.cpp, 911
table_t, 784	generatemhaplugindoc.cpp, 922
MHATableLookup::xy_table_t, 785	MHAPlugin_Split::posix_threads_t, 700
add_entry, 787	mha.cpp, 926
clear, 787	testalsadevice.c, 1011
get_xlimits, 788	make_friendly_number
interp, 786	MHAFilter, 92
lookup, 786	mhajack.cpp, 995
mXY, 788	make_friendly_number_by_limiting
set_xfun, 787	nlms_wave.cpp, 1001
set_xyfun, 788	prediction_error.cpp, 1003
set_yfun, 788	mapping
xfun, 788	addsndfile::addsndfile_if_t, 171
	— — ·
xy_table_t, 786	coherence::vars_t, 224
xyfun, 788	matmix_t
yfun, 788	matrixmixer::matmix_t, 373
MHAWindow, 122	matrix_t
bartlett, 123	MHASignal::matrix_t, 739, 740
blackman, 123	matrixmixer, 85
hamming, 123	matrixmixer.cpp, 926
hanning, 123	matrixmixer::cfg_t, 370
rect, 123	cfg_t, 371
MHAWindow::bartlett_t, 789	m, 371

process, 371	DynComp::dc_afterburn_vars_t, 280
sout, 371	maximum_reader_xruns_in_succession_
wout, 371	before_stop
matrixmixer::matmix_t, 372	mha_drifter_fifo_t, 405
ci, 373	maximum_writer_xruns_in_succession_←
co, 373	before_stop
matmix_t, 373	mha drifter fifo t, 405
mixer, 373	mcomplex mon t
patchbay, 373	MHAParser::mcomplex_mon_t, 631
prepare, 373	mcomplex_t
process, 373	MHAParser::mcomplex_t, 633
update_m, 373	mean
max	MHA_AC::stat_t, 387
spec2wave.cpp, 1006	MHASignal, 118
Vector and matrix processing toolbox, 58	MHASignal::stat_t, 761
max_clipped	mean std
softclipper_variables_t, 870	MHASignal::stat_t, 761
max_fill_count	median
mha fifo t, 417	MHASignal, 118
max frames	mfloat mon t
acsave::cfg_t, 158	MHAParser::mfloat_mon_t, 634
max_lag	mfloat t
doasvm_feature_extraction, 267	MHAParser::mfloat_t, 637
max_level_difference	mha
dc::dc_t, 239	speechnoise_t, 875
dc::dc_vars_t, 241	mha.cpp, 926
max_p_ind_name	main, 926
doasym_classification, 263	mhamain, 926
max_pool_ind_name	mha.h, 926
acPooling_wave, 151	algo_comm_t, 931
max_q	MHA_AC_CHAR, 930
timoConfig, 886	MHA_AC_DOUBLE, 930
max_q_AC	MHA_AC_FLOAT, 930
timo_AC, 881	MHA_AC_INT, 930
max val	MHA AC MHACOMPLEX, 930
timoConfig, 886	MHA AC MHAREAL, 930
max_val_AC	MHA_AC_UNKNOWN, 930
timo_AC, 881	MHA AC USER, 930
maxInputChannels	MHA AC VEC FLOAT, 930
MHAIOPortAudio::device_info_t, 543	MHA CALLBACK TEST PREFIX, 929
maxOutputChannels	MHA_CALLBACK_TEST, 929
MHAIOPortAudio::device_info_t, 543	MHA DOMAIN MAX, 930
maxabs	MHA_DOMAIN_UNKNOWN, 930
Vector and matrix processing toolbox, 56,	MHA_RELEASE_VERSION_STRING,
57	930
maxframe	MHA SPECTRUM, 930
	MHA_STRUCT_SIZEMATCH, 929
acsave::save_var_t, 160 maxgain	MHA STRF, 929
dc_simple::dc_t, 249	MHA_STRE, 929 MHA_VERSION_BUILD, 929
dc_simple::dc_vars_t, 251	MHA_VERSION_MAJOR, 929
DynComp::dc_afterburn_rt_t, 276	MHA VERSION MINOR, 929
bynoompuc_aiterburn_ft_t, 4/0	

side, 392
mha_complex
Complex arithmetics in the openMHA, 62
mha_complex_t, 393
im, 393
re, 393
mha_dblbuf_t
~mha_dblbuf_t, 396
delay, 398
fifo_size, 398
get_delay, 396
get_fifo_size, 396
get_inner_error, 396
get_inner_size, 396
get_input_channels, 396
get_input_fifo_fill_count, 396
get_input_fifo_space, 396
get_outer_size, 396
get_output_channels, 396
get_output_fifo_fill_count, 396
get_output_fifo_space, 396
inner_error, 399
inner_size, 398
input, 397
input_channels, 398
input_fifo, 398
mha_dblbuf_t, 395
outer_error, 399
outer_size, 398
output, 397
output_channels, 398
output_fifo, 398
process, 397
provoke_inner_error, 397
provoke_outer_error, 397
value_type, 395
mha_dblbuf_t< FIFO >, 393
mha_debug
Error handling in the openMHA, 32
mha_defs.h, 934
MHA_FUN, 935
declspec, 935
CHECK_EXPR, 935
CHECK_VAR, 935
M_PI, 935
MAX, 935
MHA_EAR_LEFT, 935
MHA_EAR_MAX, 935
MHA_EAR_RIGHT, 935
MIN, 935
mha_direction_t, 399

azimuth, 399	mha_error_helpers, 86
distance, 400	digits, 86
elevation, 399	snprintf_required_length, 86
mha_domain_t	mha_event_emitter.h, 939
mha.h, 930	mha_events.cpp, 939
mha_drifter_fifo_t	mha_events.h, 939
desired_fill_count, 404	mha exit request
get_available_space, 403	mha ruby.cpp, 959
get_des_fill_count, 403	mha fft
get_fill_count, 403	timoConfig, 885
get_min_fill_count, 404	mha_fft_backward
maximum_reader_xruns_in_succession←	Fast Fourier Transform functions, 74
before_stop, 405	mha_fft_backward_scale
maximum_writer_xruns_in_succession←	Fast Fourier Transform functions, 75
_before_stop, 405	mha_fft_forward
mha_drifter_fifo_t, 402	Fast Fourier Transform functions, 74
minimum_fill_count, 404	mha_fft_forward_scale
null_data, 405	Fast Fourier Transform functions, 75
read, 403	mha_fft_free
reader_started, 404	Fast Fourier Transform functions, 71
reader_xruns_in_succession, 405	mha fft new
reader_xruns_since_start, 405	Fast Fourier Transform functions, 71
reader_xruns_total, 405	mha_fft_spec2wave
starting, 404	Fast Fourier Transform functions, 73
startup_zeros, 406	mha_fft_spec2wave_scale
stop, 404	Fast Fourier Transform functions, 76
write, 402	mha fft t
writer_started, 404	Fast Fourier Transform functions, 71
writer_xruns_in_succession, 405	mha_fft_wave2spec
writer xruns since start, 405	Fast Fourier Transform functions, 72
writer_xruns_total, 405	mha_fft_wave2spec_scale
mha_drifter_fifo_t< T >, 400	Fast Fourier Transform functions, 75
mha_errno.c, 935	mha_fftfb.cpp, 939
cstr_strerror, 936	BARKSCALE ENTRIES, 941
mha set user error, 936	filtershapefun, 941
mha strerror, 936	mha_fftfb.hh, 941
next_except_str, 936	mha fifo.cpp, 942
STRLEN, 936	mha_fifo.h, 942
mha_errno.h, 936	mha_fifo_thread_platform_implementation
MHA_ERR_INVALID_HANDLE, 937	t, 942
MHA ERR NULL, 937	mha fifo lw t
MHA ERR SUCCESS, 937	~mha_fifo_lw_t, 409
MHA ERR UNKNOWN, 937	error, 411
MHA_ERR_USER, 937	mha_fifo_lw_t, 409
MHA_ERR_VARFMT, 937	read, 410
MHA ERR VARRANGE, 937	set_error, 410
mha_set_user_error, 937	sync, 410
mha_strerror, 937	write, 409
mha_error.cpp, 937	mha_fifo_lw_t $<$ T $>$, 408
mha_error.hh, 938	mha_fifo_posix_threads_t, 411
Getmsg, 939	~mha_fifo_posix_threads_t, 412
	<u></u>

aquire_mutex, 412	mha_os.h, 948
decrease condition, 413	mha freelib success
decrement, 412	mha_os.h, 948
increase_condition, 413	mha_generic_chain.cpp, 944
increment, 412	mhaconfig_compare, 945
mha_fifo_posix_threads_t, 412	mha_generic_chain.h, 945
mutex, 413	MHAPLUGIN_OVERLOAD_OUTDOM↔
release_mutex, 412	AIN, 945
wait_for_decrease, 412	mha_getenv
wait for increase, 412	mha_os.cpp, 947
mha_fifo_t	mha_os.h, 949
~mha_fifo_t, 415	mha_getlibfun
buf, 417	mha_os.h, 948
buf_uses_placement_new, 417	mha_getlibfun_checked
	mha os.h, 949
clear, 417	_
get_available_space, 416	mha_hton
get_fill_count, 416	mha_os.h, 949, 950
get_max_fill_count, 416	mha_io_ifc.h, 945
max_fill_count, 417	IODestroy_t, 946
mha_fifo_t, 415	IOInit_t, 946
operator=, 416	IOPrepare_t, 946
read, 416	IOProcessEvent_t, 946
read_ptr, 417	IORelease_t, 946
value_type, 415	IOSetVar_t, 946
write, 415	IOStart_t, 946
write_ptr, 417	IOStartedEvent_t, 946
$mha_fifo_t < T >, 413$	IOStop_t, 946
mha_fifo_thread_guard_t, 417	IOStoppedEvent_t, 946
\sim mha_fifo_thread_guard_t, 418	IOStrError_t, 946
mha_fifo_thread_guard_t, 418	mha_lib_extension
sync, 418	mha_os.h, 949
mha_fifo_thread_platform_implementation_t	mha_libhandle_t
mha_fifo.h, 942	mha_os.h, 949
mha fifo thread platform t, 418	mha_library_paths
~mha_fifo_thread_platform_t, 419	mha_os.cpp, 947
aquire_mutex, 420	mha_os.h, 949
decrement, 420	mha loadlib
increment, 420	mha_os.h, 948
mha_fifo_thread_platform_t, 419	mha_loadlib_error
operator=, 421	 mha_os.h, 949
release_mutex, 420	mha_min_1
wait_for_decrease, 420	mha signal.hh, 971
wait_for_increase, 420	mha_msleep
mha_filter.cpp, 942	mha_os.h, 949
diff_coeffs, 943	mha_multisrc.cpp, 946
mha_filter.hh, 943	mha_multisrc.h, 947
mha_fragsize	mha_ntoh
MHAIOJackdb::io_jack_t, 540	mha_os.h, 950
mha_free	mha_os.cpp, 947
mha_ruby.cpp, 959	list_dir, 947
mha_ruby.cpp, 959	mha getenv. 947
IIIIG IIGGIID	IIIIa uciciiv. 347

mha_library_paths, 947	mha_profiling.c, 958
mha_os.h, 947	mha_platform_tic, 958
FMTsz, 949	mha_platform_toc, 958
list_dir, 949	mha_tic, 958
MHA_RESOLVE_CHECKED, 949	mha_toc, 958
MHA_RESOLVE, 949	mha_profiling.h, 958
mha_freelib, 948	mha_platform_tic, 959
mha_freelib_success, 948	mha_platform_tictoc_t, 959
mha_getenv, 949	mha_platform_toc, 959
mha_getlibfun, 948	mha real t
mha_getlibfun_checked, 949	Vector and matrix processing toolbox, 41
mha_hton, 949, 950	mha_round
mha_lib_extension, 949	mha_signal.hh, 971
mha_libhandle_t, 949	mha_rt_fifo_element_t
mha_library_paths, 949	~mha_rt_fifo_element_t, 422
mha loadlib, 948	abandonned, 422
mha_loadlib_error, 949	data, 422
mha_msleep, 949	mha_rt_fifo_element_t, 421
mha_ntoh, 950	next, 422
mha_parse	mha_rt_fifo_element_t< T >, 421
mha_ruby.cpp, 959	mha_rt_fifo_t
mha_parser.cpp, 950	~mha_rt_fifo_t, 423
MHAPLATFORM, 951	current, 425
	mha_rt_fifo_t, 423
parse_1_complex, 951	— — —
parse_1_float, 951	poll, 424
write_float, 951	poll_1, 424
mha_parser.hh, 951	push, 424
DEFAULT_RETSIZE, 955	remove_abandonned, 424
insert_member, 955	remove_all, 424
mha_platform_tic	root, 425
mha_profiling.c, 958	mha_rt_fifo_t< T >, 422
mha_profiling.h, 959	mha_ruby.cpp, 959
mha_platform_tictoc_t	Init_mha_ruby, 959
mha_profiling.h, 959	mha_alloc, 959
mha_platform_toc	mha_exit_request, 959
mha_profiling.c, 958	mha_free, 959
mha_profiling.h, 959	mha_parse, 959
mha_plugin.hh, 955	rb_f_t, 959
attribute, 957	mha_samplerate
declspec, 957	MHAIOJackdb::io_jack_t, 540
GITCOMMITHASH, 957	mha_set_user_error
HINSTANCE, 957	mha_errno.c, 936
MHAPLUGIN_DOCUMENTATION_PR \hookleftarrow	mha_errno.h, 937
EFIX, 957	mha_signal.cpp, 959
MHAPLUGIN_INIT_CALLBACKS_PRE↔	ASSERT_EQUAL_DIM_PTR, 962
FIX, 957	ASSERT_EQUAL_DIM, 962
MHAPLUGIN_INIT_CALLBACKS, 957	intensity, 962
MHAPLUGIN_PROC_CALLBACK_PR↔	MHA_ID_MATRIX, 962
EFIX, 957	MHA_ID_UINT_VECTOR, 962
MHAPLUGIN_PROC_CALLBACK, 957	safe_div, 962
WINAPI, 957	set_minabs, 962

mha_signal.hh, 962	mha_windowparser.h, 976
M_PI, 971	mhachain, 89
mha_min_1, 971	mhachain.cpp, 977
mha_round, 971	mhachain::chain_base_t, 456
operator<<, 971	algos, 458
operator>>, 971	b_prepared, 458
safe_div, 971	bprofiling, 458
set minabs, 971	cfin, 458
value, 971	cfout, 458
mha_signal_fft.h, 972	chain, 458
mha spec t, 425	chain base t, 457
buf, 426	old_algos, 458
channel_info, 426	patchbay, 458
num_channels, 426	prepare, 458
num_frames, 426	process, 457, 458
mha strerror	release, 458
_	•
mha_errno.c, 936	update, 458
mha_errno.h, 937	mhachain::mhachain_t, 459
mha_tablelookup.cpp, 972	mhachain_t, 459
mha_tablelookup.hh, 972	mhachain::plugs_t, 460
mha_tcp.cpp, 973	∼plugs_t, 461
ASYNC_CONNECT_STARTED, 974	ac, 461
closesocket, 974	algos, 461
host_port_to_sock_addr, 974	alloc_plugs, 461
INVALID_SOCKET, 974	b_prepared, 461
SOCKET_ERROR, 974	b_use_profiling, 462
SOCKET, 974	chain, 462
tcp_connect_to, 974	cleanup_plugs, 461
tcp_connect_to_with_timeout, 974	parser, 461
thread_start_func, 974	plugs_t, 461
mha_tcp.hh, 974	prepare, 461
Sleep, 976	prepared, 461
mha_test_struct_size	proc_cnt, 462
PluginLoader::mhapluginloader_t, 833	process, 461
mha tic	prof_algos, 462
mha_profiling.c, 958	prof_cfg, 462
mha_tictoc_t, 454	prof_init, 462
t, 454	prof load con, 462
tv1, 454	prof_prepare, 462
tv2, 454	prof_process, 462
tz, 454	prof_process_load, 462
mha toc	prof_process_tt, 462
mha_profiling.c, 958	prof_release, 462
mha toolbox.h, 976	prof_tt_con, 462
mha_tooloox.tt, 570 mha_wave_t, 455	profiling, 462
buf, 456	release, 461
channel_info, 456	tictoc, 462
num_channels, 456	update_proc_load, 461
num_frames, 456	mhachain_t
mha_windowparser.cpp, 976	mhachain::mhachain_t, 459
wnd_funs, 976	mhachannels

addsndfile::addsndfile_if_t, 171	MHAParser::mhapluginloader_t, 641
mhaconfig_compare	PluginLoader::mhapluginloader_t, 831
mha_generic_chain.cpp, 945	mhaserver_t, 715
PluginLoader, 124	\sim mhaserver_t, 717
mhaconfig_in	acceptor_started, 717
MHAPlugin::plugin_t, 687	ack_fail, 718
mhaconfig_mon_t	ack_ok, 718
MHAParser::mhaconfig_mon_t, 639	announce_port, 718
mhaconfig_out	logfile, 718
MHAPlugin::plugin_t, 687	logstring, 717
mhaconfig_t, 463	mhaserver_t, 716
channels, 464	pid_mon, 718
domain, 464	port, 718
fftlen, 464	received_group, 717
fragsize, 464	run, 717
srate, 464	set_announce_port, 717
wndlen, 464	tcpserver, 718
mhafft	mhasndfile.cpp, 999
hilbert_shifter_t, 325	validator_channels, 999
mhafw_lib.cpp, 977	validator_length, 999
mhafw_lib.h, 977	write_wave, 999
mhajack.cpp, 995	mhasndfile.h, 999
dummy_jack_proc_cb, 995	write_wave, 1000
jack_error_handler, 995	mhastrdomain
last_jack_err, 995	PluginLoader, 124
last_jack_err_msg, 995	min
make_friendly_number, 995	MHASignal::doublebuffer_t, 726
mhajack.h, 995	spec2wave.cpp, 1006
IO_ERROR_JACK, 997	Vector and matrix processing toolbox, 58
IO_ERROR_MHAJACKLIB, 997	minimum_fill_count
last_jack_err_msg, 997	mha_drifter_fifo_t, 404
MAX_USER_ERR, 997	minphase
MHAJACK_FW_STARTED, 997	MHAFilter::smoothspec_t, 527
MHAJACK_STARTING, 997	minphase_t
MHAJACK_STOPPED, 997	MHASignal::minphase_t, 746
mhamain	minw_
mha.cpp, 926	wavwriter_t, 899
mhamain.cpp, 998	minwrite
mhamain.cpp, 997	wavrec_t, 898
create_lock, 998	mix
GREETING_TEXT, 998	sine_cfg_t, 860
HELP_TEXT, 998	mixer
MAX_LINE_LENGTH, 998	matrixmixer::matmix_t, 373
mhamain, 998	mixw_ref
remove_lock, 998	hilbert_shifter_t, 325
mhaplug_cfg_t, 677	mixw_shift
\sim mhaplug_cfg_t, 677	hilbert_shifter_t, 325
mhaplug_cfg_t, 677	mode
mhapluginloader.cpp, 998	addsndfile::addsndfile_if_t, 171
mhapluginloader.h, 998	MHA_TCP::OS_EVENT_TYPE, 439
mhapluginloader_t	noise_t, 809

sine_t, 862	algo, 803
smoothgains_bridge::overlapadd_if_←	burn, 803
t, 864	interface_t, 803
modified	num_channels, 803
dc::dc vars t, 241	patchbay, 803
dc_simple::dc_if_t, 247	plug, 804
modulename	plug_sigs, 804
dynamiclib_t, 274	prepare, 803
MHAParser::c_ifc_parser_t, 608	process, 803
mon	release, 803
_	update_cfg, 803
acmon::ac_monitor_t, 145	multibandcompressor::plugin_signals_t, 804
mon_complex	apply_gains, 804
acmon::ac_monitor_t, 145	
mon_dump	gain, 805
MHAParser, 107	plug_level, 805
mon_g	plug_output, 805
dc_simple::dc_if_t, 247	plugin_signals_t, 804
dc_simple::dc_t, 249	update_levels, 804
mon_l	mute
dc_simple::dc_if_t, 247	MHAJack::port_t, 560
dc simple::dc t, 249	MHASignal::loop_wavefragment_t, 734
mon_mat	mutex
acmon::ac_monitor_t, 145	MHAPlugin_Split::posix_threads_t, 700
mon_mat_complex	mha_fifo_posix_threads_t, 413
acmon::ac_monitor_t, 145	mylogf
mon_t, 799	dc_afterburn.cpp, 914
_ ·	,
mon_t, 799	N
store, 799	lpc_config, 370
monitor variable, 4	n
monitor_t	MHAJack::client_avg_t, 549
MHAParser::monitor_t, 643	MHASignal::hilbert_fftw_t, 731
mpo	MHASignal::stat t, 761
DynComp::dc_afterburn_vars_t, 280	N ERRNO
mpo_inv	MHA TCP, 88
DynComp::dc_afterburn_rt_t, 276	n channels
msg	mha_audio_descriptor_t, 390
MHA_Error, 408	n_freqs
mu	mha audio descriptor t, 390
MHAFilter::adapt_filter_param_t, 473	n im
MHAFilter::adapt filter t, 476	MHASignal::fft_t, 730
mu_beta	n_no_update
adm_if_t, 186	nlms_t, 807
multibandcompressor, 124	_ :
multibandcompressor.cpp, 1000	prediction_error, 838
multibandcompressor::fftfb_plug_t, 800	n_no_update_
,	prediction_error_config, 840
bwv, 801	rt_nlms_t, 849
cfv, 801	n_pad1
efv, 801	overlapadd::overlapadd_t, 818
fftfb_plug_t, 801	n_pad2
insert, 801	overlapadd::overlapadd_t, 818
multibandcompressor::interface_t, 802	n_re

MHASignal::fft_t, 730	nlms_t, 807
n_samples	prediction_error, 837
mha_audio_descriptor_t, 390	name_e_
n_zero	rt_nlms_t, 849
overlapadd::overlapadd_t, 818	name_f
NORM_DEFAULT	lpc_bl_predictor, 362
nlms_wave.cpp, 1001	lpc_bl_predictor_config, 363
NORM_NONE	lpc_burglattice, 366
nlms_wave.cpp, 1001	lpc_burglattice_config, 368
NORM_SUM	nlms_t, 807
nlms_wave.cpp, 1001	prediction_error, 837
NORMALIZATION_TYPES	name_kappa
nlms_wave.cpp, 1001	lpc_bl_predictor, 362
NUM_ENTR_LTASS	lpc_burglattice, 366
speechnoise.cpp, 1007	name_km
NUM_ENTR_MHAORIG	lpc_bl_predictor_config, 363
speechnoise.cpp, 1007	name_lpc
NUM_ENTR_OLNOISE	prediction_error, 837
speechnoise.cpp, 1007	name_lpc_
name	prediction_error_config, 840
ac2wave_if_t, 137	name_lpc_b
ac2wave_t, 139	lpc_bl_predictor, 362
acmon::ac_monitor_t, 145	name_lpc_f
acsave::save_var_t, 160	lpc_bl_predictor, 362
MHA_AC::ac2matrix_helper_t, 375	name_u
MHA_AC::spectrum_t, 386	nlms_t, 807
MHA_AC::waveform_t, 389	name_u_
MHAIOPortAudio::device_info_t, 543	rt_nlms_t, 849
MHAJack::client_avg_t, 549	namelen
MHAJack::client_noncont_t, 552	acsave::mat4head_t, 158
MHAMultiSrc::channel_t, 567	names
MHAParser::entry_t, 614	MHAOvlFilter::scale_var_t, 591
noisePowProposedScale::interface_t, 811	nangle
plugindescription_t, 824	acSteer_config, 164
rmslevel_if_t, 842	steerbf_config, 879
shadowfilter_end::cfg_t, 857	naudiochannels
name_	dc::dc_t, 239
AuditoryProfile::parser_t::fmap_t, 207	nbands
name_b	coherence::cohflt_t, 222
lpc_bl_predictor, 362	combc_t, 227
lpc_bl_predictor_config, 364	dc::dc_t, 239
lpc_burglattice, 366	dc_simple::dc_t, 249
lpc_burglattice_config, 368	dc_simple::level_smoother_t, 254
name_conAC	DynComp::gaintable_t, 284
acConcat_wave, 142	fftfilterbank::fftfb_interface_t, 308
name_d	MHAFilter::thirdoctave_analyzer_t, 528
nlms_t, 807	MHAOvIFilter::fspacing_t, 584
name_d_	nbits
prediction_error_config, 840	calibrator_variables_t, 216
rt_nlms_t, 849	nch
name_e	shadowfilter_begin::cfg_t, 854

shadowfilter_begin::shadowfilter_begin← _t, 856	MHAPlugin::cfg_chain_t, 678 mha_rt_fifo_element_t, 422
spec_fader_t, 874	next_except_str
nch_out	mha_errno.c, 936
shadowfilter_end::cfg_t, 857	next_read_frame_index
nchan	MHASignal::ringbuffer_t, 751
acSteer_config, 164	next_write_frame_index
steerbf config, 879	
timoConfig, 885	MHASignal::ringbuffer_t, 752 nfft
nchannels	
	MHASignal::fft_t, 730
DynComp::gaintable_t, 284	overlapadd::overlapadd_if_t, 815
fftfilterbank::fftfb_interface_t, 308	shadowfilter_end::cfg_t, 857
MHAFilter::adapt_filter_state_t, 474	spec2wave_t, 873
MHAFilter::adapt_filter_t, 476	wave2spec_if_t, 893
MHAFilter::iir_filter_t, 501	nfft_
MHAFilter::smoothspec_t, 527	MHAOvlFilter::fspacing_t, 584
MHAFilter::thirdoctave_analyzer_t, 528	nframes
nchannels_file_in	acsave::save_var_t, 160
io_file_t, 331	nfreq
nchannels_in	acSteer_config, 164
io_file_t, 331	steerbf_config, 879
io_parser_t, 338	timoConfig, 885
MHAFilter::partitioned_convolution_t, 515	nlms_t, 805
MHAIOPortAudio::io_portaudio_t, 546	algo, <mark>807</mark>
MHAJack::client_t, 557	c, 807
MHAPlugin_Resampling::resampling_t,	estimtype, 807
691	lambda_smoothing_power, 807
nchannels_out	n_no_update, 807
fw_t, 317	name_d, 807
io_file_t, 331	name_e, 807
io_parser_t, 338	name_f, 807
MHAFilter::partitioned_convolution_t, 515	name_u, 807
MHAIOPortAudio::io_portaudio_t, 546	nlms_t, 806
MHAJack::client_t, 557	normtype, 807
MHAPlugin Resampling::resampling t,	ntaps, 807
691	patchbay, 807
ndim	prepare, 806
acsave::save_var_t, 160	process, 807
needs write	release, 806
MHA TCP::Connection, 435	rho, 807
neigh	update, 807
acPooling wave config, 153	nlms_wave.cpp, 1000
neighbourhood	ESTIM CUR, 1001
acPooling_wave, 151	ESTIM PREV, 1001
nelements	ESTIMATION TYPES, 1001
MHASignal::matrix_t, 745	make_friendly_number_by_limiting, 100
nested lock	NORM DEFAULT, 1001
MHAParser::base_t, 600	NORM NONE, 1001
newgains	NORM_SUM, 1001
fader_if_t, 301	NORMALIZATION_TYPES, 1001
next	nm

lpc_burglattice_config, 368	logGLRFact, 813
no_iter	noisePow, 813
prediction_error_config, 840	noisePowProposed, 812
rt_nlms_t, 849	noisyPer, 813
noise.cpp, 1001	PH1Debug, 813
noise_t, 808	PH1mean, 813
frozennoise_length, 809	priorFact, 813
lev, 809	process, 812
mode, 809	snrPost1Debug, 813
noise t, 809	xiOpt, 813
patchbay, 809	noisyPer
prepare, 809	noisePowProposedScale::noisePow↔
process, 809	Proposed, 813
•	•
update_cfg, 809	non_empty_partitions
noise_type_t	MHAFilter::transfer_function_t, 530
speechnoise_t, 875	MHAFilter::transfer_matrix_t, 532
noisePow	nondefault_labels
noisePowProposedScale::noisePow↔	altplugs_t, 198
Proposed, 813	norm
timoConfig, 886	lpc, 359
noisePow_name	lpc_config, 369
timo_params, 883	normalize
timoSmooth, 890	Complex arithmetics in the openMHA, 68
noisePowProposed	MHAOvlFilter::fftfb_vars_t, 579
noisePowProposedScale::noisePow←	normtype
Proposed, 812	nlms_t, 807
noisePowProposedScale, 124	not_in_use
noisePowProposedScale.cpp, 1001	MHAPlugin::cfg_chain_t, 678
POWSPEC_FACTOR, 1002	not_zero
noisePowProposedScale::interface_t, 810	dc_simple, 82
alphaPH1mean, 811	notify
alphaPSD, 811	MHAParser::base_t, 599
interface_t, 811	notify_release
name, 811	io_tcp_t, 355
patchbay, 811	notify_start
prepare, 811	io_tcp_t, 355
process, 811	notify_stop
q, 811	io_tcp_t, 355
•	
update_cfg, 811	now_index
xiOptDb, 811	MHAFilter::polyphase_resampling_t, 522
noisePowProposedScale::noisePowProposed,	npad1
812	spec2wave_t, 872
alphaPH1mean_, 813	wave2spec_t, 895
alphaPSD_, 813	npad2
estimateDebug, 813	spec2wave_t, 873
frameno, 813	wave2spec_t, 895
GLRDebug, 813	nrefmic
GLRexp, 813	acSteer, 163
inputPow, 813	acSteer_config, 164
inputSpec, 813	nrep
insert, 812	MHAJack::client_avg_t, 549
	-

nsteerchan	MHAIOPortAudio::device_info_t, 543
acSteer, 163	numSamples_AC
acSteer_config, 164	acConcat_wave_config, 143
ntaps	numbytes
MHAFilter::adapt_filter_state_t, 474	MHASignal::matrix_t, 744
MHAFilter::adapt_filter_t, 476	MHASignal::uint_vector_t, 766
nlms_t, 807	numchannels
prediction_error, 837	addsndfile::addsndfile_if_t, 171
prediction_error_config, 839	numsamples
rt_nlms_t, 848	acPooling_wave, 151
ntoh	acTransform_wave, 167
io_tcp_sound_t, 350	nupsample
ntracks	doasym_feature_extraction, 267
shadowfilter_begin::cfg_t, 854	nvars
_ • •	acsave::cfg_t, 158
shadowfilter_begin::shadowfilter_begin ←	nwnd
_t, 856	overlapadd::overlapadd if t, 815
shadowfilter_end::cfg_t, 857	wave2spec_if_t, 893
null_data	wave2spec_t, 895
mha_drifter_fifo_t, 405	nwndshift
num_AC	spec2wave_t, 873
acConcat_wave, 142	wave2spec_t, 895
num_adms	nyquist_ratio
adm_rtconfig_t, 188	MHAPlugin_Resampling::resampling_if
num_brackets	_t, 689
MHAParser::StrCnv, 109	_t, 003
num_channels	o1_ar_filter_t
calibrator_variables_t, 216	MHAFilter::o1_ar_filter_t, 505
DynComp::gaintable_t, 284	o1_lp_coeffs
MHAFilter::blockprocessing_polyphase←	MHAFilter, 92
_resampling_t, 478	o1flt_lowpass_t
mha_spec_t, 426	MHAFilter::o1flt_lowpass_t, 509
mha_wave_t, 456	o1flt maxtrack t
multibandcompressor::interface_t, 803	MHAFilter::o1flt_maxtrack_t, 511
num_entries	o1flt mintrack t
ac2lsl::save_var_t< mha_complex_t >,	MHAFilter::01flt_mintrack_t, 513
135	OVERLAP_FACTOR
comm_var_t, 228	timoconfig.cpp, 1011
num F	observe
DynComp::gaintable_t, 284	MHA TCP::Event Watcher, 438
num_frames	/
mha_spec_t, 426	observed_by
mha_wave_t, 456	MHA_TCP::Wakeup_Event, 453
num inchannels	observers
_	MHA_TCP::Wakeup_Event, 454
io_tcp_sound_t, 351	od
num_L	MHAFilter::adapt_filter_state_t, 474
DynComp::gaintable_t, 284	offset
num_outchannels	acTransform_wave_config, 168
io_tcp_sound_t, 352	ola1
num_xruns	overlapadd::overlapadd_t, 817
MHAJack::client_t, 557	ola2
numDevices	overlapadd::overlapadd_t, 817

ola_powspec_scale	MHAParser, 106
timoConfig, 885	operator!=
old_algos	Complex arithmetics in the openMHA, 67
mhachain::chain_base_t, 458	operator<
olnoise	Complex arithmetics in the openMHA, 68
speechnoise_t, 875	operator<<
on_model_param_valuechanged	mha_signal.hh, 971
timoSmooth, 889	operator>>
on_prereadaccess	mha_signal.hh, 971
example3_t, 292	operator*
example4_t, 296	Complex arithmetics in the openMHA, 65,
on_scale_ch_readaccess	66
example3_t, 292	operator*=
example4_t, 296	Complex arithmetics in the openMHA, 65
on_scale_ch_valuechanged	Vector and matrix processing toolbox, 53,
example3_t, 292	54
example4 t, 296	operator^=
on_scale_ch_writeaccess	Vector and matrix processing toolbox, 55
example3_t, 292	operator()
example4_t, 296	dc_simple::dc_t::line_t, 250
op	hanning_ramps_t, 323
MHAParser::expression_t, 615	MHAEvents::emitter_t, 470
op_query	MHAFilter::gamma_flt_t, 495, 496
MHAParser::base_t, 596	MHAFilter::iir_ord1_real_t, 503
MHAParser::c_ifc_parser_t, 607	MHAFilter::01_ar_filter_t, 506, 507
MHAParser::monitor_t, 643	MHASignal::hilbert_t, 732
MHAParser::parser_t, 647	MHASignal::matrix_t, 742-744
op_setval	MHASignal::minphase_t, 746
MHAParser::base_t, 596	MHASignal::quantizer_t, 748
MHAParser::bool_t, 605	MHASignal::spectrum_t, 758
MHAParser::c_ifc_parser_t, 607	MHASignal::waveform_t, 770, 771
MHAParser::complex_t, 613	MHAWindow::base t, 791
MHAParser::float_t, 619	operator+
MHAParser::int_t, 624	Complex arithmetics in the openMHA, 64
MHAParser::kw_t, 629	operator+=
MHAParser::mcomplex_t, 633	Complex arithmetics in the openMHA, 64
MHAParser::mfloat_t, 637	Vector and matrix processing toolbox, 53,
MHAParser::parser t, 647	54
MHAParser::string_t, 655	operator-
MHAParser::variable t, 657	Complex arithmetics in the openMHA, 64,
MHAParser::vcomplex_t, 661	65, 67
MHAParser::vfloat_t, 665	operator-=
MHAParser::vint_t, 669	Complex arithmetics in the openMHA, 64
MHAParser::vstring_t, 673	Vector and matrix processing toolbox, 53
op_subparse	operator/
MHAParser::base_t, 596	Complex arithmetics in the openMHA, 66,
MHAParser::c_ifc_parser_t, 607	67
MHAParser::parser_t, 647	operator/=
opact_map_t	Complex arithmetics in the openMHA, 66
MHAParser, 106	Vector and matrix processing toolbox, 54
opact_t	operator=

MHA_AC::acspace2matrix_t, 379	outer2inner_resampling
MHA_Error, 407	MHAPlugin_Resampling::resampling_t,
MHAPlugin_Split::domain_handler_t, 693	691
MHAPlugin_Split::splitted_part_t, 709	outer_ac
MHAPlugin_Split::thread_platform_t, 713	analysepath_t, 200
MHASignal::matrix_t, 740	outer_ac_copy
MHASignal::uint_vector_t, 765	analysepath_t, 200
MHASignal::waveform_t, 770	outer_error
mha_fifo_t, 416	mha_dblbuf_t, 399
mha_fifo_thread_platform_t, 421	outer_fragsize
operator==	MHAPlugin_Resampling::resampling_t,
Complex arithmetics in the openMHA, 67	690
MHASignal::uint_vector_t, 765	outer_out
operator[]	MHASignal::doublebuffer_t, 727
MHA_AC::acspace2matrix_t, 379	outer_process
MHASignal::spectrum_t, 758	MHASignal::doublebuffer_t, 726
MHASignal::uint_vector_t, 766	outer_size
MHASignal::waveform_t, 770	mha_dblbuf_t, 398
operators	outer_srate
MHAParser::base_t, 600	MHAPlugin_Resampling::resampling_t,
oplist	691
MHAParser::base_t, 599	output
order	io_parser_t, <mark>338</mark>
lpc_config, 369	MHAJack::port_t, 559
origname	mha_dblbuf_t, 397
PluginLoader::config_file_splitter_t, 826	output_cfg
os_event	MHAPlugin::plugin_t, 687
MHA_TCP::Wakeup_Event, 454	output_cfg_
os_event_valid	MHAPlugin::plugin_t, 687
MHA_TCP::Wakeup_Event, 454	output_channels
out	mha_dblbuf_t, 398
adm_if_t, 186	output_domain
delaysum::delaysum_t, 260	PluginLoader::mhapluginloader_t, 832
out_buf	output_fifo
overlapadd::overlapadd_t, 818	mha_dblbuf_t, 398
spec2wave_t, 873	output_partitions
out_chunk	MHAFilter::partitioned_convolution_t, 515
MHAFilter::thirdoctave_analyzer_t, 529	output_portnames
out_chunk_im	MHAJack::client_t, 558
MHAFilter::thirdoctave_analyzer_t, 529	output_sample_format
out_spec	io_file_t, 331
shadowfilter_begin::cfg_t, 854	output_signal
shadowfilter_end::cfg_t, 857	MHAPlugin_Resampling::resampling_t,
outSpec	691
steerbf_config, 879	output_signal_spec
outbuf	MHAFilter::partitioned_convolution_t, 516
MHA_TCP::Connection, 436	output_signal_wave
outch	MHAFilter::partitioned_convolution_t, 516
MHAJack::client_t, 558	outputchannels
outchannels	MHAFilter::fftfilterbank_t, 489
combc_if_t, 226	overlap_save_filterbank_analytic_t

MHAOvlFilter::overlap_save_filterbank_	MHAOvIFilter::fftfb_vars_t, 578
analytic_t, 586	Oy
overlap_save_filterbank_t	MHAFilter::adapt_filter_state_t, 474
MHAOvlFilter::overlap_save_filterbank_t,	0
588	p acPooling wave config, 153
overlapadd, 124	doasym_classification_config, 264
overlapadd.cpp, 1002	pluginbrowser_t, 824
overlapadd::overlapadd_if_t, 814	p1
~overlapadd_if_t, 815	MHASignal::hilbert_fftw_t, 731
algo, 816	p2
cf_in, 816	MHASignal::hilbert_fftw_t, 731
cf_out, 816	P_Sum
nfft, 815	rt_nlms_t, 849
nwnd, 815	p_max
overlapadd_if_t, 815	acPooling wave config. 153
patchbay, 815	doasym_classification_config, 264
plugloader, 816	p_name
postscale, 816	acPooling_wave, 151
prepare, 815	doasym_classification, 263
prescale, 816	p_parser
process, 815	acmon::ac_monitor_t, 146
release, 815	PATCH VAR
update, 815	acConcat_wave.cpp, 904
window, 816	acPooling_wave.cpp, 905
wndexp, 816	acSteer.cpp, 906
wndpos, 816	acTransform_wave.cpp, 907
zerowindow, 816	doasym_classification.cpp, 916
overlapadd::overlapadd_t, 816	doasym_feature_extraction.cpp, 916
\sim overlapadd_t, 817	lpc.cpp, 924
calc_out, 818	lpc_bl_predictor.cpp, 925
fft, 817	lpc_burg-lattice.cpp, 925
n_pad1, 818	prediction_error.cpp, 1003
n_pad2, 818	steerbf.cpp, 1010
n_zero, 818	timoSmooth.cpp, 1012
ola1, 817	PH1Debug
ola2, 817	noisePowProposedScale::noisePow⇔
out_buf, 818	Proposed, 813
overlapadd_t, 817	PH1mean
postwnd, 817	noisePowProposedScale::noisePow⊷
prewnd, 817	Proposed, 813
spec_in, 818	POWSPEC FACTOR
wave_in1, 817	noisePowProposedScale.cpp, 1002
wave_out1, 818	timoconfig.cpp, 1011
write buf, 818	PREPARED
overlapadd_if_t	MHA_TCP::Thread, 447
overlapadd::overlapadd_if_t, 815	pa22dbspl
smoothgains_bridge::overlapadd_if_	Vector and matrix processing toolbox, 43
t, 863	pa2dbspl
overlapadd_t	Vector and matrix processing toolbox, 42
overlapadd::overlapadd_t, 817	params
ovltype	timoConfig, 885
· ·	→ ·

parent	calibrator_t, 215
MHAParser::base_t, 600	coherence::cohflt_if_t, 220
parent_	db_if_t, 233
MHAParser::mhapluginloader_t, 642	dc::dc_if_t, 236
parse	dc::wideband_inhib_vars_t, 245
altplugs_t, 197	dc_simple::dc_if_t, 247
io_tcp_t, 355	delay::interface_t, 256
MHAParser::base_t, 595, 596	delaysum::delaysum_if_t, 259
MHAPlugin_Split::splitted_part_t, 709	doasvm_classification, 263
PluginLoader::fourway_processor_t, 829	doasvm_feature_extraction, 267
PluginLoader::mhapluginloader_t, 831	DynComp::dc_afterburn_t, 278
parse_1_complex	example3_t, 293
mha_parser.cpp, 951	example4_t, 297
parse_1_float	example6_t, 299
mha_parser.cpp, 951	fader_if_t, 301
parser	fader_wave::fader_wave_if_t, 303
io_tcp_t, 355	fftfilterbank::fftfb_interface_t, 308
mhachain::plugs_t, 461	frequency_translator_t, 312
parser_int_dyn, 819	fw_t, 318
parser_int_dyn, 819	gain::gain_if_t, 321
set_max_angle_ind, 820	io_parser_t, <mark>338</mark>
parser_plugs	lpc, 359
altplugs_t, 198	lpc_bl_predictor, 362
parser_t	lpc_burglattice, 366
AuditoryProfile::parser_t, 205	MHAIOJack::io_jack_t, 536
MHAParser::parser_t, 646	MHAIOJackdb::io_jack_t, 541
parserFriendlyName	MHAIOPortAudio::io_portaudio_t, 546
MHAIOPortAudio, 95	MHAPlugin_Split::split_t, 705
parsername	matrixmixer::matmix_t, 373
latex_doc_t, 356	mhachain::chain_base_t, 458
parserstate	multibandcompressor::interface_t, 803
fw_t, 317	nlms_t, 807
partitioned_convolution_t	noise_t, 809
MHAFilter::partitioned_convolution_t, 514	noisePowProposedScale::interface_t, 811
partitions	overlapadd::overlapadd_if_t, 815
MHAFilter::transfer_function_t, 530	plugin_interface_t, 822
MHAFilter::transfer_matrix_t, 532	prediction_error, 838
patchbay	route::interface_t, 845
ac2lsl::ac2lsl_t, 128	sine_t, 862
ac2wave_if_t, 137	smoothgains_bridge::overlapadd_if_
acConcat_wave, 142	t, 864
acPooling_wave, 151	softclip_t, 867
acSteer, 163	spec2wave_if_t, 871
acTransform_wave, 167	steerbf, 878
acmon::acmon_t, 148	timoSmooth, 890
acsave::acsave_t, 156	wave2spec_if_t, 893
addsndfile::addsndfile_if_t, 171	wavrec_t, 898
adm_if_t, 186	windowselector_t, 902
altplugs_t, 198	path
analysispath_if_t, 202	addsndfile::addsndfile_if_t, 171
AuditoryProfile::parser_t::fmap_t, 207	peak

MHASignal::loop_wavefragment_t, 734 rmslevel_t, 843	pitch_set_last timoConfig, 886
peak_db	pitch_set_last_AC
rmslevel_t, 843	timo_AC, 881
peaklevel	plan_spec2analytic
calibrator_variables_t, 216	hilbert_shifter_t, 325
MHASignal::async_rmslevel_t, 720	plateau
mha channel info t, 392	MHAOvlFilter::fftfb_vars_t, 578
peer_addr	playback
MHA_TCP::Connection, 436	MHASignal::loop_wavefragment_t, 735,
peer_address	736
io_tcp_parser_t, 347	playback_channels
peer_port	MHASignal::loop_wavefragment_t, 736
. —	playback_mode_t
io_tcp_parser_t, 348 period	MHASignal::loop_wavefragment_t, 734
•	
droptect_t, 271	plug
pfragmentsize	analysispath_if_t, 202
fw_vars_t, 319	MHAParser::mhapluginloader_t, 642
phase	MHAPlugin_Split::splitted_part_t, 710
cpuload_t, 231	multibandcompressor::interface_t, 804
MHASignal::minphase_t, 747	plug_level
phase_correction	multibandcompressor::plugin_signals_t,
MHAFilter::gamma_flt_t, 496	805
phase_div_2pi	plug_output
sine_t, 862	multibandcompressor::plugin_signals_t,
phase_gains	805
MHASignal::subsample_delay_t, 763	plug_sigs
phase_increment_div_2pi	multibandcompressor::interface_t, 804
sine_cfg_t, 860	plug_t, 820
phasemode (10 mars a later to 210)	~plug_t, 820
frequency_translator_t, 312	get_ac, 821
phasemodel	get_handle, 821
MHAOvIFilter::overlap_save_filterbank_	get_process_spec, 821
t::vars_t, 589	get_process_wave, 821
phi	plug_t, 820
hilbert_shifter_t, 325	plugin_categories
PI	PluginLoader::mhapluginloader_t, 834
ADM, 80	plugin_documentation
hann.cpp, 922	PluginLoader::mhapluginloader_t, 834
pid_mon	plugin_extension
mhaserver_t, 718	pluginbrowser_t, 823
pinchannels	plugin_interface_t, 821
fw_vars_t, 319	factor, 822
pink	patchbay, 822
speechnoise_t, 875	plugin_interface_t, 822
pipe	prepare, 822
MHA_TCP::Async_Notify, 428	process, 822
pitch_set_first	scale_ch, 822
timoConfig, 886	update_cfg, 822
pitch_set_first_AC	plugin_macro
timo_AC, 881	latex_doc_t, 357

plugin_paths	MHARelease_cb, 833
fw_t, 317	MHASet_cb, 834
plugin_signals_t	MHAStrError_cb, 834
multibandcompressor::plugin_signals_t,	mha_test_struct_size, 833
804	mhapluginloader_t, 831
plugin_t	output_domain, 832
MHAPlugin::plugin_t, 685	parse, 831
PluginLoader, 124	plugin_categories, 834
mhaconfig_compare, 124	plugin_documentation, 834
mhastrdomain, 124	prepare, 832
PluginLoader::config_file_splitter_t, 825	process, 832
config_file_splitter_t, 825	release, 832
configfile, 826	resolve_and_init, 833
configname, 826	test_error, 833
get_configfile, 826	test version, 833
get_configname, 825	pluginbrowser.cpp, 1002
get_libname, 826	pluginbrowser.h, 1002
get_origname, 826	pluginbrowser_t, 823
libname, 826	add_plugin, 823
origname, 826	add_plugins, 823
PluginLoader::fourway_processor_t, 826	clear_plugins, 823
~fourway_processor_t, 827	get_paths, 823
parse, 829	get_plugins, 823
prepare, 829	library_paths, 824
process, 827, 828	p, 824
release, 829	plugin_extension, 823
PluginLoader::mhapluginloader_t, 829	pluginbrowser_t, 823
~mhapluginloader_t, 831	plugins, 824
ac, 833	scan_plugin, 823
b_check_version, 834	scan_plugins, 823
b_is_prepared, 834	plugindescription_t, 824
cf_input, 834	categories, 824
cf_output, 834	documentation, 824
get_categories, 833	fullname, 824
get_documentation, 833	name, 824
getfullname, 832	queries, 824
has_parser, 832	query_cmds, 824
has_process, 832	spec2spec, 824
input_domain, 832	spec2spec, 624
is_prepared, 833	wave2spec, 824
lib_data, 833	wave2spee, 824
lib err, 833	pluginloader_t, 834
lib_handle, 833	~pluginloader_t, 835
MHADestroy_cb, 833	. •
	pluginloader_t, 835
MHAGetVersion_cb, 833	plugins
MHAInit_cb, 833	fw_t, 317
MHAPres energence ch 833	pluginbrowser_t, 824
MHAProc_spec2spec_cb, 833	plugloader
MHAProc_spec2wave_cb, 834	bbcalib_interface_t, 211
MHAProc_wave2spec_cb, 833	db_if_t, 233
MHAProc_wave2wave_cb, 833	db_t, 234

MHAPlugin_Resampling::resampling_if←	portnames_in
_t, 689	MHAIOJack::io_jack_t, 536
MHAPlugin_Resampling::resampling_t,	MHAIOJackdb::io_jack_t, 540
691	portnames_out
overlapadd::overlapadd_if_t, 816	MHAIOJack::io_jack_t, 536
smoothgains_bridge::overlapadd_if_←	MHAIOJackdb::io_jack_t, 540
t, 864	ports_in_all
plugname	MHAIOJack::io_jack_t, 536
latex_doc_t, 357	MHAIOJackdb::io_jack_t, 541
MHAParser::mhapluginloader_t, 642	ports_in_physical
plugname_name_	MHAIOJack::io_jack_t, 536
MHAParser::mhapluginloader_t, 642	MHAIOJackdb::io_jack_t, 541
plugs	ports_out_all
altplugs_t, 198	MHAIOJack::io_jack_t, 536
plugs_t	MHAIOJackdb::io_jack_t, 541
mhachain::plugs_t, 461	ports_out_physical
pmode	MHAIOJack::io_jack_t, 536
calibrator_runtime_layer_t, 213	MHAIOJackdb::io_jack_t, 541
poll	ports_parser
mha_rt_fifo_t, 424	MHAIOJack::io_jack_t, 536
poll_1	MHAIOJackdb::io_jack_t, 541
mha_rt_fifo_t, 424	pos
poll_config	addsndfile::level_adapt_t, 173
MHAPlugin::config_t, 681	cfg_t, 218
polyphase_resampling_t	fader_wave::level_adapt_t, 305
MHAFilter::polyphase_resampling_t, 520	MHAJack::client_avg_t, 549
pool	MHAJack::client_noncont_t, 551
acPooling_wave_config, 153	MHASignal::async_rmslevel_t, 720
pool_name	MHASignal::delay_spec_t, 721
acPooling_wave, 151	MHASignal::delay_t, 723
pooling_ind	MHASignal::delay_wave_t, 724
acPooling_wave_config, 153	MHASignal::loop_wavefragment_t, 736
pooling_option	posix_threads_t
acPooling_wave_config, 153	MHAPlugin_Split::posix_threads_t, 699
pooling size	posixthreads
acPooling_wave_config, 153	split.cpp, 1010
pooling_type	postscale
acPooling_wave, 151	overlapadd::overlapadd_if_t, 816
pooling_wade, 131	
acPooling wave, 151	postwindow spec2wave_t, 873
9	· —
port MHA TCB::Sorver 440	postwnd
MHA_TCP::Server, 442	overlapadd::overlapadd_t, 817
MHAJack::port_t, 561	powSpec
mhaserver_t, 718	timoConfig, 886
port_t	power AMIAO: was because forms A 775
MHAJack::port_t, 559, 560	MHASignal::waveform_t, 775
portaudio_callback	powersum
MHAIOPortAudio.cpp, 990, 991	dc::dc_t, 238
MHAIOPortAudio::io_portaudio_t, 546	dc::dc_vars_t, 240
portaudio_stream	powspec
MHAIOPortAudio::io_portaudio_t, 546	MHASignal::waveform_t, 776

pred_err_delay	s_Y_delay, 840
prediction_error, 838	s_Y_delayflt, 840
prediction_error, 835	s_E, 840
~prediction_error, 836	s_U, 840
c, 837	s_W, 840
delay_d, 838	smpl, 841
delay_w, 838	UPrew, 841
gains, 837	UPrewW, 841
lpc_order, 838	UbufferPrew, 840
n_no_update, 838	v_G, 840
name_e, 837	YPrew, 841
name_f, 837	prefix
name_lpc, 837	wavrec_t, 898
ntaps, 837	prefix_
patchbay, 838	MHAParser::mhapluginloader_t, 642
pred_err_delay, 838	prefix_names_AC
prediction_error, 836	acConcat wave, 142
prediction_error, 800 prepare, 837	prepare
process, 837	ac2lsl::ac2lsl_t, 127
release, 837	ac2wave if t, 137
rho, 837	acConcat_wave, 140
update_cfg, 837	acPooling_wave, 150
prediction_error.cpp, 1002	acSteer, 162
INSERT_PATCH, 1003	acTransform_wave, 166
make_friendly_number_by_limiting, 1003	acmon::acmon_t, 147
PATCH_VAR, 1003	acsave::acsave_t, 155
prediction_error.h, 1003	addsndfile::addsndfile_if_t, 170
prediction_error_config, 838	adm_if_t, 185
~prediction_error_config, 839	altplugs_t, 196
ac, 839	analysispath_if_t, 202
channels, 840	bbcalib_interface_t, 211
EPrew, 841	calibrator_t, 214
F, 840	coherence::cohflt_if_t, 220
F_Uflt, 840	combc_if_t, 226
frames, 839	cpuload_t, 230
insert, 839	db_if_t, 232
iter, 840	dc::dc_if_t, 236
n_no_update_, <mark>840</mark>	dc_simple::dc_if_t, 246
name_d_, <mark>840</mark>	delay::interface_t, 256
name_lpc_, <mark>840</mark>	delaysum::delaysum_if_t, 258
no_iter, 840	doasvm_classification, 262
ntaps, 839	doasvm_feature_extraction, 266
prediction_error_config, 839	droptect_t, 270
process, 839	ds_t, 273
Pu, 840	example1_t, 286
s_E_pred_err_delay, 840	example2_t, 289
s_LPC, 840	example3_t, 292
s_U_delay, 840	example4_t, 296
s_U_delayflt, 840	example6_t, 299
s_Usmpl, 841	fader_if_t, 301
s_Wflt, 840	fader_wave::fader_wave_if_t, 303
	

fftfilterbank::fftfb_interface_t, 306	wavrec_t, 897
frequency_translator_t, 312	prepare_
fw_t, 315	iirfilter_t, 328
gain::gain_if_t, 321	MHAPlugin::plugin_t, 686
identity_t, 327	MHAPlugin_Split::split_t, 704
io_file_t, 330	prepare_impl
io_lib_t, 334	MHAJack::client_t, 556
io_parser_t, 337	prepare_vars
io_tcp_sound_t, 350	fw_t, 317
io_tcp_t, 354	prepared
lpc, 358	ac2wave_if_t, 137
lpc_bl_predictor, 361	altplugs_t, 198
lpc_burglattice, 366	calibrator_t, 215
MHAIOJack::io_jack_t, 534	dc_simple::dc_if_t, 247
MHAIOJackdb::io_jack_t, 539	example3_t, 293
MHAJack::client_t, 554, 555	example4_t, 297
MHAParser::mhapluginloader_t, 641	fader_wave::fader_wave_if_t, 303
MHAPlugin::plugin_t, 685	fftfilterbank::fftfb_interface_t, 308
MHAPlugin_Resampling::resampling_if←	mhachain::plugs_t, 461
_t, 689	route::interface t, 845
MHAPlugin_Split::splitted_part_t, 709	timoSmooth, 890
MHATableLookup::linear_table_t, 782	prereadaccess
matrixmixer::matmix_t, 373	MHAParser::base_t, 600
mhachain::chain_base_t, 458	prescale
mhachain::plugs_t, 461	overlapadd::overlapadd_if_t, 816
multibandcompressor::interface_t, 803	preset
nlms_t, 806	dc::dc_vars_t, 241
noise_t, 809	dc_simple::dc_if_t, 247
noisePowProposedScale::interface_t, 811	prewnd
overlapadd::overlapadd_if_t, 815	overlapadd::overlapadd_t, 817
plugin_interface_t, 822	print_ac
PluginLoader::fourway_processor_t, 829	analysemhaplugin.cpp, 910
PluginLoader::mhapluginloader_t, 832	prior_q
prediction_error, 837	timo_params, 883
rmslevel_if_t, 842	timoSmooth, 890
route::interface_t, 845	priorFact
save_spec_t, 851	noisePowProposedScale::noisePow←
save_wave_t, 853	Proposed, 813
shadowfilter_begin::shadowfilter_begin	timoConfig, 886
_t, 856	priority
_t, ooo shadowfilter end::shadowfilter end ←	analysepath_t, 200
t, 859	analysispath_if_t, 202
sine_t, 861	MHAPlugin_Split::posix_threads_t, 701
smoothgains_bridge::overlapadd_if_←	proc
t, 863	MHAJack::client_avg_t, 549
softclip_t, 867	MHAJack::client_noncont_t, 551
spec2wave_if_t, 871	— — — ·
steerbf, 877	proc_1 smoothgains_bridge::smoothspec_←
timoSmooth, 889	wrap_t, 865
us_t, 891	proc_2
wave2spec_if_t, 893	. —
wave25pec_11_1, 030	smoothgains_bridge::smoothspec_←

wrap_t, 865	analysispath_if_t, 202
proc_cnt	bbcalib_interface_t, 211
mhachain::plugs_t, 462	calibrator_runtime_layer_t, 212
proc_err	calibrator_t, 214
io_tcp_fwcb_t, 342	cfg_t, 218
proc_error	coherence::cohflt_if_t, 220
fw_t, 318	coherence::cohflt_t, 222
proc_error_string	combc_if_t, 226
fw_t, 318	combc_t, 227
proc_event	cpuload_t, 230
io_file_t, 331	db_if_t, 232
io_parser_t, 338	dc::dc_if_t, 236
io_tcp_fwcb_t, 341	dc::dc_t, 238
MHAIOJackdb::io_jack_t, 540	dc_simple::dc_if_t, 246, 247
MHAIOPortAudio::io_portaudio_t, 546	dc_simple::dc_t, 249
MHAJack::client_t, 557	dc_simple::level_smoother_t, 254
proc_handle	delay::interface_t, 256
io_file_t, 331	delaysum::delaysum_if_t, 258
io_parser_t, 338	delaysum::delaysum_t, 260
io_tcp_fwcb_t, 341	doasym_classification, 262
MHAIOJackdb::io_jack_t, 540	doasym_classification_config, 264
MHAIOPortAudio::io_portaudio_t, 546	doasym_feature_extraction, 266
MHAJack::client_t, 557	doasym_feature_extraction_config, 268
proc_lib	droptect_t, 270
fw_t, 318	ds_t, 273
proc_name	example1_t, 287
fw_t, 317	example2_t, 289
proc_ramp	example3_t, 293
altplugs_t, 197	exampled_t, 296
proc_wave	example5_t, 298
doasvm_feature_extraction_config, 268	example6_t, 299
process	fader_if_t, 301
ADM::ADM, 178	fader_wave::fader_wave_if_t, 303
ADM::Delay, 181	fftfilterbank::fftfb interface t, 308
ADM::Delay, 181 ADM::Linearphase_FIR, 183	fftfilterbank::fftfb_plug_t, 310
ac2lsl::ac2lsl_t, 127, 128	·
ac2isi:.ac2isi_t, 127, 126 ac2isi::cfg_t, 130	frequency_translator_t, 312
<u>0</u> _ ·	fw_t, 316
ac2wave_if_t, 137	gain::gain_if_t, 321
ac2wave_t, 138	hilbert_shifter_t, 325
acConcat_wave, 140	identity_t, 326, 327
acConcat_wave_config, 143	iirfilter_t, 328
acPooling_wave, 150	io_tcp_fwcb_t, 340
acPooling_wave_config, 152	lpc, 358
acSteer, 162	lpc_bl_predictor, 361
acTransform_wave, 166	lpc_bl_predictor_config, 363
acTransform_wave_config, 168	lpc_burglattice, 366
acmon::acmon_t, 148	lpc_burglattice_config, 367
acsave::acsave_t, 155, 156	lpc_config, 369
addsndfile::addsndfile_if_t, 170	MHAFilter::partitioned_convolution_t, 515
adm_if_t, 185	MHAFilter::thirdoctave_analyzer_t, 528
altplugs_t, 197	MHAParser::mhapluginloader_t, 641, 642

MHAPlugin_Resampling::resampling_if←	steerbf_config, 879
_t, 689	timoConfig, 885
MHAPlugin_Resampling::resampling_t,	timoSmooth, 888
690	us_t, 891
MHAPlugin_Split::domain_handler_t, 695	wave2spec_if_t, 893
MHAPlugin_Split::split_t, 704	wave2spec_t, 895
MHAPlugin_Split::uni_processor_t, 715	wavrec_t, 897
MHASignal::async_rmslevel_t, 720	wavwriter_t, 899
MHASignal::delay_spec_t, 721	process_frame
MHASignal::delay_t, 722	io_parser_t, 338
MHASignal::delay_wave_t, 724	process_t
MHASignal::subsample_delay_t, 763	route::process_t, 846
matrixmixer::cfg_t, 371	ProcessMutex
matrixmixer::matmix_t, 373	analysepath_t, 200
mha_dblbuf_t, 397	processing_done
mhachain::chain_base_t, 457, 458	MHAPlugin_Split::posix_threads_t, 701
mhachain::plugs_t, 461	processor
multibandcompressor::interface_t, 803	MHAPlugin_Split::domain_handler_t, 696
nlms_t, 807	MHAPlugin_Split::thread_platform_t, 713
noise_t, 809	prof algos
noisePowProposedScale::interface_t, 811	mhachain::plugs_t, 462
· —	. • -
noisePowProposedScale::noisePow← Proposed, 812	prof_cfg mhachain::plugs_t, 462
•	
overlapadd::overlapadd_if_t, 815	prof_init
plugin_interface_t, 822	mhachain::plugs_t, 462
PluginLoader::fourway_processor_t, 827,	prof_load_con
828	mhachain::plugs_t, 462
PluginLoader::mhapluginloader_t, 832	prof_prepare
prediction_error, 837	mhachain::plugs_t, 462
prediction_error_config, 839	prof_process
rmslevel_if_t, 842	mhachain::plugs_t, 462
rmslevel_t, 843	prof_process_load
route::interface_t, 845	mhachain::plugs_t, 462
route::process_t, 846	prof_process_tt
rt_nlms_t, 848	mhachain::plugs_t, 462
save_spec_t, 851	prof_release
save_wave_t, 853	mhachain::plugs_t, 462
shadowfilter_begin::cfg_t, 854	prof_tt_con
shadowfilter_begin::shadowfilter_begin ←	mhachain::plugs_t, 462
_t, 856	profiling
shadowfilter_end::cfg_t, 857	mhachain::plugs_t, 462
shadowfilter_end::shadowfilter_end_←	provoke_inner_error
t, 859	mha_dblbuf_t, 397
sine_t, 861	provoke_outer_error
smoothgains_bridge::overlapadd_if_←	mha_dblbuf_t, 397
t, 863	psrate
softclip_t, 867	fw_vars_t, 319
softclipper_t, 868	Pu
spec2wave_if_t, 871	prediction_error_config, 840
spec2wave_t, 872	rt_nlms_t, 848
steerbf, 877	push

MHASignal::stat_t, 761	MHAParser::range_var_t, 650
mha_rt_fifo_t, 424	query_readfile
push_config	MHAParser::base_t, 597
MHAPlugin::config_t, 681	MHAParser::parser_t, 648
put_signal	query_savefile
MHAPlugin_Split::domain_handler_t, 694	MHAParser::base_t, 597
pwinner_out	MHAParser::parser_t, 648
MHAIOJackdb::io_jack_t, 541	query savefile compact
	MHAParser::base_t, 598
q	MHAParser::parser_t, 648
noisePowProposedScale::interface_t, 811	query_savemons
q_high	MHAParser::base_t, 598
timoConfig, 885	MHAParser::parser_t, 648
q_low	query_subst
timoConfig, 885	MHAParser::base t, 598
quant	query_t
calibrator_runtime_layer_t, 212	MHAParser, 106
quantile	query_type
MHASignal, 120	MHAParser::base_t, 597
quantizer_t	MHAParser::bool_mon_t, 603
MHASignal::quantizer_t, 747	MHAParser::bool t, 605
queries	MHAParser::complex_mon_t, 611
MHAParser::base_t, 600	MHAParser::complex_t, 613
plugindescription_t, 824	MHAParser::float_mon_t, 617
query_addsubst	MHAParser::float_t, 619
MHAParser::base_t, 598	MHAParser::int_mon_t, 621
query_cmds	MHAParser::int_t, 624
MHAParser::base_t, 598	MHAParser::kw_t, 629
plugindescription_t, 824	MHAParser::mcomplex_mon_t, 631
query_dump	MHAParser::mcomplex_t, 633
MHAParser::base_t, 596	MHAParser::mfloat mon t, 635
MHAParser::monitor_t, 643	MHAParser::mfloat_t, 637
MHAParser::parser_t, 647	MHAParser::parser_t, 647
query_entries	MHAParser::string_mon_t, 653
MHAParser::base_t, 596	MHAParser::string_t, 655
MHAParser::parser_t, 647	MHAParser::vcomplex_mon_t, 659
query_help	MHAParser::vcomplex_t, 661
MHAParser::base_t, 598	MHAParser::vfloat mon t, 663
query_id	MHAParser::vfloat_t, 665
MHAParser::base_t, 598	MHAParser::vint mon t, 667
query_listids	MHAParser::vint_t, 669
MHAParser::base_t, 598	<u> </u>
MHAParser::parser_t, 648	MHAParser::vstring_mon_t, 671
query_map_t	MHAParser::vstring_t, 673
MHAParser, 106	query_val
query_perm	MHAParser::base_t, 597
MHAParser::base_t, 597	MHAParser::bool_mon_t, 603
MHAParser::monitor_t, 644	MHAParser::bool_t, 605
MHAParser::variable_t, 657	MHAParser::complex_mon_t, 611
query_range	MHAParser::complex_t, 613
MHAParser::base_t, 597	MHAParser::float_mon_t, 617
MHAParser::kw_t, 629	MHAParser::float_t, 619

MHAParser::int_mon_t, 621	Vector and matrix processing toolbox, 41
MHAParser::int_t, 624	range_var_t
MHAParser::kw_t, 629	MHAParser::range var t, 650
MHAParser::mcomplex_mon_t, 631	ratio
MHAParser::mcomplex_t, 633	ds_t, 273
MHAParser::mfloat mon t, 635	us_t, 891
MHAParser::mfloat_t, 637	
MHAParser::parser_t, 648	raw_p_max_name
MHAParser::string_mon_t, 653	acTransform_wave, 167
	acTransform_wave_config, 168
MHAParser::string_t, 655	raw_p_name
MHAParser::vcomplex_mon_t, 659	acPooling_wave_config, 153
MHAParser::vcomplex_t, 661	acTransform_wave, 167
MHAParser::vfloat_mon_t, 663	acTransform_wave_config, 168
MHAParser::vfloat_t, 665	rb_f_t
MHAParser::vint_mon_t, 667	mha_ruby.cpp, 959
MHAParser::vint_t, 669	rdata
MHAParser::vstring_mon_t, 671	MHASignal::matrix_t, 745
MHAParser::vstring_t, 673	mha audio t, 391
query_version	re
MHAParser::base_t, 598	
quit	mha_complex_t, 393
fw_t, 316	read
<u>.</u> ., 010	MHAFilter::blockprocessing_polyphase←
R	_resampling_t, 478
AuditoryProfile::parser_t, 205	MHAFilter::polyphase_resampling_t, 521
AuditoryProfile::profile_t, 209	MHAJack::port_t, 560
lpc_config, 370	mha_drifter_fifo_t, 403
MHA_TCP::OS_EVENT_TYPE, 439	mha_fifo_lw_t, 410
RUNNING	mha fifo t, 416
	read_bytes
MHA_TCP::Thread, 447	MHA_TCP::Connection, 435
rad2smp	read_event
Vector and matrix processing toolbox, 45	MHA_TCP::Connection, 436
ramp_a	
hanning_ramps_t, 323	read_get_cpu_load
ramp_b	MHAIOJack::io_jack_t, 535
hanning_ramps_t, 323	MHAIOJackdb::io_jack_t, 540
ramp_begin	read_get_scheduler
MHAWindow::base_t, 791	MHAIOJack::io_jack_t, 535
ramp_counter	MHAIOJackdb::io_jack_t, 540
altplugs_t, 198	read_get_xruns
ramp_end	MHAIOJack::io_jack_t, 535
MHAWindow::base t, 791	MHAIOJackdb::io_jack_t, 540
ramp_len	read_levels
altplugs_t, 198	calibrator_t, 215
ramplen	read_line
·	MHA_TCP::Connection, 434
addsndfile::addsndfile_if_t, 171	
altplugs_t, 198	read_modified
fader_wave::fader_wave_if_t, 303	dc_simple::dc_if_t, 247
spec2wave_if_t, 871	read_ptr
ramps	mha_fifo_t, 417
spec2wave_t, 873	readable_frames
range	MHAFilter::polyphase_resampling_t, 521

readaccess	acmon::acmon_t, 147
MHAParser::base_t, 600	acsave::acsave_t, 155
reader_started	addsndfile::addsndfile_if_t, 170
mha_drifter_fifo_t, 404	adm_if_t, 185
reader_xruns_in_succession	altplugs_t, 196
mha_drifter_fifo_t, 405	analysispath_if_t, 202
reader_xruns_since_start	bbcalib interface t, 211
mha drifter fifo t, 405	calibrator_t, 214
reader_xruns_total	coherence::cohflt_if_t, 220
mha_drifter_fifo_t, 405	db_if_t, 232
real	dc_simple::dc_if_t, 246
MHASignal::matrix_t, 741-743	delaysum::delaysum_if_t, 258
rear_channel	doasvm_classification, 262
adm_rtconfig_t, 189	doasvm_feature_extraction, 266
rear_channels	droptect_t, 270
adm_if_t, 186	ds_t, 273
adm_rtconfig_t, 189	example1_t, 286
rec_frames	example2_t, 289
acsave::cfg_t, 158	example3 t, 293
received_group	example4_t, 296
mhaserver_t, 717	fader_wave::fader_wave_if_t, 303
receiver	fftfilterbank::fftfb_interface_t, 308
MHAEvents::connector_t, 469	frequency_translator_t, 312
reciprocal	fw_t, 316
Complex arithmetics in the openMHA, 67	gain::gain_if_t, 321
reclen	identity_t, 327
acsave::acsave_t, 156	io_file_t, 330
recmode	io_lib_t, 335
acmon::acmon_t, 148	io_parser_t, 338
reconnect_inports	io_tcp_sound_t, 350
MHAIOJack::io_jack_t, 535	io_tcp_t, 354
MHAIOJackdb::io_jack_t, 539	lpc, 359
reconnect_outports	lpc_bl_predictor, 361
MHAIOJack::io_jack_t, 535	lpc_burglattice, 366
MHAIOJackdb::io_jack_t, 539	MHAIOJack::io_jack_t, 534
record	MHAIOJackdb::io_jack_t, 539
wavrec_t, 898	MHAJack::client_t, 555
rect	MHAParser::mhapluginloader_t, 641
MHAOvlFilter::ShapeFun, 102	MHAPlugin::plugin_t, 686
MHAWindow, 123	MHAPlugin_Resampling::resampling_if
rect_t	_t, 689
MHAWindow::rect_t, 797	MHAPlugin_Split::splitted_part_t, 709
relative	mhachain::chain_base_t, 458
MHASignal::loop_wavefragment_t, 734	mhachain::plugs_t, 461
release	multibandcompressor::interface_t, 803
ac2lsl::ac2lsl_t, 128	nlms_t, 806
ac2wave_if_t, 137	overlapadd::overlapadd_if_t, 815
acConcat_wave, 142	PluginLoader::fourway_processor_t, 829
acPooling_wave, 151	PluginLoader::mhapluginloader_t, 832
acSteer, 162	prediction_error, 837
acTransform_wave, 166	route::interface_t, 845
<u> </u>	- -

smoothgains_bridge::overlapadd_if_← t, 863	MHAFilter::resampling_filter_t, 523 resampling_if_t
steerbf, 878	MHAPlugin_Resampling::resampling_if←
timoSmooth, 889	t, 689
	<u> </u>
us_t, 891	resampling_t
wavrec_t, 897	MHAPlugin_Resampling::resampling_t,
release_	690
iirfilter_t, 328	resamplingmode
MHAPlugin::plugin_t, 686	addsndfile::addsndfile_if_t, 171
MHAPlugin_Split::split_t, 704	reset
release_mutex	droptect_t, 271
mha_fifo_posix_threads_t, 412	MHA_TCP::Async_Notify, 428
mha_fifo_thread_platform_t, 420	MHA_TCP::Wakeup_Event, 453
remove_abandonned	reset_state
mha_rt_fifo_t, 424	MHAFilter::gamma_flt_t, 496
remove_all	resize
mha_rt_fifo_t, 424	MHAFilter::iir_filter_t, 501
remove_all_cfg	resolution
MHAPlugin::config_t, 683	acTransform_wave_config, 168
remove_item	resolve
MHAParser::parser_t, 646, 647	dynamiclib_t, 274
remove_lock	resolve_and_init
mhamain.cpp, 998	PluginLoader::mhapluginloader_t, 833
remove_ref	resolve_checked
algo_comm_t, 192	dynamiclib_t, 274
MHAKernel::algo_comm_class_t, 563	result
remove_var	cpuload_t, 231
algo_comm_t, 191	resynthesis_gain
MHAKernel::algo_comm_class_t, 563	MHAFilter::gamma_flt_t, 497
repl_list	ret_size
MHAParser::base_t, 600	MHAParser::c_ifc_parser_t, 608
repl_list_t	return_imag
MHAParser::base_t, 595	fftfilterbank::fftfb_interface_t, 308
replace	return_imag_
MHAParser::base_t::replace_t, 601	fftfilterbank::fftfb_plug_t, 310
MHASignal::loop_wavefragment_t, 734	return_value
replace_	MHA_TCP::Thread, 448
cfg_t, 218	return_wave
replace_t	wave2spec if t, 893
MHAParser::base_t::replace_t, 601	retv
resampled_num_frames	MHAParser::c_ifc_parser_t, 608
addsndfile, 79	rewind
resampled_soundfile_t	MHASignal::loop_wavefragment_t, 736
addsndfile::resampled_soundfile_t, 174	rho
resampling	nlms_t, 807
MHAFilter::blockprocessing_polyphase↔	prediction_error, 837
	ringbuffer
_resampling_t, 478 resampling.cpp, 1003	MHAFilter::polyphase_resampling_t, 522
resampling_factors	ringbuffer_t
MHAFilter, 93	_
•	MHASignal::ringbuffer_t, 750
resampling_filter_t	rm_parent_on_remove

MHAParser::base_t, 599	process, 845
rms	release, 845
MHASignal::loop_wavefragment_t, 734	route_ac, 845
rms_limit40	route_out, 845
MHASignal::loop_wavefragment_t, 734	stopped, 845
rmsdb	update, 845
example6_t, 299	route::process_t, 846
rmslevel	process, 846
calibrator_variables_t, 216	process_t, 846
dc::dc_t, 238	sout, 846
MHASignal::async_rmslevel_t, 719	sout_ac, 846
Vector and matrix processing toolbox, 56,	wout, 846
57	wout_ac, 846
rmslevel.cpp, 1003	route_ac
rmslevel_if_t, 841	route::interface_t, 845
name, <mark>842</mark>	route_out
prepare, 842	route::interface_t, 845
process, 842	rows
rmslevel_if_t, 842	acsave::mat4head_t, 158
rmslevel_t, 843	rt nlms t, 847
fftlen, 843	~rt_nlms_t, 848
insert, 843	ac, 848
level, 843	channels, 848
level_db, 843	F, 848
peak, 843	frames, 848
peak_db, 843	fu, 849
process, 843	fu_previous, 849
rmslevel_t, 843	fuflt, 849
rmslevelmeter	insert, 848
transducers.cpp, 1013	n_no_update_, 849
root	name_d_, 849
mha_rt_fifo_t, 425	name_e_, 849
rotated_i	name_u_, 849
acTransform_wave_config, 168	no iter, 849
rotated_p	ntaps, 848
acTransform_wave_config, 168	P_Sum, 849
rotated_p_max_name	process, 848
acTransform wave, 167	Pu, 848
rotated p name	rt_nlms_t, 848
— —	s E, 849
acTransform_wave, 167	5_E, 649 U, 848
route, 125	Uflt, 848
route.cpp, 1004	•
route::interface_t, 844	y_previous, 849
algo, 845	rt_process
cfac, 845	analysepath_t, 200
cfin, 845	rt_strict
cfout, 845	ac2lsl::ac2lsl_t, 128
interface_t, 845	rtcalibrator
patchbay, 845	transducers.cpp, 1013
prepare, 845	run
prepared, 845	MHA_TCP::Thread, 448

mhaserver_t, 717	sInput
RunOnce, 849	MHAFilter::fftfilter_t, 486
RunOnce, 850	SOCKET_ERROR
runtime configuration, 4	mha_tcp.cpp, 974
rval	SOCKET
MHAParser::expression_t, 615	MHA_TCP, 88
	mha_tcp.cpp, 974
s_E_pred_err_delay	SPP
prediction_error_config, 840	timo_AC, 881
s_LPC	START_BETA
prediction_error_config, 840	ADM, 80
s_U_delay	STRERROR
prediction_error_config, 840	MHA_TCP, 88
s_U_delayflt	STRLEN
prediction_error_config, 840	mha_errno.c, 936
s_Usmpl	sWeights
prediction_error_config, 841	MHAFilter::fftfilter_t, 486
s_Wflt	safe div
prediction_error_config, 840	Complex arithmetics in the openMHA, 66
s_Y_delay	mha_signal.cpp, 962
prediction_error_config, 840	mha_signal.hh, 971
s_Y_delayfit	sample
prediction_error_config, 840	lpc_config, 370
s_b	samplerate
lpc_bl_predictor_config, 364	io_file_t, 331
lpc_burglattice_config, 368	io_tcp_sound_t, 351
s_E	MHAIOPortAudio::io_portaudio_t, 546
prediction_error_config, 840 rt_nlms_t, 849	MHAJack::client_t, 557
s_f	samples_AC
lpc_bl_predictor_config, 364	acConcat wave, 142
lpc_birglattice_config, 368	samplingrate
s_file_in	MHAOvlFilter::fftfb_t, 576
io_file_t, 332	save_m
s_in	acsave::save_var_t, 160
io_file_t, 331	save_mat4
io_parser_t, 338	acsave::save_var_t, 159
io_tcp_sound_t, 352	save_spec.cpp, 1004
MHAIOPortAudio::io_portaudio_t, 546	save_spec_t, 850
MHAJack::client_t, 558	basename, 851
s_out	prepare, 851
coherence::cohflt_t, 223	process, 851
combc_t, 227	save_spec_t, 851
fftfilterbank::fftfb_plug_t, 310	save_txt
io_file_t, 332	acsave::save_var_t, 159
io_parser_t, 338	save_var_t
MHAIOPortAudio::io_portaudio_t, 546	ac2lsl::save_var_t, 132
MHAJack::client_t, 558	ac2lsl::save_var_t< mha_complex_t >,
s_U	134
prediction_error_config, 840	acsave::save_var_t, 159
s_W	save_vars
prediction_error_config, 840	acmon::acmon_t, 148

save_wave.cpp, 1004	Vector and matrix processing toolbox, 43
save_wave_t, 852	select_plug
basename, 853	altplugs_t, 198
prepare, 853	select_source
process, 853	MHAMultiSrc::base_t, 566
save_wave_t, 852	selected plug
saveas_mat4	altplugs_t, 198
MHASignal, 120, 121	send frame
SC	ac2lsl::save_var_base_t, 131
MHASignal::hilbert fftw t, 731	ac2lsl::save_var_t, 133
spec2wave_t, 873	ac2lsl::save_var_t< mha_complex_t >,
scale	135
example5_t, 298	Server
MHASignal, 117	MHA_TCP::Server, 440, 441
MHASignal::fft_t, 730	server
MHASignal::spectrum_t, 759	io_tcp_t, 355
MHASignal::waveform t, 776	server_fragsize
scale_ch	MHAIOJackdb::io_jack_t, 541
example2_t, 290	server_port_open
example2_t, 290 example3_t, 293	<u> </u>
•	io_tcp_parser_t, 347
example4_t, 297	server_srate
plugin_interface_t, 822	MHAIOJackdb::io_jack_t, 541
scale_channel	servername
MHASignal::spectrum_t, 760	MHAIOJack::io_jack_t, 535
MHASignal::waveform_t, 776	MHAIOJackdb::io_jack_t, 540
scale_frame	serversocket
MHASignal::waveform_t, 777	MHA_TCP::Server, 442
scale_fun_t	set
MHAOvIFilter, 99	Complex arithmetics in the openMHA, 62,
scale_var_t	63
MHAOvIFilter::scale_var_t, 591	MHA_TCP::Async_Notify, 428
scalefac	set_announce_port
MHATableLookup::linear_table_t, 783	mhaserver_t, 717
scaler_t	set_channelcnt
gain::scaler_t, <mark>322</mark>	MHAFilter::adapt_filter_t, 475
scan_dir	set_connected
addsndfile::addsndfile_if_t, 171	io_tcp_parser_t, 346
scan_plugin	set_entries
pluginbrowser_t, 823	MHAParser::keyword_list_t, 626
scan_plugins	set_errnos
pluginbrowser_t, 823	io_tcp_fwcb_t, 340
scheduler	set_error
analysepath_t, 200	mha_fifo_lw_t, 410
MHAPlugin_Split::posix_threads_t, 701	set_fb_pars
schroeder_t	DynComp::dc_afterburn_t, 277
MHASignal::schroeder_t, 754	set_help
search_pattern	MHAParser::base_t, 599
addsndfile::addsndfile_if_t, 171	set_id_string
search_result	MHAParser::parser_t, 648
addsndfile::addsndfile_if_t, 171	set_index
sec2smp	MHAParser::keyword_list_t, 626

	ugin_Split::domain_handler_t, 693	set_weights MHAFilter::complex_bandpass_t, 480
set_input_p MHAJa	ortnames ck::client_t, 556	MHAFilter::gamma_flt_t, 496 set_xfun
set_level		MHATableLookup::xy_table_t, 787
addsnd	file::addsndfile_if_t, 171	set xmax
	vave::fader_wave_if_t, 303	MHATableLookup::linear_table_t, 782
set_level_d		set_xmin
	gnal::loop_wavefragment_t, 736	MHATableLookup::linear_table_t, 781
set level lii		set_xyfun
	gnal::loop_wavefragment_t, 736	MHATableLookup::xy_table_t, 788
set_local_p	• • • • •	set_yfun
	parser_t, 344	MHATableLookup::xy_table_t, 788
set locate	paisei_i, 544	setchannels
_	Jackdhilla iaak t 540	
	Jackdb::io_jack_t, 540	dc::wideband_inhib_vars_t, 244
set_max_aı	- —	setlock
•	int_dyn, 820	io_file_t, 330
set_minabs		MHAParser::variable_t, 657
	gnal.cpp, 962	sf
	gnal.hh, 971	MHASndFile::sf_t, 778
set_new_pe		wavwriter_t, 899
	parser_t, 346	sf_in
set_node_id		io_file_t, 332
	arser::base_t, 598	sf_out
set_output_		io_file_t, 332
	ugin_Split::domain_handler_t, 693	sf_t
set_output_	-•	MHASndFile::sf_t, 778
	ck::client_t, 556	sf_wave_t
set_parse_e		MHASndFile::sf_wave_t, 779
MHAPa	arser::c_ifc_parser_t, 607	sfinf_in
set_range		io_file_t, 332
MHAPa	arser::kw_t, <mark>629</mark>	sfinf_out
MHAPa	arser::range_var_t, 650	io_file_t, 332
set_server_	_port_open	shadowfilter_begin, 125
io_tcp_	parser_t, 345	shadowfilter_begin.cpp, 1004
set_state		shadowfilter_begin::cfg_t, 853
MHAFil	ter::complex_bandpass_t, 480	cfg_t, 854
MHAFil	ter::iir_ord1_real_t, 503	in_spec_copy, 854
set_tau		nch, 854
MHAFil	ter::o1flt_lowpass_t, 509	ntracks, 854
MHAFil	ter::o1flt_maxtrack_t, 511	out_spec, 854
MHAFil	ter::o1flt_mintrack_t, 513	process, 854
set_tau_att		shadowfilter_begin::shadowfilter_begin_t, 855
	ter::o1_ar_filter_t, 506	basename, 856
set_tau_rele		nch, 856
	ter::o1_ar_filter_t, 506	ntracks, 856
	ck_transport	prepare, 856
	Jackdb::io_jack_t, 540	process, 856
	ck::client_t, 556	shadowfilter_begin_t, 855
set_value		shadowfilter_begin_t
	arser::keyword_list_t, 626	shadowfilter_begin::shadowfilter_begin
		5aaotobogoriaaowiiitoi_bog

_t, 855	sin8k
shadowfilter_end, 125	speechnoise_t, 875
shadowfilter_end.cpp, 1004	sinc
shadowfilter_end::cfg_t, 856	MHAFilter, 93
ac, 857	sine.cpp, 1005
cfg_t, 857	sine_cfg_t, 859
gains, 857	amplitude, 860
in spec, 857	channels, 860
name, 857	mix, 860
nch_out, 857	phase_increment_div_2pi, 860
nfft, 857	sine_cfg_t, 860
ntracks, 857	sine_t, 860
out_spec, 857	~sine_t, 861
process, 857	channels, 862
shadowfilter_end::shadowfilter_end_t, 858	frequency, 862
basename, 859	lev, 862
prepare, 859	mode, 862
process, 859	patchbay, 862
shadowfilter_end_t, 858	phase_div_2pi, 862
shadowfilter end t	prepare, 861
shadowfilter_end.:shadowfilter_end_ ←	process, 861
t, 858	sine t, 861
shape	update_cfg, 861
MHAOvlFilter::fftfb_t, 576	size
shapes	MHA_AC::ac2matrix_helper_t, 375
MHAOvlFilter::fftfb_vars_t, 579	MHA_AC::acspace2matrix_t, 380
shift	MHAKernel::algo_comm_class_t, 564
lpc, 359	MHASignal::matrix_t, 741
lpc_config, 369	Vector and matrix processing toolbox, 47,
shifted	48
hilbert_shifter_t, 325	size_t
side	MHAParser::keyword_list_t, 625
mha_channel_info_t, 392	skip
sign_t	ac2lsl::ac2lsl_t, 128
MHASignal::schroeder_t, 754	ac2lsl::cfg_t, 130
signal_counter	skipent
MHASignal, 121	ac2lsl::cfg_t, 130
signal_out	Sleep
MHAPlugin_Split::split_t, 705	mha_tcp.hh, 976
sin125	slope
speechnoise_t, 875	softclipper_t, 868
sin1k	softclipper_variables_t, 870
speechnoise_t, 875	slope_db
sin250	softclip_t, 867
speechnoise_t, 875	smoothgains_bridge, 125
sin2k	smoothgains_bridge.cpp, 1005
speechnoise_t, 875	smoothgains_bridge::overlapadd_if_t, 862
sin4k	~overlapadd_if_t, 863
speechnoise_t, 875	algo, 864
sin500	cf_in, 864
speechnoise_t, 875	cf_out, 864

epsilon, 864	MHA_TCP::Server, 442
irswnd, 864	Sockaccept_Event
mode, 864	MHA_TCP::Sockaccept_Event, 443
overlapadd_if_t, 863	Sockread Event
patchbay, 864	MHA_TCP::Sockread_Event, 444
plugloader, 864	Sockwrite Event
prepare, 863	MHA_TCP::Sockwrite_Event, 445
process, 863	softclip
release, 863	calibrator_runtime_layer_t, 212
update, 864	calibrator_variables_t, 216
smoothgains_bridge::smoothspec_wrap_←	softclip.cpp, 1005
t, 864	softclip_t, 866
proc_1, 865	attack, 867
proc_2, 865	decay, 867
smoothspec, 865	patchbay, 867
smoothspec_epsilon, 865	prepare, 867
smoothspec_wrap_t, 865	process, 867
spec_in_copy, 865	slope_db, 867
use_smoothspec, 865	softclip t, 867
smoothspec	start_limit, 867
MHAFilter::smoothspec_t, 526	tftype, 867
smoothgains_bridge::smoothspec_←	update, 867
wrap_t, 865	softclipper_t, 867
smoothspec_epsilon	attack, 868
smoothgains_bridge::smoothspec_←	clipmeter, 868
wrap_t, 865	decay, 868
smoothspec_t	hardlimit, 868
MHAFilter::smoothspec_t, 525	linear, 868
smoothspec_wrap_t	process, 868
smoothgains_bridge::smoothspec_ ←	slope, 868
wrap_t, 865	softclipper_t, 868
smp2rad	threshold, 868
Vector and matrix processing toolbox, 44	softclipper_variables_t, 869
smp2sec	clipped, 870
Vector and matrix processing toolbox, 43	hardlimit, 870
smpl	linear, 870
prediction_error_config, 841	max_clipped, 870
sn_in	slope, 870
MHAJack::client_avg_t, 549	softclipper_variables_t, 869
MHAJack::client_noncont_t, 551	tau_attack, 869
sn_out	tau_clip, 870
MHAJack::client_avg_t, 549	tau_decay, 870
MHAJack::client_noncont_t, 552	threshold, 870
sndfile_t	sort_fftw2spec
addsndfile::sndfile_t, 175	MHASignal::fft_t, 729
snprintf_required_length	sort_spec2fftw
mha_error_helpers, 86	MHASignal::fft_t, 729
snrPost1Debug	sound
noisePowProposedScale::noisePow⊷	io_tcp_t, 355
Proposed, 813	source_channel_index
sock_addr	MHAFilter::partitioned_convolution_t-

::index_t, 518	overlapadd::overlapadd_t, 818
MHAFilter::transfer_function_t, 531	wave2spec_t, 896
sout	spec_in_copy
matrixmixer::cfg_t, 371	smoothgains_bridge::smoothspec_←
route::process_t, 846	wrap_t, 865
sout_ac	spec_out
route::process_t, 846	MHAPlugin_Split::domain_handler_t, 696
spec2fir	MHAPlugin_Split::split_t, 706
MHAFilter, 93	timoConfig, 886
MHAFilter::smoothspec_t, 526	specSteer1
spec2spec	acSteer config, 164
plugindescription_t, 824	specSteer2
spec2wave	acSteer_config, 164
MHASignal::fft_t, 728	spectrum_t
plugindescription_t, 824	MHA_AC::spectrum_t, 385
spec2wave.cpp, 1005	MHAMultiSrc::spectrum_t, 568
max, 1006	MHASignal::spectrum_t, 757
•	· —
min, 1006	speechnoise
spec2wave_if_t, 870	calibrator_runtime_layer_t, 213
patchbay, 871	speechnoise.cpp, 1006
prepare, 871	bandw_correction, 1008
process, 871	erb_hz_f_hz, 1007
ramplen, 871	fhz2bandno, 1007
spec2wave_if_t, 871	hz2hz, 1007
update, 871	NUM_ENTR_LTASS, 1007
window_config, 871	NUM_ENTR_MHAORIG, 1007
spec2wave_scale	NUM_ENTR_OLNOISE, 1007
MHASignal::fft_t, 729	vLTASS_combined_lev, 1008
spec2wave_t, 872	vLTASS_female_lev, 1008
\sim spec2wave_t, 872	vLTASS_freq, 1008
calc_out, 873	vLTASS_male_lev, 1008
ft, 872	vMHAOrigFreq, 1008
nfft, 873	vMHAOrigSpec, 1008
npad1, 872	vOlnoiseFreq, 1008
npad2, 873	vOlnoiseLev, 1008
nwndshift, 873	speechnoise.h, 1009
out_buf, 873	speechnoise_t, 874
postwindow, 873	brown, 875
process, 872	creator, 876
ramps, 873	LTASS_combined, 875
sc, 873	LTASS female, 875
spec2wave_t, 872	LTASS male, 875
write_buf, 873	mha, 875
spec_fader_t, 873	noise_type_t, 875
~spec_fader_t, 874	olnoise, 875
fr, 874	pink, 875
gains, 874	sin125, 875
nch, 874	sin1k, 875
spec_fader_t, 874	sin250, 875
spec_in	sin2s0, 875
MHAPlugin_Split::domain_handler_t, 696	sin4k, 875
	oni-in, or o

sin500, <mark>875</mark>	io_tcp_fwcb_t, 341
sin8k, 875	MHAIOPortAudio::io_portaudio_t, 546
speechnoise_t, 876	MHAJack::client t, 558
TEN_SPL_250_8k, 875	start handle
TEN SPL 50 16k, 875	 io_file_t, 331
TEN_SPL, 875	io_parser_t, 338
white, 875	io_tcp_fwcb_t, 342
split.cpp, 1009	MHAIOPortAudio::io_portaudio_t, 546
default_thread_platform_string, 1010	MHAJack::client_t, 558
default_thread_platform_type, 1010	start_limit
MHAPLUGIN_OVERLOAD_OUTDOM↔	softclip t, 867
AIN, 1010	start lin
posixthreads, 1010	_ cfg_t, 218
split_t	start_new_session
MHAPlugin_Split::split_t, 704	 wavrec_t, 897
splitted part t	started
MHAPlugin_Split::splitted_part_t, 708	fw_t, 316
spnoise_channels	io_parser_t, 338
calibrator_variables_t, 216	starting
spnoise_level	mha drifter fifo t, 404
calibrator_variables_t, 216	startpos
spnoise_mode	addsndfile::addsndfile_if_t, 171
calibrator_variables_t, 216	startsample
spnoise_parser	io_file_t, 331
calibrator_variables_t, 216	startup_zeros
spp	mha_drifter_fifo_t, 406
timoSmooth, 890	stat_t
srate	
adm_if_t, 186	MHASignal::stat t, 761
calibrator_variables_t, 216	state
MHAParser::mhaconfig_mon_t, 640	fw t, 318
MHAPlugin_Resampling::resampling_if↔	MHA_TCP::Thread, 448
_t, 689	
— ·	MHAFilter::filter t, 494
mhaconfig t, 464	MHAFilter::filter_t, 494 state cpuload
mhaconfig_t, 464 srate	state_cpuload
srate_	state_cpuload MHAIOJack::io_jack_t, 536
<u> </u>	state_cpuload MHAIOJack::io_jack_t, 536 MHAIOJackdb::io_jack_t, 541
srate_ MHAFilter::gamma_flt_t, 497 srcfile	state_cpuload MHAIOJack::io_jack_t, 536 MHAIOJackdb::io_jack_t, 541 state_parser
srate_ MHAFilter::gamma_flt_t, 497	state_cpuload MHAIOJack::io_jack_t, 536 MHAIOJackdb::io_jack_t, 541 state_parser MHAIOJack::io_jack_t, 536
srate_ MHAFilter::gamma_flt_t, 497 srcfile MHAParser::parser_t, 648 srcline	state_cpuload MHAIOJack::io_jack_t, 536 MHAIOJackdb::io_jack_t, 541 state_parser MHAIOJack::io_jack_t, 536 MHAIOJackdb::io_jack_t, 541
srate_ MHAFilter::gamma_flt_t, 497 srcfile MHAParser::parser_t, 648	state_cpuload MHAIOJack::io_jack_t, 536 MHAIOJackdb::io_jack_t, 541 state_parser MHAIOJack::io_jack_t, 536 MHAIOJackdb::io_jack_t, 541 state_priority
srate_ MHAFilter::gamma_flt_t, 497 srcfile MHAParser::parser_t, 648 srcline MHAParser::parser_t, 649 start	state_cpuload MHAIOJack::io_jack_t, 536 MHAIOJackdb::io_jack_t, 541 state_parser MHAIOJack::io_jack_t, 536 MHAIOJackdb::io_jack_t, 541 state_priority MHAIOJack::io_jack_t, 536
srate_ MHAFilter::gamma_flt_t, 497 srcfile MHAParser::parser_t, 648 srcline MHAParser::parser_t, 649 start fw_t, 315	state_cpuload MHAIOJack::io_jack_t, 536 MHAIOJackdb::io_jack_t, 541 state_parser MHAIOJack::io_jack_t, 536 MHAIOJackdb::io_jack_t, 541 state_priority MHAIOJack::io_jack_t, 536 MHAIOJackdb::io_jack_t, 541
srate_ MHAFilter::gamma_flt_t, 497 srcfile MHAParser::parser_t, 648 srcline MHAParser::parser_t, 649 start fw_t, 315 io_file_t, 330	state_cpuload MHAIOJack::io_jack_t, 536 MHAIOJackdb::io_jack_t, 541 state_parser MHAIOJack::io_jack_t, 536 MHAIOJackdb::io_jack_t, 541 state_priority MHAIOJack::io_jack_t, 536 MHAIOJackdb::io_jack_t, 541 state_scheduler
srate_ MHAFilter::gamma_flt_t, 497 srcfile MHAParser::parser_t, 648 srcline MHAParser::parser_t, 649 start fw_t, 315 io_file_t, 330 io_lib_t, 334	state_cpuload MHAIOJack::io_jack_t, 536 MHAIOJackdb::io_jack_t, 541 state_parser MHAIOJack::io_jack_t, 536 MHAIOJackdb::io_jack_t, 541 state_priority MHAIOJack::io_jack_t, 536 MHAIOJackdb::io_jack_t, 541 state_scheduler MHAIOJack::io_jack_t, 536
srateMHAFilter::gamma_flt_t, 497 srcfile	state_cpuload MHAIOJack::io_jack_t, 536 MHAIOJackdb::io_jack_t, 541 state_parser MHAIOJack::io_jack_t, 536 MHAIOJackdb::io_jack_t, 541 state_priority MHAIOJack::io_jack_t, 536 MHAIOJackdb::io_jack_t, 541 state_scheduler MHAIOJack::io_jack_t, 536 MHAIOJack::io_jack_t, 536 MHAIOJackdb::io_jack_t, 536 MHAIOJackdb::io_jack_t, 541
srate_ MHAFilter::gamma_flt_t, 497 srcfile MHAParser::parser_t, 648 srcline MHAParser::parser_t, 649 start fw_t, 315 io_file_t, 330 io_lib_t, 334 io_parser_t, 337 io_tcp_fwcb_t, 340	state_cpuload MHAIOJack::io_jack_t, 536 MHAIOJackdb::io_jack_t, 541 state_parser MHAIOJack::io_jack_t, 536 MHAIOJackdb::io_jack_t, 541 state_priority MHAIOJackdb::io_jack_t, 536 MHAIOJackdb::io_jack_t, 541 state_scheduler MHAIOJackdb::io_jack_t, 536 MHAIOJackdb::io_jack_t, 536 MHAIOJackdb::io_jack_t, 541 state_t
srateMHAFilter::gamma_flt_t, 497 srcfile	state_cpuload MHAIOJack::io_jack_t, 536 MHAIOJackdb::io_jack_t, 541 state_parser MHAIOJack::io_jack_t, 536 MHAIOJackdb::io_jack_t, 541 state_priority MHAIOJack::io_jack_t, 536 MHAIOJackdb::io_jack_t, 541 state_scheduler MHAIOJack::io_jack_t, 536 MHAIOJack::io_jack_t, 536 MHAIOJackdb::io_jack_t, 536 MHAIOJackdb::io_jack_t, 541
srate MHAFilter::gamma_flt_t, 497 srcfile	state_cpuload MHAIOJack::io_jack_t, 536 MHAIOJackdb::io_jack_t, 541 state_parser MHAIOJack::io_jack_t, 536 MHAIOJackdb::io_jack_t, 541 state_priority MHAIOJack::io_jack_t, 536 MHAIOJackdb::io_jack_t, 541 state_scheduler MHAIOJack::io_jack_t, 536 MHAIOJack::io_jack_t, 536 MHAIOJack::io_jack_t, 536 MHAIOJackdb::io_jack_t, 541 state_t fw_t, 315
srateMHAFilter::gamma_flt_t, 497 srcfile	state_cpuload MHAIOJack::io_jack_t, 536 MHAIOJackdb::io_jack_t, 541 state_parser MHAIOJack::io_jack_t, 536 MHAIOJackdb::io_jack_t, 541 state_priority MHAIOJack::io_jack_t, 536 MHAIOJackdb::io_jack_t, 541 state_scheduler MHAIOJack::io_jack_t, 536 MHAIOJack::io_jack_t, 536 MHAIOJackdb::io_jack_t, 541 state_t fw_t, 315 state_xruns

coherence::cohflt_t, 223	io_tcp_t, 354
coherence::vars_t, 224	MHAJack::client_t, 555
status	mha_drifter_fifo_t, 404
MHA_TCP::Wakeup_Event, 454	stop_event
std	io_file_t, 331
MHA_AC::stat_t, 387	io_parser_t, 338
std_vector_float	io_tcp_fwcb_t, 341
Vector and matrix processing toolbox, 52	MHAIOPortAudio::io_portaudio_t, 546
std_vector_vector_complex	MHAJack::client_t, 558
Vector and matrix processing toolbox, 53	stop_handle
std_vector_vector_float	io_file_t, 331
Vector and matrix processing toolbox, 52	io_parser_t, 338
stdcomplex	io_tcp_fwcb_t, 342
Complex arithmetics in the openMHA, 63	MHAIOPortAudio::io_portaudio_t, 546
steerFile	MHAJack::client_t, 558
acSteer, 163	stopped
steerbf, 876	fw_t, 316
~steerbf, 877	io_file_t, 330
angle_ind, 878	io_parser_t, 338
angle_src, 878	MHAJack::client_t, 557
bf_src, 878	route::interface t, 845
_ :	— ·
patchbay, 878	store
prepare, 877	mon_t, 799
process, 877	store_frame
release, 878	acsave::cfg_t, 157
steerbf, 877	acsave::save_var_t, 159
update_cfg, 878	str2val
steerbf.cpp, 1010	MHAParser::StrCnv, 109, 110
INSERT_PATCH, 1010	str2val< mha_real_t >
PATCH_VAR, 1010	MHAParser::StrCnv, 110
steerbf.h, 1010	str_error
steerbf_config, 878	MHAJack::client_t, 556
_steerbf, 879	strNames_AC
∼steerbf_config, 879	acConcat_wave_config, 143
ac, 879	strdom
bf_src_copy, 879	analysemhaplugin.cpp, 910
bf_vec, 879	latex_doc_t, 356
nangle, 879	stream
nchan, 879	ac2lsl::save_var_t, 133
nfreq, 879	ac2lsl::save_var_t< mha_complex_t >,
outSpec, 879	135
process, 879	strict_channel_match
steerbf_config, 879	io_file_t, 331
stime	strict_srate_match
MHA_TCP, 89	io_file_t, 331
stop	stride
fw_t, 315	comm_var_t, 229
io_file_t, 330	string_mon_t
io_lib_t, 334	MHAParser::string_mon_t, 653
io_parser_t, 338	string_t
io_tcp_fwcb_t, 341	MHAParser::string_t, 655

strreplace MHAParser, 107	target_channel_index MHAFilter::partitioned_convolution_t
structVersion MHAIOPortAudio::device_info_t, 543	::index_t, 518 MHAFilter::transfer_function_t, 531
subsample_delay_t MHASignal::subsample_delay_t, 762	tau coherence::vars_t, 224
subsampledelay_coeff	droptect_t, 271
ADM, 79	fader_if_t, 301
sum MHASignal::stat_t, 761	tau_attack
MHASignal::waveform_t, 771, 772	softclipper_variables_t, 869 tau_beta
sum2	adm_if_t, 186
MHASignal::stat_t, 761	tau_clip
sum_channel	softclipper_variables_t, 870
MHASignal::waveform_t, 772	tau_decay
Sumsqr MHASignal: waveform + 772	softclipper_variables_t, 870
MHASignal::waveform_t, 772 sumsqr_channel	tau_level
Vector and matrix processing toolbox, 58	calibrator_variables_t, 216 tau unit
sumsqr_frame	_
Vector and matrix processing toolbox, 59	coherence::vars_t, 224 tauattack
svc	dc::dc_vars_t, 240
analysepath_t, 200	dc_simple::dc_vars_t, 252
symmetry_scale	taudecay
MHAOvlFilter::fspacing_t, 584	dc::dc_vars_t, 241
sync	dc_simple::dc_vars_t, 252
mha_fifo_lw_t, 410	taugain
mha_fifo_thread_guard_t, 418 sysread	DynComp::dc_afterburn_vars_t, 280
MHA_TCP::Connection, 432	taurmslevel
syswrite	dc::dc_vars_t, 240
MHA_TCP::Connection, 433	tcp_connect_to
_	mha_tcp.cpp, 974
T	tcp_connect_to_with_timeout mha_tcp.cpp, 974
MHA_TCP::OS_EVENT_TYPE, 439	tcpserver
t acsave::mat4head t, 158	mhaserver_t, 718
mha_tictoc_t, 454	termination_request
tAC	MHAPlugin_Split::posix_threads_t, 701
timoConfig, 885	test_error
TEN_SPL_250_8k	io_lib_t, 335
speechnoise_t, 875	MHAParser::c_ifc_parser_t, 607
TEN_SPL_50_16k	PluginLoader::mhapluginloader_t, 833
speechnoise_t, 875	test_fail
TEN_SPL	dc_simple, 82
speechnoise_t, 875 table	test_version PluginLoader::mhapluginloader_t, 833
cpuload_t, 231	testalsadevice.c, 1011
table_t	main, 1011
MHATableLookup::table_t, 784	tftype
tail	MHAPlugin::plugin_t, 687
MHAFilter::fftfilterbank_t, 490	softclip_t, 867

The MHA Framework interface, 26	MHA_TCP::OS_EVENT_TYPE, 439
The openMHA configuration language, 33	MHA_TCP::Timeout_Watcher, 451
The openMHA Plugins (programming inter-	Timeout_Event
face), 6	MHA_TCP::Timeout_Event, 450
MHAPLUGIN_CALLBACKS_PREFIX, 8	Timeout_Watcher
MHAPLUGIN_CALLBACKS, 8	MHA_TCP::Timeout_Watcher, 451
MHAPLUGIN_DOCUMENTATION, 9	timeshift
The openMHA Toolbox library, 34	Vector and matrix processing toolbox, 49
thefullname	timo_AC, 879
MHAParser::base_t, 600	alpha_frame_AC, 881
thirdoctave_analyzer_t	alpha_hat_AC, 881
MHAFilter::thirdoctave_analyzer_t, 528	copy, <mark>880</mark>
this_outer_out	gain_wiener_AC, 881
MHASignal::doublebuffer_t, 727	gamma_post_AC, 880
thr_f	insert, 880
MHA TCP::Thread, 447	lambda_ceps_AC, 881
Thread	lambda_ml_AC, 880
MHA TCP::Thread, 447	lambda_ml_ceps_AC, 880
thread	lambda_ml_smooth_AC, 880
analysepath_t, 200	lambda_spec_AC, 881
io_tcp_t, 355	log_lambda_spec_AC, 881
MHAPlugin_Split::posix_threads_t, 701	max_q_AC, 881
MHAPlugin_Split::splitted_part_t, 711	max_val_AC, 881
thread_arg	pitch_set_first_AC, 881
MHA_TCP::Thread, 449	pitch_set_last_AC, 881
thread_attr	SPP, 881
MHA_TCP::Thread, 448	timo_AC, 880
thread_finish_event	winF0_AC, 881
MHA_TCP::Thread, 448	xi_est_AC, 881
thread_func	xi_st_, te, ser xi_ml_AC, 880
MHA_TCP::Thread, 448	timo_params, 881
thread_handle	alpha_const_limits_hz, 883
MHA_TCP::Thread, 448	alpha_const_vals, 883
thread_platform	alpha_pitch, 883
MHAPlugin_Split::split_t, 705	beta_const, 883
thread platform t	delta_pitch, 883
MHAPlugin_Split::thread_platform_t, 712	f0_high, 882
thread_start	f0_low, 882
analysispath.cpp, 910	gain min db, 883
MHAPlugin_Split::posix_threads_t, 700	in_cfg, 882
thread_start_func	kappa_const, 883
mha_tcp.cpp, 974	lambda thresh, 883
thread_startup_function	noisePow_name, 883
MHAIOTCP.cpp, 994	prior_q, 883
threshold	timo_params, 882
	winF0, 883
droptect_t, 271	
softclipper_t, 868	xi_min_db, 882
softclipper_variables_t, 870	xi_opt_db, 883
mbachain::pluge t 462	timoConfig, 883
mhachain::plugs_t, 462	~timoConfig, 885
timeout	ac, 885

	alpha_const, 885	gain_min_db, <mark>890</mark>
	alpha_frame, 886	kappa_const, 889
	alpha_hat, 886	lambda_thresh, 889
	alpha_prev, 886	noisePow_name, 890
	copy_AC, 885	on_model_param_valuechanged, 889
	fftlen, 885	patchbay, 890
	GLRexp, 886	prepare, 889
	GLR, 886	prepared, 890
	•	
	gain_min, 885	prior_q, 890
	gain_wiener, 886	process, 888
	gamma_post, 886	release, 889
	lambda_ceps, 886	spp, 890
	lambda_ceps_prev, 886	timoSmooth, 888
	lambda_ml_ceps, 886	update_cfg, 889
	lambda_ml_full, 886	win_f0, 890
	lambda_ml_smooth, 886	xi_min_db, 889
	lambda_spec, 886	xi_opt_db, 890
	log_lambda_spec, 886	timoSmooth.cpp, 1012
	logGLRFact, 886	INSERT PATCH, 1012
	max q, 886	INSERT VAR, 1012
	max val, 886	PATCH VAR, 1012
	mha_fft, 885	timoconfig.cpp, 1011
	nchan, 885	CHANLOOP, 1011
	nfreq, 885	EPSILON, 1011
	noisePow, 886	LPSCALE, 1011
	•	•
	ola_powspec_scale, 885	OVERLAP_FACTOR, 1011
	params, 885	POWSPEC_FACTOR, 1011
	pitch_set_first, 886	timoconfig.h, 1011
	pitch_set_last, 886	timosmooth.h, 1012
	powSpec, 886	tmp_spec
	priorFact, 886	MHAFilter::smoothspec_t, 527
	process, 885	tmp_wave
	q_high, 885	MHAFilter::smoothspec_t, 527
	q_low, 885	to_from
	spec_out, 886	acTransform_wave, 167
	tAC, 885	acTransform_wave_config, 168
	timoConfig, 885	total_read
	winF0, 885	io_file_t, 332
	xi_est, 886	transducers.cpp, 1012
	xi_min, 885	kw index2type, 1013
	xi_ml, 886	rmslevelmeter, 1013
	xiOpt, 886	rtcalibrator, 1013
tim	oSmooth, 887	vint_0123n1, 1013
LIIII	~timoSmooth, 888	_
		transfer_function_t
	alpha_const_limits_hz, 890	MHAFilter::transfer_function_t, 530
	alpha_const_vals, 890	trigger_processing
	alpha_pitch, 889	MHAPlugin_Split::split_t, 704
	beta_const, 889	MHAPlugin_Split::splitted_part_t, 710
	delta_pitch, 889	trim
	f0_high, 889	MHAParser, 107
	f0_low, 889	try_accept

MHA_TCP::Server, 442	adm_if_t, 185
try_write	calibrator_t, 215
MHA_TCP::Connection, 435	coherence::cohflt_if_t, 220
tv1	dc::dc_if_t, 236
mha_tictoc_t, 454	dc::wideband_inhib_vars_t, 244
tv2	delay::interface_t, 256
mha_tictoc_t, 454	DynComp::dc_afterburn_t, 278
tz	DynComp::gaintable_t, 283
mha_tictoc_t, 454	frequency_translator_t, 312
	MHA AC::ac2matrix t, 376
U	MHA_AC::acspace2matrix_t, 380
rt_nlms_t, 848	MHA_AC::stat_t, 387
UCL	MHAMultiSrc::spectrum_t, 569
AuditoryProfile::parser_t::ear_t, 206	MHAMultiSrc::waveform_t, 570
AuditoryProfile::profile_t::ear_t, 209	MHAParser::mhaconfig_mon_t, 639
UPrew	MHAPlugin Split::split t, 704
prediction_error_config, 841	mhachain::chain_base_t, 458
UPrewW	nlms t, 807
prediction_error_config, 841	overlapadd::overlapadd_if_t, 815
UbufferPrew	route::interface_t, 845
prediction_error_config, 840	- ·
Uflt	smoothgains_bridge::overlapadd_if_←
rt_nlms_t, 848	t, 864
uint_mode	softclip_t, 867
addsndfile::addsndfile_if_t, 171	spec2wave_if_t, 871
uint_vector_t	wave2spec_if_t, 893
MHASignal::uint_vector_t, 765	update_bbgain
underflow	gain::gain_if_t, 321
MHAFilter::polyphase_resampling_t, 522	update_burner
unit	DynComp::dc_afterburn_t, 277
MHAOvIFilter::fscale_t, 582	update_cfg
unit2hz	acConcat_wave, 142
MHAOvIFilter::scale_var_t, 591	acPooling_wave, 151
unlock_channels	acSteer, 163
fw_vars_t, 319	acTransform_wave, 167
unlock_srate_fragsize	delaysum::delaysum_if_t, 258
fw_vars_t, 319	doasvm_classification, 263
unset_fb_pars	doasvm_feature_extraction, 267
DynComp::dc_afterburn_t, 277	example6_t, 299
up	fader_if_t, 301
MHASignal::schroeder_t, 754	fftfilterbank::fftfb_interface_t, 308
up_incl	lpc, 359
MHAParser::range_var_t, 651	lpc_bl_predictor, 362
up_limit	lpc_burglattice, 366
MHAParser::range_var_t, 651	multibandcompressor::interface_t, 803
MHASignal::quantizer_t, 748	noise_t, 809
up_thresh	noisePowProposedScale::interface_t, 811
acPooling_wave_config, 153	plugin_interface_t, 822
update	prediction_error, 837
ac2lsl::ac2lsl_t, 128	sine_t, 861
ac2wave_if_t, 137	steerbf, 878
addsndfile::addsndfile_if_t, 170	timoSmooth, 889
/	-

update_coeffs	upper_threshold
MHAFilter::fftfilter_t, 484	acPooling_wave, 151
MHAFilter::fftfilterbank_t, 488	upsample.cpp, 1013
update_dc	upsampling_factor
dc_simple::dc_if_t, 247	MHAFilter::polyphase_resampling_t, 522
update_filter	upscale
MHAFilter::iir_filter_t, 501	MHASignal::quantizer_t, 748
update_frame	us_t, 890
addsndfile::level_adapt_t, 173	antialias, 891
fader_wave::level_adapt_t, 305	prepare, 891
update_gain	process, 891
gain::gain_if_t, 321	ratio, 891
update_gain_mon	release, 891
dc_simple::dc_if_t, 247	us_t, 891
update_hz	use_date
MHAOvlFilter::fscale_bw_t, 580	wavrec_t, 898
MHAOvlFilter::fscale_t, 582	use_frozen_
update_level	cfg_t, 218
dc_simple::dc_if_t, 247	use_jack_transport
update_level_mon	MHAIOJackdb::io_jack_t, 540
dc_simple::dc_if_t, 247	MHAJack::client_t, 558
update_levels	use_mat
multibandcompressor::plugin_signals_t,	acmon::ac_monitor_t, 146
804	use_own_ac
	altplugs_t, 198
update_m	use_sine
matrixmixer::matmix_t, 373	cpuload_t, 231
update_minmax	use_smoothspec
gain::gain_if_t, 321	smoothgains_bridge::smoothspec_
update_monitors	wrap_t, 865
dc::dc_if_t, 236	use wbinhib
update_mu	dc::dc vars t, 241
MHAFilter::adapt_filter_t, 475	user
update_ntaps	MHAParser::window_t, 676
MHAFilter::adapt_filter_t, 475	- ·
update_parser	user_err_msg
windowselector_t, 902	MHAIO lock opp. 980
update_proc_load	MHAIO lackdh ann 085
mhachain::plugs_t, 461	MHAIOJackdb.cpp, 985
update_ramplen	MHAIOPartAudia and 001
altplugs_t, 197	MHAIOPortAudio.cpp, 991
update_recmode	MHAIOTCP.cpp, 995
acmon::acmon_t, 148	user_t
update_selector_list	MHAWindow::user_t, 798
altplugs_t, 197	username
update tau level	MHA_AC::ac2matrix_helper_t, 375
calibrator_t, 215	userwnd
— ·	windowselector_t, 902
updated	0
windowselector_t, 902	v_G
updater	prediction_error_config, 840
MHAOvlFilter::fscale_bw_t, 580	vFlog
MHAOvlFilter::fscale_t, 582	DynComp::gaintable_t, 285

vGCC_ac	variable_t
doasvm_feature_extraction_config, 268	MHAParser::variable_t, 657
vGCC_con	variables, 4
acConcat_wave_config, 143	acsave::acsave_t, 156
vGCC_name	varlist
doasvm_classification, 263	ac2lsl::ac2lsl_t, 128
doasvm_feature_extraction, 267	ac2lsl::cfg_t, 130
vGCC	acmon::acmon t, 148
acConcat_wave_config, 143	acsave::acsave_t, 156
doasym_feature_extraction_config, 268	acsave::cfg_t, 158
vLTASS_combined_lev	varlist t
speechnoise.cpp, 1008	acsave::acsave_t, 155
vLTASS_female_lev	vars
speechnoise.cpp, 1008	ac2lsl::ac2lsl_t, 128
vLTASS_freq	acmon::acmon_t, 148
speechnoise.cpp, 1008	analysispath_if_t, 202
vLTASS male lev	calibrator t, 215
speechnoise.cpp, 1008	coherence::cohflt_if_t, 220
vMHAOrigFreq	MHAKernel::algo_comm_class_t, 564
speechnoise.cpp, 1008	-
	vars_t coherence::vars t, 224
vMHAOrigSpec	<u>— '</u>
speechnoise.cpp, 1008	MHAOvlFilter::overlap_save_filterbank_←
vOlnoiseFreq	t::vars_t, 589
speechnoise.cpp, 1008	vbark
vOlnoiseLev	MHAOvlFilter::barkscale, 99
speechnoise.cpp, 1008	vbin1
val2str	MHAOvlFilter::fftfb_t, 576
MHAParser::StrCnv, 110–112	vbin2
validate	MHAOvlFilter::fftfb_t, 576
AuditoryProfile::parser_t::fmap_t, 207	vcomplex_mon_t
MHAParser::keyword_list_t, 626	MHAParser::vcomplex_mon_t, 659
MHAParser::kw_t, 629	vcomplex_t
MHAParser::range_var_t, 651	MHAParser::vcomplex_t, 661
validator_channels	vec
mhasndfile.cpp, 999	ac2lsl::save_var_t< mha_complex_t >,
validator_length	135
mhasndfile.cpp, 999	vec_y
value	MHATableLookup::linear_table_t, 783
AuditoryProfile::parser_t::fmap_t, 207	Vector and matrix processing toolbox, 36
MHASignal::ringbuffer_t, 750	assign, 48, 49
MHASignal::spectrum_t, 758	bin2freq, 44
MHASignal::waveform_t, 770, 771	channels, 41
mha_signal.hh, 971	clear, 48
Vector and matrix processing toolbox, 49-	colored_intensity, 56
52	conjugate, 59
value_type	copy_channel, 55
mha_dblbuf_t, 395	db2lin, 42
mha_fifo_t, 415	dbspl2pa, 43
valuechanged	dupvec, 45
MHAParser::base_t, 599	dupvec_chk, 46
variable, 4	equal_dim, 46, 47

for_each, 42	vstring_t
freq2bin, 44	MHAParser::vstring_t, 673
integrate, 47	vy
lin2db, 42	MHATableLookup::linear_table_t, 783
max, 58	• – –
maxabs, 56, 57	W
mha_real_t, 41	MHA_TCP::OS_EVENT_TYPE, 439
min, 58	MHAFilter::adapt_filter_state_t, 474
operator*=, 53, 54	W
operator $^-$, 55	ac2wave_t, 138
operator+=, 53, 54	doasvm_classification, 263
operator-=, 53	MHAOvIFilter::fftfb_t, 576
operator/=, 54	w_out
pa22dbspl, 43	combc_t, 227
·	WINAPI
pa2dbspl, 42	mha_plugin.hh, 957
rad2smp, 45	wirs fft
range, 41	MHAFilter::fftfilter t, 486
rmslevel, 56, 57	wInput
sec2smp, 43	MHAFilter::fftfilter_t, 486
size, 47, 48	wInput_fft
smp2rad, 44	MHAFilter::fftfilter t, 485
smp2sec, 43	wOutput
std_vector_float, 52	MHAFilter::fftfilter_t, 486
std_vector_vector_complex, 53	wOutput_fft
std_vector_vector_float, 52	MHAFilter::fftfilter_t, 486
sumsqr_channel, 58	wait
sumsqr_frame, 59	MHA_TCP::Event_Watcher, 438
timeshift, 49	wait_for_decrease
value, 49–52	mha fifo posix threads t, 412
vF	mha_fifo_thread_platform_t, 420
DynComp::gaintable_t, 285	wait_for_increase
vfloat_mon_t	mha_fifo_posix_threads_t, 412
MHAParser::vfloat_mon_t, 663	mha_fifo_thread_platform_t, 420
vfloat_t	Wakeup_Event
MHAParser::vfloat t, 665	MHA_TCP::Wakeup_Event, 453
vfreq	wave2spec
MHAOvlFilter::barkscale, 99	MHASignal::fft t, 728
vint_0123n1	plugindescription_t, 824
transducers.cpp, 1013	wave2spec.cpp, 1013
vint_mon_t	MHAPLUGIN_OVERLOAD_OUTDOM↔
MHAParser::vint mon t, 667	AIN, 1013
vint t	wave2spec_if_t, 892
MHAParser::vint_t, 669	algo, 893
vL	nfft, 893
DynComp::gaintable_t, 284	
vmax	nwnd, 893
	patchbay, 893
gain::gain_if_t, 321	prepare, 893
vmin	process, 893
gain::gain_if_t, 321	return_wave, 893
vstring_mon_t	update, 893
MHAParser::vstring_mon_t, 671	wave2spec_if_t, 893

window_config, 893	use_date, 898
wndpos, 893	wavrec_t, 897
wave2spec_scale	wavwriter_t, 898
MHASignal::fft_t, 729	\sim wavwriter_t, 899
wave2spec_t, 894	act_, 899
~wave2spec_t, 895	cf_, 899
calc_in, 896	close_session, 899
calc_pre_wnd, 895	data, 899
ft, 895	fifo, 899
in_buf, 896	minw_, 899
npad1, 895	process, 899
npad2, 895	sf, 899
•	•
nwnd, 895	wavwriter_t, 899
nwndshift, 895	write_thread, 899
process, 895	writethread, 899
spec_in, 896	wb_inhib_cfg_t
wave2spec_t, 895	dc::wb_inhib_cfg_t, 243
window, 896	wbinhib
wave2wave	dc::dc_if_t, 236
plugindescription_t, 824	weights
wave_fifo	dc::wb_inhib_cfg_t, 243
analysepath_t, 200	dc::wideband_inhib_vars_t, 244
wave_in	delaysum::delaysum_if_t, 258
MHAPlugin_Split::domain_handler_t, 696	delaysum::delaysum_t, 260
wave in1	what
overlapadd::overlapadd_t, 817	MHA_Error, 407
wave_out	white
MHAPlugin_Split::domain_handler_t, 696	speechnoise_t, 875
MHAPlugin_Split::split_t, 706	wideband_inhib_vars_t
wave_out1	dc::wideband_inhib_vars_t, 244
overlapadd::overlapadd_t, 818	win_f0
• —	_
wave_reader	timoSmooth, 890
addsndfile, 78	winF0
waveform_proxy_t	timo_params, 883
addsndfile::waveform_proxy_t, 177	timoConfig, 885
waveform_t	winF0_AC
MHA_AC::waveform_t, 388	timo_AC, 881
MHAMultiSrc::waveform_t, 570	window
MHASignal::waveform_t, 769	MHAFilter::smoothspec_t, 527
wavrec.cpp, 1013	overlapadd::overlapadd_if_t, 816
DEBUG, 1014	wave2spec_t, 896
wavrec_t, 896	window_config
fifolen, 898	spec2wave_if_t, 871
minwrite, 898	wave2spec_if_t, 893
patchbay, 898	window t
prefix, 898	MHAParser::window_t, 675
prepare, 897	windowselector.cpp, 1014
process, 897	windowselector.h, 1014
record, 898	windowselector_t, 900
release, 897	~windowselector_t, 900
	
start_new_session, 897	get_window_data, 901

insert_items, 901	MHAFilter::blockprocessing_polyphase
invalidate_window_data, 902	_resampling_t, 477
patchbay, 902	MHAFilter::polyphase_resampling_t, 521
update_parser, 902	MHAJack::port_t, 560
updated, 902	MHASignal::matrix t, 744
userwnd, 902	MHASignal::ringbuffer_t, 751
windowselector_t, 901	MHASignal::uint_vector_t, 766
wnd, 902	mha_drifter_fifo_t, 402
wnd, 302 wndexp, 902	mha_fifo_lw_t, 409
wndexp, 302 wndtype, 902	mha fifo t, 415
wnd wnd	write buf
addsndfile::level_adapt_t, 173	overlapadd::overlapadd_t, 818
fader_wave::level_adapt_t, 305	spec2wave_t, 873
windowselector_t, 902	write_event
wnd_bartlett	MHA_TCP::Connection, 436
	write_float
MHAParser::window_t, 675	mha_parser.cpp, 951
wnd_blackman	write ptr
MHAParser::window_t, 675	mha fifo t, 417
wnd_funs	write thread
mha_windowparser.cpp, 976	wavwriter t, 899
wnd_hamming	write_wave
MHAParser::window_t, 675	mhasndfile.cpp, 999
wnd_hann	mhasndfile.h, 1000
MHAParser::window_t, 675	writeaccess
wnd_rect	MHAParser::base_t, 599
MHAParser::window_t, 675	writer started
wnd_user	mha_drifter_fifo_t, 404
MHAParser::window_t, 675	writer_xruns_in_succession
wndexp	mha_drifter_fifo_t, 405
overlapadd::overlapadd_if_t, 816	writer_xruns_since_start
windowselector_t, 902	mha drifter fifo t, 405
wndlen	writer xruns total
doasvm_feature_extraction_config, 268	mha_drifter_fifo_t, 405
MHAParser::mhaconfig_mon_t, 639	writethread
mhaconfig_t, 464	
wndpos	wavwriter_t, 899 Writing openMHA Plugins. A step-by-step tu-
overlapadd::overlapadd_if_t, 816	
wave2spec if t, 893	torial, 10
wndtype	wtype
windowselector_t, 902	MHAParser::window_t, 676
worker_thread_priority	wtype_t
MHAPlugin_Split::split_t, 705	MHAParser::window_t, 675
worker_thread_scheduler	X
MHAPlugin_Split::split_t, 705	MHA TCP::OS EVENT TYPE, 439
wout	MHAFilter::adapt_filter_state_t, 474
matrixmixer::cfg_t, 371	X
route::process_t, 846	doasvm_classification, 263
wout_ac	xfun
route::process_t, 846	MHATableLookup::xy_table_t, 788
write	xi_est
MHA_TCP::Connection, 435	timoConfig, 886
wii in_i oiooiiiidolioii, 430	amocomy, ood

```
xi_est_AC
                                               zeros
                                                   ac2wave_if_t, 137
    timo_AC, 881
xi min
                                               zerowindow
    timoConfig, 885
                                                   overlapadd::overlapadd_if_t, 816
xi_min_db
    timo_params, 882
    timoSmooth, 889
xi ml
    timoConfig, 886
xi_ml_AC
    timo_AC, 880
xi_opt_db
    timo_params, 883
    timoSmooth, 890
xiOpt
    noise Pow Proposed Scale :: noise Pow {\leftarrow}
        Proposed, 813
    timoConfig, 886
xiOptDb
    noisePowProposedScale::interface_t, 811
xmax
    MHATableLookup::linear_table_t, 783
xmin
    MHATableLookup::linear_table_t, 783
Xs
    MHAFilter::fftfilterbank_t, 489
XW
    MHAFilter::fftfilterbank_t, 489
xy_table_t
    MHATableLookup::xy_table_t, 786
xyfun
    MHATableLookup::xy table t, 788
У
    doasvm_classification, 263
y0
    dc_simple::dc_t::line_t, 250
y_previous
    rt_nlms_t, 849
YPrew
    prediction_error_config, 841
yfun
    MHATableLookup::xy_table_t, 788
Yn
    MHAFilter::complex_bandpass_t, 481
    MHAFilter::iir_ord1_real_t, 504
Ys
    MHAFilter::fftfilterbank_t, 490
yw
    MHAFilter::fftfilterbank t, 489
    MHAFilter::fftfilterbank_t, 490
```