## Energy Management Energy Analyzer Type EM24 DIN





- Dimensions: 4-DIN modules
- Protection degree (front): IP50
- RS485 serial output (on request) (MODBUS-RTU), iFIX SCADA compatibility
- Dupline communication capabiliy (DP option)
- Application adaptable display and programming procedure (Easyprog function)
- Easy connections management
- MID "annex MI-003" (Measuring Instruments Directive) compliant

- Class 1 (kWh) according to EN62053-21
- Class B (kWh) according to EN50470-3
- Class 2 (kvarh) according to EN62053-23
- Accuracy ±0.5 RDG (current/voltage)
- Energy analyzer
- Instantaneous variables readout: 4 DGT
- Energies/gas/water readout: 7+1 DGT
- System variables: VLL, VLN, Admd max, VA, VAdmd, VAdmd max, W, Wdmd, Wdmd max, var, PF, Hz, Phasesequence.
- Single phase variables: VLL, VLN, A, VA, W, var, PF
- Energy measurements: total and partial kWh and kvarh or based on 4 different tariffs; single phase measurements
- Gas, cold water, hot water, kWh remote heating measurements
- Hour counter (6+2 DGT)
- TRMS measurements of distorted sine waves (voltages/currents)
- Self power supply (AV0-AV2-AV9 inputs)
- Auxiliary power supply (AV5-AV6 inputs)
- 3 digital inputs for tariff selection, DMD synch or gas/ water (hot-cold) and remote heating metering (on request)
- 2 digital outputs for pulses or for alarms or as a mix of them (on request)

### **Product Description**

Three-phase energy analyzer with built-in configuration joystick and LCD data displaying; particularly indicated for active and reactive energy metering and for cost allocation. Housing for DINrail mounting with IP50 (front) protection degree. Direct connection up to 65A and by means of external current and potential trans-

formers. Moreover the meter can be provided with digital outputs that can be either for pulse proportional to the active and reactive energy being measured or for alarm outputs. In alternative the RS485 communication port and 3 digital inputs or Dupline port and 3 digital inputs are available as an option.

### How to order EM24 DIN AV5 3 X O2 X

Model —		T T	Т'
Range code ———			
System —		_	
Power supply —			
Inputs/Outputs —			
Option —			

## **Type Selection**

(\*\*) on request.

#### Range codes **System** Inputs/Outputs **Power supply** AV5: AV5: 400V<sub>LL</sub> AC - 1/5 XX: 1: 1-phase, 2-wire; none (\*) X: Self power supply (10)A (CT connection) (\*) 3-phase, 3-wire, 02: dual open collector (See "Power supply AV6: 120V<sub>LN</sub>/208V<sub>LL</sub> AC specifications") (\*) 3-phase, 4-wire type (dual pulse or one 1/5(10)A (VT/PT and CT balanced load (\*\*) 18 to 60VAC/DC (48 pulse + one alarm or connections) (\*) to 62Hz) (\*\*) 115/230 VAC (48 to 3: balanced and dual alarm) (\*) AV0: 120V<sub>LN</sub>/208V<sub>LL</sub> unbalanced load: R2: dual relay type (func-AC -10(65)A 3-phase, 4-wire; tions as per "O2") (\*\*)(°) 62Hz) (\*) (direct connection)(\*\*) Note: "L" and "D" power XS: RS485 port (\*\*) 3-phase, 3-wire; AV2: 133-230V<sub>LN</sub>CA 2-phase, 3-wire; IS: 3 digital inputs for tariff supplies only for AV5 230-400V<sub>LL</sub>AC 1-phase, 2-wire (\*) selection or Gas / and AV6 inputs; "X" 10(65)A (direct water / remote heating power supply only connection) (\*\*) for AV0, AV2 and metering plus RS485 400V<sub>LL</sub> AC - 10(65)A (\*) **Options** port (\*) AV9 inputs. (direct connection) DP: Dupline port plus 3 digital inputs for Gas / X: none (\*) water / remote heating "Annex B" of MID metering (°°) (EC type certificate) (\*) as standard.

(°°) available if the range code is either "AV2" or "AV5".

(°) not available if the range code is "AV2".



## Input specifications

Pated inputs	System type: 2 phase
Rated inputs Current type	System type: 3-phase Galvanic insulation by means
<b>71</b> 5 €	of built-in CT's (AV5 and AV6
	models). By direct connection (A)(0, A)(2 and A)(0)
Current range (by CT)	tion (AV0, AV2 and AV9) AV5 and AV6: 1/5(10)A
Current range (direct)	AV0: 10(65)A; AV2: 10(65)A;
- ' '	AV9: 10(65)A
Voltage	AV5: 400 VLL
Voltage	AV0: 120VLN/208 VLL AV2: 230/400 VLL
	AV9: 400 VLL
Voltage by VT/PT	AV6: 120VLN/208 VLL
Accuracy (Display + RS485)	lb: see below, Un: see below
(@25°C ±5°C, R.H. ≤60%, 48 to 62Hz) AV5 model	In EA Impy 10A Lin 160
Avs model	In: 5A, Imax: 10A; Un: 160 to 480VLN (277 to 830VLL)
AV6 model	In: 5A, Imax: 10A; Un: 40 to
AVO madal	144VLN (70 to 250VLL)
AV0 model	Ib: 10A, Imax: 65A; Un: 96 to 144VLN (166 to 250VLL)
AV2 model	lb: 10A, Imax: 65A, Un: 113
A) (O a -1 - 1	to 265VLN (196 to 460VLL)
AV9 model	Ib: 10A, Imax: 65A; Un: 184 to 276VLN (318 to 480VLL)
Current	10 21 0 VEI V (0 10 10 400 VEL)
AV5, AV6 models	From 0.002In to 0.2In:
	±(0.5% RDG +3DGT) From 0.2In to Imax:
	±(0.5% RDG +1DGT).
AV0, AV2, AV9 models	From 0.004lb to 0.2lb:
	±(0.5% RDG +3DGT) From 0.2lb to Imax:
	±(0.5% RDG +1DGT).
Phase-neutral voltage	In the range Un: ±(0,5%
Phase phase voltage	RDG +1DGT) In the range Un: ±(1% RDG
Phase-phase voltage	+1DGT)
Frequency	±0.1Hz (45 to 65Hz)
Active and Apparent power Power Factor	±(1%RDG +2DGT) ±[0.001+1%(1.000 - "PF
1 Ower 1 actor	RDG")]
Reactive power	±(2%RDG +2DGT)
Active energy	Class 1 according to EN62053-21 and MID
	Annex MI-003 Class B
	according to EN50470-3
Reactive energy	Class 2 according to
AV5, AV6 models	EN62053-23 In: 5A, Imax: 10A;
	0.1 In: 0.5A,
A) (O, A)	Start up current: 10mA
AV0, AV2, AV9 models	Ib: 10A, Imax: 65A; 0.1 lb: 1.0A
	Start up current: 40mA
Energy additional errors	
Influence quantities	According to EN62053-21, EN50470-3, EN62053-23
Temperature drift	≤200ppm/°C
Sampling rate	1600 samples/s @ 50Hz
	1900 samples/s @ 60Hz
Display refresh time	750 ms
Display	3 lines (1 x 8 DGT; 2 x 4 DGT)

Type Instantaneous variables read-out Energies	LCD, h 7mm 4 DGT Imported Total/Partial/ Tariff: 7+1DGT or 8DGT; Exported Total/Partial/ Tariff: 6+1DGT or 7DGT
Overload status	(with "-" sign) EEEE indication when the value being measured is exceeding the "Continuous inputs overload" (maximum measurement capacity)
Max. and Min. indication	Max. instantaneous variables: 9999; energies: 9999 999.9 or 99 999999. Min. instantaneous variables: 0.000; energies 0.0
LEDs	Red LED (Energy con-
AV5, AV6 models  AV0, AV2, AV9 models	sumption) 0.001 kWh/kvarh by pulse if CT ratio by VT ratio is ≤7; 0.01 kWh/kvarh by pulse if CT ratio x VT ratio is > 7.1 ≤ 70.0; 0.1 kWh/kvarh pulse if CT ratio x VT ratio is > 70.1 ≤ 700.0; 1 kWh/kvarh by pulse if CT ratio x VT ratio is > 700.1; 0.001kWh/kvarh by pulse
Max frequency	16Hz, according to EN50470-3
Measurements	See "List of the variables
Method Coupling type	that can be connected to:" TRMS measurements of distorted wave forms. Direct for AV0, AV2 and AV9 models. By means of exter- nal CT's for AV5 and AV6
Crest factor	Ib 10A ≤4 (91A max. peak) In 5A ≤3 (15A max. peak)
Current Overloads	The second secon
Continuous	1/5(10) A: 10A, @ 50Hz 10(65) A: 65A, @ 50Hz
For 500ms For 10ms	1/5(10) A: 200A, @ 50Hz 10(65) A: 1920A max, @ 50Hz
Voltage Overloads	
Continuous For 500ms	1.2 Un 2 Un
Input impedance	2 011
208VL-L (AV6)	>1600KΩ
208VL-L (AV0)	Refer to "Power Consumption"
230/400VL-L (AV2)	Refer to "Power Consumption"
400VL-L (AV5) 400VL-L (AV9)	$>$ 1600K $\Omega$ Refer to "Power Consumption"
1/5(10)A (AV5-AV6) 10(65)A (AV0-AV2-AV9)	< 0.3VA < 4VA
Frequency	45 to 65 Hz
Joystick	For variable selection and programming of the instrument working parameters



## **Output specifications**

Digital outputs		Note	The meters equipped with
Pulse type			the relay outputs ("AV0"
Number of outputs	Up to 2, independent.		and "AV9" models with
	Programmable from 0.001		"R2" option) work even if
	to 10.00kWh/kvarh by		VL3 is missing (VL1, VL2
_	pulse.		and neutral have to be
Type	Outputs connectable to the		available)(see table "work-
	energy meters (kWh/kvarh)		ing mode notes")
Pulse duration	≥100ms < 120msec (ON),	RS485	
	≥120ms (OFF), according	Type	Multidrop, bidirectional
<b>A.</b>	to EN62052-31		(static and dynamic vari-
Alarm type			ables)
Number of outputs	Up to 2, independent	Connections	2-wire
Alarm modes	Up alarm, down alarm (see		Max. distance 1000m
	the table "List of the	Addresses	247, selectable by means
	variables that can be		of the front joystick
0	connected to")	Protocol	MODBUS/JBUS (RTU)
Set-point adjustment	From 0 to 100% of the dis-	Data (bidirectional)	, ,
	play scale	Dynamic (reading only)	System and phase vari-
Hysteresis	From 0 to full scale		ables: see table "List of
On-time delay	0 to 255s		variables"
Output status	Selectable; normally	Static (reading and writing)	All the configuration
	de-energized or normally		parameters.
Min was a super time a	energized	Data format	1 start bit, 8 data bit, no
Min. response time	≤ 700ms, filter excluded,		parity,1 stop bit
Note	set-point on-time delay: "0 s"	Baud-rate	4800, 9600 bit/s
Note	The 2 digital outputs can	Driver input impedance	1/5 unit load
	also work as a dual pulse		Maximum 160 transceivers
	output, dual alarm output,		on the same bus.
	one pulse output and one	Insulation	By means of optocouplers,
	alarm output.		4000 VRMS output to
Static output			measuring input,
Purpose	For pulse output or alarm		4000 VRMS output to
•	output		power supply input.
Signal	V <sub>ON</sub> 1.2 VDC/ max. 100 mA	Note:	The meters equipped with
	V <sub>OFF</sub> 30 VDC max.		the communication port
Insulation	By means of optocuplers,		("AV0" and "AV9" models
	4000 VRMS output to		with "XS" and "IS" options)
	measuring inputs,		work even if VL3 is missing
	4000 VRMS output to		(VL1, VL2 and neutral have
Delay systems	power supply input.		to be available)(see table
Relay output	For clares output or suits		"working mode notes")
Purpose	For alarm output or pulse		
Tuno	output		
Туре	Relay, SPST type		

AC 1-5A @ 250VAC DC 12-5A @ 24VDC AC 15-1.5A @ 250VAC DC 13-1.5A @ 24VDC

4000 VRMS output to measuring input 4000 VRMS output to power supply input.

Insulation



## **Dupline specifications**

Counters Used Dupline function Number of counters Counter range Used channels	Multiplexer for counter values 6 per instrument 128 per network 0 99 999 999 B to F_	Available variables	variables) M1 to N8 (4th group of 16 variables) O1 to P8 (5th group of 16 variables) All, except for the "max" variables
Multiplexer Reset Value Counter reset  Available counters  Available counters  B2 to B8 B1 C1 to F8 Enable/disable function for all the counters kWh tot, -kWh tot, kvarh tot, -kvarh tot, kWh t1, kWh t2, kWh L1, kWh L2, kWh L3, counter dig. in. 1,		Synchro/Tariff input Used Dupline functions Used channels Working mode	Monostable (push-button) Realtime A5 Selectable: • none • Wdmd synchronization • total and partial energy meter (kWh, kvarh) managed by time periods (t1-t2).
	counter dig. in. 2, countr dig. in. 3, hour counter.	Alarms Used Dupline function	Monostable (push-button)
Analogue variables Used Dupline function Number of variables	Multiplexer for analogue values 8 per instrument 80 per network	Used channells  Number of alarms	Selectable (A1 to P8). No control that the selected channels are not used for counters or analog variables.  2 per instrument
Dupline data format Full scale value	3 1/2 DGT BCD Selectable from 1.999 to 1999M	Alarm modes	Up alarm, down alarm (see the table "List of the variables that can be
Used channels Multiplexer Value	depending on the number of variables A1 to A4 G1 to H8 (1st group to 16 variables) I1 to J8 (2nd group of 16 variables) K1 to L8 (3th group of 16	Set-point adjustment  Hysteresis On-time delay Output status Available variables	connected to") From 0 to 100% of the display scale From 0 to full scale 0 to 255s Normally energised All, except for the "max" variables

## Digital input specifications

Number of inputs Input frequency Prescaler adjustment

Contact measuring voltage Contact measuring current Input impedance Contact resistance

Working modes (DP version excluded)

20Hz max, duty cycle 50% From 0.1 to 999.9 m³ or kWh per pulse 5VDC +/- 5% 10mA max  $680\Omega$  ≤100 $\Omega$ , closed contact ≥500k $\Omega$ , open contact

### Selectable:

 total and partial energy meters (kWh and kvarh) without digital inputs;
 total and partial energy

• total and partial energy meters (kWh and kvarh) managed by time periods (t1-t2-t3-t4), W dmd synchronisation (the synchronisation is made every time the tariff changes) and GAS (m³) or WATER (hotcold m³) or remote heating (kWh) meters;

• total and partial energy meters (kWh and kvarh)

Working modes (DP version only)

Note

Insulation

managed by time periods (t1-t2), W dmd synchronisation (the synchronisation is made independently from the tariff selection) and GAS (m³) or WATER (hot-cold m³) or remote heating (kWh) meters;
• total energy (kWh, kvarh) and GAS, WATER (hot-cold

and GAS, WATER (hot-cold m³) and remote heating meters (3 choices only).

Selectable:
• GAS (m³) or WATER (hot-

cold m³) or remote heating (kWh) meters
The energy metering is only made by means of the analogue inputs.
By means of optocouplers, 4000 VRMS digital inputs to measuring inputs,

4000 VRMS digital inputs to power supply input.



## **Software functions**

Password  1st level 2nd level	Numeric code of max. 4 digits; 2 protection levels of the programming data: Password "0", no protec- tion Password from 1 to 9999, all data are protected	Filter Operating range Filtering coefficient Filter action	0 to 100% of the input display scale 1 to 32 Measurements, serial output (fundamental variables: V, A, W and their derived ones).
System selection System 3-Pn unbalanced load System 3-P unbalanced load System 3-P.1 (only AV5 and AV6) balanced load	3-phase (4-wire) 3-phase (3-wire) 3-phase (3-wire) one current and 3-phase to phase	Displaying	Up to 3 variables per page (see « Display pages ») 8 different set of variables available (see « Display pages ») according to the application being selected
System 2-P System 1-P	voltage measurements 3-phase (4-wire) one cur- rent and 1-phase (L1) to neutral voltage measure- ment 2-phase (3-wire) 1-phase (2-wire)	Reset	By means of the front joystick: - dmd and dmd max; - total energies (kWh and kvarh) and gas/water; - partial energies and tariffs: kWh, kvarh
Transformer ratio VT (PT) CT	1.0 to 999.9 / 1000 to 6000 (only AV5 and AV6) 1.0 to 999.9 / 1000 to 9999 / 10.00k to 60.00k (only AV5 and AV6). The maximum power being measured cannot exceed 210 MW (calculated as maximum input voltage and current, see the "Accuracy" paragraph before). The maximum VT by CT ratio is 48600. For MID complaint applications the maximum power being measured is 25MW.	Easy connection function AV0, AV2 and AV9 models AV5-AV6-AV0-AV2-AV9 models	Automatic phase sequence detection with current and voltage synchronisation. For all the display selections, both energy and power measurements are independent from the current direction. The displayed energy is always "imported" with the only exception of "F" and "H" types (see "display pages" table). For those latter selections the energies can be either "imported" or "exported" depending on the current direction.

## **General specifications**

Operating temperature	-25°C to +55°C (-13°F to	Dielectric strength	4000 VRMS for 1 minute
	131°F) (R.H. from 0 to 90%	Noise rejection CMRR	100 dB, 48 to 62 Hz
non-condensing @ 40°C) according to EN62053-21, EN50470-3 and EN62053- 23		EMC Electrostatic discharges Immunity to irradiated	According to EN62052-11 15kV air discharge Test with current: 10V/m from 80 to 2000MHz
Storage temperature	-30°C to +70°C (-22°F to 140°F) (R.H. < 90% non-condensing @ 40°C) according to EN62053-21, EN50470-3 and EN62053-23	Electromagnetic fields  Burst  Immunity to conducted	Test without any current: 30V/m from 80 to 2000MHz On current and voltage measuring inputs circuit: 4kV
Installation category	Cat. III (IEC60664, EN60664)	disturbances	10V/m from 150KHz to 80MHz
Insulation (for 1 minute)	4000 VRMS between measuring inputs and power supply 4000 VRMS between power supply and RS485/digital output	Surge  Radio frequency suppression  Standard compliance	On current and voltage measuring inputs circuit: 4kV; on "L" auxiliary power supply input: 1kV According to CISPR 22



## **General specifications (cont.)**

Safety	IEC60664, IEC61010-1 EN60664, EN61010-1	Cable cross-section area	ing torque: 0.4 Nm / 0.8 Nm
Metrology	EN62052-11 EN62053-21, EN62053-23, EN50470-3. MID "annex	AV5-AV6 models	Max. 1.5 mm <sup>2</sup> Min./Max. screws tighten- ing torque: 0.4 Nm / 0.8 Nm
	MI-003"	Housing DIN	
Pulse output	DIN43864, IEC62053-31	Dimensions (WxHxD)	71 x 90 x 64.5 mm
Approvals	CE, PTB MID according to	Material	Nylon PA66,
• •	"annex B" (EC type certifi-	Matorial	self-extinguishing: UL 94 V-0
	cate)	Mounting	DIN-rail
Connections	Screw-type	Protection degree	
Cable cross-section area		Front	IP50
AV0-AV2-AV5 models	Max. 16 mm <sup>2</sup> ;	Screw terminals	IP20
	Min. 2.5 mm² (measuring inputs); Min./Max. screws tightening torque: 0.4 Nm / 0.8 Nm Other inputs: 1.5 mm² Min./Max. screws tighten-	Weight	Approx. 400 g (packing included)

## Power supply specifications

Self supplied version	AV9-AV0 models "XX", "O2" and "DP" options only: -20% +15%, 48-62Hz. "R2", "XS" and "IS" options only: -15% +10%, 48-62Hz. AV2 model "XX", "O2" and "IS"		be performed the L1 and L2 voltage inputs have to be short circuited. The instrument provided with "O2" option, working in a 3-phase system with neutral may work also if one or two phases are missing.
	options: -15% +15%, 48-62Hz. In case of 3-phase system, 4-wire connection: 113 to 265V. In case of 3-	Auxiliary power supply	AV5-AV6 modules: L: 18 to 60VAC/DC; D: 115VAC/230VAC (48 to 62Hz)
Note	phase system, 3-wire connection: 196 to 460V. The instruments provided with "IS" and "R2" options work only if all the voltage inputs are connected (3-phase and neutral) if a 1-phase connection has to	Power consumption AV9-AV2-AV0 models AV9-AV2-AV0 models (IS and DP option only) AV5-AV6 models	≤ 20VA/1W ≤ 12VA/2W ≤ 2VA/2W


## Working mode notes (only "Self power supply" version)


Output	Model	Note
Open collector output	"AV0" and "AV9" models with "O2" option	The meter works even if up to two voltages "phase to neutral" are missing or if one voltage "phase to phase" is missing.
Relay output	"AV0" and "AV9" models with "R2" option	The neutral wire has always to be available. The meter works even if "Phase 3" is missing but,
RS485 port	"AV0" and "AV9" models with "XS" and "IS" options	mandatorily, both "phase 1" and "Phase 2" have to be available.
Dupline port	"AV2" model with "DP" option	The meter works even if up to two voltages "phase
Relay output	"AV2" model with "R2" option	to neutral" are missing or if one voltage "phase to
RS485 port	"AV2" model with "XS", "IS" options	phase" is missing.



## Accuracy (According to EN62053-21 and EN62053-23)

kWh, accuracy (RDG) depending on the current

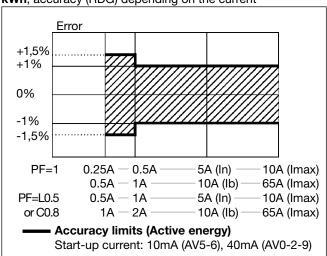

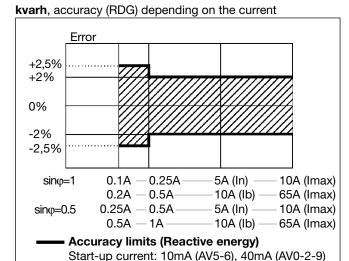

## MID "Annex MI-003" compliance

**Accuracy** 

AV0-AV2-AV9 models

 $0.9 \text{ Un} \le U \le 1.1 \text{ Un};$  $0.98 \text{ fn} \le f \le 1.02 \text{ fn};$ fn: 50 or 60Hz; cosφ: 0.5 inductive to 0.8 capacitive. Class B I st: 0.04A; I min: 0.5A; I tr: 1A; I max: 65A.

AV5-AV6 models	Class B I st: 0.01A; I min: 0.05A; I tr: 0.25A; I n: 5A; I max: 10A
Operating temperature	-25°C to +55°C (-13°F to 131°F) (R.H. from 0 to 90% non-condensing @ 40°C)
EMC compliance	E2

### **Used calculation formulas**

### Phase variables

Instantaneous effective voltage

$$V_{1N} = \sqrt{\frac{1}{n} \cdot \sum_{1}^{n} (V_{1N})_{i}^{2}}$$

Instantaneous active power

$$W_{1} = \frac{1}{n} \cdot \sum_{1}^{n} (V_{1N})_{i} \cdot (A_{1})_{i}$$

Instantaneous power factor

$$\cos \varphi_1 = \frac{W_1}{VA_1}$$

Instantaneous effective current

$$A_{1} = \sqrt{\frac{1}{n} \cdot \sum_{1}^{n} (A_{1})_{i}^{2}}$$

Instantaneous apparent power

$$V\!A_1 = V_{1N} \cdot A_1$$

Instantaneous reactive power

$$var_1 = \sqrt{(VA_1)^2 - (W_1)^2}$$

#### System variables

Equivalent three-phase voltage  $V_{\Sigma} = \frac{V_1 + V_2 + V_3}{3} \cdot \sqrt{3}$ 

$$V_{\Sigma} = \frac{V_1 + V_2 + V_3}{2} \cdot \sqrt{3}$$

Voltage asymmetry
$$ASY_{LL} = \frac{(V_{LL \text{ max}} - V_{LL \text{ min}})}{V_{LL} \sum}$$

$$ASY_{LN} = \frac{(V_{LN \text{ max}} - V_{LN \text{ min}})}{V_{LN} \sum}$$

$$ASY_{LN} = \frac{(V_{LN \max} - V_{LN \min})}{V_{LN} \sum}$$

Three-phase reactive power

$$var_{\Sigma} = (var_1 + var_2 + var_3)$$

Three-phase active power

$$W_{\Sigma} = W_1 + W_2 + W_3$$

Three-phase apparent power

$$VA_{\Sigma} = \sqrt{W_{\Sigma}^2 + \text{var}_{\Sigma}^2}$$

Three-phase power factor

$$\cos \varphi_{\Sigma} = \frac{W_{\Sigma}}{VA_{\Sigma}}$$

(TPF)

### **Energy metering**

$$k \operatorname{var} hi = \int_{t_1}^{t_2} Qi(t)dt \cong \Delta t \sum_{t_1}^{n_2} Qnj(t)dt$$

$$kWhi = \int_{t1}^{t2} Pi(t)dt \cong \Delta t \sum_{n=1}^{n} Pnj$$

### Where:

i= considered phase (L1, L2 or L3) P= active power; Q= reactive power;  $t_1$ ,  $t_2$  =starting and ending time points of consumption recording; n= time unit;∆t= time interval between two successive power consumptions;  $n_1$ ,  $n_2$  = starting and ending discrete time points of consumption recording



## List of the variables that can be connected to:

- RS485 communication port
- Alarm outputs ("max" variable", "energies" and "hour counter" excluded)
  Pulse outputs (only "energies")
- Dupline bus

4		1-phase system	2-phase system	3-ph. 4-wire balanced sys.	3-ph. 4-wire unbal. sys.	3 ph. 3-wire bal. sys.	3 ph. 3-wire unbal. sys.	Notes
1	V L-N sys	0	Х	Х	Х	Х	#	sys=system
2	V L1	Х	Х	х	Х	Х	#	
3	V L2	0	Х	Х	х	Х	#	
4	V L3	0	0	Х	х	Х	#	
5	V L-L sys	0	X	Х	х	X	х	sys=system
6	V L1-2	#	X	х	Х	X	Х	
7	V L2-3	#	0	х	Х	X	Х	
8	V L3-1	#	0	х	Х	X	Х	
9	A dmd max	0	X	Х	X	Х	Х	Highest "dmd" current among the phases (1)(2)
10	A L1	Х	X	х	Х	X	Х	
11	A L2	0	X	х	Х	X	х	
12	A L3	0	0	х	Х	X	Х	
13	VA sys	Х	X	х	Х	X	Х	sys=system
14	VA sys dmd	Х	X	х	Х	X	Х	sys=system (1)
15	VA L1	Х	X	х	Х	X	#	
16	VA L2	0	X	х	Х	X	#	
17	VA L3	0	0	Х	х	Х	#	
18	var sys	Х	Х	Х	х	X	#	sys=system
19	var L1	х	X	х	Х	Х	#	
20	var L2	0	Х	Х	х	Х	#	
21	var L3	0	0	Х	х	X	#	
22	W sys	Х	Х	Х	х	X	Х	sys=system
23	W sys dmd	Х	X	х	х	Х	х	sys=system (1)
24	W L1	Х	Х	Х	х	Х	#	
25	W L2	0	Х	х	Х	Х	#	
26	W L3	0	0	Х	Х	Х	#	
27	PF sys	х	Х	х	Х	Х	Х	
28	PF L1	Х	Х	Х	Х	Х	#	
29	PF L2	0	Х	Х	Х	Х	#	
30	PF L3	0	0	х	Х	Х	#	
31	Hz	Х	Х	Х	Х	Х	Х	
32	Phase seq.	0	Х	Х	х	Х	Х	
33	Hours	х	Х	х	Х	Х	Х	
34	kWh (+)	Х	Х	Х	Х	Х	Х	Total or by user
35	kvarh (+)	х	Х	х	Х	Х	#	Total or by user
36	kWh (+)	Х	Х	Х	х	Х	Х	Partial or by tariff
37	kvarh (+)	х	х	х	Х	Х	#	Partial or by tariff
38	kWh (-)	Х	х	х	х	Х	х	Total
39	kvarh (-)	Х	Х	х	х	Х	#	Total
40	m³ Gas	X	X	X	X	X	X	Total
41	m³ Cold H₂O	Х	X	X	X	X	X	Total
42	m³ Hot H <sub>2</sub> O	X	X	X	x	X	x	Total
43	kWh H <sub>2</sub> O	X	X	X	x	X	x	Total

<sup>(</sup>x) = available

<sup>(</sup>o) = not available (zero indication on the display)

<sup>(#) =</sup> not available (the relevant page is not displayed)

<sup>(1) =</sup> max. value with data storage

<sup>(2) =</sup> not available with the "DP" option



### **Display pages**

Sel.		1st variable	2nd variable	3rd variable		Applications							
pos.	No	(1st line)	(2nd line)	(3rd line)	Note		В	C	D	Е	F	G	Н
	1	Phase seq.	VLN sys	Hz		7 7 7		7	7	7	7		
	2	Phase seq.	VLL sys	Hz					Х	Х	х		
	3	Total kWh (+)	W sys dmd	W sys dmd max		x x x >		Х	Х	Х	Х		
	4	kWh (+)	A dmd max	(text) "PArt"	"PArt" = Partial kWh (+)				Х	Х	х		
	5	Total kvarh (+)	VA sys dmd	VA sys dmd max		7 7		7	7	7			
	6	kvarh (+)	VA sys	(text) "PArt"	"PArt" = Partial kvarh (+)				7	7	7		
	7	Totalizer 1 (2)	W sys	(text) (3)	(1)			Х			Х	Х	х
	8	Totalizer 2 (2)	W sys	(text) (3)	(1)	x :		Х	Х	Х			
	9	Totalizer 3 (2)	W sys	(text) (3)	(1)			Х			Х	Х	х
	10	kWh (+)	t1 tariff (4)	W sys dmd	(1) digital input enabled			Х			Х	Х	Х
	11	kWh (+)	t2 tariff (4)	W sys dmd	(1) digital input enabled			Х			Х	Х	х
	12	kWh (+)	t3 tariff (4)	W sys dmd	(1) digital input enabled			5			5	5	5
	13	kWh (+)	t4 tariff (4)	W sys dmd	(1) digital input enebled			5			5	5	5
	14	,, , , , , , , , , , , , , , , , , , , ,		(1) digital input enabled			7			7	7	7	
	15	kvarh (+)	t2 tariff (4)	W sys dmd	(1) digital input enabled			7			7	7	7
	16	kvarh (+)	t3 tariff (4)	W sys dmd	(1) digital input enabled			5,7			5,7	5,7	5,7
	17	17 kvarh (+) t4 tariff (4) W sys dmd (1) digital inp		(1) digital input enabled			5,7			5,7	5,7	5,7	
	18	kWh (+) X	WX	User X	(1) specific function enabled				Х				
	19	kWh (+) Y	WY	User Y	(1) specific function enabled	х							
	20	kWh (+) Z	WZ	User Z	(1) specific function enabled	X X							
	21	Total kvarh (-)	VA sys dmd	VA sys dmd max		7			7				
	22	Total kWh (-)	W sys dmd	W sys dmd max		x x			Х				
	23	Hours	W sys	PF sys						Х	Х	Х	х
	24	Hours	var sys	PF sys						7	7	7	7
	25	var L1	var L2	var L3								7	7
	26	VA L1	VA L2	VA L3								7	7
	27	PF L1	PF L2	PF L3								7	7
	28	W L1	W L2	W L3						7		7	7
	29	A L1	A L2	A L3						Х		Х	х
	30	V L1-2	V L2-3	V L3-1								6	6
	31	V L1	V L2	V L3			7		7	7		7	7
0	Sel	ector position wh	ich can be linked	to any of the var	riable combinations listed abov	e (N	o. fr	om 1	1 to	31)			
1	Sele	Selector position which can be linked to any of the variable combinations listed above (No. from 1 to 31)											
2		Selector position which can be linked to any of the variable combinations listed above (No. from 1 to 31)											
_		Selector position which can be linked to any of the variable combinations listed above (No. from 1 to 31)											
3		In this position the front LED blinks proportionally to the reactive energy (kvarh) being measured											

- (1) The page is available according to the enabled measurement.
- (2) m³ Gas, m³ Water, kWh remote heating.
- (3) Hot and Cold (water), GAS.
- (4) The active tariff is displayed with an "A" before the "t1-t2-t3-t4" symbols.
- (5) These pages are not available in case of Dupline system.
- (6) Pages not available in case of 1-phase sysem (1P selection).
- (7) Pages not available in case of 3-phase unbalanced system (3P selection).

**Note:** in case of alarm the whole display blinks. The blinking stops when either the selector or the joystick are used. The display starts to blink again after 60 seconds of the last command being used. There is a time-out of 60s that brings the scrolled page to the default one (selectable according to the table given above).



## Additional available information on the display

Туре	1st line	2nd line	3rt line		
Meter information	Firmware revision	YEAr (text)	Year of production		
Meter information	PuLSE (text)	LEd (text)	Numb. of kWh per pulse		
Meter information	System (1-2-3-phase)	Connection (2-3-4-wire)	dmd (time)		
Meter information	VT/PT ratio				
Meter information (AV5-6)	Ct rAtio (text)	1.0 60.0k			
Meter information (AV5-6)	UT rAtio (text)	1.06.0k			
In case of communication port	SEriAL (text)	Address number	RS485 status (RX-TX)		
In case of Dupline port	Dupline (text) or EM24 (text)	OK err			

### List of selectable applications

	Description	Notes				
Α	Basic domestic	Mainly energy metering				
В	Shopping centres	Mainly energy metering				
С	Advanced domestic	Mainly energy metering (total and based on tariff), gas an water metering				
D	Multi domestic (also camping and marinas)	Mainly energy metering (3 by single phase)				
Ε	Solar	Energy meter with some basic power analyzer functions				
F	Industrial	Mainly energy metering				
G	Advanced industrial	Energy metering and power analysis				
Н	Advanced industrial for power generation	Complete energy metering and power analysis				

## Insulation between inputs and outputs

	Measuring Inputs	Relay outputs	Open collector outputs	Comm. port and digital inputs	Dupline	Self power supply	Auxiliary power supply
Measuring Inputs	-	4kV	4kV	4kV	4kV	0kV	4kV
Relay outputs	4kV	-	-	-	-	4kV	4kV
Open collector outputs	4kV	-	-	-	-	4kV	4kV
Comm. port and digital inputs	4kV	-	-	-	-	4kV	4kV
Dupline	4kV	-	-	-	-	4kV	4kV
Self power supply	0kV	4kV	4kV	4kV	4kV	-	-
Aux. power supply	4kV	4kV	4kV	4kV	4kV	-	-

**NOTE:** all the models with auxiliary power supply have, mandatorily, to be connected to external current transformers because the isolation among the current inputs is just functional (100VAC).

## Tamper proof accessory kit



The "tamper proof" kit is available with the "P" option (two screw protection covers).


The instrument can be sealed in three points:

- Upper cover;
- Lower cover;
- Front selector (to lock the instrument programming);







### Wiring diagrams

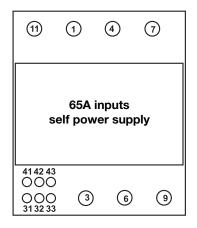


### (65A) System type selection: 3P.n

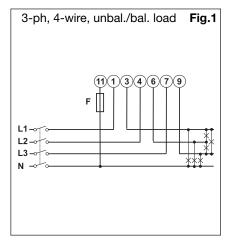


#### (65A) System type selection: 3P

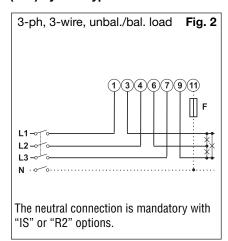


### (65A) System type selection: 2P

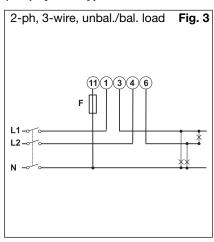


### (65A) System type selection: 1P

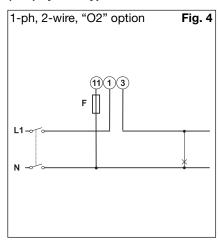


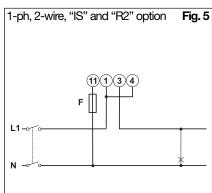


Note: the jumper between screw terminals "1" and "4" is not needed in case of "AV2" input range.

### (10A) System type selection: 3P.n

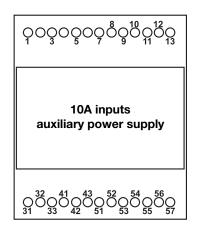

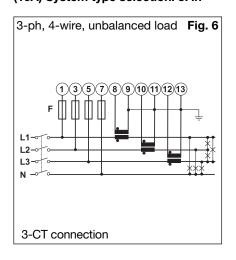


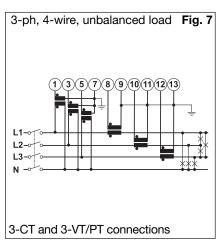





### Wiring diagrams


#### (10A) System type selection: 3P.n

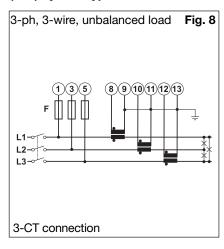

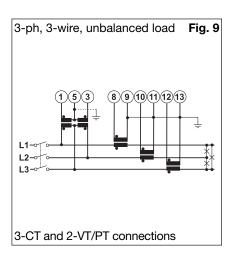


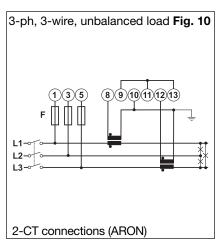

# 3-ph, 3-wire, unbalanced load Fig. 11

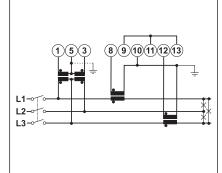


2-CT and 2-VT/PT connections ARON

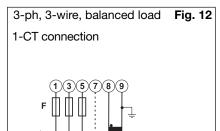



(10A) System type selection: 3P.1

**NOTE:** a 2-wire connection for voltage measurement is available accross 1 and 7.

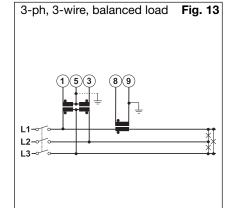


### (10A) System type selection: 2P

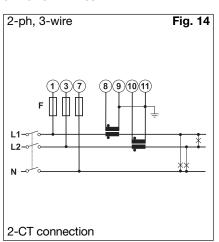

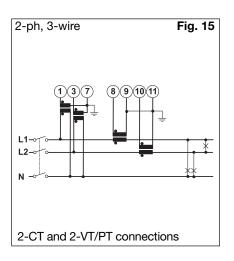

### (10A) System type selection: 1P


1-CT and 2-VT/PT connections

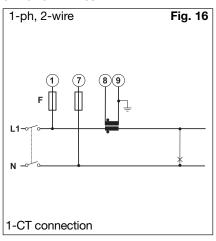





## Wiring diagrams


#### (10A) System type selection: 1P

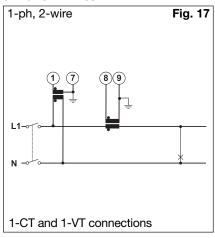


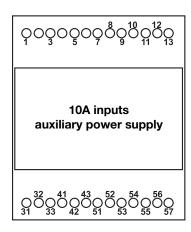


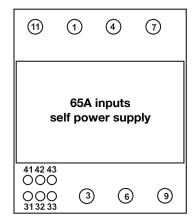


## Power supply wiring diagrams (auxiliary power supply)

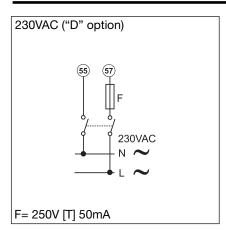


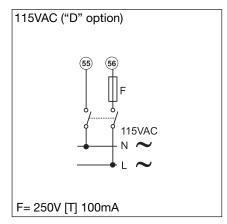


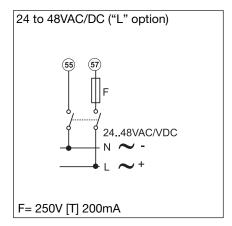

## Open collector and relay outputs wiring diagrams

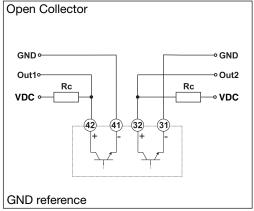

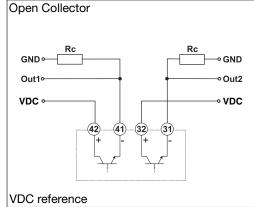


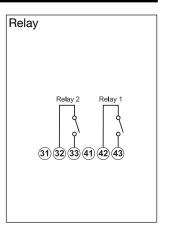



The load resistances (RC) must be designed so that the close contact current is lower than 100mA; the VDC voltage must be lower than or equal to 30VDC.




## Digitala inputs, RS485 and Dupline ports wiring diagrams

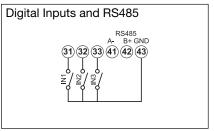


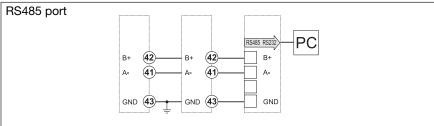

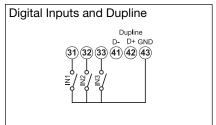

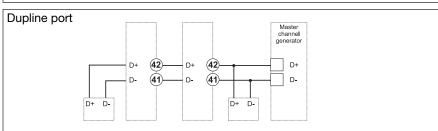

## Front panel description

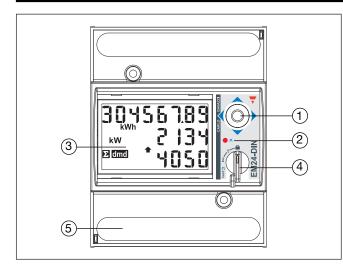

#### 1. Joystick

To program the configuration parameters and scroll the variables on the display.

#### 2. LED

Red LED blinking proportional to the energy being measured.

#### 3. Display

LCD-type with alphanumeric indications to:

- display configuration parameters;
- display all the measured variables.

#### 4. Selector

To select the desired display pages and to lock the programming.

### 5. Connections

Screw terminal blocks for instrument wiring.

### **Dimensions**

