

RGB LED control V2 Design

Bassel Yasser Mahmoud Mahmoud Adel



Contents

Project Introduction	2
High Level Design	
Layered Architecture	
Module Description	
Drivers' documentation	
APP	
HAL	
MCAL	10
UML	17
Low Level Design	18
Flowchart	18
APP	18
HAL	19
MCAL	21
Pre-compiling configuration	33
MCAL	33
Linking Configuration	34
MCAL	32



Project Introduction

Read System Requirements

Hardware Requirements

- 1. Use the TivaC board
- 2. Use SW1 as an input button
- 3. Use the RGB LED

Software Requirements

- 4. The RGB LED is OFF initially
- 5. Pressing SW1:
 - 1. After the first press, the Red led is on **for 1 second only**
 - 2. After the second press, the Green Led is on **for 1 second only**
 - 3. After the third press, the Blue led is on **for 1 second only**
 - 4. After the fourth press, all LEDs are on **for 1 second only**
 - 5. After the fifth press, should disable all LEDs
 - 6. After the sixth press, repeat steps from 1 to 6



High Level Design


Layered Architecture

APP Layer: written in high level languages like java, C++, C# with rich GUI support. Application layer calls the middleware api in response to action by the user or an event.

HAL Layer: are a way to provide an interface between hardware and software so applications can be device independent.

MCAL Layer: is a software module that directly accesses on-chip MCU peripheral modules and external devices that are mapped to memory, and makes the upper software layer independent of the MCU. Details of the MCAL software module are shown below.

Common Layer: is the layer which consists of BIT_MATH and STD types

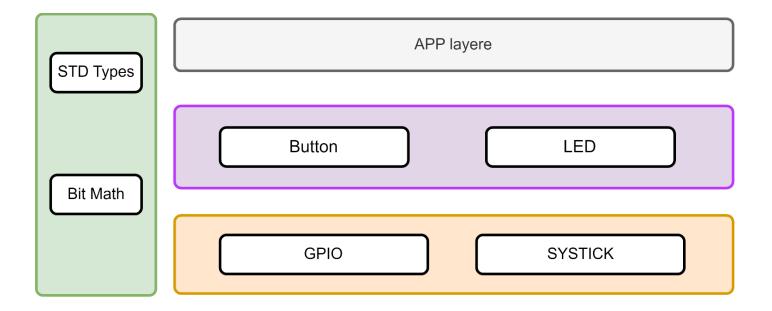



Module Description

• APP Layer

• App: written in high level languages like java, C++, C# with rich GUI support. Application layer calls the middleware api in response to action by the user or an event.

• HAL Layer

- o **button:** Initialize selected button pin as input
- o Led: this led module configure selected pin as output and generate volt

MCAL Layer

- O GPIO: this module having configuration and Initialization for GPIO which communicate to hardware register directly
- o SYSTICK: Timer Core Peripheral from ARM design

• **COMMON Layer**

- o **std_types:** having basic standard types like (Uint32_t, Uint8_t,)
- o **bit_math**: Consist of bit manipulation like (SetBit, ClrBit, GetBit, ..)



Drivers' documentation

APP

APP_vidInit

Service name	APP_vidInit
Description	This Function Make Modules Initialization
Syntax	void APP_vidInit (void)
Sync/Async	Synchronous
Reentrancy	Non-Reentrant
Parameters (in)	void
Parameters (out)	None
Return	void
Available via	app.h



APP_vidStart

_ 1100 1011 1	
Service name	APP_vidStart
Description	This Function Start the Application.
Syntax	void APP_vidStart (void)
Sync/Async	Synchronous
Reentrancy	Non-Reentrant
Parameters (in)	void
Parameters (out)	None
Return	void
Available via	app.h



HAL

HLED module

HLed_Init

Service name	HLed_Init
Description	This Function Init LED dio pin as output
Syntax	enu_ledError_t HLed_Init (enu_pin en_pinNum)
Sync/Async	Synchronous
Reentrancy	Reentrant
Parameters (in)	en_pinNum: dio pin selection
Parameters (out)	None
Return	en_ledError_t
Available via	hled.h

$HLed_on$

Service name	HLed_on
Description	This Function give LED pin logic 1
Syntax	enu_ledError_t HLed_on (enu_pin en_pinx);
Sync/Async	Synchronous
Reentrancy	Reentrant
Parameters (in)	en_pinNum: dio pin selection
Parameters (out)	None
Return	en_ledError_t
Available via	hled.h



HLed_off

Service name	HLed_off
Description	This Function give LED pin logic 0
Syntax	enu_ledError_t HLed_off (enu_pin en_pinx)
Sync/Async	Synchronous
Reentrancy	Reentrant
Parameters (in)	en_pinNum: dio pin selection
Parameters (out)	None
Return	en_ledError_t
Available via	hled.h

HLed_toggle

Service name	HLed_toggle
Description	This Function Change previous state of LED pin
Syntax	enu_ledError_t HLed_toggle (enu_pin en_pinx)
Sync/Async	Synchronous
Reentrancy	Reentrant
Parameters (in)	en_pinNum: dio pin selection
Parameters (out)	None
Return	en_ledError_t
Available via	hled.h



Button module

HButton_Init

Service name	HButton_Init
Description	This Function Initialize button DIO pin as input and pull up
Syntax	enu_buttonError_t
Sync/Async	Synchronous
Reentrancy	Reentrant
Parameters (in)	en_pinx: DIO pin number
Parameters (out)	None
Return	BUTTON_OK: in case of successful operation
	BUTTON_NOK: in case of failer operation
Available via	button.h

$HButton_getPinVal$

Service name	HButton_getPinVal
Description	This Function Get button state
Syntax	enu_buttonError_t HButton_getPinVal (enu_pin en_pinx, Uint8_t* pu8_refVal)
Sync/Async	Synchronous
Reentrancy	Reentrant
Parameters (in)	en_pinx: DIO pin number
Parameters (out)	<pre>pu8_refVal: address of variable which button state to be</pre>
Return	BUTTON_OK: in case of successful operation
	BUTTON_NOK: in case of failer operation
Available via	button.h



MCAL

GPIO module

MGPIO_u8Init

Service name	MGPIO_u8Init
Description	This Function Initialize GPIO configuration
Syntax	uint8_ MGPIO_u8Init (st_gpio_cfg_t* st_gpio_cfg)
Sync/Async	Synchronous
Reentrancy	Reentrant
Parameters (in)	<pre>st_gpio_cfg: Address of struct Instance</pre>
Parameters (out)	None
Return	MGPIO_SUCCESS: in case of successful operation
	MGPIO_FAILED: in case of failer operation
Available via	mgpio_Interface.h

$MGPIO_u8SetPinData$

Service name	MGPIO_u8SetPinData
Description	This Function Initialize Pin Value High or Low
Syntax	uint8_ MGPIO_u8SetPinData (enu_pin_t Copy_enPinNum, uint8_ Copy_PinValue)
Sync/Async	Synchronous
Reentrancy	Reentrant
Parameters (in)	Copy_enPinNum: MGPIO_PINA_0 ~ MGPIO_PINF_7
	Copy_PinValue: MGPIO_PIN_LOW / MGPIO_PIN_HIGH
Parameters (out)	None
Return	MGPIO_SUCCESS: in case of successful operation
	MGPIO_FAILED: in case of failer operation
Available via	mgpio _Interface.h



$MGPIO_u8GetPinData$

Service name	MGPIO_u8GetPinData
Description	This Function Get value from selected pin
Syntax	uint8_ MGPIO_u8GetPinData (enu_pin_t Copy_enPinNum, uint8_* Ref_puint8_PinVal)
Sync/Async	Synchronous
Reentrancy	Reentrant
Parameters (in)	Copy_enPinNum: MGPIO_PINA_0 ~ MGPIO_PINF_7
Parameters (out)	Ref_puint8_PinVal: Reference to variable where the value status store on it
Return	MGPIO_SUCCESS: in case of successful operation
	MGPIO_FAILED: in case of failer operation
Available via	mgpio _Interface.h



High Level Design MGPIO_u8IRQEnable

Service name	MGPIO_u8IRQEnable			
Description	This Function Get value from selected pin			
Syntax	<pre>uint8_ MGPIO_u8IRQEnable (enu_pin_t Copy_enPinNum, enu_int_sens_type_t</pre>			
Sync/Async	Synchronous			
Reentrancy	Reentrant			
	<pre>Copy_enPinNum: MGPIO_PINA_0 ~ MGPIO_PINF_7</pre>			
Parameters (in)	<pre>enu_int_sens_type: MGPIO_INT_EDGE_SENSETIVE ~ MGPIO_INT_LEVEL_SENSETIVE</pre>			
	<pre>enu_int_sens_ctrl: MGPIO_INT_BOTH_EDGES - MGPIO_INT_FALL_E_LOW_L -</pre>			
Parameters (out)	NONE			
D.4	MGPIO_SUCCESS: in case of successful operation			
Return	MGPIO_FAILED: in case of failer operation			
Available via	mgpio _Interface.h			



$MGPIO_u8IRQD is able$

Service name	MGPIO_u8IRQDisable		
Description	This Function Get value from selected pin		
Syntax	uint8_ MGPIO_u8IRQDisable (enu_pin_t Copy_enPinNum)		
Sync/Async	Synchronous		
Reentrancy	Reentrant		
Parameters (in)	Copy_enPinNum: MGPIO_PINA_0 ~ MGPIO_PINF_7		
Parameters (out)	NONE		
Dotum	MGPIO_SUCCESS: in case of successful operation		
Return	MGPIO_FAILED: in case of failer operation		
Available via	mgpio _Interface.h		

MGPIO_u8SetCallBack

Service name	MGPIO_u8SetCallBack		
Description	This Function Get value from selected pin		
Syntax	uint8_ MGPIO_u8SetCallBack (enu_pin_t Copy_enPinNum, ptr_func_t ptr_func)		
Sync/Async	Synchronous		
Reentrancy	Non-Reentrant		
Parameters (in)	Copy_enPinNum: MGPIO_PINA_0 ~ MGPIO_PINF_7		
Parameters (out)	<pre>ptr_func: Address of application Function</pre>		
Return	MGPIO_SUCCESS: in case of successful operation		
	MGPIO_FAILED: in case of failer operation		
Available via	mgpio _Interface.h		



SYSTICK module

SYSTICK_u8Init

Service name	SYSTICK_u8Init		
Description	Systick Timer Intialization		
Syntax	uint8_ SYSTICK_u8Init (st_systk_cfg_t* st_systk_cfg)		
Sync/Async	Synchronous		
Reentrancy	Reentrant		
Parameters (in)	<pre>st_systk_cfg): Address of struct Instance</pre>		
Parameters (out)	None		
D. /	SUCCESS: in case of successful operation		
Return	FAILED: in case of failer operation		
Available via systick_Interface.h			

SYSTICK_vidStart

Service name	SYSTICK_vidStart		
Description	Start Timer count		
Syntax	uint8_ SYSTICK_vidStart (void)		
Sync/Async	Synchronous		
Reentrancy	Non-Reentrant		
Parameters (in)	Void		
Parameters (out)	None		
D -4	SUCCESS: in case of successful operation		
Return	FAILED: in case of failer operation		
Available via	systick_Interface.h		



SYSTICK_vidResetTimer

Service name	SYSTICK_vidResetTimer		
Description	Systick Reset Counter and start from beginning		
Syntax	uint8_ SYSTICK_vidResetTimer (void)		
Sync/Async	Synchronous		
Reentrancy	Reentrant		
Parameters (in)	void		
Parameters (out)	NONE		
Datum	SUCCESS: in case of successful operation		
Return	FAILED: in case of failer operation		
Available via	systick_Interface.h		

SYSTICK_vidStop

Service name	SYSTICK_vidStop		
Description	Stop Systick Timer Counter		
Syntax	void SYSTICK_vidStop (void)		
Sync/Async	Synchronous		
Reentrancy	Reentrant		
Parameters (in)	void		
Parameters (out)	NONE		
Dotum	SUCCESS: in case of successful operation		
Return	FAILED: in case of failer operation		
Available via	systick_Interface.h		



SYSTICK_u8GetIntStatus

Service name	SYSTICK_u8GetIntStatus		
Description	Get Systick Interrupt Flag to poll on it		
Syntax	uint8_ SYSTICK_u8GetIntStatus (uint8_* p_u8_int_status)		
Sync/Async	Synchronous		
Reentrancy	Reentrant		
Parameters (in)	NONE		
Parameters (out)	<pre>p_u8_int_status: Reference to variable where the value status store on it</pre>		
Return	SUCCESS: in case of successful operation		
	FAILED: in case of failer operation		
Available via	systick_Interface.h		


SYSTICK_u8DeInit

Service name	SYSTICK_u8DeInit		
Description	De-Initialize Systick Timer		
Syntax	Void SYSTICK_u8DeInit (void)		
Sync/Async	Synchronous		
Reentrancy	Non-Reentrant		
Parameters (in)	void		
Parameters (out)	<pre>p_u8_int_status: Reference to variable where the value status store on it</pre>		
Return	SUCCESS: in case of successful operation		
	FAILED: in case of failer operation		
Available via	systick_Interface.h		




UML


State Machine

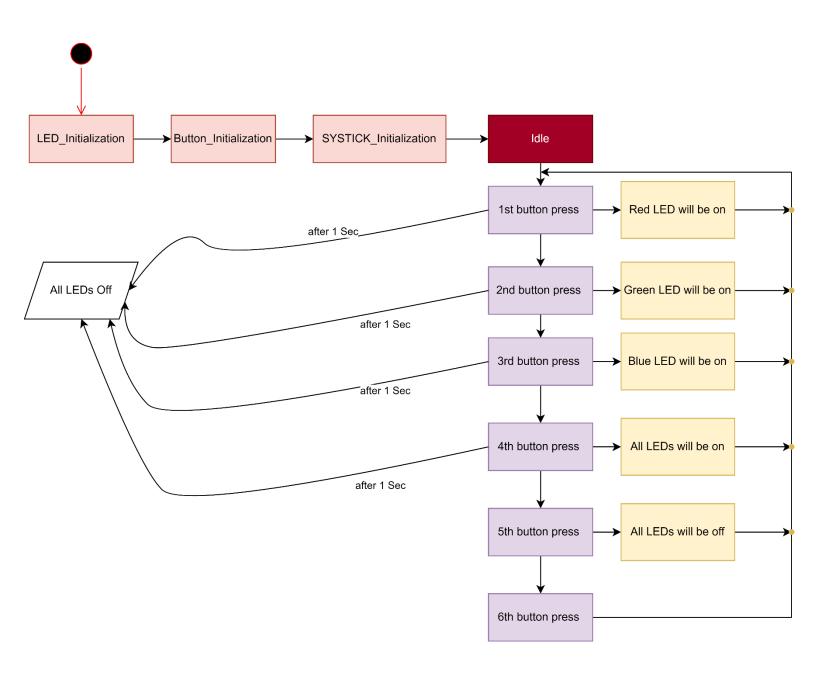



Low Level Design Flowchart

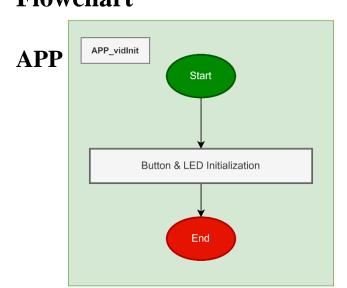


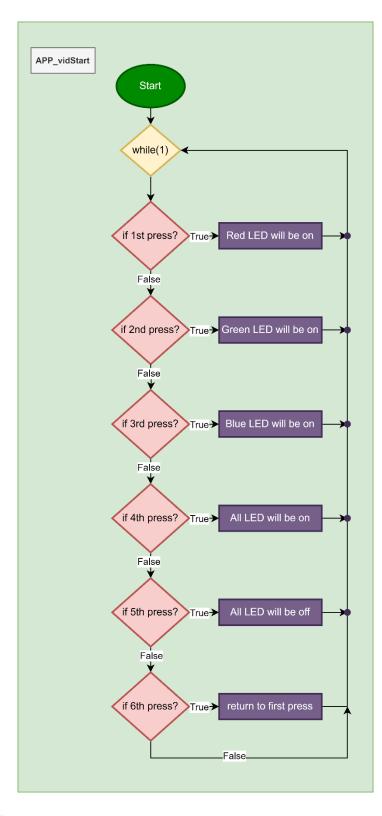




HAL


Button module

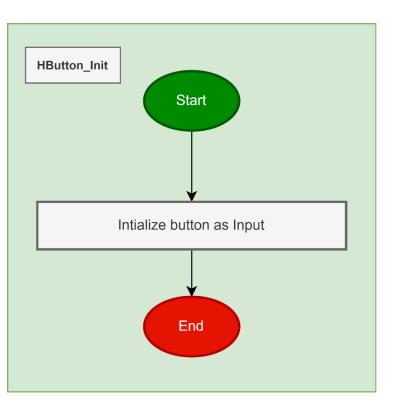


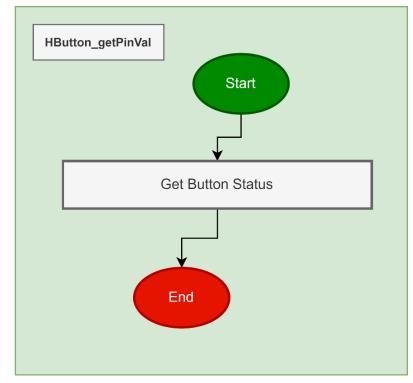





HLED module

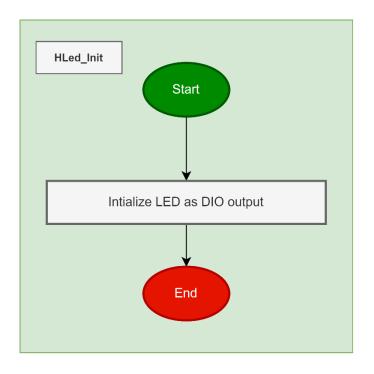

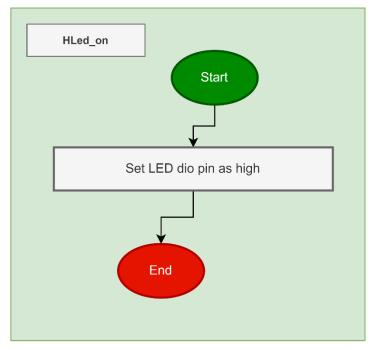

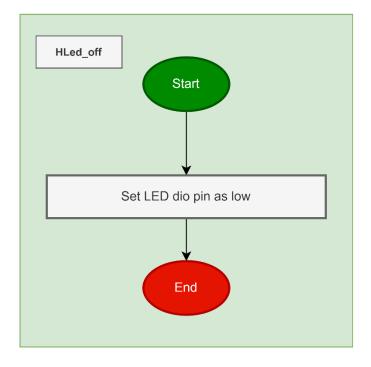

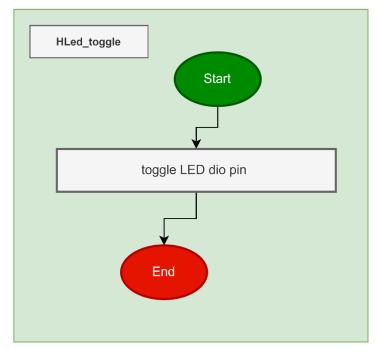




MCAL


GPIO module

MGPIO_u8Init

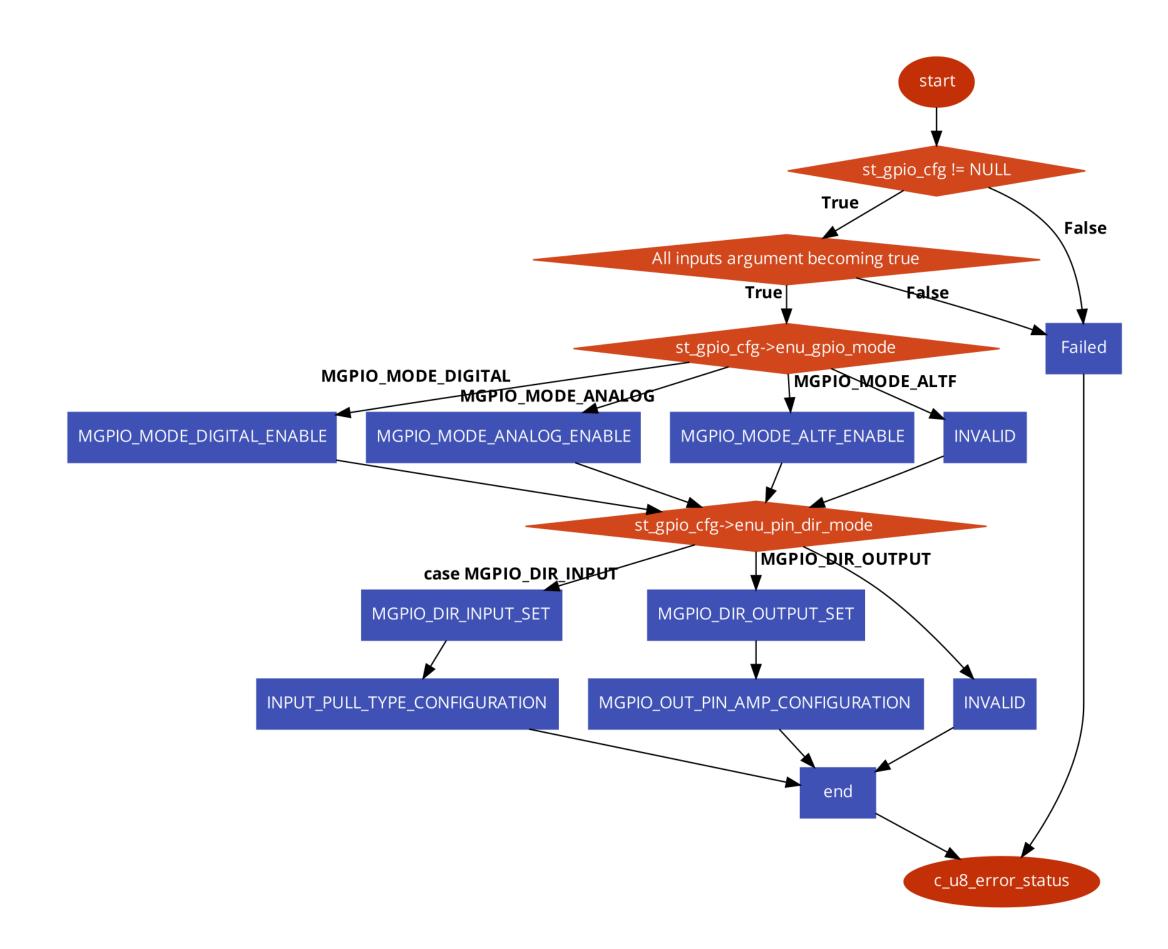




MGPIO_u8SetPinData

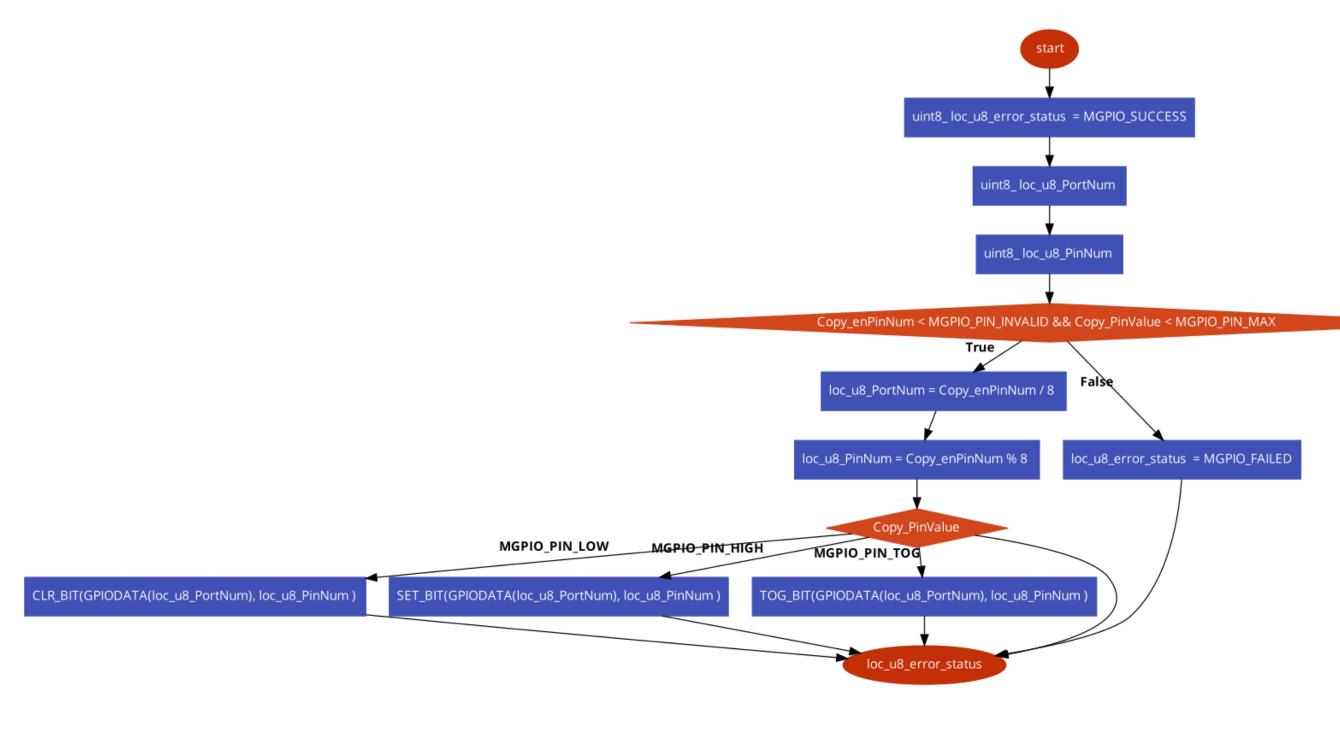




MGPIO_u8GetPinData

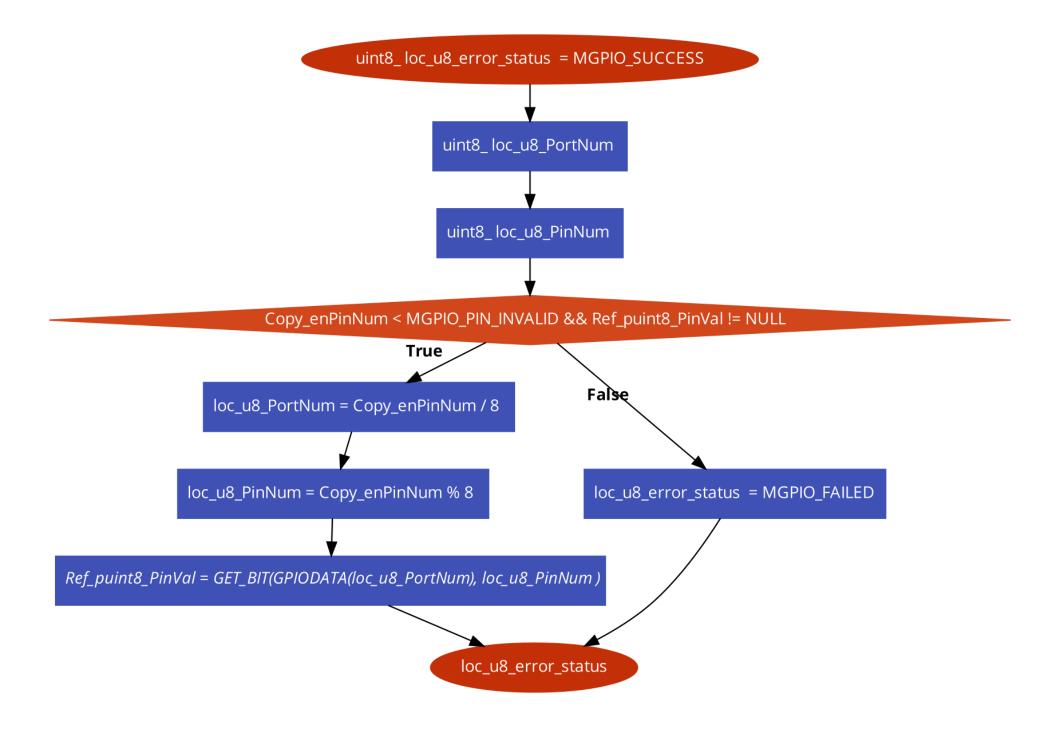




MGPIO_u8IRQEnable

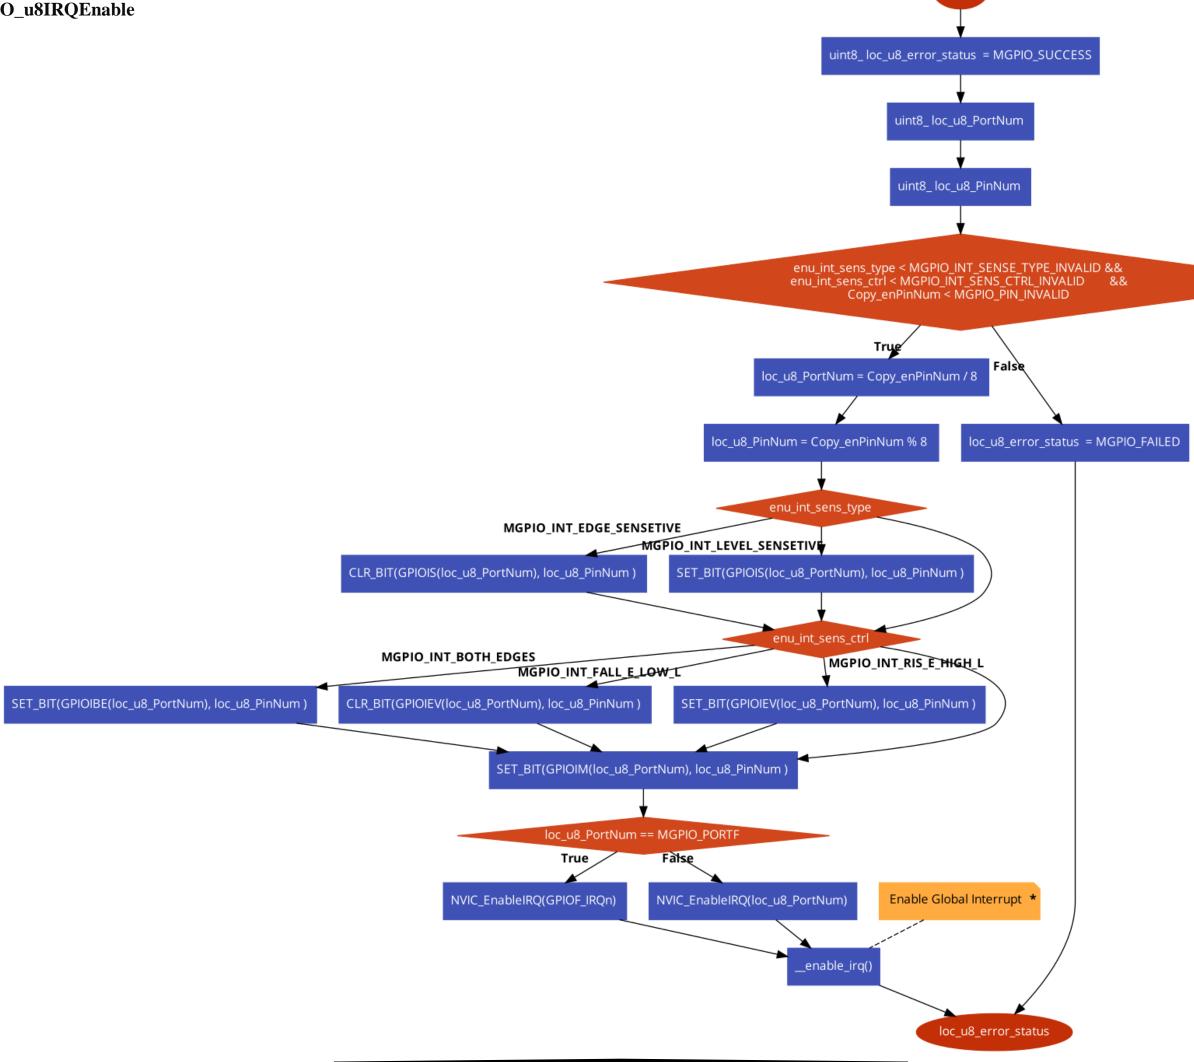




MGPIO_u8IRQDisable

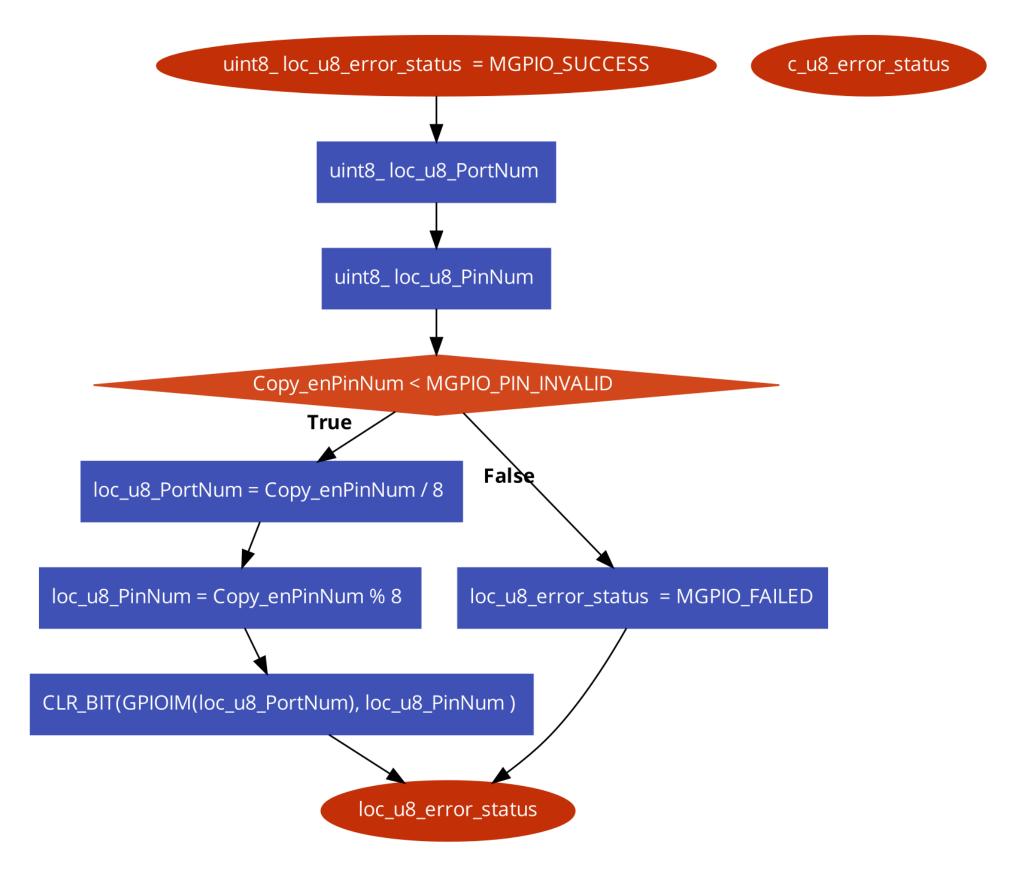




MGPIO_u8SetCallBack

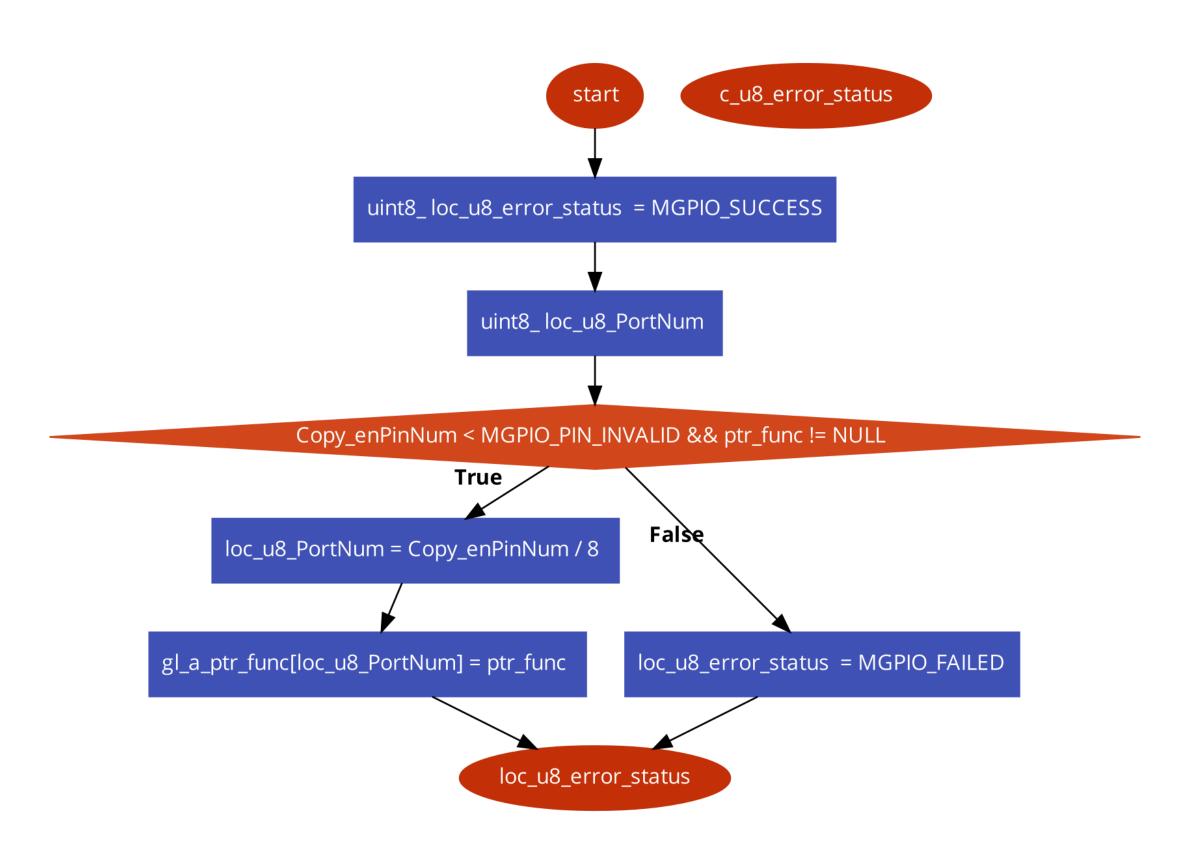




SYSTICK module

SYSTICK_u8Init

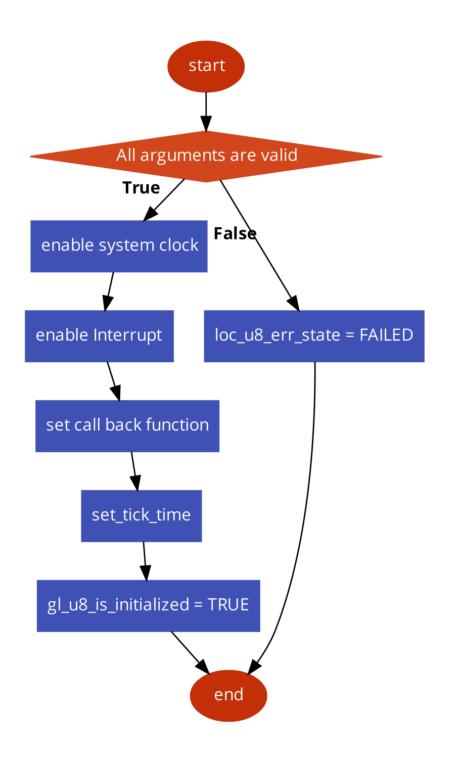




SYSTICK_vidStart

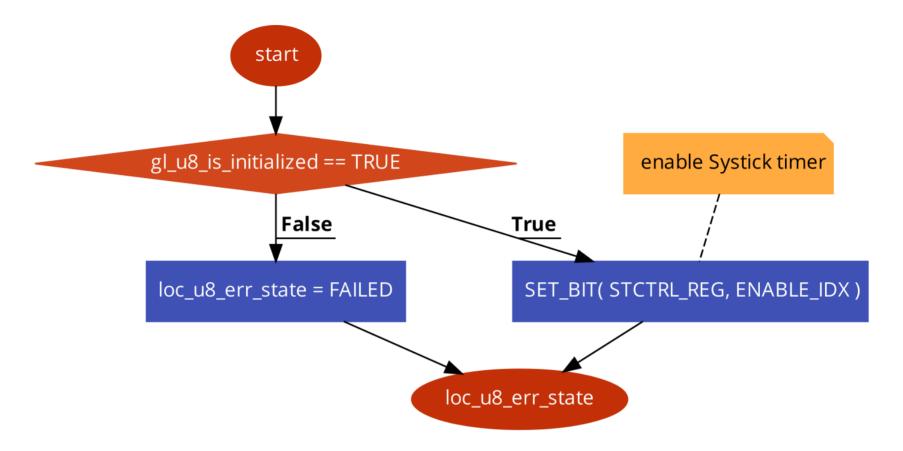




SYSTICK_vidResetTimer

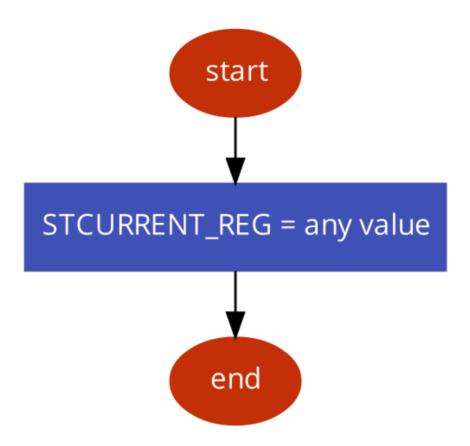




SYSTICK_vidStop

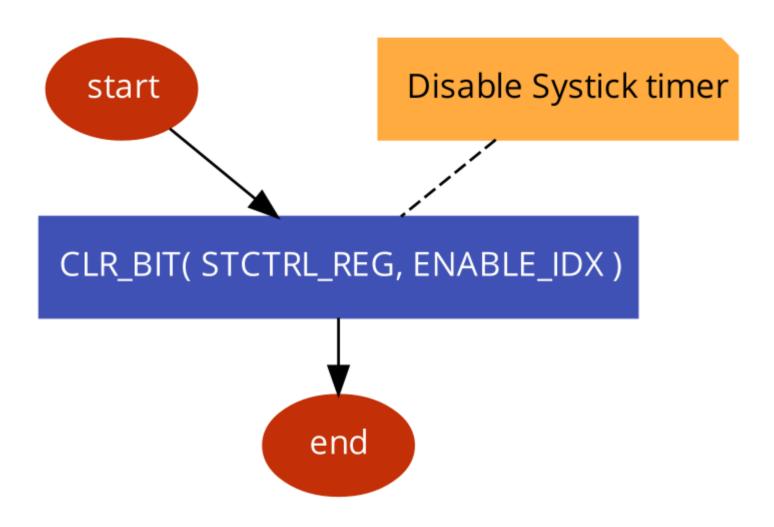




SYSTICK_u8GetIntStatus

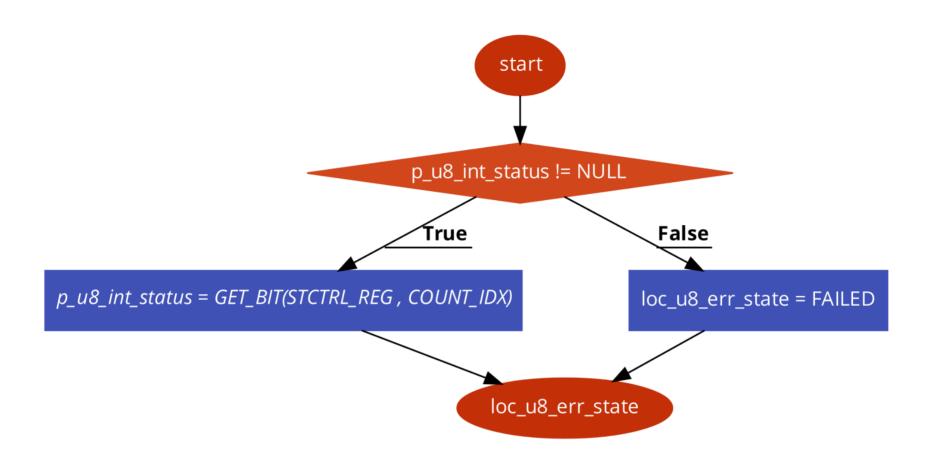



SYSTICK_u8DeInit

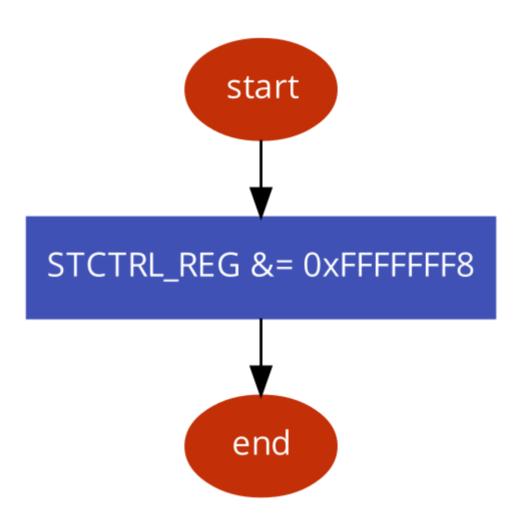



Pre-compiling configuration

MCAL

MGPIO module

GPIO_BUS_TYPE

Name	GPIO_BUS_TYPE
Туре	MACRO
Description	Define GPIO_bus
Configuration	GPIO_APB
	GPIO_AHB
Found in	mgpio_private.h



Linking Configuration

MCAL

MGPIO module

st_gpio_cfg_t

-spro_cis_t			
Name	st_gpio_cfg_t		
Туре	struct		
Description	GPIO pin configuration		
	enu_pin		
	enu_gpio_mode		
	enu_pin_dir_mode		
Members	un_gpio_conf	enu_gpio_amp_mode	
		u8_input_pull_type	
Found in	mgpio_Interface.h		



enu_pin_t

onu_pm_t				
Name	enu_pin_t			
Туре	enum			
Description	GPIO pin Selection			
	MGPIO_PINA_0 ~ MGPIO_PINA_7			
	MGPIO_PINB_0 ~ MGPIO_PINB_7			
	MGPIO_PINC_0 ~ MGPIO_PINC_7			
Configuration	MGPIO_PIND_0 ~ MGPIO_PIND_7			
	MGPIO_PINE_0 ~ MGPIO_PINE_7			
	MGPIO_PINF_0 ~ MGPIO_PINF_7			
Found in	mgpio_Interface.h			



enu_gpio_mode_t

enu_Spro_mode_t	
Name	enu_gpio_mode_t
Туре	enum
Description	GPIO Mode Selection
	MGPIO_DIR_INPUT
Configuration	MGPIO_DIR_OUTPUT
	MGPIO_DIR_INVALID
Found in	mgpio_Interface.h



enu_gpio_amp_mode_t

Name	enu_gpio_amp_mode_t
Туре	enum
Description	GPIO Ampere mode Selection
	MGPIO_OPEN_DRAIN
	MGPIO_MAMP_2
Configuration	MGPIO_MAMP_4
	MGPIO_MAMP_8
	MGPIO_MAMP_INVALID
Found in	mgpio_Interface.h



enu_gpio_int_t

Name	enu_gpio_int_t
Туре	enum
Description	GPIO Interrupt mode Selection
	MGPIO_INT_ENABLE
Configuration	MGPIO_INT_DISABLE
	MGPIO_INT_INVALID
Found in	mgpio_Interface.h



enu_int_sens_type_t

Name	enu_int_sens_type_t
Туре	enum
Description	GPIO Ampere mode Selection
Configuration	MGPIO_INT_EDGE_SENSETIVE
	MGPIO_INT_LEVEL_SENSETIVE
	MGPIO_INT_SENSE_TYPE_INVALID
Found in	mgpio_Interface.h



enu_int_sens_ctrl_t

Name	enu_int_sens_ctrl_t
Туре	enum
Description	GPIO Ampere mode Selection
Configuration	MGPIO_INT_BOTH_EDGES
	MGPIO_INT_FALL_E_LOW_L
	MGPIO_INT_RIS_E_HIGH_L
	MGPIO_INT_SENS_CTRL_INVALID
Found in	mgpio_Interface.h



SYSTICK module

st_systk_cfg_t

Name	st_systk_cfg_t
Туре	struct
Description	SYSTICK configuration
Members	en_systck_clk_src
	en_systck_int
	ptr_func
	u32_time_ms
Found in	systick_Interface.h



en_systck_int_t

Name	en_systck_int_t
Туре	enum
Description	IRQ Enable / Disable
Configuration	SYSTK_IRQ_DISABLE
	SYSTK_IRQ_ENABLE
Found in	systick_Interface.h

en_systck_clk_src_t

Name	en_systck_clk_src_t
Туре	enum
Description	SYSTICK clock Source Selection
Configuration	SYSTK_PIOSC
	SYSTK_SYSTEM_CLK
Found in	systick_Interface.h

