PGMcpp: PRIMED Grid Modelling (in C++)

Generated by Doxygen 1.9.1

1 Hierarchical Index	1
1.1 Class Hierarchy	1
2 Class Index	3
2.1 Class List	3
3 File Index	5
3.1 File List	5
4 Class Documentation	7
4.1 Combustion Class Reference	7
4.1.1 Detailed Description	9
4.1.2 Constructor & Destructor Documentation	9
4.1.2.1 Combustion() [1/2]	9
4.1.2.2 Combustion() [2/2]	9
4.1.2.3 ~Combustion()	10
4.1.3 Member Function Documentation	10
4.1.3.1checkInputs()	10
4.1.3.2 commit()	11
4.1.3.3 getEmissionskg()	12
4.1.3.4 getFuelConsumptionL()	12
4.1.3.5 requestProductionkW()	13
4.1.4 Member Data Documentation	13
4.1.4.1 CH4_emissions_intensity_kgL	13
4.1.4.2 CH4_emissions_vec_kg	13
4.1.4.3 CO2_emissions_intensity_kgL	13
4.1.4.4 CO2_emissions_vec_kg	13
4.1.4.5 CO_emissions_intensity_kgL	14
4.1.4.6 CO_emissions_vec_kg	14
4.1.4.7 fuel consumption vec L	14
4.1.4.8 fuel_cost_L	14
4.1.4.9 fuel cost vec	14
4.1.4.10 linear_fuel_intercept_LkWh	14
4.1.4.11 linear_fuel_slope_LkWh	15
4.1.4.12 NOx_emissions_intensity_kgL	15
4.1.4.13 NOx_emissions_vec_kg	15
4.1.4.14 PM_emissions_intensity_kgL	15
4.1.4.15 PM_emissions_vec_kg	15
4.1.4.16 SOx_emissions_intensity_kgL	15
4.1.4.17 SOx_emissions_vec_kg	16
4.1.4.18 type	16
4.2 CombustionInputs Struct Reference	16
4.2.1 Detailed Description	17
· · · · · · · · · · · · · · · · · · ·	

4.2.2 Member Data Documentation	17
4.2.2.1 production_inputs	17
4.3 Controller Class Reference	17
4.3.1 Detailed Description	18
4.3.2 Constructor & Destructor Documentation	18
4.3.2.1 Controller()	18
4.3.2.2 ~Controller()	18
4.3.3 Member Function Documentation	18
4.3.3.1computeNetLoad()	18
4.3.3.2getRenewableProduction()	19
4.3.3.3 applyDispatchControl()	20
4.3.3.4 clear()	21
4.3.3.5 init()	21
4.3.4 Member Data Documentation	22
4.3.4.1 control_mode	22
4.3.4.2 net_load_vec_kW	22
4.4 Diesel Class Reference	22
4.4.1 Detailed Description	24
4.4.2 Constructor & Destructor Documentation	24
4.4.2.1 Diesel() [1/2]	24
4.4.2.2 Diesel() [2/2]	24
4.4.2.3 ∼Diesel()	25
4.4.3 Member Function Documentation	25
4.4.3.1checkInputs()	26
4.4.3.2getGenericCapitalCost()	27
4.4.3.3getGenericFuelIntercept()	28
4.4.3.4getGenericFuelSlope()	28
4.4.3.5getGenericOpMaintCost()	29
4.4.3.6handleStartStop()	29
4.4.3.7 commit()	30
4.4.3.8 requestProductionkW()	30
4.4.4 Member Data Documentation	31
4.4.4.1 minimum_load_ratio	31
4.4.4.2 minimum_runtime_hrs	31
4.4.4.3 time_since_last_start_hrs	32
4.5 DieselInputs Struct Reference	32
4.5.1 Detailed Description	33
4.5.2 Member Data Documentation	33
4.5.2.1 capital_cost	33
4.5.2.2 CH4_emissions_intensity_kgL	34
4.5.2.3 CO2_emissions_intensity_kgL	34
4.5.2.4 CO_emissions_intensity_kgL	34

4.5.2.5 combustion_inputs	34
4.5.2.6 fuel_cost_L	34
4.5.2.7 linear_fuel_intercept_LkWh	34
4.5.2.8 linear_fuel_slope_LkWh	35
4.5.2.9 minimum_load_ratio	35
4.5.2.10 minimum_runtime_hrs	35
4.5.2.11 NOx_emissions_intensity_kgL	35
4.5.2.12 operation_maintenance_cost_kWh	35
4.5.2.13 PM_emissions_intensity_kgL	36
4.5.2.14 replace_running_hrs	36
4.5.2.15 SOx_emissions_intensity_kgL	36
4.6 ElectricalLoad Class Reference	36
4.6.1 Detailed Description	37
4.6.2 Constructor & Destructor Documentation	37
4.6.2.1 ElectricalLoad() [1/2]	37
4.6.2.2 ElectricalLoad() [2/2]	37
4.6.2.3 ∼ElectricalLoad()	38
4.6.3 Member Function Documentation	38
4.6.3.1 clear()	38
4.6.3.2 readLoadData()	38
4.6.4 Member Data Documentation	39
4.6.4.1 dt_vec_hrs	39
4.6.4.2 load_vec_kW	40
4.6.4.3 max_load_kW	40
4.6.4.4 mean_load_kW	40
4.6.4.5 min_load_kW	40
4.6.4.6 n_points	40
4.6.4.7 n_years	40
4.6.4.8 path_2_electrical_load_time_series	41
4.6.4.9 time_vec_hrs	41
4.7 Emissions Struct Reference	41
4.7.1 Detailed Description	41
4.7.2 Member Data Documentation	41
4.7.2.1 CH4_kg	42
4.7.2.2 CO2_kg	42
4.7.2.3 CO_kg	42
4.7.2.4 NOx_kg	42
4.7.2.5 PM_kg	42
4.7.2.6 SOx_kg	42
4.8 Lilon Class Reference	43
4.8.1 Detailed Description	43
4.8.2 Constructor & Destructor Documentation	44

4.8.2.1 Lilon()	44
4.8.2.2 ~Lilon()	44
4.9 Model Class Reference	44
4.9.1 Detailed Description	46
4.9.2 Constructor & Destructor Documentation	46
4.9.2.1 Model() [1/2]	46
4.9.2.2 Model() [2/2]	46
4.9.2.3 ~Model()	46
4.9.3 Member Function Documentation	47
4.9.3.1checkInputs()	47
4.9.3.2 addDiesel()	47
4.9.3.3 addResource()	47
4.9.3.4 addSolar()	48
4.9.3.5 addTidal()	48
4.9.3.6 addWave()	49
4.9.3.7 addWind()	49
4.9.3.8 clear()	49
4.9.3.9 reset()	50
4.9.3.10 run()	50
4.9.4 Member Data Documentation	50
4.9.4.1 combustion_ptr_vec	50
4.9.4.2 controller	51
4.9.4.3 electrical_load	51
4.9.4.4 renewable_ptr_vec	51
4.9.4.5 resources	51
4.9.4.6 storage_ptr_vec	51
4.10 ModelInputs Struct Reference	51
4.10.1 Detailed Description	52
4.10.2 Member Data Documentation	52
4.10.2.1 control_mode	52
4.10.2.2 path_2_electrical_load_time_series	52
4.11 Production Class Reference	53
4.11.1 Detailed Description	55
4.11.2 Constructor & Destructor Documentation	55
4.11.2.1 Production() [1/2]	55
4.11.2.2 Production() [2/2]	55
4.11.2.3 ~ Production()	56
4.11.3 Member Function Documentation	56
4.11.3.1checkInputs()	56
4.11.3.2computeRealDiscountAnnual()	57
4.11.3.3handleReplacement()	57
4.11.3.4 commit()	58

59
59
59
59
59
60
60
60
60
60
60
61
61
61
61
61
61
62
62
62
62
62
62
63
63
63
63
63
64
64
64
64
65
66
66
66
66
67
67
67
68
68

4.13.3.4 computeProductionkW() [1/2]	69
4.13.3.5 computeProductionkW() [2/2]	69
4.13.4 Member Data Documentation	69
4.13.4.1 resource_key	69
4.13.4.2 type	69
4.14 RenewableInputs Struct Reference	70
4.14.1 Detailed Description	70
4.14.2 Member Data Documentation	70
4.14.2.1 production_inputs	70
4.15 Resources Class Reference	71
4.15.1 Detailed Description	72
4.15.2 Constructor & Destructor Documentation	72
4.15.2.1 Resources()	72
4.15.2.2 ∼Resources()	72
4.15.3 Member Function Documentation	72
4.15.3.1checkResourceKey1D()	72
4.15.3.2checkResourceKey2D()	73
4.15.3.3checkTimePoint()	74
4.15.3.4readSolarResource()	74
4.15.3.5readTidalResource()	75
4.15.3.6readWaveResource()	76
4.15.3.7readWindResource()	77
4.15.3.8throwLengthError()	78
4.15.3.9 addResource()	79
4.15.3.10 clear()	80
4.15.4 Member Data Documentation	80
4.15.4.1 path_map_1D	80
4.15.4.2 path_map_2D	80
4.15.4.3 resource_map_1D	80
4.15.4.4 resource_map_2D	81
4.16 Solar Class Reference	81
4.16.1 Detailed Description	82
4.16.2 Constructor & Destructor Documentation	82
4.16.2.1 Solar() [1/2]	82
4.16.2.2 Solar() [2/2]	83
4.16.2.3 ∼Solar()	83
4.16.3 Member Function Documentation	84
4.16.3.1checkInputs()	84
4.16.3.2getGenericCapitalCost()	84
4.16.3.3getGenericOpMaintCost()	84
4.16.3.4 commit()	85
4.16.3.5 computeProductionkW()	85

4.16.4 Member Data Documentation	 86
4.16.4.1 derating	 86
4.17 SolarInputs Struct Reference	 86
4.17.1 Detailed Description	 87
4.17.2 Member Data Documentation	 87
4.17.2.1 capital_cost	 88
4.17.2.2 derating	 88
4.17.2.3 operation_maintenance_cost_kWh	 88
4.17.2.4 renewable_inputs	 88
4.17.2.5 resource_key	 88
4.18 Storage Class Reference	 89
4.18.1 Detailed Description	 89
4.18.2 Constructor & Destructor Documentation	 89
4.18.2.1 Storage()	 89
4.18.2.2 ~Storage()	 90
4.19 Tidal Class Reference	 90
4.19.1 Detailed Description	 92
4.19.2 Constructor & Destructor Documentation	 92
4.19.2.1 Tidal() [1/2]	 92
4.19.2.2 Tidal() [2/2]	 92
4.19.2.3 ∼Tidal()	 93
4.19.3 Member Function Documentation	 93
4.19.3.1checkInputs()	 93
4.19.3.2computeCubicProductionkW()	 94
4.19.3.3computeExponentialProductionkW()	 94
4.19.3.4computeLookupProductionkW()	 95
4.19.3.5getGenericCapitalCost()	 96
4.19.3.6getGenericOpMaintCost()	 96
4.19.3.7 commit()	 96
4.19.3.8 computeProductionkW()	 97
4.19.4 Member Data Documentation	 98
4.19.4.1 design_speed_ms	 98
4.19.4.2 power_model	 98
4.20 TidalInputs Struct Reference	 99
4.20.1 Detailed Description	 99
4.20.2 Member Data Documentation	 100
4.20.2.1 capital_cost	 100
4.20.2.2 design_speed_ms	 100
4.20.2.3 operation_maintenance_cost_kWh	 100
4.20.2.4 power_model	 100
4.20.2.5 renewable_inputs	 100
4.20.2.6 resource_key	 101

4.21 Wave Class Reference	101
4.21.1 Detailed Description	102
4.21.2 Constructor & Destructor Documentation	102
4.21.2.1 Wave() [1/2]	102
4.21.2.2 Wave() [2/2]	103
4.21.2.3 ∼ W ave()	103
4.21.3 Member Function Documentation	104
4.21.3.1checkInputs()	104
4.21.3.2computeGaussianProductionkW()	104
4.21.3.3computeLookupProductionkW()	105
4.21.3.4computeParaboloidProductionkW()	105
4.21.3.5getGenericCapitalCost()	107
4.21.3.6getGenericOpMaintCost()	108
4.21.3.7 commit()	108
4.21.3.8 computeProductionkW()	109
4.21.4 Member Data Documentation	110
4.21.4.1 design_energy_period_s	110
4.21.4.2 design_significant_wave_height_m	110
4.21.4.3 power_model	110
4.22 WaveInputs Struct Reference	111
4.22.1 Detailed Description	112
4.22.2 Member Data Documentation	112
4.22.2.1 capital_cost	112
4.22.2.2 design_energy_period_s	112
4.22.2.3 design_significant_wave_height_m	112
4.22.2.4 operation_maintenance_cost_kWh	112
4.22.2.5 power_model	113
4.22.2.6 renewable_inputs	113
4.22.2.7 resource_key	113
4.23 Wind Class Reference	113
4.23.1 Detailed Description	115
4.23.2 Constructor & Destructor Documentation	115
4.23.2.1 Wind() [1/2]	115
4.23.2.2 Wind() [2/2]	115
4.23.2.3 ∼ Wind()	116
4.23.3 Member Function Documentation	116
4.23.3.1checkInputs()	116
4.23.3.2computeExponentialProductionkW()	116
4.23.3.3computeLookupProductionkW()	117
4.23.3.4getGenericCapitalCost()	118
4.23.3.5getGenericOpMaintCost()	118
4.23.3.6 commit()	118

	4.23.3.7 computeProductionkW()	119
	4.23.4 Member Data Documentation	120
	4.23.4.1 design_speed_ms	120
	4.23.4.2 power_model	120
	4.24 WindInputs Struct Reference	121
	4.24.1 Detailed Description	121
	4.24.2 Member Data Documentation	122
	4.24.2.1 capital_cost	122
	4.24.2.2 design_speed_ms	122
	4.24.2.3 operation_maintenance_cost_kWh	122
	4.24.2.4 power_model	122
	4.24.2.5 renewable_inputs	122
	4.24.2.6 resource_key	122
	The Decomposite tion	100
1 C	File Documentation	123
	5.1 header/Controller.h File Reference	
	5.1.1 Detailed Description	
	5.1.2 Enumeration Type Documentation	
	5.1.2.1 ControlMode	
	5.2 header/ElectricalLoad.h File Reference	
	5.2.1 Detailed Description	
	5.3 header/Model.h File Reference	
	5.3.1 Detailed Description	
	5.4 header/Production/Combustion/Combustion.h File Reference	
	5.4.1 Detailed Description	
	5.4.2 Enumeration Type Documentation	
	5.4.2.1 CombustionType	
	5.5 header/Production/Combustion/Diesel.h File Reference	
	5.5.1 Detailed Description	
	5.6 header/Production/Production.h File Reference	
	5.6.1 Detailed Description	
	5.7 header/Production/Renewable/Renewable.h File Reference	
	5.7.1 Detailed Description	
	5.7.2 Enumeration Type Documentation	
	5.7.2.1 RenewableType	
	5.8 header/Production/Renewable/Solar.h File Reference	
	5.8.1 Detailed Description	
	5.9 header/Production/Renewable/Tidal.h File Reference	
	5.9.1 Detailed Description	
	5.9.2 Enumeration Type Documentation	
	5.9.2.1 TidalPowerProductionModel	134
	5.10 header/Production/Renewable/Wave.h File Reference	134

5.10.1 Detailed Description
5.10.2 Enumeration Type Documentation
5.10.2.1 WavePowerProductionModel
5.11 header/Production/Renewable/Wind.h File Reference
5.11.1 Detailed Description
5.11.2 Enumeration Type Documentation
5.11.2.1 WindPowerProductionModel
5.12 header/Resources.h File Reference
5.12.1 Detailed Description
5.13 header/std_includes.h File Reference
5.13.1 Detailed Description
5.14 header/Storage/Lilon.h File Reference
5.14.1 Detailed Description
5.15 header/Storage/Storage.h File Reference
5.15.1 Detailed Description
5.16 pybindings/PYBIND11_PGM.cpp File Reference
5.16.1 Detailed Description
5.16.2 Function Documentation
5.16.2.1 PYBIND11_MODULE()
5.17 source/Controller.cpp File Reference
5.17.1 Detailed Description
5.18 source/ElectricalLoad.cpp File Reference
5.18.1 Detailed Description
5.19 source/Model.cpp File Reference
5.19.1 Detailed Description
5.20 source/Production/Combustion/Combustion.cpp File Reference
5.20.1 Detailed Description
5.21 source/Production/Combustion/Diesel.cpp File Reference
5.21.1 Detailed Description
5.22 source/Production/Production.cpp File Reference
5.22.1 Detailed Description
5.23 source/Production/Renewable/Renewable.cpp File Reference
5.23.1 Detailed Description
5.24 source/Production/Renewable/Solar.cpp File Reference
5.24.1 Detailed Description
5.25 source/Production/Renewable/Tidal.cpp File Reference
5.25.1 Detailed Description
5.26 source/Production/Renewable/Wave.cpp File Reference
5.26.1 Detailed Description
5.27 source/Production/Renewable/Wind.cpp File Reference
5.27.1 Detailed Description
5.28 source/Resources.cop File Reference

5.28.1 Detailed Description	48
5.29 source/Storage/Lilon.cpp File Reference	48
5.29.1 Detailed Description	49
5.30 source/Storage/Storage.cpp File Reference	49
5.30.1 Detailed Description	49
5.31 test/source/Production/Combustion/test_Combustion.cpp File Reference	49
5.31.1 Detailed Description	50
5.31.2 Function Documentation	50
5.31.2.1 main()	50
5.32 test/source/Production/Combustion/test_Diesel.cpp File Reference	51
5.32.1 Detailed Description	52
5.32.2 Function Documentation	52
5.32.2.1 main()	52
5.33 test/source/Production/Renewable/test_Renewable.cpp File Reference	57
5.33.1 Detailed Description	57
5.33.2 Function Documentation	57
5.33.2.1 main()	58
5.34 test/source/Production/Renewable/test_Solar.cpp File Reference	58
5.34.1 Detailed Description	59
5.34.2 Function Documentation	59
5.34.2.1 main()	59
5.35 test/source/Production/Renewable/test_Tidal.cpp File Reference	62
5.35.1 Detailed Description	63
5.35.2 Function Documentation	63
5.35.2.1 main()	63
5.36 test/source/Production/Renewable/test_Wave.cpp File Reference	66
5.36.1 Detailed Description	67
5.36.2 Function Documentation	67
5.36.2.1 main()	67
5.37 test/source/Production/Renewable/test_Wind.cpp File Reference	70
5.37.1 Detailed Description	70
5.37.2 Function Documentation	70
5.37.2.1 main()	71
5.38 test/source/Production/test_Production.cpp File Reference	73
5.38.1 Detailed Description	74
5.38.2 Function Documentation	74
5.38.2.1 main()	74
5.39 test/source/Storage/test_Lilon.cpp File Reference	76
5.39.1 Detailed Description	76
5.39.2 Function Documentation	77
5.39.2.1 main()	77
5.40 test/source/Storage/test_Storage.cpp File Reference	77

5.40.1 Detailed Description	178
5.40.2 Function Documentation	178
5.40.2.1 main()	178
5.41 test/source/test_Controller.cpp File Reference	178
5.41.1 Detailed Description	179
5.41.2 Function Documentation	179
5.41.2.1 main()	179
5.42 test/source/test_ElectricalLoad.cpp File Reference	180
5.42.1 Detailed Description	180
5.42.2 Function Documentation	181
5.42.2.1 main()	181
5.43 test/source/test_Model.cpp File Reference	183
5.43.1 Detailed Description	183
5.43.2 Function Documentation	183
5.43.2.1 main()	184
5.44 test/source/test_Resources.cpp File Reference	189
5.44.1 Detailed Description	189
5.44.2 Function Documentation	189
5.44.2.1 main()	189
5.45 test/utils/testing_utils.cpp File Reference	195
5.45.1 Detailed Description	196
5.45.2 Function Documentation	196
5.45.2.1 expectedErrorNotDetected()	196
5.45.2.2 printGold()	196
5.45.2.3 printGreen()	197
5.45.2.4 printRed()	197
5.45.2.5 testFloatEquals()	197
5.45.2.6 testGreaterThan()	198
5.45.2.7 testGreaterThanOrEqualTo()	199
5.45.2.8 testLessThan()	199
5.45.2.9 testLessThanOrEqualTo()	201
5.45.2.10 testTruth()	202
5.46 test/utils/testing_utils.h File Reference	202
5.46.1 Detailed Description	203
5.46.2 Macro Definition Documentation	203
5.46.2.1 FLOAT_TOLERANCE	203
5.46.3 Function Documentation	203
5.46.3.1 expectedErrorNotDetected()	203
5.46.3.2 printGold()	204
5.46.3.3 printGreen()	204
5.46.3.4 printRed()	204
5.46.3.5 testFloatEquals()	205

5.46.3.10 testTruth()	208
5.46.3.9 testLessThanOrEqualTo()	207
5.46.3.8 testLessThan()	207
5.46.3.7 testGreaterThanOrEqualTo()	206
5.46.3.6 testGreaterThan()	205

Chapter 1

Hierarchical Index

1.1 Class Hierarchy

This inheritance list is sorted roughly, but not completely, alphabetically:

Compustioninputs	16
Controller	17
Diesellnputs	32
ElectricalLoad	36
Emissions	41
Model	44
ModelInputs	51
Production	53
Combustion	. 7
Diesel	
Renewable	
Solar	
Tidal	
Wave	
Wind	
ProductionInputs	
RenewableInputs	
Resources	_
SolarInputs	
Storage	
•	
Lilon	
TidalInputs	
WaveInputs	
WindInputs	121

2 Hierarchical Index

Chapter 2

Class Index

2.1 Class List

Here are the classes, structs, unions and interfaces with brief descriptions:

Combusti	ion	
	The root of the Combustion branch of the Production hierarchy. This branch contains derived classes which model the production of energy by way of combustibles	7
Combusti	ionInputs	
	A structure which bundles the necessary inputs for the Combustion constructor. Provides default values for every necessary input. Note that this structure encapsulates ProductionInputs	16
Controlle	r	
	A class which contains a various dispatch control logic. Intended to serve as a component class of Model	17
Diesel		
	A derived class of the Combustion branch of Production which models production using a diesel generator	22
DieselInp		
	A structure which bundles the necessary inputs for the Diesel constructor. Provides default values for every necessary input. Note that this structure encapsulates CombustionInputs	32
Electrical		
	A class which contains time and electrical load data. Intended to serve as a component class of Model	36
Emission	S	
Lilon	A structure which bundles the emitted masses of various emissions chemistries	41
Model	A derived class of Storage which models energy storage by way of lithium-ion batteries	43
	A container class which forms the centre of PGMcpp. The Model class is intended to serve as the primary user interface with the functionality of PGMcpp, and as such it contains all other classes	44
ModelInp		
	A structure which bundles the necessary inputs for the Model constructor. Provides default values for every necessary input (except path_2_electrical_load_time_series, for which a valid input must be provided)	51
Productio	on'	
	The base class of the Production hierarchy. This hierarchy contains derived classes which model the production of energy, be it renewable or otherwise	53
Productio	onInputs	
	A structure which bundles the necessary inputs for the Production constructor. Provides default values for every necessary input	63

4 Class Index

Renewa	uble	
	The root of the Renewable branch of the Production hierarchy. This branch contains derived classes which model the renewable production of energy	65
Renewa	bleInputs	
	A structure which bundles the necessary inputs for the Renewable constructor. Provides default values for every necessary input. Note that this structure encapsulates ProductionInputs	70
Resourc		
	A class which contains renewable resource data. Intended to serve as a component class of Model	71
Solar		
	A derived class of the Renewable branch of Production which models solar production	81
SolarInp	outs	
	A structure which bundles the necessary inputs for the Solar constructor. Provides default values for every necessary input. Note that this structure encapsulates RenewableInputs	86
Storage		
	The base class of the Storage hierarchy. This hierarchy contains derived classes which model the storage of energy	89
Tidal		
TidalInp	A derived class of the Renewable branch of Production which models tidal production	90
	A structure which bundles the necessary inputs for the Tidal constructor. Provides default values for every necessary input. Note that this structure encapsulates RenewableInputs	99
Wave		
	A derived class of the Renewable branch of Production which models wave production	101
WaveInp	puts	
	A structure which bundles the necessary inputs for the Wave constructor. Provides default values	
	for every necessary input. Note that this structure encapsulates RenewableInputs	111
Wind		
	A derived class of the Renewable branch of Production which models wind production	113
WindInp		
	A structure which bundles the necessary inputs for the Wind constructor. Provides default values	
	for every necessary input. Note that this structure encapsulates RenewableInputs	121

Chapter 3

File Index

3.1 File List

Here is a list of all files with brief descriptions:

header/Controller.h	
Header file the Controller class	23
header/ElectricalLoad.h	
Header file the ElectricalLoad class	24
header/Model.h	
Header file the Model class	25
header/Resources.h	
Header file the Resources class	37
header/std_includes.h	
Header file which simply batches together the usual, standard includes	38
header/Production/Production.h	
Header file the Production class	30
header/Production/Combustion.h	
	26
header/Production/Combustion/Diesel.h	
Header file the Diesel class	29
header/Production/Renewable/Renewable.h	
Header file the Renewable class	31
header/Production/Renewable/Solar.h	
Header file the Solar class	32
header/Production/Renewable/Tidal.h	
Header file the Tidal class	33
header/Production/Renewable/Wave.h	
Header file the Wave class	34
header/Production/Renewable/Wind.h	
	36
header/Storage/Lilon.h	
Header file the Lilon class	39
header/Storage/Storage.h	
Thousand the cloudy class in the contract of t	40
pybindings/PYBIND11_PGM.cpp	
Python 3 bindings file for PGMcpp	40
source/Controller.cpp	
	42
source/ElectricalLoad.cpp	
Implementation file for the ElectricalLoad class	43

6 File Index

source/Model.cpp	
Implementation file for the Model class	143
source/Resources.cpp	
Implementation file for the Resources class	148
source/Production/Production.cpp	
Implementation file for the Production class	145
source/Production/Combustion/Combustion.cpp	
Implementation file for the Combustion class	144
source/Production/Combustion/Diesel.cpp	
Implementation file for the Diesel class	144
source/Production/Renewable/Renewable.cpp	
Implementation file for the Renewable class	145
source/Production/Renewable/Solar.cpp	
Implementation file for the Solar class	146
source/Production/Renewable/Tidal.cpp	
Implementation file for the Tidal class	146
source/Production/Renewable/Wave.cpp	
Implementation file for the Wave class	147
source/Production/Renewable/Wind.cpp	
Implementation file for the Wind class	147
source/Storage/Lilon.cpp	
Implementation file for the Lilon class	148
source/Storage/Storage.cpp	
Implementation file for the Storage class	149
test/source/test_Controller.cpp	
Testing suite for Controller class	178
test/source/test_ElectricalLoad.cpp	
Testing suite for ElectricalLoad class	180
test/source/test_Model.cpp	
Testing suite for Model class	183
test/source/test_Resources.cpp	
Testing suite for Resources class	189
test/source/Production/test_Production.cpp	
Testing suite for Production class	173
test/source/Production/Combustion/test_Combustion.cpp	
Testing suite for Combustion class	149
test/source/Production/Combustion/test_Diesel.cpp	
Testing suite for Diesel class	151
test/source/Production/Renewable/test_Renewable.cpp	
Testing suite for Renewable class	157
test/source/Production/Renewable/test_Solar.cpp	
Testing suite for Solar class	158
test/source/Production/Renewable/test_Tidal.cpp	
Testing suite for Tidal class	162
test/source/Production/Renewable/test_Wave.cpp	
Testing suite for Wave class	166
test/source/Production/Renewable/test_Wind.cpp	
Testing suite for Wind class	170
test/source/Storage/test_Lilon.cpp	
Testing suite for Lilon class	176
test/source/Storage/test_Storage.cpp	
Testing suite for Storage class	177
test/utils/testing_utils.cpp	
Header file for various PGMcpp testing utilities	195
test/utils/testing_utils.h	
Header file for various PGMcpp testing utilities	202

Chapter 4

Class Documentation

4.1 Combustion Class Reference


The root of the Combustion branch of the Production hierarchy. This branch contains derived classes which model the production of energy by way of combustibles.

#include <Combustion.h>

Inheritance diagram for Combustion:



Collaboration diagram for Combustion:

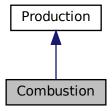

Public Member Functions

· Combustion (void)

Constructor (dummy) for the Combustion class.

Combustion (int, CombustionInputs)

Constructor (intended) for the Combustion class.

- virtual double requestProductionkW (int, double, double)
- virtual double commit (int, double, double, double)

Method which takes in production and load for the current timestep, computes and records dispatch and curtailment, and then returns remaining load.

double getFuelConsumptionL (double, double)

Method which takes in production and returns volume of fuel burned over the given interval of time.

• Emissions getEmissionskg (double)

Method which takes in volume of fuel consumed and returns mass spectrum of resulting emissions.

virtual ∼Combustion (void)

Destructor for the Combustion class.

Public Attributes

• CombustionType type

The type (CombustionType) of the asset.

double fuel cost L

The cost of fuel [1/L] (undefined currency).

· double linear fuel slope LkWh

The slope [L/kWh] to use in computing linearized fuel consumption. This is fuel consumption per unit energy produced.

double linear_fuel_intercept_LkWh

The intercept [L/kWh] to use in computing linearized fuel consumption. This is fuel consumption per unit energy produced.

· double CO2 emissions intensity kgL

Carbon dioxide (CO2) emissions intensity [kg/L].

· double CO_emissions_intensity_kgL

Carbon monoxide (CO) emissions intensity [kg/L].

· double NOx emissions intensity kgL

Nitrogen oxide (NOx) emissions intensity [kg/L].

• double SOx_emissions_intensity_kgL

Sulfur oxide (SOx) emissions intensity [kg/L].

· double CH4 emissions intensity kgL

Methane (CH4) emissions intensity [kg/L].

· double PM_emissions_intensity_kgL

Particulate Matter (PM) emissions intensity [kg/L].

std::vector< double > fuel_consumption_vec_L

A vector of fuel consumed [L] over each modelling time step.

std::vector< double > fuel_cost_vec

A vector of fuel costs (undefined currency) incurred over each modelling time step. These costs are not discounted (i.e., these are nominal costs).

std::vector< double > CO2 emissions vec kg

A vector of carbon dioxide (CO2) emitted [kg] over each modelling time step.

std::vector< double > CO_emissions_vec_kg

A vector of carbon monoxide (CO) emitted [kg] over each modelling time step.

std::vector< double > NOx_emissions_vec_kg

A vector of nitrogen oxide (NOx) emitted [kg] over each modelling time step.

std::vector< double > SOx emissions vec kg

A vector of sulfur oxide (SOx) emitted [kg] over each modelling time step.

std::vector< double > CH4_emissions_vec_kg

A vector of methane (CH4) emitted [kg] over each modelling time step.

std::vector< double > PM_emissions_vec_kg

A vector of particulate matter (PM) emitted [kg] over each modelling time step.

Private Member Functions

void checkInputs (CombustionInputs)

Helper method to check inputs to the Combustion constructor.

4.1.1 Detailed Description

The root of the Combustion branch of the Production hierarchy. This branch contains derived classes which model the production of energy by way of combustibles.

4.1.2 Constructor & Destructor Documentation

4.1.2.1 Combustion() [1/2]

Constructor (dummy) for the Combustion class.

```
64 return;
65 } /* Combustion() */
```

4.1.2.2 Combustion() [2/2]

Constructor (intended) for the Combustion class.

Parameters

n_points	The number of points in the modelling time series.
combustion_inputs	A structure of Combustion constructor inputs.

```
84 Production(n_points, combustion_inputs.production_inputs)
85 {
       // 1. check inputs
86
       this->__checkInputs(combustion_inputs);
87
88
89
       // 2. set attributes
90
       this->fuel_cost_L = 0;
91
92
       this->linear_fuel_slope_LkWh = 0;
       this->linear_fuel_intercept_LkWh = 0;
93
95
       this->CO2_emissions_intensity_kgL = 0;
96
       this->CO_emissions_intensity_kgL = 0;
97
       this->NOx_emissions_intensity_kgL = 0;
       this->SOx_emissions_intensity_kgL = 0;
this->CH4_emissions_intensity_kgL = 0;
98
99
100
       this->PM_emissions_intensity_kgL = 0;
101
102
        this->fuel_consumption_vec_L.resize(this->n_points, 0);
103
       this->fuel_cost_vec.resize(this->n_points, 0);
104
105
        this->CO2 emissions vec kg.resize(this->n points, 0);
        this->CO_emissions_vec_kg.resize(this->n_points, 0);
106
107
        this->NOx_emissions_vec_kg.resize(this->n_points, 0);
108
        this->SOx_emissions_vec_kg.resize(this->n_points, 0);
109
        this->CH4_emissions_vec_kg.resize(this->n_points, 0);
110
        this->PM_emissions_vec_kg.resize(this->n_points, 0);
111
            3. construction print
112
113
        if (this->print_flag) {
114
            std::cout « "Combustion object constructed at " « this « std::endl;
115
116
117
        return;
       /* Combustion() */
118 }
```

4.1.2.3 \sim Combustion()

```
\label{eq:combustion:} \mbox{Combustion::$$\sim$Combustion (} \mbox{void ) [virtual]}
```

Destructor for the Combustion class.

4.1.3 Member Function Documentation

4.1.3.1 __checkInputs()

Helper method to check inputs to the Combustion constructor.

Parameters

combustion_inputs A structure of Combustion constructor inputs.

4.1.3.2 commit()

```
double Combustion::commit (
    int timestep,
    double dt_hrs,
    double production_kW,
    double load_kW ) [virtual]
```

Method which takes in production and load for the current timestep, computes and records dispatch and curtailment, and then returns remaining load.

Parameters

timestep	The timestep (i.e., time series index) for the request.
dt_hrs	The interval of time [hrs] associated with the timestep.
production_kW	The production [kW] of the asset in this timestep.
load_kW	The load [kW] passed to the asset in this timestep.

Returns

The load [kW] remaining after the dispatch is deducted from it.

Reimplemented from Production.

Reimplemented in Diesel.

```
154 {
155
         // 1. invoke base class method
156
        load_kW = Production :: commit(
157
            timestep,
158
            dt_hrs,
            production_kW,
159
160
             load kW
161
        );
162
163
164
        if (this->is_running) {
            // 2. compute and record fuel consumption
165
            double fuel_consumed_L = this->getFuelConsumptionL(dt_hrs, production_kW);
166
            this->fuel_consumption_vec_L[timestep] = fuel_consumed_L;
167
169
             // 3. compute and record emissions
170
            Emissions emissions = this->getEmissionskg(fuel_consumed_L);
            this>>CO2_emissions_vec_kg[timestep] = emissions.CO2_kg;
this->CO_emissions_vec_kg[timestep] = emissions.CO_kg;
171
172
            this->NOx_emissions_vec_kg[timestep] = emissions.NOx_kg;
173
174
            this->SOx_emissions_vec_kg[timestep] = emissions.SOx_kg;
             this->CH4_emissions_vec_kg[timestep] = emissions.CH4_kg;
175
176
            this->PM_emissions_vec_kg[timestep] = emissions.PM_kg;
177
178
             // 4. incur fuel costs
179
            this->fuel_cost_vec[timestep] = fuel_consumed_L * this->fuel_cost_L;
180
```

4.1.3.3 getEmissionskg()

Method which takes in volume of fuel consumed and returns mass spectrum of resulting emissions.

Parameters

fuel_consumed↔	The volume of fuel consumed [L].
_L	

Returns

A structure containing the mass spectrum of resulting emissions.

```
231
232
        Emissions emissions;
233
234
        emissions.CO2_kg = this->CO2_emissions_intensity_kgL * fuel_consumed_L;
235
        emissions.CO_kg = this->CO_emissions_intensity_kgL * fuel_consumed_L;
236
        emissions.NOx_kg = this->NOx_emissions_intensity_kgL * fuel_consumed_L;
237
        emissions.SOx_kg = this->SOx_emissions_intensity_kgL * fuel_consumed_L;
238
        \verb|emissions.CH4_kg| = \verb|this->CH4_emissions_intensity_kgL| * fuel\_consumed_L; \\
        emissions.PM_kg = this->PM_emissions_intensity_kgL * fuel_consumed_L;
239
240
241
        return emissions;
       /* getEmissionskg() */
```

4.1.3.4 getFuelConsumptionL()

Method which takes in production and returns volume of fuel burned over the given interval of time.

Parameters

dt_hrs	The interval of time [hrs] associated with the timestep.
production_kW	The production [kW] of the asset in this timestep.

Returns

The volume of fuel consumed [L].

```
209    ) * dt_hrs;
210
211    return fuel_consumed_L;
212 } /* getFuelConsumptionL() */
```

4.1.3.5 requestProductionkW()

Reimplemented in Diesel.

117 {return 0;}

4.1.4 Member Data Documentation

4.1.4.1 CH4_emissions_intensity_kgL

```
double Combustion::CH4_emissions_intensity_kgL
```

Methane (CH4) emissions intensity [kg/L].

4.1.4.2 CH4_emissions_vec_kg

```
std::vector<double> Combustion::CH4_emissions_vec_kg
```

A vector of methane (CH4) emitted [kg] over each modelling time step.

4.1.4.3 CO2_emissions_intensity_kgL

```
double Combustion::CO2_emissions_intensity_kgL
```

Carbon dioxide (CO2) emissions intensity [kg/L].

4.1.4.4 CO2_emissions_vec_kg

```
std::vector<double> Combustion::CO2_emissions_vec_kg
```

A vector of carbon dioxide (CO2) emitted [kg] over each modelling time step.

4.1.4.5 CO_emissions_intensity_kgL

```
double Combustion::CO_emissions_intensity_kgL
```

Carbon monoxide (CO) emissions intensity [kg/L].

4.1.4.6 CO_emissions_vec_kg

```
std::vector<double> Combustion::CO_emissions_vec_kg
```

A vector of carbon monoxide (CO) emitted [kg] over each modelling time step.

4.1.4.7 fuel_consumption_vec_L

```
std::vector<double> Combustion::fuel_consumption_vec_L
```

A vector of fuel consumed [L] over each modelling time step.

4.1.4.8 fuel_cost_L

double Combustion::fuel_cost_L

The cost of fuel [1/L] (undefined currency).

4.1.4.9 fuel_cost_vec

```
std::vector<double> Combustion::fuel_cost_vec
```

A vector of fuel costs (undefined currency) incurred over each modelling time step. These costs are not discounted (i.e., these are nominal costs).

4.1.4.10 linear_fuel_intercept_LkWh

```
double Combustion::linear_fuel_intercept_LkWh
```

The intercept [L/kWh] to use in computing linearized fuel consumption. This is fuel consumption per unit energy produced.

4.1.4.11 linear_fuel_slope_LkWh

```
double Combustion::linear_fuel_slope_LkWh
```

The slope [L/kWh] to use in computing linearized fuel consumption. This is fuel consumption per unit energy produced.

4.1.4.12 NOx_emissions_intensity_kgL

```
double Combustion::NOx_emissions_intensity_kgL
```

Nitrogen oxide (NOx) emissions intensity [kg/L].

4.1.4.13 NOx_emissions_vec_kg

```
std::vector<double> Combustion::NOx_emissions_vec_kg
```

A vector of nitrogen oxide (NOx) emitted [kg] over each modelling time step.

4.1.4.14 PM_emissions_intensity_kgL

```
\verb|double Combustion::PM_emissions_intensity_kgL|\\
```

Particulate Matter (PM) emissions intensity [kg/L].

4.1.4.15 PM_emissions_vec_kg

```
std::vector<double> Combustion::PM_emissions_vec_kg
```

A vector of particulate matter (PM) emitted [kg] over each modelling time step.

4.1.4.16 SOx_emissions_intensity_kgL

 $\verb|double Combustion::SOx_emissions_intensity_kgL|\\$

Sulfur oxide (SOx) emissions intensity [kg/L].

4.1.4.17 SOx_emissions_vec_kg

```
std::vector<double> Combustion::SOx_emissions_vec_kg
```

A vector of sulfur oxide (SOx) emitted [kg] over each modelling time step.

4.1.4.18 type

CombustionType Combustion::type

The type (CombustionType) of the asset.

The documentation for this class was generated from the following files:


- header/Production/Combustion/Combustion.h
- source/Production/Combustion/Combustion.cpp

4.2 CombustionInputs Struct Reference

A structure which bundles the necessary inputs for the Combustion constructor. Provides default values for every necessary input. Note that this structure encapsulates ProductionInputs.

```
#include <Combustion.h>
```

Collaboration diagram for CombustionInputs:

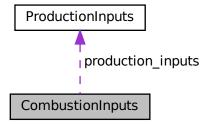

Public Attributes

ProductionInputs production_inputs
 An encapsulated ProductionInputs instance.

4.2.1 Detailed Description

A structure which bundles the necessary inputs for the Combustion constructor. Provides default values for every necessary input. Note that this structure encapsulates ProductionInputs.

4.2.2 Member Data Documentation

4.2.2.1 production_inputs

ProductionInputs CombustionInputs::production_inputs

An encapsulated ProductionInputs instance.

The documentation for this struct was generated from the following file:

header/Production/Combustion.h

4.3 Controller Class Reference

A class which contains a various dispatch control logic. Intended to serve as a component class of Model.

```
#include <Controller.h>
```

Public Member Functions

• Controller (void)

Constructor for the Controller class.

- void init (ElectricalLoad *, std::vector< Renewable * > *, Resources *, std::vector< Combustion * > *)
 Method to initialize the Controller component of the Model.
- void applyDispatchControl (ElectricalLoad *, std::vector < Combustion * > *, std::vector < Renewable * > *, std::vector < Storage * > *)

Method to apply dispatch control at every point in the modelling time series.

void clear (void)

Method to clear all attributes of the Controller object.

Controller (void)

Destructor for the Controller class.

Public Attributes

• ControlMode control_mode

The ControlMode that is active in the Model.

std::vector< double > net_load_vec_kW

A vector of net load values [kW] at each point in the modelling time series. Net load is defined as load minus all available Renewable production.

Private Member Functions

- void __computeNetLoad (ElectricalLoad *, std::vector< Renewable * > *, Resources *)
 Helper method to compute and populate the net load vector.
- double __getRenewableProduction (int, double, Renewable *, Resources *)

Helper method to compute the production from the given Renewable asset at the given point in time.

4.3.1 Detailed Description

A class which contains a various dispatch control logic. Intended to serve as a component class of Model.

4.3.2 Constructor & Destructor Documentation

4.3.2.1 Controller()

Constructor for the Controller class.

```
207 return;
208 } /* Controller() */
```

4.3.2.2 ∼Controller()

```
Controller::\simController ( void )
```

Destructor for the Controller class.

4.3.3 Member Function Documentation

4.3.3.1 __computeNetLoad()

Helper method to compute and populate the net load vector.

The net load at a given point in time is defined as the load at that point in time, minus the sum of all Renewable production at that point in time. Therefore, a negative net load indicates a surplus of Renewable production, and a positive net load indicates a deficit of Renewable production.

Parameters

electrical_load_ptr	A pointer to the ElectricalLoad component of the Model.
renewable_ptr_vec_ptr	A pointer to the Renewable pointer vector of the Model.
resources_ptr	A pointer to the Resources component of the Model.

```
57 {
        // 1. init
58
        this->net_load_vec_kW.resize(electrical_load_ptr->n_points, 0);
59
60
        // 2. populate net load vector
61
        double dt_hrs = 0;
double load_kW = 0;
63
        double net_load_kW = 0;
double production_kW = 0;
64
65
66
        Renewable* renewable_ptr;
68
        for (int i = 0; i < electrical_load_ptr->n_points; i++) {
69
             dt_hrs = electrical_load_ptr->dt_vec_hrs[i];
load_kW = electrical_load_ptr->load_vec_kW[i];
70
71
             net_load_kW = load_kW;
72
             for (size_t j = 0; j < renewable_ptr_vec_ptr->size(); j++) {
    renewable_ptr = renewable_ptr_vec_ptr->at(j);
75
76
                  {\tt production\_kW = this->\_\_getRenewableProduction(}
77
78
                       dt_hrs,
                       renewable_ptr,
                       resources_ptr
82
8.3
                  load_kW = renewable_ptr->commit(
84
85
                       dt_hrs,
87
                       production_kW,
88
                       load_kW
89
                  );
90
                  net_load_kW -= production_kW;
91
93
94
             this->net_load_vec_kW[i] = net_load_kW;
95
96
97
        return;
        /* __computeNetLoad() */
```

4.3.3.2 getRenewableProduction()

```
double Controller::__getRenewableProduction (
    int timestep,
    double dt_hrs,
    Renewable * renewable_ptr,
    Resources * resources_ptr ) [private]
```

Helper method to compute the production from the given Renewable asset at the given point in time.

Parameters

timestep	The current time step of the Model run.
dt_hrs	The interval of time [hrs] associated with the action.
renewable_ptr	A pointer to the Renewable asset.
resources_ptr	A pointer to the Resources component of the Model.

Returns

The production [kW] of the Renewable asset.

```
134 {
135
        double production_kW = 0;
136
137
        switch (renewable_ptr->type) {
138
            case (RenewableType :: SOLAR): {
139
                production_kW = renewable_ptr->computeProductionkW(
140
                     timestep,
141
                     dt hrs,
                     resources_ptr->resource_map_1D[renewable_ptr->resource_key][timestep]
142
143
                );
144
145
                 break;
146
             }
147
            case (RenewableType :: TIDAL): {
    production_kW = renewable_ptr->computeProductionkW(
148
149
150
                     timestep,
151
152
                     resources_ptr->resource_map_1D[renewable_ptr->resource_key][timestep]
153
                 );
154
155
                 break;
156
            }
157
158
             case (RenewableType :: WAVE): {
159
                production_kW = renewable_ptr->computeProductionkW(
160
                     timestep,
161
                     dt hrs.
                     resources_ptr->resource_map_2D[renewable_ptr->resource_key][timestep][0],
162
                     resources_ptr->resource_map_2D[renewable_ptr->resource_key][timestep][1]
163
164
                 );
165
166
                 break;
167
            }
168
169
             case (RenewableType :: WIND): {
170
                 production_kW = renewable_ptr->computeProductionkW(
171
                     timestep,
172
                     dt hrs.
173
                     resources_ptr->resource_map_1D[renewable_ptr->resource_key][timestep]
174
                );
175
176
                 break;
177
             }
178
             default: {
179
180
                 // do nothing!
181
                 break;
183
             }
184
185
        return production_kW;
186
187 }
        /* __getRenewableProduction() */
```

4.3.3.3 applyDispatchControl()

Method to apply dispatch control at every point in the modelling time series.

Parameters

electrical_load_ptr	A pointer to the ElectricalLoad component of the Model.
combustion_ptr_vec_ptr	A pointer to the Combustion pointer vector of the Model.
renewable_ptr_vec_ptr	A pointer to the Renewable pointer vector of the Model.
storage_ptr_vec_ptr	A pointer to the Storage pointer vector of the Model.

```
281 {
282
         for (int i = 0; i < electrical_load_ptr->n_points; i++) {
              switch (this->control_mode) {
   case (ControlMode :: LOAD_FOLLOWING): {
283
284
285
                      //this->__applyLoadFollowingControl();
286
287
288
                  }
289
                   case (ControlMode :: CYCLE_CHARGING): {
290
291
                       //this->__applyCycleChargingControl();
292
293
                       break;
294
295
296
297
                  default: {
    // do nothing!
298
299
                       break;
300
                  }
301
              }
         }
302
303
304    return;
305 }    /* applyDispatchControl() */
```

4.3.3.4 clear()

Method to clear all attributes of the Controller object.

4.3.3.5 init()

Method to initialize the Controller component of the Model.

Parameters

electrical_load_ptr	A pointer to the ElectricalLoad component of the Model.
renewable_ptr_vec_ptr	A pointer to the Renewable pointer vector of the Model.
resources_ptr	A pointer to the Resources component of the Model.
combustion_ptr_vec_ptr	A pointer to the Combustion pointer vector of the Model.

```
247 return;
248 } /* init() */
```

4.3.4 Member Data Documentation

4.3.4.1 control_mode

```
ControlMode Controller::control_mode
```

The ControlMode that is active in the Model.

4.3.4.2 net_load_vec_kW

```
std::vector<double> Controller::net_load_vec_kW
```

A vector of net load values [kW] at each point in the modelling time series. Net load is defined as load minus all available Renewable production.

The documentation for this class was generated from the following files:


- · header/Controller.h
- · source/Controller.cpp

4.4 Diesel Class Reference

A derived class of the Combustion branch of Production which models production using a diesel generator.


```
#include <Diesel.h>
```

Inheritance diagram for Diesel:



4.4 Diesel Class Reference 23

Collaboration diagram for Diesel:



Public Member Functions

• Diesel (void)

Constructor (dummy) for the Diesel class.

- Diesel (int, DieselInputs)
- double requestProductionkW (int, double, double)

Method which takes in production request, and then returns what the asset can deliver (subject to operating constraints, etc.).

• double commit (int, double, double, double)

Method which takes in production and load for the current timestep, computes and records dispatch and curtailment, and then returns remaining load.

∼Diesel (void)

Destructor for the Diesel class.

Public Attributes

• double minimum_load_ratio

The minimum load ratio of the asset. That is, when the asset is producing, it must produce at least this ratio of its rated capacity.

· double minimum runtime hrs

The minimum runtime [hrs] of the asset. This is the minimum time that must elapse between successive starts and stops.

• double time_since_last_start_hrs

The time that has elapsed [hrs] since the last start of the asset.

Private Member Functions

• void __checkInputs (DieselInputs)

Helper method to check inputs to the Diesel constructor.

void <u>handleStartStop</u> (int, double, double)

Helper method (private) to handle the starting/stopping of the diesel generator. The minimum runtime constraint is enforced in this method.

double <u>getGenericFuelSlope</u> (void)

Helper method to generate a generic, linearized fuel consumption slope for a diesel generator.

double <u>getGenericFuelIntercept</u> (void)

Helper method to generate a generic, linearized fuel consumption intercept for a diesel generator.

double getGenericCapitalCost (void)

Helper method to generate a generic diesel generator capital cost.

double getGenericOpMaintCost (void)

Helper method (private) to generate a generic diesel generator operation and maintenance cost. This is a cost incurred per unit energy produced.

4.4.1 Detailed Description

A derived class of the Combustion branch of Production which models production using a diesel generator.

4.4.2 Constructor & Destructor Documentation

4.4.2.1 Diesel() [1/2]

Constructor (dummy) for the Diesel class.

Constructor (intended) for the Diesel class.

Parameters

n_points	The number of points in the modelling time series.
diesel_inputs	A structure of Diesel constructor inputs.

```
337 {
338     return;
339 } /* Diesel() */
```

4.4.2.2 Diesel() [2/2]

```
358 Combustion(n_points, diesel_inputs.combustion_inputs)
359 {
360
         // 1. check inputs
         this->__checkInputs(diesel_inputs);
361
362
363
         // 2. set attributes
364
         this->type = CombustionType :: DIESEL;
365
         this->type_str = "DIESEL";
366
367
         this->replace_running_hrs = diesel_inputs.replace_running_hrs;
368
369
         this->fuel_cost_L = diesel_inputs.fuel_cost_L;
370
         this->minimum_load_ratio = diesel_inputs.minimum_load_ratio;
this->minimum_runtime_hrs = diesel_inputs.minimum_runtime_hrs;
371
372
373
         this->time_since_last_start_hrs = 0;
374
375
         this->CO2_emissions_intensity_kgL = diesel_inputs.CO2_emissions_intensity_kgL;
376
         this->CO_emissions_intensity_kgL = diesel_inputs.CO_emissions_intensity_kgL;
         this->NOx_emissions_intensity_kgL = diesel_inputs.NOx_emissions_intensity_kgL;
this->SOx_emissions_intensity_kgL = diesel_inputs.SOx_emissions_intensity_kgL;
377
378
         this->CH4_emissions_intensity_kgL = diesel_inputs.CH4_emissions_intensity_kgL;
379
         this->PM_emissions_intensity_kgL = diesel_inputs.PM_emissions_intensity_kgL;
380
381
         if (diesel_inputs.linear_fuel_slope_LkWh < 0) {
    this->linear_fuel_slope_LkWh = this->__getGenericFuelSlope();
382
383
384
385
386
387
         if (diesel_inputs.linear_fuel_intercept_LkWh < 0) {</pre>
388
             this->linear_fuel_intercept_LkWh = this->__getGenericFuelIntercept();
389
390
391
         if (diesel_inputs.capital_cost < 0) {</pre>
             this->capital_cost = this->__getGenericCapitalCost();
392
393
         }
394
395
         if (diesel_inputs.operation_maintenance_cost_kWh < 0) {</pre>
396
             this->operation_maintenance_cost_kWh = this->__getGenericOpMaintCost();
397
398
399
         if (this->is sunk) {
400
             this->capital_cost_vec[0] = this->capital_cost;
401
402
403
         // 3. construction print
         if (this->print_flag) {
    std::cout « "Diesel object constructed at " « this « std::endl;
404
405
406
407
408
         return;
409 }
        /* Diesel() */
```

4.4.2.3 ∼Diesel()

```
Diesel::~Diesel (
              void )
Destructor for the Diesel class.
538 {
539
         / 1. destruction print
540
        if (this->print_flag) {
541
            std::cout « "Diesel object at " « this « " destroyed" « std::endl;
542
543
544
        return;
545 }
       /* ~Diesel() */
```

4.4.3 Member Function Documentation

4.4.3.1 __checkInputs()

Helper method to check inputs to the Diesel constructor.

Parameters

diesel_inputs | A structure of Diesel constructor inputs.

```
39 (
40
        // 1. check fuel_cost_L
41
       if (diesel_inputs.fuel_cost_L < 0) {
            std::string error_str = "ERROR: Diesel(): ";
error_str += "DieselInputs::fuel_cost_L must be >= 0";
42
4.3
44
45
46
                std::cout « error_str « std::endl;
47
            #endif
48
49
            throw std::invalid_argument(error_str);
50
51
       // 2. check CO2_emissions_intensity_kgL
53
        if (diesel_inputs.CO2_emissions_intensity_kgL < 0) {
            std::string error_str = "ERROR: Diesel(): ";
error_str += "DieselInputs::CO2_emissions_intensity_kgL must be >= 0";
54
55
56
57
            #ifdef _WIN32
                std::cout « error_str « std::endl;
59
60
61
            throw std::invalid_argument(error_str);
62
63
64
       // 3. check CO_emissions_intensity_kgL
            if (diesel_inputs.CO_emissions_intensity_kgL < 0) {</pre>
66
            std::string error_str = "ERROR: Diesel():
            error_str += "DieselInputs::CO_emissions_intensity_kgL must be >= 0";
67
68
69
            #ifdef WIN32
70
                std::cout « error_str « std::endl;
71
            #endif
72
73
            throw std::invalid_argument(error_str);
74
75
76
       // 4. check NOx_emissions_intensity_kgL
        if (diesel_inputs.NOx_emissions_intensity_kgL < 0) {</pre>
            std::string error_str = "ERROR: Diesel(): ";
error_str += "DieselInputs::NOx_emissions_intensity_kgL must be >= 0";
78
79
80
            #ifdef WIN32
81
                std::cout « error_str « std::endl;
85
            throw std::invalid_argument(error_str);
86
       }
87
       // 5. check SOx_emissions_intensity_kqL
88
       if (diesel_inputs.SOx_emissions_intensity_kgL < 0) {</pre>
90
            std::string error_str = "ERROR: Diesel(): ";
91
            error_str += "DieselInputs::SOx_emissions_intensity_kgL must be >= 0";
92
            #ifdef WIN32
93
94
                std::cout « error str « std::endl;
95
97
            throw std::invalid_argument(error_str);
98
99
         // 6. check CH4_emissions_intensity_kgL
100
101
         if (diesel_inputs.CH4_emissions_intensity_kgL < 0) {</pre>
102
             std::string error_str = "ERROR: Diesel(): ";
103
             error_str += "DieselInputs::CH4_emissions_intensity_kgL must be >= 0";
104
             #ifdef WIN32
                 std::cout « error_str « std::endl;
106
107
108
```

4.4 Diesel Class Reference 27

```
109
               throw std::invalid_argument(error_str);
110
111
          // 7. check PM_emissions_intensity_kgL \,
112
113
          if (diesel_inputs.PM_emissions_intensity_kgL < 0) {
   std::string error_str = "ERROR: Diesel(): ";</pre>
114
               error_str += "DieselInputs::PM_emissions_intensity_kgL must be >= 0";
115
116
117
              #ifdef _WIN32
118
                    std::cout « error_str « std::endl;
               #endif
119
120
121
               throw std::invalid argument (error str);
122
123
124
          // 8. check minimum_load_ratio
          if (diesel_inputs.minimum_load_ratio < 0) {
    std::string error_str = "ERROR: Diesel(): ";
    error_str += "DieselInputs::minimum_load_ratio must be >= 0";
125
126
127
128
129
               #ifdef _WIN32
130
                    std::cout « error_str « std::endl;
               #endif
131
132
133
               throw std::invalid_argument(error_str);
134
         }
135
136
          // 9. check minimum_runtime_hrs
          if (diesel_inputs.minimum_runtime_hrs < 0) {
    std::string error_str = "ERROR: Diesel(): ";
    error_str += "DieselInputs::minimum_runtime_hrs must be >= 0";
137
138
139
140
141
               #ifdef _WIN32
142
                    std::cout « error_str « std::endl;
143
               #endif
144
145
               throw std::invalid_argument(error_str);
146
147
148
          // 10. check replace_running_hrs
          if (diesel_inputs.replace_running_hrs <= 0) {
    std::string error_str = "ERROR: Diesel(): ";
    error_str += "DieselInputs::replace_running_hrs must be > 0";
149
150
1.5.1
152
153
               #ifdef _WIN32
154
                     std::cout « error_str « std::endl;
155
               #endif
156
157
               throw std::invalid_argument(error_str);
         }
158
159
160
          return;
         /* __checkInputs() */
161 }
```

4.4.3.2 __getGenericCapitalCost()

Helper method to generate a generic diesel generator capital cost.

This model was obtained by way of surveying an assortment of published diesel generator costs, and then constructing a best fit model. Note that this model expresses cost in terms of Canadian dollars [CAD].

Returns

A generic capital cost for the diesel generator [CAD].

```
238 {
239          double capital_cost_per_kW = 1000 * pow(this->capacity_kW, -0.425) + 800;
240
241          return capital_cost_per_kW * this->capacity_kW;
242 } /* __getGenericCapitalCost() */
```

4.4.3.3 __getGenericFuelIntercept()

Helper method to generate a generic, linearized fuel consumption intercept for a diesel generator.

This model was obtained by way of surveying an assortment of published diesel generator fuel consumption data, and then constructing a best fit model.

```
Ref: HOMER [2023b]
Ref: HOMER [2023c]
```

Returns

A generic fuel intercept coefficient for the diesel generator [L/kWh].

```
213 {
214     double linear_fuel_intercept_LkWh = 0.0940 * pow(this->capacity_kW, -0.2735);
215
216     return linear_fuel_intercept_LkWh;
217 } /* __getGenericFuelIntercept() */
```

4.4.3.4 __getGenericFuelSlope()

Helper method to generate a generic, linearized fuel consumption slope for a diesel generator.

This model was obtained by way of surveying an assortment of published diesel generator fuel consumption data, and then constructing a best fit model.

```
Ref: HOMER [2023b]
Ref: HOMER [2023d]
```

Returns

A generic fuel slope for the diesel generator [L/kWh].

```
185 {
186     double linear_fuel_slope_LkWh = 0.4234 * pow(this->capacity_kW, -0.1012);
187
188     return linear_fuel_slope_LkWh;
189 } /* __getGenericFuelSlope() */
```

4.4 Diesel Class Reference 29

4.4.3.5 __getGenericOpMaintCost()

Helper method (private) to generate a generic diesel generator operation and maintenance cost. This is a cost incurred per unit energy produced.

This model was obtained by way of surveying an assortment of published diesel generator costs, and then constructing a best fit model. Note that this model expresses cost in terms of Canadian dollars per kiloWatt-hour production [CAD/kWh].

Returns

A generic operation and maintenance cost, per unit energy produced, for the diesel generator [CAD/kWh].

```
266 {
267     double operation_maintenance_cost_kWh = 0.05 * pow(this->capacity_kW, -0.2) + 0.05;
268
269     return operation_maintenance_cost_kWh;
270 } /* __getGenericOpMaintCost() */
```

4.4.3.6 __handleStartStop()

Helper method (private) to handle the starting/stopping of the diesel generator. The minimum runtime constraint is enforced in this method.

Parameters

timestep	The current time step of the Model run.
dt_hrs	The interval of time [hrs] associated with the action.
production_kW	The current rate of production [kW] of the generator.

```
292 {
293
        * Helper method (private) to handle the starting/stopping of the diesel
294
295
            generator. The minimum runtime constraint is enforced in this method.
296
297
298
        if (this->is_running) {
299
            // handle stopping
300
            if (
301
                production_kW \le 0 and
302
                this->time_since_last_start_hrs >= this->minimum_runtime_hrs
303
304
                this->is_running = false;
305
        }
306
307
308
            // handle starting
309
310
            if (production_kW > 0) {
311
                this->is_running = true;
                this->n_starts++;
312
                this->time_since_last_start_hrs = 0;
313
315
        }
316
```

```
317         return;
318 }         /* __handleStartStop() */
```

4.4.3.7 commit()

```
double Diesel::commit (
    int timestep,
    double dt_hrs,
    double production_kW,
    double load_kW ) [virtual]
```

Method which takes in production and load for the current timestep, computes and records dispatch and curtailment, and then returns remaining load.

Parameters

timestep	The timestep (i.e., time series index) for the request.
dt_hrs	The interval of time [hrs] associated with the timestep.
production_kW	The production [kW] of the asset in this timestep.
load_kW	The load [kW] passed to the asset in this timestep.

Returns

The load [kW] remaining after the dispatch is deducted from it.

Reimplemented from Combustion.

```
496 {
          / 1. handle start/stop, enforce minimum runtime constraint
498
        this->__handleStartStop(timestep, dt_hrs, production_kW);
499
        // 2. invoke base class method
load_kW = Combustion :: commit(
    timestep,
500
501
502
503
             dt_hrs,
504
            production_kW,
505
             load_kW
506
        );
507
508
        if (this->is_running) {
509
                 3. log time since last start
510
            this->time_since_last_start_hrs += dt_hrs;
511
512
            ^{\prime\prime} 4. correct operation and maintenance costs (should be non-zero if idling)
513
            if (production_kW <= 0) {</pre>
514
                 double produced_kWh = 0.01 * this->capacity_kW * dt_hrs;
515
516
                 double operation_maintenance_cost =
517
                     this->operation_maintenance_cost_kWh * produced_kWh;
                 this->operation_maintenance_cost_vec[timestep] = operation_maintenance_cost;
518
519
             }
520
        }
521
        return load_kW;
523 } /* commit() */
```

4.4.3.8 requestProductionkW()

4.4 Diesel Class Reference 31

```
double dt_hrs,
double request_kW ) [virtual]
```

Method which takes in production request, and then returns what the asset can deliver (subject to operating constraints, etc.).

Parameters

timestep	The timestep (i.e., time series index) for the request.
dt_hrs	The interval of time [hrs] associated with the timestep.
request_kW	The requested production [kW].

Returns

The production [kW] delivered by the diesel generator.

Reimplemented from Combustion.

```
442
           // 1. return on request of zero
          if (request_kW <= 0) {
443
444
                return 0:
445
446
447
          double deliver_kW = request_kW;
448
          // 2. enforce capacity constraint
if (deliver_kW > this->capacity_kW) {
   deliver_kW = this->capacity_kW;
449
450
451
452
453
454
           // 3. enforce minimum load ratio \,
          if (deliver_kW < this->minimum_load_ratio * this->capacity_kW) {
    deliver_kW = this->minimum_load_ratio * this->capacity_kW;
455
456
457
458
459
          return deliver_kW;
460 }
          /* requestProductionkW() */
```

4.4.4 Member Data Documentation

4.4.4.1 minimum_load_ratio

```
double Diesel::minimum_load_ratio
```

The minimum load ratio of the asset. That is, when the asset is producing, it must produce at least this ratio of its rated capacity.

4.4.4.2 minimum_runtime_hrs

```
double Diesel::minimum_runtime_hrs
```

The minimum runtime [hrs] of the asset. This is the minimum time that must elapse between successive starts and stops.

4.4.4.3 time_since_last_start_hrs

```
double Diesel::time_since_last_start_hrs
```

The time that has elapsed [hrs] since the last start of the asset.

The documentation for this class was generated from the following files:


- header/Production/Combustion/Diesel.h
- source/Production/Combustion/Diesel.cpp

4.5 DieselInputs Struct Reference

A structure which bundles the necessary inputs for the Diesel constructor. Provides default values for every necessary input. Note that this structure encapsulates CombustionInputs.

```
#include <Diesel.h>
```

Collaboration diagram for DieselInputs:

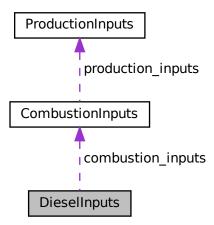

Public Attributes

• CombustionInputs combustion_inputs

An encapsulated CombustionInputs instance.

• double replace_running_hrs = 30000

The number of running hours after which the asset must be replaced. Overwrites the ProductionInputs attribute.

• double capital cost = -1

The capital cost of the asset (undefined currency). -1 is a sentinel value, which triggers a generic cost model on construction (in fact, any negative value here will trigger). Note that the generic cost model is in terms of Canadian dollars [CAD].

• double operation_maintenance_cost_kWh = -1

The operation and maintenance cost of the asset [1/kWh] (undefined currency). This is a cost incurred per unit of energy produced. -1 is a sentinel value, which triggers a generic cost model on construction (in fact, any negative value here will trigger). Note that the generic cost model is in terms of Canadian dollars [CAD/kWh].

double fuel cost L = 1.70

The cost of fuel [1/L] (undefined currency).

double minimum_load_ratio = 0.2

The minimum load ratio of the asset. That is, when the asset is producing, it must produce at least this ratio of its rated capacity.

• double minimum runtime hrs = 4

The minimum runtime [hrs] of the asset. This is the minimum time that must elapse between successive starts and stops.

• double linear fuel slope LkWh = -1

The slope [L/kWh] to use in computing linearized fuel consumption. This is fuel consumption per unit energy produced. -1 is a sentinel value, which triggers a generic fuel consumption model on construction (in fact, any negative value here will trigger).

• double linear_fuel_intercept_LkWh = -1

The intercept [L/kWh] to use in computing linearized fuel consumption. This is fuel consumption per unit energy produced. -1 is a sentinel value, which triggers a generic fuel consumption model on construction (in fact, any negative value here will trigger).

• double CO2 emissions intensity kgL = 2.7

Carbon dioxide (CO2) emissions intensity [kg/L].

double CO_emissions_intensity_kgL = 0.0178

Carbon monoxide (CO) emissions intensity [kg/L].

double NOx_emissions_intensity_kgL = 0.0014

Nitrogen oxide (NOx) emissions intensity [kg/L].

double SOx_emissions_intensity_kgL = 0.0042

Sulfur oxide (SOx) emissions intensity [kg/L].

double CH4_emissions_intensity_kgL = 0.0007

Methane (CH4) emissions intensity [kg/L].

• double PM emissions intensity kgL = 0.0001

Particulate Matter (PM) emissions intensity [kg/L].

4.5.1 Detailed Description

A structure which bundles the necessary inputs for the Diesel constructor. Provides default values for every necessary input. Note that this structure encapsulates CombustionInputs.

4.5.2 Member Data Documentation

4.5.2.1 capital_cost

```
double DieselInputs::capital_cost = -1
```

The capital cost of the asset (undefined currency). -1 is a sentinel value, which triggers a generic cost model on construction (in fact, any negative value here will trigger). Note that the generic cost model is in terms of Canadian dollars [CAD].

4.5.2.2 CH4_emissions_intensity_kgL

```
double DieselInputs::CH4_emissions_intensity_kgL = 0.0007
```

Methane (CH4) emissions intensity [kg/L].

4.5.2.3 CO2_emissions_intensity_kgL

```
double DieselInputs::CO2_emissions_intensity_kgL = 2.7
```

Carbon dioxide (CO2) emissions intensity [kg/L].

4.5.2.4 CO_emissions_intensity_kgL

```
double DieselInputs::CO_emissions_intensity_kgL = 0.0178
```

Carbon monoxide (CO) emissions intensity [kg/L].

4.5.2.5 combustion_inputs

CombustionInputs DieselInputs::combustion_inputs

An encapsulated CombustionInputs instance.

4.5.2.6 fuel_cost_L

```
double DieselInputs::fuel_cost_L = 1.70
```

The cost of fuel [1/L] (undefined currency).

4.5.2.7 linear_fuel_intercept_LkWh

```
double DieselInputs::linear_fuel_intercept_LkWh = -1
```

The intercept [L/kWh] to use in computing linearized fuel consumption. This is fuel consumption per unit energy produced. -1 is a sentinel value, which triggers a generic fuel consumption model on construction (in fact, any negative value here will trigger).

4.5.2.8 linear_fuel_slope_LkWh

```
double DieselInputs::linear_fuel_slope_LkWh = -1
```

The slope [L/kWh] to use in computing linearized fuel consumption. This is fuel consumption per unit energy produced. -1 is a sentinel value, which triggers a generic fuel consumption model on construction (in fact, any negative value here will trigger).

4.5.2.9 minimum_load_ratio

```
double DieselInputs::minimum_load_ratio = 0.2
```

The minimum load ratio of the asset. That is, when the asset is producing, it must produce at least this ratio of its rated capacity.

4.5.2.10 minimum_runtime_hrs

```
double DieselInputs::minimum_runtime_hrs = 4
```

The minimum runtime [hrs] of the asset. This is the minimum time that must elapse between successive starts and stops.

4.5.2.11 NOx_emissions_intensity_kgL

```
double DieselInputs::NOx_emissions_intensity_kgL = 0.0014
```

Nitrogen oxide (NOx) emissions intensity [kg/L].

4.5.2.12 operation maintenance cost kWh

```
double DieselInputs::operation_maintenance_cost_kWh = -1
```

The operation and maintenance cost of the asset [1/kWh] (undefined currency). This is a cost incurred per unit of energy produced. -1 is a sentinel value, which triggers a generic cost model on construction (in fact, any negative value here will trigger). Note that the generic cost model is in terms of Canadian dollars [CAD/kWh].

4.5.2.13 PM_emissions_intensity_kgL

```
double DieselInputs::PM_emissions_intensity_kgL = 0.0001
```

Particulate Matter (PM) emissions intensity [kg/L].

4.5.2.14 replace_running_hrs

```
double DieselInputs::replace_running_hrs = 30000
```

The number of running hours after which the asset must be replaced. Overwrites the ProductionInputs attribute.

4.5.2.15 SOx_emissions_intensity_kgL

```
double DieselInputs::SOx_emissions_intensity_kgL = 0.0042
```

Sulfur oxide (SOx) emissions intensity [kg/L].

The documentation for this struct was generated from the following file:

· header/Production/Combustion/Diesel.h

4.6 ElectricalLoad Class Reference

A class which contains time and electrical load data. Intended to serve as a component class of Model.

```
#include <ElectricalLoad.h>
```

Public Member Functions

• ElectricalLoad (void)

Constructor (dummy) for the ElectricalLoad class.

ElectricalLoad (std::string)

Constructor (intended) for the ElectricalLoad class.

void readLoadData (std::string)

Method to read electrical load data into an already existing ElectricalLoad object. Clears and overwrites any existing attribute values.

void clear (void)

Method to clear all attributes of the ElectricalLoad object.

∼ElectricalLoad (void)

Destructor for the ElectricalLoad class.

Public Attributes

• int n_points

The number of points in the modelling time series.

double n_years

The number of years being modelled (inferred from time_vec_hrs).

· double min_load_kW

The minimum [kW] of the given electrical load time series.

· double mean_load_kW

The mean, or average, [kW] of the given electrical load time series.

· double max load kW

The maximum [kW] of the given electrical load time series.

std::string path_2_electrical_load_time_series

A string defining the path (either relative or absolute) to the given electrical load time series.

std::vector< double > time vec hrs

A vector to hold a given sequence of model times [hrs]. This defines the modelling time series.

std::vector< double > dt_vec_hrs

A vector to hold a sequence of model time deltas [hrs].

std::vector< double > load vec kW

A vector to hold a given sequence of electrical load values [kW].

4.6.1 Detailed Description

A class which contains time and electrical load data. Intended to serve as a component class of Model.

4.6.2 Constructor & Destructor Documentation

4.6.2.1 ElectricalLoad() [1/2]

Constructor (dummy) for the ElectricalLoad class.

```
37 {
38     return;
39 } /* ElectricalLoad() */
```

4.6.2.2 ElectricalLoad() [2/2]

Constructor (intended) for the ElectricalLoad class.

Parameters

path_2_electrical_load_time_series	A string defining the path (either relative or absolute) to the given	
	electrical load time series.	

```
57 {
58     this->readLoadData(path_2_electrical_load_time_series);
59
60     return;
61 } /* ElectricalLoad() */
```

4.6.2.3 ∼ElectricalLoad()

Destructor for the ElectricalLoad class.

```
185 this->clear();
186 return;
187 } /* ~ElectricalLoad() */
```

4.6.3 Member Function Documentation

4.6.3.1 clear()

Method to clear all attributes of the ElectricalLoad object.

```
158
            this->n_points = 0;
           this->n_years = 0;
this->min_load_kW = 0;
this->mean_load_kW = 0;
159
160
161
162
           this->max_load_kW = 0;
163
164
           this->path_2_electrical_load_time_series.clear();
           this->time_vec_hrs.clear();
this->dt_vec_hrs.clear();
this->load_vec_kW.clear();
165
166
167
168
169 return;
170 } /* clear() */
```

4.6.3.2 readLoadData()

Method to read electrical load data into an already existing ElectricalLoad object. Clears and overwrites any existing attribute values.

Parameters

path_2_electrical_load_time_series A string defining the path (either relative or absolute) to the given electrical load time series.

```
// 1. clear
81
       this->clear();
82
       // 2. init CSV reader, record path
83
       io::CSVReader<2> CSV(path_2_electrical_load_time_series);
84
85
       CSV.read_header(
87
            io::ignore_extra_column,
            "Time (since start of data) [hrs]",
"Electrical Load [kW]"
88
89
90
92
       this->path_2_electrical_load_time_series = path_2_electrical_load_time_series;
94
       // 3. read in time and load data, increment n_points, track min and max load
       double time_hrs = 0;
double load kW = 0;
95
96
97
       double load_sum_kW = 0;
99
       this->n_points = 0;
100
        this->min_load_kW = std::numeric_limits<double>::infinity();
this->max_load_kW = -1 * std::numeric_limits<double>::infinity();
101
102
103
104
        while (CSV.read_row(time_hrs, load_kW)) {
105
             this->time_vec_hrs.push_back(time_hrs);
106
             this->load_vec_kW.push_back(load_kW);
107
108
            load_sum_kW += load_kW;
109
110
            this->n_points++;
111
112
            if (this->min_load_kW > load_kW) {
                  this->min_load_kW = load_kW;
113
            }
114
115
116
             if (this->max_load_kW < load_kW) {</pre>
117
                  this->max_load_kW = load_kW;
118
119
120
121
        // 4. compute mean load
122
        this->mean_load_kW = load_sum_kW / this->n_points;
123
124
            5. set number of years (assuming 8,760 hours per year)
125
        this->n_years = this->time_vec_hrs[this->n_points - 1] / 8760;
126
127
        // 6. populate dt_vec_hrs
this->dt_vec_hrs.resize(n_points, 0);
128
129
130
         for (int i = 0; i < n_points; i++) {</pre>
131
             if (i == n_points - 1) {
                  this->dt_vec_hrs[i] = this->dt_vec_hrs[i - 1];
132
133
134
135
             else {
136
                 double dt_hrs = this->time_vec_hrs[i + 1] - this->time_vec_hrs[i];
137
138
                  this->dt_vec_hrs[i] = dt_hrs;
139
             }
140
141
142
         return;
143 }
        /* readLoadData() */
```

4.6.4 Member Data Documentation

4.6.4.1 dt_vec_hrs

std::vector<double> ElectricalLoad::dt_vec_hrs

A vector to hold a sequence of model time deltas [hrs].

4.6.4.2 load vec kW

```
std::vector<double> ElectricalLoad::load_vec_kW
```

A vector to hold a given sequence of electrical load values [kW].

4.6.4.3 max_load_kW

```
double ElectricalLoad::max_load_kW
```

The maximum [kW] of the given electrical load time series.

4.6.4.4 mean_load_kW

```
double ElectricalLoad::mean_load_kW
```

The mean, or average, [kW] of the given electrical load time series.

4.6.4.5 min_load_kW

```
double ElectricalLoad::min_load_kW
```

The minimum [kW] of the given electrical load time series.

4.6.4.6 n_points

```
int ElectricalLoad::n_points
```

The number of points in the modelling time series.

4.6.4.7 n_years

```
double ElectricalLoad::n_years
```

The number of years being modelled (inferred from time_vec_hrs).

4.6.4.8 path_2_electrical_load_time_series

```
std::string ElectricalLoad::path_2_electrical_load_time_series
```

A string defining the path (either relative or absolute) to the given electrical load time series.

4.6.4.9 time_vec_hrs

```
std::vector<double> ElectricalLoad::time_vec_hrs
```

A vector to hold a given sequence of model times [hrs]. This defines the modelling time series.

The documentation for this class was generated from the following files:

- · header/ElectricalLoad.h
- · source/ElectricalLoad.cpp

4.7 Emissions Struct Reference

A structure which bundles the emitted masses of various emissions chemistries.

```
#include <Combustion.h>
```

Public Attributes

```
• double CO2_kg = 0
```

The mass of carbon dioxide (CO2) emitted [kg].

• double CO_kg = 0

The mass of carbon monoxide (CO) emitted [kg].

• double $NOx_kg = 0$

The mass of nitrogen oxides (NOx) emitted [kg].

• double $SOx_kg = 0$

The mass of sulfur oxides (SOx) emitted [kg].

• double CH4 kg = 0

The mass of methane (CH4) emitted [kg].

• double $PM_kg = 0$

The mass of particulate matter (PM) emitted [kg].

4.7.1 Detailed Description

A structure which bundles the emitted masses of various emissions chemistries.

4.7.2 Member Data Documentation

4.7.2.1 CH4_kg

```
double Emissions::CH4_kg = 0
```

The mass of methane (CH4) emitted [kg].

4.7.2.2 CO2_kg

```
double Emissions::CO2_kg = 0
```

The mass of carbon dioxide (CO2) emitted [kg].

4.7.2.3 CO_kg

```
double Emissions::CO_kg = 0
```

The mass of carbon monoxide (CO) emitted [kg].

4.7.2.4 NOx_kg

```
double Emissions::NOx_kg = 0
```

The mass of nitrogen oxides (NOx) emitted [kg].

4.7.2.5 PM_kg

```
double Emissions::PM_kg = 0
```

The mass of particulate matter (PM) emitted [kg].

4.7.2.6 SOx_kg

```
double Emissions::SOx_kg = 0
```

The mass of sulfur oxides (SOx) emitted [kg].

The documentation for this struct was generated from the following file:

• header/Production/Combustion/Combustion.h


4.8 Lilon Class Reference 43

4.8 Lilon Class Reference


A derived class of Storage which models energy storage by way of lithium-ion batteries.

#include <LiIon.h>

Inheritance diagram for Lilon:



Collaboration diagram for Lilon:



Public Member Functions

• Lilon (void)

Constructor for the Lilon class.

• ∼Lilon (void)

Destructor for the Lilon class.

4.8.1 Detailed Description

A derived class of Storage which models energy storage by way of lithium-ion batteries.

4.8.2 Constructor & Destructor Documentation

4.8.2.1 Lilon()

```
LiIon::LiIon ( void )
```

Constructor for the Lilon class.

```
35 Storage()
37 {
38    //...
39    return;
41 } /* LiIon() */
```

4.8.2.2 ∼Lilon()

```
LiIon::~LiIon (
void )
```

Destructor for the Lilon class.

The documentation for this class was generated from the following files:


- header/Storage/Lilon.h
- source/Storage/Lilon.cpp

4.9 Model Class Reference

A container class which forms the centre of PGMcpp. The Model class is intended to serve as the primary user interface with the functionality of PGMcpp, and as such it contains all other classes.

```
#include <Model.h>
```

Collaboration diagram for Model:

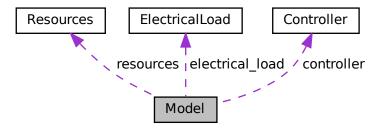

4.9 Model Class Reference 45

Public Member Functions

· Model (void)

Constructor (dummy) for the Model class.

Model (ModelInputs)

Constructor (intended) for the Model class.

void addDiesel (DieselInputs)

Method to add a Diesel asset to the Model.

void addResource (RenewableType, std::string, int)

A method to add a renewable resource time series to the Model.

void addSolar (SolarInputs)

Method to add a Solar asset to the Model.

void addTidal (TidalInputs)

Method to add a Tidal asset to the Model.

void addWave (WaveInputs)

Method to add a Wave asset to the Model.

void addWind (WindInputs)

Method to add a Wind asset to the Model.

void run (void)

A method to run the Model.

void reset (void)

Method which resets the model for use in assessing a new candidate microgrid design. This method only clears the asset pointer vectors; it leaves the Controller, ElectricalLoad, and Resources objects of the Model alone.

· void clear (void)

Method to clear all attributes of the Model object.

∼Model (void)

Destructor for the Model class.

Public Attributes

Controller controller

Controller component of Model.

· ElectricalLoad electrical_load

ElectricalLoad component of Model.

Resources resources

Resources component of Model.

std::vector< Combustion * > combustion ptr vec

A vector of pointers to the various Combustion assets in the Model.

std::vector< Renewable * > renewable_ptr_vec

A vector of pointers to the various Renewable assets in the Model.

std::vector< Storage * > storage_ptr_vec

A vector of pointers to the various Storage assets in the Model.

Private Member Functions

void __checkInputs (ModelInputs)

Helper method (private) to check inputs to the Model constructor.

4.9.1 Detailed Description

A container class which forms the centre of PGMcpp. The Model class is intended to serve as the primary user interface with the functionality of PGMcpp, and as such it contains all other classes.

4.9.2 Constructor & Destructor Documentation

4.9.2.1 Model() [1/2]

```
Model::Model (
     void )
```

Constructor (dummy) for the Model class.

```
63 {
64    return;
65 } /* Model() */
```

4.9.2.2 Model() [2/2]

Constructor (intended) for the Model class.

Parameters

model_inputs A structure of Model constructor inputs.

```
// 1. check inputs
83
84
      this->__checkInputs(model_inputs);
8.5
      // 2. read in electrical load data
86
      this->electrical_load.readLoadData(model_inputs.path_2_electrical_load_time_series);
89
      // 3. set control mode
      this->controller.control_mode = model_inputs.control_mode;
90
91
92
      return:
     /* Model() */
```

4.9.2.3 \sim Model()

```
\label{eq:Model} \begin{array}{ll} \texttt{Model::} \sim \texttt{Model} & \texttt{(} \\ & \texttt{void} & \texttt{)} \end{array}
```

Destructor for the Model class.

4.9 Model Class Reference 47

4.9.3 Member Function Documentation

4.9.3.1 __checkInputs()

Helper method (private) to check inputs to the Model constructor.

Parameters

model_inputs A structure of Model constructor inputs.

4.9.3.2 addDiesel()

Method to add a Diesel asset to the Model.

Parameters

diesel_inputs A structure of Diesel constructor inputs.

4.9.3.3 addResource()

A method to add a renewable resource time series to the Model.

Parameters

renewable_type	The type of renewable resource being added to the Model.

Parameters

path_2_resource_data	A string defining the path (either relative or absolute) to the given resource time	
	series.	
resource_key	A key used to index into the Resources object, used to associate Renewable assets	
	with the corresponding resource.	

```
145 {
146
       resources.addResource(
147
           renewable_type,
148
           path_2_resource_data,
149
           resource_key,
           &(this->electrical_load)
150
151
      );
152
153
154 }
      /* addResource() */
```

4.9.3.4 addSolar()

Method to add a Solar asset to the Model.

Parameters

```
solar_inputs A structure of Solar constructor inputs.
```

```
171 {
172     Renewable* solar_ptr = new Solar(this->electrical_load.n_points, solar_inputs);
173
174     this->renewable_ptr_vec.push_back(solar_ptr);
175
176     return;
177 }     /* addSolar() */
```

4.9.3.5 addTidal()

Method to add a Tidal asset to the Model.

Parameters

```
tidal_inputs  A structure of Tidal constructor inputs.
```

4.9 Model Class Reference 49

4.9.3.6 addWave()

Method to add a Wave asset to the Model.

Parameters

wave_inputs | A structure of Wave constructor inputs.

```
217 {
218     Renewable* wave_ptr = new Wave(this->electrical_load.n_points, wave_inputs);
219
220     this->renewable_ptr_vec.push_back(wave_ptr);
221
222     return;
223 }     /* addWave() */
```

4.9.3.7 addWind()

Method to add a Wind asset to the Model.

Parameters

```
wind_inputs A structure of Wind constructor inputs.
```

```
240 {
241     Renewable* wind_ptr = new Wind(this->electrical_load.n_points, wind_inputs);
242
243     this->renewable_ptr_vec.push_back(wind_ptr);
244
245     return;
246 }     /* addWind() */
```

4.9.3.8 clear()

Method to clear all attributes of the Model object.

```
// 1. reset
331
332
       this->reset();
333
334
       // 2. clear components
335
       controller.clear();
336
       electrical_load.clear();
337
       resources.clear();
338
339
       return:
340 } /* clear() */
```

4.9.3.9 reset()

```
void Model::reset (
     void )
```

Method which resets the model for use in assessing a new candidate microgrid design. This method only clears the asset pointer vectors; it leaves the Controller, ElectricalLoad, and Resources objects of the Model alone.

```
295 {
296
         // 1. clear combustion_ptr_vec
297
        for (size_t i = 0; i < this->combustion_ptr_vec.size(); i++) {
298
            delete this->combustion_ptr_vec[i];
299
300
        this->combustion_ptr_vec.clear();
301
        // 2. clear renewable_ptr_vec
302
303
        for (size_t i = 0; i < this->renewable_ptr_vec.size(); i++) {
304
            delete this->renewable_ptr_vec[i];
305
306
        this->renewable_ptr_vec.clear();
307
        // 3. clear storage_ptr_vec
for (size_t i = 0; i < this->storage_ptr_vec.size(); i++) {
308
309
310
            delete this->storage_ptr_vec[i];
311
312
        this->storage_ptr_vec.clear();
313
314
        return;
        /* reset() */
315 }
```

4.9.3.10 run()

A method to run the Model.

```
262
        // 1. init Controller
263
        this->controller.init(
264
           &(this->electrical_load),
            &(this->renewable_ptr_vec),
265
266
            & (this->resources),
           &(this->combustion_ptr_vec)
267
269
        // 2. apply dispatch control
270
271
        this->controller.applyDispatchControl(
         & (this->electrical_load),
272
273
            &(this->combustion_ptr_vec),
274
            & (this->renewable_ptr_vec),
275
            &(this->storage_ptr_vec)
276
277
       );
278
        return:
279 }
       /* run() */
```

4.9.4 Member Data Documentation

4.9.4.1 combustion ptr vec

```
std::vector<Combustion*> Model::combustion_ptr_vec
```

A vector of pointers to the various Combustion assets in the Model.

4.9.4.2 controller

Controller Model::controller

Controller component of Model.

4.9.4.3 electrical_load

ElectricalLoad Model::electrical_load

ElectricalLoad component of Model.

4.9.4.4 renewable_ptr_vec

```
std::vector<Renewable*> Model::renewable_ptr_vec
```

A vector of pointers to the various Renewable assets in the Model.

4.9.4.5 resources

Resources Model::resources

Resources component of Model.

4.9.4.6 storage_ptr_vec

```
std::vector<Storage*> Model::storage_ptr_vec
```

A vector of pointers to the various Storage assets in the Model.

The documentation for this class was generated from the following files:

- header/Model.h
- · source/Model.cpp

4.10 ModelInputs Struct Reference

A structure which bundles the necessary inputs for the Model constructor. Provides default values for every necessary input (except path_2_electrical_load_time_series, for which a valid input must be provided).

```
#include <Model.h>
```

Public Attributes

• std::string path_2_electrical_load_time_series = ""

A string defining the path (either relative or absolute) to the given electrical load time series.

• ControlMode control_mode = ControlMode :: LOAD_FOLLOWING

The control mode to be applied by the Controller object.

4.10.1 Detailed Description

A structure which bundles the necessary inputs for the Model constructor. Provides default values for every necessary input (except path_2_electrical_load_time_series, for which a valid input must be provided).

4.10.2 Member Data Documentation

4.10.2.1 control mode

```
ControlMode ModelInputs::control_mode = ControlMode :: LOAD_FOLLOWING
```

The control mode to be applied by the Controller object.

4.10.2.2 path_2_electrical_load_time_series

```
std::string ModelInputs::path_2_electrical_load_time_series = ""
```

A string defining the path (either relative or absolute) to the given electrical load time series.

The documentation for this struct was generated from the following file:


• header/Model.h

4.11 Production Class Reference

The base class of the Production hierarchy. This hierarchy contains derived classes which model the production of energy, be it renewable or otherwise.

#include <Production.h>

Inheritance diagram for Production:

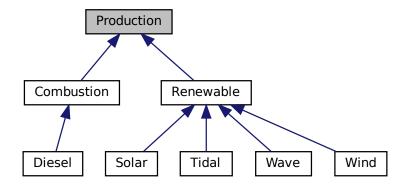

Public Member Functions

• Production (void)

Constructor (dummy) for the Production class.

• Production (int, ProductionInputs)

Constructor (intended) for the Production class.

• virtual double commit (int, double, double, double)

Method which takes in production and load for the current timestep, computes and records dispatch and curtailment, and then returns remaining load.

virtual ∼Production (void)

Destructor for the Production class.

Public Attributes

· bool print_flag

A flag which indicates whether or not object construct/destruction should be verbose.

• bool is_running

A boolean which indicates whether or not the asset is running.

· bool is_sunk

A boolean which indicates whether or not the asset should be considered a sunk cost (i.e., capital cost incurred at the start of the model, or no).

• int n_points

The number of points in the modelling time series.

• int n_starts

The number of times the asset has been started.

int n_replacements

The number of times the asset has been replaced.

· double running hours

The number of hours for which the assset has been operating.

double replace_running_hrs

The number of running hours after which the asset must be replaced.

· double capacity kW

The rated production capacity [kW] of the asset.

· double real discount annual

The real, annual discount rate used in computing model economics. Is computed from the given nominal inflation and discount rates.

· double capital cost

The capital cost of the asset (undefined currency).

• double operation_maintenance_cost_kWh

The operation and maintenance cost of the asset [1/kWh] (undefined currency). This is a cost incurred per unit of energy produced.

· double net present cost

The net present cost of this asset.

· double levellized_cost_of_energy_kWh

The levellized cost of energy [1/kWh] (undefined currency) of this asset. This metric considers only dispatched and stored energy.

· std::string type str

A string describing the type of the asset.

std::vector< bool > is_running_vec

A boolean vector for tracking if the asset is running at a particular point in time.

std::vector< double > production_vec_kW

A vector of production [kW] at each point in the modelling time series.

std::vector< double > dispatch_vec_kW

A vector of dispatch [kW] at each point in the modelling time series. Dispatch is the amount of production that is sent to the grid to satisfy load.

std::vector< double > storage vec kW

A vector of storage [kW] at each point in the modelling time series. Storage is the amount of production that is sent to storage.

std::vector< double > curtailment_vec_kW

A vector of curtailment [kW] at each point in the modelling time series. Curtailment is the amount of production that can be neither dispatched nor stored, and is hence curtailed.

• std::vector< double > capital cost vec

A vector of capital costs (undefined currency) incurred over each modelling time step. These costs are not discounted (i.e., these are nominal costs).

std::vector< double > operation_maintenance_cost_vec

A vector of operation and maintenance costs (undefined currency) incurred over each modelling time step. These costs are not discounted (i.e., these are nominal costs).

Private Member Functions

void __checkInputs (int, ProductionInputs)

Helper method to check inputs to the Production constructor.

void __handleReplacement (int)

Helper method to handle asset replacement and capital cost incursion, if applicable.

double <u>computeRealDiscountAnnual</u> (double, double)

Helper method to compute the real, annual discount rate to be used in computing model economics. This enables application of the discount factor approach.

4.11.1 Detailed Description

The base class of the Production hierarchy. This hierarchy contains derived classes which model the production of energy, be it renewable or otherwise.

4.11.2 Constructor & Destructor Documentation

4.11.2.1 Production() [1/2]

Constructor (dummy) for the Production class.

```
164 {
165 return;
166 } /* Production() */
```

4.11.2.2 Production() [2/2]

Constructor (intended) for the Production class.

Parameters

n_points	The number of points in the modelling time series.
production_inputs	A structure of Production constructor inputs.

```
189
          // 1. check inputs
190
          this->__checkInputs(n_points, production_inputs);
191
          // 2. set attributes
this->print_flag = production_inputs.print_flag;
this->is_running = false;
192
193
194
195
          this->n_points = n_points;
this->n_starts = 0;
196
197
198
199
          this->running_hours = 0;
200
          this->replace_running_hrs = production_inputs.replace_running_hrs;
201
202
          this->capacity_kW = production_inputs.capacity_kW;
203
          this->real_discount_annual = this->__computeRealDiscountAnnual(
    production_inputs.nominal_inflation_annual,
    production_inputs.nominal_discount_annual
204
205
206
207
208
          this->capital_cost = 0;
209
          this->operation_maintenance_cost_kWh = 0;
210
211
          this->net_present_cost = 0;
          this->levellized_cost_of_energy_kWh = 0;
212
213
          this->is_running_vec.resize(this->n_points, 0);
214
```

```
215
        this->production_vec_kW.resize(this->n_points, 0);
216
        this->dispatch_vec_kW.resize(this->n_points, 0);
217
        this->storage_vec_kW.resize(this->n_points, 0);
        this->curtailment_vec_kW.resize(this->n_points, 0);
218
219
220
        this->capital_cost_vec.resize(this->n_points, 0);
221
        this->operation_maintenance_cost_vec.resize(this->n_points, 0);
222
        // 3. construction print
if (this->print_flag) {
    std::cout « "Production object constructed at " « this « std::endl;
223
224
225
226
227
228
        return;
229 }
        /* Production() */
```

4.11.2.3 ∼Production()

```
Production::\simProduction ( void ) [virtual]
```

Destructor for the Production class.

4.11.3 Member Function Documentation

4.11.3.1 __checkInputs()

Helper method to check inputs to the Production constructor.

Parameters

n_points	The number of points in the modelling time series.
production_inputs	A structure of Production constructor inputs.

```
41 {
42
       // 1. check n_points
43
       if (n_points <= 0) {</pre>
           std::string error_str = "ERROR: Production(): n_points must be > 0";
44
45
          #ifdef WIN32
46
               std::cout « error_str « std::endl;
48
           #endif
49
50
           throw std::invalid_argument(error_str);
51
      }
52
53
      // 2. check capacity_kW
       if (production_inputs.capacity_kW <= 0) {</pre>
```

```
std::string error_str = "ERROR: Production(): ";
55
             error_str += "ProductionInputs::capacity_kW must be > 0";
57
58
             #ifdef _WIN32
59
                  std::cout « error_str « std::endl;
             #endif
60
61
             throw std::invalid_argument(error_str);
63
64
        // 3. check replace_running_hrs
65
        if (production_inputs.replace_running_hrs <= 0) {
    std::string error_str = "ERROR: Production(): ";
    error_str += "ProductionInputs::replace_running_hrs must be > 0";
66
69
70
71
             #ifdef _WIN32
                 std::cout « error_str « std::endl;
             #endif
72
73
             throw std::invalid_argument(error_str);
75
76
77
        return;
78 }
       /* __checkInputs() */
```

4.11.3.2 __computeRealDiscountAnnual()

Helper method to compute the real, annual discount rate to be used in computing model economics. This enables application of the discount factor approach.

Ref: HOMER [2023f] Ref: HOMER [2023a]

Parameters

nominal_inflation_annual	The nominal, annual inflation rate to use in computing model economics.
nominal_discount_annual	The nominal, annual discount rate to use in computing model economics.

Returns

The real, annual discount rate to use in computing model economics.

```
110 {
111          double real_discount_annual = nominal_discount_annual - nominal_inflation_annual;
112          real_discount_annual /= 1 + nominal_inflation_annual;
113
114          return real_discount_annual;
115 }          /* __computeRealDiscountAnnual() */
```

4.11.3.3 __handleReplacement()

Helper method to handle asset replacement and capital cost incursion, if applicable.

Parameters

timestep The current time step of the Model run.

```
133 {
134
135
            this->running_hours >= (this->n_replacements + 1) * this->replace_running_hrs
136
137
            // 1. log replacement
138
           this->n_replacements++;
139
140
            // 2. incur capital cost in timestep
141
           this->capital_cost_vec[timestep] = this->capital_cost;
142
143
144
        return;
145 }
       /* __handleReplacement() */
```

4.11.3.4 commit()

```
double Production::commit (
    int timestep,
    double dt_hrs,
    double production_kW,
    double load_kW ) [virtual]
```

Method which takes in production and load for the current timestep, computes and records dispatch and curtailment, and then returns remaining load.

Parameters

timestep	The timestep (i.e., time series index) for the request.
dt_hrs	The interval of time [hrs] associated with the timestep.
production_kW	The production [kW] of the asset in this timestep.
load_kW	The load [kW] passed to the asset in this timestep.

Returns

The load [kW] remaining after the dispatch is deducted from it.

Reimplemented in Wind, Wave, Tidal, Solar, Renewable, Diesel, and Combustion.

```
265 {
266
          / 1. record production
267
        this->production_vec_kW[timestep] = production_kW;
268
269
        \ensuremath{//} 2. compute and record dispatch and curtailment
270
        double dispatch_kW = 0;
271
        double curtailment_kW = 0;
272
        if (production_kW > load_kW) {
    dispatch_kW = load_kW;
273
274
275
             curtailment_kW = production_kW - dispatch_kW;
276
277
278
        else {
             dispatch_kW = production_kW;
280
281
282
        this->dispatch_vec_kW[timestep] = dispatch_kW;
283
        this->curtailment_vec_kW[timestep] = curtailment_kW;
284
285
         // 3. update load
286
        load_kW -= dispatch_kW;
```

```
287
288
         if (this->is_running) {
289
             // 4. log running state, running hours
             this->is_running_vec[timestep] = this->is_running;
290
291
             this->running_hours += dt_hrs;
292
293
             // 5. incur operation and maintenance costs
294
             double produced_kWh = production_kW * dt_hrs;
295
296
             double operation_maintenance_cost =
            this->operation_maintenance_cost_kWh * produced_kWh;
this->operation_maintenance_cost_vec[timestep] = operation_maintenance_cost;
297
298
299
300
             // 6. incur capital costs (i.e., handle replacement)
301
             this->__handleReplacement(timestep);
302
303
304
305
        return load_kW;
306 }
        /* commit() */
```

4.11.4 Member Data Documentation

4.11.4.1 capacity kW

```
double Production::capacity_kW
```

The rated production capacity [kW] of the asset.

4.11.4.2 capital_cost

```
double Production::capital_cost
```

The capital cost of the asset (undefined currency).

4.11.4.3 capital_cost_vec

```
std::vector<double> Production::capital_cost_vec
```

A vector of capital costs (undefined currency) incurred over each modelling time step. These costs are not discounted (i.e., these are nominal costs).

4.11.4.4 curtailment vec kW

```
std::vector<double> Production::curtailment_vec_kW
```

A vector of curtailment [kW] at each point in the modelling time series. Curtailment is the amount of production that can be neither dispatched nor stored, and is hence curtailed.

4.11.4.5 dispatch_vec_kW

```
std::vector<double> Production::dispatch_vec_kW
```

A vector of dispatch [kW] at each point in the modelling time series. Dispatch is the amount of production that is sent to the grid to satisfy load.

4.11.4.6 is_running

```
bool Production::is_running
```

A boolean which indicates whether or not the asset is running.

4.11.4.7 is_running_vec

```
std::vector<bool> Production::is_running_vec
```

A boolean vector for tracking if the asset is running at a particular point in time.

4.11.4.8 is_sunk

```
bool Production::is_sunk
```

A boolean which indicates whether or not the asset should be considered a sunk cost (i.e., capital cost incurred at the start of the model, or no).

4.11.4.9 levellized_cost_of_energy_kWh

```
double Production::levellized_cost_of_energy_kWh
```

The levellized cost of energy [1/kWh] (undefined currency) of this asset. This metric considers only dispatched and stored energy.

4.11.4.10 n_points

int Production::n_points

The number of points in the modelling time series.

4.11.4.11 n_replacements

int Production::n_replacements

The number of times the asset has been replaced.

4.11.4.12 n_starts

int Production::n_starts

The number of times the asset has been started.

4.11.4.13 net_present_cost

double Production::net_present_cost

The net present cost of this asset.

4.11.4.14 operation_maintenance_cost_kWh

double Production::operation_maintenance_cost_kWh

The operation and maintenance cost of the asset [1/kWh] (undefined currency). This is a cost incurred per unit of energy produced.

4.11.4.15 operation_maintenance_cost_vec

std::vector<double> Production::operation_maintenance_cost_vec

A vector of operation and maintenance costs (undefined currency) incurred over each modelling time step. These costs are not discounted (i.e., these are nominal costs).

4.11.4.16 print_flag

bool Production::print_flag

A flag which indicates whether or not object construct/destruction should be verbose.

4.11.4.17 production_vec_kW

```
std::vector<double> Production::production_vec_kW
```

A vector of production [kW] at each point in the modelling time series.

4.11.4.18 real_discount_annual

```
double Production::real_discount_annual
```

The real, annual discount rate used in computing model economics. Is computed from the given nominal inflation and discount rates.

4.11.4.19 replace_running_hrs

```
double Production::replace_running_hrs
```

The number of running hours after which the asset must be replaced.

4.11.4.20 running_hours

```
double Production::running_hours
```

The number of hours for which the assset has been operating.

4.11.4.21 storage_vec_kW

```
std::vector<double> Production::storage_vec_kW
```

A vector of storage [kW] at each point in the modelling time series. Storage is the amount of production that is sent to storage.

4.11.4.22 type_str

```
std::string Production::type_str
```

A string describing the type of the asset.

The documentation for this class was generated from the following files:

- header/Production/Production.h
- source/Production/Production.cpp

4.12 ProductionInputs Struct Reference

A structure which bundles the necessary inputs for the Production constructor. Provides default values for every necessary input.

```
#include <Production.h>
```

Public Attributes

• bool print flag = false

A flag which indicates whether or not object construct/destruction should be verbose.

• bool is sunk = false

A boolean which indicates whether or not the asset should be considered a sunk cost (i.e., capital cost incurred at the start of the model, or no).

• double capacity_kW = 100

The rated production capacity [kW] of the asset.

• double nominal inflation annual = 0.02

The nominal, annual inflation rate to use in computing model economics.

• double nominal_discount_annual = 0.04

The nominal, annual discount rate to use in computing model economics.

double replace running hrs = 90000

The number of running hours after which the asset must be replaced.

4.12.1 Detailed Description

A structure which bundles the necessary inputs for the Production constructor. Provides default values for every necessary input.

4.12.2 Member Data Documentation

4.12.2.1 capacity kW

```
double ProductionInputs::capacity_kW = 100
```

The rated production capacity [kW] of the asset.

4.12.2.2 is_sunk

```
bool ProductionInputs::is_sunk = false
```

A boolean which indicates whether or not the asset should be considered a sunk cost (i.e., capital cost incurred at the start of the model, or no).

4.12.2.3 nominal_discount_annual

```
double ProductionInputs::nominal_discount_annual = 0.04
```

The nominal, annual discount rate to use in computing model economics.

4.12.2.4 nominal_inflation_annual

```
double ProductionInputs::nominal_inflation_annual = 0.02
```

The nominal, annual inflation rate to use in computing model economics.

4.12.2.5 print_flag

```
bool ProductionInputs::print_flag = false
```

A flag which indicates whether or not object construct/destruction should be verbose.

4.12.2.6 replace_running_hrs

```
double ProductionInputs::replace_running_hrs = 90000
```

The number of running hours after which the asset must be replaced.

The documentation for this struct was generated from the following file:


• header/Production/Production.h

4.13 Renewable Class Reference


The root of the Renewable branch of the Production hierarchy. This branch contains derived classes which model the renewable production of energy.

#include <Renewable.h>

Inheritance diagram for Renewable:

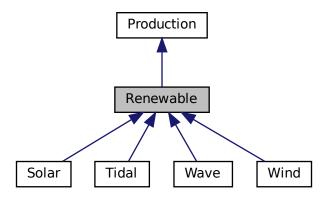

Collaboration diagram for Renewable:



Public Member Functions

- Renewable (void)
 - Constructor (dummy) for the Renewable class.
- Renewable (int, RenewableInputs)
- virtual double computeProductionkW (int, double, double)
- virtual double computeProductionkW (int, double, double, double)
- virtual double commit (int, double, double, double)

Method which takes in production and load for the current timestep, computes and records dispatch and curtailment, and then returns remaining load.

virtual ∼Renewable (void)

Destructor for the Renewable class.

Public Attributes

RenewableType type

The type (RenewableType) of the asset.

int resource_key

A key used to index into the Resources object, to associate this asset with the appropriate resource time series.

Private Member Functions

```
    void __checkInputs (RenewableInputs)
```

Helper method to check inputs to the Renewable constructor.

• void <u>handleStartStop</u> (int, double, double)

Helper method to handle the starting/stopping of the renewable asset.

4.13.1 Detailed Description

The root of the Renewable branch of the Production hierarchy. This branch contains derived classes which model the renewable production of energy.

4.13.2 Constructor & Destructor Documentation

4.13.2.1 Renewable() [1/2]

Constructor (dummy) for the Renewable class.

Constructor (intended) for the Renewable class.

Parameters

n_points	The number of points in the modelling time series.
renewable_inputs	A structure of Renewable constructor inputs.

4.13.2.2 Renewable() [2/2]

```
115 Production(n_points, renewable_inputs.production_inputs)
116 {
117
         // 1. check inputs
118
         this->__checkInputs(renewable_inputs);
119
120
         // 2. set attributes
121
122
         // 3. construction print
if (this->print_flag) {
    std::cout « "Renewable object constructed at " « this « std::endl;
123
124
125
126
127
128 return;
129 } /* Renewable() */
```

4.13.2.3 ∼Renewable()

4.13.3 Member Function Documentation

4.13.3.1 __checkInputs()

Helper method to check inputs to the Renewable constructor.

4.13.3.2 __handleStartStop()

Helper method to handle the starting/stopping of the renewable asset.

```
if (this->is_running) {
    // handle stopping
58
            if (production_kW <= 0) {
    this->is_running = false;
59
60
       }
       64
6.5
66
                 this->is_running = true;
                this->n_starts++;
69
70
71
72
       return;
       /* __handleStartStop() */
```

4.13.3.3 commit()

```
double Renewable::commit (
          int timestep,
          double dt_hrs,
          double production_kW,
          double load_kW ) [virtual]
```

Method which takes in production and load for the current timestep, computes and records dispatch and curtailment, and then returns remaining load.

Parameters

timestep	The timestep (i.e., time series index) for the request.
dt_hrs	The interval of time [hrs] associated with the timestep.
production_kW	The production [kW] of the asset in this timestep.
load_kW	The load [kW] passed to the asset in this timestep.

Returns

The load [kW] remaining after the dispatch is deducted from it.

Reimplemented from Production.

Reimplemented in Wind, Wave, Tidal, and Solar.

```
173 production_kW,
174 load_kW
175 );
176
177
178 //...
179
180 return load_kW;
181 } /* commit() */
```

4.13.3.4 computeProductionkW() [1/2]

```
virtual double Renewable::computeProductionkW (
          int ,
          double ,
          double ) [inline], [virtual]
```

Reimplemented in Wind, Tidal, and Solar.

```
84 {return 0;}
```

4.13.3.5 computeProductionkW() [2/2]

```
virtual double Renewable::computeProductionkW (
          int ,
          double ,
          double ,
          double ) [inline], [virtual]
```

Reimplemented in Wave.

```
85 {return 0;}
```

4.13.4 Member Data Documentation

4.13.4.1 resource_key

```
int Renewable::resource_key
```

A key used to index into the Resources object, to associate this asset with the appropriate resource time series.

4.13.4.2 type

```
RenewableType Renewable::type
```

The type (RenewableType) of the asset.

The documentation for this class was generated from the following files:


- header/Production/Renewable/Renewable.h
- source/Production/Renewable/Renewable.cpp

4.14 RenewableInputs Struct Reference

A structure which bundles the necessary inputs for the Renewable constructor. Provides default values for every necessary input. Note that this structure encapsulates ProductionInputs.

```
#include <Renewable.h>
```

Collaboration diagram for RenewableInputs:

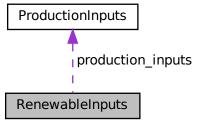

Public Attributes

ProductionInputs production_inputs
 An encapsulated ProductionInputs instance.

4.14.1 Detailed Description

A structure which bundles the necessary inputs for the Renewable constructor. Provides default values for every necessary input. Note that this structure encapsulates ProductionInputs.

4.14.2 Member Data Documentation

4.14.2.1 production_inputs

ProductionInputs RenewableInputs::production_inputs

An encapsulated ProductionInputs instance.

The documentation for this struct was generated from the following file:

• header/Production/Renewable/Renewable.h

4.15 Resources Class Reference

A class which contains renewable resource data. Intended to serve as a component class of Model.

#include <Resources.h>

Public Member Functions

· Resources (void)

Constructor for the Resources class.

void addResource (RenewableType, std::string, int, ElectricalLoad *)

A method to add a renewable resource time series to Resources. Checks if given resource key is already in use. The associated helper methods also check against ElectricalLoad to ensure that all added time series align with the electrical load time series (both in terms of length and which points in time are included).

void clear (void)

Method to clear all attributes of the Resources object.

∼Resources (void)

Destructor for the Resources class.

Public Attributes

std::map< int, std::vector< double >> resource map 1D

A map <int, vector> of given 1D renewable resource time series.

std::map< int, std::string > path_map_1D

A map <int, string> of the paths (either relative or absolute) to given 1D renewable resource time series.

std::map< int, std::vector< std::vector< double >>> resource_map_2D

A map <int, vector> of given 2D renewable resource time series.

std::map< int, std::string > path_map_2D

A map <int, string> of the paths (either relative or absolute) to given 2D renewable resource time series.

Private Member Functions

void __checkResourceKey1D (int, RenewableType)

Helper method to check if given resource key (1D) is already in use.

void checkResourceKey2D (int, RenewableType)

Helper method to check if given resource key (2D) is already in use.

void __checkTimePoint (double, double, std::string, ElectricalLoad *)

Helper method to check received time point against expected time point.

void throwLengthError (std::string, ElectricalLoad *)

Helper method to throw data length error.

void __readSolarResource (std::string, int, ElectricalLoad *)

Helper method to handle reading a solar resource time series into Resources.

void __readTidalResource (std::string, int, ElectricalLoad *)

Helper method to handle reading a tidal resource time series into Resources.

void __readWaveResource (std::string, int, ElectricalLoad *)

Helper method to handle reading a wave resource time series into Resources.

void __readWindResource (std::string, int, ElectricalLoad *)

Helper method to handle reading a wind resource time series into Resources.

4.15.1 Detailed Description

A class which contains renewable resource data. Intended to serve as a component class of Model.

4.15.2 Constructor & Destructor Documentation

4.15.2.1 Resources()

```
Resources::Resources (
     void )
```

Constructor for the Resources class.

```
569 {
570     return;
571 } /* Resources() */
```

4.15.2.2 ∼Resources()

```
Resources::\simResources ( void )
```

Destructor for the Resources class.

4.15.3 Member Function Documentation

4.15.3.1 __checkResourceKey1D()

```
void Resources::__checkResourceKey1D (
          int resource_key,
          RenewableType renewable_type ) [private]
```

Helper method to check if given resource key (1D) is already in use.

Parameters

resource_key The key associated with the given renewable resource.

```
switch (renewable_type) {
    case (RenewableType :: SOLAR): {
        error_str += "SOLAR): ";
50
51
52
53
                        break:
55
                   case (RenewableType :: TIDAL): {
   error_str += "TIDAL): ";
56
57
58
59
                        break:
60
                   }
                   case (RenewableType :: WIND): {
63
                        error_str += "WIND): ";
64
65
                       break;
66
68
                  default: {
69
                       // do nothing!
70
                       break;
71
72
73
            }
74
75
             error_str += "resource key (1D) ";
             error_str += std::to_string(resource_key);
error_str += " is already in use";
76
77
78
79
             #ifdef _WIN32
80
                  std::cout « error_str « std::endl;
81
             #endif
82
             throw std::invalid_argument(error_str);
83
84
        }
85
        return;
87 } /* __checkResourceKey1D() */
```

4.15.3.2 __checkResourceKey2D()

```
void Resources::__checkResourceKey2D (
    int resource_key,
          RenewableType renewable_type ) [private]
```

Helper method to check if given resource key (2D) is already in use.

Parameters

resource_key The key associated with the given renewable resource.

```
109 {
          if (this->resource_map_2D.count(resource_key) > 0) {
110
              std::string error_str = "ERROR: Resources::addResource(";
112
              switch (renewable_type) {
   case (RenewableType :: WAVE): {
      error_str += "WAVE): ";
113
114
115
116
117
                         break;
                   }
119
120
                   default: {
121
                       // do nothing!
122
123
                         break;
124
125
126
              error_str += "resource key (2D) ";
127
              error_str += std::to_string(resource_key);
error_str += " is already in use";
128
129
```

```
130
131
           #ifdef _WIN32
132
               std::cout « error_str « std::endl;
           #endif
133
134
135
           throw std::invalid_argument(error_str);
136
137
138
       return;
      /* __checkResourceKey2D() */
139 }
```

4.15.3.3 __checkTimePoint()

Helper method to check received time point against expected time point.

Parameters

time_received_hrs	The point in time received from the given data.
time_expected_hrs	The point in time expected (this comes from the electrical load time series).
path_2_resource_data	The path (either relative or absolute) to the given resource time series.
electrical_load_ptr	A pointer to the Model's ElectricalLoad object.

```
173 {
174
          if (time_received_hrs != time_expected_hrs) {
175
               std::string error_str = "ERROR: Resources::addResource(): ";
176
                error_str += "the given resource time series at ";
              error_str += path_2_resource_data;

error_str += " does not align with the ";

error_str += "previously given electrical load time series at ";

error_str += electrical_load_ptr->path_2_electrical_load_time_series;
177
178
179
180
181
182
               #ifdef _WIN32
                std::cout « error_str « std::endl;
#endif
183
184
185
186
                throw std::runtime_error(error_str);
187
188
189
          return;
190 }
         /* __checkTimePoint() */
```

4.15.3.4 __readSolarResource()

Helper method to handle reading a solar resource time series into Resources.

path_2_resource_data	The path (either relative or absolute) to the given resource time series.	
resource_key	The key associated with the given renewable resource.	
electrical_load_ptr	A pointer to the Model's ElectricalLoad object.	nerated by Doxygen

```
257 {
258
         // 1. init CSV reader, record path
259
        io::CSVReader<2> CSV(path_2_resource_data);
260
2.61
        CSV.read header (
             io::ignore_extra_column,
262
             "Time (since start of data) [hrs]",
263
264
             "Solar GHI [kW/m2]"
265
266
267
        this->path_map_1D.insert(
268
            std::pair<int, std::string>(resource_key, path_2_resource_data)
269
270
271
         // 2. init map element
272
273
        this->resource_map_1D.insert(
            std::pair<int, std::vector<double>(resource_key, {})
274
275
        this->resource_map_1D[resource_key].resize(electrical_load_ptr->n_points, 0);
276
277
278
         // 3. read in resource data, check against time series (point-wise and length)
279
        int n_points = 0;
        double time_hrs = 0;
double time_expected_hrs = 0;
280
281
        double solar_resource_kWm2 = 0;
282
283
284
        while (CSV.read_row(time_hrs, solar_resource_kWm2)) {
            if (n_points > electrical_load_ptr->n_points) {
    this->__throwLengthError(path_2_resource_data, electrical_load_ptr);
285
286
287
288
289
            time_expected_hrs = electrical_load_ptr->time_vec_hrs[n_points];
290
            this->__checkTimePoint(
291
                 time_hrs,
292
                 time_expected_hrs,
293
                 path 2 resource data,
                 electrical_load_ptr
295
296
297
            this->resource_map_1D[resource_key][n_points] = solar_resource_kWm2;
298
            n_points++;
299
300
        }
301
302
        // 4. check data length
303
        if (n_points != electrical_load_ptr->n_points) {
304
             this->__throwLengthError(path_2_resource_data, electrical_load_ptr);
305
306
307
        return;
308 }
        /* __readSolarResource() */
```

4.15.3.5 __readTidalResource()

Helper method to handle reading a tidal resource time series into Resources.

path_2_resource_data	The path (either relative or absolute) to the given resource time series.
resource_key	The key associated with the given renewable resource.
electrical_load_ptr	A pointer to the Model's ElectricalLoad object.

```
337 {
338     // 1. init CSV reader, record path
339     io::CSVReader<2> CSV(path_2_resource_data);
340
```

```
CSV.read_header(
341
342
             io::ignore_extra_column,
             "Time (since start of data) [hrs]",
343
             "Tidal Speed (hub depth) [m/s]"
344
345
        );
346
347
        this->path_map_1D.insert(
348
            std::pair<int, std::string>(resource_key, path_2_resource_data)
349
350
351
        // 2. init map element
352
        this->resource_map_1D.insert(
353
            std::pair<int, std::vector<double>(resource_key, {})
354
355
        this->resource_map_1D[resource_key].resize(electrical_load_ptr->n_points, 0);
356
357
358
           3. read in resource data, check against time series (point-wise and length)
359
        int n_points = 0;
360
        double time_hrs = 0;
361
        double time_expected_hrs = 0;
362
        double tidal_resource_ms = 0;
363
        while (CSV.read_row(time_hrs, tidal_resource_ms)) {
   if (n_points > electrical_load_ptr->n_points) {
364
365
                 this->__throwLengthError(path_2_resource_data, electrical_load_ptr);
366
367
368
369
            time_expected_hrs = electrical_load_ptr->time_vec_hrs[n_points];
            this->__checkTimePoint(
    time_hrs,
370
371
372
                 time_expected_hrs,
373
                 path_2_resource_data,
374
                 electrical_load_ptr
375
            );
376
377
            this->resource_map_1D[resource_key][n_points] = tidal_resource_ms;
378
379
            n_points++;
380
381
        // 4. check data length
382
        if (n_points != electrical_load_ptr->n_points) {
383
            this->__throwLengthError(path_2_resource_data, electrical_load_ptr);
384
385
386
387
        return;
        /* __readTidalResource() */
388 }
```

4.15.3.6 __readWaveResource()

Helper method to handle reading a wave resource time series into Resources.

path_2_resource_data The path (either relative or absolute) to the given resource time ser	
resource_key	The key associated with the given renewable resource.
electrical_load_ptr	A pointer to the Model's ElectricalLoad object.

```
425
             "Energy Period [s]"
426
        );
427
428
        this->path_map_2D.insert(
429
            std::pair<int, std::string>(resource_key, path_2_resource_data)
430
431
432
         // 2. init map element
433
        this->resource_map_2D.insert(
434
             std::pair<int, std::vector<std::vector<double»>(resource_key, {})
435
436
        this->resource_map_2D[resource_key].resize(electrical_load_ptr->n_points, {0, 0});
437
438
439
        // 3. read in resource data, check against time series (point-wise and length)
440
        int n_points = 0;
        double time_hrs = 0;
441
442
        double time_expected_hrs = 0;
        double significant_wave_height_m = 0;
443
444
        double energy_period_s = 0;
445
446
        while (CSV.read_row(time_hrs, significant_wave_height_m, energy_period_s)) {
447
            if (n_points > electrical_load_ptr->n_points) {
                 this->__throwLengthError(path_2_resource_data, electrical_load_ptr);
448
449
450
451
            time_expected_hrs = electrical_load_ptr->time_vec_hrs[n_points];
452
            this->__checkTimePoint(
453
                 time_hrs,
                 time_expected_hrs, path_2_resource_data,
454
455
456
                 electrical load ptr
457
458
            this->resource_map_2D[resource_key][n_points][0] = significant_wave_height_m;
this->resource_map_2D[resource_key][n_points][1] = energy_period_s;
459
460
461
462
            n_points++;
463
        }
464
        // 4. check data length
465
        if (n_points != electrical_load_ptr->n_points) {
466
467
            this->__throwLengthError(path_2_resource_data, electrical_load_ptr);
468
469
470
        return;
471 }
       /* __readWaveResource() */
```

4.15.3.7 __readWindResource()

Helper method to handle reading a wind resource time series into Resources.

path_2_resource_data	The path (either relative or absolute) to the given resource time series.
resource_key	The key associated with the given renewable resource.
electrical_load_ptr	A pointer to the Model's ElectricalLoad object.

```
509
510
        this->path_map_1D.insert(
511
            std::pair<int, std::string>(resource_key, path_2_resource_data)
512
513
        // 2. init map element
514
515
        this->resource_map_1D.insert(
516
            std::pair<int, std::vector<double»(resource_key, {})</pre>
517
518
        this->resource_map_1D[resource_key].resize(electrical_load_ptr->n_points, 0);
519
520
521
        // 3. read in resource data, check against time series (point-wise and length)
522
        int n_points = 0;
523
        double time_hrs = 0;
524
        double time_expected_hrs = 0;
525
        double wind_resource_ms = 0;
526
527
        while (CSV.read_row(time_hrs, wind_resource_ms)) {
528
           if (n_points > electrical_load_ptr->n_points) {
529
                this->__throwLengthError(path_2_resource_data, electrical_load_ptr);
530
531
            time_expected_hrs = electrical_load_ptr->time_vec_hrs[n_points];
532
533
            this->_checkTimePoint(
534
              time_hrs,
535
                time_expected_hrs,
536
                path_2_resource_data,
537
                electrical_load_ptr
538
            );
539
540
            this->resource_map_1D[resource_key][n_points] = wind_resource_ms;
541
542
            n_points++;
543
       }
544
        // 4. check data length
545
        if (n_points != electrical_load_ptr->n_points) {
546
547
            this->__throwLengthError(path_2_resource_data, electrical_load_ptr);
548
549
        return;
550
       /* __readWindResource() */
551 }
```

4.15.3.8 throwLengthError()

Helper method to throw data length error.

path_2_resource_data	The path (either relative or absolute) to the given resource time series.
electrical_load_ptr	A pointer to the Model's ElectricalLoad object.

```
215 {
216
        std::string error_str = "ERROR: Resources::addResource(): ";
217
        error_str += "the given resource time series at ";
        error_str += path_2_resource_data;
error_str += " is not the same length as the previously given electrical";
218
219
        error_str += " load time series at ";
220
221
        error_str += electrical_load_ptr->path_2_electrical_load_time_series;
222
223
        #ifdef _WIN32
224
            std::cout « error_str « std::endl;
        #endif
225
226
227
        throw std::runtime_error(error_str);
228
229
230 }
        /* __throwLengthError() */
```

4.15.3.9 addResource()

A method to add a renewable resource time series to Resources. Checks if given resource key is already in use. The associated helper methods also check against ElectricalLoad to ensure that all added time series align with the electrical load time series (both in terms of length and which points in time are included).

renewable_type	The type of renewable resource being added to Resources.
path_2_resource_data	A string defining the path (either relative or absolute) to the given resource time
	series.
resource_key	A key used to index into the Resources object, used to associate Renewable assets with the corresponding resource.
electrical_load_ptr	A pointer to the Model's ElectricalLoad object.

```
608 {
        switch (renewable_type) {
610
           case (RenewableType :: SOLAR): {
611
                this->__checkResourceKey1D(resource_key, renewable_type);
612
                this-> readSolarResource(
613
                    path_2_resource_data,
614
615
                    resource_key,
                    electrical_load_ptr
617
618
619
                break;
            }
620
621
            case (RenewableType :: TIDAL): {
622
623
                this->__checkResourceKey1D(resource_key, renewable_type);
624
625
                this->__readTidalResource(
                    path_2_resource_data,
626
627
                     resource_key,
628
                    electrical_load_ptr
629
630
631
                break;
632
            }
633
            case (RenewableType :: WAVE): {
634
                this->__checkResourceKey2D(resource_key, renewable_type);
636
637
                this->__readWaveResource(
638
                    path_2_resource_data,
639
                    resource kev.
640
                    electrical_load_ptr
641
                );
642
643
                break;
            }
644
645
646
            case (RenewableType :: WIND): {
647
                this->__checkResourceKey1D(resource_key, renewable_type);
648
649
                this->__readWindResource(
                    path_2_resource_data,
650
                    resource_key,
651
652
                    electrical_load_ptr
653
654
655
                break;
656
```

4.15.3.10 clear()

Method to clear all attributes of the Resources object.

```
680 {
681    this->resource_map_1D.clear();
682    this->path_map_1D.clear();
683
684    this->resource_map_2D.clear();
685    this->path_map_2D.clear();
686
687    return;
688 } /* clear() */
```

4.15.4 Member Data Documentation

4.15.4.1 path_map_1D

```
std::map<int, std::string> Resources::path_map_1D
```

A map <int, string> of the paths (either relative or absolute) to given 1D renewable resource time series.

4.15.4.2 path_map_2D

```
std::map<int, std::string> Resources::path_map_2D
```

A map <int, string> of the paths (either relative or absolute) to given 2D renewable resource time series.

4.15.4.3 resource_map_1D

```
std::map<int, std::vector<double> > Resources::resource_map_1D
```

A map <int, vector> of given 1D renewable resource time series.

4.16 Solar Class Reference 81

4.15.4.4 resource_map_2D

std::map<int, std::vector<std::vector<double> > Resources::resource_map_2D

A map <int, vector> of given 2D renewable resource time series.

The documentation for this class was generated from the following files:


- · header/Resources.h
- source/Resources.cpp

4.16 Solar Class Reference


A derived class of the Renewable branch of Production which models solar production.

#include <Solar.h>

Inheritance diagram for Solar:



Collaboration diagram for Solar:



Public Member Functions

· Solar (void)

Constructor (dummy) for the Solar class.

- Solar (int, SolarInputs)
- double computeProductionkW (int, double, double)

Method which takes in the solar resource at a particular point in time, and then returns the solar PV production at that point in time.

• double commit (int, double, double, double)

Method which takes in production and load for the current timestep, computes and records dispatch and curtailment, and then returns remaining load.

∼Solar (void)

Destructor for the Solar class.

Public Attributes

· double derating

The derating of the solar PV array (i.e., shadowing, soiling, etc.).

Private Member Functions

void checkInputs (SolarInputs)

Helper method to check inputs to the Solar constructor.

double <u>getGenericCapitalCost</u> (void)

Helper method to generate a generic solar PV array capital cost.

double <u>getGenericOpMaintCost</u> (void)

Helper method to generate a generic solar PV array operation and maintenance cost. This is a cost incurred per unit energy produced.

4.16.1 Detailed Description

A derived class of the Renewable branch of Production which models solar production.

4.16.2 Constructor & Destructor Documentation

4.16.2.1 Solar() [1/2]

```
Solar::Solar (
     void )
```

Constructor (dummy) for the Solar class.

Constructor (intended) for the Solar class.

Parameters

n_points	The number of points in the modelling time series.
solar_inputs	A structure of Solar constructor inputs.

4.16.2.2 Solar() [2/2]

```
Solar::Solar (
               int n_points,
               SolarInputs solar_inputs )
146
147 Renewable(n_points, solar_inputs.renewable_inputs)
148 {
149
         // 1. check inputs
150
        this->__checkInputs(solar_inputs);
151
152
        // 2. set attributes
        this->type = RenewableType :: SOLAR;
this->type_str = "SOLAR";
153
154
155
156
        this->resource_key = solar_inputs.resource_key;
157
158
        this->derating = solar_inputs.derating;
159
160
        if (solar_inputs.capital_cost < 0) {</pre>
            this->capital_cost = this->__getGenericCapitalCost();
161
162
163
164
        if (solar_inputs.operation_maintenance_cost_kWh < 0) {</pre>
165
            this->operation_maintenance_cost_kWh = this->__getGenericOpMaintCost();
166
167
168
        if (this->is_sunk) {
169
            this->capital_cost_vec[0] = this->capital_cost;
170
171
        // 3. construction print
172
        if (this->print_flag) {
    std::cout « "Solar object constructed at " « this « std::endl;
173
174
175
176
177
        return;
178 }
        /* Renewable() */
```

4.16.2.3 ∼Solar()

```
Solar::∼Solar (
void )
```

Destructor for the Solar class.

4.16.3 Member Function Documentation

4.16.3.1 __checkInputs()

Helper method to check inputs to the Solar constructor.

```
37
38
            1. check derating
39
             solar_inputs.derating < 0 or</pre>
41
            solar_inputs.derating > 1
42
            std::string error_str = "ERROR: Solar(): ";
error_str += "SolarInputs::derating must be in the closed interval [0, 1]";
4.3
44
45
46
47
                 std::cout « error_str « std::endl;
48
             #endif
49
50
            throw std::invalid_argument(error_str);
       }
51
        return;
       /* __checkInputs() */
54 }
```

4.16.3.2 __getGenericCapitalCost()

Helper method to generate a generic solar PV array capital cost.

This model was obtained by way of surveying an assortment of published solar PV costs, and then constructing a best fit model. Note that this model expresses cost in terms of Canadian dollars [CAD].

Returns

A generic capital cost for the solar PV array [CAD].

4.16.3.3 __getGenericOpMaintCost()

Helper method to generate a generic solar PV array operation and maintenance cost. This is a cost incurred per unit energy produced.

This model was obtained by way of surveying an assortment of published solar PV costs, and then constructing a best fit model. Note that this model expresses cost in terms of Canadian dollars [CAD/kWh].

Returns

A generic operation and maintenance cost, per unit energy produced, for the solar PV array [CAD/kWh].

```
103 {
104     return 0.01;
105 }    /* __getGenericOpMaintCost() */
```

4.16 Solar Class Reference 85

4.16.3.4 commit()

```
double Solar::commit (
    int timestep,
    double dt_hrs,
    double production_kW,
    double load_kW ) [virtual]
```

Method which takes in production and load for the current timestep, computes and records dispatch and curtailment, and then returns remaining load.

Parameters

timestep	The timestep (i.e., time series index) for the request.
dt_hrs	The interval of time [hrs] associated with the timestep.
production_kW	The production [kW] of the asset in this timestep.
load_kW	The load [kW] passed to the asset in this timestep.

Returns

The load [kW] remaining after the dispatch is deducted from it.

Reimplemented from Renewable.

```
263 {
264
        // 1. invoke base class method
265
        load_kW = Renewable :: commit(
266
            timestep,
267
            dt_hrs,
268
            production_kW,
269
            load_kW
270
       );
271
272
273
274
       //...
275
       return load_kW;
276 } /* commit() */
```

4.16.3.5 computeProductionkW()

Method which takes in the solar resource at a particular point in time, and then returns the solar PV production at that point in time.

Ref: HOMER [2023e]

timestep	The timestep (i.e., time series index) for the request.
dt_hrs	The interval of time [hrs] associated with the timestep.
solar_resource_kWm2	Solar resource (i.e. irradiance) [kW/m2].

Returns

The production [kW] of the solar PV array.

Reimplemented from Renewable.

```
212 {
213
         // check if no resource
         if (solar_resource_kWm2 <= 0) {</pre>
214
215
216
217
218
         // compute production
        double production_kW = this->derating * solar_resource_kWm2 * this->capacity_kW;
219
221
         // cap production at capacity
        if (production_kW > this->capacity_kW) {
    production_kW = this->capacity_kW;
222
223
224
225
226
         return production_kW;
        /* computeProductionkW() */
```

4.16.4 Member Data Documentation

4.16.4.1 derating

```
double Solar::derating
```

The derating of the solar PV array (i.e., shadowing, soiling, etc.).

The documentation for this class was generated from the following files:


- header/Production/Renewable/Solar.h
- source/Production/Renewable/Solar.cpp

4.17 SolarInputs Struct Reference

A structure which bundles the necessary inputs for the Solar constructor. Provides default values for every necessary input. Note that this structure encapsulates RenewableInputs.

```
#include <Solar.h>
```

Collaboration diagram for SolarInputs:

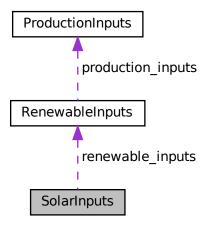

Public Attributes

• RenewableInputs renewable_inputs

An encapsulated RenewableInputs instance.

• int resource_key = 0

A key used to index into the Resources object, to associate this asset with the appropriate resource time series.

• double capital cost = -1

The capital cost of the asset (undefined currency). -1 is a sentinel value, which triggers a generic cost model on construction (in fact, any negative value here will trigger). Note that the generic cost model is in terms of Canadian dollars [CAD].

• double operation_maintenance_cost_kWh = -1

The operation and maintenance cost of the asset [1/kWh] (undefined currency). This is a cost incurred per unit of energy produced. -1 is a sentinel value, which triggers a generic cost model on construction (in fact, any negative value here will trigger). Note that the generic cost model is in terms of Canadian dollars [CAD/kWh].

• double derating = 0.8

The derating of the solar PV array (i.e., shadowing, soiling, etc.).

4.17.1 Detailed Description

A structure which bundles the necessary inputs for the Solar constructor. Provides default values for every necessary input. Note that this structure encapsulates RenewableInputs.

4.17.2 Member Data Documentation

4.17.2.1 capital_cost

```
double SolarInputs::capital_cost = -1
```

The capital cost of the asset (undefined currency). -1 is a sentinel value, which triggers a generic cost model on construction (in fact, any negative value here will trigger). Note that the generic cost model is in terms of Canadian dollars [CAD].

4.17.2.2 derating

```
double SolarInputs::derating = 0.8
```

The derating of the solar PV array (i.e., shadowing, soiling, etc.).

4.17.2.3 operation_maintenance_cost_kWh

```
double SolarInputs::operation_maintenance_cost_kWh = -1
```

The operation and maintenance cost of the asset [1/kWh] (undefined currency). This is a cost incurred per unit of energy produced. -1 is a sentinel value, which triggers a generic cost model on construction (in fact, any negative value here will trigger). Note that the generic cost model is in terms of Canadian dollars [CAD/kWh].

4.17.2.4 renewable_inputs

RenewableInputs SolarInputs::renewable_inputs

An encapsulated RenewableInputs instance.

4.17.2.5 resource_key

```
int SolarInputs::resource_key = 0
```

A key used to index into the Resources object, to associate this asset with the appropriate resource time series.

The documentation for this struct was generated from the following file:


• header/Production/Renewable/Solar.h

4.18 Storage Class Reference

The base class of the Storage hierarchy. This hierarchy contains derived classes which model the storage of energy.

```
#include <Storage.h>
```

Inheritance diagram for Storage:

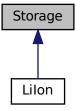

Public Member Functions

• Storage (void)

Constructor for the Storage class.

virtual ∼Storage (void)

Destructor for the Storage class.

4.18.1 Detailed Description

The base class of the Storage hierarchy. This hierarchy contains derived classes which model the storage of energy.

4.18.2 Constructor & Destructor Documentation

4.18.2.1 Storage()

```
Storage::Storage (
     void )
```

Constructor for the Storage class.

4.18.2.2 ∼Storage()

```
Storage::~Storage (

void ) [virtual]
```

Destructor for the Storage class.

The documentation for this class was generated from the following files:


- header/Storage/Storage.h
- source/Storage/Storage.cpp

4.19 Tidal Class Reference

A derived class of the Renewable branch of Production which models tidal production.


```
#include <Tidal.h>
```

Inheritance diagram for Tidal:

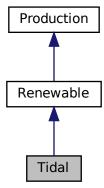

4.19 Tidal Class Reference 91

Collaboration diagram for Tidal:

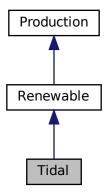

Public Member Functions

• Tidal (void)

Constructor (dummy) for the Tidal class.

- Tidal (int, TidalInputs)
- double computeProductionkW (int, double, double)

Method which takes in the tidal resource at a particular point in time, and then returns the tidal turbine production at that point in time.

• double commit (int, double, double, double)

Method which takes in production and load for the current timestep, computes and records dispatch and curtailment, and then returns remaining load.

∼Tidal (void)

Destructor for the Tidal class.

Public Attributes

· double design speed ms

The tidal stream speed [m/s] at which the tidal turbine achieves its rated capacity.

TidalPowerProductionModel power_model

The tidal power production model to be applied.

Private Member Functions

void checkInputs (TidalInputs)

Helper method to check inputs to the Tidal constructor.

double <u>getGenericCapitalCost</u> (void)

Helper method to generate a generic tidal turbine capital cost.

double getGenericOpMaintCost (void)

Helper method to generate a generic tidal turbine operation and maintenance cost. This is a cost incurred per unit energy produced.

• double <u>computeCubicProductionkW</u> (int, double, double)

Helper method to compute tidal turbine production under a cubic production model.

double <u>computeExponentialProductionkW</u> (int, double, double)

Helper method to compute tidal turbine production under an exponential production model.

double <u>computeLookupProductionkW</u> (int, double, double)

Helper method to compute tidal turbine production by way of looking up using given power curve data.

4.19.1 Detailed Description

A derived class of the Renewable branch of Production which models tidal production.

4.19.2 Constructor & Destructor Documentation

4.19.2.1 Tidal() [1/2]

Constructor (dummy) for the Tidal class.

Constructor (intended) for the Tidal class.

Parameters

n_points	The number of points in the modelling time series.
tidal_inputs	A structure of Tidal constructor inputs.

```
269 {
270 return;
271 } /* Tidal() */
```

4.19.2.2 Tidal() [2/2]

```
Tidal::Tidal (
               int n_points,
               TidalInputs tidal_inputs )
289
290 Renewable (n_points, tidal_inputs.renewable_inputs)
291 {
292
        // 1. check inputs
        this->__checkInputs(tidal_inputs);
293
294
295
        // 2. set attributes
        this->type = RenewableType :: TIDAL;
this->type_str = "TIDAL";
296
297
298
299
        this->resource_key = tidal_inputs.resource_key;
300
301
        this->design_speed_ms = tidal_inputs.design_speed_ms;
302
        this->power_model = tidal_inputs.power_model;
```

4.19 Tidal Class Reference 93

```
305
        if (tidal_inputs.capital_cost < 0) {</pre>
306
            this->capital_cost = this->__getGenericCapitalCost();
307
308
309
        if (tidal_inputs.operation_maintenance_cost_kWh < 0) {</pre>
310
            this->operation_maintenance_cost_kWh = this->__getGenericOpMaintCost();
311
312
313
        if (this->is_sunk) {
            this->capital_cost_vec[0] = this->capital_cost;
314
315
316
317
        // 3. construction print
        if (this->print_flag) {
318
            std::cout « "Tidal object constructed at " « this « std::endl;
319
320
321
322
       return;
323 }
       /* Renewable() */
```

4.19.2.3 ∼Tidal()

```
Tidal::~Tidal ( void )
```

Destructor for the Tidal class.

4.19.3 Member Function Documentation

4.19.3.1 __checkInputs()

Helper method to check inputs to the Tidal constructor.

```
38
         // 1. check design_speed_ms
         if (tidal_inputs.design_speed_ms <= 0) {
    std::string error_str = "ERROR: Tidal(): ";
    error_str += "TidalInputs::design_speed_ms must be > 0";
39
40
41
42
              #ifdef _WIN32
43
                   std::cout « error_str « std::endl;
45
46
47
              throw std::invalid_argument(error_str);
48
49
50
         return;
        /* __checkInputs() */
```

4.19.3.2 __computeCubicProductionkW()

Helper method to compute tidal turbine production under a cubic production model.

Ref: Buckham et al. [2023]

Parameters

timestep	The current time step of the Model run.
dt_hrs	The interval of time [hrs] associated with the action.
tidal_resource_ms	The available tidal stream resource [m/s].

Returns

The production [kW] of the tidal turbine, under a cubic model.

```
138 {
139
         double production = 0;
140
141
             tidal_resource_ms < 0.15 * this->design_speed_ms or tidal_resource_ms > 1.25 * this->design_speed_ms
142
143
144
145
             production = 0;
146
147
        else if (
    0.15 * this->design_speed_ms <= tidal_resource_ms and</pre>
148
149
150
             tidal_resource_ms <= this->design_speed_ms
151
152
             production =
153
                  (1 / pow(this->design_speed_ms, 3)) * pow(tidal_resource_ms, 3);
154
        }
155
156
        else {
157
             production = 1;
158
159
160
         return production * this->capacity_kW;
161 }
        /* __computeCubicProductionkW() */
```

4.19.3.3 __computeExponentialProductionkW()

Helper method to compute tidal turbine production under an exponential production model.

Ref: docs/refs/wind_tidal_wave.pdf

4.19 Tidal Class Reference 95

Parameters

timestep	The current time step of the Model run.
dt_hrs	The interval of time [hrs] associated with the action.
tidal_resource_ms	The available tidal stream resource [m/s].

Returns

The production [kW] of the tidal turbine, under an exponential model.

```
195 {
196
         double production = 0;
197
198
         double turbine_speed =
             (tidal_resource_ms - this->design_speed_ms) / this->design_speed_ms;
199
200
201
         if (turbine_speed < -0.71 or turbine_speed > 0.65) {
202
             production = 0;
204
        else if (turbine_speed >= -0.71 and turbine_speed <= 0) {
   production = 1.69215 * exp(1.25909 * turbine_speed) - 0.69215;</pre>
205
206
207
208
209
        else {
210
           production = 1;
211
212
         return production * this->capacity_kW;
213
        /* __computeExponentialProductionkW() */
214 }
```

4.19.3.4 __computeLookupProductionkW()

Helper method to compute tidal turbine production by way of looking up using given power curve data.

Parameters

timestep	The current time step of the Model run.
dt_hrs	The interval of time [hrs] associated with the action.
tidal_resource_ms	The available tidal stream resource [m/s].

Returns

The interpolated production [kW] of the tidal tubrine.

4.19.3.5 __getGenericCapitalCost()

Helper method to generate a generic tidal turbine capital cost.

Note that this model expresses cost in terms of Canadian dollars [CAD].

Ref: MacDougall [2019]

Returns

A generic capital cost for the tidal turbine [CAD].

```
73 {
74     double capital_cost_per_kW = 2000 * pow(this->capacity_kW, -0.15) + 4000;
75
76     return capital_cost_per_kW * this->capacity_kW;
77 } /* __getGenericCapitalCost() */
```

4.19.3.6 __getGenericOpMaintCost()

Helper method to generate a generic tidal turbine operation and maintenance cost. This is a cost incurred per unit energy produced.

Note that this model expresses cost in terms of Canadian dollars [CAD/kWh].

Ref: MacDougall [2019]

Returns

A generic operation and maintenance cost, per unit energy produced, for the tidal turbine [CAD/kWh].

```
100 {
101          double operation_maintenance_cost_kWh = 0.05 * pow(this->capacity_kW, -0.2) + 0.05;
102
103          return operation_maintenance_cost_kWh;
104 } /* __getGenericOpMaintCost() */
```

4.19.3.7 commit()

Method which takes in production and load for the current timestep, computes and records dispatch and curtailment, and then returns remaining load.

4.19 Tidal Class Reference 97

Parameters

timestep	The timestep (i.e., time series index) for the request.
dt_hrs	The interval of time [hrs] associated with the timestep.
production_kW	The production [kW] of the asset in this timestep.
load_kW	The load [kW] passed to the asset in this timestep.

Returns

The load [kW] remaining after the dispatch is deducted from it.

Reimplemented from Renewable.

```
433 {
          // 1. invoke base class method
load_kW = Renewable :: commit(
434
435
436
            timestep,
437
               dt_hrs,
              production_kW,
438
               load_kW
439
440
         );
442
443
444
         return load_kW;
/* commit() */
445
446 }
```

4.19.3.8 computeProductionkW()

Method which takes in the tidal resource at a particular point in time, and then returns the tidal turbine production at that point in time.

Parameters

timestep	The timestep (i.e., time series index) for the request.
dt_hrs	The interval of time [hrs] associated with the timestep.
tidal_resource_ms	Tidal resource (i.e. tidal stream speed) [m/s].

Returns

The production [kW] of the tidal turbine.

Reimplemented from Renewable.

```
363
364
        switch (this->power_model) {
           case (TidalPowerProductionModel :: TIDAL_POWER_EXPONENTIAL): {
365
               production_kW = this->__computeExponentialProductionkW(
366
367
                   timestep,
368
                    dt hrs.
                    tidal_resource_ms
369
370
               );
371
372
               break;
           }
373
374
375
           case (TidalPowerProductionModel :: TIDAL_POWER_LOOKUP): {
376
               production_kW = this->__computeLookupProductionkW(
377
                   timestep,
378
379
                    dt_hrs,
                    tidal_resource_ms
               );
380
381
               break;
383
           }
384
           default: {    // default to TidalPowerProductionModel :: CUBIC
385
                production_kW = this->__computeCubicProductionkW(
386
387
                   timestep,
388
                    dt_hrs,
389
                    tidal_resource_ms
390
               );
391
392
               break:
393
           }
394
       }
395
396
       return production_kW;
397 }
       /* computeProductionkW() */
```

4.19.4 Member Data Documentation

4.19.4.1 design_speed_ms

```
double Tidal::design_speed_ms
```

The tidal stream speed [m/s] at which the tidal turbine achieves its rated capacity.

4.19.4.2 power_model

```
TidalPowerProductionModel Tidal::power_model
```

The tidal power production model to be applied.

The documentation for this class was generated from the following files:


- · header/Production/Renewable/Tidal.h
- source/Production/Renewable/Tidal.cpp

4.20 TidalInputs Struct Reference

A structure which bundles the necessary inputs for the Tidal constructor. Provides default values for every necessary input. Note that this structure encapsulates RenewableInputs.

```
#include <Tidal.h>
```

Collaboration diagram for TidalInputs:

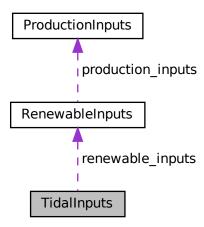

Public Attributes

· RenewableInputs renewable_inputs

An encapsulated RenewableInputs instance.

• int resource_key = 0

A key used to index into the Resources object, to associate this asset with the appropriate resource time series.

• double capital cost = -1

The capital cost of the asset (undefined currency). -1 is a sentinel value, which triggers a generic cost model on construction (in fact, any negative value here will trigger). Note that the generic cost model is in terms of Canadian dollars [CAD].

• double operation_maintenance_cost_kWh = -1

The operation and maintenance cost of the asset [1/kWh] (undefined currency). This is a cost incurred per unit of energy produced. -1 is a sentinel value, which triggers a generic cost model on construction (in fact, any negative value here will trigger). Note that the generic cost model is in terms of Canadian dollars [CAD/kWh].

• double design_speed_ms = 3

The tidal stream speed [m/s] at which the tidal turbine achieves its rated capacity.

TidalPowerProductionModel power_model = TidalPowerProductionModel :: TIDAL_POWER_CUBIC

The tidal power production model to be applied.

4.20.1 Detailed Description

A structure which bundles the necessary inputs for the Tidal constructor. Provides default values for every necessary input. Note that this structure encapsulates RenewableInputs.

4.20.2 Member Data Documentation

4.20.2.1 capital cost

```
double TidalInputs::capital_cost = -1
```

The capital cost of the asset (undefined currency). -1 is a sentinel value, which triggers a generic cost model on construction (in fact, any negative value here will trigger). Note that the generic cost model is in terms of Canadian dollars [CAD].

4.20.2.2 design_speed_ms

```
double TidalInputs::design_speed_ms = 3
```

The tidal stream speed [m/s] at which the tidal turbine achieves its rated capacity.

4.20.2.3 operation_maintenance_cost_kWh

```
double TidalInputs::operation_maintenance_cost_kWh = -1
```

The operation and maintenance cost of the asset [1/kWh] (undefined currency). This is a cost incurred per unit of energy produced. -1 is a sentinel value, which triggers a generic cost model on construction (in fact, any negative value here will trigger). Note that the generic cost model is in terms of Canadian dollars [CAD/kWh].

4.20.2.4 power_model

```
TidalPowerProductionModel TidalInputs::power_model = TidalPowerProductionModel :: TIDAL_POWER_CUBIC
```

The tidal power production model to be applied.

4.20.2.5 renewable_inputs

RenewableInputs TidalInputs::renewable_inputs

An encapsulated RenewableInputs instance.

4.21 Wave Class Reference 101

4.20.2.6 resource_key

```
int TidalInputs::resource_key = 0
```

A key used to index into the Resources object, to associate this asset with the appropriate resource time series.

The documentation for this struct was generated from the following file:


· header/Production/Renewable/Tidal.h

4.21 Wave Class Reference


A derived class of the Renewable branch of Production which models wave production.

```
#include <Wave.h>
```

Inheritance diagram for Wave:



Collaboration diagram for Wave:

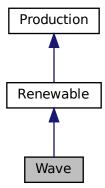

Public Member Functions

· Wave (void)

Constructor (dummy) for the Wave class.

- Wave (int, WaveInputs)
- double computeProductionkW (int, double, double, double)

Method which takes in the wave resource at a particular point in time, and then returns the wave turbine production at that point in time.

• double commit (int, double, double, double)

Method which takes in production and load for the current timestep, computes and records dispatch and curtailment, and then returns remaining load.

∼Wave (void)

Destructor for the Wave class.

Public Attributes

double design_significant_wave_height_m

The significant wave height [m] at which the wave energy converter achieves its rated capacity.

· double design energy period s

The energy period [s] at which the wave energy converter achieves its rated capacity.

WavePowerProductionModel power_model

The wave power production model to be applied.

Private Member Functions

· void checkInputs (WaveInputs)

Helper method to check inputs to the Wave constructor.

double <u>getGenericCapitalCost</u> (void)

Helper method to generate a generic wave energy converter capital cost.

double <u>getGenericOpMaintCost</u> (void)

Helper method to generate a generic wave energy converter operation and maintenance cost. This is a cost incurred per unit energy produced.

• double __computeGaussianProductionkW (int, double, double, double)

Helper method to compute wave energy converter production under a Gaussian production model.

double __computeParaboloidProductionkW (int, double, double, double)

Helper method to compute wave energy converter production under a paraboloid production model.

• double <u>computeLookupProductionkW</u> (int, double, double, double)

Helper method to compute wave energy converter production by way of looking up using given performance matrix.

4.21.1 Detailed Description

A derived class of the Renewable branch of Production which models wave production.

4.21.2 Constructor & Destructor Documentation

4.21.2.1 Wave() [1/2]

Constructor (dummy) for the Wave class.

Constructor (intended) for the Wave class.

103

Parameters

n_points	The number of points in the modelling time series.
wave_inputs	A structure of Wave constructor inputs.

4.21.2.2 Wave() [2/2]

```
Wave::Wave (
               int n_points,
               WaveInputs wave_inputs )
320 Renewable(n_points, wave_inputs.renewable_inputs)
321 {
         // 1. check inputs
322
323
        this->__checkInputs(wave_inputs);
324
325
        // 2. set attributes
        this->type = RenewableType :: WAVE;
this->type_str = "WAVE";
326
327
328
329
        this->resource_key = wave_inputs.resource_key;
330
331
        this->design_significant_wave_height_m =
332
            wave_inputs.design_significant_wave_height_m;
333
        this->design_energy_period_s = wave_inputs.design_energy_period_s;
334
335
        this->power_model = wave_inputs.power_model;
336
337
        if (wave_inputs.capital_cost < 0) {</pre>
338
            this->capital_cost = this->__getGenericCapitalCost();
339
340
341
        if (wave_inputs.operation_maintenance_cost_kWh < 0) {</pre>
342
            this->operation_maintenance_cost_kWh = this->__getGenericOpMaintCost();
343
344
        if (this->is_sunk) {
345
346
            this->capital_cost_vec[0] = this->capital_cost;
347
348
349
        // 3. construction print
        if (this->print_flag) {
    std::cout « "Wave object constructed at " « this « std::endl;
350
351
352
353
354
        return;
355 }
        /* Renewable() */
```

4.21.2.3 ∼Wave()

```
Wave::∼Wave ( void )
```

Destructor for the Wave class.

4.21.3 Member Function Documentation

4.21.3.1 __checkInputs()

Helper method to check inputs to the Wave constructor.

Parameters

wave_inputs A structure of Wave constructor inputs.

```
39 {
40
         // 1. check design_significant_wave_height_m \,
         if (wave_inputs.design_significant_wave_height_m <= 0) {
    std::string error_str = "ERROR: Wave(): ";
    error_str += "WaveInputs::design_significant_wave_height_m must be > 0";
41
42
43
               #ifdef _WIN32
46
                    std::cout « error_str « std::endl;
               #endif
47
48
49
               throw std::invalid_argument(error_str);
50
        }
52
         // 2. check design_energy_period_s
         if (wave_inputs.design_energy_period_s <= 0) {
    std::string error_str = "ERROR: Wave(): ";
    error_str += "WaveInputs::design_energy_period_s must be > 0";
53
54
55
56
58
                     std::cout « error_str « std::endl;
              #endif
59
60
61
               throw std::invalid_argument(error_str);
62
         }
         return;
65 }
        /* __checkInputs() */
```

4.21.3.2 __computeGaussianProductionkW()

Helper method to compute wave energy converter production under a Gaussian production model.

Ref: docs/refs/wind_tidal_wave.pdf

Parameters

t	imestep	The current time step of the Model run.	
C	dt_hrs	The interval of time [hrs] associated with the action.	
5	significant_wave_height⇔	The significant wave height [m] in the vicinity of the wave energy converter.	
-	_m		
e	energy_period_s	The energy period [s] in the vicinity of the wave energy converter Generated by	oxygen

4.21 Wave Class Reference 105

Returns

The production [kW] of the wave energy converter, under an exponential model.

```
160 {
161
        double H s nondim =
162
            (significant_wave_height_m - this->design_significant_wave_height_m) /
163
            this->design_significant_wave_height_m;
164
165
        double T_e_nondim =
166
            (energy_period_s - this->design_energy_period_s) /
167
            this->design_energy_period_s;
168
        double production = exp(
169
            -2.25119 * pow(T_e_nondim, 2) + 3.44570 * T_e_nondim * H_s_nondim -
171
             4.01508 * pow(H_s_nondim, 2)
172
        );
173
174
        return production * this->capacity_kW;
175
        /* __computeGaussianProductionkW() */
```

4.21.3.3 __computeLookupProductionkW()

Helper method to compute wave energy converter production by way of looking up using given performance matrix.

Parameters

timestep	The current time step of the Model run.
dt_hrs	The interval of time [hrs] associated with the action.
significant_wave_height⊷ _m	The significant wave height [m] in the vicinity of the wave energy converter.
energy_period_s	The energy period [s] in the vicinity of the wave energy converter

Returns

The interpolated production [kW] of the wave energy converter.

4.21.3.4 __computeParaboloidProductionkW()

Helper method to compute wave energy converter production under a paraboloid production model.

Ref: Robertson et al. [2021]

4.21 Wave Class Reference 107

Parameters

timestep	The current time step of the Model run.
dt_hrs	The interval of time [hrs] associated with the action.
significant_wave_height↔	The significant wave height [m] in the vicinity of the wave energy converter.
_m	
energy_period_s	The energy period [s] in the vicinity of the wave energy converter

Returns

The production [kW] of the wave energy converter, under a paraboloid model.

```
217 {
        // first, check for idealized wave breaking (deep water)
218
219
        if (significant_wave_height_m >= 0.2184 * pow(energy_period_s, 2)) {
220
            return 0;
221
222
223
        \ensuremath{//} otherwise, apply generic quadratic performance model
        // (with outputs bounded to [0, 1])
224
225
        double production =
226
           0.289 * significant_wave_height_m -
227
            0.00111 * pow(significant_wave_height_m, 2) * energy_period_s -
228
            0.0169 * energy_period_s;
229
        if (production < 0) {
   production = 0;</pre>
230
231
232
        }
233
234
        else if (production > 1) {
       production = 1;
235
236
237
238
        return production * this->capacity_kW;
239 }
        /* __computeParaboloidProductionkW() */
```

4.21.3.5 __getGenericCapitalCost()

Helper method to generate a generic wave energy converter capital cost.

Note that this model expresses cost in terms of Canadian dollars [CAD].

Ref: MacDougall [2019]

Returns

A generic capital cost for the wave energy converter [CAD].

```
87 {
88          double capital_cost_per_kW = 7000 * pow(this->capacity_kW, -0.15) + 5000;
89
90          return capital_cost_per_kW * this->capacity_kW;
91 } /* __getGenericCapitalCost() */
```

4.21.3.6 __getGenericOpMaintCost()

Helper method to generate a generic wave energy converter operation and maintenance cost. This is a cost incurred per unit energy produced.

Note that this model expresses cost in terms of Canadian dollars [CAD/kWh].

Ref: MacDougall [2019]

Returns

A generic operation and maintenance cost, per unit energy produced, for the wave energy converter [CAD/k← Wh].

4.21.3.7 commit()

```
double Wave::commit (
    int timestep,
    double dt_hrs,
    double production_kW,
    double load_kW ) [virtual]
```

Method which takes in production and load for the current timestep, computes and records dispatch and curtailment, and then returns remaining load.

Parameters

timestep	The timestep (i.e., time series index) for the request.
dt_hrs	The interval of time [hrs] associated with the timestep.
production_kW	The production [kW] of the asset in this timestep.
load_kW	The load [kW] passed to the asset in this timestep.

Returns

The load [kW] remaining after the dispatch is deducted from it.

Reimplemented from Renewable.

4.21 Wave Class Reference 109

```
480

481

482 //...

483

484 return load_kW;

485 } /* commit() */
```

4.21.3.8 computeProductionkW()

Method which takes in the wave resource at a particular point in time, and then returns the wave turbine production at that point in time.

Parameters

timestep	The timestep (i.e., time series index) for the request.
dt_hrs	The interval of time [hrs] associated with the timestep.
signficiant_wave_height↔ _m	The significant wave height (wave statistic) [m].
energy_period_s	The energy period (wave statistic) [s].

Returns

The production [kW] of the wave turbine.

Reimplemented from Renewable.

```
391 {
392
         // check if no resource
393
        if (significant_wave_height_m <= 0 or energy_period_s <= 0) {</pre>
394
            return 0;
395
396
397
        // compute production
398
        double production_kW = 0;
399
        switch (this->power_model) {
   case (WavePowerProductionModel :: WAVE_POWER_GAUSSIAN): {
400
401
402
                 \verb|production_kW| = \verb|this->_computeGaussianProductionkW|(
403
                     timestep,
404
                     dt_hrs,
405
                     significant_wave_height_m,
406
                     energy_period_s
407
                 );
408
409
                 break;
410
            }
411
412
            case (WavePowerProductionModel :: WAVE_POWER_LOOKUP): {
413
                production_kW = this->__computeLookupProductionkW(
414
                     timestep,
415
                     dt_hrs,
                     significant_wave_height_m,
416
417
                     energy_period_s
418
                 );
419
420
                 break;
421
             }
422
423
                          // default to WavePowerProductionModel :: PARABOLOID
424
                 production_kW = this->__computeParaboloidProductionkW(
```

```
timestep,
426
427
                   significant_wave_height_m,
428
                   energy_period_s
429
430
431
               break;
432
           }
433
       }
434
435
       return production_kW;
436 } /* computeProductionkW() */
```

4.21.4 Member Data Documentation

4.21.4.1 design_energy_period_s

```
double Wave::design_energy_period_s
```

The energy period [s] at which the wave energy converter achieves its rated capacity.

4.21.4.2 design_significant_wave_height_m

```
double Wave::design_significant_wave_height_m
```

The significant wave height [m] at which the wave energy converter achieves its rated capacity.

4.21.4.3 power_model

```
WavePowerProductionModel Wave::power_model
```

The wave power production model to be applied.

The documentation for this class was generated from the following files:


- header/Production/Renewable/Wave.h
- source/Production/Renewable/Wave.cpp

4.22 WaveInputs Struct Reference

A structure which bundles the necessary inputs for the Wave constructor. Provides default values for every necessary input. Note that this structure encapsulates RenewableInputs.

```
#include <Wave.h>
```

Collaboration diagram for WaveInputs:

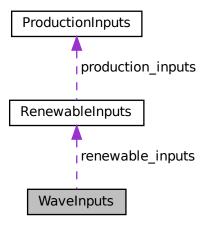

Public Attributes

· RenewableInputs renewable inputs

An encapsulated RenewableInputs instance.

• int resource_key = 0

A key used to index into the Resources object, to associate this asset with the appropriate resource time series.

double capital cost = -1

The capital cost of the asset (undefined currency). -1 is a sentinel value, which triggers a generic cost model on construction (in fact, any negative value here will trigger). Note that the generic cost model is in terms of Canadian dollars [CAD].

double operation_maintenance_cost_kWh = -1

The operation and maintenance cost of the asset [1/kWh] (undefined currency). This is a cost incurred per unit of energy produced. -1 is a sentinel value, which triggers a generic cost model on construction (in fact, any negative value here will trigger). Note that the generic cost model is in terms of Canadian dollars [CAD/kWh].

• double design_significant_wave_height_m = 3

The significant wave height [m] at which the wave energy converter achieves its rated capacity.

• double design_energy_period_s = 10

The energy period [s] at which the wave energy converter achieves its rated capacity.

• WavePowerProductionModel power_model = WavePowerProductionModel :: WAVE_POWER_PARABOLOID

The wave power production model to be applied.

4.22.1 Detailed Description

A structure which bundles the necessary inputs for the Wave constructor. Provides default values for every necessary input. Note that this structure encapsulates RenewableInputs.

4.22.2 Member Data Documentation

4.22.2.1 capital cost

```
double WaveInputs::capital_cost = -1
```

The capital cost of the asset (undefined currency). -1 is a sentinel value, which triggers a generic cost model on construction (in fact, any negative value here will trigger). Note that the generic cost model is in terms of Canadian dollars [CAD].

4.22.2.2 design energy period s

```
double WaveInputs::design_energy_period_s = 10
```

The energy period [s] at which the wave energy converter achieves its rated capacity.

4.22.2.3 design_significant_wave_height_m

```
double WaveInputs::design_significant_wave_height_m = 3
```

The significant wave height [m] at which the wave energy converter achieves its rated capacity.

4.22.2.4 operation_maintenance_cost_kWh

```
double WaveInputs::operation_maintenance_cost_kWh = -1
```

The operation and maintenance cost of the asset [1/kWh] (undefined currency). This is a cost incurred per unit of energy produced. -1 is a sentinel value, which triggers a generic cost model on construction (in fact, any negative value here will trigger). Note that the generic cost model is in terms of Canadian dollars [CAD/kWh].

4.23 Wind Class Reference 113

4.22.2.5 power_model

WavePowerProductionModel WaveInputs::power_model = WavePowerProductionModel :: WAVE_POWER_PARABOLOID

The wave power production model to be applied.

4.22.2.6 renewable_inputs

RenewableInputs WaveInputs::renewable_inputs

An encapsulated RenewableInputs instance.

4.22.2.7 resource_key

```
int WaveInputs::resource_key = 0
```

A key used to index into the Resources object, to associate this asset with the appropriate resource time series.

The documentation for this struct was generated from the following file:


· header/Production/Renewable/Wave.h

4.23 Wind Class Reference


A derived class of the Renewable branch of Production which models wind production.

```
#include <Wind.h>
```

Inheritance diagram for Wind:

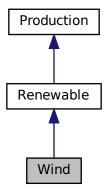

Collaboration diagram for Wind:



Public Member Functions

· Wind (void)

Constructor (dummy) for the Wind class.

- Wind (int, WindInputs)
- double computeProductionkW (int, double, double)

Method which takes in the wind resource at a particular point in time, and then returns the wind turbine production at that point in time.

• double commit (int, double, double, double)

Method which takes in production and load for the current timestep, computes and records dispatch and curtailment, and then returns remaining load.

∼Wind (void)

Destructor for the Wind class.

Public Attributes

• double design_speed_ms

The wind speed [m/s] at which the wind turbine achieves its rated capacity.

• WindPowerProductionModel power_model

The wind power production model to be applied.

Private Member Functions

void __checkInputs (WindInputs)

Helper method to check inputs to the Wind constructor.

double <u>getGenericCapitalCost</u> (void)

Helper method to generate a generic wind turbine capital cost.

double <u>getGenericOpMaintCost</u> (void)

Helper method to generate a generic wind turbine operation and maintenance cost. This is a cost incurred per unit energy produced.

• double __computeExponentialProductionkW (int, double, double)

Helper method to compute wind turbine production under an exponential production model.

double <u>computeLookupProductionkW</u> (int, double, double)

Helper method to compute wind turbine production by way of looking up using given power curve data.

4.23 Wind Class Reference 115

4.23.1 Detailed Description

A derived class of the Renewable branch of Production which models wind production.

4.23.2 Constructor & Destructor Documentation

4.23.2.1 Wind() [1/2]

```
Wind::Wind ( void )
```

Constructor (dummy) for the Wind class.

Constructor (intended) for the Wind class.

Parameters

n_points	The number of points in the modelling time series.
wind_inputs	A structure of Wind constructor inputs.

```
213 {
214 return;
215 } /* Wind() */
```

4.23.2.2 Wind() [2/2]

```
Wind::Wind (
               int n_points,
               WindInputs wind_inputs )
233
234 Renewable(n_points, wind_inputs.renewable_inputs)
235 {
236
         // 1. check inputs
237
        this->__checkInputs(wind_inputs);
238
        // 2. set attributes
this->type = RenewableType :: WIND;
this->type_str = "WIND";
239
240
241
242
243
        this->resource_key = wind_inputs.resource_key;
244
245
        this->design_speed_ms = wind_inputs.design_speed_ms;
246
247
        this->power_model = wind_inputs.power_model;
248
249
        if (wind_inputs.capital_cost < 0) {</pre>
250
            this->capital_cost = this->__getGenericCapitalCost();
251
252
253
        if (wind_inputs.operation_maintenance_cost_kWh < 0) {</pre>
254
             this->operation_maintenance_cost_kWh = this->__getGenericOpMaintCost();
255
256
257
        if (this->is_sunk) {
2.58
             this->capital_cost_vec[0] = this->capital_cost;
259
260
        // 3. construction print
```

```
262    if (this->print_flag) {
263        std::cout « "Wind object constructed at " « this « std::endl;
264    }
265
266    return;
267 } /* Renewable() */
```

4.23.2.3 ∼Wind()

```
Wind::\simWind ( void )
```

Destructor for the Wind class.

4.23.3 Member Function Documentation

4.23.3.1 __checkInputs()

Helper method to check inputs to the Wind constructor.

Parameters

```
wind_inputs A structure of Wind constructor inputs.
```

```
39 {
         // 1. check design_speed_ms
40
         if (wind_inputs.design_speed_ms <= 0) {
    std::string error_str = "ERROR: Wind(): ";
    error_str += "WindInputs::design_speed_ms must be > 0";
41
42
43
44
45
            #ifdef WIN32
46
                   std::cout « error_str « std::endl;
              #endif
48
49
              throw std::invalid_argument(error_str);
50
        }
51
52
         return;
        /* __checkInputs() */
```

4.23.3.2 __computeExponentialProductionkW()

4.23 Wind Class Reference 117

```
double dt_hrs,
double wind_resource_ms ) [private]
```

Helper method to compute wind turbine production under an exponential production model.

Ref: docs/refs/wind_tidal_wave.pdf

Parameters

timestep	The current time step of the Model run.
dt_hrs	The interval of time [hrs] associated with the action.
wind_resource_ms	The available wind resource [m/s].

Returns

The production [kW] of the wind turbine, under an exponential model.

```
140 {
141
        double production = 0;
142
143
        double turbine_speed = (wind_resource_ms - this->design_speed_ms) /
144
             this->design_speed_ms;
145
        if (turbine_speed < -0.76 or turbine_speed > 0.68) {
146
147
             production = 0;
148
        else if (turbine_speed >= -0.76 and turbine_speed <= 0) {
    production = 1.03273 * exp(-5.97588 * pow(turbine_speed, 2)) - 0.03273;</pre>
150
151
        }
152
153
154
        else {
155
           production = 0.16154 * exp(-9.30254 * pow(turbine_speed, 2)) + 0.83846;
156
157
         return production * this->capacity_kW;
158
159 }
        /* __computeExponentialProductionkW() */
```

4.23.3.3 __computeLookupProductionkW()

Helper method to compute wind turbine production by way of looking up using given power curve data.

Parameters

timestep	The current time step of the Model run.
dt_hrs	The interval of time [hrs] associated with the action.
wind_resource_ms	The available wind resource [m/s].

Returns

The interpolated production [kW] of the wind turbine.

4.23.3.4 getGenericCapitalCost()

Helper method to generate a generic wind turbine capital cost.

This model was obtained by way of surveying an assortment of published wind turbine costs, and then constructing a best fit model. Note that this model expresses cost in terms of Canadian dollars [CAD].

Returns

A generic capital cost for the wind turbine [CAD].

4.23.3.5 __getGenericOpMaintCost()

Helper method to generate a generic wind turbine operation and maintenance cost. This is a cost incurred per unit energy produced.

This model was obtained by way of surveying an assortment of published wind turbine costs, and then constructing a best fit model. Note that this model expresses cost in terms of Canadian dollars [CAD/kWh].

Returns

A generic operation and maintenance cost, per unit energy produced, for the wind turbine [CAD/kWh].

```
102 {
103          double operation_maintenance_cost_kWh = 0.025 * pow(this->capacity_kW, -0.2) + 0.025;
104
105          return operation_maintenance_cost_kWh;
106 } /* __getGenericOpMaintCost() */
```

4.23.3.6 commit()

Method which takes in production and load for the current timestep, computes and records dispatch and curtailment, and then returns remaining load.

4.23 Wind Class Reference 119

Parameters

timestep	The timestep (i.e., time series index) for the request.
dt_hrs	The interval of time [hrs] associated with the timestep.
production_kW	The production [kW] of the asset in this timestep.
load_kW	The load [kW] passed to the asset in this timestep.

Returns

The load [kW] remaining after the dispatch is deducted from it.

Reimplemented from Renewable.

```
367 {
368
           // 1. invoke base class method
load_kW = Renewable :: commit(
369
370
              timestep,
371
                dt_hrs,
                production_kW,
372
373
                load_kW
374
          );
375
376
377
378
379
          return load_kW;
/* commit() */
380 }
```

4.23.3.7 computeProductionkW()

Method which takes in the wind resource at a particular point in time, and then returns the wind turbine production at that point in time.

Parameters

timestep	The timestep (i.e., time series index) for the request.
dt_hrs	The interval of time [hrs] associated with the timestep.
wind_resource_ms	Wind resource (i.e. wind speed) [m/s].

Returns

The production [kW] of the wind turbine.

Reimplemented from Renewable.

```
switch (this->power_model) {
    case (WindPowerProductionModel :: WIND_POWER_LOOKUP): {
308
309
               production_kW = this->__computeLookupProductionkW(
310
311
                    timestep,
312
                    dt hrs.
313
                    wind_resource_ms
314
315
316
                break;
           }
317
318
           default: {    // default to WindPowerProductionModel :: WIND_POWER_EXPONENTIAL
319
               production_kW = this->__computeExponentialProductionkW(
320
321
                    timestep,
322
                    dt_hrs,
323
                    wind_resource_ms
324
               );
325
326
                break;
327
           }
       }
328
329
330
       return production_kW;
331 } /* computeProductionkW() */
```

4.23.4 Member Data Documentation

4.23.4.1 design_speed_ms

```
double Wind::design_speed_ms
```

The wind speed [m/s] at which the wind turbine achieves its rated capacity.

4.23.4.2 power_model

WindPowerProductionModel Wind::power_model

The wind power production model to be applied.

The documentation for this class was generated from the following files:


- header/Production/Renewable/Wind.h
- source/Production/Renewable/Wind.cpp

4.24 WindInputs Struct Reference

A structure which bundles the necessary inputs for the Wind constructor. Provides default values for every necessary input. Note that this structure encapsulates RenewableInputs.

```
#include <Wind.h>
```

Collaboration diagram for WindInputs:

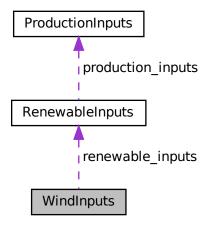

Public Attributes

· RenewableInputs renewable_inputs

An encapsulated RenewableInputs instance.

• int resource_key = 0

A key used to index into the Resources object, to associate this asset with the appropriate resource time series.

• double capital_cost = -1

The capital cost of the asset (undefined currency). -1 is a sentinel value, which triggers a generic cost model on construction (in fact, any negative value here will trigger). Note that the generic cost model is in terms of Canadian dollars [CAD].

double operation_maintenance_cost_kWh = -1

The operation and maintenance cost of the asset [1/kWh] (undefined currency). This is a cost incurred per unit of energy produced. -1 is a sentinel value, which triggers a generic cost model on construction (in fact, any negative value here will trigger). Note that the generic cost model is in terms of Canadian dollars [CAD/kWh].

• double design_speed_ms = 8

The wind speed [m/s] at which the wind turbine achieves its rated capacity.

• WindPowerProductionModel power_model = WindPowerProductionModel :: WIND_POWER_EXPONENTIAL The wind power production model to be applied.

4.24.1 Detailed Description

A structure which bundles the necessary inputs for the Wind constructor. Provides default values for every necessary input. Note that this structure encapsulates RenewableInputs.

4.24.2 Member Data Documentation

4.24.2.1 capital cost

```
double WindInputs::capital_cost = -1
```

The capital cost of the asset (undefined currency). -1 is a sentinel value, which triggers a generic cost model on construction (in fact, any negative value here will trigger). Note that the generic cost model is in terms of Canadian dollars [CAD].

4.24.2.2 design_speed_ms

```
double WindInputs::design_speed_ms = 8
```

The wind speed [m/s] at which the wind turbine achieves its rated capacity.

4.24.2.3 operation_maintenance_cost_kWh

```
\label{lower_double_windInputs::operation_maintenance_cost_kWh = -1} \\
```

The operation and maintenance cost of the asset [1/kWh] (undefined currency). This is a cost incurred per unit of energy produced. -1 is a sentinel value, which triggers a generic cost model on construction (in fact, any negative value here will trigger). Note that the generic cost model is in terms of Canadian dollars [CAD/kWh].

4.24.2.4 power_model

WindPowerProductionModel WindInputs::power_model = WindPowerProductionModel :: WIND_POWER_EXPONENTIAL

The wind power production model to be applied.

4.24.2.5 renewable_inputs

```
RenewableInputs WindInputs::renewable_inputs
```

An encapsulated RenewableInputs instance.

4.24.2.6 resource key

```
int WindInputs::resource_key = 0
```

A key used to index into the Resources object, to associate this asset with the appropriate resource time series.

The documentation for this struct was generated from the following file:

· header/Production/Renewable/Wind.h


Chapter 5

File Documentation


5.1 header/Controller.h File Reference

Header file the Controller class.

```
#include "std_includes.h"
#include "../third_party/fast-cpp-csv-parser/csv.h"
#include "ElectricalLoad.h"
#include "Resources.h"
#include "Production/Combustion/Combustion.h"
#include "Production/Renewable/Renewable.h"
#include "Storage/Storage.h"
Include dependency graph for Controller.h:
```

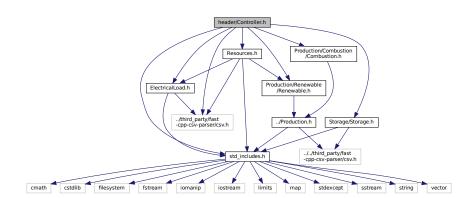

This graph shows which files directly or indirectly include this file:

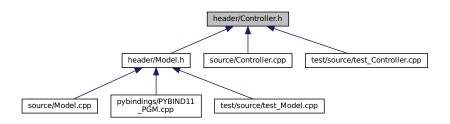

124 File Documentation

Classes

· class Controller

A class which contains a various dispatch control logic. Intended to serve as a component class of Model.

Enumerations

 $\bullet \ \ \mathsf{enum} \ \mathsf{ControlMode} \ \{ \ \mathsf{LOAD_FOLLOWING} \ , \ \mathsf{CYCLE_CHARGING} \ , \ \mathsf{N_CONTROL_MODES} \ \} \\$

An enumeration of the types of control modes supported by PGMcpp.

5.1.1 Detailed Description

Header file the Controller class.

5.1.2 Enumeration Type Documentation

5.1.2.1 ControlMode

```
enum ControlMode
```

An enumeration of the types of control modes supported by PGMcpp.

Enumerator

LOAD_FOLLOWING	Load following control, with in-order dispatch of non-Combustion assets and optimal dispatch of Combustion assets.
CYCLE_CHARGING	Cycle charging control, with in-order dispatch of non-Combustion assets and optimal dispatch of Combustion assets.
N_CONTROL_MODES	A simple hack to get the number of elements in ControlMode.


```
43 {
44 LOAD_FOLLOWING,
45 CYCLE_CHARGING,
46 N_CONTROL_MODES
47 };
```

5.2 header/ElectricalLoad.h File Reference


Header file the ElectricalLoad class.

```
#include "std_includes.h"
#include "../third_party/fast-cpp-csv-parser/csv.h"
```

Include dependency graph for ElectricalLoad.h:



This graph shows which files directly or indirectly include this file:

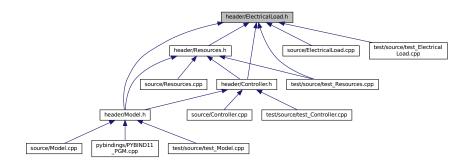

Classes

· class ElectricalLoad

A class which contains time and electrical load data. Intended to serve as a component class of Model.

5.2.1 Detailed Description

Header file the ElectricalLoad class.


5.3 header/Model.h File Reference

Header file the Model class.


```
#include "Controller.h"
#include "ElectricalLoad.h"
#include "Resources.h"
#include "Production/Combustion/Diesel.h"
#include "Production/Renewable/Solar.h"
#include "Production/Renewable/Tidal.h"
#include "Production/Renewable/Wave.h"
#include "Production/Renewable/Wind.h"
```

126 File Documentation

#include "Storage/LiIon.h"
Include dependency graph for Model.h:

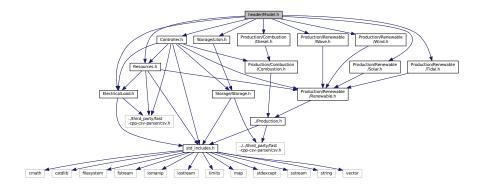

This graph shows which files directly or indirectly include this file:



Classes

struct ModelInputs

A structure which bundles the necessary inputs for the <u>Model</u> constructor. Provides default values for every necessary input (except path_2_electrical_load_time_series, for which a valid input must be provided).

· class Model

A container class which forms the centre of PGMcpp. The Model class is intended to serve as the primary user interface with the functionality of PGMcpp, and as such it contains all other classes.

5.3.1 Detailed Description


Header file the Model class.

5.4 header/Production/Combustion/Combustion.h File Reference


Header file the Combustion class.

#include "../Production.h"

Include dependency graph for Combustion.h:

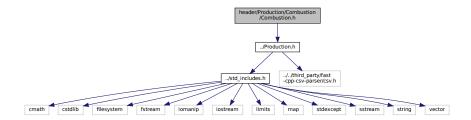

This graph shows which files directly or indirectly include this file:

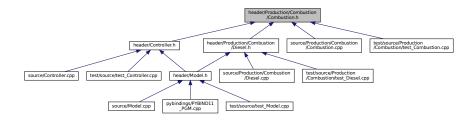

Classes

struct CombustionInputs

A structure which bundles the necessary inputs for the Combustion constructor. Provides default values for every necessary input. Note that this structure encapsulates ProductionInputs.

struct Emissions

A structure which bundles the emitted masses of various emissions chemistries.

class Combustion

The root of the Combustion branch of the Production hierarchy. This branch contains derived classes which model the production of energy by way of combustibles.

Enumerations

• enum CombustionType { DIESEL , N_COMBUSTION_TYPES }

An enumeration of the types of Combustion asset supported by PGMcpp.

5.4.1 Detailed Description

Header file the Combustion class.

5.4.2 Enumeration Type Documentation

128 File Documentation

5.4.2.1 CombustionType

enum CombustionType

An enumeration of the types of Combustion asset supported by PGMcpp.

Enumerator


DIESEL	A diesel generator.
N_COMBUSTION_TYPES	A simple hack to get the number of elements in CombustionType.

```
33 {
34 DIESEL,
35 N_COMBUSTION_TYPES
36 }
```


5.5 header/Production/Combustion/Diesel.h File Reference

Header file the Diesel class.

```
#include "Combustion.h"
Include dependency graph for Diesel.h:
```

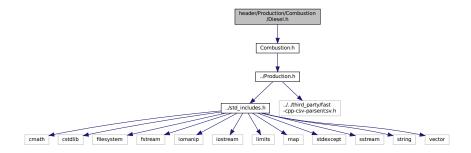

This graph shows which files directly or indirectly include this file:

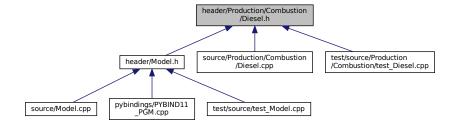

Classes

struct DieselInputs

A structure which bundles the necessary inputs for the Diesel constructor. Provides default values for every necessary input. Note that this structure encapsulates CombustionInputs.

· class Diesel

A derived class of the Combustion branch of Production which models production using a diesel generator.


5.5.1 Detailed Description

Header file the Diesel class.


5.6 header/Production/Production.h File Reference

Header file the Production class.

```
#include "../std_includes.h"
#include "../../third_party/fast-cpp-csv-parser/csv.h"
Include dependency graph for Production.h:
```



This graph shows which files directly or indirectly include this file:



Classes

• struct ProductionInputs

A structure which bundles the necessary inputs for the <u>Production</u> constructor. Provides default values for every necessary input.

class Production

The base class of the Production hierarchy. This hierarchy contains derived classes which model the production of energy, be it renewable or otherwise.


5.6.1 Detailed Description

Header file the Production class.

5.7 header/Production/Renewable/Renewable.h File Reference

Header file the Renewable class.

#include "../Production.h"
Include dependency graph for Renewable.h:

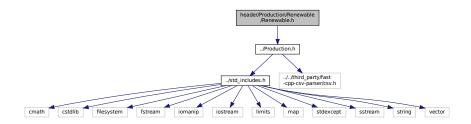

This graph shows which files directly or indirectly include this file:



Classes

• struct RenewableInputs

A structure which bundles the necessary inputs for the Renewable constructor. Provides default values for every necessary input. Note that this structure encapsulates ProductionInputs.

• class Renewable

The root of the Renewable branch of the Production hierarchy. This branch contains derived classes which model the renewable production of energy.

Enumerations

enum RenewableType {
 SOLAR, TIDAL, WAVE, WIND,
 N_RENEWABLE_TYPES}

An enumeration of the types of Renewable asset supported by PGMcpp.

5.7.1 Detailed Description

Header file the Renewable class.

5.7.2 Enumeration Type Documentation

5.7.2.1 RenewableType

enum RenewableType

An enumeration of the types of Renewable asset supported by PGMcpp.

Enumerator


SOLAR	A solar photovoltaic (PV) array.
TIDAL	A tidal stream turbine (or tidal energy converter, TEC)
WAVE	A wave energy converter (WEC)
WIND	A wind turbine.
N_RENEWABLE_TYPES	A simple hack to get the number of elements in RenewableType.

```
33 {
34 SOLAR,
35 TIDAL,
36 WAVE,
37 WIND,
38 N_RENEWABLE_TYPES
39 };
```


5.8 header/Production/Renewable/Solar.h File Reference

Header file the Solar class.

```
#include "Renewable.h"
Include dependency graph for Solar.h:
```

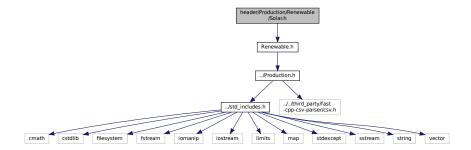

This graph shows which files directly or indirectly include this file:

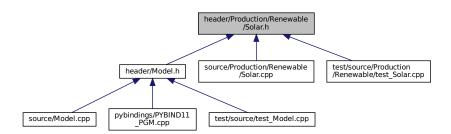

Classes

struct SolarInputs

A structure which bundles the necessary inputs for the Solar constructor. Provides default values for every necessary input. Note that this structure encapsulates RenewableInputs.

· class Solar

A derived class of the Renewable branch of Production which models solar production.


5.8.1 Detailed Description

Header file the Solar class.


5.9 header/Production/Renewable/Tidal.h File Reference

Header file the Tidal class.

#include "Renewable.h"
Include dependency graph for Tidal.h:

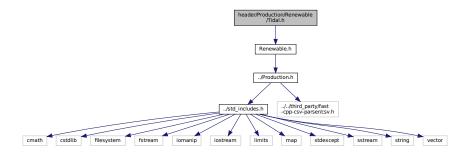

This graph shows which files directly or indirectly include this file:

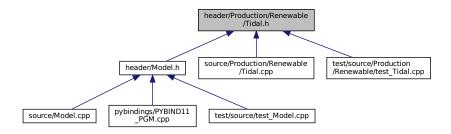

Classes

struct TidalInputs

A structure which bundles the necessary inputs for the Tidal constructor. Provides default values for every necessary input. Note that this structure encapsulates RenewableInputs.

class Tidal

A derived class of the Renewable branch of Production which models tidal production.

Enumerations

enum TidalPowerProductionModel { TIDAL_POWER_CUBIC , TIDAL_POWER_EXPONENTIAL , TIDAL_POWER_LOOKUP, N_TIDAL_POWER_PRODUCTION_MODELS }

5.9.1 Detailed Description

Header file the Tidal class.

5.9.2 Enumeration Type Documentation

5.9.2.1 TidalPowerProductionModel

enum TidalPowerProductionModel

Enumerator


TIDAL_POWER_CUBIC	A cubic power production model.
TIDAL_POWER_EXPONENTIAL	An exponential power production model.
TIDAL_POWER_LOOKUP	Lookup from a given set of power curve data.
N_TIDAL_POWER_PRODUCTION_MODELS	A simple hack to get the number of elements in
	TidalPowerProductionModel.

```
34 {
35    TIDAL_POWER_CUBIC,
36    TIDAL_POWER_EXPONENTIAL,
37    TIDAL_POWER_LOOKUP,
38    N_TIDAL_POWER_PRODUCTION_MODELS
39 };
```


5.10 header/Production/Renewable/Wave.h File Reference

Header file the Wave class.

#include "Renewable.h"
Include dependency graph for Wave.h:

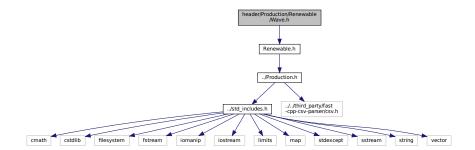

This graph shows which files directly or indirectly include this file:

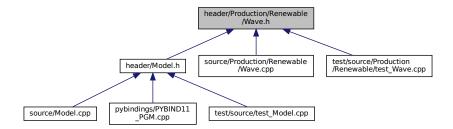

Classes

struct WaveInputs

A structure which bundles the necessary inputs for the Wave constructor. Provides default values for every necessary input. Note that this structure encapsulates RenewableInputs.

· class Wave

A derived class of the Renewable branch of Production which models wave production.

Enumerations

enum WavePowerProductionModel { WAVE_POWER_GAUSSIAN , WAVE_POWER_PARABOLOID , WAVE_POWER_LOOKUP, N_WAVE_POWER_PRODUCTION_MODELS }

5.10.1 Detailed Description

Header file the Wave class.

5.10.2 Enumeration Type Documentation

5.10.2.1 WavePowerProductionModel

enum WavePowerProductionModel


Enumerator

WAVE_POWER_GAUSSIAN	A Gaussian power production model.
WAVE_POWER_PARABOLOID	A paraboloid power production model.
WAVE_POWER_LOOKUP	Lookup from a given performance matrix.
N_WAVE_POWER_PRODUCTION_MODELS	A simple hack to get the number of elements in
	WavePowerProductionModel.


5.11 header/Production/Renewable/Wind.h File Reference

Header file the Wind class.

```
#include "Renewable.h"
Include dependency graph for Wind.h:
```

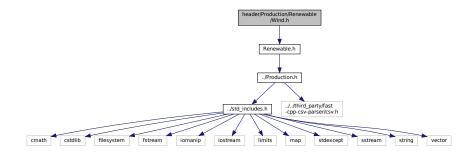

This graph shows which files directly or indirectly include this file:

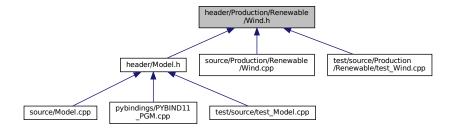

Classes

struct WindInputs

A structure which bundles the necessary inputs for the Wind constructor. Provides default values for every necessary input. Note that this structure encapsulates RenewableInputs.

· class Wind

A derived class of the Renewable branch of Production which models wind production.

Enumerations

enum WindPowerProductionModel { WIND_POWER_EXPONENTIAL , WIND_POWER_LOOKUP , N_WIND_POWER_PRODUCTION_MODELS }

5.11.1 Detailed Description

Header file the Wind class.

5.11.2 Enumeration Type Documentation

5.11.2.1 WindPowerProductionModel

enum WindPowerProductionModel

Enumerator

WIND_POWER_EXPONENTIAL	An exponential power production model.
WIND_POWER_LOOKUP	Lookup from a given set of power curve data.
N_WIND_POWER_PRODUCTION_MODELS	A simple hack to get the number of elements in
	WindPowerProductionModel.


```
34 {
35 WIND_POWER_EXPONENTIAL,
36 WIND_POWER_LOOKUP,
37 N_WIND_POWER_PRODUCTION_MODELS
38 };
```

5.12 header/Resources.h File Reference


Header file the Resources class.

```
#include "std_includes.h"
#include "../third_party/fast-cpp-csv-parser/csv.h"
#include "ElectricalLoad.h"
#include "Production/Renewable/Renewable.h"
```

Include dependency graph for Resources.h:

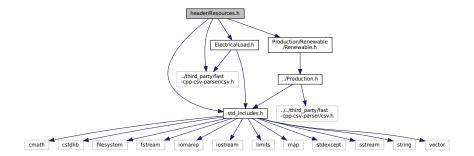

This graph shows which files directly or indirectly include this file:

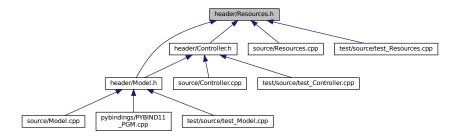

Classes

class Resources

A class which contains renewable resource data. Intended to serve as a component class of Model.

5.12.1 Detailed Description

Header file the Resources class.

5.13 header/std_includes.h File Reference


Header file which simply batches together the usual, standard includes.

```
#include <cmath>
#include <cstdlib>
#include <filesystem>
#include <fstream>
#include <ioomanip>
#include <iiostream>
#include <limits>
#include <map>
#include <stdexcept>
#include <sstream>
#include <sstream>
#include <string>
#include <vector>
```

Include dependency graph for std includes.h:



This graph shows which files directly or indirectly include this file:




5.13.1 Detailed Description

Header file which simply batches together the usual, standard includes.


5.14 header/Storage/Lilon.h File Reference

Header file the Lilon class.

#include "Storage.h"
Include dependency graph for Lilon.h:



This graph shows which files directly or indirectly include this file:

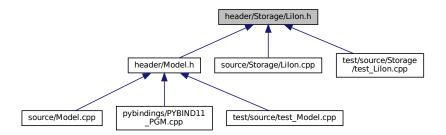

Classes

· class Lilon

A derived class of Storage which models energy storage by way of lithium-ion batteries.


5.14.1 Detailed Description

Header file the Lilon class.


5.15 header/Storage/Storage.h File Reference

Header file the Storage class.

```
#include "../std_includes.h"
#include "../../third_party/fast-cpp-csv-parser/csv.h"
Include dependency graph for Storage.h:
```



This graph shows which files directly or indirectly include this file:

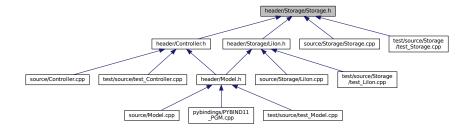

Classes

• class Storage

The base class of the Storage hierarchy. This hierarchy contains derived classes which model the storage of energy.

5.15.1 Detailed Description


Header file the Storage class.

5.16 pybindings/PYBIND11_PGM.cpp File Reference

Python 3 bindings file for PGMcpp.

```
#include <pybind11/pybind11.h>
#include <pybind11/stl.h>
```

#include "../header/Model.h"
Include dependency graph for PYBIND11_PGM.cpp:

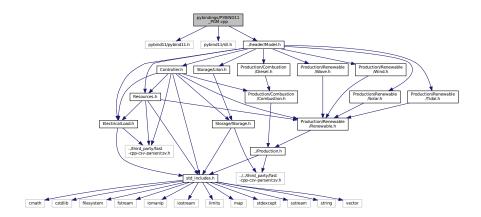

Functions

• PYBIND11_MODULE (PGMcpp, m)

5.16.1 Detailed Description

Python 3 bindings file for PGMcpp.

This is a file which defines the Python 3 bindings to be generated for PGMcpp. To generate bindings, use the provided setup.py.

ref: https://pybindll.readthedocs.io/en/stable/

5.16.2 Function Documentation

5.16.2.1 PYBIND11_MODULE()


```
PYBIND11_MODULE (
            PGMcpp ,
            m )
30
31
       ----- Controller ----- //
33 /*
34 pybindl1::class_<Controller>(m, "Controller")
35
      .def(pybind11::init());
36 */
  // ====== END Controller ====== //
38
39
40
41 // =
          ----- ElectricalLoad ----- //
43 pybind11::class_<ElectricalLoad>(m, "ElectricalLoad")
      .def_readwrite("n_points", &ElectricalLoad::n_points)
```

```
.def_readwrite("max_load_kW", &ElectricalLoad::max_load_kW)
.def_readwrite("mean_load_kW", &ElectricalLoad::mean_load_kW)
.def_readwrite("min_load_kW", &ElectricalLoad::min_load_kW)
.def_readwrite("dt_vec_hrs", &ElectricalLoad::dt_vec_hrs)
.def_readwrite("load_vec_kW", &ElectricalLoad::load_vec_kW)
.def_readwrite("time_vec_hrs", &ElectricalLoad::time_vec_hrs)
45
46
47
48
49
50
51
         .def(pybindl1::init<std::string>());
53 */
           ======= END ElectricalLoad ======== //
54
55
56
           ----- Model ----- //
59
60 pybind11::class_<Model>(m, "Model")
         .def(
61
             pybind11::init<</pre>
62
63
                    ElectricalLoad*,
                    RenewableResources*
66
67 */
              ----- END Model ----- //
68 // =
69
70
72 // =
         ======= RenewableResources ======== //
74 pybind11::class_<RenewableResources>(m, "RenewableResources")
         .def(pybind11::init());
75
76
77
         .def(pybind11::init<>());
78
79 */
80 // ====== END RenewableResources ====== //
         /* PYBIND11_MODULE() */
```

5.17 source/Controller.cpp File Reference

Implementation file for the Controller class.

#include "../header/Controller.h"
Include dependency graph for Controller.cpp:

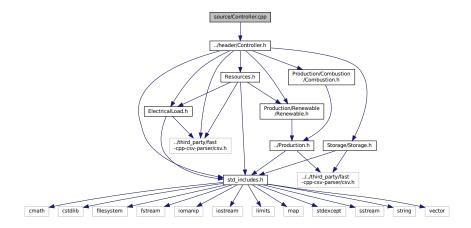

5.17.1 Detailed Description


Implementation file for the Controller class.

A class which contains a various dispatch control logic. Intended to serve as a component class of Controller.

5.18 source/ElectricalLoad.cpp File Reference

Implementation file for the ElectricalLoad class.

#include "../header/ElectricalLoad.h"
Include dependency graph for ElectricalLoad.cpp:



5.18.1 Detailed Description


Implementation file for the ElectricalLoad class.

A class which contains time and electrical load data. Intended to serve as a component class of Model.

5.19 source/Model.cpp File Reference

Implementation file for the Model class.

#include "../header/Model.h"
Include dependency graph for Model.cpp:

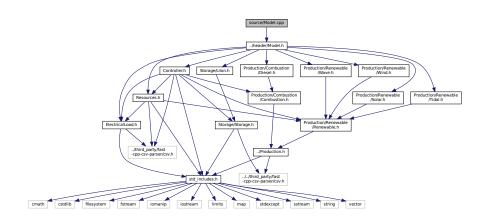

5.19.1 Detailed Description


Implementation file for the Model class.

A container class which forms the centre of PGMcpp. The Model class is intended to serve as the primary user interface with the functionality of PGMcpp, and as such it contains all other classes.

5.20 source/Production/Combustion/Combustion.cpp File Reference

Implementation file for the Combustion class.

#include "../../header/Production/Combustion/Combustion.h"
Include dependency graph for Combustion.cpp:

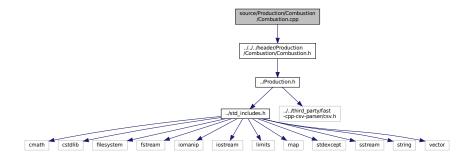

5.20.1 Detailed Description


Implementation file for the Combustion class.

The root of the Combustion branch of the Production hierarchy. This branch contains derived classes which model the production of energy by way of combustibles.

5.21 source/Production/Combustion/Diesel.cpp File Reference

Implementation file for the Diesel class.

#include "../../header/Production/Combustion/Diesel.h"
Include dependency graph for Diesel.cpp:

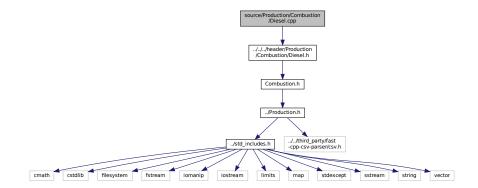

5.21.1 Detailed Description


Implementation file for the Diesel class.

A derived class of the Combustion branch of Production which models production using a diesel generator.

5.22 source/Production/Production.cpp File Reference

Implementation file for the Production class.

#include "../../header/Production/Production.h"
Include dependency graph for Production.cpp:

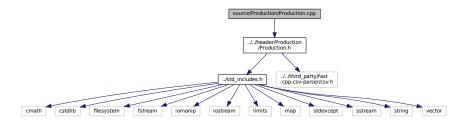


5.22.1 Detailed Description

Implementation file for the Production class.

The base class of the Production hierarchy. This hierarchy contains derived classes which model the production of energy, be it renewable or otherwise.

5.23 source/Production/Renewable/Renewable.cpp File Reference

Implementation file for the Renewable class.

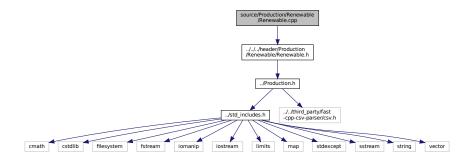

5.23.1 Detailed Description


Implementation file for the Renewable class.

The root of the Renewable branch of the Production hierarchy. This branch contains derived classes which model the renewable production of energy.

5.24 source/Production/Renewable/Solar.cpp File Reference

Implementation file for the Solar class.

#include "../../header/Production/Renewable/Solar.h"
Include dependency graph for Solar.cpp:

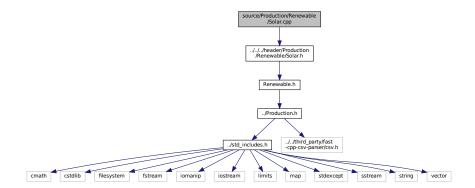

5.24.1 Detailed Description


Implementation file for the Solar class.

A derived class of the Renewable branch of Production which models solar production.

5.25 source/Production/Renewable/Tidal.cpp File Reference

Implementation file for the Tidal class.

#include "../../header/Production/Renewable/Tidal.h"
Include dependency graph for Tidal.cpp:

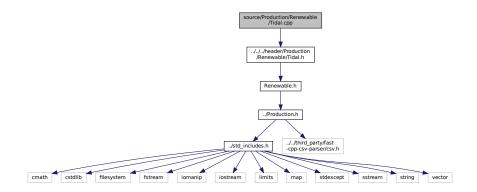

5.25.1 Detailed Description


Implementation file for the Tidal class.

A derived class of the Renewable branch of Production which models tidal production.

5.26 source/Production/Renewable/Wave.cpp File Reference

Implementation file for the Wave class.

#include "../../header/Production/Renewable/Wave.h"
Include dependency graph for Wave.cpp:

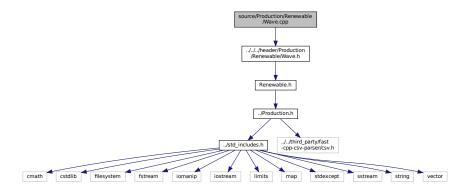

5.26.1 Detailed Description


Implementation file for the Wave class.

A derived class of the Renewable branch of Production which models wave production.

5.27 source/Production/Renewable/Wind.cpp File Reference

Implementation file for the Wind class.

#include "../../header/Production/Renewable/Wind.h"
Include dependency graph for Wind.cpp:

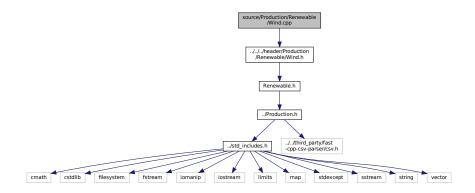

5.27.1 Detailed Description


Implementation file for the Wind class.

A derived class of the Renewable branch of Production which models wind production.

5.28 source/Resources.cpp File Reference

Implementation file for the Resources class.

#include "../header/Resources.h"
Include dependency graph for Resources.cpp:

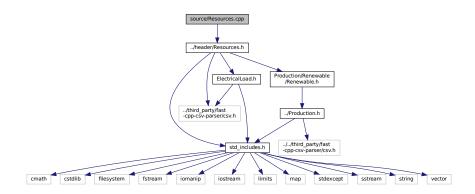

5.28.1 Detailed Description


Implementation file for the Resources class.

A class which contains renewable resource data. Intended to serve as a component class of Model.

5.29 source/Storage/Lilon.cpp File Reference

Implementation file for the Lilon class.

#include "../../header/Storage/LiIon.h"
Include dependency graph for Lilon.cpp:

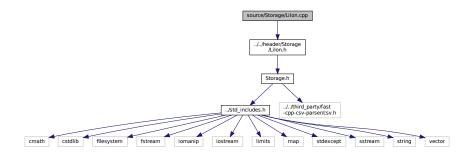

5.29.1 Detailed Description


Implementation file for the Lilon class.

A derived class of Storage which models energy storage by way of lithium-ion batteries.

5.30 source/Storage/Storage.cpp File Reference

Implementation file for the Storage class.

```
#include "../../header/Storage/Storage.h"
Include dependency graph for Storage.cpp:
```

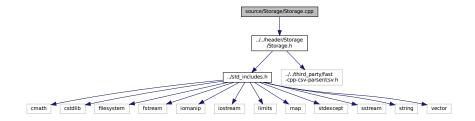

5.30.1 Detailed Description


Implementation file for the Storage class.

The base class of the Storage hierarchy. This hierarchy contains derived classes which model the storage of energy.

5.31 test/source/Production/Combustion/test_Combustion.cpp File Reference

Testing suite for Combustion class.

```
#include "../../../utils/testing_utils.h"
#include "../../../header/Production/Combustion/Combustion.h"
Include dependency graph for test_Combustion.cpp:
```

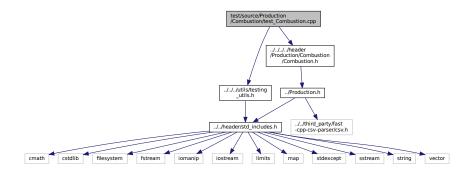

Functions

• int main (int argc, char **argv)

5.31.1 Detailed Description

Testing suite for Combustion class.

A suite of tests for the Combustion class.

5.31.2 Function Documentation

5.31.2.1 main()

```
int main (
            int argc,
            char ** argv )
     #ifdef _WIN32
         activateVirtualTerminal();
29
    #endif /* _WIN32 */
30
31
    printGold("\tTesting Production <-- Combustion");</pre>
     srand(time(NULL));
35
36
37 try {
38
39 // ----- CONSTRUCTION -----//
40
41 CombustionInputs combustion_inputs;
43 Combustion test_combustion(8760, combustion_inputs);
44
45 // ====== END CONSTRUCTION =========
48
49 // ====== ATTRIBUTES ========= //
50
     not combustion_inputs.production_inputs.print_flag,
     __LINE_
54
55);
56
57 testFloatEquals(
      test_combustion.fuel_consumption_vec_L.size(),
59
      8760,
60
     ___FILE___,
      __LINE__
61
62);
63
64 testFloatEquals(
      test_combustion.fuel_cost_vec.size(),
66
      8760,
     ___FILE___,
67
      __LINE_
68
69);
71 testFloatEquals(
      test_combustion.CO2_emissions_vec_kg.size(),
73
      8760,
74
      ___FILE_
75
      __LINE_
76);
```


```
78 testFloatEquals(
     test_combustion.CO_emissions_vec_kg.size(),
80
      8760,
81
      ___FILE_
      __LINE_
82
83);
85 testFloatEquals(
       test_combustion.NOx_emissions_vec_kg.size(),
87
       8760,
      ___FILE_
88
      __LINE__
89
90);
92 testFloatEquals(
       {\tt test\_combustion.SOx\_emissions\_vec\_kg.size(),}
94
       8760.
      ___FILE_
95
      __LINE__
96
97);
98
99 testFloatEquals(
100
       test_combustion.CH4_emissions_vec_kg.size(),
       8760.
101
       ___FILE_
102
103
       __LINE__
104);
105
106 testFloatEquals(
107
       test_combustion.PM_emissions_vec_kg.size(),
108
       8760.
109
       __FILE_
110
111 );
112
113 // ----- END ATTRIBUTES ----- //
114
115 } /* try */
116
117
118 catch (...) {
119
120
       printGold(" ..... ");
121
       printRed("FAIL");
122
123
       std::cout « std::endl;
124
125 }
126
127
128 printGold(" .....");
129 printGreen("PASS");
130 std::cout « std::endl;
131 return 0;
132
133 } /* main() */
```

5.32 test/source/Production/Combustion/test_Diesel.cpp File Reference

Testing suite for Diesel class.

```
#include "../../utils/testing_utils.h"
#include "../../../header/Production/Combustion/Diesel.h"
```

Include dependency graph for test_Diesel.cpp:

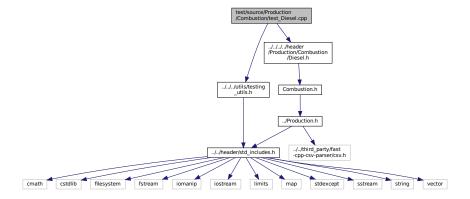

Functions

• int main (int argc, char **argv)

5.32.1 Detailed Description

Testing suite for Diesel class.

A suite of tests for the Diesel class.

5.32.2 Function Documentation

5.32.2.1 main()

```
int main (
             int argc,
             char ** argv )
27 {
28
      #ifdef _WIN32
         activateVirtualTerminal();
30
      #endif /* _WIN32 */
31
      printGold("\tTesting Production <-- Combustion <-- Diesel");</pre>
32
33
34
      srand(time(NULL));
35
37
      Combustion* test_diesel_ptr;
38
39 try {
40
41 // ----- CONSTRUCTION -----//
43 bool error_flag = true;
44
45 try
      DieselInputs bad_diesel_inputs;
46
47
      bad_diesel_inputs.fuel_cost_L = -1;
```

```
49
      Diesel bad_diesel(8760, bad_diesel_inputs);
50
51
       error_flag = false;
52 } catch (...) {
53    // Task failed successfully! =P
54 }
55 if (not error_flag) {
      expectedErrorNotDetected(__FILE__, __LINE__);
57 }
58
59 DieselInputs diesel_inputs;
60
61 test_diesel_ptr = new Diesel(8760, diesel_inputs);
63
64 // ====== END CONSTRUCTION ========
65
66
68 // ----- ATTRIBUTES ----- //
70 testTruth(
71
      not diesel_inputs.combustion_inputs.production_inputs.print_flag,
      ___FILE___,
72
73
       __LINE_
74);
75
76 testFloatEquals(
77
      test_diesel_ptr->type,
78
      CombustionType :: DIESEL,
      __FILE__,
79
80
      __LINE__
81 );
82
83 testTruth(
      test_diesel_ptr->type_str == "DIESEL",
84
       ___FILE___,
85
86
87);
88
89 testFloatEquals(
    test_diesel_ptr->linear_fuel_slope_LkWh,
90
91
      0.265675,
      __FILE__
92
      __LINE_
93
94);
95
96 testFloatEquals(
      test_diesel_ptr->linear_fuel_intercept_LkWh,
97
98
      0.026676,
      __FILE__,
99
100
101 );
102
103 testFloatEquals(
104
       test_diesel_ptr->capital_cost,
105
        94125.375446,
       __FILE__,
106
       __LINE__
107
108);
109
110 testFloatEquals(
111
        test_diesel_ptr->operation_maintenance_cost_kWh,
112
        0.069905,
       __FILE__,
113
        __LINE__
114
115 );
116
117 testFloatEquals(
118
        ((Diesel*)test_diesel_ptr)->minimum_load_ratio,
119
       ___FILE___,
120
        __LINE__
121
122 );
123
124 testFloatEquals(
125
        ((Diesel*)test_diesel_ptr)->minimum_runtime_hrs,
126
        ___FILE___,
127
128
        __LINE__
129);
130
131 testFloatEquals(
132
        test_diesel_ptr->replace_running_hrs,
133
        30000,
        ___FILE_
134
135
        __LINE
```

```
136);
138 // ====== END ATTRIBUTES ======== //
139
140
141
142 // ====== METHODS ======== //
143
144 // test capacity constraint
145 testFloatEquals(
        test_diesel_ptr->requestProductionkW(0, 1, 2 * test_diesel_ptr->capacity_kW),
146
        test_diesel_ptr->capacity_kW,
147
        ___FILE___,
148
149
150);
151
152 // test minimum load ratio constraint
153 testFloatEquals(
154
        test_diesel_ptr->requestProductionkW(
155
            Ο,
156
157
            0.5 * ((Diesel*)test_diesel_ptr)->minimum_load_ratio *
158
                test_diesel_ptr->capacity_kW
159
160
        ((Diesel*)test_diesel_ptr)->minimum_load_ratio * test_diesel_ptr->capacity_kW,
161
        ___FILE___,
162
        __LINE__
163);
164
165 // test commit()
166 std::vector<double> dt vec hrs (48, 1);
167
168 std::vector<double> load_vec_kW = {
169
       1, 1, 0, 1, 0, 0, 1, 1, 1, 0, 1, 1,
170
        1, 1, 1, 0, 0, 0, 0, 0, 0, 1, 1, 0,
171
        1, 1, 1, 1, 1, 0, 1, 1, 1, 1, 0, 1,
        1, 0, 0, 0, 1, 1, 1, 0, 1, 1, 0, 0
172
173 };
174
175 std::vector<bool> expected_is_running_vec = {
        1, 1, 1, 1, 0, 0, 1, 1, 1, 1, 1, 1,
1, 1, 1, 0, 0, 0, 0, 0, 0, 1, 1, 1,
176
177
        1, 1, 1, 1, 1, 0, 1, 1, 1, 1, 0, 1, 1, 1, 1, 1, 1, 0, 0
178
179
180 };
181
182 double load_kW = 0;
183 double production_kW = 0;
184 double roll = 0:
185
186 for (int i = 0; i < 48; i++) {
187
        roll = (double)rand() / RAND_MAX;
188
189
        if (roll >= 0.95) {
    roll = 1.25;
190
        }
191
192
193
        load_vec_kW[i] *= roll * test_diesel_ptr->capacity_kW;
194
        load_kW = load_vec_kW[i];
195
196
        production_kW = test_diesel_ptr->requestProductionkW(
197
198
            dt_vec_hrs[i],
199
            load_kW
200
        );
201
202
        load_kW = test_diesel_ptr->commit(
203
            i.
204
            dt_vec_hrs[i],
205
            production_kW,
206
            load_kW
207
208
        // load_kW <= load_vec_kW (i.e., after vs before)</pre>
209
        testLessThanOrEqualTo(
210
211
            load_kW,
212
            load_vec_kW[i],
213
            ___FILE___,
214
            __LINE__
215
        ):
216
217
        // production = dispatch + storage + curtailment
218
        testFloatEquals(
219
            test_diesel_ptr->production_vec_kW[i] -
220
            test_diesel_ptr->dispatch_vec_kW[i] -
            test_diesel_ptr->storage_vec_kW[i] -
test_diesel_ptr->curtailment_vec_kW[i],
221
222
```

```
223
             Ο,
            __FILE__,
224
225
             __LINE__
226
        );
2.2.7
228
        // capacity constraint
        if (load_vec_kW[i] > test_diesel_ptr->capacity_kW) {
229
230
             testFloatEquals(
231
                 test_diesel_ptr->production_vec_kW[i],
232
                 test_diesel_ptr->capacity_kW,
233
                 ___FILE___,
234
                 __LINE
235
            );
236
237
238
        // minimum load ratio constraint
239
        else if (
            test_diesel_ptr->is_running and
240
             test_diesel_ptr->production_vec_kW[i] > 0 and
241
242
             load_vec_kW[i] <</pre>
243
             ((Diesel*)test_diesel_ptr)->minimum_load_ratio * test_diesel_ptr->capacity_kW
244
2.45
             testFloatEquals(
                 test_diesel_ptr->production_vec_kW[i],
((Diesel*)test_diesel_ptr)->minimum_load_ratio *
246
247
248
                     test_diesel_ptr->capacity_kW,
                 ___FILE___,
249
250
                 __LINE__
2.51
            );
252
        }
253
254
         // minimum runtime constraint
255
        testFloatEquals(
256
             test_diesel_ptr->is_running_vec[i],
2.57
             expected_is_running_vec[i],
258
            ___FILE___,
             __LINE__
259
260
        );
261
262
         // O&M, fuel consumption, and emissions > 0 whenever diesel is running
263
        if (test_diesel_ptr->is_running) {
2.64
             testGreaterThan(
                 test_diesel_ptr->operation_maintenance_cost_vec[i],
265
266
                 Ο,
                 ___FILE___,
267
268
                 __LINE__
269
            );
270
271
            testGreaterThan(
272
                 test_diesel_ptr->fuel_consumption_vec_L[i],
273
274
                 __FILE__,
275
                 __LINE__
276
            );
277
278
             testGreaterThan(
279
                 test_diesel_ptr->fuel_cost_vec[i],
280
281
                 ___FILE___,
282
                 __LINE__
283
            );
284
285
            testGreaterThan(
286
                 test_diesel_ptr->CO2_emissions_vec_kg[i],
287
                 Ο,
                 ___FILE___,
288
289
                 __LINE__
290
            );
291
             testGreaterThan(
293
                 test_diesel_ptr->CO_emissions_vec_kg[i],
294
                 Ο,
                 ___FILE___,
295
296
                 __LINE__
297
            );
298
299
             testGreaterThan(
300
                 test_diesel_ptr->NOx_emissions_vec_kg[i],
                 0,
__FILE_
301
302
303
                 __LINE__
304
            );
305
306
             testGreaterThan(
307
                 test_diesel_ptr->S0x_emissions_vec_kg[i],
308
                 Ο,
                 __FILE__,
309
```


```
310
                __LINE__
311
312
313
            testGreaterThan(
314
                test_diesel_ptr->CH4_emissions_vec_kg[i],
315
                0.
316
317
                __LINE__
318
            );
319
320
            testGreaterThan(
321
                test_diesel_ptr->PM_emissions_vec_kg[i],
322
                0,
                ___FILE___,
323
324
                __LINE__
325
            );
326
327
328
        // O&M, fuel consumption, and emissions = 0 whenever diesel is not running
329
330
            testFloatEquals(
331
                test_diesel_ptr->operation_maintenance_cost_vec[i],
332
                Ο,
                ___FILE___,
333
334
                 __LINE_
335
            );
336
337
            testFloatEquals(
338
                test_diesel_ptr->fuel_consumption_vec_L[i],
339
                Ο,
                __FILE__,
340
341
                 __LINE_
342
343
344
            testFloatEquals(
                test_diesel_ptr->fuel_cost_vec[i],
345
346
                0,
                ___FILE___,
347
348
                 __LINE__
349
            );
350
            testFloatEquals(
351
                test_diesel_ptr->CO2_emissions_vec_kg[i],
352
353
                Ο,
                ___FILE___,
354
355
                __LINE__
356
            );
357
            testFloatEquals(
358
359
                test_diesel_ptr->CO_emissions_vec_kg[i],
360
                Ο,
361
                __FILE__,
362
                __LINE__
363
            );
364
            testFloatEquals(
365
366
                test_diesel_ptr->NOx_emissions_vec_kg[i],
367
368
                ___FILE___,
369
                __LINE__
370
            );
371
372
            testFloatEquals(
373
                test_diesel_ptr->SOx_emissions_vec_kg[i],
374
                Ο,
                __FILE__,
375
376
                 __LINE__
377
            );
378
379
            testFloatEquals(
380
                test_diesel_ptr->CH4_emissions_vec_kg[i],
381
                Ο,
                ___FILE___,
382
383
                __LINE__
384
            );
385
386
            testFloatEquals(
387
                test_diesel_ptr->PM_emissions_vec_kg[i],
                0,
__FILE__,
388
389
390
                 __LINE__
391
            );
392
393 }
394
395 // ====== END METHODS =======
                                                        -----/
396
```

```
397 }
        /* try */
398
399
400 catch (...) {
401
        delete test_diesel_ptr;
402
        printGold(" ... ");
printRed("FAIL");
403
404
405
         std::cout « std::endl;
406
407 }
408
409
410 delete test_diesel_ptr;
411
412 printGold(" ... ");
413 printGreen("PASS");
414 std::cout « std::endl;
415 return 0;
417 } /* main() */
```

5.33 test/source/Production/Renewable/test_Renewable.cpp File Reference

Testing suite for Renewable class.

```
#include "../../utils/testing_utils.h"
#include "../../../header/Production/Renewable/Renewable.h"
Include dependency graph for test Renewable.cpp:
```

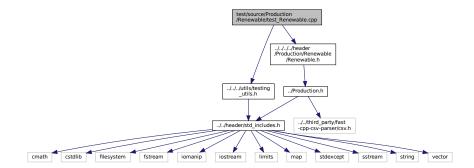

Functions

• int main (int argc, char **argv)

5.33.1 Detailed Description

Testing suite for Renewable class.

A suite of tests for the Renewable class.

5.33.2 Function Documentation

5.33.2.1 main()


```
int main (
           int argc,
           char ** argv )
27 {
     #ifdef _WIN32
2.8
        activateVirtualTerminal();
29
    #endif /* _WIN32 */
30
31
    printGold("\tTesting Production <-- Renewable");</pre>
33
34
    srand(time(NULL));
35
36
37 try {
39 // ----- CONSTRUCTION -----//
40
41 RenewableInputs renewable_inputs;
43 Renewable test_renewable(8760, renewable_inputs);
45 // ====== END CONSTRUCTION =========== //
46
47
48
49 // ====== ATTRIBUTES ========== //
    not renewable_inputs.production_inputs.print_flag,
53
     ___FILE___,
54
     __LINE_
55);
57 // ====== END ATTRIBUTES =========== //
59 } /* try */
60
61
62 catch (...) {
    //...
    printGold(" .... ");
printRed("FAIL");
65
66
    std::cout « std::endl;
67
68
     throw;
69 }
70
72 printGold(" .....");
73 printGreen("PASS");
74 std::cout « std::endl;
75 return 0;
76 } /* main() */
```

5.34 test/source/Production/Renewable/test_Solar.cpp File Reference

Testing suite for Solar class.

```
#include "../../utils/testing_utils.h"
#include "../../../header/Production/Renewable/Solar.h"
```

Include dependency graph for test_Solar.cpp:

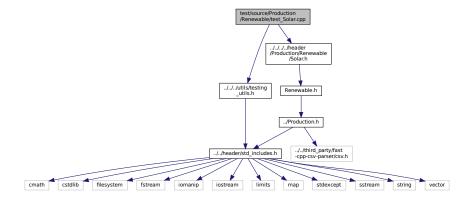

Functions

• int main (int argc, char **argv)

5.34.1 Detailed Description

Testing suite for Solar class.

A suite of tests for the Solar class.

5.34.2 Function Documentation

5.34.2.1 main()

```
int main (
             int argc,
             char ** argv )
27 {
28
      #ifdef _WIN32
         activateVirtualTerminal();
30
      #endif /* _WIN32 */
31
32
33
      printGold("\tTesting Production <-- Renewable <-- Solar");</pre>
34
      srand(time(NULL));
35
      Renewable* test_solar_ptr;
37
38 try {
39
40 // ----- CONSTRUCTION -----//
42 bool error_flag = true;
43
44 try {
      SolarInputs bad_solar_inputs;
4.5
46
      bad_solar_inputs.derating = -1;
47
48
      Solar bad_solar(8760, bad_solar_inputs);
```

```
49
       error_flag = false;
51 } catch (...)
     // Task failed successfully! =P
52
53 }
54 if (not error flag) {
      expectedErrorNotDetected(__FILE__, __LINE__);
55
56 }
57
58 SolarInputs solar_inputs;
59
60 test_solar_ptr = new Solar(8760, solar_inputs);
62 // ----- END CONSTRUCTION -----//
63
64
65
66 // ====== ATTRIBUTES =========
68 testTruth(
69
      not solar_inputs.renewable_inputs.production_inputs.print_flag,
      __FILE__,
70
      __LINE_
71
72 );
73
74 testFloatEquals(
75
       test_solar_ptr->type,
76
      RenewableType :: SOLAR,
      ___FILE___,
77
78
      __LINE__
79);
80
81 testTruth(
82
     test_solar_ptr->type_str == "SOLAR",
83
      ___FILE___,
84
      __LINE_
85);
86
87 testFloatEquals(
88
     test_solar_ptr->capital_cost,
89
      350118.723363,
90
      ___FILE___,
      __LINE__
91
92);
94 testFloatEquals(
95
     test_solar_ptr->operation_maintenance_cost_kWh,
96
      0.01,
      ___FILE_
97
       __LINE_
98
99);
100
101 // ====== END ATTRIBUTES ======
102
103
104
105 // ----- METHODS ----- //
106
107 // test production constraints
108 testFloatEquals(
       test_solar_ptr->computeProductionkW(0, 1, 2),
109
110
       100,
       __FILE__,
111
112
        __LINE__
113);
114
115 testFloatEquals(
       test_solar_ptr->computeProductionkW(0, 1, -1),
116
117
        0.
        __FILE__,
118
119
        __LINE__
120 );
121
122 // test commit()
123 std::vector<double> dt_vec_hrs (48, 1);
124
125 std::vector<double> load_vec_kW = {
    1, 1, 0, 1, 0, 0, 1, 1, 1, 0, 1, 1, 1, 1, 1, 1, 1, 0, 0, 0, 0, 0, 0, 1, 1, 0,
126
127
       1, 1, 1, 1, 1, 0, 1, 1, 1, 1, 0, 1, 1, 0, 0, 1, 1, 0, 0, 1, 1, 1, 0, 1, 1, 0, 0
128
129
130 };
131
132 double load_kW = 0;
133 double production_kW = 0;
134 double roll = 0;
135 double solar_resource_kWm2 = 0;
```

```
136
137 for (int i = 0; i < 48; i++) {
        roll = (double)rand() / RAND_MAX;
138
139
        solar_resource_kWm2 = roll;
140
141
142
        roll = (double)rand() / RAND_MAX;
143
144
        if (roll <= 0.1) {</pre>
145
            solar_resource_kWm2 = 0;
146
147
148
        else if (roll >= 0.95) {
149
            solar_resource_kWm2 = 1.25;
150
151
        roll = (double)rand() / RAND_MAX;
152
153
        if (roll >= 0.95) {
154
155
            roll = 1.25;
156
157
        load_vec_kW[i] *= roll * test_solar_ptr->capacity_kW;
158
        load_kW = load_vec_kW[i];
159
160
161
        production_kW = test_solar_ptr->computeProductionkW(
162
163
            dt_vec_hrs[i],
164
            solar_resource_kWm2
165
        );
166
167
        load_kW = test_solar_ptr->commit(
168
169
            dt_vec_hrs[i],
170
            production_kW,
171
            load_kW
172
        );
173
174
        // is running (or not) as expected
175
        if (solar_resource_kWm2 > 0) {
176
            testTruth(
177
                test_solar_ptr->is_running,
178
                ___FILE___,
179
                 __LINE_
180
            );
181
        }
182
183
        else {
            testTruth(
184
185
                not test_solar_ptr->is_running,
186
                __FILE__,
187
                __LINE__
188
            );
189
       }
190
        // load_kW <= load_vec_kW (i.e., after vs before)</pre>
191
192
        testLessThanOrEqualTo(
193
194
            load_vec_kW[i],
195
            ___FILE___,
            __LINE_
196
197
        );
198
199
        // production = dispatch + storage + curtailment
200
        testFloatEquals(
201
            test_solar_ptr->production_vec_kW[i] -
202
            test_solar_ptr->dispatch_vec_kW[i] -
            test_solar_ptr->storage_vec_kW[i]
203
204
            test_solar_ptr->curtailment_vec_kW[i],
205
            Ο,
            __FILE__,
206
207
            __LINE__
208
       );
209
210
        // capacity constraint
211
        if (solar_resource_kWm2 > 1) {
212
            testFloatEquals(
213
                test_solar_ptr->production_vec_kW[i],
214
                test_solar_ptr->capacity_kW,
                ___FILE___,
215
216
                 __LINE__
217
            );
218
219
220
        // resource, O\&M > 0 whenever solar is running (i.e., producing)
221
        if (test_solar_ptr->is_running) {
222
            testGreaterThan(
```


```
solar_resource_kWm2,
                0,
__FILE__,
224
225
226
                __LINE__
2.2.7
           );
228
            testGreaterThan(
230
                test_solar_ptr->operation_maintenance_cost_vec[i],
231
                ___FILE___,
232
233
                __LINE__
234
           );
235
       }
236
237
        // resource, O\&M = 0 whenever solar is not running (i.e., not producing)
238
            testFloatEquals(
239
240
                solar_resource_kWm2,
241
                ___FILE___,
243
244
           );
245
            testFloatEquals(
246
247
                test_solar_ptr->operation_maintenance_cost_vec[i],
                ___FILE___,
249
250
                __LINE__
251
           );
        }
252
253 }
254
255
256 // ====== END METHODS ======= //
257
258 } /* try */
259
260
261 catch (...) {
      delete test_solar_ptr;
263
       printGold(" .... ");
printRed("FAIL");
2.64
265
266
        std::cout « std::endl;
267
       throw;
268 }
269
270
271 delete test_solar_ptr;
272
273 printGold(" .... ");
274 printGreen("PASS");
275 std::cout « std::endl;
276 return 0;
277 } /* main() */
```

5.35 test/source/Production/Renewable/test Tidal.cpp File Reference

Testing suite for Tidal class.

```
#include "../../utils/testing_utils.h"
#include "../../../header/Production/Renewable/Tidal.h"
```

Include dependency graph for test_Tidal.cpp:

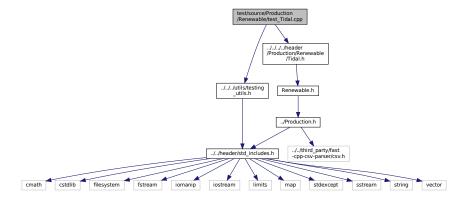

Functions

• int main (int argc, char **argv)

5.35.1 Detailed Description

Testing suite for Tidal class.

A suite of tests for the Tidal class.

5.35.2 Function Documentation

5.35.2.1 main()

```
int main (
             int argc,
             char ** argv )
27 {
28
      #ifdef _WIN32
         activateVirtualTerminal();
30
      #endif /* _WIN32 */
31
32
33
      printGold("\tTesting Production <-- Renewable <-- Tidal");</pre>
34
      srand(time(NULL));
35
      Renewable* test_tidal_ptr;
37
38 try {
39
40 // ----- CONSTRUCTION -----//
42 bool error_flag = true;
43
44 try {
      TidalInputs bad_tidal_inputs;
4.5
46
      bad_tidal_inputs.design_speed_ms = -1;
47
48
      Tidal bad_tidal(8760, bad_tidal_inputs);
```

```
49
      error_flag = false;
51 } catch (...)
     // Task failed successfully! =P
52
53 }
54 if (not error flag) {
      expectedErrorNotDetected(__FILE__, __LINE__);
55
56 }
57
58 TidalInputs tidal_inputs;
59
60 test_tidal_ptr = new Tidal(8760, tidal_inputs);
62 // ----- END CONSTRUCTION -----//
63
64
65
66 // ====== ATTRIBUTES =========
68 testTruth(
69
      not tidal_inputs.renewable_inputs.production_inputs.print_flag,
      __FILE__,
70
      __LINE_
71
72);
73
74 testFloatEquals(
75
      test_tidal_ptr->type,
76
      RenewableType :: TIDAL,
      ___FILE___,
77
      __LINE__
78
79);
80
81 testTruth(
82
     test_tidal_ptr->type_str == "TIDAL",
83
      ___FILE___,
84
      __LINE_
85);
86
87 testFloatEquals(
88
      test_tidal_ptr->capital_cost,
89
      500237.446725,
      __FILE___,
90
      __LINE_
91
92);
94 testFloatEquals(
95
     test_tidal_ptr->operation_maintenance_cost_kWh,
96
      0.069905,
      __FILE___
97
98
      __LINE_
99);
100
101 // ====== END ATTRIBUTES ======
102
103
104
105 // ----- METHODS ----- //
106
107 // test production constraints
108 testFloatEquals(
       test_tidal_ptr->computeProductionkW(0, 1, 1e6),
109
110
       0,
       __FILE__,
111
112
       __LINE__
113 );
114
115 testFloatEquals(
       test_tidal_ptr->computeProductionkW(
116
117
           0.
118
119
           ((Tidal*)test_tidal_ptr)->design_speed_ms
120
121
       test_tidal_ptr->capacity_kW,
122
       ___FILE___,
       __LINE__
123
124);
125
126 testFloatEquals(
127
       test_tidal_ptr->computeProductionkW(0, 1, -1),
       Ο,
128
       __FILE_
129
       __LINE__
130
131 );
132
133 // test commit()
134 std::vector<double> dt_vec_hrs (48, 1);
135
```


```
136 std::vector<double> load_vec_kW =
      1, 1, 0, 1, 0, 0, 1, 1, 1, 0, 1, 1, 1, 1, 1, 1, 0, 0, 0, 0, 0, 0, 1, 1, 0,
137
138
139
        1, 1, 1, 1, 1, 0, 1, 1, 1, 1, 0, 1,
140
        1, 0, 0, 0, 1, 1, 1, 0, 1, 1, 0, 0
141 };
142
143 double load_kW = 0;
144 double production_kW = 0;
145 double roll = 0;
146 double tidal_resource_ms = 0;
147
148 for (int i = 0; i < 48; i++) {
149
        roll = (double)rand() / RAND_MAX;
150
151
        tidal_resource_ms = roll * ((Tidal*)test_tidal_ptr)->design_speed_ms;
152
153
        roll = (double) rand() / RAND MAX;
154
155
        if (roll <= 0.1) {</pre>
156
            tidal_resource_ms = 0;
157
158
        else if (roll >= 0.95) {
159
160
            tidal_resource_ms = 3 * ((Tidal*)test_tidal_ptr)->design_speed_ms;
161
162
163
        roll = (double)rand() / RAND_MAX;
164
165
        if (roll >= 0.95) {
166
            roll = 1.25;
167
168
169
        load_vec_kW[i] *= roll * test_tidal_ptr->capacity_kW;
170
        load_kW = load_vec_kW[i];
171
172
        production_kW = test_tidal_ptr->computeProductionkW(
173
174
             dt_vec_hrs[i],
175
            tidal_resource_ms
176
        );
177
        load_kW = test_tidal_ptr->commit(
178
179
180
             dt_vec_hrs[i],
181
            production_kW,
182
             load_kW
183
        );
184
185
        // is running (or not) as expected
186
        if (production_kW > 0) {
187
             testTruth(
188
                test_tidal_ptr->is_running,
189
                 ___FILE___,
                 __LINE_
190
191
            );
192
        }
193
194
        else {
195
            testTruth(
                not test_tidal_ptr->is_running,
196
197
                 ___FILE___,
198
                 __LINE__
199
200
201
        // load_kW <= load_vec_kW (i.e., after vs before)
202
        testLessThanOrEqualTo(
203
204
             load_kW,
             load_vec_kW[i],
205
206
            ___FILE___,
207
             __LINE__
208
        );
209
        // production = dispatch + storage + curtailment
210
211
        testFloatEquals(
212
            test_tidal_ptr->production_vec_kW[i] -
213
             test_tidal_ptr->dispatch_vec_kW[i] -
214
             test_tidal_ptr->storage_vec_kW[i]
215
            test_tidal_ptr->curtailment_vec_kW[i],
216
            Ο,
            __FILE__,
217
218
             __LINE__
219
        );
220
        // resource, O\&M > 0 whenever tidal is running (i.e., producing)
221
222
        if (test_tidal_ptr->is_running) {
```

```
testGreaterThan(
224
                tidal_resource_ms,
225
                Ο,
                ___FILE_
226
2.2.7
                 __LINE__
228
            );
230
231
                test_tidal_ptr->operation_maintenance_cost_vec[i],
                0,
__FILE__,
232
233
234
                 __LINE_
235
            );
236
237
238
        // O\&M = 0 whenever tidal is not running (i.e., not producing)
239
            testFloatEquals(
240
241
                test_tidal_ptr->operation_maintenance_cost_vec[i],
242
                ___FILE___,
243
244
                __LINE__
2.45
            );
246
247 }
248
249
250 // ====== END METHODS ======= //
2.51
252 }
      /* try */
253
254
255 catch (...) {
256
        delete test_tidal_ptr;
2.57
        printGold(" .... ");
printRed("FAIL");
258
259
260
        std::cout « std::endl;
261
262 }
263
2.64
265 delete test_tidal_ptr;
266
267 printGold(" .... ");
268 printGreen("PASS");
269 std::cout « std::endl;
270 return 0;
271 } /* mai
       /* main() */
```

5.36 test/source/Production/Renewable/test Wave.cpp File Reference

Testing suite for Wave class.

```
#include "../../utils/testing_utils.h"
#include "../../../header/Production/Renewable/Wave.h"
Include dependency graph for test Wave.cpp:
```

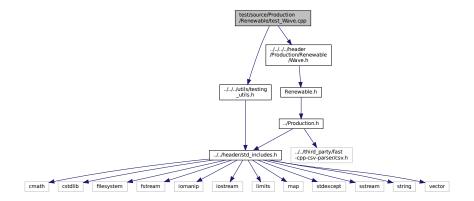

Functions

• int main (int argc, char **argv)

5.36.1 Detailed Description

Testing suite for Wave class.

A suite of tests for the Wave class.

5.36.2 Function Documentation

5.36.2.1 main()

```
int main (
            int argc,
            char ** argv )
     #ifdef _WIN32
         activateVirtualTerminal();
29
30
    #endif /* _WIN32 */
31
    printGold("\tTesting Production <-- Renewable <-- Wave");</pre>
     srand(time(NULL));
35
36
     Renewable* test_wave_ptr;
37
38 try {
40 // ----- CONSTRUCTION -----//
42 bool error_flag = true;
43
44 try {
      WaveInputs bad_wave_inputs;
45
     bad_wave_inputs.design_significant_wave_height_m = -1;
    Wave bad_wave(8760, bad_wave_inputs);
48
49
     error_flag = false;
50
51 } catch (...) {
52  // Task failed successfully! =P
54 if (not error_flag) {
5.5
      expectedErrorNotDetected(__FILE__, __LINE__);
56 }
57
58 WaveInputs wave_inputs;
60 test_wave_ptr = new Wave(8760, wave_inputs);
62 // ====== END CONSTRUCTION =========== //
63
64
66 // ----- ATTRIBUTES ----- //
67
68 testTruth(
     not wave_inputs.renewable_inputs.production_inputs.print_flag,
69
     __FILE__,
70
71
72);
73
74 testFloatEquals(
75
     test_wave_ptr->type,
    RenewableType :: WAVE,
76
     ___FILE___,
```

```
__LINE__
79);
80
81 testTruth(
      test_wave_ptr->type_str == "WAVE",
82
      __FILE__,
83
      __LINE_
85);
86
87 testFloatEquals(
      test_wave_ptr->capital_cost,
88
      850831.063539,
89
      __FILE__,
90
      __LINE__
91
92);
93
94 testFloatEquals(
      test_wave_ptr->operation_maintenance_cost_kWh,
95
      0.069905,
96
      __FILE__,
      __LINE__
98
99);
100
101 // ====== END ATTRIBUTES ========
102
103
104
105 // ----- METHODS -----//
106
107 // test production constraints
108 testFloatEquals(
109
       test_wave_ptr->computeProductionkW(0, 1, 0, rand()),
110
111
       ___FILE___,
       __LINE__
112
113);
114
115 testFloatEquals(
116
       test_wave_ptr->computeProductionkW(0, 1, rand(), 0),
117
       __FILE__,
118
       __LINE__
119
120);
121
122 // test commit()
123 std::vector<double> dt_vec_hrs (48, 1);
124
125 std::vector<double> load_vec_kW = {
       126
127
128
129
       1, 0, 0, 0, 1, 1, 1, 0, 1, 1, 0, 0
130 };
131
132 double load_kW = 0;
133 double production_kW = 0;
134 double roll = 0;
135 double significant_wave_height_m = 0;
136 double energy_period_s = 0;
137
138 for (int i = 0; i < 48; i++) {
       roll = (double) rand() / RAND_MAX;
139
140
141
       if (roll <= 0.05) {</pre>
142
           roll = 0;
143
144
       significant_wave_height_m = roll *
145
           ((Wave*)test_wave_ptr)->design_significant_wave_height_m;
146
147
148
       roll = (double)rand() / RAND_MAX;
149
       if (roll <= 0.05) {
    roll = 0;</pre>
150
151
152
153
154
       energy_period_s = roll * ((Wave*)test_wave_ptr)->design_energy_period_s;
155
       roll = (double)rand() / RAND_MAX;
156
157
       if (roll >= 0.95) {
158
           roll = 1.25;
159
160
161
162
       load_vec_kW[i] *= roll * test_wave_ptr->capacity_kW;
163
       load_kW = load_vec_kW[i];
164
```


```
165
        production_kW = test_wave_ptr->computeProductionkW(
166
167
            dt_vec_hrs[i],
168
            \verb|significant_wave_height_m|,\\
169
            energy_period_s
170
        );
171
172
        load_kW = test_wave_ptr->commit(
173
174
            dt_vec_hrs[i],
175
            production_kW,
176
            load_kW
177
        );
178
179
        // is running (or not) as expected
180
        if (production_kW > 0) {
181
            testTruth(
182
               test_wave_ptr->is_running,
                __FILE__,
183
184
                __LINE__
185
            );
186
        }
187
188
        else {
189
            testTruth(
190
               not test_wave_ptr->is_running,
191
                ___FILE___,
                __LINE__
192
193
            );
194
        }
195
196
        // load_kW <= load_vec_kW (i.e., after vs before)</pre>
197
        testLessThanOrEqualTo(
198
            load_kW,
199
            load_vec_kW[i],
200
            ___FILE___,
            __LINE__
201
202
        );
203
204
        // production = dispatch + storage + curtailment
205
        testFloatEquals(
206
            test_wave_ptr->production_vec_kW[i] -
            test_wave_ptr->dispatch_vec_kW[i] -
2.07
            test_wave_ptr->storage_vec_kW[i]
208
209
            test_wave_ptr->curtailment_vec_kW[i],
            0,
__FILE__,
210
211
212
            __LINE__
213
       );
214
215
        // resource, O&M > 0 whenever wave is running (i.e., producing)
216
        if (test_wave_ptr->is_running) {
217
            testGreaterThan(
218
                significant_wave_height_m,
219
                Ο,
                ___FILE_
220
221
                __LINE__
222
            );
223
224
            testGreaterThan(
225
                energy_period_s,
226
                Ο,
                ___FILE___,
227
228
                __LINE__
229
            );
230
            testGreaterThan(
2.31
                test_wave_ptr->operation_maintenance_cost_vec[i],
232
233
                0.
234
                ___FILE___,
235
                __LINE__
236
            );
237
       }
238
239
        // O&M = 0 whenever wave is not running (i.e., not producing)
240
241
            testFloatEquals(
242
                test_wave_ptr->operation_maintenance_cost_vec[i],
                0,
__FILE_
243
244
245
                __LINE__
246
            );
247
248 }
249 // ====== END METHODS =======//
2.50
251 }
       /* trv */
```

```
252
254 catch (...) {
255
          delete test_wave_ptr;
256
          printGold(" ..... ");
printRed("FAIL");
257
258
259
          std::cout « std::endl;
260
261 }
262
263
264 delete test_wave_ptr;
266 printGold(" ..... ");
267 printGreen("PASS");
268 std::cout « std::endl;
269 return 0;
270 } /* main() */
```

5.37 test/source/Production/Renewable/test_Wind.cpp File Reference

Testing suite for Wind class.

```
#include "../../utils/testing_utils.h"
#include "../../../header/Production/Renewable/Wind.h"
Include dependency graph for test Wind.cpp:
```

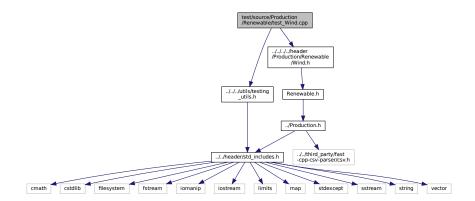

Functions

• int main (int argc, char **argv)

5.37.1 Detailed Description

Testing suite for Wind class.

A suite of tests for the Wind class.

5.37.2 Function Documentation

5.37.2.1 main()

```
int main (
            int argc,
            char ** argv )
27 {
     #ifdef _WIN32
28
         activateVirtualTerminal();
29
30
      #endif /* _WIN32 */
31
32
     printGold("\tTesting Production <-- Renewable <-- Wind");</pre>
33
     srand(time(NULL));
34
35
36
     Renewable* test wind ptr;
38 try {
39
40 // ----- CONSTRUCTION -----//
41
42 bool error_flag = true;
43
44 try {
45
      WindInputs bad_wind_inputs;
46
     bad_wind_inputs.design_speed_ms = -1;
47
    Wind bad_wind(8760, bad_wind_inputs);
48
49
50
     error_flag = false;
51 } catch (...) {
52
     // Task failed successfully! =P
53 }
54 if (not error_flag) {
      expectedErrorNotDetected(__FILE__, __LINE__);
55
57
58 WindInputs wind_inputs;
59
60 test_wind_ptr = new Wind(8760, wind_inputs);
62 // ===== END CONSTRUCTION ======== //
64
6.5
66 // ----- ATTRIBUTES ----- //
67
68 testTruth(
69
    not wind_inputs.renewable_inputs.production_inputs.print_flag,
     ___FILE___,
70
71
      __LINE__
72);
73
74 testFloatEquals(
      test_wind_ptr->type,
76
      RenewableType :: WIND,
77
      ___FILE___,
     __LINE_
78
79);
80
81 testTruth(
     test_wind_ptr->type_str == "WIND",
83
     ___FILE___,
84
     __LINE__
85);
86
87 testFloatEquals(
   test_wind_ptr->capital_cost,
88
29
     450356.170088,
90
     ___FILE___,
91
      __LINE__
92);
93
94 testFloatEquals(
95
      test_wind_ptr->operation_maintenance_cost_kWh,
96
      0.034953,
97
     ___FILE___,
98
      __LINE__
99);
100
101 // ====== END ATTRIBUTES ========
102
103
104
105 // ----- METHODS ------//
```


```
107 // test production constraints
108 testFloatEquals(
109
        test_wind_ptr->computeProductionkW(0, 1, 1e6),
110
        Ο,
        ___FILE_
111
        __LINE_
112
113 );
114
115 testFloatEquals(
116
        test_wind_ptr->computeProductionkW(
            Ο,
117
118
            1.
            ((Wind*)test_wind_ptr)->design_speed_ms
119
120
121
        test_wind_ptr->capacity_kW,
122
        ___FILE___,
        __LINE
123
124);
125
126 testFloatEquals(
127
        test_wind_ptr->computeProductionkW(0, 1, -1),
128
        Ο,
        __FILE__,
129
130
        __LINE__
131 );
132
133 // test commit()
134 std::vector<double> dt_vec_hrs (48, 1);
135
136 std::vector<double> load_vec_kW = {
       1, 1, 0, 1, 0, 0, 1, 1, 1, 0, 1, 1, 1, 1, 1, 1, 1, 1, 1, 0, 0, 0, 0, 0, 0, 1, 1, 0,
137
138
139
        1, 1, 1, 1, 1, 0, 1, 1, 1, 1, 0, 1,
140
        1, 0, 0, 0, 1, 1, 1, 0, 1, 1, 0, 0
141 };
142
143 double load kW = 0;
144 double production_kW = 0;
145 double roll = 0;
146 double wind_resource_ms = 0;
147
148 for (int i = 0; i < 48; i++) {
        roll = (double) rand() / RAND_MAX;
149
150
151
        wind_resource_ms = roll * ((Wind*)test_wind_ptr)->design_speed_ms;
152
153
        roll = (double)rand() / RAND_MAX;
154
        if (roll <= 0.1) {
155
156
            wind_resource_ms = 0;
157
158
159
        else if (roll >= 0.95) {
160
           wind_resource_ms = 3 * ((Wind*)test_wind_ptr)->design_speed_ms;
161
162
163
        roll = (double)rand() / RAND_MAX;
164
165
        if (roll >= 0.95) {
            roll = 1.25;
166
167
168
169
        load_vec_kW[i] *= roll * test_wind_ptr->capacity_kW;
170
        load_kW = load_vec_kW[i];
171
172
        production_kW = test_wind_ptr->computeProductionkW(
173
174
            dt vec hrs[i].
175
            wind resource ms
176
        );
177
178
        load_kW = test_wind_ptr->commit(
179
            dt vec hrs[i].
180
            production_kW,
181
182
             load_kW
183
184
        // is running (or not) as expected
185
186
        if (production_kW > 0) {
187
            testTruth(
188
                 test_wind_ptr->is_running,
                 __FILE__,
189
190
                 __LINE__
191
            );
        }
192
193
```

```
194
       else {
195
           testTruth(
196
               not test_wind_ptr->is_running,
197
               ___FILE___,
               __LINE_
198
           );
199
200
201
202
        // load_kW <= load_vec_kW (i.e., after vs before)
203
       testLessThanOrEqualTo(
204
           load_kW,
205
           load_vec_kW[i],
206
            ___FILE___,
207
208
209
       // production = dispatch + storage + curtailment
210
211
       testFloatEquals(
212
           test_wind_ptr->production_vec_kW[i] -
            test_wind_ptr->dispatch_vec_kW[i]
214
           test_wind_ptr->storage_vec_kW[i]
215
           test_wind_ptr->curtailment_vec_kW[i],
216
           Ο,
           ___FILE___,
217
218
            __LINE_
219
       );
220
221
       // resource, O&M > 0 whenever wind is running (i.e., producing)
       if (test_wind_ptr->is_running) {
222
223
           testGreaterThan(
224
               wind_resource_ms,
225
               0,
226
               __FILE__,
227
               __LINE__
228
           );
229
230
           testGreaterThan(
               test_wind_ptr->operation_maintenance_cost_vec[i],
232
233
               ___FILE___,
234
               __LINE__
           );
235
      }
236
237
       // O&M = 0 whenever wind is not running (i.e., not producing)
239
240
           testFloatEquals(
2.41
               test_wind_ptr->operation_maintenance_cost_vec[i],
               Ο,
242
               __FILE__,
243
244
                __LINE_
245
246
247 }
248
249
250 // ----- END METHODS -----//
251
252 }
      /* try */
253
254
255 catch (...) {
256
       delete test_wind_ptr;
       printGold(" ..... ");
258
       printRed("FAIL");
259
260
       std::cout « std::endl;
261
       throw:
262 }
263
264
265 delete test_wind_ptr;
266
267 printGold(" ..... ");
268 printGreen("PASS");
269 std::cout « std::endl;
270 return 0;
271 } /* main() */
```

5.38 test/source/Production/test_Production.cpp File Reference

Testing suite for Production class.

```
#include "../../utils/testing_utils.h"
#include "../../header/Production/Production.h"
Include dependency graph for test_Production.cpp:
```

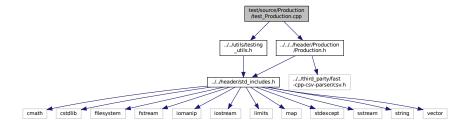

Functions

• int main (int argc, char **argv)

5.38.1 Detailed Description

Testing suite for Production class.

A suite of tests for the Production class.

5.38.2 Function Documentation

5.38.2.1 main()

```
int main (
              int argc,
             char ** argv )
27 {
28
      #ifdef _WIN32
      activateVirtualTerminal();
#endif /* _WIN32 */
29
30
31
      printGold("\n\tTesting Production");
33
      srand(time(NULL));
34
35
36
37 try {
39 // ------ CONSTRUCTION ------//
41 bool error_flag = true;
42
43 try {
      ProductionInputs production_inputs;
      Production bad_production(0, production_inputs);
47
      error_flag = false;
48
49 } catch (...) {
50  // Task failed successfully! =P
```


```
52 if (not error_flag) {
       expectedErrorNotDetected(__FILE__, __LINE__);
54 }
55
56 ProductionInputs production_inputs;
58 Production test_production(8760, production_inputs);
60 // ====== END CONSTRUCTION ======== //
61
62
63
64 // ====== ATTRIBUTES ========
66 testTruth(
67
      not production_inputs.print_flag,
       ___FILE___,
68
       __LINE__
69
70);
72 testFloatEquals(
       production_inputs.nominal_inflation_annual,
73
74
       0.02,
       ___FILE
7.5
76
       __LINE_
77 );
78
79 testFloatEquals(
80
       production_inputs.nominal_discount_annual,
81
       0.04,
       __FILE_
82
83
       __LINE__
84);
8.5
86 testFloatEquals(
87
       {\tt test\_production.n\_points,}
88
       8760,
       __FILE__,
89
90
       __LINE__
91);
92
93 testFloatEquals(
94
       {\tt test\_production.capacity\_kW,}
95
       100,
       __FILE__,
96
97
       __LINE__
98);
99
100 testFloatEquals(
101
       test production.real discount annual,
        0.0196078431372549,
102
103
        ___FILE___,
104
        __LINE__
105);
106
107 testFloatEquals(
108
        test_production.production_vec_kW.size(),
109
110
        __FILE_
111
        __LINE__
112);
113
114 testFloatEquals(
115
        test_production.dispatch_vec_kW.size(),
116
        8760,
        __FILE__,
117
118
        __LINE__
119);
120
121 testFloatEquals(
122
        test_production.storage_vec_kW.size(),
123
        8760,
        ___FILE
124
125
        __LINE__
126);
128 testFloatEquals(
129
        test_production.curtailment_vec_kW.size(),
130
        8760.
        __FILE_
131
        __LINE
132
133);
134
135 testFloatEquals(
136
        {\tt test\_production.capital\_cost\_vec.size(),}
137
        8760,
        ___FILE___,
138
```

```
139
       __LINE__
140);
141
142 testFloatEquals(
       {\tt test\_production.operation\_maintenance\_cost\_vec.size(),}
143
144
145
       __FILE__,
146
       __LINE__
147);
148
149 // ----- END ATTRIBUTES ------ //
150
151 }
      /* try */
152
153
154 catch (...) {
155 //...
156
       printGold(" .....");
printRed("FAIL");
157
158
159
       std::cout « std::endl;
160
161 }
162
163
164 printGold(" .... ");
165 printGreen("PASS");
166 std::cout « std::endl;
167 return 0;
168
169 } /* main() */
```

5.39 test/source/Storage/test_Lilon.cpp File Reference

Testing suite for Lilon class.

```
#include "../../utils/testing_utils.h"
#include "../../header/Storage/LiIon.h"
Include dependency graph for test_Lilon.cpp:
```

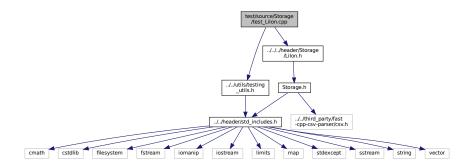

Functions

• int main (int argc, char **argv)

5.39.1 Detailed Description

Testing suite for Lilon class.

A suite of tests for the Lilon class.

5.39.2 Function Documentation


5.39.2.1 main()

```
int main (
               int argc,
               char ** argv )
27 {
       #ifdef _WIN32
28
           activateVirtualTerminal();
29
       #endif /* _WIN32 */
31
       printGold("\tTesting Storage <-- LiIon");</pre>
32
33
       srand(time(NULL));
34
35
36
       try {
            //...
38
39
40
41
       catch (...) {
           printGold(" .....");
printRed("FAIL");
44
45
           std::cout « std::endl;
46
47
           throw:
48
49
50
       printGold(" ..... ");
printGreen("PASS");
std::cout « std::endl;
51
52
53
       return 0;
```

5.40 test/source/Storage/test_Storage.cpp File Reference

Testing suite for Storage class.

```
#include "../../utils/testing_utils.h"
#include "../../header/Storage/Storage.h"
Include dependency graph for test_Storage.cpp:
```

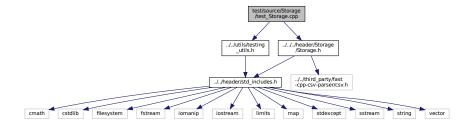

Functions

int main (int argc, char **argv)

5.40.1 Detailed Description

Testing suite for Storage class.

A suite of tests for the Storage class.

5.40.2 Function Documentation

5.40.2.1 main()


```
int main (
                int argc,
               char ** argv )
       #ifdef _WIN32
    activateVirtualTerminal();
28
29
30
       #endif /* _WIN32 */
       printGold("\tTesting Storage");
33
       srand(time(NULL));
34
35
36
       try { //...
38
39
40
       catch (...) {
41
43
          printGold(" .....");
printRed("FAIL");
45
           std::cout « std::endl;
46
47
           throw;
48
49
50
       printGold(" ..... ");
printGreen("PASS");
std::cout « std::endl;
52
53
54 return 0;
55 } /* main() */
```

5.41 test/source/test_Controller.cpp File Reference

Testing suite for Controller class.

```
#include "../utils/testing_utils.h"
#include "../../header/Controller.h"
```

Include dependency graph for test_Controller.cpp:

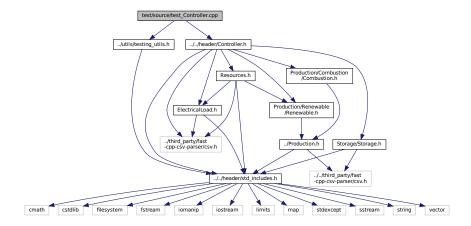

Functions

• int main (int argc, char **argv)

5.41.1 Detailed Description

Testing suite for Controller class.

A suite of tests for the Controller class.

5.41.2 Function Documentation

5.41.2.1 main()


```
int main (
            int argc,
           char ** argv )
28
     #ifdef _WIN32
        activateVirtualTerminal();
29
     #endif /* _WIN32 */
30
31
32
     printGold("\tTesting Controller");
33
     srand(time(NULL));
35
36
37 try {
38
39 // ----- CONSTRUCTION -----//
41 Controller test_controller;
42
43 // ===== END CONSTRUCTION ======
44
45
46
```

```
49 //...
50
51 // ====== END ATTRIBUTES ==============
57 //...
58
59 // ===== END METHODS ======
63
64 catch (...) {
65 //...
      printGold(" .... ");
printRed("FAIL");
68
      std::cout « std::endl;
69
70
      throw;
71 }
72
73
74 printGold(" .... ");
75 printGreen("PASS");
76 std::cout « std::endl;
77 return 0;
78 } /* main() */
```

5.42 test/source/test_ElectricalLoad.cpp File Reference

Testing suite for ElectricalLoad class.

```
#include "../utils/testing_utils.h"
#include "../../header/ElectricalLoad.h"
Include dependency graph for test_ElectricalLoad.cpp:
```



Functions

int main (int argc, char **argv)

5.42.1 Detailed Description

Testing suite for ElectricalLoad class.

A suite of tests for the ElectricalLoad class.

5.42.2 Function Documentation

5.42.2.1 main()


```
int main (
             int argc,
            char ** argv )
27 {
      #ifdef _WIN32
29
         activateVirtualTerminal();
30
     #endif /* _WIN32 */
31
     printGold("\tTesting ElectricalLoad");
32
33
34
     srand(time(NULL));
36
37 try {
38
39 // ----- CONSTRUCTION -----//
41 std::string path_2_electrical_load_time_series =
42
      "data/test/electrical_load_generic_peak-500kW_1yr_dt-1hr.csv";
43
44 ElectricalLoad test_electrical_load(path_2_electrical_load_time_series);
45
46 // ====== END CONSTRUCTION ========
48
49
50 // ----- ATTRIBUTES ----- //
51
52 testTruth(
      test_electrical_load.path_2_electrical_load_time_series ==
      path_2_electrical_load_time_series,
55
      ___FILE___,
      __LINE_
56
57);
58
59 testFloatEquals(
60
      test_electrical_load.n_points,
61
      8760,
      ___FILE
62
      __LINE_
63
64);
65
66 testFloatEquals(
67
      test_electrical_load.n_years,
68
      0.999886,
      __FILE__,
69
      __LINE_
70
71);
73 testFloatEquals(
74
      test_electrical_load.min_load_kW,
7.5
      82.1211213927802,
      __FILE___
76
77
      __LINE_
78);
79
80 testFloatEquals(
81
      test_electrical_load.mean_load_kW,
82
      258.373472633202,
      ___FILE___,
83
      __LINE__
84
85);
86
87
88 testFloatEquals(
     test_electrical_load.max_load_kW,
89
90
      500,
      __FILE__,
91
      __LINE__
93);
94
95
96 std::vector<double> expected_dt_vec_hrs (48, 1);
```

```
98 std::vector<double> expected_time_vec_hrs = {
        0, 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23,
100
        24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47
101
102
103 };
104
105 std::vector<double> expected_load_vec_kW = {
106
       360.253836463674,
107
        355.171277826775,
        353.776453532298,
108
        353.75405737934,
109
        346.592867404975,
110
111
        340.132411175118,
112
        337.354867340578,
113
        340.644115618736,
114
        363.639028500678.
        378.787797779238,
115
        372.215798201712,
116
117
        395.093925731298,
118
        402.325427142659,
119
        386.907725462306,
        380.709170928091,
120
        372.062070914977,
121
122
        372.328646856954,
123
        391.841444284136,
124
        394.029351759596,
125
        383.369407765254,
126
        381.093099675206,
127
        382.604158946193.
128
        390.744843709034,
129
        383.13949492437,
130
        368.150393976985,
131
        364.629744480226,
132
        363.572736804082,
        359.854924202248.
133
        355.207590170267,
134
135
        349.094656012401,
136
        354.365935871597,
137
        343.380608328546,
        404.673065729266,
138
        486.296896820126,
139
        480.225974100847,
140
        457.318764401085,
141
        418.177339948609,
142
143
        414.399018364126,
144
        409.678420185754,
145
        404.768766016563,
        401.699589920585,
146
147
        402.44339040654,
        398.138372541906,
148
149
        396.010498627646,
150
        390.165117432277,
151
        375.850429417013,
        365.567100746484.
152
153
        365.429624610923
154 };
155
156 for (int i = 0; i < 48; i++) {
157
        testFloatEquals(
            test_electrical_load.dt_vec_hrs[i],
158
159
            expected_dt_vec_hrs[i],
            __FILE__,
160
161
162
        );
163
164
        testFloatEquals(
            test_electrical_load.time_vec_hrs[i],
165
166
            expected_time_vec_hrs[i],
167
            __FILE__,
168
            __LINE__
169
        );
170
        testFloatEquals(
171
            test_electrical_load.load_vec_kW[i],
172
173
             expected_load_vec_kW[i],
174
            __FILE__,
175
            __LINE__
176
        );
177 }
178
179 // ====== END ATTRIBUTES ======== //
180
181 }
       /* try */
182
183
184 catch (...) {
```

5.43 test/source/test_Model.cpp File Reference

Testing suite for Model class.

```
#include "../utils/testing_utils.h"
#include "../../header/Model.h"
Include dependency graph for test_Model.cpp:
```

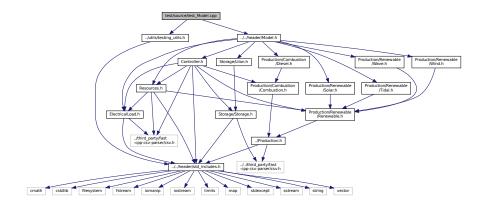

Functions

• int main (int argc, char **argv)

5.43.1 Detailed Description

Testing suite for Model class.

A suite of tests for the Model class.

5.43.2 Function Documentation

5.43.2.1 main()

```
int main (
             int argc,
             char ** argv )
27 {
28
      #ifdef _WIN32
         activateVirtualTerminal();
29
      #endif /* _WIN32 */
30
31
32
      printGold("\tTesting Model");
33
      srand(time(NULL));
34
35
36
37 try {
38
39 // ----- CONSTRUCTION -----//
40
41 bool error_flag = true;
42
43 try {
      ModelInputs bad_model_inputs;
     bad_model_inputs.path_2_electrical_load_time_series =
45
          "data/test/bad_path_240984069830.csv";
46
47
48
    Model bad model(bad model inputs);
49
50
     error_flag = false;
51 } catch (...) {
52
     // Task failed successfully! =P
53 }
54 if (not error flag) {
      expectedErrorNotDetected(__FILE__, __LINE__);
55
57
58 std::string path_2_electrical_load_time_series =
      "data/test/electrical_load_generic_peak-500kW_1yr_dt-1hr.csv";
59
60
61 ModelInputs test_model_inputs;
62 test_model_inputs.path_2_electrical_load_time_series =
     path_2_electrical_load_time_series;
64
65 Model test_model(test_model_inputs);
66
67 // ----- END CONSTRUCTION -----/
68
69
70 // ----- ATTRIBUTES ----- //
71
72 testTruth(
73
      test model.electrical load.path 2 electrical load time series ==
74
      path_2_electrical_load_time_series,
      __FILE__,
75
76
      __LINE__
77);
78
79 testFloatEquals(
80
      test_model.electrical_load.n_points,
      8760,
81
      __FILE___,
      __LINE__
83
84);
85
86 testFloatEquals(
      test_model.electrical_load.n_years,
88
      0.999886,
      __FILE__,
29
      __LINE__
90
91);
92
93 testFloatEquals(
      test_model.electrical_load.min_load_kW,
95
      82.1211213927802,
      ___FILE___,
96
      __LINE
97
98);
100 testFloatEquals(
101
       test_model.electrical_load.mean_load_kW,
102
       258.373472633202,
       ___FILE___,
103
       __LINE
104
105);
106
```

```
107
108
    testFloatEquals(
109
         test_model.electrical_load.max_load_kW,
110
        500,
        ___FILE
111
112
         LINE
113 );
114
115
116 std::vector<double> expected_dt_vec_hrs (48, 1);
117
118 std::vector<double> expected_time_vec_hrs = {
        0, 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35,
119
120
121
122
        36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47
123 };
124
125 std::vector<double> expected_load_vec_kW = {
        360.253836463674,
126
127
         355.171277826775,
128
        353.776453532298,
        353.75405737934,
129
        346.592867404975,
130
131
        340.132411175118,
        337.354867340578,
132
133
         340.644115618736,
134
        363.639028500678,
135
        378.787797779238,
        372.215798201712,
136
137
        395.093925731298,
138
         402.325427142659,
139
        386.907725462306,
140
        380.709170928091,
141
        372.062070914977,
142
        372.328646856954.
143
        391.841444284136,
        394.029351759596,
144
145
         383.369407765254,
146
         381.093099675206,
147
        382.604158946193.
        390.744843709034,
148
         383.13949492437.
149
        368.150393976985,
150
        364.629744480226,
151
152
         363.572736804082,
153
        359.854924202248,
        355.207590170267,
154
        349.094656012401,
155
        354.365935871597,
156
157
        343.380608328546,
158
         404.673065729266,
159
         486.296896820126,
160
         480.225974100847,
        457.318764401085.
161
         418.177339948609,
162
         414.399018364126,
163
164
         409.678420185754,
165
         404.768766016563,
166
         401.699589920585,
        402.44339040654.
167
        398.138372541906,
168
169
        396.010498627646,
170
         390.165117432277,
         375.850429417013,
171
172
        365.567100746484,
173
        365.429624610923
174 };
175
176 for (int i = 0; i < 48; i++) {
177
        testFloatEquals(
178
             test_model.electrical_load.dt_vec_hrs[i],
179
             expected_dt_vec_hrs[i],
180
             __FILE__,
             LINE
181
182
        );
183
184
        testFloatEquals(
             test_model.electrical_load.time_vec_hrs[i],
185
186
             expected_time_vec_hrs[i],
187
             __FILE__,
188
             __LINE__
189
190
191
        testFloatEquals(
             test_model.electrical_load.load_vec_kW[i],
192
193
             expected_load_vec_kW[i],
```

```
194
            __FILE__,
195
            __LINE_
196
197 }
198
199 // ====== END ATTRIBUTES ========= //
200
201
202
203 // ====== METHODS ========
204
205 // add Solar resource
206 int solar_resource_key = 0;
207 std::string path_2_solar_resource_data =
208
        "data/test/solar_GHI_peak-1kWm2_1yr_dt-1hr.csv";
209
210 test_model.addResource(
        RenewableType :: SOLAR,
path_2_solar_resource_data,
211
212
213
        solar_resource_key
214);
215
216 std::vector<double> expected_solar_resource_vec_kWm2 = {
217
        0.
218
        0,
219
        0,
220
        Ο,
221
        Ο,
222
        0,
        8.51702662684015E-05,
223
224
        0.000348341567045,
225
        0.00213793728593,
226
        0.004099863613322,
227
        0.000997135230553,
228
        0.009534527624657,
        0.022927996790616.
229
230
        0.0136071715294,
231
        0.002535134127751,
232
        0.005206897515821,
233
        0.005627658648597,
234
        0.000701186722215,
235
        0.00017119827089,
236
        0.
237
        0,
238
        Ο,
239
        0,
240
        Ο,
241
        0,
242
        0.
243
        0.
244
        0,
245
        Ο,
246
        Ο,
2.47
        Ο,
        0.000141055102242,
248
        0.00084525014743,
249
250
        0.024893647822702,
251
        0.091245556190749,
252
        0.158722176731637,
        0.152859680515876,
253
254
        0.149922903895116,
        0.13049996570866,
255
256
        0.03081254222795,
257
        0.001218928911125,
258
        0.000206092647423,
259
        Ο,
260
        0,
261
        0.
262
        0.
263
        0,
264
265 };
266
267 for (size_t i = 0; i < expected_solar_resource_vec_kWm2.size(); i++) {
268
        testFloatEquals(
269
            test_model.resources.resource_map_1D[solar_resource_key][i],
270
            expected_solar_resource_vec_kWm2[i],
271
            __FILE__,
272
            __LINE_
273
        );
274 }
276
277 // add Tidal resource
278 int tidal_resource_key = 1;
279 std::string path_2_tidal_resource_data = 280 "data/test/tidal_speed_peak-3ms_lyr_dt-1hr.csv";
```


```
281
282 test_model.addResource(
283
        RenewableType :: TIDAL,
284
        path_2_tidal_resource_data,
285
        tidal_resource_key
286);
287
288
289 // add Wave resource
290 int wave_resource_key = 2;
291 std::string path_2_wave_resource_data =
        "data/test/waves_H_s_peak-8m_T_e_peak-15s_1yr_dt-1hr.csv";
292
293
294 test_model.addResource(
295
        RenewableType :: WAVE,
296
        path_2_wave_resource_data,
297
        wave_resource_key
298);
299
301 // add Wind resource
302 int wind_resource_key = 3;
303 std::string path_2_wind_resource_data =
        "data/test/wind_speed_peak-25ms_1yr_dt-1hr.csv";
304
305
306 test_model.addResource(
307
        RenewableType :: WIND,
308
        path_2_wind_resource_data,
309
        wind_resource_key
310);
311
312
313 // add Diesel asset
314 DieselInputs diesel_inputs;
315 test_model.addDiesel(diesel_inputs);
316
317 testFloatEquals(
318
        test_model.combustion_ptr_vec.size(),
319
        1,
320
        __FILE__,
321
       __LINE__
322);
323
324 testFloatEquals(
325
        test_model.combustion_ptr_vec[0]->type,
326
        CombustionType :: DIESEL,
327
        ___FILE___,
        __LINE_
328
329);
330
331
332 // add Solar asset
333 SolarInputs solar_inputs;
334 solar_inputs.resource_key = solar_resource_key;
335
336 test model.addSolar(solar inputs);
337
338 testFloatEquals(
339
        test_model.renewable_ptr_vec.size(),
340
        __FILE__,
341
342
        __LINE_
343);
344
345 testFloatEquals(
346
        test_model.renewable_ptr_vec[0]->type,
347
        RenewableType :: SOLAR,
        ___FILE___,
348
349
        __LINE_
350);
351
352
353 // add Tidal asset
354 TidalInputs tidal_inputs;
355 tidal_inputs.resource_key = tidal_resource_key;
357 test_model.addTidal(tidal_inputs);
358
359 testFloatEquals(
360
        test_model.renewable_ptr_vec.size(),
361
        2,
        ___FILE___,
362
363
        __LINE__
364);
365
366 testFloatEquals(
367
        test model.renewable ptr vec[1]->tvpe,
```

```
368
       RenewableType :: TIDAL,
       ___FILE___,
369
370
       __LINE__
371 );
372
373
374 // add Wave asset
375 WaveInputs wave_inputs;
376 wave_inputs.resource_key = wave_resource_key;
377
378 test_model.addWave(wave_inputs);
379
380 testFloatEquals(
381
       test_model.renewable_ptr_vec.size(),
382
       3,
       __FILE__,
383
384
       __LINE__
385);
386
387 testFloatEquals(
388
       test_model.renewable_ptr_vec[2]->type,
389
       RenewableType :: WAVE,
       __FILE__,
390
391
       __LINE__
392);
393
394
395 // add Wind asset
396 WindInputs wind_inputs;
397 wind_inputs.resource_key = wind_resource_key;
398
399 test_model.addWind(wind_inputs);
400
401 testFloatEquals(
402
       test_model.renewable_ptr_vec.size(),
       4,
__FILE__,
403
404
       __LINE__
405
406);
407
408 testFloatEquals(
409
       test_model.renewable_ptr_vec[3]->type,
410
       RenewableType :: WIND,
       ___FILE___,
411
       __LINE__
412
413 );
414
415
416 // run
417 test_model.run();
418
419 for (int i = 0; i < test_model.electrical_load.n_points; i++) {
420
       {\tt testLessThanOrEqualTo(}
421
         test_model.controller.net_load_vec_kW[i],
422
           test_model.electrical_load.max_load_kW,
           __FILE__,
423
424
425
426 }
427
428 // ----- END METHODS -----//
429
430 } /* try */
431
432
433 catch (...) {
       //...
434
435
       printGold(" .....");
436
       printRed("FAIL");
437
438
       std::cout « std::endl;
439
       throw;
440 }
441
442
443 printGold(" .....");
444 printGreen("PASS");
445 std::cout « std::endl;
446 return 0;
447 } /* main() */
```

5.44 test/source/test_Resources.cpp File Reference

Testing suite for Resources class.

```
#include "../utils/testing_utils.h"
#include "../../header/Resources.h"
#include "../../header/ElectricalLoad.h"
Include dependency graph for test_Resources.cpp:
```

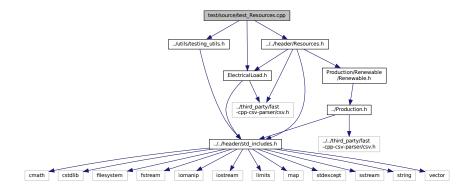

Functions

• int main (int argc, char **argv)

5.44.1 Detailed Description

Testing suite for Resources class.

A suite of tests for the Resources class.

5.44.2 Function Documentation

5.44.2.1 main()

```
40 // ----- CONSTRUCTION -----//
41
42 std::string path_2_electrical_load_time_series =
4.3
      "data/test/electrical_load_generic_peak-500kW_1yr_dt-1hr.csv";
44
45 ElectricalLoad test_electrical_load(path_2_electrical_load_time_series);
47 Resources test_resources;
48
49 // ----- END CONSTRUCTION -----//
50
51
53 // ----- ATTRIBUTES ------ //
55 testFloatEquals(
      test_resources.resource_map_1D.size(),
56
57
      Ο,
      __FILE__,
58
      __LINE__
59
60);
61
62 testFloatEquals(
      test_resources.path_map_1D.size(),
63
      Ο,
65
     ___FILE___,
     __LINE__
66
67);
68
69 testFloatEquals(
70
      test_resources.resource_map_2D.size(),
71
     ___FILE___,
72
     __LINE__
73
74);
75
76 testFloatEquals(
      test_resources.path_map_2D.size(),
78
     ___FILE___,
79
      __LINE__
8.0
81);
84
85
86 // ----- METHODS -----//
87
88 int solar_resource_key = 0;
89 std::string path_2_solar_resource_data =
90
      "data/test/solar_GHI_peak-1kWm2_1yr_dt-1hr.csv";
91
92 test_resources.addResource(
   RenewableType::SOLAR,
93
94
     path_2_solar_resource_data,
      solar_resource_key,
95
96
      &test_electrical_load
97);
98
99 bool error_flag = true;
100 try {
101
      test_resources.addResource(
        RenewableType::SOLAR,
102
103
          path_2_solar_resource_data,
104
          solar_resource_key,
105
          &test_electrical_load
     );
106
107
108
      error_flag = false;
109 } catch (...) {
110
      // Task failed successfully! =P
111 }
112 if (not error_flag) {
       expectedErrorNotDetected(__FILE__, __LINE__);
113
114 }
115
116
117 try {
       std::string path_2_solar_resource_data_BAD_TIMES =
118
          "data/test/solar_GHI_peak-1kWm2_1yr_dt-1hr_BAD_TIMES.csv";
119
120
121
       test_resources.addResource(
122
         RenewableType::SOLAR,
123
          path_2_solar_resource_data_BAD_TIMES,
124
          -1,
125
          &test electrical load
```

```
126
        );
127
128
        error_flag = false;
129 } catch (...) {
130  // Task failed successfully! =P
131 }
132
    if (not error_flag) {
133
        expectedErrorNotDetected(__FILE__, __LINE__);
134 }
135
136
137 try {
138
        std::string path_2_solar_resource_data_BAD_LENGTH =
139
             "data/test/solar_GHI_peak-1kWm2_1yr_dt-1hr_BAD_LENGTH.csv";
140
141
        test_resources.addResource(
142
            RenewableType::SOLAR,
            path_2_solar_resource_data_BAD_LENGTH,
143
144
145
            &test_electrical_load
146
147
148
        error_flag = false;
149 } catch (...) {
150    // Task failed successfully! =P
151 }
152
    if (not error_flag) {
153
        expectedErrorNotDetected(__FILE__, __LINE__);
154 }
155
156 std::vector<double> expected_solar_resource_vec_kWm2 = {
157
        0,
158
        Ο,
159
        Ο,
160
        Ο,
161
        0,
162
        8.51702662684015E-05,
163
164
        0.000348341567045,
165
        0.00213793728593,
166
        0.004099863613322,
        0.000997135230553,
167
        0.009534527624657
168
        0.022927996790616,
169
170
        0.0136071715294,
171
        0.002535134127751,
172
        0.005206897515821,
173
        0.005627658648597,
        0.000701186722215.
174
175
        0.00017119827089.
176
177
178
        Ο,
179
        0,
180
        0.
181
        0,
182
        Ο,
183
184
        0,
        Ο,
185
186
        0.
187
        0,
188
        0.000141055102242,
189
        0.00084525014743,
190
        0.024893647822702
191
        0.091245556190749,
192
        0.158722176731637,
        0.152859680515876,
193
194
        0.149922903895116,
195
        0.13049996570866,
196
        0.03081254222795,
197
        0.001218928911125
198
        0.000206092647423,
199
        0.
200
        0,
201
        Ο,
202
        0,
203
        0,
204
        0
205 };
206
207 for (size_t i = 0; i < expected_solar_resource_vec_kWm2.size(); i++) {
208
        testFloatEquals(
209
             test_resources.resource_map_1D[solar_resource_key][i],
210
             expected_solar_resource_vec_kWm2[i],
            __FILE__,
211
212
             __LINE
```

```
213
        );
214 }
215
216
217 int tidal_resource_key = 1;
218 std::string path_2_tidal_resource_data =
219
        "data/test/tidal_speed_peak-3ms_1yr_dt-1hr.csv";
220
221 test_resources.addResource(
222
        RenewableType::TIDAL,
        path_2_tidal_resource_data,
223
224
        tidal_resource kev,
225
        &test_electrical_load
226);
227
228 std::vector<double> expected_tidal_resource_vec_ms = {
        0.347439913040533.
229
        0.770545522195602,
230
        0.731352084836198,
231
        0.293389814389542,
232
233
        0.209959110813115,
234
        0.610609623896497,
        1.78067162013604,
2.53522775118089,
235
236
237
        2.75966627832024,
238
        2.52101111143895,
239
        2.05389330201031,
240
        1.3461515862445,
241
        0.28909254878384.
242
        0.897754086048563,
243
        1.71406453837407,
244
        1.85047408742869,
245
        1.71507908595979,
246
        1.33540349705416,
2.47
        0.434586143463003
        0.500623815700637,
248
        1.37172172646733,
249
        1.68294125491228,
250
251
        1.56101300975417,
252
        1.04925834219412,
253
        0.211395463930223,
254
        1.03720048903385.
        1.85059536356448.
255
        1.85203242794517,
256
257
        1.4091471616277,
258
        0.767776539039899.
259
        0.251464906990961.
        1.47018469375652,
260
        2.36260493698197.
261
262
        2.46653750048625,
        2.12851908739291,
263
264
        1.62783753197988,
265
        0.734594890957439
266
        0.441886297300355,
267
        1.6574418350918,
        2.0684558286637,
268
        1.87717416992136,
269
270
        1.58871262337931,
271
        1.03451227609235,
272
        0.193371305159817
273
        0.976400122458815.
274
        1.6583227369707,
275
        1.76690616570953,
276
        1.54801328553115
277 };
278
279 for (size_t i = 0; i < expected_tidal_resource_vec_ms.size(); i++) {
280
        testFloatEquals(
281
            test_resources.resource_map_1D[tidal_resource_key][i],
282
             expected_tidal_resource_vec_ms[i],
283
            __FILE__,
284
             __LINE__
285
        );
286 }
287
289 int wave_resource_key = 2;
290 std::string path_2_wave_resource_data =
291
         "data/test/waves_H_s_peak-8m_T_e_peak-15s_1yr_dt-1hr.csv";
292
293 test resources.addResource(
294
        RenewableType::WAVE,
295
        path_2_wave_resource_data,
296
        wave_resource_key,
297
        &test_electrical_load
298);
299
```

```
300 std::vector<double> expected_significant_wave_height_vec_m = {
        4.26175222125028,
302
        4.25020976167872,
303
        4.25656524330349,
        4.27193854786718,
304
        4.28744955711233,
305
        4.29421815278154,
306
307
        4.2839937266082,
308
        4.25716982457976,
309
        4.22419391611483,
        4.19588925217606.
310
311
        4.17338788587412.
        4.14672746914214,
312
313
        4.10560041173665,
314
        4.05074966447193,
315
        3.9953696962433,
        3.95316976150866.
316
        3.92771018142378,
317
        3.91129562488595,
318
        3.89558312094911,
319
320
        3.87861093931749,
321
        3.86538307240754,
322
        3.86108961027929,
        3.86459448853189,
323
324
        3.86796474016882,
325
        3.86357412779993,
326
        3.85554872014731,
327
        3.86044266668675,
        3.89445961915999,
328
329
        3.95554798115731.
330
        4.02265508610476,
331
        4.07419587011404,
332
        4.10314247143958,
333
        4.11738045085928,
334
        4.12554995596708,
        4.12923992001675,
335
336
        4.1229292327442,
        4.10123955307441,
337
338
        4.06748827895363,
339
        4.0336230651344,
340
        4.01134236393876
        4.00136570034559,
341
        3.99368787690411.
342
        3.97820924247644,
343
344
        3.95369335178055,
345
        3.92742545608532,
346
        3.90683362771686,
347
        3.89331520944006,
348
        3.88256045801583
349 };
350
351 std::vector<double> expected_energy_period_vec_s = {
352
        10.4456008226821,
353
        10.4614151137651,
10.4462827795433,
354
        10.4127692097884,
355
        10.3734397942723,
356
357
        10.3408599227669,
358
        10.32637292093,
359
        10.3245412676322.
360
        10.310409818185.
361
        10.2589529840966,
362
        10.1728100603103,
        10.0862908658929,
363
364
        10.03480243813.
365
        10.023673635806,
366
        10.0243418565116,
        10.0063487117653.
367
        9.96050302286607,
368
        9.9011999635568,
369
370
        9.84451822125472,
371
        9.79726875879626,
372
        9.75614594835158,
373
        9.7173447961368,
374
        9.68342904390577,
375
        9.66380508567062,
376
        9.6674009575699,
377
        9.68927134575103,
        9.70979984863046.
378
379
        9.70967357906908.
380
        9.68983025704562,
        9.6722855524805,
381
382
        9.67973599910003,
383
        9.71977125328293,
384
        9.78450442291421,
385
        9.86532355233449.
386
        9.96158937600019,
```


```
10.0807018356507,
387
388
        10.2291022504937,
389
        10.39458528356,
390
        10.5464393581004,
        10.6553277500484,
391
        10.7245553190084,
392
        10.7893127285064,
393
394
        10.8846512240849,
395
        11.0148158739075,
396
        11.1544325654719,
397
        11.2772785848343.
398
        11.3744362756187.
399
        11.4533643503183
400 };
401
402 for (size_t i = 0; i < expected_significant_wave_height_vec_m.size(); i++) {
403
        testFloatEquals(
            test resources.resource map 2D[wave resource key][i][0],
404
            expected_significant_wave_height_vec_m[i],
405
            __FILE__,
406
407
            __LINE__
408
       );
409
        testFloatEquals(
410
411
            test_resources.resource_map_2D[wave_resource_key][i][1],
412
            expected_energy_period_vec_s[i],
413
            __FILE__,
            __LINE_
414
415
       );
416 }
417
418
419 int wind_resource_key = 3;
420 std::string path_2_wind_resource_data =
421
        "data/test/wind_speed_peak-25ms_1yr_dt-1hr.csv";
422
423 test resources.addResource(
        RenewableType::WIND,
424
425
        path_2_wind_resource_data,
426
        wind_resource_key,
427
        &test_electrical_load
428);
429
430 std::vector<double> expected_wind_resource_vec_ms = {
        6.88566688469997,
431
432
        5.02177105466549,
433
        3.74211715899568,
434
        5.67169579985362,
        4.90670669971858,
435
        4.29586955031368,
436
        7.41155377205065,
437
438
        10.2243290476943,
439
        13.1258696725555,
440
        13.7016198628274,
        16.2481482330233.
441
        16.5096744355418,
442
443
        13.4354482206162,
444
        14.0129230731609,
445
        14.5554549260515,
446
        13.4454539065912.
        13.3447169512094.
447
        11.7372615098554,
448
449
        12.7200070078013,
450
        10.6421127908149,
        6.09869498990661,
451
452
        5.66355596602321,
453
        4.97316966910831,
        3.48937138360567,
454
        2.15917470979169,
455
        1.29061103587027,
456
457
        3.43475751425219,
458
        4.11706326260927,
459
        4.28905275747408,
        5.75850263196241.
460
        8.98293663055264,
461
462
        11.7069822941315,
463
        12.4031987075858,
464
        15.4096570910089,
465
        16.6210843829552.
        13.3421219142573.
466
467
        15.2112831900548,
        18.350864533037,
468
469
        15.8751799822971,
470
        15.3921198799796,
471
        15.9729192868434,
        12.4728950178772,
472
473
        10.177050481096,
```

```
10.7342247355551,
475
       8.98846695631389,
476
       4.14671169124739,
477
       3.17256452697149,
478
       3.40036336968628
479 };
480
481 for (size_t i = 0; i < expected_wind_resource_vec_ms.size(); i++) {
482
       testFloatEquals(
483
           test_resources.resource_map_1D[wind_resource_key][i],
484
           expected_wind_resource_vec_ms[i],
485
           ___FILE___,
           __LINE_
486
487
488 }
489
490 // ====== END METHODS ======= //
491
492 }
      /* try */
493
494
495 catch (...) {
       printGold("
       printGold(" .....");
printRed("FAIL");
496
497
498
       std::cout « std::endl;
499
       throw;
500 }
501
502
503 printGold(" .... ");
504 printGreen("PASS");
505 std::cout « std::endl;
506 return 0;
507 }
      /* main() */
```

5.45 test/utils/testing_utils.cpp File Reference

Header file for various PGMcpp testing utilities.

```
#include "testing_utils.h"
Include dependency graph for testing_utils.cpp:
```



Functions

- void printGreen (std::string input_str)
 - A function that sends green text to std::cout.
- void printGold (std::string input str)

A function that sends gold text to std::cout.

- void printRed (std::string input_str)
 - A function that sends red text to std::cout.
- void testFloatEquals (double x, double y, std::string file, int line)

Tests for the equality of two floating point numbers x and y (to within FLOAT_TOLERANCE).

void testGreaterThan (double x, double y, std::string file, int line)

```
Tests if x > y.
```

• void testGreaterThanOrEqualTo (double x, double y, std::string file, int line)

```
Tests if x >= v
```

• void testLessThan (double x, double y, std::string file, int line)

```
Tests if x < y.
```

• void testLessThanOrEqualTo (double x, double y, std::string file, int line)

```
Tests if x \le y.
```

void testTruth (bool statement, std::string file, int line)

Tests if the given statement is true.

void expectedErrorNotDetected (std::string file, int line)

A utility function to print out a meaningful error message whenever an expected error fails to be thrown/caught/detected.

5.45.1 Detailed Description

Header file for various PGMcpp testing utilities.

This is a library of utility functions used throughout the various test suites.

5.45.2 Function Documentation

5.45.2.1 expectedErrorNotDetected()

A utility function to print out a meaningful error message whenever an expected error fails to be thrown/caught/detected.

Parameters

file	The file in which the test is applied (you should be able to just pass in "FILE").
line	The line of the file in which the test is applied (you should be able to just pass in "LINE").

```
432 {
433
        std::string error_str = "\n ERROR failed to throw expected error prior to line ";
        error_str += std::to_string(line);
error_str += " of ";
434
435
        error_str += file;
436
437
438
        #ifdef _WIN32
439
           std::cout « error_str « std::endl;
440
441
442
        throw std::runtime_error(error_str);
443
       /* expectedErrorNotDetected() */
444 }
```

5.45.2.2 printGold()

```
void printGold (
```

```
std::string input_str )
```

A function that sends gold text to std::cout.

Parameters

```
input_str The text of the string to be sent to std::cout.
```

5.45.2.3 printGreen()

A function that sends green text to std::cout.

Parameters

input_str The text of the string to be sent to std::cout.

5.45.2.4 printRed()

A function that sends red text to std::cout.

Parameters

```
input_str The text of the string to be sent to std::cout.
```

5.45.2.5 testFloatEquals()

```
void testFloatEquals ( double x,
```

```
double y,
std::string file,
int line )
```

Tests for the equality of two floating point numbers *x* and *y* (to within FLOAT_TOLERANCE).

Parameters

Х	The first of two numbers to test.
у	The second of two numbers to test.
file	The file in which the test is applied (you should be able to just pass in "FILE").
line	The line of the file in which the test is applied (you should be able to just pass in "LINE").

```
138 {
          if (fabs(x - y) <= FLOAT_TOLERANCE) {</pre>
139
140
141
142
         std::string error_str = "ERROR: testFloatEquals():\t in ";
error_str += file;
error_str += "\tline ";
143
144
145
          error_str += std::to_string(line);
error_str += ":\t\n";
146
147
          error_str += std::to_string(x);
error_str += " and ";
148
149
          error_str += std::to_string(y);
error_str += " are not equal to within +/- ";
150
151
         error_str += std::to_string(FLOAT_TOLERANCE);
error_str += "\n";
152
153
154
155
         #ifdef _WIN32
156
             std::cout « error_str « std::endl;
157
          #endif
158
159
          throw std::runtime_error(error_str);
160
161 } /* testFloatEquals() */
```

5.45.2.6 testGreaterThan()

Tests if x > y.

Parameters

X	The first of two numbers to test.
У	The second of two numbers to test.
file	The file in which the test is applied (you should be able to just pass in "FILE").
line	The line of the file in which the test is applied (you should be able to just pass in "LINE").

```
199
           error_str += std::to_string(line);
error_str += ":\t\n";
200
          error_str += std::to_string(x);
error_str += " is not greater than ";
error_str += std::to_string(y);
error_str += "\n";
201
202
203
204
205
206
          #ifdef _WIN32
207
                std::cout « error_str « std::endl;
           #endif
208
209
210
           throw std::runtime_error(error_str);
211
           return;
212 }
          /* testGreaterThan() */
```

5.45.2.7 testGreaterThanOrEqualTo()

Tests if x >= y.

Parameters

Х	The first of two numbers to test.
У	The second of two numbers to test.
file	The file in which the test is applied (you should be able to just pass in "FILE").
line	The line of the file in which the test is applied (you should be able to just pass in "LINE").

```
242 {
243
         if (x >= y) {
         return;
2.44
245
246
         std::string error_str = "ERROR: testGreaterThanOrEqualTo():\t in ";
         error_str += file;
error_str += "\tline ";
248
249
         error_str += std::to_string(line);
error_str += ":\t\n";
250
251
         error_str += std::to_string(x);
error_str += " is not greater than or equal to ";
252
253
         error_str += std::to_string(y);
error_str += "\n";
254
255
256
257
         #ifdef _WIN32
258
             std::cout « error_str « std::endl;
259
         #endif
260
261
         throw std::runtime_error(error_str);
262
         return;
/* testGreaterThanOrEqualTo() */
263 1
```

5.45.2.8 testLessThan()

Tests if x < y.

Parameters

Х	The first of two numbers to test.	
У	The second of two numbers to test.	
file	The file in which the test is applied (you should be able to just pass in "FILE").	
line	The line of the file in which the test is applied (you should be able to just pass in "LINE").	

```
293 {
294
          if (x < y) {
             return;
295
296
297
298
          std::string error_str = "ERROR: testLessThan():\t in ";
          error_str += file;
error_str += "\tline ";
299
300
          error_str += std::to_string(line);
error_str += ":\t\n";
301
302
         error_str += std::to_string(x);
error_str += " is not less than ";
error_str += std::to_string(y);
error_str += "\n";
303
304
305
306
307
308
309
               std::cout « error_str « std::endl;
310
          #endif
311
312
          throw std::runtime_error(error_str);
313
          return;
314 } /* testLessThan() */
```

5.45.2.9 testLessThanOrEqualTo()

Tests if $x \le y$.

Parameters

X	The first of two numbers to test.	
У	The second of two numbers to test.	
file	The file in which the test is applied (you should be able to just pass in "FILE").	
line	The line of the file in which the test is applied (you should be able to just pass in "LINE").	

```
344 {
345
         if (x \le y) {
        return;
346
347
348
        std::string error_str = "ERROR: testLessThanOrEqualTo():\t in ";
349
350
         error_str += file;
         error_str += "\tline ";
351
        error_str += std::to_string(line);
error_str += ":\t\n";
352
353
        error_str += std::to_string(x);
error_str += " is not less than or equal to ";
354
355
        error_str += std::to_string(y);
error_str += "\n";
356
357
358
        #ifdef _WIN32
359
360
            std::cout « error_str « std::endl;
361
        #endif
362
        throw std::runtime_error(error_str);
```

```
364    return;
365 }    /* testLessThanOrEqualTo() */
```

5.45.2.10 testTruth()

Tests if the given statement is true.

Parameters


statement The statement whose truth is to be tested ("1 == 0", for example).	
file	The file in which the test is applied (you should be able to just pass in "FILE").
line	The line of the file in which the test is applied (you should be able to just pass in "LINE").

```
393
          if (statement) {
394
395
396
397
         std::string error_str = "ERROR: testTruth():\t in ";
         error_str += file;
error_str += "\tline ";
398
399
         error_str += std::to_string(line);
error_str += ":\t\n";
error_str += "Given statement is not true";
400
401
402
403
404
         #ifdef _WIN32
405
              std::cout « error_str « std::endl;
          #endif
406
407
408
         throw std::runtime_error(error_str);
409
          return;
410 }
         /* testTruth() */
```

5.46 test/utils/testing_utils.h File Reference

Header file for various PGMcpp testing utilities.

```
#include "../../header/std_includes.h"
Include dependency graph for testing_utils.h:
```



This graph shows which files directly or indirectly include this file:



Macros

• #define FLOAT_TOLERANCE 1e-6

A tolerance for application to floating point equality tests.

Functions

• void printGreen (std::string)

A function that sends green text to std::cout.

void printGold (std::string)

A function that sends gold text to std::cout.

void printRed (std::string)

A function that sends red text to std::cout.

void testFloatEquals (double, double, std::string, int)

Tests for the equality of two floating point numbers x and y (to within FLOAT_TOLERANCE).

void testGreaterThan (double, double, std::string, int)

Tests if x > y.

void testGreaterThanOrEqualTo (double, double, std::string, int)

```
Tests if x >= y.
```

• void testLessThan (double, double, std::string, int)

Tests if x < y.

void testLessThanOrEqualTo (double, double, std::string, int)

```
Tests if x \le y.
```

void testTruth (bool, std::string, int)

Tests if the given statement is true.

void expectedErrorNotDetected (std::string, int)

A utility function to print out a meaningful error message whenever an expected error fails to be thrown/caught/detected.

5.46.1 Detailed Description

Header file for various PGMcpp testing utilities.

This is a library of utility functions used throughout the various test suites.

5.46.2 Macro Definition Documentation

5.46.2.1 FLOAT TOLERANCE

```
#define FLOAT_TOLERANCE 1e-6
```

A tolerance for application to floating point equality tests.

5.46.3 Function Documentation

5.46.3.1 expectedErrorNotDetected()

A utility function to print out a meaningful error message whenever an expected error fails to be thrown/caught/detected.

Parameters

file	The file in which the test is applied (you should be able to just pass in "FILE").	
line	The line of the file in which the test is applied (you should be able to just pass in "LINE").	

```
432 {
      433
      error_str += std::to_string(line);
error_str += " of ";
434
435
436
      error_str += file;
437
     #ifdef _WIN32
438
439
         std::cout « error_str « std::endl;
440
441
442
     throw std::runtime_error(error_str);
443
444 } /* expectedErrorNotDetected() */
```

5.46.3.2 printGold()

A function that sends gold text to std::cout.

Parameters

```
input_str The text of the string to be sent to std::cout.
```

5.46.3.3 printGreen()

A function that sends green text to std::cout.

Parameters

```
input_str The text of the string to be sent to std::cout.
```

```
64 {
65     std::cout « "\x1B[32m" « input_str « "\033[0m";
66     return;
67 } /* printGreen() */
```

5.46.3.4 printRed()

```
void printRed (
```

```
std::string input_str )
```

A function that sends red text to std::cout.

Parameters

```
input_str The text of the string to be sent to std::cout.
```

5.46.3.5 testFloatEquals()

Tests for the equality of two floating point numbers *x* and *y* (to within FLOAT_TOLERANCE).

Parameters

Х	The first of two numbers to test.	
У	The second of two numbers to test.	
file	The file in which the test is applied (you should be able to just pass in "FILE").	
line	The line of the file in which the test is applied (you should be able to just pass in "LINE").	

```
138 {
          if (fabs(x - y) <= FLOAT_TOLERANCE) {</pre>
139
140
               return;
141
143
         std::string error_str = "ERROR: testFloatEquals():\t in ";
         error_str += file;
error_str += "\tline ";
144
145
          error_str += std::to_string(line);
146
147
         error_str += ":\t\n";
         error_str += std::to_string(x);
error_str += " and ";
148
149
         error_str += std::to_string(y);
error_str += " are not equal to within +/- ";
error_str += std::to_string(FLOAT_TOLERANCE);
150
151
152
         error_str += "\n";
153
154
155
         #ifdef _WIN32
156
157
         std::cout « error_str « std::endl;
#endif
158
159
         throw std::runtime_error(error_str);
          return;
161 } /* testFloatEquals() */
```

5.46.3.6 testGreaterThan()

```
void testGreaterThan ( double x,
```

```
double y,
std::string file,
int line )
```

Tests if x > y.

Parameters

X	The first of two numbers to test.	
У	The second of two numbers to test.	
file	The file in which the test is applied (you should be able to just pass in "FILE").	
line	The line of the file in which the test is applied (you should be able to just pass in "LINE").	

```
191 {
192
           if (x > y) {
193
              return;
194
195
          std::string error_str = "ERROR: testGreaterThan():\t in ";
error_str += file;
error_str += "\tline ";
196
197
198
          error_str += std::to_string(line);
error_str += ":\t\n";
199
200
          error_str += std::to_string(x);
error_str += " is not greater than ";
error_str += std::to_string(y);
error_str += "\n";
201
202
203
204
205
206
          #ifdef _WIN32
          std::cout « error_str « std::endl;
#endif
207
208
209
210
          throw std::runtime_error(error_str);
211
           return;
212 }
          /* testGreaterThan() */
```

5.46.3.7 testGreaterThanOrEqualTo()

Tests if $x \ge y$.

Parameters

Х	The first of two numbers to test.	
У	The second of two numbers to test.	
file	The file in which the test is applied (you should be able to just pass in "FILE").	
line	The line of the file in which the test is applied (you should be able to just pass in "LINE").	

```
error_str += std::to_string(x);
error_str += " is not greater than or equal to ";
error_str += std::to_string(y);
error_str += "\n";
252
253
254
255
256
          #ifdef _WIN32
257
258
              std::cout « error_str « std::endl;
259
          #endif
260
261
          throw std::runtime_error(error_str);
262
          return:
263 }
         /* testGreaterThanOrEqualTo() */
```

5.46.3.8 testLessThan()

Tests if x < y.

Parameters

X	The first of two numbers to test.	
У	The second of two numbers to test.	
file	The file in which the test is applied (you should be able to just pass in "FILE").	
line	The line of the file in which the test is applied (you should be able to just pass in "LINE").	

```
293 {
          if (x < y) {
294
295
               return;
296
297
          std::string error_str = "ERROR: testLessThan():\t in ";
298
299
          error_str += file;
error_str += "\tline ";
300
          error_str += std::to_string(line);
error_str += ":\t\n";
301
302
         error_str += std::to_string(x);
error_str += " is not less than ";
error_str += std::to_string(y);
error_str += "\n";
303
304
305
306
307
308
          #ifdef _WIN32
309
               std::cout « error_str « std::endl;
310
          #endif
311
312
          throw std::runtime_error(error_str);
313
          return;
314 }
          /* testLessThan() */
```

5.46.3.9 testLessThanOrEqualTo()

Tests if $x \le y$.

Parameters

Х	The first of two numbers to test.	
У	The second of two numbers to test.	
file	The file in which the test is applied (you should be able to just pass in "FILE").	
line	The line of the file in which the test is applied (you should be able to just pass in "LINE").	

```
344 {
345
          if (x <= y) {
             return;
346
347
348
          std::string error_str = "ERROR: testLessThanOrEqualTo():\t in ";
349
          error_str += file;
error_str += "\tline ";
350
351
          error_str += std::to_string(line);
error_str += ":\t\n";
352
353
         error_str += std::to_string(x);
error_str += " is not less than or equal to ";
error_str += std::to_string(y);
error_str += "\n";
354
355
356
357
358
359
360
               std::cout « error_str « std::endl;
361
         #endif
362
363
          throw std::runtime_error(error_str);
364
          return;
365 }
         /* testLessThanOrEqualTo() */
```

5.46.3.10 testTruth()

Tests if the given statement is true.

Parameters

statement The statement whose truth is to be tested ("1 == 0", for example).		
file The file in which the test is applied (you should be able to just pass in "FILE").		The file in which the test is applied (you should be able to just pass in "FILE").
	line	The line of the file in which the test is applied (you should be able to just pass in "LINE").

```
392 {
393
         if (statement) {
394
              return;
395
396
397
         std::string error_str = "ERROR: testTruth():\t in ";
         error_str += file;
error_str += "\tline ";
398
399
         error_str += std::to_string(line);
error_str += ":\t\n";
error_str += "Given statement is not true";
400
401
402
403
         #ifdef _WIN32
404
405
            std::cout « error_str « std::endl;
406
         #endif
407
408
         throw std::runtime_error(error_str);
409
          return:
         /* testTruth() */
410 }
```

Bibliography

- Dr. B. Buckham, Dr. C. Crawford, Dr. I. Beya Marshall, and Dr. B. Whitby. Wei Wai Kum Tidal Prefeasibility Study Tidal Resource Assessment. Technical report, PRIMED, 2023. Internal: P2202E_BRKLYG+WEI WAI KUM R01 V20230613v3. 94
- HOMER. Discount Factor, 2023a. URL https://www.homerenergy.com/products/pro/docs/ latest/discount_factor.html. 57
- HOMER. Fuel Curve, 2023b. URL https://www.homerenergy.com/products/pro/docs/latest/ fuel_curve.html. 28
- HOMER. Generator Fuel Curve Intercept Coefficient, 2023c. URL https://www.homerenergy.com/
 products/pro/docs/latest/generator_fuel_curve_intercept_coefficient.html.
 28
- HOMER. Generator Fuel Curve Slope, 2023d. URL https://www.homerenergy.com/products/pro/docs/latest/generator_fuel_curve_slope.html. 28
- HOMER. How HOMER Calculates the PV Array Power Output, 2023e. URL https://www.homerenergy.
 com/products/pro/docs/latest/how_homer_calculates_the_pv_array_power_
 output.html. 85
- HOMER. Real Discount Rate, 2023f. URL https://www.homerenergy.com/products/pro/docs/ latest/real_discount_rate.html. 57
- Dr. S.L. MacDougall. Commercial Potential of Marine Renewables in British Columbia. Technical report, S.L. MacDougall Research & Consulting, 2019. Submitted to Natural Resources Canada. 96, 107, 108
- Dr. B. Robertson, Dr. H. Bailey, M. Leary, and Dr. B. Buckham. A methodology for architecture agnostic and time flexible representations of wave energy converter performance. *Applied Energy*, 287, 2021. doi:10.1016/j.apenergy.2021.116588. 106

210 BIBLIOGRAPHY

Index

checkInputs	getRenewableProduction
Combustion, 10	Controller, 19
Diesel, 25	handleReplacement
Model, 47	Production, 57
Production, 56	handleStartStop
Renewable, 67	Diesel, 29
Solar, 84	Renewable, 67
Tidal, 93	readSolarResource
Wave, 104	Resources, 74
Wind, 116	readTidalResource
checkResourceKey1D	Resources, 75
Resources, 72	readWaveResource
checkResourceKey2D	Resources, 76
Resources, 73	readWindResource
checkTimePoint	Resources, 77
Resources, 74	throwLengthError
computeCubicProductionkW	Resources, 78
Tidal, 93	\sim Combustion
computeExponentialProductionkW	Combustion, 10
Tidal, 94	\sim Controller
Wind, 116	Controller, 18
computeGaussianProductionkW	\sim Diesel
Wave, 104	Diesel, 25
computeLookupProductionkW	\sim ElectricalLoad
 Tidal, 95	ElectricalLoad, 38
Wave, 105	\sim Lilon
Wind, 117	Lilon, 44
computeNetLoad	\sim Model
Controller, 18	Model, 46
computeParaboloidProductionkW	\sim Production
Wave, 105	Production, 56
computeRealDiscountAnnual	\sim Renewable
Production, 57	Renewable, 67
getGenericCapitalCost	\sim Resources
Diesel, 27	Resources, 72
Solar, 84	\sim Solar
Tidal, 95	Solar, 83
Wave, 107	\sim Storage
Wind, 118	Storage, 89
getGenericFuelIntercept	\sim Tidal
Diesel, 27	Tidal, 93
getGenericFuelSlope	\sim Wave
Diesel, 28	Wave, 103
getGenericOpMaintCost	\sim Wind
Diesel, 28	Wind, 116
Solar, 84	,
Tidal, 96	addDiesel
Wave, 107	Model, 47
Wind, 118	addResource
,	Model, 47

D	Octoberation 0
Resources, 79	Combustion, 9
addSolar	commit, 11
Model, 48 addTidal	fuel_consumption_vec_L, 14
Model, 48	fuel_cost_L, 14 fuel_cost_vec, 14
addWave	getEmissionskg, 12
Model, 48	getFuelConsumptionL, 12
addWind	linear_fuel_intercept_LkWh, 14
Model, 49	linear_fuel_slope_LkWh, 14
applyDispatchControl	NOx emissions intensity kgL, 15
Controller, 20	NOx emissions vec kg, 15
Controller, 20	PM_emissions_intensity_kgL, 15
capacity_kW	PM_emissions_vec_kg, 15
Production, 59	requestProductionkW, 13
ProductionInputs, 63	SOx_emissions_intensity_kgL, 15
capital_cost	SOx_emissions_vec_kg, 15
Diesellnputs, 33	type, 16
Production, 59	Combustion.h
SolarInputs, 87	CombustionType, 127
TidalInputs, 100	DIESEL, 129
WaveInputs, 112	N COMBUSTION TYPES, 129
WindInputs, 122	combustion_inputs
capital_cost_vec	DieselInputs, 34
Production, 59	combustion_ptr_vec
CH4_emissions_intensity_kgL	Model, 50
Combustion, 13	CombustionInputs, 16
DieselInputs, 33	production_inputs, 17
CH4_emissions_vec_kg	CombustionType
Combustion, 13	Combustion.h, 127
CH4_kg	commit
Emissions, 41	Combustion, 11
clear	Diesel, 30
Controller, 21	Production, 58
ElectricalLoad, 38	Renewable, 68
Model, 49	Solar, 84
Resources, 80	Tidal, 96
CO2_emissions_intensity_kgL	Wave, 108
Combustion, 13	Wind, 118
Diesellnputs, 34	computeProductionkW
CO2_emissions_vec_kg	Renewable, 69
Combustion, 13	Solar, 85
CO2_kg	Tidal, 97
Emissions, 42	Wave, 109
CO_emissions_intensity_kgL	Wind, 119
Combustion, 13	control_mode
Diesellnputs, 34	Controller, 22
CO_emissions_vec_kg	ModelInputs, 52
Combustion, 14	Controller, 17
CO_kg	computeNetLoad, 18
Emissions, 42	getRenewableProduction, 19
Combustion, 7	\sim Controller, 18
checkInputs, 10	applyDispatchControl, 20
~Combustion, 10	clear, 21
CH4_emissions_intensity_kgL, 13 CH4_emissions_vec_kg, 13	control_mode, 22
CO2_emissions_intensity_kgL, 13	Controller, 18
CO2_emissions_intensity_kgL, 13 CO2_emissions_vec_kg, 13	init, 21
CO_emissions_intensity_kgL, 13	net_load_vec_kW, 22
CO_emissions_vec_kg, 14	controller
00_611113310113_V60_kg, 14	

Model, 50	dispatch_vec_kW
Controller.h	Production, 59
ControlMode, 124	dt_vec_hrs
CYCLE_CHARGING, 124	ElectricalLoad, 39
LOAD FOLLOWING, 124	
N CONTROL MODES, 124	electrical_load
ControlMode	Model, 51
Controller.h, 124	ElectricalLoad, 36
curtailment_vec_kW	\sim ElectricalLoad, 38
Production, 59	clear, 38
	dt_vec_hrs, 39
CYCLE_CHARGING	ElectricalLoad, 37
Controller.h, 124	load_vec_kW, 40
derating	max_load_kW, 40
Solar, 86	
SolarInputs, 88	mean_load_kW, 40
•	min_load_kW, 40
design_energy_period_s	n_points, 40
Wave, 110	n_years, 40
WaveInputs, 112	path_2_electrical_load_time_series, 40
design_significant_wave_height_m	readLoadData, 38
Wave, 110	time_vec_hrs, 41
WaveInputs, 112	Emissions, 41
design_speed_ms	CH4_kg, 41
Tidal, 98	CO2_kg, 42
TidalInputs, 100	CO_kg, 42
Wind, 120	NOx_kg, 42
WindInputs, 122	PM_kg, 42
DIESEL	SOx_kg, 42
Combustion.h, 129	expectedErrorNotDetected
Diesel, 22	testing_utils.cpp, 196
checkInputs, 25	,
getGenericCapitalCost, 27	testing_utils.h, 203
· ·	FLOAT_TOLERANCE
getGenericFuelIntercept, 27	
getGenericFuelSlope, 28	testing_utils.h, 203
getGenericOpMaintCost, 28	fuel_consumption_vec_L
_handleStartStop, 29	Combustion, 14
\sim Diesel, 25	fuel_cost_L
commit, 30	Combustion, 14
Diesel, 24	DieselInputs, 34
minimum_load_ratio, 31	fuel_cost_vec
minimum_runtime_hrs, 31	Combustion, 14
requestProductionkW, 30	
time_since_last_start_hrs, 31	getEmissionskg
DieselInputs, 32	Combustion, 12
capital_cost, 33	getFuelConsumptionL
CH4_emissions_intensity_kgL, 33	Combustion, 12
CO2_emissions_intensity_kgL, 34	
CO_emissions_intensity_kgL, 34	header/Controller.h, 123
combustion_inputs, 34	header/ElectricalLoad.h, 124
fuel_cost_L, 34	header/Model.h, 125
linear_fuel_intercept_LkWh, 34	header/Production/Combustion/Combustion.h, 126
_ · _	header/Production/Combustion/Diesel.h, 129
linear_fuel_slope_LkWh, 34	header/Production/Production.h, 130
minimum_load_ratio, 35	header/Production/Renewable/Renewable.h, 131
minimum_runtime_hrs, 35	header/Production/Renewable/Solar.h, 132
NOx_emissions_intensity_kgL, 35	header/Production/Renewable/Tidal.h, 133
operation_maintenance_cost_kWh, 35	header/Production/Renewable/Wave.h, 134
PM_emissions_intensity_kgL, 35	header/Production/Renewable/Wind.h, 136
replace_running_hrs, 36	header/Resources.h, 137
SOx_emissions_intensity_kgL, 36	Headel/Hesources.H, 13/

header/std_includes.h, 138	\sim Model, 46
header/Storage/Lilon.h, 139	addDiesel, 47
header/Storage/Storage.h, 140	addResource, 47
	addSolar, 48
init	addTidal, 48
Controller, 21	addWave, 48
is_running	addWind, 49
Production, 60	clear, 49
is_running_vec	combustion_ptr_vec, 50
Production, 60	controller, 50
is_sunk	electrical_load, 51
Production, 60	Model, 46
ProductionInputs, 63	renewable_ptr_vec, 51
	reset, 49
levellized_cost_of_energy_kWh	resources, 51
Production, 60	run, 50
Lilon, 43	storage_ptr_vec, 51
\sim Lilon, 44	ModelInputs, 51
Lilon, 44	control mode, 52
linear_fuel_intercept_LkWh	path_2_electrical_load_time_series, 52
Combustion, 14	pati1_2_0100ti10a1_10a0_ti1110_001100; 02
DieselInputs, 34	N COMBUSTION TYPES
linear_fuel_slope_LkWh	Combustion.h, 129
Combustion, 14	N CONTROL MODES
DieselInputs, 34	Controller.h, 124
LOAD_FOLLOWING	n_points
Controller.h, 124	ElectricalLoad, 40
load_vec_kW	Production, 60
ElectricalLoad, 40	N RENEWABLE TYPES
_1001.1001.2003, 10	Renewable.h, 132
main	n_replacements
test_Combustion.cpp, 150	_ ·
test Controller.cpp, 179	Production, 60
test Diesel.cpp, 152	n_starts
test ElectricalLoad.cpp, 181	Production, 61
test_Lilon.cpp, 177	N_TIDAL_POWER_PRODUCTION_MODELS
test Model.cpp, 183	Tidal.h, 134
test Production.cpp, 174	N_WAVE_POWER_PRODUCTION_MODELS
test_Renewable.cpp, 157	Wave.h, 135
test_Resources.cpp, 189	N_WIND_POWER_PRODUCTION_MODELS
test_Solar.cpp, 159	Wind.h, 137
test_Storage.cpp, 178	n_years
test Tidal.cpp, 163	ElectricalLoad, 40
test Wave.cpp, 167	net_load_vec_kW
test_Wind.cpp, 170	Controller, 22
max_load_kW	net_present_cost
ElectricalLoad, 40	Production, 61
mean_load_kW	nominal_discount_annual
	ProductionInputs, 63
ElectricalLoad, 40	nominal_inflation_annual
min_load_kW	ProductionInputs, 64
ElectricalLoad, 40	NOx_emissions_intensity_kgL
minimum_load_ratio	Combustion, 15
Diesel, 31	DieselInputs, 35
Diesellnputs, 35	NOx_emissions_vec_kg
minimum_runtime_hrs	Combustion, 15
Diesel, 31	NOx_kg
DieselInputs, 35	Emissions, 42
Model, 44	
checkInputs, 47	operation_maintenance_cost_kWh

Discollanuta 25	n storto 61
Diesellnputs, 35	n_starts, 61
Production, 61	net_present_cost, 61
SolarInputs, 88	operation_maintenance_cost_kWh, 61
TidalInputs, 100	operation_maintenance_cost_vec, 61
WaveInputs, 112	print_flag, 61
WindInputs, 122	Production, 55
operation_maintenance_cost_vec	production_vec_kW, 61
Production, 61	real_discount_annual, 62
and O destrict lend the conice	replace_running_hrs, 62
path_2_electrical_load_time_series	running_hours, 62
ElectricalLoad, 40	storage_vec_kW, 62
ModelInputs, 52	type_str, 62
path_map_1D	production_inputs
Resources, 80	CombustionInputs, 17
path_map_2D	RenewableInputs, 70
Resources, 80	production_vec_kW
PM_emissions_intensity_kgL	Production, 61
Combustion, 15	ProductionInputs, 63
DieselInputs, 35	capacity_kW, 63
PM_emissions_vec_kg	is_sunk, 63
Combustion, 15	nominal_discount_annual, 63
PM kg	nominal inflation annual, 64
Emissions, 42	print_flag, 64
power_model	replace running hrs, 64
Tidal, 98	
TidalInputs, 100	PYBIND11_MODULE
Wave, 110	PYBIND11_PGM.cpp, 141
WaveInputs, 112	PYBIND11_PGM.cpp
Wind, 120	PYBIND11_MODULE, 141
WindInputs, 122	pybindings/PYBIND11_PGM.cpp, 140
•	readLoadData
print_flag	
Production, 61	ElectricalLoad, 38
ProductionInputs, 64	real_discount_annual
printGold	Production, 62
testing_utils.cpp, 196	Renewable, 65
testing_utils.h, 204	checkInputs, 67
printGreen	handleStartStop, 67
testing_utils.cpp, 197	\sim Renewable, 67
testing_utils.h, 204	commit, 68
printRed	computeProductionkW, 69
testing_utils.cpp, 197	Renewable, 66
testing_utils.h, 204	resource_key, 69
Production, 53	type, 69
checkInputs, 56	Renewable.h
computeRealDiscountAnnual, 57	N_RENEWABLE_TYPES, 132
handleReplacement, 57	RenewableType, 131
∼Production, 56	SOLAR, 132
capacity_kW, 59	TIDAL, 132
capital_cost, 59	WAVE, 132
capital_cost_vec, 59	WIND, 132
commit, 58	renewable_inputs
curtailment_vec_kW, 59	SolarInputs, 88
dispatch_vec_kW, 59	TidalInputs, 100
is_running, 60	WaveInputs, 113
is_running_vec, 60	WindInputs, 122
is_sunk, 60	renewable_ptr_vec
	Model, 51
levellized_cost_of_energy_kWh, 60	
n_points, 60	RenewableInputs, 70
n_replacements, 60	production_inputs, 70

RenewableType	operation_maintenance_cost_kWh, 88
Renewable.h, 131	renewable_inputs, 88
replace_running_hrs	resource_key, 88
DieselInputs, 36	source/Controller.cpp, 142
Production, 62	source/ElectricalLoad.cpp, 143
ProductionInputs, 64	source/Model.cpp, 143
requestProductionkW	source/Production/Combustion/Combustion.cpp, 144
Combustion, 13	source/Production/Combustion/Diesel.cpp, 144
Diesel, 30	source/Production/Production.cpp, 145
reset	source/Production/Renewable/Renewable.cpp, 145
Model, 49	source/Production/Renewable/Solar.cpp, 146
resource_key	source/Production/Renewable/Tidal.cpp, 146
Renewable, 69	source/Production/Renewable/Wave.cpp, 147
SolarInputs, 88	source/Production/Renewable/Wind.cpp, 147
TidalInputs, 100	source/Resources.cpp, 148
WaveInputs, 113	source/Storage/Lilon.cpp, 148
WindInputs, 122	source/Storage/Storage.cpp, 149
resource_map_1D	SOx_emissions_intensity_kgL
Resources, 80	Combustion, 15
resource_map_2D	DieselInputs, 36
Resources, 80	SOx_emissions_vec_kg
Resources, 71	Combustion, 15
checkResourceKey1D, 72	SOx_kg
checkResourceKey2D, 73	Emissions, 42
checkTimePoint, 74	Storage, 89
readSolarResource, 74	~Storage, 89
readTidalResource, 75	Storage, 89
readWaveResource, 76	storage_ptr_vec
readWindResource, 77	Model, 51
throwLengthError, 78	storage_vec_kW
~Resources, 72	Production, 62
addResource, 79	test/source/Production/Combustion/test_Combustion.cpp,
clear, 80	149
path_map_1D, 80	test/source/Production/Combustion/test_Diesel.cpp,
path_map_2D, 80 resource_map_1D, 80	151
resource_map_1D, 80	test/source/Production/Renewable/test Renewable.cpp,
Resources, 72	157
resources	test/source/Production/Renewable/test_Solar.cpp, 158
Model, 51	test/source/Production/Renewable/test_Tidal.cpp, 162
run	test/source/Production/Renewable/test_Wave.cpp, 166
Model, 50	test/source/Production/Renewable/test_Wind.cpp, 170
running_hours	test/source/Production/test_Production.cpp, 173
Production, 62	test/source/Storage/test_Lilon.cpp, 176
1 100001011, 02	test/source/Storage/test_Storage.cpp, 177
SOLAR	test/source/test_Controller.cpp, 178
Renewable.h, 132	test/source/test_ElectricalLoad.cpp, 180
Solar, 81	test/source/test_Model.cpp, 183
checkInputs, 84	test/source/test_Resources.cpp, 189
getGenericCapitalCost, 84	test/utils/testing_utils.cpp, 195
getGenericOpMaintCost, 84	test/utils/testing_utils.h, 202
\sim Solar, 83	test_Combustion.cpp
commit, 84	main, 150
computeProductionkW, 85	test_Controller.cpp
derating, 86	main, 179
Solar, 82, 83	test_Diesel.cpp
SolarInputs, 86	main, 152
capital_cost, 87	test_ElectricalLoad.cpp
derating, 88	main, 181

test_Lilon.cpp	testTruth
main, 177	testing_utils.cpp, 202
test_Model.cpp	testing_utils.h, 208
main, 183	TIDAL
test_Production.cpp	Renewable.h, 132
main, 174	Tidal, 90
test_Renewable.cpp	checkInputs, 93
main, 157	computeCubicProductionkW, 93
test_Resources.cpp	computeExponentialProductionkW, 94
main, 189	computeLookupProductionkW, 95
test_Solar.cpp	getGenericCapitalCost, 95
main, 159	getGenericOpMaintCost, 96
test_Storage.cpp	\sim Tidal, 93
main, 178	commit, 96
test_Tidal.cpp	computeProductionkW, 97
main, 163	design_speed_ms, 98
test_Wave.cpp	power_model, 98
main, 167	Tidal, 92
test_Wind.cpp	Tidal.h
main, 170	N_TIDAL_POWER_PRODUCTION_MODELS,
testFloatEquals	134
testing_utils.cpp, 197	TIDAL_POWER_CUBIC, 134
testing_utils.h, 205	TIDAL_POWER_EXPONENTIAL, 134
testGreaterThan	TIDAL_POWER_LOOKUP, 134
testing_utils.cpp, 198	TidalPowerProductionModel, 134
testing_utils.h, 205	TIDAL_POWER_CUBIC
testGreaterThanOrEqualTo	Tidal.h, 134
testing_utils.cpp, 199	TIDAL_POWER_EXPONENTIAL
testing_utils.h, 206	Tidal.h, 134
testing_utils.cpp	TIDAL_POWER_LOOKUP
expectedErrorNotDetected, 196	Tidal.h, 134
printGold, 196	TidalInputs, 99
printGreen, 197	capital_cost, 100
printRed, 197	design_speed_ms, 100
testFloatEquals, 197	operation_maintenance_cost_kWh, 100
testGreaterThan, 198	power_model, 100
testGreaterThanOrEqualTo, 199	renewable_inputs, 100
testLessThan, 199	resource_key, 100
testLessThanOrEqualTo, 201	TidalPowerProductionModel
testTruth, 202	Tidal.h, 134
testing_utils.h	time_since_last_start_hrs
expectedErrorNotDetected, 203	Diesel, 31
FLOAT_TOLERANCE, 203	time_vec_hrs
printGold, 204	ElectricalLoad, 41
printGreen, 204	type
printRed, 204	Combustion, 16
testFloatEquals, 205	Renewable, 69
testGreaterThan, 205	type_str
testGreaterThanOrEqualTo, 206	Production, 62
testLessThan, 207	WAVE
testLessThanOrEqualTo, 207	Renewable.h, 132
testTruth, 208	Wave, 101
testLessThan	checkInputs, 104
testing_utils.cpp, 199	computeGaussianProductionkW, 104
testing_utils.h, 207	computeCaussian TodactionkW, 104 computeLookupProductionkW, 105
testLessThanOrEqualTo	computeParaboloidProductionkW, 105
testing_utils.cpp, 201	computer anabolidar roduction kw, ros getGenericCapitalCost, 107
testing_utils.h, 207	getGenericOpMaintCost, 107
	gotGononoopmant000t, 107

```
\simWave, 103
                                                      renewable_inputs, 122
    commit, 108
                                                      resource key, 122
    computeProductionkW, 109
                                                 WindPowerProductionModel
    design_energy_period_s, 110
                                                      Wind.h, 137
    design_significant_wave_height_m, 110
    power model, 110
    Wave, 102, 103
Wave.h
    N WAVE POWER PRODUCTION MODELS,
        135
    WAVE POWER GAUSSIAN, 135
    WAVE_POWER_LOOKUP, 135
    WAVE_POWER_PARABOLOID, 135
    WavePowerProductionModel, 135
WAVE_POWER_GAUSSIAN
    Wave.h, 135
WAVE POWER LOOKUP
    Wave.h. 135
WAVE POWER PARABOLOID
    Wave.h, 135
WaveInputs, 111
    capital cost, 112
    design_energy_period_s, 112
    design_significant_wave_height_m, 112
    operation_maintenance_cost_kWh, 112
    power_model, 112
    renewable_inputs, 113
    resource key, 113
WavePowerProductionModel
    Wave.h, 135
WIND
    Renewable.h, 132
Wind, 113
    __checkInputs, 116
    __computeExponentialProductionkW, 116
    __computeLookupProductionkW, 117
    __getGenericCapitalCost, 118
      _getGenericOpMaintCost, 118
    \simWind, 116
    commit, 118
    computeProductionkW, 119
    design_speed_ms, 120
    power_model, 120
    Wind, 115
Wind.h
    N_WIND_POWER_PRODUCTION_MODELS, 137
    WIND_POWER_EXPONENTIAL, 137
    WIND POWER LOOKUP, 137
    WindPowerProductionModel, 137
WIND_POWER_EXPONENTIAL
    Wind.h, 137
WIND POWER LOOKUP
    Wind.h. 137
WindInputs, 121
    capital_cost, 122
    design speed ms, 122
    operation_maintenance_cost_kWh, 122
    power_model, 122
```