Mandatory Physical Calibration Guide

DO NOT PRINT THE FULL ENCLOSURE YET.
PRINT AND COMPLETE THE CALIBRATION PARTS FIRST.

Use the same material, nozzle, layer height, wall count, extrusion settings, bed preparation, and chamber temperature that you will use for the enclosure.

Print first

Print these exact files from `CALIBRATION_PARTS/`:

1. `coupon_official_interface.3mf`
2. `coupon_heat_set_insert.3mf`
3. `coupon_active_driver.3mf`
4. `coupon_passive_radiator.3mf`
5. `coupon_gasket_base.3mf`
6. `coupon_gasket_cap.3mf`
7. `coupon_cable_passage.3mf`
8. `cable_gland.3mf` in TPU 95A

ASA baseline: 0.4 mm nozzle, 0.20 mm layers, five walls, six top/bottom layers, 35% gyroid, 100-110 C bed, 250-260 C nozzle, enclosure closed, no supports, 5 mm brim. PETG alternative: 235-250 C nozzle, 75-85 C bed, three-hour dry cycle if stringing is present.

Measure and enter values

Use the engraved labels and `IMAGES/calibration_*.png`.

Check	Where/how	Nominal	Pass	Input key
XY scale	Inside jaws across \`MEASURE XY 110.60\` recess, three heights	110.60 mm	110.40-110.80 mm after correction	\`xy_scale_correction_fraction = 110.60 / measured - 1\`
Z scale	Outside jaws across clean 3.00 mm coupon edge, four corners	3.00 mm	2.90-3.10 mm	\`z_scale_correction_fraction = 3.00 / measured - 1\`
M3 clearance	Try a clean ISO M3 screw in labeled 3.4/3.5/3.6 holes	3.4 mm	smallest hole that falls through without force	chosen diameter minus 3.4
Insert bore	Install identical inserts in 4.0/4.1/4.2/4.3 blind bores	4.2 mm	square, flush, no crack/spin at 0.35 N m	chosen diameter minus 4.2
Driver fit	Seat the purchased ND91-4 in the labeled coupon	catalog interface	drops in by hand, <=0.30 mm radial play, flange lies flat	cutout correction and measured flange thickness
Radiator fit	Seat one SB12PACR-00 in the labeled coupon	catalog interface	drops in by hand, <=0.30 mm radial play, flange lies flat	cutout correction and measured flange thickness
Gasket	Tighten cap on a strip of the actual sheet until both stops contact	2.00 to 1.50 mm	15%-45% compression; no open light path	sheet thickness and compressed-thickness offset

Check	Where/how	Nominal	Pass	Input key
Cable gland	Fit actual two 22 AWG conductors and gland in cable coupon	8.0 mm passage	moderate finger force; gland cannot rotate or lift	cable-passage offset

Do not use caliper tips to measure a 3-4 mm hole; the screw and insert are the functional gauges. Enter only values you measured.

CAD measurement illustrations

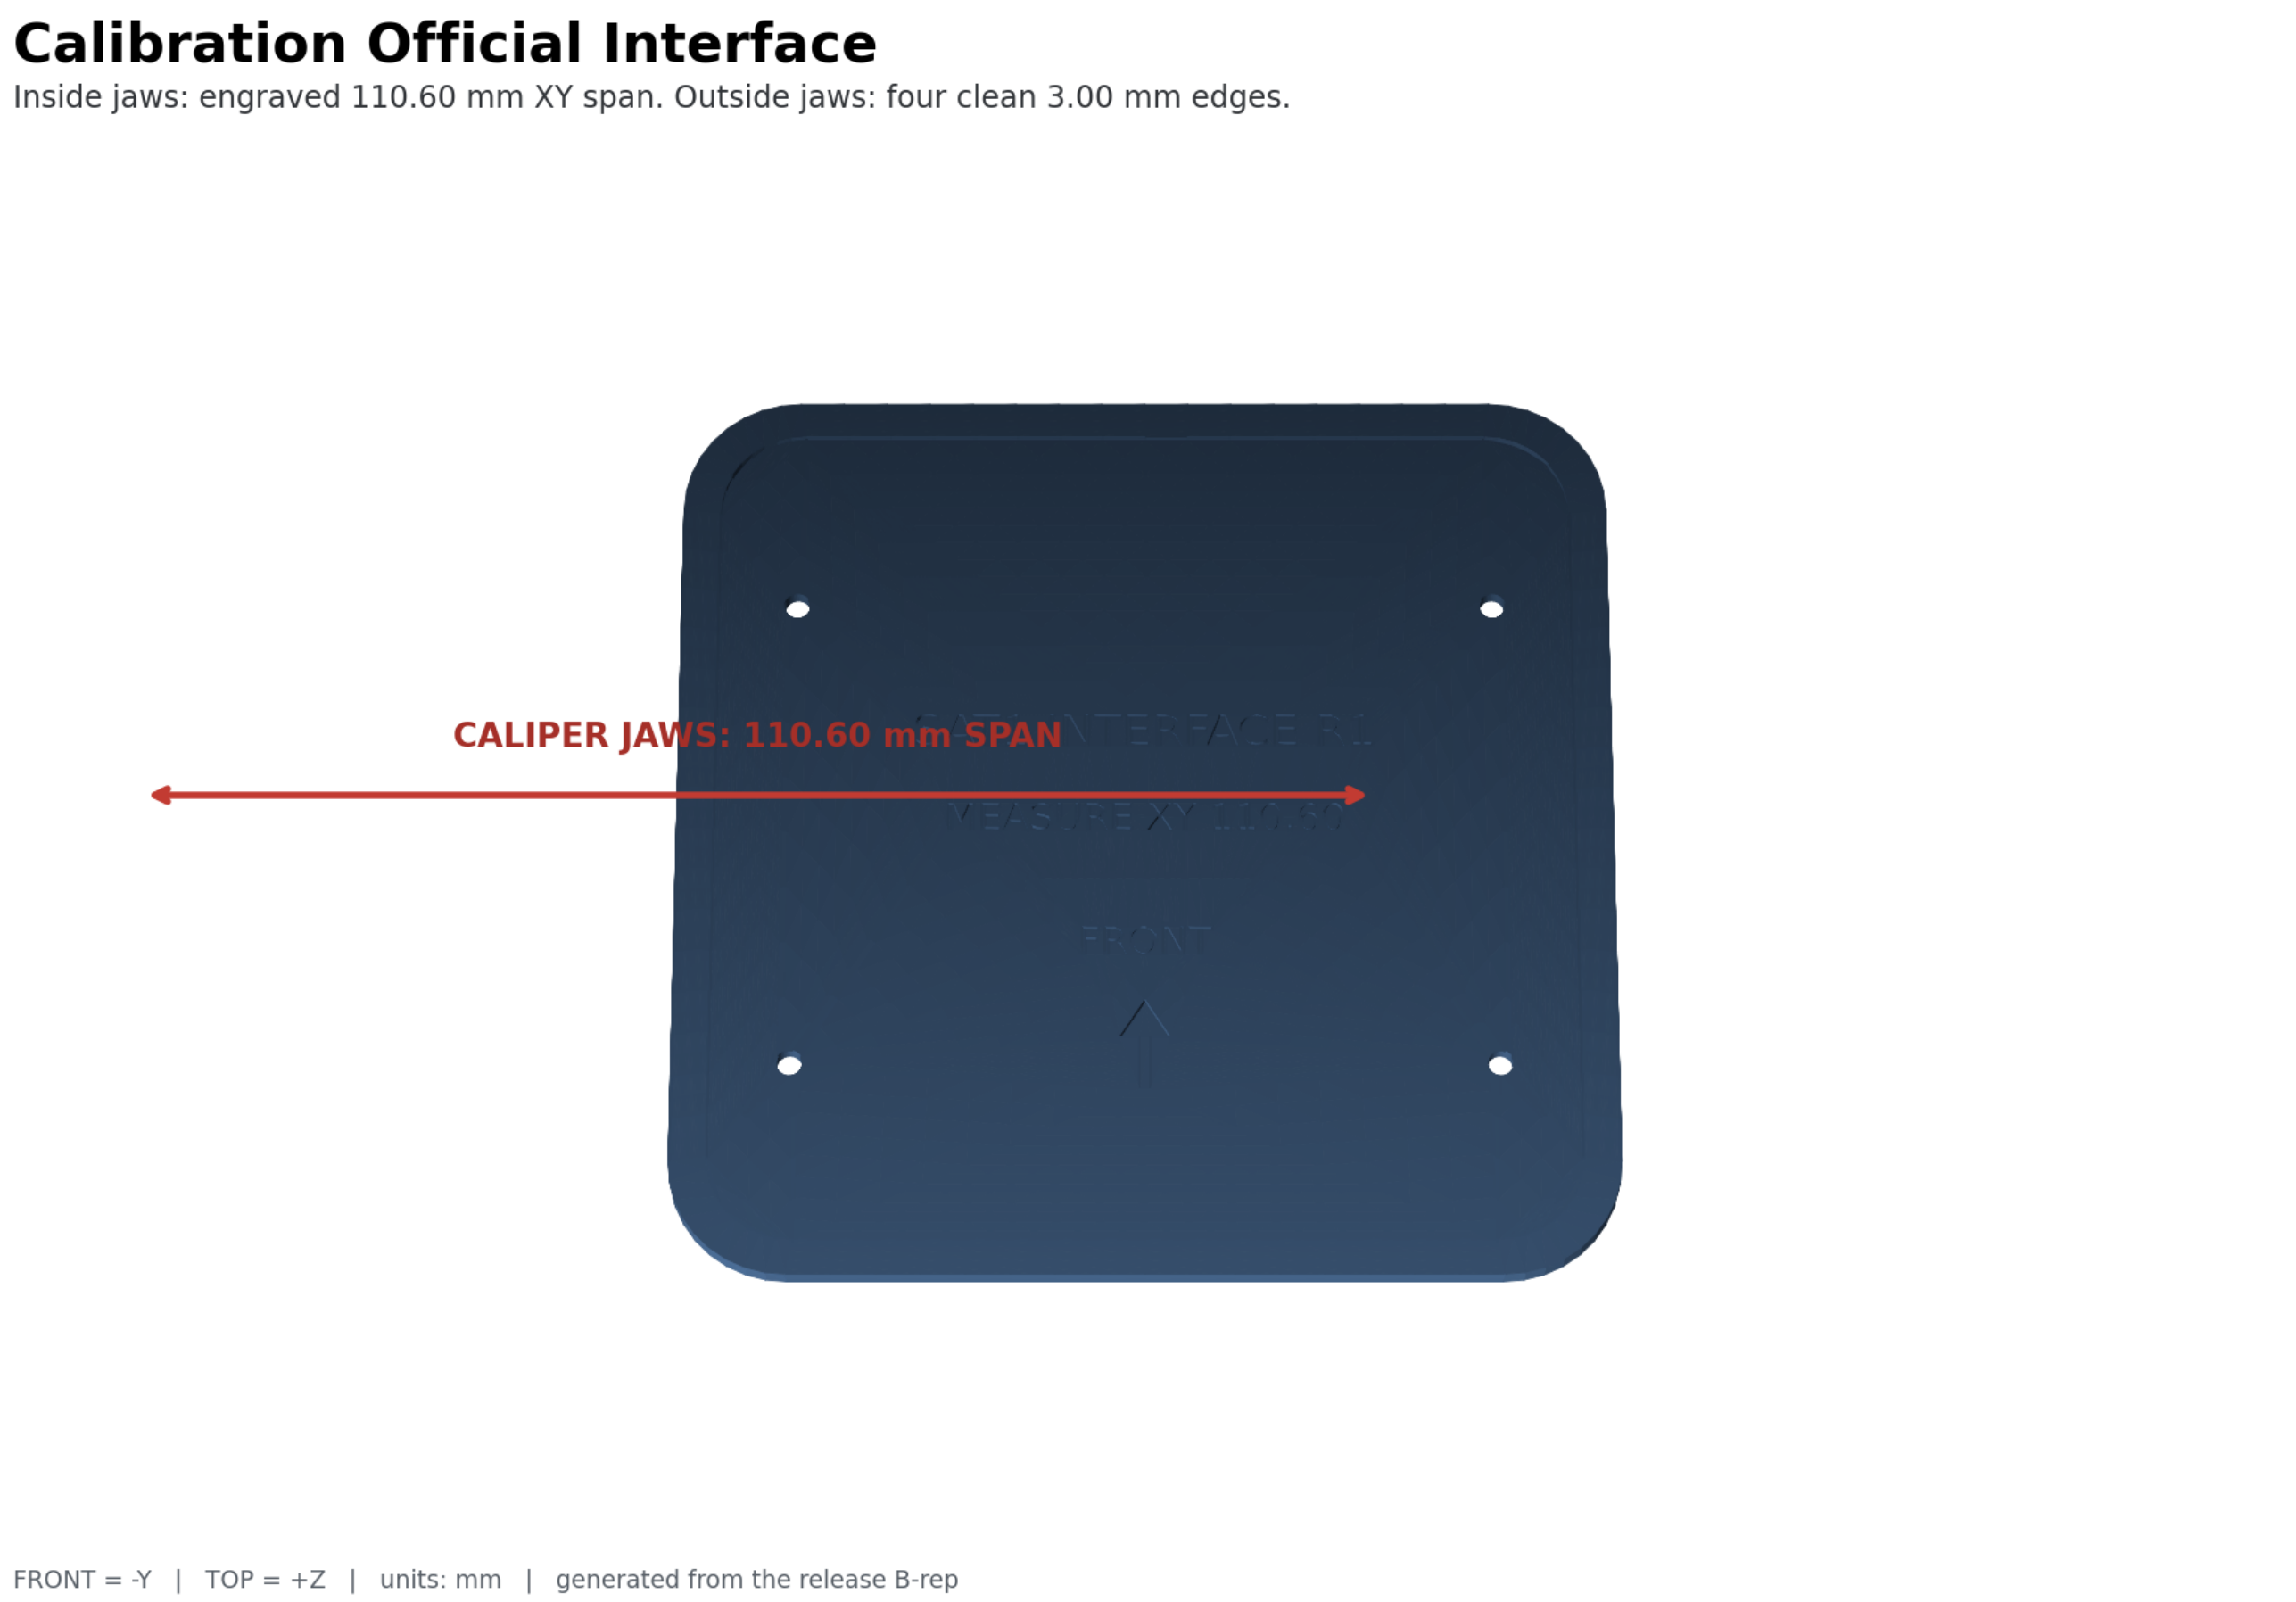

Official-interface XY and Z measurement

Calibration Fasteners

Functional gauges: M3 screw in 3.4/3.5/3.6 holes; insert in 4.0–4.3 blind bores.

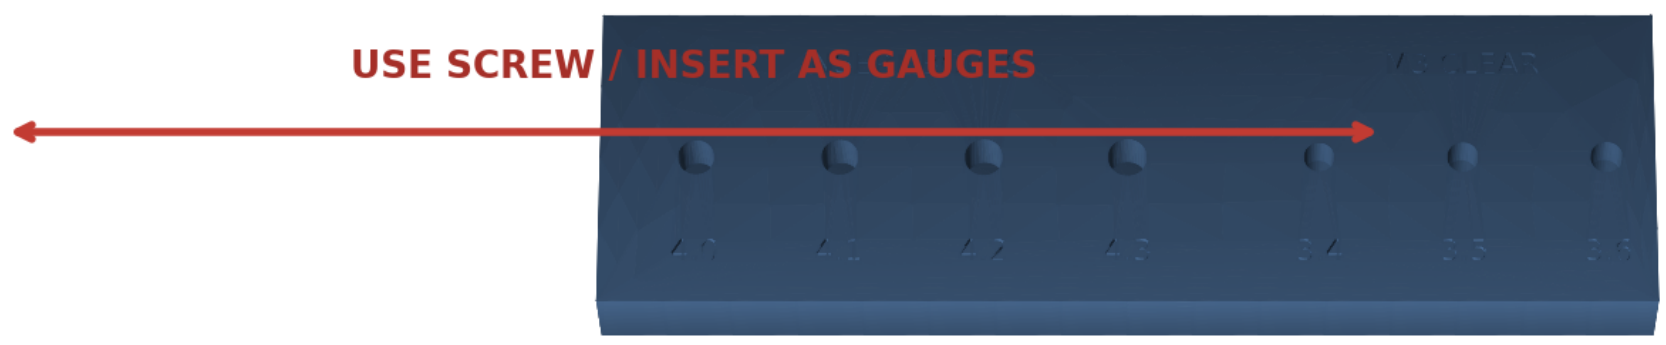

FRONT = -Y | TOP = +Z | units: mm | generated from the release B-rep

M3 screw and insert functional gauges

Calibration Driver

Seat the purchased ND91-4 by hand. Measure its flange thickness at four quadrants.

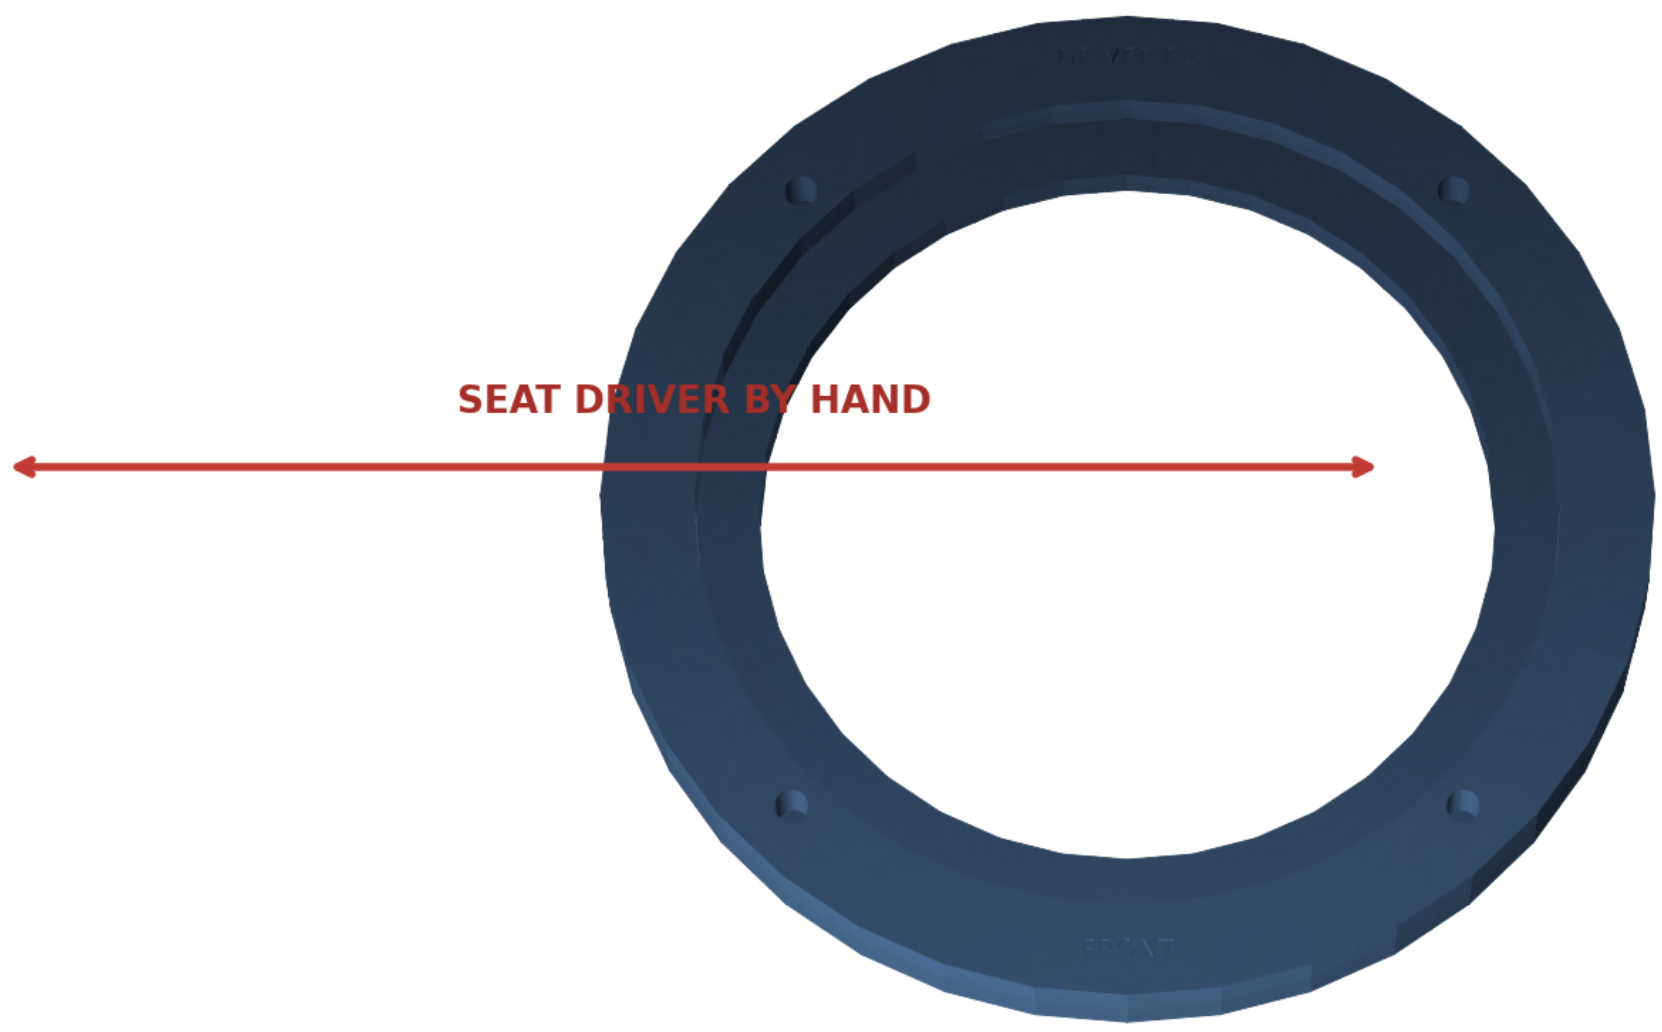

FRONT = -Y | TOP = +Z | units: mm | generated from the release B-rep

Active-driver coupon fit check

Calibration Radiator

Seat one SB12PACR-00 by hand. Measure its flange thickness at four quadrants.

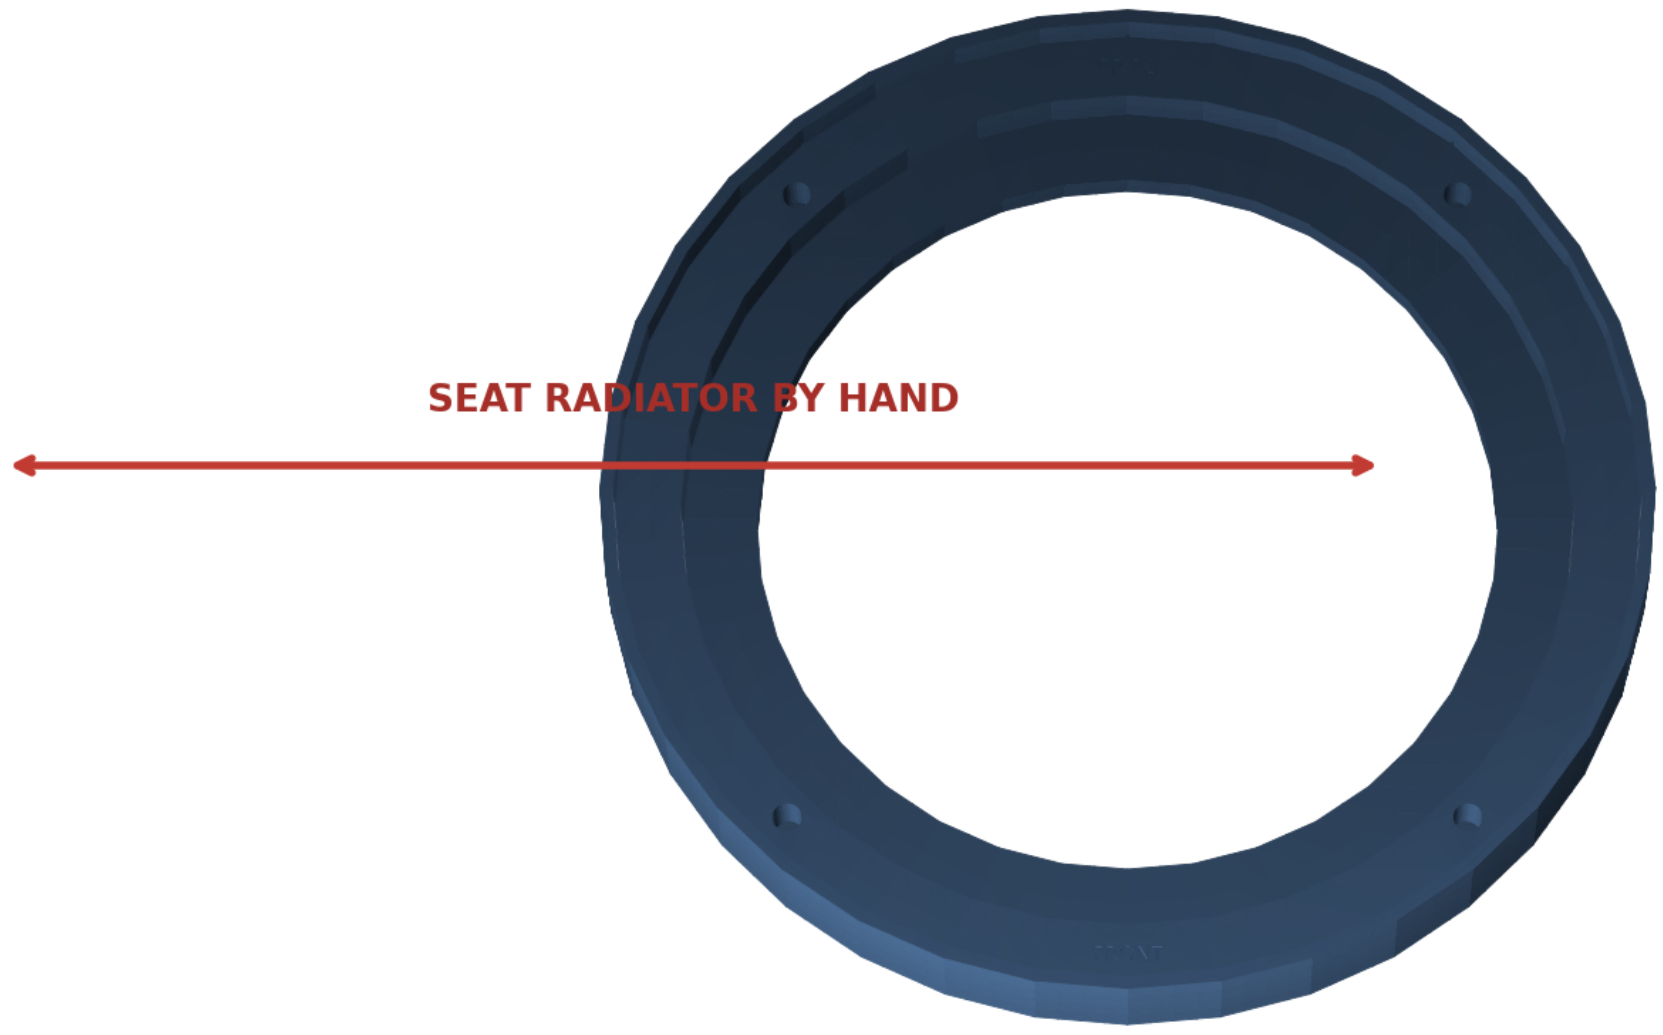

FRONT = -Y | TOP = +Z | units: mm | generated from the release B-rep

Passive-radiator coupon fit check

Calibration Gasket

Measure sheet thickness; tighten until both hard stops touch; inspect the closed light path.

FRONT = -Y | TOP = +Z | units: mm | generated from the release B-rep

Gasket compression coupon stack

Calibration Cable

Fit the two actual 22 AWG conductors. The gland must seat by hand and resist rotation.

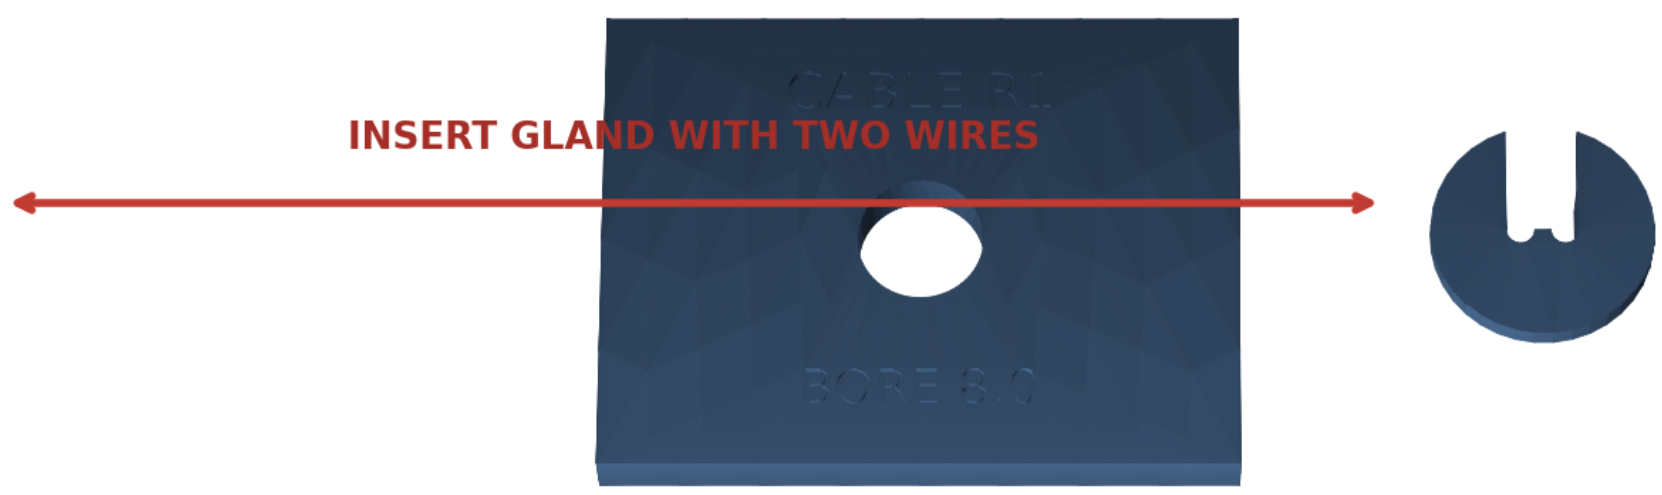

FRONT = -Y | TOP = +Z | units: mm | generated from the release B-rep

Cable passage and TPU gland check

Edit one file

Copy `CALIBRATION_INPUT_TEMPLATE.yaml` to `config/physical_calibration.yaml`, or run:

```
python scripts/calibrate.py
```

The file exposes only user-facing corrections. Safe limits reject implausible values before any full part is built.

Regenerate

```
make calibrated-release
```

Success ends with all validation, documentation, mutation, and package checks passing. Output is in `release/Satellite1-Ultra-RC1/`.

Example successful finish:

```
documentation PASS; 9 guides, 7 PDFs
release/Satellite1-Ultra-RC1 (all required files present)
```

Reprint every coupon affected by a nonzero correction. You are cleared for the full enclosure only when all eight checks above pass on the corrected coupons.

Common failures

• Warped official coupon: improve enclosure temperature, clean the bed, add the

brim, and do not compensate a warped part.

• Every hole undersized: check flow and elephant-foot compensation before

adding a large CAD offset.

• Insert cracks the boss: choose a larger coupon bore or reduce iron dwell; do

not increase torque.

• Component will not sit flat: remove only print strings. Do not sand a sealing

land; correct the cutout and reprint the coupon.

• Gland leaks or spins: verify conductor OD <=1.8 mm, dry TPU, then correct and

reprint both the coupon and gland.

Source commit c83cac321c50. No physical validation has been performed.