

# RAK ARDUINO VIDEO DEVELOPMENT BOARD USER GUIDE V1.0

# Shenzhen Rakwireless Technology Co., Ltd

www.rakwireless.com

info@rakwireless.com

© 2015 Rakwireless Reserves All Rights

The Name Of Actual Companies And Products Mentioned Herein Are The Trademarks Of Their Respective Owners

No Parts Of This Document May Be Reproduced ,Stored In Any Retrieval System ,Or Transmitted In Any Form Not Expressly Approved By Rakwireless

This Document Is Subject To Change Without Notice



### Module Introduction

RAK CAM is a development board witch can transmit video through WIFI, it can be powered separately. In addition ,RAK CAM fully compatible with Arduino development board, so it can be used in conjunction with the Arduino development board.


This document mainly describes the hardware structure of the module and how to use the video transmission method ,so that developers can understand and be familiar with the module more quickly.



1 Fully Compatible With Arduino




## **Hardware Introduction**

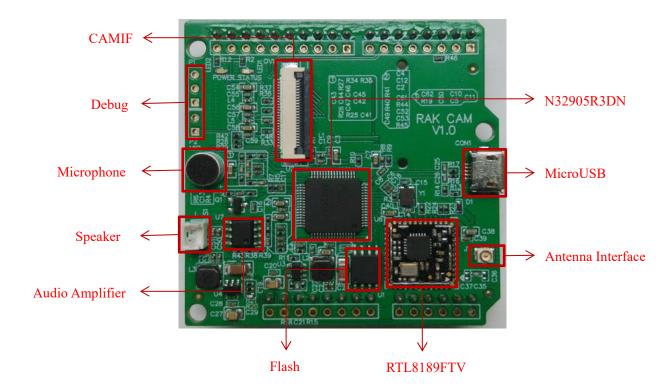

1 RAK CAM Top View



# **Hardware Pin Introduction**

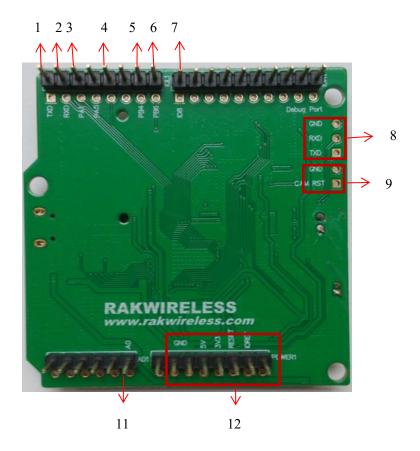

3 RAK CAM Bottom View

| Number | Name | Description                          |
|--------|------|--------------------------------------|
| 1      | TXD  | Transparent transmission             |
| 2      | RXD  |                                      |
| 3      | PA1  | Noting                               |
| 4      | PA5  | Recovery factory                     |
| 5      | PB4  | Noting                               |
| 6      | PB5  | Noting                               |
| 7      | IO8  | Enable speaker                       |
| 8      |      | Debug port                           |
| 9      |      | Burn firmware, need to short circuit |
| 10     |      | Power                                |
| 11     | AD   | ADC                                  |



# 二 compile and upgrade

### 1 Source compilation:

1 download source: <a href="https://github.com/RAKWireless/rak">https://github.com/RAKWireless/rak</a> 5280 arduino. git

Or git clone <a href="https://github.com/RAKWireless/rak">https://github.com/RAKWireless/rak</a> 5280 arduino.git

2 cd rak 5280 arduino

3 scripts/build.sh

4 if permission denied you can change permission:


sudo chmod u+x ./\* -R

then execute build.sh again

#### 2 upgrade:

1 copy output/autowriter gc0308 to your windows


2 enter "recover mode"

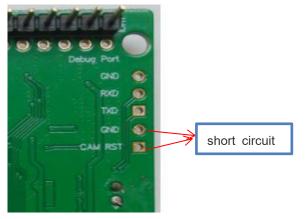

- 3 connect your development board to pc with USB
- 4 enter autowriter gc0308 and execute AutoWriter.exe The 'Current Target' is SP
- 5 it will autoburn
- 6 save and normal start





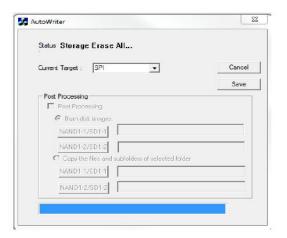



## 三 software function

the module support "rtsp (Real Time Streaming Protocol)", video ,audio ,nabto, telenet, uart transparent transmission .

Install the antenna and camera of RAK CAM development board in the corresponding position ,then start



RAK CAM Normal Start



By default, the AP starts, and ssid: NuWicam+mac address

For example: NuWiCam-3a-1d-d9-7b-3a-15

Password:12345678 IP: 192.168.100.1

the video transmission format is "mpeg4".

## (1) Local

#### App:

1 Install app:

IOS: you can download IOS App at the App Store "RakVideo"

Android: url: http://www.pgyer.com/rakvideotest


#### 2 Connect your phone to the module, then open your App









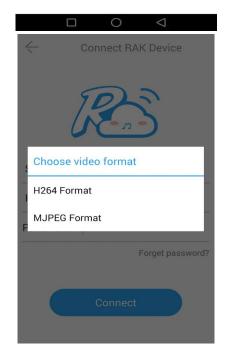




Click "SurfaceView" to choose decode way,and click "MJPEG Format" to choose the video transmission format.

Then input password ("admin" by default), and click connect you can see the video




#### Windows:

In Windows watch the video through "VLC" and "mplayer" Input URL:rtsp://192.168.100.1:554/cam1/mpeg4 finally player

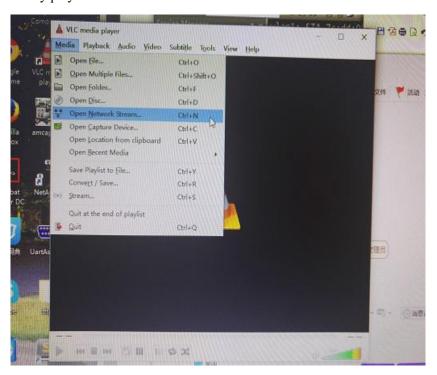



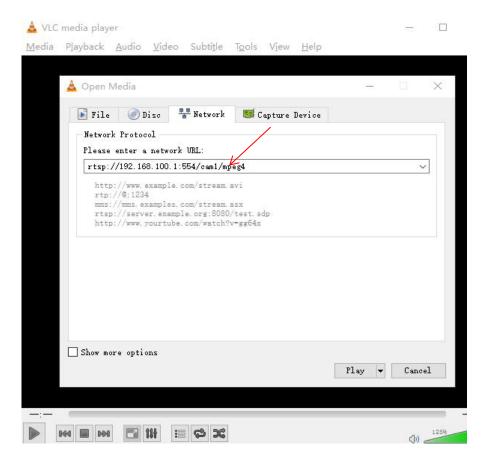

## (2) Remote

#### Nabto

Nabto is a point-to-point remote access and control of connected device .Remote control embedded devices directly from HTML-in real-time. Or stream date directly to and from devices . Securely .No firewall hassle.


Now nabto start by default with no password, so you can change nabto id and password through "nabto" command, finally restart.

You can check the nabto id with http command:


http://192.168.100.1/cgi-bin/param.cgi?action=list&group=nabto


Then,add




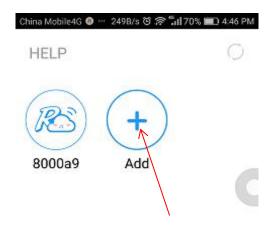




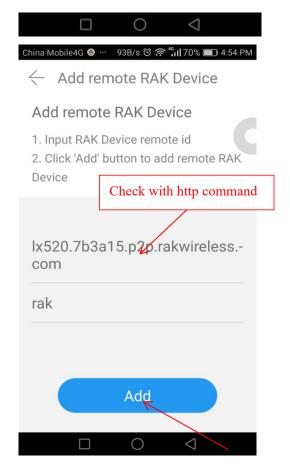


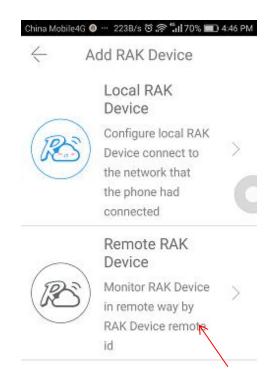

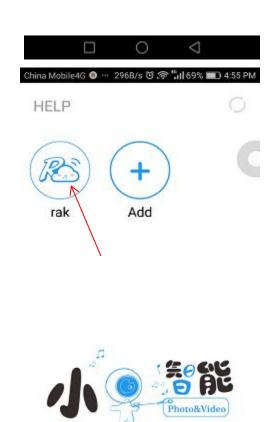



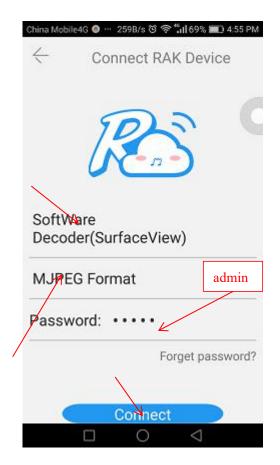

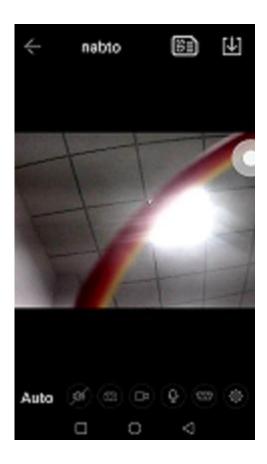


### (5) Uvc module:

The module also provides a simple USB video class(UVC) firmware

- 1 plug in USB lines into "USB" port ,connect your pc
- 2 restart your board
- 3 windows will help to install UVC camera automatically .After UVC driver installation is done, you can see a 'NUWICAM USB UVC Device' in device manager window .
- 4 After that ,open UVC capture utility to test UVC function. For example "WebcamViewer" or "AMCap"





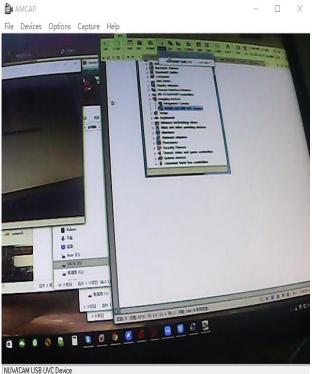



# 四 Modification Record

| Version | Author     | Time       | Modify The Content  |
|---------|------------|------------|---------------------|
| V1.0    | Wentao.Sun | 2016/11/16 | Create the Document |