
LinuxDriver installation and usage instructions on the system


1: Put all the files after the driver is unzipped into an empty folder as shown in the figure:



Two: PressF4Or enter the terminal in the start menu and typelsAfter pressing Enter, the following figure will appear (if different, usecd Enter the command folder and enterlsEnter)

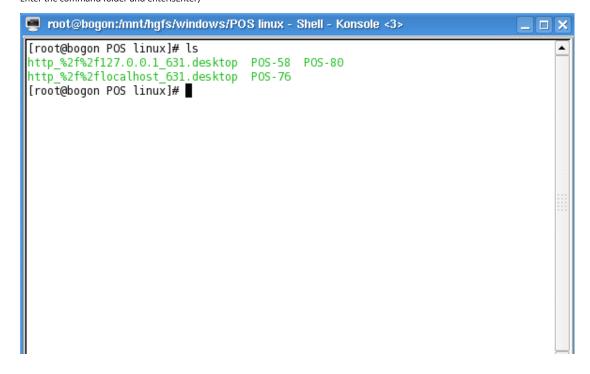

Three: Install the driver (./POS-80)As shown in the figure:

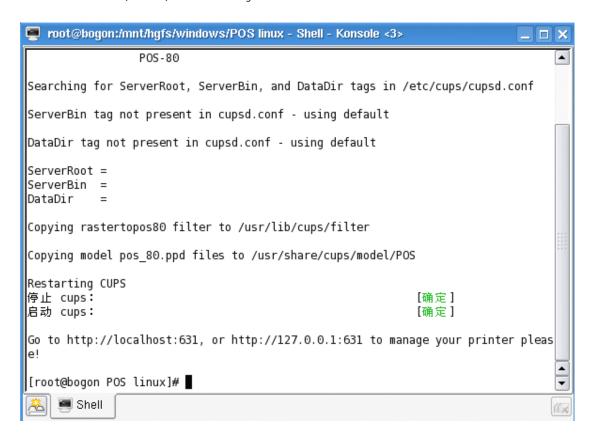


Driver installation completed


4. Printer Settings (1, enter in the browserhttp://localhost:631,orhttp://127.0.0.1:631 2, Open the URL link of the printer settings (Note: choose one of the two)



UNIX PRINTING SYSTEM Hon	dd Printer Medical Administration Classes Documentation	ion/Help Jobs	
Add New Printer			
Name:			
	(May contain any printable characters except "/", "#", and space)		
Location:	:		
	(Human-readable location such as "Lab 1")		
Description:	:		
	(Human-readable description such as "HP LaserJet with Duple	ker")	
	Continue 继续		

Five: Port selection is as follows:

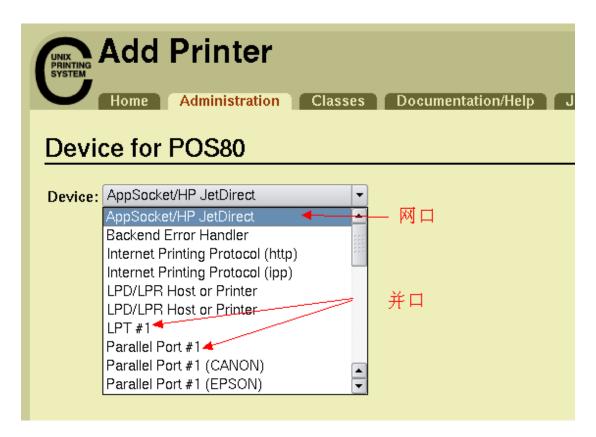

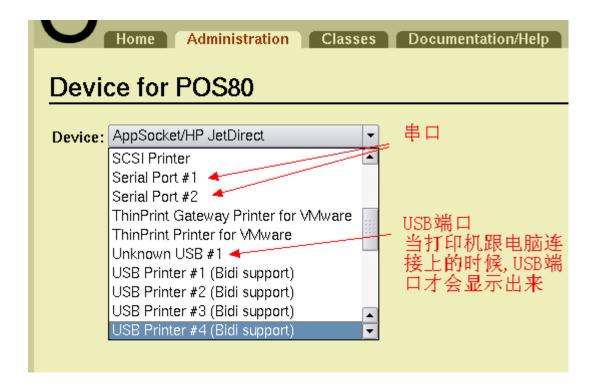

6. Select the network port point and continue as shown below:



Make/Manufacturer for POS80 Make: Heidelberg Hitachi HΡ **IBM** Imagen Infotec J-speed Kodak 打印机驱动安装过 次后就可以选择它 Kyocera Kyocera Mita Continue Or Provide a PPD File: Add Printer




7: The following page appears, and the printer is added successfully




Automatically enter the next page, this page is the printer parameter setting, which can be configured by default or selected as needed, as shown in the figure:

POS80: General			
Media Size: 80mm x 297mm ▼			
Set Printer Options			
POS80: Device Settings			
Cash Drawer:	Cash Drawer #1 Before Printing ▼		
Blank space at page's end:	Do not print ▼		
Feed distance after print:	feed 30mm ▼		
Cutting:	Cut at the end of page ▼		
Beeper:			
NV Logo:	Do not print NV Logo ▼		
	Set Printer Options		

8. Print test:

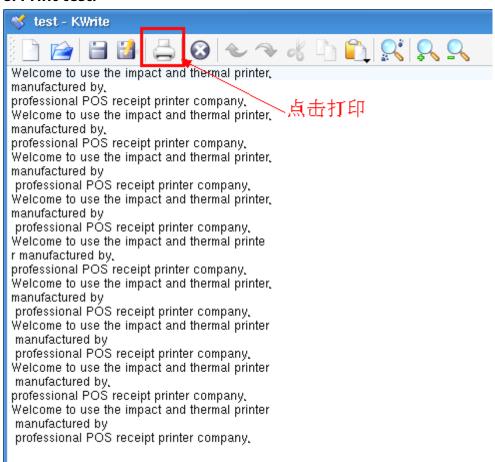


Select the printer you just installed:

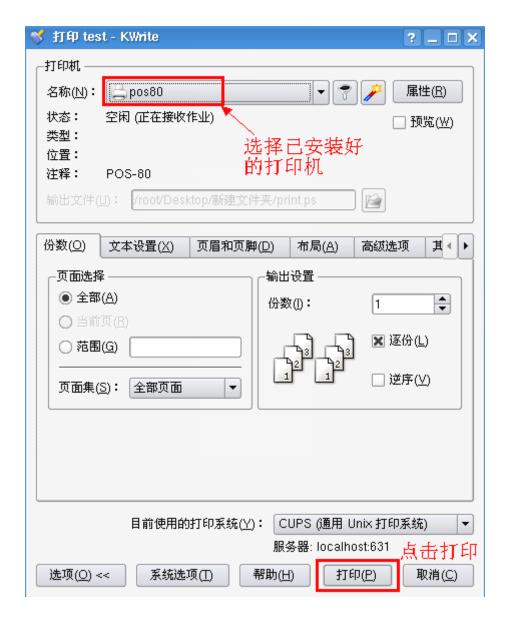

The print driver test page is as follows:



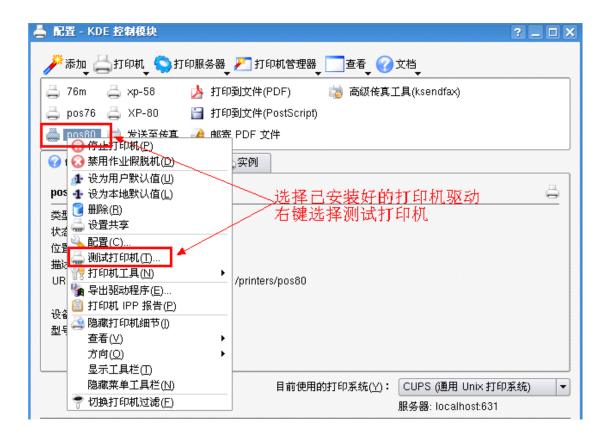

If the text is printed normally, or the driver test page is printed, it means that the printer driver is installed successfully.

become.