


Ryno Badenhorst Week 5 NET512 Prac

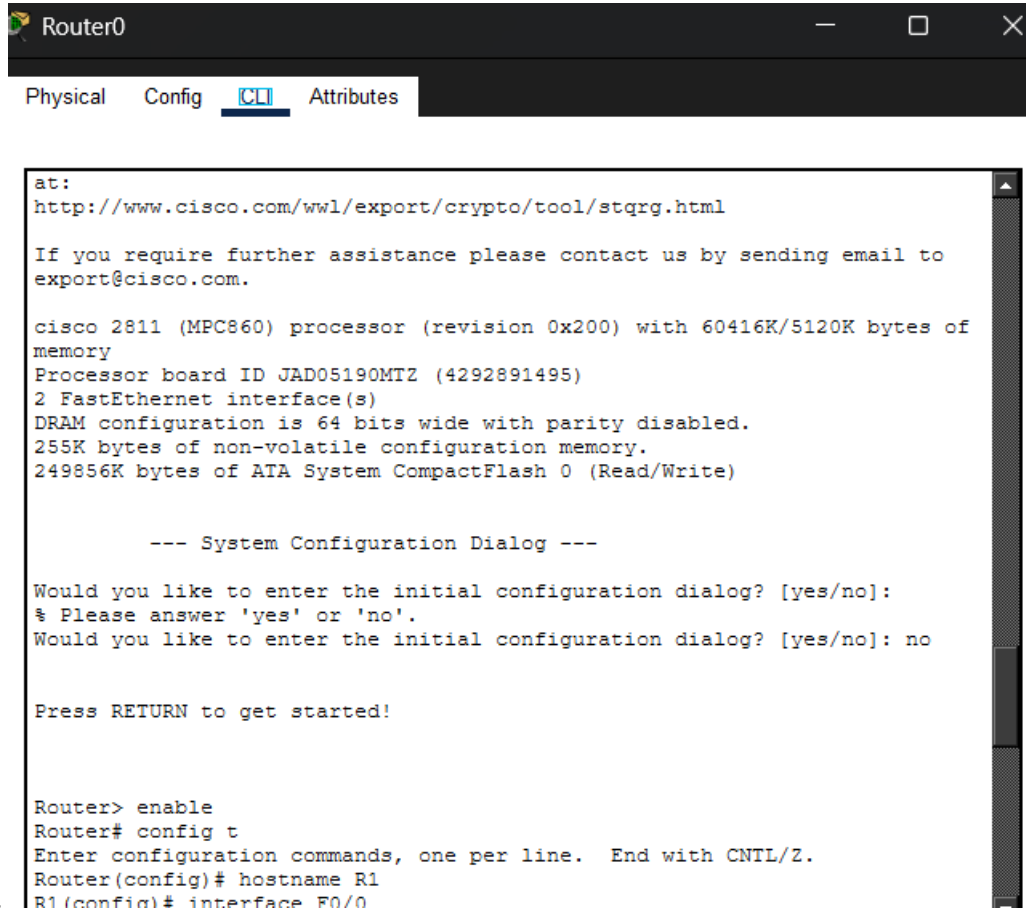

The screenshot shows a window titled "Router0" with a dark header bar. Below the header, there are four tabs: "Physical", "Config", "CLI" (which is highlighted with a blue underline), and "Attributes". The main content area displays the following text:

```
at:
http://www.cisco.com/wwl/export/crypto/tool/stqrg.html

If you require further assistance please contact us by sending email to
export@cisco.com.

cisco 2811 (MPC860) processor (revision 0x200) with 60416K/5120K bytes of
memory
Processor board ID JAD05190MTZ (4292891495)
2 FastEthernet interface(s)
DRAM configuration is 64 bits wide with parity disabled.
255K bytes of non-volatile configuration memory.
249856K bytes of ATA System CompactFlash 0 (Read/Write)

--- System Configuration Dialog ---

Would you like to enter the initial configuration dialog? [yes/no]:
% Please answer 'yes' or 'no'.
Would you like to enter the initial configuration dialog? [yes/no]: no

Press RETURN to get started!

Router> enable
Router# config t
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)# hostname R1
R1(config)# interface F0/0
```

28.

```
Router1
Physical Config CLI Attributes

at:
http://www.cisco.com/wwl/export/crypto/tool/stqrg.html

If you require further assistance please contact us by sending email to
export@cisco.com.

cisco 2811 (MPC860) processor (revision 0x200) with 60416K/5120K bytes of
memory
Processor board ID JAD05190MTZ (4292891495)
2 FastEthernet interface(s)
DRAM configuration is 64 bits wide with parity disabled.
255K bytes of non-volatile configuration memory.
249856K bytes of ATA System CompactFlash 0 (Read/Write)

--- System Configuration Dialog ---

Would you like to enter the initial configuration dialog? [yes/no]:
% Please answer 'yes' or 'no'.
Would you like to enter the initial configuration dialog? [yes/no]: no

Press RETURN to get started!

Router> enable
Router# config t
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)# hostname R2
```

29.

```
Switch0
Physical Config CLI Attributes

Top Assembly Revision Number : A0
Version ID : V02
CLEI Code Number : COM3L00BRA
Hardware Board Revision Number : 0x01

Switch Ports Model SW Version SW Image
-----
* 1 26 WS-C2960-24TT-L 15.0(2)SE4 C2960-LANBASEK9-M

Cisco IOS Software, C2960 Software (C2960-LANBASEK9-M), Version
15.0(2)SE4, RELEASE SOFTWARE (fc1)
Technical Support: http://www.cisco.com/techsupport
Copyright (c) 1986-2013 by Cisco Systems, Inc.
Compiled Wed 26-Jun-13 02:49 by mnguyen


Press RETURN to get started!

Switch> enablr
Translating "enablr"...domain server (255.255.255.255)
% Unknown command or computer name, or unable to find computer address

Switch> enable
Switch# config t
Enter configuration commands, one per line. End with CNTL/Z.
Switch(config)# hostname SW1
SW1(config)#
```

30.


31.

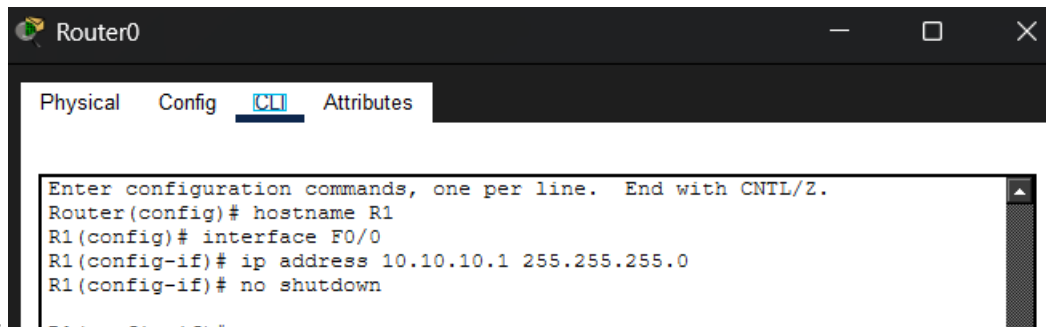
 A screenshot of a network configuration window titled "Router0". It has tabs for "Physical", "Config", "CLI", and "Attributes", with "CLI" selected. The CLI window shows the following commands being entered:


```

Enter configuration commands, one per line. End with CNTL/Z.
Router(config)# hostname R1
R1(config)# interface F0/0
R1(config-if)# ip address 10.10.10.1 255.255.255.0
R1(config-if)# no shutdown
  
```


32.

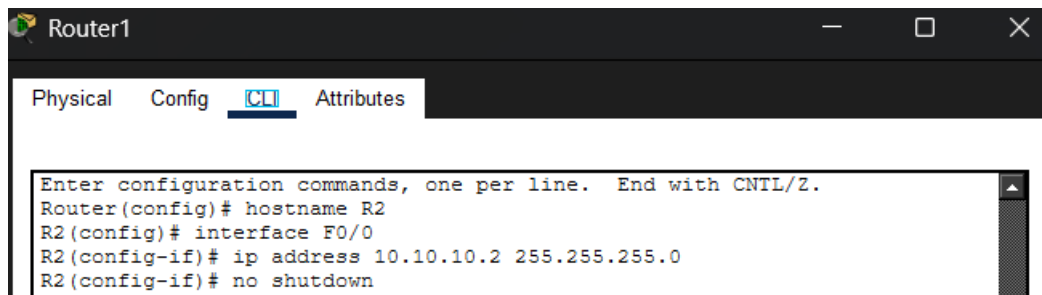
 A screenshot of a network configuration window titled "Router1". It has tabs for "Physical", "Config", "CLI", and "Attributes", with "CLI" selected. The CLI window shows the following commands being entered:


```

Enter configuration commands, one per line. End with CNTL/Z.
Router(config)# hostname R2
R2(config)# interface F0/0
R2(config-if)# ip address 10.10.10.2 255.255.255.0
R2(config-if)# no shutdown
  
```


33.

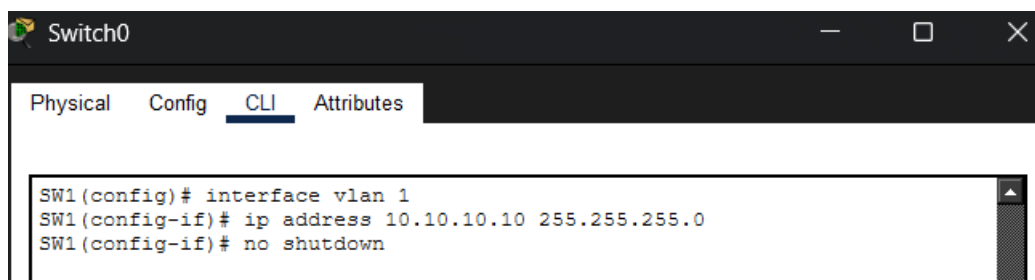
 A screenshot of a network configuration window titled "Switch0". It has tabs for "Physical", "Config", "CLI", and "Attributes", with "CLI" selected. The CLI window shows the following commands being entered:


```

SW1(config)# interface vlan 1
SW1(config-if)# ip address 10.10.10.10 255.255.255.0
SW1(config-if)# no shutdown
  
```

34.

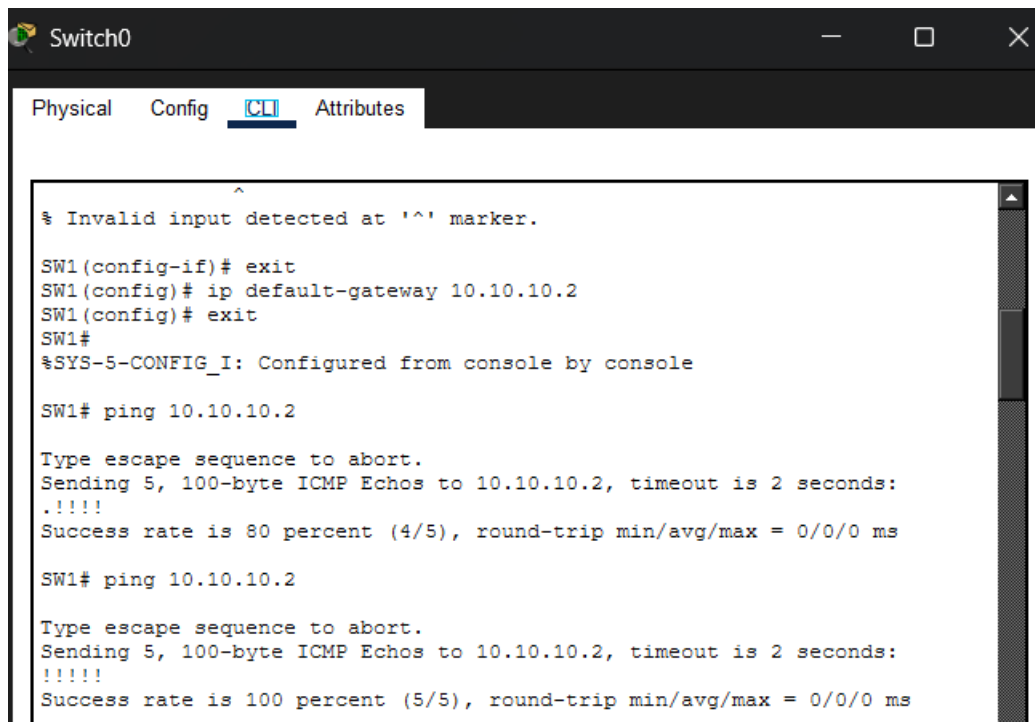
 A screenshot of a network configuration window titled "Switch0". It has tabs for "Physical", "Config", "CLI", and "Attributes", with "CLI" selected. The CLI window shows the following commands and output:


```

^
% Invalid input detected at '^' marker.

SW1(config-if)# exit
SW1(config)# ip default-gateway 10.10.10.2
SW1(config)# exit
SW1#
%SYS-5-CONFIG_I: Configured from console by console

SW1# ping 10.10.10.2

Type escape sequence to abort.
Sending 5, 100-byte ICMP Echos to 10.10.10.2, timeout is 2 seconds:
.!!!!
Success rate is 80 percent (4/5), round-trip min/avg/max = 0/0/0 ms

SW1# ping 10.10.10.2

Type escape sequence to abort.
Sending 5, 100-byte ICMP Echos to 10.10.10.2, timeout is 2 seconds:
!!!!!!
Success rate is 100 percent (5/5), round-trip min/avg/max = 0/0/0 ms
  
```

35.

Router0 CLI:

```
R1(config-if)# exit
R1(config)# interface F0/0
R1(config-if)# description Link to SW1
R1(config-if)# exit
R1(config)# exit
R1#
%SYS-5-CONFIG_I: Configured from console by console
```

Switch0 CLI:

```
Enter configuration commands, one per line. End with
CNTL/Z.
SW1(config)# interface F0/1
SW1(config-if)# description Link to R1
SW1(config-if)# exit
SW1(config)# interface F0/2
SW1(config-if)# description Link to R2
SW1(config-if)# exit
SW1(config)# exit
```

Router1 CLI:

```
R2(config-if)# exit
R2(config)# interface F0/0
R2(config-if)# description Link to SW1
R2(config-if)# exit
R2(config)# exit
R2#
%SYS-5-CONFIG_I: Configured from console by console
R2# show cdp neighbors
```

36.

Router0 CLI:

```
R1# show cdp neighbors
Capability Codes: R - Router, T - Trans Bridge, B - Source Route Bridge
                S - Switch, H - Host, I - IGMP, r - Repeater, P - Phone
Device ID      Local Intrfce  Holdtme  Capability
Platform      Port ID
SW1            Fas 0/0      143      S
2960           Fas 0/1
R1# config t
Enter configuration commands, one per line. End with
CNTL/Z.
R1(config)# interface F0/0
```

Switch0 CLI:

```
SW1# show cdp neighbors
Capability Codes: R - Router, T - Trans Bridge, B - Source Route Bridge
                S - Switch, H - Host, I - IGMP, r - Repeater, P - Phone
Device ID      Local Intrfce  Holdtme  Capability
Platform      Port ID
R1              Fas 0/1        131      R
C2800          Fas 0/0
R2              Fas 0/2        179      R
C2800          Fas 0/0
SW1# config t
```

Router1 CLI:

```
R2# show cdp neighbors
Capability Codes: R - Router, T - Trans Bridge, B - Source Route Bridge
                S - Switch, H - Host, I - IGMP, r - Repeater, P - Phone
Device ID      Local Intrfce  Holdtme  Capability
Platform      Port ID
SW1            Fas 0/0      154      S
2960           Fas 0/2
R2#
%LINEPROTO-5-UPDOWN: Line protocol on Interface FastEthernet0/0, changed state to down
```

37.

Router0 CLI:


```
2960 Fas 0/1
R1# config t
Enter configuration commands, one per line. End with
CNTL/Z.
R1(config)# interface F0/0
R1(config-if)# no cdp enable
R1(config-if)# exit
R1(config)# exit
R1#
```

38.

Router0 CLI:

```
Enter configuration commands, one per line. End with
CNTL/Z.
R1(config)# no cdp run
R1(config)# cdp run
R1(config)# exit
R1#
%SYS-5-CONFIG_I: Configured from console by console
R1# show cdp neighbors
```

39.

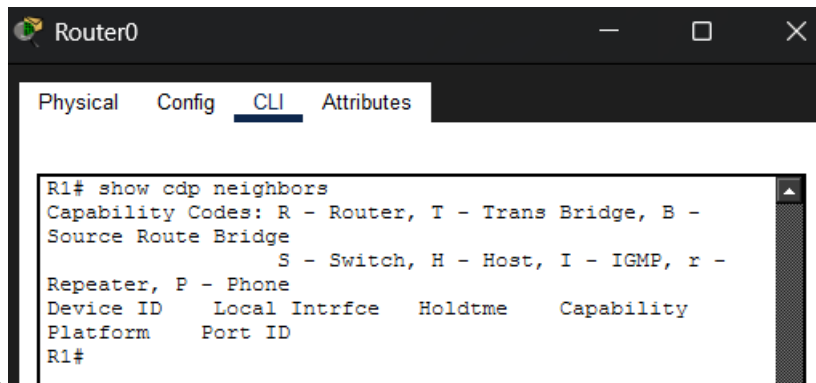


Router0

Physical Config CLI Attributes

```
R1# show cdp neighbors
Capability Codes: R - Router, T - Trans Bridge, B - Source Route Bridge
                  S - Switch, H - Host, I - IGMP, r - Repeater, P - Phone
Device ID      Local Intrfce   Holdtme    Capability
Platform      Port ID
R1#
```

40.

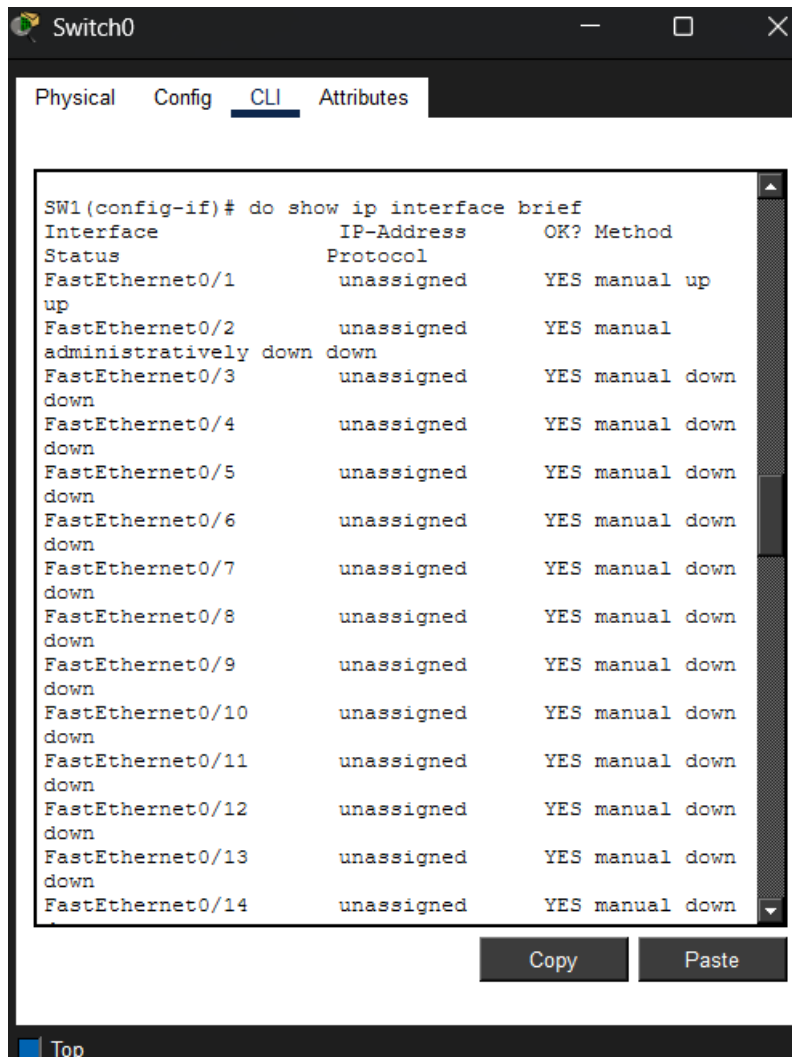

Switch0


Physical Config CLI Attributes

```
SW1(config-if)# do show ip interface brief
Interface      IP-Address      OK? Method
Status         Protocol
FastEthernet0/1 unassigned      YES manual up
FastEthernet0/2 unassigned      YES manual administratively down
FastEthernet0/3 unassigned      YES manual down
FastEthernet0/4 unassigned      YES manual down
FastEthernet0/5 unassigned      YES manual down
FastEthernet0/6 unassigned      YES manual down
FastEthernet0/7 unassigned      YES manual down
FastEthernet0/8 unassigned      YES manual down
FastEthernet0/9 unassigned      YES manual down
FastEthernet0/10 unassigned      YES manual down
FastEthernet0/11 unassigned      YES manual down
FastEthernet0/12 unassigned      YES manual down
FastEthernet0/13 unassigned      YES manual down
FastEthernet0/14 unassigned      YES manual down
```

Copy Paste

Top

41.

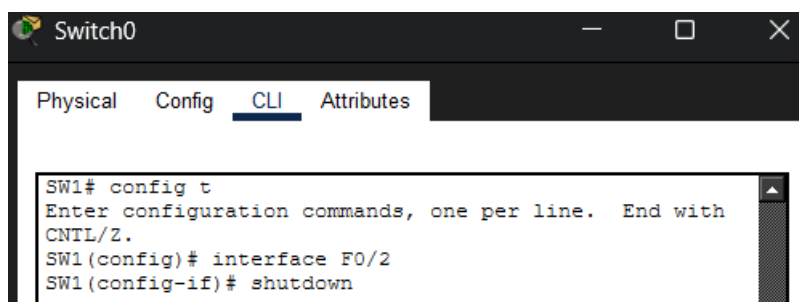


Switch0

Physical Config CLI Attributes

```
SW1# config t
Enter configuration commands, one per line. End with CNTL/Z.
SW1(config)# interface F0/2
SW1(config-if)# shutdown
```

42.

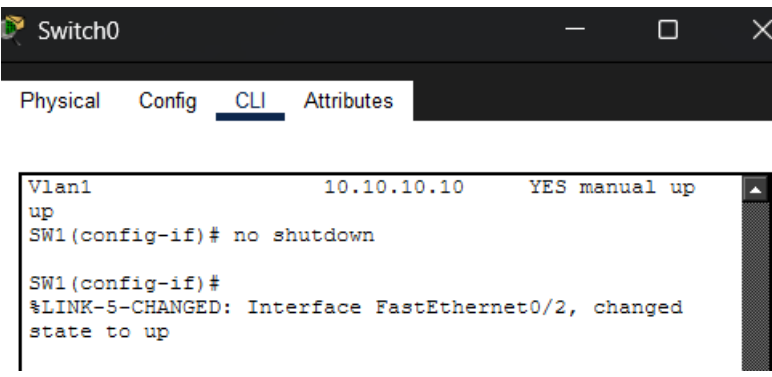


The screenshot shows a window titled 'Switch0' with tabs for Physical, Config, CLI, and Attributes. The CLI tab is active, displaying the following commands and output:

```
Vlan1          10.10.10.10    YES manual up
up
SW1(config-if)# no shutdown

SW1(config-if)#
%LINK-5-CHANGED: Interface FastEthernet0/2, changed
state to up
```

43.

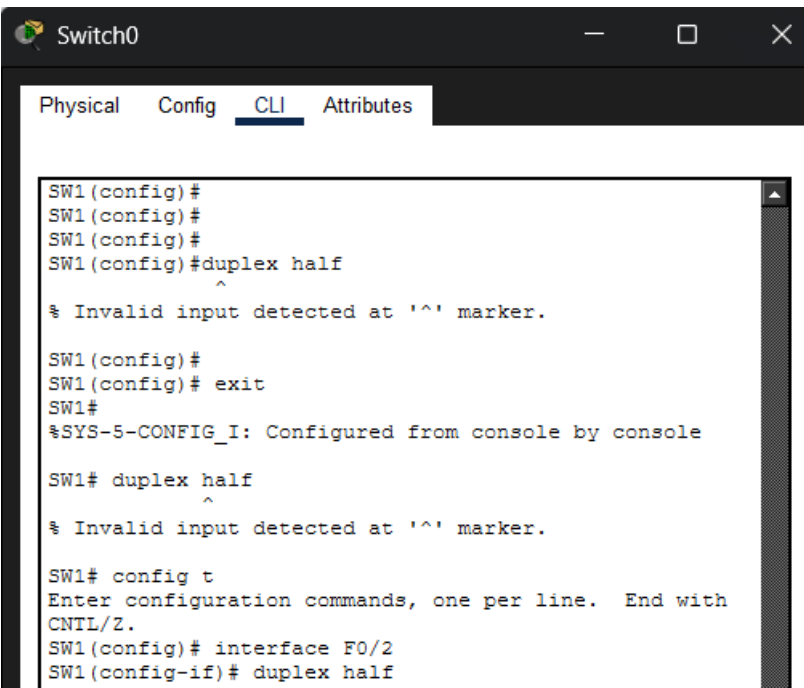

The screenshot shows the 'Switch0' CLI window with the following sequence of commands and messages:


```
SW1(config)#
SW1(config)#
SW1(config)#
SW1(config)#duplex half
^
% Invalid input detected at '^' marker.

SW1(config)#
SW1(config)# exit
SW1#
%SYS-5-CONFIG_I: Configured from console by console

SW1# duplex half
^
% Invalid input detected at '^' marker.

SW1# config t
Enter configuration commands, one per line.  End with
CNTL/Z.
SW1(config)# interface F0/2
SW1(config-if)# duplex half
```

44.

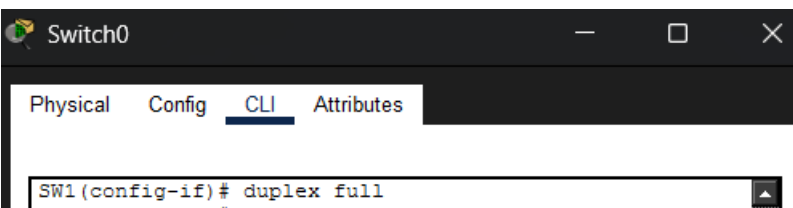

The screenshot shows the 'Switch0' CLI window with the 'CLI' tab active. The command entered is:

```
SW1(config-if)# duplex full
```

```
Switch0
Physical  Config  CLI  Attributes
SW1(config-if)# duplex full
SW1(config-if)# speed 10
SW1(config-if)#

SW1 con0 is now available

Press RETURN to get started.
```

45. &46.

47. A duplex mismatch causes late collisions and dropped packets on the half-duplex side, while the full duplex side generates Frame Check Sequence errors. This happens because the full duplex device transmits continuously without checking the line, interrupting the half duplex device which relies on CSMA/CD to listen for a clear channel before sending.