
## Scuttle robot Wiring Guide (rev 2020.10.08)


#### **Important Info:**

To match the beaglebone pins to the pin numbers on the diagram: The tiny white circle on the silkscreen at each connector indicates "pin1"




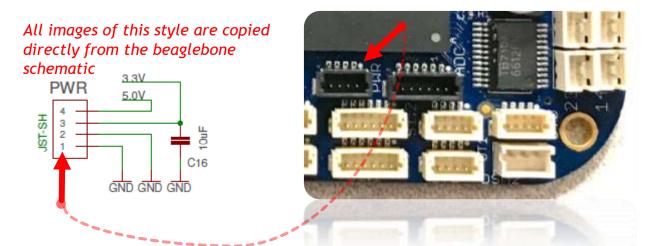


### **Verified Sensors & Actuators**

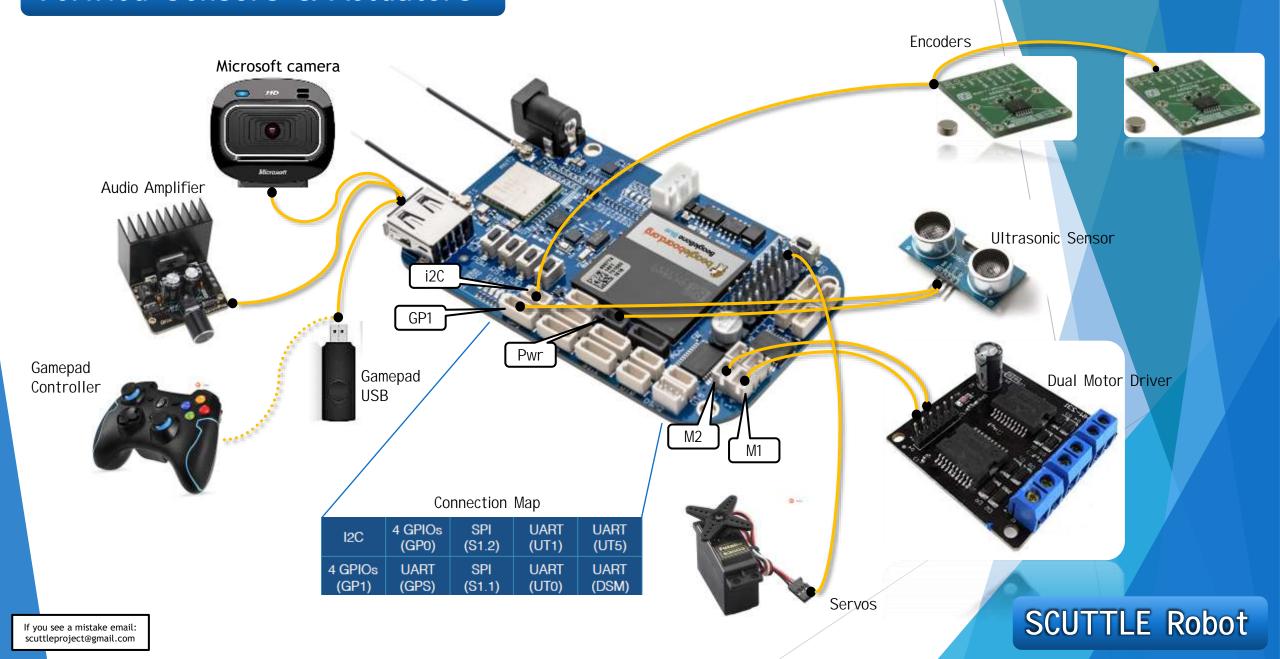

### Motor Driver Signal Cables

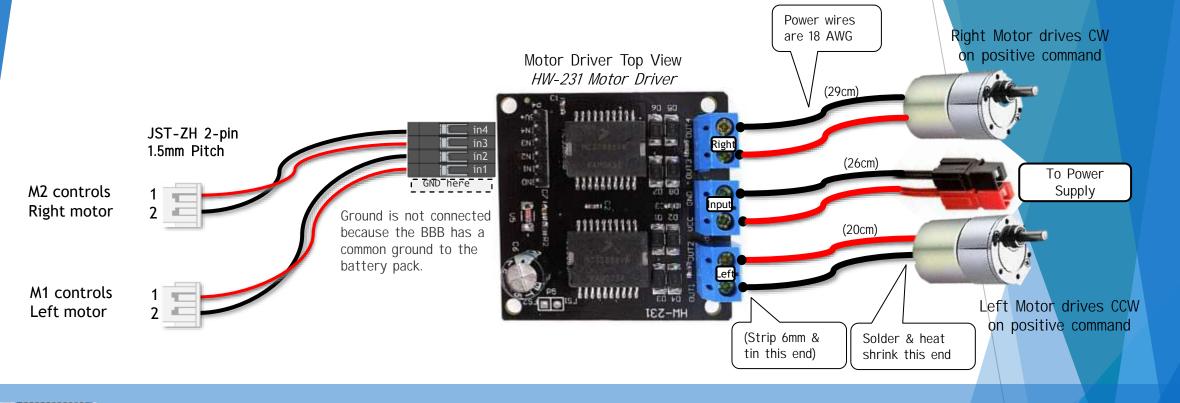

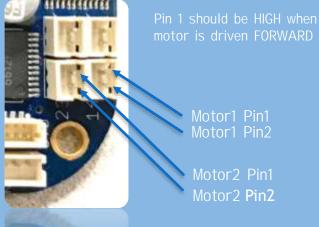

<u>Hardware design convention:</u>
Pin 1 uses the square solder pad.



Connector vector image reserved.



## H-Bridge L298N (optional)

A versatile and cheap device for delivering variable voltage to low-powered DC actuators.

JST-ZH 2-pin
1.5mm Pitch

M4 port

Ground is not required if beaglebone shares power source.

M3 port

M3 port

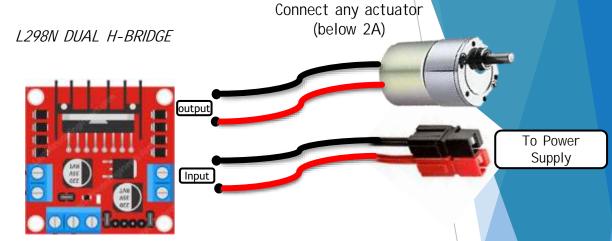


Image (and more great info!) found at <a href="LastMinutEngineers.com"><u>LastMinutEngineers.com</u></a>


Pin 1 should be HIGH when





More information about the 5v regulator Found on the datasheet (L78M05)

Motor3 Pin1 Motor3 Pin2

### Ultrasonic Distance Sensor (GPIO)

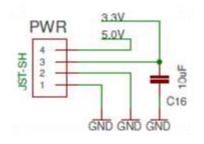

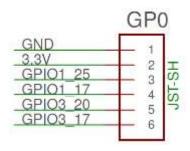


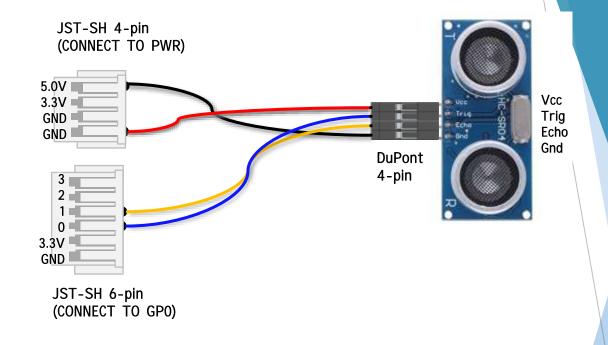


NOTE: For JST connectors out-of-box, the colors are not in the correct order. You need to rearrange them.




## Beaglebone to I2C bus cable

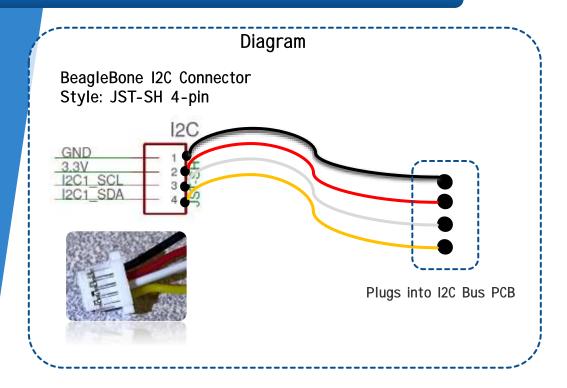

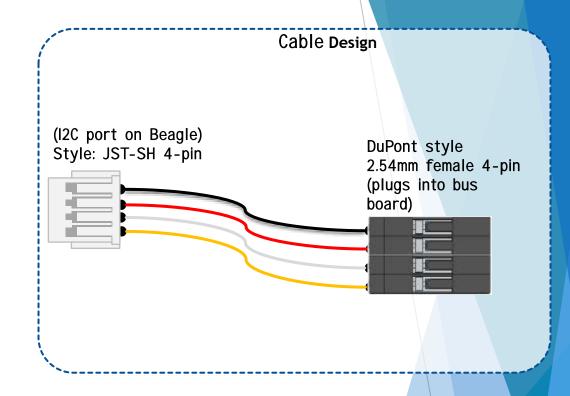

## Compass CMPS or CMPS2 (12C)

Plugs into I2C Bus Board

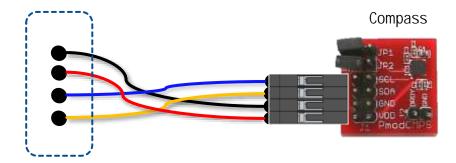


This compass is not necessary since you can access the compass on the beaglebone blue. Be sure to calibrate the compass on the blue since it lies within close proximity of magnetic hardware on the robot.






### 12C Bus Board

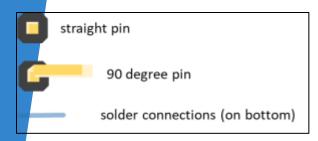

The board is made from a breadboard and soldered manually. The board can be cut between rows J & K. The solder bridges all pins from left to right.

#### Rear of robot

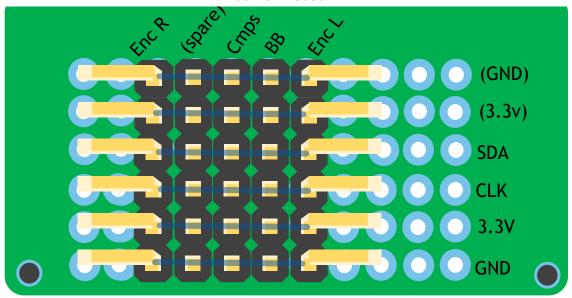


Screw Hole

Front of robot

## Encoder AMS AS5048 (I2C)

Left Hand Encoder A1 is pulled **down** to GND I2C address is 0x40


Right Hand Encoder A1 is pulled **up** to 3.3v I2C address is 0x41

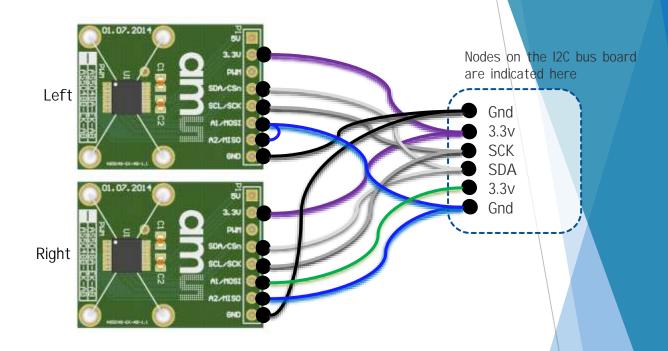


PIN	Left	Right
A1	0 (low)	1 (high)
A2	0 (low)	0 (low)
i2C Address	0x40	0x41

On the Left Hand Encoder PCB, bridge the pins A1 and A2 using solder, to each other.


# **Encoder Cables**

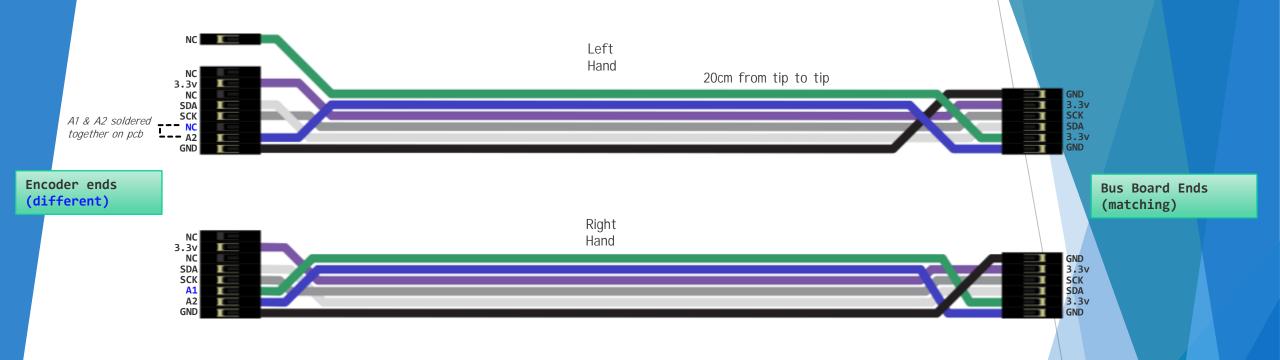

### **Battery**

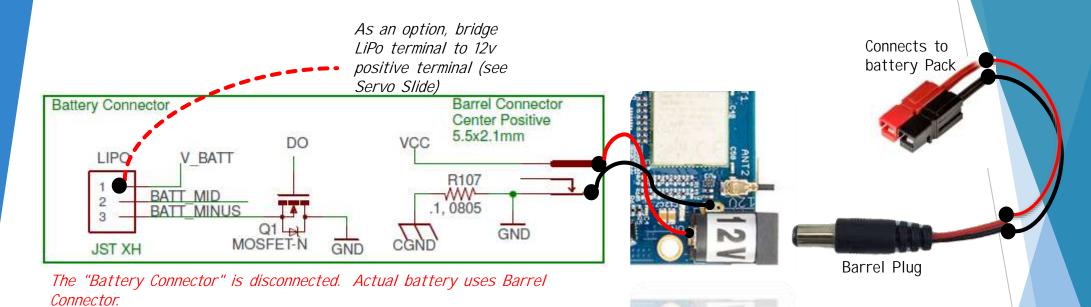


# Battery Pack (regular config)

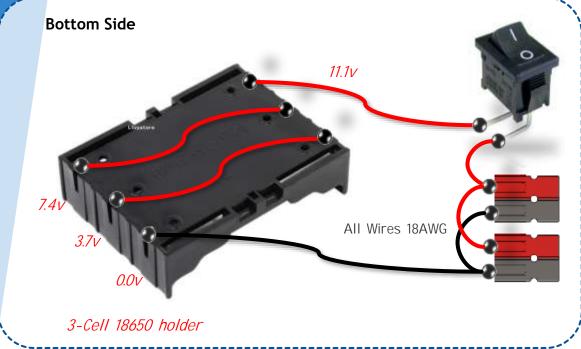

Switch PN:SRB22A2FBBNN Carries 10A max

*Two* pairs of Anderson connectors are attached here.


# Battery Pack (enhanced with BMS)

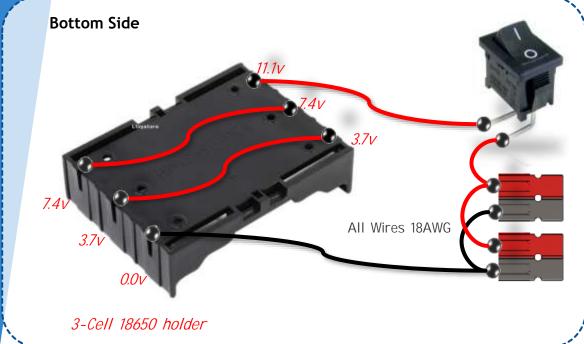

Switch PN:SRB22A2FBBNN Carries 10A max


*Two* pairs of Anderson connectors are attached here.


This slide is in progress. To be finalized when the BMS is integrated into the new battery pack.

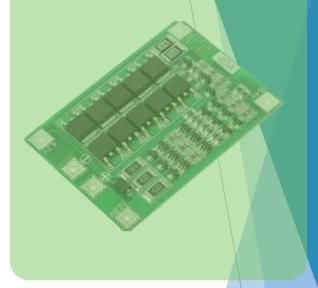

### LIDAR



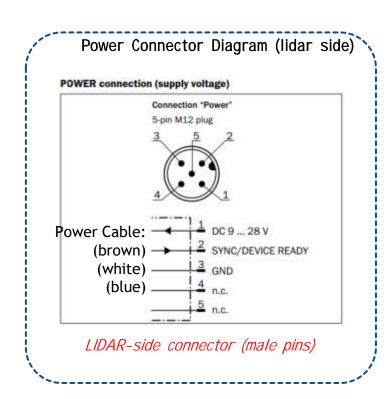

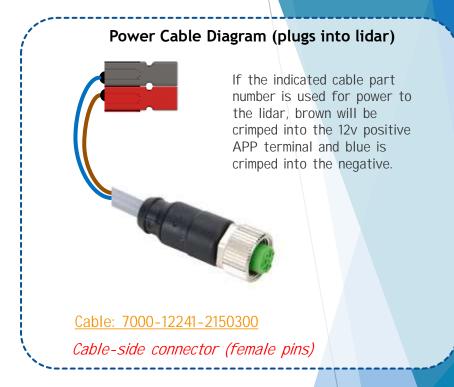

Typical Lidar power consumption: 2.1w

### GamePad




#### **Button Behavior:**

- not pressed: 0
- Pressed: 1


#### Axis behavior:

- Right returns positive values
- down returns positive values
- Outputs:
- Analog axes return values between -1 and 1
- These axes reach their limits before the hard-stop.
- To discover the behavior graphically, visit the html graphical test page <a href="here">here</a>


#### Servos

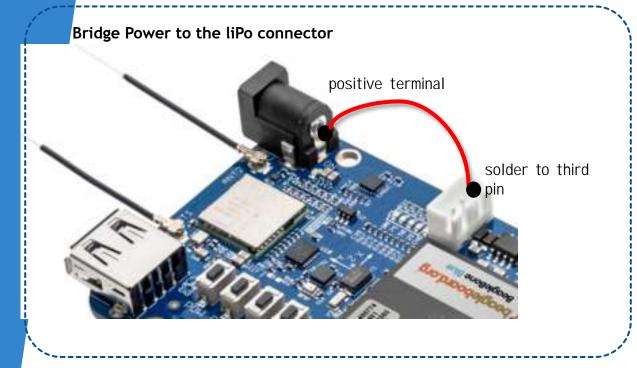


Without a power source available at the positive (third pin) input of the liPo connector, the board has insufficient current available to the servos to drive servos at full torque or to drive multiple servos. A safe fix is to solder the positive terminal of the DC jack to the third pin of the connector shown. When a battery is connected, the pins correspond to 0.0v, 3.7v, and 7.2v terminals of a 2-cell lipo.

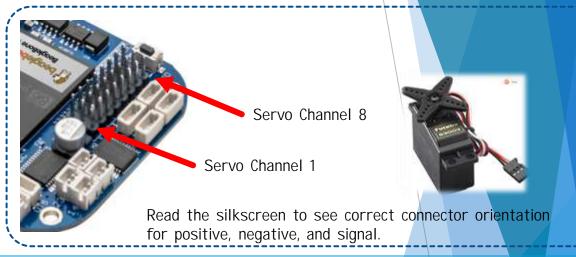

## RFID reader

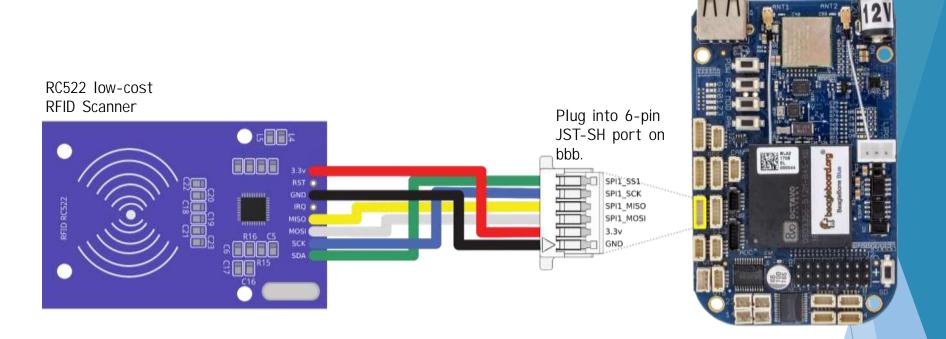

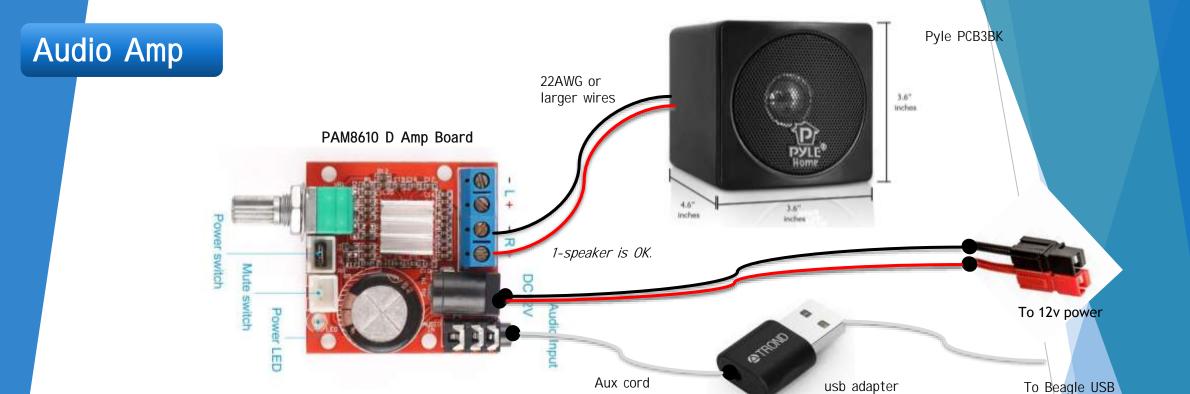


#### Alternative:

The above setup will support at least 10 watts (this is actually quite loud — easy to hear in a crowded room).

It is also possible to find a speaker which receives BOTH power AND signal over USB. These will be more compact but less powerful. (The speaker shown is 3w max)



#### **GPIO Connections**

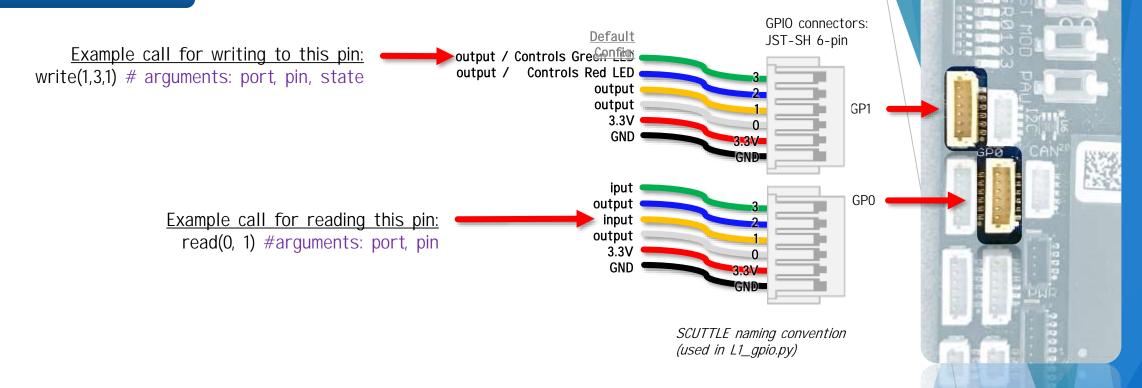


Connector vector image preserved for later use.



Note: JST wires don't come with the proper color sequence. They must be rearranged.

# GPIO Example - Relay

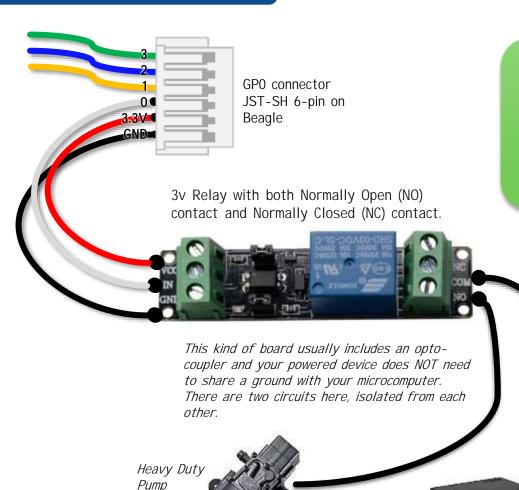


Relays are appropriate for switching of high powered devices. For heavy pumps, motors, fans, or floodlights, it may be best to add a dedicated power source such as an ancilliary battery. Then, control the power to the device using logic-level signals and a relay or solid-state relay.

A great detailed writeup is here.

Heavy Duty Power Supply

### Wifi Antenna

Users can replace the small onboard antenna with their own selected antenna.

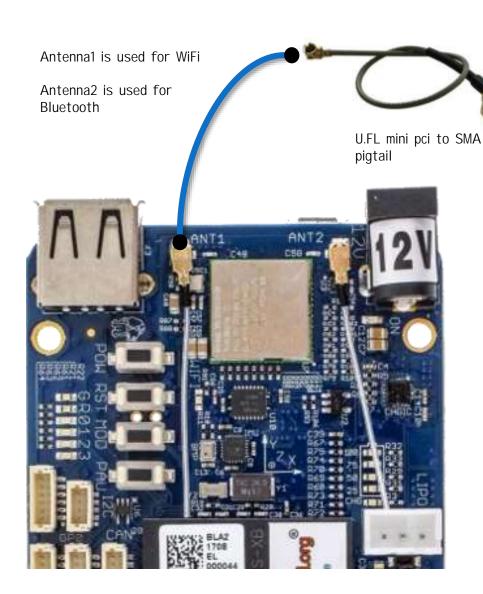

6dBi antenna offers improved RSSI if pointed properly.

