



Industrial PC

CS-A76-BOX



PN: CS-RK3588-BOX

Content can change at anytime, check our website for latest information of this product.
[www.chipsee.com](http://www(chipsee.com)

Contents

CS-A76-BOX	3
1. Product Overview	7
2. Ordering Options	8
2.1. Operating System	8
2.2. Optional Features	9
3. Hardware Features	10
4. Power Input	12
4.1. Default Connector	12
4.2. DC Jack	13
4.3. Ignition Signal	14
5. Connectivity	16
5.1. RS232/RS485/CAN	16
5.2. GPIO	18
5.3. USB Connectors	21
5.4. LAN Connectors	23
5.5. WiFi & BT Module	24
5.6. 4G/LTE Module	25
6. TF Card Slot	27
7. Audio Connectors	28
8. HDMI Connector	29
9. PROG Button	30
10. Mounting Procedure	31
11. Mechanical Specifications	32
12. Disclaimer	33
13. Technical Support	33

CS-A76-BOX

Front View



Rear View



Side View 1



Side View 2



Product Overview

The fanless embedded single board computer CS-A76-BOX (PN: CS-RK3588-BOX) is a Cortex®-76 series high-quality industrial PC. Thanks to the fanless design, it is stable and reliable in client terminal, multimedia and other industry applications.

Key Applications

- Industrial Automation
- Process Control
- Smart Grid Management
- CNC Manufacturing
- Environmental Monitoring
- Predictive Maintenance

The offered CPU consumes very little power, around 4.35W (max). From the ground-up, the CPU is built for low power consumption. As such, it is best suited for mobile and power-constrained industrial or field applications. A specially designed aluminum alloy housing with fins for increased heat dissipation serves as a passive cooler, eliminating the need for built-in fans. The fanless design reduces noise, as well as the maintenance costs and efforts, leading to increased reliability at the same time.

The CS-A76-BOX Industrial PC is based around the powerful RK3588J System on Chip (SoC), powered by the Rockchip RK3588J low-power processor which integrates a Quad(4)-core Cortex®-A76 (2.0GHz) and Quad(4)-core Cortex®-A55 (1.8GHz) processor.

The RK3588J supports multi-format video decoders and has a high-performance 8GB LPDDR4 RAM capable of sustaining demanding memory bandwidths. It also provides a complete set of peripheral interfaces.

Ordering Options

Chipsee products can be customized during the ordering process. The product will be shipped with the pre-installed factory defaults if no extra requirements are specified. The table in the [Hardware Features](#) section provides information about the default options bundled with the product.

Note

You can order the [CS-A76-BOX](#) from the official [Chipsee Store](#) or from your nearest distributor.

Operating System

This product comes with a pre-installed OS of your choice. Please see the list below for the supported OSes, which can also be obtained from the [Software Documentation](#) section, along with the detailed installation instructions.

- Debian 11
- Buildroot Linux Qt 5.15

Warning

The [Software Documentation](#) section provides a detailed instruction on how to install different OSes on your own. However, bear in mind that Chipsee can't take the responsibility of inadequate installation procedure. If you "brick" your device, please contact Chipsee Technical Support at support@chipsee.com for further assistance

Optional Features

The CS-A76-BOX Industrial PC does not include 4G/LTE module by default. The module is optional and can be selected at the Chipsee store during the ordering process.

This product doesn't have M.2 PCIe socket.

Warning

Installation, repair, and maintenance tasks should be performed by trained personnel only. Chipsee does not bear any responsibility for damage caused by inadequate handling of the product.

Hardware Features

The CS-A76-BOX Industrial PC offers a broad range of performance and connectivity options for scalable integration, providing expandability according to future needs. Some of the key features are listed in the table below.

CS-A76-BOX	
CPU	Rockchip RK3588J, Quad(4)-core Cortex-A76 (2.0GHz) and Quad(4)-core Cortex-A55 (1.8GHz)
GPU	ARM Mali-G610 MC4. Up to 8K60 FPS video decoding, up to 8K30 FPS video encoding.
NPU	Neural network acceleration engine with 6Tops int8, support Int4/8/16/FP16/BF16/TF32.
RAM	8GB LPDDR4
eMMC	64GB
PCIe	N/A
Storage	TF Card, Supports up to 128GB SDHC
Display	N/A
HDMI	1 x HDMI-D (Micro-HDMI) Out
Touch	N/A
USB	2 x USB 3.0 HOST, 1 x USB Type-C ¹
LAN	2 x RJ45, GbE
POE	N/A
Audio	3.5mm Audio In/Out Connector, 2W Internal Speaker
Buzzer	Yes
RTC	High accuracy RTC with farad capacitor, can work 1 week after power off (default). High accuracy RTC with lithium coin battery, can work 3 years after power off (<i>optional</i>).
RS232	default 2 x RS232 (Optional 6 x RS232 at most, include 1 debug port) ²
RS485	default 3 x RS485 at most ²
CAN	default 2 x CAN FD
GPIO	8 Channels Isolated IO, 4 x Input and 4 x Output
WiFi/BT	Integrated WiFi/BT Module
4G/LTE	Supported, Optional
Power Input	From 9V to 30V (supports optional 24V ignition signal)
Current	290mA (max) at 15V

CS-A76-BOX	
Power Consumption	4.35W (max)
Working Temperature	From -40°C to +85°C
OS	Debian11, Buildroot Linux Qt 5.15
Dimensions	CS-A76-BOX (PN: CS-RK3588-BOX): 209 x 125 x 37.3mm
Weight	CS-A76-BOX (PN: CS-RK3588-BOX): 900g
Mounting	CS-A76-BOX (PN: CS-RK3588-BOX): Rear, VESA

Key Features

- 1** The USB-A host (near RJ45) and USB-C **can't be used** at the same time. Before boot into OS, USB-C is enabled for install OS image; after boot into OS, USB-A is enabled but USB-C is disabled. In Android, these can be configured; in Linux, these can't be configured.
- 2(1,2)**This product has 6 x UART channels in total. The default configuration is 2 x RS232 and 3 x RS485, including 1 debug port. CAN0 can be configured to RS232. UART can be swapped between RS232 and RS485 modes easily, if you need a different RS232/RS485 configuration, please get in touch with the Chipsee Technical Support at support@chipsee.com

Power Input

The CS-A76-BOX Industrial PC can be powered by a wide range of input voltages: From 9V to 30V (supports **optional** 24V ignition signal) DC.

There are two DC input interfaces on this device: a **3-pin, 3.81mm terminal**, and a **2.1mm I.D x 5.5mm O.D x 9.5mm DC connector**.



Power Input

Note that the "+" sign represents the positive power input. The "-" terminal is shorted to the ground.

Default Connector

By default, the 3 pins are +, - and ground.

Power Input Definition		
Pin Number	Definition	Description
Pin 1	Positive Input	DC Power Positive Terminal
Pin 2	Negative Input	DC Power Negative Terminal
Pin 3	Ground	Power System Ground

Power Connector

Note

The system ground "G" is connected to power negative "-" on board.

DC Jack

For a proper 2.1mm x 5.5mm x 9.5mm DC power connector, refer to the figure below:.



Ignition Signal

The product has a “ignition signal” **optional** feature. By default the ignition signal is not installed. If you need this feature you can contact us when placing an order. In this setup, Pin 3 is the ignition signal pin.

To use this feature, apply a 24V DC input (relative to -) to Pin 3. If Pin 3 detects a low input voltage, the product will be shutdown. If Pin 3 detects a high input voltage, the product will be boot and running.



Power Input (with Ignition Signal)

Power Input Definition		
Pin Number	Definition	Description
Pin 1	Positive Input	DC Power Positive Terminal

Power Input Definition		
Pin 2	Negative Input	DC Power Negative Terminal
Pin 3	Ignition	Ignition Signal

Power Connector with Ignition Signal

Connectivity

There are many connectivity options available on the CS-A76-BOX industrial PC. It has 2 x USB 3.0 HOST, 1 x USB Type-C, 2 x RJ45, GbE (RJ45) Ethernet connector supporting up to 1 Gbps, and 5 x UART terminals (RS232/RS485), 2 x CAN FD.

RS232/RS485/CAN

The serial communication interfaces (RS485, RS232, and CAN FD) are routed to a **16-pin 3.81mm terminal**, as illustrated on the figure below.

Serial communication on both RS485 and RS232 interfaces can reach up to 115200 kbps.

⚠ Attention

1. The 120Ω match resistor for the CAN bus is NOT mounted by default.
2. The 120Ω match resistor for the RS485 is mounted by default.
3. RS485_3, RS485_4 and RS485_5 can control the input and output direction automatically. There's no need to control it from within the software.



RS232 RS485 CAN Pins

The table below offers more detailed description of every pin and its definition:

Pin Number	Definition	Description	OS Node
Pin 16	CAN1_H	CPU CAN2_M1, CAN H signal	
Pin 15	CAN1_L	CPU CAN2_M1, CAN L signal	CAN1

Pin Number	Definition	Description	OS Node
Pin 14	CANO_H	CPU CAN1_M1, CAN H signal	
Pin 13	CANO_L	CPU CAN1_M1, CAN L signal	CANO
Pin 12	RS485_5-	CPU UART1, RS485 -(B) signal	
Pin 11	RS485_5+	CPU UART1, RS485 +(A) signal	/dev/ttyS1
Pin 10	RS485_4-	CPU UART0, RS485 -(B) signal	
Pin 9	RS485_4+	CPU UART0, RS485 +(A) signal	/dev/ttyS0
Pin 8	RS485_3-	CPU UART4, RS485 -(B) signal	
Pin 7	RS485_3+	CPU UART4, RS485 +(A) signal	/dev/ttyS4
Pin 6	RS232_0_RXD	CPU UART6, RS232 RXD signal	
Pin 5	RS232_0_TXD	CPU UART6, RS232 TXD signal	/dev/ttyS6
Pin 4	RS232_2_RXD	CPU UART2, RS232 RXD signal, Debug Port	
Pin 3	RS232_2_TXD	CPU UART2, RS232 TXD signal, Debug Port	/dev/ttyFIQ
Pin 2	GND	System Ground	
Pin 1	+5V	System +5V Power Output, No more than 1A Current output	

RS232 / RS485 / CAN Pin Definition

GPIO

The CS-A76-BOX Industrial PC features a **10-pin 3.81 mm terminal** that provides 8 x opto-isolated GPIO pins, of which 4 x are output, and 4 x are input pins.

The GPIO **HIGH** output level corresponds to the voltage connected at the isolated Power Input, while the GPIO **LOW** output level corresponds to the isolated Ground Input.

The GPIO uses the 24V logic by default. You can use an external isolated power input but the power input range should be from 5V to 24V DC.

Attention

1. In order to use the Isolated Output, you need to add an external Isolated Power to the VDD_ISO and GND_ISO. The power voltage should not exceed 24V.
2. The output current can supply 500mA for every channel, but it also depends on the isolated power that is connected.
3. In order to use the Isolated Input, you need to add a signal to the InputX and GND_ISO. A 2.4KΩ resistor has been added to limit the input current, as shown in the figure below. This resistor should work well for the 5-24V input signal. If your input signal is less than 5V, please change this input resistor. The reduced schematic is for reference purpose, if you need the precise resistor schematic, please contact us.
4. If the isolation is not a requirement, it is possible to use a non-isolated PSU instead. It is also possible to use the onboard 5V power supply: it can be re-routed to the *Isolated Power Input* pin by populating two PCB resistor footprints with 0Ω resistors. In this case, the *Isolated Power Input* pin will become an output for the onboard 5V power supply.



Isolated GPIO reduced schematic



GPIO Terminal

Pin Number	Definition	GPIO Chip	GPIO Line
Pin 1	Isolated Power Input		
Pin 2	Isolated Ground Input		

Pin Number	Definition	GPIOD Chip	GPIOD Line
Pin 3	OUT1	4	14
Pin 4	OUT2	4	13
Pin 5	OUT3	4	8
Pin 6	OUT4	4	7
Pin 7	IN1	4	6
Pin 8	IN2	1	9
Pin 9	IN3	1	8
Pin 10	IN4	1	6

GPIO Pinout

USB Connectors

There are 2 x **USB HOST** and 1 x **USB DEVICE** (for flashing OS) ports onboard: 2 x USB 3.0 HOST, 1 x USB Type-C, as shown in the figures below.

Warning

Please unplug USB mouse/keyboard near RJ45 when flashing OS.

The USB-A host (near RJ45) and USB-C **can't be used** at the same time. Before boot into OS, USB-C is enabled for install OS image; after boot into OS, USB-A is enabled but USB-C is disabled. In Android, these can be configured; in Linux, these can't be configured.



USB 3.0 HOST Port



*USB Type-C Port***⚠ Warning**

Be careful not to touch surrounding electronic components accidentally while plugging USB devices into the embedded IPC version.

LAN Connectors

LAN (RJ45) connector provides 2 x RJ45 Ethernet connectivity over standardized Ethernet cables as shown in the figure below. The integrated Ethernet interface supports up to 1 Gbps data throughput.



RJ45 LAN Connector

Note

Use CAT5 or better cables to achieve full data throughput over maximum distance defined by the 1000BASE-T standard (100m).

WiFi & BT Module

The CS-A76-BOX Industrial PC is equipped with the WiFi-6 **Realtek RTL8852BE WiFi/BT** chip (through CPU PCIe lane) which supports Bluetooth V2.1+EDR/4.2/5.2, as well as IEEE802.11a/b/g/n/ac/ax 2.4/5 GHz Wireless LAN (WLAN).



Realtek RTL8852BE Chip

The CS-A76-BOX includes an SMA connector for an external WiFi/BT antenna, as illustrated in the figure below.



WiFi+BT Antenna SMA

4G/LTE Module


The CS-A76-BOX Industrial PC is equipped with a **mini-PCIe connector** (through USB CPU lane) that can connect an **optional** 4G/LTE module. The customer will also need a SIM Card Holder and a 4G/LTE antenna connector to ensure 4G/LTE works on the CS-A76-BOX. SIM card does **NOT** support hot plug. **Power off** before inserting or removing SIM card.



Mini PCI-e and 4G/LTE Module



4G/LTE Antenna

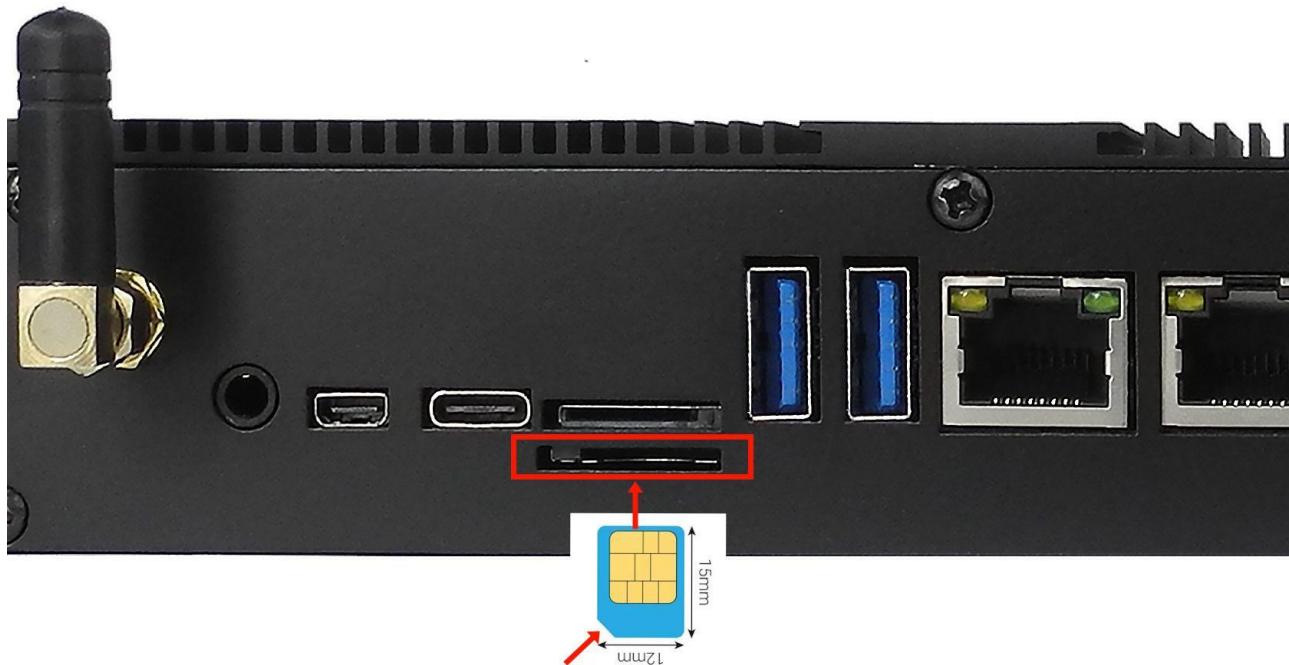

SIM Card Direction

⚠ Attention

The product does not come shipped with the 4G/LTE module by default. The customer can choose the 4G/LTE module option when placing an order, we will install all the necessary components.

TF Card Slot

The CS-A76-BOX Industrial PC features 1 x **TF Card (micro SD) slot**. TF Card can address up to 128GB of storage.



TF (micro SD) Card Slot

 **Note**

The product does not come shipped with the TF Card by default.


Audio Connectors

The CS-A76-BOX Industrial PC features some audio peripherals. It has a **3.5mm audio input/output jack**, an **internal speaker**, as well as a small **buzzer**.



Audio Connector

The miniature 2W embedded speaker is handy for audio reproduction, the small buzzer can play alarm/notification sounds.

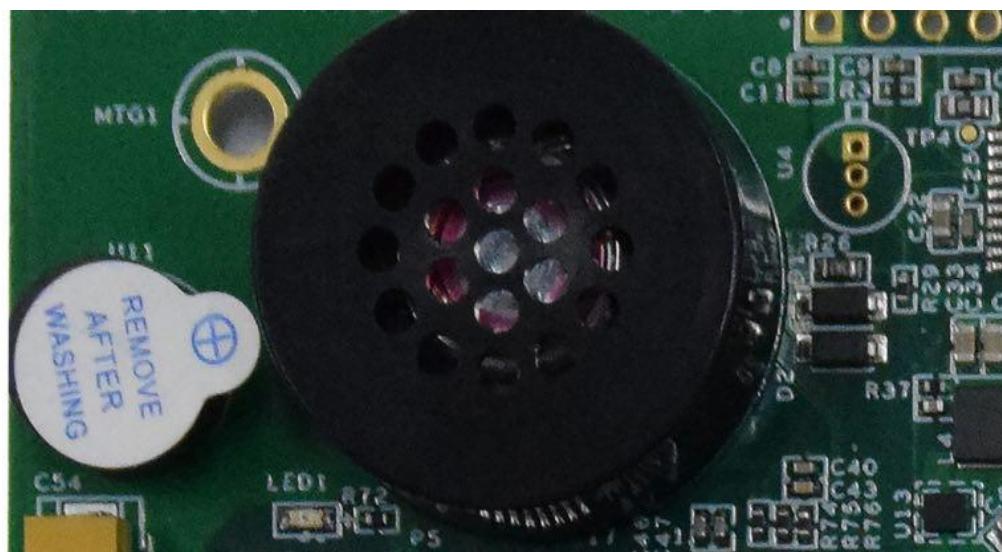

2W Micro Speaker and Buzzer

Attention

By plugging in the headphone cable, the internal speaker will be disabled automatically.

HDMI Connector

The CS-A76-BOX Industrial PC is equipped with 1 x HDMI-D (Micro-HDMI) Out port. The HDMI connector allows connecting an additional (external) monitor. HDMI output resolution can be configured by the software.



HDMI Connector

PROG Button

The CS-A76-BOX Industrial PC has one button on the board marked as PROG, as shown in the figure below.

When the button is pressed before powering up, the CS-A76-BOX will enter MASKROM mode. In this mode you can use a USB Type-C cable to upgrade its operating system. You can use this feature to flash another OS to the internal eMMC.

When the button is not pressed before and during power up, the CS-A76-BOX will boot normally.

There is no need to press the button during regular operation. However, if you need to flash the OS in MASKROM mode, the button will be used. Please refer to the [software documents](#) for more information.



Mounting Procedure

You can mount CS-A76-BOX with VESA mounting ([guide](#)): **75 x 75** mm, 4 x **M4** (6mm) screws.

You can also mount CS-A76-BOX with rear mounting method ([guide](#)).

Mechanical Specifications

For CS-A76-BOX, the outer mechanical dimensions are 209 x 125 x 37.3mm (W x L x H).

Please refer to the technical drawing in the figure below for details related to the specific product measurements.



CS-A76-BOX Technical Drawing

Disclaimer

This document is provided strictly for informational purposes. Its contents are subject to change without notice. Chipsee assumes no responsibility for any errors that may occur in this document. Furthermore, Chipsee reserves the right to alter the hardware, software, and/or specifications set forth herein at any time without prior notice and undertakes no obligation to update the information contained in this document.

While every effort has been made to ensure the accuracy of the information contained herein, this document is not guaranteed to be error-free. Further, it does not offer any warranties or conditions, whether expressed orally or implied in law, including implied warranties and conditions of merchantability or fitness for a particular purpose. We specifically disclaim any liability with respect to this document, and no contractual obligations are formed either directly or indirectly by this document.

Despite our best efforts to maintain the accuracy of the information in this document, we assume no responsibility for errors or omissions, nor for damages resulting from the use of the information herein. Please note that Chipsee products are not authorized for use as critical components in life support devices or systems.

Technical Support

If you encounter any difficulties or have questions related to this document, we encourage you to refer to our other documentation for potential solutions. If you cannot find the solution you're looking for, feel free to contact us. Please email Chipsee Technical Support at support@chipsee.com, providing all relevant information. We value your queries and suggestions and are committed to providing you with the assistance you require.