



Industrial PC

Android OS on AM335X

User Manual

For AM335X Products

Content can change at anytime, check our website for latest information of this product.
[www.chipsee.com](http://www(chipsee.com)

Contents

Android OS	3
1. Preparation	5
1.1. Hardware Requirements	5
1.2. Software Requirements	5
2. Getting Started and Tests	6
2.1. DIP Switch Configuration	6
2.2. Downloading Images	6
2.3. Prebuilt Files Package	6
2.4. How to make a bootable SD card	8
2.5. How flash Android to NAND	10
2.6. Start Android OS	12
2.7. Tests	13
2.7.1. Touch screen test	13
2.7.2. Buzzer test	15
2.7.3. Gravity sensor test	15
2.7.4. Audio IO test	16
2.7.5. Serial test	17
2.7.6. USB device test	19
2.8. Modify OS Start up Logo	20
2.9. IP settings	24
3. Android system debug in Windows	25
3.1. View Android system via the serial port	25
3.2. Adb connect via USB OTG	26
3.3. Adb connect via internet	30
4. Android App Development	32
4.1. Preparation	32
4.2. Example — Develop a <code>HelloWorld</code> Program	35
5. Disclaimer	39
6. Technical Support	39

Android OS

Android OS User Manual



This manual is used to provide users with a fast guide of Chipsee Industrial Computers (Abbreviated as IPC) about Android OS development. Through this manual, users can quickly understand the hardware resources; users can build a complete compilation of Android development environment; users can debug Android OS via serial, USB OTG and Internet.

Revision	Date	Author	Description
V1.0	2021-12-09	Randy	Initial Version

SUPPORTED BOARDS:

CS80480T050 CS80600T080 CS10600T070 CS80480T070 CS10768T097

PREBUILT FILES PACKAGE:

Prebuilt files for the various industrial PCs can be found in the [OS Downloads](#). Below are the links to the prebuilt files for each industrial PC model.

- [CS80480T050](#)
- [CS80600T080](#)
- [CS10600T070](#)
- [CS80480T070](#)
- [CS10768T097](#)

System Features

Feature	Comment
System	Android 4.1

Preparation

You will need to prepare the following items before you can start using the Prebuilt Files Package to re-flash the system.

Power Supply Unit (PSU) with the appropriate voltages, as follows:

- Products with 5" display panel require 6V to 36V PSU
- Products with 7" to 10.1" display panel and larger require 6V to 42V PSU
- USB to serial cable for debugging Chipsee Industrial Embedded Computers (Chipsee IPC)
- TF Card to create a bootable storage for re-flashing the system. Use the prebuilt files [link above](#) to re-flash the system.

Hardware Requirements

- Chipsee Industrial PC
- PSU according to the instructions above
- USB-to-serial or other serial cable for debugging
- TF Card (at least 4GB) and card reader
- USB A-A cable (used only if the hardware configured as OTG)
- Windows 7 PC

Software Requirements

- Android OS Prebuilt Files Package (from the link above)
- ADT for Windows
- Android USB driver (for Windows)

Getting Started and Tests

DIP Switch Configuration

Set the boot DIP switch, as shown on the figure below, to boot the system from the external SD Card.



Figure 770: Boot Mode Setup

Downloading Images

Chipsee IPC supports booting from an integrated eMMC or an external TF Card (also known as the micro SD card). Booting from the external TF Card allows flashing the system OS.

Note

The operator should use the prebuilt file we provided in the CD to test the hardware before re-flashing the system.

Prebuilt Files Package

You can get the Prebuilt Files Package for each model from links mentioned at the beginning of this documentation. You can also get the Prebuilt Files Package from the DVD in /Android/Prebuilds folder. However, it may be outdated so always compare the versions (the last number in the filename is the release date).

The prebuilt package has the following content:

Contents	Comment
boot/imx6ulipc.dtb	TF Card boot dtb file

Contents	Comment
boot/u-boot.imx	TF Card boot bootloader
boot/zImage	TF Card boot kernel file
filesystem/rootfs-emmc-flasher.tar.bz2	TF Card boot rootFS
mksdcard.sh	Shell tools to make bootable TF Card
README	Simple guidelines
S1.jpg	Boot Switch Config Figure
emmc-flash/emmc/rootfs.tar.gz	RootFS in target eMMC
emmc-flash/emmc/u-boot.imx	Bootloader in target eMMC
emmc-flash/emmc/zImage	Kernel file in target eMMC
emmc-flash/emmc/imx6ul-eisd.dtb	dtb file in target eMMC
emmc-flash/mkemmc.sh	Shell tools to download images

Table 278 Prebuilt Files Package

 **Note**

The default `zImage` and `imx6q-sabresd.dtb` files support '*keep the logo from uboot to kernel*' but do not support framebuffer. Chipsee provides `zImage_framebuffer` and `imx6q-eisd.dtb_framebuffer` file versions that support the framebuffer function but do not support the '*keep the logo from uboot kernel*' feature. If you need the framebuffer, just rename these two files to `zImage` and `imx6q-eisd.dtb`.

How to make a bootable SD card

The Prebuilt Files Package has a shell tool that can help create a bootable SD card using a Linux platform (such as desktop PC or Virtual Machine running Ubuntu 14.04 distribution). Use the SD Card to download the bootable system image onto the Linux platform and follow the steps below to create a bootable SD card:

1. Copy the Prebuilt Files Package to a Linux environment (such as Ubuntu 14.04).
2. Insert the SD card into your computer. If you are using virtual machines, please ensure the SD card is mounted to the Linux operating system.
3. **Confirm the SD card mount point, `/dev/sdX` (e.g., `/dev/sdc` or `/dev/sdb`, be sure to use the right one). In a Linux system, you can use the command below to find out what `X` is.**

```
$ sudo fdisk -l
```

4. Copy the `prebuilt-jb-hmi-XXXX.tar.gz` to somewhere(such as \$HOME).
5. **Extract the `prebuilt-jb-hmi-XXXX.tar.gz`**

```
$ tar -xzvf prebuilt-jb-hmi-XXXX.tar.gz
```

6. **Go to the folder**

```
$ cd ~/Prebuilt-CS-androidXXXXXX/prebuilt-sd/
```

7. **Use the following command to flash the Android OS to the SD card**

```
$ sudo ./mkmmc-android.sh --device /dev/sd<?>
```

Note

- `sd<?>` means the SD card mount point, (e.g., `/dev/sdc` or `/dev/sdb`) in Ubuntu system.
- The recommended SD card should be Sandisk Class4 level SD card or above.

8. The bootable SD Card is now ready. Power OFF the industrial PC and insert the SD Card.
9. Set the DIP switch to uSD BOOT mode. (refer to [DIP Switch Configuration](#) above)
10. Connect the industrial PC to PC via COM1. Power ON the IPC.

11. After 20 minutes, if the LED on industrial PC stays lit, flashing is completed. Using COM1, you can also find this message >>>>> **eMMC Flashing Completed <<<<<** which indicates that the system image was downloaded correctly to the eMMC.
12. Power OFF the IPC and set the DIP switch to eMMC BOOT mode. (refer to [DIP Switch Configuration](#) above)

How flash Android to NAND

The Prebuilt Files Package has a shell tool that can help create a bootable NAND card using a Linux platform (such as desktop PC or Virtual Machine running Ubuntu 14.04 distribution).

Follow the steps below to create a bootable NAND card:

1. Copy the Prebuilt Files Package to a Linux environment (such as Ubuntu 14.04).
2. Insert the SD card into your computer. If you are using virtual machines, please ensure the SD card is mounted to the Linux operating system.
3. **Confirm the SD card mount point, `/dev/sdX` (e.g., `/dev/sdc` or `/dev/sdb`, be sure to use the right one). In a Linux system, you can use the command below to find out what `X` is.**

```
$ sudo fdisk -l
```

4. Copy the prebuilt file `prebuilt-jb-hmi-XXXX.tar.gz` to somewhere(such as \$HOME).
5. **Extract the prebuilt file `prebuilt-jb-hmi-XXXX.tar.gz`**

```
$ tar -xzvf prebuilt-jb-hmi-XXXX.tar.gz
```

6. **Go to the folder `prebuilt-jb-hmi-XXXX/prebuilt-nand/`**

```
$ cd ~/prebuilt-jb-hmi-XXXX/prebuilt-nand/
```

7. **Use the following command to flash the Android OS to the NAND card**

```
$ sudo ./mkmmc-android-nand.sh --device /dev/sd<?>
```

Note

- `sd<?>` means the SD card mount point, (e.g., `/dev/sdc` or `/dev/sdb`) in Ubuntu system.
- The recommended SD card should be Sandisk Class4 level SD card or above.

8. The bootable NAND Card is now ready. Power OFF the industrial PC and insert the NAND Card.
9. Set the DIP switch to NAND BOOT mode. (refer to [DIP Switch Configuration](#) above)
10. Connect the industrial PC to PC via COM1. Power ON the IPC.

11. After 20 minutes, if the LED on industrial PC stays lit, flashing is completed. Using COM1, you can also find this message >>>>> **eMMC Flashing Completed <<<<<** which indicates that the system image was downloaded correctly to the eMMC.
12. Power OFF the IPC and set the DIP switch to eMMC BOOT mode. (refer to [DIP Switch Configuration](#) above)

Start Android OS

The first time you start Android OS on the industrial PC will take a little time. But after the first time, Android OS will start quickly. When the Android OS starts up, you will see the Chipsee Logo on the LCD screen. It is a successful start if you see the Android OS desktop such as the one shown in the figure below:



Figure 771: Android OS start-up screen

Tests

Touch screen test

Run **MultiTouch** Tester App.

The screen will show the number and position of the touch point when touching the screen.

Note

Resistive screen expansion board only supports single-touch, and capacitive screen expansion board supports five-point touch as described in the figure below.



Figure 772: Touch screen test (Capacitive touch)

After working for some time, the resistive touch screen may not be accurate. The user must run a touch screen calibration test.

Run **Chipsee TouchCal** App as described in the figure below.



Figure 773: Touch screen calibration test (Resistive touch)

Buzzer test

Run **Chipsee Buzzer** App.

Push the “OpenBuzzer” button to start the buzzer sound.

Push the “CloseBuzzer” button to stop the sound.

Gravity sensor test

You can test the gravity sensor by whirling the screen.

- Run **SensorList** App.
- In the “Analog Device 3 axis accelerometer” option, you can see real-time changes of the three-axis acceleration value curve, as shown on the figure below.

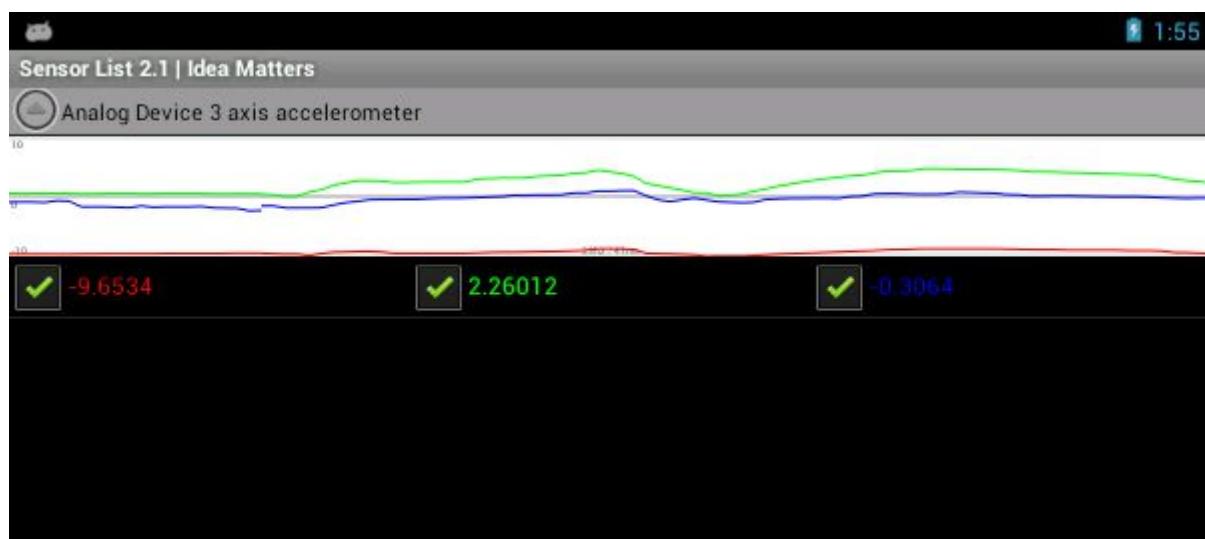


Figure 774: Real-time acceleration curve

- You can also test gravity using a gravity sensing game, such as “NFS shift” or “Tilt 3D laby”. If you use “NFS shift”, please run the **ChipseeSensorTool** app to adjust the direction of the axis by selecting “Invert X-axis” and “Swap X/Y axes”. If you use other games, please adjust the settings as default.

Audio IO test

Insert the microphone and earphones into the Audio IO interface (Audio IN coloured pink, Audio OUT coloured light blue).

Start **Talking Tom** App (Tom Cat).

Speak into the microphone, Tom the cat will repeat spoken content.

Serial test

There are four serial ports on the Chipsee IPC: 2 X RS232 and 2 X RS485. Refer to the table below for the available serial device nodes.

Ports	Device Node
COM1(RS232, Debug)	/dev/ttyO0
COM2(RS232)	/dev/ttyO1
COM3(RS485)	/dev/ttyO2
COM4(RS485)	/dev/ttyO4

Table 279 Serial Ports Nodes on the System

You can install the **SecureCRT** or **Putty** software on a Windows 7 PC to test the serial ports by following these steps:

- Connect COM1 on industrial PC board to Windows 7 PC.
- Run **Serial Port API** App to communicate with Windows 7 PC, as shown on the figure below.

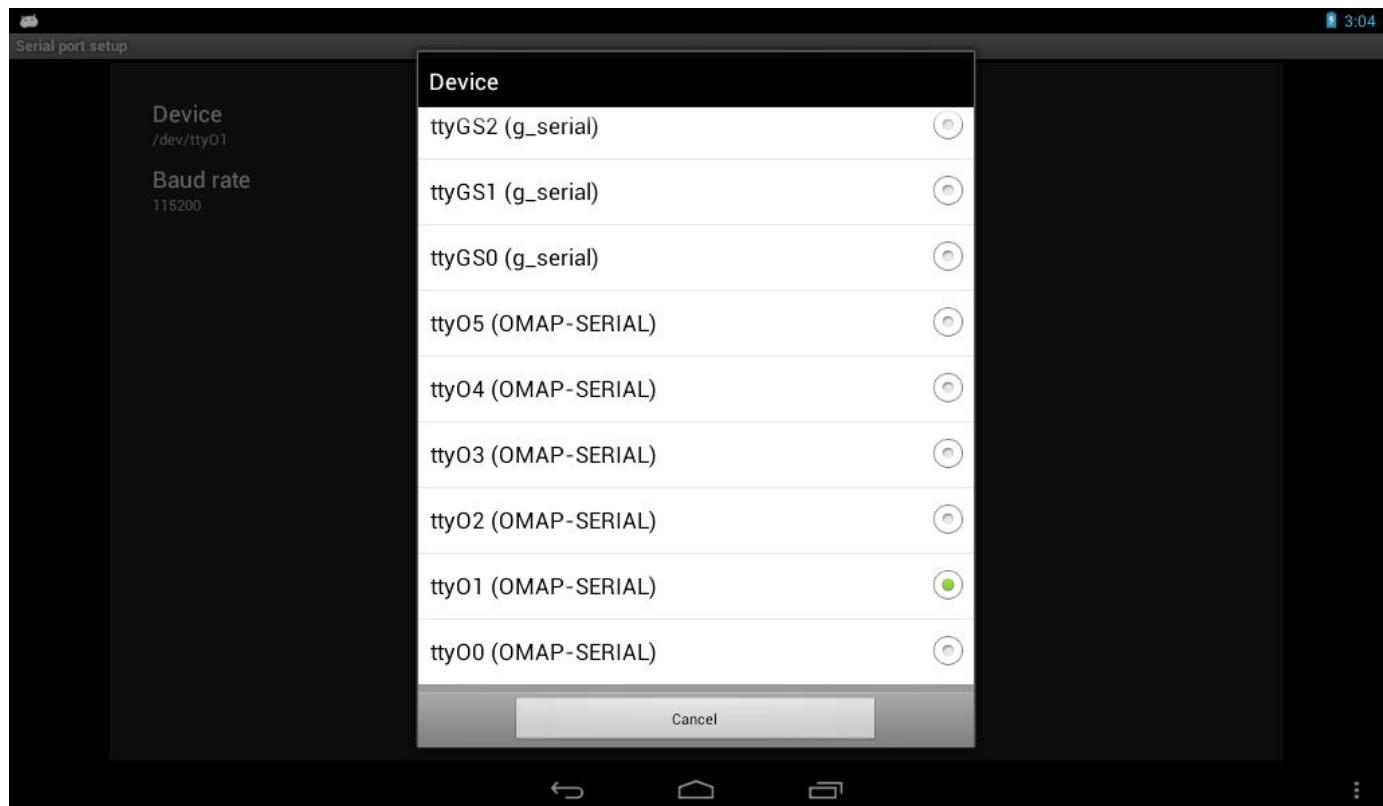


Figure 775: Serial settings

- Push the button with the label “Send 01010101”, you will see something on the Windows 7 PC that looks similar to the figure below.

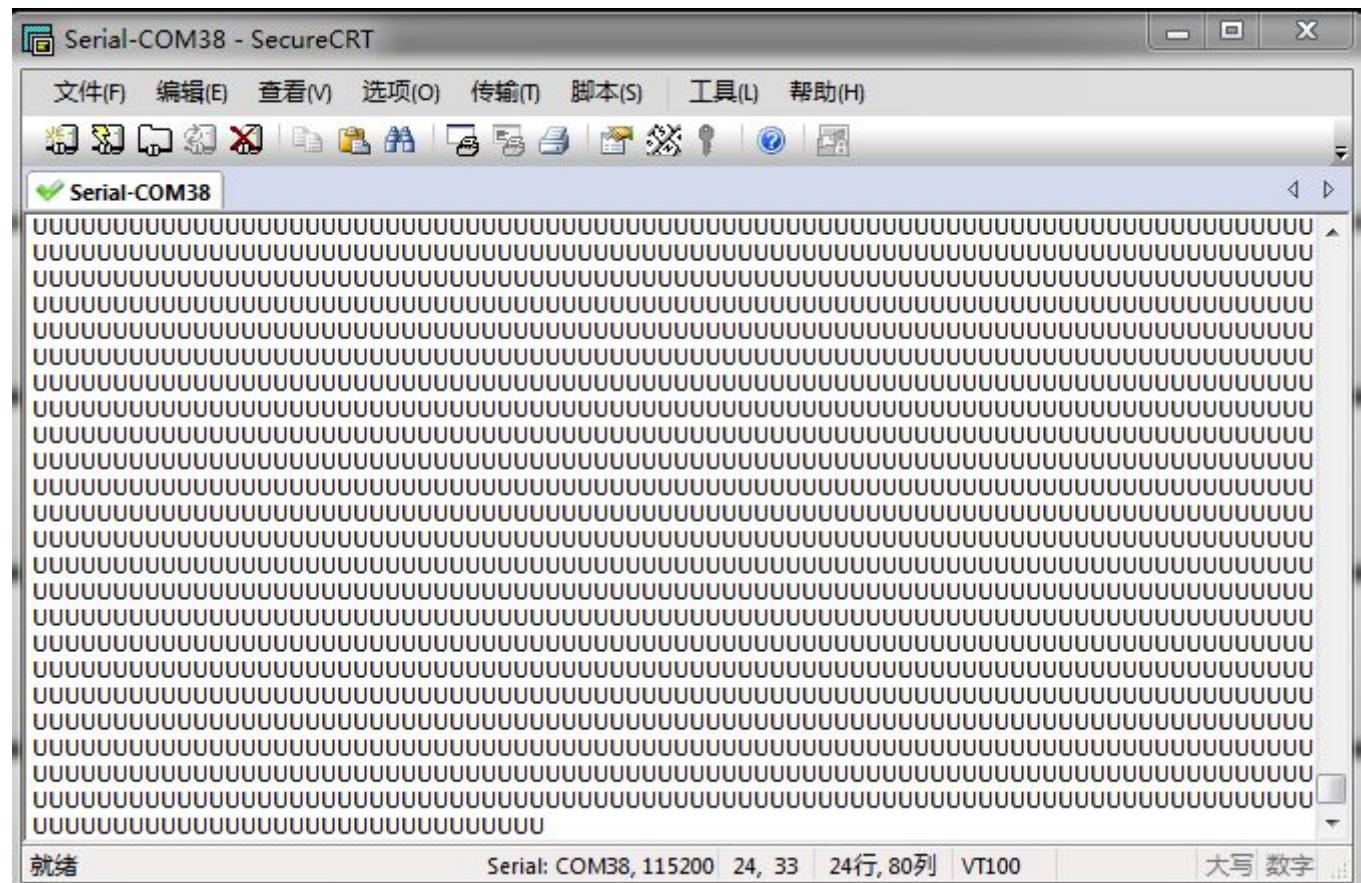


Figure 776: Serial send test

- Push the button with the label “Console”, to send whatever you like as shown on the figure below.

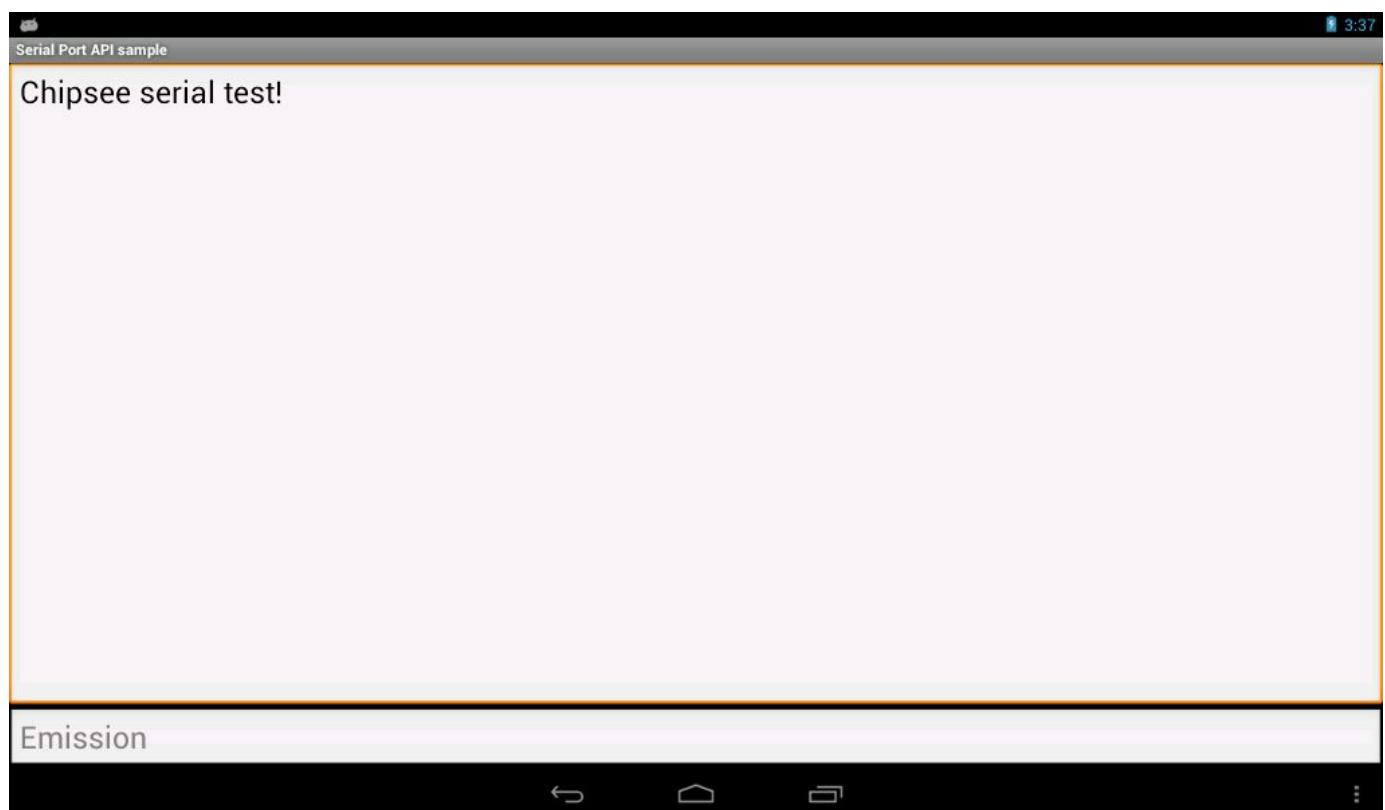


Figure 777: Serial receive test

USB device test

USB-WiFi

The Android OS supports USB-WiFi (RTL8188). You can find the device in settings, as shown on the figure below.

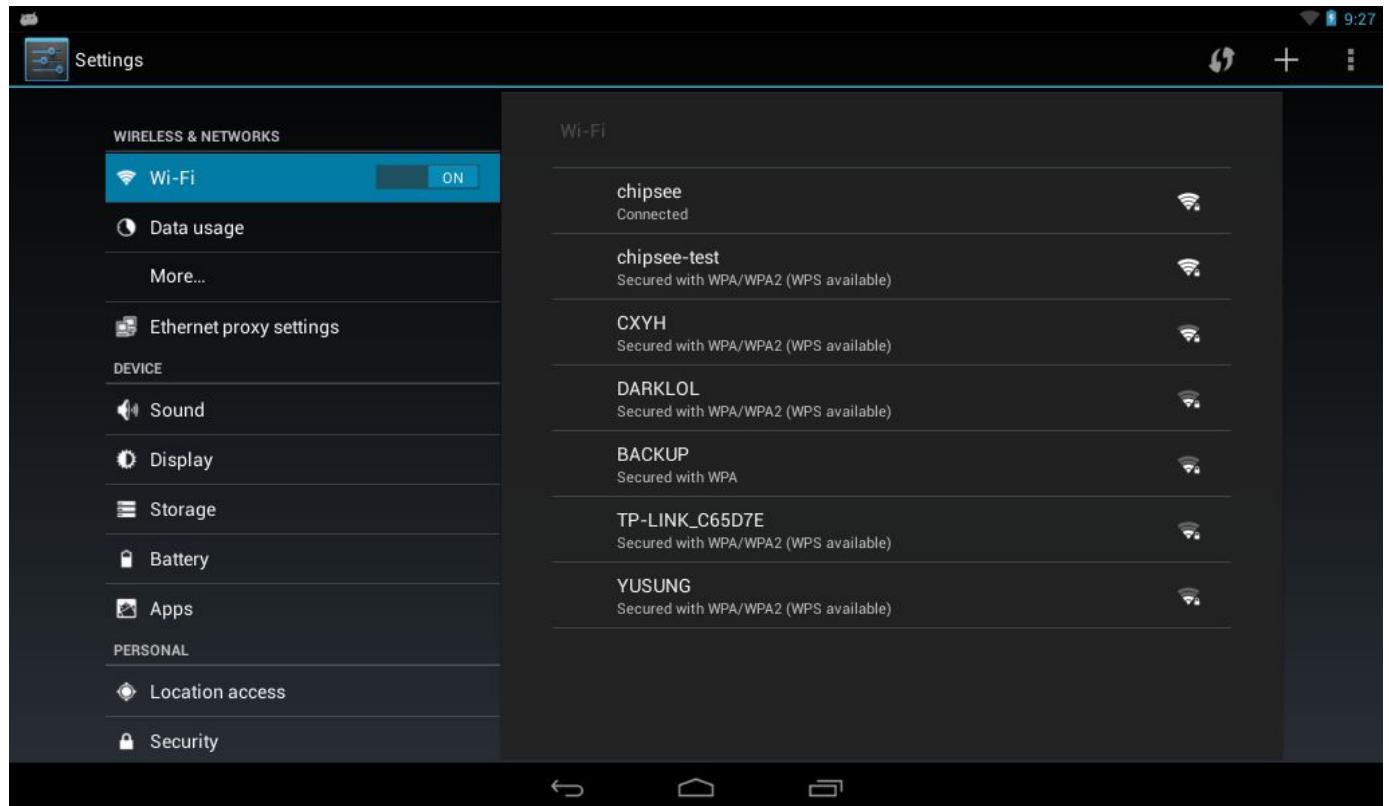


Figure 778: USB-WiFi

USB-Camera

The Android OS supports USB-Camera. You can find the device in settings, as shown on the figure below.

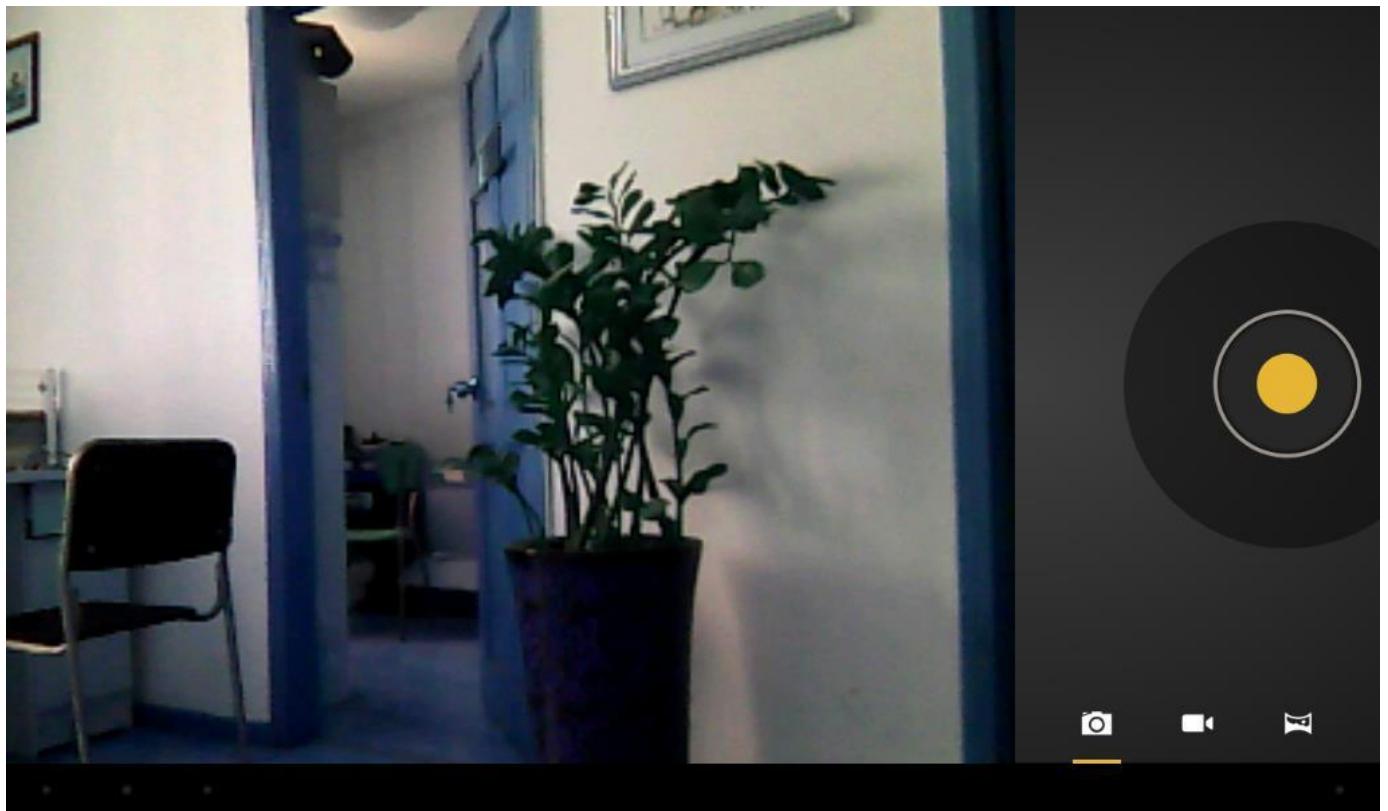


Figure 779: USB-Camera

Modify OS Start up Logo

Chipsee® provides a software to change the OS boot up logo. The software [ChipSee_LOGO_MOD_EN.exe](#) is provided on the CD for a product.

To change the logo, follow these steps:

1. Open the software: [ChipSee_LOGO_MOD_EN.exe](#) in Windows



Figure 780: Chipsee OS Boot-up Logo Modify Software

2. Click the first Browse button. Select the picture file you want to use as the logo.

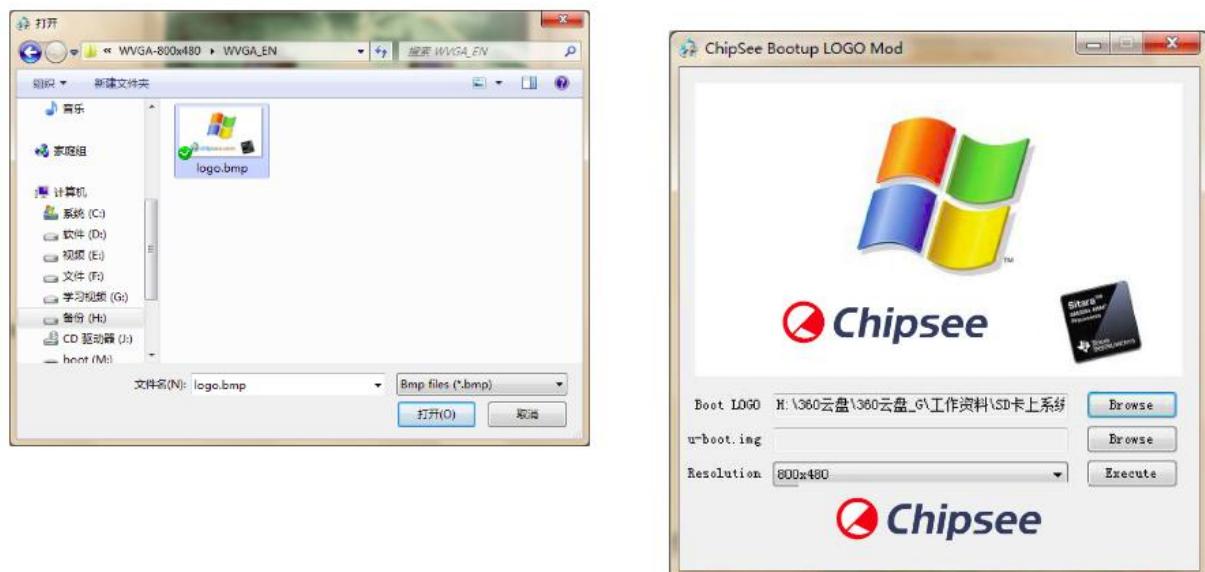


Figure 781: Choose the Logo you want

3. Click the second Browse button. Select the `u-boot.img` file you want to use.

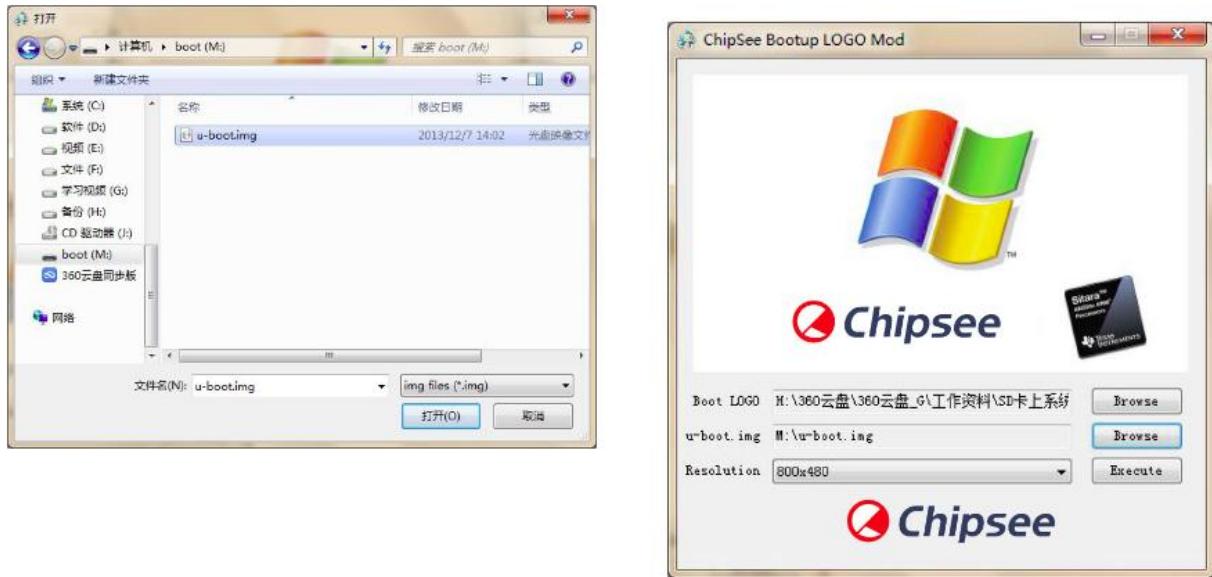


Figure 782: Choose the u-boot.img file

4. Choose the correct resolution for your product, then click Execute.



Figure 783: Change the Logo successful

5. Insert the SD card into the IPC. Power ON the IPC and the Logo will be replaced.

IP settings

To make changes to the IP address, follow these steps:

- Search the **boot partition** for the `uEnv.txt` file.
- **Open and edit the file `uEnv.txt` with any text editor.**

```
bootargs=console=tty00,115200n8 androidboot.console=tty00 mem=512M root=/dev/mmcblk0p2 rw rootfstype=ext4 rootwait init=/init ip=off
```

- **Edit the part with `ip=value`, where value = off OR <iPv4 address>:::<Subnet mask>**

For example: .. code:

```
bootargs=console=tty00,115200n8 androidboot.console=tty00 mem=512M root=/dev/mmcblk0p2 rw rootfstype=ext4 rootwait init=/init ip=192.168.1.111:::255.255.0.0
```

Note

Inputting wrong details could harm the industrial PC and because of that you should backup the file before making any changes. This can help you reverse changes easily if an error occurs.

Android system debug in Windows

In this section, we will discover how to view the Android system via the serial port and debug the system via USB OTG.

Also, we will discover how to install and uninstall applications via USB OTG.


The following operation is under the Windows 7 x64 environment, similar to other Windows platforms.

View Android system via the serial port

Install the **SecureCRT** or **Putty** software on a Windows 7 PC to view the Android system via the serial ports.

Follow these steps to view Android system via the serial port:

- Connect COM1 on the industrial PC board to Windows 7 PC.
- Open the **SecureCRT** or **Putty** software on the Windows 7 PC.
- Power ON the industrial PC. You will see the serial output information as shown on the figure below.

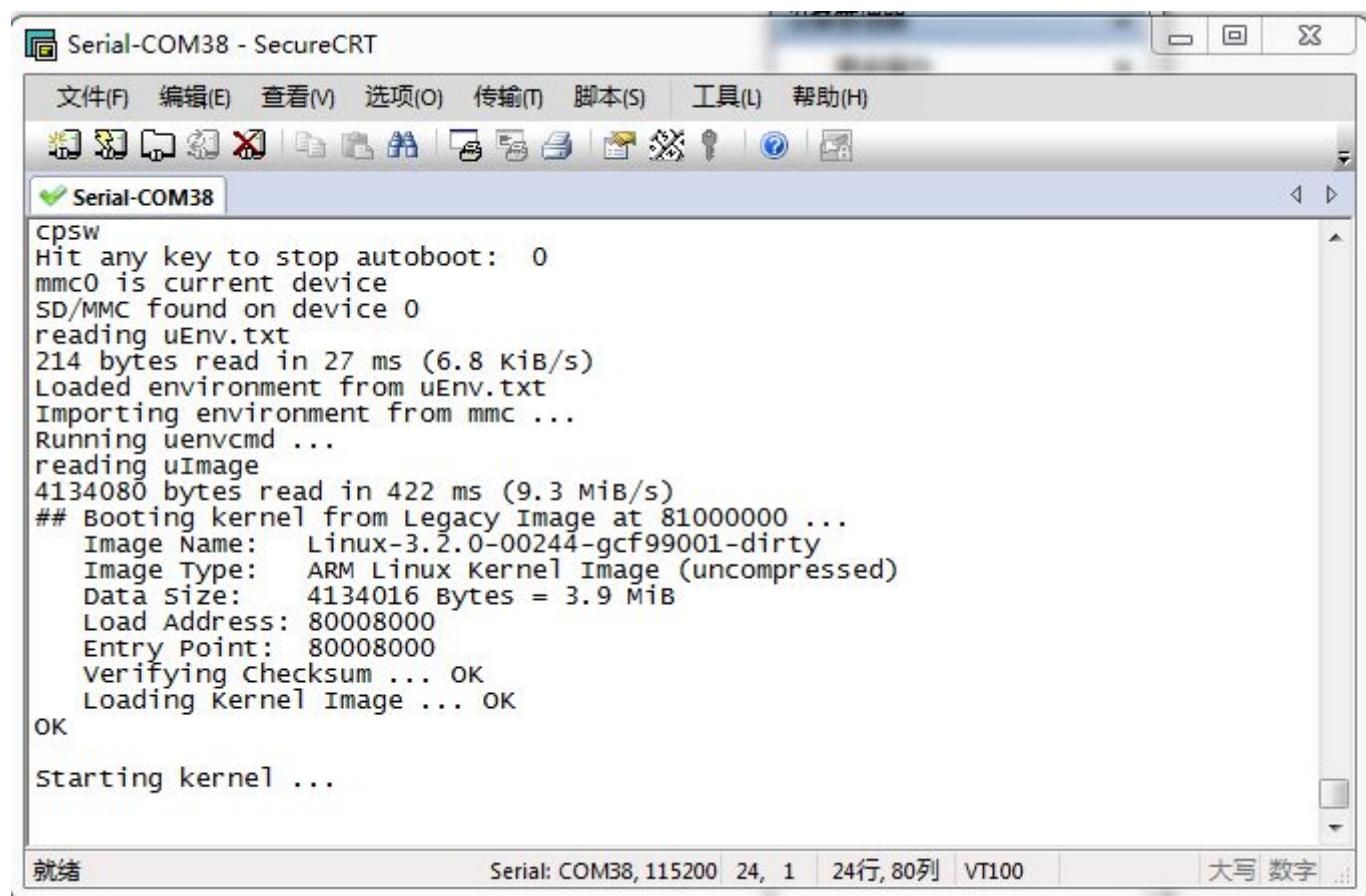

The screenshot shows the SecureCRT application window titled "Serial-COM38 - SecureCRT". The menu bar includes "文件(F)", "编辑(E)", "查看(M)", "选项(O)", "传输(T)", "脚本(S)", "工具(L)", and "帮助(H)". The toolbar contains icons for file operations like Open, Save, and Copy. A status bar at the bottom shows "就绪", "Serial: COM38, 115200", "24, 1", "24行, 80列", "VT100", and input mode settings "大写 数字". The main terminal window displays the following serial output:

```
cpsw
Hit any key to stop autoboot: 0
mmc0 is current device
SD/MMC found on device 0
reading uEnv.txt
214 bytes read in 27 ms (6.8 KiB/s)
Loaded environment from uEnv.txt
Importing environment from mmc ...
Running uenvcmd ...
reading uImage
4134080 bytes read in 422 ms (9.3 MiB/s)
## Booting kernel from Legacy Image at 81000000 ...
  Image Name:  Linux-3.2.0-00244-gcf99001-dirty
  Image Type:  ARM Linux Kernel Image (uncompressed)
  Data Size:  4134016 Bytes = 3.9 MiB
  Load Address: 80008000
  Entry Point: 80008000
  Verifying checksum ... OK
  Loading Kernel Image ... OK
OK

Starting kernel ...
```

Figure 784: Serial output information

Adb connect via USB OTG

1. Download [Oracle JDK 6](#) and [Android Studio SDK](#) for Windows. We suggest you download JDK-6u45.
2. Install Oracle JDK 6 and Android Studio SDK for Windows.
3. Extract the file somewhere (the name for the extracted folder is ADT).
4. The ADB command is in the `<ADT>\sdk\platform-tools` folder.
5. **Optionally, you can add the location of the SDK's primary tools directory to your system PATH by following these steps:**

- Right-click on My Computer, and select Properties.
- Under the Advanced tab, hit the Environment Variables button.
- In the dialogue that comes up, double-click on Path (under System Variables).
- Add the full path to the toolsdirectory to the path.

6. Install Android USB driver on Windows:

- Copy the `usb_driver` folder on the CD to a folder on the Windows 7 PC.
- Boot the board as normal and wait until shell prompt is available (disconnect the micro-B USB cable).
- Connect a micro-B USB cable between the board and Windows 7 PC.
- If it is proceeding as planned, Windows will recognise the new hardware and ask you to install drivers for it.
- Right click on the hardware. Click on install driver.
- Choose the answer **No, not this time** to the question about running Windows Update to search for software.
- Choose **Install the hardware that I manually select from a list (Advanced)** this is the 2nd option, then click **Next**.
- Browse to your driver folder (`\usb_driver`). and look for a `.inf` file.
- Select `android_winusb.inf` and click **Open** then **OK**. It's the only file in the folder, so you shouldn't go wrong.
- Select **Android ADB Interface** then click the **Next** button.
- A warning will appear, answer **Yes** but read the warning, anyway.
- When the wizard finishes, click the **Close** button .

- Now you can see it installed the driver successfully, as shown on the figure below.



Figure 785: ADB Driver

7. Test ADB by following these steps:

- Press the **Win+r** key combination to open the *Run Command* dialogue box.
- Type **cmd** and press enter.
- Execute the commands below in the command prompt.

```
> cd <ADT>\sdk\platform-tools\
> adb kill-server
> adb start-server
> adb devices
> adb shell
```

- If the **#** prompt appears at the beginning of the command line, it means we connected the industrial PC with the Windows 7 PC successfully as shown on the figure below.

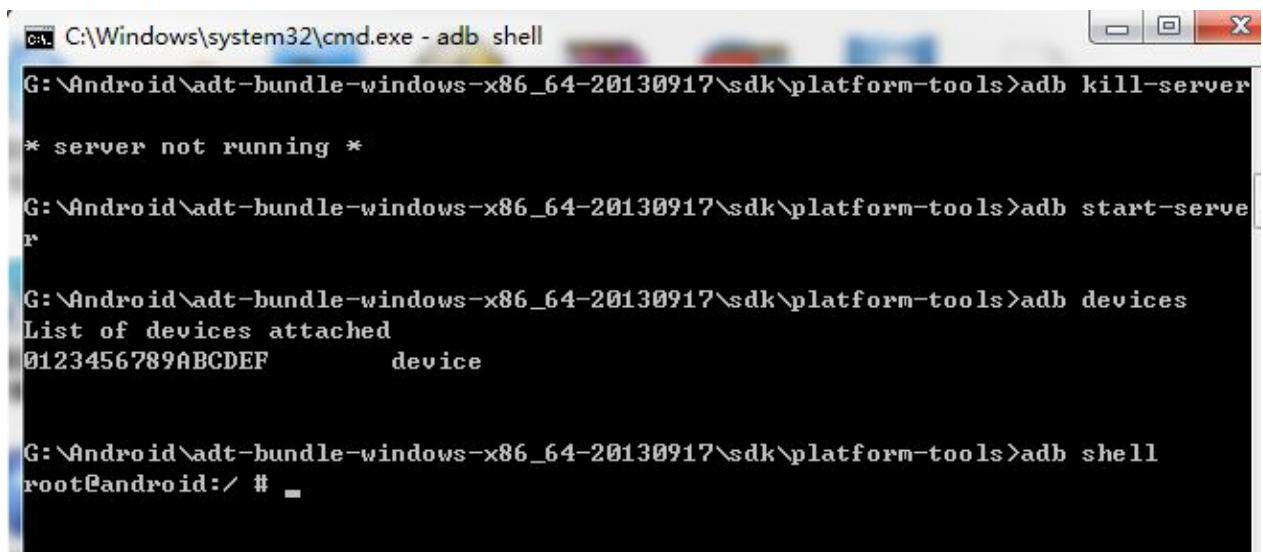


Figure 786: ADB Command

- Now you can use Linux commands like **ls**, **cd** and so on. Press **Ctrl + C** to exit the shell and return to the Windows system.

8. Use the `adb` command to install an Android App: for example `SogouInput.apk`. If there is a SUCCESS message, as shown on the figure below, then the app installation was successful.

```
> adb install SogouInput.apk
```

```
C:\Windows\system32\cmd.exe
G:\Android\adt-bundle-windows-x86_64-20130917\sdk\platform-tools>adb install SogouInput.apk
2972 KB/s <11137726 bytes in 3.659s>
    pkg: /data/local/tmp/SogouInput.apk
Success

G:\Android\adt-bundle-windows-x86_64-20130917\sdk\platform-tools>
```

Figure 787: Install App

9. Use `adb` command to uninstall an Android app: for example `SogouInput.apk`. Follow these commands to uninstall an app.

```
> adb shell pm list packages
> adb uninstall com.sohu.inputmethod.sogou
```

- The `pm list` command gets the full name of the app, as shown on the figure below.

```
C:\Windows\system32\cmd.exe
G:\Android\adt-bundle-windows-x86_64-20130917\sdk\platform-tools>adb shell pm list packages
      package:com.sohu.inputmethod.sogou
G:\Android\adt-bundle-windows-x86_64-20130917\sdk\platform-tools>
```

Figure 788: Command `pm list` to get app's name

- The `uninstall` command uninstalls the app from the Android system.
- Delete the apk file for the app by using these commands:

```
> adb shell
# cd /system/app/
# ls
# rm Browser.apk
```

10. Use `adb` command to transport files between the industrial PC and Windows 7 PC.

- Transfer file from the industrial PC to Windows 7 PC using `adb pull` command.

```
> adb pull <pathTo_file_on_board> <pathTo_store_file_on_PC>
```

- Transfer file from the Windows 7 PC to the industrial PC using `adb push` command.

```
> adb push <pathTo_file_on_PC> <pathTo_store_file_on_board>
```

Adb connect via internet

1. The Ethernet port on the industrial PC and the host machine (Windows 7 PC) should connect to the network. Check Ethernet configuration for the industrial PC using the command below.

```
# netcfg
lo      UP    127.0.0.1      255.0.0.0      0x00000049
eth0    UP    192.168.1.117/24  255.255.252.0  0x00001043
```

2. If the industrial PC's Ethernet is not configured, configure the Ethernet using the `ifconfig / netcfg` command as shown below.

```
# netcfg eth0 dhcp
```

3. Configure the ADB Daemon to use an Ethernet connection using the `setprop` command, as shown below.

```
# setprop service.adb.tcp.port 5555
```

4. If the network is configured successfully using the steps above, then Restart `service adbd` on the Windows 7 PC.

```
# stop adbd
# start adbd
```

5. On the host machine (Windows 7 PC) use the following commands to establish the `adb` connection.

```
$ adb kill-server
$ adb start-server
$ adb connect :5555
```

6. Verify the device connectivity, by executing the following commands. If connected, find the device name listed as ``IPADDRESS:PORT``.

```
$ adb devices
List of devices attached
emulator-5554    device
192.168.1.117:5555 device
```

7. An example of using the `adb` command to install software for Android. Make sure the `"**".apk` file is at the current folder, and export the adb path.

- Use the argument `-s` to assign the device to use over the internet.

```
$ adb -s 192.168.1.117:5555 install "**".apk
```

Android App Development

In this section, we will introduce the development of an Android app with Eclipse on Windows. We assume that the USB is OTG model and the driver is already installed. (See [Adb connect via USB OTG](#))

Preparation

1. Download and install [Eclipse IDE](#).
2. Go to the `/eclipse` folder, start `eclipse.exe`.

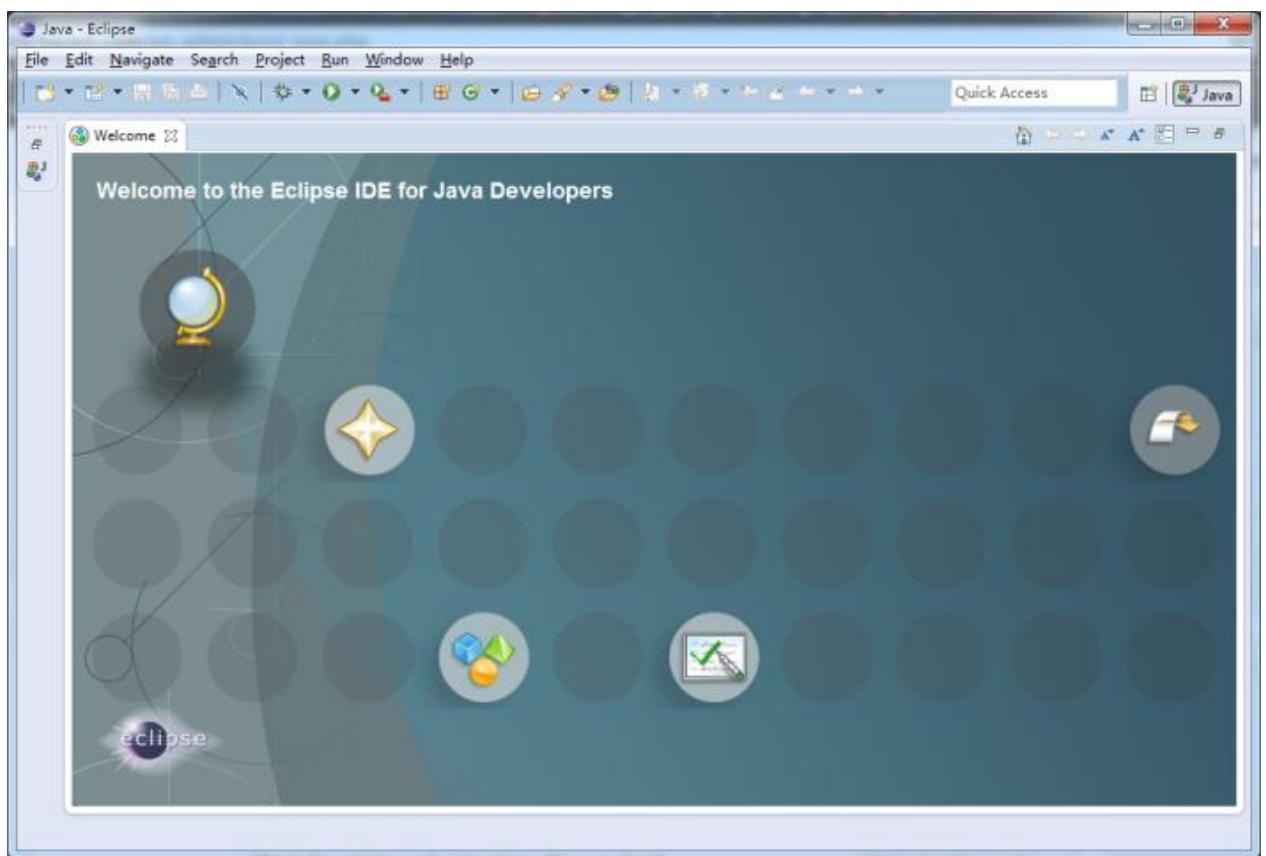


Figure 789: Start eclipse

3. Click Windows->Android SDK Manager to open SDK Manager.

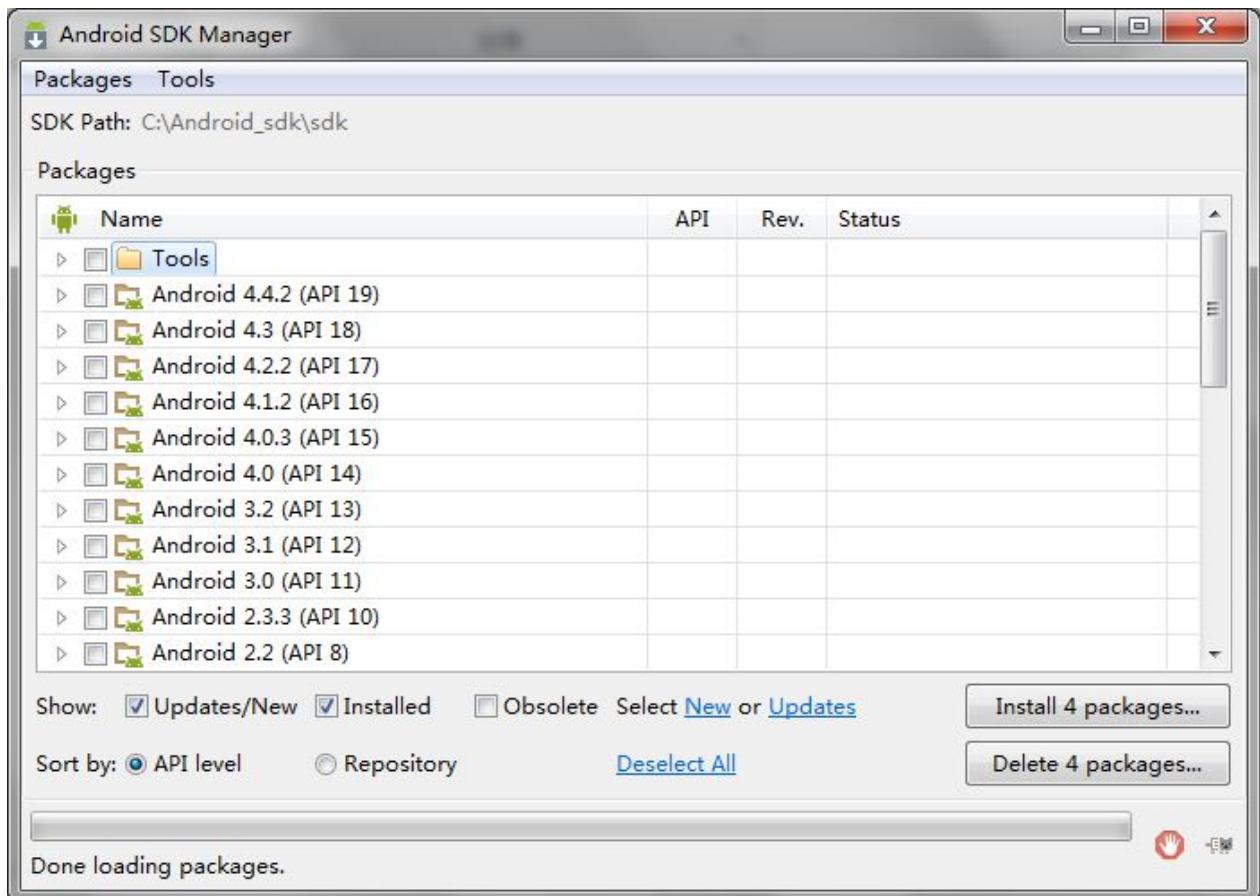


Figure 790: Android SDK Manager

4. Click Tools->Options, check the **Force** box and click close.

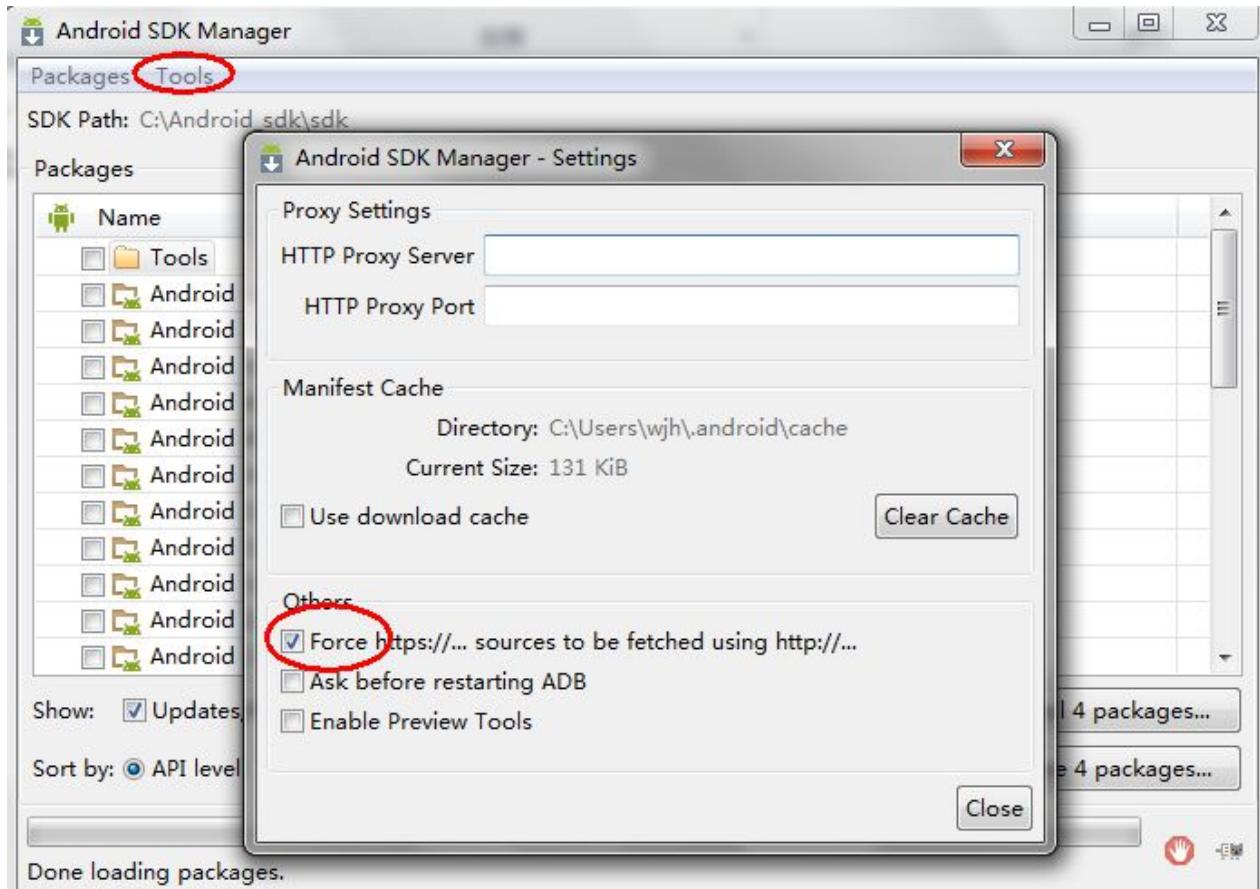


Figure 791: Android SDK Manager Settings

5. Choose the API, such as Android4.2.2(API 17), then click the Install packages button to start the download and installation of API packages.

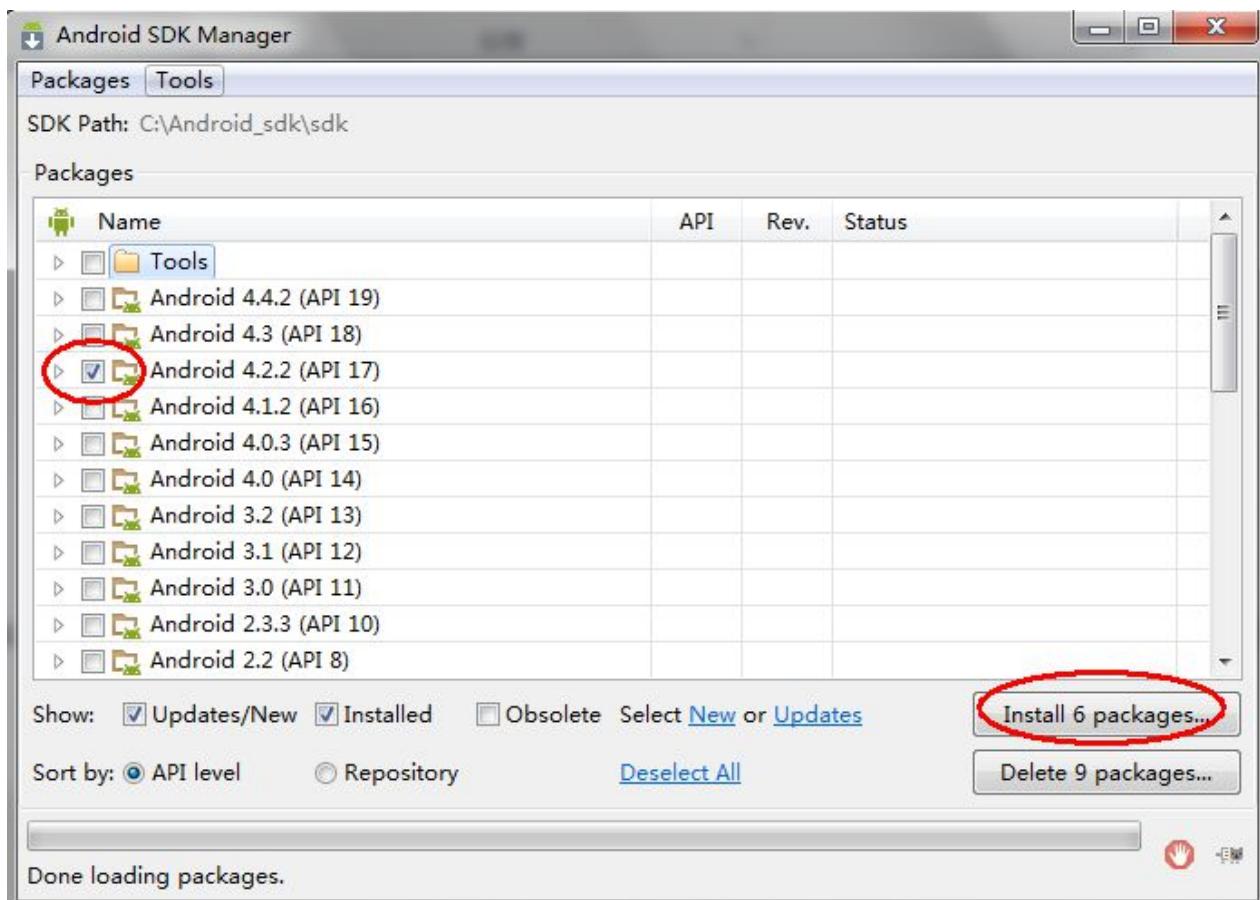


Figure 792: Install API packages

6. Downloading and installing the packages will take some time. When the process completes, close the Android SDK Manager.

Example — Develop a `HelloWorld` Program

1. Click File->New->Android Application Project

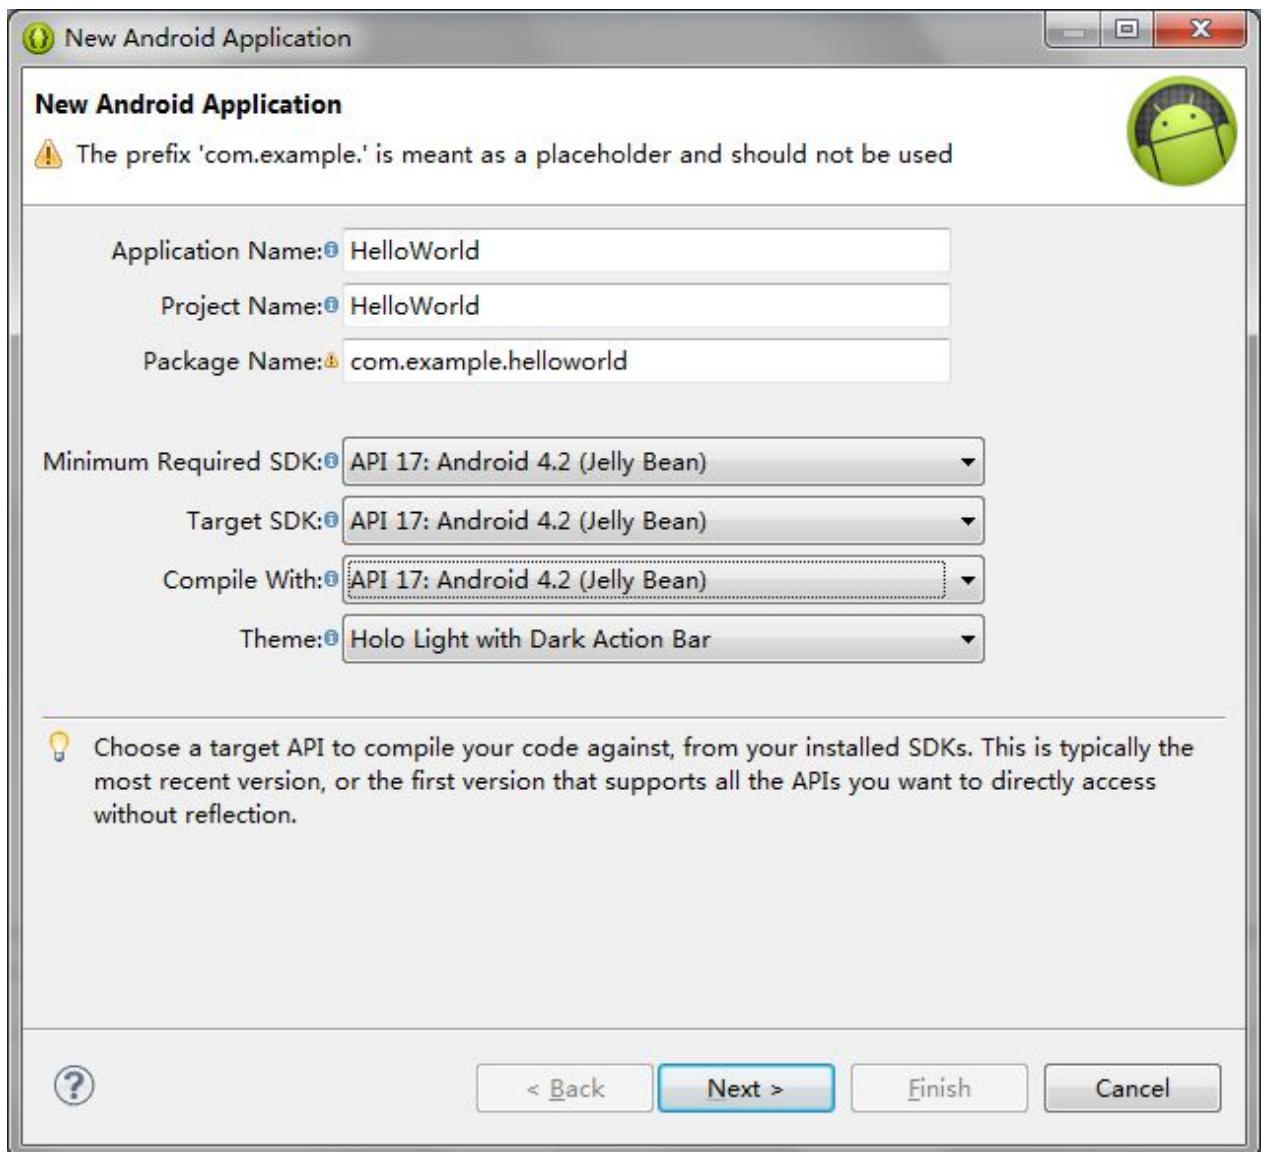


Figure 793: New Application

2. Click on the Next button until the app project is created. Connect the industrial PC to Windows 7 PC via the USB cable (A-A). If the connection is successful, you will see the device in the DDMS window (Windows->Open Perspective->Other->DDMS)



Figure 794: DDMS

3. You can capture the desktop of Android



Figure 795: Capture Android Desktop

4. Click run, and choose the device

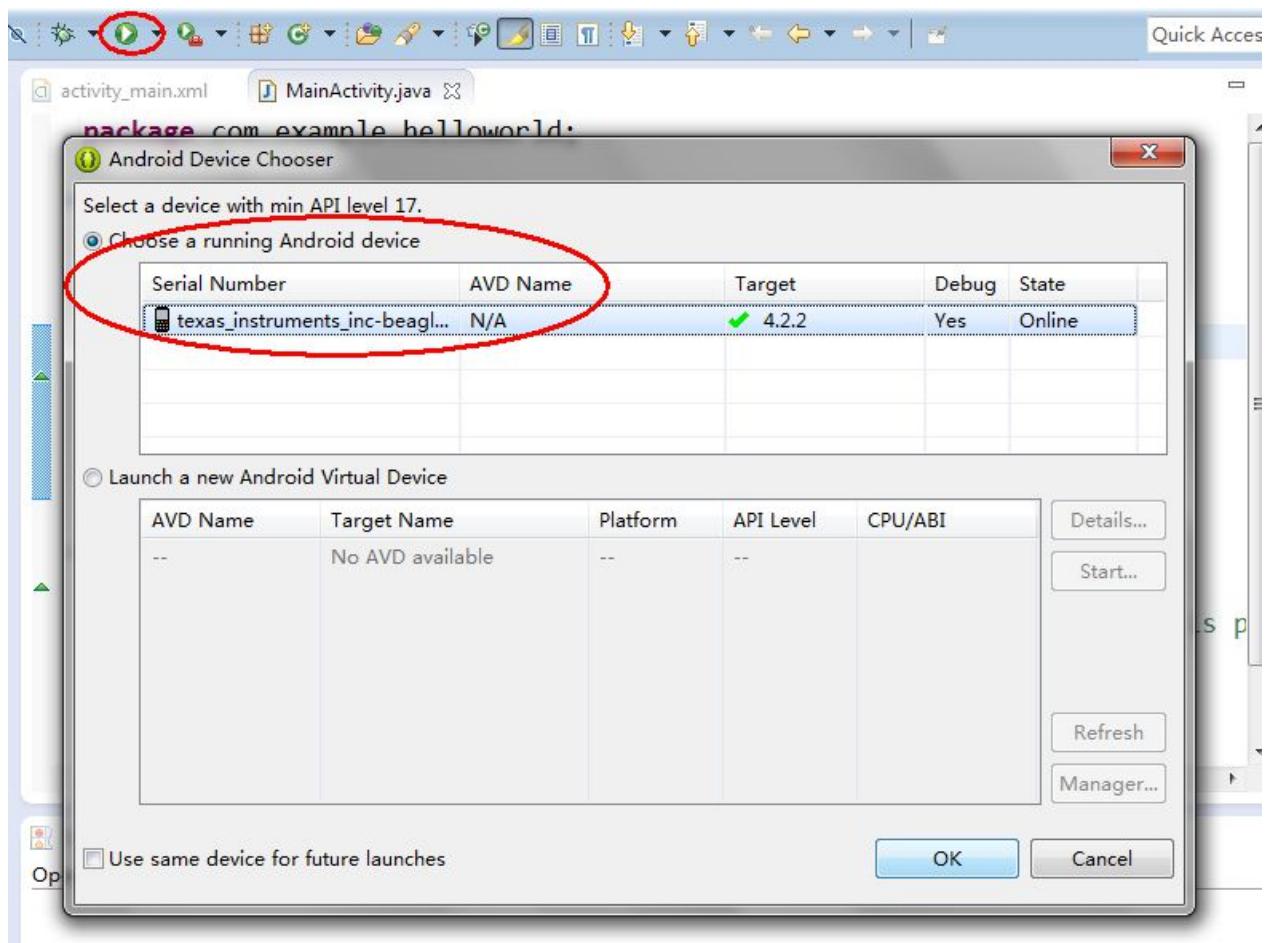


Figure 796: Run HelloWorld Program

5. Result

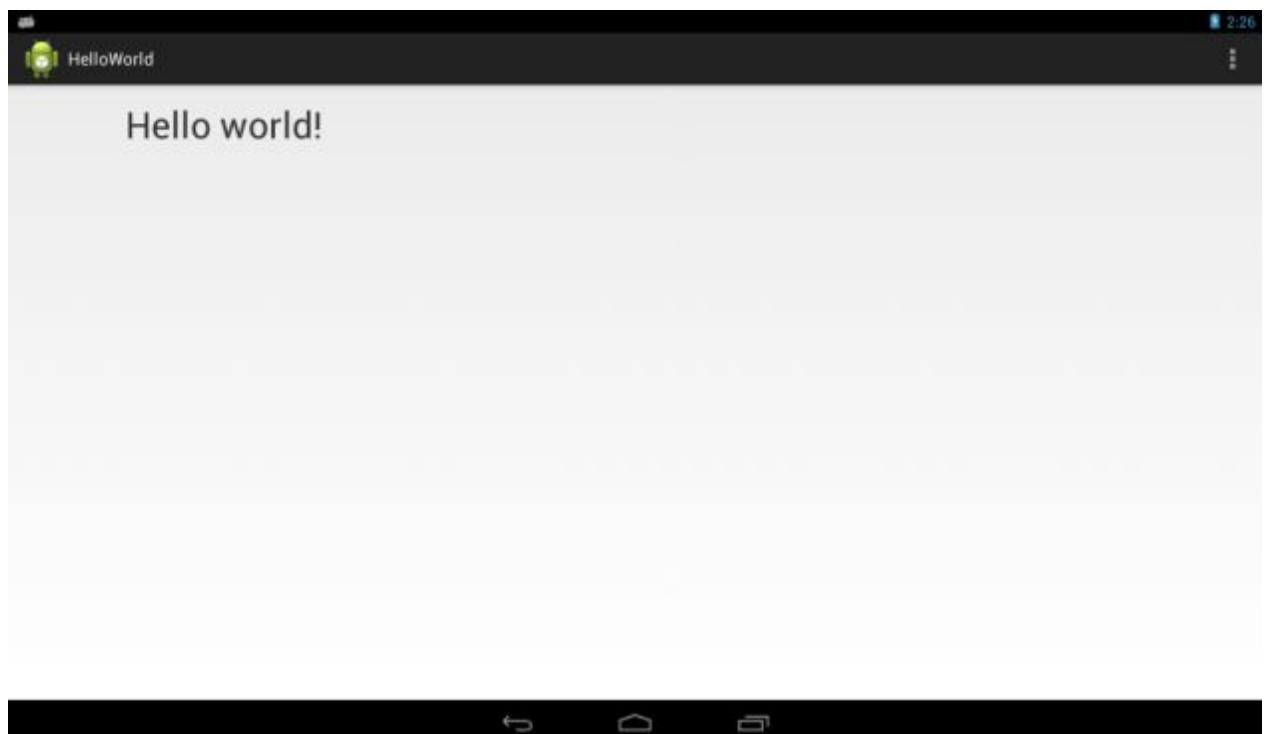


Figure 797: HelloWorld Program



Note

If the USB is not configured as an OTG model, you can copy and install the file `HelloWorld.apk` from the project folder `HelloWorld/bin/`, or install the `HelloWorld.apk` via the internet (See [Adb connect via internet](#)).

Disclaimer

This document is provided strictly for informational purposes. Its contents are subject to change without notice. Chipsee assumes no responsibility for any errors that may occur in this document. Furthermore, Chipsee reserves the right to alter the hardware, software, and/or specifications set forth herein at any time without prior notice and undertakes no obligation to update the information contained in this document.

While every effort has been made to ensure the accuracy of the information contained herein, this document is not guaranteed to be error-free. Further, it does not offer any warranties or conditions, whether expressed orally or implied in law, including implied warranties and conditions of merchantability or fitness for a particular purpose. We specifically disclaim any liability with respect to this document, and no contractual obligations are formed either directly or indirectly by this document.

Despite our best efforts to maintain the accuracy of the information in this document, we assume no responsibility for errors or omissions, nor for damages resulting from the use of the information herein. Please note that Chipsee products are not authorized for use as critical components in life support devices or systems.

Technical Support

If you encounter any difficulties or have questions related to this document, we encourage you to refer to our other documentation for potential solutions. If you cannot find the solution you're looking for, feel free to contact us. Please email Chipsee Technical Support at support@chipsee.com, providing all relevant information. We value your queries and suggestions and are committed to providing you with the assistance you require.