

Industrial PC

# EPC/PPC-A9-070-C



PN: CS10600F070



# Contents

١.	EPC/PPC-A9-070-C	3
	1.1. Product Overview	4
	1.2. Ordering Options	5
	1.2.1. Operating System	6
	1.2.2. Optional Features	6
	1.3. Hardware Features	6
	1.4. Power Input	8
	1.5. Touch Screen	8
	1.6. Connectivity	9
	1.6.1. RS232/RS485/CAN	9
	1.6.2. USB Connectors	11
	1.6.3. LAN Connectors	12
	1.6.4. WiFi & BT Module	12
	1.6.5. Expansion Port	13
	1.7. TF Card Slot	14
	1.8. Audio Connectors	14
	1.9. HDMI Connector	15
	1.10. Boot DIP Switch	15
	1.11. Mounting Procedure	16
	1.12. Mechanical Specifications	16
	1.12.1. EPC-A9-070-C	16
	1.12.2. PPC-A9-070-C	16
	1.13. 3D Model	18
	1.14. Disclaimer	19
	1.15. Technical Support	19

# EPC/PPC-A9-070-C



Front View



**Rear View** 

EPC/PPC-A9-070-C Product Overview



Front View (Embedded Variant)



Rear View (Embedded Variant)

## **Product Overview**

The Cortex $^{\$}$ -A9 series EPC/PPC-A9-070-C (PN: CS10600F070) is a rugged, high-quality industrial panel PC. It features a 7.0" multi-point capacitive touch screen with a resolution of 1024 x 600 pixels.

## **Key Applications**

- Human Machine Interface HMI
- Process Control
- Process Monitoring

EPC/PPC-A9-070-C Ordering Options

- HMI
- Infotainment
- Predictive Maintenance
- Machine Learning
- Machine Vision
- Automotive applications
- ATM...

It is available both as an embedded solution and as a device hosed in an aluminum casing with bezels, thus facilitating different installation options:

- Installation on an industrial cabinet
- Integration with the existing equipment

The EPC/PPC-A9-070-C Industrial Panel PC is based around the powerful CS-SOM-iMX6Q System on Module (SoM), powered by the i.MX6Q Arm<sup>®</sup> Cortex<sup>®</sup>-A9 quad-core Application Processor (APU). The i.MX6Q APU represents the latest achievement in integrated multimedia applications processors, delivering high-performance computing, an abundance of integrated peripherals, and high power efficiency.

This product also features a broad range of connectivity options, providing a high level of scalability for various use cases. It is the perfect solution for power-constrained applications on the Edge, acting as a robust control unit for collecting, processing, and aggregating field data. The i.MX6Q APU is part of NXP's EdgeVerse™ edge computing platform.

The NXP i.MX6UL APU does not generate extensive heat, so even the thin aluminum housing on PPC version delivers sufficient thermal dissipation. With its junction temperature from -40 to +125°C, the APU itself is well suited for extended temperature range in both automotive and factory environments.

# Ordering Options

Chipsee products can be customized during the ordering process. The product will be shipped with the pre-installed factory defaults if no extra requirements are specified. The table in the Hardware Features section provides information about the default options bundled with the product.



Note

You can order The EPC/PPC-A9-070-C Industrial Panel PC from the official **Chipsee Store** or from your nearest distributor.

EPC/PPC-A9-070-C Operating System

## Operating System

This product comes with a pre-installed OS of your choice. Please see the list below for the supported OSes, which can be also obtained from the Software Documentation section, along with the detailed installation instructions.

- Chipsee Linux\*
- Android 4.3
- · Android 6.0
- Android 8.0
- Ubuntu 12.04
- Ubuntu 14.04
- Debian
- \* Chipsee Linux is based on NXP Yocto framework that has been integrated with:
  - 1. Chipsee Hardware Test Application
  - 2. An initialization script for GPIO/Buzzer/Audio
  - 3. Multiple libraries, such as the libQt5Sql to develop Qt application with SQL
  - 4. Various packages, such as the <a href="ntfs-3g">ntfs-3g</a> to use NTFS file system



#### Warning

The Software Documentation section provides a detailed instruction how to install different OS on your own. However, bear in mind that Chipsee can't take the responsibility of inadequate installation procedure. If you "brick" your device, please contact Chipsee Technical Support at <a href="mailto:support@chipsee.com">support@chipsee.com</a> for further assistance

## Optional Features

The EPC/PPC-A9-070-C Industrial Panel PC does not include WiFi/BT module by default. The module is optional and can be selected at the Chipsee store during the ordering process.



#### Warning

Installation, repair, and maintenance tasks should be performed by trained personnel only. Chipsee does not bear any responsibility for damage caused by inadequate handling of the product.

## Hardware Features

The EPC/PPC-A9-070-C Industrial Panel PC offers a board range of performance and connectivity options for scalable integration, providing expandability according to future needs. Some of the key features are listed in the table below.

EPC/PPC-A9-070-C Hardware Features

EPC/PPC-A9-070-C				
СРИ	iMX6Q, Arm <sup>®</sup> Cortex <sup>®</sup> -A9, 1GHz			
RAM	2GB DDR3			
еММС	8GB			
Storage	TF Card, Supports up to 32GB SDHC			
Display	7.0" LCD, 1024 x 600, High Brightness: 500cd/m <sup>2</sup>			
Touch	Capacitive Multi-Point Touch Screen			
USB	3 x USB 2.0 HOST, 1 x USB OTG			
LAN	1 x RJ45, GbE			
Audio	3.5mm Audio In/Out Connector, Internal 2W Speaker			
Buzzer	Yes			
RTC	Yes, Powered by CR2032 Button Battery			
RS232	2 x RS232			
RS485	2 x RS4851			
CAN	2 x CAN			
GPIO	N/A			
WiFi/BT	Integrated WiFi/BT Module			
ндмі	1 x HDMI			
SATA	1 x SATA II			
Expansion Port	1 x 30-pin, 2.54mm DIL Header (PCB Footprint)			
4G/LTE	N/A			
Power Input	From 6V to 36V			
Current at 15V	600mA Max			
Power Consumption	6W Typical			
Working Temperature	From -20°C to +70°C			
os	Multiple Choices (Operating System)			
Dimensions	EPC-A9-070-C (PN: CS10600F070E): 190 x 107.8 x 27.7mm			
Dimensions	PPC-A9-070-C (PN: CS10600F070P): 206 x 135 x 30.1mm			
Moight	EPC-A9-070-C (PN: CS10600F070E): 380g			
Weight	PPC-A9-070-C (PN: CS10600F070P): 680g			
Mounting	EPC-A9-070-C (PN: CS10600F070E): Embedded			
Mounting	PPC-A9-070-C (PN: CS10600F070P): Panel			

Table 1 Key Features

EPC/PPC-A9-070-C Power Input

This product has 5 x UART channels in total. The default configuration is 2 x RS232, 2 x RS485, and 1 x UART for WiFi/BT module. UART can be swapped between RS232 and RS485 modes easily, so if you need different RS232/RS485 configuration, please get in touch with the Chipsee Technical Support at **support@chipsee.com** 

# Power Input

The EPC/PPC-A9-070-C Industrial Panel PC can be powered by a wide range of input voltages: From 6V to 36V DC. The power input connector is a **3-pin, 3.81mm terminal**. The polarity and the pinout is clearly marked on the housing of the PPC version, as well as on the PCB itself of the EPC version, as shown in the figure below.





Figure 1: Power Input Section (embedded/enclosed version)

Note that the "+" sign represents the positive power input, and it is printed both at the casing and as a silk-screen on a PCB of the embedded version. The "-" terminal is shorted to the ground.

Power Input Definitio			
Pin Number	Definition	Description	
Pin 1	Positive Input	DC Power <b>Positive Terminal</b>	
Pin 2	Negative Input	DC Power <b>Negative Terminal</b>	
Pin 3	Ground	Power System Ground	

Table 2 Power Connector



The system ground " $\mathbf{G}$ " is connected to power negative "-" on board.

## **Touch Screen**

The EPC/PPC-A9-070-C Industrial Panel PC uses a ten-point multitouch capacitive screen. *Figure 2* shows the capacitive screen connected to the motherboard via the **FPC connector**.

EPC/PPC-A9-070-C Connectivity



Figure 2: Figure 2: Capacitive Screen Connector



#### Attention

A capacitive touch screen is susceptible to power noise and Electromagnetic Radiation (EMR). It may cause LCD ripples or even capacitive touch malfunction. If using a capacitive multitouch test application, you might notice the touch points float erratically across the display. There are several solutions to this problem:

- 1. Use a high-quality Power Adapter Unit (PSU) with low EMR. You can also provide power from a battery.
- 2. Make sure that the EPC/PPC-A9-070-C Power Input connector (pin 3) is properly connected to the Power System Ground to provide sufficient EMI shielding and eliminate the problem entirely.
- 3. Bad GND problem can also be confirmed by touching pin 3 of the Power Input connector with one hand while operating the capacitive touch screen with the other hand. In this case, the operator's body acts as the Power System Ground.

# Connectivity

There are many connectivity options available on the EPC/PPC-A9-070-C industrial PC. It has 3 x HOST USB Type A connectors, 1 x USB OTG Type Mini B, 1 x network connector (RJ45) supporting up to 1 Gbps, and 5 x UART terminals (RS232/485). This device also features two CAN interfaces.

## RS232/RS485/CAN

The serial communication interfaces (RS485, RS482, and CAN) are routed to a **16-pin 3.81mm terminal**, as illustrated in the figure below. Serial communication on both RS485 and RS422 interfaces can reach up to 115200 kbps.

EPC/PPC-A9-070-C RS232/RS485/CAN

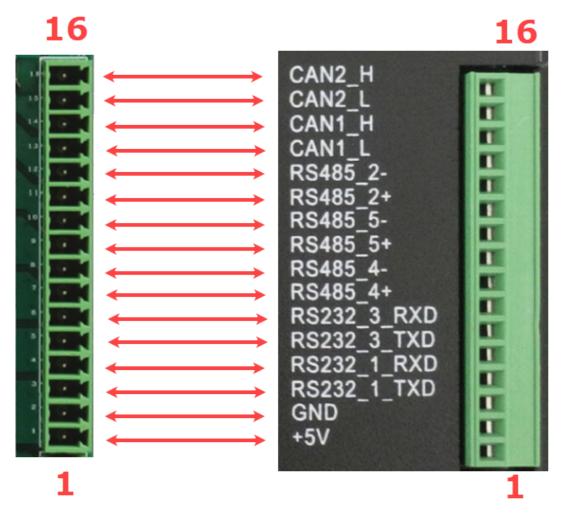


Figure 3: Relation between serial pins on embedded vs. enclosed version

The table below offers more detailed description of every pin and its definition:

RS232 / RS485 / CAN Pin Definition:				
Pin Number	Definition	Description		
Pin 1	CAN2_H	CPU CAN Channel 2 H signal		
Pin 2	CAN2_L	CPU CAN Channel 2 L signal		
Pin 3	CAN1_H	CPU CAN Channel 1 H signal		
Pin 4	CAN1_L	CPU CAN Channel 1 L signal		
Pin 5	RS485_2-	CPU UART2, RS485 –(B) signal 2		
Pin 6	RS485_2+	CPU UART2, RS485 +(A) signal 2		
Pin 7	RS485_5-	CPU UART5, RS485 -(B) signal		
Pin 8	RS485_5+	CPU UART5, RS485 +(A) signal		
Pin 9	RS485_4-	CPU UART4, RS485 –(B) signal		
Pin 10	RS485_4+	CPU UART4, RS485 +(A) signal		
Pin 11	RS232_3_RXD	CPU UART3, RS232 RXD signal		
Pin 12	RS232_3_TXD	CPU UART3, RS232 TXD signal		
Pin 13 RS232_1_RXD		CPU UART1, RS232 RXD signal		

EPC/PPC-A9-070-C USB Connectors

Pin 14	RS232_1_TXD	CPU UART1, RS232 TXD signal
Pin 15	GND	System Ground
Pin 16 +5V		System 5V output, up to 1A

**Table 3 Connectivity Section** 

**2(1,2)**UART2 signal is used by the onboard WiFi/BT module, so the I/O port function is disabled by default. If you need the I/O port function instead, please contact Chipsee Technical Support at **support@chipsee.com** for assistance.




#### Note

 $120\Omega$  termination resistors are not mounted or included with the device.

## **USB Connectors**

There are 3 x Type A **USB HOST connectors** onboard, as shown on the figure below.

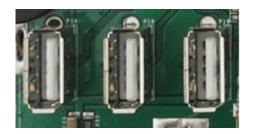

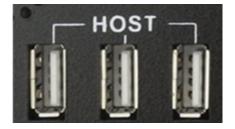


Figure 4: USB HOST Connectors (embedded/enclosed PC version)

There is also 1 x Type Mini B **USB OTG connector**, configured as slave by default.





Figure 5: USB OTG Connector (embedded/enclosed PC version)



#### Warning

Be careful not to touch surrounding electronic components accidentally while plugging in USB devices into the embedded IPC version.

EPC/PPC-A9-070-C LAN Connectors

## LAN Connectors

**LAN (RJ45) connector** provides Ethernet connectivity over standardized Ethernet cables. The integrated Ethernet interface supports up to 1 Gbps data throughput. Power over Ethernet (PoE) is not supported.





Figure 6: RJ45 LAN Connectors (embedded/enclosed PC version)



Use CAT5 or better cables to achieve full data throughput over maximum distance defined by the 1000BASE-T standard (100m).

## WiFi & BT Module

The EPC/PPC-A9-070-C Industrial Panel PC is equipped with the popular **Realtek RTL8723 WiFi/BT module** that supports BT/BLE 4.0 (with backward compatibility), as well as 802.11bgn 2.4 GHz Wireless LAN (WLAN).



Figure 7: RTL8273 WiFi/BT Module

The enclosed (PPC) variant of the product also includes an SMA connector for an external WiFi/BT antenna, as illustrated in the figure below.

EPC/PPC-A9-070-C Expansion Port



Figure 8: WiFi+BT Antenna

## **Expansion Port**

The EPC/PPC-A9-070-C Industrial Panel PC has 1 x **Expansion Port** as shown on the figure below. It is an unpopulated PCB footprint with the standard 2.0mm pitch holes, labeled as P21 on the PCB. The Expansion Port provides direct access to some of the processor pins, as described in the table below.




Figure 9: Expansion Port

Expansion Connector Pinout					
PIN	Function	CPU PIN	PIN	Function	CPU PIN
1	I2C2_SDA	T7	2	I2C2_SCL	U5
3	GPIO7_13	P6	4	GPIO7_12	R1
5	CSI0_PIXCLK	P1	6	CSI0_HSYNCH	P4
7	CSI0_VSYNCH	N2	8	CLKO	T5
9	CSI0_DAT19	L6	10	CSI0_DAT18	M6
11	CSI0_DAT17	L3	12	CSI0_DAT16	L4
13	CSI0_DAT15	M5	14	CSI0_DAT14	M4
15	CSI0_DAT13	L1	16	CSI0_DAT12	M2
17	VDD_5V0	5.0V Output	18	VDD_3V3	3.3V Output
19	GND	Ground	20	GND	Ground
21	GPIO1_29	W20	22	GPIO4_10	W4
23	GPIO1_28	V21	24	GPIO1_30	U20
25	I2C3_SDA	D24	26	I2C3_SCL	F21
27	GPIO5_2	H19	28	GPIO3_23	D25
29	GPIO3_30	J20	30	GPIO3_31	H21

EPC/PPC-A9-070-C TF Card Slot

#### **Table 4 Expansion Connector Pinout**



#### Warning

Since the PCB traces of the port are connected to the processor directly, be careful not to cause electrostatic discharge or over voltage on the pins, as it may damage the processor. Take all the necessary precautions while working with electrostatic-sensitive equipment.

## TF Card Slot

The EPC/PPC-A9-070-C Industrial Panel PC features 1 x **TF Card (micro SD) slot**. It can address up to 32GB of memory.

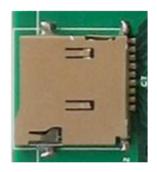




Figure 10: TF (micro SD) Card Slot



#### Note

The product does not come shipped with the TF Card by default

## **Audio Connectors**

The EPC/PPC-A9-070-C Industrial Panel PC features some audio peripherals, as well. It has 1 x **3.5mm audio input jack** and 1 x **3.5mm audio output jack**.

On the embedded panel PC version, the pink connector is the audio input jack (line-in) and the blue connector is the audio output jack (line-out, typically around -10 dBV). On the enclosed panel PC version, both audio input and audio output are clearly marked.





Figure 11: Audio I/O (embedded/enclosed PC version)

EPC/PPC-A9-070-C HDMI Connector

In addition, EPC/PPC-A9-070-C features a miniature 2W embedded speaker for audio reproduction, as well as a small buzzer for alarm/notification sounds.

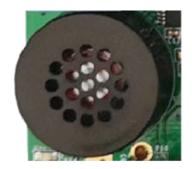




Figure 12: 2W Micro Speaker and Buzzer

## **HDMI** Connector

The EPC/PPC-A9-070-C Industrial Panel PC is equipped with 1 x **HDMI connector**. The HDMI connector allows connecting an additional (external) monitor. HDMI output resolution can be configured by the software.





Figure 13: HDMI Connector

# **Boot DIP Switch**

The EPC/PPC-A9-070-C Industrial Panel PC supports boot from SD card. If you want to reflash the Operating System (OS), you can use the TF card for that purpose, combined with the **DIP switch** settings.

There is no need to alter the DIP switch settings during regular operation. However, if you need to reinstall the OS, please refer to the table below. Detailed information on how to reflash the OS can be found in the Software Documentation.

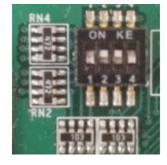


Figure 14: Boot DIP Switch

EPC/PPC-A9-070-C Mounting Procedure

Boot Config Select				
DIP SW	1	2	3	4
SD	1	0	0	0
еММС	1	1	0	1
Download	0	1	1	0

Table 5 Boot Configuration Selection

# Mounting Procedure

The EPC/PPC-A9-070-C Industrial Panel PC can be mounted with 4 x M4 screws, enabling simplified installation onto any standard mounting fixture. Other mounting options might also be supported according to the table in the Hardware Features section.

You can find detailed information about mounting in the Mount IPC Guide.

# Mechanical Specifications

## EPC-A9-070-C

The outer mechanical dimensions of EPC-A9-070-C are  $190 \times 107.8 \times 27.7$ mm (W x L x H). Please refer to the technical drawing in the figure below for details related to the specific product measurements.

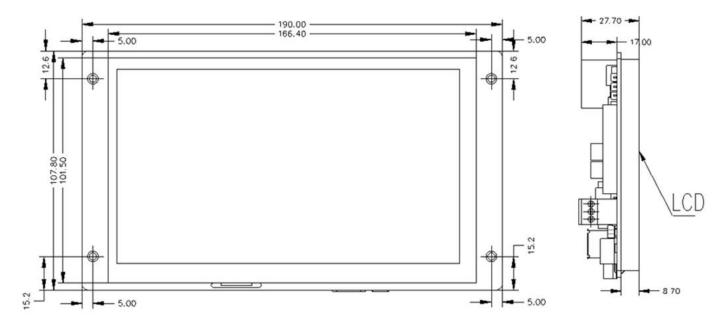


Figure 15: EPC-A9-070-C Technical Drawing

## PPC-A9-070-C

For PPC-A9-070-C, the outer mechanical dimensions are 206 x 135 x 30.1mm (W x L x H).

EPC/PPC-A9-070-C PPC-A9-070-C

## **Panel Mounting**







Figure 16: Fixing PPC-A9-070-C industrial PC into panel



#### Note

With the PPC-A9-070-C industrial PC, the operator can fix the PC into the panel by pushing it from the front inside the panel as described in the figure above. The recommended maximum thickness of the panel material is 8mm.

- 1. Make sure the Panel PC is configured correctly. The Boot Switch is sitting inside the housing. To use it, the Panel PC has to be unmounted from the panel.
- 2. Push the Panel PC straight into the Panel Hole until the unit sits flat on the panel as shown in the figure above.
- 3. Use the mounting fixtures to lock the Panel PC into it's place.

EPC/PPC-A9-070-C 3D Model



## **Caution**

• When you use product EPC-A9-070-C, you should not touch the circuit board on the back of the product if the

• Also, when the product is powered OFF, please take anti-static measures before touching the circuit board.

# 3D Model

EPC/PPC-A9-070-C 3D model can be viewed in the online doc in a web browser, if you are reading from the **PDF** version, please visit the online doc.

EPC/PPC-A9-070-C Disclaimer

## Disclaimer

This document is provided strictly for informational purposes. Its contents are subject to change without notice. Chipsee assumes no responsibility for any errors that may occur in this document. Furthermore, Chipsee reserves the right to alter the hardware, software, and/or specifications set forth herein at any time without prior notice and undertakes no obligation to update the information contained in this document.

While every effort has been made to ensure the accuracy of the information contained herein, this document is not guaranteed to be error-free. Further, it does not offer any warranties or conditions, whether expressed orally or implied in law, including implied warranties and conditions of merchantability or fitness for a particular purpose. We specifically disclaim any liability with respect to this document, and no contractual obligations are formed either directly or indirectly by this document.

Despite our best efforts to maintain the accuracy of the information in this document, we assume no responsibility for errors or omissions, nor for damages resulting from the use of the information herein. Please note that Chipsee products are not authorized for use as critical components in life support devices or systems.

# **Technical Support**

If you encounter any difficulties or have questions related to this document, we encourage you to refer to our other documentation for potential solutions. If you cannot find the solution you're looking for, feel free to contact us. Please email Chipsee Technical Support at **support@chipsee.com**, providing all relevant information. We value your queries and suggestions and are committed to providing you with the assistance you require.