

Industrial PC

EPC-CM4-050



PN: CS12720RA4050E


Content can change at anytime, check our website for latest information of this product.

Contents

Ε	PC-CM4-050	3
	1. Product Overview	7
	2. Ordering Options	7
	2.1. Pi [®] CM4 Module	8
	2.2. Operating System	8
	3. Specifications	8
	4. Power Input	9
	5. Touch Screen	10
	6. Connectivity	11
	6.1. RS232/RS485/CAN	11
	6.2. USB Connectors	13
	6.3. LAN Connectors	14
	6.4. WiFi & BT Module	15
	6.5. Camera Connector	15
	7. TF Card Slot	17
	8. Audio Connector	17
	9. Boot DIP Switch	18
	10. Mounting Procedure	18
	10.1. CS12720RA4050E	19
	11. Mechanical Specifications	19
	11.1. CS12720RA4050E	19
	12. 3D Model	20
	13. Disclaimer	21
	14. Technical Support	21

EPC-CM4-050

Front View

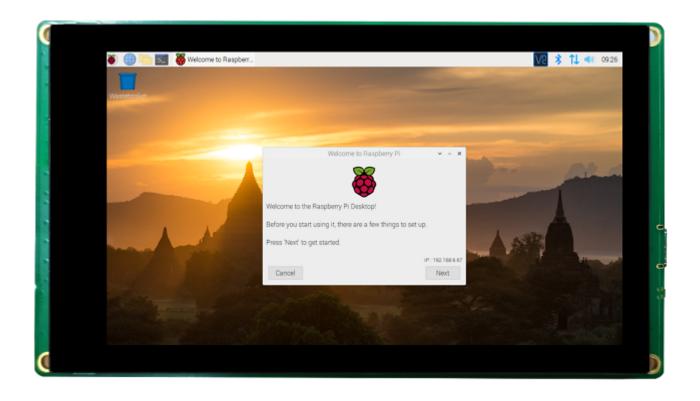

Rear View



Side View 1



Side View 2



EPC-CM4-050 Product Overview

Product Overview

The Cortex[®]-A72 Raspberry Pi[®] series EPC-CM4-050 (PN: CS12720RA4050E) is a high-quality industrial Pi PC. It features a 5" five-point capacitive touch screen with a resolution of 1280 x 720 pixels and brightness of 400 cd/m².

Key Applications

- Human Machine Interface HMI
- Process Control
- Process Monitoring
- HMI
- IIoT node
- Environmental Monitoring
- PLC
- Automotive applications
- ATM...

It is available both as an embedded solution and as a device hosed in a casing with bezels, thus facilitating different installation options:

- Installation on an industrial cabinet
- Integration with the existing equipment

The EPC-CM4-050 industrial Pi PC is based around the powerful Raspberry Pi[®] Compute Module 4, powered by the Quad Cortex[®]-A72 processor with a processor speed of 1.5GHz.



Attention

The EPC-CM4-050 (CS12720RA4050E) used to offer an enclosed PC variant (named PPC-CM4-050 V1.0), it doesn't have HDMI-D port.

We've made another PPC-CM4-050 V2.0, it has an HDMI-D port, is smaller, more compact and easier to use, check it at: https://chipsee.com/product/ppc-cm4-050/

Ordering Options

Chipsee products can be customized during the ordering process. The product will be shipped with the pre-installed factory defaults if no extra requirements are specified. The table in the Specifications section provides information about the default options bundled with the product.

EPC-CM4-050 Pi® CM4 Module



You can order EPC-CM4-050 from the official Chipsee Store or from your nearest distributor.

Pi® CM4 Module

The Pi[®] Compute Module 4 appears in different versions depending on the size of the DDR4 and eMMC.

The EPC-CM4-050 industrial Pi PC does not include the CM4 Raspberry Pi[®] module by default. If you would like to purchase it with a CM4, you can select it at the Chipsee store during the ordering process.

Operating System

This product comes with a pre-installed Debian OS. Chipsee software engineers have created all the drivers, so every hardware feature is readily available for any standard development tool.

If your project requires a different OS, please **Contact us**, and we'll make a customized version that suits your needs.

Specifications

The EPC-CM4-050 industrial Pi PC offers a broad range of performance and connectivity options for scalable integration, providing expandability according to future needs. Some of the key features are listed in the table below.

EPC-CM4-050			
СРИ	Raspberry Pi [®] CM4, CM4 Lite; Quad Cortex-A72 at 1.5GHz		
Storage	1 TF Cards slots <mark>3</mark>		
RAM	Based on CM4		
еММС	Based on CM4		
Display	5" IPS LCD, 1280 x 720 resolution px, brightness 400 cd/m ²		
Touch	5-point capacitive touch with 1mm Armored Glass		
USB	2 x USB 2.0 Host, 1 x Type-C		
LAN	1 x Channel Giga LAN		
Audio	3.5mm Audio Out Connector, 2W Speaker Internal		
Buzzer	Onboard Buzzer, driven by GPIO		
RTC	Yes, High Accuracy RTC with Lithium Button Coin battery (lithium battery not included)		
RS232	2 x RS232		

EPC-CM4-050 Power Input

EPC-CM4-050				
RS485	2 x RS4851			
CAN	1 x CAN-BUS			
GPIO	Not Supported			
WiFi/BT	Supported but depending on the CM4 selected2			
номі	Not Supported			
3G/4G/LTE	Not Supported			
I2C	Support I2C0 I2C1 for CS12720RA4050E			
Camera	Yes, not mounted by default			
Power Input	From 9V to 36V			
Current at 12V	500mA Max			
Power Consumption	6W Typical			
Working Temperature	From 0°C to +60°C			
OS	Debian			
Dimensions	CS12720RA4050E: 141.2 x 77.6 x 25.8mm			
Weight	CS12720RA4050E: 200g			

Table 324 Key Features

- 1 The RS485 circuit controls the Input and Output direction automatically, there's no need to control it from within the software.
- 2 The default product without the CM4 does not include a Wi-Fi/BT module. You can include a CM4 that has the Wi-Fi/BT module at the Chipsee store during the ordering process.
- 3 Chipsee designed TF card slots for storage expansion, as the TF card for storage expansion use same pins with WiFi, it can't be used with WiFi at same time



Attention

Chipsee does not install a lithium battery by default, as we cannot ship products with batteries. We recommend you buy it locally and install it by yourself. The lithium battery part number is CR1220. Please **Contact us** if you need help.

Power Input

The EPC-CM4-050 industrial Pi PC can be powered by a wide range of input voltages: From 9V to 36V DC. It is a **3 Pin, 3.81mm screw terminal** connector.

EPC-CM4-050 Touch Screen

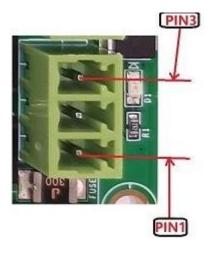


Figure 937: Power Input

Note that the "+" sign represents the positive power input, and it is printed both at the casing and as a silk-screen on the board of the embedded version. The "-" terminal is shorted to the ground.

Power Input Definition				
Pin Number	Definition	Description		
Pin 1	Positive Input	DC Power Positive Terminal		
Pin 2	Negative Input	DC Power Negative Terminal		
Pin 3	Ground	Power System Ground		

Table 325 Power Connector



The system ground " \mathbf{G} " is connected to power negative "-" on board.

The central pin is positive.

Touch Screen

The EPC-CM4-050 industrial Pi PC uses a 5-point capacitive touch screen. However, the Debian OS supports only One-Point touch.

The figure below shows the capacitive touch screen connected to the motherboard via the FPC connector.

EPC-CM4-050 Connectivity



Capacitive Touch Connector

A

Attention

A capacitive touch screen is susceptible to power noise and Electromagnetic Radiation (EMR). It may cause LCD ripples or even capacitive touch malfunction. If using a capacitive multi-touch test application, you might notice the touch points float erratically across the display. There are several solutions to this problem:

- 1. Use a high-quality Power Adapter Unit (PSU) with low EMR. You can also provide power from a battery.
- 2. Make sure that the EPC-CM4-050 Power Input connector (pin 3) is properly connected to the Power System Ground to provide sufficient EMI shielding and eliminate the problem entirely.
- 3. Bad GND problems can also be confirmed by touching pin 3 of the Power Input connector with one hand while operating the capacitive touch screen with the other hand. In this case, the operator's body acts as the Power System Ground.

Connectivity

There are many connectivity options available on the EPC-CM4-050 industrial Pi PC. It has 2 x USB 2.0 Host, 1 x Type-C, 1 x Channel Giga LAN (RJ45) Ethernet connector supporting up to 1 Gbps, and 4×1000 x UART terminals (RS232/RS485/CAN).

RS232/RS485/CAN

The serial communication interfaces (RS485, RS232, and CAN) are routed to a **12-pin 3.81mm terminal**, as illustrated on the figure below.

EPC-CM4-050 RS232/RS485/CAN



Figure 938: RS232, RS485, CAN

The table below offers more detailed description of every pin and its definition:

RS232 / RS485 / CAN Pin Definition:				
Pin Number	Definition	Description		
Pin 12	CAN1_H	CAN H signal		
Pin 11	CAN1_L	CAN L signal		
Pin 10	RS485_5-	CPU UART5, RS485 –(B) signal		
Pin 9	RS485_5+	CPU UART5, RS485 +(A) signal		
Pin 8	RS485_3-	CPU UART3, RS485 –(B) signal		
Pin 7	RS485_3+	CPU UART3, RS485 +(A) signal		
Pin 6	RS232_2_RXD	CPU UART2, RS232 RXD signal		
Pin 5	RS232_2_TXD	CPU UART2, RS232 TXD signal		
Pin 4	RS232_0_RXD	CPU UARTO, RS232 RXD signal		
Pin 3	RS232_0_TXD	CPU UARTO, RS232 TXD signal		
Pin 2	GND	System Ground		
Pin 1	+5V	System +5V Power Output, No more than 1A Current output		

Table 326 Connectivity Section


EPC-CM4-050 **USB Connectors**

Attention

- 1. RS485_3 and RS485_5 can control the input and output direction automatically. There's no need to control it from
- 2. The 120Ω match resistor for the RS485 and CAN bus is NOT mounted by default.

USB Connectors

There are 2 x Type A **USB HOST connectors** onboard, as shown on the figure below.

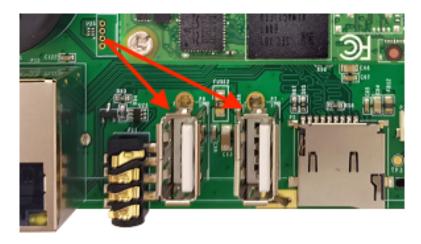

USB HOST Connectors



Attention

- 1. These two USB host connectors can drive 500mA for each channel at most.
- 2. When you connect this product to the HOST PC by a USB Type-C cable, the USB HUB will be disabled. As a result, the 2 USB host connectors will not work.

The product has one USB Type-C connector that works as a slave by default. You can use it to establish a connection with the host PC and for downloading the system to the eMMC of CM4 module.

EPC-CM4-050 LAN Connectors



USB-C OTG Connector



Warning

Be careful not to touch surrounding electronic components accidentally while plugging in USB devices into the embedded Industrial PC version.

LAN Connectors

LAN (RJ45) connector provides Ethernet connectivity over standardized Ethernet cables as shown in the figure below. The integrated Ethernet interface supports up to 1 Gbps data throughput. These Giga LAN signals come from the CM4 module directly.

EPC-CM4-050 WiFi & BT Module



RJ45 LAN Connector



Use CAT5 or better cables to achieve full data throughput over maximum distance defined by the 1000BASE-T standard (100m).

WiFi & BT Module

The default EPC-CM4-050 without the CM4 does not include a Wi-Fi/BT module.

If you include a CM4 that has the Wi-Fi/BT module, the product will have Wi-Fi/BT feature.




Attention

The product does not come shipped with the Wi-Fi/BT module by default.

Camera Connector

The EPC-CM4-050 industrial Pi PC has a 15 Pin **Camera Connector**, as shown on the figure below. The camera signals come from CAM1. The table below gives details about the definition of every Pin.

EPC-CM4-050 Camera Connector

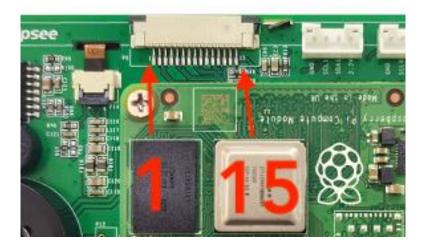

Camera Connector

Camera Connector Pin Definition:				
Pin Number	Definition	Description		
Pin 1	GND	Power Ground		
Pin 2	CAM1_DN0	CAM1_DN0		
Pin 3	CAM1_DP0	CAM1_DP0		
Pin 4	GND	Power Ground		
Pin 5	CAM1_DN1	CAM1_DN1		
Pin 6	CAM1_DP1	CAM1_DP1		
Pin 7	GND	Power Ground		
Pin 8	CAM1_CN	CAM1 Clock signal Negative		
Pin 9	CAM1_CP	CAM1 Clock signal Positive		
Pin 10	GND	Power Ground		
Pin 11	CAM GPIO	CAM GPIO, use for disable camera power and module		
Pin 12	NC	Not connected		
Pin 13	SCL0	CPU I2C SCL0 signal		
Pin 14	SDA0	CPU I2C SDA0 signal		
Pin 15	+3.3V	System +3.3V Power Output, No more than 500mA Current output		

Table 327 Camera Connector Pin-out



Attention

1. The camera is not mounted by default.

EPC-CM4-050 TF Card Slot

TF Card Slot

The EPC-CM4-050 industrial Pi PC features 1 x **TF Card (micro SD) slot**: SD, TF slots can address up to 128GB of memory.



TF (micro SD) Card Slot



Attention

- 1. The SD is used for memory extension. It can't be used for system boot-up.
- 2. The product does not come shipped with the TF Card by default.

Audio Connector

The EPC-CM4-050 industrial Pi PC features some audio peripherals. It has 1 x **3.5mm audio output jack**.

Also, the EPC-CM4-050 industrial Pi PC has a miniature 2W internal speaker for audio reproduction, as well as a small buzzer for alarm/notification sounds.



Figure 939: Audio Connector (embedded/enclosed PC version)



Attention

EPC-CM4-050 Boot DIP Switch

By plugging in the headphone cable, the internal speaker will be disabled automatically.

Boot DIP Switch

The EPC-CM4-050 industrial Pi PC has one button on the board marked as SW1, shown in the figure below.

When button is pressed before power, the Raspberry Pi will boot from the USB connector. You can use this function to download the OS software to the internal eMMC. When button is released before power, the Raspberry Pi will boot from internal eMMC.

There is no need to press the button during regular operation. However, if you need to reinstall the OS, please refer to the detailed information on how to re-flash the OS from the Software Documentation.



Boot DIP Switch

Mounting Procedure

The EPC-CM4-050 industrial Pi PC can be mounted with 4 x M4 screws, enabling simplified installation onto any standard mounting fixture.

EPC-CM4-050 CS12720RA4050E

CS12720RA4050E

You can mount CS12720RA4050E with the Embedded mounting method, as shown on the figure below.

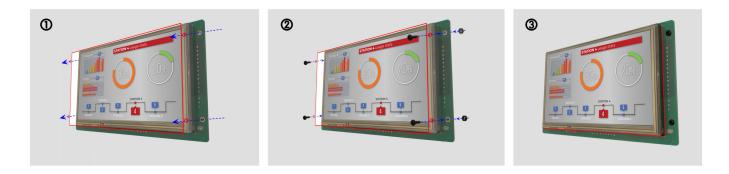


Figure 940: Embedded mounting



Please make sure the display is not exposed to high pressure when mounting into an enclosure.

You can find detailed information about mounting in the Mount IPC Guide.

Mechanical Specifications

CS12720RA4050E

The outer mechanical dimensions of CS12720RA4050E are $141.2 \times 77.6 \times 25.8 \text{mm}$ (W x L x H). Please refer to the technical drawing in the figure below for details related to the specific product measurements.



Figure 941: CS12720RA4050E Technical Drawing

EPC-CM4-050 3D Model

3D Model

EPC-CM4-050 3D model can be viewed in the online doc in a web browser, **if you are reading from the PDF** version, please visit the online doc EPC-CM4-050, select hardware documentation, drag the navigation bar to the 3D Model section.

EPC-CM4-050 Disclaimer

Disclaimer

This document is provided strictly for informational purposes. Its contents are subject to change without notice. Chipsee assumes no responsibility for any errors that may occur in this document. Furthermore, Chipsee reserves the right to alter the hardware, software, and/or specifications set forth herein at any time without prior notice and undertakes no obligation to update the information contained in this document.

While every effort has been made to ensure the accuracy of the information contained herein, this document is not guaranteed to be error-free. Further, it does not offer any warranties or conditions, whether expressed orally or implied in law, including implied warranties and conditions of merchantability or fitness for a particular purpose. We specifically disclaim any liability with respect to this document, and no contractual obligations are formed either directly or indirectly by this document.

Despite our best efforts to maintain the accuracy of the information in this document, we assume no responsibility for errors or omissions, nor for damages resulting from the use of the information herein. Please note that Chipsee products are not authorized for use as critical components in life support devices or systems.

Technical Support

If you encounter any difficulties or have questions related to this document, we encourage you to refer to our other documentation for potential solutions. If you cannot find the solution you're looking for, feel free to contact us. Please email Chipsee Technical Support at **support@chipsee.com**, providing all relevant information. We value your queries and suggestions and are committed to providing you with the assistance you require.