


Industrial PC

PPC-CM4-050

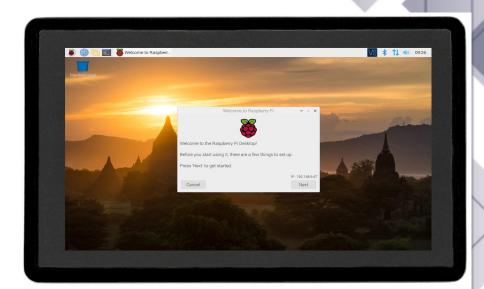

PN: CS12720RA4050

Contents

| ١. | PPC-CM4-050 | 3 |
|----|-----------------------------------|----|
| | 1.1. Product Overview | 4 |
| | 1.2. Ordering Options | 5 |
| | 1.2.1. Pi [®] CM4 Module | 5 |
| | 1.2.2. Operating System | 5 |
| | 1.3. Specifications | 6 |
| | 1.4. Power Input | 7 |
| | 1.5. Touch Screen | 8 |
| | 1.6. Connectivity | 8 |
| | 1.6.1. RS232/RS485/CAN | 9 |
| | 1.6.2. USB Connectors | 10 |
| | 1.6.3. LAN Connectors | 11 |
| | 1.6.4. WiFi & BT Module | 11 |
| | 1.7. TF Card Slot | 12 |
| | 1.8. Audio Connectors | 12 |
| | 1.9. HDMI Connector | 13 |
| | 1.10. PROG Button | 13 |
| | 1.11. Mounting Procedure | 13 |
| | 1.11.1. CS12720RA4050P | 14 |
| | 1.12. Mechanical Specifications | 14 |
| | 1.12.1. CS12720RA4050P | 14 |
| | 1.13. Disclaimer | 15 |
| | 1.14. Technical Support | 15 |

PPC-CM4-050




Front View




Rear View

PPC-CM4-050 Product Overview

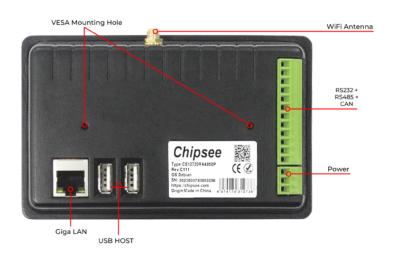



Side View 1

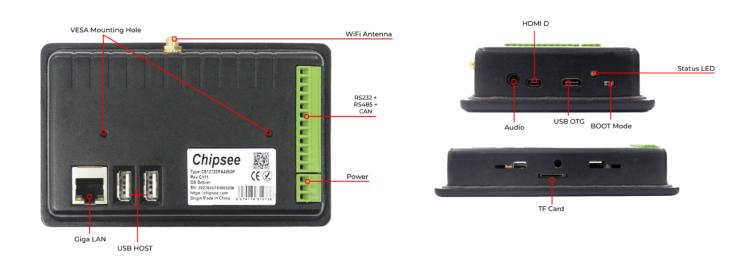

Side View 2

Product Overview

The Cortex[®]-A72 Raspberry Pi[®] series PPC-CM4-050 (PN: CS12720RA4050) is a high-quality industrial Pi PC. It features a 5" five-point capacitive a touch screen with a resolution of 1280 x 720 pixels and brightness of 400 cd/m².

Key Applications

- Human Machine Interface HMI
- Process Control
- Process Monitoring
- HMI
- IIoT node

PPC-CM4-050 Ordering Options

- Environmental Monitoring
- PLC
- Automotive applications
- ATM...

It is available both as an embedded solution and as a device hosed in a casing with bezels, thus facilitating different installation options:

- Installation on an industrial cabinet
- Integration with the existing equipment

The PPC-CM4-050 industrial Pi PC is based around the powerful Raspberry Pi[®] Compute Module 4, powered by the Quad Cortex[®]-A72 processor with a processor speed of 1.5GHz.

Ordering Options

Chipsee products can be customized during the ordering process. The product will be shipped with the pre-installed factory defaults if no extra requirements are specified. The table in the Specifications section provides information about the default options bundled with the product.



You can order PPC-CM4-050 from the official **Chipsee Store** or from your nearest distributor.

Pi® CM4 Module

The Pi[®] Compute Module 4 appears in different versions depending on the size of the DDR4 and eMMC.

The PPC-CM4-050 industrial Pi PC does not include the CM4 Raspberry Pi[®] module by default. If you would like to purchase it with a CM4, you can select it at the Chipsee store during the ordering process.

Operating System

This product comes with a pre-installed Debian OS. Chipsee software engineers have created all the drivers, so every hardware feature is readily available for any standard development tool.

If your project requires a different OS, please **Contact us**, and we'll make a customized version that suits your needs.

PPC-CM4-050 Specifications

Specifications

The PPC-CM4-050 industrial Pi PC offers a broad range of performance and connectivity options for scalable integration, providing expandability according to future needs. Some of the key features are listed in the table below.

| PPC-CM4-050 | | | | |
|------------------------|--|--|--|--|
| CPU | Raspberry Pi [®] CM4, CM4 Lite; Quad Cortex-A72 at 1.5GHz | | | |
| Storage | 1 TF Cards slots3 | | | |
| RAM | Based on CM4 | | | |
| еММС | Based on CM4 | | | |
| Display | 5" IPS LCD, 1280 x 720 resolution px, brightness 400 cd/m ² | | | |
| Touch | 5-point capacitive touch with 1mm Armored Glass | | | |
| USB | 2 x USB 2.0 Host, 1 x Type-C | | | |
| LAN | 1 x Channel Giga LAN | | | |
| Audio | 3.5mm Audio Out Connector, 2W Speaker Internal | | | |
| Buzzer | Onboard Buzzer, driven by GPIO | | | |
| RTC | Yes, High Accuracy RTC with Lithium Button Coin battery (lithium battery not included) | | | |
| RS232 | 2 x RS232 | | | |
| RS485 | 2 x RS4851 | | | |
| CAN | 1 x CAN-BUS | | | |
| GPIO | Not Supported | | | |
| WiFi/BT | Supported but depending on the CM4 selected2 | | | |
| нрмі | 1 x HDMI-D 2.0, can be driven upto 4Kp30 | | | |
| 3G/4G/LTE | Not Supported | | | |
| I2C | Not Support | | | |
| Camera | Yes, not mounted by default | | | |
| Power Input | From 9V to 36V | | | |
| Current at 12V | 500mA Max | | | |
| Power Consumption | 6W Typical | | | |
| Working Temperature | From 0°C to +60°C | | | |
| os | Debian | | | |
| Dimensions | CS12720RA4050P: 138.55 x 84.70 x 27.10mm | | | |
| Weight | CS12720RA4050P: 310g | | | |

PPC-CM4-050 Power Input

Table 214 Key Features

- 1 The RS485 circuit controls the Input and Output direction automatically, there's no need to control it from within the software.
- 2 The default product without the CM4 does not include a Wi-Fi/BT module. You can include a CM4 that has the Wi-Fi/BT module at the Chipsee store during the ordering process.
- 3 Chipsee designed TF card slots for storage expansion, as the TF card for storage expansion use same pins with WiFi, it can't be used with WiFi at same time

Power Input

The PPC-CM4-050 industrial Pi PC can be powered by a wide range of input voltages: From 9V to 36V DC. It is a **3 Pin, 3.81mm screw terminal** connector. The polarity and the pinout is clearly marked on the housing of the CS12720RA4050P version, as shown in the figures below.

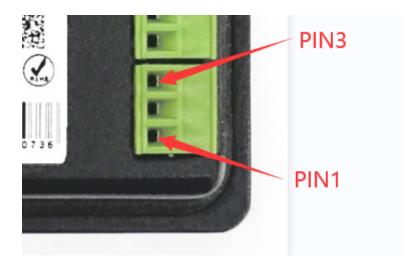


Figure 909: Power Input

Note that the "+" sign represents the positive power input, and it is printed both at the casing and as a silk-screen on the board of the embedded version. The "-" terminal is shorted to the ground.

| Power Input Definition | | | | |
|------------------------|----------------|-----------------------------------|--|--|
| Pin Number | Definition | Description | | |
| Pin 1 | Positive Input | DC Power Positive Terminal | | |
| Pin 2 | Negative Input | DC Power Negative Terminal | | |
| Pin 3 Ground | | Power System Ground | | |

Table 215 Power Connector

PPC-CM4-050 Touch Screen



The system ground "**G**" is connected to power negative "-" on board. The central pin is positive.

Touch Screen

The PPC-CM4-050 industrial Pi PC uses a 5-point capacitive touch screen. However, the Debian OS supports only One-Point touch.

The figure below shows the capacitive touch screen connected to the motherboard via the **FPC connector**.



Figure 910: Capacitive Touch Connector

A

Attention

A capacitive touch screen is susceptible to power noise and Electromagnetic Radiation (EMR). It may cause LCD ripples or even capacitive touch malfunction. If using a capacitive multi-touch test application, you might notice the touch points float erratically across the display. There are several solutions to this problem:

- 1. Use a high-quality Power Adapter Unit (PSU) with low EMR. You can also provide power from a battery.
- 2. Make sure that the PPC-CM4-050 Power Input connector (pin 3) is properly connected to the Power System Ground to provide sufficient EMI shielding and eliminate the problem entirely.
- 3. Bad GND problems can also be confirmed by touching pin 3 of the Power Input connector with one hand while operating the capacitive touch screen with the other hand. In this case, the operator's body acts as the Power System Ground.

Connectivity

There are many connectivity options available on the PPC-CM4-050 industrial Pi PC. It has 2 x USB 2.0 Host, 1 x Type-C, 1 x Channel Giga LAN (RJ45) Ethernet connector supporting up to 1 Gbps, and 4×1000 x UART terminals (RS232/RS485/CAN).

PPC-CM4-050 RS232/RS485/CAN

RS232/RS485/CAN

The serial communication interfaces (RS485, RS482, and CAN) are routed to a **12-pin 3.81mm terminal**, as illustrated on the figure below.

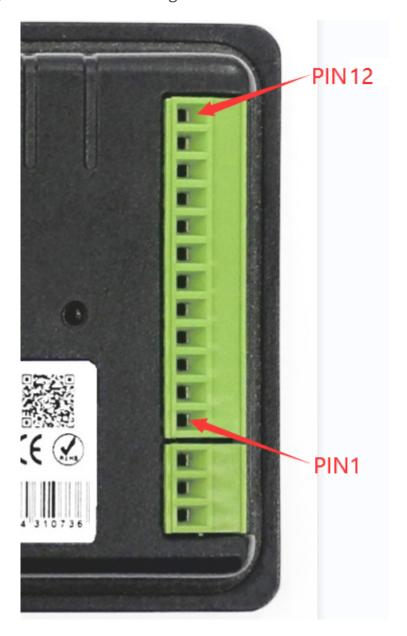


Figure 911: Relation between serial pins on embedded vs. enclosed version of the PPC-CM4-050 Industrial PC

The table below offers more detailed description of every pin and its definition:

| RS232 / RS485 / CAN Pin Definition: | | | | |
|-------------------------------------|------------|------------------------------|--|--|
| Pin Number | Definition | Description | | |
| Pin 12 | CAN1_H | CAN H signal | | |
| Pin 11 | CAN1_L | CAN L signal | | |
| Pin 10 | RS485_4- | CPU UART5, RS485 –(B) signal | | |
| Pin 9 | RS485_4+ | CPU UART5, RS485 +(A) signal | | |

PPC-CM4-050 **USB Connectors**

| RS232 / RS485 / CAN Pin Definition: | | | | |
|-------------------------------------|-------------|---|--|--|
| Pin 8 | RS485_3- | CPU UART3, RS485 –(B) signal | | |
| Pin 7 | RS485_3+ | CPU UART3, RS485 +(A) signal | | |
| Pin 6 | RS232_0_RXD | CPU UART2, RS232 RXD signal | | |
| Pin 5 | RS232_0_TXD | CPU UART2, RS232 TXD signal | | |
| Pin 4 | RS232_2_RXD | CPU UART0, RS232 RXD signal, Debug Port | | |
| Pin 3 | RS232_2_TXD | CPU UARTO, RS232 TXD signal Debug Port | | |
| Pin 2 | GND | System Ground | | |
| Pin 1 | +5V | System +5V Power Output, No more than 1A Current output | | |

Table 216 Connectivity Section



Attention

- 1. RS485_3 and RS485_4 can control the input and output direction automatically. There's no need to control it from
- 2. The 120Ω match resistor for the RS485 and CAN bus is NOT mounted by default.

USB Connectors

There are 2 x Type A **USB HOST connectors** onboard, as shown on the figure below.



Figure 912: USB HOST Connectors



Attention

- 1. These two USB host connectors can drive 500mA for each channel at most.
- 2. When you connect this product to the HOST PC by a USB Type-C cable, the USB HUB will be disabled. As a result, the 2 USB host connectors will not work.

The product has one USB Type-C connector that works as a slave by default. You can use it to establish a connection with the host PC and for downloading the system to the eMMC of CM4 module.

PPC-CM4-050 LAN Connectors



Figure 913: USB OTG Connector



Warning

- 1. Be careful not to touch surrounding electronic components accidentally while plugging in USB devices into the embedded Industrial PC version.
- 2. Unplug the Type-C calbe after you downloaded system, which will cause USB Host doesn't work.

LAN Connectors

LAN (RJ45) connector provides Ethernet connectivity over standardized Ethernet cables as shown in the figure below. The integrated Ethernet interface supports up to 1 Gbps data throughput. These Giga LAN signals come from the CM4 module directly.



Figure 914: RJ45 LAN Connectors



Note

Use CAT5 or better cables to achieve full data throughput over maximum distance defined by the 1000BASE-T standard (100m).

WiFi & BT Module

The default PPC-CM4-050 without the CM4 does not include a Wi-Fi/BT module. If you include a CM4 that has the Wi-Fi/BT module, the product will have Wi-Fi/BT feature. The enclosed (CS12720RA4050P) variant of the product also includes an SMA connector for an external WiFi/BT antenna, as illustrated in the figure below.

PPC-CM4-050 TF Card Slot



Figure 915: WiFi+BT Antenna



Attention

The product does not come shipped with the Wi-Fi/BT module by default.

TF Card Slot

The PPC-CM4-050 industrial Pi PC features 1 x **TF Card (micro SD) slot**: SD, TF slots can address up to 128GB of memory.



Figure 916: TF (micro SD) Card Slot



Attention

- 1. The SD is used for memory extension. It can't be used for system boot-up.
- 2. The product does not come shipped with the TF Card by default.

Audio Connectors

The PPC-CM4-050 industrial Pi PC features some audio peripherals. It has 1 x **3.5mm audio output jack**.

Also, the PPC-CM4-050 industrial Pi PC has a miniature 2W internal speaker for audio reproduction, as well as a small buzzer for alarm/notification sounds.



Figure 917: Audio Connector

PPC-CM4-050 HDMI Connector



Attention

By plugging in the headphone cable, the internal speaker will be disabled automatically.

HDMI Connector

The PPC-CM4-050 industrial Pi PC supports 1 x HDMI-D 2.0 interfaces capable of driving 4K images.



Figure 918: HDMI Connector

PROG Button

The PPC-CM4-050 industrial Pi PC has one button on the board marked as PROG, shown in the figure below.

When button is pressed before power, the Raspberry Pi will boot from the USB connector. You can use this function to download the OS software to the internal eMMC. When button is released before power, the Raspberry Pi will boot from internal eMMC.

There is no need to press the button during regular operation. However, if you need to reinstall the OS, please refer to the detailed information on how to re-flash the OS from the Software Documentation.



Figure 919: PROG Button

Mounting Procedure

The PPC-CM4-050 industrial Pi PC can be mounted with 2 x M4 screws, enabling simplified installation onto any standard mounting fixture.

PPC-CM4-050 CS12720RA4050P

CS12720RA4050P

You can mount CS12720RA4050P with the Vesa (75 \times 75mm) and Panel mounting methods, as shown on the figure below.

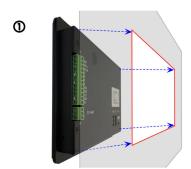






Figure 920: Panel mounting



Attention


Please make sure the display is not exposed to high pressure when mounting into an enclosure.


You can find detailed information about mounting in the Mount IPC Guide.


Mechanical Specifications

CS12720RA4050P

The outer mechanical dimensions of CS12720RA4050P are $138.55 \times 84.70 \times 27.10$ mm (W x L x H). Please refer to the technical drawing in the figure below for details related to the specific product measurements.

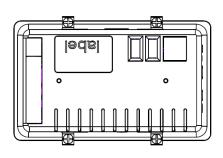

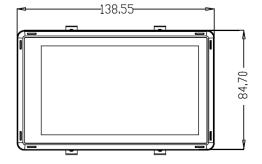






Figure 921: CS12720RA4050P Technical Drawing

Disclaimer

This document is provided strictly for informational purposes. Its contents are subject to change without notice. Chipsee assumes no responsibility for any errors that may occur in this document. Furthermore, Chipsee reserves the right to alter the hardware, software, and/or specifications set forth herein at any time without prior notice and undertakes no obligation to update the information contained in this document.

While every effort has been made to ensure the accuracy of the information contained herein, this document is not guaranteed to be error-free. Further, it does not offer any warranties or conditions, whether expressed orally or implied in law, including implied warranties and conditions of merchantability or fitness for a particular purpose. We specifically disclaim any liability with respect to this document, and no contractual obligations are formed either directly or indirectly by this document.

Despite our best efforts to maintain the accuracy of the information in this document, we assume no responsibility for errors or omissions, nor for damages resulting from the use of the information herein. Please note that Chipsee products are not authorized for use as critical components in life support devices or systems.

Technical Support

If you encounter any difficulties or have questions related to this document, we encourage you to refer to our other documentation for potential solutions. If you cannot find the solution you're looking for, feel free to contact us. Please email Chipsee Technical Support at **support@chipsee.com**, providing all relevant information. We value your queries and suggestions and are committed to providing you with the assistance you require.