

# COCOA PRESS



## ASSEMBLY MANUAL

Break Free from the Mold.

---

VERSION 1.0 | 2023-10-25



Before you begin on your journey, a word of caution.

This machine can injure you or damage itself if care is not taken to follow the steps.

**Please, read the entire manual before you start assembly.**

Best of luck, and happy printing!

**COCOA PRESS**

Introduction	04	A/B Idlers	88
Hardware	07	X/Y Joints	95
Extrusion Prep	11	X Carriage	119
Frame	15	A/B Belt Path	134
Interior Panels	26	Toolhead	145
Z Axis	33	Electronics	185
Bed	42	Display	189
A/B Drives	55	Exterior Panels	205
X/Y Gantry	85	Done!	213

## PART PRINTING GUIDELINES

The Cocoa Press team has provided the following print guidelines for you to follow in order to have the best chance at success with your parts. There are often questions about substituting materials or changing printing standards, but we recommend you follow these.

### 3D PRINTING PROCESS

Fused Filament Fabrication (FFF)

### INFILL TYPE

Gyroid, Grid, Honeycomb, Triangle or Cubic

### MATERIAL

PETG

### INFILL PERCENTAGE

Recommended: 25%

### LAYER HEIGHT

Recommended: 0.2mm

### WALL COUNT

Recommended: 3

### NOZZLE SIZE

Recommended: 0.4mm

### SOLID TOP/BOTTOM LAYERS

Recommended: 4 bottom, 5 top layers

### FILE NAMING

By this time you should have already downloaded our STL files. You might have noticed that we have used a unique naming convention for the files. This is how to use them.

#### PRIMARY COLOR

##### **B\_Drive\_Frame\_Lower\_x1.stl**

These files will have nothing at the start of the filename.

#### ACCENT COLOR

##### **[a]\_Tensioner\_Knob\_x2.stl**

We have added “[a]” to the front of any STL file that is intended to be printed with accent color.


#### QUANTITY REQUIRED

##### **[a]\_Thumb\_Nut\_x3.stl**

Any file that ends with “\_x#” is telling you the quantity of that part required to build the machine.

### STL FILE LIST


We have put together a comprehensive list of all the STL files used in this manual you can use this to keep track of parts you have printed, identify the names of printed parts, and/or reference where they are used in the body of this manual. Simply copy the document from the link and you can markup a local copy for yourself.

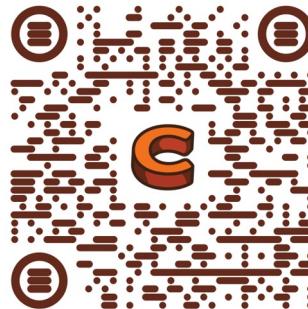

<https://than.gs/m/939895>

### FILAMENT

While under no obligation to use our filaments, we've collaborated with Printed Solid to produce Cocoa Press PETG for use with your FFF plastic printer to make the printed parts for your Cocoa Press. They can be purchased on our website [here](#).

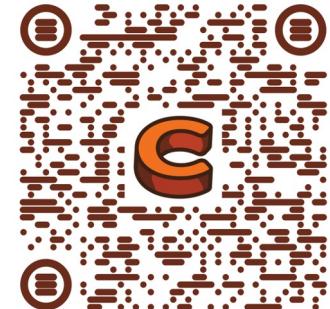

[cocoapress.com/products/cocoa-press-filament](http://cocoapress.com/products/cocoa-press-filament)

### HOW TO GET HELP

If you need assistance with your build, we're here to help. Head on over to our contact page and submit your questions.

### REPORTING AN ISSUE

Should you find an issue in the documentation or have a suggestion for an improvement please consider opening an issue on GitHub (<https://github.com/CocoaPress/AssemblyManual-Issues>).

When raising an issue please include the relevant page numbers and a short description; annotated screenshots are also very welcome. We periodically update the manual based on the feedback we get.



[github.com/CocoaPress/AssemblyManual-Issues](https://github.com/CocoaPress/AssemblyManual-Issues)




[cocoapress.com/pages/contact](https://cocoapress.com/pages/contact)



[discord.gg/KMnuqrdf5nW](https://discord.gg/KMnuqrdf5nW)


### THIS IS JUST A REFERENCE

This manual is designed to be a simple reference manual. Building a printer can be a complex endeavour and for that reason we recommend checking out [help.cocoapress.com](https://help.cocoapress.com) for supplemental information or emailing support ([hello@cocoapress.com](mailto:hello@cocoapress.com)).

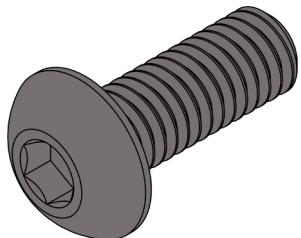**BUTTON HEAD CAP SCREW (BHCS)**


Metric fastener with a domed shaped head and hex drive. Most commonly found in locations where M3 fasteners are used.

ISO 7380-1

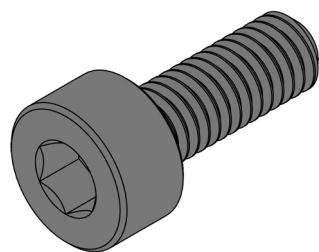**SOCKET HEAD CAP SCREW (SHCS)**


Metric fastener with a cylindrical head and hex drive. The most common fastener used on the machine.

ISO 4762 / DIN 912

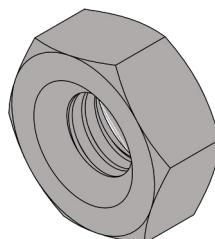**M5 HEX NUT**


Hex nuts couple with bolts to create a tight, secure joint.

ISO 4032 / DIN 934

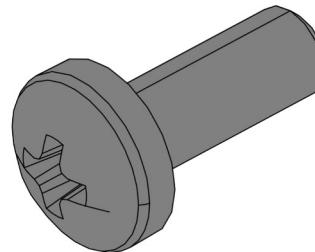
**BUTTON HEAD PHILLIPS SCREW (BHPS)**

Metric phillips fastener with a rounded head.


ISO 10642

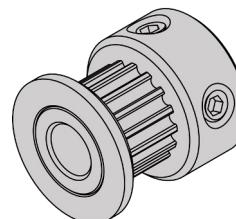**PULLEY**


GT2 pulley used on the motion system of the machine.

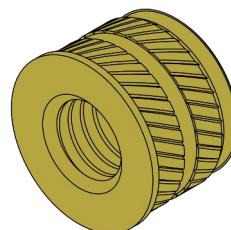**HEAT SET INSERT**


Heat the inserts with a soldering iron so that they melt the plastic when installed. As the plastic cools, it solidifies around the knurls and ridges on the insert for excellent resistance to both torque and pull-out.

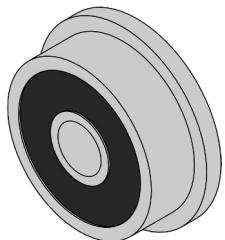**F695 BEARING**

A ball bearing with a flange used in various gantry locations.

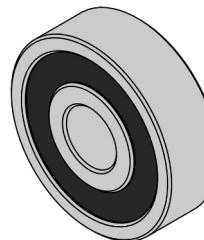
**625 BEARING**

A ball bearing used in various gantry locations.

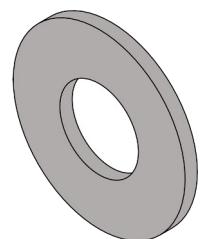
**M5 WASHERS**

These are used in the belt path bearing stacks and other various locations in this manual.

5x10x1 DIN 988

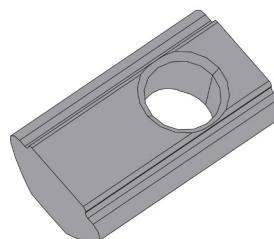**POST INSTALL T-NUT**



Nut that can be inserted into the slot of an aluminium profile. Used in both M3 and M5 variants throughout this guide. Often also called "roll-in T-nut".

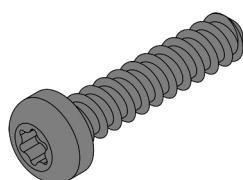**SELF TAPPING SCREW**

Fastener with a pronounced thread profile that is screwed directly into plastic.

**ATTENTION BUBBLE**

This logo denotes steps that are common areas that mistakes can occur.

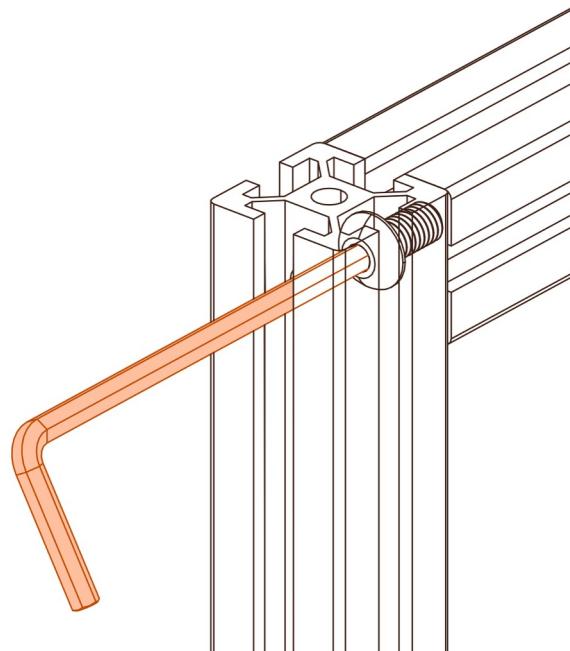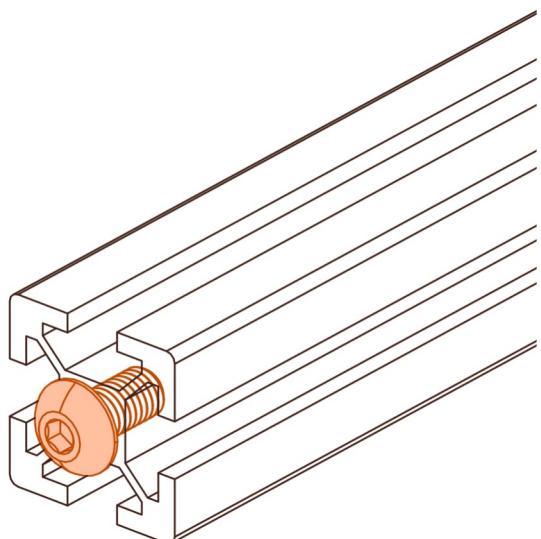


### BLIND JOINT BASICS



Blind Joints provide a cost-effective and rigid assembly method for joining extrusions. They will be used throughout the frame assembly.


The head of the BHCS is slid into the channel of another extrusion and securely fastened through a small access hole in the extrusion.

If you've never assembled one before we recommend you watch the linked guide.

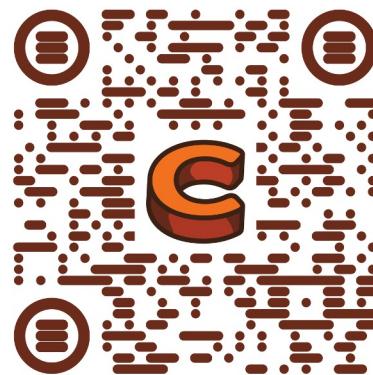


<https://youtu.be/2dvbn0rWA60?t=466>

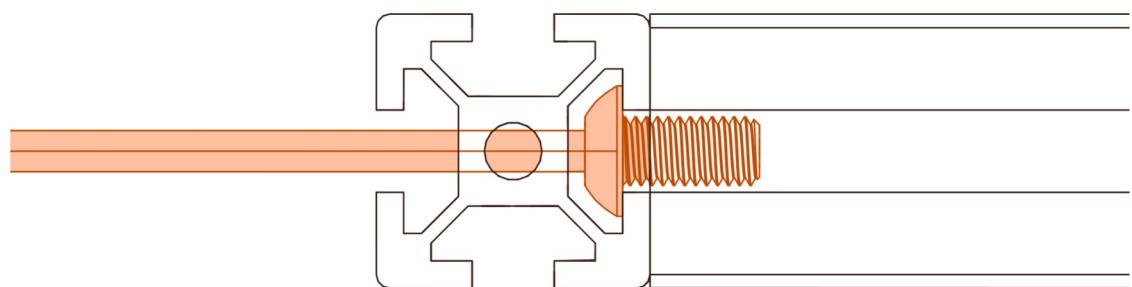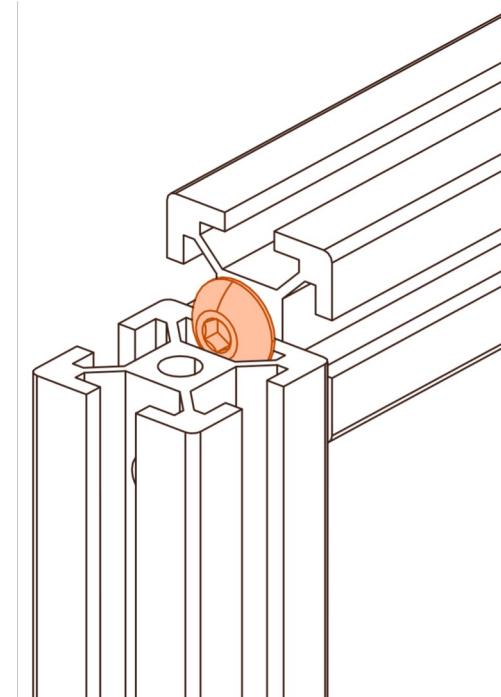

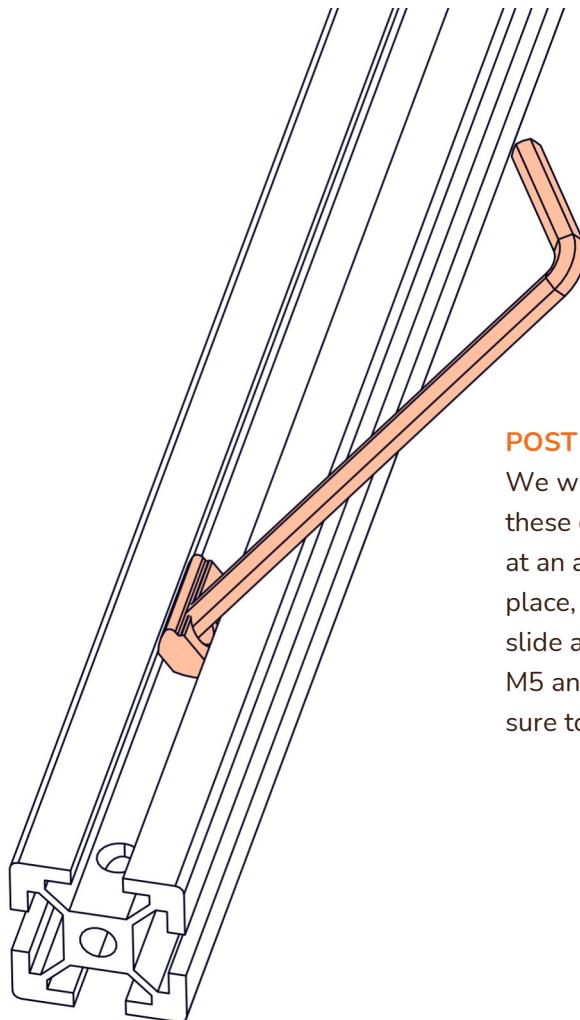

#### POST INSTALL T-NUTS

We will be using a lot of post install T-nuts, these can be inserted into the extrusion slots at an angle and then rotated to clip into place, they should stay in position and not slide around easily. We will be using both M5 and M3 variants during the build, so be sure to install the correct ones at each step.

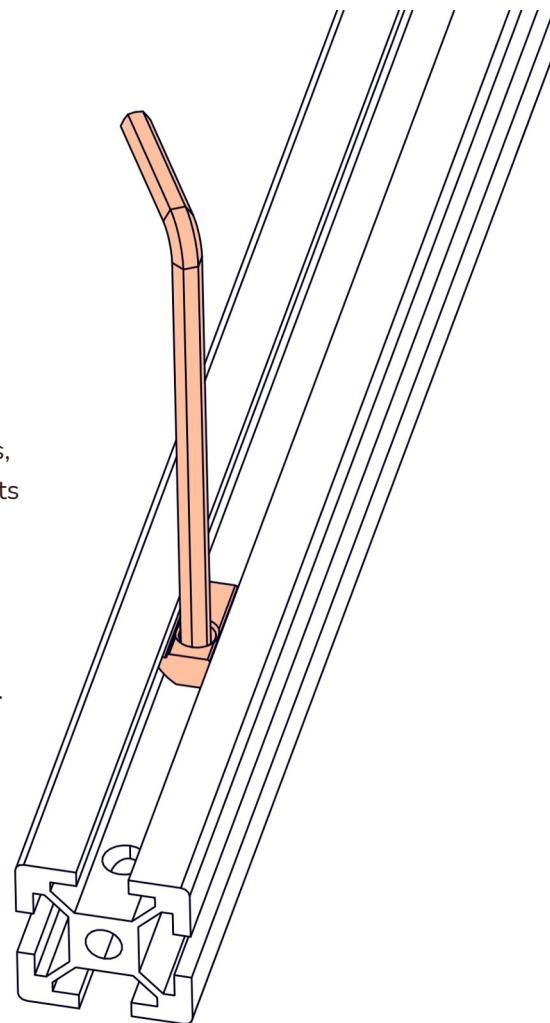


### BEFORE YOU BEGIN

Remove the box labeled "Cartridge", unpack and wash with soap and water all cartridge and housing components. The included brushes are in the box labeled "Build Plate".

This gives them time to air-dry before you start printing if you intend to get going quickly!

**LET'S GO!**


Collect your extrusions and sort them by length. We will highlight the extrusions used in each step and label them as shown on this page.

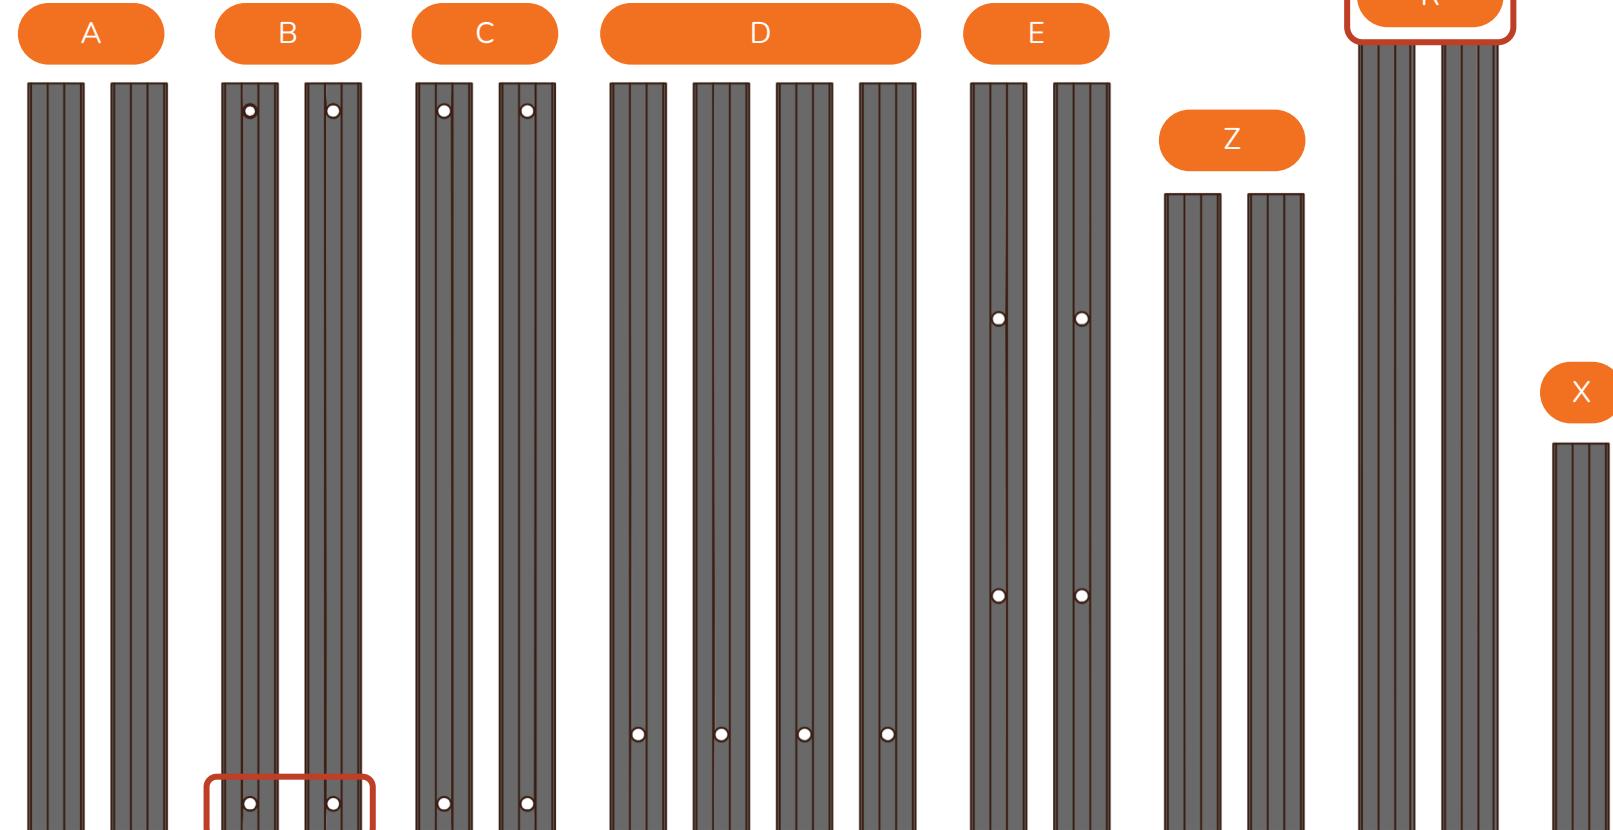**WHAT'S THE DIFFERENCE BETWEEN 'B' AND 'C'?**


The "B" extrusions have a third hole cross drilled on the lower end, the C extrusions have only 2 holes each, both in the same direction as shown above.

**"R" U Sure?**

R Profile extrusion is a curved shape, used for the topmost frame rails. They look similar to A and Z otherwise.

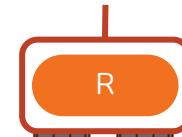




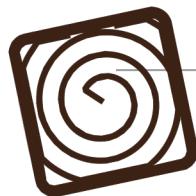

Difficulty

Medium

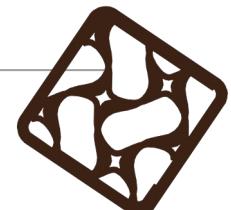

Tools Needed


M3 Driver  
M5 Driver  
Scissors (Suggested, To Remove Bags)


Hardware Needed


Z Extrusions (2x)  
E Extrusions (2x)  
D Extrusions (4x)  
C Extrusions (2x)  
B Extrusions (2x)  
A Extrusion (1x)  
M5x16 Button Head Cap Screw (16x)  
M5x10 Button Head Cap Screw (10x)  
M5 T-Nuts (10x)  
Rubber Feet (4x)

Printed Parts Needed

Front Right / Left Base  
Rear Right / Left Base

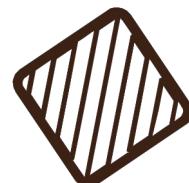

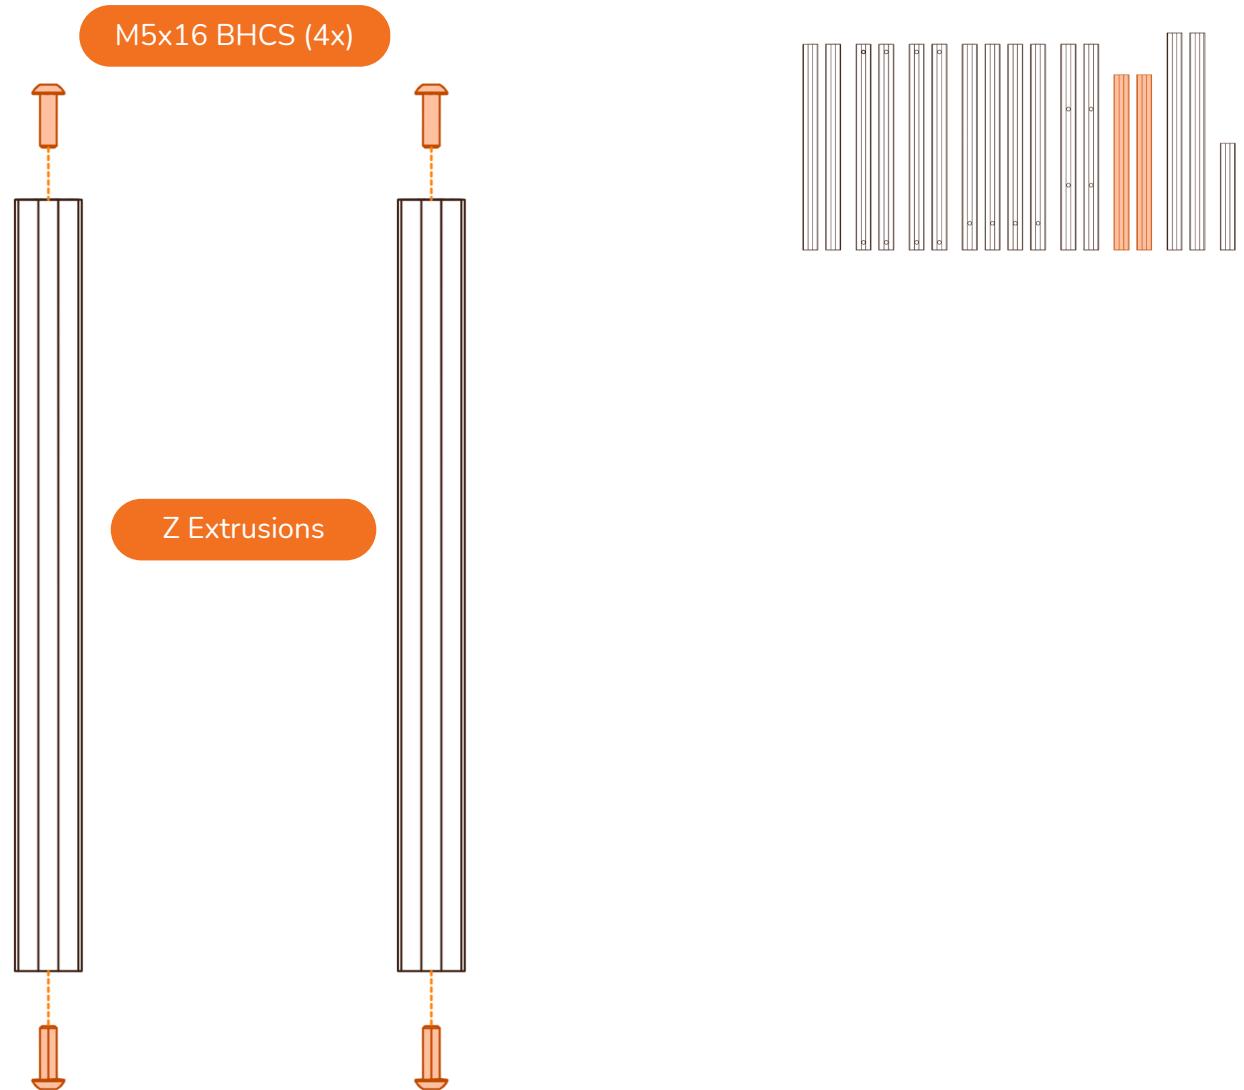

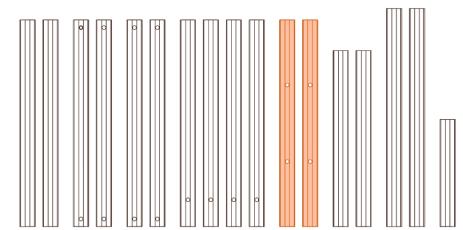


E Extrusions



M5x16 BHCS (4x)




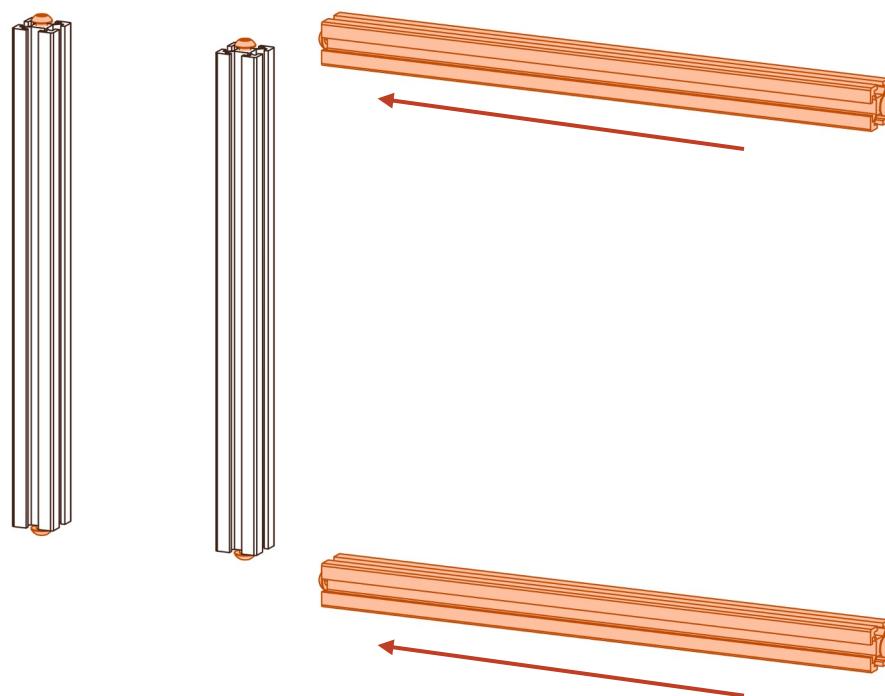


#### BLIND JOINTS

Align the Z extrusion to the holes in the side of the E extrusion. Then, secure the M5 bolts by inserting an allen key through the access holes.

We will adjust the position of the Z extrusions on the next page.

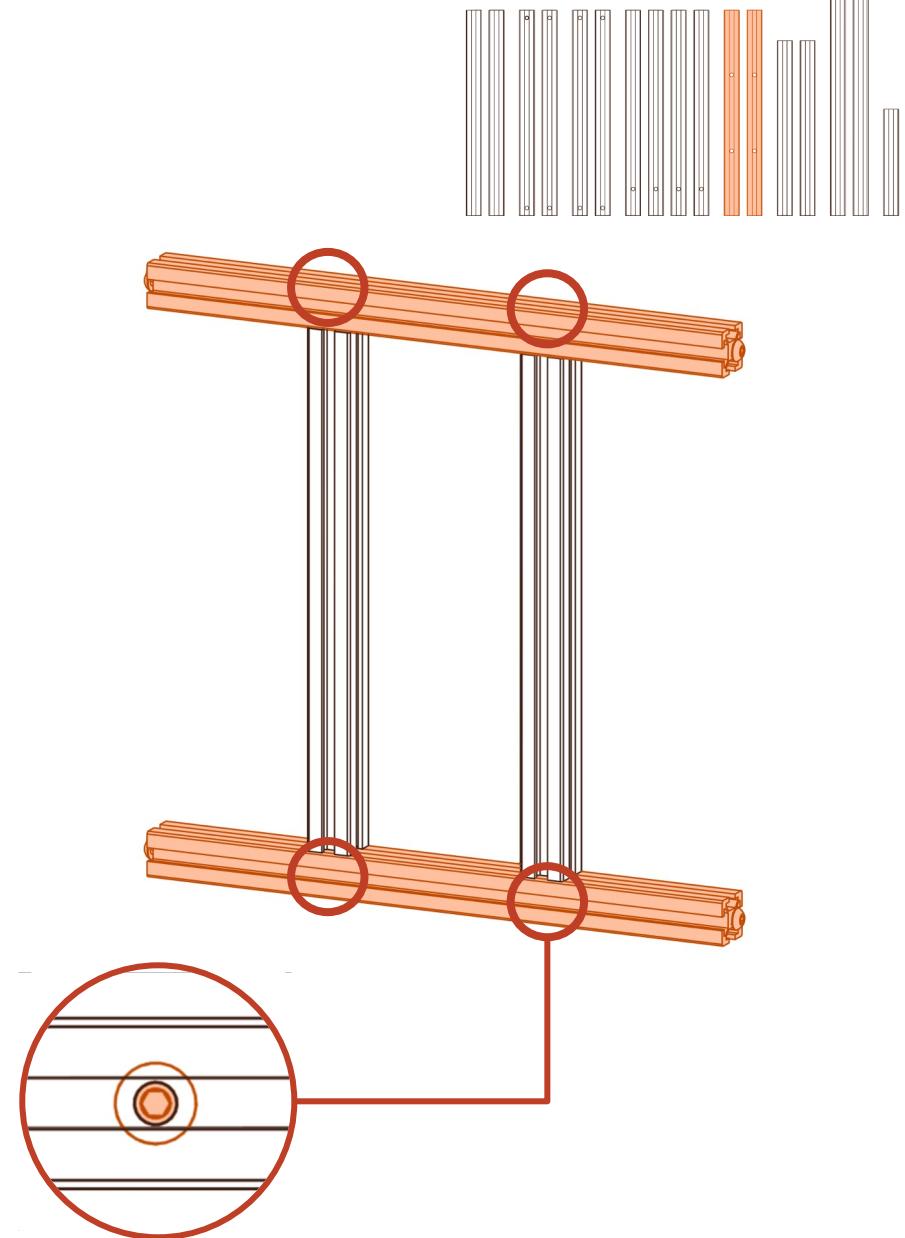

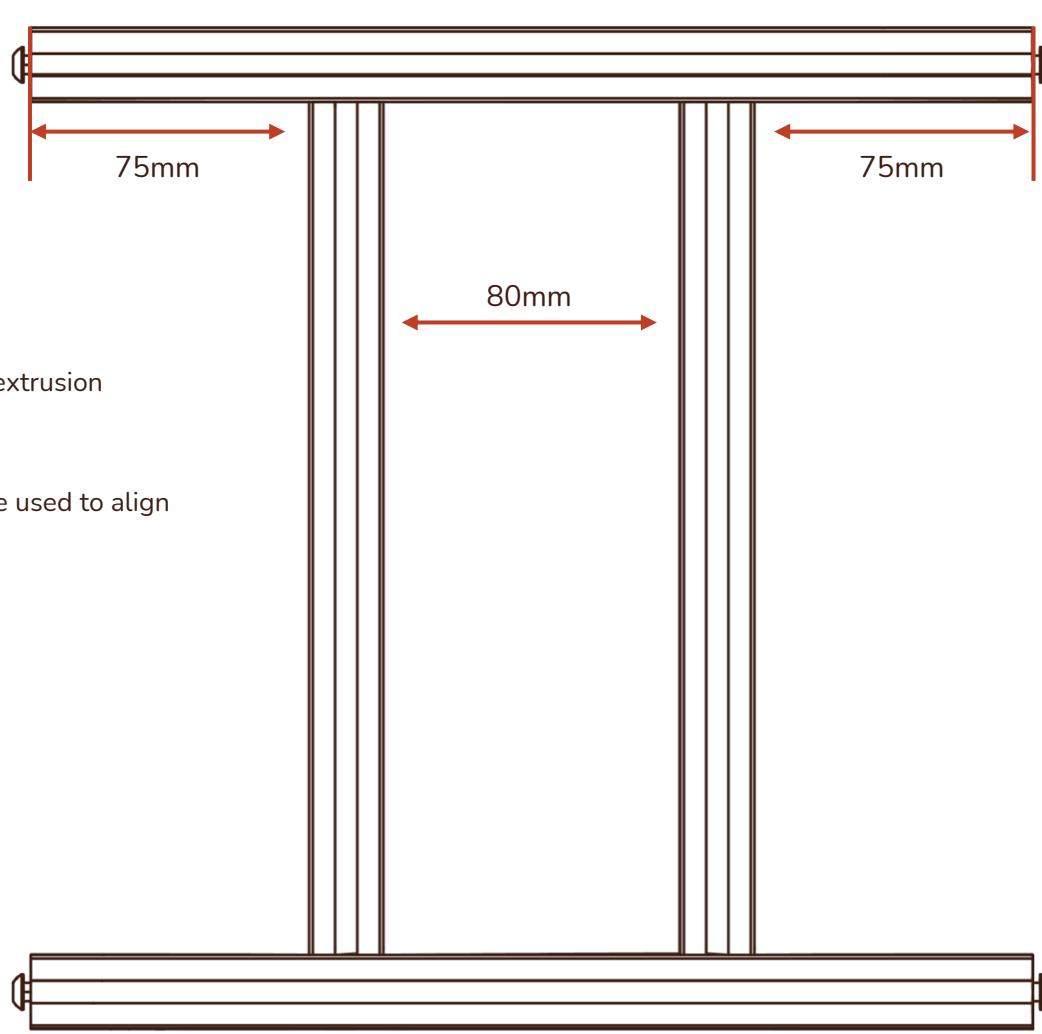


#### LINE EM UP!



By measuring the distances, align the extrusion profiles.

**Tip:** The holes in the E extrusion can be used to align with the Z extrusions.

#### Z EXTRUSION POSITIONING


Once you are happy with the positions, be sure to tighten the blind joints fully.

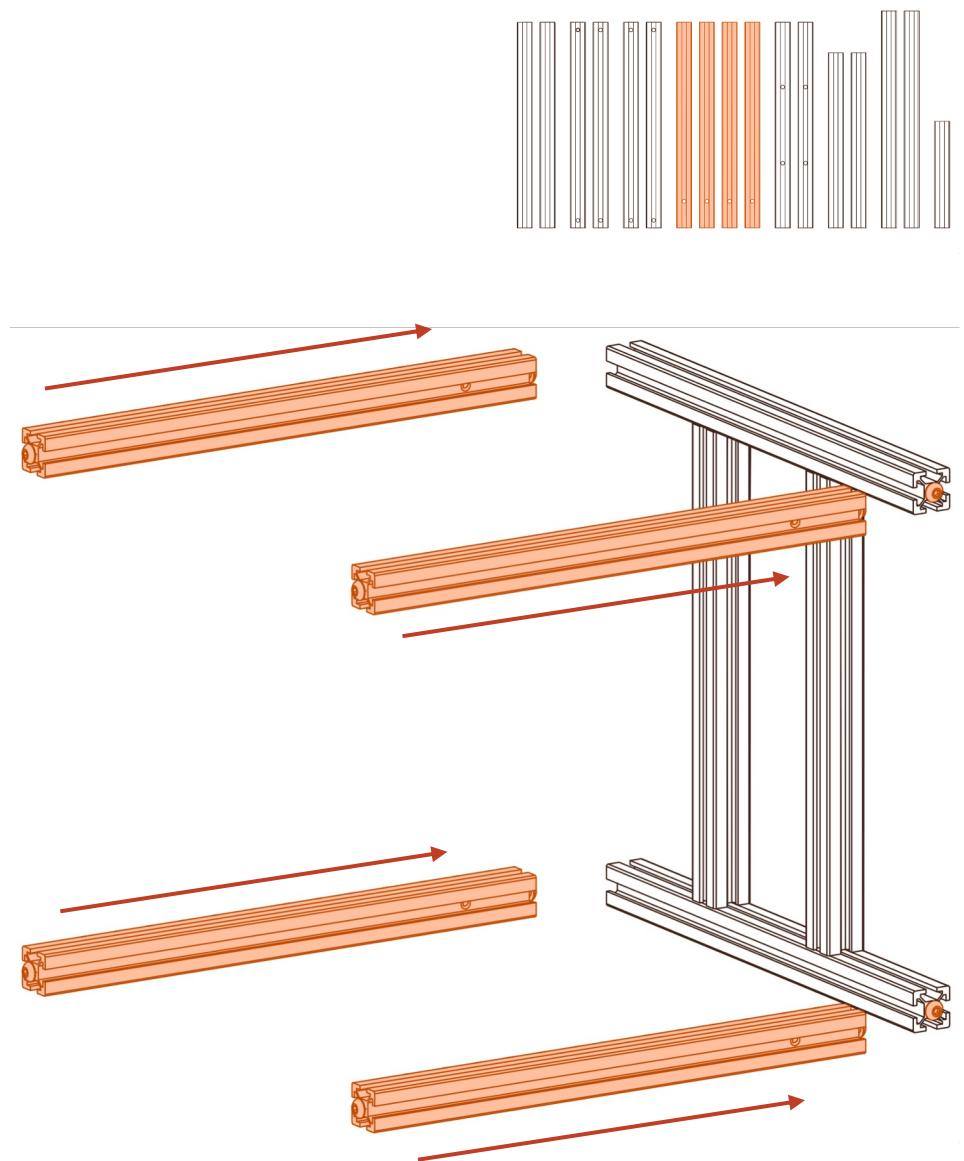


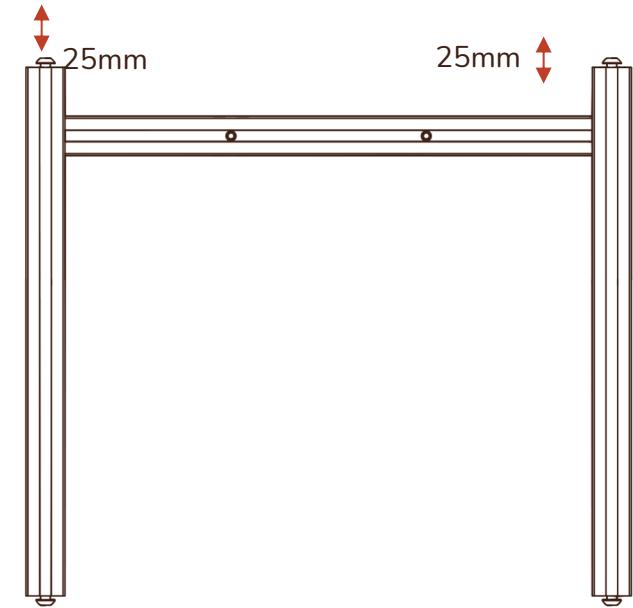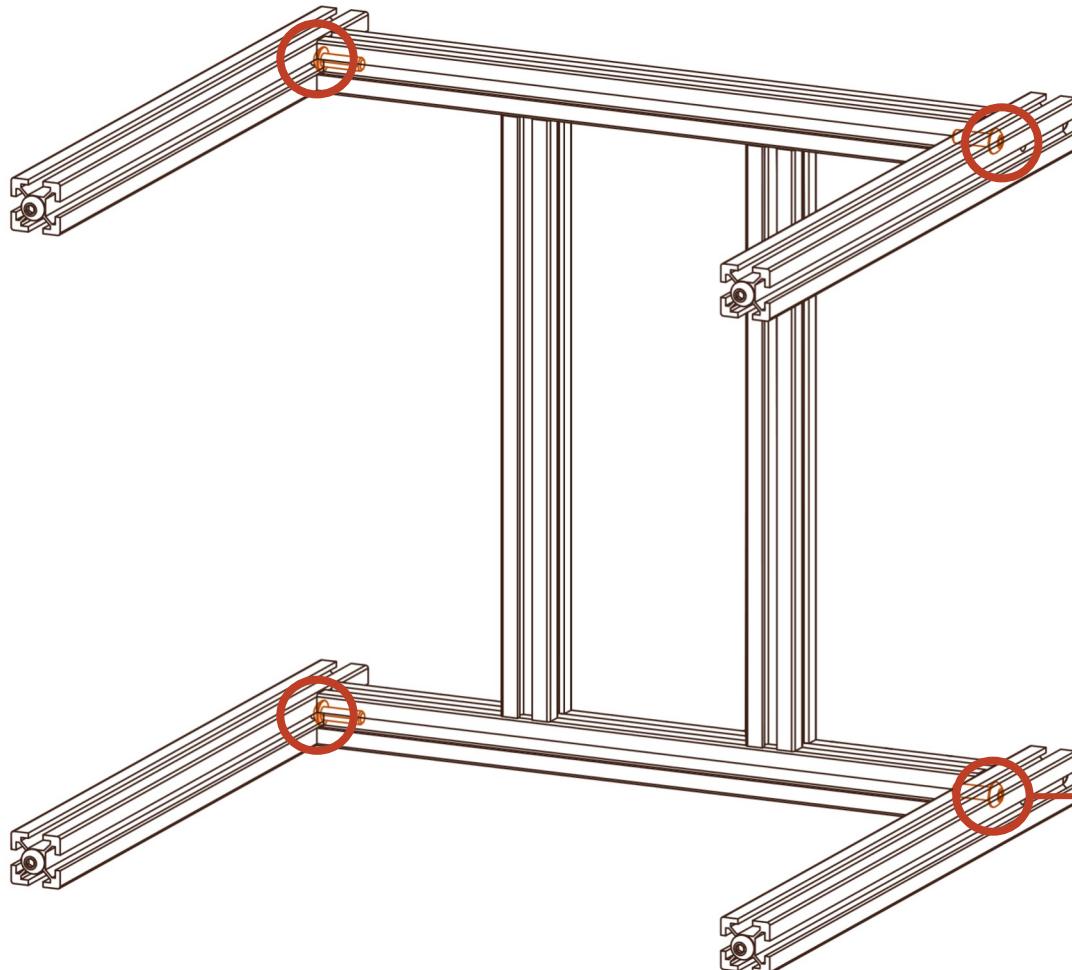




#### BLIND JOINTS


Secure the M5 bolts by inserting an allen key through the access holes. Adjust the position of the D extrusions so that they match the dimensions noted above.

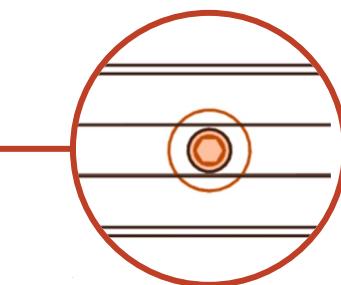

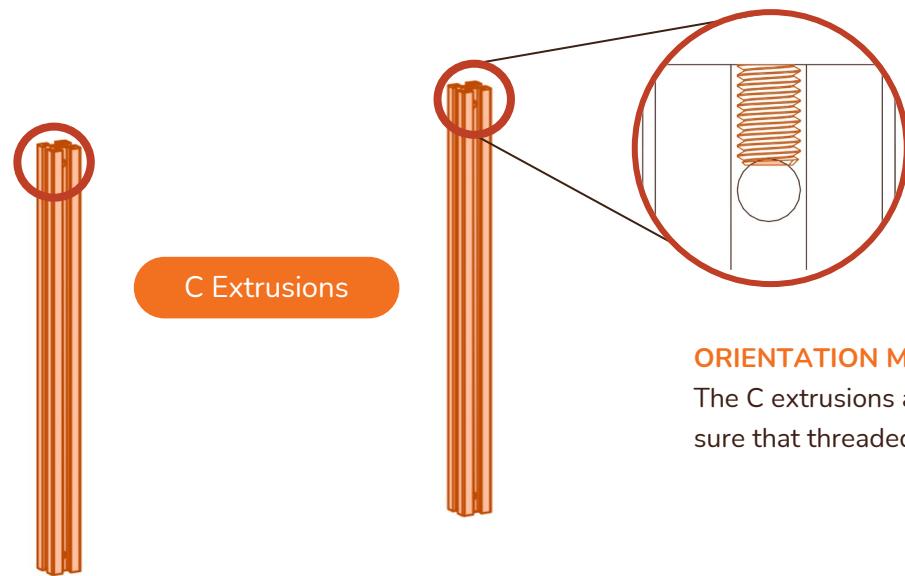**ORIENTATION MATTERS**



The C extrusions are only threaded on one end. Make sure that threaded end is facing up on both extrusions.

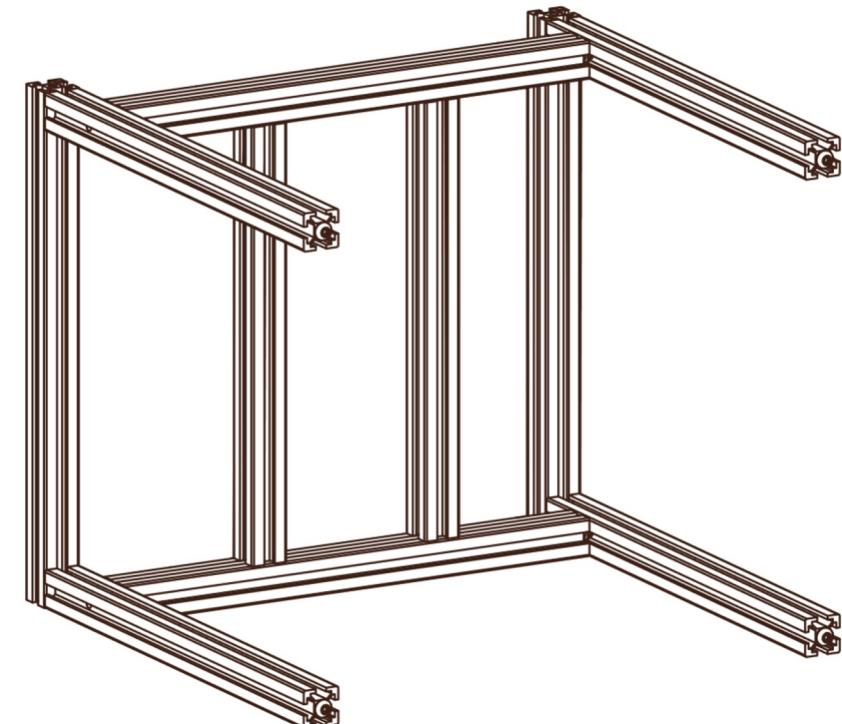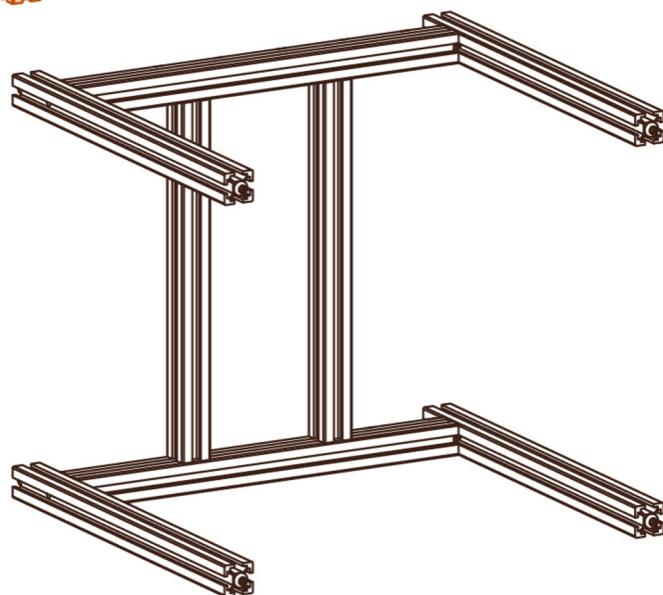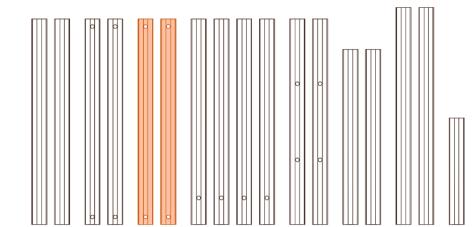


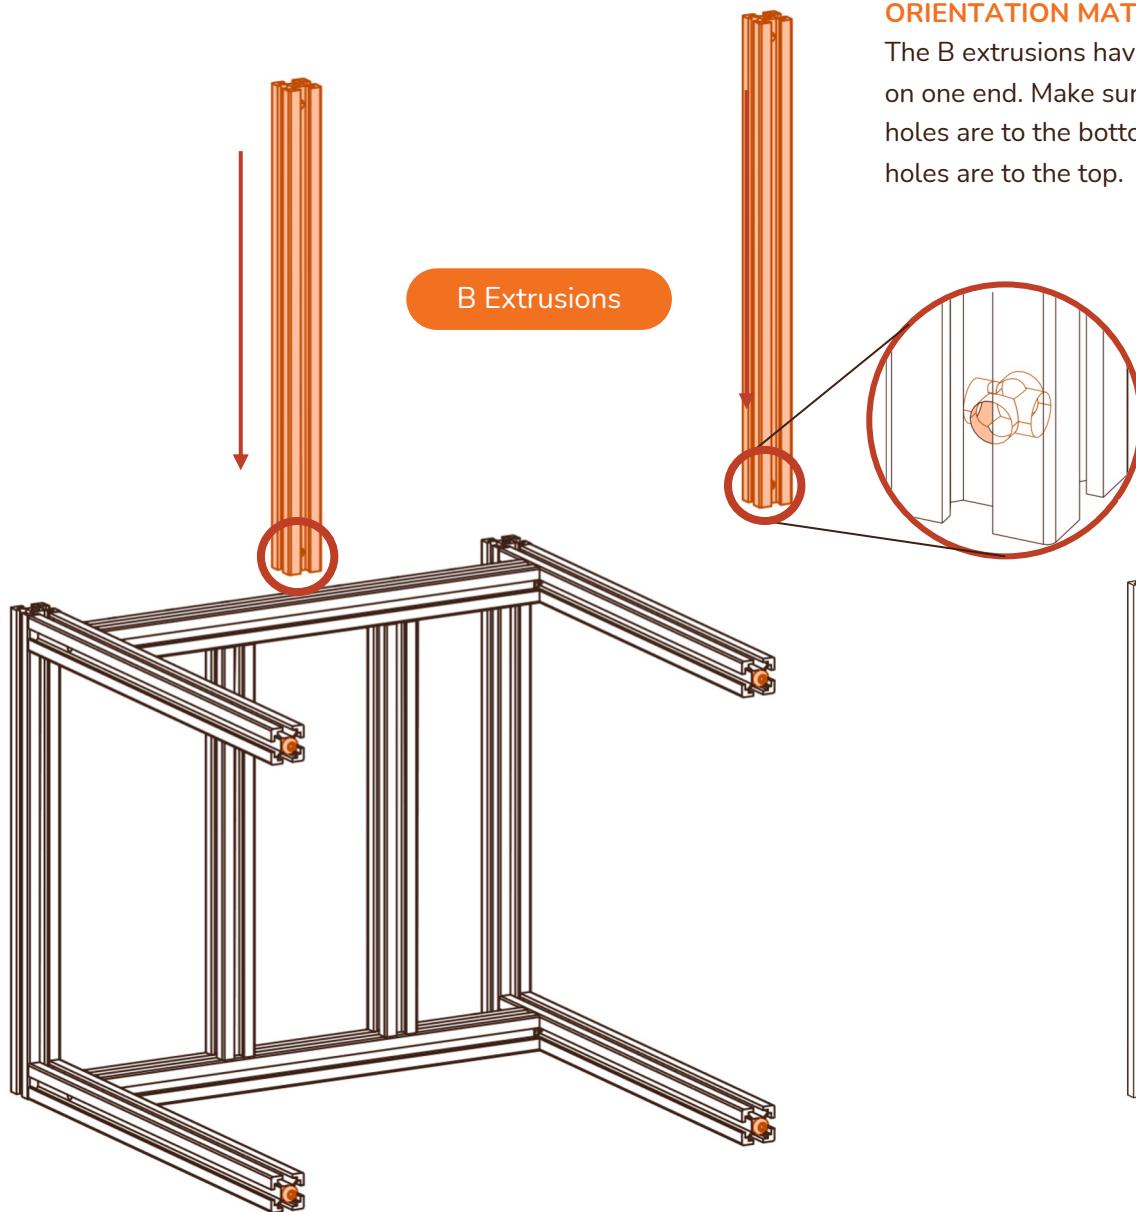

#### ORIENTATION MATTERS


The B extrusions have cross drilled holes on one end. Make sure these cross drilled holes are to the bottom, and the threaded holes are to the top. Tighten screws.

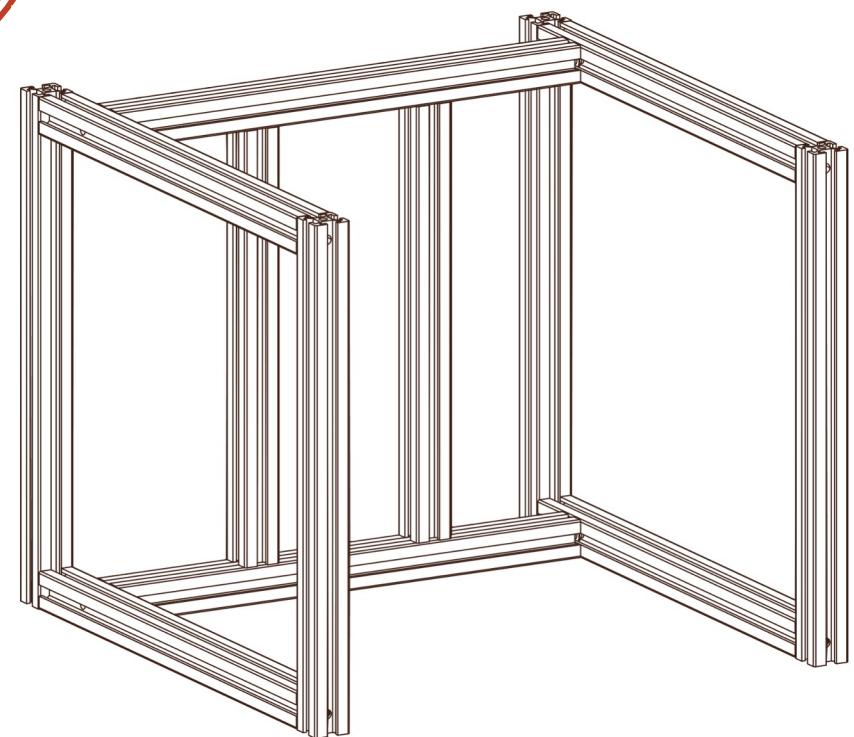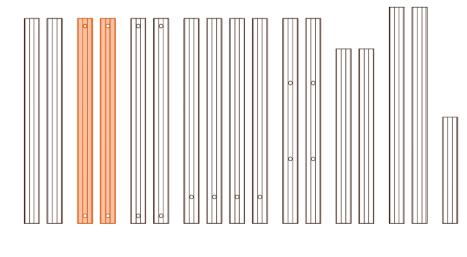

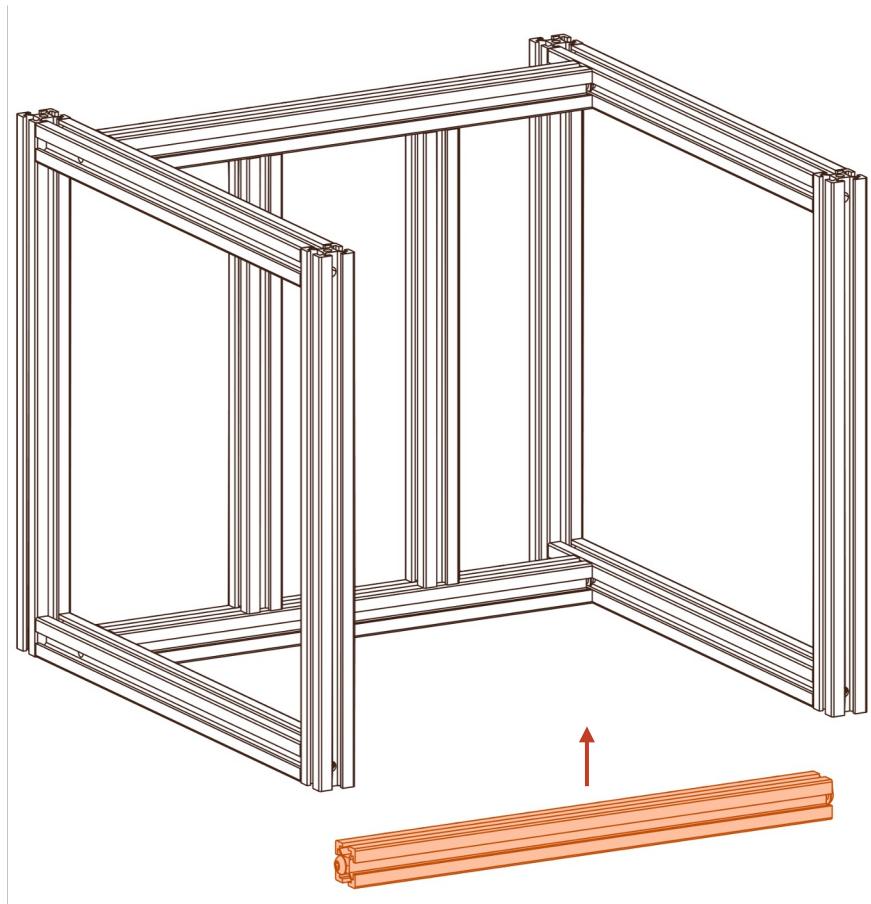


A Extrusion

M5x16 BHCS (2x)

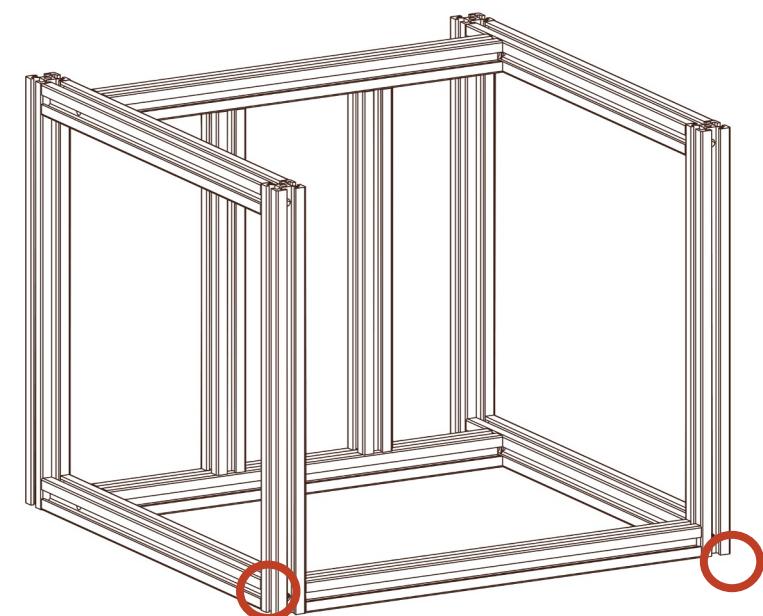**TIGHTEN THE BLIND JOINTS**

This is the final piece of the frame. Now is a good opportunity to take some extra time to ensure that your connections are tight and everything is square.

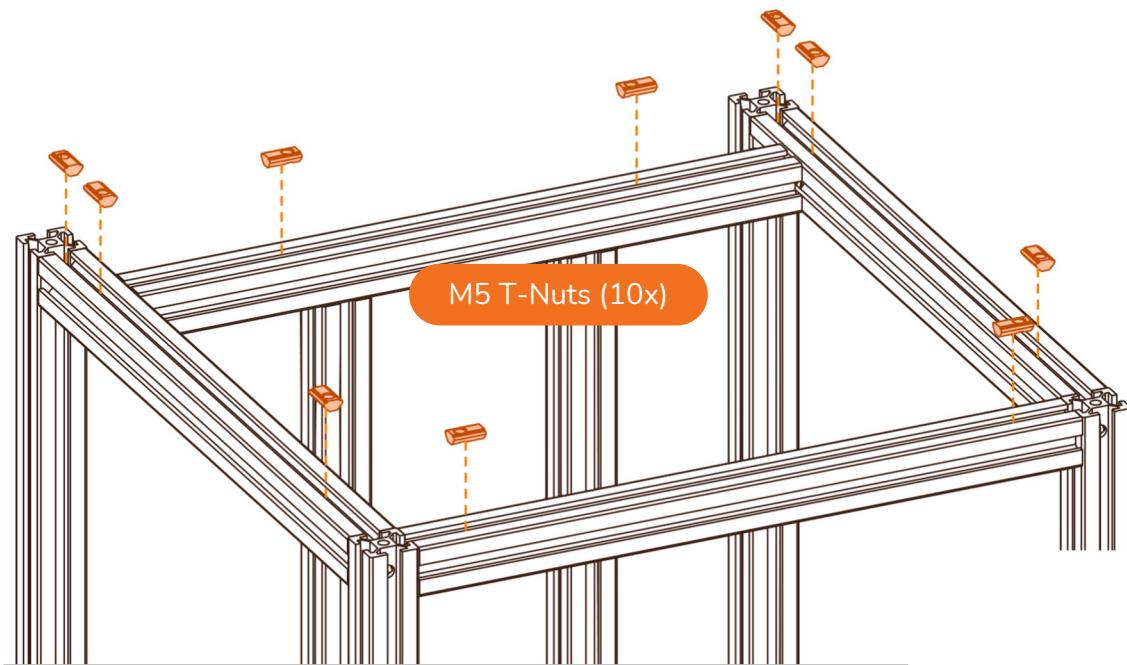


#### FLIP THE PRINTER OVER


These T-nuts and printed parts are for the feet. On the bottom of the frame, make sure you have the assembly oriented correctly so that it matches the pictures.



#### ORIENTATION MATTERS


Follow the orientation of the T-nuts as shown above, as installing them backwards results in not being able to tighten your feet prints to the frame as far.

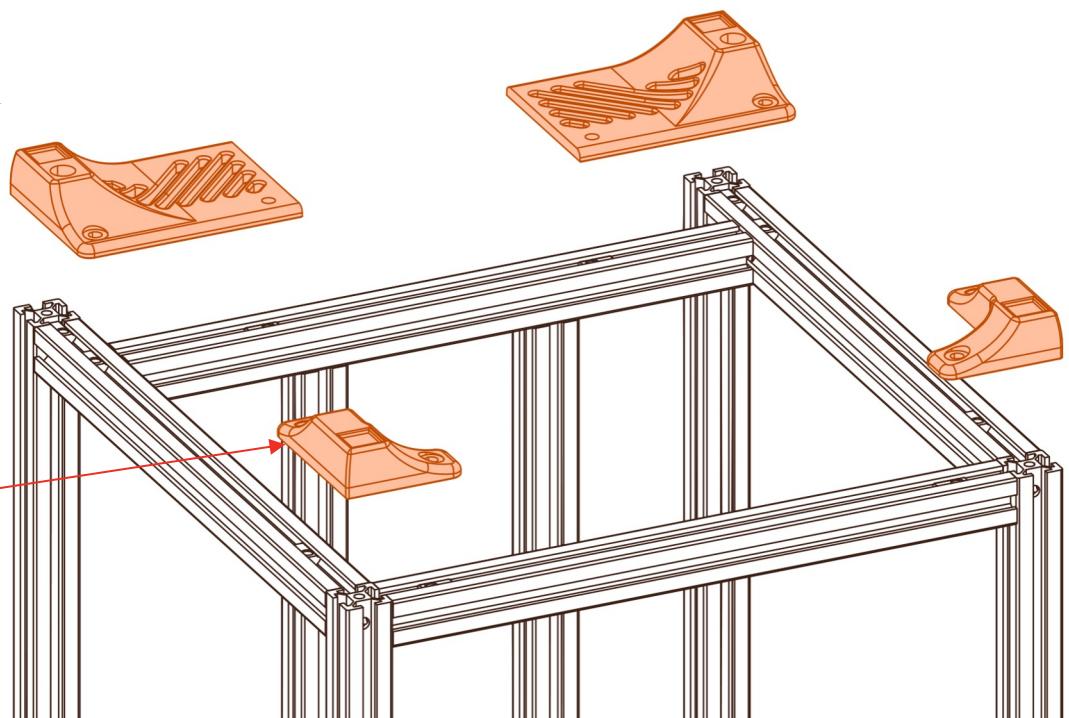

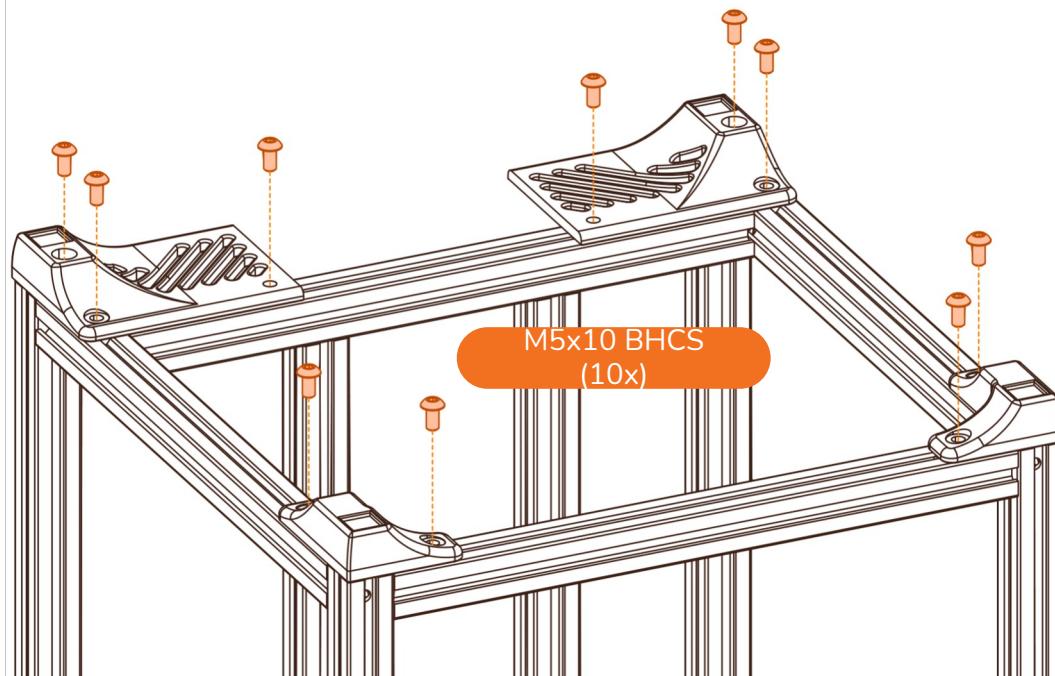

#### CAN'T FIND MY SHOES!

If you can't find the rubber feet in your kit, check the "Wiring Kit" box. This is because the feet keep your printer grounded.

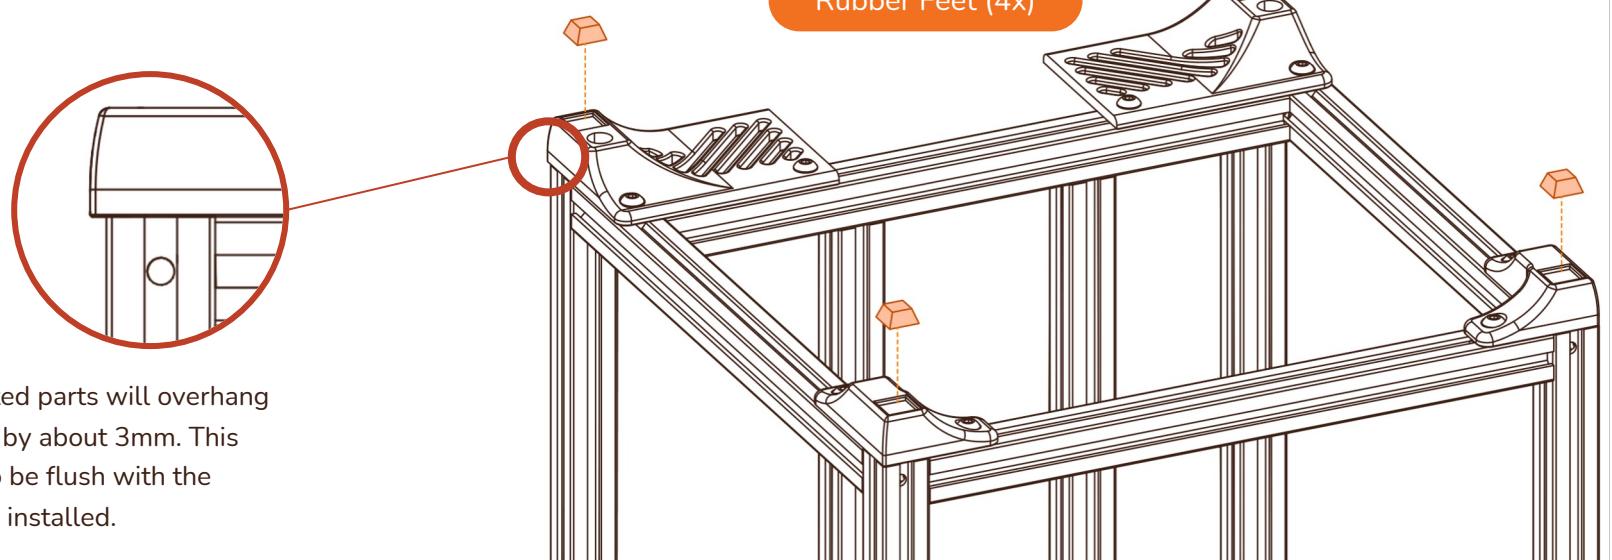


#### MIND THE GAP

The two rear printed parts will overhang the rear extrusion by about 3mm. This will allow them to be flush with the paneling once it is installed.

**Difficulty**

Easy

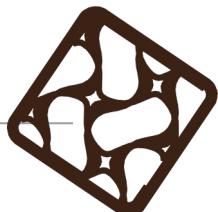**Tools Needed**

M3 Driver  
M5 Driver  
Small Phillips Screwdriver  
Heatset Insert Tool  
Soldering Iron (Not Included)

**Hardware Needed**


M3 Heatset Inserts (4x)  
M5 T-Nuts (2x)  
M3 T-Nuts (18x)  
M5x10 Button Head Cap Screw (2x)  
M3x8 Button Head Phillips Screw (10x)  
Interior Rear Panel (1x)

**Printed Parts Needed**

Panel Supports (2x)



**HIGH HEAT STRESSORS**

The included headset insert tool may not be compatible with your soldering iron. If not, using a tip that fits the middle of the M3 iron is an acceptable substitute. See [here](#) for more information.

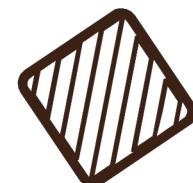




**COMPONENT PREP**


Many of the printed parts will use heatset threaded inserts. If you have never installed these, we recommend you watch the linked video.

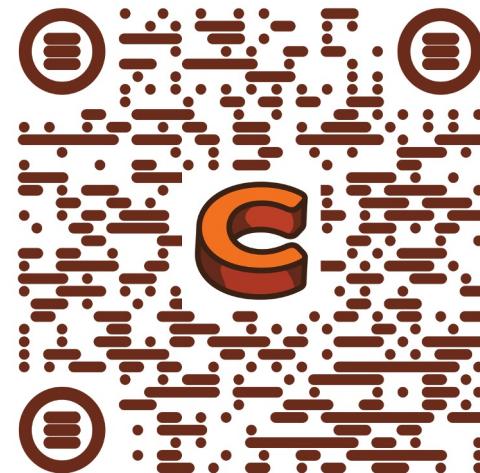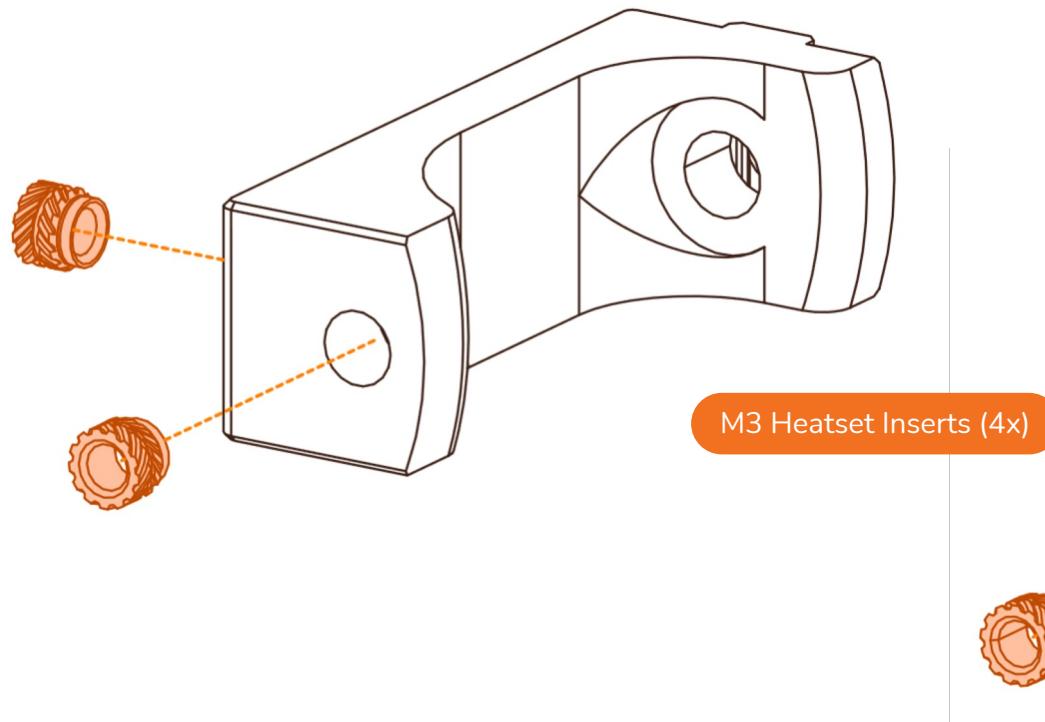

<https://www.youtube.com/shorts/C2rznI1uluc>

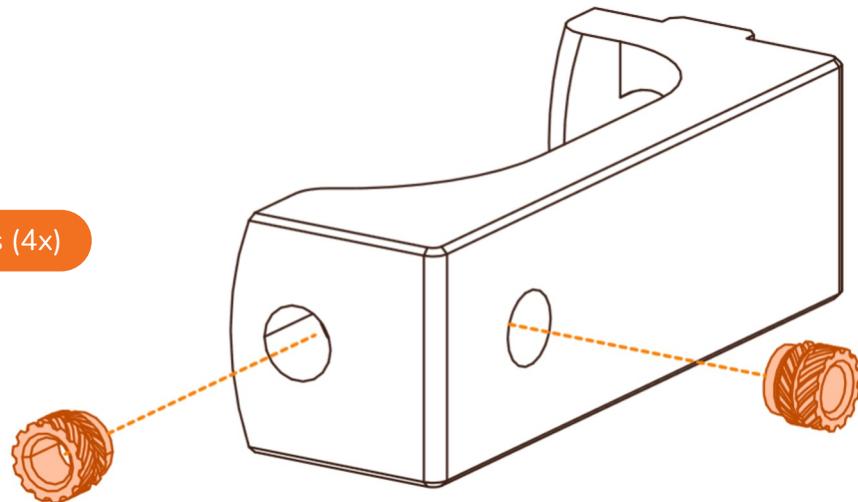

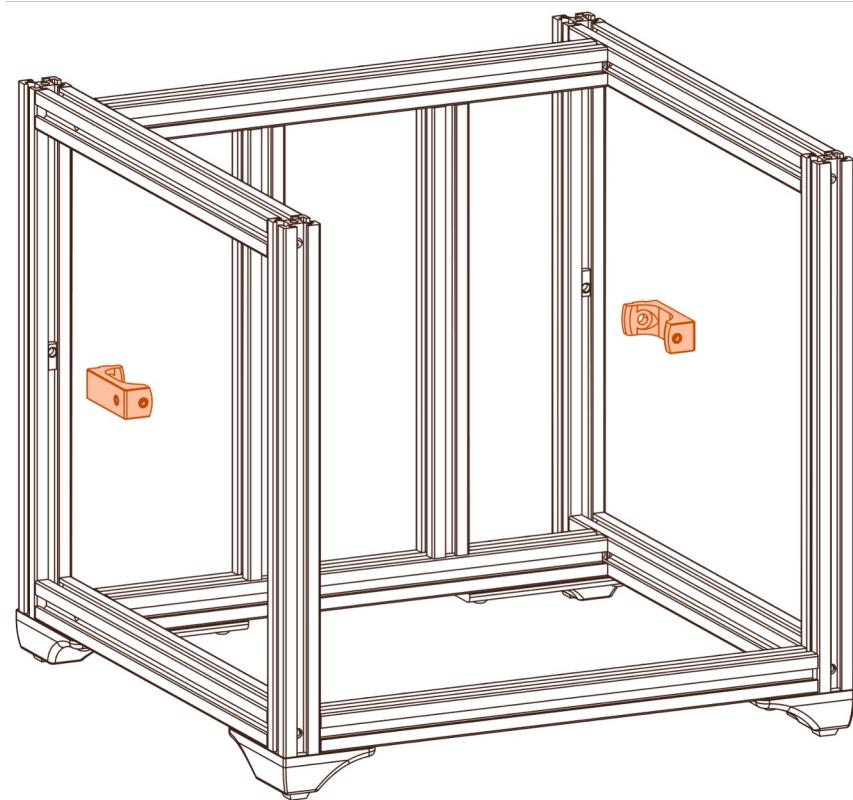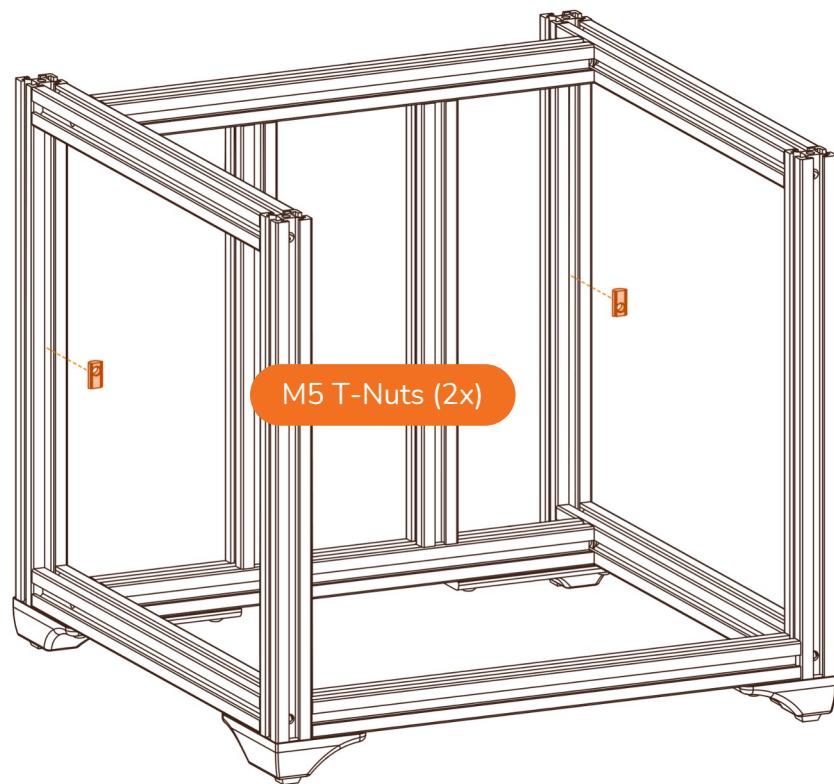


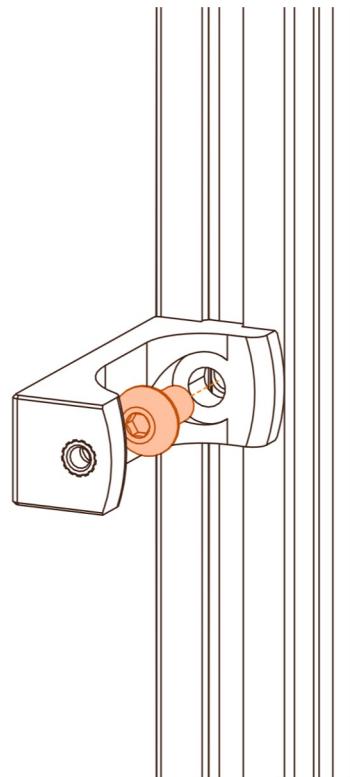

M5x10 BHCS (2x)


#### VERTICAL POSITIONING

We will align these supports with the mid panel at a later step. Their position at this time is not critical

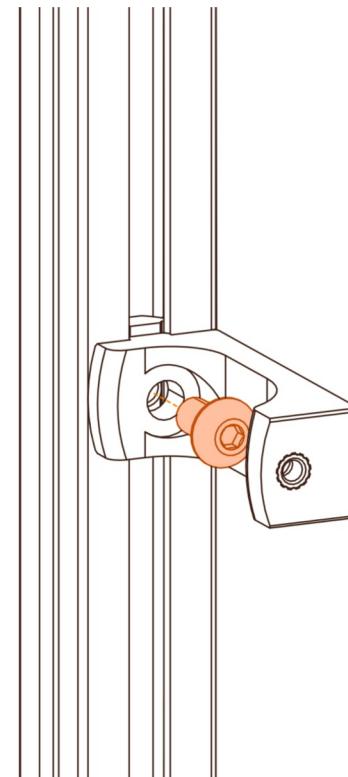


**GRAVITY IS YOUR FRIEND**



Laying the printer on its back may help with the installation of the T-Nuts.

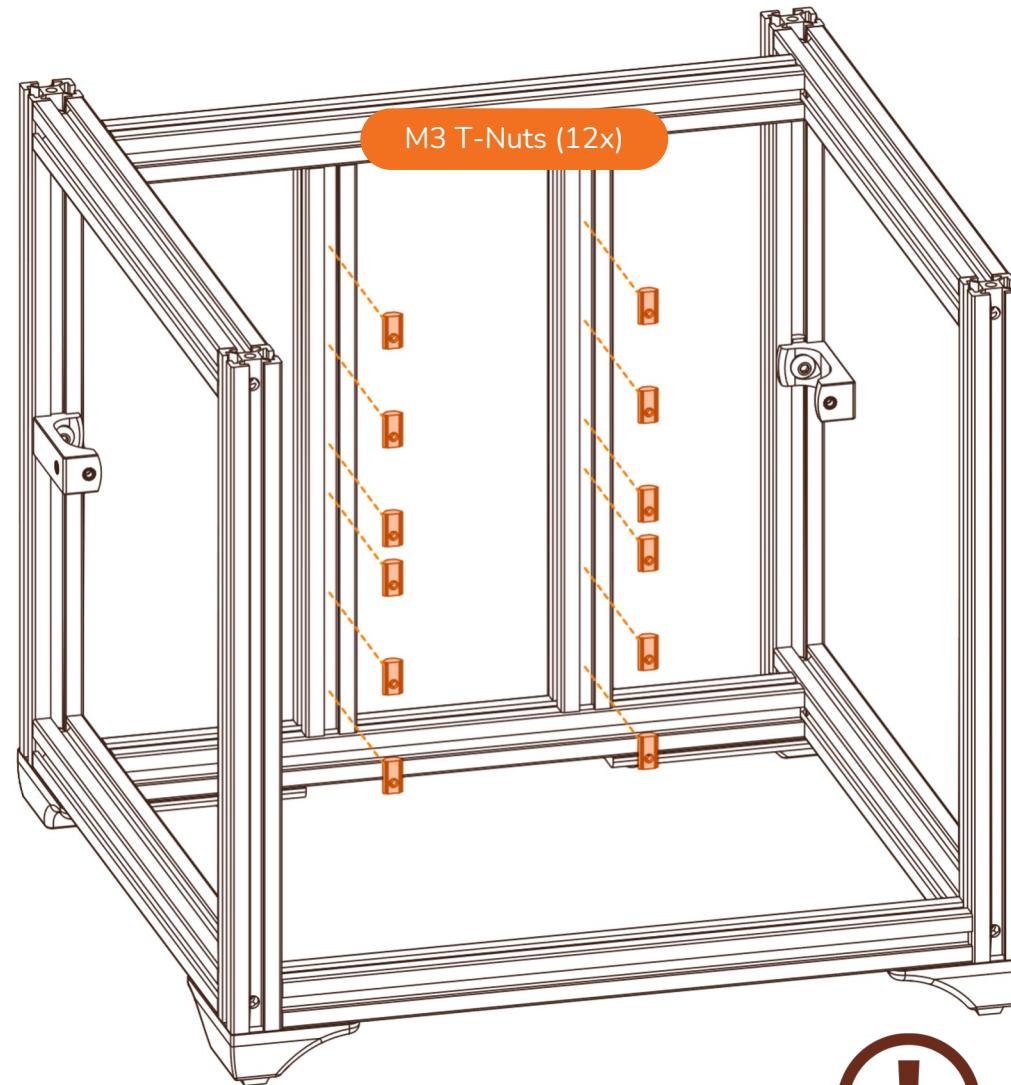**M3, WHO IS SHE?**

This is the first time we use M3 T-Nuts. Be sure to select the right type as otherwise there's a significant amount of disassembly to resolve.

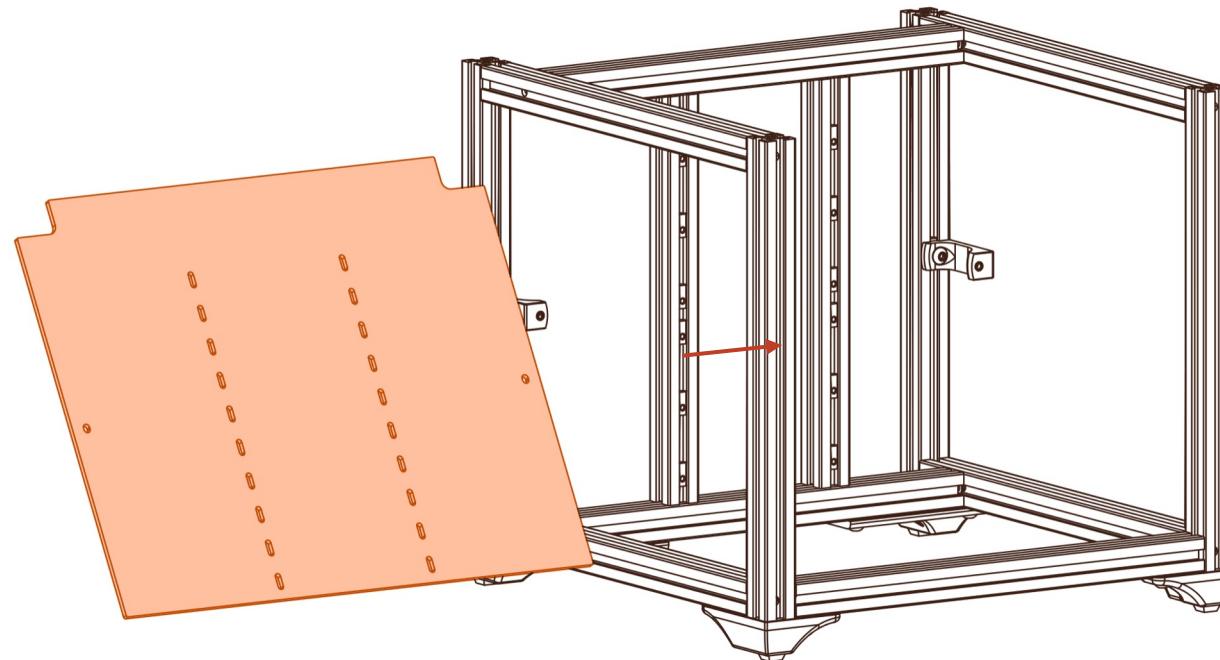**DON'T PAPER OVER THIS**

Remove the protective paper film from the acrylic before installation.

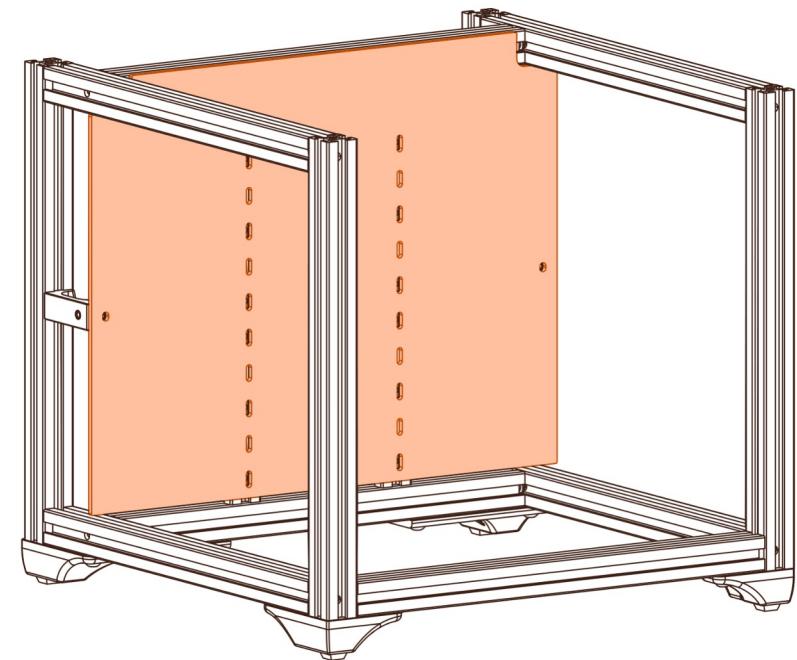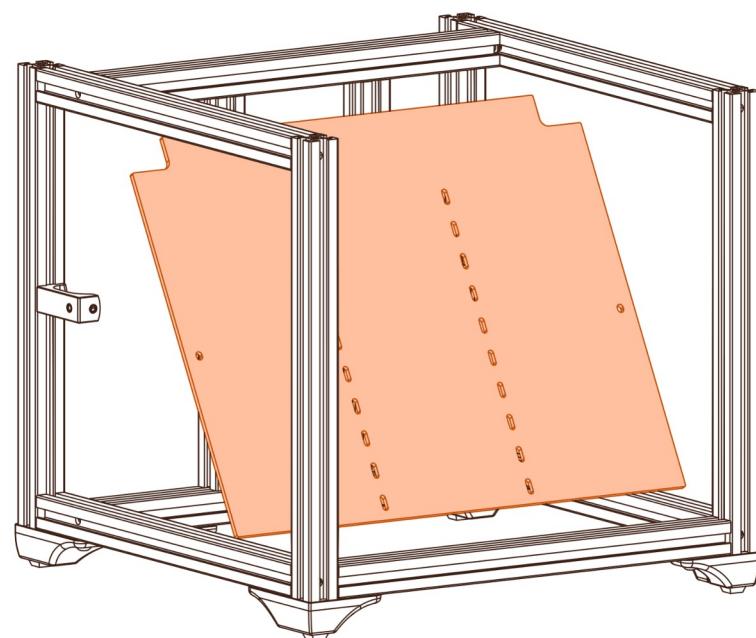


**THINKING AHEAD**

The M3 T-Nuts we installed two pages ago need to be aligned with the holes in this panel. Now is a good time to make sure they are positioned correctly so we can attach hardware to them later.

**PANEL ALIGNMENT**

The panel should be aligned all the way to the top. There will be a ~3mm gap between the bottom of the panel and the frame. This leaves room for the deck panel to be installed.


You can loosen the mid panel supports to adjust them up and down to align properly with the screw holes.

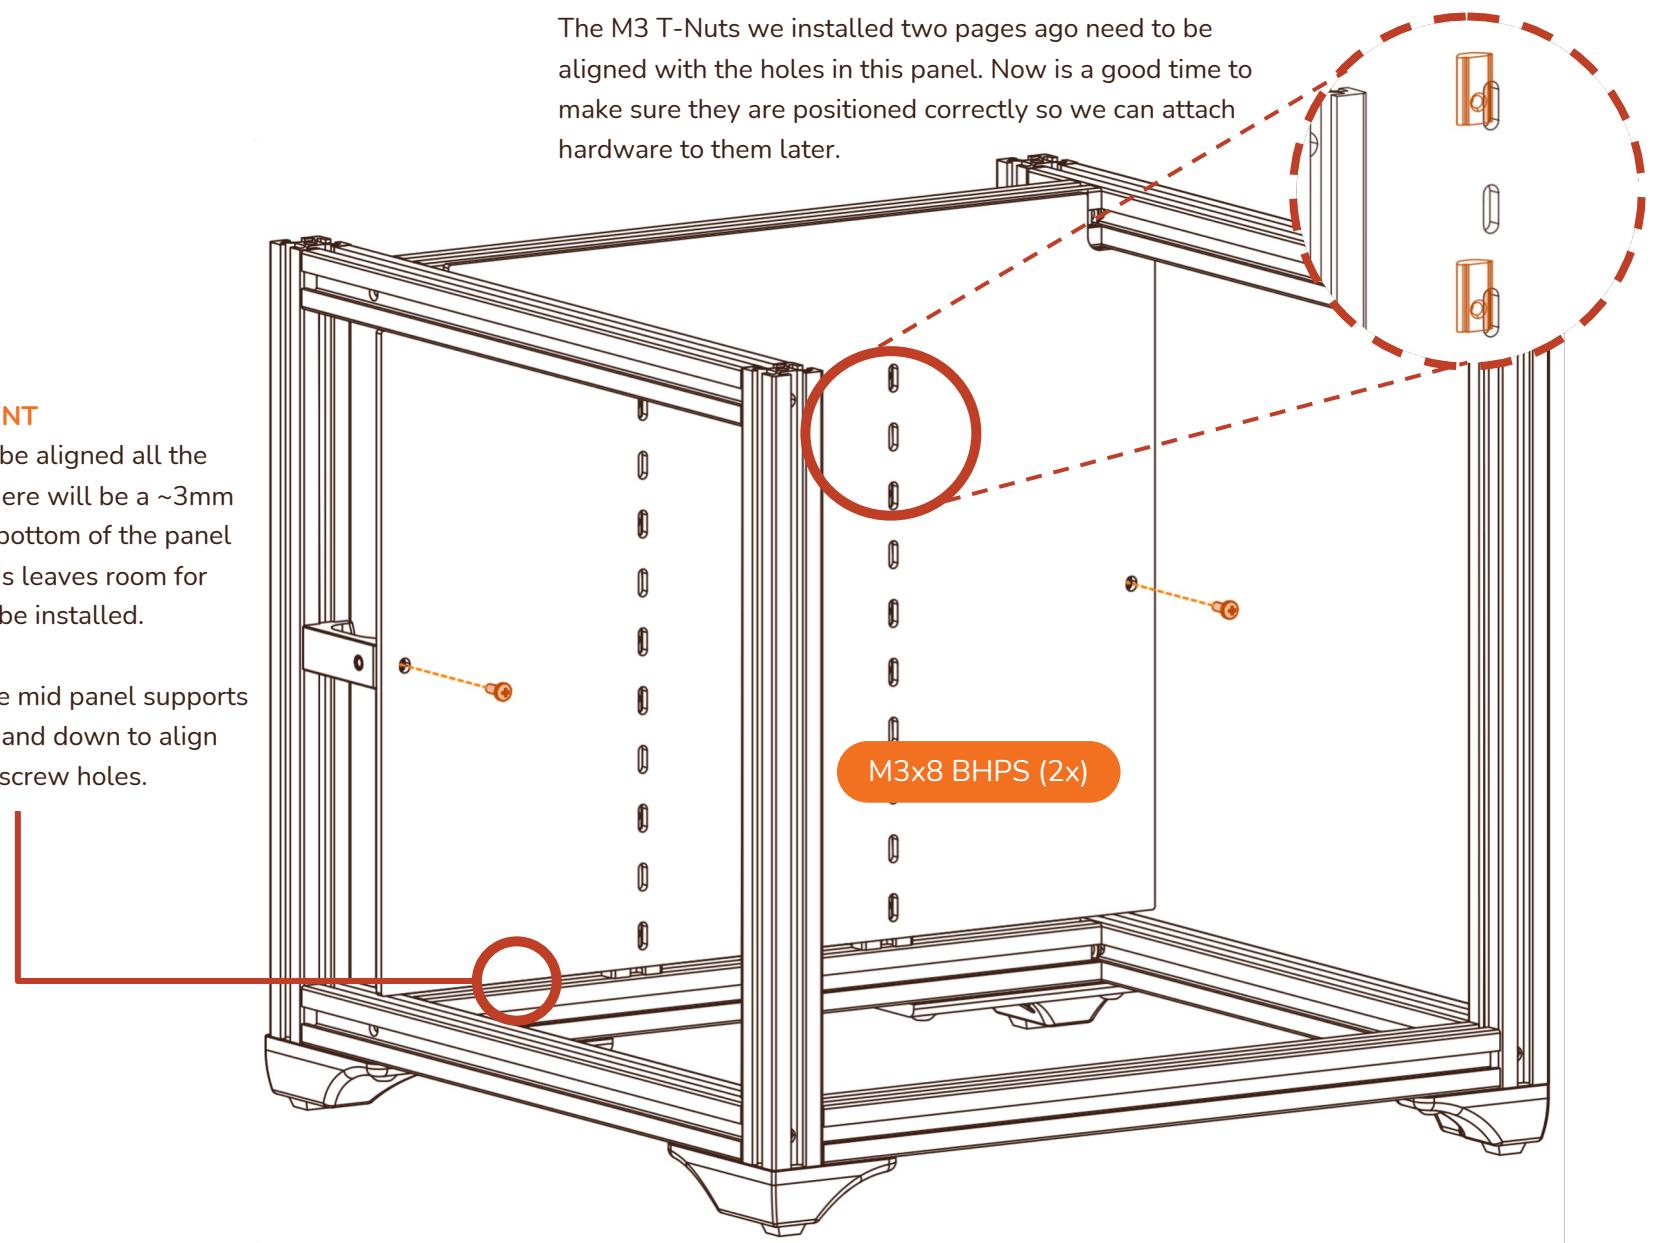



Difficulty

Easy

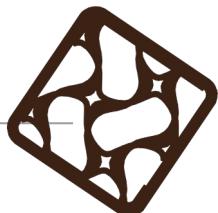

Tools Needed

M3 Driver  
M5 Driver


Hardware Needed


M5 T-Nuts (2x)  
M3x8 Socket Head Cap Screw (4x)  
M5x40 Socket Head Cap Screw (2x)  
Bottom Acrylic Panel (1x)

Printed Parts Needed

Z Motor Mount (1x)



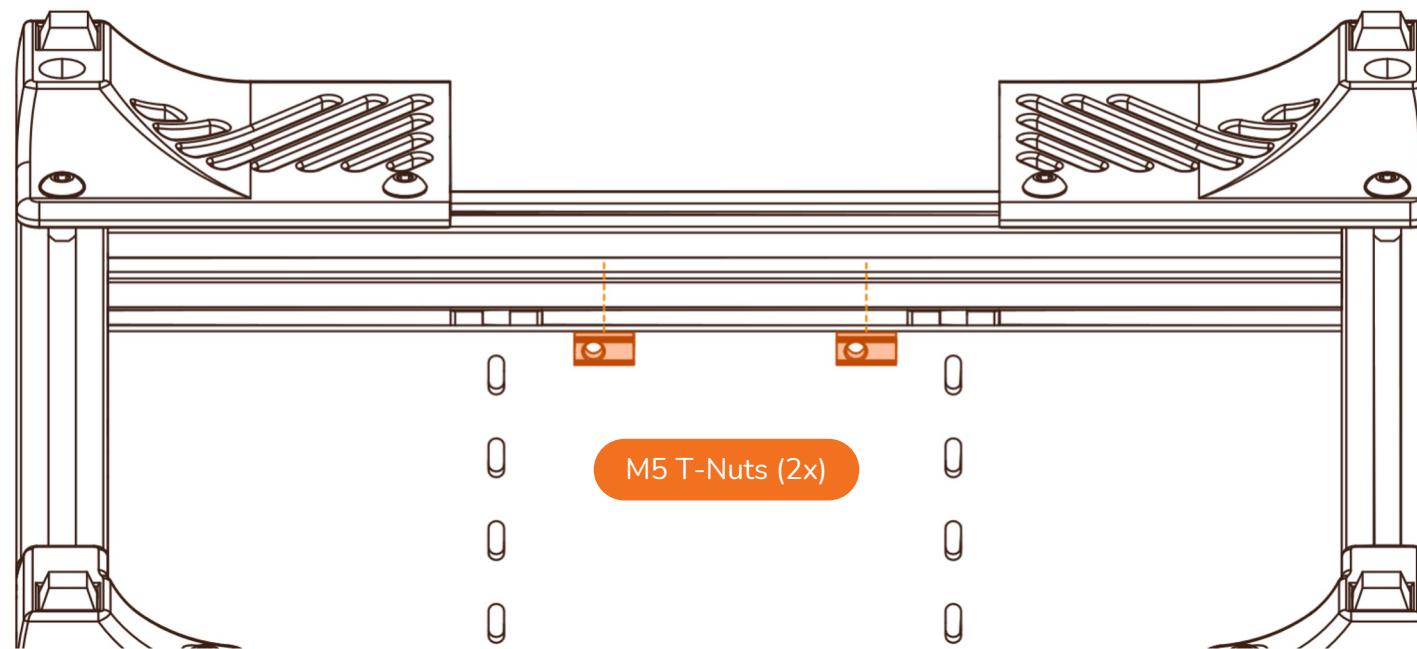

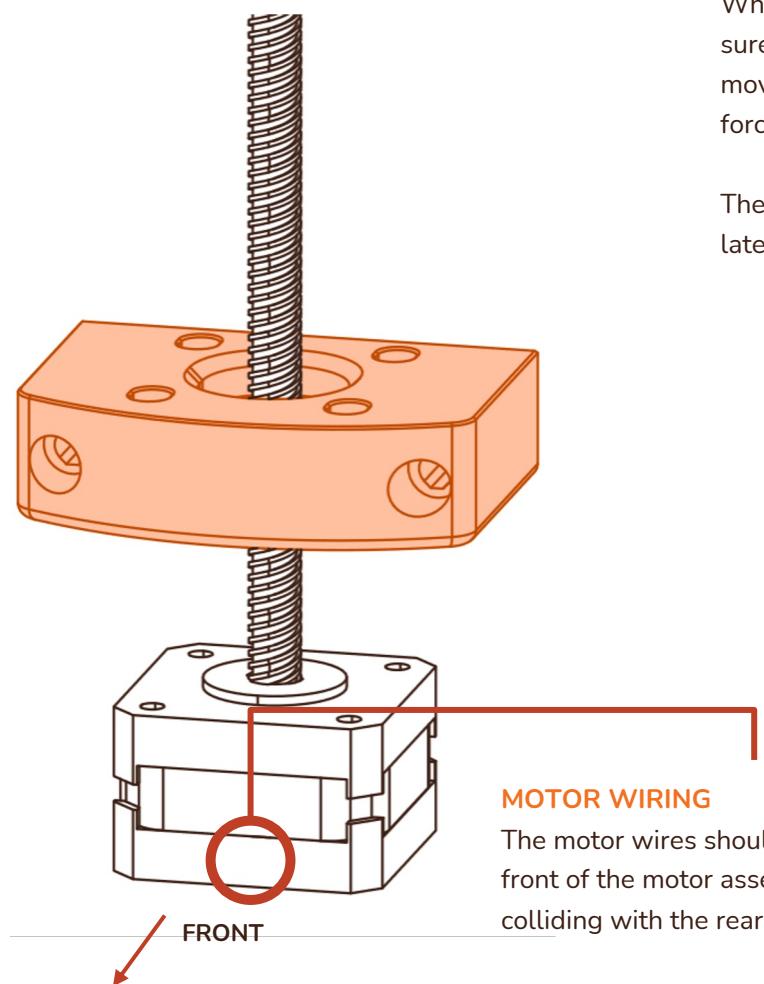

#### MOTOR WIRING


The motor wires should exit through the front of the motor assembly to avoid colliding with the rear wiring cover later.



#### DIAGONALS REACT


When tightening the M3x8 fasteners, be sure to tighten opposite sides and then moving over to ensure even distribution of forces on the motor.

These fasteners are in slotted holes for later adjustment should it be needed.

M3x8 SHCS (4x)

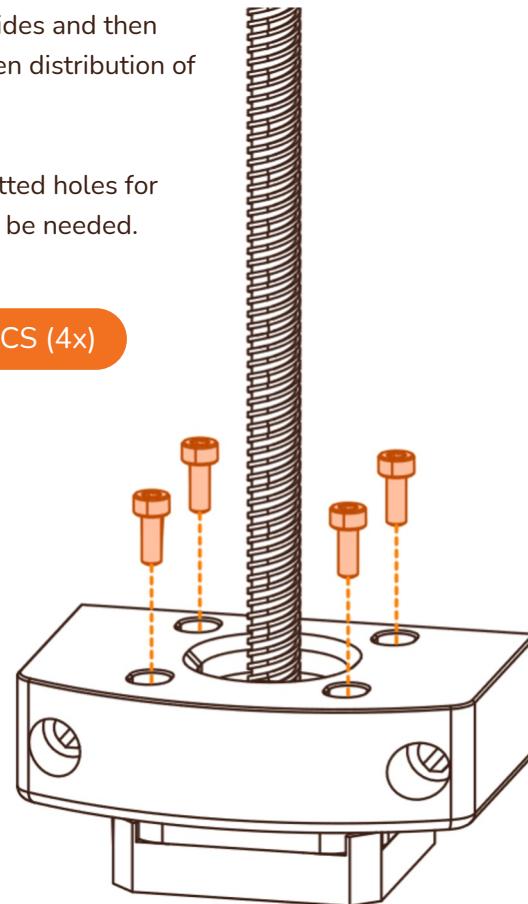

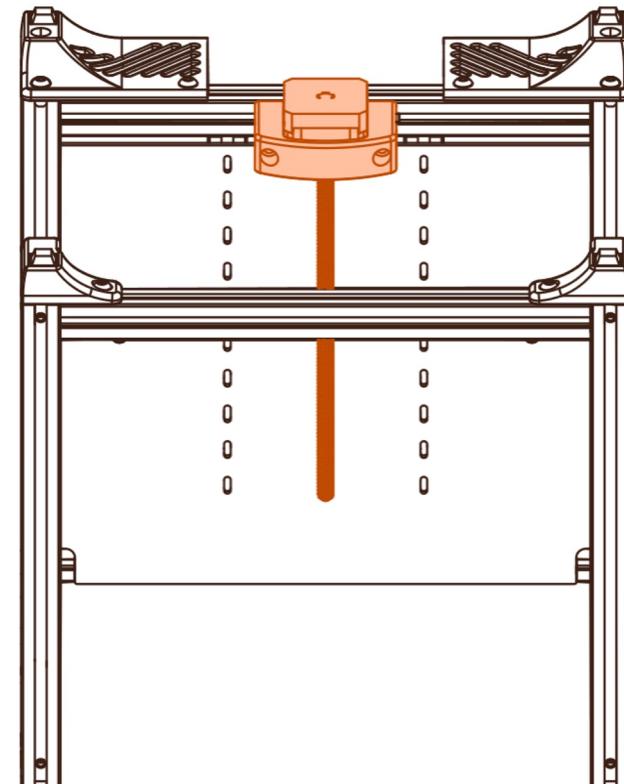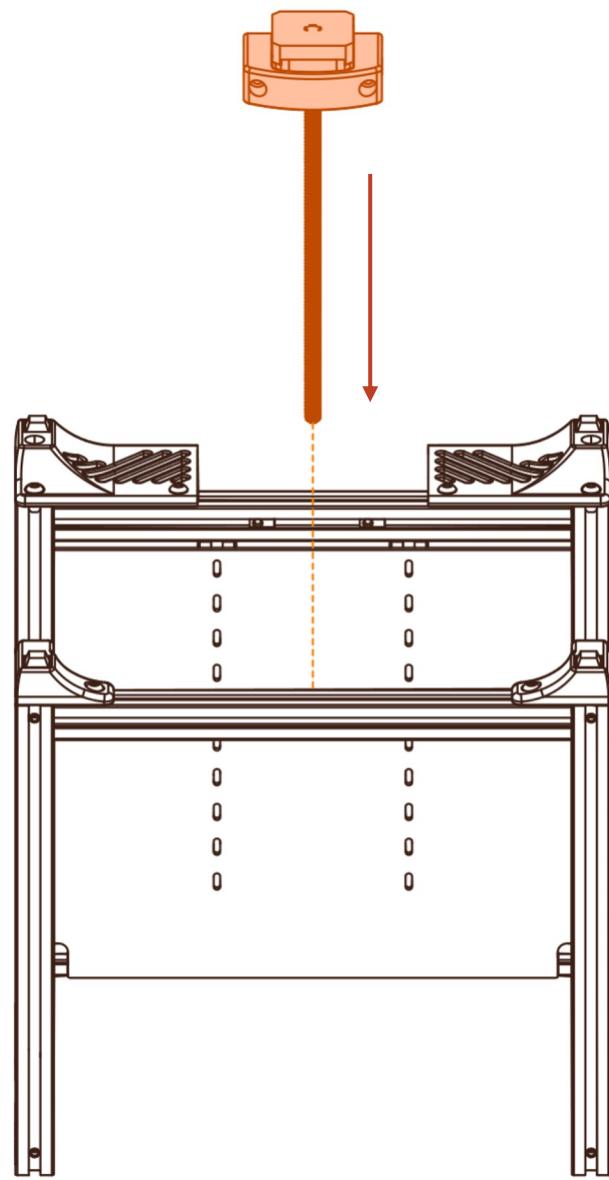

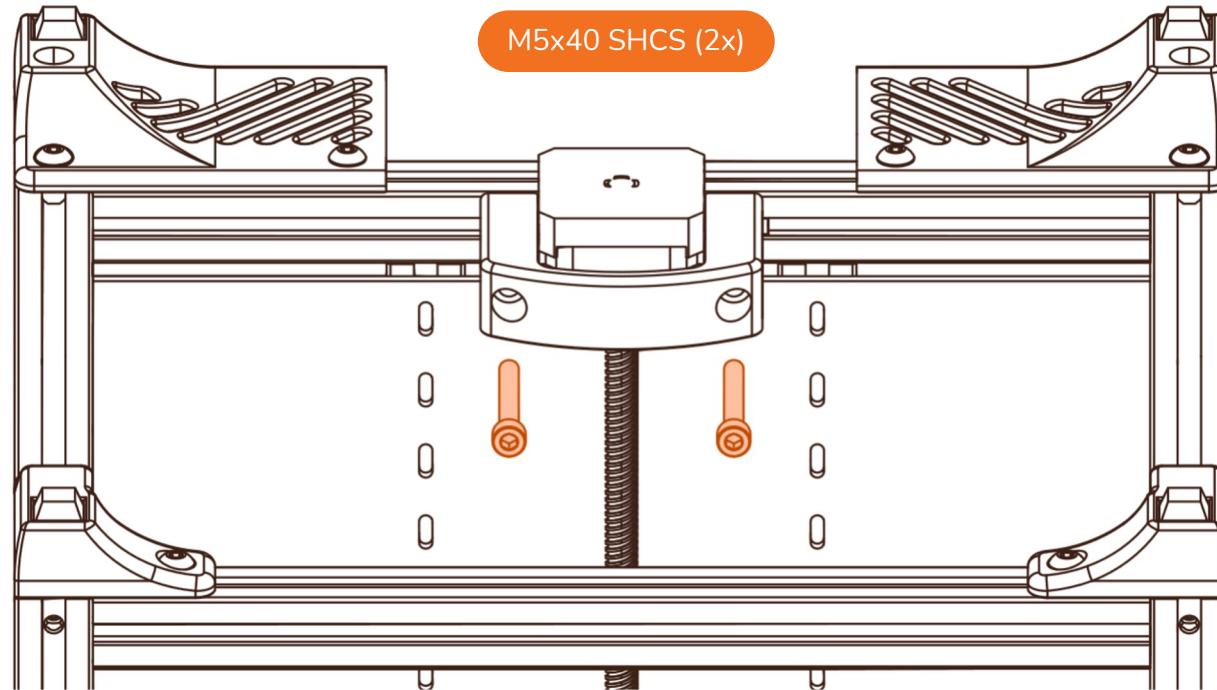

#### CENTER THE Z MOTOR


The Z motor should be positioned an equal distance from each side in order for proper bed alignment later on.



---

**Difficulty**Easy

---

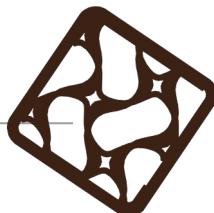**Tools Needed**M3 Driver  
Small Phillips Screwdriver


---


**Hardware Needed**M3 Button Head Phillips Screw (6x)  
M3 T-Nuts (6x)


---

**Printed Parts Needed**

None

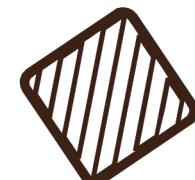


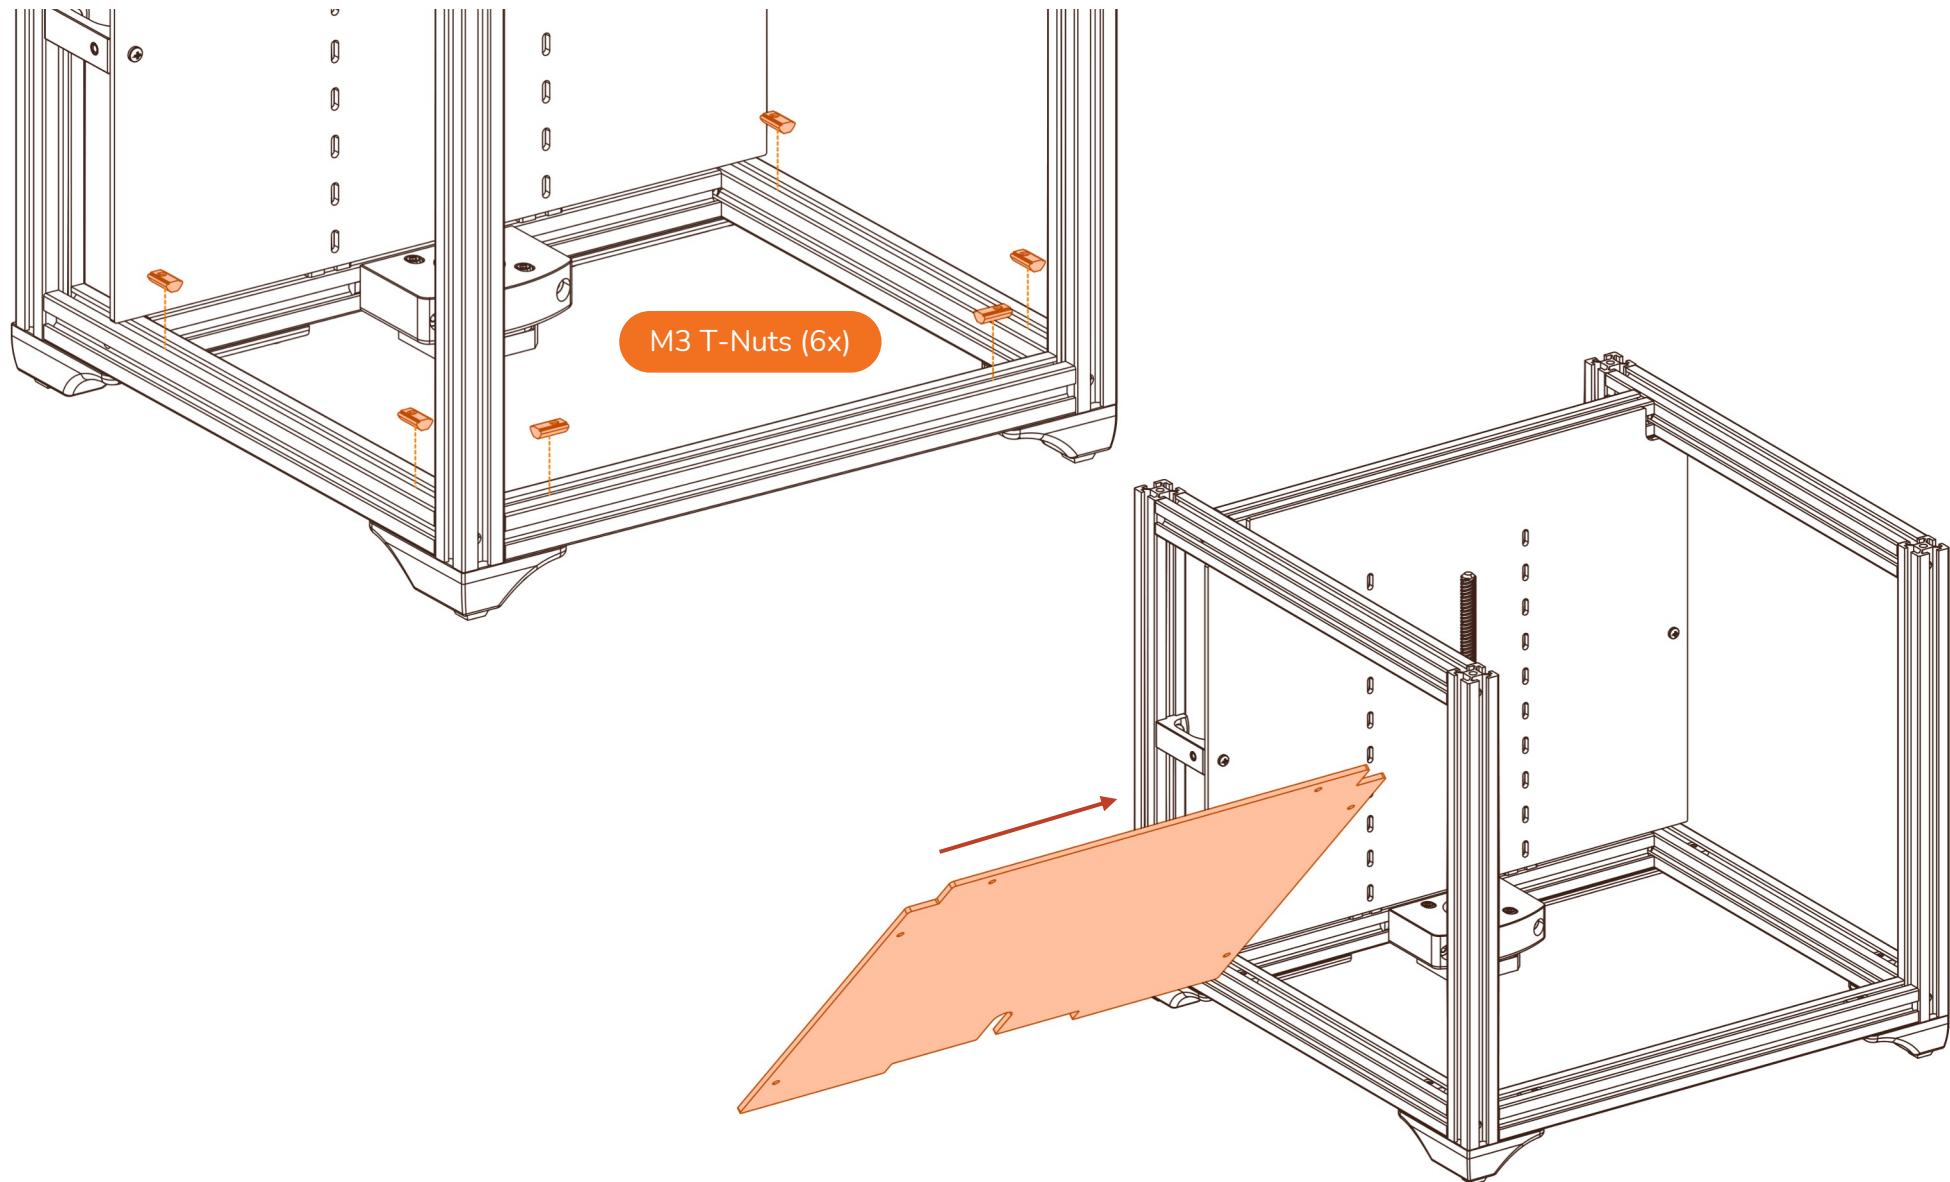


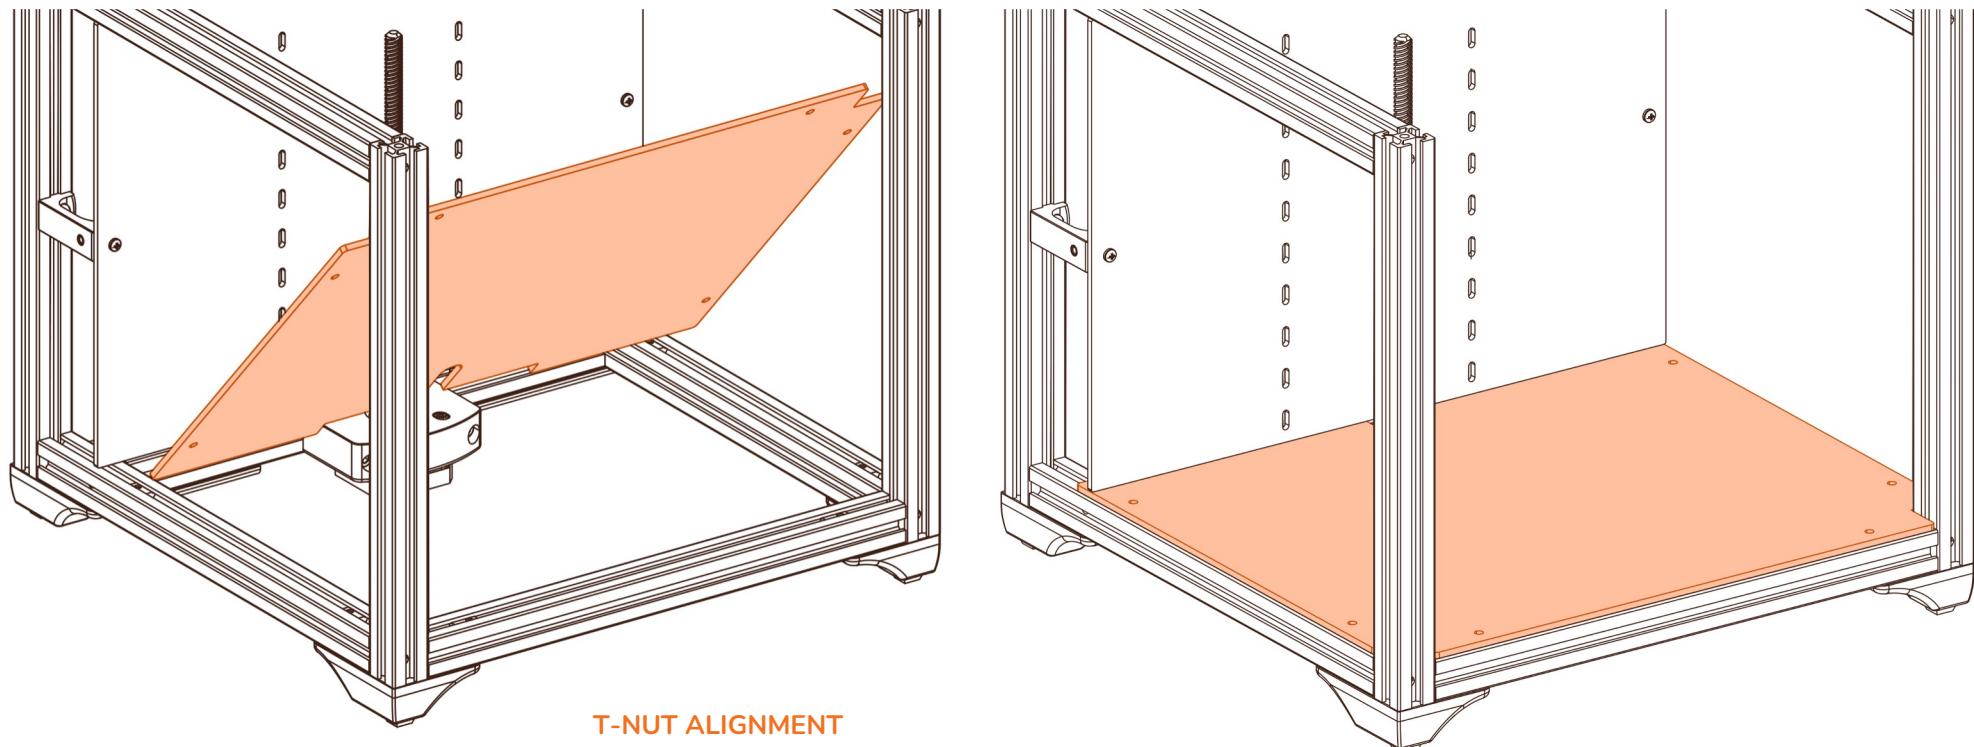

#### T-NUT ALIGNMENT

The T-Nuts we installed need to be aligned with the holes in this panel. Holding the edge of the panel up to the extrusion can make ensuring the correct spacing for the T-nuts easier.

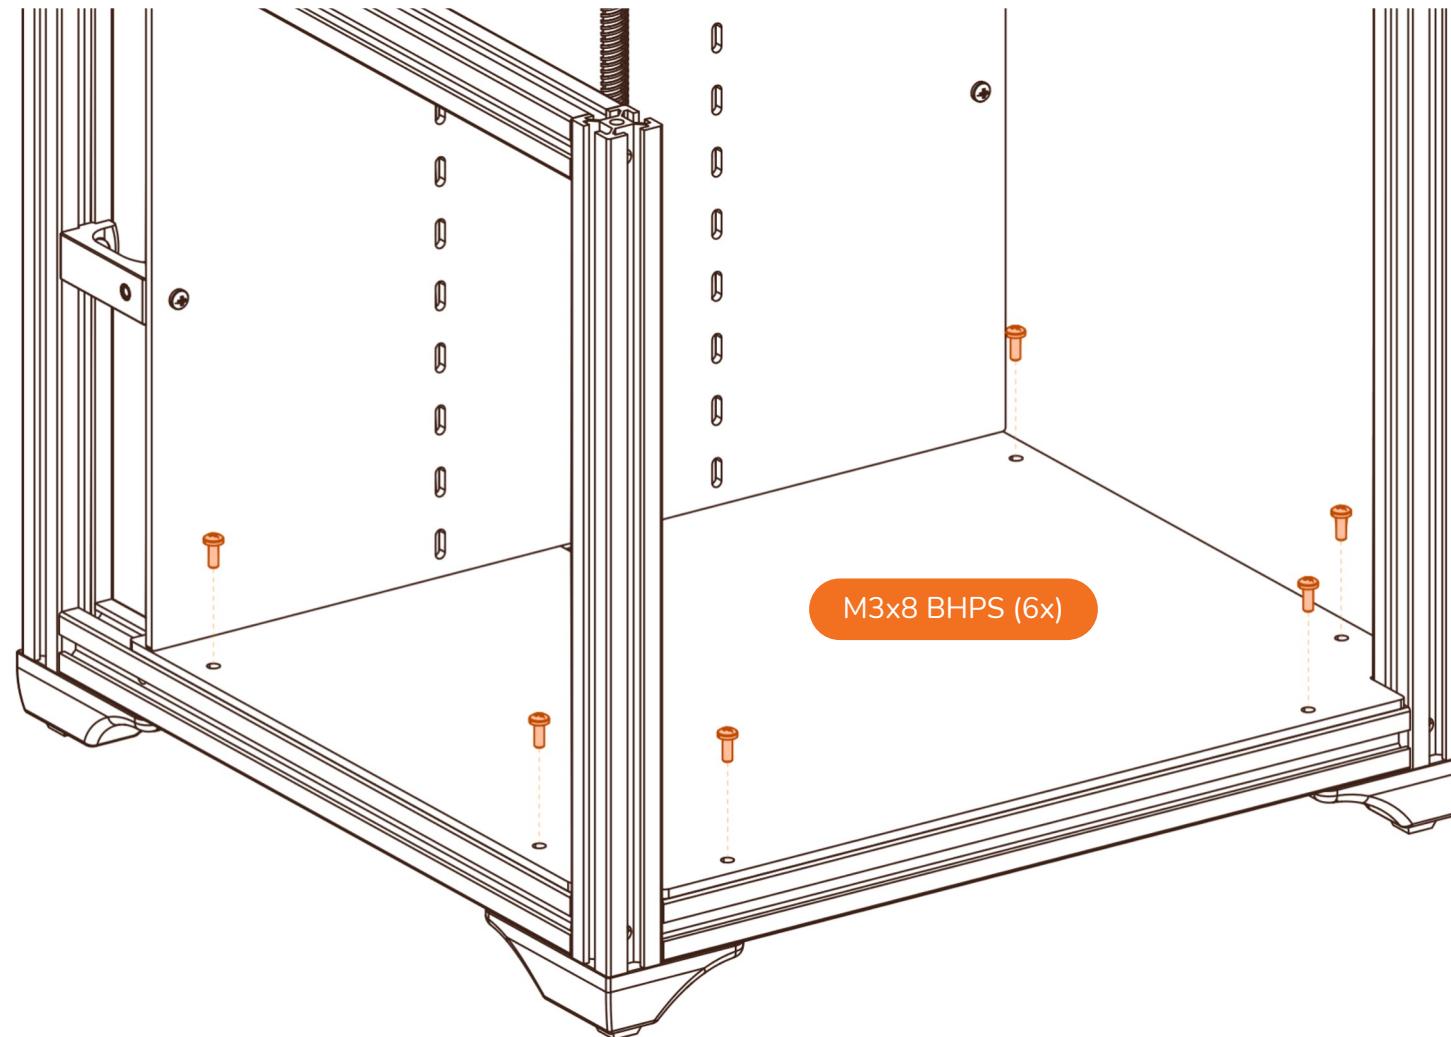


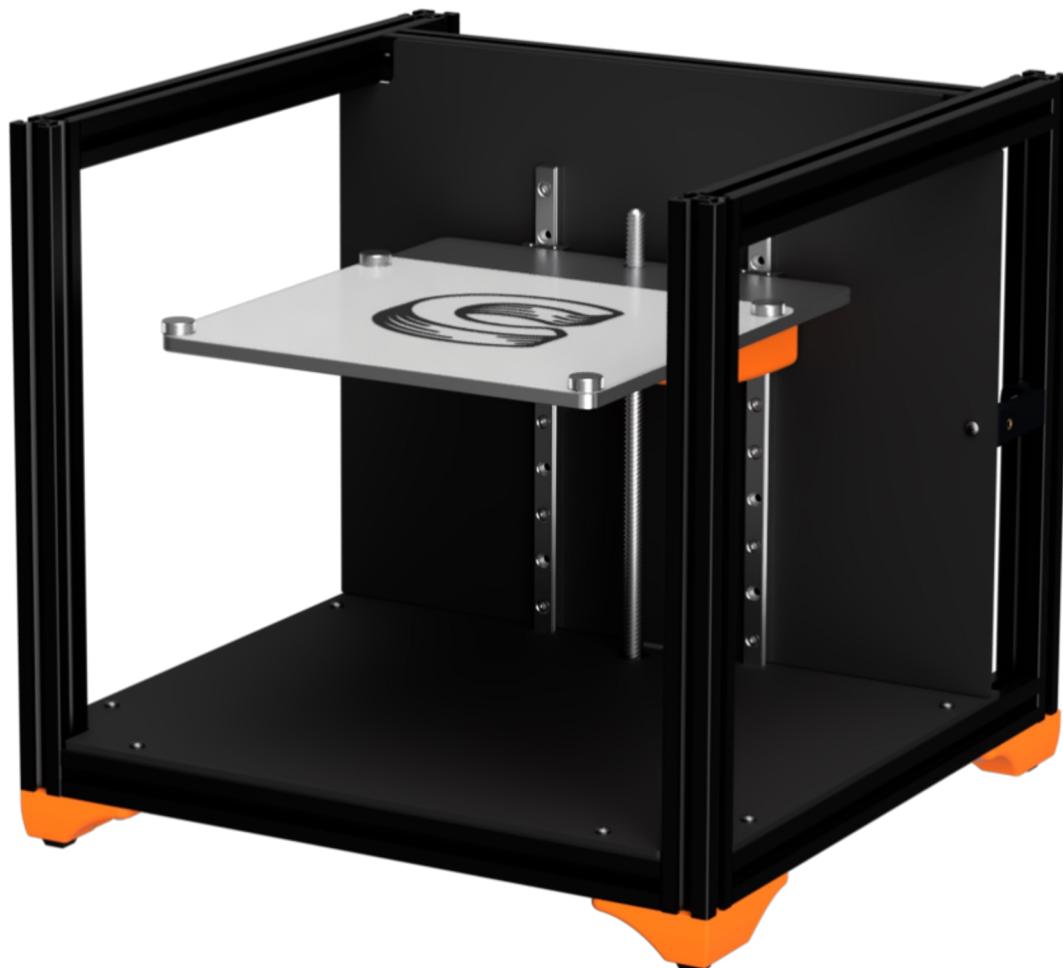



Difficulty

Medium

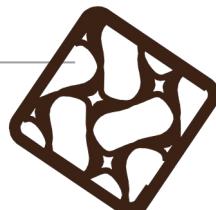

Tools Needed


M3 Driver  
M5 Driver


Hardware Needed

M3x10 Socket Head Cap Screw (12x)  
M3x40 Socket Head Cap Screw (8x)  
Anti-Backlash Leadscrew Nut  
(Top+Bottom+Spring, 1x)  
Aluminum Bed (1x)  
M5x30 Socket Head Cap Screw (4x)  
M3x8 Socket Head Cap Screw (2x)  
M4 Thumbscrews (4x)

Printed Parts Needed

Z Carriage Block Left (1x)  
Z Carriage Block Right (1x)

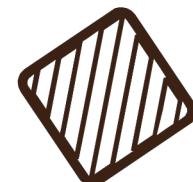

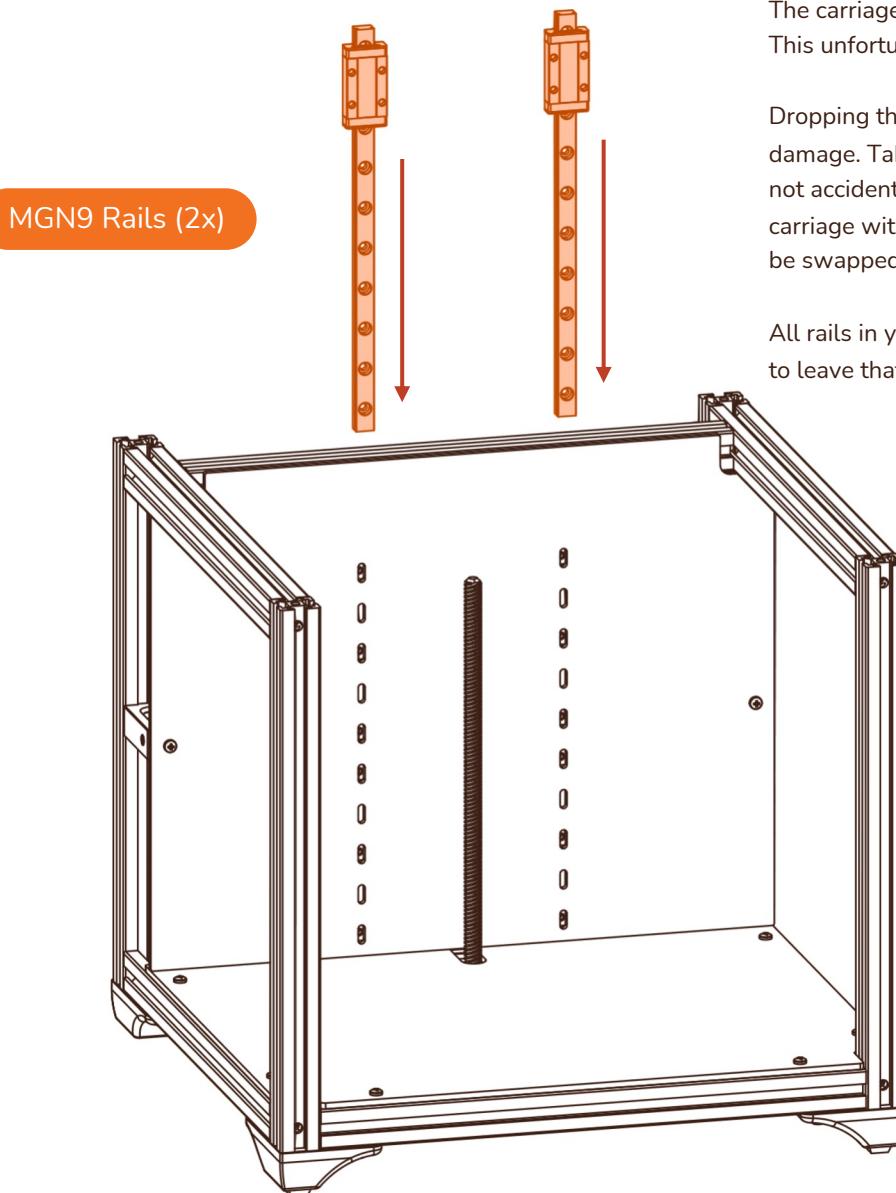

MGN9 Rails (2x)


#### MIND THE CARRIAGES

The carriages are designed to slide along the rail easily. This unfortunately also includes sliding off the rails.

Dropping the carriage will likely result in irreparable damage. Take extra care to ensure that the carriages do not accidentally slide completely off the rails. Keep each carriage with its respective rail, as they are not meant to be swapped.


All rails in your kit are the same except for one. Be sure to leave that one for the Toolhead Assembly.


M3x10 SHCS (12x)

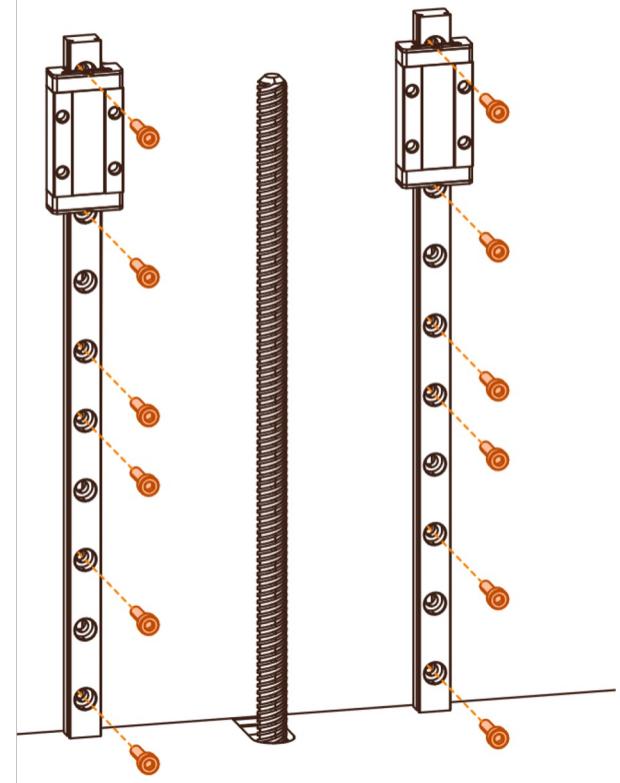

**FLAT AS FLATLAND**

These printed parts need to be as flat as possible on the top surface that the bed plate rests on. Failure to have a flat bed plate can and will result in warping and distortion when attempting to calibrate the printer.

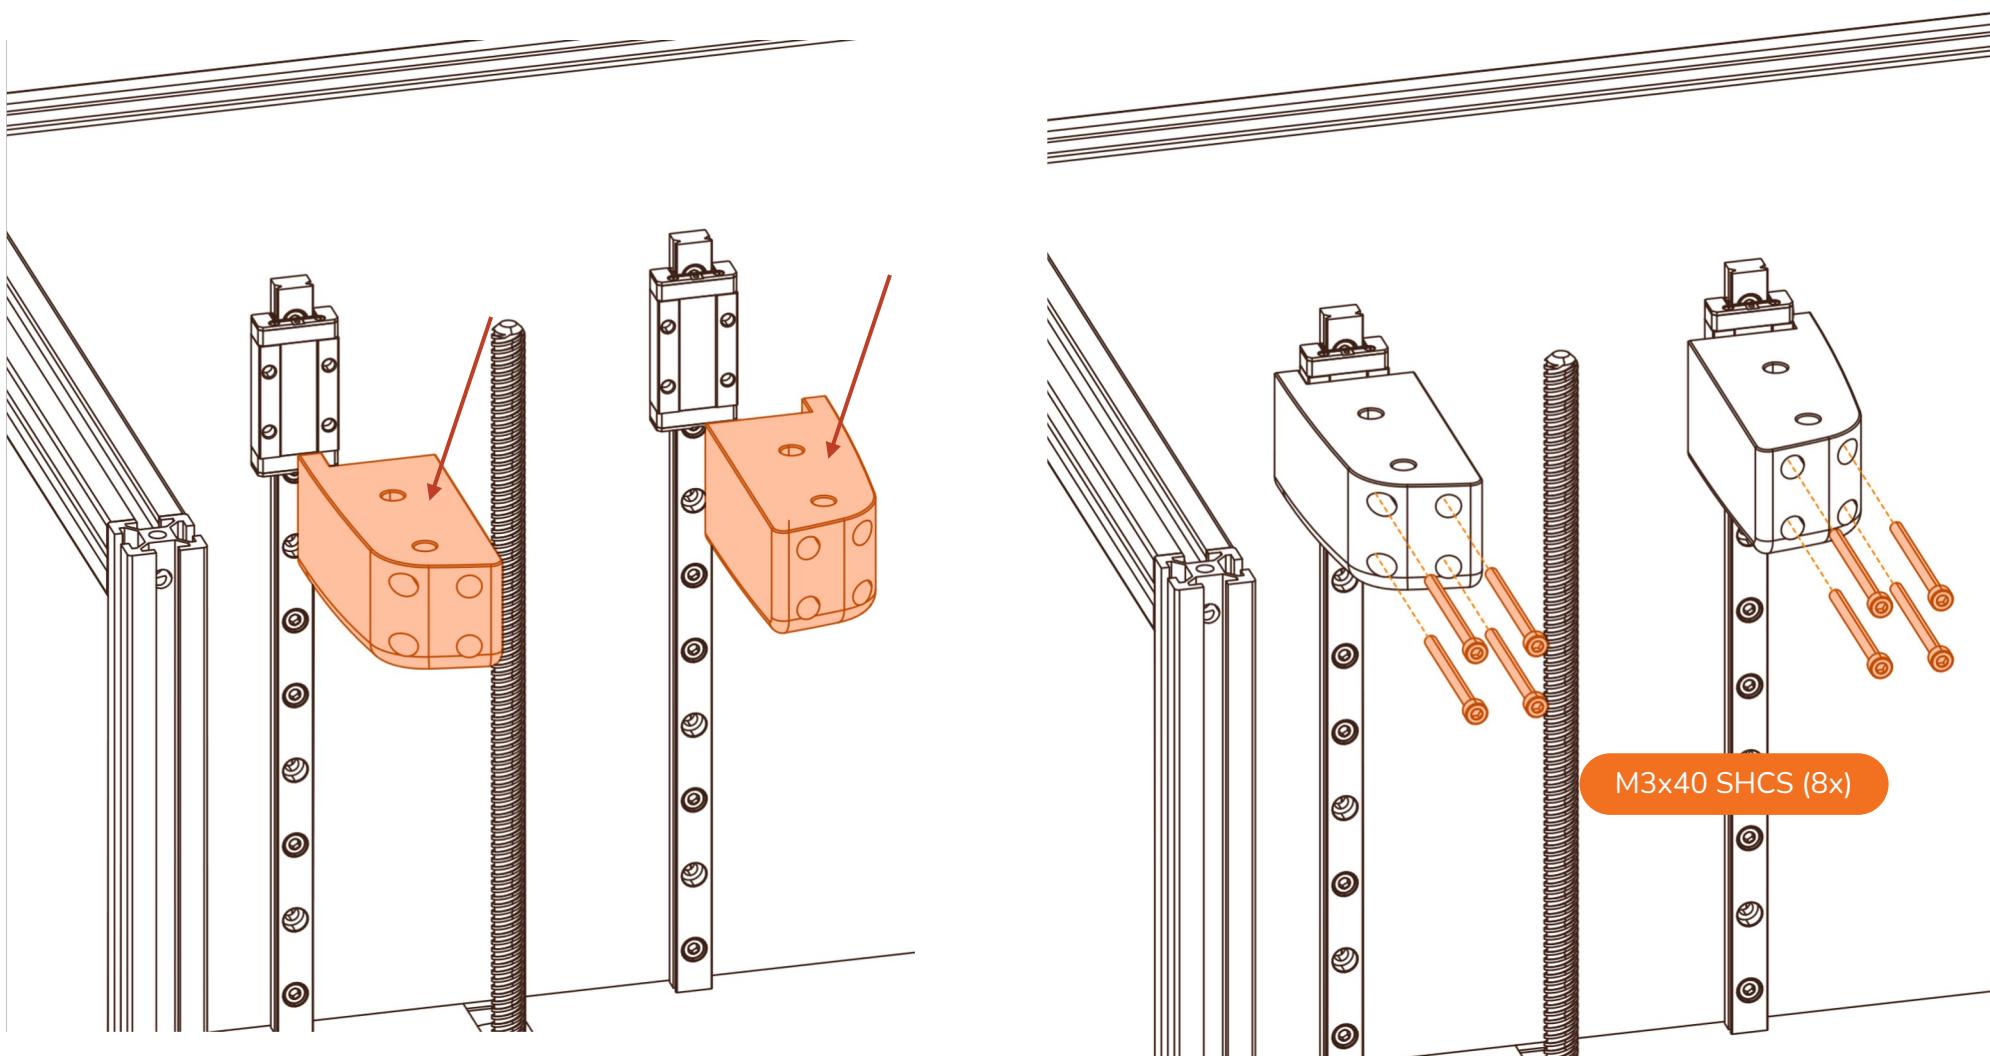


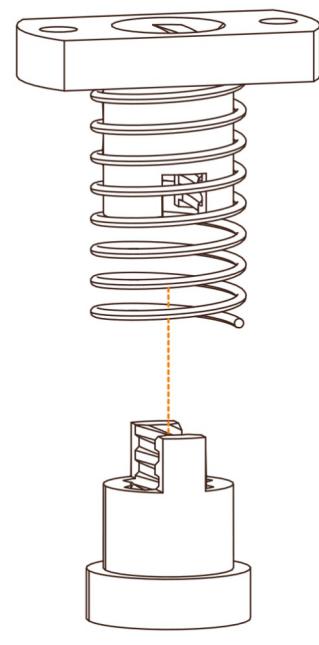


#### ANTI-BACKLASH


The anti-backlash nut works by applying constant pressure on the leadscrew threads. In order for it to function correctly, it must be compressed and then loaded onto the lead crew such that the two pieces cannot spin independently.

Refer to the linked video for assembly.

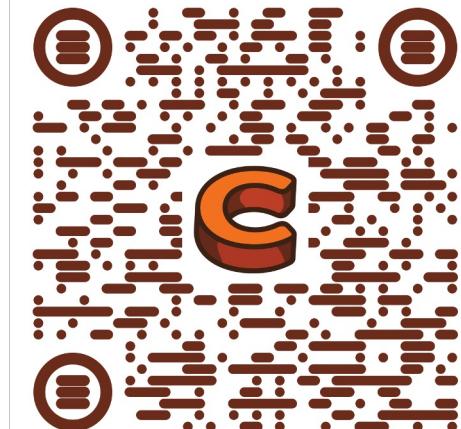



<https://www.youtube.com/shorts/Y4ScC2dLILY>

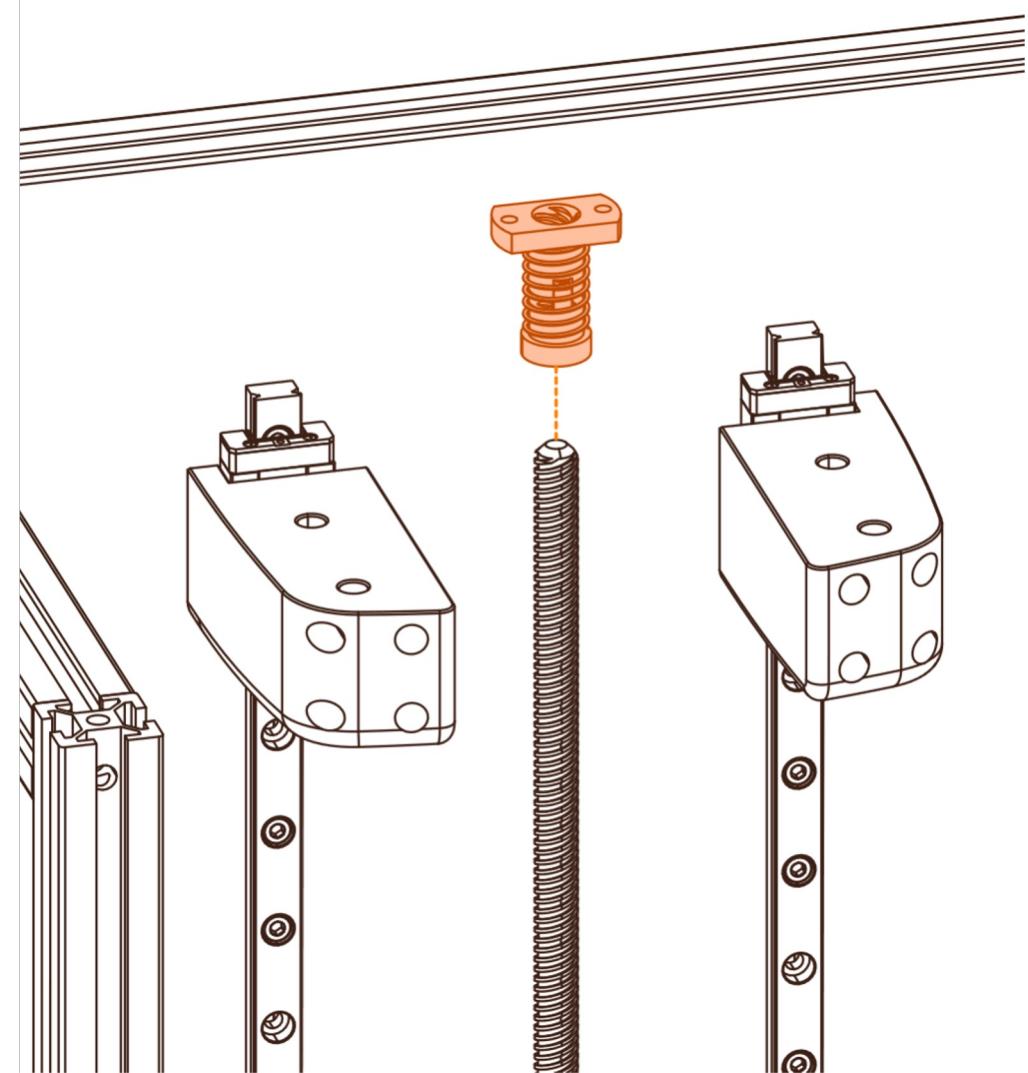

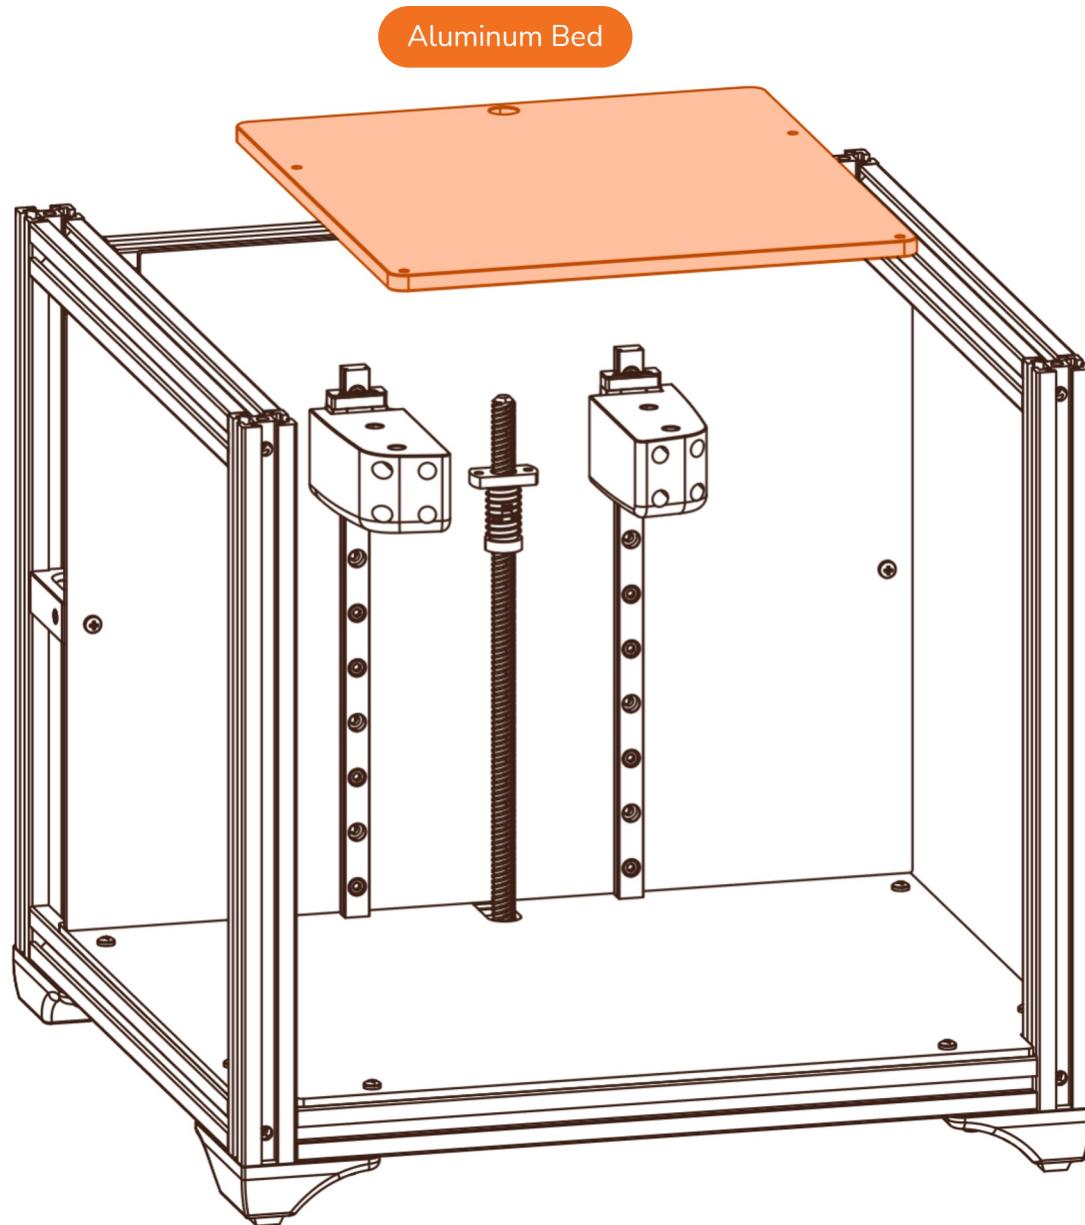

**STAY IN THE MIDDLE**



Looking at the Z axis leadscrew, check that the hole in the bed plate is centered on the leadscrew. If not, you'll need to follow the steps on the next page.

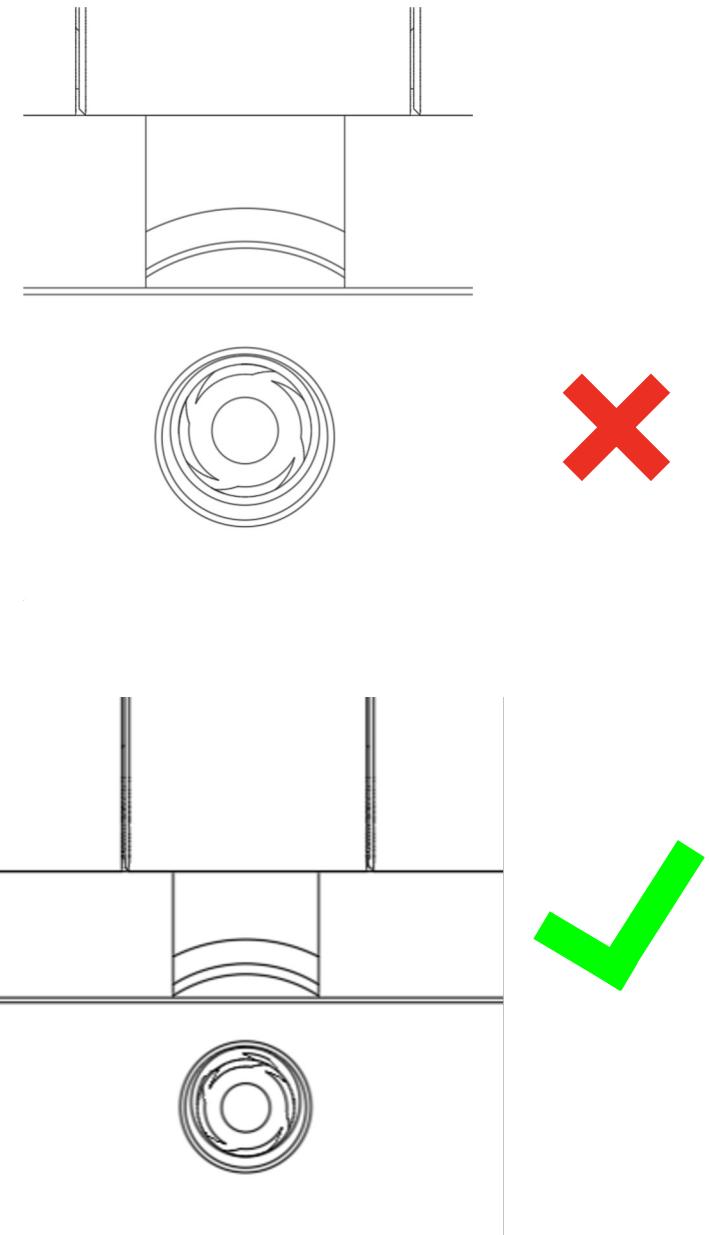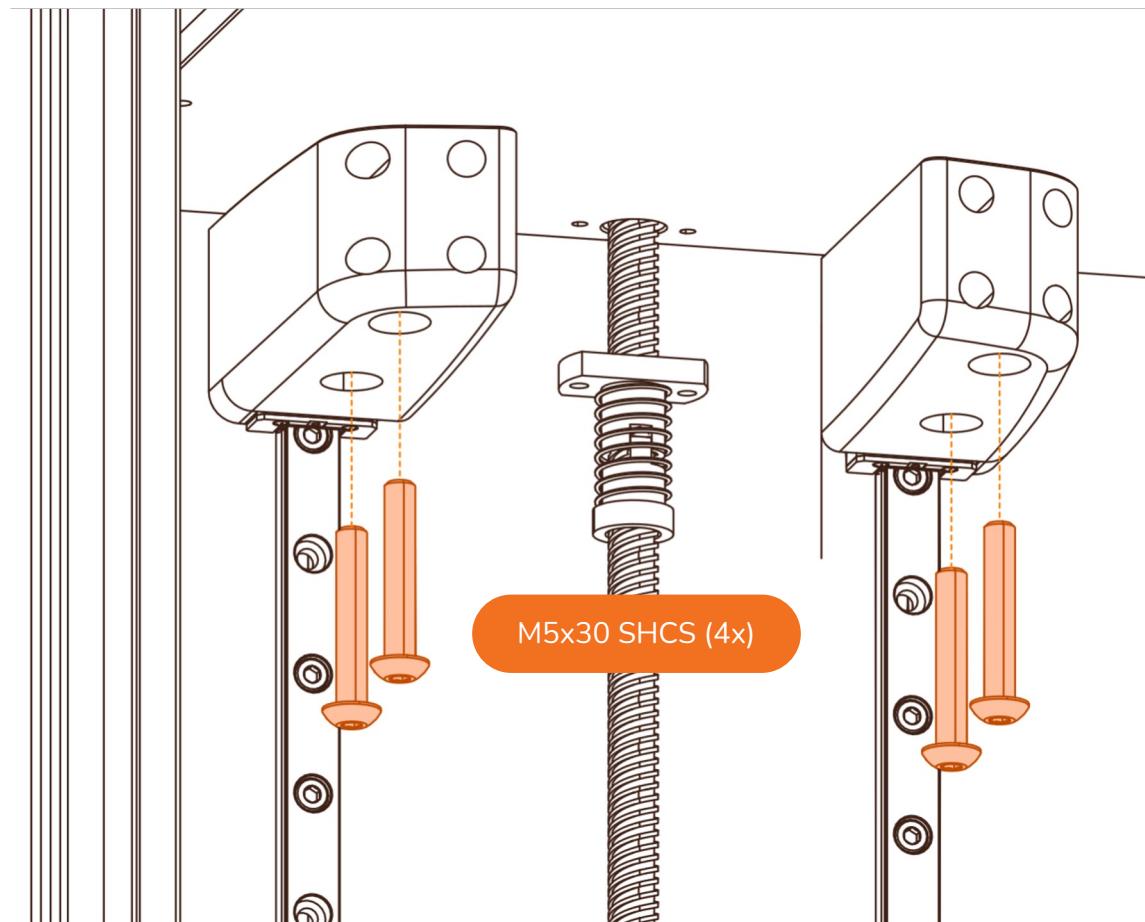


**KEEP IT STEADY**

To align your Z Axis Leadscrew, remove the M5 screws holding the motor and bracket in place. Remove the motor + leadscrew assembly. Then, adjust the slotted M3 screws on the bracket, and re-attach such that the bed is aligned correctly.

**This may take multiple tries to get correct.**

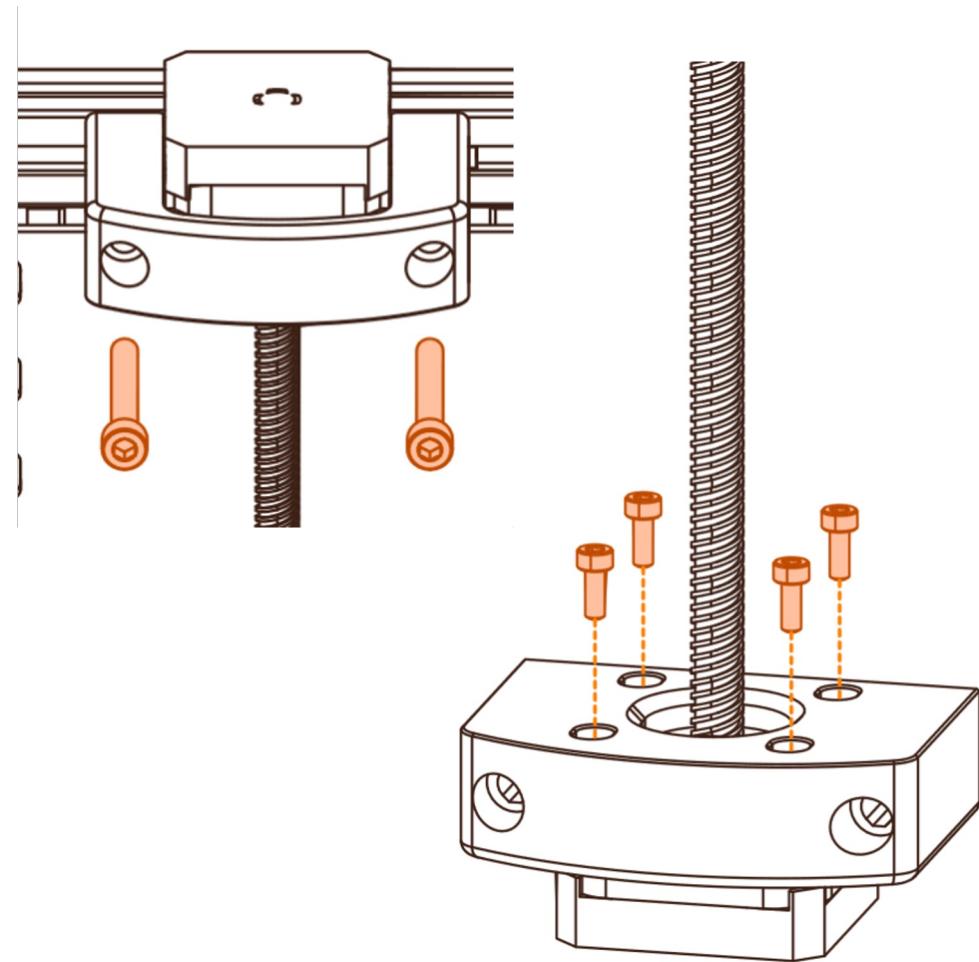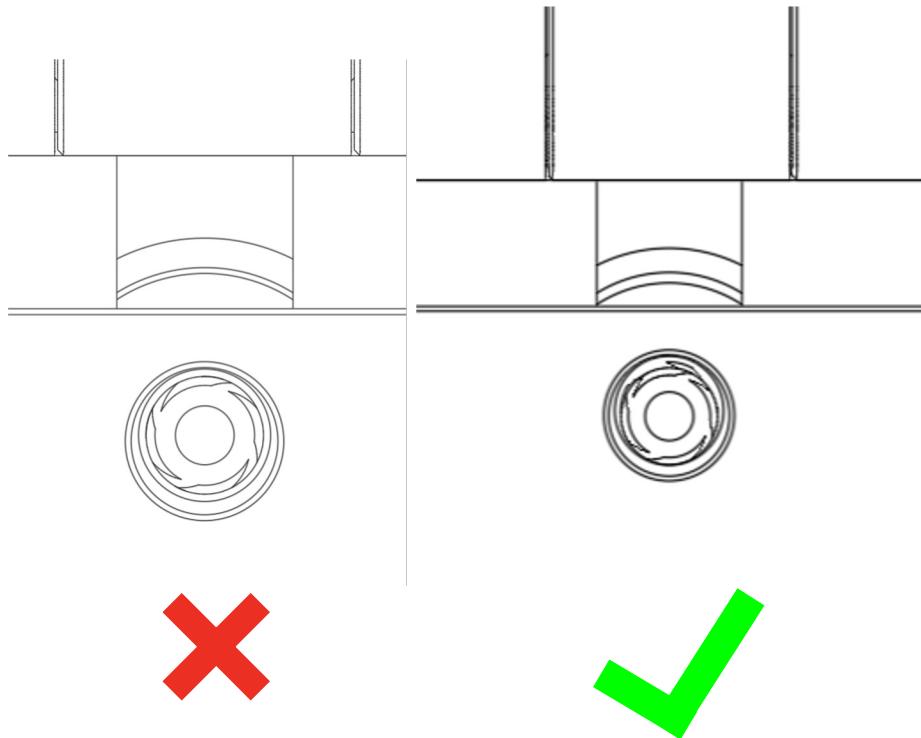


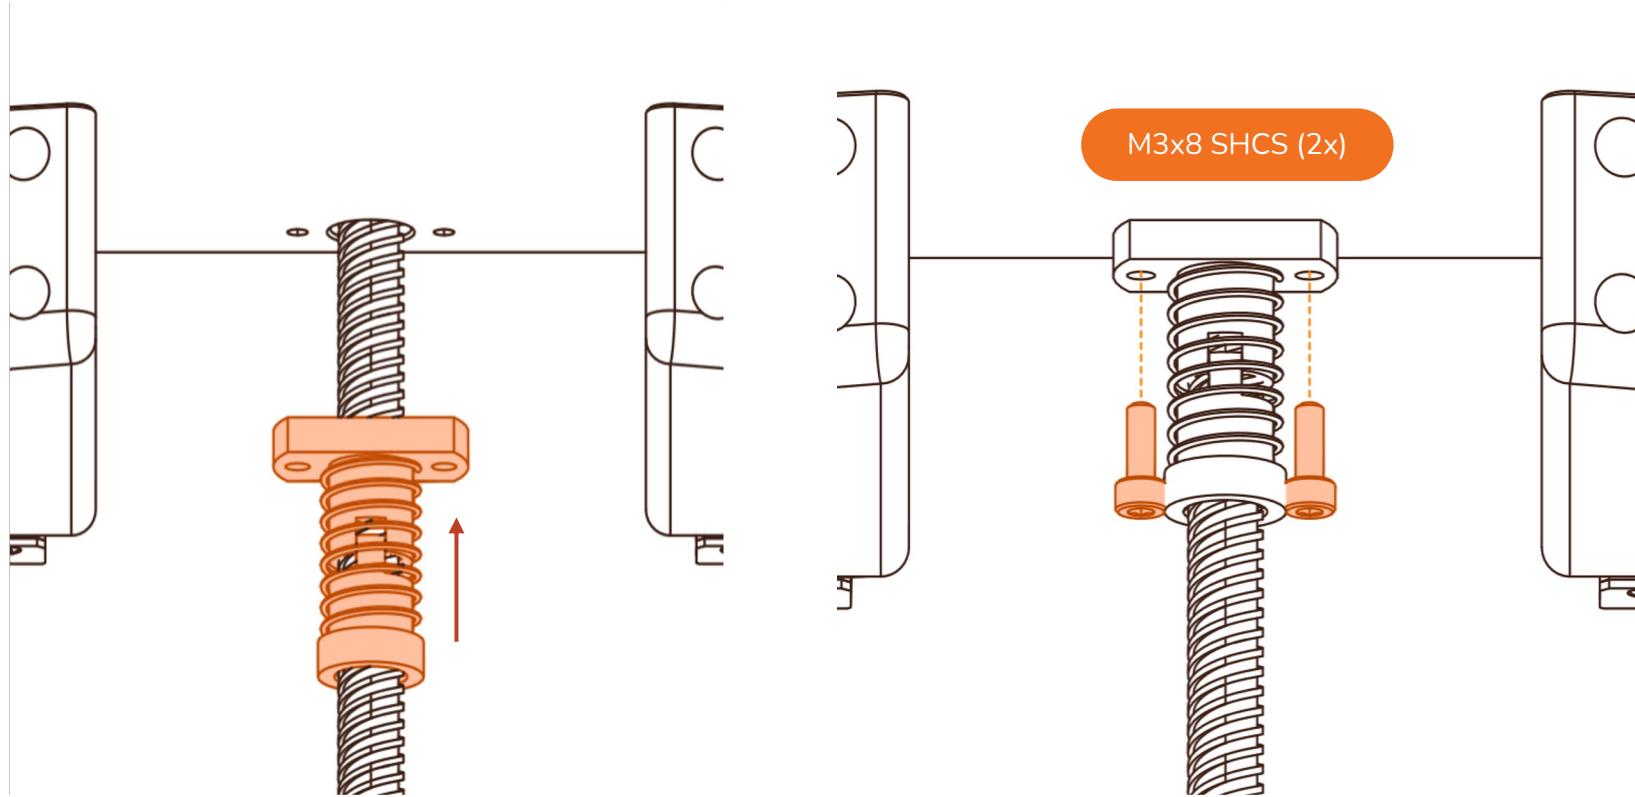
**CENTER STAGE**

If the Z Screw is centered within the bed plate, raise the anti-backlash nut to be flat with the build plate and fasten securely.


**BUILD SURFACE**

You can install the silicone baking mat that came with the printer on your bed, the M4 thumb screws should keep it in place.

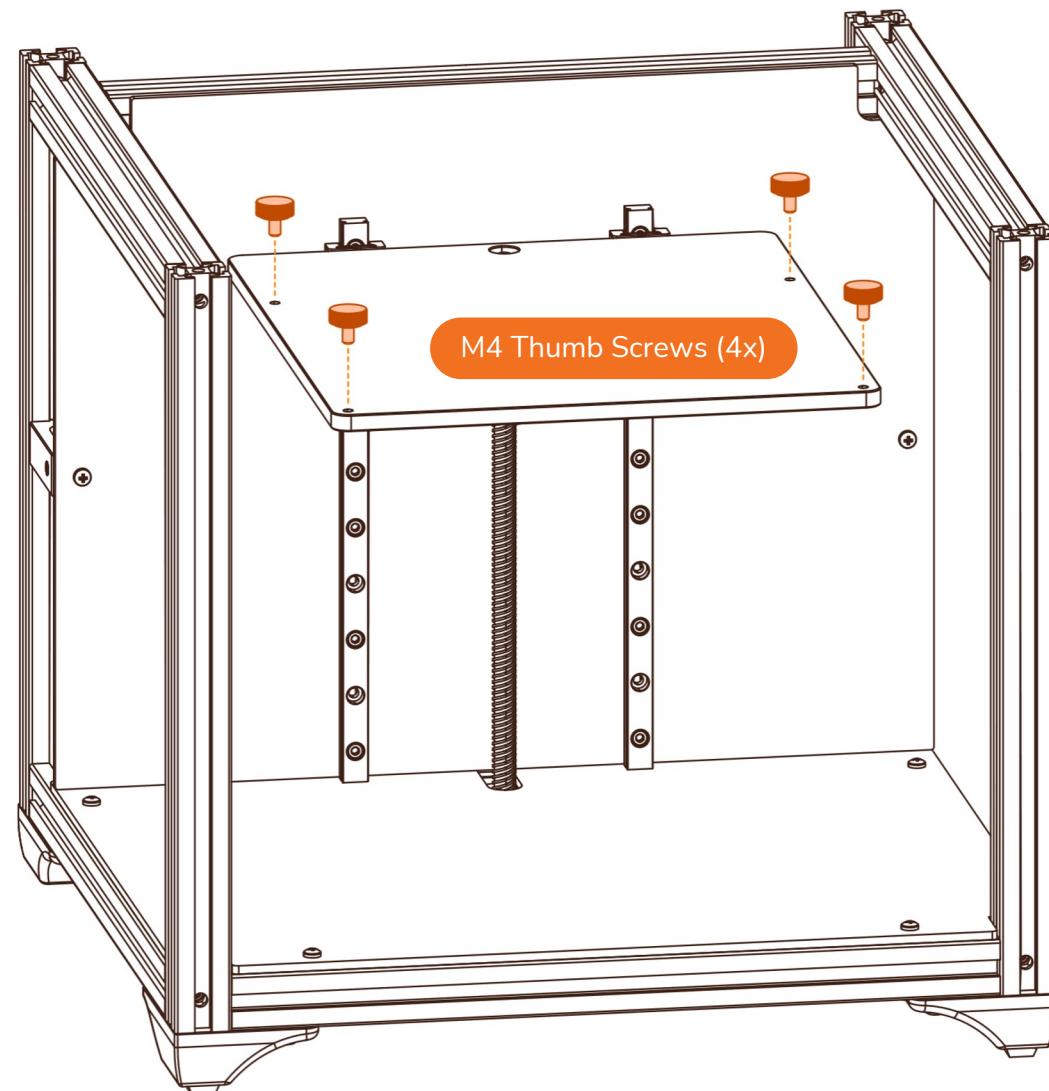


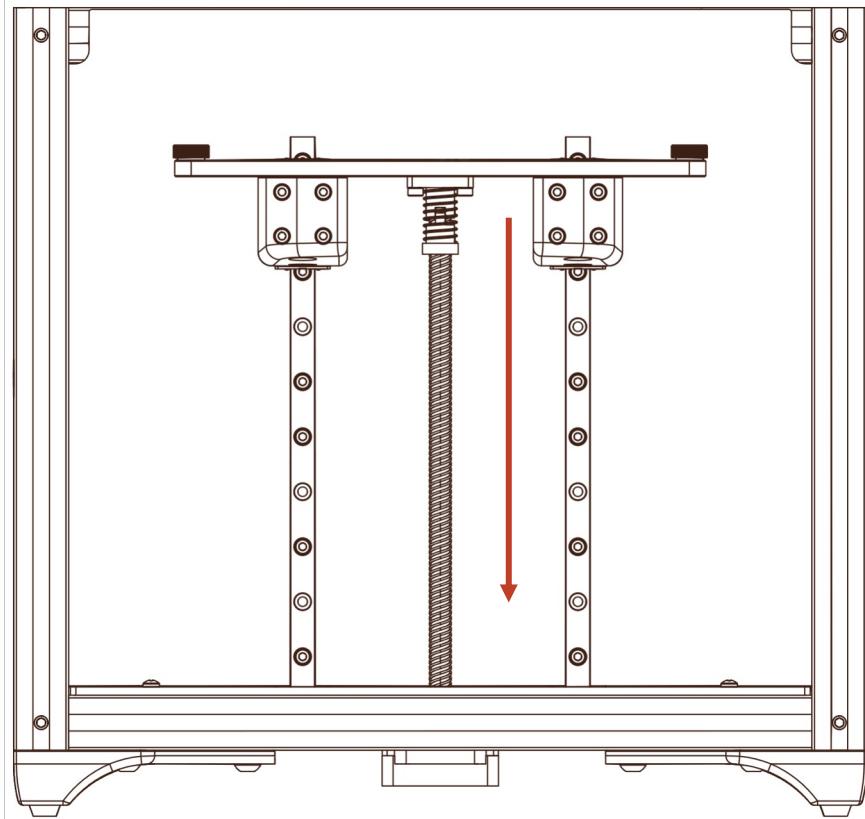
**CHECK BED ALIGNMENT**

Slide the bed assembly up and down to ensure that there are no areas where it is binding. The motion should be smooth and consistent.

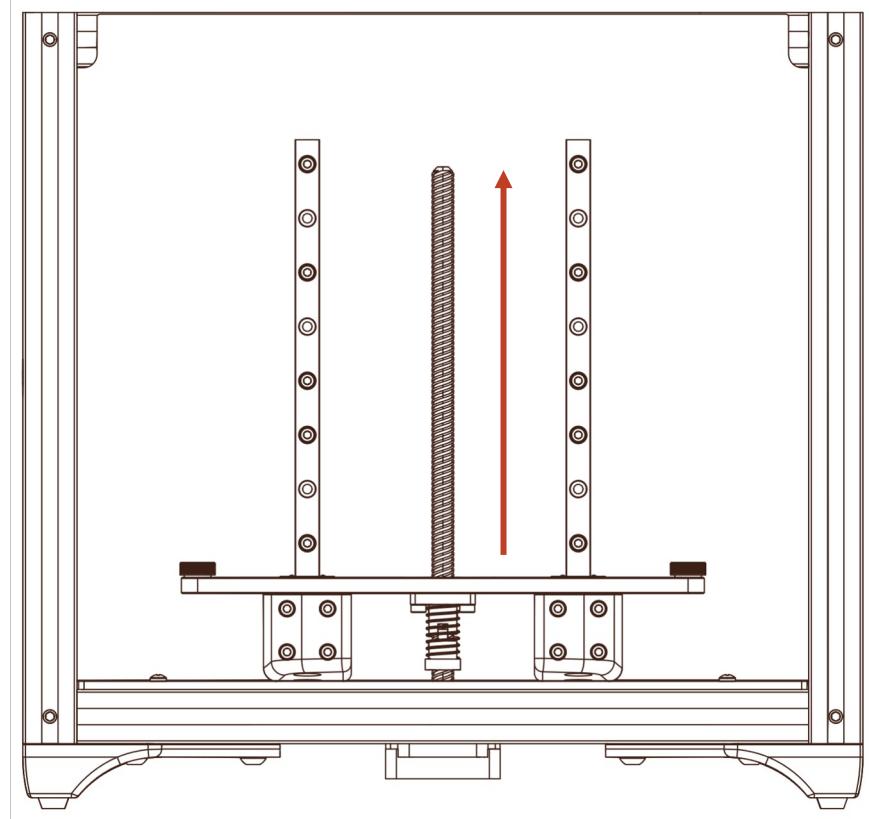
**CHECK RAILS ARE FASTENED**

Wiggle the rails side to side. If you can move them by hand, tighten them down further using an M3 driver.

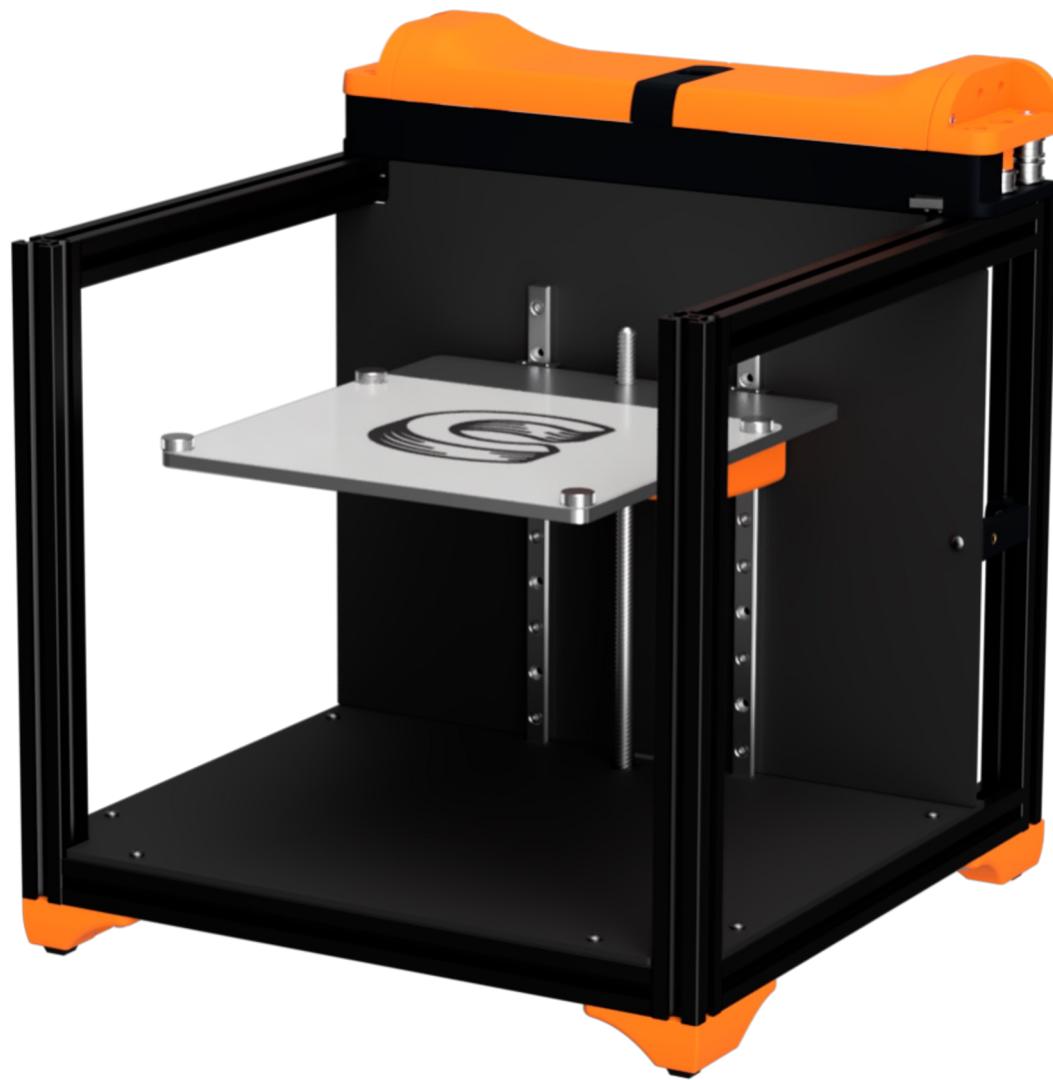

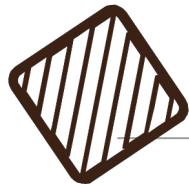**Difficulty**

Medium

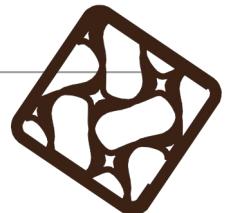**Tools Needed**

M2 Driver  
M3 Driver  
M5 Driver  
Heatset Insert Tool  
Soldering Iron (Not Included)

**Hardware Needed**


M3 Heatset Insert (3x)  
Y Endstop Switch (1x)  
M2 Self Tapping Screws (2x)  
GT2 Pulley (1x)  
M5 Washer (6x)  
F695 Bearing (6x)

M3 Thumbscrew (1x)  
M3x8 Socket Head Cap Screw (4x)  
M3x30 Socket Head Cap Screw (1x)  
M3x30 Button Head Cap Screw (1x)  
M5x40 Socket Head Cap Screw (1x)  
M5x30 Button Head Cap Screw (2x)  
M5x10 Button Head Cap Screw (1x)


**Printed Parts Needed**

Printed Spacer (1x)  
Motor Mount Right (1x)  
Rear Idler Stabilizer Right (1x)  
Belt Tensioner Sled (1x)



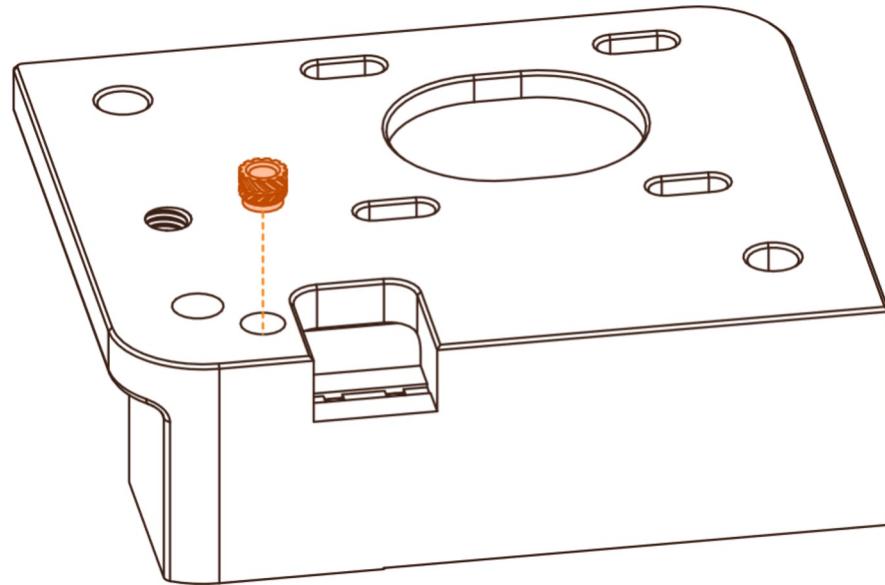





M3 Headset Inserts (3x)

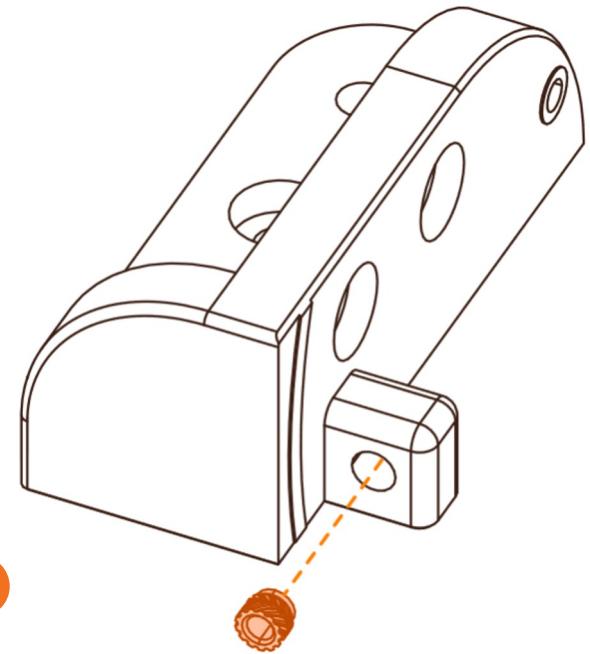

#### INSERT INSTALLATION

This headset insert sits below the surface of the printed part, be sure that you have installed it to its correct position.

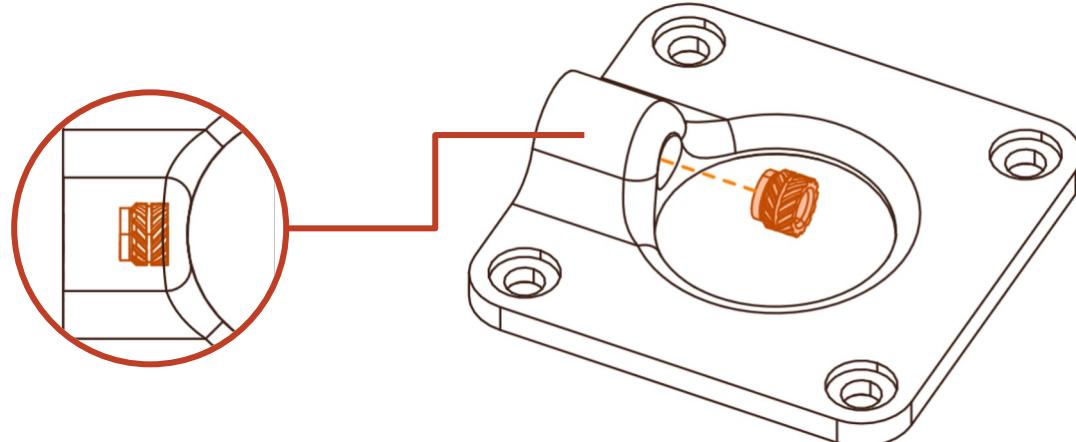


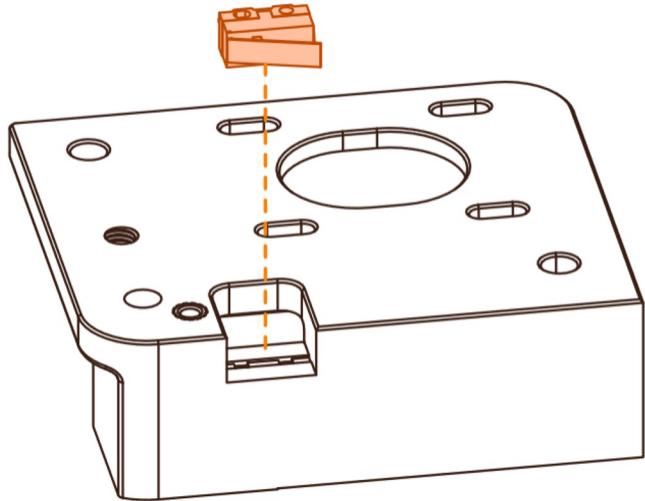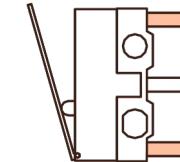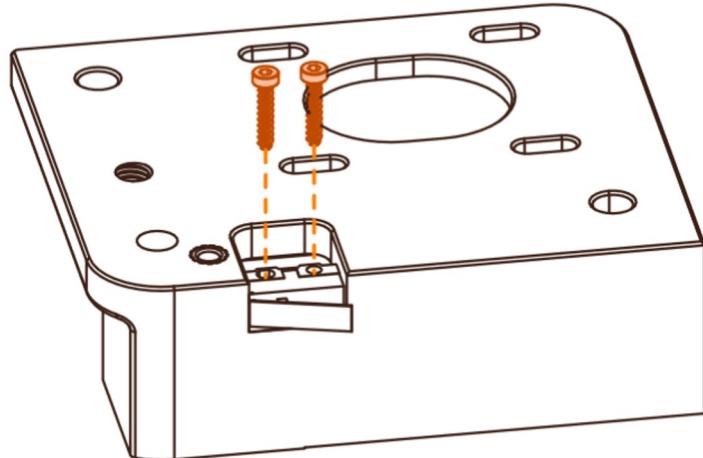
**Y Endstop Switch****M2 Self Tapping Screws (2x)****ENDSTOP WIRING**

The endstop switches come pre-wired to the outer two terminals of the switch.


**WIRE PATH**


Run the endstop wiring along the highlighted path in the A motor assembly.

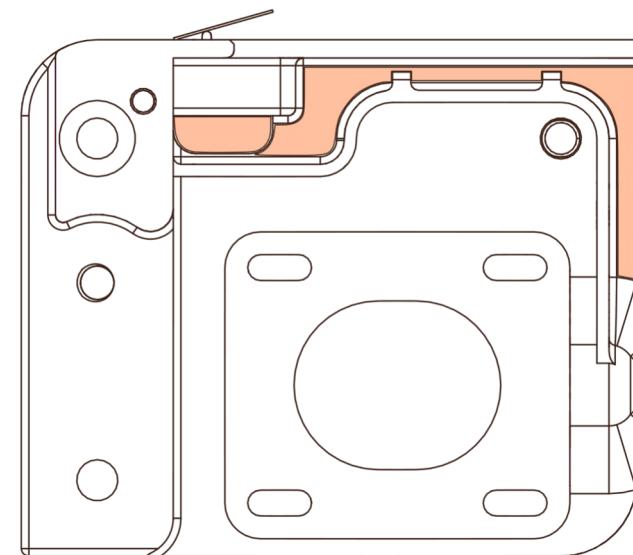

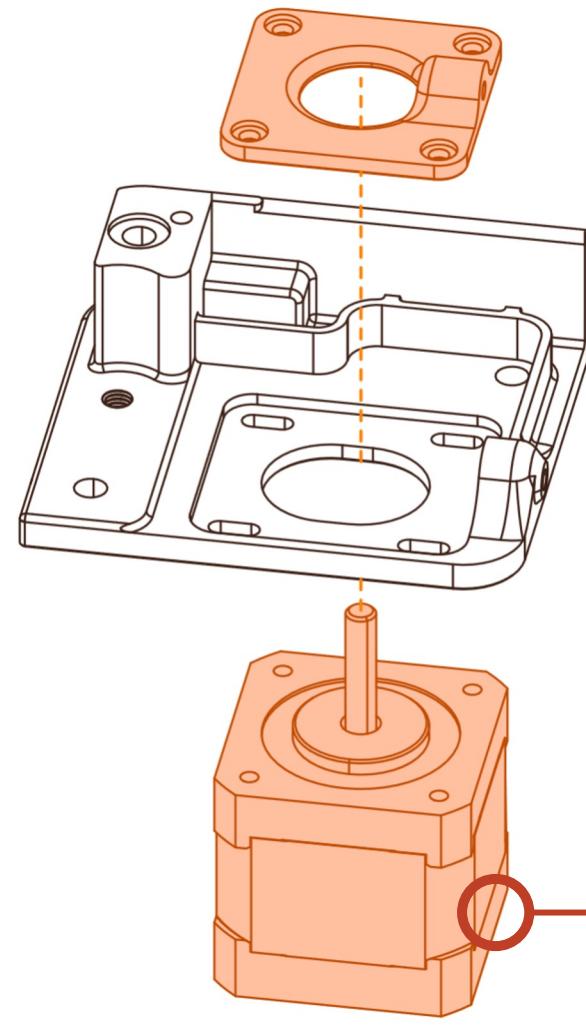
**MOTOR WIRING**



The motor wiring plug should exit from here, towards the center of the machine when the drive unit is installed.

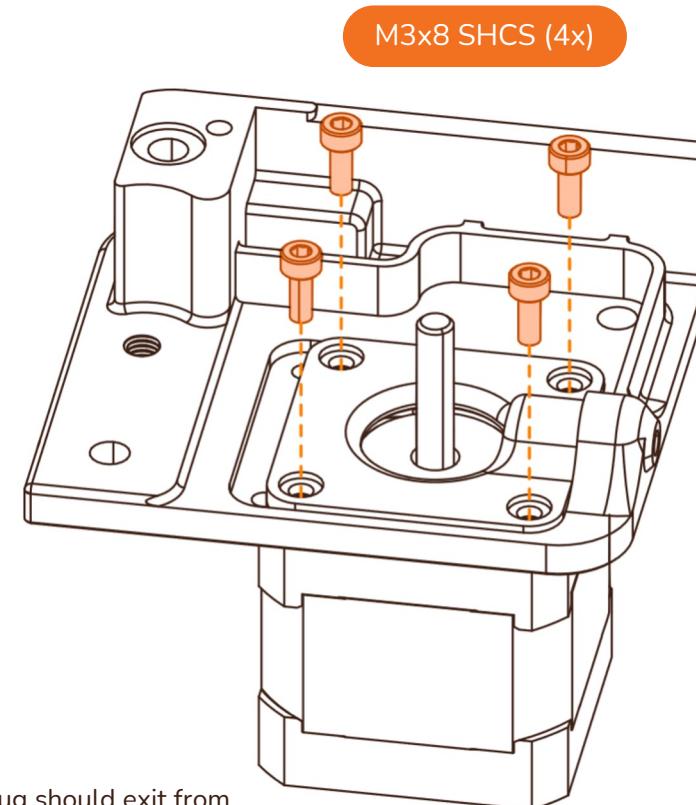


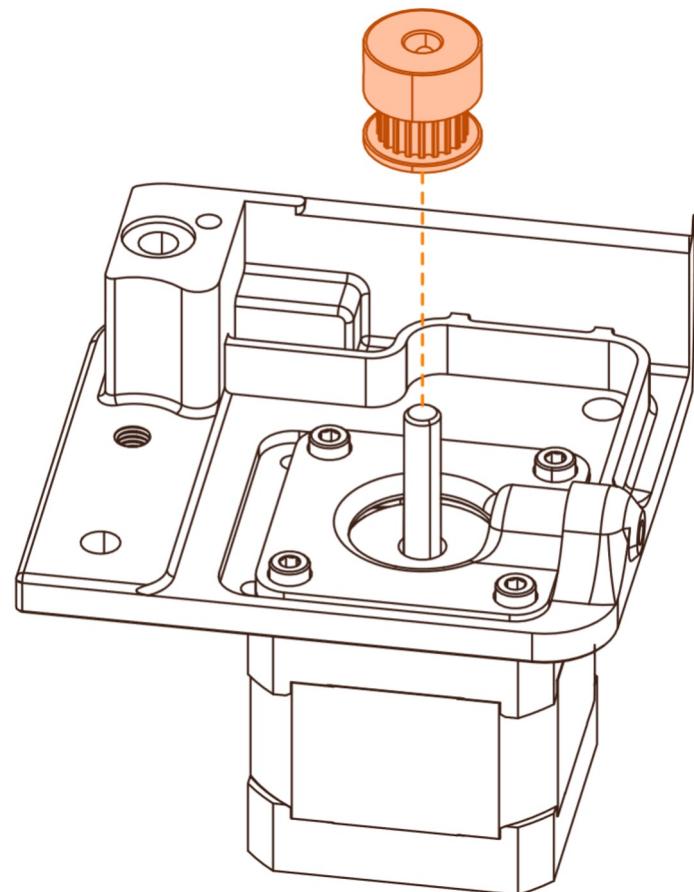**PULLEY PLACEMENT**

We will set the height of this pulley at a later step. For now, ensure that at least one of the set screws is in contact with the flat portion of the motor shaft.

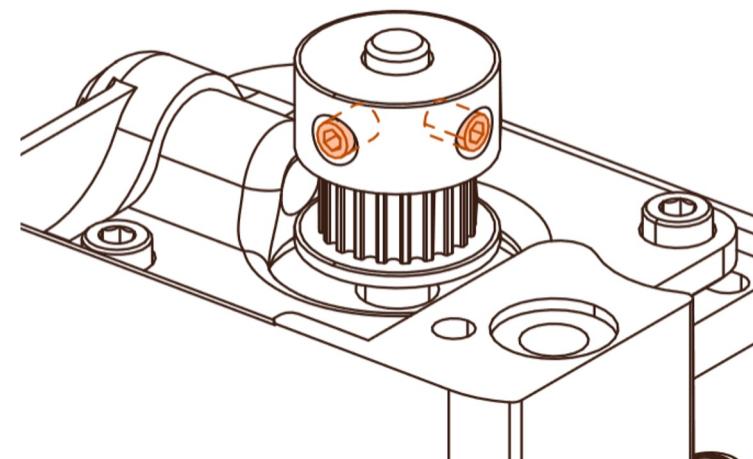


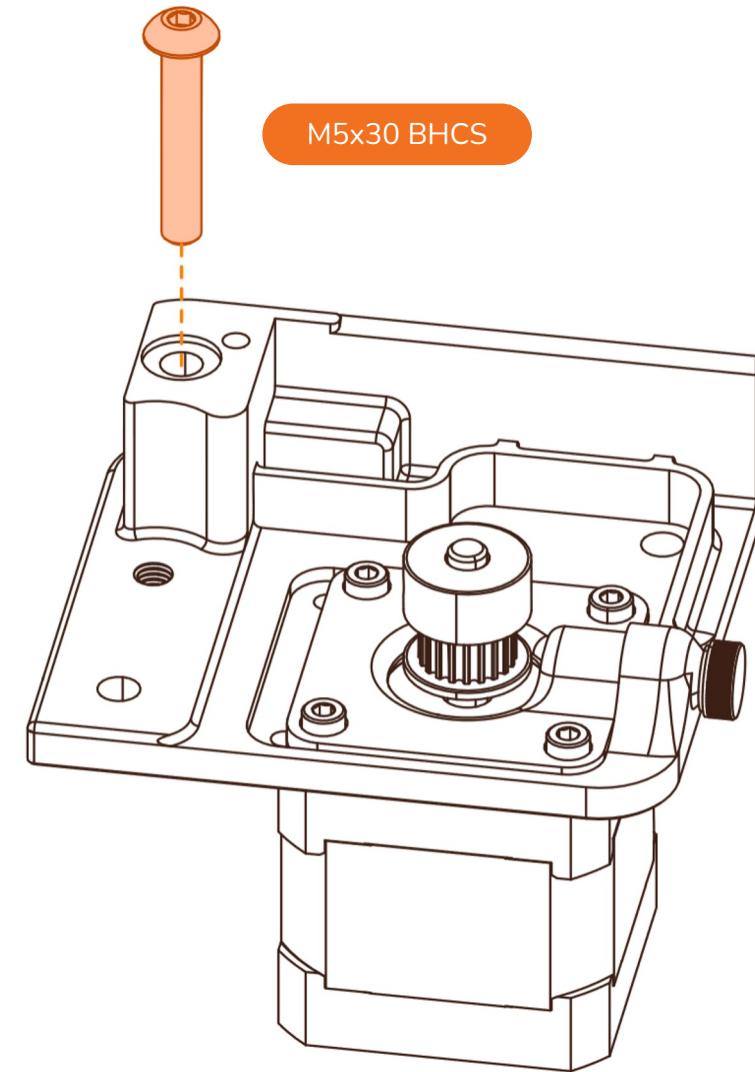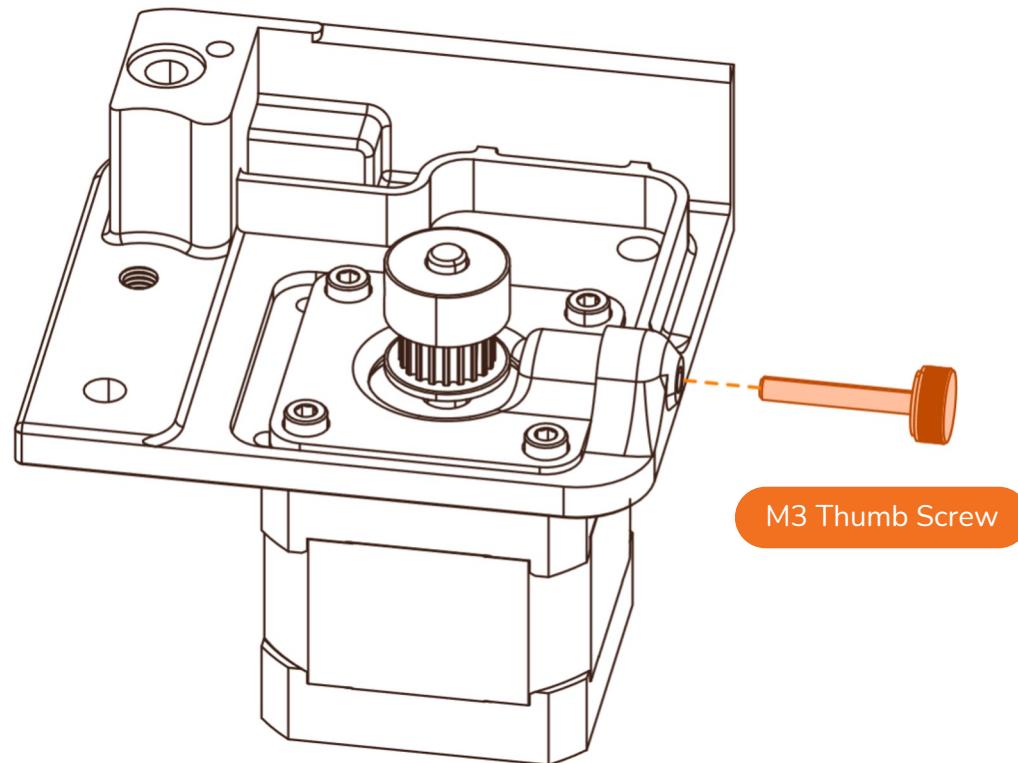

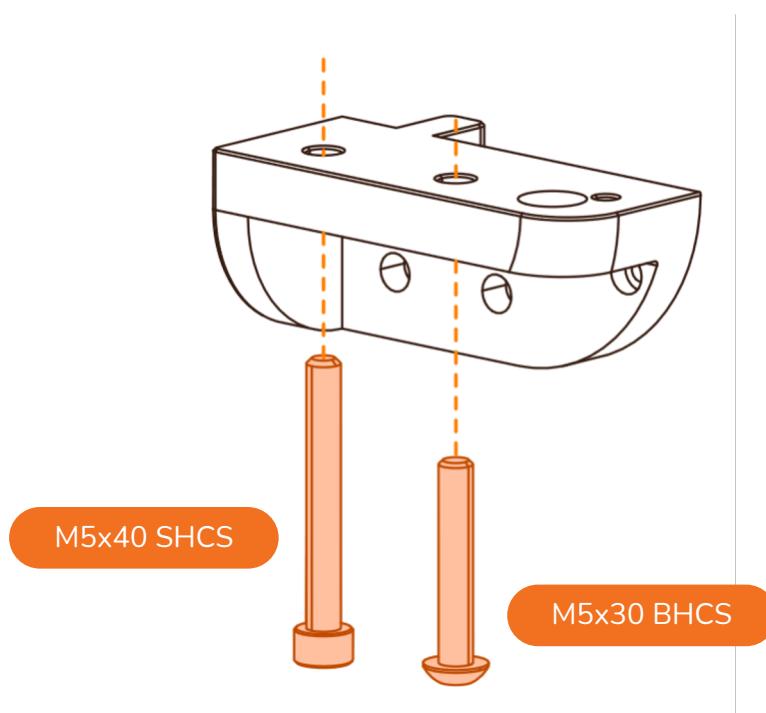


M5x40 SHCS

M5x30 BHCS

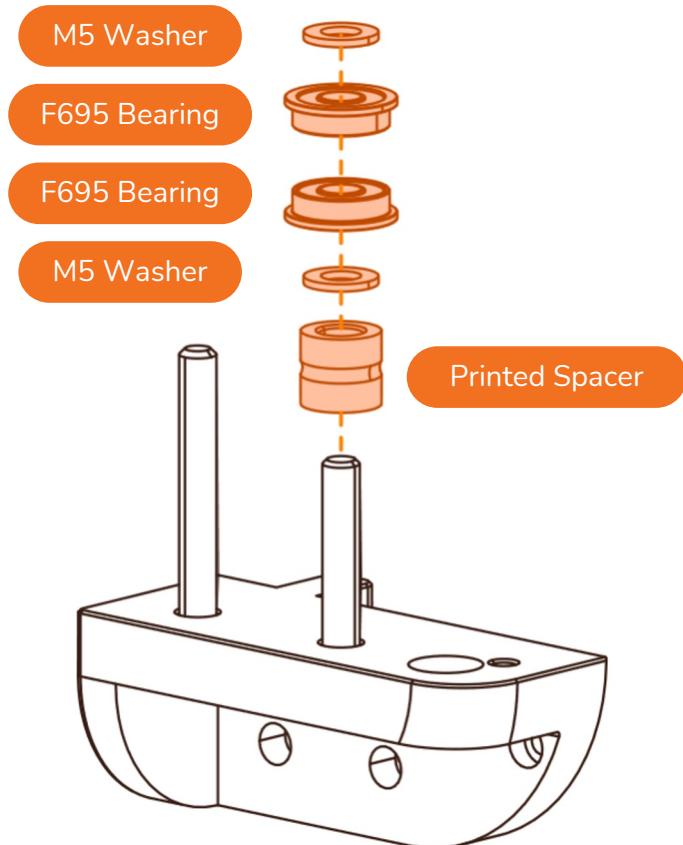



#### HARDWARE STACKS

We will be installing a number of similar but NOT identical stacks of hardware like the one shown above. Pay attention to the printed part orientation and the order of the stacked components as they are not all the same.

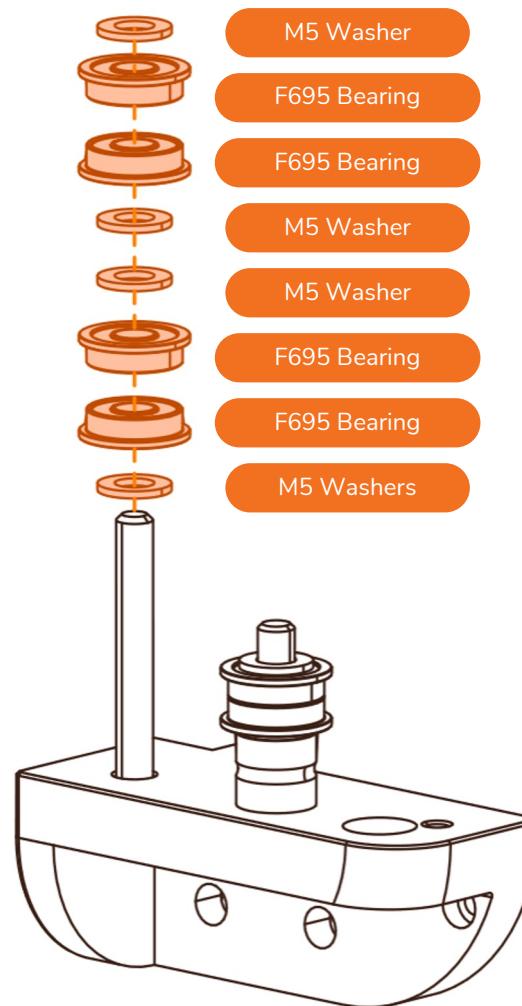


**EXTRA SCREWS**

We installed an M5x30 screw here on page 57 that will be captured by the printed parts. This fastener will help mount the drive unit to the frame at a later step.

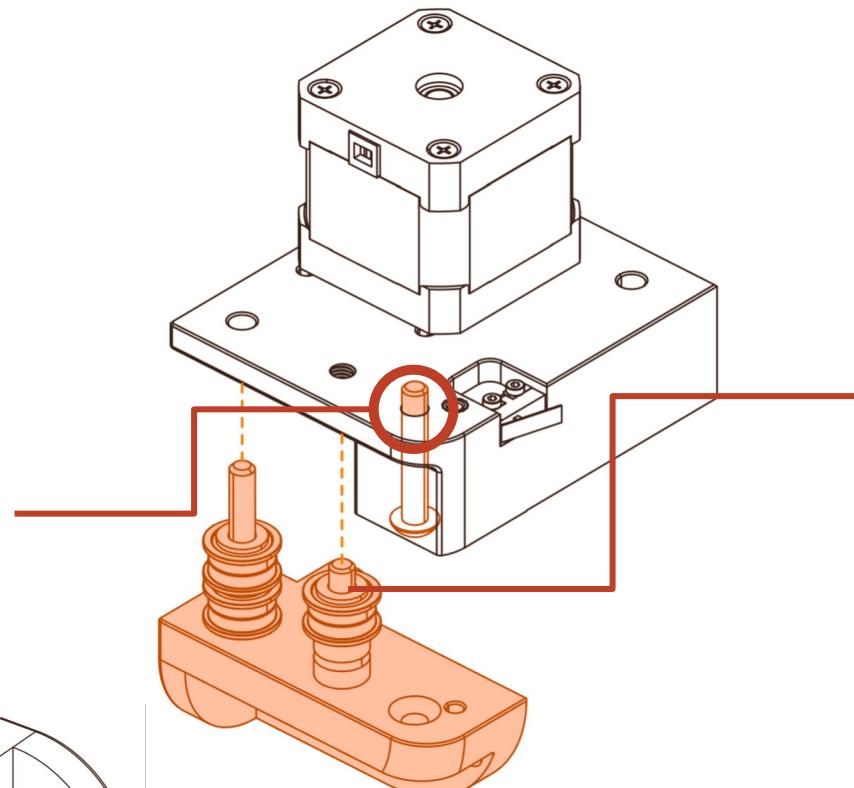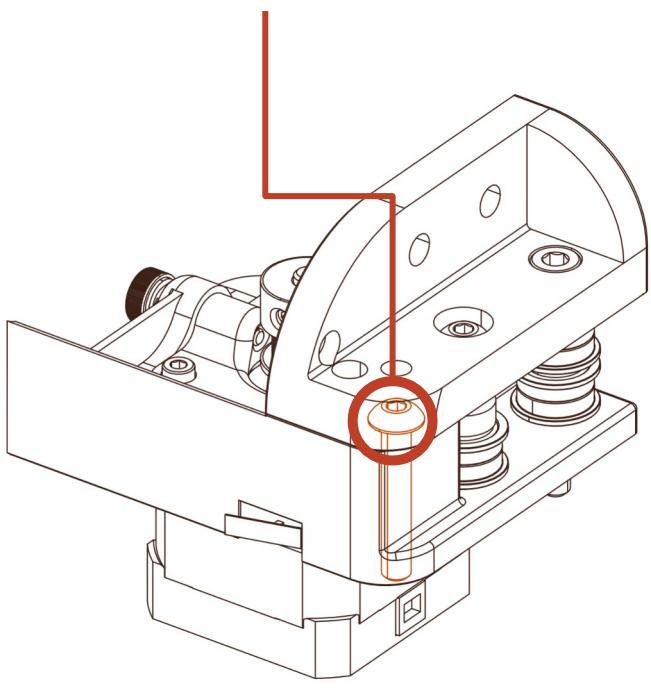
**THREADING INTO PLASTIC**


This screw threads into the plastic printed part, take care not to strip it by tightening it too much.

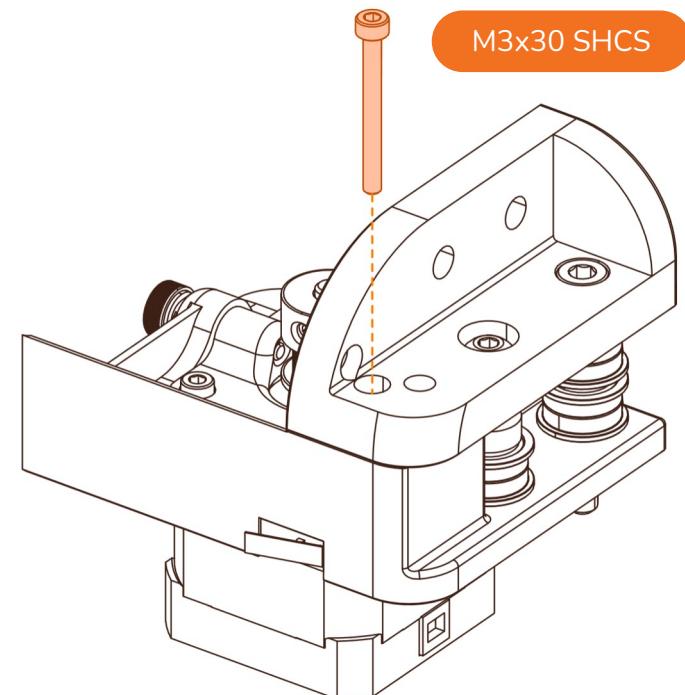


**SETTING DRIVE PULLEY HEIGHT**

At this point we can adjust the height of the drive pulley on the motor shaft. We want the pulley to be centered with the bottom pair of bearings on the A drive unit.

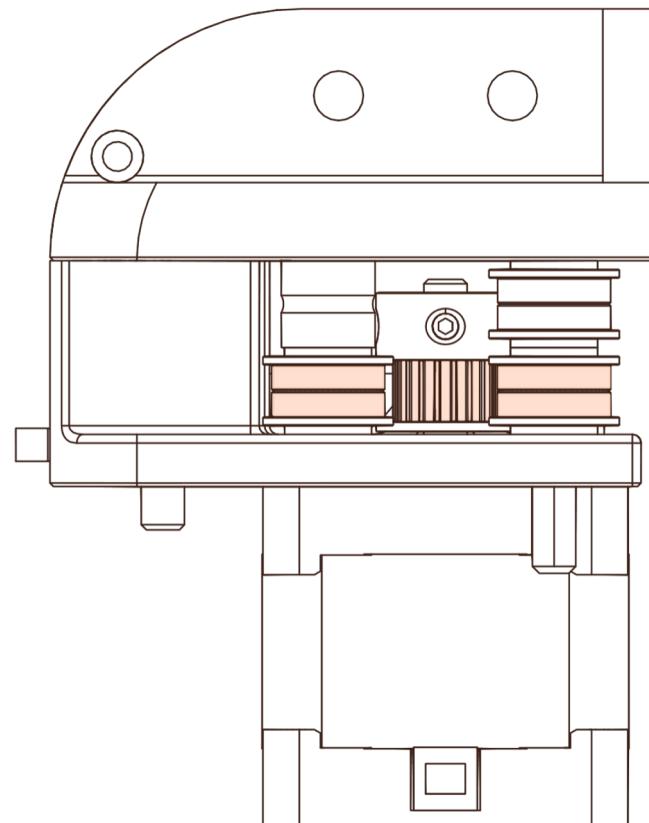

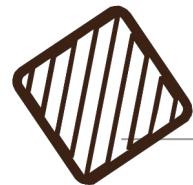**Difficulty**

Medium

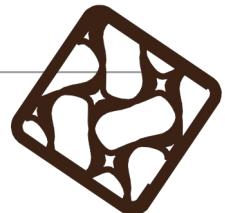**Tools Needed**

M2 Driver  
M3 Driver  
M5 Driver  
Heatset Insert Tool  
Soldering Iron (Not Included)

**Hardware Needed**


M3 Heatset Insert (3x)  
M5 T-Nuts (3x)  
Y Endstop Switch (1x)  
M2 Self Tapping Screws (2x)  
GT2 Pulley (1x)  
M5 Washer (6x)  
F695 Bearing (6x)

M3 Thumbscrew (1x)  
M3x8 Socket Head Cap Screw (4x)  
M3x30 Socket Head Cap Screw (1x)  
M3x30 Button Head Cap Screw (1x)  
M5x40 Socket Head Cap Screw (1x)  
M5x30 Button Head Cap Screw (2x)  
M5x10 Button Head Cap Screw (1x)

**Printed Parts Needed**

Printed Spacer (1x)  
Motor Mount Left (1x)  
Rear Idler Stabilizer Left (1x)  
Belt Tensioner Sled (1x)




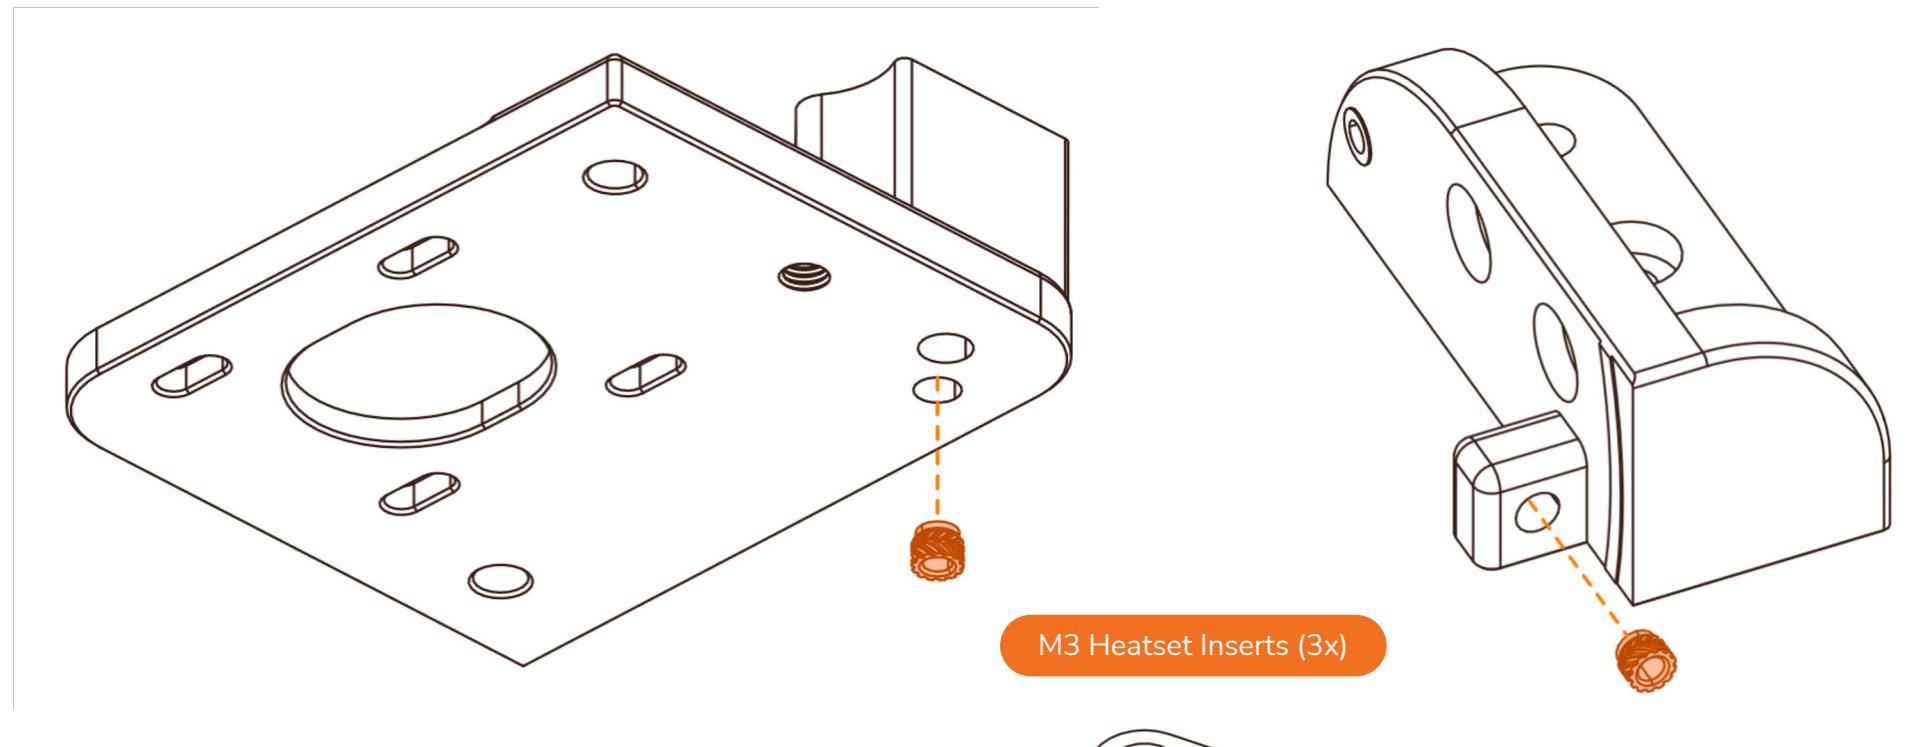


M3 Heatset Inserts (3x)

**INSERT INSTALLATION**


This headset insert sits below the surface of the printed part, so be sure that you have installed it to its correct position.


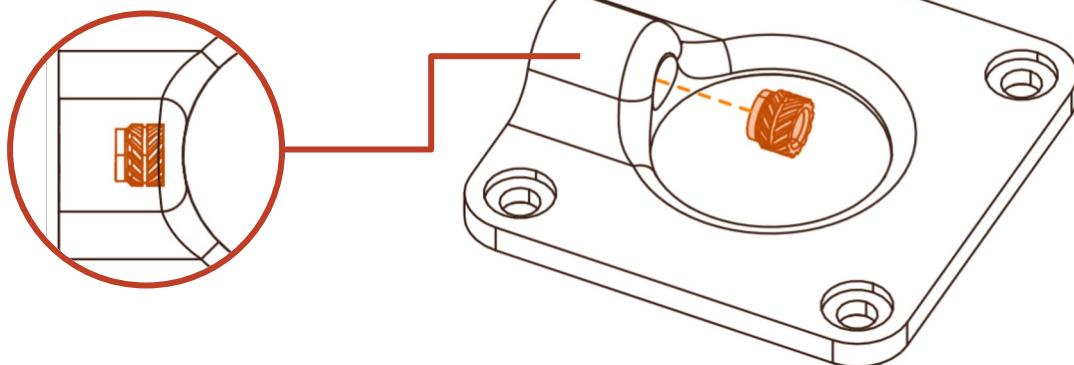



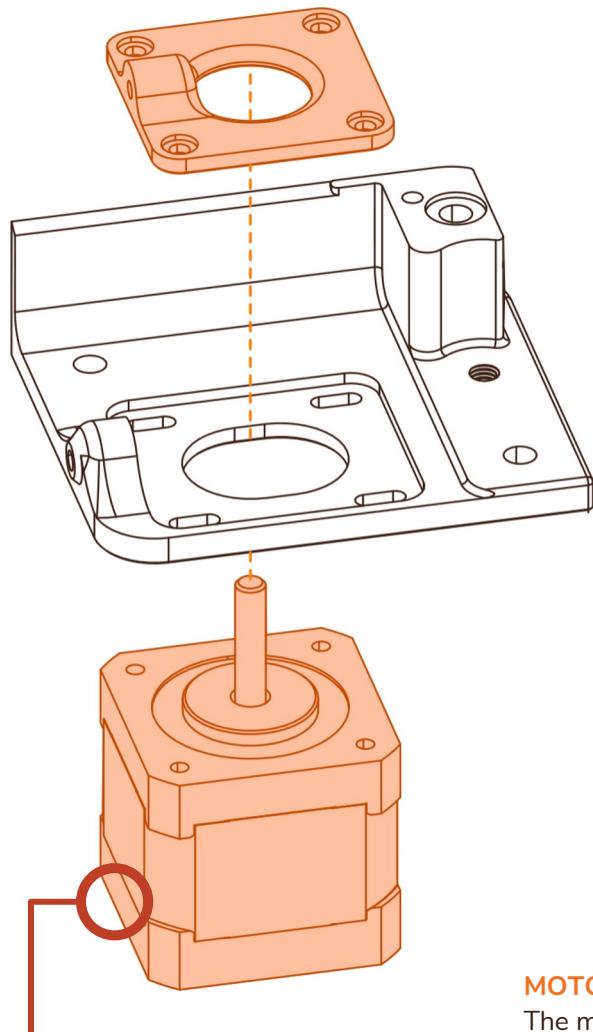





#### MOTOR WIRING

The motor wiring plug should exit from here, and direct towards the center of the machine when the drive unit is installed.

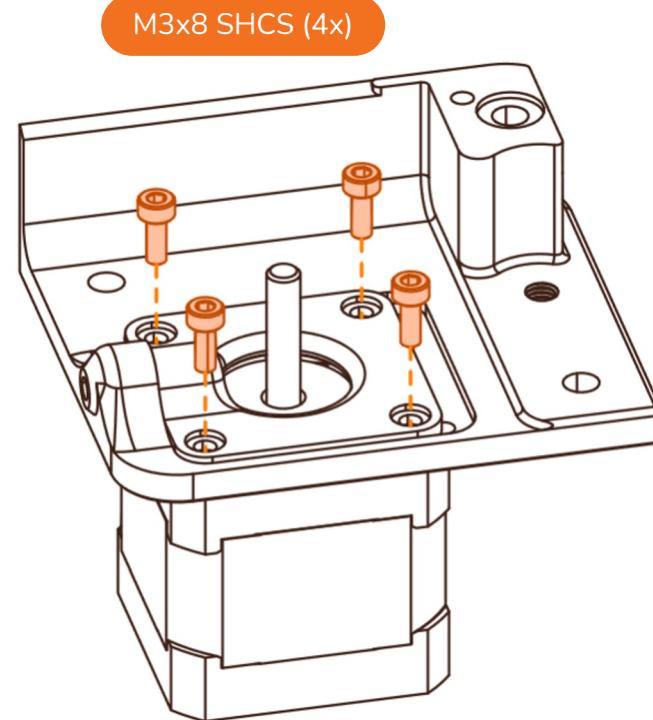

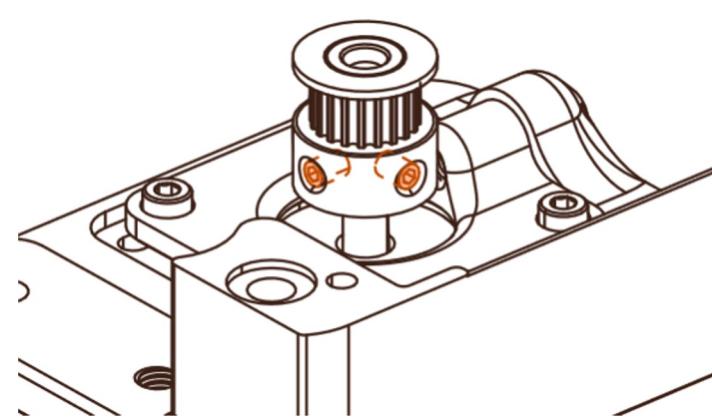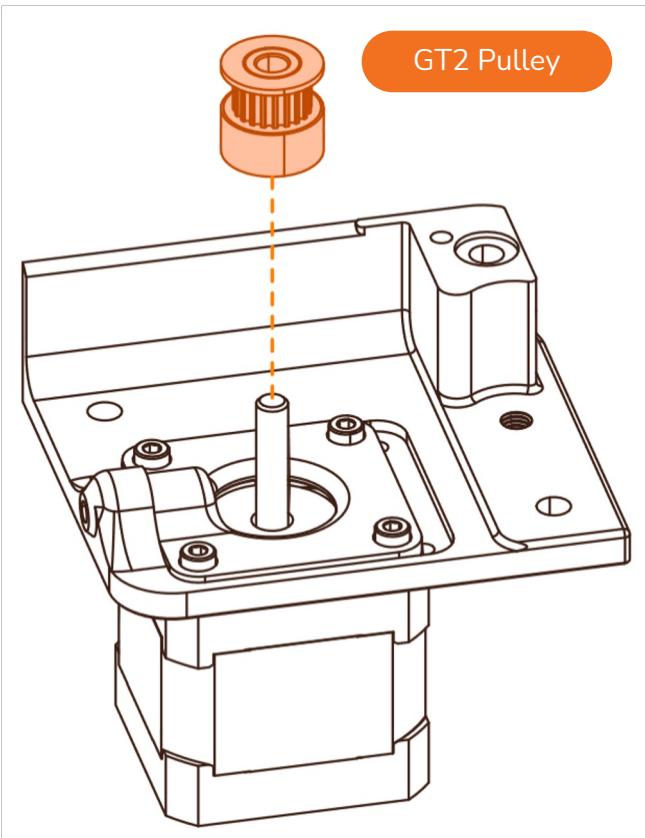


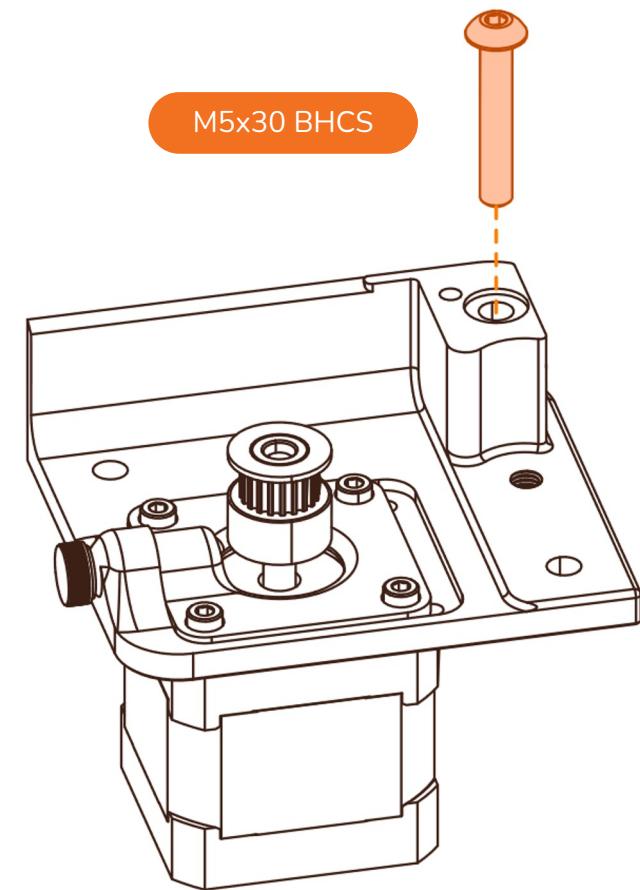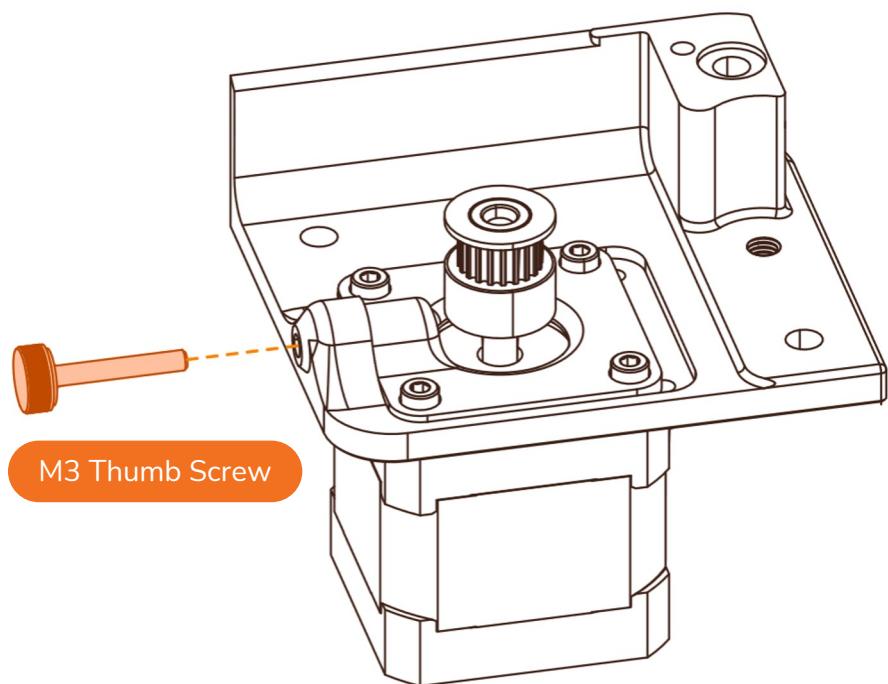

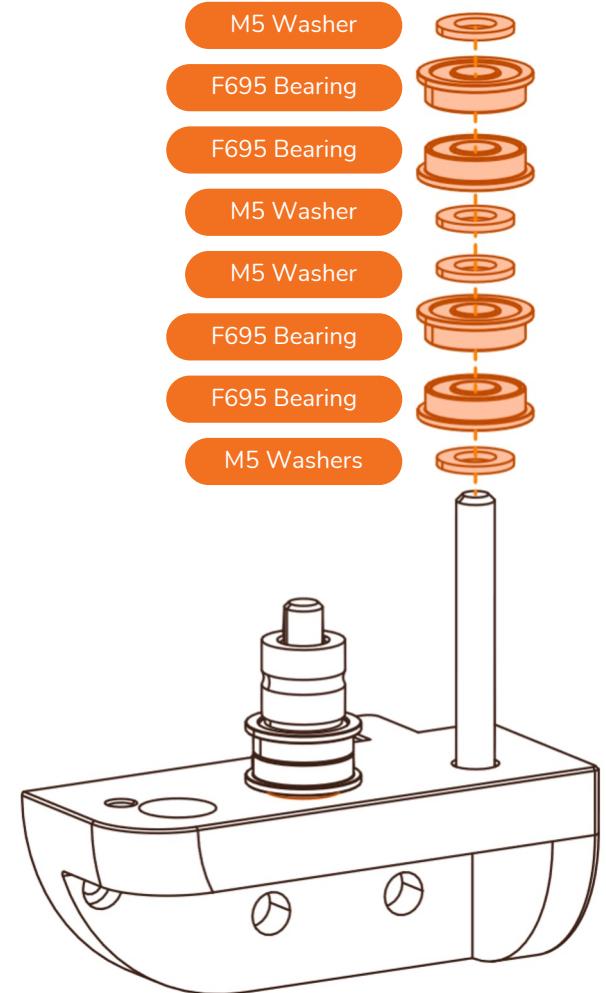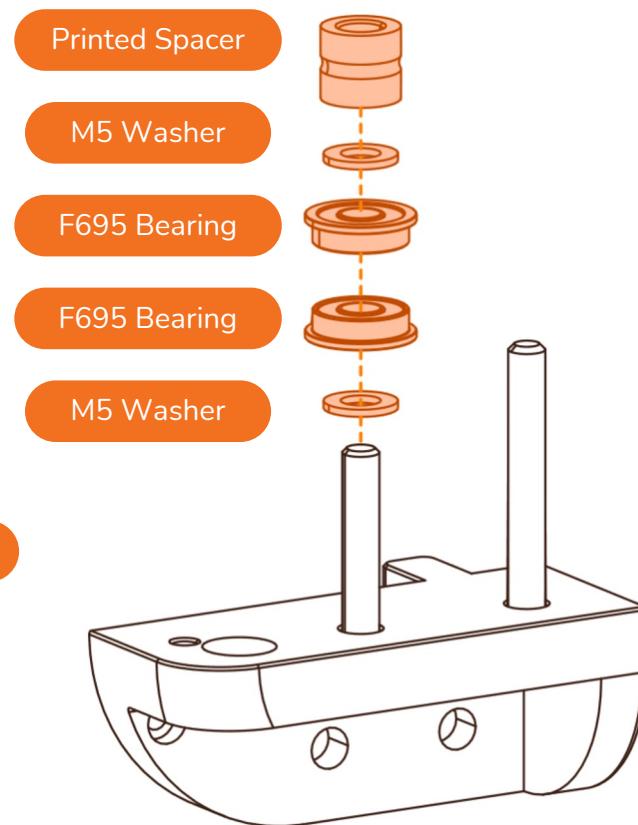
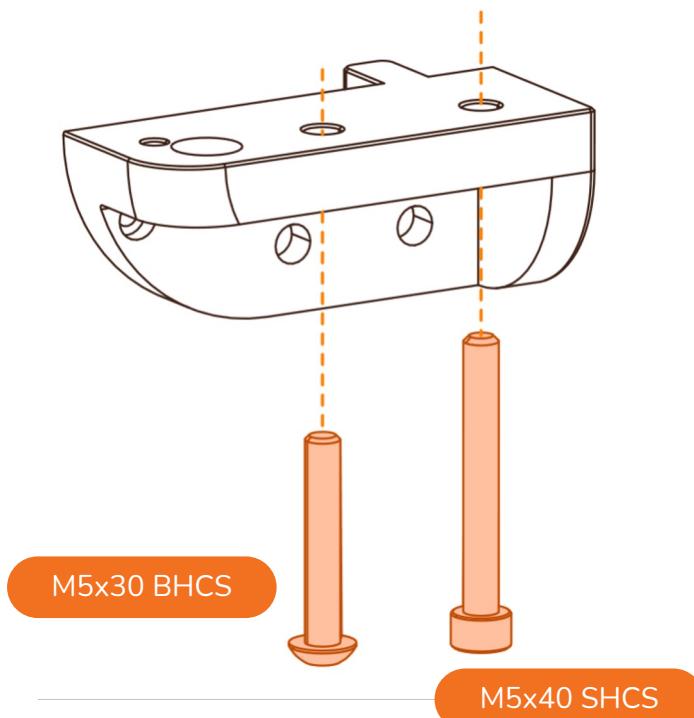


**EXTRA SCREWS**

We installed an M5x30 screw here back on page 65 that will be captured by the printed parts. This fastener will help mount the drive unit to the frame at a later step.

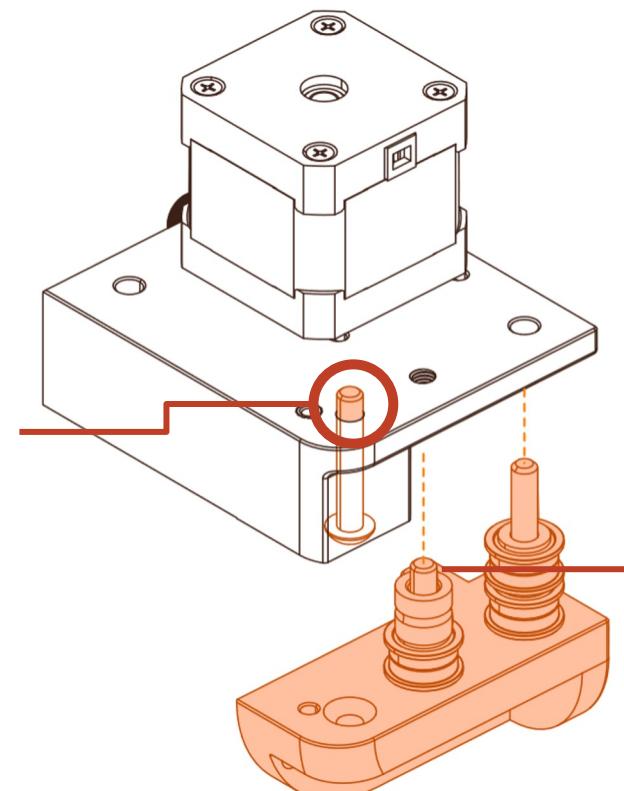
**THREADING INTO PLASTIC**



This screw threads into the plastic printed part, take care not to strip it by tightening it too much.

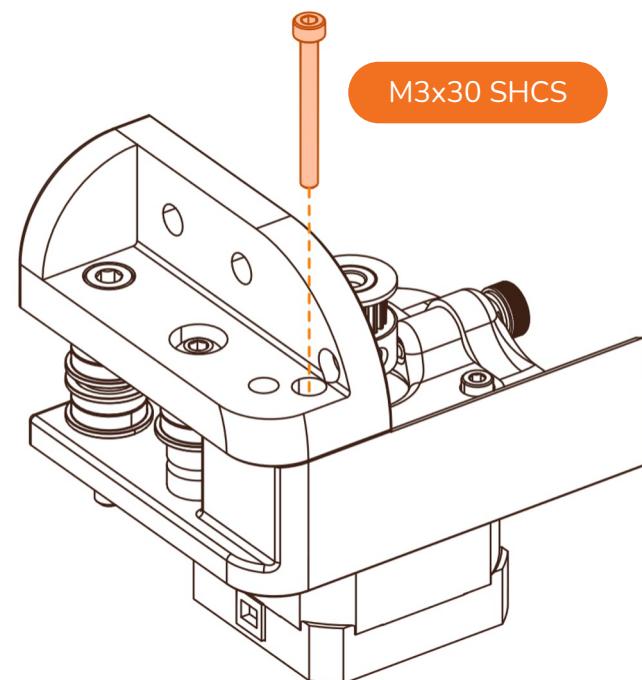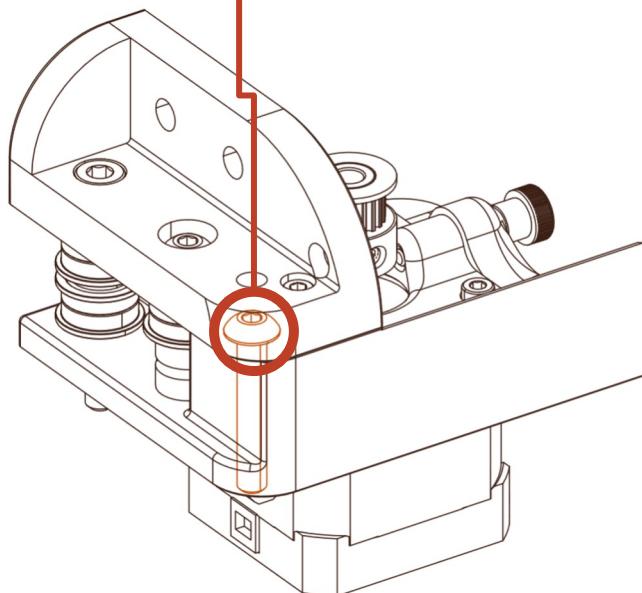

**SETTING DRIVE PULLEY HEIGHT**



At this point we can adjust the height of the drive pulley on the motor shaft. We want the pulley to be centered with the top pair of bearings on the B drive unit.

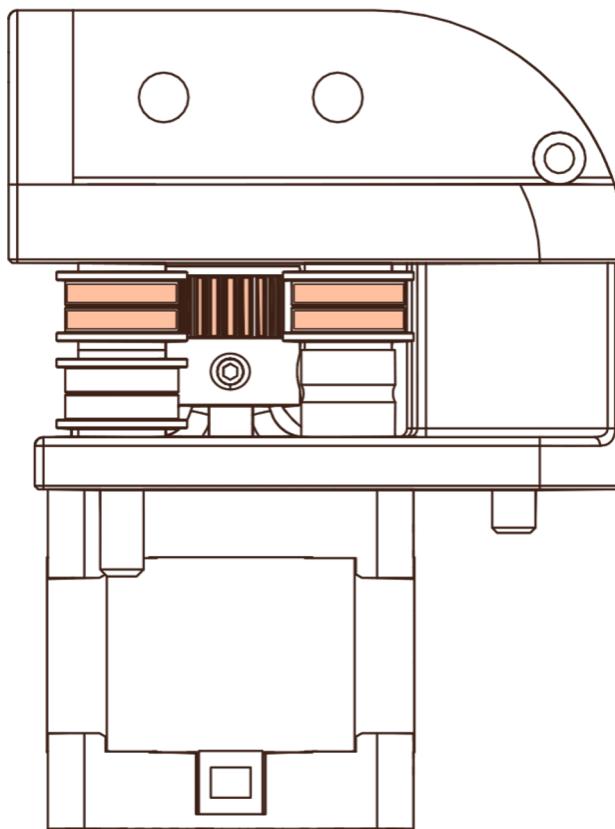

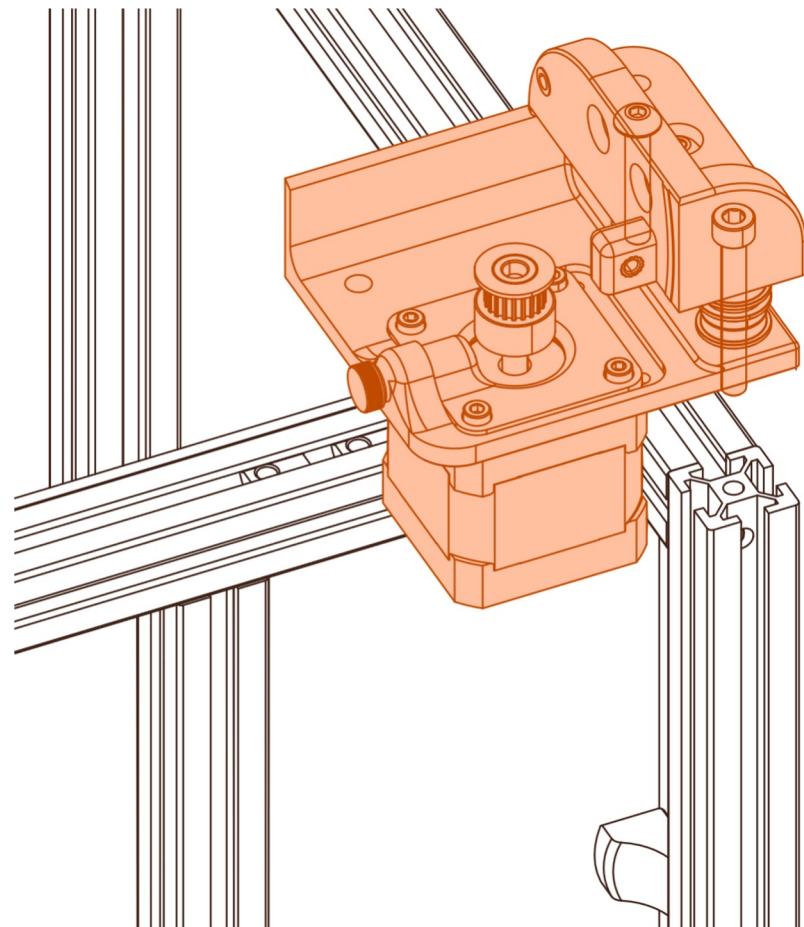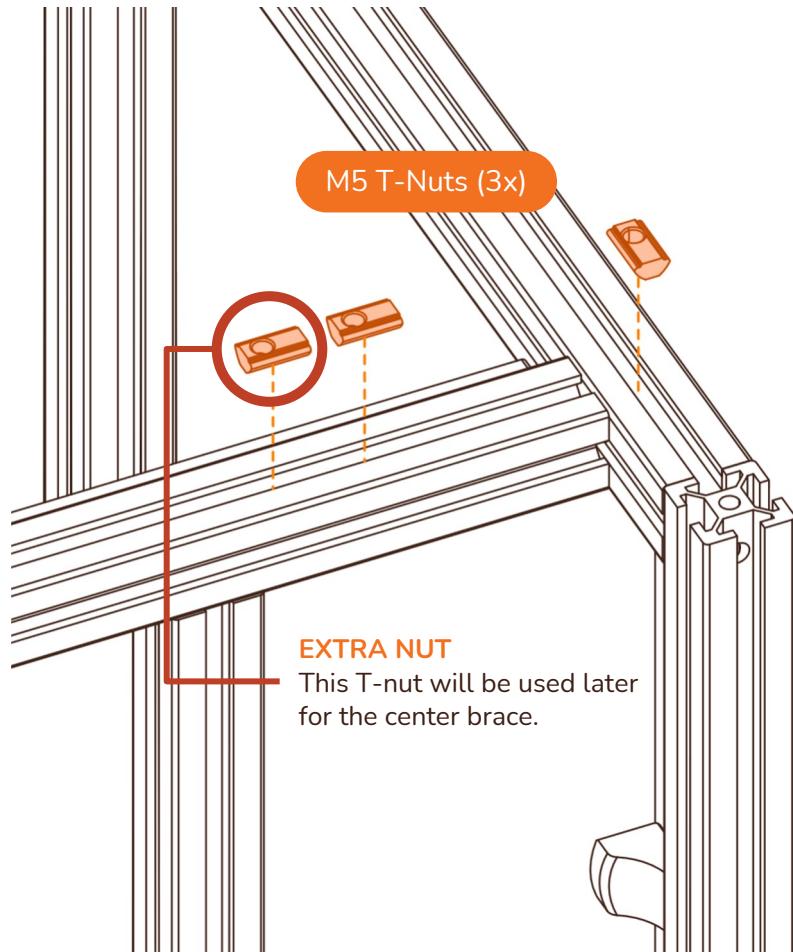



### ATTACHING THE DRIVE UNIT

The two highlighted screws help secure the drive unit to the frame, the button head screw threads into a T-nut you installed on the previous page, and the socket head screw threads into the end of the vertical extrusion.

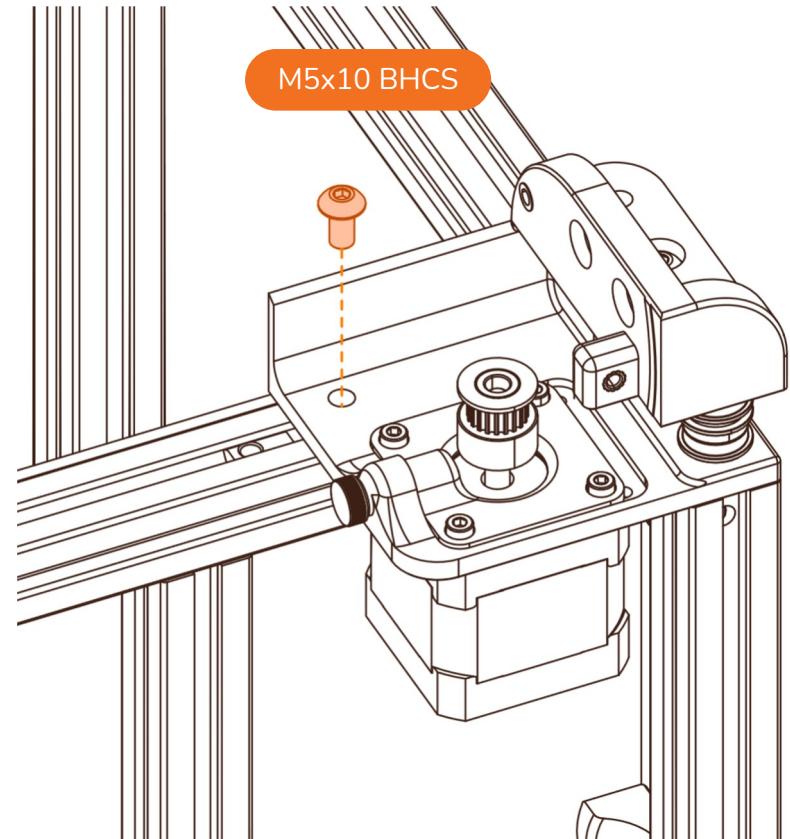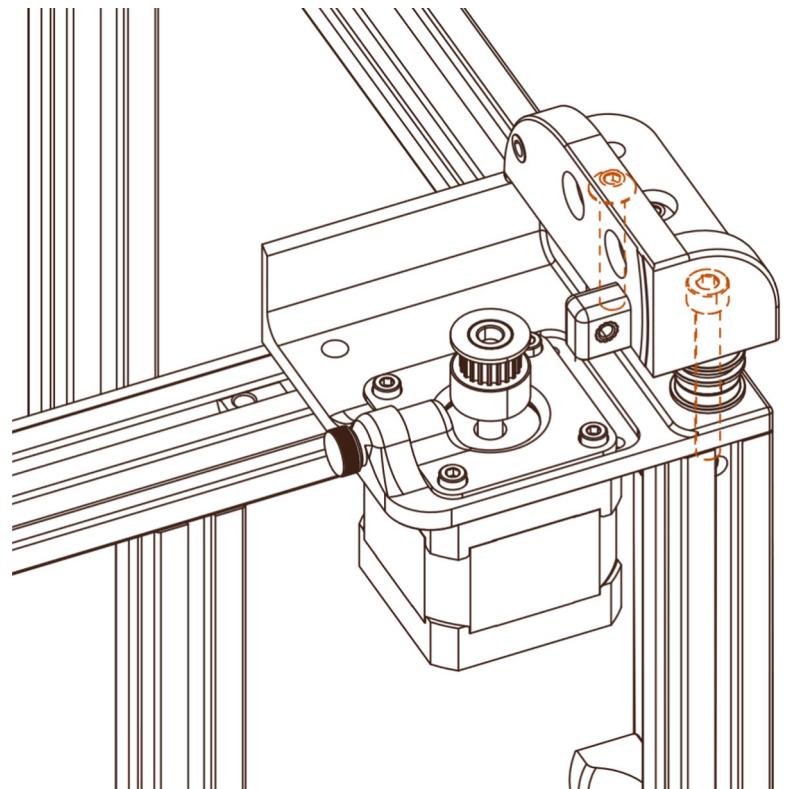



### DON'T SQUISH!


This screw threads through printed parts and can compress the part accidentally. Do not overtighten.

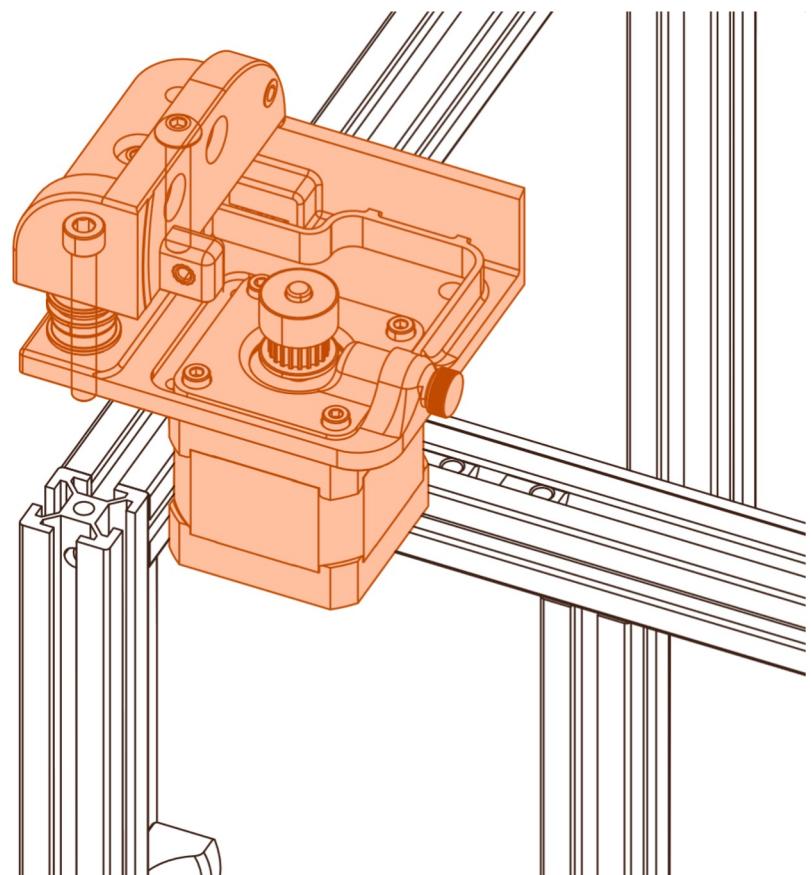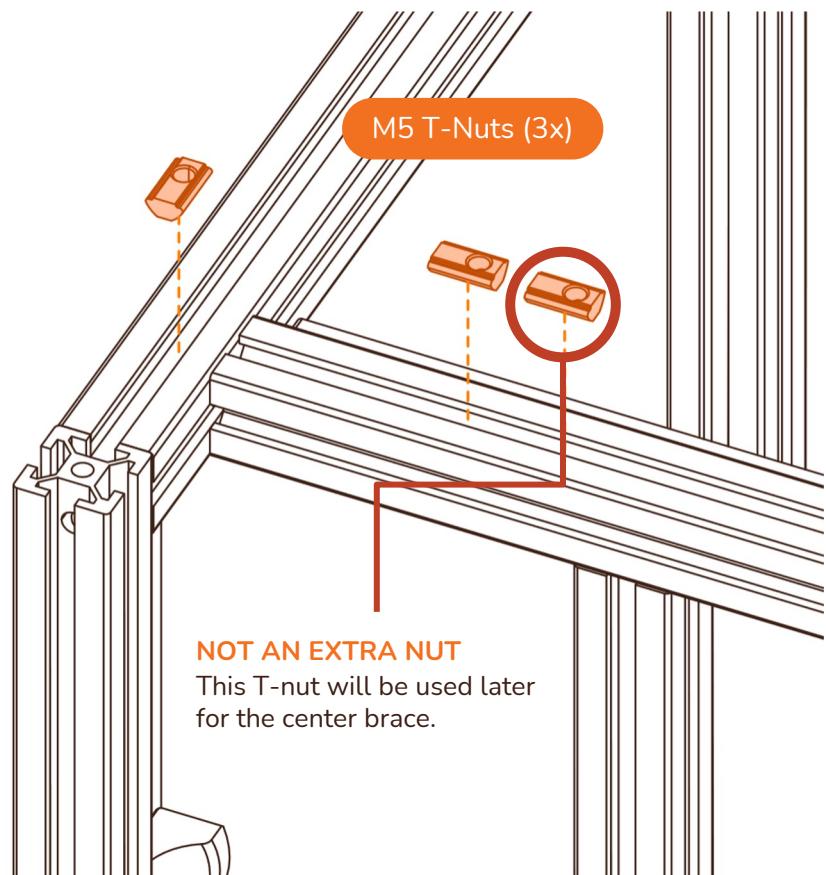


**ATTACHING THE DRIVE UNIT**

The two highlighted screws help secure the drive unit to the frame, the button head screws threads into a T-nut you installed on the previous page, and the socket head screw threads into the end of the vertical extrusion.

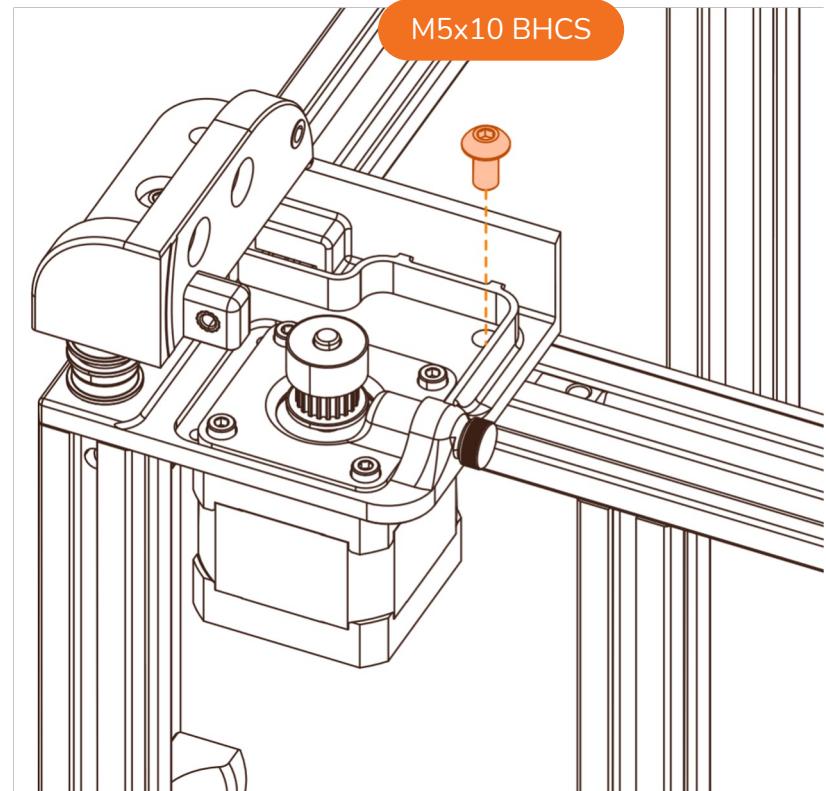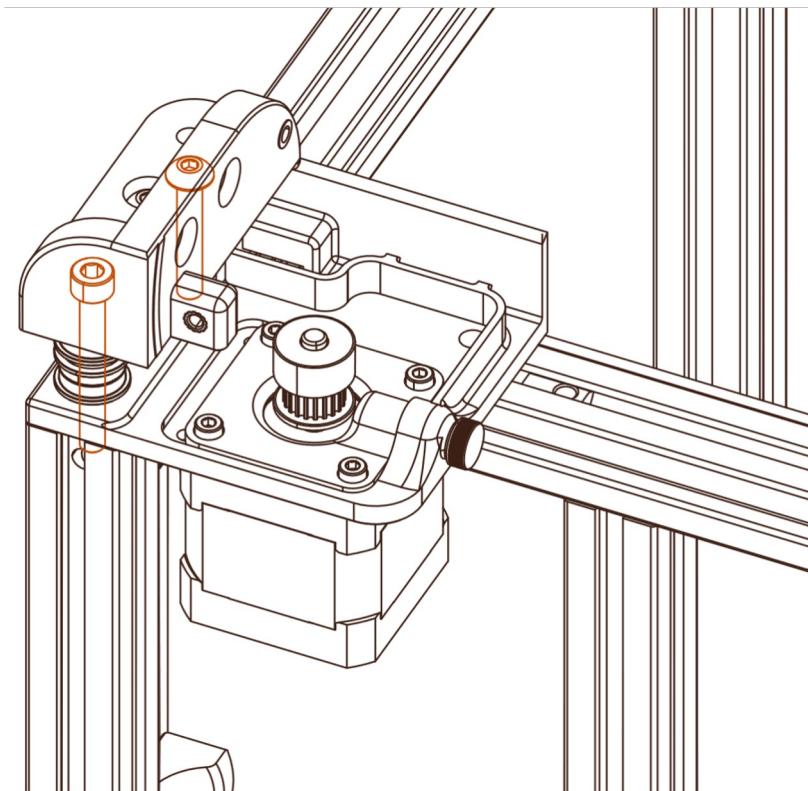

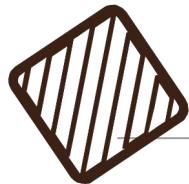**Difficulty**

Medium

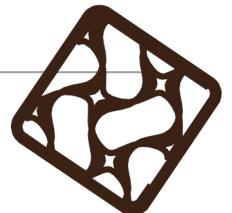**Tools Needed**

M3 Driver  
M5 Driver  
Heatset Insert Tool  
Soldering Iron (Not Included)



**Hardware Needed**



M5x10 Button Head Cap Screw (2x)  
M5 T-Nut (1x)  
M3 Heatset Inserts (3x)  
M5x30 Button Head Cap Screw (1x)  
M3x8 SHCS (2x)  
M3x16 SHCS (2x)  
M3x12 SHCS (4x)



**Printed Parts Needed**


Rear Cover Panel (1x)  
Rear Center Support (1x)  
Motor Bay Cover Left (1x)  
Motor Bay Cover Right (1x)



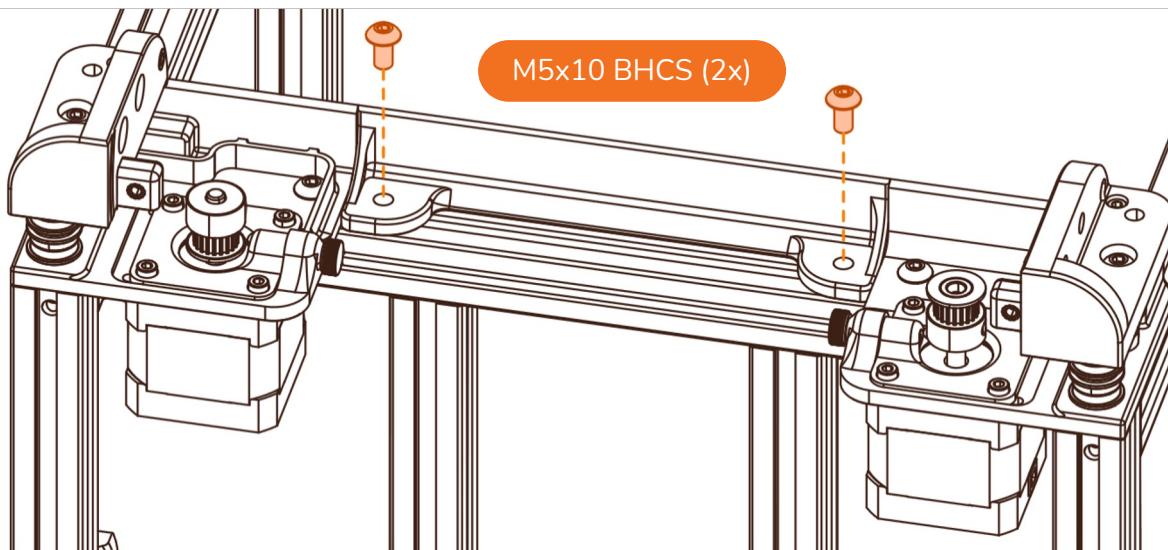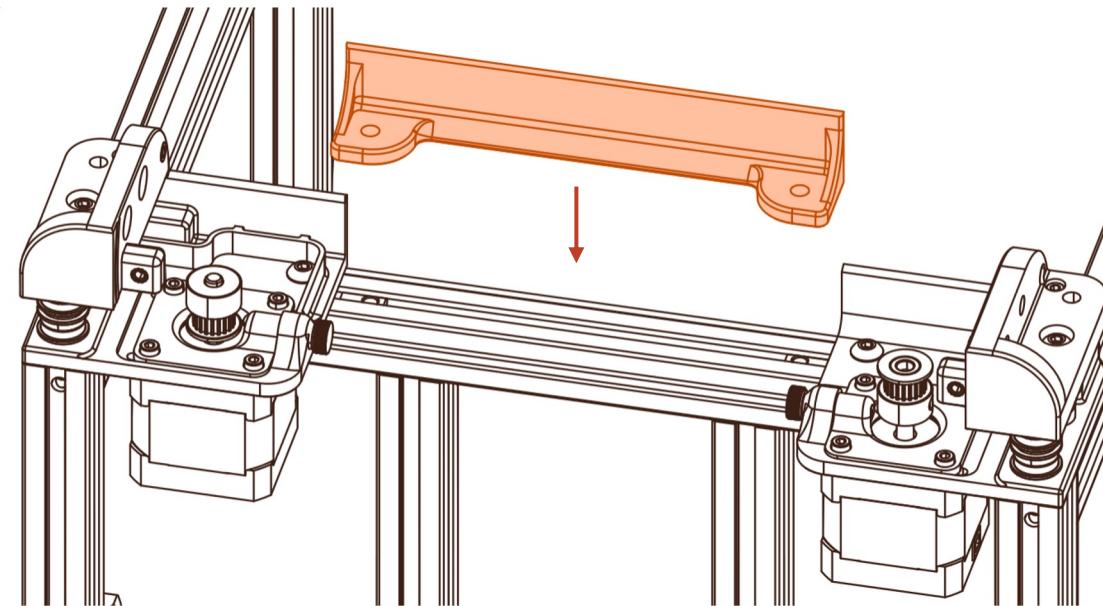

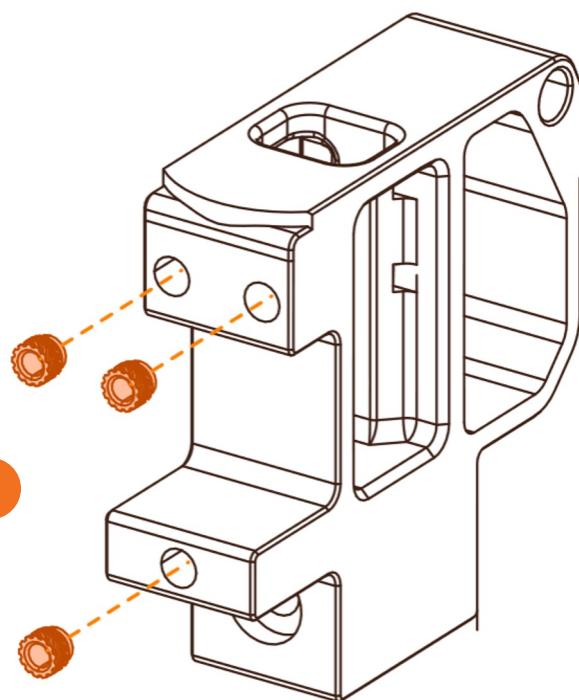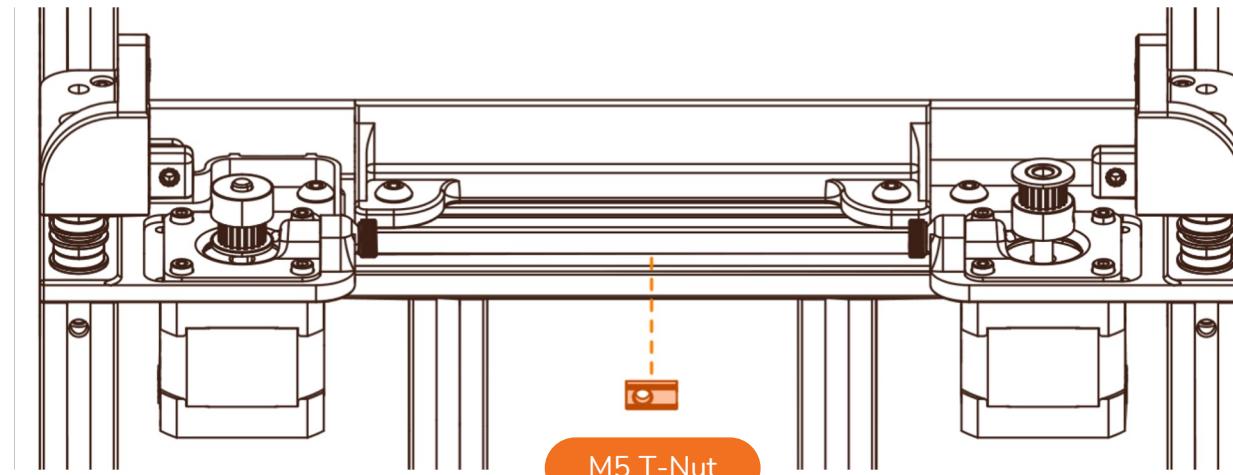

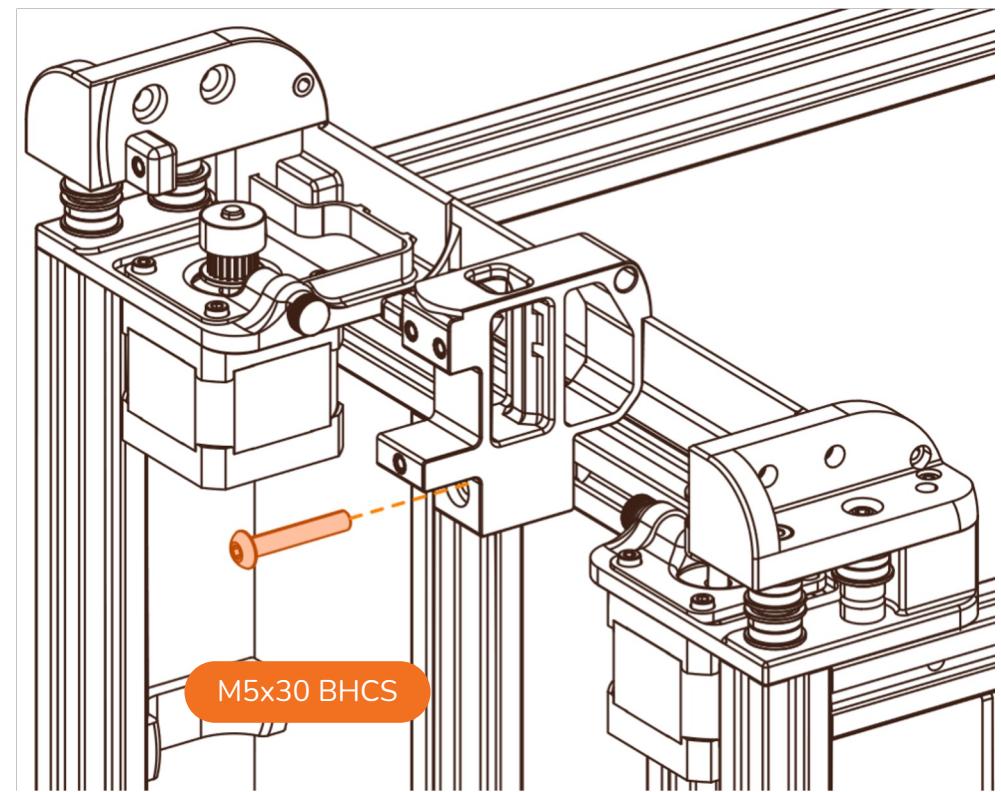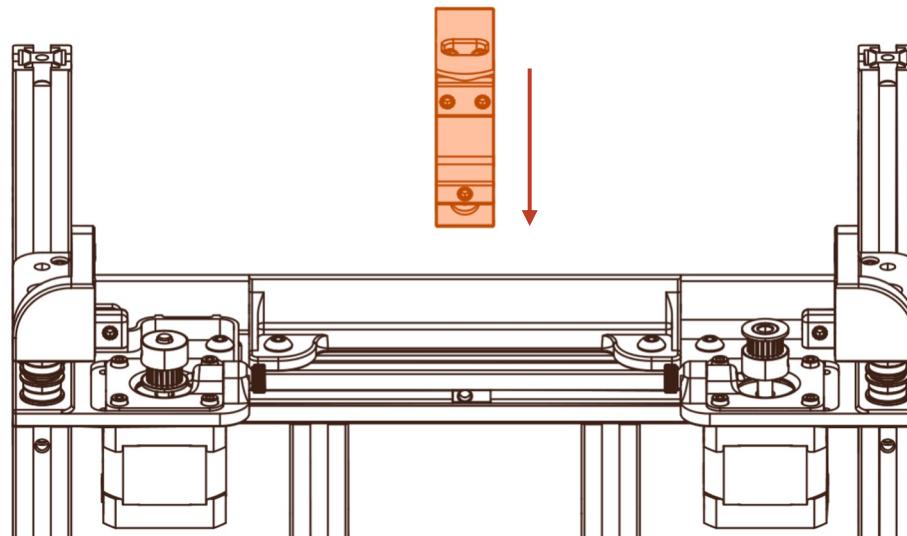

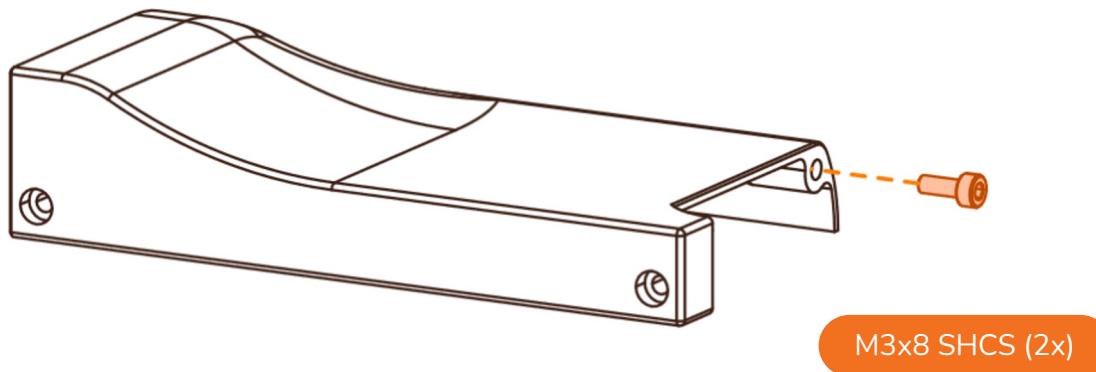




M3x8 SHCS (2x)

**PREPPING THE DRIVE UNIT COVERS**


These two M3 screws will act as hinge points for the drive covers. The screws thread directly into the cover.


Tighten fully; they're likely to make noise while being tightened. Continue until the bottom of the screw head is flush with the print surface.

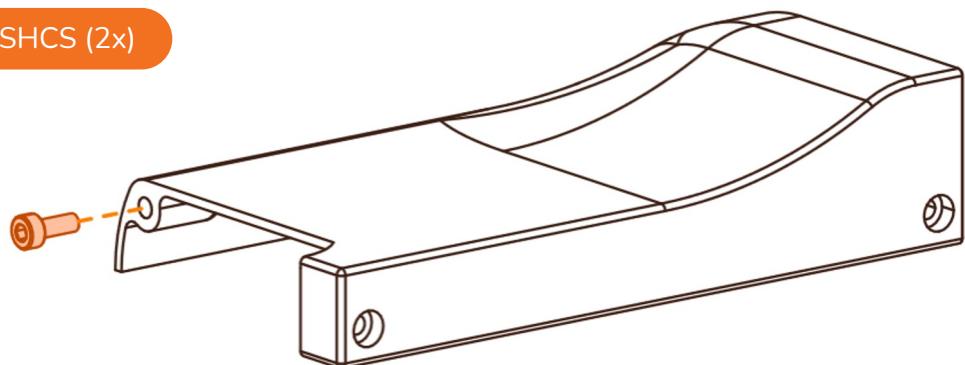


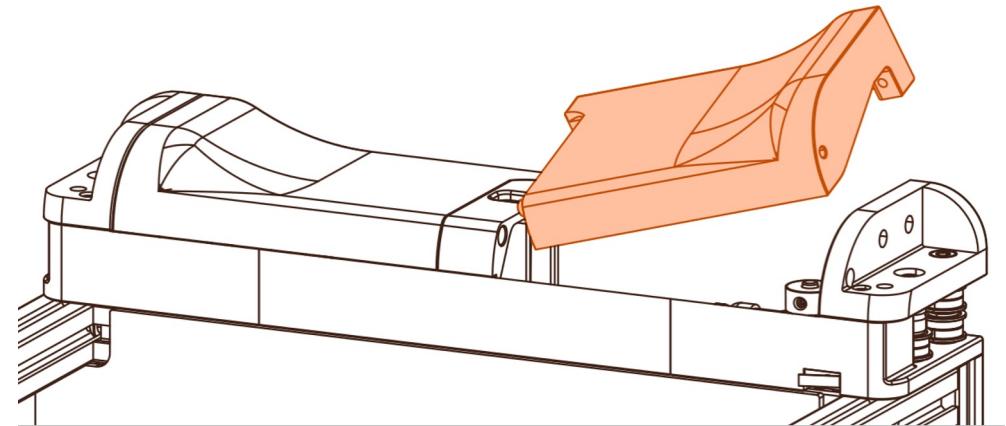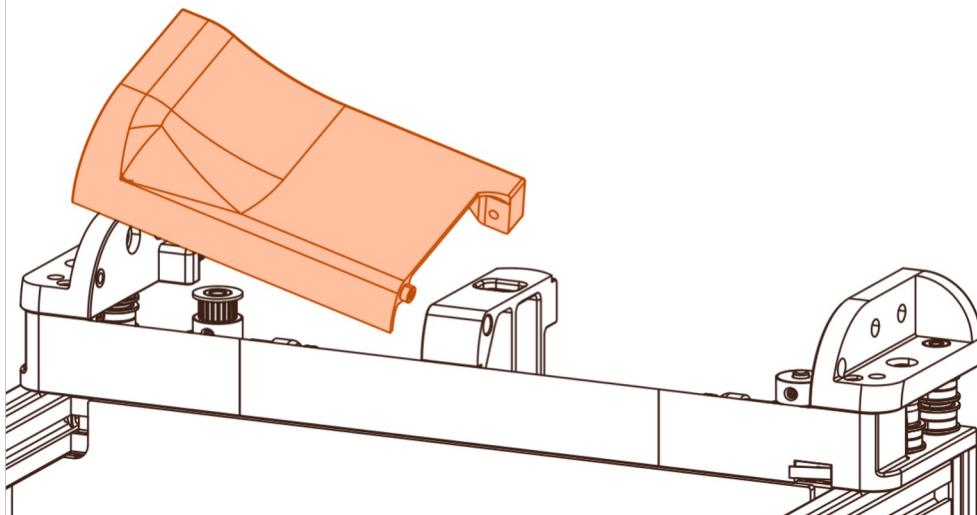
**HANG LOOSE**

Leave the M3x16 screws loose enough that the hinge of the Drive Cover Left & Right can still pivot. Tightening them too well will result in them not being able to hinge.

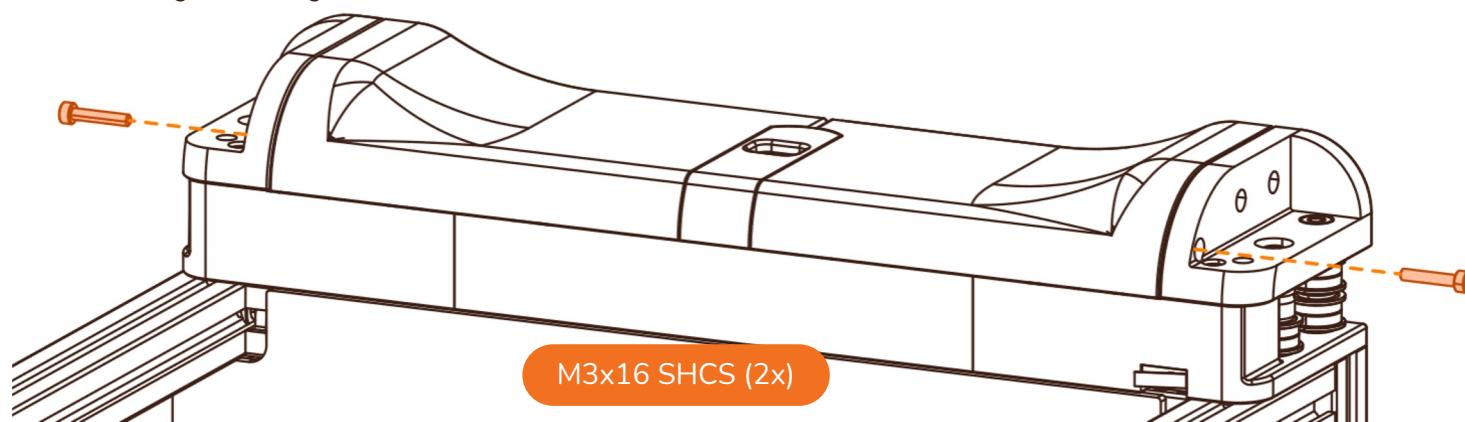


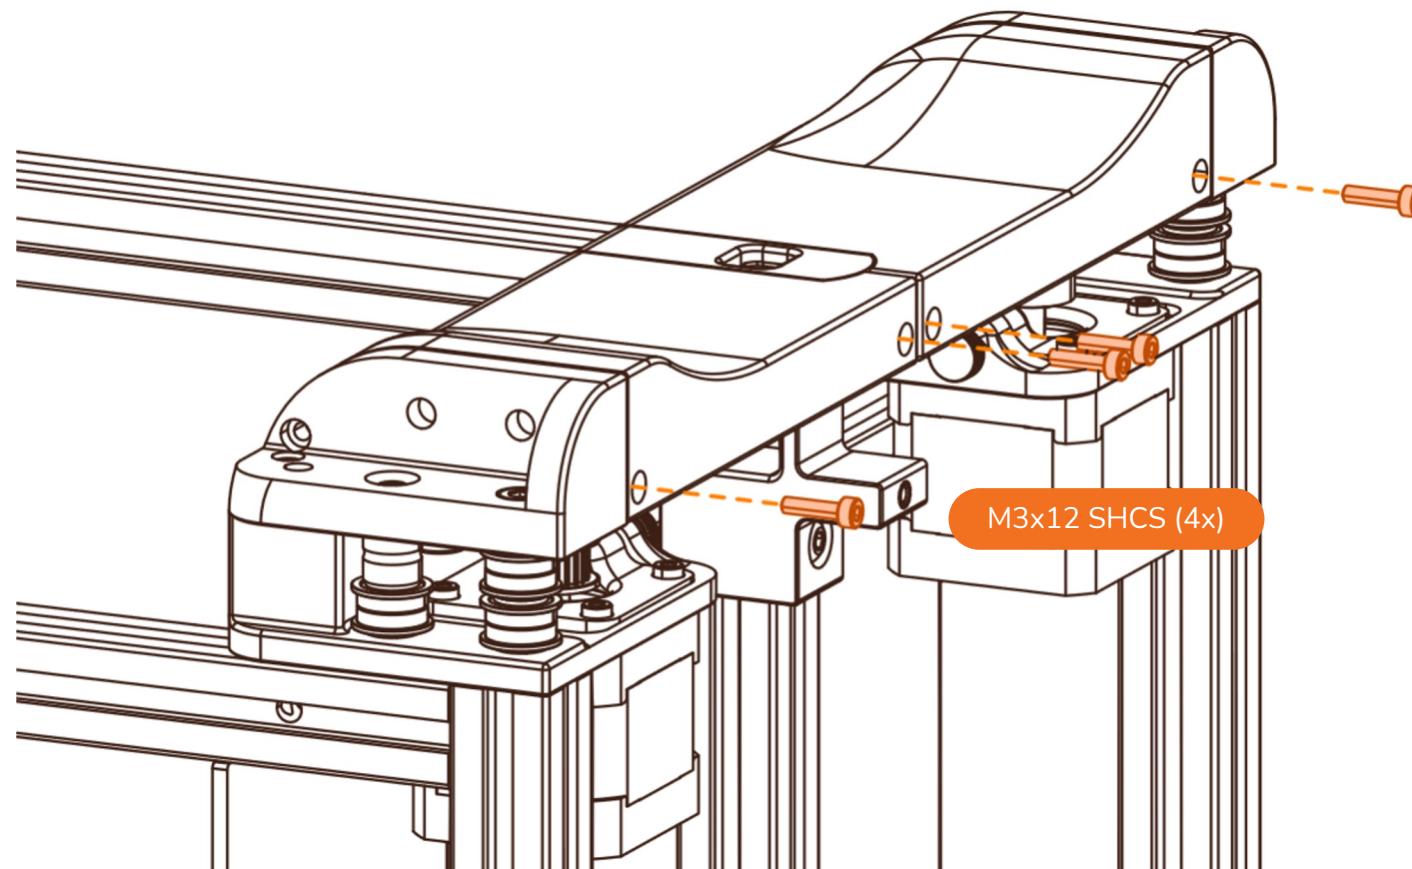

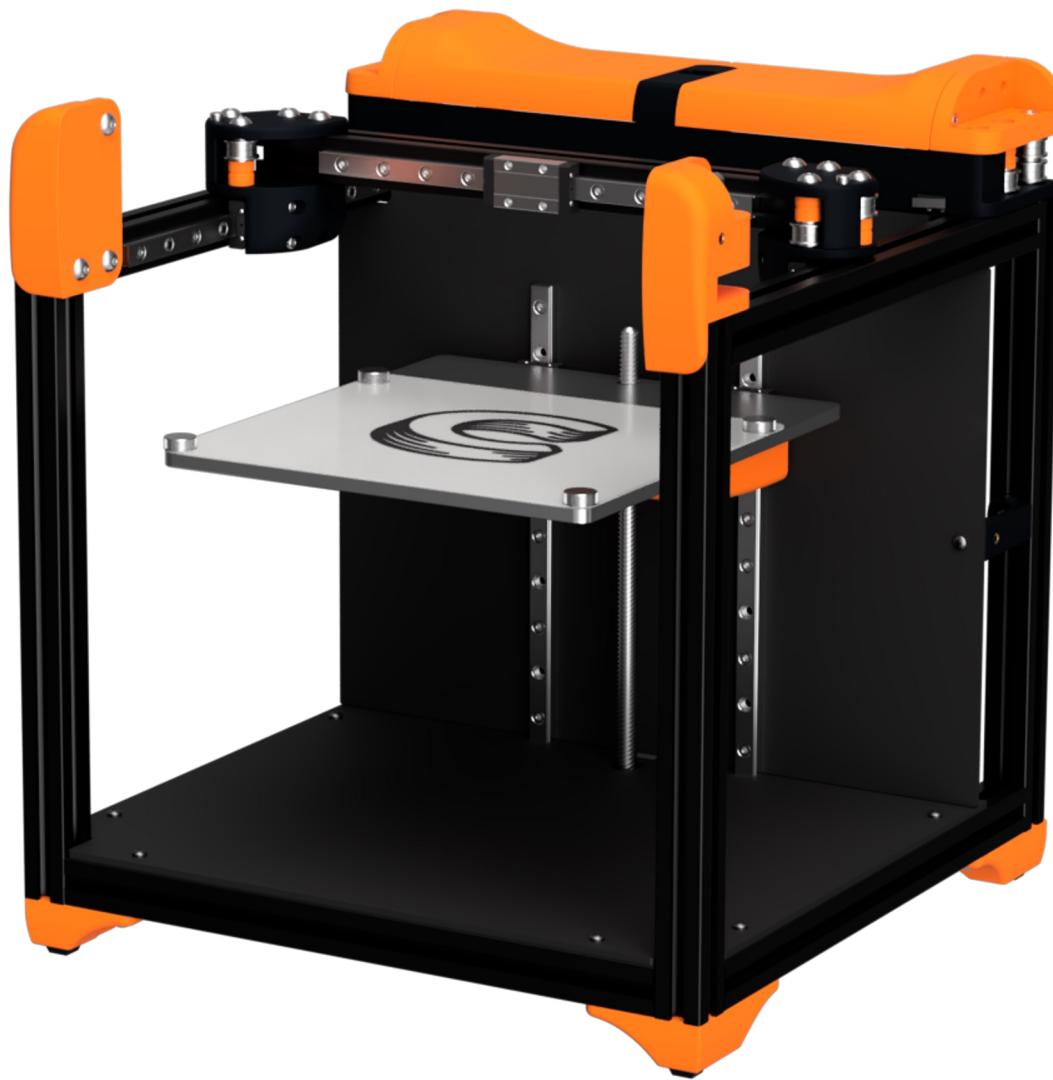

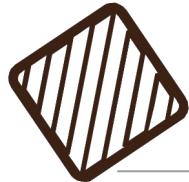**Difficulty**

Medium

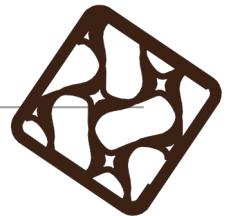**Tools Needed**

M3 Driver



**Hardware Needed**

M3 T-Nuts (12x)  
M3x8 SHCS (12x)  
MGN-H Linear Rail (2x)

**Printed Parts Needed**



MGN9 Rail Guide (2x)






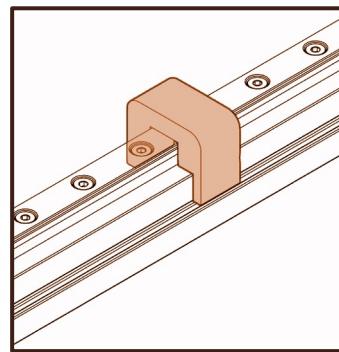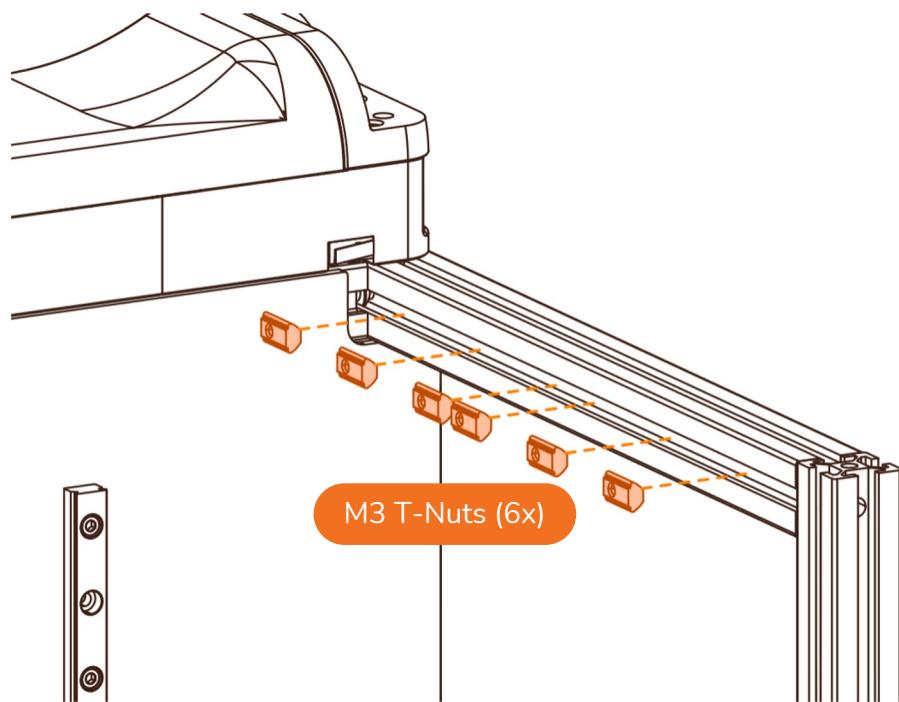


#### RAIL INSTALLATION GUIDES


Use the guides to position the rail in the center of the extrusion prior to fastening the screws.

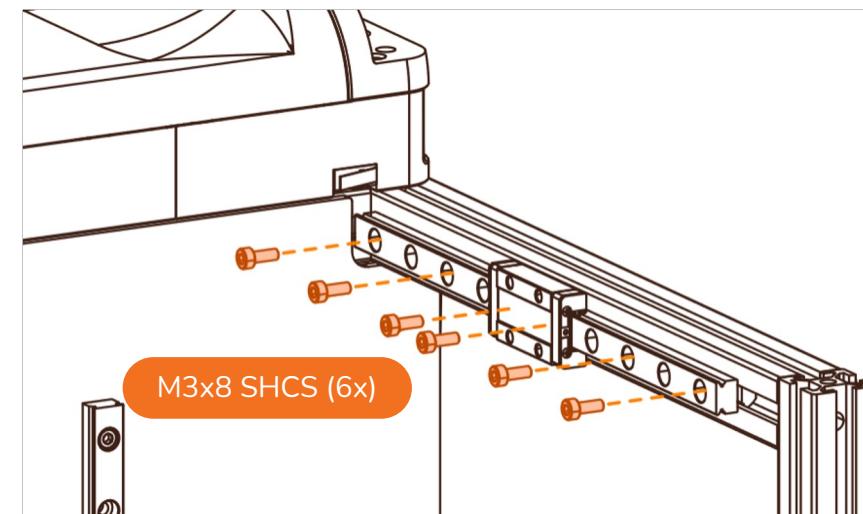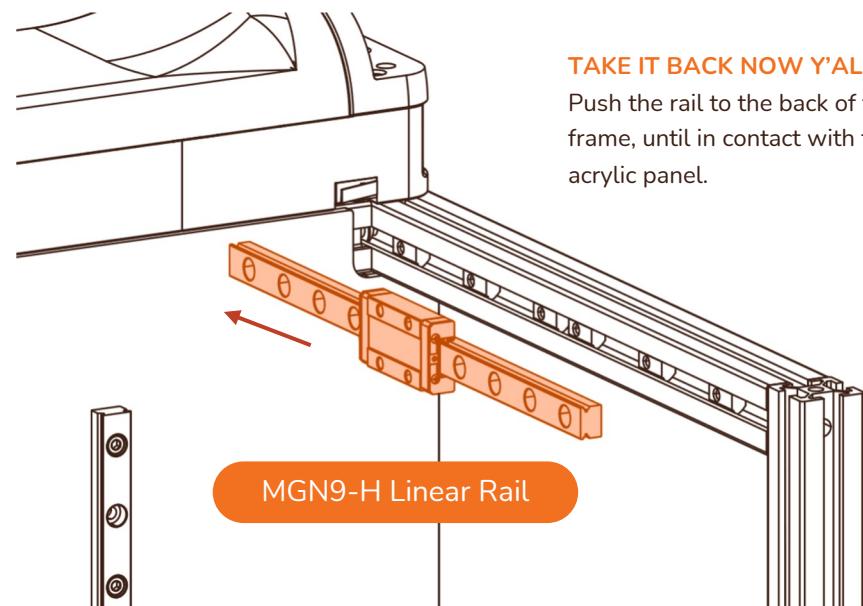

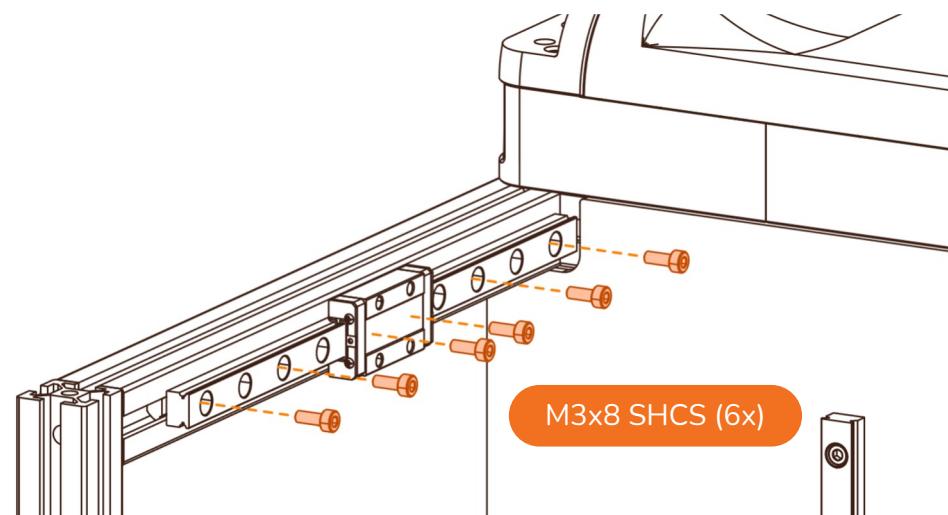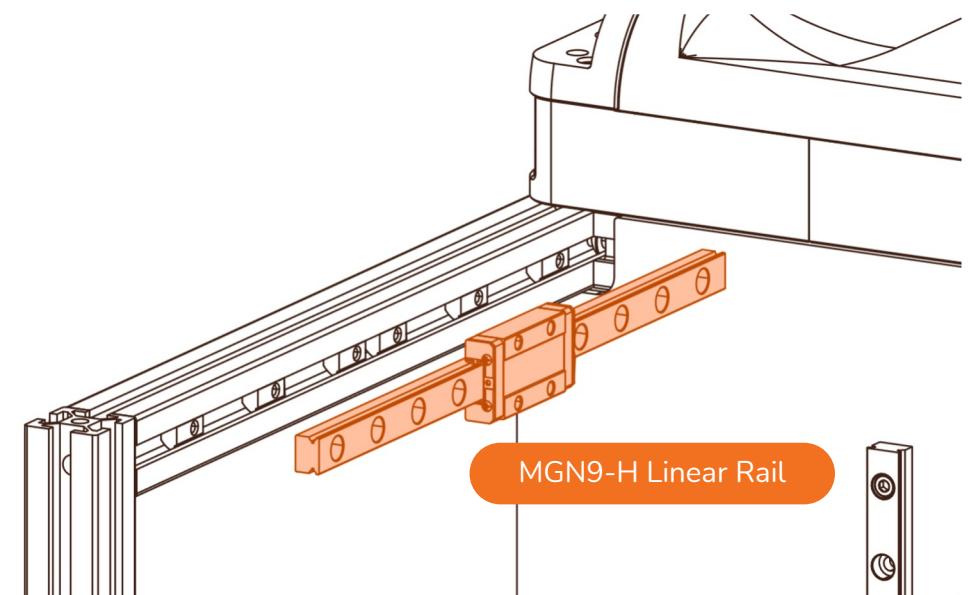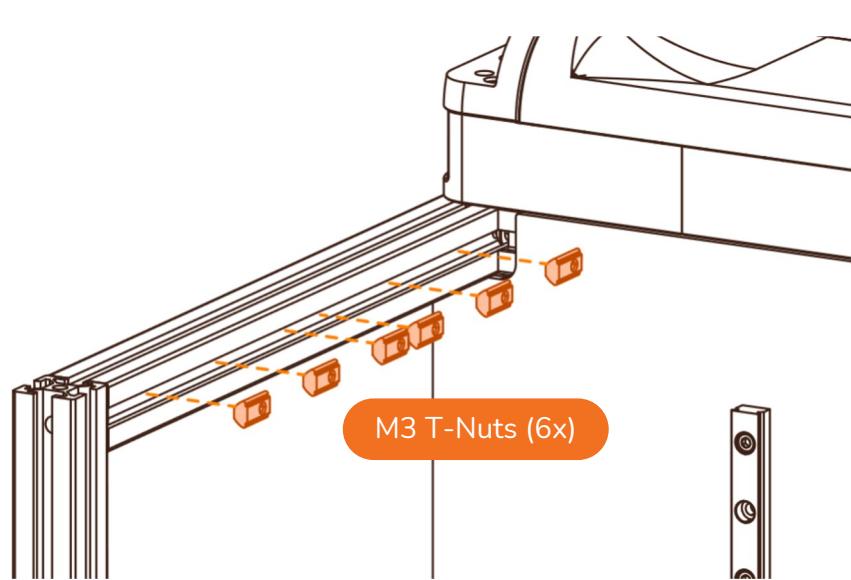

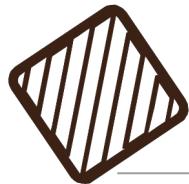**Difficulty**

Medium

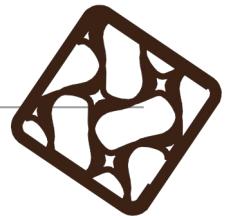**Tools Needed**

M2 Driver  
M3 Driver  
M5 Driver  
Heatset Insert Tool  
Soldering Iron (Not Included)

**Hardware Needed**


M3 Heatset Inserts (4x)  
M5 Washer (4x)  
F695 Bearing (4x)  
M5x30 Button Head Cap Screw (2x)


M5 T-Nuts (4x)  
M5x10 Button Head Cap Screw (4x)


**Printed Parts Needed**

Front Idler Left (1x)  
Front Idler Right (1x)




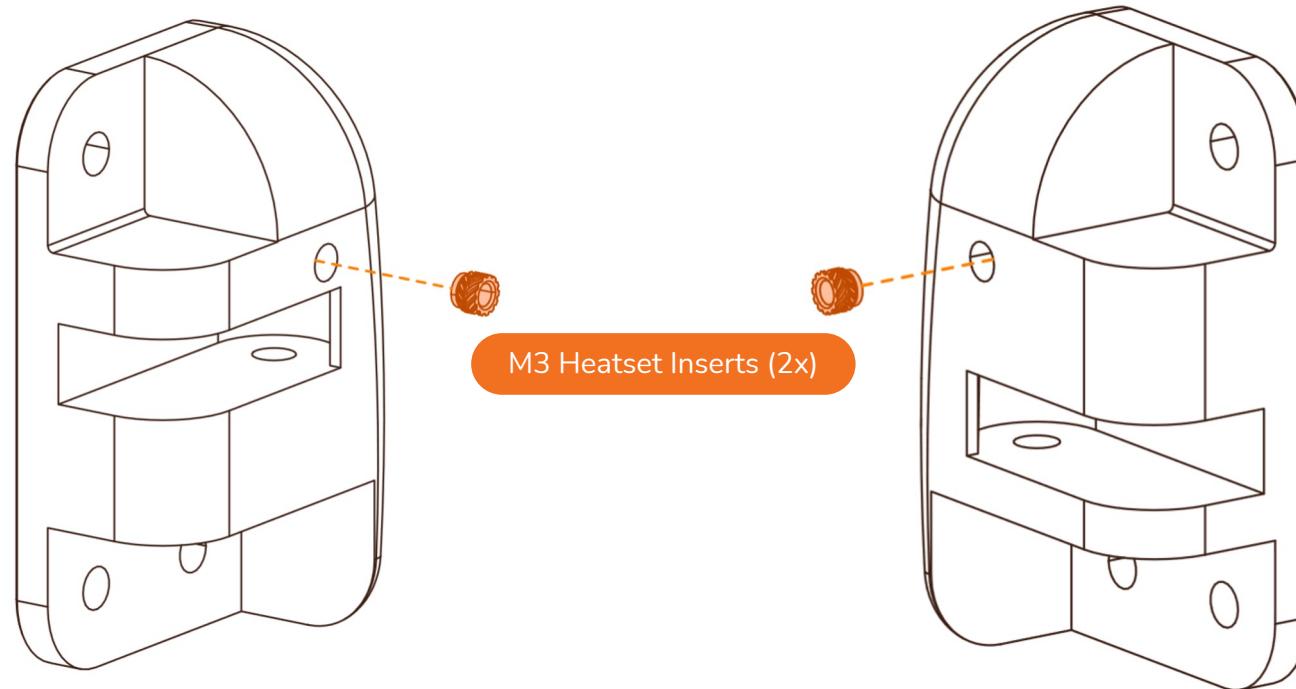



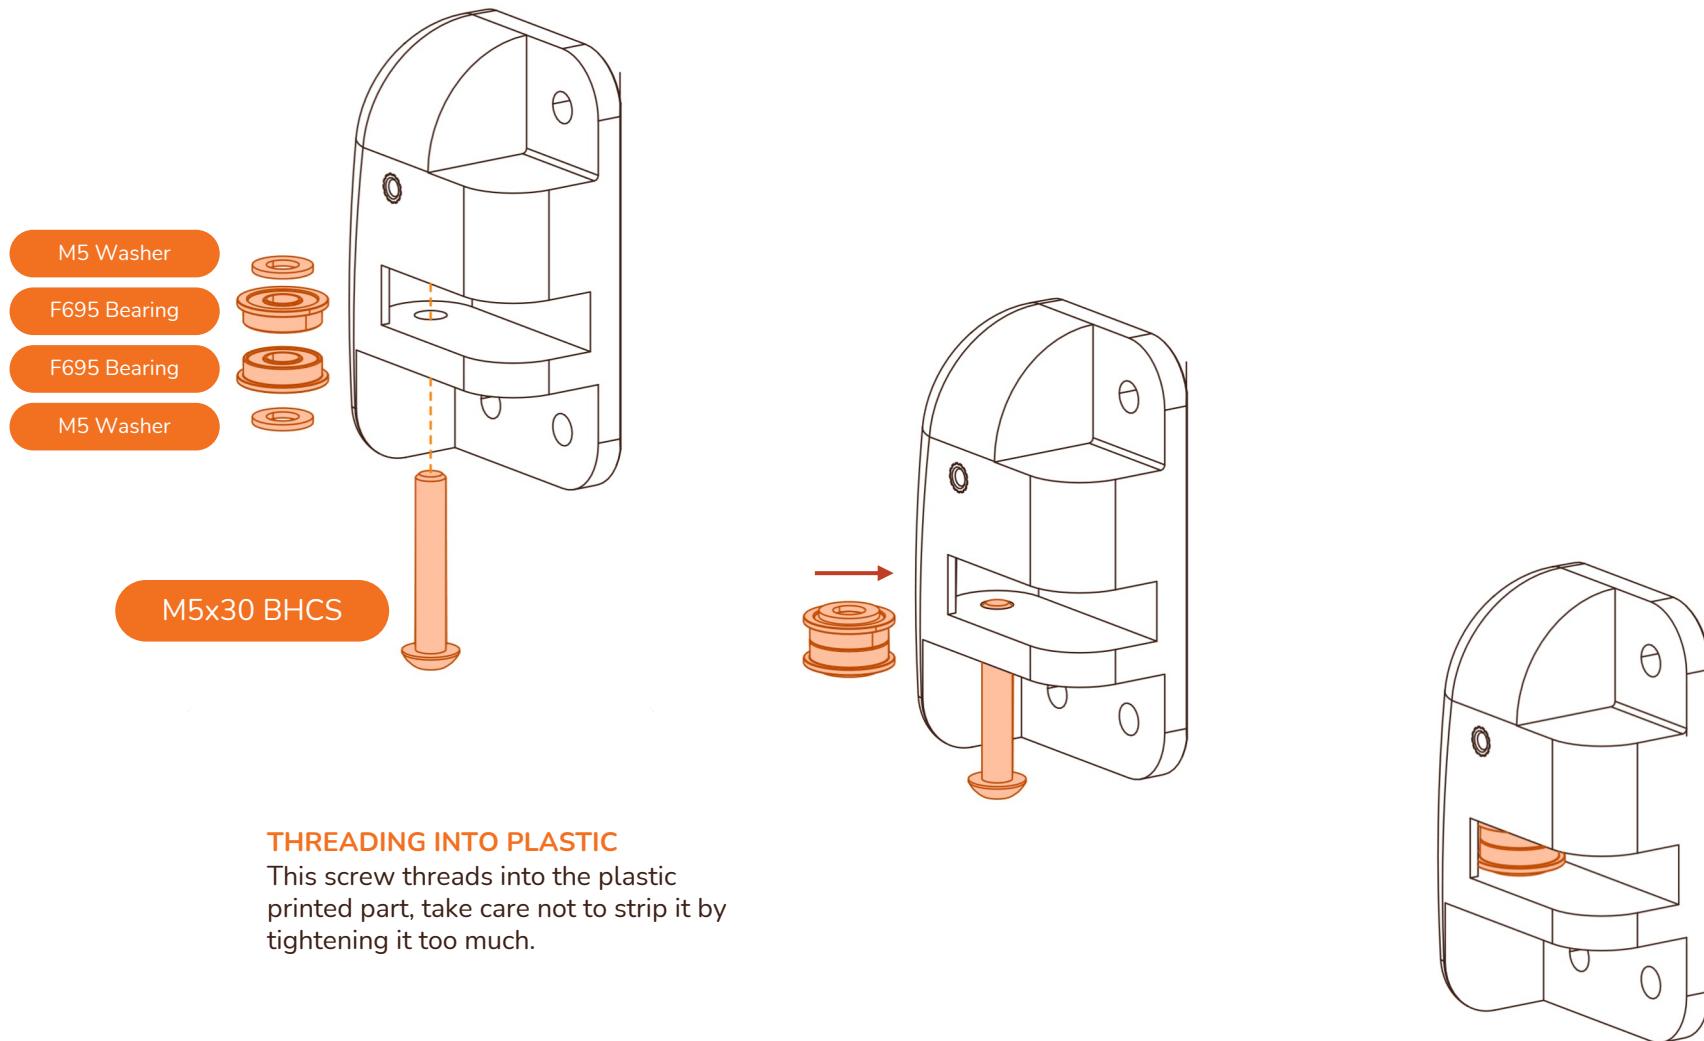



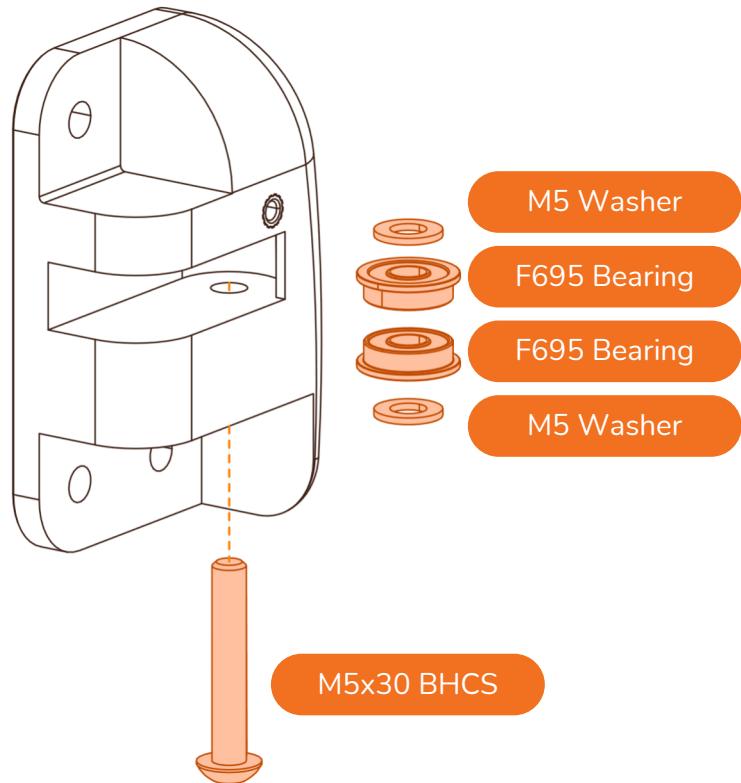



#### THREADING INTO PLASTIC


This screw threads into the plastic printed part, take care not to strip it by tightening it too much.

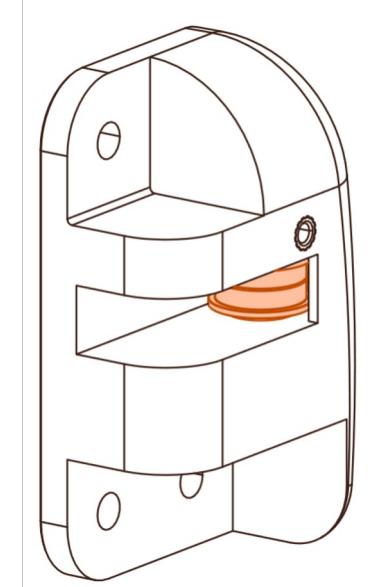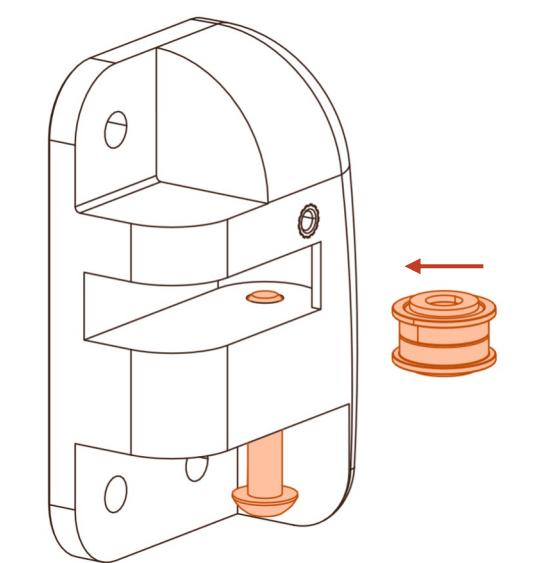

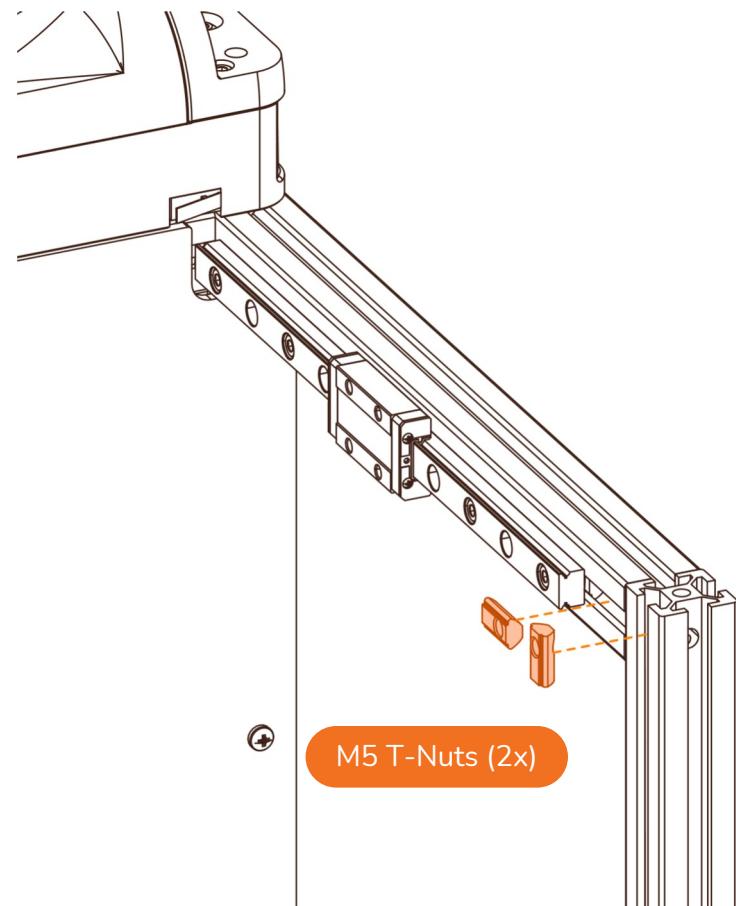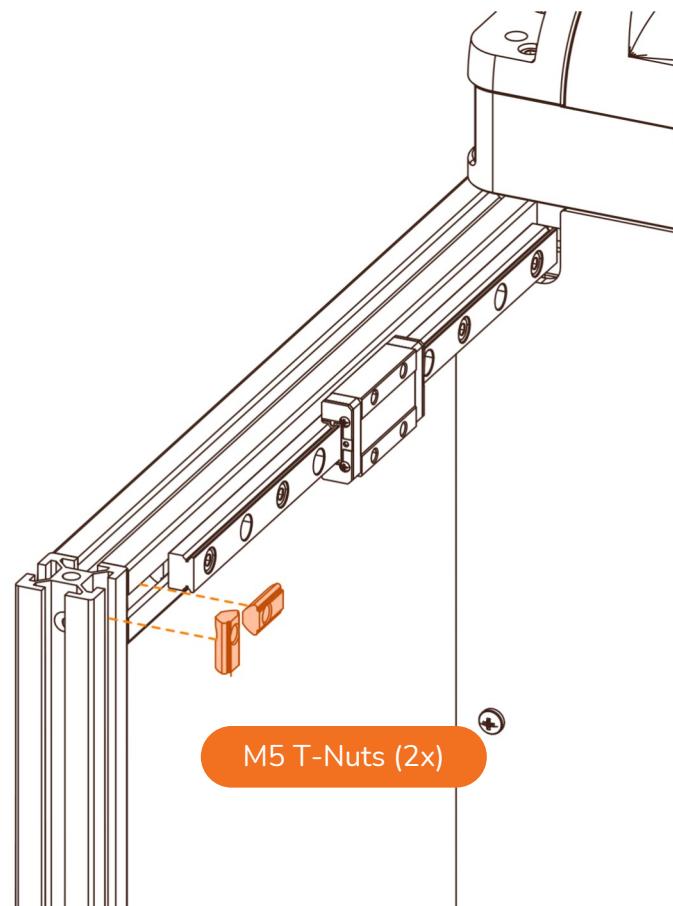

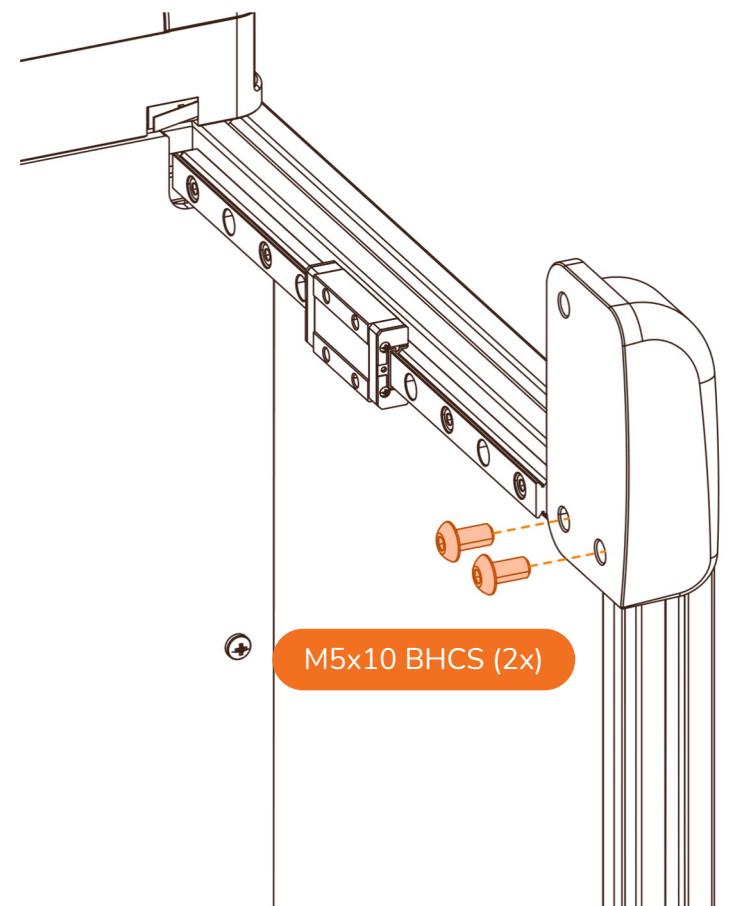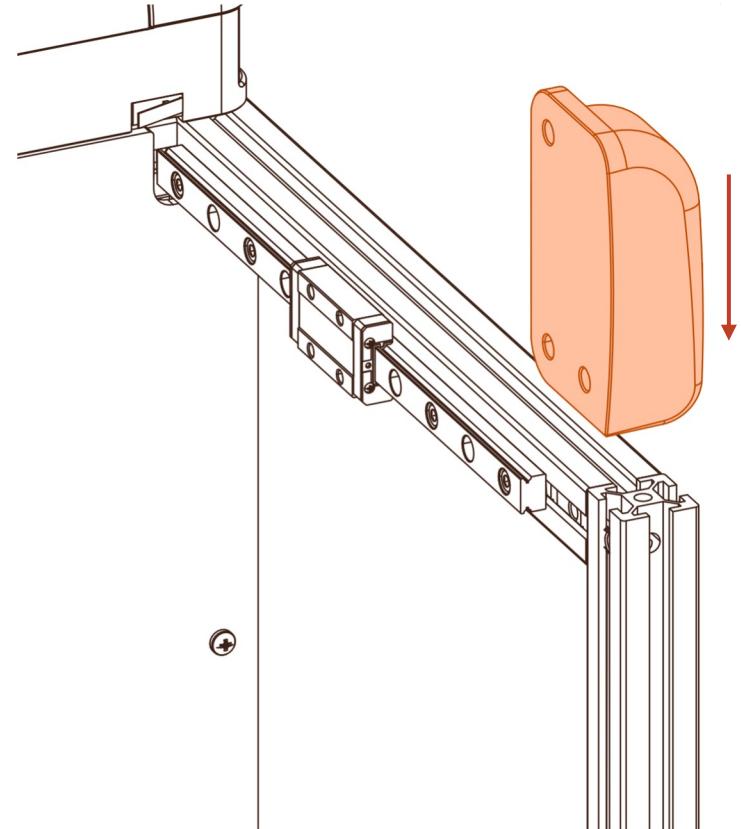

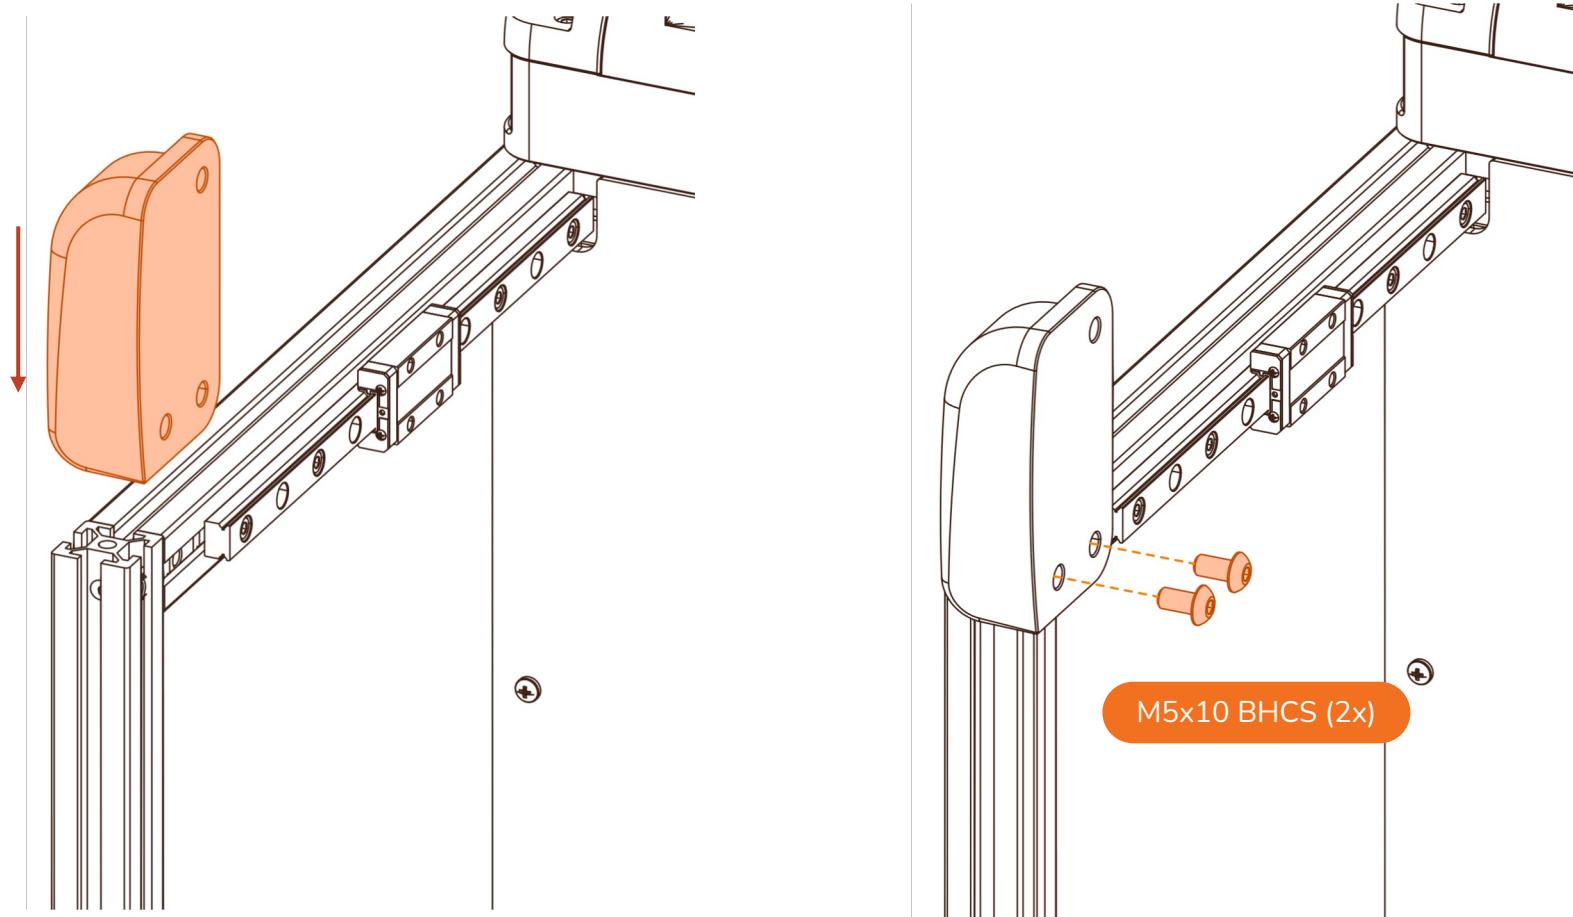


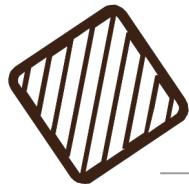**Difficulty**

Medium

**Tools Needed**

M2 Driver  
M3 Driver  
M5 Driver  
Heatset Insert Tool  
Soldering Iron (Not Included)

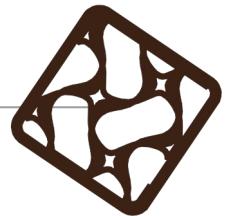
**Hardware Needed**

M3 Heatset Inserts (2x)  
M5x30 Button Head Cap Screw (2x)  
F695 Bearings (4x)  
M5 Washers (4x)  
M3x30 Socket Head Cap Screw (1x)


**Printed Parts Needed**

XY Lower Left (1x)  
XY Upper Left (1x)  
Printed Spacer (2x)



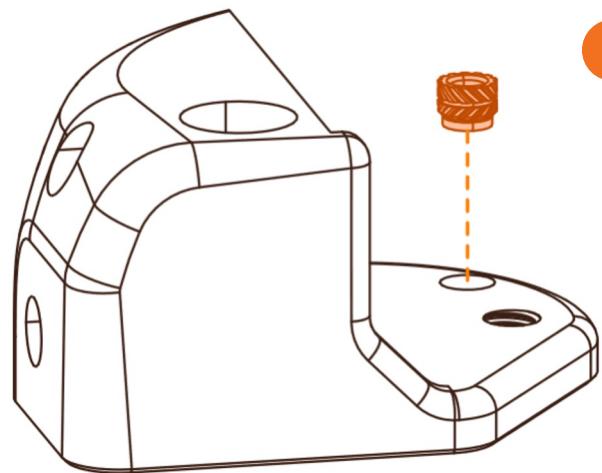




M3 Heatset Inserts (2x)

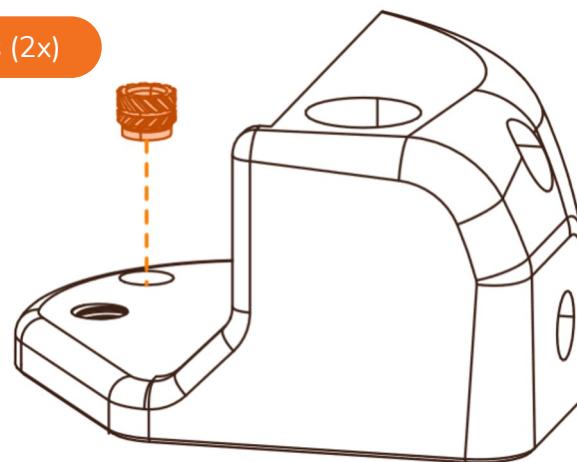



**MIRROR MIRROR ON THE WALL...**

The X/Y joints use similar, *but not identical*, mirrored parts. Be sure to closely match the printed part you are using to the picture to ensure you are assembling the correct joint.

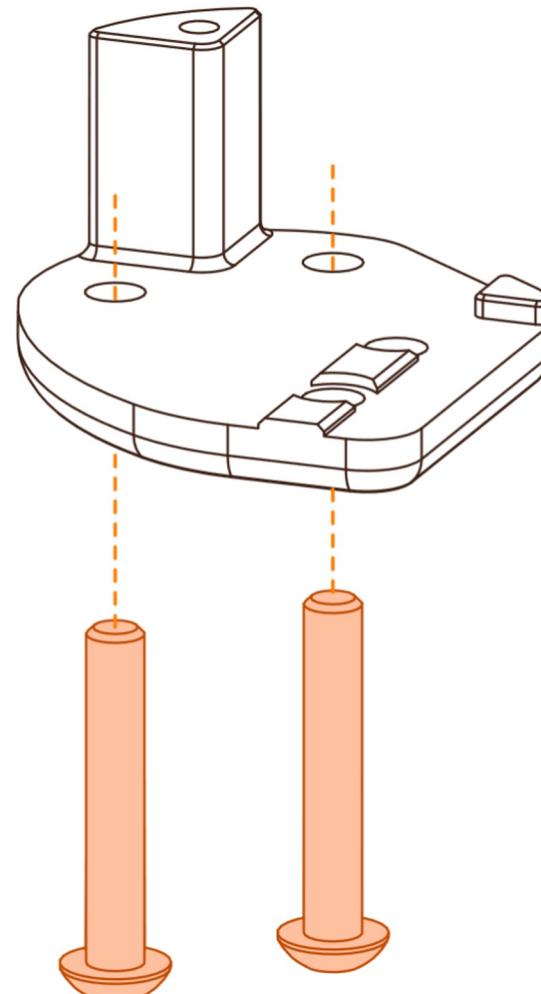
**M5x30 BHCS (2x)**

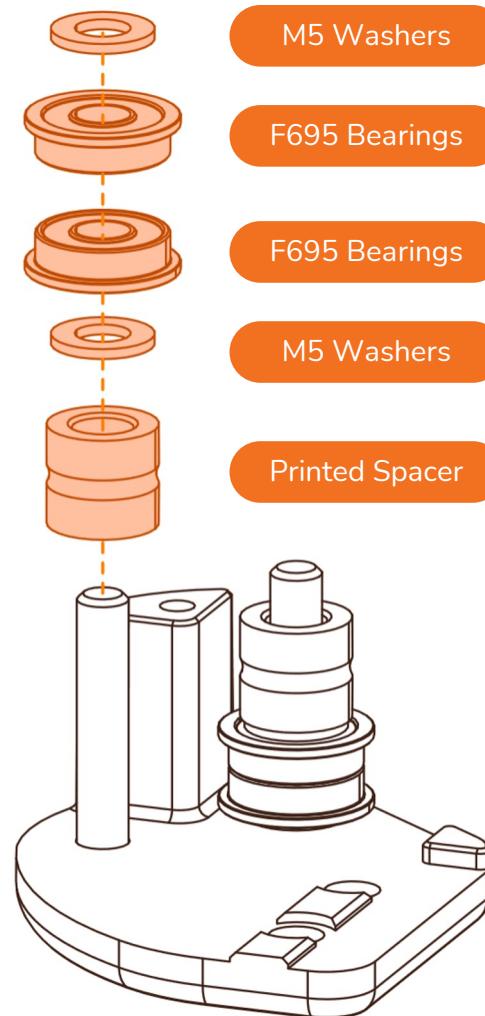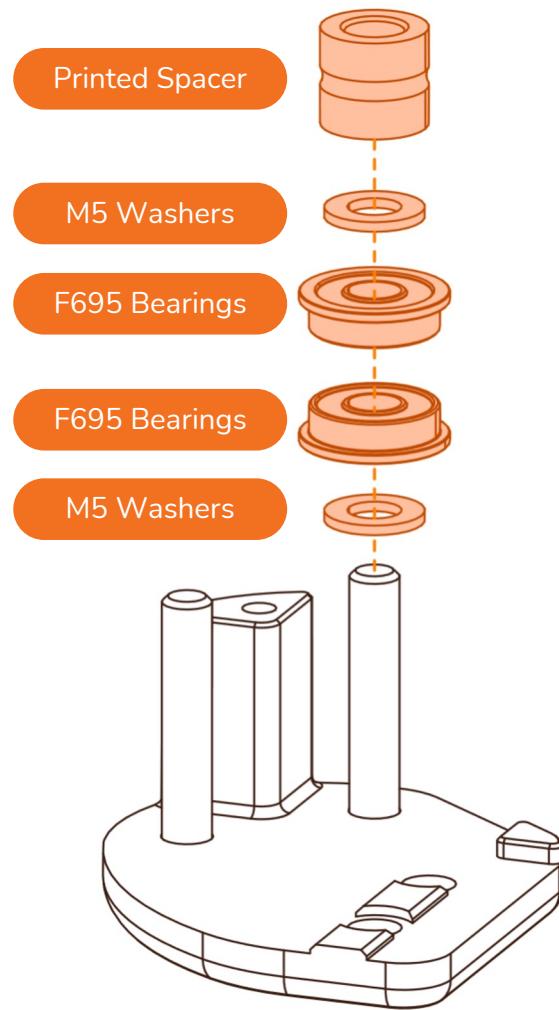

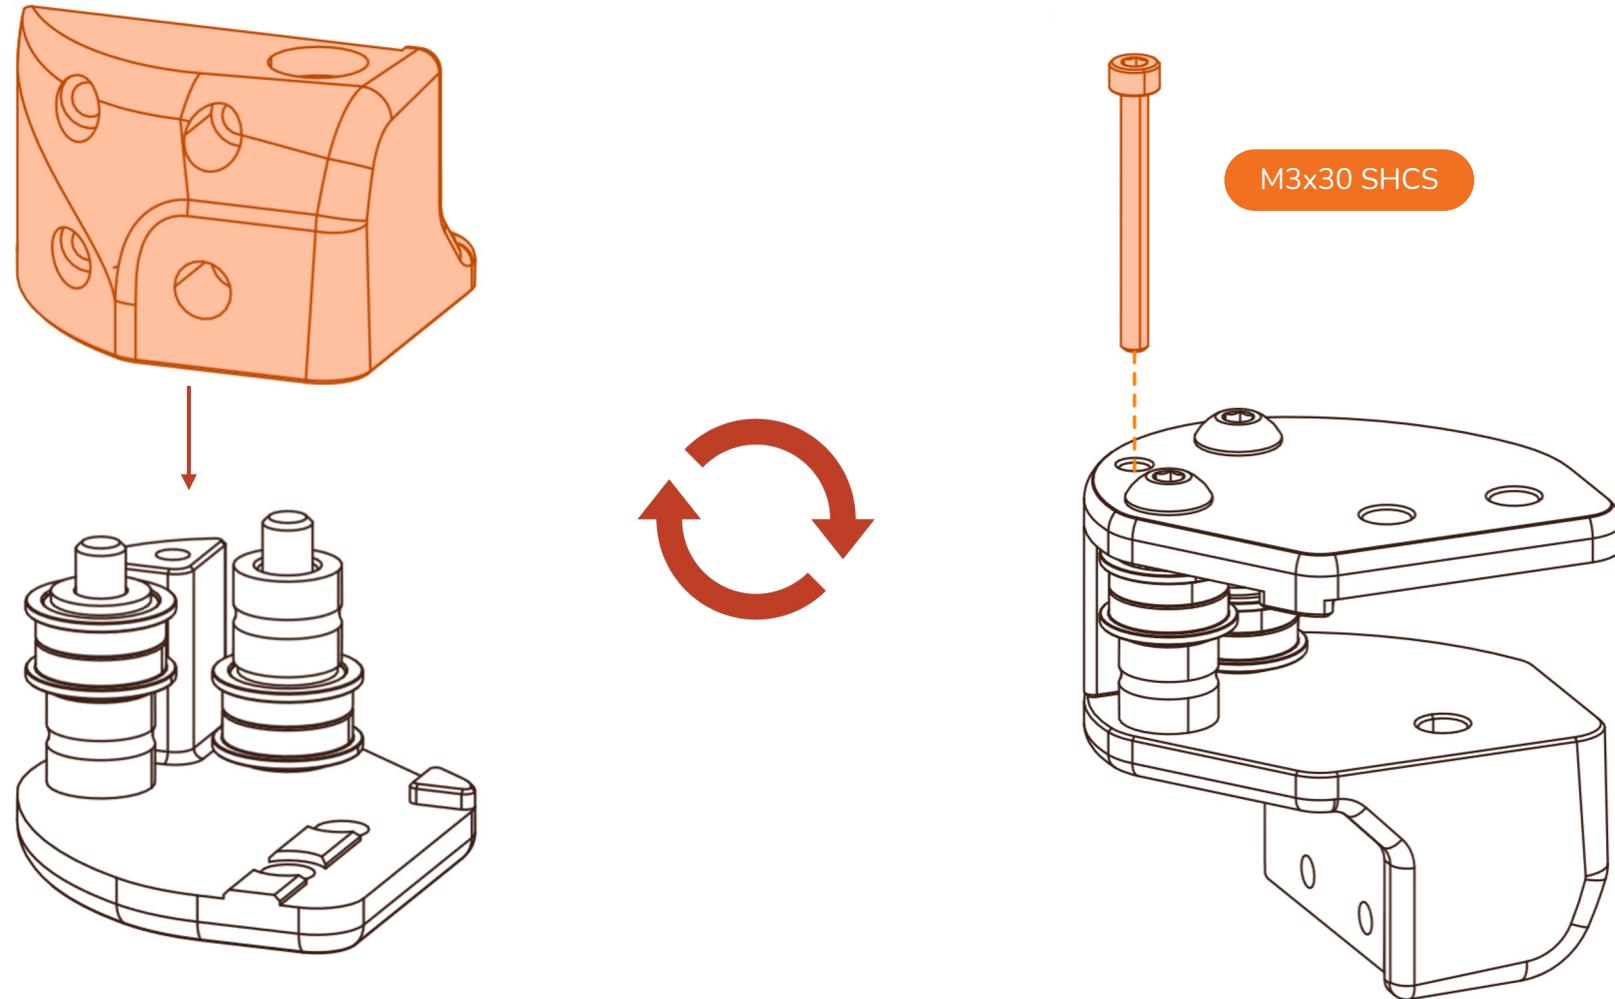

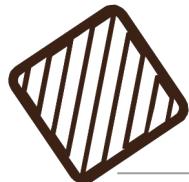**Difficulty**

Medium

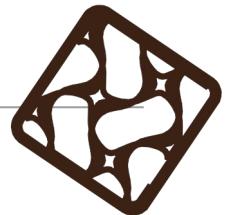**Tools Needed**


M2 Driver  
M3 Driver  
M5 Driver  
Heatset Insert Tool  
Soldering Iron (Not Included)

**Hardware Needed**

M5x30 Button Head Cap Screw (2x)  
F695 Bearings (4x)  
M5 Washers (4x)  
M3x30 Socket Head Cap Screw (1x)


**Printed Parts Needed**



XY Lower Left (1x)  
XY Upper Left (1x)  
Printed Spacer (2x)



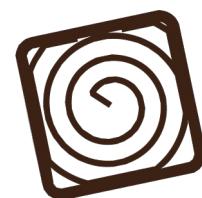



**...WHO IS THE FAIREST OF THEM ALL**

The X/Y joints use similar, but not the same, parts. Closely match the printed part you are using to the picture to ensure you are assembling the correct joint.

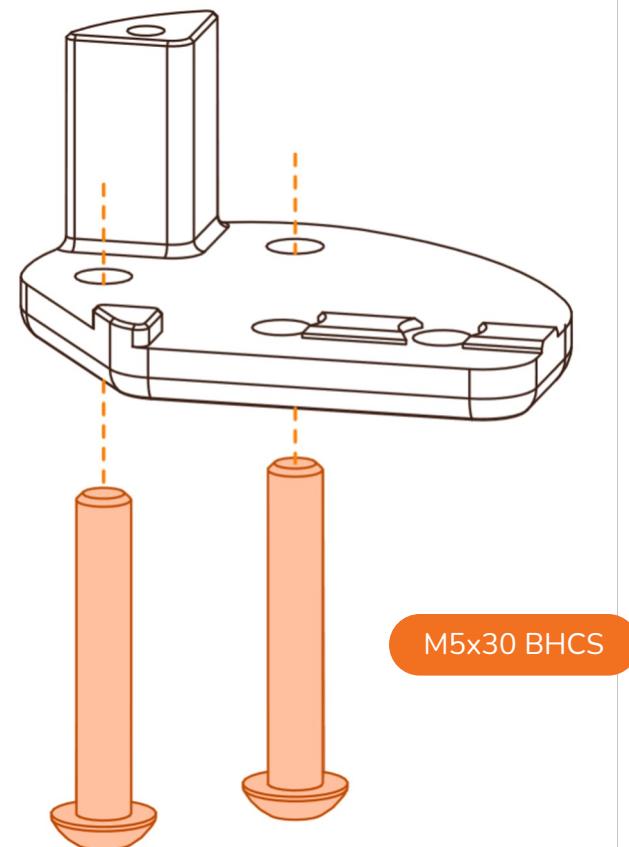
**M5x30 BHCS**

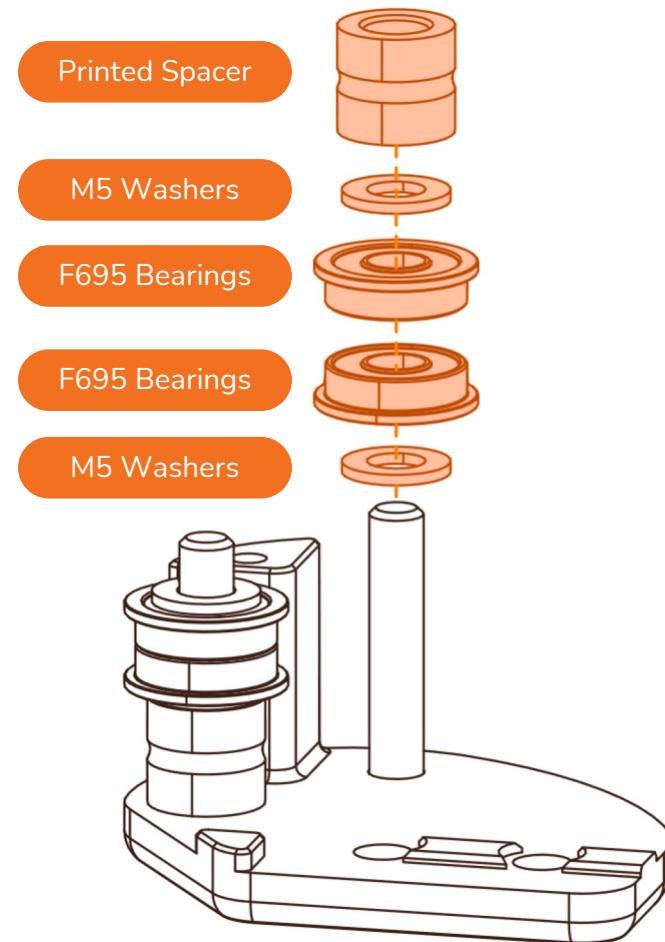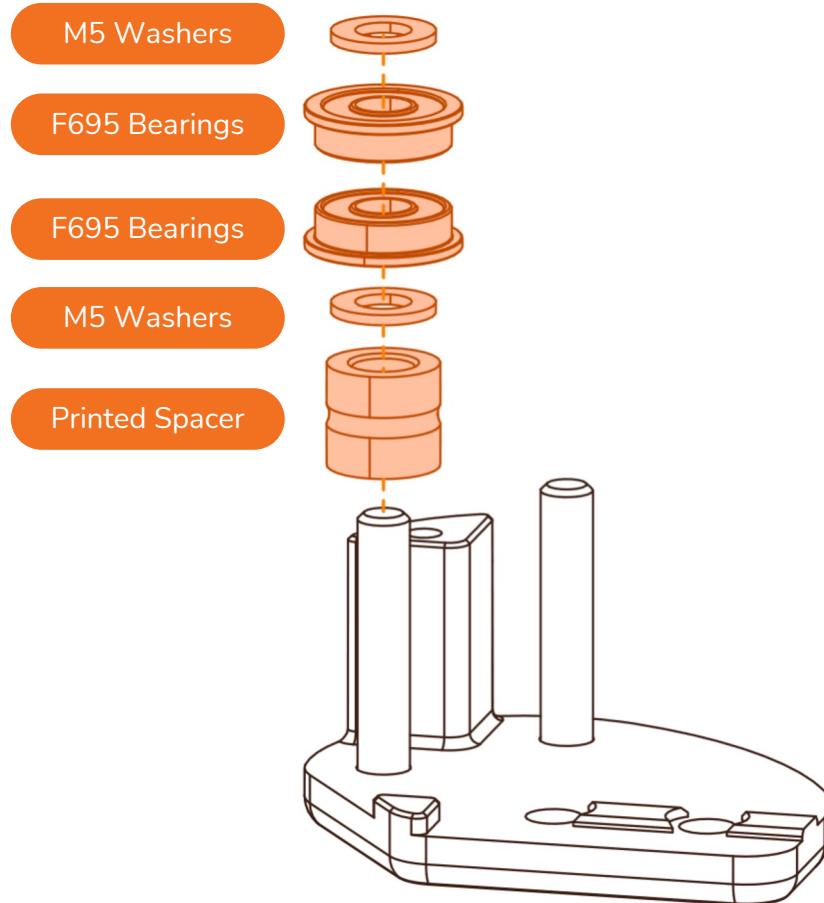

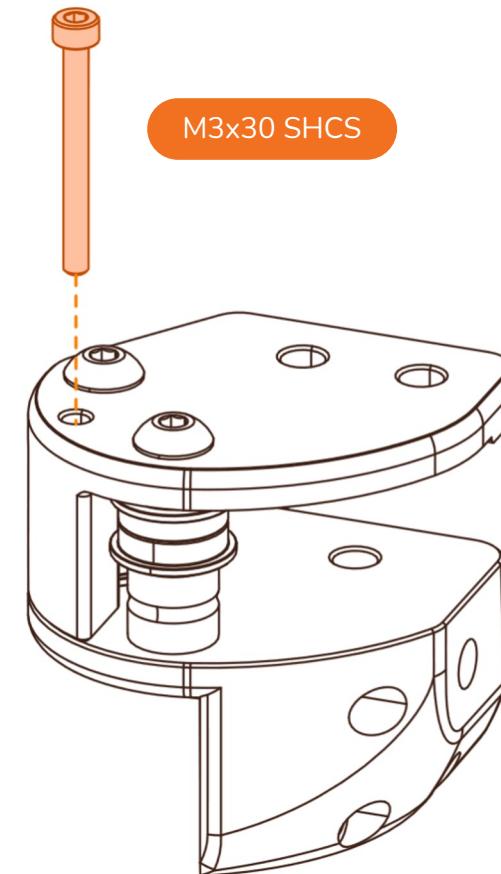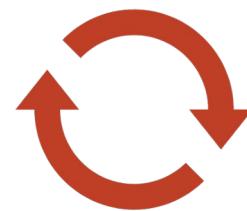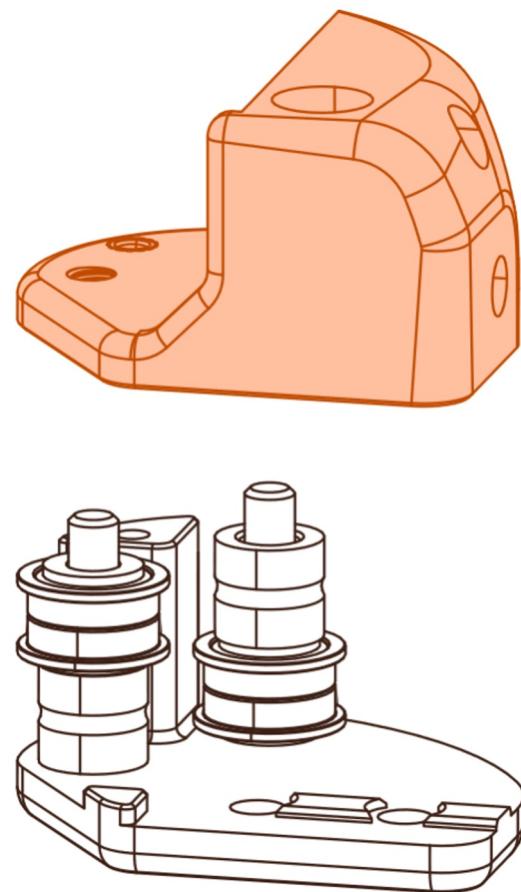

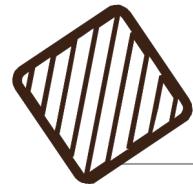**Difficulty**

Easy

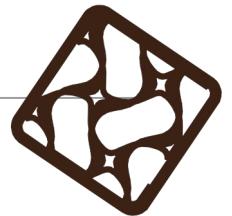**Tools Needed**

M2 Driver  
M3 Driver  
M5 Driver  
Heatset Insert Tool  
Soldering Iron (Not Included)

**Hardware Needed**


M5x10 Button Head Cap Screw (4x)  
M5x30 Button Head Cap Screw (2x)  
M3x8 Socket Head Cap Screw (10x)  
M3x16 Socket Head Cap Screw (8x)

M5 T-Nuts (6x)  
M3 T-Nuts (10x)



**Printed Parts Needed**

Rail Installation Guides (2x)

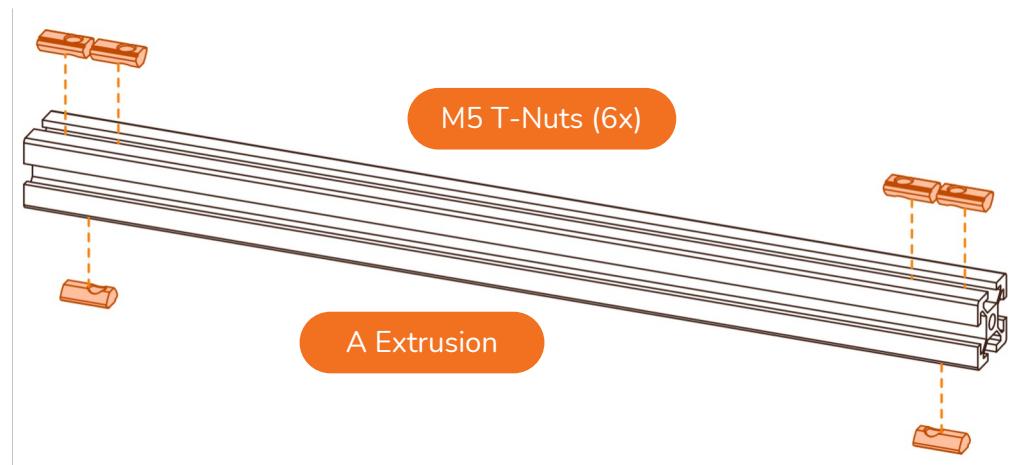

**WHEN WILL MY REFLECTION SHOW...**




Double-check that your X/Y gantry joints follow the diagrams on this page accurately. Otherwise, a partial or full disassembly of the X/Y gantry may be required to resolve issues.

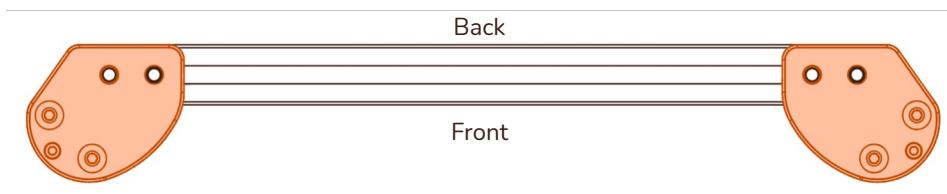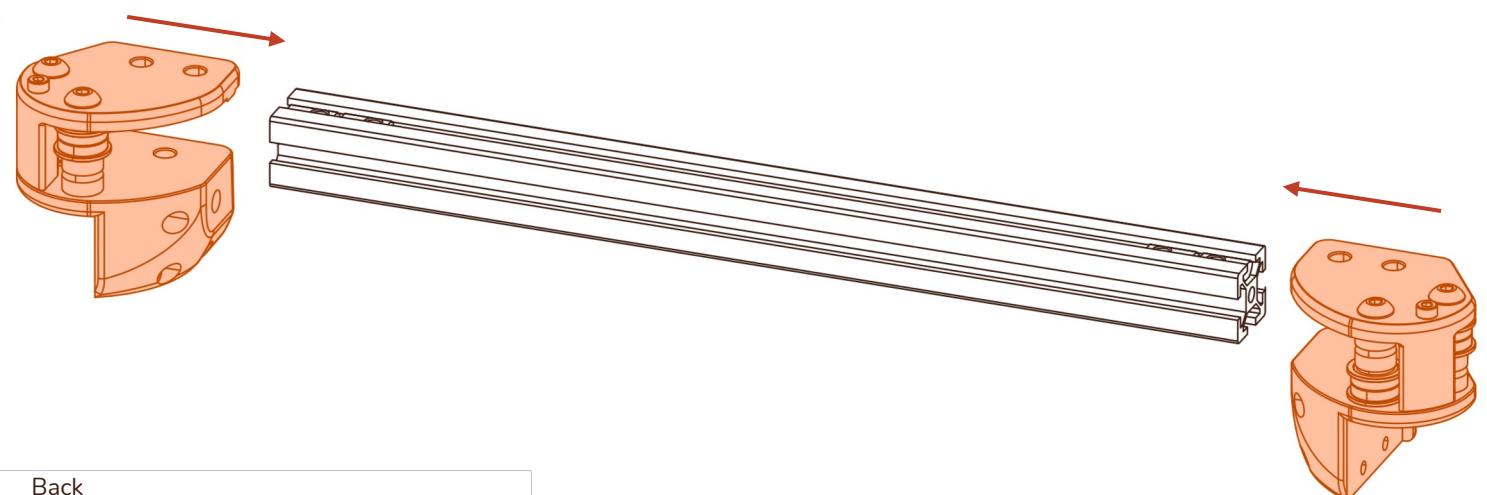


**NOT SO FAST**


Leave these 6 screws loose for now. We will tighten them at a later step, when the gantry is installed in the machine.



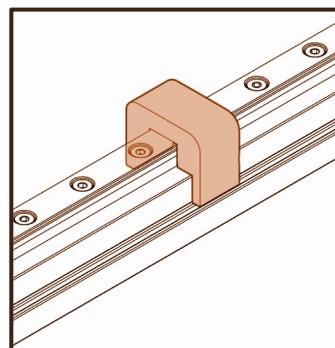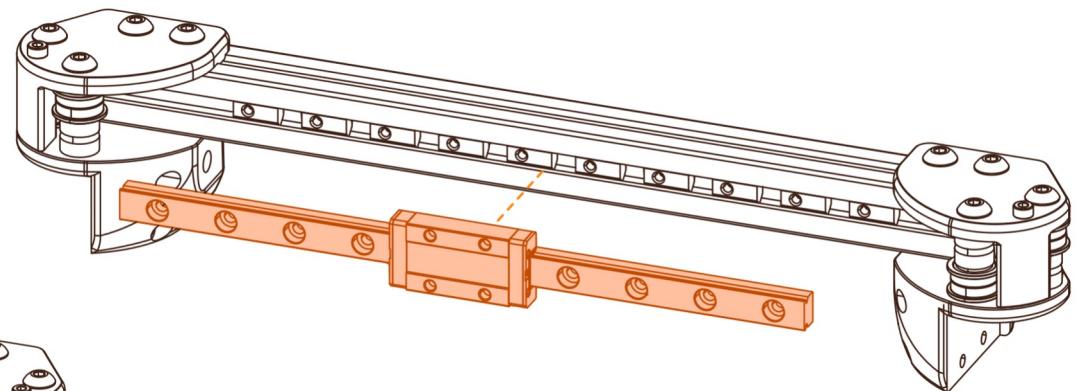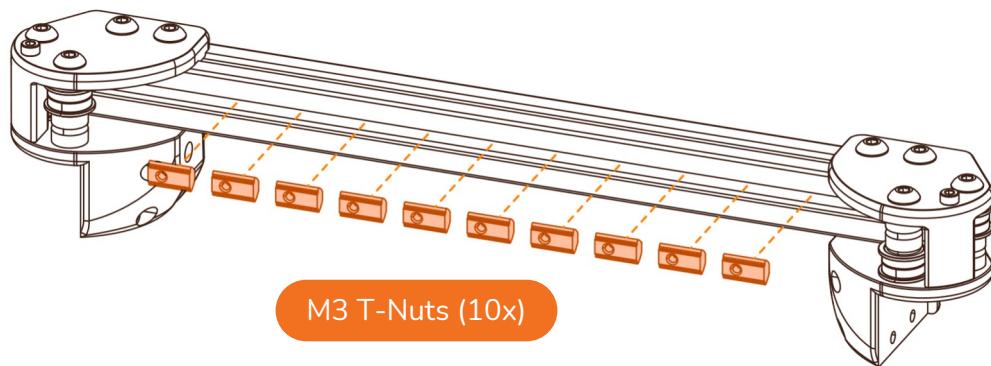



**RAIL INSTALLATION GUIDES**  
Use the guides to position the rail in the center of the extrusion prior to fastening the screws.

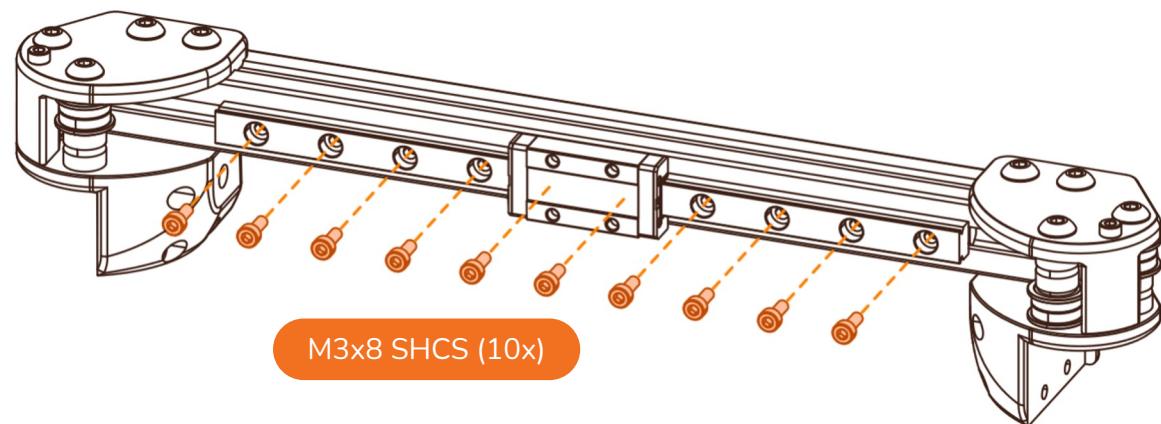

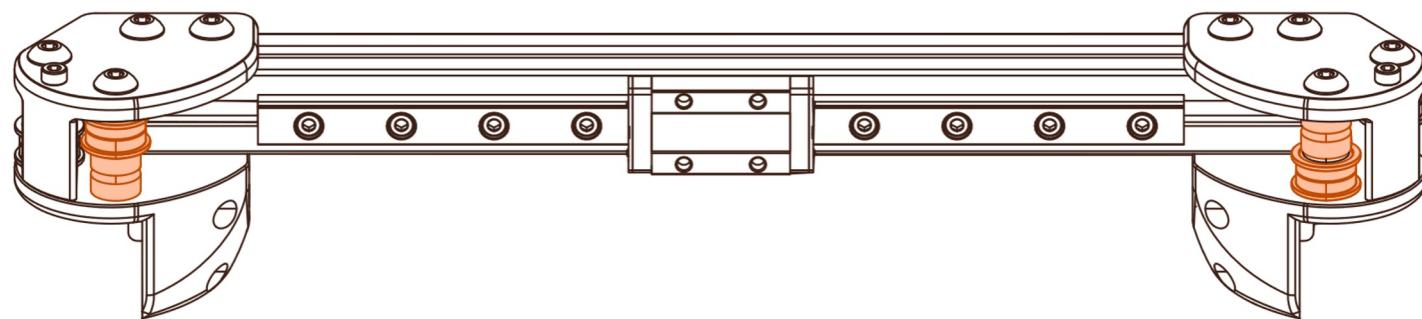
**TRUST BUT VERIFY**

Double check your work. The bearing positions should match the image above.

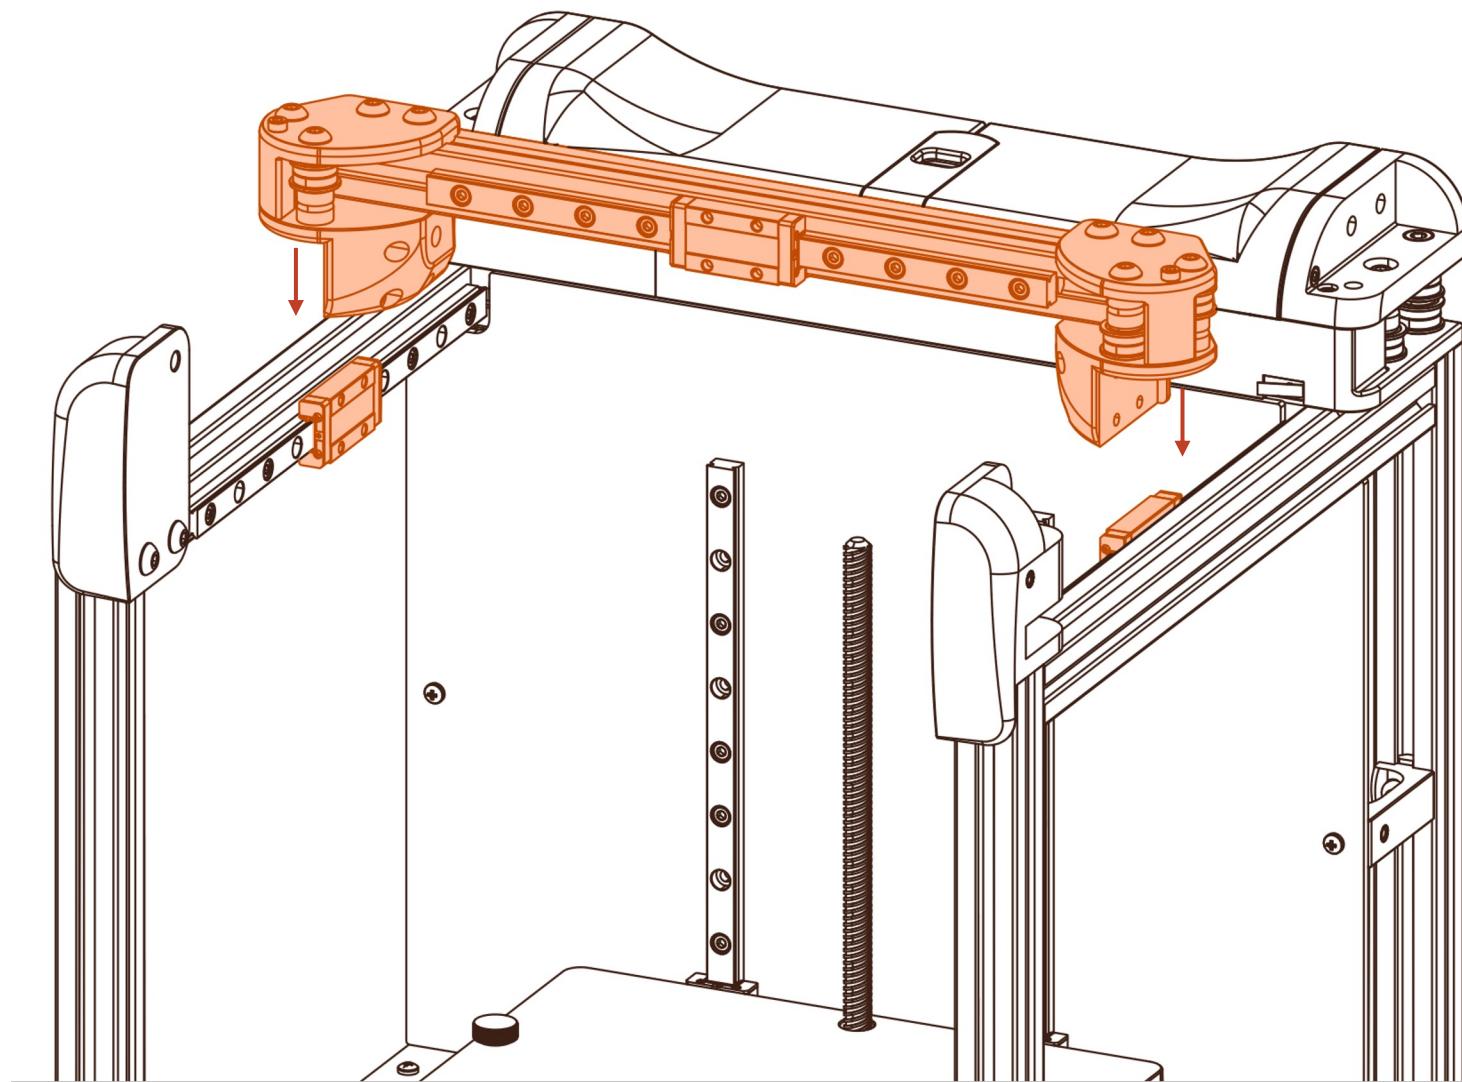


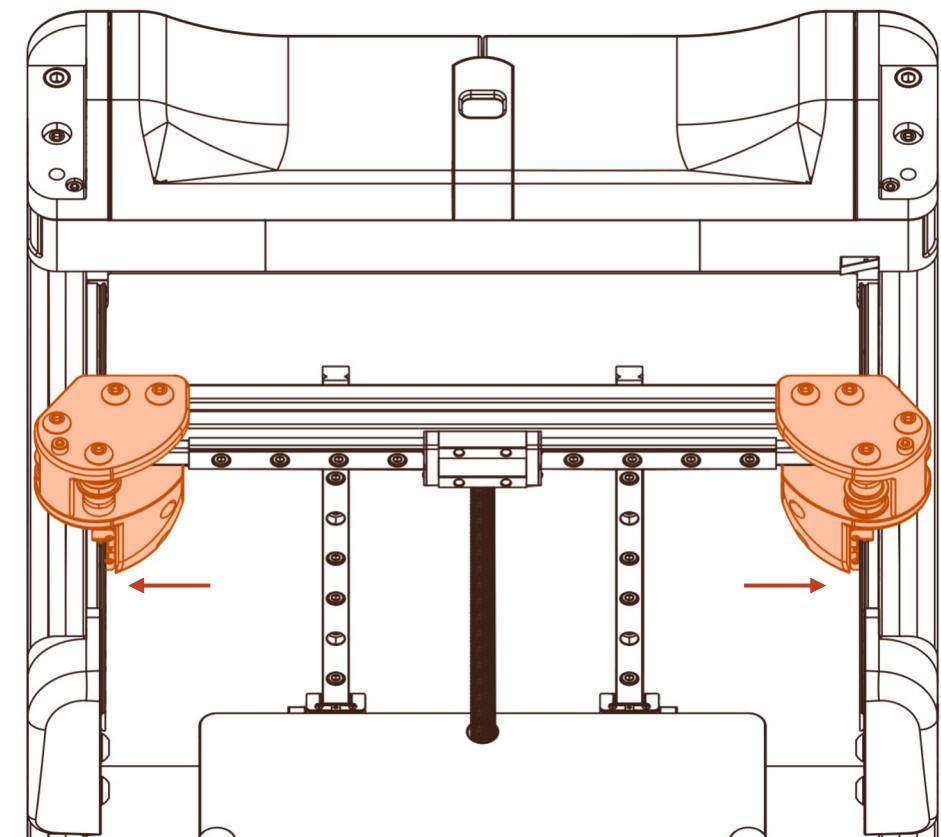**GANTRY INSTALLATION**



Press the X/Y joints outward so that they are flush with the Y carriages, then move the gantry all the way to the rear of the machine.

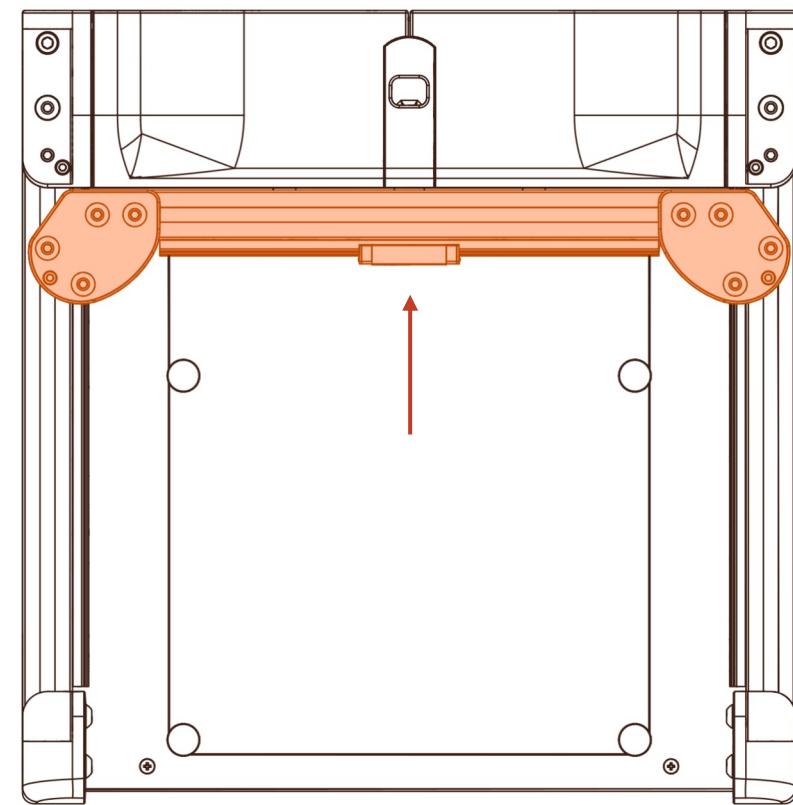**CLICK CLICK!**


Make sure that when the gantry collides with the rear of the machine. The Y limit switch makes a quiet "click" noise.

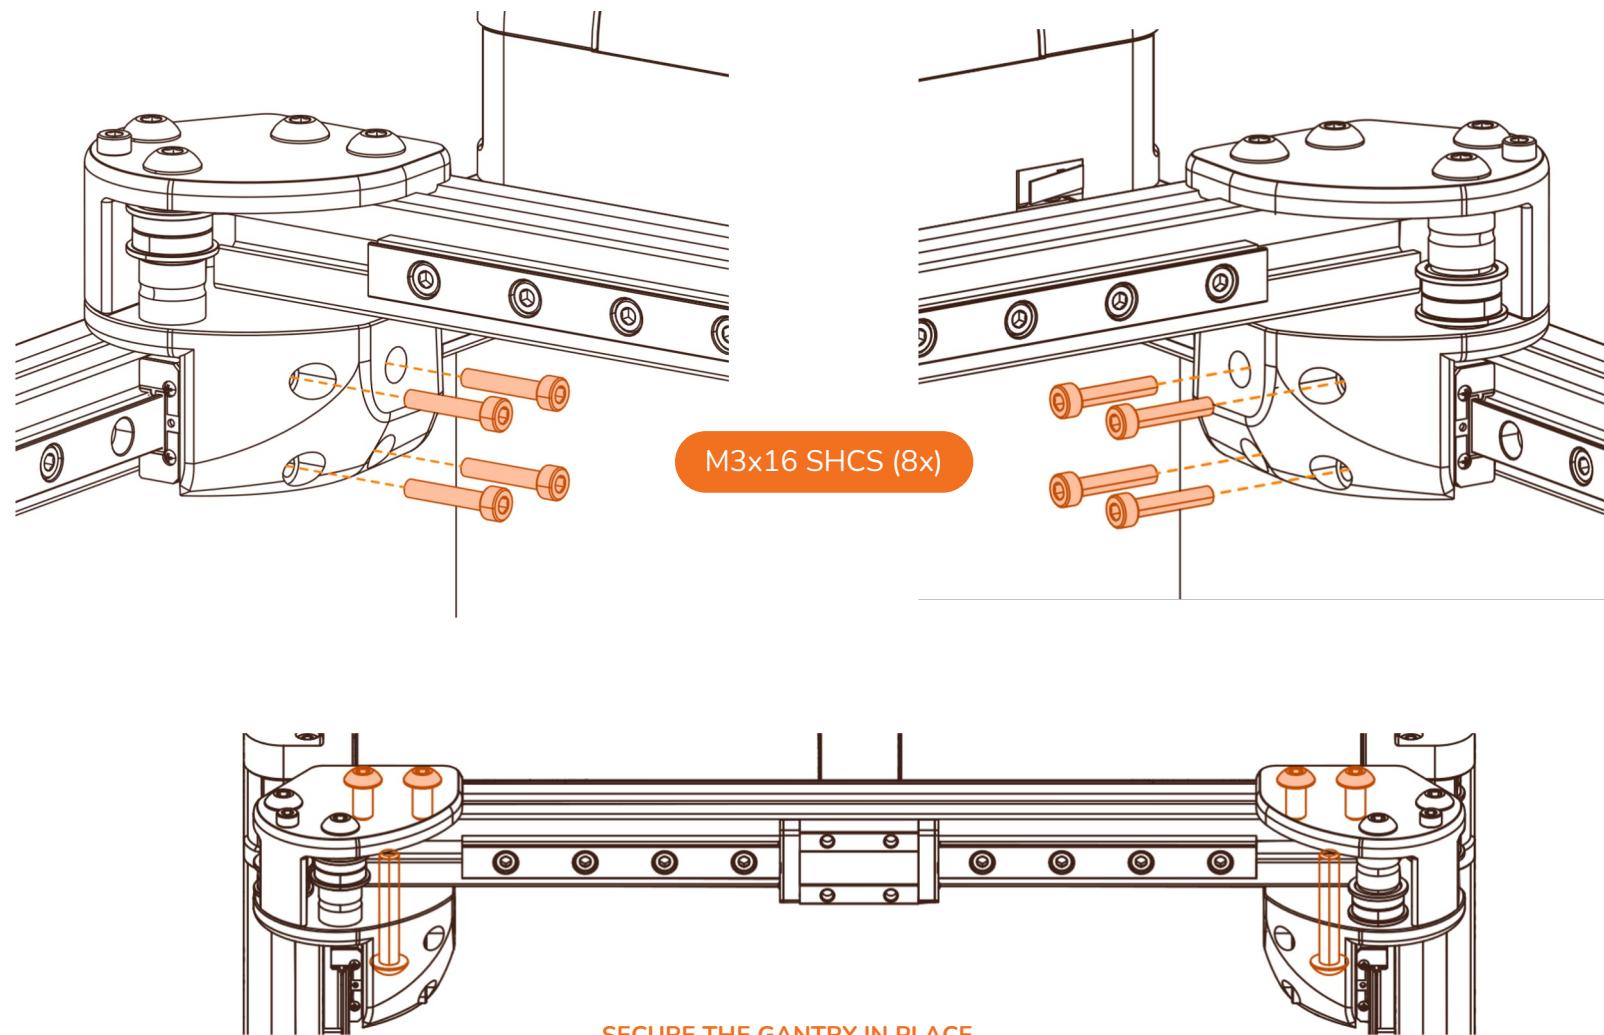**SECURE THE GANTRY IN PLACE**


Now we can tighten the 6 screws we left loose earlier. This will complete the installation of the gantry.

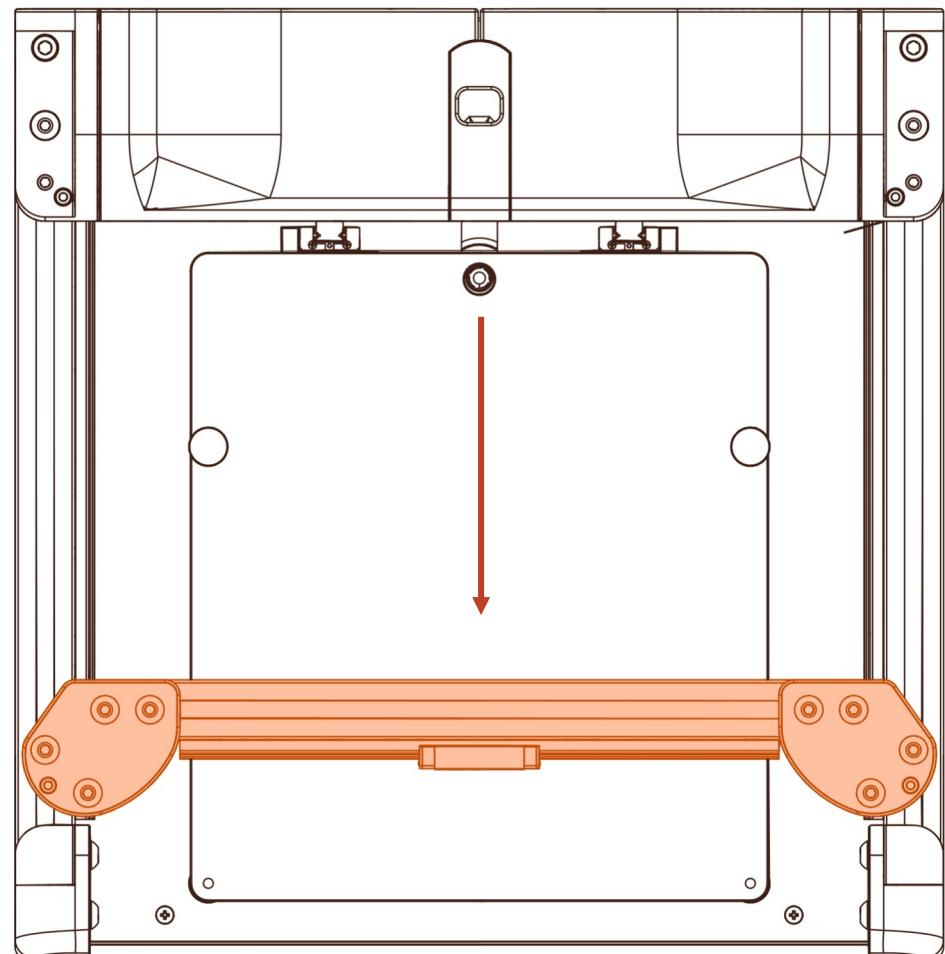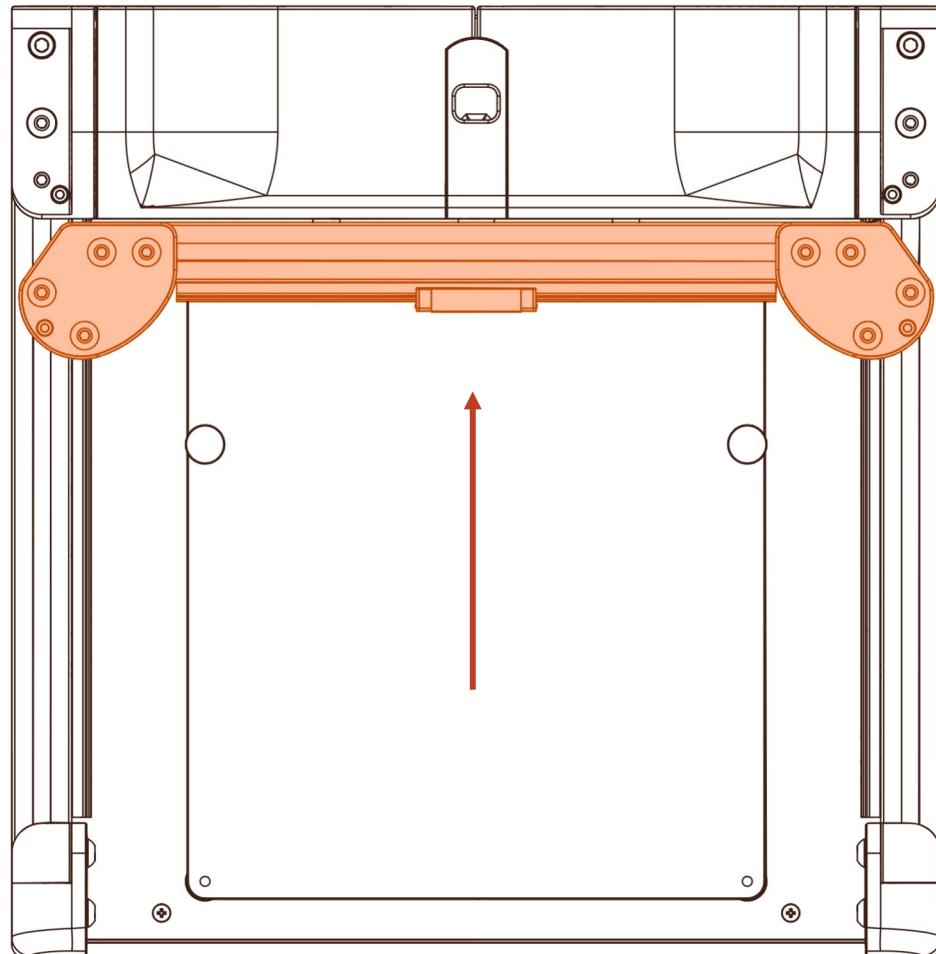**TEST THE GANTRY MOTION**

Slide the gantry back and forth to ensure that it has smooth consistent motion along its entire travel distance. Listen to verify the Y limit switch makes a quiet “click” noise when the gantry is at the back of the machine.

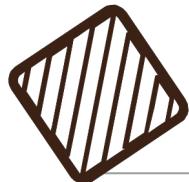**Difficulty**

Easy

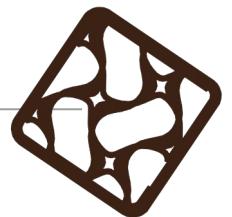**Tools Needed**

M3 Driver  
M5 Driver


**Hardware Needed**

R Extrusions (2x)  
M5 T-Nuts (6x)  
M5x10 Button Head Cap Screw (6x)

**Printed Parts Needed**

None





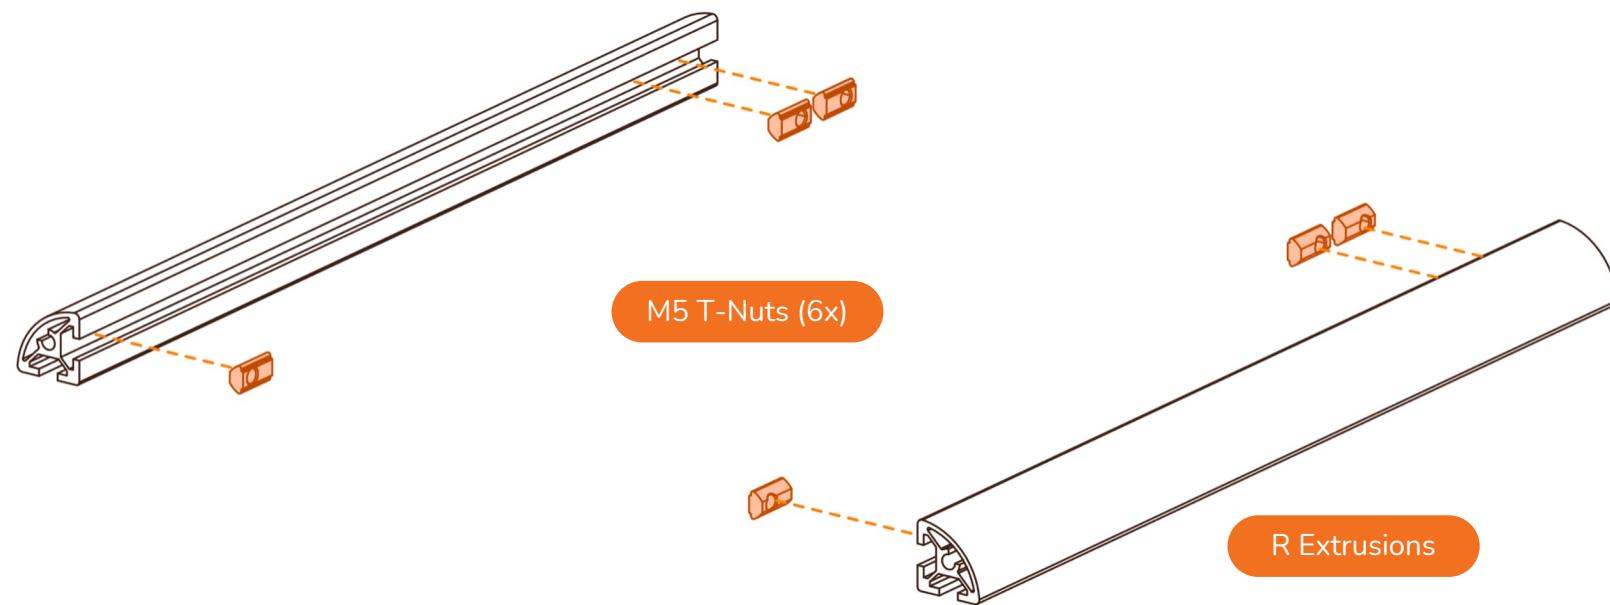


**ACCESS TO THE GOODS**


Open the Drive covers, as we will need access to some of the holes in the drive units for the next steps.

The screws that hold the covers in place do not need to be fully removed in order for the doors to swing open.

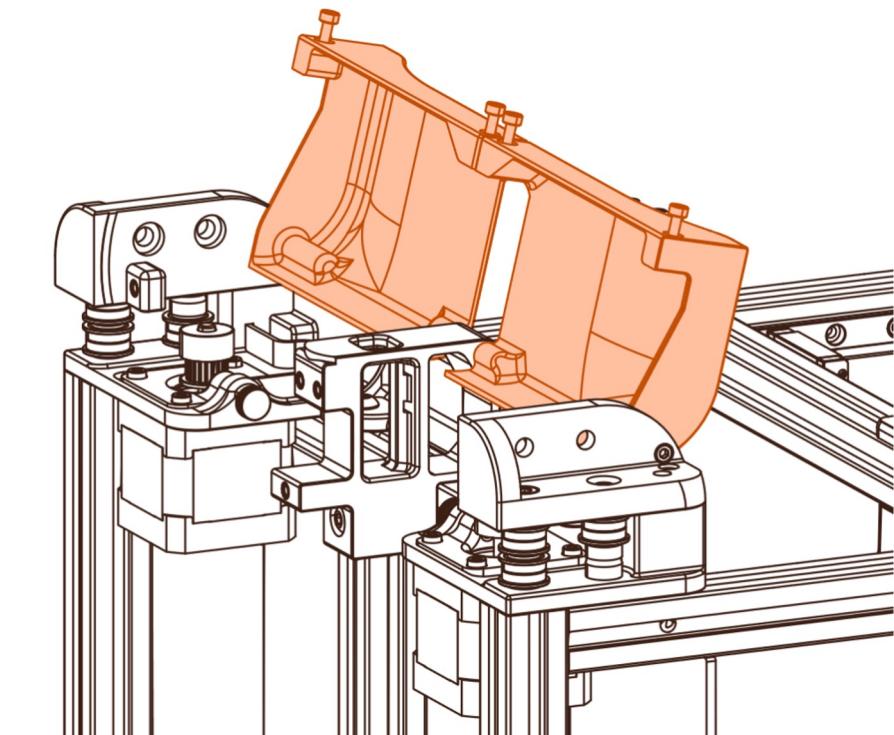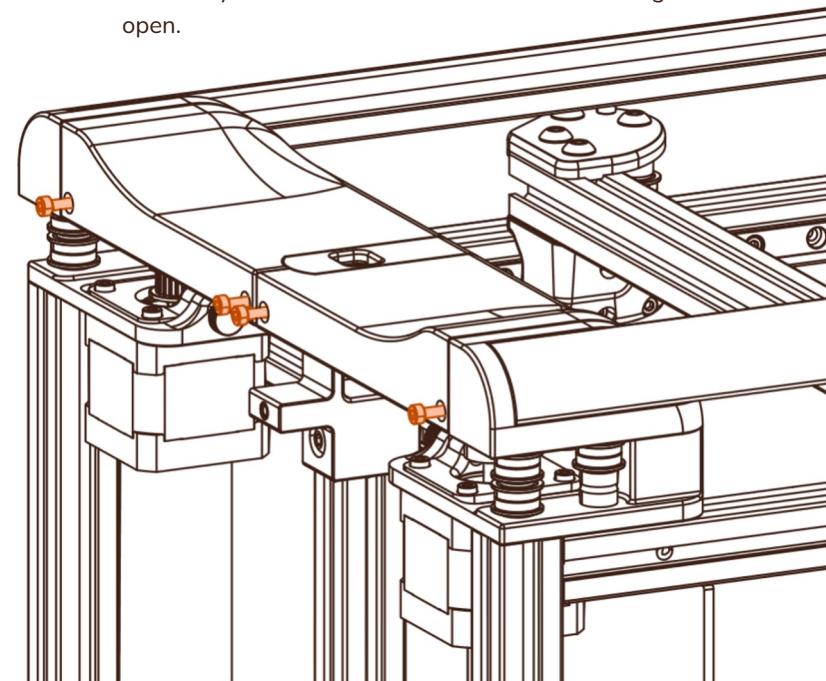

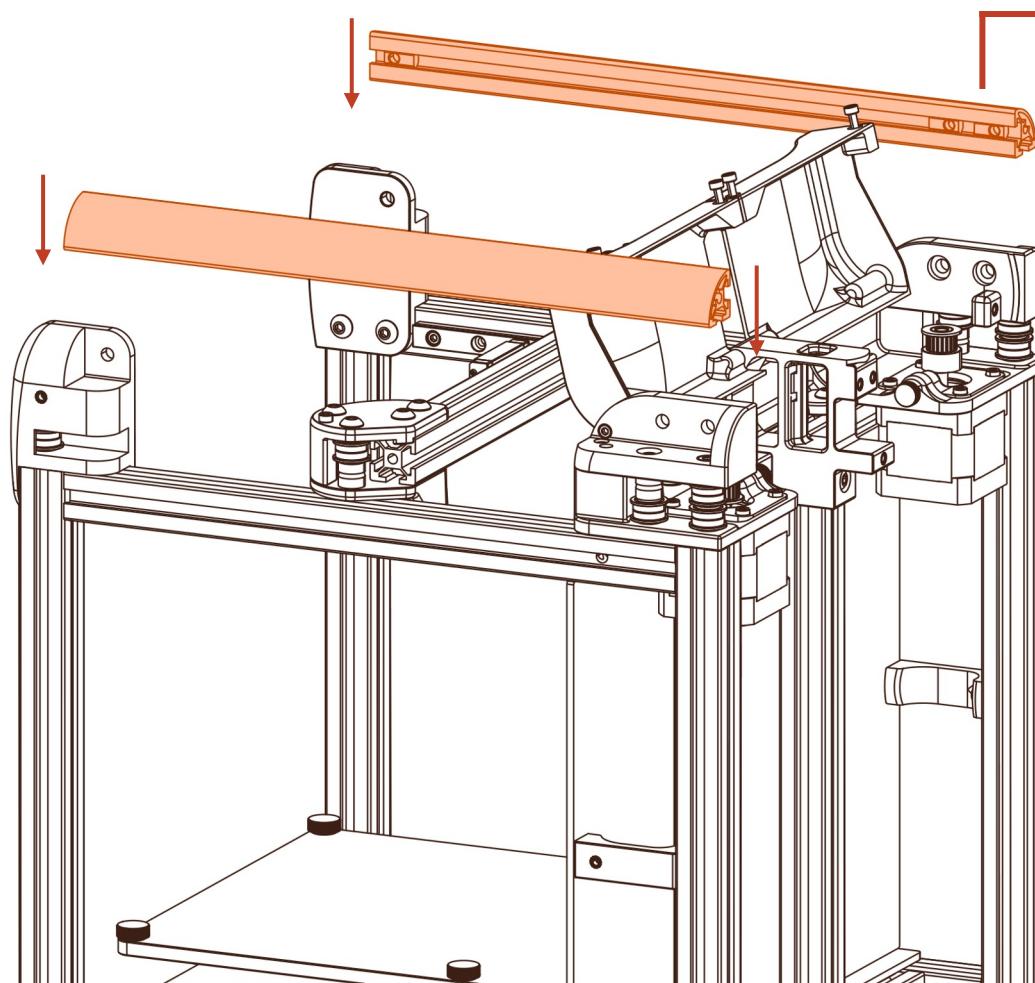**ORIENTATION MATTERS**


Make sure the ends with two preloaded T-Nuts are towards the rear of the machine.

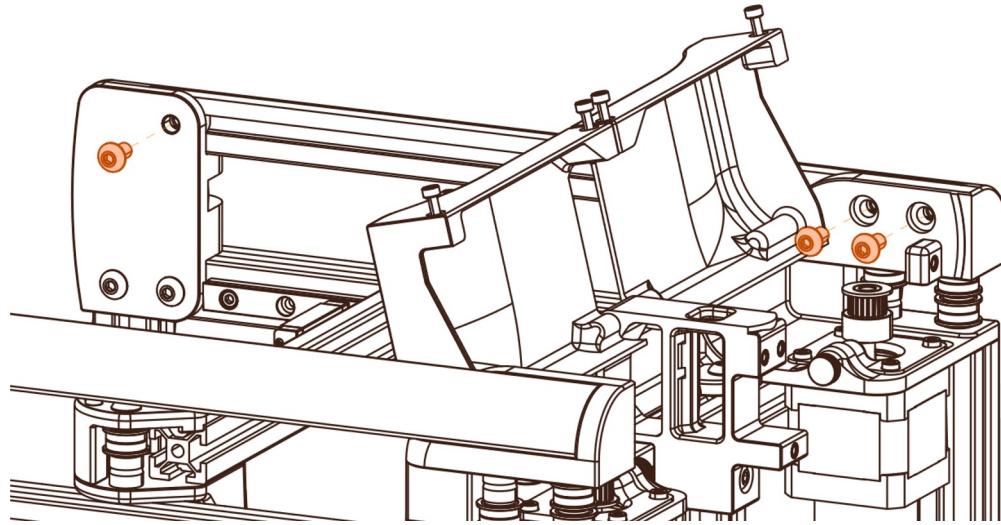


M5x10 BHCS (6x)

#### CLOSE THE ENGINE BAY


Close the Drive access doors before continuing. This keeps them out of the way until needed.

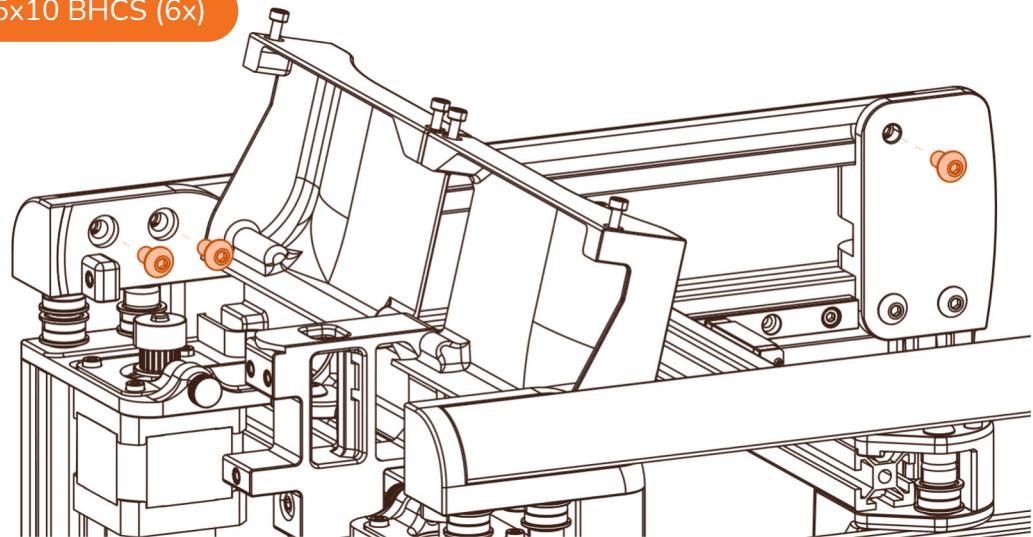

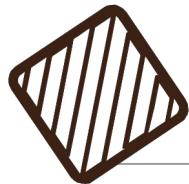

**Difficulty**

Hard

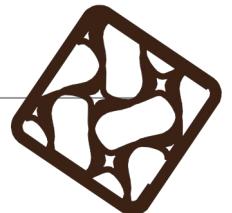**Tools Needed**

M2 Driver  
M3 Driver  
M5 Driver

Heatset Insert Tool  
Soldering Iron (Not Included)


**Hardware Needed**

M3 Heatset Inserts (4x)  
M3x10 Socket Head Cap Screw (4x)  
M3x10 Self-Tapping Screw (4x)  
M3x16 Socket Head Cap Screw (2x)  
M3x30 Socket Head Cap Screw (1x)  
M5x30 Button Head Cap Screw (1x)  
M5x10 Button Head Cap Screw (2x)  
M3x40 Socket Head Cap Screw (3x)



X Endstop Switch (1x)  
Inductive Probe (1x)  
Zip Ties (2x)  
E Extrusion (1x)  
625 Bearings (2x)  
M5 Washer (2x)  
M5x40 Socket Head Cap Screw (1x)  
M5 Hex Nut (1x)  
M5 T-Nuts (2x)


**Printed Parts Needed**

X Carriage Frame Left (1x)  
X Carriage Frame Right (1x)  
Tilt Latch (1x)  
Tilt Lock Rocker (1x)  
Endstop Cable Shelf (1x)

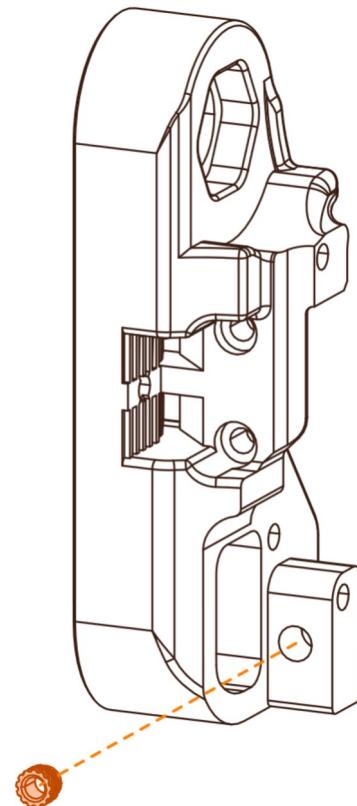
**♪ WAY DOWN, HADESTOWN ♪**

The heatset inserts shown below are inserted well below the surface of the prints. Take care to ensure they're seated all the way or the X Carriage may not fasten together properly.


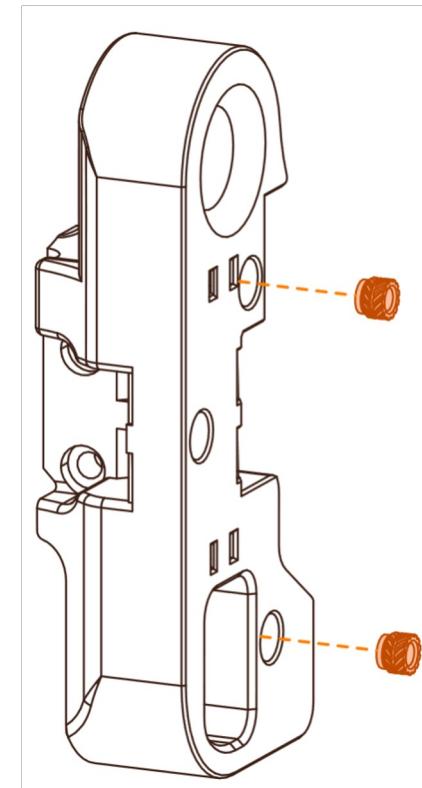
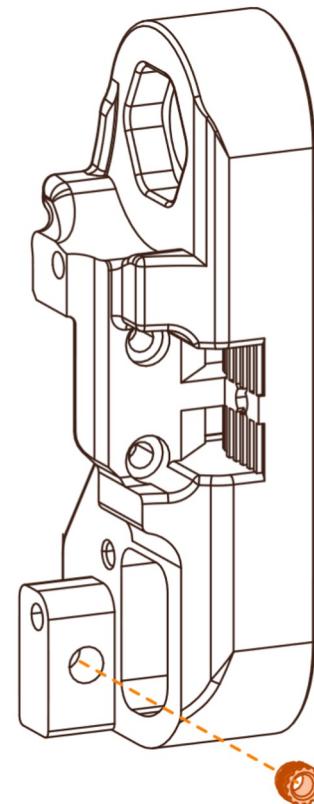
**M3 Heatset Inserts (4x)**

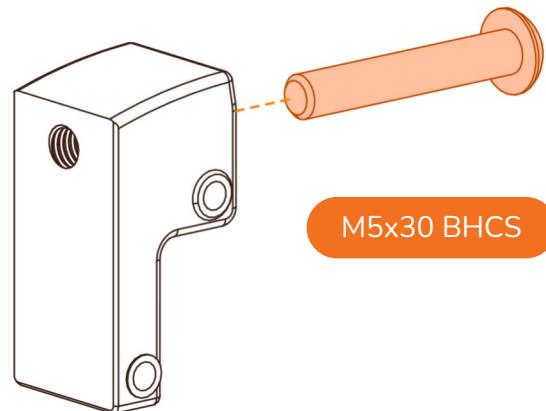



M5x30 BHCS

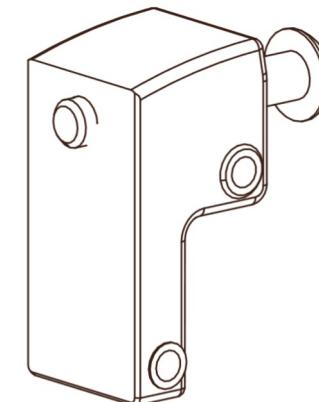**ORIENTATION MATTERS**

The over-center action of this latch, and its ability to hold the extruder in place, is dependent on the orientation of this piece, so ensure that it matches the diagram.

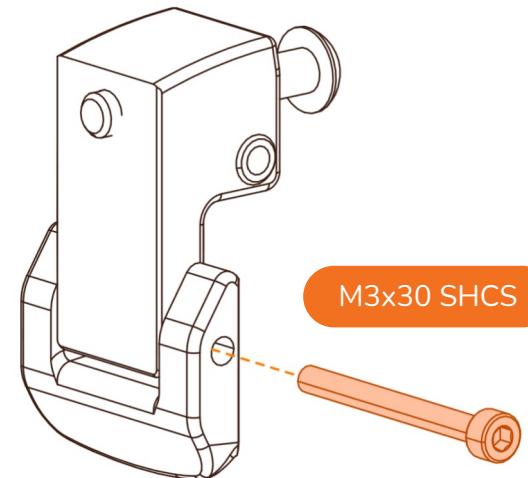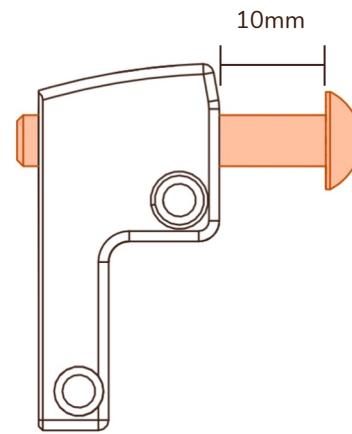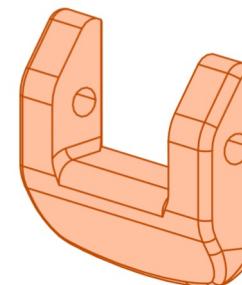



M3x30 SHCS

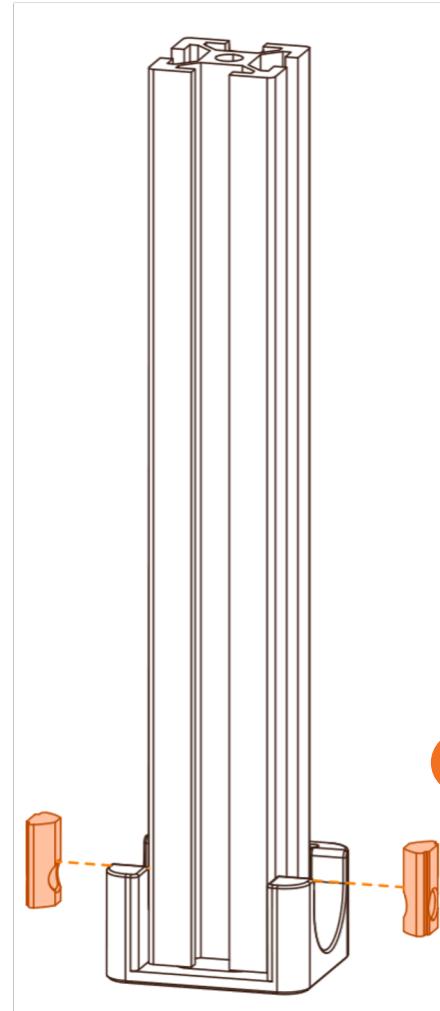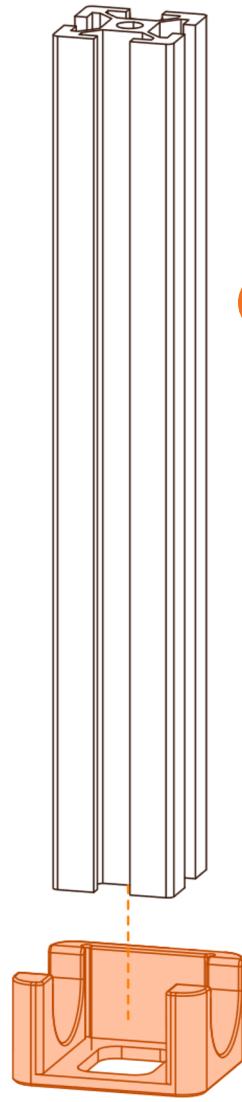




#### ORIENTATION MATTERS


The T-Nuts used here cannot be secured correctly if upside-down. The retention detent will be off the end of the extrusion.

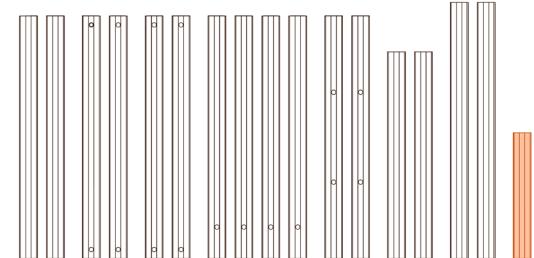


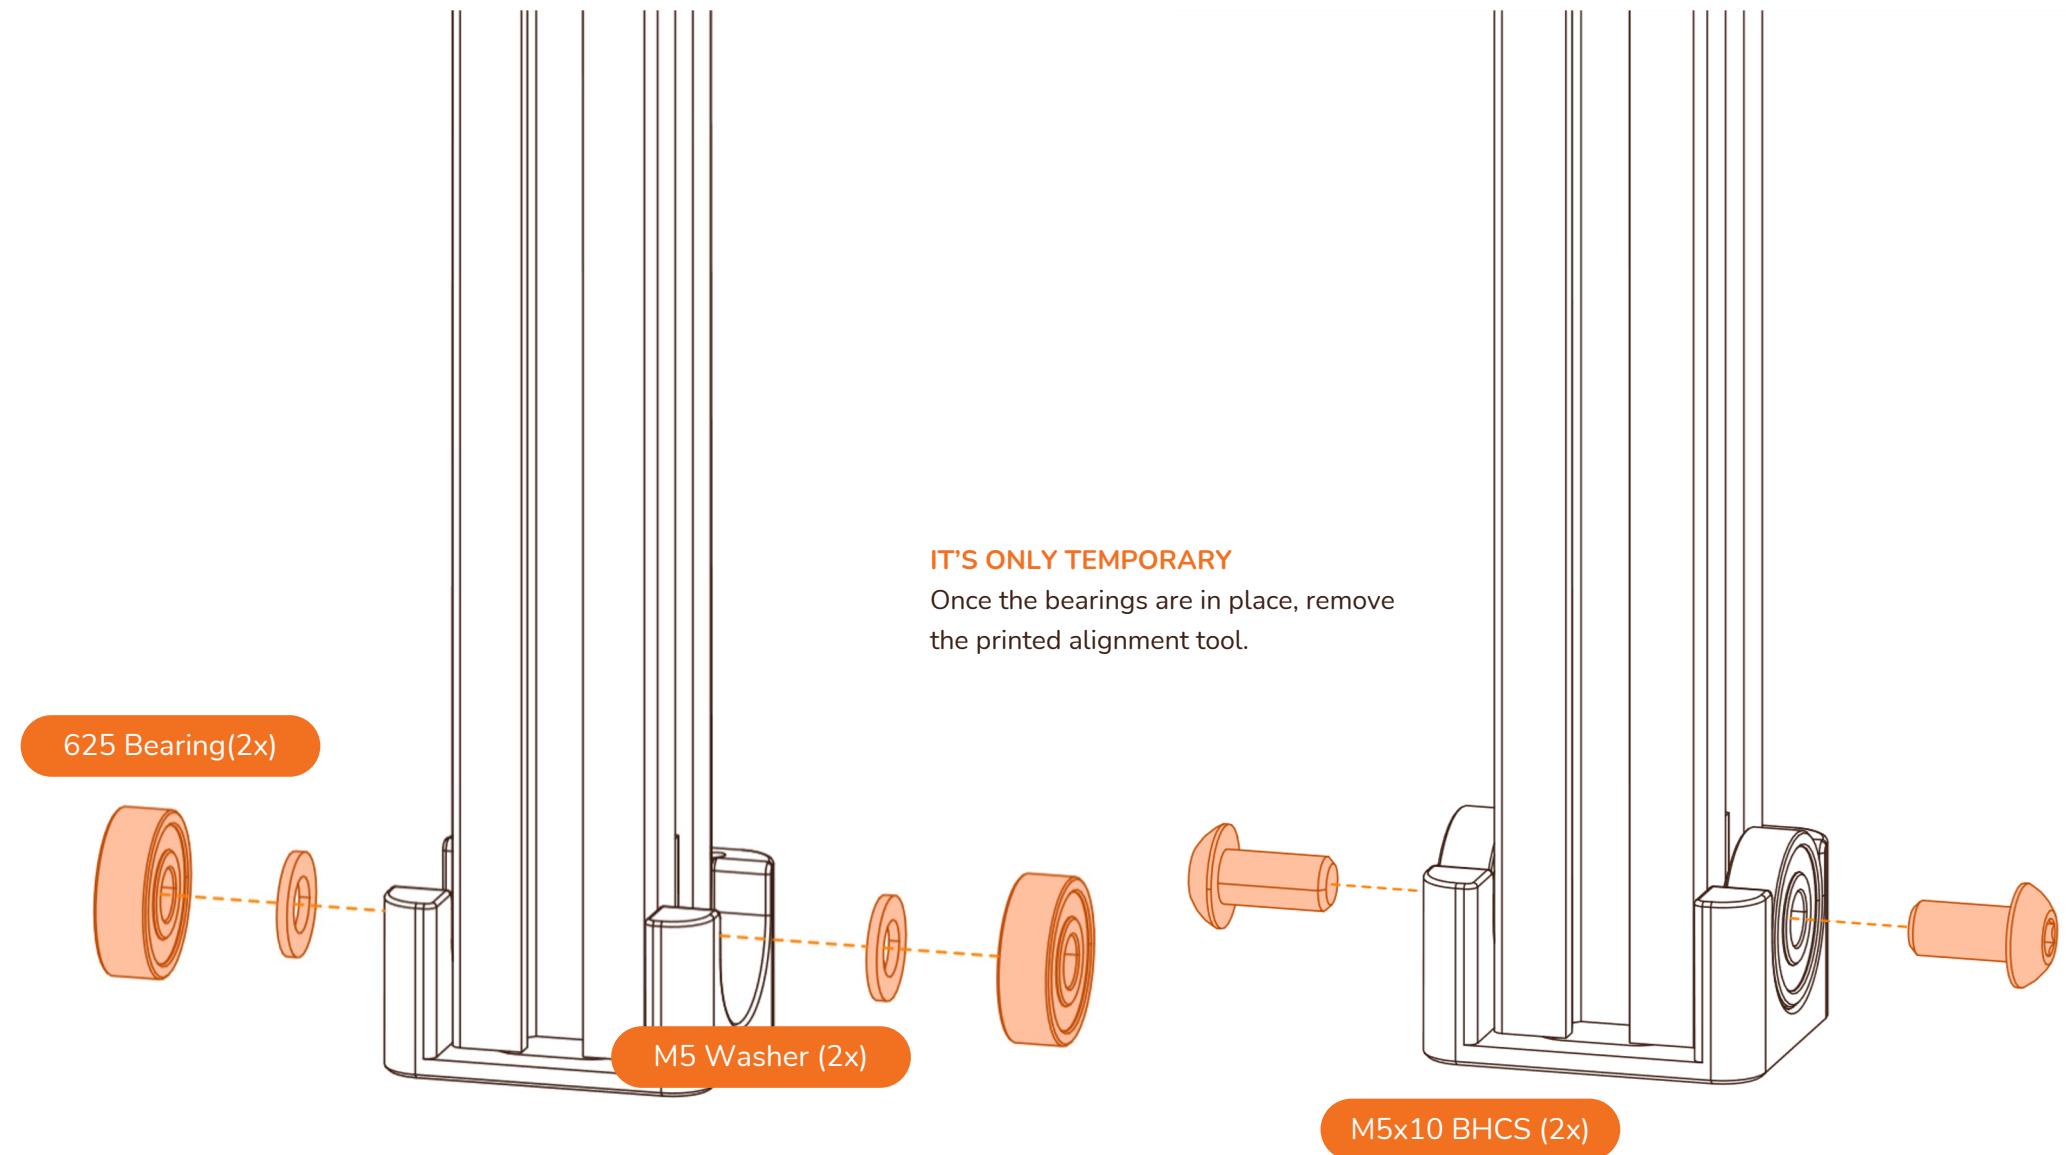

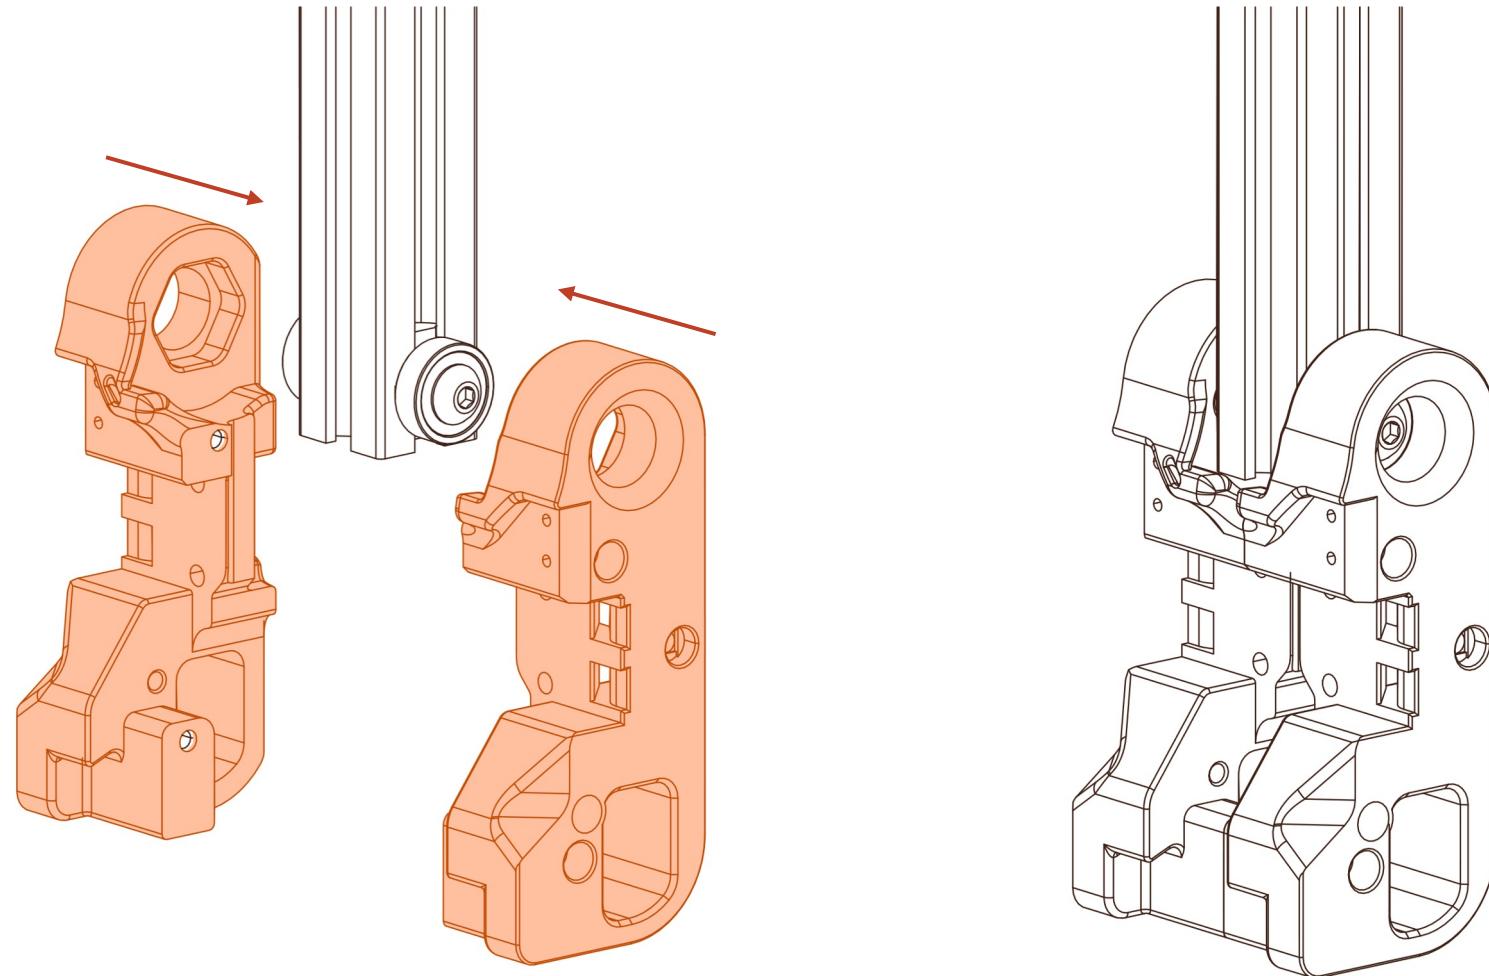

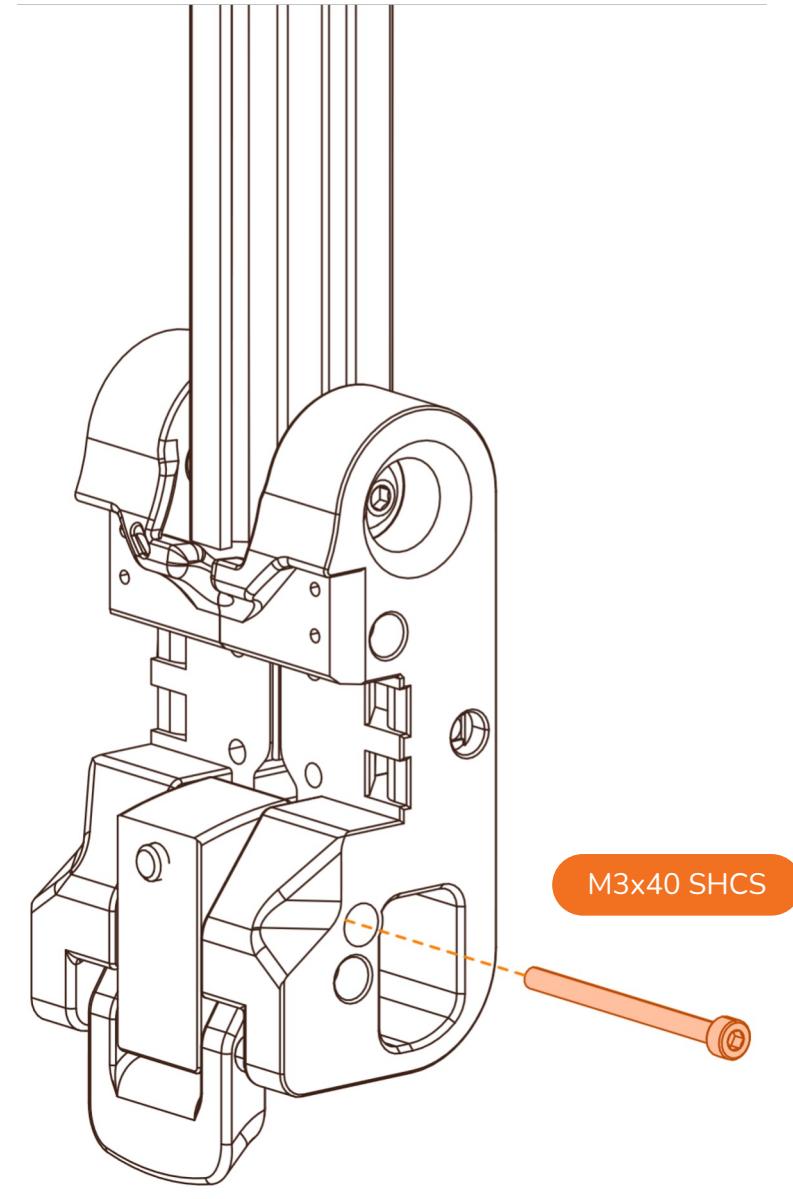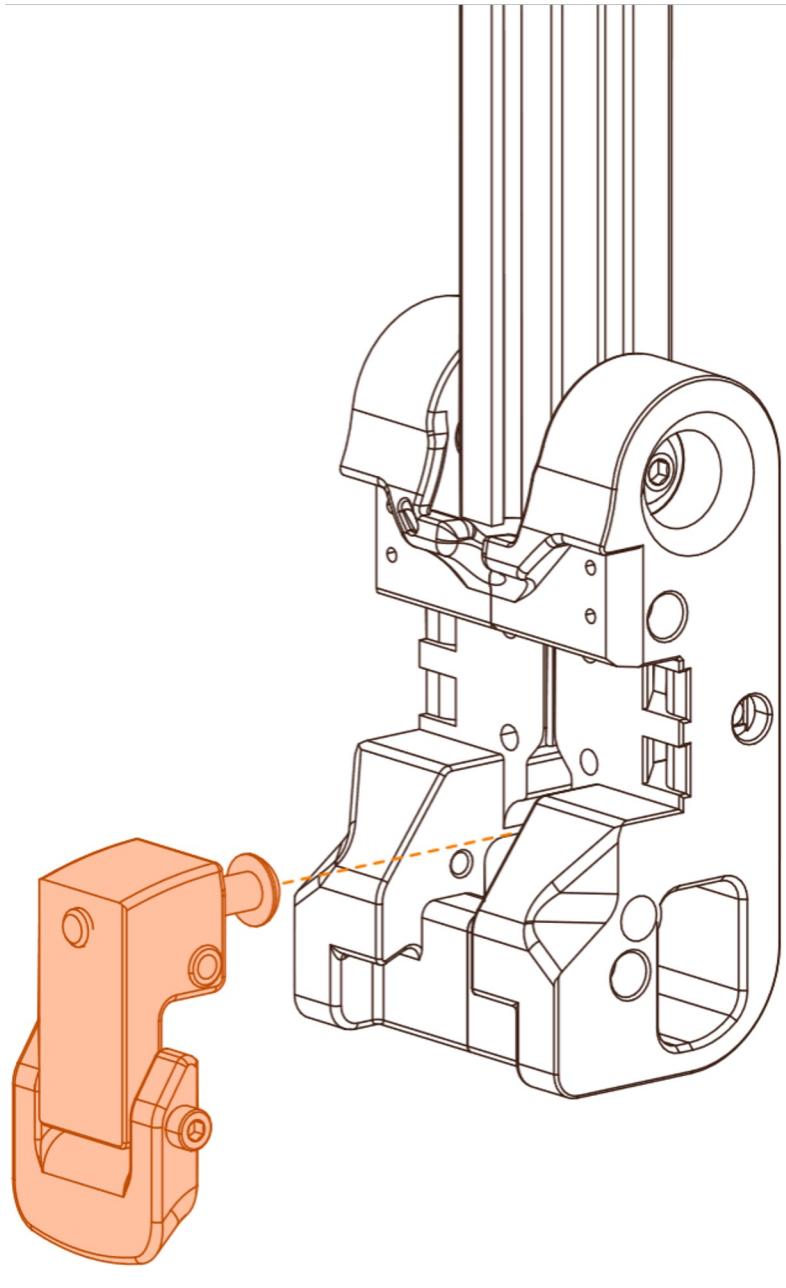


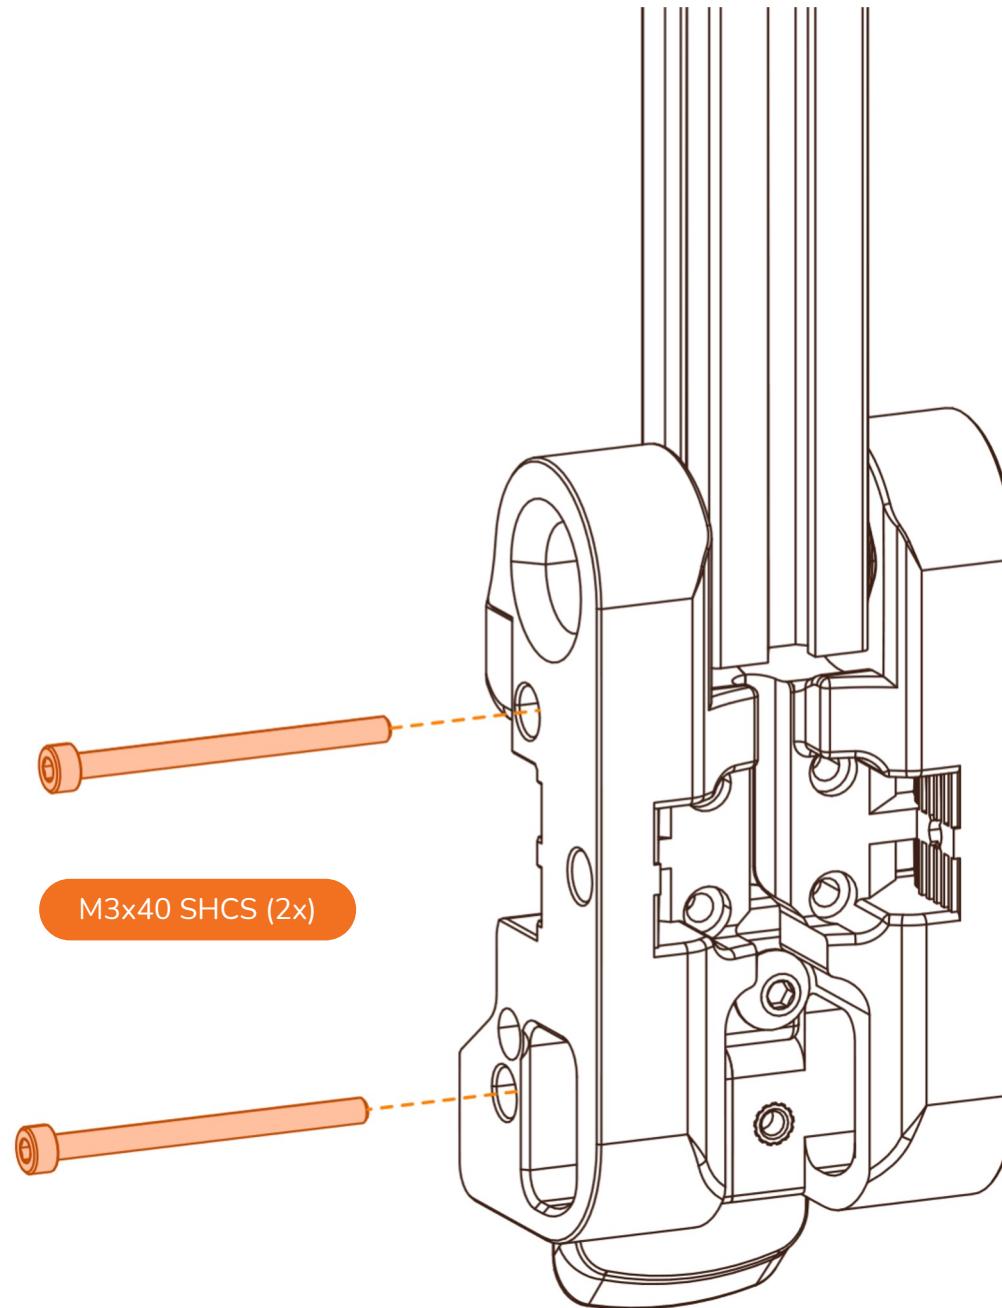


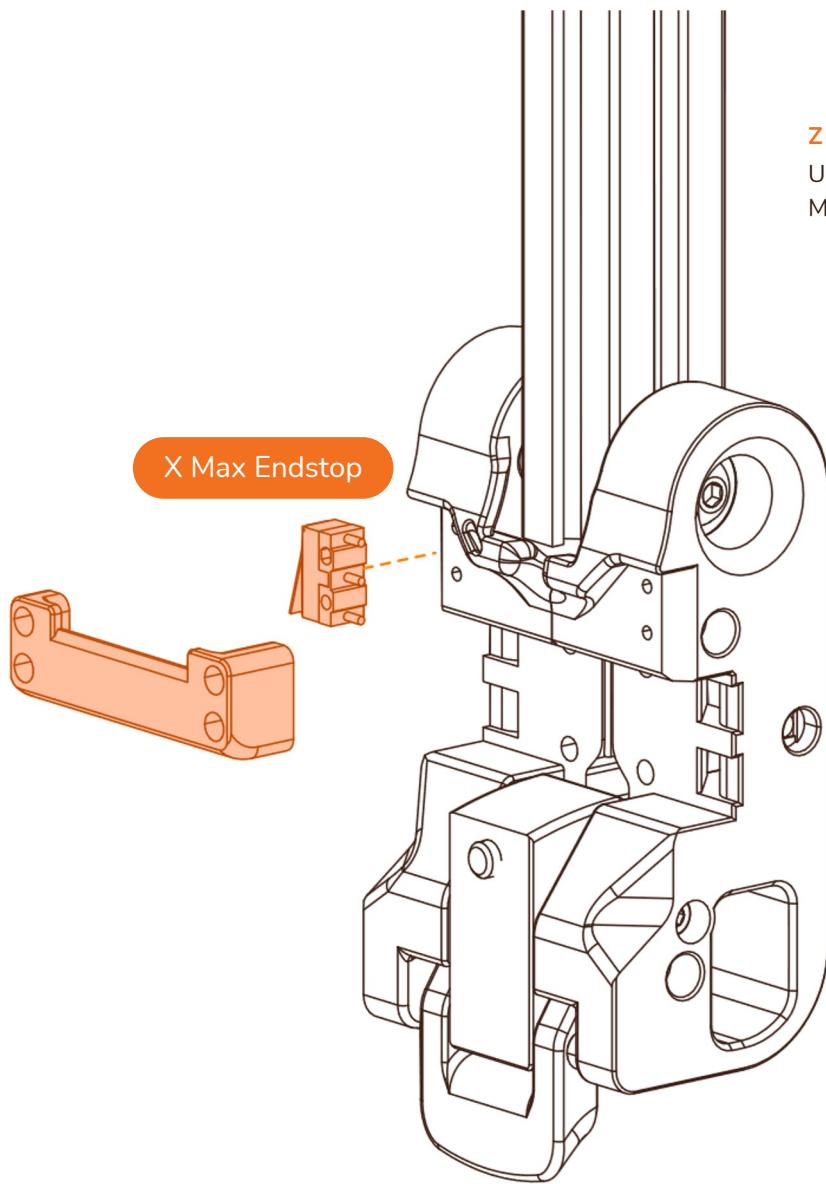

#### Z MAX WIRE ROUTING


Use the back zip-tie mount to strain relieve the X Max Limit Switch connection.

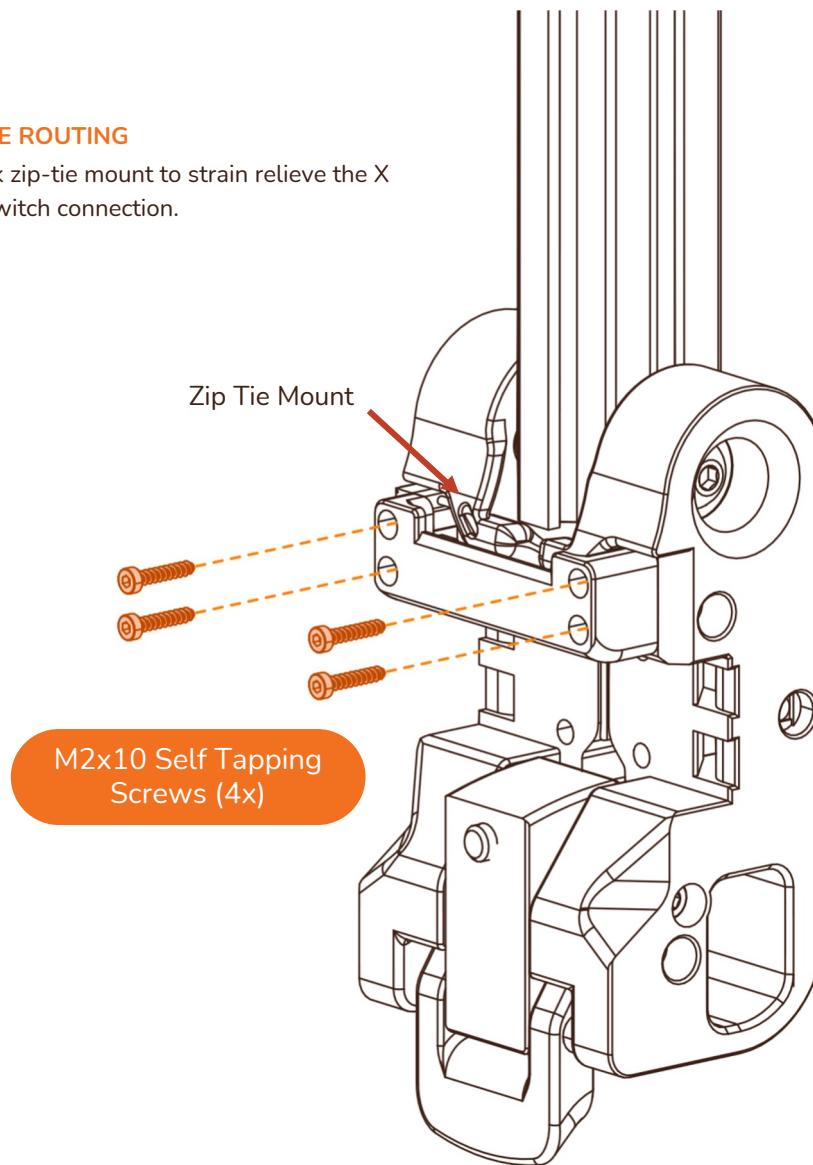


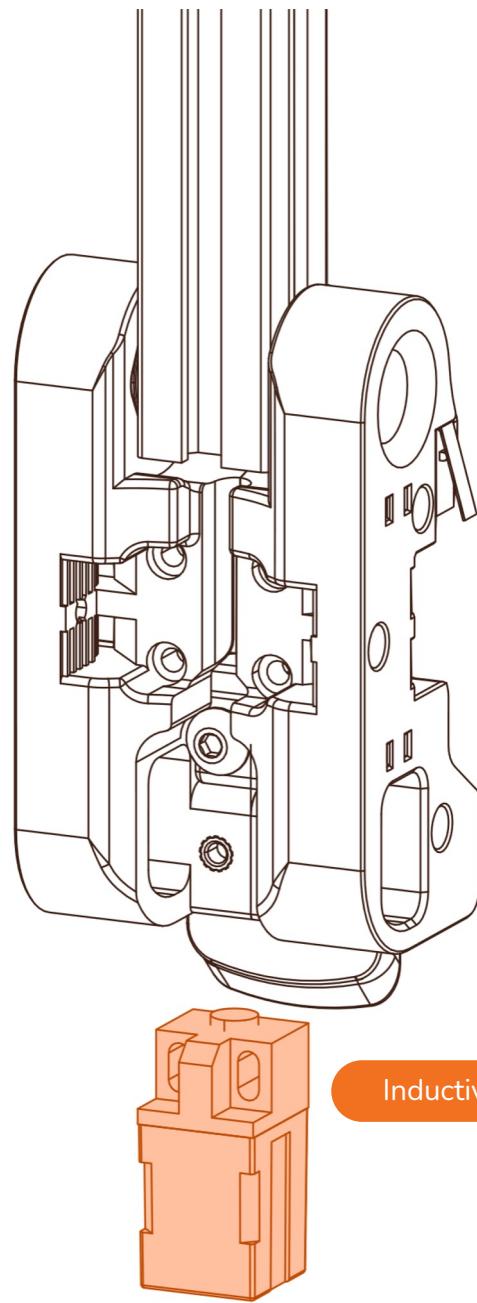

#### PROBE WIRE ROUTING

The probe wires will route out through the printed part and up its side. There are two zip tie points that should be used to make wire routing tidier.

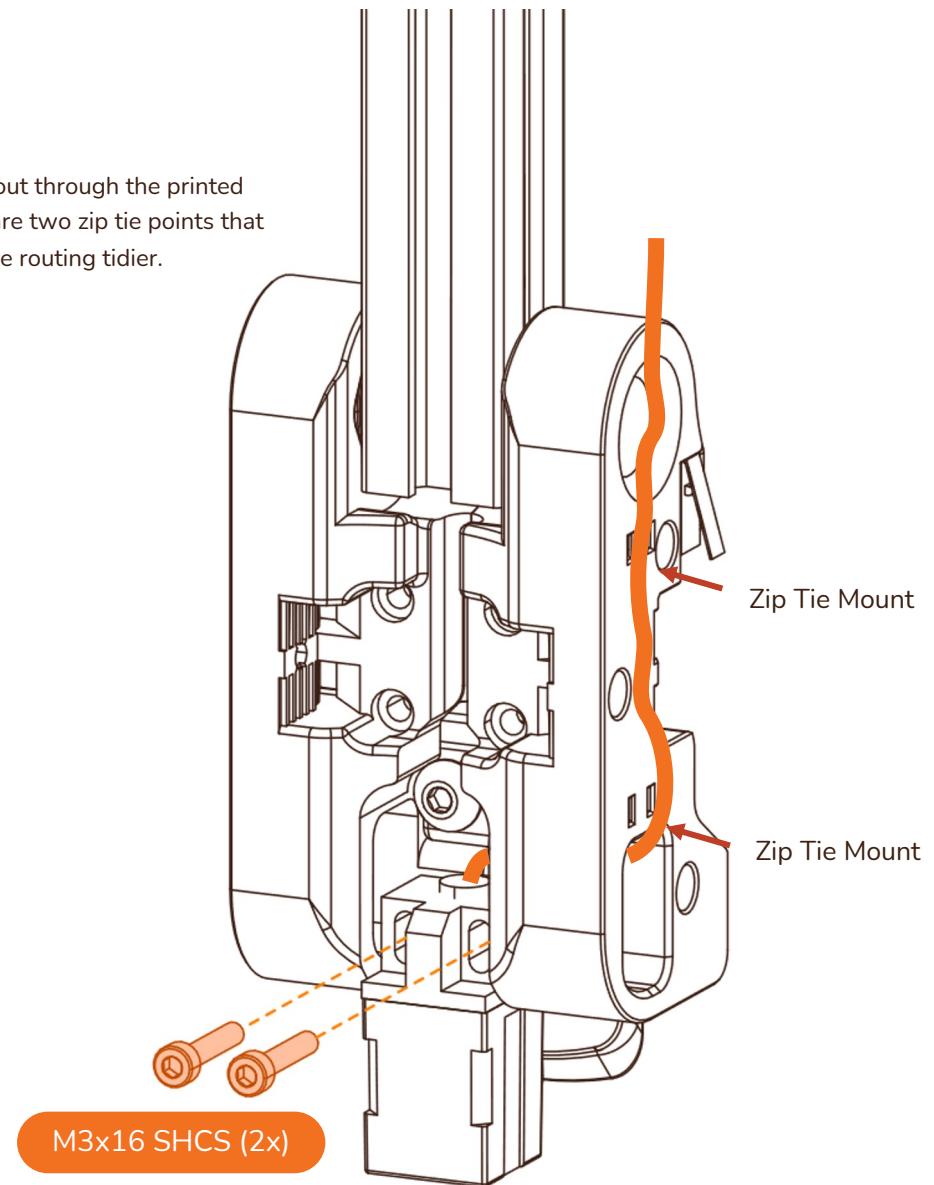


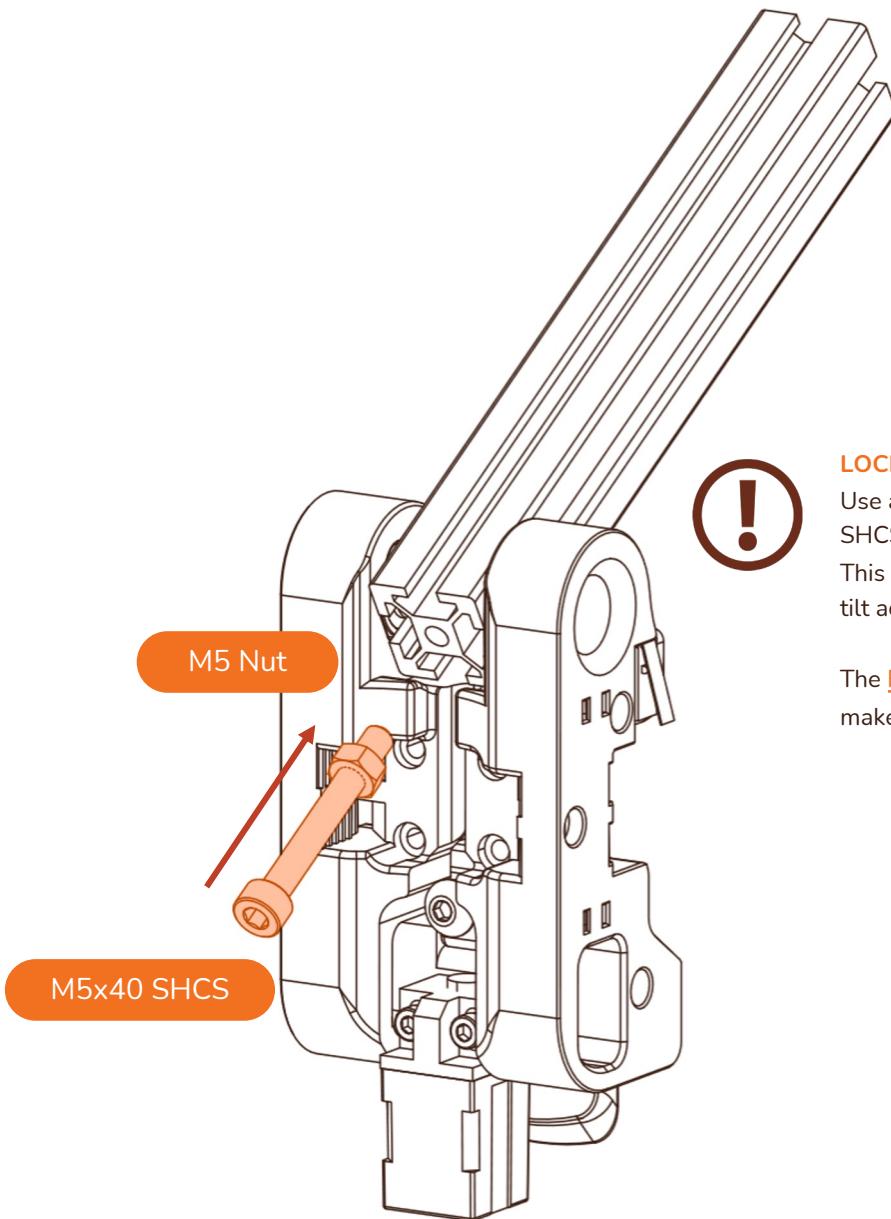


#### LOCKING MECHANISM

Use an M5 nut as a locking nut to position this SHCS exactly 33mm from the end of the extrusion. This will be used as the latching mechanism for the tilt action of the toolhead.


The [Fastener Guide](#) has this diagrammed to scale to make this step easier for you.

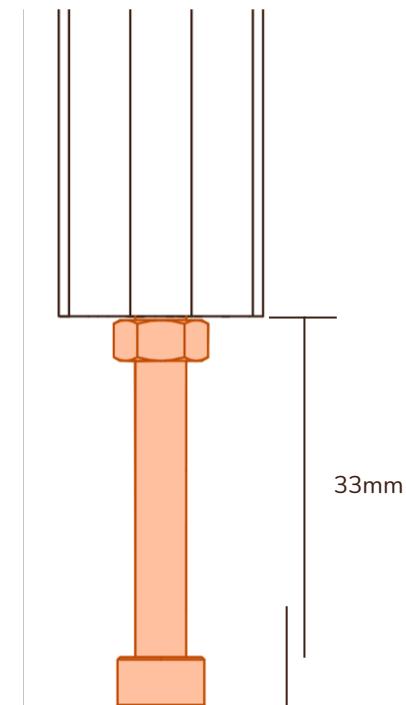


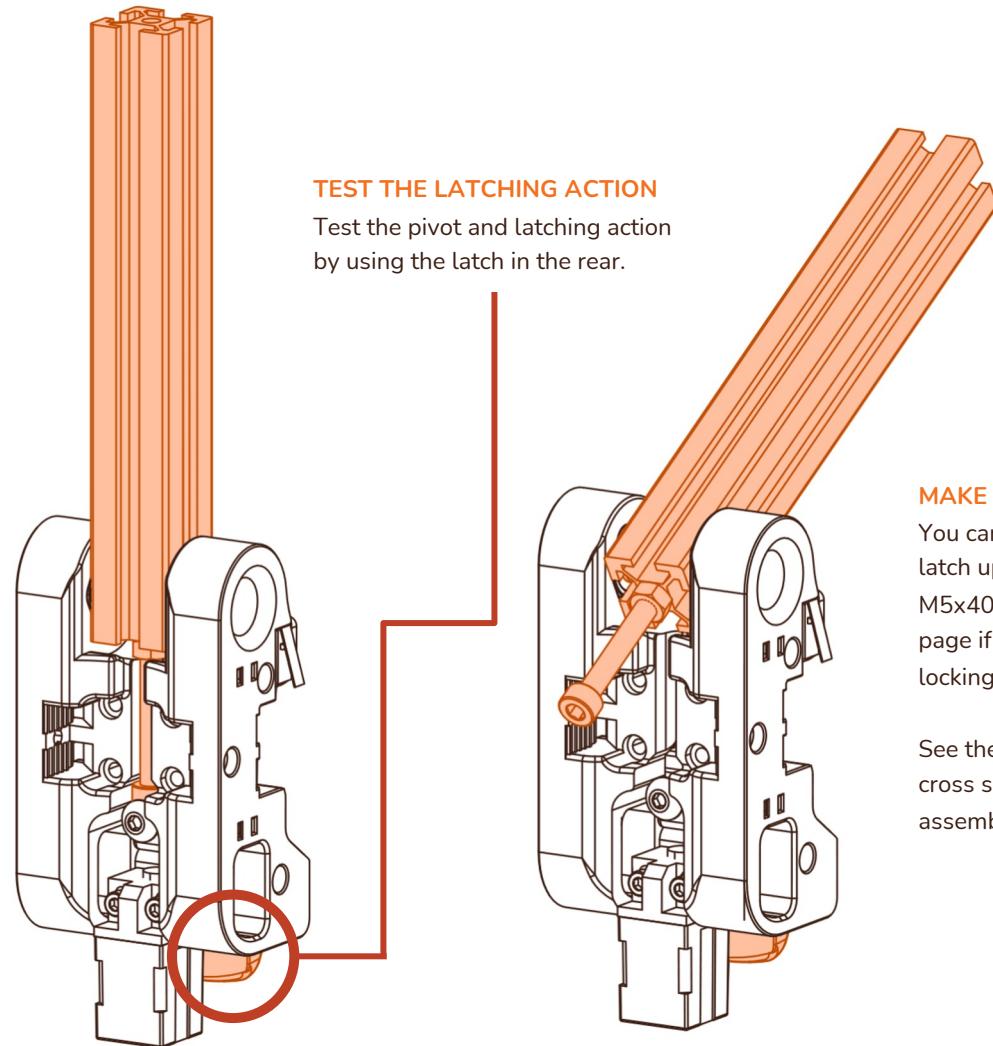
**MAKE ADJUSTMENTS AS NEEDED**

You can adjust the position of the latch up and down by loosening the M5x40 SHCS you installed on the last page if needed to fine-tune the locking.


See the figure on the right for the cross section view on the correct assembly.

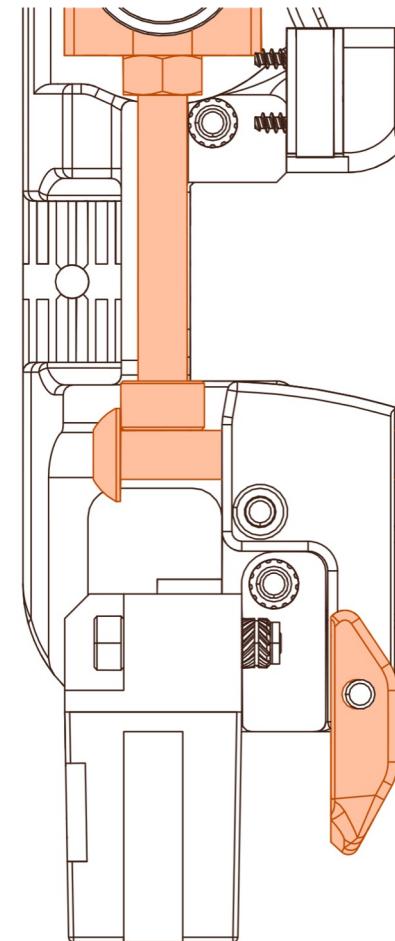

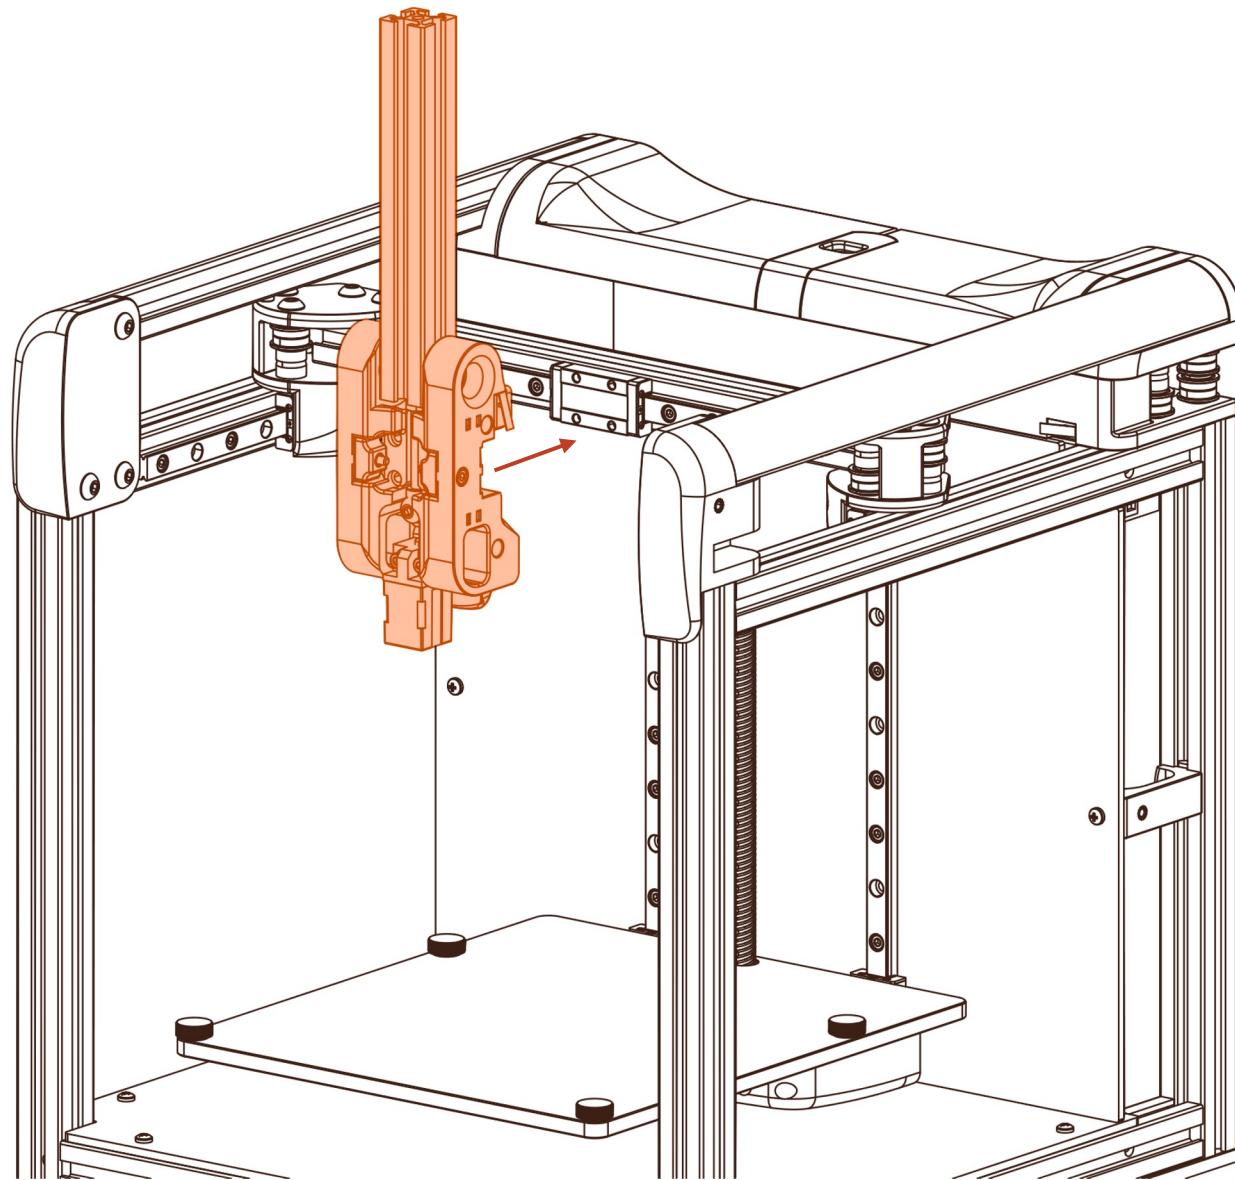


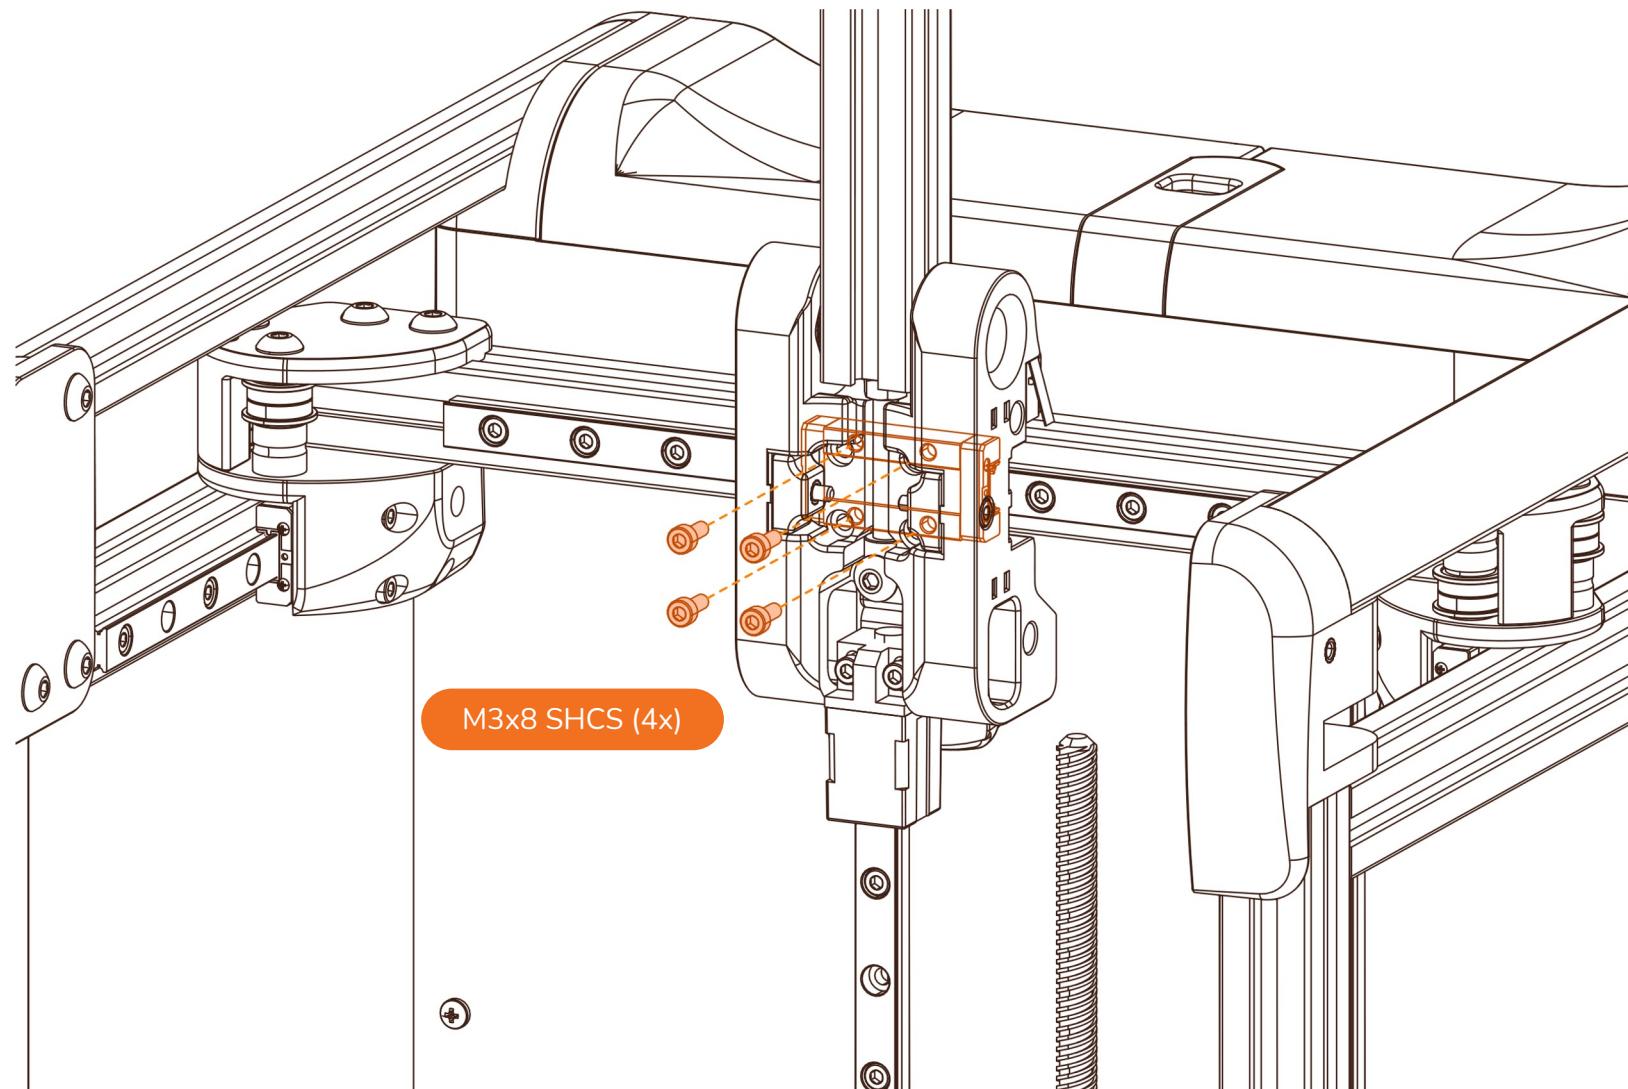

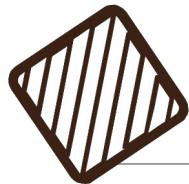

**Difficulty**

Medium

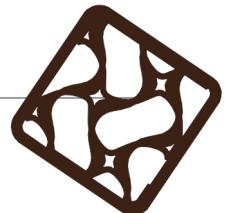**Tools Needed**

M3 Driver  
Heatset Insert Tool  
Soldering Iron (Not Included)  
Scissors (Not Included)


**Hardware Needed**

M3 Heatset Inserts (2x)  
M3x16 Socket Head Cap Screw (2x)  
X & Y Belts (2x)

**Printed Parts Needed**

Belt Clip (2x)



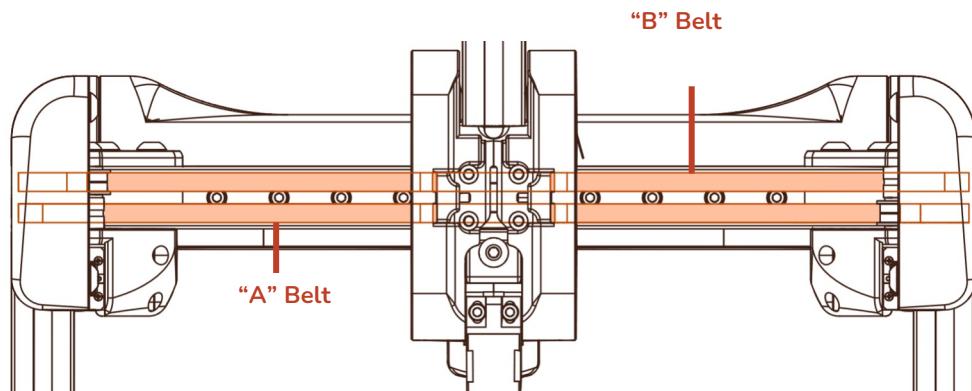



#### THE BELT PATH

The Cocoa Press printer uses a belt path based on the popular CoreXY pattern.



The individual belt paths are stacked on top of each other, and the crossing often found in CoreXY designs is omitted. Compared to many other implementations, the motors are moved to a less intrusive position.

**Equal belt tension is important to the proper function of a CoreXY motion system.**

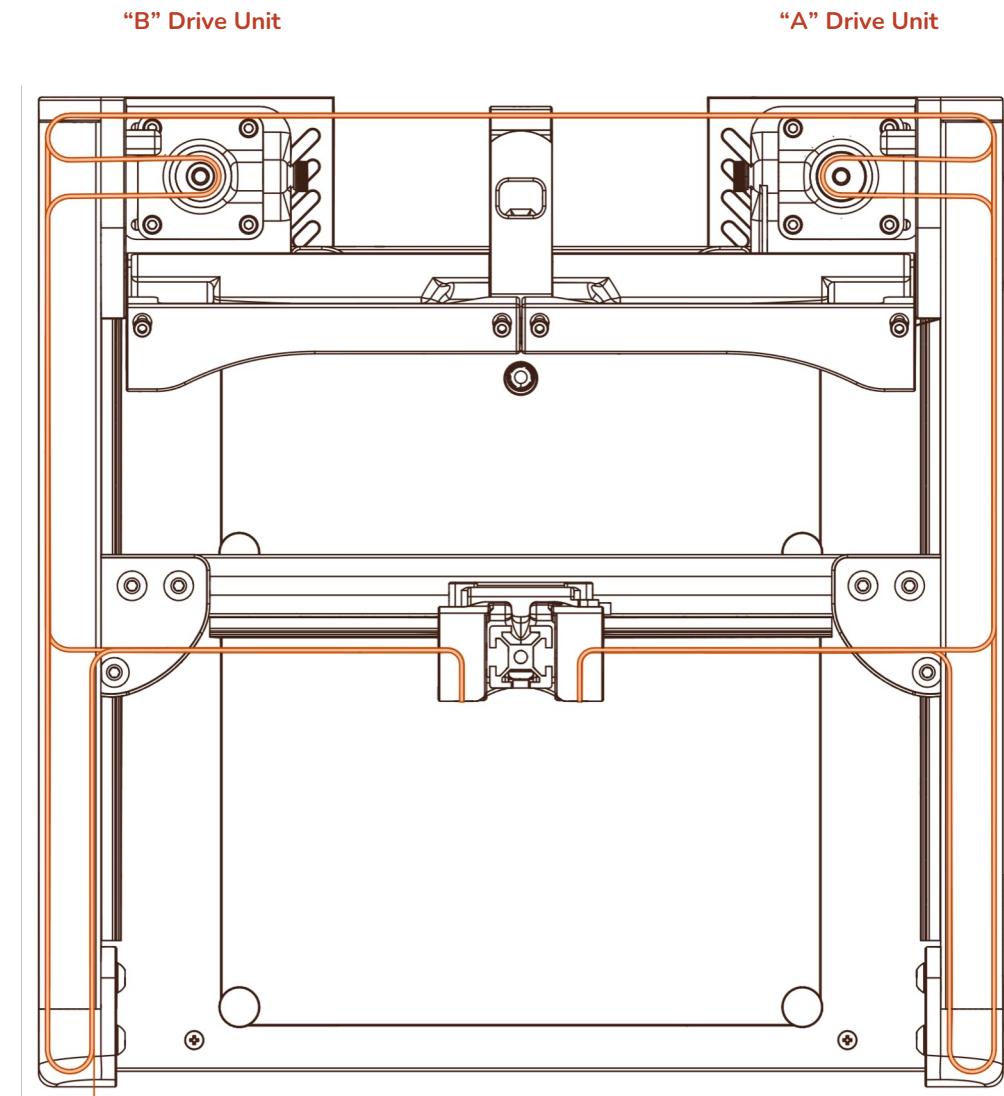

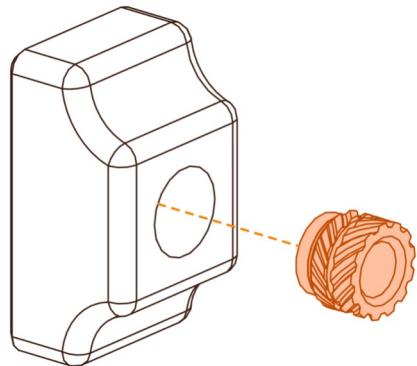

M3 Heatset Inserts (2x)

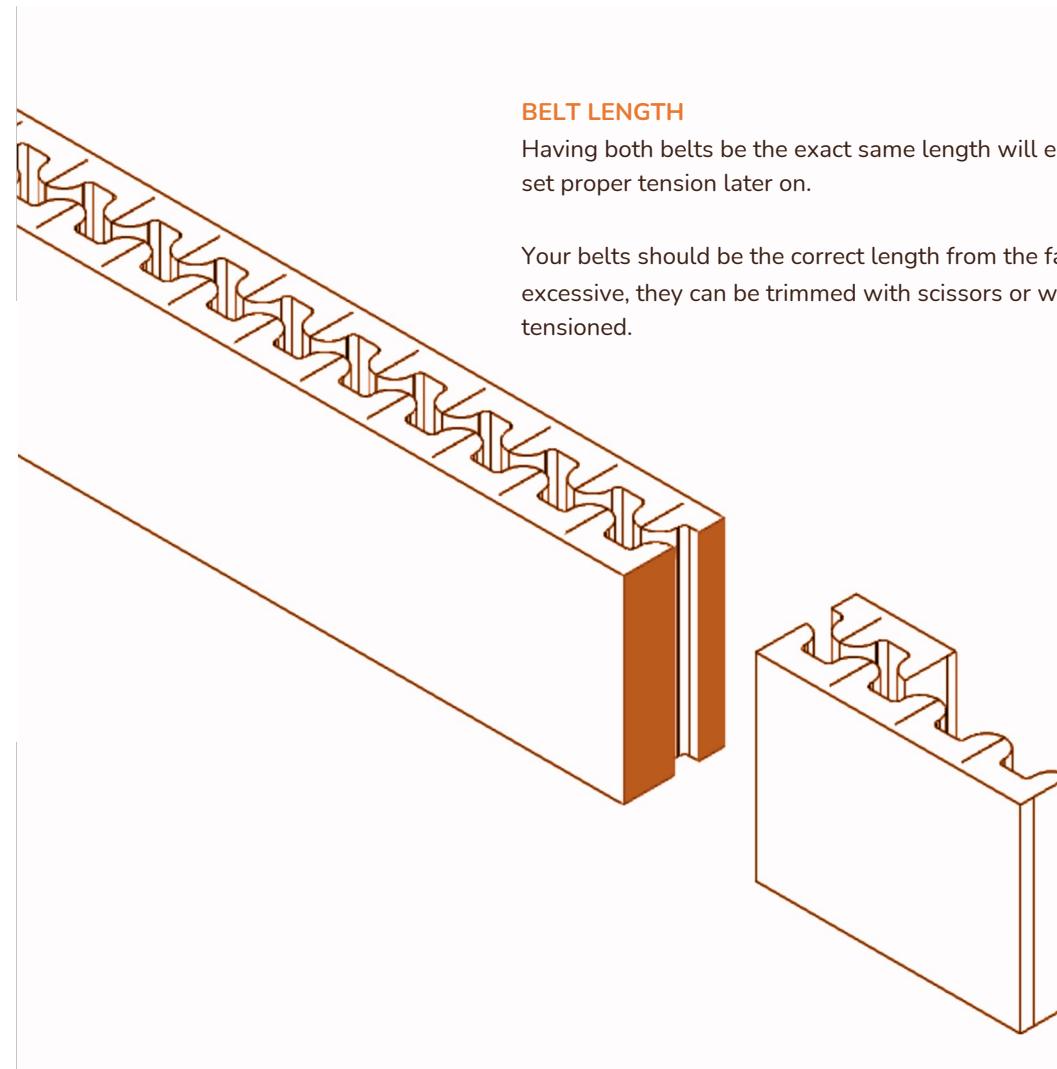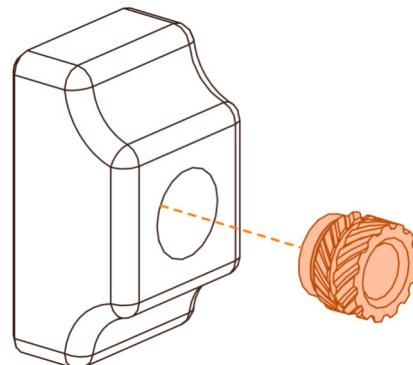
**BELT LENGTH**


Having both belts be the exact same length will ensure that you can set proper tension later on.








Your belts should be the correct length from the factory, but if excessive, they can be trimmed with scissors or wirecutters once tensioned.

**LOOSEN THE BELT TENSION KNOBS**

Before we begin belting the printer, we need to loosen the tension knobs so that we have adequate travel to properly tension the belts later on. Be sure the motor screws are also loosened for this process.

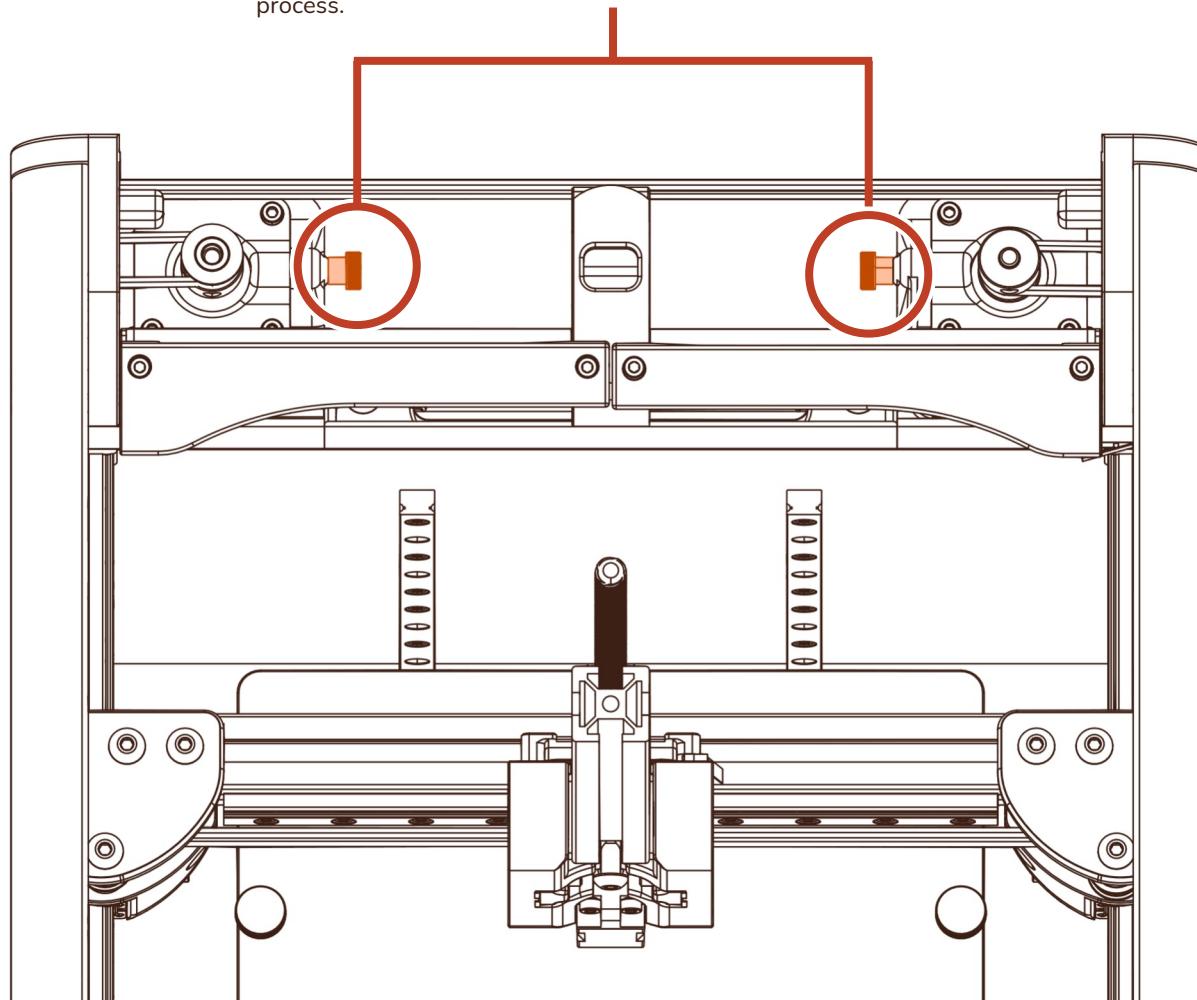

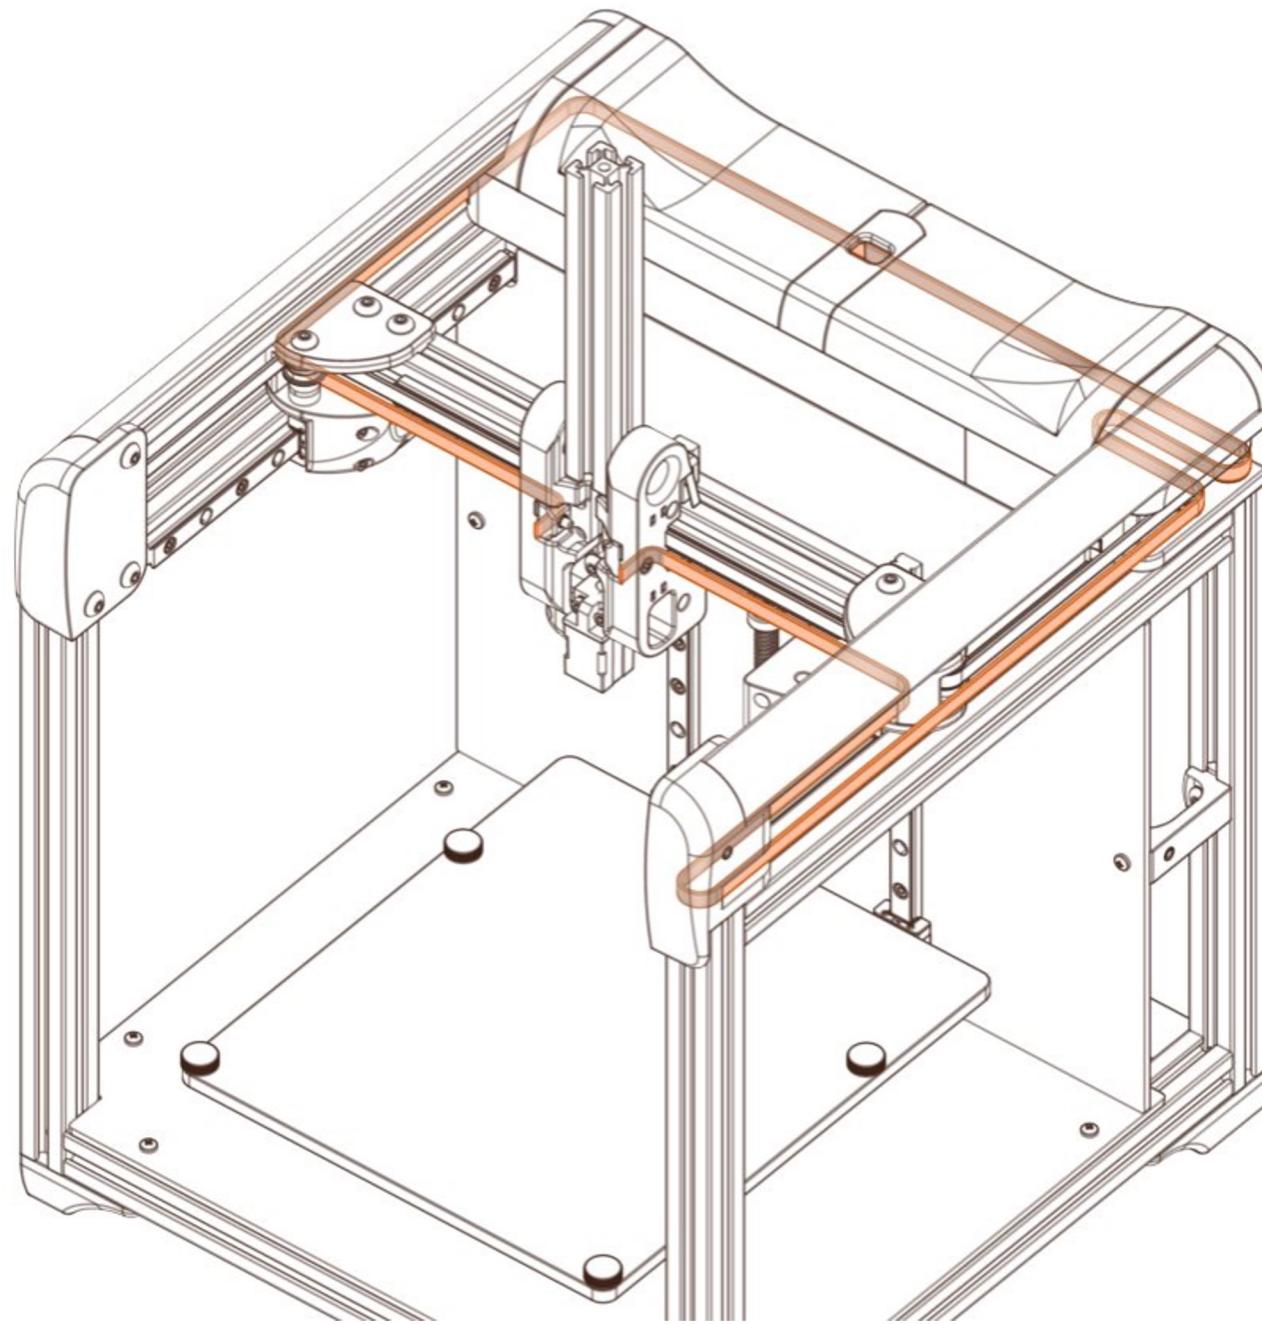


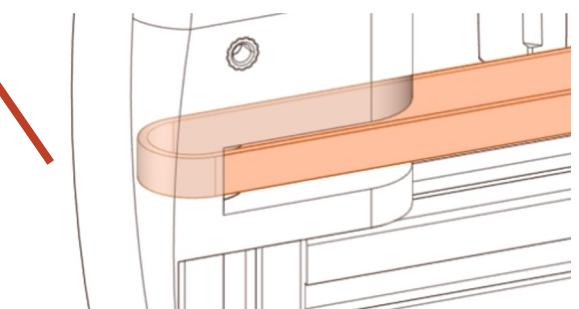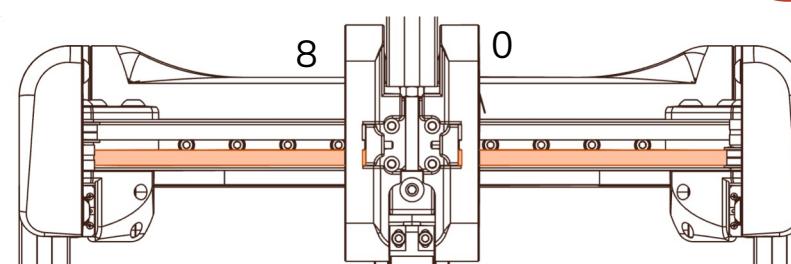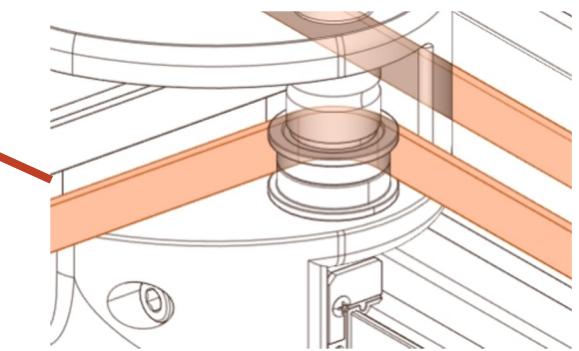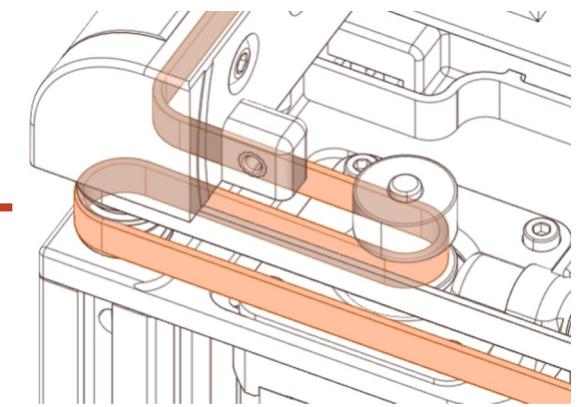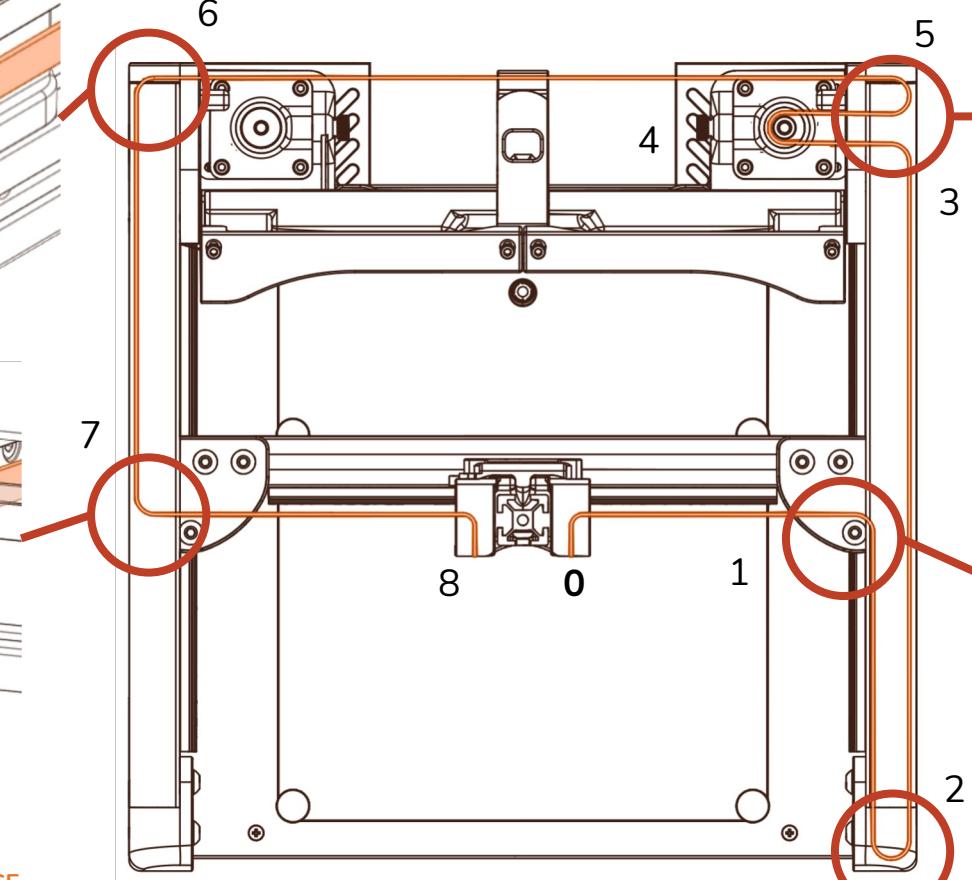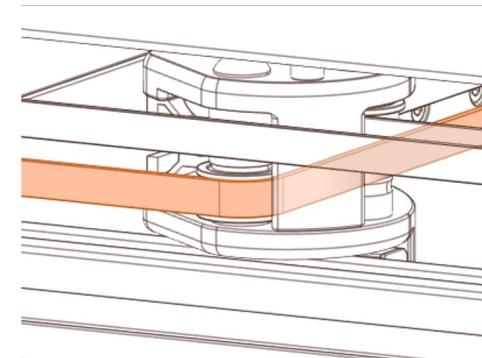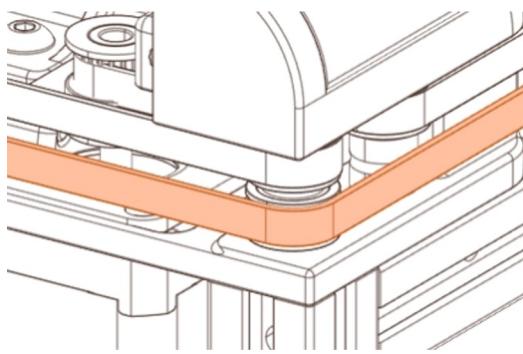
**LIKE TYING YOUR SHOES BUT WORSE**

Thread belt A through the printer.

The belt sits below the B belt.

The belt should only contact smooth bearing surfaces. No part of the belt should be touching plastic.

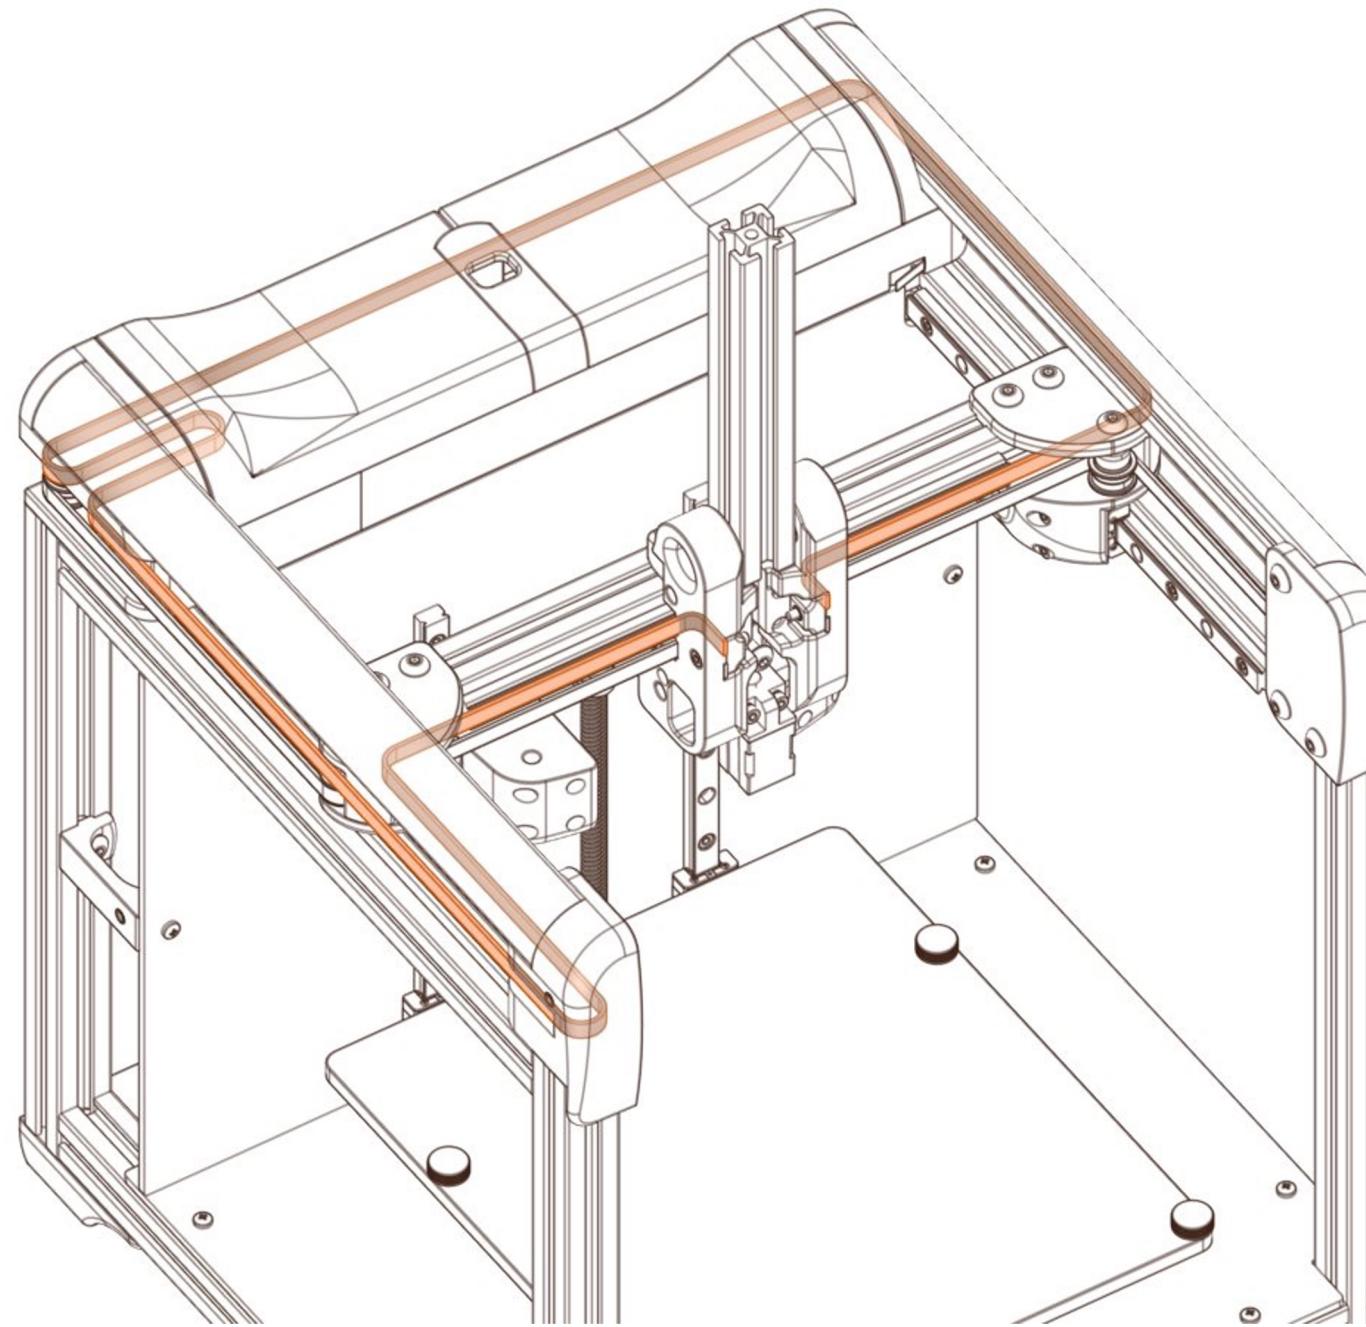

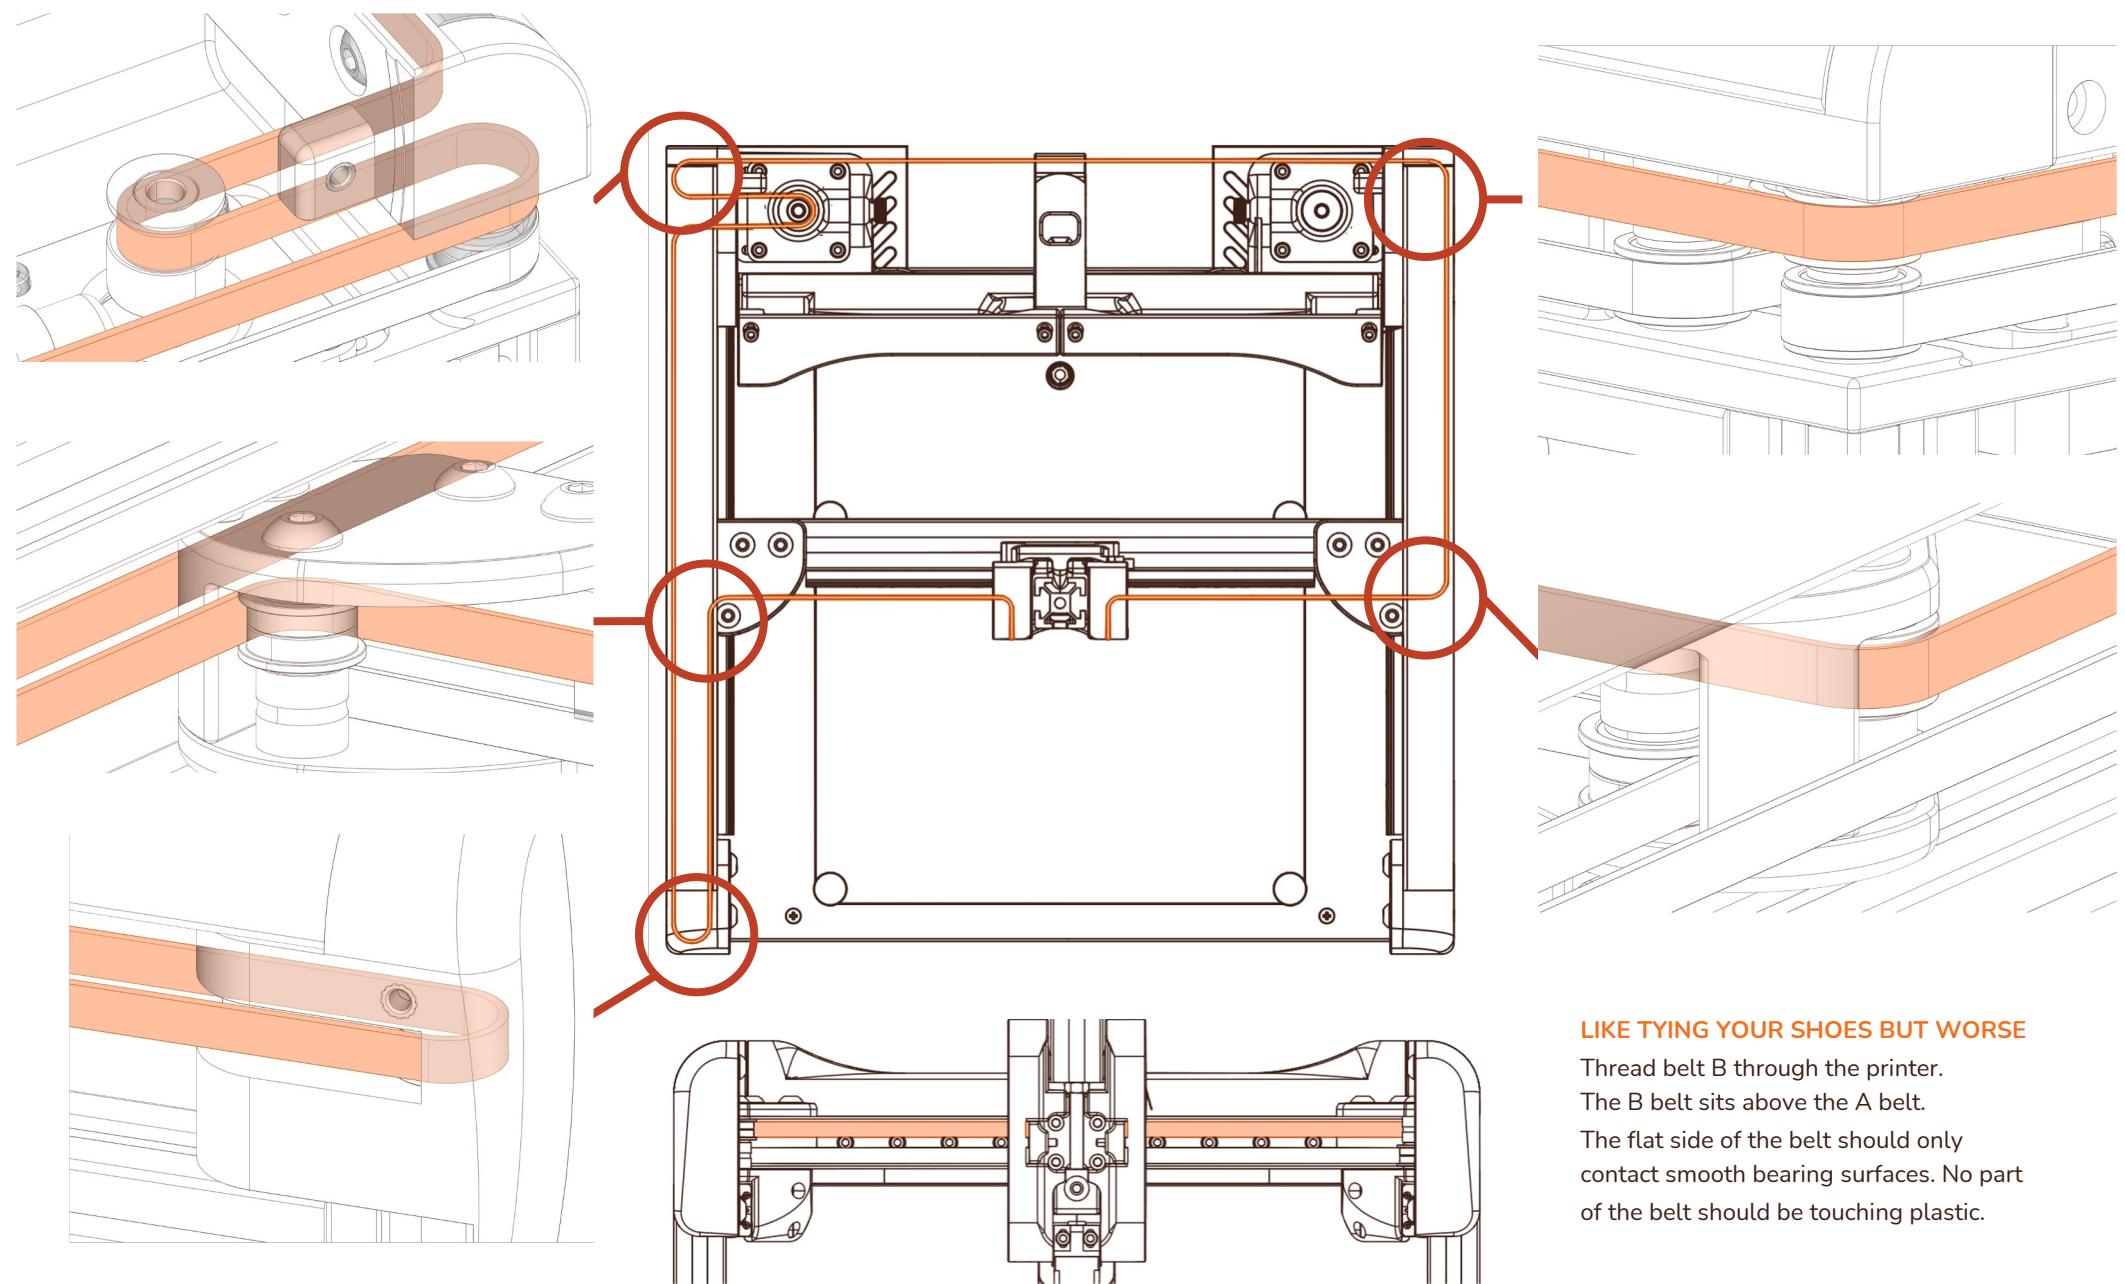
**LIKE TYING YOUR SHOES BUT WORSE**


Thread belt B through the printer.  
The B belt sits above the A belt.  
The flat side of the belt should only  
contact smooth bearing surfaces. No part  
of the belt should be touching plastic.

**110Hz AT MAX Y TRAVEL**

You can use an instrument tuning app on your smartphone [or in browser](#) to measure the frequency of the belts when the gantry is in a fixed location. Move the gantry all the way to the rear of the printer and pluck the indicated belts.

As close to 110Hz as you can get is ideal.

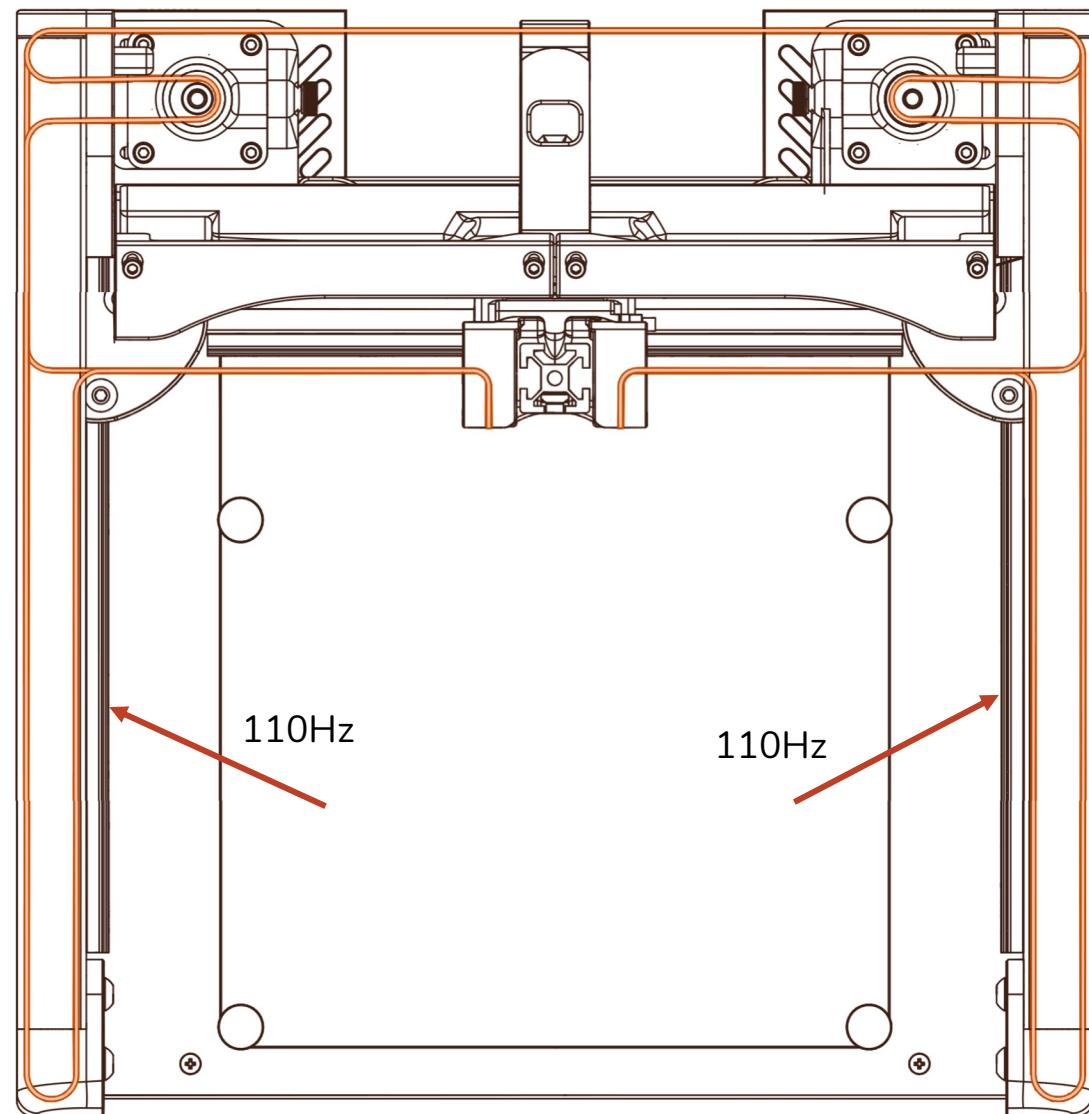

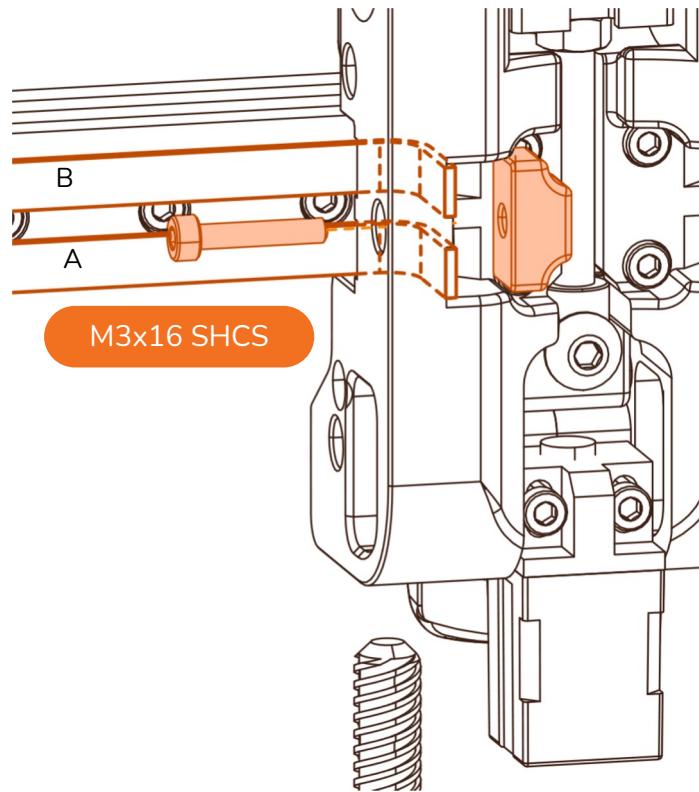


#### SECURING THE BELTS

Run the belts through their respective paths, and attach them to the opposite side of the X carriage. Before fully tightening the belt clamps, you can pull the ends of the belts to tighten them as best you can by hand.

#### BELTING THE PRINTER


Start on one side of the toolhead and secure the A and B belts to the X carriage.

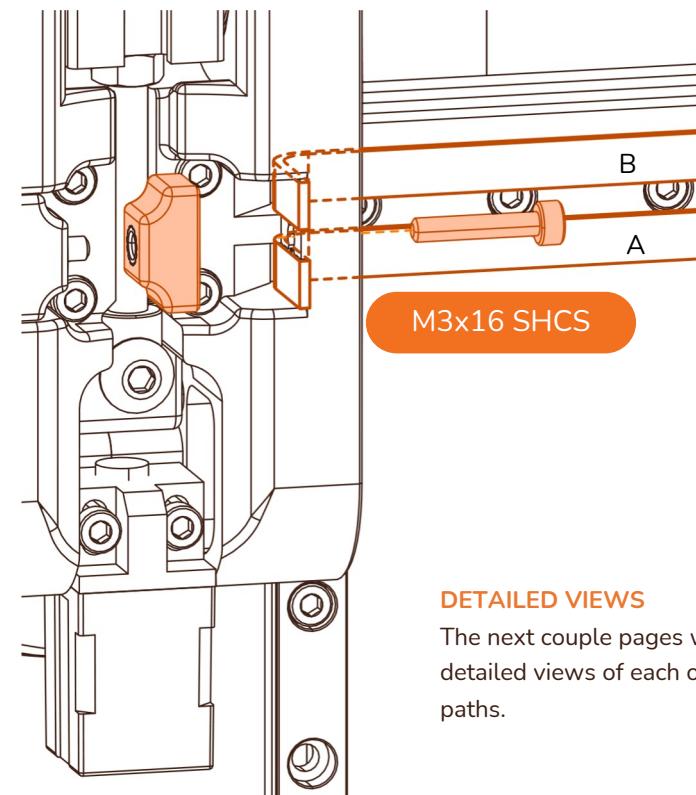


#### DETAILED VIEWS

The next couple pages will show detailed views of each of the belt paths.

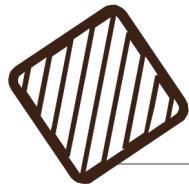

**Difficulty**

Hard

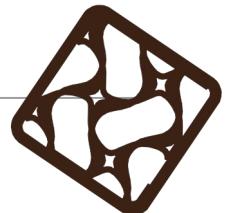**Tools Needed**

M2 Driver  
M3 Driver  
M5 Driver

Heatset Insert Tool  
Soldering Iron (Not Included)

**Hardware Needed**

M3 Heatset Inserts (8x)  
M2 Heatset Inserts (2x)  
M2x10 Socket Head Cap Screw (6x)  
M3x8 Socket Head Cap Screw (7x)  
M3x12 Socket Head Cap Screw (5x)  
M3x16 Socket Head Cap Screw (2x)  
M3x20 Socket Head Cap Screw (8x)  
M5x10 Button Head Cap Screw (1x)  
M6 Thumb Screw (1x)

Nozzle Heater (1x)  
Body Heater (1x)  
E Motor (1x)  
E Leadscrew (1x)  
Heater Body (1x)  
Zip Ties (3x)  
Cartridge (1x)  
MGN7-H Rail (1x)

**Printed Parts Needed**

Heater Jig (1x)  
Cocoa Press Medallion (1x)  
MJF Plunger Adapter (1x)  
Extruder Motor Case (1x)




Extruder Motor Cover (1x)  
Extruder Shell Front (1x)  
Extruder Shell Rear (1x)  
Extruder Cable Cover (1x)

**INSTALLING HEATERS**

The body heater gets wrapped around the cartridge housing. The 4 holes in the heater align with the 4 screw holes in the component. Use the printed guide to help attach the heater to the barrel. Wrap the heater around and be sure to prevent any air bubbles from forming.




We strongly suggest going through the motions before removing the adhesive backing.

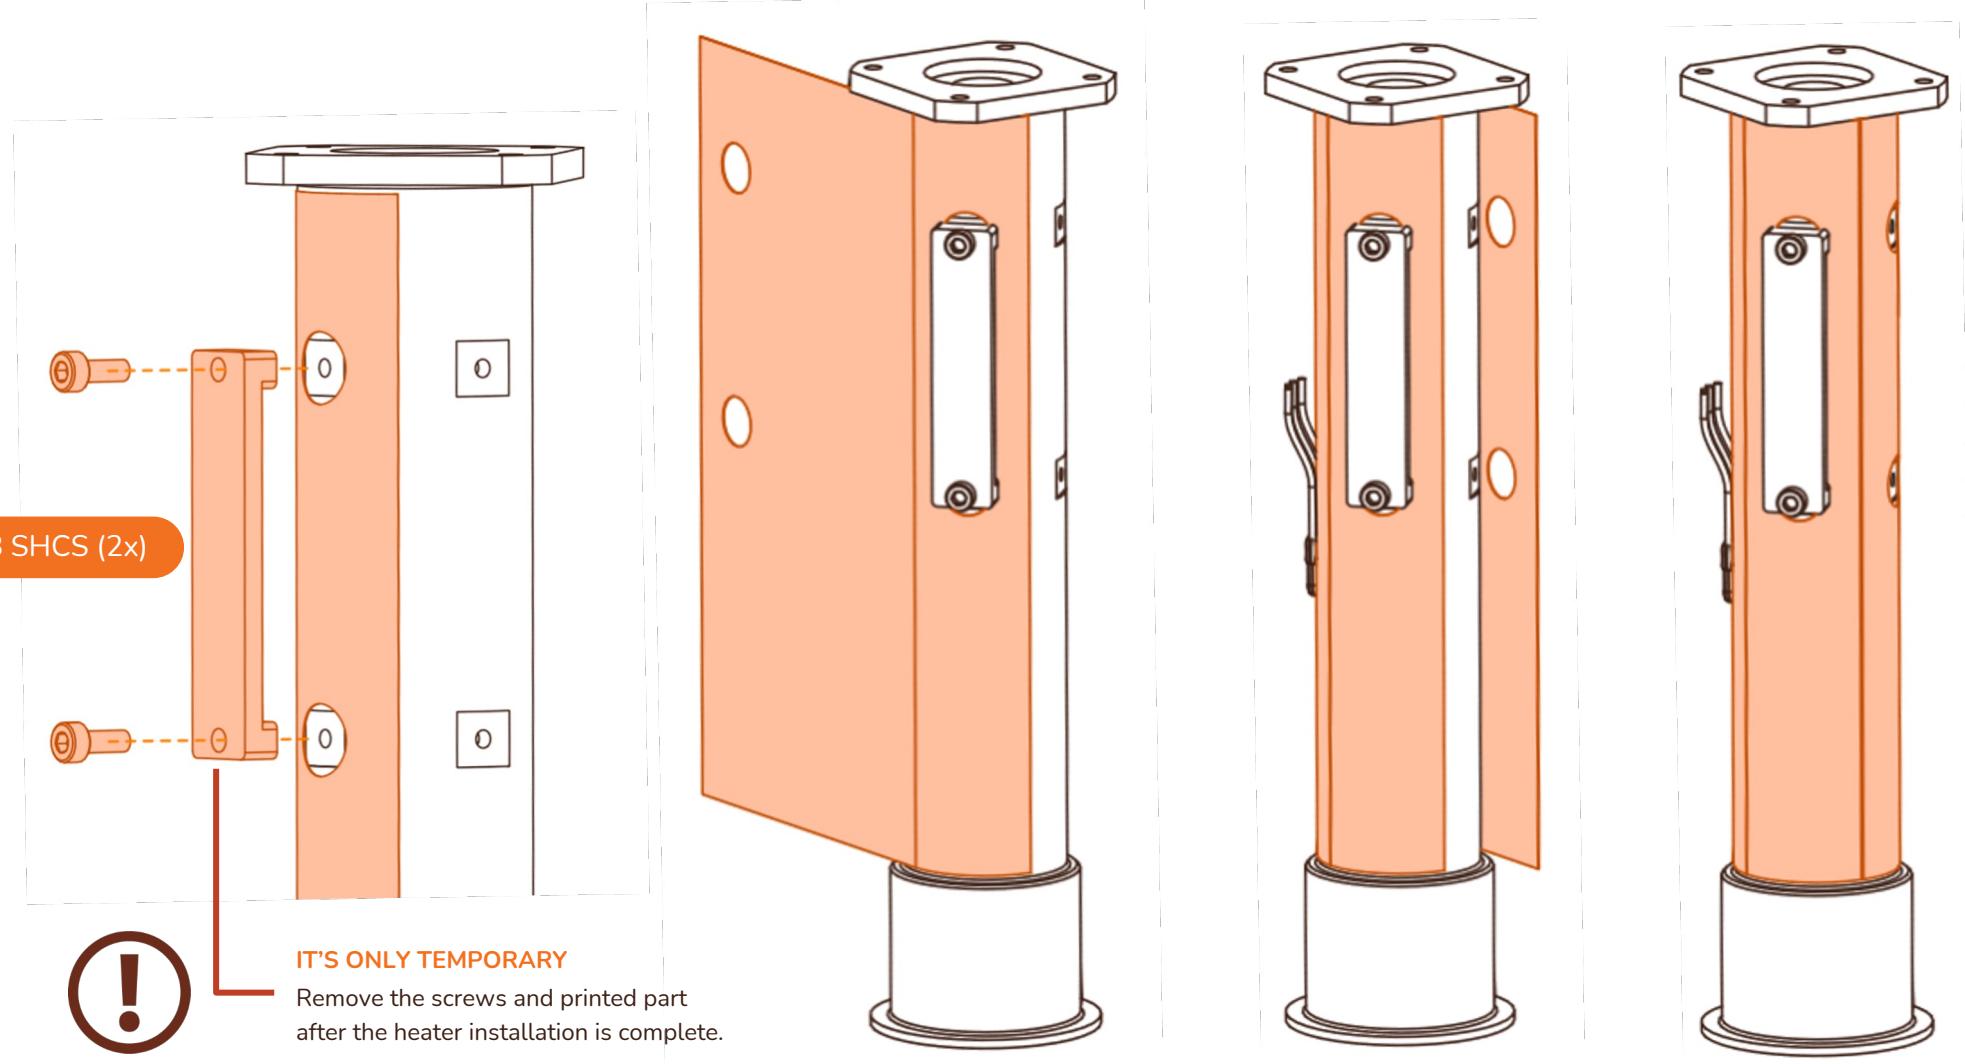


**STICKY!**

When sure that the heater is in the right space, tighten the M3 screws, and unpeel approximately an inch off of the opposite side and fold paper over itself. Then lay firmly onto tube, ensuring no bubbles form.

We strongly suggest going through the motions before removing the adhesive backing.

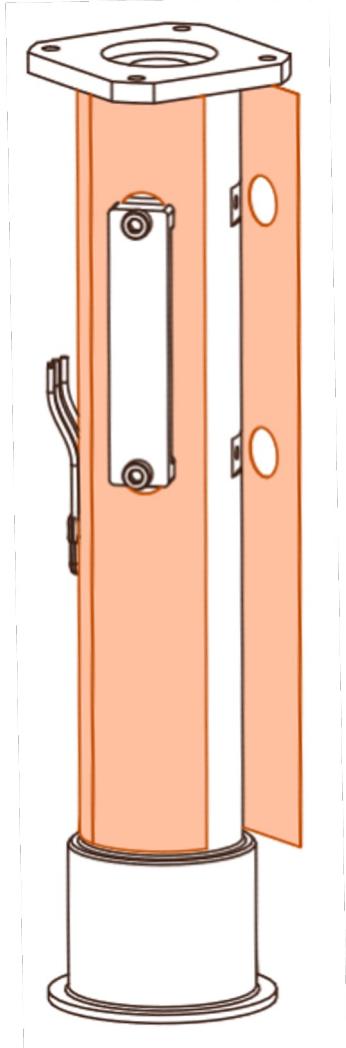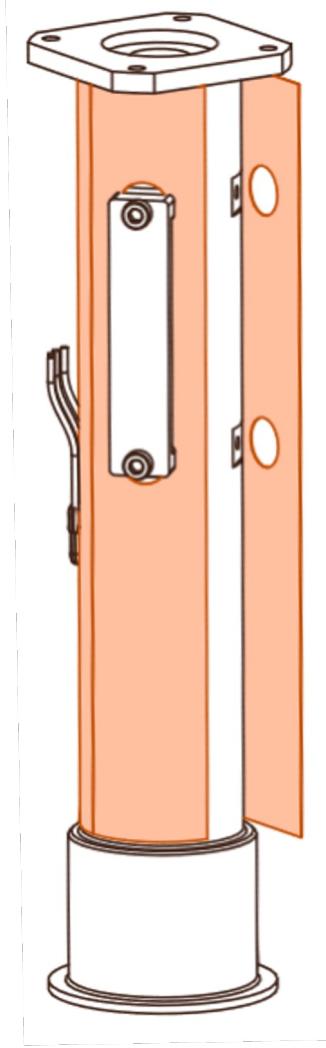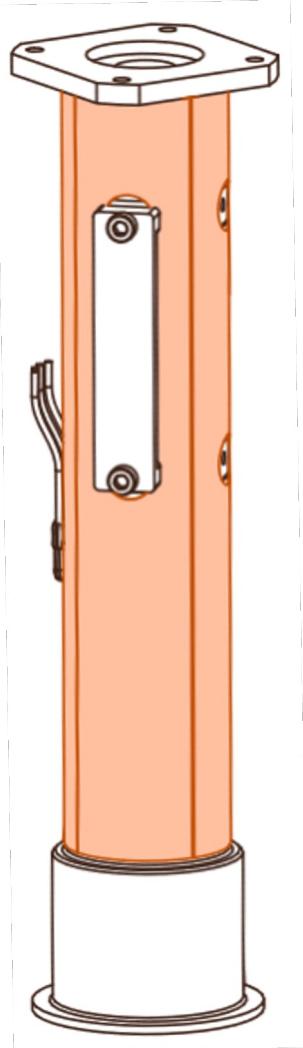**PERFECTION ISN'T PRACTICAL**


While we ask you try to get the body heater aligned as well as possible, the actual objective is to avoid any fasteners or screws having their electrical traces crushed by tightening. Crushing the traces can cause sporadic failures and safety issues.

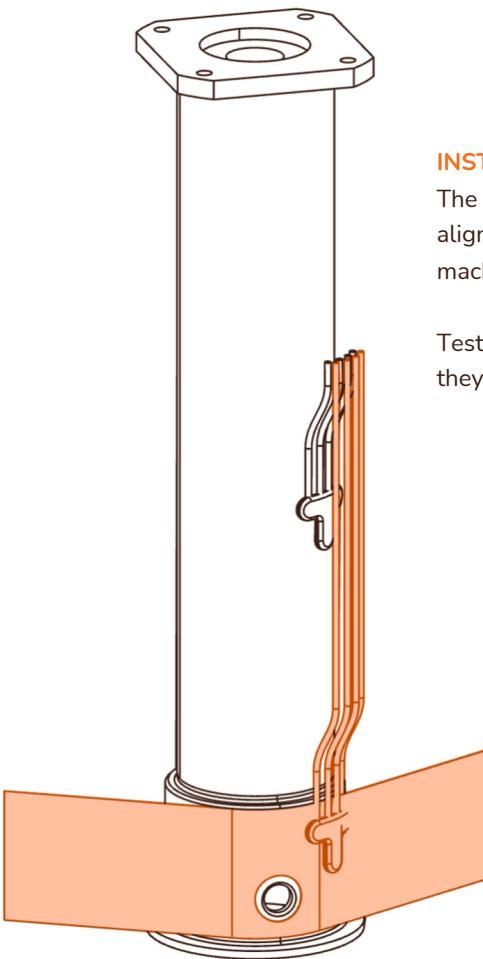



#### INSTALLING HEATERS

The smaller heater has a single hole that aligns with the hole in the front of the machined component.


Test the positioning to understand where they go before removing the adhesive back.

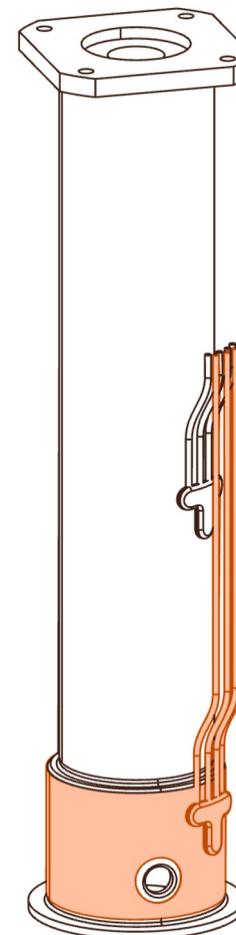


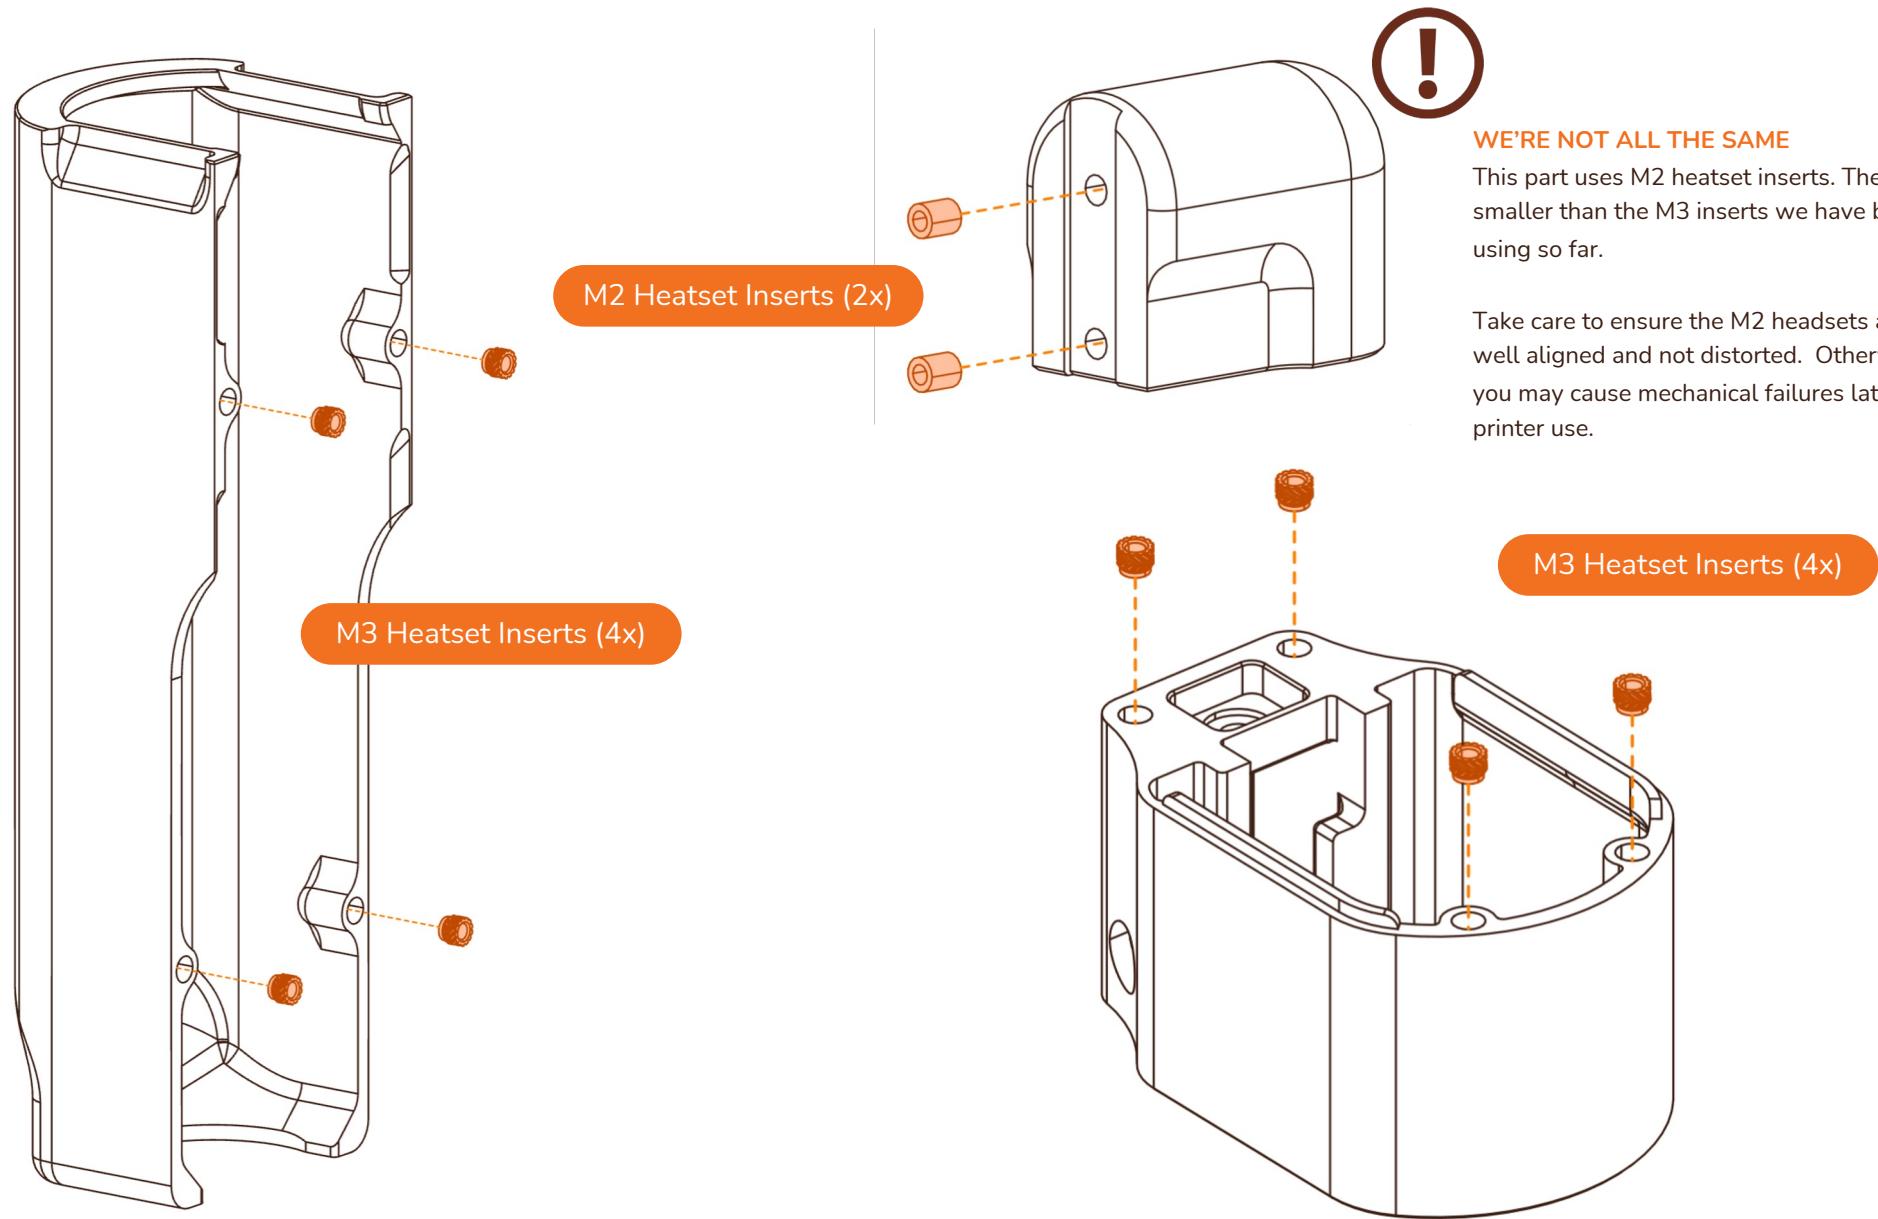

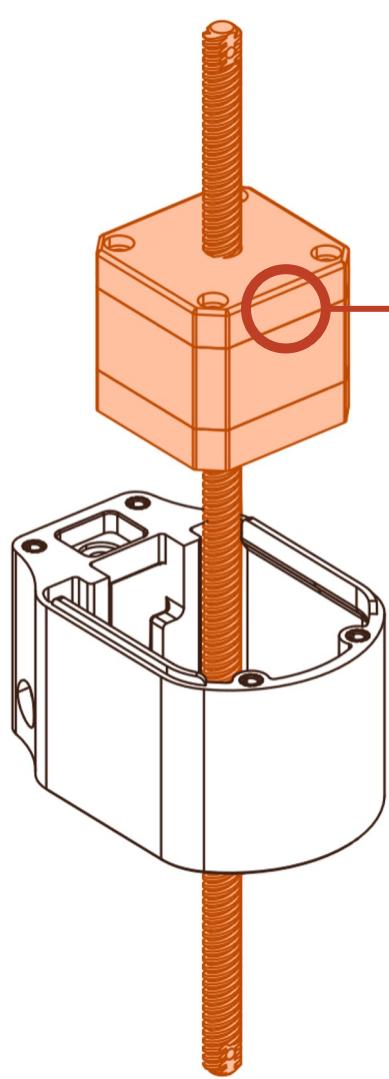
**MOTOR WIRE ROUTING**


The toolhead motor wires should exit out the front of the motor. Route the white connector through the open hole on the front of the piece down and away from the motor.

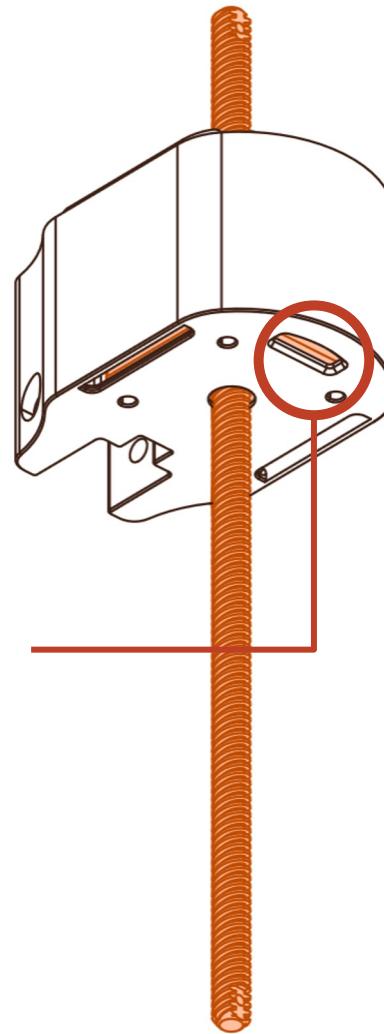



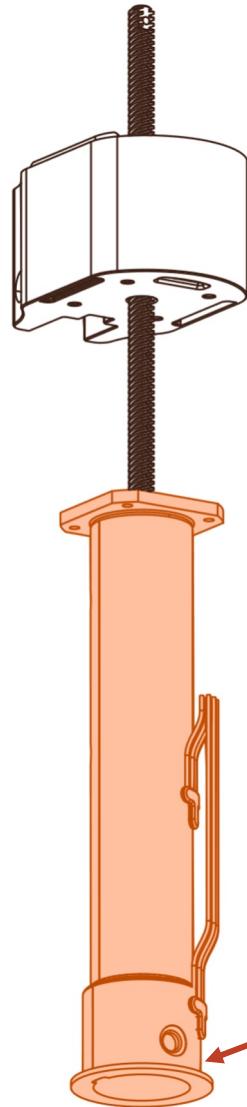
**FRONT TO FRONT**


Make sure the through hole in the cartridge housing assembly is facing the front rounded portion of the printed part.

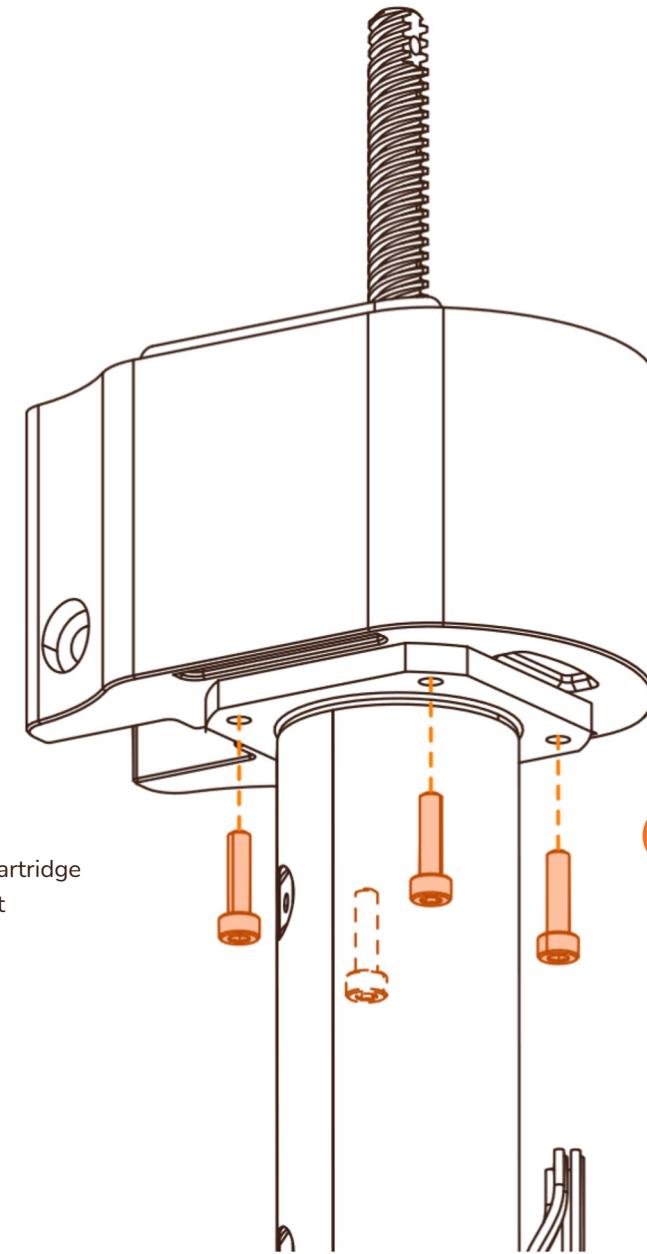

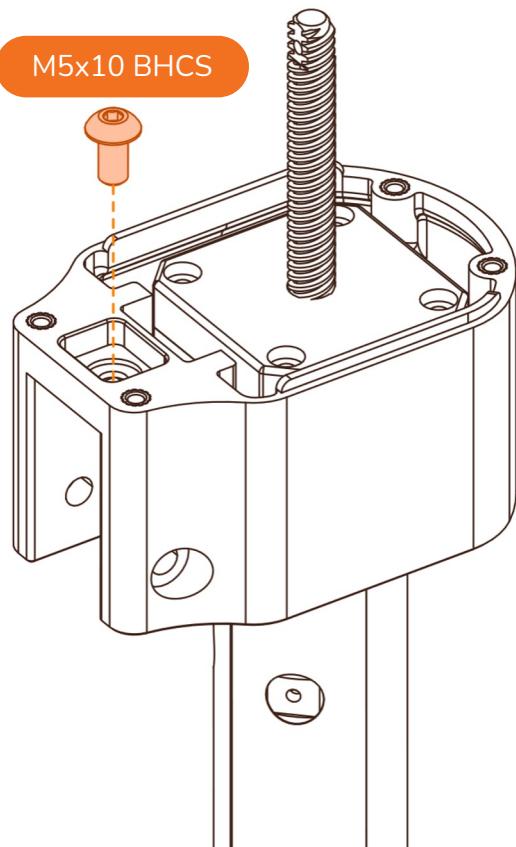**SMALL PART, BIG DIFFERENCE**



This insert allows you to precisely adjust the offset between your Z Probe and the rest of the toolhead, be sure to include it.

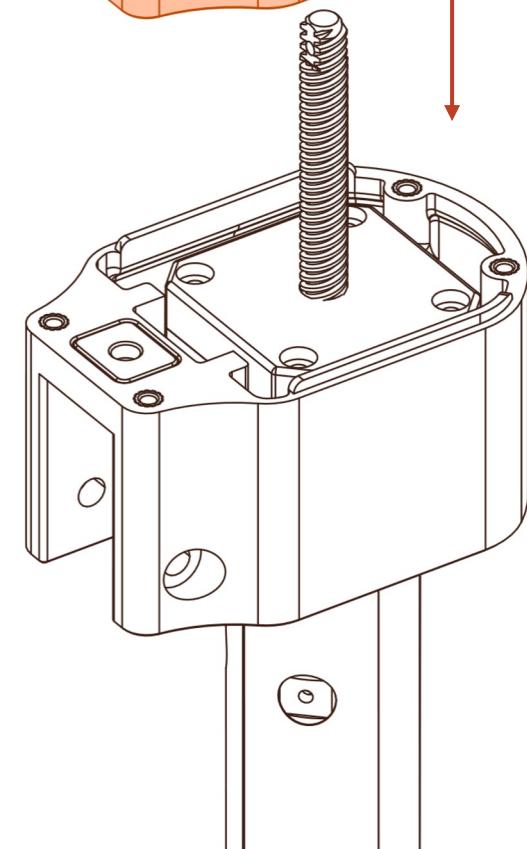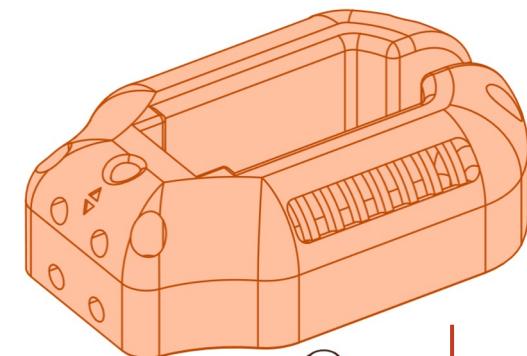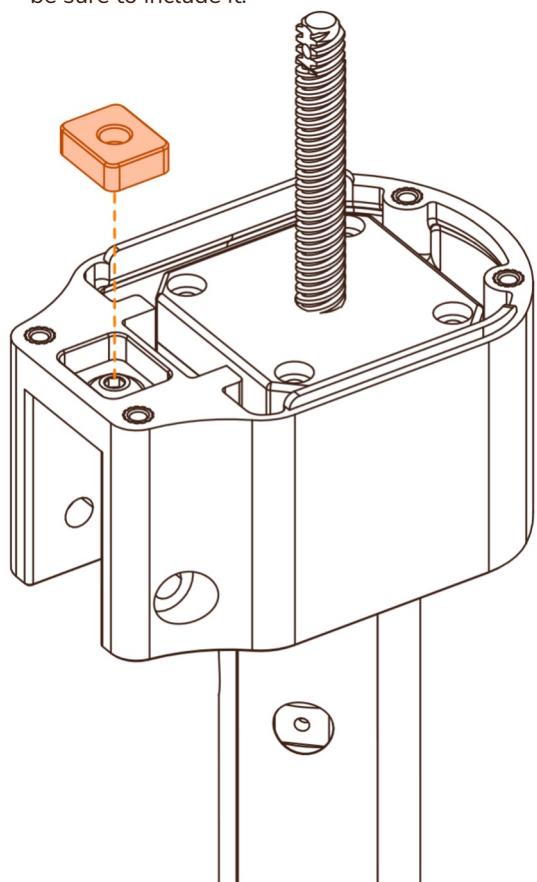


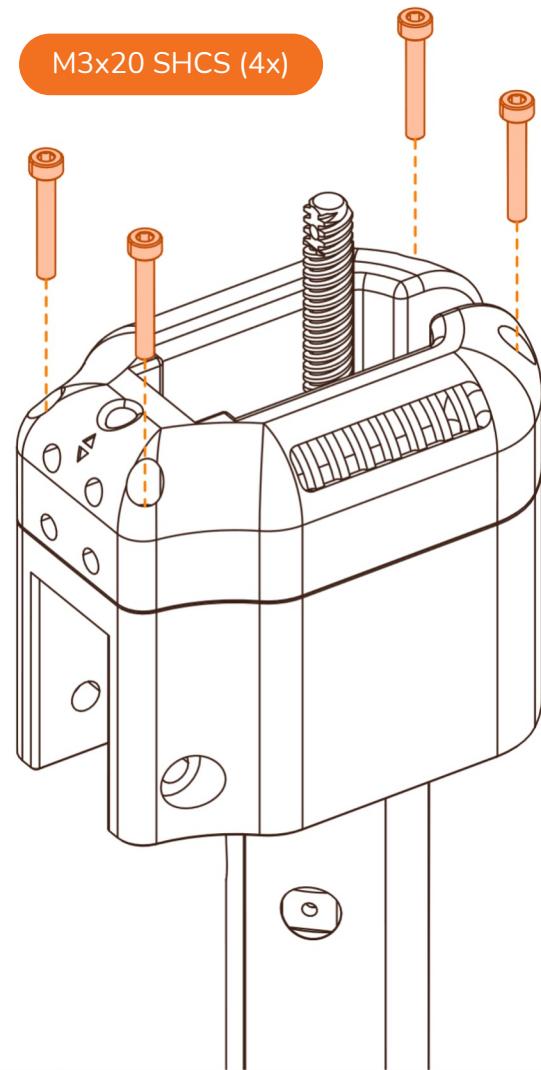

#### LEAD SCREW ALIGNMENT



Make sure the leadscrew from the extruder motor is aligned in the center of the printed parts. If it is not, you may need to loosen the four M3x12 screws holding the motor on and adjust its position.

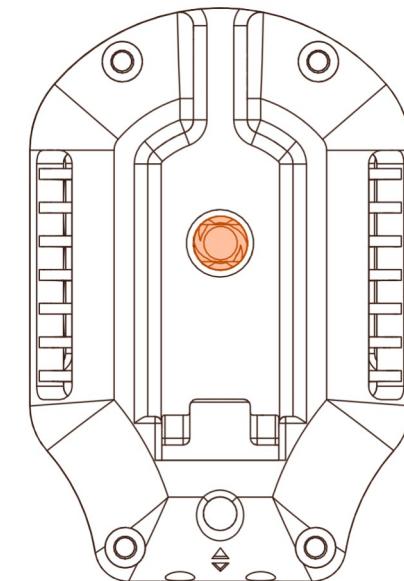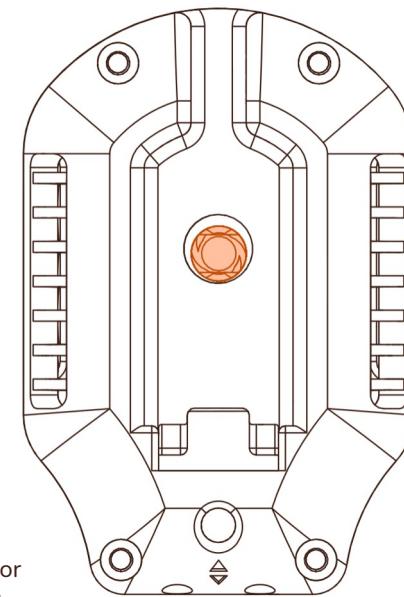

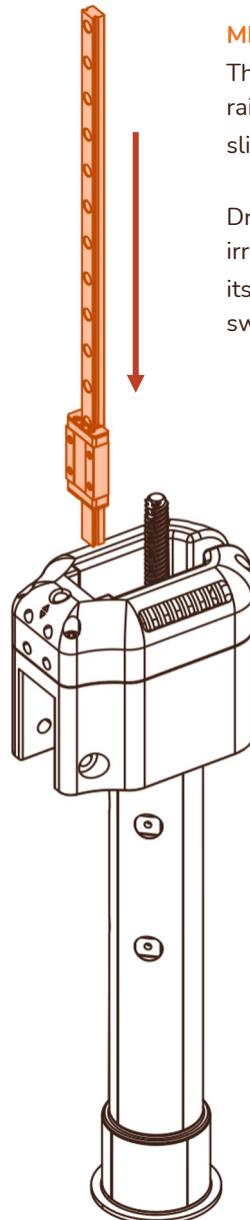
**MIND THE CARRIAGES**

The carriages are designed to slide along the rail easily. This unfortunately also includes sliding off the rails.


Dropping the carriage will likely result in irreparable damage. Keep each carriage with its respective rail. They are not meant to be swapped.


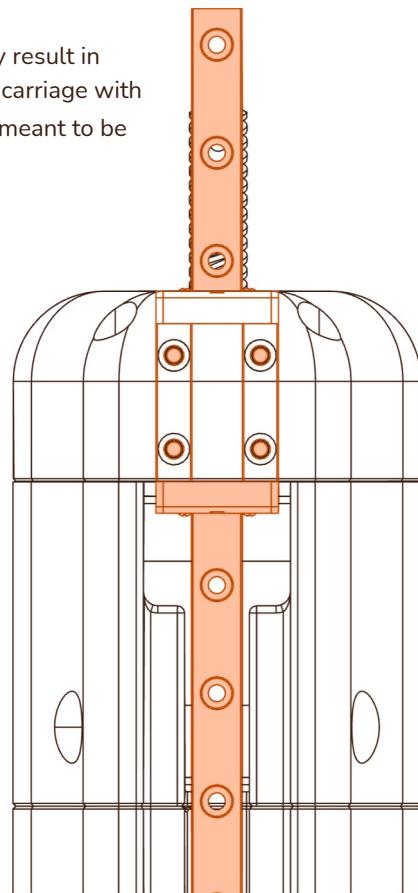
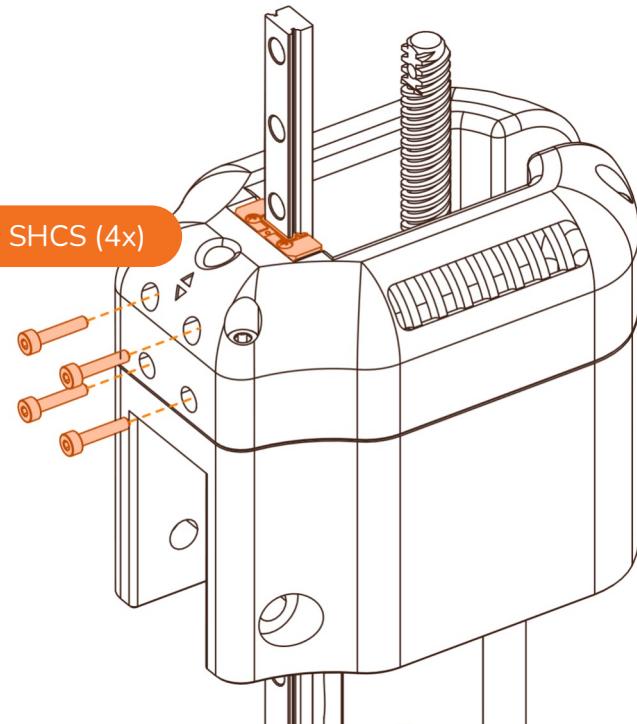
**M2x10 SHCS (4x)****NOT THAT BOUNCY**

Keep the rubber bumpers on the linear rails for now. This reduces the chances of the rail sliding out and causing damage to the carriage.

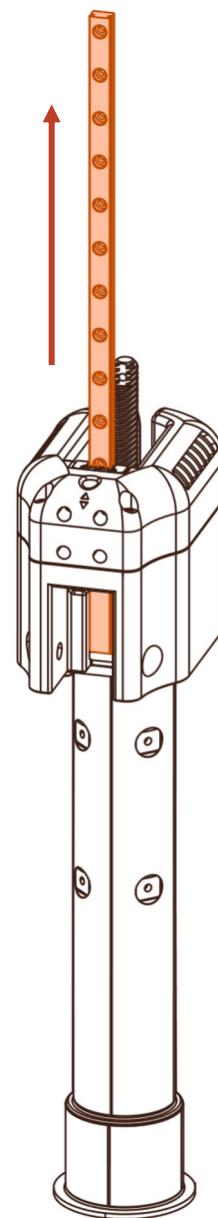**MAKE ROOM**

Slide the linear rail up and out of the way to make room for the printed housing to be installed. Take care not to let the rail slide off of the carriage.

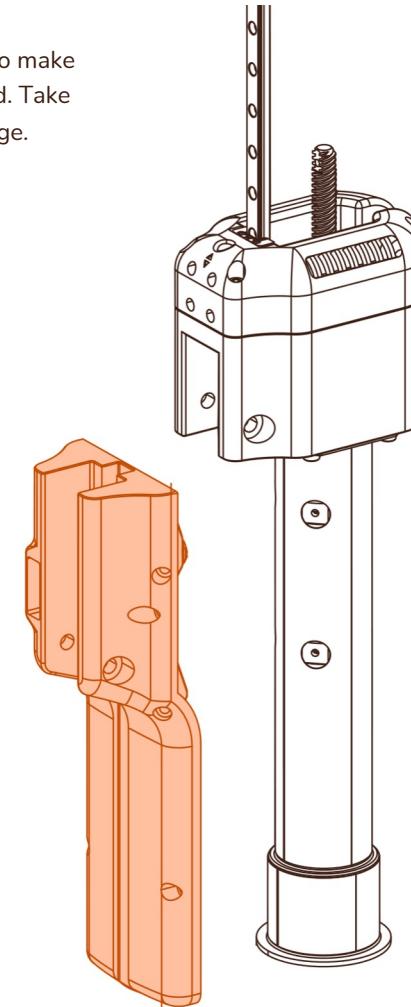

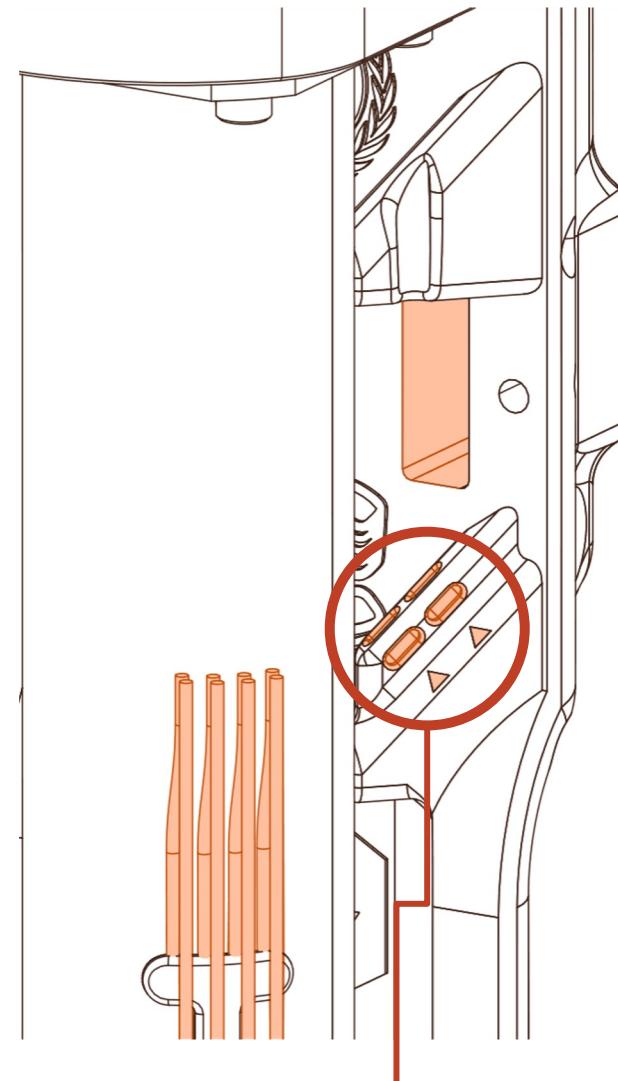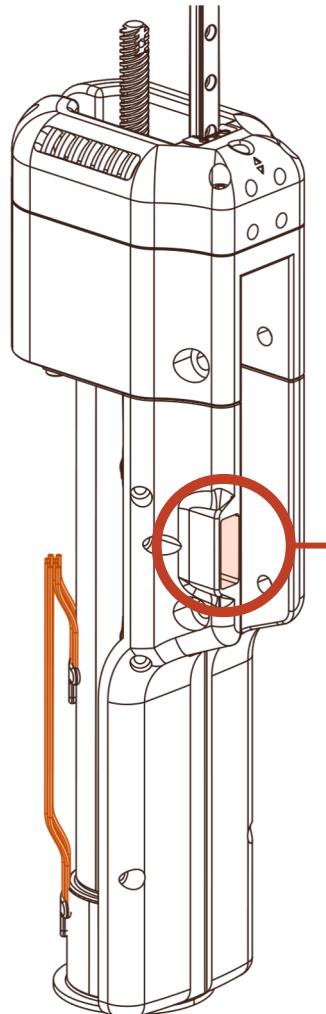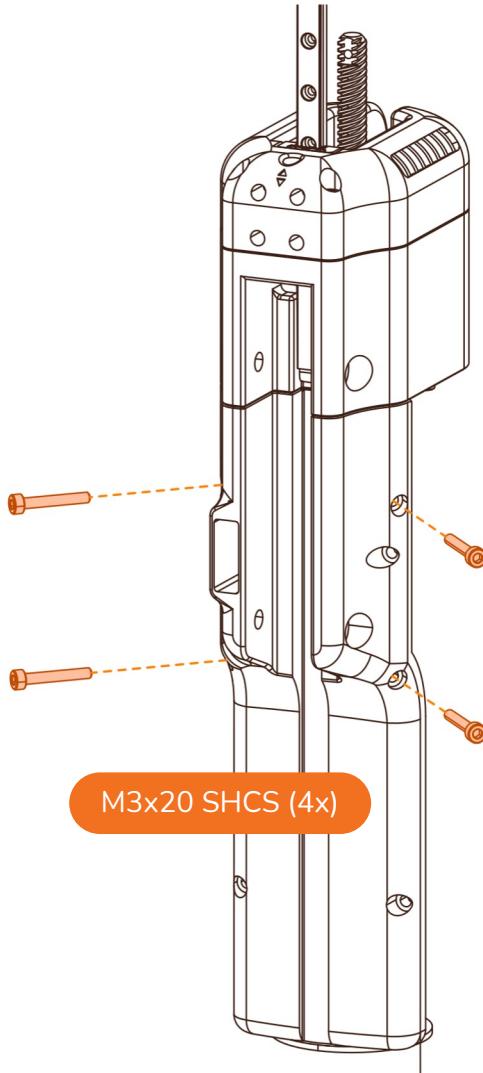


#### WIRE ROUTING



The wires for both heaters and the extruder motor need to be fed through the holes here. Ensure they're through before continuing.


Use the zip tie mounts on the opposite side to hold the heater wires in place to avoid strain.

**DO IT FOR THE BRAND**


The logo insert clips into place from the inside of the shroud.

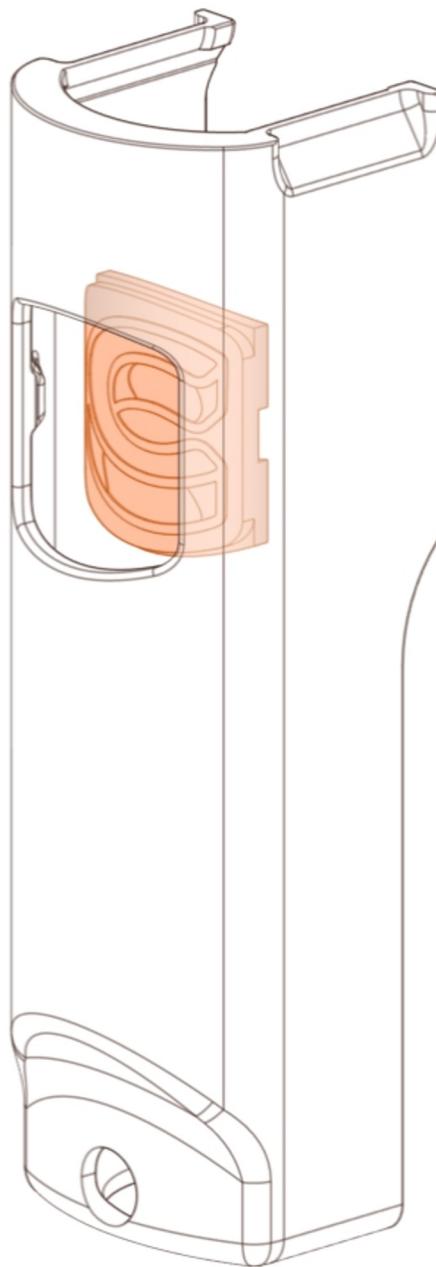

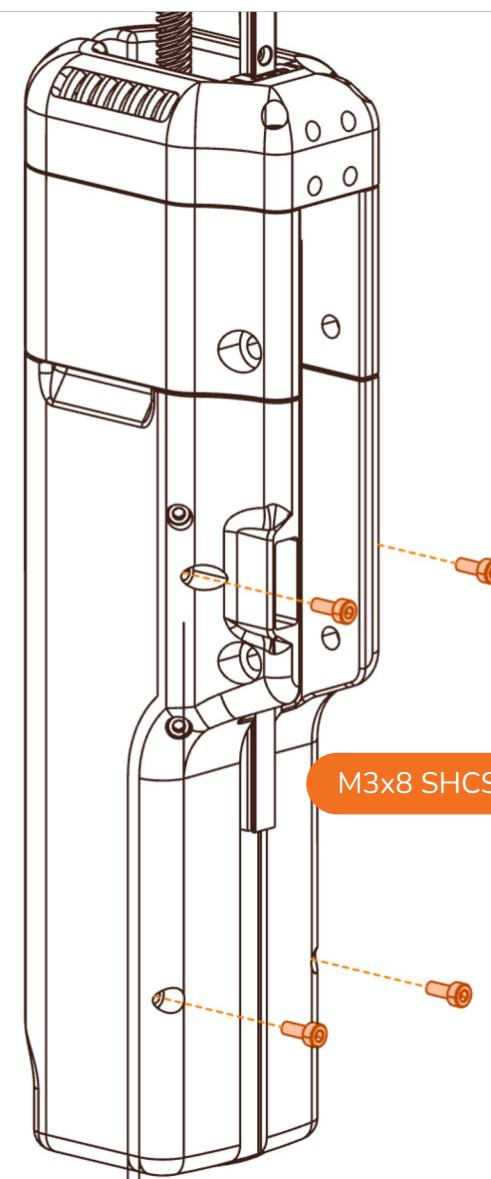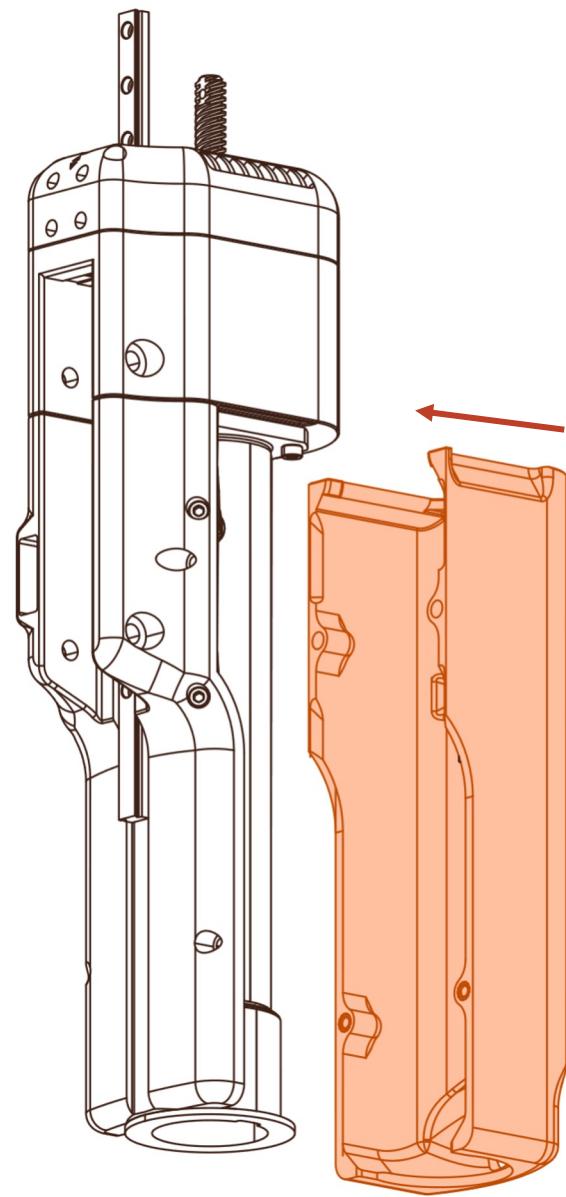

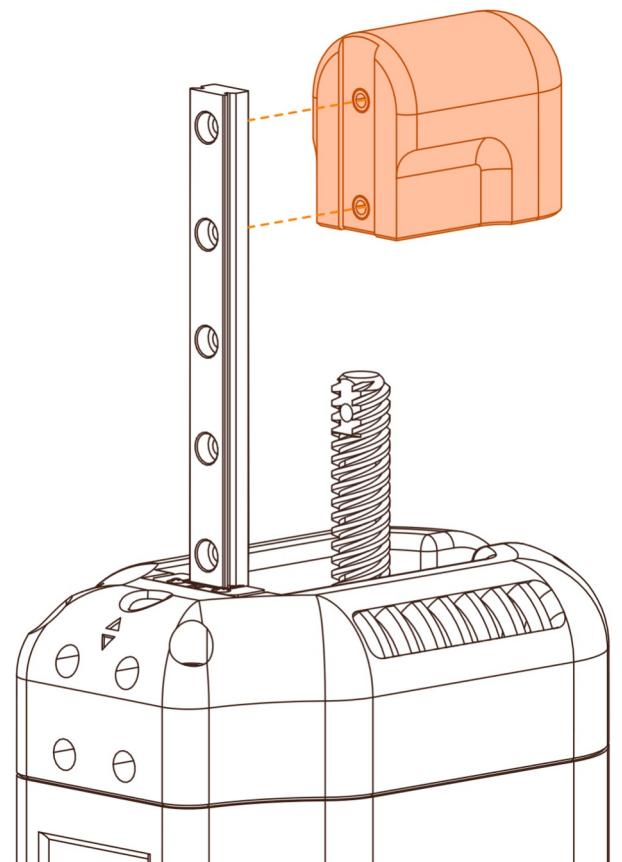


M2x10 SHCS (2x)

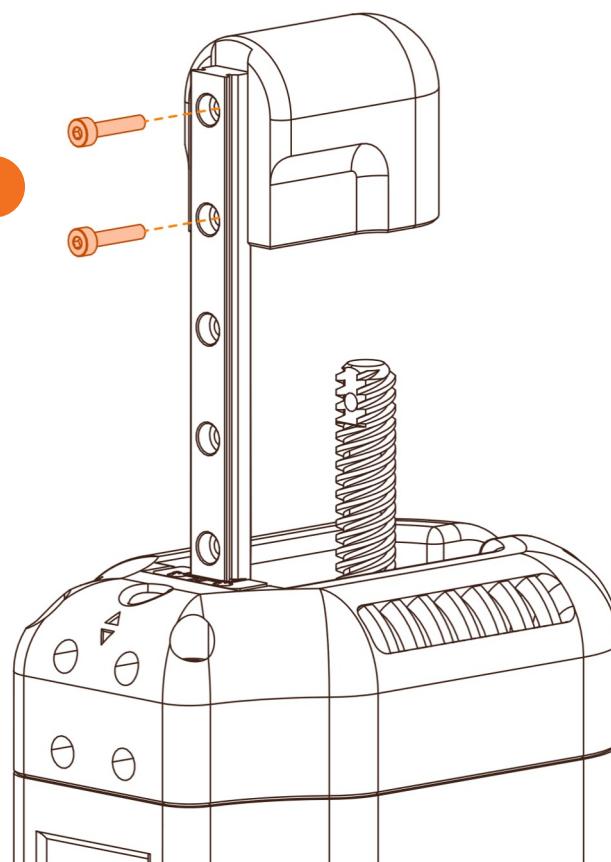




**STOP WITH THE STOPPERS!**



The rubber stoppers on the MGN7H rails can now be removed safely.

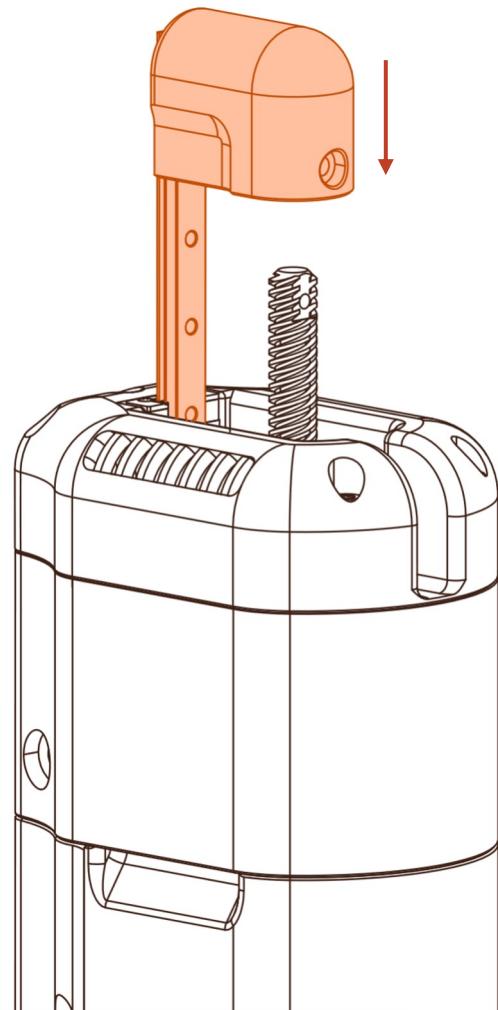
**LEADSCREW FLATS**

The leadscrew has two flats machined into it, make sure they are positioned front to back so that the leadscrew fits into the printed part.

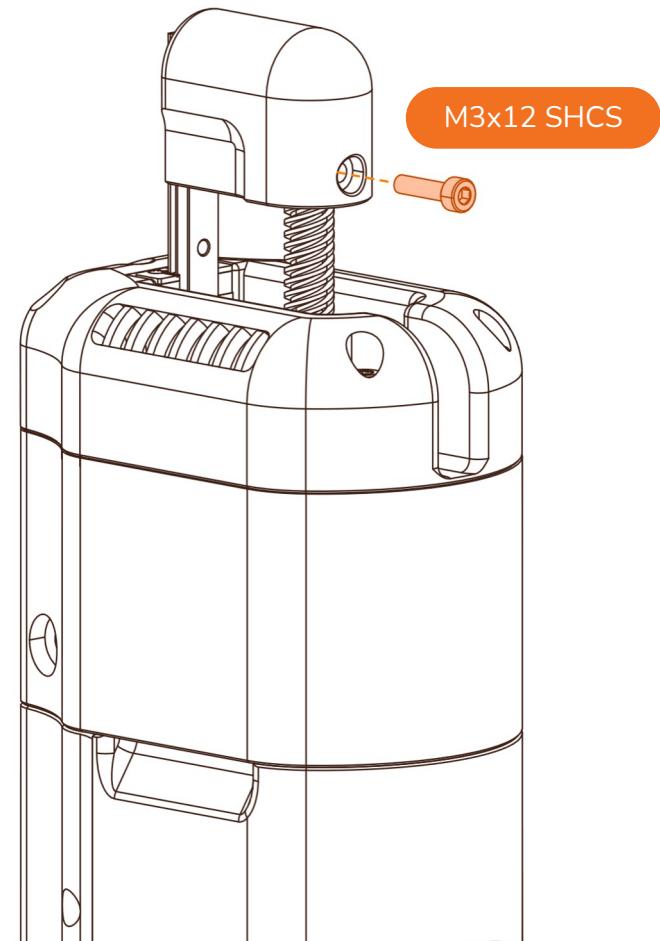

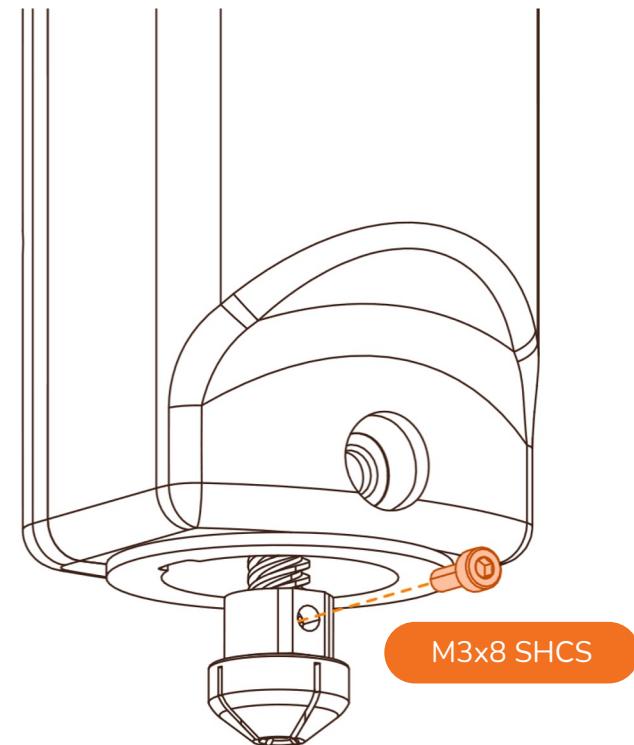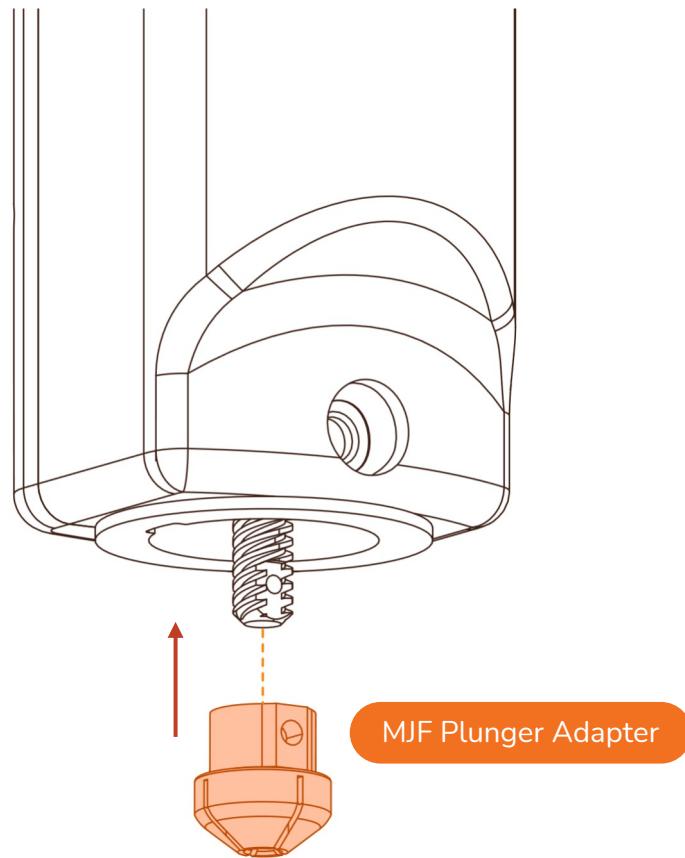


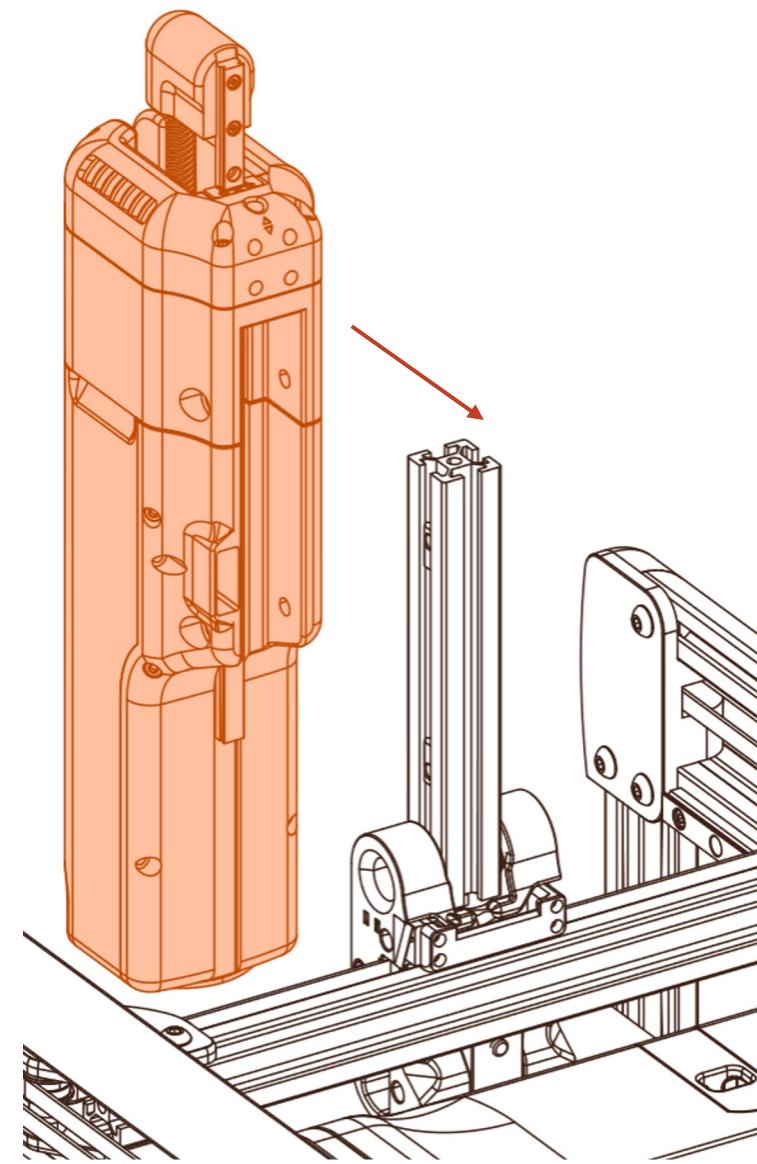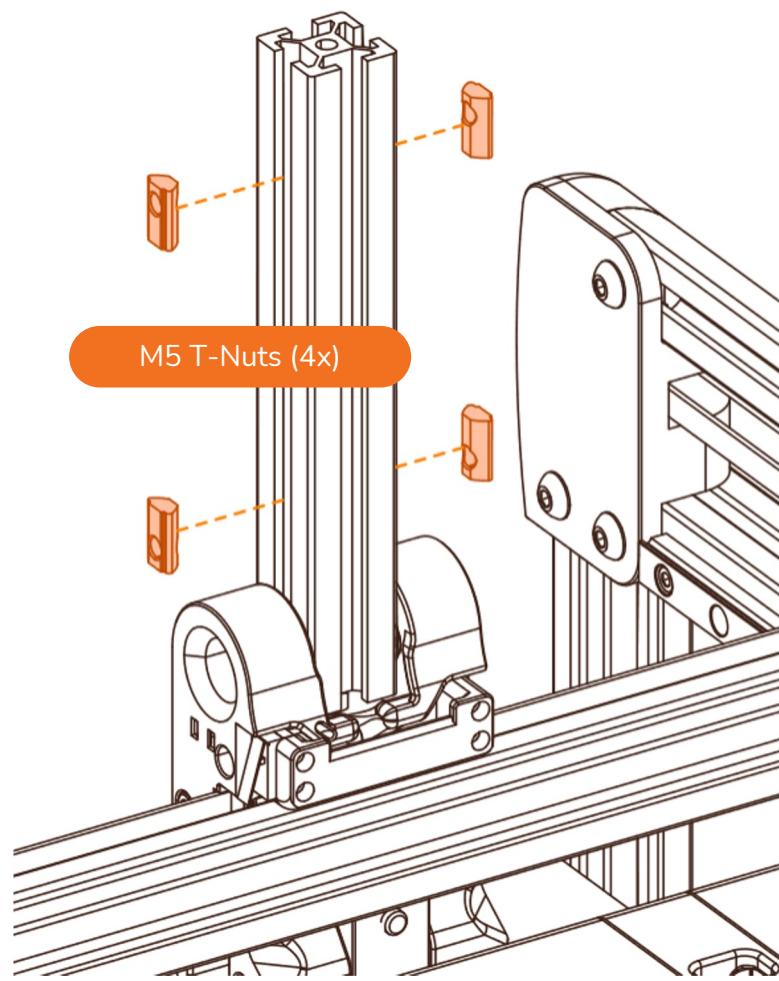

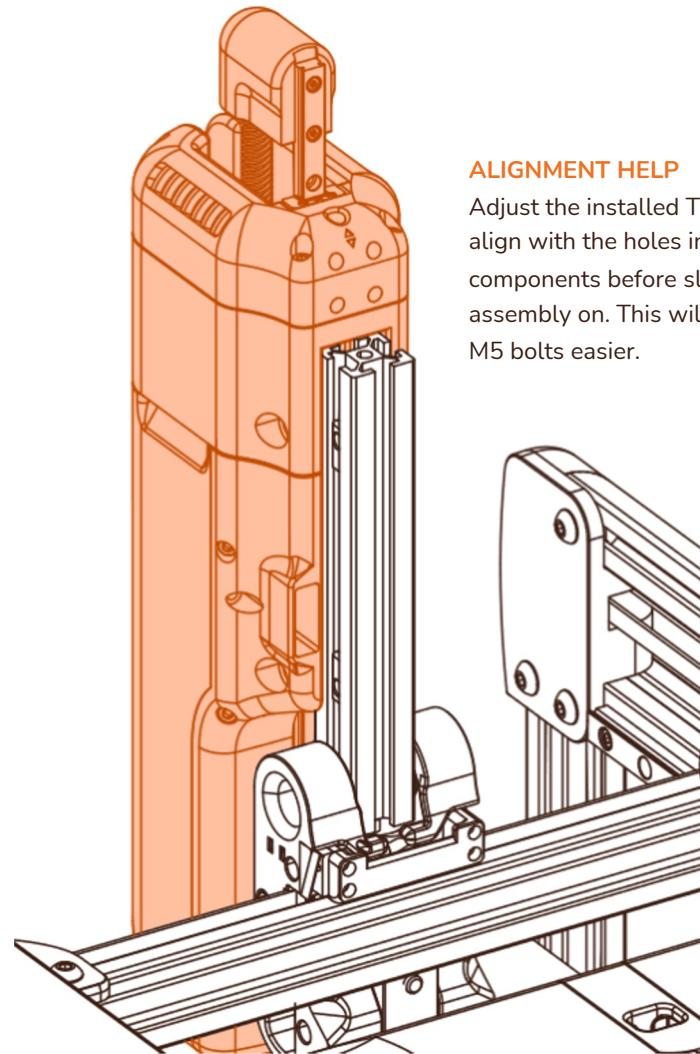


#### ALIGNMENT HELP



Adjust the installed T-nuts so that they align with the holes in the toolhead components before sliding the entire assembly on. This will make adding the M5 bolts easier.

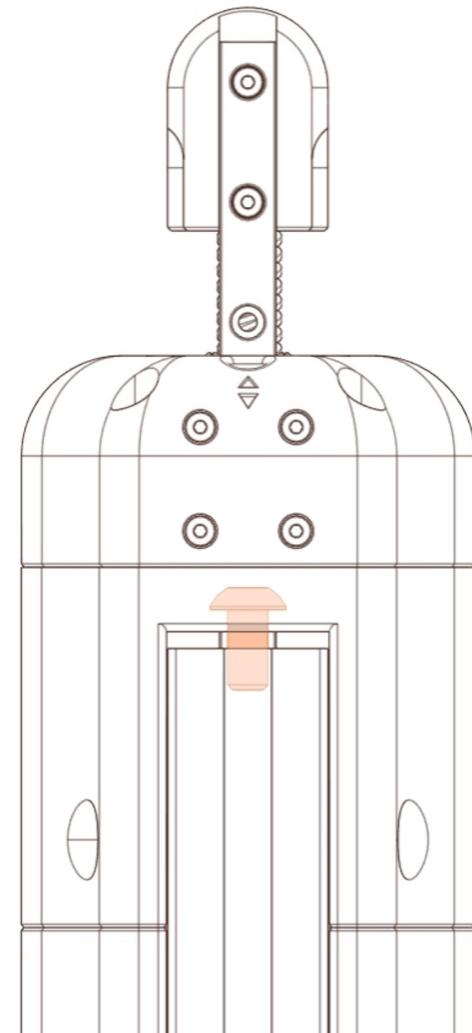


#### HEIGHT ADJUSTMENT

This is where you'd use the captured M5 Screw to adjust the height of the toolhead relative to the Z-Probe should you need to after assembly.

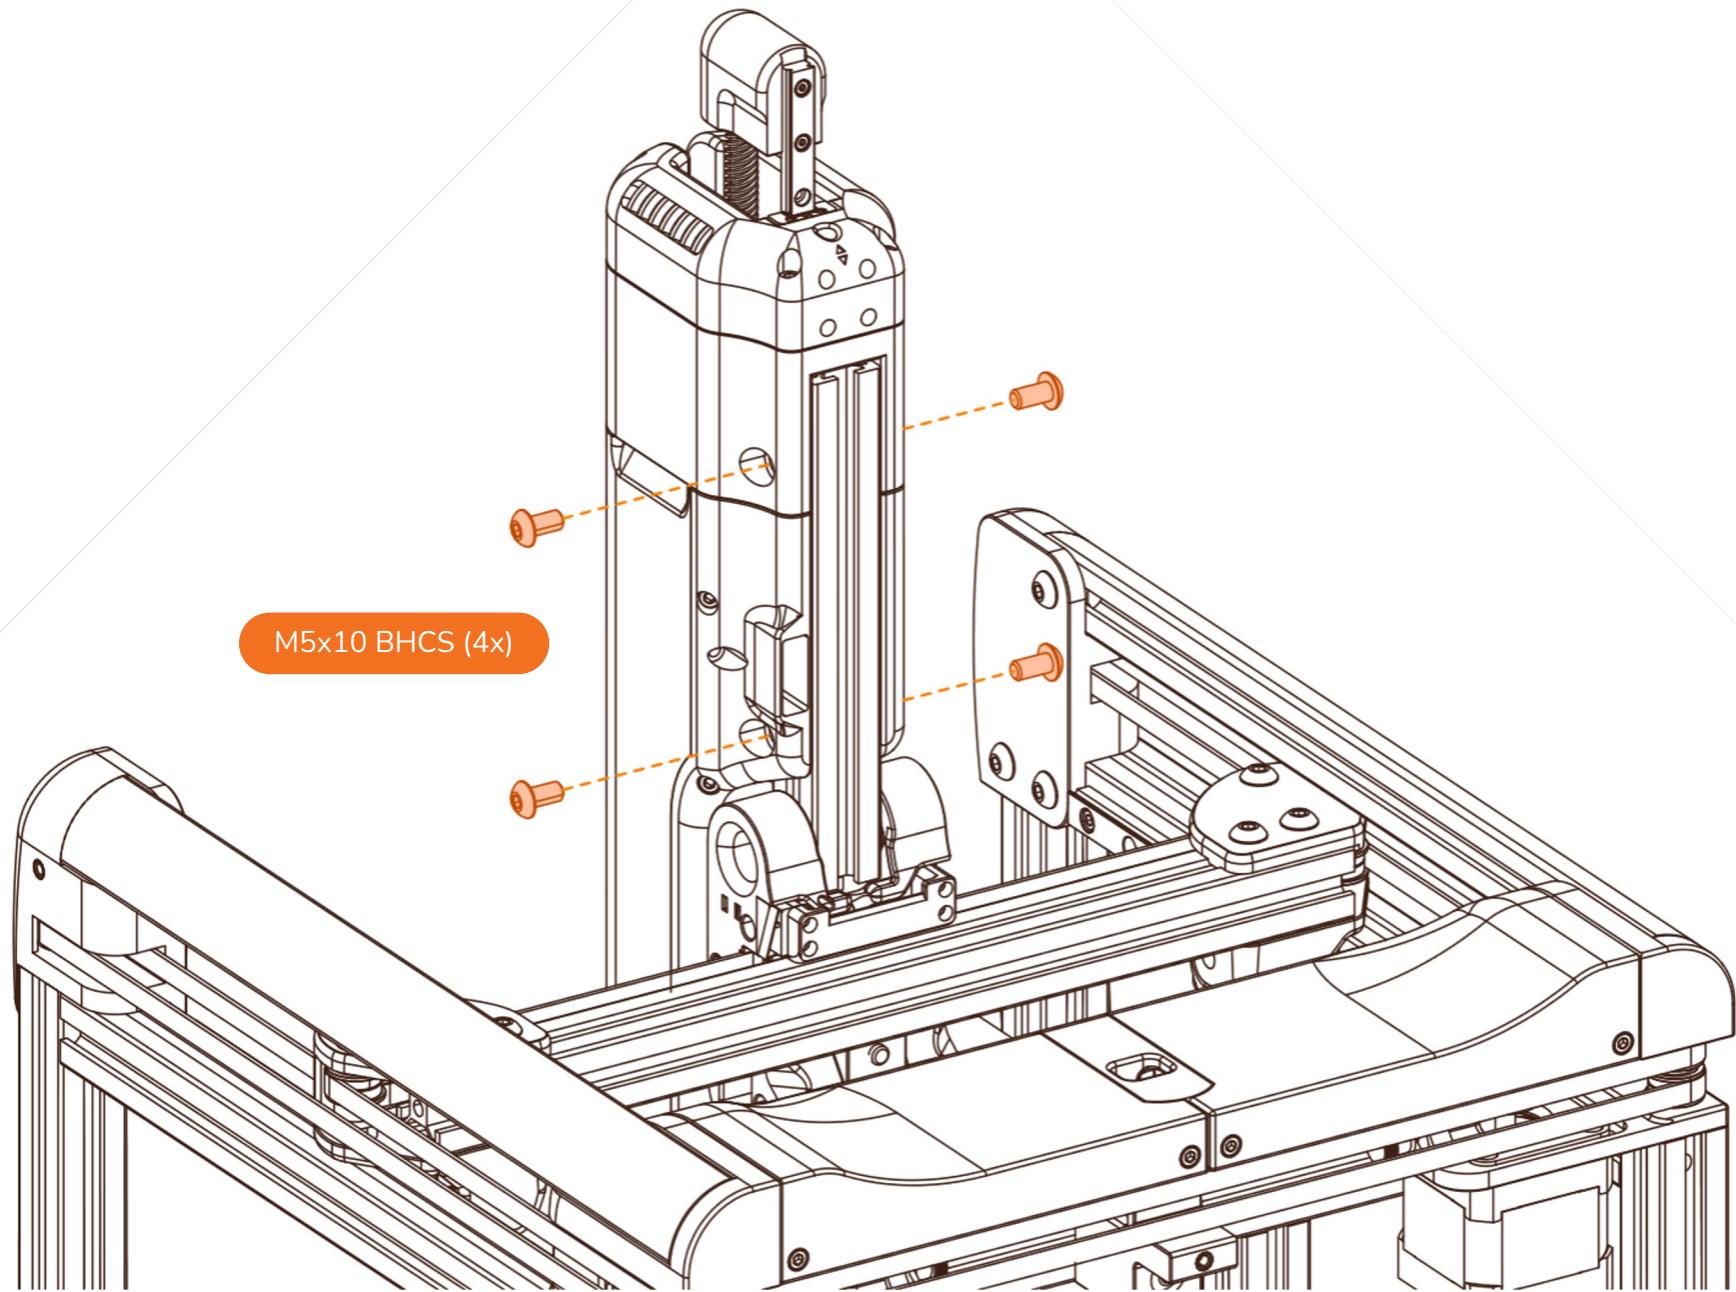


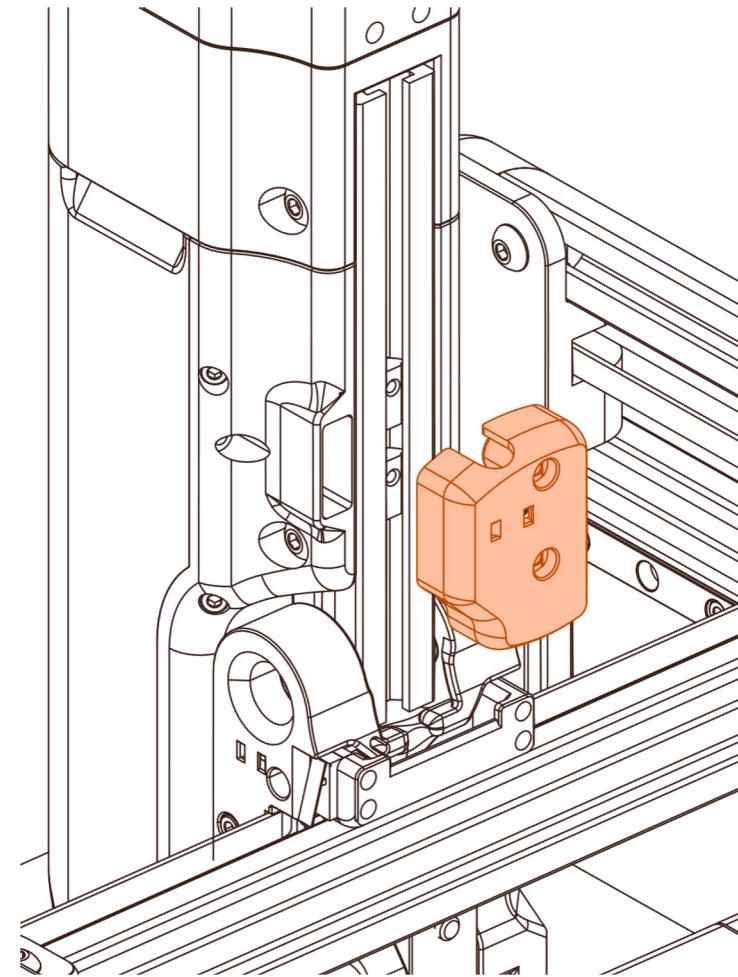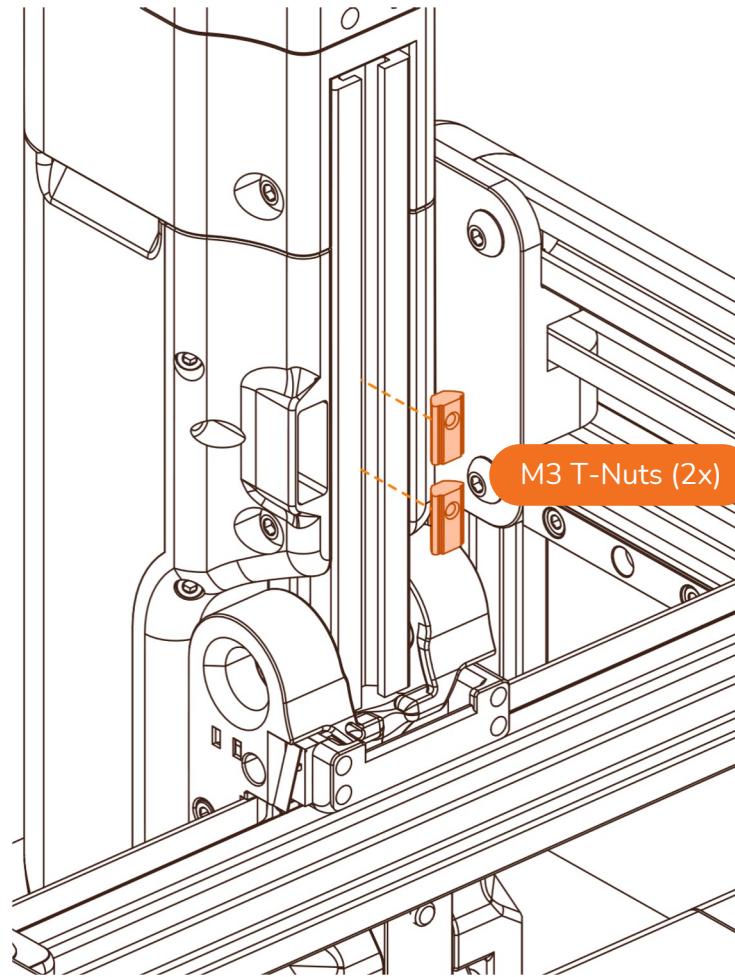

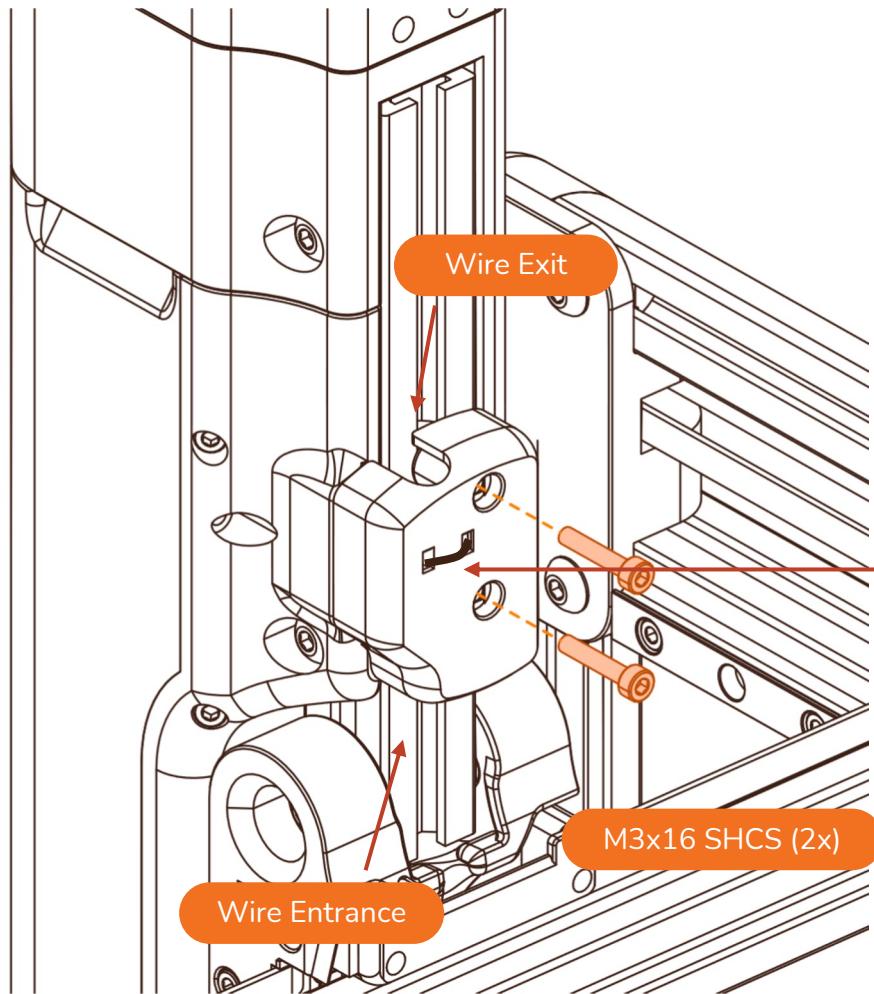**PINCH WARNING**

Take care to not crush any cables when securing the toolhead cables through the Extruder Cable Cover. Damaging the Inductive Probe or X Max Limit Switch will render your printer non-functional.



Wrap the wires exiting the cable cover with the split loom provided with the kit, and then secure through the zip tie holes on the exterior cover for strain relief.

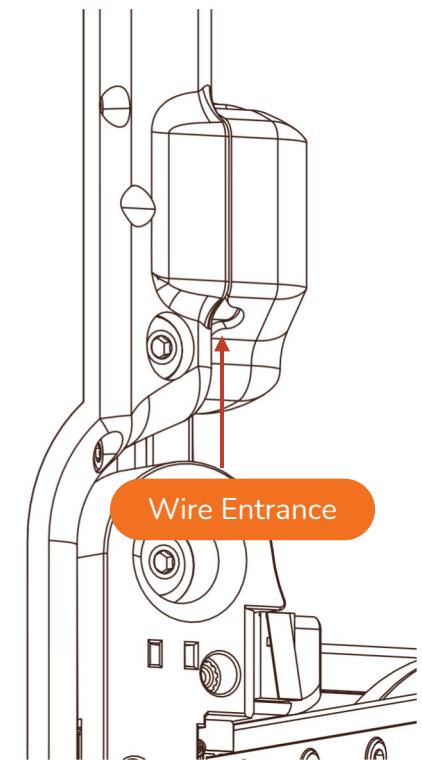


**THREAD THE NEEDLE**

Route the toolhead wiring and wire loom through the Rear Center Support printed part. Ensure the toolhead can move to all corners without being pulled fully taut.


Once installed and the length is verified, route zip ties through the holes in the center support for strain relief.

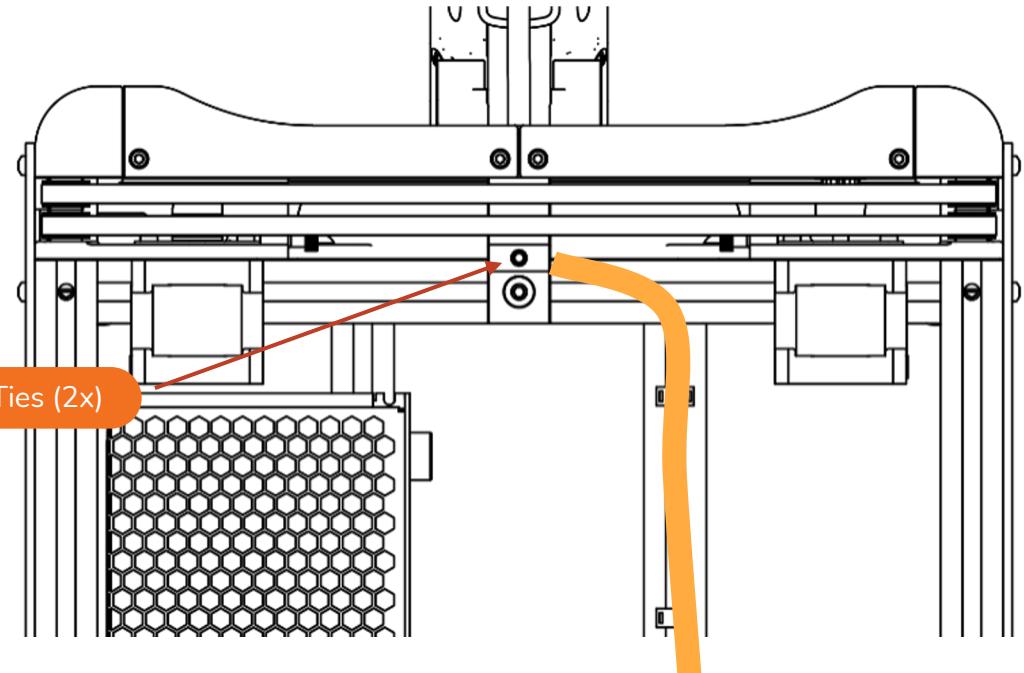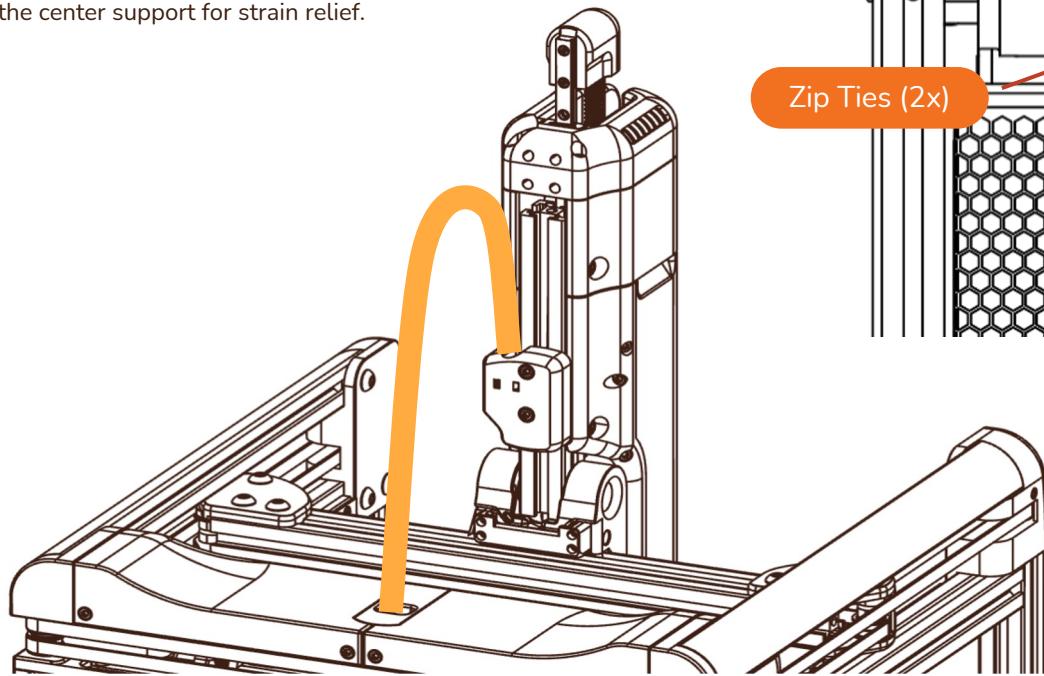

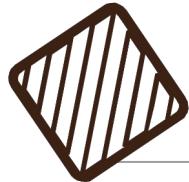

**Difficulty**

Medium

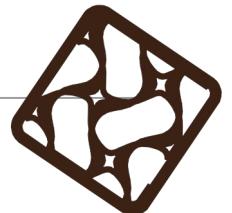**Tools Needed**

M3 Driver  
M5 Driver  
Phillips Driver  
Soldering Iron (Not Included)

**Hardware Needed**

M3x8 Socket Head Cap Screw (12x)  
M5 T-Nuts (2x)  
M3 T-Nuts (7x)  
M5x10 Button Head Cap Screw (2x)  
M3x8 Button Head Phillips Screw (2x)


Power Supply Cable (1x)  
Archim2 Power Cable (1x)  
Erase Button (1x)

**Printed Parts Needed**

PSU Bracket (2x)  
Inlet Bracket (1x)  
Plug Panel (1x)  
Archim2 Top Bracket (1x)  
Archim2 Bottom Bracket (2x)

Wire Anchor (4x)  
PSU Cover (1x)  
Erase Button Jig (1x)



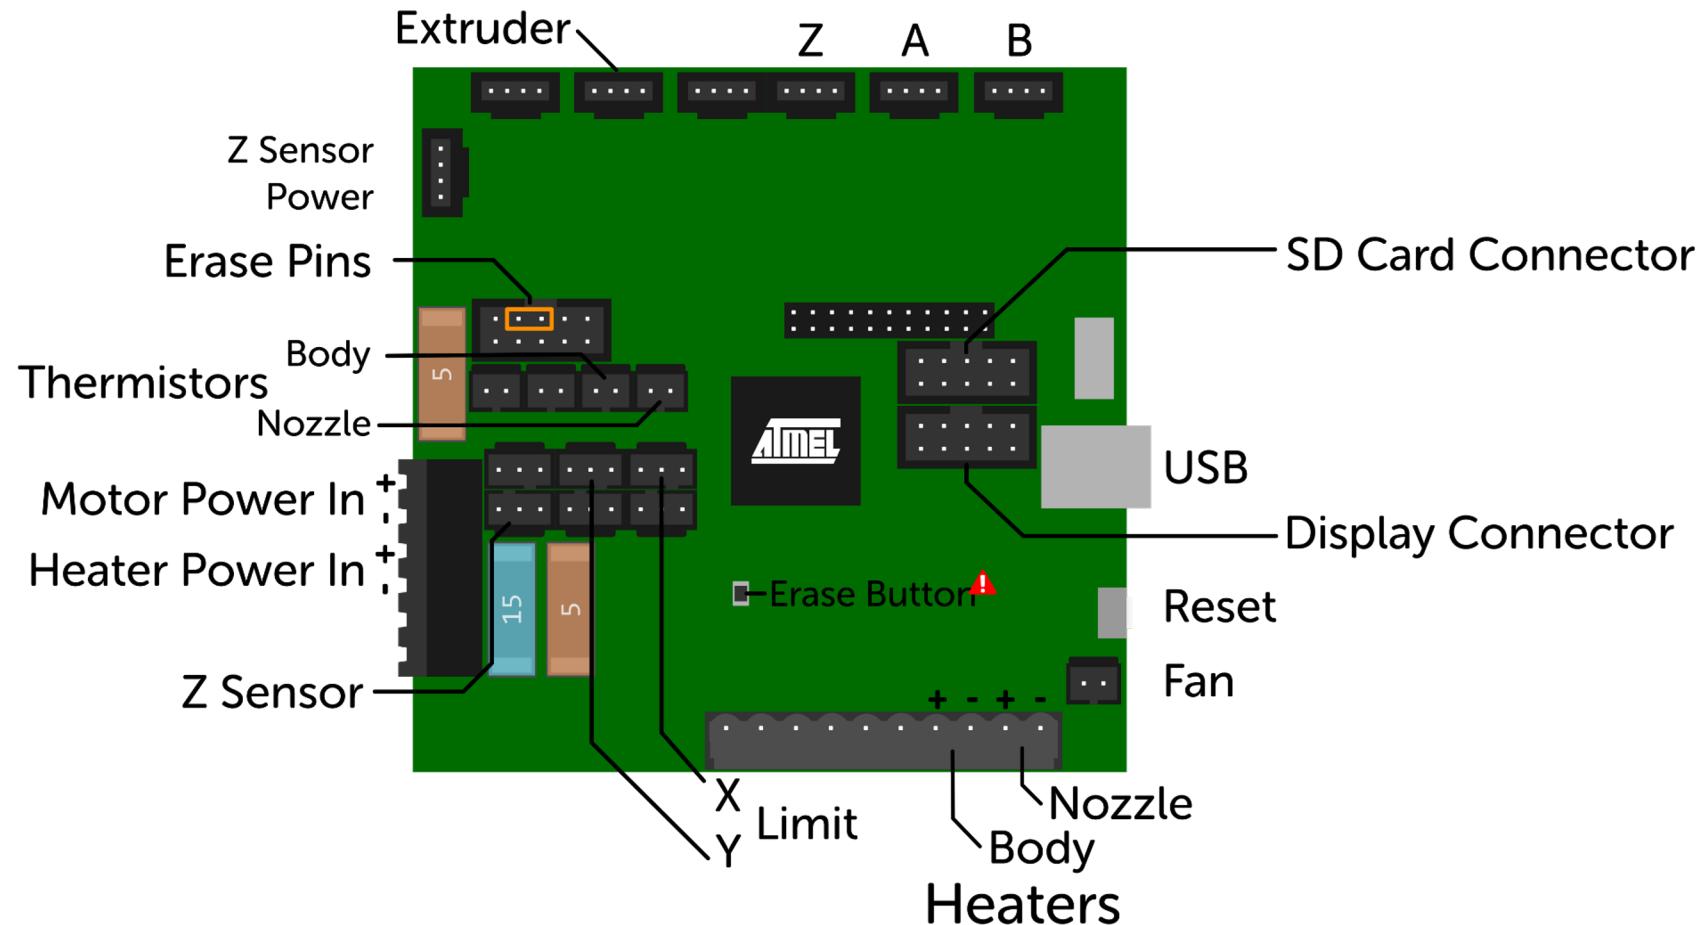


**⚠** This button removes your printer's firmware. Use with caution.


#### OVERVIEW

This is an overview image of the wiring for the Archim board, you can return to this page to reference it as we work through the electronics section. Supplemental images are also shown at each step.

**TURN IT OFF/ON, FLIP FLIP**



If in a region that uses 230V power, use a flathead screwdriver to swap the power supply's operating mode.


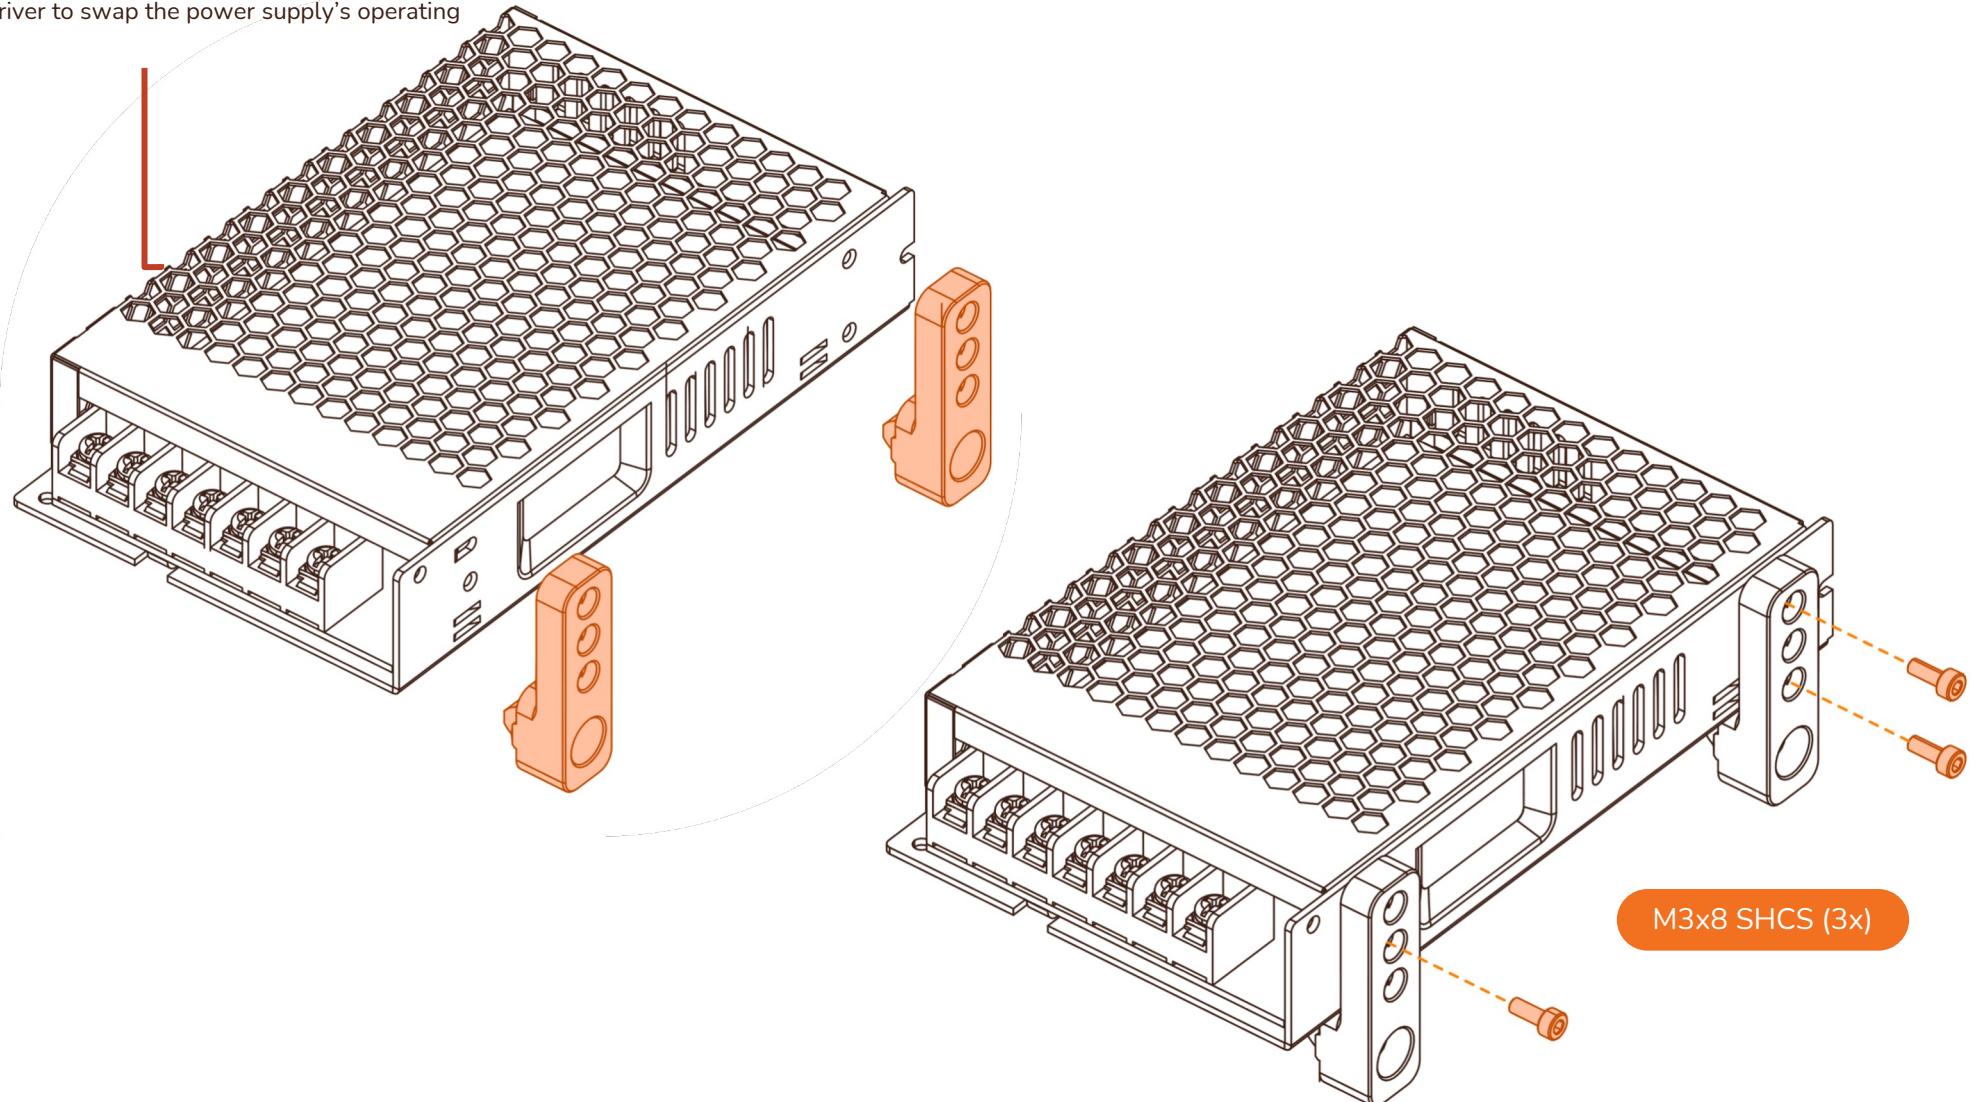



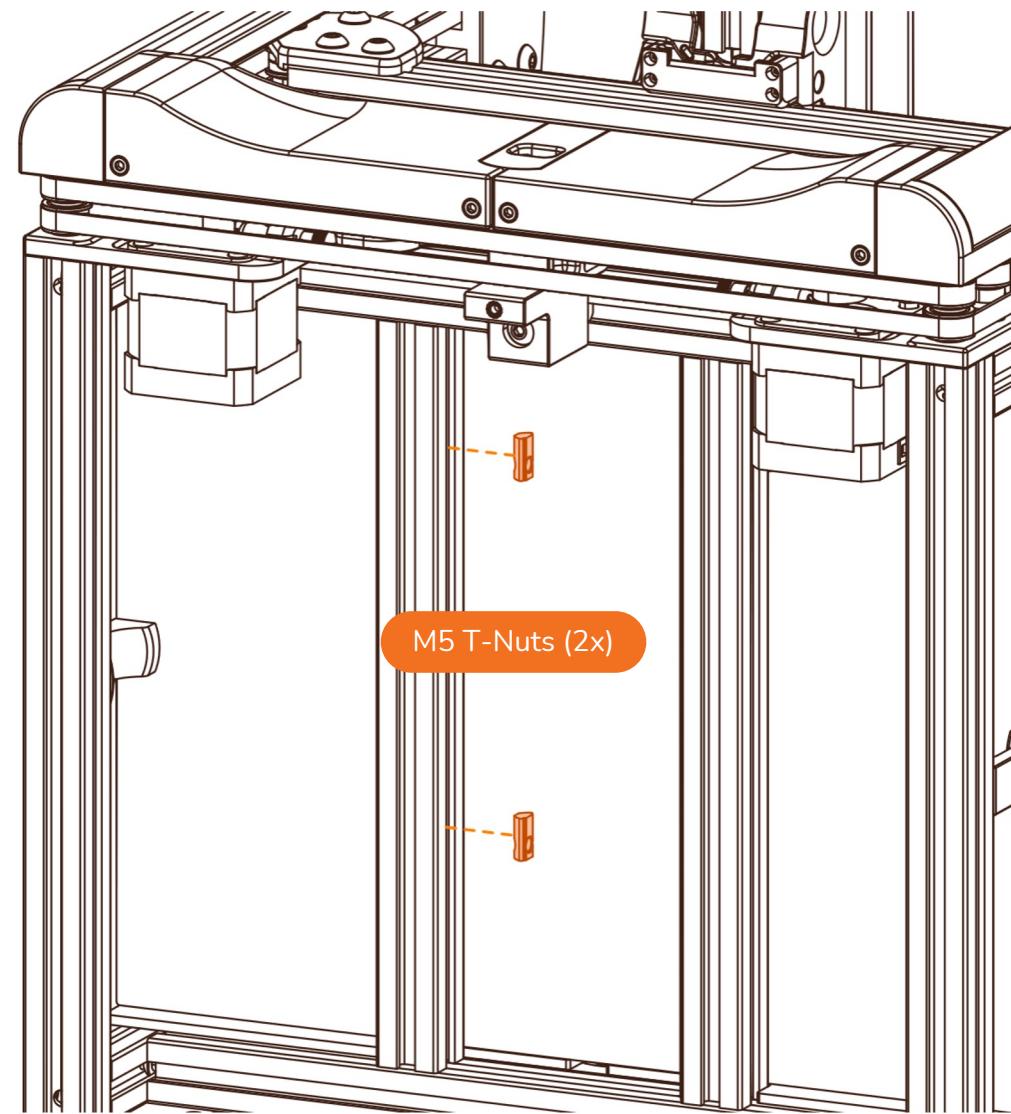


**"NO TOUCHING, NO TOUCHING!"**

The power supply should be slid along the rail to touch the stepper motor above it, and then slid back off, by approximately 20mm. This makes wire routing easier later, as well as ensures airflow around both units.

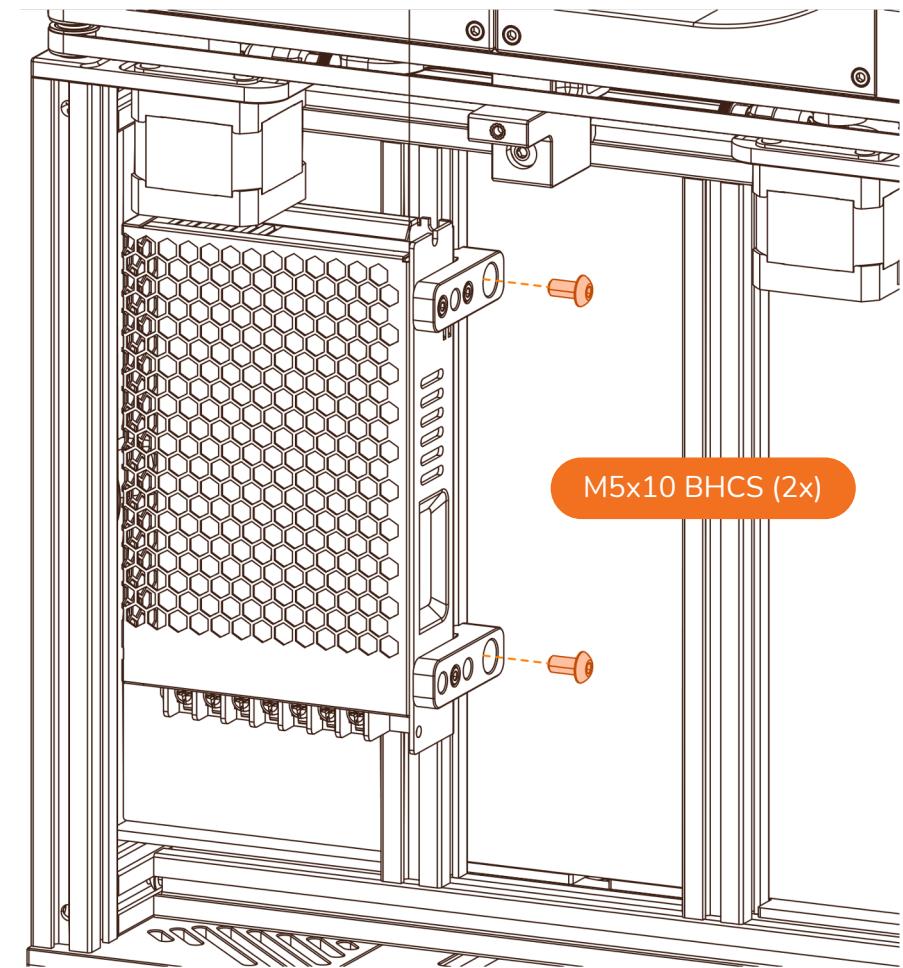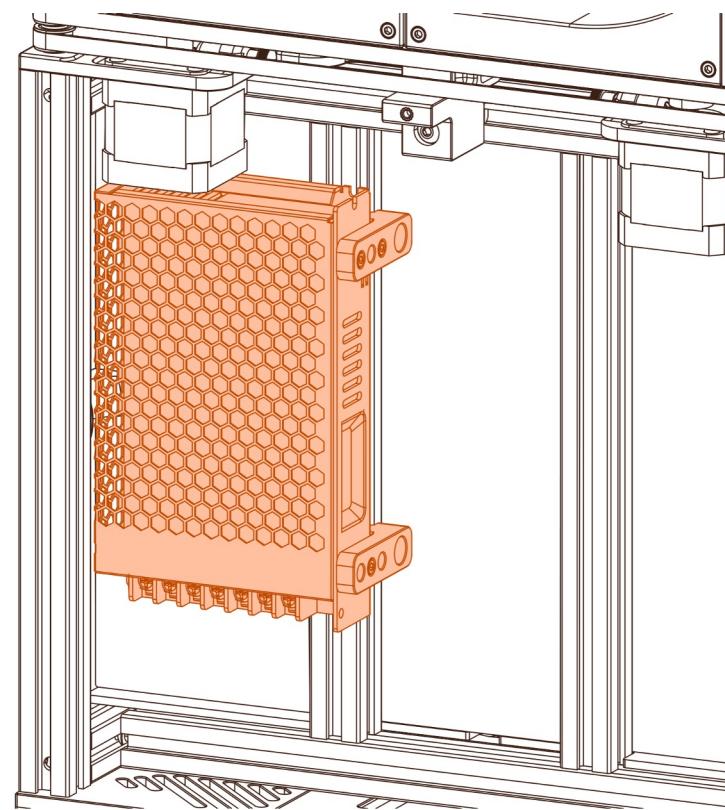

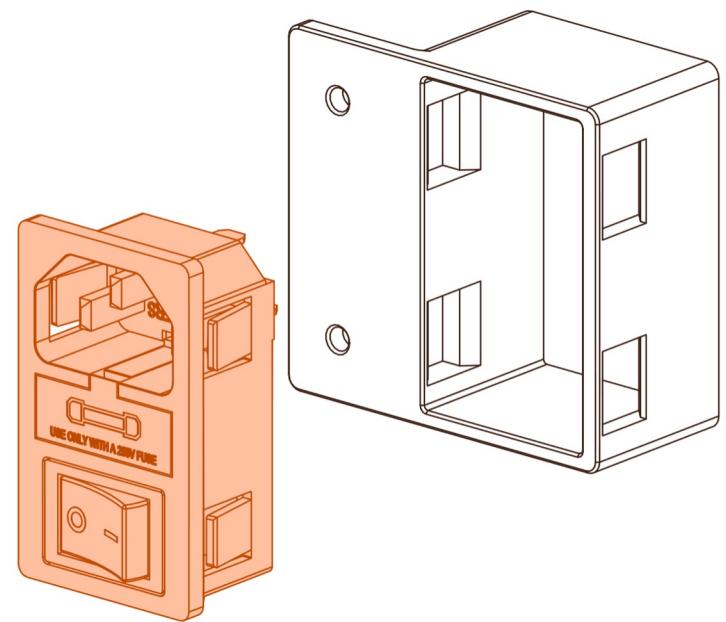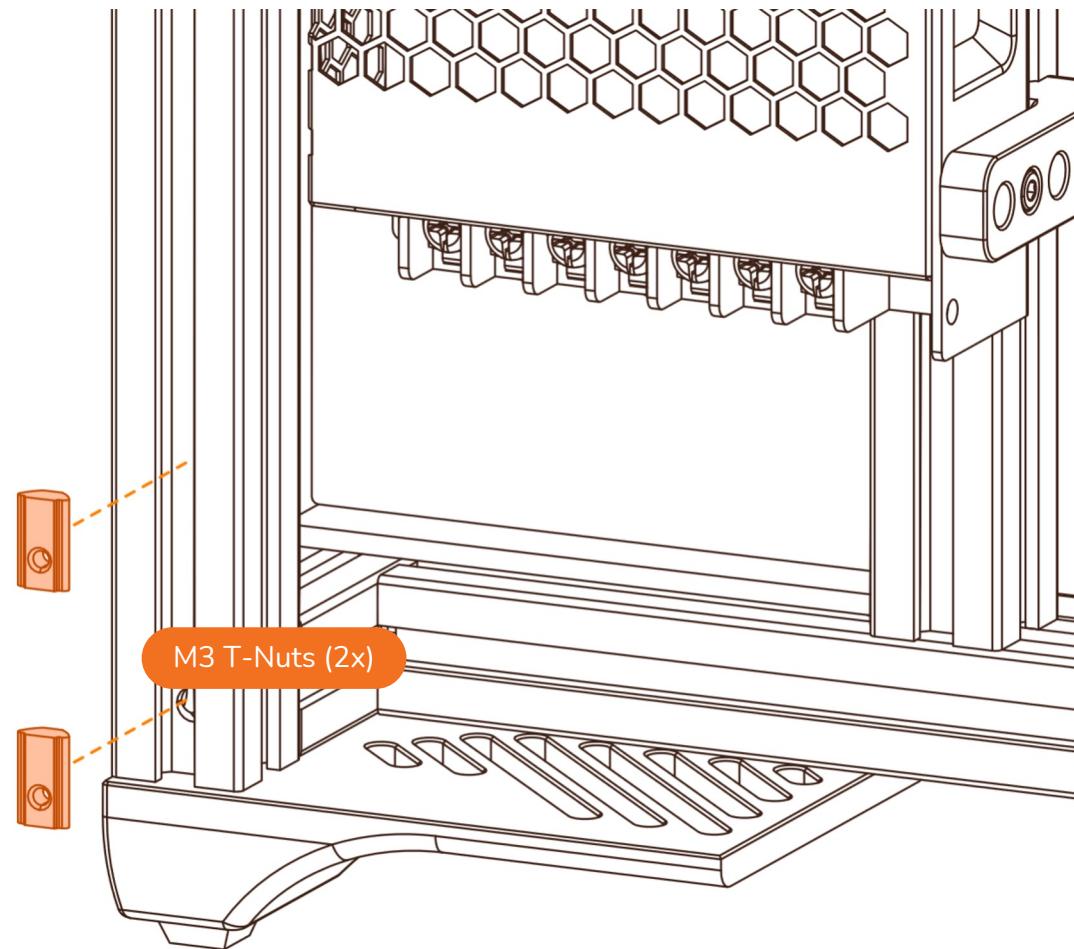


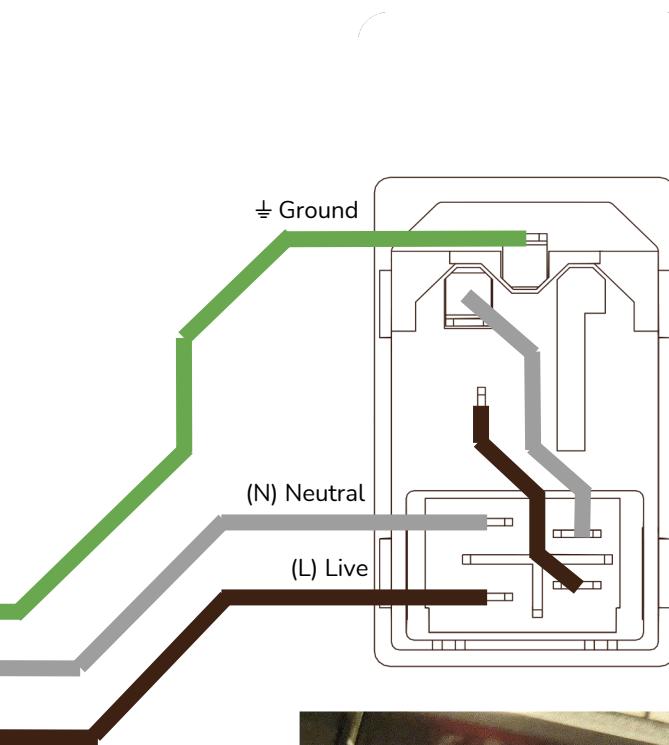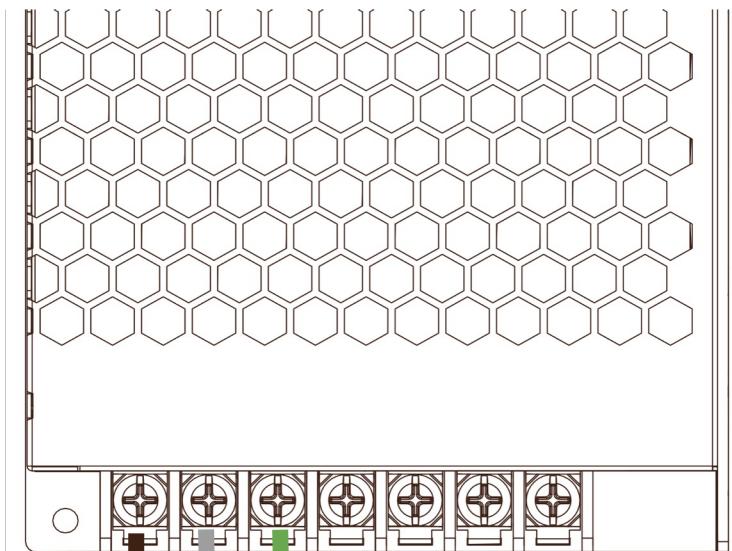

#### CONDUCTIVITY IN SPADES

When inserting the spade terminals to the power supply, take care to get the forks between the top plate that's on the screw and the bottom bar.



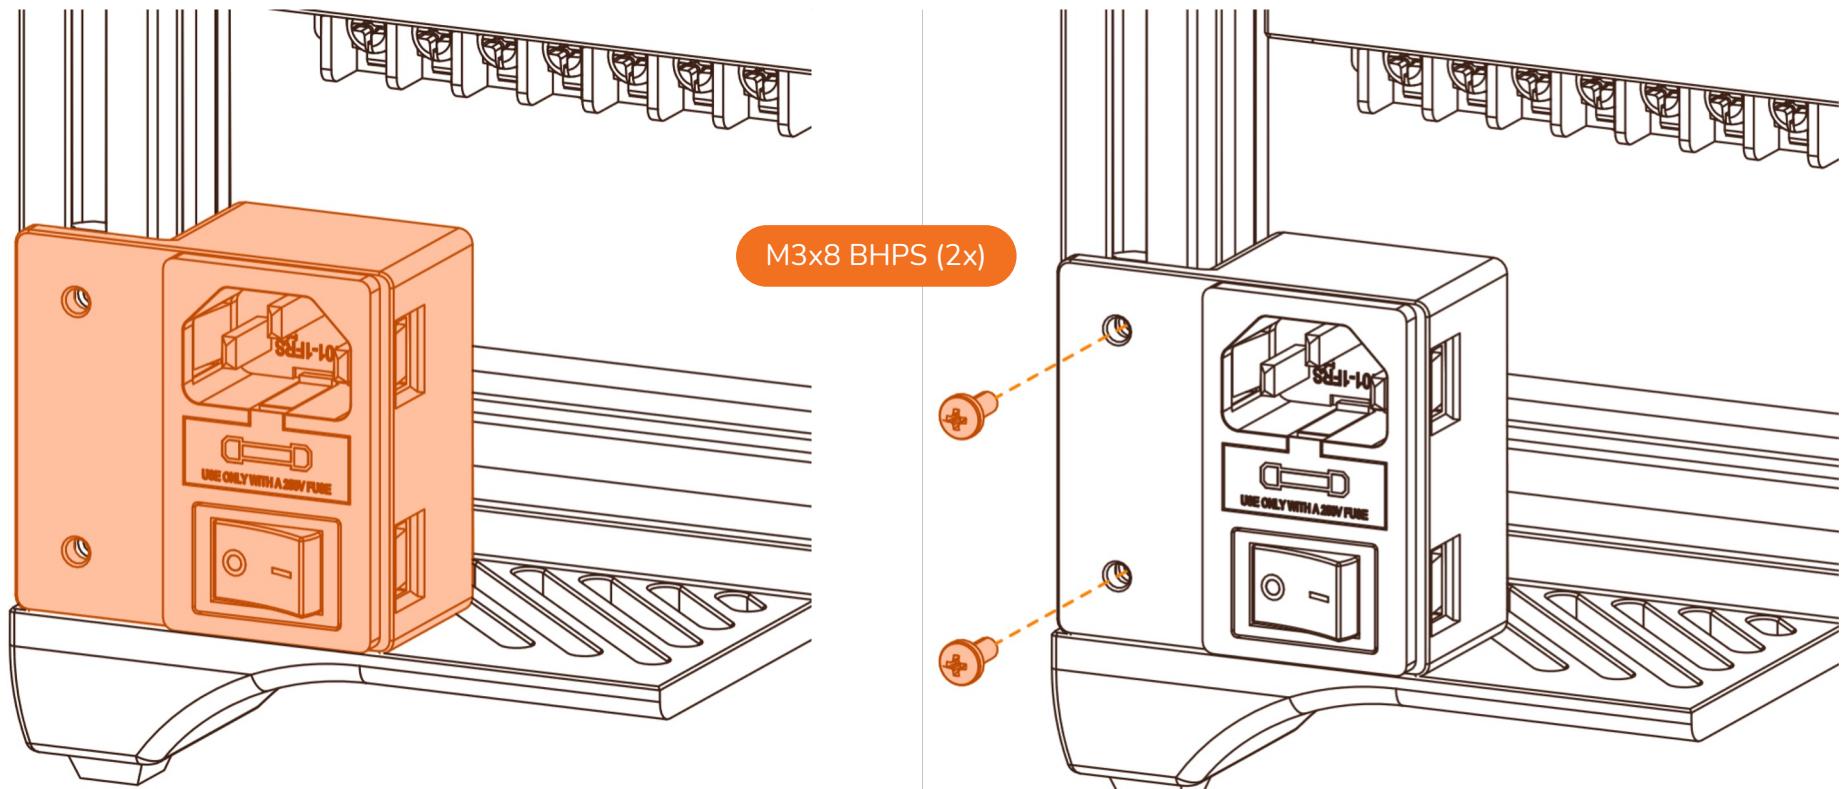



**POWER CONNECTOR**

Install wires to carry mains voltage from the IEC14 socket to the power supply now, before mounting it to the frame.

**BETTER SAFE THAN SORRY**

This cover helps prevents accidental connections to the Erase Button, and to protect to sensitive pins that may damage the Archim2 if connected electrically when using the Erase Button.

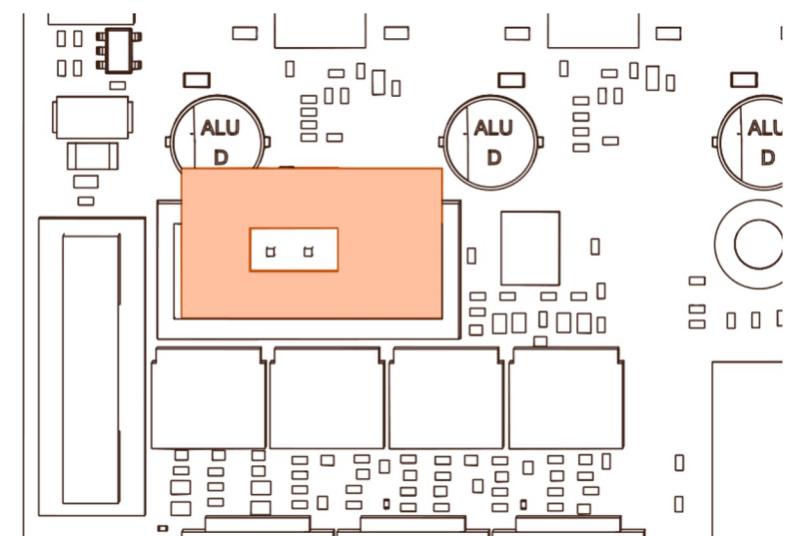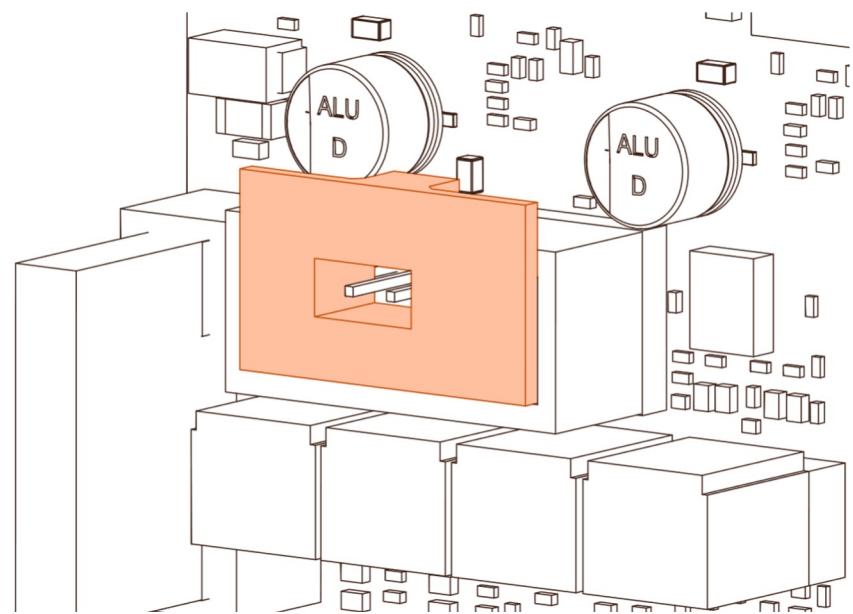
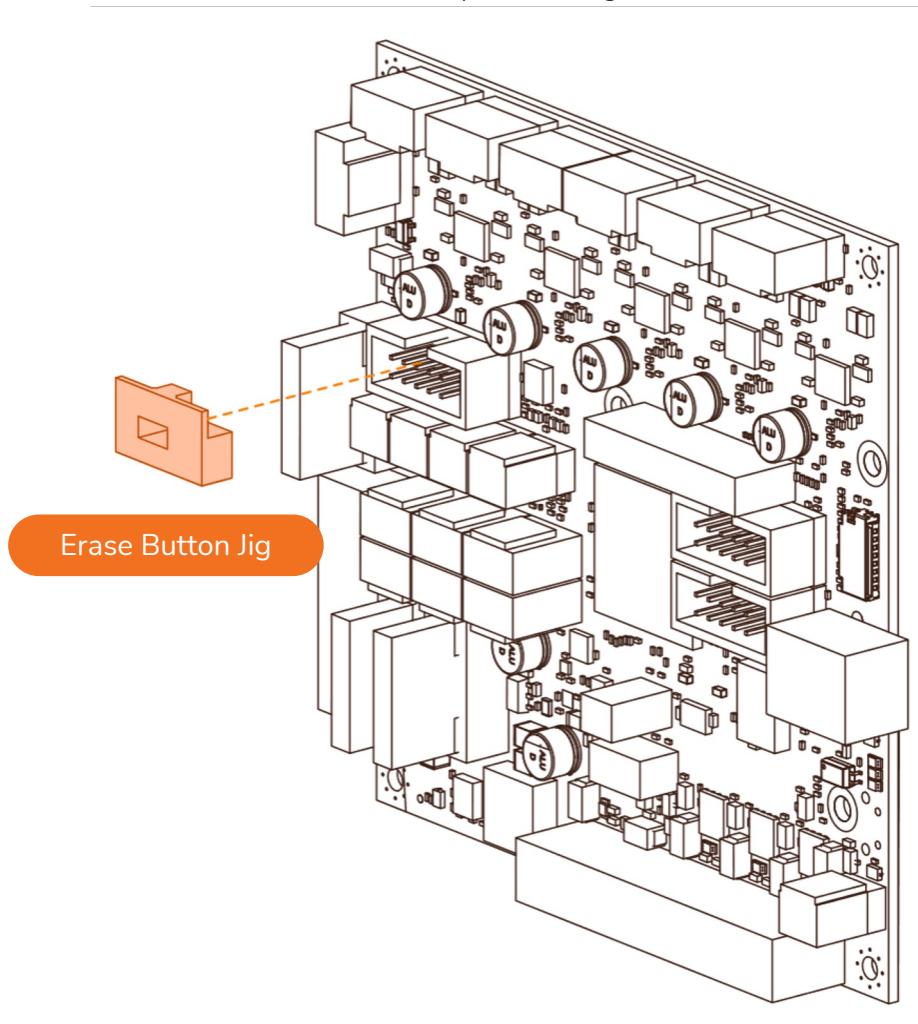


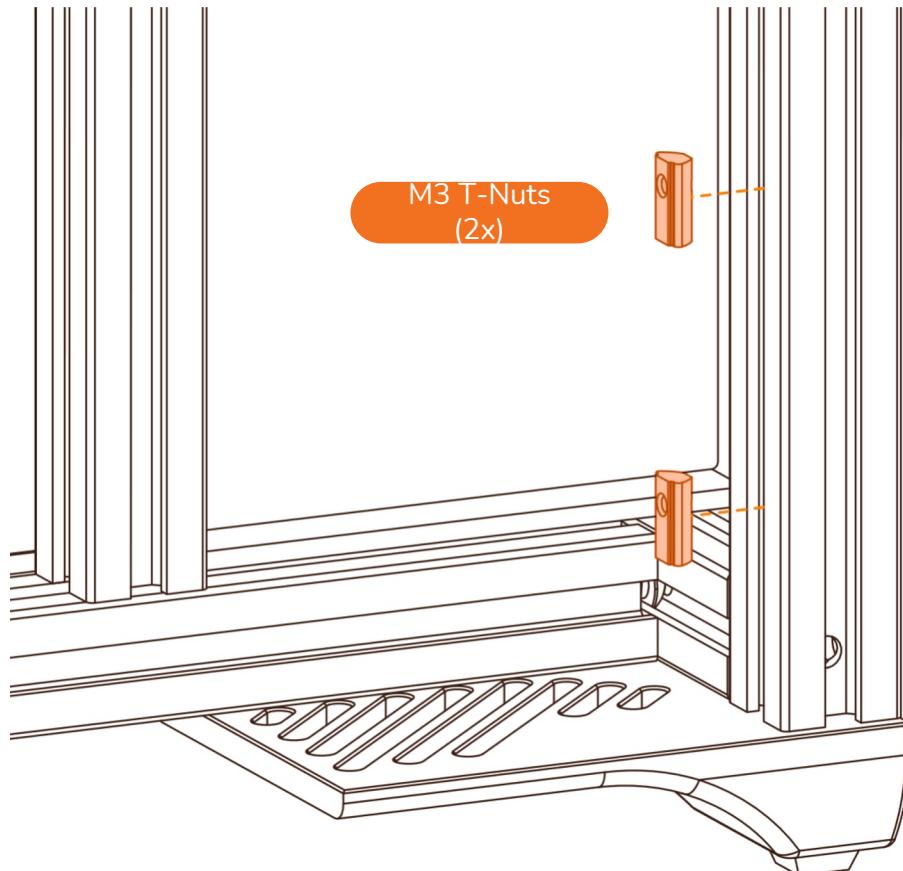
**NUT-THING REALLY MATTERS...**

Be sure to remove the locking nut from the Erase Button before installation, as you otherwise may not be able to use the button if necessary.


**ANYTHING NOT SAVED...**


Be sure to add your Erase button into this part before installing it. This allows you to update your Cocoa Press' firmware down the line without taking the back cover off.

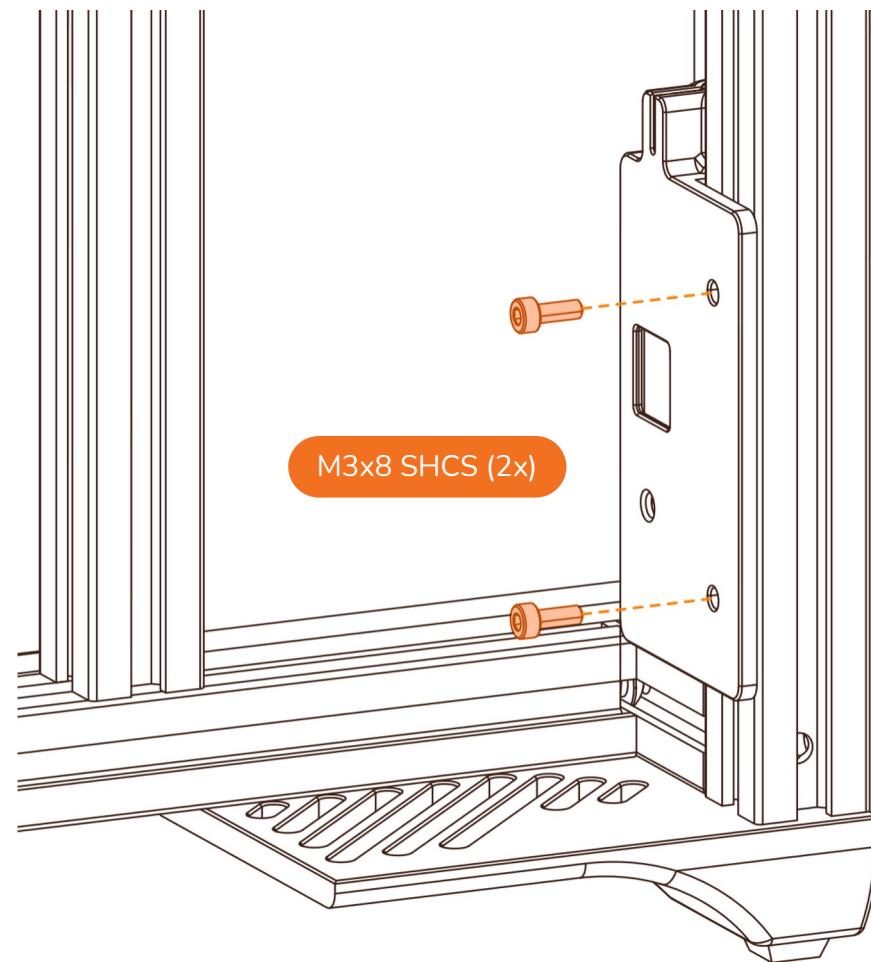
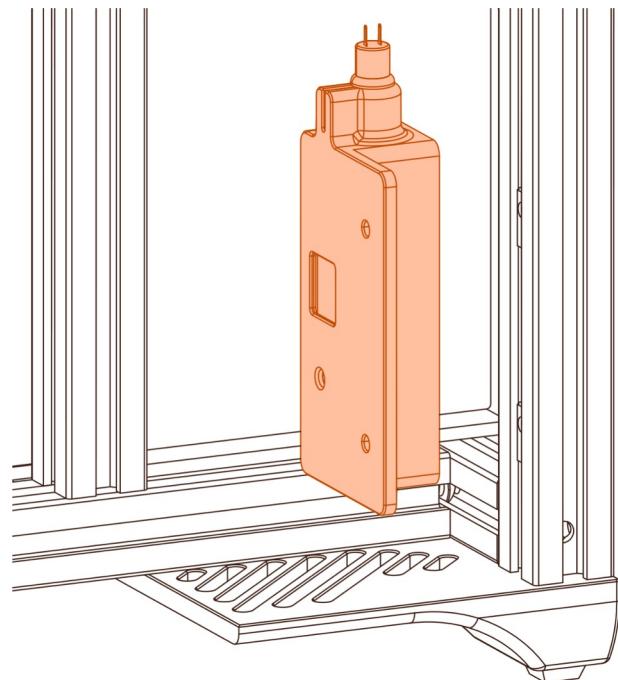


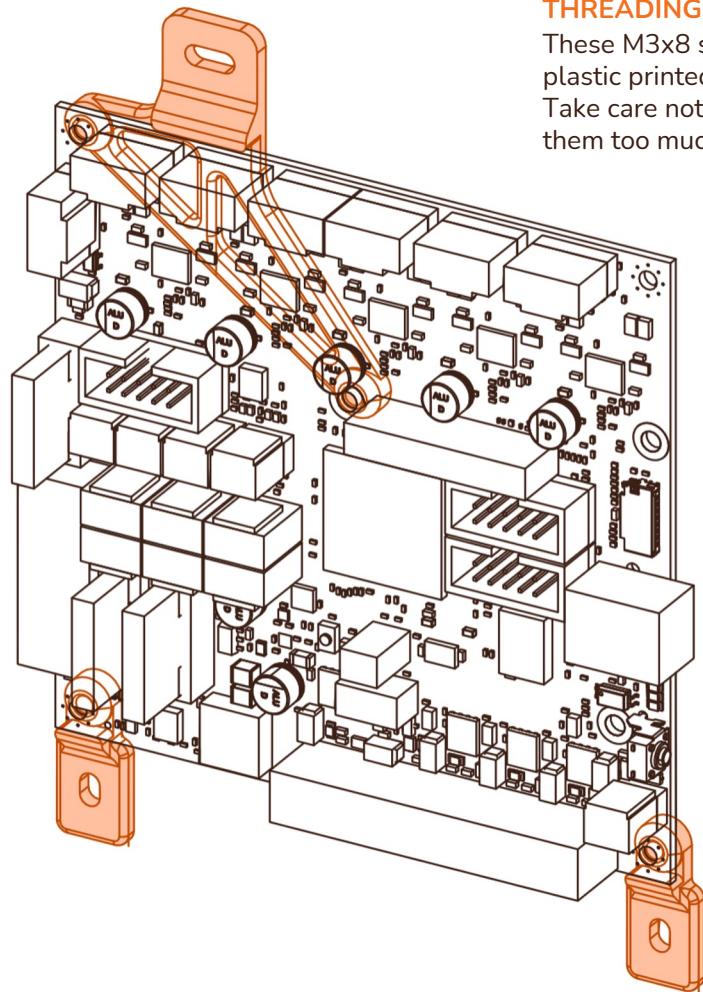**THREADING INTO PLASTIC**

These M3x8 screws will thread into the plastic printed parts through the Archim. Take care not to strip them by tightening them too much.

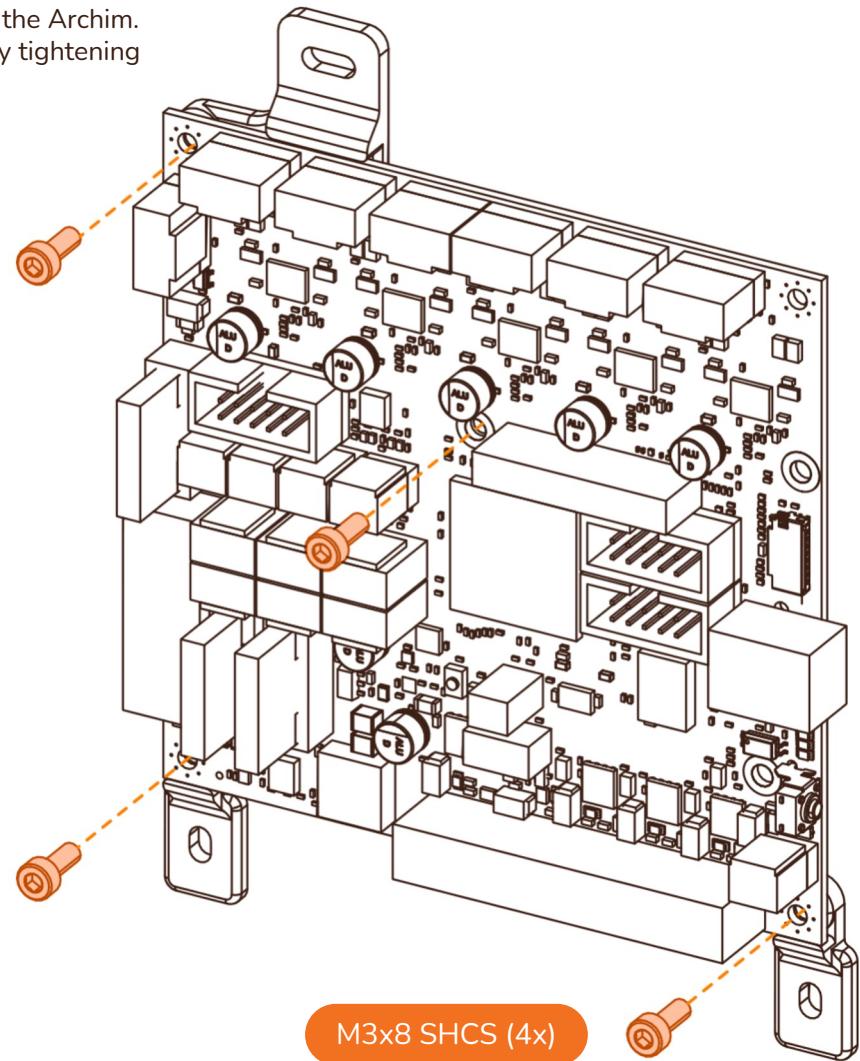


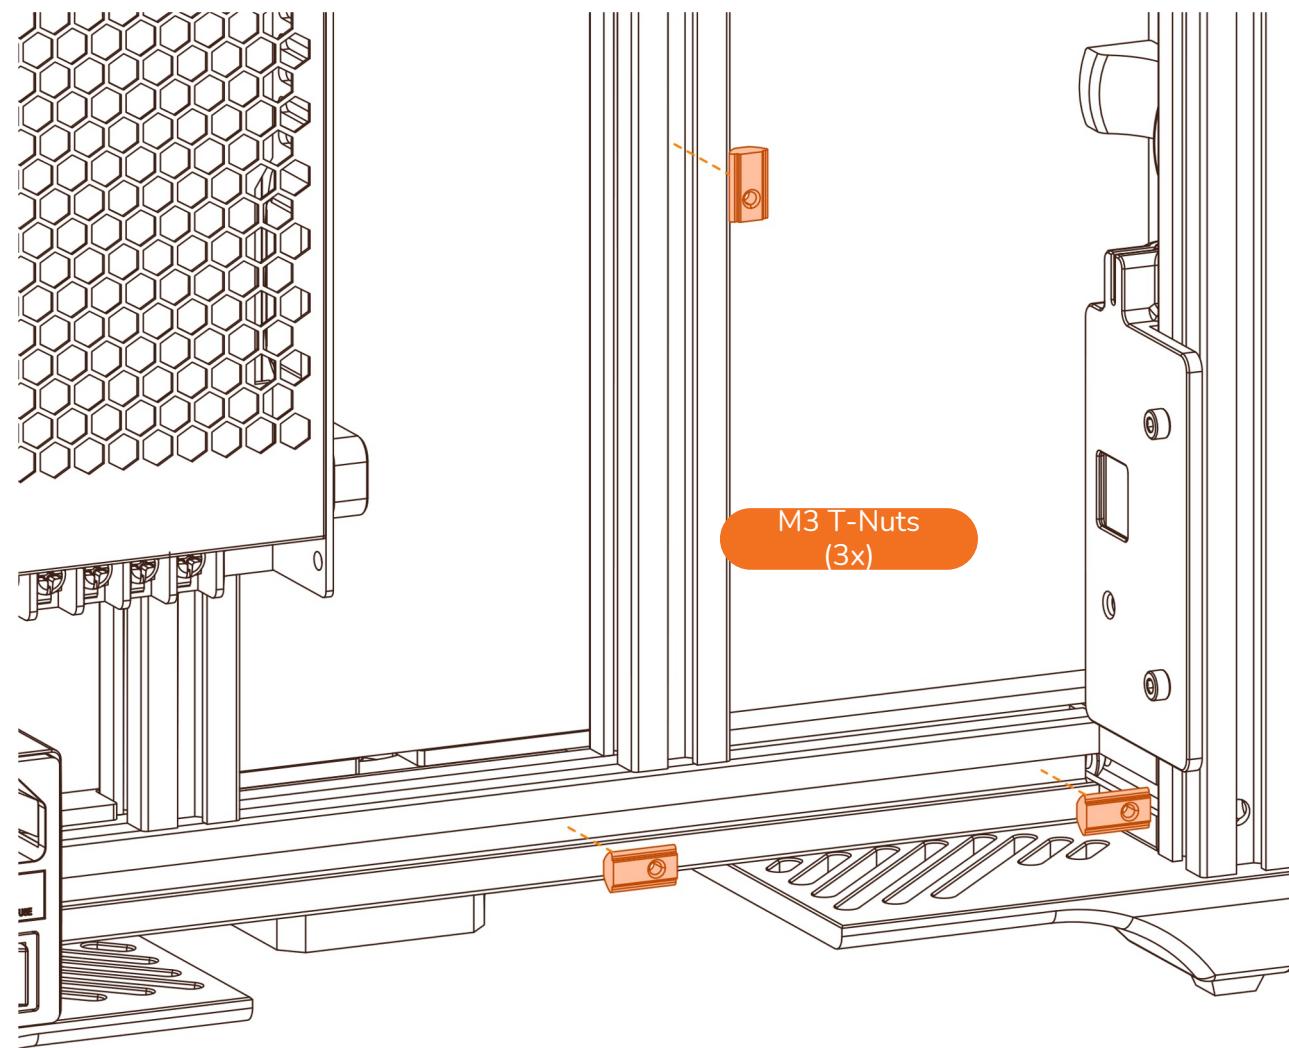


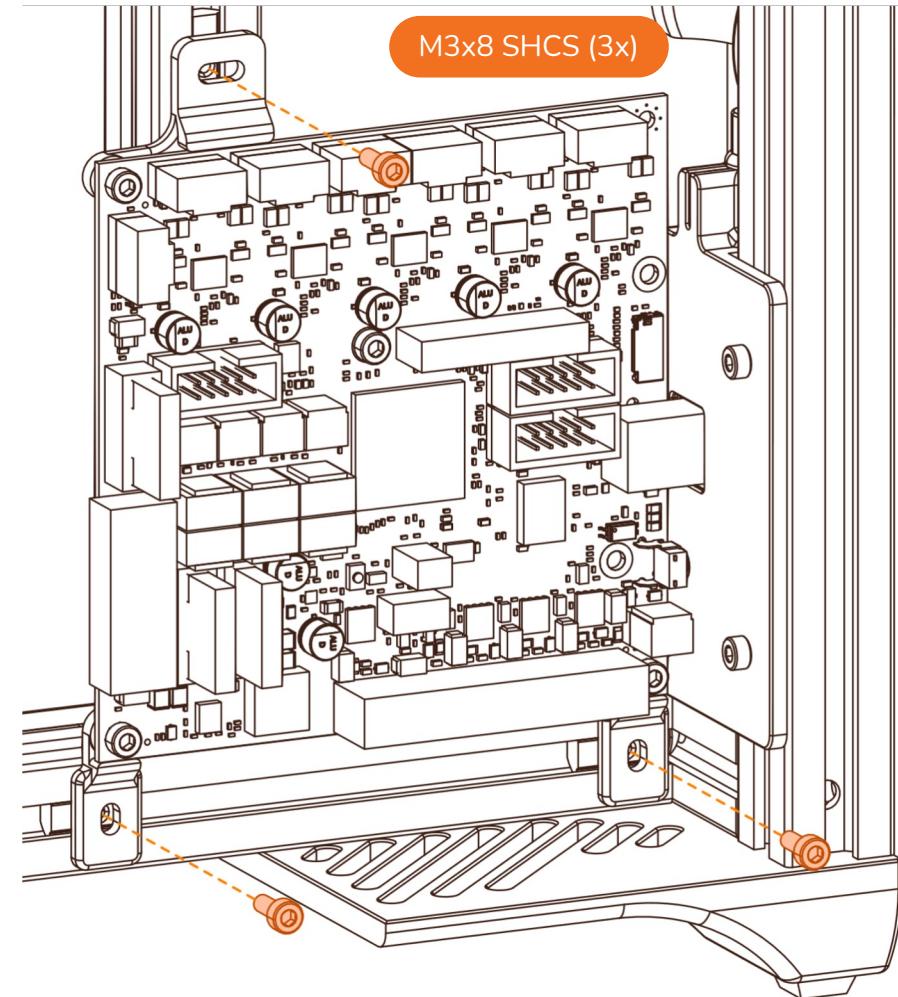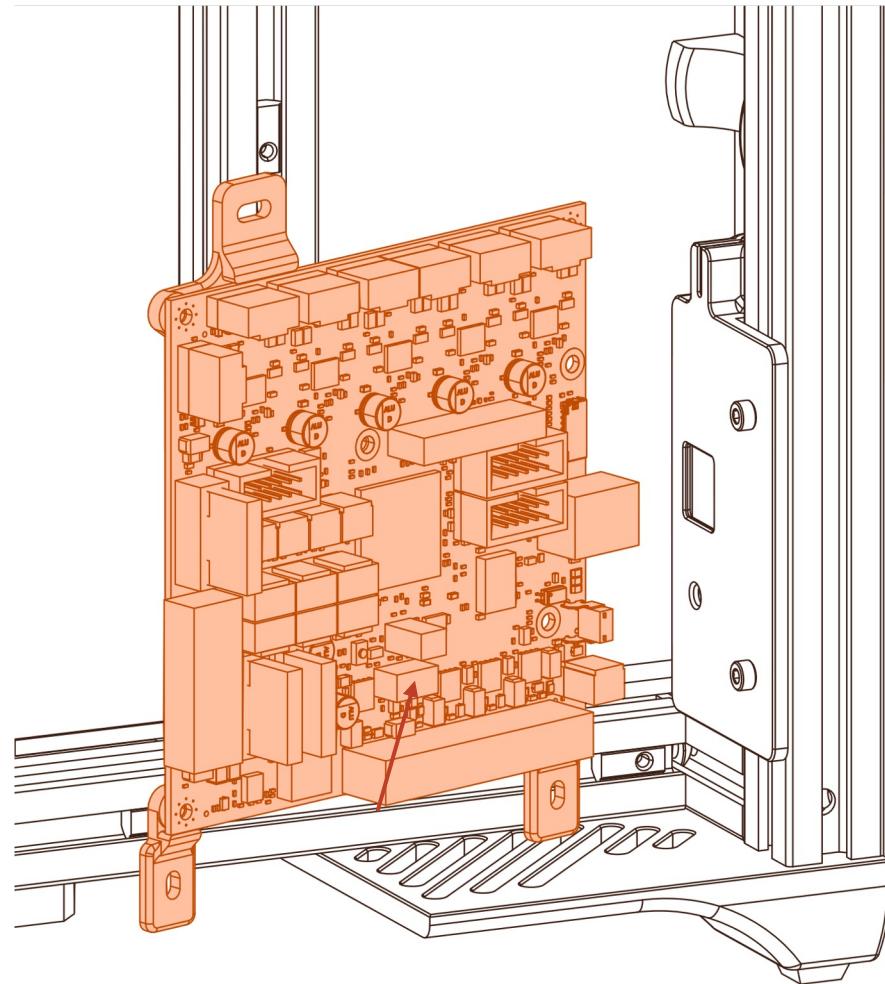

**LIKE, CHILL OUT**


To prevent overheating on the stepper drivers, install the heatsinks in the kit on the Archim2 at the locations depicted. This allows them to better dissipate heat during rapid or high intensity motion.

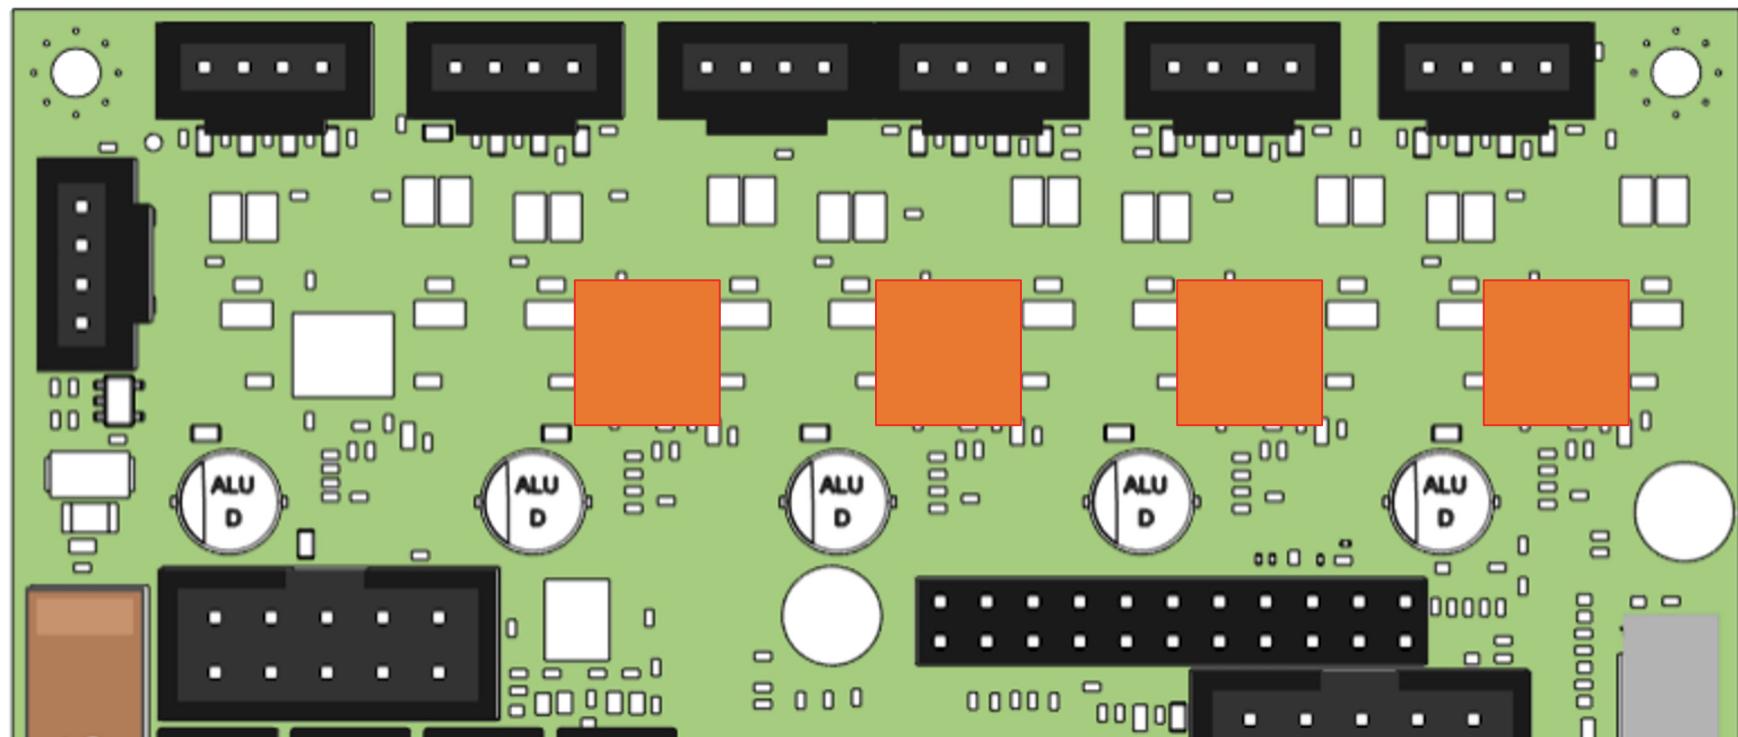


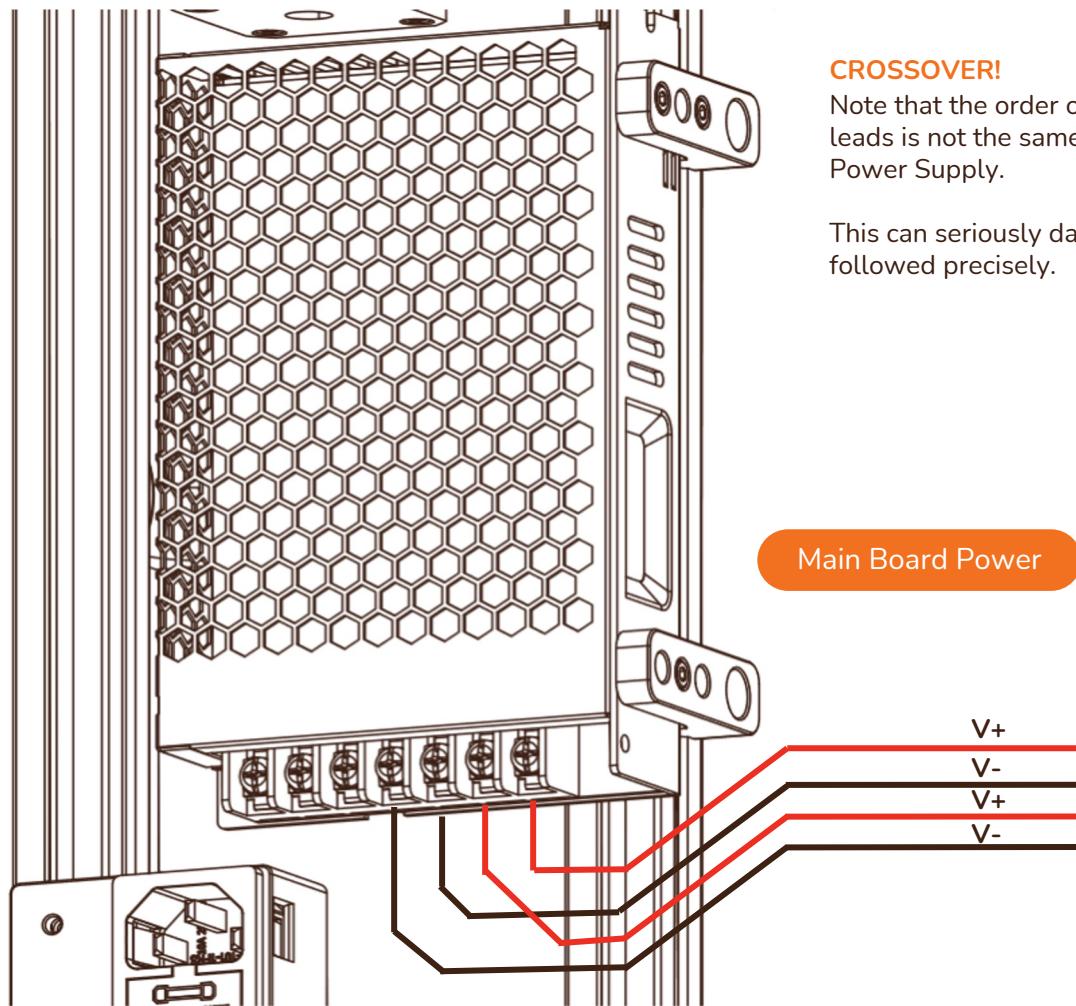**CROSSOVER!**


Note that the order of the positive and negative leads is not the same for the Archim2 and the Power Supply.

This can seriously damage your printer if not followed precisely.

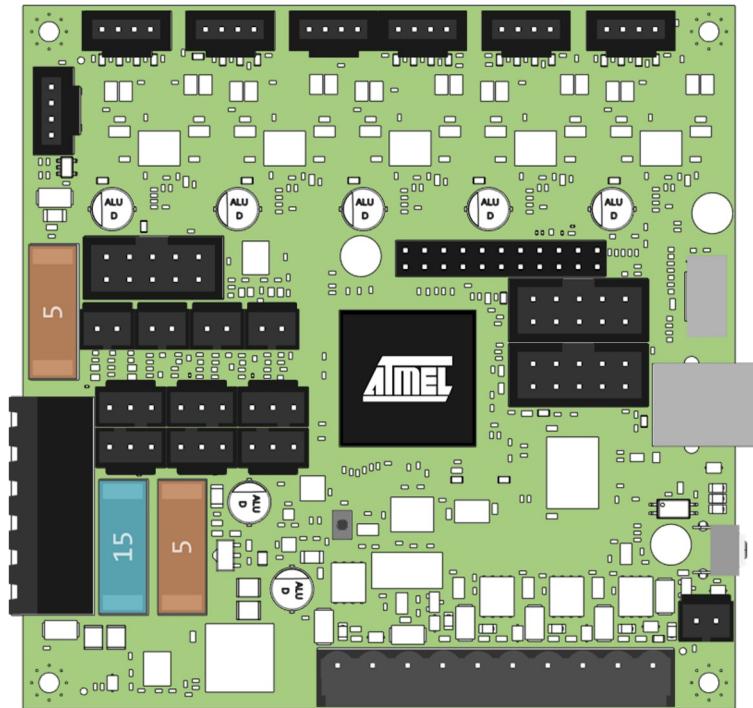


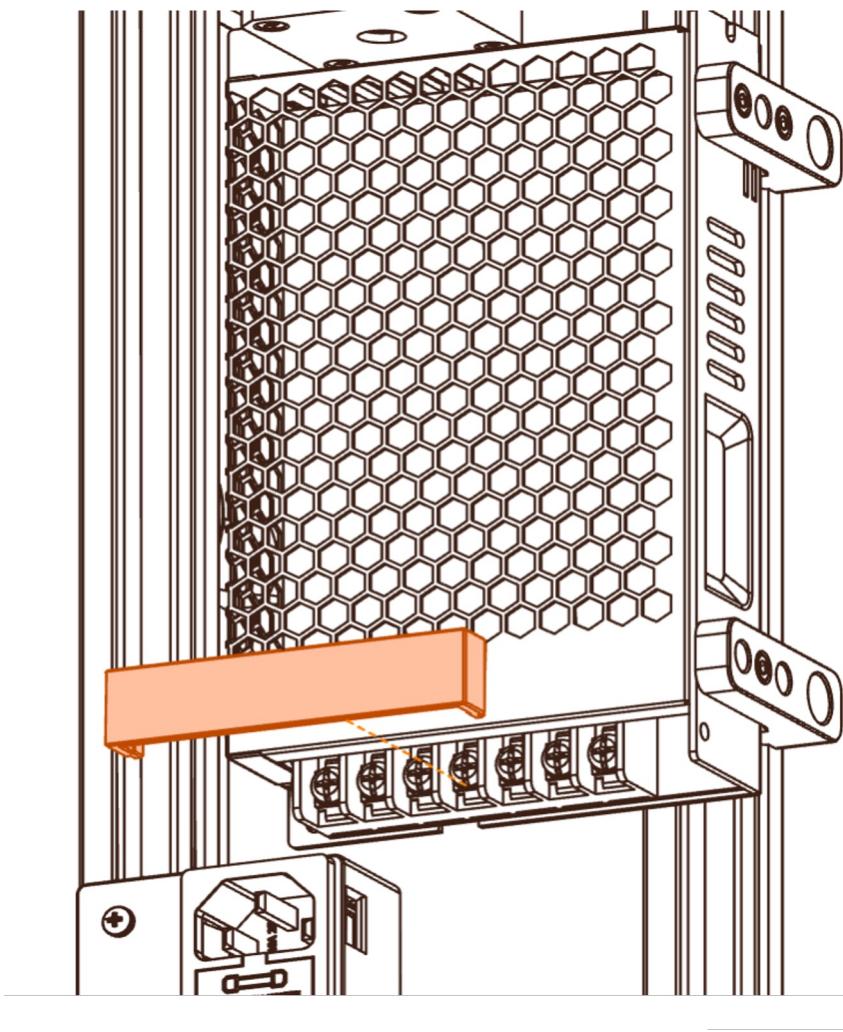
**SO THE MAIN THING IS... DON'T TOUCH MAINS**


This cover makes it significantly more difficult to touch the mains voltage terminals wired in from the IEC14 socket right below it. Be sure to install it.

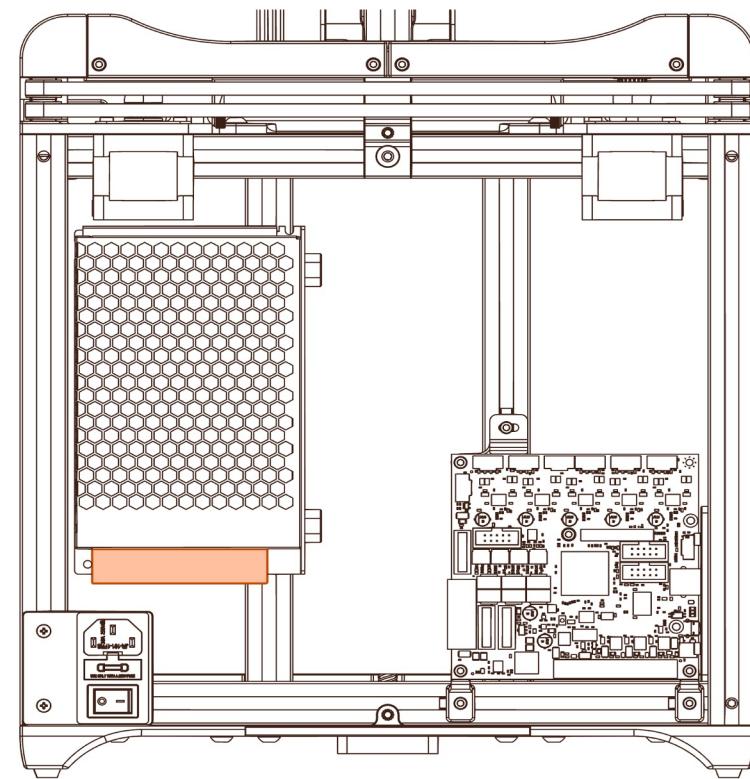

**ZABE ZA ZOO ZOP**


Plug in the motors to the Archim2 board. Be sure to use this diagram, and not the labels on the physical circuit board.

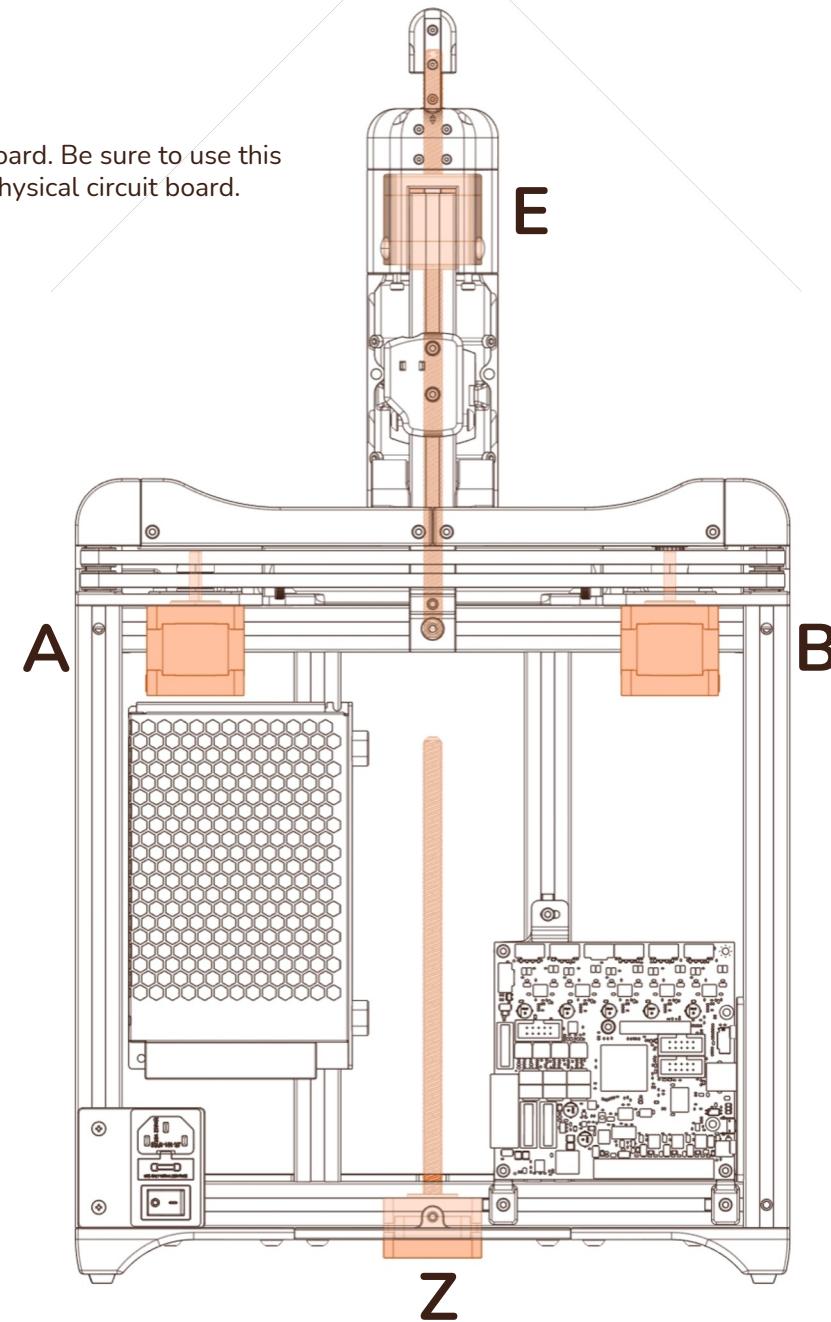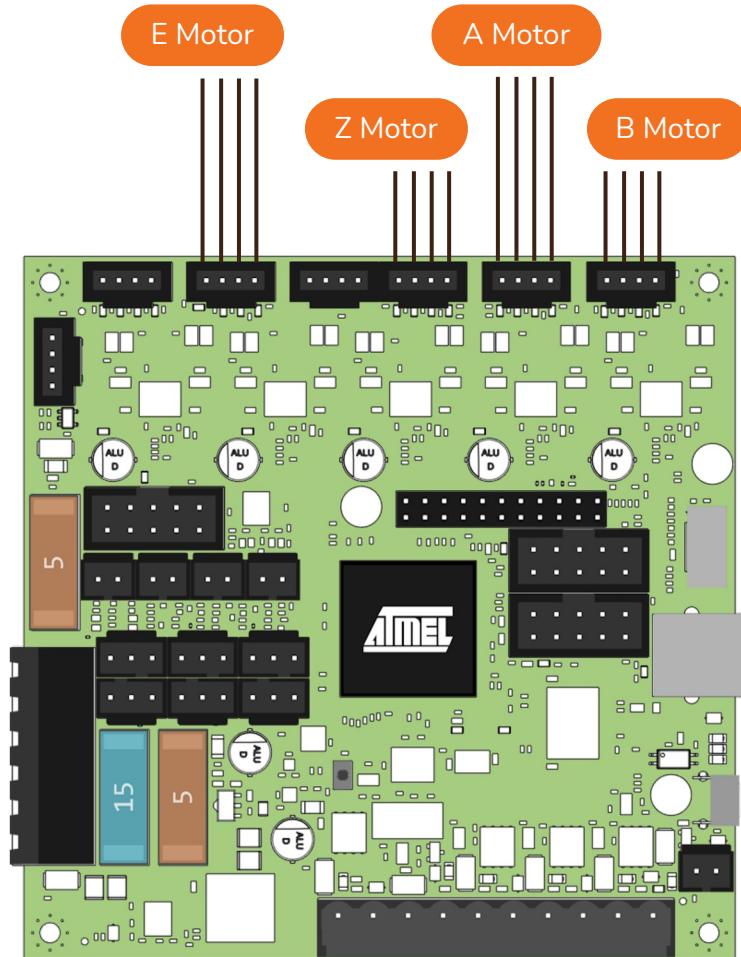

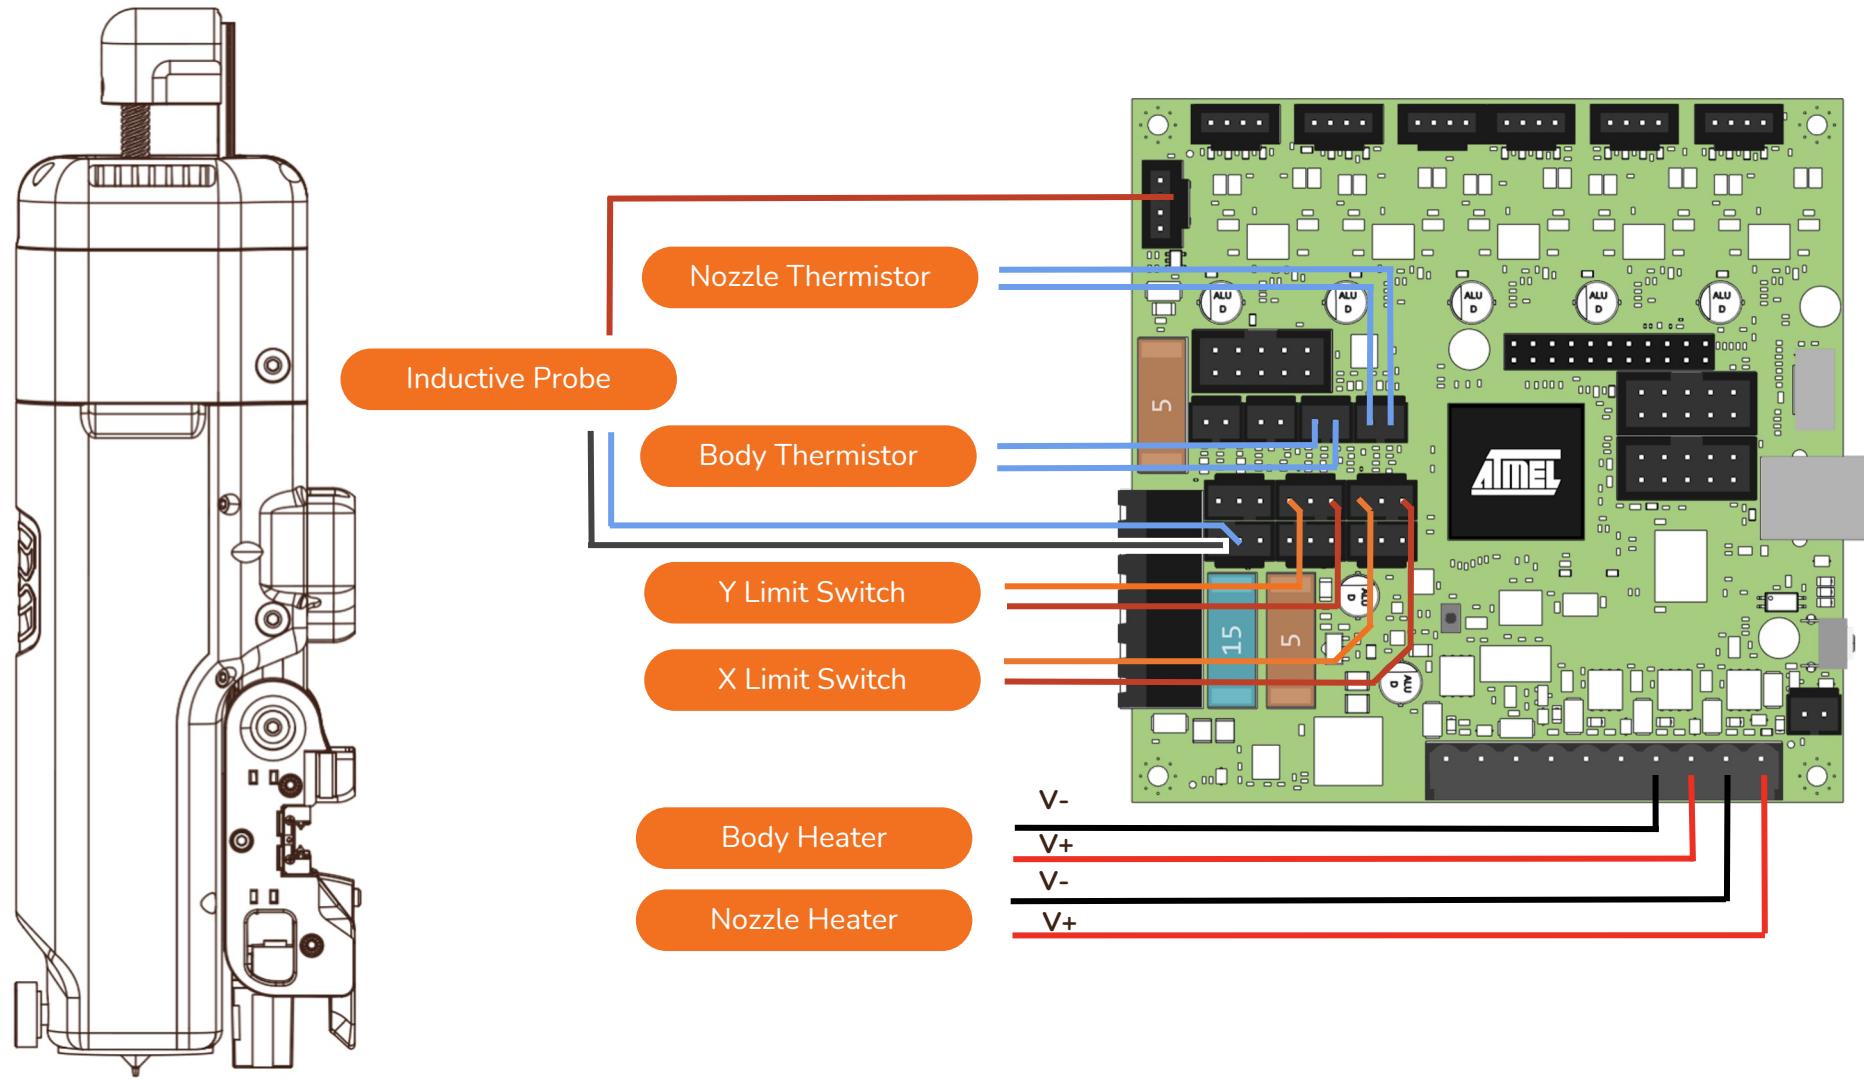



**SENSITIVE ELECTRONICS**

Then, install the Erase Button wiring as depicted.

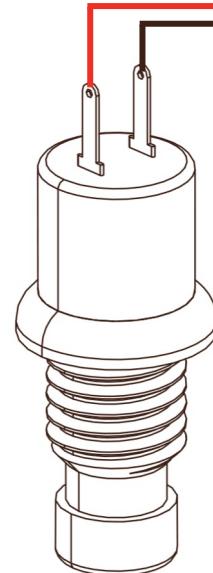


Erase Button

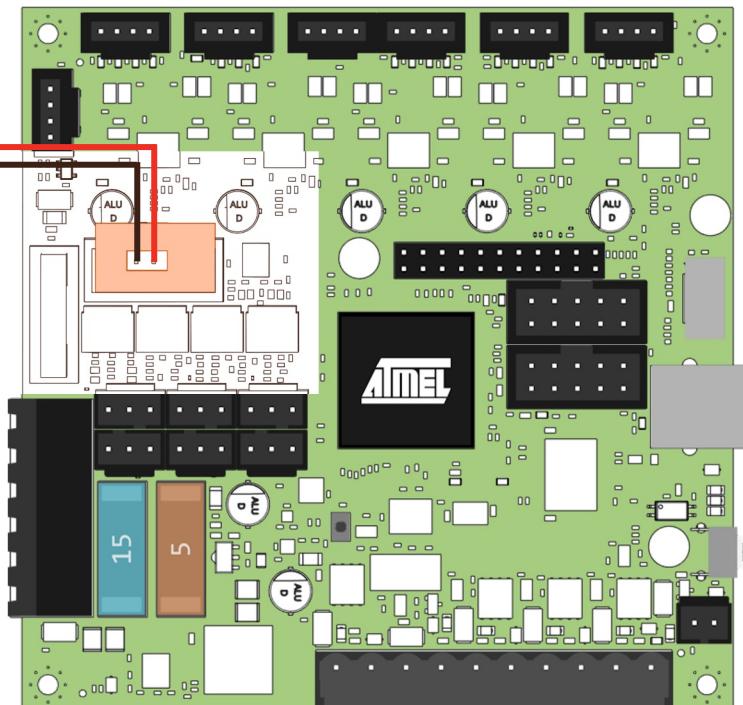

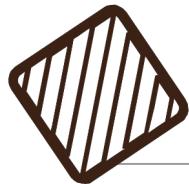**Difficulty**

Medium

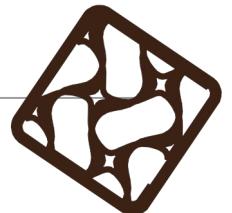**Tools Needed**

M3 Driver  
M5 Driver  
Heatset Insert Tool  
Soldering Iron (Not Included)

**Hardware Needed**



M3 Heatset Insert (6x)  
M3x8 Socket Head Cap Screw (7x)  
M3x16 Socket Head Cap Screw (2x)  
M5 T-Nuts (2x)  
M5x10 Button Head Cap Screw (2x)


Display Panel  
SD Reader  
LCD Controller  
LCD Ribbon Cable  
SD Ribbon Cable

**Printed Parts Needed**



LCD Front Cover (1x)  
LCD Rear Cover (1x)  
LCD Bottom Cover (1x)  
LCD Mount (1x)  
Display Spacer (1x)  
Ribbon Cable Clip (1x)




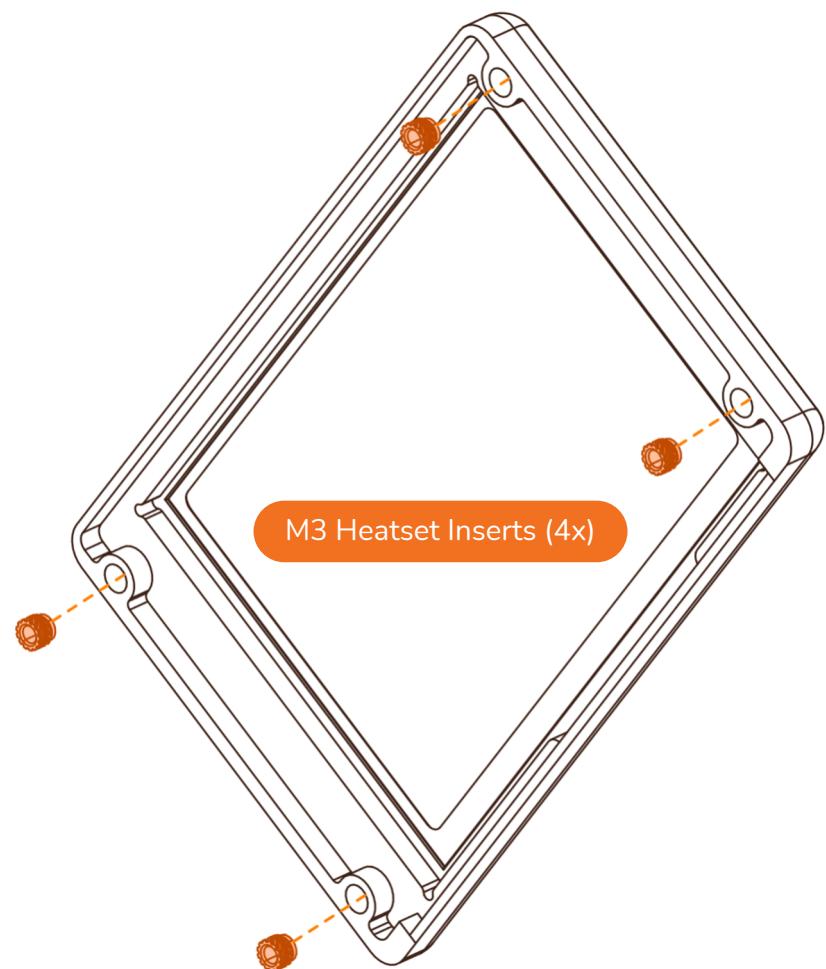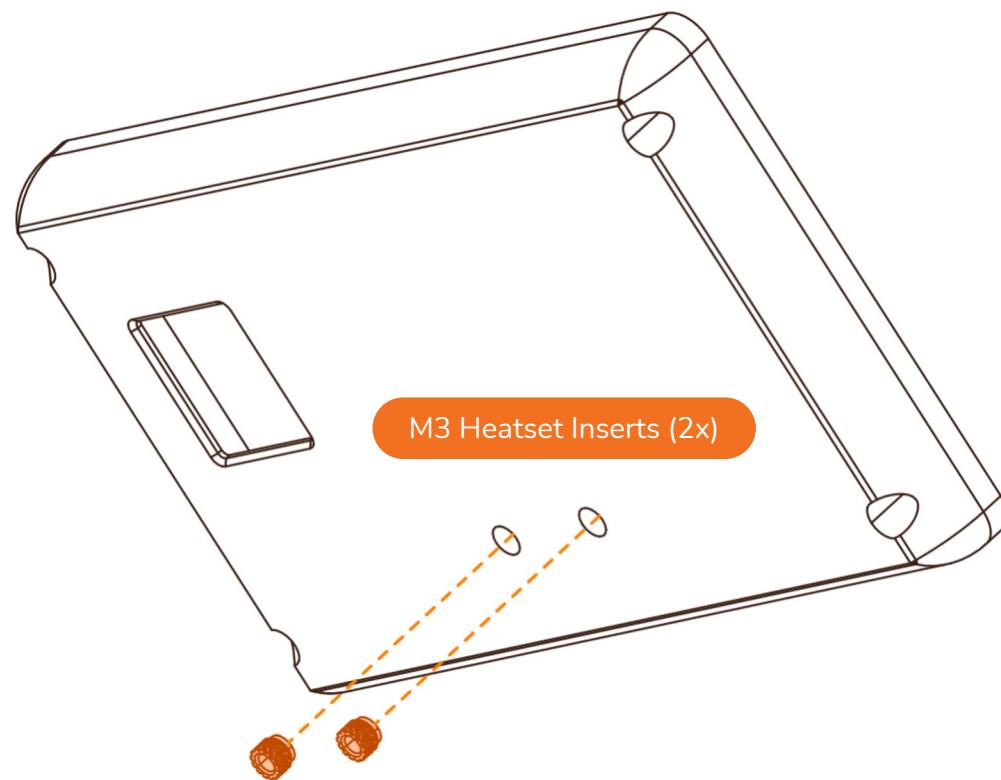

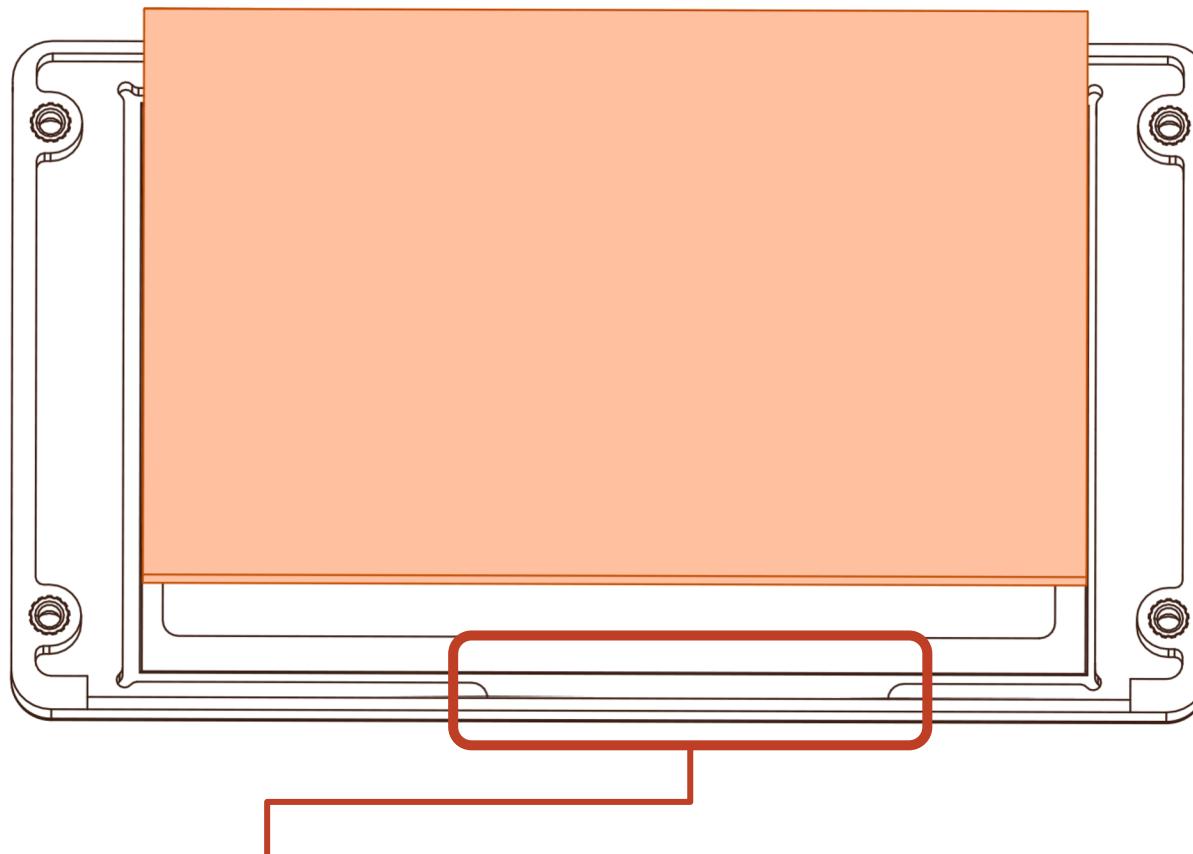**DELICATE CABLES**

The ribbon cable from the display will sit in the opening here. Take care to not bend excessively or fold, as this may damage the display.

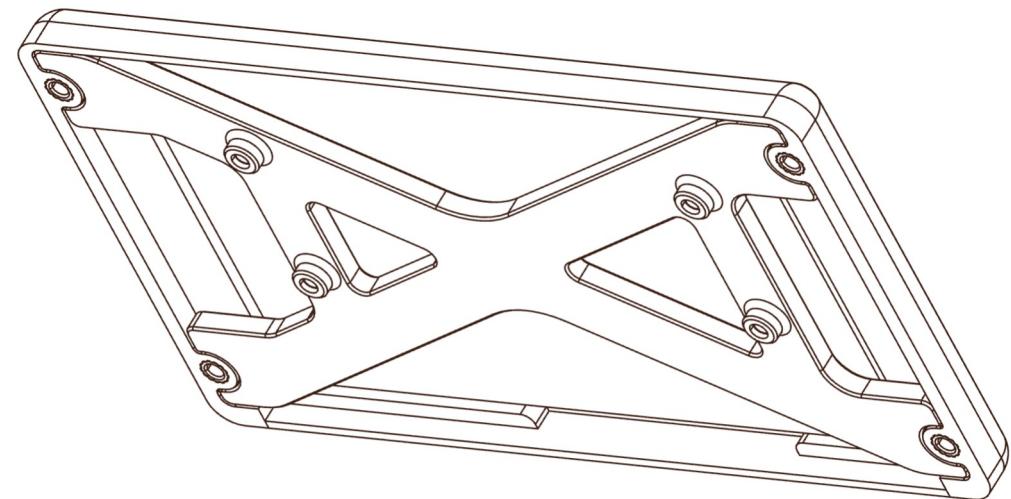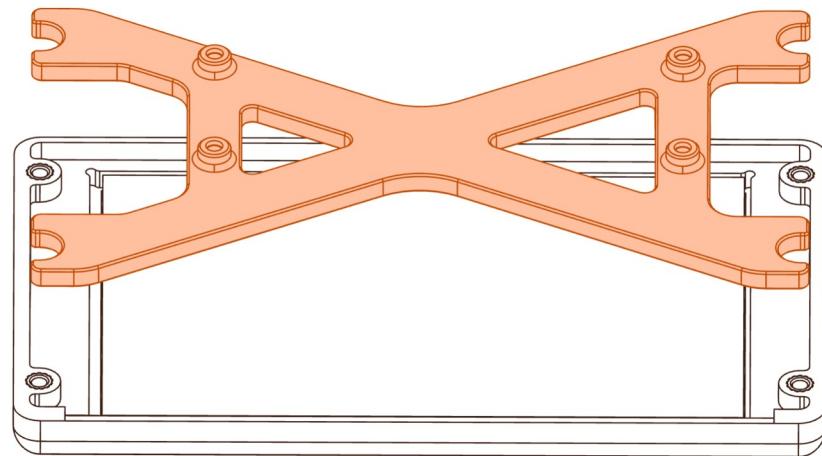

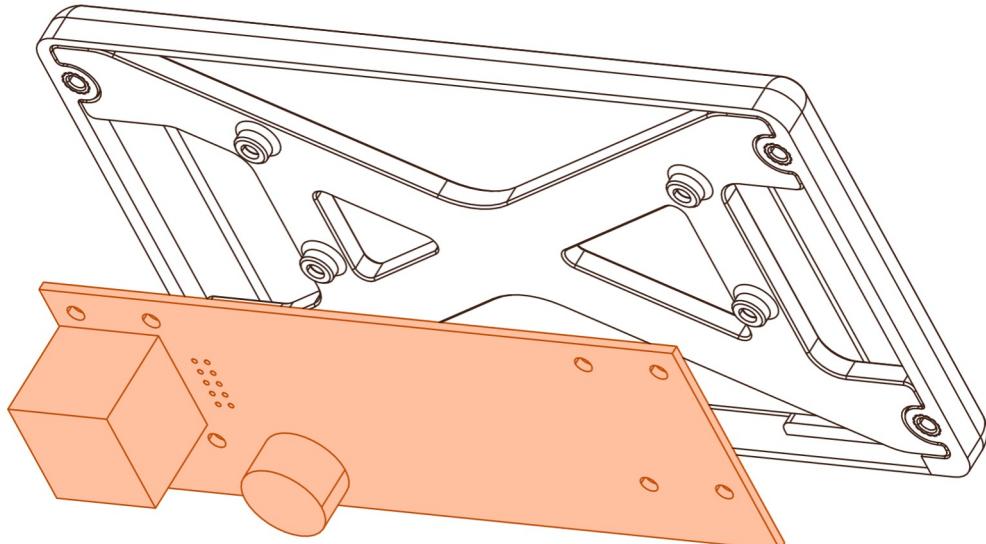**THREADING INTO PLASTIC**


These screws will thread into the plastic printed parts, through sensitive electronics. Take care to not over-tighten them.


**"LET 'EM SING!"**


Be sure to remove the small tape film from the speaker on the display board.



**CONNECT-EM UP!**



Take the time to connect the LCD Controller to the Display now.

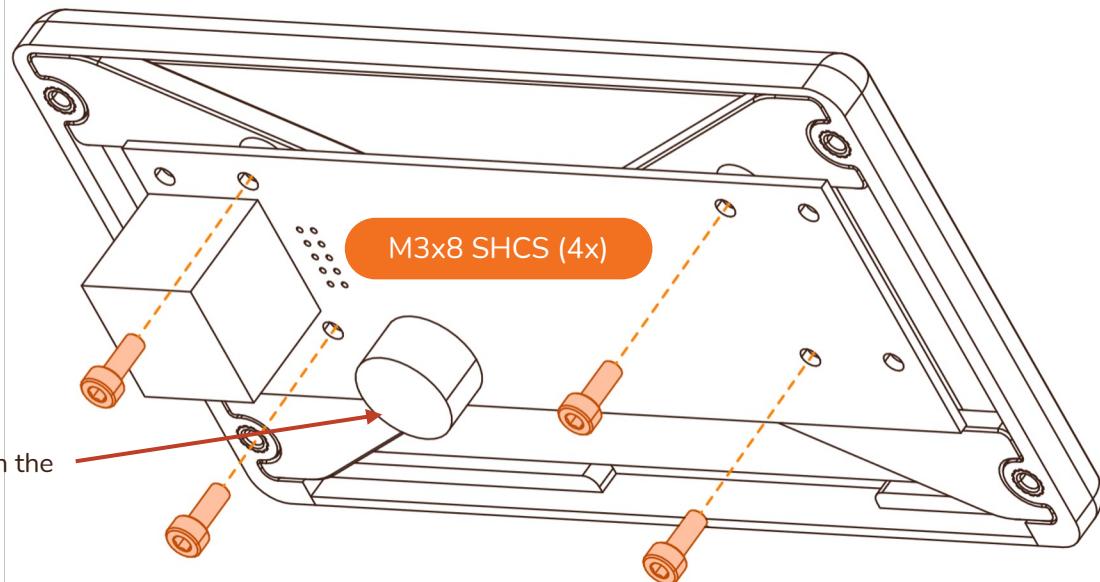


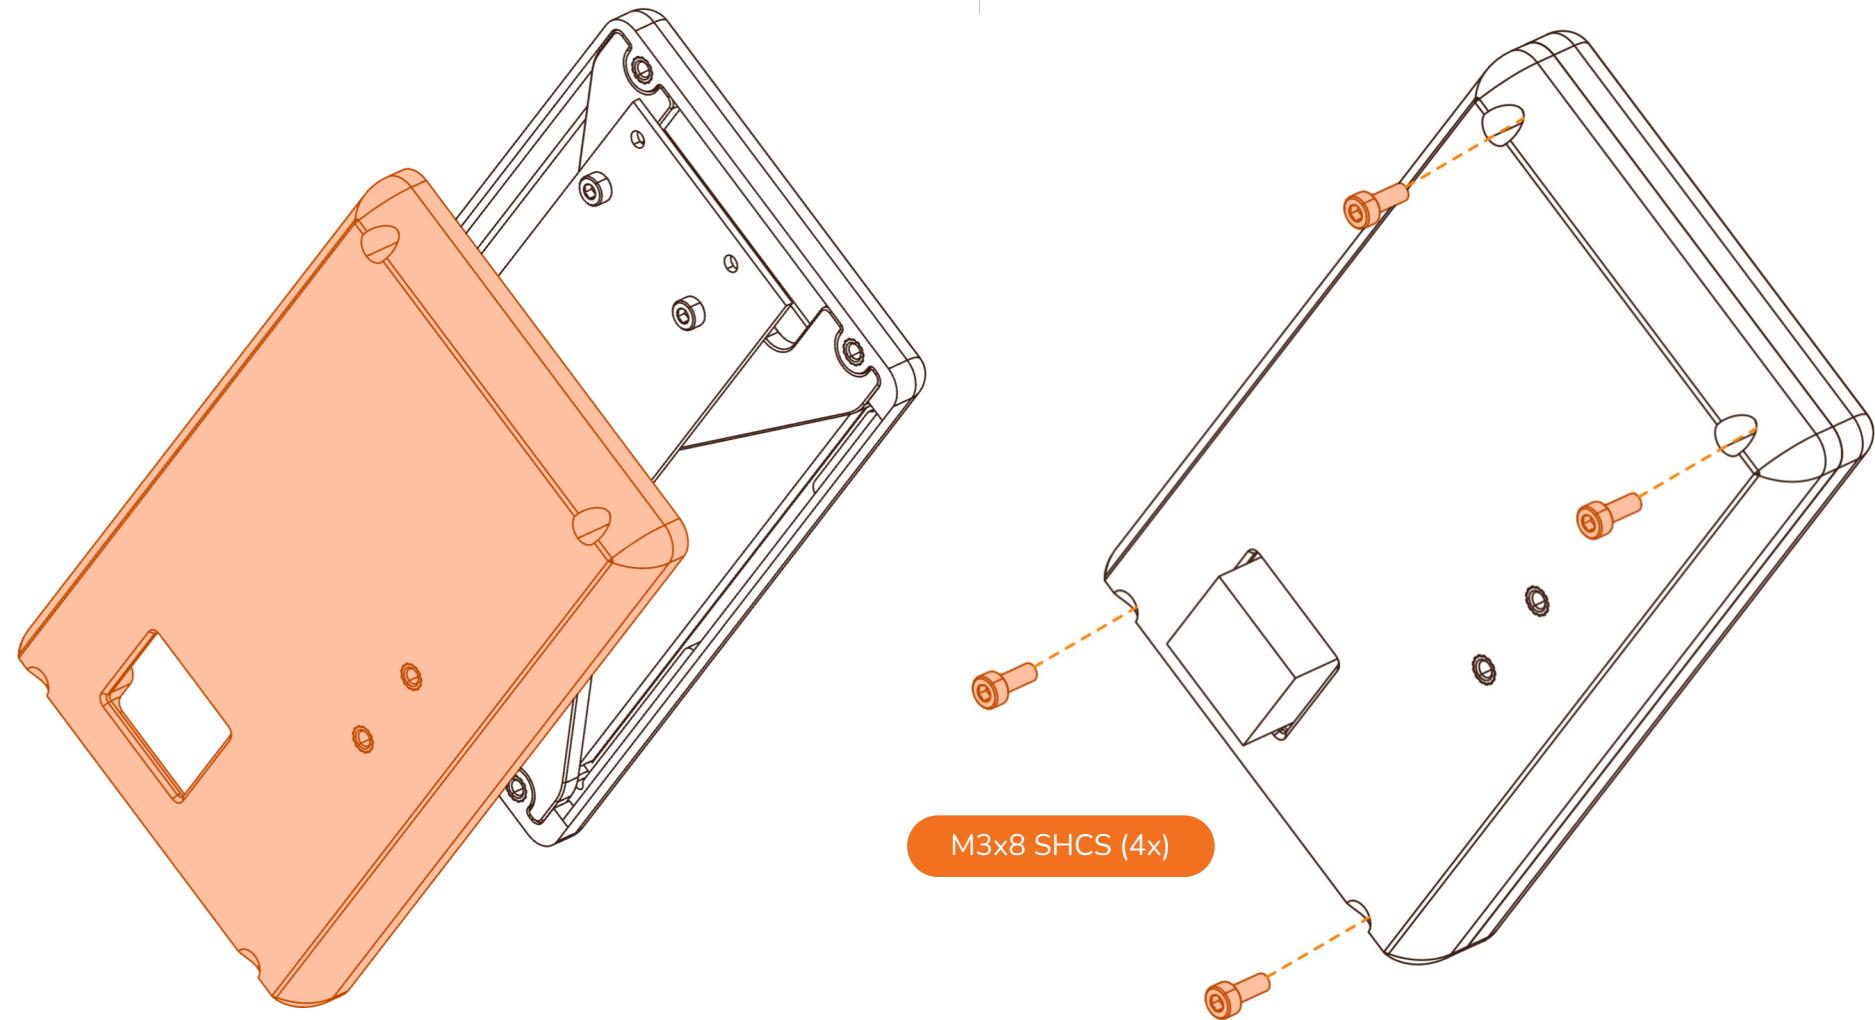


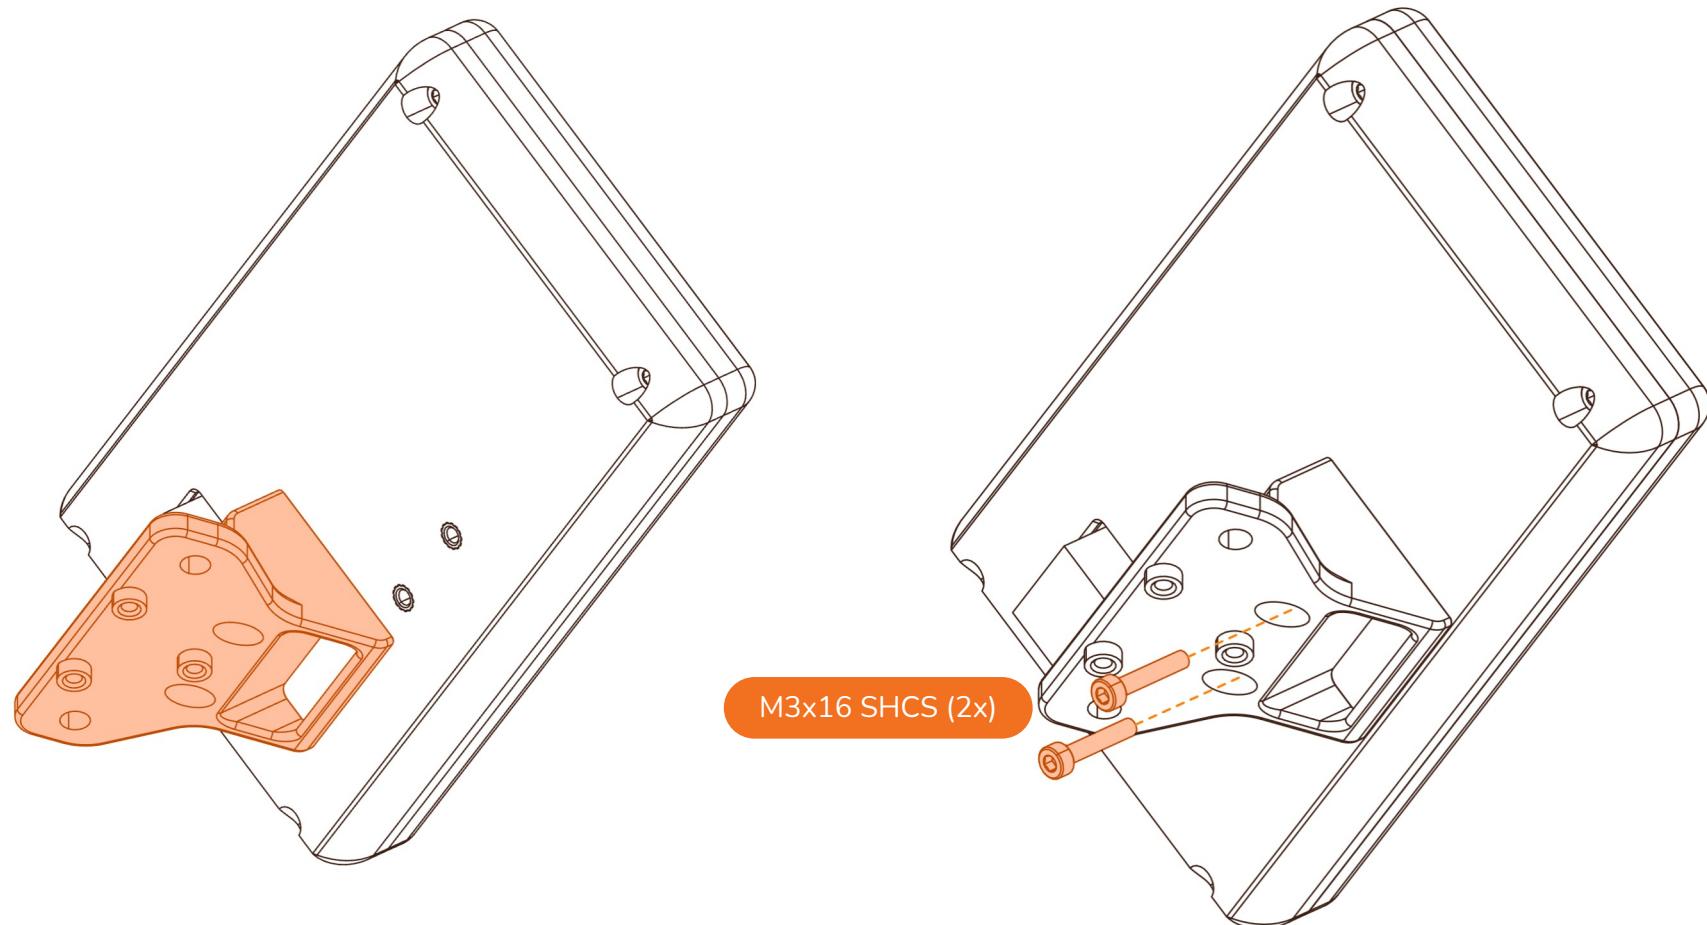

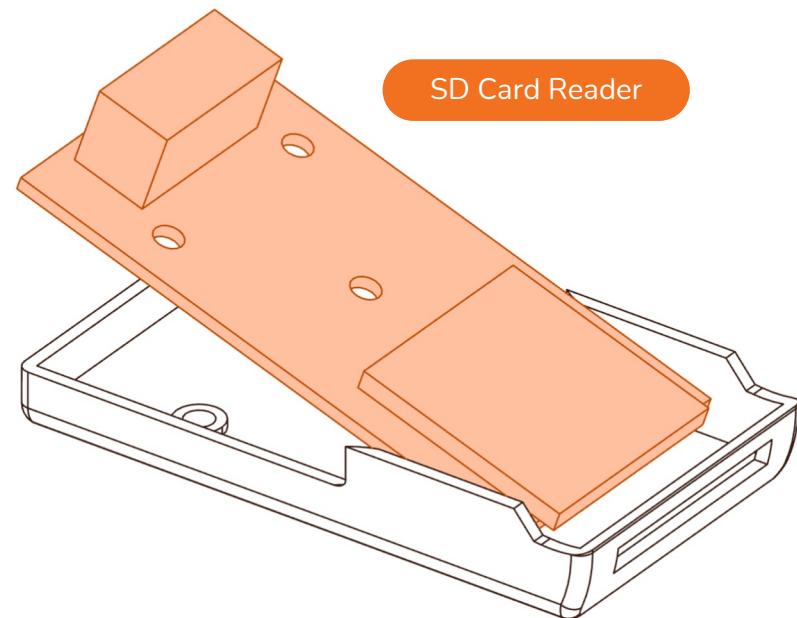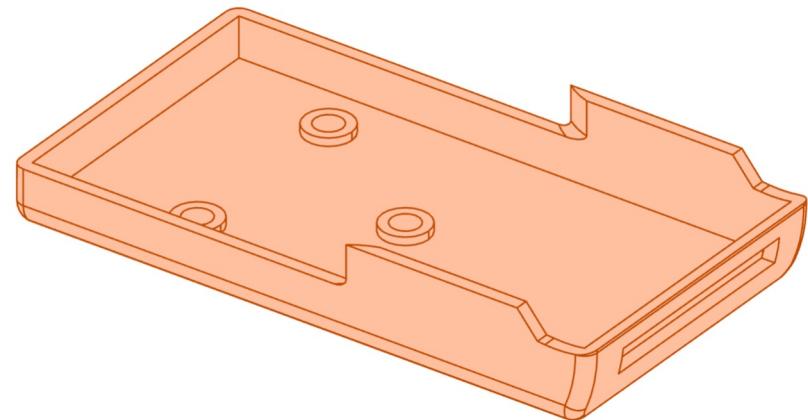


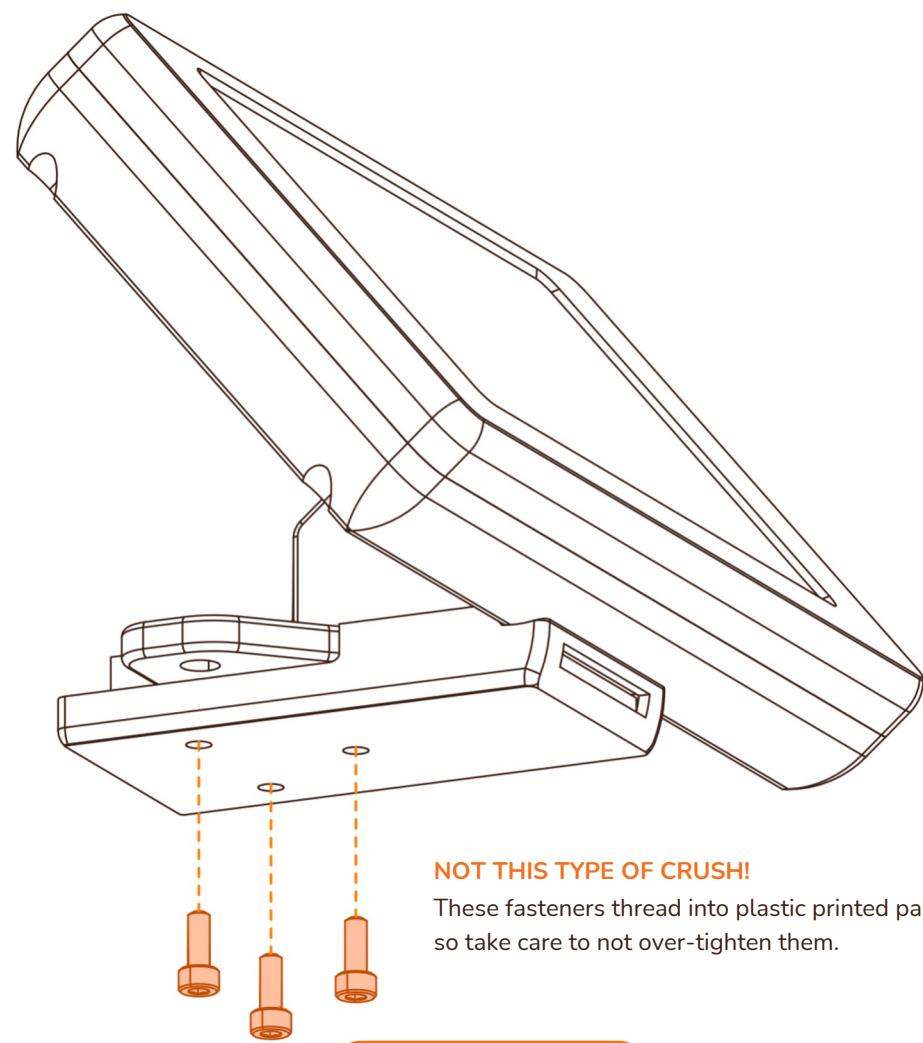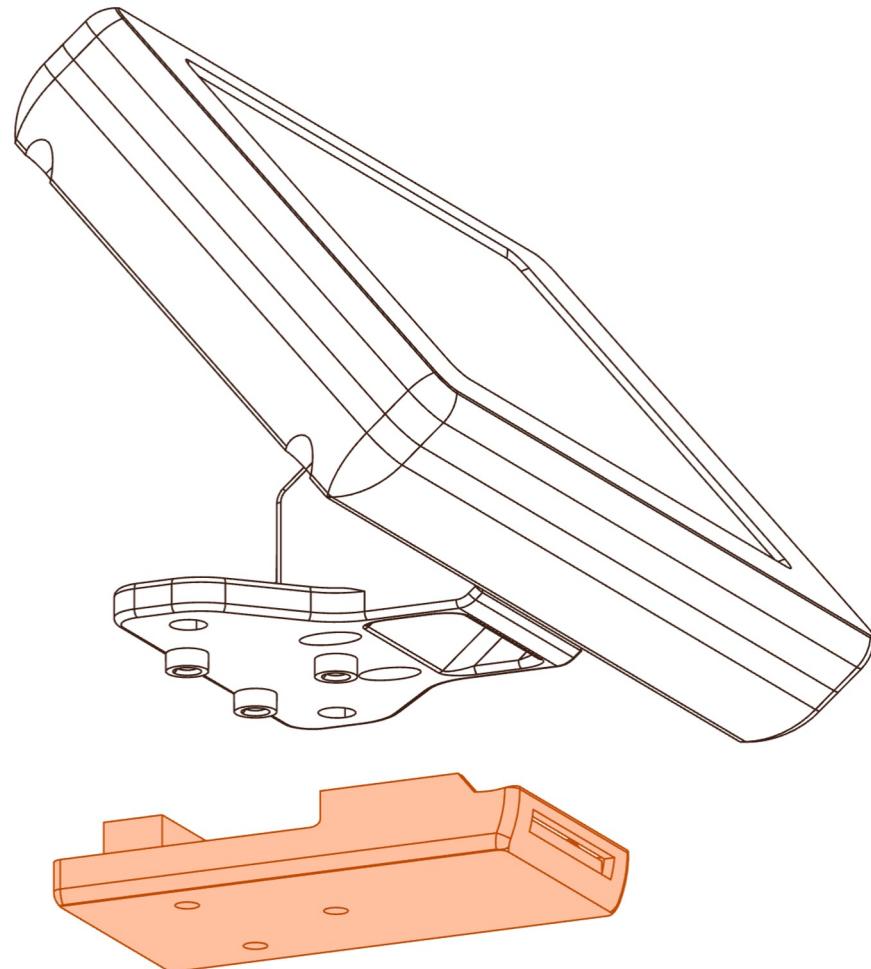


M3x8 SHCS (3x)

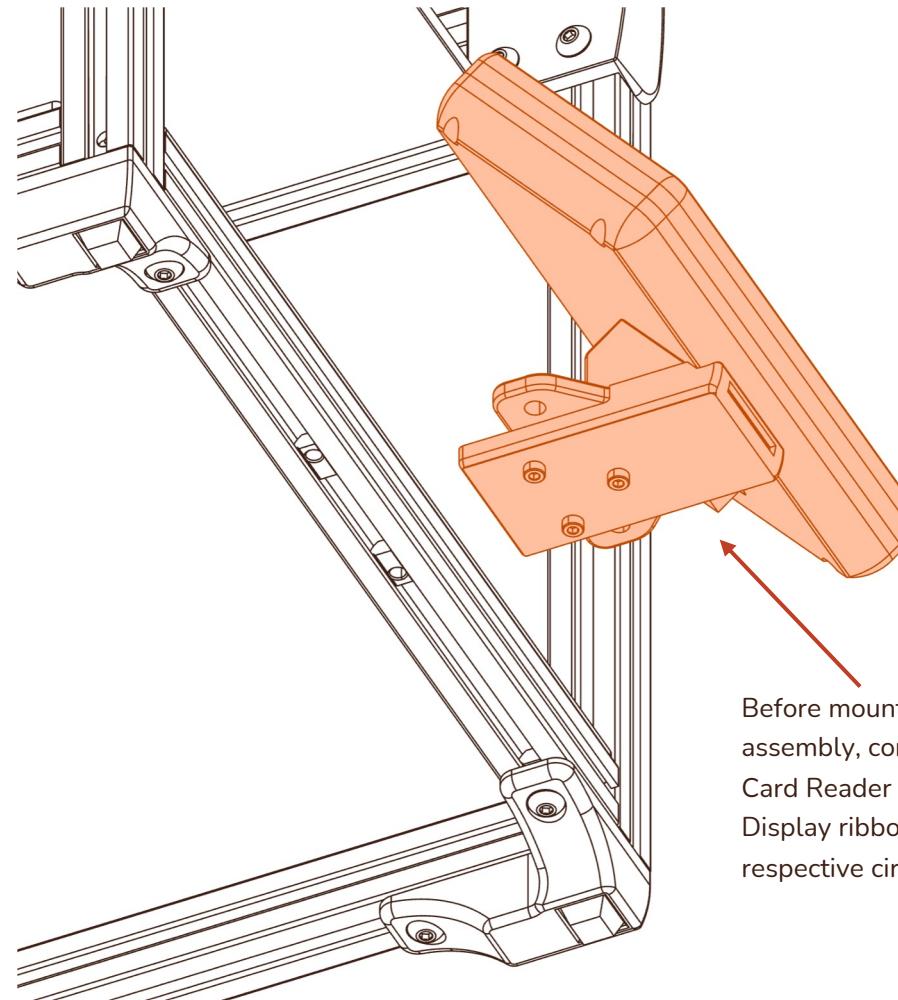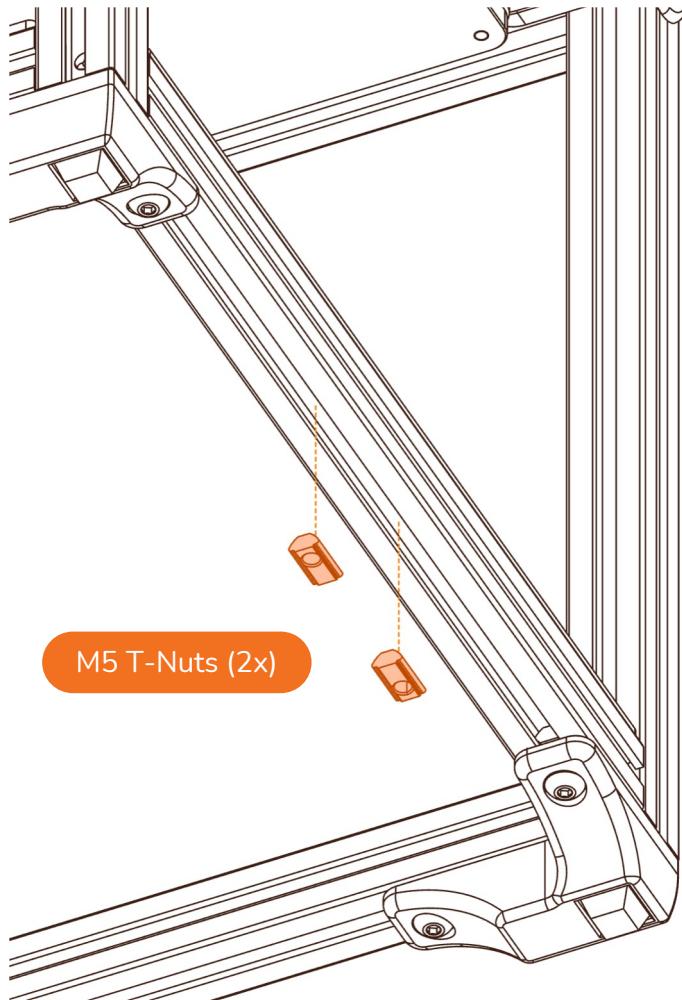**CONNECTION - GO!**


Before mounting the display assembly, connect the EXP1 / SD Card Reader and EXP2 / LCD Display ribbon cables to their respective circuit boards.

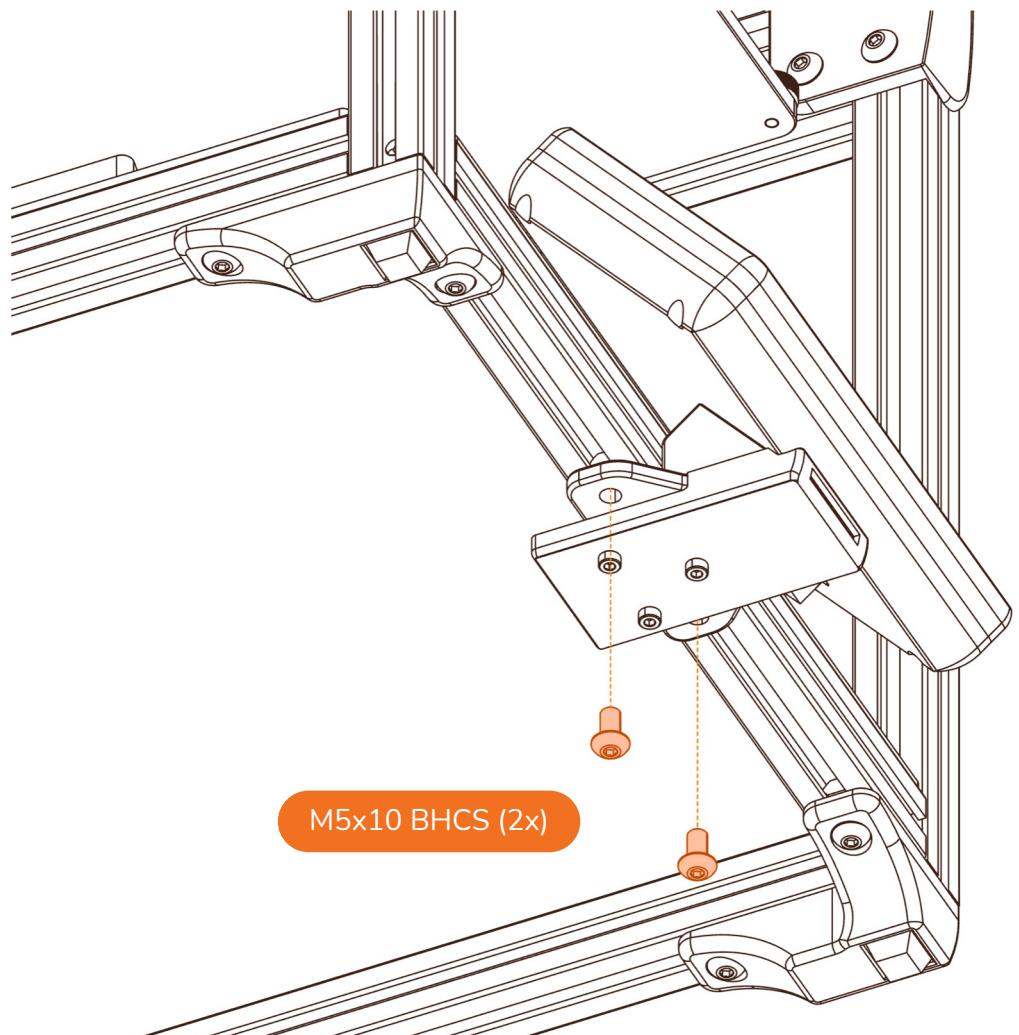**(DON'T) PINCH ME, I'M DREAMING**

When installing the display, ensure that no connections wiggle loose or are under strain. Be sure to not pinch the cables under the frame until you install the cable management piece.

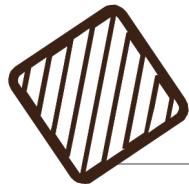**Difficulty**

Easy

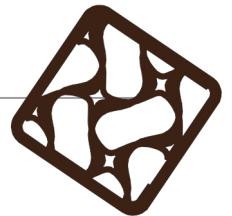**Tools Needed**

M3 Driver  
M5 Driver  
Heatset Insert Tool  
Soldering Iron (Not Included)



**Hardware Needed**


M5 T-Nuts (2x)  
M3 Heatset Insert  
M5x10 Button Head Cap Screw (2x)

**Printed Parts Needed**


Center Cover (1x)



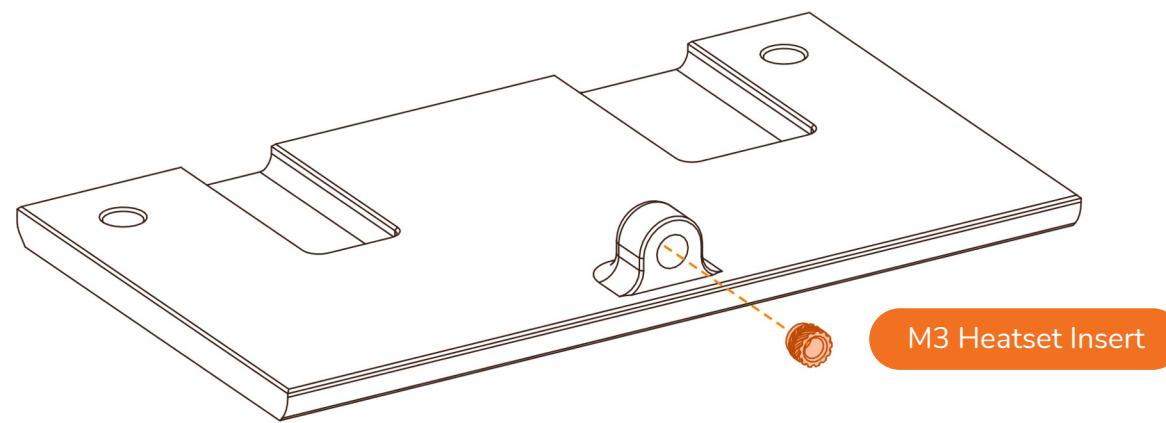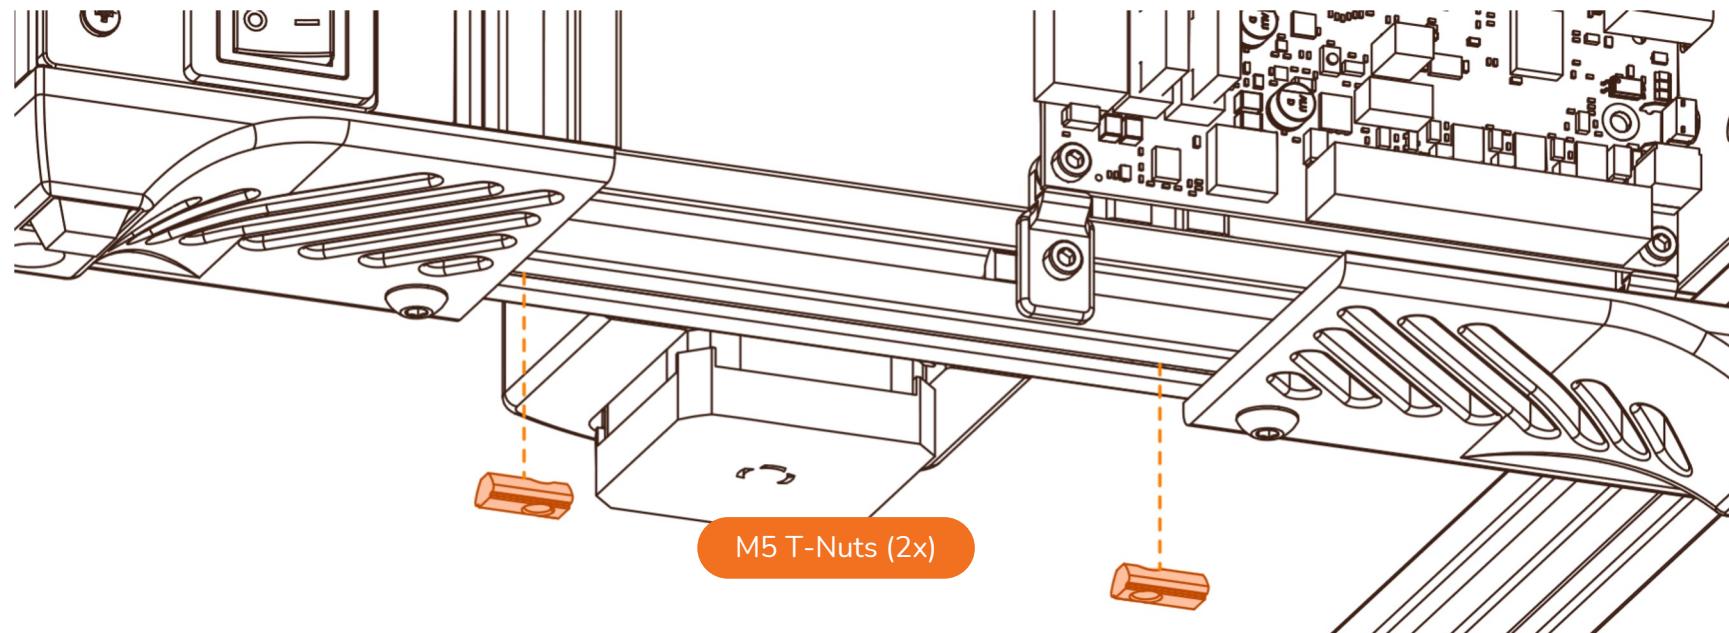

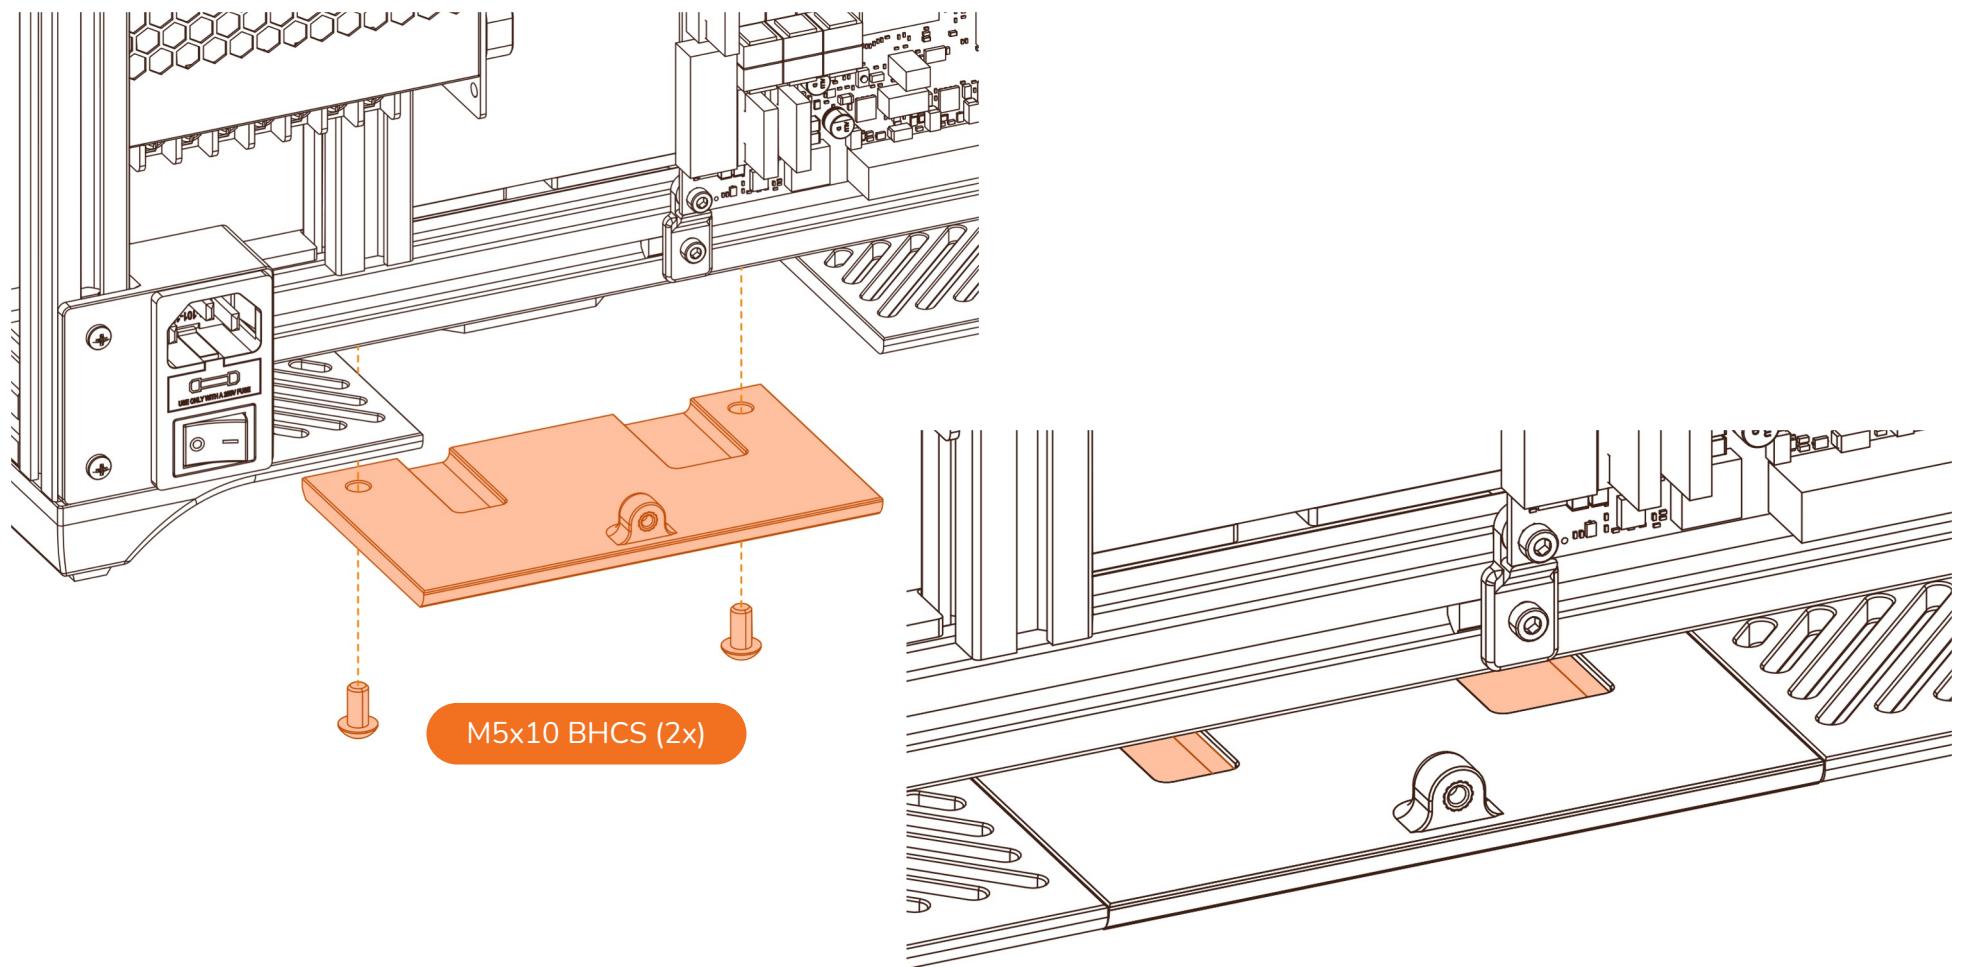**(DON'T) PINCH ME, I'M DREAMING**


When installing the bottom cover, be sure to route the Display and SD Card ribbon cables, as well as the Z stepper motor wires through the provided grooves. Make sure the cables are loose and can slide to ensure they are not being pinched.

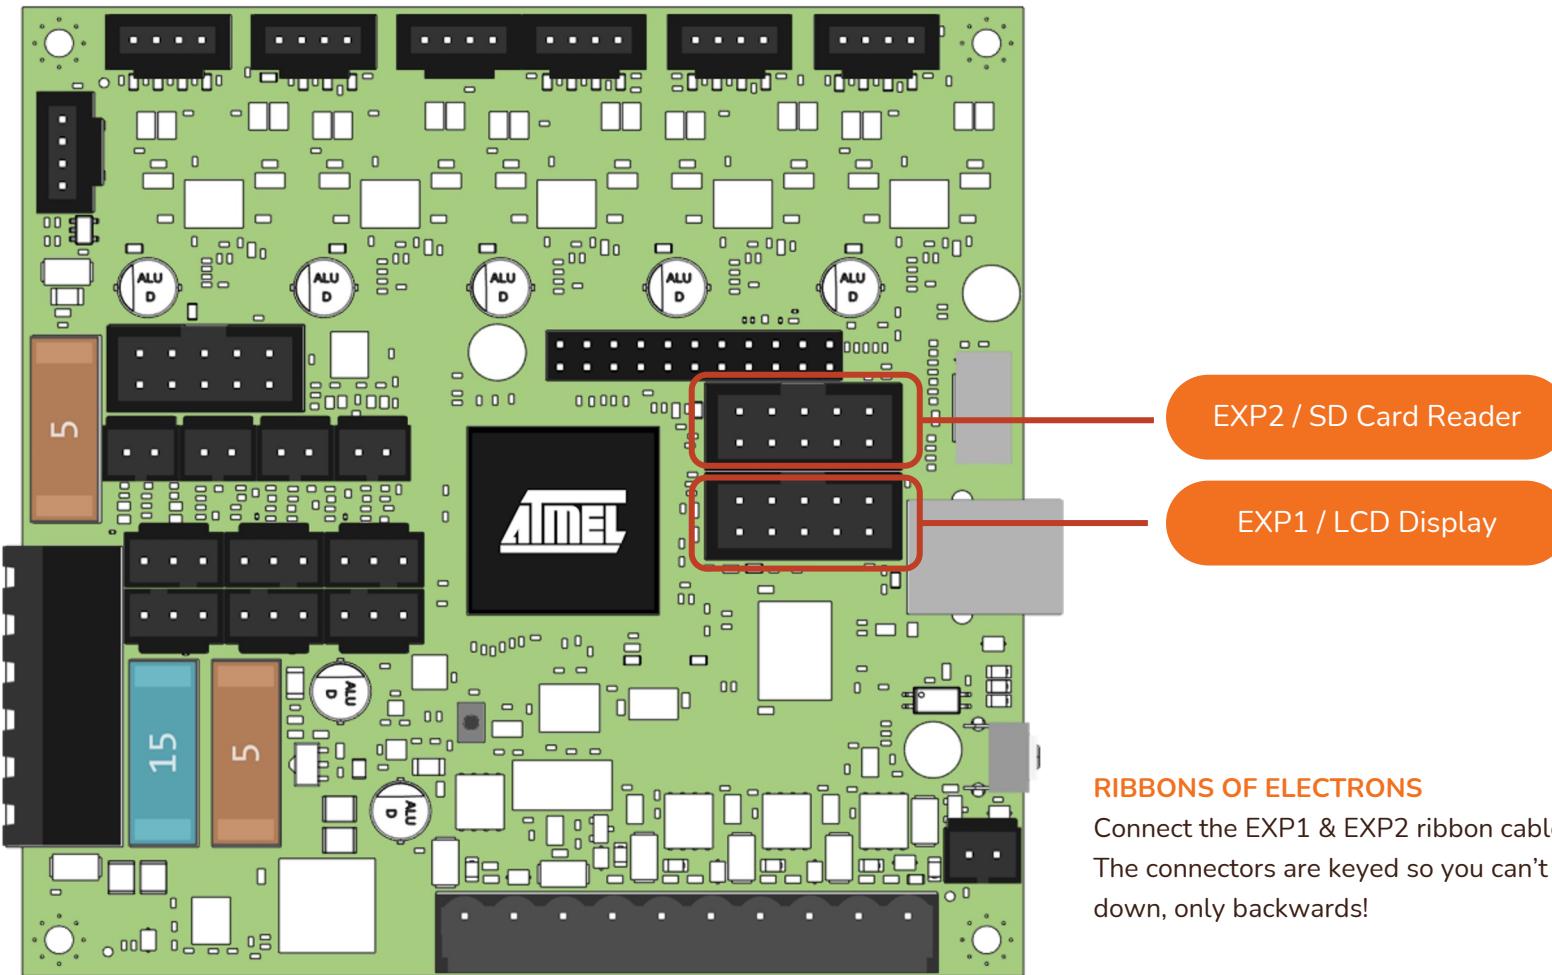


#### RIBBONS OF ELECTRONS

Connect the EXP1 & EXP2 ribbon cables as labeled above.  
The connectors are keyed so you can't get them upside-down, only backwards!

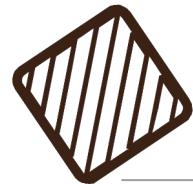

**Difficulty**

Easy

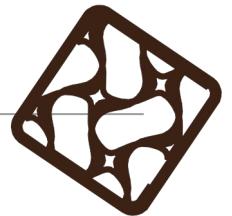**Tools Needed**

M3 Driver  
Phillips Screwdriver  
Heatset Insert Tool  
Soldering Iron (Not Included)

**Hardware Needed**


M3 Heatset Inserts (2x)  
M3 T-Nuts (20x)  
M3x8 Button Head Phillips Screw (26x)  
M3x20 Socket Head Cap Screw (2x)

Rear Exterior Panel (1x)  
Left Panel (1x)  
Right Panel (1x)  
24V DC Fan (1x)

**Printed Parts Needed**


Rear Fan Grill (1x)  
Rear Fan Inner Guard (1x)




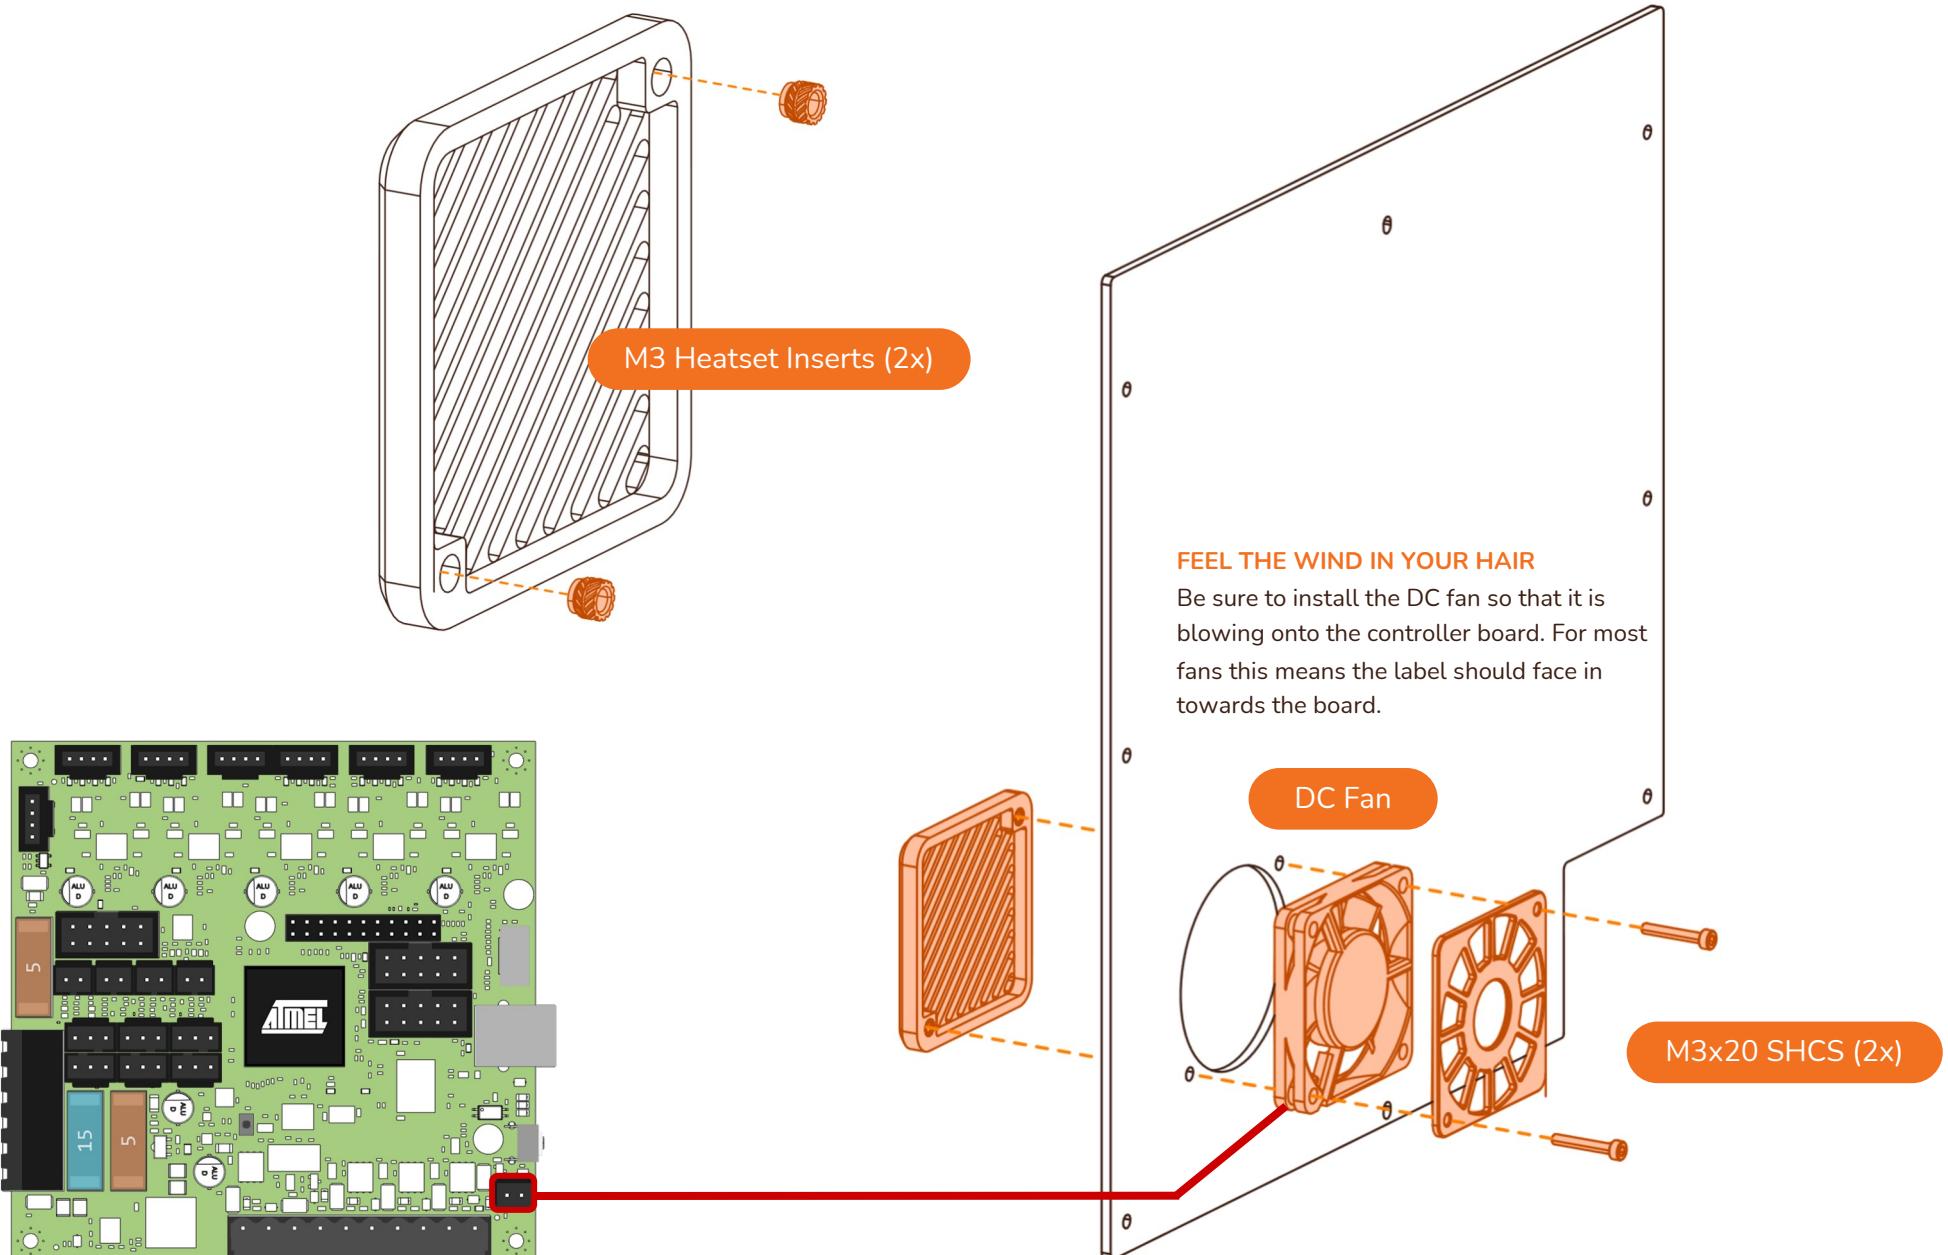


**ORIENTATION MATTERS**


The T-nuts should be aligned such that the threads are often over the access holes in the extrusion. This ensures you can secure every fastener of the panels.

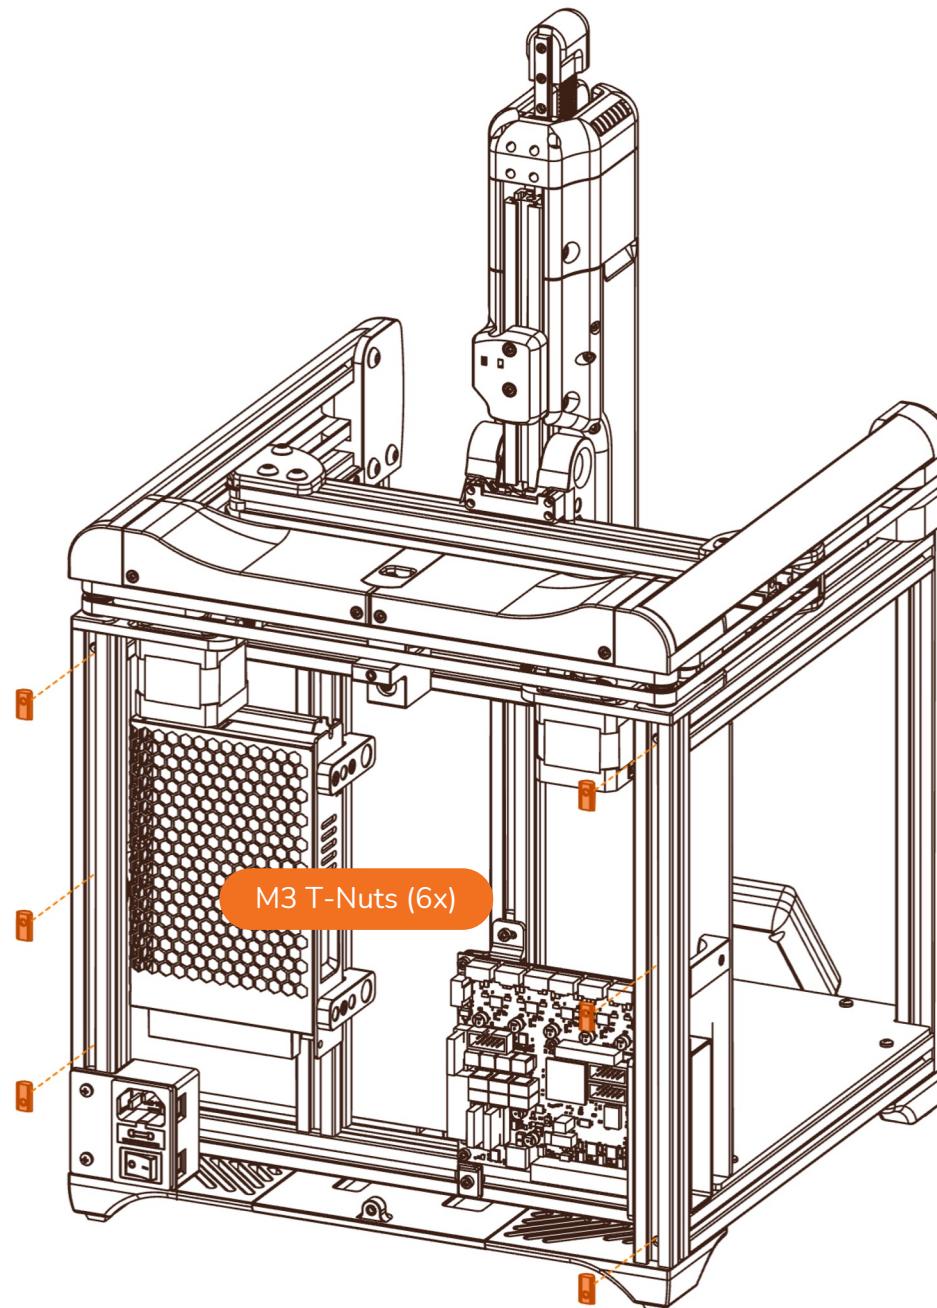

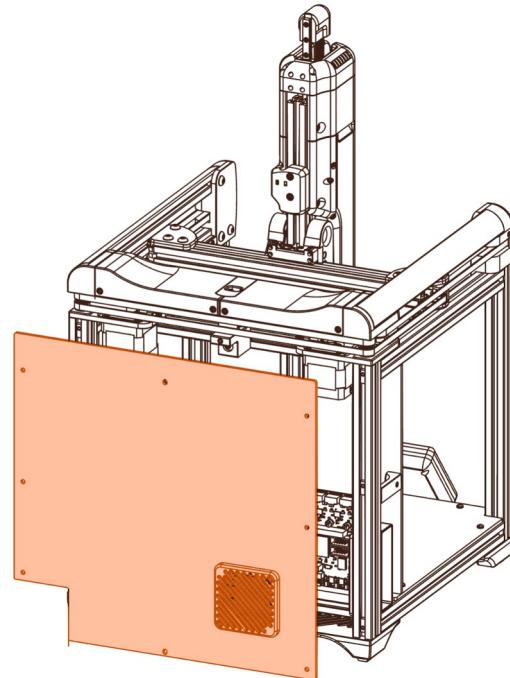**NOT A FAN OF THAT?**


Be sure to connect your fan header onto the Archim before closing the rear panel. This keeps your stepper drivers nice and cool.

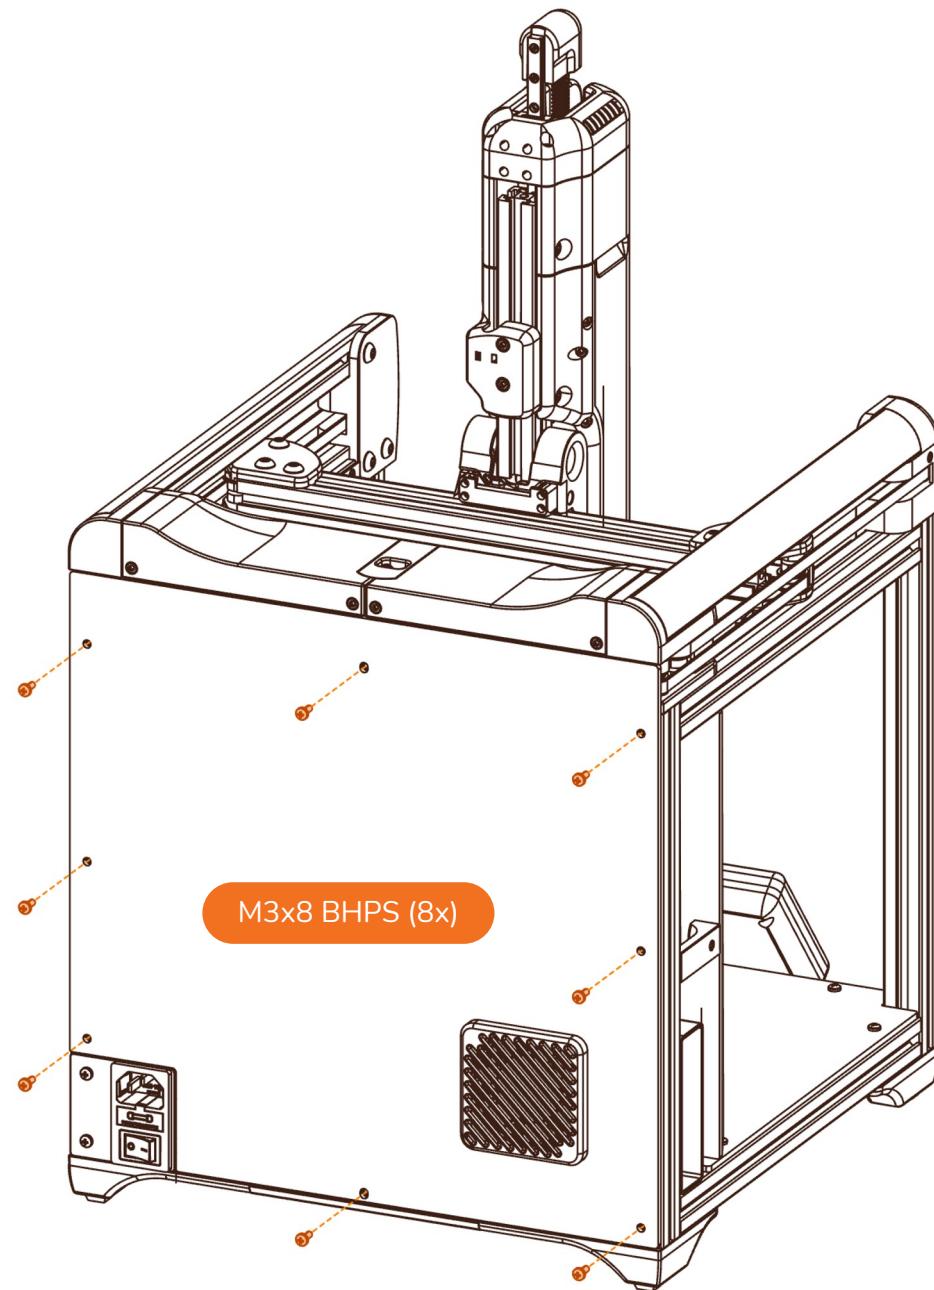

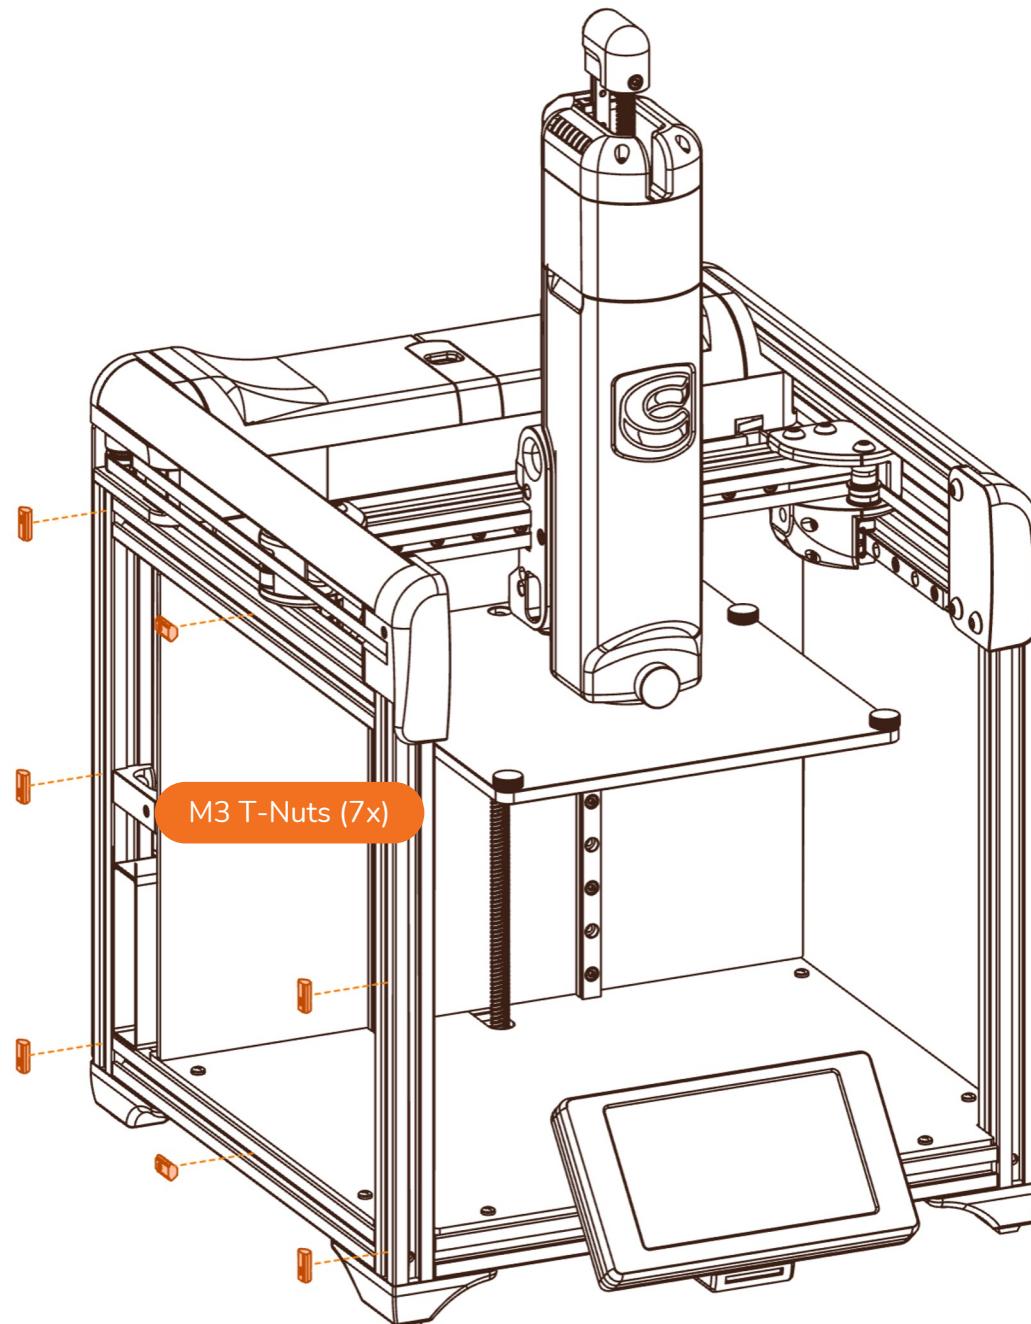


**ORIENTATION MATTERS**


The T-nuts should be aligned such that the threads are often over the access holes in the extrusion. This ensures you can secure every fastener of the panels.

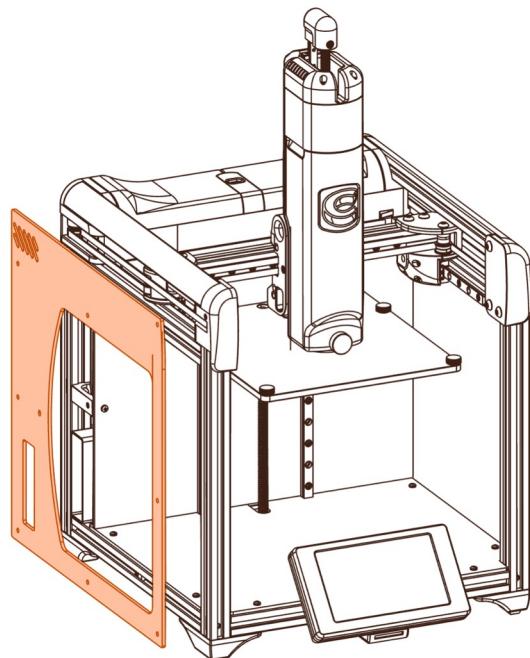

**TURN OVER A NEW LEAF**



Be sure to remove the protective papering from the acrylic panels before doing final installation.

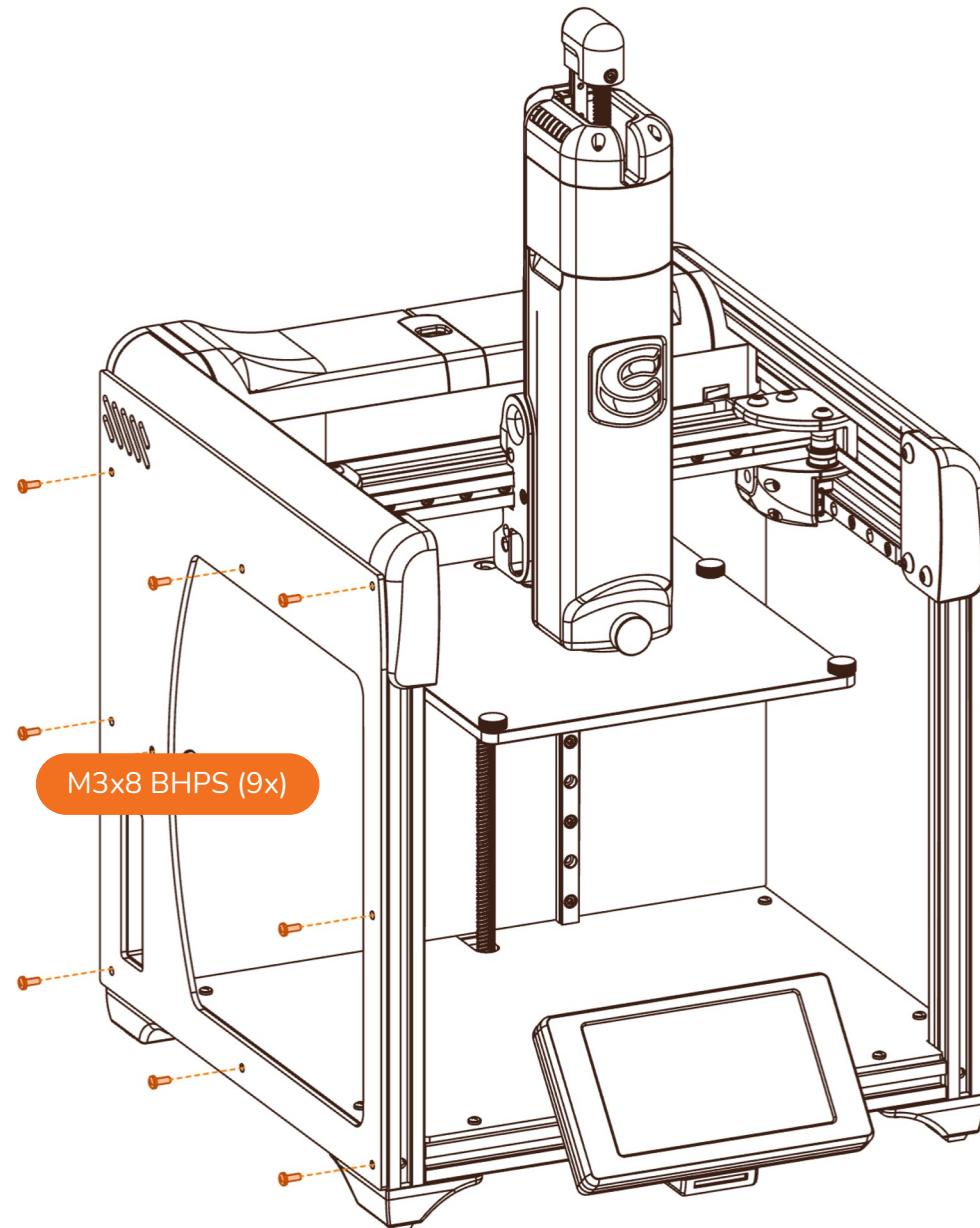


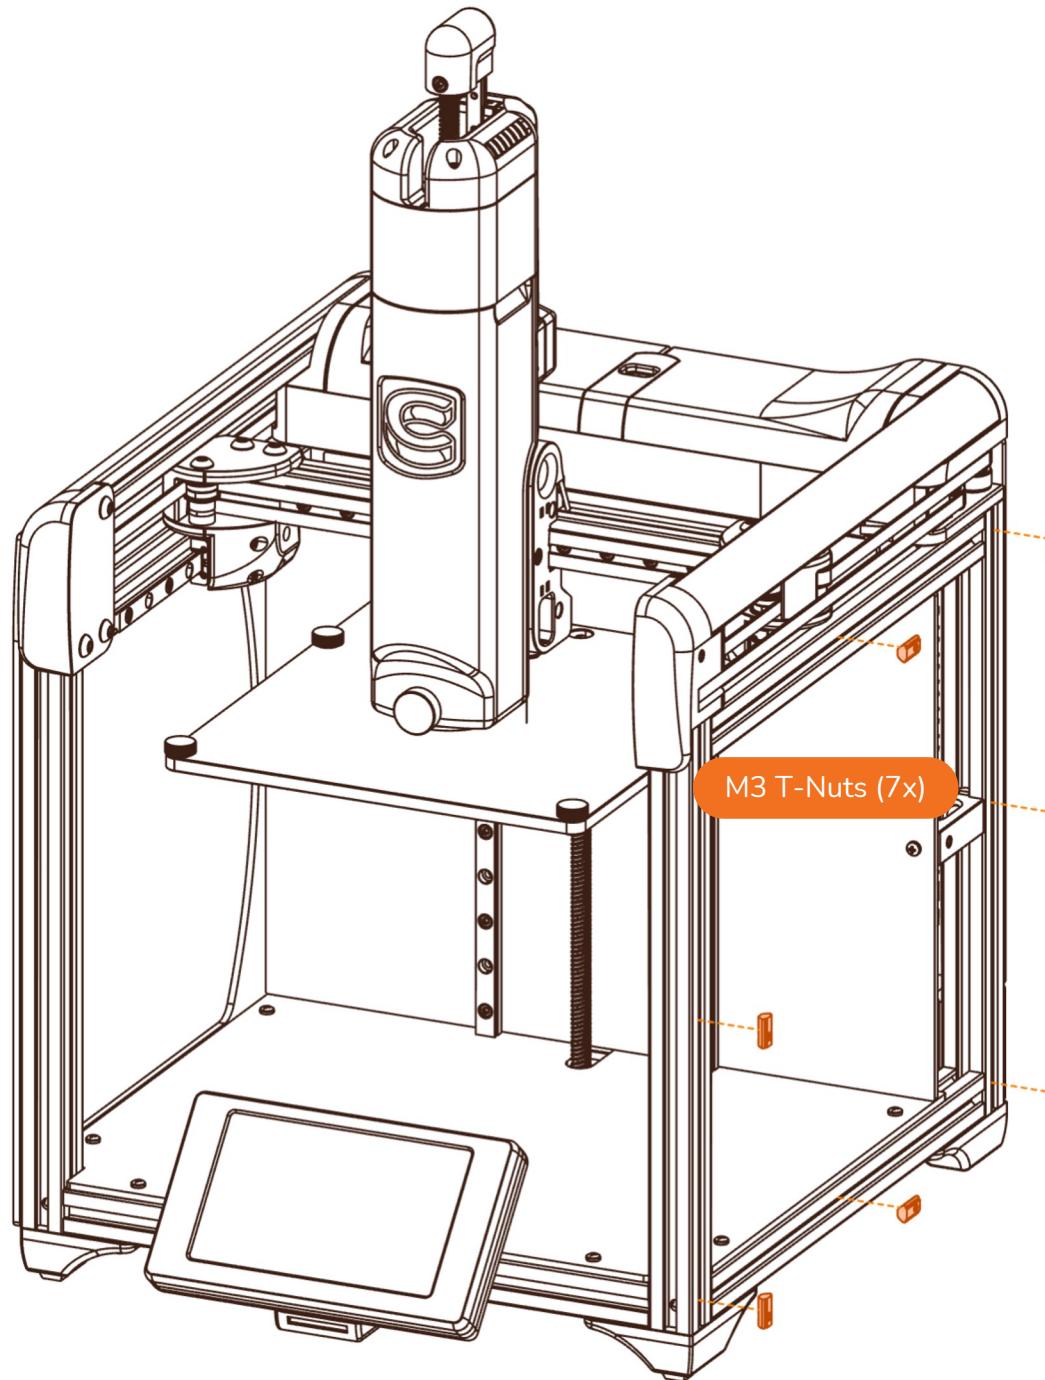


**ORIENTATION MATTERS**

The T-nuts should be aligned such that the threads are often over the access holes in the extrusion. This ensures you can secure every fastener of the panels.

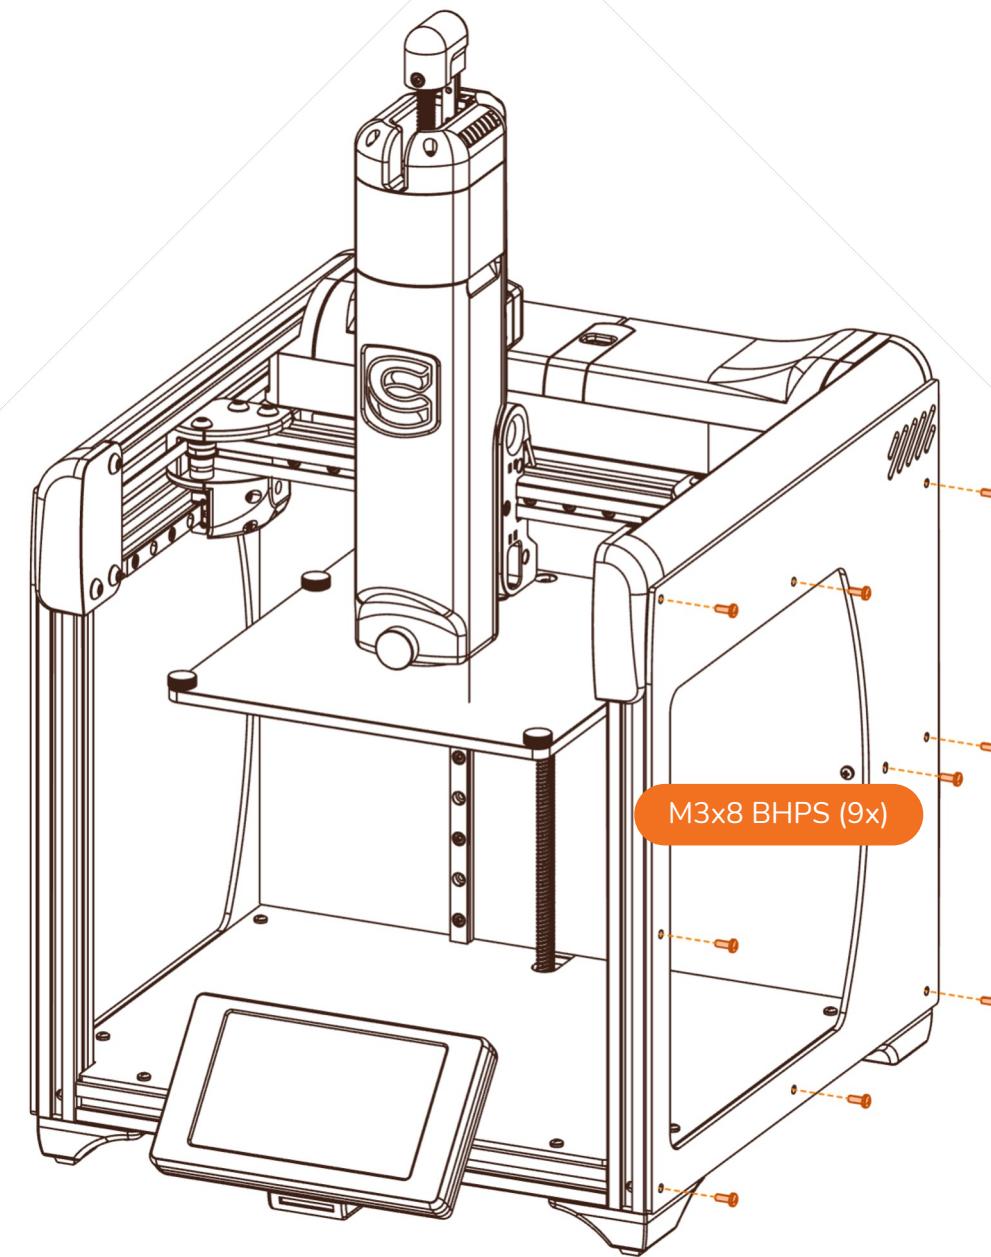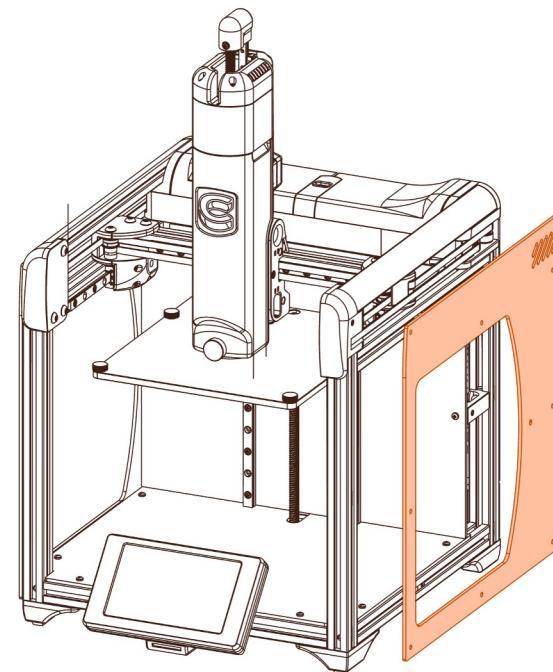

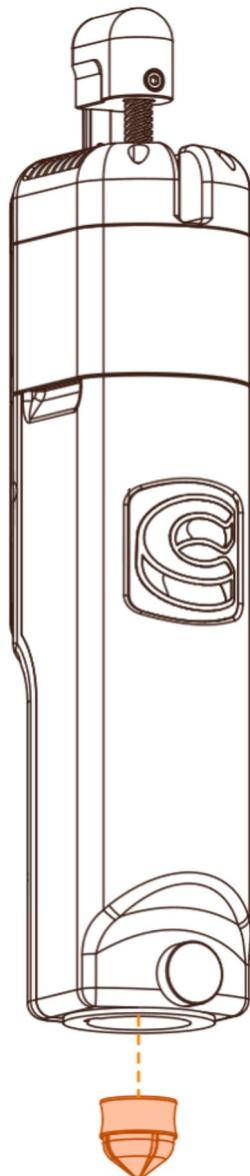


Red Plastic Plunger

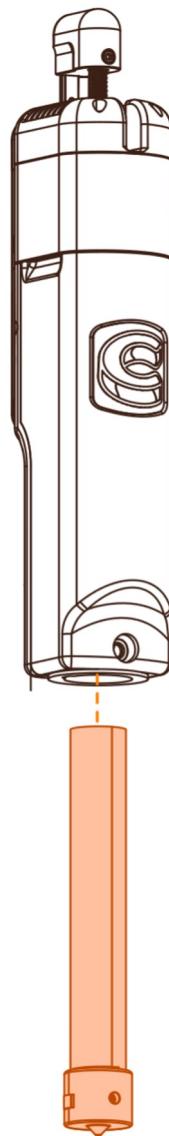**NOZZLE CARTRIDGE**

It is a good idea to thoroughly wash the nozzle, cartridge and plunger parts as they may have contaminates from the manufacturing process.

These components directly contact the chocolate and should be cared for like any other food contact items in your kitchen.

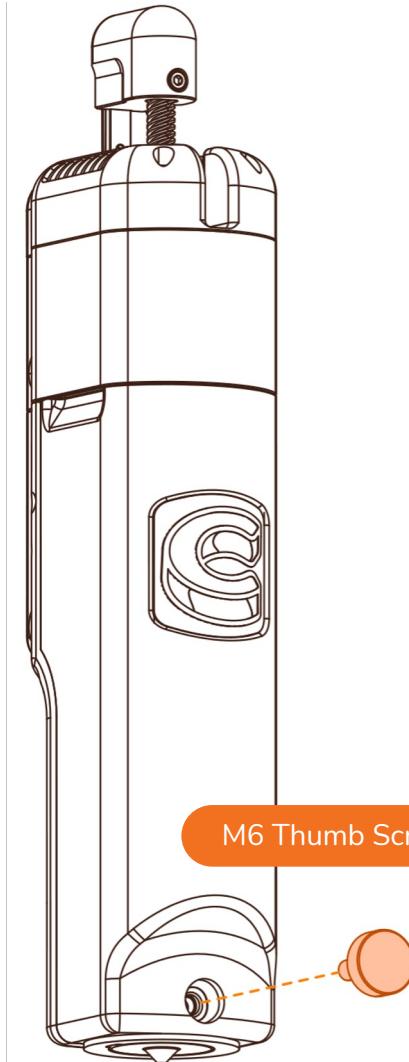



# COCOA PRESS

## NEXT STEPS

Congratulations! You made it through the assembly manual. At this point the next steps you likely need to take are software related.

Head on over to [help.cocoapress.com](http://help.cocoapress.com) to find detailed instructions for how to proceed!

---

---

