

INTELLIGENT IRRIGATION SYSTEM FOR LOW-COST AUTONOMOUS WATER CONTROL IN SMALL-SCALE AGRICULTURE




Building the Intel-IrriS IoT platform Part 1: soil sensor device



Prof. Congduc Pham
<http://www.univ-pau.fr/~cpham>
Université de Pau, France



Review: Technology components

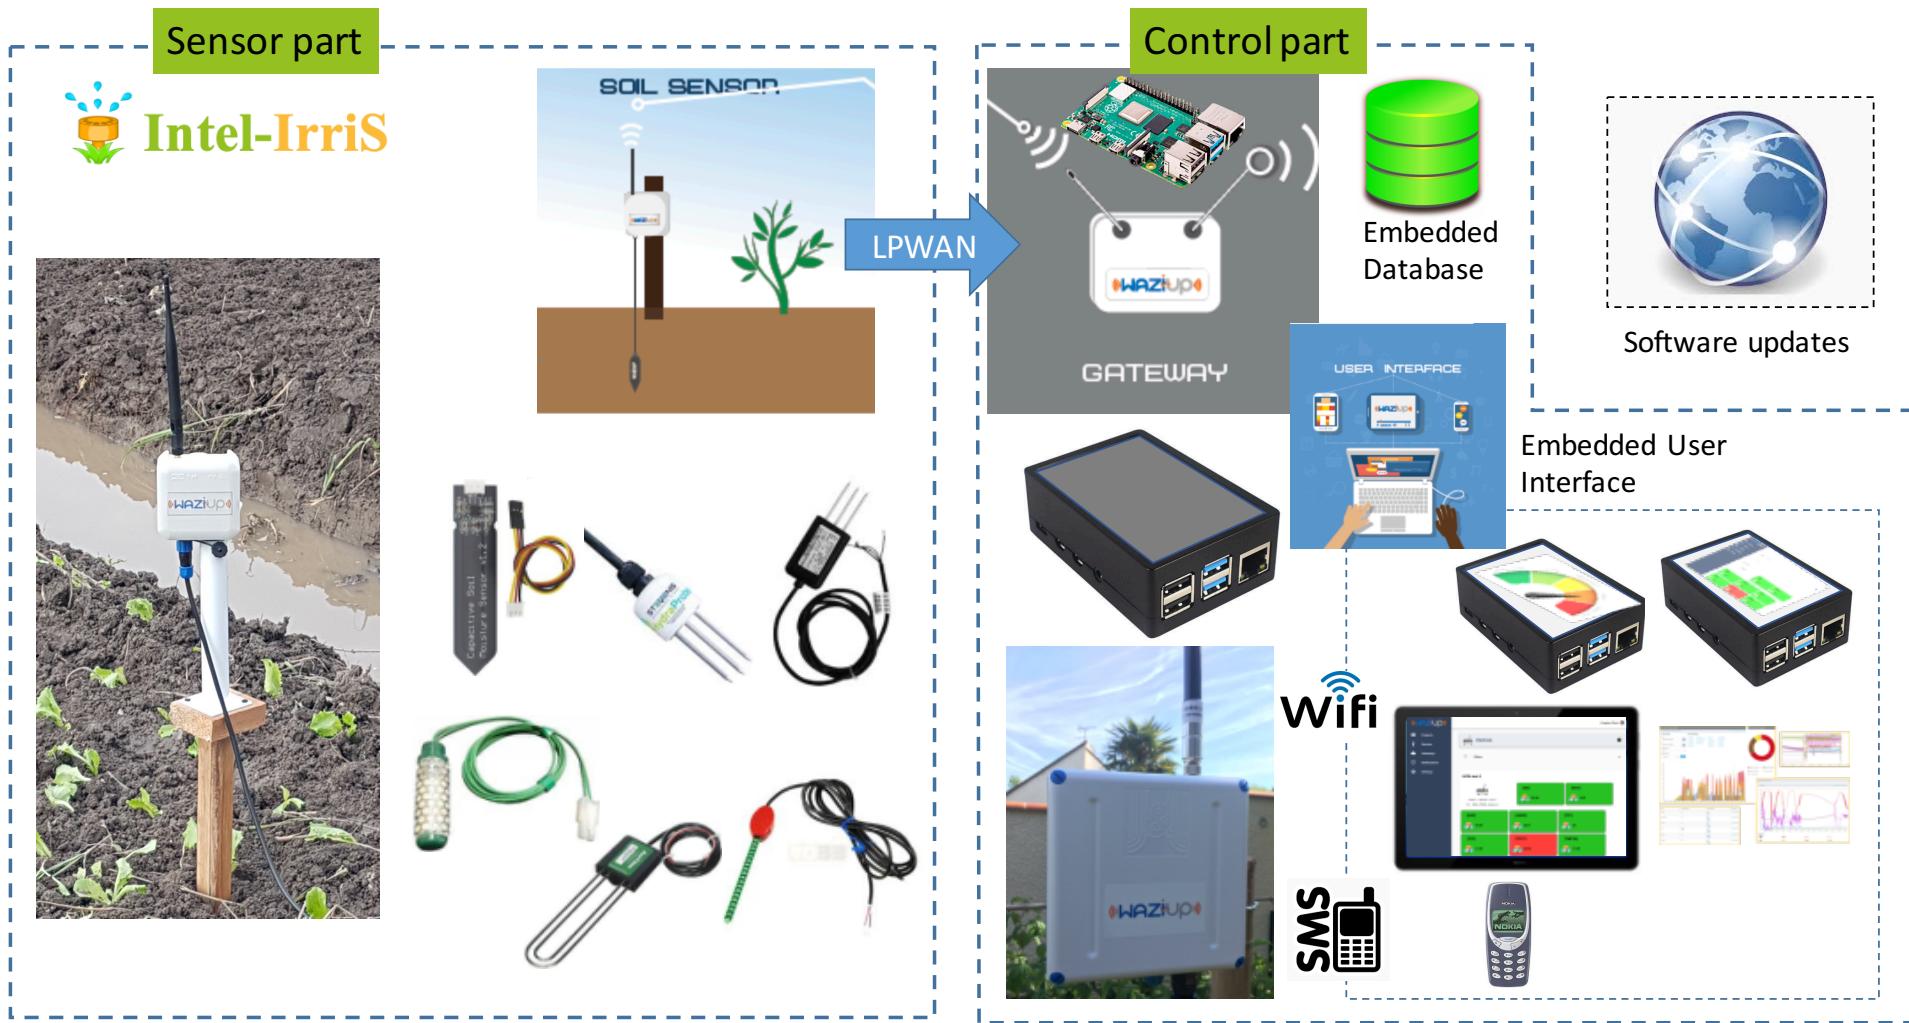

Review: Low-cost sensors



- Build on low-cost, low-power IoT expertise
- Increase accuracy of low-cost sensors by automatic and remotely controlled procedures for advanced calibration
- Enable deployment of several complementary low-cost sensors
- Include agricultural models / knowledge with corrective & predictive analytics

Review: Smart embedded control

- Build on low-cost embedded & open IoT gateway expertise
- Implement the “Intelligent Irrigation in-the-box” with "plug-&-sense" approach
- Model complex water-soil-plant interaction
- Embed Decision Support System (DSS) and disruptive Artificial Intelligence (AI)
- Integration of various knowledge streams
- Fully autonomous





Review: Starter-kits




- "Intelligent Irrigation in-the-box", "plug-&-sense"
- At least 100 starter-kit will be distributed




Soil sensor: electronic parts

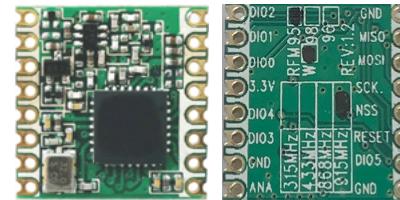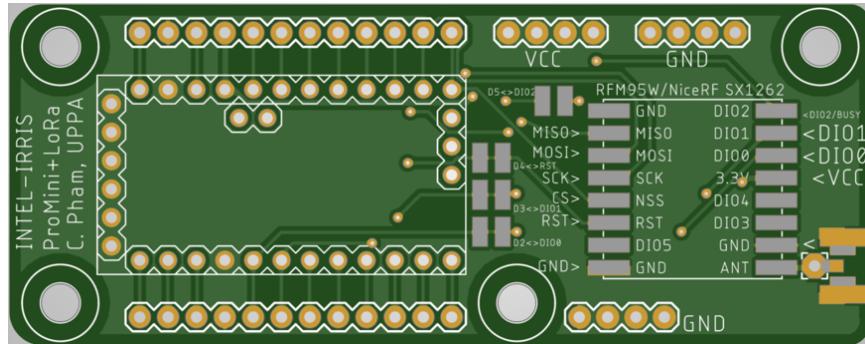

RFM95W (868MHz)
 RFM96W (433MHz)
 NiceRF SX1262 (868MHz)
 NiceRF SX1268 (433MHz)

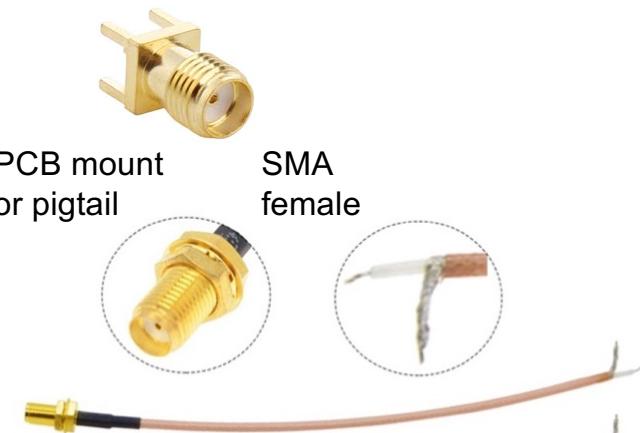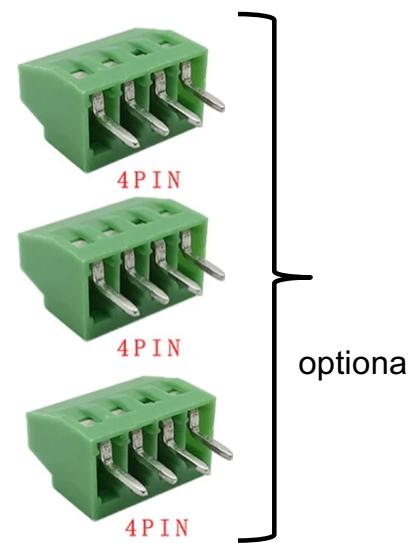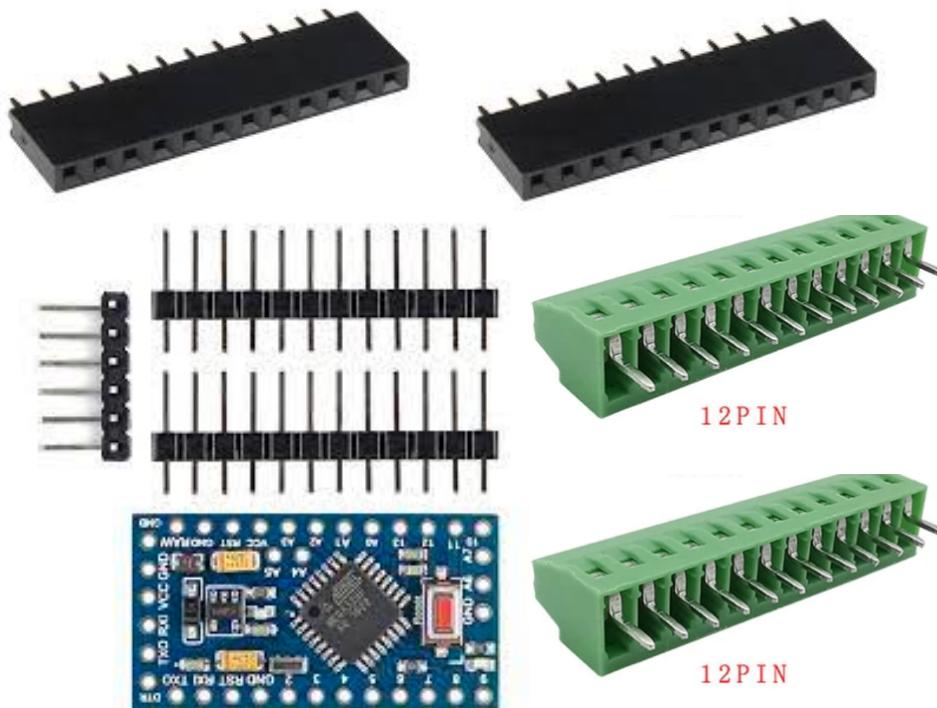


Soil sensor: casing parts & integration

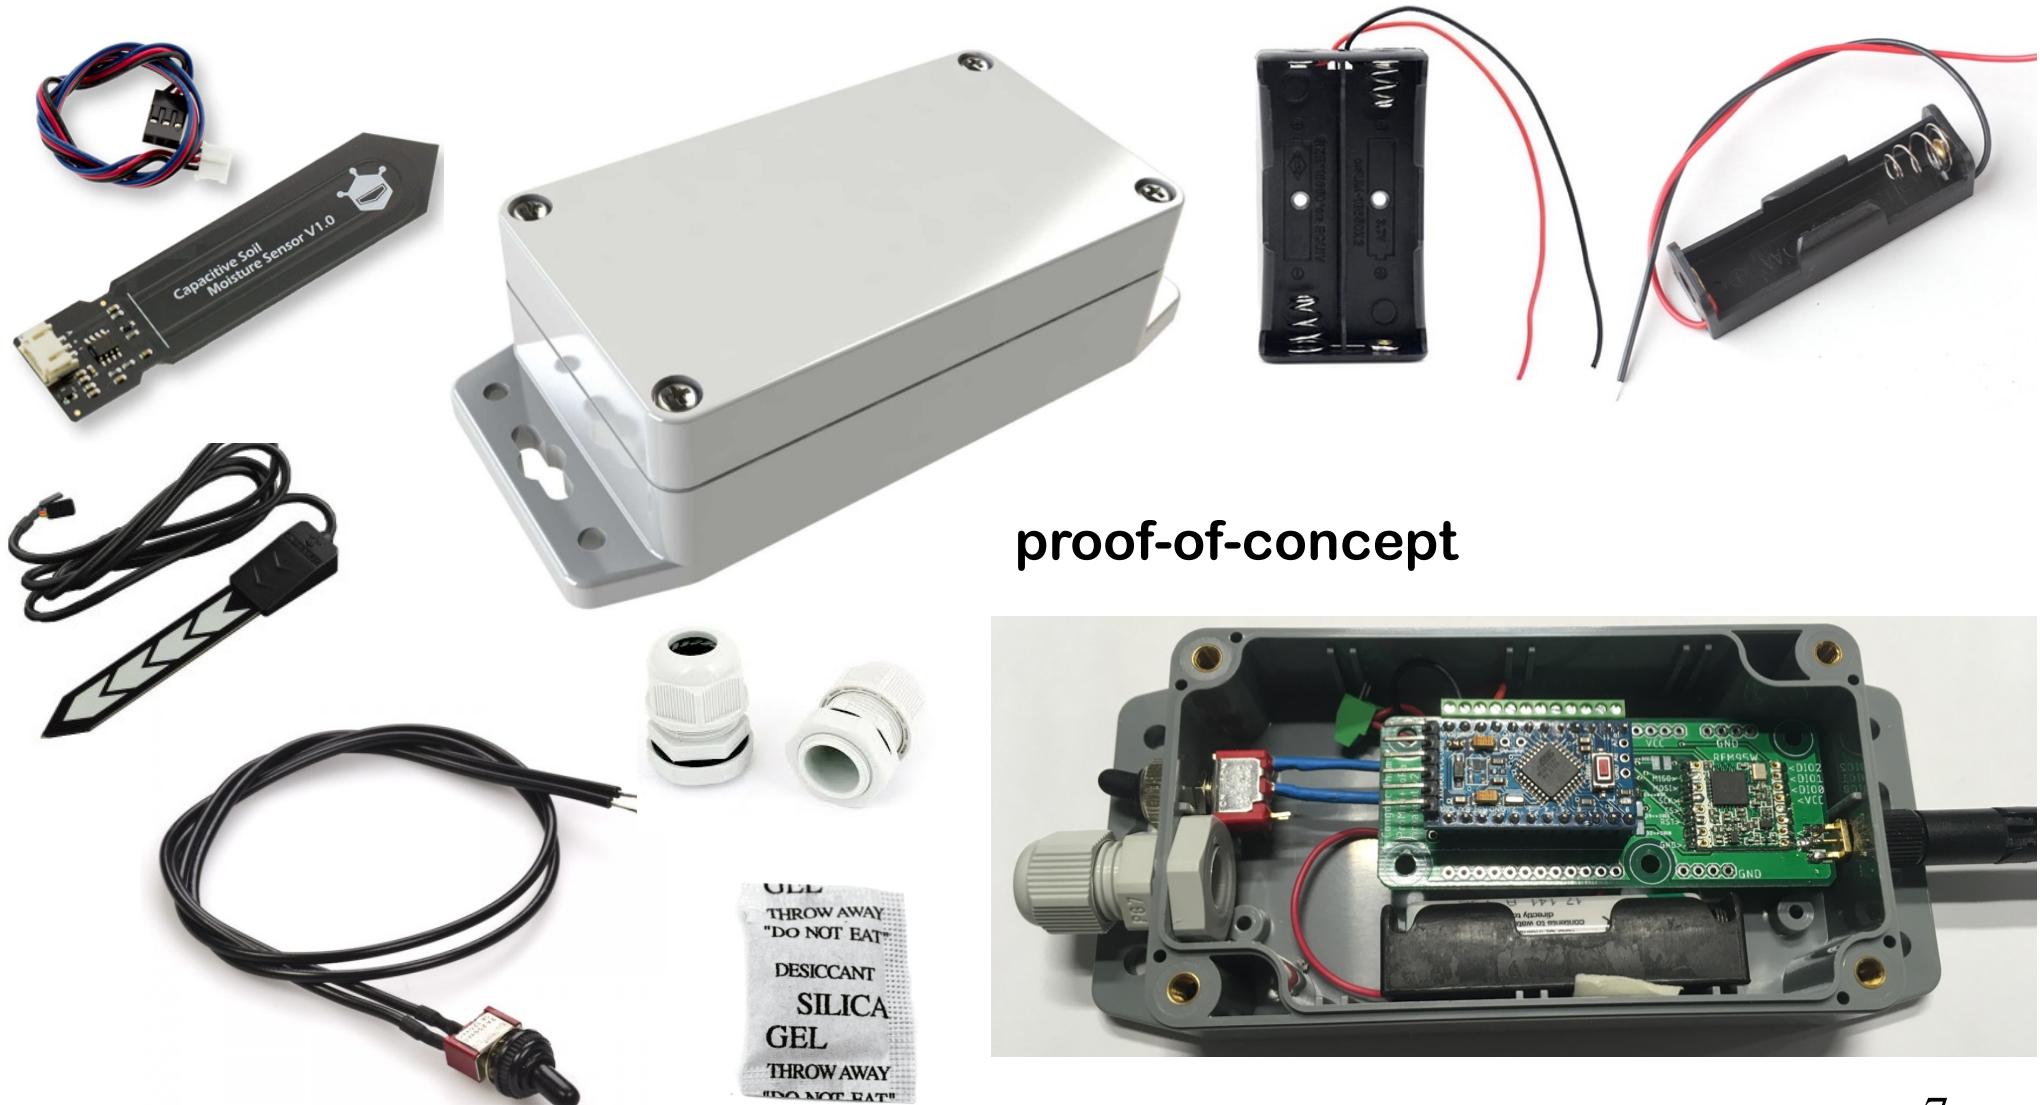

proof-of-concept

Assembling PCB board

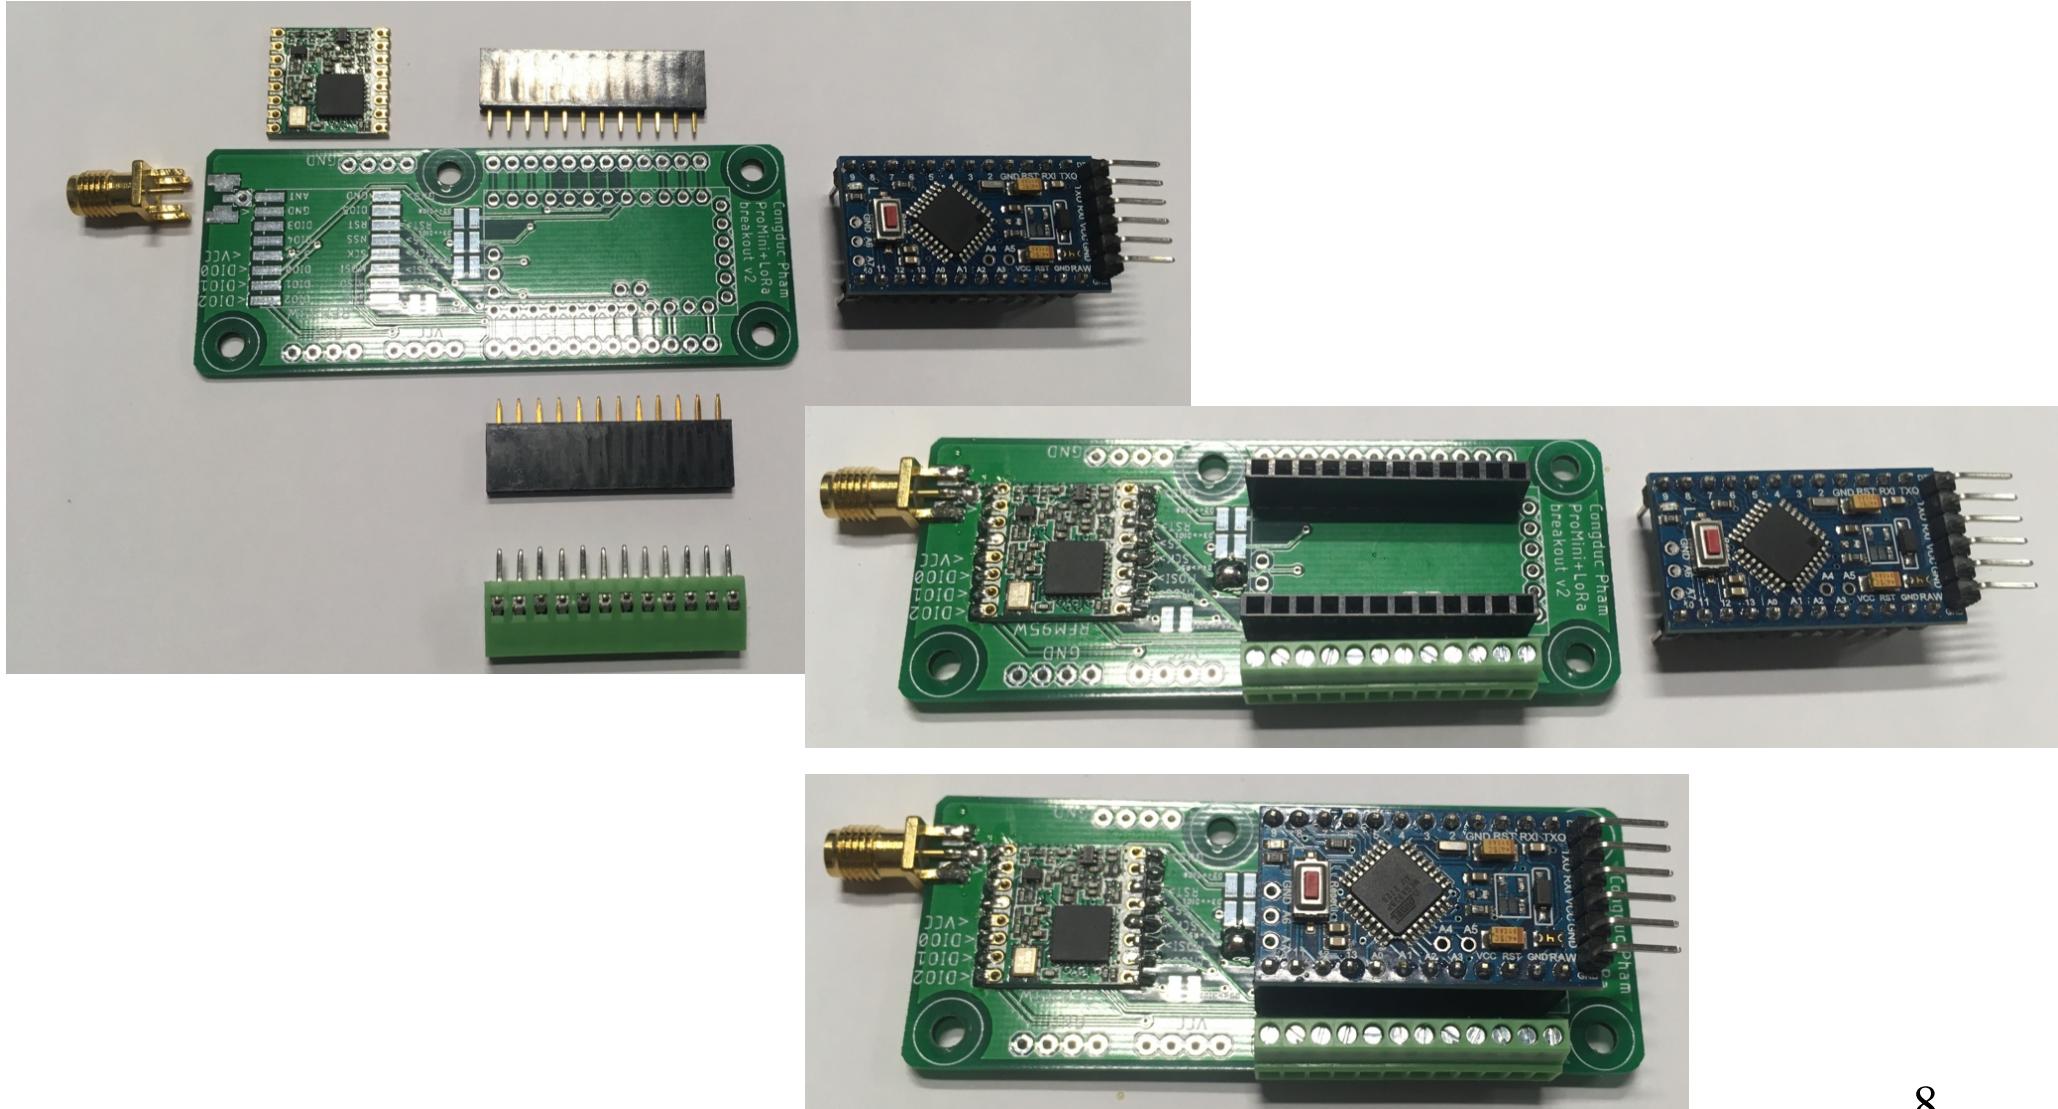



Get a case for outdoor usage



Here, it is an IP65 box which dimension is 115 x 65 x 40mm.

First, drill a 7mm hole for the SMA female connector.

Installing the PCB board

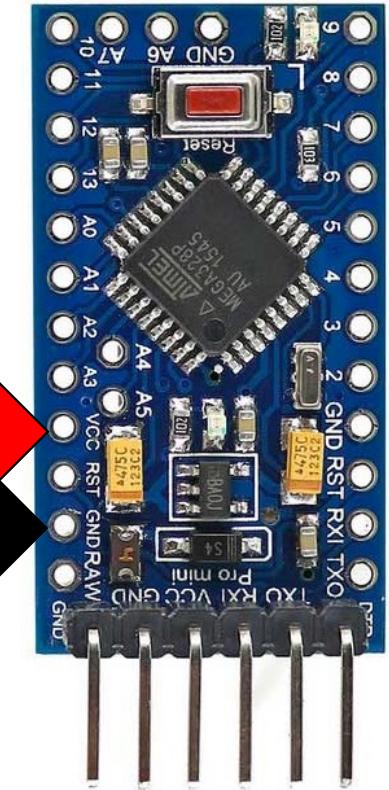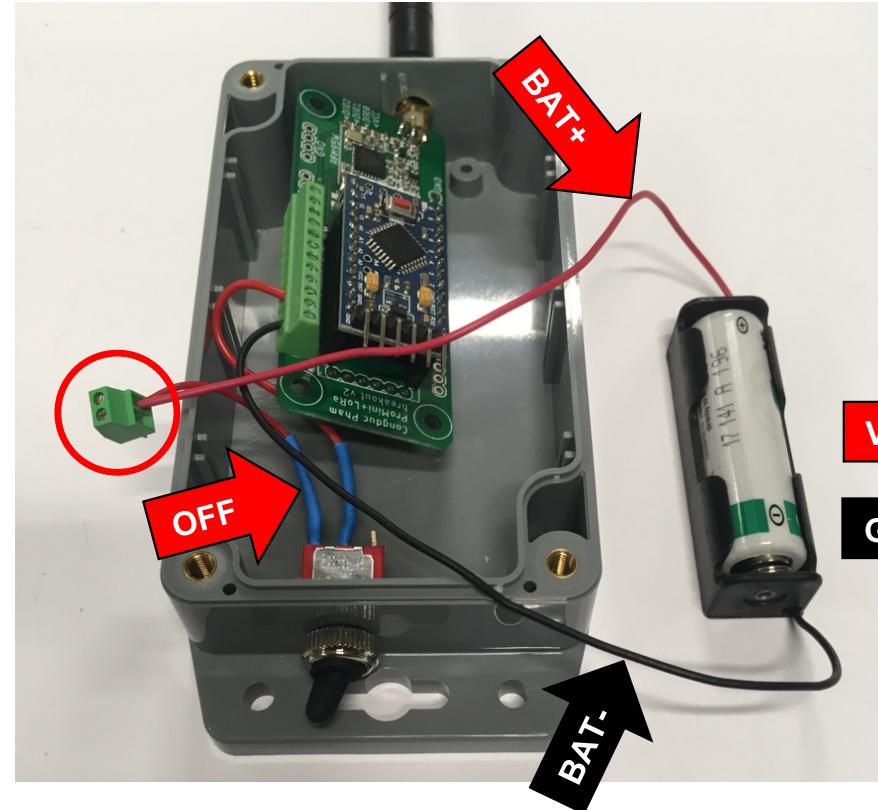

Connect together switch "off" pin (left) with BAT +
 Connect switch "on" pin (middle) to board's VCC
 Connect BAT – to board(s) GND
 Toggling the switch will then power the board


Putting it altogether



Here we use a 1xAA battery pack
Fix the battery pack with double-side tape
e.g. those used to fix mirrors on wall
Then we use a 3.6V Lithium battery




Installing your own cable gland

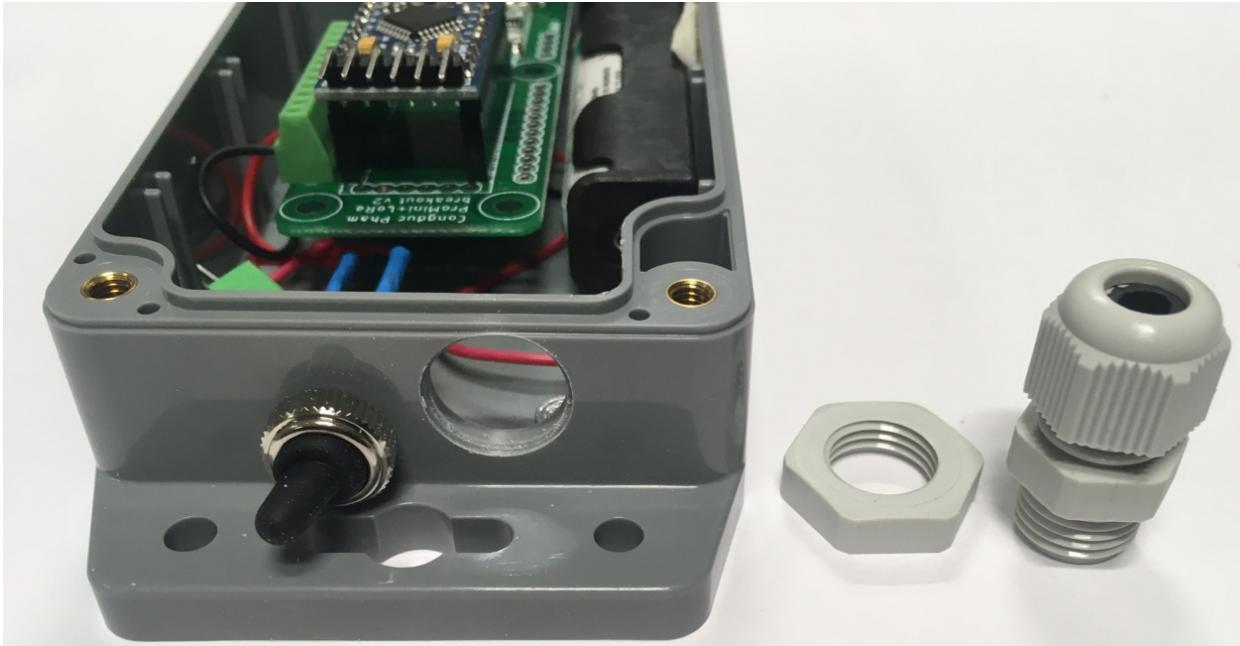

Drill a hole depending on the gland diameter

Here PG7, 12mm, so a hole of 13mm

Last step: connect the SEN0308

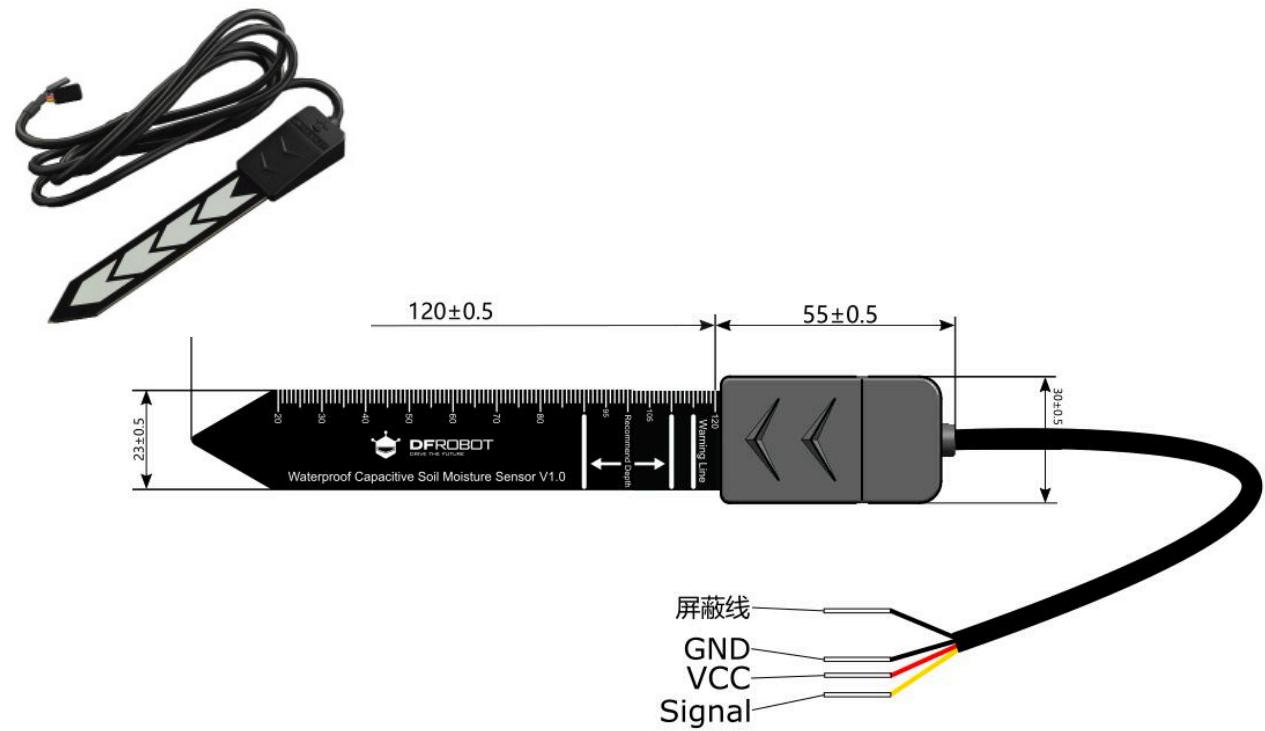


Insert sensor's wire through cable gland

Connect SEN0308 wires to board:

- VCC to board's A1
- GND to board's GND
- Signal to board's A0

Getting the software: Arduino IDE

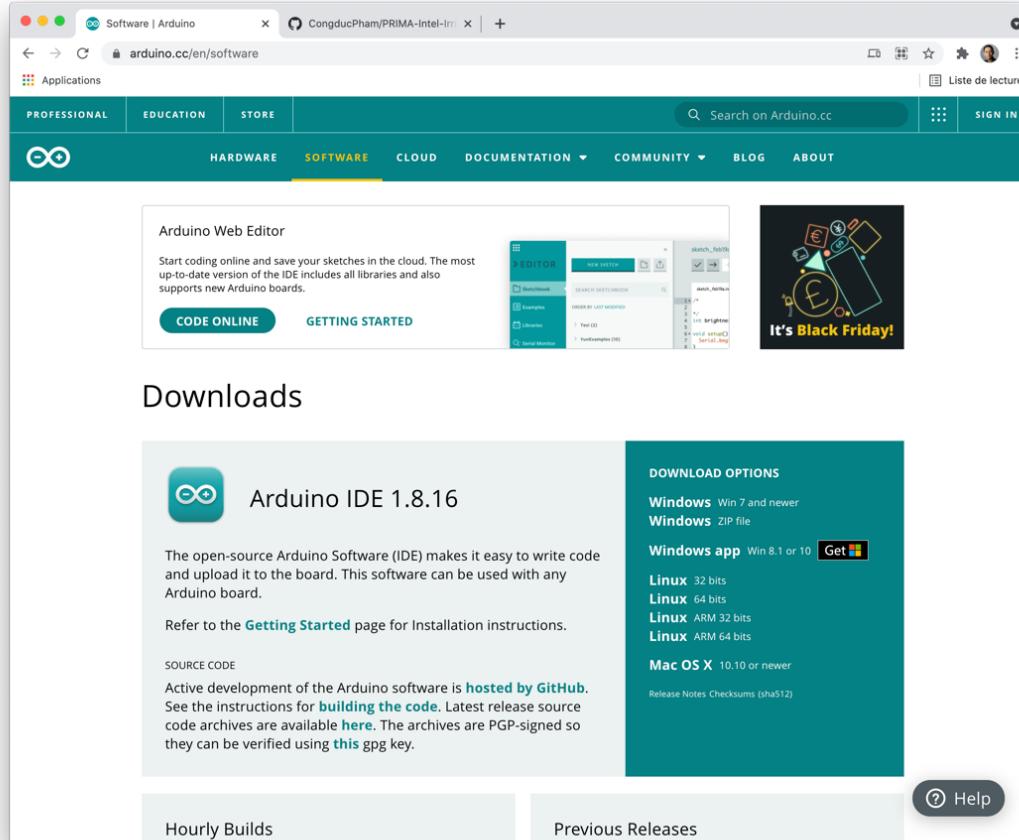

The screenshot shows the Arduino website's download section. It features a large image of the Arduino IDE interface with a 'Black Friday' promotional graphic. Below the image, there are two main download options: 'CODE ONLINE' and 'GETTING STARTED'. The 'GETTING STARTED' option leads to the installation instructions. On the right, there is a 'DOWNLOAD OPTIONS' section with links for Windows (Win 7 and newer, ZIP file), Windows app (Get), Linux (32-bit and 64-bit), Linux ARM (32-bit and 64-bit), and Mac OS X (10.10 or newer). There are also links for 'Release Notes' and 'Checksums'. At the bottom, there are links for 'Hourly Builds' and 'Previous Releases'.



The screenshot shows the Arduino IDE interface with an open project titled 'IntelIrris_Soil_Sensor'. The code editor displays the following header comments:

```


1 //*
2 * INTEL_IRRIS soil humidity sensor platform
3 * extended version with AES and custom CarrierSense features
4 *
5 * Copyright (C) 2016-2021 Congduc Pham, University of Pau, France
6 *
7 * This program is free software: you can redistribute it and/or modify
8 * it under the terms of the GNU General Public License as published by
9 * the Free Software Foundation, either version 3 of the License, or
10 * (at your option) any later version.
11 *
12 * This program is distributed in the hope that it will be useful,
13 * but WITHOUT ANY WARRANTY; without even
14 * MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE.
15 * GNU General Public License for more details.
16 *
17 * You should have received a copy of the
18 * along with the program. If not, see
19 */
20 ****
21 * last update: November 17th, 2021 by C
22 *
23 * NEW: LoRa communication library moved from
24 * https://github.com/StuartsProjects/SX128X
25 * to support SX126X, SX127X and SX128X
26 *
27 */
28
29 #include <SPI.h>
30 //this is the standard behaviour of library, use SPI Transaction switching
31 #define USE_SPI_TRANSACTION
32 //indicate in this file the radio module: SX126X, SX127X or SX128X
33 #include "RadioSettings.h"
34

```

The interface includes the Arduino 1.6.6 logo and the Teensyduino 1.2.7 logo. The status bar at the bottom indicates: 'Arduino Pro or Pro Mini, ATmega328P (3.3V, 8 MHz) on /dev/cu.usbserial-AK05C87P'.

Install latest version of Arduino IDE from
<https://www.arduino.cc/en/software>

Getting the software: Intel-IrriS code

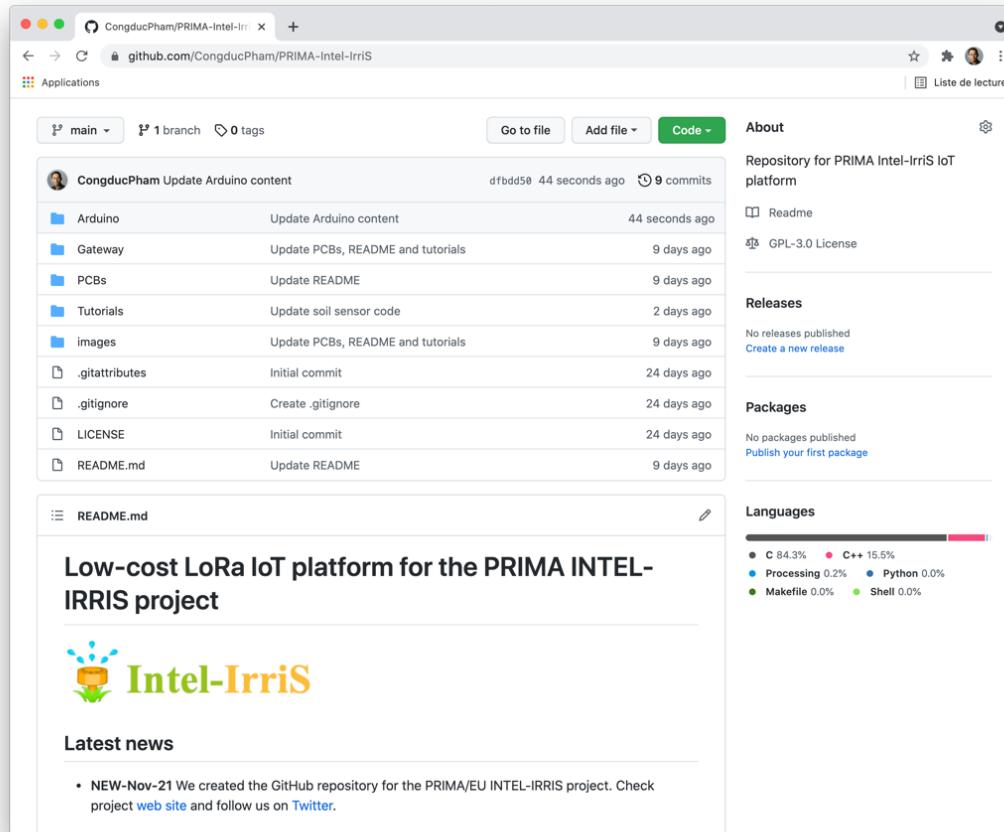


On your computer, create a sketch folder

Then download the whole repository as ZIP file

Unzip the file and copy the whole Arduino folder into your sketch folder


The entire Intel-IrriS GitHub repository is hosted here
<https://github.com/CongducPham/PRIMA-Intel-IrriS>

Setting your Arduino IDE

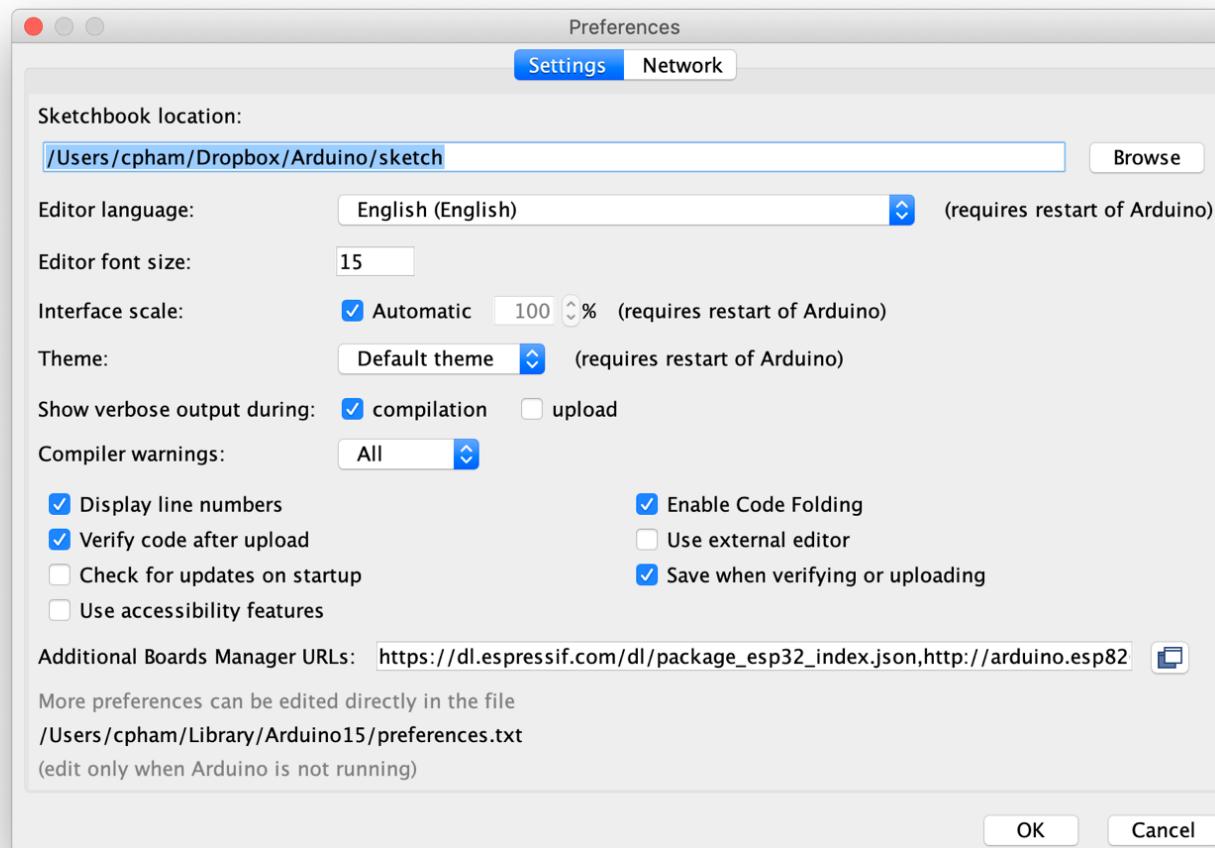

Run Arduino IDE, open Preferences
 Indicate your sketch folder in Sketchbook location

Compiling the soil sensor code

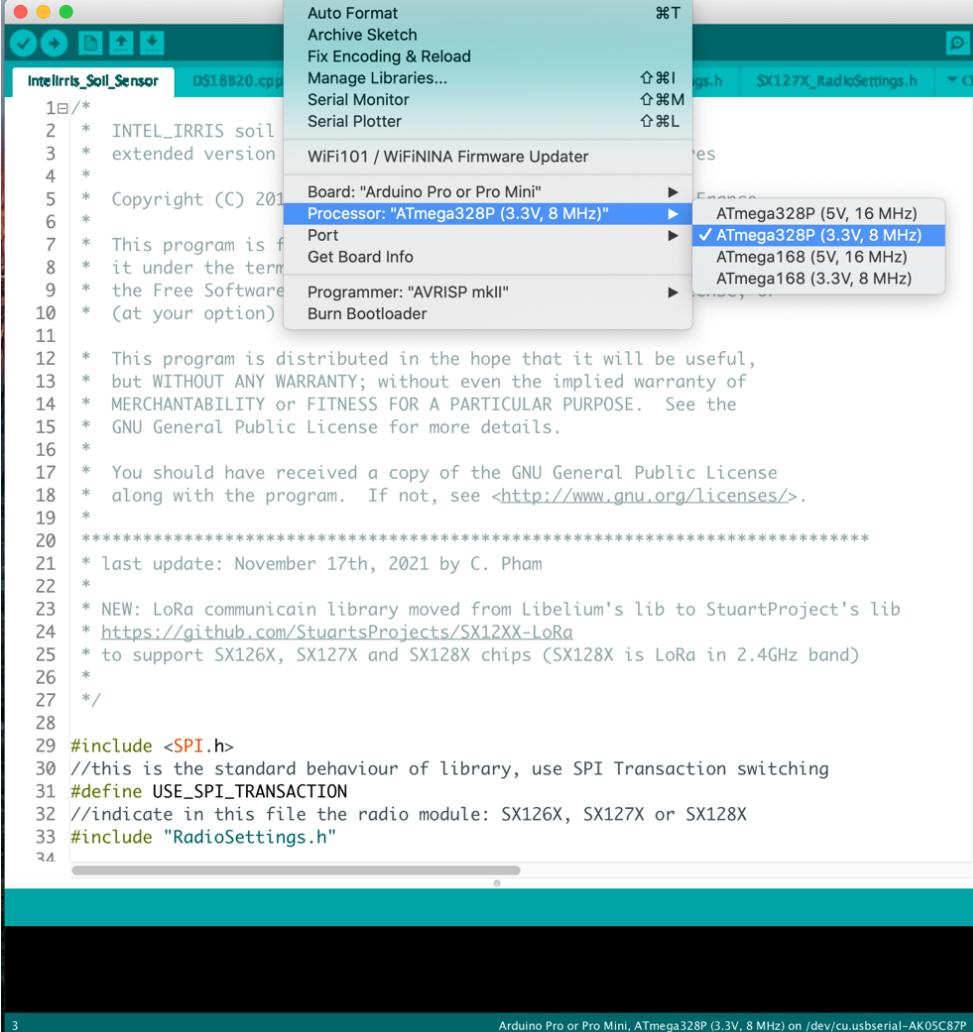

```

1/* INTEL_IRRIS soil
2 * extended version
3 *
4 * Copyright (C) 201
5 * This program is f
6 * it under the term
7 * the Free Software
8 * (at your option)
9 *
10 * This program is distributed in the hope that it will be useful,
11 * but WITHOUT ANY WARRANTY; without even the implied warranty of
12 * MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the
13 * GNU General Public License for more details.
14 *
15 * You should have received a copy of the GNU General Public License
16 * along with the program. If not, see <http://www.gnu.org/licenses/>.
17 *
18 ****
19 * last update: November 17th, 2021 by C. Pham
20 *
21 * NEW: LoRa communicain library moved from Libelium's lib to StuartProject's lib
22 * https://github.com/StuartsProjects/SX1XX-LoRa
23 * to support SX126X, SX127X and SX128X chips (SX128X is LoRa in 2.4GHz band)
24 *
25 */
26 */
27 */
28 */
29
#include <SPI.h>
30 //this is the standard behaviour of library, use SPI Transaction switching
31 #define USE_SPI_TRANSACTION
32 //indicate in this file the radio module: SX126X, SX127X or SX128X
33 #include "RadioSettings.h"
34


```

Arduino Pro or Pro Mini, ATmega328P (3.3V, 8 MHz) on /dev/cu.usbserial-AK05C87P


Open the Intelirris_Soil_Sensor sketch

**Select the ProMini board,
3.3V and 8MHz version**


**Then click on the "verify"
button**

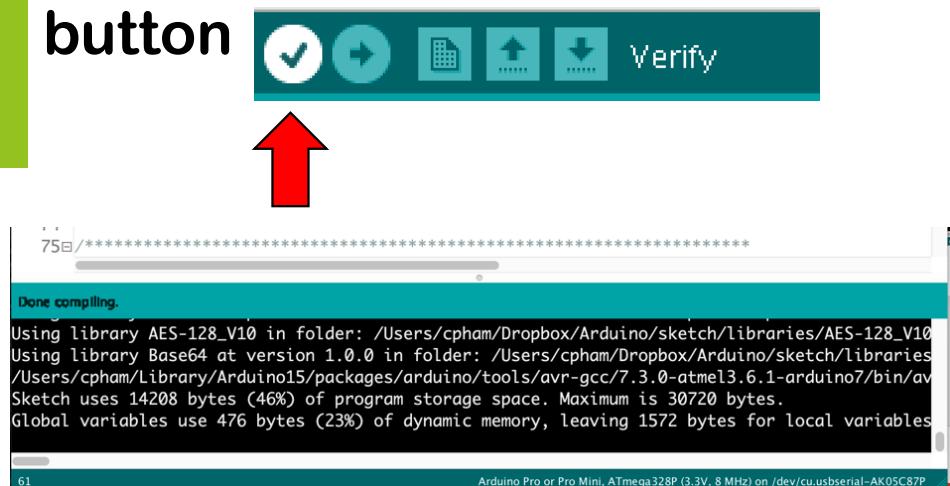

Connecting with an FTDI cable

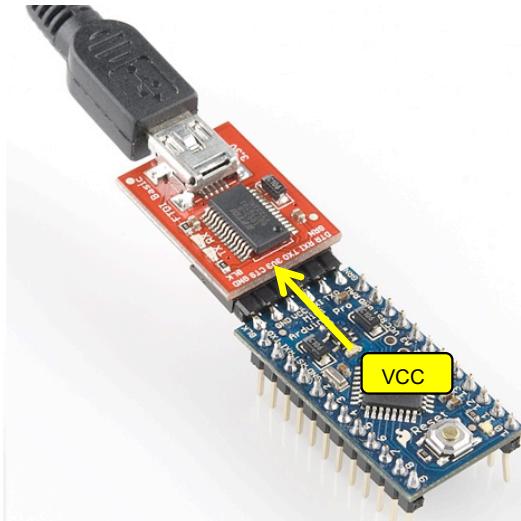


Some clone version, check the VCC pin

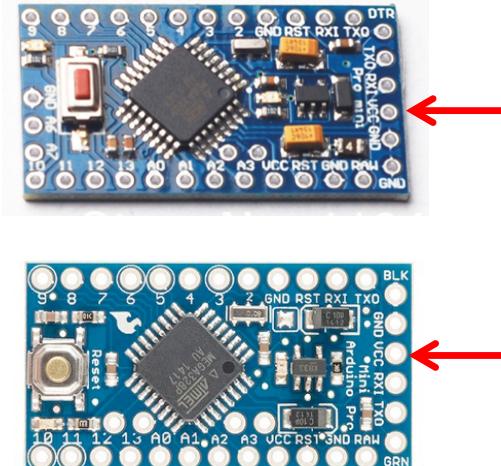

For the ProMini, you need to have an FTDI breakout cable working at 3.3v

Check the VCC pin position and make it to correspond to the VCC pin of the FTDI breakout.

Select serial port for uploading

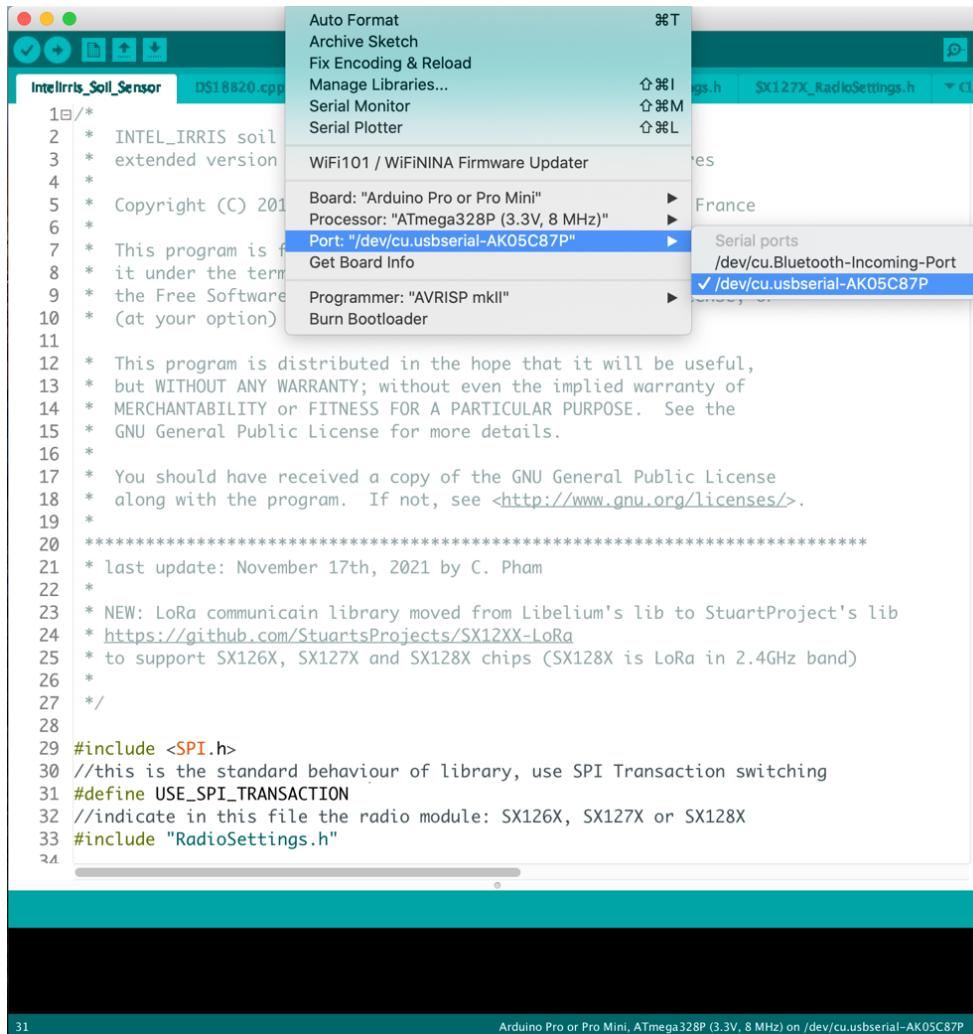

After connecting the cable to your computer/laptop USB port, try to find the serial port

If you don't find it, you may need to install specific drivers

<https://learn.sparkfun.com/tutorials/how-to-install-ch340-drivers/all>

The screenshot shows the Arduino IDE interface with the following details:

- Title Bar:** Intelirris_Soil_Sensor | Arduino 1.8.10
- File List:** DS18B20.cpp, DS18B20.h, RadioSettings.h, SX126X_RadioSettings.h, SX127X_RadioSettings.h
- Code Editor:** The main window displays the source code for DS18B20.cpp. The code includes copyright notices, a GNU General Public License notice, and a note about the LoRa library being moved. It also includes #include <SPI.h>, USE_SPI_TRANSACTION, and RadioSettings.h.
- Status Bar:** Done uploading.
Sketch uses 14208 bytes (46%) of program storage space. Maximum is 30720 bytes.
Global variables use 476 bytes (23%) of dynamic memory, leaving 1572 bytes for local variables


Click on the "upload" button



And wait until upload is completed

```
27 */
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217
218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254
255
256
257
258
259
260
```

Checking that device is operational

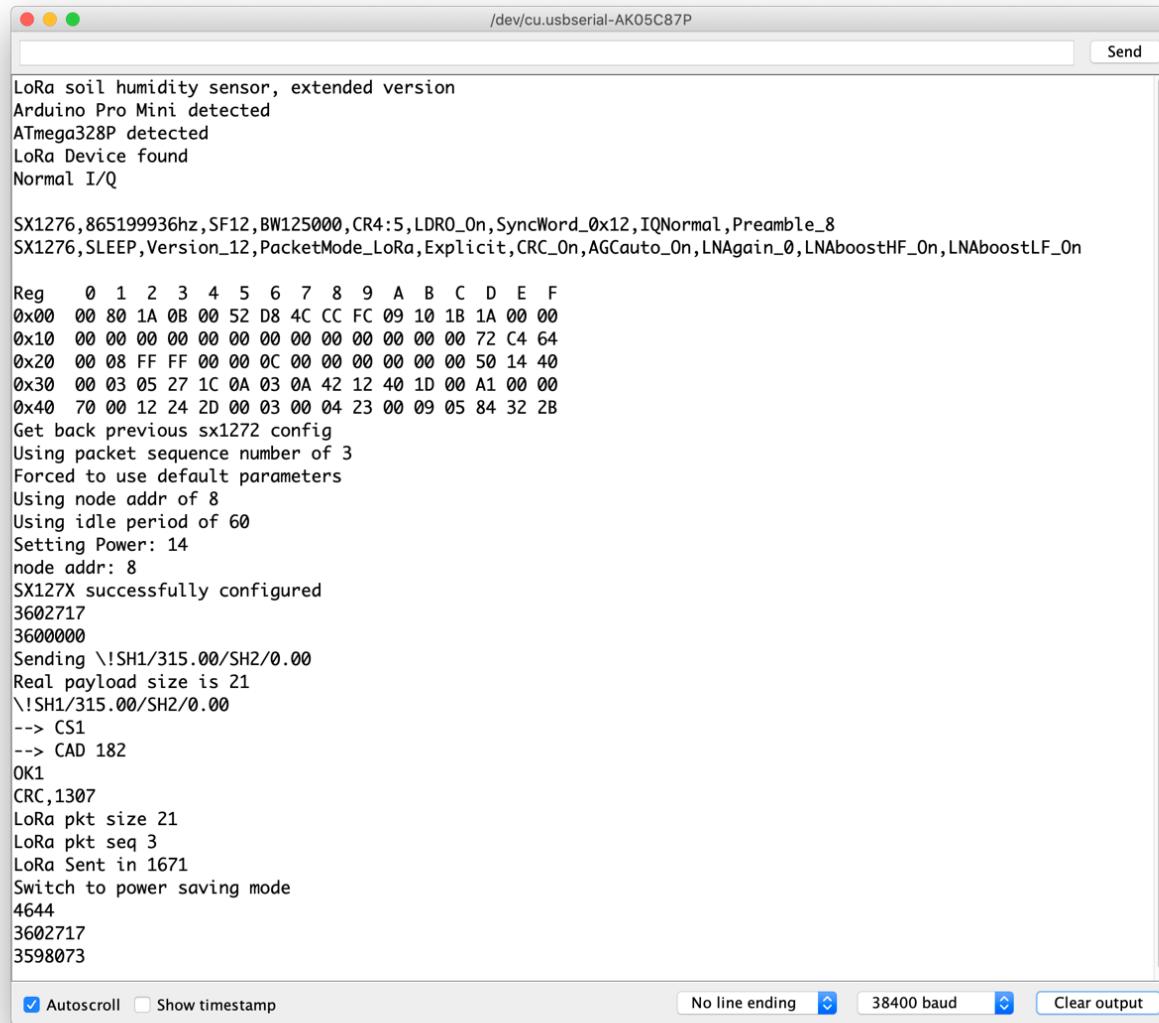

The screenshot shows a terminal window titled '/dev/cu.usbserial-AK05C87P' displaying the output of a LoRa soil humidity sensor. The output includes:

- Device detection: LoRa soil humidity sensor, extended version; Arduino Pro Mini detected; ATmega328P detected; LoRa Device found; Normal I/Q.
- Radio parameters: SX1276, 865199936hz, SF12, BW125000, CR4:5, LDR0_On, SyncWord_0x12, IQNormal, Preamble_8.
- Registers (hex dump): Reg 0 1 2 3 4 5 6 7 8 9 A B C D E F, followed by values for each register.
- Configuration steps: Get back previous sx1272 config, Using packet sequence number of 3, Forced to use default parameters, Using node addr of 8, Using idle period of 60, Setting Power: 14, node addr: 8, SX127X successfully configured.
- Transmission details: 3602717, 3600000, Sending \!SH1/315.00/SH2/0.00, Real payload size is 21, \!SH1/315.00/SH2/0.00, --> CS1, --> CAD 182, OK1, CRC,1307.
- LoRa details: LoRa pkt size 21, LoRa pkt seq 3, LoRa Sent in 1671, Switch to power saving mode, 4644, 3602717, 3598073.

At the bottom of the window, there are checkboxes for 'Autoscroll' and 'Show timestamp', and dropdown menus for 'No line ending' and '38400 baud' along with a 'Clear output' button.



Open serial monitor

Set baud rate to 38400


See output from board

Check that transmission is OK

Generic & cyclic behavior

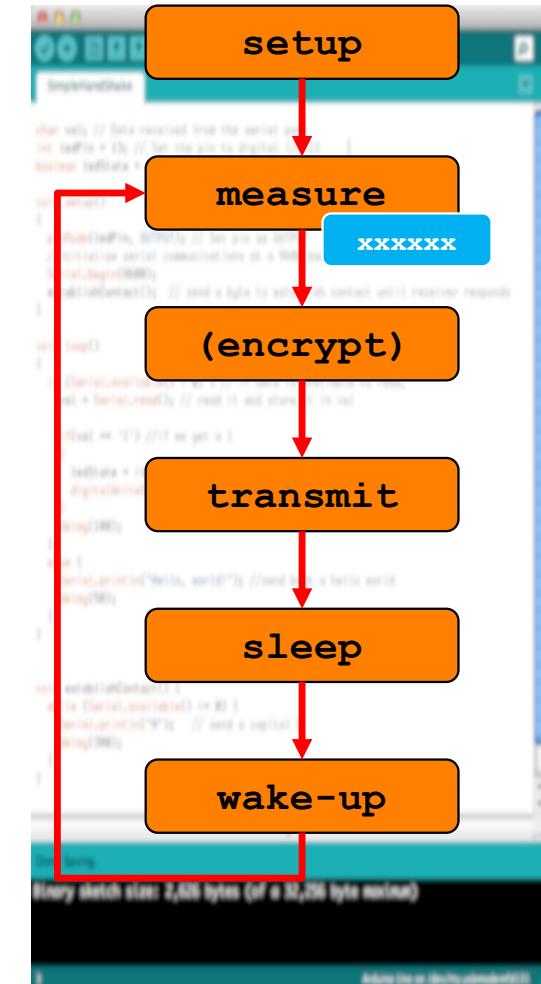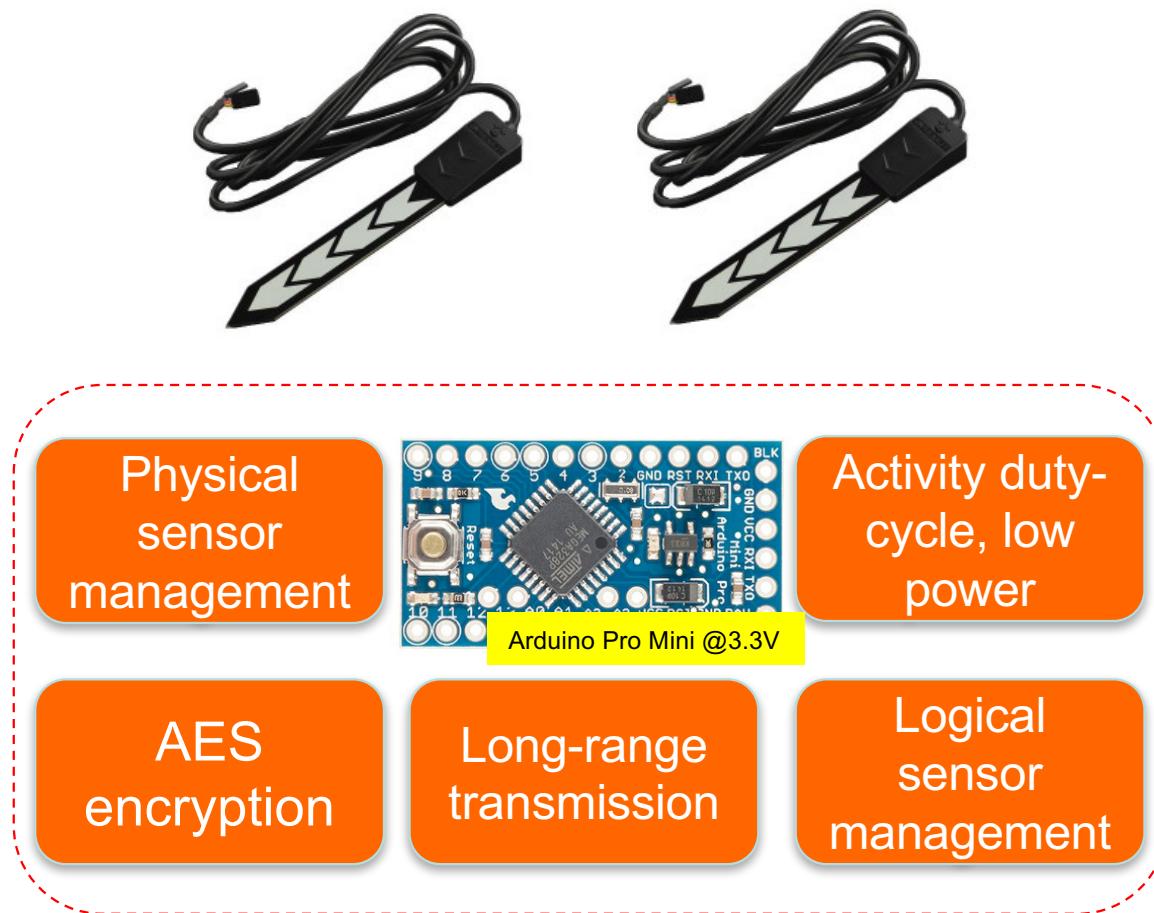

Reducing power consumption

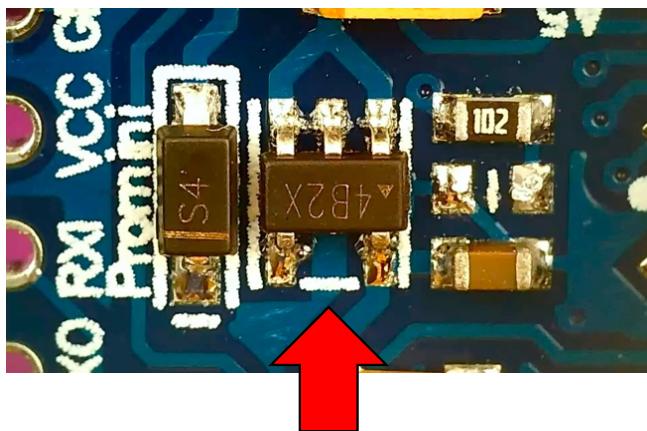


Remove the power LED by just clipping it off with some wire cutters

Remove the voltage regulator with a small plier

Only inject up to 3.6V through the VCC pin

5uA in deep sleep mode

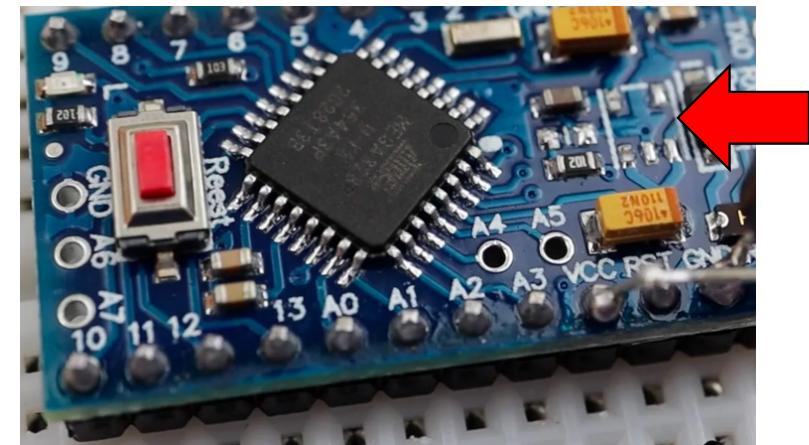

Using WaziSense board

- WaziSense uses Super Capacitor and small solar panel
- No need for batteries anymore!

