

TrustFLEX Step by Step Guide Google Cloud Platform Connect

Table of Contents

1 Introduction	3
1.1 Getting started with Jupyter Notebook Tutorials	3
1.1.1 Starting Jupyter Notebook	3
1.2 Jupyter Notebook Basics	4
1.2.1 The Notebook dashboard	4
1.3 Introduction to Jupyter Notebook GUI	4
2 Jupyter Notebook Tutorials	6
3 Generate Manifest files	
3.1 TrustFLEX – Manifest file generation	7
4 Use Case Prototyping	16
4.1 Running GCP example on Jupyter Notebook	
4.2 Running GCP example on Embedded platform	20
4.2.1 MPLAB:	20
4.3 Crypto Auth Trust Platform Factory reset	24
5 FAO	25

1 Introduction

This document gives a detailed walk through of connecting securely to Google Could Platform. If familiar with Jupyter Notebook, can skip this section and move to Section 2.

1.1 Getting started with Jupyter Notebook Tutorials

Jupyter Notebook is open source web application which allows you to create documents that contain code that you can execute in place as well as narrative text. It provides GUI elements, ability to execute code in place, ability to add images and gives it the look and feel that normal code files lack.


Jupyter notebooks are mainly used to explain/evaluate code in an interactive way.

1.1.1 Starting Jupyter Notebook

Jupyter notebook can be launched from Trust Platform GUI Main window. Run START -> Trust Platform x.x.x icon. Click on 'Start Jupyter' button to launch Jupyter local server.



Clicking on Start Jupyter should be web browser tab like below,

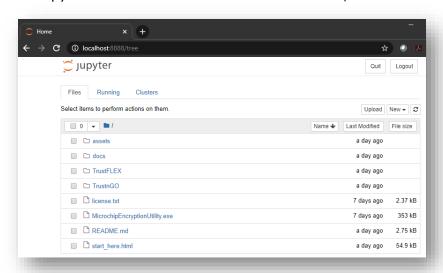

1.2 Jupyter Notebook Basics

It is recommended to become familiar with Jupyter basic concepts with the online documentation, https://jupyter-


notebook.readthedocs.io/en/stable/examples/Notebook/Notebook%20Basics.html

Some of the content is duplicated here for convenience. The online documentation should always be used as a reference.

1.2.1 The Notebook dashboard

When you first start the notebook server, your browser will open Notebook dashboard. The dashboard serves as a home page for the notebook. Its main purpose is to display the notebooks and files in the current directory.

For example, here is a screenshot of the Jupyter dashboard. The top of the notebook list displays clickable breadcrumbs of the current directory. By clicking on these breadcrumbs or sub-directories in the notebook list, you can navigate your file system.

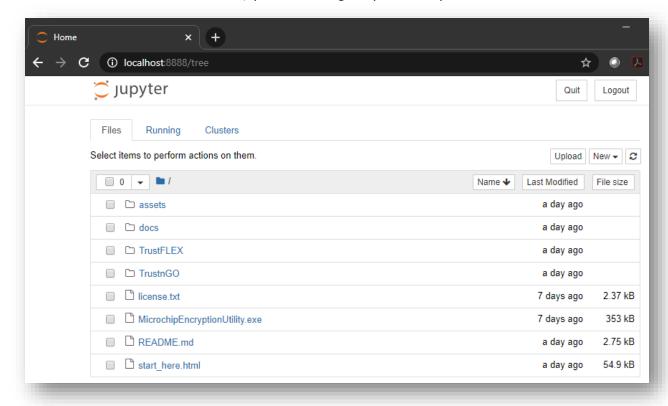

1.3 Introduction to Jupyter Notebook GUI.


Jupyter Notebooks contain cells where you can either write code or markdown text. Notebooks contain multiple cells, some set as code and others markdown. Code cells contain code that can be executed live, and markdown contains text and images that explains the code.

Below image shows some options in a typical Jupyter Notebook. Individual cells can be executed by pressing on the RUN button as shown in the below image.

All cells in the Notebook can be executed in order by **Kernel->Restart & Run All**.



To run all cells in sequence.

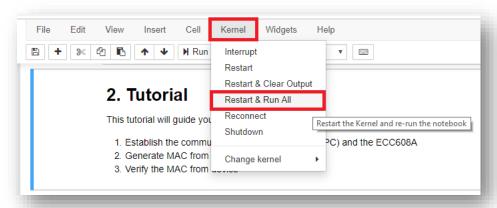

2 Jupyter Notebook Tutorials

The Trust Platform Design Suite comes with several Notebook Tutorials to easily prototype popular use cases for TrustFLEX and Trust&Go devices. Here is the list of Jupyter Notebook Tutorials.

Jupyter Notebook Tutorials	Relative Path	Applicable Devices				
Manifest Generation						
GCP Connect	P Connect TrustnGO\05_cloud_connect\notebook\gcp\TNGTLS_GCP_connect.ipynb					
AWS Connect	TrustnGO\05_cloud_connect\notebook\aws\TNGTLS_aws_connect.ipynb	Trust&GO				
Azure Connect	TrustnGO\05_cloud_connect\notebook\azure\ TNGTLS_azure_connect.ipynb	Trust&GO				
Resource Generation	TrustFLEX\00_resource_generation\TFLXTLS_resource_generator.ipynb	TrustFLEX				
Accessory Authentication	TrustFLEX\01_accessory_authentication\notebook\ TFLXTLS_accessory_authentication.ipynb	TrustFLEX				
Firmware Validation	TrustFLEX\02_firmware_validation\notebook\ TFLXTLS_firmware_validation.ipynb	TrustFLEX				
IP Protection	TrustFLEX\04_ip_protection\notebook\ TFLXTLS_IP_protection.ipynb	TrustFLEX				
Secure Public Key Rotation	TrustFLEX\05_public_key_rotation\notebook\ TFLXTLS_public_key_rotation.ipynb	TrustFLEX				
Asymmetric authentication	08_asymmetric_authentication\notebook\ TFLXTLS_asymmetric_authentication.ipynb	TrustFLEX				
GCP Connect	TrustFLEX\10_cloud_connect\notebook\gcp\TFLXTLS_GCP_connect.ipynb	TrustFLEX				
AWS Custom PKI	TrustFLEX\10_cloud_connect\notebook\aws\ TFLXTLS_aws_connect.ipynb	TrustFLEX				
Azure Connect	TrustFLEX\10_cloud_connect\notebook\azure\ TLFXTLS_azure_connect.ipynb	TrustFLEX				

3 Generate Manifest files

In the real scenarios, the Manifest files for Trust&GO and TrustFLEX should be downloaded from microchipDirect. Once devices have shipped, you will be able to download the Manifest file from your Microchip Purchasing & Client Services Account. The file can then be uploaded into your cloud service account.

Kits, demonstration boards do not ship with a Manifest file.

The following sections provide steps to generate manifest files for Trust&GO and TrustFLEX devices during prototyping the Usecases.

Note: Before executing the cells on Crypto Trust Platform, its required to have factory default program running on SAMD21 of Trust Platform. Refer to <u>4.3 CryptoAuth</u> <u>TrustPlatform Factory reset</u> section for reloading default program.


3.1 TrustFLEX – Manifest file generation

TFLXTLS device is one of the three devices available in the Crypto Auth Trust Platform Board.

TrustFLEX devices come pre-programmed with certificates in slots 10, 11 and 12, also slots 0-4 have pre-generated private keys, other than the mentioned slots all the other slots have no meaningful data in them.


The Resource Generator Notebook will create development keys and certificates for all slots that can be further customized. Keys and Certificate chains are stored in the PC filesystem. These keys should never be used for production purposes as their generation is not handled in a secure environment. These development keys will be later used by the other notebooks to implement the various pre-defined use cases.

Within the Jupyter Dashboard, navigate **TrustFLEX\00_resource_generation** folder to open **TFLXTLS_resource_generator.ipynb** notebook

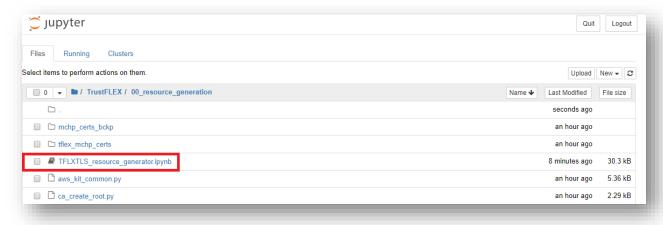


Run all cells of the Crypto Resource Generator Notebook: Kernel->Restart & Run All

Note: Before executing the cells on Crypto Trust Platform, its required to have factory default program running on SAMD21 of Trust Platform. Refer to <u>4.3 CryptoAuth</u> <u>TrustPlatform Factory reset</u> section for reloading default program.

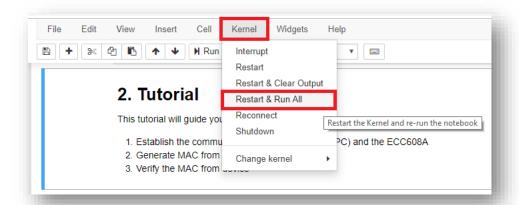

Crypto Resource Generator notebook is common for all the use case which comes with option to load the signer certificate and device certificate. The Notebook will generate several keys and certificates. Make sure you have an error free output before continuing to the next steps of the training. Following are 3 different things can be performed,

1. Generating resources to general key slots

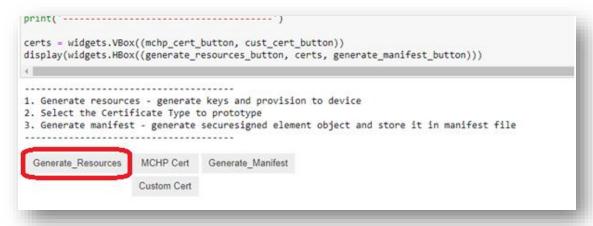

The output log should resemble this:

Slot 0 is a private key slot, no action required

Slot 1 is a private key slot, no action required

Slot 2 is a private key slot, no action required

Slot 3 is a private key slot, no action required

Slot 4 is a private key slot, no action required

Slot 6 is a secret key, created slot_6_secret_key.pem and programmed

NOTE: While writing symmetric key into secure element it has to be encrypted with IO prote ction key. So here, Slot 6 (IO protection key) is written before slot 5 (Symmetric key)

Slot 5 is a secret key, created slot_5_secret_key.pem and programmed

Slot 7 is a secureboot digest slot, slot can only be written through secureboot command

Slot 8 is a general purpose slot of size 416 bytes, no action required

Slot 9 is a secret key, created slot_9_secret_key.pem and programmed

Slot 10 is a certificate slot, no action required now, will be updated as part of Generate Certificates

Slot 11 is a certificate slot, no action required now, will be updated as part of Generate Certificates

Slot 12 is a certificate slot, no action required now, will be updated as part of Generate Certificates

Slot 13 is a public key slot, created slot_13_ecc_key_pair.pem and programmed

Slot 14 is a public key slot, created slot_14_ecc_key_pair.pem and programmed

Slot 15 is a public key slot, created slot_15_ecc_key_pair.pem and programmed

					-			-				-					-			-	 	-	-	 	-	-	-	 	 ٠.
K	e	У	g	e	n	e	ra	at	i	0	n	-	. :	S	u	C	ce	25	S	;									
			-		-							_		-			_			_	 	-	_	 		_	_	 	

2. Generating MCHP or Custom Certificates

On selecting Custom certificates, it prompts to enter the organization name, enter the name that will be used as an Organization Name in the certificate template. The name length is limited to 24 characters.

2. Select the Certif	es - generate keys and provision to device ficate Type to prototype t - generate securesigned element object and store it in manifest file 							
Generate_Resources	MCHP Cert Generate_Manifest							
	Custom Cert							
Slot 1 is a private Slot 2 is a private Slot 3 is a private Slot 4 is a private	e key slot, no action required key slot, no action required key, created slot_6_secret_key.pem and programmed							
	NOTE: While writing symmetric key into secure element it has to be encrypted with IO prot tion key) is written before slot 5 (Symmetric key)							
Slot 7 is a secureb Slot 8 is a general Slot 9 is a secret Slot 10 is a certif Slot 11 is a certif Slot 12 is a certif Slot 13 is a public Slot 14 is a public	key, created slot_5_secret_key.pem and programmed boot digest slot, slot can only be written through secureboot command l purpose slot of size 416 bytes, no action required key, created slot_9_secret_key.pem and programmed ficate slot, no action required now, will be updated as part of General ficate slot, no action required now, will be updated as part of General ficate slot, no action required now, will be updated as part of General ficate slot, no action required now, will be updated as part of General c key slot, created slot_13_ecc_key_pair.pem and programmed c key slot, created slot_14_ecc_key_pair.pem and programmed c key slot, created slot_15_ecc_key_pair.pem and programmed							
Key generation - Su	uccess							
Org Name	Type Org Name and Press Enter to continue Custom Certs processing							

The output log should resemble this:

Custom Certs processing...

Device contains custom device and signer certificates

Building new root certificate

Building new signer csr certificate

Building new signer certificate

Read device serial number...OK (SN: 01233E8A1491F2A601)

Read device public key from slot 0...OK (Public Key: CF1988BC3A6C252026FE70FB34397AD 85A39AE811C722BFA6E5EC1E9CDA9133B3F0E91FD3877F25B8C893B311BAF0203CB5100C 4CDABEBAFDAF3EBD550B00125)

Generating device certificate...OK (saved to device_01233E8A1491F2A601.crt)

Saving signer certificate to device... OK

Saving device certificate to device...OK

Thing ID eabc56113c70227a18c0a62f7c285fc68d75f9cd

Custom certificate generation and provisioning - SUCCESS

Validate root certificate...OK -----BEGIN CERTIFICATE-----

MIIByjCCAW+gAwIBAgIQeoueybRh8XWwzOkoixtW1jAKBggqhkjOPQQDAjA7MQ0w CwYDVQQKDAR0ZXN0MSowKAYDVQQDDCFDcnlwdG8gQXV0aGVudGljYXRpb24gUm9v dCBDQSAwMDIwIBcNMjAwNzAxMDgwNTE5WhgPMjA2MDA2MjEwODA1MTlaMDsxDTAL BgNVBAoMBHRlc3QxKjAoBgNVBAMMIUNyeXB0byBBdXRoZW50aWNhdGlvbiBSb290 IENBIDAwMjBZMBMGByqGSM49AgEGCCqGSM49AwEHA0IABFf6qcSyPv8iY0uccoTX SISstaz0ECCUxXUoqky8Xo40vsOCbPPt5QtlvNHnyy8tAbwza6DsAiz2sGLzDI5h QhqjUzBRMB0GA1UdDgQWBBRHVPQoljiq65JOG4vu5l32JzmkSTAfBgNVHSMEGDAW gBRHVPQoljiq65JOG4vu5l32JzmkSTAPBgNVHRMBAf8EBTADAQH/MAoGCCqGSM49 BAMCA0kAMEYCIQCB7FKx5K33xK9E0PsWGKZRaaQxxSRypC66y4hVqWVmMAIhAMlG 22zNUKPHccHQxfQssYH5LfR5SVE+WC3Hyxem/EVj

----END CERTIFICATE----

Certificate:

Data:

Version: 3 (0x2) Serial Number:

7a:8b:9e:c9:b4:61:f1:75:b0:cc:e9:28:8b:1b:56:d6

Signature Algorithm: ecdsa-with-SHA256

Issuer: O=test, CN=Crypto Authentication Root CA 002

Validity

Not Before: Jul 1 08:05:19 2020 GMT Not After: Jun 21 08:05:19 2060 GMT

Subject: O=test, CN=Crypto Authentication Root CA 002

Subject Public Key Info:

Public Key Algorithm: id-ecPublicKey

Public-Key: (256 bit)

pub:

04:57:fa:a9:c4:b2:3e:ff:22:63:4b:9c:72:84:d7: 4a:54:ac:b5:ac:f4:10:20:94:c5:75:28:aa:4c:bc: 5e:8e:34:be:c3:82:6c:f3:ed:e5:0b:65:bc:d1:e7:

X509v3 Basic Constraints: critical CA:TRUF

Signature Algorithm: ecdsa-with-SHA256

30:46:02:21:00:81:ec:52:b1:e4:ad:f7:c4:af:44:d0:fb:16: 18:a6:51:69:a4:31:c5:24:72:a4:2e:ba:cb:88:55:a9:65:66: 30:02:21:00:c9:46:db:6c:cd:50:a3:c7:71:c1:d0:c5:f4:2c: b1:81:f9:2d:f4:79:49:51:3e:58:2d:c7:cb:17:a6:fc:45:63

Validate signer certificate...OK -----BEGIN CERTIFICATE-----

MIIB3TCCAYKgAwIBAgIQV/RpeXxWfquIIYFCFTDc/TAKBggqhkjOPQQDAjA7MQ0w CwYDVQQKDAR0ZXN0MSowKAYDVQQDDCFDcnlwdG8gQXV0aGVudGljYXRpb24gUm9v dCBDQSAwMDIwIBcNMjAwNzAxMDgwMDAwWhgPMjA0MDA3MDEwODAwMDBaMDsxDTAL BgNVBAoMBHRlc3QxKjAoBgNVBAMMIUNyeXB0byBBdXRoZW50aWNhdGlvbiBTaWdu ZXIgRkZGRjBZMBMGByqGSM49AgEGCCqGSM49AwEHA0IABCEubbOfXDakettxvfKu kfG5UhQNDHrPrZiURytSZmQ8p38VacZ682akSAC6XQYDzhiy5/504eAHBCuN5rOt vnOjZjBkMA4GA1UdDwEB/wQEAwIBhjASBgNVHRMBAf8ECDAGAQH/AgEAMB0GA1Ud DgQWBBRycA/sc+NWXwp0wLudepyPtQtzFzAfBgNVHSMEGDAWgBRHVPQoljiq65JO G4vu5l32JzmkSTAKBggqhkjOPQQDAgNJADBGAiEA1ThacjiYboKYh69+NllQKiX2 wb7Jztq8zMsY61H/NkYCIQDQc2TQfOl9HBDUoDzUtTZNgIksElkU7ysiSgBhumAA zQ==

----END CERTIFICATE----

Certificate:

Data:

Version: 3 (0x2) Serial Number:

57:f4:69:79:7c:56:7e:ab:88:21:81:42:15:30:dc:fd

Signature Algorithm: ecdsa-with-SHA256

Issuer: O=test, CN=Crypto Authentication Root CA 002

Validity

Not Before: Jul 1 08:00:00 2020 GMT Not After: Jul 1 08:00:00 2040 GMT

```
Subject: O=test, CN=Crypto Authentication Signer FFFF
    Subject Public Key Info:
       Public Key Algorithm: id-ecPublicKey
         Public-Key: (256 bit)
         pub:
            04:21:2e:6d:b3:9f:5c:36:a4:7a:db:71:bd:f2:ae:
            91:f1:b9:52:14:0d:0c:7a:cf:ad:98:94:47:2b:52:
            66:64:3c:a7:7f:15:69:c6:7a:f3:66:a4:48:00:ba:
            5d:06:03:ce:18:b2:e7:fe:4e:e1:e0:07:04:2b:8d:
            e6:b3:ad:be:73
         ASN1 OID: prime256v1
         NIST CURVE: P-256
    X509v3 extensions:
       X509v3 Key Usage: critical
         Digital Signature, Certificate Sign, CRL Sign
       X509v3 Basic Constraints: critical
         CA:TRUE, pathlen:0
       X509v3 Subject Key Identifier:
         72:70:0F:EC:73:E3:56:5F:0A:74:C0:BB:9D:7A:9C:8F:B5:0B:73:17
       X509v3 Authority Key Identifier:
         keyid:47:54:F4:28:96:38:AA:EB:92:4E:1B:8B:EE:E6:5D:F6:27:39:A4:49
  Signature Algorithm: ecdsa-with-SHA256
     30:46:02:21:00:d5:38:5a:72:38:98:6e:82:98:87:af:7e:36:
     59:50:2a:25:f6:c1:be:c9:ce:da:bc:cc:cb:18:eb:51:ff:36:
     46:02:21:00:d0:73:64:d0:7c:e9:7d:1c:10:d4:a0:3c:d4:b5:
     36:4d:80:89:2c:12:59:14:ef:2b:22:4a:00:61:ba:60:00:cd
Validate device certificate...OK
----BEGIN CERTIFICATE----
MIIByDCCAW+gAwIBAgIQdxkpBswUT+e4dShL6tp00jAKBggqhkjOPQQDAjA7MQ0w
CwYDVQQKDAR0ZXN0MSowKAYDVQQDDCFDcnlwdG8gQXV0aGVudGljYXRpb24gU2ln
bmVyIEZGRkYwIBcNMjAwNzAxMDYwMDAwWhgPMjA00DA3MDEwNjAwMDBaMC4xDTAL
BgNVBAoMBHRIc3QxHTAbBgNVBAMMFHNuMDEyMzNFOEExNDkxRjJBNjAxMFkwEwYH
KoZIzj0CAQYIKoZIzj0DAQcDQqAEzxmIvDpsJSAm/nD7NDl62Fo5roEcciv6bl7B
6c2pEzs/DpH9OHfyW4yJOzEbrwIDy1EAxM2r66/a8+vVULABJaNgMF4wDAYDVR0T
AQH/BAIwADAOBgNVHQ8BAf8EBAMCA4gwHQYDVR0OBBYEFOq8VhE8cCJ6GMCmL3wo
X8aNdfnNMB8GA1UdIwQYMBaAFHJwD+xz41ZfCnTAu516nI+1C3MXMAoGCCqGSM49
BAMCA0cAMEQCIANn/QrqxwmwrRsrcYyQpWJ0o4AxLzGoeCZjfJ5o0FAbAiBFne67
iEzuh6dqwrdQYvqB6+qTxfLyei1kwoFcfVnHvA==
----END CERTIFICATE----
```

Certificate:

```
Data:
  Version: 3 (0x2)
  Serial Number:
     77:19:29:06:cc:14:4f:e7:b8:75:28:4b:ea:da:74:d2
  Signature Algorithm: ecdsa-with-SHA256
  Issuer: O=test, CN=Crypto Authentication Signer FFFF
  Validity
     Not Before: Jul 1 06:00:00 2020 GMT
     Not After: Jul 1 06:00:00 2048 GMT
  Subject: O=test, CN=sn01233E8A1491F2A601
  Subject Public Key Info:
     Public Key Algorithm: id-ecPublicKey
       Public-Key: (256 bit)
       pub:
          04:cf:19:88:bc:3a:6c:25:20:26:fe:70:fb:34:39:
          7a:d8:5a:39:ae:81:1c:72:2b:fa:6e:5e:c1:e9:cd:
          a9:13:3b:3f:0e:91:fd:38:77:f2:5b:8c:89:3b:31:
          1b:af:02:03:cb:51:00:c4:cd:ab:eb:af:da:f3:eb:
          d5:50:b0:01:25
       ASN1 OID: prime256v1
       NIST CURVE: P-256
  X509v3 extensions:
     X509v3 Basic Constraints: critical
       CA:FALSE
     X509v3 Key Usage: critical
       Digital Signature, Key Agreement
     X509v3 Subject Key Identifier:
       EA:BC:56:11:3C:70:22:7A:18:C0:A6:2F:7C:28:5F:C6:8D:75:F9:CD
    X509v3 Authority Key Identifier:
       keyid:72:70:0F:EC:73:E3:56:5F:0A:74:C0:BB:9D:7A:9C:8F:B5:0B:73:17
Signature Algorithm: ecdsa-with-SHA256
   30:44:02:20:03:67:fd:0a:ea:c7:09:b0:ad:1b:2b:71:8c:90:
   a5:62:74:a3:80:31:2f:31:a8:78:26:63:7c:9e:68:d0:50:1b:
   02:20:45:9d:ee:bb:88:4c:ee:87:a7:6a:c2:b7:50:62:f8:01:
   eb:ea:93:c5:f2:f2:7a:2d:64:c2:81:5c:7d:59:c7:bc
```

3. Generating Manifest file

2. Select the Certi	ficate Type t	e keys and provision to device to prototype securesigned element object and store it in manifest fi
Generate_Resources	MCHP Cert	Generate_Manifest
	Custom Cert	

The output log should resemble this:
Generating manifest dataOK (saved to TFLXTLS_devices_manifest.json

At the end of the execution, a Custom PKI chain will be generated on your PC and TrustFLEX device specific slots (10 through 12) will be overwritten with the custom certificates.

The Notebook has also generated a manifest file to be uploaded into the public cloud of your choice (Google GCP, AWS IoT and Microsoft Azure).

4 Use Case Prototyping

This hands-on lab is intended to demonstrate the usage of TrustFLEX/Trust&GO to secure a Google Cloud Platform connection.


The reference implementation is provided with Embedded projects and Notebooks. The generation of manifest can be achieved through the execution of Jupyter Notebook Tutorials.

Note: It is required to have Google account test account setup prior to running this. Instruction to setup the account is provided in **docs\TrustFLEX GCP Account setup instructions.pdf**.


4.1 Running GCP example on Jupyter Notebook

By running this step, one should be able to register the secure element to Google account by uploading device manifest file generated in the previous section. To run this Notebook, its required to have device manifest file (generated in previous section), google account credentials for manifest and data view (saved as part of GCP account setup).


 From the Jupyter Home page, navigate to TrustFLEX\10_cloud_connect\notebook\gcp\TFLXTLS_GCP_connect.ipynb notebook file and open it.

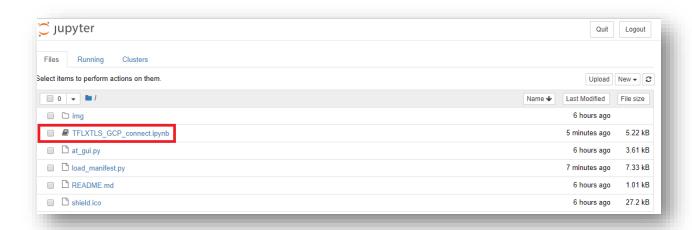


Opening the Jupyter notebook example should load the following on the browser.

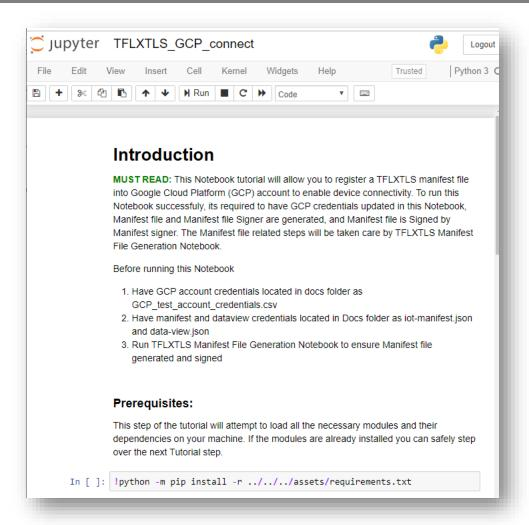

2. Run All Cells by using Kernel -> Restart & Run All

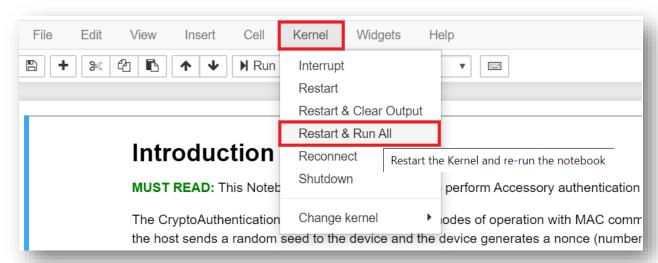

It may take a while to complete, wait for the kernel to complete all processing i.e. from Kernel Running to Kernel Idle state (Check circle above **RED** text)

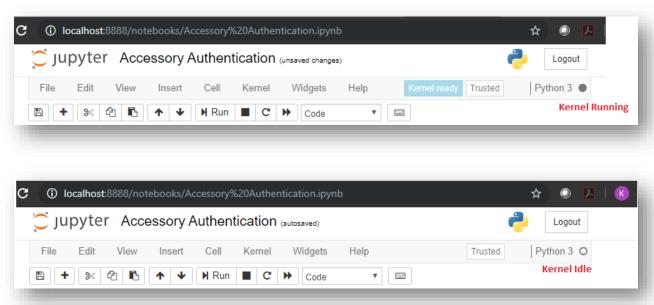

- 3. Navigate through different cells output for the description of the step and result from the execution.
- 4. There are 3 major steps:

Load Manifest File:

Under the section **Upload Manifest File**, click the button **'Load Manifest JSON File**' and select the

manifest file generated from the TrustFlex Resource generation notebook.




Load validation certificate:

click the button 'Load Validation CERT File' and

select the validation certificate which signed the manifest file and it should be present in the following folder with name log_signer.crt

For TrustFLEX – TrustFLEX\00_resource_generation\

For Trust&GO - TrustnGO\00_resource_generation\




Register device manifest file:

Code block of this step generates "**Upload manifest File**" button. Clicking the button, it registers the device manifest file to the GCP account. Once the manifest

file is registered, the gcp cloud authorizes the Trust Platform device and it will be able to communicate to them.

Upon successful execution, the log should look like this.

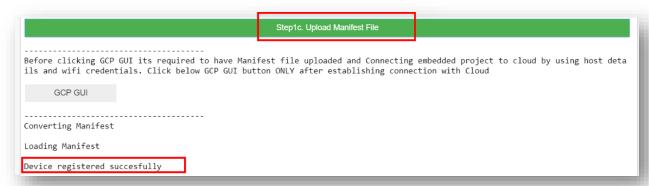


WARNING: It is required to execute C project successfully before executing the next step in the Jupyter notebook. To execute C project, refer "Running GCP IoT example on Embedded platform" next section.

GCP GUI:

Code block of this step generates "GCP GUI" button. Clicking the button, it will create a very basic graphical interface that will display the trust platform board LED status.

Below screenshot display the graphical interface

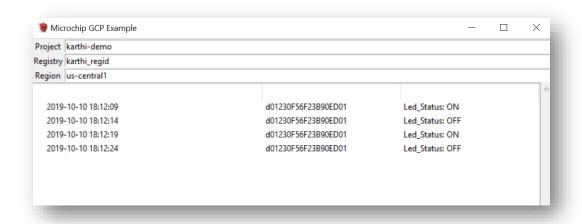

This GUI displays the packets exchanged between CryptoAuth Trust Platform and GCP.

4.2 Running GCP example on Embedded platform


Once the resources are generated and manifest file uploaded to GCP account, MPLAB projects provided can be used to run the use case on Crypto Auth Trust Platform.

This project establishes a TLS connection and subscribe to MQTT. It is required to use the GCP IoT Jupyter notebook to register the device through manifest file. Prior to executing the application, it is required to update Wifi credentials, GCP account details. Following steps provides the instructions for the same,


Prerequisite: It is required that WINC firmware is updated to latest version / version that is available in this package. Update the WINC firmware using package available in cloned repository at **assets\winc_firmware_upgrade**.

4.2.1 MPLAB:


1. Open **Trust_platform_cloud.X** project by navigating to MPLAB -> File -> Open Project -> **TrustFLEX\10_cloud_connect\firmware**

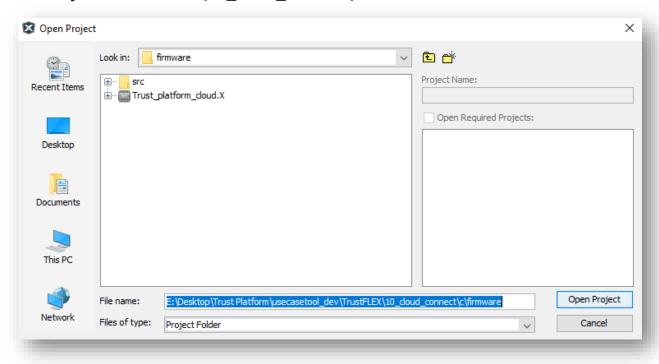

2. Select Build configuration as Google_Cloud

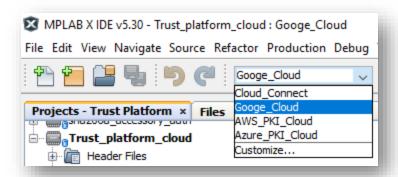

Open cloud_wifi_config.h file by navigating to Trust_platform_cloud -> Source
 Files

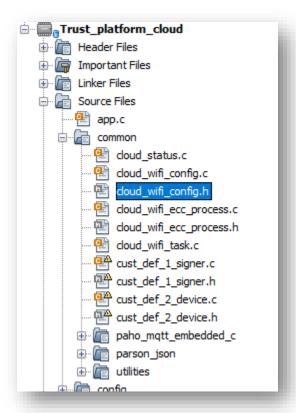

update the following constants before building the project, The project id, region id and registry id should be same as in the gcp account setup


- MAIN_WLAN_SSID
- MAIN_WLAN_PSK
- config_gcp_project_id, config_gcp_region_id and config_gcp_registry_id

```
#define WLAN_SSID "xxxxxxxxxxxx"

#define WLAN_AUTH_WPA_PSK


#define WLAN_PSK "xxxxxxxxxxxxxxx"
```

4. Program the Crypto Auth Trust platform by navigating to **Trust_platform_cloud -> Make and Program Device**

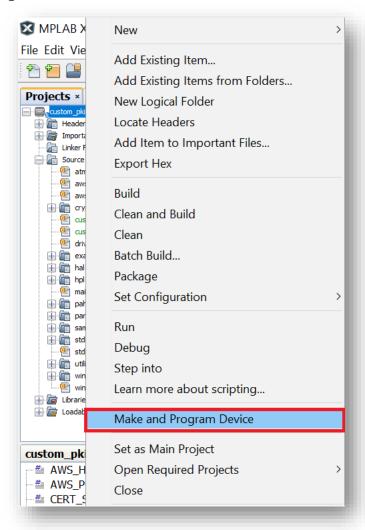

This step may take some time, wait for MPLAB to program the device. Once it is done programming you will see "**Programming complete**" message in Output Window.

Once the programming is done, reset the hardware (press the reset button) and view the Console messages by using applications like 'Tera Term'. Open the application with the COM related to CryptoAuth Trust Platform with 115200-8-N-1 settings.

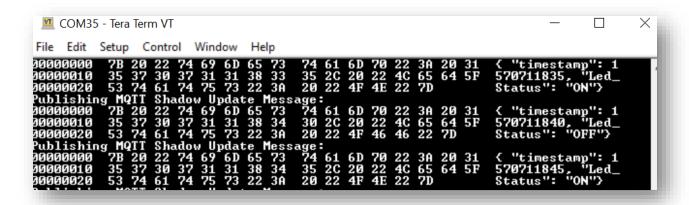

Once successfully programmed the CryptoAuth Trust Platform, navigate to previous section 1.7 to run the <u>last step (GCP GUI)</u> in the Jupyter Notebook.

4.3 Crypto Auth Trust Platform Factory reset

Once any of the embedded project is loaded to Crypto Auth Trust Platform, the default program that enables interaction with Trust Platform tools will be erased.

Before using the Platform with any other notebook or tools on PC, its required to reprogram the default .hex file. Default hex file is available cloned repository at assets\Factory_Program.X\CryptoAuth_Trust_Platform.hex

If Trust Platform GUI is provided with MPLAB X IDE installation location, notebooks can program the Factory reset hex file if its not available by default.

This can also be done manually by MPLAB

To reprogram using MPLAB:

- 1. Open assets\Factory_Program.X project in MPLAB IDE
- 2. Program the Crypto Trust platform by navigating to CryptoAuth_Trust_Platform_Factory_Program -> Make and Program Device

Now, Crypto Auth Trust Platform contains factory programmed application that enables interactions with Notebooks and/or PC tools.

5 FAQ

1. What are the reasons for "AssertionError: Cannot connect to CryptoAuth Trust Platform, check USB connection" error?

There are many possibilities like,

- 1. Crypto Trust Platform is having different application than factory reset firmware. Refer to "Crypto Auth Trust Platform Factory reset" section any usecase TrustFLEX Guide for reloading it
- 2. Check the switch positions on Crypto Trust Platform and/or ATECC608B Trust board
 - a. Correct Trust device should be connected and only one device of that type is allowed on the I2C bus. Multiple devices with same address results in error
- 3. Check USB connections to Crypto Trust Platform

2. How to reload factory default application to Crypto Trust Platform?

Refer to "Crypto Auth Trust Platform Factory reset" section any usecase TrustFLEX Guide for reloading it.

3. Why does my C projects generates No such file or directory with ../../ ../ 00_resource_generation/?

C project generates this error when the resources are not generated prior to using embedded projects. Running the resource generation notebook ensures these files and secrets are generated.

4. Before running any use case notebook and/or C project, why is it mandate to execute resource generation?

When resource generation notebook is executed, it generates and programs the required resources like secrets, keys and certificates. These are only prototyping keys and cannot be used for production. These keys will be used part of Usecase notebooks and C projects

5. How to know the resources being used in a use case?

Refer to individual Usecase description html for details on transaction diagrams, resources being used and other details. The resources required for given use case is mentioned in INFER CRYPTOGRAPHIC ASSETS section.

The Microchip Web Site

Microchip provides online support via our web site at http://www.microchip.com/. This web site is used as

a means to make files and information easily available to customers. Accessible by using your favorite Internet browser, the web site contains the following information:

- Product Support Data sheets and errata, application notes and sample programs, design resources, user's guides and hardware support documents, latest software releases and archived software
- **General Technical Support** Frequently Asked Questions (FAQ), technical support requests, online discussion groups, Microchip consultant program member listing
- Business of Microchip Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives

Customer Change Notification Service

Microchip's customer notification service helps keep customers current on Microchip products. Subscribers will receive e-mail notification whenever there are changes, updates, revisions or errata related to a specified product family or development tool of interest.

To register, access the Microchip web site at http://www.microchip.com/. Under "Support", click on "Customer Change Notification" and follow the registration instructions.

Customer Support

Users of Microchip products can receive assistance through several channels:

- Distributor or Representative
- Local Sales Office
- Field Application Engineer (FAE)
- Technical Support

Customers should contact their distributor, representative or Field Application Engineer (FAE) for support.

Local sales offices are also available to help customers. A listing of sales offices and locations is included

in the back of this document.

Technical support is available through the web site at: http://www.microchip.com/support

Microchip Devices Code Protection Feature

Note the following details of the code protection feature on Microchip devices:

- Microchip products meet the specification contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is one of the most secure families of its kind on the market today, when used in the intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our knowledge, require using the Microchip products in a manner outside the

operating specifications contained in Microchip's Data Sheets. Most likely, the person doing so is engaged in theft of intellectual property.

- Microchip is willing to work with the customer who is concerned about the integrity of their code.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not mean that we are guaranteeing the product as "unbreakable."

Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip's code protection feature may be

violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

Legal Notice

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY

OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO ITS CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE. Microchip disclaims all liability arising from this information and its use. Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights unless otherwise stated.

Trademarks

The Microchip name and logo, the Microchip logo, AnyRate, AVR, AVR logo, AVR Freaks, BitCloud, chipKIT, chipKIT logo, CryptoMemory, CryptoRF, dsPIC, FlashFlex, flexPWR, Heldo, JukeBlox, KeeLog.

Kleer, LANCheck, LINK MD, maXStylus, maXTouch, MediaLB, megaAVR, MOST, MOST logo, MPLAB,

OptoLyzer, PIC, picoPower, PICSTART, PIC32 logo, Prochip Designer, QTouch, SAM-BA, SpyNIC, SST.

SST Logo, SuperFlash, tinyAVR, UNI/O, and XMEGA are registered trademarks of Microchip Technology

Incorporated in the U.S.A. and other countries.

ClockWorks, The Embedded Control Solutions Company, EtherSynch, Hyper Speed Control, HyperLight

Load, IntelliMOS, mTouch, Precision Edge, and Quiet-Wire are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Adjacent Key Suppression, AKS, Analog-for-the-Digital Age, Any Capacitor, Anyln, AnyOut, BodyCom, CodeGuard, CryptoAuthentication, CryptoAutomotive, CryptoCompanion, CryptoController, dsPICDEM, dsPICDEM.net, Dynamic Average Matching, DAM, ECAN, EtherGREEN, In-Circuit Serial Programming,

ICSP, INICnet, Inter-Chip Connectivity, JitterBlocker, KleerNet, KleerNet logo, memBrain, Mindi, MiWi,

motorBench, MPASM, MPF, MPLAB Certified logo, MPLIB, MPLINK, MultiTRAK, NetDetach, Omniscient

Code Generation, PICDEM, PICDEM.net, PICkit, PICtail, PowerSmart, PureSilicon, QMatrix, REAL ICE,

Ripple Blocker, SAM-ICE, Serial Quad I/O, SMART-I.S., SQI, SuperSwitcher, SuperSwitcher II, Total Endurance, TSHARC, USBCheck, VariSense, ViewSpan, WiperLock, Wireless DNA, and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

Silicon Storage Technology is a registered trademark of Microchip Technology Inc. in other countries.

GestIC is a registered trademark of Microchip Technology Germany II GmbH & Co. KG, a subsidiary of Microchip Technology Inc., in other countries.

All other trademarks mentioned herein are property of their respective companies.

© 2018, Microchip Technology Incorporated, Printed in the U.S.A., All Rights Reserved.

ISBN:

Quality Management System Certified by DNV

ISO/TS 16949

Microchip received ISO/TS-16949:2009 certification for its worldwide headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona; Gresham, Oregon and design centers in California

and India. The Company's quality system processes and procedures are for its PIC® MCUs and dsPIC® DSCs, KEELOQ® code hopping devices, Serial EEPROMs, microperipherals, nonvolatile memory and analog products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001:2000 certified.



Worldwide Sales and Service

AMERICAS Corporate Office

2355 West Chandler Blvd. Chandler, AZ 85224-6199 Tel: 480-792-7200 Fax: 480-792-7277

Technical Support: http://www.microchip.com/

support

Web Address:

www.microchip.com

Atlanta

Duluth, GA Tel: 678-957-9614 Fax: 678-957-1455

Austin, TX Tel: 512-257-3370

Boston

Westborough, MA Tel: 774-760-0087 Fax: 774-760-0088

Chicago Itasca, IL

Tel: 630-285-0071 Fax: 630-285-0075

Dallas Addison, TX

Tel: 972-818-7423 Fax: 972-818-2924

Detroit Novi, MI

Tel: 248-848-4000 Houston, TX

Tel: 281-894-5983

Indianapolis Noblesville, IN

Tel: 317-773-8323 Fax: 317-773-5453 Tel: 317-536-2380

Los Angeles

Mission Viejo, CA Tel: 949-462-9523

Fax: 949-462-9608 Tel: 951-273-7800

Raleigh, NC Tel: 919-844-7510

New York, NY Tel: 631-435-6000

San Jose, CA Tel: 408-735-9110 Tel: 408-436-4270

Canada - Toronto Tel: 905-695-1980 Fax: 905-695-2078

ASIA/PACIFIC

Australia - Sydney Tel: 61-2-9868-6733

China - Beijing Tel: 86-10-8569-7000

China - Chengdu

Tel: 86-28-8665-5511

China - Chongqing

Tel: 86-23-8980-9588

China - Dongguan Tel: 86-769-8702-9880

China - Guangzhou

Tel: 86-20-8755-8029 China - Hangzhou

Tel: 86-571-8792-8115

China - Hong Kong SAR

Tel: 852-2943-5100

China - Nanjing Tel: 86-25-8473-2460

China - Qinadao

Tel: 86-532-8502-7355 China - Shanghai

Tel: 86-21-3326-8000

China - Shenyang

Tel: 86-24-2334-2829 China - Shenzhen

Tel: 86-755-8864-2200

China - Suzhou

Tel: 86-186-6233-1526

China - Wuhan Tel: 86-27-5980-5300

China - Xian

Tel: 86-29-8833-7252

China - Xiamen

Tel: 86-592-2388138 China - Zhuhai

Tel: 86-756-3210040

ASIA/PACIFIC

India - Bangalore Tel: 91-80-3090-4444

India - New Delhi

Tel: 91-11-4160-8631

India - Pune

Tel: 91-20-4121-0141

Japan - Osaka

Tel: 81-6-6152-7160

Japan - Tokyo

Tel: 81-3-6880- 3770

Korea - Daegu

Tel: 82-53-744-4301

Korea - Seoul

Tel: 82-2-554-7200

Malaysia - Kuala Lumpur Tel: 60-3-7651-7906

Malaysia - Penang

Tel: 60-4-227-8870

Philippines - Manila

Tel: 63-2-634-9065

Singapore

Tel: 65-6334-8870

Taiwan - Hsin Chu

Tel: 886-3-577-8366

Taiwan - Kaohsiung

Tel: 886-7-213-7830

Taiwan - Taipei

Tel: 886-2-2508-8600

Thailand - Bangkok

Tel: 66-2-694-1351

Vietnam - Ho Chi Minh

Tel: 84-28-5448-2100

EUROPE

Austria - Wels Tel: 43-7242-2244-39

Fax: 43-7242-2244-393

Denmark - Copenhagen

Tel: 45-4450-2828

Fax: 45-4485-2829

Finland - Espoo

Tel: 358-9-4520-820

France - Paris

Tel: 33-1-69-53-63-20

Fax: 33-1-69-30-90-79

France - Saint Cloud

Tel: 33-1-30-60-70-00

Germany - Garching Tel: 49-8931-9700

Germany - Haan

Tel: 49-2129-3766400

Germany - Heilbronn

Tel: 49-7131-67-3636

Germany - Karlsruhe

Tel: 49-721-625370

Germany - Munich Tel: 49-89-627-144-0

Fax: 49-89-627-144-44

Germany - Rosenheim

Tel: 49-8031-354-560

Israel - Ra'anana

Tel: 972-9-744-7705

Italy - Milan

Tel: 39-0331-742611

Fax: 39-0331-466781

Italy - Padova

Tel: 39-049-7625286

Netherlands - Drunen

Tel: 31-416-690399

Fax: 31-416-690340

Norway - Trondheim

Tel: 47-7289-7561

Poland - Warsaw Tel: 48-22-3325737

Romania - Bucharest

Tel: 40-21-407-87-50

Spain - Madrid Tel: 34-91-708-08-90

Fax: 34-91-708-08-91

Sweden - Gothenberg

Tel: 46-31-704-60-40 Sweden - Stockholm

Tel: 46-8-5090-4654

UK - Wokingham Tel: 44-118-921-5800

Fax: 44-118-921-5820