


Temperature and Humidity Monitoring Using DHT11 Sensor and 0.96-inch I2C OLED Display

• Components Required

Sr.No.	Component	Quantity	Description	Use
1.	Breadboard	1	A board with small holes used to make circuits.	Used to make the circuit easily and test connections.
2.	Arduino Nano	1	A small microcontroller board used for programming electronic projects.	Used to read the sensor data and display it on the OLED screen.
3.	DHT11 Sensor	1	A sensor that measures temperature and humidity of the air.	Used to read the room temperature and humidity.
4.	0.96-inch I2C OLED Display	1	A small display used to show text and values.	Used to display the temperature and humidity readings.

• Circuit Diagram

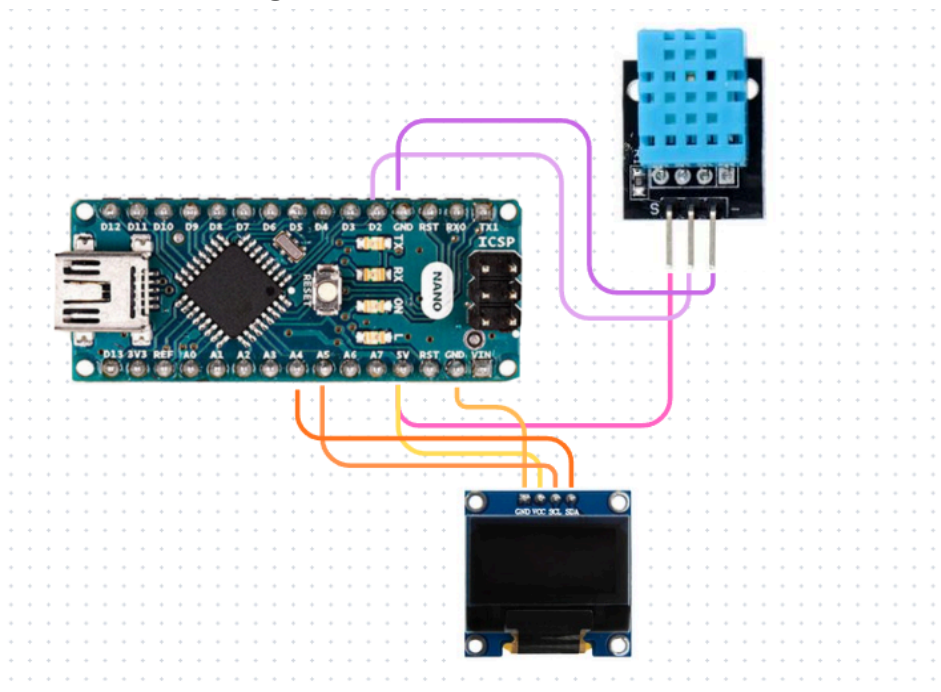

- **Program Code**

```
// Example testing sketch for various DHT humidity/temperature sensors

// REQUIRES the following Arduino libraries:
// - DHT Sensor Library: https://github.com/adafruit/DHT-sensor-library
// - Adafruit Unified Sensor Lib: https://github.com/adafruit/Adafruit\_Sensor

#include "DHT.h"

#define DHTPIN 2    // Digital pin connected to the DHT sensor
// Feather HUZZAH ESP8266 note: use pins 3, 4, 5, 12, 13 or 14 --
// Pin 15 can work but DHT must be disconnected during program upload.

// Uncomment whatever type you're using!
#define DHTTYPE DHT11  // DHT 11
// #define DHTTYPE DHT22  // DHT 22 (AM2302), AM2321
// #define DHTTYPE DHT21  // DHT 21 (AM2301)

// Connect pin 1 (on the left) of the sensor to +5V
// NOTE: If using a board with 3.3V logic like an Arduino Due connect pin 1
// to 3.3V instead of 5V!
// Connect pin 2 of the sensor to whatever your DHTPIN is
// Connect pin 3 (on the right) of the sensor to GROUND (if your sensor has 3 pins)
// Connect pin 4 (on the right) of the sensor to GROUND and leave the pin 3 EMPTY (if your
// sensor has 4 pins)
// Connect a 10K resistor from pin 2 (data) to pin 1 (power) of the sensor

// Initialize DHT sensor.
// Note that older versions of this library took an optional third parameter to
// tweak the timings for faster processors.  This parameter is no longer needed
// as the current DHT reading algorithm adjusts itself to work on faster procs.
DHT dht(DHTPIN, DHTTYPE);

void setup() {
  Serial.begin(9600);
  Serial.println(F("DHT11 test!"));

  dht.begin();
}

void loop() {
  // Wait a few seconds between measurements.
  delay(2000);
}
```

```

// Reading temperature or humidity takes about 250 milliseconds!
// Sensor readings may also be up to 2 seconds 'old' (its a very slow sensor)
float h = dht.readHumidity();
// Read temperature as Celsius (the default)
float t = dht.readTemperature();
// Read temperature as Fahrenheit (isFahrenheit = true)
float f = dht.readTemperature(true);


// Check if any reads failed and exit early (to try again).
if (isnan(h) || isnan(t) || isnan(f)) {
  Serial.println(F("Failed to read from DHT sensor!"));
  return;
}

// Compute heat index in Fahrenheit (the default)
float hif = dht.computeHeatIndex(f, h);
// Compute heat index in Celsius (isFahreheit = false)
float hic = dht.computeHeatIndex(t, h, false);

Serial.print(F("Humidity: "));
Serial.print(h);
Serial.print(F("%  Temperature: "));
Serial.print(t);
Serial.print(F("°C "));
Serial.print(f);
Serial.print(F("°F  Heat index: "));
Serial.print(hic);
Serial.print(F("°C "));
Serial.print(hif);
Serial.println(F("°F"));
}

```

- **Photograph of the Experiment**

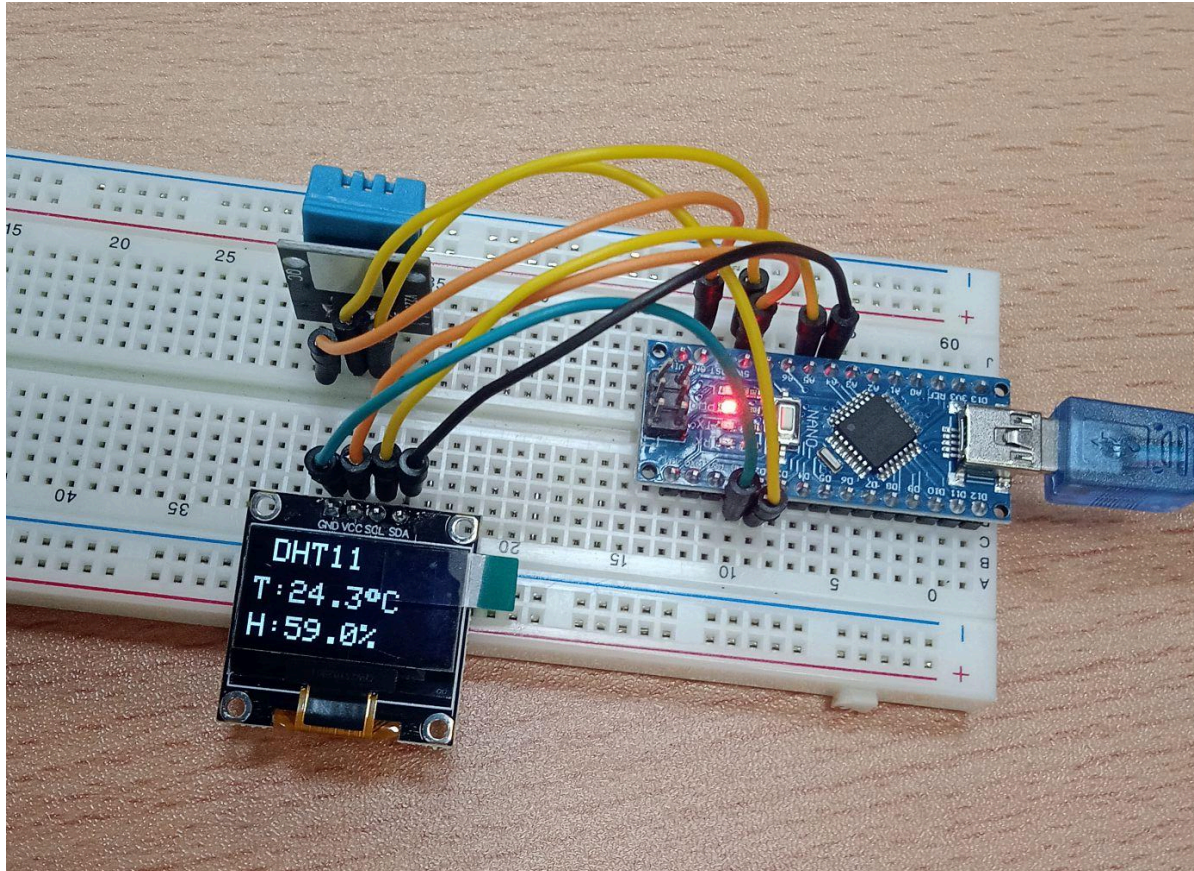

- **Conclusion**

In this experiment, we learned how to measure temperature and humidity using the DHT11 sensor and display the readings on a 0.96-inch I2C OLED display using an Arduino Nano. We also understood how to connect the components and read sensor data through the Arduino.