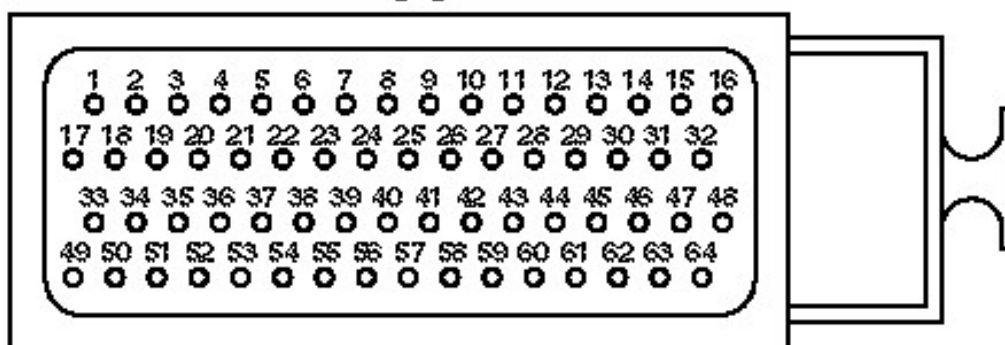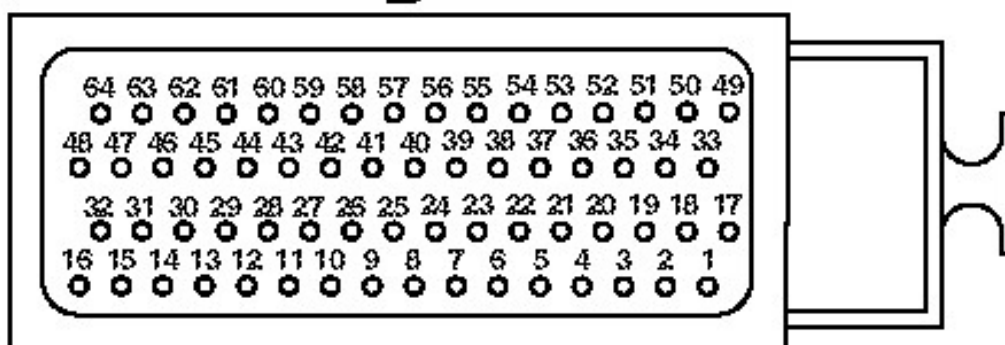|	
K143	AC compressor clutch relay
A63	AC control module
B161	AC refrigerant pressure sensor
B138	Accelerator pedal position (APP) sensor
31	Battery -
30	Battery +
B132	Camshaft position (CMP) sensor
S258	Clutch pedal position (CPP) switch
CAN	Controller area network (data bus)
B54	Crankshaft position (CKP) sensor
X1	Data link connector (DLC)
A130	Diagnostic module
EP	Earth point
K46	Engine control (EC) relay
A35	Engine control module (ECM)
K12-I	Engine coolant blower motor relay 1
K12-II	Engine coolant blower motor relay 2
B24	Engine coolant temperature (ECT) sensor
H63	Engine malfunction indicator lamp (MIL)
S389	Engine oil pressure switch
Y104	Evaporative emission (EVAP) canister purge valve
M12	Fuel pump (FP)
K20	Fuel pump (FP) relay
F	Fuse
X28-II	Fuse box/relay plate, engine bay
X28-I	Fuse box/relay plate, fascia
B196	G-force sensor, longitudinal
B72-I	Heated oxygen sensor (HO2S) 1 - before cat
B72-II	Heated oxygen sensor (HO2S) 2 - after cat
T1	Ignition coil
15	Ignition switch - ignition ON
A162	Immobilizer control module
S39	Inertia fuel shut-off (IFS) switch
Y3	Injector
A5	Instrument panel
A75	Instrumentation control module
B25	Intake air temperature (IAT) sensor
B69	Knock sensor (KS)
B83	Manifold absolute pressure (MAP) sensor
A11	Multifunction control module
A177	Throttle control unit
M89	Throttle motor
B169	Throttle motor position sensor
A57	Transmission control module (TCM)
B33	Vehicle speed sensor (VSS)

A

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48
49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64

B

64	63	62	61	60	59	58	57	56	55	54	53	52	51	50	49
48	47	46	45	44	43	42	41	40	39	38	37	36	35	34	33
32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17
16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1

AD23404

bl = blue	br = brown	el = cream	ge = yellow
gn = green	gr = grey	nf = neutral	og = orange
rs = pink	rt = red	sw = black	vi = violet
ws = white	hbl = light blue	hgn = light green	rbr = maroon
x = braided cable	y = high tension	z = non-cable connection	

NOTE: In certain diagrams (Citroen, Peugeot & Renault), colour codes are replaced by numbers which are used to identify a particular cable and not the colour. In this instance, the cables will be numbered at each end close to the harness connector.

30

15

X28-I

X1

A11

rt gn rs sw rs ws

X28-II

E
a

F8
10A

F24
10A

F2
70A

F15
7,5A

F13
15A

F18
7,5A

F11
20A

F12
10A

F10
15A

A130
A162

K20

K46

B132

B24

B25 B83

BG9

B54

CAN CAN

A35

M12

S39

Y3 I

Y3 II

Y3 III

Y3 IV

T1

B33

S389

S258

B72-II

B72-I

Y104

31

EP2
EP3=LHD

EP1 EP6

EP1 EP1

39641

30

15

A

B

C

A5

H63

A75

rs ws
rs sw
rt gn

A 3
A 8
A 9

2 1
A A

bl sw
sw vi

D

E

A177

B169   M89

M

5   3   6   2   4   1

A63   K12-II   K12-I   K143

9   21   28   5
B   F   F   F

gr sw
gn sw
gr gn
ws sw
rt sw
sw vi
sw vi
rt sw
ws sw
bl gn
bl gn

A   A   A   A   A   A   A   A   B   B   B   B

39 56 23 58 28 43 11 60 40   30   14   46

A35

22 21 37 54 5   4   39   54 53   10 38 8 26 29 20 35 3 2

B   B   B B B   B   B   A   B   B B B B B B B B B

br ws
br sw
gr br
hbl sw
sw vi
ws o.g
sw
vi ws
sw
sw vi
gr ws
hbl ws
bl ws
hbl
hbl ge
gr rt
ws bl
gr gn
sw rs
hbl gn
ws rt

br ws
ws o.g
gr sw
br sw
hbl sw
sw vi
ws o.g
sw
vi ws
sw
ws sw
hbl ws
hbl br
gr gn
hbl rt
bl gn

3 1 2 6 4 5   1 2 3   2 3 1   7 3 14 4 19 5 12 11 13 17 21

B138

B196

B161

A57

F

31

EP1

39642