A16	ABS control module
B161	AC refrigerant pressure sensor
B138	Accelerator pedal position (APP) sensor
31	Battery -
30	Battery +
S13	Brake pedal position (BPP) switch
Y81	Camshaft position (CMP) actuator
B132	Camshaft position (CMP) sensor
S258	Clutch pedal position (CPP) switch
CAN-H	Controller area network (data bus) high
CAN-L	Controller area network (data bus) low
B54	Crankshaft position (CKP) sensor
X1	Data link connector (DLC)
A35	Engine control module (ECM)
M6	Engine coolant blower motor
K12	Engine coolant blower motor relay
R46	Engine coolant blower motor resistor
B24	Engine coolant temperature (ECT) sensor
H63	Engine malfunction indicator lamp (MIL)
Y104	Evaporative emission (EVAP) canister purge valve
M12	Fuel pump
F	Fuse
X28-II	Fuse box/relay plate, engine bay 1
X28-IV	Fuse box/relay plate, engine bay 2
X28-I	Fuse box/relay plate, fascia 1
B72	Heated oxygen sensor (HO2S)
B72-I	Heated oxygen sensor (HO2S) 1
B72-II	Heated oxygen sensor (HO2S) 2
T1	Ignition coil
S1	Ignition switch
15	Ignition switch - ignition ON
Y3	Injector
A5	Instrument panel
A75	Instrumentation control module
B25	Intake air temperature (IAT) sensor
B69	Knock sensor (KS)
B83	Manifold absolute pressure (MAP) sensor
A11-I	Multifunction control module 1
A11-II	Multifunction control module 2
B157	Power steering pressure (PSP) sensor
H50	Service indicator
X92	Shorting link connector
H111	Stop engine warning lamp
P7	Tachometer
B169	Throttle motor position sensor
A57	Transmission control module (TCM)
VAN	Vehicle area network (VAN)
P9	Vehicle speedometer

C

h1	g1	f1	e1	d1	c1	b1	a1
h2	g2	f2	e2	d2	c2	b2	a2
h3	g3	f3	e3	d3	c3	b3	a3
h4	g4	f4	e4	d4	c4	b4	a4

B

m1	l1	k1	j1	h1	g1	f1	e1	d1	c1	b1	a1
m2	l2	k2	j2	h2	g2	f2	e2	d2	c2	b2	a2
m3	l3	k3	j3	h3	g3	f3	e3	d3	c3	b3	a3
m4	l4	k4	j4	h4	g4	f4	e4	d4	c4	b4	a4

A

a4	b4	c4	d4	e4	f4	g4	h4
a3	b3	c3	d3	e3	f3	g3	h3
a2	b2	c2	d2	e2	f2	g2	h2
a1	b1	c1	d1	e1	f1	g1	h1

AE02744
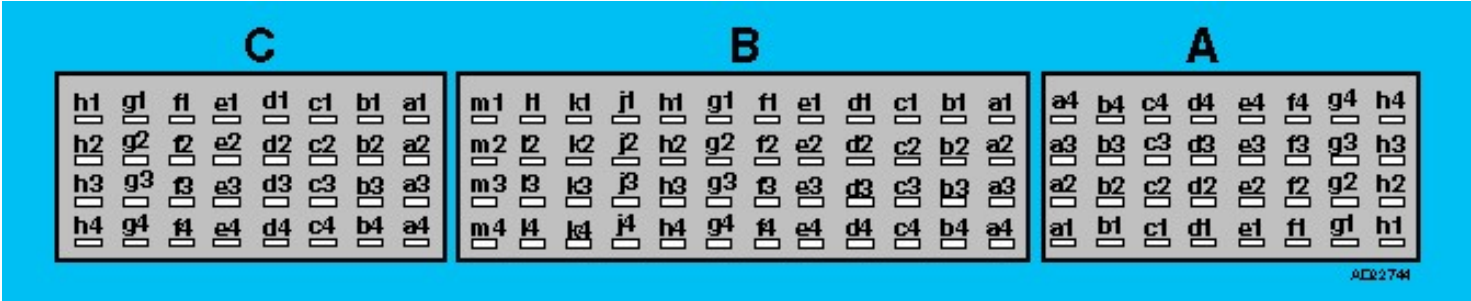
bl = blue	br = brown	el = cream	ge = yellow
gn = green	gr = grey	nf = neutral	og = orange
rs = pink	rt = red	sw = black	vi = violet
ws = white	hbl = light blue	hgn = light green	rbr = maroon
x = braided cable	y = high tension	z = non-cable connection	

NOTE: In certain diagrams (Citroen, Peugeot & Renault), colour codes are replaced by numbers which are used to identify a particular cable and not the colour. In this instance, the cables will be numbered at each end close to the harness connector.

30

15

A16

14 12

9001 9000

A

1355A 1240 1352A 1352B

Y104 Y81 B132 B132 II B54 B169 M89 B138 CAN-L CAN-H K12 K12 III M6 R46

1 1 3 3 1 4 3 6 5 1 2 1 2 3 4 9001A 9000A 2 2 3 1 3

2 2 1 1 1 4 2 A57 1592 1595 1514A 1514B 1514C

1356A 1356B 29 30

CAN-L CAN-H

39 38

9001 9000 CAN-L CAN-H

1232 1241 1356 1353 1352 1354 1361 1362 1219 1367 1218 1220 1335 1334 1377 1378 1380 1379 9001 9000 1550 1540 1599

C C C C C C C C C C C C C C B B B B B B B B B

f4 g1 b1 c1 b2 c2 e2 e3 b4 c3 b3 c4 l4 m3 a1 a2 b1 k1 h4 h3 k4 j4 f2

A=gr A
B=br B A35
C=sw C

f3 e3 l2 f2 e2 m1 f1 e1 m2 c3 b3 a3 e3 d4 e4 a4 m4 h1 m4 l4 d2 d3 a1 a2 a3 a4 c4 d4

A A C A A C A A C A A A B A B B C A B B A A C C C C A A

1303 1302 124 1301 1300 123 1305 1304 125 1364 1393 1363 7109 8092 8093 8094 MC1 MC2 MP2 MP1 1357 1366 134 135 136 137 1365 1341

3 4 3 4 3 4 1 3 2 1 2 3 1 1 2 1 2 1

B72-II B72-III B72-IV B83 B157 B161 B24 B69 I B69 II B25

1 2 1 2 1 2 2 2

M7109

1351D 124 1351A 123 1351C 125 1364 1357 1365

B

M002B M13 M001B

31

EP3 EP2 EP1 38274

Manufacturer: Citroen   **Model:** C5 3,0   © Autodata Limited 2010

Engine code: XFX (ES9J4S/L5)   **Output:** 152 (207) 6000   **Valid forever.** 29.10.2020

Tuned for: R-Cat   **Year:** 2000-04   V8 500 *Autodata*