



# AgroSense Soil Moisture Sensor LoRaWAN® Manual V1.1

Author: Yuki

Time: 2024.10.16

# Contents

1 Pr	oduct Description	. 1
	1.1 Introduction	
	1.2 Feature	
	1.3 Parameter	. 2
2 Te	chnical route	3
	2.1 System Framework	. 3
	2.2 Regional frequency band	4
3 Us	age	5
	3.1 Network Server configuration	. 5
	3.2 Decoder	8
	3.3 Application Server configuration	10
	3.4 Connect the Network Server and Application Server	10
	3.5 Change Time Interval (5-1440min)	11

# AgroSense Soil Moisture Sensor LoRaWAN®

Date	Versions	Description	Author
2024.7.16	V1.0	Introduction to Use & Function	Yuki
2024.10.14	V1.1	<ol> <li>Changing the use of TTN to a new page.</li> <li>LoRaWAN version: LoRaWAN specification 1.0.2 updated to 1.0.3.</li> <li>Add downlink function.</li> </ol>	Yuki

# **1 Product Description**

## 1.1 Introduction

AgroSense LoRaWAN® Soil Moisture Sensor measures the Soil Humidity at the range of 12-bit ADC, -40°C to 85°C with capacitive method, also with highly waterproof performance tested to IP68, making it widely applicable in agricultural environmental sensing scenarios to support the smart agricultural production.

The sensor benefits from LoRaWAN, which ensures stability and reliability. It is capable of covering a long transmission range while maintaining low power consumption. Unlike wireline devices, it is battery-powered, reducing the workload and complexity of deployment, design and development for end-users that can work via powering it, and setting the configuration in the cloud server, for LoRaWAN® remote monitoring. It monitors the Soil Moisture and report every 1 hour.



# 1.2 Feature

- Includes a high precision sensor.
- Compatible with Worldwide LoRaWAN® Networks: Support the universal frequency bands EU868/ US915.
- LoRaWAN version: LoRaWAN Specification 1.0.3.
- Long Range: Up to 2 kilometers in the city, up to 10 kilometers in the wilderness, receive sensitivity -137dBm, transmit power up to 21dBm.
- Ultra-low power consumption design, traditional AAA alkaline dry battery can be used for

one year.

- Data encryption: Provide end-to-end secure communication, including device authentication and network data encryption, to ensure the security of data transmission and prevent data theft and malicious attacks.
- **High stability and reliability:** good stability in noisy environments, able to penetrate buildings and obstacles, so it can maintain good communication quality in urban and suburban environments.
- Suitable for Harsh Environments: Can work normally under the temperature of -40 $^{\circ}$ C ~ 85 $^{\circ}$ C, IP68 waterproof, suitable for outdoor use in harsh conditions, high UV, dusty, heavy rain and other bad weather.
- Monitor data and upload real-time data regularly.
- Modify the product parameters through **AT commands**.
- Support **downlink** to modify the time interval (5min-1440min).

### 1.3 Parameter

### 1. General Parameters

Product Model	AGLWSM01
Measurement Range	12-bit ADC
Measurement Accuracy	1/4096

### 2.Wireless Parameters

Communication Protocol	Standard LoRaWAN® protocol
Network Access/Operating Mode	OTAA Class A
MAX Transmit Power	21dBm
Receiver Sensitivity	-137dBm @300bps
Frequency Band	EU868/US915

### 3. Physical Parameters


Lead Length	1.5 meter (custom length available)	
Power Supply	2 x AAA 1.5V batteries	
Operating Temperature	-40°C ~85°C	
Protection Class	IP68	
Dimensions	131 × 62.7 × 27.5 mm	
Mounting	Wall Mounting	

# 2 Technical route

# 2.1 System Framework

AgroSense Soil Moisture Sensor uses LoRAWAN technology, and it network architecture includes four parts: End Nodes, Concentrator/Gateway, Network Server and Application Server.

End Nodes	It is responsible for collecting sensing data and then transmitting it to Gateway via the LoRaMAC protocol.
Concentrator/Gateway	It is mainly responsible for transmitting node data to the server.
Network Server	Organize the data into JSON packets and decode them.
Application Server	Display the data.

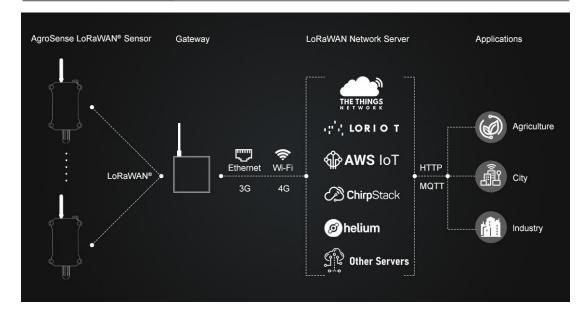

## The steps to achieve the detection of Soil Moisture is:

- 1. Collect the Soil Moisture data by sensor, and send the data from End Node to Gateway.
- 2. The Gateway packages node data and transmits it to the Network Server.
- 3. The Network Server decodes the data and sends it to the Applications.
- 4. Finally, user can monitor the Soil Moisture in the APP.

# 2.2 Regional frequency band

At the present moment, our product solely accommodates compatibility with the US915 and EU868.

area	frequency band	center frequency
China	470-510MHz	CN486MHz
America	902-928MHz	US915MHz
Europe	863-870MHz	EU868MHz
Korea	920-923MHz	KR922MHz
Australia	915-928MHz	AU923MHz
New Zealand	921-928MHz	NZ922MHz
Asia	920-923MHz	AS923MHz

# 3 Usage


We use The Things Network as our Network Server, we need to configuration the country/ area frequency, inputting DEV EUI/ APP EUI/ APP Key, decodes, and connect to ThingSpeak.

DEV EUI	Unique identification of device, authorized by IEEE
APP EUI	Unique identification of application
APP Key	One of the join network parameters on OTAA mode, calculated by DE EUI


- End Nodes and Gateway: AgroSense Soil Moisture Sensor.(The AgroSense series is applicable)
- Network Server: The Things Network. (Loriot, AWS IoT, ChirpStack, ect)
- Application Server: ThingSpeak.(Datacake, Blockbax, akenza, ect)

# 3.1 Network Server configuration

• Open The Things Network in your browser and login it. (Or register an account)

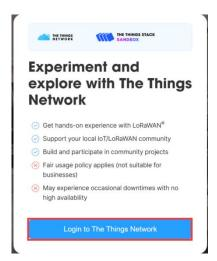


• Click "Console" and select clusters. (we take the European region for example.)

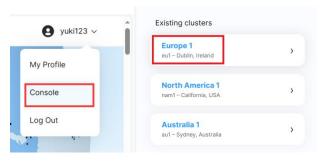


Click "Go to applications" --> "+ Create application".




• Write the Application ID and click "Create application".

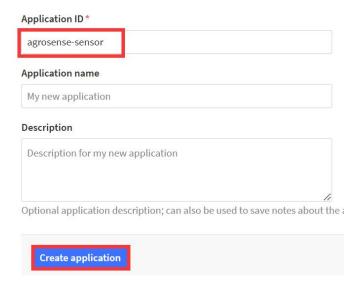


• Click "+ Register and device".

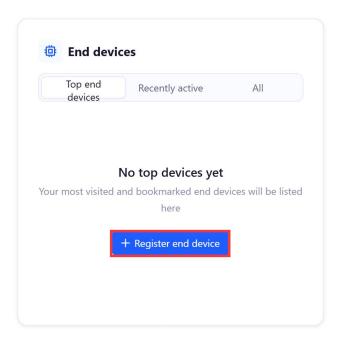

• Fllowing the steps, and input the DEV EUI/ APP EUI/ APP Key (notice: JoinEUI=APP EUI) and subsequently click on "Register end device" to complete the registration process.

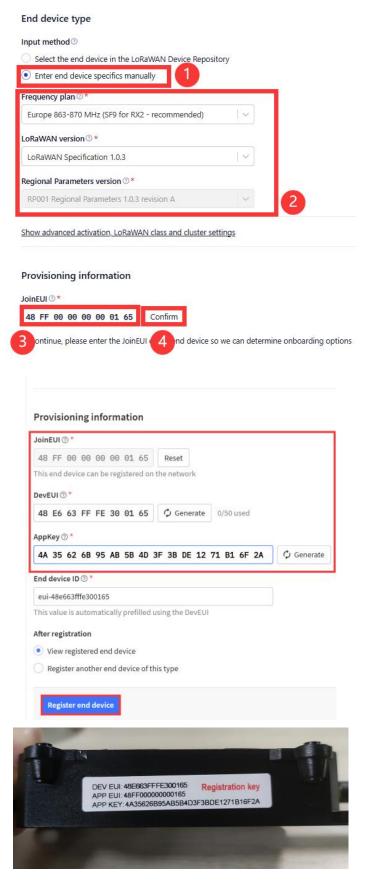

 Plug the battery and press RES button, you can see the device is connected successfully in the TTN.

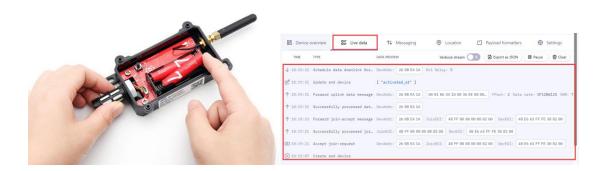

# 3.2 Decoder

Now, we need to decoder the data.



Data length	Data description	Value range	Explanation
	Data packet		
byte 0	sequence number		
	high 8 bits		Counting starts from 0 and increments, resetting back to 0 after reaching
	Data packet	0-0xFFFF	65535
byte 1	sequence number		
	low 8 bits		
	Soil Moisture		
byte 2	sensor bits 8 to		
	15		Soil relative humidity 12-bit ADC value
huto 2	Soil Moisture		
byte 3	sensor bits 0 to 7		
			The value is obtained by amplifying the data by 10 times, and the actual value
h	Datta maralta an		needs to be divided by 10 to convert to the actual battery voltage. The purpose
byte 4	Battery voltage		of multiplying by 10 is to retain one decimal place of the voltage value. For
			example, if the value is 0x21 = 33, then the battery voltage is 3.3V.

Example: 0x00, 0x08, 0x05, 0xC7, 0x1E

Data parsing:


Soil ADC value is 1479.

Battery voltage is 3.0V.

Know how to decode it after, we need to write it in code. (you can check it out on <u>Github</u>)

```
function decodeUplink(input) {
    // var num = input.bytes[0] * 256 + input.bytes[1]
    var bat = input.bytes[4] / 10.0
    var adc = input.bytes[2] * 256 + input.bytes[3]
    return {
        data: {
            field1: bat,
                 field2: adc,
            },
        };
}
```


• Select "Payload formatters" and follow the steps.

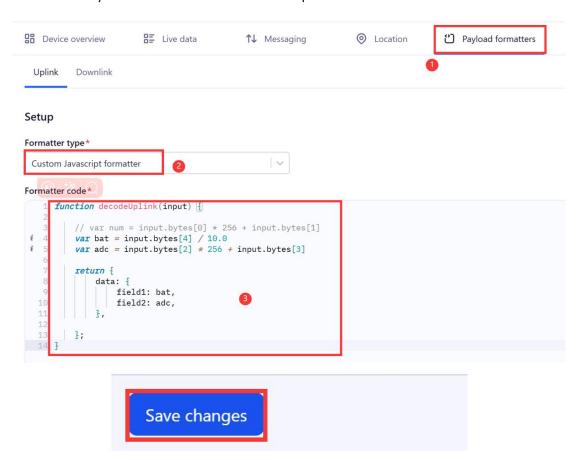


# 3.3 Application Server configuration

In the Application Server configuration, we need to create ThingSpeak channel and get Channel ID and API Key, this is the key to our connection to TTN.

Login to the ThingSpeak. (Or register an account)

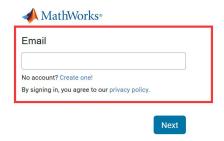

• Click "New Channel", fill in the Channel name and field names and click "Save Channel".

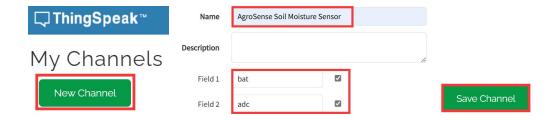


After successful creation, copy the Channel ID and API Key.




# 3.4 Connect the Network Server and Application Server


• In the TTN, click "integrations" --> "Webhooks" --> "+ Add webhook".

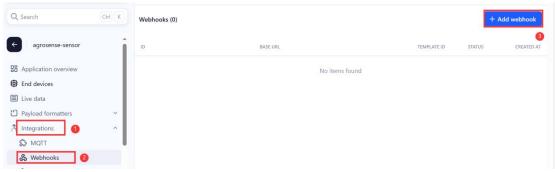


 Select "ThingSpeak", Fill in the Webhook ID and paste the Channel ID and API Key, click "Create ThingSpeak Webhook".

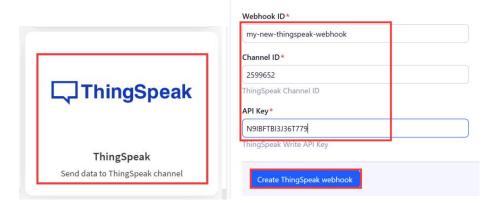

Press RST button, wait about a minute, you will successfully see the data in ThingSpeak.(You will recive the data every hour.)

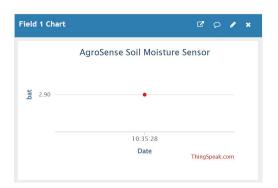


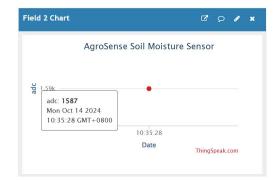

# 3.5 Change Time Interval (5-1440min)

1 . If you need to change time Interval (Default 60 minutes), you can click "Payload formatters-->Downlink" and follow the steps.

Formatter code you can find in Github.

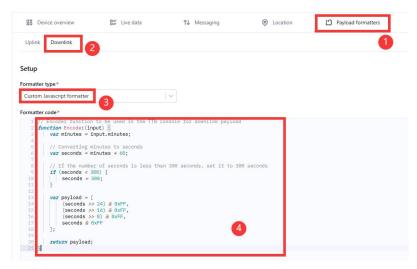


2、Click "Save changes".



3、Click "Messaging-->Schedule downlink".

**Note**: you must use this format:

{
 "minutes": 5
}

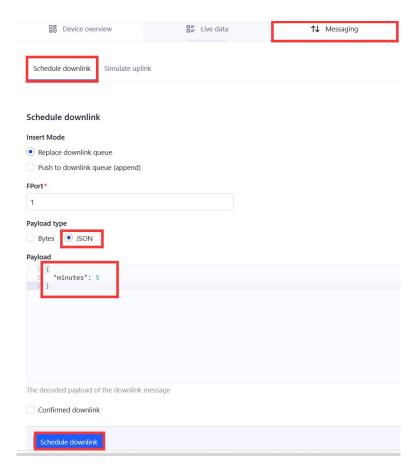

 $\mathbf{4}_{\times}$  The modified interval will be updated after the next data upload.