
BIGTREETECH

CB2User Manual

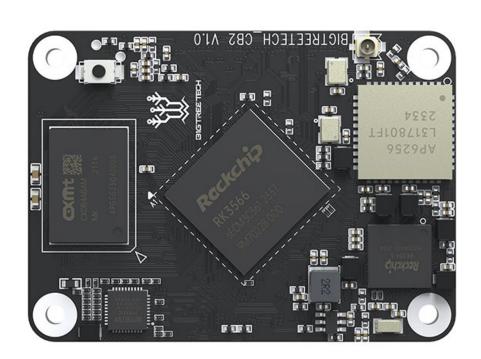

Revision Log

Version	Date	Revision
v1.00	April 24th, 2024	Initial Version
v1.01	May 28th, 2024	Added account information for minimal version system
v1.02	Jun 5th, 2024	Added 40 pin GPIO spread sheet and new calculation method

Table of Contents

Re	vision Lo	og	2
1.	Produc	ct Profile	4
	1.1.	Feature Highlights	4
	1.2.	Specifications	4
	1.3.	Dimensions	5
2. F	Periphera	ral Interface	6
	2.1.	Pin Description	6
3.	Interfac	ce Introduction	11
	3.1.	SW1 Button Explanation	11
	3.2.	40 pin GPIO	12
4.	Flashin	ng the System	13
	4.1.	Download the System Image	13
	4.2.	Write System to MicroSD Card	13
	4.3.	Writing System onto eMMC	14
	4.3	3.1. Using RKDevTool to Write the eMMC (Windows)	14
	4.3	3.2. Writing System onto eMMC Using a MicroSD Card	17
	4.4.	Erasing eMMC	19
	4.4	4.1. Using RKDevTool to Erase eMMC (Windows)	19
	4.4	4.2. Erasing eMMC After Booting from MicroSD Card	19
5. 8	System (Configuration	20
5.1	. Using	g Ethernet	20
	5.2.	Setting Up WiFi	20
	5.3.	Configuring Overlays	20
	5.4.	Configuring the Display	21
	5.5.	Using SPI to CAN	22
	5.6.	Using CSI Camera and Crowsnest Configuration	22
	5.7.	Using Bluetooth	23
	5.8.	Setting up 3.5mm Headphones Port	25
6.	SSH C	Connect to Device	27
7.	Precau	utions	28

1. Product Profile

The BIGTREETECH CB2, compatible with the Raspberry Pi CM4 form factor, uses two 100-pin high-speed board-to-board (BTB) connectors for easy and quick connection with external expansion baseboards. It offers an alternative with similar IO capabilities, including Micro HDMI, USB, Gigabit Ethernet, DSI, and CSI outputs. Additionally, it features 2.4G and 5G WiFi, Bluetooth 5.2, the Rockchip RK3566 SoC, 2GB LPDDR4 RAM, and 32GB eMMC storage.

1.1. Feature Highlights

CPU: Rockchip RK3566, quad-core Cortex-A55 @1.8GHz

· GPU: Mali-G52 1-Core-2EE

NPU: 0.8 TOPS NPU

RAM: 2GB/4GB LPDDR4

Onboard EMMC

- MIPI DSI display support
- Dual-lane MIPI CSI-2 Camera Interface
- 3x USB 2.0 ports, 1x USB 3.0 port
- PCle 2.1 1x1 Lane
- Gigabit Ethernet +433Mbps WiFi+BT5.0
- · 40-pin GPIO
- BTB socket that is completely identical to the one on the Raspberry Pi CM4

1.2. Specifications

· Dimensions: 40mm x 55mm


Mounting Dimensions: 33mm x 48mm

Input Voltage: 5V±5%/2A

Output Voltage: 3.3V±2%/100mAOutput Voltage: 1.8V±2%/100mA

WIFI: 2.4G/5G, 802.11 ac/a/b/g/n/ wireless standards

1.3. Dimensions

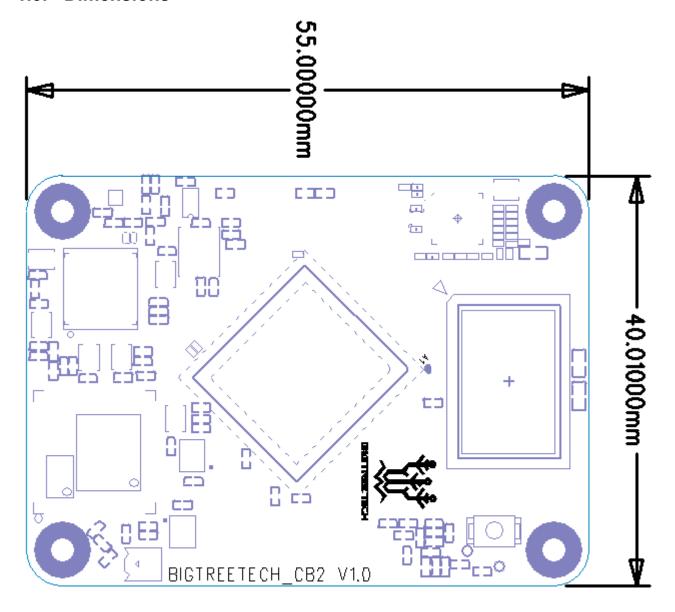

2. Peripheral Interface

2.1. Pin Description

PIN	Connector	Signal	Description
1	A connector_01	GND	
2	A connector_02	GND	
3	A connector_03	GBIT_MDI3_P	
4	A connector_04	GBIT MDI1 P	
5	A connector_05	GBIT_MDI3_N	
6	A connector_06	GBIT_MDI1_N	
7	A connector_07	GND	
8	A connector_08	GND	
9	A connector_09	GBIT_MDI2_N	
10	A connector_10	GBIT_MDI0_N	
11	A connector_11	GBIT_MDI2_P	
12	A connector_12	GBIT_MDI0_P	
13	A connector_13	GND	
14	A connector_14	GND	
15	A connector_15	1000M_LED	
16	A connector_16	CAMERAB_PDN_L	
17	A connector_17	100M_LED	
18	A connector_18	SPDIF_TX_M2	
19	A connector_19	PWM3_IR	
20	A connector_20	NC	
21	A connector_21	WORKING_LEDEN_H	
22	A connector_22	GND	
23	A connector_23	GND	
24	A connector_24	GPIO0_C3	
25	A connector_25	GPIO4_C2	
26	A connector_26	GPIO4_C5	
27	A connector_27	GPIO4_C3	
28	A connector_28	GPIO0_C0	
29	A connector_29	GPIO0_A0	
30	A connector_30	GPIO3_D7	
31	A connector_31	GPIO0_C1	
32	A connector_32	GND	
33	A connector_33	GND	
34	A connector_34	NC	
35	A connector_35	GPIO0_B3	
36	A connector_36	GPIO0_B4	
37	A connector_37	GPIO0_A6	
38	A connector_38	GPIO3_C3	
39	A connector_39	GPIO4_A2	
40	A connector_40	GPIO3_C2	

41	A connector_41	GPIO0_C4	
42	A connector 42	GND	
43	A connector_43	GND	
44	A connector_44	GPIO ₃ C ₁	
45	A connector_45	GPIO4 A3	
46	A connector_46	GPIO1_A1	
47	A connector_47	GPIO4_C6	
48	A connector_48	GPIO1_A0	
49	A connector_49	GPIO0_C0	
50	A connector_50	GPIO0_C7	
51	A connector_51	GPIO0_D0	DEBUG UART
52	A connector_52	GND	
53	A connector_53	GND	
54	A connector_54	GPIO3_A1	
55	A connector_55	GPIO0_D1	DEBUG UART
56	A connector_56	GPIO4_B3	
57	A connector_57	SDC0-CLK	SDCARD Clock signal
58	A connector_58	GPIO4_B2	
59	A connector_59	GND	
60	A connector_60	GND	
61	A connector_61	SDC0-D3	SDCARD Data3 signal
62	A connector_62	SDC0-CMD	SDCARD CMD signal
63	A connector_63	SDC0-D0	SDCARD Data0 signal
64	A connector_64	NC	
65	A connector_65	GND	
66	A connector_66	GND	
67	A connector_67	SDC0-D1	SDCARD Data1 signal
68	A connector_68	NC	
69	A connector_69	SDC0-D2	SDCARD Data2 signal
70	A connector_70	NC	
71	A connector_71	GND	
72	A connector_72	NC	
73	A connector_73	GPIO0_B5	
74	A connector_74	GND	
75	A connector_75	GPIO3_D2	
76	A connector_76	GPIO3_D3	SDCARD detect
77	A connector_77	VCC_5V	5V IN /2A
78	A connector_78	NC NC	
79	A connector_79	VCC_5V	5V IN /2A
80	A connector_80	GPIO4_B5	5) (1) ((0.5)
81	A connector_81	VCC_5V	5V IN /2A
82	A connector_82	GPIO4_B4	5) (1) : (2)
83	A connector_83	VCC_5V	5V IN /2A
84	A connector_84	3V3	3.3v out /200mA
85	A connector_85	VCC_5V	5V IN /2A

86	A connector_86	3V3	3.3v out /200mA	
87	A connector_87	VCC 5V 5V IN /2A		
88	A connector_88	1V8	1.8v out /100mA	
89	A connector_89	GPIO3 B4		
90	A connector_90	1V8	1.8v out /100mA	
91	A connector_91	NC		
92	A connector_92	PWRON		
93	A connector_93	RECOVERY		
94	A connector_94	NC		
95	A connector_95	GPIO4_A1		
96	A connector_96	NC		
97	A connector_97	GPIO4_A5		
98	A connector_98	GND		
99	A connector_99	PMIC_PWRON		
100	A connector_100	AP-RESET		
101	B connector_1	USB_OTG0_ID		
102	B connector_2	PCIE20_CLKREQn_M 2		
103	B connector_3	USB_OTG0_DM		
104	B connector_4	LINEOUTL		
105	B connector_5	USB_OTG0_DP		
106	B connector_6	LINEOUTR		
107	B connector_7	GND		
108	B connector_8	GND		
109	B connector_9	PCIE20_PERSTn_M2		
110	B connector_10	PCIE20_REFCLKP		
111	B connector_11	GPIO4_B0		
112	B connector_12	PCIE20_REFCLKN		
113	B connector_13	GND		
114	B connector_14	GND		
115	B connector_15	MIPI_CSI_RX_D0N		
116	B connector_16	PCIE20_RXP		
117	B connector_17	MIPI_CSI_RX_D0P		
118	B connector_18	PCIE20_RXN		
119	B connector_19	GND		
120	B connector_20	GND		
121	B connector_21	MIPI_CSI_RX_D1N		
122	B connector_22	PCIE20_TXP		
123	B connector_23	MIPI_CSI_RX_D1P		
124	B connector_24	PCIE20_TXN		
125	B connector_25	GND		
126	B connector_26	GND		
127	B connector_27	MIPI_CSI_RX_CLK0N		
128	B connector_28	USB3-DM		
129	B connector_29	MIPI_CSI_RX_CLK0P		

130	B connector_30	USB3-DP		
131	B connector_31	GND		
132	B connector_32	GND		
133	B connector_33	MIPI CSI RX D2N		
134	B connector_34		MIC1 IN	
135	B connector_35	MIPI CSI RX D2P		
136	B connector_36	MIC2 IN		
137	B connector 37	GND		
138	B connector_38	GND		
139	B connector_39	MIPI CSI RX D3N		
140	B connector_40	MIPI_CSI_RX_CLK1N		
141	B connector_41	MIPI_CSI_RX_D3P		
142	B connector_42	MIPI_CSI_RX_CLK1P		
143	B connector_43	GPIO4_A7		
144	B connector_44	GND		
145	B connector_45	HP_SNS		
146	B connector_46	USB2_HOST2_DP		
147	B connector_47	HP_DET_L		
148	B connector_48	USB2_HOST2_DM		
149	B connector_49	SARADC_VIN2		
150	B connector_50	GND		
151	B connector_51	HCEC	HDMI CEC	
152	B connector_52	USB3_HOST1_DP		
153	B connector_53	HHPD	HDMI Hotplug	
154	B connector_54	USB3_HOST1_DM		
155	B connector_55	GND		
156	B connector_56	GND		
157	B connector_57	MIPI_DSI_TX0_D0N		
158	B connector_58	USB3_HOST1_SSTXP		
159	B connector_59	MIPI_DSI_TX0_D0P		
160	B connector_60	USB3_HOST1_SSTXN		
161	B connector_61	GND		
162	B connector_62	GND		
163	B connector_63	MIPI_DSI_TX0_D1N		
164	B connector_64	USB3_HOST1_SSRXP		
165	B connector_65	MIPI_DSI_TX0_D1P		
166	B connector_66	USB3_HOST1_SSRXN	XN	
167	B connector_67	GND		
168	B connector_68	GND		
169	B connector_69	MIPI_DSI_TX0_CLKN	LIDAU TVO D. W	
170	B connector_70		HTX2P HDMI TX2 Positive.	
171	B connector_71	MIPI_DSI_TX0_CLKP	LIDAU TVO N	
172	B connector_72	HTX2N	HDMI TX2 Negative.	
173	B connector_73	GND		
174	B connector_74	GND		


175	B connector_75	MIPI_DSI_TX1_D0N	
176	B connector_76	HTX1P	HDMI TX1 Positive.
177	B connector_77	MIPI_DSI_TX1_D0P	
178	B connector_78	HTX1N	HDMI TX1 Negative.
179	B connector_79	GND	
180	B connector_80	GND	
181	B connector_81	MIPI_DSI_TX1_D1N	
182	B connector_82	HTX0P	HDMI TX0 Positive.
183	B connector_83	MIPI_DSI_TX1_D1P	
184	B connector_84	HTX0N	HDMI TX0 Negative.
185	B connector_85	GND	
186	B connector_86	GND	
187	B connector_87	MIPI_DSI_TX1_CLKN	
188	B connector_88	HTXCP	HDMI CLK Positive.
189	B connector_89	MIPI_DSI_TX1_CLKP	
190	B connector_90	HTXCN	HDMI CLK Negative.
191	B connector_91	GND	
192	B connector_92	GND	
193	B connector_93	MIPI_DSI_TX1_D2N	
194	B connector_94	MIPI_DSI_TX1_D3N	
195	B connector_95	MIPI_DSI_TX1_D2P	
196	B connector_96	MIPI_DSI_TX1_D3P	
197	B connector_97	GND	
198	B connector_98	GND	
199	B connector_99	HSDA	HDMI I2C
200	B connector_100	HSCL	HDMI I2C

3. Interface Introduction

3.1. SW1 Button Explanation

The EMMC will not start when holding the SW1 button for 3 seconds while powering up. Releasing the button allows for programming the EMMC using the RKDevTool.



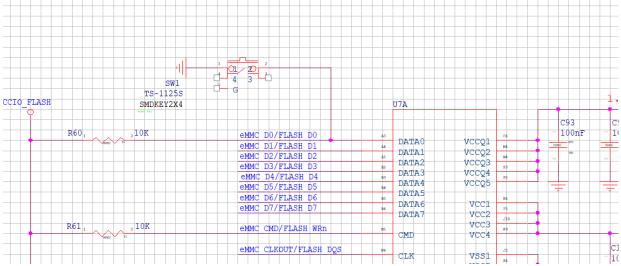

3.2. 40 pin GPIO

Pi 2/CB2				
40 pin GPIO				
3. 3v	5V			
GPI04_B2 (gpiochip4/gpio10)	5V			
GPI04_B3 (gpiochip4/gpio11)	GND			
GPI03_A1(gpiochip3/gpio1)	GPI00_D1(gpiochip0/gpio25)			
GND	GPI00_D0(gpiochip0/gpio24)			
GPI00_C7 (gpiochip0/gpio23)	GPI00_B0(gpiochip0/gpio8)			
GPI01_A0 (gpiochip1/gpio0)	GND			
GPI01_A1 (gpiochip1/gpio1)	GPIO4_C6(gpiochip4/gpio22)			
3. 3v	GPIO4_A3(gpiochip4/gpio3)			
GPI03_C1 (gpiochip3/gpio17)	GND			
GPI03_C2 (gpiochip3/gpio18)	GPI00_C4(gpiochip0/gpio20)			
GPI03_C3 (gpiochip3/gpio19)	GPIO4_A2(gpiochip4/gpio2)			
GND	GPI00_A6(gpiochip0/gpio6)			
GPI00_B4 (gpiochip0/gpio12)	GPI00_B3(gpiochip0/gpio11)			
GPI03_D6 (gpiochip3/gpio30)	GND			
GPI03_D7 (gpiochip3/gpio31)	GPI00_C1(gpiochip0/gpio17)			
GPI00_C0 (gpiochip0/gpio16)	GND			
GPI04_C5 (gpiochip4/gpio21)	GPI00_A0(gpiochip0/gpio0)			
GPI00_C3 (gpiochip0/gpio19)	GPIO4_C3(gpiochip4/gpio19)			
GND	GPI04_C2(gpiochip4/gpio18)			

The calculation method for GPIO pins is as follows:


4. Flashing the System

4.1. Download the System Image

Only use the image provided in the link: https://github.com/bigtreetech/CB2/releases

4.2. Write System to MicroSD Card


- 1. Download the balenaEtcher software from [https://www.balena.io/etcher/], install, and run it.
- 2. Insert the MicroSD card via a card reader.
- 3. Select your downloaded image.

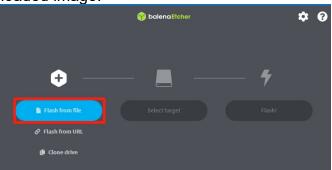

 Select the MicroSD card and click "Flash" (WRITE the image will format the MicroSD card. Be careful not to select the wrong storage device, otherwise the data will be formatted).



5. Wait for the process to complete.

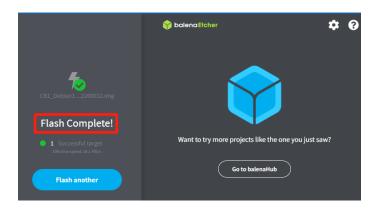


4.3. Writing System onto eMMC

4.3.1. Using RKDevTool to Write the eMMC (Windows)


Download and unzip RKDevTool from the GitHub repository (https://github.com/bigtreetech/CB2) to your computer. DO NOT insert a MicroSD card.

1. Turn the DIP switch 4 (USBOTG) and 3 (RPIBOOT) to the ON position to enter BOOT mode.

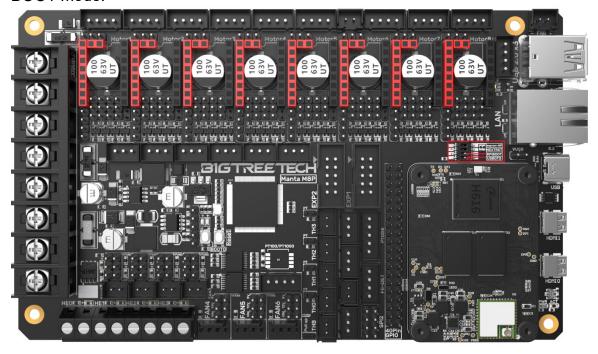

- 2. Then, connect the Type-C cable to the computer.
- 3. Install the driver:


(1) In "Device Manager", if you see "Unknown Device", it indicates that the computer is missing drivers.

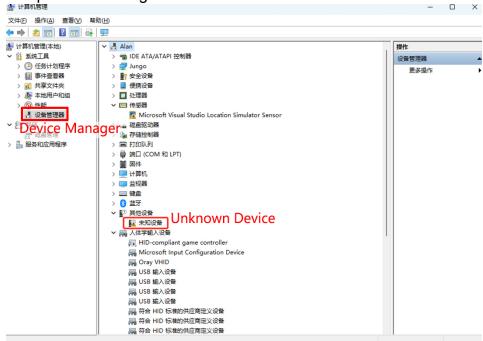


(2) Open the DriverAssistant tool in the downloaded RKDevTool folder, click "① Uninstall Driver", then click "② Install Driver" to ensure that the latest version of the driver is installed.



(3) After the installation is complete, hold down the "Recovery" button, replug the Type-C cable. "Device Manager" should now recognize a "Rockusb Device", indicating that the driver installation is successful.

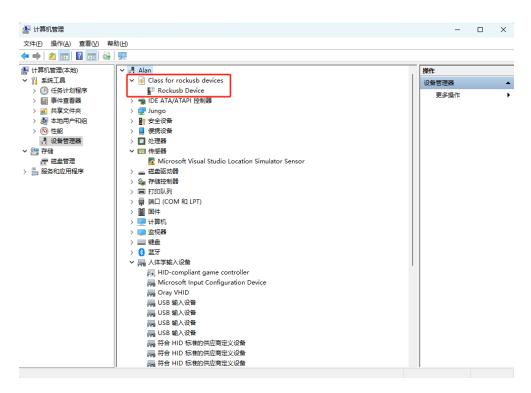

4. Open the "RKDevTool" software:

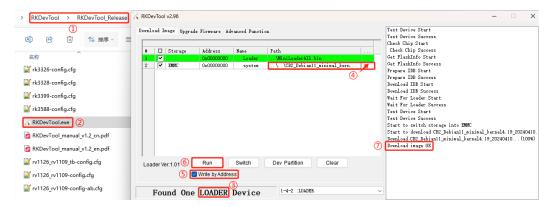

Note: The parameters in the software are set by default as shown in the image. Normally, you only need to set the "④ actual path of the .img system". If the parameters in your software do not match those in the image, manually adjust them to match.

#		Storage	Address	Name	Path
1	V		0x00000000	Loader	\MiniLoaderAll.bin
2	V	EMMC	0x00000000	System	actual path of the .img system


- ①Find the path where the downloaded RKDevTool is located.
- ②Open the RKDevTool tool.
- The software will recognize a "LOADER" or "MASKROOM" device.
- ④Select the system to be written (the OS image must be unzipped as a .img file beforehand; RKDevTool does not support directly writing compressed .xz files).
- ⑤Check "Write by Address".
- ⑥Click "Run" to start writting the system.
- The composition of the compositi
- 5. After writing is complete, toggle the USB OTG switch to the OFF position to boot normally. Note: Files on the eMMC cannot be accessed by the computer like those on a MicroSD card, so you cannot modify the system.cfg configuration file to set up the WiFi network. Instead, use an Ethernet cable or USB-to-UART connection to configure the terminal.

4.3.2. Writing System onto eMMC Using a MicroSD Card

- 1. First, write the system onto the MicroSD card. Then, insert the MicroSD card into the motherboard's card slot and wait for the system to boot.
- 2. Connect to the system terminal via Ethernet cable, WiFi, or USB to UART, and log in to the system.

login: biqu password: biqu


Execute the command sudo nand-sata-install. In the interface that pops up, select "2 Boot From eMMC - system on eMMC" and then select "OK"

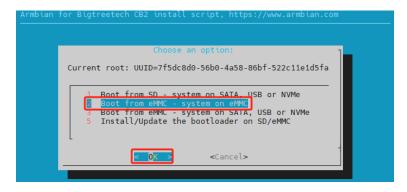




(1) Select "Yes" to start erasing and writing the system onto the eMMC.


(2) Choose the filesystem "1 ext4" and then select "OK".

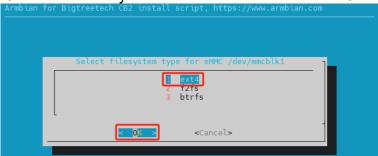

(3) Wait for the writing process to complete.

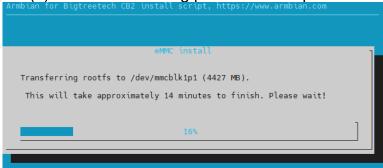

(4) Upon completion, you will be prompted whether to power off. Select "Power off" to shut down the system.

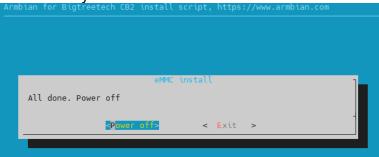

(5) After the system has powered down, disconnect the power supply, remove the MicroSD card, and then reconnect power. The system should now boot from the eMMC.

4.4. Erasing eMMC

When using a MicroSD card as the system card instead, it's best to erase the data on the eMMC to prevent the motherboard from booting from it by mistake.

4.4.1. Using RKDevTool to Erase eMMC (Windows)

- Refer to the steps in "4.3.1 Using RKDevTool to Write the eMMC (Windows)" to connect the motherboard to the computer.
- Open the "RKDevTool".



- 1) Find the path where the downloaded RKDevTool is located.
- 2 Open the RKDevTool.
- ③The software will recognize a "LOADER" device. If it recognizes "MASKROOM," it indicates there is no data in the eMMC, hence no erase operation is necessary.
- (4) Click "Advanced Function."
- ⑤Click "EraseAll" to begin erasing data from the eMMC.
- ⑥"Erasing sectors success" indicates the erasure is complete.

4.4.2. Erasing eMMC After Booting from MicroSD Card

- Refer to the steps in "4.3.2 Writing System onto eMMC Using a MicroSD Card" and log into the system terminal.
- 2. Run the command sudo mkfs /dev/mmcblk1 and then enter "y" to confirm.

```
biqu@BTT-CB2:~$ sudo mkfs /dev/mmcblk1 mke2fs 1.46.2 (28-Feb-2021) /dev/mmcblk1 contains a ext2 file system created on Wed Apr 24 06:30:21 2024 Proceed anyway? (y,N) y Discarding device blocks: done Creating filesystem with 7634944 4k blocks and 1908736 inodes Filesystem UUID: 51dbd34e-8aef-4f29-9f98-e535341ed141 Superblock backups stored on blocks: 32768, 98304, 163840, 229376, 294912, 819200, 884736, 1605632, 2654208, 4096000

Allocating group tables: done Writing inode tables: done Writing superblocks and filesystem accounting information: done biqu@BTT-CB2:~$
```


5. System Configuration

5.1. Using Ethernet

Ethernet is plug-and-play and requires no additional setup.

5.2. Setting Up WiFi


After the system image has been written, the MicroSD card will have a FAT32 partition recognized by the computer. In this partition, there is a "system.cfg" file. Open it and replace "Your SSID" with your actual WiFi name and "Your Password" with the actual password.

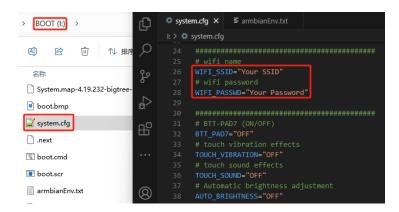

5.3. Configuring Overlays


Open the "armbianEnv.txt" file in the BOOT partition and set the values for overlays. The configuration file supports only one line of overlays at a time; if multiple overlays are enabled, only the last line will take effect. If you need multiple overlays, place the contents of multiple configurations on the same line separated by a space. For example, if you need to use a DSI screen, MCP2515 SPI to CAN module, and I2C1 simultaneously:

overlays=dsi mcp2515 i2c1

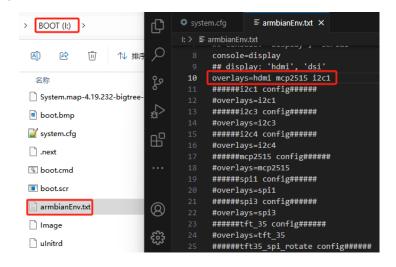

5.4. Configuring the Display

1. Open the "armbianEnv.txt" file in the BOOT partition.

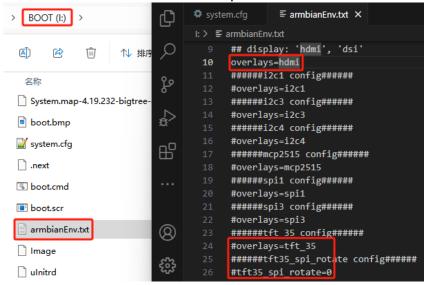


- 2. The default overlay is set to "hdmi," meaning the system uses an HDMI screen by default. This can be changed to match the actual screen being used, such as:
 - · "hdmi": HDMI screen
 - · "dsi": DSI screen
 - "tft_35": <u>SPI Screen</u>

For "tft_35", there is also a "tft35_spi_rotate" parameter for system-level screen rotation, with default "0" meaning no rotation, other options include "90", "180", "270".


Note: Only one screen type can be used at a time.

 To configure KlipperScreen, open the `system.cfg` file in the BOOT partition. Set the screen type with the parameter `ks_src`, and the rotation angle with `ks angle`.

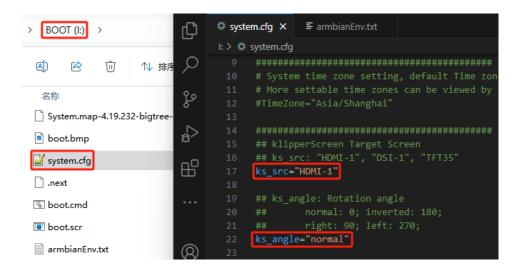

5.5. Using SPI to CAN

Open the "armbianEnv.txt" file in the BOOT partition and add "mcp2515" to the overlays configuration.

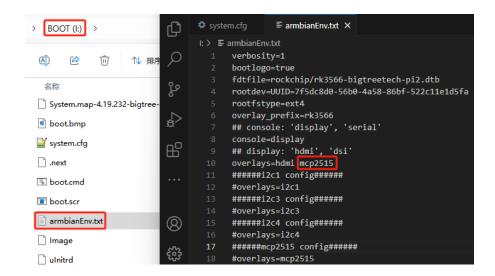

5.6. Using CSI Camera and Crowsnest Configuration

For both RPi v1.3 ov5647 and RPi v2 imx219 cameras, no specific configuration in "armbianEnv.txt" is required as they are plug-and-play. "crowsnest.conf" file configuration is as follows:

device: /dev/video0 # The CSI camera node is fixed as video0

custom_flags: --format=UYVY # The current system's CSI camera does not support the default YUYV, so it needs to be set to the supported UYVY format.

5.7. Using Bluetooth

1. To scan for Bluetooth devices, enter the following command, and a list of Bluetooth devices will appear as shown below:

bluetoothctl --timeout 15 scan on

```
TX errors 0 dropped 0 overruns 0 carrier 0 collisi
root@Hurakan:~# bluetoothctl --timeout 15 scan on
Discovery started
[CHG] Controller 50:41:1C:F1:1B:DD Discovering: yes
[NEW] Device 61:81:3F:1B:B0:79 61-81-3F-1B-80-79
[NEW] Device 67:06:15:E1:7A:62 67-06-15-E1-7A-62
[NEW] Device 78:77:40:B5:D8:02 78-77-40-B5-D8-02
[NEW] Device 61:C5:14:23:27:CC 61-C5-14-23-27-CC
[NEW] Device 61:C5:14:23:27:CC 61-C5-14-23-27-CC
[NEW] Device 66:D8:78:63:4F:CD 6F-D8-78-63-4F-CD
[NEW] Device 65:D8:78:63:4F:CD 6F-D8-78-63-4F-CD
[NEW] Device 51:22:49:FC:CF:C1 51-22-49-FC-CF-C1
[NEW] Device 73:B9:D8:2D:F1:08 73-B9-D8-2D-F1-08
```

2. Find your Bluetooth device, for example, if your device name is "HONOR xSport PRO", locate the corresponding Bluetooth MAC ID as shown below.

3. To connect to a Bluetooth device, enter the following command, connection success is shown as below

bluetoothctl connect E0:9D:FA:50:CD:4F

(1) If there's an issue while connecting, as shown below, please restart the Bluetooth device and repeat steps 1 and 2 to connect.

```
[CHG] Device 04:7A:08:19:E7:AF Class: 0x000a0110
[CHG] Device 04:7A:08:19:E7:AF Icon: computer
[CHG] Device 04:7A:08:19:E7:AF UIDS: 0000fdaa-0000-1000-8000-00805f9b34fb
[CHG] Device 04:7A:08:19:E7:AF UIDS: 00001105-0000-1000-8000-08005f9b34fb
[CHG] Device 04:7A:08:19:E7:AF UIDS: 00001105-0000-1000-8000-08005f9b34fb
[CHG] Device 04:7A:08:19:E7:AF UIDS: 00001106-0000-1000-8000-08005f9b34fb
[CHG] Device 04:7A:08:19:E7:AF UIDS: 00001106-0000-1000-8000-08005f9b34fb
[CHG] Device 04:7A:08:19:E7:AF UIDS: 00001112-0000-1000-8000-08005f9b34fb
[CHG] Device 04:7A:08:19:E7:AF UIDS: 0000112-0000-1000-8000-08005f9b34fb
[CHG] Device 04:7A:08:19:E7:AF UIDS: 0000114_6-0000-1000-8000-08005f9b34fb
[CHG] Device 04:7A:08:19:E7:AF UIDS: 0000114_6-0000-1000-8000-08005f9b34fb
[CHG] Device 04:7A:08:19:E7:AF UIDS: 00001200-0000-1000-8000-08005f9b34fb
[CHG] Device 04:7A:08:19:E7:AF UIDS: 00001200-0000-1000-8000-00805f9b34fb
[CHG] Device 04:7A:08:19:E
```

(2) If there's an issue while connecting, as shown below, please enter the following commands and then repeat steps 1 and 2:

bluetoothctl remove <u>E0:9D:FA:50:CD:4F</u> (Your Bluetooth device's corresponding MAC ID)

rfkill block bluetooth

sleep 3s

rfkill unblock bluetooth

pulseaudio -k

pulseaudio -start

```
[DEL] Device 40:60:97:F3:85:D6 40-60-97-F3-85-D6
root@bigtreetech-cb2:~# bluetoothctl connect E0:9D:FA:50:CD:4F
Attempting to connect to E0:9D:FA:50:CD:4F
[CHG] Device E0:9D:FA:50:CD:4F Connected: yes
[CHG] Device E0:9D:FA:50:CD:4F UUIDs: 0000110b-0000-1000-8000-00805f9b34fb
[CHG] Device E0:9D:FA:50:CD:4F UUIDs: 0000110c-0000-1000-8000-00805f9b34fb
[CHG] Device E0:9D:FA:50:CD:4F UUIDs: 0000110e-0000-1000-8000-00805f9b34fb
[CHG] Device E0:9D:FA:50:CD:4F UUIDs: 0000111e-0000-1000-8000-00805f9b34fb
[CHG] Device E0:9D:FA:50:CD:4F ServicesResqlved: yes
Failed to connect: org.bluez.Error.Failed
root@bigtreetech-cb2:~# bluetoothctl remove E0:9D:FA:50:CD:4F
[DEL] Device E0:9D:FA:50:CD:4F HONOR xSport PRO
Device has been removed
root@bigtreetech-cb2:~# rfkill block bluetooth
```

4. If you exit voice playback during the use of Bluetooth and cannot reuse it, manually delete the corresponding playback process. Use the ps command to view the process number, then use kill -9 process_number to delete the corresponding playback process.

```
biqu@bigtreetech-cb2:~$ ps

PID TTY TIME CMD

2094 pts/0 00:00:00 bash

2270 pts/0 00:00:00 aplay

2347 pts/0 00:00:00 ps

biqu@bigtreetech-cb2:~$ kill -9 2270
```

5.8. Setting up 3.5mm Headphones Port

1. Enter the command: aplay -l

Check for the corresponding sound card, as shown in the image (the sound card for the headphone port shown in the image corresponds to card 0).

```
[ General system configuration (beta): armbian-config ]

Last login: Wed Apr 10 02:18:28 UTC 2024 on tty1
root@bigtreetech-cb2:~#
root@bigtreetech-cb2:~#
root@bigtreetech-cb2:~#
root@bigtreetech-cb2:~#
root@bigtreetech-cb2:~# aplay -l

**** itst of PLX*PACK* Hardware Devices *****
card 0: rockchiprk809co [rockchip,rk809-codec], Subdevices: 1/1

Subdevice #0: subdevice #0
card 1: rockchipt [rockchip,bt], device 0: fe420000.i2s-bt-sco-pcm bt-sco-pcm-0 [fe420000.i2s-bt-sco-pcm bt-sco-pcm-0 [fe420000.i2s-bt-sco-pcm-0 [fe420000.i2s-bt-sc
```

2. Enter the command:

amixer -c 0 contents (0 represents the card 0 found in the previous aplay -l command)

Check the settings for playback and recording channels, as shown in the image.

```
root@bigtreetech-cb2:~#
root@b
```

3. Enter the command:

amixer -c 0 cset numid=1 3

Set the playback channel, as shown in the image.

```
root@bigtreetech-cb2:~#
root@bigtreetech-cb2:~#
root@bigtreetech-cb2:~#
root@bigtreetech-cb2:~# amixer -c 0 cset numid=1 3
numid=1,iface=MIXER,name='Playback Path'
; type=ENUMERATED,access=rw-----,values=1,items=11
; Item #0 '0FF'
; Item #1 'RCV'
; Item #2 'SPK'
; Item #2 'SPK'
; Item #3 'HP'
; Item #4 'HP_NO_MIC'
; Item #5 'BT'
; Item #6 'SPK_HP'
; Item #7 'RING_SPK'
; Item #8 'RING_HP'
; Item #9 'RING_HP_NO_MIC'
; Item #10 'RING_SPK_HP'
: values=3
root@bigtreetech-cb2:~#
```

4. Enter the command:

amixer -c 0 cset numid=2 1

Set the recording channel, as shown in the image.

```
: Values=3
root@bigtreetech-cb2:~#
root@bigtreetech-cb2:~# amixer -c 0 cset numid=2 1
numid=2,iface=MIXER,name='Capture MIC Path'
; type=ENUMERATED,access=rw-----,values=1,items=2
; Item #0 'MIC OFF'
; Item #1 'Main Mic'
: values=1
root@bigtreetech-cb2:~# ■
```

5. Enter the following command to play audio, with the audio file directory xxx and the audio file name xxxxx.wav:

```
aplay -D plughw:0,0 /xxx/xxxxx.wav
```

6. Enter the following command to record (where 10 represents recording for 10 seconds), storing the recording in directory xxx, file name xxxx.wav:

```
sudo arecord -Dhw:0,0 -d 10 -f cd -r 44100 -c 2 -t wav /xxx/xxxx.wav
```

7. Enter the following command to play the recording:

```
aplay -D plughw:0,0 /xxx/xxxx.wav
```

6. SSH Connect to Device


- 1. Install the SSH software Mobaxterm: https://mobaxterm.mobatek.net/download-home-edition.html
- 2. After powering on, wait for the system to boot, which typically takes about 1 to 2 minutes.
- 3. Once the device is connected to WiFi or an Ethernet cable is plugged in, it will automatically be assigned an IP address.
- 4. Access the router management interface to find the device's IP (it should be BTT-CB2 here).



5. Open Mobaxterm and click "Session", and click "SSH", inset the device IP into Remote host and click "OK" (Note: your computer and the device needs to be in the same network).



6. Login as: biqu password: biqu

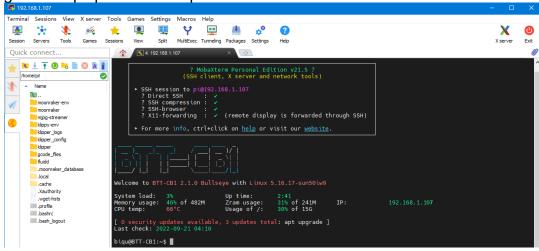

7. Precautions

- 1. About 10 seconds after powering on, the system enters the kernel phase. At this time, the blue light stays on, and the green light flashes continuously, indicating that the system is running normally.
- 2. Klipper OS:

Root administrator:

Login: root
Password: root

BIQU user: Login: biqu Password: biqu

Minimal OS:

Root administrator:

Login: root
Password: root

Minimal OS is a standard Armbian startup process, It only has the administrator account `root`. After the first boot, the system will guide the user to create their own ordinary account in the terminal.

- 3. The PCIe M.2 interface does not support hot-plugging; the solid-state drive must be connected in advance for the device to be recognized.
- 4. When booting from eMMC, do not insert a MicroSD card. When booting from a MicroSD card, it is necessary to erase the data in the eMMC.

If you need further resources for this product, you can find them at [GitHub](https://github.com/bigtreetech/). If you cannot find what you need, you may contact our after-sales support(service005@biqu3d.com).

If you encounter any other problems during use or have suggestions or feedback, please contact us. Thank you for choosing BIGTREETECH products.