

# **X20 and Ethos**

## **User Manual**

# Table of Contents

Main Views.....	1
The Top Bar.....	1
The Bottom Bar.....	1
The Widgets Area.....	1
User Interface and Navigation.....	2
Editing Controls.....	2
Virtual Keyboard.....	2
Number Value Controls.....	2
Options feature.....	3
System Setup.....	6
Overview.....	6
File Manager.....	6
Alerts.....	6
Date & Time.....	6
Display.....	6
Sound & Vibr.....	6
Battery.....	6
Hardware.....	6
Sticks.....	6
Wireless.....	6
Info.....	6
File Manager.....	7
Alerts.....	10
Silent Mode Check.....	10
Main Battery Check.....	10
RTC Battery Check.....	10
Inactivity.....	10
Date and Time.....	11
24 Hour time.....	11
Display seconds.....	11
Date.....	11
Time.....	11
Time Zone.....	11
Auto Adjust from GPS.....	11
Display.....	12
Brightness.....	12
Wake up.....	13
Sleep.....	13
Shutdown LCD during sleeping.....	13
Style.....	14
Language.....	14
Top Toolbar.....	14
Sound & Vibr.....	15
Language.....	15
Main Volume.....	15
Audio Mode.....	15
Vibr Strength.....	16
Vibr. Mode.....	16
Vario.....	17
Battery.....	18
Main Voltage.....	18
Low Voltage.....	18
Display voltage range.....	18
RTC voltage.....	18

Hardware.....	19
Hardware check.....	19
Analogs calibration.....	20
Gyro calibration.....	20
Switch middle detect delay.....	20
Switches Settings.....	21
Pots/Sliders Settings.....	22
Home Keypad.....	22
ADC value inspector.....	23
Sticks.....	24
Channel Order.....	24
First four channels fixed.....	25
Wireless.....	26
Bluetooth Mode.....	26
Info.....	31
Firmware.....	31
Firmware Version.....	31
Date.....	31
Storage version.....	31
Sticks.....	31
Internal Module.....	31
Receiver.....	32
External Module.....	32
Model Setup.....	33
Overview.....	33
Model Select.....	33
Edit Model.....	33
Flight Modes.....	33
Mixer.....	33
Outputs.....	33
Timers.....	33
Trims.....	33
RF System.....	34
Telemetry.....	34
Checklist.....	34
Logic Switches.....	34
Special Functions.....	34
Curves.....	34
Trainer.....	34
Device Config.....	35
Model Select.....	36
Adding a New Model.....	36
Selecting a Model.....	37
Edit model.....	38
Flight Modes.....	39
Flight Mode Management.....	40
Mixer.....	42
Aileron, Elevator, Rudder Mixer.....	43
Throttle Mixer.....	46
Predefined Mixes.....	48
Outputs.....	52
Outputs Setup.....	53
Timers.....	54
Name.....	55
Mode.....	55
Alarm/Start Value.....	55
Countdown Mode.....	55

Haptic.....	55
Countdown Start.....	55
Countdown Step.....	55
Active Condition.....	56
Reset.....	57
Persistent.....	57
Trims.....	58
Trim Mode.....	58
Extended Trims.....	59
Independent Trim per Flight Mode.....	59
Cross Trim.....	59
RF System.....	60
Owner Registration ID.....	60
Internal Module.....	60
External Module.....	78
Telemetry.....	81
Smart Port telemetry.....	81
Access Telemetry.....	82
Telemetry Settings.....	85
Checklist.....	92
Throttle Check.....	92
Failsafe Check.....	92
Pots Check.....	92
Switch Check.....	93
Logic Switches.....	94
Adding Logic Switches.....	95
Logic Switches – Shared Parameters.....	101
Logic Switches – Use with Telemetry.....	102
Special Functions.....	103
Special Functions.....	104
Curves.....	109
Expo.....	110
Function.....	110
Custom.....	113
Trainer.....	115
Trainer Mode = Master.....	115
Trainer Mode = Slave.....	118
Device Config.....	119
Programming Tutorials.....	120
Initial radio setup example.....	120
Step 1. Charge the radio and flight batteries.....	120
Step 2. Calibrate the hardware.....	120
Step 3. Perform the Radio System setup.....	120
Basic Fixed Wing Airplane example.....	122
Step 1. Confirm System settings.....	122
Step 2. Identify the servos/channels required.....	122
Step 3. Create a new model.....	122
Step 4. Review and configure the mixes.....	125
Step 5. Configure the Outputs.....	130
Step 6. Introduction to Flight Modes.....	133
Step 7. Add a VFR alert.....	134
Step 8. Set up a LiPo battery timer.....	136
Step 9. Add a mix for retracts.....	137
'How To' section.....	138
1. How to set up a low battery voltage warning.....	138
2. How to set up a battery capacity warning using a Neuron ESC.....	140
3. How to set up a battery capacity warning using a calculated sensor.....	142

4. How to create a model for SR8/SR10.....	145
5. How to reorder channels eg for SR8/SR10.....	146
6. How to configure a Butterfly mix.....	149

# Main Views

Ethos allows the user considerable flexibility in what is displayed in the Main Views. Initially only the basic information shown below is displayed, until the user customizes or adds views and widgets to be displayed. Note that up to eight Main Views may be defined.

All Main Views share the top and bottom bars. Please refer to the Configure Screens section for details on configuring the views.

## The Top Bar


The top bar displays the model name on the left, and RSSI, sound volume and radio battery status on the right. Touching the time, speaker and battery icons will bring up the relevant Date & Time, Sound & Vibr. and Battery control panels.

## The Bottom Bar

The bottom bar has four tabs for accessing the top level functions, i.e from left to right: Home, Model Setup, Configure Screens, and System Setup. The system time is displayed on the right.

## The Widgets Area

The middle area of the Main Views consists of widgets which may be configured to display images, timers, telemetry data, radio values etc. The default main screen has a widget on the left for a model image and three widgets for timers, as well as displaying the trims and pots. The widgets are user configurable to display other information. Once multiple screens have been configured, they can be accessed using a touch swipe gesture or navigation controls.

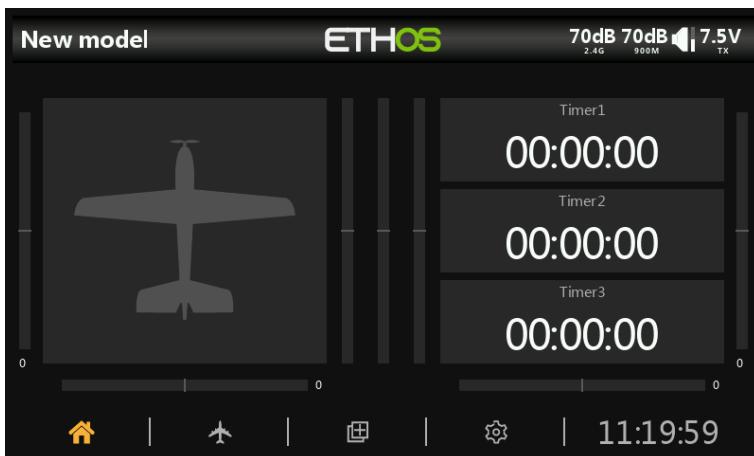

# User Interface and Navigation

The X20/X20S has a touch screen, making the user interface quite intuitive. Touching the Model Setup (Airplane icon), Configure Screens (Multiple Screens icon), and System Setup (Gear icon) tabs take you directly to those functions, which are described in those sections of the manual. They can also be accessed using the [MDL], [DISP] and [SYS] keys respectively.


Touching the system time on the right of the bottom bar takes you to the Date & Time section, allowing you to set the time and date.

Touching the speaker or battery icons in the top bar will bring up the relevant Sound & Vibr. and Battery control panels.

## Editing Controls

### *Virtual Keyboard*


Ethos provides a virtual keyboard for editing text fields.

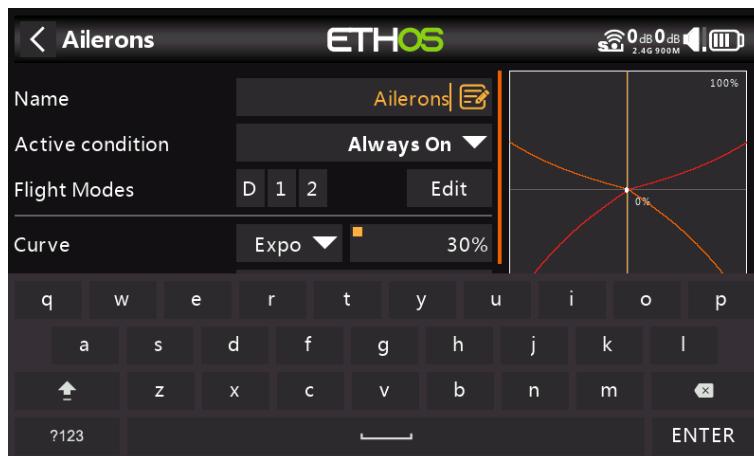

Simply touch on any text field (or click [ENT]) to bring up the keyboard.


Touch the '?123' or 'abc' key to toggle between alpha and numeric keypads. There is also a Caps lock for entering uppercase letters.

### *Number Value Controls*

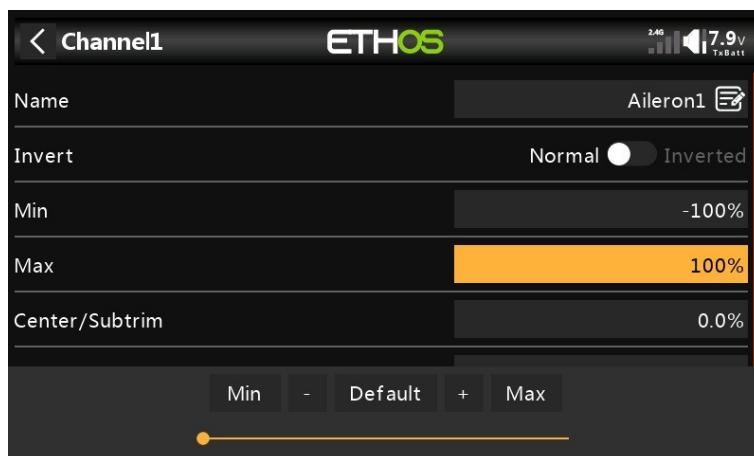

When touching a Number Value a dialog pops up with keys for setting the value to Min, Default or Max, and also 'plus' and 'minus' keys for incrementing or decrementing the value. In addition, the slider across the bottom allows for the rotary encoder output per click to be


adjusted from 1:1 or fine on the left, and coarse on the right. The slider may also be adjusted with the rotary encoder while the [Page] key is held down.

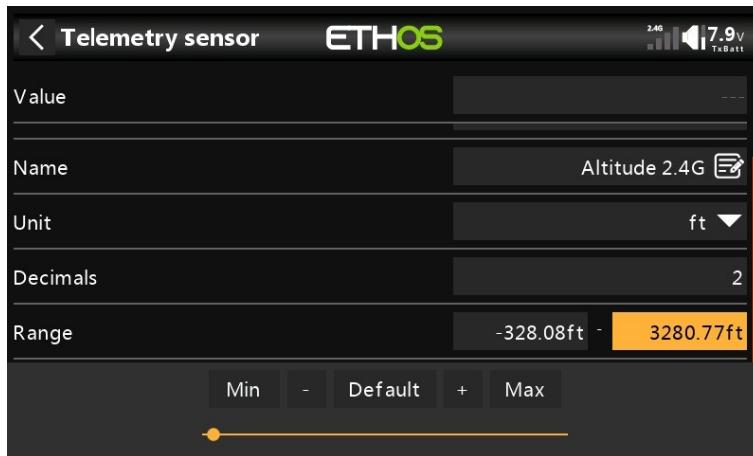

Another example is a Telemetry Range value, which can be edited in a similar way.


## Options feature

Ethos has a very powerful 'Options' feature. Almost anywhere a value or source is expected, a long press of the Enter key will bring up an Options dialog.

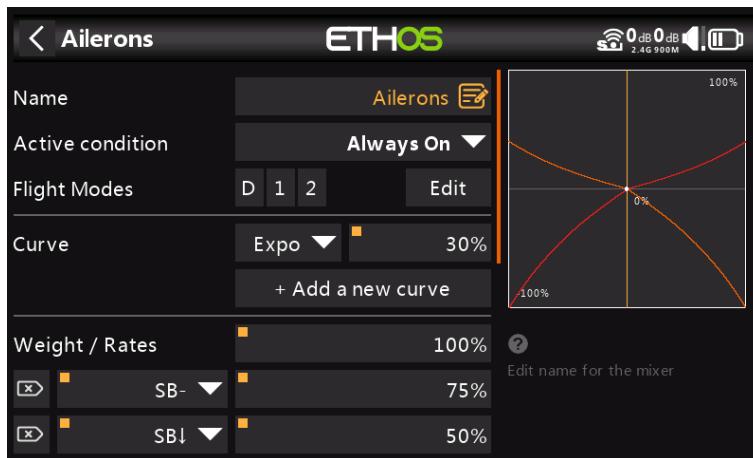


Fields with this feature can be identified by the square dot in the top left corner of the field.

### Value options

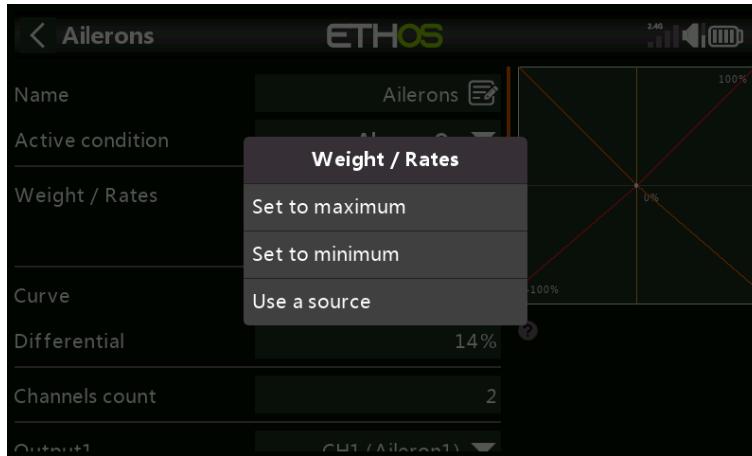


The Value Options dialog shows which parameter is being configured. In this example you have the choice of setting the Weight/Rates to maximum or minimum, or to use a source. Using a source like a Pot would allow the Weight/Rates to be adjusted in flight.

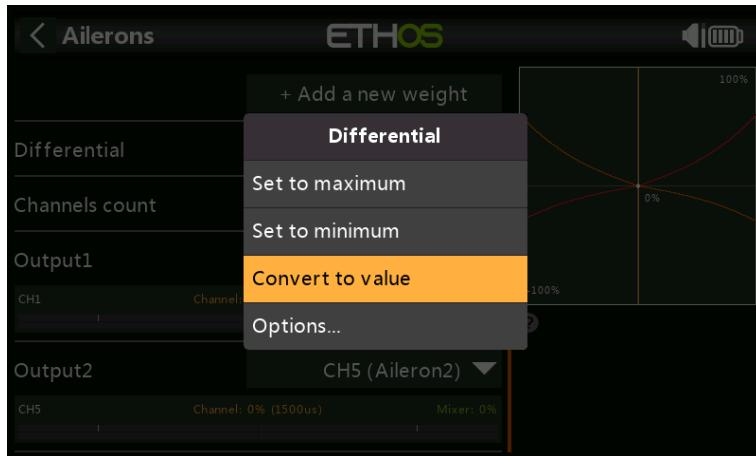

If you click on a Value field that has already been changed to use a source, a dialog pops up allowing you to convert the source's current value to a fixed value. Clicking on 'Options' will bring up options for the source, see below.

### **Source Options**

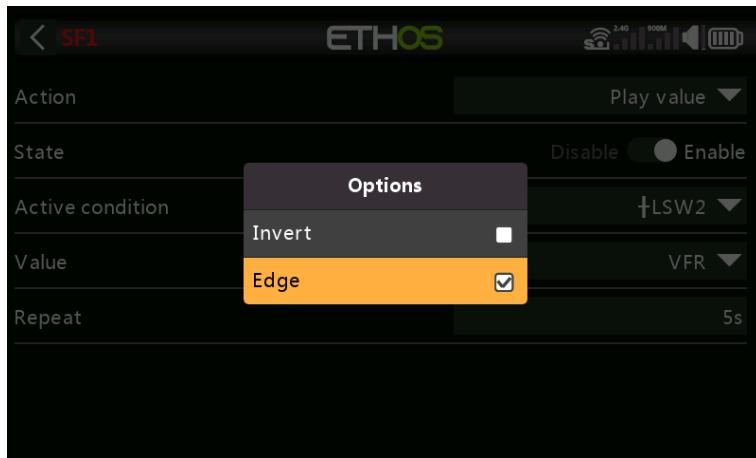

#### **Invert**


Invert allows a source such as a switch position to be negated or inverted. For example instead of being active when switch SA is up, it would be active when switch SA is NOT up, i.e. in either the mid or down positions.

#### **Edge**

You can select the 'Edge' option if you need a one-time action when the source transitions from False to True. Only the transition is acted upon, not the True or False state.

Please refer to the X20 and Ethos thread on [rcgroups.com](http://rcgroups.com) for more details and discussion on the use of this new feature.

### Sensor Options

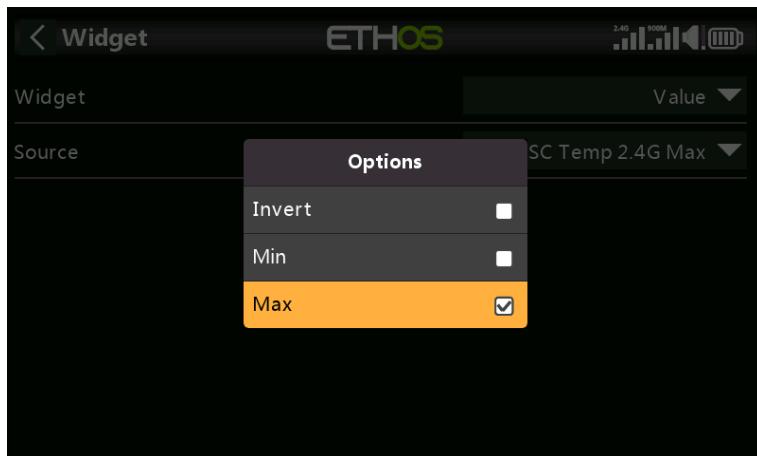

On a Telemetry source the Options dialog allows the sensor to be inverted, or its maximum or minimum value to be used. Some sensors have additional options specific to that sensor.

# System Setup

The System setup menu is used to configure those parts of the radio system's hardware that are common to all models, and is accessed by selecting the Gear tab along the bottom of the screen. Conversely, model specific setup is performed in the Model menu, which is accessed by selecting the Airplane tab along the bottom of the screen.

Please note that the settings to determine whether the internal or external RF module is used are model specific, so these are handled in the 'RF system' section of the Model menu.

## Overview

### ***File Manager***

The File Manager is for managing files and for access to flash firmware to the TD-ISRM, external S.Port, OTA and external modules.

### ***Alerts***

Configuration of system sound, vibration and battery alerts.

### ***Date & Time***

Configuration of the system clock and time display options.

### ***Display***

For configuring the menu style, system language, and LCD Display attributes such as brightness and backlight.

### ***Sound & Vibr***

Configuration of sound and vibration options and the vario options.

### ***Battery***

Configuration of battery management settings.

### ***Hardware***

This section allows checking of the hardware physical input devices, and analogs and gyro calibration. It also allows the switch type definitions to be changed.

### ***Sticks***

Configuration of the Stick Mode, and the default channel order. The 4 stick controls can also be renamed.


### ***Wireless***

Configuration of the Bluetooth module.

### ***Info***


System information for firmware version, gimbals types and RF modules.

## File Manager

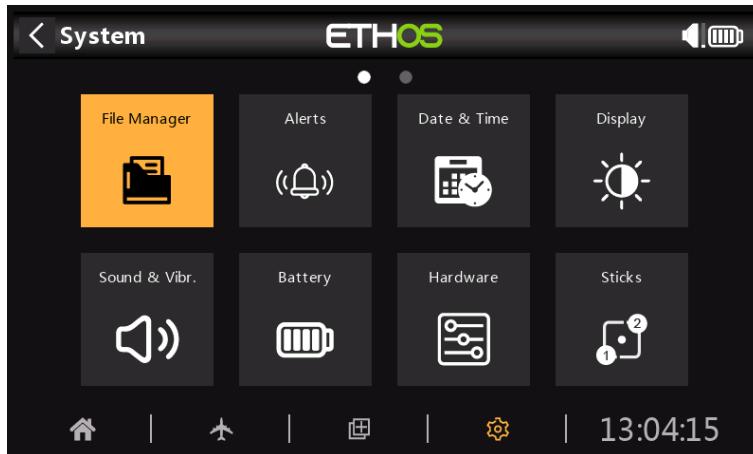

The File Manager is for managing files and access to flash firmware to the TD-ISRM, external S.Port, OTA and external modules.

Note that when updating the system firmware, the files in the flash drive and SD card may also need updating.

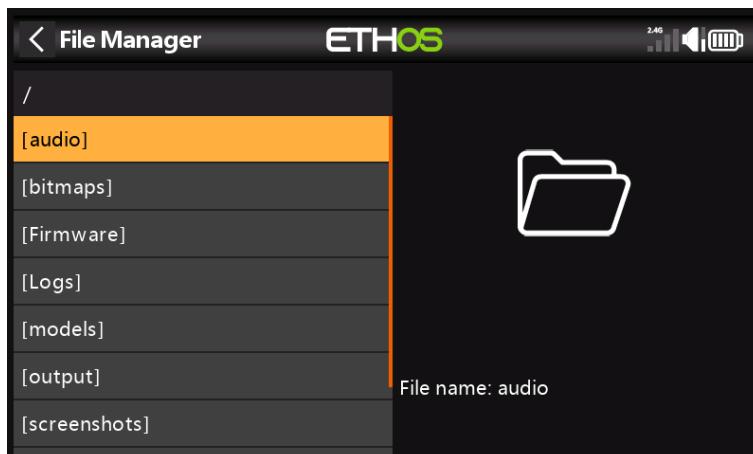

Tap on File Manager to open the file explorer. The top level of folders are:

### ***audio/***

USB drive path: SD Card (drive letter)/audio/

This folder is for user sound files, which can be played by the 'Play track' Special Function. Refer to the Model / Special Functions section. The format should be 16kHz or 32kHz PCM linear 16 bits or alaw (EU) 8 bits or mulaw (US) 8bits.


### ***audio/en/system***

USB drive path: SD Card (drive letter)/audio/en/system

This folder is for system sound files, e.g.

hello.wav	The 'Welcome to Ethos' greeting
bye.wav	This is not provided yet by Ethos, but you can add your own goodbye WAV file.

Tap on the [audio] folder to view the folder contents.

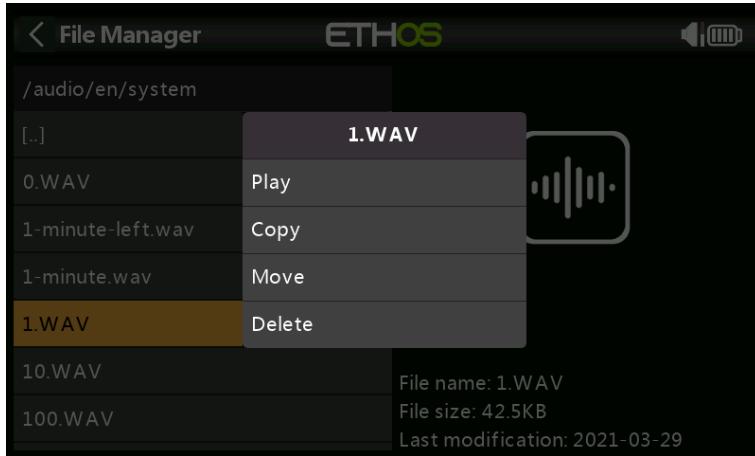

Tap on a WAV file, and select the Play option to listen to it.

The files may also be copied, moved or deleted.

### ***bitmaps/***


#### ***user/***

This folder is for user model images. Image size for the main X20 screen is 300x280 and 180x166 for the X10.

USB drive path: SD Card (drive letter)/bitmaps/user/

### ***Firmware***

Firmware updates for the X20 Internal TD-ISRM RF module, external modules and other devices like receivers etc. are stored here. They can then be flashed from here via external S.Port or OTA (Over The Air). The new firmware must be copied to the Firmware folder after placing the X20 in boot-loader mode and connecting to a PC via USB.

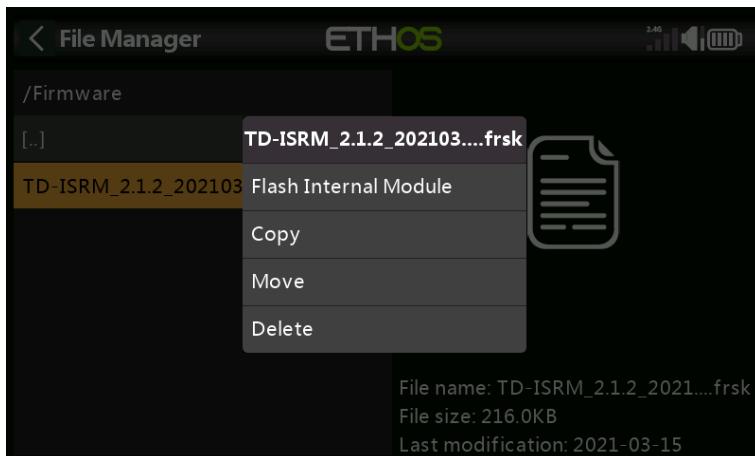

Tap on the Firmware folder to view the firmware files that have been copied to this folder. Then tap on the Flash option in the popup dialog.

The files may also be copied, moved or deleted.

### ***Logs***

Date logs are stored here.

USB drive path: SD Card (drive letter)/Logs/

***models/***

The radio stores model files here. These files cannot be edited by the user, but may be backed up or shared from here.

USB drive path: SD Card (drive letter)/models/

***output/***

USB drive path:

***screenshots/***

Screenshots created by the Screenshot Special Function are stored here. Refer to the Model / Special Functions section.

USB drive path: SD Card (drive letter)/screenshots/

***System Volume Information***

For system use only.


***radio.bin***

This file is created by the X20 system when first used and stores system settings. It must be deleted when the firmware update file firmware.bin is stored in the root folder of the SD card.

USB drive path: SD Card (drive letter)/radio.bin

USB drive path: SD Card (drive letter)/firmware.bin

## Alerts

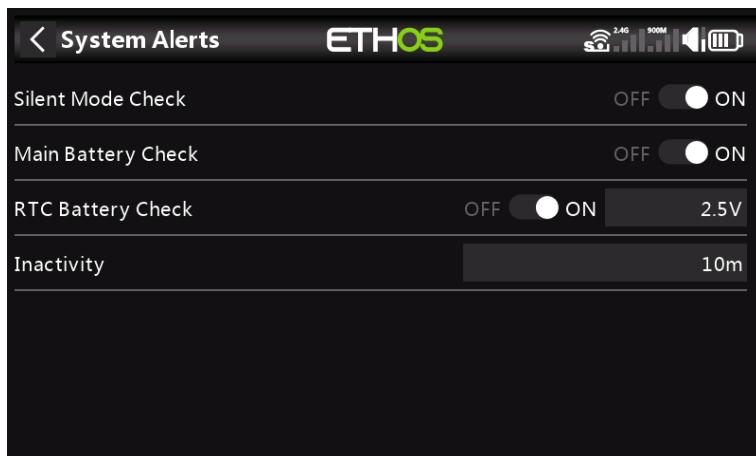

The System Alerts are:

### ***Silent Mode Check***

A Silent Mode Alert will be given at startup when Silent Mode Check is ON and the Audio Mode has been set to Silent in System / Sound & Vibr.

### ***Main Battery Check***

A speech 'Radio Battery is Low' Alert will be given when Main Battery Check is ON and the main radio battery is below the threshold set in the 'Low voltage' parameter in System / Battery.

### ***RTC Battery Check***

A speech 'RTC Battery is Low' Alert will be given when RTC Battery Check is ON and the RTC coin battery is below the threshold set in the 'RTC voltage' parameter in System / Battery. The default is 2.9V.

### ***Inactivity***

A speech 'No Activity for a Long Time' Alert will be given when the radio has not been used for longer than the 'Inactivity' time. The default is 10 minutes.

## Date and Time



The Date and Time settings are:

### ***24 Hour time***

The clock displays in 24 hour format when enabled.

### ***Display seconds***

The clock will display seconds when enabled.

### ***Date***

Should to the current date. This is used in the logs.

### ***Time***

Should to the current time. This is used in the logs.


### ***Time Zone***

Allows configuration of the user's time zone.

### ***Auto Adjust from GPS***

When enabled, the time and date will be automatically set from GPS data.

## Display

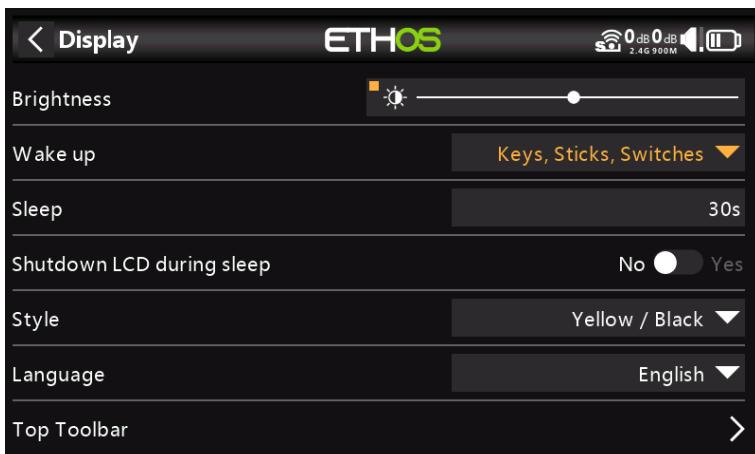


The LCD Display attributes can be configured here:


### **Brightness**

Use the slider to control the screen brightness, from left to right to set brightness from dark to bright.

### **Pot Option**

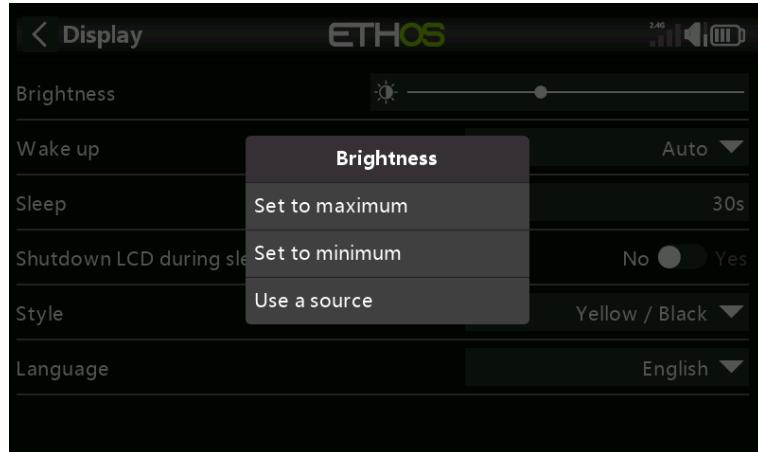


Long press on [ENT] when the bar is selected to bring up a dialog to set brightness to maximum or minimum, or to select a pot to use as brightness control.

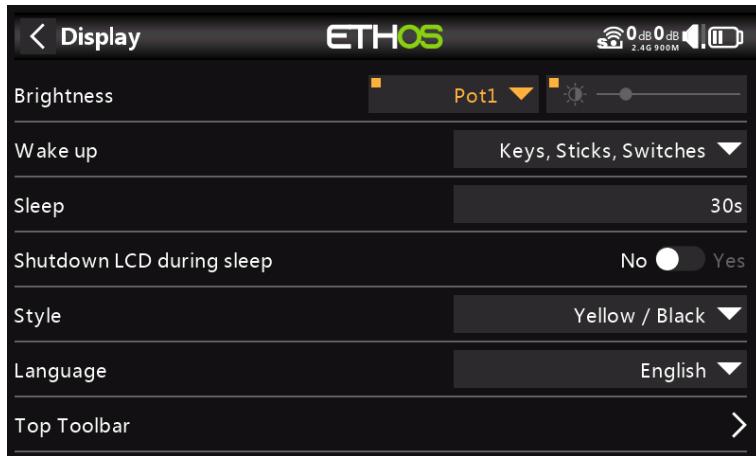

The above example shows brightness being controlled via Pot 1.

## ***Wake up***

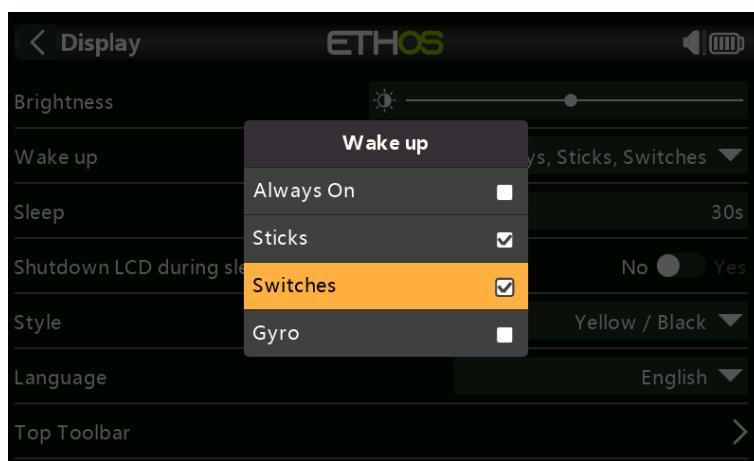

The screen backlight can be woken from the sleep state in accordance with one or more of the following options:

### ***Always On***

The backlight stays on permanently.

### ***Sticks***

The backlight turns on when sticks or keys are operated.

### ***Switches***

The backlight turns on when switches or keys are operated.

### ***Gyro***

The backlight turns on when you tilt the radio or when keys are operated.

Note that more than one option may be enabled.

## ***Sleep***

The length of inactivity before the backlight is turned off.

### ***Shutdown LCD during sleeping***

When enabled the LCD will go totally dark (not visible) during sleep mode, otherwise the LCD will still have some brightness so the display remains visible.

## **Style**

There are currently three menu color themes or styles available:

- Yellow/Black
- Orange/Black
- Black/White

Further themes will be made available with the evolution of ETHOS.


## **Language**

The following languages are supported for the display menus:

- cn
- cz
- de
- en
- fr

Ensure that you have installed the corresponding voice pack in your SD card to ensure the appropriate voice output.

## **Top Toolbar**

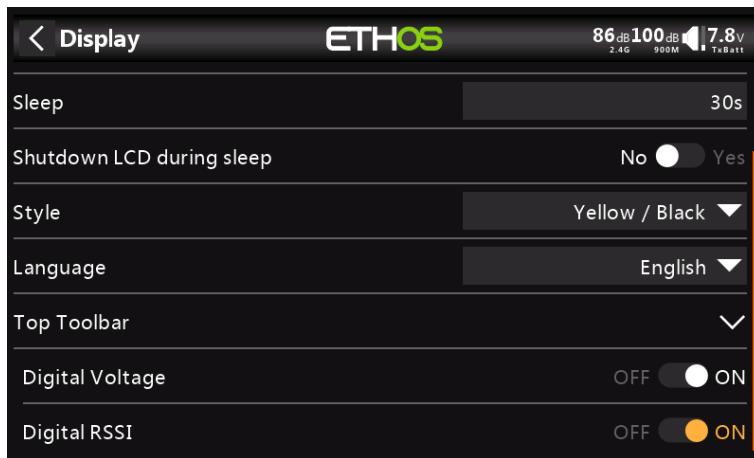



### **Digital Voltage**

The battery status in the Top Toolbar may be changed from the default bar display to display the radio battery voltage as a digital value instead.

### **Digital RSSI**

Similarly, the RSSI status may be changed from a bar display to a digital value for both 2.4G and 900M.

## Sound & Vibr

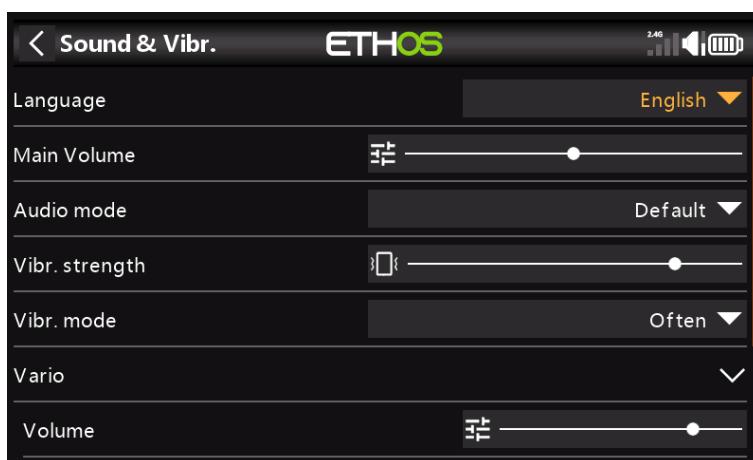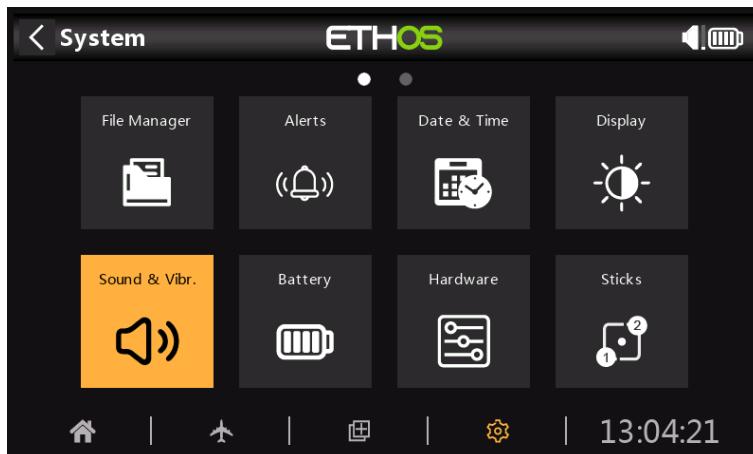

The Sound & Vibrations settings are:


### ***Language***

Supported languages are Chinese, Czech, German, English and French.

### ***Main Volume***

Use the slider to control the audio volume. Long press [ENT] allows a pot to be used. Beeps during adjustment assist in judging the volume.

### ***Audio Mode***

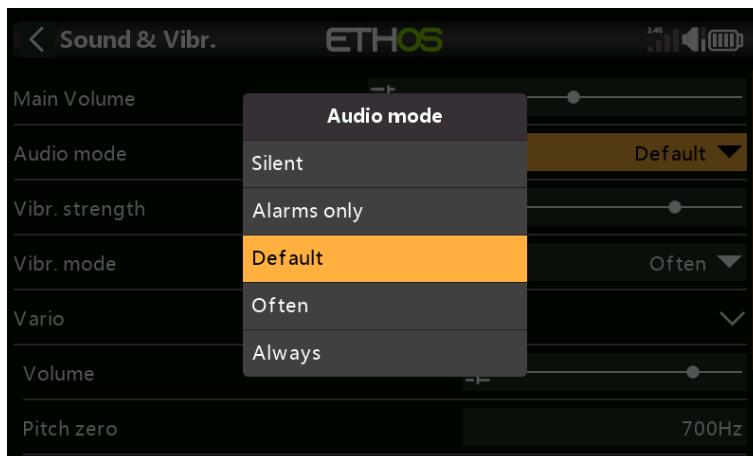

***Silent***

No audio. Note that there will be an Alert given at startup if the Silent Mode Check in System / Alerts is ON.

***Alarms only***

Only Alarms will be output on audio.

***Default***

TBA

***Often***


TBA

***Always***

There will also be beeps when the menu is navigated.

***Vibr. Strength***

Use the slider to control the haptic vibration strength.

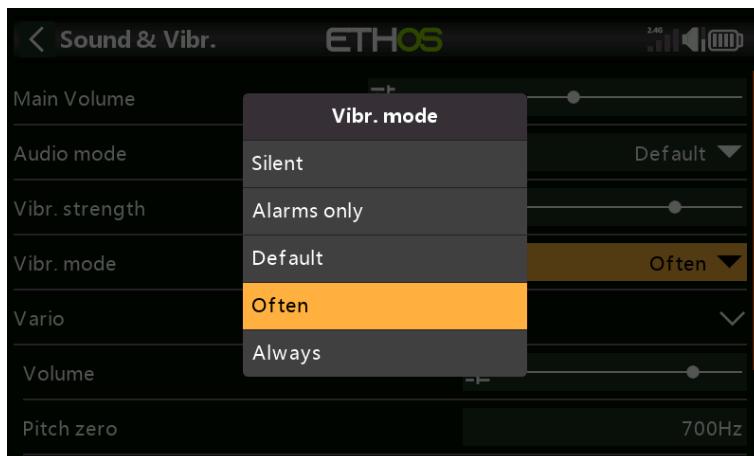***Vibr. Mode***

Similar to Audio Mode above.

## Vario



### **Volume**

The relative volume of the vario tone.

### **Pitch zero**

The tone pitch when the climb rate is zero.


### **Pitch max**

The tone pitch at maximum climb rate.

### **Repeat**

The delay between beeps at pitch zero.

## Battery

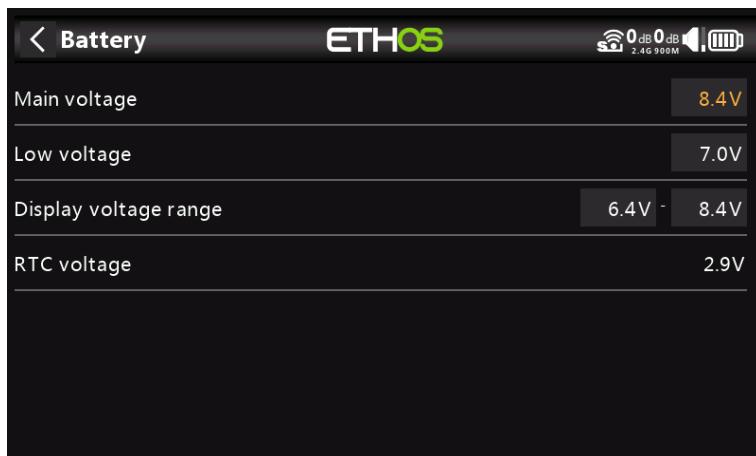

The Battery section is for calibrating the radio batteries and setting the alarm thresholds.

### **Main Voltage**

This is the nominal battery voltage. The default is 8.4V for a charged 2 cell lithium battery.

### **Low Voltage**

This is the alarm threshold voltage. The default is 7V.

A speech 'Radio Battery is Low' Alert will be given when Main Battery Check is ON in System / Alerts and the main radio battery is below the threshold set here.

### **Display voltage range**


These settings set the range of the graphical battery display in the top right of the screen. The default range limits for the built-in LiIon battery are 6.4 and 8.4V. Many pilots increase the bottom sensing voltage to trigger the low TX voltage alert earlier and prevent over discharging their TX battery.

If the battery is changed to a different type, then the limits must be set appropriately.


### **RTC voltage**

Shows the voltage of RTC (Real Time Clock) battery in the radio. The voltage is 3.0v for a new battery. If the voltage is below 2.7v please replace the battery inside the radio to ensure the clock runs properly.


## Hardware

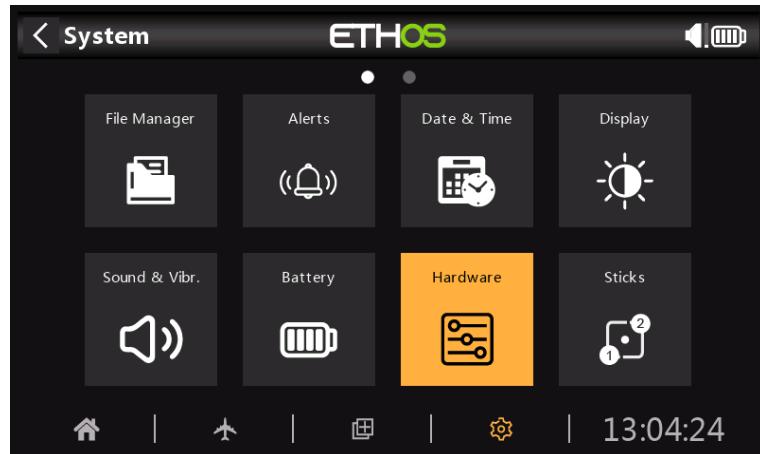

The Hardware section is used to test all inputs, perform analog and gyro calibration, and set switch types.

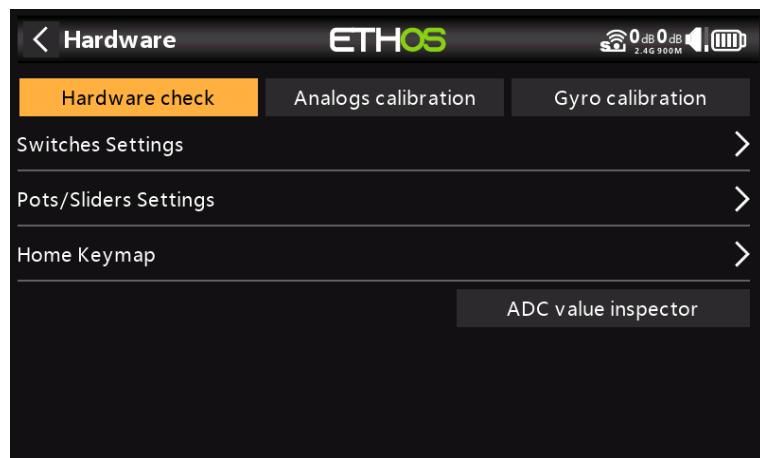

### ***Hardware check***

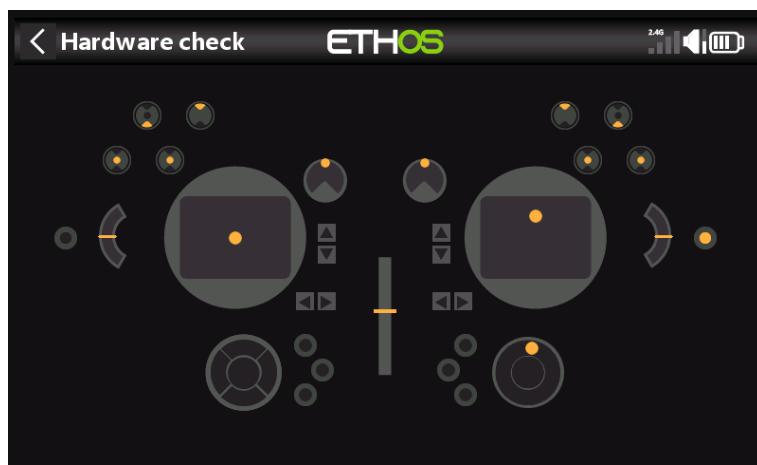


The Hardware check allows all the inputs to be checked for operation.

## **Analogs calibration**



Analogs calibration is performed so that the radio knows exactly where the centers and limits of each gimbal, pot, and slider are. It is automatically run at initial startup or after a firmware upgrade. It should be repeated after replacement of a gimbal, pot or slider.

## **Gyro calibration**


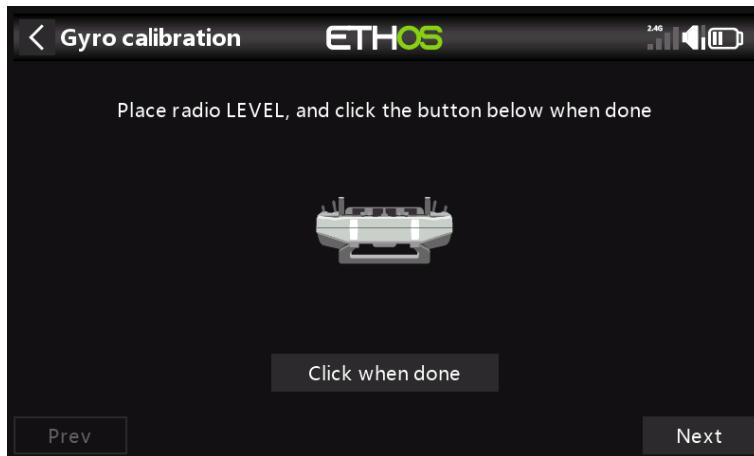


Gyro calibration can be performed so that the gyro sensor outputs respond correctly to tilting the radio. For example, the radio 'level' position would be the angle at which you normally hold the radio.

## **Switch middle detect delay**

This setting ensures that the switch middle position on three way switches is not detected when the switch is flipped from the up to the down position in one movement, and vice versa. It should only be detected when the switch stops in the middle position.

## Switches Settings

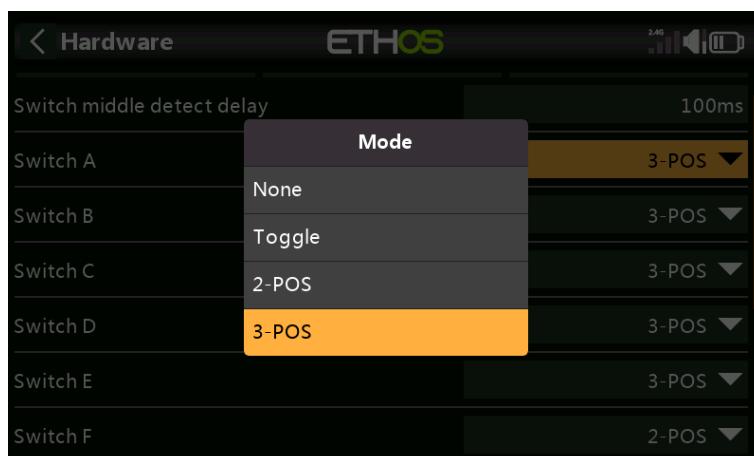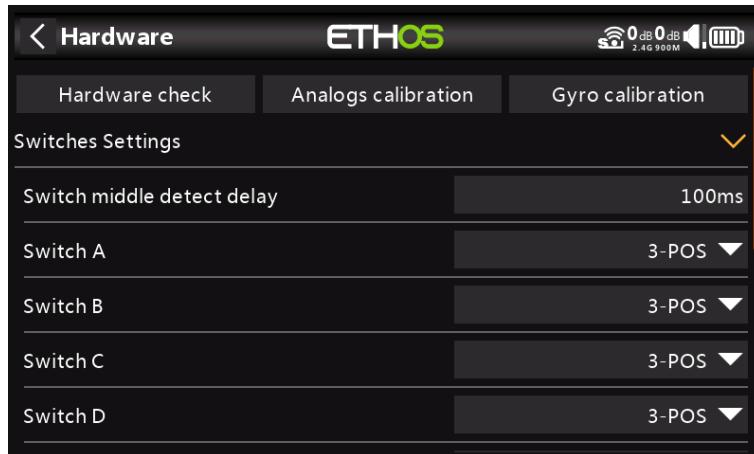

Switches A to J may be defined as:

- None
- Toggle (momentary)
- 2 POS
- 3 POS


This allows for switches to be swapped over, for example the toggle switch H could be swapped over with the 2 position switch F. Note that it may no be possible to replace a toggle or 2 position with a 3 position switch if the radio wiring does not allow for it.

## Pots/Sliders Settings




The pots and sliders can be given custom name.

## Home Keymap

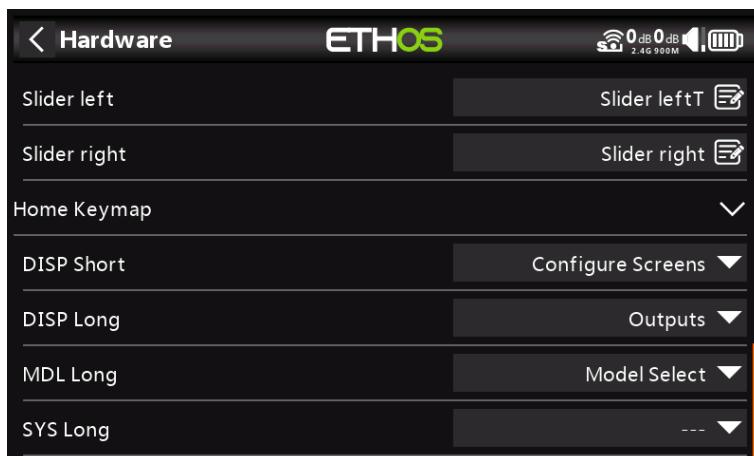

The [SYS], [MDL] and [DISP] (TELE on older models) home keys can be re-assigned to suit the user. For the [SYS] and [MDL] keys only the long-press options may be re-assigned, but for the [DISP] key both may be reassigned to one of the following options:

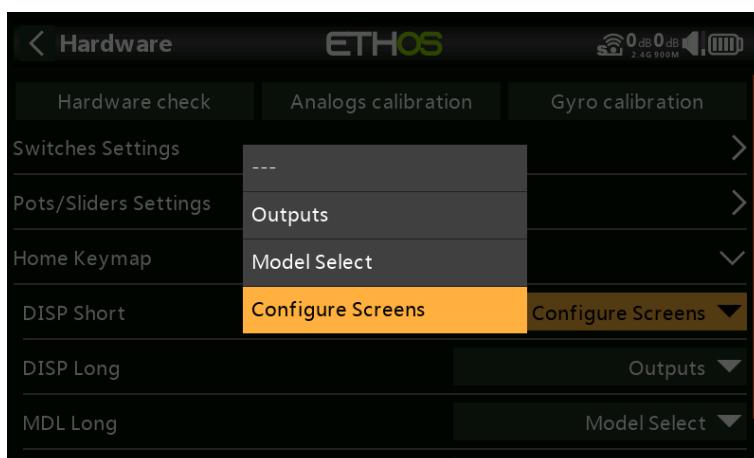


***ADC value inspector***

Shows the analog to digital conversion (ADC) values for the analog inputs read by the CPU.

1. Left stick horizontal
2. Left stick vertical
3. Right stick vertical
4. Right stick horizontal
5. Pot 1
6. Pot 2
7. Middle slider
8. Left slider
9. Right slider

## Sticks

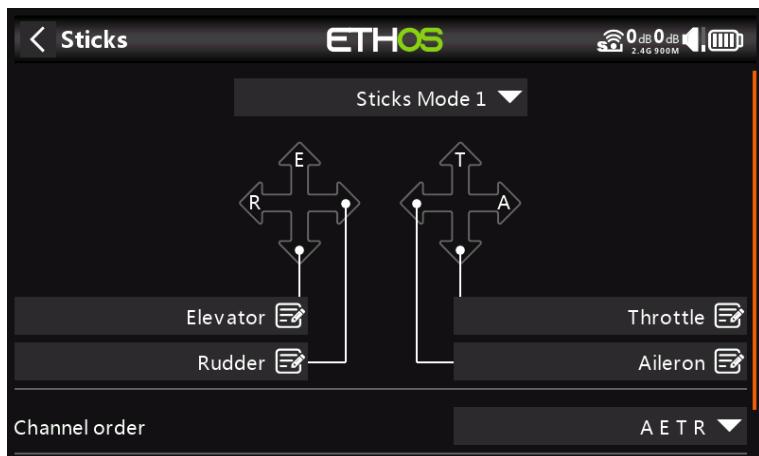


Select your preferred stick mode. Mode 1 has throttle and aileron on the right stick, and elevator and rudder on the left. Mode 2 has throttle and rudder on the left stick, and aileron and elevator on the right.

By default the sticks are named as listed above for the industry standard stick modes. They may be renamed as desired.



### **Channel Order**

The Channel Order defines the order in which the four stick inputs are inserted into the mixer when a new model is created by the wizards. The default order is AETR. If there are more than one of each type of surface, they will be grouped unless the first four channels are fixed, see below. For example, for 2 ailerons the channel order will be AAETR.

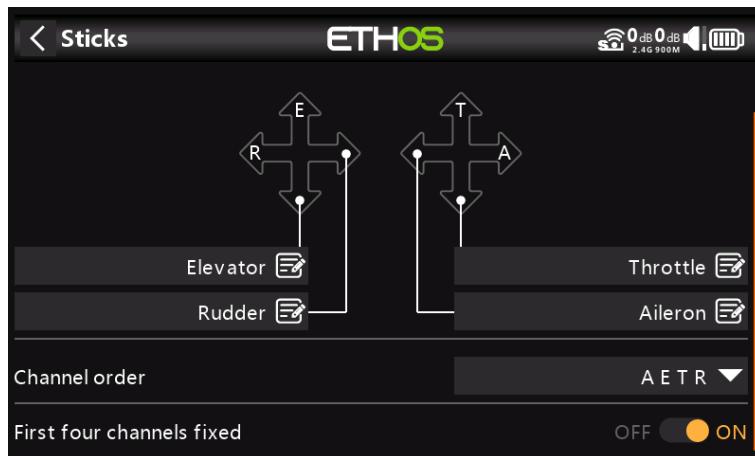**First four channels fixed**


When this option is enabled, then channel grouping will not occur on the first four channels. If the channel order is AETR, then the wizard will create a model suited to the SRx stabilized receivers. For example, a model with 2 Ailerons, 1 Elevator, 1 Motor, 1 Rudder and 2 Flaps will be created with a channel order of AETRAFF. If this option is not enabled, the channel order would be AAETRFF.

## Wireless

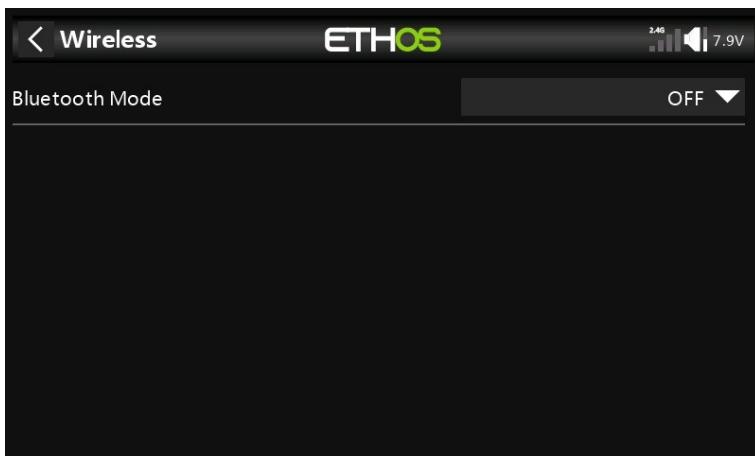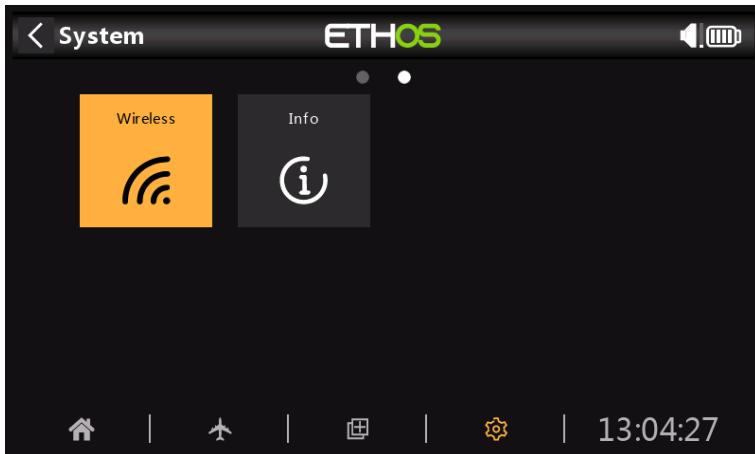

Touch Bluetooth Mode to bring up a dialog listing the Bluetooth options.


### ***Bluetooth Mode***

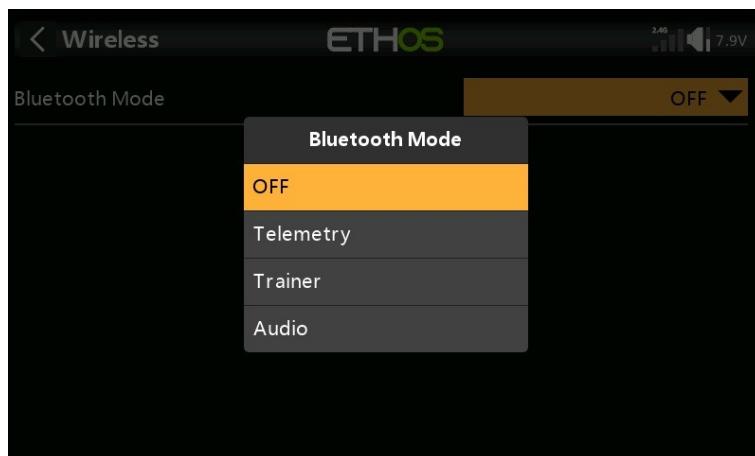

The X20 Bluetooth module can work in either Telemetry or Trainer modes, while the X20S has an additional Audio mode for relaying the audio to a Bluetooth device like a headset.


### ***Telemetry***

In Telemetry Mode the radio can work with the FrSky FreeLink App to display telemetry data on your mobile phone. The App can also be used to configure FrSky devices like the stabilized receivers.

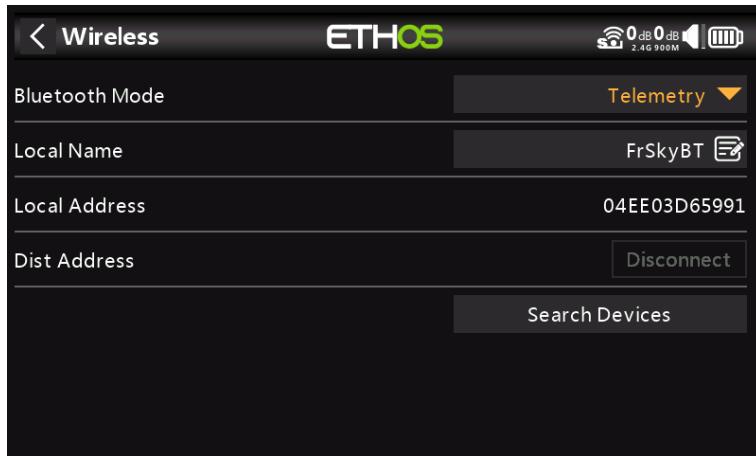

### **Trainer**

In Trainer Mode, the radio can be operated in Master or Slave mode to achieve the trainer function wirelessly. Refer to the Model / Wireless section to configure the radio as Master or Slave for the currently selected model.

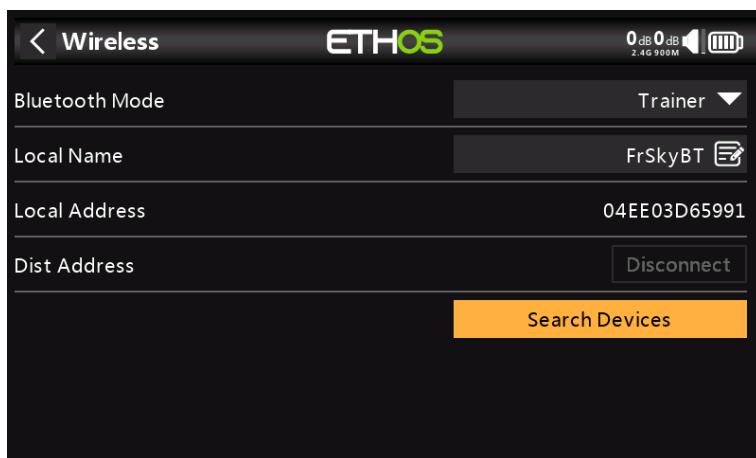

### **Local Name**

This is the local BT name that will be displayed in devices being connected. The default name is FrSkyBT, but may be edited here.

### **Local Address**


This is the local Bluetooth address of the radio.

### **Dist Address**


Once a Bluetooth device has been found and linked, the remote device's Bluetooth address is displayed here.

### **Search Devices**

The Search Devices button will be available if the Trainer Mode is Master (refer to the Model / Trainer section).

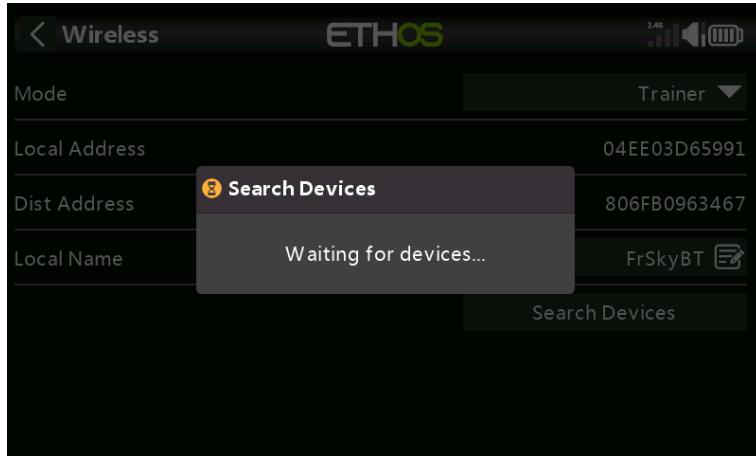


Tap on 'Search Devices' to put the radio into BT search mode.

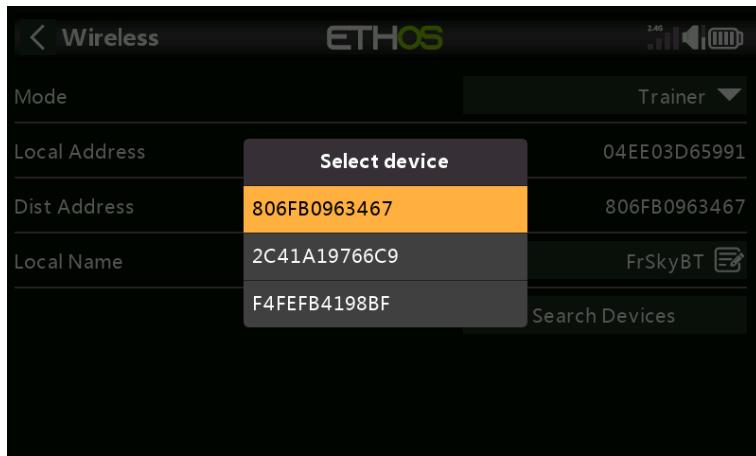


Found devices are listed in a popup dialog with a request to select a device. Select the BT address that matches the radio to be used as training mate.


### **Audio (X20S and X20HD models only)**

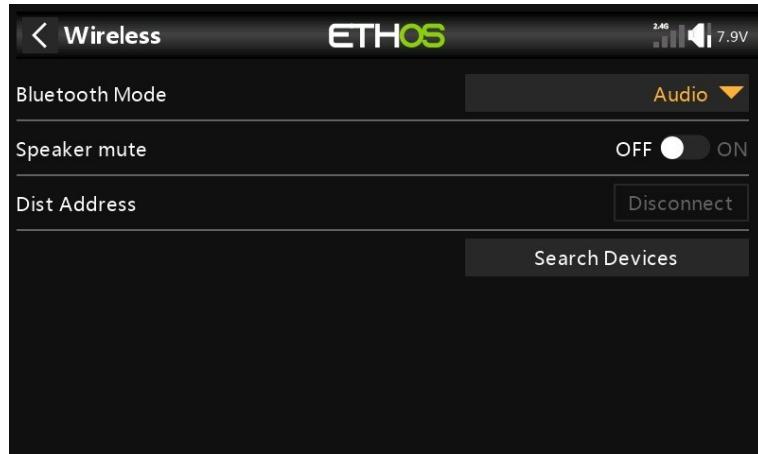


Touch 'Search Devices'.

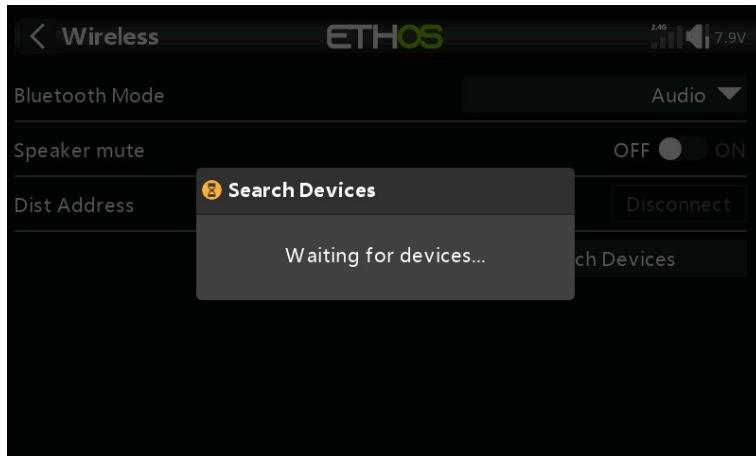


'Waiting for devices' displays. Turn on your Bluetooth device and place it into pairing mode.

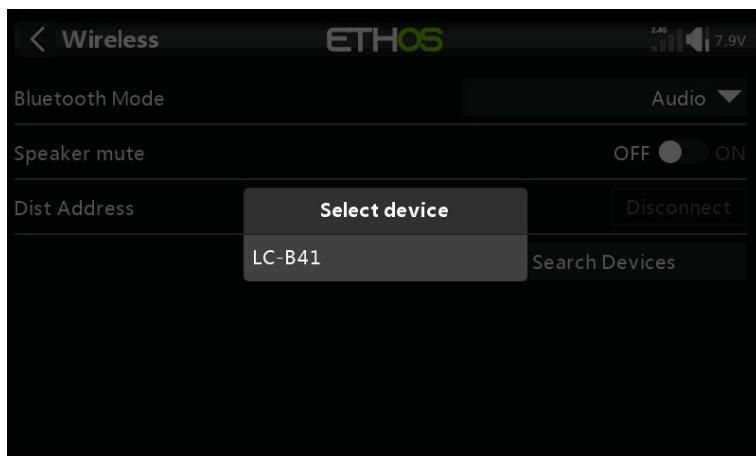


After the Bluetooth device is found, its name will be displayed. Touch it to select the device.

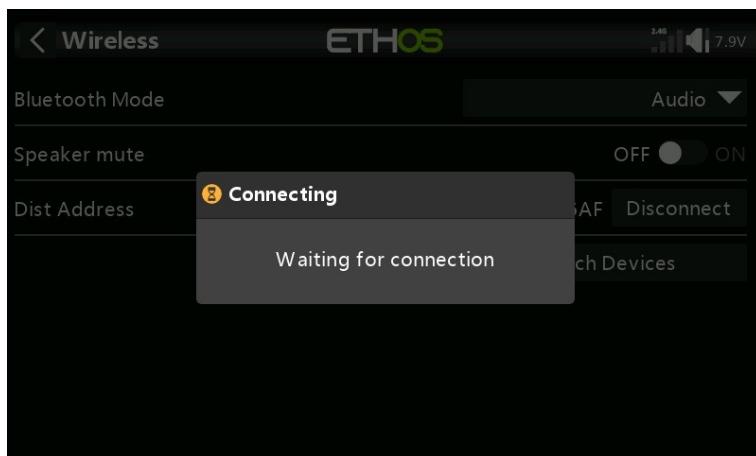

'Waiting for connection' displays.

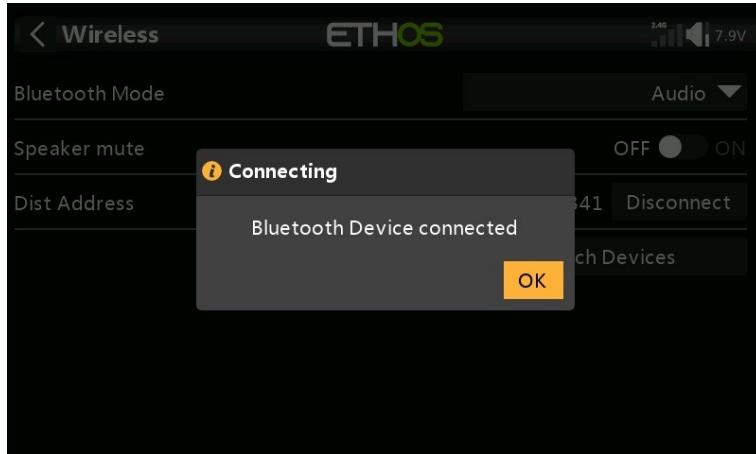


When the radio and device are paired, 'Bluetooth Device connected' displays. Touch OK.

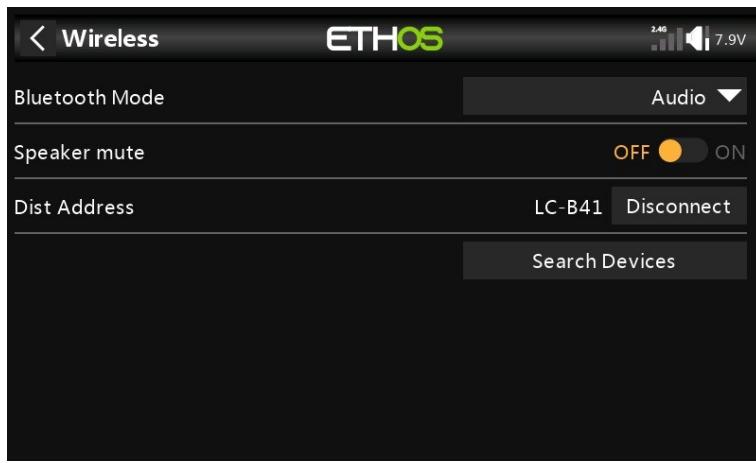

The Bluetooth screen will display again.

### ***Speaker Mute***


To mute the system speaker turn the mute to ON.

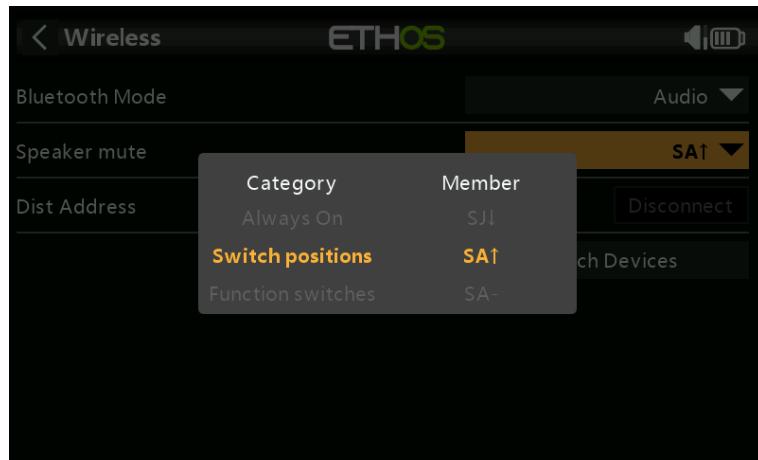

The mute function can also be assigned to a switch.

The X20S/X20HD system remembers the Bluetooth device. For normal operation power on the X20S/X20HD and then the Bluetooth device. The Bluetooth device will connect, taking a few seconds for the speaker mute to activate again.

## Info

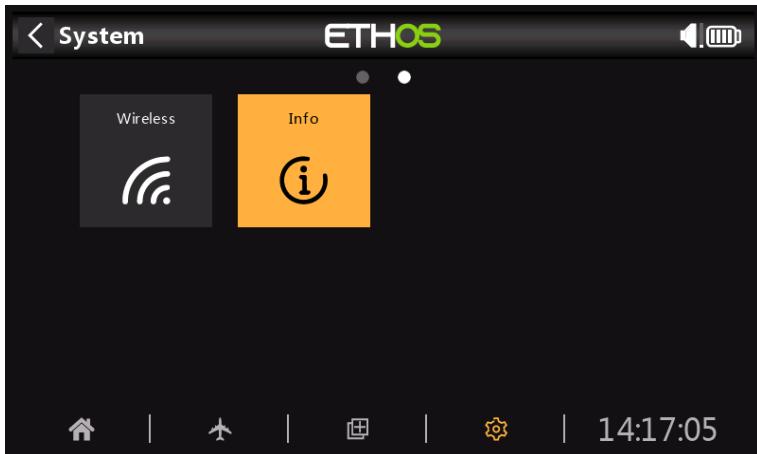

The Info page displays system firmware information, gimbals type, internal module firmware version, ACCESS receiver firmware and external module information.

Firmware	Ethos - X20
Firmware Version	1.0.10, FCC #4dbf211b
Date	Jul 29 2021, 16:20:52
Storage Version	0.0.9
Sticks	ADC
Internal Module	TD-ISRM
	HW: 1.4.0 FW: 2.1.8 (FCC)

### ***Firmware***

Ethos firmware, and radio type (X20).

### ***Firmware Version***

Current firmware version and type, e.g. FCC, LBT, or Flex.

### ***Date***

Current date and time.

### ***Storage version***

The storage version.

### ***Sticks***

The gimbal Hall sensor version installed. ADC is for analog.

### ***Internal Module***

Details of the internal RF module, including hardware and firmware versions.

Internal Module	TD-ISRM
	HW: 1.4.0 FW: 2.1.7 (FCC)
Receiver1	Archer-X
	HW: 1.3.0 FW: 2.1.7
External Module	OFF

Internal Module	TD-ISRM
	HW: 1.4.0 FW: 2.1.2 (FCC)
Receiver1	R9-MINI-OTA
	HW: 1.1.1 FW: 1.3.1
External Module	OFF

## ***Receiver***

Bound receiver details are shown after the Internal Module. Redundant receiver details will alternate with the main receiver. The example above shows an Archer SR10 Pro and it's redundant R9MM-OTA shown against Receiver1 details.

## ***External Module***

Details of the external RF module (if fitted), including hardware and firmware versions if ACCESS protocol.

## Model Setup

The Model setup menu is used to configure each model's specific setup. It is accessed by selecting the Airplane tab along the bottom of the Home screen. Conversely, settings that are common to all models are performed in the System menu, which is accessed by selecting the Gear tab instead (please refer to the System section).

### Overview

#### ***Model Select***

The Model Select option is used to create, select, add, clone, or delete models.

#### ***Edit Model***

The 'Edit model' option is used to edit the basic parameters for the model as set up by the wizard, and is mainly used to edit the model name or picture.

#### ***Flight Modes***

Flight modes allow models to be set up for switch selectable specific tasks or flight behavior. For example, gliders may be set up to have flight modes such as Launch, Cruise, Speed and Thermal. Power planes may have flight modes for Normal flying, Take Off and Landing. Helicopters have modes such as Normal for spool up and take off/landing, Idle Up 1 for aerobatic flying, and Idle Up 2 for perhaps 3D.

#### ***Mixer***

The Mixer section is where the model's control functions are configured. It allows any of the many sources of input to be combined as desired and mapped to any of the output channels.

This section also allows the source to be conditioned by defining weights/rates and offsets, adding curves (eg Expo). The mix can be made subject to a switch and/or flight modes, and a slow function to be added.

#### ***Outputs***

The Outputs section is the interface between the setup "logic" and the real world with servos, linkages and control surfaces as well as actuators and transducers. In the Mixer we have set up what we want our different controls to do. This section allows these pure logical outputs to be adapted to the mechanical characteristics of the model. This is where we configure minimum and maximum throws, servo or channel reverse, and adjust the servo or channel center point or add an offset using subtrim. We can also define a curve to correct any real world response issues. For example, a curve can be used to ensure that left and right flaps track accurately.

#### ***Timers***

The Timers section is used to configure the three available timers.

#### ***Trims***

The Trims section allows you to configure the Trim Mode, disable trims, or enable Extended Trims or Independent Trims for each of the 4 control sticks.

The Trim Mode configures the granularity of the trim switch steps, from Fine to Coarse to Exponential, or to disable trims. The normal trims range is +/- 25%, but Extended Trims enables the full range. If you are using Flight Modes, then Independent Trims enables the relevant trim to be independent for each flight mode, instead of being common across flight modes.

## **RF System**

This section is used to configure the Owner Registration ID, and the internal and/or external RF modules.

The Owner Registration ID is an 8 character ID that contains a unique random code, which can be changed if desired. This ID becomes the Owner Registration ID when registering a receiver. Enter the same code in the Owner ID field of your other transmitters you want to use the Smart Share feature with them. This must be done before creating the model you want to use it on.

## **Telemetry**

Telemetry is used for passing information from the model back to the RC pilot. This information can be quite extensive, and includes RSSI (receiver signal strength) and Link Quality, various voltages and currents, and any other sensor outputs such as GPS position, altitude, etc.

Note that the telemetry screens are set up as main views in the Configure Screens section.

## **Checklist**

The Checklist section is used to define startup alerts for things like initial throttle position, whether failsafe is configured, pot and slider positions, and initial switch positions.

## **Logic Switches**

Logic switches are user programmed virtual switches. They aren't physical switches that you flip from one position to another, however they can be used as program triggers in the same way as any physical switch. They are turned on and off by evaluating the conditions of the programming. They may use a variety of inputs such as physical switches, other logical switches, and other sources such as telemetry values, channel values, timer values, or Global Variables. They can even use values returned by a LUA model script.

## **Special Functions**

This is where switches can be used to trigger special functions such as trainer mode, soundtrack playback, speech output of variables, data logging etc. Special Functions are used to configure model specific functions.

## **Curves**

Custom curves can be used in input formatting, in the mixers or in the outputs. There are 100 curves available, and can be of several types (between 2 and 21 point, with either fixed or user-definable x-coordinates).

In the Mixer a typical application is using an Expo curve to soften the response around mid-stick. A curve may also be used to smooth a flap to elevator compensation mix so that the aircraft does not 'balloon up' when flaps are applied.

In the Outputs a balancing curve may be used to ensure accurate tracking of the left and right flaps.

## **Trainer**

The Trainer section is used to set the radio as a Master or Slave in a trainer setup. The trainer link can be via Bluetooth or a cable.

## ***Device Config***


Device Config contains tools for configuring devices like sensors, receivers, the gas suite, servos and video transmitters.

## Model Select



The Model Select option is accessed by selecting 'Model select' from the System menu. It is used to Select the Current Model, Add a New Model, or Clone or Delete it.

### ***Adding a New Model***

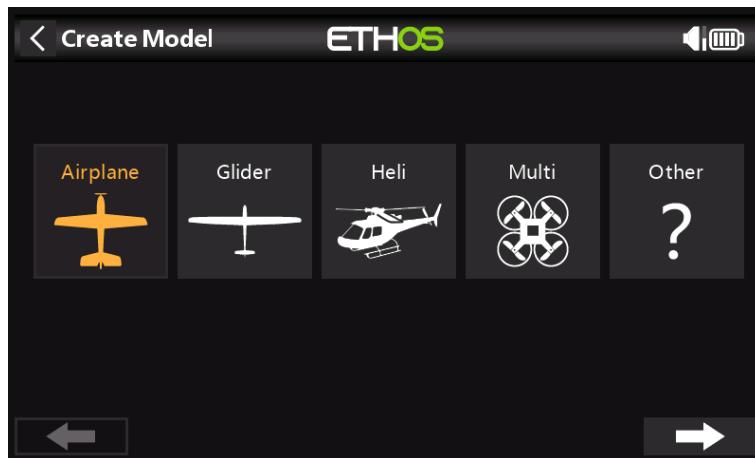

The first time you tap on Model Select (or at first startup) you are advised that there are no models, and the Model Creation Wizard is started automatically. Choose the category of model you wish to create, and follow the prompts.

There are wizards for:

- Airplane
- Glider
- Helicopter
- Multirotor
- Other


Created models will be shown in groups based on the model categories.

#### ***Example: Airplane Wizard***


The Airplane wizard assists you with the basic setup for a fixed wing model. It takes you through a number of steps to configure the basic setup of the model, allowing you to choose the number of motors/engines, ailerons, flaps, type of tail (e.g. traditional with elevator and rudder). Finally it asks you to name your model and optionally link an image of it.

## Selecting a Model

Tap on 'Model select' to bring up a list of your models. Detailed info of the model is shown below the icon: the model type, name, model file size and the last modification time stamp.

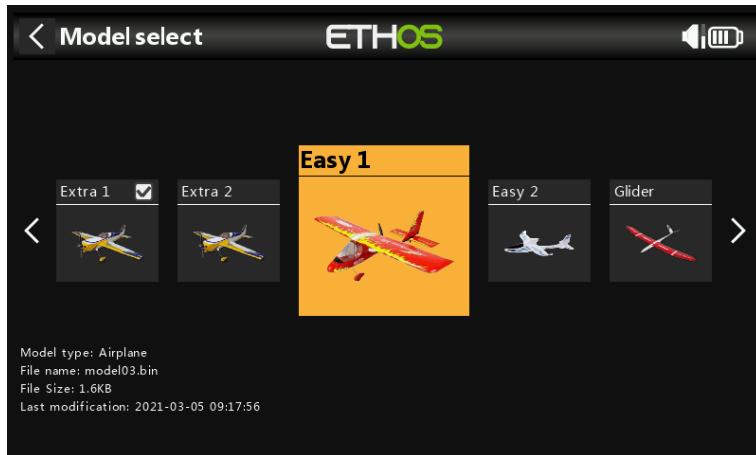

Tap on a model to select it, then tap on it again to bring up the model management menu.

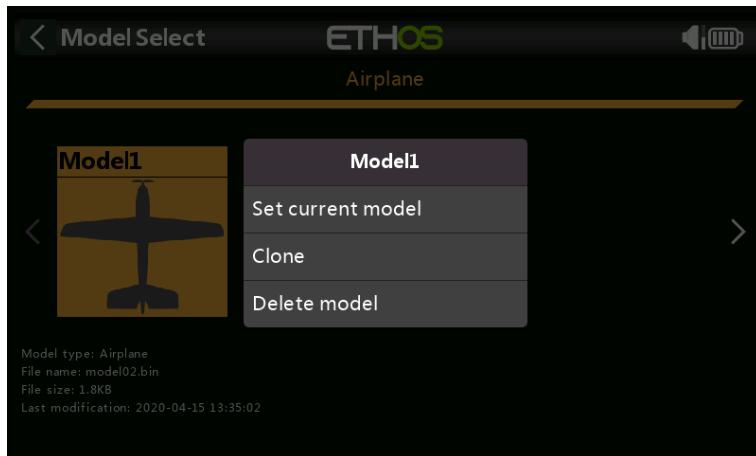


## Model Management Menu

The model management menu allows you to make the selected model the current model.

You can also Clone the model, which will duplicate the model. Alternatively, you can Delete the model. Note that the Delete option only appears if the selected model is not the current model.

## Edit model

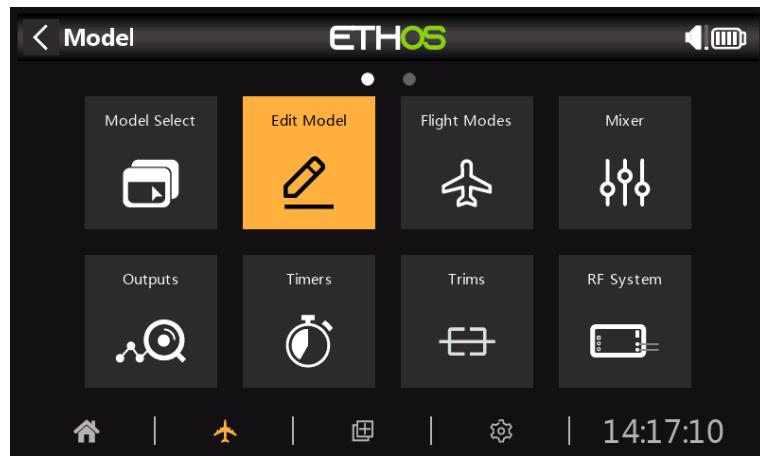

The 'Edit model' option is used to edit the basic parameters for the model as set up by the wizard.




The model can be renamed, or the picture assigned or changed. However, changing the model type, tail type, or heli swash plate will cause all mixers to be reset. Enabling 'Reset All Mixers' will also reset everything.

## Flight Modes




Flight modes bring incredible flexibility to a model setup, because they allow models to be set up for switch selectable specific tasks or flight behavior. For example, gliders may be set up to have switch selectable modes such as Launch, Cruise, Speed and Thermal. Power planes may have flight modes for Normal precision flying, Take Off, and Landing with either half or full flaps deployed. Helicopters have modes such as Normal for spool up and take off/landing, Idle Up 1 for aerobatic flying, and Idle Up 2 for perhaps 3D.


Flight modes remove much of the switching and trimming burden from the pilot. The great power of flight modes is that they support independent trims and mixer Variables, and can also be used to enable Mixer lines. Together, these features allow for great flexibility. Please refer to the Tutorial section to see examples of these features applied.

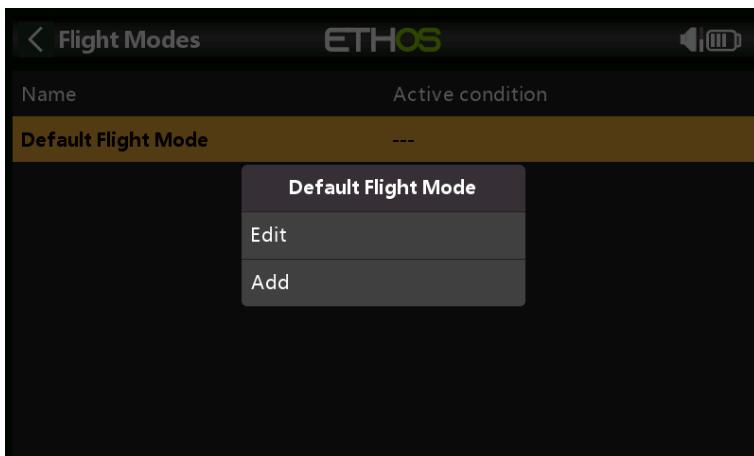

There are no default flight modes defined. Tap on the default flight mode, and select Edit if you wish to rename it, otherwise select Add to define a new flight mode.

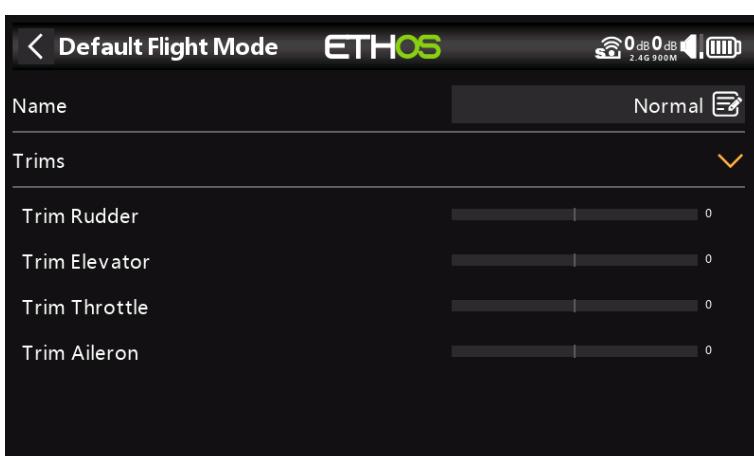


You can name each flight mode, and define its active condition, which can be a switch or button position, a function or logic switch, or a trim position. Note that the default flight mode does not have an active condition parameter, because this is the flight mode that is always active when no other flight mode is active. The first flight mode that has its switch ON is the active one.

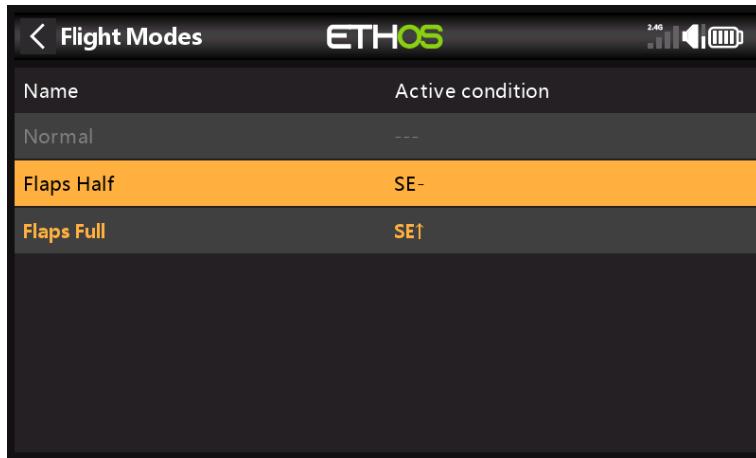


Once programmed the flight mode selections are displayed in the mixers. Up to 100 flight modes can be programmed. Like most functions in ETHOS the user can program descriptive text Flight Mode names such as Cruise, Speed, Thermal or Normal, Take Off, Landing.

### **Flight Mode Management**

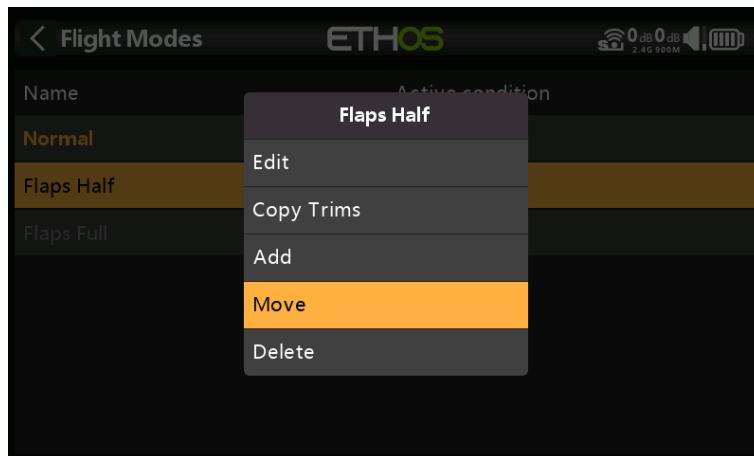


Tap on a flight mode to bring up a menu which allows you to edit, copy trims, add a new flight mode or delete flight modes.

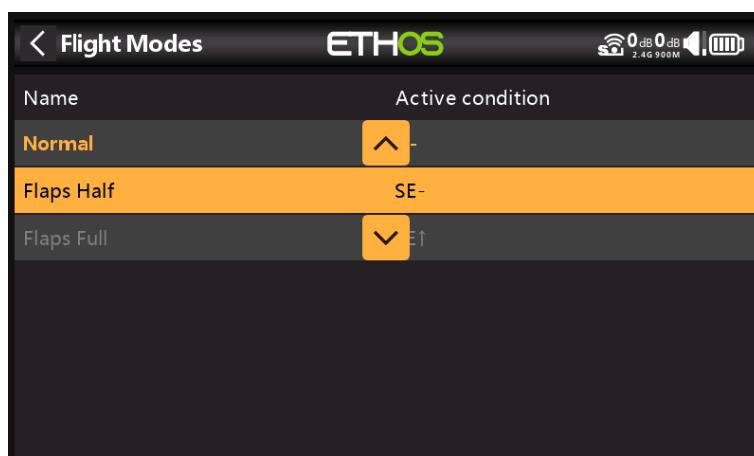

You can use the 'Move' option to change the priority of a flight mode, bearing in mind that the first flight mode that that the priority of flight modes is in ascending order, and the first one that has its switch ON is the active one.

## Mixer

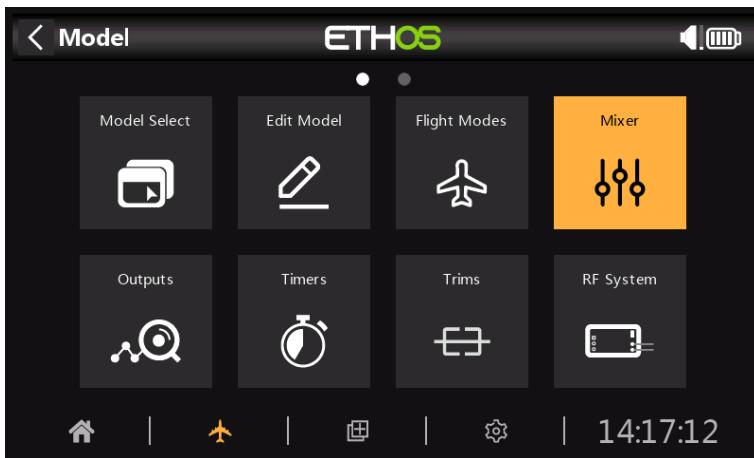

The Mixer function forms the heart of the radio. This is where the model's control functions are configured. The Mixer section allows any of the many sources of input to be combined as desired and mapped to any of the output channels. Ethos has 100 mixer channels available for programming your model. Normally the lowest numbered channels will be assigned to the servos, because the channel numbers map directly to the channels in the receiver. The X20 Internal RF (Radio Frequency) module has up to 24 output channels available.


The upper mixer channels can be used as 'virtual channels' in more advanced programming, or as real channels using multiple RF modules (Internal + External) and SBUS. The channel order is a matter of personal preference or convention, or it may be dictated by the receiver. We will use AETR for our example.

This section also allows the source to be conditioned by defining weights/rates and offsets, and adding curves (eg Expo). The mix can be made subject to a switch and/or flight modes, and a slow function to be added. (Note that Delays are implemented in the Logic Switches because they are related to switches.) The mixer includes contextual help text that dynamically changes as mixer options are touched. Up to 100 mixer lines may be defined.



If your model was created using one of the model creation wizards in the 'Model select' function in the System menu, the base mixer lines will be shown when you tap on the 'Mixer'.

In addition, the most common predefined mixes can be added as well as free mixes that are user configurable.

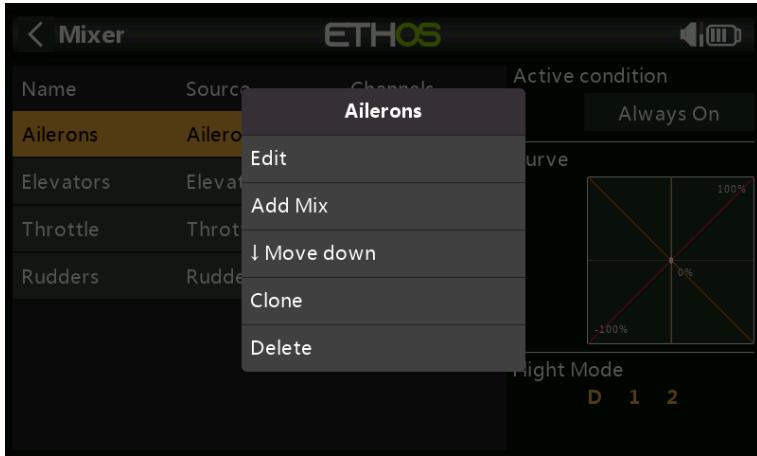


There is one mix line for each control/mix and a graphic display for that mix. To edit a mixer line, touch the mixer and touch again for the popup menu, then select Edit.

Please note that inactive mixer lines are shown greyed out, to assist in debugging.

The radio asks for confirmation before deleting a mix, in case of inadvertent selection.

### **Aileron, Elevator, Rudder Mixer**

We will use the Ailerons as an example, but the Elevator and Rudder mixes are very similar.

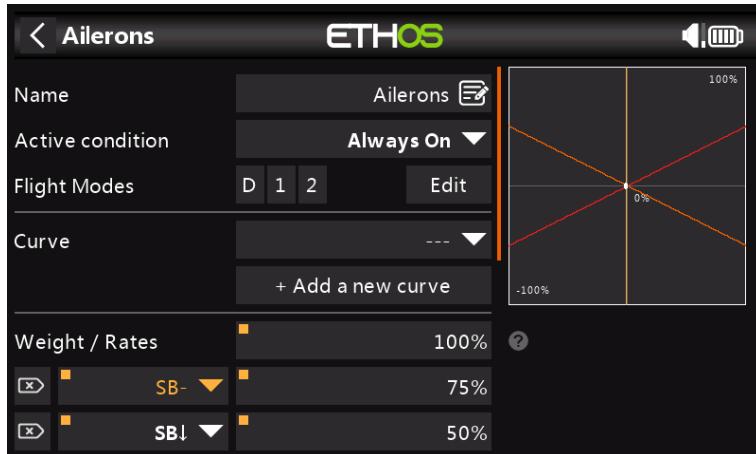

#### **Name**

Ailerons has been filled in as the default name, but it can be changed.

#### **Active Condition**

The default active condition is 'Always On', which is appropriate for Ailerons. It may be made conditional by choosing from switch or button positions, function switches, logic switches or trim positions.

#### **Flight Modes**

If any flight modes have been defined, the mix can be made conditional to one or more flight modes. Click on 'Edit' and check the boxes for the flight modes in which this mixer line must be active.


#### **Curve**

A standard curve option is Expo, which by default has a value of 0, which means the response is linear (i.e. no curve). A positive value will soften the response around 0, while a negative value will sharpen the response.

Any previously defined curve may also be selected. The mixer output will then modified by this curve. Alternatively, a new curve may be added.

### **Weight / Rates**

Multiple rates can be defined, subject to a switch position, function switch, logic switch, trim position or flight mode. A line is added for each rate. The default rate (i.e. first rates line) is active when none of the other rates are active. There is a small cross inside an arrow on the left of defined rates that can be used to delete a rates line. In the example above three rates have been set up on switch SB.

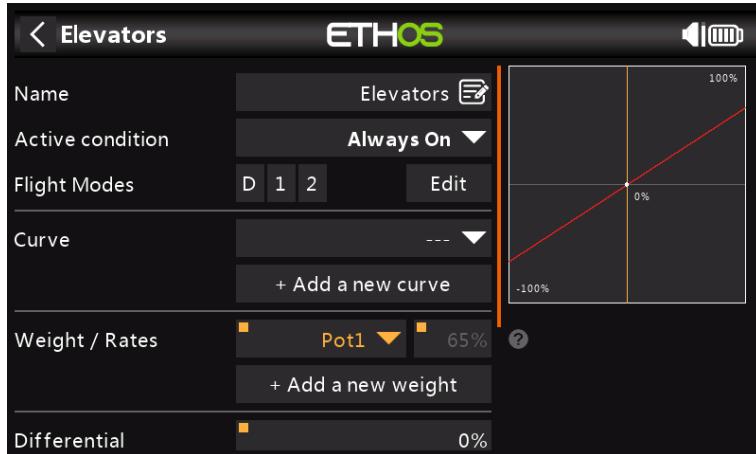

In this example a long press on Enter brought up the dialog to select a source instead of the default fixed value, in this case Pot1 was selected. The graph on the right shows that the pot is at 65%, so this would be the weight for the Aileron Rates, but adjustable in flight.

### **Differential**



On Ailerons differential (typically more up aileron travel than down) is utilized to reduce adverse yaw and to improve turning/ handling characteristics. A positive value will result in the ailerons having less downward travel, as can be seen in the graph above. (Default = 0. Range -100 to +100). On Elevator differential may be used for planes wanting less down than up elevator, typically in racing situations.

### **Channels Count**

Channel count defines how many Output channels are allocated. In this example two ailerons were configured in the model creation wizard.


***Output1, Output2***

The model creation wizard assigned channels 1 and 2 to the ailerons, because the default channel order in the System – Sticks menu was set to AETR, i.e. ailerons, elevator, throttle, rudder.

The default can be altered if required, but care must be exercised to assess any other impacts to making a change here.

## Throttle Mixer

The Throttle mixer has parameters for managing Throttle Cut and Throttle Hold. Throttle Cut, together with Low Position Trim, is used for managing the throttle and idle settings on glow or gas powered models. Throttle Hold is commonly used on electric models.

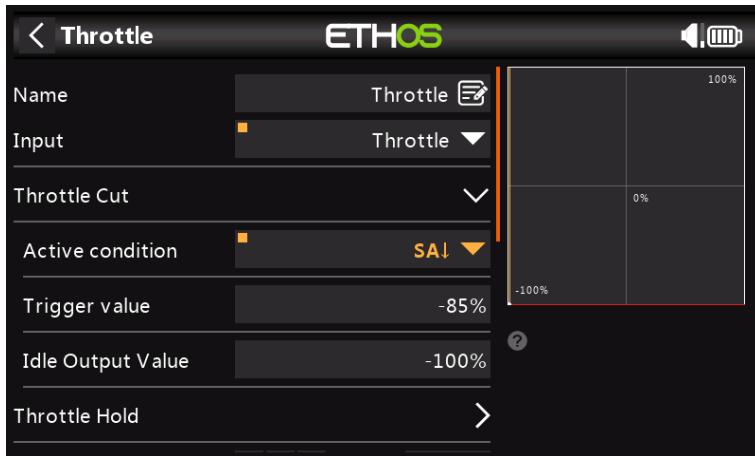

### **Input**

The source for the Throttle mix can be selected here. It defaults to the Throttle stick, but can be changed to an analog, switch, trim, channel, gyro axis, trainer channel, timer or special value.

### **Throttle Cut**


Note that the Throttle Cut function interacts with the Low Position Trim setting (see below).

### **Active Condition**

The active condition may be chosen from switch or button positions, function switches, logic switches or trim positions.

### **Trigger Value**

The Trigger Value is chosen so that once the throttle stick goes below the Trigger value then the Idle Output Value will be output on the throttle channel. For example, using the defaults, once the throttle stick value drops below -85%, the throttle channel output will be switched to the Idle Output Value of -100%.

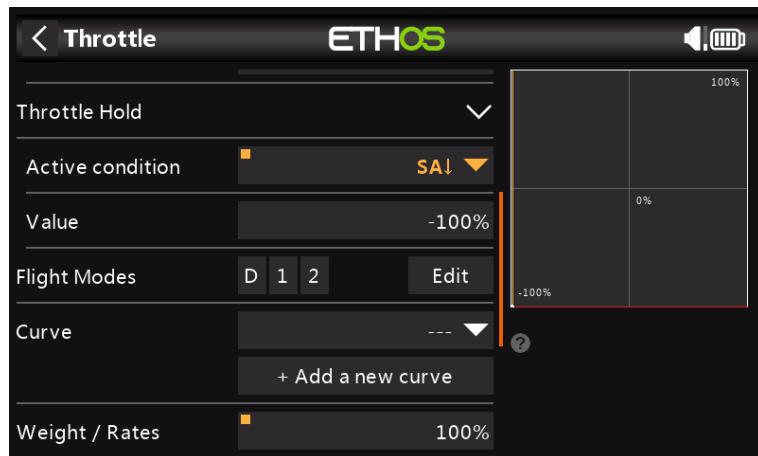

## Throttle Hold


### Active Condition

The active condition may be chosen from switch or button positions, function switches, logic switches or trim positions.

### Value

Once the throttle hold function goes active, the Value setting will be output on the throttle channel. On electric powered models, the throttle hold value is normally (-100%).


### Low Position Trim

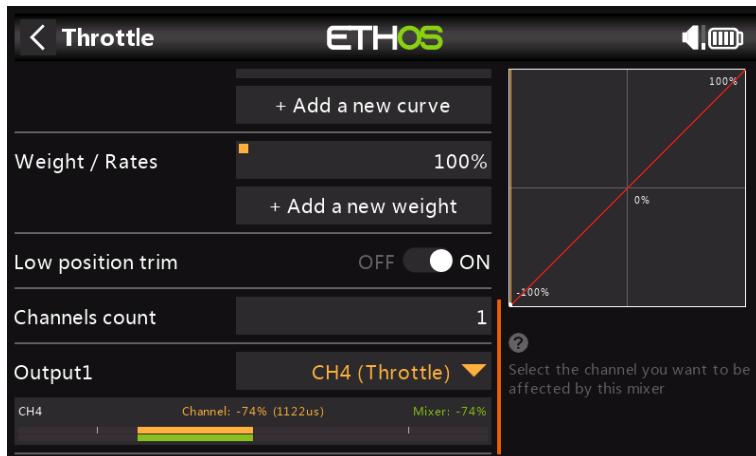

For glow and gas we use 'Low position trim' to adjust the idle speed. The idle speed can vary depending on the weather, etc., so having a way to adjust the idle speed without impacting the full throttle position is important.

If 'Low position trim' is enabled, the throttle channel goes to an idle position of -75% when the throttle stick is at the low position (please refer to the channel bar display at the bottom of the screenshot above). The throttle trim lever can then be used to adjust the idle speed between -100% and -50%. Throttle Cut can then be configured to cut the engine with a switch.


## Predefined Mixes

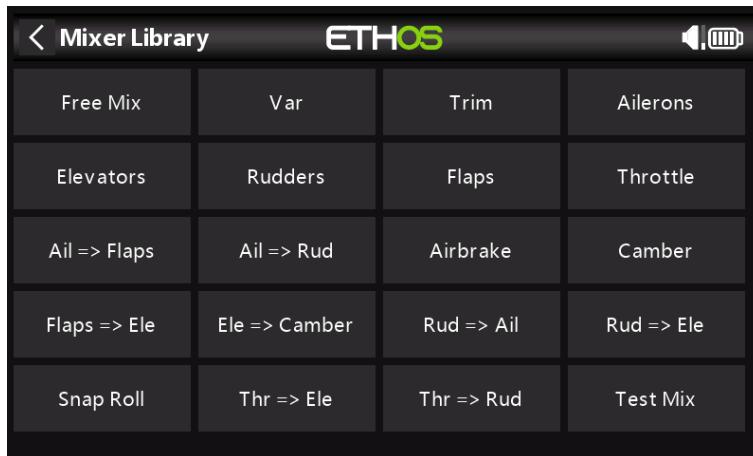


### Free Mix

The Mixer function can best be described by making use of a Free Mix, which we will add to the above mixes for illustration purposes. Tap on any Mixer line, and select 'Add Mix' from the popup menu to add a new mixer line.


Select Free Mix from the list of available predefined mixes in the Mixer Library.

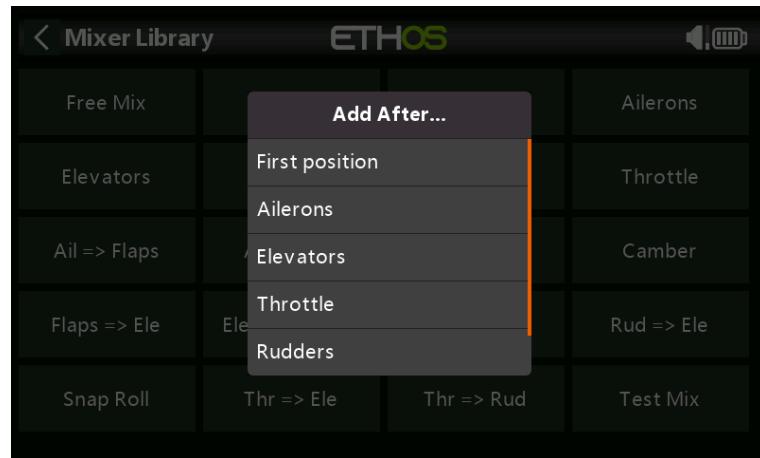


Next the position for the new mixer line must be chosen, in this example after 'Rudders'.

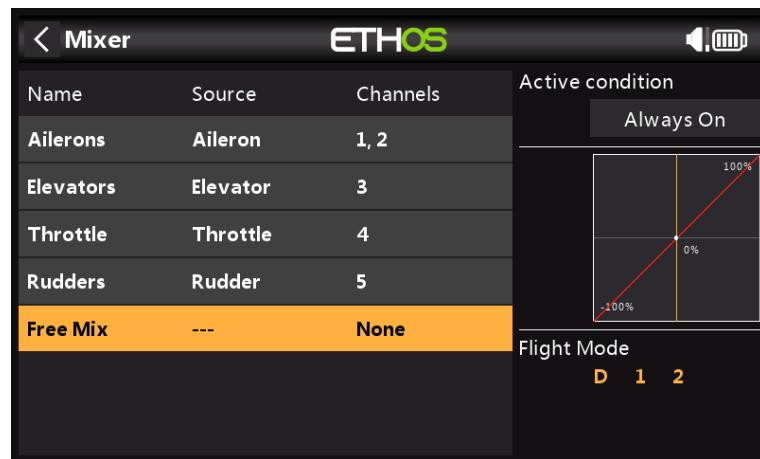

Tap on 'Free Mix' to bring up the edit sub-menu.

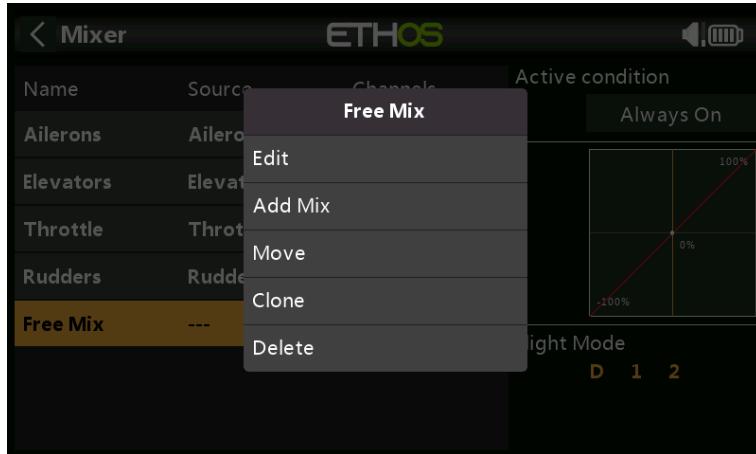

Select Edit to open a new screen showing the detailed parameters for the 'Free Mix'. The graph display on the right will display the mixer output, and the effect of any setting changes that are made.

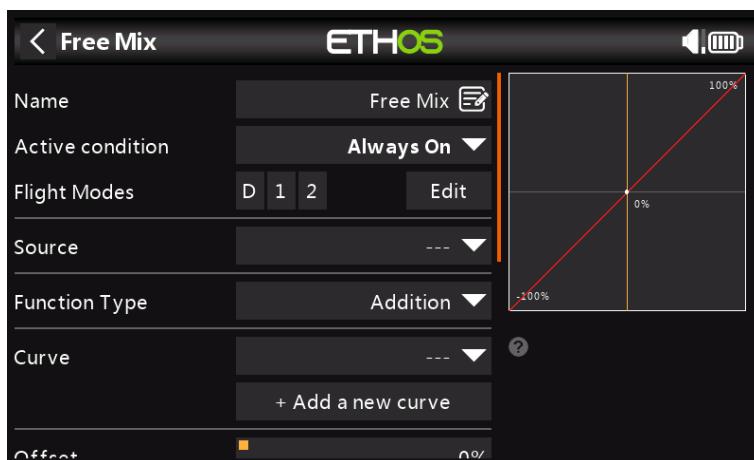

### Name

A descriptive name can be entered for the Free Mix.

### Active Condition

The default active condition is 'Always On'. It may be made conditional by choosing from switch or button positions, function switches, logic switches or trim positions.

### Flight Modes

If any flight modes have been defined, the mix can be made conditional to one or more flight modes. Click on 'Edit' and check the boxes for the flight modes in which this mixer line must be active.

### Source

The source or input to this mix can be chosen from:

- analog inputs such as the sticks, pots and sliders
- the toggle switches or buttons
- any defined logic switches
- the trim switches
- any defined channels
- a gyro axis
- a trainer channel
- a timer
- a telemetry sensor
- a 'special' value, i.e. minimum, maximum or 0

The mixer line will take the value of the source at any instant as its input.

### **Function Type**

The Function Type defines how the current mixer line interacts with the others on the same channel. There are three function types:

#### **Addition**

The output of this mixer line will be added to any other mixer lines on the same output channel.

#### **Multiply**

The output of this mixer line will be multiplied with the result of any other mixer lines on the same output channel.

#### **Replace**

The output of this mixer line will replace the result of any other mixer lines on the same output channel.

The combination of these operations allows the creation of complex mathematical operations.


### **Curve**

A standard curve option is Expo, which by default has a value of 0, which means the response is linear (i.e. no curve). A positive value will soften the response around 0, while a negative value will sharpen the response.

Any previously defined curve may also be selected. The mixer output will then be modified by this curve. Alternatively, a new curve may be added.

### **Offset**

Offset will shift the mixer output up or down by the offset value entered here. Negative values are allowed.

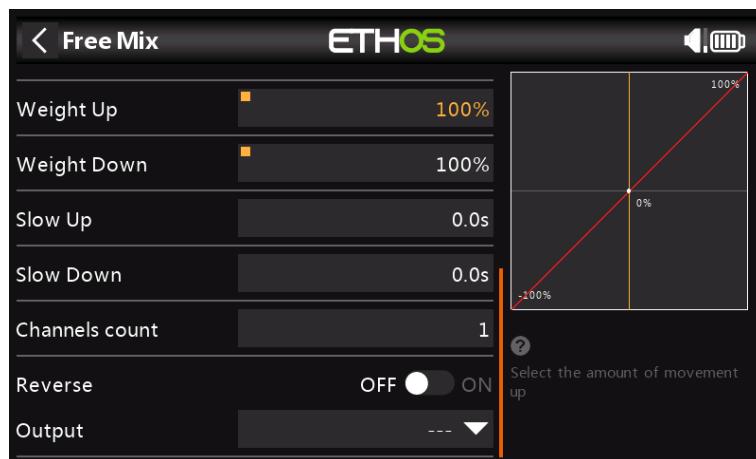

### **Weight Up**

The mixer output in the positive direction will be scaled by the weight value entered here. Negative values are allowed.

### **Weight Down**

Similarly, the mixer output in the negative direction will be scaled by the weight value entered here.

### ***Slow Up/Down***

Response of the output can be slowed down with regard to the input change. Slow could for example be used to slow retracts that are actuated by a normal proportional servo. The value is time in seconds that the output will take to cover the -100 to +100% range.

### ***Channels Count***

Channel count defines how many Output channels are allocated.

### ***Reverse***

The output of this mixer line can be reversed or inverted by enabling this option. Please note that servo reversal should be done under Outputs. This option is for getting the logic of the mixing right.

### ***Output***

Any channel can be selected to receive the output from this mixer line. If the Channels Count above is greater than one, then a channel must be configured for each Output.


### ***Other Pre-defined Mixes***

<< this section to be added >>

## Outputs



The Outputs section is the interface between the setup "logic" and the real world with servos, linkages and control surfaces as well as actuators and transducers. In the Mixer we have set up what we want our different controls to do. This section allows these pure logical outputs to be adapted to the mechanical characteristics of the model. This is where we configure minimum and maximum throws, servo or channel reverse, and adjust the servo or channel center point or add an offset using subtrim. We can also define a curve to correct any real world response issues. For example, a curve can be used to ensure that left and right flaps track accurately. The various channels are outputs, for example CH1 corresponds to servo plug #1 on your receiver (with the default protocol settings).

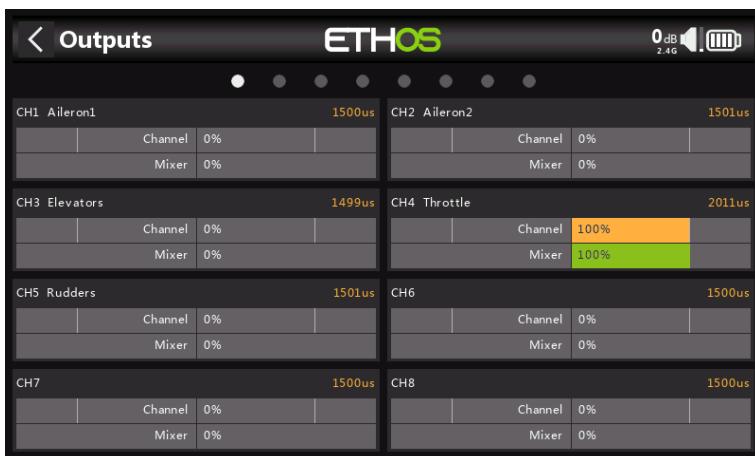

The Outputs screen shows two bar graphs for each channel. The lower green bar shows the value of the mixer for the channel, while the upper orange shows the actual value (in both % and  $\mu$ s terms) of the Output after the Outputs processing, which is what is sent to the receiver. In the example above you can see that both the mixer and output values for CH4 Throttle are at -100%.

The channels that are not being output to the RF module are shown with a darker background. In the example above, all eight channels are being transmitted, so they have a lighter grey background.

Note: For quick access to this monitor screen, a long press of the enter key from the Mixer screen and Flight Modes screens will jump to the Outputs.

## Outputs Setup

Tap on the Output channel to be edited or reviewed.



### Name

The name can be edited.

### Invert

Will Invert the channel output, typically to reverse servo direction.

### Min/Max

The Channel min and max settings are 'hard' limits, i.e. they will never be overridden. They should be set to avoid mechanical binding. Note that they serve as gain or 'end point' settings, so reducing these limits will reduce throw rather than induce clipping. Note that the limits default to +/- 100%, but may be increased here to +/- 150%.

### Center/Subtrim

Used to introduce an offset on the output, typically used to center a servo arm.

### Curve

Allows you to select an Expo or custom curve to condition the output. The popup allows to either select an existing curve, or to add a new curve. After configuring the curve, an Edit button is added so that you can edit the curve easily.

Curves are a quicker and more flexible way of configuring the center and min/max limits of the outputs, and you get a nice graphic. Use a 3-point curve for most outputs, but use a 5-point curve for things such as the second aileron and flap, so you can synchronize the travel at 5 points. When using a curve it is good practice to leave Min, Max and Subtrim at their 'pass thru' values of -100, 100 and 0 respectively (or -150, 150 and 0 if using extended limits).


### Slow Up/Down

Response of the output can be slowed down with regard to the input change. Slow could for example be used to slow retracts that are actuated by a normal proportional servo. The value is time in seconds that the output will take to cover the -100 to +100% range.

### Delay


Please note that a delay function is available under Logic Switches.

## Timers

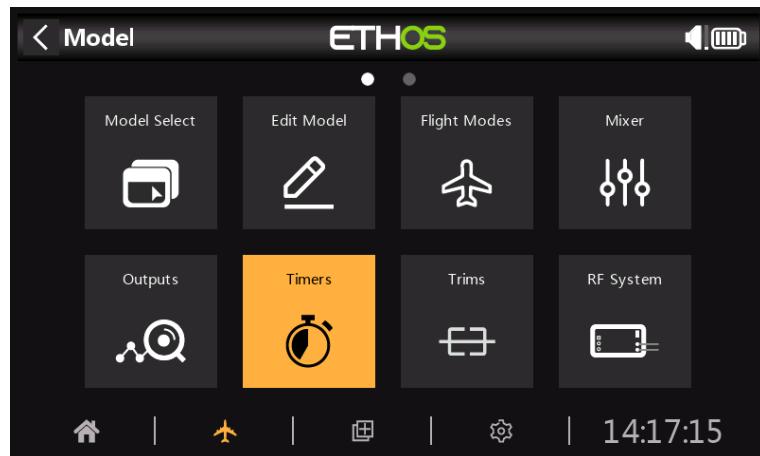


Name	Mode	Value	Active condition	Reset
Timer1	Up	00:00:00	---	---
Timer2	Up	00:00:00	---	---
Timer3	Up	00:00:00	---	---

There are 3 fully programmable timers that can count either up or down.

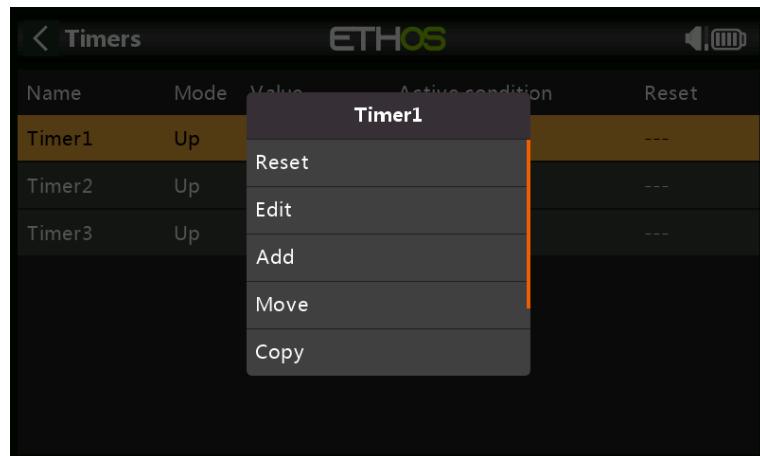

Touching any timer line brings up a popup with options to reset or edit that timer, add a new timer, or to move or copy/paste the timer.

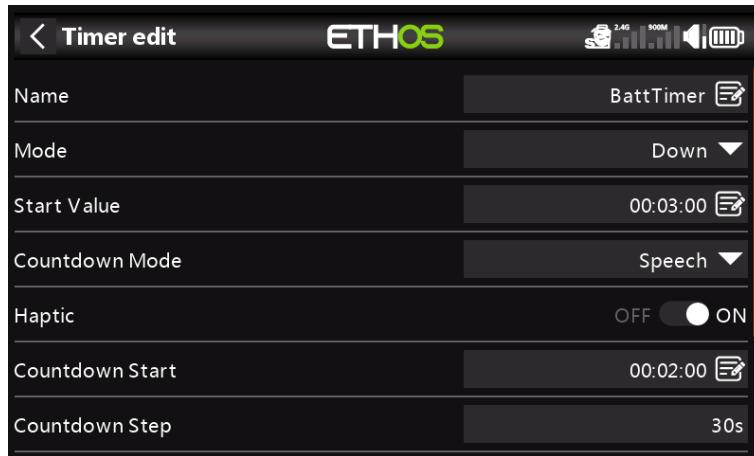

## **Name**

Allows the timer to be named.

## **Mode**

The timer can count Up or Down.

## **Alarm/Start Value**

If the timer has been set to count Up, the next parameter sets the Alarm Value at which the timer triggers the configured alerts.

If the timer has been set to count Down, the next parameter sets the Start Value from which the timer counts down. When it reaches zero, it triggers the configured alerts.

## **Countdown Mode**

This setting determines whether the countdown alert is mute, or a beep or spoken value.

## **Haptic**


Enables haptic feedback to signal that the timer has elapsed.

## **Countdown Start**

The timer value from which the countdown alerts start.

## **Countdown Step**

The interval at which countdown alerts are made.

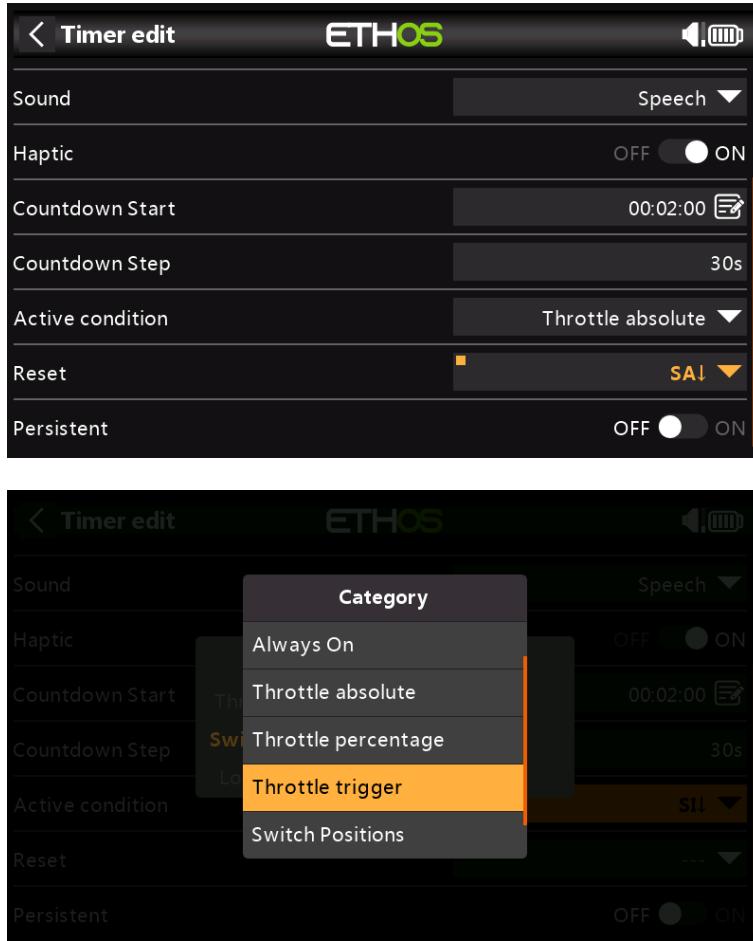

## Active Condition

The active condition parameter which determines when the timer is running has the following options:

### **Always On**

Always On counts all the time.

### **Throttle Absolute**

The timer runs whenever the throttle stick isn't at idle.

### **Throttle Percentage**

The timer counts up/down as a percentage of the full stick range.

### **Throttle Trigger**

Throttle Trigger starts the timer the first time throttle is advanced,

### **Switch Positions**

The timer may also be enabled by a switch position.

### **Logic Switch Positions**

The timer may also be enabled by a logic switch.

## **Reset**

The timer can be reset by switch positions, function switches, logic switches or trim switch positions. Note that the timer will be held in reset while the Reset condition is valid.


## **Persistent**

Turning Persistent to On allows storing the timer value in memory when the radio is powered off or the model is changed, and will be reloaded next time the model is used.

## Trims




The Trims section allows you to configure the Trim Mode (i.e. trim step size), enable Extended Trims or Independent Trims for each of the 4 control sticks. It also allows Cross Trims to be configured.

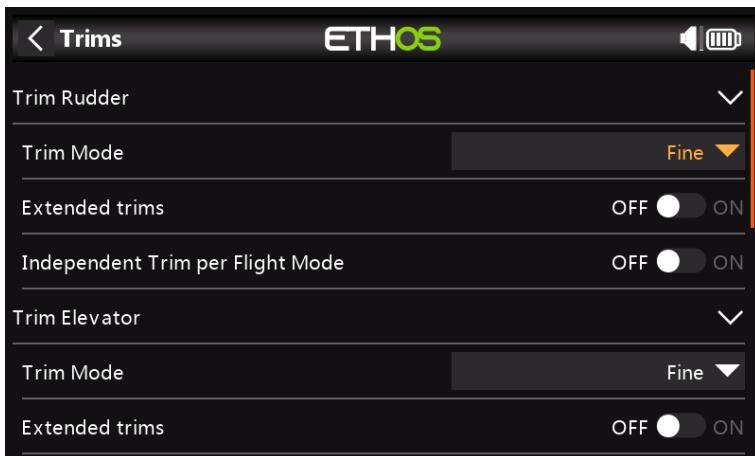

There are four sets of Trims settings, one set for each stick. For example, you can have independent elevator trims per flight mode, while leaving the aileron and rudder trims as common or combined.

### Trim Mode

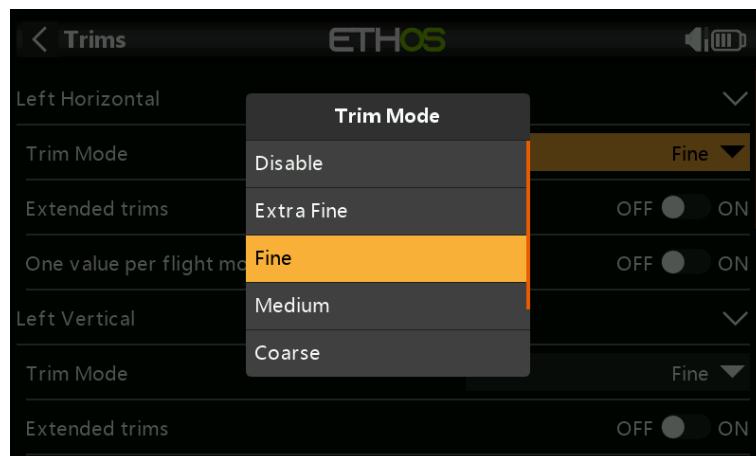

The Trim Mode allows trims to be disabled, or to configure the granularity of the trim switch steps, from Extra Fine through Medium to Coarse, or Exponential. The Exponential setting gives fine steps near the center, and coarse steps further out. Custom allows the trim step to be specified.


## ***Extended Trims***

Extended trims allows trims to cover the full stick range instead of +/- 25%. Care must be taken with this option, as holding the trim tabs for too long might add so much trim as to make your model unflyable.

## ***Independent Trim per Flight Mode***


If you are using Flight Modes, then this setting enables the relevant trim to be independent for each flight mode, instead of being common to all flight modes.

## ***Cross Trim***

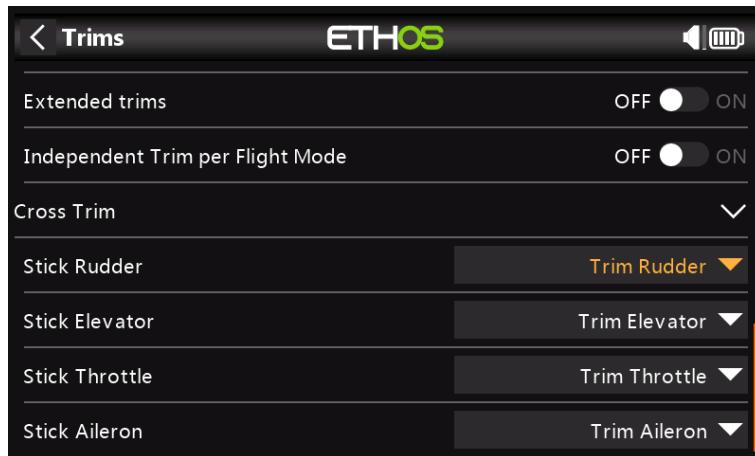


Cross trims can be set up for each trim stick, so you can nominate which trim switch to use for each stick.

## RF System

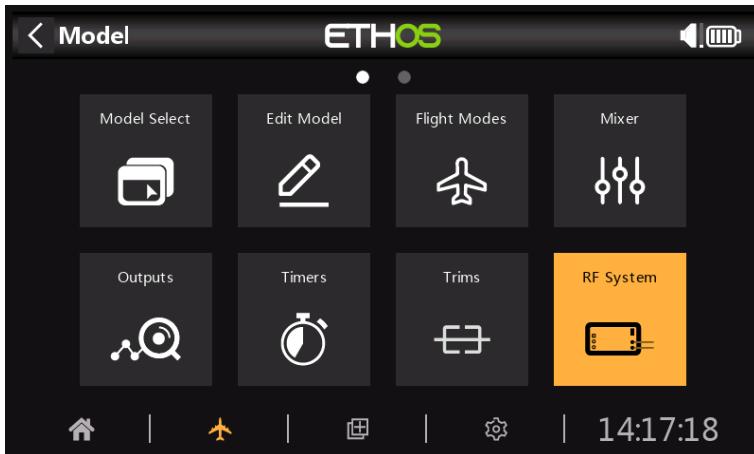

This section is used to configure the Owner Registration ID, and the internal and/or external RF modules.

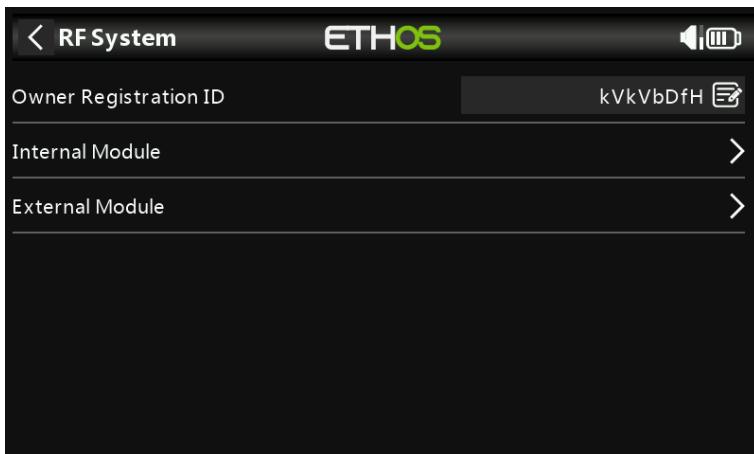

### ***Owner Registration ID***

The Owner Registration ID is an 8 character ID that contains a unique random code, which can be changed if desired. This ID becomes the Owner Registration ID when registering a receiver (see below). Enter the same code in the Owner ID field of your other transmitters you want to use the Smart Share feature with them. This must be done before creating the model you want to use it on.

### ***Internal Module***

#### ***Overview***

The X20 TD-ISRM internal RF module is a new design that provides tandem 2.4GHz and 900MHz RF paths. It can operate in 3 modes, i.e. ACCESS, ACCST D16 (see below) or TD MODE (see further below).

#### ***ACCESS Mode***

In ACCESS mode the 2.4G and 900M RF paths work in tandem with one set of ACCESS controls. There can be three 2.4G receivers registered and bound or three 900M receivers registered and bound or a combination of 2.4G and 900M for a total of three receivers.

In ACCESS mode with a combination of 2.4G and 900M receivers the telemetry for the 2.4G and 900M links are active at the same time. The sensors are identified in telemetry as 2.4G or 900M.

There is a new ETHOS telemetry receiver source feature named RX. RX provides the receiver number of the active receiver sending telemetry. RX is available in telemetry like any other sensor for real time display, Logic Switches, Special Functions and data logging.

### **ACCST D16 Mode**

In ACCST D16 the TD-ISRM becomes a single 2.4G RF path.

### **TD Mode**

In TD Mode the TD-ISRM is in a low latency long range mode using the 2.4G and 900M RF links in Tandem to work with the new Tandem receivers. At the time of writing Tandem receivers are not available yet.

Please see the following sections for configuration details.




#### **State**

The Internal Module can be On or Off.

#### **Type**

Transmission mode of the internal RF module. The X20/X20S models operate on the 2.4GHz and/or the 900MHz band. The ACCESS and TD (Tandem) modes can operate on both the 2.4GHz and/or the 900MHz band simultaneously (or individually), while the ACCST D16 operates only on the 2.4GHz band. The Mode must match the type supported by the receiver or the model will not bind! After a Mode change, carefully check model operation (especially Failsafe!) and fully verify that all receiver channels are functioning as intended.

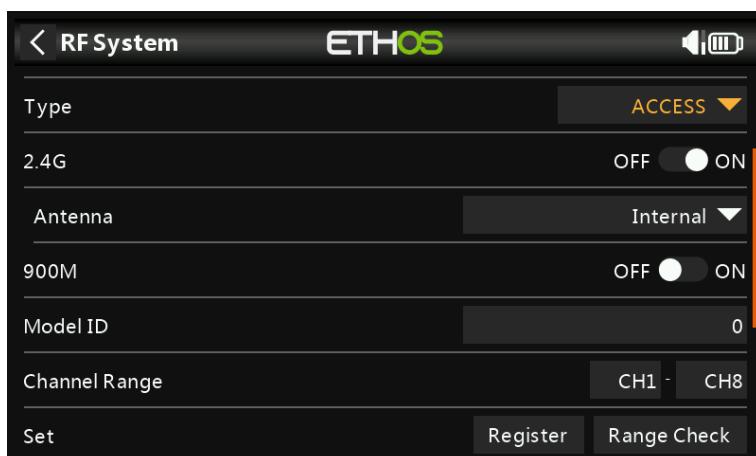

**Type: ACCESS**

ACCESS changes the way receivers are bound and connected with the transmitter. The process is broken into two phases. The first phase is registering the receiver to the radio or radios it is to be used with. Registration only needs to be performed once between each receiver / transmitter pair. Once registered, a receiver can be bound and re-bound wirelessly with any of the radios it is registered with, without using the bind button on the receiver.

Having selected the ACCESS mode, the following parameters must be set up:

**2.4G**

Enable or disable the 2.4G RF module.

Select Internal or External (on ANT1 connector) Antenna. Although the RF stage has built-in protection, it is good practice to ensure that an external antenna has been fitted before selecting the External antenna.

**900M**

Enable or disable the 900M RF module.

Antenna: Select Internal or External (on ANT2 connector) Antenna. Although the RF stage has built-in protection, it is good practice to ensure that an external antenna has been fitted before selecting the External antenna.

Power: Select the RF Power desired between 10, 25, 100, 200, 500mW.

In ACCESS mode the 2.4g and 900m RF paths work in tandem with one set of ACCESS controls. There can be three 2.4G receivers registered and bound or three 900M receivers registered and bound or a combination of 2.4G and 900M for a total of three receivers.

**Model ID**

When you create a new model, the Model ID is automatically allocated. The Model ID must be a unique number because it defines the behavior of the receiver lock function (aka: Receiver Match). This number is sent to the receiver, which will only respond to the number it was bound to. By default this is the number of the model's slot when it is created. It can however be changed manually, and will not change if a model is moved or copied.

**Channel Range:**

Since ACCESS supports 24 channels, you normally choose Ch1-8, Ch1-16, Ch9-16 or Ch17-24 for the receiver being set up. Note that Ch1-16 is the default.


**Phase One: Registration****Set:**

1. Initiate the registration process by selecting [Register].



A message box with 'Waiting....' will pop up with a repeating 'Register' voice alert.

2. While holding down the bind button, power up the receiver, and wait for the red & green LEDs to become active.

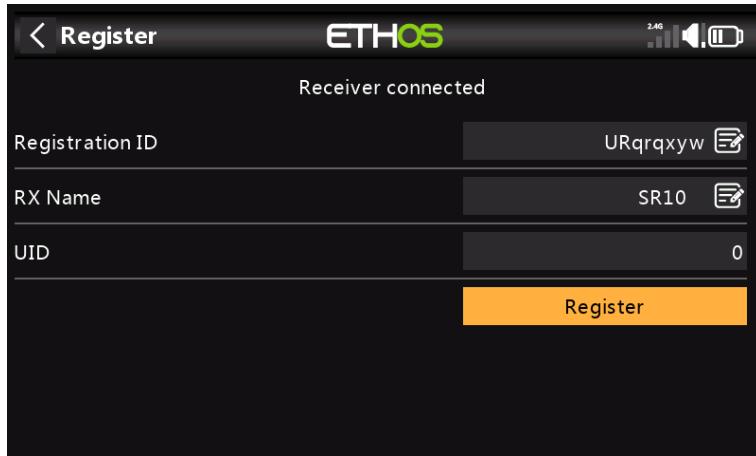


The 'Waiting...' message changes to 'Receiver Connected', and Rx Name field will be filled in automatically.

3. At this stage the Reg. ID and UID can be set:

- Reg. ID: The Registration ID is at owner or transmitter level. This should be a unique code for your X20/X20S and transmitters to be used with Smart Share. It defaults to the value in the Owner Registration ID setting described above at the start of this section, but can be edited here. If two radios have the same ID you can move receivers (with the same Receiver No for a given model) between them by simply using the power on bind process.
- RX Name: Filled in automatically, but the name can be changed if desired. This can be useful if you are using more than one receiver and need to remember for example that RX4R1 is for Ch1-8 or RX4R2 is for Ch9-16 or RX4R3 is for Ch17-24 when rebinding later. A name for the receiver can be entered here.
- The UID defaults to 0 for Ch1-8. When more than one receiver is to be used in the same model, the UID should be changed to 1 for Ch9-16, or 2 for Ch17-24. Please note that this UID cannot be read back from the receiver, so it is a good idea to label the receiver.

4. Press [Register] to complete. A dialog box pops up with 'Registration ok'. Press [OK] to continue.

5. Turn the receiver off. It is now ready for binding.

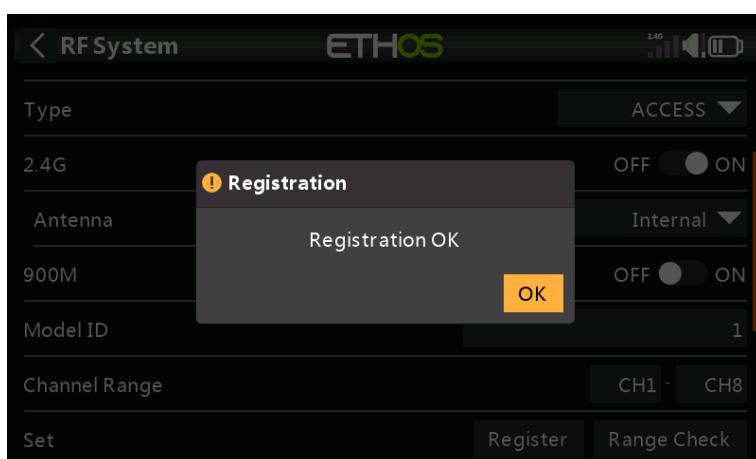

## Range



A range check should be done at the field when the model is ready to fly.

Range check is activated by selecting 'Range Check'. A voice alert will announce 'Range Check' every few seconds to confirm that you are in range check mode. A popup will display the Receiver Number, and the VFR% and RSSI values to evaluate how reception quality is behaving. When the Range Check is active, it reduces transmitter power by a factor of 900, which reduces the range by a factor of 30. Under ideal conditions, with both the radio and receiver at 1m above the ground, you should only get a critical alarm at about 30m apart.


Currently ACCESS in range check mode provides range check data for one receiver at a time on the 2.4G link and one receiver at a time on the 900M link. If you have three 2.4G receivers registered and bound as Receiver 1, 2 and 3, one of the receivers will be the active telemetry receiver and its number will be displayed by the RX sensor as 0, 1, or 2. That will be the receiver that is sending the RSSI and VFR data. If you turn that receiver off the next receiver will become the active telemetry receiver in a priority of 0, 1, and then 2. Each of the three receivers can be range checked by turning off the other receivers.

RX sensor 0 = Receiver 1

RX sensor 1 = Receiver 2

RX sensor 2 = Receiver 3

Please also refer to the Telemetry section for a discussion on VFR and RSSI values.

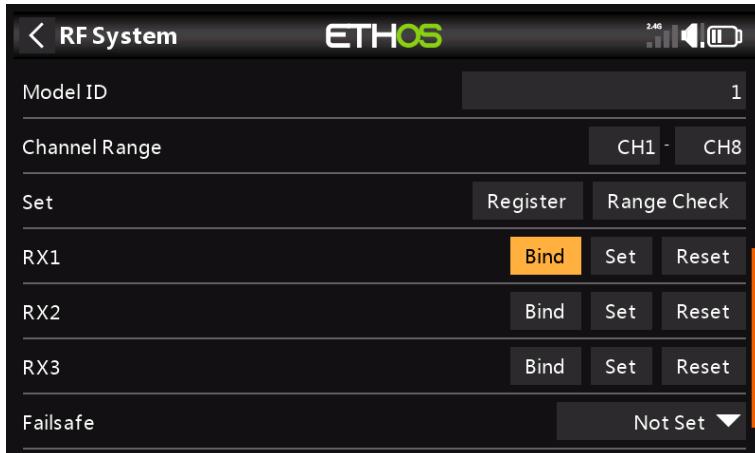

At this point the receiver is registered, but it still needs to be bound to the transmitter to be used.

## **Phase 2 – Binding, and Module Options**

Receiver binding enables a registered receiver to be bound to one of the transmitters it has been registered with in phase 1, and will then respond to that transmitter until re-bound to another transmitter. Be certain to perform a range check before flying the model.


Receiver No: Confirm the receiver number the model is to operate under. Receiver matching is still as important as it was before ACCESS. The receiver number defines the behavior of the receiver lock function (aka: Receiver Match). This number is sent to the receiver, which will only respond to the number it was bound to. By default this is the number of the model's slot when it is created. It can however be changed manually, and will not change if a model is moved or copied. If manual setting or a copy/move operation results in 2 or more models on the radio having the same number, a warning pop-up will show up. It is then up to the user to determine if this is the desired behavior or not and change if required.

### **Bind**


#### **Warning – Very Important**

Do not perform the binding operation with an electric motor connected or an internal combustion engine running.


1. Turn the receiver power off.
2. Confirm that you are in ACCESS mode.
3. Receiver 1 [Bind]: Initiate the binding process by selecting [Bind]. A voice alert will announce 'Bind' every few seconds to confirm that you are in bind mode. A popup will display 'Waiting for receiver....'.

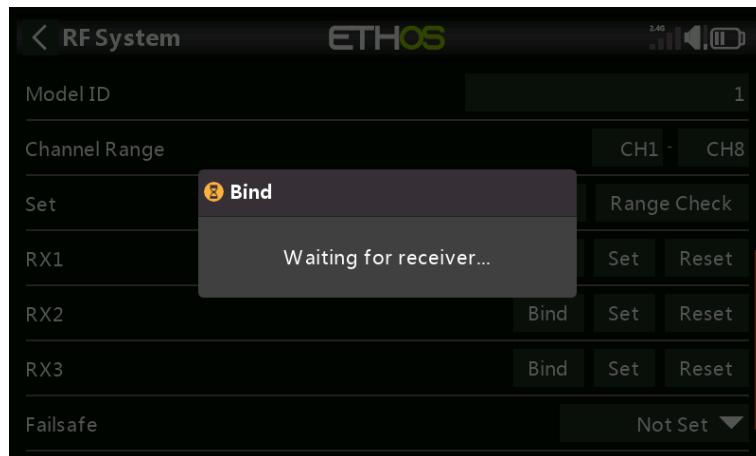

4. Power up the receiver without touching the F/S bind button. A message box will pop up 'Select device' and the name of the receiver you have just powered on.

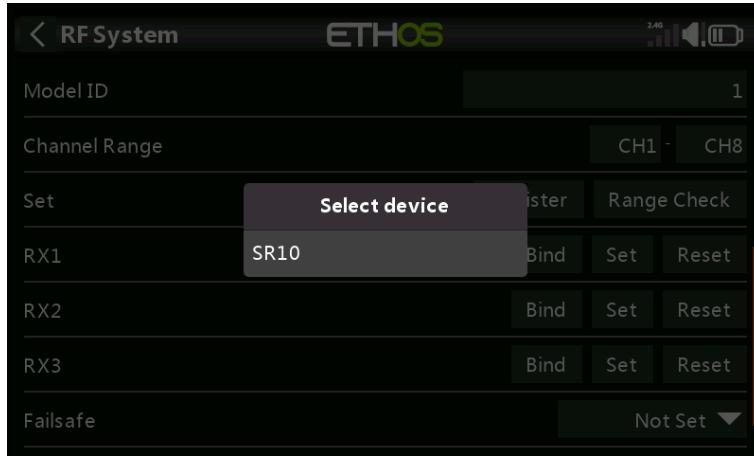

5. Scroll to the receiver name and select it. A message box will pop up indicating that binding was successful.

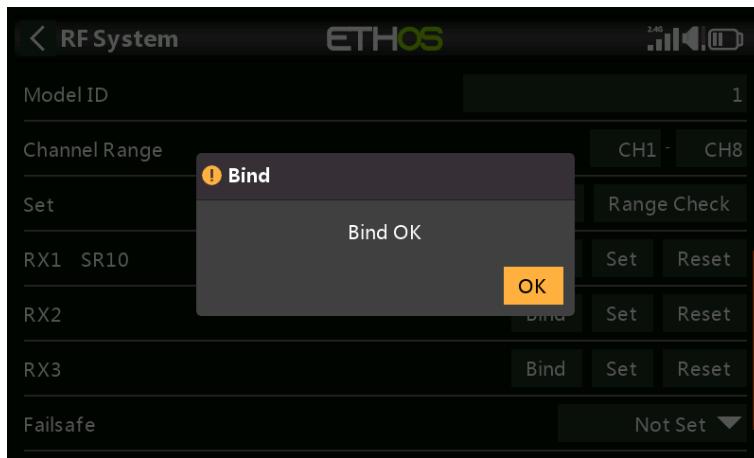


6. Turn off both the transmitter and the receiver.

7. Turn the transmitter on and then the receiver. If the Green LED on the receiver is on, and the Red LED is off, the receiver is linked to the transmitter. The receiver/transmitter module binding will not have to be repeated, unless one of the two is replaced.

The receiver will only be controlled (without being affected by other transmitters) by the transmitter it is bound to.

The receiver selected will now show for RX1 the name next to it:

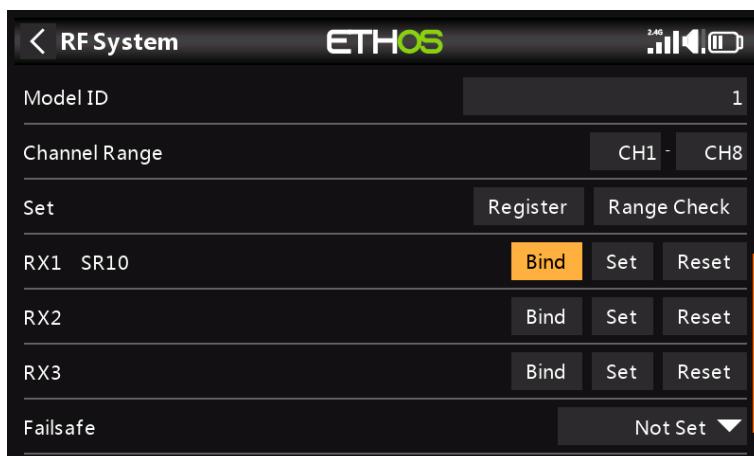

The receiver is now ready for use.


Repeat for Receiver 2 and 3 if applicable.

Refer also to the Telemetry section for a discussion on RSSI.


### Adding a Redundant Receiver

A second receiver may be bound to an unused slot, e.g. either RX2 or RX3 to provide redundancy in case of reception problems. Either a 2.4G or 900M receiver may be the backup for redundancy. Our example below shows a 900M receiver being added.


1. Connect the SBUS Out port of the redundant receiver to the SBUS IN port of the main receiver.
2. Power up the receivers (the redundant receiver can be powered via the SBUS cable).

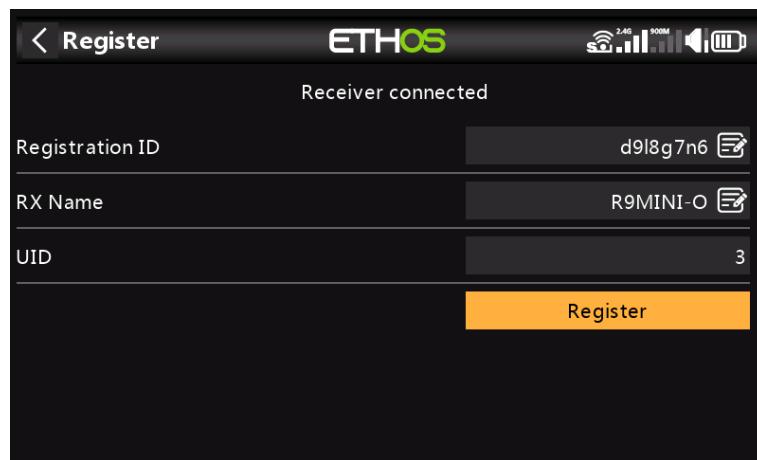


3. Register the new receiver.
4. Switch off the receivers.

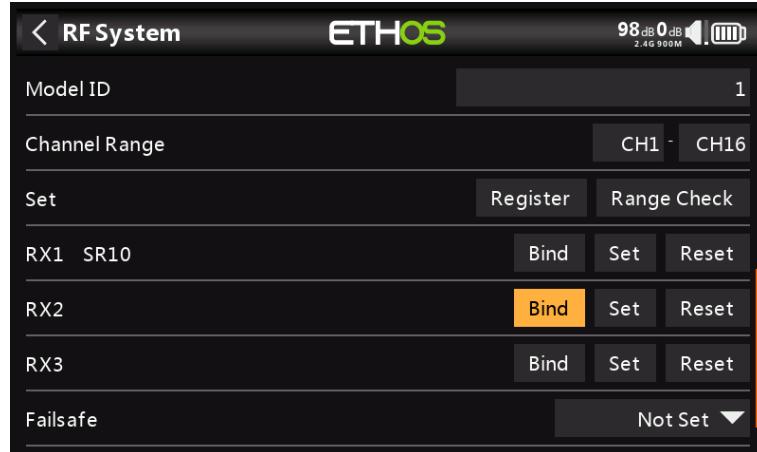


5. Tap 'Bind' on either the RX2 or RX3 line.
6. Power up the receivers.

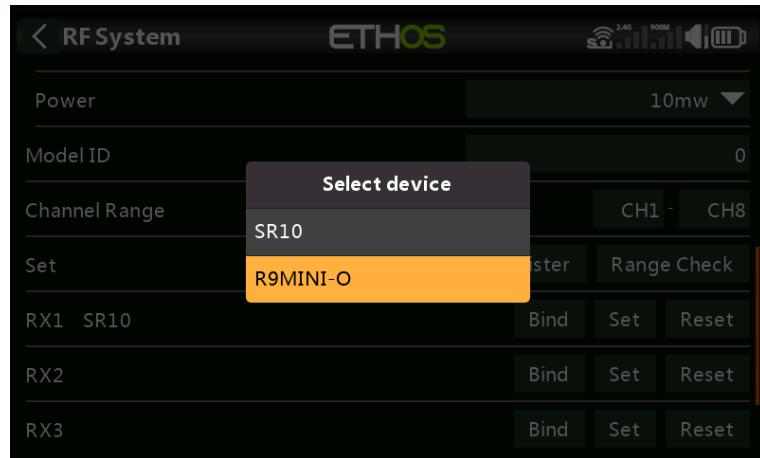

7. Select the R9 redundant receiver.

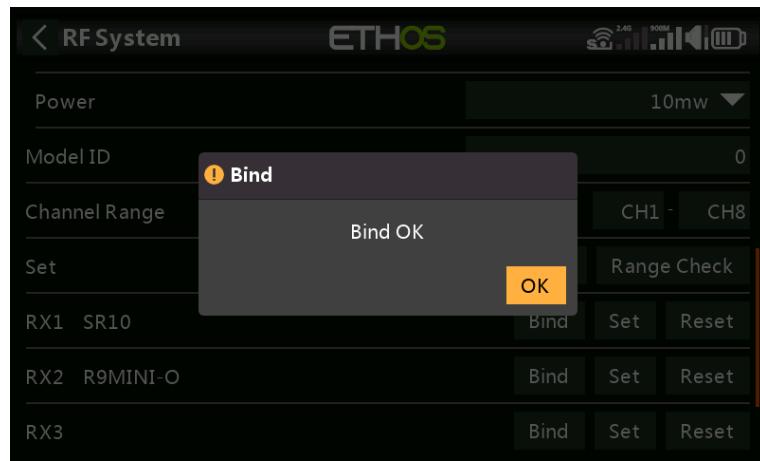


8. Tap on OK. Ensure that the Green LED on the redundant receiver is ON. The redundant receiver is now bound.

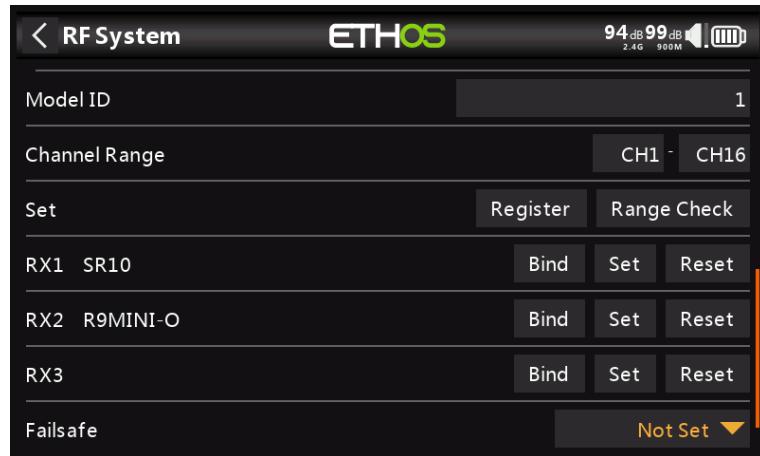


9. The redundant receiver will now be listed.


## Set – Receiver Options

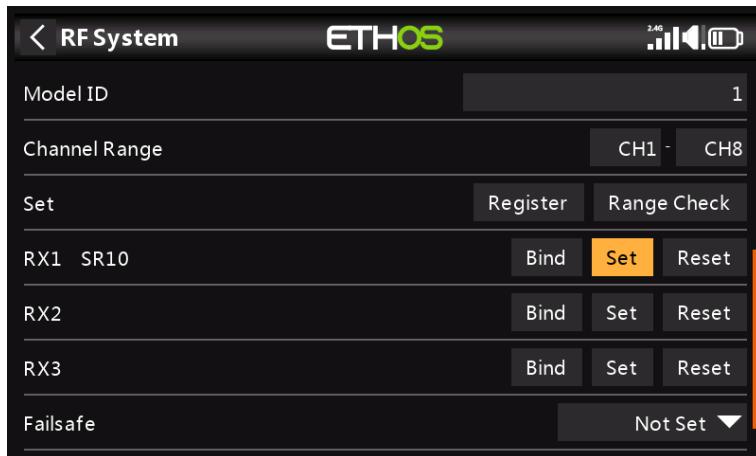

Tap the Set button next to Receiver 1, 2 or 3, and to bring up Receiver Options:

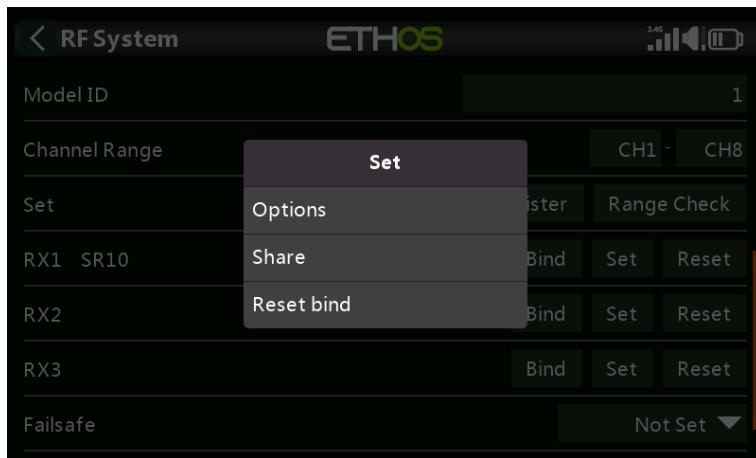


Tap on Options:

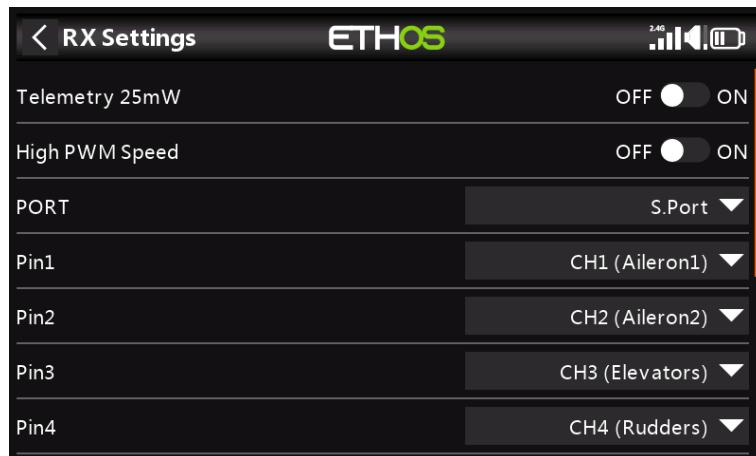

### Options

**Telemetry 25mW:** Checkbox to limit telemetry power to 25mW (normally 100mW), possibly required if for example servos experience interference from RF being sent close to them.

**High PWM Speed:** Checkbox to enable a 7ms PWM update rate (vs 20ms standard). Ensure that your servos can handle this update rate.

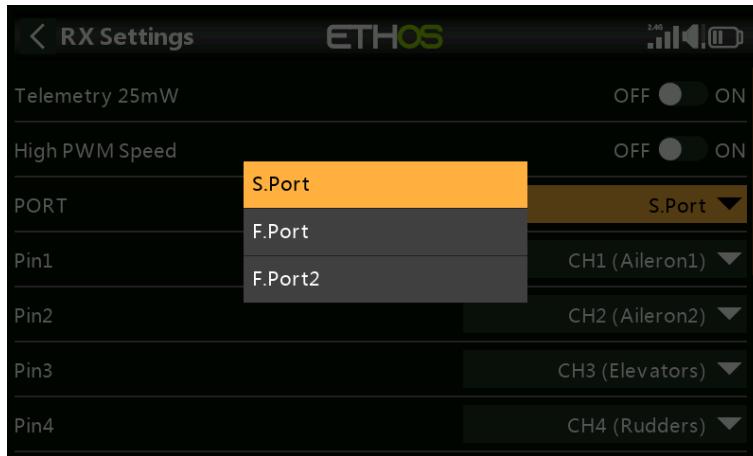

**Port:** Allows selection of the SmartPort on the receiver to use either S.Port, F.Port or the F.Port2 protocol. The F.Port protocol was developed with the Betaflight team to integrate the separate SBUS and S.Port signals. F.Port 2.0 also enables one Host device to communicate with several Slave devices on the same line.

The receiver Options dialog also gives the ability to Remap channels to the receiver pins.

### Share

The Share feature provides the ability to move the receiver to another ACCESS radio having a different Owner Registration ID. When the Share option is tapped, the receiver green LED turns off.

On target radio B, navigate to the RF System section and Receiver(n) and select Bind. Note that the Share process skips the Registration step on Radio B, because the Owner Registration ID is transferred from radio A. The receiver name from the source radio pops up. Select the name, the receiver will bind and its LED will go green.

A 'Bind successful' message will pop up.

Tap on OK. Radio B now controls the receiver. The receiver will remain bound to this radio until you choose to change it.

Press the EXIT button on Radio A to stop the Share process.

The receiver can be moved back to radio A by rebinding it to radio A.

**Note:** You do not need to use 'Share' if all your radios are using the same Owner ID / registration number. You can simply put the radio you want to use in bind mode, turn on the receiver, select the receiver in the radio and it will bind with that radio. You can switch to another radio the same way. It is best to keep the model receiver numbers the same when copying the models.

### Reset bind

If you change your mind about sharing a model, select 'Reset bind' to clean up and restore your bind. Power cycle the receiver, and it will be bound to your transmitter.

### Reset – Receiver


Tap on the Reset button to Reset the receiver back to factory settings and clear the UID. The receiver is unregistered with X20.

## Set Failsafe




The Failsafe mode determines what happens at the receiver when the transmitter signal is lost.

Tap on the drop-down box to see the failsafe options:

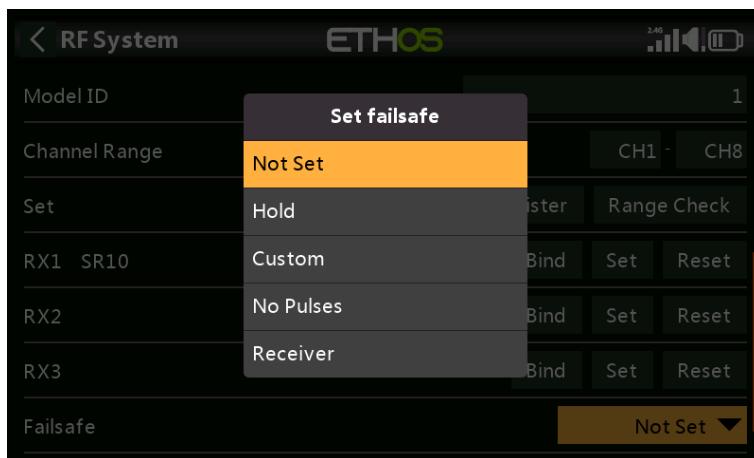

### Hold

Hold will maintain the last received positions.

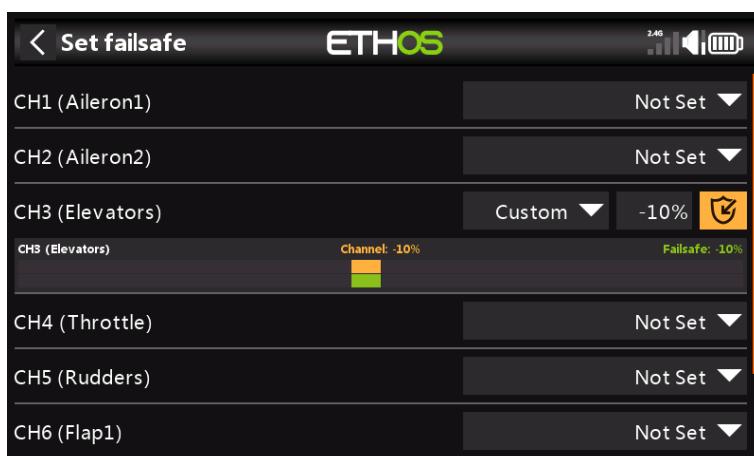

### Custom

Custom allows moving the servos to custom predefined positions. The position for each channel can be defined separately. Each channel has the options of Not Set, Hold, Custom or No Pulses. If Custom is selected, the channel value is displayed. If the set icon with an arrow is tapped, the current value of the channel is used. Alternatively, a fixed value for that channel can be entered by tapping on the value.

**No Pulses**

No Pulses turns off pulses (for use with flight controllers having return-to-home GPS on loss of signal).

**Receiver**

Choosing "Receiver" on X series or later receivers allows failsafe to be set in the receiver.

*Warning:* Be sure to test the chosen Failsafe settings carefully.

**Type: ACCST D16**

Mode ACCST D16 is for the ACCST 16ch two-way full duplex transmission, also known as the "X"-mode. For use with the legacy "X" series receivers.

**2.4G**

ACCST D16 operates on 2.4G, so the 2.4G RF section is on by default.

**Antenna**


Select Internal or External (on ANT1 connector) Antenna. Although the RF stage has built-in protection, it is good practice to ensure that an external antenna has been fitted before selecting the External antenna.

**Model ID**

When you create a new model, the Model ID is automatically allocated. The Model ID must be a unique number because it defines the behavior of the receiver lock function (aka: Receiver Match). This number is sent to the receiver, which will only respond to the number it was bound to. By default this is the number of the model's slot when it is created. It can however be changed manually, and will not change if a model is moved or copied.


**Channel Range**

Choice of which of the radio's internal channels are actually transmitted over the air. In D16 mode you can choose between 8 channels with data sent every 9ms, and 16 channels with data sent every 18ms.

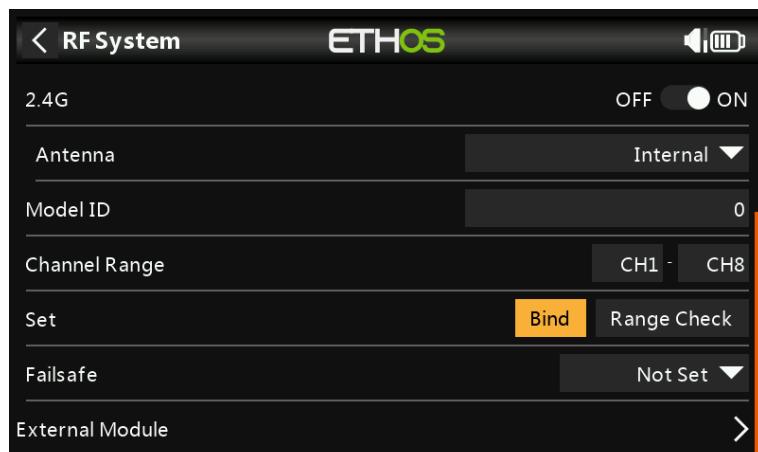


## Bind

1. Initiate the binding process by selecting [Bind]. A voice alert will announce 'Bind' every few seconds to confirm that you are in bind mode. In D16 mode a pop-up menu will open during bind to allow selection of the operation mode of the receiver. The options refer to the PWM outputs, and apply to receivers that support choosing between these 4 options using jumpers. Ensure that the receiver and RF module firmware support this option. If not, a regular bind takes place.

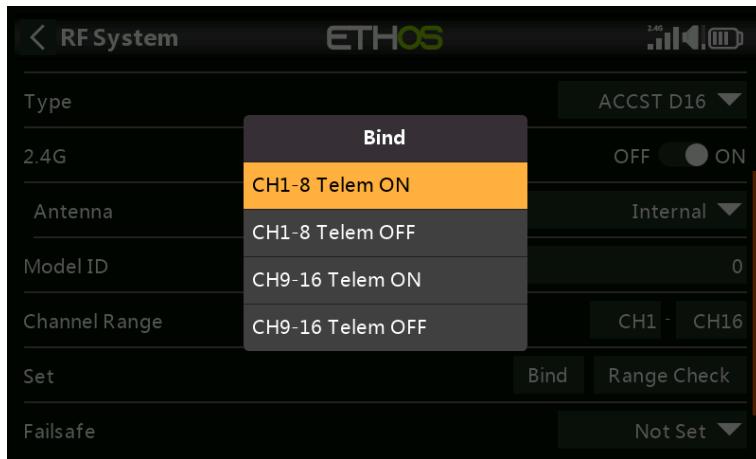


There are 4 modes with the combinations of Telemetry on/off and channel 1-8 or 9-16. This is useful when using two receivers for redundancy or to connect more than 8 servos using two receivers.

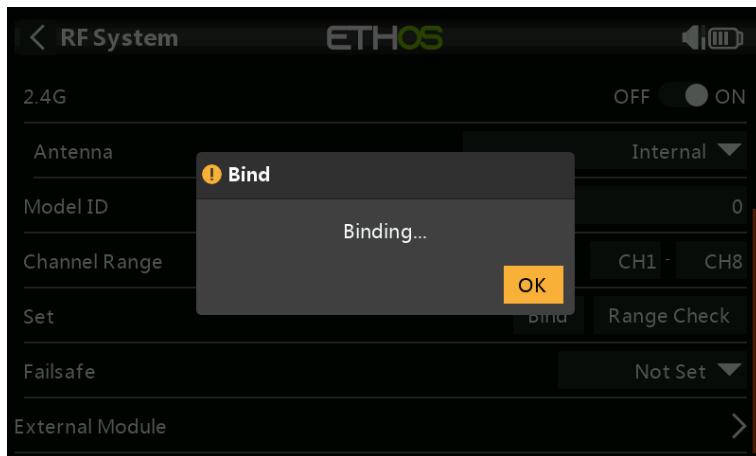

2. Power up the receiver, putting it into bind mode as per the receiver instructions. (Generally done by holding down the Failsafe button on the receiver during power up.)
3. The Red and Green LEDs will come on. The Green LED will go off, and the Red LED will flash when the binding process is completed.
4. Tap OK on the transmitter to end the Bind process, and power cycle the receiver.
5. If the Green LED on the receiver is on, and the Red LED is off, the receiver is linked to the transmitter. The receiver/transmitter module binding will not have to be repeated, unless one of the two is replaced. The receiver will only be controlled (without being affected by other transmitters) by the transmitter it is bound to.

### *Warnings – Very Important*

Do not perform the binding operation with an electric motor connected or an internal combustion engine running.

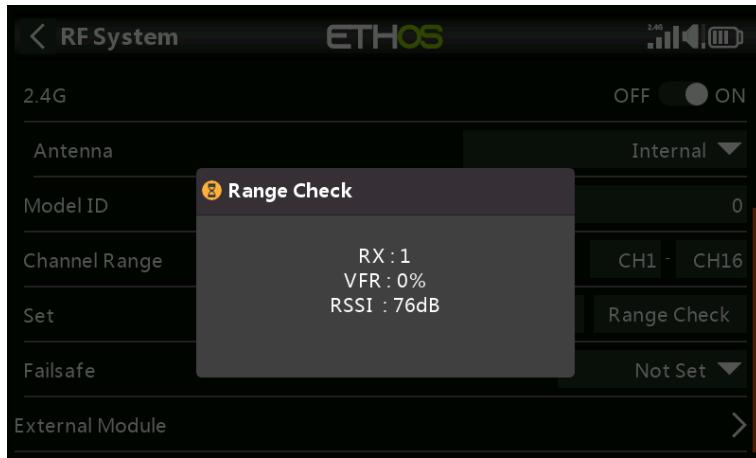

## Range

A range check should be done at the field when the model is ready to fly.

Range check is activated by selecting 'Range'. A voice alert will announce 'Range Check' every few seconds to confirm that you are in range check mode. A popup will display the Receiver Number, and the VFR% and RSSI values to evaluate how reception quality is behaving. When the Range Check is active, it reduces transmitter power by a factor of 900, which reduces the range by a factor of 30. Under ideal conditions, with both the radio and receiver at 1m above the ground, you should only get a critical alarm at about 30m apart.

Please refer to the Telemetry section for a discussion on VFR and RSSI values.

## Set Failsafe



The Failsafe mode determines what happens at the receiver when the transmitter signal is lost.

Tap on the drop-down box to see the failsafe options:



### Hold

Hold will maintain the last received positions.

### Custom

Custom allows moving the servos to custom predefined positions. The position for each channel can be defined separately. Each channel has the options of Not Set, Hold, Custom or No Pulses. If Custom is selected, a fixed value for that channel can be entered.

### No Pulses

No Pulses turns off pulses (for use with flight controllers having return-to-home GPS on loss of signal).

### Receiver

Choosing "Receiver" on X series or later receivers allows failsafe to be set in the receiver.

**Warning:** Be sure to test the chosen Failsafe settings carefully.


**Type: TD Mode**

<< to be completed when Tandem receivers are ready >>

## External Module

Currently the following external modules are supported: XJT Lite, R9M Lite, R9M Lite Access, R9M Lite Pro Access and PPM.

The External module can operate in 3 modes, i.e. ACCESS, ACCST D16 or TD MODE. Please see the following sections for configuration details.

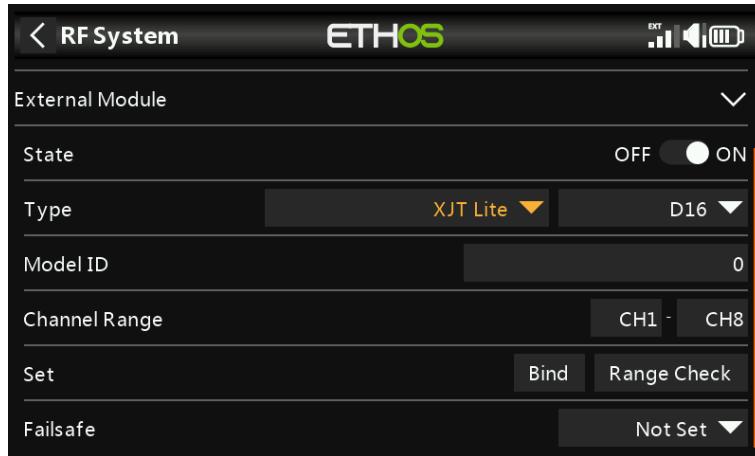


### **State**

The Internal Module can be On or Off.


### **Type**

#### **XJT Lite**


### **Protocol**

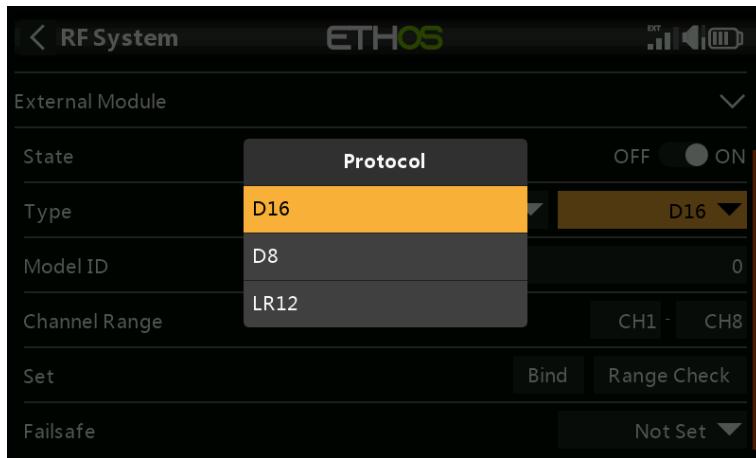

The XJT Lite can operate in D16 (up to 16 channels), D8 (up to 8 channels) or LR12 (up to 12 channels) modes.

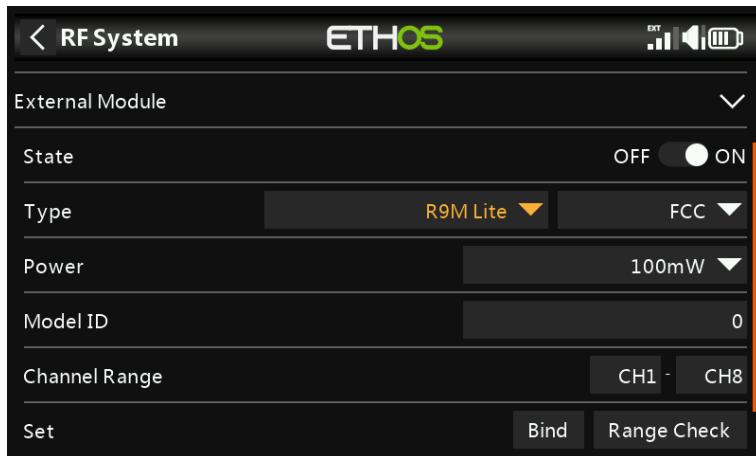**Type****R9M Lite**

o

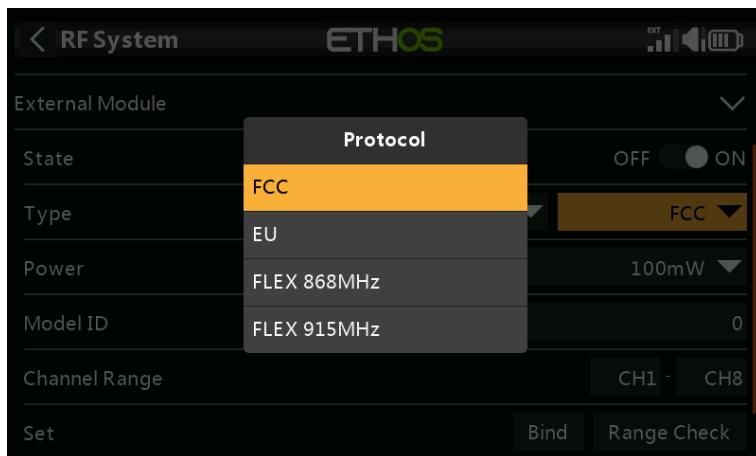**Protocol**

The R9M Lite can operate in the following modes:


Mode	RF Operating Frequency	RF Power
FCC	915MHz	100mW (with telemetry)
EU	868MHz	25mW (with telemetry) / 100mW (without telemetry)
FLEX 868MHz	Adjustable	100mW (with telemetry)
FLEX 915MHz	Adjustable	100mW (with telemetry)

**Type****R9M Lite ACCESS****Protocol**

The R9M Lite ACCESS operates in ACCESS mode.

**Type**

R9M Lite Pro ACCESS

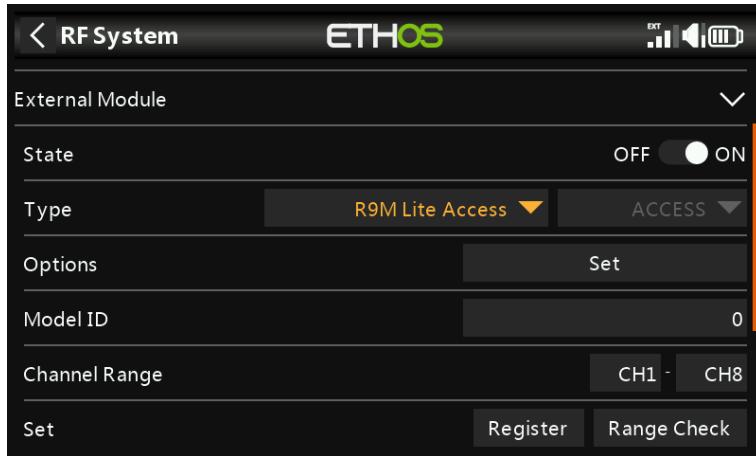**Protocol**

The R9M Lite Pro ACCESS operates in ACCESS mode.

Mode	RF Operating Frequency	RF Power
Non-LBT	915MHz	10mW / 100mW / 500mW / 100mW~1W (Self-adaptive)
LBT	868MHz	Telemetry mode (25mW) / Non-Telemetry mode (200mW / 500mW)

**Type**

PPM




The External RF Module can operate in PPM mode.

**Channels Range****Bind/Range****Set Failsafe**

These settings are similar to those for the Internal RF Module, so please refer to the relevant sections above for configuration details.

## Telemetry

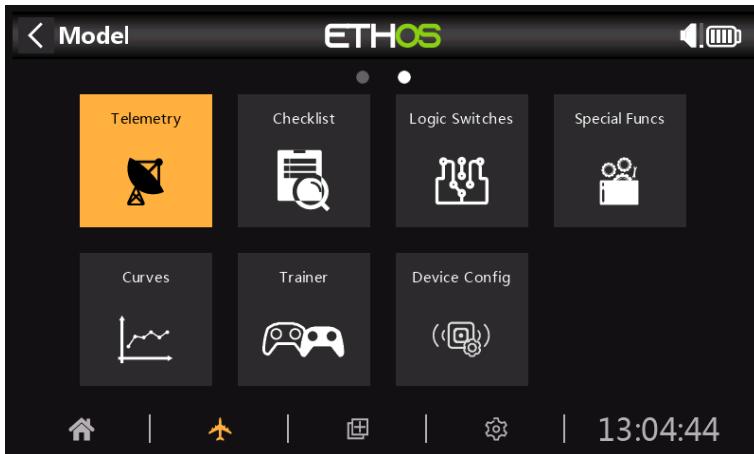

FrSky offers a very comprehensive telemetry system. The power of telemetry has lifted the RC hobby to a whole new level, and allows much more sophistication and a much richer modeling experience.

### **Smart Port telemetry**

FrSky's series of sensors are a hub-less design. Smart Port (S.Port) telemetry devices are daisy chained together in any sequence and plugged into the Smart Port connection on compatible X and S and later series receivers. The receiver can achieve full duplex (2-way) high speed communication with many compatible devices through this connection with little or no manual set up. This results in less clutter and gives you the freedom to design the system you need, not what a hub will allow.

#### **Key features:**

Each value received via telemetry is treated as a separate sensor, that has its own properties such as

- the sensor value
- the S.Port Data ID and Physical ID number
- the name of the sensor (editable)
- the unit of measurement
- the decimal precision
- option to log to the SD card

The sensor also keeps track of its min/max value.

More than one of the same sensor type can be connected, but the Physical ID must be changed (using the FrSky SBUS servo changer SCC) to ensure that each sensor in the smart port chain has a unique ID. Examples are a sensor for each cell in a 2 x 6S Lipo, or monitoring individual motor currents in a multi-motor model.

The same sensor can be duplicated, for example with different units, or for use in calculations such as absolute altitude, altitude above starting point, etc.

Each sensor can be individually reset with a special function, so for example you can reset your altitude offset to your starting point without losing all the other min/max values.

With FrSky sensors, once set up, they are auto-discovered whenever the complete system is powered up. However, when initially installed, they must be manually 'discovered' in order for the system to recognize them.

Telemetry Sensors can be

- played in voice announcements
- used in logical switches
- used in Inputs for proportional actions
- displayed in custom telemetry screens
- seen directly on the telemetry setup page without having to configure a custom telemetry screen

Displays are updated as data is received, and loss of sensor communication is detected.

## **Access Telemetry**

Single receiver telemetry with ACCESS works in the same way as before.

### ***Multi receiver telemetry***

ACCESS offers Trio Control, which allows one transmitter to control the channels and/or telemetry for up to 3 receivers per model. You no longer need to use the STK tools for setup, and Smart Port also allows the use of third-party input/output devices with pass-through mode.

ACCESS will automatically switch to the next receiver if the RF link to a receiver is lost. The switching order is Receiver 1, then 2, then 3.

The most common application would be using S.Port, by daisy chaining the S.Port sensor chain to all 3 receivers, which should be sharing a common power supply.

- Register and bind the receivers (refer to Model Setup).
- Connect the sensor and receiver Smart Ports in a daisy chain fashion.
- Discover new sensors (refer to Telemetry Setup), and test carefully that Smart Port switching is working correctly.

Note that on the transmitter there will only be one telemetry entry for RSSI and RxBat, but these values will dynamically come from the receiver that is currently handling the telemetry.

Simultaneous telemetry from three receivers will come later. Further developments are expected in this area.

### **Sensor Types:**

#### **1. Internal Sensors**

FrSky radios and receivers have built-in telemetry functions to monitor the strength of the signal being received by the model.

##### **RSSI**

Receiver Signal Strength Indicator (RSSI): A value transmitted by the receiver in your model to your transmitter that indicates how strong the signal is that is being received by the model. Warnings can be set up to warn you when it drops below a minimum value, indicating that you're in danger of flying out of range. Factors affecting the signal quality include external interference, excessive distance, badly oriented or damaged antennas etc.

It is not an absolute measurement, but a number that indicates the ratio of the signal to some initial "good" value. The number is relative, but can give an indication that the model may be approaching the range limit for control of the airplane.

The operating range of, for example, the X8R is about 1.45 – 2km under normal operating conditions.

## ACCESS

The default alarms for ACCESS are 35 for 'RSSI Low' and 32 for 'RSSI Critical'. Loss of control will happen when the RSSI drops to around 28.

These numbers are on a dB logarithmic scale, which means that the value drops by 6 every time the distance to the receiver is doubled. Close to the transmitter the RSSI reading is close to 100. At a distance of 125m, the reading should be about 50, and drop by 6 to 44 at 250m, to 38 at 500m, and to 32 at 1km. At this point there will be about another 500m to spare because 32 is still 4 above the loss of signal value of 28, which equates to a range factor of about 1.5 (if it had been 6db, it would have been double, so 4db is about 1.5 times).

## ACCST

The default alarms for ACCESS are 35 for 'RSSI Low' and 32 for 'RSSI Critical', while for ACCST they are 45 and 42 respectively. Loss of control will happen when the RSSI drops to around 28 for ACCESS and 38 for ACCST.

These numbers are on a dB logarithmic scale, which means that the value drops by 6 every time the distance to the receiver is doubled. Close to the transmitter the RSSI reading is close to 100. At a distance of 125m, the reading should be about 60, and drop by 6 to 54 at 250m, to 48 at 500m, and to 42 at 1km. At this point there will be about another 500m to spare because 42 is still 4 above the loss of signal value of 38, which equates to a range factor of about 1.5 (if it had been 6db, it would have been double, so 4db is about 1.5 times).


The warning for when telemetry is lost completely is announced as 'Telemetry Lost'. Be aware that further alarms will NOT sound, because the telemetry link has failed, and the radio can no longer warn you of an RSSI or any other alarm condition. In this situation it is wise to turn back to investigate the problem.

Note that when the radio and receiver are too close (less than 1m) the receiver may be swamped causing spurious alarms, resulting in an annoying "Telemetry Lost" - "Telemetry Recovered" alarm loop.

## VFR%

Prior to ACCESS V2.1, RSSI was based on a combination of received signal strength and lost frame rate. Lost frames have now been removed from the RSSI calculation, and added as a new sensor VFR% (Valid Frame Rate) to provide a measure of Link Quality. At this stage there is no built in alert for VFR%, but you can easily set one up as follows:

- Set a Logical Switch to become True when VFR drops below say 80% (please refer to the Logic Switches section):

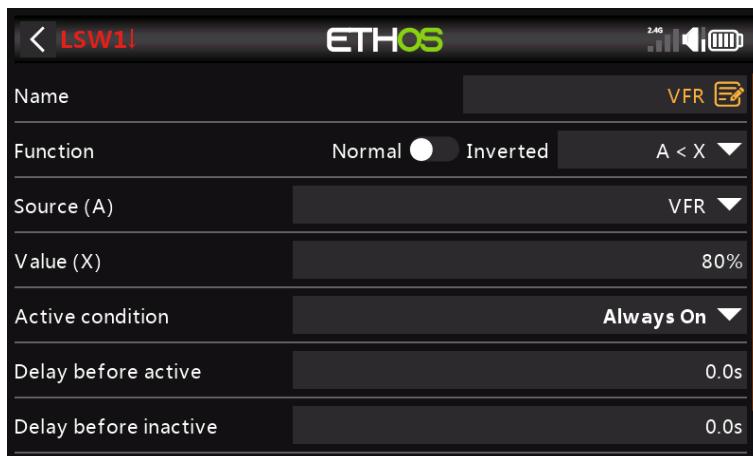

- Then create a Special Function to play the VFR value when the Logical Switch is True (please refer to the Special Functions section):



### RxBatt

Another standard internal sensor is the receiver battery voltage.

### ADC2

Some receivers support a second analog voltage input, which is available in telemetry as sensor ADC2.


## 2. '*External*' Sensors

The current FrSky telemetry system makes use of FrSky Smart Port sensors. The X and S and later series of telemetry enabled receivers have the Smart Port interface. Multiple Smart Port sensors can be daisy chained together, making the system easy to implement. Most receivers also have either one or both A1/A2 analog input ports, which are useful for monitoring battery voltages, etc.

## Telemetry Settings

Discover and edit sensor options including data logging. When the sensors are discovered they have an individual description for 2.4G or 900M so the sensor values can be used throughout the system. Up to 100 sensors are supported.

Calculated sensors may be added, including Consumption, Distance and Trip.

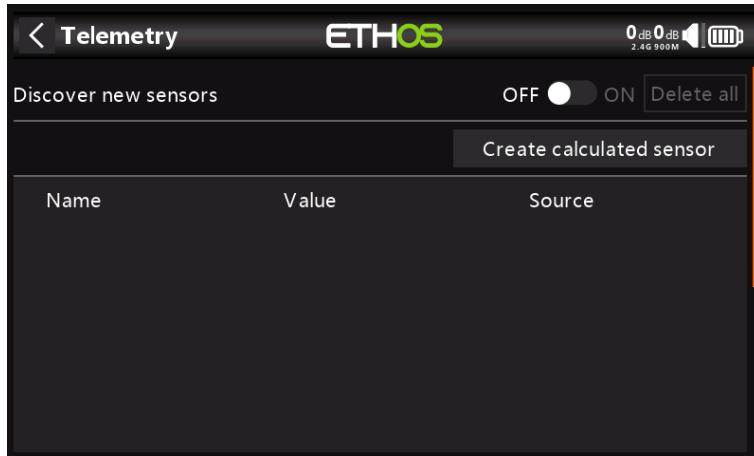

## Sensors

This screenshot shows the same 'Telemetry' settings screen, but now it displays a list of discovered sensors. The 'Discover new sensors' button has an orange 'ON' switch. The table below lists the following sensors:

Name	Value	Source
RSSI 2.4G	92dB	Internal Module 2.4G
RX 2.4G	0	Internal Module 2.4G
RxBatt 2.4G	5.05V	Internal Module 2.4G
LiPo 2.4G	---	Internal Module 2.4G
ADC2 2.4G	0.00V	Internal Module 2.4G


### **Discover new sensors:**

Once the sensors have been connected, and the radio and receiver have been bound and are powered up, enable 'Discover new sensors' to discover new sensors available. A flashing dot in the left column indicates sensor data being received, or the value shows in red if no data is being received. Up to 100 sensors are supported.

During discovery the screen will be automatically populated with all the sensors found.

The above example screen shows an SR10 Pro receiver's 'internal' sensors, which are:

- 1 RSSI (Receiver Signal Strength Indicator) on line 1,
- 2 RX: There is a new ETHOS telemetry receiver source feature named RX. RX provides the receiver number of the active receiver sending telemetry. RX is available in telemetry like any other sensor for real time display, Logic Switches, Special Functions and data logging.
- 3 RxBatt, the receiver battery voltage measurement on line 3,
- 4 ADC2, the receiver analog voltage input on line 4, and
- 5 VFR, the Valid Frame Rate percentage on line 4.

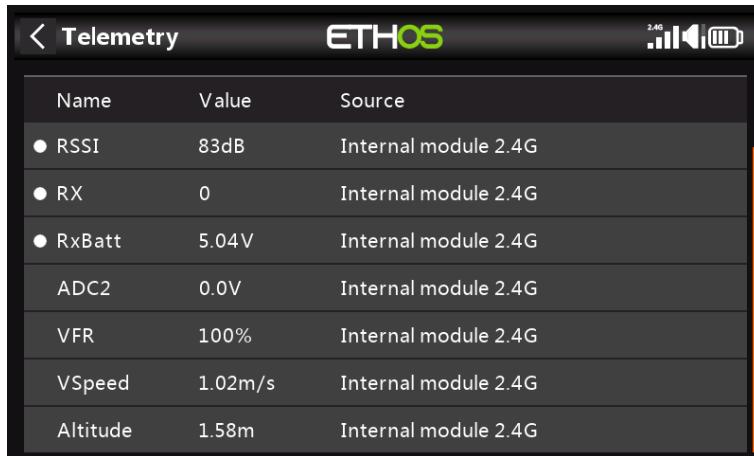

- 6 VSpeed, the Vertical Speed from a FrSky High Precision Vario (FVAS-02H) on line 6, and
- 7 Altitude, and Altitude from the same sensor.

Note that the minimum and maximum values are also defined for each parameter, even though they are not displayed on the sensor list. For example, when Altitude is defined, Altitude- and Altitude+ for the minimum and maximum altitude also become available.

Sensor discovery must be done for every model.


#### **Stop Discovery:**

Move the 'Discover new sensors' switch to Off to stop discovery once the sensors have been discovered.

#### **Delete all sensors:**


This option will delete all sensors so you can start again.

#### **Create Calculated Sensor**

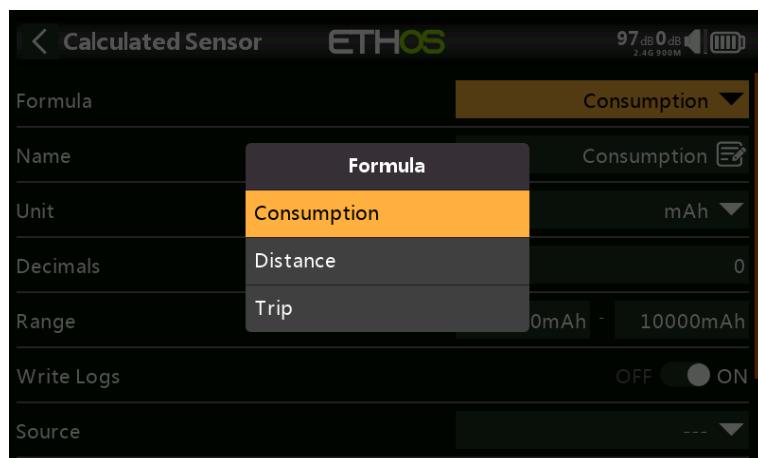

Calculated sensors may be added, including Consumption, Distance and Trip.

## Consumption Sensor

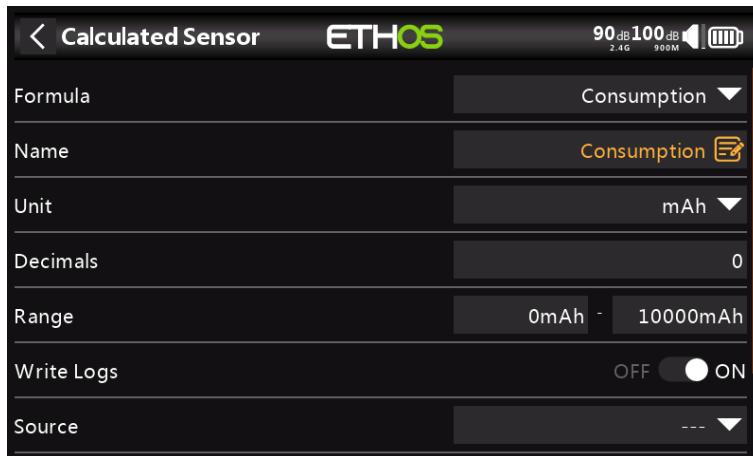

The Consumption sensor allows the energy consumed by your motor to be calculated from a current sensor such as the FAS series.

### Name

The sensor name, which may be edited.

### Unit

The measurement may be in mAh or Ah.

### Decimals

The display may be to 0, 1, 2 or 3 decimals.

### Range

The range may be from 0 up to a maximum of 1000Ah.

### Write Logs

Logs will be written to the SD card in the Logs folder if enabled.

### Source

After discovering sensors, select your current sensor.


### Persistent

Persistent allows storing the sensor value in memory when the radio is powered off or model is changed, and will be reloaded next time the model is used.

### Reset

Allows the sensor to be reset.

## Distance sensor

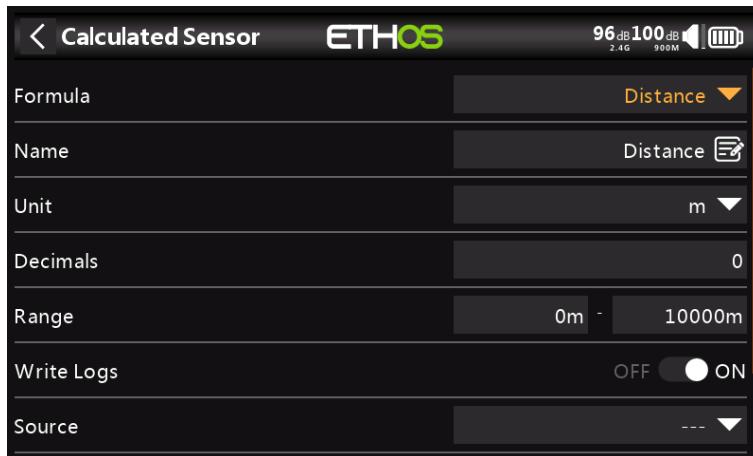

The Distance sensor allows the distance traveled to be calculated from a GPS sensor.

### Name

The sensor name, which may be edited.

### Unit

The measurement may be in cm, meters or feet.

### Decimals

The display may be to 0, 1, 2 or 3 decimals.

### Range

The range may be from 0 up to a maximum of 10km.

### Write Logs

Logs will be written to the SD card in the Logs folder if enabled.

### Source

After discovering sensors, select your GPS sensor.

### Persistent

Persistent allows storing the sensor value in memory when the radio is powered off or model is changed, and will be reloaded next time the model is used.

### Reset

Allows the sensor to be reset.

## Trip Sensor



The Trip sensor allows the accumulated distance between GPS coordinates to be calculated from a GPS sensor.

### Name

The sensor name, which may be edited.

### Unit

The measurement may be in cm, meters or feet.

### Decimals

The display may be to 0, 1, 2 or 3 decimals.

### Range

The range may be from 0 up to a maximum of 10km.

### Write Logs

Logs will be written to the SD card in the Logs folder if enabled.

### Source

After discovering sensors, select your GPS sensor.


### Persistent

Persistent allows storing the sensor value in memory when the radio is powered off or model is changed, and will be reloaded next time the model is used.

### Reset

Allows the sensor to be reset.

## Editing and Configuring Sensors

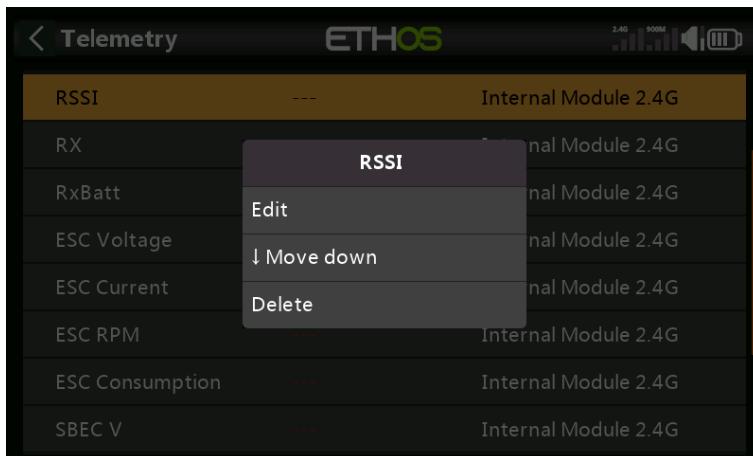

Tap on a sensor, then select 'Edit' from the popup dialog to edit the sensor settings. Alternatively select 'Move Down' to reorder sensors, or 'Delete' to remove it.



### Value

Displays the current sensor reading.

### ID

The ID is the sensor ID. The sending receiver ID is also shown.

### Name

The sensor name, which may be edited.

### Unit

The unit of measurement (dB in this example).

### Decimals


The decimal precision.

### Range

The low and high limits of a range can be set as a fixed value for scaling. This is mostly used when using a telemetry value as a source for a channel. This allows the Range to set to the desired scale.

### Write Logs

When enabled, the sensor data will be logged to the SD card.

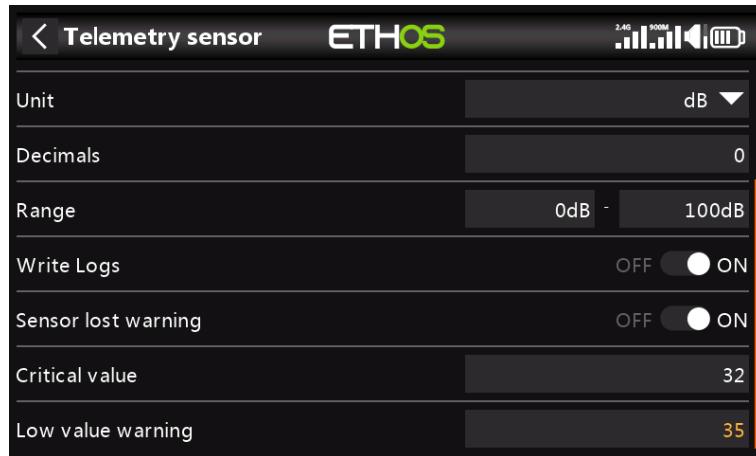

### Sensor Lost Warning

Will suppress the sensor lost warning when enabled.


### Critical value

Some sensors such as RSSI have built-in alerts, this being the critical value threshold setting. Please refer to the Access Telemetry section for a discussion of the RSSI alerts.


### Low value warning

The RSSI low value threshold setting.

## Checklist

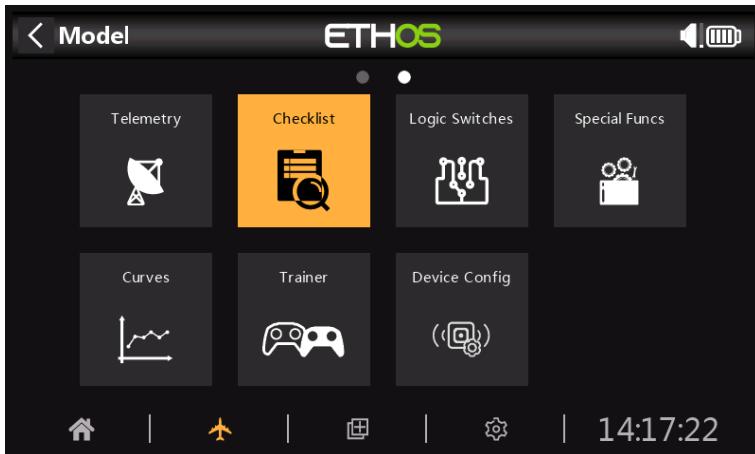

The Checklist function provides for a set of Preflight Checks. This is a group of safety features that take effect when powering up the radio and/or loading a model from the model list.

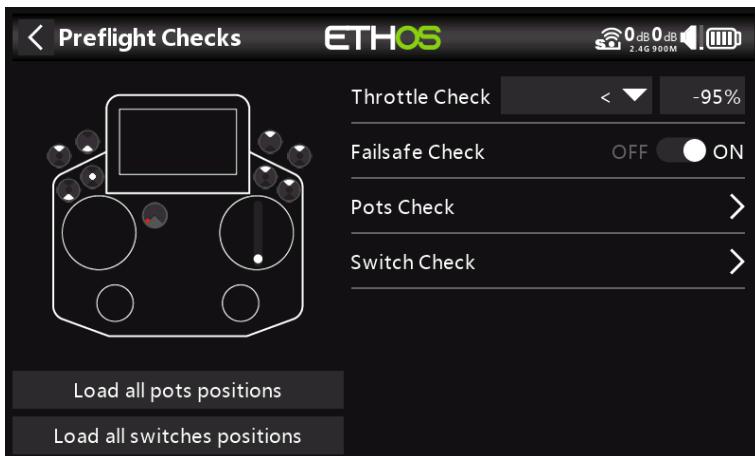


### **Throttle Check**

When enabled, it will warn you if the throttle stick is above the value set in it's parameter.

### **Failsafe Check**



When enabled, it will warn you if Failsafe has not been set for the current model. It is highly advisable to leave this enabled!

### **Pots Check**

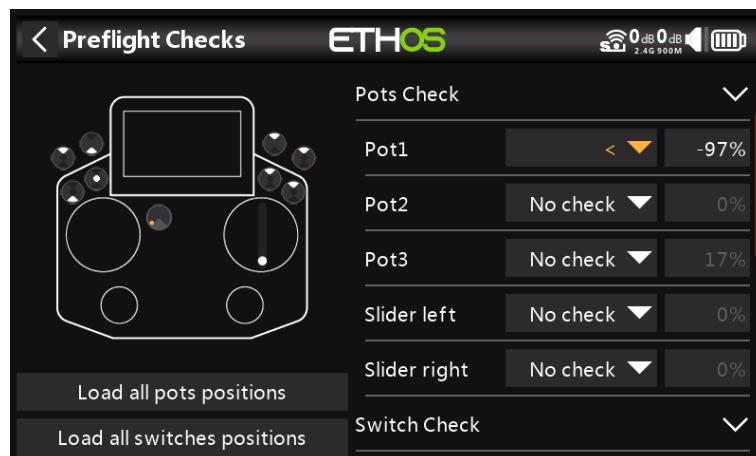

Defines whether the radio requests the pots and sliders to be in predefined positions at startup. The desired pot values can be entered for each pot.

## Switch Check

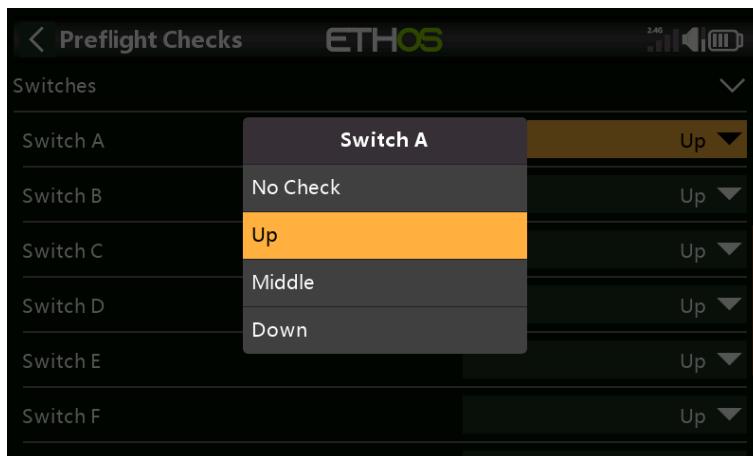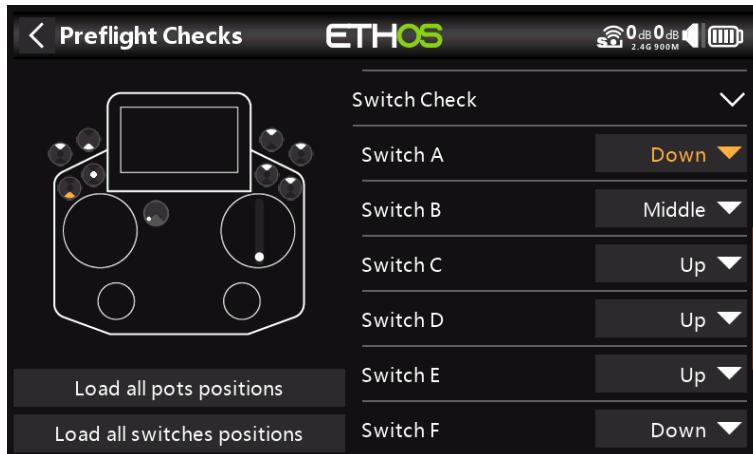


For each switch, you can define whether the radio requests that switches to be in the desired predefined positions. The options are shown above.

## Logic Switches




Logical switches are user programmed virtual switches. They aren't physical switches that you flip from one position to another, however they can be used as program triggers in the same way as any physical switch. They are turned on and off (in logical terms they become True or False) by evaluating the input conditions against the programming for the logical switch. They may use a variety of inputs such as physical controls and switches, other logical switches, and other sources such as telemetry values, mixer values, timer values, gyro and trainer channels. They can even use values returned by a LUA model script.


Up to 100 Logic Switches are supported.

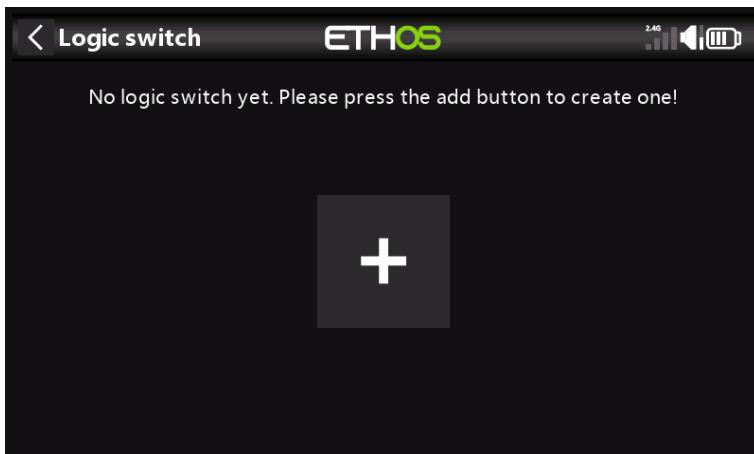

There are no default Logic Switches. Tap on the '+' button to add a Logic Switch.

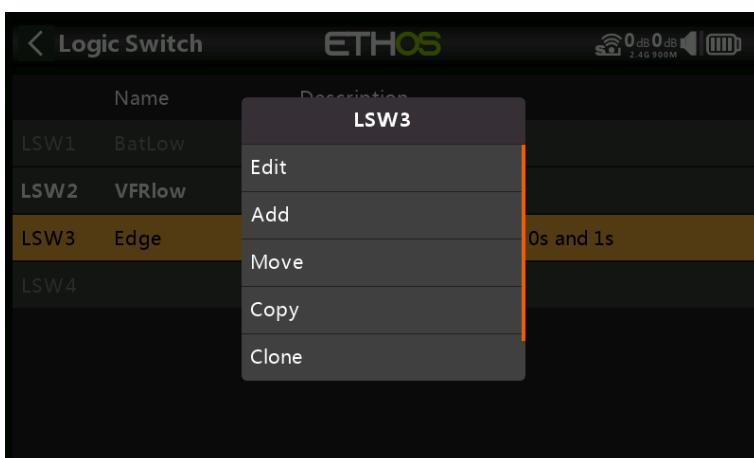


Once Logic Switches have been defined, tapping on one will bring up the above popup menu, allowing you to edit, add, move, copy/paste, clone or delete that switch.

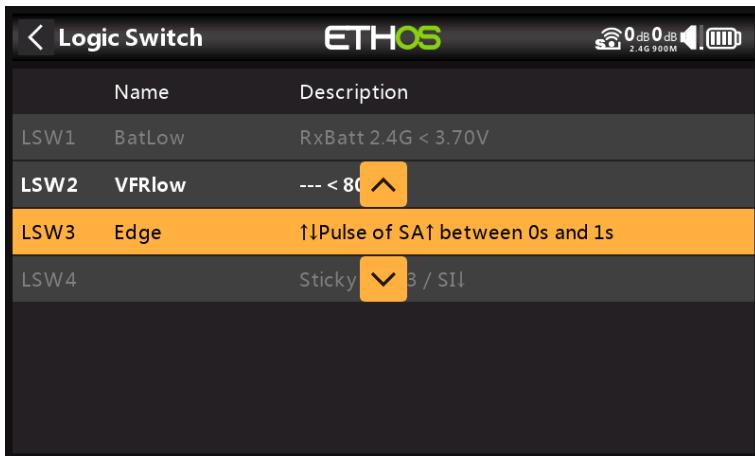

Selecting 'Move' will bring up arrow keys allowing the logic switch to be moved up or down.

## ***Adding Logic Switches***

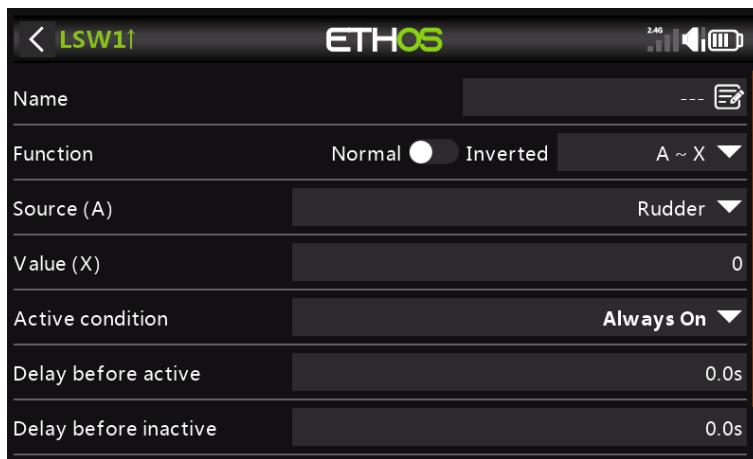

### ***Name***

Allows the Logic Switch to be named.

### ***Function***

The functions available are listed below. Please note that all functions may have normal or inverted outputs. Please also refer to the shared parameters section following the function descriptions below.

#### ***A ~ X***

The condition is True if the value of the selected source 'A' is approximately equal (within about 10%) to 'X', a user defined value.

In most cases, it is better to use the approximately equals function rather than the 'exactly' equals function.

#### ***A = X***

The condition is True if the value of the selected source 'A' is 'exactly' equal to 'X', a user defined value.

Care must be taken when using the 'exactly' equals function. For example, when testing if a voltage is equal to a setting of 8.4V, the actual telemetry reading may jump from 8.5V to 8.35V, so the condition is never met and the Logical Switch will never turn on.

**A > X**

The condition is True if the value of the selected source 'A' is greater than 'X', a user defined value.

**A < X**

The condition is True if the value of the selected source 'A' is less than 'X', a user defined value.

**|A| > X**

The condition is True if the absolute value of the selected source 'A' is greater than 'X', a user defined value. (Absolute means disregarding whether 'A' is positive or negative, and just using the value.)

**|A| < X**


The condition is True if the absolute value of the selected source 'A' is less than 'X', a user defined value. (Absolute means disregarding whether 'A' is positive or negative, and just using the value.)

 **$\Delta > X$** 


The condition is True if the change in value 'd' (i.e. delta) of the selected source 'A' is greater than or equal to the user defined value 'X', within the 'Check interval'. If the 'Check interval' is set to '---', then the check interval becomes infinite.

 **$|\Delta| > X$** 

The condition is True if the absolute value of the change ' $|d|$ ' in the selected source 'A' is greater than or equal to the user defined value 'X'. (Absolute means disregarding whether 'A' is positive or negative.). again, if the 'Check interval' is set to '---', then the check interval becomes infinite.

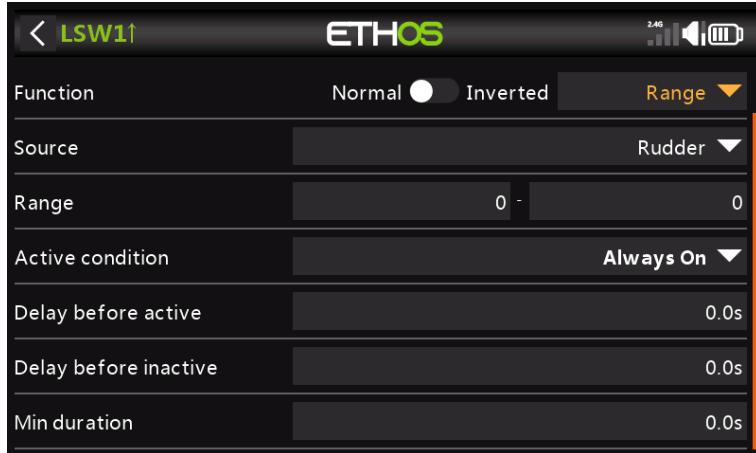**Range**

The condition is True if the value of the selected source 'A' is within the range specified.

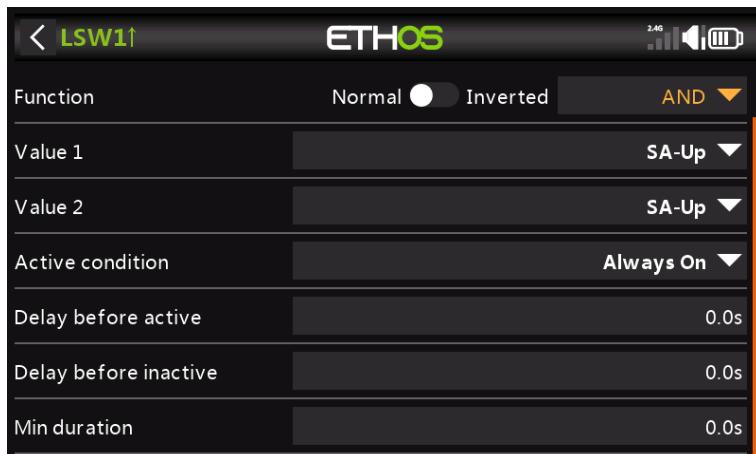**AND**


The condition is True if both the sources selected in Value 1 and Value 2 are true (i.e. ON).

**OR**

The condition is True if either of the sources selected in Value 1 and Value 2 is true (i.e. ON).

**XOR (Exclusive OR)**

The condition is True if either the Value 1 source or the Value 2 source is true (i.e. ON) but not both.

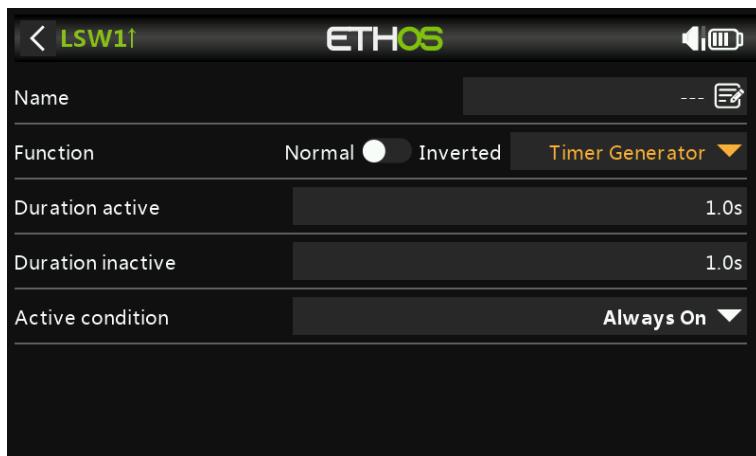**Timer Generator**

The Logical Switch toggles on and off continuously. It switches on for time 'Duration Active', and off for time 'Duration Inactive'.

**Sticky**

The Sticky function is latched on (i.e becomes True) when the 'Trigger ON condition' switches from False to True, and holds its value until it is forced to False when the 'Trigger OFF condition' switches from False to True. This can be gated by the optional 'Active Condition' parameter. This means that if the 'Active Condition' is True, then the Logical Switch output follows the Sticky function's condition. However, if the 'Active Condition' is False, then the Logical Switch output is also held False.

Note that the Sticky function continues to operate, even if its output is gated by the 'Active Condition' switch. As soon as the 'Active Condition' switch condition becomes True again, the Sticky function's condition is switched through to the Logic Switch output.

### Edge



Edge is a momentary switch that becomes True for the period specified in 'Duration' when its edge trigger conditions are satisfied.

### Rising Edge option



#### **During = '0.0s'**

During is in two parts [t1:t2]. With t1 of During = 0.0s and t2= 'Rising Edge', the logic switch becomes True (for the period specified in 'Duration') the instant the 'Trigger On Condition' transitions from False to True.



### During >= '0.0s'

During is in two parts [t1:t2]. With t1 of During a positive value (say 5.0s) and t2= 'Rising Edge', the logic switch becomes True (for the period specified in 'Duration') 5 seconds after the 'Trigger On Condition' transitions from False to True. Any additional 'spikes' during the t1 period are ignored.

### Falling Edge option



### During = '0.0s'

During is in two parts [t1:t2]. With During t1=0.0s and t2= '---' (Falling Edge), the logic switch becomes True (for the period specified in 'Duration') the instant the 'Trigger On Condition' transitions from True to False.



**During >= '0.0s**

During is in two parts [t1:t2]. With t1 of During a positive value (say 3.0s) and t2= '---' (Falling Edge), the logic switch becomes True (for the period specified in 'Duration') when the 'Trigger On Condition' transitions from True to False, having been True for at least 3 seconds.

**Pulse option**

During is in two parts [t1:t2]; if values are entered for both t1 and t2, then a pulse is needed to trigger the logic switch.



In the example above the logic switch will become True for the 'Duration' period if the 'Trigger On Condition' goes from False to True, and then goes from True to False after at least 2 seconds but no later than 5 seconds.

**Logic Switches – Shared Parameters**

The Logic Switches all have a number of shared parameters:

**Active Condition**

The Logic Switches can be gated by the optional 'Active Condition' parameter. This means that if the 'Active Condition' is True, then the Logical Switch output follows the Function's condition. However, if the 'Active Condition' is False, then the Logical Switch output is also held False.

Note that the Sticky function continues to operate, even if its output is gated by the 'Active Condition' switch. As soon as the 'Active Condition' switch condition becomes True again, the Function's condition is switched through to the Logic Switch output.

**Delay before active**

This value determines the time for which the Logic Switch conditions have to be True before the Logic Switch output becomes True. (Not relevant to

**Delay before inactive**

Similarly, this value determines the time for which the Logic Switch conditions have to be False before the Logic Switch output becomes False.


**Min Duration**

Once the Logic Switch becomes True, it will remain True for the duration specified. If the duration is the default 0.0s, the logic switch will only become True for one mixer processing cycle, which is too short to see, so the LSW line will not go bold.


### ***Logic Switches – Use with Telemetry***

If the source of a logic switch is a telemetry sensor, if your sensor is active => Logic Switch will be active

## Special Functions

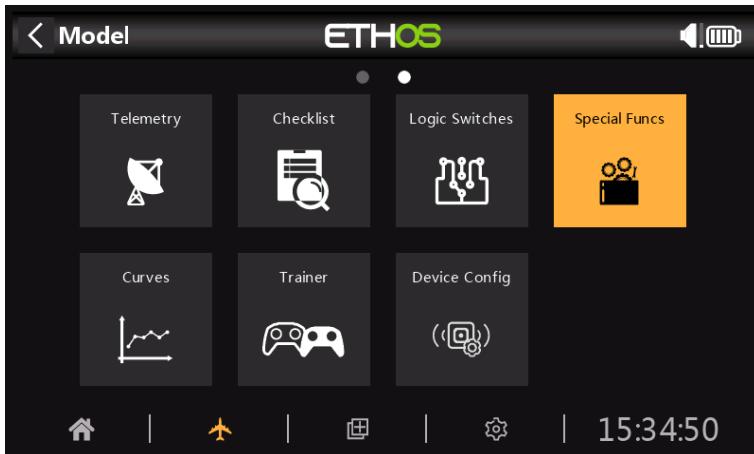


Special Functions can be configured to play values, play sounds, etc. Up to 100 Special Functions supported.

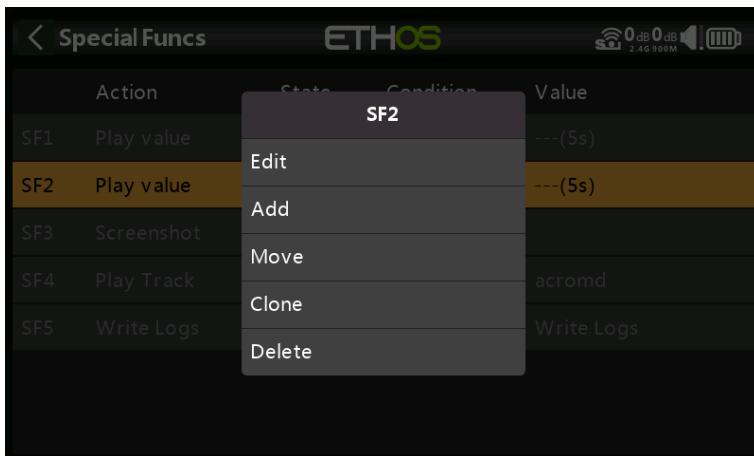

There are no default Special Functions. Tap on the '+' button to add a Logic Switch.

Once Logic Switches have been defined, tapping on one will bring up the above popup menu, allowing you to edit, add, move, copy/paste, clone or delete that switch.

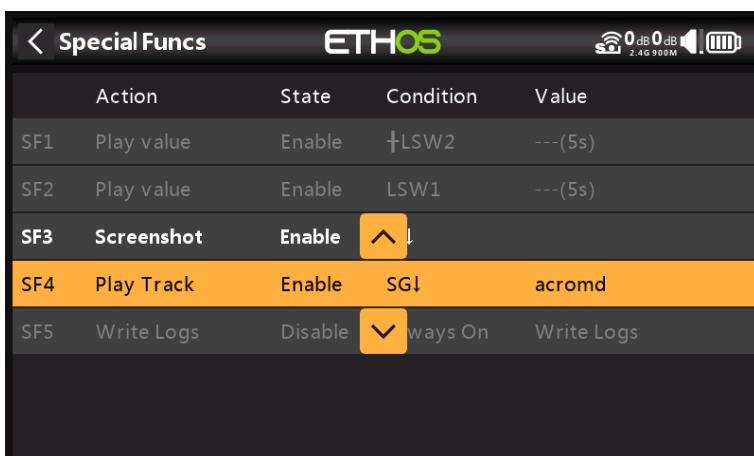


Selecting 'Move' will bring up arrow keys allowing the logic switch to be moved up or down.

## ***Special Functions***

Currently the following Special Functions are supported:

- Reset
- Screenshot
- Set failsafe
- Play track
- Play value
- Haptic
- Write logs

### ***Action: Reset***

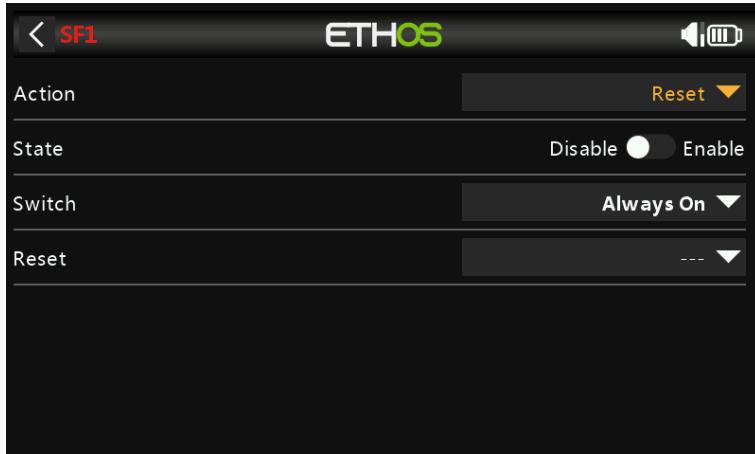

#### ***State***

Enable or disable this Special Function.

#### ***Switch***


The Special Function may be Always On, or activated by switch positions, function switches, logic switches, trim positions or flight modes.

To select the inverse of for example switch SG-up, if you long press Enter on the switch name and select the Negative check box in the popup the switch value will changes to !SG-up. This means the Special Function will be active when switch SG is not in the up position.


#### ***Reset***

The following categories may be reset:


- Flight data: resets both telemetry and timers
- All timers: resets all 3 timers
- Whole telemetry: resets all telemetry values.

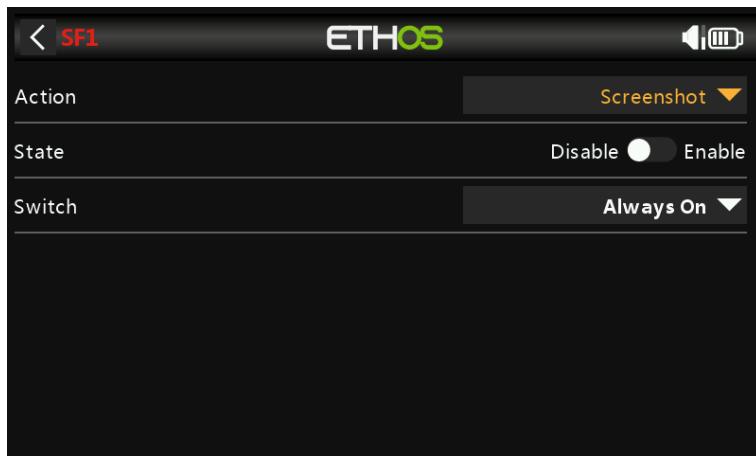**Action: Screenshot**

Will save a screenshot into the location:  
SD Card (drive letter)/screenshots/

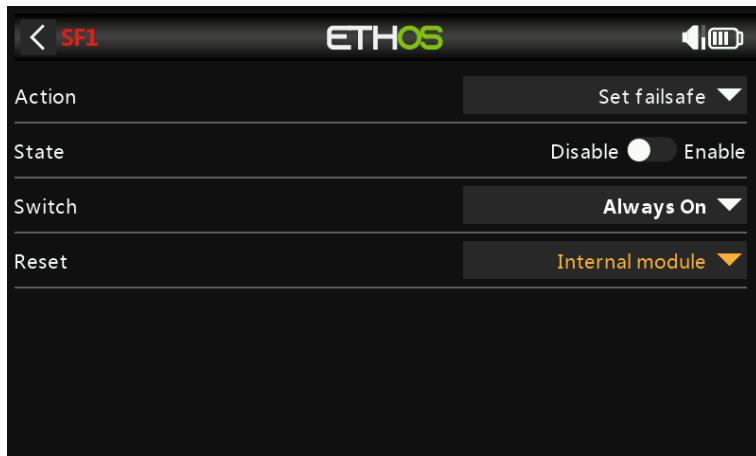**Action: Set failsafe**

At the time of writing, this Special Function is still under construction.

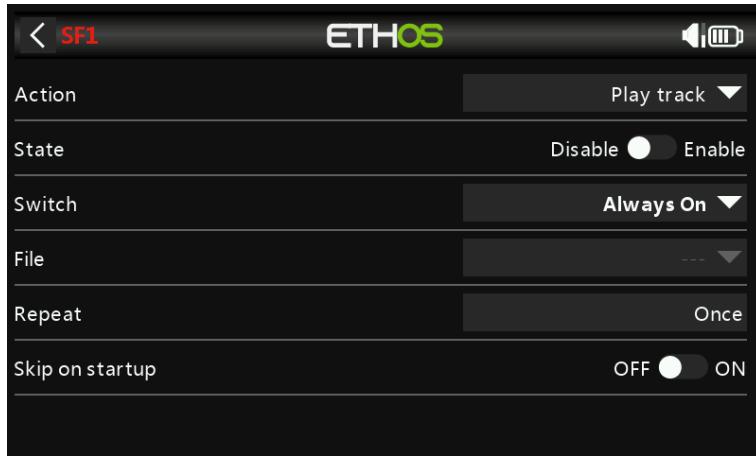**Action: Play track****State**

Enable or disable this Special Function.

**Switch**

The Special Function may be Always On, or activated by switch positions, function switches, logic switches, trim positions or flight modes.

**File**

Select the wav file to be played. The file should be located in:  
SD Card (drive letter)/audio/


Note that the standard audio files are generated by the Google Text-to-Speech tools.

**Repeat**

The value may be played once, or repeated at the frequency entered here.

**Skip on startup**

If enabled, the file will not be played on startup.

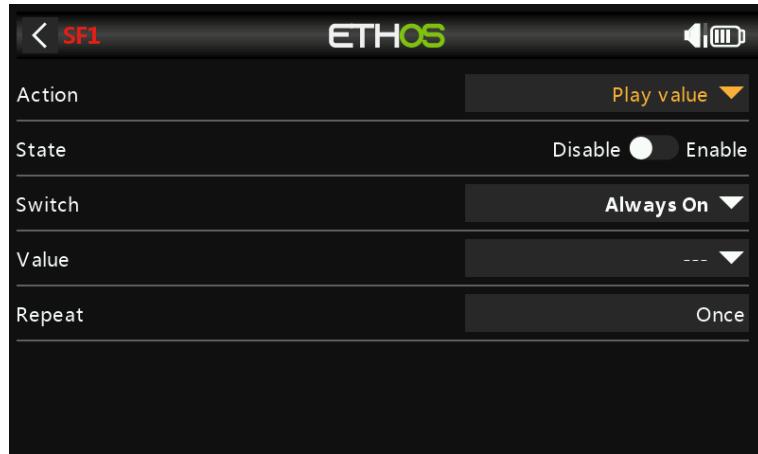**Action: Play value****State**

Enable or disable this Special Function.

**Switch**

The Special Function may be Always On, or activated by switch positions, function switches, logic switches, trim positions or flight modes.


**Value**

Select the source whose value is to be played. The source may be from any of the following:

- Analogs, i.e. sticks, pots or sliders
- Switches
- Logic Switches
- Trims
- Channels
- Gyro
- Trainer
- Timers
- Telemetry

**Repeat**

The value may be played once, or repeated at the frequency entered here.

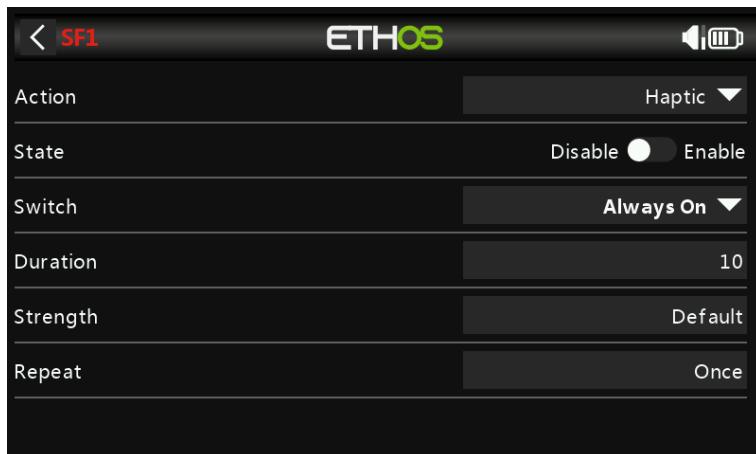**Action: Haptic**

This Special Function assigns haptic vibration

**State**

Enable or disable this Special Function.

**Switch**

The Special Function may be Always On, or activated by switch positions, function switches, logic switches, trim positions or flight modes.

**Duration**

Sets the duration in seconds.

**Strength**

Select the strength of the haptic vibration, between 1 and 10. The default is 5.

**Action: Write Logs****State**

Enable or disable this Special Function.

**Switch**

The Special Function may be Always On, or activated by switch positions, function switches, logic switches, trim positions or flight modes.

**Write Interval**

The logs write interval is user adjustable between 100 and 500ms.

***Sticks/Pots/Sliders***

Enables logging of Sticks/Pots/Sliders.


***Switches***

Enables logging of Switches.

***Logic Switches***


Enables logging of Logic Switches.

## Curves

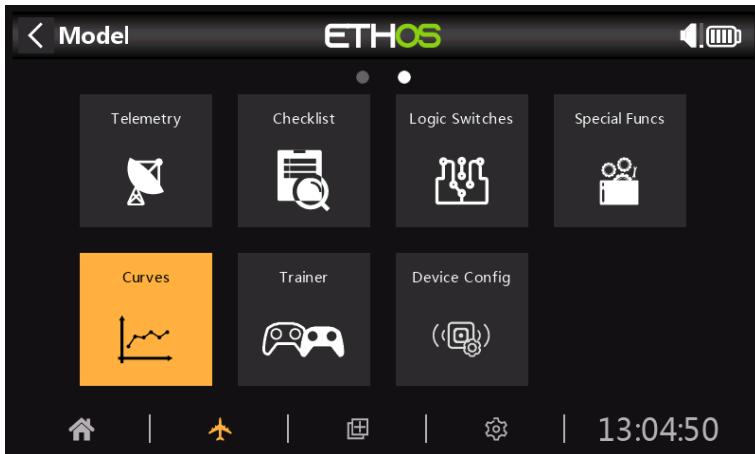


Curves may be used to modify the control response in the Mixers or Outputs. While the standard Expo curve is available directly in those sections, this section is used to define any custom curves that may be required. The 'Add curve' function may also be reached from the Mixer and Outputs edit screens directly.


There are 100 curves available.

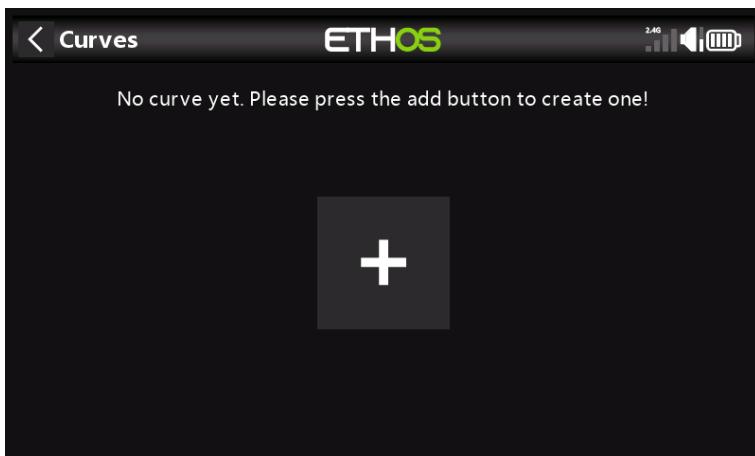

There are no default curves (except Expo which is built in). Tap on the '+' button to add a new curve. Tapping on a list of curves brings up a dialog allowing you to Edit, Move, Copy, Clone or Delete the highlighted curve. You can also add another curve.

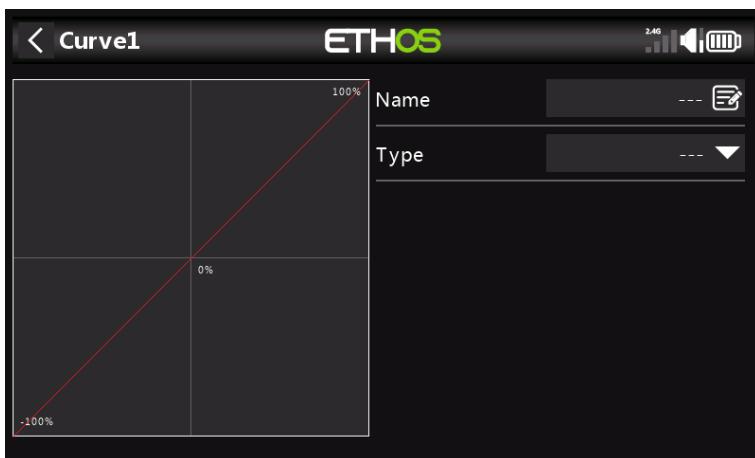

The initial screen allows you to name your curve, and to select the curve type.

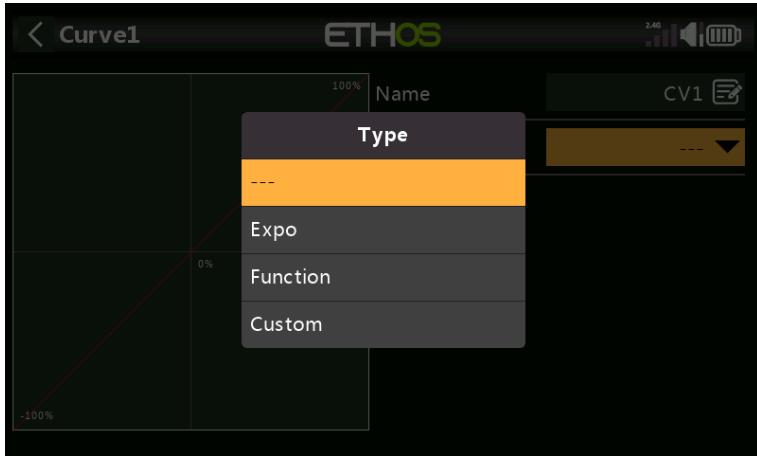

The available curve types are:


### **Expo**

The default exponential curve has value of 40.




A positive value will soften the response around 0, while a negative value will sharpen the response around 0. Softening the response around mid stick helps to avoid over controlling the model, especially for beginners.

### **Function**

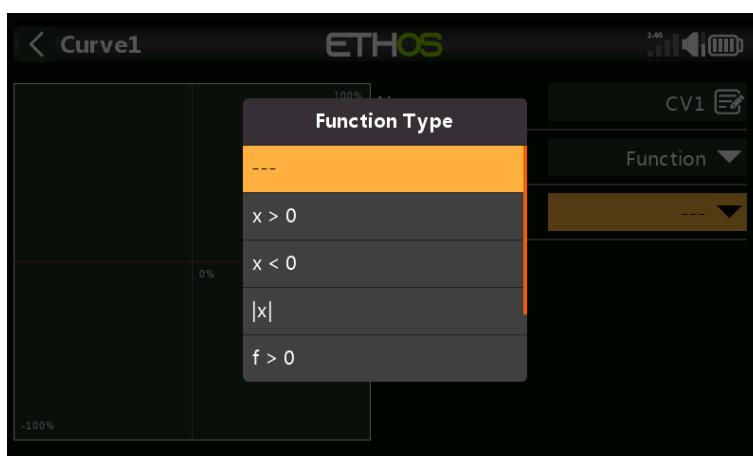


The following mathematical function curves are available:

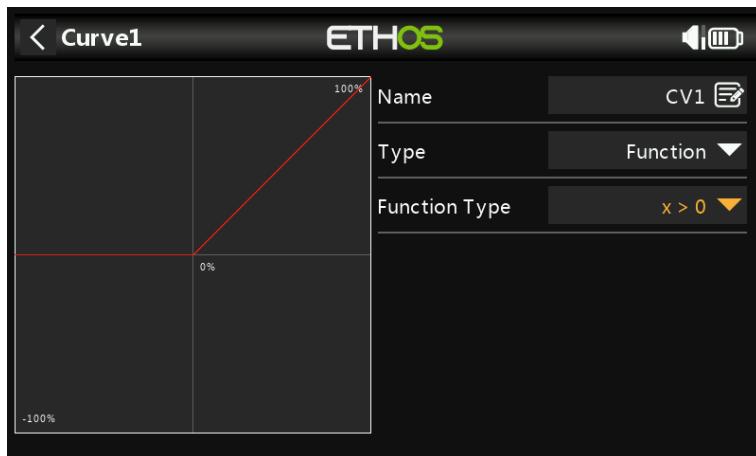$x > 0$ 

If the source value is positive, then the curve output follows the source.  
If the source value is negative, then the curve output is 0.

 $x < 0$ 


If the source value is negative, then the curve output follows the source.  
If the source value is positive, then the curve output is 0.

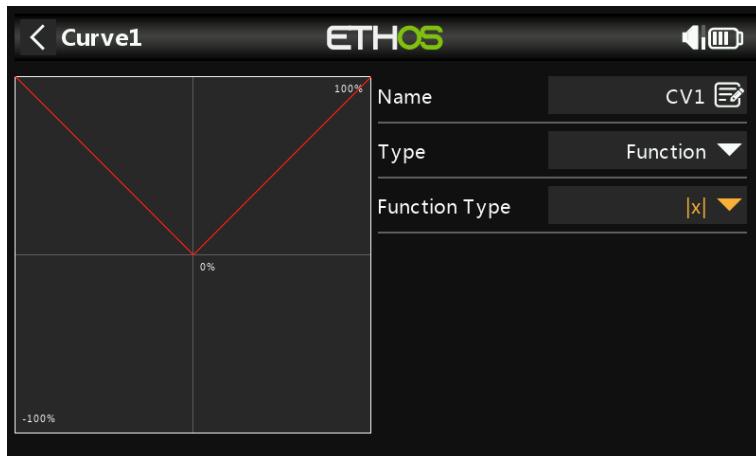 $|x|$ 


The curve output follows the source, but is always positive (also called 'absolute value').

$f > 0$ 

If the source value is negative, then the curve output is 0.  
If the source value is positive, then the curve output is 100%.

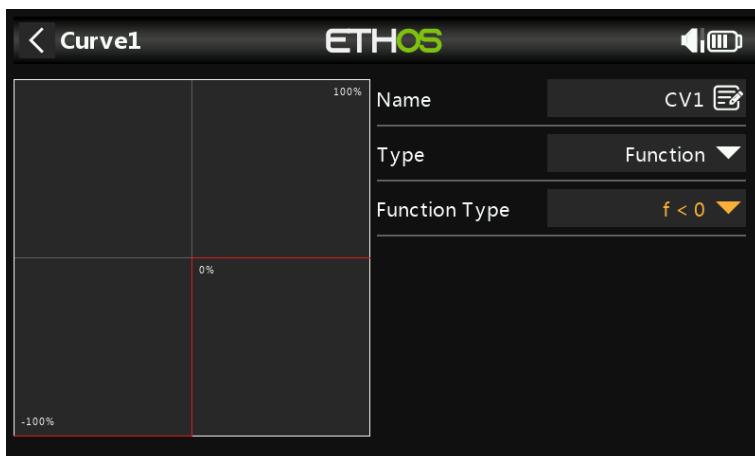
 $f < 0$ 

If the source value is negative, then the curve output is -100%.  
If the source value is positive, then the curve output is 0.

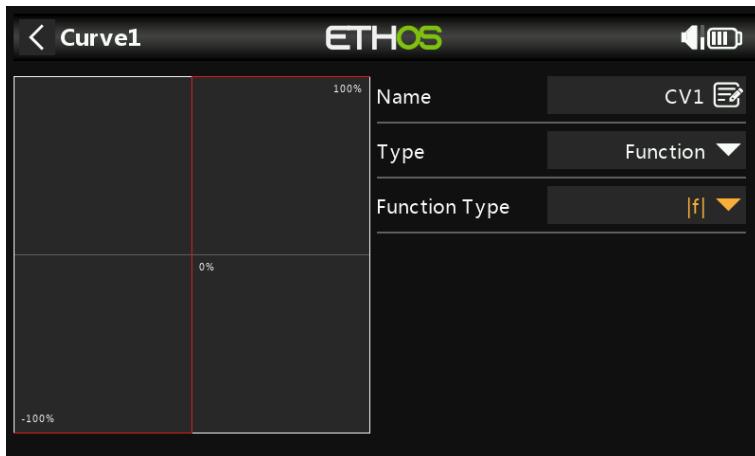 $|f|$ 

If the source value is negative, then the curve output is -100%.  
If the source value is positive, then the curve output is +100%.

## Custom

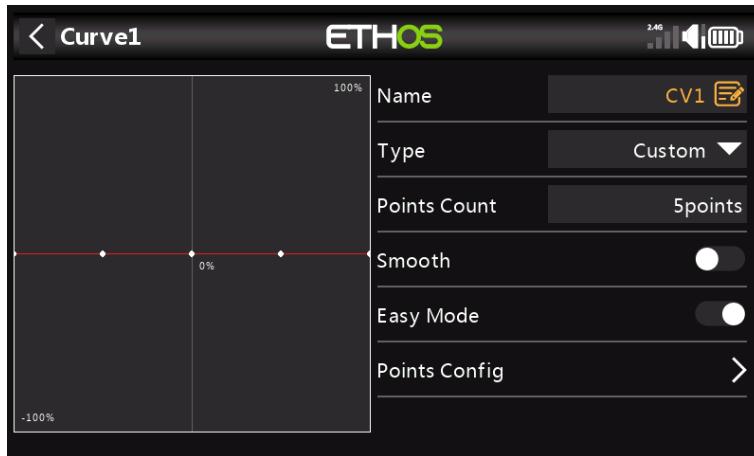


### Points Count

The default custom curve has 5 points. You may have up to 21 points on your curve.

### Smooth

If enabled a smooth curve is created through all points.

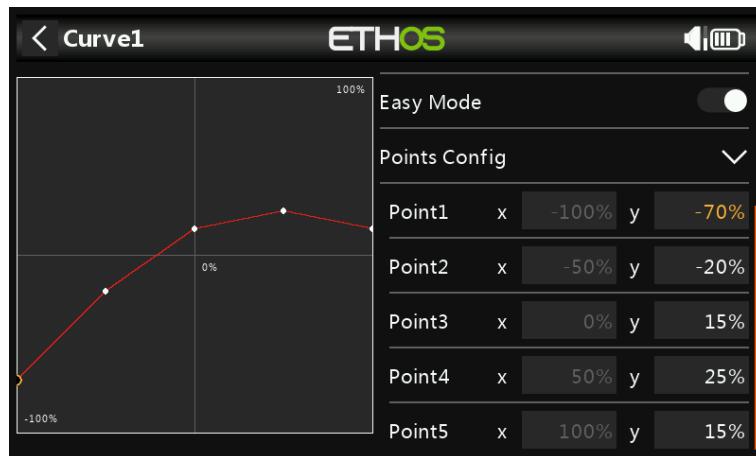


### Easy Mode = On

Easy mode has equidistant fixed values on the X axis, and only allows the Y coordinates for the curve to be programmed.

### Points Config

With Easy Mode On, the Y coordinates may be configured (see example above).

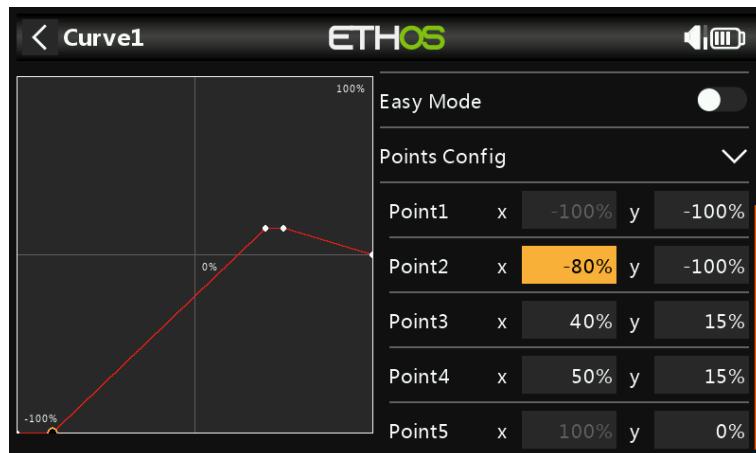



***Easy Mode = Off***

Easy mode has equidistant fixed values on the X axis, and only allows the Y coordinates for the curve to be programmed.

***Points Config***


With Easy Mode Off, both the X and Y coordinates may be configured, (see example above). Note that the -100% and +100% X coordinates for the curve end-points cannot be edited, because the curve must cover the full signal range.

## Trainer

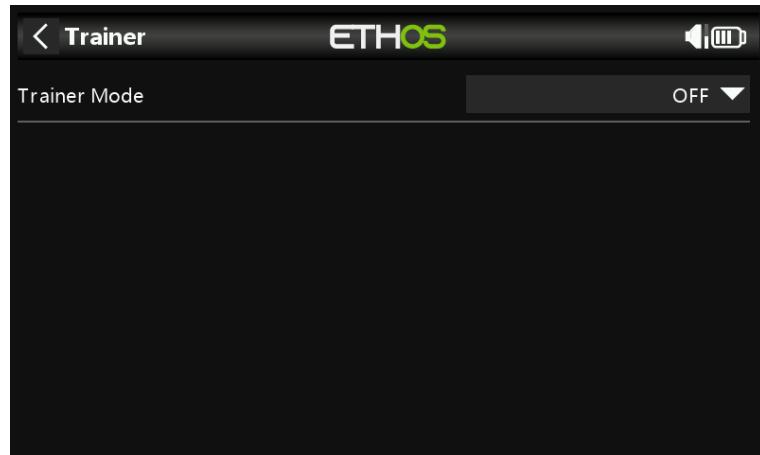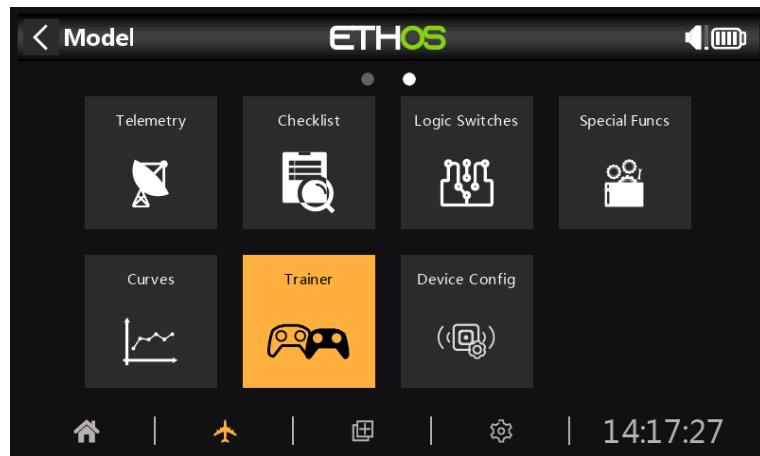

The Trainer function is off by default.

### ***Trainer Mode = Master***

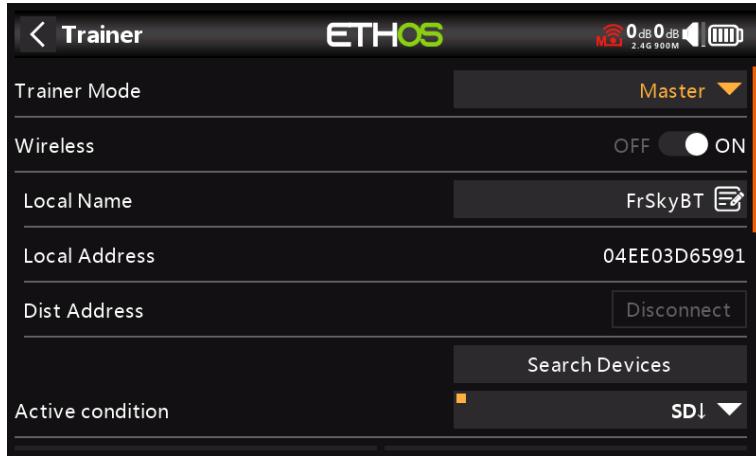

#### ***Link Mode (Wireless Off/On)***

The trainer link can be either via cable or wireless (Bluetooth). The cable should be a 3.5mm mono audio lead.

#### ***Local Name***

This is the local BT name that will be displayed in devices being connected. The default name is FrSkyBT, but may be edited here.

### **Local Address**


This is the local Bluetooth address of the radio.

### **Dist Address**


Once a Bluetooth device has been found and linked, the remote device's Bluetooth address is displayed here.

### **Search Devices**

The Search Devices button will be available if the Trainer Mode is Master.

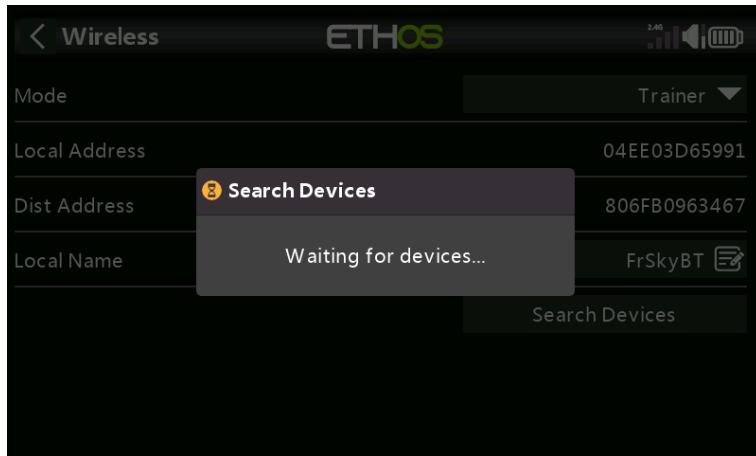

Tap on 'Search Devices' to put the radio into BT search mode.

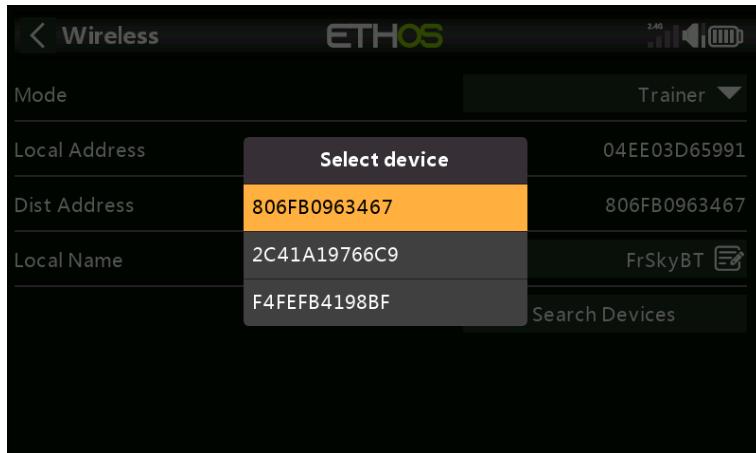


Found devices are listed in a popup dialog with a request to select a device. Select the BT address that matches the radio to be used as training mate.

### **Active Condition**


Control of the model can be transferred to the student radio by a switch or button, a function switch, logic switch, trim position, or flight mode.

### **Trainer Channels**

Up to 16 controls may be transferred from the student radio to the master radio when the 'Active Condition' set above is active.

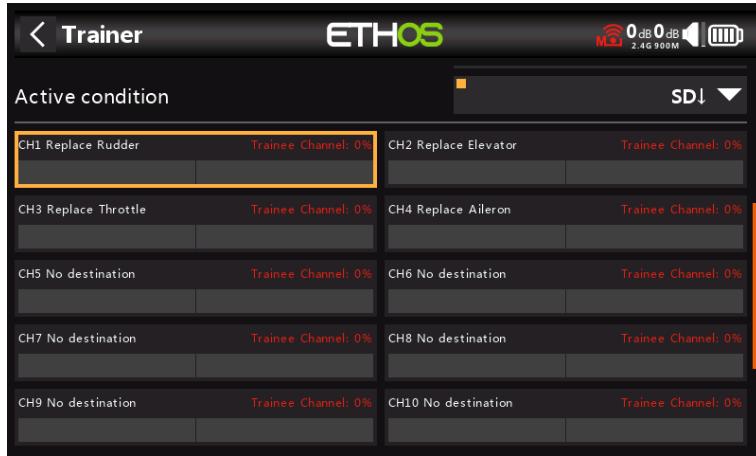

Tap on each channel to configure it individually:

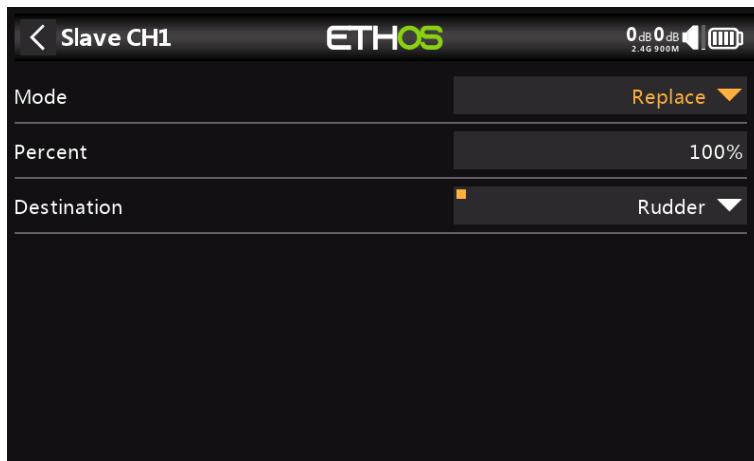

### **Mode**

OFF: disables the channel for trainer use.

Add: selects additive mode, where both master and slave signals are added so both teacher and student can act upon the function.


Replace: replaces the master radio's control with the student's, so the student has full control while the 'Active Condition' is active. This is the normal mode of use.

### **Percent**

Normally set to 100%, but can be used to scale the Slave input.

### **Destination**

Maps the slave radio's channel to the corresponding function.

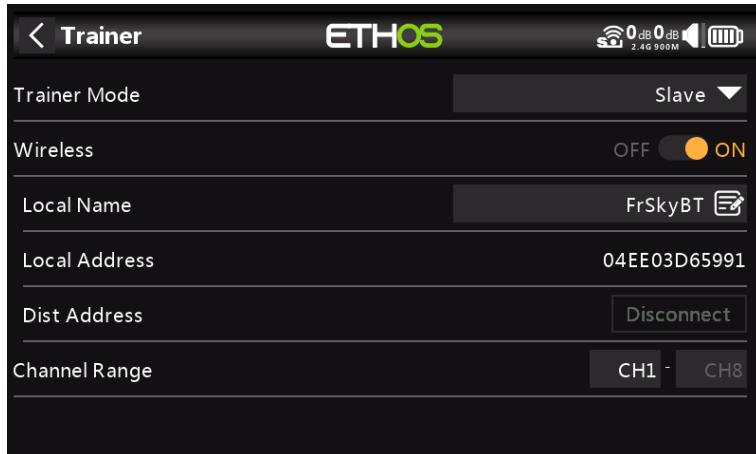***Trainer Mode = Slave******Link Mode (Wireless Off/On)***

The trainer link can be either via cable or wireless (BT). The cable should be a 3.5mm mono audio lead.

***Local Name***

This is the local BT name that will be displayed in devices being connected. The default name is FrSkyBT, but may be edited here.

***Local Address***

This is the local Bluetooth address of the radio.


***Dist Address***

Once a Bluetooth device has been found and linked, the remote device's Bluetooth address is displayed here.


***Channels Range***

Selects which channel range is transferred to the master radio.

## Device Config

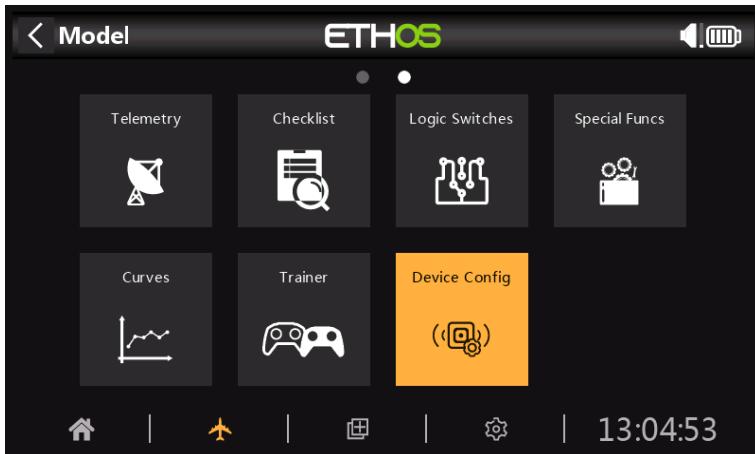

Device Config contains tools for configuring devices like sensors, receivers, the gas suite, servos and video transmitters.

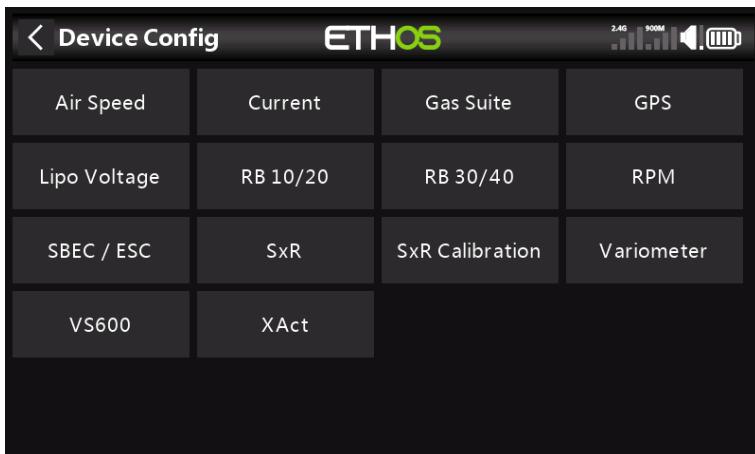

The following devices are currently supported:

- Airspeed
- Current
- Esc
- Gas Suite
- GPS
- Lipo Voltage
- RB 10/20
- RB 30/40
- RPM
- SBEC/ESC
- SxR
- SxR Calibration
- Variometer
- VS600 video transmitter
- XAct servos

Please refer to the device's manual for further details.

## Programming Tutorials

This section describes some programming examples for a number of models, preceded by a basic radio setup section covering the basic settings needed for any model.

- Initial radio setup example
- Basic Power Model example
- Simple 4ch Glider example
- Basic Wing example

Although these examples may appear to be for specific model types, they are merely a vehicle for explaining the Ethos way of programming. It would be useful to actually program these models on the radio, and observe the outputs on the monitor screen as the inputs are manipulated. Once these concepts and the process are understood, you should be able to adapt these examples to your model.

### **Initial radio setup example**

This introductory section describes the initial steps in setting up the radio itself, before programming any specific models. Once completed, any of the programming examples in the following sections can be followed.

Note: These examples are not 'cookbook' in nature. They assume that the user has a basic understanding of the vocabulary of radio control models, and is familiar with navigating the Ethos menu structure. If, at any time, you are confused, please review previous sections of this manual for a refresher. In particular, please refer to the Menu Navigation section to familiarize yourself with the radio's user interface, so that you can find the setup page you need easily.

#### ***Step 1. Charge the radio and flight batteries.***

Please refer to the battery charging section and charge the radio battery using those guidelines. Also charge the flight battery(ies) to be used, using a charger suitable for the battery type(s), observing all safety precautions, especially when using Lithium batteries.

#### ***Step 2. Calibrate the hardware.***

Ensure that you have performed the hardware calibration during initial startup of the radio, to confirm that the radio knows exactly where the centers and limits of each gimbal, pot, and slider are. It should also be re-done whenever the firmware is upgraded. Please refer to the System \ Calibration section of this manual for instructions on doing this.

#### ***Step 3. Perform the Radio System setup.***

The radio System Setup is used to configure those parts of the radio system's hardware that are common to all models. It differs from the 'Model Setup' functions which configure the model specific settings for each model.

Please read the System Setup section to familiarize yourself with all the settings in this section.

Many settings can (at least initially) be left at their defaults, but the following should be reviewed:

##### **Date & Time**

Set the current time and date.

## **Sticks**

### **Sticks Mode**

Select your preferred stick mode. Mode 1 has throttle and aileron on the right stick, and elevator and rudder on the left. Mode 2 has throttle and rudder on the left stick, and aileron and elevator on the right.

Note: Mode 2 is the default.

**Warning:** If you upgrade the firmware, check that the Sticks Mode is as expected! If you fly a different mode to Mode 2, previous model profiles do not work as expected. This is the first setting to check! **CAUTION!** If a model is configured for Mode 2 and the TX for Mode 1, it is possible to have the motor for electric models start when the receiver is turned on.

### **Channel Order**

The default channel order for Ethos is AETR (i.e. Aileron, Elevator, Throttle, Rudder). You may prefer to set the default channel order to the order you are accustomed to. TAER is the default for Spektrum/JR, and AETR is the default for Futaba/Hitec. This setting defines the order in which the four stick inputs are inserted when a new model is created. They can of course be changed later.

Note that AETR is the required order if you want to use any of the FrSky stabilized receivers.

## **Battery**

Review your radio battery's specification and configure the 'Main voltage', 'Low voltage' and 'Display voltage range' as described in the System / Battery section of this manual.

### **Owner Registration ID**

The Owner Registration ID is used with ACCESS systems. This ID becomes the Registration ID when registering a receiver. Enter the same code in the Owner Registration ID field of your other transmitters you want to use the Smart Share feature with. Refer to the Model Setup / RF System section of this manual (although it is configured in the Model Setup section, the Owner Registration ID will be used for each new model and can be considered a System setting. Please note also that the Owner Registration ID can be changed for a particular receiver during the registration process).

## **Units**

Please note that in Ethos telemetry units are configured on a per sensor basis. There is no global Metric or Imperial setting.

## Basic Fixed Wing Airplane example

This simple fixed wing airplane example covers the configuration of a model having a motor, 2 ailerons (and optionally retracts and 2 flaps) and has a servo for each surface.

### ***Step 1. Confirm System settings***

Begin by following the 'Initial radio setup example' above, which is used to configure those parts of the radio system's hardware that are common to all models. For this example we are using the default AETR (Aileron, Elevator, Throttle, Rudder) channel order.

Use the RF System function to register (if your receiver is ACCESS) and bind your receiver in preparation for configuring the model.

### ***Step 2. Identify the servos/channels required***

The Mixer function forms the heart of the radio. It allows any of the many sources of input to be combined as desired and mapped to any of the output channels. Ethos has 100 mixer channels available for programming your model. Normally the lowest numbered channels will be assigned to the servos, because the channel numbers map directly to the channels in the receiver. The X20 Internal RF (Radio Frequency) module has up to 24 output channels available.

The upper mixer channels can be used as 'virtual channels' in more advanced programming, or as real channels using multiple RF modules (Internal + External) and SBUS. The channel order is a matter of personal preference or convention, or it may be dictated by the receiver. We will use AETR for our example.

Our airplane example has the following servos/channels:

- 1 motor
- 2 ailerons
- 2 flaps
- 1 Elevator
- 1 Rudder

We will also add retracts later.

### ***Step 3. Create a new model.***


Refer to the Model Setup / Model Select section to create your new model. Also refer to the Menu Navigation section to familiarize yourself with the radio's user interface, so that you can find the functions you need easily.

For this example we will assume that you are using an FrSky stabilized receiver. Please refer to the System / Sticks section and enable the 'First four channels fixed' setting after confirming the Channel Order as AETR, to ensure that the channel order created by the wizard will suit the receiver.


Tap on the Model tab (Airplane Icon), and select the Model Select function. Then tap on the '+' symbol, which will present you with a choice of model creation wizards, i.e. Airplane, Glider, Heli, Multicopter or Other. The wizard takes your selections and creates the Mixer lines needed to implement the functionality required.



For our example, tap on the Airplane icon to start the model creation wizard.

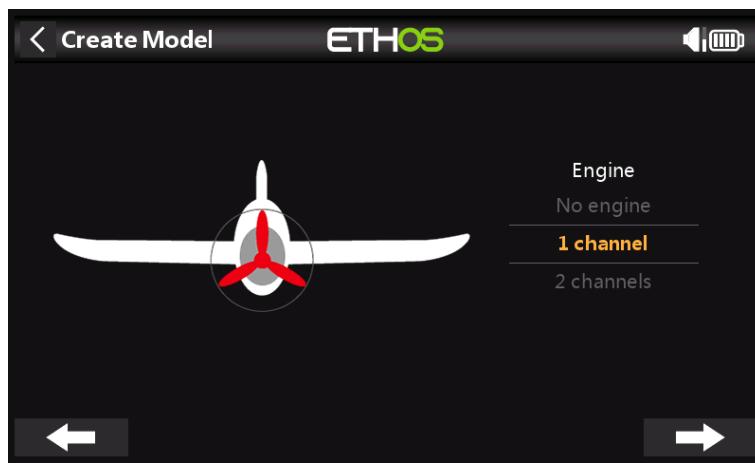


Accept the default of 1 channel for the motor.

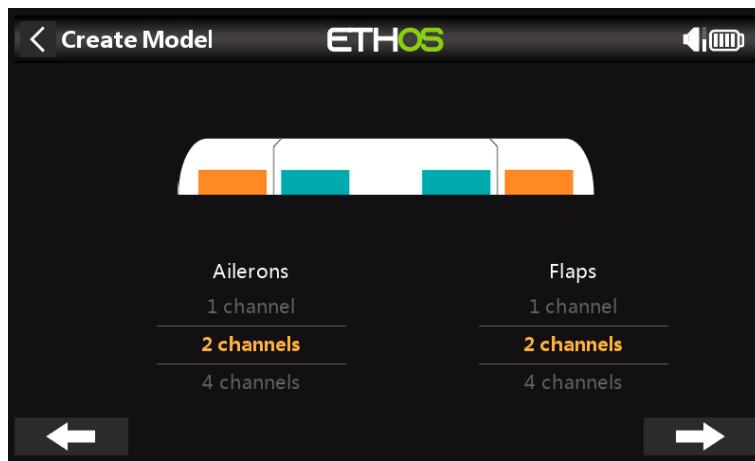

Accept the default 2 channels for Ailerons, and select 2 channels for Flaps.



Accept the default Traditional Tail (which has Elevator and Rudder).

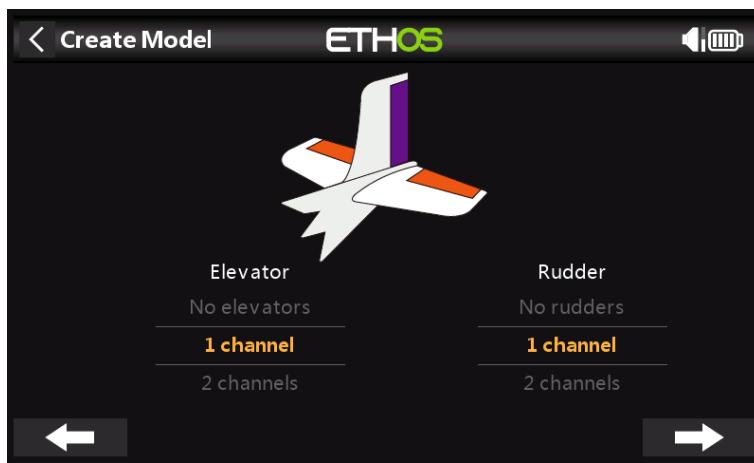

Accept the default 1 channel for Elevator and 1 channel for Rudder.



We will name the model 'FWexample', and follow the wizard to the end which results in the 'FWexample' model being created in the Airplane group. It will also be made the active model, so we can continue to configure its features.


## Step 4. Review and configure the mixes



Tap on the Mixer icon to review the mixes created by the Airplane wizard.




The wizard has created two Ailerons on channels 1 and 2, followed by the Elevator, Throttle, Rudder and Flaps channels.

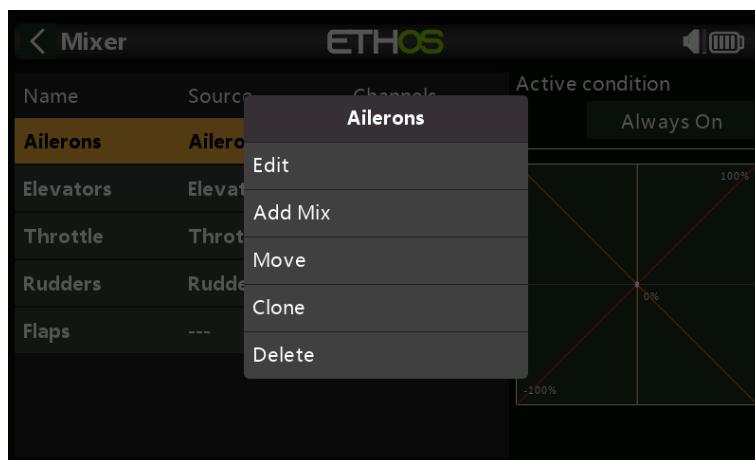

## Ailerons

To review the Aileron mix, tap on the Ailerons line and select Edit from the popup menu.

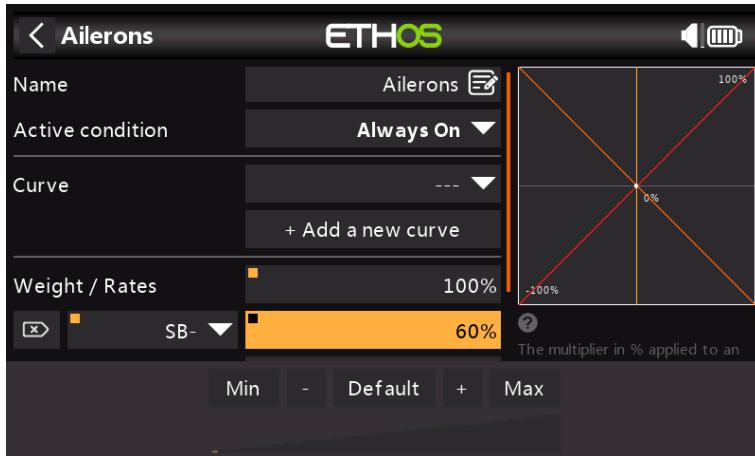

### Weight/Rates

It is a good idea to set up Rates on your model, especially if you have not flown it before. Rates set the ratio of the stick movement to channel movement. For example, for sport flying you normally want fairly modest throws on the control surfaces, so you may want to reduce the travel to say 30%. On the other hand, for 3D flying you want as much travel as you can get, i.e. 100%. In the screenshot above a Rate of 60% has been set for switch SB in the mid position. The vertical axis in the graph on the right shows that only 60% of throw is available.



Click on 'Add a new weight', and set up a 30% Rate for switch SB in the down position. The vertical axis in the graph on the right now shows that only 30% of throw is available in this switch position.




## Expo

In the Rates examples above you can see that the output response is linear. To avoid the response being too twitchy at the stick centers, you can use an Expo curve to reduce the control surface movement at center stick and to increase it as the stick moves further from center. For this example we have set three Expo rates to 60%, 40% and 25% on the corresponding SB switch positions, and the graph now shows a curved response which is flatter at stick center.




For Ailerons there is another special setting called Differential. If the left and right ailerons move up or down by the same amount, the downward moving aileron will cause more drag than the upward moving aileron, causing the wing to yaw in the opposite direction to the turn. This is known as adverse yaw. To reduce this a positive value in the Differential setting will result in less downward aileron movement, as can be seen in the graph. This will reduce adverse yaw and improve turning/ handling characteristics. A common aileron differential setting is 50%.

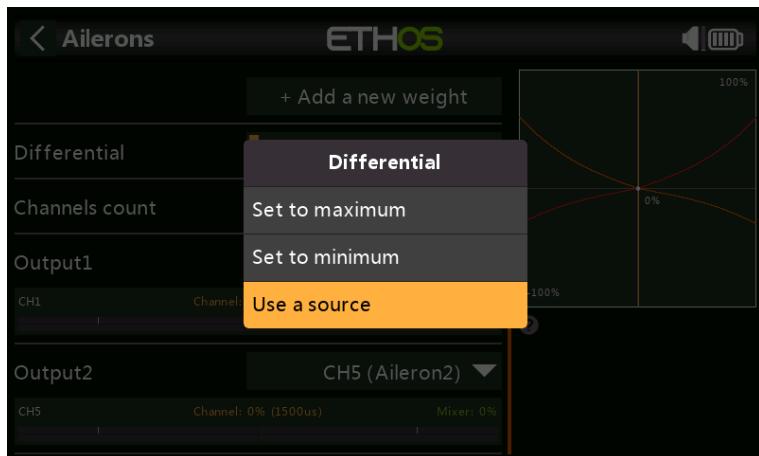

However, you can assign the differential to a pot, allowing you to optimize the value in flight. Long press Enter to bring up the Options dialog, and select 'Use a source'.



Choose Pot1 from the sources list. You can see the effect of Pot1 in the graph on the right.

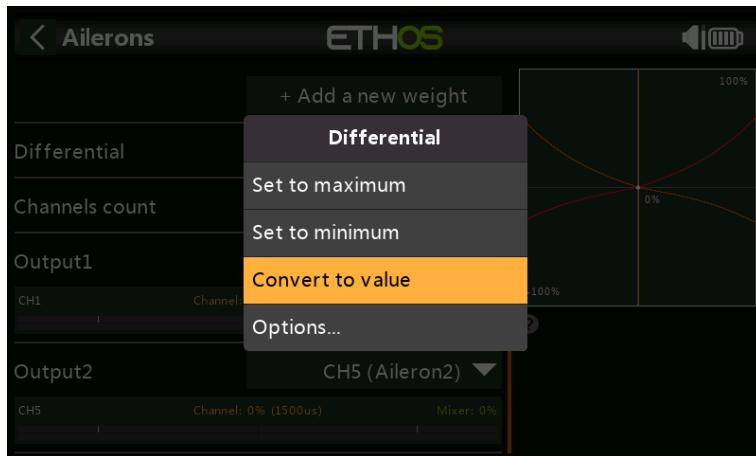


After optimizing aileron differential in flight, you can easily make the pot value your permanent setting. Long press Enter to bring up the Options dialog, and select 'Convert to value'.

### Elevator and Rudder




In a similar way to the Ailerons, we can set up triple rates and expo for the Elevator and Rudder on switch SC.

## Throttle

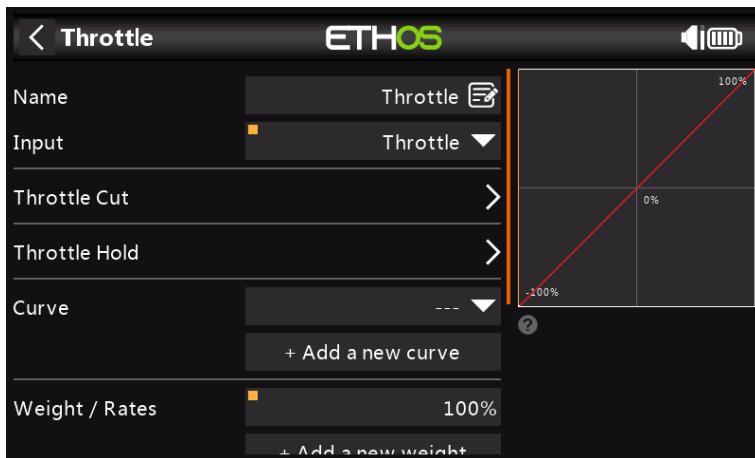

For the throttle we will leave the Input on the throttle stick. We do not need rates or expo, but we do need a safety switch so that the motor will not start unexpectedly. This is extremely important, because model engines and motors can cause serious injury or death.

## Throttle Cut

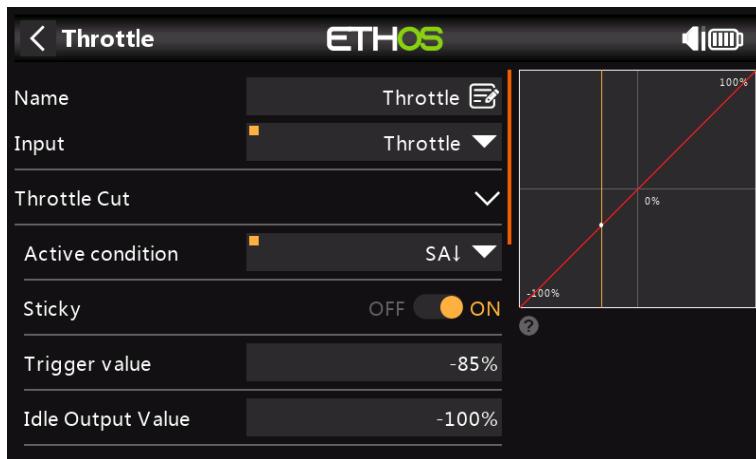

Throttle Cut provides a throttle safety latching mechanism. Once the Active Condition has been satisfied in our example with switch SA in the down position, the throttle output will be held at -100% once the throttle value falls below -85%. (Compare the first graph above with the second.)

However, if the 'Sticky' is enabled, then the throttle will be cut the instant switch SA goes down.

Once the Active Condition has been removed (i.e. switch SA not in the down position), the throttle stick or control must be brought down below -85% before it can be increased. This avoids the motor unexpectedly starting at a high throttle position when Throttle Cut on switch SA is released.

## Low Position Trim

For glow and gas we use 'Low position trim' to adjust the idle speed. The idle speed can vary depending on the weather, etc., so having a way to adjust the idle speed without impacting the full throttle position is important.

If 'Low position trim' is enabled, the throttle channel goes to an idle position of -75% when the throttle stick is at the low position. The throttle trim lever can then be used


to adjust the idle speed between -100% and -50%. Throttle Cut can then be configured to cut the engine with a switch.

### Throttle Hold



Throttle Hold is used to cut the motor in an emergency from any throttle position. When the Throttle Hold Active condition is met, the throttle output is instantly reduced to -100% (or the value entered). As can be seen in the graph above, the throttle output has been cut to -100% even though the throttle stick is above the half way mark.)

### Flaps

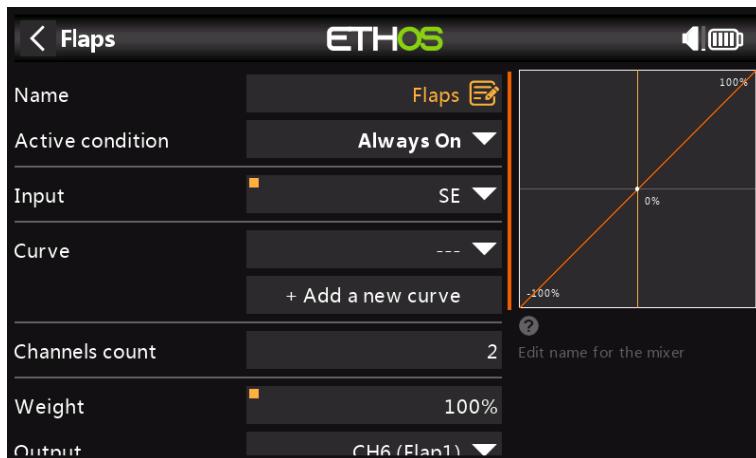

In this example we assign the flaps to switch SE, and increase both output channel weights to 100%.

### Step 5. Configure the Outputs

The Outputs section is the interface between the setup "logic" and the real world with servos, linkages and control surfaces, and motors or engines. So far we have set up the logic for what we want each control to do. Now, we can adapt that to the mechanical characteristics of the model. The various channels are outputs, for example CH1 corresponds to servo plug #1 on your receiver.




Tap on the Outputs icon to configure the Outputs.




Tap on an Output channel to configure it.

#### **Example 1: Aileron1**

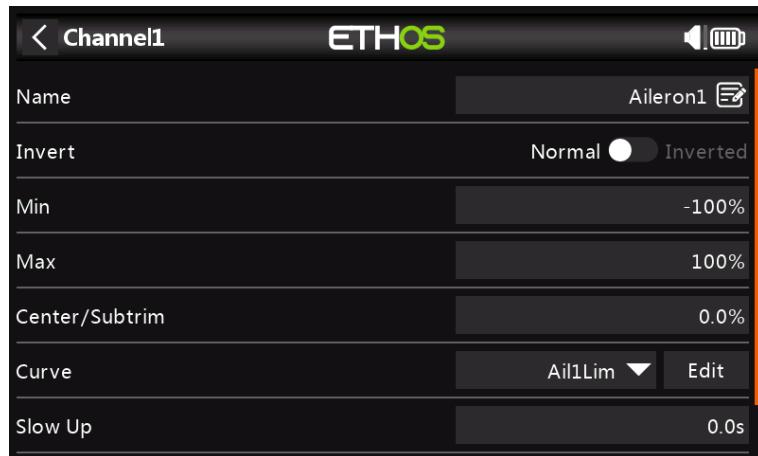


The servo or channel limits can be configured with the Min and Max settings, but an easy way is to use a curve. In this example we have defined a curve 'Ail1Lim' and assigned it to the Aileron1 (left aileron) channel.

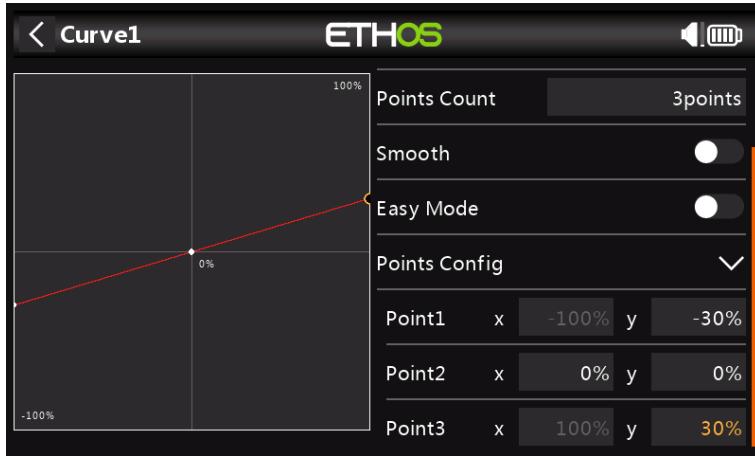

It is a good idea to use +/- 30% initially, and then adjust the curve to suit the servo and linkages with the model powered up. This ensures that the servo will not be driven beyond its mechanical limits, which would overload the servo and lead to failure. The curve midpoint is edited to achieve the surface neutral position.

### **Example 2: Flap1**

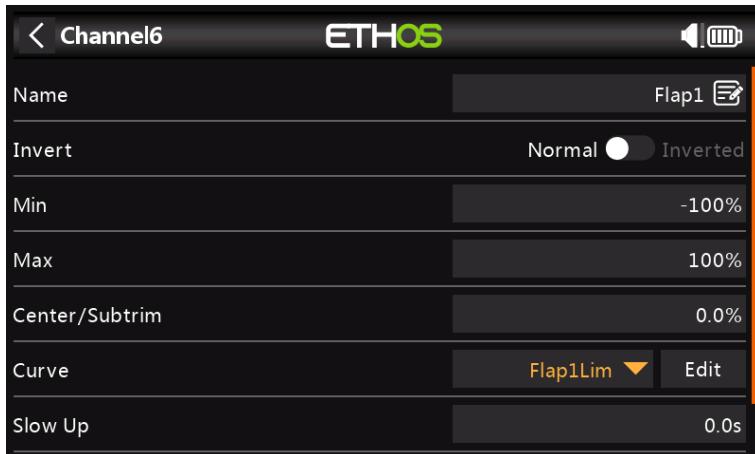

In a similar way the Flap1 channel can have a 'Flap1Lim' curve assigned to it. In addition, Slow Up and Slow Down could be set to 1 second, so that the flaps move to the new position slowly.


Note that Flaps normally require a large amount of down deflection for effective braking. To achieve this large downward deflection, you can sacrifice some of the upward deflection when making the linkages. This means that the Flaps will be in a half down position at servo center. The three points of the curve are adjusted to achieve the desired flap up, flap half, and flap full positions.

## Step 6. Introduction to Flight Modes

Flight Modes are a great way to configure a model for different tasks. For example, a glider may have flight modes for tasks such as Cruise, Speed, Thermal, Launch and Land. Each flight mode can remember its own trim settings, so once you have trimmed the glider to fly well in each mode, you no longer have to keep changing your trims during flight as you change tasks. The flight mode switch becomes a bit like changing gears in a car. Flight modes are sometimes called 'Conditions' in other firmware.

For simplicity, this example only shows setting up flight modes for Normal, Flaps Half and Flaps Full.

There are 100 flight modes including the default mode available for use. The first flight mode that has its Active Condition ON is the active one. When none has its Active Condition ON, the default mode is active. This explains why the default mode does not have a switch selection option.

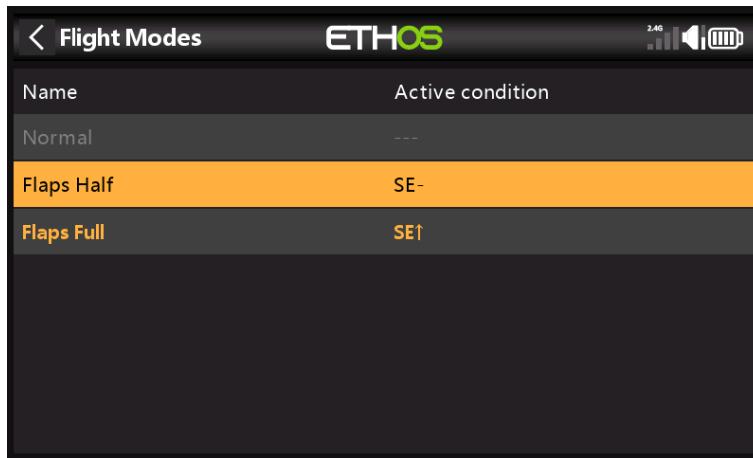


For our example we have configured the default flight mode as Normal, and added two additional flight modes named Flaps Half (switch SE-mid) and Flaps Full (switch SE-Up).



Next we go the Trims section, and change the Elevator stick to have Independent Trims per Flight Mode. This then allows you to have independent elevator compensation for the two flap settings. The Elevator Trim Switch will automatically switching between the settings as you operate the flaps on switch SE.

## Step 7. Add a VFR alert


The Valid Frame Rate sensor has been introduced with ACCESS, and provides a measure of Link Quality, where 100% is perfect. At this stage there is no built in alert for VFR%, but you can easily set one up as follows:

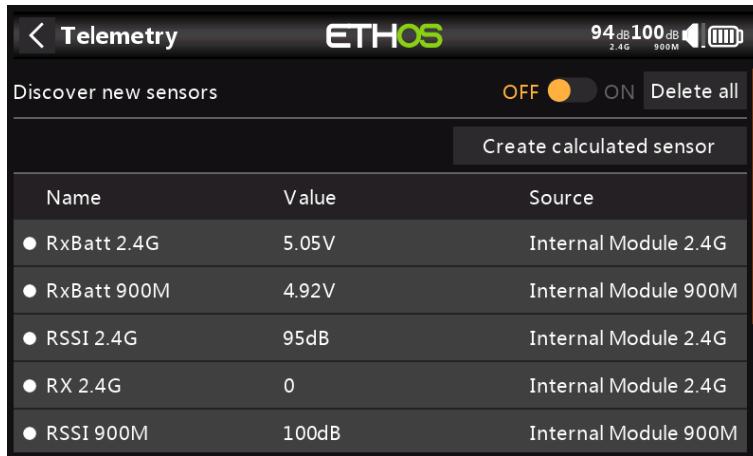


a) Enable the 'Discover new sensors' option in Model / Telemetry. You should see sensors similar to the example above, including VFR.



b) Tap on the '+' in Model / Logical Switches to add a Logical Switch.  
c) Configure the Logical Switch to become True when VFR drops below say 80%.

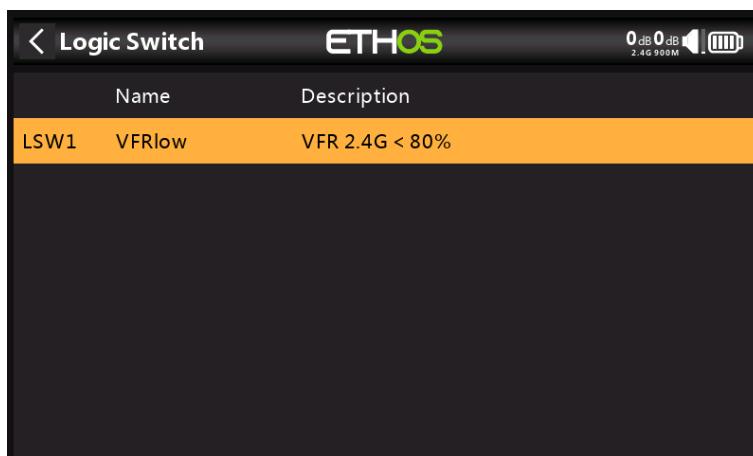


d) The completed Logical Switch is shown above.

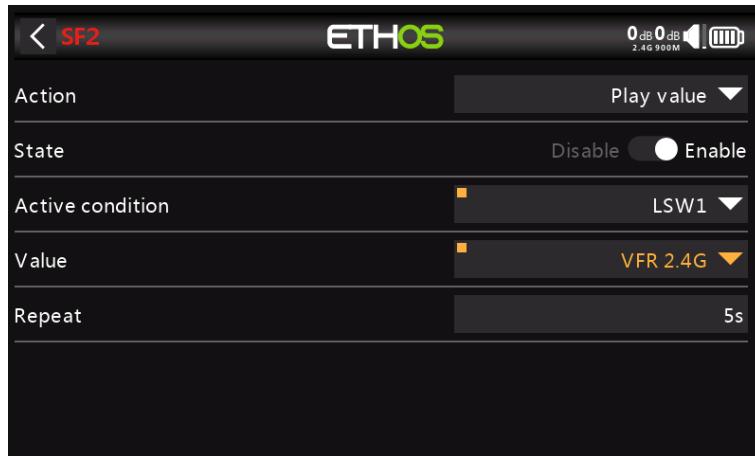


e) Tap on the '+' in Model / Special Functions to add a Special Function to speak the value of VFR% every 5 seconds when its value drops below the threshold of 80% set up in the logical switch above.

## Step 8. Set up a LiPo battery timer

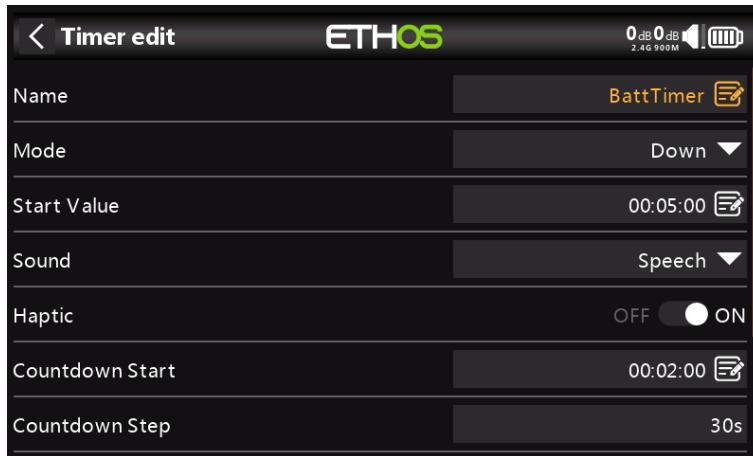


Tap on Timer 1 in the Model / Timers section, and select Edit. In this example we are configuring a Down counting timer, with a Start Value of 5 minutes. The countdown will start at 2 minutes, and will be called out via speech at 30 second intervals and then every second from 10 seconds remaining. The timer will run whenever the throttle is not idle (throttle absolute option), provided it is not being held in reset.

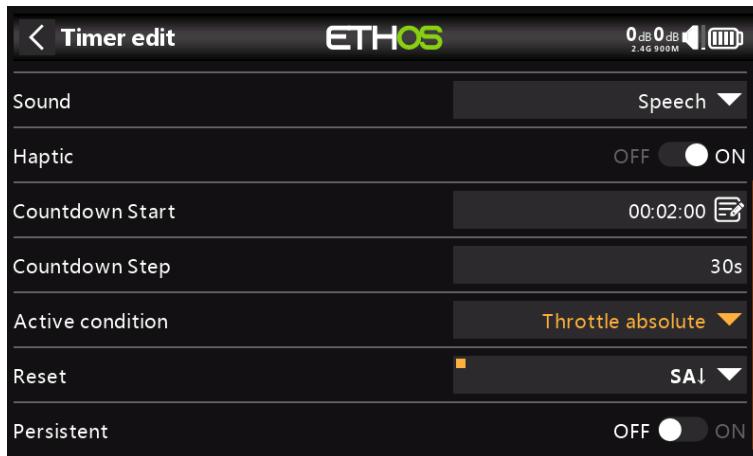


In the example the timer is reset by switch SA-down, which is our throttle hold switch. It is not persistent, so it will also be reset at power on.

This setup can be used to warn you when it is time to land, with the start value chosen so that approximately 30% of battery capacity remains. LiPo type batteries do not tolerate being over-discharged.


## Step 9. Add a mix for retracts

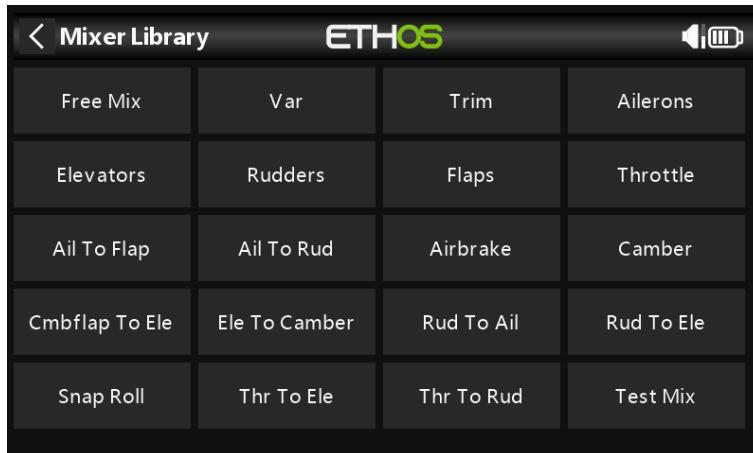

Tap on a mixer line and select 'Add Mix' from the popup menu. This will open the Mixer Library. Select 'Free Mix'.

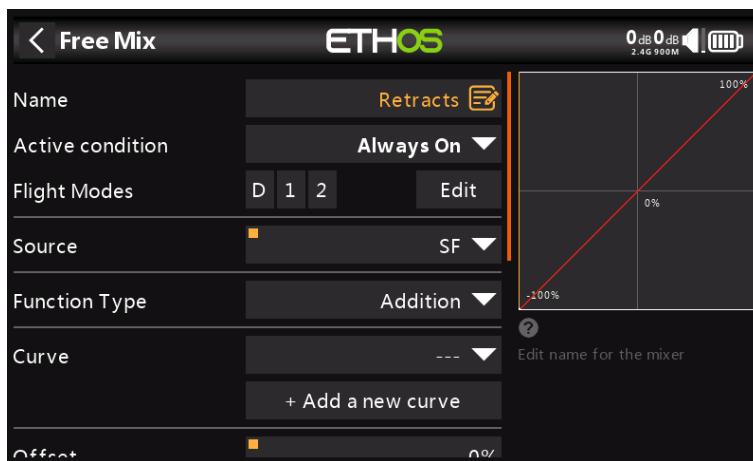

For this example name the Free Mix as 'Retracts'. The mix can always be on, and the Source can be switch SF.

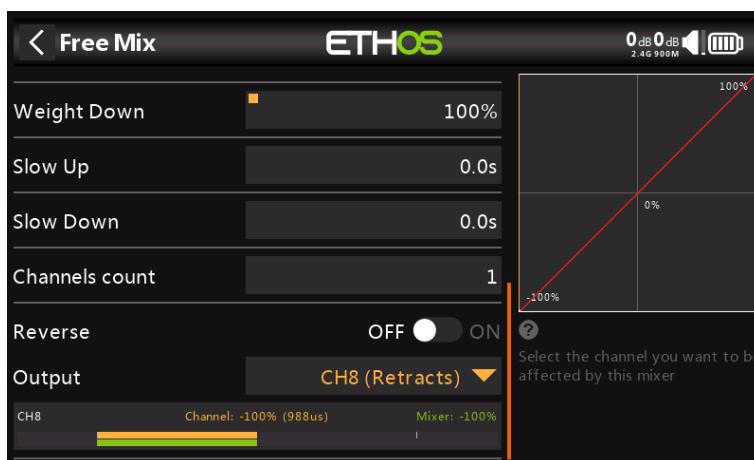


The lower half of the Free Mix settings shows that channel 8 has been allocated to the retracts.

## 'How To' section

### 1. How to set up a low battery voltage warning


In this age of telemetry, a better battery management approach is to monitor the battery voltage under load, and raise an alert when the voltage drops below the chosen threshold. For this a battery voltage sensor such as the FrSky FLVSS can be used.

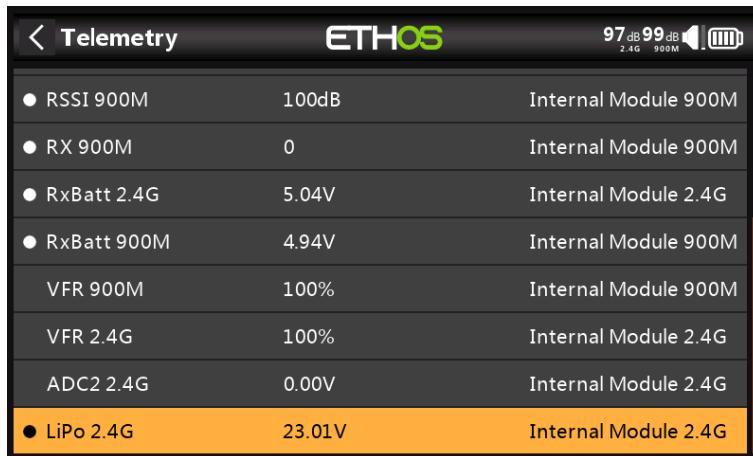


Connect the FLVSS to your receiver via an S.Port cable, and enable the 'Discover new sensors' option in Model / Telemetry. The additional LiPo sensor is shown in the example above.




Add a new Logical Switch and select the Lipo sensor as the Source.

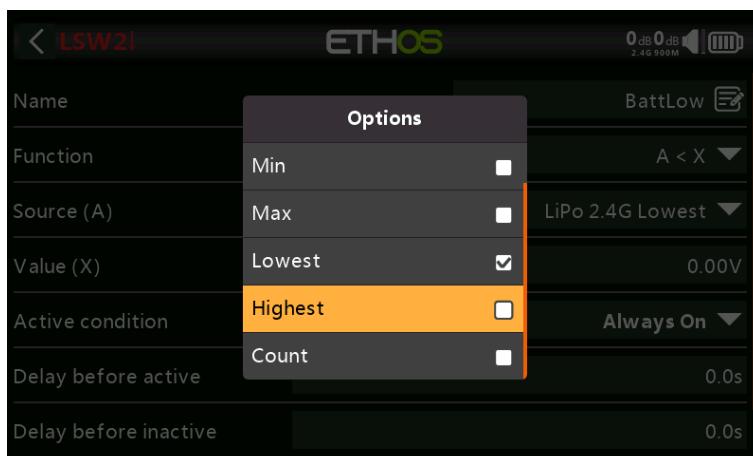


With the Lipo sensor highlighted, long-press the [ENT] key to bring up an options dialog. Select the Lowest from the list of Lipo sensor options, which include Min pack voltage, Max pack voltage, Lowest cell voltage, Highest cell voltage, and cell Count.

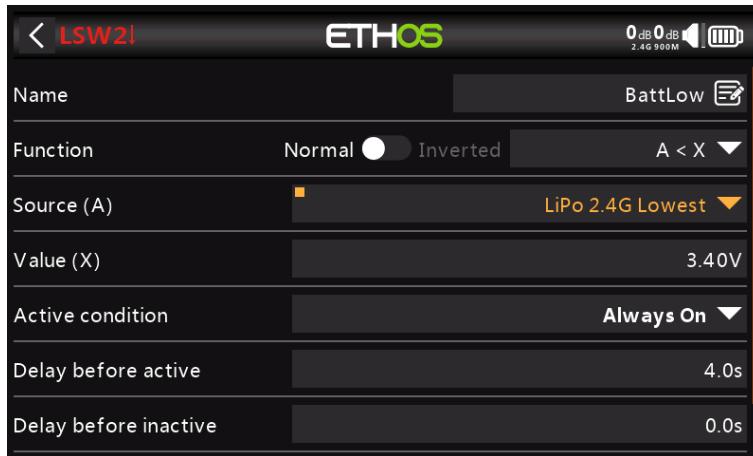

Set the Value to something like 3.4V, and 'Delay before active' to 4 seconds. The Logical Switch will become True/Active when the lowest cell voltage remains below 3.4 per cell for 4 seconds or more. A threshold of 3.4V under load will recover to around 3.7V when no longer under load.

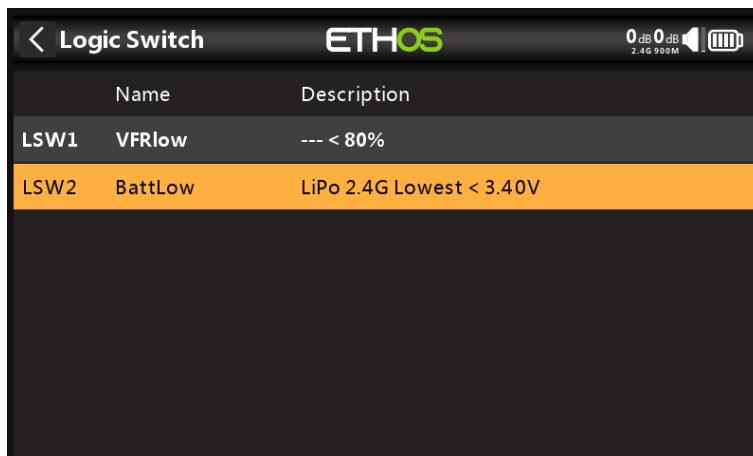


The completed Logical Switch for battery low is shown above.

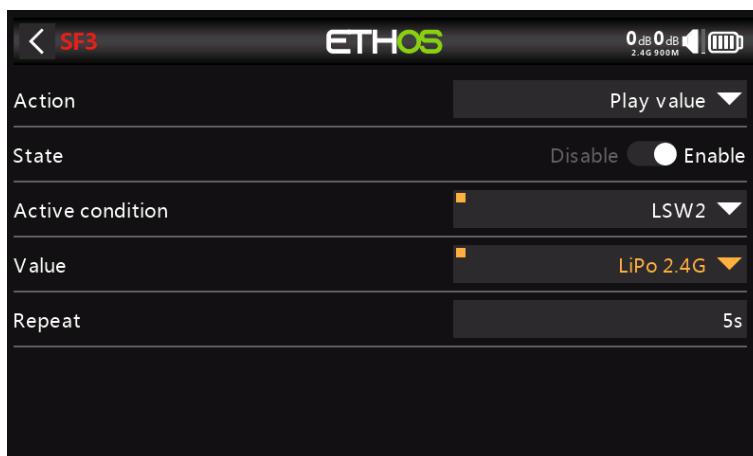

Add a Special Function to speak the value of the LiPo total voltage every 5 seconds when its value drops below the threshold of 3.4V per cell for 4 seconds as set up in the logical switch above.

## 2. How to set up a battery capacity warning using a Neuron ESC


The best method of monitoring battery usage is to measure the energy or mAh consumed, so that the remaining battery capacity can be calculated. The FrSky Neuron series of ESCs offer this capability. If your ESC does not have this capability, an ammeter may be used with a calculated Consumption sensor, please refer to the next example.

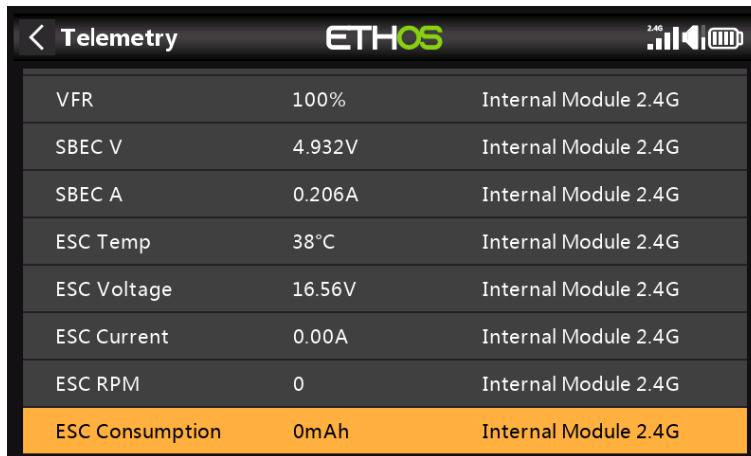

Connect the telemetry port of the Neuron ESC to your receiver via an S.Port cable, and enable the 'Discover new sensors' option in Model / Telemetry. The additional sensors are shown in the example above. The sensor of interest is 'ESC Consumption'.




Add a new Logical Switch to monitor the 'ESC Consumption', and become True/Active when the consumption exceeds say 900mAh, or a convenient fraction of the battery capacity, allowing sufficient capacity to land and still have about 30% left.

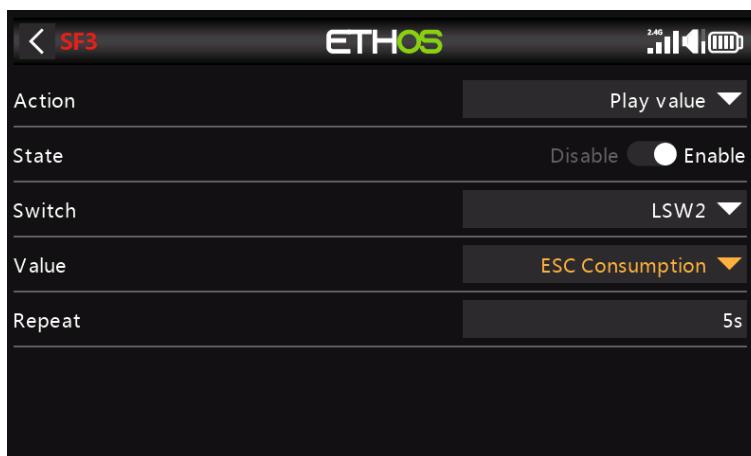


Add a Special Function to speak the value of 'ESC Consumption', i.e. the total mAh consumed, which will be just over 900 mAh in our example.

As an additional safeguard, we can also set up an alert for battery voltage using the Neuron 'ESC Voltage' sensor.

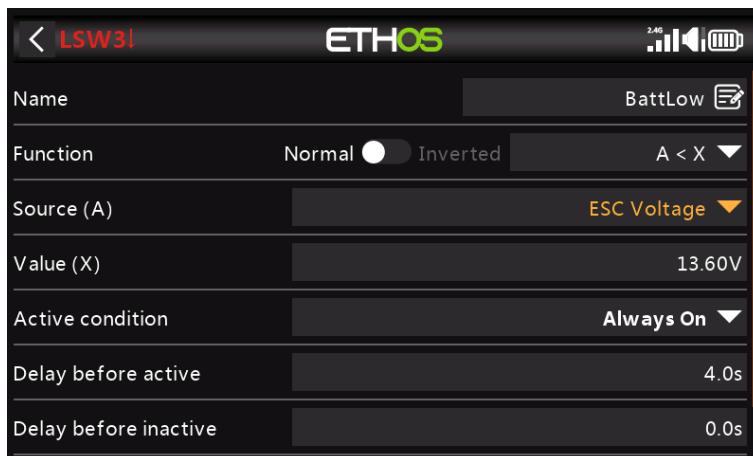


Add a new Logical Switch to monitor the 'ESC Voltage', and to become True/Active when the 'ESC Voltage' voltage remains below 3.4 per cell for 4 seconds. In the example a 4S LiPo is being monitored, so the threshold is set to  $3.4 \times 4 = 13.6V$ . A threshold of 3.4V under load will recover to around 3.7V when no longer under load.

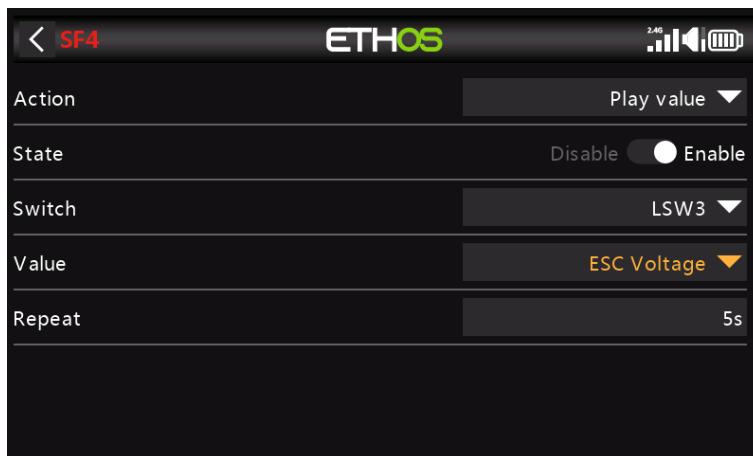


Now add a Special Function to speak the value of 'ESC Voltage' every 5 seconds when its value drops below the threshold of 3.4V per cell for 4 seconds as set up in the logical switch above.

### 3. How to set up a battery capacity warning using a calculated sensor


This is another example of monitoring battery usage by measuring the energy or mAh consumed, so that the remaining battery capacity can be calculated. If your ESC does not have this capability, a current sensor such as the FrSky FASxxx series may be used with a calculated Consumption sensor.

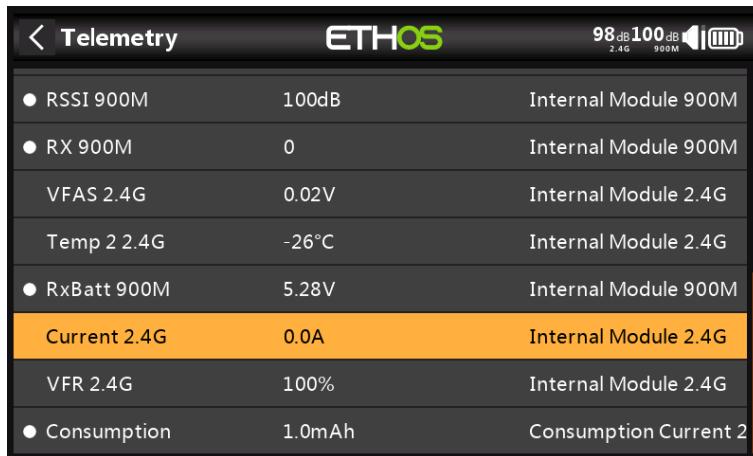

Connect the telemetry port of the FASxxx current sensor to your receiver via an S.Port cable, and enable the 'Discover new sensors' option in Model / Telemetry. The additional sensors are shown in the example above. (The Consumption calculated sensor is added below).

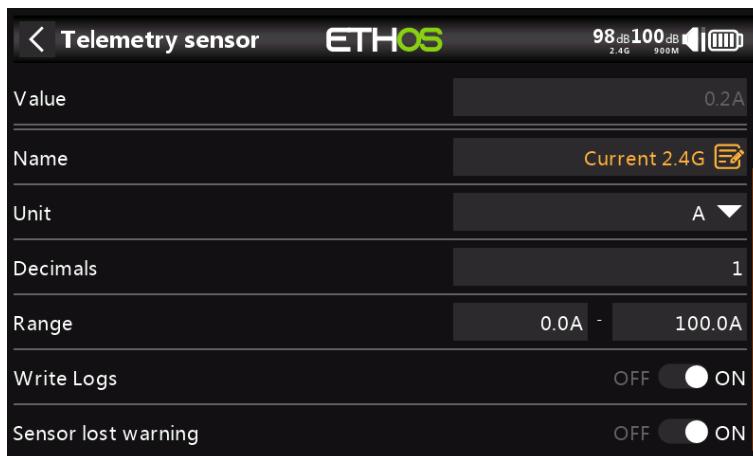

In this example a FAS100 was used, so the Range is set to 0-100A.

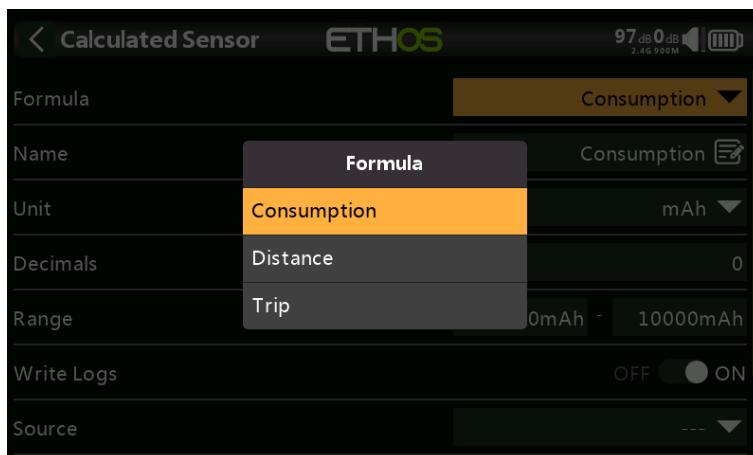


In Telemetry click on 'Create Calculated Sensor' and select 'Consumption' from the popup dialog.



Configure the Consumption sensor to use 'mAh' units, and set the range to suit your Lipo. Select the source as 'Current2.4g'.




Add a new Logical Switch using the Delta ( $d>X$ ) function to monitor the Consumption sensor, and become True/Active every time the consumption reaches say 200mAh, or a convenient fraction of the battery capacity.

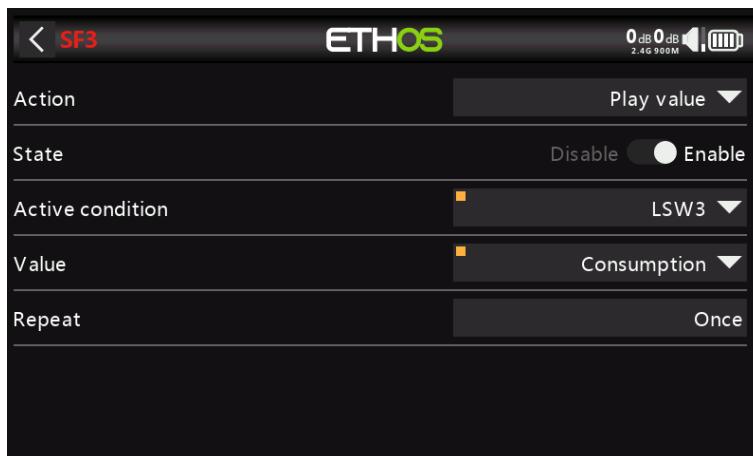

Add a Special Function to speak the total value of 'Consumption', i.e. the total mAh consumed, every time 200mAh has been consumed.



Finally, you can set up a logic switch to trigger a call out of Consumption every 10 seconds once a threshold has been reached. In our example, a threshold of 1000mAh has been set for a 1200mAh LiPo.

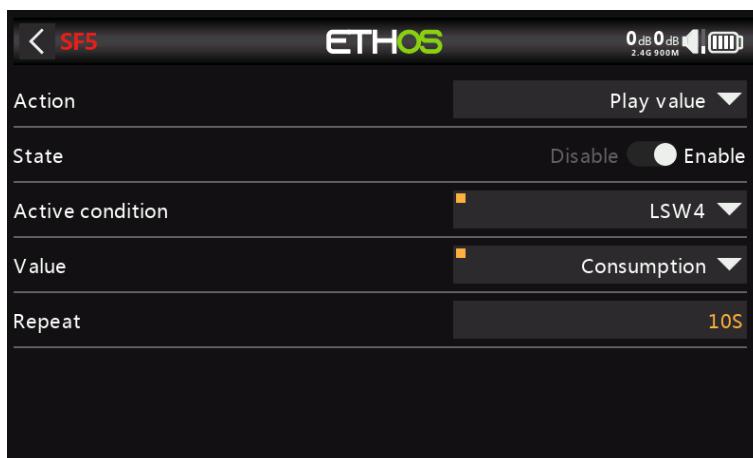

Set up a special function to play the value of Consumption every 10 seconds once LSW4 triggers when the 1000mAh threshold has been reached.

#### **4. How to create a model for SR8/SR10**

The wizards use the channel order as defined in System / Sticks, by default AETR. However, for models with more than one surface for ailerons, elevator, rudder, flaps etc the wizard will normally group these surfaces, so for example you would get AAETR if using 2 Aileron channels.

The SRx receivers expect a channel order of AETRA, so the wizard can be told (in System / Sticks) to keep the 'First four channels fixed':

##### **1. Confirm the default channel order**

In System / Sticks, confirm that the default channel order is AETR.

##### **2. Enable 'First four channels fixed'**


In System / Sticks, enable the 'First four channels fixed' setting. This will ensure that the wizard does not group similar channels (within the first four) and keep for example both Aileron channels together.

##### **2. Create the model using the wizard**

Run the new model creation wizard by clicking on the [+] in Model / Select Model, and tell the wizard all the channels your are using. The first 5 channels will be AETRA.

## 5. How to reorder channels eg for SR8/SR10

You may wish to convert an existing model for use with an FrSky stabilized receiver. This might involve re-ordering the channels.

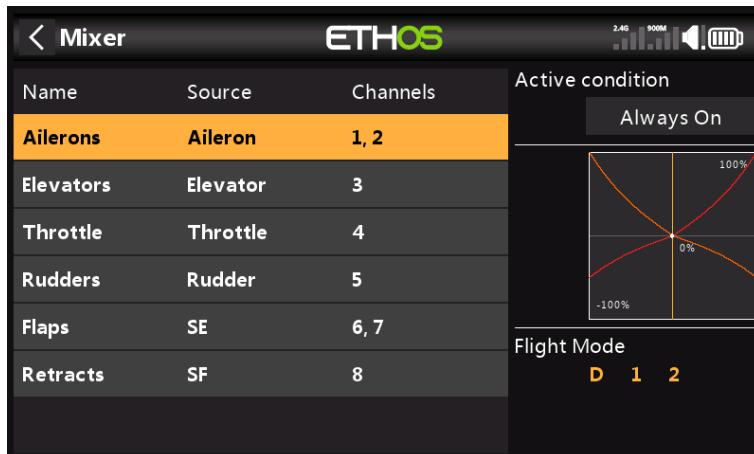


Your current model may have a channel order of AAETRFF.

- CH1 Aileron1 (Right)
- CH2 Aileron2 (Left)
- CH3 Elevator
- CH4 Throttle
- CH5 Rudder
- CH6 Flap1 (Right)
- CH7 Flap2 (Left)
- CH8 Retracts.

The FrSky stabilized receivers have a defined channel order AETRAE as follows:


- CH1 Aileron (Left)
- CH2 Elevator
- CH3 Throttle
- CH4 Rudder
- CH5 Aileron2 (Right)
- CH6 Elevator2

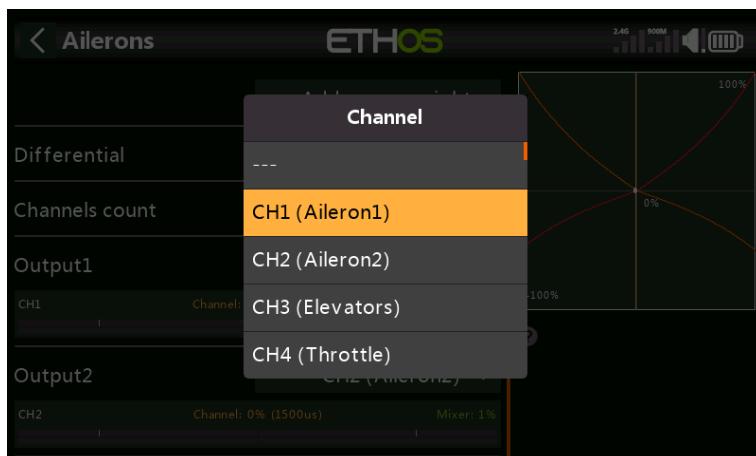

### 1. Change CH1 (Aileron1) to CH9

First we move CH1 (Aileron1) out of the way.

- Go to Model / Mixers, and tap on CH1 (Aileron1) to highlight it.
- Tap again, and select Edit from the popup dialog.
- Scroll down to Output1, and tap on CH1, then select CH9.

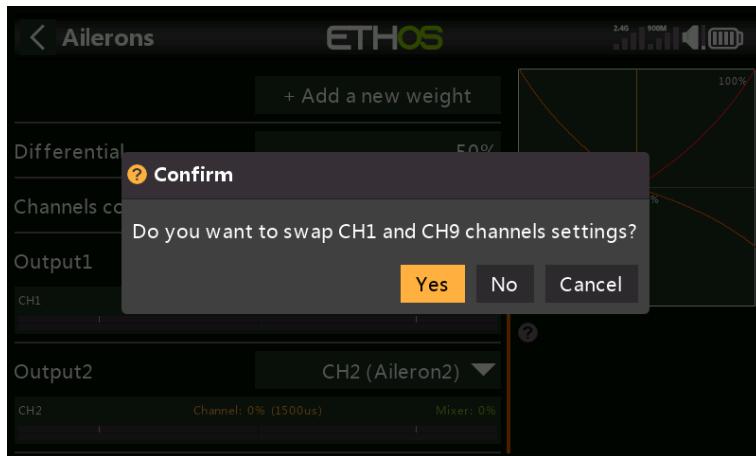

- d) Say Yes to swap CH1 and CH9 channels settings.
- e) You will now have Aileron1 on CH9.

## **2. Change CH2 (Aileron2) to CH1**

- a) Tap on CH2 (Aileron2) to highlight it.
- b) Tap again, and select Edit from the popup dialog.
- c) Scroll down to Output2, and tap on CH2, then select CH1 (Aileron1).
- d) Say Yes to swap CH2 and CH1 channels settings.
- e) You will now have Aileron2 on CH1.

## **3. Swap CH3 (Elevators) and CH2**

- a) Go to Model / Mixers, and tap on CH3 (Elevators) to highlight it.
- b) Tap again, and select Edit from the popup dialog.
- c) Scroll down to Output1, and tap on CH3, then select CH2.
- d) Say Yes to swap CH3 and CH2 channels settings.
- e) You will now have Elevator on CH2.

## **4. Change CH4 (Throttle) to CH3**

- a) Tap on CH4 (Throttle) to highlight it.
- b) Tap again, and select Edit from the popup dialog.
- c) Scroll down to Output1, and tap on CH4, then select CH3.
- d) Say Yes to swap CH4 and CH3 channels settings.
- e) You will now have Throttle on CH3.

## **5. Swap CH5 (Rudders) and CH4**

- a) Tap on CH5 (Rudders) to highlight it.
- b) Tap again, and select Edit from the popup dialog.
- c) Scroll down to Output1, and tap on CH5, then select CH4.
- d) Say Yes to swap CH4 and CH3 channels settings.
- e) You will now have Rudder on CH4.

## **6. Change CH9 (Aileron1) to CH5**

- a) Go to Model / Mixers, and tap on CH9 (Aileron1) to highlight it.
- b) Tap again, and select Edit from the popup dialog.
- c) Scroll down to Output1, and tap on CH9, then select CH5.
- d) Say Yes to swap CH9 and CH5 channels settings.
- e) You will now have Aileron1 on CH5.

## **4. Confirm new channel order**

As can be seen in the above example, the channels are now in the correct order for SX8 and SX10:

CH1 Aileron (Left)  
 CH2 Elevator  
 CH3 Throttle  
 CH4 Rudder

CH5 Aileron2 (Right)

CH6 Flap1 (Left)

CH7 Flap2 (Right)


CH8 Retracts.

## 6. How to configure a Butterfly mix


For this example it will be assumed that a Butterfly mix is to be added to a glider, which typically uses the throttle stick for braking. You may want to configure the mix so that no butterfly is added with the throttle up, and progressively butterfly increases as the stick is moved down. You probably also want elevator compensation using a curve because the response is non-linear.

### 1. Use a curve to convert the slider to a -100 to 0 range

To do this a curve may be used to convert the -100 to +100 range coming from the slider

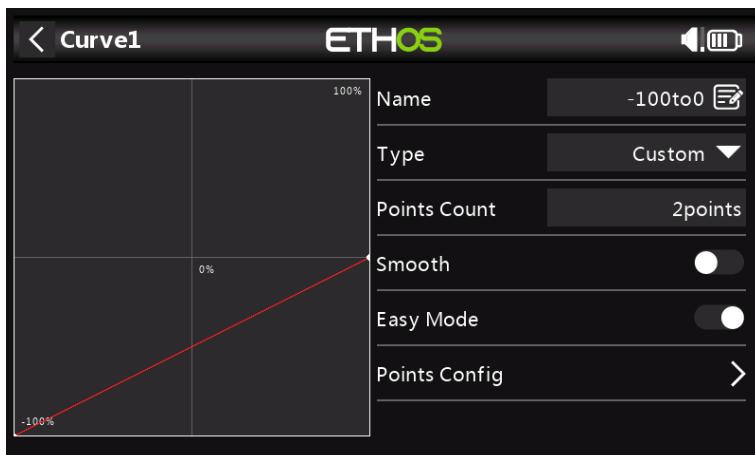


Name the curve -100to0.

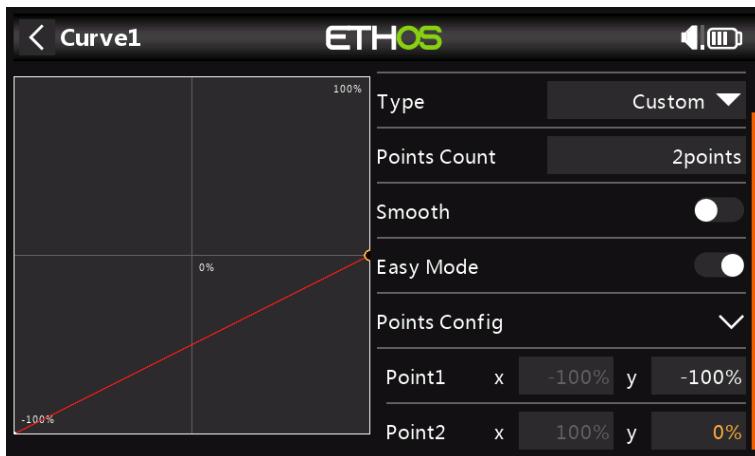

We need a 2 point custom curve with endpoints of (-100%, -100%) and (+100%, 0%).

### 2. Add the Butterfly mix

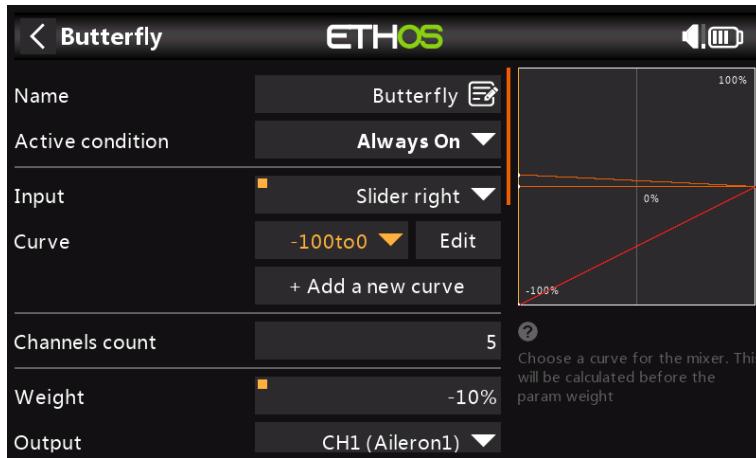

Set the Input to your desired butterfly control, e.g. Slider right. Select the newly created curve '-100to0'.




Normally for butterfly or crow braking, the ailerons are set to go up a modest amount, say -10%, while the flaps go down a large amount. This combination creates a lot of drag, and is very effective for braking.




Flaps are unusual in that a very large downward deflection is needed, with very little or no upward movement. This may be achieved by sacrificing some upward travel in favor of downward travel. In practice the flap servo horns may be offset from neutral by say 20 or 30 degrees.

In this situation the flaps will be half down at servo neutral, which means an offset mix will be needed to bring the flaps up to their neutral position for normal flight.

### 3. Add a 'Flaps Neutral' offset mix

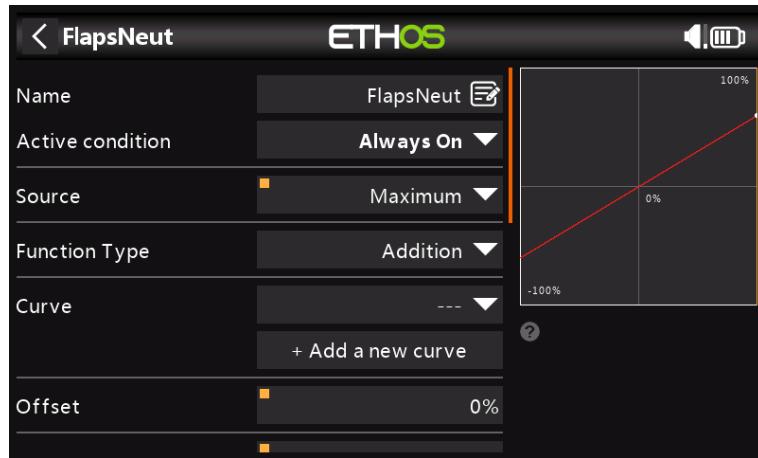

Add a Free Mix and set the source to Maximum. In the current version of Ethos, this mix must be inserted before any other mixes that act on the flaps channels.

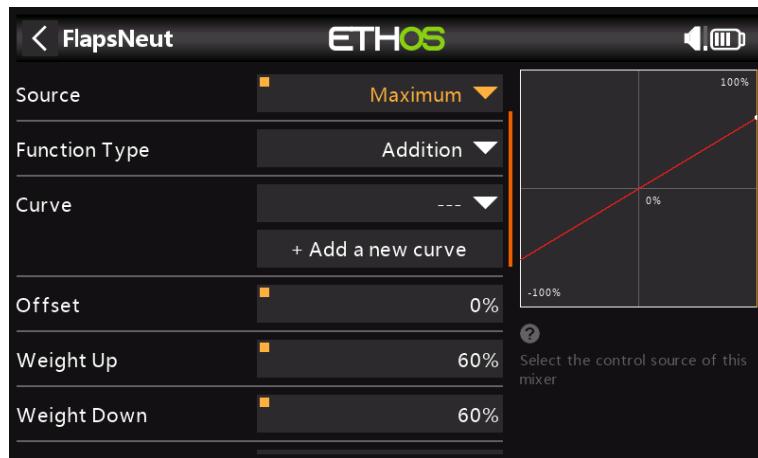


Set the Weights so that the flaps are brought up to their neutral position with the Butterfly mix off, i.e. the throttle stick up. In this example they are set to an indicative 60%.




Finally, set the 'Channels count' to 2, and the Outputs to your flaps channels. In this example the flaps are on channels 6 and 7.

### 4. Add the Elevator compensation curve and mix


To add elevator compensation to the butterfly mix. the Weight parameter for the Elevator must be changed to a mix which in turn calls up a compensation curve.

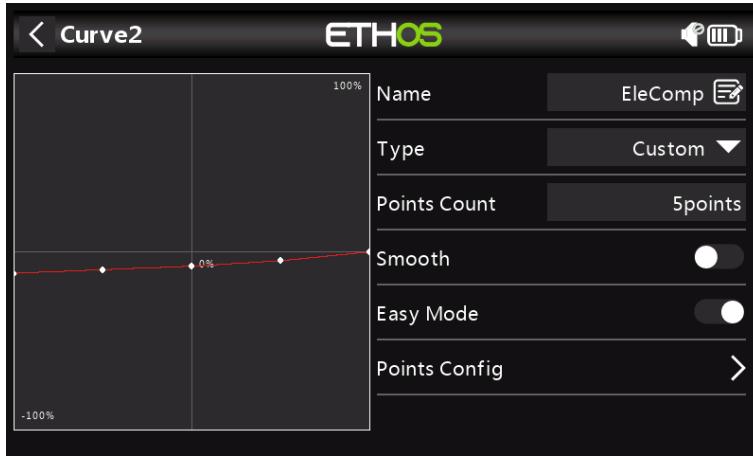


Define a curve EleComp as a custom 5 point curve.

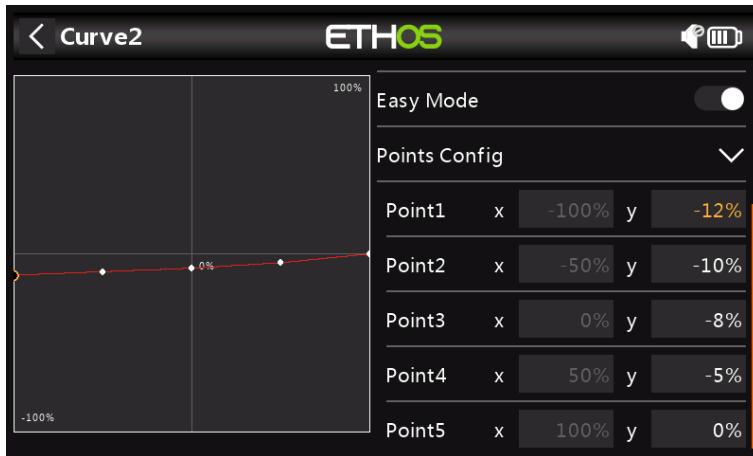


In this example EleComp has initial values of -12%, -10%, -8%, -5% and 0%. If your aircraft does not have an elevator compensation curve specified, these points will need to be determined empirically.

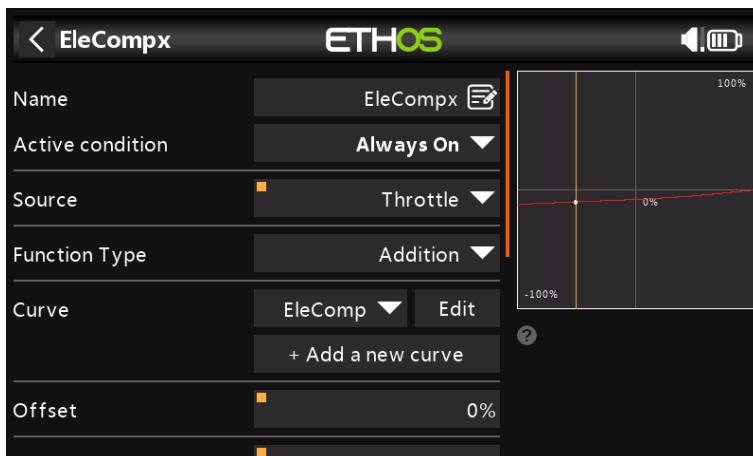

Next we define a high mix which will convert our compensation curve into a variable value suitable as a weight in the Butterfly mix. Use a Free Mix, with throttle as source and attach the curve EleComp.

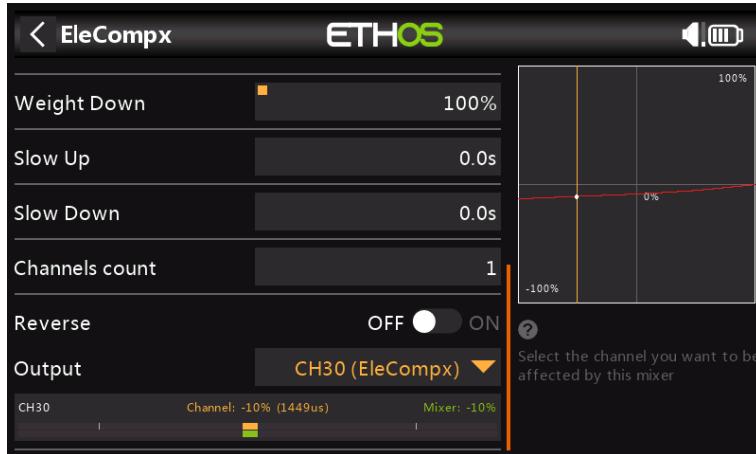

Finally assign the EleCompx mix output to a high channel such as CH30.

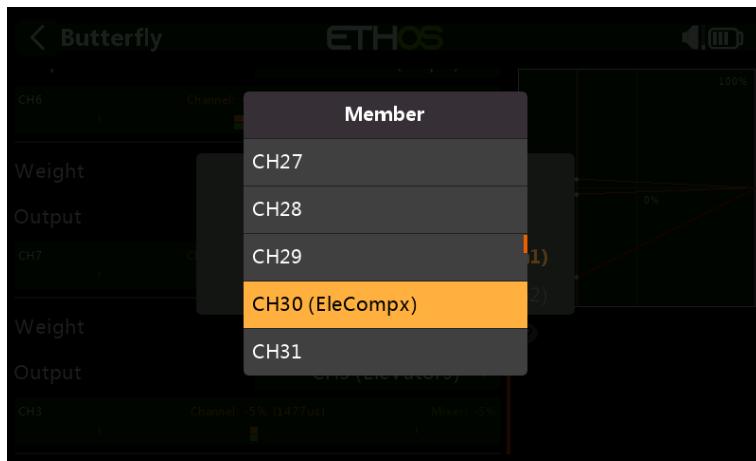

Now go back to the Butterfly mix, and long-press [ENT] on the Weight for the Elevator Output, then select 'Use a source', and navigate to CH30 (EleCompx).



The Butterfly mix is now configured.