

# Welcome

Thank you for choosing Freenove products!

## Getting Started

When reading this, you should have downloaded the ZIP file for this product.

Unzip it and you will get a folder containing tutorials and related files. Please start with this PDF tutorial.

- ! Unzip the ZIP file instead of opening the file in the ZIP file directly.
- ! Do not move, delete or rename files in the folder just unzipped.

## Get Support

Encounter problems? Don't worry! Refer to "TroubleShooting.pdf" or contact us.

When there are packaging damage, quality problems, questions encountering in use, etc., just send us an email. We will reply to you within one working day and provide a solution.

[support@freenove.com](mailto:support@freenove.com)

## Safety and Precautions

Please follow the following safety precautions when using or storing this product:

- Keep this product out of the reach of children under 6 years old.
- This product should be used only when there is adult supervision present as young children lack necessary judgment regarding safety and the consequences of product misuse.
- This product contains small parts and parts, which are sharp. This product contains electrically conductive parts. Use caution with electrically conductive parts near or around power supplies, batteries and powered (live) circuits.
- When the product is turned ON, activated or tested, some parts will move or rotate. To avoid injuries to hands and fingers, keep them away from any moving parts!
- It is possible that an improperly connected or shorted circuit may cause overheating. Should this happen, immediately disconnect the power supply or remove the batteries and do not touch anything until it cools down! When everything is safe and cool, review the product tutorial to identify the cause.
- Only operate the product in accordance with the instructions and guidelines of this tutorial, otherwise parts may be damaged or you could be injured.
- Store the product in a cool dry place and avoid exposing the product to direct sunlight.
- After use, always turn the power OFF and remove or unplug the batteries before storing.

Any concerns? [✉ support@freenove.com](mailto:support@freenove.com)

## About Freenove

Freenove provides open source electronic products and services worldwide.

Freenove is committed to assist customers in their education of robotics, programming and electronic circuits so that they may transform their creative ideas into prototypes and new and innovative products. To this end, our services include but are not limited to:

- Educational and Entertaining Project Kits for Robots, Smart Cars and Drones
- Educational Kits to Learn Robotic Software Systems for Arduino, Raspberry Pi and micro:bit
- Electronic Component Assortments, Electronic Modules and Specialized Tools
- **Product Development and Customization Services**

You can find more about Freenove and get our latest news and updates through our website:

<http://www.freenove.com>

## Copyright

All the files, materials and instructional guides provided are released under [Creative Commons Attribution-NonCommercial-ShareAlike 3.0 Unported License](#). A copy of this license can be found in the folder containing the Tutorial and software files associated with this product.



This means you can use these resources in your own derived works, in part or completely, but **NOT for the intent or purpose of commercial use.**

Freenove brand and logo are copyright of Freenove Creative Technology Co., Ltd. and cannot be used without written permission.



Other registered trademarks and their owners appearing in this document:

Arduino® is a trademark of Arduino LLC (<https://www.arduino.cc/>).

Raspberry Pi® is a trademark of Raspberry Pi Foundation (<https://www.raspberrypi.org/>).

Raspberry Pi Pico® is a trademark of Raspberry Pi Foundation (<https://www.raspberrypi.org/>).

micro:bit® is a trademark of Micro:bit Educational Foundation (<https://www.microbit.org/>).

ESPRESSIF® and ESP32® are trademarks of ESPRESSIF Systems (Shanghai) Co, Ltd (<https://www.espressif.com/>).

**Any concerns? ✉ [support@freenove.com](mailto:support@freenove.com)**

# Contents

Welcome.....	1
Contents .....	1
Preface.....	3
Raspberry Pi Pico.....	4
Raspberry Pi Pico W .....	7
Chapter 0 Getting Ready (Important).....	10
Programming Software.....	10
Installation of Development Board Support Package .....	13
Uploading Adruino-compatible Firmware for Pico.....	15
Paste the Sticker on the Breadboard.....	19
Chapter 1 LED (Important).....	20
Project 1.1 Blink .....	20
Project 1.2 Blink .....	25
Chapter 2 Button & LED .....	30
Project 2.1 Button & LED.....	31
Project 2.2 MINI table lamp.....	35
Chapter 3 LED Bar .....	39
Project 3.1 Flowing Light .....	39
Chapter 4 Analog & PWM .....	44
Project 4.1 Breathing LED.....	44
Project 4.2 Meteor Flowing Light .....	50
Chapter 5 RGBLED .....	55
Project 5.1 Random Color Light.....	55
Project 5.2 Gradient Color Light.....	60
Chapter 6 Buzzer .....	62
Project 6.1 Doorbell.....	62
Project 6.2 Alertor.....	68
Chapter 7 Serial Communication.....	73
Project 7.1 Serial Print.....	73

---

Project 7.2 Serial Read and Write .....	77
<b>Chapter 8 AD Converter.....</b>	<b>80</b>
Project 8.1 Read the Voltage of Potentiometer.....	80
<b>Chapter 9 Potentiometer &amp; LED .....</b>	<b>86</b>
Project 9.1 Soft Light.....	86
<b>Chapter 10 Photoresistor &amp; LED .....</b>	<b>90</b>
Project 10.1 Control LED through Photoresistor.....	90
<b>Chapter 11 Thermistor .....</b>	<b>95</b>
Project 11.1 Thermometer .....	95
<b>Chapter 12 WiFi Working Modes (Only for Pico W).....</b>	<b>100</b>
Project 12.1 Station mode.....	100
Project 12.2 AP mode.....	105
Project 12.3 AP+Station mode .....	110
<b>Chapter 13 TCP/IP (Only for Pico W).....</b>	<b>114</b>
Project 13.1 As Client.....	114
Project 13.2 As Server.....	128
<b>Chapter 14 Control LED with Web (Only for Pico W).....</b>	<b>134</b>
Project 14.1 Control the LED with Web.....	134
<b>What's Next? .....</b>	<b>142</b>

# Preface

Raspberry Pi Pico is a tiny, fast, and versatile board built using RP2040, a brand new microcontroller chip designed by Raspberry Pi in the UK. Supporting Python and C/C++ development, it is perfect for DIY projects. In this tutorial, we use Arduino to learn Pico. If you want to learn the Python version, please refer to another tutorial: [python\\_tutorial.pdf](#).

Using Arduino IDE as the development environment for Raspberry Pi Pico allows users to learn Pico better and more quickly, which is just like developing Arduino programs. In addition, resources such as Arduino's libraries can be directly used to greatly improve the efficiency of development.

If you haven't downloaded the related material for Raspberry Pi Pico tutorial, you can download it from this link:

[https://github.com/Freenove/Freenove\\_Basic\\_Starter\\_Kit\\_for\\_Raspberry\\_Pi\\_Pico](https://github.com/Freenove/Freenove_Basic_Starter_Kit_for_Raspberry_Pi_Pico)

In this tutorial, we devide each project into 4 sections:

- 1, Component list: helps users to learn and find what components are needed in each project.
- 2, Component Knowledge: allows you to learn the features and usage of the components.
- 3, Circuit: assists to build circuit for each project.
- 4, Sketches and comments: makes it easier for users to learn to use Raspberry Pi Pico and make secondary development.


After completing the projects in this tutorial, you can also combine the components in different projects to make your own smart homes, smart car, robot, etc., bringing your imagination and creativity to life with Raspberry Pi Pico.

If you have any problems or difficulties using this product, please contact us for quick and free technical support: [support@freenove.com](mailto:support@freenove.com)


## Raspberry Pi Pico

Raspberry Pi Pico applies to all chapters except Wireless in this tutorial.

Before learning Pico, we need to know about it. Below is an imitated diagram of Pico, which looks very similar to the actual Pico.

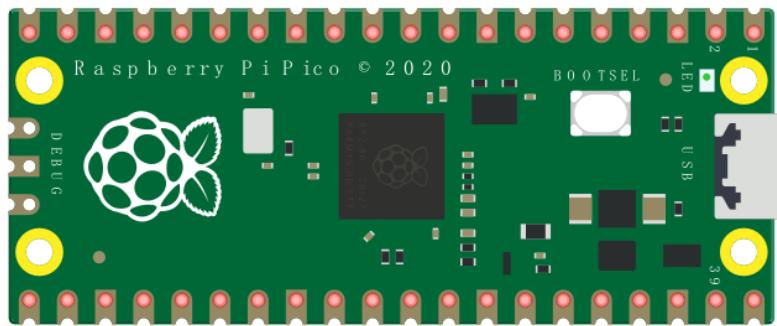


The hardware interfaces are distributed as follows:

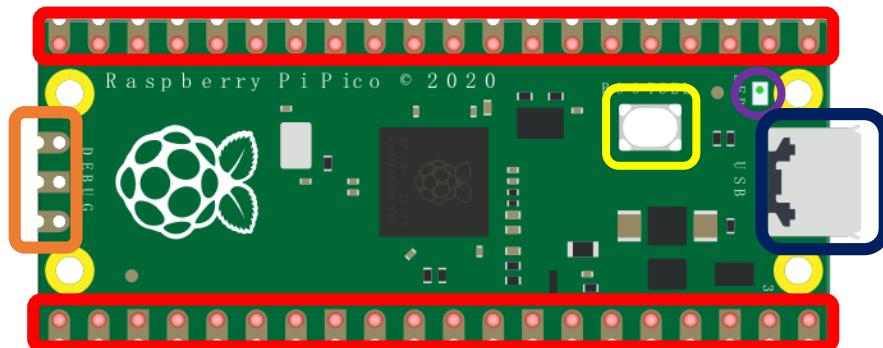

Frame color	Description
	Pins
	BOOTSEL button
	USB port
	LED
	Debugging

Function definition of pins:

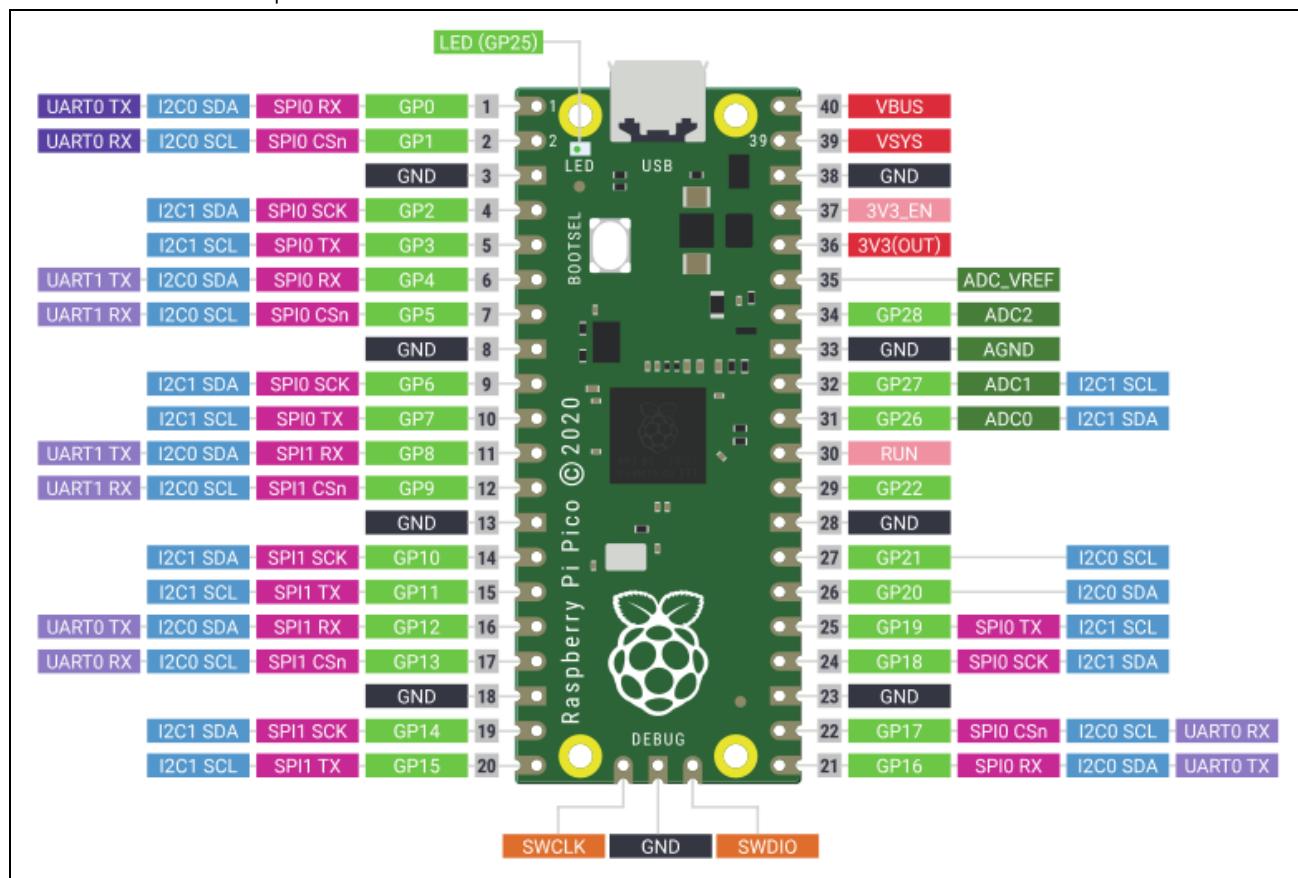

Color	Pins	Color	Pins
Black	GND	Red	Power
Green	GPIO	Dark Green	ADC
Magenta	UART(defualt)	Lavender	UART
Magenta	SPI	Blue	I2C
Pink	System Control	Orange	Debugging

For details: <https://datasheets.raspberrypi.org/pico/pico-datasheet.pdf>

## UART, I2C, SPI Defalt Pin

In Arduino IDE, the default pins of serial port are Pin0 and Pin1.

Note: Serial port is virtualized by RP2040. Therefore, when using the serial port, please enable the verification function of DTR. It can work under any baud rate.

### UART

Function	Default
UART_BAUDRATE	X
UART_BITS	8
UART_STOP	1
UART_TX	Pin 0
UART_RX	Pin 1

### I2C

Function	Default
I2C Frequency	400000
I2C_SDA	Pin 4
I2C_SCL	Pin 5


### SPI

Function	Default
SPI_BAUDRATE	1000000
SPI_POLARITY	0
SPI_PHASE	0
SPI_BITS	8
SPI_FIRSTBIT	MSB
SPI_SCK	Pin 18
SPI_MOSI	Pin 19
SPI_MISO	Pin 16
SPI_SS	Pin 17


## Raspberry Pi Pico W

Raspberry Pi Pico W applies to all chapters in this tutorial.

Raspberry Pi Pico W adds CYW43439 as the WiFi function on the basis of Raspberry Pi Pico. It is connected to RP2040 chip through SPI interface.

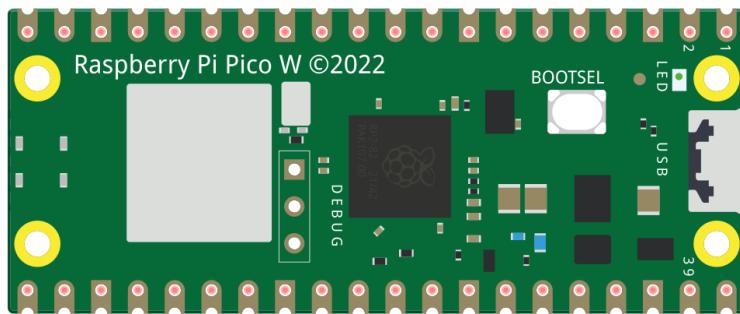


The hardware interfaces are distributed as follows:

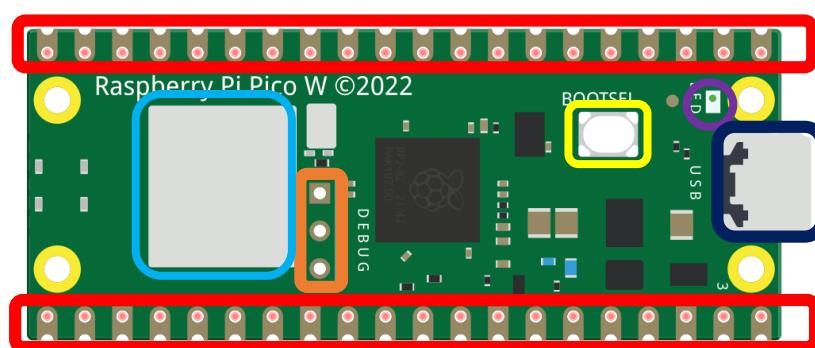

Frame color	Description
	Pins
	BOOTSEL button
	USB port
	LED
	Debugging
	Wireless

Function definition of pins:

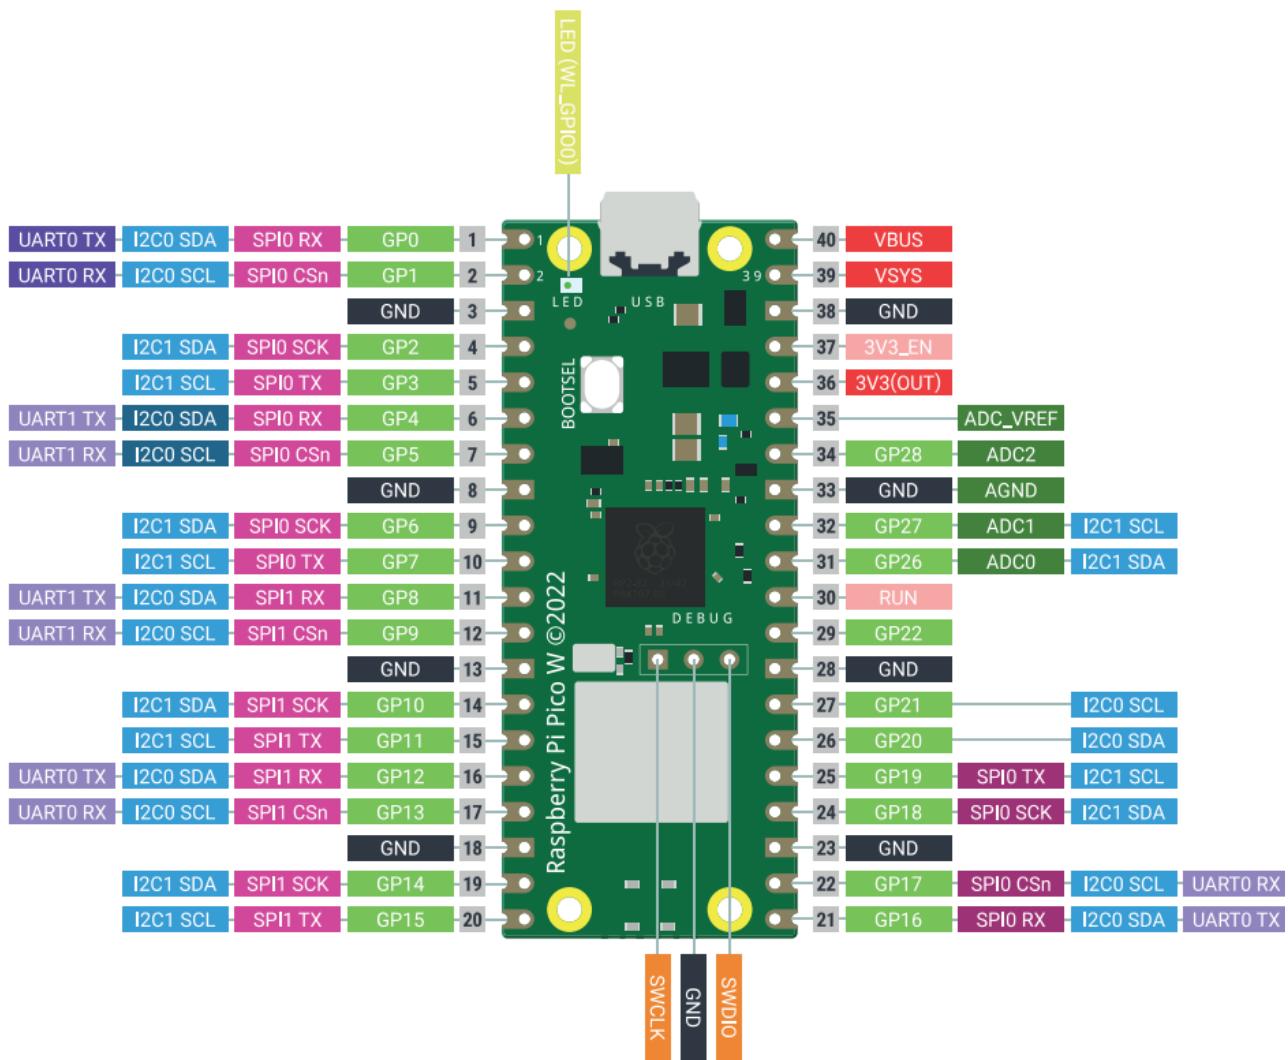

Color	Pins	Color	Pins
	GND		Power
	GPIO		ADC
	UART(defualt)		UART
	SPI		I2C
	System Control		Debugging

For details: <https://datasheets.raspberrypi.com/picow/pico-w-datasheet.pdf>

## UART, I2C, SPI, Wireless Defalt Pin

In Arduino IDE, the default pins of serial port are Pin0 and Pin1.

Note: Serial port is virtualized by RP2040. Therefore, when using the serial port, please enable the verification function of DTR. It can work under any baud rate.

### UART

Function	Default
UART_BAUDRATE	X
UART_BITS	8
UART_STOP	1
UART_TX	Pin 0
UART_RX	Pin 1

### I2C

Function	Default
I2C Frequency	400000
I2C_SDA	Pin 4
I2C_SCL	Pin 5

### SPI

Function	Default
SPI_BAUDRATE	1000000
SPI_POLARITY	0
SPI_PHASE	0
SPI_BITS	8
SPI_FIRSTBIT	MSB
SPI_SCK	Pin 18
SPI_MOSI	Pin 19
SPI_MISO	Pin 16
SPI_SS	Pin 17

### Wireless

Function	Default
WL_ON	GPIO23
WL_D	GPIO24
WL_CLK	GPIO29_ADC
WL_CS	GPIO25




# Chapter 0 Getting Ready (Important)

Before starting building the projects, you need to make some preparation first, which is so crucial that you must not skip.

## Programming Software

Arduino Software (IDE) is used to write and upload the code for Arduino Board.

First, install Arduino Software (IDE): visit <https://www.arduino.cc>, click "Download" to enter the download page.

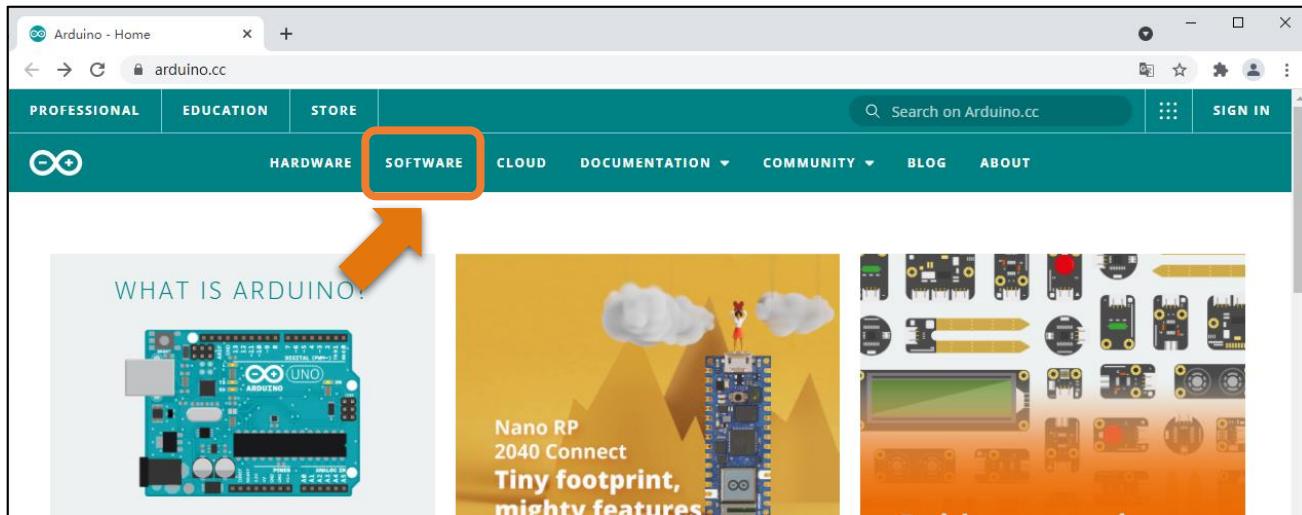

Select and download corresponding installer according to your operating system. If you are a windows user, please select the "Windows Installer" to download to install the driver correctly.

## Downloads



### Arduino IDE 1.8.16

The open-source Arduino Software (IDE) makes it easy to write code and upload it to the board. This software can be used with any Arduino board.

Refer to the [Getting Started](#) page for Installation instructions.

SOURCE CODE

Active development of the Arduino software is [hosted by GitHub](#). See the instructions for [building the code](#). Latest release source code archives are available [here](#). The archives are PGP-signed so they can be verified using [this](#) gpg key.

#### DOWNLOAD OPTIONS

**Windows** Win 7 and newer  
**Windows** ZIP file

**Windows app** Win 8.1 or 10 [Get](#)

**Linux** 32 bits  
**Linux** 64 bits  
**Linux** ARM 32 bits  
**Linux** ARM 64 bits

**Mac OS X** 10.10 or newer


[Release Notes](#) [Checksums \(sha512\)](#)

After the download completes, run the installer. For Windows users, there may pop up an installation dialog box of driver during the installation process. When it comes up, please allow the installation.

After installation is complete, an Arduino Software shortcut will be generated in the desktop. Run the Arduino Software.



The interface of Arduino Software is as follows:

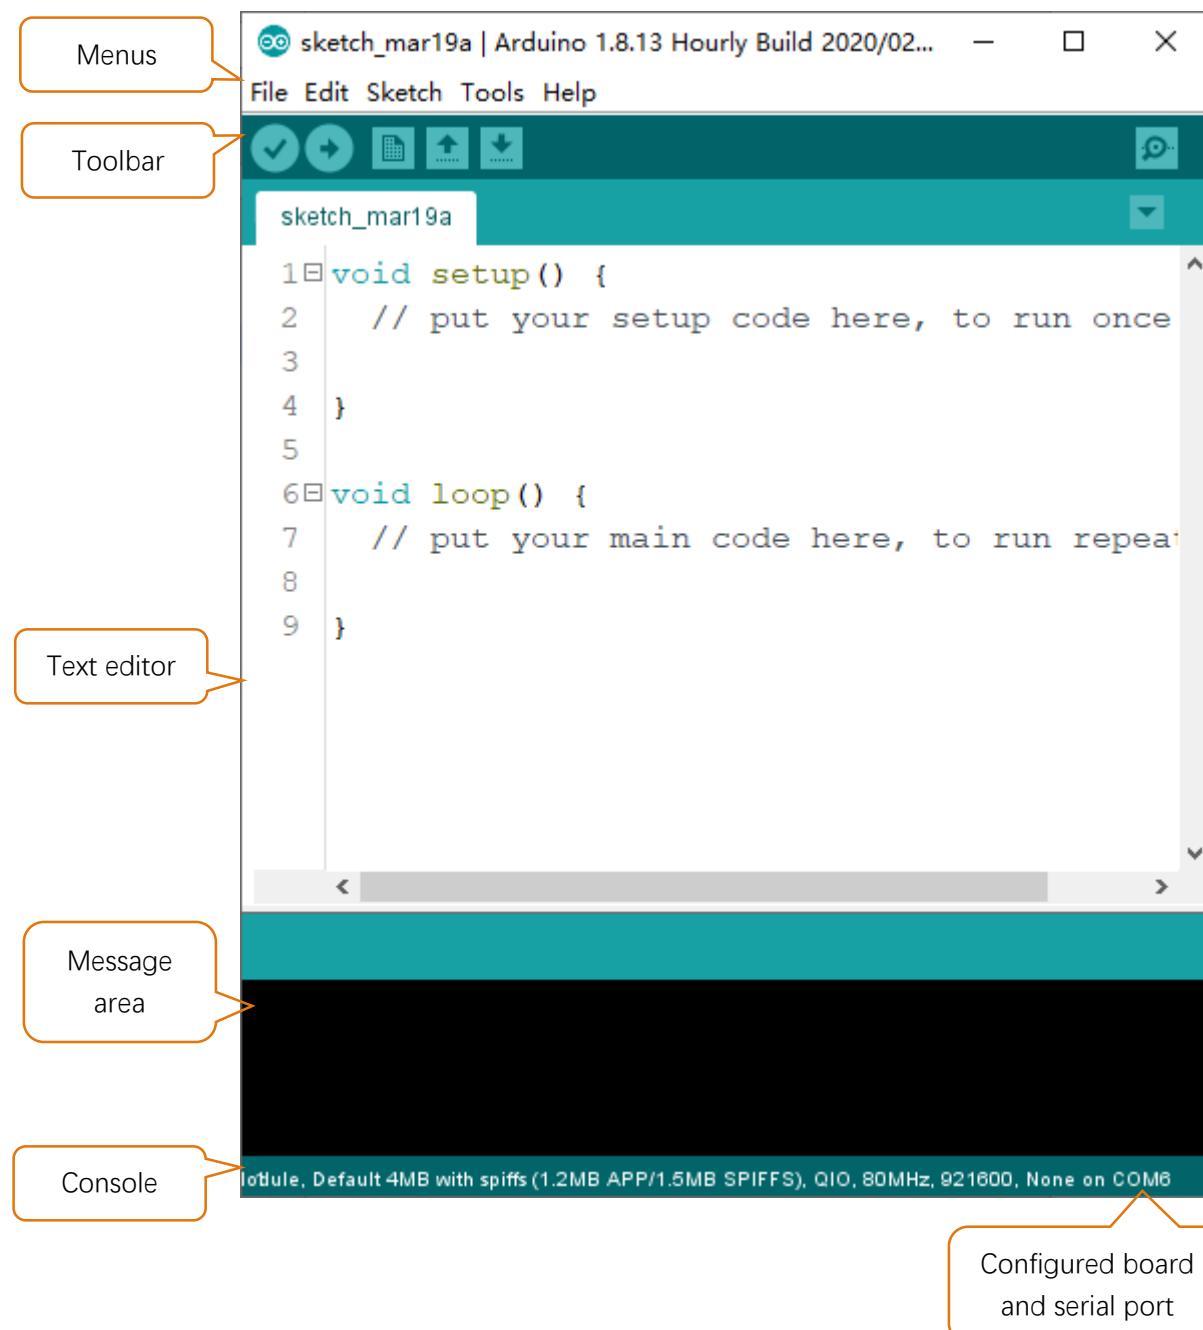



Programs written with Arduino Software (IDE) are called **sketches**. These sketches are written in the text editor and saved with the file extension.**.ino**. The editor has features for cutting/pasting and searching/replacing text. The message area gives feedback while saving and exporting and also displays errors. The console displays text output by the Arduino Software (IDE), including complete error messages and other information. The bottom right-hand corner of the window displays the configured board and serial port. The toolbar buttons allow you to verify and upload programs, create, open, and save sketches, and open the serial monitor.



Verify

Check your code for compile errors .



Upload

Compile your code and upload them to the configured board.



New

Create a new sketch.



Open

Present a menu of all the sketches in your sketchbook. Clicking one will open it within the current window and overwrite its content.



Save

Save your sketch.



Serial Monitor

Open the serial monitor.


Additional commands are found within the five menus: File, Edit, Sketch, Tools, Help. The menus are context sensitive, which means only those items relevant to the work currently being carried out are available.

## Installation of Development Board Support Package


- 1, Make sure your network is of good connection.
- 2, Open Arduino IDE, and click File>Preference. In new pop-up window, find "Additional Boards Manager URLs", and replace with a new line:

[https://github.com/earlephilhower/arduino-pico/releases/download/global/package\\_rp2040\\_index.json](https://github.com/earlephilhower/arduino-pico/releases/download/global/package_rp2040_index.json)

As shown below:

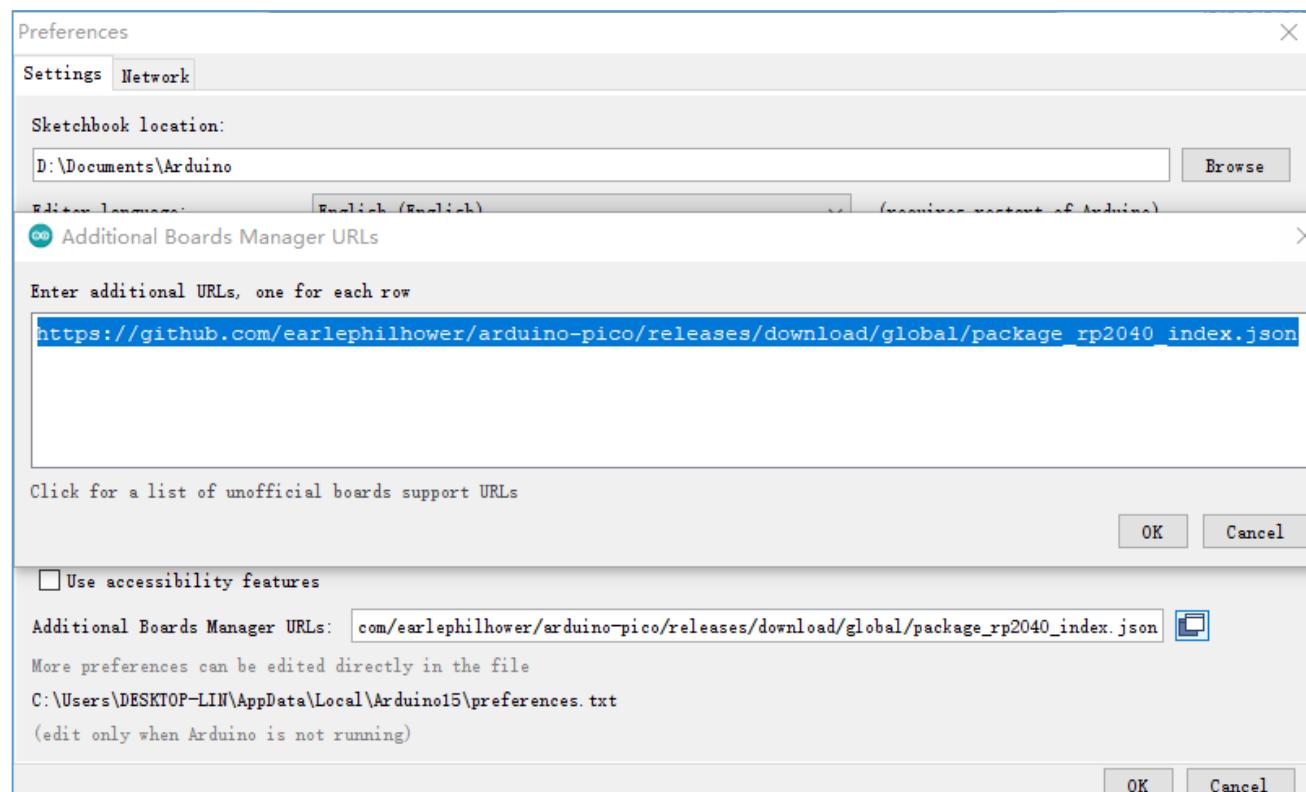


- 3, Open Arduino IDE. Click Tools>**Board>Boards Manager...**on the menu bar.

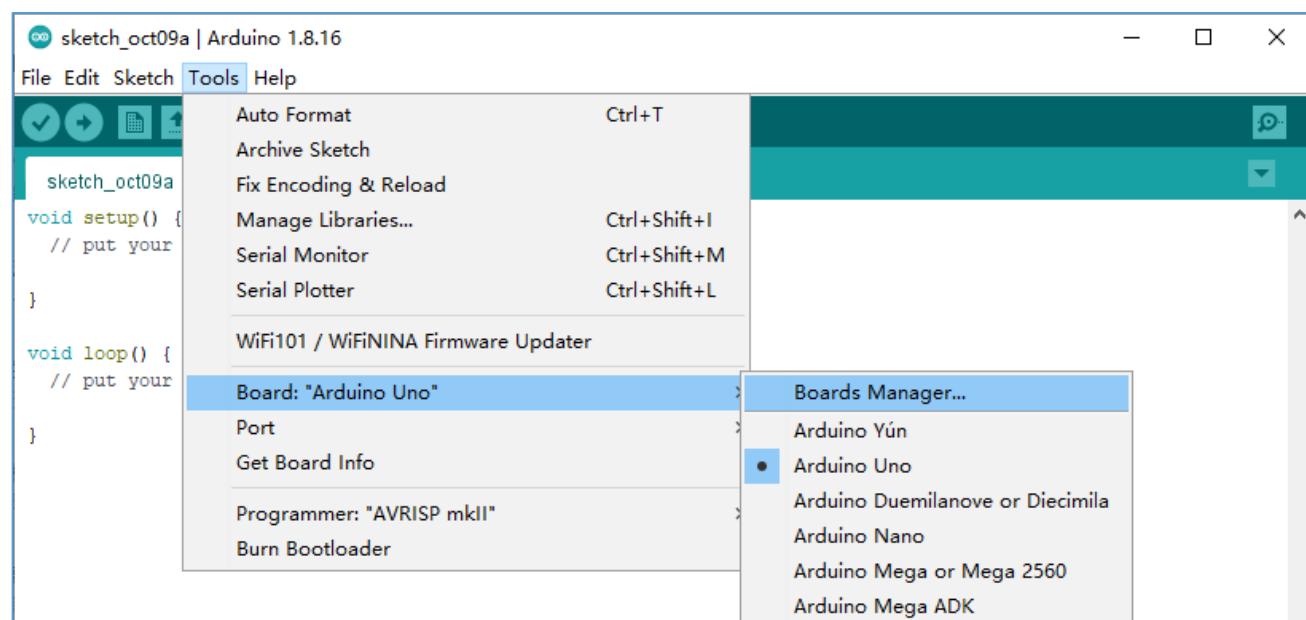

Any concerns? [✉ support@freenove.com](mailto:support@freenove.com)

4, Enter Pico in the searching box, and select "Raspberry Pi Pico/RP2040" and click on Install.

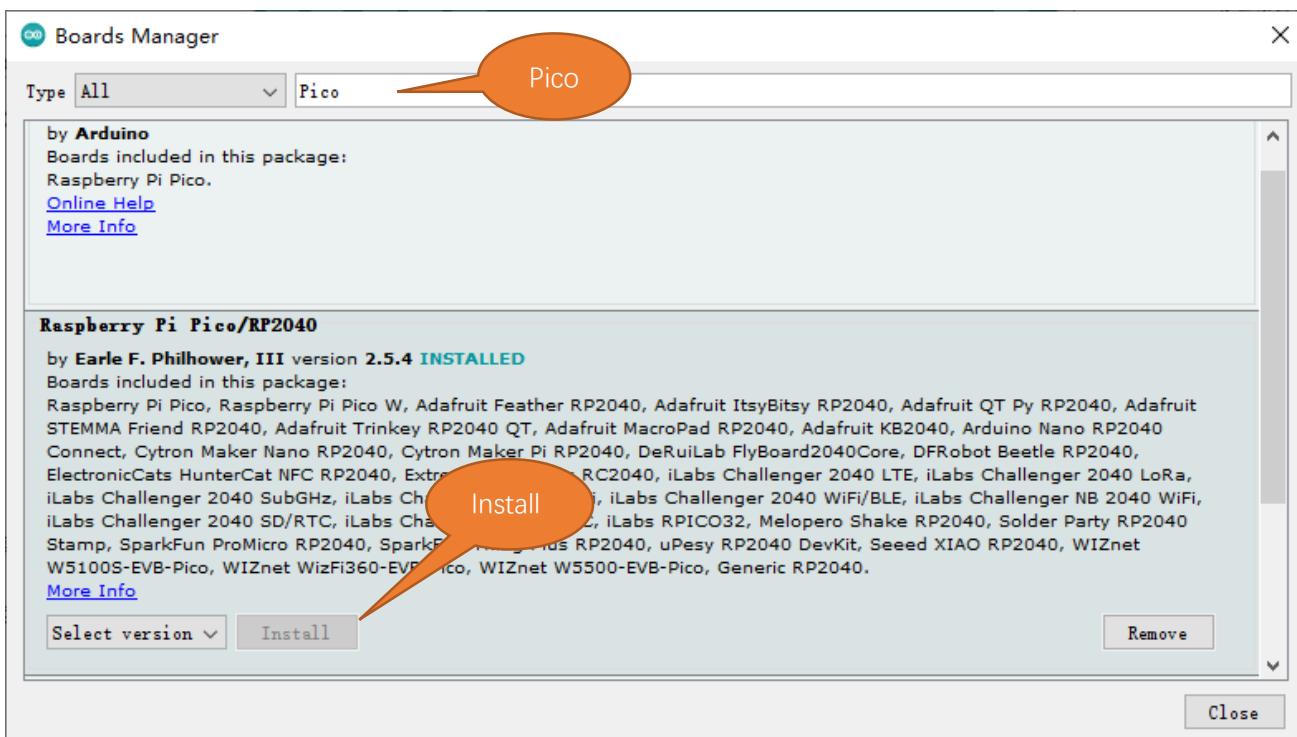


5, Click Yes in the pop-up “**dpinst-amd64.exe**”installation window. (Without it, you will fail to communicate with Arduino.) Thus far, we have finished installing the development support package.


## Uploading Arduino-compatible Firmware for Pico

If your Pico is new and you want to use Arduino to learn and develop, you need to upload an Arduino-compatible Firmware for it. Please refer to the following steps to configure.


1, Disconnect Pico from computer. Keep pressing the white button (BOOTSEL) on Pico, and connect Pico to computer before releasing the button. (Note: Be sure to keep pressing the button before powering the Pico, otherwise the firmware will not download successfully)

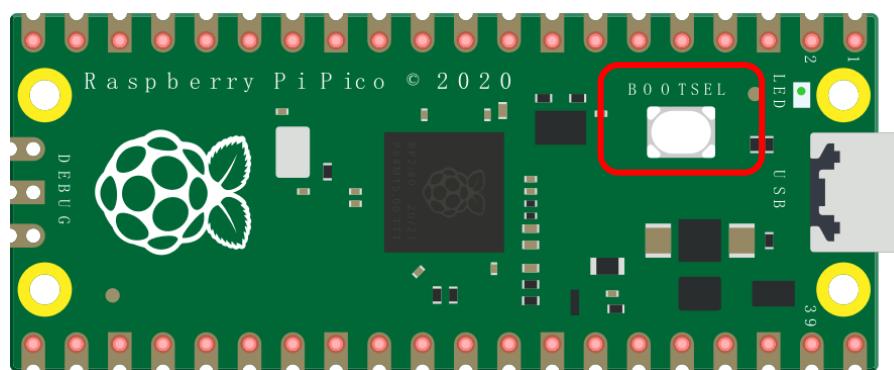


2, Open Arduino IDE. Click File>Examples>01.Basics>Blink.

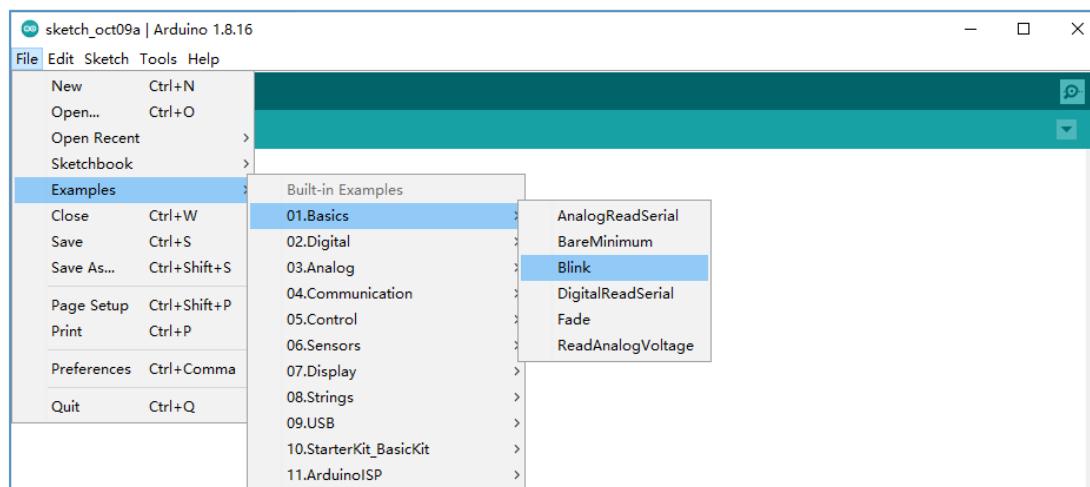


### 3, Click Tools>Board>Raspberry Pi RP2040 Boards>Raspberry Pi Pico.

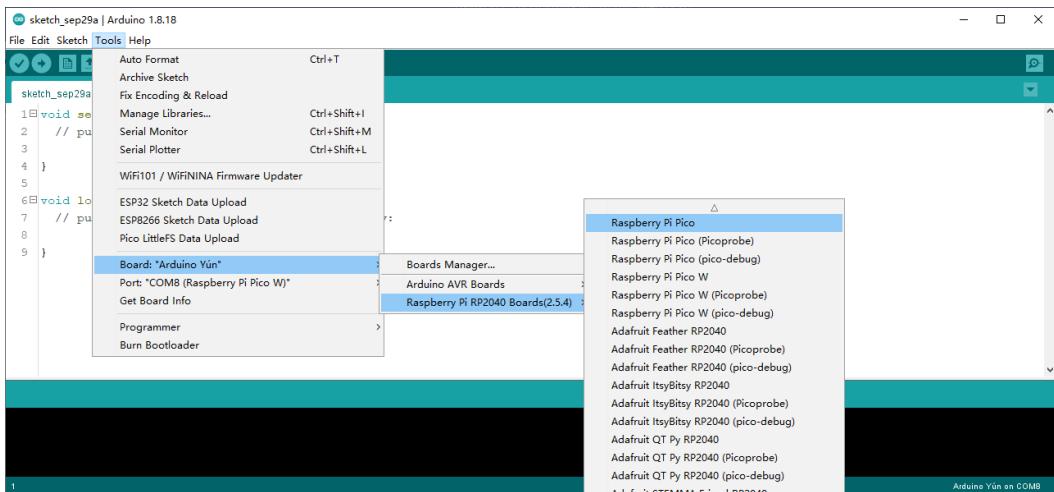

### 4, Click Tools>Port>UF2 Board.

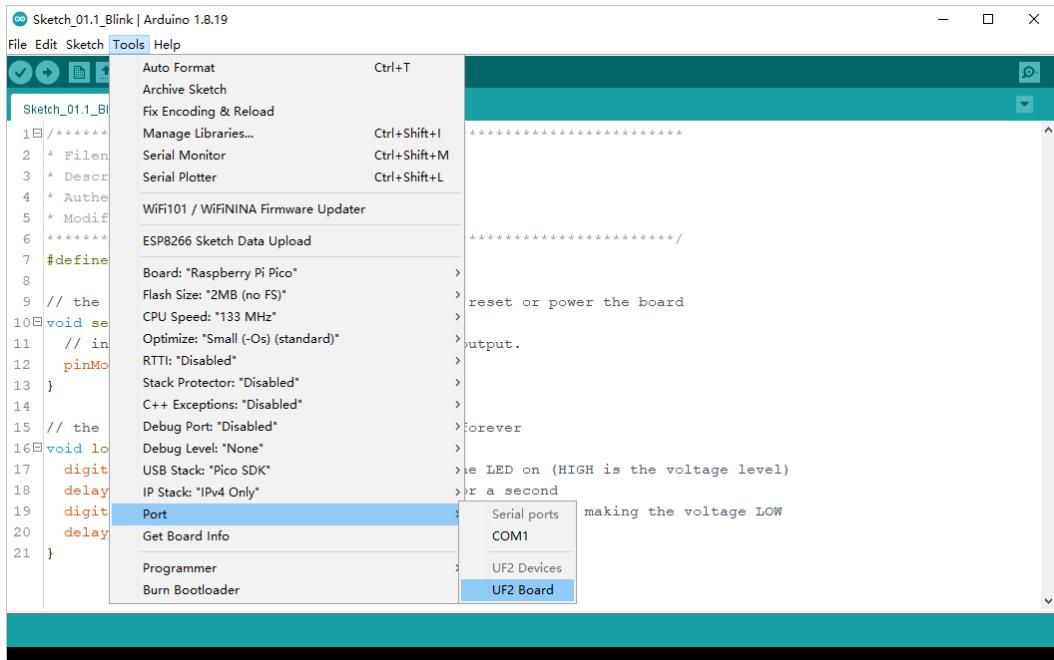


### 5, Upload sketch to Pico.

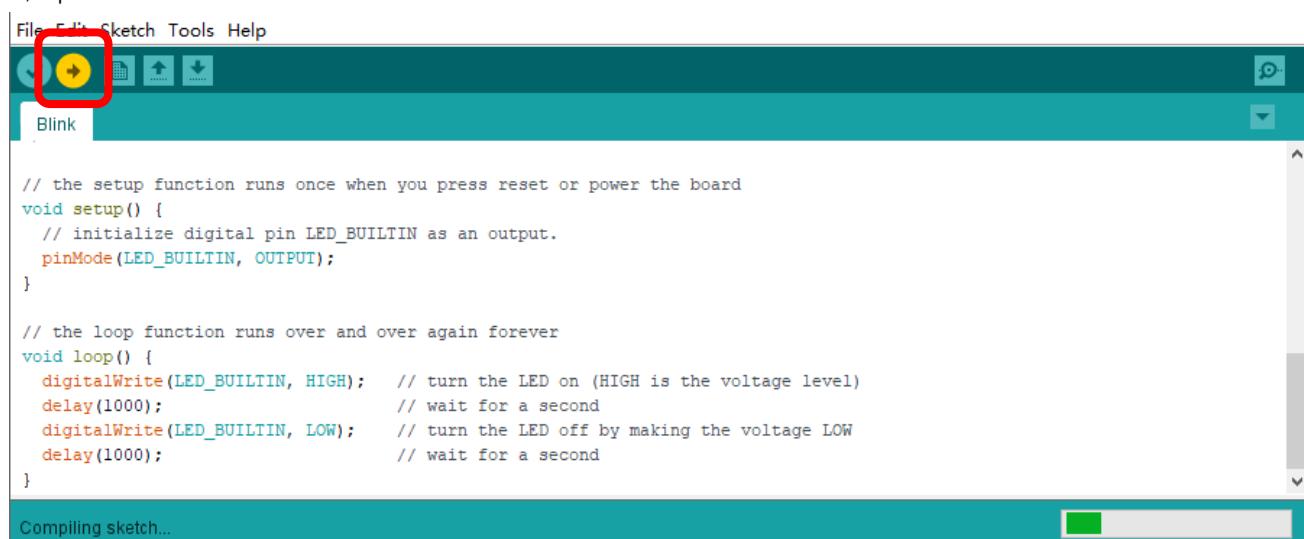

Any concerns? ✉ support@freenove.com

When the sketch finishes uploading, you can see the following prompt.

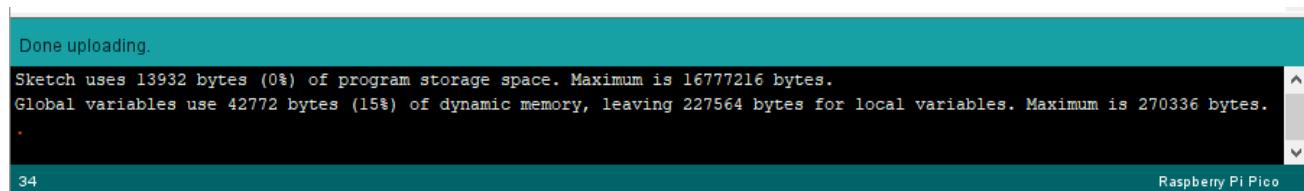


The screenshot shows a terminal window with the following text:


```
Done uploading.  
Sketch uses 13932 bytes (0%) of program storage space. Maximum is 16777216 bytes.  
Global variables use 42772 bytes (15%) of dynamic memory, leaving 227564 bytes for local variables. Maximum is 270336 bytes.  
.  
34
```

Raspberry Pi Pico

And the indicator on Pico starts to flash.

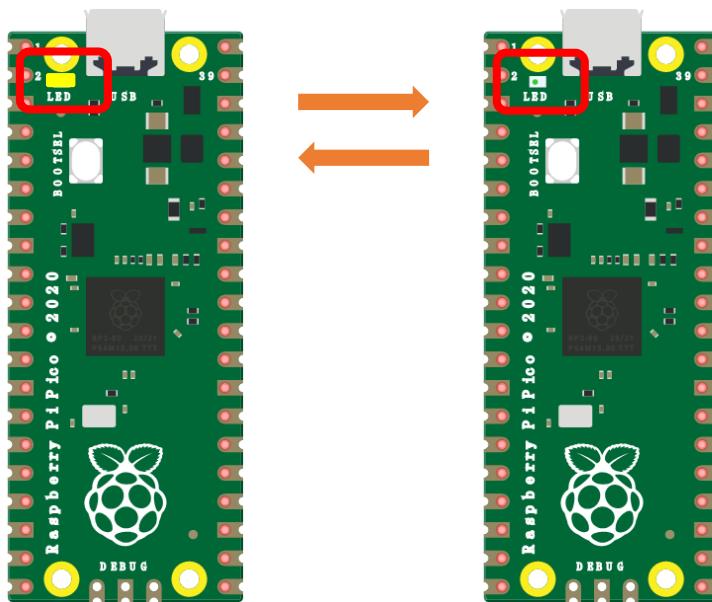

5, Click **Tools>Port>COMx(Raspberry Pi Pico)**. X of COMx varies from different computers. Please select the correct one on your computer. In our case, it is COM9.

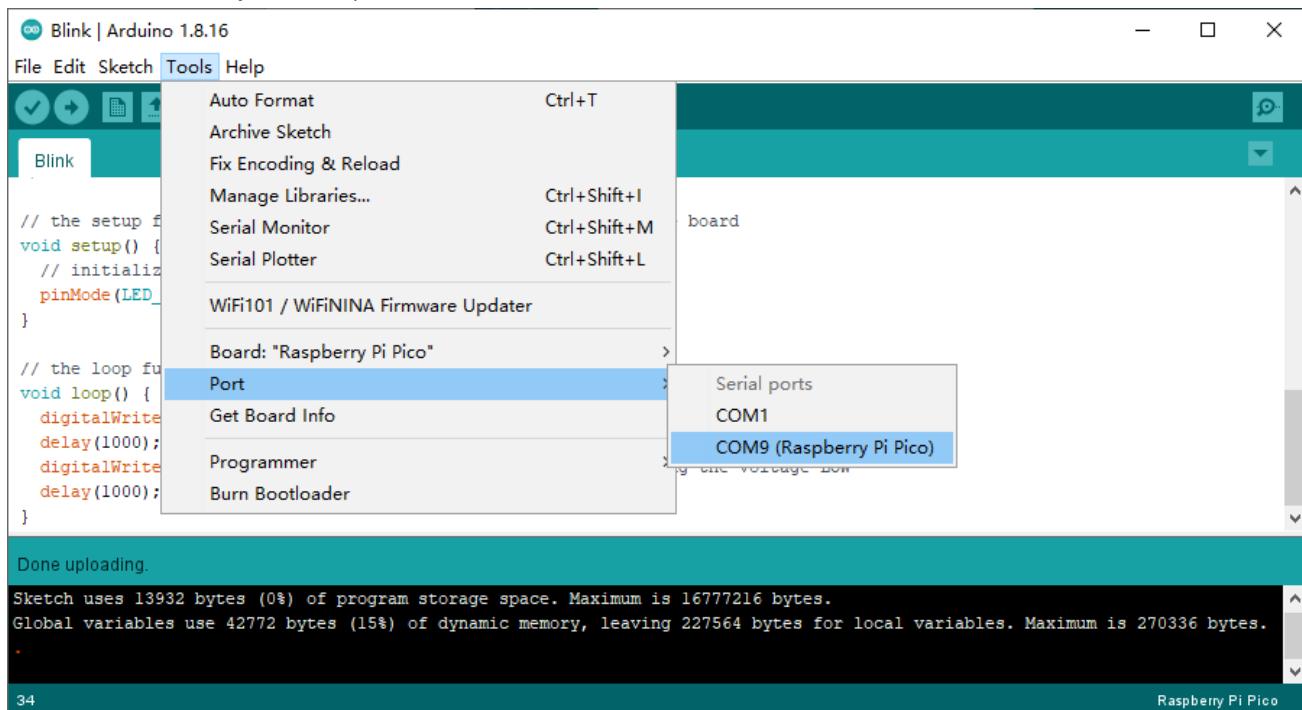


#### Note:

1. At the first time you use Arduino to upload sketch for Pico, you don't need to select port. After that, each time before uploading sketch, please check whether the port has been selected; otherwise, the downloading may fail.
2. Sometimes when using, Pico may lose firmware due to the code and fail to work. At this point, you can upload firmware for Pico as mentioned above.


## Paste the Sticker on the Breadboard

It is not difficult to use the Pico. However, officially, the pin functions are printed on the back of the board, which makes it inconvenient to use. To help users finish each project in the tutorial faster and easier, we provide stickers of the pin functions as follows:

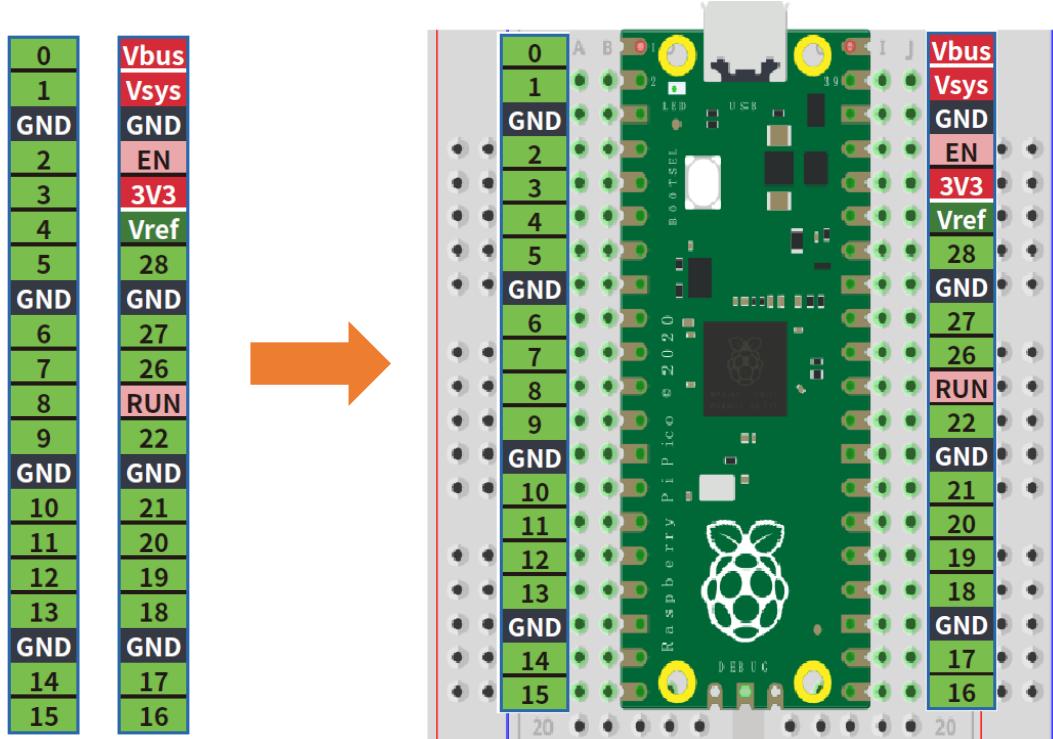

You can paste the sticker on the blank area of the breadboard as above.

To make the tutorial more intuitive, we've made some changes to the simulation diagram as below. The left one is the actual Pico and the right one is its simulation diagram. Please note that to avoid misunderstanding. In addition, the external pin interface functions of Pico and Pico W are identical.

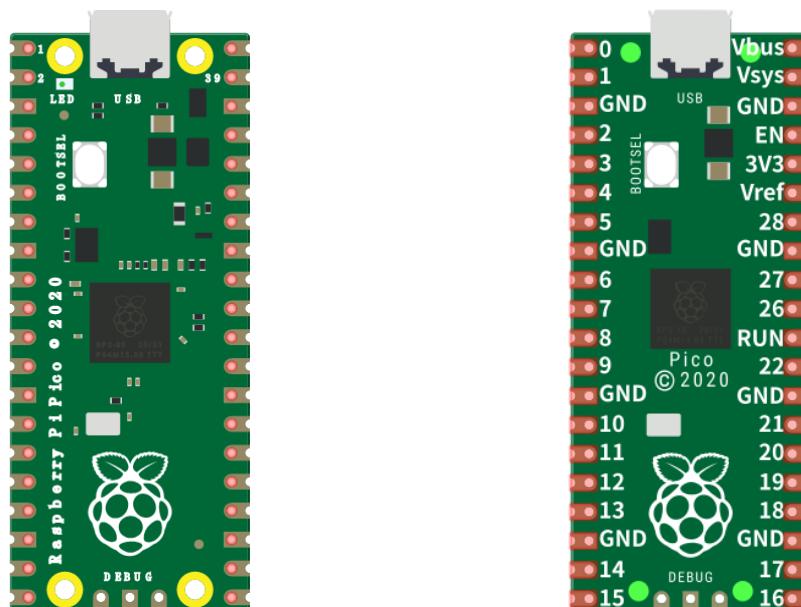

# Chapter 1 LED (Important)

Note: Raspberry Pi Pico and Raspberry Pi Pico W only differ by wireless function, and are almost identical in other aspects. In this tutorial, except for the wireless function, other parts use Raspberry Pi Pico's map for tutorial demonstration.

This chapter is the Start Point in the journey to build and explore Pico electronic projects. We will start with simple “Blink” project.

## Project 1.1 Blink


In this project, we will use Raspberry Pi Pico to control blinking a common LED.

If you haven't installed Arduino IDE, you can click [Here](#).


If you haven't uploaded firmware for Pico, you can click [Here](#) to upload.

## Component List

Raspberry Pi Pico (or Pico W) x1

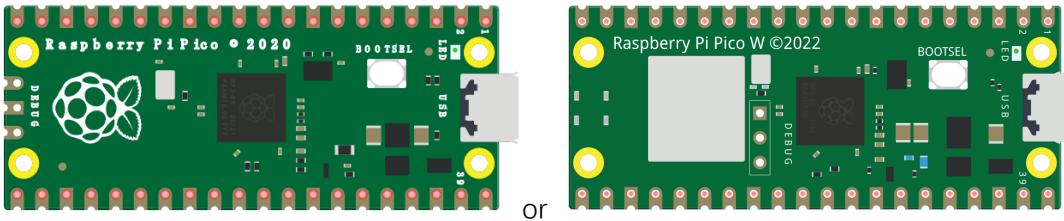


USB cable x1

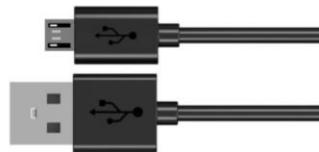

### Power

Raspberry Pi Pico requires 5V power supply. You can either connect external 5V power supply to Vsys pin of Pico or connect a USB cable to the onboard USB base to power Pico.

In this tutorial, we use USB cable to power Pico and upload sketches.

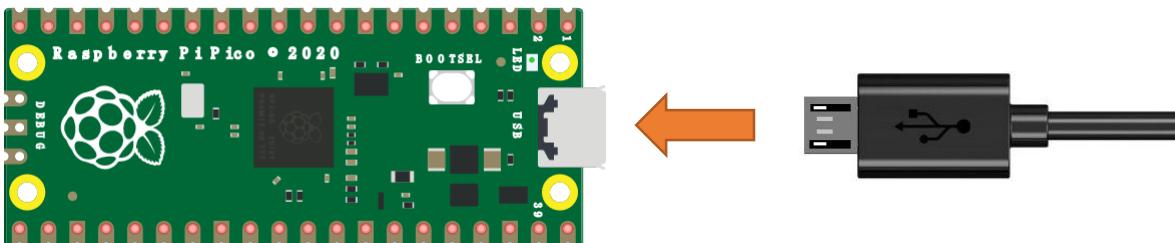

Any concerns? ✉ [support@freenove.com](mailto:support@freenove.com)


## Sketch

The onboard LED of Raspberry Pi Pico is controlled by GP25. When GP25 outputs high level, LED lights up; When it outputs low, LED lights off. You can open the provided code:


**Freenove\_Basic\_Starter\_Kit\_for\_Raspberry\_Pi\_Pico\Sketches\Sketch\_01.1\_Blink.**

Before uploading code to Pico, please check the configuration of Arduino IDE.

Click Tools, make sure Board and Port are as follows:

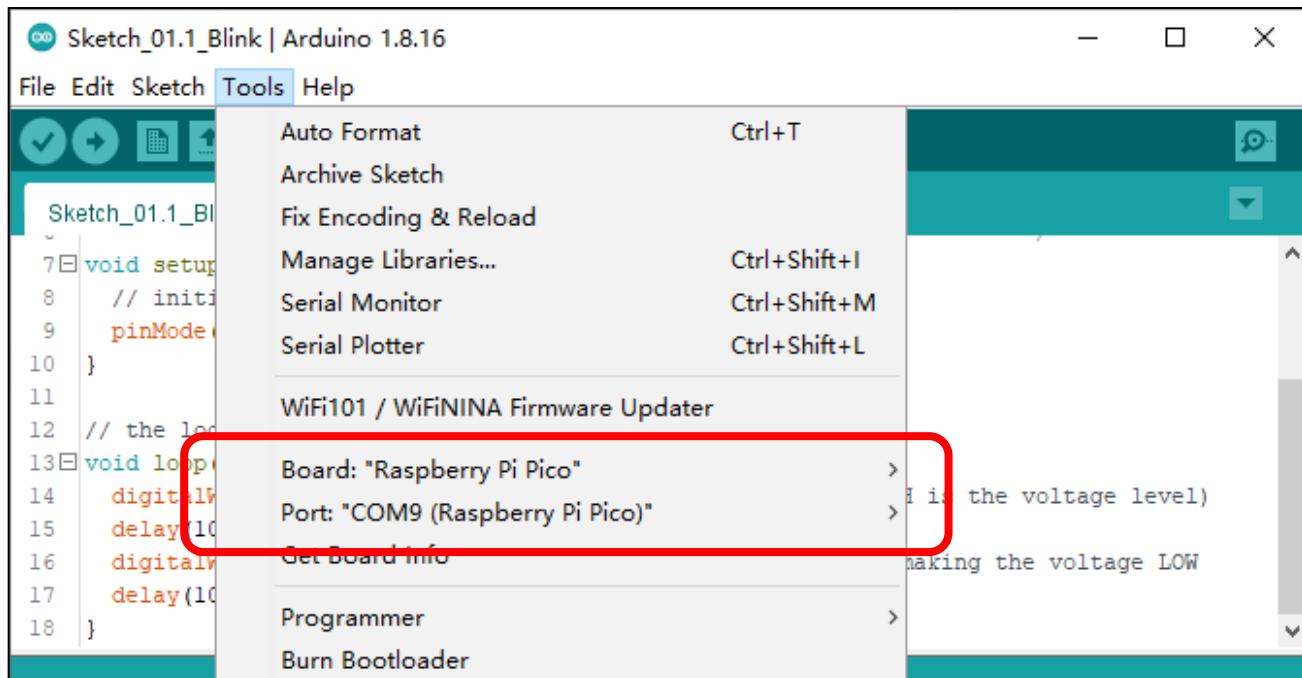


Click "Upload" to upload the sketch to Pico.

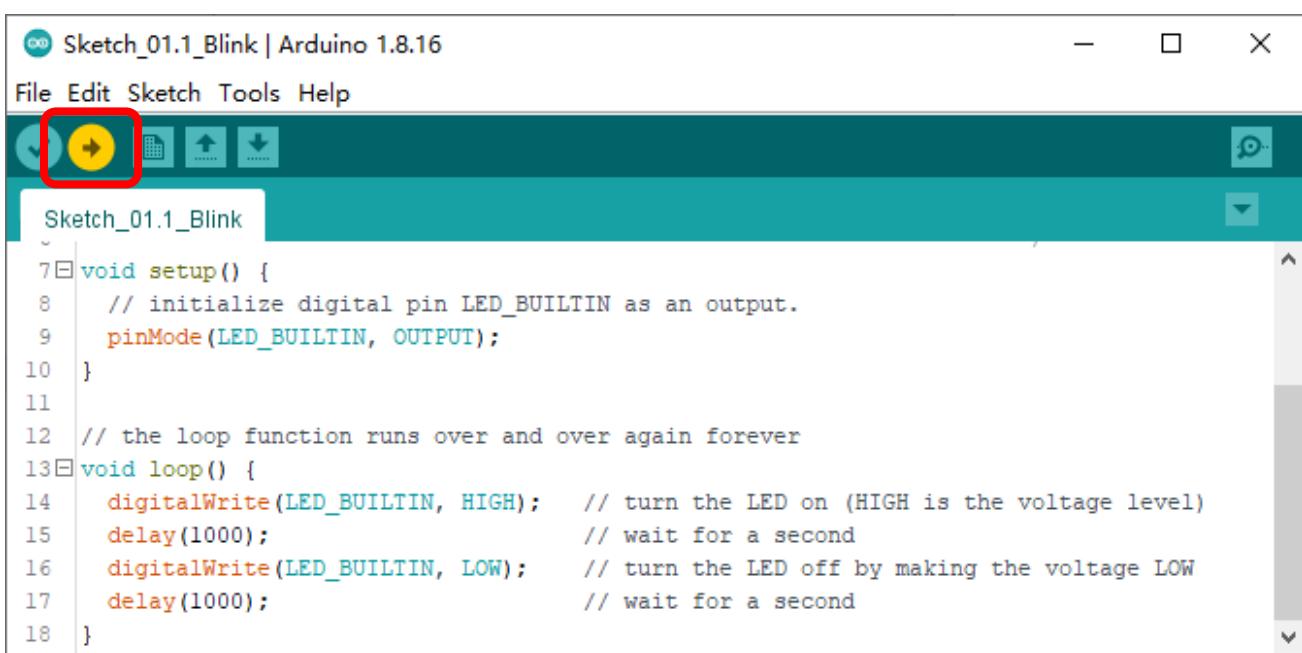




If you have any concerns, please contact us via: [support@freenove.com](mailto:support@freenove.com)

Pico's on-board LED lights on and off every 1s, flashing cyclically.

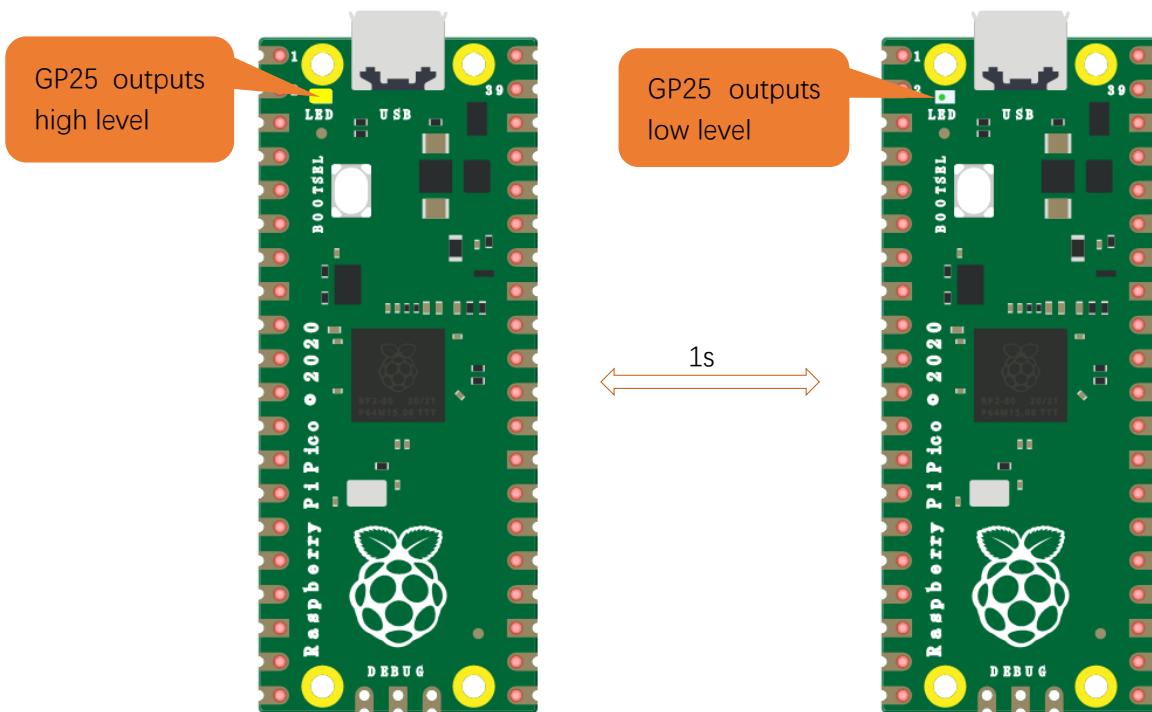

Note: Pico's on-board LED is driven by GPIO25. Pico W's on-board LED uses WL\_GPIO0, which is defined as GPIO32 on Arduino.

If you use Pico W, please change "# define LED\_BUILTIN 25" to "# define LED\_BUILTIN 32" in the code.

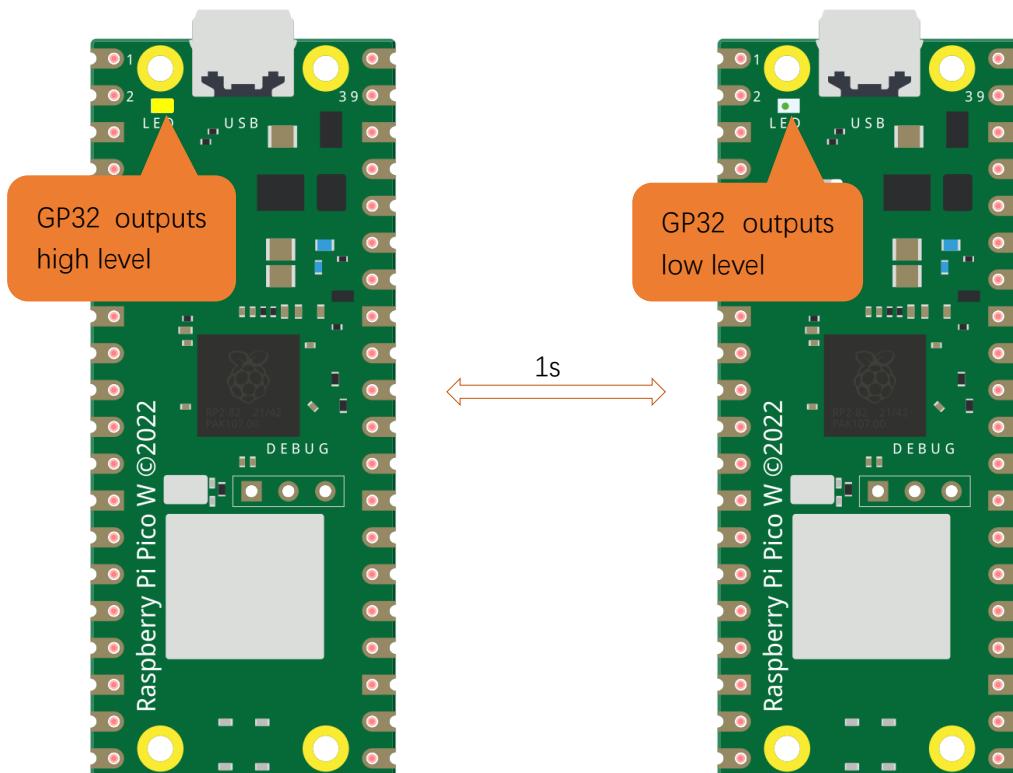

Any concerns? ✉ [support@freenove.com](mailto:support@freenove.com)

The following is the program code:


```

1 #define LED_BUILTIN 25
2
3 // the setup function runs once when you press reset or power the board
4 void setup() {
5     // initialize digital pin LED_BUILTIN as an output.
6     pinMode(LED_BUILTIN, OUTPUT);
7 }
8
9 // the loop function runs over and over again forever
10 void loop() {
11     digitalWrite(LED_BUILTIN, HIGH);      // turn the LED on (HIGH is the voltage level)
12     delay(1000);                      // wait for a second
13     digitalWrite(LED_BUILTIN, LOW);     // turn the LED off by making the voltage LOW
14     delay(1000);                      // wait for a second
15 }
```

The Arduino IDE code usually contains two basic functions: void setup() and void loop().

After the board is reset, the setup() function will be executed firstly, and then the loop() function.

setup() function is generally used to write code to initialize the hardware. And loop() function is used to write code to achieve certain functions. loop() function is executed repeatedly. When the execution reaches the end of loop(), it will back to the beginning of loop() to run again.

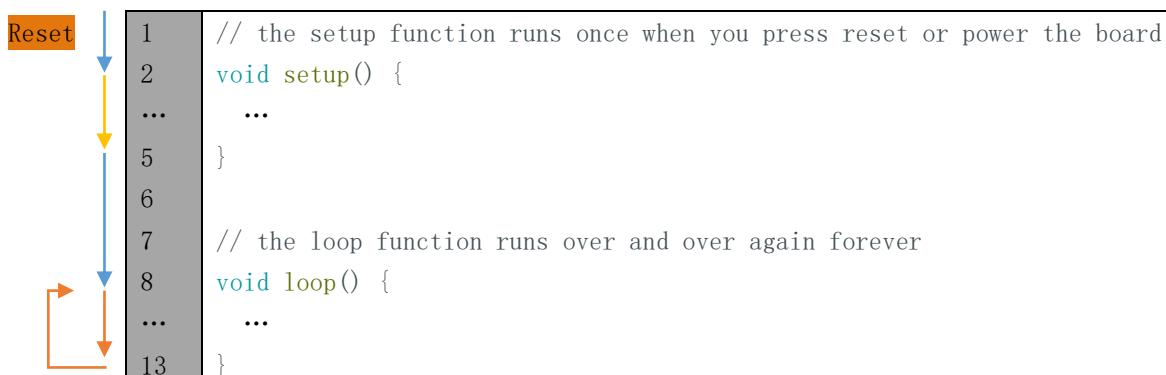

In the circuit, GP25 of Pico is connected to the LED, so the LED pin is defined as 25.

```
1 #define LED_BUILTIN 25
```

This means that after this line of code, all LED\_BUILTIN will be regarded as 25.

In the setup() function, first, we set the LED\_BUILTIN as output mode, which can make the port output high or low level.

```

4 // initialize digital pin LED_BUILTIN as an output.
5 pinMode(LED_BUILTIN, OUTPUT);
```

Then, in the loop() function, set the LED\_BUILTIN to output high level to make LED light up.

```
10 digitalWrite(LED_BUILTIN, HIGH); // turn the LED on (HIGH is the voltage level)
```

Wait for 1000ms, that is 1s. Delay() function is used to make control board wait for a moment before executing the next statement. The parameter indicates the number of milliseconds to wait for.

```
11 delay(1000); // wait for a second
```



Then set the LED\_BUILTIN to output low level, and LED lights off. One second later, the execution of loop() function will be completed.

```
12   digitalWrite(LED_BUILTIN, LOW); // turn the LED off by making the voltage LOW  
13   delay(1000); // wait for a second
```

The loop() function is constantly being executed, so LED will keep blinking.

## Reference

**void pinMode(int pin, int mode);**

Configures the specified pin to behave either as an input or an output.

### Parameters

pin: the pin number to set the mode of LED.

mode: INPUT, OUTPUT, INPUT\_PULLDOWN, or INPUT\_PULLUP.

**void digitalWrite (int pin, int value);**




Writes the value HIGH or LOW (1 or 0) to the given pin which must have been previously set as an output.

For more related functions, please refer to <https://www.arduino.cc/reference/en/>

## Project 1.2 Blink

In this project, we will use Raspberry Pi Pico to control blinking a common LED.


### Component List

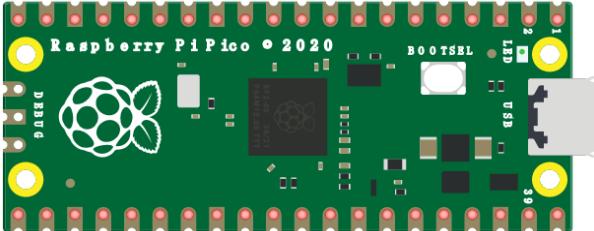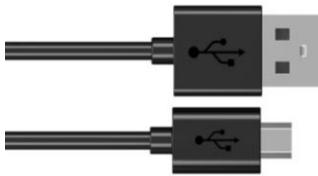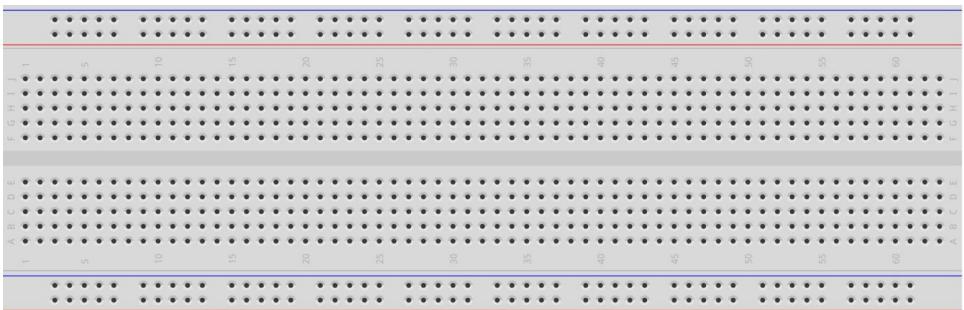Raspberry Pi Pico x1	USB Cable x1	
		
Breadboard x1		
		
LED x1	Resistor 220Ω x1	Jumper
		

## Component Knowledge

### LED

An LED is a type of diode. All diodes only work if current is flowing in the correct direction and have two Poles. An LED will only work (light up) if the longer pin (+) of LED is connected to the positive output from a power source and the shorter pin is connected to the negative (-). Negative output is also referred to as Ground (GND). This type of component is known as “Polar” (think One-Way Street). All common 2 lead diodes are the same in this respect. Diodes work only if the voltage of its positive electrode is higher than its negative electrode and there is a narrow range of operating voltage for most all common diodes of 1.9 and 3.4V. If you use much more than 3.3V the LED will be damaged and burn out.

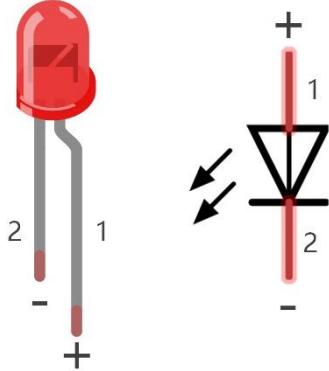


LED	Voltage	Maximum current	Recommended current
Red	1.9 - 2.2V	20mA	10mA
Green	2.9 - 3.4V	10mA	5mA
Blue	2.9 - 3.4V	10mA	5mA
Volt ampere characteristics conform to diode			

Note: LEDs cannot be directly connected to a power supply, which usually ends in a damaged component. A resistor with a specified resistance value must be connected in series to the LED you plan to use.

### Resistor


Resistors use Ohms ( $\Omega$ ) as the unit of measurement of their resistance (R).  $1M\Omega=1000k\Omega$ ,  $1k\Omega=1000\Omega$ . A resistor is a passive electrical component that limits or regulates the flow of current in an electronic circuit. On the left, we see a physical representation of a resistor, and the right is the symbol used to represent the presence of a resistor in a circuit diagram or schematic.

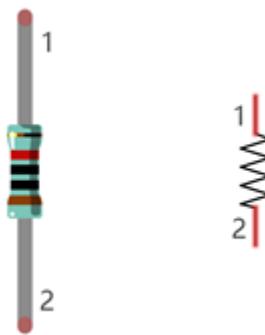

The bands of color on a resistor is a shorthand code used to identify its resistance value. For more details of resistor color codes, please refer to the appendix of this tutorial.

With a fixed voltage, there will be less current output with greater resistance added to the circuit. The relationship between Current, Voltage and Resistance can be expressed by this formula:  $I=V/R$  known as Ohm's Law where I = Current, V = Voltage and R = Resistance. Knowing the values of any two of these allows you to solve the value of the third.

In the following diagram, the current through R1 is:  $I=U/R=5V/10k\Omega=0.0005A=0.5mA$ .

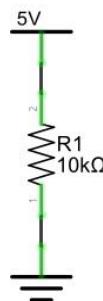


**WARNING:** Never connect the two poles of a power supply with anything of low resistance value (i.e. a metal object or bare wire) this is a Short and results in high current that may damage the power supply and electronic components.

Note: Unlike LEDs and Diodes, Resistors have no poles and are non-polar (it does not matter which direction you insert them into a circuit, it will work the same)

### Breadboard


Here we have a small breadboard as an example of how the rows of holes (sockets) are electrically attached.

The left picture shows the way to connect pins. The right picture shows the practical internal structure.

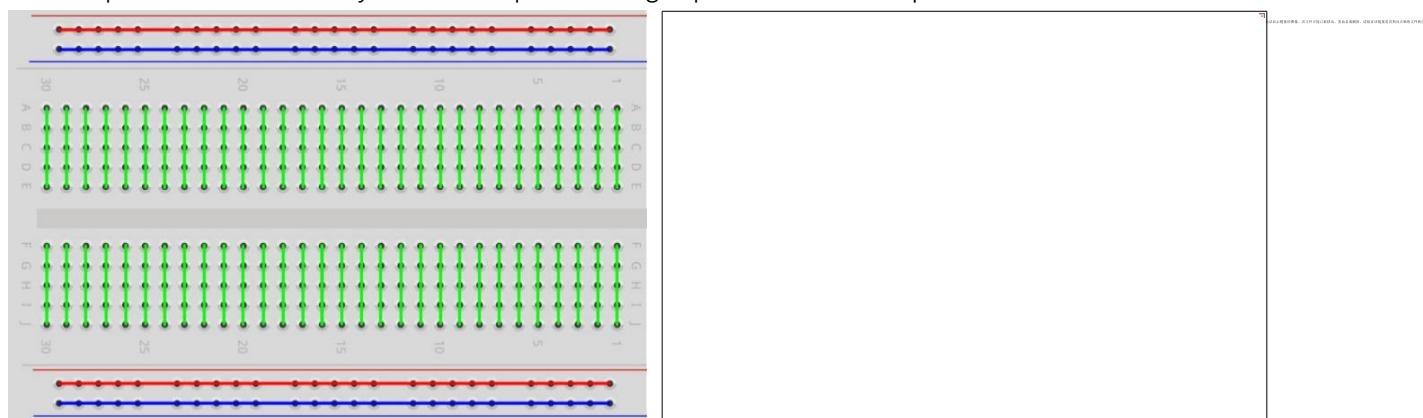

### Power

In this tutorial, we connect Raspberry Pi Pico and computer with a USB cable.

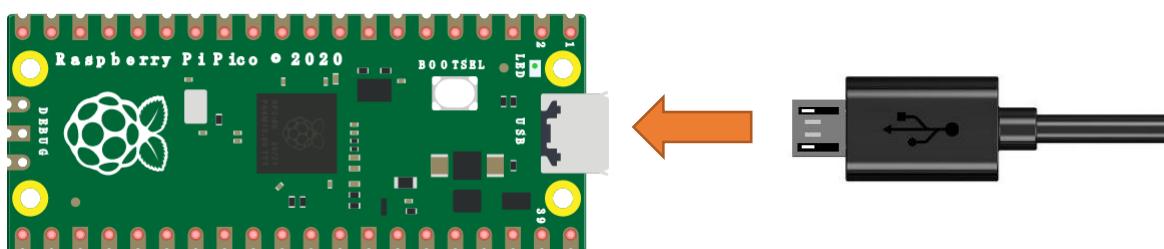


## Circuit

First, disconnect all power from the Raspberry Pi Pico. Then build the circuit according to the circuit and hardware diagrams. After the circuit is built and verified correct, connect the PC to Raspberry Pi Pico.


**CAUTION:** Avoid any possible short circuits (especially connecting 3.3V and GND)!

**WARNING:** A short circuit can cause high current in your circuit, create excessive component heat and cause permanent damage to your hardware!

Schematic diagram

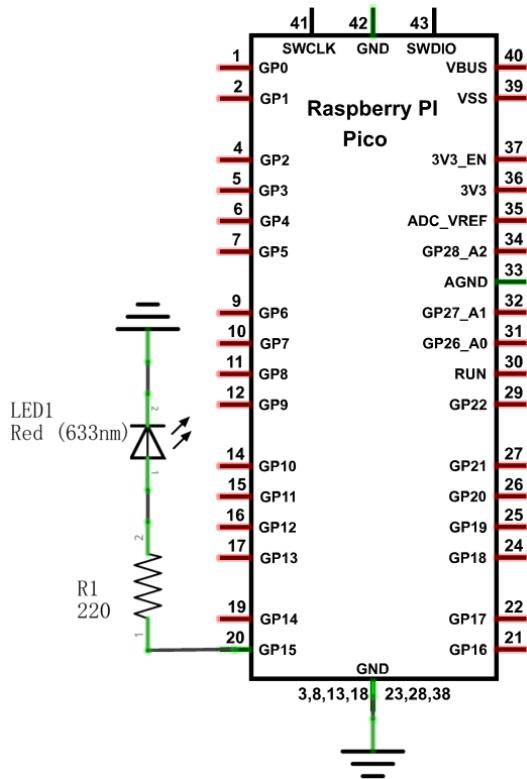

Hardware connection. If you need any support, please feel free to contact us via: [support@freenove.com](mailto:support@freenove.com)

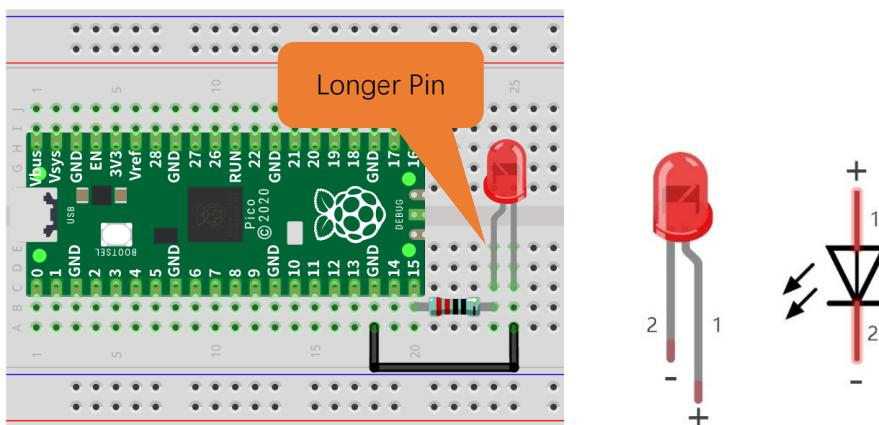

Note: To help users have a better experience when doing the projects, we have made some modifications to Pico's simulation diagram. Please note that there are certain differences between the simulation diagram and the actual board to avoid misunderstanding.

Any concerns? ✉ [support@freenove.com](mailto:support@freenove.com)

## Sketch


According to the circuit diagram, when GP15 of Pico outputs high level, LED lights up; when it outputs low, LED lights off. Therefore, we can make LED flash repeatedly by controlling GP15 to output high and low repeatedly.

You can open the provided code:

**Freenove\_Basic\_Starter\_Kit\_for\_Raspberry\_Pi\_Pico\Sketches\Sketch\_01.2\_Blink.**

Before uploading code to Pico, please check the configuration of Arduino IDE.


Click Tools, make sure Board and Port are as follows:

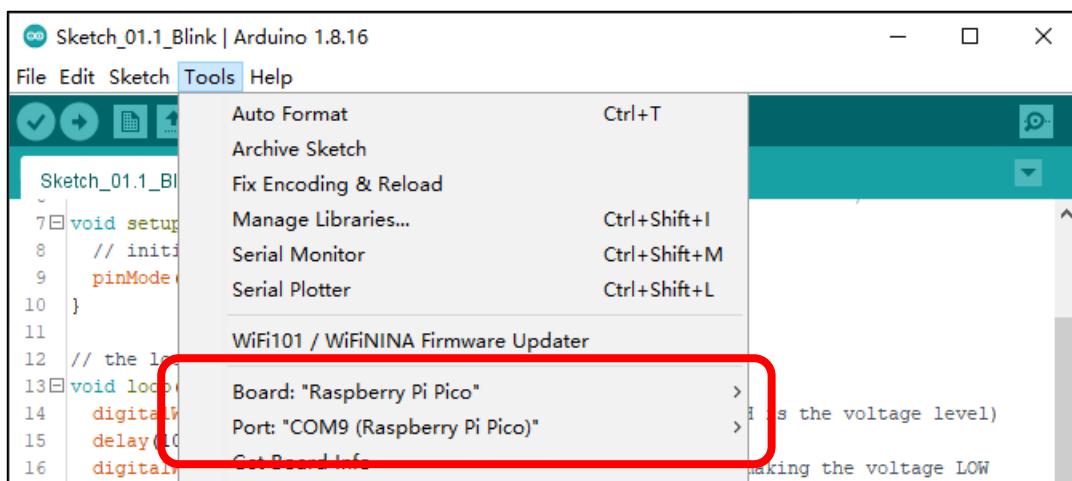

Click "Upload" to upload the sketch to Pico.



Click "Upload". Download the code to Pico and your LED in the circuit starts Blink.

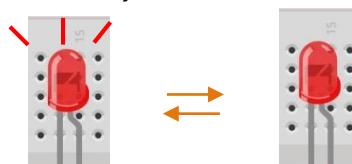


If you have any concerns, please contact us via: [support@freenove.com](mailto:support@freenove.com)

Any concerns? ✉ [support@freenove.com](mailto:support@freenove.com)

# Chapter 2 Button & LED

Usually, there are three essential parts in a complete automatic control device: INPUT, OUTPUT, and CONTROL. In last section, the LED module was the output part and Raspberry Pi Pico was the control part. In practical applications, we not only make LEDs blink, but also make a device sense the surrounding environment, receive instructions and then take the appropriate action such as lighting up LEDs, turning ON a buzzer and so on.

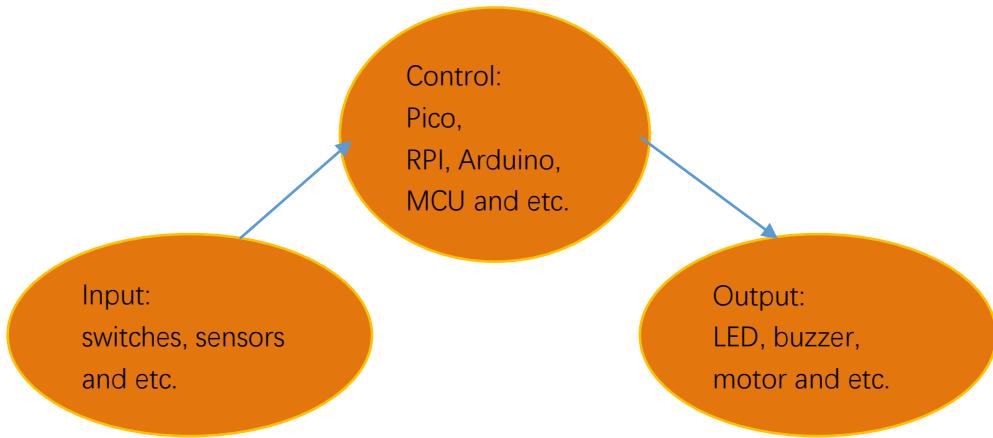

Next we make a simple project: build a control system with button, LED and Raspberry Pi Pico.

Input: Button

Control: Raspberry Pi Pico



Output: LED

## Project 2.1 Button & LED

Note: Raspberry Pi Pico and Raspberry Pi Pico W only differ by wireless function, and are almost identical in other aspects. In this tutorial, except for the wireless function, other parts use Raspberry Pi Pico's map for tutorial demonstration.

In the project, we will control the LED state through a Push Button Switch. When the button is pressed, our LED will turn ON, and when it is released, the LED will turn OFF.


### Component List

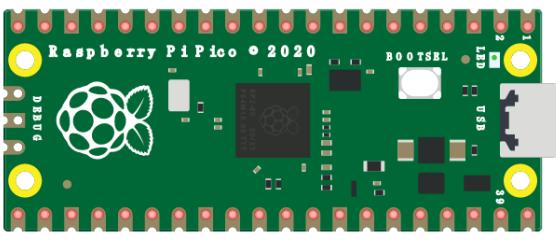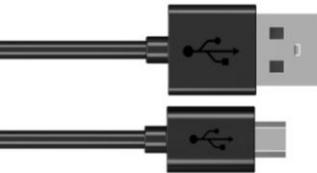Raspberry Pi Pico x1		USB cable x1	
Breadboard x1			
Jumper		LED x1	
Resistor 220Ω x1		Resistor 10kΩ x2	
Push button x1			

# Component Knowledge

## Push button


This type of Push Button Switch has 4 pins (2 Pole Switch). Two pins on the left are connected, and both left and right sides are the same per the illustration:

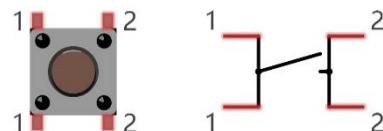


When the button on the switch is pressed, the circuit is completed (your project is Powered ON).

## Circuit

## Schematic diagram

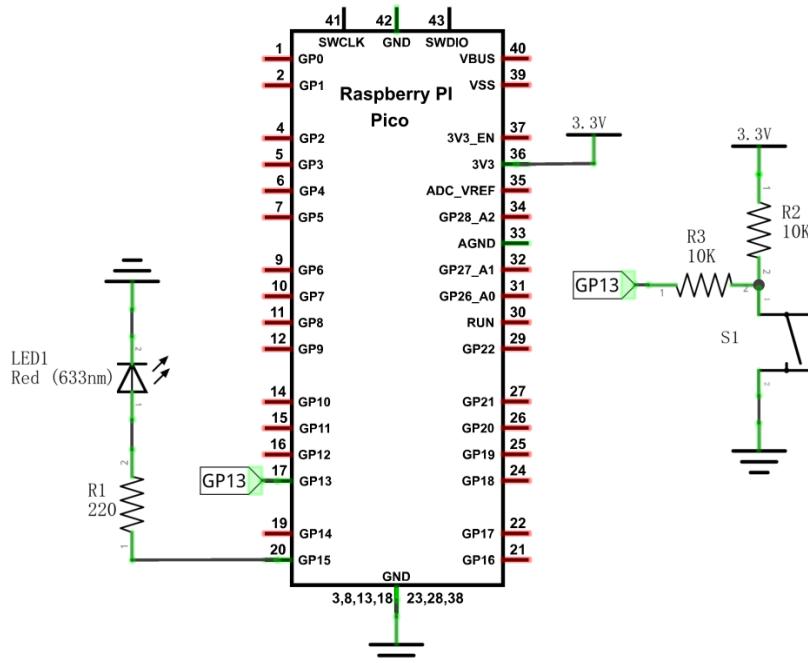

Hardware connection. If you need any support, please feel free to contact us via: [support@freenove.com](mailto:support@freenove.com)

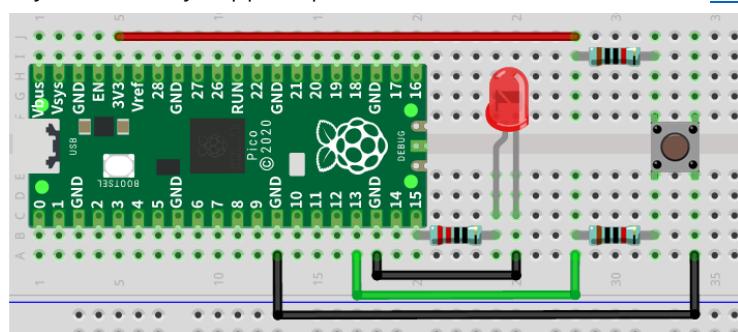

Note: To help users have a better experience when doing the projects, we have made some modifications to Pico's simulation diagram. Please note that there are certain differences between the simulation diagram and the actual board to avoid misunderstanding.


Any concerns?  support@freenove.com

## Sketch

This project is designed for learning how to use push button switch to control an LED. We first need to read the state of switch, and then determine whether to turn the LED ON in accordance to the state of the switch. Upload following sketch:

**Freenove\_Basic\_Starter\_Kit\_for\_Raspberry\_Pi\_Pico\Sketches\Sketch\_02.1\_ButtonAndLed.**

**Sketch\_02.1\_ButtonAndLed**


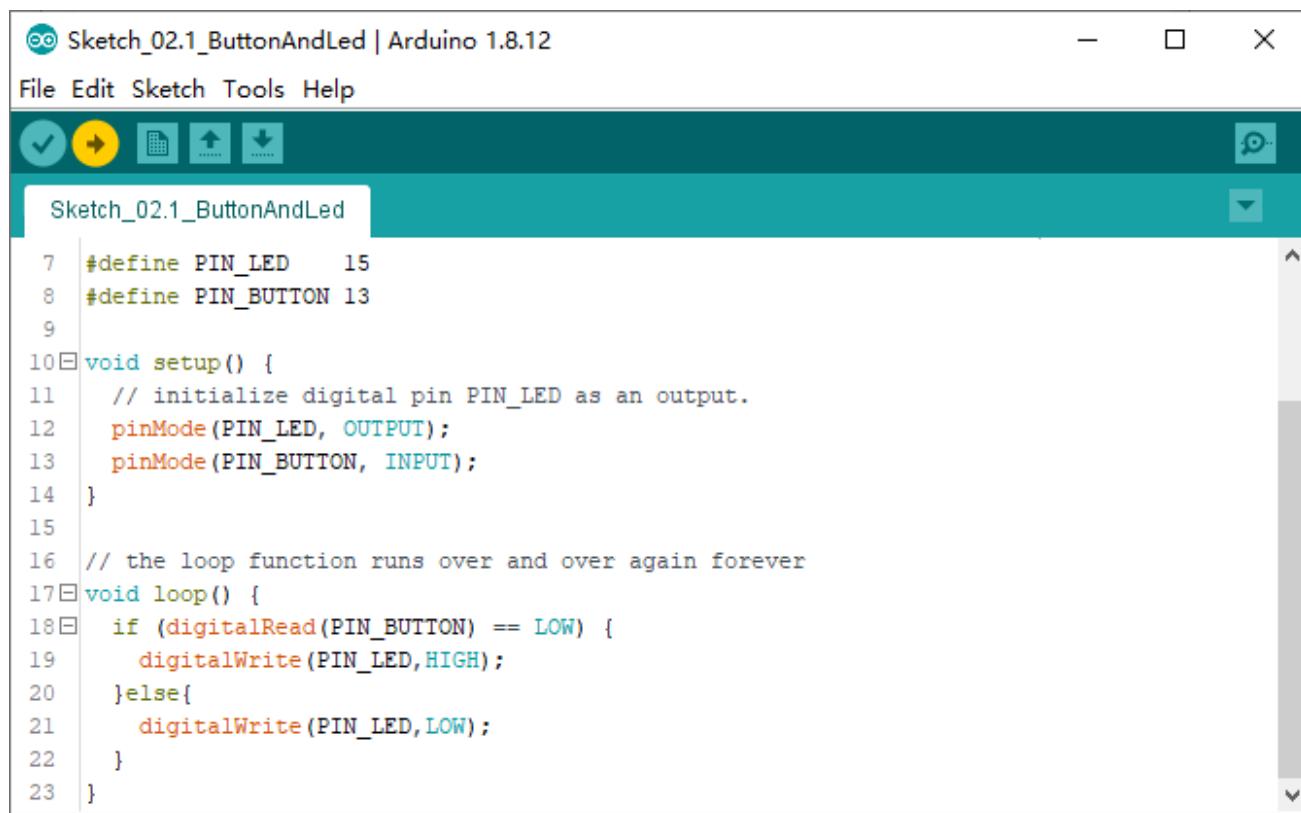


```

Sketch_02.1_ButtonAndLed | Arduino 1.8.12
File Edit Sketch Tools Help
Sketch_02.1_ButtonAndLed
7 #define PIN_LED      15
8 #define PIN_BUTTON 13
9
10 void setup() {
11     // initialize digital pin PIN_LED as an output.
12     pinMode(PIN_LED, OUTPUT);
13     pinMode(PIN_BUTTON, INPUT);
14 }
15
16 // the loop function runs over and over again forever
17 void loop() {
18     if (digitalRead(PIN_BUTTON) == LOW) {
19         digitalWrite(PIN_LED,HIGH);
20     }else{
21         digitalWrite(PIN_LED,LOW);
22     }
23 }

```

Upload the sketch to Pico. When pressing the button, LED lights up; when releasing the button, LED lights OFF.

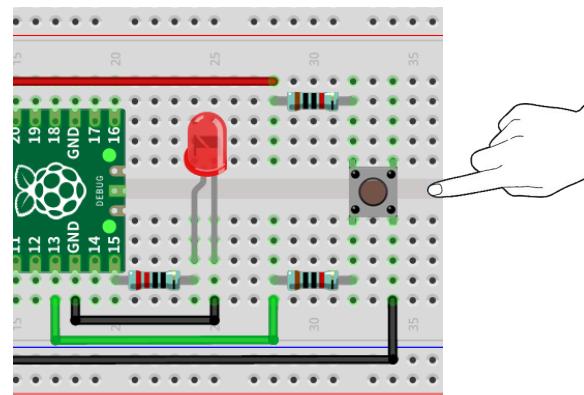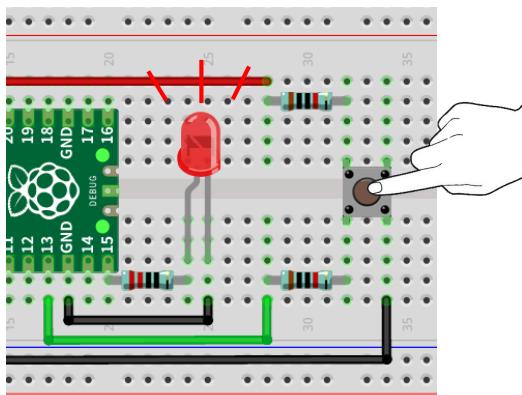



The following is the program code:

```

1 #define PIN_LED    15
2 #define PIN_BUTTON 13
3 // the setup function runs once when you press reset or power the board
4 void setup() {
5     // initialize digital pin PIN_LED as an output.
6     pinMode(PIN_LED, OUTPUT);
7     pinMode(PIN_BUTTON, INPUT);
8 }
9
10 // the loop function runs over and over again forever
11 void loop() {
12     if (digitalRead(PIN_BUTTON) == LOW) {
13         digitalWrite(PIN_LED, HIGH);
14     }else{
15         digitalWrite(PIN_LED, LOW);
16     }
17 }
```

In the circuit connection, LED and button are connected with GP15 and GP13 respectively, so define ledPin and buttonPin as 15 and 13 respectively.

```

1 #define PIN_LED    15
2 #define PIN_BUTTON 13
```

In the while cycle of main function, use digitalRead(buttonPin) to determine the state of button. When the button is pressed, the function returns low level and the result of "if" is true, so LED lights up. Otherwise, LED lights OFF.

```

11 void loop() {
12     if (digitalRead(PIN_BUTTON) == LOW) {
13         digitalWrite(PIN_LED, HIGH);
14     }else{
15         digitalWrite(PIN_LED, LOW);
16     }
17 }
```

### Reference

```
int digitalRead (int pin);
```

This function returns the value read at the given pin. It will be "HIGH" or "LOW"(1 or 0) depending on the logic level at the pin.


## Project 2.2 MINI table lamp

We will also use a Push Button Switch, LED and Raspberry Pi Pico to make a MINI Table Lamp but this will function differently: Press the button, the LED will turn ON, and pressing the button again, the LED turns OFF. The ON switch action is no longer momentary (like a door bell) but remains ON without needing to continually press on the Button Switch.

First, let us learn something about the push button switch.

### Debounce for Push Button

When a Momentary Push Button Switch is pressed, it will not change from one state to another state immediately. Due to tiny mechanical vibrations, there will be a short period of continuous buffeting before it completely reaches another state too fast for Humans to detect but not for computer microcontrollers. The same is true when the push button switch is released. This unwanted phenomenon is known as "bounce".

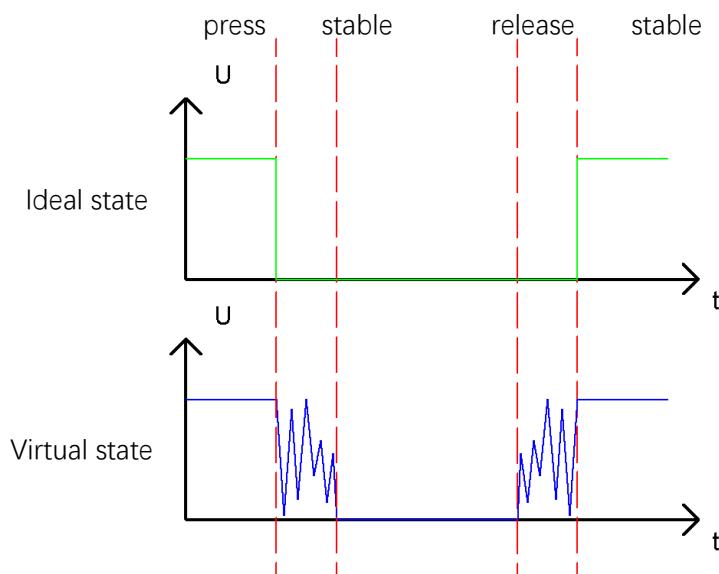

Therefore, if we can directly detect the state of the Push Button Switch, there are multiple pressing and releasing actions in one pressing cycle. This buffeting will mislead the high-speed operation of the microcontroller to cause many false decisions. Therefore, we need to eliminate the impact of buffeting. Our solution: to judge the state of the button multiple times. Only when the button state is stable (consistent) over a period of time, can it indicate that the button is actually in the ON state (being pressed).


This project needs the same components and circuits as we used in the previous section.

## Sketch

Upload following sketch:

**Freenove\_Basic\_Starter\_Kit\_for\_Raspberry\_Pi\_Pico\Sketches\Sketch\_02.2\_TableLamp.**

**Sketch\_02.2\_TableLamp**


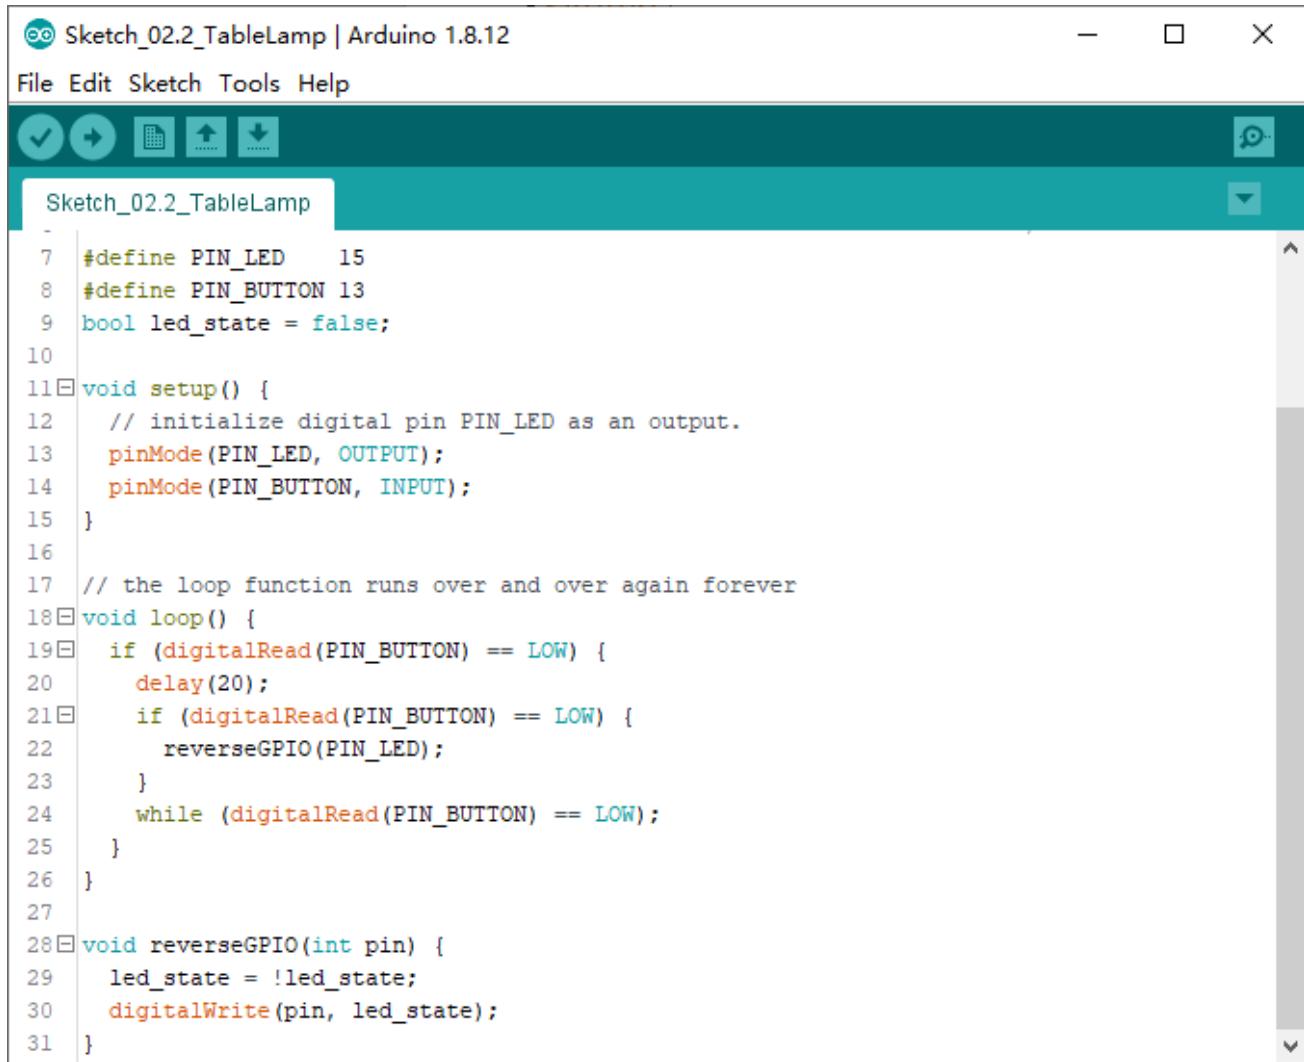


```

Sketch_02.2_TableLamp | Arduino 1.8.12
File Edit Sketch Tools Help
Sketch_02.2_TableLamp
7 #define PIN_LED      15
8 #define PIN_BUTTON 13
9 bool led_state = false;
10
11 void setup() {
12     // initialize digital pin PIN_LED as an output.
13     pinMode(PIN_LED, OUTPUT);
14     pinMode(PIN_BUTTON, INPUT);
15 }
16
17 // the loop function runs over and over again forever
18 void loop() {
19     if (digitalRead(PIN_BUTTON) == LOW) {
20         delay(20);
21         if (digitalRead(PIN_BUTTON) == LOW) {
22             reverseGPIO(PIN_LED);
23         }
24         while (digitalRead(PIN_BUTTON) == LOW);
25     }
26 }
27
28 void reverseGPIO(int pin) {
29     led_state = !led_state;
30     digitalWrite(pin, led_state);
31 }


```

Upload the sketch to Pico. When the button is pressed, LED lights up; when the button is released, LED is still ON.

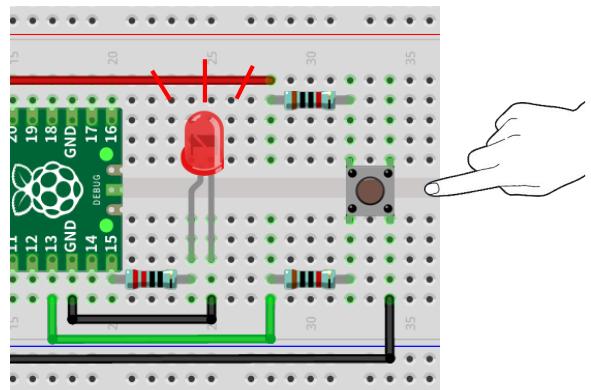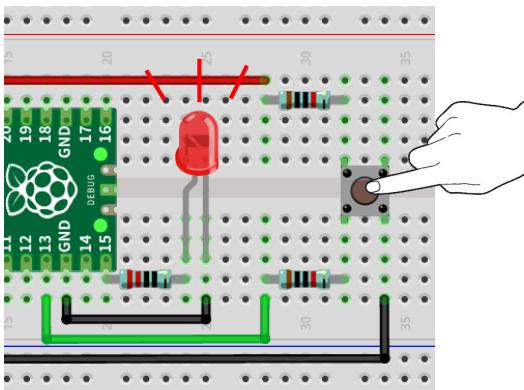

Any concerns? ✉ support@freenove.com

When the button is pressed again, LED turns OFF; when released, LED keeps OFF.

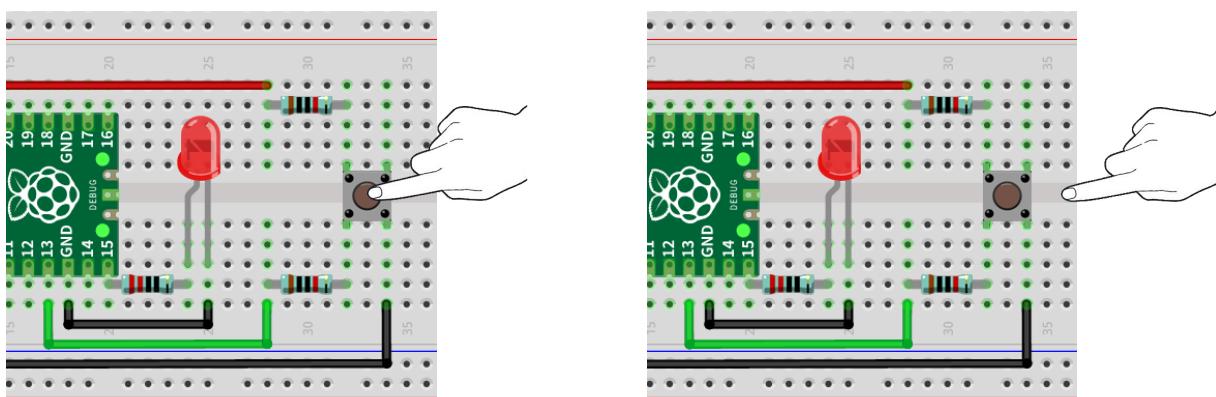

The following is the program code:

```

1 #define PIN_LED    15
2 #define PIN_BUTTON 13
3 bool ledState = false;
4
5 void setup() {
6     // initialize digital pin PIN_LED as an output.
7     pinMode(PIN_LED, OUTPUT);
8     pinMode(PIN_BUTTON, INPUT);
9 }
10
11 // the loop function runs over and over again forever
12 void loop() {
13     if (digitalRead(PIN_BUTTON) == LOW) {
14         delay(20);
15         if (digitalRead(PIN_BUTTON) == LOW) {
16             reverseGPIO(PIN_LED);
17         }
18         while (digitalRead(PIN_BUTTON) == LOW);
19     }
20 }
21
22 void reverseGPIO(int pin) {
23     ledState = !ledState;
24     digitalWrite(pin, ledState);
25 }
```

In the circuit connection, LED and button are connected with GP15 and GP13 respectively, so define ledPin and buttonPin as 15 and 13 respectively.

```

1 #define PIN_LED    15
2 #define PIN_BUTTON 13
```

Define a variable to store the status of LED.

```
3 bool ledState = false;
```



When judging the push button state, if it is detected as "pressed down", wait for a certain time to detect again to eliminate the effect of bounce. When confirmed, flip the LED on and off. Then it starts to wait for the pressed button to be released, and waits for a certain time to eliminate the effect of bounce after it is released.

```
13  if (digitalRead(PIN_BUTTON) == LOW) {  
14      delay(20);  
15      if (digitalRead(PIN_BUTTON) == LOW) {  
16          reverseGPIO(PIN_LED);  
17      }  
18      while (digitalRead(PIN_BUTTON) == LOW);  
19  }
```

When the button is pressed, reverseGPIO function is called to change the variable that controls LED's statue, and write it to Pico to reverse the pin's output state.

```
22  void reverseGPIO(int pin) {  
23      ledState = !ledState;  
24      digitalWrite(pin, ledState);  
25  }
```

# Chapter 3 LED Bar




We have learned how to control an LED blinking, next we will learn how to control a number of LEDs.

## Project 3.1 Flowing Light

Note: Raspberry Pi Pico and Raspberry Pi Pico W only differ by wireless function, and are almost identical in other aspects. In this tutorial, except for the wireless function, other parts use Raspberry Pi Pico's map for tutorial demonstration.

In this project, we use a number of LEDs to make a flowing light.

## Component List

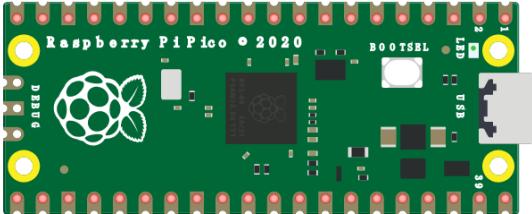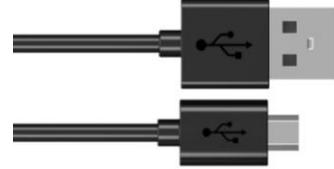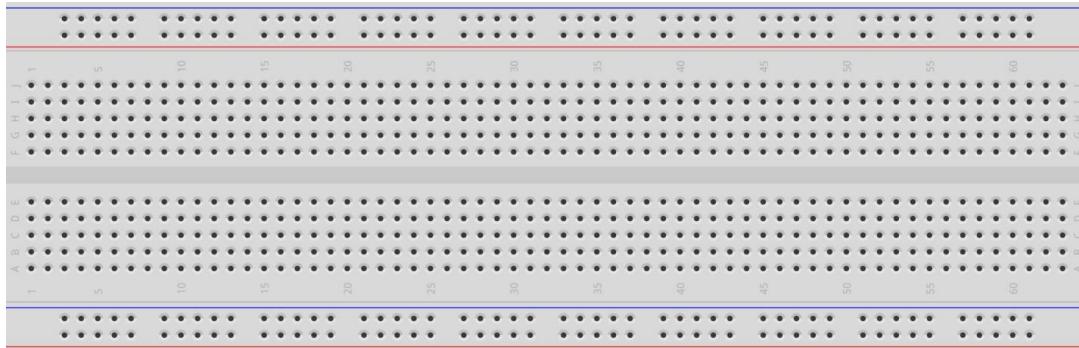Raspberry Pi Pico x1	USB cable x1	
		
Breadboard x1		
Jumper	LED bar graph x1	Resistor 220Ω x10
		




## Component Knowledge


Let us learn about the basic features of these components to use and understand them better.

### LED bar


A Bar Graph LED has 10 LEDs integrated into one compact component. The two rows of pins at its bottom are paired to identify each LED like the single LED used earlier.

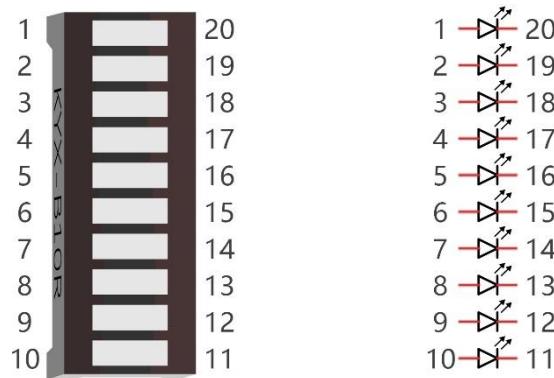

## Circuit

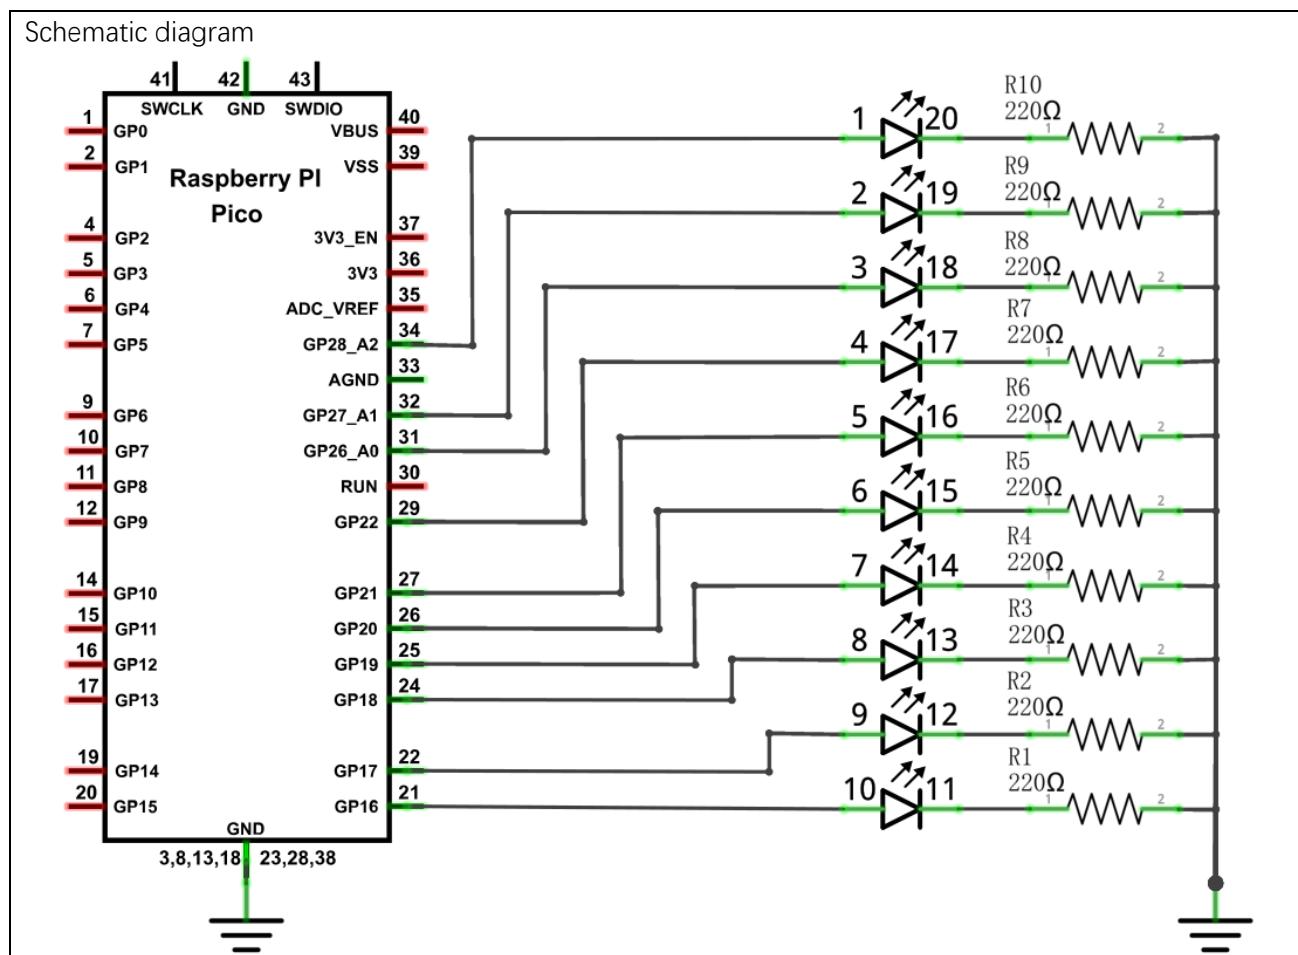

Hardware connection. If you need any support, please feel free to contact us via: [support@freenove.com](mailto:support@freenove.com)

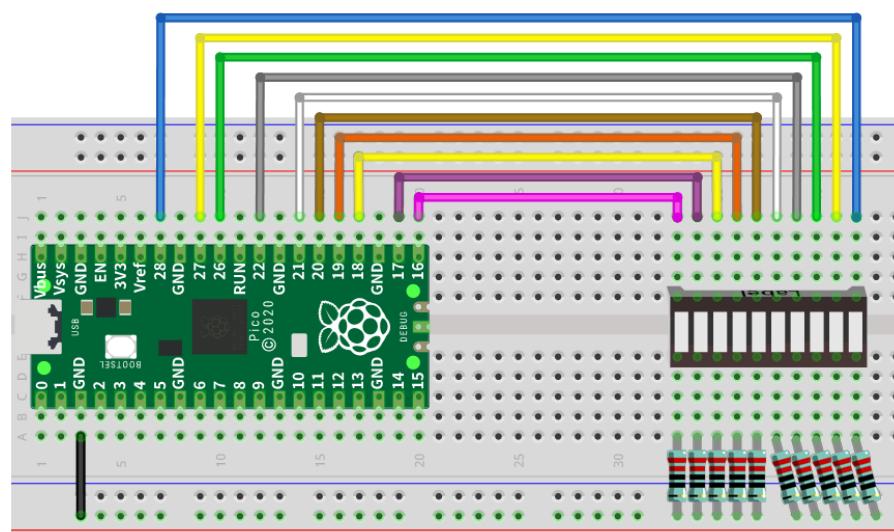

Note: To help users have a better experience when doing the projects, we have made some modifications to Pico's simulation diagram. Please note that there are certain differences between the simulation diagram and the actual board to avoid misunderstanding.

If LEDbar doesn't work, try to rotate LEDbar for 180°. The label is random.

Any concerns? [✉ support@freenove.com](mailto:support@freenove.com)



## Sketch

This project is designed to make a flowing water lamp, which are these actions: First turn LED #1 ON, then turn it OFF. Then turn LED #2 ON, and then turn it OFF... and repeat the same to all 10 LEDs until the last LED is turns OFF. This process is repeated to achieve the “movements” of flowing water.

Upload following sketch:

**Freenove\_Basic\_Starter\_Kit\_for\_Raspberry\_Pi\_Pico\Sketches\Sketch\_03.1\_FlowingLight.**

**Sketch\_03.1\_FlowingLight**

The screenshot shows the Arduino IDE interface with the following details:

- Title Bar:** Sketch\_03.1\_FlowingLight | Arduino 1.8.12
- Menu Bar:** File Edit Sketch Tools Help
- Toolbar:** Includes icons for Open, Save, Upload, and others.
- Sketch Area:** Displays the C code for Sketch\_03.1\_FlowingLight. The code initializes 10 pins (16-28) as outputs and then enters a loop where it alternates the state of each pin from HIGH to LOW, creating a flowing effect. The code is as follows:

```

7 byte ledPins[] = {16, 17, 18, 19, 20, 21, 22, 26, 27, 28};
8 int ledCounts;
9
10 void setup() {
11     ledCounts = sizeof(ledPins);
12     for (int i = 0; i < ledCounts; i++) {
13         pinMode(ledPins[i], OUTPUT);
14     }
15 }
16
17 void loop() {
18     for (int i = 0; i < ledCounts; i++) {
19         digitalWrite(ledPins[i], HIGH);
20         delay(100);
21         digitalWrite(ledPins[i], LOW);
22     }
23     for (int i = ledCounts - 1; i > -1; i--) {
24         digitalWrite(ledPins[i], HIGH);
25         delay(100);
26         digitalWrite(ledPins[i], LOW);
27     }
28 }

```
- Status Bar:** Shows "Done uploading." followed by a progress bar indicating the upload process: "Loading into Flash: [=====]" 96%, then "100%".
- Bottom Status:** Shows "Raspberry Pi Pico on COM10" and the number "7".

Click Upload to upload the sketch to Pico. LEDs of LED bar graph lights up one by one from left to right and then back from right to left.



If you have any concerns, please contact us via: [support@freenove.com](mailto:support@freenove.com)

Any concerns? ✉ [support@freenove.com](mailto:support@freenove.com)

The following is the program code:

```
1 byte ledPins[] = {16, 17, 18, 19, 20, 21, 22, 26, 27, 28};  
2 int ledCounts;  
3  
4 void setup() {  
5     ledCounts = sizeof(ledPins);  
6     for (int i = 0; i < ledCounts; i++) {  
7         pinMode(ledPins[i], OUTPUT);  
8     }  
9 }  
10  
11 void loop() {  
12     for (int i = 0; i < ledCounts; i++) {  
13         digitalWrite(ledPins[i], HIGH);  
14         delay(100);  
15         digitalWrite(ledPins[i], LOW);  
16     }  
17     for (int i = ledCounts - 1; i > -1; i--) {  
18         digitalWrite(ledPins[i], HIGH);  
19         delay(100);  
20         digitalWrite(ledPins[i], LOW);  
21     }  
22 }
```

Use an array to define 10 GPIO ports connected to LED bar graph for easier operation.

```
1 byte ledPins[] = {16, 17, 18, 19, 20, 21, 22, 26, 27, 28};
```

In setup(), use sizeof() to get the number of array, which is the number of LEDs, then configure the GPIO port to output mode.

```
5 ledCounts = sizeof(ledPins);  
6 for (int i = 0; i < ledCounts; i++) {  
7     pinMode(ledPins[i], OUTPUT);  
8 }
```

Then, in loop(), use two “for” loop to realize flowing water light from left to right and from right to left.

```
12 for (int i = 0; i < ledCounts; i++) {  
13     digitalWrite(ledPins[i], HIGH);  
14     delay(100);  
15     digitalWrite(ledPins[i], LOW);  
16 }  
17 for (int i = ledCounts - 1; i > -1; i--) {  
18     digitalWrite(ledPins[i], HIGH);  
19     delay(100);  
20     digitalWrite(ledPins[i], LOW);  
21 }
```



# Chapter 4 Analog & PWM

In previous study, we have known that one button has two states: pressed and released, and LED has light-on/off state, then how to enter a middle state? How to output an intermediate state to let LED "semi bright"? That's what we're going to learn.

First, let's learn how to control the brightness of an LED.

## Project 4.1 Breathing LED


Breathing light, that is, LED is turned from off to on gradually, and gradually from on to off, just like "breathing". So, how to control the brightness of an LED? We will use PWM to achieve this target.

### Component List


Raspberry Pi Pico x1



USB cable x1

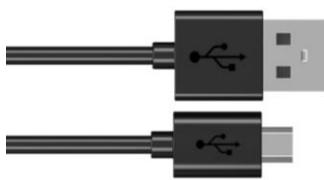

Breadboard x1

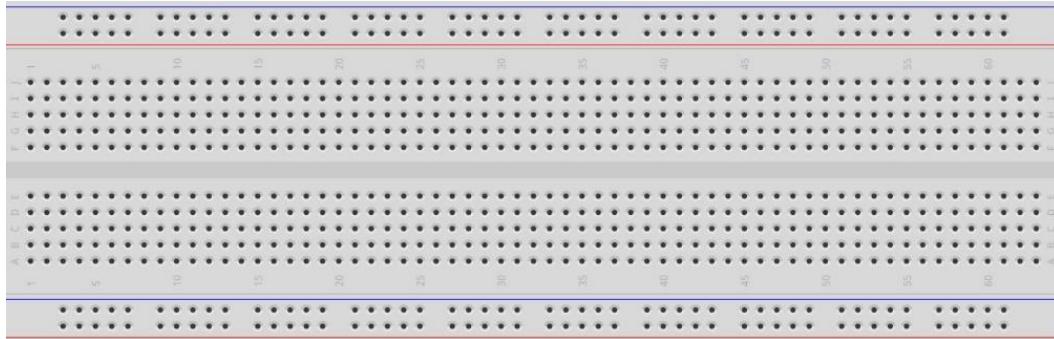

LED x1



Resistor 220Ω x1




Jumper



## Related Knowledge

### Analog & Digital

An Analog Signal is a continuous signal in both time and value. On the contrary, a Digital Signal or discrete-time signal is a time series consisting of a sequence of quantities. Most signals in life are analog signals. A familiar example of an Analog Signal would be how the temperature throughout the day is continuously changing and could not suddenly change instantaneously from 0°C to 10°C. However, Digital Signals can instantaneously change in value. This change is expressed in numbers as 1 and 0 (the basis of binary code). Their differences can more easily be seen when compared when graphed as below.

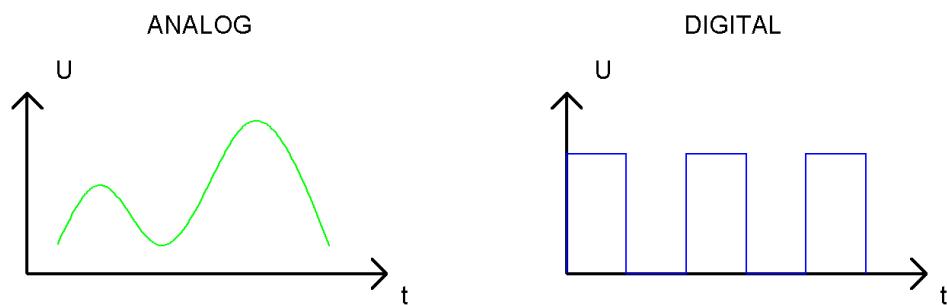


In practical application, we often use binary as the digital signal, that is a series of 0's and 1's. Since a binary signal only has two values (0 or 1), it has great stability and reliability. Lastly, both analog and digital signals can be converted into the other.

### PWM

PWM, Pulse-Width Modulation, is a very effective method for using digital signals to control analog circuits. Common processors cannot directly output analog signals. PWM technology makes it very convenient to achieve this conversion (translation of digital to analog signals).

PWM technology uses digital pins to send certain frequencies of square waves, that is, the output of high levels and low levels, which alternately last for a while. The total time for each set of high levels and low levels is generally fixed, which is called the period (Note: the reciprocal of the period is frequency). The time of high level outputs are generally called "pulse width", and the duty cycle is the percentage of the ratio of pulse duration, or pulse width (PW) to the total period (T) of the waveform.

The longer the output of high levels last, the longer the duty cycle and the higher the corresponding voltage in the analog signal will be. The following figures show how the analog signal voltages vary between 0V-5V (high level is 5V) corresponding to the pulse width 0%-100%:

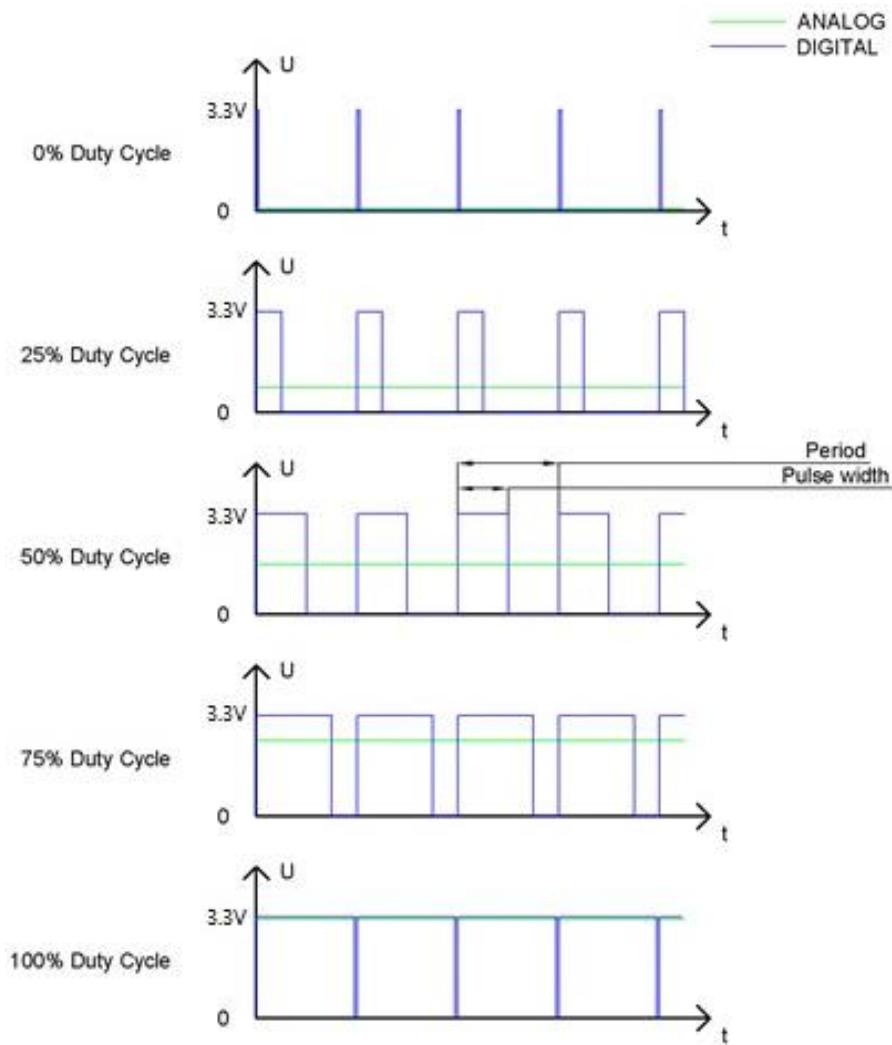

The longer the PWM duty cycle is, the higher the output power will be. Now that we understand this relationship, we can use PWM to control the brightness of an LED or the speed of DC motor and so on. It is evident from the above that PWM is not real analog, and the effective value of the voltage is equivalent to the corresponding analog. So, we can control the output power of the LED and other output modules to achieve different effects.


### Raspberry Pi Pico and PWM

Raspberry Pi Pico has 16 PWM channels, each of which can control frequency and duty cycle independently. Every pin on Raspberry Pi Pico can be configured as PWM output. In Arduino, PWM frequency is set to 500Hz. You can change the PWM output by changing duty cycle.


## Circuit

This circuit is the same as the one in project Blink.

Schematic diagram

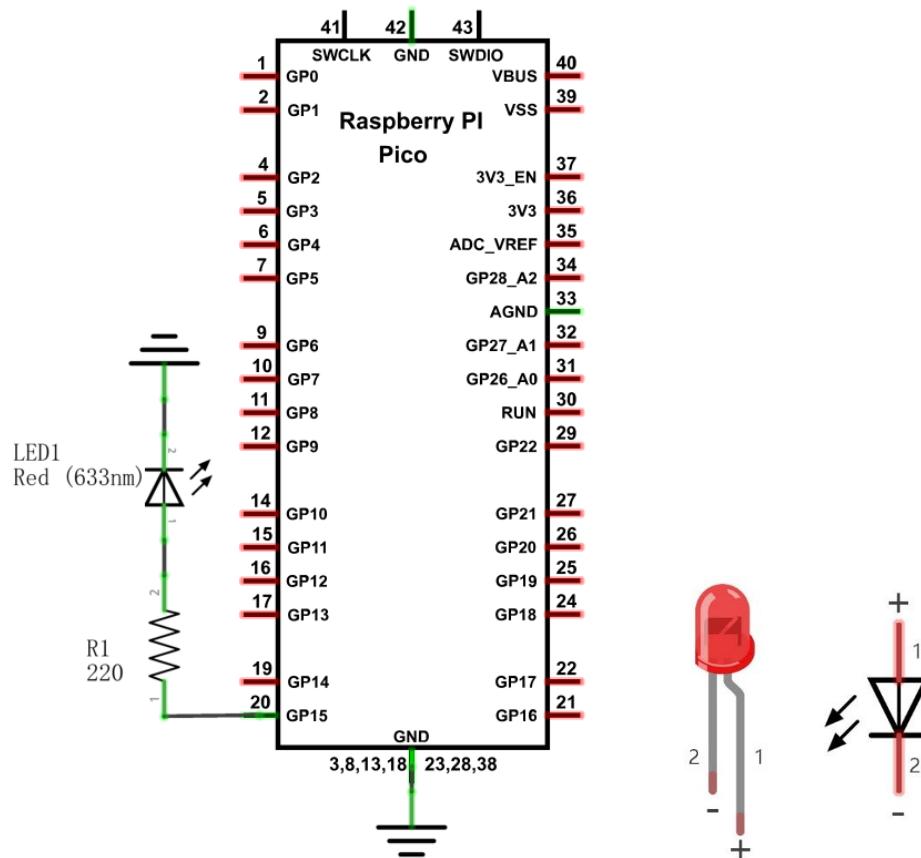

Hardware connection. If you need any support, please feel free to contact us via: [support@freenove.com](mailto:support@freenove.com)

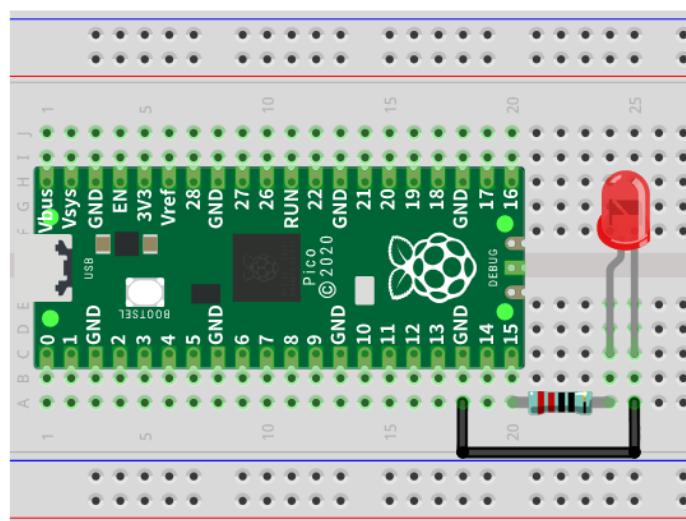

Note: To help users have a better experience when doing the projects, we have made some modifications to Pico's simulation diagram. Please note that there are certain differences between the simulation diagram and the actual board to avoid misunderstanding.



## Sketch

This project is designed to make PWM output GP15 with pulse width increasing from 0% to 100%, and then reducing from 100% to 0% gradually.

### Sketch\_04.1\_BreathingLight

The screenshot shows the Arduino IDE interface with the following details:

- Title Bar:** Sketch\_04.1\_BreathingLight | Arduino 1.8.16
- Menu Bar:** File Edit Sketch Tools Help
- Toolbar:** Includes icons for Save, Run, Stop, Upload, and Download.
- Code Editor:** Displays the following C++ code:

```
#define PIN_LED 15 //define the led pin
void setup() {
    pinMode(PIN_LED, OUTPUT);
}
void loop() {
    for (int i = 0; i < 255; i++) { //make light fade in
        analogWrite(PIN_LED, i);
        delay(5);
    }
    for (int i = 255; i > -1; i--) { //make light fade out
        analogWrite(PIN_LED, i);
        delay(5);
    }
}
```
- Status Bar:** Done Saving.
- Bottom Status Bar:** 10 Raspberry Pi Pico on COM10

Download the code to Pico, and you'll see that LED is turned from on to off and then from off to on gradually like breathing.



The following is the program code:

```
1 #define PIN_LED 15 //define the led pin
2
3 void setup() {
4     pinMode(PIN_LED, OUTPUT);
5 }
6
7 void loop() {
8     for (int i = 0; i < 255; i++) { //make light fade in
9         analogWrite(PIN_LED, i);
10        delay(5);
11    }
12    for (int i = 255; i > -1; i--) { //make light fade out
13        analogWrite(PIN_LED, i);
14        delay(5);
15    }
16 }
```

Set the pin controlling LED to output mode.

```
7 pinMode(PIN_LED, OUTPUT);
```

In the loop(), there are two “for” loops. The first makes the LED Pin output PWM from 0% to 100% and the second makes the LED Pin output PWM from 100% to 0%. This allows the LED to gradually light and extinguish.

```
11 for (int i = 0; i < 255; i++) { //make light fade in
12     analogWrite(PIN_LED, i);
13     delay(5);
14 }
15 for (int i = 255; i > -1; i--) { //make light fade out
16     analogWrite(PIN_LED, i);
17     delay(5);
18 }
```

You can also adjust the rate of the state change of LED by changing the parameters of the delay() function in the “for” loop.

analogWrite(pin, value)

Arduino IDE provides the function, analogWrite(pin, value), which can make ports directly output PWM waves. Every pin on Pico board can be configured to output PWM. In the function called analogWrite(pin, value), the parameter "pin" specifies the port used to output PWM wave. The range of value is 0-255, which represents the duty cycle of 0%-100%.


In order to use this function, we need to set the port to output mode.



## Project 4.2 Meteor Flowing Light


After learning about PWM, we can use it to control LED bar graph and realize a cooler flowing light. The component list, circuit, and hardware are exactly consistent with the project [Flowing Light](#).

### Component List

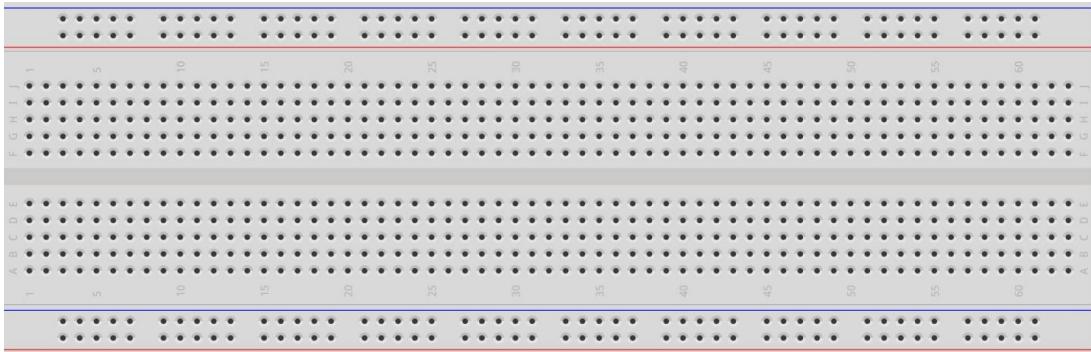
Raspberry Pi Pico x1		USB cable x1
Breadboard x1		
Jumper		LED bar graph x1
		Resistor 220Ω x10

## Circuit

Schematic diagram

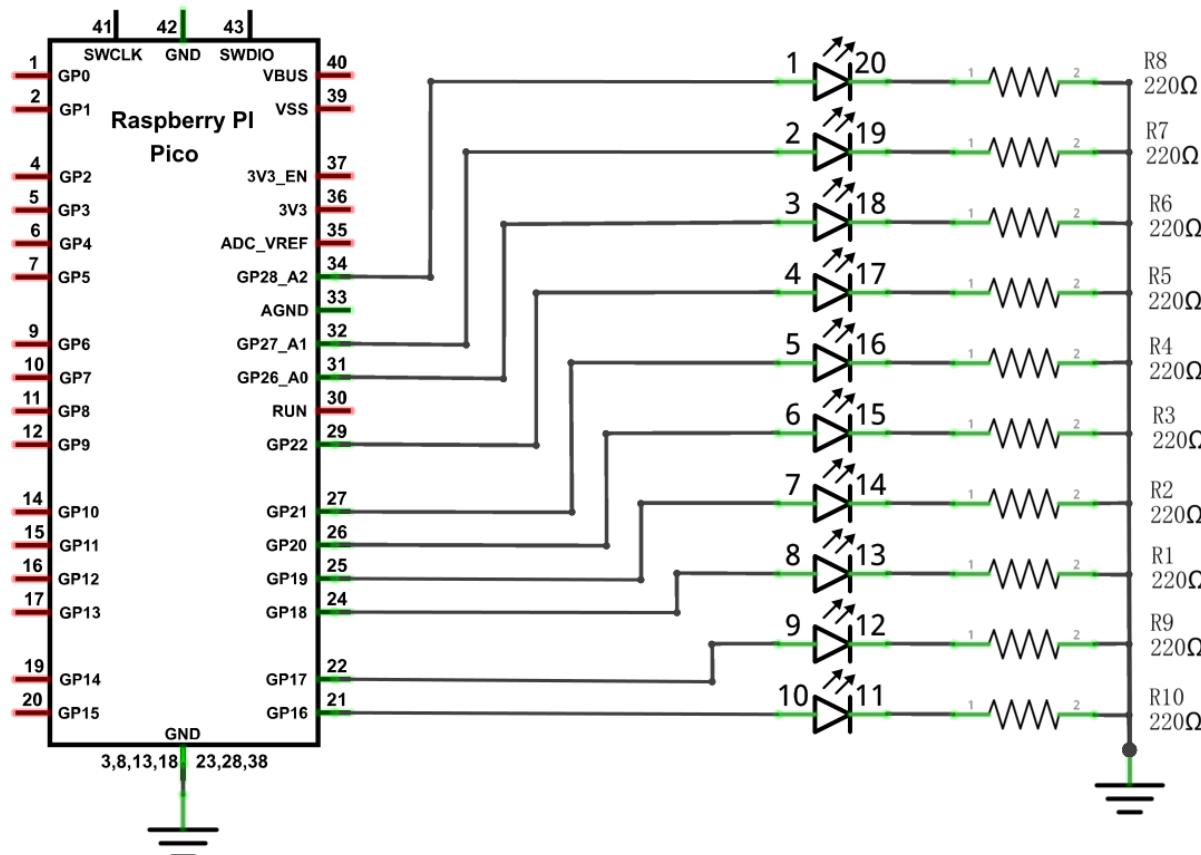

Hardware connection. If you need any support, please feel free to contact us via: [support@freenove.com](mailto:support@freenove.com)

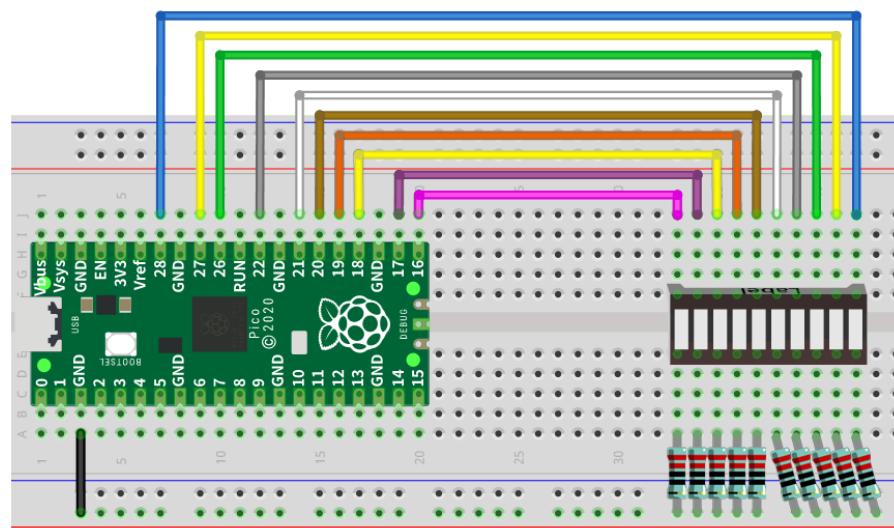

Note: To help users have a better experience when doing the projects, we have made some modifications to Pico's simulation diagram. Please note that there are certain differences between the simulation diagram and the actual board to avoid misunderstanding.

If LEDbar doesn't work, try to rotate LEDbar for 180°. The label is random.

# Sketch

Meteor flowing light will be implemented with PWM.

Sketch\_04.2\_FlowingLight2

Sketch\_04.2\_FlowingLight2 | Arduino 1.8.16

File Edit Sketch Tools Help

Sketch\_04.2\_FlowingLight2

```
9 const int dutys[] = {0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0,
10           4095, 2047, 1023, 512, 256, 128, 64, 32, 16, 8,
11           0, 0, 0, 0, 0, 0, 0, 0, 0, 0}; //define the pwm dutys
12
13 int ledCounts; //the number of leds
14 int delayTimes = 50; //flowing speed ,the smaller, the faster
15 void setup() {
16   ledCounts = sizeof(ledPins); //get the led counts
17   for (int i = 0; i < ledCounts; i++) { //setup the pwm channels
18     pinMode(ledPins[i], OUTPUT);
19   }
20 }
21
22 void loop() {
23   for (int i = 0; i < 20; i++) { //flowing one side to other side
24     for (int j = 0; j < ledCounts; j++) {
25       analogWrite(ledPins[j], map(dutys[i+j], 0, 4095, 0, 255));
26     }
27     delay(delayTimes);
28   }
29   for (int i = 0; i < 20; i++) { //flowing one side to other side
30     for (int j = 0; j < ledCounts; j++) {
31       analogWrite(ledPins[ledCounts - j - 1], map(dutys[i+j], 0, 4095, 0, 255));
32     }
}
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217
218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254
255
256
257
258
259
260
261
262
263
264
265
266
267
268
269
270
271
272
273
274
275
276
277
278
279
280
281
282
283
284
285
286
287
288
289
290
291
292
293
294
295
296
297
298
299
300
301
302
303
304
305
306
307
308
309
310
311
312
313
314
315
316
317
318
319
320
321
322
323
324
325
326
327
328
329
330
331
332
333
334
335
336
337
338
339
340
341
342
343
344
345
346
347
348
349
350
351
352
353
354
355
356
357
358
359
360
361
362
363
364
365
366
367
368
369
370
371
372
373
374
375
376
377
378
379
380
381
382
383
384
385
386
387
388
389
389
390
391
392
393
394
395
396
397
398
399
400
401
402
403
404
405
406
407
408
409
410
411
412
413
414
415
416
417
418
419
420
421
422
423
424
425
426
427
428
429
429
430
431
432
433
434
435
436
437
438
439
439
440
441
442
443
444
445
446
447
448
449
449
450
451
452
453
454
455
456
457
458
459
459
460
461
462
463
464
465
466
467
468
469
469
470
471
472
473
474
475
476
477
478
479
479
480
481
482
483
484
485
486
487
488
489
489
490
491
492
493
494
495
496
497
498
499
499
500
501
502
503
504
505
506
507
508
509
509
510
511
512
513
514
515
516
517
517
518
519
519
520
521
522
523
524
525
526
527
527
528
529
529
530
531
532
533
534
535
536
536
537
538
538
539
539
540
541
542
543
544
545
545
546
547
547
548
548
549
549
550
551
552
553
554
555
555
556
557
557
558
558
559
559
560
561
562
563
564
564
565
566
566
567
567
568
568
569
569
570
571
572
573
574
575
575
576
577
577
578
578
579
579
580
581
582
583
584
584
585
586
586
587
587
588
588
589
589
590
591
592
593
594
594
595
596
596
597
597
598
598
599
599
600
601
602
603
603
604
605
605
606
606
607
607
608
608
609
609
610
611
612
613
613
614
615
615
616
616
617
617
618
618
619
619
620
621
622
623
623
624
625
625
626
626
627
627
628
628
629
629
630
631
632
633
633
634
635
635
636
636
637
637
638
638
639
639
640
641
642
643
643
644
645
645
646
646
647
647
648
648
649
649
650
651
652
653
653
654
655
655
656
656
657
657
658
658
659
659
660
661
662
663
663
664
665
665
666
666
667
667
668
668
669
669
670
671
672
673
673
674
675
675
676
676
677
677
678
678
679
679
680
681
682
683
683
684
685
685
686
686
687
687
688
688
689
689
690
691
692
693
693
694
694
695
695
696
696
697
697
698
698
699
699
700
701
702
703
703
704
705
705
706
706
707
707
708
708
709
709
710
711
712
713
713
714
715
715
716
716
717
717
718
718
719
719
720
721
722
723
723
724
725
725
726
726
727
727
728
728
729
729
730
731
732
733
733
734
735
735
736
736
737
737
738
738
739
739
740
741
742
743
743
744
745
745
746
746
747
747
748
748
749
749
750
751
752
753
753
754
755
755
756
756
757
757
758
758
759
759
760
761
762
763
763
764
765
765
766
766
767
767
768
768
769
769
770
771
772
773
773
774
775
775
776
776
777
777
778
778
779
779
780
781
782
783
783
784
785
785
786
786
787
787
788
788
789
789
790
791
792
793
793
794
794
795
795
796
796
797
797
798
798
799
799
800
801
802
803
803
804
805
805
806
806
807
807
808
808
809
809
810
811
812
813
813
814
815
815
816
816
817
817
818
818
819
819
820
821
822
823
823
824
825
825
826
826
827
827
828
828
829
829
830
831
832
833
833
834
835
835
836
836
837
837
838
838
839
839
840
841
842
843
843
844
845
845
846
846
847
847
848
848
849
849
850
851
852
853
853
854
855
855
856
856
857
857
858
858
859
859
860
861
862
863
863
864
865
865
866
866
867
867
868
868
869
869
870
871
872
873
873
874
875
875
876
876
877
877
878
878
879
879
880
881
882
883
883
884
885
885
886
886
887
887
888
888
889
889
890
891
892
893
893
894
894
895
895
896
896
897
897
898
898
899
899
900
901
902
903
903
904
905
905
906
906
907
907
908
908
909
909
910
911
912
913
913
914
915
915
916
916
917
917
918
918
919
919
920
921
922
923
923
924
925
925
926
926
927
927
928
928
929
929
930
931
932
933
933
934
935
935
936
936
937
937
938
938
939
939
940
941
942
943
943
944
945
945
946
946
947
947
948
948
949
949
950
951
952
953
953
954
955
955
956
956
957
957
958
958
959
959
960
961
962
963
963
964
965
965
966
966
967
967
968
968
969
969
970
971
972
973
973
974
975
975
976
976
977
977
978
978
979
979
980
981
982
983
983
984
985
985
986
986
987
987
988
988
989
989
990
991
992
993
993
994
994
995
995
996
996
997
997
998
998
999
999
1000
1001
1002
1003
1003
1004
1005
1005
1006
1006
1007
1007
1008
1008
1009
1009
1010
1011
1012
1013
1013
1014
1015
1015
1016
1016
1017
1017
1018
1018
1019
1019
1020
1021
1022
1023
1023
1024
1025
1025
1026
1026
1027
1027
1028
1028
1029
1029
1030
1031
1032
1033
1033
1034
1035
1035
1036
1036
1037
1037
1038
1038
1039
1039
1040
1041
1042
1043
1043
1044
1045
1045
1046
1046
1047
1047
1048
1048
1049
1049
1050
1051
1052
1053
1053
1054
1055
1055
1056
1056
1057
1057
1058
1058
1059
1059
1060
1061
1062
1063
1063
1064
1065
1065
1066
1066
1067
1067
1068
1068
1069
1069
1070
1071
1072
1073
1073
1074
1075
1075
1076
1076
1077
1077
1078
1078
1079
1079
1080
1081
1082
1083
1083
1084
1085
1085
1086
1086
1087
1087
1088
1088
1089
1089
1090
1091
1092
1093
1093
1094
1095
1095
1096
1096
1097
1097
1098
1098
1099
1099
1100
1101
1102
1103
1103
1104
1105
1105
1106
1106
1107
1107
1108
1108
1109
1109
1110
1111
1112
1113
1113
1114
1115
1115
1116
1116
1117
1117
1118
1118
1119
1119
1120
1121
1122
1123
1123
1124
1125
1125
1126
1126
1127
1127
1128
1128
1129
1129
1130
1131
1132
1133
1133
1134
1135
1135
1136
1136
1137
1137
1138
1138
1139
1139
1140
1141
1142
1143
1143
1144
1145
1145
1146
1146
1147
1147
1148
1148
1149
1149
1150
1151
1152
1153
1153
1154
1155
1155
1156
1156
1157
1157
1158
1158
1159
1159
1160
1161
1162
1163
1163
1164
1165
1165
1166
1166
1167
1167
1168
1168
1169
1169
1170
1171
1172
1173
1173
1174
1175
1175
1176
1176
1177
1177
1178
1178
1179
1179
1180
1181
1182
1183
1183
1184
1185
1185
1186
1186
1187
1187
1188
1188
1189
1189
1190
1191
1192
1193
1193
1194
1195
1195
1196
1196
1197
1197
1198
1198
1199
1199
1200
1201
1202
1203
1203
1204
1205
1205
1206
1206
1207
1207
1208
1208
1209
1209
1210
1211
1212
1213
1213
1214
1215
1215
1216
1216
1217
1217
1218
1218
1219
1219
1220
1221
1222
1223
1223
1224
1225
1225
1226
1226
1227
1227
1228
1228
1229
1229
1230
1231
1232
1233
1233
1234
1235
1235
1236
1236
1237
1237
1238
1238
1239
1239
1240
1241
1242
1243
1243
1244
1245
1245
1246
1246
1247
1247
1248
1248
1249
1249
1250
1251
1252
1253
1253
1254
1255
1255
1256
1256
1257
1257
1258
1258
1259
1259
1260
1261
1262
1263
1263
1264
1265
1265
1266
1266
1267
1267
1268
1268
1269
1269
1270
1271
1272
1273
1273
1274
1275
1275
1276
1276
1277
1277
1278
1278
1279
1279
1280
1281
1282
1283
1283
1284
1285
1285
1286
1286
1287
1287
1288
1288
1289
1289
1290
1291
1292
1293
1293
1294
1295
1295
1296
1296
1297
1297
1298
1298
1299
1299
1300
1301
1302
1303
1303
1304
1305
1305
1306
1306
1307
1307
1308
1308
1309
1309
1310
1311
1312
1313
1313
1314
1315
1315
1316
1316
1317
1317
1318
1318
1319
1319
1320
1321
1322
1323
1323
1324
1325
1325
1326
1326
1327
1327
1328
1328
1329
1329
1330
1331
1332
1333
1333
1334
1335
1335
1336
1336
1337
1337
1338
1338
1339
1339
1340
1341
1342
1343
1343
1344
1345
1345
1346
1346
1347
1347
1348
1348
1349
1349
1350
1351
1352
1353
1353
1354
1355
1355
1356
1356
1357
1357
1358
1358
1359
1359
1360
1361
1362
1363
1363
1364
1365
1365
1366
1366
1367
1367
1368
1368
1369
1369
1370
1371
1372
1373
1373
1374
1375
1375
1376
1376
1377
1377
1378
1378
1379
1379
1380
1381
1382
1383
1383
1384
1385
1385
1386
1386
1387
1387
1388
1388
1389
1389
1390
1391
1392
1393
1393
1394
1395
1395
1396
1396
1397
1397
1398
1398
1399
1399
1400
1401
1402
1403
1403
1404
1405
1405
1406
1406
1407
1407
1408
1408
1409
1409
1410
1411
1412
1413
1413
1414
1415
1415
1416
1416
1417
1417
1418
1418
1419
1419
1420
1421
1422
1423
1423
1424
1425
1425
1426
1426
1427
1427
1428
1428
1429
1429
1430
1431
1432
1433
1433
1434
1435
1435
1436
1436
1437
1437
1438
1438
1439
1439
1440
1441
1442
1443
1443
1444
1445
1445
1446
1446
1447
1447
1448
1448
1449
1449
1450
1451
1452
1453
1453
1454
1455
1455
1456
1456
1457
1457
1458
1458
1459
1459
1460
1461
1462
1463
1463
1464
1465
1465
1466
1466
1467
1467
1468
1468
1469
1469
1470
1471
1472
1473
1473
1474
1475
1475
1476
1476
1477
1477
1478
1478
1479
1479
1480
1481
1482
1483
1483
1484
1485
1485
1486
1486
1487
1487
1488
1488
1489
1489
1490
1491
1492
1493
1493
1494
1495
1495
1496
1496
1497
1497
1498
1498
1499
1499
1500
1501
1502
1503
1503
1504
1505
1505
1506
1506
1507
1507
1508
1508
1509
1509
1510
1511
1512
1513
1513
1514
1515
1515
1516
1516
1517
1517
1518
1518
1519
1519
1520
1521
1522
1523
1523
1524
1525
1525
1526
1526
1527
1527
1528
1528
1529
1529
1530
1531
1532
1533
1533
1534
1535
1535
1536
1536
1537
1537
1538
1538
1539
1539
1540
1541
1542
1543
1543
1544
1545
1545
1546
1546
1547
1547
1548
1548
1549
1549
1550
1551
1552
1553
1553
1554
1555
1555
1556
1556
1557
1557
1558
1558
1559
1559
1560
1561
1562
1563
1563
1564
1565
1565
1566
1566
1567
1567
1568
1568
1569
1569
1570
1571
1572
1573
1573
1574
1575
1575
1576
1576
1577
1577
1578
1578
1579
1579
1580
1581
1582
1583
1583
1584
1585
1585
1586
1586
1587
1587
1588
1588
1589
1589
1590
1591
1592
1593
1593
1594
1595
1595
1596
1596
1597
1597
1598
1598
1599
1599
1600
1601
1602
1603
1603
1604
1605
1605
1606
1606
1607
1607
1608
1608
1609
1609
1610
1611
1612
1613
1613
1614
1615
1615
1616
1616
1617
1617
1618
1618
1619
1619
1620
1621
1622
1623
1623
1624
1625
1625
1626
1626
1627
1627
1628
1628
1629
1629
1630
1631
1632
1633
1633
1634
1635
1635
1636
1636
1637
1637
1638
1638
1639
1639
1640
1641
1642
1643
1643
1644
1645
1645
1646
1646
1647
1647
1648
1648
1649
1649
1650
1651
1652
1653
1653
1654
1655
1655
1656
1656
1657
1657
1658
1658
1659
1659
1660
1661
1662
1663
1663
1664
1665
1665
1666
1666
1667
1667
1668
1668
1669
1669
1670
1671
1672
1673
1673
1674
1675
1675
1676
1676
1677
1677
1678
1678
1679
1679
1680
1681
1682
1683
1683
1684
1685
1685
1686
1686
1687
1687
1688
1688
1689
1689
1690
1691
1692
1693
1693
1694
1695
1695
1696
1696
1697
1697
1698
1698
1699
1699
1700
1701
1702
1703
1703
1704
1705
1705
1706
1706
1707
1707
1708
1708
1709
1709
1710
1711
1712
1713
1713
1714
1715
1715
1716
1716
1717
1717
1718
1718
1719
1719
1720
1721
1722
1723
1723
1724
1725
1725
1726
1726
1727
1727
1728
1728
1729
1729
1730
1731
1732
1733
1733
1734
1735
1735
1736
1736
1737
1737
1738
1738
1739
1739
1740
1741
1742
1743
1743
1744
1745
1745
1746
1746
1747
1747
1748
1748
1749
1749
1750
1751
1752
1753
1753
1754
1755
1755
1756
1756
1757
1757
1758
1758
1759
1759
1760
1761
1762
1763
1763
1764
1765
1765
1766
1766
1767
1767
1768
1768
1769
1769
1770
1771
1772
1773
1773
1774
1775
1775
1776
1776
1777
1777
1778
1778
1779
1779
1780
1781
1782
1783
1783
1784
1785
1785
1786
1786
1787
1787
1788
1788
1789
1789
1790
1791
1792
1793
1793
1794
1795
1795
1796
1796
1797
1797
1798
1798
1799
1799
1800
1801
1802
1803
1803
1804
1805
1805
1806
1806
1807
1807
1808
1808
1809
1809
1810
1811
1812
1813
1813
1814
1815
1815
1816
1816
1817
1817
1818
1818
1819
1819
1820
1821
1822
1823
1823
1824
1825
1825
1826
1826
1827
1827
1828
1828
1829
1829
1830
1831
1832
1833
1833
1834
1835
1835
1836
1836
1837
1837
1838
1838
1839
1839
1840
1841
1842
1843
1843
1844
1845
1845
1846
1846
1847
1847
1848
1848
1849
1849
1850
1851
1852
1853
1853
1854
1855
1855
1856
1856
1857
1857
1858
1858
1859
1859
1860
1861
1862
1863
18
```

Download the code to Pico, and LED bar graph will gradually light up and out from left to right, then back from right to left.

The following is the program code:

```
1 const byte ledPins[] = {16, 17, 18, 19, 20, 21, 22, 26, 27, 28};      //define led pins
2
3 const int dutys[] = {0,      0,      0,      0,      0,      0,      0,      0,      0,
4                      4095,   2047,   1023,   512,    256,    128,    64,     32,     16,     8,
5                      0,      0,      0,      0,      0,      0,      0,      0,      0};//define the pwm dutys
6
7 int ledCounts;           //the number of leds
8 int delayTimes = 50;    //flowing speed , the smaller, the faster
9 void setup() {
```

```

10 ledCounts = sizeof(ledPins);           //get the led counts
11 for (int i = 0; i < ledCounts; i++) { //setup the pwm channels
12     pinMode(ledPins[i], OUTPUT);
13 }
14 }
15
16 void loop() {
17     for (int i = 0; i < 20; i++) {      //flowing one side to other side
18         for (int j = 0; j < ledCounts; j++) {
19             analogWrite(ledPins[j], map(dutys[i+j], 0, 4095, 0, 255));
20         }
21         delay(delayTimes);
22     }
23     for (int i = 0; i < 20; i++) {      //flowing one side to other side
24         for (int j = 0; j < ledCounts; j++) {
25             analogWrite(ledPins[ledCounts - j - 1], map(dutys[i+j], 0, 4095, 0, 255));
26         }
27         delay(delayTimes);
28     }
29 }
```

First we defined 10 GPIO, 10 PWM channels, and 30 pulse width values.

```

1 const byte ledPins[] = {16, 17, 18, 19, 20, 21, 22, 26, 27, 28};      //define led pins
2
3 const int dutys[] = {0, 0, 0, 0, 0, 0, 0, 0, 0, 0,
4                     4095, 2047, 1023, 512, 256, 128, 64, 32, 16, 8,
5                     0, 0, 0, 0, 0, 0, 0, 0, 0};//define the pwm dutys
```

Define a variable to store the number of LEDs and another to control the flashing speed of the LED bar.

```

7 int ledCounts;          //the number of leds
8 int delayTimes = 50;   //flowing speed , the smaller, the faster
```

Sizeof() function is used to obtain the number of members of the array ledPins and assign it to ledCount.  
Use the for loop to set all pins to output mode.

```

10 ledCounts = sizeof(ledPins);           //get the led counts
11 for (int i = 0; i < ledCounts; i++) { //setup the pwm channels
12     pinMode(ledPins[i], OUTPUT);
13 }
```



In loop(), a nested for loop is used to control the pulse width of the PWM, and LED bar graph moves one grid after each 1 is added in the first for loop, gradually changing according to the values in the array duties. As shown in the table below, the value of the second row is the value in the array duties, and the 10 green squares in each row below represent the 10 LEDs on the LED bar graph. Every 1 is added to  $I$ , the value of the LED bar graph will move to the right by one grid, and when it reaches the end, it will move from the end to the starting point, achieving the desired effect.

0	1	2	3	4	5	7	8	9	1	11	1	1	1	1	1	1	1	2	2	2	2	2	2	3
d	0	0	0	0	0	0	0	0	0	10	5	2	1	6	3	1	8	4	2	0	0	0	0	0
i										23	1	5	2	4	2	6								
0																								
1																								
2																								
3																								
...																								
1																								
8																								
1																								
9																								
2																								
0																								

In the code, two nested for loops are used to achieve this effect.

```

17   for (int i = 0; i < 20; i++) {           //flowing one side to other side
18     for (int j = 0; j < ledCounts; j++) {
19       analogWrite(ledPins[j], map(dutys[i+j], 0, 4095, 0, 255));
20     }
21     delay(delayTimes);
22   }
23   for (int i = 0; i < 20; i++) {           //flowing one side to other side
24     for (int j = 0; j < ledCounts; j++) {
25       analogWrite(ledPins[ledCounts - j - 1], map(dutys[i+j], 0, 4095, 0, 255));
26     }
27     delay(delayTimes);
28   }

```

map(value, fromLow, fromHigh, toLow, toHigh)

This function is used to remap a value, which will return a new value whose percentage in the range of toLow-toHigh is equal to the percentage of "value" in the range of fromLow-fromHigh. For example, 1 is the maximum in the range of 0-1 and the maximum value in the scope of 0-2 is 2, that is, the result value of map (1, 0, 1, 0, 2) is 2.



# Chapter 5 RGBLED

In this chapter, we will learn how to control an RGBLED. It can emit different colors of light. Next, we will use RGBLED to make a multicolored light.

## Project 5.1 Random Color Light


In this project, we will make a multicolored LED. And we can control RGBLED to switch different colors automatically.

### Component List

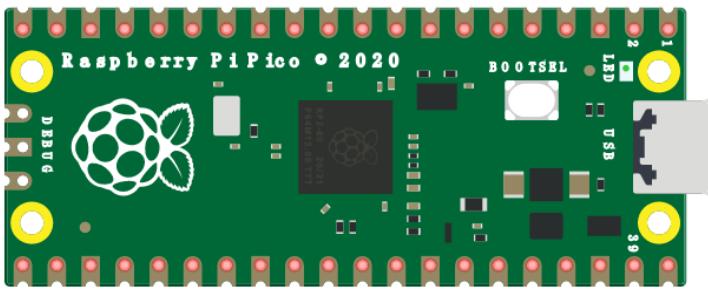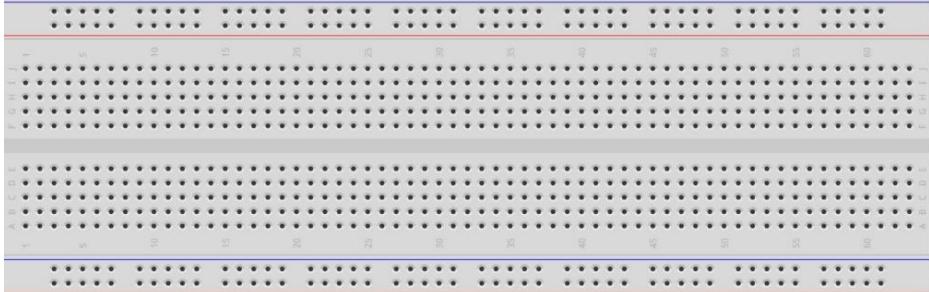
Raspberry Pi Pico x1	USB cable x1	
Breadboard x1		
RGBLED x1	Resistor 220Ω x3	Jumper
		

## Related Knowledge

RGB LED has integrated 3 LEDs that can respectively emit red, green and blue light. And it has 4 pins. The long pin (1) is the common port, that is, 3 LED's positive or negative port. The RGB LED with common positive port and its symbol is shown below. We can make RGB LED emit various colors of light by controlling these 3 LEDs to emit light with different brightness.

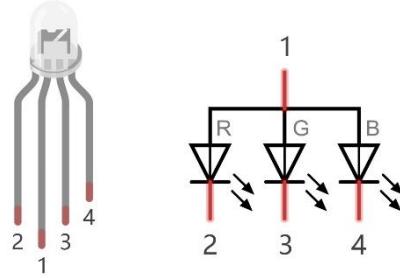


Red, green, and blue light are known as three primary colors. When you combine these three primary-color lights with different brightness, it can produce almost all kinds of visible lights. Computer screens, single pixel of cell phone screen, neon, and etc. are working under this principle.

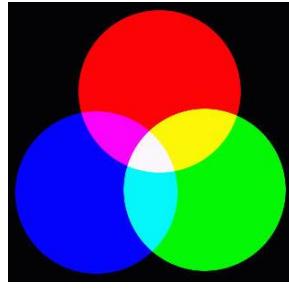


If we use three 8-bit PWMs to control the RGB LED, in theory, we can create  $2^8 \times 2^8 \times 2^8 = 16777216$  (16 million) colors through different combinations.

## Circuit

Schematic diagram

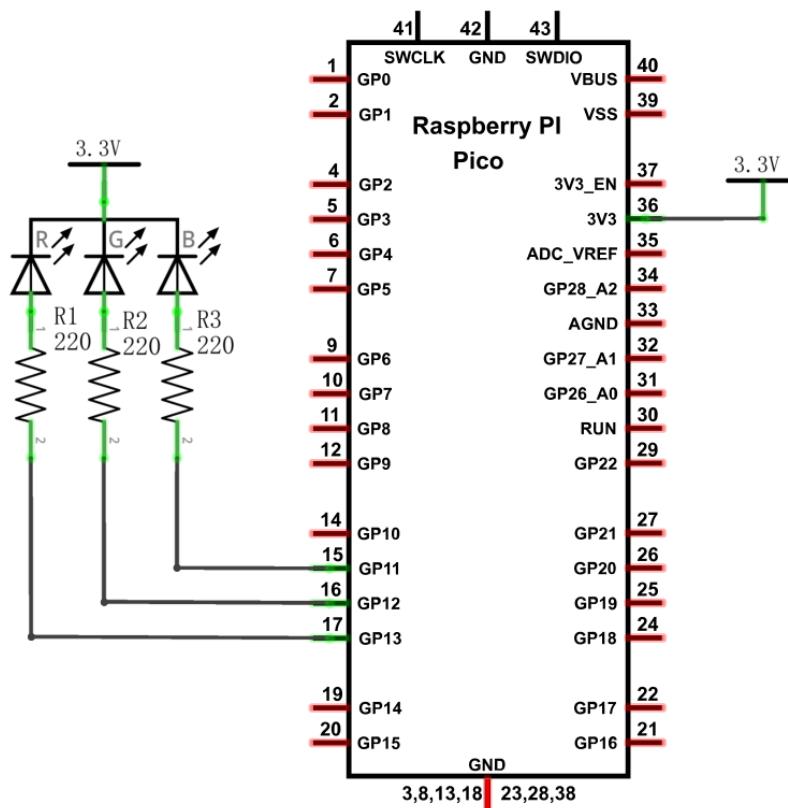

Hardware connection. If you need any support, please feel free to contact us via: [support@freenove.com](mailto:support@freenove.com)

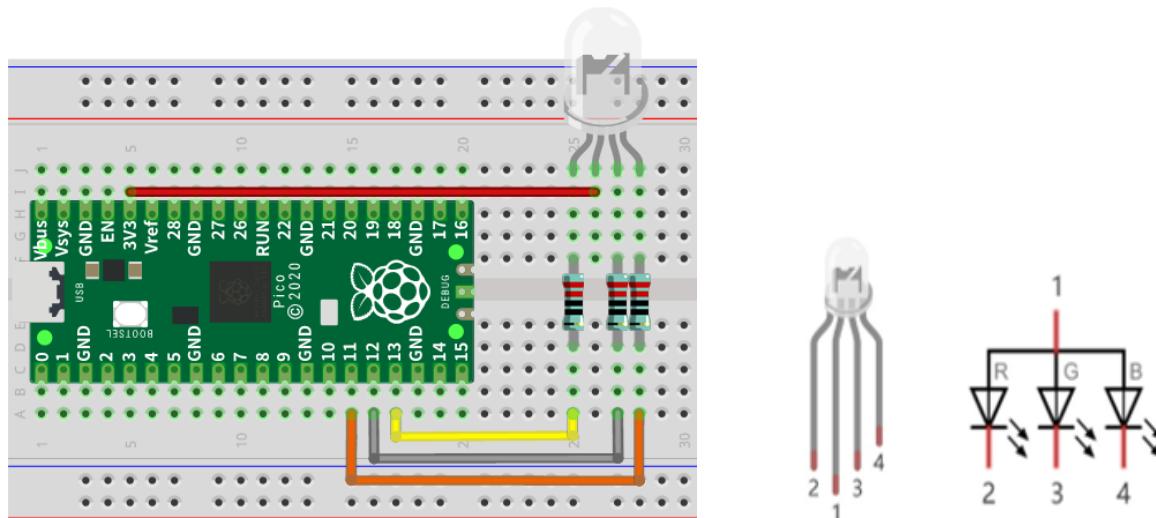



## Sketch

We need to create three PWM channels and use random duty cycle to make random RGB LED color.


### Sketch\_05.1\_ColorfulLight

```

Sketch_05.1_RandomColorLight | Arduino 1.8.16
File Edit Sketch Tools Help
Sketch_05.1_RandomColorLight
7 int ledPins[] = {13, 12, 11};      //define red, green, blue led pins
8 int red, green, blue;
9 void setup() {
10 for (int i = 0; i < 3; i++) {    //setup the pwm channels,1KHz,8bit
11   pinMode(ledPins[i], OUTPUT);
12 }
13 }
14
15 void loop() {
16   red = random(0, 255)/10;
17   green = random(0, 255)/10;
18   blue = random(0, 255)/10;
19   setColor(red, green, blue);
20   delay(200);
21 }
22
23 void setColor(byte r, byte g, byte b) {
24   analogWrite(ledPins[0], 255-r); //Common anode LED, low level to turn on the led.
25   analogWrite(ledPins[1], 255-g);
26   analogWrite(ledPins[2], 255-b);
27 }

```

With the code downloaded to Pico, RGB LED begins to display random colors.

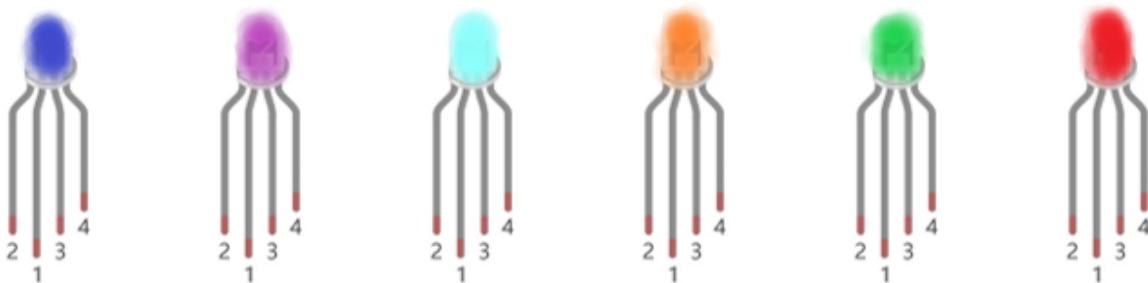

The following is the program code:

1	int ledPins[] = {13, 12, 11};      //define red, green, blue led pins
2	int red, green, blue;
3	void setup() {
4	for (int i = 0; i < 3; i++) {    //setup the pwm channels,1KHz,8bit
5	pinMode(ledPins[i], OUTPUT);
6	}
7	}
8	

```

9 void loop() {
10    red = random(0, 255);
11    green = random(0, 255);
12    blue = random(0, 255);
13    setColor(red, green, blue);
14    delay(200);
15 }
16
17 void setColor(byte r, byte g, byte b) {
18    analogWrite(ledPins[0], 255-r); //Common anode LED, low level to turn on the led.
19    analogWrite(ledPins[1], 255-g);
20    analogWrite(ledPins[2], 255-b);
21 }
```

Define pins to control RGB LED, and configure them as output mode.

```

1 int ledPins[] = {13, 12, 11};      //define red, green, blue led pins
2 int red, green, blue;
3 void setup() {
4     for (int i = 0; i < 3; i++) {    //setup the pwm channels, 1KHz, 8bit
5         pinMode(ledPins[i], OUTPUT);
6     }
7 }
```

In setColor(), this function controls the output color of RGB LED by the given color value. Because the circuit uses a common anode, the LED lights up when the GPIO outputs low power. Therefore, in PWM, low level is the active level, so 255 minus the given value is necessary.

```

19 void setColor(byte r, byte g, byte b) {
20     ledcWrite(chns[0], 255 - r); //Common anode LED, low level to turn on the led.
21     ledcWrite(chns[1], 255 - g);
22     ledcWrite(chns[2], 255 - b);
23 }
```

In loop(), get three random Numbers and set them as color values.

```

12 red = random(0, 255);
13 green = random(0, 255);
14 blue = random(0, 255);
15 setColor(red, green, blue);
16 delay(200);
```

The related function of software PWM can be described as follows:

**long random(min, max);**

This function will return a random number(min --- max-1).




## Project 5.2 Gradient Color Light

In the previous project, we have mastered the usage of RGBLED, but the random color display is rather stiff. This project will realize a fashionable Light with soft color changes.

Component list, the circuit is exactly the same as the project random color light.

Using a color model, the color changes from 0 to 255 as shown below.

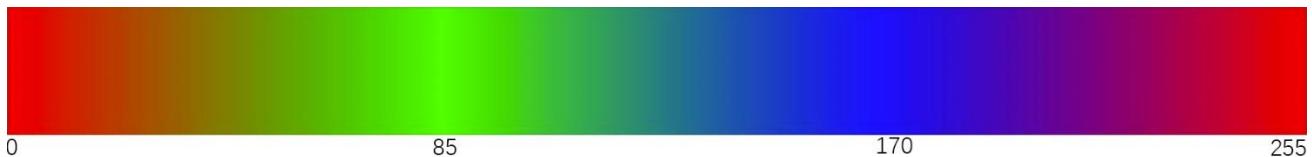

## Sketch

In this code, the color model will be implemented and RGBLED will change colors along the model.

### Sketch\_05.2\_SoftColorfulLight

The following is the program code:

```

1 const byte ledPins[] = {13, 12, 11};      //define led pins
2 void setup() {
3     for (int i = 0; i < 3; i++) {    //setup the pwm channels
4         pinMode(ledPins[i], OUTPUT);
5     }
6 }
7
8 void loop() {
9     for (int i = 0; i < 256; i++) {
10        setColor(wheel(i));
11        delay(100);
12    }
13 }
14
15 void setColor(long rgb) {
16     analogWrite(ledPins[0], 255 - (rgb >> 16) & 0xFF);
17     analogWrite(ledPins[1], 255 - (rgb >> 8) & 0xFF);
18     analogWrite(ledPins[2], 255 - (rgb >> 0) & 0xFF);
19 }
20
21 long wheel(int pos) {
22     long WheelPos = pos % 0xff;
23     if (WheelPos < 85) {
24         return ((255 - WheelPos * 3) << 16) | ((WheelPos * 3) << 8);
25     } else if (WheelPos < 170) {

```

Any concerns? ✉ support@freenove.com

```
26     WheelPos -= 85;  
27     return (((255 - WheelPos * 3) << 8) | (WheelPos * 3));  
28 } else {  
29     WheelPos -= 170;  
30     return ((WheelPos * 3) << 16 | (255 - WheelPos * 3));  
31 }  
32 }
```

In `setColor()`, a variable represents the value of RGB, and a hexadecimal representation of color is a common representation, such as `0xAABBCC`, where AA represents the red value, BB represents the green value, and CC represents the blue value. The use of a variable can make the transmission of parameters more convenient, in the split, only a simple operation can take out the value of each color channel

```
15 void setColor(long rgb) {  
16     ledcWrite(chns[0], 255 - (rgb >> 16) & 0xFF);  
17     ledcWrite(chns[1], 255 - (rgb >> 8) & 0xFF);  
18     ledcWrite(chns[2], 255 - (rgb >> 0) & 0xFF);  
19 }
```

The `wheel()` function is the color selection method for the color model introduced earlier. The **pos** parameter ranges from 0 to 255 and outputs a color value in hexadecimal.

```
21 long wheel(int pos) {  
22     long WheelPos = pos % 0xff;  
23     if (WheelPos < 85) {  
24         return (((255 - WheelPos * 3) << 16) | ((WheelPos * 3) << 8));  
25     } else if (WheelPos < 170) {  
26         WheelPos -= 85;  
27         return (((255 - WheelPos * 3) << 8) | (WheelPos * 3));  
28     } else {  
29         WheelPos -= 170;  
30         return ((WheelPos * 3) << 16 | (255 - WheelPos * 3));  
31     }  
32 }
```





# Chapter 6 Buzzer

In this chapter, we will learn about buzzers and the sounds they make.

## Project 6.1 Doorbell

We will make this kind of doorbell: when the button is pressed, the buzzer sounds; and when the button is released, the buzzer stops sounding.

### Component List

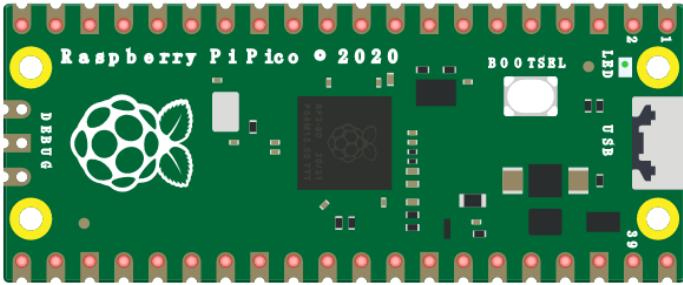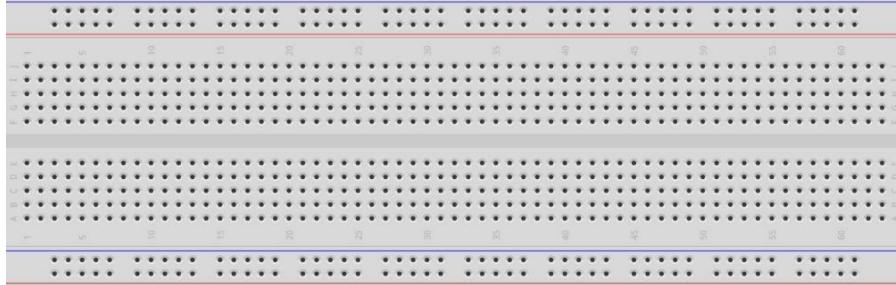Raspberry Pi Pico x1		USB cable x1
Breadboard x1		
Jumper		
NPN transistor x1 (S8050)		Active buzzer x1
		Push button x1
		Resistor 1kΩ x1
		Resistor 10kΩ x2


Any concerns?  support@freenove.com

## Component Knowledge


### Buzzer

Buzzer is a sounding component, which is widely used in electronic devices such as calculator, electronic warning clock and alarm. Buzzer has two types: active and passive. Active buzzer has oscillator inside, which will sound as long as it is supplied with power. Passive buzzer requires external oscillator signal (generally use PWM with different frequency) to make a sound.

Active buzzer

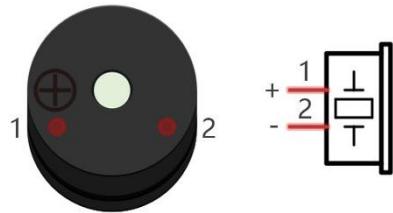

Passive buzzer

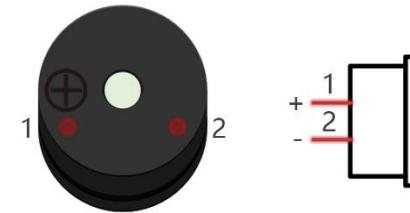

Active buzzer is easy to use. Generally, it can only make a specific frequency of sound. Passive buzzer requires an external circuit to make a sound, but it can be controlled to make a sound with different frequency. The resonant frequency of the passive buzzer is 2kHz, which means the passive buzzer is loudest when its resonant frequency is 2kHz.

Next, we will use an active buzzer to make a doorbell and a passive buzzer to make an alarm.

### How to identify active and passive buzzer?

1. Usually, there is a label on the surface of active buzzer covering the vocal hole, but this is not an absolute judgment method.
2. Active buzzers are more complex than passive buzzers in their manufacture. There are many circuits and crystal oscillator elements inside active buzzers; all of this is usually protected with a waterproof coating (and a housing) exposing only its pins from the underside. On the other hand, passive buzzers do not have protective coatings on their underside. From the pin holes viewing of a passive buzzer, you can see the circuit board, coils, and a permanent magnet (all or any combination of these components depending on the model).

Active buzzer



Passive buzzer



### Transistor


Because the buzzer requires such large current that GP of Raspberry Pi Pico output capability cannot meet the requirement, a transistor of NPN type is needed here to amplify the current.

Transistor, the full name: semiconductor transistor, is a semiconductor device that controls current. Transistor




can be used to amplify weak signal, or works as a switch. It has three electrodes(PINs): base (b), collector (c) and emitter (e). When there is current passing between "be", "ce" will allow several-fold current (transistor magnification) pass, at this point, transistor works in the amplifying area. When current between "be" exceeds a certain value, "ce" will not allow current to increase any longer, at this point, transistor works in the saturation area. Transistor has two types as shown below: PNP and NPN.

PNP transistor

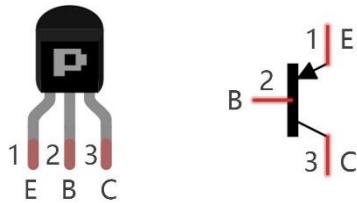

NPN transistor

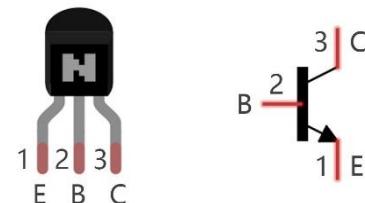


In our kit, the PNP transistor is marked with 8550, and the NPN transistor is marked with 8050.

Based on the transistor's characteristics, it is often used as a switch in digital circuits. As micro-controller's capacity to output current is very weak, we will use transistor to amplify current and drive large-current components.


When using NPN transistor to drive buzzer, we often adopt the following method. If GP outputs high level, current will flow through R1, the transistor will get conducted, and the buzzer will sound. If GP outputs low level, no current flows through R1, the transistor will not be conducted, and buzzer will not sound.

When using PNP transistor to drive buzzer, we often adopt the following method. If GP outputs low level, current will flow through R1, the transistor will get conducted, and the buzzer will sound. If GP outputs high level, no current flows through R1, the transistor will not be conducted, and buzzer will not sound.

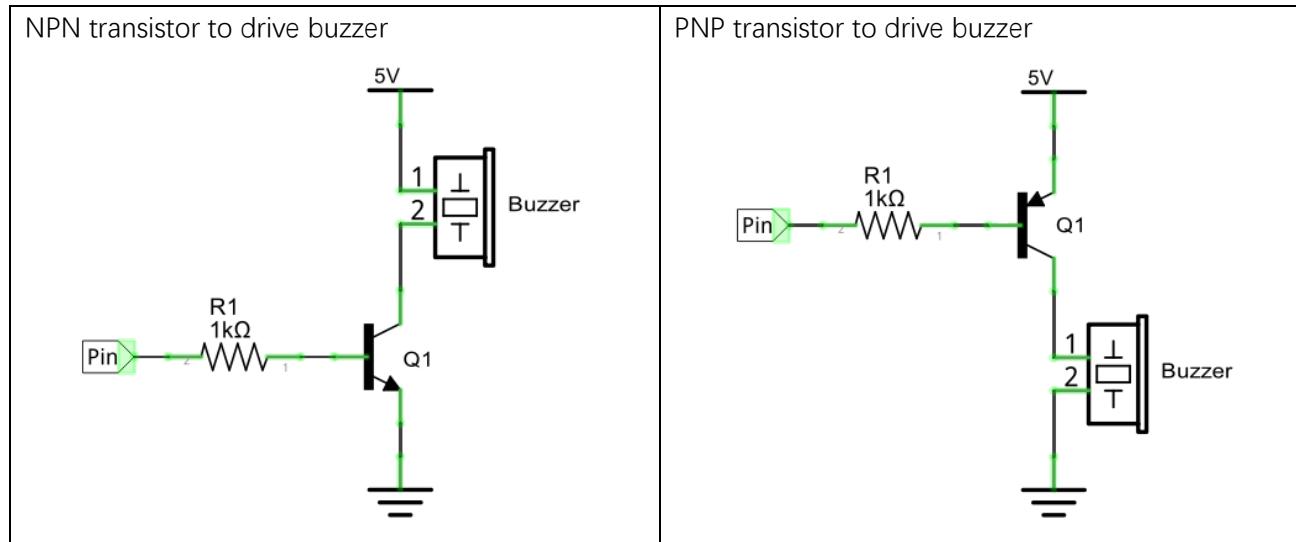


# Circuit

## Schematic diagram

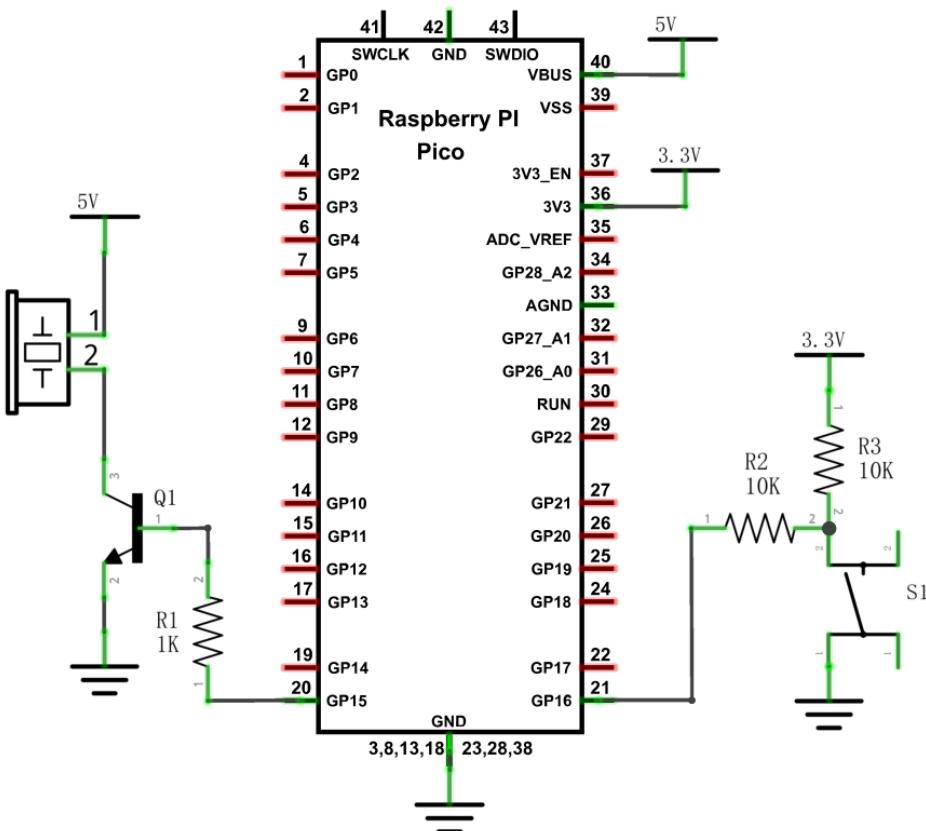

Hardware connection. If you need any support, please feel free to contact us via: [support@freenove.com](mailto:support@freenove.com)

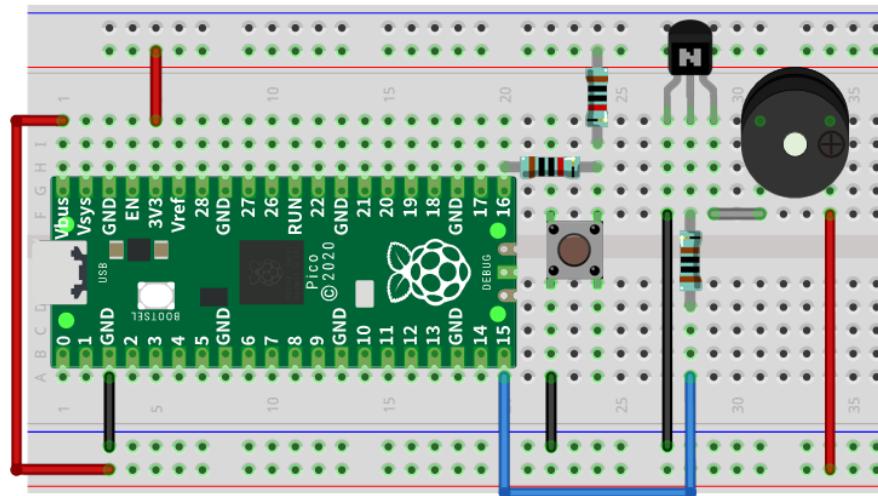

Note:

1. in this circuit, the power supply for buzzer is 5V, and pull-up resistor of the button connected to the power 3.3V. The buzzer can work when connected to power 3.3V, but it will reduce the loudness.
  2. VBUS should be connect to the positive end of USB cable. If it connects to GND, it may burn the computer or Raspberry Pi Pico. Similarly, please be careful when wiring pins 36-40 of Pico to avoid short circuit.

Any concerns?  support@freenove.com



## Sketch

In this project, a buzzer will be controlled by a push button switch. When the button switch is pressed, the buzzer sounds and when the button is released, the buzzer stops. It is analogous to our earlier project that controlled an LED ON and OFF.

### Sketch\_06.1\_Doorbell


The screenshot shows the Arduino IDE interface with the title bar "Sketch\_07.1\_Doorbell | Arduino 1.8.16". The menu bar includes File, Edit, Sketch, Tools, and Help. Below the menu is a toolbar with icons for save, upload, and refresh. The main area displays the sketch code, which defines pins for a buzzer and a button, sets up the pins, and loops to read the button state and control the buzzer. A progress bar at the bottom indicates "Compiling sketch...".

```
#define PIN_BUZZER 15
#define PIN_BUTTON 16

void setup() {
    pinMode(PIN_BUZZER, OUTPUT);
    pinMode(PIN_BUTTON, INPUT);
    digitalWrite(PIN_BUZZER,LOW);
}

void loop() {
    if (digitalRead(PIN_BUTTON) == LOW) {
        digitalWrite(PIN_BUZZER,HIGH);
    }else{
        digitalWrite(PIN_BUZZER,LOW);
    }
}
```

Download the code to Pico, press the push button switch and the buzzer will sound. Release the push button switch and the buzzer will stop.

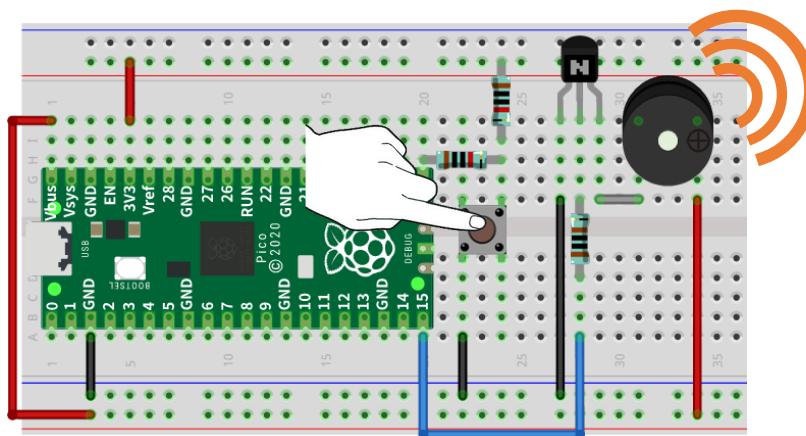

The following is the program code:

```
1 #define PIN_BUZZER 15
2 #define PIN_BUTTON 16
3
4 void setup() {
5     pinMode(PIN_BUZZER, OUTPUT);
6     pinMode(PIN_BUTTON, INPUT);
7     digitalWrite(PIN_BUZZER, LOW);
8 }
9
10 void loop() {
11     if (digitalRead(PIN_BUTTON) == LOW) {
12         digitalWrite(PIN_BUZZER, HIGH);
13     }else{
14         digitalWrite(PIN_BUZZER, LOW);
15     }
16 }
```

The code is logically the same as using button to control LED.





## Project 6.2 Alertor

Next, we will use a passive buzzer to make an alarm.


Component list and the circuit part is similar to last section, only the **active buzzer** needs to be **replaced** with a **passive buzzer** for this project.

### Component List

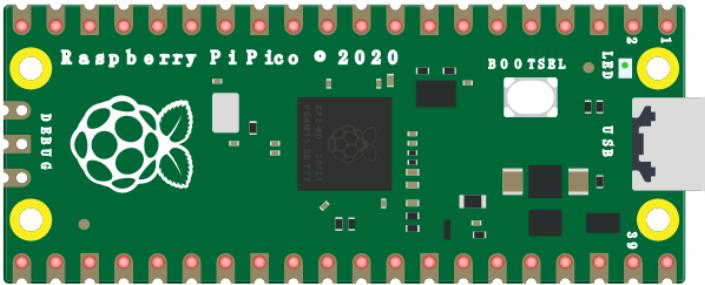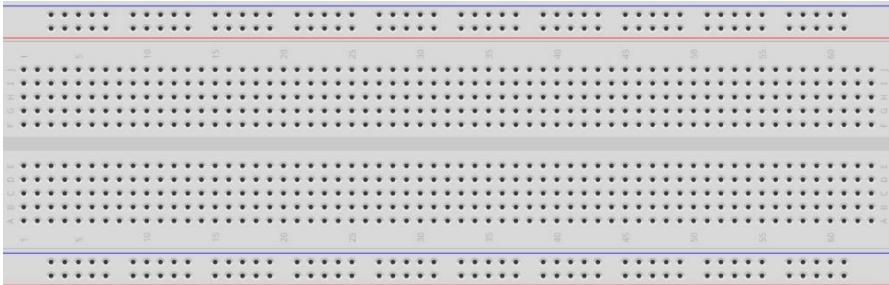
Raspberry Pi Pico x1		USB cable x1	
Breadboard x1			
Jumper			
NPN transistorx1 (S8050)		Passive buzzer x1	
Push button x1		Resistor 1kΩ x1	
		Resistor 10kΩ x2	

## Circuit

Schematic diagram

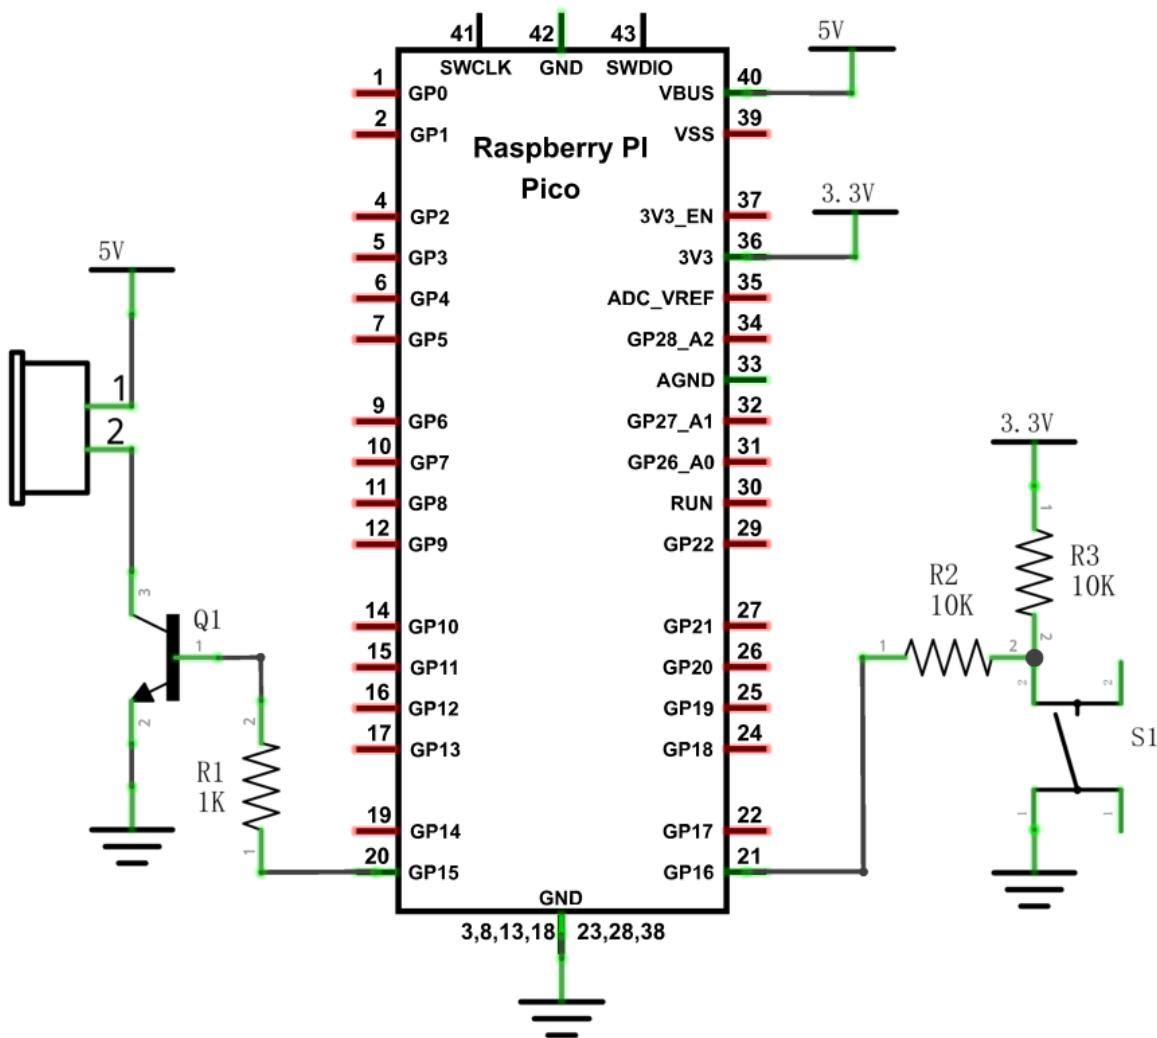

Hardware connection. If you need any support, please feel free to contact us via: [support@freenove.com](mailto:support@freenove.com)

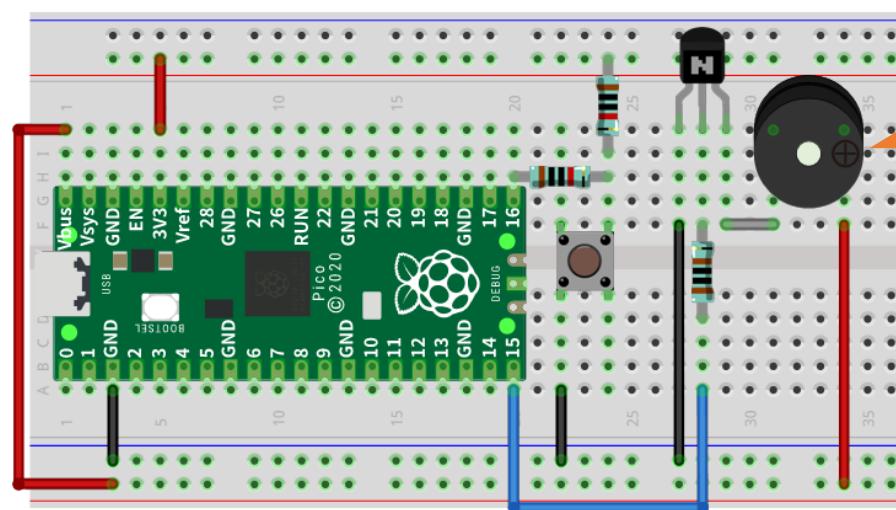


Any concerns? [support@freenove.com](mailto:support@freenove.com)

## Sketch

In this project, the buzzer alarm is controlled by the button. Press the button, then buzzer sounds. If you release the button, the buzzer will stop sounding. It is logically the same as using button to control LED, but in the control method, passive buzzer requires PWM of certain frequency to sound.

### Sketch\_06.2\_Alertor

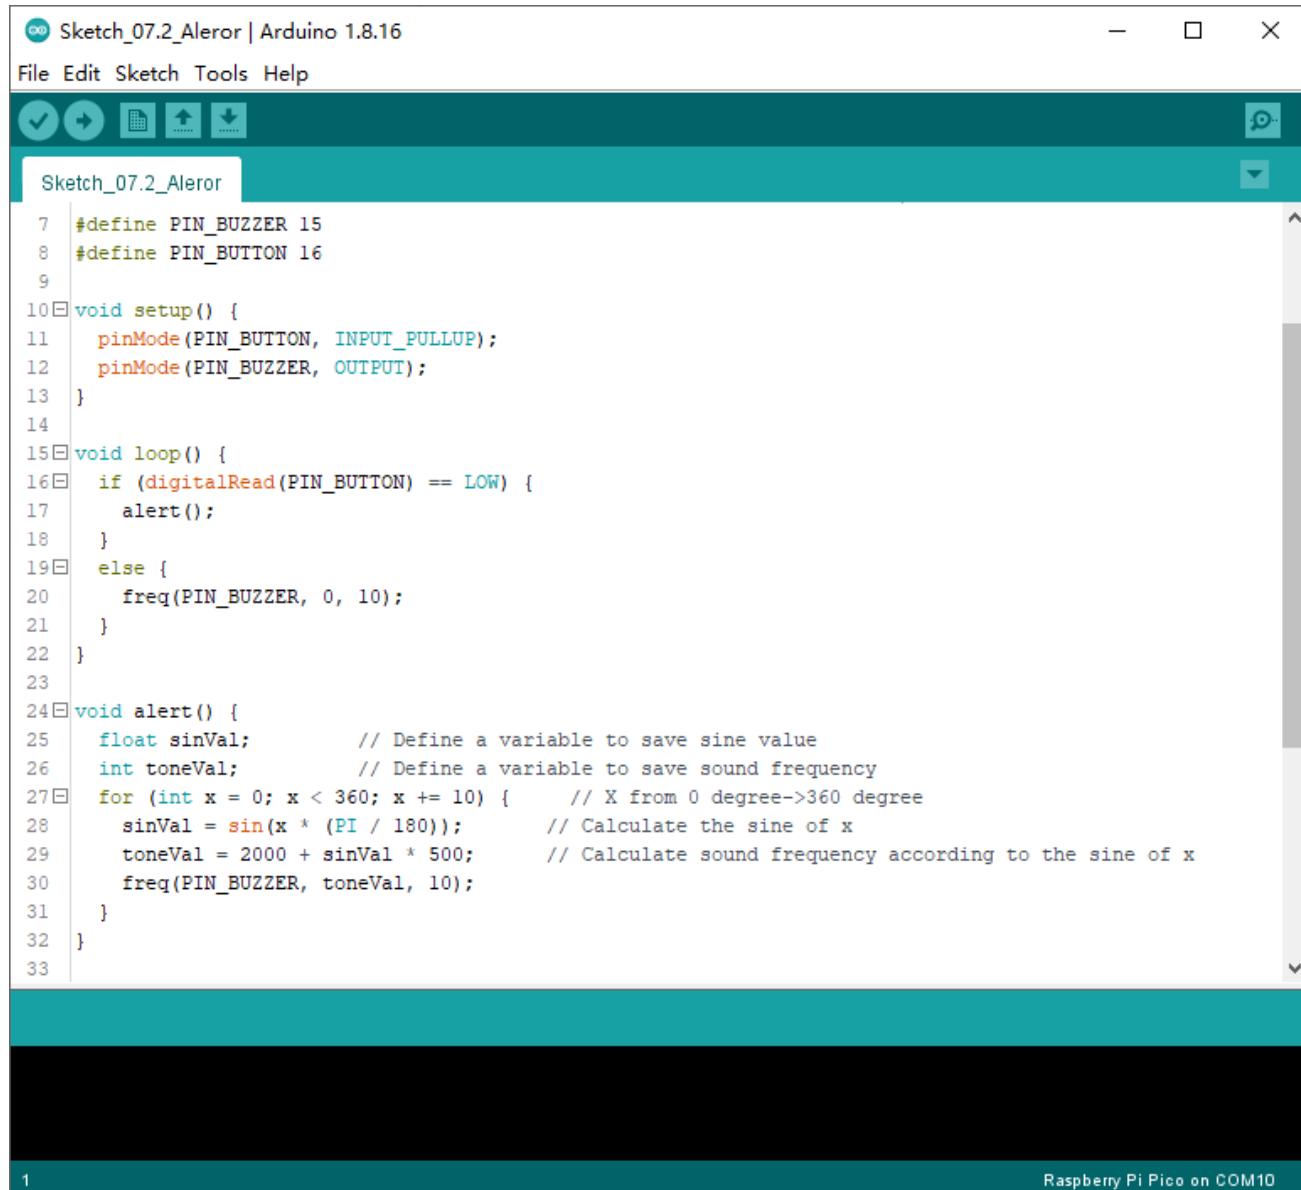


The screenshot shows the Arduino IDE interface with the following details:

- Title Bar:** Sketch\_07.2\_Aleror | Arduino 1.8.16
- Menu Bar:** File Edit Sketch Tools Help
- Toolbar:** Includes icons for Save, Undo, Redo, Open, Upload, and Download.
- Code Editor:** Displays the C++ code for the sketch. The code defines pins for a buzzer and a button, sets up the button as an input and the buzzer as an output, and implements a loop where it checks the button state and plays a sine wave if the button is pressed. The sine wave frequency is calculated based on the angle x from 0 to 360 degrees.

```
Sketch_07.2_Aleror
7 #define PIN_BUZZER 15
8 #define PIN_BUTTON 16
9
10 void setup() {
11     pinMode(PIN_BUTTON, INPUT_PULLUP);
12     pinMode(PIN_BUZZER, OUTPUT);
13 }
14
15 void loop() {
16     if (digitalRead(PIN_BUTTON) == LOW) {
17         alert();
18     }
19     else {
20         freq(PIN_BUZZER, 0, 10);
21     }
22 }
23
24 void alert() {
25     float sinVal;          // Define a variable to save sine value
26     int toneVal;           // Define a variable to save sound frequency
27     for (int x = 0; x < 360; x += 10) {      // X from 0 degree->360 degree
28         sinVal = sin(x * (PI / 180));        // Calculate the sine of x
29         toneVal = 2000 + sinVal * 500;        // Calculate sound frequency according to the sine of x
30         freq(PIN_BUZZER, toneVal, 10);
31     }
32 }
33
```
- Status Bar:** Shows the text "Raspberry Pi Pico on COM10".

Download the code to Pico, press the button, then alarm sounds. And when the button is released, the alarm will stop sounding.

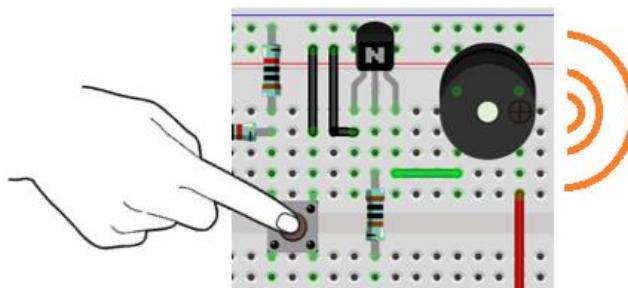

The following is the program code:

```

1 #define PIN_BUZZER 15
2 #define PIN_BUTTON 16
3
4 void setup() {
5     pinMode(PIN_BUTTON, INPUT_PULLUP);
6     pinMode(PIN_BUZZER, OUTPUT);
7 }
8
9 void loop() {
10    if (digitalRead(PIN_BUTTON) == LOW) {
11        alert();
12    }else {
13        freq(PIN_BUZZER, 0, 10);
14    }
15 }
16
17 void alert() {
18     float sinVal;          // Define a variable to save sine value
19     int toneVal;           // Define a variable to save sound frequency
20     for (int x = 0; x < 360; x += 10) { // X from 0 degree->360 degree
21         sinVal = sin(x * (PI / 180));      // Calculate the sine of x
22         toneVal = 2000 + sinVal * 500;      // Calculate sound frequency according to the sine of x
23         freq(PIN_BUZZER, toneVal, 10);
24     }
25 }
26
27 void freq(int PIN, int freqs, int times) {
28     if (freqs == 0) {
29         digitalWrite(PIN, LOW);
30     }
31     else {
32         for (int i = 0; i < times * freqs / 1000; i++) {
33             digitalWrite(PIN, HIGH);

```

```

34     delayMicroseconds(1000000 / freqs / 2);
35     digitalWrite(PIN, LOW);
36     delayMicroseconds(1000000 / freqs / 2);
37   }
38 }
39 }
```

Define the button and pin to control the passive buzzer.

```

1 #define PIN_BUZZER 15
2 #define PIN_BUTTON 16
```

Write a function to drive the passive buzzer with a duty cycle of 50%. The `delayMicroseconds()` function is in

1us.  $1\text{ s} = 1000000\text{ us}$ . By the formula  $T = \frac{1}{f}$ , when the frequency is fixed, the PWM period T is also fixed.

```

27 void freq(int PIN, int freqs, int times) {
28   if (freqs == 0) {
29     digitalWrite(PIN, LOW);
30   }
31   else {
32     for (int i = 0; i < times * freqs / 1000; i++) {
33       digitalWrite(PIN, HIGH);
34       delayMicroseconds(1000000 / freqs / 2);
35       digitalWrite(PIN, LOW);
36       delayMicroseconds(1000000 / freqs / 2);
37     }
38   }
39 }
```

The frequency curve of the alarm is based on the sine curve. We need to calculate the sine value from 0 to 360 degree and multiply a certain value (here it is 500) and plus the resonant frequency of buzzer.

```

17 void alert() {
18   float sinVal;           // Define a variable to save sine value
19   int toneVal;            // Define a variable to save sound frequency
20   for (int x = 0; x < 360; x += 10) { // X from 0 degree->360 degree
21     sinVal = sin(x * (PI / 180));      // Calculate the sine of x
22     toneVal = 2000 + sinVal * 500;      // Calculate sound frequency according to the sine of x
23     freq(PIN_BUZZER, toneVal, 10);
24   }
25 }
```

In the `loop()` function, when the button is pressed, subfunction `alert()` will be called and the alertor will issue a warning sound; otherwise, it stops the buzzer.

```

10 if (digitalRead(PIN_BUTTON) == LOW) {
11   alert();
12 }else {
13   freq(PIN_BUZZER, 0, 10);
14 }
```


# Chapter 7 Serial Communication

Serial Communication is a means of Communication between different devices. This section describes Raspberry Pi Pico Serial Communication.

## Project 7.1 Serial Print

This project uses Raspberry Pi Pico serial communicator to send data to the computer and print it on the serial monitor.


### Component List

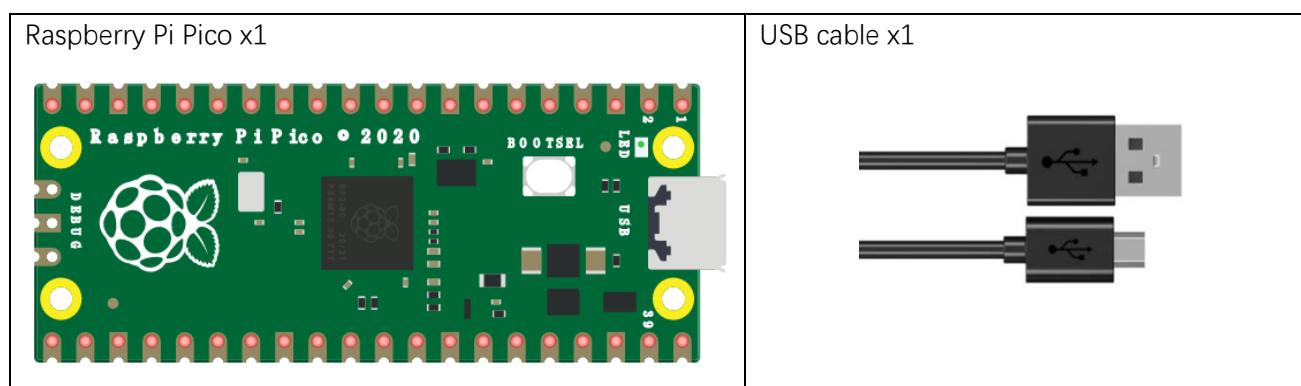

### Related Knowledge

#### Serial communication

Serial communication generally refers to the Universal Asynchronous Receiver/Transmitter (UART), which is commonly used in electronic circuit communication. It has two communication lines, one is responsible for sending data (TX line) and the other for receiving data (RX line). The serial communication connections two devices use is as follows:

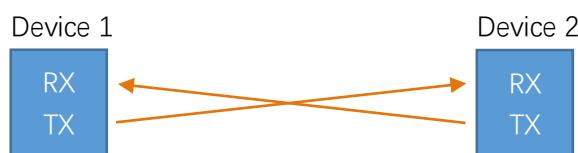

Before serial communication starts, the baud rate of both sides must be the same. Communication between devices can work only if the same baud rate is used. The baud rates commonly used is 9600 and 115200.

### Serial port on Raspberry Pi Pico

Raspberry Pi Pico has integrated USB to serial transfer, so it could communicate with computer connecting to USB cable.




Arduino Software also uploads code to Pico through the serial connection.

Your computer identifies serial devices connecting to it as COMx. We can use the Serial Monitor window of Arduino Software to communicate with Pico, connect Pico to computer through the USB cable, choose the correct device, and then click the Serial Monitor icon to open the Serial Monitor window.




Interface of serial monitor window is as follows. If you can't open it, make sure Pico has been connected to the computer, and choose the right serial port in the menu bar "Tools".

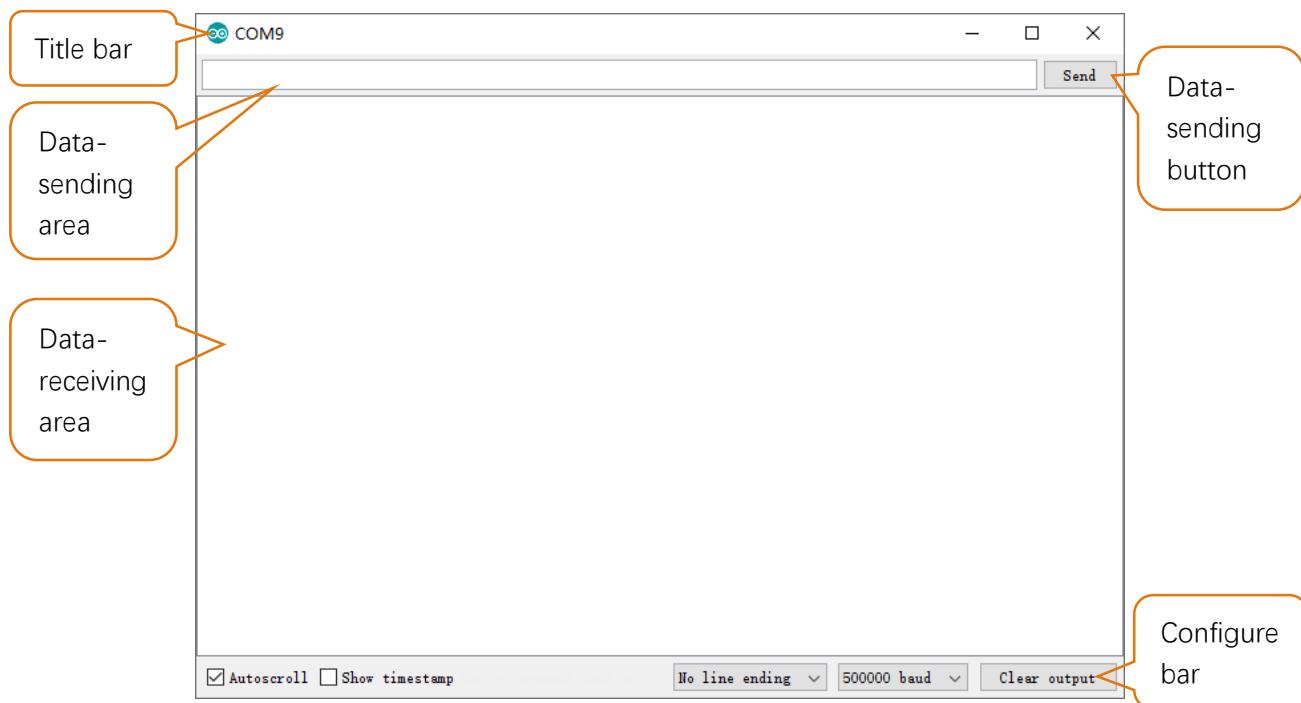

## Circuit

Connect Raspberry Pi Pico to the computer with USB cable.

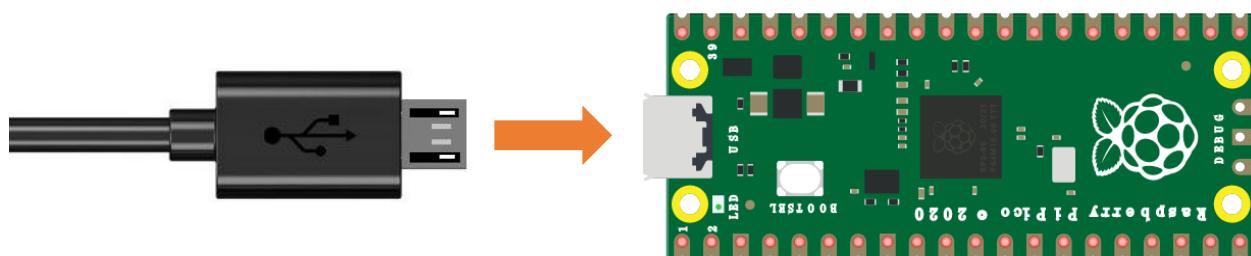

## Sketch


### Sketch\_07.1\_SerialPrinter

A screenshot of the Arduino IDE interface. The title bar says "Sketch\_08.1\_SerialPrinter | Arduino 1.8.16". The menu bar includes File, Edit, Sketch, Tools, and Help. Below the menu is a toolbar with icons for save, upload, and other functions. The main area shows the code for "Sketch\_08.1\_SerialPrinter". The code is as follows:

```
1 // ****
2 Filename      : SerialPrinter
3 Description   : Use UART send some data to PC, and show them on serial monitor.
4 Author       : www.freenove.com
5 Modification: 2020/07/11
6 ****
7
8 void setup() {
9   Serial.begin(115200);
10  delay(2000);
11  Serial.println("Raspberry Pi Pico initialization completed!");
12 }
13
14 void loop() {
15   Serial.println( millis() / 1000 % 60 );
16   delay(1000);
17 }
```

The status bar at the bottom of the IDE window displays the message "Done compiling."

Download the code to Pico, open the serial port monitor, set the baud rate to 115200. As shown in the following picture:

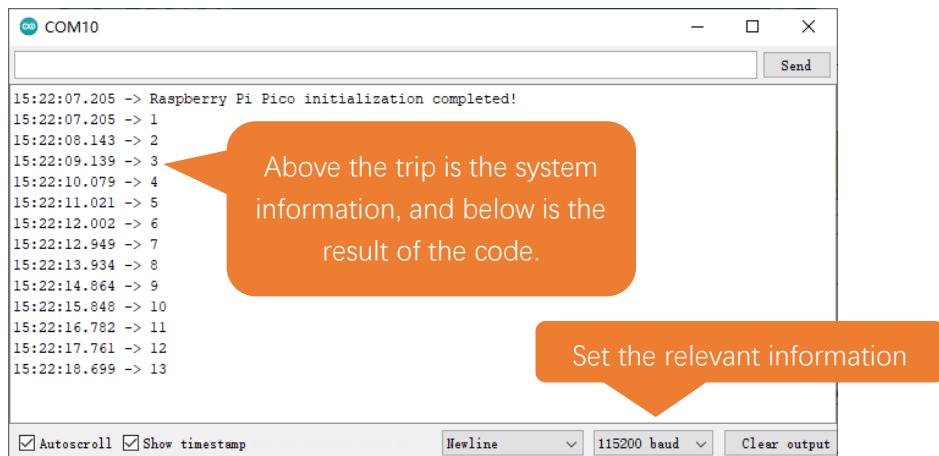

As shown above, when the code runs, the data is printed every one second.

## Reference

```
void begin(unsigned long baud, uint32_t config=SERIAL_8N1, int8_t rxPin=-1,  
          int8_t txPin=-1, bool invert=false, unsigned long timeout_ms = 20000UL);
```

Initializes the serial port. Parameter baud is baud rate, other parameters generally use the default value.

```
size_t println( arg );
```

Print to the serial port and wrap. The parameter **arg** can be a number, a character, a string, an array of characters, etc.


```
size_t printf(const char * format, ...) __attribute__((format (printf, 2, 3)));
```

## Print formatted content

```
unsigned long millis();
```

For details, please refer to [I<sup>A</sup>P7\\_I2C\\_SPI default pin](#).

And you can also change settings according to the distribution of pins.

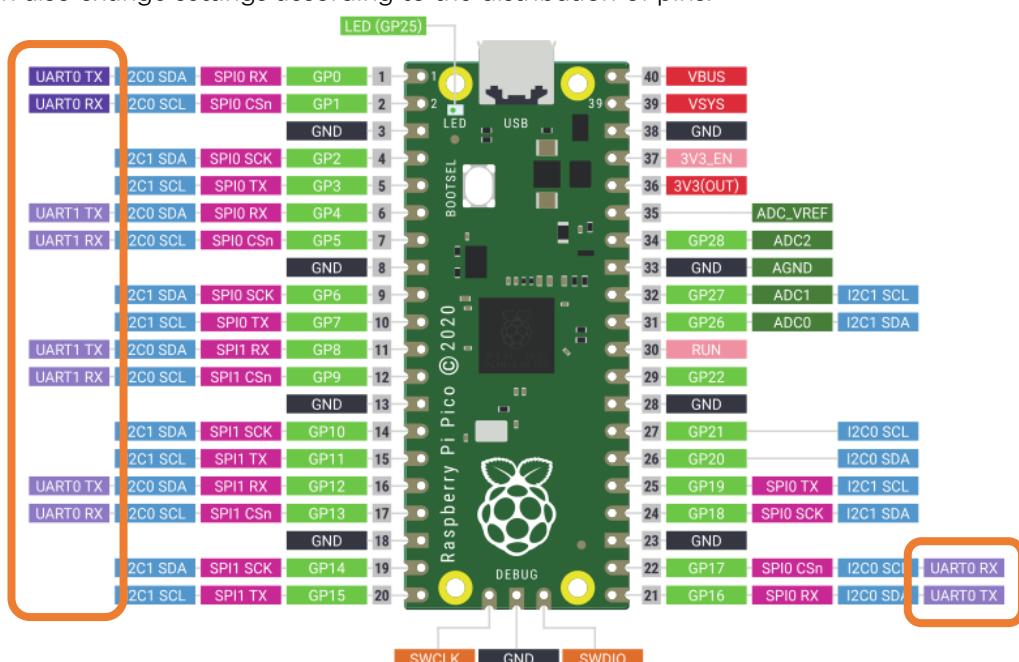

Any concerns?  support@freenove.com


## Project 7.2 Serial Read and Write

From last section, we use serial port on Pico to send data to a computer, now we will use that to receive data from computer.

Component and circuit are the same as in the previous project.

### Sketch

#### Sketch\_07.2\_SerialRW

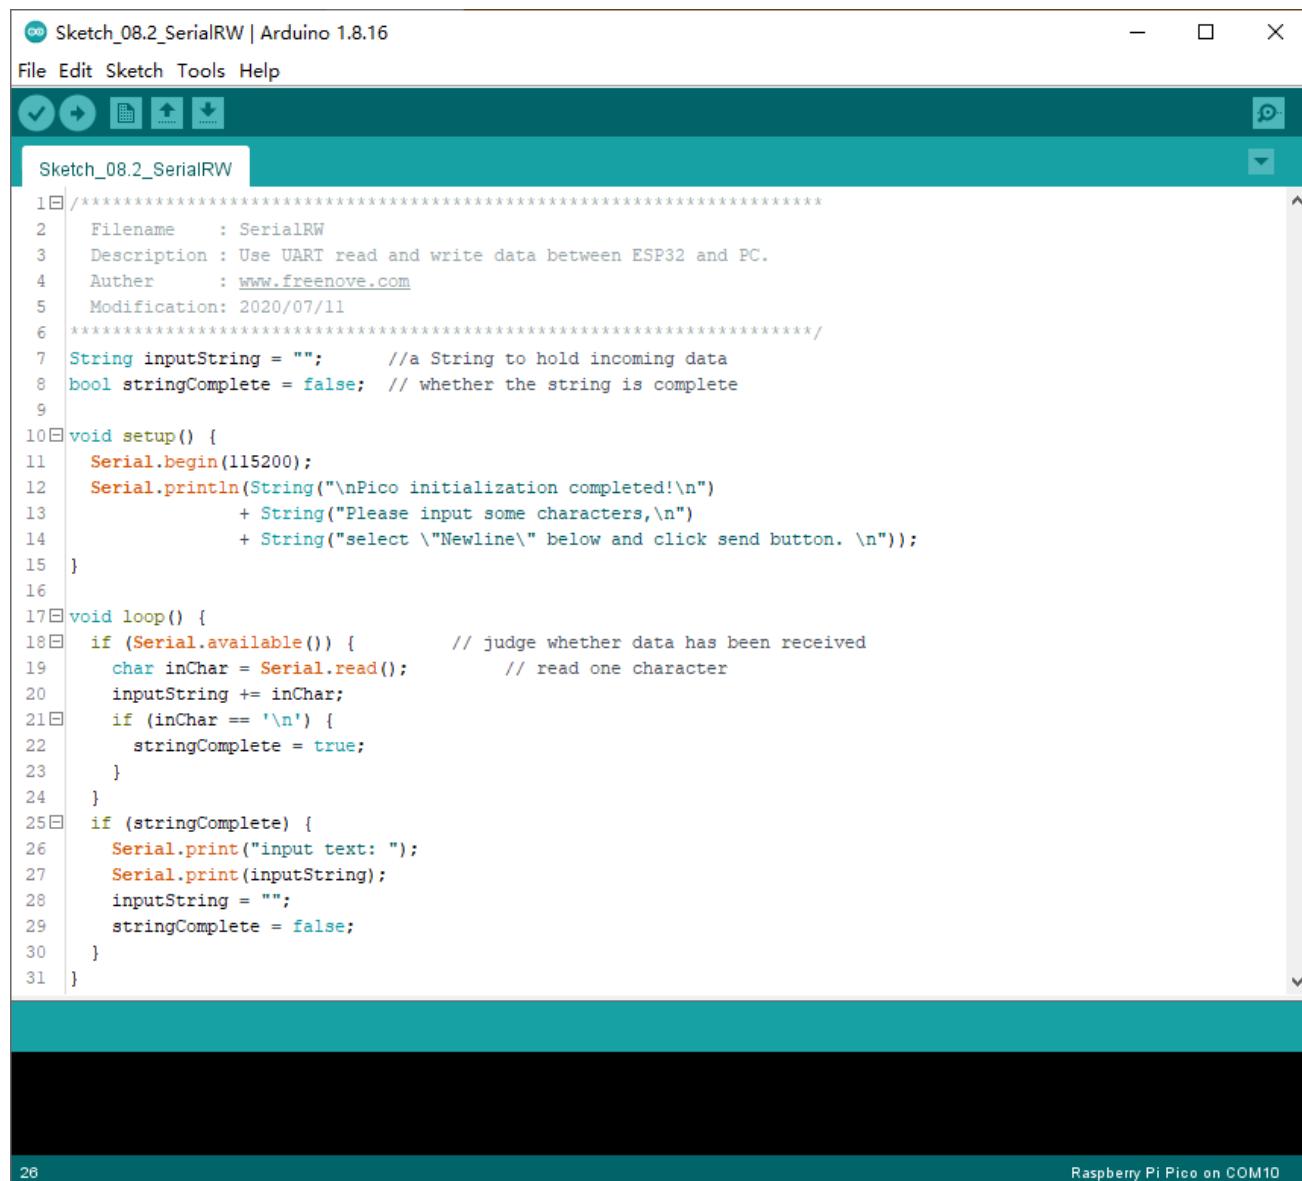


The screenshot shows the Arduino IDE interface with the following details:

- Title Bar:** Sketch\_08.2\_SerialRW | Arduino 1.8.16
- Menu Bar:** File Edit Sketch Tools Help
- Toolbar:** Includes icons for Save, Run, Upload, and others.
- Sketch Area:** Displays the C++ code for the sketch. The code handles serial communication between the Pico and a computer, reading input and printing it back. It includes comments for the file's purpose, author, and modification date.
- Status Bar:** Shows "Raspberry Pi Pico on COM10" at the bottom right.


```
Sketch_08.2_SerialRW
1 //*****
2 Filename : SerialRW
3 Description : Use UART read and write data between ESP32 and PC.
4 Author : www.freenove.com
5 Modification: 2020/07/11
6 ****
7 String inputString = ""; //a String to hold incoming data
8 bool stringComplete = false; // whether the string is complete
9
10 void setup() {
11     Serial.begin(115200);
12     Serial.println(String("\nPico initialization completed!\n")
13                   + String("Please input some characters,\n")
14                   + String("select \"Newline\" below and click send button. \n"));
15 }
16
17 void loop() {
18     if (Serial.available()) { // judge whether data has been received
19         char inChar = Serial.read(); // read one character
20         inputString += inChar;
21         if (inChar == '\n') {
22             stringComplete = true;
23         }
24     }
25     if (stringComplete) {
26         Serial.print("input text: ");
27         Serial.print(inputString);
28         inputString = "";
29         stringComplete = false;
30     }
31 }
```



Download the code to Pico, open the serial monitor, and set the bottom to Newline, 115200, as shown in the following picture:

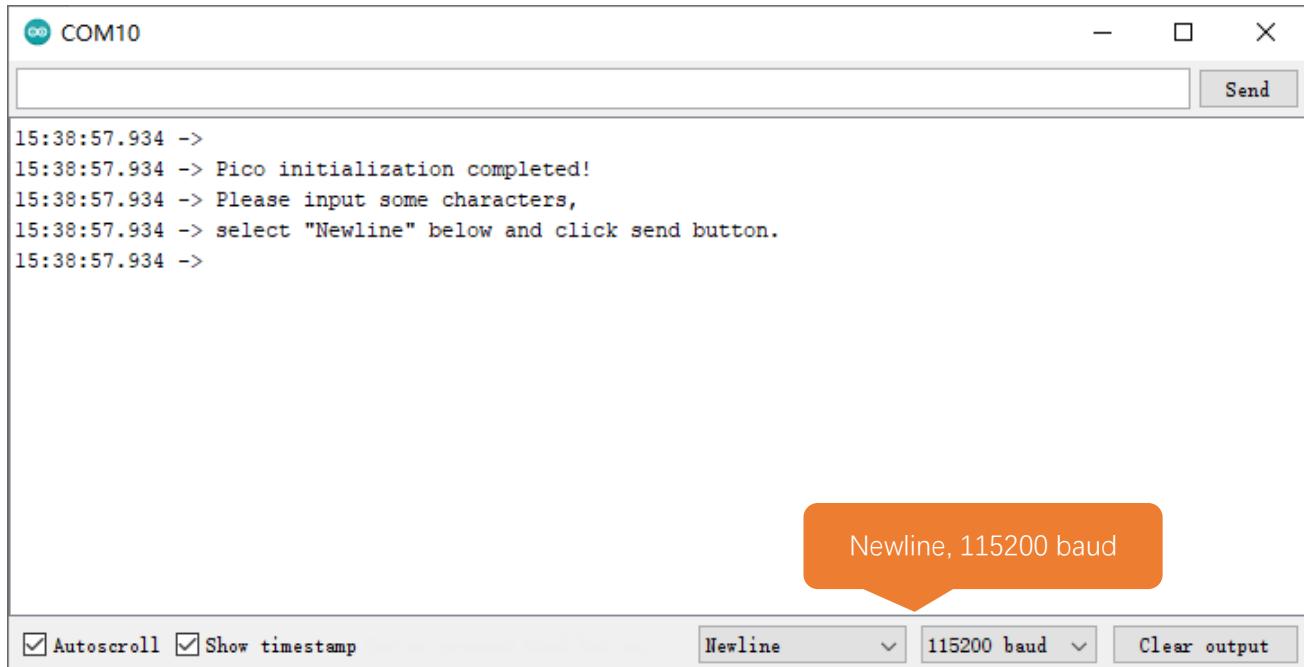

Then type characters like 'ABCDEFG' into the data sent at the top and click the Send button to print out the data Pico receives.

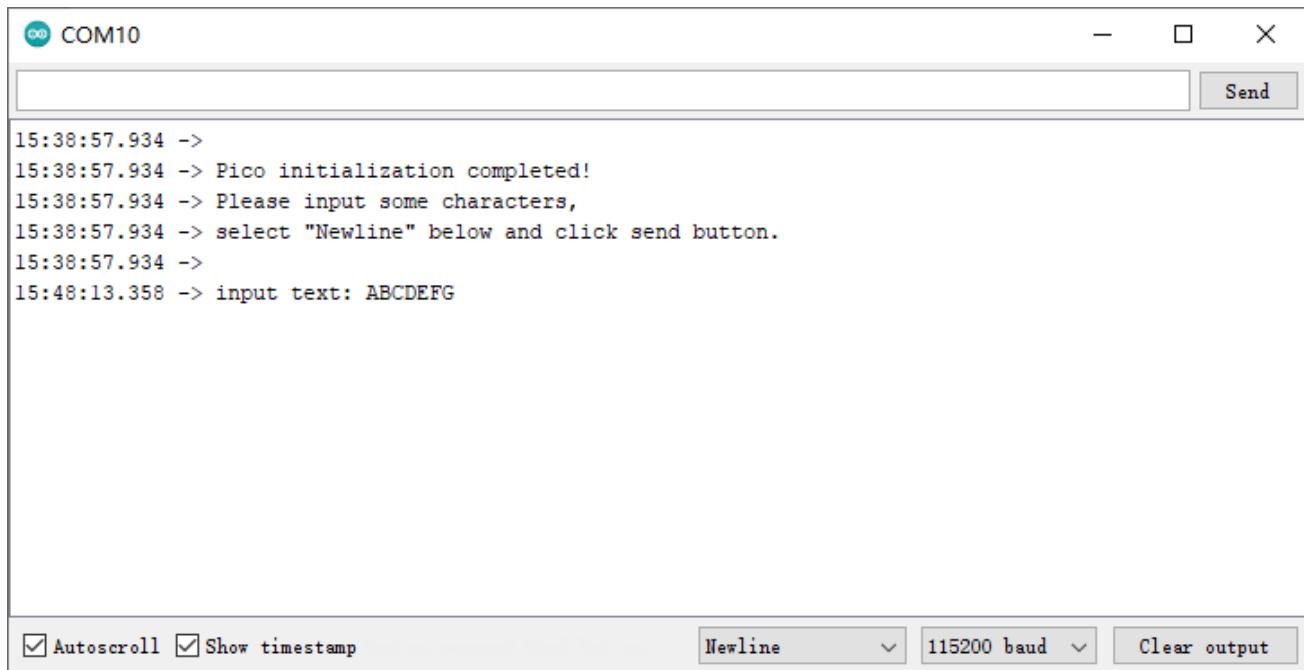

The following is the program code:

```
1 String inputString = "";      //a String to hold incoming data
2 bool stringComplete = false; // whether the string is complete
3
4 void setup() {
5     Serial.begin(115200);delay(1000);
6     Serial.println(String("\nPico initialization completed!\n")
7                     + String("Please input some characters, \n")
8                     + String("select \"Newline\" below and click send button. \n"));
9 }
10
11 void loop() {
12     if (Serial.available()) {      // judge whether data has been received
13         char inChar = Serial.read();      // read one character
14         inputString += inChar;
15         if (inChar == '\n') {
16             stringComplete = true;
17         }
18     }
19     if (stringComplete) {
20         Serial.print("input text: ");
21         Serial.print(inputString);
22         inputString = "";
23         stringComplete = false;
24     }
25 }
```

In loop(), determine whether the serial port has data, if so, read and save the data, and if the newline character is read, print out all the data that has been read.

#### Reference

`String();`

Constructs an instance of the String class.

For more information, please visit

<https://www.arduino.cc/reference/en/language/variables/data-types/stringobject/>

`int available(void);`

Get the number of bytes (characters) available for reading from the serial port. This is data that's already arrived and stored in the serial receive buffer.

`Serial.read();`

Reads incoming serial data.

# Chapter 8 AD Converter


This chapter we learn to use the ADC function of Rasepberry Pi Pico.

## Project 8.1 Read the Voltage of Potentiometer


In this chapter, we use ADC function of Pico to read the voltage output by potentiometer.

### Component List


Raspberry Pi Pico x1

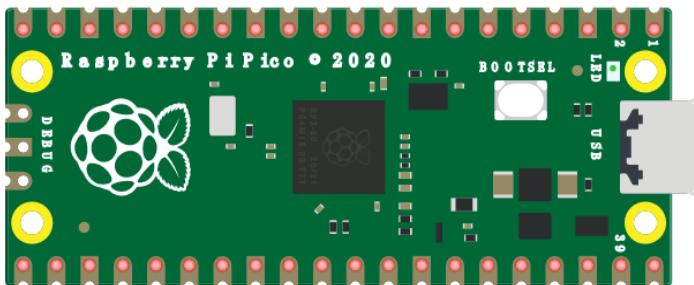


USB cable x1

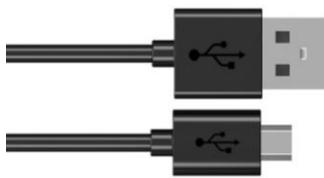

Breadboard x1

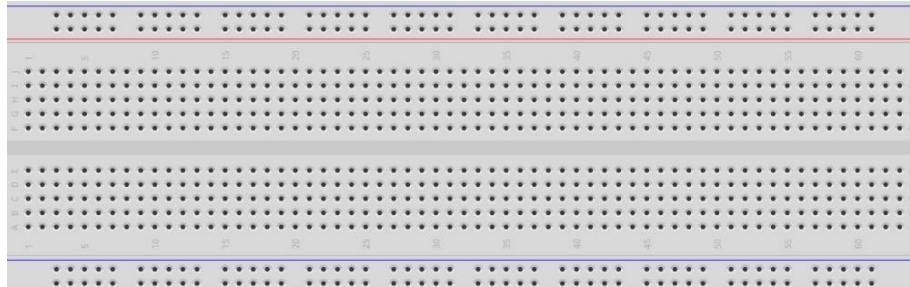

Rotary potentiometer x1

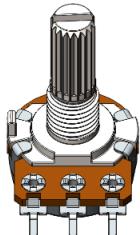


Jumper



## Related Knowledge

### ADC

An ADC is an electronic integrated circuit used to convert analog signals such as voltages to digital or binary form consisting of 1s and 0s. The range of our ADC on Pico is 10 bits, that means the resolution is  $2^{10}=1024$ , and it represents a range (at 3.3V) will be divided equally to 1024 parts. The range of analog values corresponds to ADC values. So the more bits the ADC has, the denser the partition of analog will be and the greater the precision of the resulting conversion.

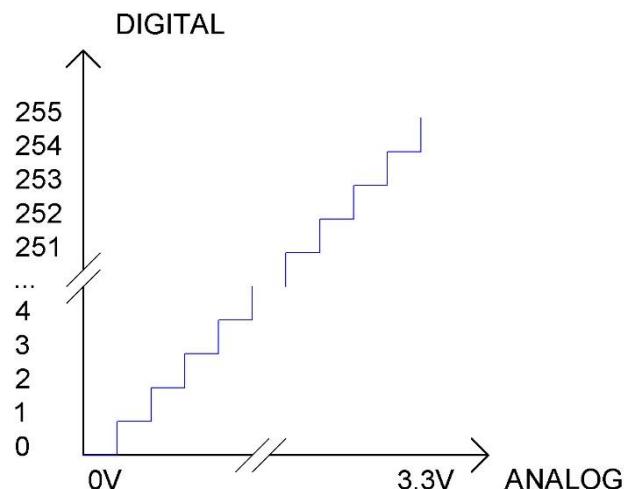

Subsection 1: the analog in range of 0V---3.3/1023 V corresponds to digital 0;

Subsection 2: the analog in range of 3.3/1023V---2\*3.3/1023V corresponds to digital 1;

...

The following analog will be divided accordingly.

The conversion formula is as follows:

$$ADC\ Value = \frac{\text{Analog\ Voltage}}{3.3} * 1023$$


### ADC Channels Raspberry Pi Pico

Raspberry Pi Pico has 4 ADC channels, which are ADC0(GP26), ADC1(GP27), ADC2(GP28), ADC3(GP29). ADC3 used to measure VSYS on Pico board. Therefore, there are only three generic ADC channels that can be directly used, namely, ADC0, ADC1 and ADC2.

## Component Knowledge


### Potentiometer

Potentiometer is a resistive element with three Terminal parts. Unlike the resistors that we have used thus far in our project which have a fixed resistance value, the resistance value of a potentiometer can be adjusted. A potentiometer is often made up by a resistive substance (a wire or carbon element) and movable contact brush. When the brush moves along the resistor element, there will be a change in the resistance of the potentiometer's output side (3) (or change in the voltage of the circuit that is a part). The illustration below represents a linear sliding potentiometer and its electronic symbol on the right.

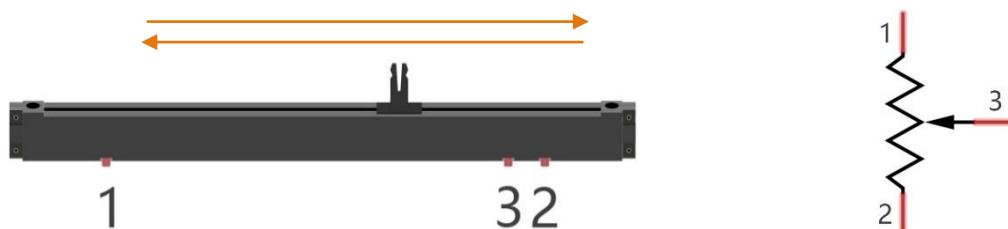


Between potentiometer pin 1 and pin 2 is the resistive element (a resistance wire or carbon) and pin 3 is connected to the brush that makes contact with the resistive element. In our illustration, when the brush moves from pin 1 to pin 2, the resistance value between pin 1 and pin 3 will increase linearly (until it reaches the highest value of the resistive element) and at the same time the resistance between pin 2 and pin 3 will decrease linearly and conversely down to zero. At the midpoint of the slider the measured resistance values between pin 1 and 3 and between pin 2 and 3 will be the same.

In a circuit, both sides of resistive element are often connected to the positive and negative electrodes of power. When you slide the brush "pin 3", you can get variable voltage within the range of the power supply.

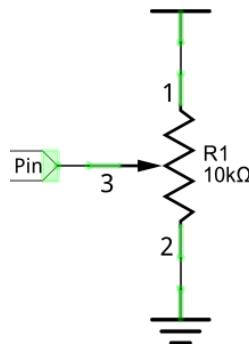

### Rotary potentiometer


Rotary potentiometers and linear potentiometers have the same function; the only difference being the physical action being a rotational rather than a sliding movement.

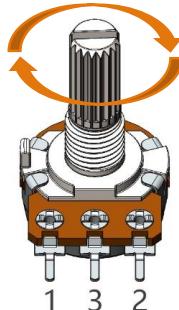


Any concerns? [✉ support@freenove.com](mailto:support@freenove.com)

## Circuit

Schematic diagram

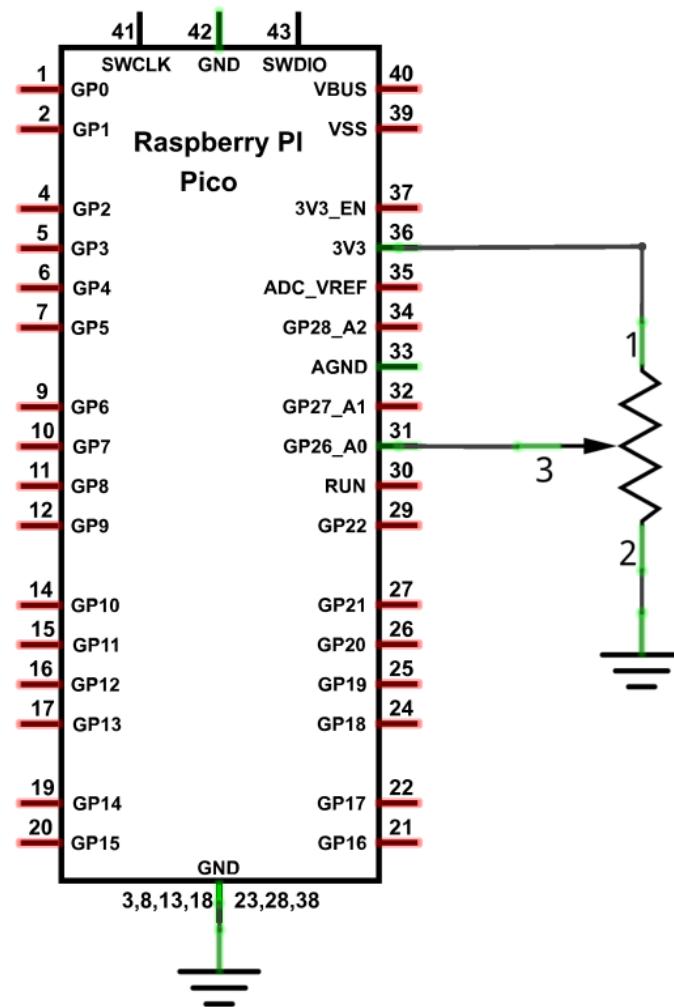

Hardware connection. If you need any support, please feel free to contact us via: [support@freenove.com](mailto:support@freenove.com)

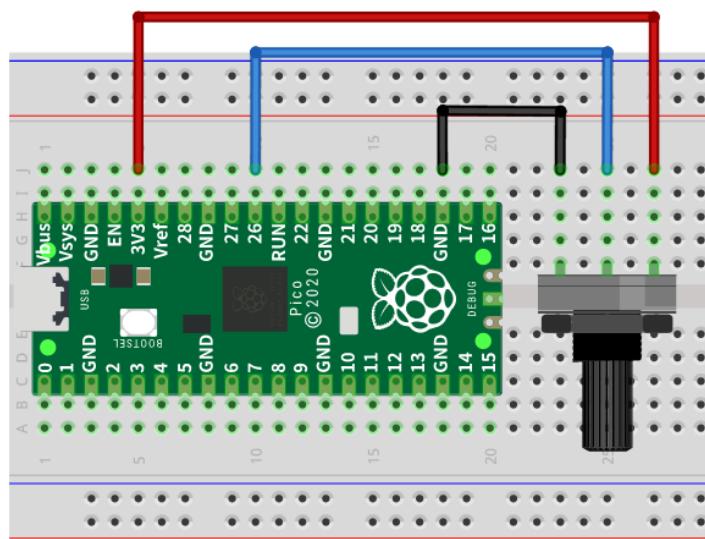

Any concerns? [✉ support@freenove.com](mailto:support@freenove.com)

## Sketch

### Sketch\_08.1\_ADC

The screenshot shows the Arduino IDE interface. The title bar says "Sketch\_09.1\_ADC | Arduino 1.8.16". The menu bar includes File, Edit, Sketch, Tools, and Help. Below the menu is a toolbar with icons for upload, refresh, and save. The main code editor window contains the following code:

```

1 #define PIN_ANALOG_IN 26
2
3 void setup() {
4     Serial.begin(115200);
5 }
6
7 void loop() {
8     int adcVal = analogRead(PIN_ANALOG_IN);
9     double voltage = adcVal / 1023.0 * 3.3;
10    Serial.println("ADC Value: " + String(adcVal) + " --- Voltage Value: " + String(voltage) + "V");
11    delay(500);
12 }

```

Below the code editor, a message says "Done uploading." followed by the output from the serial monitor:

```

rp2040load 1.0.1 - compiled with gol.15.8
Loading into Flash: [=====] 100%

```

The status bar at the bottom right shows "Raspberry Pi Pico on COM10".

Download the code to Pico, open the serial monitor, and set the baud rate to 115200, as shown in the following picture,

The screenshot shows the Serial Monitor window titled "COM10". The text area displays a series of messages showing ADC values and their corresponding voltage values:

```

16:08:01.822 -> ADC Value: 165 --- Voltage Value: 0.53V
16:08:02.276 -> ADC Value: 168 --- Voltage Value: 0.54V
16:08:02.777 -> ADC Value: 170 --- Voltage Value: 0.55V
16:08:03.279 -> ADC Value: 178 --- Voltage Value: 0.57V
16:08:03.735 -> ADC Value: 184 --- Voltage Value: 0.59V
16:08:04.237 -> ADC Value: 189 --- Voltage Value: 0.61V
16:08:04.693 -> ADC Value: 192 --- Voltage Value: 0.62V
16:08:05.189 -> ADC Value: 193 --- Voltage Value: 0.62V
16:08:05.644 -> ADC Value: 195 --- Voltage Value: 0.63V
16:08:06.146 -> ADC Value: 196 --- Voltage Value: 0.63V
16:08:06.601 -> ADC Value: 196 --- Voltage Value: 0.63V
16:08:07.099 -> ADC Value: 192 --- Voltage Value: 0.62V
16:08:07.600 -> ADC Value: 195 --- Voltage Value: 0.63V
16:08:08.055 -> ADC Value: 191 --- Voltage Value: 0.62V
16:08:08.556 -> ADC Value: 193 --- Voltage Value: 0.62V

```

At the bottom of the window, there are checkboxes for "Autoscroll" and "Show timestamp", and buttons for "Newline", "115200 baud", and "Clear output".

The following is the code:

```
1 #define PIN_ANALOG_IN 26
2
3 void setup() {
4     Serial.begin(115200);
5 }
6
7 void loop() {
8     int adcVal = analogRead(PIN_ANALOG_IN);
9     double voltage = adcVal / 1023.0 * 3.3;
10    Serial.println("ADC Value: " + String(adcVal) + " --- Voltage Value: " + String(voltage) +
11        "V");
12    delay(500);
13 }
```

In loop() function, analogRead is called to get the ADC value of ADC0 and assign it to adcVal. Calculate the measured voltage value through the formula, and print these data through the serial port monitor.

```
8 int adcVal = analogRead(PIN_ANALOG_IN);
9     double voltage = adcVal / 1023.0 * 3.3;
10    Serial.println("ADC Value: " + String(adcVal) + " --- Voltage Value: " + String(voltage) +
11        "V");
```

### Reference

`uint16_t analogRead(uint8_t pin);`

Reads the value from the specified analog pin. Return the analog reading on the pin. (0-1023 for 10 bits).


# Chapter 9 Potentiometer & LED

We have learnt to use ADC in the previous chapter. In this chapter, we will combine PWM and ADC to use potentiometer to control LED, RGBLED and Neopixel.

## Project 9.1 Soft Light

In this project, we will make a soft light. We will use an ADC Module to read ADC values of a potentiometer and map it to duty cycle of the PWM used to control the brightness of an LED. Then you can change the brightness of an LED by adjusting the potentiometer.


## Component List

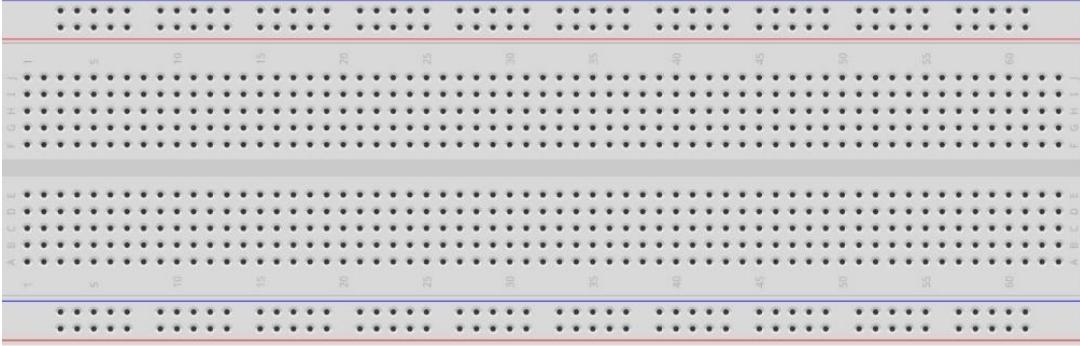Raspberry Pi Pico x1		USB cable x1	
			
Breadboard x1 			
Rotary potentiometer x1	Resistor 220Ω x1	LED x1	Jumper
			


Any concerns? ✉ [support@freenove.com](mailto:support@freenove.com)

## Circuit

Schematic diagram

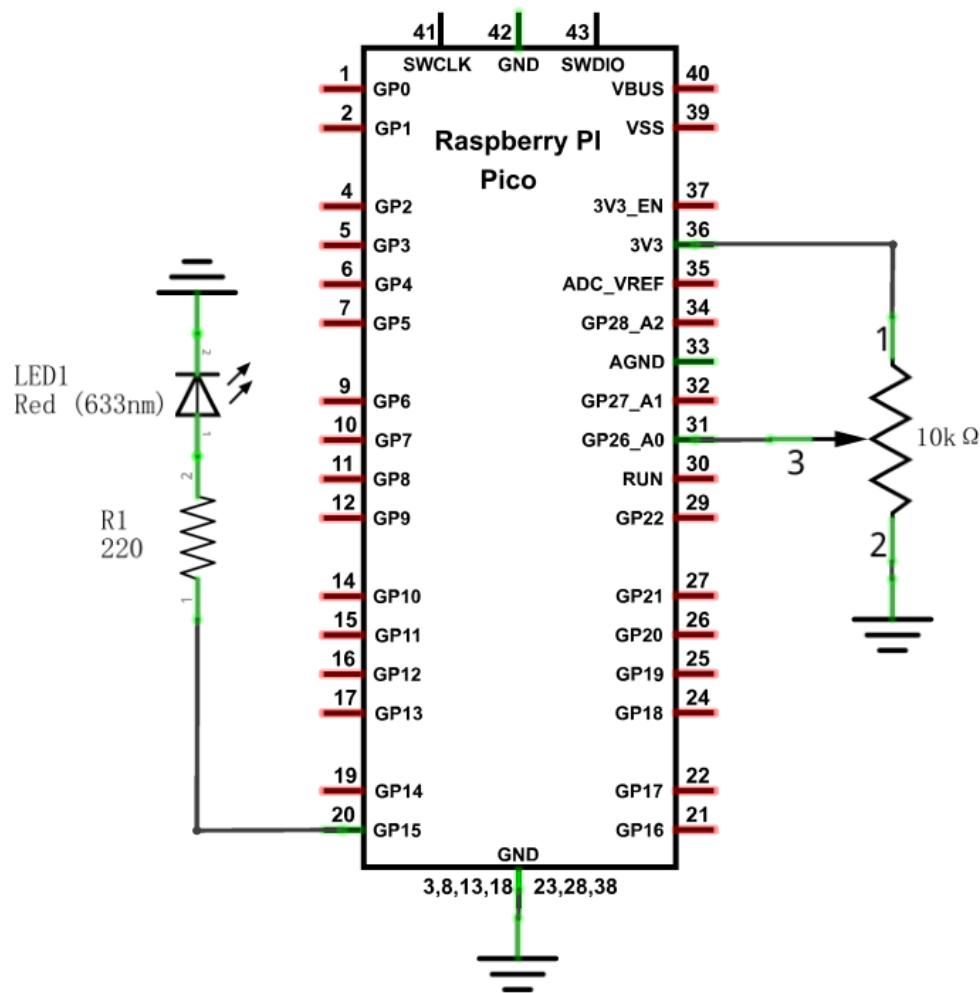

Hardware connection. If you need any support, please feel free to contact us via: [support@freenove.com](mailto:support@freenove.com)

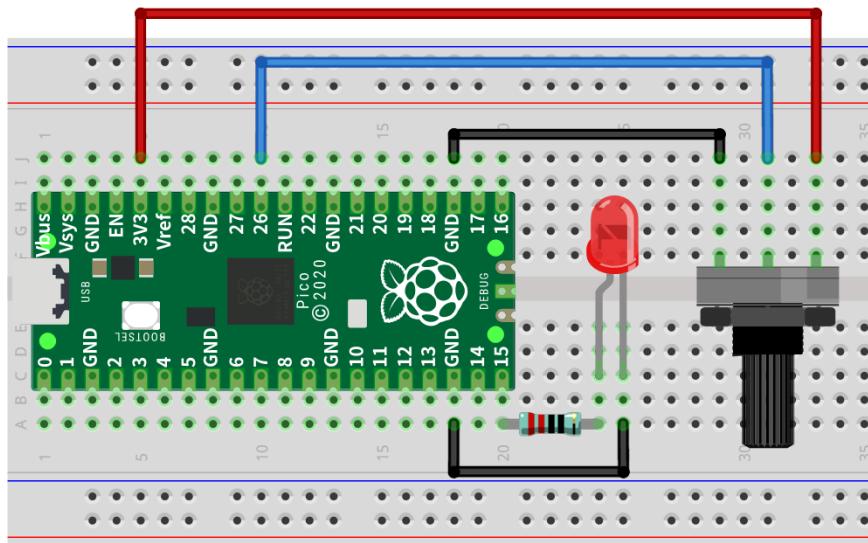

Any concerns? [✉ support@freenove.com](mailto:support@freenove.com)

# Sketch

## Sketch 09.1 Softlight


The screenshot shows the Arduino IDE interface with the following details:

- Title Bar:** Sketch\_10.1\_SoftLight | Arduino 1.8.16
- Menu Bar:** File Edit Sketch Tools Help
- Toolbar:** Includes icons for Save, Run, Stop, and Upload.
- Sketch Area:** Displays the C++ code for the `Sketch_10.1_SoftLight` sketch. The code defines pins for an ADC and LED, sets up the LED as an output, and maps the ADC value to the LED brightness in the loop.

```
Sketch_10.1_SoftLight
7 #define PIN_ADC0      26
8 #define PIN_LED       15
9
10 void setup() {
11   pinMode(PIN_LED, OUTPUT);
12 }
13
14 void loop() {
15   int adcVal = analogRead(PIN_ADC0); //read adc
16   analogWrite(PIN_LED, map(adcVal, 0, 1023, 0, 255));
17   delay(10);
18 }
```

- Status Bar:** Compiling sketch... (with a progress bar)
- Command Line:** Shows the paths to the Arduino tools being used for compilation.

Download the code to Pico, by turning the adjustable resistor to change the input voltage of GP26, Pico changes the output voltage of GP15 according to this voltage value, thus changing the brightness of the LED.

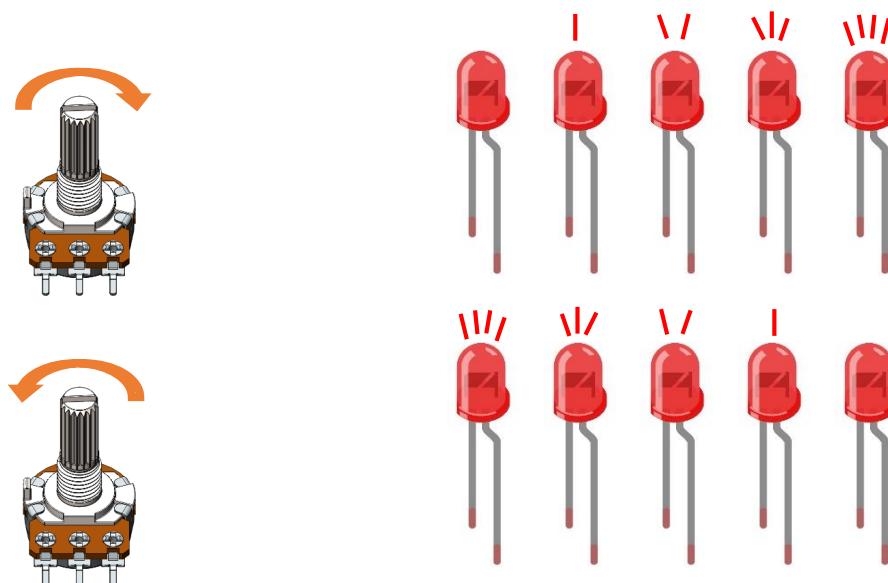

The following is the code:

```
1 #define PIN_ADC0      26
2 #define PIN_LED       15
3
4 void setup() {
5     pinMode(PIN_LED, OUTPUT);
6 }
7
8 void loop() {
9     int adcVal = analogRead(PIN_ADC0); //read adc
10    analogWrite(PIN_LED, map(adcVal, 0, 1023, 0, 255));
11    delay(10);
12 }
```

In the code, read the ADC value of potentiometer and map it to the duty cycle of PWM to control LED brightness.

If you have any concerns, please contact us via: [support@freenove.com](mailto:support@freenove.com)






# Chapter 10 Photoresistor & LED

In this chapter, we will learn how to use photoresistor.

## Project 10.1 Control LED through Photoresistor

A Photoresistor is very sensitive to the amount of light present. We can take advantage of the characteristic to make a night lamp with the following function: when the ambient light is less (darker environment) the LED will automatically become brighter to compensate and when the ambient light is greater (brighter environment) the LED will automatically dim to compensate.


### Component List

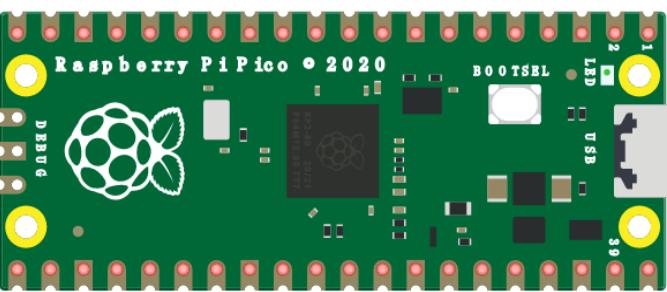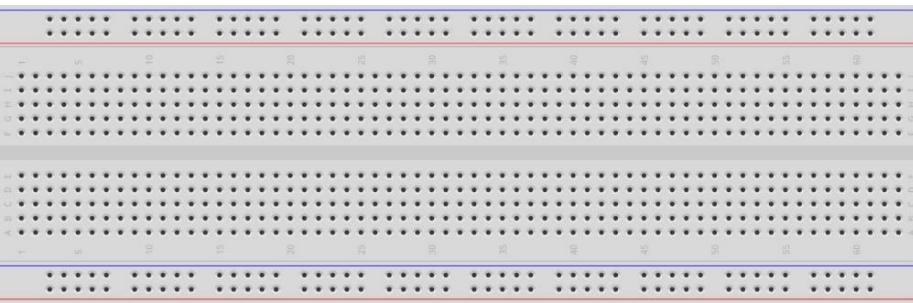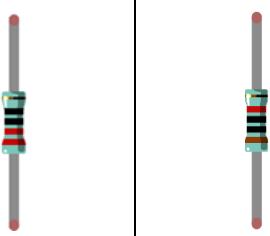Raspberry Pi Pico x1		USB cable x1
Breadboard x1		
Photoresistor x1 		Resistor 220Ω x1      10KΩ x1 
LED x1		Jumper


## Component Knowledge

### Photoresistor

Photoresistor is simply a light sensitive resistor. It is an active component that decreases resistance with respect to receiving luminosity (light) on the component's light sensitive surface. Photoresistor's resistance value will change in proportion to the ambient light detected. With this characteristic, we can use a Photoresistor to detect light intensity. The Photoresistor and its electronic symbol are as follows.

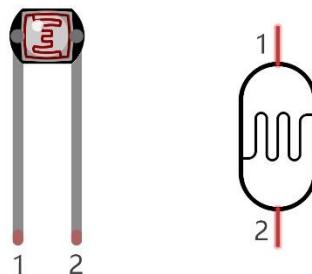

The circuit below is used to detect the change of a Photoresistor's resistance value:

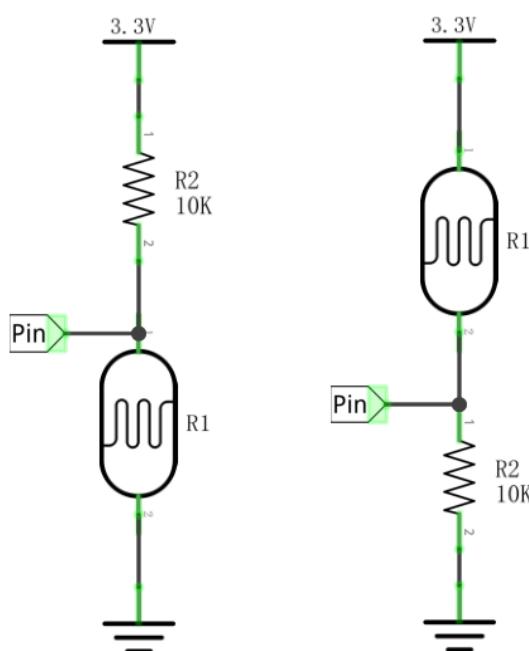


In the above circuit, when a Photoresistor's resistance value changes due to a change in light intensity, the voltage between the Photoresistor and Resistor R1 will also change. Therefore, the intensity of the light can be obtained by measuring this voltage.


## Circuit

The circuit of this project is similar to SoftLight. The only difference is that the input signal is changed from a potentiometer to a combination of a photoresistor and a resistor.

Schematic diagram

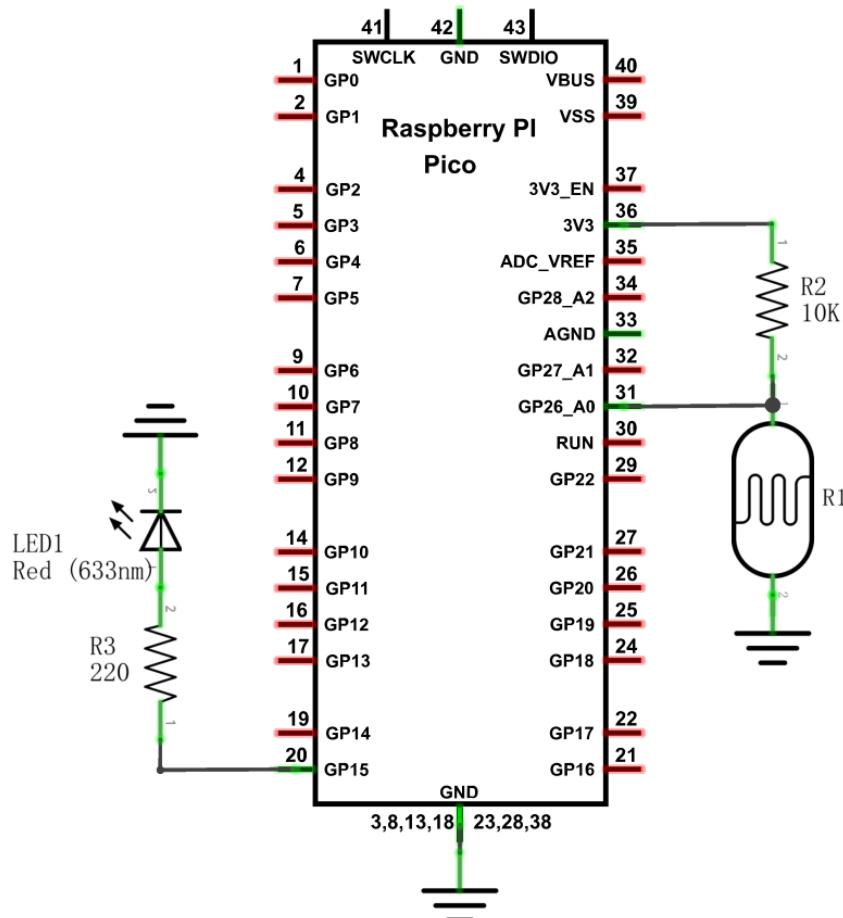

Hardware connection. If you need any support, please feel free to contact us via: [support@freenove.com](mailto:support@freenove.com)

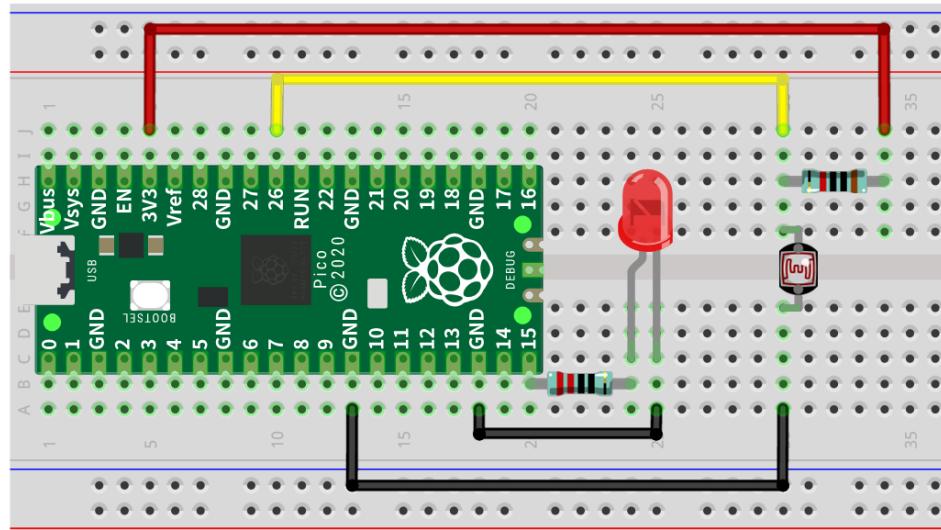


Any concerns? ✉ [support@freenove.com](mailto:support@freenove.com)

## Sketch

The circuit used is similar to the project Soft Light. The only difference is that the input signal of the ADC0 pin of ADC changes from a potentiometer to a combination of a photoresistor and a resistor.

### Sketch\_10.1\_Nightlamp

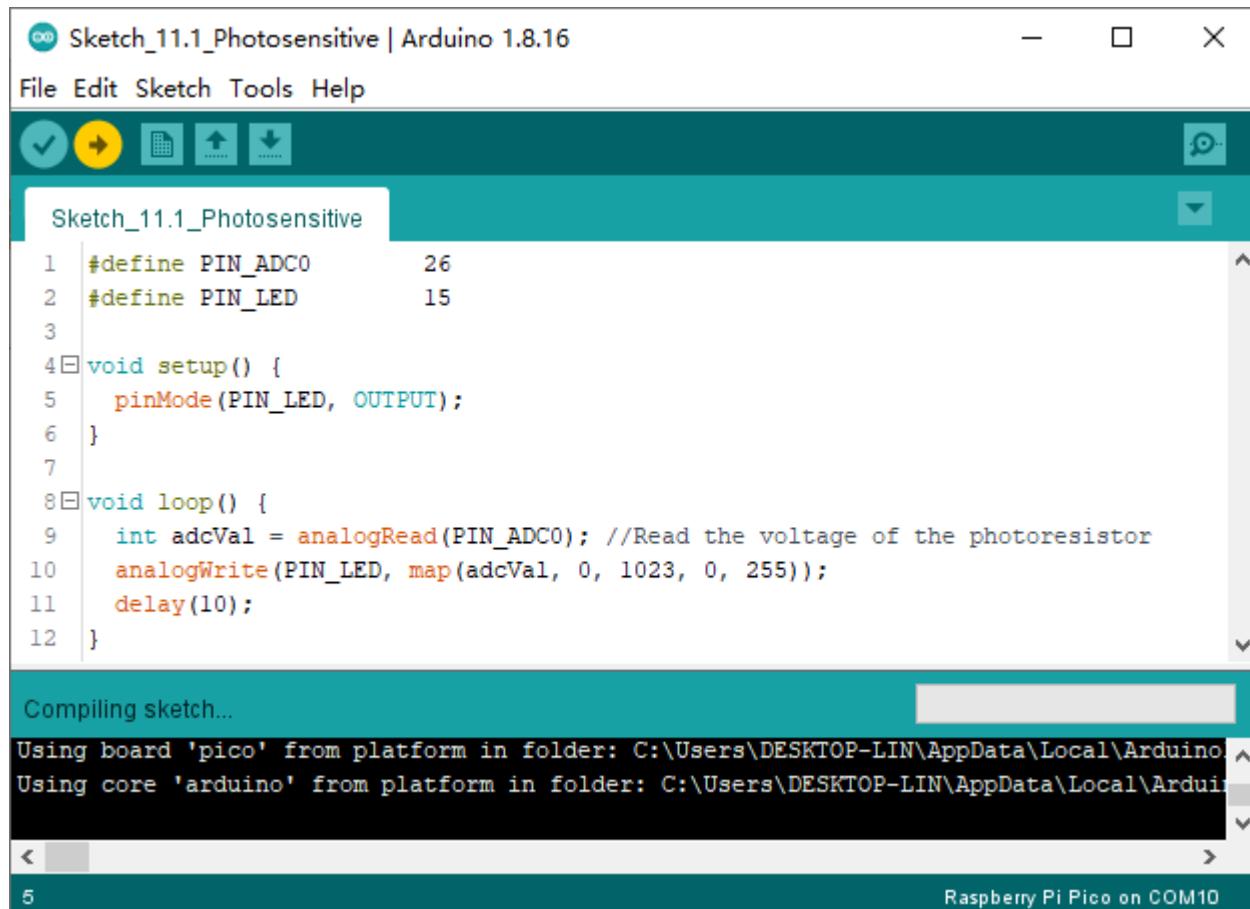

The screenshot shows the Arduino IDE interface. The title bar reads "Sketch\_11.1\_Photosensitive | Arduino 1.8.16". The menu bar includes File, Edit, Sketch, Tools, and Help. Below the menu is a toolbar with icons for save, upload, and refresh. The main code area contains the following C++ code:

```

1 #define PIN_ADC0      26
2 #define PIN_LED       15
3
4 void setup() {
5   pinMode(PIN_LED, OUTPUT);
6 }
7
8 void loop() {
9   int adcVal = analogRead(PIN_ADC0); //Read the voltage of the photoresistor
10  analogWrite(PIN_LED, map(adcVal, 0, 1023, 0, 255));
11  delay(10);
12 }

```

Below the code, a status bar indicates "Compiling sketch...". The serial monitor window shows the compilation message:

```

Using board 'pico' from platform in folder: C:\Users\DESKTOP-LIN\AppData\Local\Arduino
Using core 'arduino' from platform in folder: C:\Users\DESKTOP-LIN\AppData\Local\Arduin


```

The bottom status bar shows "Raspberry Pi Pico on COM10" and the number "5".

Download the code to Pico, if you cover the photoresistor or increase the light shining on it, the brightness of the LED changes accordingly.


If you have any concerns, please contact us via: [support@freenove.com](mailto:support@freenove.com)

Fully cover the photoresistor:

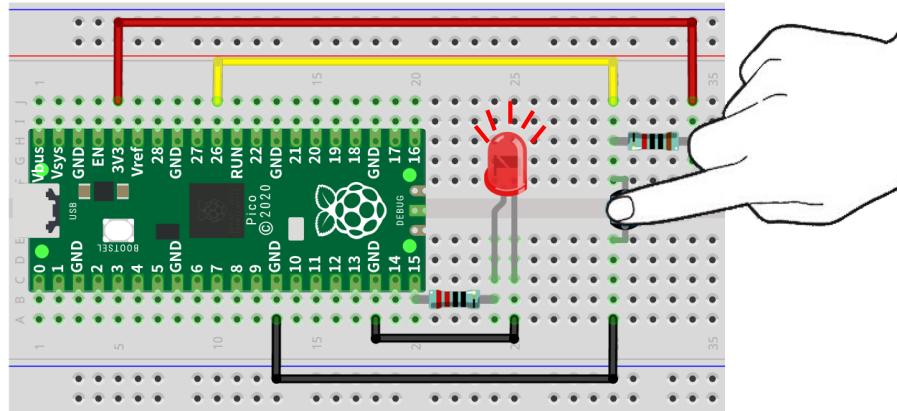


Any concerns? [✉ support@freenove.com](mailto:support@freenove.com)

Half cover the photoresistor:

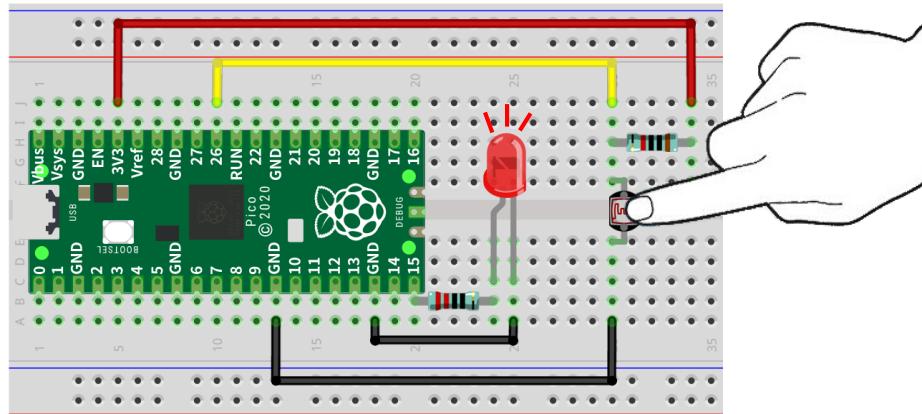

Not cover the photoresistor:

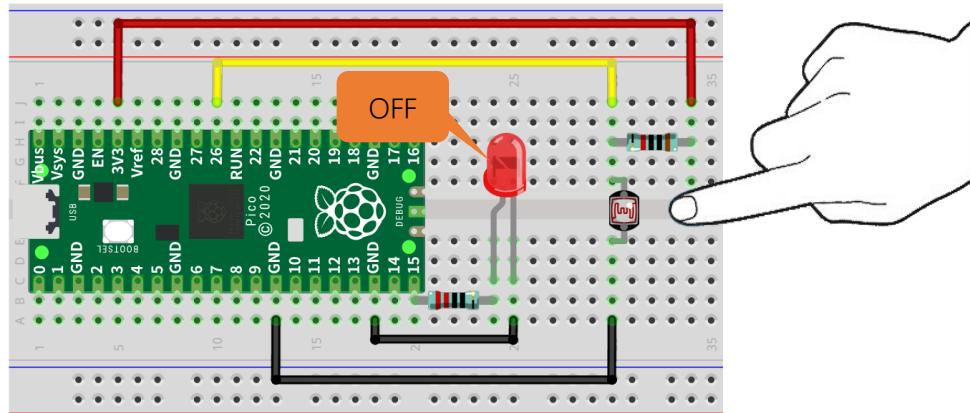

The following is the program code:

```

1 #define PIN_ADC0      26
2 #define PIN_LED       15
3
4 void setup() {
5     pinMode(PIN_LED, OUTPUT);
6 }
7
8 void loop() {
9     int adcVal = analogRead(PIN_ADC0); //Read the voltage of the photoresistor
10    analogWrite(PIN_LED, map(adcVal, 0, 1023, 0, 255));
11    delay(10);
12 }
```



# Chapter 11 Thermistor

In this chapter, we will learn about Thermistors which are another kind of Resistor.

## Project 11.1 Thermometer

A Thermistor is a type of Resistor whose resistance value is dependent on temperature and changes in temperature. Therefore, we can take advantage of this characteristic to make a thermometer.


### Component List

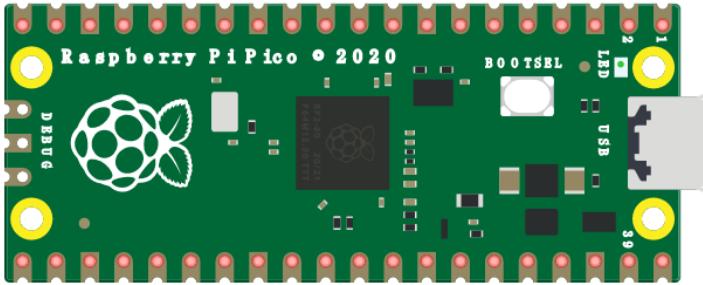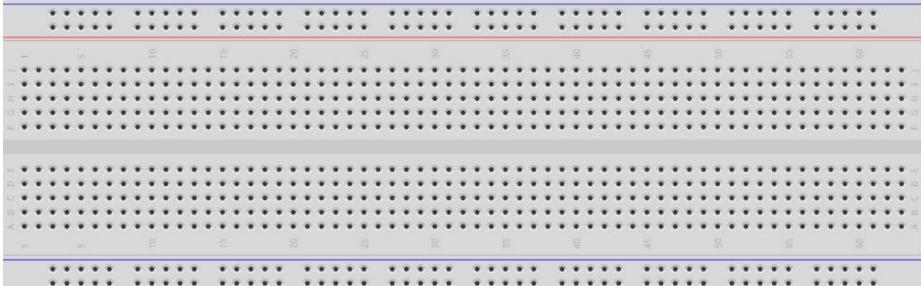Raspberry Pi Pico x1	USB cable x1	
		
Breadboard x1		
		
Thermistor x1	Resistor 10kΩ x1	Jumper
		

## Component Knowledge

### Thermistor

A Thermistor is a temperature sensitive resistor. When it senses a change in temperature, the resistance of the Thermistor will change. We can take advantage of this characteristic by using a Thermistor to detect temperature intensity. A Thermistor and its electronic symbol are shown below.

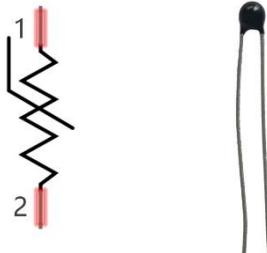

The relationship between resistance value and temperature of a thermistor is:

$$R_t = R * \text{EXP} \left[ B * \left( \frac{1}{T_2} - \frac{1}{T_1} \right) \right]$$

**Where:**

Rt is the thermistor resistance under T2 temperature;

R is the nominal resistance of thermistor under T1 temperature;


**EXP[n]** is nth power of e;

B is for thermal index;

T1, T2 is Kelvin temperature (absolute temperature). Kelvin temperature=273.15 + Celsius temperature.

For the parameters of the Thermistor, we use: B=3950, R=10kΩ, T1=25°C.

The circuit connection method of the Thermistor is similar to photoresistor, as the following:

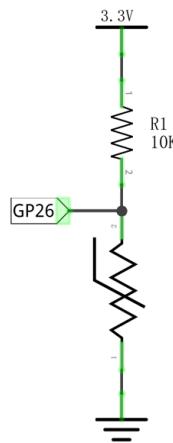

We can use the value measured by the ADC converter to obtain the resistance value of Thermistor, and then we can use the formula to obtain the temperature value.


Therefore, the temperature formula can be derived as:

$$T_2 = 1 / \left( \frac{1}{T_1} + \ln \left( \frac{R_t}{R} \right) / B \right)$$


## Circuit

The circuit of this project is similar to the one in the previous chapter. The only difference is that the Photoresistor is replaced by a Thermistor.

Schematic diagram

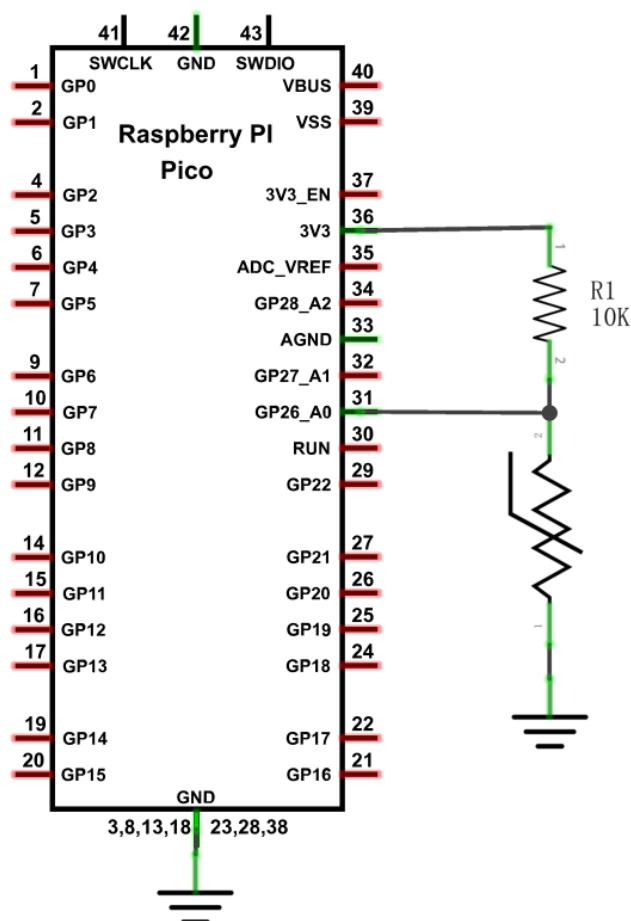

Hardware connection. If you need any support, please feel free to contact us via: [support@freenove.com](mailto:support@freenove.com)

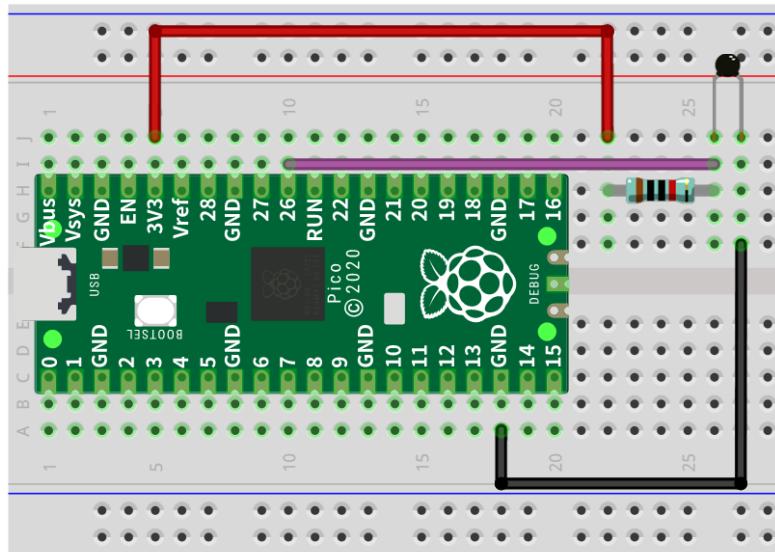

## Sketch

### Sketch\_11.1\_Thermometer

The screenshot shows the Arduino IDE interface. The title bar says "Sketch\_12.1\_Thermometer | Arduino 1.8.16". The menu bar includes File, Edit, Sketch, Tools, Help. Below the menu is a toolbar with icons for file operations. The main area contains the following C++ code:

```

1 #define PIN_ADC0 26
2 void setup() {
3     Serial.begin(115200);
4 }
5
6 void loop() {
7     int adcValue = analogRead(PIN_ADC0); //read ADC pin
8     double voltage = (float)adcValue / 1023.0 * 3.3; // calculate voltage
9     double Rt = 10 * voltage / (3.3 - voltage); //calculate resistance value of thermistor
10    double tempK = 1 / (1 / (273.15 + 25) + log(Rt / 10) / 3950.0); //calculate temperature (Kelvin)
11    double tempC = tempK - 273.15; //calculate temperature (Celsius)
12    Serial.println("Voltage: " + String(voltage) + "V\t" + "Kelvins: " + String(tempK) + "K\t" + "Temperature: " + String(tempC) + "C");
13    delay(1000);
14 }

```

Below the code, the status bar shows "Uploading..." and the terminal window displays the upload progress: "Loading into Flash: [=====] 89%". The bottom right corner of the terminal window says "Raspberry Pi Pico on COM10".

Upload the code to Pico and serial monitor will display the current ADC, voltage and temperature values. Try to “pinch” the thermistor (without touching the leads) with your index finger and thumb for a brief time, you should see that the temperature value increases.

The screenshot shows the Serial Monitor window titled "COM10". The text area displays a series of timestamped data lines:

Timestamp	Voltage	Kelvins	Temperature
17:16:27.302	1.61V	299.25K	26.10C
17:16:28.262	1.60V	299.43K	26.28C
17:16:29.217	1.59V	299.70K	26.55C
17:16:30.172	1.60V	299.61K	26.46C
17:16:31.138	1.61V	299.34K	26.19C
17:16:32.131	1.60V	299.52K	26.37C
17:16:33.081	1.62V	298.99K	25.84C
17:16:34.037	1.61V	299.17K	26.02C
17:16:34.992	1.61V	299.17K	26.02C
17:16:35.949	1.61V	299.25K	26.10C
17:16:36.907	1.62V	298.99K	25.84C
17:16:37.910	1.61V	299.17K	26.02C
17:16:38.867	1.61V	299.25K	26.10C

At the bottom, there are checkboxes for "Autoscroll" and "Show timestamp", and dropdown menus for "Newline", "115200 baud", and "Clear output".

If you have any concerns, please contact us via: [support@freenove.com](mailto:support@freenove.com)

Any concerns? [✉ support@freenove.com](mailto:support@freenove.com)

The following is the code:

```
1 #define PIN_ADC0 26
2 void setup() {
3     Serial.begin(115200);
4 }
5
6 void loop() {
7     int adcValue = analogRead(PIN_ADC0); //read ADC pin
8     double voltage = (float)adcValue / 1023.0 * 3.3;// calculate voltage
9     double Rt = 10 * voltage / (3.3 - voltage);//calculate resistance value of thermistor
10    double tempK = 1 / (1 / (273.15 + 25) + log(Rt / 10) / 3950.0);//calculate temperature
11    (Kelvin)
12    double tempC = tempK - 273.15;//calculate temperature (Celsius)
13    Serial.println("Voltage: " + String(voltage) + "V,\t\t" + "Kelvins: " + String(tempK) +
14    "K,\t" + "Temperature: " + String(tempC) + "C");
15    delay(1000);
16 }
```

In the code, the ADC value of ADC module A0 port is read, and then calculates the voltage and the resistance of thermistor according to Ohms Law. Finally, it calculates the temperature sensed by the thermistor, according to the formula.




# Chapter 12 WiFi Working Modes (Only for Pico W)

The biggest difference between the raspberry pi pico and the raspberry pie Pico W is that the raspberry pi pico W is equipped with a WiFi function module. At the beginning of this chapter, we will learn about the WiFi function of Pico W of Raspberry Pi.

If you have Pico in your hand, please change it to Pico W before continuing to learn.

## Project 12.1 Station mode

### Component List

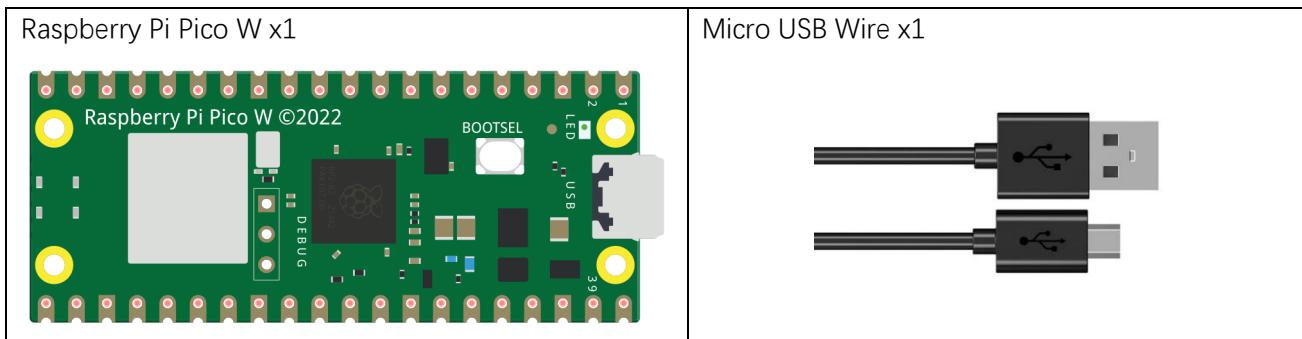


### Component knowledge

#### Wireless

Pico W has an on-board 2.4GHz wireless interface using an Infineon CYW43439. The antenna is an onboard antenna licensed from ABRACON (formerly ProAnt). The wireless interface is connected via SPI to the RP2040.


#### Station mode

When Pico W selects Station mode, it acts as a WiFi client. It can connect to the router network and communicate with other devices on the router via WiFi connection. As shown below, the PC is connected to the router, and if Pico W wants to communicate with the PC, it needs to be connected to the router.

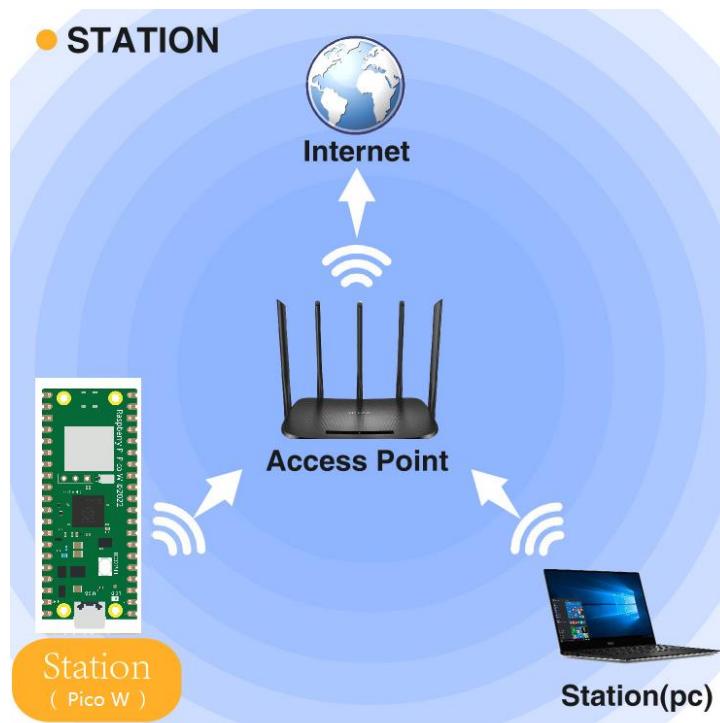

## Circuit

Connect Pico W to the computer using the USB cable.

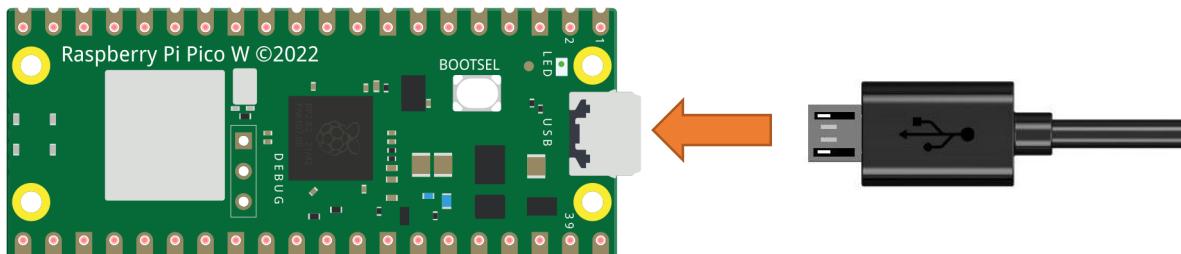



## Sketch

### Sketch\_12.1\_Station\_mode


```
Sketch_30.1_WiFi_Station | Arduino 1.8.18
File Edit Sketch Tools Help
Sketch_30.1_WiFi_Station
4 Author : www.freenove.com
5 Modification: 2022/09/29
6 ****
7 #include <WiFi.h>
8
9 const char *ssid_Router      = "*****"; //Enter the router name
10 const char *password_Router = "*****"; //Enter the router password
11
12 void setup(){
13     Serial.begin(115200);
14     delay(2000);
15     Serial.println("Setup start");
16     WiFi.begin(ssid_Router, password_Router);
17     Serial.println(String("Connecting to ")+ssid_Router);
18     while (WiFi.status() != WL_CONNECTED){
19         delay(500);
}
Done Saving.
```

Enter the correct Router name and password.

Raspberry Pi Pico W, 2MB (Sketch: 1MB, FS: 1MB), 133 MHz, Small (-Os) (standard), Disabled, Disabled, Disabled, None, Pico SDK, IPv4 Only on COM8

Because the names and passwords of routers are different, before the Sketch runs, users need to enter the correct router's name and password in the box as shown in the illustration above.

After making sure the router name and password are entered correctly, compile and upload codes to Pico W, open serial monitor and set baud rate to 115200. And then it will display as follows:

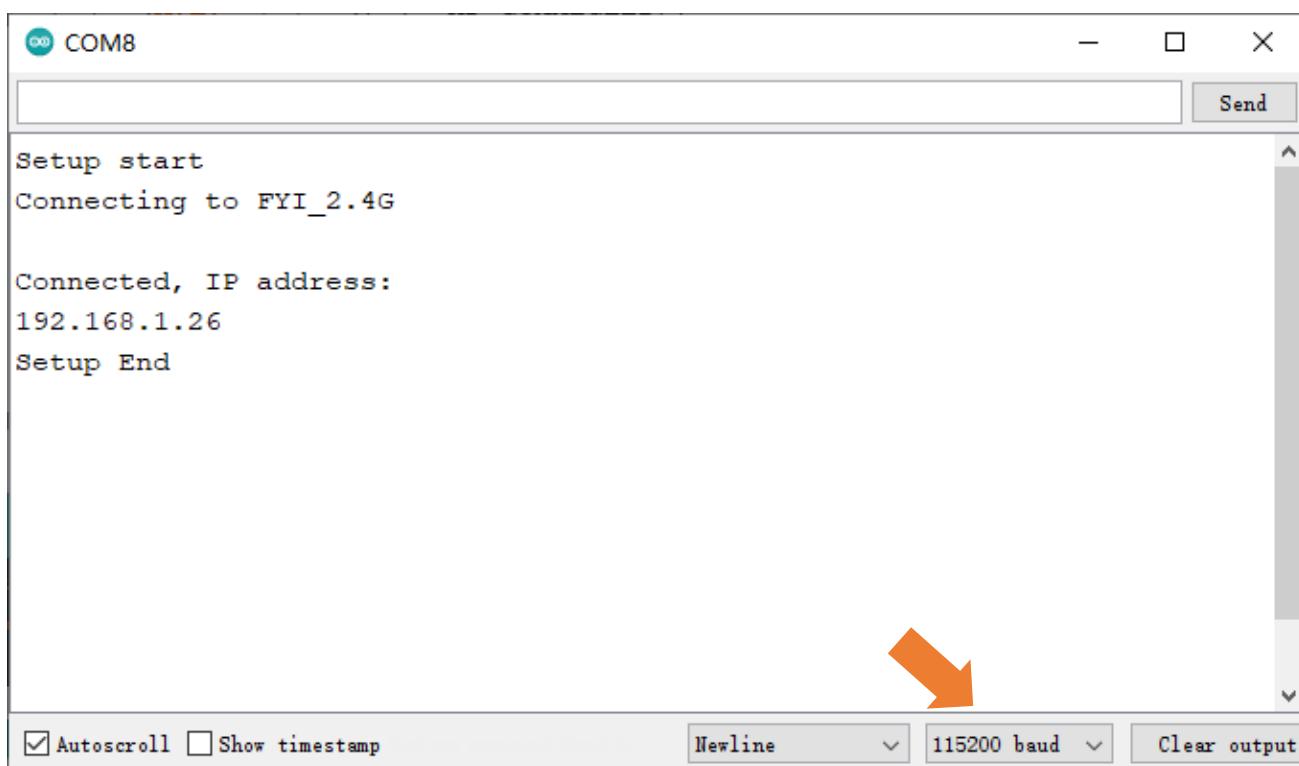

When PICO W successfully connects to "ssid\_Router", serial monitor will print out the IP address assigned to PICO W by the router.

The following is the program code:

```
1 #include <WiFi.h>
2
3 const char *ssid_Router      = "*****"; //Enter the router name
4 const char *password_Router = "*****"; //Enter the router password
5
6 void setup() {
7     Serial.begin(115200);
8     delay(2000);
9     Serial.println("Setup start");
10    WiFi.begin(ssid_Router, password_Router);
11    Serial.println(String("Connecting to ") + ssid_Router);
12    while (WiFi.status() != WL_CONNECTED) {
13        delay(500);
14        Serial.print(".");
15    }
16    Serial.println("\nConnected, IP address: ");
17    Serial.println(WiFi.localIP());
18    Serial.println("Setup End");
19 }
20 void loop() {
21 }
```



Include the WiFi Library header file of Pico W.

```
1 #include <WiFi.h>
```

Enter correct router name and password.

```
3 const char *ssid_Router = "*****"; //Enter the router name
4 const char *password_Router = "*****"; //Enter the router password
```

Set Pico W in Station mode and connect it to your router.

```
10 WiFi.begin(ssid_Router, password_Router);
```

Check whether Pico W has connected to router successfully every 0.5s.

```
12 while (WiFi.status() != WL_CONNECTED) {
13     delay(500);
14     Serial.print(".");
15 }
```

Serial monitor prints out the IP address assigned to Pico W.

```
17 Serial.println(WiFi.localIP());
```

Reference

### Class Station

Every time when using WiFi, you need to include header file "WiFi.h".

**begin(ssid, password,channel, bssid, connect):** PICO W is used as Station to connect hotspot.

**ssid:** WiFi hotspot name

**password:** WiFi hotspot password

**channel:** WiFi hotspot channel number; communicating through specified channel; optional parameter

**bssid:** mac address of WiFi hotspot, optional parameter

**connect:** boolean optional parameter, defaulting to true. If set as false, then PICO W won't connect WiFi.

**config(local\_ip, gateway, subnet, dns1, dns2):** set static local IP address.

**local\_ip:** station fixed IP address.

**subnet:** subnet mask

**dns1,dns2:** optional parameter. define IP address of domain name server

**status:** obtain the connection status of WiFi

**local IP():** obtian IP address in Station mode

**disconnect():** disconnect wifi

## Project 12.2 AP mode


### Component List & Circuit

Component List & Circuit are the same as in Section 30.1.

### Component knowledge


#### AP mode

When PICO W selects AP mode, it creates a hotspot network that is separate from the Internet and waits for other WiFi devices to connect. As shown in the figure below, PICO W is used as a hotspot. If a mobile phone or PC wants to communicate with PICO W, it must be connected to the hotspot of PICO W. Only after a connection is established with PICO W can they communicate.

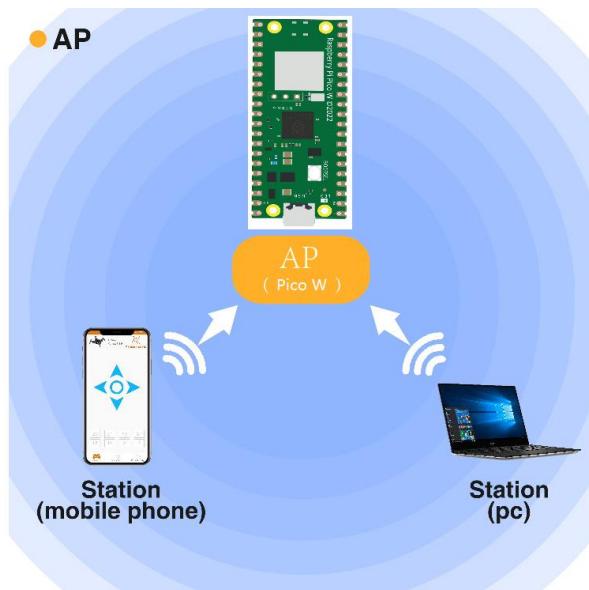

### Circuit

Connect Pico W to the computer using the USB cable.

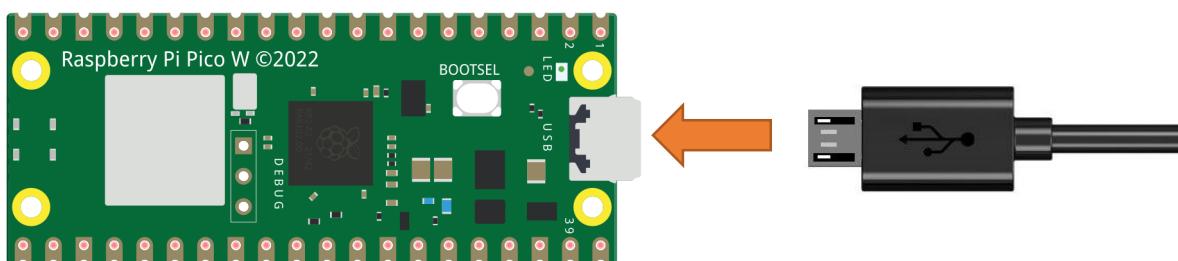



## Sketch

### Sketch\_12.2\_AP\_mode

```
Sketch_30.2_WiFi_AP | Arduino 1.8.18
File Edit Sketch Tools Help
Sketch_30.2_WiFi_AP
1 //*****
2   Filename      : WiFi AP
3   Description   : Set Pico
4   Author        : www.freenove.com
5   Modification  : 2022/09/20
6 ****
7 #include <WiFi.h>
8
9 const char *ssid_AP      = "WiFi_Name"; //Enter the router name
10 const char *password_AP = "12345678"; //Enter the router password
11
12 IPAddress local_IP(192,168,1,100); //Set the IP address of ESP8266 itself
13 IPAddress gateway(192,168,1,10); //Set the gateway of ESP8266 itself
14 IPAddress subnet(255,255,255,0); //Set the subnet mask for ESP32 itself
15
```


Done Saving.

ESP32 Pico W, 2MB (Sketch: 1MB, FS: 1MB), 133 MHz, Small (-Os) (standard), Disabled, Disabled, Disabled, None, Pico SDK, IPv4 Only on COM3

A callout bubble points to the code lines `const char *ssid_AP = "WiFi_Name";` and `const char *password_AP = "12345678";`. The text inside the bubble reads: "Set a name and a password for PICO W AP mode."

Before the Sketch runs, you can make any changes to the AP name and password for PICO W in the box as shown in the illustration above. Of course, you can leave it alone by default.


Compile and upload codes to PICO W, open the serial monitor and set the baud rate to 115200. And then it will display as follows.

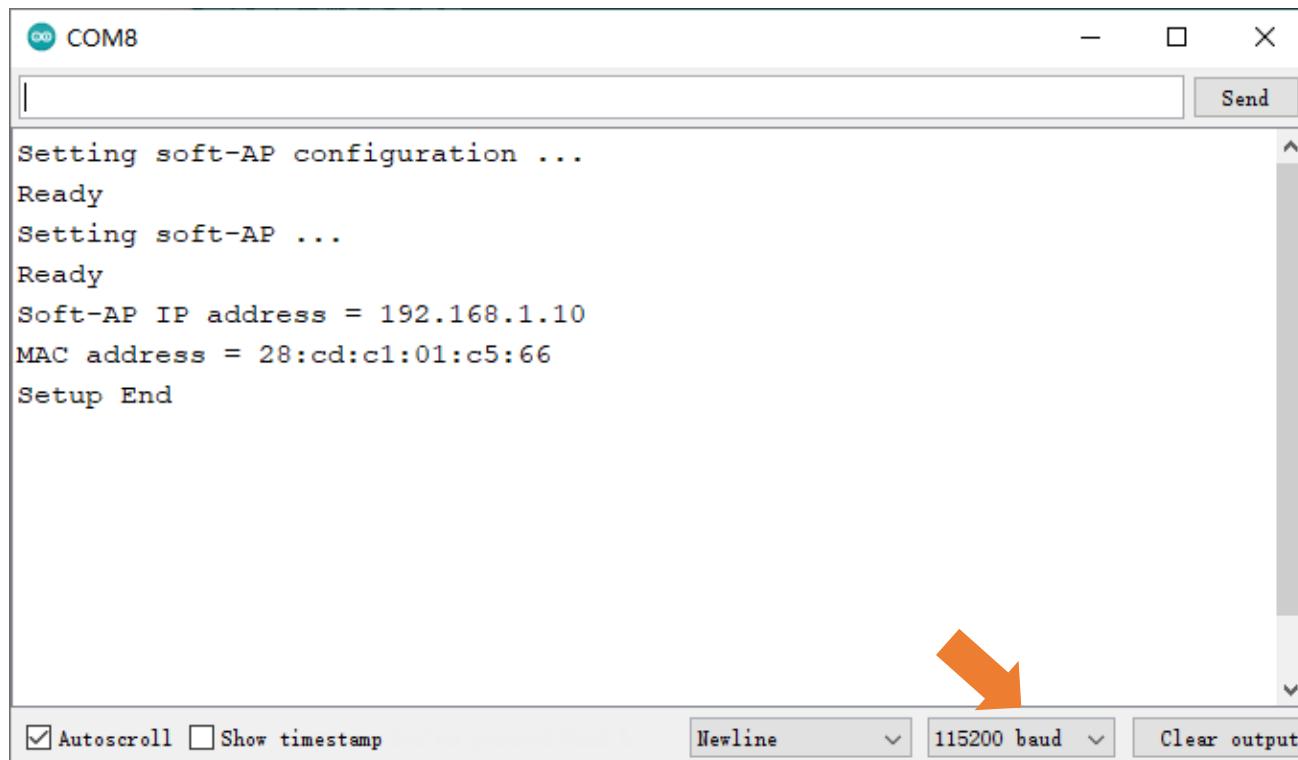

```
Setting soft-AP configuration ...
Ready
Setting soft-AP ...
Ready
Soft-AP IP address = 192.168.1.10
MAC address = 28:cd:c1:01:c5:66
Setup End
```

Autoscroll  Show timestamp      Newline      115200 baud      Clear output

When observing the print information of the serial monitor, turn on the WiFi scanning function of your phone, and you can see the ssid\_AP on PICO W, which is called "WiFi\_Name" in this Sketch. You can enter the password "12345678" to connect it or change its AP name and password by modifying Sketch.

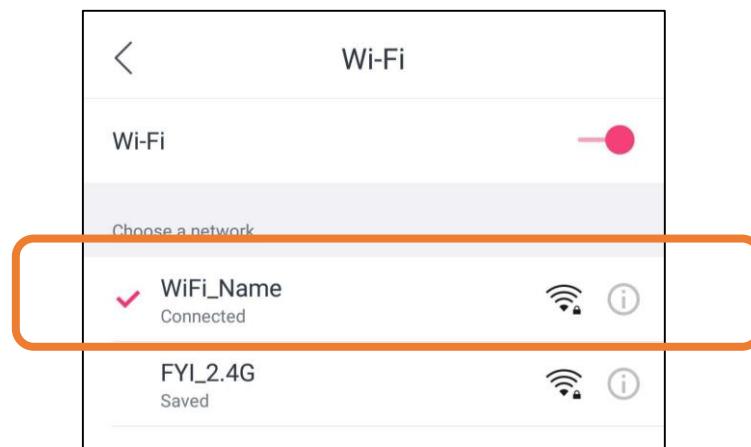

Note:

1. Every time you change the WiFi name and password in the code, please power off and then on again, and then upload the code. It is possible that the WiFi name and password have not actually changed due to the direct uploading of code without power. This is because Pico W WiFi module and RP2040 chip are separated. Only when the power is cut off can the WiFi name and password be flashed to the WiFi module again.
2. Pico W executes this code only to open a WiFi hotspot, and does not configure the code related to online data transmission, so the mobile phone will display no data after connection.



The following is the program code:

```

1 #include <WiFi.h>
2
3 const char *ssid_AP      = "WiFi_Name"; //Enter the router name
4 const char *password_AP = "12345678"; //Enter the router password
5
6 IPAddress local_IP(192, 168, 1, 100); //Set the IP address of PICO W itself
7 IPAddress gateway(192, 168, 1, 10); //Set the gateway of PICO W itself
8 IPAddress subnet(255, 255, 255, 0); //Set the subnet mask for PICO W itself
9
10 void setup() {
11     Serial.begin(115200);
12     delay(2000);
13     Serial.println("Setting soft-AP configuration ... ");
14     WiFi.disconnect();
15     WiFi.mode(WIFI_AP);
16     Serial.println(WiFi.softAPConfig(local_IP, gateway, subnet) ? "Ready" : "Failed!");
17     Serial.println("Setting soft-AP ... ");
18     boolean result = WiFi.softAP(ssid_AP, password_AP);
19     if(result) {
20         Serial.println("Ready");
21         Serial.println(String("Soft-AP IP address = ") + WiFi.softAPIP().toString());
22         Serial.println(String("MAC address = ") + WiFi.softAPmacAddress().c_str());
23     } else {
24         Serial.println("Failed!");
25     }
26     Serial.println("Setup End");
27 }
28
29 void loop() {
30 }
```

Include WiFi Library header file of PICO W.

```
1 #include <WiFi.h>
```

Enter correct AP name and password.

```

3 const char *ssid_AP      = "WiFi_Name"; //Enter the router name
4 const char *password_AP = "12345678"; //Enter the router password
```

Set PICO W in AP mode.

```
15 WiFi.mode(WIFI_AP);
```

Configure IP address, gateway and subnet mask for PICO W.

```
16 WiFi.softAPConfig(local_IP, gateway, subnet)
```

Turn on an AP in PICO W, whose name is set by ssid\_AP and password is set by password\_AP.

```
18 WiFi.softAP(ssid_AP, password_AP);
```

Check whether the AP is turned on successfully. If yes, print out IP and MAC address of AP established by PICO W. If no, print out the failure prompt.

```
19 if(result){  
20     Serial.println("Ready");  
21     Serial.println(String("Soft-AP IP address = ") + WiFi.softAPIP().toString());  
22     Serial.println(String("MAC address = ") + WiFi.softAPmacAddress().c_str());  
23 }else{  
24     Serial.println("Failed!");  
25 }  
26 Serial.println("Setup End");
```

Reference

### Class AP

Every time when using WiFi, you need to include header file "WiFi.h".

**softAP(ssid, password, channel, ssid\_hidden, max\_connection):**

**ssid:** WiFi hotspot name

**password:** WiFi hotspot password

**channel:** Number of WiFi connection channels, range 1-13. The default is 1.

**ssid\_hidden:** Whether to hide WiFi name from scanning by other devices. The default is not hide.

**max\_connection:** Maximum number of WiFi connected devices. The range is 1-4. The default is 4.

**softAPConfig(local\_ip, gateway, subnet):** set static local IP address.

**local\_ip:** station fixed IP address.

**Gateway:** gateway IP address

**subnet:** subnet mask

**softAP():** obtain IP address in AP mode

**softAPdisconnect ():** disconnect AP mode.



## Project 12.3 AP+Station mode

### Component List & Circuit

Component List & Circuit are the same as in Section 30.1.


### Component knowledge

#### AP+Station mode

In addition to AP mode and station mode, PICO W can also use AP mode and station mode at the same time. This mode contains the functions of the previous two modes. Turn on PICO W's station mode, connect it to the router network, and it can communicate with the Internet via the router. At the same time, turn on its AP mode to create a hotspot network. Other WiFi devices can choose to connect to the router network or the hotspot network to communicate with PICO W.

### Circuit

Connect Pico W to the computer using the USB cable.

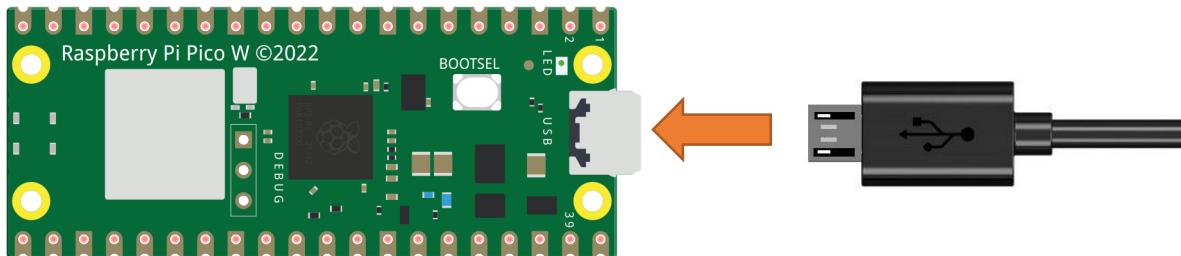

## Sketch

### Sketch\_12.3\_AP\_Station\_mode

```
#include <ESP8266WiFi.h>

const char *ssid_Router      = "*****"; //Enter the router name
const char *password_Router = "*****"; //Enter the router password
const char *ssid_AP          = "WiFi_Name"; //Enter the router name
const char *password_AP      = "12345678"; //Enter the router password

void setup() {
    Serial.begin(74880);
    Serial.println("Setting soft-AP configuration ... ");
    WiFi.disconnect();
    WiFi.mode(WIFI_AP);
    Serial.println("Setting soft-AP ... ");
    boolean result = WiFi.softAP(ssid_AP, password_AP);
    if(result){
        Serial.println("Ready");
        Serial.println(String("Soft-AP IP address = ") + WiFi.softAPIP().toString());
        Serial.println(String("MAC address = ") + WiFi.softAPmacAddress().c_str());
    }
}

Done uploading.

Leaving...
Hard resetting via RTS pin...
```

BIGache + 32KB IRAM (balanced). Use pgm\_read macros for IRAM/PROGMEM, 4MB (FS:3MB OTA:~512KB), 2, v2 Lower Memory, Disabled, None, Only Sketch, 115200 on COM4

It is analogous to Project 12.1 and Project 12.2. Before running the Sketch, you need to modify ssid\_Router, password\_Router, ssid\_AP and password\_AP shown in the box of the illustration above.



After making sure that Sketch is modified correctly, compile and upload codes to PICO W, open serial monitor and set baud rate to 115200. And then it will display as follows:

```

COM8
Ready
Soft-AP IP address = 192.168.42.1
MAC address = 28:cd:c1:01:c5:66


Setting Station configuration ...
Connecting to FYI_2.4G

Connected, IP address:
192.168.42.1
Setup End

```

Autoscroll  Show timestamp      Newline      115200 baud      Clear output

When observing the print information of the serial monitor, turn on the WiFi scanning function of your phone, and you can see the ssid\_AP on PICO W.

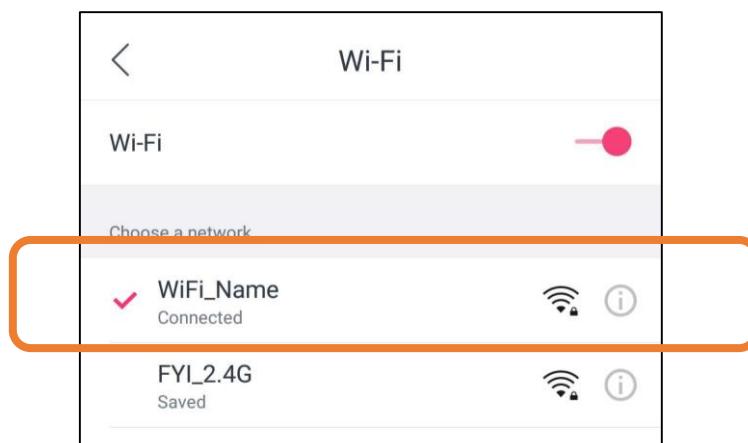

The following is the program code:

```

1 #include <WiFi.h>
2
3 const char *ssid_Router      = "*****"; //Enter the router name
4 const char *password_Router = "*****"; //Enter the router password
5 const char *ssid_AP          = "WiFi_Name"; //Enter the AP name
6 const char *password_AP      = "12345678"; //Enter the AP password
7
8 void setup() {

```

```
9 Serial.begin(115200);
10 Serial.println("Setting soft-AP configuration ... ");
11 WiFi.disconnect();
12 WiFi.mode(WIFI_AP);
13 Serial.println("Setting soft-AP ... ");
14 boolean result = WiFi.softAP(ssid_AP, password_AP);
15 if(result){
16     Serial.println("Ready");
17     Serial.println(String("Soft-AP IP address = ") + WiFi.softAPIP().toString());
18     Serial.println(String("MAC address = ") + WiFi.softAPmacAddress().c_str());
19 }else{
20     Serial.println("Failed!");
21 }
22
23 Serial.println("\nSetting Station configuration ... ");
24 WiFi.begin(ssid_Router, password_Router);
25 Serial.println(String("Connecting to ") + ssid_Router);
26 while (WiFi.status() != WL_CONNECTED) {
27     delay(500);
28     Serial.print(".");
29 }
30 Serial.println("\nConnected, IP address: ");
31 Serial.println(WiFi.localIP());
32 Serial.println("Setup End");
33 }
34
35 void loop() {
36 }
```




# Chapter 13 TCP/IP (Only for Pico W)

In this chapter, we will introduce how PICO W implements network communications based on TCP/IP protocol. There are two roles in TCP/IP communication, namely Server and Client, which will be implemented respectively with two projects in this chapter.

## Project 13.1 As Client

In this section, PICO W is used as Client to connect Server on the same LAN and communicate with it.

### Component List

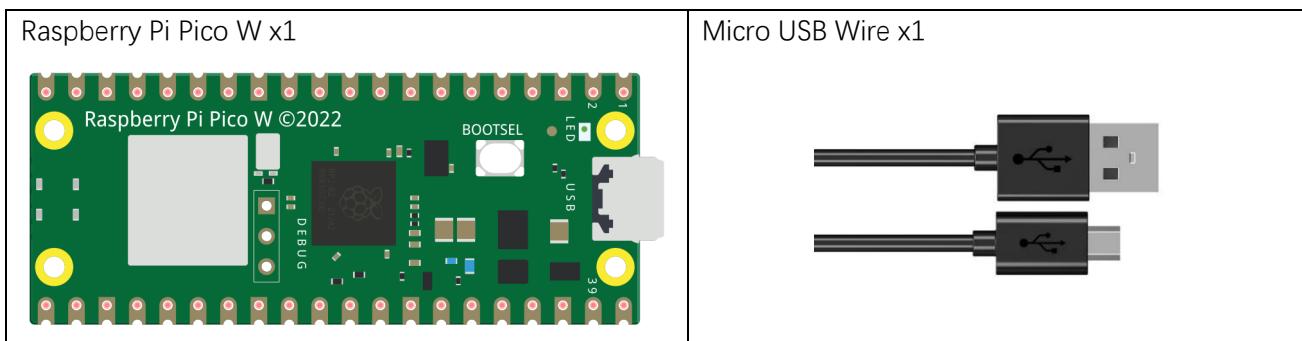


### Component knowledge

#### TCP connection


Before transmitting data, TCP needs to establish a logical connection between the sending end and the receiving end. It provides reliable and error-free data transmission between the two computers. In the TCP connection, the client and the server must be clarified. The client sends a connection request to the server, and each time such a request is proposed, a "three-times handshake" is required.

Three-times handshake: In the TCP protocol, during the preparation phase of sending data, the client and the server interact three times to ensure the reliability of the connection, which is called "three-times handshake". The first handshake, the client sends a connection request to the server and waits for the server to confirm. The second handshake, the server sends a response back to the client informing that it has received the connection request.

The third handshake, the client sends a confirmation message to the server again to confirm the connection.

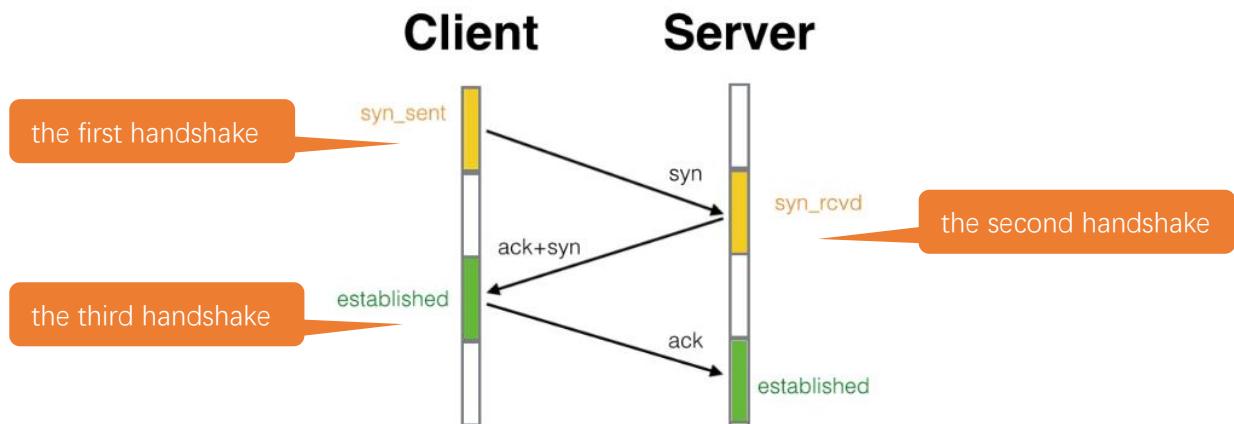

TCP is a connection-oriented, low-level transmission control protocol. After TCP establishes a connection, the client and server can send and receive messages to each other, and the connection will always exist as long as the client or server does not initiate disconnection. Each time one party sends a message, the other party will reply with an ack signal.

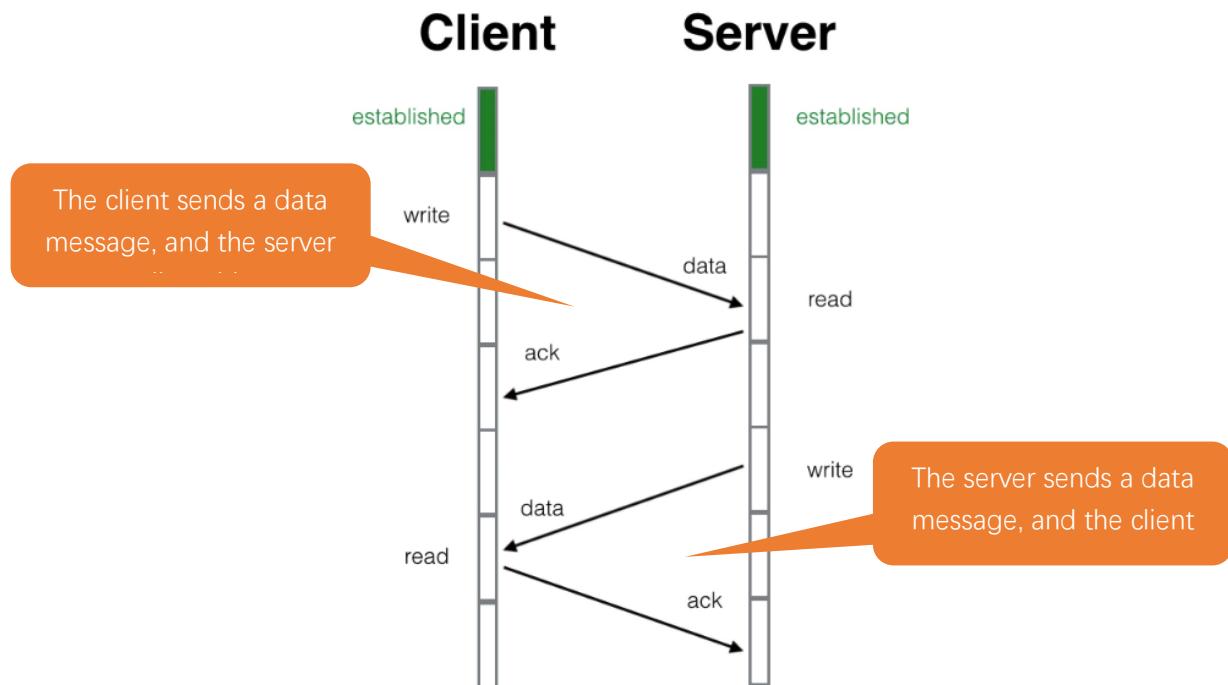



## Install Processing

In this tutorial, we use Processing to build a simple TCP/IP communication platform.

If you've not installed Processing, you can download it by clicking <https://processing.org/download/>. You can choose an appropriate version to download according to your PC system.


The screenshot shows the official Processing website. At the top, there's a navigation bar with links for "Processing", "p5.js", "Processing.py", "Processing for Android", "Processing for Pi", and "Processing Foundation". Below the navigation bar is a large banner featuring the word "Processing" in a bold, sans-serif font, overlaid on a dark background with a geometric, wireframe-like pattern. To the right of the banner is a search bar with a magnifying glass icon. On the left side of the main content area, there's a sidebar with links: "Cover", "Download", "Donate", "Exhibition", "Reference", "Libraries", "Tools", "Environment", "Tutorials", "Examples", "Books", "Overview", and "People". In the center, under the heading "Download Processing", it says "Processing is available for Linux, Mac OS X, and Windows. Select your choice to download the software below." Below this text is a large circular logo with a stylized "P" inside. To the right of the logo, it says "3.5.4 (17 January 2020)". Underneath the logo, there are download links for "Windows 64-bit", "Windows 32-bit", "Linux 64-bit", and "Mac OS X".

Unzip the downloaded file to your computer. Click "processing.exe" as the figure below to run this software.


core	2020/1/17 12:16
java	2020/1/17 12:17
lib	2020/1/17 12:16
modes	2020/1/17 12:16
tools	2020/1/17 12:16
processing.exe	2020/1/17 12:16
processing-java.exe	2020/1/17 12:16
revisions.txt	2020/1/17 12:16

Use Server mode for communication

Open the “**Freenove\_Basic\_Starter\_Kit\_for\_Raspberry\_Pi\_Pico\Sketches\Sketch\_13.1\_WiFiClient\sketchWiFi\sketchWiFi.pde**”, and click “Run”.

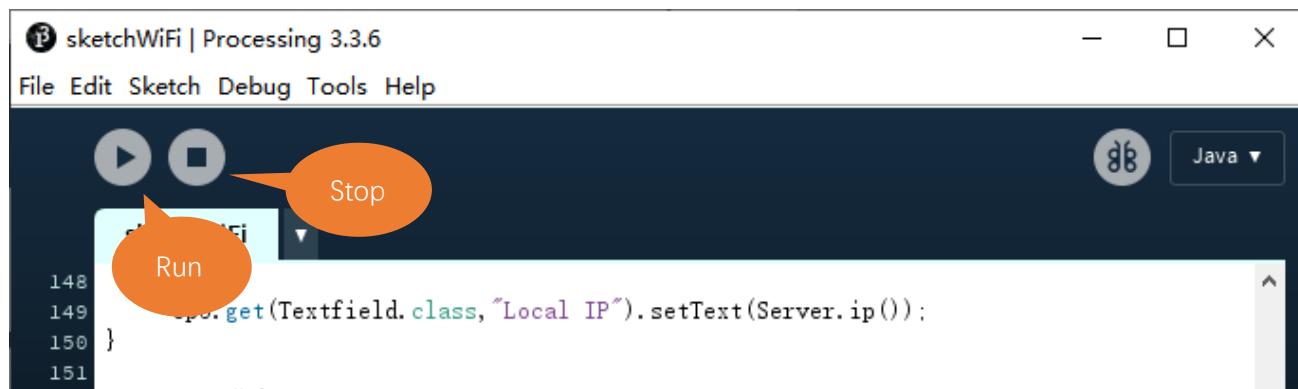


The new pop-up interface is as follows. If PICO W is used as client, select TCP SERVER mode for sketchWiFi.

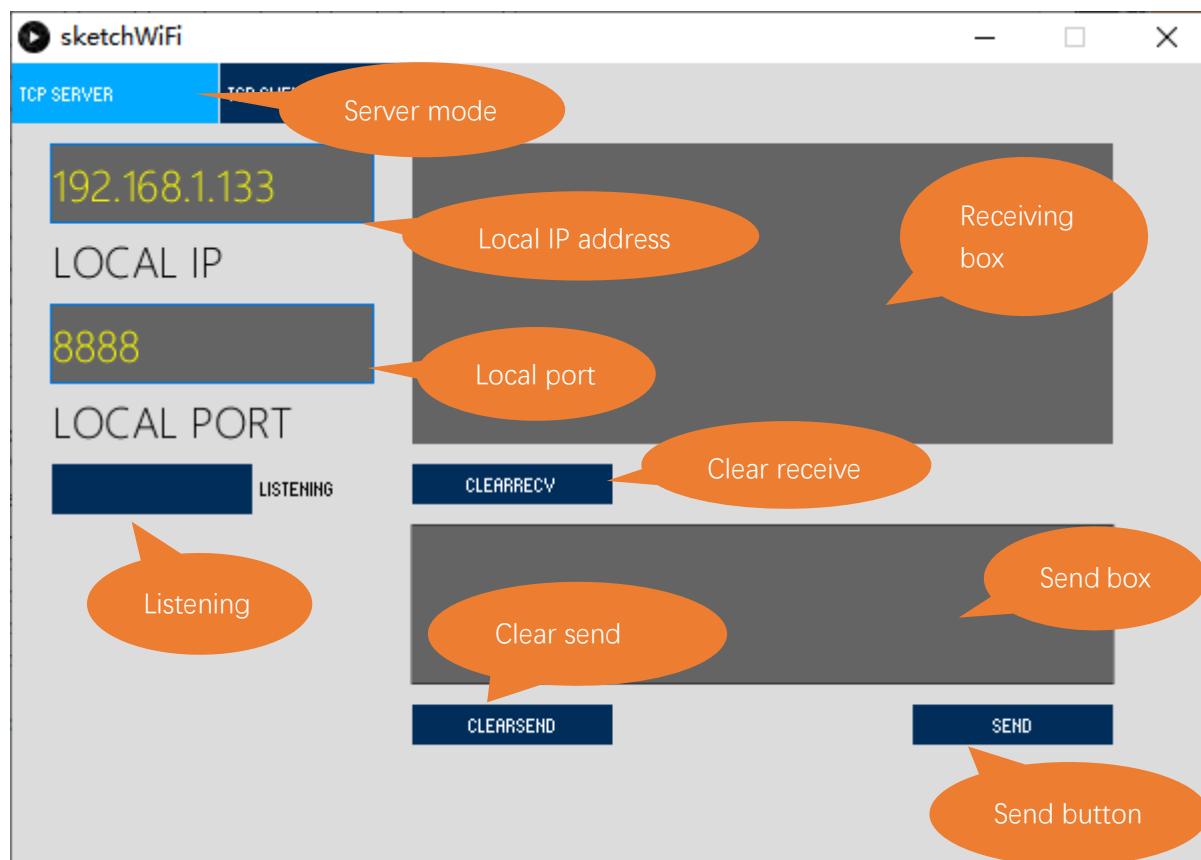

When sketchWiFi selects TCP SERVER mode, Pico W Sketch needs to be changed according to sketchWiFi's displaying of LOCAL IP or LOCAL PORT.

If PICO W serves as server, select TCP CLIENT mode for sketchWiFi.

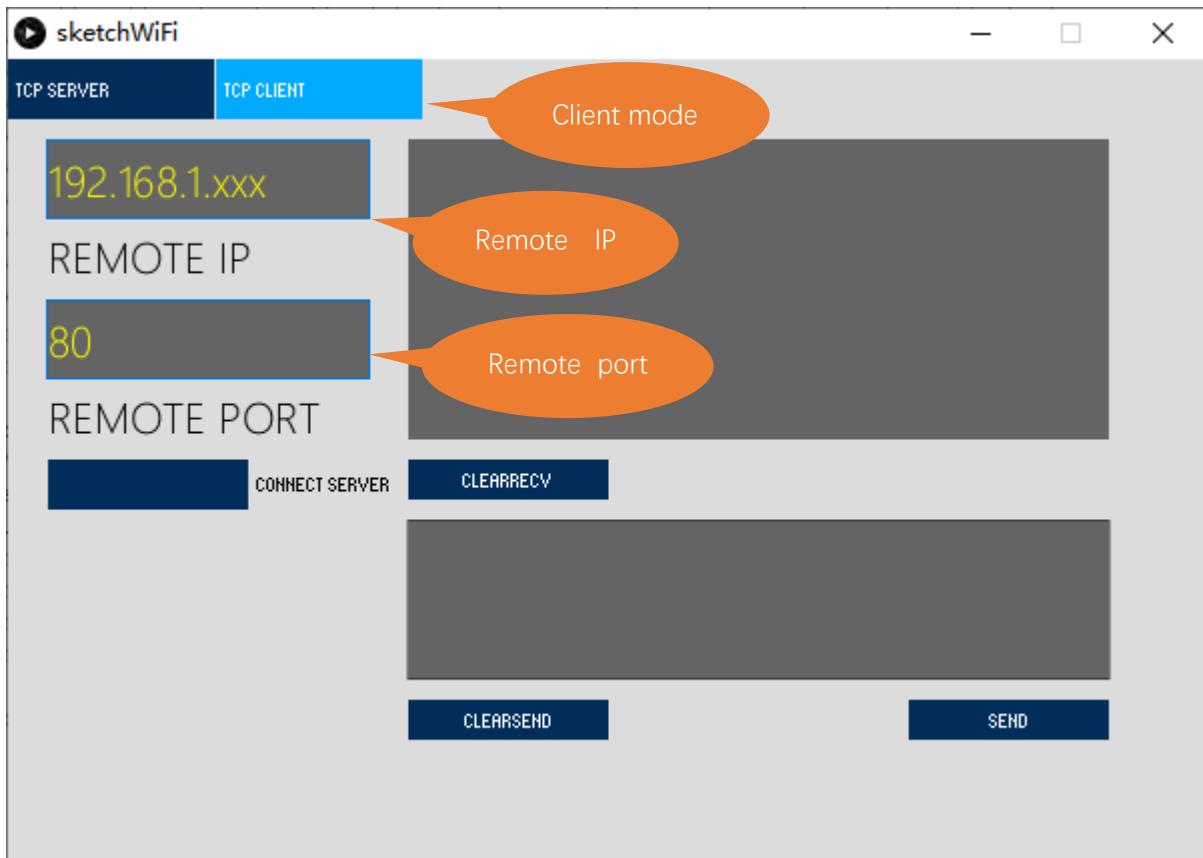

When sketchWiFi selects TCP CLIENT mode, the LOCAL IP and LOCAL PORT of sketchWiFi need to be changed according to the IP address and port number printed by the serial monitor.

**Mode selection:** select **Server mode/Client mode**.

**IP address:** In server mode, this option does not need to be filled in, and the computer will automatically obtain the IP address.

In client mode, fill in the remote IP address to be connected.

**Port number:** In server mode, fill in a port number for client devices to make an access connection.

In client mode, fill in port number given by the Server devices to make an access connection.

**Start button:** In server mode, push the button, then the computer will serve as server and open a port number for client to make access connection. During this period, the computer will keep monitoring.

In client mode, before pushing the button, please make sure the server is on, remote IP address and remote port number is correct; push the button, and the computer will make access connection to the remote port number of the remote IP as a client.


**clear receive:** clear out the content in the receiving text box

**clear send:** clear out the content in the sending text box

**Sending button:** push the sending button, the computer will send the content in the text box to others.

## Circuit


Connect Pico W to the computer using the USB cable.

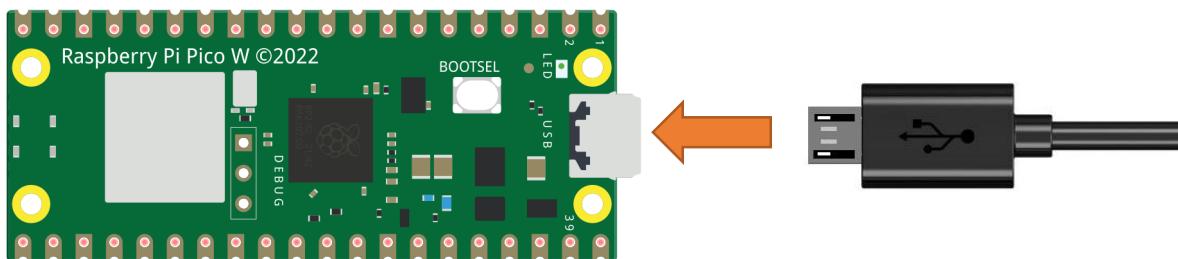


## Sketch

If you have not installed “ControlP5”, please follow the following steps to continue the installation, if you have installed, please skip this section.


Open Processing.

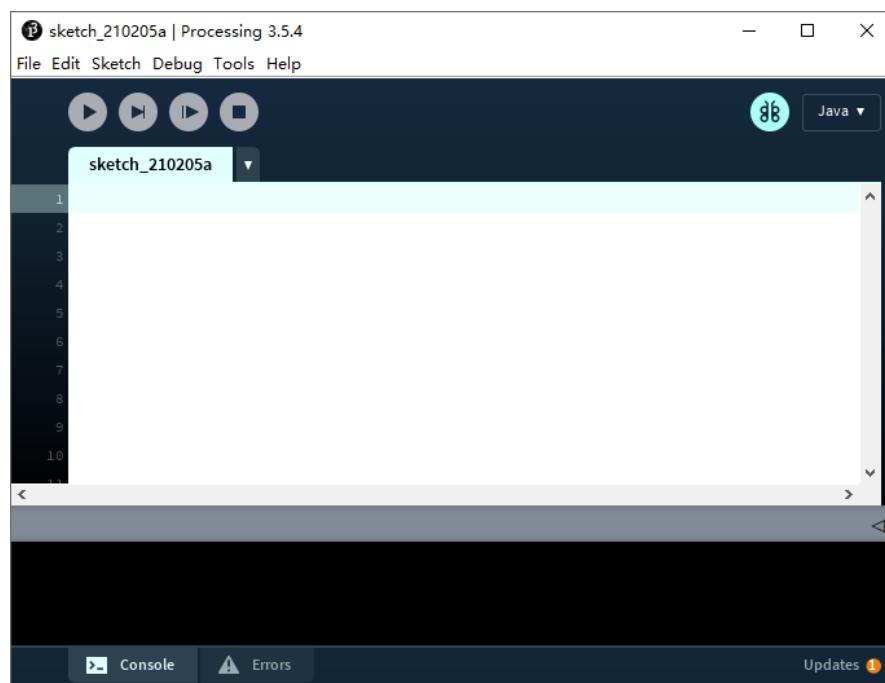


Click Add Tool under Tools.

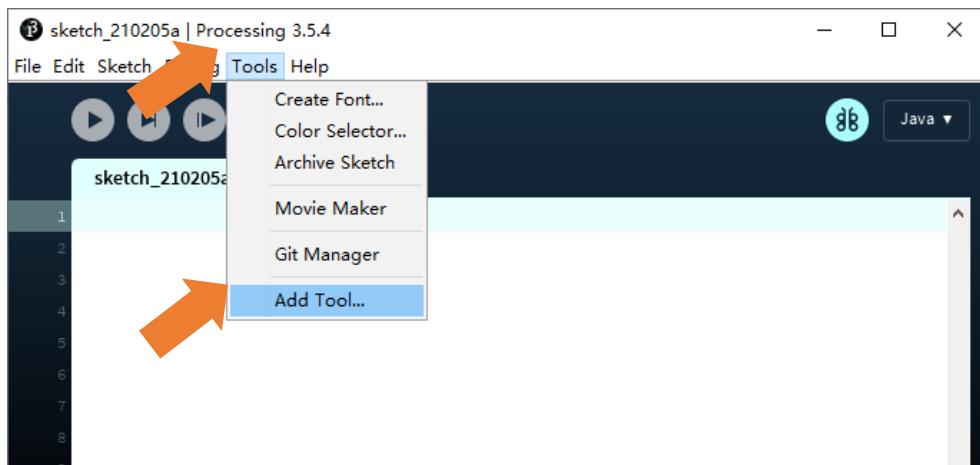


Select Libraries in the pop-up window.

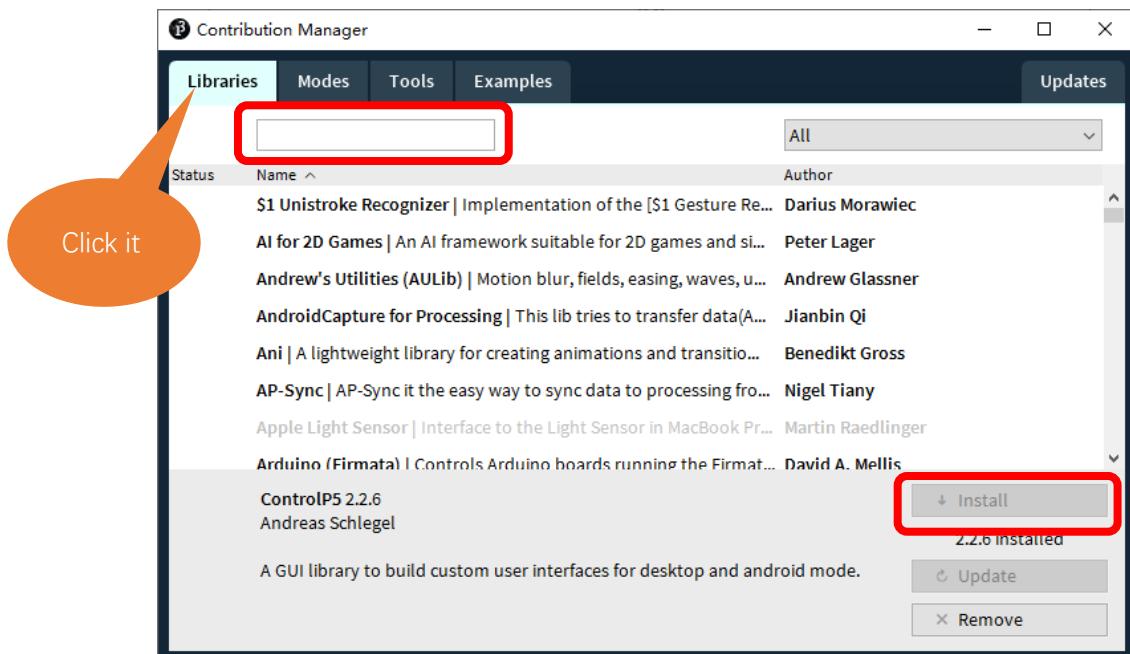

Input "ControlP5" in the searching box, and then select the option as below. Click "Install" and wait for the installation to finish.

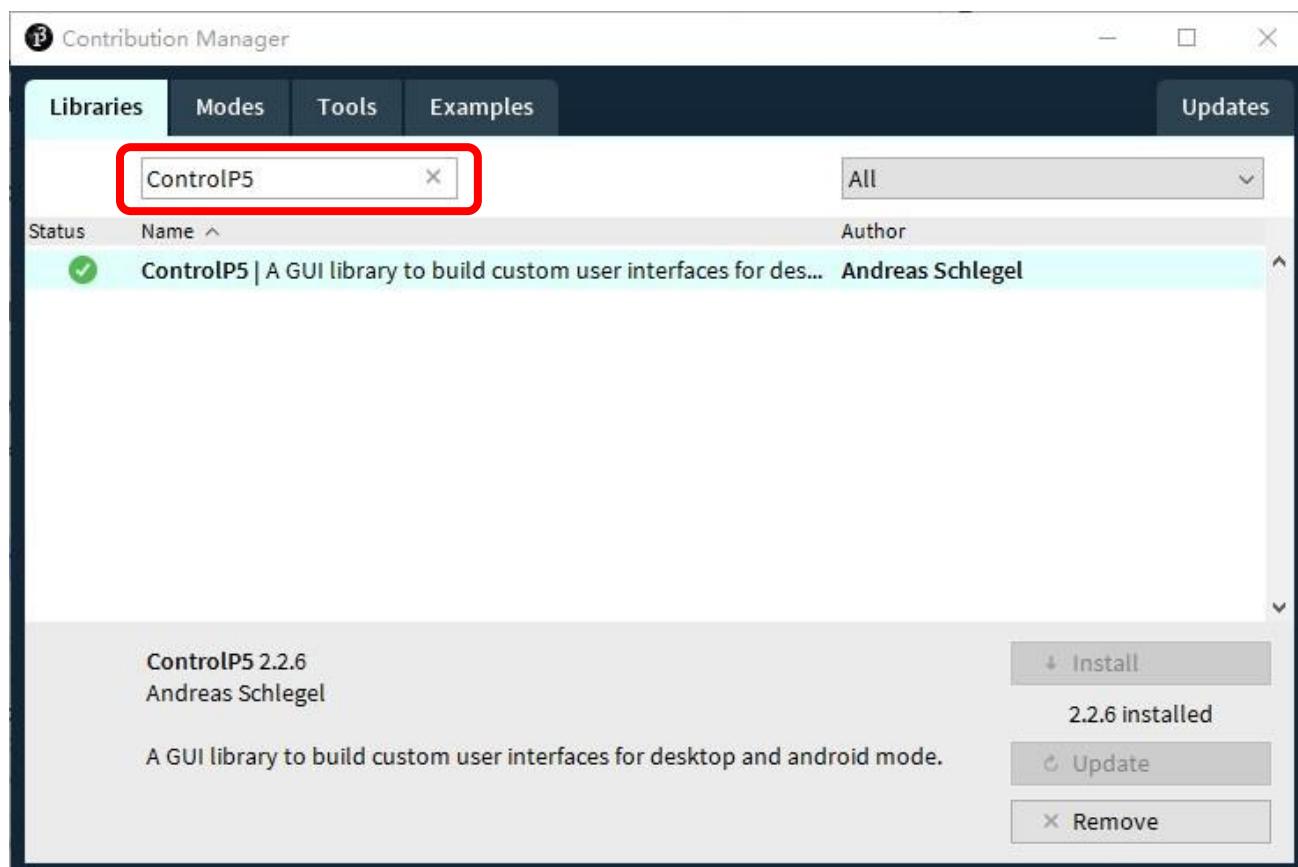


You can also click Add Library under 'Import Library' under 'Sketch'.

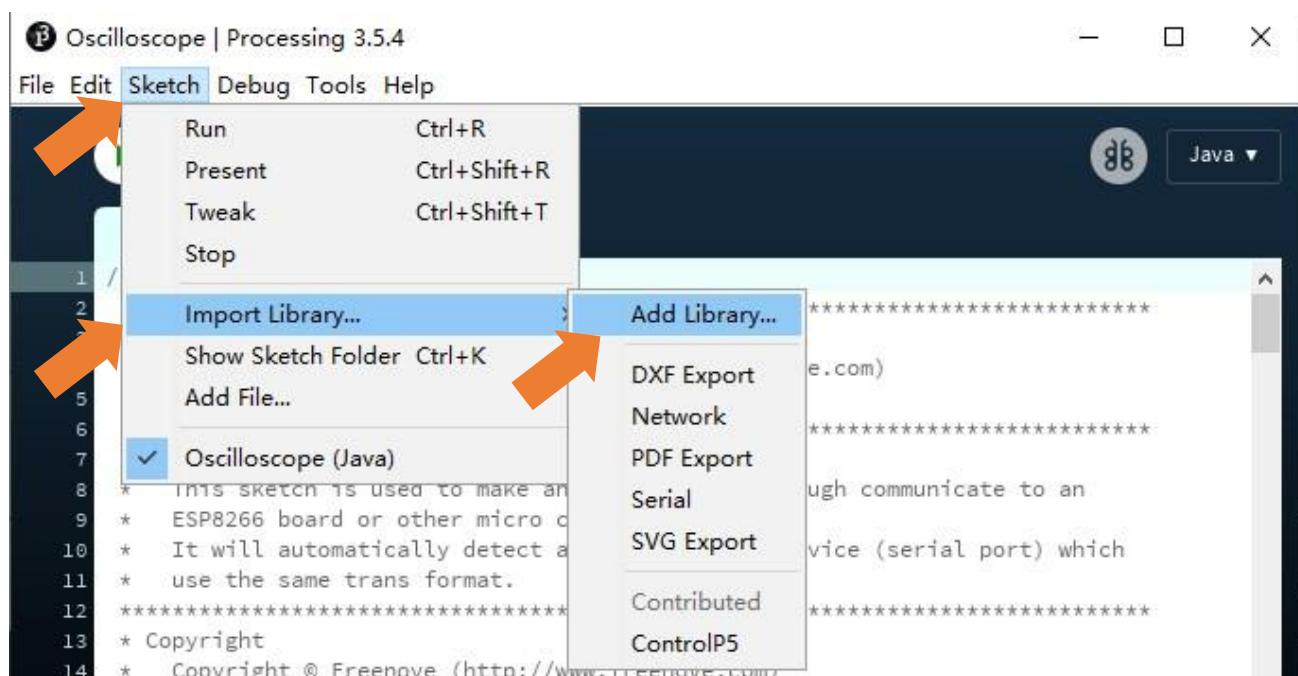




### Sketch\_13.1\_As\_Client


Before running the Sketch, please open “sketchWiFi.pde.” first, and click “Run”.

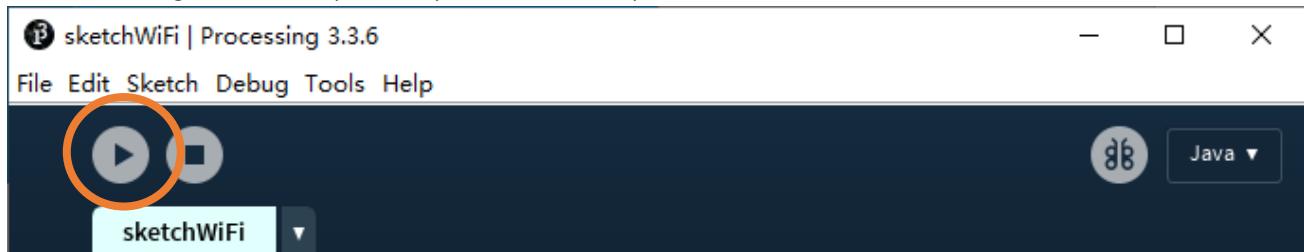

The newly pop up window will use the computer's IP address by default and open a data monitor port.

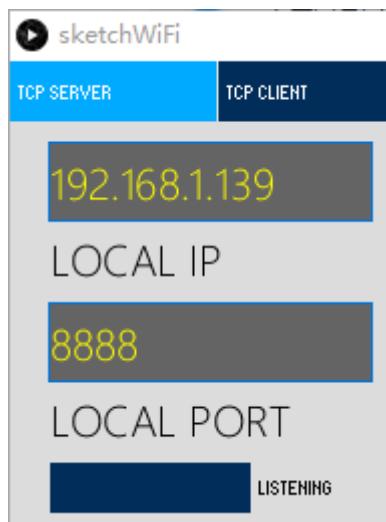

Click LISTENING, turn on TCP SERVER's data listening function and wait for PICO W to connect.

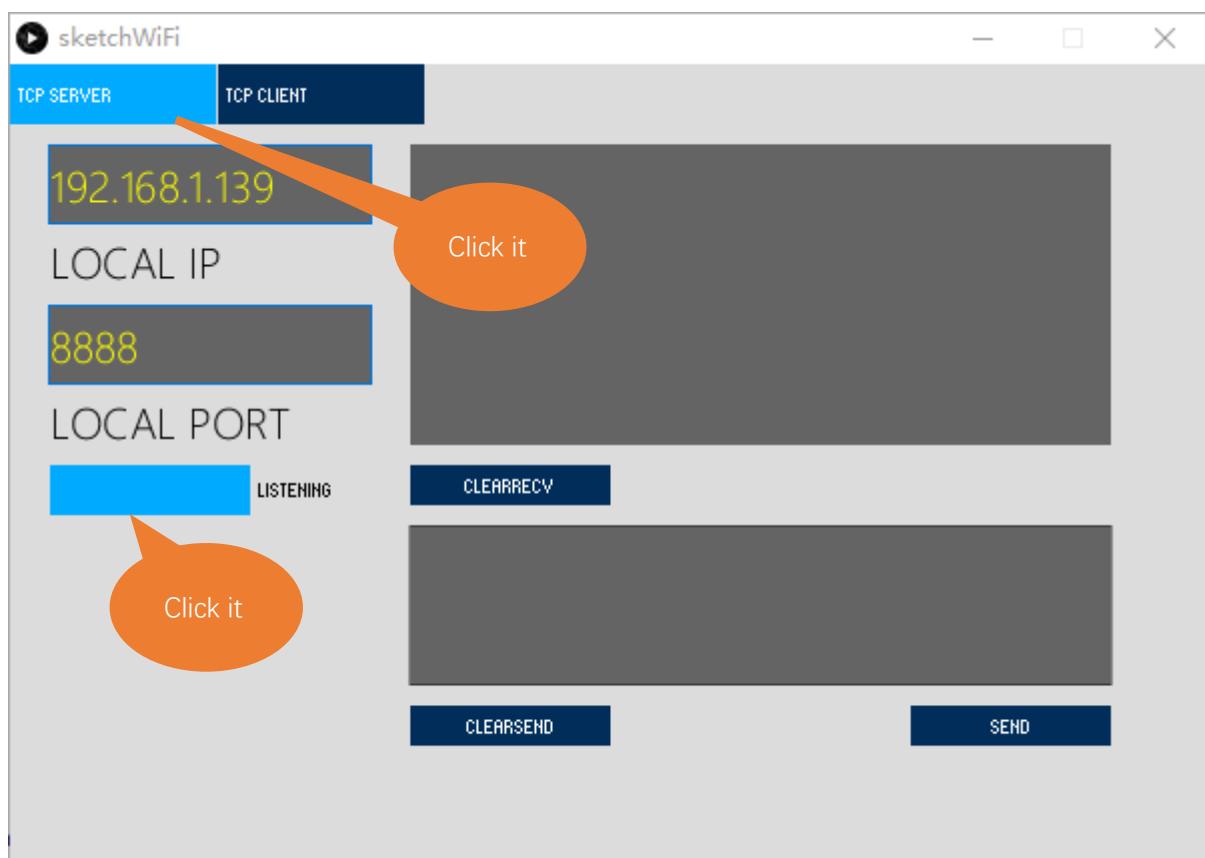

Next, open Sketch\_13.1\_WiFiClient.ino. Before running it, please change the following information based on "LOCAL IP" and "LOCAL PORT" in the figure above.


```
#include <WiFi.h>

const char *ssid_Router      = "*****"; //Enter the router name
const char *password_Router = "*****"; //Enter the router password
#define    REMOTE_IP          "*****" //input the remote server which is you want to connect
#define    REMOTE_PORT         8888   //input the remote port which is the remote provide

WiFiClient client;
```


REMOTE\_IP needs to be filled in according to the interface of sketchWiFi.pde. Taking this tutorial as an example, its REMOTE IP is “192.168.1.139”. Generally, by default, the ports do not need to change its value.

Compile and upload code to PICO W, open the serial monitor and set the baud rate to 115200. PICO W connects router, obtains IP address and sends access request to server IP address on the same LAN till the connection is successful. When connect successfully, PICO W can send messages to server.

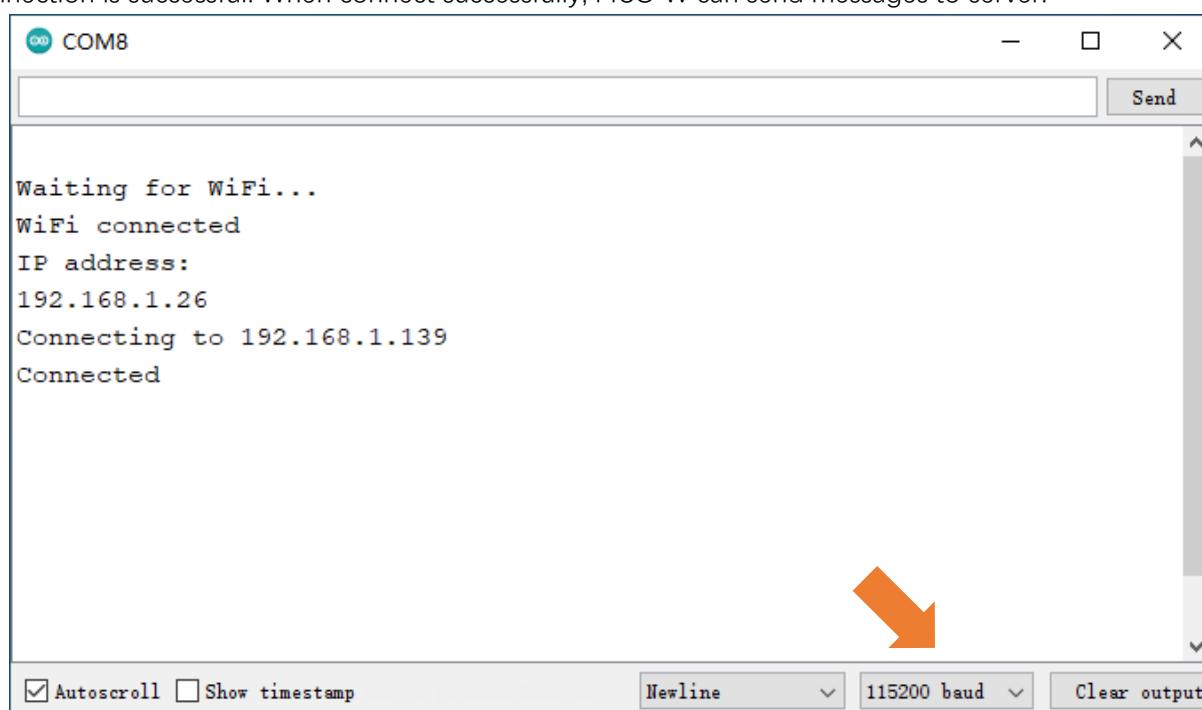



PICO W connects with TCP SERVER, and TCP SERVER receives messages from PICO W, as shown in the figure below.

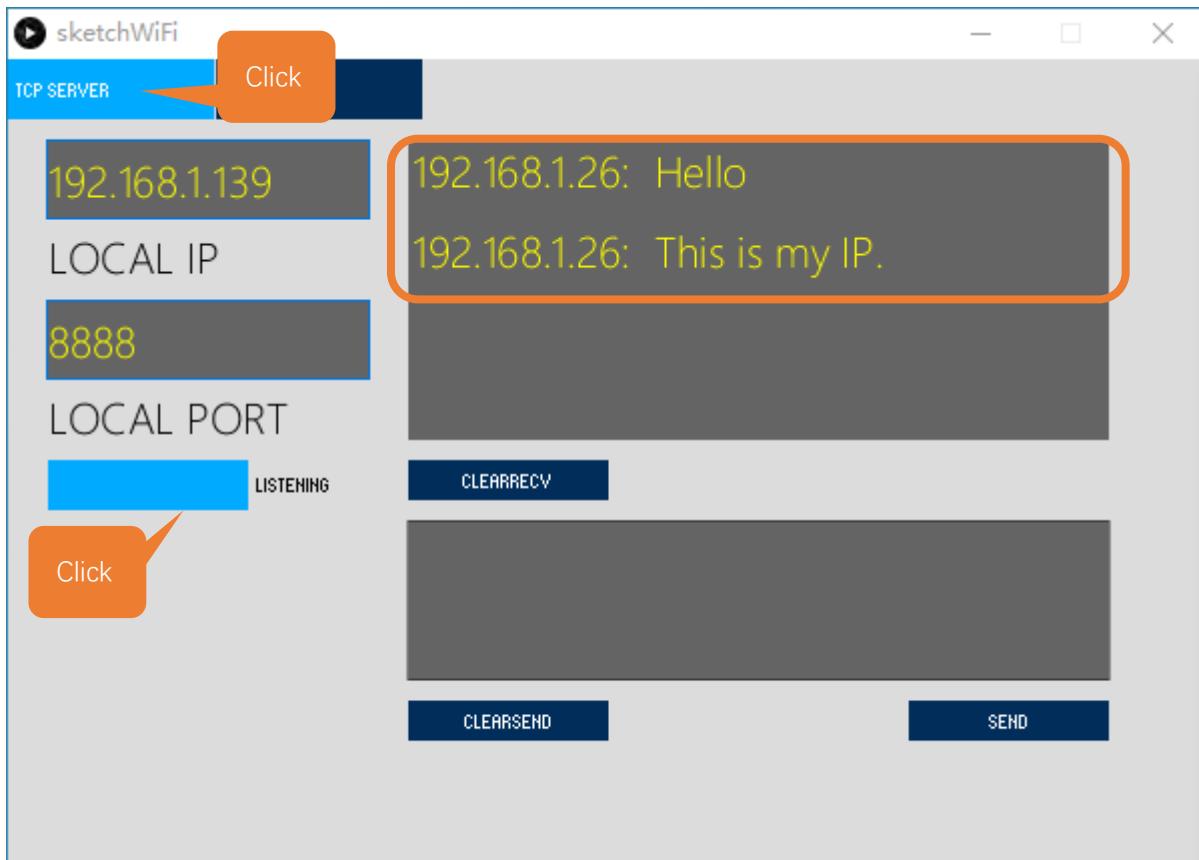

At this point, you can send data to Pico W through sketchWiFi. Pico W will send the received data back to sketchWiFi after receiving it.

The following is the program code:

```
1 #include <WiFi.h>
2
3 const char *ssid_Router      = "*****"; //Enter the router name
4 const char *password_Router = "*****"; //Enter the router password
5 #define    REMOTE_IP        "*****"   //input the remote server which is you want to connect
6 #define    REMOTE_PORT       8888      //input the remote port which is the remote provide
7 WiFiClient client;
8
9 void setup() {
10   Serial.begin(115200);
11   delay(10);
12
13   WiFi.begin(ssid_Router, password_Router);
14   Serial.print("\nWaiting for WiFi... ");
15   while (WiFi.status() != WL_CONNECTED) {
16     Serial.print(".");
17     delay(500);
18   }
19   Serial.println("");
20   Serial.println("WiFi connected");
21   Serial.println("IP address: ");
22   Serial.println(WiFi.localIP());
23   delay(500);
24
25   Serial.print("Connecting to ");
26   Serial.println(REMOTE_IP);
27
28   while (!client.connect(REMOTE_IP, REMOTE_PORT)) {
29     Serial.println("Connection failed.");
30     Serial.println("Waiting a moment before retrying... ");
31   }
32   Serial.println("Connected");
33   client.print("Hello\n");
34   client.print("This is my IP.\n");
35
36 void loop() {
37   if (client.available() > 0) {
38     delay(20);
39     //read back one line from the server
40     String line = client.readString();
41     Serial.println(REMOTE_IP + String(":") + line);
42   }
}
```

```

43   if (Serial.available() > 0) {
44     delay(20);
45     String line = Serial.readString();
46     client.print(line);
47   }
48   if (client.connected () == 0) {
49     client.stop();
50     WiFi.disconnect();
51   }
52 }
```

Add WiFi function header file.

```
1 #include <WiFi.h>
```

Enter the actual router name, password, remote server IP address, and port number.

```

3 const char *ssid_Router      = "*****"; //Enter the router name
4 const char *password_Router = "*****"; //Enter the router password
5 #define    REMOTE_IP        "*****"  //input the remote server which is you want to connect
6 #define    REMOTE_PORT       8888     //input the remote port which is the remote provide
```

Apply for the method class of WiFiClient.

```
7 WiFiClient client;
```

Connect specified WiFi until it is successful. If the name and password of WiFi are correct but it still fails to connect. Please disconnect the power supply and try again several times.

```

13 WiFi.begin(ssid_Router, password_Router);
14 Serial.print("\nWaiting for WiFi... ");
15 while (WiFi.status() != WL_CONNECTED) {
16   Serial.print(".");
17   delay(500);
18 }
```

Send connection request to remote server until connect successfully. When connect successfully, print out the connecting prompt on the serial monitor and send messages to remote server.

```

28 while (!client.connect(REMOTE_IP, REMOTE_PORT)) {//Connect to Server
29   Serial.println("Connection failed.");
30   Serial.println("Waiting a moment before retrying... ");
31 }
32 Serial.println("Connected");
33 client.print("Hello\n");
```

When PICO W receive messages from servers, it will print them out via serial port; Users can also send messages to servers from serial port.

```

37 if (client.available() > 0) {
38   delay(20);
39   //read back one line from the server
40   String line = client.readString();
41   Serial.println(REMOTE_IP + String(":") + line);
42 }
43 if (Serial.available() > 0) {
```

**Any concerns? ✉ support@freenove.com**

```
44     delay(20);  
45     String line = Serial.readString();  
46     client.print(line);  
47 }
```

If the server is disconnected, turn off WiFi of PICO W.

```
48 if (client.connected () == false) {  
49     client.stop();  
50     WiFi.disconnect();  
51 }
```

#### Reference

##### Class Client

Every time when using Client, you need to include header file "WiFi.h"

**connect(ip, port, timeout)/connect(\*host, port, timeout)**: establish a TCP connection.

**ip, \*host**: ip address of target server

**port**: port number of target server

**timeout**: connection timeout

**connected()**: judge whether client is connecting. If return value is 1, then connect successfully; If return value is 0, then fail to connect.

**stop()**: stop tcp connection

**print()**: send data to server connecting to client

**available()**: return to the number of bytes readable in receive buffer, if no, return to 0 or -1.

**read()**: read one byte of data in receive buffer


**readString()**: read string in receive buffer



## Project 13.2 As Server


In this section, PICO W is used as a server to wait for the connection and communication of client on the same LAN.

### Component List

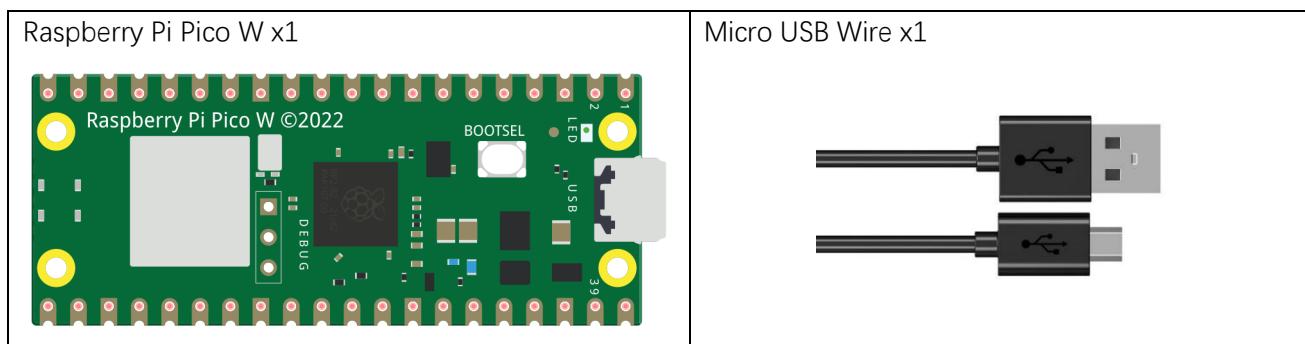

### Circuit


Connect Pico W to the computer using the USB cable.

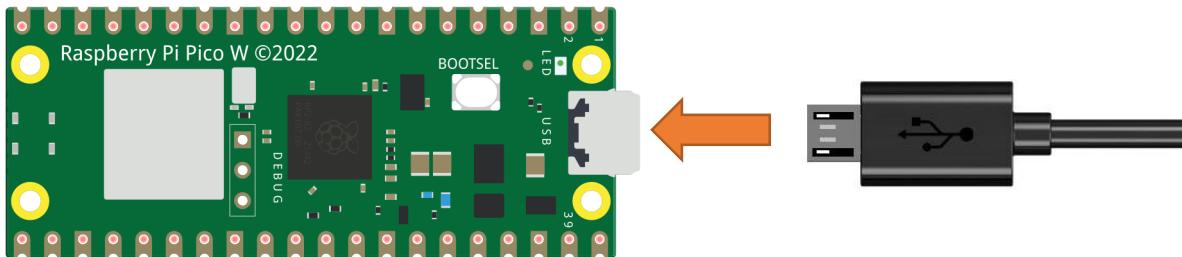

## Sketch

Before running Sketch, please modify the contents of the box below first.


Sketch\_13.2\_As\_Server

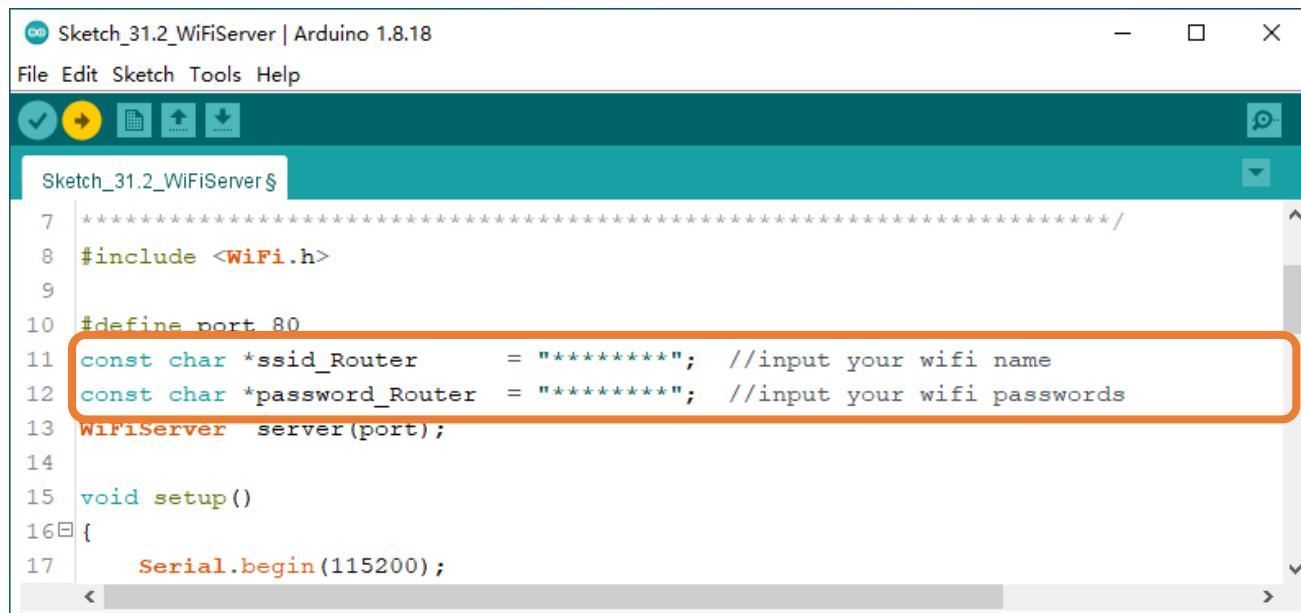

```
Sketch_31.2_WiFiServer | Arduino 1.8.18
File Edit Sketch Tools Help
Sketch_31.2_WiFiServer $ 
7 ****
8 #include <WiFi.h>
9
10 #define port 80
11 const char *ssid_Router      = "*****"; //input your wifi name
12 const char *password_Router = "*****"; //input your wifi passwords
13 WiFiServer server(port);
14
15 void setup()
16 {
17     Serial.begin(115200);
```

Compile and upload code to PICO W board, open the serial monitor and set the baud rate to 115200. Turn on server mode for PICO W, waiting for the connection of other devices on the same LAN. Once a device connects to server successfully, they can send messages to each other.

If the Pico W fails to connect to router, please disconnect the power supply and try again several times.

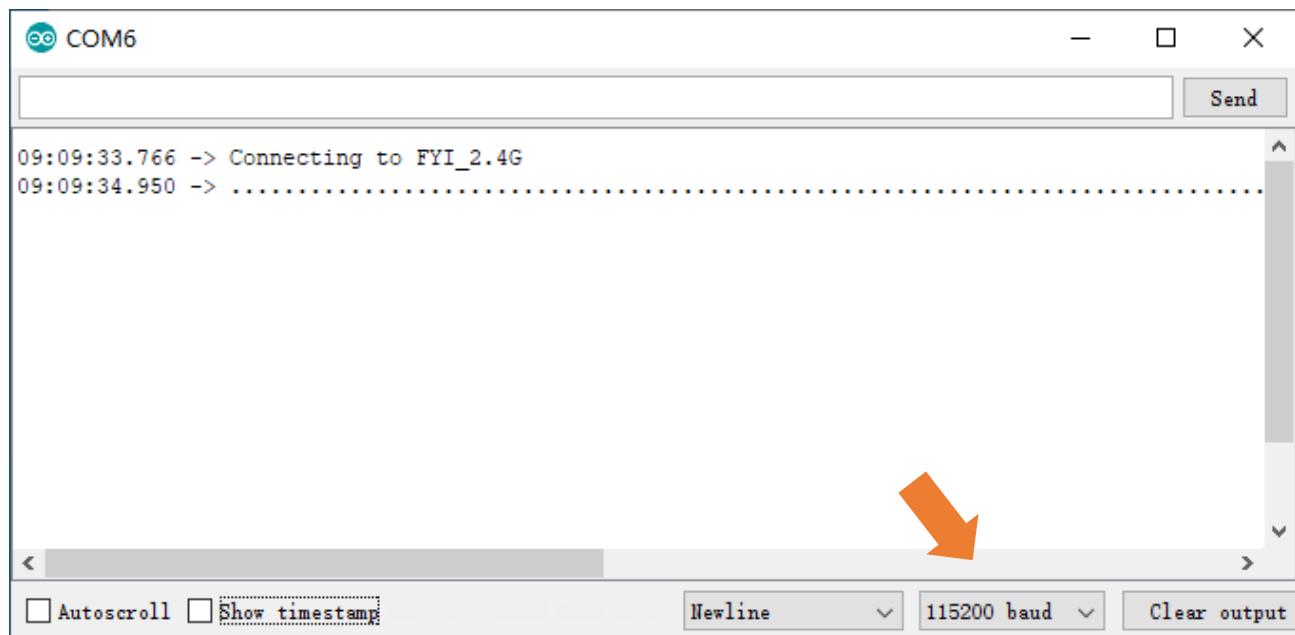

```
COM6
09:09:33.766 -> Connecting to FYI_2.4G
09:09:34.950 -> .....
```

Autoscroll  Show timestamp Newline 115200 baud Clear output



## Serial Monitor


```
hello
Connecting to FYI_2.4G
WiFi connected.
IP address: 192.168.1.123
IP port: 80
Client connected.
nice to meet you
```

Autoscroll  Show timestamp      Newline      115200 baud      Clear output

Processing:

Open the "Freenove\_Basic\_Starter\_Kit\_for\_Raspberry\_Pi\_Pico\Sketches\Sketch\_13.2\_WiFiServer\sketchWiFi\sketchWiFi.pde".

Based on the messages printed by the serial monitor, enter correct IP address and serial port in Processing to establish connection and make communication.

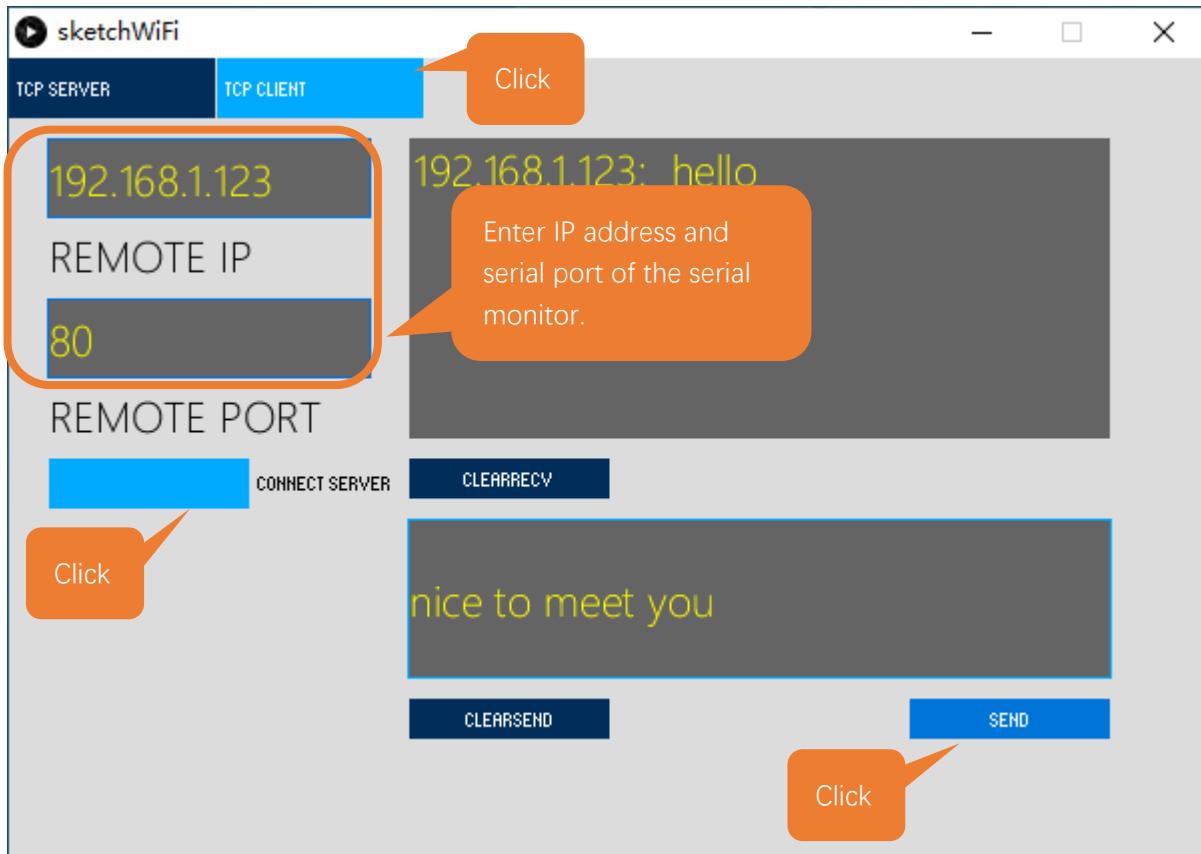

The following is the program code:

```
1 #include <WiFi.h>
2
3 #define port 80
4 const char *ssid_Router      = "*****"; //input your wifi name
5 const char *password_Router  = "*****"; //input your wifi passwords
6 WiFiServer server(port);
7
8 void setup()
9 {
10    Serial.begin(115200);
11    Serial.printf("\nConnecting to ");
12    Serial.println(ssid_Router);
13    WiFi.disconnect();
14    WiFi.begin(ssid_Router, password_Router);
15    delay(1000);
16    while (WiFi.status() != WL_CONNECTED) {
17        delay(500);
18        Serial.print(".");
19    }
20    Serial.println("");
21    Serial.println("WiFi connected.");
22    Serial.print("IP address: ");
23    Serial.println(WiFi.localIP());
24    Serial.printf("IP port: %d\n", port);
25    server.begin(port);
26 }
27
28 void loop() {
29    WiFiClient client = server.available();           // listen for incoming clients
30    if (client) {                                     // if you get a client
31        Serial.println("Client connected.");
32        while (client.connected()) {                  // loop while the client's connected
33            if (client.available()) {                 // if there's bytes to read from the
34                Serial.println(client.readStringUntil('\n'));// print it out the serial monitor
35                while (client.read() > 0);               // clear the wifi receive area cache
36            }
37            if (Serial.available()) {                  // if there's bytes to read from the
38                client.print(Serial.readStringUntil('\n'));// print it out the client.
39                while (Serial.read() > 0);              // clear the wifi receive area cache
40            }
41        }
42    }
43 }
```

```

42     client.stop();                                // stop the client connecting.
43     Serial.println("Client Disconnected.");
44 }
45 }
```

Apply for method class of WiFiServer.

```

6 WiFiServer server(port);           //Apply for a Server object whose port number is 80
```

Connect specified WiFi until it is successful. If the name and password of WiFi are correct but it still fails to connect, please disconnect the power supply and try again several times.

```

13 WiFi.disconnect();
14 WiFi.begin(ssid_Router, password_Router);
15 delay(1000);
16 while (WiFi.status() != WL_CONNECTED) {
17     delay(500);
18     Serial.print(".");
19 }
20 Serial.println("");
21 Serial.println("WiFi connected.");
```

Print out the IP address and port number of PICO W.

```

22 Serial.print("IP address: ");
23 Serial.println(WiFi.localIP());          //print out IP address of PICO W
24 Serial.printf("IP port: %d\n", port);    //Print out PICO W's port number
```

Turn on server mode of PICO W.

```

25 server.begin();                         //Turn ON PICO W as Server mode
```

When PICO W receive messages from servers, it will print them out via serial port; Users can also send messages to servers from serial port.

```

33     if (client.available()) {                // if there's bytes to read from the
client
34         Serial.println(client.readStringUntil('\n'));// print it out the serial monitor
35         while(client.read()>0);                  // clear the wifi receive area cache
36     }
37     if(Serial.available()){                 // if there's bytes to read from the
serial monitor
38         client.print(Serial.readStringUntil('\n'));// print it out the client.
39         while(Serial.read()>0);                  // clear the wifi receive area cache
40     }
```

## Reference

### Class Server

Every time use Server functionality, we need to include header file "WiFi.h".

**WiFiServer(uint16\_t port=80, uint8\_t max\_clients=4)**: create a TCP Server.

**port**: ports of Server; range from 0 to 65535 with the default number as 80.

**max\_clients**: maximum number of clients with default number as 4.

**begin(port)**: start the TCP Server.

**port**: ports of Server; range from 0 to 65535 with the default number as 0.

**setNoDelay(bool nodelay)**: whether to turn off the delay sending functionality.

**nodelay**: true stands for forbidden Nagle algorithm.

**close()**: close tcp connection.

**stop()**: stop tcp connection.





# Chapter 14 Control LED with Web (Only for Pico W)

In this chapter, we will use PICO W to make a simple smart home. We will learn how to control LED lights through web pages.

## Project 14.1 Control the LED with Web

In this project, we need to build a Web Service and then use PICO W to control the LED through the Web browser of the phone or PC. Through this example, you can remotely control the appliances in your home to achieve smart home.

### Component List

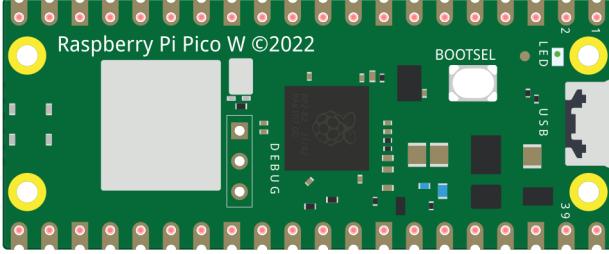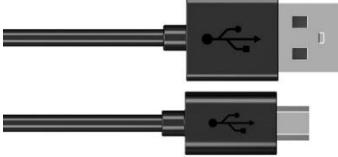Raspberry Pi Pico W x1	Micro USB Wire x1
 The image shows the Raspberry Pi Pico W development board. It is a green printed circuit board with a central Broadcom SoC (System-on-Chip) and various peripheral components. Key features include a USB-C port for power and data, a microSD card slot, and several pins for connecting sensors and actuators. The board is labeled "Raspberry Pi Pico W ©2022".	 The image shows a standard microUSB cable with two ends. One end is a black microUSB connector, and the other end is a grey standard USB-A connector.

## Component knowledge


### HTML

HyperText Markup Language (HTML) is a standard Markup Language for creating web pages. It includes a set of tags that unify documents on the network and connect disparate Internet resources into a logical whole. HTML text is descriptive text composed of HTML commands that describe text, graphics, animations, sounds, tables, links, etc. The extension of the HTML file is HTM or HTML. Hyper Text is a way to organize information. It uses hyperlinks to associate words and charts in Text with other information media. These related information media may be in the same Text, other files, or files located on a remote computer. This way of organizing information connects the information resources distributed in different places, which is convenient for people to search and retrieve information.

The nature of the Web is hypertext Markup Language (HTML), which can be combined with other Web technologies (e.g., scripting languages, common gateway interfaces, components, etc.) to create powerful Web pages. Thus, HYPERtext Markup Language (HTML) is the foundation of World Wide Web (Web) programming, that is, the World Wide Web is based on hypertext. Hypertext Markup Language is called hypertext Markup language because the text contains so-called "hyperlink" points.

You can build your own WEB site using HTML, which runs on the browser and is parsed by the browser.

Example analysis is shown in the figure below:

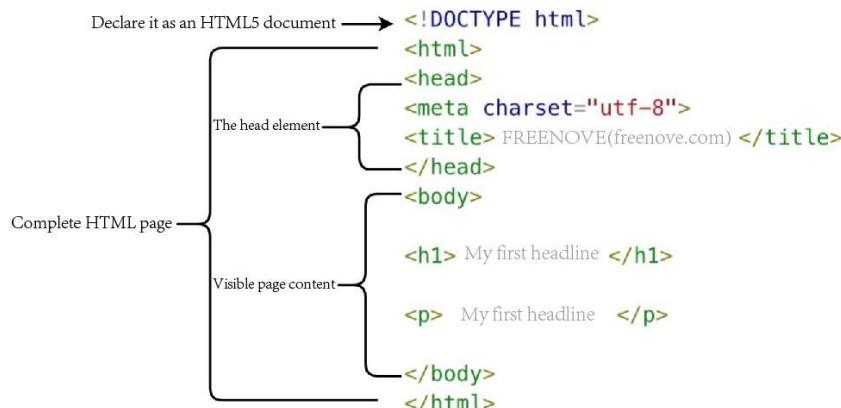

**<!DOCTYPE html>**: Declare it as an HTML5 document

**<html>**: Is the root element of an HTML page

**<head>**: Contains meta data for the document, such as &lt; meta charset="utf-8"&gt; Define the web page encoding format to UTF-8.

**<title>**: Notes the title of the document

**<body>**: Contains visible page content


**<h1>**: Define a big heading

**<p>**: Define a paragraph

For more information, please visit: <https://developer.mozilla.org/en-US/docs/Web/HTML>

# Circuit

Connect Pico W to the computer using the USB cable.

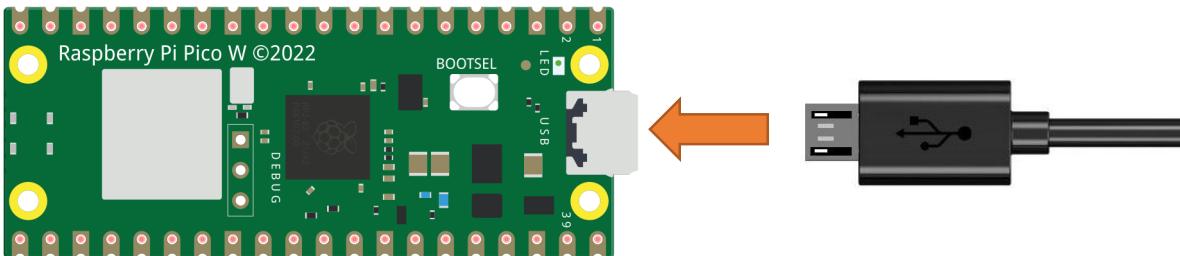

# Sketch

## Sketch\_14.1\_Control\_the\_LED\_with\_Web

The screenshot shows the Arduino IDE interface with the title bar "Sketch\_32.1\_Control\_the\_LED\_with\_Web | Arduino 1.8.18". The menu bar includes File, Edit, Sketch, Tools, and Help. The main window displays the following C++ code:


```
Sketch_32.1_Control_the_LED_with_Web

10 // *****
11 #include <WiFi.h>
12
13 // Replace with your network credentials
14 const char* ssid      = "*****";
15 const char* password = "*****";
16
17 // Set web server port number to 80
18 WiFiServer server(80);
19 // Variable to store the HTTP request
20 String header;
21 // Auxiliar variables to store the current output state
22 String PIN_LEDState = "OFF";
23
24 // Current time
25 unsigned long currentTime = millis();
26 // Previous time
27 unsigned long previousTime = 0;
28 // Define timeout time in milliseconds (example: 2000ms = 2s)
29 const long timeoutTime = 2000;
30
31 void setup() {
32   Serial.begin(115200);
33   // Initialize the output variables as outputs
34   pinMode(LED_BUILTIN, OUTPUT);
35   digitalWrite(LED_BUILTIN, LOW);
36
37   // Connect to Wi-Fi network with SSID and password
38   // Example: WiFi.begin("MyNetworkName", "MyPassword");
39 }
```

An orange callout bubble points to the lines 13-15, which define the Wi-Fi SSID and password. The text inside the bubble reads: "Enter the correct Router name and password."

Any concerns?  support@freenove.com

Download the code to PICO W, open the serial port monitor, set the baud rate to 115200 and you can use it to measure the distance between the ultrasonic module and the object. As shown in the following figure:

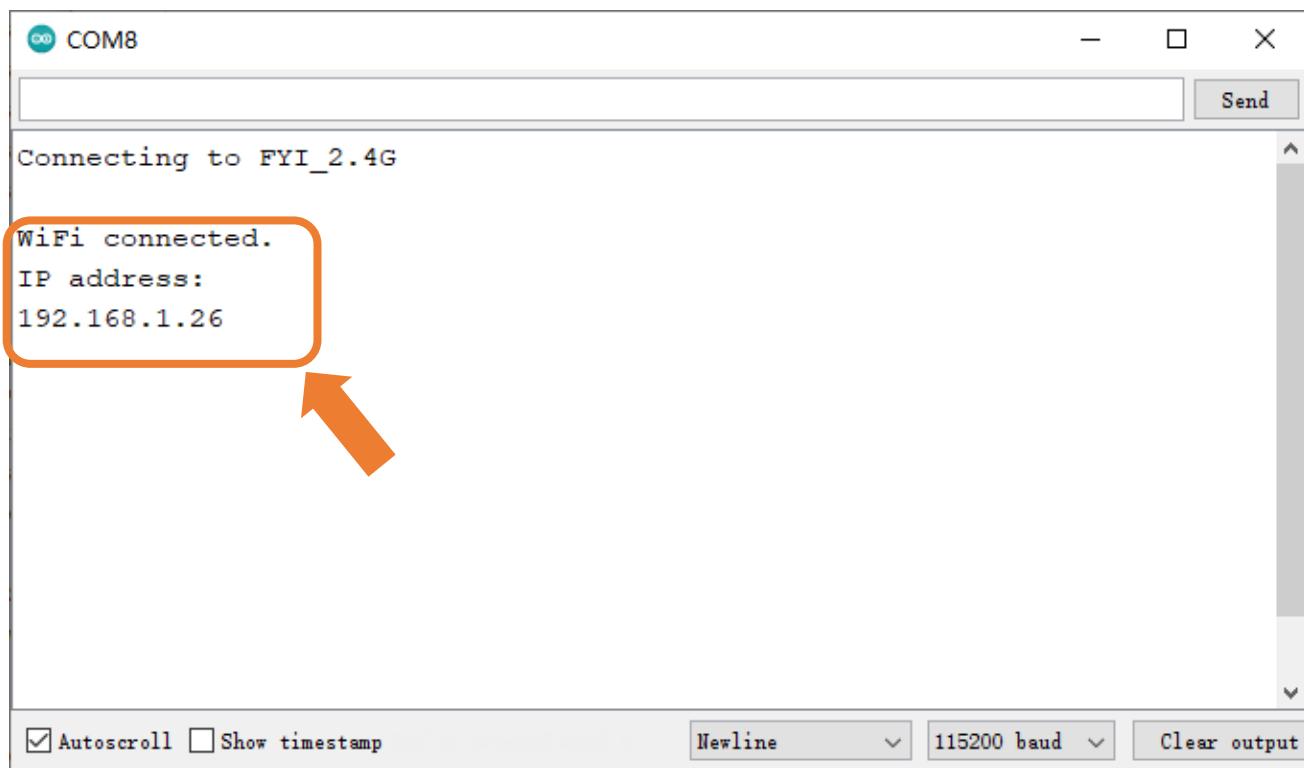

When PICO W successfully connects to "ssid\_Router", serial monitor will print out the IP address assigned to PICO W by the router. Access <http://192.168.1.26> in a computer browser on the LAN. As shown in the following figure:



You can click the corresponding button to control the LED on and off.



The following is the program code:

```
1 #include <WiFi.h>
2
3 // Replace with your network credentials
4 const char* ssid      = "*****";
5 const char* password = "*****";
6
7 // Set web server port number to 80
8 WiFiServer server(80);
9 // Variable to store the HTTP request
10 String header;
11 // Auxiliar variables to store the current output state
12 String PIN_LEDState = "OFF";
13
14 // Current time
15 unsigned long currentTime = millis();
16 // Previous time
17 unsigned long previousTime = 0;
18 // Define timeout time in milliseconds (example: 2000ms = 2s)
19 const long timeoutTime = 2000;
20
21 void setup() {
22     Serial.begin(115200);
23     // Initialize the output variables as outputs
24     pinMode(LED_BUILTIN, OUTPUT);
25     digitalWrite(LED_BUILTIN, LOW);
26
27     // Connect to Wi-Fi network with SSID and password
28     Serial.print("Connecting to ");
29     Serial.println(ssid);
30     WiFi.begin(ssid, password);
31     while (WiFi.status() != WL_CONNECTED) {
32         delay(500);
33         Serial.print(".");
34     }
35     // Print local IP address and start web server
36     Serial.println("");
37     Serial.println("WiFi connected.");
38     Serial.println("IP address: ");
39     Serial.println(WiFi.localIP());
40     server.begin();
41 }
42 void loop() {
43     WiFiClient client = server.available(); // Listen for incoming clients
```

Any concerns? ✉ support@freenove.com

```
44  if (client) {                                // If a new client connects,
45      Serial.println("New Client.");           // print a message out in the serial port
46      String currentLine = "";                // make a String to hold incoming data from the
47      client
48      currentTime = millis();
49      previousTime = currentTime;
50      while (client.connected() && currentTime - previousTime <= timeoutTime) { // loop while
the client's connected
51          currentTime = millis();
52          if (client.available()) { // if there's bytes to read from the client,
53              char c = client.read(); // read a byte, then
54              Serial.write(c);      // print it out the serial monitor
55              header += c;
56              if (c == '\n') { // if the byte is a newline character
57                  // if the current line is blank, you got two newline characters in a row.
58                  // that's the end of the client HTTP request, so send a response:
59                  if (currentLine.length() == 0) {
60                      // HTTP headers always start with a response code (e.g. HTTP/1.1 200 OK)
61                      // and a content-type so the client knows what's coming, then a blank line:
62                      client.println("HTTP/1.1 200 OK");
63                      client.println("Content-type:text/html");
64                      client.println("Connection: close");
65                      client.println();
66                      // turns the GPIOs on and off
67                      if (header.indexOf("GET /LED_BUILTIN/ON") >= 0) {
68                          Serial.println("LED_BUILTIN ON");
69                          PIN_LEDState = "ON";
70                          digitalWrite(LED_BUILTIN, HIGH);
71                      } else if (header.indexOf("GET /LED_BUILTIN/OFF") >= 0) {
72                          Serial.println("LED_BUILTIN OFF");
73                          PIN_LEDState = "OFF";
74                          digitalWrite(LED_BUILTIN, LOW);
75                      }
76                      // Display the HTML web page
77                      client.println("<!DOCTYPE html><html>");
78                      client.println("<head> <title>Pico W Web Server</title> <meta name=\"viewport\""
content="width=device-width, initial-scale=1">");
79                      client.println("<link rel=\"icon\" href=\"data:, \">");
80                      // CSS to style the on/off buttons
81                      // Feel free to change the background-color and font-size attributes to fit your
preferences
82                      client.println("<style>html {font-family: Helvetica; display:inline-block; margin:
0px auto; text-align: center;}</style>");
```

```

83         client.println(".button{background-color: #4286f4; display: inline-block; border:
84             none; border-radius: 4px; color: white; padding: 16px 40px;text-decoration: none; font-size:
85             30px; margin: 2px; cursor: pointer;}");
86         client.println(".button2{background-color: #4286f4;display: inline-block; border:
87             none; border-radius: 4px; color: white; padding: 16px 40px;text-decoration: none; font-size:
88             30px; margin: 2px; cursor: pointer;}</style></head>");
89         // Web Page Heading
90         client.println("<body><h1>Pico W Web Server</h1>");
91         client.println("<p>GPIO state: " + PIN_LEDState + "</p>"); 
92         client.println("<p><a href=\"/LED_BUILTIN/ON\"><button class=\"button
button2\">ON</button></a></p>"); 
93         client.println("<p><a href=\"/LED_BUILTIN/OFF\"><button class=\"button
button2\">OFF</button></a></p>"); 
94         client.println("</body></html>"); 
95         // The HTTP response ends with another blank line
96         client.println(); 
97         // Break out of the while loop
98         break;
99     } else { // if you got a newline, then clear currentLine
100        currentLine = "";
101    }
102  }
103  // Clear the header variable
104  header = "";
105  // Close the connection
106  client.stop();
107  Serial.println("Client disconnected.");
108  Serial.println("");
109 }
110 }
```

Include the WiFi Library header file of PICO W.

```
1 #include <WiFi.h>
```

Enter correct router name and password.

```
3 const char* ssid      = "*****"; //Enter the router name
4 const char* password = "*****"; //Enter the router password
```

Set PICO W in Station mode and connect it to your router.

```
30 WiFi.begin(ssid, password);
```

Check whether PICO W has connected to router successfully every 0.5s.

```
31 while (WiFi.status() != WL_CONNECTED) {
32     delay(500);
```

**Any concerns? ✉ support@freenove.com**

```
33     Serial.print(".");
34 }
```

Serial monitor prints out the IP address assigned to PICO W.

```
39 Serial.println(WiFi.localIP());
```

Click the button on the web page to control the LED light on and off.

```
65 // turns the GPIOs on and off
66 if (header.indexOf("GET /LED_BUILTIN/ON") >= 0) {
67     Serial.println("LED_BUILTIN ON");
68     PIN_LEDState = "ON";
69     digitalWrite(LED_BUILTIN, HIGH);
70 } else if (header.indexOf("GET /LED_BUILTIN/OFF") >= 0) {
71     Serial.println("LED_BUILTIN OFF");
72     PIN_LEDState = "OFF";
73     digitalWrite(LED_BUILTIN, LOW);
74 }
```

## What's Next?

THANK YOU for participating in this learning experience!

We have reached the end of this Tutorial. If you find errors, omissions or you have suggestions and/or questions about the Tutorial or component contents of this Kit, please feel free to contact us:  
[support@freenove.com](mailto:support@freenove.com)

We will make every effort to make changes and correct errors as soon as feasibly possible and publish a revised version.

If you want to learn more about Arduino, Raspberry Pi, Smart Cars, Robotics and other interesting products in science and technology, please continue to visit our website. We will continue to launch fun, cost-effective, innovative and exciting products.

<https://www.freenove.com/>

Thank you again for choosing Freenove products.

Any concerns?  [support@freenove.com](mailto:support@freenove.com)