

Important Information

Thank you for choosing Freenove products!

Getting Started

First, please read the **Read Me First.pdf** document in the unzipped folder you created.

If you have not yet downloaded the zip file, associated with this kit, please do so now and unzip it.

Get Support and Offer Input

Freenove provides free and responsive product and technical support, including but not limited to:

- Product quality issues
- Product use and build issues
- Questions regarding the technology employed in our products for learning and education
- Your input and opinions are always welcome
- We also encourage your ideas and suggestions for new products and product improvements

For any of the above, you may send us an email to:

support@freenove.com

Safety and Precautions

Please follow the following safety precautions when using or storing this product:

- Keep this product out of the reach of children under 6 years old.
- This product should be **used only when there is adult supervision present** as young children lack necessary judgment regarding safety and the consequences of product misuse.
- This product contains small parts and parts, which are sharp. This product contains electrically conductive parts. **Use caution with electrically conductive parts near or around power supplies, batteries and powered (live) circuits.**
- When the product is turned ON, activated or tested, some parts will move or rotate. **To avoid injuries to hands and fingers keep them away from any moving parts!**
- It is possible that an improperly connected or shorted circuit may cause overheating. **Should this happen, immediately disconnect the power supply or remove the batteries and do not touch anything until it cools down!** When everything is safe and cool, review the product tutorial to identify the cause.
- Only operate the product in accordance with the instructions and guidelines of this tutorial, otherwise parts may be damaged or you could be injured.
- Store the product in a cool dry place and avoid exposing the product to direct sunlight.
- After use, always turn the power OFF and remove or unplug the batteries before storing.

Any concerns?  support@freenove.com



About Freenove

Freenove provides open source electronic products and services worldwide.

Freenove is committed to assist customers in their education of robotics, programming and electronic circuits so that they may transform their creative ideas into prototypes and new and innovative products. To this end, our services include but are not limited to:

- Educational and Entertaining Project Kits for Robots, Smart Cars and Drones
- Educational Kits to Learn Robotic Software Systems for Arduino, Raspberry Pi and micro:bit
- Electronic Component Assortments, Electronic Modules and Specialized Tools
- **Product Development and Customization Services**

You can find more about Freenove and get our latest news and updates through our website:

<http://www.freenove.com>

sale@freenove.com

Copyright

All the files, materials and instructional guides provided are released under [Creative Commons Attribution-NonCommercial-ShareAlike 3.0 Unported License](#). A copy of this license can be found in the folder containing the Tutorial and software files associated with this product.



This means you can use these resources in your own derived works, in part or completely but **NOT for the intent or purpose of commercial use.**

Freenove brand and logo are copyright of Freenove Creative Technology Co., Ltd. and cannot be used without written permission.



Contents

Important Information.....	1
Contents.....	1
Preface.....	1
ESP8266.....	2
CH340	5
Programming Software	15
Environment Configuration	18
Chapter 0 LED	26
Project 0.1 Blink	26
Chapter 1 LED	32
Project 1.1 Blink	32
Chapter 2 Button & LED	39
Project 2.1 Button & LED	39
Project 2.2 MINI table lamp.....	44
Chapter 3 LED Bar	47
Project 3.1 Flowing Light	47
Chapter 4 Analog & PWM	52
Project 4.1 Breathing LED.....	52
Project 4.2 Meteor Flowing Light.....	60
Chapter 5 RGB LED.....	64
Project 5.1 Random Color Light.....	64
Project 5.2 Gradient Color Light.....	69
Chapter 6 LEDPixel	71
Project 6.1 LEDPixel.....	71
Project 6.2 Rainbow Light.....	78
Chapter 7 Buzzer.....	81
Project 7.1 Doorbell.....	81
Project 7.2 Alertor.....	87
Chapter 8 Serial Communication.....	90

Project 8.1 Serial Print.....	90
Project 8.2 Serial Read and Write	96
Chapter 9 ADC Converter	99
Project 9.1 Read the Voltage of Potentiometer.....	99
Chapter 10 Potentiometer & LED.....	105
Project 10.1 Soft Light	105
Project 10.2 Color Light	108
Project 10.3 Soft Rainbow Light.....	112
Chapter 11 Photoresistor & LED.....	116
Project 11.1 NightLamp	116
Chapter 12 Thermistor	121
Project 12.1 Thermometer	121
Chapter 13 74HC595 & LED Bar Graph.....	127
Project 13.1 Flowing Water Light.....	127
Chapter 14 74HC595 & 7-Segment Display.....	133
Project 14.1 1-Digit 7-Segment Display.....	133
Project 14.2 4-Digit 7-Segment Display	140
Chapter 15 74HC595 & LED Matrix	147
Project 15.1 LED Matrix.....	147
Chapter 16 Relay & Motor.....	156
Project 16.1 Relay & Motor	156
Chapter 17.1 Motor & Driver	164
Project 17.1 Control Motor with Potentiometer.....	164
Chapter 18 Servo	172
Project 18.1 Servo Sweep.....	172
Project 18.2 Servo Knop	178
Chapter 19 Stepper Motor	182
Project 19.1 Stepper Motor	182
Chapter 20 LCD1602.....	191
Project 20.1 LCD1602	191
Chapter 21 Ultrasonic Ranging	199

Project 21.1 Ultrasonic Ranging	199
Project 21.2 Ultrasonic Ranging	206
Chapter 22 Matrix Keypad	209
Project 22.1 Matrix Keypad.....	209
Chapter 23 Infrared Remote	216
Project 23.1 Infrared Remote Control.....	216
Project 23.2 Control LED through Infrared Remote	224
Chapter 24 Hygrothermograph DHT11	230
Project 24.1 Hygrothermograph.....	230
Project 24.2 Hygrothermograph.....	236
Chapter 25 Infrared Motion Sensor	241
Project 25.1 Infrared Motion Detector with LED Indicator.....	241
Chapter 26 Attitude Sensor MPU6050	247
Project 26.1 Read a MPU6050 Sensor Module	247
Chapter 27 RFID	255
Project 27.1RFID read UID.....	255
Project 27.2Read and write.....	264
Chapter 28 WiFi Working Modes	269
Project 28.1 Station mode.....	269
Project 28.2 AP mode	274
Project 28.3 AP+Station mode	279
Chapter 29 TCP/IP	283
Project 29.1 As Client.....	283
Project 29.2 As Server.....	297
Chapter 30 Smart home	303
Project 30.1 Control_LED_through_Web.....	303
Chapter 31 Play music.....	311
Project 31.1 Play_music.....	311
Chapter 32 Play music with audio decoder	321
Project 32.1 Play_music_with_audio_decoder	321
Chapter 33 Soldering Circuit Board	332
Project 33.1 Soldering a Buzzer	332



Project 33.2 Soldering a Flowing Water Light	336
What's next?(73).....	340
End of the Tutorial	340

Preface

ESP8266 is a micro control unit with integrated Wi-Fi launched by Espressif, which features strong properties and integrates rich peripherals. It can be designed and studied as an ordinary Single Chip Microcontroller(SCM) chip, or connected to the Internet and used as an Internet of Things device.

ESP8266 can be developed using the Arduino platform, which will definitely make it easier for people who have learned Arduino to master. Moreover, the code of ESP8266 is completely open-source, so beginners can quickly learn how to develop and design IOT smart household products including smart curtains, fans, lamps and clocks.

Generally, ESP8266 projects consist of code and circuits. Don't worry even if you've never learned code and circuits, because we will gradually introduce the basic knowledge of C programming language and electronic circuits, from easy to difficult. Our products contain all the electronic components and modules needed to complete these projects. It's especially suitable for beginners.


We divide each project into four parts, namely Component List, Component Knowledge, Circuit and Code. Component List helps you to prepare material for the experiment more quickly. Component Knowledge allows you to quickly understand new electronic modules or components, while Circuit helps you understand the operating principle of the circuit. And Code allows you to easily master the use of ESP8266 and accessory kit. After finishing all the projects in this tutorial, you can also use these components and modules to make products such as smart household, smart cars and robots to transform your creative ideas into prototypes and new and innovative products.

In addition, if you have any difficulties or questions with this tutorial or toolkit, feel free to ask for our quick and free technical support through support@freenove.com

ESP8266


ESP8266 has PCB on-board antenna. The PCB on-board antenna is an integrated antenna in the chip module itself, so it is convenient to carry and design.

PCB on-board antenna

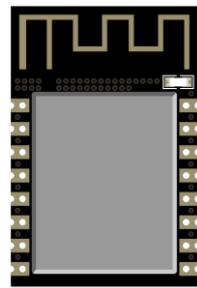


In this tutorial, the ESP8266 development board is designed based on the PCB on-board antenna-packaged ESP8266 module. The following tutorials will be based on the ESP8266 development board.

ESP8266 development board

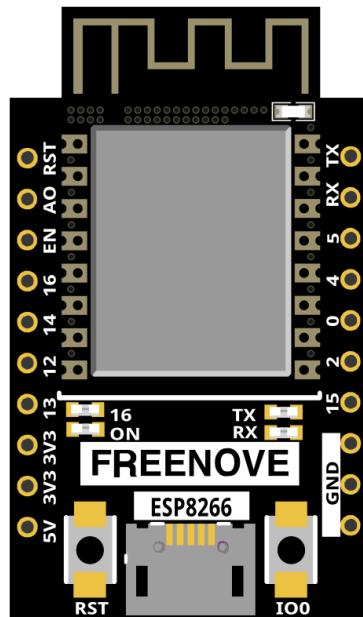

The hardware interfaces of ESP8266 are distributed as follows:

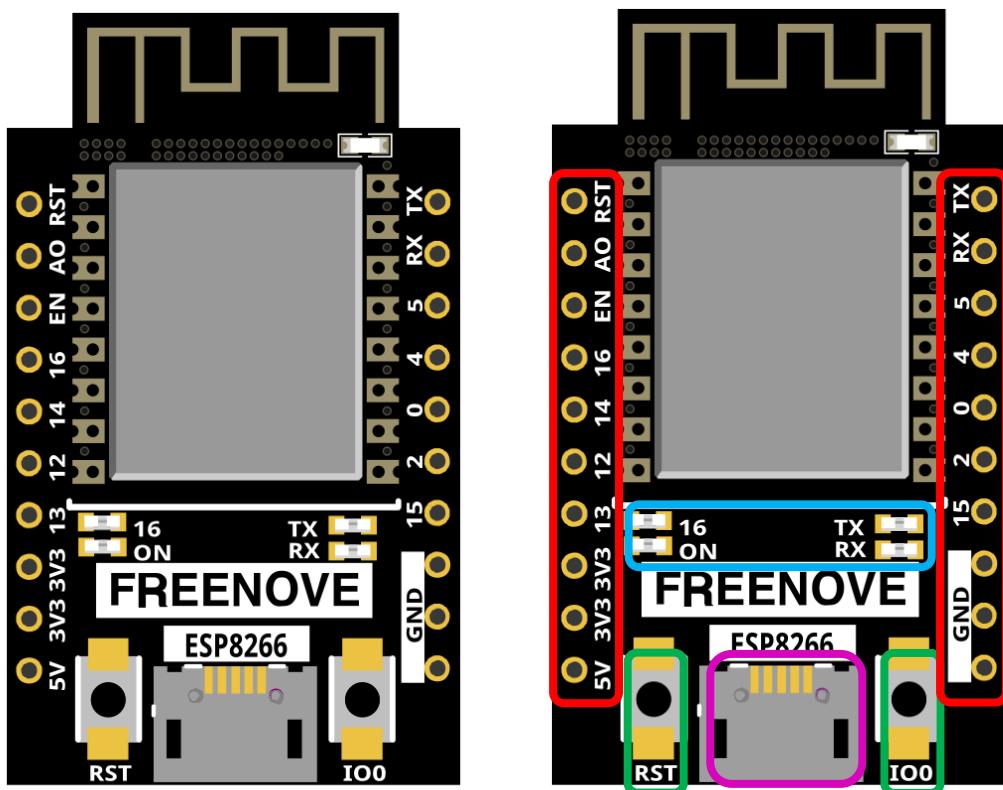

Compare the left and right images. We've boxed off the resources on the ESP8266 in different colors to facilitate your understanding of the ESP8266 development board.

Box color	Corresponding resources introduction
	GPIO pin
	LED indicator
	Reset button, Boot mode selection button
	USB port



NO.	Pin Name	Functional Description
1	RST	Reset Pin, Active Low
2	ADC	AD conversion, Input voltage range 0~1V, the value range is 0~1024.
3	EN	Chip Enabled Pin, Active High
4	IO16	Connect with RST pin to wake up Deep Sleep
5	IO14	GPIO14; HSPI_CLK
6	IO12	GPIO12; HSPI_MISO
7	IO13	GPIO13; HSPI_MOSI; UART0_CTS
8	VCC	Module power supply pin, Voltage 3.0V ~ 3.6V
9	GND	GND
10	IO15	GPIO15; MTDO; HSPICS; UART0
11	IO2	GPIO2; UART1_TXD
12	IO0	GPIO2; UART1_RXD
13	IO4	GPIO4
14	IO5	GPIO5;IR_R
15	RXD	UART0_RXD; GPIO3
16	TXD	UART0_TXD; GPIO1

Description of the ESP8266 series module boot mode:

Mode	CH_PD(EN)	RST	GPIO15	GPIO0	GPIO2	TXD0
Download mode	high	high	low	low	high	high
Running mode	high	high	low	high	high	high

Notes: Some of the pins inside the module have been pulled or pulled down.

For more information, please visit:

If you want to learn more about this, you can read the following files:

[“Freenove_Ultimate_Starter_Kit_for_ESP8266/Datasheet/esp-12s_datasheet_en.pdf”](#)


CH340

ESP8266 uses CH340 to download codes. So before using it, we need to install CH340 driver in our computers.

Windows

Check whether CH340 has been installed


1. Connect your computer and ESP8266 with a USB cable.

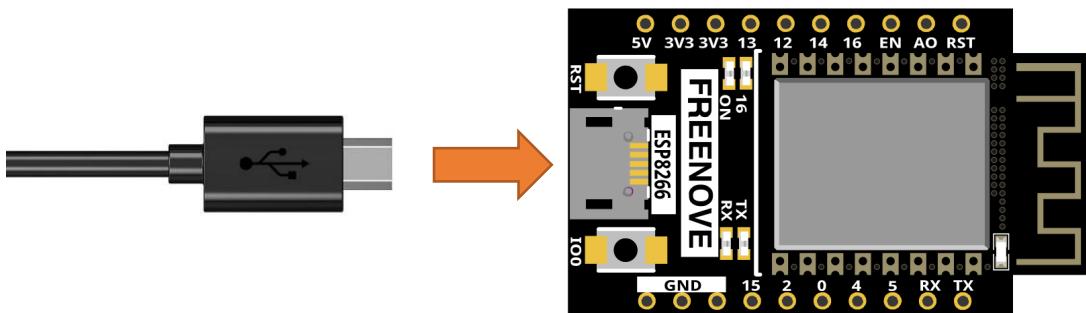

2. Turn to the main interface of your computer, select "This PC" and right-click to select "Manage".



3. Click “Device Manager”. If your computer has installed CH340, you can see “USB-SERIAL CH340 (COMx)”. And you can click [here](#) to move to the next step.

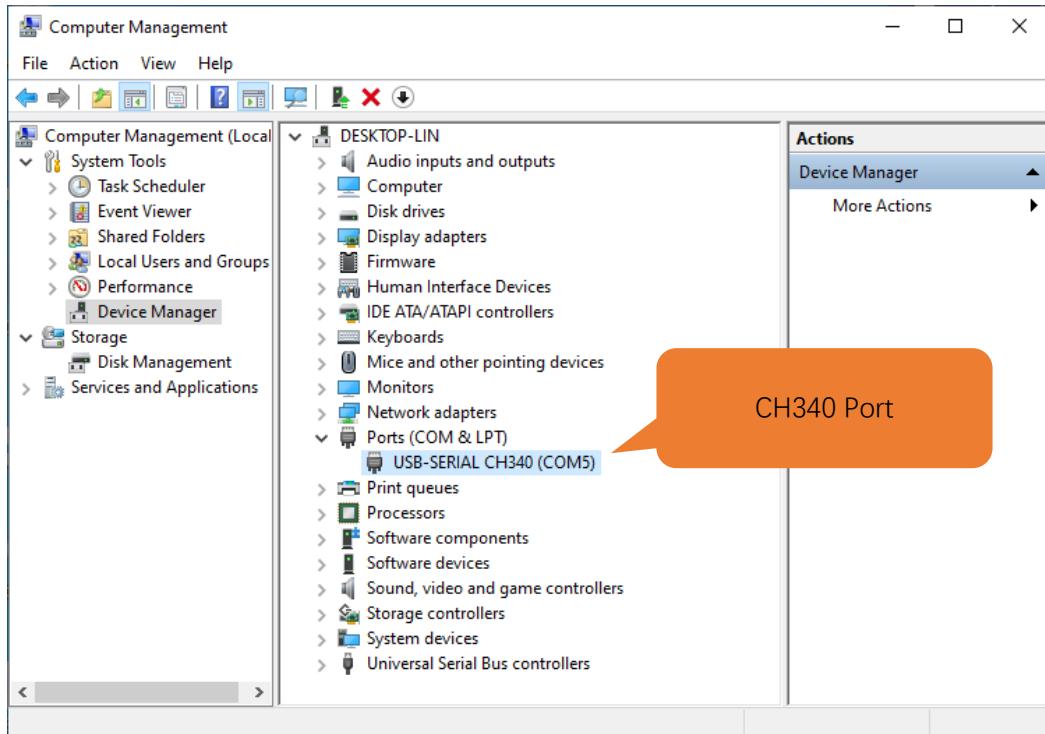

Installing CH340

1. First, download CH340 driver, click <http://www.wch-ic.com/search?q=CH340&t=downloads> to download the appropriate one based on your operating system.

index / search / search CH340

All (14)

Downloads (7)

Products (4)

Application (2)

Video (1)

News (0)

keyword CH340


Downloads(7)

file category	file content	version	upload time
Driver&Tools	Windows CH341SER.EXE CH340/CH341 USB to serial port Windows driver, supports 32/64-bit Windows 10/8.1/8/7/VISTA/XP, Server 2016/2012/2008/2003, 2000/ME/98	3.5	2019-03-18
	CH341SER.ZIP CH340/CH341 USB to serial port Windows driver, includes DLL dynamic library and non-standard baud rate settings and other instructions. Supports 32/64-bit Windows 10/8.1/8/7/VISTA/XP, Server 2016/2012/2008/2003, 2000/ME/98	3.5	2019-03-05
	CH341SER_ANDROID... CH340/CH341 USB to serial port Android free drive application library, for Android OS 3.1 and above version which supports USB Host mode already, no need to load Android kernel driver, no root privileges. Contains apk, lib library file (Java Driver), App Demo Example (USB to UART Device)	1.6	2019-04-19
	CH341SER_LINUX... CH340/CH341 USB to serial port LINUX driver	1.5	2018-03-18
	CH341SER_MAC.ZI... CH340/CH341 USB to serial port MAC OS driver	1.5	2018-07-05
Others			
	PRODUCT_GUIDE.P... Electronic selection of product selection manual, please refer to related product technical manual for more technical information.	1.4	2018-12-29
	InstallNoteOn64... Instructions for the driver after 18 years of August cannot be installed under some 64-bit WIN7 (English)	1.0	2019-01-10


If you would not like to download the installation package, you can open “[Freenove_Ultimate_Starter_Kit_for_ESP8266/CH340](#)”, we have prepared the installation package.

Name	Date modified	Type	Size
Linux	8/14/2020 5:24 PM	File folder	
MAC	8/14/2020 5:23 PM	File folder	
Windows	8/14/2020 5:23 PM	File folder	


2. Open the folder “**Freenove_Ultimate_Starter_Kit_for_ESP8266/CH340/Windows/**”

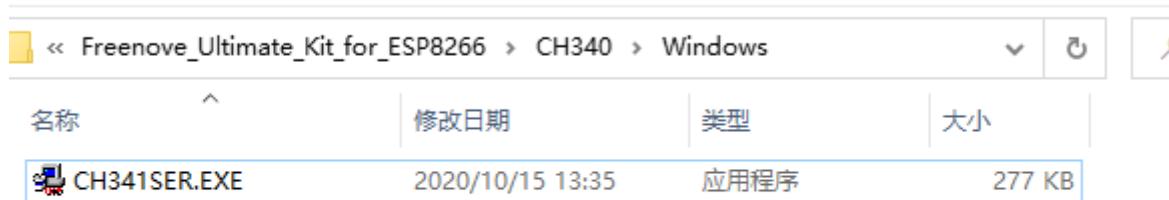


3. Double click “**CH341SER.EXE**”.

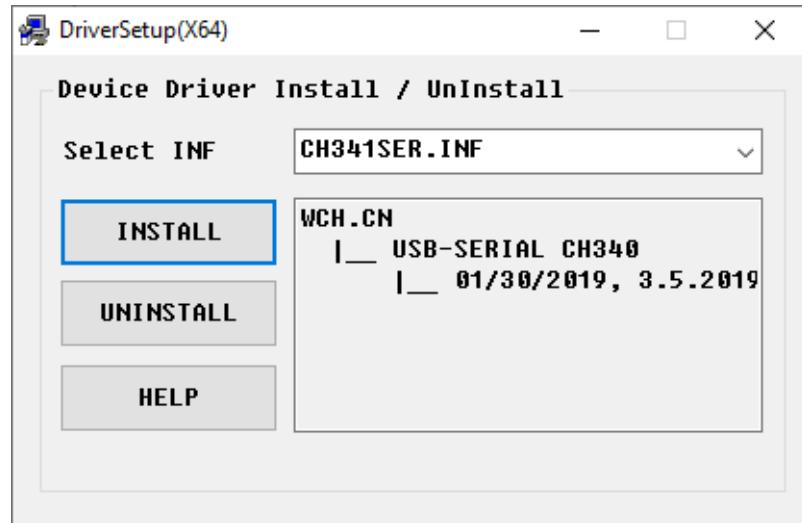


4. Click “INSTALL” and wait for the installation to complete.

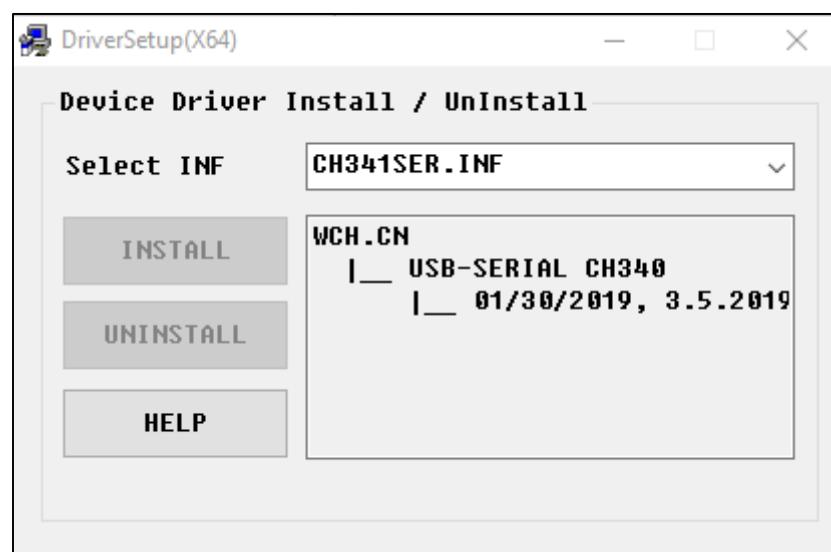

5. Install successfully. Close all interfaces.

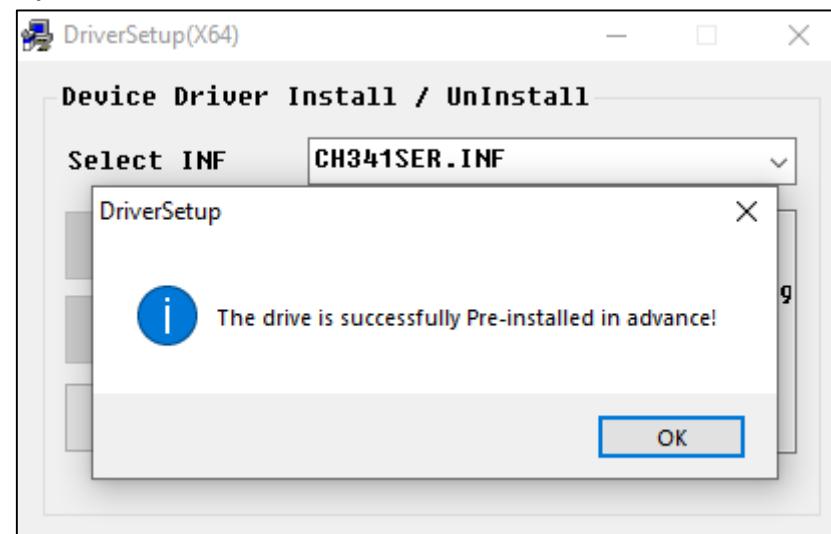

6. When ESP8266 is connected to computer, select “This PC”, right-click to select “Manage” and click “Device Manager” in the newly pop-up dialog box, and you can see the following interface.

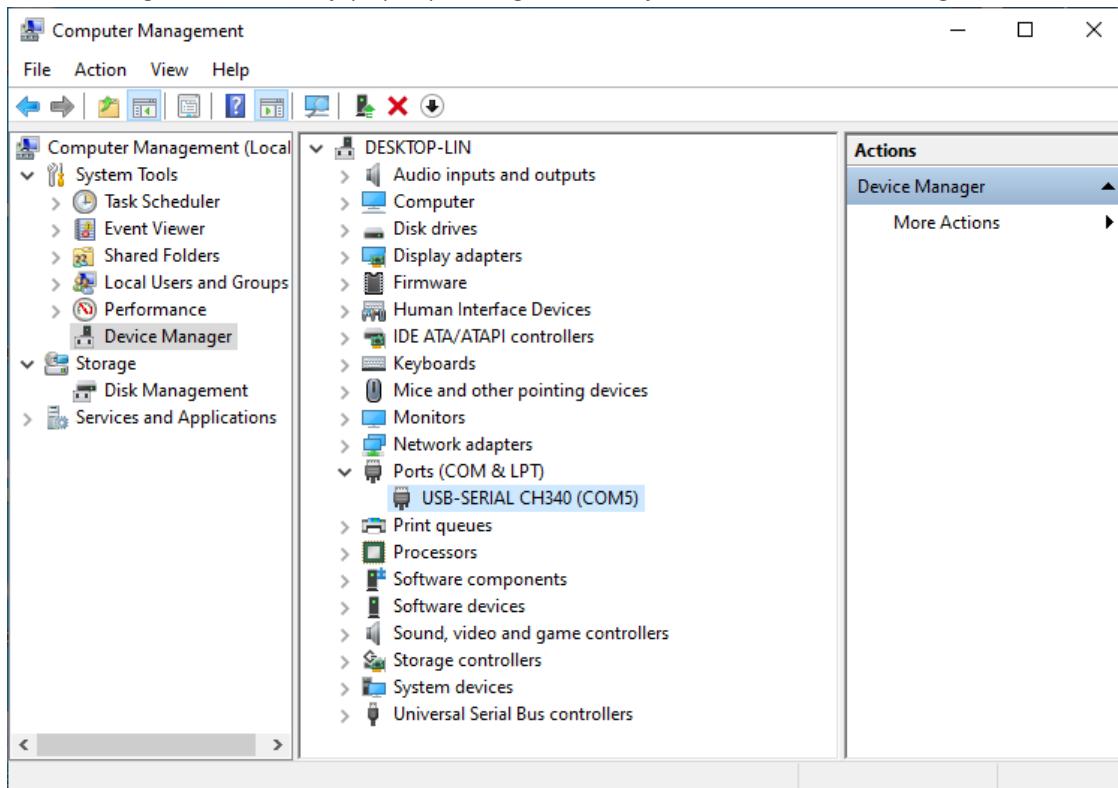

7. So far, CH340 has been installed successfully. Close all dialog boxes.

MAC


First, download CH340 driver, click <http://www.wch-ic.com/search?q=CH340&t=downloads> to download the appropriate one based on your operating system.

The screenshot shows a search results page for 'ch340' on the WCH website. The left sidebar has categories: All (14), Downloads (7), Products (4), Application (2), Video (1), and News (0). The main area shows a table of downloads:

file category	file content	version	upload time
Driver&Tools	CH341SER.EXE CH340/CH341 USB to serial port Windows driver, supports 32/64-bit Windows 10/8.1/8/7/VISTA/XP, Server 2016/2012/2008/2003, 2000/ME/98	3.5	2019-03-18
	CH341SER.ZIP CH340/CH341 USB to serial port Windows driver, includes DLL dynamic library and non-standard baud rate settings and other instructions. Supports 32/64-bit Windows 10/8.1/8/7/VISTA/XP, Server 2016/2012/2008/2003, 2000/ME/98	3.5	2019-03-05
	CH341SER_ANDROID... CH340/CH341 USB to serial port Android free drive application library, for Android OS 3.1 and above version which supports USB Host mode already, no need to load Android kernel driver, no root privileges. Contains apk, lib library file (Java Driver), App Demo Examples, and STM32 Demo SDK.	1.6	2019-04-19
	CH341SER_LINUX... CH340/CH341 USB to serial port LINUX driver	1.5	2018-03-18
	CH341SER_MAC.ZI... CH340/CH341 USB to serial port MAC OS driver	1.5	2018-07-05
Others			


Annotations with orange callouts point to specific files: 'Windows' points to CH341SER.EXE, 'Linux' points to CH341SER_LINUX..., and 'MAC' points to CH341SER_MAC.ZI... .

If you would not like to download the installation package, you can open "Freenove_Ultimate_Starter_Kit_for_ESP8266/CH340", we have prepared the installation package. Second, open the folder "Freenove_Ultimate_Starter_Kit_for_ESP8266/CH340/MAC/"

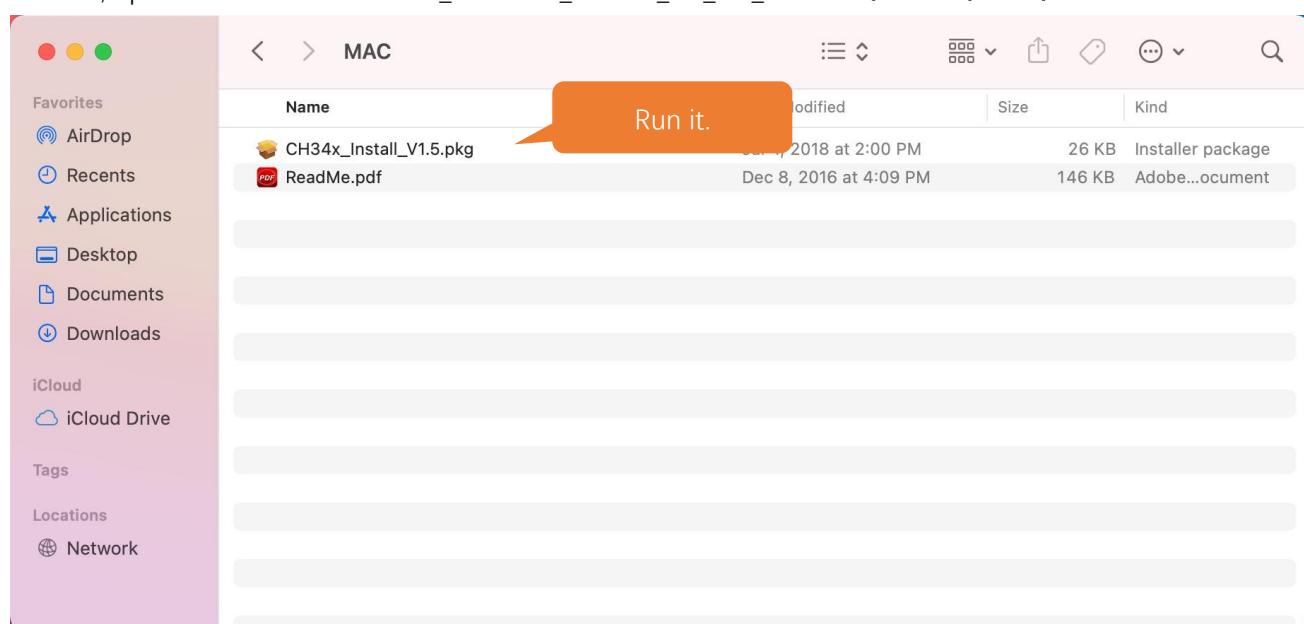


Any concerns? ✉ support@freenove.com


Third, click Continue.

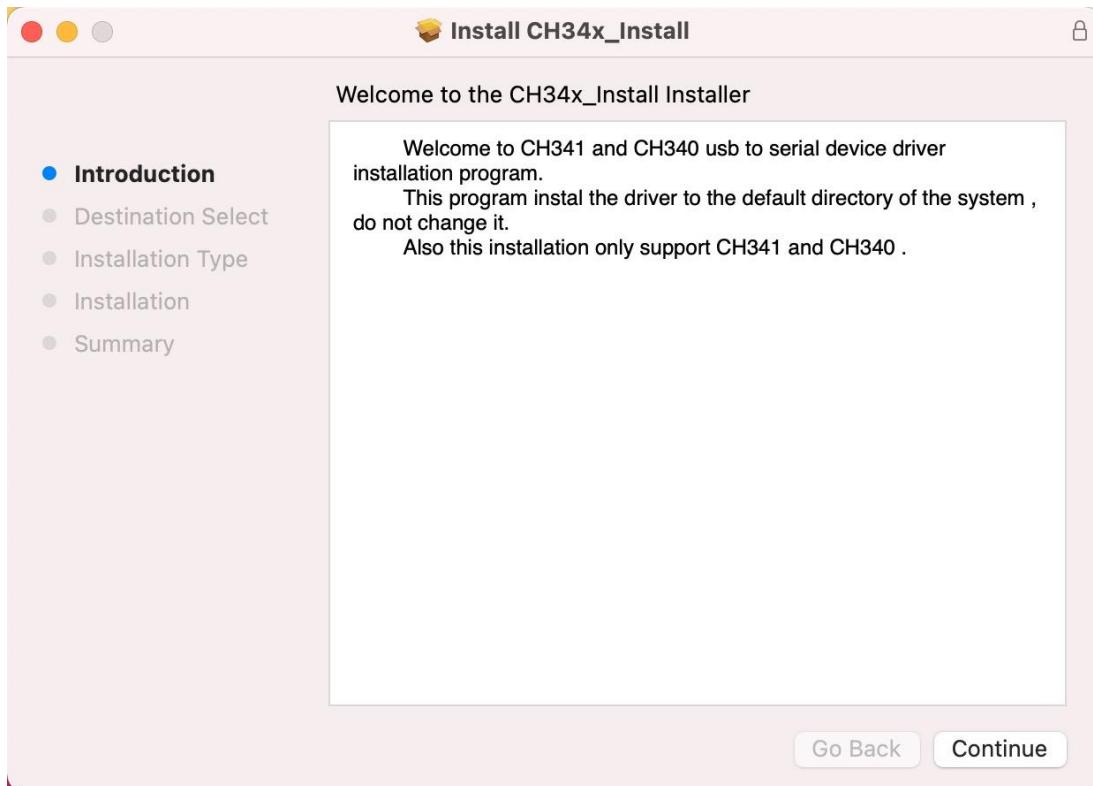


Fourth, click Install.

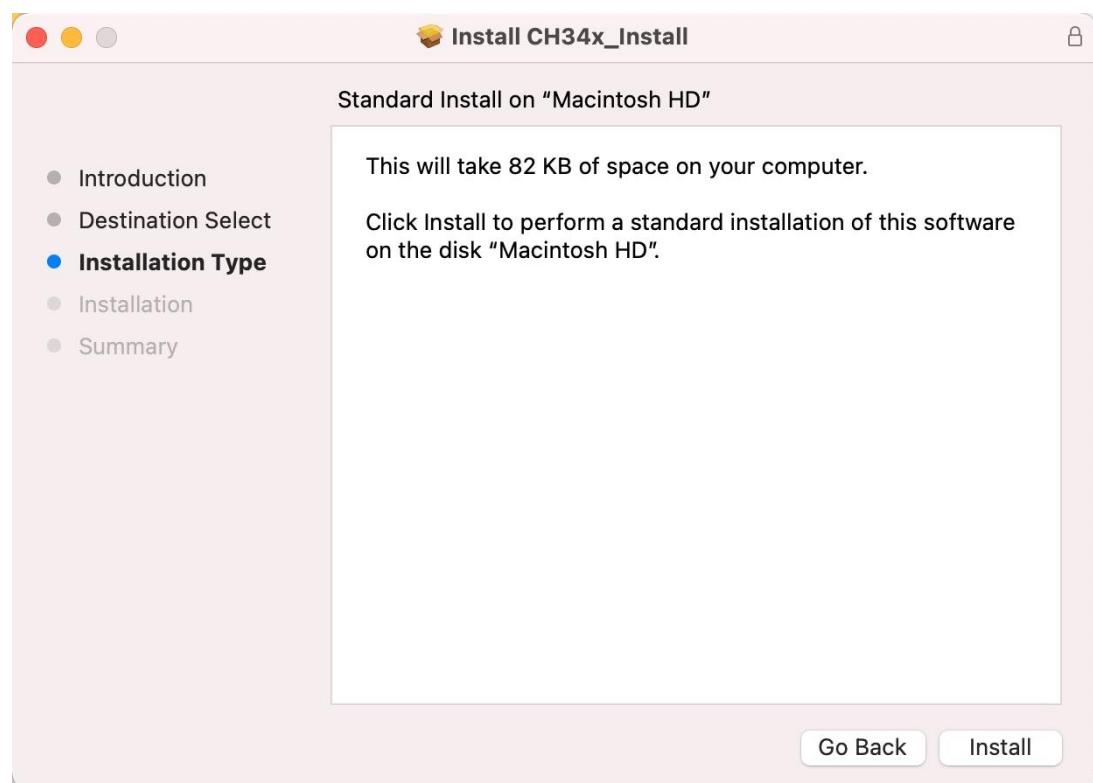

Then, waiting Finsh.

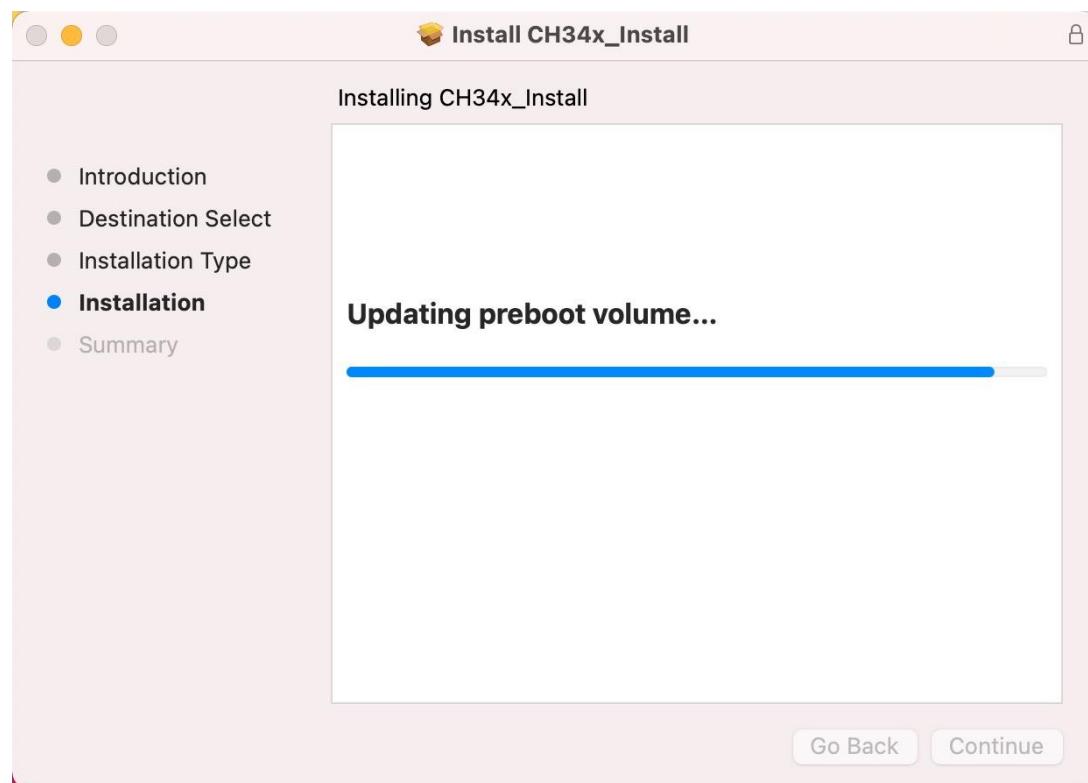


Finally, restart your PC.

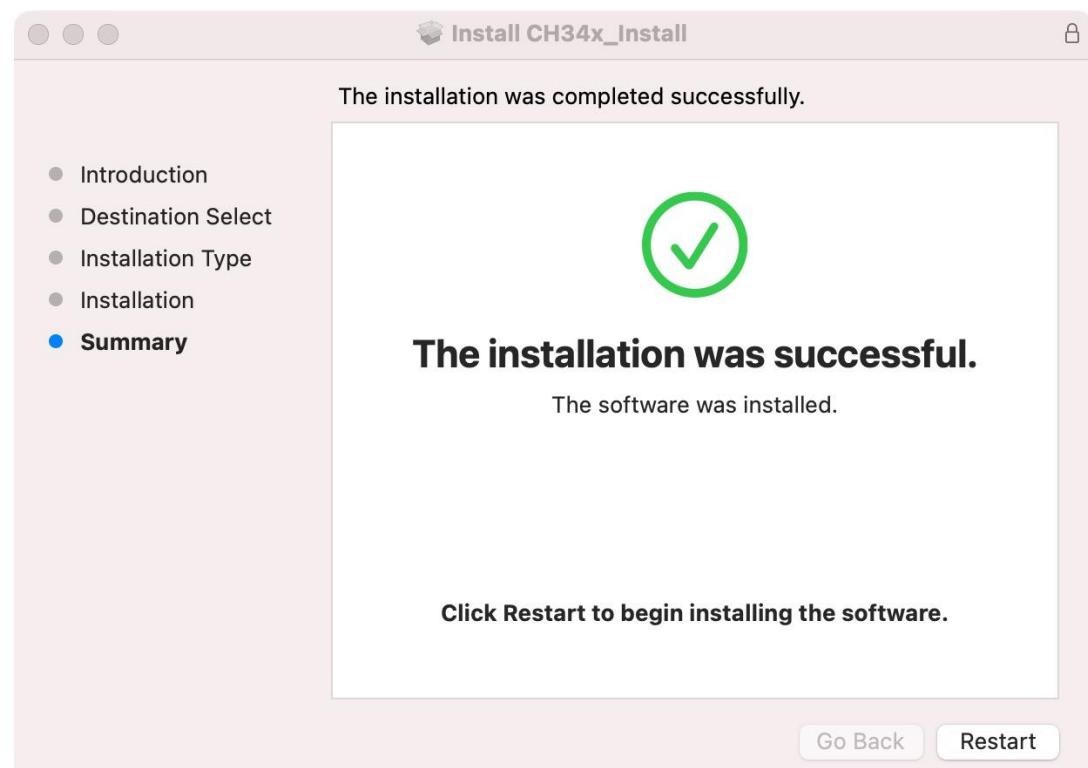




If you still haven't installed the CH340 by following the steps above, you can view `readme.pdf` to install it.

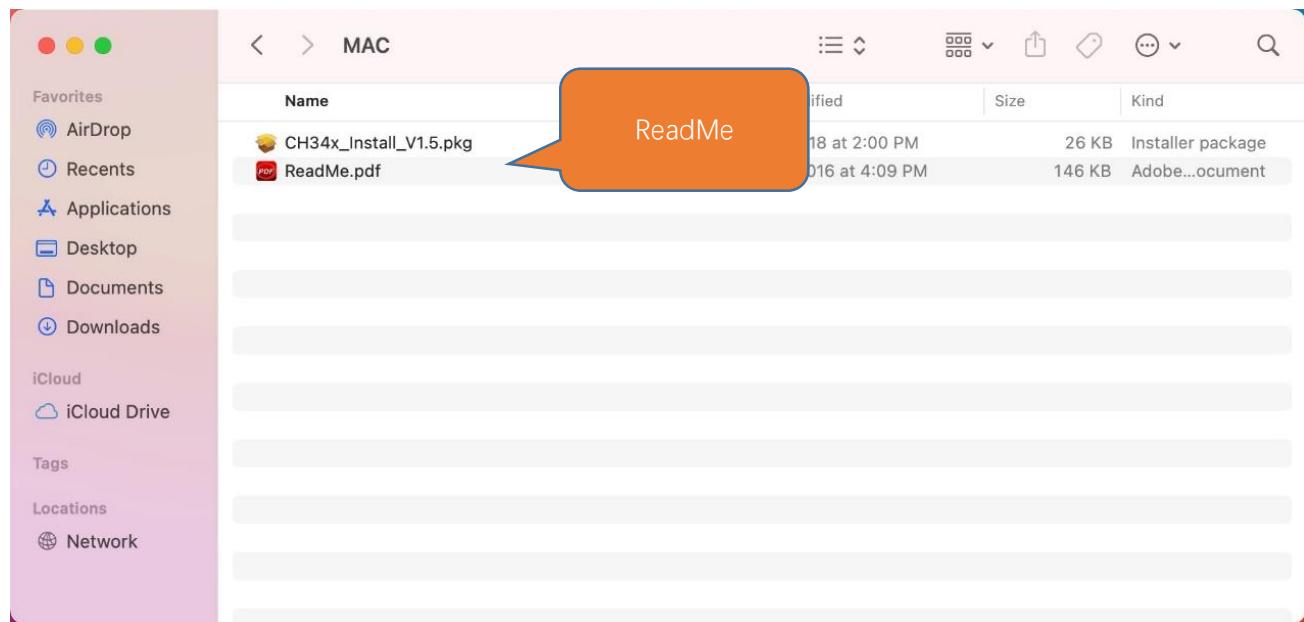

Programming Software

Arduino Software (IDE) is used to write and upload the code for Arduino Board.

First, install Arduino Software (IDE): visit <https://www.arduino.cc>, click "Download" to enter the download page.

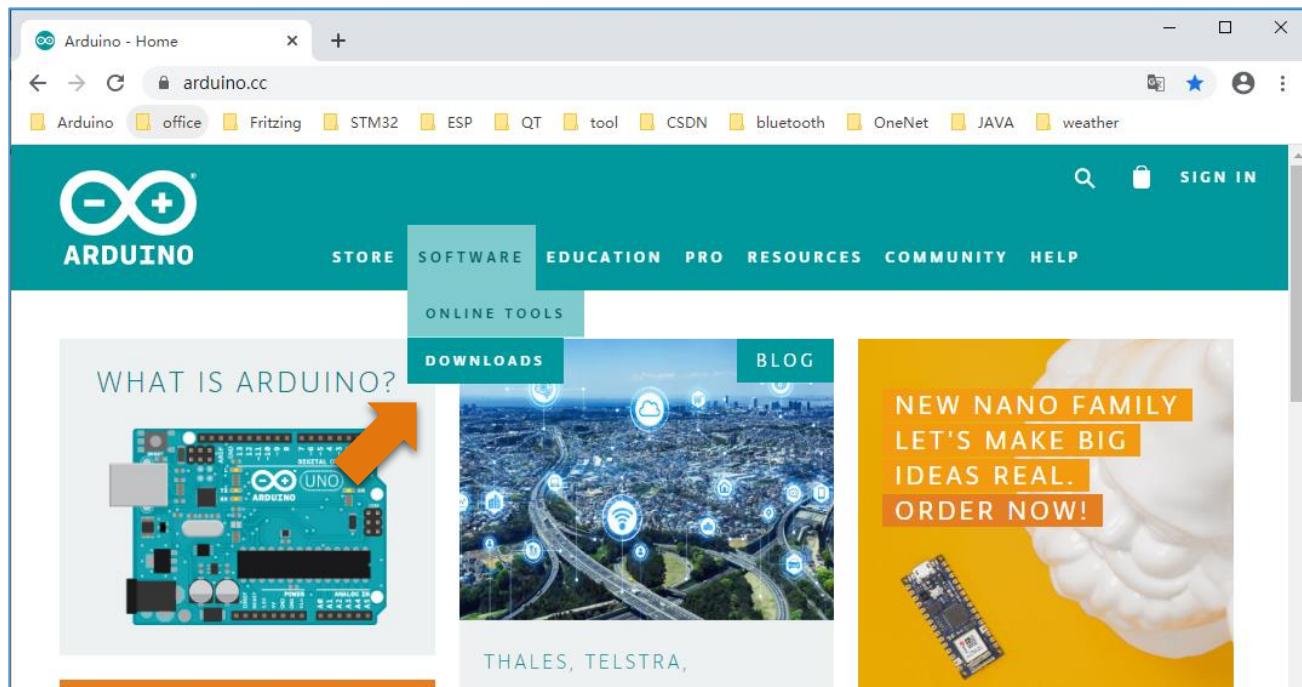

Select and download corresponding installer according to your operating system. If you are a windows user, please select the "Windows Installer" to download to install the driver correctly.

Downloads



Arduino IDE 1.8.19

The open-source Arduino Software (IDE) makes it easy to write code and upload it to the board. This software can be used with any Arduino board.

Refer to the [Getting Started](#) page for Installation instructions.

SOURCE CODE

Active development of the Arduino software is [hosted by GitHub](#). See the instructions for [building the code](#). Latest release source code archives are available [here](#). The archives are PGP-signed so they can be verified using [this](#) gpg key.

DOWNLOAD OPTIONS

Windows	Win 7 and newer	Get
Windows	ZIP file	
Windows app		Win 8.1 or 10 Get
Linux		32 bits
Linux		64 bits
Linux		ARM 32 bits
Linux		ARM 64 bits
Mac OS X 10.10 or newer		
Release Notes		
Checksums (sha512)		

After the download completes, run the installer. For Windows users, there may pop up an installation dialog box of driver during the installation process. When it popes up, please allow the installation.

After installation is complete, an Arduino Software shortcut will be generated in the desktop. Run the Arduino Software.

Any concerns? [✉ support@freenove.com](mailto:support@freenove.com)



The interface of Arduino Software is as follows:



Programs written with Arduino Software (IDE) are called **sketches**. These sketches are written in the text editor and saved with the file extension.**.ino**. The editor has features for cutting/pasting and searching/replacing text. The message area gives feedback while saving and exporting and also displays errors. The console displays text output by the Arduino Software (IDE), including complete error messages and other information. The bottom right-hand corner of the window displays the configured board and serial port. The toolbar buttons allow you to verify and upload programs, create, open, and save sketches, and open the serial monitor.



Verify

Check your code for compile errors .



Upload

Compile your code and upload them to the configured board.



New

Create a new sketch.



Open

Present a menu of all the sketches in your sketchbook. Clicking one will open it within the current window and overwrite its content.



Save

Save your sketch.



Serial Monitor


Open the serial monitor.

Additional commands are found within the five menus: File, Edit, Sketch, Tools, Help. The menus are context sensitive, which means only those items relevant to the work currently being carried out are available.




Environment Configuration


First, open the software platform arduino, and then click File in Menus and select Preferences.

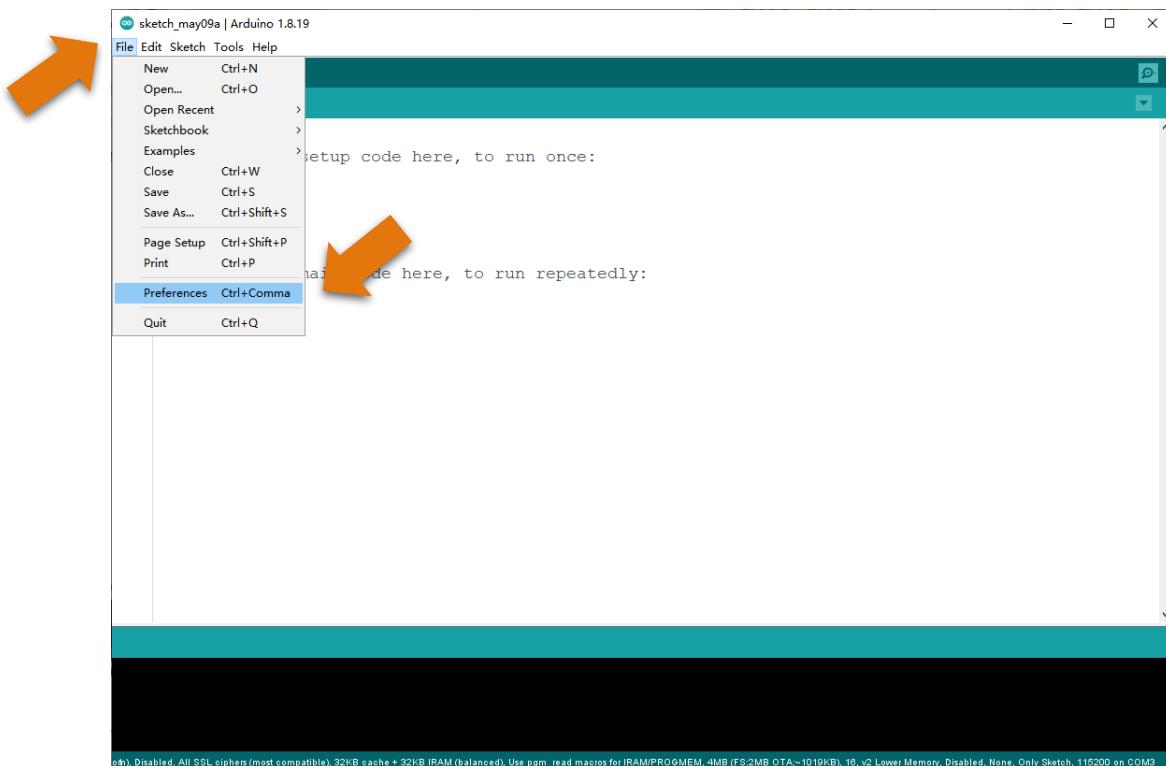


Second, click on the symbol behind "Additional Boards Manager URLs"

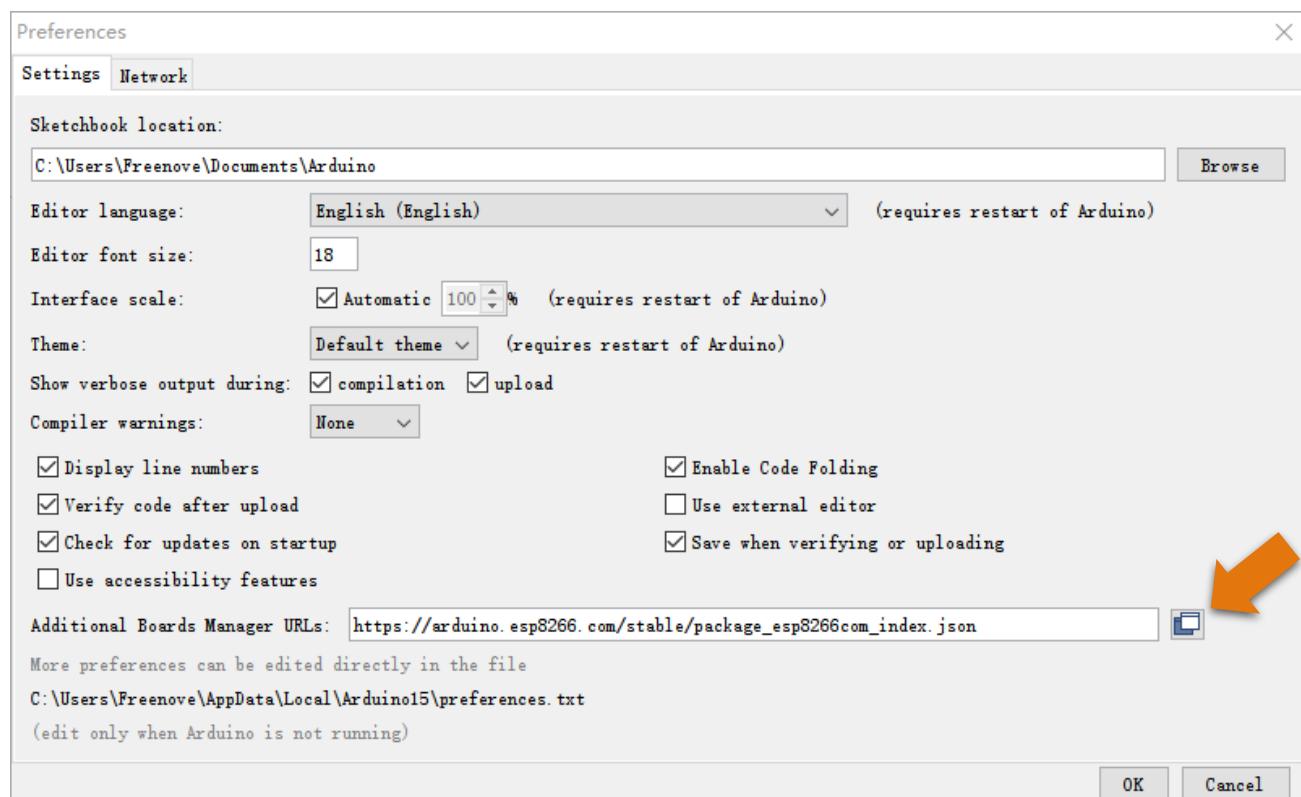

Third, fill in https://arduino.esp8266.com/stable/package_esp8266com_index.json in the new window, click OK, and click OK on the Preferences window again.

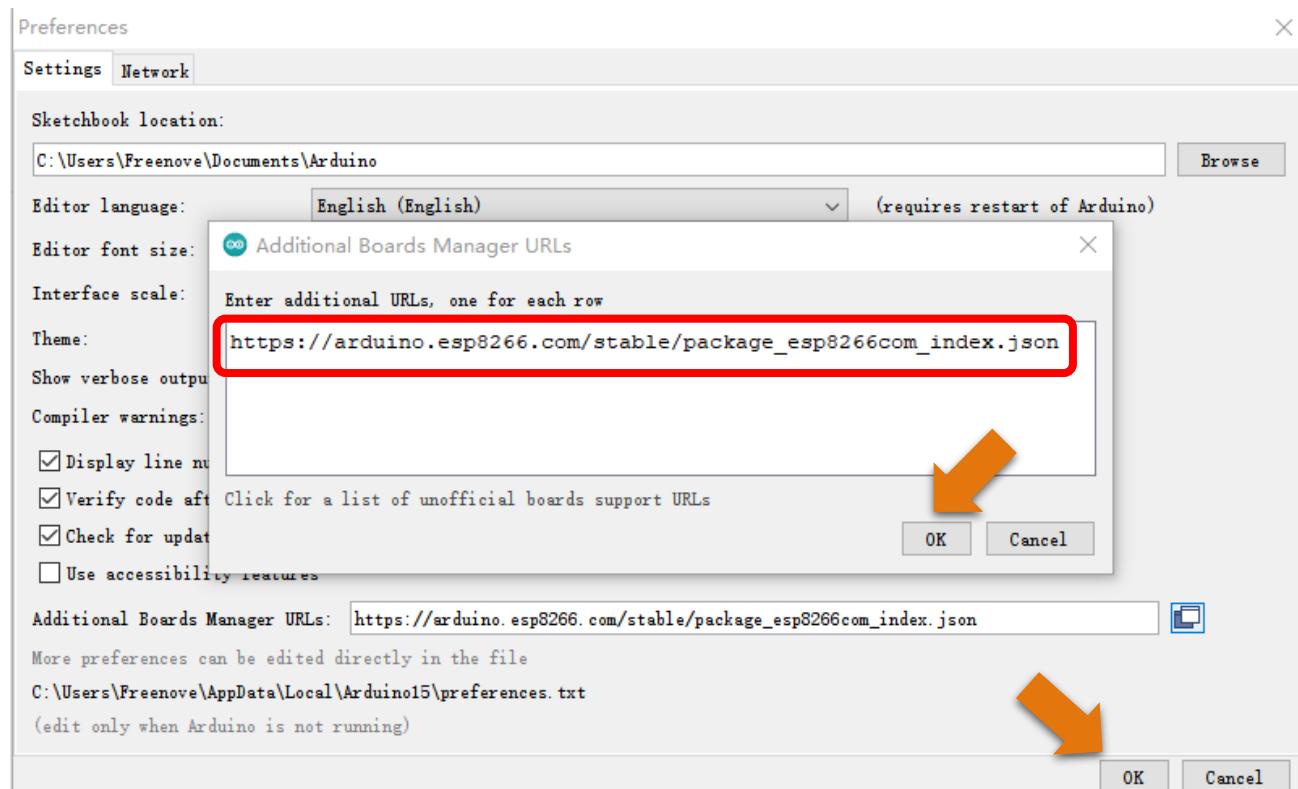


Fourth, click Tools in Menus, select Board:"ArduinoUno", and then select "Boards Manager".

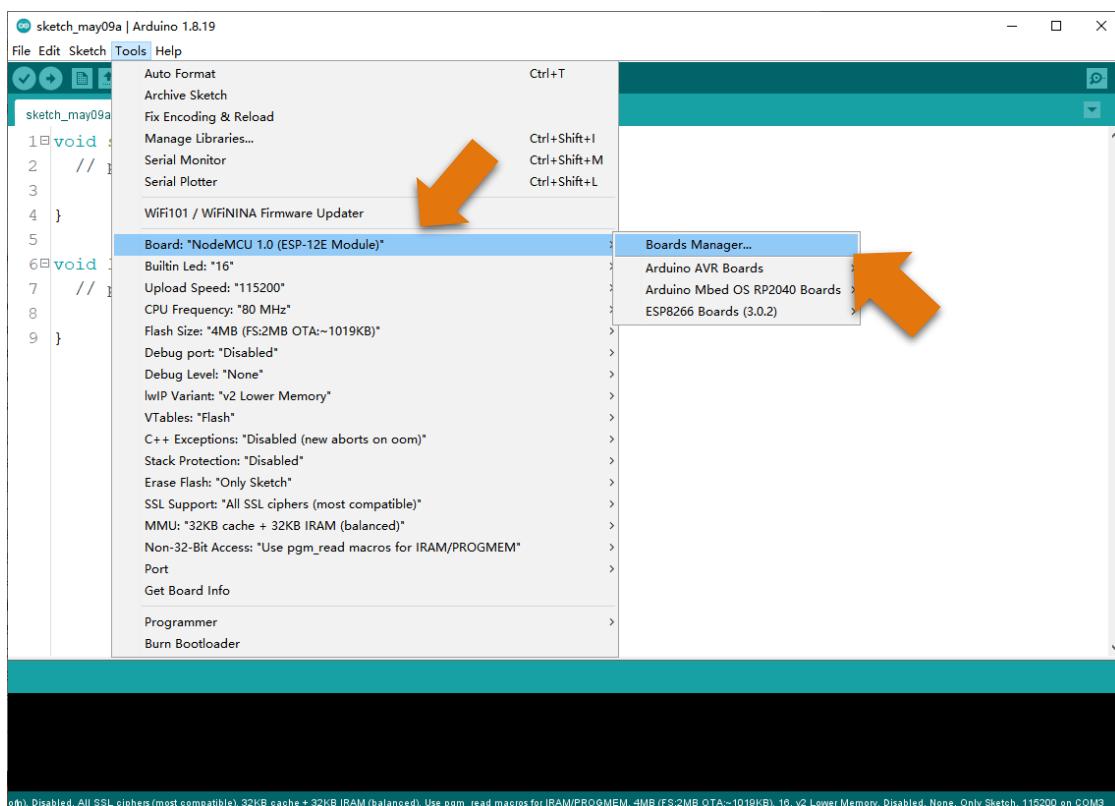

Fifth, input "esp8266" in the window below, and press Enter. click "Install" to install.




When finishing installation, click Tools in the Menus again and select Board: "NodeMCU 1.0(ESP-12E Module)", and then you can see information of ESP8266 click "NodeMCU 1.0(ESP-12E Module)" so that the ESP8266 programming development environment is configured.

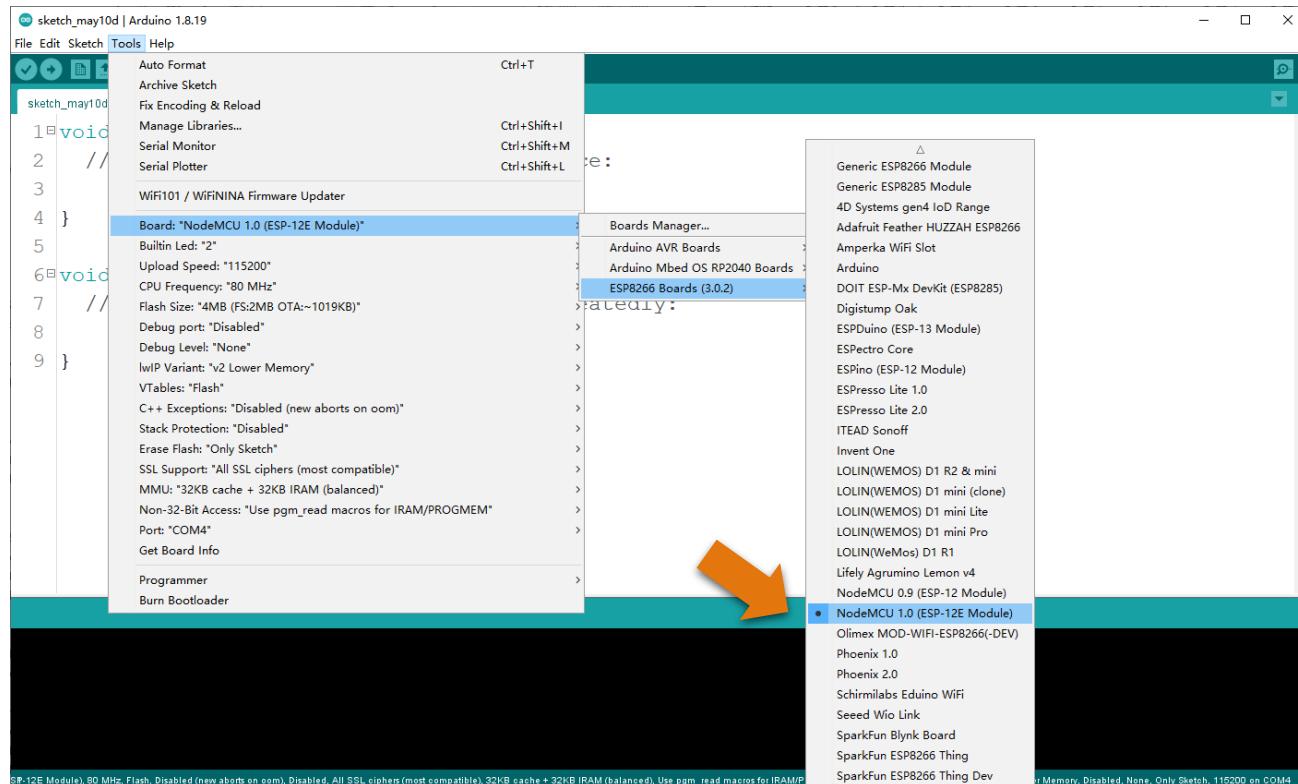


In our tutorial, we chose "NodeMCU 1.0(ESP-12E Module)" as the development board Module. This choice will facilitate learning and understanding of ESP8266. Of course, you can choose "Generic ESP8266 Module". Select "Generic ESP8266 Module" to apply to all Generic ESP8266 modules. Of course, this setup will have some more common configuration.

When you select "Generic ESP8266 Module", the interface is as follows:

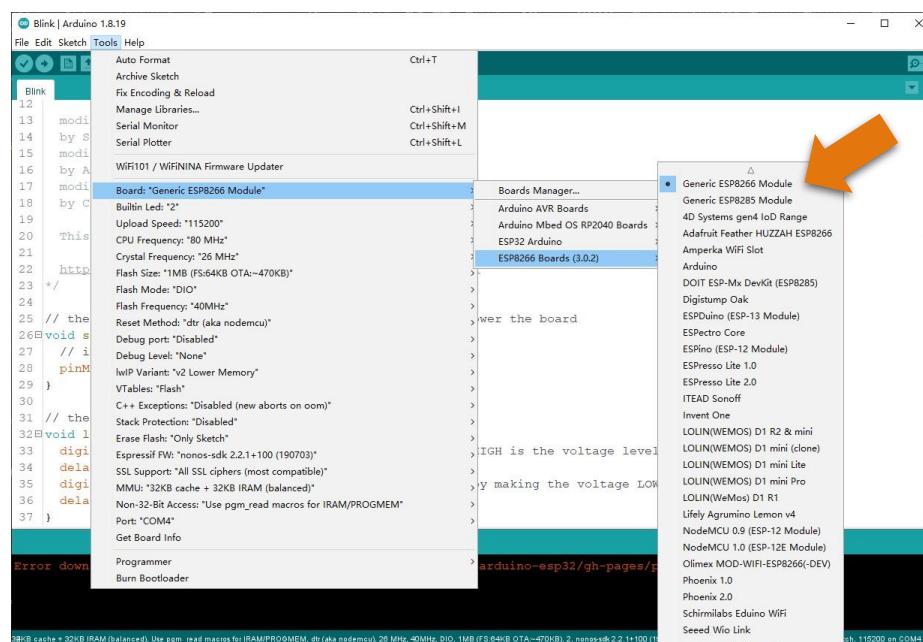


Any concerns? ✉ support@freenove.com

Select the module typehe module. Here you can choose the appropriate module based on your requirements.

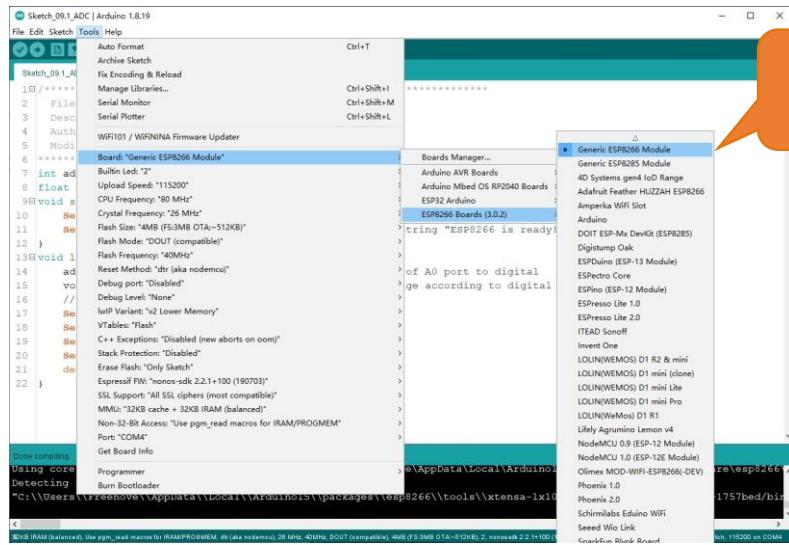


Select the module typehe module type

Module Onboard LED, in our ESP8266 development board, has an onboard LED of 2.

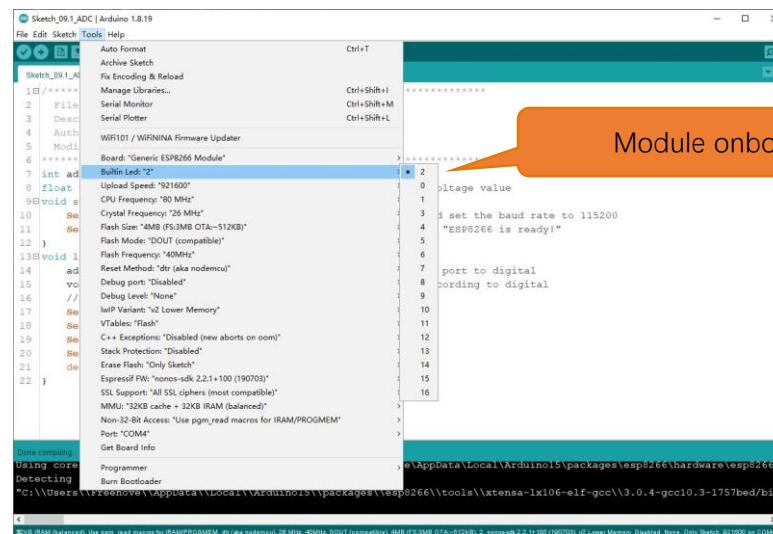

Module onboard LED


Upload Speed The maximum value is 921600. By default, Upload Speed is 115200. You can choose according to your needs.

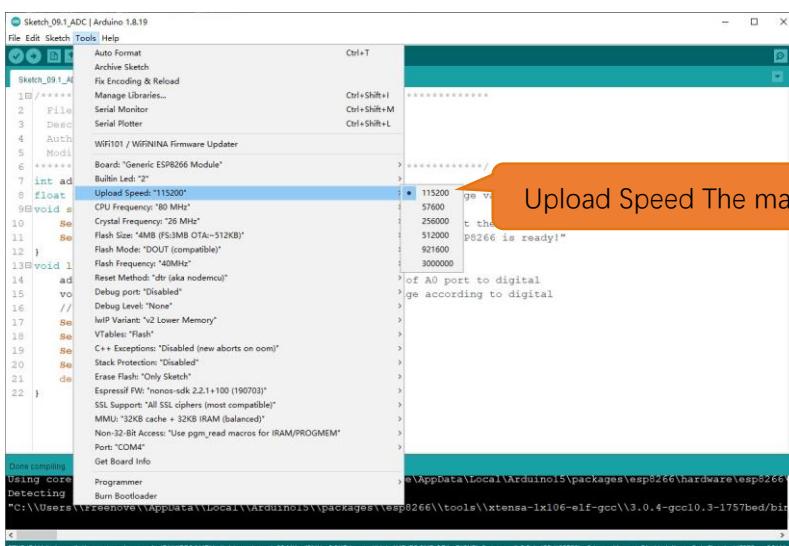


Upload Speed The maximum value is 921600

ESP8266's CPU frequency standard is 80MHz, which can be changed to 160MHz.


Any concerns? [✉ support@freenove.com](mailto:support@freenove.com)

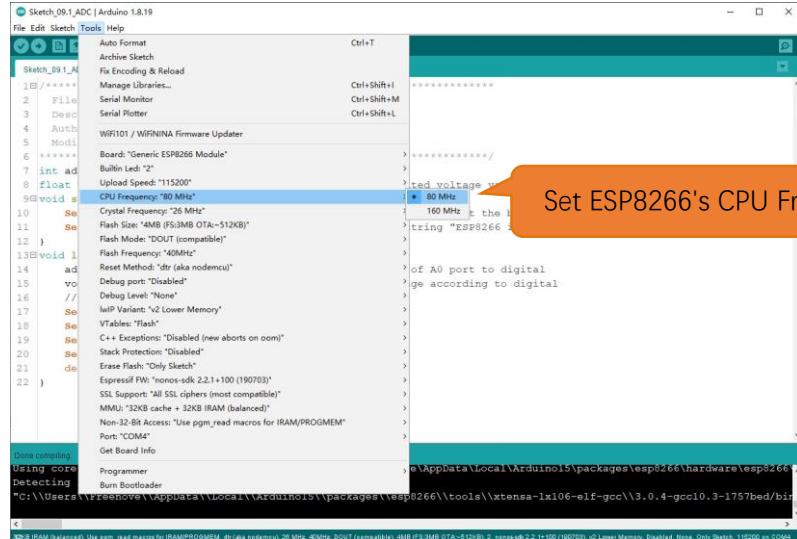

Most ESP8266 modules use 26 MHz crystals, but some have other values.

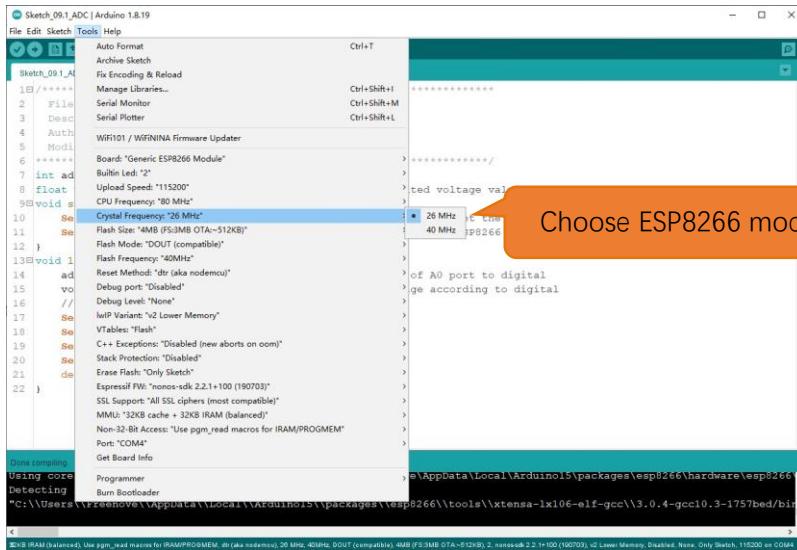

Choose the appropriate Flash size based on your ESP8266 module type. In our ESP8266 development board, we chose 4MB (FS: 3MB OTA: ~512KB).

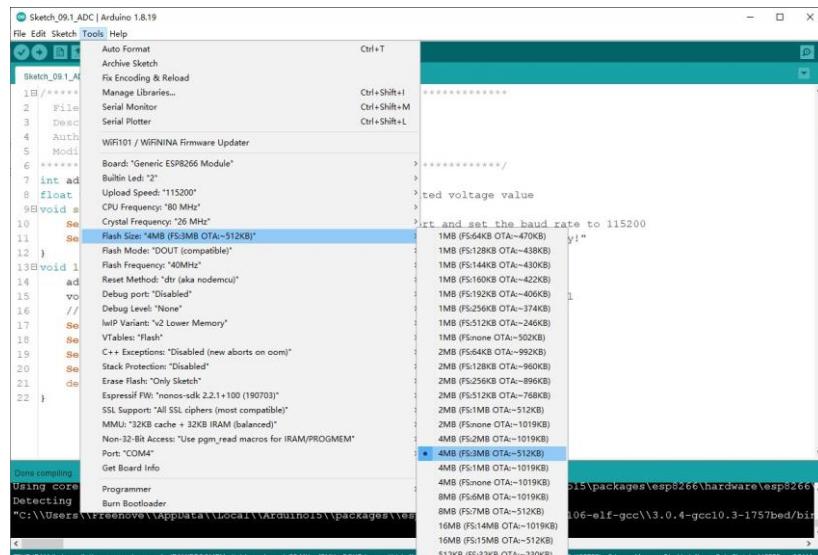

Any concerns? ✉ support@freenove.com



Here we need to select Flash mode. On our ESP8266 development board, choose "DIO" mode or "DOUT" mode for better compatibility. If the ESP8266 module is abnormal, check whether the ESP8266 module works in the two modes.

Flash works in DOUT, DIO, QOUT, and QIO modes.


1.DOUT: Address is input in 1-line mode and data is output in 2-line mode.

2.DIO: Address is input in 2-line mode and data is output in 2-line mode.


3.QOUT: Address is input in 1-line mode and data is output in 4-line mode.

4.QIO: Address is input in 4-line mode and data is output in 4-line mode.


If you need to use the QIO mode, ensure that the Flash supports the QIO mode.

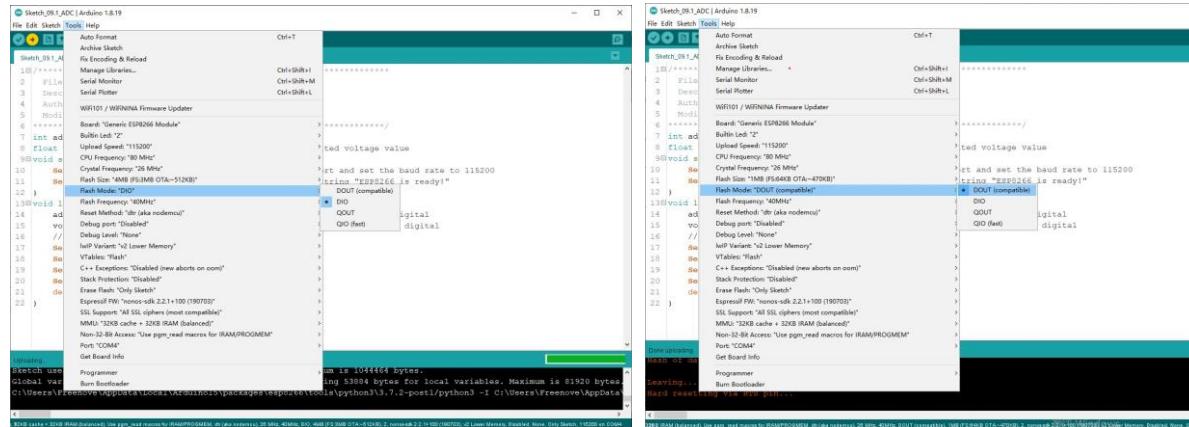

The flash chip connected to most chips operates at 40MHz clock speed, but you can try a lower value if the device fails to boot. The highest flash clock speed of 80MHz will provide the best performance, but can cause crashes if the flash or board design cannot achieve this speed.

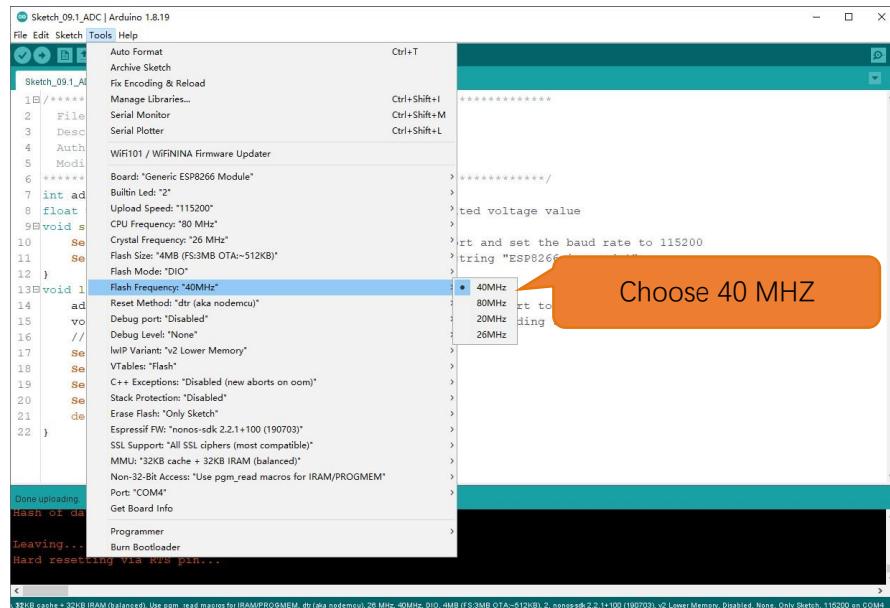

If you select NodeMCU 1.0(ESP-12E Module), the following interface is displayed:

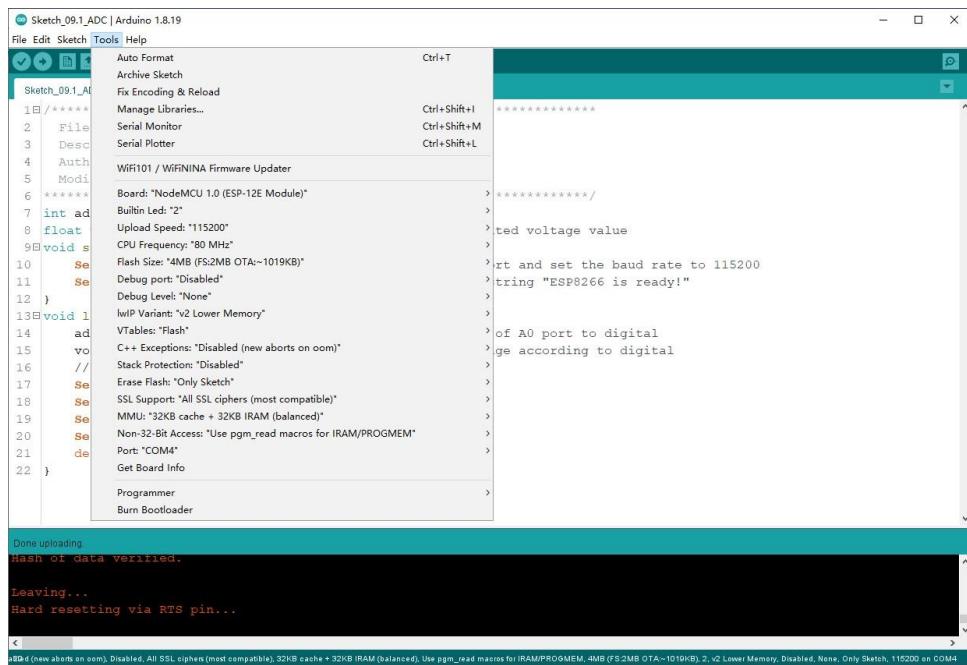

Here, you can see that this is similar to "Generic ESP8266 Module" in that the omitted parts are configured with default values. If you have problems working through this tutorial, try using the "Generic ESP8266 Module" configuration.

If you need any support, please feel free to contact us via: support@freenove.com


Chapter 0 LED

This chapter is the Start Point in the journey to build and explore ESP8266 electronic projects. We will start with simple “Blink” project.

Project 0.1 Blink


In this project, we will use ESP8266 to control blinking a common LED.

Component List

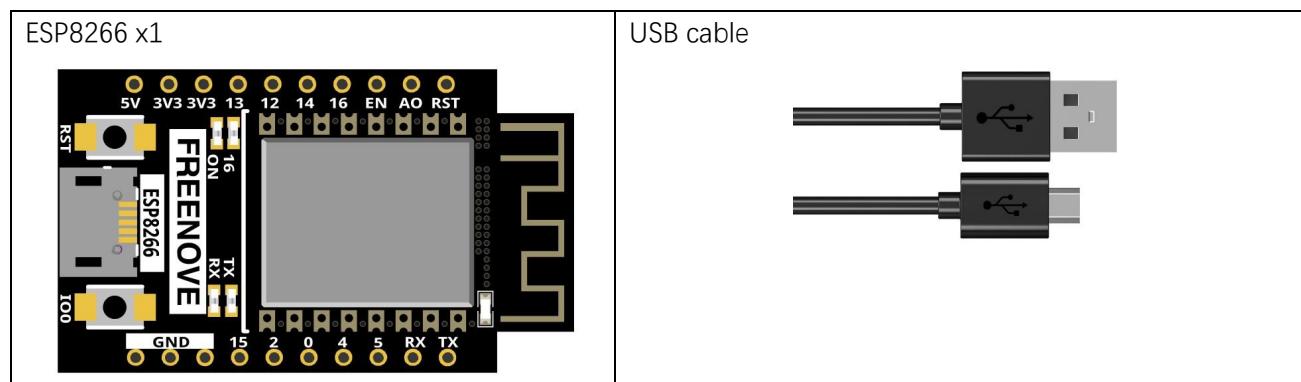

Power

ESP8266 needs 5v power supply. In this tutorial, we need connect ESP8266 development board to computer via USB cable to power it and program it. We can also use other 5v power source to power it.

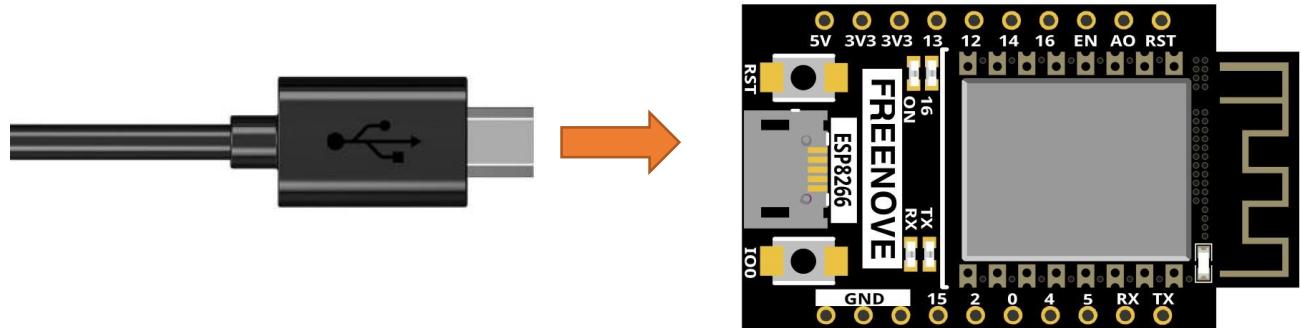

In the following projects, we only use USB cable to power ESP8266 development board by default.


Sketch

According to the circuit, when the GPIO2 of ESP8266 output level is high, the LED turns ON. Conversely, when the GPIO2 ESP8266 output level is low, the LED turns OFF. Therefore, we can let GPIO2 circularly output high and low level to make the LED blink.

Upload the following Sketch:

Freenove_Ultimate_Starter_Kit_for_ESP8266\С\Sketches\Sketch_01.1_Blink


Before uploading the code, click "Tools", "Board" and select "NodeMCU 1.0 (ESP-12E Module)".

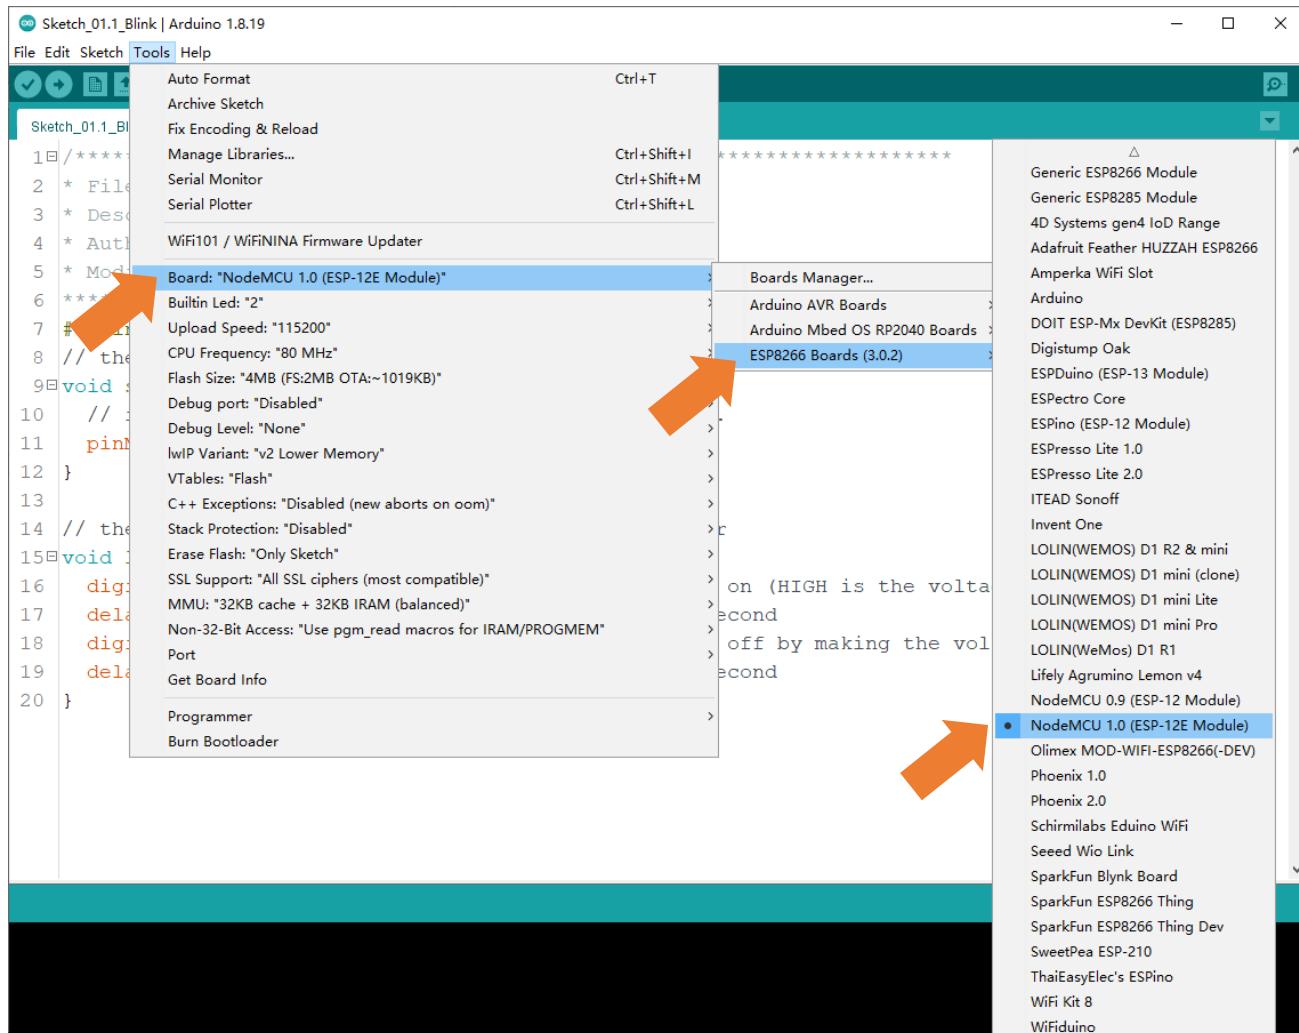


Select the serial port.



Note: For macOS users, if the uploading fails, please set the baud rate to 115200 before clicking "Upload Using Programmer".

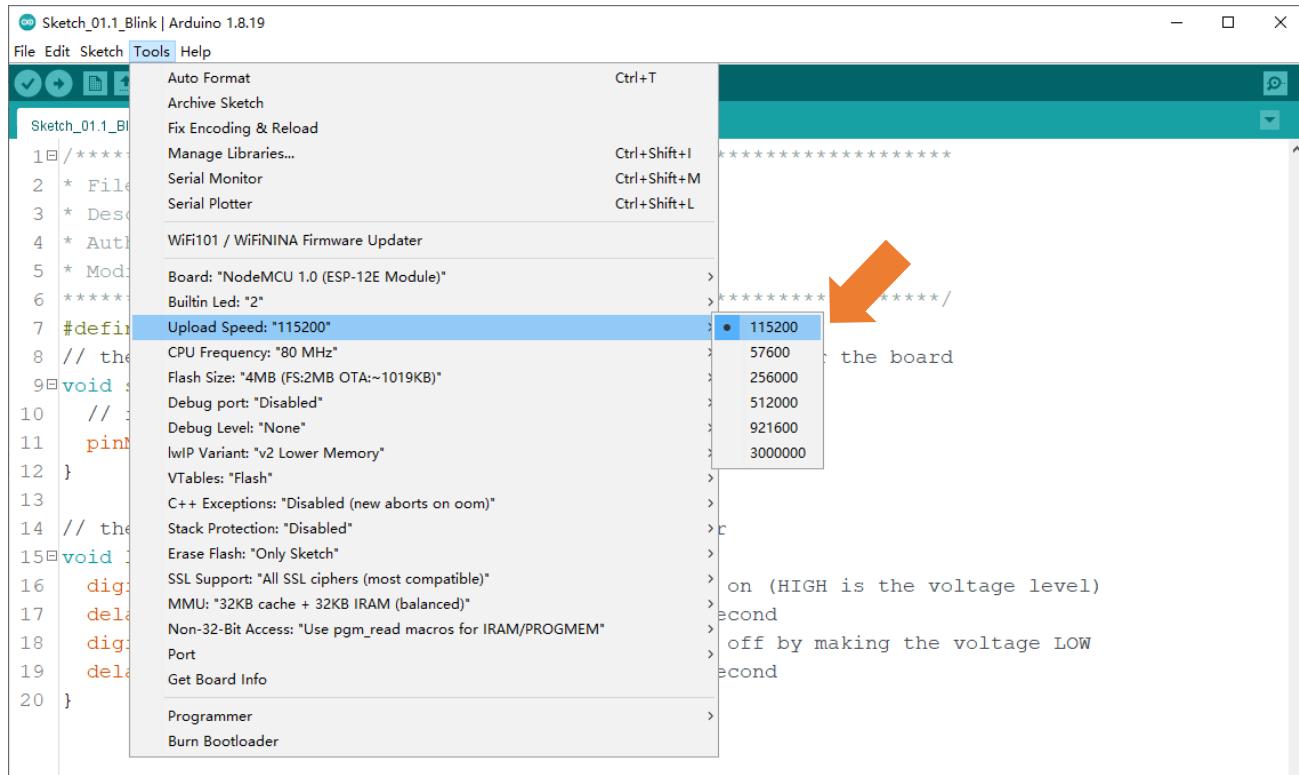

Sketch_01.1_Blink

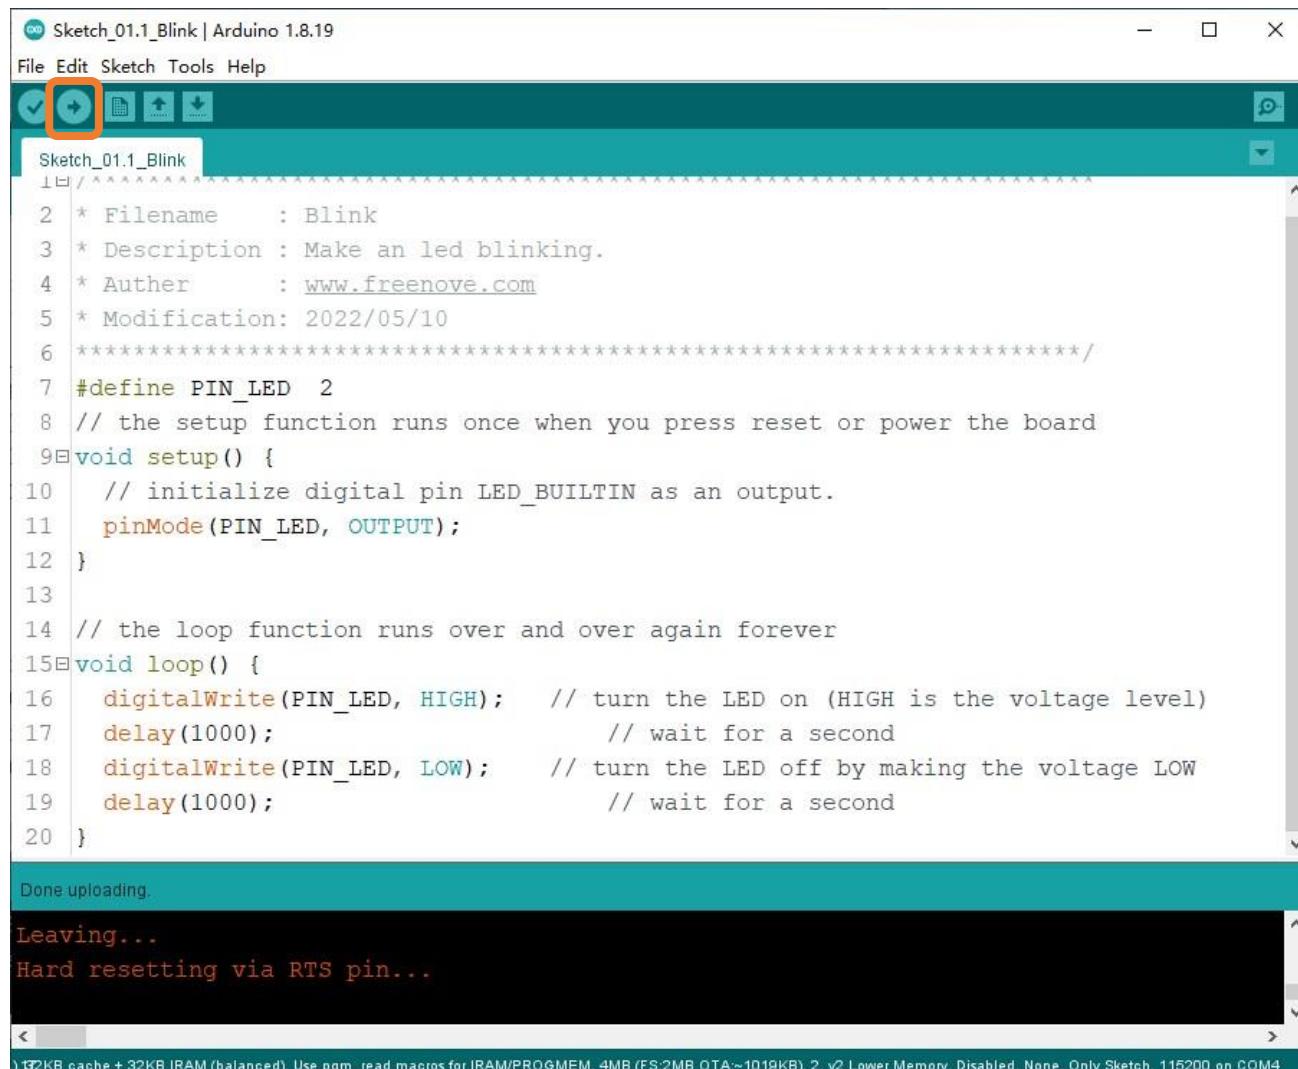

```

Sketch_01.1_Blink | Arduino 1.8.19
File Edit Sketch Tools Help
Sketch_01.1_Blink
1 // ****
2 * Filename      : Blink
3 * Description   : Make an led blinking.
4 * Author        : www.freenove.com
5 * Modification: 2022/05/10
6 ****
7 #define PIN_LED  2
8 // the setup function runs once when you press reset or power the board
9 void setup() {
10    // initialize digital pin LED_BUILTIN as an output.
11    pinMode(PIN_LED, OUTPUT);
12 }
13
14 // the loop function runs over and over again forever
15 void loop() {
16    digitalWrite(PIN_LED, HIGH);    // turn the LED on (HIGH is the voltage level)
17    delay(1000);                  // wait for a second
18    digitalWrite(PIN_LED, LOW);    // turn the LED off by making the voltage LOW
19    delay(1000);                  // wait for a second
20 }

```


Done uploading.

Leaving...

Hard resetting via RTS pin...

,132KB cache + 32KB IRAM (balanced), Use pgm_read macros for IRAM/PROGMEM, 4MB (FS:2MB OTA:~1019KB), 2, v2 Lower Memory, Disabled, None, Only Sketch, 115200 on COM4

Click “Upload”, Download the code to ESP8266 and your LED in the circuit starts Blink.

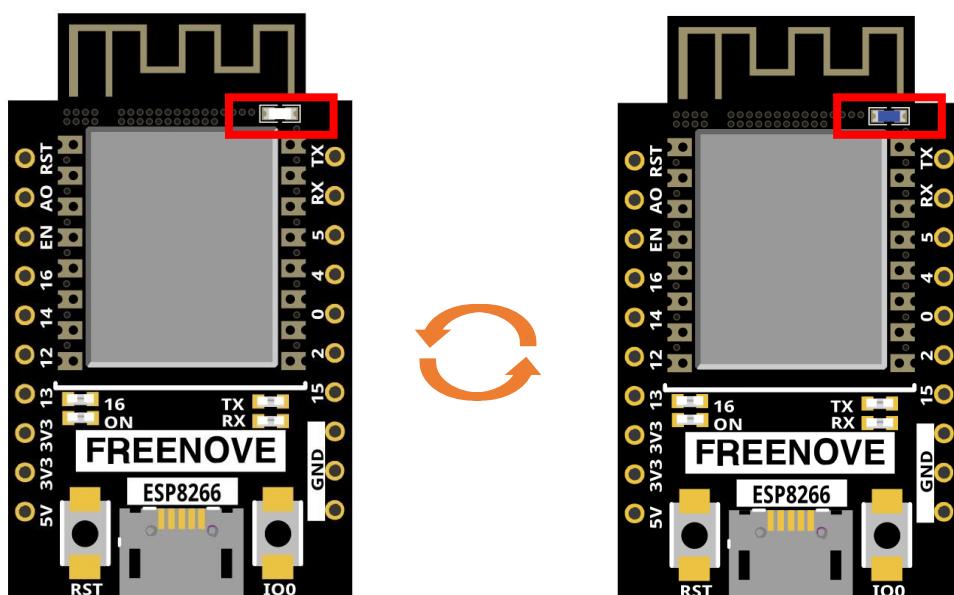

If you have any concerns, please contact us via: support@freenove.com

Any concerns? ✉ support@freenove.com

The following is the program code:


```

1 #define PIN_LED 2
2 // the setup function runs once when you press reset or power the board
3 void setup() {
4     // initialize digital pin LED_BUILTIN as an output.
5     pinMode(PIN_LED, OUTPUT);
6 }
7
8 // the loop function runs over and over again forever
9 void loop() {
10    digitalWrite(PIN_LED, HIGH); // turn the LED on (HIGH is the voltage level)
11    delay(1000); // wait for a second
12    digitalWrite(PIN_LED, LOW); // turn the LED off by making the voltage LOW
13    delay(1000); // wait for a second
14 }
```

The Arduino IDE code usually contains two basic functions: void setup() and void loop().

After the board is reset, the setup() function will be executed firstly, and then the loop() function.

setup() function is generally used to write code to initialize the hardware. And loop() function is used to write code to achieve certain functions. loop() function is executed repeatedly. When the execution reaches the end of loop(), it will jump to the beginning of loop() to run again.

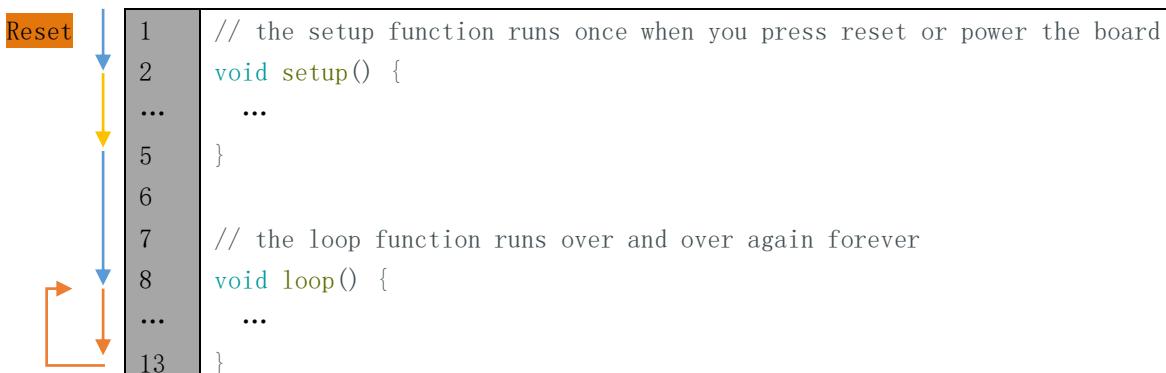

Reset

Reset operation will lead the code to be executed from the beginning. Switching on the power, finishing uploading the code and pressing the reset button will trigger reset operation.

In the circuit, ESP8266's GPIO2 is connected to the LED, so the LED pin is defined as 2.

```
1 #define PIN_LED 2
```

This means that after this line of code, all PIN_LED will be treated as 2.

In the setup () function, first, we set the PIN_LED as output mode, which can make the port output high level or low level.

```

4 // initialize digital pin PIN_LED as an output.
5 pinMode(PIN_LED, OUTPUT);
```

Then, in the loop () function, set the PIN_LED to output high level to make LED light up.

```
10 digitalWrite(PIN_LED, HIGH); // turn the LED on (HIGH is the voltage level)
```

Wait for 1000ms, that is 1s. Delay () function is used to make control board wait for a moment before executing the next statement. The parameter indicates the number of milliseconds to wait for.

```
11    delay(1000);           // wait for a second
```

Then set the PIN_LED to output low level, and LED light off. One second later, the execution of loop () function will be completed.

```
12    digitalWrite(PIN_LED, LOW); // turn the LED off by making the voltage LOW
13    delay(1000);           // wait for a second
```

The loop() function is constantly being executed, so LED will keep blinking.

Reference

```
void pinMode(int pin, int mode);
```

Configures the specified pin to behave either as an input or an output.

Parameters

pin: the pin number to set the mode of.

mode: INPUT, OUTPUT, INPUT_PULLDOWN, or INPUT_PULLUP.

```
void digitalWrite (int pin, int value);
```

Writes the value HIGH or LOW (1 or 0) to the given pin which must have been previously set as an output.

For more related functions, please refer to <https://www.arduino.cc/reference/en/>




Chapter 1 LED

This chapter is the Start Point in the journey to build and explore ESP8266 electronic projects. We will start with simple “Blink” project.

Project 1.1 Blink

In this project, we will use ESP8266 to control blinking a common LED.

Component List

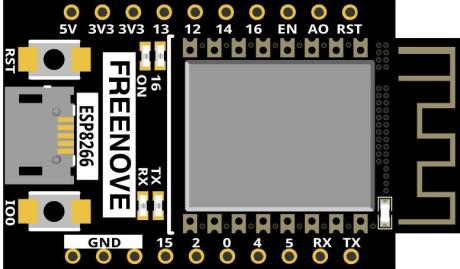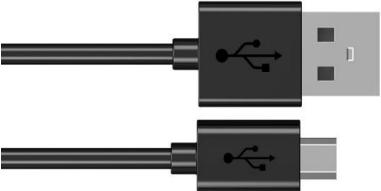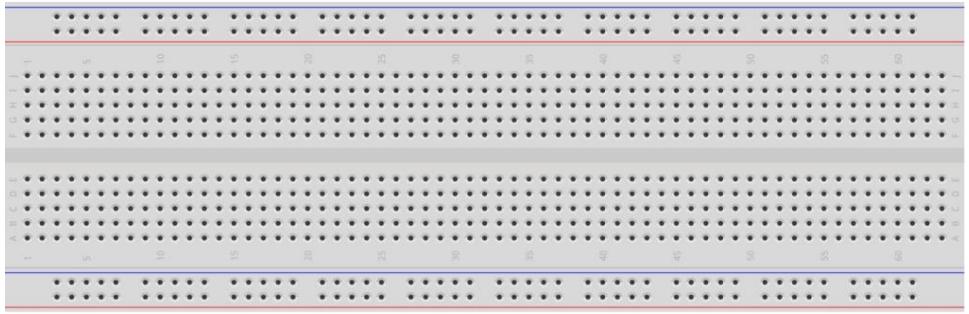ESP8266 x1	USB cable	
		
Breadboard x1		
		
LED x1	Resistor 220Ω x1	Jumper wire M/M x3

Component knowledge

LED

A LED is a type of diode. All diodes only work if current is flowing in the correct direction and have two poles. A LED will only work (light up) if the longer pin (+) of LED is connected to the positive output from a power source and the shorter pin is connected to the negative (-). Negative output is also referred to as Ground (GND). This type of component is known as “diodes” (think One-Way Street).

All common 2 lead diodes are the same in this respect. Diodes work only if the voltage of its positive electrode is higher than its negative electrode and there is a narrow range of operating voltage for most all common diodes of 1.9 and 3.4V. If you use much more than 3.3V the LED will be damaged and burn out.




LED	Voltage	Maximum current	Recommended current
Red	1.9 - 2.2V	20mA	10mA
Green	2.9 - 3.4V	10mA	5mA
Blue	2.9 - 3.4V	10mA	5mA
Volt ampere characteristics conform to diode			

Note: LEDs cannot be directly connected to a power supply, which usually ends in a damaged component. A resistor with a specified resistance value must be connected in series to the LED you plan to use.

Resistor

Resistors use Ohms (Ω) as the unit of measurement of their resistance (R). $1M\Omega=1000k\Omega$, $1k\Omega=1000\Omega$.

A resistor is a passive electrical component that limits or regulates the flow of current in an electronic circuit. On the left, we see a physical representation of a resistor, and the right is the symbol used to represent the presence of a resistor in a circuit diagram or schematic.

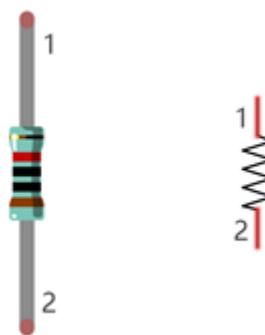


The bands of color on a resistor is a shorthand code used to identify its resistance value. For more details of resistor color codes, please refer to the appendix of this tutorial.

With a fixed voltage, there will be less current output with greater resistance added to the circuit. The relationship between Current, Voltage and Resistance can be expressed by this formula: $I=V/R$ known as Ohm's Law where I = Current, V = Voltage and R = Resistance. Knowing the values of any two of these allows you to solve the value of the third.

In the following diagram, the current through R1 is: $I=U/R=5V/10k\Omega=0.0005A=0.5mA$.

Any concerns? ✉ support@freenove.com

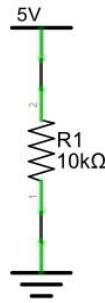


WARNING: Never connect the two poles of a power supply with anything of low resistance value (i.e. a metal object or bare wire) this is a Short and results in high current that may damage the power supply and electronic components.

Note: Unlike LEDs and diodes, resistors have no poles and are non-polar (it does not matter which direction you insert them into a circuit, it will work the same)


Breadboard

Here we have a small breadboard as an example of how the rows of holes (sockets) are electrically attached. The left picture shows the way to connect pins. The right picture shows the practical internal structure.

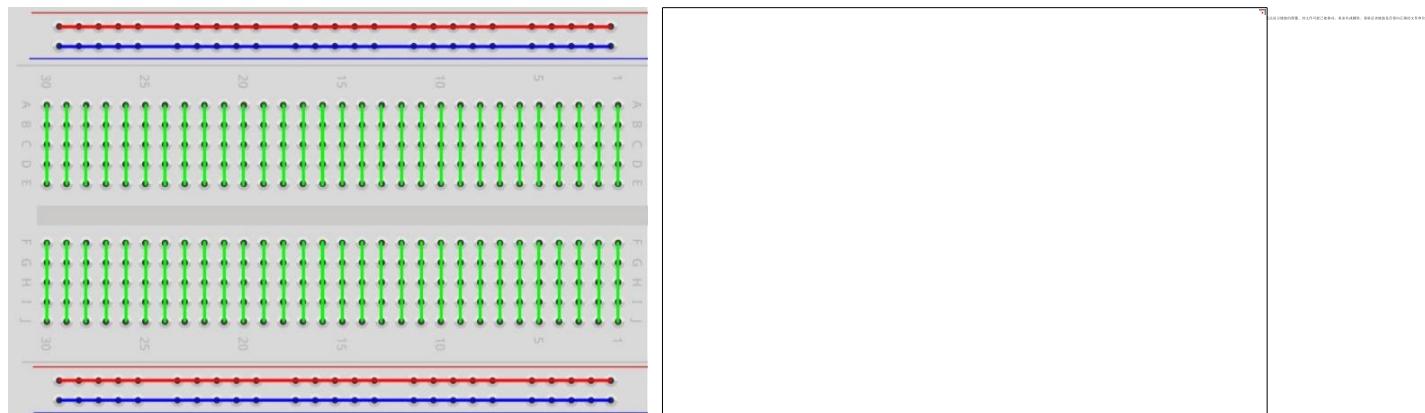

Power

ESP8266 needs 5v power supply. In this tutorial, we need connect ESP8266 to computer via USB cable to power it and program it. We can also use other 5v power source to power it.

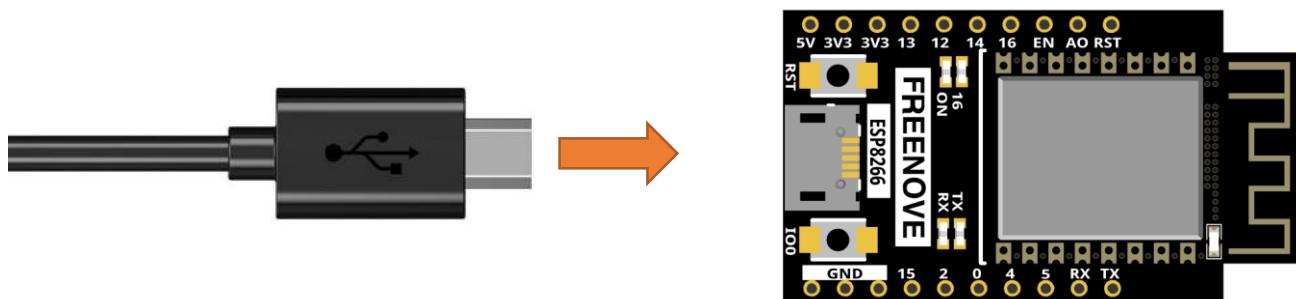


In the following projects, we only use USB cable to power ESP8266 by default.

Circuit


First, disconnect all power from the ESP8266. Then build the circuit according to the circuit and hardware diagrams. After the circuit is built and verified correct, connect the PC to ESP8266.

CAUTION: Avoid any possible short circuits (especially connecting 5V or GND, 3.3V and GND)! **WARNING:** A short circuit can cause high current in your circuit, generate excessive component heat and cause permanent damage to your hardware!

Schematic diagram

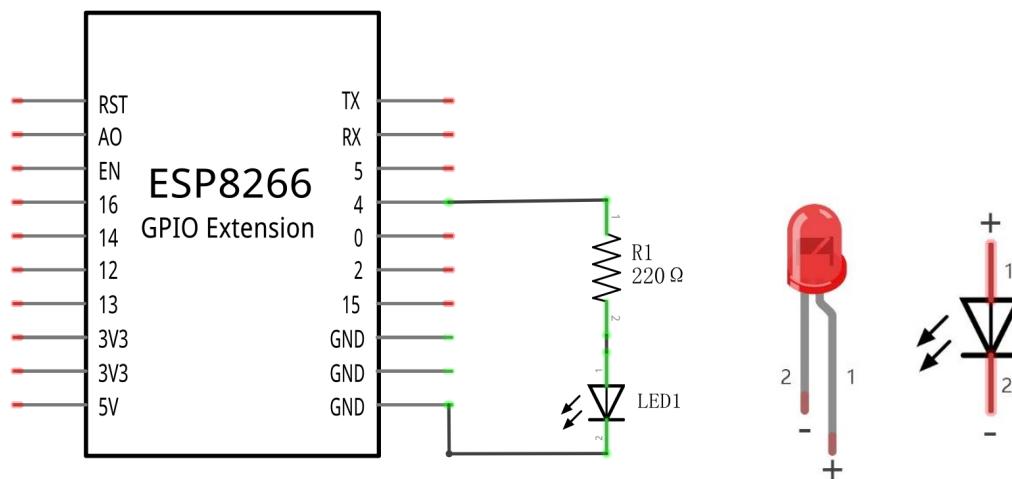

Hardware connection. **If you need any support, please contact us via: support@freenove.com**

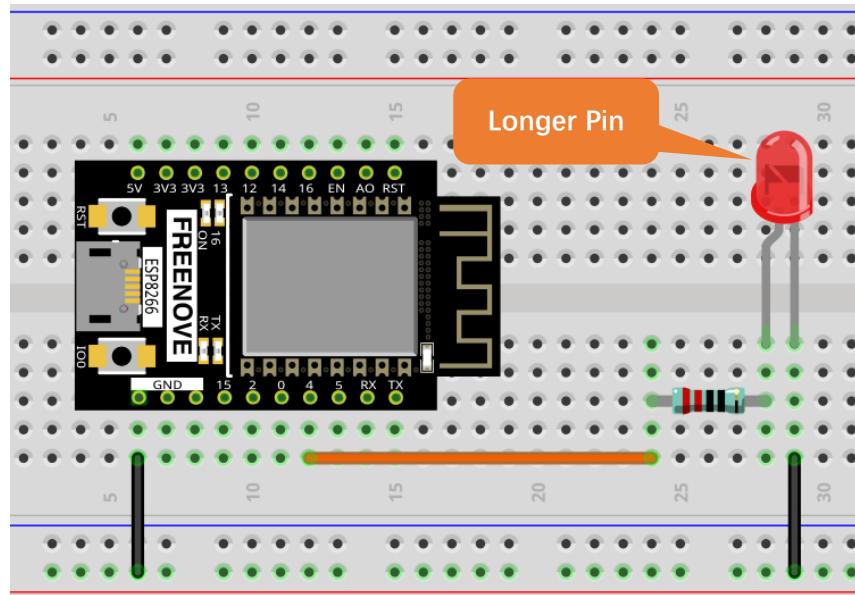

Sketch


According to the circuit, when the GPIO4 of ESP8266 output level is high, the LED turns ON. Conversely, when the GPIO4 ESP8266 output level is low, the LED turns OFF. Therefore, we can let GPIO4 circularly output high and low level to make the LED blink.

Any concerns? ✉ support@freenove.com


Upload the following Sketch:

Freenove_Ultimate_Starter_Kit_for_ESP8266\C\Sketches\Sketch_01.1_Blink2


Before uploading the code, click "Tools", "Board" and select "NodeMCU 1.0 (ESP-12E Module)".

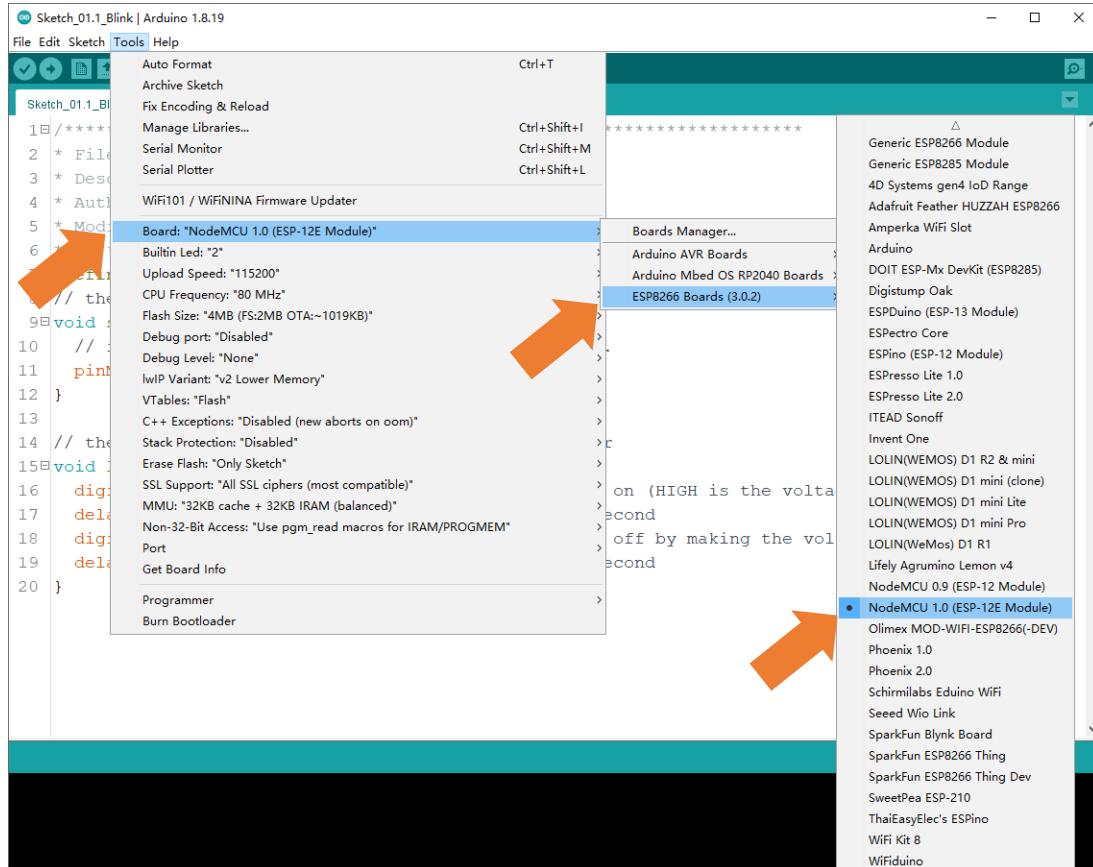

Select the serial port.

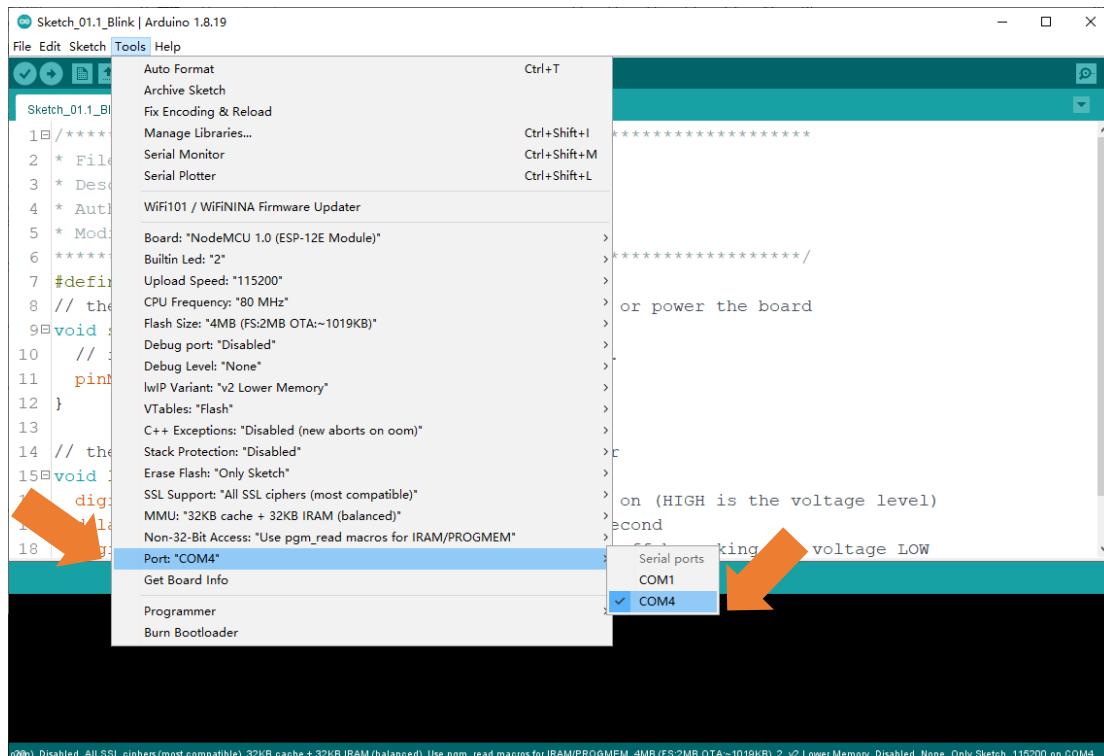

Note: For macOS users, if the uploading fails, please set the baud rate to 115200 before clicking “Upload Using Programmer”.

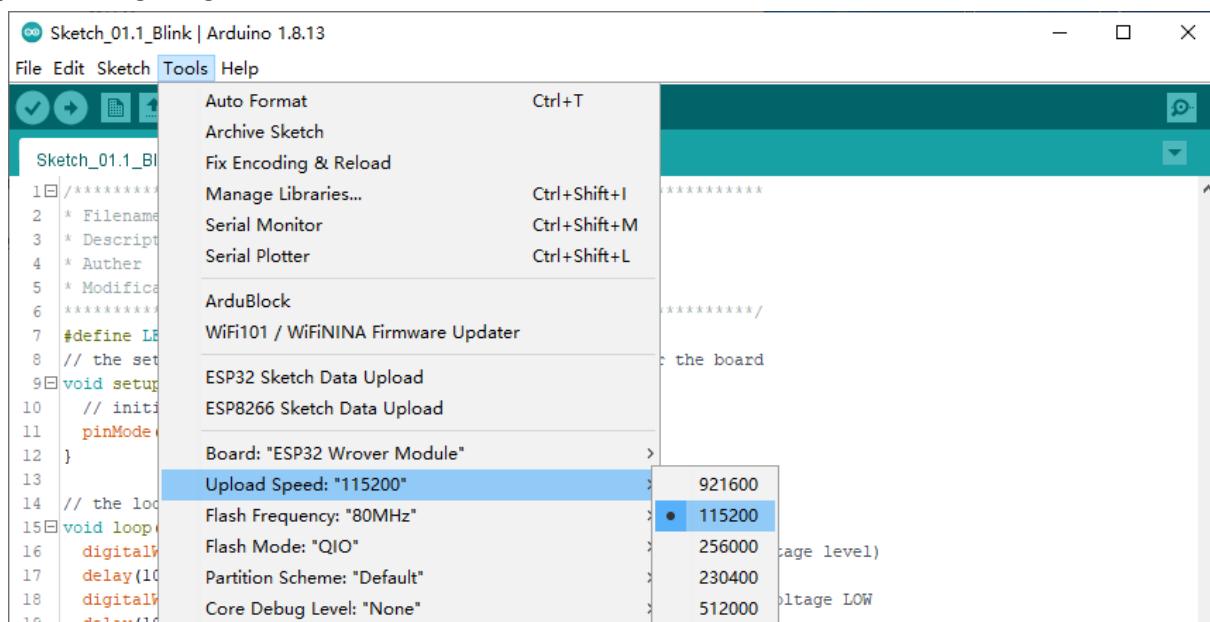

Sketch_01.1_Blink2

The screenshot shows the Arduino IDE interface with the title bar "Sketch_01.1_Blink | Arduino 1.8.19". The "File" menu is open, and the "Upload" button (represented by a circular arrow icon) is circled in orange. The main code editor window displays a sketch named "Sketch_01.1_Blink2" with the same code as Sketch_01.1_Blink. The bottom status bar shows "Done uploading." and the serial monitor output shows:

```

Leaving...
Hard resetting via RTS pin...

```

The status bar also indicates memory usage: "282KB cache + 32KB IRAM (balanced). Use pgm_read macros for IRAM/PROGMEM. 4MB (FS:2MB OTA:~1019KB), 2, v2 Lower Memory, Disabled, None, Only Sketch, 115200 on COM4".

Click “Upload”, Download the code to ESP8266 and your LED in the circuit starts Blink.




If you have any concerns, please contact us via: support@freenove.com

The following is the program code:

```
1 #define PIN_LED 4
2 // the setup function runs once when you press reset or power the board
3 void setup() {
4     // initialize digital pin LED_BUILTIN as an output.
5     pinMode(PIN_LED, OUTPUT);
6 }
7
8 // the loop function runs over and over again forever
9 void loop() {
10    digitalWrite(PIN_LED, HIGH);      // turn the LED on (HIGH is the voltage level)
11    delay(1000);                  // wait for a second
12    digitalWrite(PIN_LED, LOW);     // turn the LED off by making the voltage LOW
13    delay(1000);                  // wait for a second
14 }
```

Chapter 2 Button & LED

Usually, there are three essential parts in a complete automatic control device: INPUT, OUTPUT, and CONTROL. In last section, the LED module was the output part and ESP8266 was the control part. In practical applications, we not only make LEDs flash, but also make a device sense the surrounding environment, receive instructions and then take the appropriate action such as LEDs light up, make a buzzer turn ON and so on.

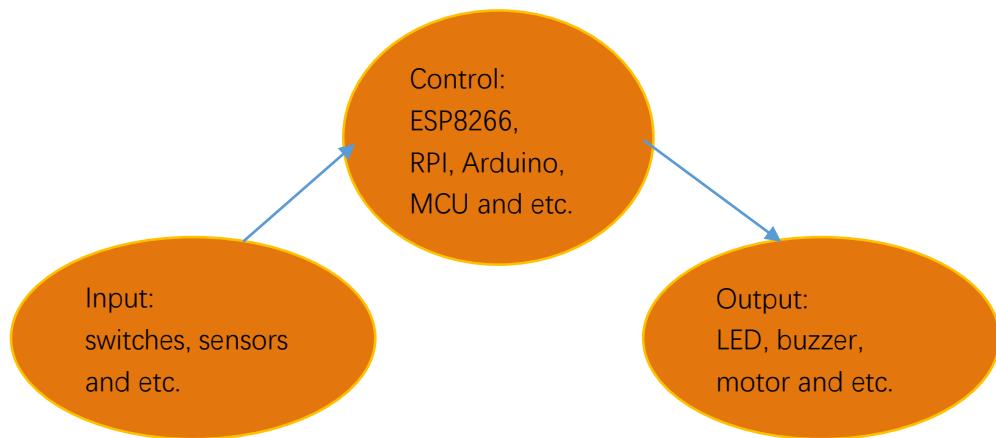

Next, we will build a simple control system to control a LED through a push button switch.

Project 2.1 Button & LED

In the project, we will control the LED state through a Push Button Switch. When the button is pressed, our LED will turn ON, and when it is released, the LED will turn OFF.



Component List

ESP8266 x1	USB cable			
Breadboard x1				
Jumper wire M/M x6	LED x1	Resistor 220Ω x1	Resistor 10kΩ x2	Push button x1

Component knowledge

Push button


This type of push button switch has 4 pins (2 Pole Switch). Two pins on the left are connected, and both left and right sides are the same per the illustration:




When the button on the switch is pressed, the circuit is completed (your project is powered ON).

Circuit

Schematic diagram

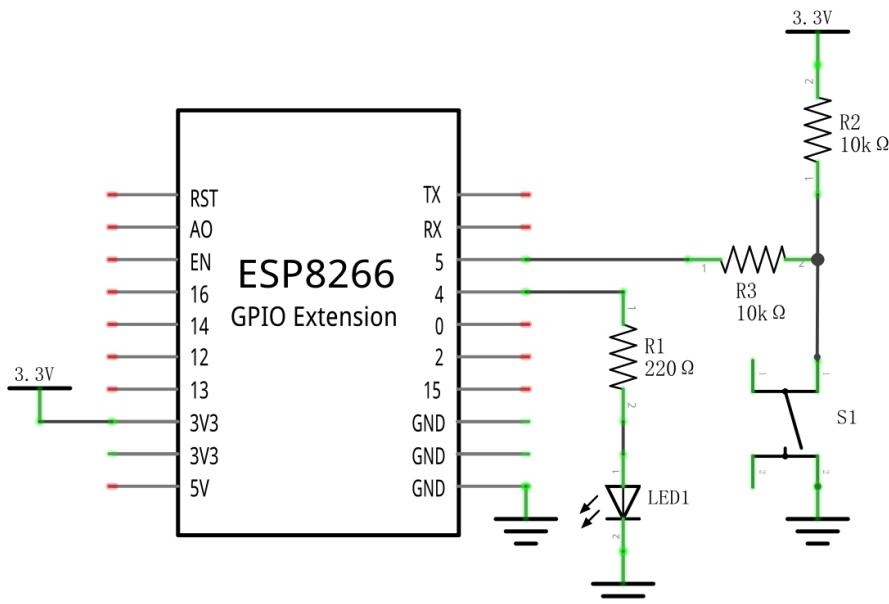

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

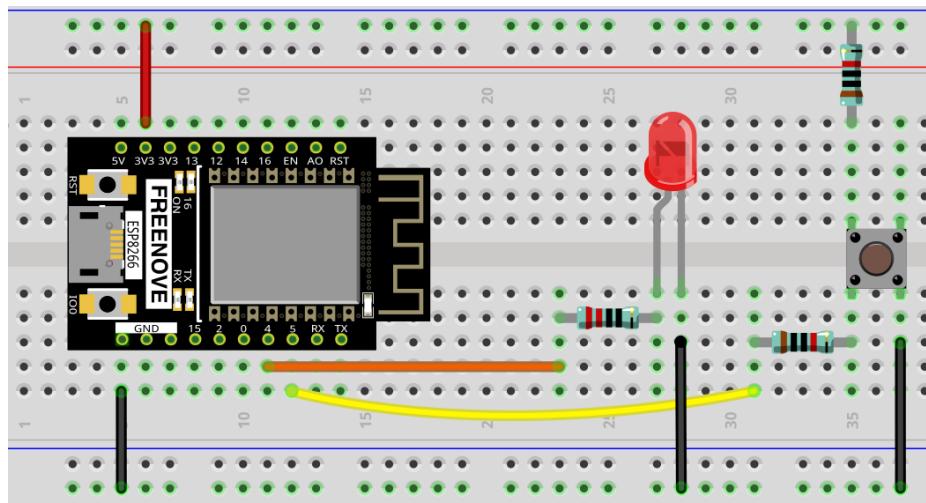

Any concerns? support@freenove.com



Sketch


This project is designed for learning how to use push button switch to control a LED. We first need to read the state of switch, and then determine whether to turn the LED ON in accordance to the state of the switch. Upload following sketch:

Freenove_Ultimate_Starter_Kit_for_ESP8266\Sketches\Sketch_02.1_ButtonAndLed

Sketch_02.1_ButtonAndLed

```
Sketch_02.1_ButtonAndLed | Arduino 1.8.19
File Edit Sketch Tools Help
Sketch_02.1_ButtonAndLed
1 // ****
2   Filename      : ButtonAndLed
3   Description   : Control led by button.
4   Author        : www.freenove.com
5   Modification: 2022/05/10
6 ****
7 #define PIN_LED    4
8 #define PIN_BUTTON 5
9 // the setup function runs once when you press reset or power the board
10 void setup() {
11   // initialize digital pin PIN_LED as an output.
12   pinMode(PIN_LED, OUTPUT);
13   pinMode(PIN_BUTTON, INPUT);
14 }
15
16 // the loop function runs over and over again forever
17 void loop() {
18   if (digitalRead(PIN_BUTTON) == LOW) {
19     digitalWrite(PIN_LED, HIGH);
20   }else{
21     digitalWrite(PIN_LED, LOW);
22   }
}
Done uploading.
Leaving...
Hard resetting via RTS pin...
s2h oom), Disabled, All SSL ciphers (most compatible), 32KB cache + 32kB IRAM (balanced), Use pgm_read macros for IRAM/PROGMEM, 4MB (FS:2MB OTA:~1019KB), 2, v2 Lower Memory, Disabled, None, Only Sketch, 115200 on COM4
```

Download the code to ESP8266, then press the key, the LED turns ON, release the switch, the LED turns OFF.

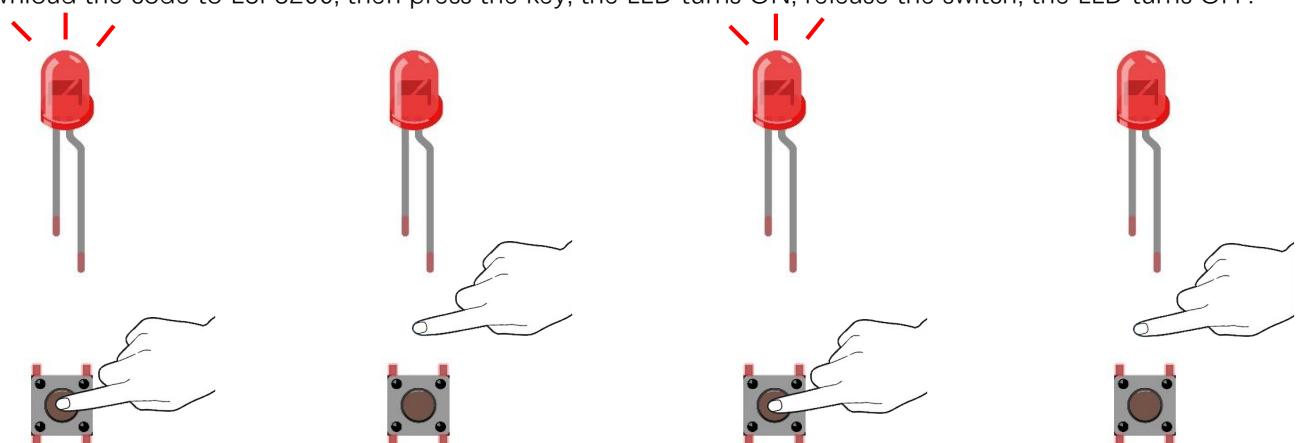

If you have any concerns, please contact us via: support@freenove.com

Any concerns? ✉ support@freenove.com

The following is the program code:

```
1 #define PIN_LED    4
2 #define PIN_BUTTON 5
3 // the setup function runs once when you press reset or power the board
4 void setup() {
5     // initialize digital pin PIN_LED as an output.
6     pinMode(PIN_LED, OUTPUT);
7     pinMode(PIN_BUTTON, INPUT);
8 }
9
10 // the loop function runs over and over again forever
11 void loop() {
12     if (digitalRead(PIN_BUTTON) == LOW) {
13         digitalWrite(PIN_LED, HIGH);
14     }else{
15         digitalWrite(PIN_LED, LOW);
16     }
17 }
```

In the circuit connection, LED and button are connected with GPIO4 and GPIO5 respectively, so define PIN_LED and PIN_BUTTON as 4 and 5 respectively.

```
1 #define PIN_LED    4
2 #define PIN_BUTTON 5
```

In the while cycle of main function, use digitalRead(PIN_BUTTON) to determine the state of button. When the button is pressed, the function returns low level, the result of "if" is true, and then turn on LED. Otherwise, turn off LED.

```
11 void loop() {
12     if (digitalRead(PIN_BUTTON) == LOW) {
13         digitalWrite(PIN_LED, HIGH);
14     }else{
15         digitalWrite(PIN_LED, LOW);
16     }
17 }
```

Reference

```
int digitalRead (int pin);
```

This function returns the value read at the given pin. It will be "HIGH" or "LOW"(1 or 0) depending on the logic level at the pin.




Project 2.2 MINI table lamp

We will also use a push button switch, LED and ESP8266 to make a MINI table lamp but this will function differently: Press the button, the LED will turn ON, and pressing the button again, the LED turns OFF. The ON switch action is no longer momentary (like a door bell) but remains ON without needing to continually press on the Button Switch.

First, let us learn something about the push button switch.

Debounce for Push Button

The moment when a push button switch is pressed, it will not change from one state to another state immediately. Due to tiny mechanical vibrations, there will be a short period of continuous buffeting before it completely reaches another state too fast for humans to detect but not for computer microcontrollers. The same is true when the push button switch is released. This unwanted phenomenon is known as "bounce".

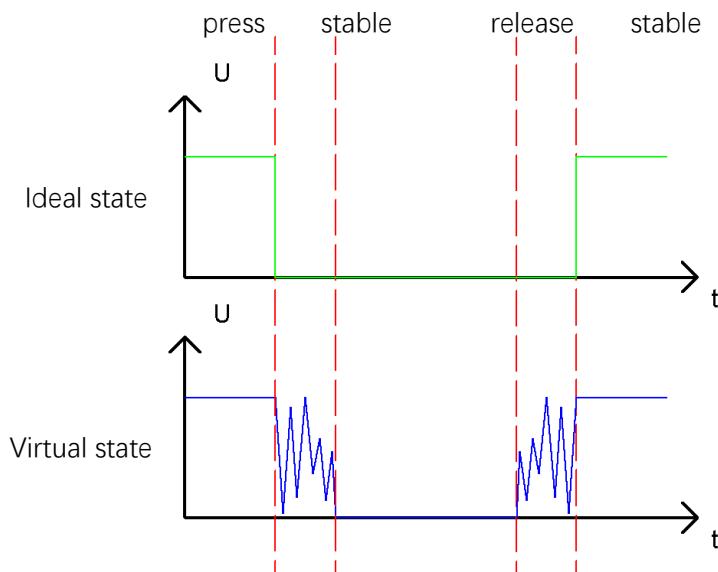

Therefore, if we can directly detect the state of the push button switch, there are multiple pressing and releasing actions in one pressing cycle. This buffeting will mislead the high-speed operation of the microcontroller to cause many false decisions. Therefore, we need to eliminate the impact of buffeting. Our solution: to judge the state of the button multiple times. Only when the button state is stable (consistent) over a period of time, can it indicate that the button is actually in the ON state (being pressed).


This project needs the same components and circuits as we used in the previous section.

Sketch

Upload following sketch:

Freenove_Ultimate_Starter_Kit_for_ESP8266\С\Sketches\Sketch_02.2_Tablelamp

Sketch_02.2_Tablelamp

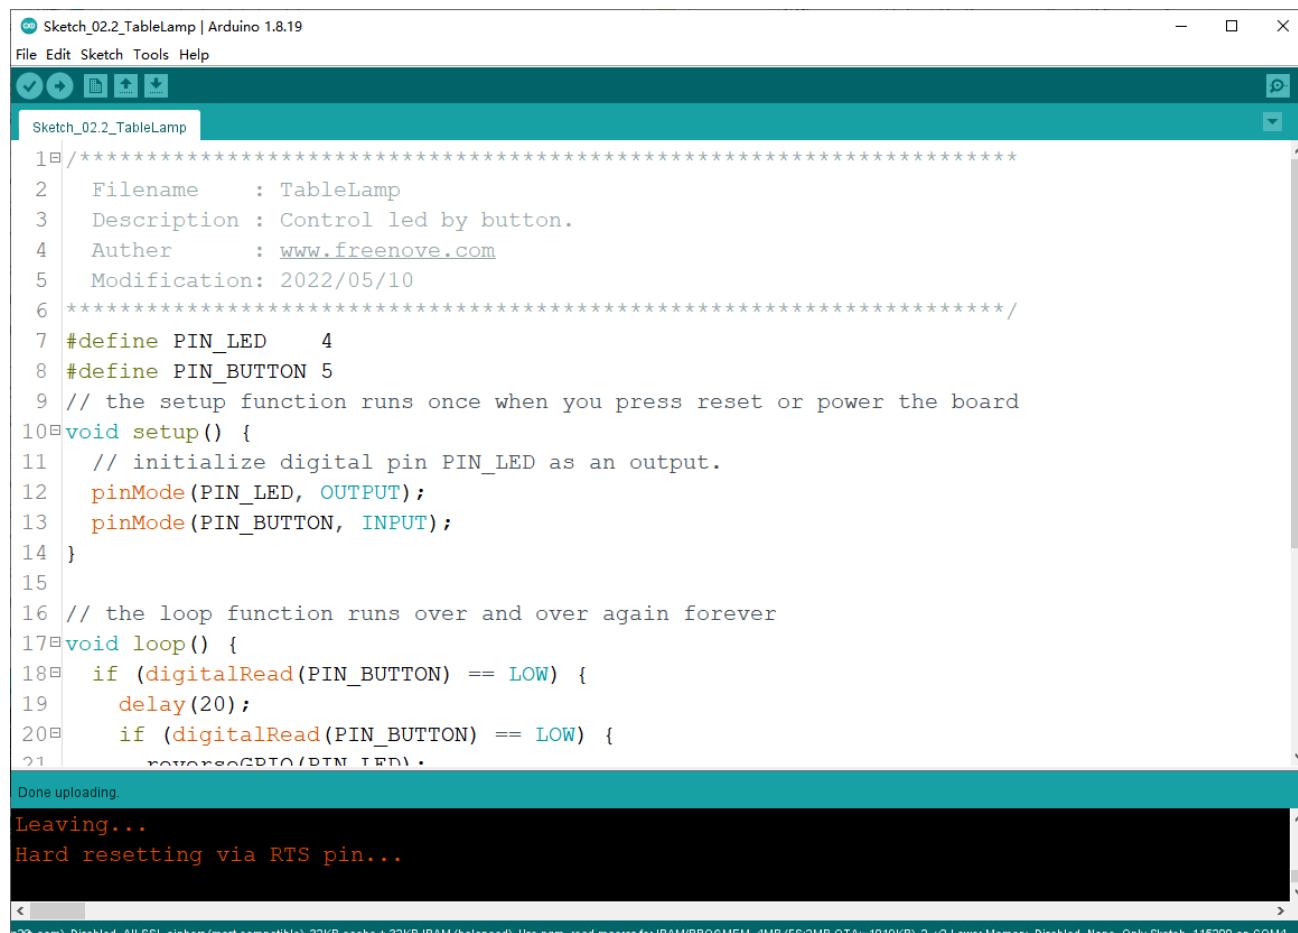

```
Sketch_02.2_TableLamp | Arduino 1.8.19
File Edit Sketch Tools Help
Sketch_02.2_TableLamp
1/* ****
2  Filename      : TableLamp
3  Description   : Control led by button.
4  Author        : www.freenove.com
5  Modification: 2022/05/10
6 ****
7 #define PIN_LED      4
8 #define PIN_BUTTON    5
9 // the setup function runs once when you press reset or power the board
10 void setup() {
11   // initialize digital pin PIN_LED as an output.
12   pinMode(PIN_LED, OUTPUT);
13   pinMode(PIN_BUTTON, INPUT);
14 }
15
16 // the loop function runs over and over again forever
17 void loop() {
18   if (digitalRead(PIN_BUTTON) == LOW) {
19     delay(20);
20     if (digitalRead(PIN_BUTTON) == LOW) {
21       digitalWrite(PIN_LED, !digitalRead(PIN_BUTTON));
}
Done uploading.
Leaving...
Hard resetting via RTS pin...
s2d.com), Disabled, All SSL ciphers (most compatible), 32KB cache + 32kB IRAM (balanced), Use pgm_read macros for IRAM/PROGMEM, 4MB (FS:2MB OTA:~1019KB), 2, v2 Lower Memory, Disabled, None, Only Sketch, 115200 on COM4
```

Download the code to the ESP8266, press the button, the LED turns ON, and press the button again, the LED turns OFF.

If you have any concerns, please contact us via: support@freenove.com

Any concerns? ✉ support@freenove.com



The following is the program code:

```

1 #define PIN_LED    4
2 #define PIN_BUTTON 5
3 // the setup function runs once when you press reset or power the board
4 void setup() {
5     // initialize digital pin PIN_LED as an output.
6     pinMode(PIN_LED, OUTPUT);
7     pinMode(PIN_BUTTON, INPUT);
8 }
9
10 // the loop function runs over and over again forever
11 void loop() {
12     if (digitalRead(PIN_BUTTON) == LOW) {
13         delay(20);
14         if (digitalRead(PIN_BUTTON) == LOW) {
15             reverseGPIO(PIN_LED);
16         }
17         while (digitalRead(PIN_BUTTON) == LOW);
18         delay(20);
19         while (digitalRead(PIN_BUTTON) == LOW);
20     }
21 }
22
23 void reverseGPIO(int pin) {
24     digitalWrite(pin, ! digitalRead(pin));
25 }
```

When judging the push button state, if it is detected as "pressed down", wait for a certain time to detect again to eliminate the effect of bounce. When confirmed, flip the LED on and off. Then it starts to wait for the pressed button to be released, and waits for a certain time to eliminate the effect of bounce after it is released.

```

12 if (digitalRead(PIN_BUTTON) == LOW) {
13     delay(20);
14     if (digitalRead(PIN_BUTTON) == LOW) {
15         reverseGPIO(PIN_LED);
16     }
17     while (digitalRead(PIN_BUTTON) == LOW);
18     delay(20);
19     while (digitalRead(PIN_BUTTON) == LOW);
20 }
```

The subfunction reverseGPIO() means reading the state value of the specified pin, taking the value back and writing it to the pin again to achieve the function of flipping the output state of the pin.

```

23 void reverseGPIO(int pin) {
24     digitalWrite(pin, ! digitalRead(pin));
25 }
```




Chapter 3 LED Bar

We have learned how to control a LED blinking, next we will learn how to control a number of LEDs.

Project 3.1 Flowing Light

In this project, we use a number of LEDs to make a flowing light.

Component List

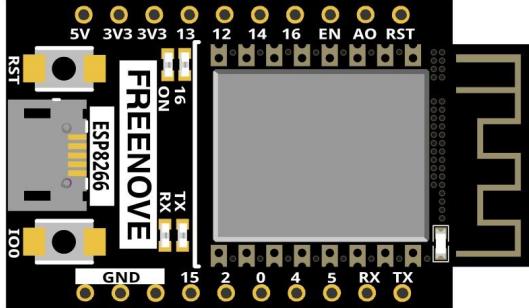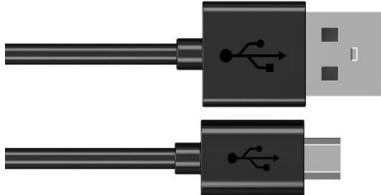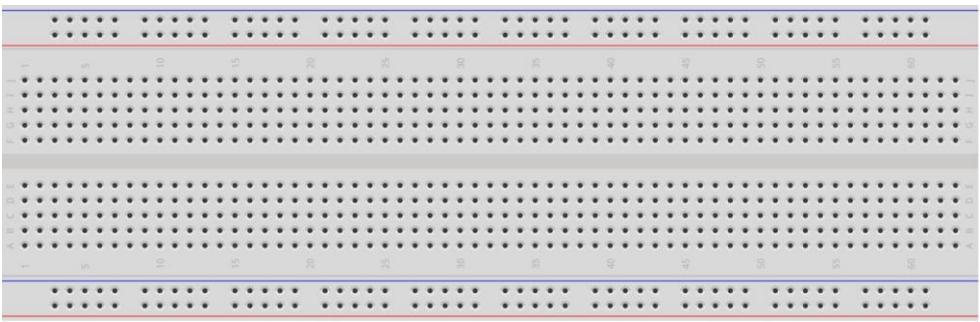ESP8266 x1	USB cable	
		
Breadboard x1		
		
Jumper wire M/M x11	LED bar graph x1	Resistor 220Ω x10
		




Component knowledge

Let's learn about the basic features of these components to use and understand them better.


LED bar

A LED bar graph has 10 LEDs integrated into one compact component. The two rows of pins at its bottom are paired to identify each LED like the single LED used earlier.

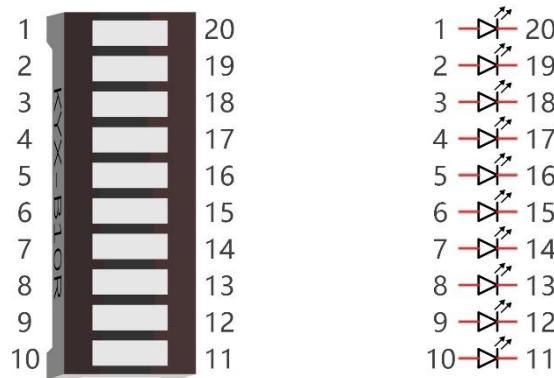


Circuit

Schematic diagram

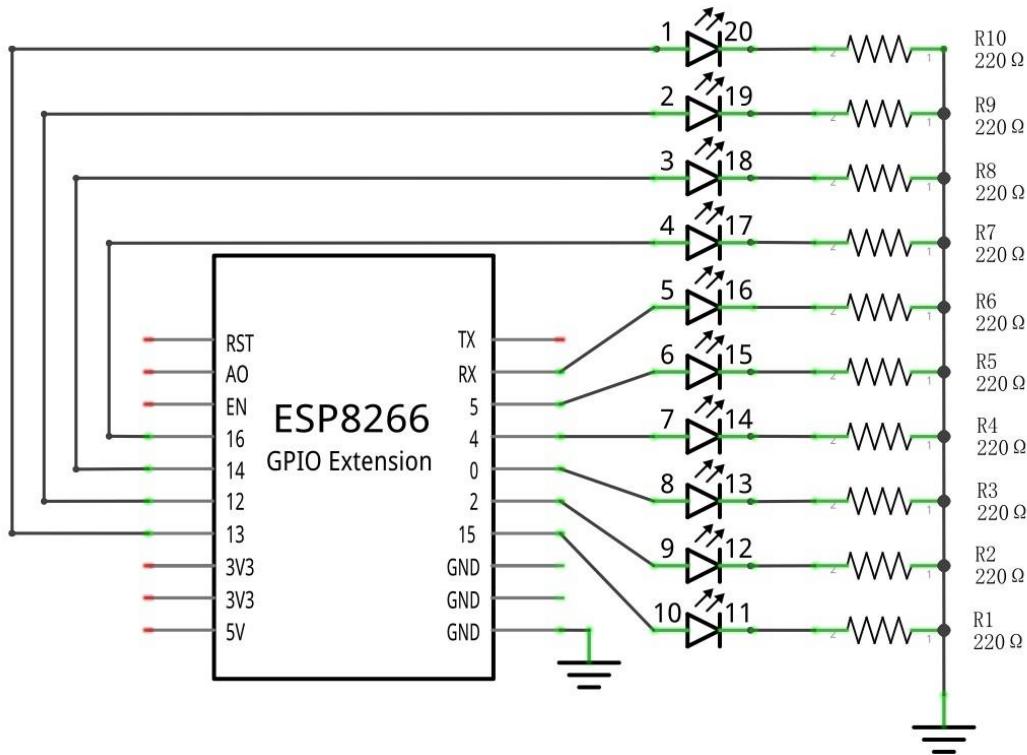

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

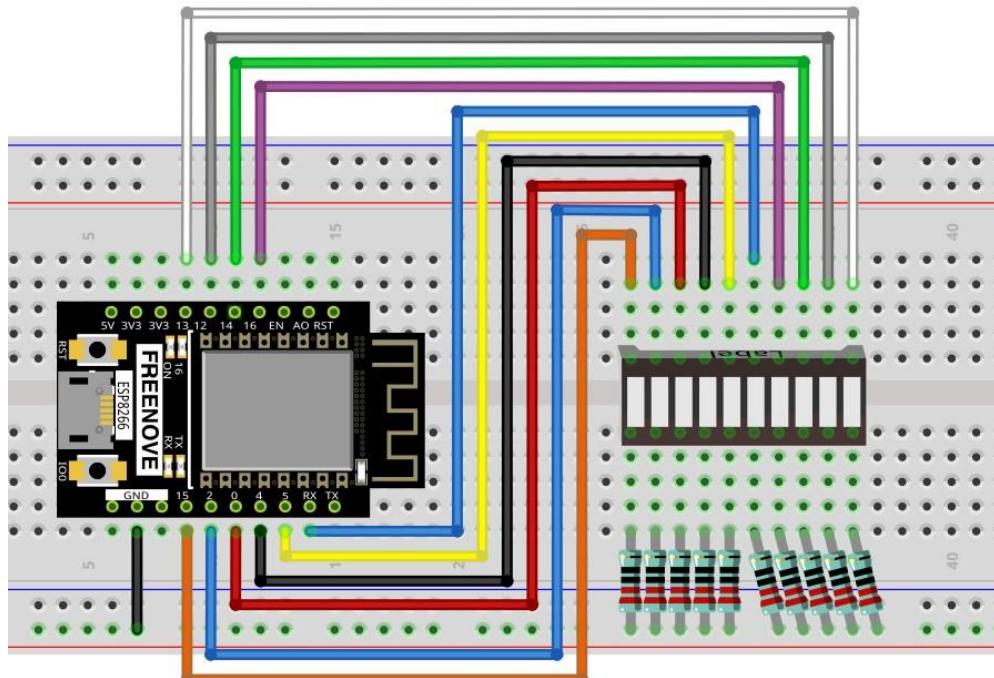

If LED bar does not work, try to rotate it for 180°. The label is random.

Any concerns? ✉ support@freenove.com



Sketch

This project is designed to make a flowing water lamp. Which are these actions: First turn LED #1 ON, then turn it OFF. Then turn LED #2 ON, and then turn it OFF... and repeat the same to all 10 LEDs until the last LED is turns OFF. This process is repeated to achieve the “movements” of flowing water.

Upload following sketch:

Freenove_Ultimate_Starter_Kit_for_ESP8266\С\Sketches\Sketch_03.1_FlowingLight

Sketch_03.1_FlowingLight

```

Sketch_03.1_FlowingLight | Arduino 1.8.19
File Edit Sketch Tools Help
Sketch_03.1_FlowingLight
1 // ****
2   Filename      : FlowingLight
3   Description   : Using ledbar to demonstrate flowing lamp.
4   Author        : www.freenove.com
5   Modification: 2022/05/10
6 ****
7 byte ledPins[] = {13, 12, 14, 16, 3, 5, 4, 0, 2, 15};
8 int ledCounts;
9
10 void setup() {
11   ledCounts = sizeof(ledPins);
12   for (int i = 0; i < ledCounts; i++) {
13     pinMode(ledPins[i], OUTPUT);
14   }
15 }
16
17 void loop() {
18   for (int i = 0; i < ledCounts; i++) {
19     digitalWrite(ledPins[i], HIGH);
20     delay(100);
21     digitalWrite(ledPins[i], LOW);
}

```

Done uploading.
Leaving...
Hard resetting via RTS pin...

Download the code to ESP8266 and LED bar graph will light up from left to right and from right to left.



If you have any concerns, please contact us via: support@freenove.com

Any concerns? support@freenove.com

The following is the program code:

```
1 byte ledPins[] = {13, 12, 14, 16, 3, 5, 4, 0, 2, 15};  
2 int ledCounts;  
3  
4 void setup() {  
5     ledCounts = sizeof(ledPins);  
6     for (int i = 0; i < ledCounts; i++) {  
7         pinMode(ledPins[i], OUTPUT);  
8     }  
9 }  
10  
11 void loop() {  
12     for (int i = 0; i < ledCounts; i++) {  
13         digitalWrite(ledPins[i], HIGH);  
14         delay(100);  
15         digitalWrite(ledPins[i], LOW);  
16     }  
17     for (int i = ledCounts - 1; i > -1; i--) {  
18         digitalWrite(ledPins[i], HIGH);  
19         delay(100);  
20         digitalWrite(ledPins[i], LOW);  
21     }  
22 }
```

Use an array to define 10 GPIO ports connected to LED bar graph for easier operation.

```
1 byte ledPins[] = {13, 12, 14, 16, 3, 5, 4, 0, 2, 15};
```

In setup(), use sizeof() to get the number of array, which is the number of LEDs, then configure the GPIO port to output mode.

```
5 ledCounts = sizeof(ledPins);  
6 for (int i = 0; i < ledCounts; i++) {  
7     pinMode(ledPins[i], OUTPUT);  
8 }
```

Then, in loop(), use two “for” loop to realize flowing water light from left to right and from right to left.

```
12 for (int i = 0; i < ledCounts; i++) {  
13     digitalWrite(ledPins[i], HIGH);  
14     delay(100);  
15     digitalWrite(ledPins[i], LOW);  
16 }  
17 for (int i = ledCounts - 1; i > -1; i--) {  
18     digitalWrite(ledPins[i], HIGH);  
19     delay(100);  
20     digitalWrite(ledPins[i], LOW);  
21 }
```



Chapter 4 Analog & PWM

In previous study, we have known that one button has two states: pressed and released, and LED has light-on/off state, then how to enter a middle state? How to output an intermediate state to let LED "semi bright"? That's what we're going to learn.

First, let's learn how to control the brightness of a LED.

Project 4.1 Breathing LED

Breathing light, that is, LED is turned from off to on gradually, and gradually from on to off, just like "breathing". So, how to control the brightness of a LED? We will use PWM to achieve this target.

Component List

ESP8266 x1	USB cable	
Breadboard x1		
LED x1	Resistor 220Ω x1	Jumper wire M/M x3

Related knowledge

Analog & Digital

An analog signal is a continuous signal in both time and value. On the contrary, a digital signal or discrete-time signal is a time series consisting of a sequence of quantities. Most signals in life are analog signals. A familiar example of an analog signal would be how the temperature throughout the day is continuously changing and could not suddenly change instantaneously from 0°C to 10°C. However, digital signals can instantaneously change in value. This change is expressed in numbers as 1 and 0 (the basis of binary code). Their differences can more easily be seen when compared when graphed as below.




In practical application, we often use binary as the digital signal, that is a series of 0's and 1's. Since a binary signal only has two values (0 or 1), it has great stability and reliability. Lastly, both analog and digital signals can be converted into the other.

PWM

PWM, Pulse-Width Modulation, is a very effective method for using digital signals to control analog circuits. Common processors cannot directly output analog signals. PWM technology makes it very convenient to achieve this conversion (translation of digital to analog signals).

PWM technology uses digital pins to send certain frequencies of square waves, that is, the output of high levels and low levels, which alternately last for a while. The total time for each set of high levels and low levels is generally fixed, which is called the period (Note: the reciprocal of the period is frequency). The time of high level outputs are generally called "pulse width", and the duty cycle is the percentage of the ratio of pulse duration, or pulse width (PW) to the total period (T) of the waveform.

The longer the outputs of high levels last, the longer the duty cycle and the higher the corresponding voltage in the analog signal will be. The following figures show how the analog signal voltages vary between 0V-5V (high level is 5V) corresponding to the pulse width 0%-100%:

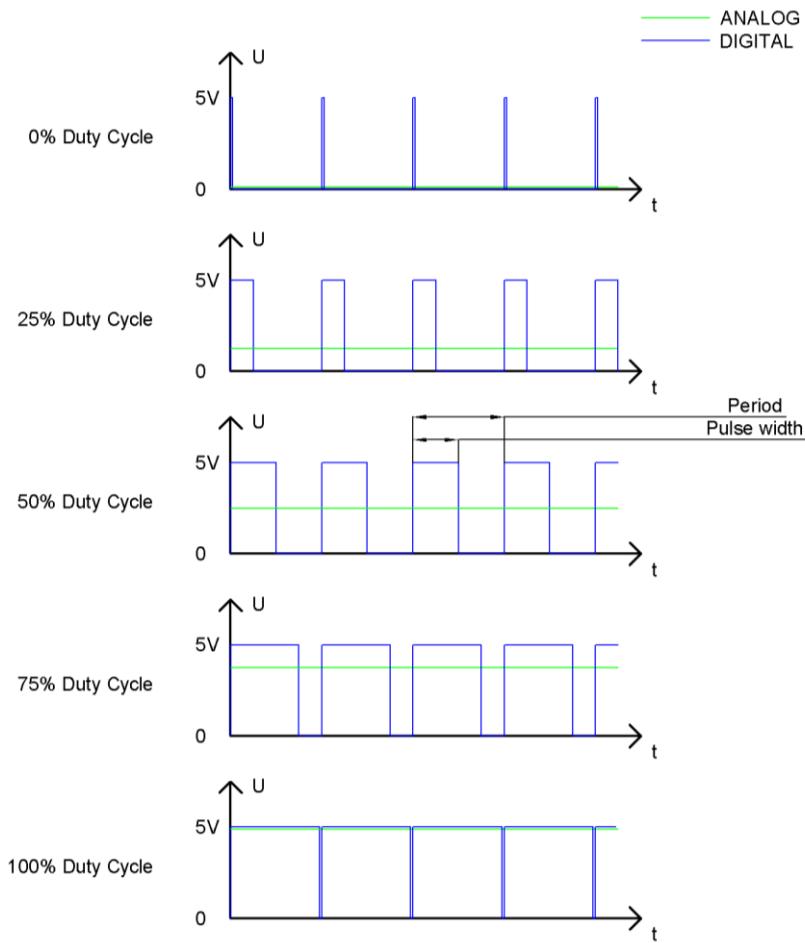


The longer the PWM duty cycle is, the higher the output power will be. Now that we understand this relationship, we can use PWM to control the brightness of a LED or the speed of DC motor and so on. It is evident from the above that PWM is not real analog, and the effective value of the voltage is equivalent to the corresponding analog. Therefore, we can control the output power of the LED and other output modules to achieve different effects.

ESP8266 and PWM

The ESP8266 PWM controller has 8 independent channels, each of which can independently control frequency, duty cycle, and even accuracy. Unlike traditional PWM pins, the PWM output pins of ESP8266 are configurable and they can be configured to PWM.

The ESP8266 supports PWM pins as follows:

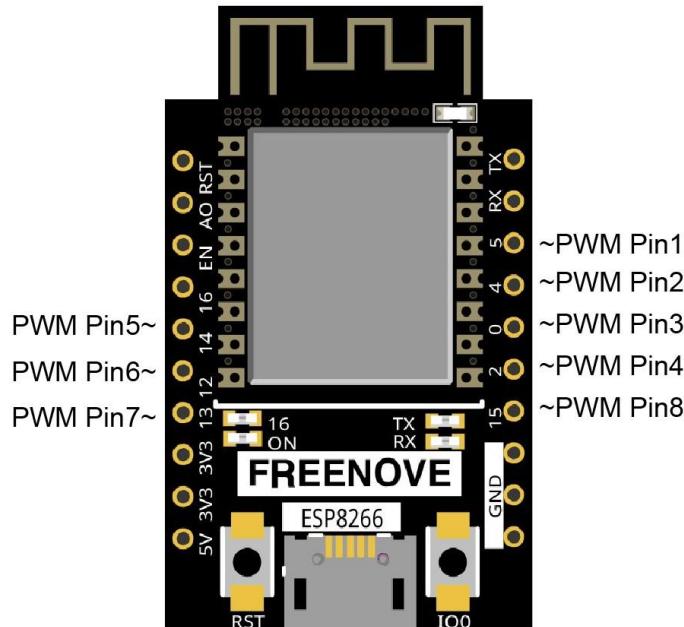


The longer the PWM duty cycle is, the higher the output power will be. Now that we understand this relationship, we can use PWM to control the brightness of an LED or the speed of DC motor and so on.


Circuit

This circuit is the same as the one in engineering Blink.

Schematic diagram

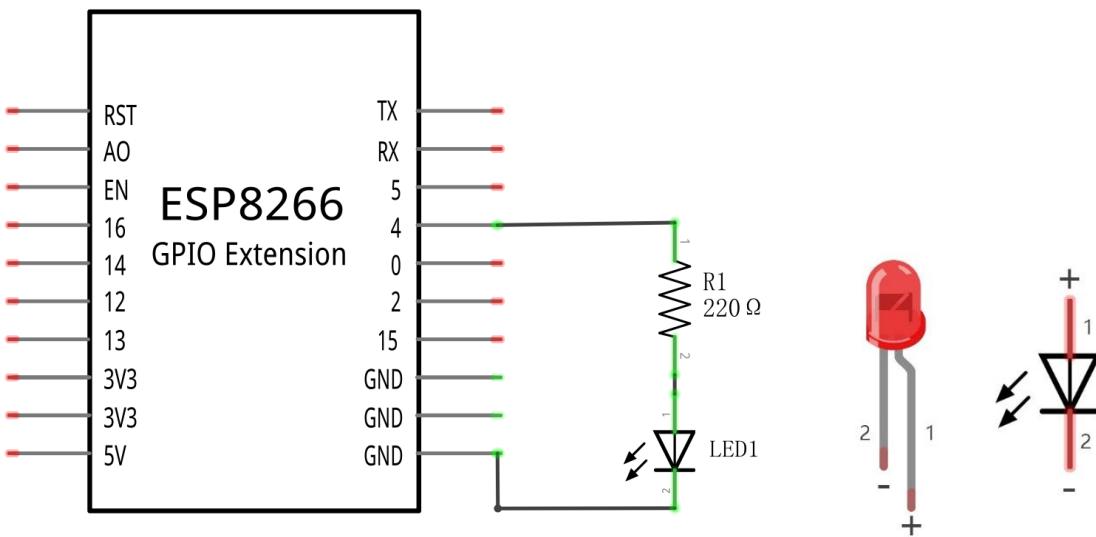

Hardware connection. **If you need any support, please contact us via: support@freenove.com**

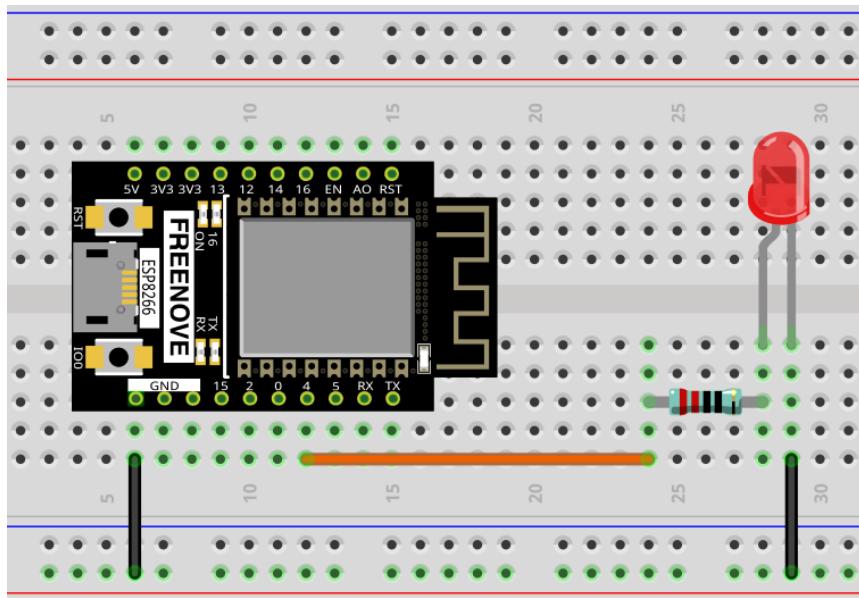


Sketch

This project is designed to make PWM output GPIO4 with pulse width increasing from 0% to 100%, and then reducing from 100% to 0% gradually.

Upload following sketch:

Freenove_Ultimate_Starter_Kit_for_ESP8266\Sketches\Sketch_04.1_BreathingLight

Sketch_04.1_BreathingLight

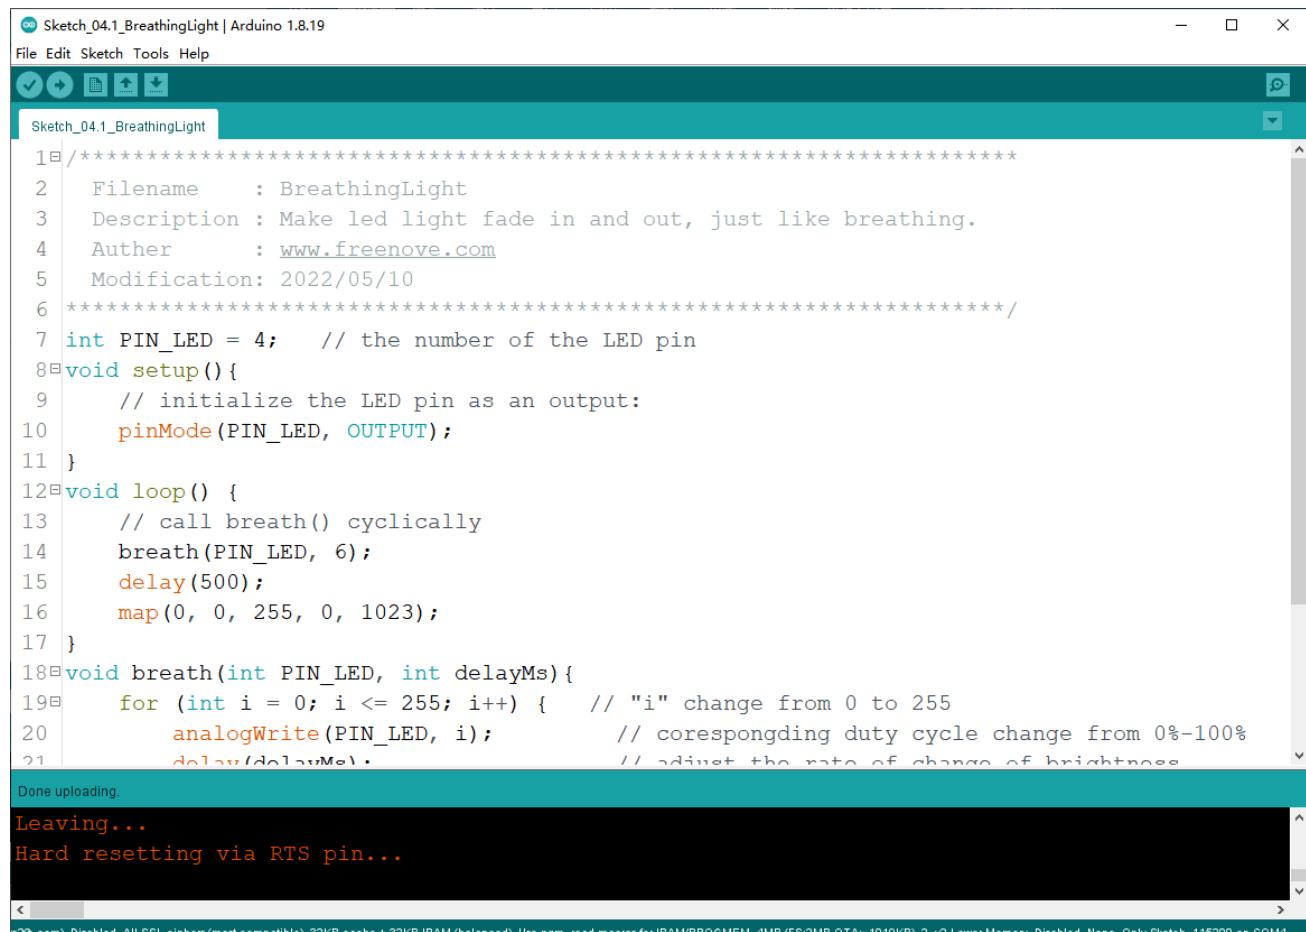

```



Sketch_04.1_BreathingLight | Arduino 1.8.19
File Edit Sketch Tools Help
Sketch_04.1_BreathingLight
1 // ****
2   Filename    : BreathingLight
3   Description : Make led light fade in and out, just like breathing.
4   Author     : www.freenove.com
5   Modification: 2022/05/10
6 ****
7 int PIN_LED = 4;    // the number of the LED pin
8 void setup(){
9     // initialize the LED pin as an output:
10    pinMode(PIN_LED, OUTPUT);
11 }
12 void loop() {
13     // call breath() cyclically
14     breath(PIN_LED, 6);
15     delay(500);
16     map(0, 0, 255, 0, 1023);
17 }
18 void breath(int PIN_LED, int delayMs) {
19     for (int i = 0; i <= 255; i++) {    // "i" change from 0 to 255
20         analogWrite(PIN_LED, i);        // corespongding duty cycle change from 0%-100%
21         delay(delayMs);             // adjust the rate of change of brightness
}

```

Done uploading.
Leaving...
Hard resetting via RTS pin...

s20 (oom), Disabled, All SSL ciphers (most compatible), 32KB cache + 32kB IRAM (balanced), Use pgm_read macros for IRAM/PROGMEM, 4MB (FS:2MB OTA:~1019KB), 2, v2 Lower Memory, Disabled, None, Only Sketch, 115200 on COM4

Download the code to ESP8266, and you'll see that LED is turned from on to off and then from off to on gradually like breathing.

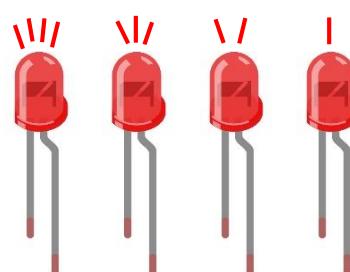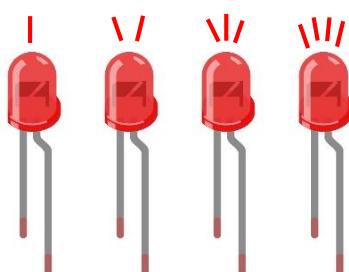

The following is the program code:

```

1 int PIN_LED = 4; // the number of the LED pin
2 void setup() {
3     // initialize the LED pin as an output:
4     pinMode(PIN_LED, OUTPUT);
5 }
6 void loop() {
7     // call breath() cyclically
8     breath(PIN_LED, 6);
9     delay(500);
10    map(0, 0, 255, 0, 1023);
11 }
12 void breath(int PIN_LED, int delayMs) {
13     for (int i = 0; i <= 255; i++) { // "i" change from 0 to 255
14         analogWrite(PIN_LED, i); // corespongding duty cycle change from 0%-100%
15         delay(delayMs); // adjust the rate of change of brightness
16     }
17     for (int i = 255; i >= 0; i--) { // "i" change from 255 to 0
18         analogWrite(PIN_LED, i); // corespongding duty cycle change from 0%-100%
19         delay(delayMs); // adjust the rate of change in brightness
20     }
21 }
```

In the loop(), There are two “for” loops. The first makes the ledPin output PWM from 0% to 100% and the second makes the ledPin output PWM from 100% to 0%. This allows the LED to gradually light and extinguish.

```

13 for (int i = 0; i <= 255; i++) { // "i" change from 0 to 255
14     analogWrite(PIN_LED, i); // corespongding duty cycle change from 0%-100%
15     delay(delayMs); // adjust the rate of change of brightness
16 }
17 for (int i = 255; i >= 0; i--) { // "i" change from 255 to 0
18     analogWrite(PIN_LED, i); // corespongding duty cycle change from 0%-100%
19     delay(delayMs); // adjust the rate of change in brightness
20 }
```

You can also adjust the rate of the state change of LED by changing the parameters of the delay() function in the “for” loop.

Reference

analogWrite(pin, value);	
---------------------------------	--

Arduino IDE provides the function, analogWrite(pin, value), which can make ports directly output PWM waves. In the function called analogWrite(pin, value), the parameter "pin" specifies the port used to output PWM wave. In ESP8266, The range of value is 0-1023, which represents the duty cycle of 0%-100%. In order to use this function, we need to set the port to output mode.

map(value, fromLow, fromHigh, toLow, toHigh)

This function is used to remap a value, which will return a new value whose percentage in the range of toLow-toHigh is equal to the percentage of "value" in the range of fromLow-fromHigh. For example, 1 is the maximum in the range of 0-1 and the maximum value in the scope of 0-2 is 2, that is, the result value of map (1, 0, 1, 0, 2) is 2.


For more related functions, please refer to <https://www.arduino.cc/reference/en/>

Project 4.2 Meteor Flowing Light


After learning about PWM, we can use it to control LED bar graph and realize a cooler flowing light. The component list, circuit, and hardware are exactly consistent with the project Flowing Light.

Circuit

Schematic diagram

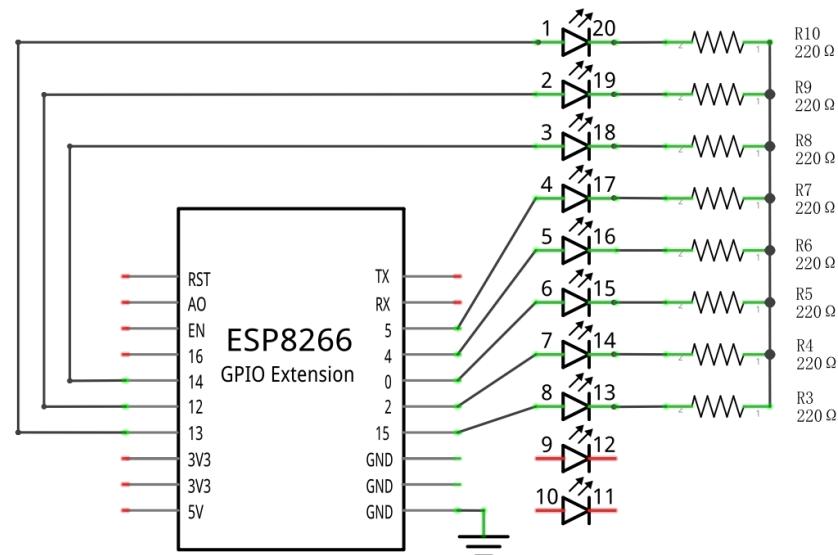

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

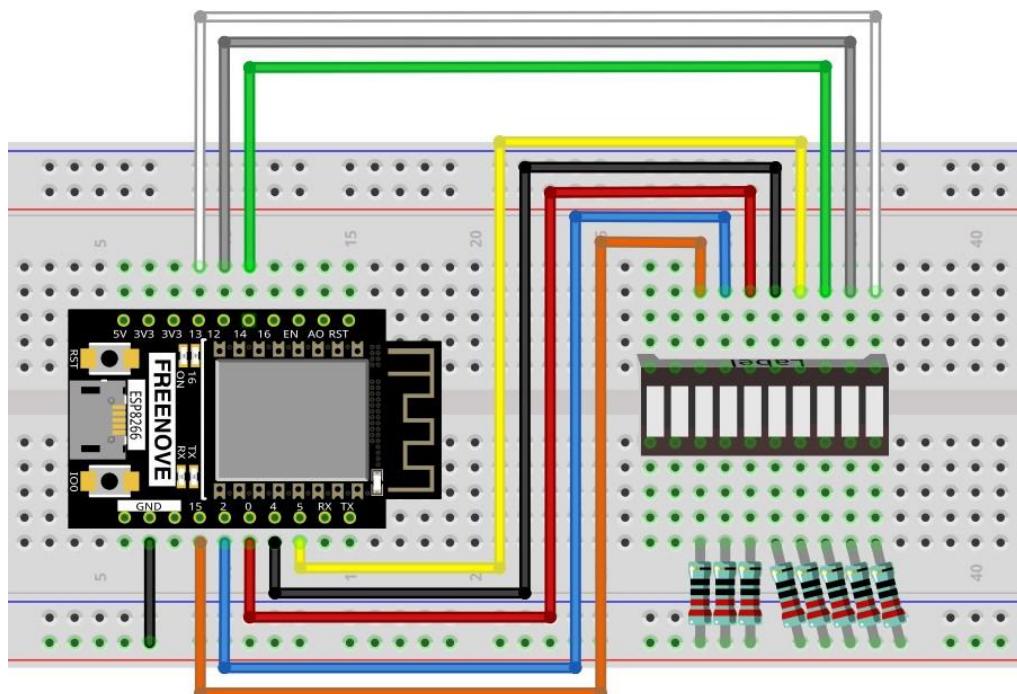

If LED bar does not work, try to rotate it for 180°. The label is random.

Any concerns? ✉ support@freenove.com

Sketch

Meteor flowing light will be implemented with PWM.

Upload following sketch:

Freenove_Ultimate_Starter_Kit_for_ESP8266\С\Sketches\Sketch_04.2_FlowingLight2

Sketch_04.2_FlowingLight2

Download the code to ESP8266, and LED bar graph will gradually light up and out from left to right, then light up and out from right to left.



```

Sketch_04.2_FlowingLight2 | Arduino 1.8.19
File Edit Sketch Tools Help
Sketch_04.2_FlowingLight2
1 //*****
2   Filename      : FlowingLight2
3   Description   : More cool flowing light.
4   Author        : www.freenove.com
5   Modification: 2022/05/10
6 ****
7 const byte ledPins[] = {13, 12, 14, 5, 4, 0, 2, 15};    //define led pins
8 const int dutys[] = {0, 0, 0, 0, 0, 0, 0, 0, 0,
9   |           1023, 512, 256, 128, 64, 32, 16, 8, 4, 2,
10          0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0
11        };      //define the pwm dutys
12 int ledCounts;           //led counts
13 int delayTimes = 50;     //flowing speed ,the smaller, the faster
14 void setup() {
15   ledCounts = sizeof(ledPins); //get the led counts
16 }
17
18 void loop() {
19   for (int i = 0; i < 20; i++) {           //flowing one side to other side
20     for (int j = 0; j < ledCounts; j++) {
21       analogWrite(ledPins[j], dutys[i + j]);
22     }
}
Done uploading.
Leaving...
Hard resetting via RTS pin...

```

Most compatible), 32KB cache + 32KB IRAM (balanced), Use pgm_read macros for IRAM/PROGMEM, 4MB (FS:3MB OTA:~512KB), 2, v2 Lower Memory, Disabled, None, Only Sketch, 115200 on COM4

The following is the program code:

```

1 const byte ledPins[] = {13, 12, 14, 5, 4, 0, 2, 15};    //define led pins
2 const int dutys[] = {0, 0, 0, 0, 0, 0, 0, 0, 0,
3   |           1023, 512, 256, 128, 64, 32, 16, 8, 4, 2,
4          0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0
5        };      //define the pwm dutys
6 int ledCounts;           //led counts
7 int delayTimes = 50;     //flowing speed ,the smaller, the faster
8 void setup() {
9   ledCounts = sizeof(ledPins); //get the led counts
10 }

```

```
11
12 void loop() {
13     for (int i = 0; i < 20; i++) {          //flowing one side to other side
14         for (int j = 0; j < ledCounts; j++) {
15             analogWrite(ledPins[j], dutys[i + j]);
16         }
17         delay(delayTimes);
18     }
19     for (int i = 0; i < 20; i++) {          //flowing one side to other side
20         for (int j = ledCounts - 1; j > -1; j--) {
21             analogWrite(ledPins[j], dutys[i + (ledCounts - 1 - j)]);
22         }
23         delay(delayTimes);
24     }
25 }
```

Defined 10 GPIO and 30 pulse width values.

```
1 const byte ledPins[] = {13, 12, 14, 5, 4, 0, 2, 15};      //define led pins
2 const int dutys[] = {0, 0, 0, 0, 0, 0, 0, 0, 0, 0,
3                         1023, 512, 256, 128, 64, 32, 16, 8, 4, 2,
4                         0, 0, 0, 0, 0, 0, 0, 0, 0, 0
5 } ;                                         //define the pwm dutys
```

In loop(), a nested for loop is used to control the pulse width of the PWM, and LED bar graph moves one grid after each 1 is added in the first for loop, gradually changing according to the values in the array duties. As shown in the table below, the value of the second row is the value in the array duties, and the 10 green squares in each row below represent the 10 LEDs on the LED bar graph. Every 1 is added to I , the value of the LED bar graph will move to the right by one grid, and when it reaches the end, it will move from the end to the starting point, achieving the desired effect.

0	1	2	3	4	5	7	8	9	1	11	1	1	1	1	1	1	1	2	2	2	2	2	2	2	3	0
d	0	0	0	0	0	0	0	0	0	10	5	2	1	6	3	1	8	4	2	0	0	0	0	0	0	0
i										23	1	5	2	4	2	6										
0																										
1																										
2																										
3																										
...																										
1																										
8																										
1																										
9																										
2																										
0																										

In the code, two nested for loops are used to achieve this effect.

```

13   for (int i = 0; i < 20; i++) {           //flowing one side to other side
14     for (int j = 0; j < ledCounts; j++) {
15       ledcWrite(chns[j], dutys[i + j]);
16     }
17     delay(delayTimes);
18   }
19   for (int i = 0; i < 20; i++) {           //flowing from one side to the other
20     for (int j = ledCounts - 1; j > -1; j--) {
21       ledcWrite(chns[j], dutys[i + (ledCounts - 1 - j)]);
22     }
23     delay(delayTimes);
24   }

```



Chapter 5 RGB LED

In this chapter, we will learn how to control a RGB LED. It can emit different colors of light. Next, we will use RGB LED to make a multicolored light.

Project 5.1 Random Color Light


In this project, we will make a multicolored LED. And we can control RGB LED to switch different colors automatically.

Component List


ESP8266 x1		USB cable
Breadboard x1		
RGBLED x1	Resistor 220Ω x3	Jumper wire M/M x5

Related knowledge

RGB LED has integrated 3 LEDs that can respectively emit red, green and blue light. And it has 4 pins. The long pin (1) is the common port, that is, 3 LED's positive or negative port. The RGB LED with common positive port and its symbol is shown below. We can make RGB LED emit various colors of light by controlling these 3 LEDs to emit light with different brightness.

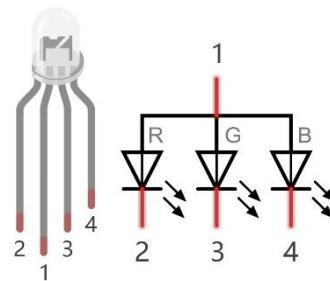


Red, green, and blue are known as three primary colors. When you combine these three primary-color lights with different brightness, it can produce almost all kinds of visible lights. Computer screens, single pixel of cell phone screen, neon, and etc. are working under this principle.

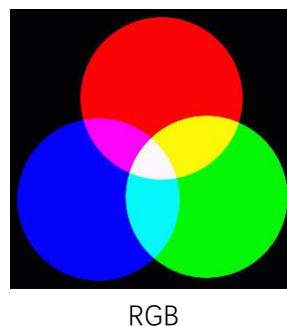


If we use three 8-bit PWMs to control the RGB LED, in theory, we can create $2^8 \times 2^8 \times 2^8 = 16777216$ (16 million) colors through different combinations.

Circuit

Schematic diagram

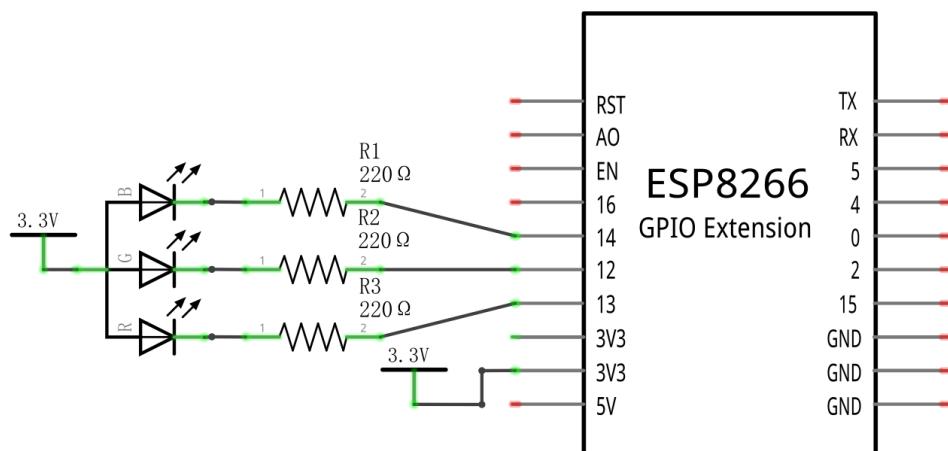

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

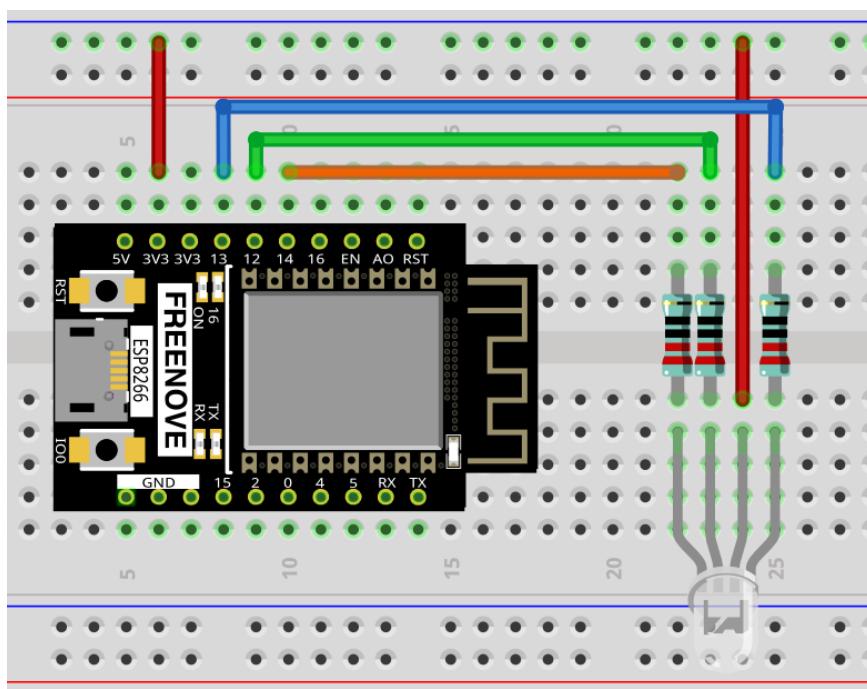

Sketch

We need to create three PWM channels and use random duty cycle to make random RGB LED color.

Upload following sketch:

Freenove_Ultimate_Starter_Kit_for_ESP8266\C\Sketch_05.1_ColorfulLight

Sketch_05.1_ColorfulLight

The screenshot shows the Arduino IDE interface. The title bar says "Sketch_05.1_RandomColorLight | Arduino 1.8.19". The menu bar includes File, Edit, Sketch, Tools, Help. Below the menu is a toolbar with icons for file operations. The main window displays the code for "Sketch_05.1_RandomColorLight". The code defines three pins (14, 12, 13) for red, green, and blue LEDs, initializes them in setup(), and loops through random colors in loop(). The serial monitor at the bottom shows the message "Done uploading." followed by "Leaving... Hard resetting via RTS pin..." and some system information about the ESP8266 chip.

```
Sketch_05.1_RandomColorLight | Arduino 1.8.19
File Edit Sketch Tools Help
Sketch_05.1_RandomColorLight
1 //*****
2   Filename      : ColorfulLight
3   Description   : Use RGBLED to show random color.
4   Author        : www.freenove.com
5   Modification: 2022/05/10
6 ****
7 const byte ledPins[] = {14, 12, 13};      //define red, green, blue led pins
8 int red, green, blue;
9 void setup() {
10
11 }
12
13 void loop() {
14   red = random(0, 256);
15   green = random(0, 256);
16   blue = random(0, 256);
17   setColor(red, green, blue);
18   delay(200);
19 }
20
21 void setColor(byte r, byte g, byte b) {
22
}
Done uploading.
Leaving...
Hard resetting via RTS pin...
s2d: oom), Disabled, All SSL ciphers (most compatible), 32KB cache + 32kB RAM (balanced), Use pgm_read macros for IRAM/PROGMEM, 4MB (FS:2MB OTA:~1019KB), 2, v2 Lower Memory, Disabled, None, Only Sketch, 115200 on COM4
```

With the code downloaded to ESP8266, RGB LED begins to display random colors.

If you have any concerns, please contact us via: support@freenove.com

Any concerns? ✉ support@freenove.com



The following is the program code:

```

1  const byte ledPins[] = {14, 12, 13};      //define red, green, blue led pins
2  int red, green, blue;
3  void setup() {
4
5
6  void loop() {
7    red = random(0, 256);
8    green = random(0, 256);
9    blue = random(0, 256);
10   setColor(red, green, blue);
11   delay(200);
12 }
13
14 void setColor(byte r, byte g, byte b) {
15   analogWrite(ledPins[0], 255 - r); //Common anode LED, low level to turn on the led.
16   analogWrite(ledPins[1], 255 - g);
17   analogWrite(ledPins[2], 255 - b);
18 }
```

Define RGB LED pins

```
1  const byte ledPins[] = {14, 12, 13};      //define red, green, blue led pins
```

In `setColor()`, this function controls the output color of RGB LED by the given color value. Because the circuit uses a common anode, the LED lights up when the GPIO outputs low power. Therefore, in PWM, low level is the active level, so 255 minus the given value is necessary.

```

14 void setColor(byte r, byte g, byte b) {
15   analogWrite(chns[0], 255 - r); //Common anode LED, low level to turn on the led.
16   analogWrite(chns[1], 255 - g);
17   analogWrite(chns[2], 255 - b);
18 }
```

In `loop()`, get three random Numbers and set them as color values.

```

7  red = random(0, 256);
8  green = random(0, 256);
9  blue = random(0, 256);
10  setColor(red, green, blue);
11  delay(200);
```

The related function of software PWM can be described as follows:

long random(min, max);

This function will return a random number(min --- max-1).

Project 5.2 Gradient Color Light

In the previous project, we have mastered the usage of RGB LED, but the random display of colors is rather stiff. This project will realize a fashionable light with soft color changes.

Component list and the circuit are exactly the same as the random color light.

Using a color model, the color changes from 0 to 255 as shown below.



In this code, the color model will be implemented and RGB LED will change colors along the model.

Sketch

Upload following sketch:

Freenove_Ultimate_Starter_Kit_for_ESP8266\C\Sketch_05.2_SoftColorfulLight
Sketch_05.2_SoftColorfullLight

```

Sketch_05.2_GradientColorLight | Arduino 1.8.19
File Edit Sketch Tools Help
Sketch_05.2_GradientColorLight
1 //*****
2   Filename      : SoftColorfulLight
3   Description   : Colorful light with gradually changing color.
4   Author        : www.freenove.com
5   Modification: 2022/05/10
6 ****
7 const byte ledPins[] = {14, 12, 13};      //define led pins
8 void setup() {
9 }
10 void loop() {
11   for (int i = 0; i < 256; i++) {
12     setColor(wheel(i));
13     delay(20);
14   }
15 }
16 void setColor(long rgb) {
17   analogWrite(ledPins[0], 255 - (rgb >> 16) & 0xFF);
18   analogWrite(ledPins[1], 255 - (rgb >> 8) & 0xFF);
19   analogWrite(ledPins[2], 255 - (rgb >> 0) & 0xFF);
20 }
21
Done uploading.
Leaving...
Hard resetting via RTS pin...

```

The screenshot shows the Arduino IDE interface with the sketch loaded. The code implements a color gradient using analogWrite for three pins (14, 12, 13). It defines a function 'setColor' to map a long integer 'rgb' to the three pins. The main loop iterates from 0 to 255, calling 'setColor' with the current value 'i' and then delaying for 20ms. The status bar at the bottom indicates the upload was successful and the board is being reset via the RTS pin.

Any concerns? [✉ support@freenove.com](mailto:support@freenove.com)



The following is the program code:

```

1  const byte ledPins[] = {14, 12, 13};      //define led pins
2  void setup() {
3  }
4  void loop() {
5      for (int i = 0; i < 256; i++) {
6          setColor(wheel(i));
7          delay(20);
8      }
9  }
10 void setColor(long rgb) {
11     analogWrite(ledPins[0], 255 - (rgb >> 16) & 0xFF);
12     analogWrite(ledPins[1], 255 - (rgb >> 8) & 0xFF);
13     analogWrite(ledPins[2], 255 - (rgb >> 0) & 0xFF);
14 }
15
16 long wheel(int pos) {
17     long WheelPos = pos % 0xff;
18     if (WheelPos < 85) {
19         return ((255 - WheelPos * 3) << 16) | ((WheelPos * 3) << 8);
20     } else if (WheelPos < 170) {
21         WheelPos -= 85;
22         return (((255 - WheelPos * 3) << 8) | (WheelPos * 3));
23     } else {
24         WheelPos -= 170;
25         return ((WheelPos * 3) << 16 | (255 - WheelPos * 3));
26     }
27 }
```

In `setColor()`, a variable represents the value of RGB, and a hexadecimal representation of color is a common representation, such as 0xAABBCC, where AA represents the red value, BB represents the green value, and CC represents the blue value. The use of a variable can make the transmission of parameters more convenient, in the split, only a simple operation can take out the value of each color channel

```

10 void setColor(long rgb) {
11     analogWrite(ledPins[0], 255 - (rgb >> 16) & 0xFF);
12     analogWrite(ledPins[1], 255 - (rgb >> 8) & 0xFF);
13     analogWrite(ledPins[2], 255 - (rgb >> 0) & 0xFF);
14 }
```

The `wheel()` function is the color selection method for the color model introduced earlier. The **pos** parameter ranges from 0 to 255 and outputs a color value in hexadecimal.

Chapter 6 LEDPixel

This chapter will help you learn to use a more convenient RGB LED lamp, which requires only one GPIO control and can be connected in infinite series in theory. Each LED can be controlled independently.

Project 6.1 LEDPixel

Learn the basic usage of LEDPixel and use it to flash red, green, blue and white.

Component List

ESP8266 x1	USB cable
	
Breadboard x1	
Freenove 8 RGB LED Module x1	Jumper wire F/M x4
	


Related knowledge

Freenove 8 RGB LED Module

The Freenove 8 RGB LED Module is as below.

It consists of 8 WS2812, each of which requires only one pin to control and supports cascade. Each WS212 has integrated 3 LEDs, red, green and blue respectively, and each of them supports 256-level brightness adjustment, which means that each WS2812 can emit $2^{24}=16,777,216$ different colors.

You can use only one data pin to control eight LEDs on the module. As shown below:

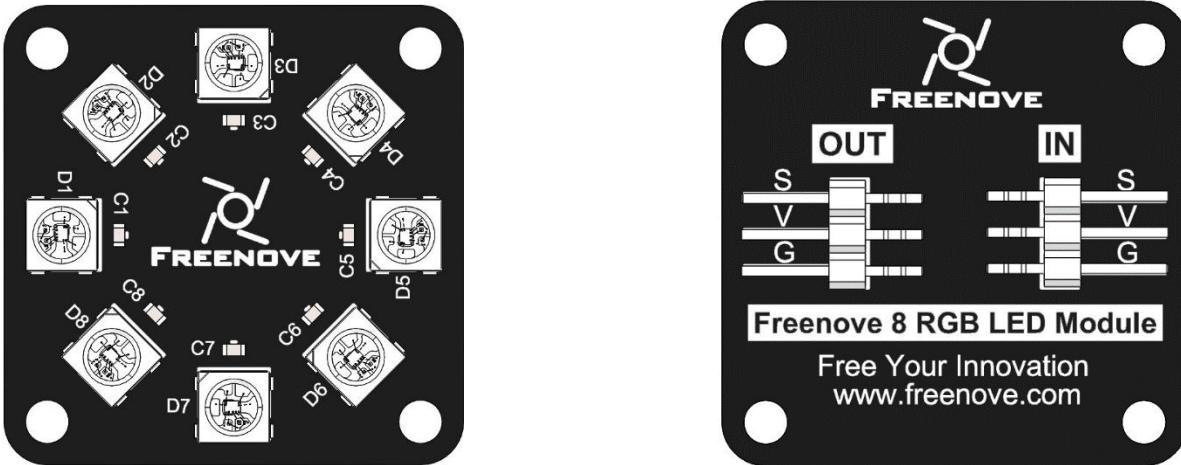

And you can also control many modules at the same time. Just connect OUT pin of one module to IN pin of another module. In this way, you can use one data pin to control 8, 16, 32 ... LEDs.




Pin description:


(IN)		(OUT)	
symbol	Function	symbol	Function
S	Input control signal	S	Output control signal
V	Power supply pin, +3.5V~5.5V	V	Power supply pin, +3.5V~5.5V
G	GND	G	GND

Circuit

Schematic diagram

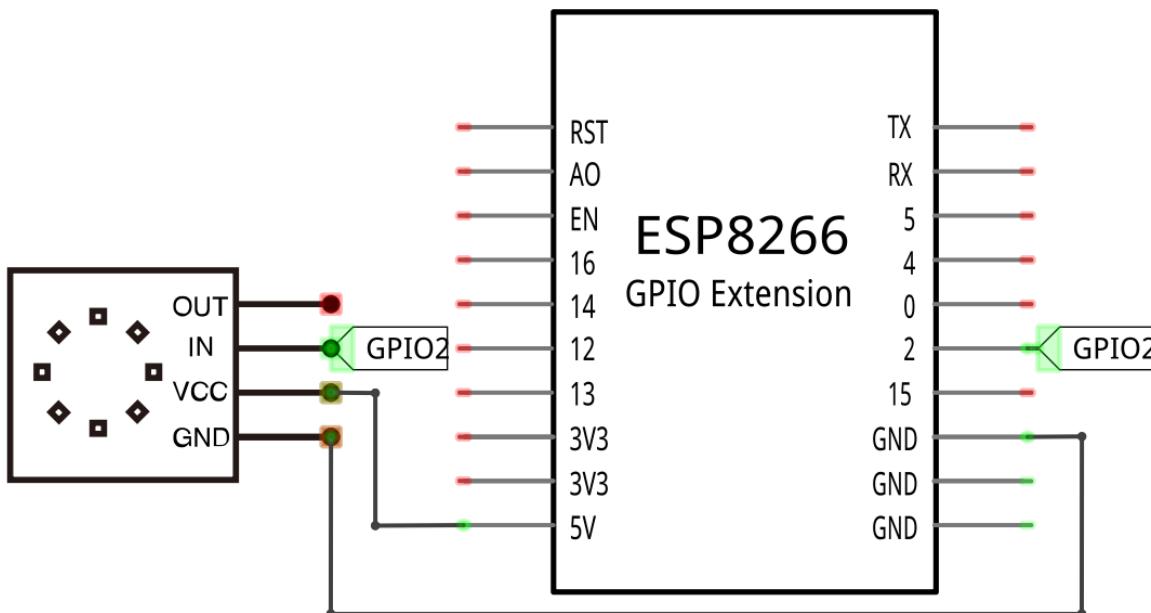

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

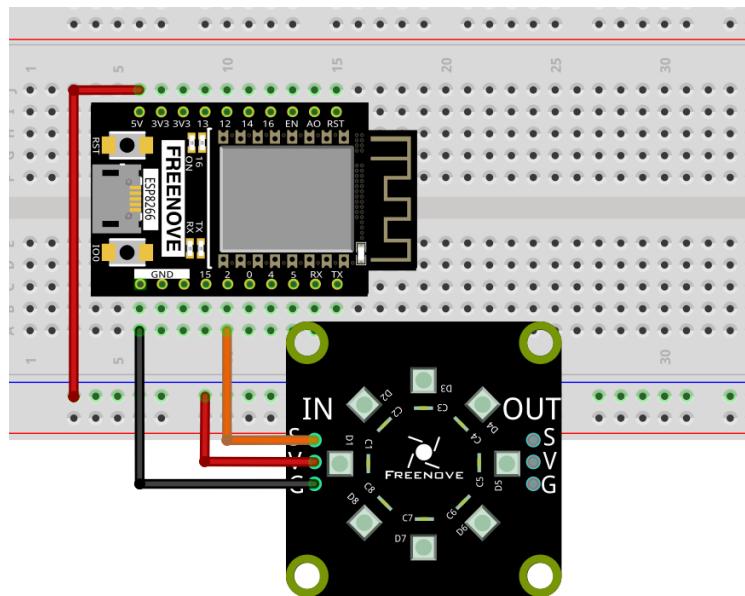

Sketch


This code uses a library named "Adafruit_NeoPixel", if you have not installed it, please do so first.

Library is an important feature of the open source world, and we know that Arduino is an open source platform that everyone can contribute to. Libraries are generally licensed under the LGPL, which means you can use them for free to apply to your creations.


How to install the library

There are two ways to add libraries.

The first way, open the Arduino IDE, click Tools → Manager Libraries.

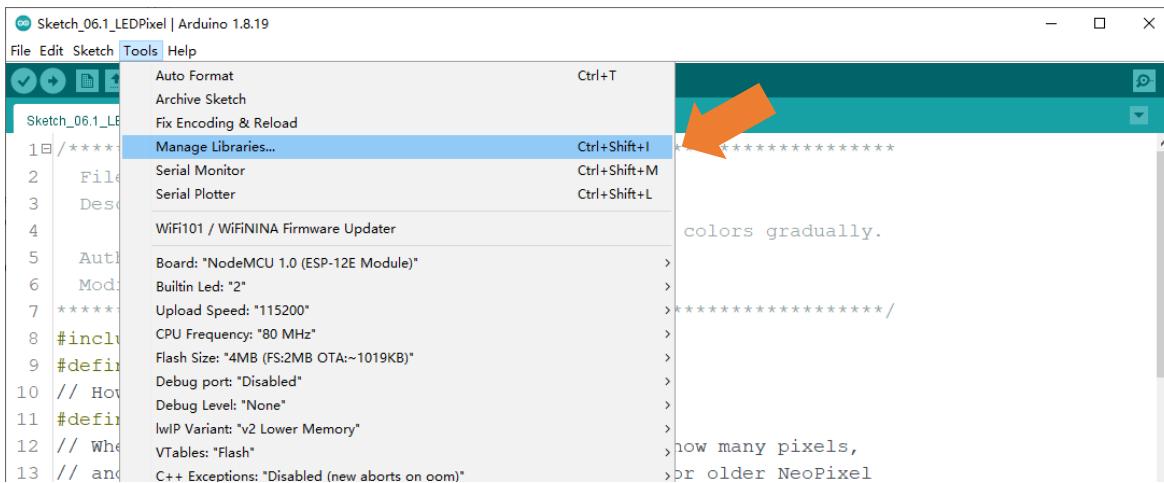

In the pop-up window, Library Manager, search for the name of the Library, "Adafruit_NeoPixel". Then click Install.

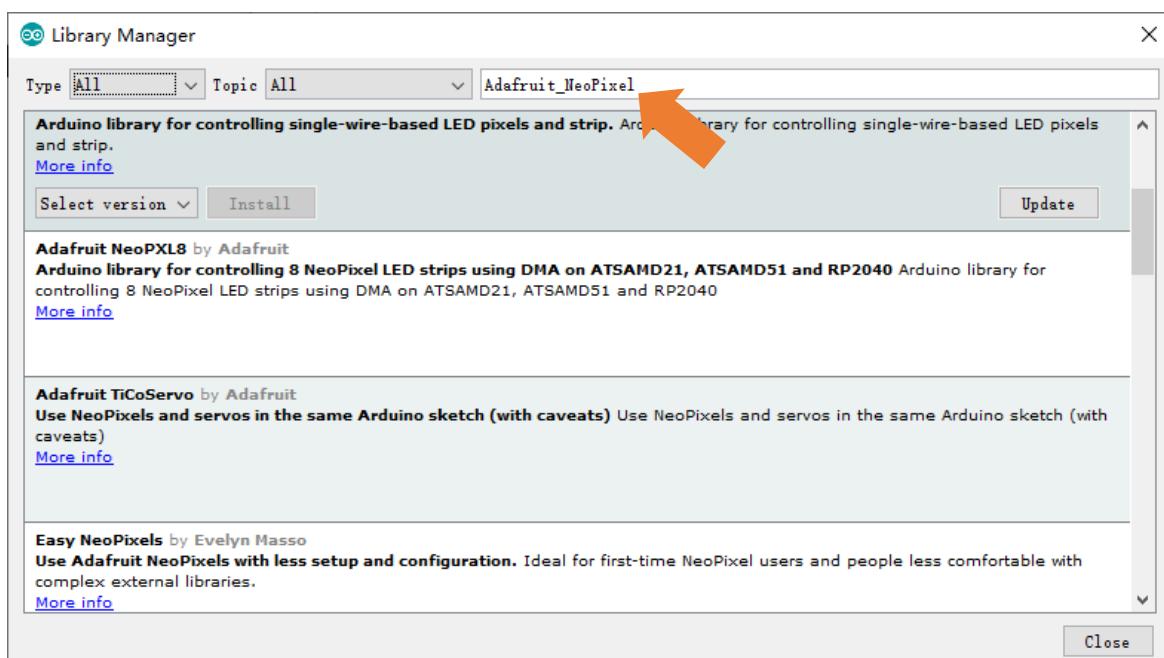

The second way, open Arduino IDE, click Sketch → Include Library → Add .ZIP Library, In the pop-up window, find the file named "./Libraries/Adafruit_NeoPixel.Zip" which locates in this directory, and click OPEN.



Upload following sketch:

[Freenove_Ultimate_Starter_Kit_for_ESP8266\Sketches\Sketch_06.1_LEDPixel](#)

[Sketch_06.1_LEDPixel](#)

The screenshot shows the Arduino IDE during the upload process. The title bar says "Sketch_06.1_LEDPixel | Arduino 1.8.19". The status bar at the bottom left says "Done uploading.". The code editor shows the same sketch as the previous screenshot. The status bar at the bottom right shows "ESP8266 (F200), Disabled, All SSL ciphers (most compatible), 32KB cache + 32kB IRAM (balanced). Use pgm_read macros for IRAM/PROGMEM, 4MB (FS:2MB OTA:~1019KB), 2, v2 Lower Memory, Disabled, None, Only Sketch, 115200 on COM4".

Download the code to ESP8266 and RGB LED begins to light up in red, green, blue, white and black.



The following is the program code:

```

1 #include <Adafruit_NeoPixel.h>
2 #define PIN      2
3 // How many NeoPixels are attached to the Arduino?
4 #define NUMPIXELS 8 // Popular NeoPixel ring size
5 // When setting up the NeoPixel library, we tell it how many pixels,
6 // and which pin to use to send signals. Note that for older NeoPixel
7 // strips you might need to change the third parameter -- see the
8 // strandtest example for more information on possible values.
9 Adafruit_NeoPixel pixels(NUMPIXELS, PIN, NEO_GRB + NEO_KHZ800);
10 #define DELAYVAL 500 // Time (in milliseconds) to pause between pixels
11 int m_color[5][3] = { {255, 0, 0}, {0, 255, 0}, {0, 0, 255}, {255, 255, 255}, {0, 0, 0} };
12 int delayval = 100;
13 void setup() {
14     pixels.begin(); // INITIALIZE NeoPixel strip object (REQUIRED)
15     pixels.setBrightness(10); // set the brightness.
16 }
17 void loop() {
18     pixels.clear(); // Set all pixel colors to 'off'
19     // The first NeoPixel in a strand is #0, second is 1, all the way up
20     // to the count of pixels minus one.
21     for (int j = 0; j < 5; j++) {
22         for(int i=0; i<NUMPIXELS; i++){ // For each pixel...
23             // pixels.Color() takes RGB values, from 0,0,0 up to 255,255,255
24             pixels.setPixelColor(i, m_color[j][0], m_color[j][1], m_color[j][2]); // Set color
25             data.
26             pixels.show(); // Send the updated pixel colors to the hardware.
27             delay(DELAYVAL); // Pause before next pass through loop
28         }
29         delay(500); // Interval time of each group of colors.
30     }
}

```

To use some libraries, first you need to include the library's header file.

```
1 #include <Adafruit_NeoPixel.h>
```

Define the pins connected to the ring and the number of LEDs on the ring.

```
2 #define PIN      2
4 #define NUMPIXELS 8 // Popular NeoPixel ring size
```

Use the above parameters to create a LEDPixel object strip.

```
9 Adafruit_NeoPixel pixels(NEOPIN, PIN, NEO_GRB + NEO_KHZ800);
```

Define the color values to be used, as red, green, blue, white, and black.

```
11 u8 m_color[5][3] = { {255, 0, 0}, {0, 255, 0}, {0, 0, 255}, {255, 255, 255}, {0, 0, 0} };
```

Define a time interval for each LED to light up. The smaller the value is, the faster it will light up.

```
10 #define DELAYVAL 500 // Time (in milliseconds) to pause between pixels
```

Initialize strip() in setup() and set the brightness.

```
14 pixels.begin(); // INITIALIZE NeoPixel strip object (REQUIRED)
```

```
15 pixels.setBrightness(10); // set the brightness.
```

In the loop(), there are two "for" loops, the internal for loop to light the LED one by one, and the external for loop to switch colors. pixels.setPixelColor() is used to set the color, but it does not change immediately. Only when pixels.show() is called will the color data be sent to the LED to change the color.

```
21 for (int j = 0; j < 5; j++) {
22     for(int i=0; i<NUMPIXELS; i++){ // For each pixel...
23         // pixels.Color() takes RGB values, from 0,0,0 up to 255,255,255
24         pixels.setPixelColor(i, m_color[j][0], m_color[j][1], m_color[j][2]); // Set color
25         data.
26         pixels.show(); // Send the updated pixel colors to the hardware.
27         delay(DELAYVAL); // Pause before next pass through loop
28     }
29     delay(500); // Interval time of each group of colors.
}
```

Reference

pixels(NUMPIXELS, PIN, NEO_GRB + NEO_KHZ800);

Constructor to create a LEDPixel object.

Before each use of the constructor, please add "#include <Adafruit_NeoPixel.h>"

Parameters

NUMPIXELS: The number of led.

PIN: A pin connected to an led.

NEO_GRB:

NEO_GRB: The sequence of LEDPixel module loading color is green, red and blue.

void begin(void);

Initialize the LEDPixel object

```
void setLedColorData (u8 index, u8 r, u8 g, u8 b);
void setLedColorData (u8 index, u32 rgb);
void setLedColor (u8 index, u8 r, u8 g, u8 b);
void setLedColor (u8 index, u32 rgb);
```

Set the color of led with order number n.

void show(void);

Send the color data to the led and display the set color immediately.

void setBrightness(uint8_t);

Set the brightness of the LED.

Project 6.2 Rainbow Light

In the previous project, we have mastered the use of LEDPixel. This project will realize a slightly complicated rainbow light. The component list and the circuit are exactly the same as the project fashionable light.

Sketch

Continue to use the following color model to equalize the color distribution of the 8 LEDs and gradually change.



Upload following sketch:

Freenove_Ultimate_Starter_Kit_for_ESP8266\Sketches\Sketch_06.2_RainbowLight

Sketch_06.2_RainbowLight

```
Sketch_06.2_RainbowLight | Arduino 1.8.19
File Edit Sketch Tools Help
Sketch_06.2_RainbowLight
1 //*****
2   Filename      : RainbowLight
3   Description   : Make the strip light up in rainbow colors.
4   Author        : www.freenove.com
5   Modification: 2022/05/10
6 ****
7 #include <Adafruit_NeoPixel.h>
8 #define LEDS_PIN      2
9 #define LEDS_COUNT    8 // Popular NeoPixel ring size
10 Adafruit_NeoPixel pixels(LEDS_COUNT, LEDS_PIN, NEO_GRB + NEO_KHZ800);
11 void setup() {
12   pixels.begin(); // INITIALIZE NeoPixel strip object (REQUIRED)
13   pixels.setBrightness(100); // set the brightness.
14 }
15 void loop() {
16   for (int j = 0; j < 255; j += 2) {
17     for (int i = 0; i < LEDS_COUNT; i++) {
18       pixels.setPixelColor(i, Wheel((i * 256 / LEDS_COUNT + j) & 255));
19     }
20   pixels.show();
21 }
Done uploading.

Leaving...
Hard resetting via RTS pin...

s26.com), Disabled, All SSL ciphers (most compatible), 32KB cache + 32KB IRAM (balanced), Use pgm_read macros for IRAM/PROGMEM, 4MB (FS:2MB OTA:~1019KB), 2, v2 Lower Memory, Disabled, None, Only Sketch, 115200 on COM4
```

Download the code to ESP8266, and the Freenove 8 RGB LED Strip displays different colors and the color changes gradually.



The following is the program code:

```

1 #include <Adafruit_NeoPixel.h>
2 #define LEDS_PIN      2
3 #define LEDS_COUNT     8 // Popular NeoPixel ring size
4 Adafruit_NeoPixel pixels(LEDS_COUNT, LEDS_PIN, NEO_GRB + NEO_KHZ800);
5 void setup() {
6   pixels.begin(); // INITIALIZE NeoPixel strip object (REQUIRED)
7   pixels.setBrightness(100); // set the brightness.
8 }
9 void loop() {
10   for (int j = 0; j < 255; j += 2) {
11     for (int i = 0; i < LEDS_COUNT; i++) {
12       pixels.setPixelColor(i, Wheel((i * 256 / LEDS_COUNT + j) & 255));
13     }
14     pixels.show();
15     delay(5);
16   }
17 }
18 uint32_t Wheel(byte pos) {
19   u32 WheelPos = pos % 0xff;
20   if (WheelPos < 85) {
21     return ((255 - WheelPos * 3) << 16) | ((WheelPos * 3) << 8);
22   }
23   if (WheelPos < 170) {
24     WheelPos -= 85;
25     return (((255 - WheelPos * 3) << 8) | (WheelPos * 3));
26   }
27   WheelPos -= 170;
28   return ((WheelPos * 3) << 16 | (255 - WheelPos * 3));
29 }
```

In the loop(), two “for” loops are used, the internal “for” loop(for-j) is used to set the color of each LED, and the external “for” loop(for-i) is used to change the color, in which the self-increment value in $i+=1$ can be changed to change the color step distance. Changing the delay parameter changes the speed of the color change. $\text{Wheel}(i * 256 / \text{LEDS_COUNT} + j) \& 255$ will take color from the color model at equal intervals starting from i.

```

10   for (int j = 0; j < 255; j += 2) {
11     for (int i = 0; i < LEDS_COUNT; i++) {
```

```
12         pixels.setPixelColor(i, Wheel((i * 256 / LEDS_COUNT + j) & 255));  
13     }  
14     pixels.show();  
15     delay(5);  
16 }
```




Chapter 7 Buzzer

In this chapter, we will learn about buzzers that can make sounds.

Project 7.1 Doorbell

We will make this kind of doorbell: when the button is pressed, the buzzer sounds; and when the button is released, the buzzer stops sounding.

Component List

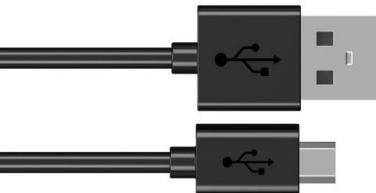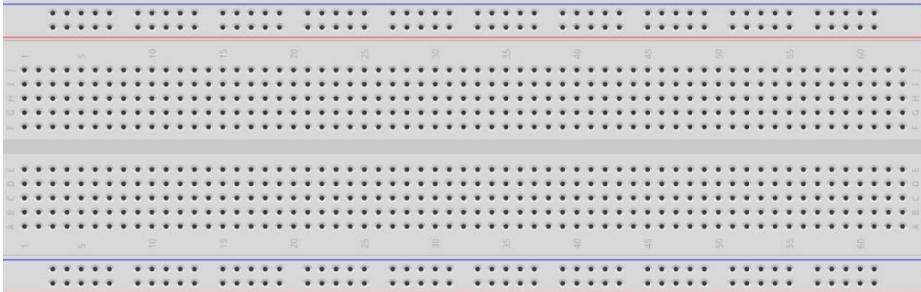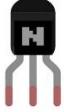ESP8266 x1	USB cable			
				
Breadboard x1				
Jumper wire M/M x9				
NPN transistor x1 (S8050)	Active buzzer x1	Push button x1	Resistor 1kΩ x1	Resistor 10kΩ x2
				

Component knowledge

Buzzer

Buzzer is a sounding component, which is widely used in electronic devices such as calculator, electronic warning clock and alarm. Buzzer has two types: active and passive. Active buzzer has oscillator inside, which will sound as long as it is supplied with power. Passive buzzer requires external oscillator signal (generally use PWM with different frequency) to make a sound.



Active buzzer is easy to use. Generally, it can only make a specific frequency of sound. Passive buzzer requires an external circuit to make a sound, but it can be controlled to make a sound with different frequency. The resonant frequency of the passive buzzer is 2kHz, which means the passive buzzer is loudest when its resonant frequency is 2kHz.

Next, we will use an active buzzer to make a doorbell and a passive buzzer to make an alarm.

How to identify active and passive buzzer?

1. Usually, there is a label on the surface of active buzzer covering the vocal hole, but this is not an absolute judgment method.
2. Active buzzers are more complex than passive buzzers in their manufacture. There are many circuits and crystal oscillator elements inside active buzzers; all of this is usually protected with a waterproof coating (and a housing) exposing only its pins from the underside. On the other hand, passive buzzers do not have protective coatings on their underside. From the pin holes viewing of a passive buzzer, you can see the circuit board, coils, and a permanent magnet (all or any combination of these components depending on the model).




Transistor


Because the buzzer requires such large current that GPIO of ESP8266 output capability cannot meet the requirement, a transistor of NPN type is needed here to amplify the current.

Transistor, the full name: semiconductor transistor, is a semiconductor device that controls current. Transistor can be used to amplify weak signal, or works as a switch. It has three electrodes(PINs): base (b), collector (c) and emitter (e). When there is current passing between "be", "ce" will allow several-fold current (transistor magnification) pass, at this point, transistor works in the amplifying area. When current between "be" exceeds a certain value, "ce" will not allow current to increase any longer, at this point, transistor works in the saturation area. Transistor has two types as shown below: PNP and NPN,

PNP transistor

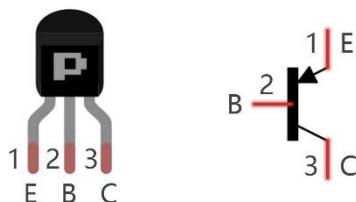

NPN transistor

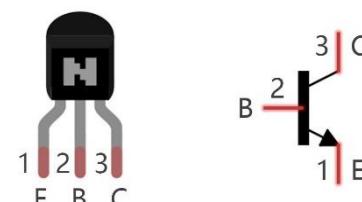


In our kit, the PNP transistor is marked with 8550, and the NPN transistor is marked with 8050.

Based on the transistor's characteristics, it is often used as a switch in digital circuits. As micro-controller's capacity to output current is very weak, we will use transistor to amplify current and drive large-current components.


When use NPN transistor to drive buzzer, we often adopt the following method. If GPIO outputs high level, current will flow through R1, the transistor will get conducted, and the buzzer will sound. If GPIO outputs low level, no current flows through R1, the transistor will not be conducted, and buzzer will not sound.

When use PNP transistor to drive buzzer, we often adopt the following method. If GPIO outputs low level, current will flow through R1, the transistor will get conducted, and the buzzer will sound. If GPIO outputs high level, no current flows through R1, the transistor will not be conducted, and buzzer will not sound.

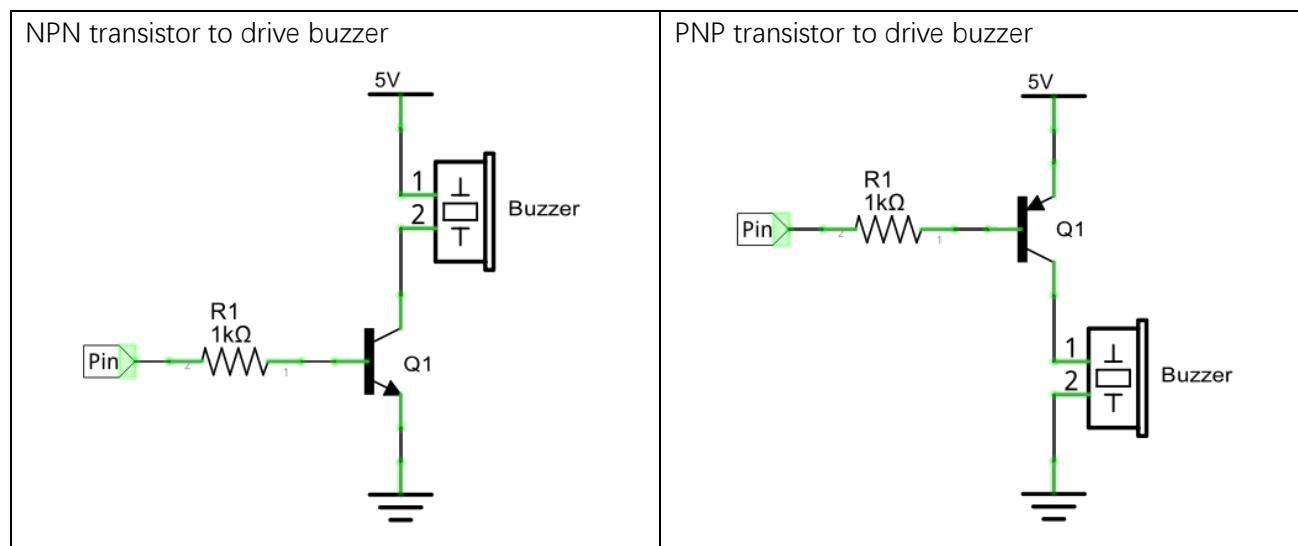


Circuit

Schematic diagram

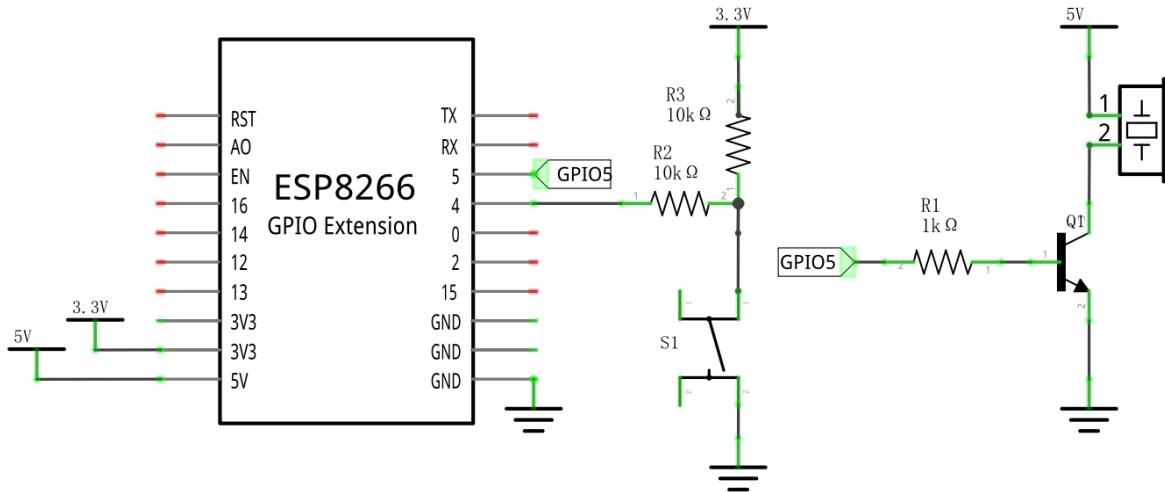

Hardware connection. If you need any support, please free to contact us via: support@freenove.com

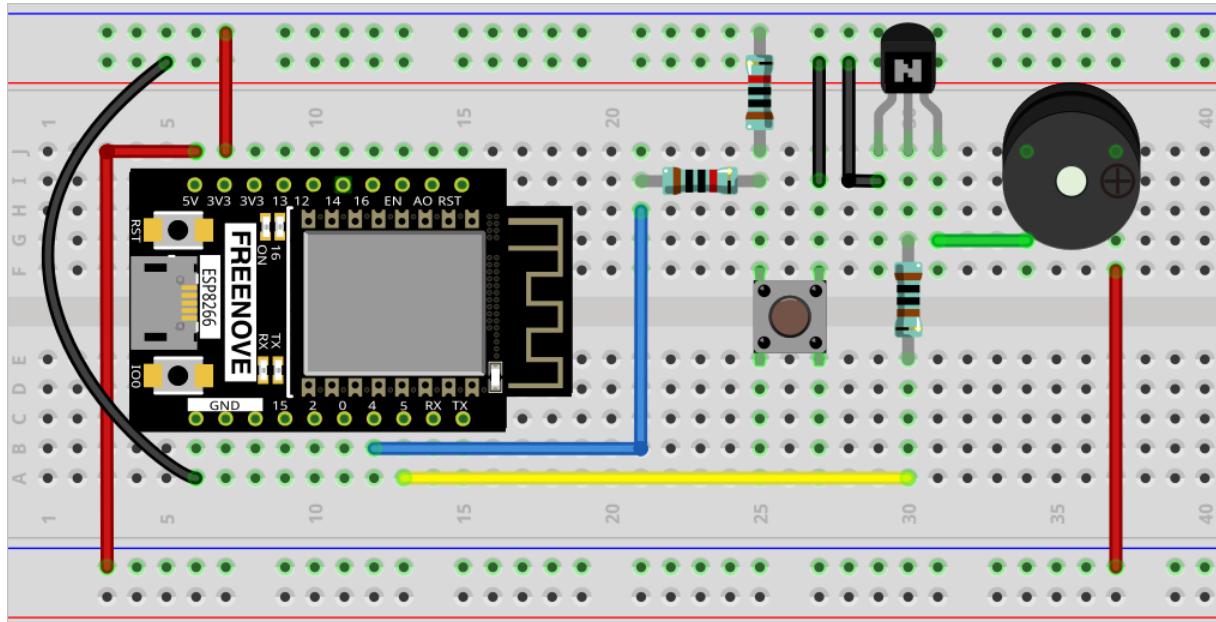

Note: in this circuit, the power supply for buzzer is 5V, and pull-up resistor of the button connected to the power 3.3V. The buzzer can work when connected to power 3.3V, but it will reduce the loudness.

Sketch

In this project, a buzzer will be controlled by a push button switch. When the button switch is pressed, the buzzer sounds and when the button is released, the buzzer stops. It is analogous to our earlier project that controlled a LED ON and OFF.

Upload following sketch:


Freenove_Ultimate_Starter_Kit_for_ESP8266\С\Sketches\Sketch_07.1_Doorbell

Sketch_07.1_Doorbell

```
Sketch_07.1_Doorbell | Arduino 1.8.19
File Edit Sketch Tools Help
Sketch_07.1_Doorbell
1 // ****
2   Filename      : Doorbell
3   Description   : Control active buzzer by button.
4   Author        : www.freenove.com
5   Modification: 2022/05/10
6 ****
7 #define PIN_BUZZER 5
8 #define PIN_BUTTON 4
9
10 void setup() {
11   pinMode(PIN_BUZZER, OUTPUT);
12   pinMode(PIN_BUTTON, INPUT);
13 }
14
15 void loop() {
16   if (digitalRead(PIN_BUTTON) == LOW) {
17     digitalWrite(PIN_BUZZER, HIGH);
18   } else{
19     digitalWrite(PIN_BUZZER, LOW);
20   }
21 }
```

Done uploading.
Leaving...
Hard resetting via RTS pin...

Download the code to ESP8266, press the push button switch and the buzzer will sound. Release the push button switch and the buzzer will stop.

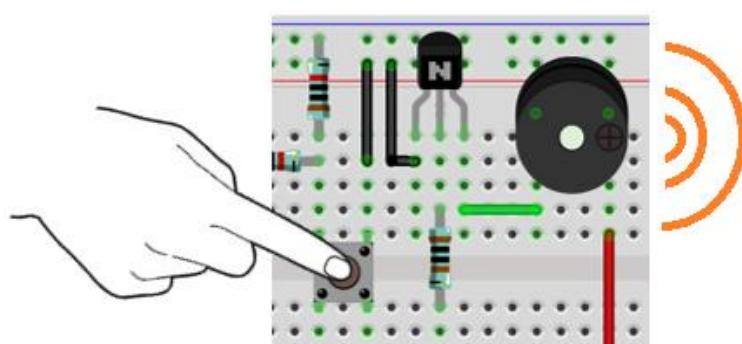



The following is the program code:

```
1 #define PIN_BUZZER 5
2 #define PIN_BUTTON 4
3
4 void setup() {
5     pinMode(PIN_BUZZER, OUTPUT);
6     pinMode(PIN_BUTTON, INPUT);
7 }
8
9 void loop() {
10    if (digitalRead(PIN_BUTTON) == LOW) {
11        digitalWrite(PIN_BUZZER, HIGH);
12    }else{
13        digitalWrite(PIN_BUZZER, LOW);
14    }
15 }
```

The code is logically the same as using button to control LED.

Project 7.2 Alertor


Next, we will use a passive buzzer to make an alarm.

Component list and the circuit is similar to the last section. In the Doorbell circuit only the **active buzzer** needs to be **replaced** with a **passive buzzer**.

Sketch

In this project, the buzzer alarm is controlled by the button. Press the button, then buzzer sounds. If you release the button, the buzzer will stop sounding. It is logically the same as using button to control LED, but in the control method, passive buzzer requires PWM of certain frequency to sound.

Sketch_07.2_Alertor

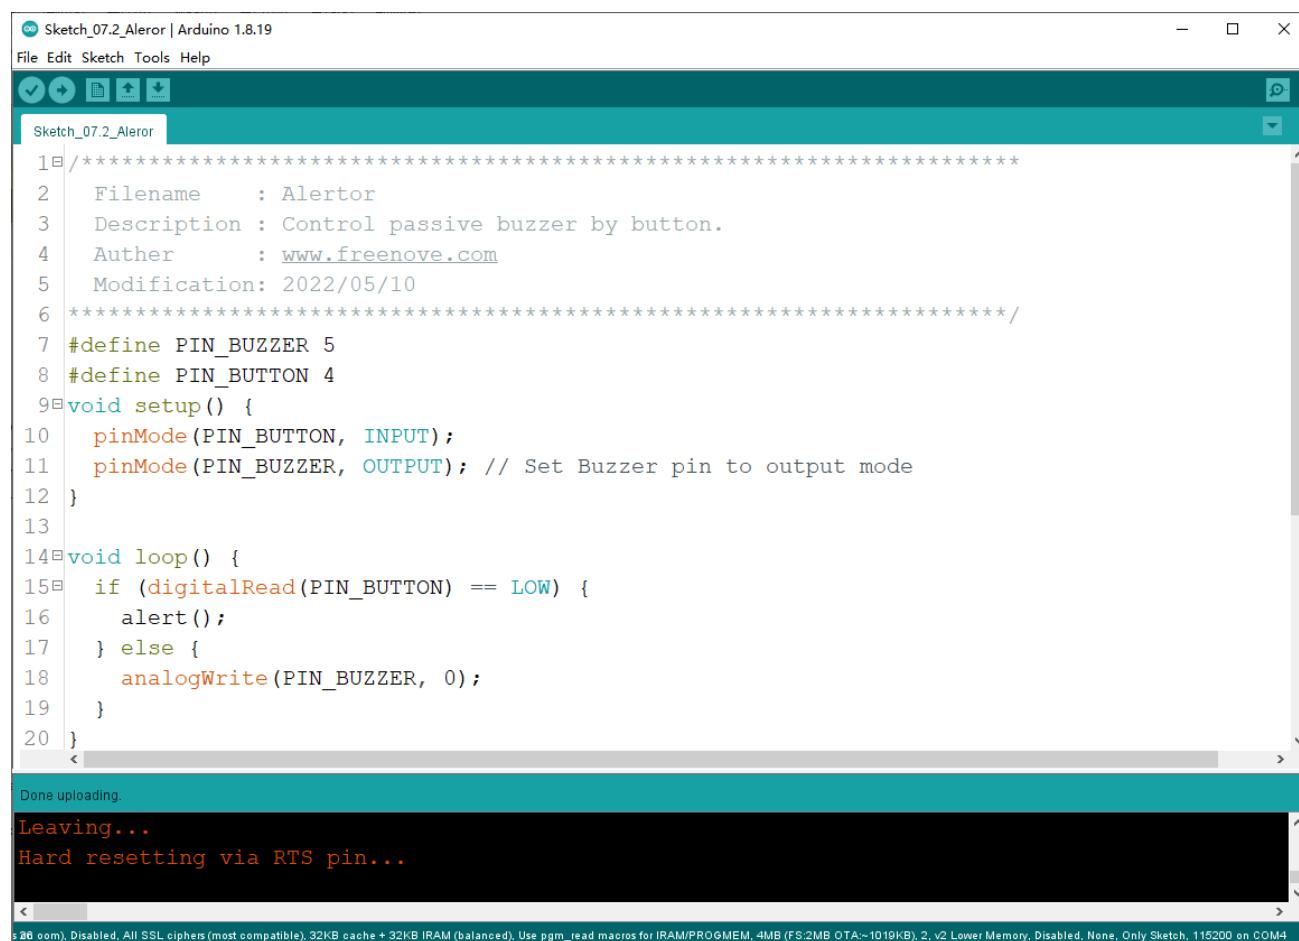


The screenshot shows the Arduino IDE interface with the sketch named "Sketch_07.2_Alertor". The code is as follows:

```
1 // ****
2 Filename      : Alertor
3 Description   : Control passive buzzer by button.
4 Author        : www.freenove.com
5 Modification: 2022/05/10
6 ****
7 #define PIN_BUZZER 5
8 #define PIN_BUTTON 4
9 void setup() {
10    pinMode(PIN_BUTTON, INPUT);
11    pinMode(PIN_BUZZER, OUTPUT); // Set Buzzer pin to output mode
12 }
13
14 void loop() {
15    if (digitalRead(PIN_BUTTON) == LOW) {
16        alert();
17    } else {
18        analogWrite(PIN_BUZZER, 0);
19    }
20 }
```

The serial monitor at the bottom shows the message: "Done uploading. Leaving... Hard resetting via RTS pin..."

Download the code to ESP8266, press the button, then alarm sounds. And when the button is released, the alarm will stop sounding.

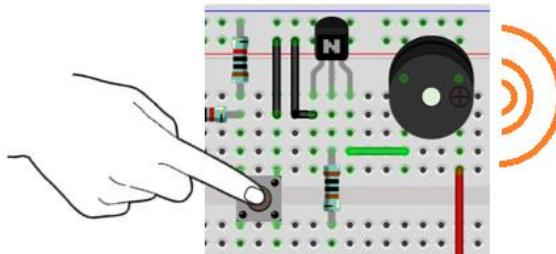

The following is the program code:

```

1 #define PIN_BUZZER 5
2 #define PIN_BUTTON 4
3 void setup() {
4     pinMode(PIN_BUTTON, INPUT);
5     pinMode(PIN_BUZZER, OUTPUT); // Set Buzzer pin to output mode
6     Serial.begin(115200);
7 }
8 void loop() {
9     if (digitalRead(PIN_BUTTON) == LOW) {
10         alert();
11     }
12     else {
13         analogWrite(PIN_BUZZER, 0);
14     }
15 }
16 void alert() {
17     float sinVal;           // Define a variable to save sine value
18     int toneVal;           // Define a variable to save sound frequency
19     for (int x = 0; x < 360; x++) { // X from 0 degree->360 degree
20         sinVal = sin(x * (PI / 180)); // Calculate the sine of x
21         toneVal = 500 + sinVal * 500; //Calculate sound frequency according to the sine of x
22         tone(PIN_BUZZER, toneVal);      // Output sound frequency to buzzerPin
23         delay(1);
24         noTone(PIN_BUZZER);
25         delay(1);
26         Serial.printf("Running %d \n", toneVal);
27     }
28 }
```

In the code, use one loop to control the sound frequency, varying according to sine curve in the range of 500 ± 500 .

```

19     for (int x = 0; x < 360; x++) { // X from 0 degree->360 degree
20         sinVal = sin(x * (PI / 180)); // Calculate the sine of x
21         toneVal = 500 + sinVal * 500; //Calculate sound frequency according to the sine of x
```

```
22     tone(PIN_BUZZER, toneVal);           // Output sound frequency to buzzerPin
23     delay(1);
24     noTone(PIN_BUZZER);
25     delay(1);
26     Serial.printf("Running %d \n", toneVal);
27 }
```

The parameter of sin() function is radian, so we need convert unit of π from angle to radian first .

Reference

tone(pin, frequency)

Generates a square wave of the specified frequency (and 50% duty cycle) on a pin.

Verify and upload the code, passive buzzer starts making a warning sound.

You can try using PNP transistor to complete the project of this chapter again.




Chapter 8 Serial Communication

Serial Communication is a means of communication between different devices/devices. This section describes ESP8266's Serial Communication.

Project 8.1 Serial Print

This project uses ESP8266's serial communicator to send data to the computer and print it on the serial monitor.

Component List

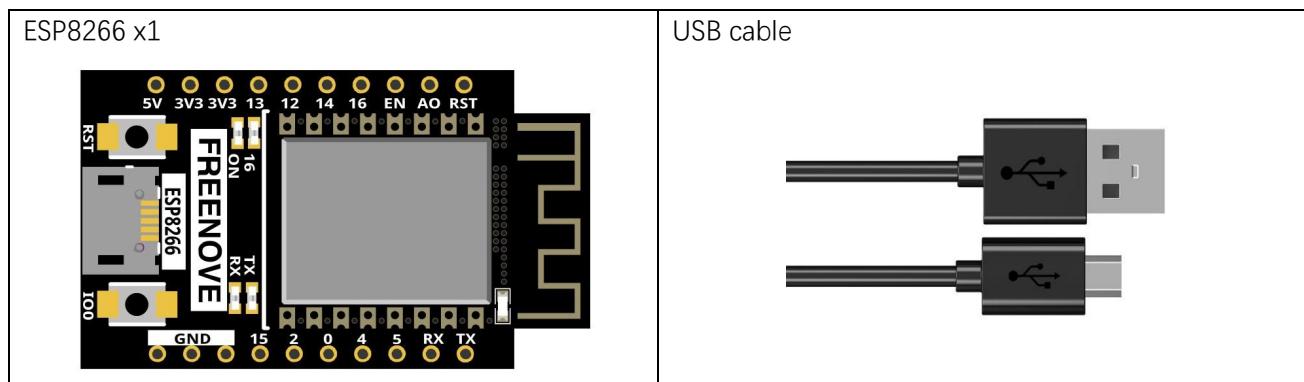

Related knowledge

Serial communication

Serial communication generally refers to the Universal Asynchronous Receiver/Transmitter (UART), which is commonly used in electronic circuit communication. It has two communication lines, one is responsible for sending data (TX line) and the other for receiving data (RX line). The serial communication connections of two devices is as follows:



Before serial communication starts, the baud rate of both sides must be the same. Communication between devices can work only if the same baud rate is used. The baud rates commonly used is 9600 and 115200.

Serial port on ESP8266

Freenove ESP8266 has integrated USB to serial transfer, so it could communicate with computer connecting to USB cable.




Arduino Software also uploads code to Freenove ESP8266 through the serial connection.

Your computer identifies serial devices connecting to it as COMx. We can use the Serial Monitor window of Arduino Software to communicate with Freenove ESP8266, connect Freenove ESP8266 to computer through the USB cable, choose the correct device, and then click the Serial Monitor icon to open the Serial Monitor window.

Interface of serial monitor window is as follows. If you can't open it, make sure Freenove ESP8266 has been connected to the computer, and choose the right serial port in the menu bar "Tools".



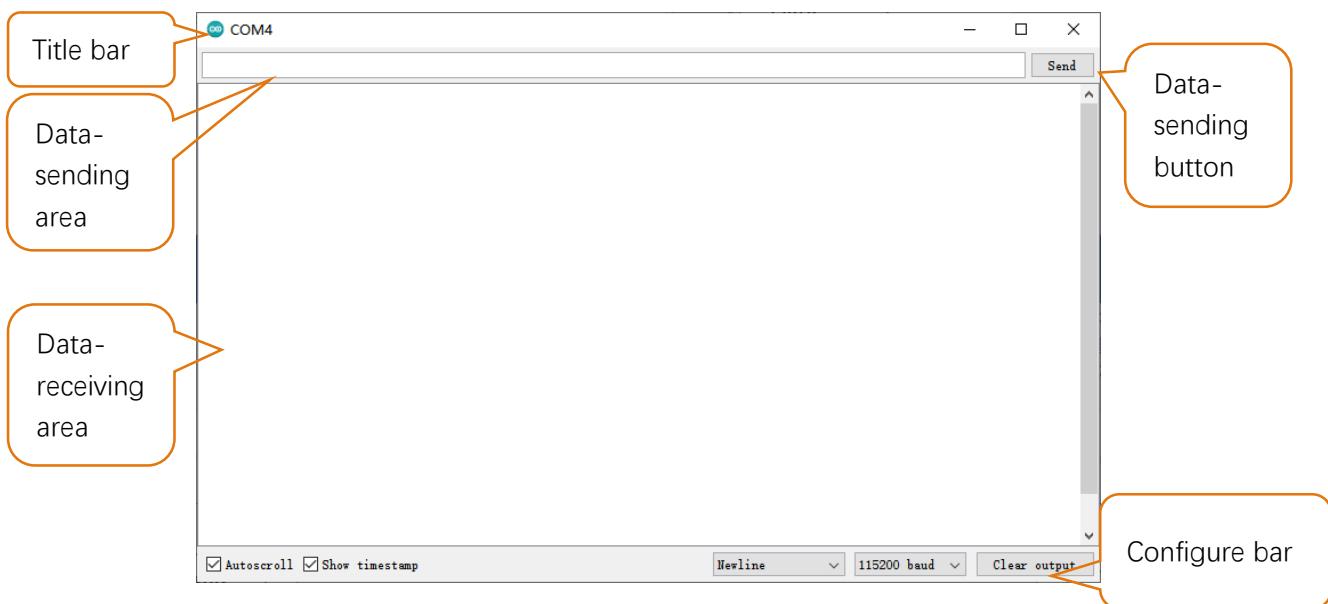


When the ESP8266 is powered on, the default baud rate is 74880. The default communication and serial port in the ESP8266 firmware is 115200. So if you set the serial port to 74880, this time can be displayed normally. If the baud rate is not 74880, some garbled characters will appear. Please do not worry.

Here, we use The Arduino IDE serial port tool for output and display. The details are as follows:

```
void setup() {
    Serial.begin(74880);
    Serial.println("ESP8266 initialization completed!");
}

void loop() {
    Serial.printf("Running time : %.1f s\n", millis() / 1000.0f);
    delay(1000);
}
```

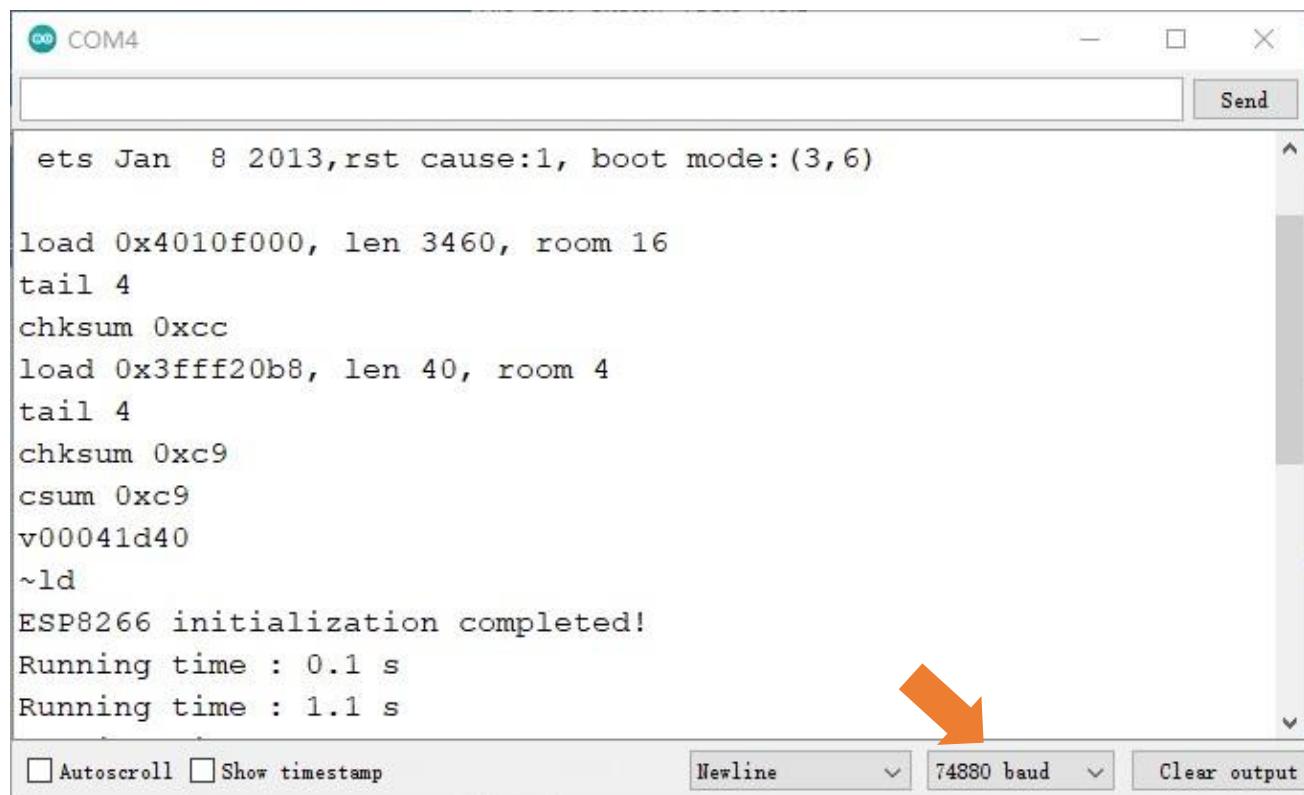


Any concerns? [✉ support@freenove.com](mailto:support@freenove.com)

Garbled characters are displayed when you set the baud rate to another value as follows:


```
void setup() {
    Serial.begin(115200);
    Serial.println("ESP8266 initialization completed!");
}

void loop() {
    Serial.printf("Running time : %.1f s\n", millis() / 1000.0f);
    delay(1000);
}
```

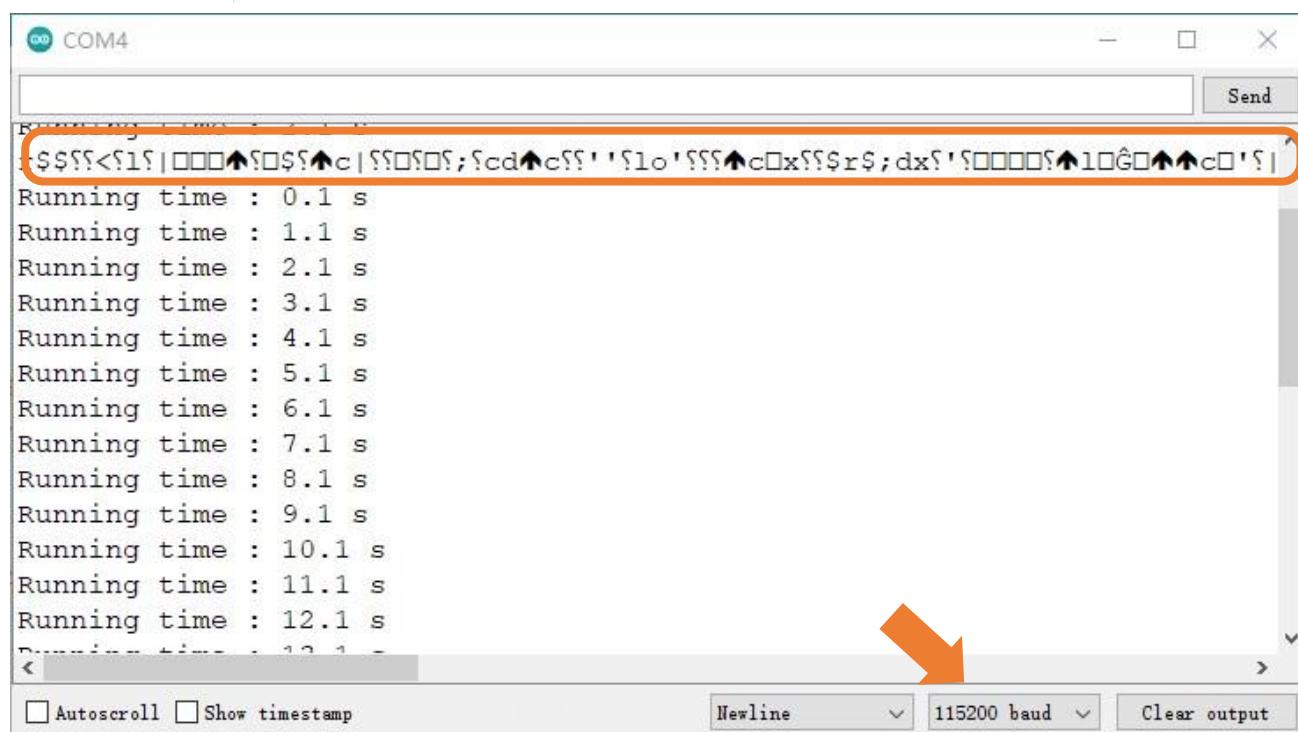

Circuit

Connect Freenove ESP8266 to the computer with USB cable.

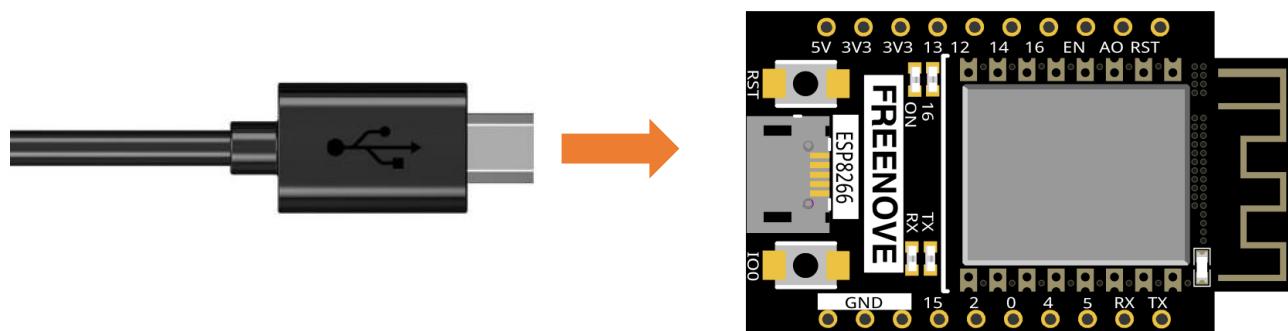

Sketch


Sketch_08.1_SerialPrinter

The screenshot shows the Arduino IDE interface. The title bar reads "Sketch_08.1_SerialPrinter | Arduino 1.8.19". The menu bar includes File, Edit, Sketch, Tools, and Help. The toolbar has icons for save, undo, redo, and upload. The code editor window contains the following C++ code:

```
1 // ****
2 Filename      : SerialPrinter
3 Description   : Use UART send some data to PC, and show them on serial mon
4 Author        : www.freenove.com
5 Modification: 2022/05/10
6 ****
7
8 void setup() {
9     Serial.begin(74880);
10    Serial.println("ESP8266 initialization completed!");
11 }
12
13 void loop() {
14     Serial.printf("Running time : %.1f s\n", millis() / 1000.0f);
15     delay(1000);
16 }
```

The status bar at the bottom indicates "Done uploading." and "Hash of data verified." Below the status bar, the text "Leaving..." and "Hard resetting via RTS pin..." is displayed.

Download the code to ESP8266, open the serial port monitor, set the baud rate to 74880, and press the reset button. As shown in the following figure:

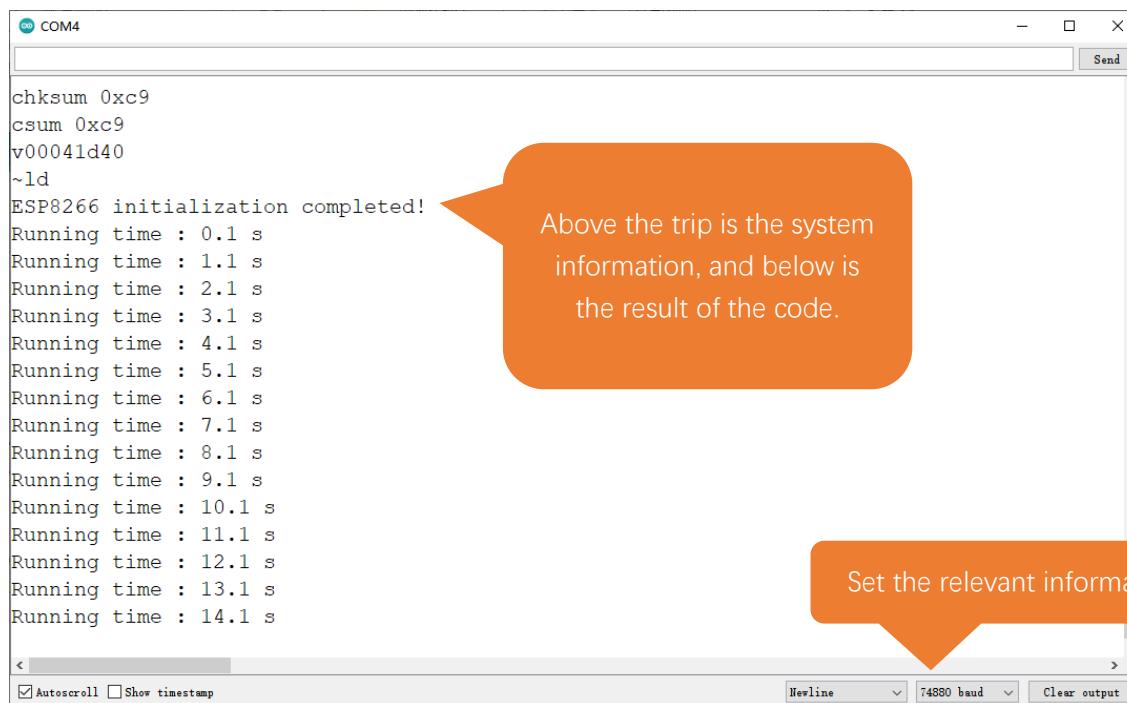

As shown in the image above, "ESP8266 initialization completed!" The previous is the printing message when the system is started, it uses the baud rate of 120,000, which is incorrect, so the garbled code is displayed. The user program is then printed at a baud rate of 74880.

For more information, click [here](#).

The following is the program code:

```

1 void setup() {
2     Serial.begin(74880);
3     Serial.println("ESP8266 initialization completed!");
4 }
5
6 void loop() {
7     Serial.printf("Running time : %.1f s\n", millis() / 1000.0f);
8     delay(1000);
9 }
```

Reference

<code>void begin(unsigned long baud, uint32_t config=SERIAL_8N1, int8_t rxPin=-1, int8_t txPin=-1, bool invert=false, unsigned long timeout_ms = 20000UL);</code>

Initializes the serial port. Parameter baud is baud rate, other parameters generally use the default value.

<code>size_t println(arg);</code>

Print to the serial port and wrap. The parameter **arg** can be a number, a character, a string, an array of characters, etc.

<code>size_t printf(const char * format, ...) __attribute__((format (printf, 2, 3)));</code>

Print formatted content to the serial port in the same way as print in standard C.

<code>unsigned long millis();</code>

Returns the number of milliseconds since the current system was booted.

Project 8.2 Serial Read and Write

From last section, we use serial port on Freenove ESP8266 to send data to a computer, now we will use that to receive data from computer.

Component and circuit are the same as in the previous project.

Sketch

Sketch_08.2_SerialRW

The screenshot shows the Arduino IDE interface. The top menu bar includes File, Edit, Sketch, Tools, and Help. Below the menu is a toolbar with icons for upload, download, and other functions. The main area displays the sketch code, and the bottom section shows the serial monitor output.

```

Sketch_08.2_SerialRW | Arduino 1.8.19
File Edit Sketch Tools Help
Sketch_08.2_SerialRW
8 bool stringComplete = false; // whether the string is complete
9
10 void setup() {
11   Serial.begin(74880);
12   Serial.println(String("\nESP8266 initialization completed!\n")
13                 + String("Please input some characters,\n")
14                 + String("select \"Newline\" below and click send button."));
15 }
16
17 void loop() {
18   if (Serial.available()) { // judge whether data has been received
19     char inChar = Serial.read(); // read one character
20     inputString += inChar;
21     if (inChar == '\n') {
22       stringComplete = true;
23     }
24   }
25   if (stringComplete) {
26     Serial.printf("inputString: %s \n", inputString);
27     inputString = "";
  
```

Leaving...
Hard resetting via RTS pin...

Compatible), 32KB cache + 32KB IRAM (balanced), Use pgm_read macros for IRAM/PROGMEM, 4MB (FS:2MB OTA:~1019KB), 2, v2 Lower Memory, Disabled, None, Only Sketch, 115200 on COM4

Download the code to ESP8266, open the serial monitor, and set the bottom to Newline, 74880. As shown in the following figure:

```
ets Jan 8 2013,rst cause:1, boot mode:(3,6)

load 0x4010f000, len 3460, room 16
tail 4
chksum 0xcc
load 0x3fff20b8, len 40, room 4
tail 4
chksum 0xc9
csum 0xc9
v000421d0
~ld

ESP8266 initialization completed!
Please input some characters,
select "Newline" below and click send button.
```

Newline, 74880 baud

Autoscroll Show timestamp Newline 74880 baud Clear output

Then type characters like 'ABCDEG' into the data sent at the top and click the Send button to print out the data ESP8266 receives.

```
ABCDEF
```

```
load 0x4010f000, len 3460, room 16
tail 4
chksum 0xcc
load 0x3fff20b8, len 40, room 4
tail 4
chksum 0xc9
csum 0xc9
v000421d0
~ld

ESP8266 initialization completed!
Please input some characters,
select "Newline" below and click send button.

inputString: ABCDEG
```

Autoscroll Show timestamp Newline 74880 baud Clear output

The following is the program code:

```

1  String inputString = "";      //a String to hold incoming data
2  bool stringComplete = false; // whether the string is complete
3
4  void setup() {
5      Serial.begin(74880);
6      Serial.println(String("\nESP8266 initialization completed! \n")
7                      + String("Please input some characters, \n")
8                      + String("select \"Newline\" below and click send button. \n"));
9  }
10
11 void loop() {
12     if (Serial.available()) {      // judge whether data has been received
13         char inChar = Serial.read(); // read one character
14         inputString += inChar;
15         if (inChar == '\n') {
16             stringComplete = true;
17         }
18     }
19     if (stringComplete) {
20         Serial.printf("inputString: %s \n", inputString);
21         inputString = "";
22         stringComplete = false;
23     }
24 }
```

In loop(), determine whether the serial port has data, if so, read and save the data, and if the newline character is read, print out all the data that has been read.

Reference

String();

Constructs an instance of the String class.

For more information, please visit

<https://www.arduino.cc/reference/en/language/variables/data-types/stringobject/>

int available(void);

Get the number of bytes (characters) available for reading from the serial port. This is data that's already arrived and stored in the serial receive buffer.

Serial.read();

Reads incoming serial data.

Chapter 9 ADC Converter

We have learned how to control the brightness of LED through PWM and understood that PWM is not the real analog before. In this chapter, we will learn how to read analog, convert it into digital. That is, ADC.

Project 9.1 Read the Voltage of Potentiometer

In this project, ADC is used to convert analog signals into digital signals. Control chip on the control board has integrated this function. Now let us try to use this function to convert analog signals into digital signals.


Component List

ESP8266 x1	USB cable
Breadboard x1	
Rotary potentiometer x1	Jumper wire M/M x3

Related knowledge

ADC

An ADC is an electronic integrated circuit used to convert analog signals such as voltages to digital or binary form consisting of 1s and 0s. The range of our ADC on ESP8266 is 10 bits, that means the resolution is $2^{10}=1024$, and it represents a range (at 3.3V) will be divided equally to 1024 parts. The range of analog values corresponds to ADC values. So the more bits the ADC has, the denser the partition of analog will be and the greater the precision of the resulting conversion.

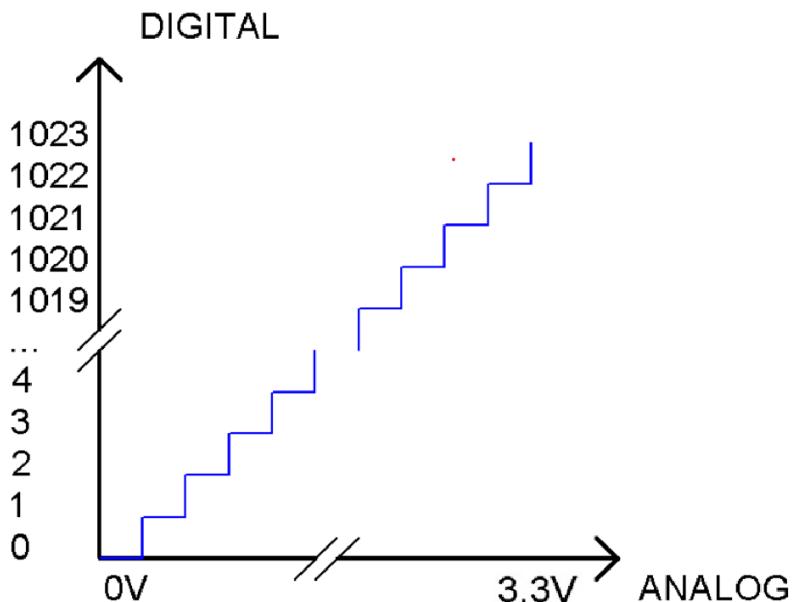

Subsection 1: the analog in rang of 0V---3.3/1023 V corresponds to digital 0;

Subsection 2: the analog in rang of 3.3/1023 V---2*3.3 /1023V corresponds to digital 1;

...

The following analog will be divided accordingly.

The conversion formula is as follows:

$$ADC\ Value = \frac{\text{Analog\ Voltage}}{3.3} * 1023$$

ADC on ESP8266

ESP8266 has one digital analog converters with successive approximations of 10-bit accuracy, and a total of 1 pins can be used to measure analog signals. GPIO analog pin definition are shown in the following table. Note that the input voltage on the ADC pins of the ESP8266 module must be between 0V and 1.0V. For the ESP8266 ESP8266 development board designed by us, its input voltage range has been sampled by resistors. The ADC input voltage of the development board is 0V to 3.3V.

Do not exceed this voltage range when you use the ADC function. Exceeding this voltage range can cause permanent damage to your hardware!

Pin number in ESP8266


A0

The analog pin number is also defined in ESP8266's code base. For example, you can use A0 in your code.

Component knowledge


Potentiometer

A potentiometer is a three-terminal resistor. Unlike the resistors that we have used thus far in our project which have a fixed resistance value, the resistance value of a potentiometer can be adjusted. A potentiometer is often made up by a resistive substance (a wire or carbon element) and movable contact brush. When the brush moves along the resistor element, there will be a change in the resistance of the potentiometer's output side (3) (or change in the voltage of the circuit that is a part). The illustration below represents a linear sliding potentiometer and its electronic symbol on the right.

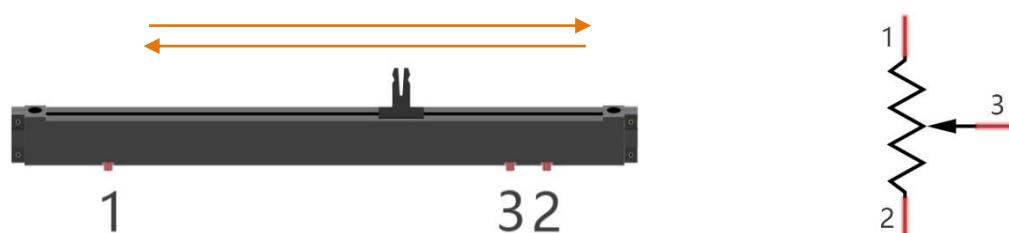


What between potentiometer pin 1 and pin 2 is the resistor body, and pins 3 is connected to brush. When brush moves from pin 1 to pin 2, the resistance between pin 1 and pin 3 will increase up to body resistance linearly, and the resistance between pin 2 and pin 3 will decrease down to 0 linearly.

In the circuit. The both sides of resistance body are often connected to the positive and negative electrode of the power. When you slide the brush pin 3, you can get a certain voltage in the range of the power supply.

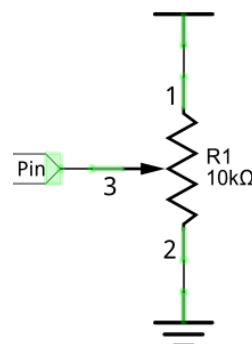

Rotary potentiometer

Rotary potentiometer and linear potentiometer have similar function; their only difference is: the resistance is adjusted by rotating the potentiometer.

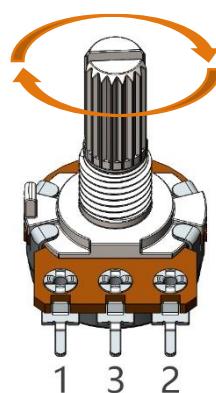




Circuit

Use pin A0 on the control board to detect the voltage of rotary potentiometer.

Schematic diagram




Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

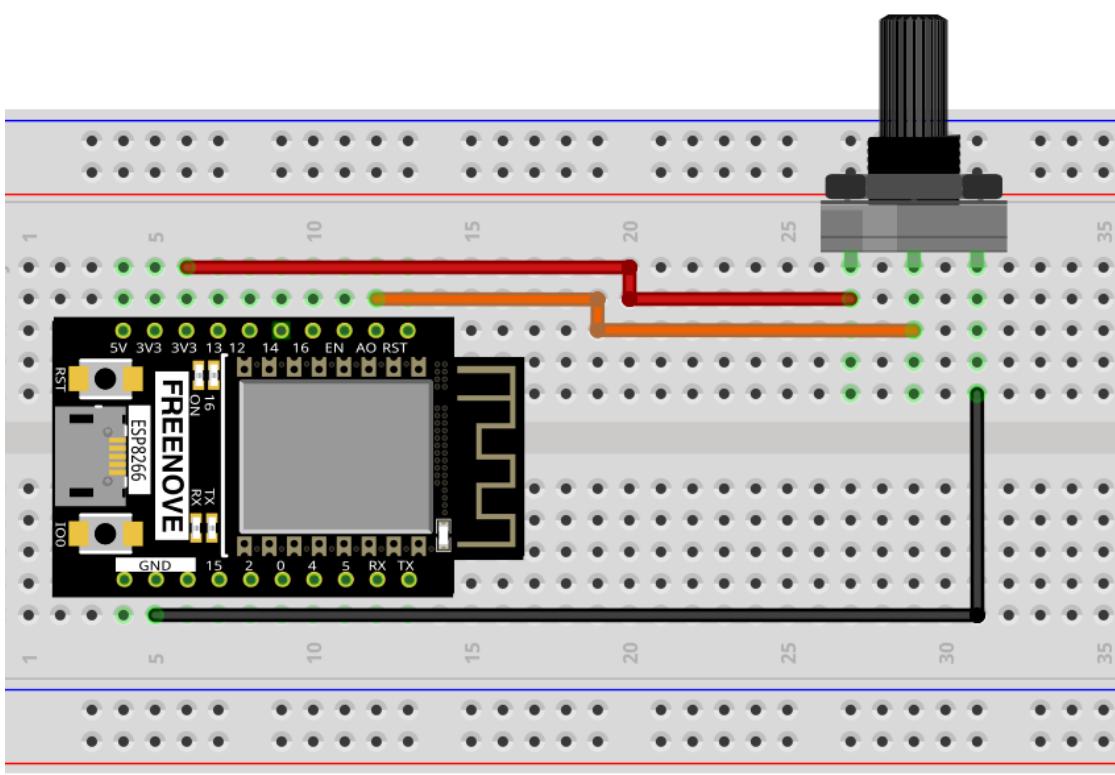

Sketch

Sketch_09.1_ADC

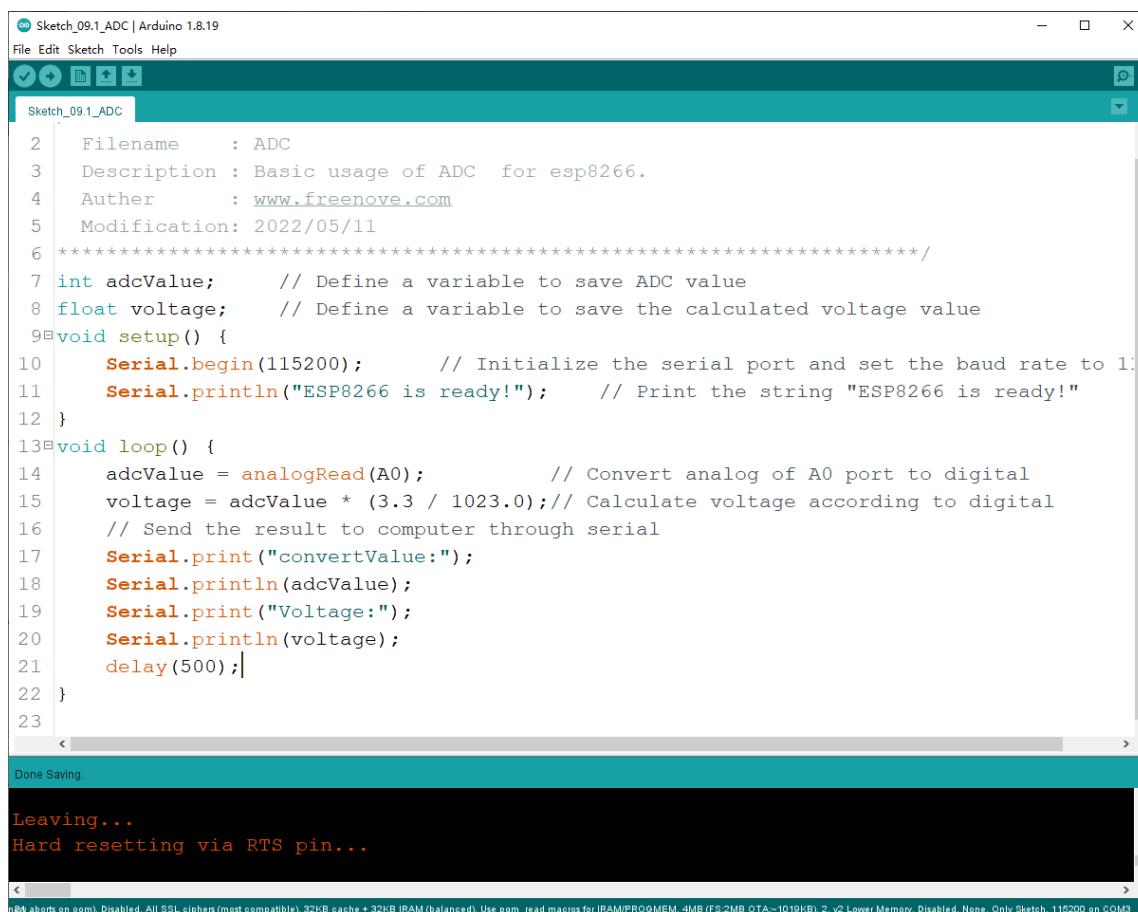

```

Sketch_09.1_ADC | Arduino 1.8.19
File Edit Sketch Tools Help
Sketch_09.1_ADC
2   Filename      : ADC
3   Description   : Basic usage of ADC  for esp8266.
4   Author        : www.freenove.com
5   Modification: 2022/05/11
6 ****
7 int adcValue;      // Define a variable to save ADC value
8 float voltage;     // Define a variable to save the calculated voltage value
9 void setup() {
10   Serial.begin(115200);          // Initialize the serial port and set the baud rate to 115200
11   Serial.println("ESP8266 is ready!"); // Print the string "ESP8266 is ready!"
12 }
13 void loop() {
14   adcValue = analogRead(A0);      // Convert analog of A0 port to digital
15   voltage = adcValue * (3.3 / 1023.0); // Calculate voltage according to digital
16   // Send the result to computer through serial
17   Serial.print("convertValue:");
18   Serial.println(adcValue);
19   Serial.print("Voltage:");
20   Serial.println(voltage);
21   delay(500);
22 }
23
Done Saving.

Leaving...
Hard resetting via RTS pin...

```

hwB aborts on com), Disabled, All SSL ciphers (most compatible), 32KB cache + 32KB IRAM (balanced), Use pgm_read macros for IRAM/PROGMEM, 4MB (FS:2MB OTA:~1019KB), 2, v2 Lower Memory, Disabled, None, Only Sketch, 115200 on COM3

Download the code to ESP8266, open the serial monitor, and set the baud rate to 115200. As shown in the following figure:





From the code, we get the ADC value of pin A0, then convert it into voltage and sent to the serial port. Verify and upload the code, open the Serial Monitor, and then you will see the original ADC value and converted voltage sent from control board.

Turn the rotary potentiometer shaft, and you can see the voltage change.

The following is the code:

```
1 int adcValue;      // Define a variable to save ADC value
2 float voltage;    // Define a variable to save the calculated voltage value
3 void setup() {
4     Serial.begin(115200);      // Initialize the serial port and set the baud rate to 115200
5     Serial.println("ESP8266 is ready!");    // Print the string "ESP8266 is ready!"
6 }
7 void loop() {
8     adcValue = analogRead(A0);          // Convert analog of A0 port to digital
9     voltage = adcValue * (3.3 / 1023.0); // Calculate voltage according to digital
10    // Send the result to computer through serial
11    Serial.print("convertValue:");
12    Serial.println(adcValue);
13    Serial.print("Voltage:");
14    Serial.println(voltage);
15    delay(500);
16 }
```


Chapter 10 Potentiometer & LED

In the previous section, we have finished reading ADC value and converting it into voltage. Now, we will try to use potentiometer to control the brightness of LED.

Project 10.1 Soft Light

In this project, we will make a soft light. We will use an ADC Module to read ADC values of a potentiometer and map it to duty cycle of the PWM used to control the brightness of a LED. Then you can change the brightness of a LED by adjusting the potentiometer.

Component List

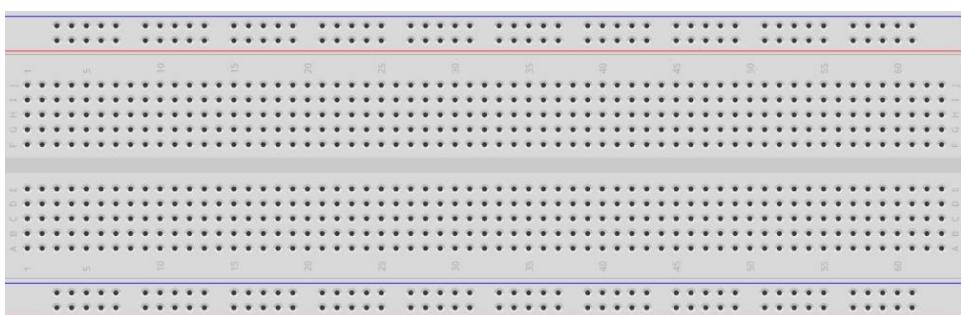
ESP8266 x1	USB cable
	
Breadboard x1	
	
Rotary potentiometer x1	Resistor 220Ω x1
	
LED x1	Jumper wire M/M x8
	




Circuit

Use pin A0 on control board to detect the voltage of rotary potentiometer, and use pin 4 to control one LED.

Schematic diagram

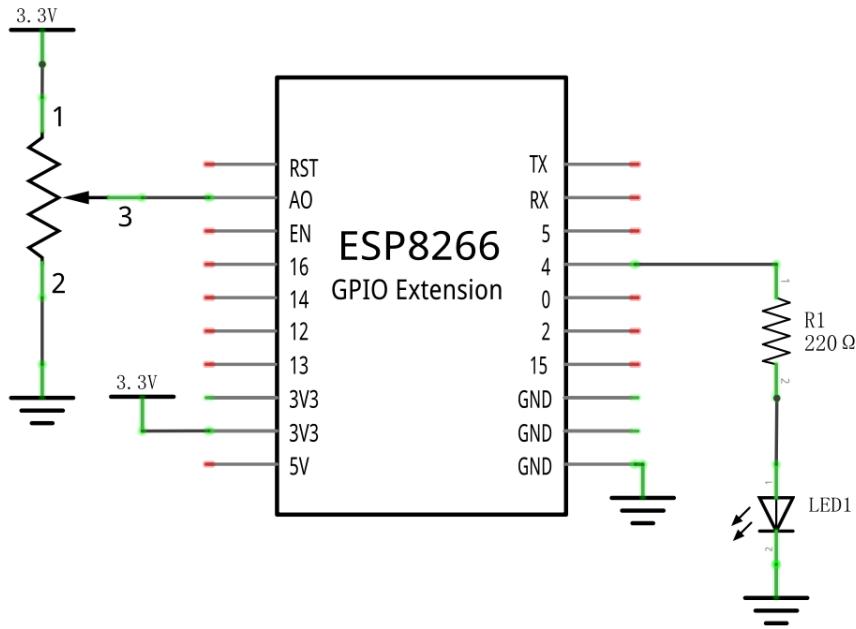

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

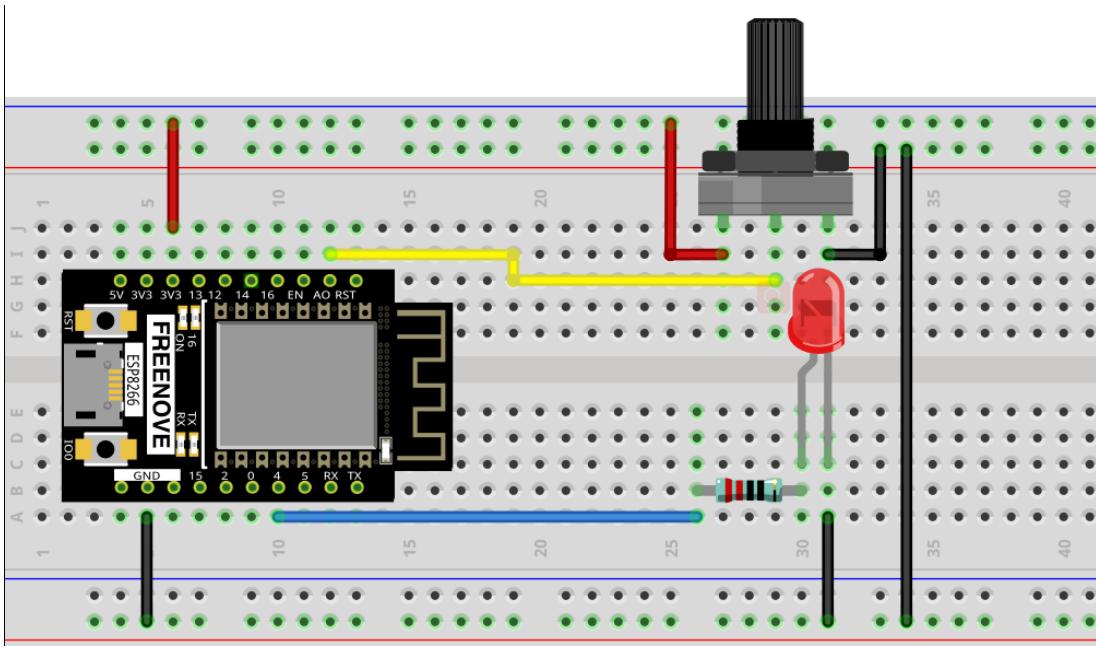

Sketch

Sketch_10.1_Softlight



```

Sketch_10.1_SoftLight | Arduino 1.8.19
File Edit Sketch Tools Help
Sketch_10.1_SoftLight
1 // ****
2   Filename      : SoftLight
3   Description   : Controlling the brightness of LED by potentiometer.
4   Author        : www.freenove.com
5   Modification: 2022/05/11
6 ****
7   int adcValue;      // Define a variable to save the ADC value
8   int ledPin = 4;    // Use D9 on Freenove UNO to control the LED
9
10 void setup() {
11     pinMode(ledPin, OUTPUT);           // Initialize the LED pin as an output
12 }
13 void loop() {
14     adcValue = analogRead(A0);         // Convert the analog of A0 port to digital
15     // Map analog to the 0-255 range, and works as PWM duty cycle of ledPin port
16     analogWrite(ledPin, map(adcValue, 0, 1024, 0, 255));
17 }
18

Done Saving.

```

Done Saving.

nde aborts on com), Disabled, All SSL ciphers (most compatible), 32KB cache + 32KB IRAM (balanced), Use pgm_read macros for IRAM/PROGMEM, 4MB (FS:2MB OTA:~1019KB), 2, v2 Lower Memory, Disabled, None, Only Sketch, 115200 on COM3

Download the code to ESP8266, by turning the adjustable resistor to change the input voltage of GPIO4, ESP8266 changes the output voltage of GPIO4 according to this voltage value, thus changing the brightness of the LED.

The following is the code:

```

1   int adcValue;      // Define a variable to save the ADC value
2   int ledPin = 4;
3   void setup() {
4       pinMode(ledPin, OUTPUT);           // Initialize the LED pin as an output
5   }
6   void loop() {
7       adcValue = analogRead(A0);         // Convert the analog of A0 port to digital
8       // Map analog to the 0-255 range, and works as PWM duty cycle of ledPin port
9       analogWrite(ledPin, map(adcValue, 0, 1024, 0, 255));
10  }

```

In the code, we get the ADC value of pin A0 and map it to PWM duty cycle of LED pin port. According to




Any concerns? ✉ support@freenove.com

different LED brightness, we can see the changes of voltage easily.

Project 10.2 Color Light


In this project, a potentiometer is used to control the RGB LED. The RGB LED is bright red when the potentiometer is near the midpoint, green when the potentiometer rotates to the "left" and blue when the potentiometer rotates to the "right".

Component List

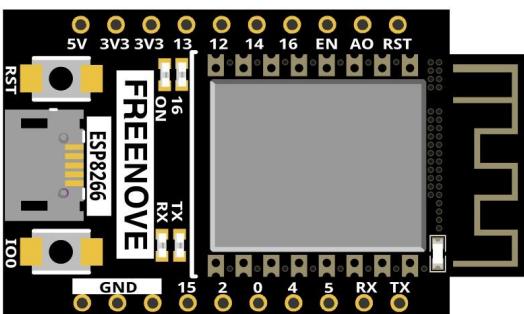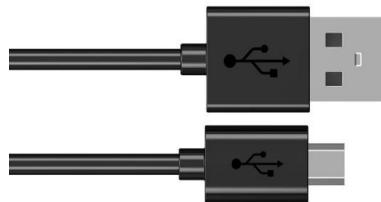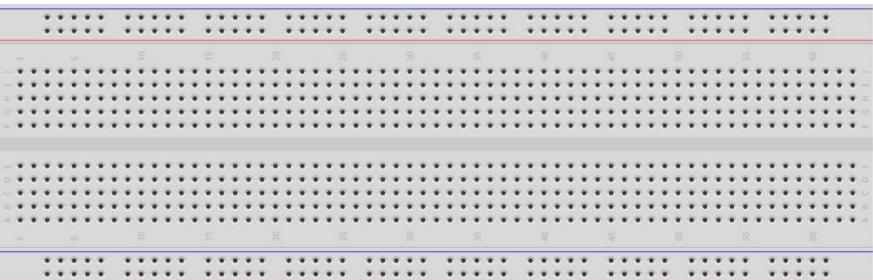
ESP8266 x1	USB cable		
			
Breadboard x1			
Rotary potentiometer x1	Resistor 220Ω x3	RGBLED x1	Jumper wire M/M x9

Circuit

Schematic diagram

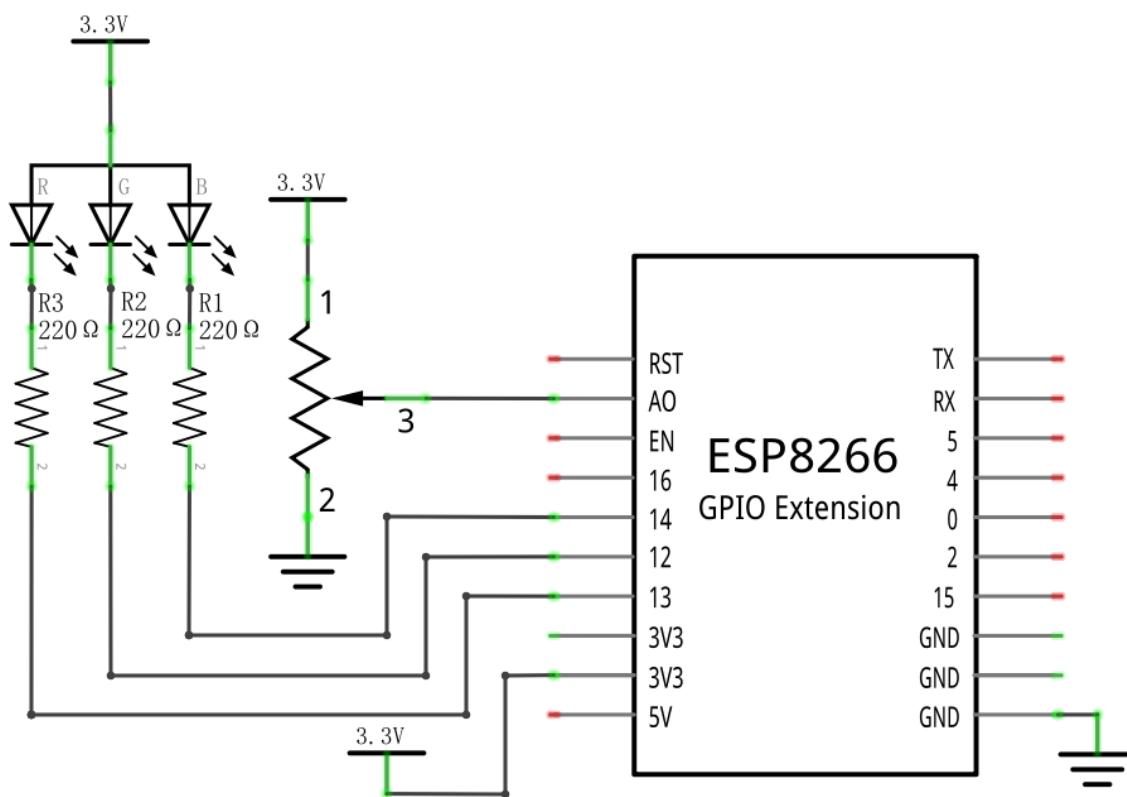

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

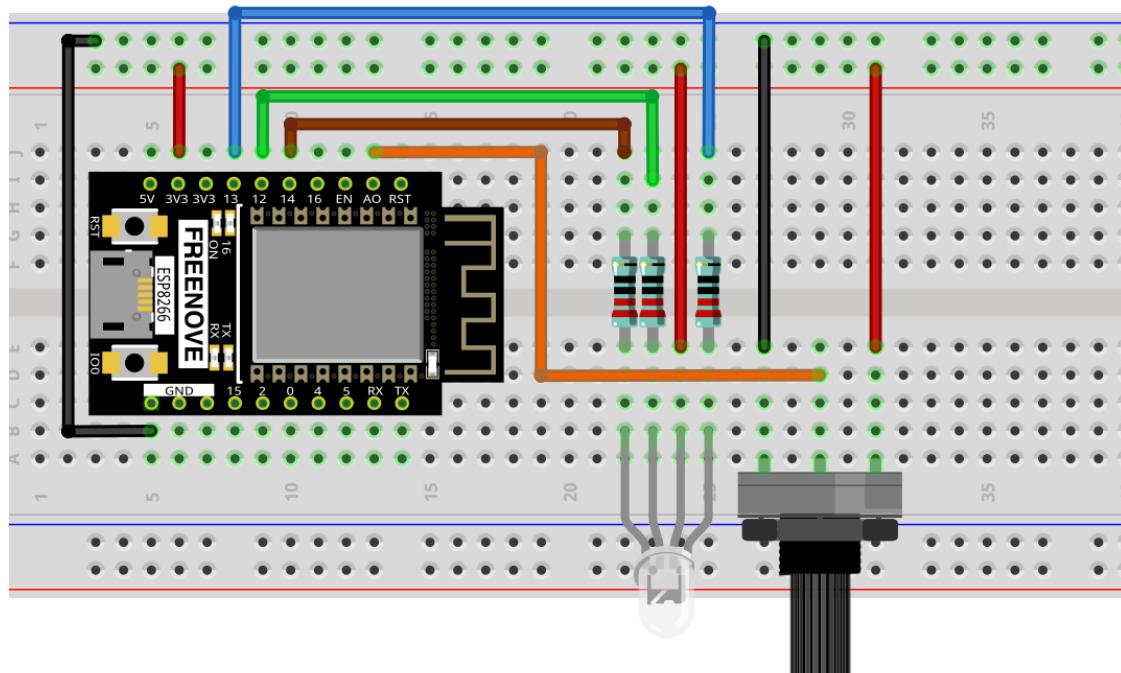

Sketch

Sketch_10.2_ColorLight

The screenshot shows the Arduino IDE interface. The title bar reads "Sketch_10.2_ColorLight | Arduino 1.8.19". The menu bar includes File, Edit, Sketch, Tools, and Help. Below the menu is a toolbar with icons for upload, refresh, and other functions. The main code area contains the following sketch:

```
Sketch_10.2_ColorLight
13     analogWrite(ledPins[1], g);
14     analogWrite(ledPins[2], b);
15 }
16 void setup() {
17     pinMode(ledPin, OUTPUT);          // Initialize the LED pin as an output
18 }
19 void loop() {
20     adcValue = analogRead(A0);        // Convert the analog of A0 port to digital
21     // Map analog to the 0-255 range, and works as PWM duty cycle of ledPin port
22     if(adcValue>=0&&adcValue<=345) {
23         setColor(255, 0, 255);
24     }
25     else if(adcValue>345&&adcValue<680) {
26         setColor(0, 255, 255);
27     }
28     else if(adcValue>=680&&adcValue<=1024) {
29         setColor(255, 255, 0);
30     }
31 }
```

The status bar at the bottom indicates "Done uploading." followed by "Leaving... Hard resetting via RTS pin...". The footer of the IDE shows memory usage information: "esp8266-compatible), 32KB cache + 32KB IRAM (balanced). Use pgm_read_macros for IRAM/PROGMEM, 4MB (FS:2MB OTA:~1019KB), 2, v2 Lower Memory, Disabled, None, Only Sketch, 115200 on COM4".

Download the code to ESP8266, rotate the potentiometers, then the color of RGB LED will change.

If you have any concerns, please contact us via: support@freenove.com

The following is the program code:

```
1 int adcValue;      // Define a variable to save the ADC value
2 int ledPin = 4;
3 const byte ledPins[] = {13, 14, 12};    //define red, green, blue led pins
4 int red, green, blue;
5 void setColor(byte r, byte g, byte b) {
6     analogWrite(ledPins[0], r); //Common anode LED, low level to turn on the led.
7     analogWrite(ledPins[1], g);
8     analogWrite(ledPins[2], b);
9 }
10 void setup() {
11     pinMode(ledPin, OUTPUT);           // Initialize the LED pin as an output
12 }
13 void loop() {
14     adcValue = analogRead(A0);        // Convert the analog of A0 port to digital
15     // Map analog to the 0–255 range, and works as PWM duty cycle of ledPin port
16     if(adcValue>=0&&adcValue<=345) {
17         setColor(255, 0, 255);
18     }
19     else if(adcValue>345&&adcValue<680) {
20         setColor(0, 255, 255);
21     }
22     else if(adcValue>=680&&adcValue<=1024) {
23         setColor(255, 255, 0);
24     }
25 }
```

In the code, you can read the potentiometer ADC value, judge the range of ADC value, to control the RGB LED color.



Project 10.3 Soft Rainbow Light

In this project, we use potentiometer to control Freenove 8 RGB LED Module.

Component List


ESP8266 x1	USB cable
Breadboard x1	
Freenove 8 RGB LED Module x1	Rotary potentiometer x1 Jumper wire F/M x3 Jumper wire M/M x7

Circuit

Schematic diagram



Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

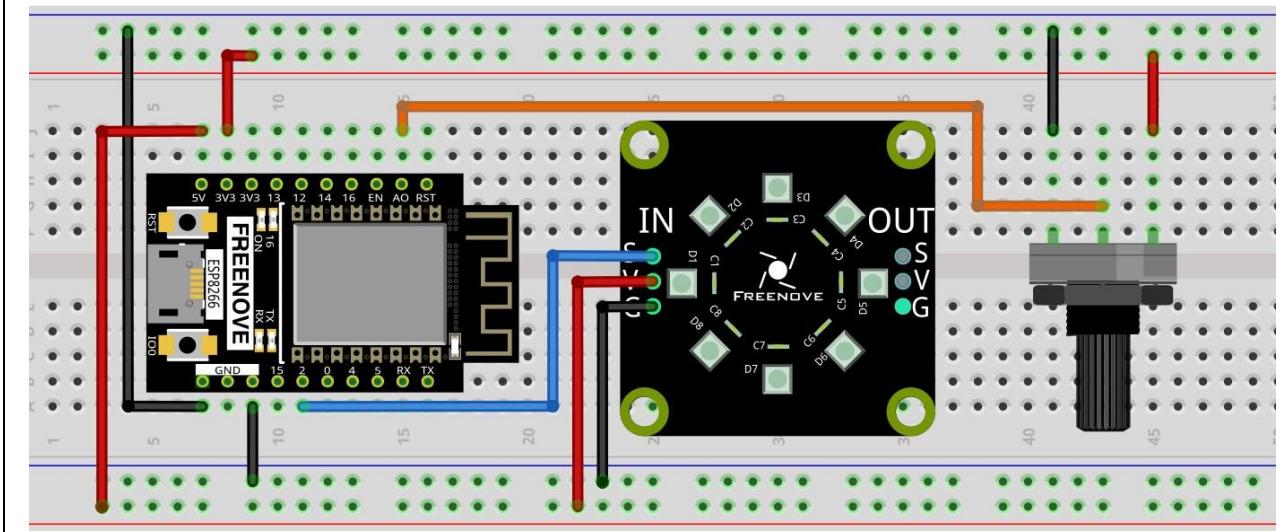



Sketch

Sketch_10.3_Soft_Rainbow_Light

```

Sketch_10.3_SoftRainbowLight | Arduino 1.8.19
File Edit Sketch Tools Help
Sketch_10.3_SoftRainbowLight
5 #define LEDS_PIN      2 // define the pin connected to the Freenove 8 led strip
6 #define BRIGHTNESS   50 // brightness, the value range is 0-255.
7 Adafruit_NeoPixel pixels(LEDS_COUNT, LEDS_PIN, NEO_GRB + NEO_KHZ800);
8 void setup() {
9     pixels.begin(); // INITIALIZE NeoPixel strip object (REQUIRED)
10    pixels.setBrightness(BRIGHTNESS); // set the brightness.
11 }
12
13 void loop() {
14     int colorPos = map(analogRead(PIN_POT), 0, 1023, 0, 255);
15     for (int i = 0; i < LEDS_COUNT; i++) {
16         pixels.setPixelColor(i,Wheel(colorPos + i * 255 / 8)); // Set color data.
17     }
18     pixels.show(); // Send color data to LED, and display.
19     delay(10);
20 }
21
22 uint32_t Wheel(byte pos){
23     u32 WheelPos = pos % 0xff;
24     if (WheelPos < 85){
25         return ((255 - WheelPos * 3) << 16) | ((WheelPos * 3) << 8);
}

Done uploading.
Wrote 266400 bytes (196039 compressed) at 0x00000000 in 17.3 seconds (effective 123.3 kbit/s)
Hash of data verified.

Leaving...
Hard resetting via RTS pin...

```

Download the code to ESP8266, rotate the handle of the potentiometer, and the color of the lamp ring will change.



If you have any concerns, please contact us via: support@freenove.com

Any concerns? [✉ support@freenove.com](mailto:support@freenove.com)

The following is the program code:

```
1 #include <Adafruit_NeoPixel.h>
2
3 #define PIN_POT      A0 // Define analog input pins
4 #define LEDS_COUNT   8 // The number of led
5 #define LEDS_PIN      2 // define the pin connected to the Freenove 8 led strip
6 #define BRIGHTNESS   50 // brightness, the value range is 0-255.
7 Adafruit_NeoPixel pixels(LEDS_COUNT, LEDS_PIN, NEO_GRB + NEO_KHZ800);
8 void setup() {
9     pixels.begin(); // INITIALIZE NeoPixel strip object (REQUIRED)
10    pixels.setBrightness(BRIGHTNESS); // set the brightness.
11 }
12
13 void loop() {
14     int colorPos = map(analogRead(PIN_POT), 0, 1023, 0, 255);
15     for (int i = 0; i < LEDS_COUNT; i++) {
16         pixels.setPixelColor(i, Wheel(colorPos + i * 255 / 8)); // Set color data.
17     }
18     pixels.show(); // Send color data to LED, and display.
19     delay(10);
20 }
21
22 uint32_t Wheel(byte pos) {
23     u32 WheelPos = pos % 0xff;
24     if (WheelPos < 85) {
25         return ((255 - WheelPos * 3) << 16) | ((WheelPos * 3) << 8);
26     }
27     if (WheelPos < 170) {
28         WheelPos -= 85;
29         return (((255 - WheelPos * 3) << 8) | (WheelPos * 3));
30     }
31     WheelPos -= 170;
32     return ((WheelPos * 3) << 16 | (255 - WheelPos * 3));
33 }
```

The overall logical structure of the code is the same as the previous project rainbow light, except that the starting point of the color in this code is controlled by potentiometer.

Chapter 11 Photoresistor & LED

In this chapter, we will learn how to use a photoresistor.

Project 11.1 NightLamp

A photoresistor is very sensitive to the amount of light present. We can take advantage of the characteristic to make a nightlight with the following function: when the ambient light is less (darker environment) the LED will automatically become brighter to compensate and when the ambient light is greater (brighter environment) the LED will automatically dim to compensate.

Component List

ESP8266 x1		USB cable
Breadboard x1		
Photoresistor x1	Resistor 220Ω x1 10KΩ x1	LED x1 Jumper wire M/M x7


Component knowledge

Photoresistor

A photoresistor is simply a light sensitive resistor. It is an active component that decreases resistance with respect to receiving luminosity (light) on the component's light sensitive surface. A photoresistor's resistance value will change in proportion to the ambient light detected. With this characteristic, we can use a photoresistor to detect light intensity. The photoresistor and its electronic symbol are as follows.



The circuit below is used to detect the change of a photoresistor's resistance value:

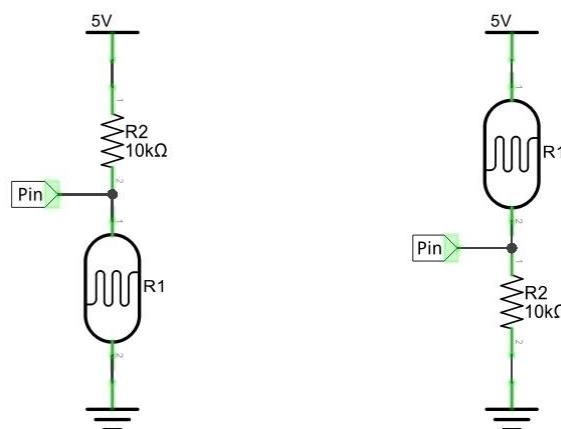


In the above circuit, when a photoresistor's resistance value changes due to a change in light intensity, the voltage between the photoresistor and resistor R1 will also change. Therefore, the intensity of the light can be obtained by measuring this voltage.


Circuit

The circuit of this project is similar to project Soft Light. The only difference is that the input signal is changed from a potentiometer to a combination of a photoresistor and a resistor.

Schematic diagram

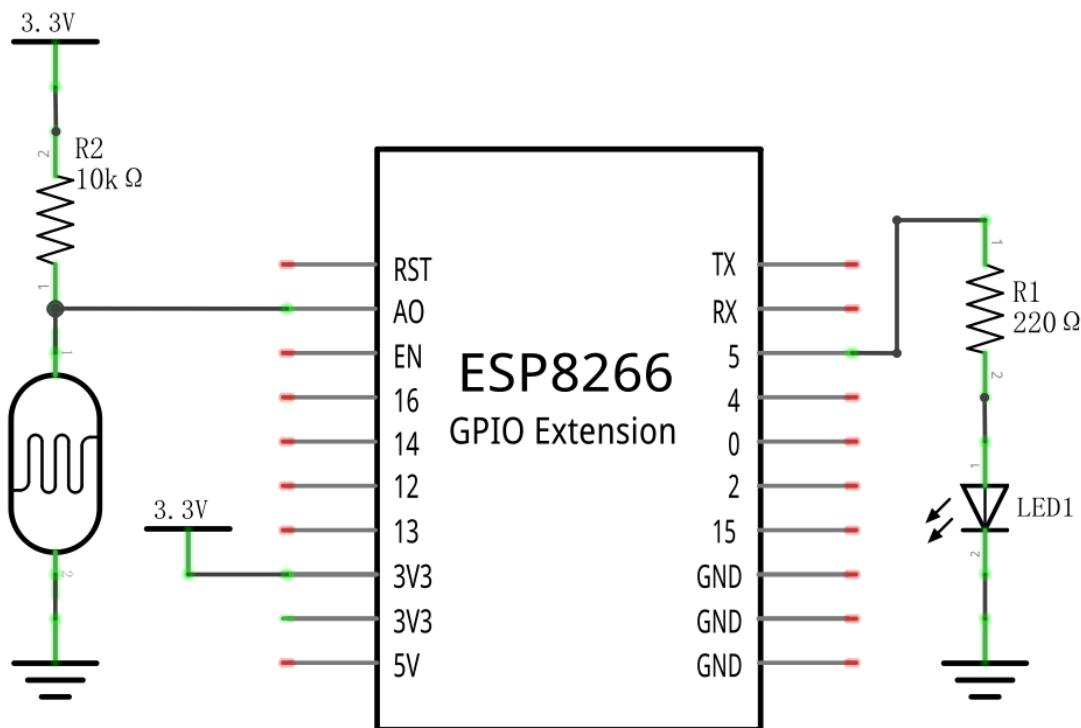

Hardware connection. If you need any support, please free to contact us via: support@freenove.com

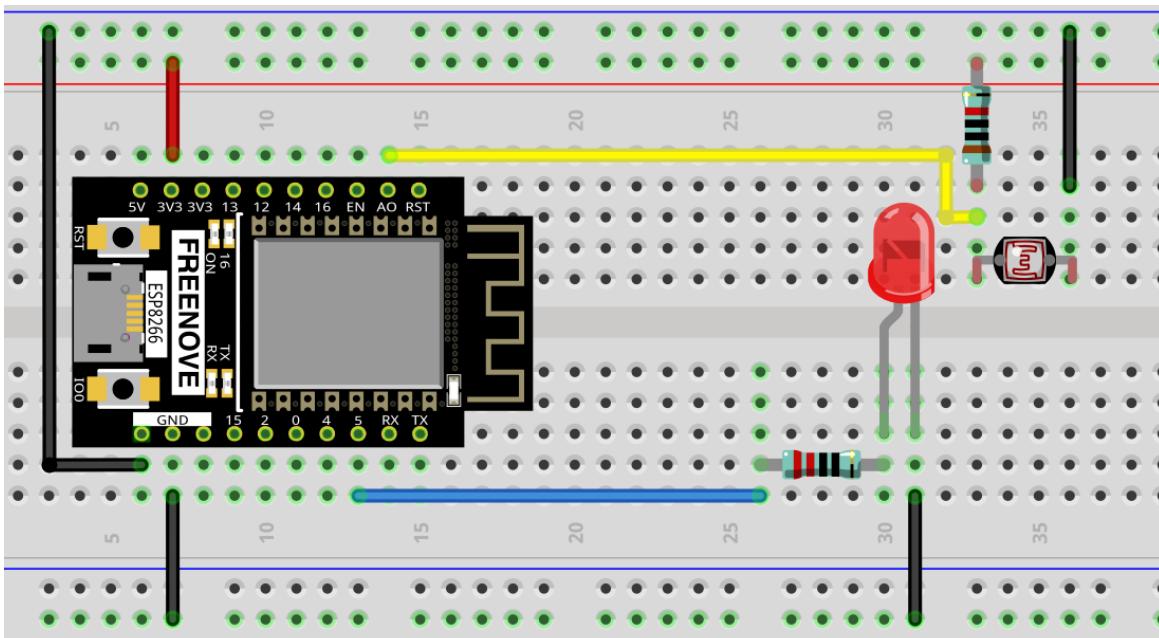

Sketch

The circuit used is similar to the project Soft Light. The only difference is that the input signal of the A0 pin of ADC changes from a potentiometer to a combination of a photoresistor and a resistor.

Sketch_11.1_Nightlamp

The screenshot shows the Arduino IDE interface. The top menu bar includes File, Edit, Sketch, Tools, and Help. Below the menu is a toolbar with icons for upload, refresh, and other functions. The main window displays the code for 'Sketch_11.1_NightLamp' with the following content:

```
Sketch_11.1_NightLamp | Arduino 1.8.19
File Edit Sketch Tools Help
Sketch_11.1_NightLamp
1 // *****
2   Filename      : NightLamp
3   Description   : Controlling the brightness of LED by photoresistor.
4   Author        : www.freenove.com
5   Modification  : 2022/05/11
6 *****/
7 #define PIN_ANALOG_IN    A0
8 #define PIN_LED          5
9 #define LIGHT_MIN        301
10 #define LIGHT_MAX        924
11 void setup() {
12     pinMode(PIN_LED, OUTPUT);
13 }
14
15 void loop() {
16     int adcVal = analogRead(PIN_ANALOG_IN); //read adc
17     int pwmVal = map(constrain(adcVal, LIGHT_MIN, LIGHT_MAX), LIGHT_MIN, LIGHT_MAX, 0,
18     analogWrite(PIN_LED, pwmVal);      // set the pulse width.
19     delay(10);
20 }
```

Below the code editor, a status bar indicates "Done uploading." and "Leaving... Hard resetting via RTS pin...". At the bottom, a message box shows memory details: "blit, 32KB cache + 32KB IRAM (balanced). Use pgm_read macros for IRAM/PROGMEM, 4MB (FS:2MB OTA:~1019KB), 2, v2 Lower Memory, Disabled, None, Only Sketch, 115200 on COM4".

Download the code to ESP8266, if you cover the photoresistor or increase the light shining on it, the brightness of the LED changes accordingly.

If you have any concerns, please contact us via: support@freenove.com

Any concerns? [✉ support@freenove.com](mailto:support@freenove.com)



The following is the program code:

```
1 #define PIN_ANALOG_IN A0
2 #define PIN_LED 5
3 #define LIGHT_MIN 301
4 #define LIGHT_MAX 924
5 void setup() {
6     pinMode(PIN_LED, OUTPUT);
7 }
8
9 void loop() {
10    int adcVal = analogRead(PIN_ANALOG_IN); //read adc
11    int pwmVal = map(constrain(adcVal, LIGHT_MIN, LIGHT_MAX), LIGHT_MIN, LIGHT_MAX, 0, 1023);
12 // adcVal re-map to pwmVal
13    analogWrite(PIN_LED, pwmVal); // set the pulse width.
14    delay(10);
15 }
```

Reference

```
constrain(amt, low, high)
#define constrain(amt, low, high) ((amt)<(low)? (low) : ((amt)>(high)? (high) : (amt)))
```

Constrain the value amt between low and high.




Chapter 12 Thermistor

In this chapter, we will learn about thermistors which are another kind of resistor

Project 12.1 Thermometer

A thermistor is a type of resistor whose resistance value is dependent on temperature and changes in temperature. Therefore, we can take advantage of this characteristic to make a thermometer.


Component List

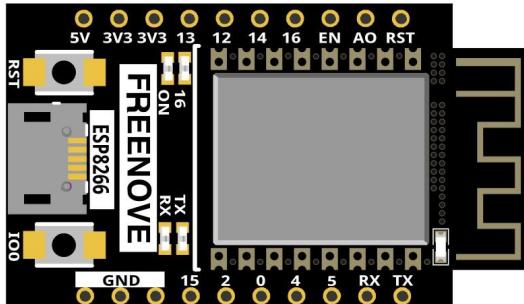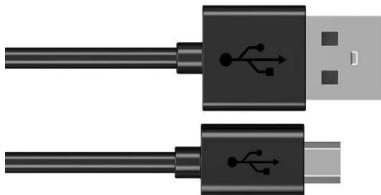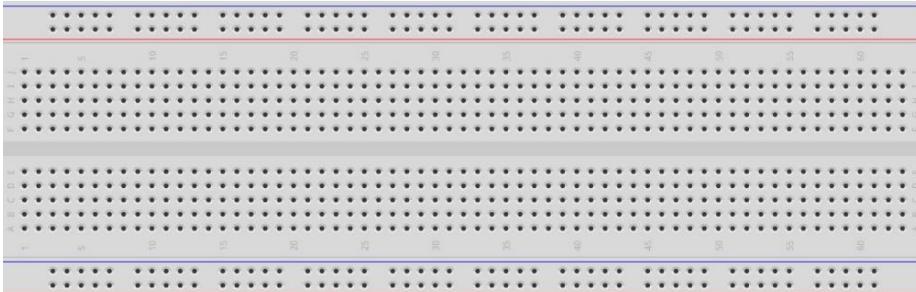ESP8266 x1	USB cable		
			
Breadboard x1			
	Thermistor x1	Resistor 10kΩ x1	Jumper wire M/M x4

Component knowledge

Thermistor

A thermistor is a temperature sensitive resistor. When it senses a change in temperature, the resistance of the thermistor will change. We can take advantage of this characteristic by using a thermistor to detect temperature intensity. A thermistor and its electronic symbol are shown below.

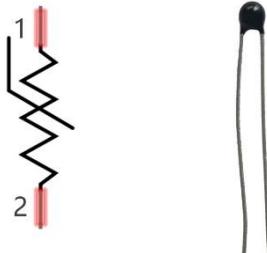

The relationship between resistance value and temperature of a thermistor is:

$$R_t = R * \text{EXP} \left[B * \left(\frac{1}{T_2} - \frac{1}{T_1} \right) \right]$$

Where:

Rt is the thermistor resistance under T2 temperature;

R is the nominal resistance of thermistor under T1 temperature;


EXP[n] is nth power of E;

B is for thermal index;

T1, T2 is Kelvin temperature (absolute temperature). Kelvin temperature=273.15 + Celsius temperature.

For the parameters of the thermistor, we use: B=3950, R=10k, T1=25.

The circuit connection method of the thermistor is similar to photoresistor, as the following:

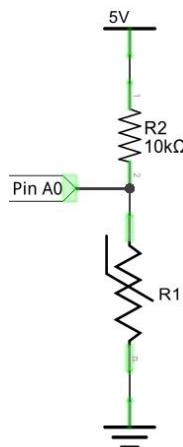

We can use the value measured by the ADC converter to obtain the resistance value of thermistor, and then we can use the formula to obtain the temperature value.


Therefore, the temperature formula can be derived as:

$$T_2 = 1 / \left(\frac{1}{T_1} + \ln \left(\frac{R_t}{R} \right) / B \right)$$


Circuit

The circuit of this project is similar to the one in the last chapter. The only difference is that the photoresistor is replaced by the thermistor.

Schematic diagram

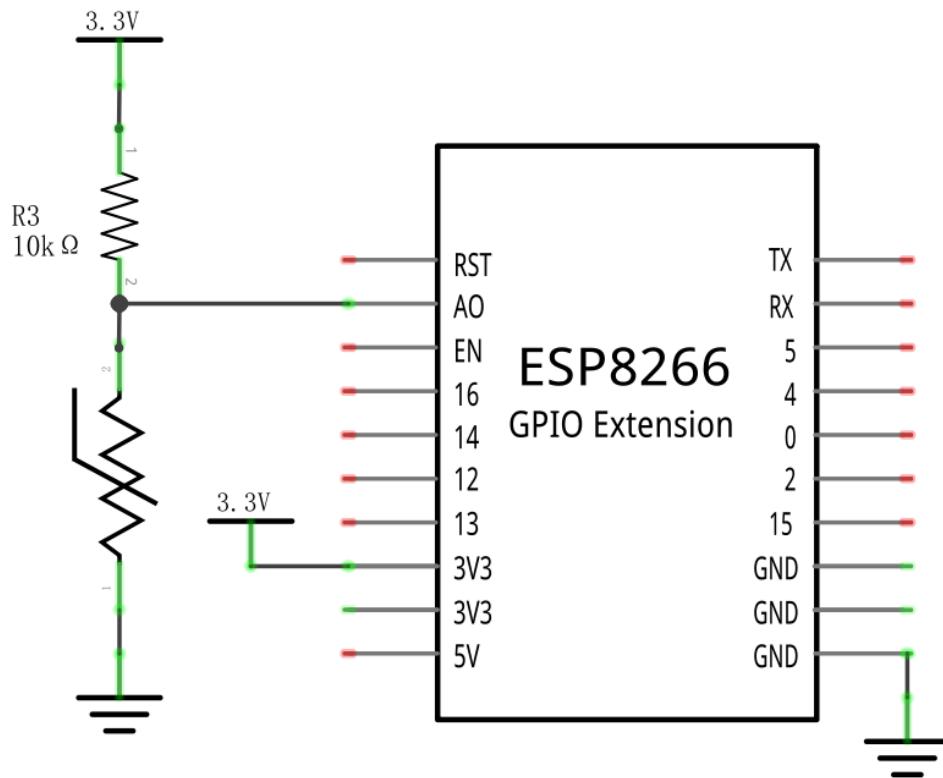

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

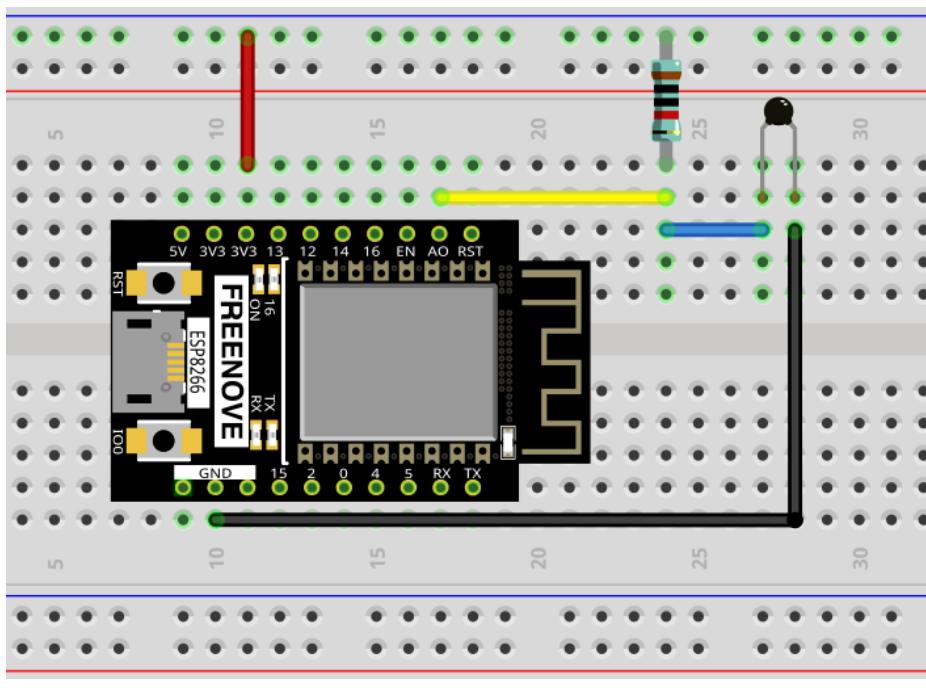

Any concerns? support@freenove.com

Sketch

Sketch_12.1_Thermometer

```

Sketch_12.1_Thermometer | Arduino 1.8.19
File Edit Sketch Tools Help
Sketch_12.1_Thermometer
1 // ****
2   Filename      : Thermomter
3   Description   : Making a thermometer by thermistor.
4   Author        : www.freenove.com
5   Modification: 2022/05/11
6 ****
7 #define PIN_ANALOG_IN    A0
8 void setup() {
9   Serial.begin(115200);
10 }
11
12 void loop() {
13   int adcValue = analogRead(PIN_ANALOG_IN);           //read ADC pin
14   double voltage = (float)adcValue / 1023.0 * 3.3;     // calculate voltage
15   double Rt = 10 * voltage / (3.3 - voltage);        //calculate resistance
16   double tempK = 1 / (1 / (273.15 + 25) + log(Rt / 10) / 3950.0); //calculate temperature
17   double tempC = tempK - 273.15;                      //calculate temperature
18   Serial.printf("ADC value : %d,\tVoltage : %.2fV, \tTemperature : %.2fC\n", adcValue, voltage, tempC);
19   delay(1000);
20 }

```

Done uploading.
wrote 271104 bytes (199059 compressed) at 0x00000000 in 17.5 seconds (effective 125.7 kbit/s)
Hash of data verified.

Leaving...
Hard resetting via RTS pin...

Download the code to ESP8266, the terminal window will display the current ADC value, voltage value and temperature value. Try to “pinch” the thermistor (without touching the leads) with your index finger and thumb for a brief time, you should see that the temperature value increases.

If you have any concerns, please contact us via: support@freenove.com

```
COM3
ADC value : 497, Voltage : 1.60V, Temperature : 26.28C
ADC value : 499, Voltage : 1.61V, Temperature : 26.10C
ADC value : 502, Voltage : 1.62V, Temperature : 25.84C
ADC value : 506, Voltage : 1.63V, Temperature : 25.48C
ADC value : 507, Voltage : 1.64V, Temperature : 25.40C
ADC value : 508, Voltage : 1.64V, Temperature : 25.31C
ADC value : 508, Voltage : 1.64V, Temperature : 25.31C
ADC value : 509, Voltage : 1.64V, Temperature : 25.22C
ADC value : 509, Voltage : 1.64V, Temperature : 25.22C
ADC value : 510, Voltage : 1.65V, Temperature : 25.13C
ADC value : 511, Voltage : 1.65V, Temperature : 25.04C
ADC value : 511, Voltage : 1.65V, Temperature : 25.04C
ADC value : 512, Voltage : 1.65V, Temperature : 24.96C
ADC value : 513, Voltage : 1.65V, Temperature : 24.87C
ADC value : 514, Voltage : 1.66V, Temperature : 24.78C
ADC value : 514, Voltage : 1.66V, Temperature : 24.78C
ADC value : 514, Voltage : 1.66V, Temperature : 24.78C
ADC value : 516, Voltage : 1.66V, Temperature : 24.60C
ADC value : 516, Voltage : 1.66V, Temperature : 24.60C
ADC value : 517, Voltage : 1.67V, Temperature : 24.52C
ADC value : 517, Voltage : 1.67V, Temperature : 24.52C

 Autoscroll  Show timestamp  Newline  115200 baud  Clear output
```

The following is the code:

```
1 #define PIN_ANALOG_IN A0
2 void setup() {
3     Serial.begin(115200);
4 }
5
6 void loop() {
7     int adcValue = analogRead(PIN_ANALOG_IN);           //read ADC pin
8     double voltage = (float)adcValue / 1023.0 * 3.3;    // calculate voltage
9     double Rt = 10 * voltage / (3.3 - voltage);        //calculate resistance value of thermistor
10    double tempK = 1 / (1/(273.15 + 25) + log(Rt / 10)/3950.0); //calculate temperature (Kelvin)
11    double tempC = tempK - 273.15;                     //calculate temperature (Celsius)
12    Serial.printf("ADC value : %d, \tVoltage : %.2fV, \tTemperature : %.2fC\n", adcValue,
13    voltage, tempC);
14 }
```

In the code, the ADC value of ADC module A0 port is read, and then calculates the voltage and the resistance of thermistor according to Ohms Law. Finally, it calculates the temperature sensed by the thermistor, according to the formula.



Chapter 13 74HC595 & LED Bar Graph

We have used LED bar graph to make a flowing water light, in which 10 GPIO ports of ESP8266 is occupied. More GPIO ports mean that more peripherals can be connected to ESP8266, so GPIO resource is very precious. Can we make flowing water light with less GPIO? In this chapter, we will learn a component, 74HC595, which can achieve the target.

Project 13.1 Flowing Water Light

Now let's learn how to use the 74HC595 IC chip to make a flowing water light using less GPIO.


Component List

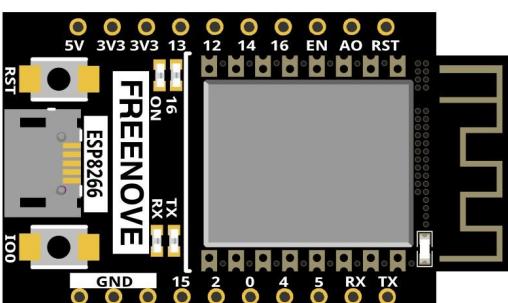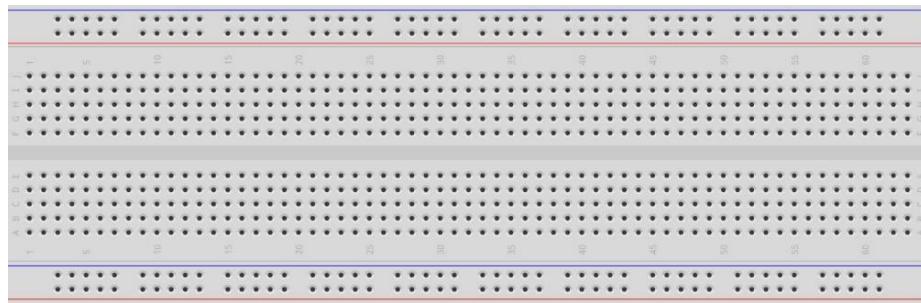ESP8266 x1	USB cable		
			
			
74HC595 x1	LED Bar Graph x1	Resistor 220Ω x8	Jumper wire M/M x17

Related knowledge

74HC595

A 74HC595 chip is used to convert serial data into parallel data. A 74HC595 chip can convert the serial data of one byte into 8 bits, and send its corresponding level to each of the 8 ports correspondingly. With this characteristic, the 74HC595 chip can be used to expand the IO ports of a ESP8266. At least 3 ports are required to control the 8 ports of the 74HC595 chip.

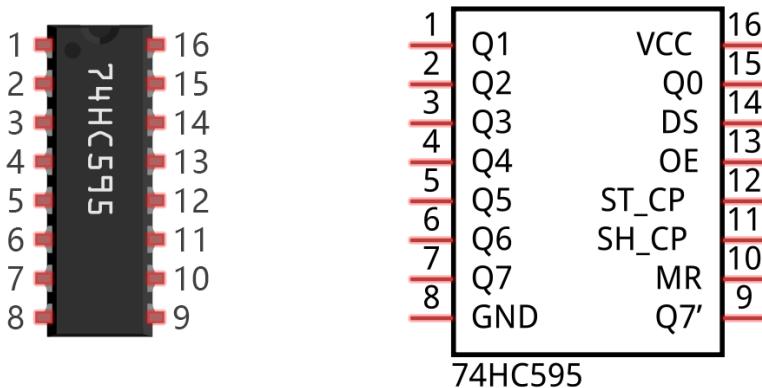


The ports of the 74HC595 chip are described as follows:

Pin name	GPIO number	Description
Q0-Q7	15, 1-7	Parallel data output
VCC	16	The positive electrode of power supply, the voltage is 2~6V
GND	8	The negative electrode of power supply
DS	14	Serial data Input
OE	13	Enable output, When this pin is in high level, Q0-Q7 is in high resistance state When this pin is in low level, Q0-Q7 is in output mode
ST_CP	12	Parallel Update Output: when its electrical level is rising, it will update the parallel data output.
SH_CP	11	Serial shift clock: when its electrical level is rising, serial data input register will do a shift.
MR	10	Remove shift register: When this pin is in low level, the content in shift register will be cleared.
Q7'	9	Serial data output: it can be connected to more 74HC595 in series.


For more detail, please refer to the datasheet on the 74HC595 chip.

Circuit

Schematic diagram

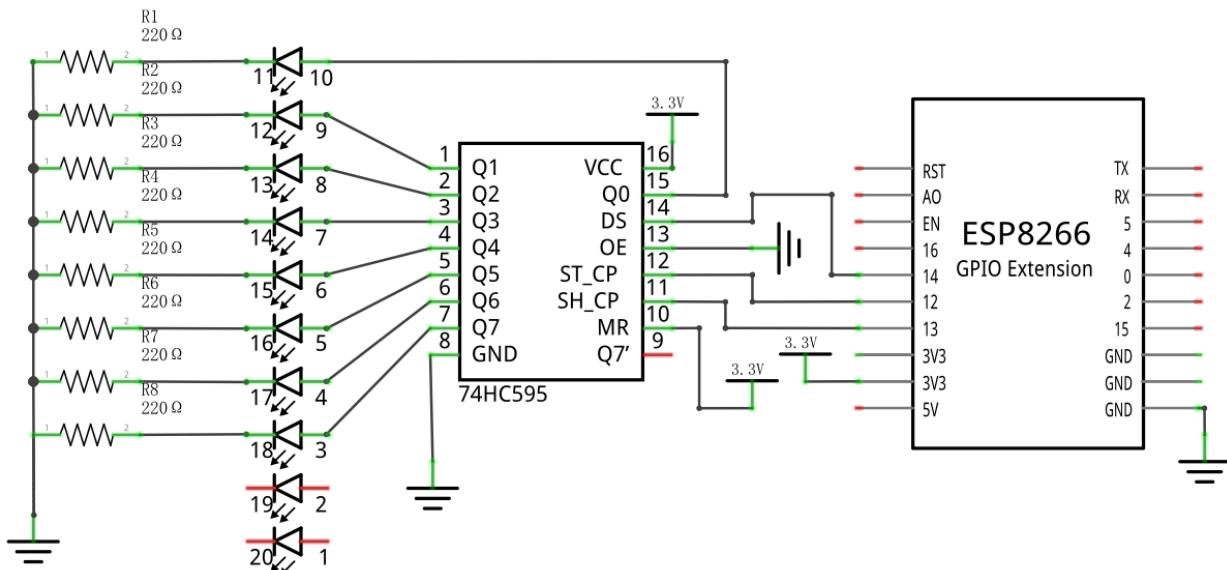

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

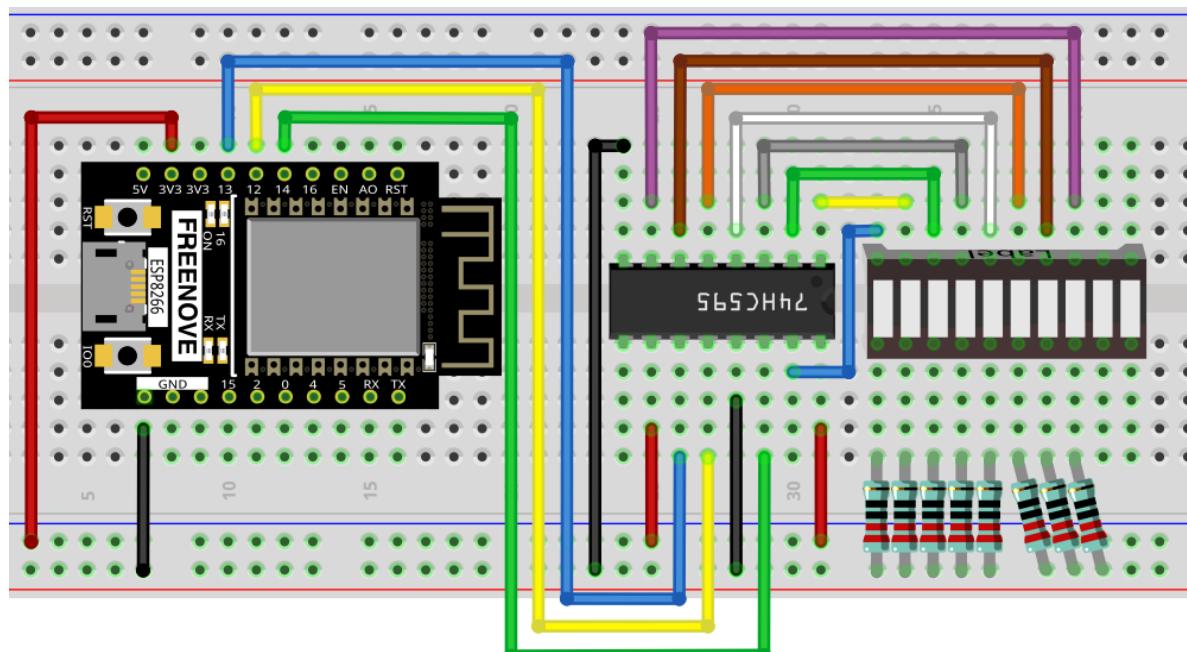

Any concerns? support@freenove.com



Sketch

In this project, we will make a flowing water light with a 74HC595 chip to learn about its functions.

Sketch_13.1_FlowingLight02

```

Sketch_13.1_FlowingLight02 | Arduino 1.8.19
File Edit Sketch Tools Help
Sketch_13.1_FlowingLight02
15 pinMode(clockPin, OUTPUT);
16 pinMode(dataPin, OUTPUT);
17 }
18
19 void loop() {
20 // Define a one-byte variable to use the 8 bits to represent the state of 8 LEDs of LED bar
21 // This variable is assigned to 0x01, that is binary 00000001, which indicates only one LED
22 byte x = 0x01; // 0b 0000 0001
23 for (int j = 0; j < 8; j++) { // Let led light up from right to left
24   writeTo595(LSBFIRST, x);
25   x <= 1; // make the variable move one bit to left once, then the bright LED move one step
26   delay(50);
27 }
28 delay(100);
29 x = 0x80; // 0b 1000 0000
30 for (int j = 0; j < 8; j++) { // Let led light up from left to right
31   writeTo595(LSBFIRST, x);
32   x >>= 1;
33   delay(50);
}

```

Done uploading.
Leaving...
Hard resetting via RTS pin...

n82 compatible), 32KB cache + 32KB IRAM (balanced). Use pgm_read macros for IRAM/PROGMEM, 4MB (FS:2MB OTA:~1019KB), 2, v2 Lower Memory, Disabled, None, Only Sketch, 115200 on COM4

Download the code to ESP8266. You will see that LED bar graph starts with the flowing water pattern flashing from left to right and then back from right to left.

If you have any concerns, please contact us via: support@freenove.com

The following is the program code:

```

1 int latchPin = 12;           // Pin connected to ST_CP of 74HC595(Pin12)
2 int clockPin = 13;          // Pin connected to SH_CP of 74HC595(Pin11)
3 int dataPin = 14;           // Pin connected to DS of 74HC595(Pin14)
4
5 void setup() {
6   // set pins to output
7   pinMode(latchPin, OUTPUT);
8   pinMode(clockPin, OUTPUT);
9   pinMode(dataPin, OUTPUT);
10 }
11

```

Any concerns? ✉ support@freenove.com

```

12 void loop() {
13     // Define a one-byte variable to use the 8 bits to represent the state of 8 LEDs of LED bar
14     // graph.
15     // This variable is assigned to 0x01, that is binary 00000001, which indicates only one LED
16     // light on.
17     byte x = 0x01;      // 0b 0000 0001
18     for (int j = 0; j < 8; j++) { // Let led light up from right to left
19         writeTo595(LSBFIRST, x);
20         x <= 1; // make the variable move one bit to left once, then the bright LED move one step
21         to the left once.
22         delay(50);
23     }
24     delay(100);
25     x = 0x80;          //0b 1000 0000
26     for (int j = 0; j < 8; j++) { // Let led light up from left to right
27         writeTo595(LSBFIRST, x);
28         x >= 1;
29         delay(50);
30     }
31     delay(100);
32 }
33 void writeTo595(int order, byte _data) {
34     // Output low level to latchPin
35     digitalWrite(latchPin, LOW);
36     // Send serial data to 74HC595
37     shiftOut(dataPin, clockPin, order, _data);
38     // Output high level to latchPin, and 74HC595 will update the data to the parallel output
39     // port.
40     digitalWrite(latchPin, HIGH);
41 }
```

In the code, we configure three pins to control the 74HC595 chip and define a one-byte variable to control the state of the 8 LEDs (in the LED bar graph Module) through the 8 bits of the variable. The LEDs light ON when the corresponding bit is 1. If the variable is assigned to 0x01, that is 00000001 in binary, there will be only one LED ON.

17	byte x = 0x01; // 0b 0000 0001
----	--------------------------------

In the loop(), use "for" loop to send x to 74HC595 output pin to control the LED. In "for" loop, x will shift one bit to the LEFT in one cycle, then when data of x is sent to 74HC595, the LED that is turned ON will move one bit to the LEFT once.

18	for (int j = 0; j < 8; j++) { // Let led light up from right to left
19	writeTo595(LSBFIRST, x);
20	x <= 1;
21	delay(50);

22 }

In second "for" loop, the situation is the same. The difference is that x is shift from 0x80 to the RIGHT in order.


The subfunction writeTo595() is used to write data to 74HC595 and immediately output on the port of 74HC595.

Reference


<< operator

"<<" is the left shift operator, which can make all bits of 1 byte shift by several bits to the left (high) direction and add 0 on the right (low). For example, shift binary 00000001 by 1 bit to left:

byte x = 1 << 1;




The result of x is 2 (binary 00000010).

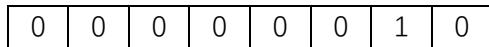


There is another similar operator " >> ". For example, shift binary 00000001 by 1 bit to right:

byte x = 1 >> 1;



The result of x is 0 (00000000).

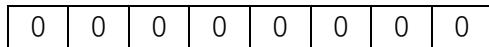

X <<= 1 is equivalent to x = x << 1 and x >>= 1 is equivalent to x = x >> 1

```
void shiftOut(uint8_t dataPin, uint8_t clockPin, uint8_t bitOrder, uint8_t val);
```

This is used to shift an 8-bit data value in with the data appearing on the dataPin and the clock being sent out on the clockPin. Order is as above. The data is sampled after the cPin goes high. (So clockPin high, sample data, clockPin low, repeat for 8 bits) The 8-bit value is returned by the function.

Parameters

dataPin: the pin on which to output each bit. Allowed data types: int.

clockPin: the pin to toggle once the dataPin has been set to the correct value. Allowed data types: int.

bitOrder: which order to shift out the bits; either MSBFIRST or LSBFIRST. (Most Significant Bit First, or, Least Significant Bit First).

value: the data to shift out. Allowed data types: byte.

For more details about shift function, please refer to:

<https://www.arduino.cc/reference/en/language/functions/advanced-io/shiftdown/>



Chapter 14 74HC595 & 7-Segment Display.

In this chapter, we will introduce the 7-Segment Display.

Project 14.1 1-Digit 7-Segment Display.

We will use 74HC595 to control 7-segment display and make it display hexadecimal character "0-F".


Component List

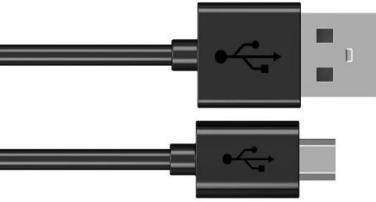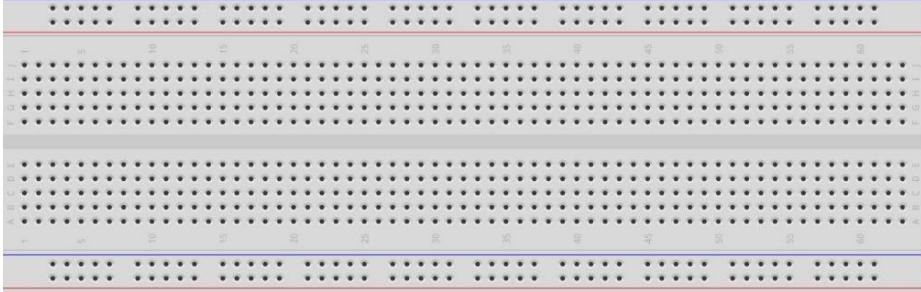ESP8266 x1	USB cable		
			
Breadboard x1			
74HC595 x1	7-segment display x1	Resistor 220Ω x8	Jumper wire M/M
			


Component knowledge

7-segment display

A 7-segment display is a digital electronic display device. There is a figure "8" and a decimal point represented, which consists of 8 LEDs. The LEDs have a common anode and individual cathodes. Its internal structure and pin designation diagram is shown below:

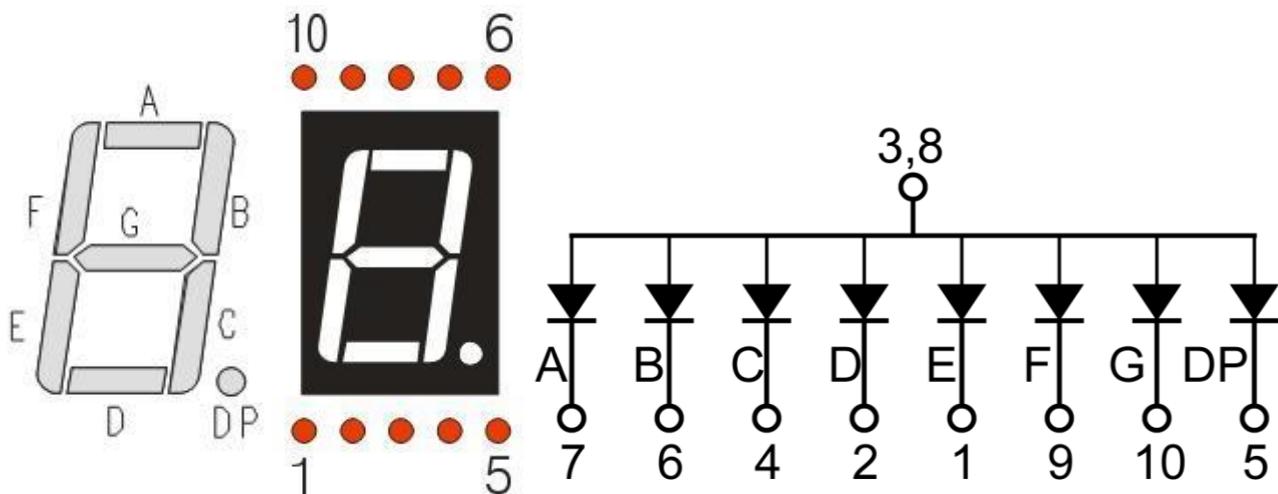

As we can see in the above circuit diagram, we can control the state of each LED separately. Also, by combining LEDs with different states of ON and OFF, we can display different characters (Numbers and Letters). For example, to display a "0": we need to turn ON LED segments A, B, C, D, E and F, and turn OFF LED segments G and DP.

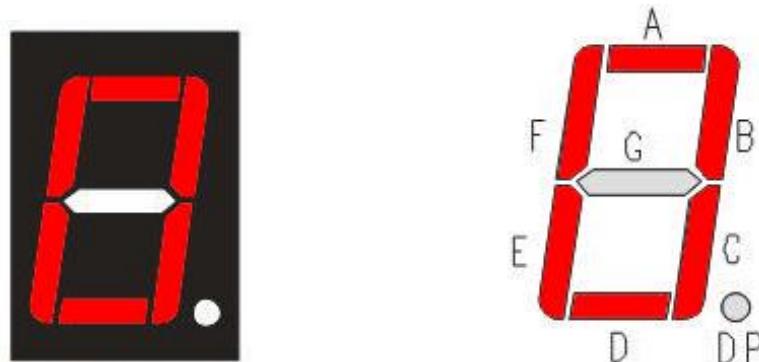

In this project, we will use a 7-Segment Display with a common anode. Therefore, when there is an input low level to a LED segment the LED will turn ON. Defining segment "A" as the lowest level and segment "DP" as the highest level, from high to low would look like this: "DP", "G", "F", "E", "D", "C", "B", "A". Character "0" corresponds to the code: $1100\ 0000_2 = 0xc0$.

For detailed code values, please refer to the following table (common anode).


CHAR	DP	G	F	E	D	C	B	A	Hex	ASCII
0	1	1	0	0	0	0	0	0	0xc0	1100 0000
1	1	1	1	1	1	0	0	1	0xf9	1111 1001
2	1	0	1	0	0	1	0	0	0xa4	1010 0100
3	1	0	1	1	0	0	0	0	0xb0	1011 0000
4	1	0	0	1	1	0	0	1	0x99	1001 1001
5	1	0	0	1	0	0	1	0	0x92	1001 0010
6	1	0	0	0	0	0	1	0	0x82	1000 0010
7	1	1	1	1	1	0	0	0	0xf8	1111 1000
8	1	0	0	0	0	0	0	0	0x80	1000 0000
9	1	0	0	1	0	0	0	0	0x90	1001 0000
A	1	0	0	0	1	0	0	0	0x88	1000 1000
B	1	0	0	0	0	0	1	1	0x83	1000 0011
C	1	1	0	0	0	1	1	0	0xc6	1100 0110
D	1	0	1	0	0	0	0	1	0xa1	1010 0001
E	1	0	0	0	0	1	1	0	0x86	1000 0110
F	1	0	0	0	1	1	1	0	0x8e	1000 1110

Circuit

Schematic diagram




Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

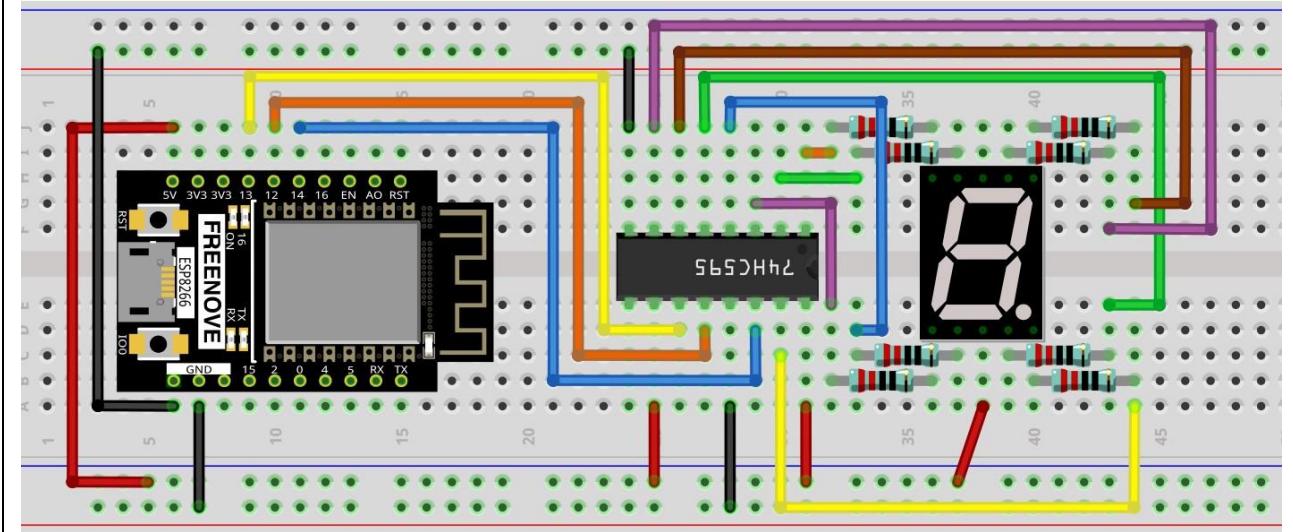

Sketch

In this section, the 74HC595 is used in the same way as in the previous section, but with different values transferred. We can learn how to master the digital display by sending the coded value of "0" - "F".


Sketch_14.1_1_Digit_7-Segment_Display

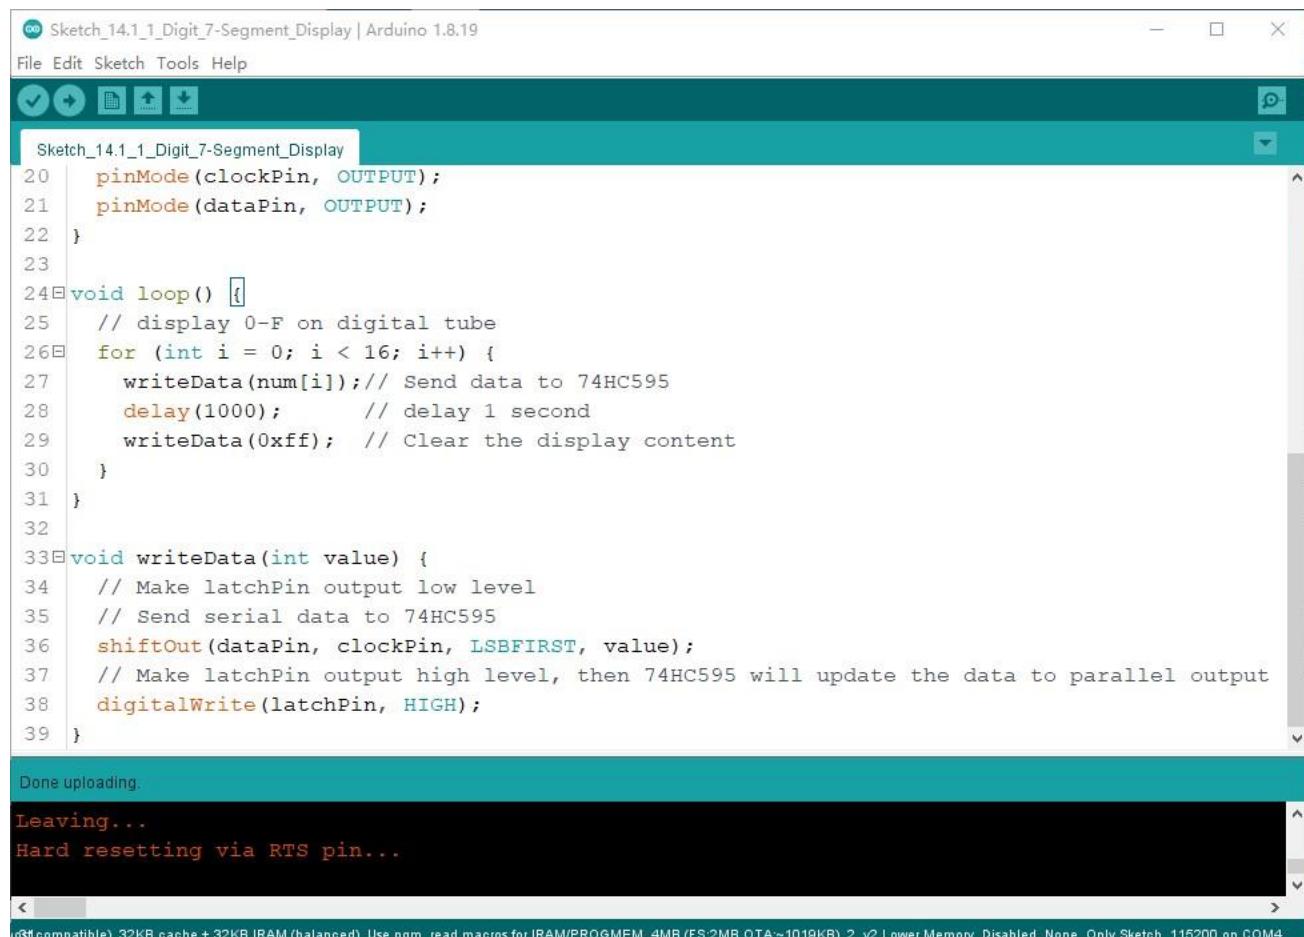

The screenshot shows the Arduino IDE interface with the following details:

- Title Bar:** Sketch_14.1_1_Digit_7-Segment_Display | Arduino 1.8.19
- Menu Bar:** File Edit Sketch Tools Help
- Toolbar:** Includes icons for Open, Save, Print, and Upload.
- Code Editor:** Displays the C++ code for the sketch. The code initializes pins, sets them as outputs, and then enters a loop where it repeatedly sends data to a 74HC595 chip to display values from 0 to F. It includes a delay of 1 second between each character and clears the display at the end of the loop.
- Serial Monitor:** Shows the status messages: "Done uploading.", "Leaving...", and "Hard resetting via RTS pin...".
- Status Bar:** Shows system information: "idf compatible), 32KB cache + 32KB IRAM (balanced), Use pgm_read macros for IRAM/PROGMEM, 4MB (FS:2MB OTA:~1019KB), 2, v2 Lower Memory, Disabled, None, Only Sketch, 115200 on COM4".

Verify and upload the code, and you'll see a 1-bit, 7-segment display displaying 0-f in a loop.

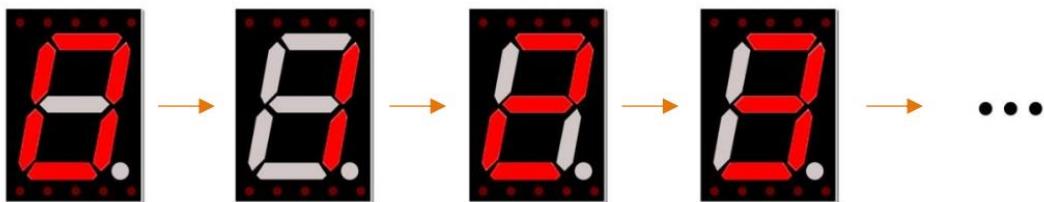

The following is the program code:

```

1 int dataPin = 14;           // Pin connected to DS of 74HC595 (Pin14)
2 int latchPin = 12;          // Pin connected to ST_CP of 74HC595 (Pin12)
3 int clockPin = 13;          // Pin connected to SH_CP of 74HC595 (Pin11)
4 // Define the encoding of characters 0-F for the common-anode 7-Segment Display
5 byte num[] = {
6     0xc0, 0xf9, 0xa4, 0xb0, 0x99, 0x92, 0x82, 0xf8,
7     0x80, 0x90, 0x88, 0x83, 0xc6, 0xa1, 0x86, 0x8e
8 };
9
10 void setup() {
11     // set pins to output
12     pinMode(latchPin, OUTPUT);
13     pinMode(clockPin, OUTPUT);
14     pinMode(dataPin, OUTPUT);
15 }
16
17 void loop() {
18     // display 0-F on digital tube
19     for (int i = 0; i < 16; i++) {
20         writeData(num[i]); // Send data to 74HC595
21         delay(1000);      // delay 1 second
22         writeData(0xff); // Clear the display content
23     }
24 }
25
26 void writeData(int value) {
27     // Make latchPin output low level
28     digitalWrite(latchPin, LOW);
29     // Send serial data to 74HC595
30     shiftOut(dataPin, clockPin, LSBFIRST, value);
31     // Make latchPin output high level
32     digitalWrite(latchPin, HIGH);
33 }
```

First, put encoding of “0”- “F” into the array.

```

4 // Define the encoding of characters 0-F for the common-anode 7-Segment Display
5 byte num[] = {
6     0xc0, 0xf9, 0xa4, 0xb0, 0x99, 0x92, 0x82, 0xf8,
7     0x80, 0x90, 0x88, 0x83, 0xc6, 0xa1, 0x86, 0x8e
8 };

```

Then, in the loop, we transfer the member of the “num” to 74HC595 by calling the writeData function, so that the digital tube displays what we want. After each display, “0xff” is used to eliminate the previous effect and prepare for the next display.

```

17 void loop() {
18     // display 0-F on digital tube
19     for (int i = 0; i < 16; i++) {
20         writeData(num[i]); // Send data to 74HC595
21         delay(1000);      // delay 1 second
22         writeData(0xff); // Clear the display content
23     }
24 }

```

In the shiftOut() function, whether to use LSBFIRST or MSBFIRST as the parameter depends on the physical situation.

```

26 void writeData(int value) {
27     // Make latchPin output low level
28     digitalWrite(latchPin, LOW);
29     // Send serial data to 74HC595
30     shiftOut(dataPin, clockPin, LSBFIRST, value);
31     // Make latchPin output high level, then 74HC595 will update data to parallel output
32     digitalWrite(latchPin, HIGH);
33 }

```

If you want to display the decimal point, make the highest bit of each array become 0, which can be implemented easily by num[i]&0x7f.




```
30 shiftOut(dataPin, clockPin, LSBFIRST, value & 0x7f);
```



Project 14.2 4-Digit 7-Segment Display

Now, let's try to control more digit 7-segment display

Component List

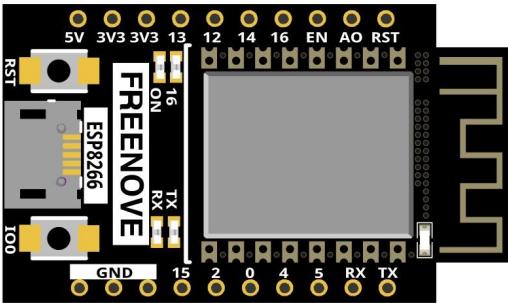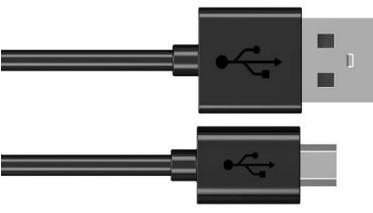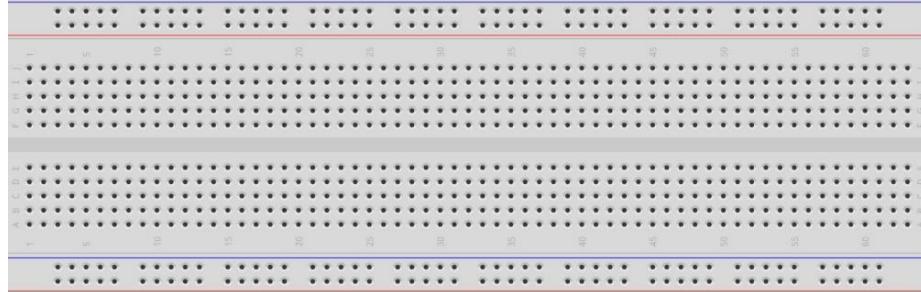ESP8266 x1	USB cable		
			
Breadboard x1			
74HC595 x1	7-segment display x1	Resistor 220Ω x8	Jumper wire M/M


Component knowledge

4 Digit 7-Segment Display

A 4 Digit 7-segment display integrates four 7-segment displays into one module, therefore it can display more characters. All of the LEDs contained have a common anode and individual cathodes. Its internal structure and pin designation diagram is shown below:



The internal electronic circuit is shown below, and all 8 LED cathode pins of each 7-segment display are connected together.

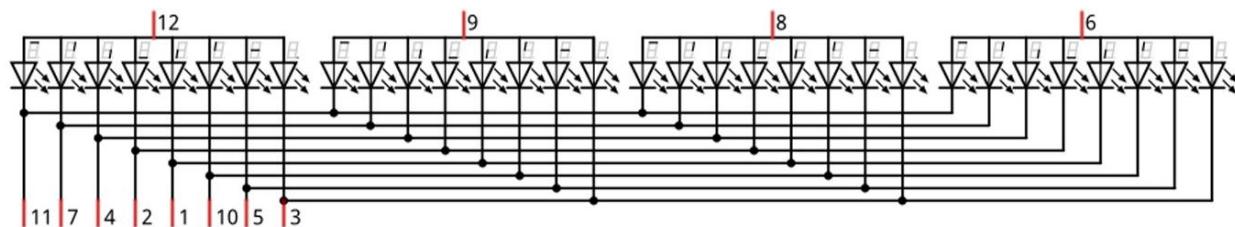


Display method of 4 digit 7-segment display is similar to 1 digit 7-segment display. The difference between them is that the 4-digit displays each Digit is visible in turn, one by one and not together. We need to first send high level to the common end of the first digit display, and send low level to the remaining three common ends, and then send content to 8 LED cathode pins of the first Digit Display. At this time, the first 7-segment display will show visible content and the remaining three will be OFF.

Similarly, the second, third and fourth 7-segment displays will show visible content in turn by scanning the display. Although the four number characters are displayed in turn separately, this process is so fast that it is imperceptible to the naked eye. This is due to the principle of optical afterglow effect and the vision persistence effect in human sight. This is how we can see all 4 number characters at the same time. However, if each number character is displayed for a longer period, you will be able to see that the number characters are displayed separately.




Circuit

Schematic diagram

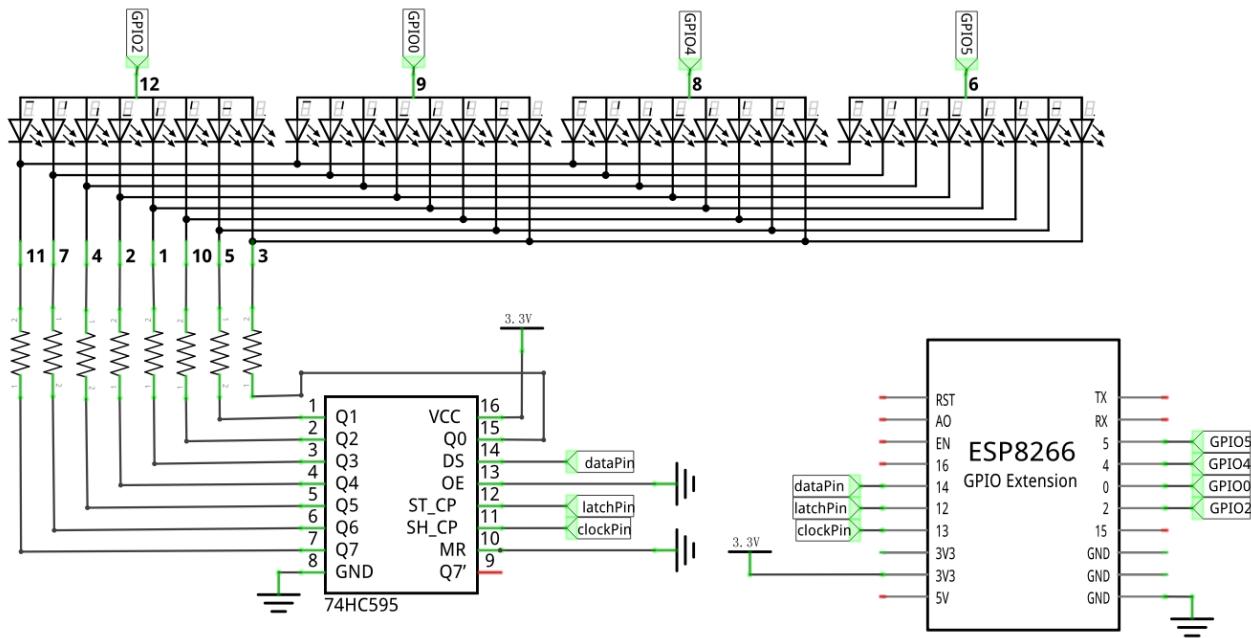

Hardware connection:

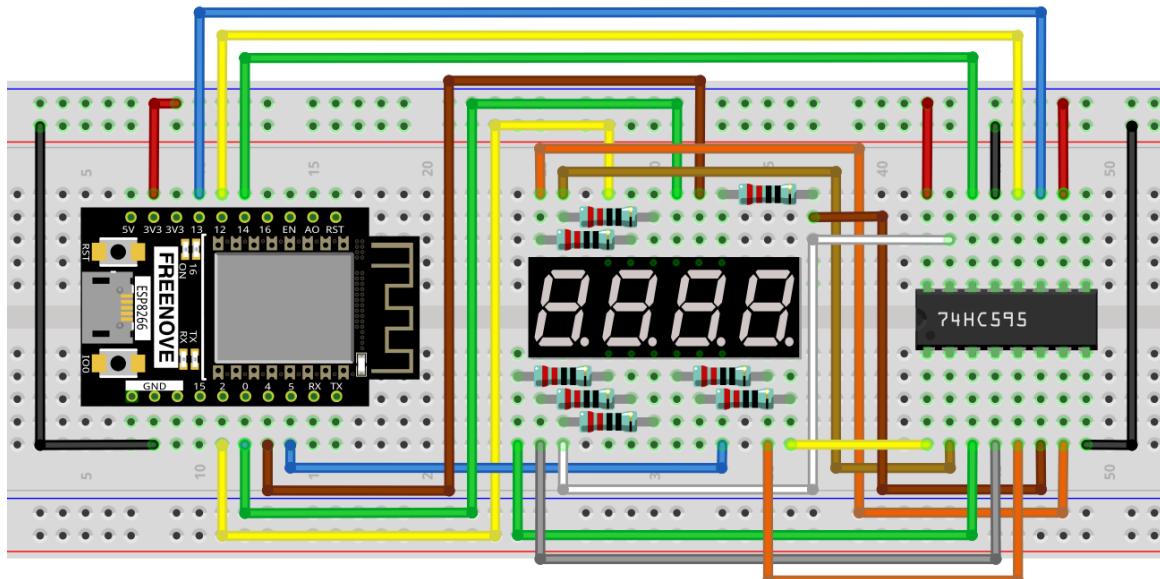

Sketch

In this code, we use the 74HC595 IC chip to control the 4-digit 7-segment display, and use the dynamic scanning method to show the changing number characters.

Sketch_14.2_4_Digit_7-Segment_Display

```
Sketch_14.2_4_Digit_7-Segment_Display | Arduino 1.8.19
File Edit Sketch Tools Help
Sketch_14.2_4_Digit_7-Segment_Display
22     pinMode(comPin[i], OUTPUT);
23 }
24 }
25
26 void loop() {
27     for (int i = 0; i < 4; i++) {
28         // Select a single 7-segment display
29         electDigitalDisplay(i);
30         // Send data to 74HC595
31         writeData(num[i]);
32         delay(5);
33         // Clear the display content
34         writeData(0xff);
35     }
36 }
37
38 void electDigitalDisplay(byte com) {
39     // Close all single 7-segment display
40     for (int i = 0; i < 4; i++) {
41         digitalWrite(comPin[i], LOW);
}
Done uploading.
Leaving...
Hard resetting via RTS pin...

```

Atmel compatible), 32KB cache + 32KB IRAM (balanced), Use pgm_read macros for IRAM/PROGMEM, 4MB (FS:2MB OTA:~1019KB), 2, v2 Lower Memory, Disabled, None, Only Sketch, 115200 on COM4

Compile and upload code to ESP8266, then the digital tube displays as shown.



The following is the program code:

```

1 int latchPin = 12;           // Pin connected to ST_CP of 74HC595 (Pin12)
2 int clockPin = 13;          // Pin connected to SH_CP of 74HC595 (Pin11)
3 int dataPin = 14;           // Pin connected to DS of 74HC595 (Pin14)
4 int comPin[] = {2,0,4,5};// Common pin (anode) of 4 digit 7-segment display
5
6 // Define the encoding of characters 0-F of the common-anode 7-Segment Display
7 byte num[] = {0xc0, 0xf9, 0xa4, 0xb0, 0x99, 0x92, 0x82, 0xf8,
8                 0x80, 0x90, 0x88, 0x83, 0xc6, 0xa1, 0x86, 0x8e};
9
10 void setup() {
11     // set pins to output
12     pinMode(latchPin, OUTPUT);
13     pinMode(clockPin, OUTPUT);
14     pinMode(dataPin, OUTPUT);
15     for (int i = 0; i < 4; i++) {
16         pinMode(comPin[i], OUTPUT);
17     }
18 }
19
20 void loop() {
21     for (int i = 0; i < 4; i++) {
22         // Select a single 7-segment display
23         electDigitalDisplay (i);
24         // Send data to 74HC595
25         writeData(num[i]);
26         delay(5);
27         // Clear the display content
28         writeData(0xff);
29     }
30 }
31
32 void electDigitalDisplay(byte com) {
33     // Close all single 7-segment display
34     for (int i = 0; i < 4; i++) {
35         digitalWrite(comPin[i], LOW);
36     }

```

```

37 // Open the selected single 7-segment display
38 digitalWrite(comPin[com], HIGH);
39 }
40
41 void writeData(int value) {
42     // Make latchPin output low level
43     digitalWrite(latchPin, LOW);
44     // Send serial data to 74HC595
45     shiftOut(dataPin, clockPin, LSBFIRST, value); // Make latchPin output high level
46     // Make latchPin output high level, then 74HC595 will update data to parallel output
47     digitalWrite(latchPin, HIGH);
48 }
```

First, define the pin of 74HC595 and 7-segment display common end, character encoding.

```

1 int latchPin = 12;           // Pin connected to ST_CP of 74HC595 (Pin12)
2 int clockPin = 13;          // Pin connected to SH_CP of 74HC595 (Pin13)
3 int dataPin = 14;           // Pin connected to DS of 74HC595 (Pin14)
4 int comPin[] = {2,0,4,5}; // Common pin (anode) of 4 digit 7-segment display
5
6 // Define the encoding of characters 0-F of the common-anode 7-Segment Display
7 byte num[] = {0xc0, 0xf9, 0xa4, 0xb0, 0x99, 0x92, 0x82, 0xf8,
8                 0x80, 0x90, 0x88, 0x83, 0xc6, 0xa1, 0x86, 0xe8};
```

Second, initialize all the pins to output mode.

```

10 void setup() {
11     // set pins to output
12     pinMode(latchPin, OUTPUT);
13     pinMode(clockPin, OUTPUT);
14     pinMode(dataPin, OUTPUT);
15     for (int i = 0; i < 4; i++) {
16         pinMode(comPin[i], OUTPUT);
17     }
18 }
```

Then, since there are four digital tubes, we need to write a subfunction to control it to turn ON any digital tube. In order not to affect a new display, each time we want to turn ON a digital tube, we need to set the other digital tube OFF.

```

32 void electDigitalDisplay(byte com) {
33     // Close all single 7-segment display
34     for (int i = 0; i < 4; i++) {
35         digitalWrite(comPin[i], LOW);
36     }
37     // Open the selected single 7-segment display
38     digitalWrite(comPin[com], HIGH);
39 }
```



The usage of the writeData function is the same as in the previous two sections, so it won't be covered again here.

```
41 void writeData(int value) {  
42     // Make latchPin output low level  
43     digitalWrite(latchPin, LOW);  
44     // Send serial data to 74HC595  
45     shiftOut(dataPin, clockPin, LSBFIRST, value);  
46     // Make latchPin output high level, then 74HC595 will update data to parallel output  
47     digitalWrite(latchPin, HIGH);  
48 }
```

In the loop function, because there are four digital tubes, a “for loop” is used to display the values of each one in turn. For example, when $i = 0$, turn ON the first digital tube to display the first value, then turn ON the second digital tube to display the second value, until all four digital tubes display their own values. Because the displaying time from the first number to the fourth number is so short, it may display many times in one second, but our eyes can't keep up with the speed of the digital tube, so we look as if the digital tube is displaying different Numbers at the same time.

```
20 void loop() {  
21     for (int i = 0; i < 4; i++) {  
22         // Select a single 7-segment display  
23         selectDigitalDisplay(i);  
24         // Send data to 74HC595  
25         writeData(num[i]);  
26         delay(5);  
27         // Clear the display content  
28         writeData(0xff);  
29     }  
30 }
```

If you want to display the decimal point, make the highest bit of each array become 0, which can be implemented easily by $num[i] \& 0x7f$.

```
45     shiftOut(dataPin, clockPin, LSBFIRST, value & 0x7f);
```




Chapter 15 74HC595 & LED Matrix

Thus far we have learned how to use the 74HC595 IC chip to control the LED bar graph and the 7-segment display. We will now use 74HC595 IC chips to control a LED matrix.

Project 15.1 LED Matrix

In this project, we will use two 74HC595 IC chips to control a monochrome (one color) (8X8) LED matrix to make it display both simple graphics and characters.

Component List

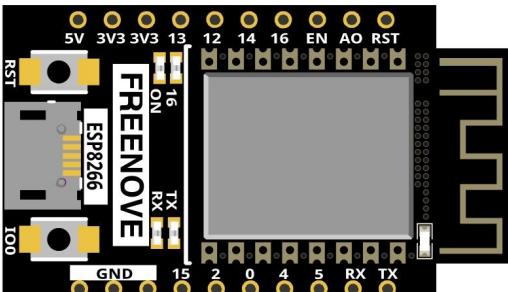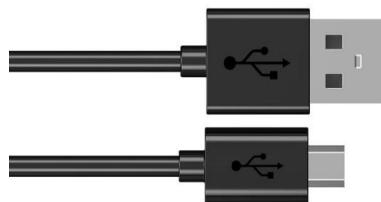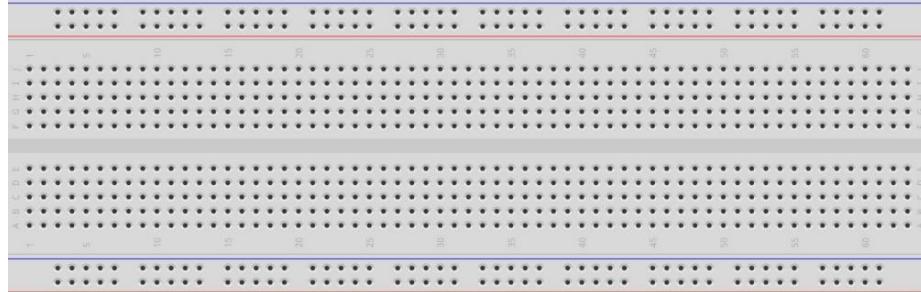
ESP8266 x1		USB cable	
Breadboard x1			
74HC595 x2	8*8 LEDMatrix x1	Resistor 220Ω x8	Jumper wire M/M



Component knowledge

LED Matrix


A LED matrix is a rectangular display module that consists of a uniform grid of LEDs. The following is an 8X8 monochrome (one color) LED matrix containing 64 LEDs (8 rows by 8 columns).

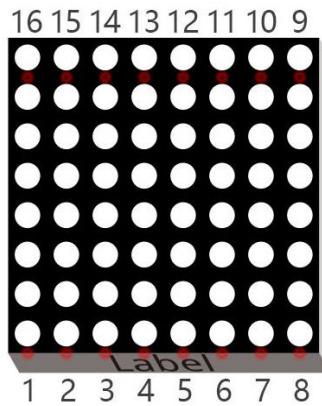


In order to facilitate the operation and reduce the number of ports required to drive this component, the positive poles of the LEDs in each row and negative poles of the LEDs in each column are respectively connected together inside the LED matrix module, which is called a common anode. There is another arrangement type. Negative poles of the LEDs in each row and the positive poles of the LEDs in each column are respectively connected together, which is called a common cathode.

The LED matrix that we use in this project is a common anode LED matrix.


Connection mode of common anode

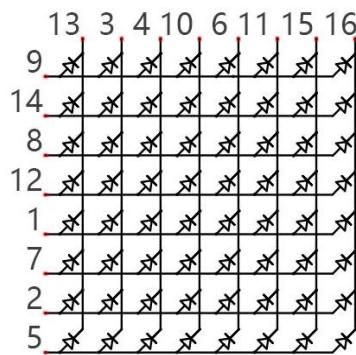

Connection mode of common cathode

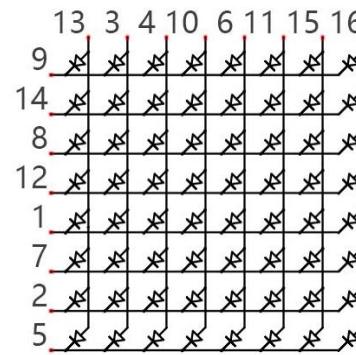

Here is how a common anode LED matrix works. First, choose 16 ports on ESP8266 board to connect to the 16 ports of LED matrix. Configure one port in columns for low level, which makes that column the selected port. Then configure the eight port in the row to display content in the selected column. Add a delay value and then select the next column that outputs the corresponding content. This kind of operation by column is called scan. If you want to display the following image of a smiling face, you can display it in 8 columns, and each column is represented by one byte.

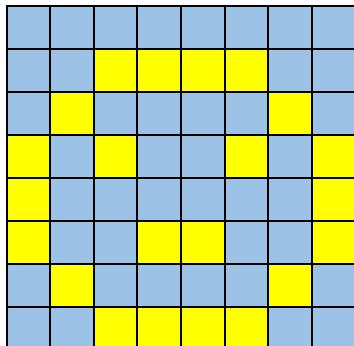

1	2	3	4	5	6	7	8
0	0	0	0	0	0	0	0
0	0	1	1	1	1	0	0
0	1	0	0	0	0	1	0
1	0	1	0	0	1	0	1
1	0	0	0	0	0	0	1
1	0	0	1	1	0	0	1
0	1	0	0	0	0	1	0
0	0	1	1	1	1	0	0

Column	Binary	Hexadecimal
1	0001 1100	0x1c
2	0010 0010	0x22
3	0101 0001	0x51
4	0100 0101	0x45
5	0100 0101	0x45
6	0101 0001	0x51
7	0010 0010	0x22
8	0001 1100	0x1c


To begin, display the first column, then turn off the first column and display the second column. (and so on) turn off the seventh column and display the 8th column, and then start the process over from the first column again like the control of LED bar graph project. The whole process will be repeated rapidly in a loop. Due to the principle of optical afterglow effect and the vision persistence effect in human sight, we will see a picture of a smiling face directly rather than individual columns of LEDs turned ON one column at a time (although in fact this is the reality we cannot perceive).

Then, to save the number of GPIO, we use a 74HC595. When the first column is turned ON, set the lights that need to be displayed in the first column to "1", otherwise to "0", as shown in the above example, where the value of the first column is 0x1c. This value is sent to 74HC595 to control the display of the first column of the LED matrix. Following the above idea, turn OFF the display of the first column, then turn ON the second column, and then send the value of the second column to 74HC595 Until each column is displayed, the LED matrix is displayed again from the first column.


Circuit

In circuit of this project, the power pin of the 74HC595 IC chip is connected to 3.3V. It can also be connected to 5V to make LED matrix brighter.

Schematic diagram

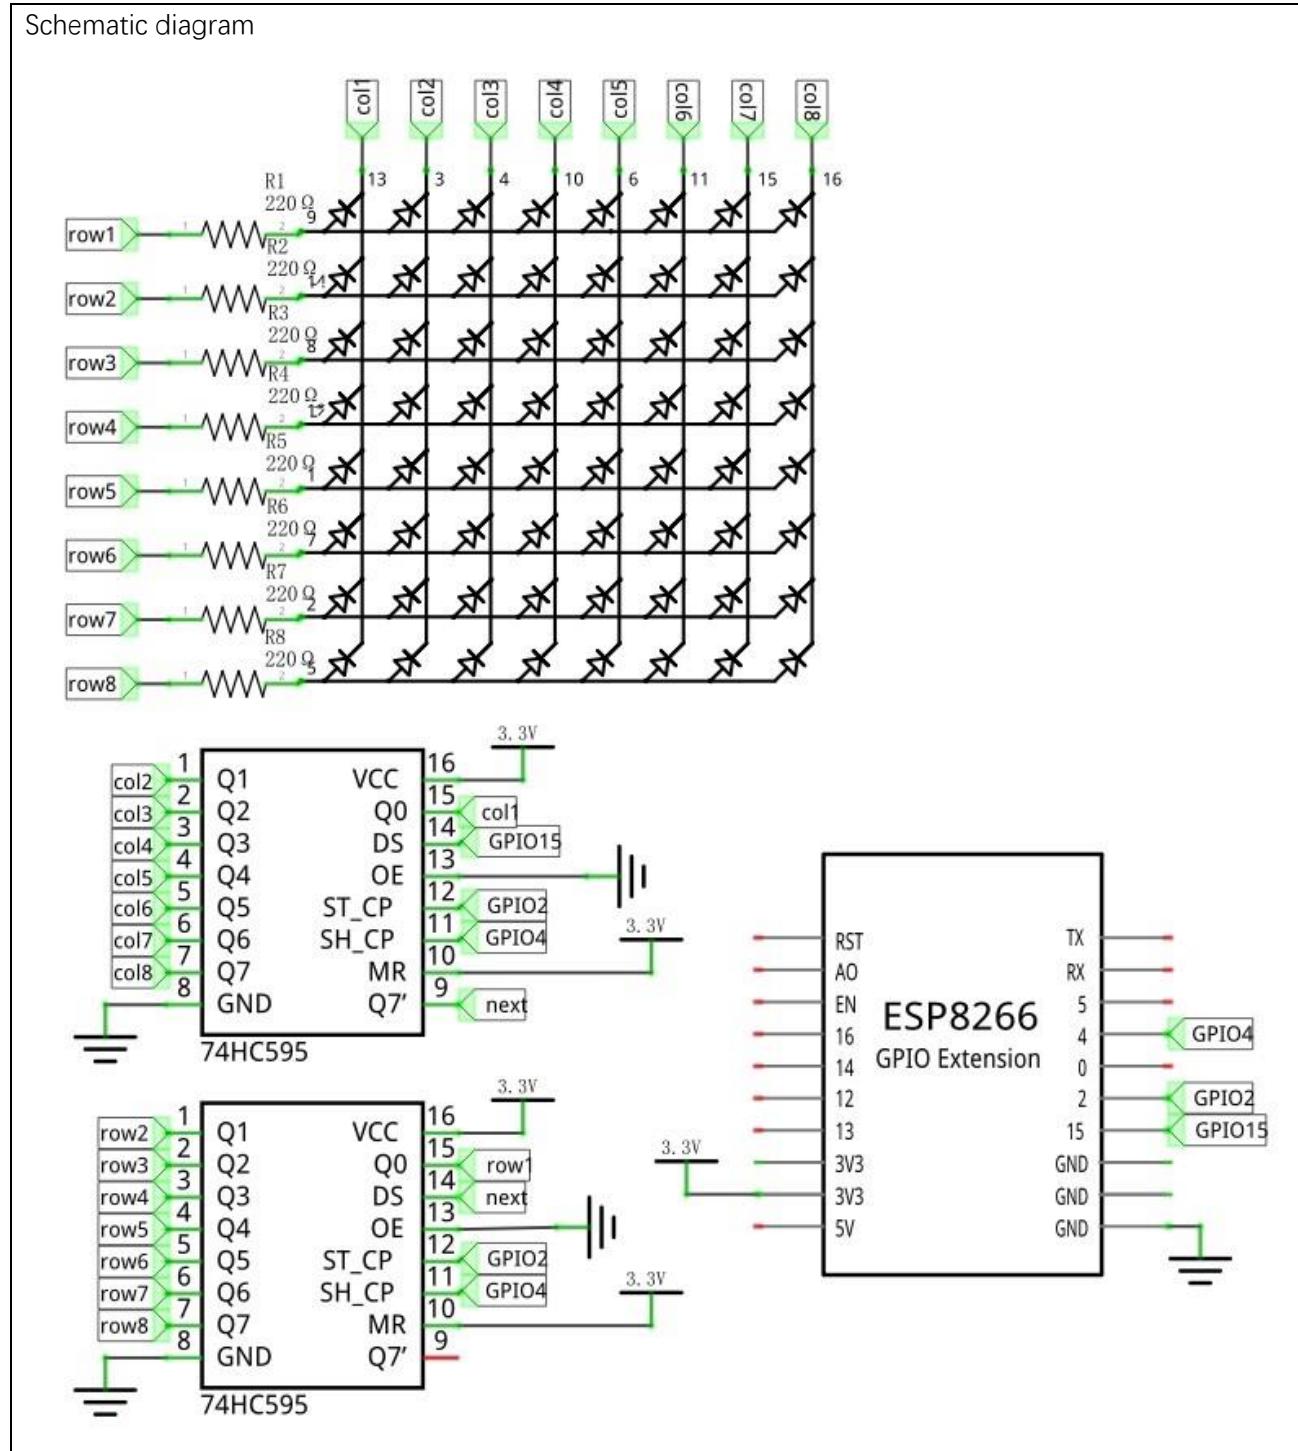

Hardware connection:

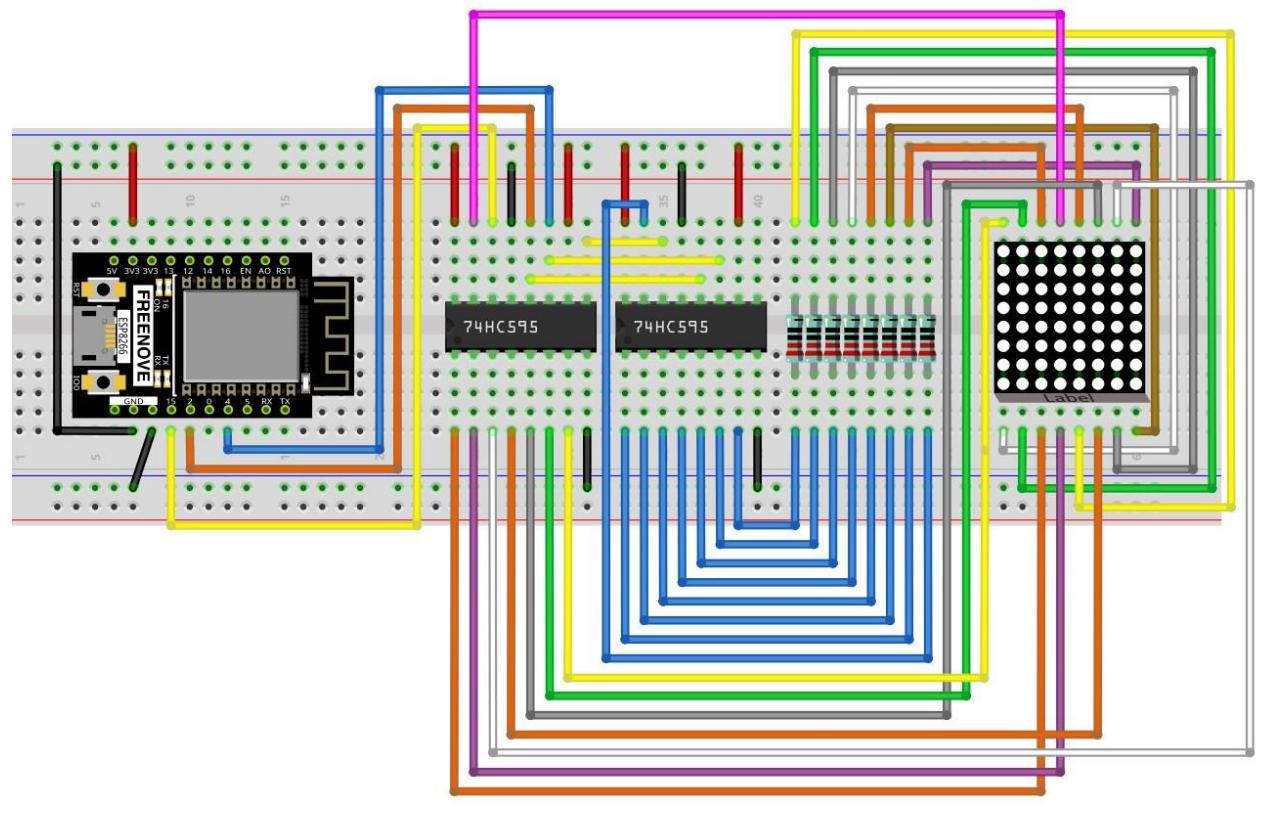

Sketch

The following code will make LED matrix display a smiling face, and then display scrolling character "0-F".

Sketch_15.1_LED_Matrix

```

Sketch_15.1_LED_Matrix | Arduino 1.8.19
File Edit Sketch Tools Help
Sketch_15.1_LED_Matrix
15 // Define the data of numbers and letters, and save them in flash area
16 const int data[] PROGMEM = {
35
36 void setup() {
37     // set pins to output
38     pinMode(latchPin, OUTPUT);
39     pinMode(clockPin, OUTPUT);
40     pinMode(dataPin, OUTPUT);
41 }
42
43 void loop() {
44     // Define a one-byte variable (8 bits) which is used to represent the selected state of
45     int cols;
46     // Display the static smiling pattern
47     for (int j = 0; j < 500; j++) { // repeat 500 times
48         cols = 0x01;
49         for (int i = 0; i < 8; i++) { // display 8 column data by scanning
50             matrixRowsVal(smilingFace[i]); // display the data in this column
51             matrixColsVal(~cols); // select this column
52             delay(1); // display them for a period of time
53             matrixRowsVal(0x00); // clear the data of this column
54             cols <= 1; // shift "cols" 1 bit left to select the next column
55         }
56     }
57     // Display the dynamic patterns of numbers and letters

```

Done uploading.

Leaving...

Hard resetting via RTS pin...

STC89C52 (most compatible), 32KB cache + 32KB IRAM (balanced). Use pgm_read macros for IRAM/PROGMEM, 4MB (FS:2MB OTA:~1019KB), 2, v2 Lower Memory, Disabled, None, Only Sketch, 115200 on COM4

Download the code to ESP8266, and the LED matrix display a smiling face, and then display characters "0 to F" scrolling in a loop on the LED matrix.

The following is the program code:

1	int latchPin = 2; // Pin connected to ST_CP of 74HC595 (Pin12)
2	int clockPin = 4; // Pin connected to SH_CP of 74HC595 (Pin11)
3	int dataPin = 15; // Pin connected to DS of 74HC595 (Pin14)
4	
5	// Define the pattern data for a smiling face
6	const int smilingFace[] = { // " ^ v ^ "
7	0x1C, 0x22, 0x51, 0x45, 0x45, 0x51, 0x22, 0x1C
8	};
9	// Define the data of numbers and letters, and save them in flash area

```
10 const int data[] PROGMEM = {
11     0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, // "
12     0x00, 0x00, 0x21, 0x7F, 0x01, 0x00, 0x00, // "1"
13     0x00, 0x00, 0x23, 0x45, 0x49, 0x31, 0x00, 0x00, // "2"
14     0x00, 0x00, 0x22, 0x49, 0x49, 0x36, 0x00, 0x00, // "3"
15     0x00, 0x00, 0x0E, 0x32, 0x7F, 0x02, 0x00, 0x00, // "4"
16     0x00, 0x00, 0x79, 0x49, 0x49, 0x46, 0x00, 0x00, // "5"
17     0x00, 0x00, 0x3E, 0x49, 0x49, 0x26, 0x00, 0x00, // "6"
18     0x00, 0x00, 0x60, 0x47, 0x48, 0x70, 0x00, 0x00, // "7"
19     0x00, 0x00, 0x36, 0x49, 0x49, 0x36, 0x00, 0x00, // "8"
20     0x00, 0x00, 0x32, 0x49, 0x49, 0x3E, 0x00, 0x00, // "9"
21     0x00, 0x00, 0x3E, 0x41, 0x41, 0x3E, 0x00, 0x00, // "0"
22     0x00, 0x00, 0x3F, 0x44, 0x44, 0x3F, 0x00, 0x00, // "A"
23     0x00, 0x00, 0x7F, 0x49, 0x49, 0x36, 0x00, 0x00, // "B"
24     0x00, 0x00, 0x3E, 0x41, 0x41, 0x22, 0x00, 0x00, // "C"
25     0x00, 0x00, 0x7F, 0x41, 0x41, 0x3E, 0x00, 0x00, // "D"
26     0x00, 0x00, 0x7F, 0x49, 0x49, 0x41, 0x00, 0x00, // "E"
27     0x00, 0x00, 0x7F, 0x48, 0x48, 0x40, 0x00, 0x00 // "F"
28 };
29
30 void setup() {
31     // set pins to output
32     pinMode(latchPin, OUTPUT);
33     pinMode(clockPin, OUTPUT);
34     pinMode(dataPin, OUTPUT);
35 }
36
37 void loop() {
38     // Define a one-byte variable (8 bits) which is used to represent the selected state of 8
39     // column.
40     int cols;
41     // Display the static smiling pattern
42     for (int j = 0; j < 500; j++) { // repeat 500 times
43         cols = 0x01;
44         for (int i = 0; i < 8; i++) { // display 8 column data by scanning
45             matrixColsVal(smilingFace[i]); // display the data in this column
46             matrixRowsVal(~cols); // select this column
47             delay(1); // display them for a period of time
48             matrixColsVal(0x00); // clear the data of this column
49             cols <= 1; // shift "cols" 1 bit left to select the next column
50     }
51 }
52 // Display the dynamic patterns of numbers and letters
53 for (int i = 0; i < 128; i++) {
```

```

54   for (int k = 0; k < 10; k++) {      // repeat image of each frame 10 times.
55     cols = 0x01;          // Assign binary 00000001. Means the first column is selected.
56     for (int j = i; j < 8 + i; j++) { // display image of each frame
57       matrixColsVal(pgm_read_word_near(data + j)); // display the data in this column
58       matrixRowsVal(~cols);           // select this column
59       delay(1);                   // display them for a period of time
60       matrixColsVal(0x00);         // close the data of this column
61       cols <= 1;                  // shift "cols" 1 bit left to select the next column
62     }
63   }
64 }
65 }

66

67 void matrixRowsVal(int value) {
68   // make latchPin output low level
69   digitalWrite(latchPin, LOW);
70   // Send serial data to 74HC595
71   shiftOut(dataPin, clockPin, LSBFIRST, value);
72   // make latchPin output high level, then 74HC595 will update the data to parallel output
73   digitalWrite(latchPin, HIGH);
74 }

75

76 void matrixColsVal(int value) {
77   // make latchPin output low level
78   digitalWrite(latchPin, LOW);
79   // Send serial data to 74HC595
80   shiftOut(dataPin, clockPin, MSBFIRST, value);
81   // make latchPin output high level, then 74HC595 will update the data to parallel output
82   digitalWrite(latchPin, LOW);
83 }
84 }
```

The first “for” loop in the “while” loop is used to display a static smile. Displaying column information from left to right, one column at a time with a total of 8 columns. This repeats 500 times to ensure sufficient display time.

```

40 int cols;
41 // Display the static smiling pattern
42 for (int j = 0; j < 500; j++) { // repeat 500 times
43   cols = 0x01; // Assign 0x01(binary 00000001) to the variable, which represents the first
44   // column is selected.
45   for (int i = 0; i < 8; i++) { // display 8 column data by scanning
46     matrixRowsVal(smilingFace[i]); // display the data in this column
47     matrixColsVal(~cols);           // select this column
48     delay(1);                   // display them for a period of time
49     cols <= 1;                  // shift "cols" 1 bit left to select the next column
50   }
```

51	}
----	---

The second "for" loop is used to display scrolling characters "0 to F", for a total of $17 * 8 = 144$ columns. Displaying the 0-8 column, then the 1-9 column, then the 2-10 column..... and so on...128-136 column in consecutively to achieve the scrolling effect. The display of each frame is repeated a certain number of times and the more repetitions, the longer the single frame display will be and the slower the scrolling movement.

52	// Display the dynamic patterns of numbers and letters
53	for (int i = 0; i < 128; i++) {
54	for (int k = 0; k < 10; k++) { // repeat image of each frame 10 times.
55	cols = 0x01; // Assign binary 00000001. Means the first column is selected.
56	for (int j = i; j < 8 + i; j++) { // display image of each frame
57	matrixRowsVal(pgm_read_word_near(data + j)); // display the data in this column
58	matrixColsVal(~cols); // select this column
59	delay(1); // display them for a period of time
60	matrixRowsVal(0x00); // close the data of this column
61	cols <= 1; // shift "cols" 1 bit left to select the next column
62	}
63	}
64	}

The amount of pins of ESP8266 is limited, so you need to find ways to save pins. If you use ESP8266's GPIO to control the lattice without using 74HC595, you need 16 pins for the use of LED matrix. In this example, we use two 74HC595 to drive the LED matrix, requiring only three pins, so that we could save the rest of 13 pins.





Chapter 16 Relay & Motor

In this chapter, we will learn a kind of special switch module, relay module.

Project 16.1 Relay & Motor

In this project, we will use a push button switch indirectly to control the motor via a relay.

Component List

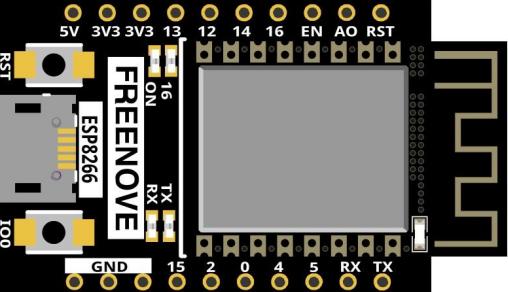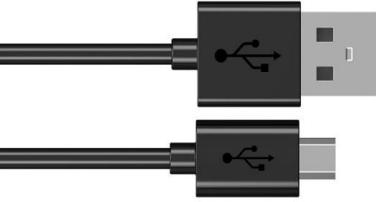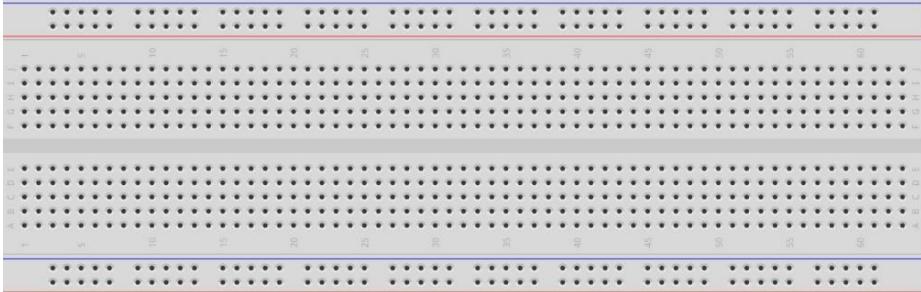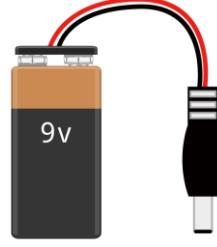ESP8266 x1 	USB cable 
Breadboard x1 	
Jumper wire M/M 	9V battery (prepared by yourself) & battery line 

Resistor 10kΩ x2	Resistor 1kΩ x1	Resistor 220Ω x1	Breadboard Power module x1		
NPN transistor x1	Relay x1	Motor x1	Push button x1	LED x1	Diode x1

Component knowledge

Relay

A relay is a safe switch which can use low power circuit to control high power circuit. It consists of electromagnet and contacts. The electromagnet is controlled by low power circuit and contacts are used in high power circuit. When the electromagnet is energized, it will attract contacts.

The following is a schematic diagram of a common relay and the feature and circuit symbol of a 5V relay used in this project:

Diagram	Feature:	Symbol

Pin 5 and pin 6 are connected to each other inside. When the coil pins 3 and 4 get connected to 5V power supply, pin 1 will be disconnected from pin 5&6 and pin 2 will be connected to pin 5&6. So pin 1 is called close end, pin 2 is called open end.

Inductor

The symbol of Inductance is “L” and the unit of inductance is the “Henry” (H). Here is an example of how this can be encountered: $1H=1000mH$, $1mH=1000\mu H$.


An inductor is an energy storage device that converts electrical energy into magnetic energy. Generally, it consists of winding coil, with a certain amount of inductance. Inductors hinder the change of current passing through it. When the current passing through it increases, it will attempt to hinder the increasing trend of



current; and when the current passing through it decreases, it will attempt to hinder the decreasing trend of current. So the current passing through inductor is not transient.




The reference circuit for relay is as follows. The coil of relays can be equivalent to that of inductors, when the transistor disconnects power supply of the relay, the current in the coil of the relay can't stop immediately, causing an impact on power supply. So a parallel diode will get connected to both ends of relay coil pin in reversing direction, then the current will pass through diode, avoiding the impact on power supply.

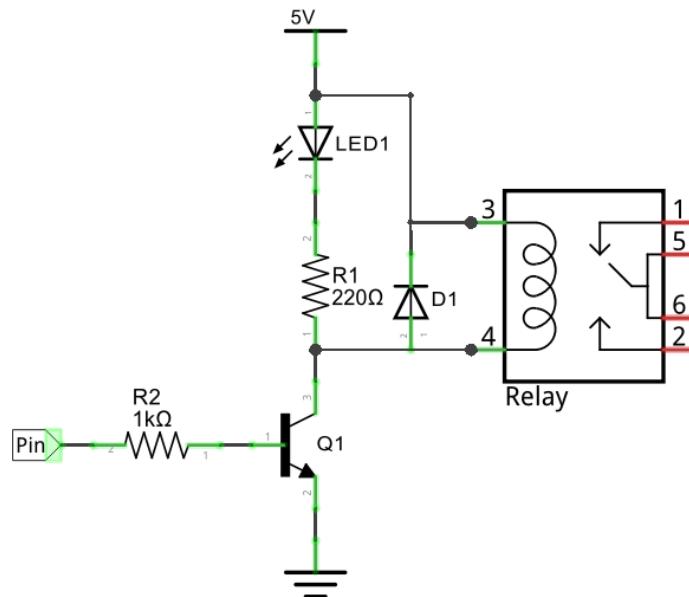


Motor

A motor is a device that converts electrical energy into mechanical energy. Motor consists of two parts: stator and rotor. When motor works, the stationary part is stator, and the rotating part is rotor. Stator is usually the outer case of motor, and it has terminals to connect to the power. Rotor is usually the shaft of motor, and can drive other mechanical devices to run. Diagram below is a small DC motor with two pins.


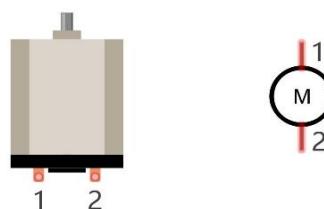


When a motor gets connected to the power supply, it will rotate in one direction. Reverse the polarity of power supply, then the motor rotates in opposite direction.

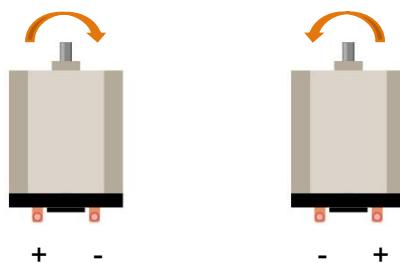


Circuit

Schematic diagram

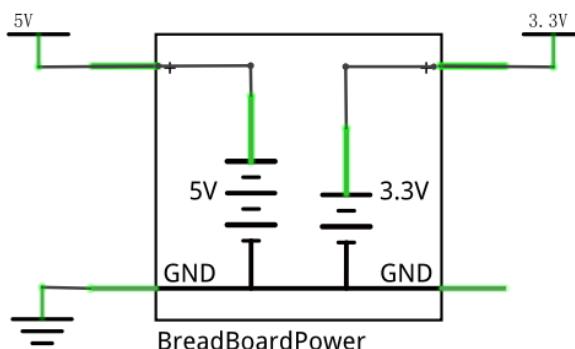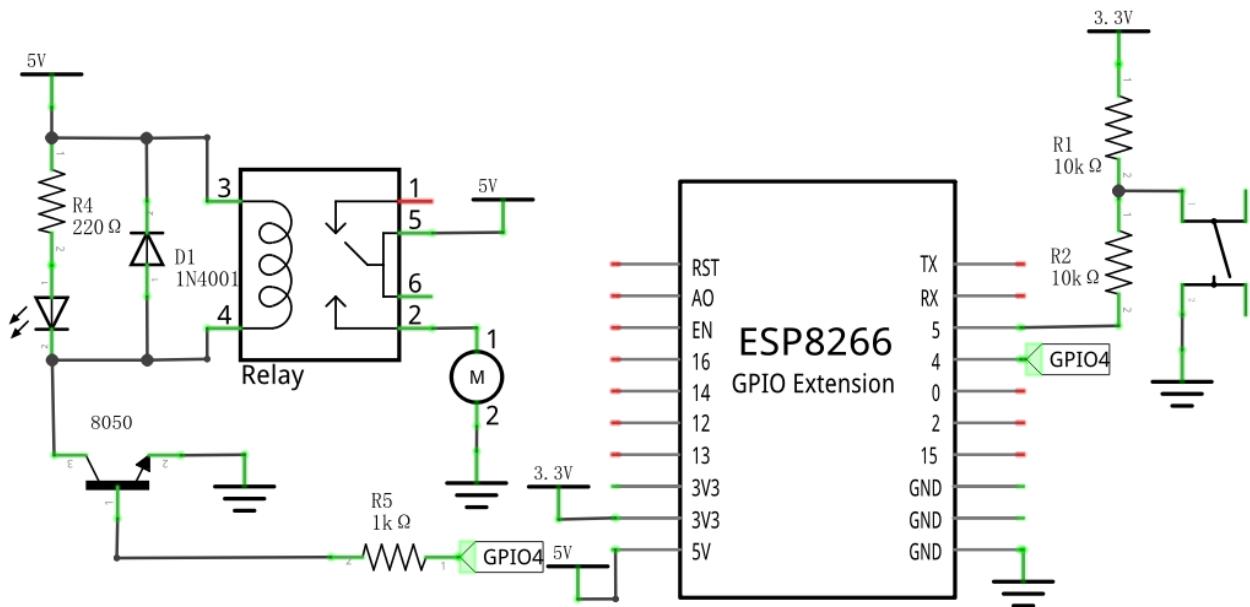

Any concerns?  support@freenove.com

Hardware connection. If you need any support, please free to contact us via: support@freenove.com

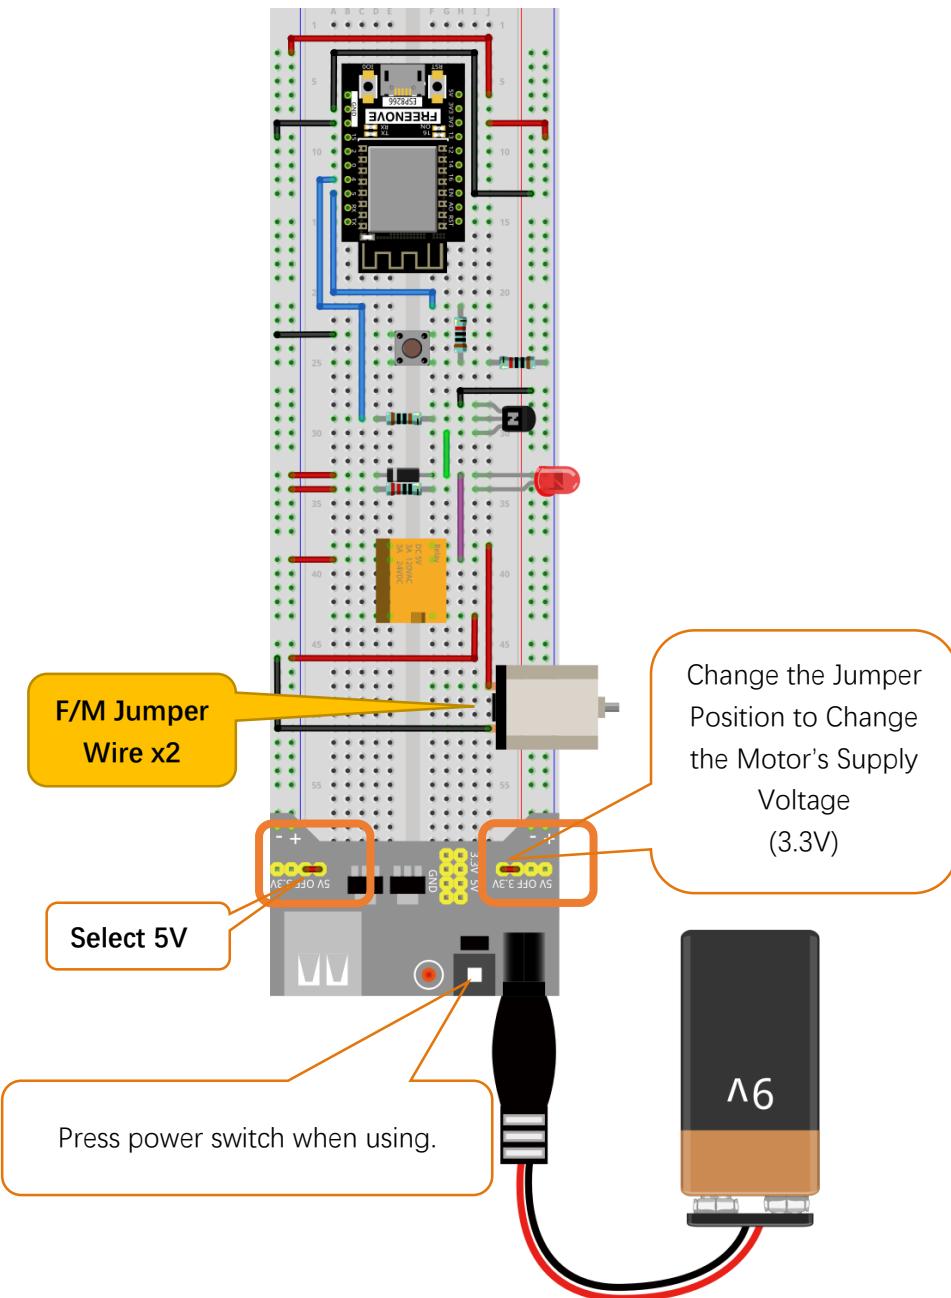

Note: the motor circuit uses a large current, about 0.2-0.3A without load. We recommend that you use a 9V battery to power your system.

Sketch

Use buttons to control the relays and motors.

Sketch_16.1_Control_Motor_by_Relay

The screenshot shows the Arduino IDE interface with the following details:

- Title Bar:** Sketch_16.1_Control_Motor_by_Relay | Arduino 1.8.19
- Menu Bar:** File Edit Sketch Tools Help
- Toolbar:** Standard toolbar icons for file operations.
- Code Editor:** The main area contains the C++ code for the sketch. The code uses push buttons to control a relay via software debouncing. It includes comments explaining the purpose of each section of code.
- Serial Monitor:** The bottom section shows the serial communication log, indicating the sketch has finished saving, verified its hash, and is leaving the program.
- Status Bar:** Shows memory usage statistics: Disabled (new aborts on oom), Disabled, All SSL ciphers (most compatible), 32KB cache + 32KB IRAM (balanced), Use pgm_read macros for IRAM/PROGMEM, 4MB (FS:2MB OTA:~1019KB), 2, v2 Lower Memory, Disabled, None, Only Sketch, 115200 on COM7.



Download the code to ESP8266. When the DC motor is connected to a power supply, it will rotate in one direction. If you reverse the polarity of the power supply, the DC motor will rotate in opposite direction.



The following is the program code:

```

1 int relayPin = 4;           // the number of the relay pin
2 int buttonPin = 5;          // the number of the push button pin
3
4 int buttonState = HIGH;     // Record button state, and initial the state to high level
5 int relayState = LOW;       // Record relay state, and initial the state to low level
6 int lastButtonState = HIGH; // Record the button state of last detection
7 long lastChangeTime = 0;    // Record the time point for button state change
8
9 void setup() {
10    pinMode(buttonPin, INPUT_PULLUP);           // Set push button pin into input mode
11    pinMode(relayPin, OUTPUT);                  // Set relay pin into output mode
12    digitalWrite(relayPin, relayState);         // Set the initial state of relay into "off"
13 }
14 void loop() {
15    int nowButtonState = digitalRead(buttonPin); // Read current state of button pin
16    // If button pin state has changed, record the time point
17    if (nowButtonState != lastButtonState) {
18        lastChangeTime = millis();
19    }
20    // If button state changes, and stays stable for a while, then it should have skipped the
21    // bounce area
22    if (millis() - lastChangeTime > 10) {
23        if (buttonState != nowButtonState) {      // Confirm button state has changed
24            buttonState = nowButtonState;
25            if (buttonState == LOW) {             // Low level indicates the button is pressed
26                relayState = ! relayState;        // Reverse relay state
27                digitalWrite(relayPin, relayState); // Update relay state
28            }
29        }
30    }
31    lastButtonState = nowButtonState; // Save the state of last button
32 }
```

In Chapter 2, the pressing and releasing of the button will result in mechanical vibrating. If we don't solve this problem, some unexpected consequences may happen to the procedure. Click [here](#) to return to Chapter 2 Button & LED

To eliminate the vibrating, we record the electrical level of the button with nowButtonState, and the time point for the last change of pin level with lastChangeTime. If the state of the button changes, it will record the time point of the change.

```
15 int nowButtonState = digitalRead(buttonPin); // Read current state of button pin
16 // If button pin state has changed, record the time point
17 if (nowButtonState != lastButtonState) {
18     lastChangeTime = millis();
19 }
```

If the state of the pin changes and keeps stable for a period of time, it can be considered as a valid key state change, update the key state variable buttonState, and determine whether the key is pressed or released according to the current state.

```
15 // If button state changes, and stays stable for a while, then it should have skipped the
16 bounce area
17 if (millis() - lastChangeTime > 10) {
18     if (buttonState != nowButtonState) { // Confirm button state has changed
19         buttonState = nowButtonState;
20         if (buttonState == LOW) { // Low level indicates the button is pressed
21             relayState = ! relayState; // Reverse relay state
22             digitalWrite(relayPin, relayState); // Update relay state
23         }
24     }
25 }
26 lastButtonState = nowButtonState; // Save the state of last button
```



Chapter 17.1 Motor & Driver


In this chapter, we will learn about DC motors and DC motor drivers and how to control the speed and direction of a DC motor.

Project 17.1 Control Motor with Potentiometer

Control the direction and speed of the motor with a potentiometer.

Component List


ESP8266 x1	USB cable
Breadboard x1	Breadboard Power module x1
Jumper wire M/M x12	9V battery (prepared by yourself) & battery line

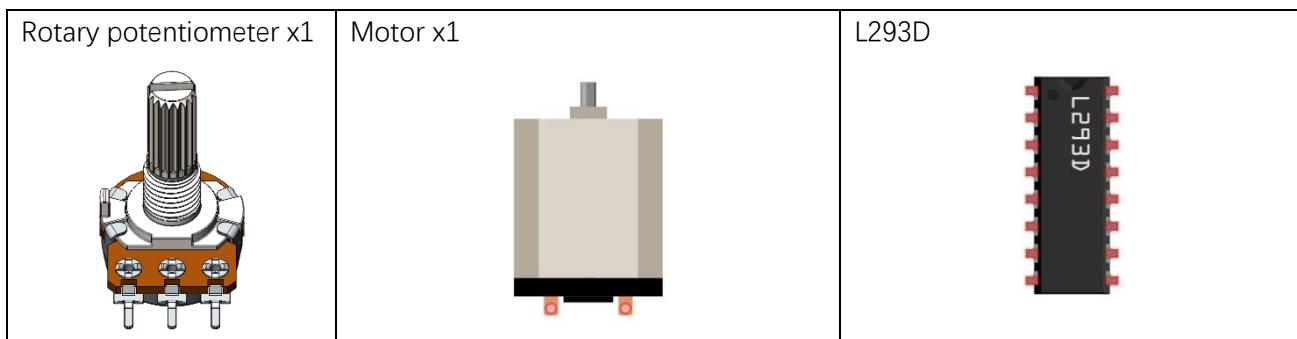

Component knowledge

L293D

L293D is an IC chip (Integrated Circuit Chip) with a 4-channel motor drive. You can drive a unidirectional DC motor with 4 ports or a bi-directional DC motor with 2 ports or a stepper motor (stepper motors are covered later in this Tutorial).

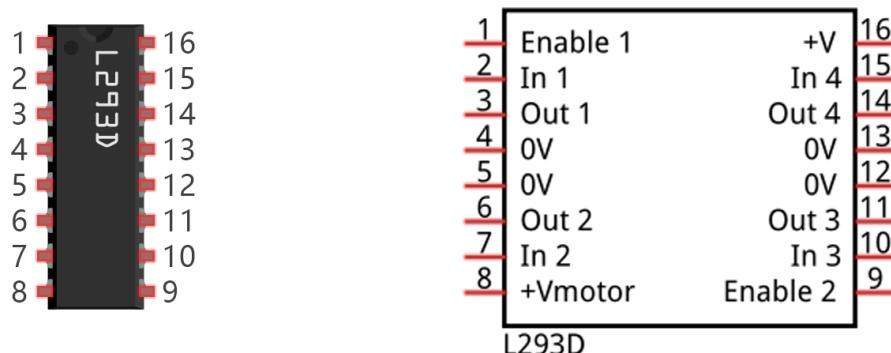


Port description of L293D module is as follows:

Pin name	Pin number	Description
In x	2, 7, 10, 15	Channel x digital signal input pin
Out x	3, 6, 11, 14	Channel x output pin, input high or low level according to In x pin, get connected to +Vmotor or 0V
Enable1	1	Channel 1 and channel 2 enable pin, high level enable
Enable2	9	Channel 3 and channel 4 enable pin, high level enable
0V	4, 5, 12, 13	Power cathode (GND)
+V	16	Positive electrode (VCC) of power supply, supply voltage 3.0~36V
+Vmotor	8	Positive electrode of load power supply, provide power supply for the Out pin x, the supply voltage is +V~36V


For more detail, please refer to the datasheet for this IC Chip.

When using L293D to drive DC motor, there are usually two connection options.

The following connection option uses one channel of the L293D, which can control motor speed through the PWM, However the motor then can only rotate in one direction.

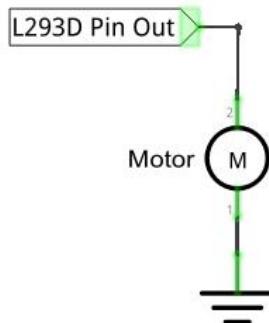

The following connection uses two channels of the L293D: one channel outputs the PWM wave, and the other channel connects to GND, therefore you can control the speed of the motor. When these two channel signals are exchanged, not only controls the speed of motor, but also can control the steering of the motor.

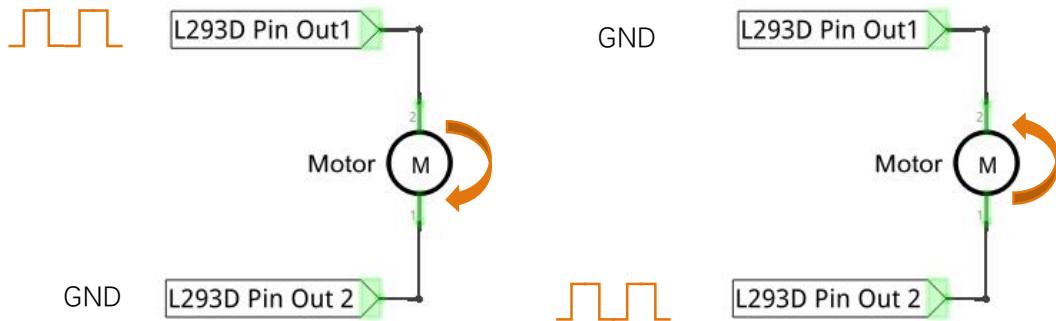


In practical use the motor is usually connected to channel 1 and 2 by outputting different levels to in1 and in2 to control the rotational direction of the motor, and output to the PWM wave to Enable1 port to control the motor's rotational speed. If the motor is connected to channel 3 and 4 by outputting different levels to in3 and in4 to control the motor's rotation direction, and output to the PWM wave to Enable2 pin to control the motor's rotational speed.


Circuit

Use caution when connecting this circuit because the DC Motor is a high-power component. **Do not use the power provided by the ESP8266 to power the motor directly, as this may cause permanent damage to your RPi!** The logic circuit can be powered by the ESP8266's power or an external power supply, which should share a common ground with ESP8266.

Schematic diagram

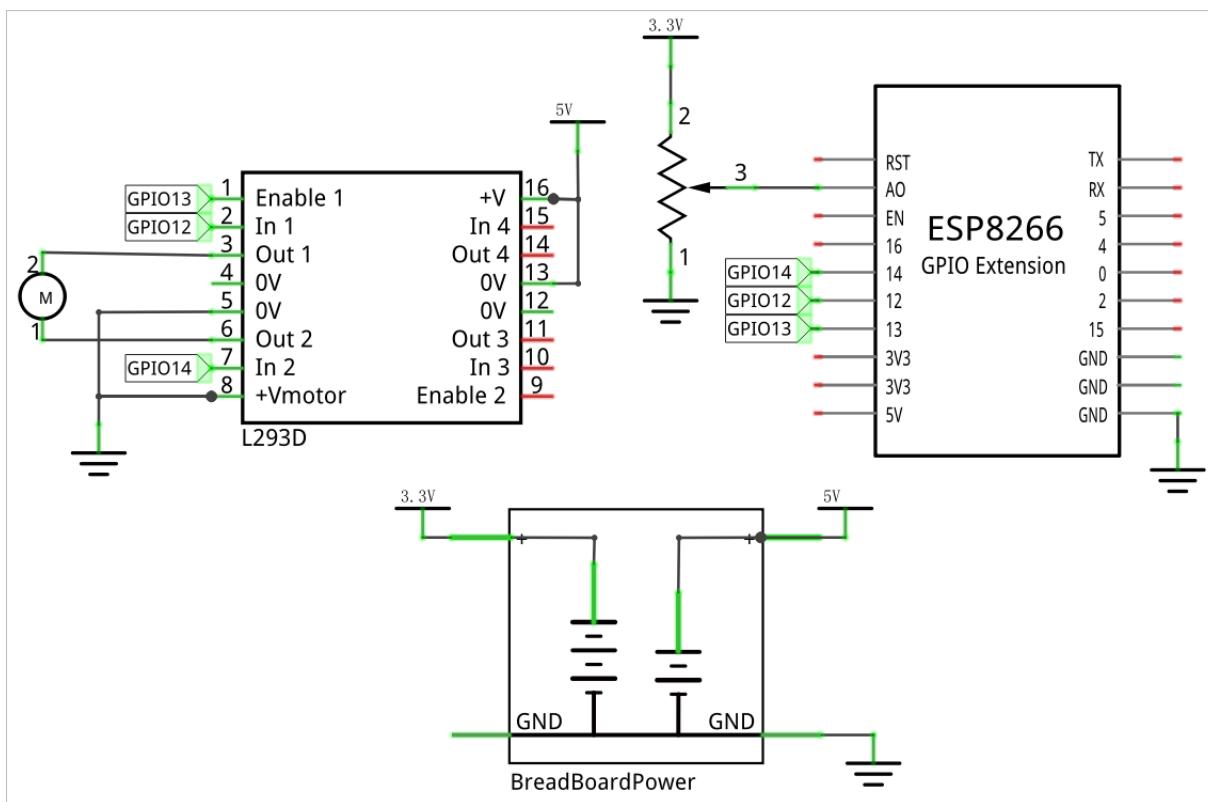


Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

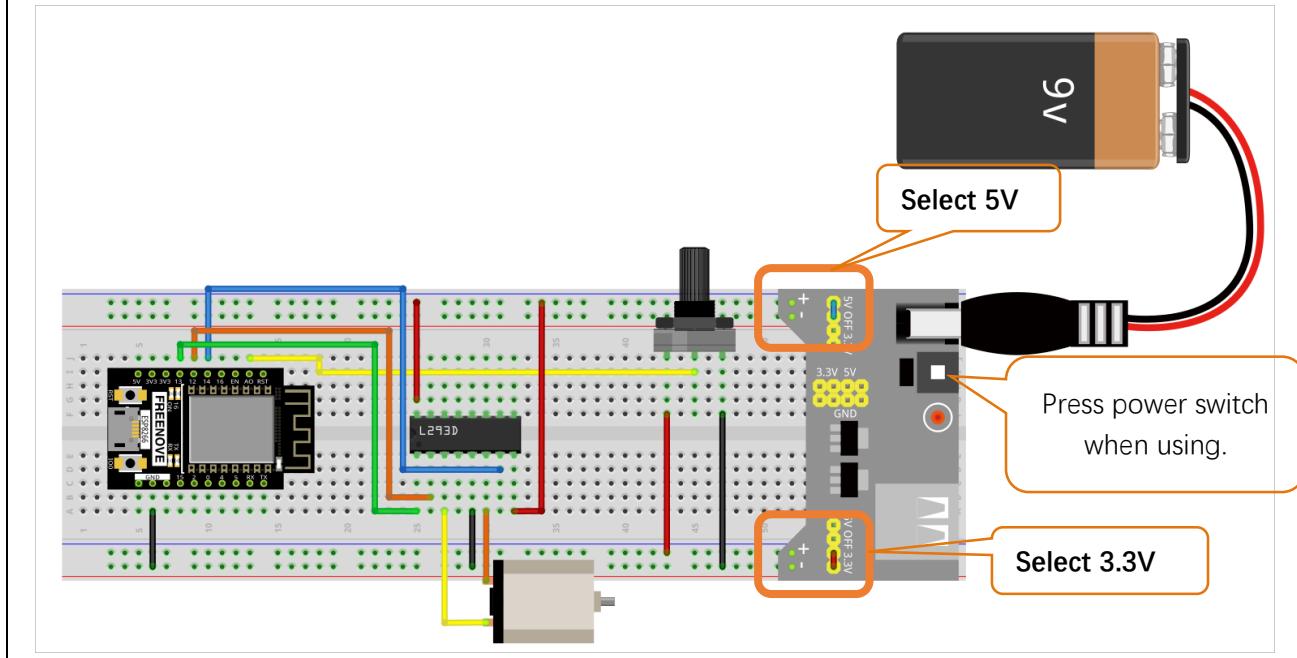

Any concerns? support@freenove.com

Sketch

Sketch_17.1_Control_Motor_by_L293D

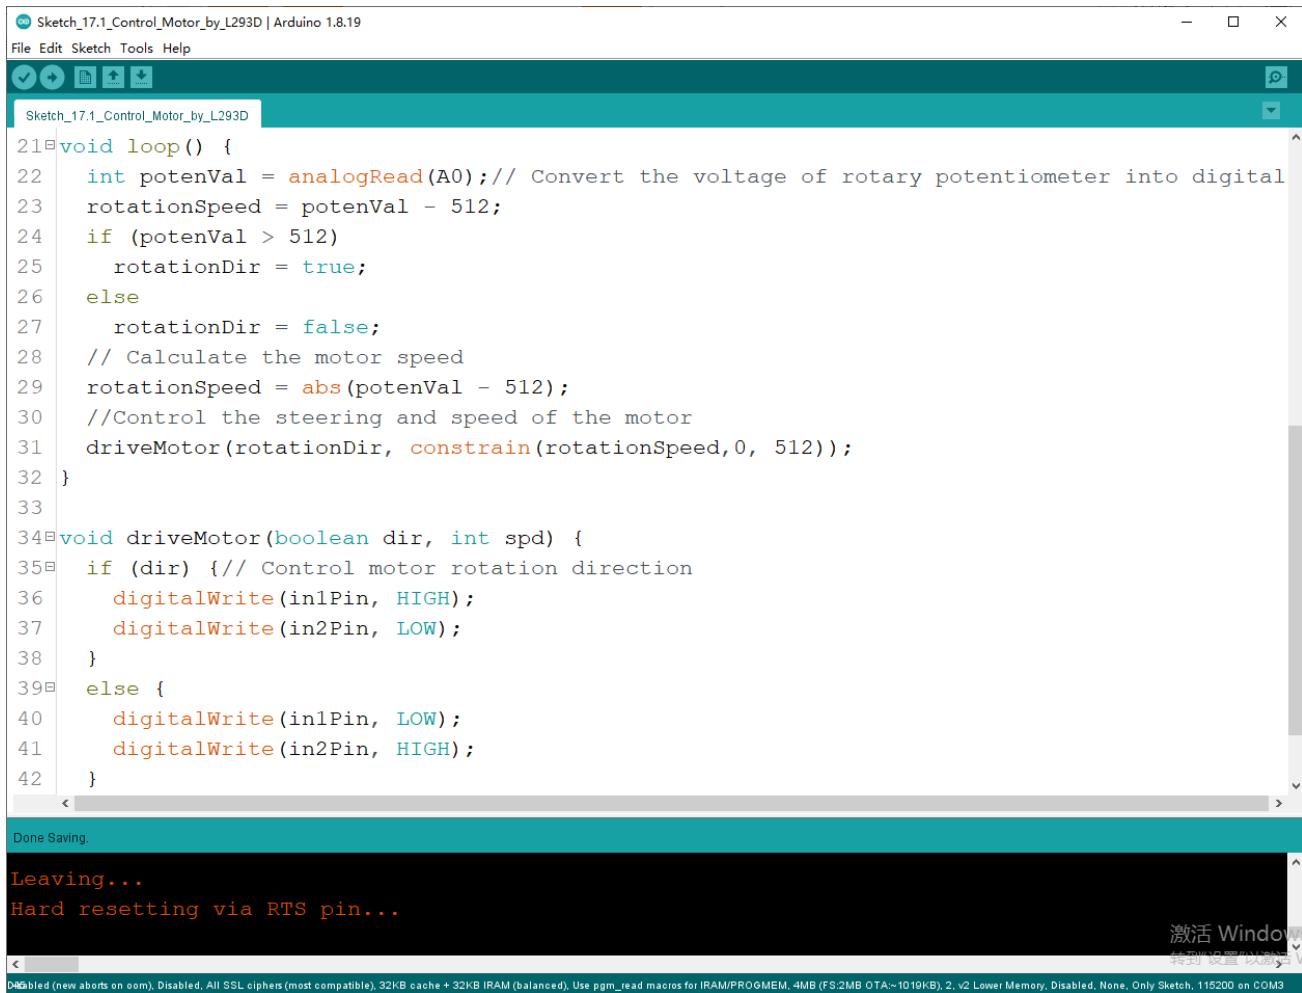

```

Sketch_17.1_Control_Motor_by_L293D | Arduino 1.8.19
File Edit Sketch Tools Help
Sketch_17.1_Control_Motor_by_L293D
21 void loop() {
22     int potenVal = analogRead(A0); // Convert the voltage of rotary potentiometer into digital
23     rotationSpeed = potenVal - 512;
24     if (potenVal > 512)
25         rotationDir = true;
26     else
27         rotationDir = false;
28     // Calculate the motor speed
29     rotationSpeed = abs(potenVal - 512);
30     //Control the steering and speed of the motor
31     driveMotor(rotationDir, constrain(rotationSpeed, 0, 512));
32 }
33
34 void driveMotor(boolean dir, int spd) {
35     if (dir) { // Control motor rotation direction
36         digitalWrite(in1Pin, HIGH);
37         digitalWrite(in2Pin, LOW);
38     }
39     else {
40         digitalWrite(in1Pin, LOW);
41         digitalWrite(in2Pin, HIGH);
42     }
}
Done Saving.


Leaving...
Hard resetting via RTS pin...



```

激活 Windows
转到设置以激活 V

Disabled (new aborts on com). Disabled, All SSL ciphers (most compatible), 32KB cache + 32KB IRAM (balanced), Use pgm_read macros for IRAM/PROGMEM, 4MB (FS:2MB OTA:~1019KB), 2, v2 Lower Memory, Disabled, None, Only Sketch, 115200 on COM3

Download code to ESP8266, rotate the potentiometer in one direction and the motor speeds up slowly in one direction. And then rotate the potentiometer in the other direction and the motor will slow down to stop. And then rotate it in an inverse direction to accelerate the motor.

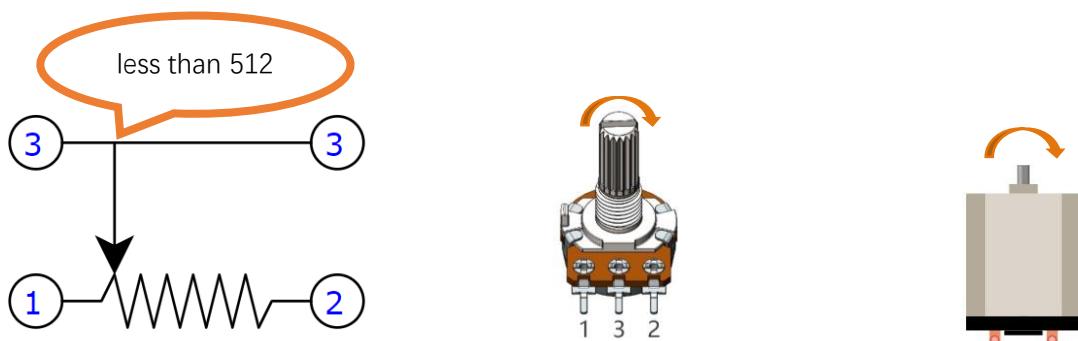

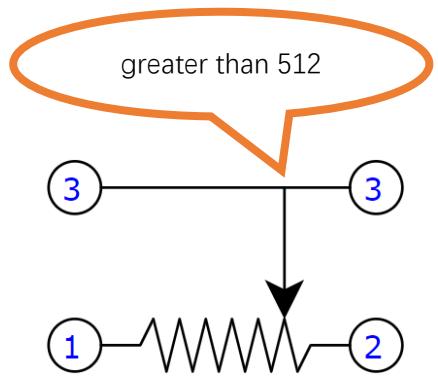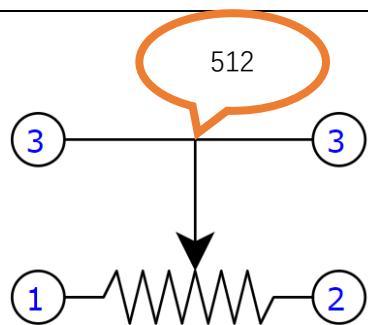

The following is the sketch:

```

1 int in1Pin = 12;      // Define L293D channel 1 pin
2 int in2Pin = 14;      // Define L293D channel 2 pin
3 int enable1Pin = 13;  // Define L293D enable 1 pin
4
5 boolean rotationDir; // Define a variable to save the motor's rotation direction
6 int rotationSpeed;   // Define a variable to save the motor rotation speed
7
8 void setup() {
9     // Initialize the pin into an output mode:
10    pinMode(in1Pin, OUTPUT);
11    pinMode(in2Pin, OUTPUT);
12    pinMode(enable1Pin, OUTPUT);
13 }
14
15 void loop() {
16     int potenVal = analogRead(A0); // Convert the voltage of rotary potentiometer into digital
17     rotationSpeed = potenVal - 512;
18     if (potenVal > 512)
19         rotationDir = true;
20     else
21         rotationDir = false;
22     // Calculate the motor speed
23     rotationSpeed = abs(potenVal - 512);
24     //Control the steering and speed of the motor
25     driveMotor(rotationDir, constrain(rotationSpeed, 0, 512));
26 }
27
28 void driveMotor(boolean dir, int spd) {
29     if (dir) { // Control motor rotation direction
30         digitalWrite(in1Pin, HIGH);
31         digitalWrite(in2Pin, LOW);
32     }
33     else {
34         digitalWrite(in1Pin, LOW);
35         digitalWrite(in2Pin, HIGH);
36     }
37     analogWrite(enable1Pin, spd); // Control motor rotation speed
38 }
```

The ADC of ESP8266 has a 10-bit accuracy, corresponding to a range from 0 to 1023. In this program, set the number 512 as the midpoint. If the value of ADC is less than 512, make the motor rotate in one direction. If the value of ADC is greater than 512, make the motor rotate in the other direction. Subtract 512 from the ADC value and take the absolute value and use this result as the speed of the motor.

16	int potenVal = analogRead(A0); // Convert the voltage of rotary potentiometer into digital
----	--------------------------------------------------------------------------------------------

```
17 rotationSpeed = potenVal - 512;
18 if (potenVal > 512)
19     rotationDir = true;
20 else
21     rotationDir = false;
22 // Calculate the motor speed
23 rotationSpeed = abs(potenVal - 512);
24 //Control the steering and speed of the motor
25 driveMotor(rotationDir, constrain(rotationSpeed, 0, 512));
26 }
```

Function `driveMotor` is used to control the rotation direction and speed of the motor. The `dir` represents direction while `spd` refers to speed.

```
28 void driveMotor(boolean dir, int spd) {
29     if (dir) {// Control motor rotation direction
30         digitalWrite(in1Pin, HIGH);
31         digitalWrite(in2Pin, LOW);
32     }
33     else {
34         digitalWrite(in1Pin, LOW);
35         digitalWrite(in2Pin, HIGH);
36     }
37     analogWrite(enable1Pin, spd); // Control motor rotation speed
38 }
```




Chapter 18 Servo

Previously, we learned how to control the speed and rotational direction of a motor. In this chapter, we will learn about servos which are a rotary actuator type motor that can be controlled to rotate to specific angles.

Project 18.1 Servo Sweep

First, we need to learn how to make a servo rotate.


Component List

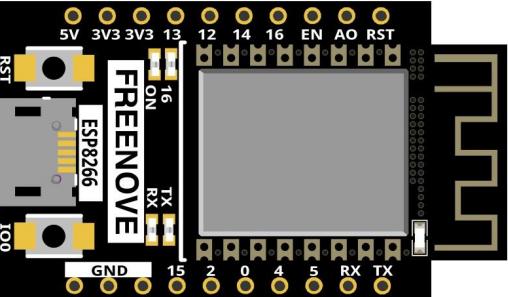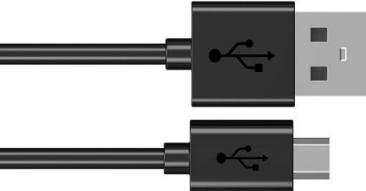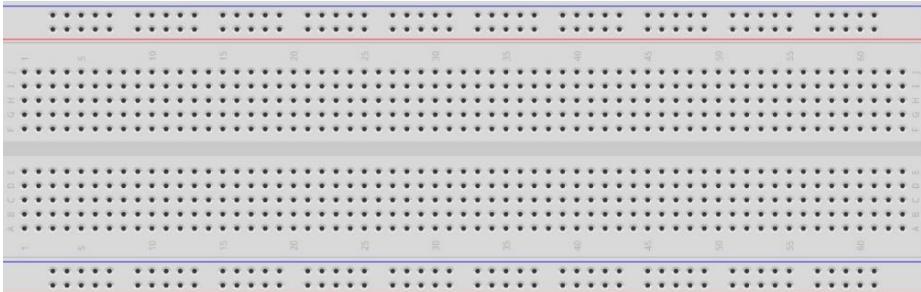ESP8266 x1	USB cable
	
Breadboard x1	
Servo x1	Jumper wire M/M x5

Component knowledge

Servo

Servo is a compact package which consists of a DC motor, a set of reduction gears to provide torque, a sensor and control circuit board. Most servos only have a 180-degree range of motion via their "horn". Servos can output higher torque than a simple DC motor alone and they are widely used to control motion in model cars, model airplanes, robots, etc. Servos have three wire leads which usually terminate to a male or female 3-pin plug. Two leads are for electric power: positive (2-VCC, Red wire), negative (3-GND, Brown wire), and the signal line (1-Signal, Orange wire), as represented in the Servo provided in your Kit.

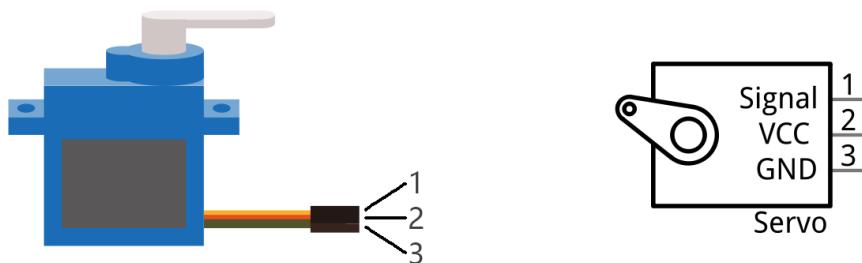

We will use a 50Hz PWM signal with a duty cycle in a certain range to drive the Servo. The lasting time of 0.5ms-2.5ms of PWM single cycle high level corresponds to the servo angle 0 degrees - 180 degree linearly. Part of the corresponding values are as follows:


High level time	Servo angle
0.5ms	0 degree
1ms	45 degree
1.5ms	0 degree
2ms	45 degree
2.5ms	180 degree

When you change the servo signal value, the servo will rotate to the designated angle.


Circuit

Use caution when supplying power to the servo, it should be 5V. Make sure you do not make any errors when connecting the servo to the power supply.

Schematic diagram

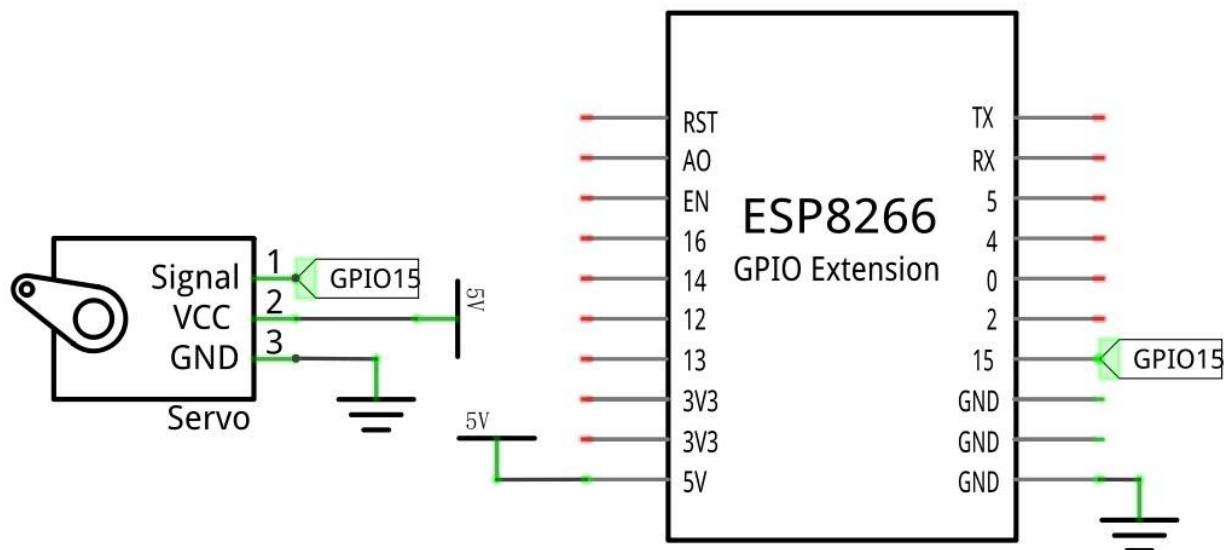


Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

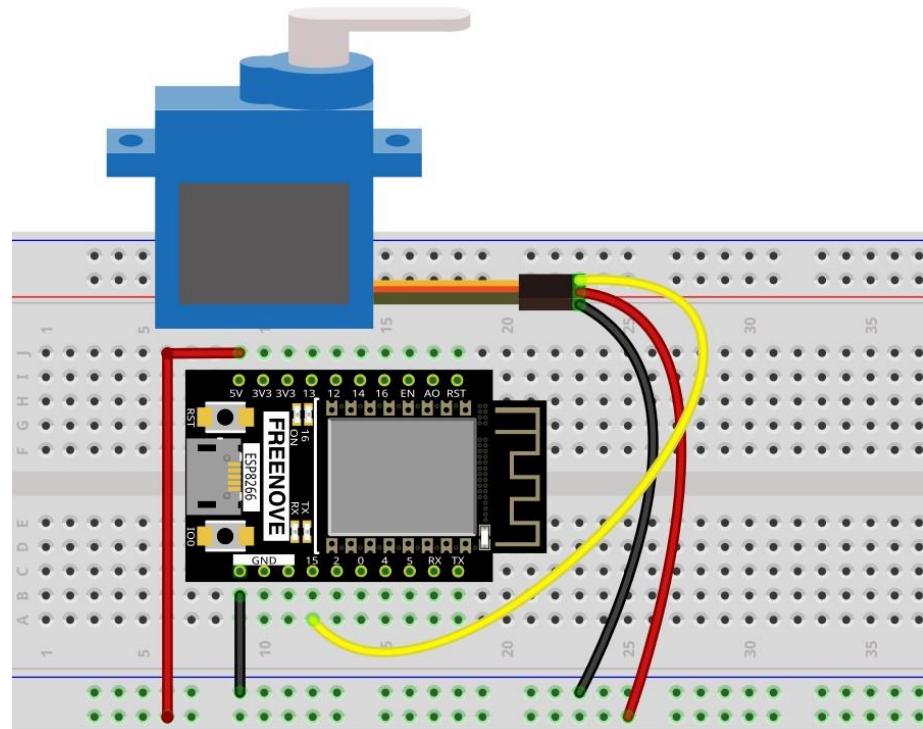

Sketch

How to install the library

If you haven't installed it yet, please do so before learning. The steps to add third-party Libraries are as follows: open arduino->Sketch->Include library-> Manage libraries. Enter "Servo" in the search bar and select "Servo" for installation. Refer to the following operations:

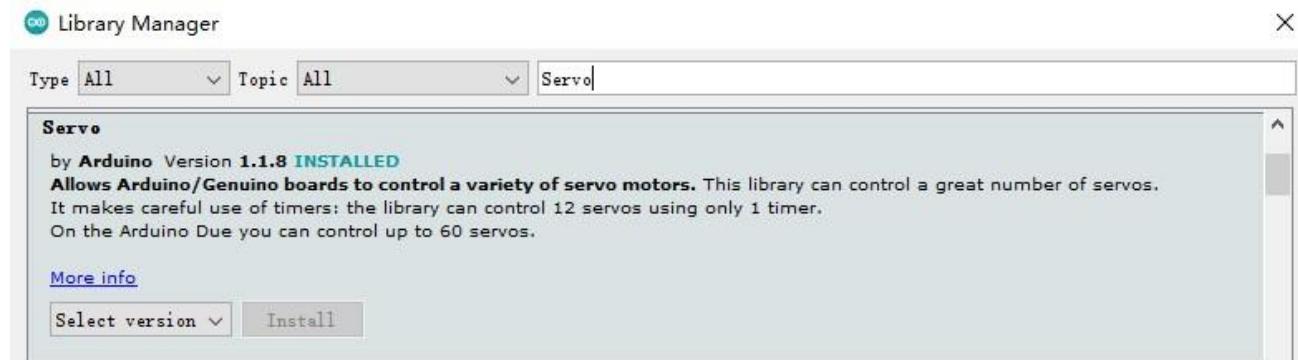

Use the Servo library to control the servo motor and let the servo motor rotate back and forth.

Sketch_18.1_Servo_Sweep

```

Sketch_18.1_Servo_Sweep | Arduino 1.8.19
File Edit Sketch Tools Help
Sketch_18.1_Servo_Sweep
12 int servoPin = 15; // Servo motor pin
13
14 void setup() {
15   myservo.attach(servoPin, 500, 2500); // attaches the servo on servoPin to the servo object
16 }
17 void loop() {
18
19   for (posVal = 0; posVal <= 180; posVal += 1) { // goes from 0 degrees to 180 degrees
20     // in steps of 1 degree
21     myservo.write(posVal); // tell servo to go to position in variable 'pos'
22     delay(15); // waits 15ms for the servo to reach the position
23   }
24   for (posVal = 180; posVal >= 0; posVal -= 1) { // goes from 180 degrees to 0 degrees
25     myservo.write(posVal); // tell servo to go to position in variable 'pos'
26     delay(15); // waits 15ms for the servo to reach the position
27   }
28 }


Done Saving.

Leaving...
Hard resetting via RTS pin...

```

At the bottom of the IDE, there is a status bar with the following text: n0 Disabled, All SSL ciphers (most compatible), 32KB cache + 32KB IRAM (balanced), Use pgm_read macros for IRAM/PROGMEM, 4MB (FS:2MB OTA:~1019KB), 2, v2 Lower Memory, Disabled, None, Only Sketch, 115200 on COM3

Compile and upload the code to ESP8266, the servo will rotate from 0 degrees to 180 degrees and then reverse the direction to make it rotate from 180 degrees to 0 degrees and repeat these actions in an endless loop.

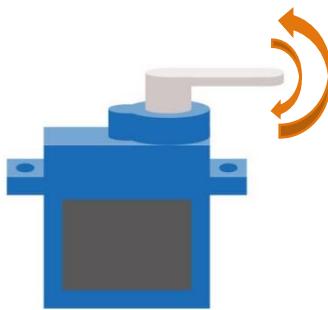

The following is the program code:

```

1 #include <Servo.h>
2
3 Servo myservo; // create servo object to control a servo
4 int posVal = 0; // variable to store the servo position
5 int servoPin = 15; // Servo motor pin
6 void setup() {
7     myservo.attach(servoPin, 500, 2500); // attaches the servo on servoPin to the servo object
8 }
9 void loop() {
10     for (posVal = 0; posVal <= 180; posVal += 1) { // goes from 0 degrees to 180 degrees
11         // in steps of 1 degree
12         myservo.write(posVal); // tell servo to go to position in variable 'pos'
13         delay(15); // waits 15ms for the servo to reach the position
14     }
15     for (posVal = 180; posVal >= 0; posVal -= 1) { // goes from 180 degrees to 0 degrees
16         myservo.write(posVal); // tell servo to go to position in variable 'pos'
17         delay(15); // waits 15ms for the servo to reach the position
18     }
}

```

Servo uses the Servo library, like the following reference to Servo library:

```
1 #include <Servo.h>
```

Servo library provides the Servo class that controls it. Servo class must be instantiated before using:

```
3 Servo myservo; // create servo object to control a servo
```

Set the control servo motor pin, the time range of high level.

```
7 myservo.attach(servoPin, 500, 2500); // attaches the servo on servoPin to the servo object
```

After initializing the servo, you can control the servo to rotate to a specific angle:

```
15 myservo.write(posVal);
```

Reference

```
class Servo
```

Servo class must be instantiated when used, that is, define an object of Servo type, for example:

```
Servo myservo;
```

The function commonly used in the servo class is as follows:

setPeriodHertz(data): Set the frequency of the servo motor.

attach(pin,low,high): Initialize the servo,

pin: the port connected to servo signal line.

low: set the time of high level corresponding to 0 degree.

high: set the time of high level corresponding to 180 degrees.

write(angle): Control servo to rotate to the specified angle.



Project 18.2 Servo Knop

Use a potentiometer to control the servo motor to rotate at any angle.


Component List

ESP8266 x1	USB cable	
A black ESP8266 module with a grey PCB. It has several pins labeled: 5V, 3V3, 3V3, 13, 12, 14, 16, EN, AO, RST, GND, 15, 2, 0, 4, 5, RX, TX. The word "FREENOVE" is printed on the PCB.	Two black USB cables, each with a standard A-type connector and a smaller micro-B or similar connector.	
Breadboard x1		
A top-down view of a breadboard with a grid of 6 columns and 40 rows of holes. Rows are numbered 1 through 40 along the right edge.		
Servo x1	Jumper wire M/M x10	Rotary potentiometer x1
A blue servo motor with a white plastic housing and a metal gear assembly.	A green jumper wire with two black plastic caps on the ends.	A brown rotary potentiometer with a silver shaft and three terminals.


Circuit

Use caution when supplying power to the servo, it should be 5V. Make sure you do not make any errors when connecting the servo to the power supply.

Schematic diagram

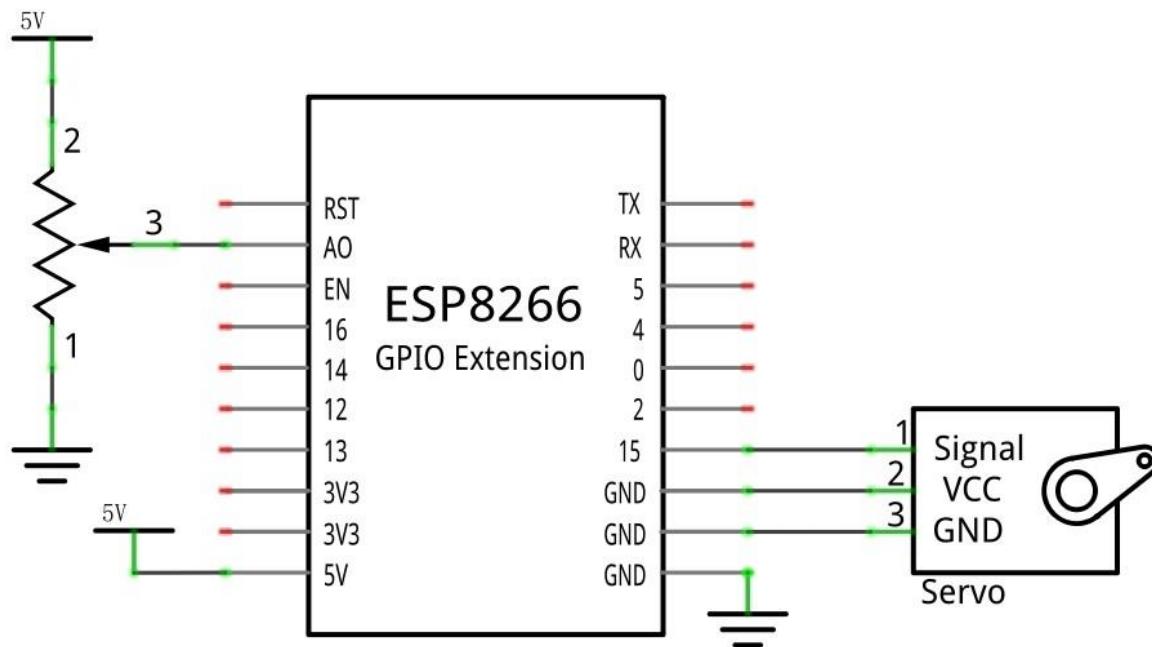


Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

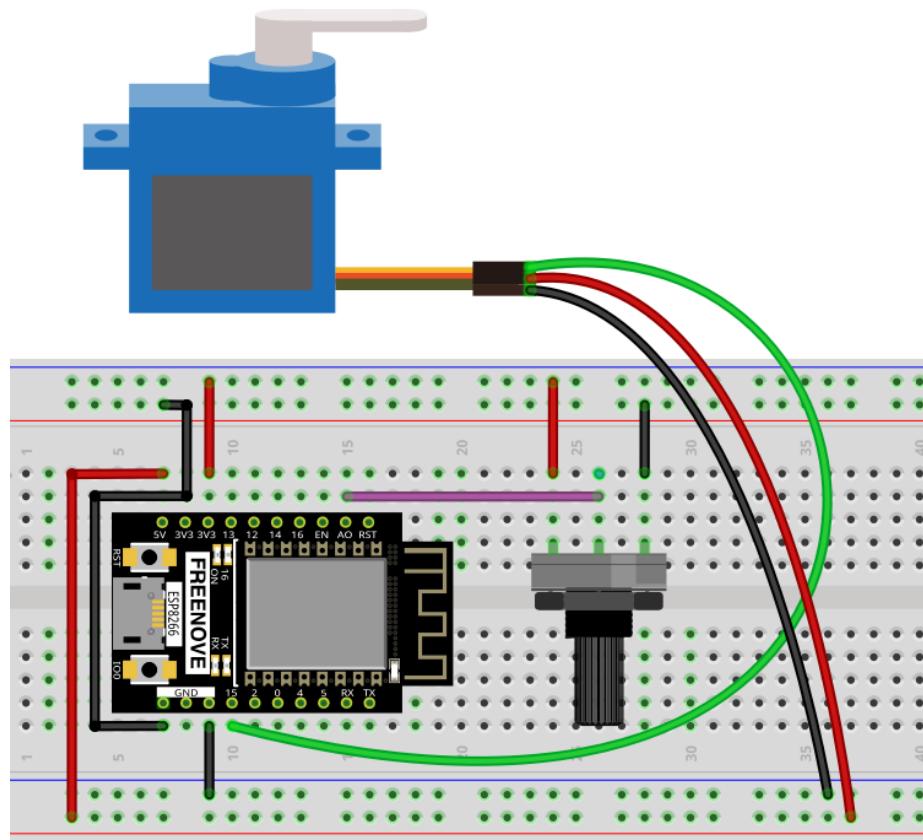

Any concerns? ✉ support@freenove.com

Sketch

Sketch_18.2_Control_Servo_by_Potentiometer

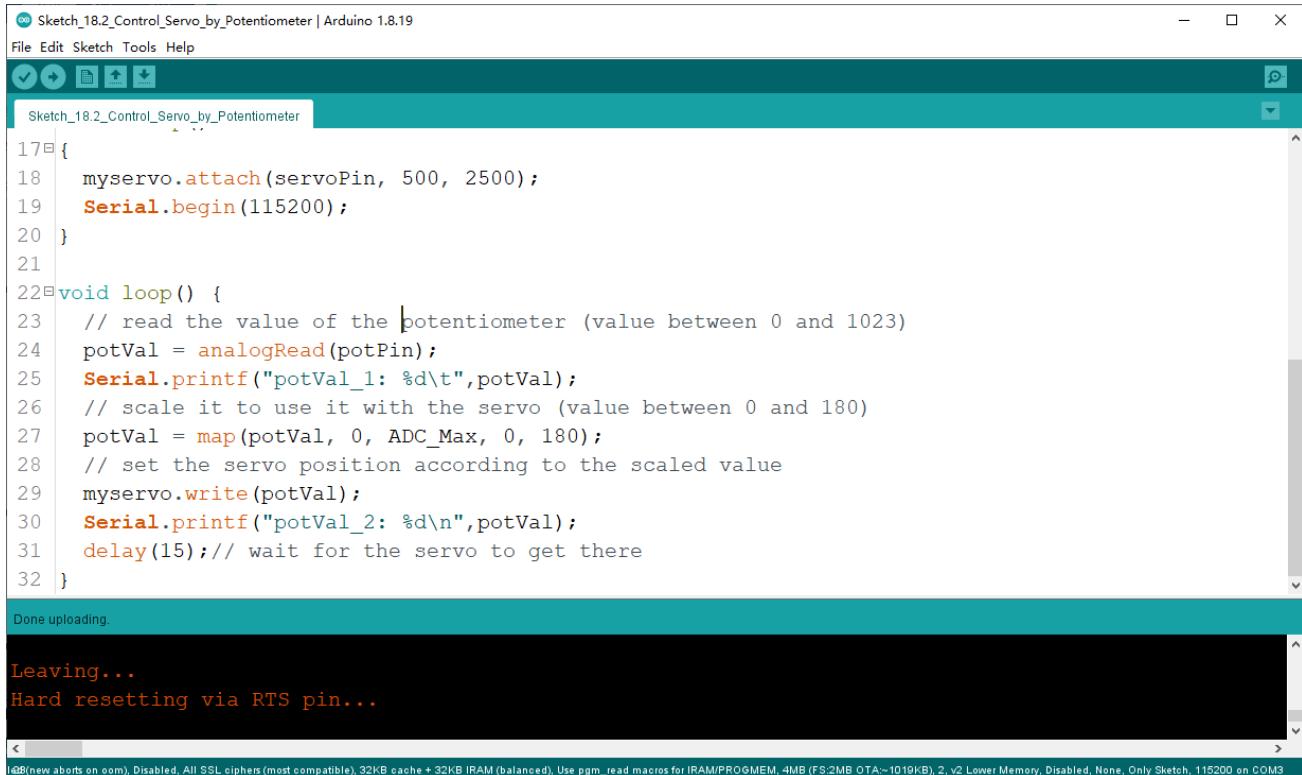

```

Sketch_18.2_Control_Servo_by_Potentiometer | Arduino 1.8.19
File Edit Sketch Tools Help
Sketch_18.2_Control_Servo_by_Potentiometer
17 {
18     myservo.attach(servoPin, 500, 2500);
19     Serial.begin(115200);
20 }
21
22 void loop() {
23     // read the value of the potentiometer (value between 0 and 1023)
24     potVal = analogRead(potPin);
25     Serial.printf("potVal_1: %d\t",potVal);
26     // scale it to use it with the servo (value between 0 and 180)
27     potVal = map(potVal, 0, ADC_Max, 0, 180);
28     // set the servo position according to the scaled value
29     myservo.write(potVal);
30     Serial.printf("potVal_2: %d\n",potVal);
31     delay(15); // wait for the servo to get there
32 }


```

Done uploading.

Leaving...
Hard resetting via RTS pin...

ESP8266(new aborts on dom), Disabled, All SSL ciphers (most compatible), 32KB cache + 32KB IRAM (balanced). Use pgm_read macros for IRAM/PROGMEM, 4MB (FS:2MB OTA:~1019KB), 2, v2 Lower Memory, Disabled, None, Only Sketch, 115200 on COM3

Compile and upload the code to ESP8266, twist the potentiometer back and forth, and the servo motor rotates accordingly.

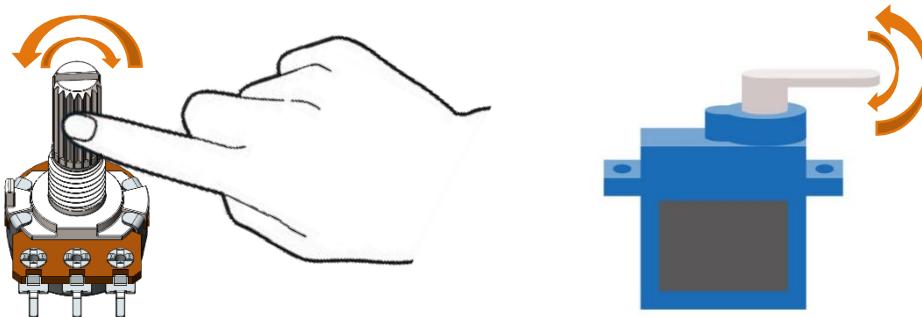

The following is the program code:

```

1 #include <Servo.h>
2 #define ADC_Max 1023    // This is the default ADC max value on the ESP8266 (12 bits ADC
3 width);
4
5 Servo myservo; // create servo object to control a servo
6
7 int servoPin = 15;      // GPIO pin used to connect the servo control (digital out)
8 int potPin = A0;        // GPIO pin used to connect the potentiometer (analog in)

```

```
9 int potVal; //variable to read the value from the analog pin
10
11 void setup()
12 {
13     myservo.attach(servoPin, 500, 2500); // attaches the servo on servoPin to the servo object
14     Serial.begin(115200);
15 }
16
17 void loop() {
18     potVal = analogRead(potPin); // read the value of the potentiometer (value between 0 and
19     Serial.printf("potVal_1: %d\t", potVal);
20     potVal = map(potVal, 0, ADC_Max, 0, 180); // scale it to use it with the servo (value
21     myservo.write(potVal); // set the servo position according to the scaled
22     Serial.printf("potVal_2: %d\n", potVal);
23     delay(15); // wait for the servo to get there
24 }
```








In this experiment, we obtain the ADC value of the potentiometer and store it in potVal. Use map function to convert it into corresponding angle value and we can control the motor to rotate to a specified angle, and print the value via serial.

Chapter 19 Stepper Motor

In this project, we will learn how to drive a stepper motor, and understand its working principle.

Project 19.1 Stepper Motor

Component List

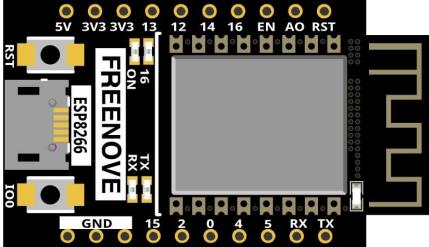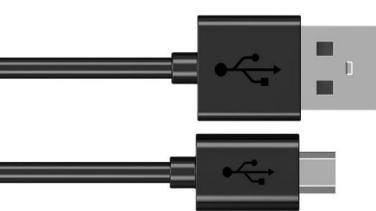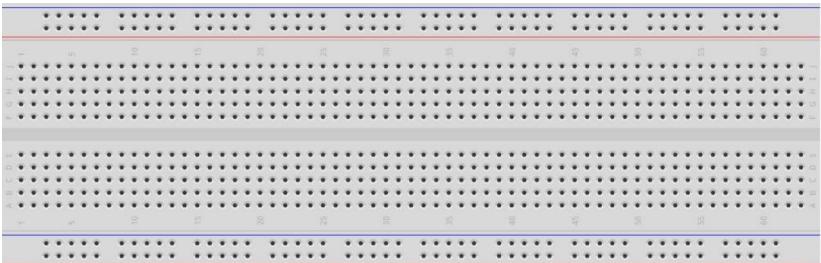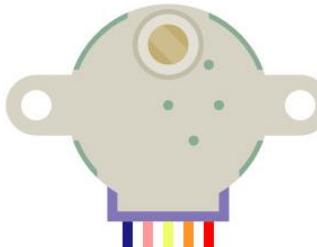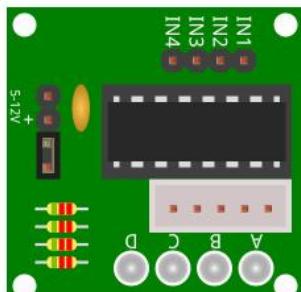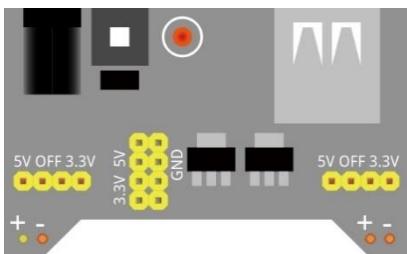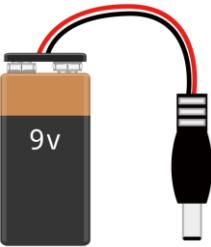
ESP8266 x1	USB cable
	
Breadboard x1	
Stepper Motor x1	ULN2003 Stepper Motor Driver x1
	
Jumper wire F/M x7	
Breadboard Power module x1	9V battery (prepared by yourself) & battery line
	

Any concerns? [✉ support@freenove.com](mailto:support@freenove.com)


Component knowledge

Stepper Motor

Stepper motors are an open-loop control device, which converts an electronic pulse signal into angular displacement or linear displacement. In a non-overload condition, the speed of the motor and the location of the stops depends only on the pulse signal frequency and number of pulses and is not affected by changes in load as with a DC motor. A small four-phase deceleration stepper motor is shown here:

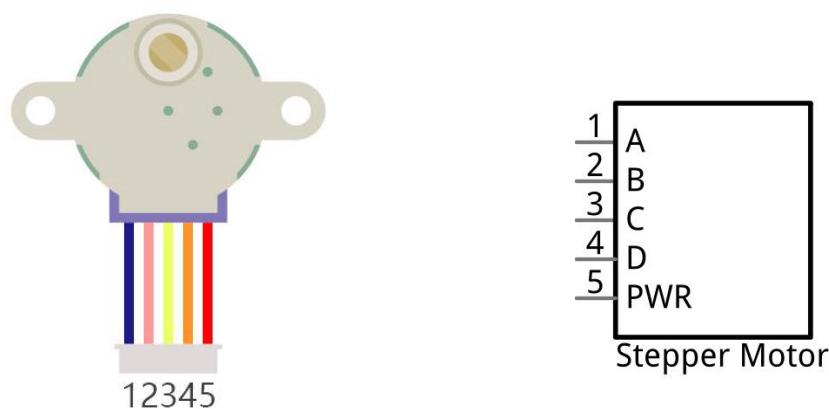


The electronic schematic diagram of a four-phase stepper motor is shown below:

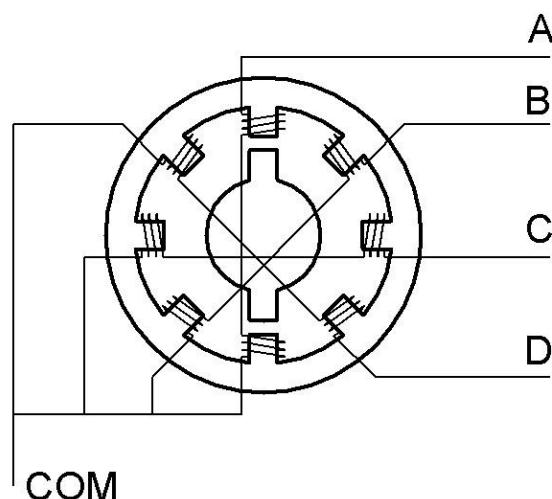

The outside case or housing of the stepper motor is the stator and inside the stator is the rotor. There are a specific number of individual coils, usually an integer multiple of the number of phases the motor has, when the stator is powered ON, an electromagnetic field will be formed to attract a corresponding convex diagonal groove or indentation in the rotor's surface. The rotor is usually made of iron or a permanent magnet. Therefore, the stepper motor can be driven by powering the coils on the stator in an ordered sequence (producing a series of "steps" or stepped movements).

A common driving process is as follows:

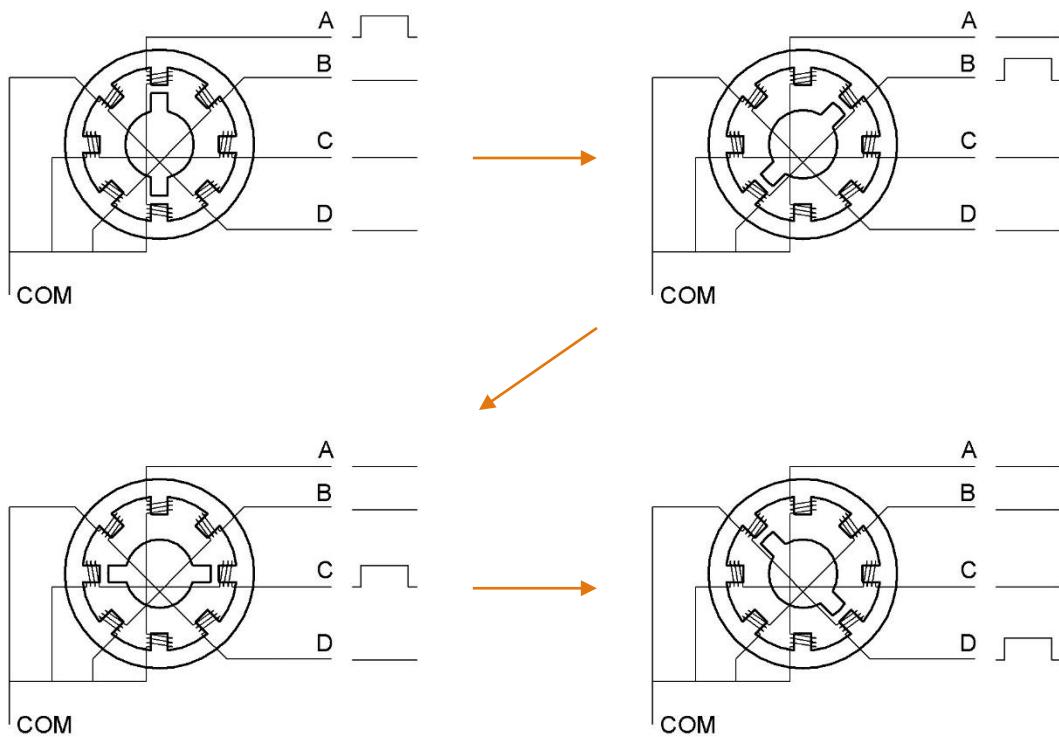


In the course above, the stepper motor rotates a certain angle once, which is called a step. By controlling the number of rotation steps, you can control the stepper motor rotation angle. By controlling the time between two steps, you can control the stepper motor rotation speed. When rotating clockwise, the order of coil powered on is: $A \rightarrow B \rightarrow C \rightarrow D \rightarrow A \rightarrow \dots$. And the rotor will rotate in accordance with the order, step by step down, called four steps four pats. If the coils is powered on in the reverse order, $D \rightarrow C \rightarrow B \rightarrow A \rightarrow D \rightarrow \dots$, the rotor will rotate in anti-clockwise direction.

There are other methods to control stepper motors, such as: connect A phase, then connect A B phase, the stator will be located in the center of A B, which is called a half-step. This method can improve the stability of the stepper motor and reduces noise. The sequence of powering the coils looks like this: $A \rightarrow AB \rightarrow B \rightarrow BC \rightarrow C \rightarrow CD \rightarrow D \rightarrow DA \rightarrow A \rightarrow \dots$, the rotor will rotate in accordance to this sequence at a half-step at a time, called four-steps, eight-part. Conversely, if the coils are powered ON in the reverse order the stepper motor will rotate in the opposite direction.

The stator in the stepper motor we have supplied has 32 magnetic poles. Therefore, to complete one full revolution requires 32 full steps. The rotor (or output shaft) of the stepper motor is connected to a speed reduction set of gears and the reduction ratio is 1:64. Therefore, the final output shaft (exiting the stepper motor's housing) requires $32 \times 64 = 2048$ steps to make one full revolution.

ULN2003 Stepper motor driver


A ULN2003 stepper motor driver is used to convert weak signals into more powerful control signals in order to drive the stepper motor. In the illustration below, the input signal IN1-IN4 corresponds to the output signal A-D, and 4 LEDs are integrated into the board to indicate the state of these signals. The PWR interface can be used as a power supply for the stepper motor. By default, PWR and VCC are connected.

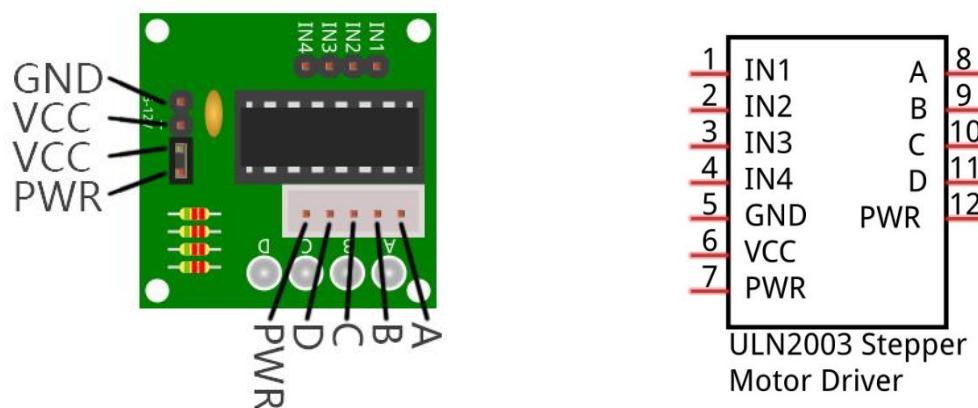


Circuit

When building the circuit, note that rated voltage of the stepper motor is 5V, and we need to use the breadboard power supply independently. Additionally, the breadboard power supply needs to share Ground with ESP8266.

Schematic diagram

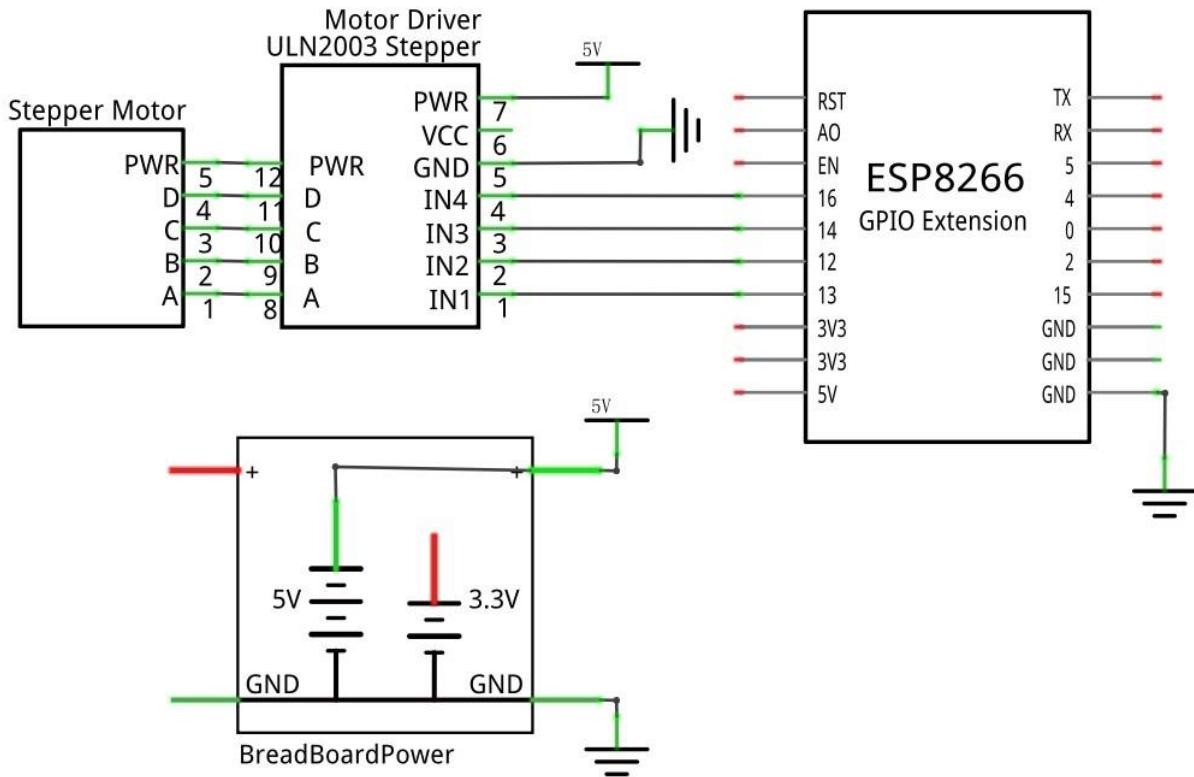

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

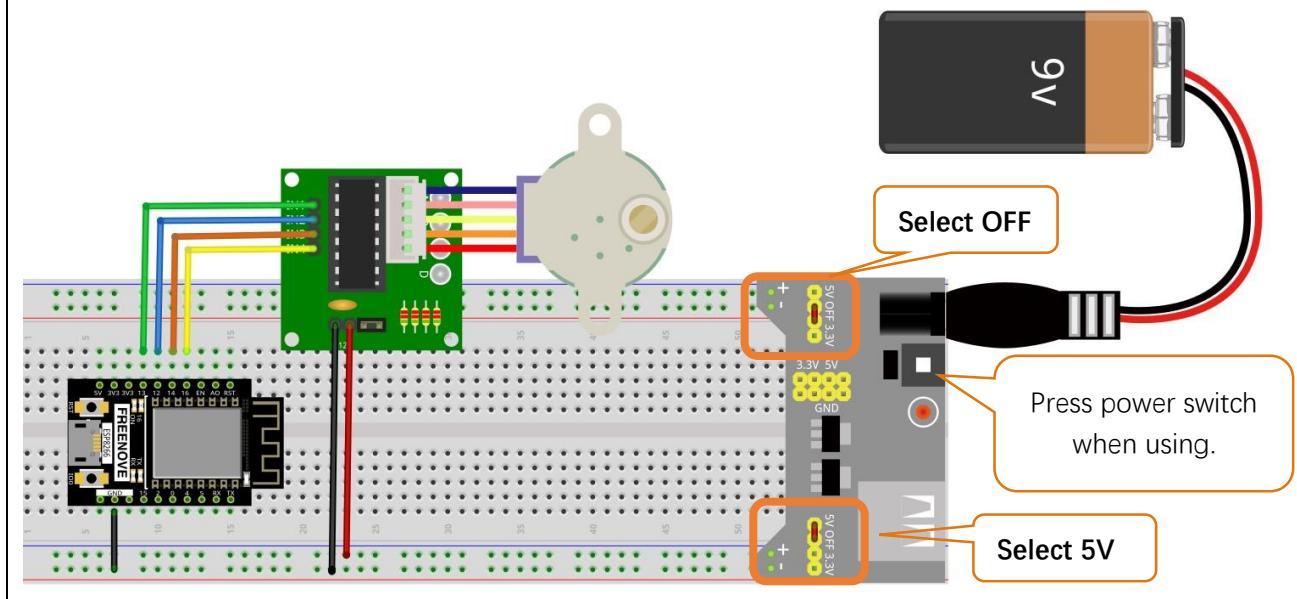

Any concerns?  support@freenove.com

Sketch

This code uses the four-step, four-part mode to drive the stepper motor in the clockwise and anticlockwise directions.

Sketch 19.1 Drive Stepper Motor

Sketch_19.1_Drive_Stepper_Motor | Arduino 1.8.19

File Edit Sketch Tools Help

Sketch_19.1_Drive_Stepper_Motor

```
22 // Rotate a full turn towards another direction
23 moveSteps(false, 32 * 64, 3);
24 delay(1000);
25 }
26
27 //Suggestion: the motor turns precisely when the ms range is between 3 and 20
28 void moveSteps(bool dir, int steps, byte ms) {
29     for (unsigned long i = 0; i < steps; i++) {
30         moveOneStep(dir); // Rotate a step
31         delay(constrain(ms,3,20)); // Control the speed
32     }
33 }
34
35 void moveOneStep(bool dir) {
36     // Define a variable, use four low bit to indicate the state of port
37     static byte out = 0x01;
38     // Decide the shift direction according to the rotation direction
39     if (dir) { // ring shift left
40         out != 0x08 ? out = out << 1 : out = 0x01;
41     }
42     else { // ring shift right
43     }
44 }
```

Done Saving.



wrote 265280 bytes (195256 compressed) at 0x00000000 in 17.2 seconds (effective 125.2 kBPS)

Hash of data verified.

Leaving...

Hard resetting via RTS pin...

Compile and upload the code to the ESP8266, the stepper motor will rotate 360° clockwise and stop for 1s, and then rotate 360° anticlockwise and stop for 1s. And it will repeat this action in an endless loop.

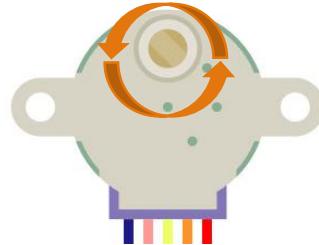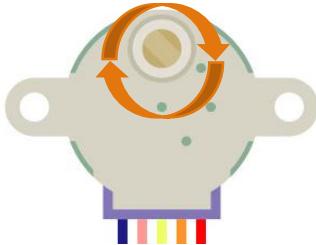

The following is the program code:

```

1 // Connect the port of the stepper motor driver
2 int outPorts[] = {13, 12, 14, 16};
3
4 void setup() {
5     // set pins to output
6     for (int i = 0; i < 4; i++) {
7         pinMode(outPorts[i], OUTPUT);
8     }
9 }
10
11 void loop() {
12     // Rotate a full turn
13     moveSteps(true, 32 * 64, 3);
14     delay(1000);
15     // Rotate a full turn towards another direction
16     moveSteps(false, 32 * 64, 3);
17     delay(1000);
18 }
19
20 //Suggestion: the motor turns precisely when the ms range is between 3 and 20
21 void moveSteps(bool dir, int steps, byte ms) {
22     for (unsigned long i = 0; i < steps; i++) {
23         moveOneStep(dir); // Rotate a step
24         delay(constrain(ms, 3, 20)); // Control the speed
25     }
26 }
27
28 void moveOneStep(bool dir) {
29     // Define a variable, use four low bit to indicate the state of port
30     static byte out = 0x01;
31     // Decide the shift direction according to the rotation direction
32     if (dir) { // ring shift left
33         out != 0x08 ? out = out << 1 : out = 0x01;
34     }
35     else { // ring shift right
36         out != 0x01 ? out = out >> 1 : out = 0x08;
37     }
38 }
```

```

36     out != 0x01 ? out = out >> 1 : out = 0x08;
37 }
38 // Output singal to each port
39 for (int i = 0; i < 4; i++) {
40     digitalWrite(outPorts[i], (out & (0x01 << i)) ? HIGH : LOW);
41 }
42 }
43
44 void moveAround(bool dir, int turns, byte ms) {
45     for(int i=0;i<turns;i++)
46         moveSteps(dir, 32*64, ms);
47 }
48 void moveAngle(bool dir, int angle, byte ms) {
49     moveSteps(dir, (angle*32*64/360), ms);
50 }
```

In this project, we define four pins to drive stepper motor.

```

1 // Connect the port of the stepper motor driver
2 int outPorts[] = {13, 12, 14, 16};
```

moveOneStep Function is used to drive the stepper motor to rotate clockwise or counterclockwise. The parameter "dir" indicates the direction of rotation. If "dir" returns true, the stepper motor rotates clockwise, otherwise the stepper motor rotates counterclockwise.

```

28 void moveOneStep(bool dir) {
...
42 }
```

Define a static byte variable, calculate the value of the variable according to the rotation direction of the motor, and use the keyword static to save the position status of the previous step of the stepper motor. Use the four low bits of the variable to control the output state of the four pins.

```

29 // Define a variable, use four low bit to indicate the state of port
30 static byte out = 0x01;
31 // Decide the shift direction according to the rotation direction
32 if(dir){ // ring shift left
33     out != 0x08 ? out = out << 1 : out = 0x01;
34 }
35 else { // ring shift right
36     out != 0x01 ? out = out >> 1 : out = 0x08;
37 }
```

Make the pin to output corresponding level based on the value of the variable.

```

38 // Output singal to each port
39 for (int i = 0; i < 4; i++) {
40     digitalWrite(outPorts[i], (out & (0x01 << i)) ? HIGH : LOW);
41 }
```



The moveSteps function can control the direction of the stepper motor, the number of rotation steps, and the speed of rotation. According to the previous knowledge, the stepper motor needs 32*64 steps for one revolution. The speed of rotation is determined by the parameter ms. The larger the ms is, the slower the rotation speed is. There is a range for the speed of the motor, which is determined by the motor itself and according to our test, the value of ms is limited to 3-20.

```

20 //Suggestion: the motor turns precisely when the ms range is between 3 and 20
21 void moveSteps(bool dir, int steps, byte ms) {
22     for (unsigned long i = 0; i < steps; i++) {
23         moveOneStep(dir); // Rotate a step
24         delay(constrain(ms, 3, 20)); // Control the speed
25     }
26 }
```

The function moveTurns() is a further package of moveSteps(), which is used to control the stepper motor to rotate a specified number of turns. The parameter "turns" represents the number of turns that need to be rotated.

```

44 void moveAround(bool dir, int turns, byte ms) {
45     for(int i=0;i<turns;i++)
46         moveSteps(dir, 32*64, ms);
47 }
```

The function moveAround () is a further package of moveSteps (), which is used to control the stepper motor to rotate by a specified angle, and the parameter "angle" represents the angle to be rotated.

```

48 void moveAngle(bool dir, int angle, byte ms) {
49     moveSteps(dir, (angle*32*64/360), ms);
50 }
```

In the loop function, call the moveSteps function to loop the stepper motor: rotate clockwise one turn and stop for 1s, then rotate counterclockwise one turn and stop for 1s.

```

11 void loop() {
12     // Rotate a full turn
13     moveSteps(true, 32 * 64, 3);
14     delay(1000);
15     // Rotate a full turn towards another direction
16     moveSteps(false, 32 * 64, 3);
17     delay(1000);
18 }
```




Chapter 20 LCD1602

In this chapter, we will learn about the LCD1602 Display Screen.

Project 20.1 LCD1602

In this section we learn how to use LCD1602 to display something.

Component List

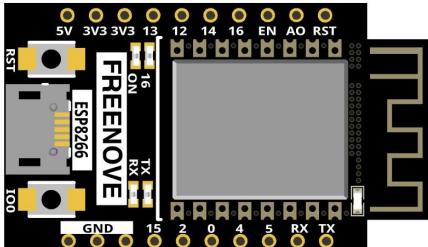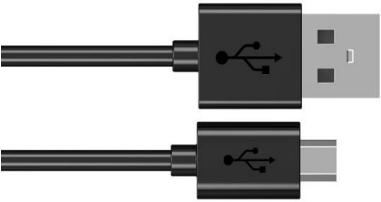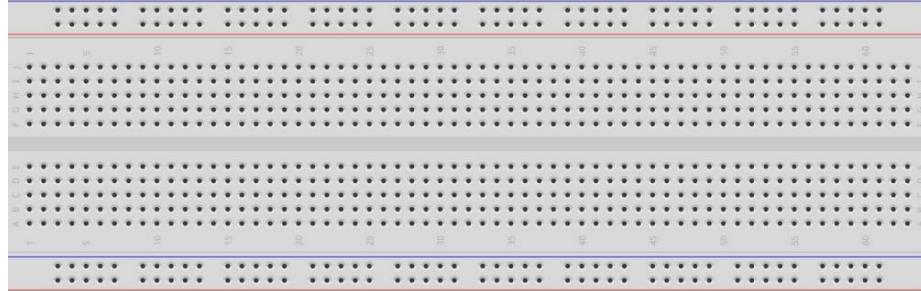ESP8266 x1	USB cable
	
Breadboard x1	
LCD1602 Module x1	Jumper wire F/M x6




Component knowledge

I2C communication


I2C (Inter-Integrated Circuit) is a two-wire serial communication mode, which can be used for the connection of micro controllers and their peripheral equipment. Devices using I2C communication must be connected to the serial data (SDA) line, and serial clock (SCL) line (called I2C bus). Each device has a unique address and can be used as a transmitter or receiver to communicate with devices connected to the bus.

LCD1602 communication

The LCD1602 display screen can display 2 lines of characters in 16 columns. It is capable of displaying numbers, letters, symbols, ASCII code and so on. As shown below is a monochrome LCD1602 display screen along with its circuit pin diagram.

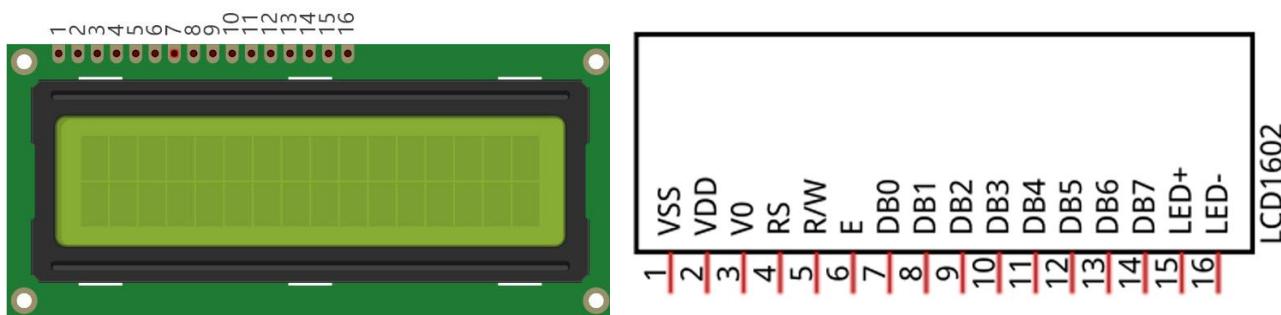


I2C LCD1602 display screen integrates a I2C interface, which connects the serial-input & parallel-output module to the LCD1602 display screen. This allows us to only use 4 lines to operate the LCD1602.

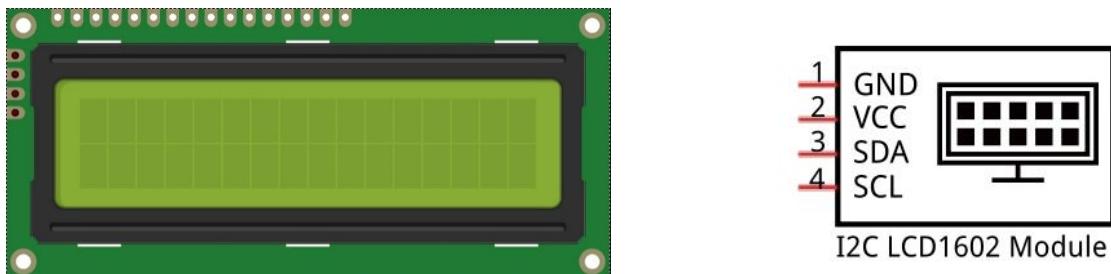


The serial-to-parallel IC chip used in this module is PCF8574T (PCF8574AT), and its default I2C address is 0x27(0x3F).

Below is the PCF8574 pin schematic diagram and the block pin diagram:

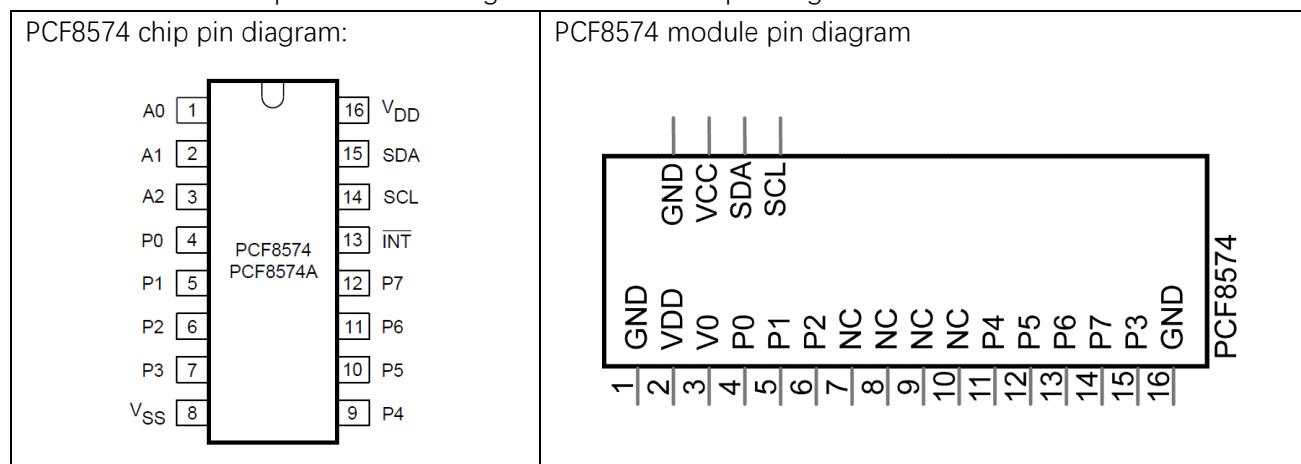


PCF8574 module pin and LCD1602 pin are corresponding to each other and connected with each other:

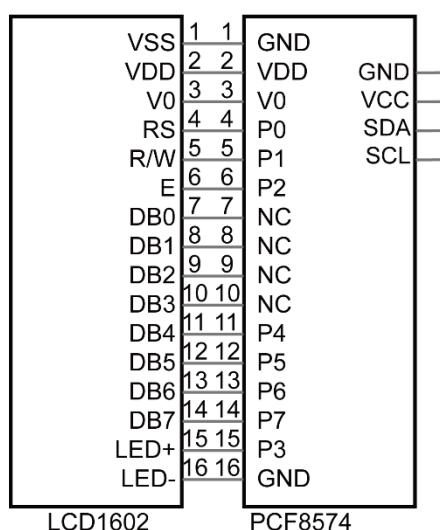


So we only need 4 pins to control the 16 pins of the LCD1602 display screen through the I2C interface. In this project, we will use the I2C LCD1602 to display some static characters and dynamic variables.

Circuit

Schematic diagram

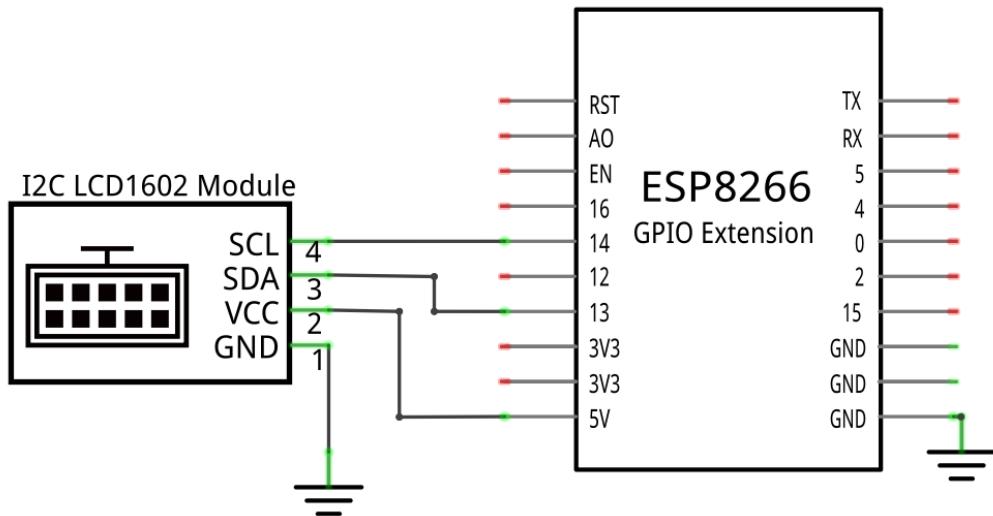


Hardware connection. If you need any support, please free to contact us via: support@freenove.com

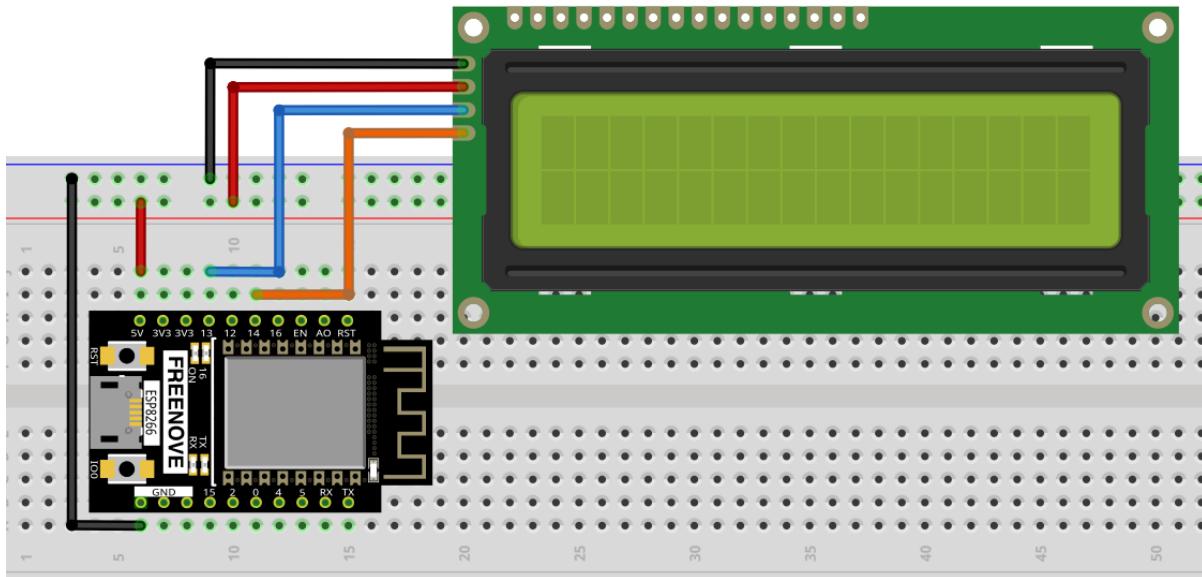

Sketch

How to install the library

We use the third party library LiquidCrystal I2C. If you haven't installed it yet, please do so before learning. The steps to add third-party Libraries are as follows: open arduino->Sketch->Include library-> Manage libraries. Enter " LiquidCrystal I2C" in the search bar and select " LiquidCrystal I2C " for installation.

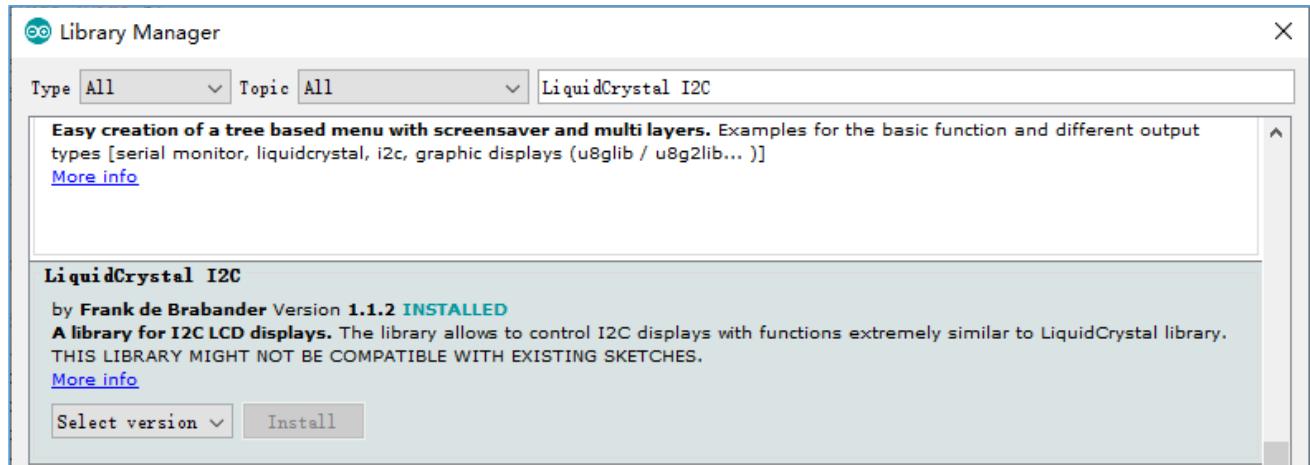

Use I2C LCD 1602 to display characters and variables.



Sketch_20.1_Display_the_string_on_LCD1602

Sketch_20.1_Display_the_string_on_LCD1602 | Arduino 1.8.13 Hourly Build 2020/02/19 03:33

File Edit Sketch Tools Help

Sketch_20.1_Display_the_string_on_LCD1602

```

1 //*****
2   Filename      : Drive LiquidCrystal I2C to display characters
3   Description   : I2C is used to control the display characters of LCD1602.
4   Author        : www.freenove.com
5   Modification: 2020-3-4
6 ****
7 #include <LiquidCrystal_I2C.h>
8 #include <Wire.h>
9
10 #define SDA 13           //Define SDA pins
11 #define SCL 14           //Define SCL pins
12
13 /*
14   * note:If lcd1602 uses PCF8574T, IIC's address is 0x27,
15   *       or lcd1602 uses PCF8574AT, IIC's address is 0x3F.
16 */
17 LiquidCrystal_I2C lcd(0x27,16,2);
18 void setup() {
19   Wire.begin(SDA, SCL);          // attach the IIC pin
20   lcd.init();                   // LCD driver initialization
21   lcd.backlight();              // Open the backlight
22   lcd.setCursor(0,0);           // Move the cursor to row 0, column 0
23   lcd.print("hello, world!");    // The print content is displayed on the LCD
24 }
25
26 void loop() {
27   lcd.setCursor(0,1);           // Move the cursor to row 1, column 0
28   lcd.print("Counter:");        // The count is displayed every second
29   lcd.print(millis() / 1000);
30   delay(1000);
31 }
```

Done uploading.

Leaving...
Hard resetting via RTS pin...

Compile and upload the code to ESP8266 and the LCD1602 displays characters.



If you cannot see anything on the display or the display is not clear, try rotating the white knob on back of LCD1602 slowly, which adjusts the contrast, until the screen can display clearly.



The following is the program code:

```
1 #include <LiquidCrystal_I2C.h>
2 #include <Wire.h>
3
4 #define SDA 13           //Define SDA pins
5 #define SCL 14           //Define SCL pins
6
7 /*
8  * note: If lcd1602 uses PCF8574T, IIC's address is 0x27,
9  *       or lcd1602 uses PCF8574AT, IIC's address is 0x3F.
10 */
11 LiquidCrystal_I2C lcd(0x27, 16, 2);
12
13 void setup() {
14     Wire.begin(SDA, SCL);          // attach the IIC pin
15     lcd.init();                   // LCD driver initialization
16     lcd.backlight();              // Turn on the backlight
17     lcd.setCursor(0, 0);          // Move the cursor to row 0, column 0
18     lcd.print("hello, world! ");   // The print content is displayed on the LCD
19 }
20
21 void loop() {
22     lcd.setCursor(0, 1);          // Move the cursor to row 1, column 0
23     lcd.print("Counter:");        // The count is displayed every second
24     lcd.print(millis() / 1000);
25     delay(1000);
26 }
```

Include header file of Liquid Crystal Display (LCD)1602 and I2C.

```
1 #include <LiquidCrystal_I2C.h>
2 #include <Wire.h>
```

Instantiate the I2C LCD1602 screen. It should be noted here that if your LCD driver chip uses PCF8574T, set the I2C address to 0x27, and if uses PCF8574AT, set the I2C address to 0x3F.

```
11 LiquidCrystal_I2C lcd(0x27, 16, 2);
```

Initialize I2C and set its pins as 13,14. And then initialize LCD1602 and turn on the backlight of LCD.

```
14 Wire.begin(SDA, SCL);           // attach the IIC pin
15 lcd.init();                   // LCD driver initialization
16 lcd.backlight();              // Turn on the backlight
```

Move the cursor to the first row, first column, and then display the character.

```
17 lcd.setCursor(0, 0);          // Move the cursor to row 0, column 0
18 lcd.print("hello, world!");    // The print content is displayed on the LCD
```

Print the number on the second line of LCD1602.

```
21 void loop() {
22     lcd.setCursor(0, 1);          // Move the cursor to row 1, column 0
23     lcd.print("Counter:");       // The count is displayed every second
24     lcd.print(millis() / 1000);
25     delay(1000);
26 }
```

Reference

class LiquidCrystal

The LiquidCrystal class can manipulate common LCD screens. The first step is defining an object of LiquidCrystal, for example:

```
LiquidCrystal_I2C lcd(0x27, 16, 2);
```

Instantiate the Lcd1602 and set the I2C address to 0x27, with 16 columns per row and 2 rows per column.

```
init();
```

Initializes the Lcd1602's device

```
backlight();
```

Turn on Lcd1602's backlight.

```
setCursor(column, row);
```

Sets the screen's column and row.

column: The range is 0 to 15.

row: The range is 0 to 1.

```
print(String);
```

Print the character string on Lcd1602




Chapter 21 Ultrasonic Ranging

In this chapter, we learn a module which use ultrasonic to measure distance, HC SR04.

Project 21.1 Ultrasonic Ranging

In this project, we use ultrasonic ranging module to measure distance, and print out the data in the terminal.

Component List

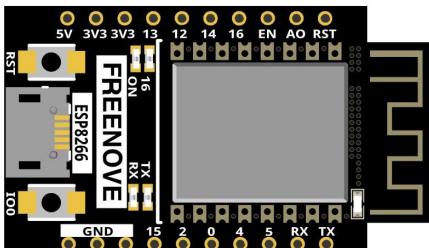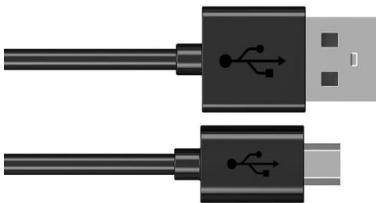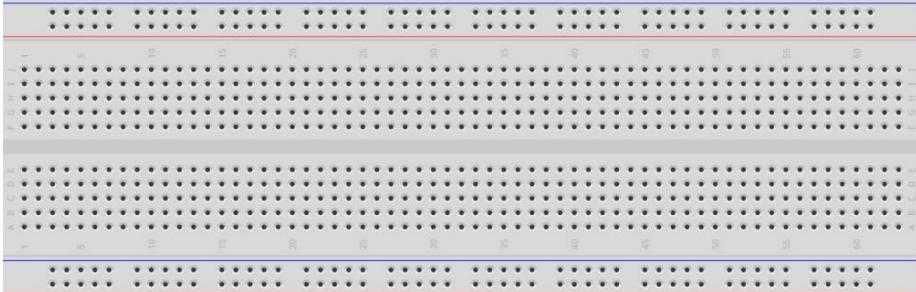
ESP8266 x1	USB cable
	
Breadboard x1	
Jumper wire F/M x4	HC SR04 x1

Component Knowledge


The ultrasonic ranging module uses the principle that ultrasonic waves will be sent back when encounter obstacles. We can measure the distance by counting the time interval between sending and receiving of the

Any concerns? [✉ support@freenove.com](mailto:support@freenove.com)

ultrasonic waves, and the time difference is the total time of the ultrasonic wave's journey from being transmitted to being received. Because the speed of sound in air is a constant, about $v=340\text{m/s}$, we can calculate the distance between the ultrasonic ranging module and the obstacle: $s=vt/2$.

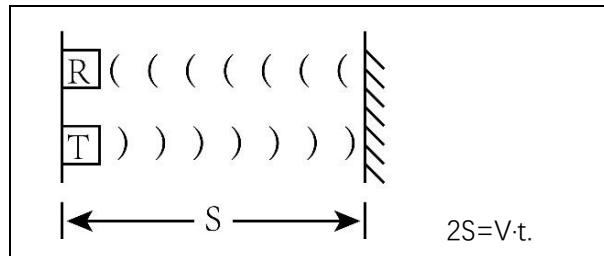

The HC-SR04 ultrasonic ranging module integrates both an ultrasonic transmitter and a receiver. The transmitter is used to convert electrical signals (electrical energy) into high frequency (beyond human hearing) sound waves (mechanical energy) and the function of the receiver is opposite of this. The picture and the diagram of the HC-SR04 ultrasonic ranging module are shown below:

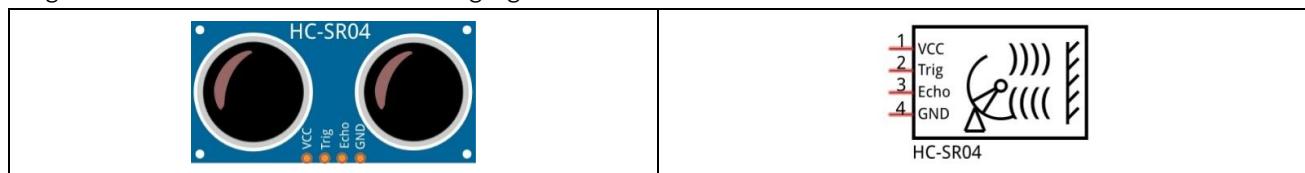

Pin description:

Pin	Description
VCC	power supply pin
Trig	trigger pin
Echo	Echo pin
GND	GND

Technical specs:


Working voltage: 5V

Working current: 12mA

Minimum measured distance: 2cm

Maximum measured distance: 200cm

Instructions for use: output a high-level pulse in Trig pin lasting for least 10us, the module begins to transmit ultrasonic waves. At the same time, the Echo pin is pulled up. When the module receives the returned ultrasonic waves from encountering an obstacle, the Echo pin will be pulled down. The duration of high level in the Echo pin is the total time of the ultrasonic wave from transmitting to receiving, $s=vt/2$.

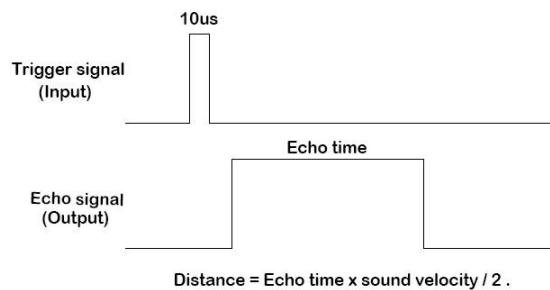


Circuit


Note that the voltage of ultrasonic module is 5V in the circuit.

Schematic diagram

Any concerns? [✉ support@freenove.com](mailto:support@freenove.com)

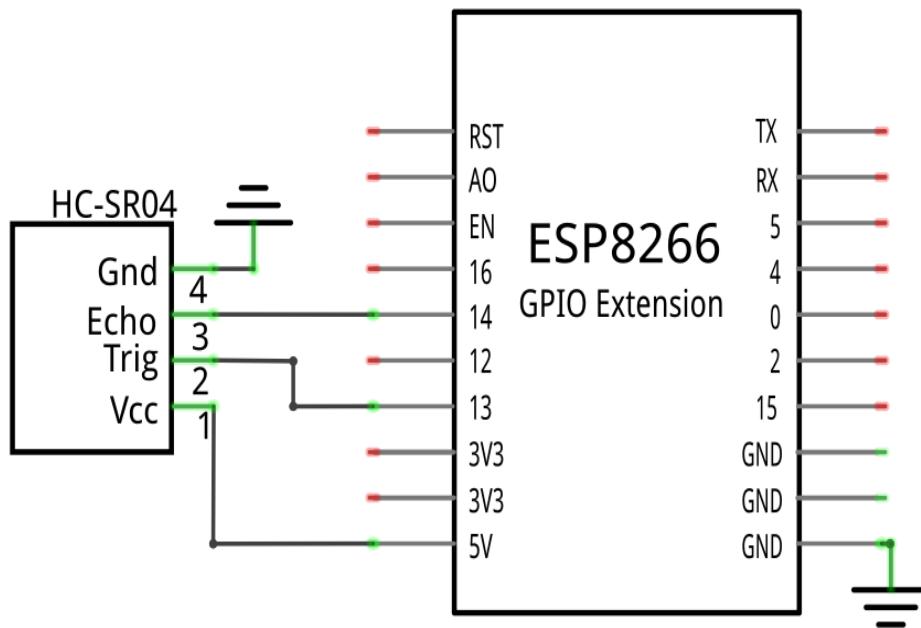

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

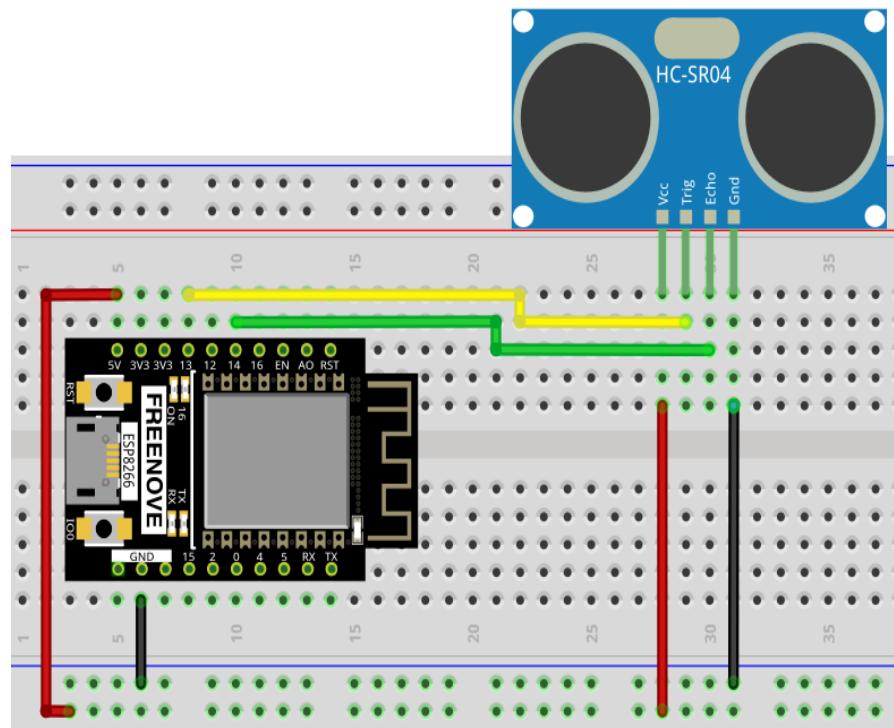



Sketch

Sketch_21.1_Ultrasonic_Ranging


The screenshot shows the Arduino IDE interface with the following details:

- Title Bar:** Sketch_21.1_Ultrasonic_Ranging | Arduino 1.8.13 Hourly Build 2020/02/19 03:33
- Menu Bar:** File Edit Sketch Tools Help
- Toolbar:** Standard toolbar icons for file operations.
- Sketch Area:** The code for `Sketch_21.1_Ultrasonic_Ranging`. The code is as follows:

```
1 // ****
2   Filename      : Ultrasonic Ranging
3   Description   : Use the ultrasonic module to measure the distance.
4   Author        : www.freenove.com
5   Modification  : 2020-3-4
6 ****
7 #define trigPin 13 // define TrigPin
8 #define echoPin 14 // define EchoPin.
9 #define MAX_DISTANCE 700 // Maximum sensor distance is rated at 400-500cm.
10 //timeOut= 2*MAX_DISTANCE /100 /340 *1000000 = MAX_DISTANCE*58.8
11 float timeOut = MAX_DISTANCE * 60;
12 int soundVelocity = 340; // define sound speed=340m/s
13
14 void setup() {
15   pinMode(trigPin,OUTPUT);// set trigPin to output mode
16   pinMode(echoPin,INPUT); // set echoPin to input mode
17   Serial.begin(115200); // Open serial monitor at 115200 baud to see ping results.
18 }
19
20 void loop() {
21   delay(100); // Wait 100ms between pings (about 20 pings/sec).
22   Serial.print("Distance: ");
23   Serial.print(getSonar()); // Send ping, get distance in cm and print result
24   Serial.println("cm");
25 }
26
27 float getSonar() {
28   unsigned long pingTime;
29   float distance;
30   // make trigPin output high level lasting for 10us to trigger HC_SR04
31   digitalWrite(trigPin, HIGH);
32   delayMicroseconds(10);
33   digitalWrite(trigPin, LOW);
34   // Wait HC-SR04 returning to the high level and measure out this waiting time
35   pingTime = pulseIn(echoPin, HIGH, timeOut);
36   // calculate the distance according to the time
37   distance = (float)pingTime * soundVelocity / 2 / 10000;
38   return distance; // return the distance value
39 }
```

Status Bar: Done Saving.
Leaving...
Hard resetting via RTS pin...
30 ESP32 Wrover Module on COM6

Download the code to ESP8266, open the serial port monitor, set the baud rate to 115200 and you can use it to measure the distance between the ultrasonic module and the object. As shown in the following figure:

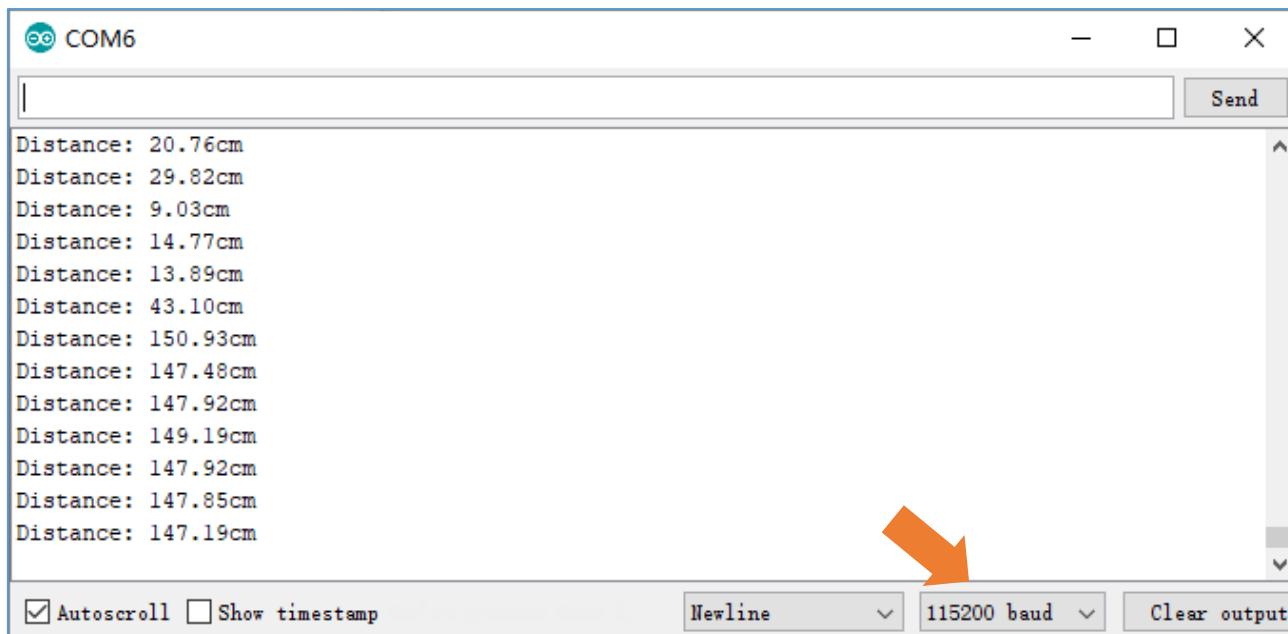

The following is the program code:

```
1 #define trigPin 13 // define trigPin
2 #define echoPin 14 // define echoPin.
3 #define MAX_DISTANCE 700 // Maximum sensor distance is rated at 400~500cm.
4 //timeOut= 2*MAX_DISTANCE /100 /340 *1000000 = MAX_DISTANCE*58.8
5 float timeOut = MAX_DISTANCE * 60;
6 int soundVelocity = 340; // define sound speed=340m/s
7
8 void setup() {
9     pinMode(trigPin, OUTPUT); // set trigPin to output mode
10    pinMode(echoPin, INPUT); // set echoPin to input mode
11    Serial.begin(115200); // Open serial monitor at 115200 baud to see ping results.
12 }
13
14 void loop() {
15     delay(100); // Wait 100ms between pings (about 20 pings/sec).
16     Serial.printf("Distance: ");
17     Serial.print(getSonar()); // Send ping, get distance in cm and print result
18     Serial.println("cm");
19 }
20
21 float getSonar() {
22     unsigned long pingTime;
23     float distance;
24     // make trigPin output high level lasting for 10us to trigger HC_SR04
25     digitalWrite(trigPin, HIGH);
```

```

26   delayMicroseconds(10);
27   digitalWrite(trigPin, LOW);
28   // Wait HC-SR04 returning to the high level and measure out this waiting time
29   pingTime = pulseIn(echoPin, HIGH, timeOut);
30   // calculate the distance according to the time
31   distance = (float)pingTime * soundVelocity / 2 / 10000;
32   return distance; // return the distance value
33 }
```

First, define the pins and the maximum measurement distance.

```

1 #define trigPin 13 // define trigPin
2 #define echoPin 14 // define echoPin.
3 #define MAX_DISTANCE 700 // Maximum sensor distance is rated at 400~500cm.
```

If the module does not return high level, we cannot wait for this forever, so we need to calculate the time period for the maximum distance, that is, time Out. timeOut= 2*MAX_DISTANCE/100/340*1000000. The result of the constant part in this formula is approximately 58.8.

```
5 float timeOut = MAX_DISTANCE * 60;
```

Subfunction getSonar () function is used to start the ultrasonic module to begin measuring, and return the measured distance in cm units. In this function, first let trigPin send 10us high level to start the ultrasonic module. Then use pulseIn () to read the ultrasonic module and return the duration time of high level. Finally, the measured distance according to the time is calculated.

```

21 float getSonar() {
22     unsigned long pingTime;
23     float distance;
24     // make trigPin output high level lasting for 10 μs to trigger HC_SR04?
25     digitalWrite(trigPin, HIGH);
26     delayMicroseconds(10);
27     digitalWrite(trigPin, LOW);
28     // Wait HC-SR04 returning to the high level and measure out this waiting time
29     pingTime = pulseIn(echoPin, HIGH, timeOut);
30     // calculate the distance according to the time
31     distance = (float)pingTime * soundVelocity / 2 / 10000;
32     return distance; // return the distance value
33 }
```

Lastly, in loop() function, get the measurement distance and display it continually.

```

14 void loop() {
15     delay(100); // Wait 100ms between pings (about 20 pings/sec).
16     Serial.printf("Distance: ");
17     Serial.print(getSonar()); // Send ping, get distance in cm and print result
18     Serial.println("cm");
19 }
```

About function **pulseIn()**:

int pulseIn(int pin, int level, int timeout);

pin: the number of the Arduino pin on which you want to read the pulse. Allowed data types: int.

value: type of pulse to read: either HIGH or LOW. Allowed data types: int.

timeout (optional): the number of microseconds to wait for the pulse to start; default is one second.



Project 21.2 Ultrasonic Ranging


Component List and Circuit

Component List and Circuit are the same as the previous section.

Sketch

How to install the library

We use the third party library UltrasonicSensor. If you haven't installed it yet, please do so before learning. The steps to add third-party Libraries are as follows: open arduino->Sketch->Include library-> Manage libraries. Enter "UltrasonicSensor" in the search bar and select "UltrasonicSensor" for installation. Refer to the following operations:

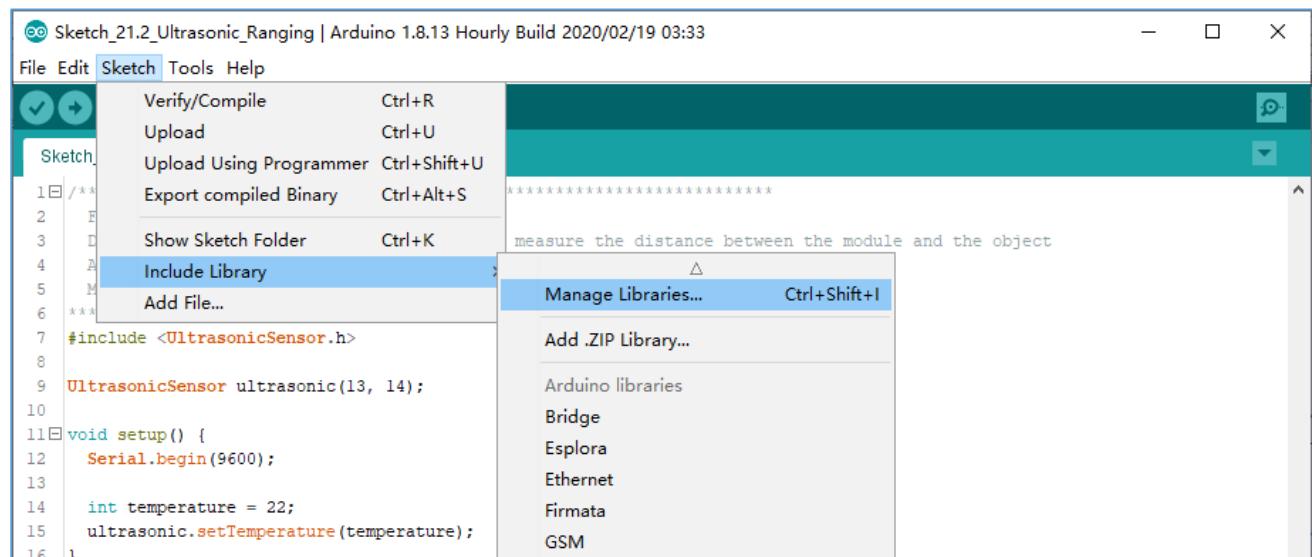

Sketch_21.2_Ultrasonic_Ranging

The screenshot shows the Arduino IDE interface. The top bar displays "Sketch_21.2_Ultrasonic_Ranging | Arduino 1.8.13 Hourly Build 2020/02/19 03:33". The menu bar includes File, Edit, Sketch, Tools, and Help. Below the menu is a toolbar with icons for file operations. The main area contains the C++ code for ultrasonic ranging:

```

1 // ****
2   Filename    : Ultrasonic Ranging
3   Description : Use the ultrasonic module to measure the distance.
4   Author      : www.freenove.com
5   Modification: 2020-3-4
6 ****
7 #include <UltrasonicSensor.h>
8
9 UltrasonicSensor ultrasonic(13, 14);
10
11 void setup() {
12   Serial.begin(115200);
13
14   int temperature = 22;
15   ultrasonic.setTemperature(temperature);
16 }
17
18 void loop() {
19   int distance = ultrasonic.distanceInCentimeters();
20   Serial.printf("Distance: %dcm\n", distance);
21   delay(300);
22 }

```

The status bar at the bottom indicates "Done uploading." and "Leaving... Hard resetting via RTS pin...".

Download the code to ESP8266, open the serial port monitor, set the baud rate to 115200. Use the ultrasonic module to measure distance. As shown in the following figure:

The screenshot shows the Serial Monitor window titled "COM6". The text area displays a series of distance measurements in centimeters. An orange arrow points to the "baud" dropdown menu at the bottom right of the window.

Distance
20cm
120cm
56cm
125cm
22cm
22cm
90cm
122cm
16cm
20cm
9cm
9cm

At the bottom of the window, there are several controls: "Autoscroll" (checked), "Show timestamp" (unchecked), "Newline" (dropdown), "115200 baud" (selected), and "Clear output".

The following is the program code:

```

1 #include <UltrasonicSensor.h>
2 //Attach the trigger and echo pins to pins 13 and 14 of esp8266
3 UltrasonicSensor ultrasonic(13, 14);
4
5 void setup() {
6     Serial.begin(115200);
7     //set the speed of sound propagation according to the temperature to reduce errors
8     int temperature = 22; //Setting ambient temperature
9     ultrasonic.setTemperature(temperature);
10 }
11
12 void loop() {
13     int distance = ultrasonic.distanceInCentimeters();
14     Serial.printf("Distance: %dcm\n", distance);
15     delay(300);
16 }
```

First, add UltrasonicSensor library.

```
1 #include <UltrasonicSensor.h>
```

Define an ultrasonic object and associate the pins.

```
3 UltrasonicSensor ultrasonic(13, 14);
```

Set the ambient temperature to make the module measure more accurately.

```
9 ultrasonic.setTemperature(temperature);
```

Use the distanceInCentimeters function to get the distance measured by the ultrasound and print it out through the serial port.

```

12 void loop() {
13     int distance = ultrasonic.distanceInCentimeters();
14     Serial.printf("Distance: %dcm\n", distance);
15     delay(300);
16 }
```

Reference

class UltrasonicSensor

class UltrasonicSensor must be instantiated when used, that is, define an object of Servo type, for example:

UltrasonicSensor ultrasonic(13, 14);

setTemperature(value): The speed of sound propagation is different at different temperatures. In order to get more accurate data, this function needs to be called. **value** is the temperature value of the current environment.

distanceInCentimeters(): The ultrasonic distance acquisition function returns the value in centimeters.

distanceInMillimeters(): The ultrasonic distance acquisition function returns the value in millimeter.




Chapter 22 Matrix Keypad

Earlier we learned about a single push button switch. In this chapter, we will learn about matrix keyboards, which integrates a number of push button switches as keys for the purposes of input.

Project 22.1 Matrix Keypad

In this project, we will attempt to get every key code on the matrix keypad to work.


Component List

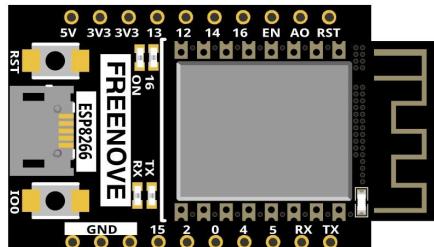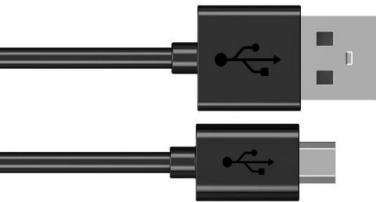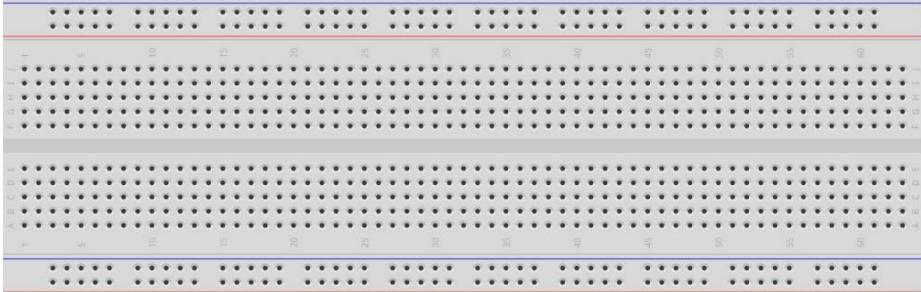ESP8266 x1	USB cable
	
Breadboard x1	
Jumper wire M/M x8	4x4 Matrix Keypad x1 


Component knowledge

4x4 Matrix Keypad

A keypad matrix is a device that integrates a number of keys in one package. As is shown below, a 4x4 keypad matrix integrates 16 keys:

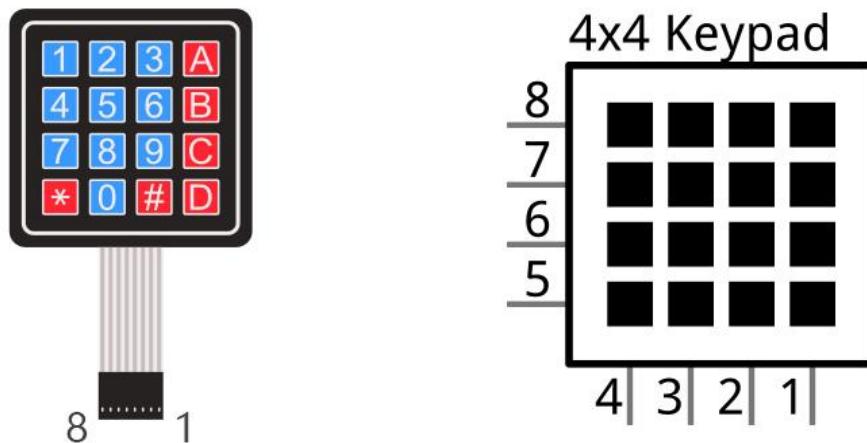


Similar to the integration of a LED matrix, the 4x4 keypad matrix has each row of keys connected with one pin and this is the same for the columns. Such efficient connections reduce the number of processor ports required. The internal circuit of the Keypad Matrix is shown below.

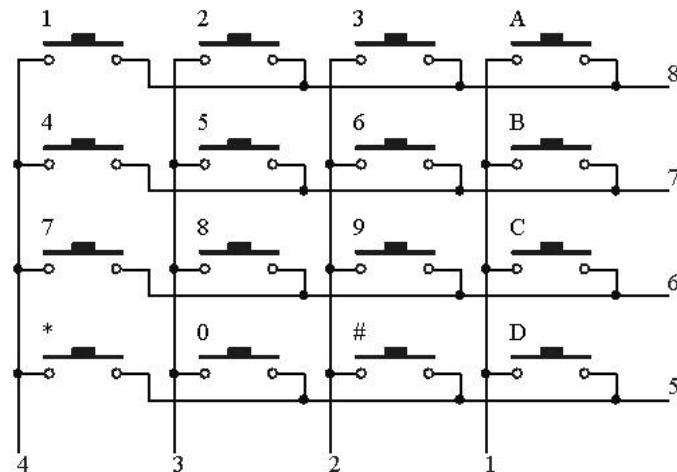


The usage is similar to the LED matrix, using a row or column scanning method to detect the state of each key's position by column and row. Take column scanning method as an example, send low level to the first 1 column (Pin1), detect level state of row 5, 6, 7, 8 to judge whether the key A, B, C, D are pressed. Then send low level to column 2, 3, 4 in turn to detect whether other keys are pressed. Therefore, you can get the state of all of the keys.

Circuit

Schematic diagram

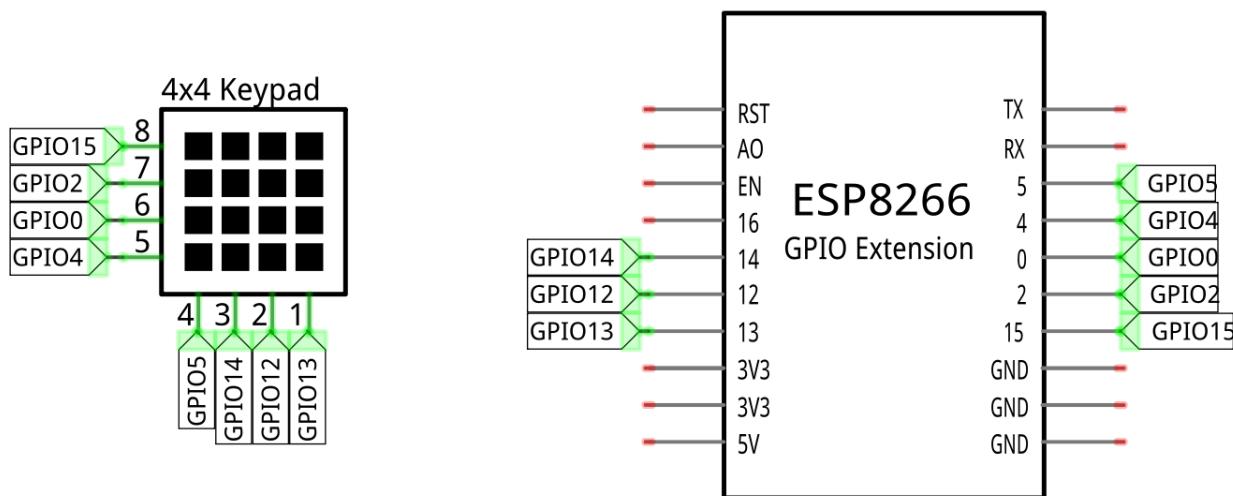

Hardware connection. If you need any support, please free to contact us via: support@freenove.com

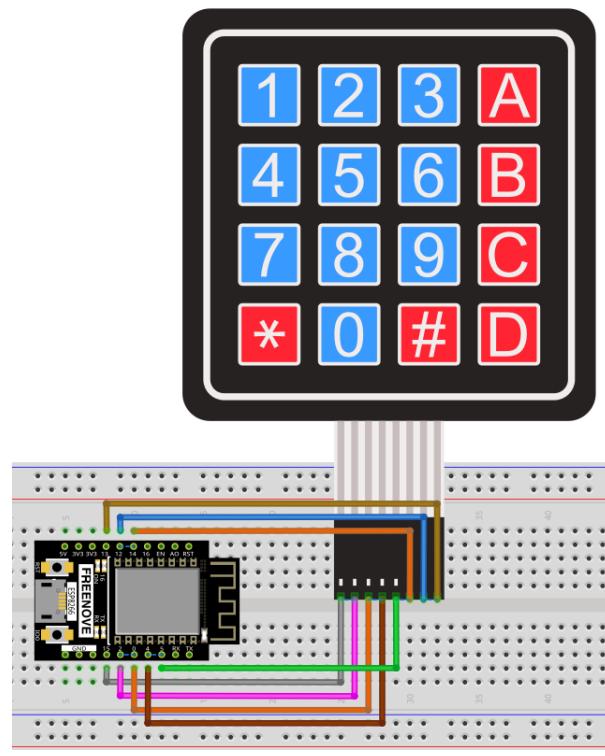

Sketch

This code is used to obtain all key codes of the 4x4 matrix keypad, when one of the keys is pressed, the key code will be printed out via serial port.


How to install the library

We use the third party library Keypad. If you haven't installed it yet, please do so before learning. The steps to add third-party Libraries are as follows: open arduino->Sketch->Include library-> Manage libraries.


Enter " Keypad" in the search bar and select " Keypad " for installation.

Refer to the following operations:


Please make sure you have the following Keypad libraries installed, other Keypad libraries may prevent your experiment from working properly.

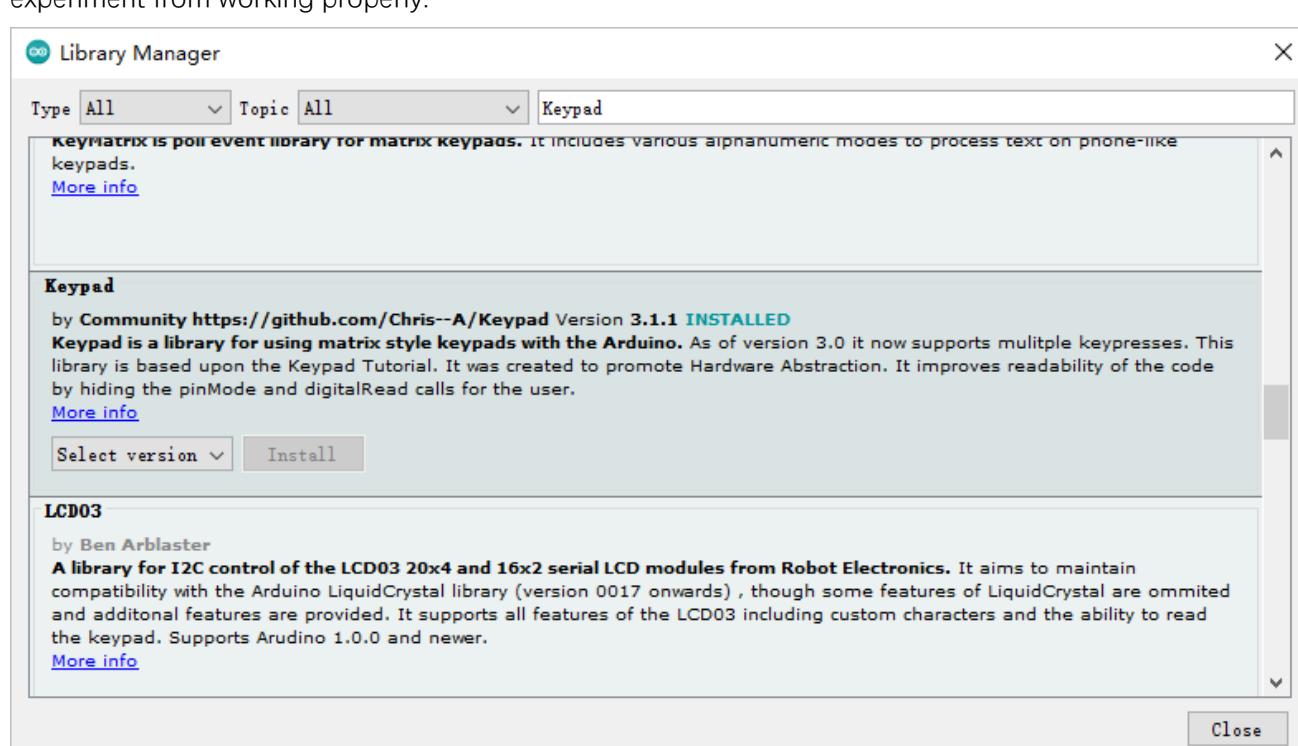

In addition, you can import Keypad libraries in another way. Open Arduino IDE, click Sketch→Include Library→Add .ZIP Library, In the pop-up window, find the file named “./Libraries/ Keypad.zip” which locates in this directory, and click OPEN.

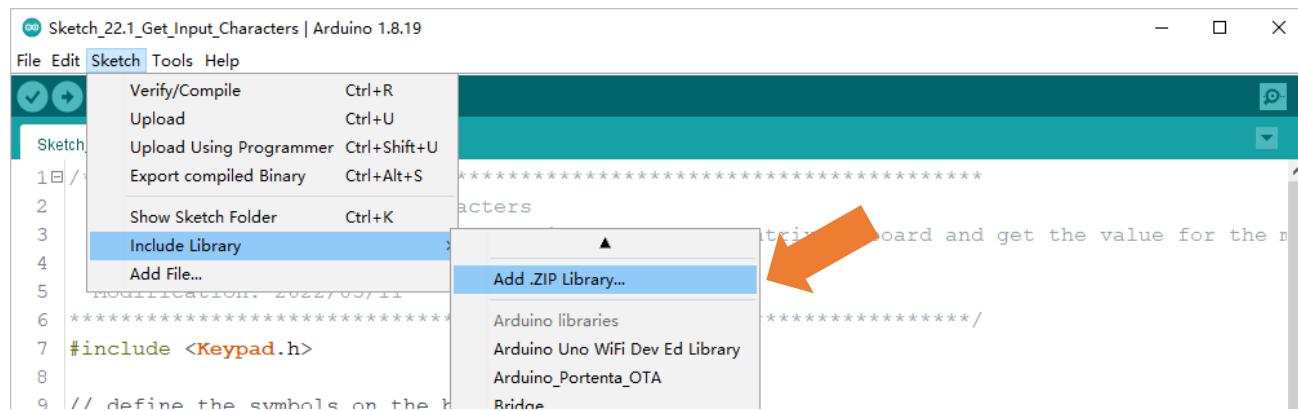

Sketch_22.1_Get_Input_Characters

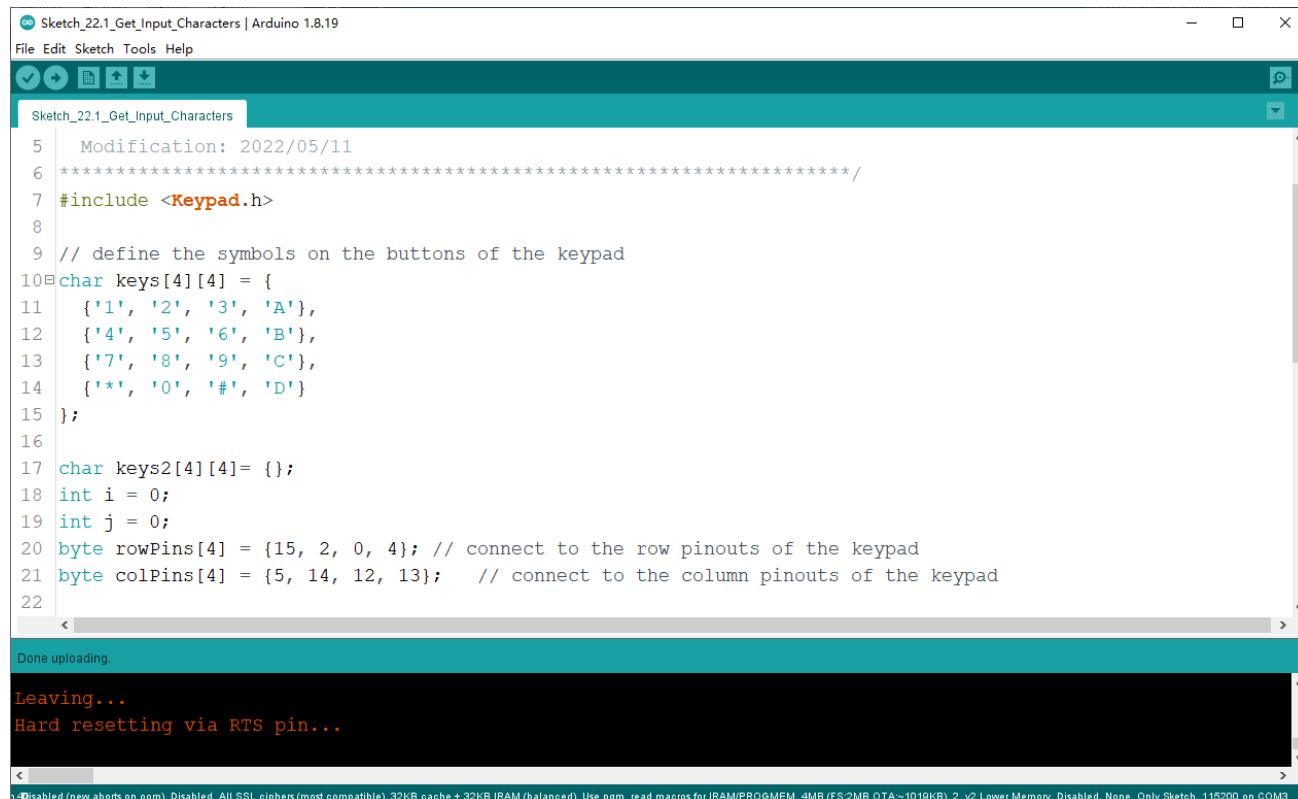

```


Sketch_22.1_Get_Input_Characters | Arduino 1.8.19
File Edit Sketch Tools Help
Sketch_22.1_Get_Input_Characters
5 Modification: 2022/05/11
6 ****
7 #include <Keypad.h>
8
9 // define the symbols on the buttons of the keypad
10 char keys[4][4] = {
11     {'1', '2', '3', 'A'},
12     {'4', '5', '6', 'B'},
13     {'7', '8', '9', 'C'},
14     {'*', '0', '#', 'D'}
15 };
16
17 char keys2[4][4]= {};
18 int i = 0;
19 int j = 0;
20 byte rowPins[4] = {15, 2, 0, 4}; // connect to the row pinouts of the keypad
21 byte colPins[4] = {5, 14, 12, 13}; // connect to the column pinouts of the keypad
22
Done uploading.

Leaving...
Hard resetting via RTS pin...

```

Disabled (new aborts on oom). Disabled, All SSL ciphers (most compatible), 32KB cache + 32KB IRAM (balanced). Use pgm_read macros for IRAM/PROGMEM, -4MB (FS:2MB OTA:~1019KB), 2, v2 Lower Memory, Disabled, None, Only Sketch, 115200 on COM3

Download the code to ESP8166, open the serial port monitor, set the baud rate to 115200, press the keyboard, the value of the pressed keys will be printed out via the serial port. As shown in the following figure:

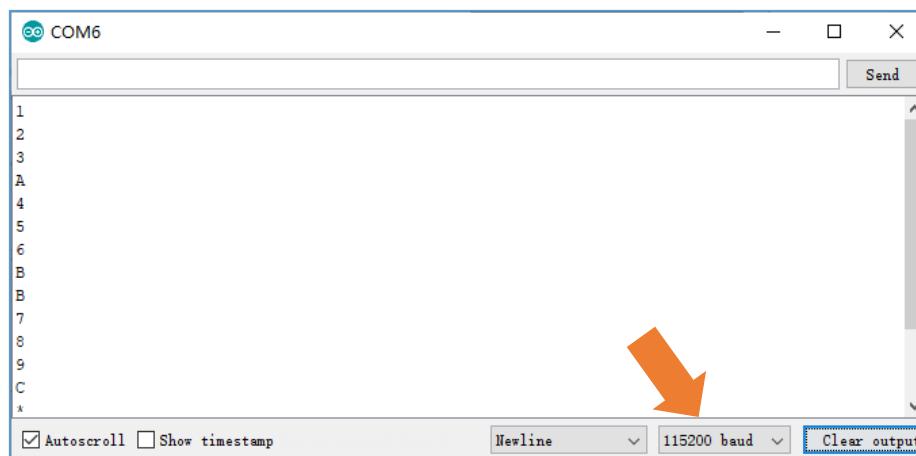

The following is the program code:

1	#include <Keypad.h>
2	// define the symbols on the buttons of the keypad
3	char keys[4][4] = {
4	{'1', '2', '3', 'A'},
5	{'4', '5', '6', 'B'}},

```

6   {'7', '8', '9', 'C'},
7   {'*', '0', '#', 'D'}
8 }
9 byte rowPins[4] = {5, 14, 12, 13}; // connect to the row pinouts of the keypad
10 byte colPins[4] = {15, 2, 0, 4}; // connect to the column pinouts of the keypad
11
12 // initialize an instance of class NewKeypad
13 Keypad myKeypad = Keypad(makeKeymap(keys2), rowPins, colPins, 4, 4);
14
15 void setup() {
16   Serial.begin(115200); // Initialize the serial port and set the baud rate to 115200
17   Serial.println("ESP8266 is ready!"); // Print the string "ESP8266 is ready!"
18 }
19 void transpose() {
20   for(i = 0; i < 4; i++) {
21     for(j = 0; j < 4; j++) {
22       keys2[i][j] = keys[j][i];
23     }
24   }
25 }
26 void loop() {
27   // Get the character input
28   char keyPressed = myKeypad.getKey();
29   // If there is a character input, sent it to the serial port
30   if (keyPressed) {
31     Serial.println(keyPressed);
32   }
33 }
```

First, add header file, define 4*4 matrix keyboard key value and the matrix keyboard pin.

```

1 #include <Keypad.h>
2 // define the symbols on the buttons of the keypad
3 char keys[4][4] = {
4   {'1', '2', '3', 'A'},
5   {'4', '5', '6', 'B'},
6   {'7', '8', '9', 'C'},
7   {'*', '0', '#', 'D'}
8 };
9 byte rowPins[4] = {5, 14, 12, 13}; // connect to the row pinouts of the keypad
10 byte colPins[4] = {15, 2, 0, 4}; // connect to the column pinouts of the keypad
```

Second, define a matrix keyboard object and associate the keys and pins with it.

```
13 Keypad myKeypad = Keypad(makeKeymap(keys2), rowPins, colPins, 4, 4);
```

Finally, get the key value and print it out via the serial port.

```
26 void loop() {
```

```
27 // Get the character input
28 char keyPressed = myKeypad.getKey();
29 // If there is a character input, sent it to the serial port
30 if (keyPressed) {
31     Serial.println(keyPressed);
32 }
33 }
```

Reference

class Keypad You need to add the library each time you use the Keypad.

Keypad(char *userKeymap, byte *row, byte *col, byte numRows, byte numCols);

Constructor, the parameters are: key code of keyboard, row pin, column pin, the number of rows, the number of columns.

char getKey();

Get the key code of the pressed key. If no key is pressed, the return value is NULL.

void setDebounceTime(uint);

Set the debounce time with a default time of 10ms.

void setHoldTime(uint);

Set the duration for the key to keep stable state after pressed.

bool isPressed(char keyChar);

Judge whether the key with code "keyChar" is pressed.

char waitForKey();

Wait for a key to be pressed, and return key code of the pressed key.

KeyState getState();

Get the state of the keys.

bool keyStateChanged();

Judge whether there is a change of key state, then return True or False.

For More information about Keypad, please visit: <http://playground.arduino.cc/Code/Keypad>





Chapter 23 Infrared Remote

In this chapter, we'll learn how to use an infrared remote control, and control a LED.

Project 23.1 Infrared Remote Control

First, we need to understand how infrared remote control works, then get the command sent from infrared remote control.

Component List

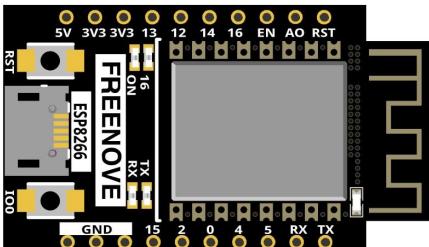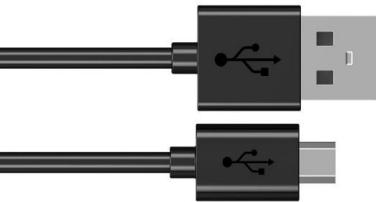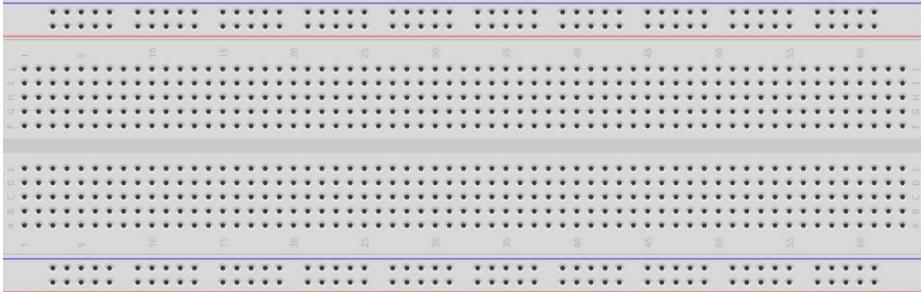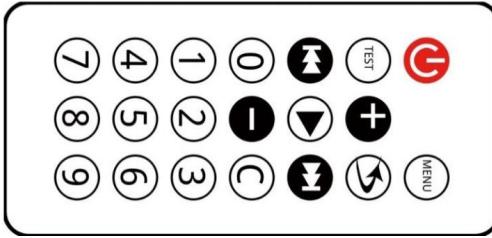ESP8266 x1	USB cable
	
Breadboard x1	
Jumper wire M/M x6	Infrared Remote x1 (May need CR2025 battery x1, please check the holder)
	
Infrared Remote x1	Resistor 10kΩ x1

Component knowledge


Infrared Remote

An infrared(IR) remote control is a device with a certain number of buttons. Pressing down different buttons will make the infrared emission tube, which is located in the front of the remote control, send infrared ray with different command. Infrared remote control technology is widely used in electronic products such as TV, air conditioning, etc. Thus making it possible for you to switch TV programs and adjust the temperature of the air conditioning when away from them. The remote control we use is shown below:



Infrared receiver

An infrared(IR) receiver is a component which can receive the infrared light, so we can use it to detect the signal emitted by the infrared remote control. DATA pin here outputs the received infrared signal.

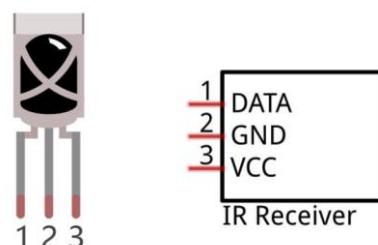




When you use the infrared remote control, the infrared remote control sends a key value to the receiving circuit according to the pressed keys. We can program the ESP8266 to do things like lighting, when a key value is received.

The following is the key value that the receiving circuit will receive when each key of the infrared remote control is pressed.


ICON	KEY Value	ICON	KEY Value
	FFA25D		FFB04F
	FFE21D		FF30CF
	FF22DD		FF18E7
	FF02FD		FF7A85
	FFC23D		FF10EF
	FFE01F		FF38C7
	FFA857		FF5AA5
	FF906F		FF42BD
	FF6897		FF4AB5
	FF9867		FF52AD

Circuit

Schematic diagram

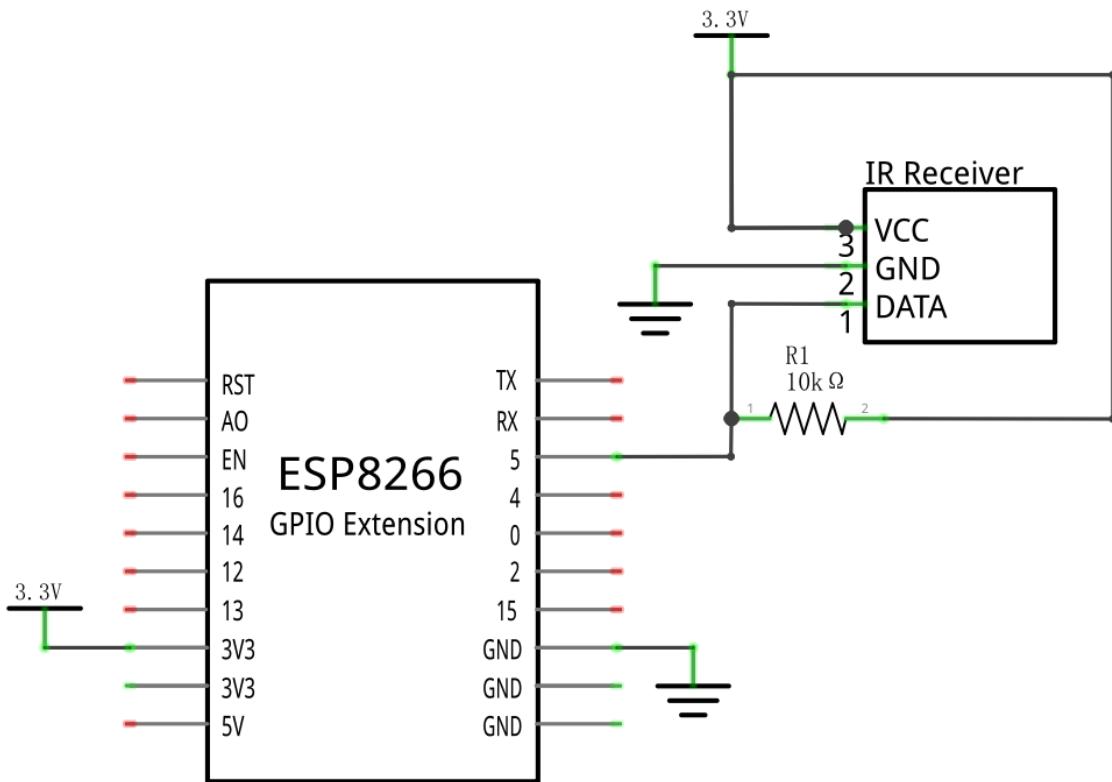

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

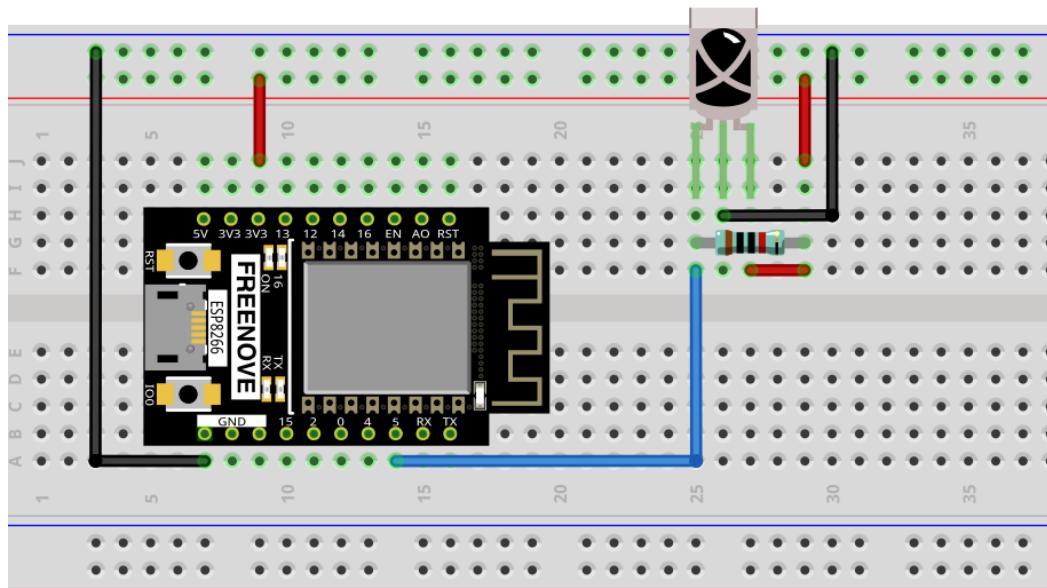




Sketch

This sketch uses the infrared receiving tube to receive the value sent from the infrared remote control, and print it out via the serial port.


How to install the library

We use the third party library IRremoteESP8266. If you haven't installed it yet, please do so first. The steps to add third-party Libraries are as follows: open arduino->Sketch->Include library-> Manage libraries. Enter "IRremoteESP8266" in the search bar and select "IRremoteESP8266" for installation.

Refer to the following operations:

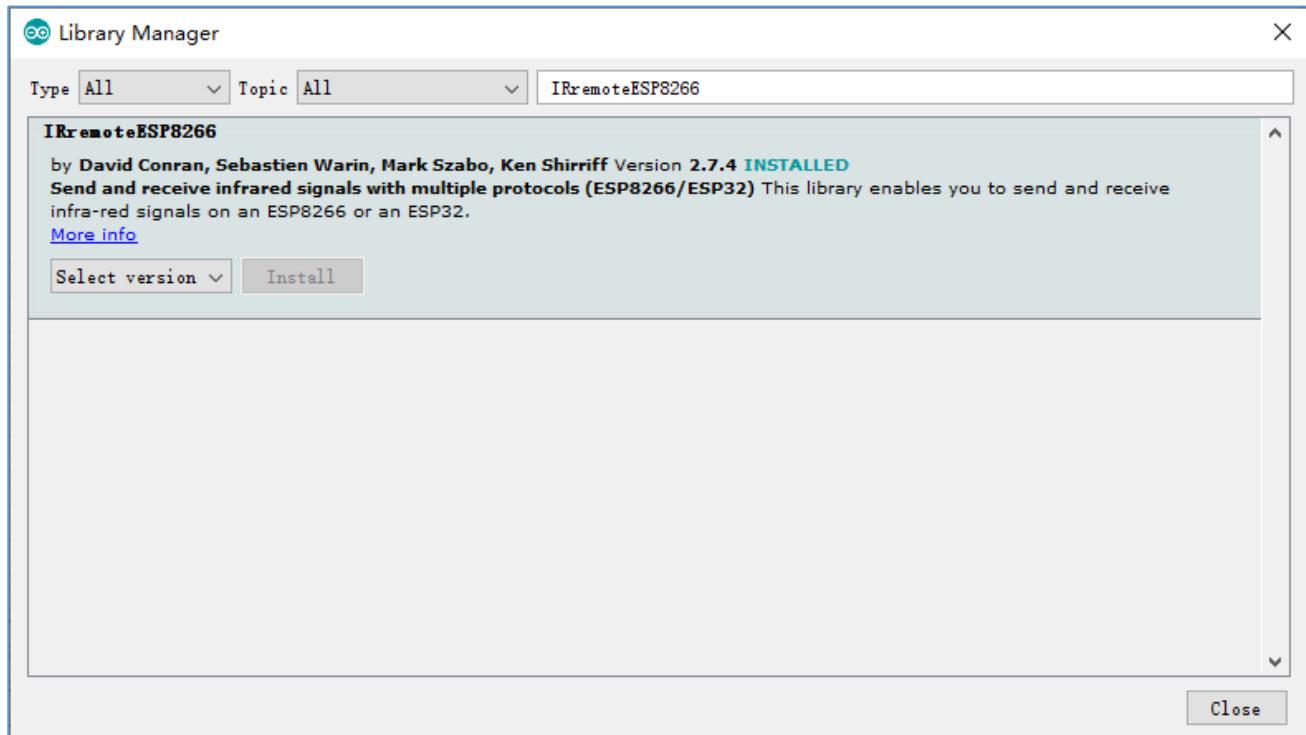

Sketch_23.1_Infrared_Remote_Control

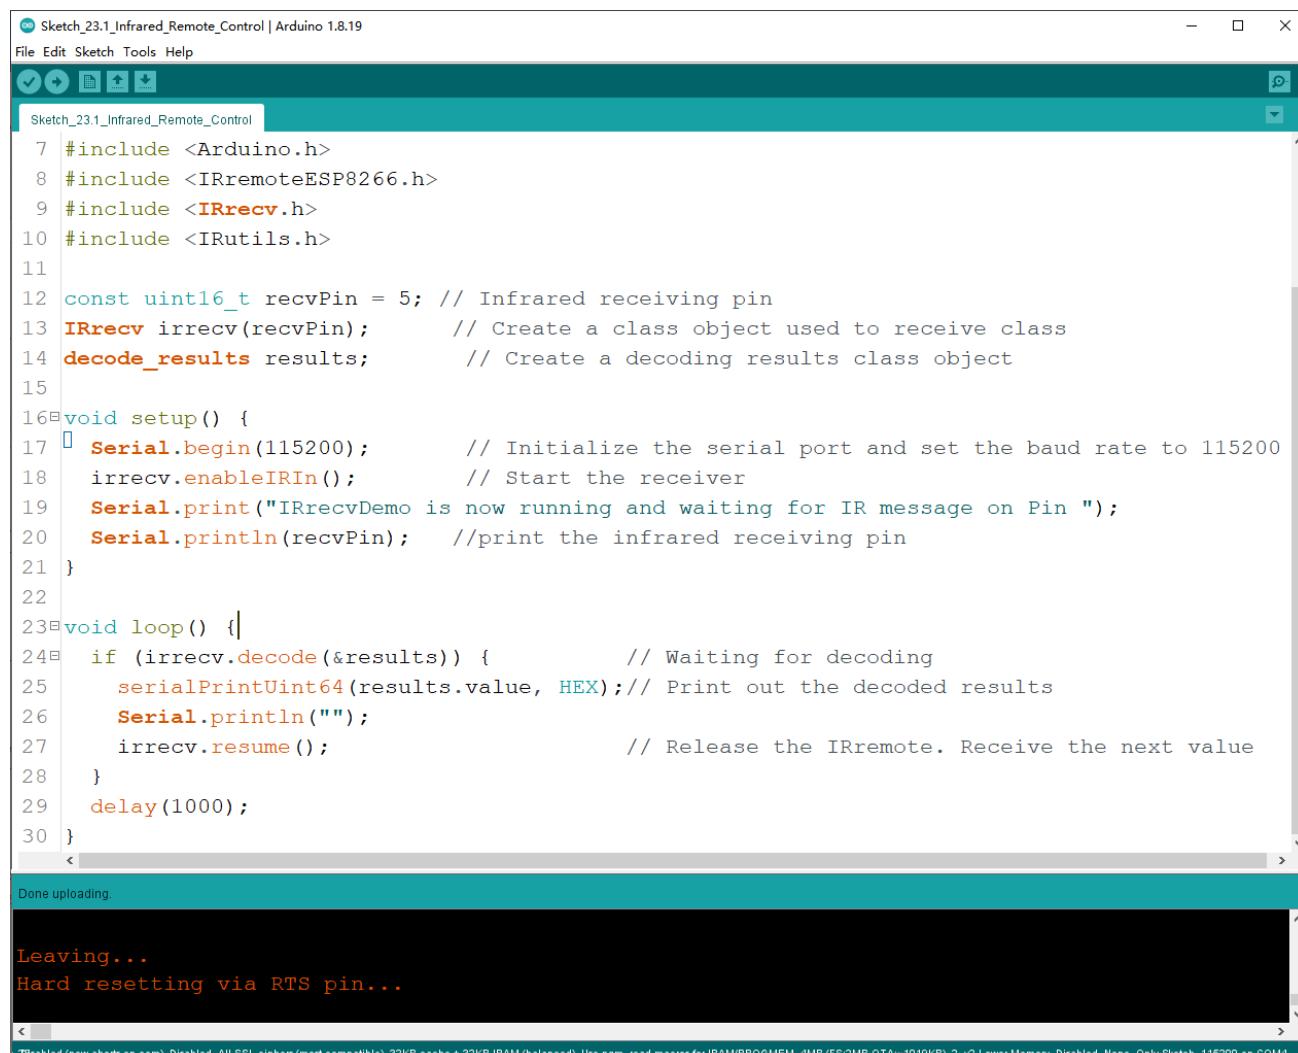

```
Sketch_23.1_Infrared_Remote_Control | Arduino 1.8.19
File Edit Sketch Tools Help
Sketch_23.1_Infrared_Remote_Control
7 #include <Arduino.h>
8 #include <IRremoteESP8266.h>
9 #include <IRrecv.h>
10 #include <IRutils.h>
11
12 const uint16_t recvPin = 5; // Infrared receiving pin
13 IRrecv irrecv(recvPin);      // Create a class object used to receive class
14 decode_results results;      // Create a decoding results class object
15
16 void setup() {
17   Serial.begin(115200);        // Initialize the serial port and set the baud rate to 115200
18   irrecv.enableIRIn();         // Start the receiver
19   Serial.print("IRrecvDemo is now running and waiting for IR message on Pin ");
20   Serial.println(recvPin);    //print the infrared receiving pin
21 }
22
23 void loop() {
24   if (irrecv.decode(&results)) {           // Waiting for decoding
25     serialPrintUint64(results.value, HEX); // Print out the decoded results
26     Serial.println("");
27     irrecv.resume();                      // Release the IRremote. Receive the next value
28   }
29   delay(1000);
30 }
```


Done uploading.

Leaving...

Hard resetting via RTS pin...

...
i. Disabled (new aborts on error). Disabled, All SSL ciphers (most compatible), 32KB cache + 32KB IRAM (balanced). Use pgm_read macros for IRAM/PROGMEM, 4MB (F9:2MB OTA:~1019KB), 2, v2 Lower Memory, Disabled, None, Only Sketch, 115200 on COM4

Download the code to ESP8266, open the serial port monitor, set the baud rate to 115200, press the IR remote control, the pressed keys value will be printed out through the serial port. As shown in the following figure: (Note that when the remote control button is pressed for a long time, the infrared receiving circuit receives a continuous high level, that is, it receives a hexadecimal "F")

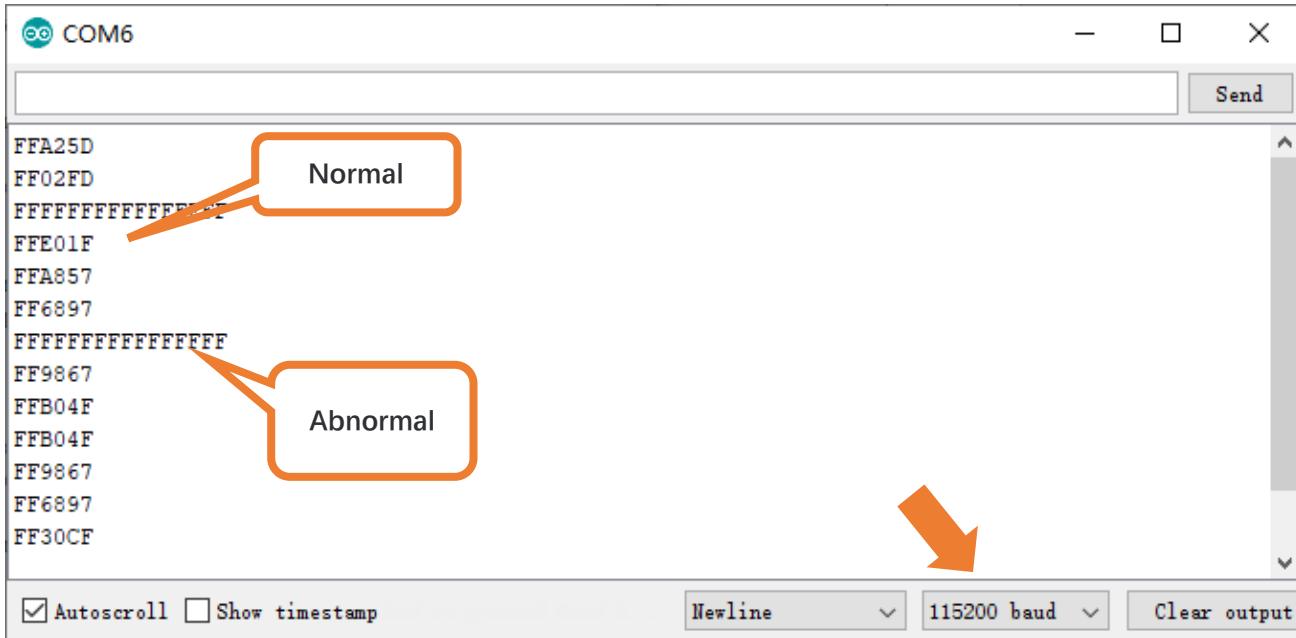

The following is the program code:

```

1 #include <Arduino.h>
2 #include <IRremoteESP8266.h>
3 #include <IRrecv.h>
4 #include <IRUtils.h>
5
6 const uint16_t recvPin = 5; // Infrared receiving pin
7 IRrecv irrecv(recvPin); // Create a class object used to receive class
8 decode_results results; // Create a decoding results class object
9
10 void setup() {
11   Serial.begin(115200); // Initialize the serial port and set the baud rate to 115200
12   irrecv.enableIRIn(); // Start the receiver
13   while (! Serial) // Wait for the serial connection to be established.
14     delay(50);
15   Serial.println();
16   Serial.print("IRrecvDemo is now running and waiting for IR message on Pin ");
17   Serial.println(recvPin); //print the infrared receiving pin
18 }
19
20 void loop() {
21   if (irrecv.decode(&results)) { // Waiting for decoding
22     serialPrintUint64(results.value, HEX); // Print out the decoded results
23     Serial.println("");
24     irrecv.resume(); // Release the IRremote. Receive the next value
25   }
26   delay(1000);
27 }
```

First, include header file. Each time you use the infrared library, you need to include the header file at the beginning of the program.

```

1 #include <Arduino.h>
2 #include <IRremoteESP8266.h>
3 #include <IRrecv.h>
4 #include <IRUtils.h>
```

Second, define an infrared receive pin and associates it with the receive class. Apply a decode_results to decode the received infrared value.

```

6 const uint16_t RecvPin = 5; // Infrared receiving pin
7 IRrecv irrecv(RecvPin);      // Create a class object used to receive class
8 decode_results results;     // Create a decoding results class object
```

Third, enable infrared reception function, if you do not use this function, you won't receive the value from the infrared remote control.

```
12 irrecv.enableIRIn();           // Start the receiver
```

Finally, put the received data into the results class and print out the data through the serial port. Note that you must use **resume()** to release the infrared receive function every time when you receive data, otherwise you can only use the infrared receive function once and cannot receive the data next time.

```

20 void loop() {
21     if (irrecv.decode(&results)) {          // Waiting for decoding
22         serialPrintUint64(results.value, HEX); // Print out the decoded results
23         Serial.println("");
24         irrecv.resume();                  // Release the IRremote. Receive the next value
25     }
26     delay(1000);
27 }
```

Reference

class IRrecv You need to add the library each time you use the Infrared Reception.

IRrecv irrecv(Pin): Create a class object used to receive class, and associated with **Pin**.

enableIRIn(): Before using the infrared decoding function, enable the infrared receiving function. Otherwise the correct data will not be received.

decode(&results): Determine whether the infrared has received data, and if so, return true and store the data in the decode_results class. If no data is received, false is returned.

resume(): Release the IRremote. Or, the infrared reception and decoding function cannot be used again.

For more information about Infrared Remote Control, please visit:

<https://github.com/crankyoldgit/IRremoteESP8266/tree/master/src>



Project 23.2 Control LED through Infrared Remote


In this project, we will control the brightness of LED lights through an infrared remote control.

Component List


ESP8266 x1	USB cable
Breadboard x1	
Jumper wire M/M x12	Infrared Remote x1 (May need CR2025 battery x1, please check the holder)
	LED x1
	Resistor 220Ω x1
	Resistor 10kΩ x1



Circuit

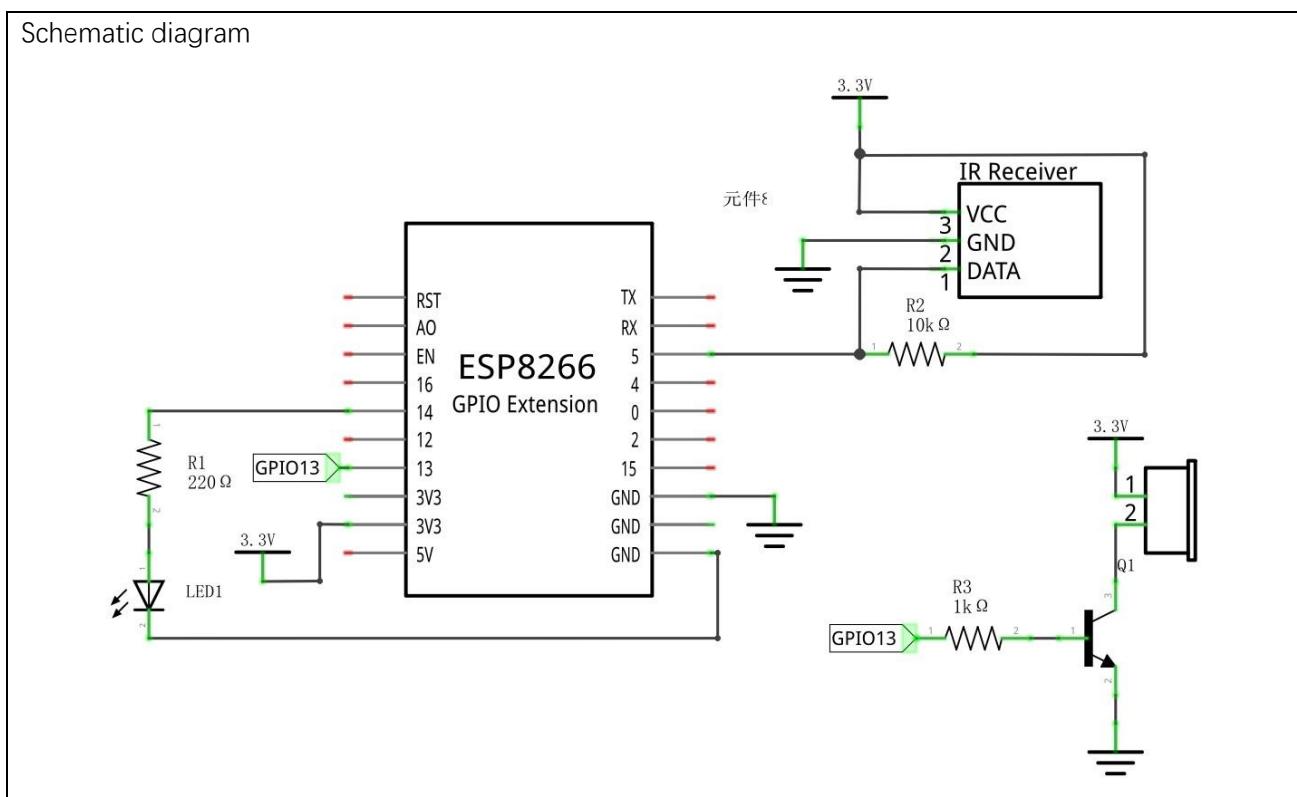

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

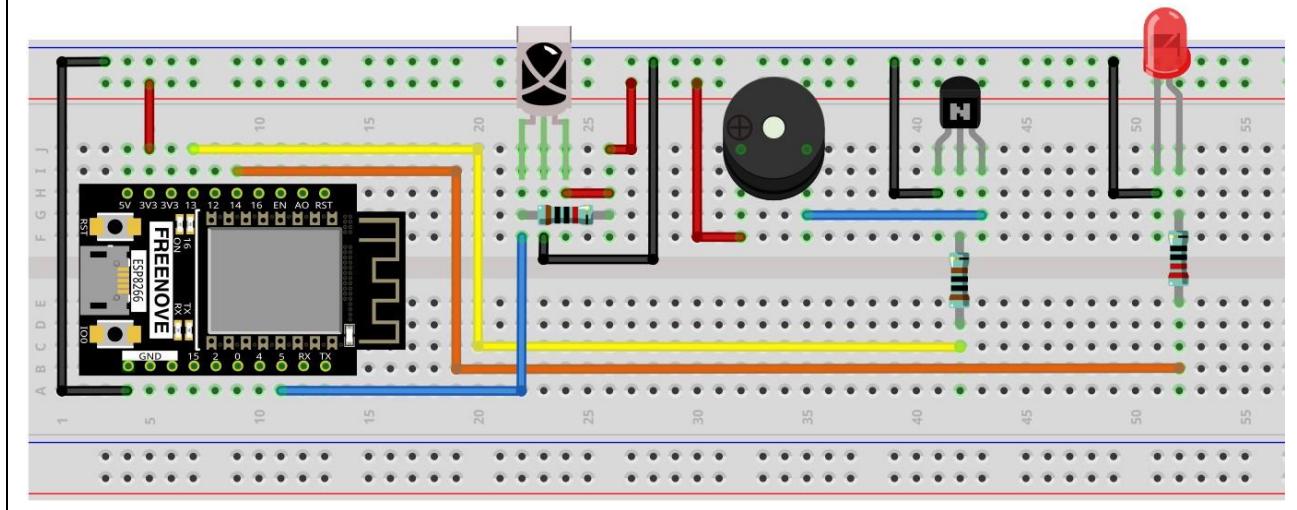


Any concerns? ✉ support@freenove.com

Sketch

The sketch controls the brightness of the LED by determining the key value of the infrared received.

Sketch_23.2_Control_LED_through_Infrared_Remote

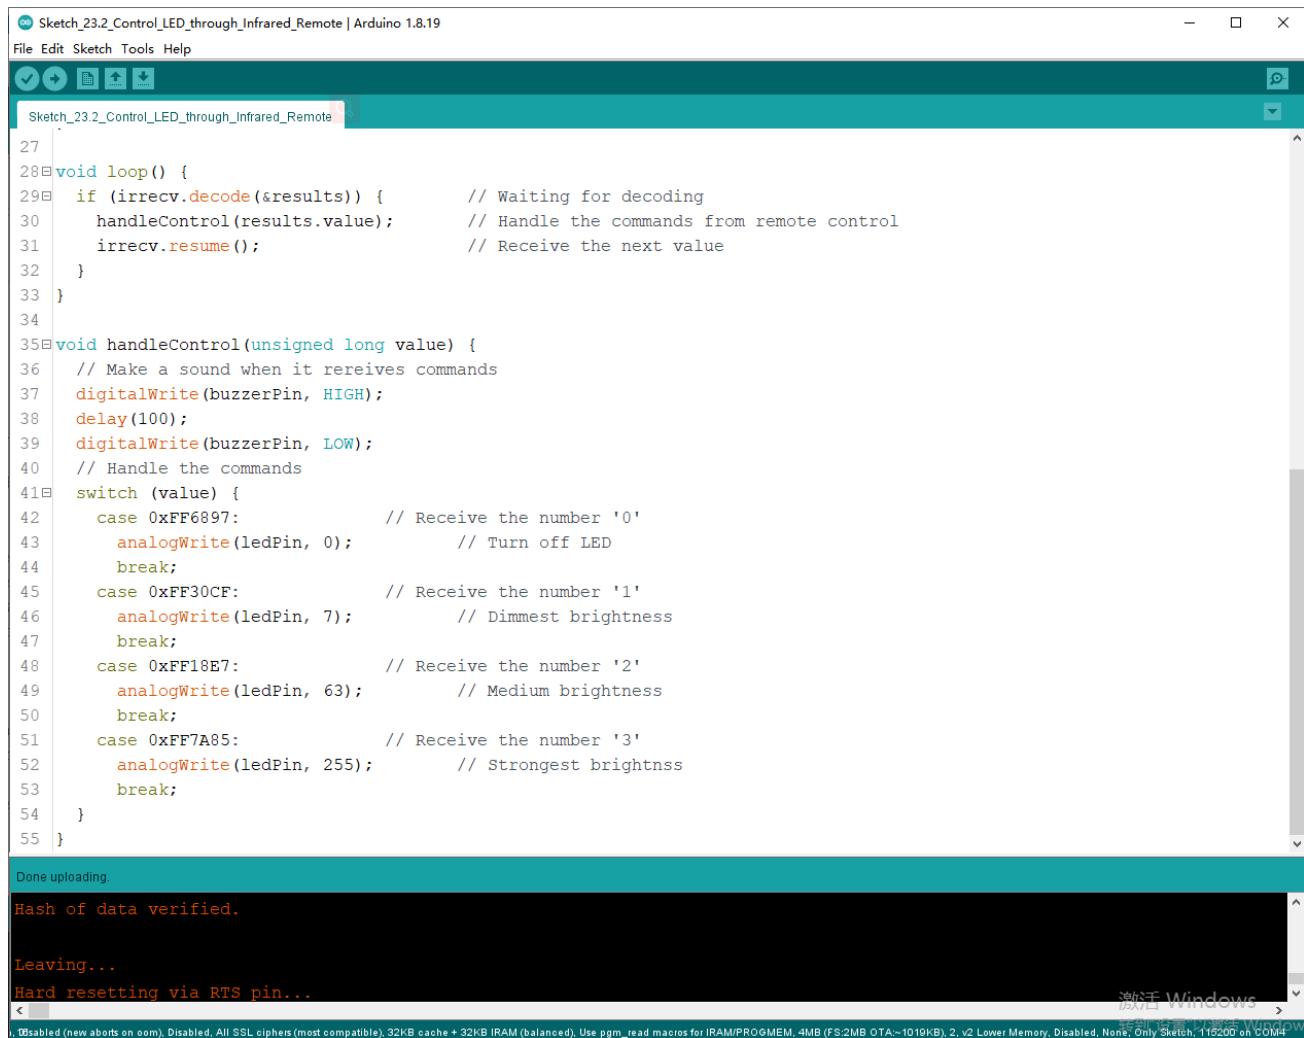


```
Sketch_23.2_Control_LED_through_Infrared_Remote | Arduino 1.8.19
File Edit Sketch Tools Help
Sketch_23.2_Control_LED_through_Infrared_Remote
27
28 void loop() {
29     if (irrecv.decode(&results)) {           // Waiting for decoding
30         handleControl(results.value);      // Handle the commands from remote control
31         irrecv.resume();                  // Receive the next value
32     }
33 }
34
35 void handleControl(unsigned long value) {
36     // Make a sound when it receives commands
37     digitalWrite(buzzerPin, HIGH);
38     delay(100);
39     digitalWrite(buzzerPin, LOW);
40     // Handle the commands
41     switch (value) {
42         case 0xFF6897:                   // Receive the number '0'
43             analogWrite(ledPin, 0);       // Turn off LED
44             break;
45         case 0xFF30CF:                   // Receive the number '1'
46             analogWrite(ledPin, 7);       // Dimmest brightness
47             break;
48         case 0xFF18E7:                   // Receive the number '2'
49             analogWrite(ledPin, 63);      // Medium brightness
50             break;
51         case 0xFF7A85:                   // Receive the number '3'
52             analogWrite(ledPin, 255);     // Strongest brightness
53             break;
54     }
55 }
```

Done uploading.
Hash of data verified.
Leaving...
Hard resetting via RTS pin...<

禁用 安全以激活 Windows
禁用 安全以激活 Windows

Disabled (new aborts on oom). Disabled. All SSL ciphers (most compatible), 32KB cache + 32KB IRAM (balanced). Use pgm_read macros for IRAM/PROGMEM. 4MB (FS:2MB OTA:~1019KB), 2, v2 Lower Memory. Disabled. None. Only Sketch, 115200 on COM4

Compile and upload the code to the ESP8266. When pressing "0", "1", "2", "3" of the infrared remote control, the buzzer will sound once, and the brightness of the LED light will change correspondingly. rendering

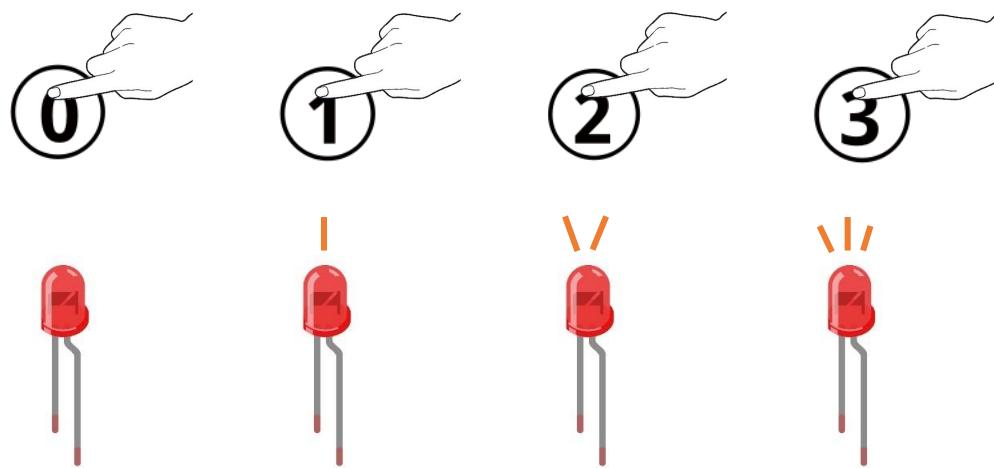

The following is the program code:

```

1 #include <Arduino.h>
2 #include <IRremoteESP8266.h>
3 #include <IRrecv.h>
4 #include <IRUtils.h>
5
6 const uint16_t recvPin = 5; // Infrared receiving pin
7 IRrecv irrecv(recvPin); // Create a class object used to receive class
8 decode_results results; // Create a decoding results class object
9
10 int ledPin = 14; // the number of the LED pin
11 int buzzerPin = 13; // the number of the buzzer pin
12
13 void setup()
14 {
15     //Initialize the ledc configuration
16     pinMode(ledPin, OUTPUT); // set led pin into output mode
17     pinMode(buzzerPin, OUTPUT); // set buzzer pin into output mode
18     irrecv.enableIRIn(); // Start the receiver
19     map(0, 0, 255, 0, 1023);
20 }
21
22 void loop() {
23     if (irrecv.decode(&results)) { // Waiting for decoding
24         handleControl(results.value); // Handle the commands from remote control
25         irrecv.resume(); // Receive the next value
26     }
27 }
```

```

28 void handleControl(unsigned long value) {
29     // Make a sound when it receives commands
30     digitalWrite(buzzerPin, HIGH);
31     delay(100);
32     digitalWrite(buzzerPin, LOW);
33     // respond to the commands
34     switch (value) {
35         case 0xFF6897:           // Receive the number '0'
36             analogWrite(ledPin, 0);      // Turn off LED
37             break;
38         case 0xFF30CF:           // Receive the number '1'
39             analogWrite(ledPin, 7);      // Dimmest brightness
40             break;
41         case 0xFF18E7:           // Receive the number '2'
42             analogWrite(ledPin, 63);     // Medium brightness
43             break;
44         case 0xFF7A85:           // Receive the number '3'
45             analogWrite(ledPin, 255);    // Strongest brightness
46             break;
47     }
48 }
```

The handleControl() function is used to execute events corresponding to infrared code values. Every time when the function is called, the buzzer sounds once and determine the brightness of the LED based on the infrared key value. If the key value is not "0", "1", "2", "3", the buzzer sounds once, but the brightness of LED will not change.

```

28 void handleControl(unsigned long value) {
29     // Make a sound when it receives commands
30     digitalWrite(buzzerPin, HIGH);
31     delay(100);
32     digitalWrite(buzzerPin, LOW);
33     // respond to the commands
34     switch (value) {
35         case 0xFF6897:           // Receive the number '0'
36             analogWrite(ledPin, 0);      // Turn off LED
37             break;
38         case 0xFF30CF:           // Receive the number '1'
39             analogWrite(ledPin, 7);      // Dimmest brightness
40             break;
41         case 0xFF18E7:           // Receive the number '2'
42             analogWrite(ledPin, 63);     // Medium brightness
43             break;
44         case 0xFF7A85:           // Receive the number '3'
45             analogWrite(ledPin, 255);    // Strongest brightness
46             break;
47     }
48 }
```

```
47 }  
48 }
```

Each time when the command is received, the function above will be called in the loop() function.

```
22 void loop() {  
23     if (irrecv.decode(&results)) {          // Waiting for decoding  
24         handleControl(results.value);        // Handle the commands from remote control  
25         irrecv.resume();                      // Receive the next value  
26     }  
27 }
```




Chapter 24 Hygrothermograph DHT11

In this chapter, we will learn about a commonly used sensor called a Hygrothermograph DHT11.

Project 24.1 Hygrothermograph


Hygrothermograph is an important tool in our lives to give us data on the temperature and humidity in our environment. In this project, we will use the ESP8266 to read temperature and humidity data of the DHT11 Module.

Component List

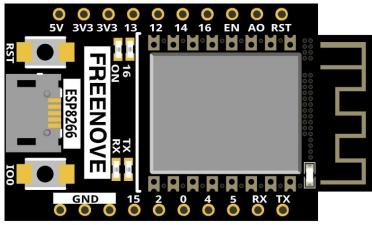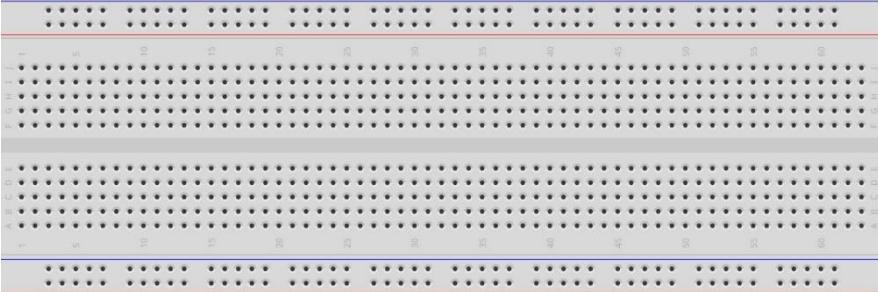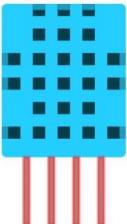ESP8266 x1		USB cable
Breadboard x1		
Jumper wire M/M x6	DHT11 x1	Resistor 10kΩ x1
		

Component knowledge

The temperature & humidity sensor DHT11 is a compound temperature & humidity sensor, and the output digital signal has been calibrated by its manufacturer.

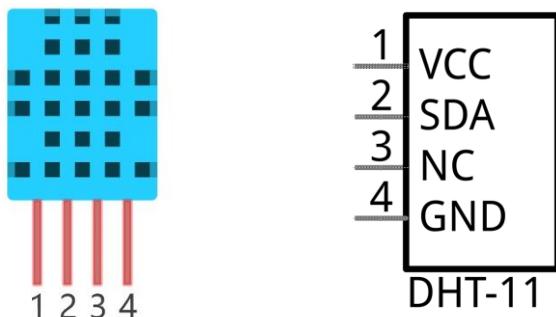

DHT11 uses customized single-line communication protocol, so we can use the library to read data more conveniently.


After being powered up, it will initialize in 1s. Its operating voltage is within the range of 3.3V-5.5V.

The SDA pin is a data pin, which is used to communicate with other devices.


The NC pin (Not Connected Pin) is a type of pin found on various integrated circuit packages. Those pins have no functional purpose to the outside circuit (but may have an unknown functionality during manufacture and test). Those pins should not be connected to any of the circuit connections.

Circuit

Schematic diagram

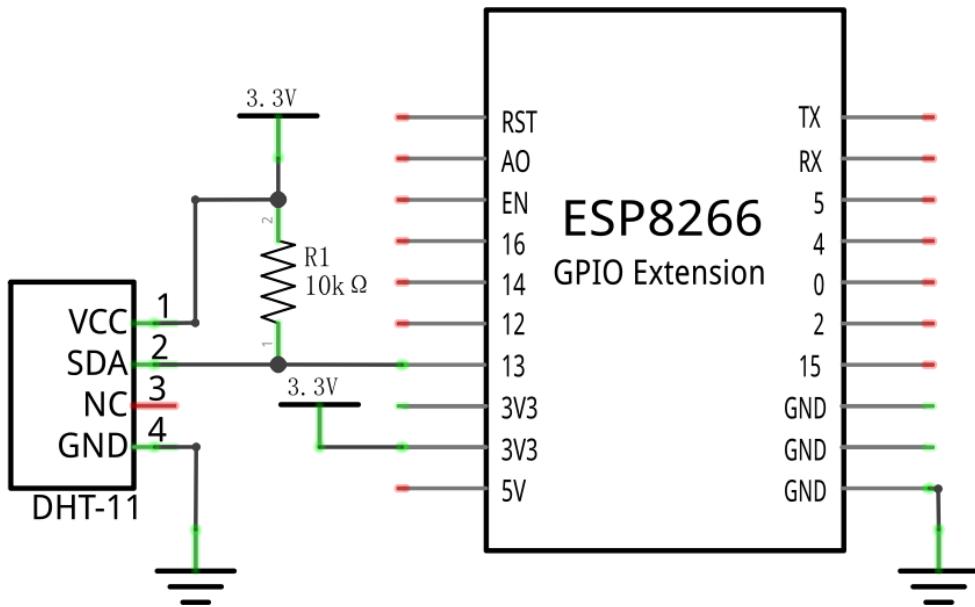

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

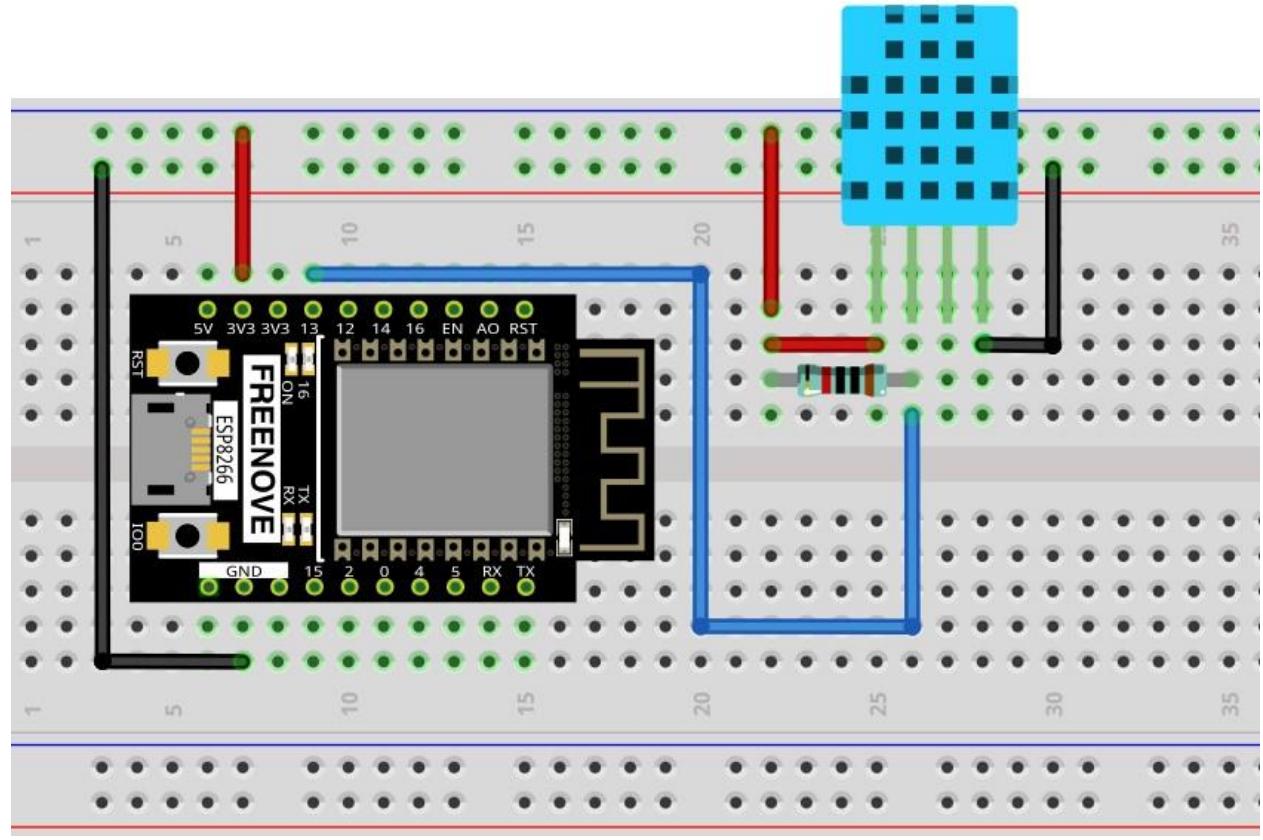

Any concerns? [✉ support@freenove.com](mailto:support@freenove.com)


Sketch

How to install the library

The code is used to read the temperature and humidity data of DHT11, and print them out.

We use the third party library DHTesp. If you haven't installed it yet, please do so now. The steps to add third-party libraries are as follows: open arduino->Sketch->Include library-> Manage libraries. Enter " DHTesp " in the search bar and select " DHTesp " for installation.

Refer to the following operations:

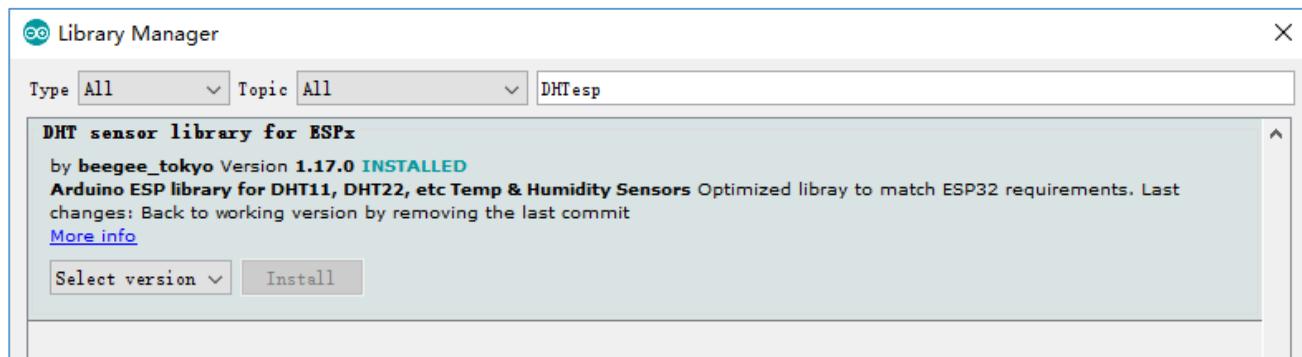

Sketch_24.1_Temperature_and_Humidity_Sensor

```

Sketch_24.1_Temperature_and_Humidity_Sensor | Arduino 1.8.19
File Edit Sketch Tools Help
Sketch_24.1_Temperature_and_Humidity_Sensor
6 ****
7 #include "DHTesp.h"
8
9 DHTesp dht;      //Define the DHT object
10 int dhtPin = 13;//Define the dht pin
11
12 void setup() {
13   dht.setup(dhtPin, DHTesp::DHT11); //Initialize the dht pin and dht object
14   Serial.begin(115200);           //Set the baud rate as 115200
15 }
16
17 void loop() {
18   flag:TempAndHumidity newValues = dht.getTempAndHumidity(); //Get the Temperature and humidity
19   if (dht.getStatus() != 0) { //Judge if the correct value is read
20     goto flag;             //If there is an error, go back to the flag and re-read the data
21   }
22   Serial.println(" Temperature:" + String(newValues.temperature) + " C"+
23   " Humidity:" + String(newValues.humidity)+" %");
24   delay(1000);
25 }


Done Saving.

Leaving...
Hard resetting via RTS pin...

```

The screenshot shows the Arduino IDE interface with the sketch file open. The code reads the DHT11 temperature and humidity data and prints it to the serial monitor. The serial monitor output shows the temperature and humidity values being printed. At the end, it performs a hard reset via the RTS pin.

Compile and upload the code to the ESP8266, turn on the serial monitor, and set the baud rate to 115200. Print out data of temperature and humidity sensor via the serial port.

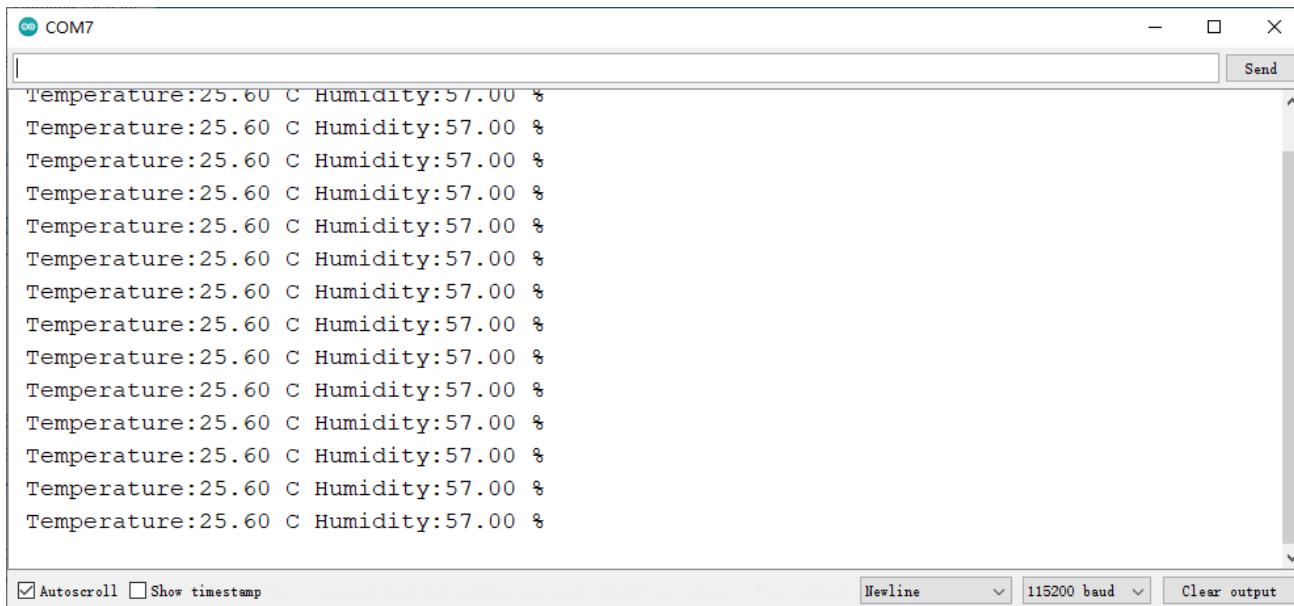

The following is the program code:

```

1 #include "DHTesp.h"
2
3 DHTesp dht;      //Define the DHT object
4 int dhtPin = 13;//Define the dht pin
5
6 void setup() {
7     dht.setup(dhtPin, DHTesp::DHT11); //Initialize the dht pin and dht object
8     Serial.begin(115200);           //Set the baud rate to 115200
9 }
10
11 void loop() {
12     flag:TempAndHumidity newValues = dht.getTempAndHumidity(); //Get the Temperature and humidity
13     if (dht.getStatus() != 0) {                                //Judge if the correct value is
14         read
15         goto flag;                                         //If there is an error, go back to
16         the flag and re-read the data
17     }
18     Serial.println(" Temperature:" + String(newValues.temperature) + " C"+
19     " Humidity:" + String(newValues.humidity)+" %");
20     delay(1000);
21 }
```

In this project code, we use a third party library, DHTesp, and we need to define the objects for it first; Otherwise we could not use its functionality.

```
1 #include "DHTesp.h"  
3 DHTesp dht; //Define the DHT object
```

Initialize the connection pin of DHT and select the type of temperature and humidity sensor as DHT11. If the temperature and humidity sensor is DHT12, we can also change it to DHT12.

```
7 dht.setup(dhtPin, DHTesp::DHT11); //Initialize the dht pin and dht object
```

Due to the use of the single-line protocol, data may be lost in the transmission process. So each time when getting the data of the temperature and humidity sensor, we need to call the getStatus function to determine whether the data is normal. If not, use goto to go back to line 12 and re-execute the program.

```
12 flag:TempAndHumidity newValues = dht.getTempAndHumidity(); //Get the Temperature and  
13 humidity  
14 if (dht.getStatus() != 0) { //Judge if the correct value is read  
15     goto flag; //If there is an error, go back to the flag and re-read  
16     the data  
17 }
```

Get the temperature and humidity data and store it in a TempAndHumidity class called newValues.

```
12 TempAndHumidity newValues = dht.getTempAndHumidity(); //Get the Temperature and humidity
```

Reference

class DHTesp

Make sure that the library and header files are added before using the object every time.

setup(Pin, DHTesp::DHTxx): Select the type of DHTxx and associate Pin with the DHTesp class.

Parameter 1: the pin to be associated.

Parameter 2: select the type of sensor, DHT11 or DHT12.

getTempAndHumidity(): Obtain temperature and humidity data. The received data must be stored in the 'TempAndHumidity' class.

getStatus(): To judge whether the obtained data format is normal, the return value of 0 means the data is normal, and the return value of non-0 means the data is abnormal or the data fails to be obtained.



Project 24.2 Hygrothermograph


In this project, we use L2C-LCD1602 to display data collected by DHT11.

Component List


ESP8266 x1	USB cable
Breadboard x1	
LCD1602 Module x1	Resistor 10kΩ x1
Jumper wire F/M x4 Jumper wire M/M x8	DHT11 x1

Circuit

Schematic diagram

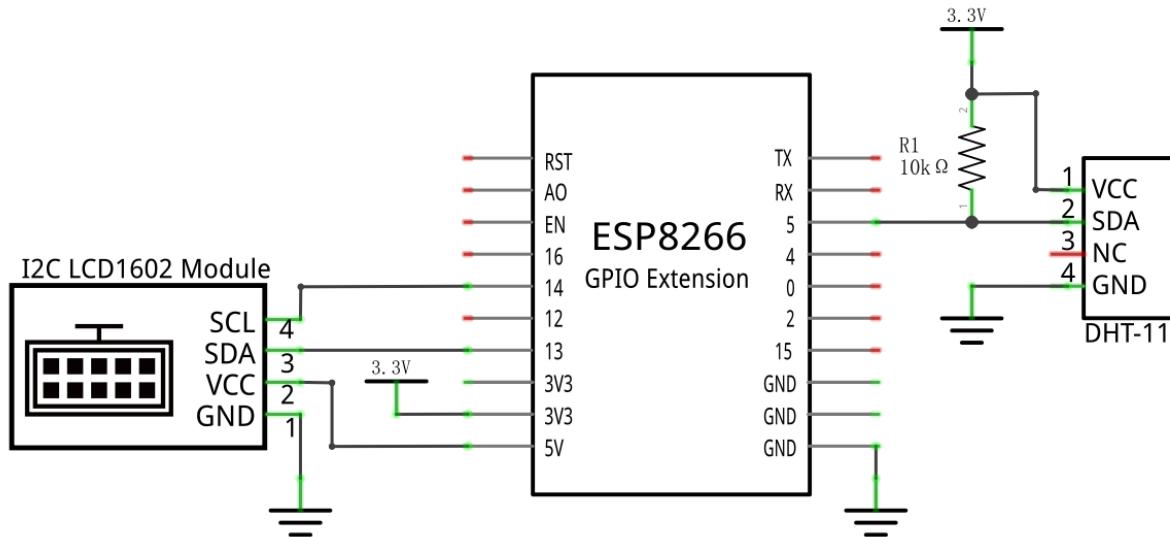

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

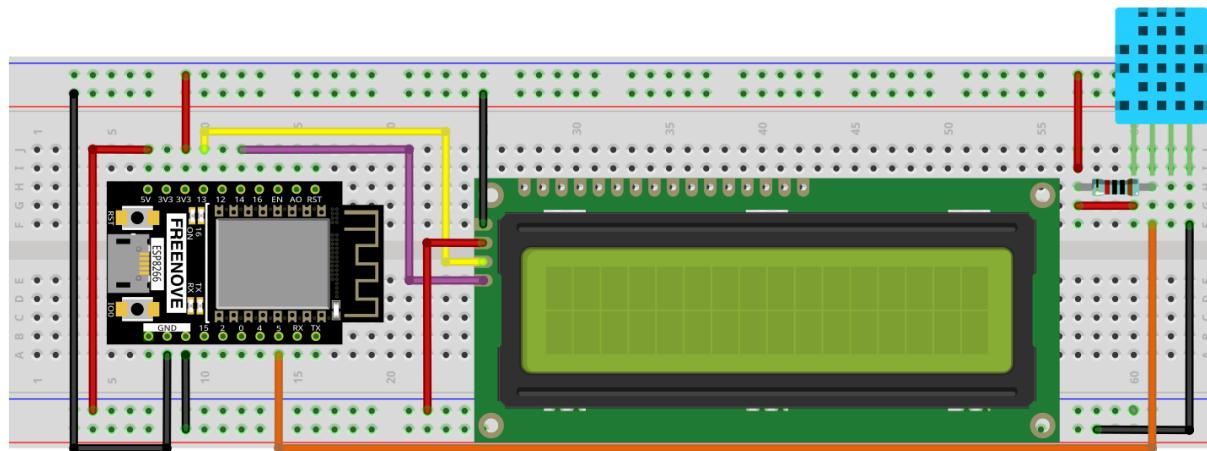

Sketch

This code uses the DHTesp and LiquidCrystal_I2C libraries, so make sure the relevant library files are added before writing the program.

Sketch_24.2_Temperature_and_Humidity_Sensor

```

Sketch_24.2_Temperature_and_Humidity_Sensor_I2C | Arduino 1.8.19
File Edit Sketch Tools Help
Sketch_24.2_Temperature_and_Humidity_Sensor_I2C
1 #include <Wire.h>
2 #include <LiquidCrystal_I2C.h>
3 #include "DHTesp.h"
4
5 #define SDA 13           //Define SDA pins
6 #define SCL 14           //Define SCL pins
7
8 DHTesp dht;           // create dht object
9 LiquidCrystal_I2C lcd(0x27,16,2); //initialize the LCD
10 int dhtPin = 5;       // the number of the DHT11 sensor pin
11
12 void setup() {
13   Wire.begin(SDA, SCL);      // attach the IIC pin
14   lcd.init();                // LCD driver initialization
15   lcd.backlight();          // open the backlight
16   dht.setup(dhtPin, DHTesp::DHT11); //attach the dht pin and initialize it
17 }
18
19 void loop() {
20   // read DHT11 data and save it
21   flag(TempAndHumidity DHT = dht.getTempAndHumidity());
22   if (dht.getStatus() != 0) {    //Determine if the read is successful, and if it fails, go back to flag and re-read the data.
23     goto flag;
24   }
25   lcd.setCursor(0, 0);         //set the cursor to column 0, line 1
26   lcd.print("Temperature:");  //display the Humidity on the LCD1602
27   lcd.print(DHT.temperature);
28   lcd.setCursor(0, 1);         //set the cursor to column 0, line 0
29   lcd.print("Humidity :");    //display the Humidity on the LCD1602
30   lcd.print(DHT.humidity);
31 }
32
33
34
35
36
37 }


Done Saving.

Leaving...
Hard resetting via RTS pin...

```

nRF aborts on com, Disabled, All SSL ciphers (most compatible), 32KB Cache + 32KB IRAM (balanced), Use pgm_read macros for IRAM/PROGMEM, 4MB (FS:2MB OTA:~1019KB) 2, V2 Lower Memory, Disabled, None, Only Sketch, 115200 on COM7

Download the code to ESP8266. The first line of LCD1602 shows the temperature value, and the second line shows the humidity value. Try to “pinch” the thermistor (without touching the leads) with your index finger and thumb for a brief time to observe the change in the LCD display value.

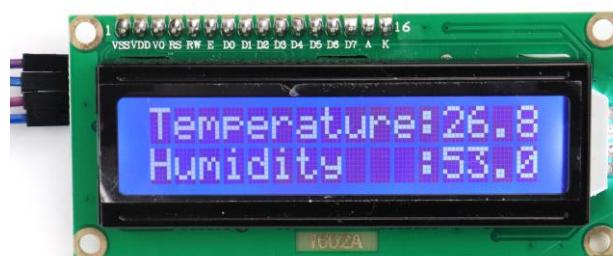

The following is the program code:

```

1 #include <Wire.h>
2 #include <LiquidCrystal_I2C.h>
3 #include "DHTesp.h"
4
5 #define SDA 13           //Define SDA pins
6 #define SCL 14           //Define SCL pins
7
8 DHTesp dht;           // create dht object
9 LiquidCrystal_I2C lcd(0x27, 16, 2); //initialize the LCD
10 int dhtPin = 5;       // the number of the DHT11 sensor pin
11
12 void setup() {
13     Wire.begin(SDA, SCL);      // attach the IIC pin
14     lcd.init();                // LCD driver initialization
15     lcd.backlight();          // Turn on the backlight
16     dht.setup(dhtPin, DHTesp::DHT11); //attach the dht pin and initialize it
17 }
18
19 void loop() {
20     // read DHT11 data and save it
21     flag:TempAndHumidity DHT = dht.getTempAndHumidity();
22     if (dht.getStatus() != 0) {        //Determine if the reading is successful, and if it
23         fails, go back to flag and re-read the data
24         goto flag;
25     }
26     lcd.setCursor(0, 0);           //set the cursor to column 0, line 1
27     lcd.print("Temperature:");    //display the Humidity on the LCD1602
28     lcd.print(DHT.temperature);
29     lcd.setCursor(0, 1);           //set the cursor to column 0, line 0
30     lcd.print("Humidity :");      //display the Humidity on the LCD1602
31     lcd.print(DHT.humidity);
32 }
```

First, add the library function header file.

```

1 #include <Wire.h>
2 #include <LiquidCrystal_I2C.h>
3 #include "DHTesp.h"
```

Second, initialize the pins associated with the DHT11 sensor and I2C-LCD1602.

```

8 DHTesp dht;           // create dht object
9 LiquidCrystal_I2C lcd(0x27, 16, 2); //initialize the LCD
10 int dhtPin = 5;       // the number of the DHT11 sensor pin
11
12 void setup() {
13     Wire.begin(SDA, SCL);      // attach the IIC pin
```

```
14 lcd.init();           // LCD driver initialization
15 lcd.backlight();      // Turn on the backlight
16 dht.setup(dhtPin, DHTesp::DHT11); //attach the dht pin and initialize it
17 }
```

Finally, the data of temperature and humidity sensor are obtained and displayed on LCD1602. The first row shows the temperature and the second shows the humidity.

```
21 flag:TempAndHumidity DHT = dht.getTempAndHumidity();
22 if (dht.getStatus() != 0) {          //Determine if the reading is successful, and if it
23 fails, go back to flag and re-read the data
24     goto flag;
25 }
26 lcd.setCursor(0, 0);           //set the cursor to column 0, line 1
27 lcd.print("Temperature:");    //display the Humidity on the LCD1602
28 lcd.print(DHT.temperature);
29 lcd.setCursor(0, 1);           //set the cursor to column 0, line 0
30 lcd.print("Humidity :");      //display the Humidity on the LCD1602
31 lcd.print(DHT.humidity);
```

Chapter 25 Infrared Motion Sensor

In this chapter, we will learn a widely used sensor, infrared motion sensor.





Project 25.1 Infrared Motion Detector with LED Indicator

In this project, we will make a motion detector, with the human body infrared pyroelectric sensors.

When someone is in close proximity to the motion detector, it will automatically light up and when there is no one close by, it will be out.


This infrared motion sensor can detect the infrared spectrum (heat signatures) emitted by living humans and animals.

Component List

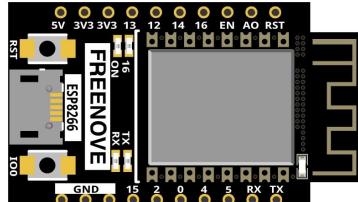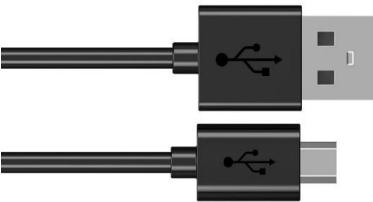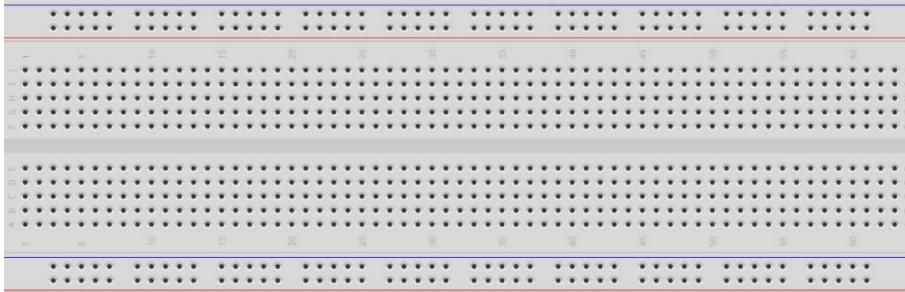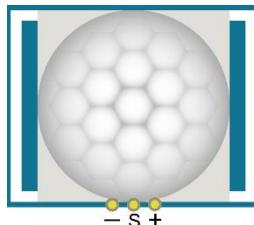ESP8266 x1		USB cable	
Breadboard x1			
HC SR501 x1		LED x1	Resistor 220Ω x1 Jumper wire F/M x3 Jumper wire M/M x4

Component knowledge

The following is the diagram of the infrared Motion sensor (HC SR-501) :

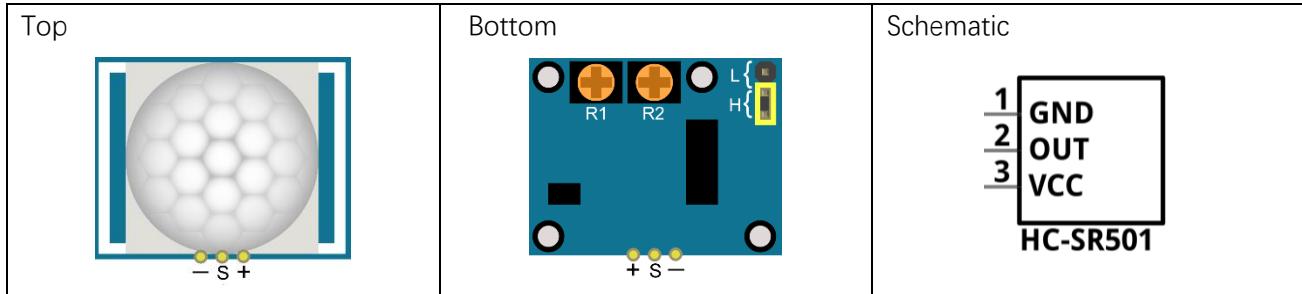

Description:

Working voltage: 5v-20v(DC) Static current: 65uA.

Automatic Trigger. When a living body enters into the active area of sensor, the module will output high level (3.3V). When the body leaves the sensor's active detection area, it will output high level lasting for time period T, then output low level(0V). Delay time T can be adjusted by the potentiometer R1.

According to the position of jumper cap, you can choose non-repeatable trigger mode or repeatable mode.
L: non-repeatable trigger mode. The module output high level after sensing a body, then when the delay time is over, the module will output low level. During high level time, the sensor no longer actively senses bodies.

H: repeatable trigger mode. The distinction from the L mode is that it can sense a body until that body leaves during the period of high level output. After this, it starts to time and output low level after delaying T time.

Induction block time: the induction will stay in block condition and does not induce external signal at lesser time intervals (less than delay time) after outputting high level or low level


Initialization time: the module needs about 1 minute to initialize after being powered ON. During this period, it will alternately output high or low level.

One characteristic of this sensor is when a body moves close to or moves away from the sensor's dome edge, the sensor will work at high sensitivity. When a body moves close to or moves away from the sensor's dome in a vertical direction, the sensor cannot detect well (please take note of this deficiency). Note: The sensing range (distance before a body is detected) is adjusted by the potentiometer.


We can regard this sensor as a simple inductive switch when in use.

Circuit

Schematic diagram

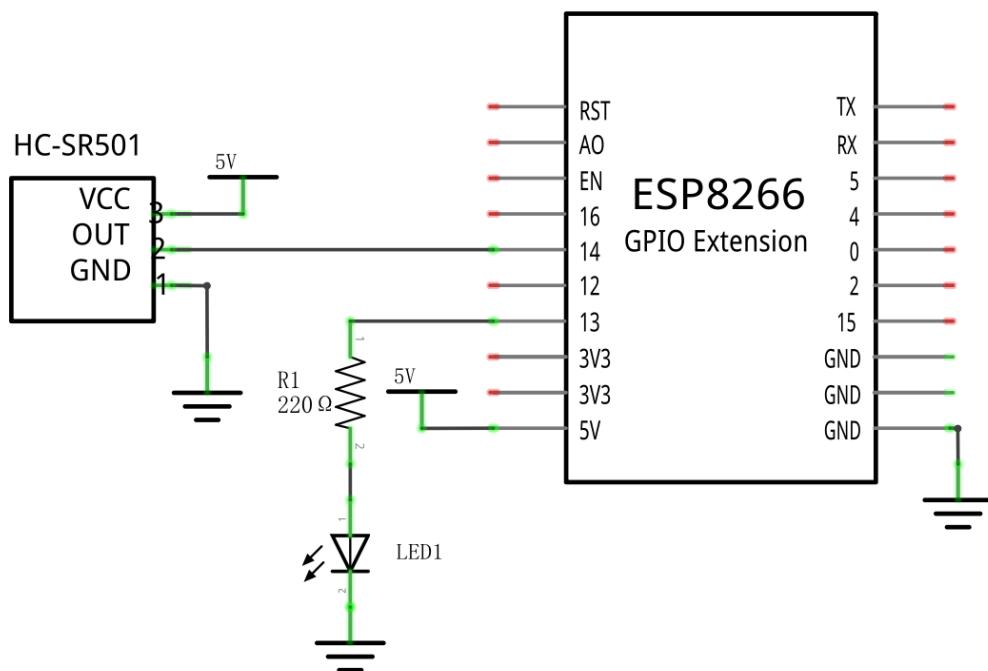


Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

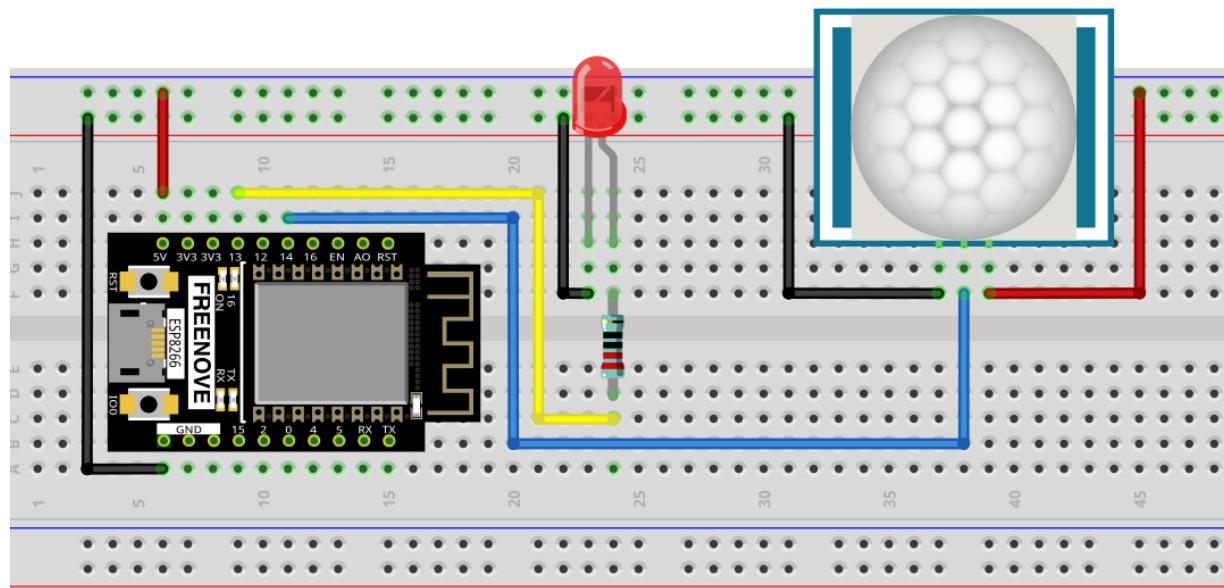

Sketch

In this project, we will use the infrared motion sensor to trigger a LED, essentially making the infrared motion sensor act as a motion switch. Therefore, the code is very similar to the earlier project "push button switch and LED". The difference is that, when infrared motion sensor detects change, it will output high level; when button is pressed, it will output low level. When the sensor output high level, the LED turns ON, or it will turn OFF.

Sketch_25.1_Infrared_Motion_Sensor

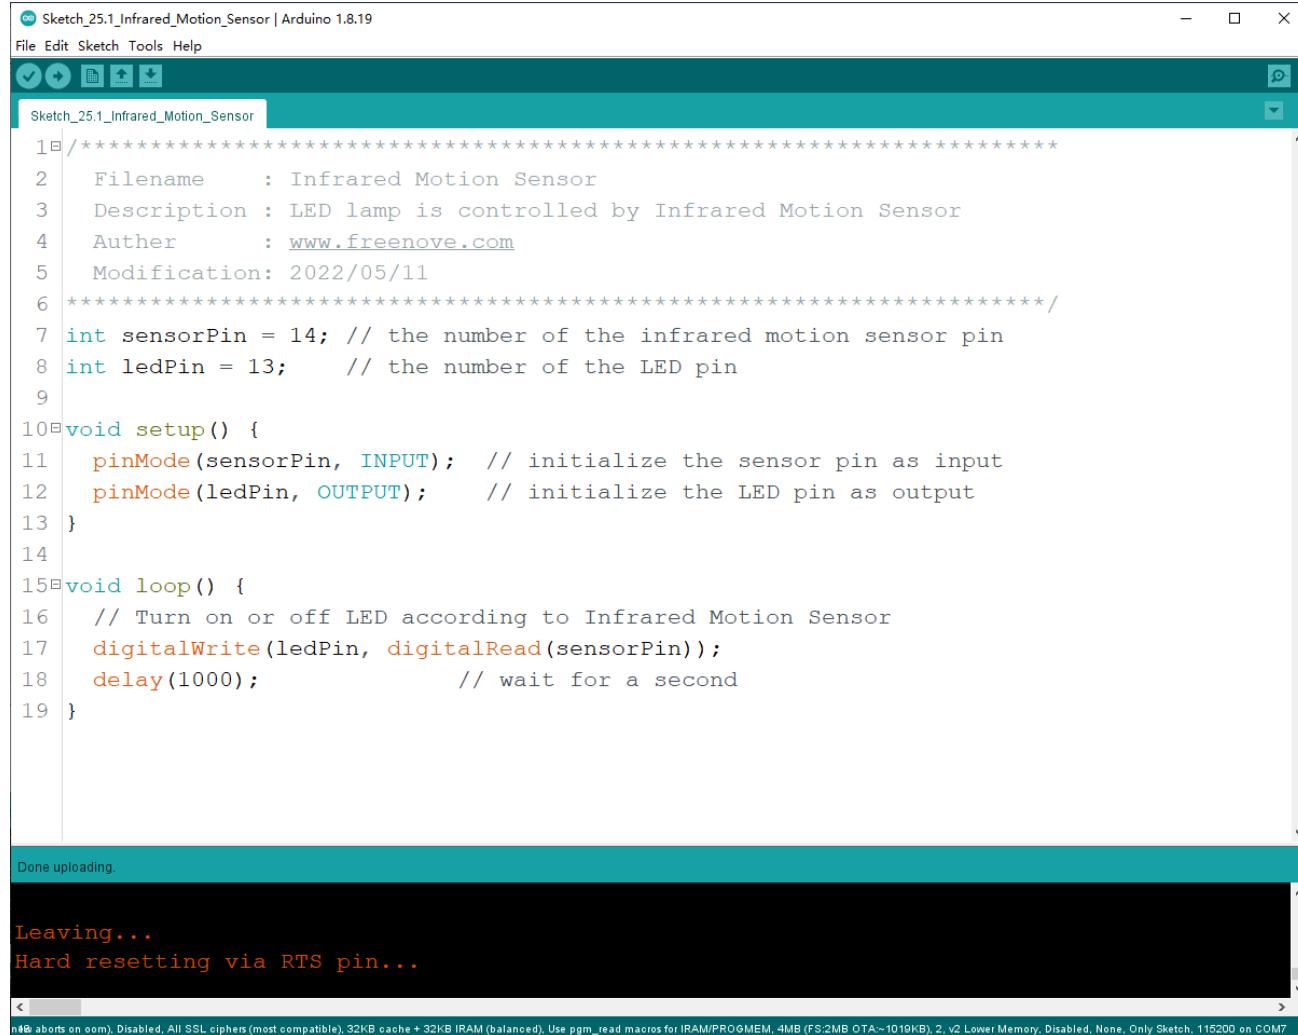

```

Sketch_25.1_Infrared_Motion_Sensor | Arduino 1.8.19
File Edit Sketch Tools Help
Sketch_25.1_Infrared_Motion_Sensor
1 // ****
2   Filename      : Infrared Motion Sensor
3   Description   : LED lamp is controlled by Infrared Motion Sensor
4   Author        : www.freenove.com
5   Modification: 2022/05/11
6 ****
7 int sensorPin = 14; // the number of the infrared motion sensor pin
8 int ledPin = 13;    // the number of the LED pin
9
10 void setup() {
11   pinMode(sensorPin, INPUT); // initialize the sensor pin as input
12   pinMode(ledPin, OUTPUT);  // initialize the LED pin as output
13 }
14
15 void loop() {
16   // Turn on or off LED according to Infrared Motion Sensor
17   digitalWrite(ledPin, digitalRead(sensorPin));
18   delay(1000);           // wait for a second
19 }
```

Done uploading.

Leaving...
Hard resetting via RTS pin...


#@ aborts on com), Disabled, All SSL ciphers (most compatible), 32KB cache + 32KB IRAM (balanced), Use pgm_read macros for IRAM/PROGMEM, 4MB (FS:2MB OTA:~1019KB), 2, V2 Lower Memory, Disabled, None, Only Sketch, 115200 on COM7

Verify and upload the code, and put the sensor on a stationary table and wait for about a minute. Then try to move away from or move closer to the infrared motion sensor and observe whether the LED turns ON or OFF automatically.

You can rotate the potentiometer on the sensor to adjust the detection effect, or use different modes by changing the jumper.

Apart from that, you can also use this sensor to control some other modules to implement different functions by reediting the code, such as the induction lamp, induction door.

Move to the Infrared Motion Sensor

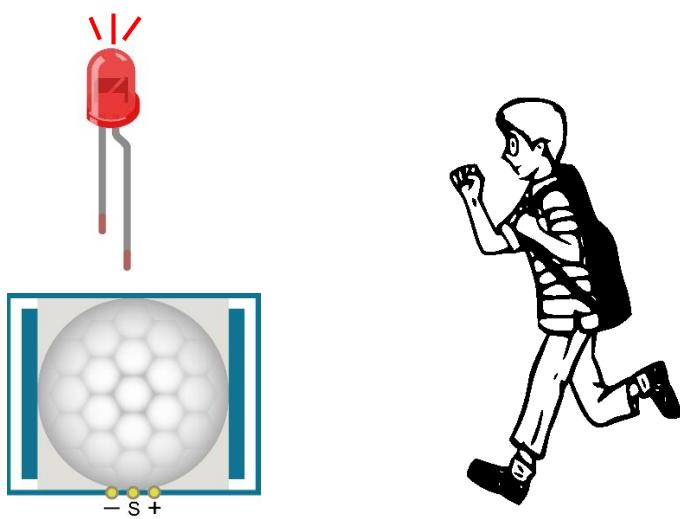

Move away from the Infrared Motion Sensor



Description:

1. You can choose non repeatable trigger modes or repeatable modes.

L: nonrepeatable trigger mode. The module output high level after sensing a body, then when the delay time is over, the module will output low level. During high level time, the sensor no longer actively senses bodies.

H: repeatable trigger mode. The distinction from the L mode is that it can sense a body until that body leaves. After this, it starts to time and output low level after delaying T time.


2. R1 is used to adjust HIGH level last ing time when sensor detect s human motion , 1.2 s 320 s

3. R 2 is used to adjust the maximum distance the sensor can detect, 3~5m.

Here we connect L and adjust R1 and R2 like below to do this project.

Put you hand close and away from the sensor slowly. Observe the LED in previous circuit.

It need some time between two detections.

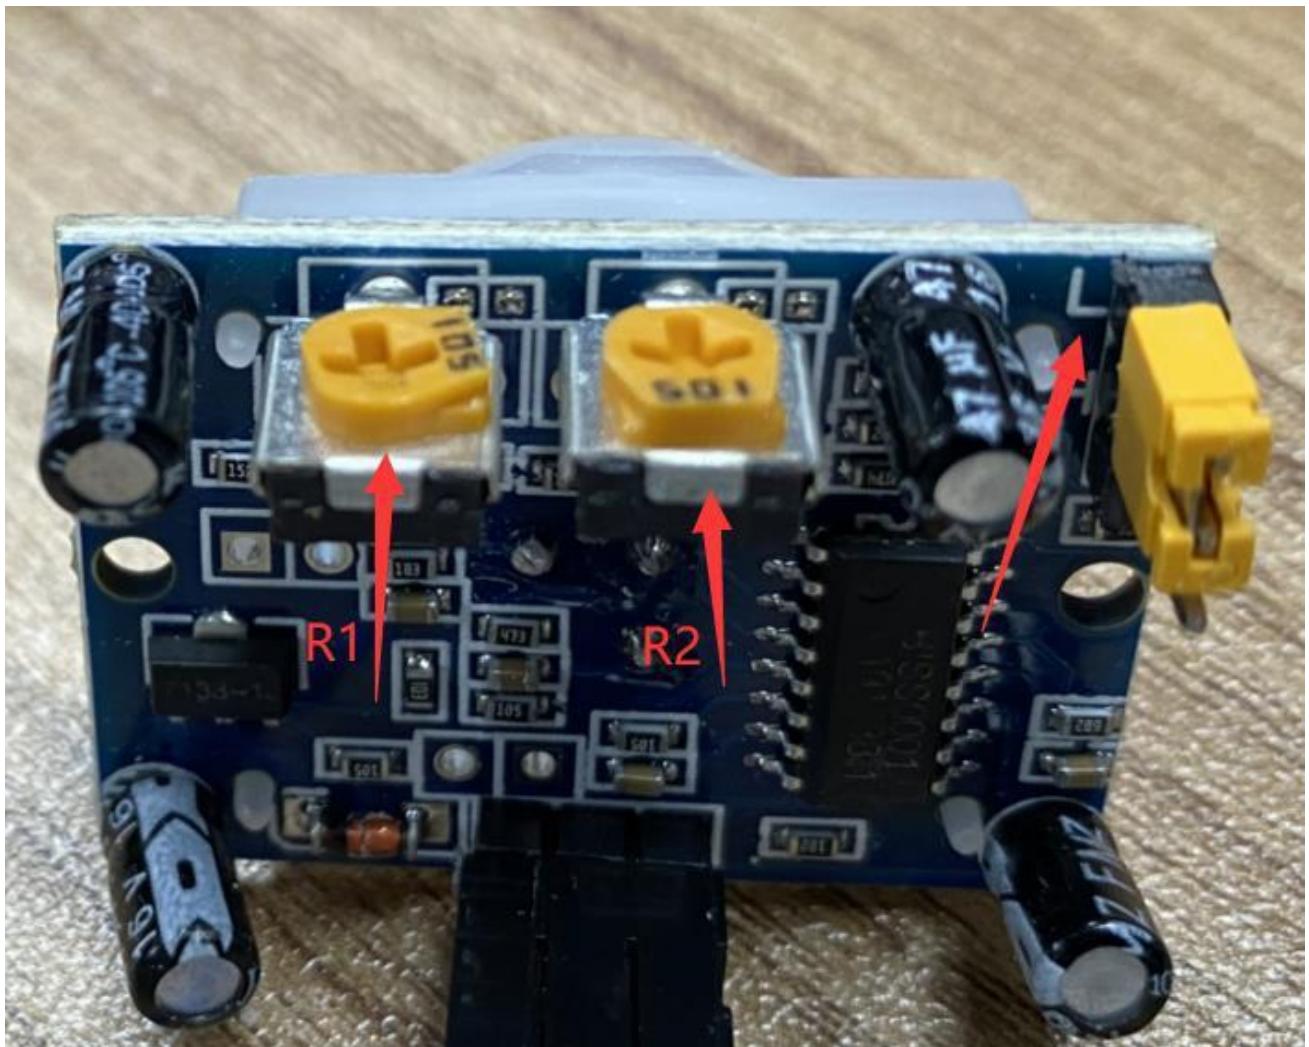




Chapter 26 Attitude Sensor MPU6050

In this chapter, we will learn about a MPU6050 attitude sensor which integrates an accelerometer and gyroscope.

Project 26.1 Read a MPU6050 Sensor Module

In this project, we will read acceleration and gyroscope data of the MPU6050 sensor

Component List

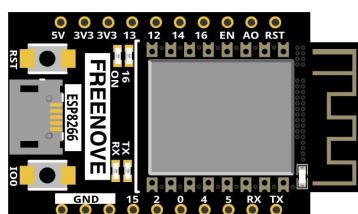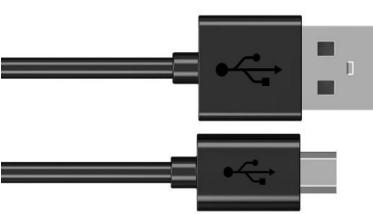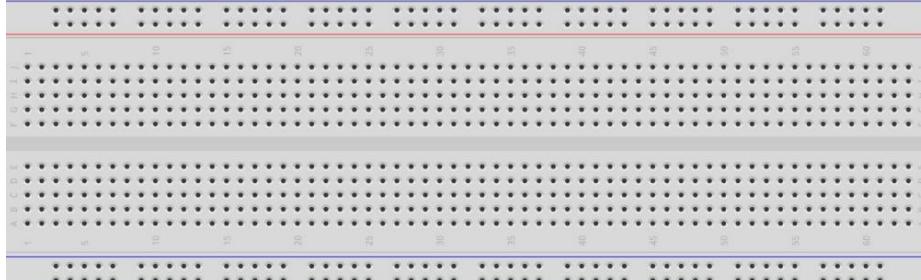
ESP8266 x1	USB cable
	
Breadboard x1	
Jumper wire F/M x6	MPU6050 x1 



Component knowledge

MPU6050

MPU6050 sensor module is a complete 6-axis motion tracking device. It combines a 3-axis gyroscope, a 3-axis accelerometer and a DMP (Digital Motion Processor) all in a small package. The settings of the accelerometer and gyroscope of MPU6050 can be changed. A precision wide range digital temperature sensor is also integrated to compensate data readings for changes in temperature, and temperature values can also be read. The MPU6050 Module follows the I2C communication protocol and the default address is 0x68. MPU6050 is widely used to assist with balancing vehicles, robots and aircraft, mobile phones and other products which require stability to control stability and attitude or which need to sense same.

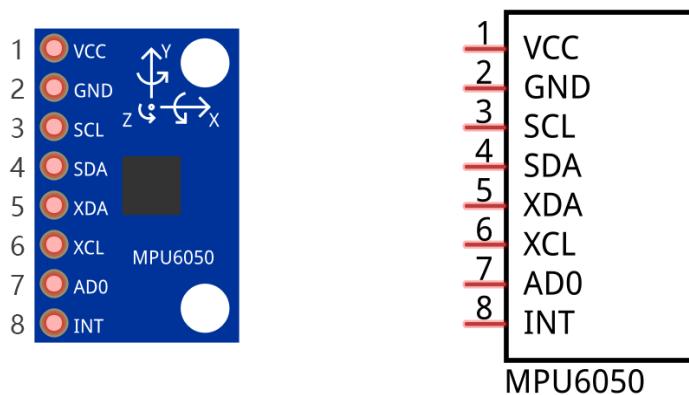

The port description of the MPU6050 module is as follows:


Pin name	Pin number	Description
VCC	1	Positive pole of power supply with voltage 5V
GND	2	Negative pole of power supply
SCL	3	I2C communication clock pin
SDA	4	I2C communication data pin
XDA	5	I2C host data pin which can be connected to other devices.
XCL	6	I2C host clock pin which can be connected to other devices.
AD0	7	I2C address bit control pin. Low level: the device address is 0x68 High level: the device address is 0x69
INT	8	Output interrupt pin

For more detail, please refer to datasheet.


Circuit

Note that the power supply voltage for MPU6050 module is 3.3V in the circuit.

Schematic diagram

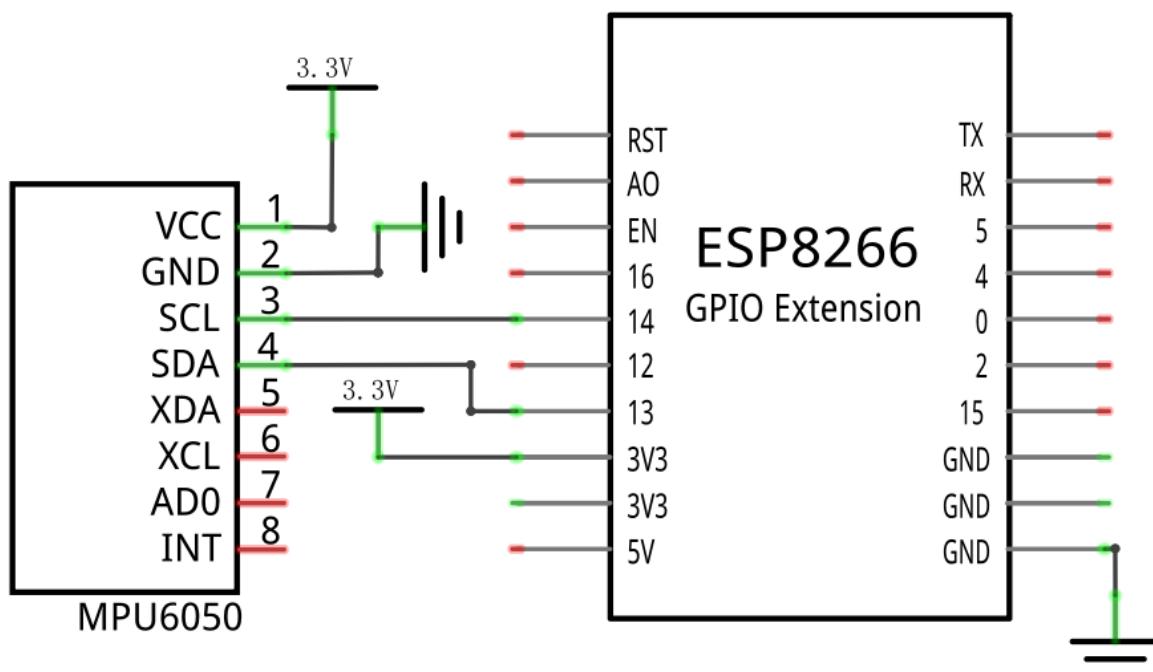

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

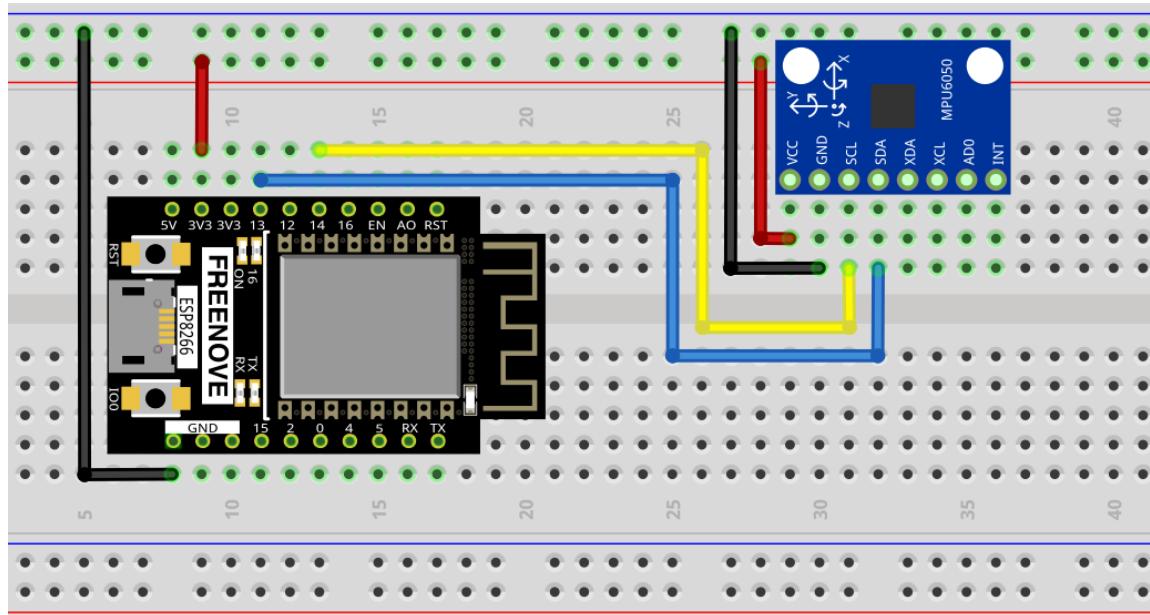




Sketch

How to install the library


In this project, we will read the acceleration data and gyroscope data of MPU6050, and print them out.

We use the third party library MPU6050_tockn. If you haven't installed it yet, please do so now. The steps to add third-party Libraries are as follows: open arduino->Sketch->Include library-> Manage libraries. Enter "MPU6050_tockn" in the search bar and select " MPU6050_tockn " for installation.

Refer to the following operations:

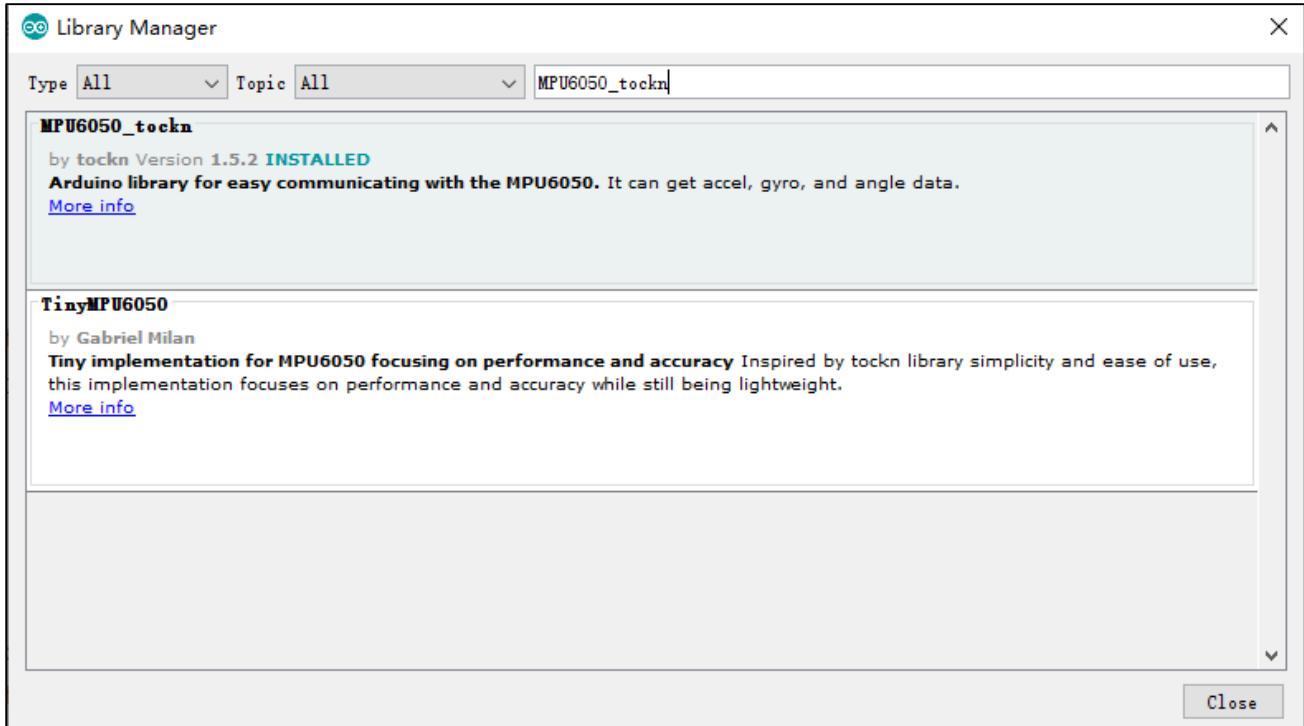

Sketch_26.1_Acceleration_Detection

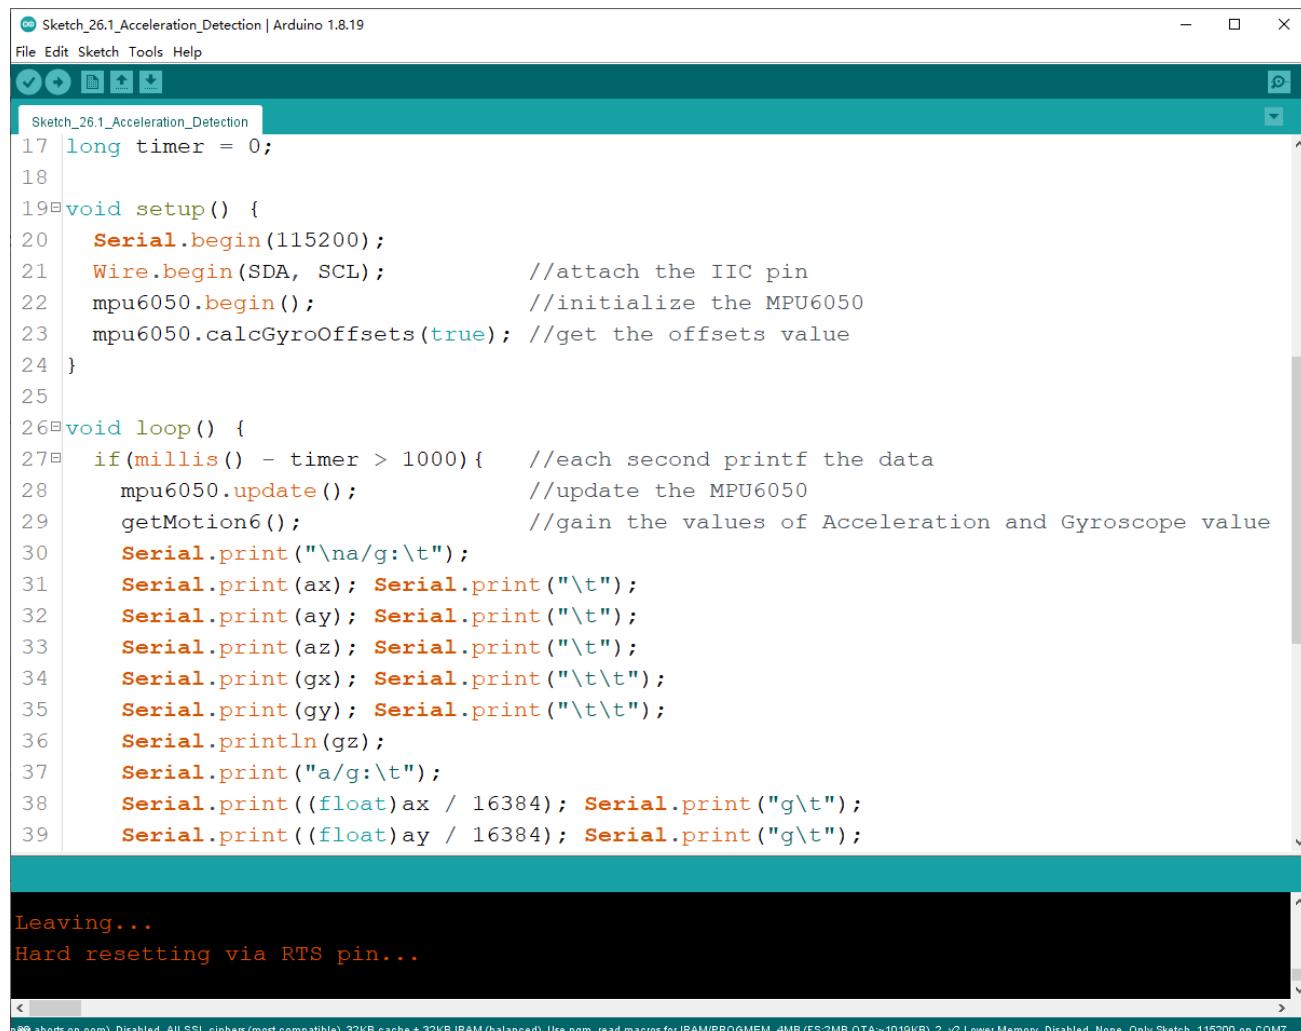

```
Sketch_26.1_Acceleration_Detection | Arduino 1.8.19
File Edit Sketch Tools Help
Sketch_26.1_Acceleration_Detection
17 long timer = 0;
18
19 void setup() {
20   Serial.begin(115200);
21   Wire.begin(SDA, SCL);           //attach the IIC pin
22   mpu6050.begin();              //initialize the MPU6050
23   mpu6050.calcGyroOffsets(true); //get the offsets value
24 }
25
26 void loop() {
27   if(millis() - timer > 1000){   //each second printf the data
28     mpu6050.update();           //update the MPU6050
29     getMotion6();               //gain the values of Acceleration and Gyroscope value
30     Serial.print("\n\n/g:\t");
31     Serial.print(ax); Serial.print("\t");
32     Serial.print/ay); Serial.print("\t");
33     Serial.print/az); Serial.print("\t");
34     Serial.print/gx); Serial.print("\t\t");
35     Serial.print/gy); Serial.print("\t\t");
36     Serial.println/gz);
37     Serial.print/a/g:\t";
38     Serial.print((float)ax / 16384); Serial.print("g\t");
39     Serial.print((float)ay / 16384); Serial.print("g\t");
}
Leaving...
Hard resetting via RTS pin...
< >
```

Download the code to ESP8266, open the serial port monitor, set the baud rate to 115200 and you can use it to measure the distance between the ultrasonic module and the object. As shown in the following figure:

```

===== Calculating gyro offsets =====
DO NOT MOVE MPU6050...
Done!
X : -7.39
Y : 4.57
Z : -5.47
Program will start after 3 seconds
=====
a/g: 1164 536 16424 -459 -459 -459
a/g: 0.07g 0.03g 1.00g -3.50d/s -3.50d/s -3.50d/s
a/g: 916 392 16444 -481 -481 -481
a/g: 0.06g 0.02g 1.00g -3.67d/s -3.67d/s -3.67d/s
a/g: 1192 476 16312 -478 -478 -478
a/g: 0.07g 0.03g 1.00g -3.65d/s -3.65d/s -3.65d/s
a/g: 900 488 16408 -468 -468 -468
a/g: 0.05g 0.03g 1.00g -3.57d/s -3.57d/s -3.57d/s
< -----
 Autoscroll  Show timestamp
 Newline  115200 baud  Clear output
  
```

The following is the program code:

```

1 #include <MPU6050_tockn.h>
2 #include <Wire.h>
3
4 #define SDA 13
5 #define SCL 14
6
7 MPU6050 mpu6050(Wire); //Attach the IIC
8 int16_t ax,ay,az;//define acceleration values of 3 axes
9 int16_t gx,gy,gz;//define variables to save the values in 3 axes of gyroscope
10
11 long timer = 0;
12
13 void setup() {
14     Serial.begin(115200);
15     Wire.begin(SDA, SCL); //attach the IIC pin
16     mpu6050.begin(); //initialize the MPU6050
17     mpu6050.calcGyroOffsets(true); //get the offsets value
18 }
19
20 void loop() {
21     if(millis() - timer > 1000){ //each second print the data
  
```

```

22     mpu6050.update();           //update the MPU6050
23     getMotion6();             //gain the values of Acceleration and Gyroscope value
24     Serial.print("\n/a/g:\t");
25     Serial.print(ax); Serial.print("\t");
26     Serial.print(ay); Serial.print("\t");
27     Serial.print(az); Serial.print("\t");
28     Serial.print(gx); Serial.print("\t\t");
29     Serial.print(gy); Serial.print("\t\t");
30     Serial.println(gz);
31     Serial.print("a/g:\t");
32     Serial.print((float)ax / 16384); Serial.print("g\t");
33     Serial.print((float)ay / 16384); Serial.print("g\t");
34     Serial.print((float)az / 16384); Serial.print("g\t");
35     Serial.print((float)gx / 131); Serial.print("d/s \t");
36     Serial.print((float)gy / 131); Serial.print("d/s \t");
37     Serial.print((float)gz / 131); Serial.print("d/s \n");
38     timer = millis();
39   }
40 }
41 void getMotion6(void) {
42   ax=mpu6050.getRawAccX(); //gain the values of X axis acceleration raw data
43   ay=mpu6050.getRawAccY(); //gain the values of Y axis acceleration raw data
44   az=mpu6050.getRawAccZ(); //gain the values of Z axis acceleration raw data
45   gx=mpu6050.getRawGyroX(); //gain the values of X axis Gyroscope raw data
46   gy=mpu6050.getRawGyroY(); //gain the values of Y axis Gyroscope raw data
47   gz=mpu6050.getRawGyroZ(); //gain the values of Z axis Gyroscope raw data
48 }
```

Two library files "MPU6050_tockn.h" and "Wire.h" are used in the code and will be compiled with others.

Class MPU6050 is used to operate the MPU6050. When using it, please instantiate an object first.

7	MPU6050 mpu6050(Wire); //Attach the IIC
---	-----------------------------------------

In the setup function, IIC and MPU6050 are initialized and the offset difference of MPU6050 is obtained.

13	void setup() {
14	Serial.begin(115200);
15	Wire.begin(SDA, SCL); //attach the IIC pin
16	mpu6050.begin(); //initialize the MPU6050
17	mpu6050.calcGyroOffsets(true); //get the offsets value
18	}

The getMotion6 function is used to obtain the x, y, z axis acceleration raw data and the Gyroscope raw data.

41	void getMotion6(void){
42	ax=mpu6050.getRawAccX(); //gain the values of X axis acceleration raw data
43	ay=mpu6050.getRawAccY(); //gain the values of Y axis acceleration raw data
44	az=mpu6050.getRawAccZ(); //gain the values of Z axis acceleration raw data
45	gx=mpu6050.getRawGyroX(); //gain the values of X axis Gyroscope raw data
46	gy=mpu6050.getRawGyroY(); //gain the values of Y axis Gyroscope raw data

Any concerns? ✉ support@freenove.com

```

47     gz=mpu6050.getRawGyroX(); //gain the values of Z axis Gyroscope raw data
48 }
```

Finally, the original data of the gyroscope is updated and acquired every second, and the original data, the processed acceleration and angular velocity data are printed out through the serial port.

```

20 void loop() {
21     if(millis() - timer > 1000){ //each second print the data
22         mpu6050.update(); //update the MPU6050
23         getMotion6(); //gain the values of Acceleration and Gyroscope value
24         Serial.print("\n\na/g:\t");
25         Serial.print(ax); Serial.print("\t");
26         Serial.print(ay); Serial.print("\t");cc
27         Serial.print(az); Serial.print("\t");
28         Serial.print(gx); Serial.print("\t\t");
29         Serial.print(gy); Serial.print("\t\t");
30         Serial.println(gz);
31         Serial.print("a/g:\t");
32         Serial.print((float)ax / 16384); Serial.print("g\t");
33         Serial.print((float)ay / 16384); Serial.print("g\t");
34         Serial.print((float)az / 16384); Serial.print("g\t");
35         Serial.print((float)gx / 131); Serial.print("d/s \t");
36         Serial.print((float)gy / 131); Serial.print("d/s \t");
37         Serial.print((float)gz / 131); Serial.print("d/s \n");
38         timer = millis();
39     }
40 }
```

Reference

Class MPU6050

This is a class library used to operate MPU6050, which can directly read and set MPU6050. Here are some member functions:

MPU6050 mpu6050(Wire): Associate MPU6050 with IIC.

begin(): Initialize the MPU6050.

calcGyroOffsets(true): If the parameter is true, get the gyro offset and automatically correct the offset. If the parameter is false, the offset value is not obtained and the offset is not corrected.

getRawAccX(): Gain the values of X axis acceleration raw data.

getRawAccY(): Gain the values of Y axis acceleration raw data.

getRawAccZ(): Gain the values of Z axis acceleration raw data.

getRawGyroX(): Gain the values of X axis Gyroscope raw data.

getRawGyroY(): Gain the values of Y axis Gyroscope raw data.

getRawGyroZ(): gain the values of Z axis Gyroscope raw data.

getTemp(): Gain the values of MPU6050's temperature data.

update(): Update the MPU6050. If the updated function is not used, the IIC will not be able to retrieve the new data.





Chapter 27 RFID

Now, we will learn to use the RFID (Radio Frequency Identification) wireless communication technology.

Project 27.1 RFID read UID

In this project, we will read the unique ID number (UID) of the RFID card, recognize the type of the RFID card and display the information through serial port.

Component List

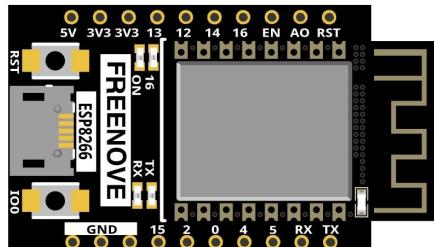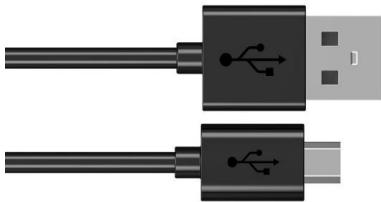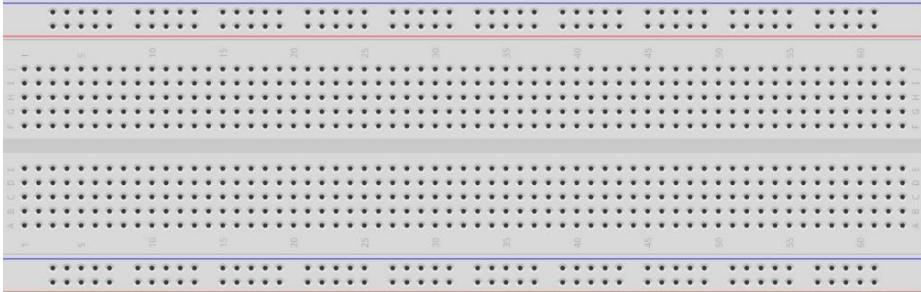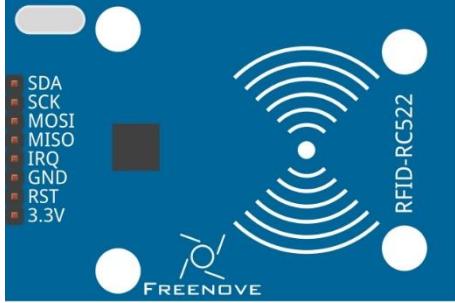
ESP8266 x1	USB cable
	
Breadboard x1	
Jumper wire M/M x9	



Mifare1 S50 Standard card x1



Mifare1 S50 Non-standard card x1

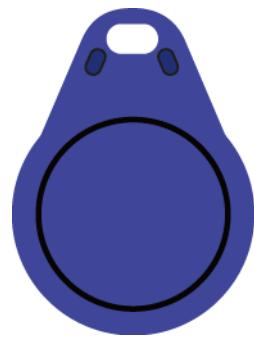

Component knowledge

RFID

RFID (Radio Frequency Identification) is a wireless communication technology. A complete RFID system is generally composed of the responder and reader. Generally, we use tags as responders, and each tag has a unique code, which is attached to the object to identify the target object. The reader is a device for reading (or writing) tag information.

Products derived from RFID technology can be divided into three categories: passive RFID products, active RFID products and semi active RFID products. And Passive RFID products are the earliest, the most mature and most widely used products in the market among others. It can be seen everywhere in our daily life such as, the bus card, dining card, bank card, hotel access cards, etc., and all of these belong to close-range contact recognition. The main operating frequency of Passive RFID products are: 125KHZ (low frequency), 13.56MHZ (high frequency), 433MHZ (ultrahigh frequency), 915MHZ (ultrahigh frequency). Active and semi active RFID products work at higher frequencies.

The RFID module we use is a passive RFID product with the operating frequency of 13.56MHz.

MFRC522 RFID Module

The MFRC522 is a highly integrated reader/writer IC for contactless communication at 13.56MHz.

The MFRC522's internal transmitter is able to drive a reader/writer antenna designed to communicate with ISO/IEC 14443 A/MIFARE cards and transponders without additional active circuitry. The receiver module provides a robust and efficient implementation for demodulating and decoding signals from ISO/IEC 14443 A/MIFARE compatible cards and transponders. The digital module manages the complete ISO/IEC 14443A framing and error detection (parity and CRC) functionality.

This RFID Module uses MFRC522 as the control chip, and SPI (Peripheral Interface Serial) as the reserved interface.

Technical specs:

Operating Voltage	13-26mA(DC)\3.3V
Idle current	10-13mA(DC)\3.3V
Sleep current in the	<80uA
Peak current	<30mA
Operating frequency	13.56MHz
Supported card type	Mifare1 S50、Mifare1 S70、Mifare Ultralight、Mifare Pro、Mifare Desfire
Size	40mmX60mm
Operation temperature	20-80 degrees(Celsius)
Storage temperature	40-85 degrees (Celsius)
Operation humidity	5%-95%(Relative humidity)

Mifare1 S50 Card

Mifare S50 is often called Mifare Standard with the capacity of 1K bytes. And each card has a 4-bytes global unique identifier number (USN/UID), which can be rewritten 100 thousand times and read infinite times. Its storage period can last for 10 years. The ordinary Mifare1 S50 Card and non-standard Mifare1 S50 Card

Any concerns? ✉ support@freenove.com

equipped for this kit are shown below.

The Mifare S50 capacity (1K byte) is divided into 16 sectors (Sector0-Sector15). Each sector contains 4 data block (Block0-Block3). 64 blocks of 16 sectors will be numbered according absolute address, from 0 to 63). And each block contains 16 bytes (Byte0-Byte15), $64 \times 16 = 1024$. As is shown in the following table:

Sector No.	Block No.	Storage area	Block type	Absolute block No.
sector 0	block 0	vendor code	vendor block	0
	block 1		data block	1
	block 2		data block	2
	block 3	Password A-access control-password B	control block	3
sector 1	block 0		data block	4
	block 1		data block	5
	block 2		data block	6
	block 3	Password A-access control-password B	control block	7
.....
sector 15	block 0		data block	60
	block 1		data block	61
	block 2		data block	62
	block 3	Password A-access control-password B	control block	63

Each sector has a set of independent password and access control put in its last block, that is, Block 3, which is also known as sector trailer. Sector 0, block 0 (namely absolute address 0) of S50 is used to store the card serial number and vendor code, which has been solidified and can't be changed. Except the manufacturer and the control block, the rest of the cards are data blocks, which can be used to store data. Data block can be used for two kinds of applications:

- (1) used as general data storage and can be operated for reading and writing data.
- (2) used as data value, and can be operated for initializing, adding, subtracting and reading the value.

The sector trailer block in each sector is the control block, including a 6-byte password A, a 4-byte access control and a 6-byte password B. For example, the control block of a brand new card is as follows:

A0 A1 A2 A3 A4 A5	FF 07 80 69	B0 B1 B2 B3 B4 B5
password A	access control	password B

The default password of a brand new card is generally 0A1A2A3A4A5 for password A and B0B1B2B3B4B5 for password B, or both the password A and password B are 6 FF. Access control is used to set the access conditions for each block (including the control block itself) in a sector.

Blocks of S50 are divided into data blocks and control blocks. There are four operations, "read", "write", "add value", "subtract value (including transmission and storage)" for data blocks, and there are two operations, "read" and "write" for control blocks.

For more details about how to set data blocks and control blocks, please refer to Datasheet.


By default, after verifying password A or password B, we can do reading or writing operation to data blocks. And after verifying password A, we can do reading or writing operation to control blocks. But password A can never be read, so if you choose to verify password A but forget the password A, the block will never be able to read again. **It is highly recommended that beginners should not try to change the contents of control blocks.**

For Mifare1 S50 card equipped in Freenove RFID Kit, the default password A and B are both FFFFFFFFFFFF.


Circuit

The connection of control board and RFID module is shown below.

Schematic diagram

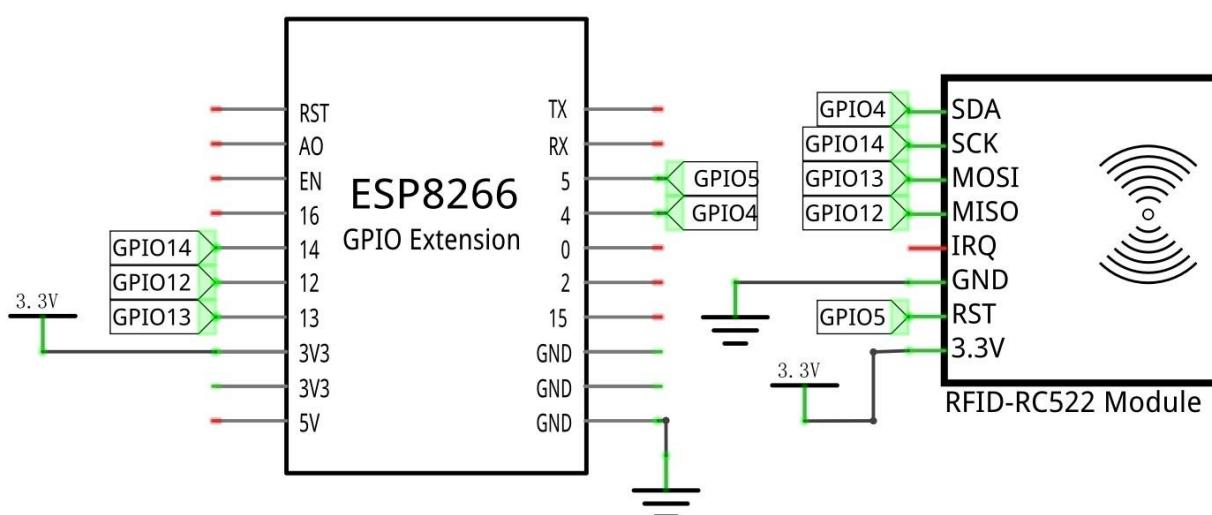

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

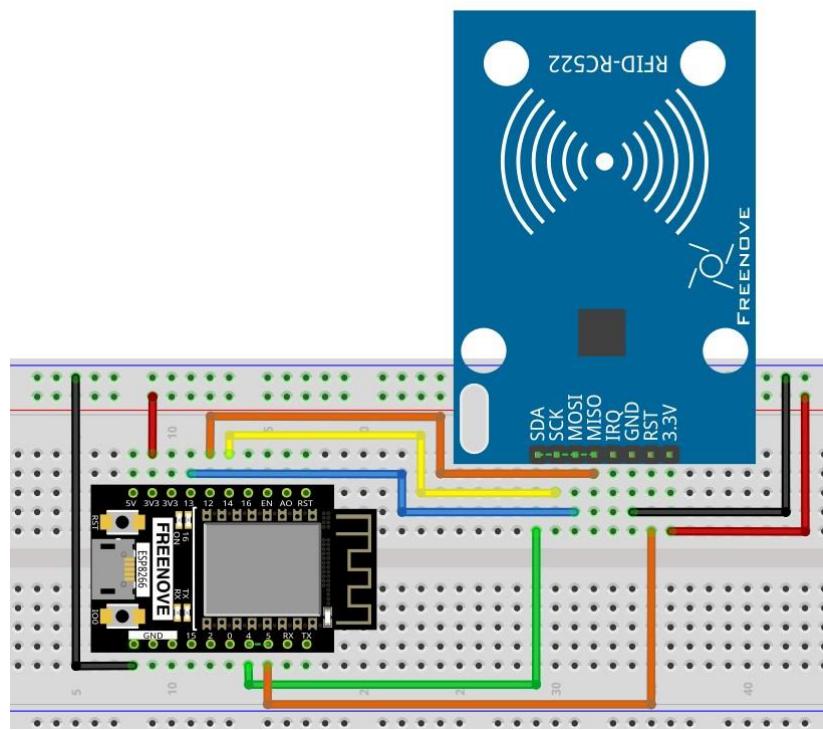

Sketch

Sketch_27.1_RFID_Read_UID

Before writing code, we need to import the library needed.

Click “Add .ZIP Library...” and then find **RFID.zip** in libraries folder (this folder is in the folder unzipped form the ZIP file we provided). This library make it easy to operate RFID module.

This sketch will read the unique ID number (UID) of the card, recognize the type of the card and display the information through serial port.

The screenshot shows the Arduino IDE interface. The top menu bar includes File, Edit, Sketch, Tools, and Help. Below the menu is a toolbar with various icons. The main area displays the code for "Sketch_27.1_RFID_Read_UID". The code uses the **RFID** library to search for a card, print its type, and then read and print its UID in hex format. It also includes commands to select the card and put it to sleep. The bottom part of the interface shows the Serial Monitor window with the text "Leaving..." and "Hard resetting via RTS pin...". A status bar at the bottom provides system information.


```

Sketch_27.1_RFID_Read_UID | Arduino 1.8.19
File Edit Sketch Tools Help
Sketch_27.1_RFID_Read_UID
33 void loop()
34 {
35     //Search card, return card types
36     if (rfid.findCard(PICC_REQIDL, str) == MI_OK) {
37         Serial.println("Find the card!");
38         // Show card type
39         ShowCardType(str);
40         //Anti-collision detection, read card serial number
41         if (rfid.anticoll(str) == MI_OK) {
42             Serial.print("The card's number is : ");
43             //Display card serial number
44             for (int i = 0; i < 4; i++) {
45                 Serial.print(0x0F & (str[i] >> 4), HEX);
46                 Serial.print(0x0F & str[i], HEX);
47             }
48             Serial.println("");
49         }
50         //card selection (lock card to prevent redundant read, removing the line will make it work)
51         rfid.selectTag(str);
52     }
53     rfid.halt(); // command the card to enter sleeping state
54 }
```

Leaving...
Hard resetting via RTS pin...

All SSL ciphers (most compatible), 32KB cache + 32KB IRAM (balanced). Use pgm_read macros for IRAM/PROGMEM, 4MB (FS:2MB OTA:~1019KB), 2, v2 Lower Memory, Disabled, None, Only Sketch, 115200 on COM4

After verifying and uploading the code, open the serial monitor and make a card approach the sensing area of RFID module. Then serial monitor will display the displacement ID number and the type of the card. If the induction time is too short, it may lead to incomplete-information display.

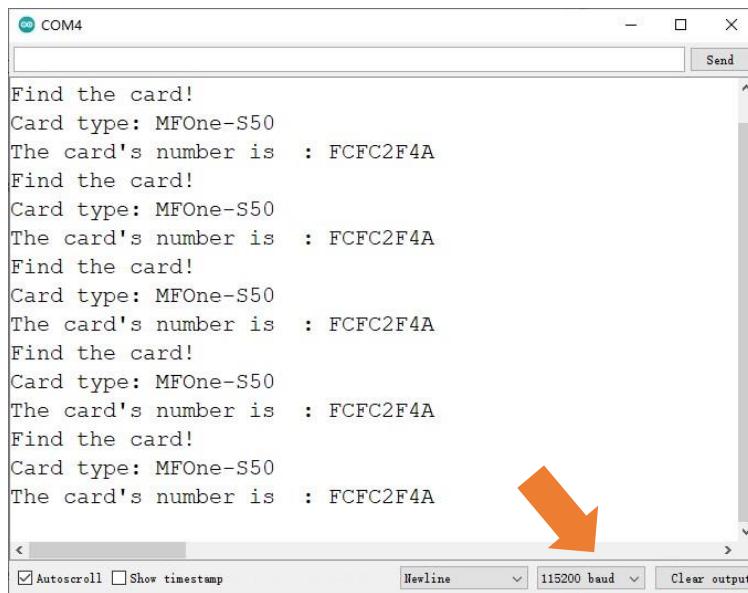

The following is the program code:

```
1 #include <SPI.h>
2 #include <RFID.h>
3
4 RFID rfid(4, 5);
5 unsigned char status;
6 unsigned char str[MAX_LEN]; //MAX_LEN is 16: size of the array
7 void setup()
8 {
9     Serial.begin(115200);
10    SPI.begin();
11    rfid.init(); //initialization
12    Serial.println("Please put the card to the induction area...");
13 }
14
15 void loop()
16 {
17     //Search card, return card types
18     if (rfid.findCard(PICC_REQIDL, str) == MI_OK) {
19         Serial.println("Find the card!");
20         // Show card type
21         ShowCardType(str);
22         //Anti-collision detection, read card serial number
23         if (rfid.anticoll(str) == MI_OK) {
24             Serial.print("The card's number is : ");
25             //Display card serial number
26             for (int i = 0; i < 4; i++) {
27                 Serial.print(0x0F & (str[i] >> 4), HEX);
28                 Serial.print(0x0F & str[i], HEX);
29             }
30         }
31     }
32 }
```

Any concerns? support@freenove.com

```

29     Serial.println("");
30 }
31 //card selection (lock card to prevent redundant read, removing the line will make the
32 sketch read cards continually)
33 rfid.selectTag(str);
34 }
35 rfid.halt(); // command the card to enter sleeping state
36 }
37 void ShowCardType(unsigned char * type)
38 {
39     Serial.print("Card type: ");
40     if (type[0] == 0x04 && type[1] == 0x00)
41         Serial.println("MFOne-S50");
42     else if (type[0] == 0x02 && type[1] == 0x00)
43         Serial.println("MFOne-S70");
44     else if (type[0] == 0x44 && type[1] == 0x00)
45         Serial.println("MF-UltraLight");
46     else if (type[0] == 0x08 && type[1] == 0x00)
47         Serial.println("MF-Pro");
48     else if (type[0] == 0x44 && type[1] == 0x03)
49         Serial.println("MF Desire");
50     else
51         Serial.println("Unknown");
52 }
```

After including the RFID library, we need to construct a RFID class object before using the function in RFID library. Its constructor needs to be written to two pins, respectively to the SDA pin and the RST pin.

3	RFID rfid(5, 6);
---	------------------

In setup, initialize the serial port, SPI and RFID.

8	Serial.begin(115200);
9	SPI.begin();
10	rfid.init(); //initialization

In loop(), use findCard() waiting for the card approaching. Once it detects card contact, this function will return MI_OK and save the card type data in parameter str, and then enter the if statement.

17	if (rfid.findCard(PICC_REQIDL, str) == MI_OK) {
----	-------------------------------------------------

After entering if statement, call the sub function ShowCardType(). Then determine the type of the card according to the content of STR and print the type out through the serial port. ShowCardType(str);

20	ShowCardType(str);
----	--------------------

Then use the.anticoll() to read UID of the card and use serial port to print it out.

22	if (rfid.anticoll(str) == MI_OK) {
23	Serial.print("The card's number is : ");
24	//Display card serial number
25	for (int i = 0; i < 4; i++) {
26	Serial.print(0x0F & (str[i] >> 4), HEX);

```
27 Serial.print(0x0F & str[i], HEX);  
28 }  
29 Serial.println("");  
30 }
```



Project 27.2 Read and write

In this project, we will do reading and writing operations to the card.

Component List

Same with last section.

Circuit

Same with last section.

Sketch

Sketch_27.2_RFID_Read_And_Write

In this sketch, first read the data in particular location of the S50 M1 Card, then write data in that position and read it out. Display these data through the serial port.

```

Sketch_27.2_RFID_Read_And_Write | Arduino 1.8.19
File Edit Sketch Tools Help
Sketch_27.2_RFID_Read_And_Write
48 }
49
50 void loop()
51 {
52     //find the card
53     rfid.findCard(PICC_REQIDL, str);
54     //Anti-collision detection, read serial number of card
55     if (rfid.anticoll(str) == MI_OK) {
56         Serial.print("The card's number is : ");
57         //print the card serial number
58         for (int i = 0; i < 4; i++) {
59             Serial.print(0x0F & (str[i] >> 4), HEX);
60             Serial.print(0x0F & str[i], HEX);
61         }
62         Serial.println("");
63         memcpy(rfid.serNum, str, 5);
64     }
65     //select card and return card capacity (lock the card to prevent multiple read and writer)
66     rfid.selectTag(rfid.serNum);
67     //first, read the data of data block 4
68     readCard(4);
69     //write data(within 16 bytes) to data block
70     writeCard(4);
71     //then read the data of data block again

```

Done uploading.

Leaving...
Hard resetting via RTS pin...

All SSL ciphers (most compatible), 32KB cache + 32KB IRAM (balanced). Use pgm_read macros for IRAM/PROGMEM, 4MB (FS:2MB OTA:~1019kB), 2, v2 Lower Memory, Disabled, None, Only Sketch, 115200 on COM4

After verifying and uploading the code, open the serial port monitor and make a card approach the sensing area of RFID module, then the serial port monitoring window will display displacement ID numbers of the card, the type of this card and the contents (before and after writing operation) of data block. If the induction time is too short, it may lead to incomplete information display.



```

COM4
Send

Read from the blockAddr of the card : 4
The data is (char type display): WelcomeFreenove
The data is (HEX type display): 57 65 6C 63 6F 6D 65 46 72 65 65 6E 6F 76 65 0
set the new card password, and can modify the data of the Sector: 1
Write card OK!
Read from the blockAddr of the card : 4
The data is (char type display): WelcomeFreenove
The data is (HEX type display): 57 65 6C 63 6F 6D 65 46 72 65 65 6E 6F 76 65 0
The card's number is : FCFC2F4A
Read from the blockAddr of the card : 4
The data is (char type display): WelcomeFreenove
The data is (HEX type display): 57 65 6C 63 6F 6D 65 46 72 65 65 6E 6F 76 65 0
set the new card password, and can modify the data of the Sector: 1
Write card OK!
Read from the blockAddr of the card : 4
The data is (char type display): WelcomeFreenove
The data is (HEX type display): 57 65 6C 63 6F 6D 65 46 72 65 65 6E 6F 76 65 0
<                                >
Autoscroll  Show timestamp Newline 115200 baud Clear output

```

The following is the program code:

```

1 #include <SPI.h>
2 #include <RFID.h>
3
4 //pin5:pin of card reader SDA. pin6:pin of card reader RST
5 RFID rfid(4, 5);
6
7 // 4-byte card serial number, the fifth byte is check byte
8 unsigned char serNum[5];
9 unsigned char status;
10 unsigned char str[MAX_LEN];
11 unsigned char blockAddr;           //Select the operation block address: 0 to 63
12
13 // Write card data you want(within 16 bytes)
14 unsigned char writeData[16] = "WelcomeFreenove";
15
16 // The A password of original sector: 16 sectors; the length of password in each sector is 6
17 // bytes.
17 unsigned char sectorKeyA[16][16] = {
18     { 0xFF, 0xFF, 0xFF, 0xFF, 0xFF, 0xFF } ,
19     { 0xFF, 0xFF, 0xFF, 0xFF, 0xFF, 0xFF } ,
20     { 0xFF, 0xFF, 0xFF, 0xFF, 0xFF, 0xFF } ,
21     { 0xFF, 0xFF, 0xFF, 0xFF, 0xFF, 0xFF } ,
22     { 0xFF, 0xFF, 0xFF, 0xFF, 0xFF, 0xFF } ,

```



```
23 { 0xFF, 0xFF, 0xFF, 0xFF, 0xFF, 0xFF } ,  
24 { 0xFF, 0xFF, 0xFF, 0xFF, 0xFF, 0xFF } ,  
25 { 0xFF, 0xFF, 0xFF, 0xFF, 0xFF, 0xFF } ,  
26 { 0xFF, 0xFF, 0xFF, 0xFF, 0xFF, 0xFF } ,  
27 { 0xFF, 0xFF, 0xFF, 0xFF, 0xFF, 0xFF } ,  
28 { 0xFF, 0xFF, 0xFF, 0xFF, 0xFF, 0xFF } ,  
29 { 0xFF, 0xFF, 0xFF, 0xFF, 0xFF, 0xFF } ,  
30 { 0xFF, 0xFF, 0xFF, 0xFF, 0xFF, 0xFF } ,  
31 { 0xFF, 0xFF, 0xFF, 0xFF, 0xFF, 0xFF } ,  
32 { 0xFF, 0xFF, 0xFF, 0xFF, 0xFF, 0xFF } ,  
33 { 0xFF, 0xFF, 0xFF, 0xFF, 0xFF, 0xFF } ,  
34 };  
35  
36 void setup()  
37 {  
38     Serial.begin(115200);  
39     SPI.begin();  
40     rfid.init();  
41     Serial.println("Please put the card to the induction area...");  
42 }  
43  
44 void loop()  
45 {  
46     //find the card  
47     rfid.findCard(PICC_REQIDL, str);  
48     //Anti-collision detection, read serial number of card  
49     if (rfid.anticoll(str) == MI_OK) {  
50         Serial.print("The card's number is : ");  
51         //print the card serial number  
52         for (int i = 0; i < 4; i++) {  
53             Serial.print(0x0F & (str[i] >> 4), HEX);  
54             Serial.print(0x0F & str[i], HEX);  
55         }  
56         Serial.println("");  
57         memcpy(rfid.serNum, str, 5);  
58     }  
59     //select card and return card capacity (lock the card to prevent multiple read and written)  
60     rfid.selectTag(rfid.serNum);  
61     //first, read the data of data block 4  
62     readCard(4);  
63     //write data(within 16 bytes) to data block  
64     writeCard(4);  
65     //then read the data of data block again  
66     readCard(4);
```

```

67     rfid.halt();
68 }
69
70 //write the card
71 void writeCard(int blockAddr) {
72     if (rfid.auth(PICC_AUTHENT1A, blockAddr, sectorKeyA[blockAddr / 4], rfid.serNum) == MI_OK)
73 //authenticate
74     {
75         //write data
76         //status = rfid.write((blockAddr/4 + 3*(blockAddr/4+1)), sectorKeyA[0]);
77         Serial.print("set the new card password, and can modify the data of the Sector: ");
78         Serial.println(blockAddr / 4, DEC);
79         // select block of the sector to write data
80         if (rfid.write(blockAddr, writeDate) == MI_OK) {
81             Serial.println("Write card OK!");
82         }
83     }
84 }
85
86 //read the card
87 void readCard(int blockAddr) {
88     if (rfid.auth(PICC_AUTHENT1A, blockAddr, sectorKeyA[blockAddr / 4], rfid.serNum) == MI_OK)
89 // authenticate
90     {
91         // select a block of the sector to read its data
92         Serial.print("Read from the blockAddr of the card : ");
93         Serial.println(blockAddr, DEC);
94         if (rfid.read(blockAddr, str) == MI_OK) {
95             Serial.print("The data is (char type display): ");
96             Serial.println((char *)str);
97             Serial.print("The data is (HEX type display): ");
98             for (int i = 0; i < sizeof(str); i++) {
99                 Serial.print(str[i], HEX);
100                Serial.print(" ");
101            }
102            Serial.println();
103        }
104    }
105 }

```

In the sub function of writeCard() and readCard(), we must first verify the password A, and then use the corresponding sub function to read and write. Here we do reading and writing operations to data block 0 (absolute NO.4) of the first sector.

73	if (rfid.auth(PICC_AUTHENT1A, blockAddr, sectorKeyA[blockAddr / 4], rfid.serNum) == MI_OK)
74	//authenticate



In loop(), compare the contents of the data block NO.4 after written to the original contents.

```
61 //first, read the data of data block 4
62 readCard(4);
63 //write data(within 16 bytes) to data block
64 writeCard(4);
65 //then read the data of data block again
66 readCard(4);
```


Chapter 28 WiFi Working Modes

In this chapter, we'll focus on the WiFi infrastructure for ESP8266.

ESP8266 has 3 different WiFi operating modes: station mode, AP mode and AP+station mode. All WiFi programming projects must be configured with WiFi operating mode before using WiFi, otherwise WiFi cannot be used.

Project 28.1 Station mode


Component List

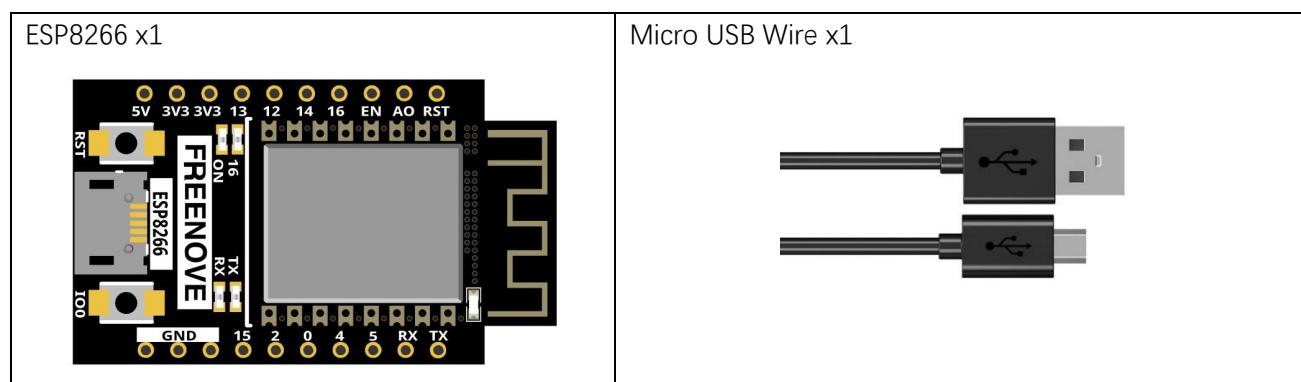

Component knowledge


Station mode

When ESP8266 selects Station mode, it acts as a WiFi client. It can connect to the router network and communicate with other devices on the router via WiFi connection. As shown below, the PC is connected to the router, and if ESP8266 wants to communicate with the PC, it needs to be connected to the router.

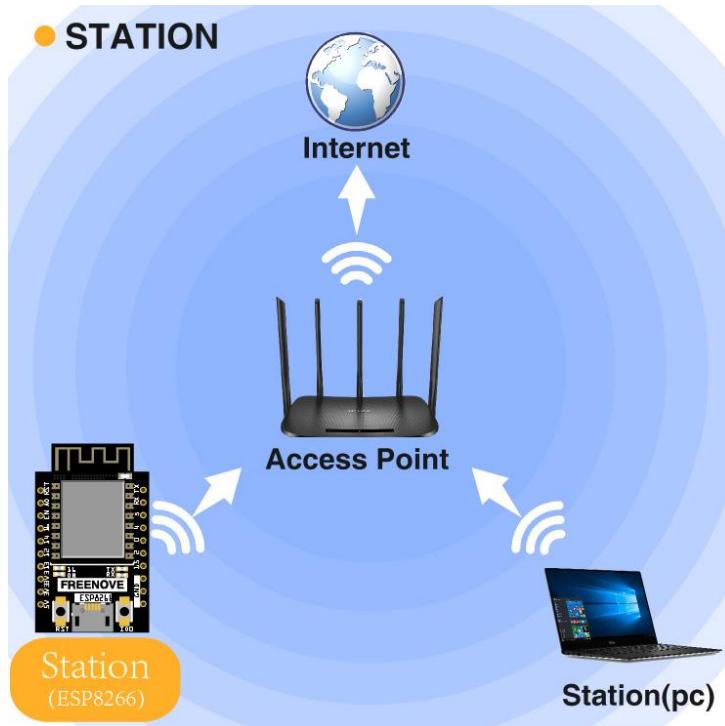


Circuit

Connect Freenove ESP8266 to the computer using the USB cable.

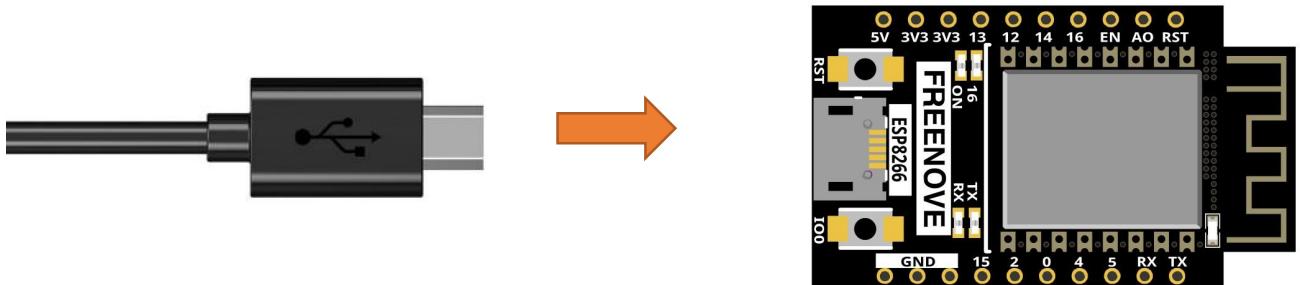

Sketch

Sketch_28.1_Station_mode

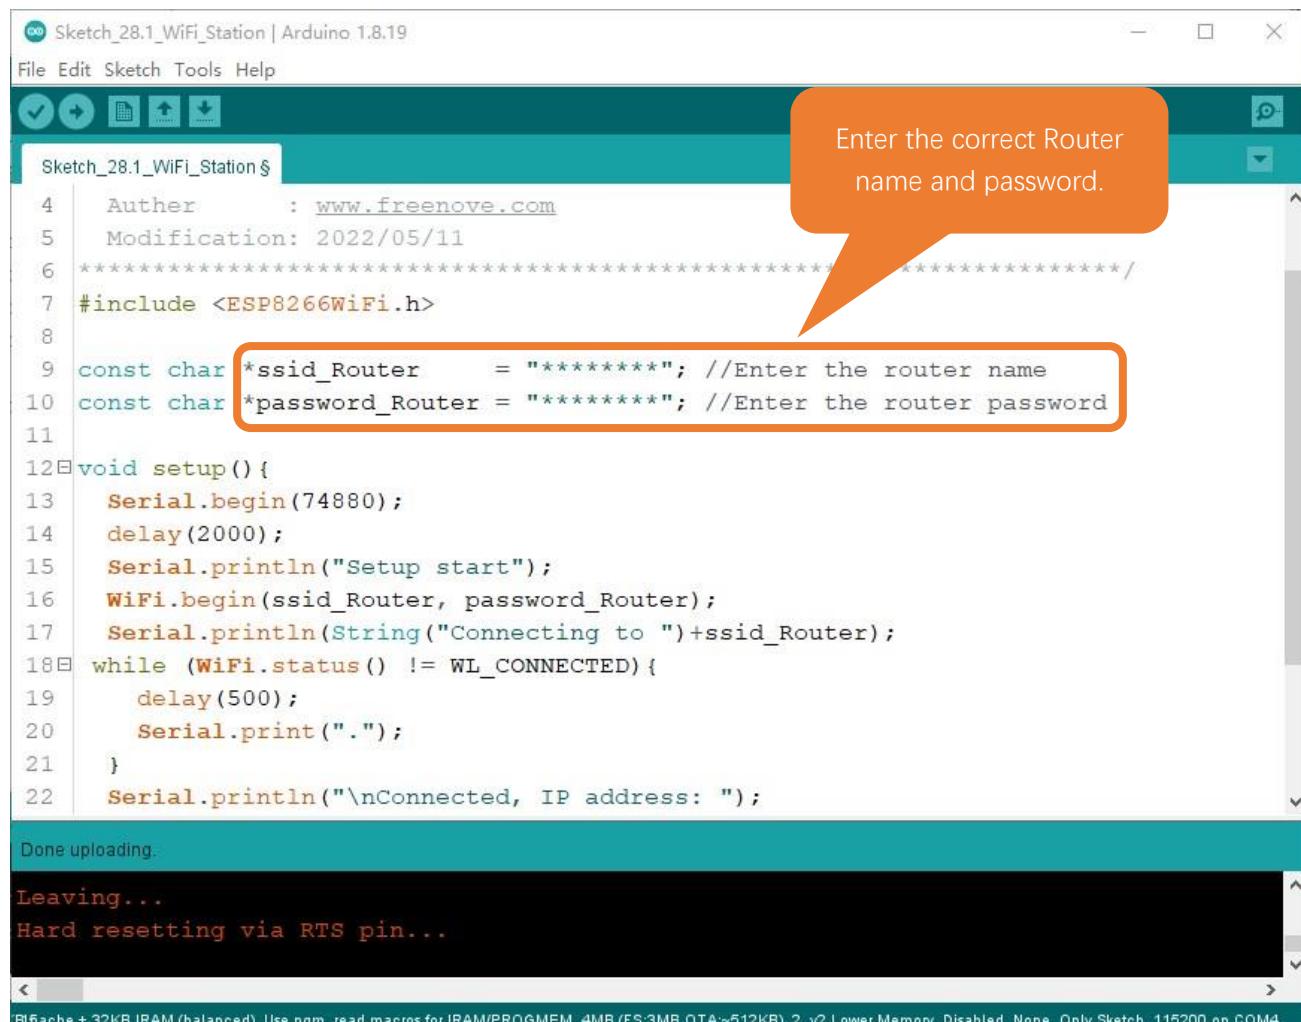


```
Sketch_28.1_WiFi_Station | Arduino 1.8.19
File Edit Sketch Tools Help
Sketch_28.1_WiFi_Station §
4 Author : www.freenove.com
5 Modification: 2022/05/11
6 ****
7 #include <ESP8266WiFi.h>
8
9 const char *ssid_Router      = "*****"; //Enter the router name
10 const char *password_Router = "*****"; //Enter the router password
11
12 void setup(){
13     Serial.begin(74880);
14     delay(2000);
15     Serial.println("Setup start");
16     WiFi.begin(ssid_Router, password_Router);
17     Serial.println(String("Connecting to ")+ssid_Router);
18     while (WiFi.status() != WL_CONNECTED) {
19         delay(500);
20         Serial.print(".");
21     }
22     Serial.println("\nConnected, IP address: ");
}
Done uploading.

Leaving...
Hard resetting via RTS pin...
```

Enter the correct Router name and password.

Because the names and passwords of routers in various places are different, before the Sketch runs, users need to enter the correct router's name and password in the box as shown in the illustration above. After making sure the router name and password are entered correctly, compile and upload codes to ESP8266, open serial monitor and set baud rate to 74880. And then it will display as follows:

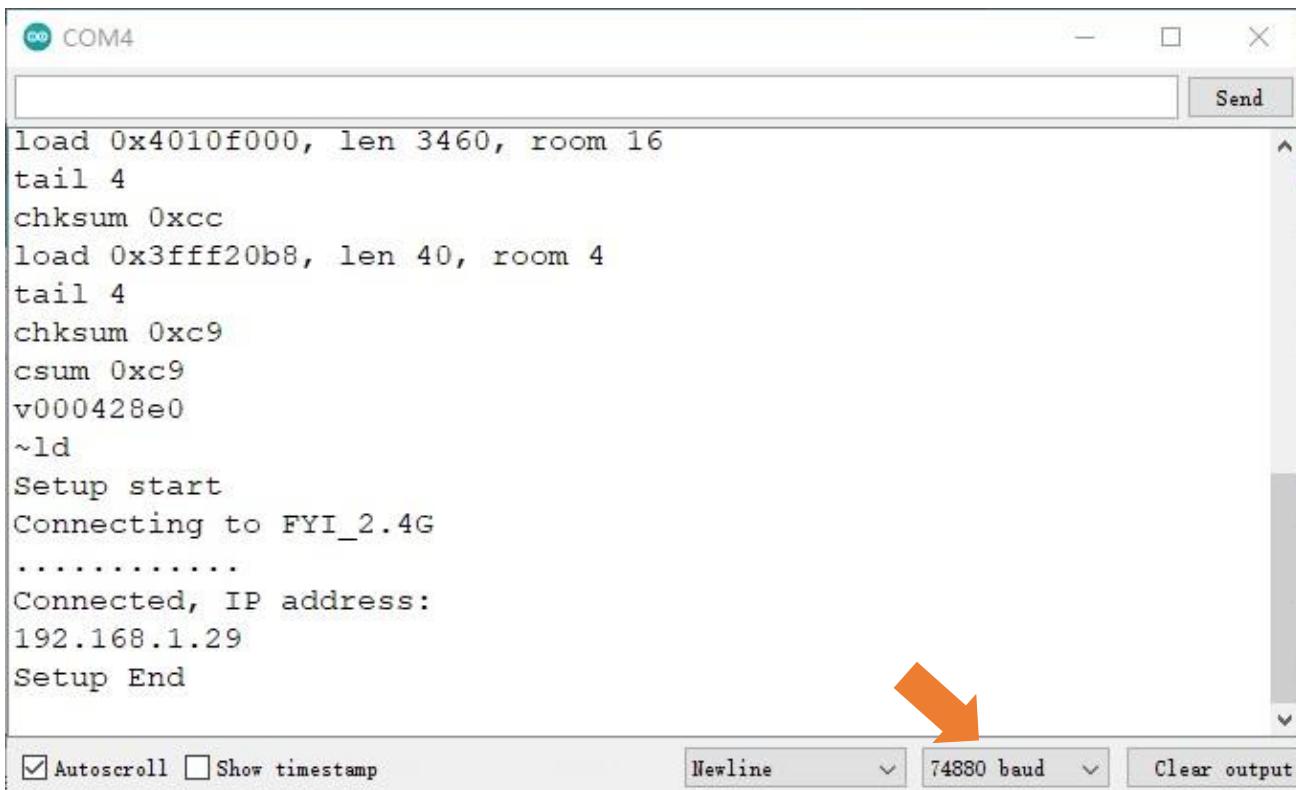

When ESP8266 successfully connects to “ssid_Router”, serial monitor will print out the IP address assigned to ESP8266 by the router.

The following is the program code:

```

1 #include <ESP8266WiFi.h>
2
3 const char *ssid_Router      = "*****"; //Enter the router name
4 const char *password_Router = "*****"; //Enter the router password
5
6 void setup() {
7     Serial.begin(74880);
8     delay(2000);
9     Serial.println("Setup start");
10    WiFi.begin(ssid_Router, password_Router);
11    Serial.println(String("Connecting to ") + ssid_Router);
12    while (WiFi.status() != WL_CONNECTED) {
13        delay(500);
14        Serial.print(".");
15    }
16    Serial.println("\nConnected, IP address: ");
17    Serial.println(WiFi.localIP());
18    Serial.println("Setup End");
19 }
20
21 void loop() {

```

```
22 }
```

Include the WiFi Library header file of ESP8266.

```
1 #include <ESP8266WiFi.h>
```

Enter correct router name and password.

```
3 const char *ssid_Router = "*****"; //Enter the router name
4 const char *password_Router = "*****"; //Enter the router password
```

Set ESP8266 in Station mode and connect it to your router.

```
10 WiFi.begin(ssid_Router, password_Router);
```

Check whether ESP8266 has connected to router successfully every 0.5s.

```
12 while (WiFi.status() != WL_CONNECTED) {
13     delay(500);
14     Serial.print(".");
15 }
```

Serial monitor prints out the IP address assigned to ESP8266

```
17 Serial.println(WiFi.localIP());
```

Reference

Class Station

Every time when using WiFi, you need to include header file "ESP8266WiFi.h".

begin(ssid, password,channel, bssid, connect): ESP8266 is used as Station to connect hotspot.

ssid: WiFi hotspot name

password: WiFi hotspot password

channel: WiFi hotspot channel number; communicating through specified channel; optional parameter

bssid: mac address of WiFi hotspot, optional parameter

connect: boolean optional parameter, defaulting to true. If set as false, then ESP8266 won't connect WiFi.

config(local_ip, gateway, subnet, dns1, dns2): set static local IP address.

local_ip: station fixed IP address.

subnet: subnet mask

dns1,dns2: optional parameter. define IP address of domain name server

status: obtain the connection status of WiFi

local IP(): obtain IP address in Station mode

disconnect(): disconnect wifi

setAutoConnect(boolen): set automatic connection Every time ESP8266 is power on, it will connect WiFi automatically.

setAutoReconnect(boolen): set automatic reconnection Every time ESP8266 disconnects WiFi, it will reconnect to WiFi automatically.



Project 28.2 AP mode


Component List & Circuit

Component List & Circuit are the same as in Section 28.1.

Component knowledge


AP mode

When ESP8266 selects AP mode, it creates a hotspot network that is separate from the Internet and waits for other WiFi devices to connect. As shown in the figure below, ESP8266 is used as a hotspot. If a mobile phone or PC wants to communicate with ESP8266, it must be connected to the hotspot of ESP8266. Only after a connection is established with ESP8266 can they communicate.

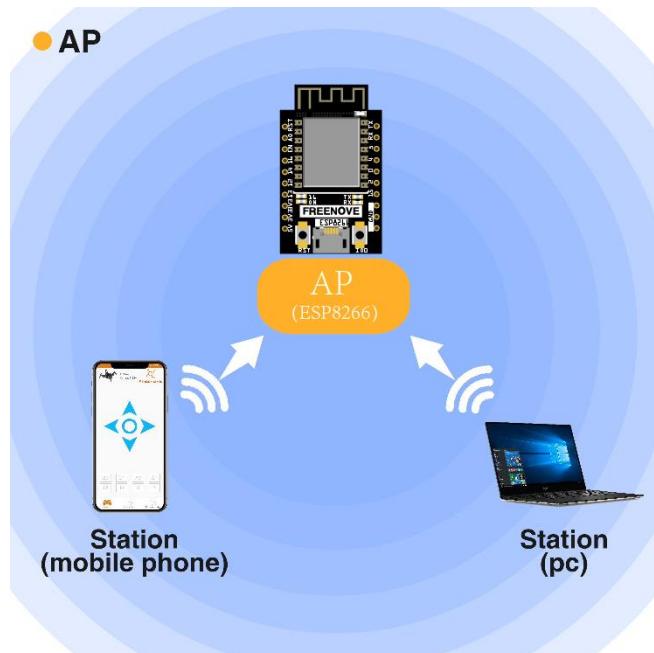

Circuit

Connect Freenove ESP8266 to the computer using the USB cable.

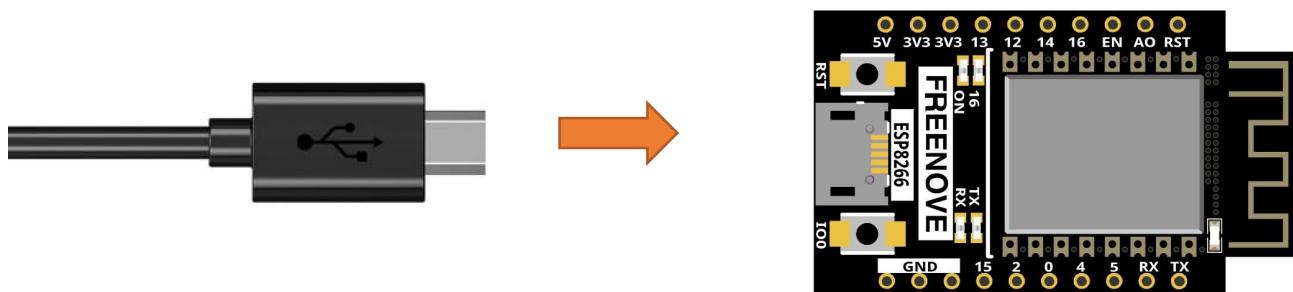

Sketch

Sketch_28.2_AP_mode



```
Sketch_28.2_WiFi_AP | Arduino 1.8.19
File Edit Sketch Tools Help
Sketch_28.2_WiFi_AP
1 // ****
2   Filename      : WiFi AP
3   Description   : Set ESP8266 WiFi AP
4   Author        : www.freenove.com
5   Modification: 2022/05/15
6 ****
7 #include <ESP8266WiFi.h>
8
9 const char *ssid_AP      = "WiFi_Name"; //Enter the router name
10 const char *password_AP = "12345678"; //Enter the router password
11
12 IPAddress local_IP(192,168,1,100); //Set the IP address of ESP8266 itself
13 IPAddress gateway(192,168,1,10);    //Set the gateway of ESP8266 itself
14 IPAddress subnet(255,255,255,0);    //Set the subnet mask for ESP32 itself
15
16 void setup() {
17   Serial.begin(74880);
18   delay(2000);
< | >
Done uploading.


Leaving...
Hard resetting via RTS pin...
```

Blaze + 32KB IRAM (balanced), Use pgm_read macros for IRAM/PROGMEM, 4MB (FS:3MB OTA:~512KB), 2, v2 Lower Memory, Disabled, None, Only Sketch, 115200 on COM4

A callout bubble with the text "Set a name and a password for ESP8266 AP." points to the ssid_AP and password_AP variables in the code.

Before the Sketch runs, you can make any changes to the AP name and password for ESP8266 in the box as shown in the illustration above. Of course, you can leave it alone by default.

Compile and upload codes to ESP8266, open the serial monitor and set the baud rate to 74880. And then it will display as follows.

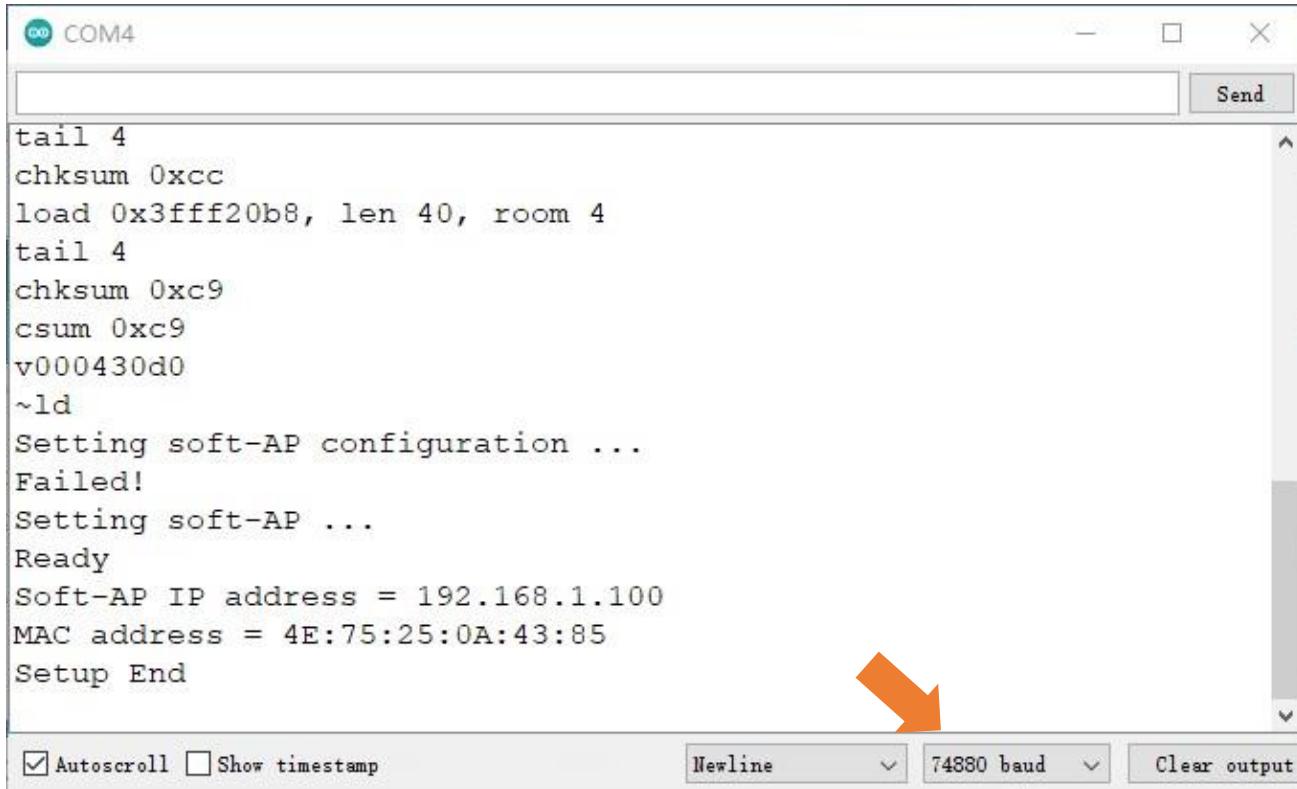


The screenshot shows the Arduino Serial Monitor window titled "COM4". The text output is as follows:

```
tail 4
checksum 0xcc
load 0x3fff20b8, len 40, room 4
tail 4
checksum 0xc9
csum 0xc9
v000430d0
~ld
Setting soft-AP configuration ...
Failed!
Setting soft-AP ...
Ready
Soft-AP IP address = 192.168.1.100
MAC address = 4E:75:25:0A:43:85
Setup End
```

At the bottom of the window, there is an orange arrow pointing downwards towards the scroll bar. The bottom status bar includes checkboxes for "Autoscroll" and "Show timestamp", a "Newline" dropdown, a "74880 baud" dropdown, and a "Clear output" button.

When observing the print information of the serial monitor, turn on the WiFi scanning function of your phone, and you can see the ssid_AP on ESP8266, which is called "WiFi_Name" in this Sketch. You can enter the password "12345678" to connect it or change its AP name and password by modifying Sketch.

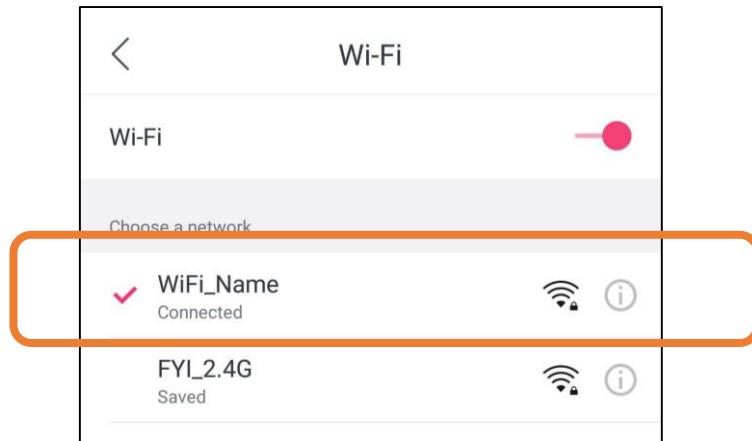

The following is the program code:

```

1 #include <ESP8266WiFi.h>
2
3 const char *ssid_AP      = "WiFi_Name"; //Enter the router name
4 const char *password_AP = "12345678"; //Enter the router password
5
6 IPAddress local_IP(192, 168, 1, 100); //Set the IP address of ESP8266 itself
7 IPAddress gateway(192, 168, 1, 10); //Set the gateway of ESP8266 itself
8 IPAddress subnet(255, 255, 255, 0); //Set the subnet mask for ESP8266 itself
9
10 void setup() {
11     Serial.begin(74880);
12     delay(2000);
13     Serial.println("Setting soft-AP configuration ... ");
14     WiFi.disconnect();
15     WiFi.mode(WIFI_AP);
16     Serial.println(WiFi.softAPConfig(local_IP, gateway, subnet) ? "Ready" : "Failed!");
17     Serial.println("Setting soft-AP ... ");
18     boolean result = WiFi.softAP(ssid_AP, password_AP);
19     if(result) {
20         Serial.println("Ready");
21         Serial.println(String("Soft-AP IP address = ") + WiFi.softAPIP().toString());
22         Serial.println(String("MAC address = ") + WiFi.softAPmacAddress().c_str());
23     } else {
24         Serial.println("Failed!");
25     }
26     Serial.println("Setup End");
27 }
28
29 void loop() {
30 }
```

Include WiFi Library header file of ESP8266.

```
1 #include <ESP8266WiFi.h>
```

Enter correct AP name and password.

```
3 const char *ssid_AP      = "WiFi_Name"; //Enter the router name
4 const char *password_AP = "12345678"; //Enter the router password
```

Set ESP8266 in AP mode.

```
15 WiFi.mode(WIFI_AP);
```

Configure IP address, gateway and subnet mask for ESP8266.

```
16 WiFi.softAPConfig(local_IP, gateway, subnet)
```

Turn on an AP in ESP8266, whose name is set by ssid_AP and password is set by password_AP.

```
18 WiFi.softAP(ssid_AP, password_AP);
```

Check whether the AP is turned on successfully. If yes, print out IP and MAC address of AP established by ESP8266. If no, print out the failure prompt.

```
19 if(result){  
20     Serial.println("Ready");  
21     Serial.println(String("Soft-AP IP address = ") + WiFi.softAPIP().toString());  
22     Serial.println(String("MAC address = ") + WiFi.softAPmacAddress().c_str());  
23 }else{  
24     Serial.println("Failed!");  
25 }  
26 Serial.println("Setup End");
```

Reference

Class AP

Every time when using WiFi, you need to include header file "ESP8266WiFi.h".

softAP(ssid, password, channel, ssid_hidden, max_connection):

ssid: WiFi hotspot name

password: WiFi hotspot password

channel: Number of WiFi connection channels, range 1-13. The default is 1.

ssid_hidden: Whether to hide WiFi name from scanning by other devices. The default is not hide.

max_connection: Maximum number of WiFi connected devices. The range is 1-4. The default is 4.

softAPConfig(local_ip, gateway, subnet): set static local IP address.

local_ip: station fixed IP address.

Gateway: gateway IP address


subnet: subnet mask

softAP(): obtain IP address in AP mode

softAPdisconnect (): disconnect AP mode.

Project 28.3 AP+Station mode

Component List

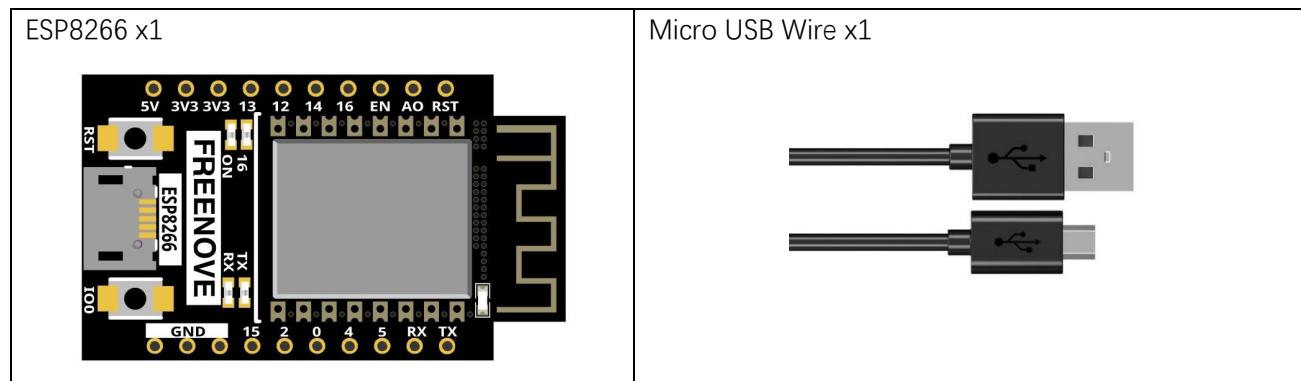


Component knowledge

AP+Station mode

In addition to AP mode and station mode, ESP8266 can also use AP mode and station mode at the same time. This mode contains the functions of the previous two modes. Turn on ESP8266's station mode, connect it to the router network, and it can communicate with the Internet via the router. At the same time, turn on its AP mode to create a hotspot network. Other WiFi devices can choose to connect to the router network or the hotspot network to communicate with ESP8266.

Circuit

Connect Freenove ESP8266 to the computer using the USB cable.

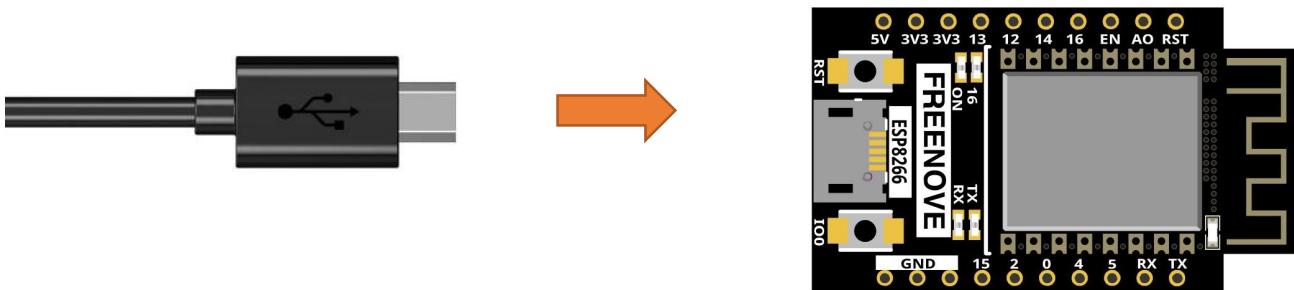

Sketch

Sketch_28.3_AP_Station_mode

Please enter the correct names and passwords of Router and AP.

```

7 #include <ESP8266WiFi.h>
8
9 const char *ssid_Router      = "*****"; //Enter the router name
10 const char *password_Router = "*****"; //Enter the router password
11 const char *ssid_AP         = "WiFi_Name"; //Enter the router name
12 const char *password_AP    = "12345678"; //Enter the router password
13
14 void setup(){
15   Serial.begin(74880);
16   Serial.println("Setting soft-AP configuration ... ");
17   WiFi.disconnect();
18   WiFi.mode(WIFI_AP);
19   Serial.println("Setting soft-AP ... ");
20   boolean result = WiFi.softAP(ssid_AP, password_AP);
21   if(result){
22     Serial.println("Ready");
23     Serial.println(String("Soft-AP IP address = ") + WiFi.softAPIP().toString());
24     Serial.println(String("MAC address = ") + WiFi.softAPmacAddress().c_str());
  
```


Done uploading.

Leaving...
Hard resetting via RTS pin...

8M Cache + 32KB IRAM (balanced), Use pgm_read macros for IRAM/PROGMEM, 4MB (FS:3MB OTA:~512KB), 2, v2 Lower Memory, Disabled, None, Only Sketch, 115200 on COM4

It is analogous to project 28.1 and project 28.2. Before running the Sketch, you need to modify ssid_Router, password_Router, ssid_AP and password_AP shown in the box of the illustration above.

After making sure that Sketch is modified correctly, compile and upload codes to ESP8266, open serial monitor and set baud rate to 74880. And then it will display as follows:

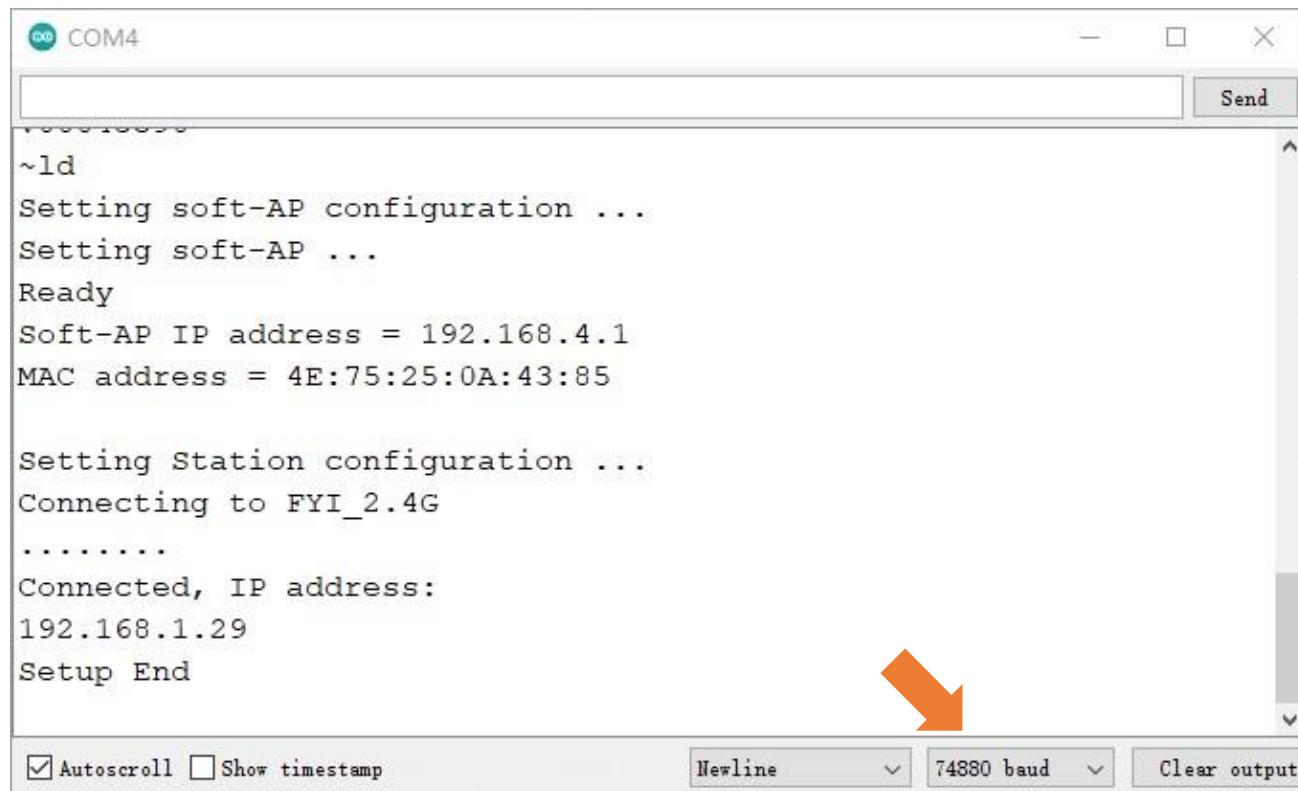

```

COM4
Send


~ld
Setting soft-AP configuration ...
Setting soft-AP ...
Ready
Soft-AP IP address = 192.168.4.1
MAC address = 4E:75:25:0A:43:85

Setting Station configuration ...
Connecting to FYI_2.4G
.....
Connected, IP address:
192.168.1.29
Setup End

```

Autoscroll Show timestamp Newline 74880 baud Clear output

When observing the print information of the serial monitor, turn on the WiFi scanning function of your phone, and you can see the ssid_AP on ESP8266.

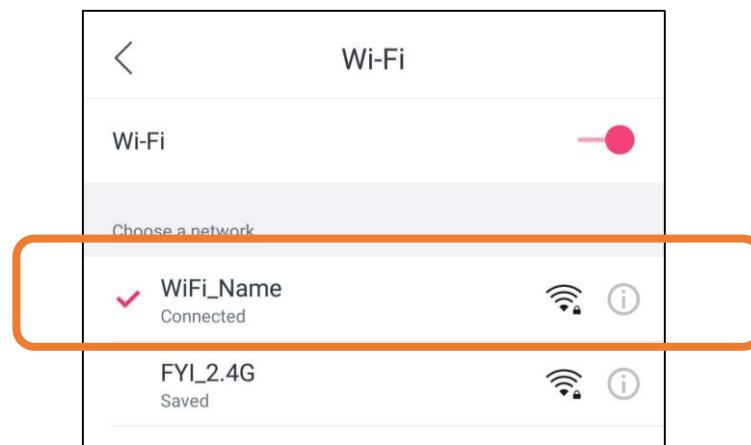

The following is the program code:

1	#include <ESP8266WiFi.h>
2	
3	const char *ssid_Router = "*****"; //Enter the router name
4	const char *password_Router = "*****"; //Enter the router password
5	const char *ssid_AP = "WiFi_Name"; //Enter the AP name
6	const char *password_AP = "12345678"; //Enter the AP password
7	



```
8 void setup() {
9   Serial.begin(74880);
10  Serial.println("Setting soft-AP configuration ... ");
11  WiFi.disconnect();
12  WiFi.mode(WIFI_AP);
13  Serial.println("Setting soft-AP ... ");
14  boolean result = WiFi.softAP(ssid_AP, password_AP);
15  if(result){
16    Serial.println("Ready");
17    Serial.println(String("Soft-AP IP address = ") + WiFi.softAPIP().toString());
18    Serial.println(String("MAC address = ") + WiFi.softAPmacAddress().c_str());
19 }else{
20   Serial.println("Failed!");
21 }
22
23 Serial.println("\nSetting Station configuration ... ");
24 WiFi.begin(ssid_Router, password_Router);
25 Serial.println(String("Connecting to ") + ssid_Router);
26 while (WiFi.status() != WL_CONNECTED) {
27   delay(500);
28   Serial.print(".");
29 }
30 Serial.println("\nConnected, IP address: ");
31 Serial.println(WiFi.localIP());
32 Serial.println("Setup End");
33 }
34
35 void loop() {
36 }
```


Chapter 29 TCP/IP

In this chapter, we will introduce how ESP8266 implements network communications based on TCP/IP protocol. There are two roles in TCP/IP communication, namely Server and Client, which will be implemented respectively with two projects in this chapter.

Project 29.1 As Client

In this section, ESP8266 is used as Client to connect Server on the same LAN and communicate with it.

Component List

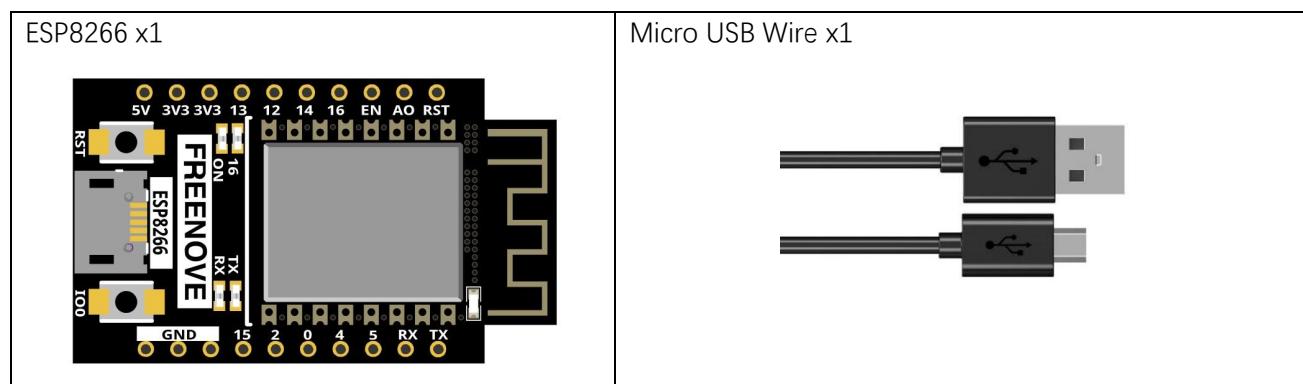


Component knowledge

TCP connection


Before transmitting data, TCP needs to establish a logical connection between the sending end and the receiving end. It provides reliable and error-free data transmission between the two computers. In the TCP connection, the client and the server must be clarified. The client sends a connection request to the server, and each time such a request is proposed, a "three-times handshake" is required.

Three-times handshake: In the TCP protocol, during the preparation phase of sending data, the client and the server interact three times to ensure the reliability of the connection, which is called "three-times handshake". The first handshake, the client sends a connection request to the server and waits for the server to confirm. The second handshake, the server sends a response back to the client informing that it has received the connection request.

The third handshake, the client sends a confirmation message to the server again to confirm the connection.

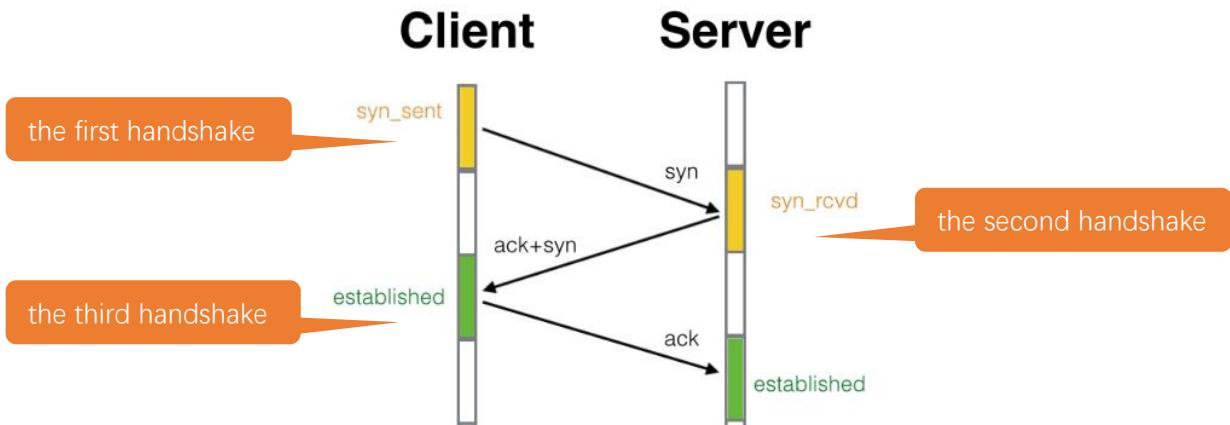

TCP is a connection-oriented, low-level transmission control protocol. After TCP establishes a connection, the client and server can send and receive messages to each other, and the connection will always exist as long as the client or server does not initiate disconnection. Each time one party sends a message, the other party will reply with an ack signal.

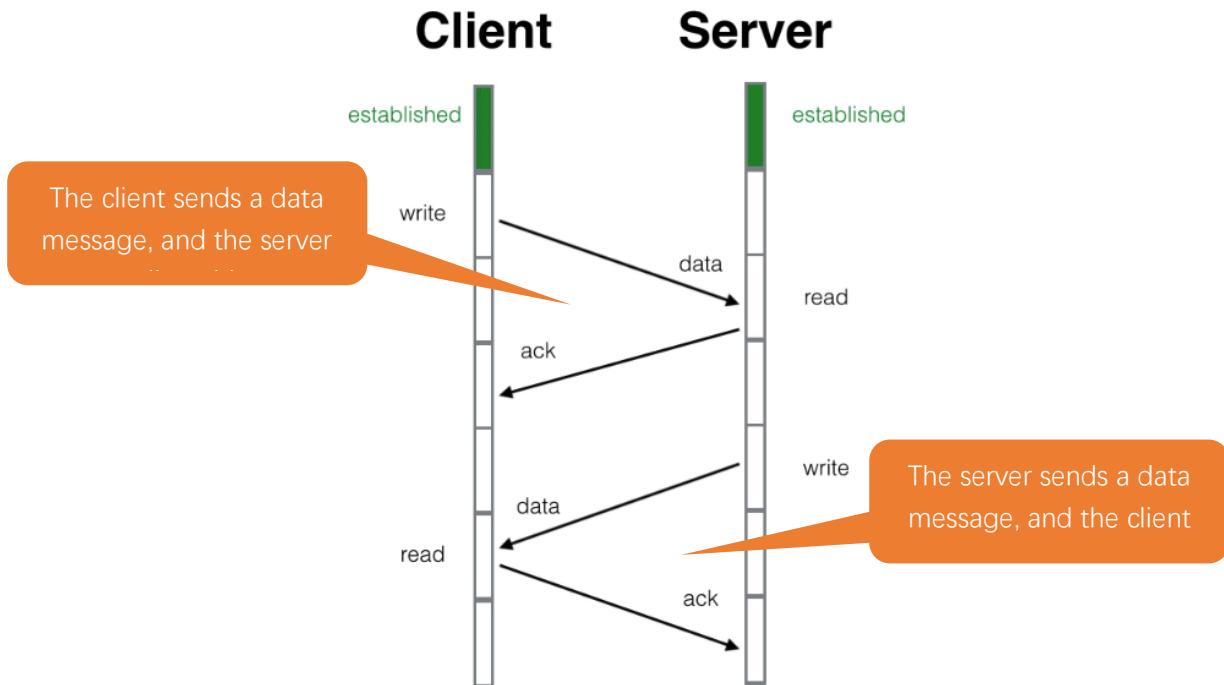

Install Processing

In this tutorial, we use Processing to build a simple TCP/IP communication platform.

If you've not installed Processing, you can download it by clicking <https://processing.org/download/>. You can choose an appropriate version to download according to your PC system.

The screenshot shows the official Processing website. At the top, there's a navigation bar with links for 'Processing', 'p5.js', 'Processing.py', 'Processing for Android', 'Processing for Pi', and 'Processing Foundation'. Below the navigation bar is a large banner with the word 'Processing' and a geometric background. To the left, there's a sidebar with links for 'Cover', 'Download', 'Donate', 'Exhibition', 'Reference', 'Libraries', 'Tools', 'Environment', 'Tutorials', 'Examples', 'Books', 'Overview', and 'People'. In the center, there's a large 'P' logo inside a circle. To the right of the logo, it says '3.5.4 (17 January 2020)'. Below this, there are download links for 'Windows 64-bit', 'Windows 32-bit', 'Linux 64-bit', and 'Mac OS X'. A note below the download links says 'Read about the [changes in 3.0](#). The list of revisions covers the differences between releases in detail.'

Unzip the downloaded file to your computer. Click "processing.exe" as the figure below to run this software.

	core	2020/1/17 12:16
	java	2020/1/17 12:17
	lib	2020/1/17 12:16
	modes	2020/1/17 12:16
	tools	2020/1/17 12:16
	processing.exe	2020/1/17 12:16
	processing-java.exe	2020/1/17 12:16
	revisions.txt	2020/1/17 12:16



Use Server mode for communication

Open the “**Freenove_Ultimate_Starter_Kit_for_ESP8266\С\Sketches\Sketch_29.1_WiFiClient\sketchWiFi\sketchWiFi.pde**”, and click “Run”.




The new pop-up interface is as follows. If ESP8266 is used as client, select TCP SERVER mode for sketchWiFi.



When sketchWiFi selects TCP SERVER mode, ESP8266 Sketch needs to be changed according to sketchWiFi's displaying of LOCAL IP or LOCAL PORT.

If ESP8266 serves as server, select TCP CLIENT mode for sketchWiFi.

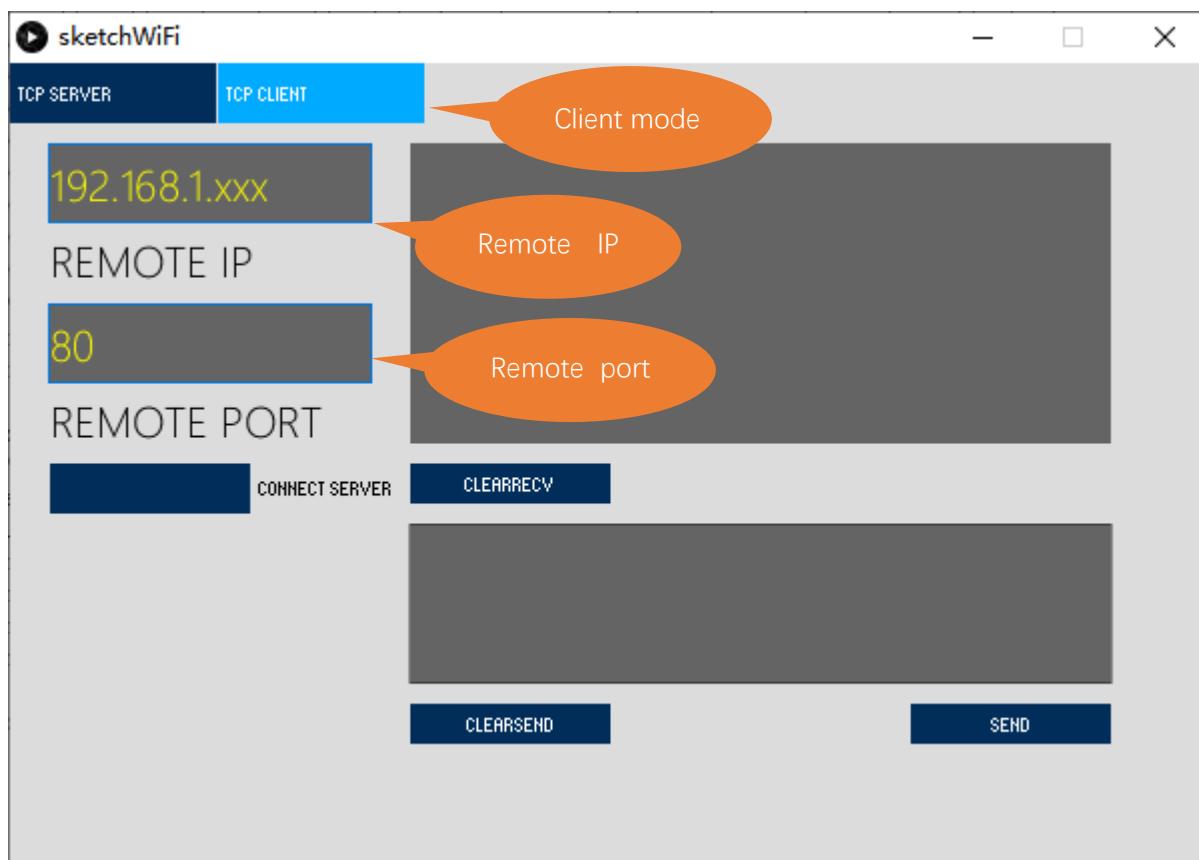

When sketchWiFi selects TCP CLIENT mode, the LOCAL IP and LOCAL PORT of sketchWiFi need to be changed according to the IP address and port number printed by the serial monitor.

Mode selection: select **Server mode/Client mode**.

IP address: In server mode, this option does not need to be filled in, and the computer will automatically obtain the IP address.

In client mode, fill in the remote IP address to be connected.

Port number: In server mode, fill in a port number for client devices to make an access connection.

In client mode, fill in port number given by the Server devices to make an access connection.

Start button: In server mode, push the button, then the computer will serve as server and open a port number for client to make access connection. During this period, the computer will keep monitoring.

In client mode, before pushing the button, please make sure the server is on, remote IP address and remote port number is correct; push the button, and the computer will make access connection to the remote port number of the remote IP as a client.

clear receive: clear out the content in the receiving text box


clear send: clear out the content in the sending text box

Sending button: push the sending button, the computer will send the content in the text box to others.

Circuit

Connect Freenove ESP8266 to the computer using USB cable.


Any concerns? [✉ support@freenove.com](mailto:support@freenove.com)

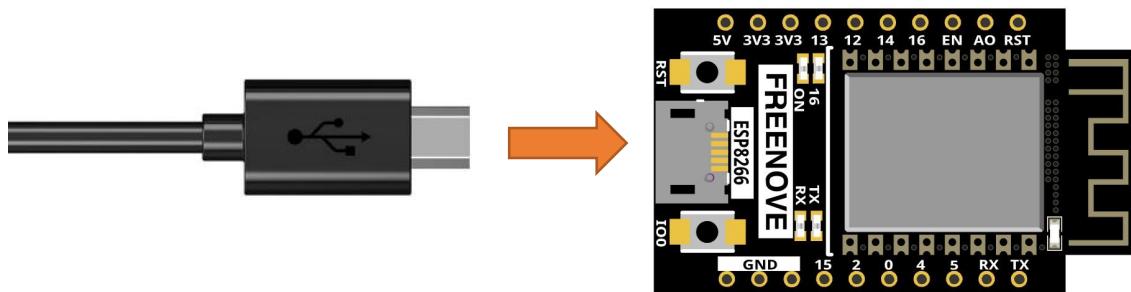


Sketch

If you have not installed “ControlP5”, please follow the following steps to continue the installation, if you have installed, please skip this section.

Open Processing.

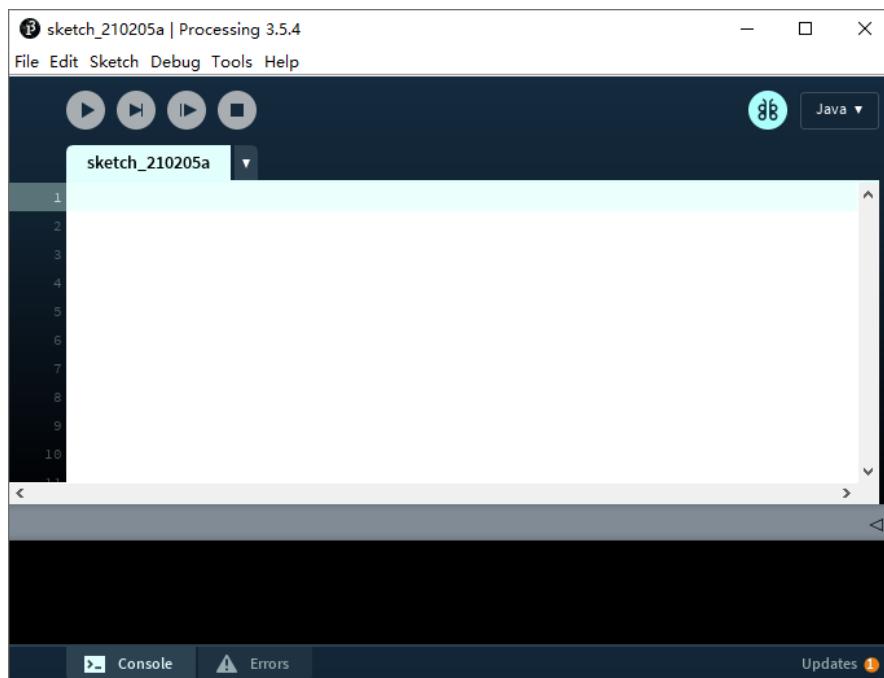


Click Add Tool under Tools.

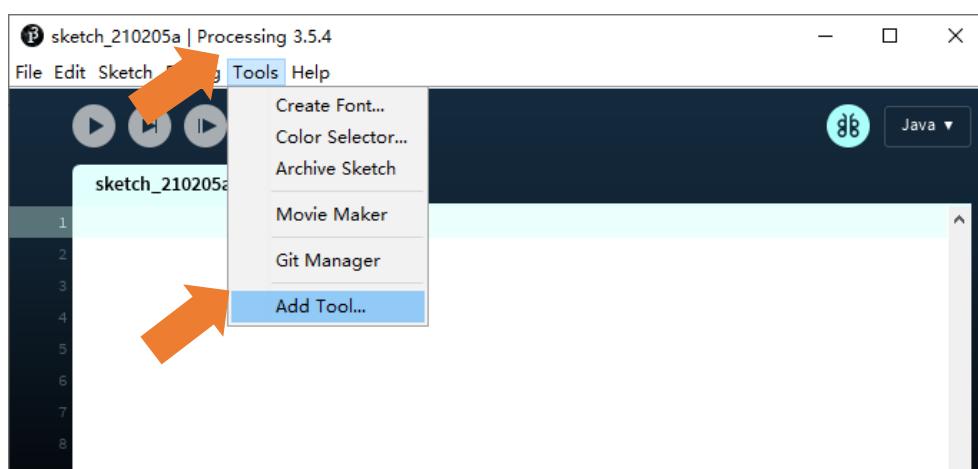


Any concerns? [✉ support@freenove.com](mailto:support@freenove.com)


Select Libraries in the pop-up window.

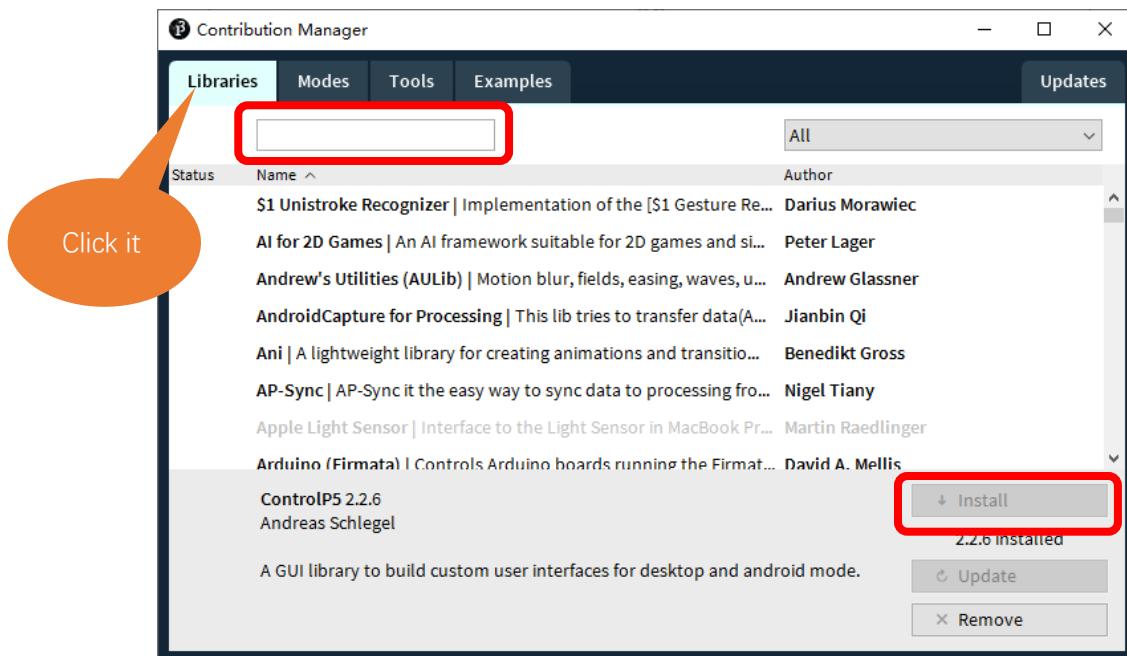

Input "ControlP5" in the searching box, and then select the option as below. Click "Install" and wait for the installation to finish.


You can also click Add Library under 'Import Library' under 'Sketch'.

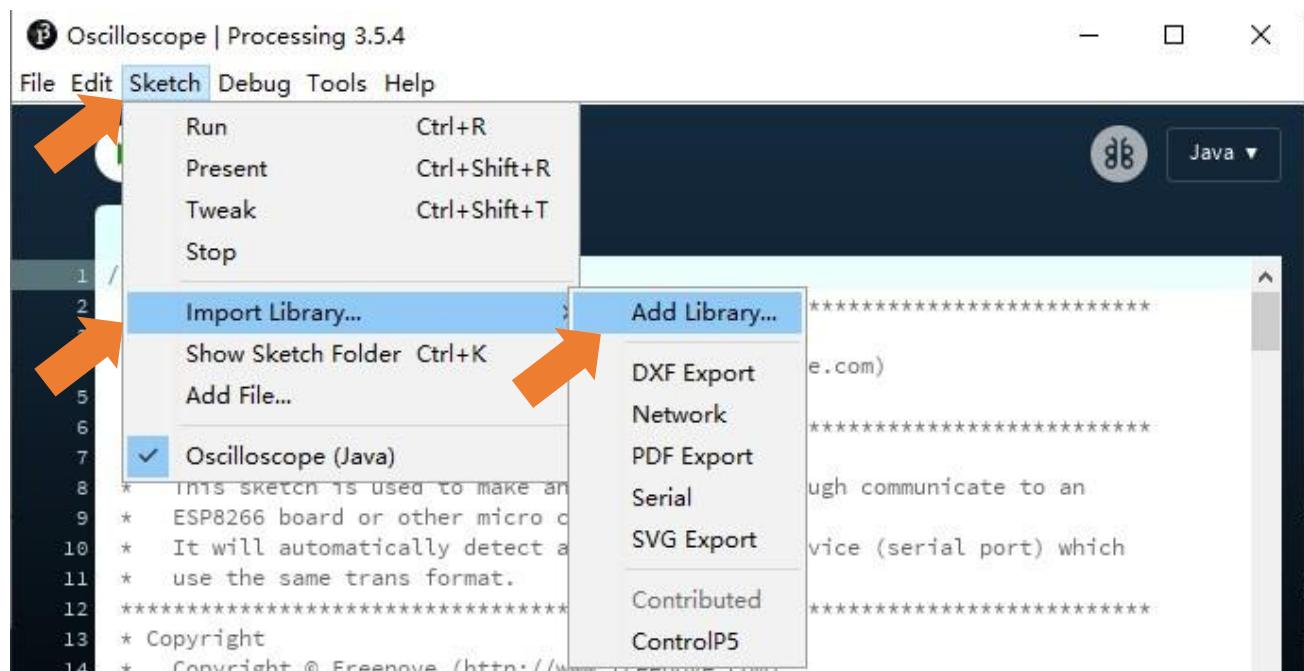

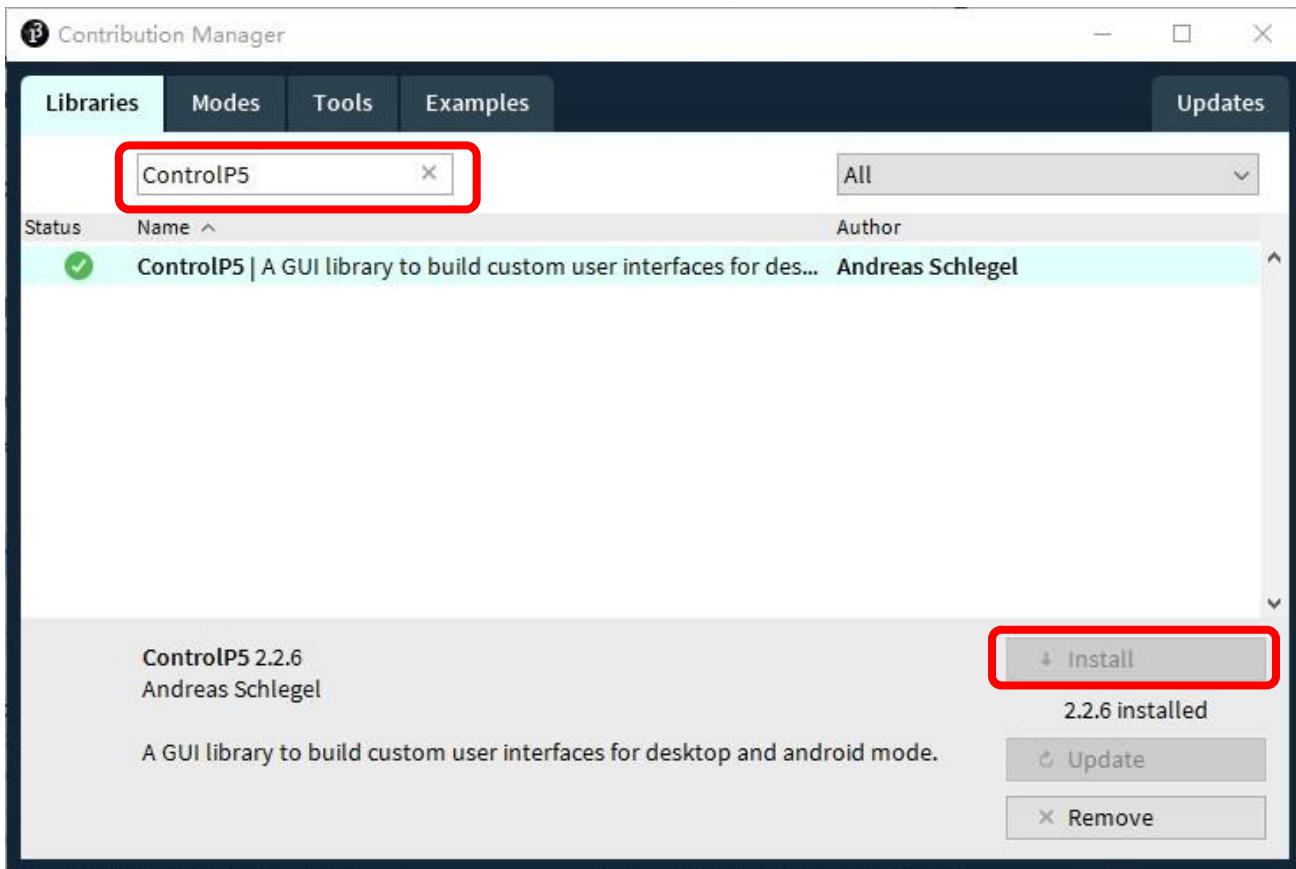


Sketch_29.1_As_Client


Before running the Sketch, please open “sketchWiFi.pde.” first, and click “Run”.

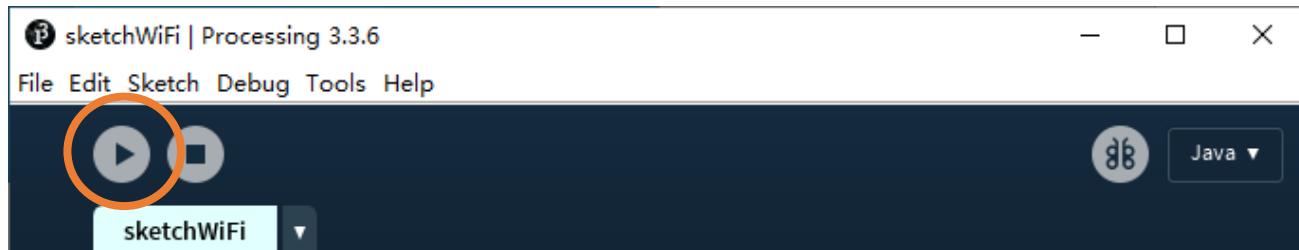

The newly pop up window will use the computer's IP address by default and open a data monitor port.

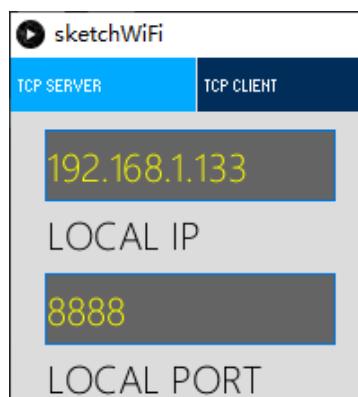

Next, open Sketch_29.1_WiFiClient.ino. Before running it, please change the following information based on "LOCAL IP" and "LOCAL PORT" in the figure above.

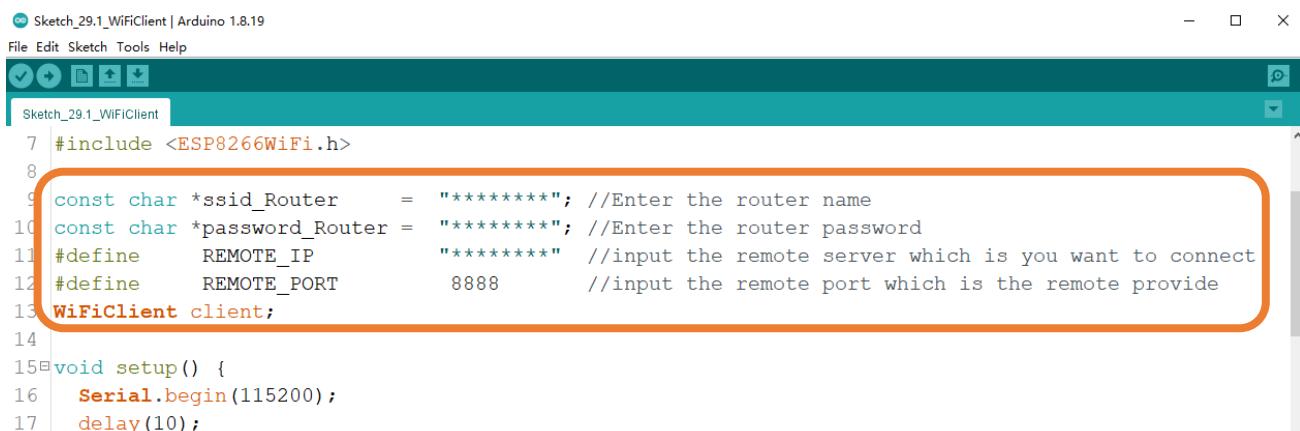


```

Sketch_29.1_WiFiClient | Arduino 1.8.19
File Edit Sketch Tools Help
Sketch_29.1_WiFiClient
7 #include <ESP8266WiFi.h>
8
9 const char *ssid_Router      = "*****"; //Enter the router name
10 const char *password_Router = "*****"; //Enter the router password
11 #define    REMOTE_IP          "*****" //input the remote server which is you want to connect
12 #define    REMOTE_PORT        8888     //input the remote port which is the remote provide
13 WiFiClient client;
14
15 void setup() {
16   Serial.begin(115200);
17   delay(10);


```

REMOTE_IP needs to be filled in according to the interface of sketchWiFi.pde. Taking this tutorial as an example, its REMOTE_IP is “192.168.1.133”. Generally, by default, the ports do not need to change its value.


Click LISTENING, turn on TCP SERVER's data listening function and wait for ESP8266 to connect.

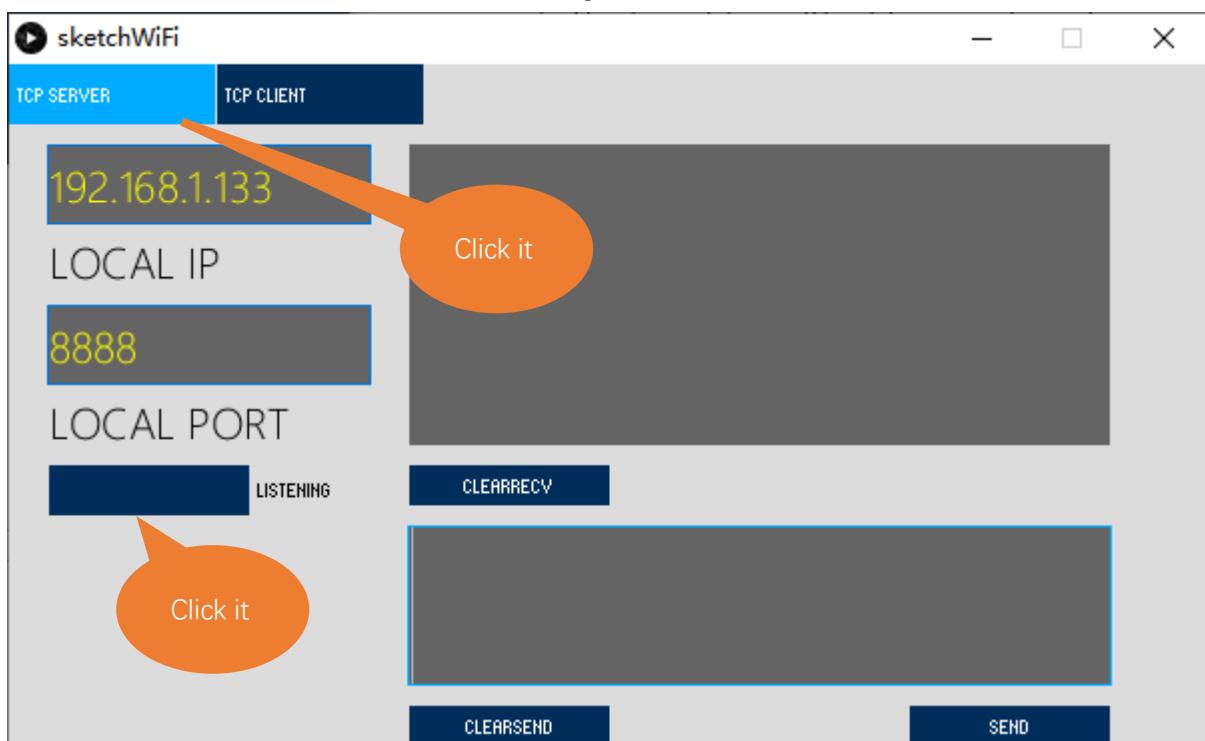

Compile and upload code to ESP8266, open the serial monitor and set the baud rate to 115200. ESP8266 connects router, obtains IP address and sends access request to server IP address on the same LAN till the connection is successful. When connect successfully, ESP8266 can send messages to server.

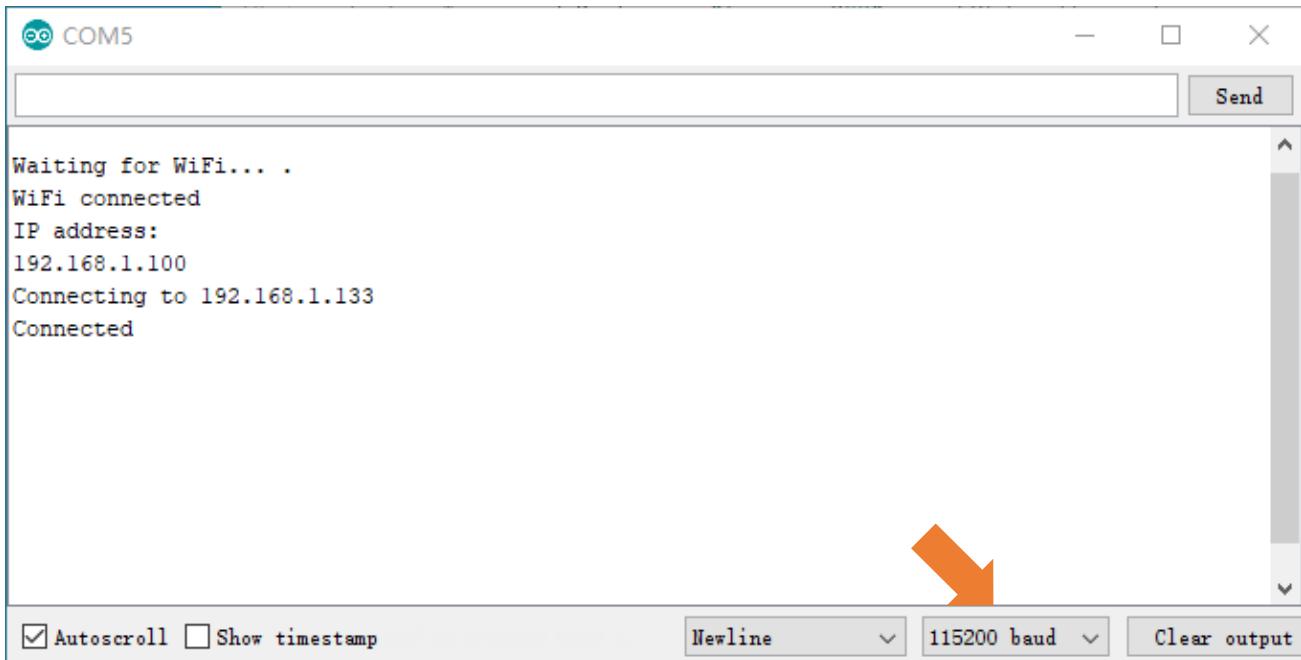

ESP8266 connects with TCP SERVER, and TCP SERVER receives messages from ESP8266, as shown in the figure below.

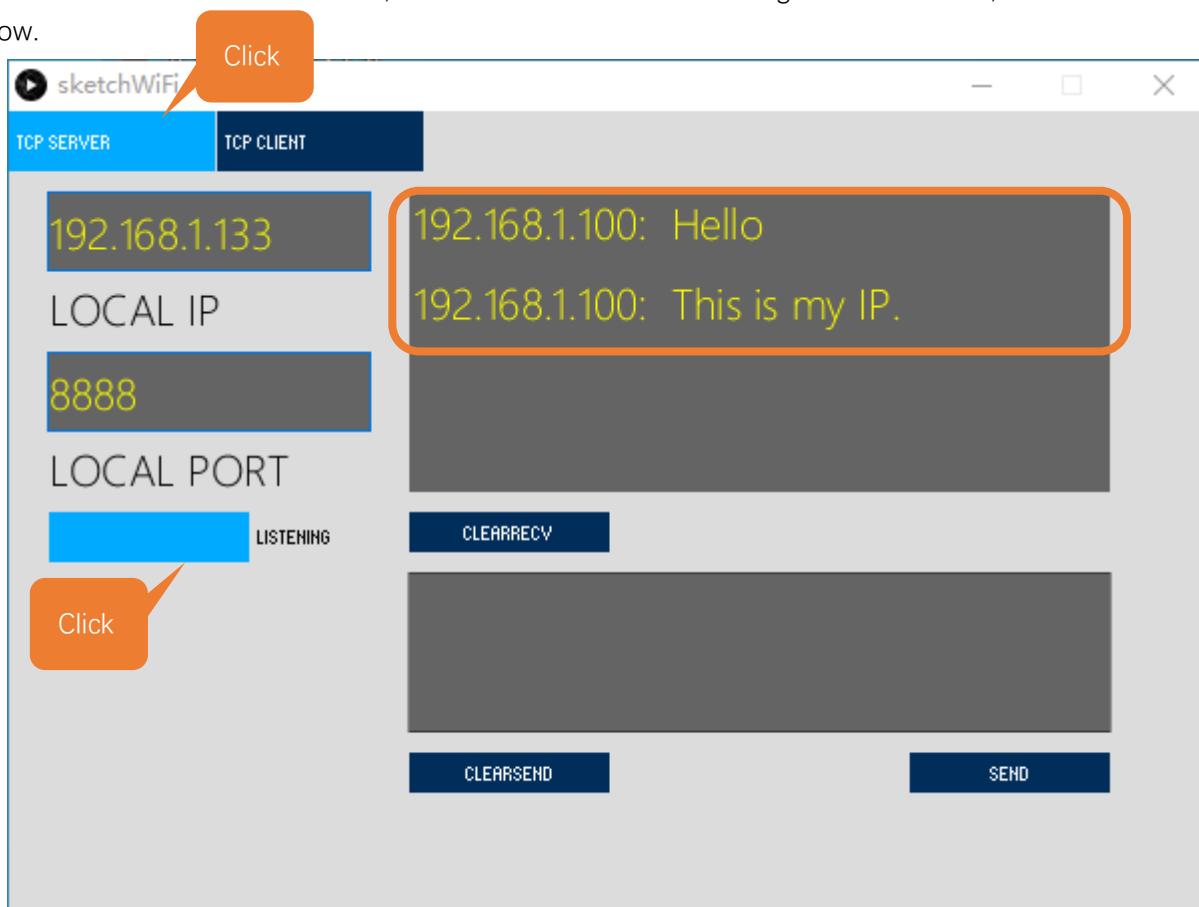

The following is the program code:

```
1 #include <ESP8266WiFi.h>
2
3 const char *ssid_Router      = "*****"; //Enter the router name
4 const char *password_Router = "*****"; //Enter the router password
5 #define    REMOTE_IP        "*****"   //input the remote server which is you want to connect
6 #define    REMOTE_PORT       8888      //input the remote port which is the remote provide
7 WiFiClient client;
8
9 void setup() {
10   Serial.begin(115200);
11   delay(10);
12
13   WiFi.begin(ssid_Router, password_Router);
14   Serial.print("\nWaiting for WiFi... ");
15   while (WiFi.status() != WL_CONNECTED) {
16     Serial.print(".");
17     delay(500);
18   }
19   Serial.println("");
20   Serial.println("WiFi connected");
21   Serial.println("IP address: ");
22   Serial.println(WiFi.localIP());
23   delay(500);
24
25   Serial.print("Connecting to ");
26   Serial.println(REMOTE_IP);
27
28   while (!client.connect(REMOTE_IP, REMOTE_PORT)) {
29     Serial.println("Connection failed.");
30     Serial.println("Waiting a moment before retrying... ");
31   }
32   Serial.println("Connected");
33   client.print("Hello\n");
34   client.print("This is my IP.\n");
35
36 void loop() {
37   if (client.available() > 0) {
38     delay(20);
39     //read back one line from the server
40     String line = client.readString();
41     Serial.println(REMOTE_IP + String(":") + line);
42   }
}
```

```

43   if (Serial.available() > 0) {
44     delay(20);
45     String line = Serial.readString();
46     client.print(line);
47   }
48   if (client.connected () == 0) {
49     client.stop();
50     WiFi.disconnect();
51   }
52 }
```

Add WiFi function header file.

```
1 #include <ESP8266WiFi.h>
```

Enter the actual router name, password, remote server IP address, and port number.

```

3 const char *ssid_Router      = "*****"; //Enter the router name
4 const char *password_Router = "*****"; //Enter the router password
5 #define    REMOTE_IP        "*****"  //input the remote server which is you want to connect
6 #define    REMOTE_PORT       8888     //input the remote port which is the remote provide
```

Apply for the method class of WiFiClient.

```
7 WiFiClient client;
```

Connect specified WiFi until it is successful. If the name and password of WiFi are correct but it still fails to connect, please push the reset key.

```

13 WiFi.begin(ssid_Router, password_Router);
14 Serial.print("\nWaiting for WiFi... ");
15 while (WiFi.status() != WL_CONNECTED) {
16   Serial.print(".");
17   delay(500);
18 }
```

Send connection request to remote server until connect successfully. When connect successfully, print out the connecting prompt on the serial monitor and send messages to remote server.

```

28 while (!client.connect(REMOTE_IP, REMOTE_PORT)) {//Connect to Server
29   Serial.println("Connection failed.");
30   Serial.println("Waiting a moment before retrying... ");
31 }
32 Serial.println("Connected");
33 client.print("Hello\n");
```

When ESP8266 receive messages from servers, it will print them out via serial port; Users can also send messages to servers from serial port.

```

37 if (client.available() > 0) {
38   delay(20);
39   //read back one line from the server
40   String line = client.readString();
41   Serial.println(REMOTE_IP + String(":") + line);
42 }
43 if (Serial.available() > 0) {
```

Any concerns? ✉ support@freenove.com

```
44     delay(20);  
45     String line = Serial.readString();  
46     client.print(line);  
47 }
```

If the server is disconnected, turn off WiFi of ESP8266.

```
48 if (client.connected () == false) {  
49     client.stop();  
50     WiFi.disconnect();  
51 }
```

Reference

Class Client

Every time when using Client, you need to include header file "ESP8266WiFi.h"

connect(ip, port, timeout)/connect(*host, port, timeout): establish a TCP connection.

ip, *host: ip address of target server

port: port number of target server

timeout: connection timeout

connected(): judge whether client is connecting. If return value is 1, then connect successfully; If return value is 0, then fail to connect.

stop(): stop tcp connection

print(): send data to server connecting to client

available(): return to the number of bytes readable in receive buffer, if no, return to 0 or -1.


read(): read one byte of data in receive buffer

readString(): read string in receive buffer

Project 29.2 As Server

In this section, ESP8266 is used as a server to wait for the connection and communication of client on the same LAN.

Component List

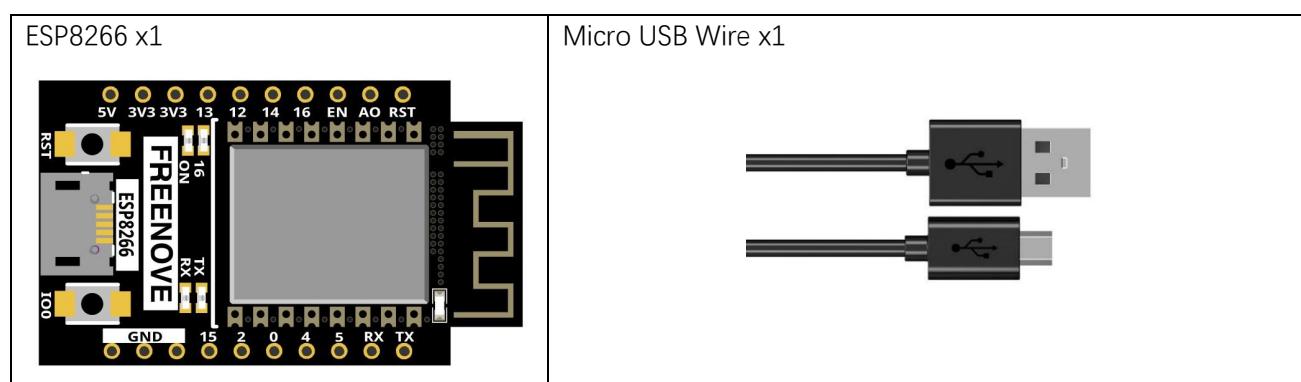

Circuit


Connect Freenove ESP8266 to the computer using a USB cable.



Sketch

Before running Sketch, please modify the contents of the box below first.

Sketch_29.2_As_Server

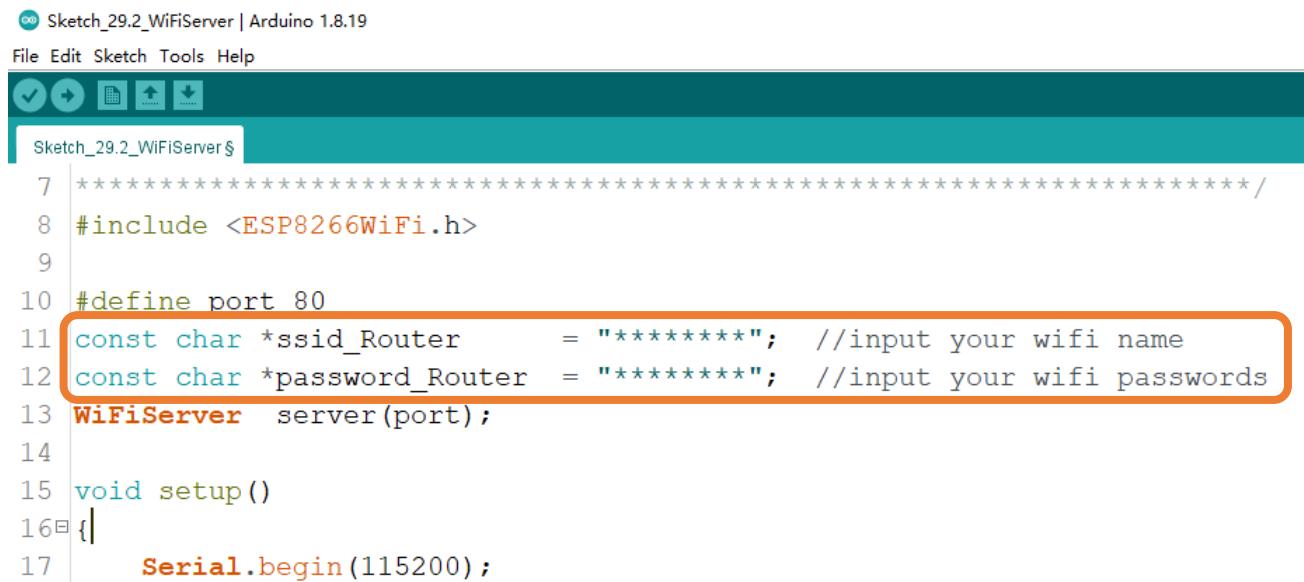


```

Sketch_29.2_WiFiServer | Arduino 1.8.19
File Edit Sketch Tools Help
Sketch_29.2_WiFiServer §
7 ****
8 #include <ESP8266WiFi.h>
9
10 #define port 80
11 const char *ssid_Router      = "*****"; //input your wifi name
12 const char *password_Router = "*****"; //input your wifi passwords
13 WiFiServer server(port);
14
15 void setup()
16 {
17     Serial.begin(115200);


```

Compile and upload code to ESP8266 board, open the serial monitor and set the baud rate to 115200. Turn on server mode for ESP8266, waiting for the connection of other devices on the same LAN. Once a device connects to server successfully, they can send messages to each other.

If the ESP8266 fails to connect to router, press the reset button as shown below and wait for ESP8266 to run again.

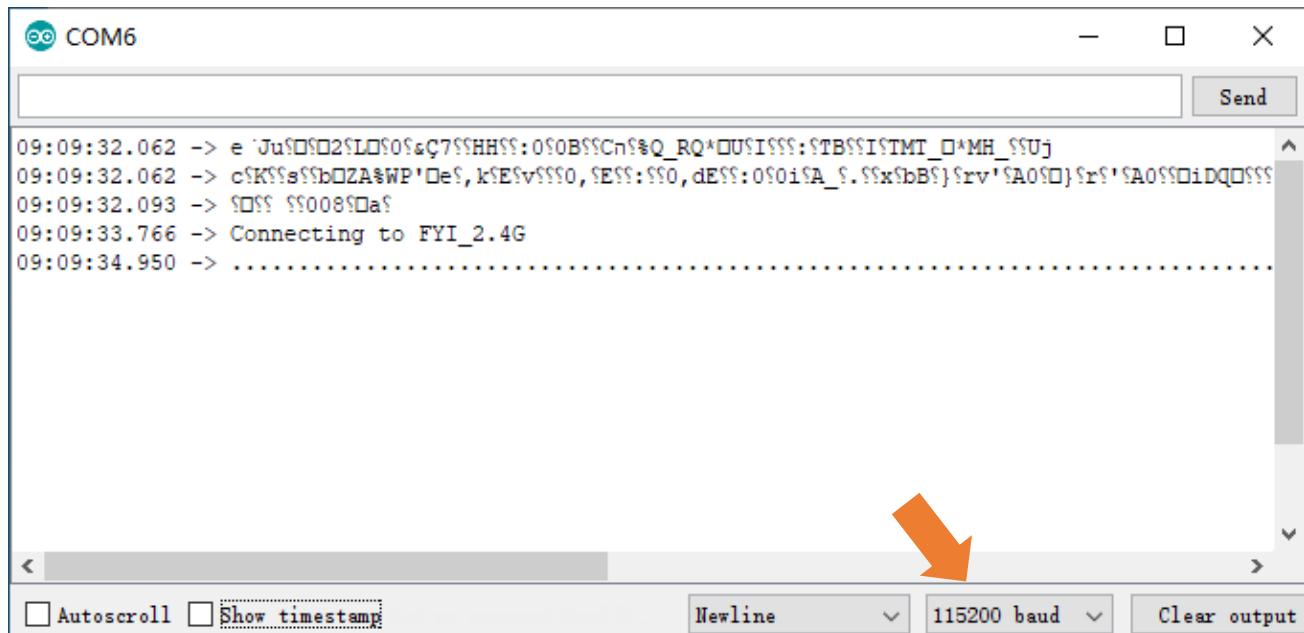


Serial Monitor

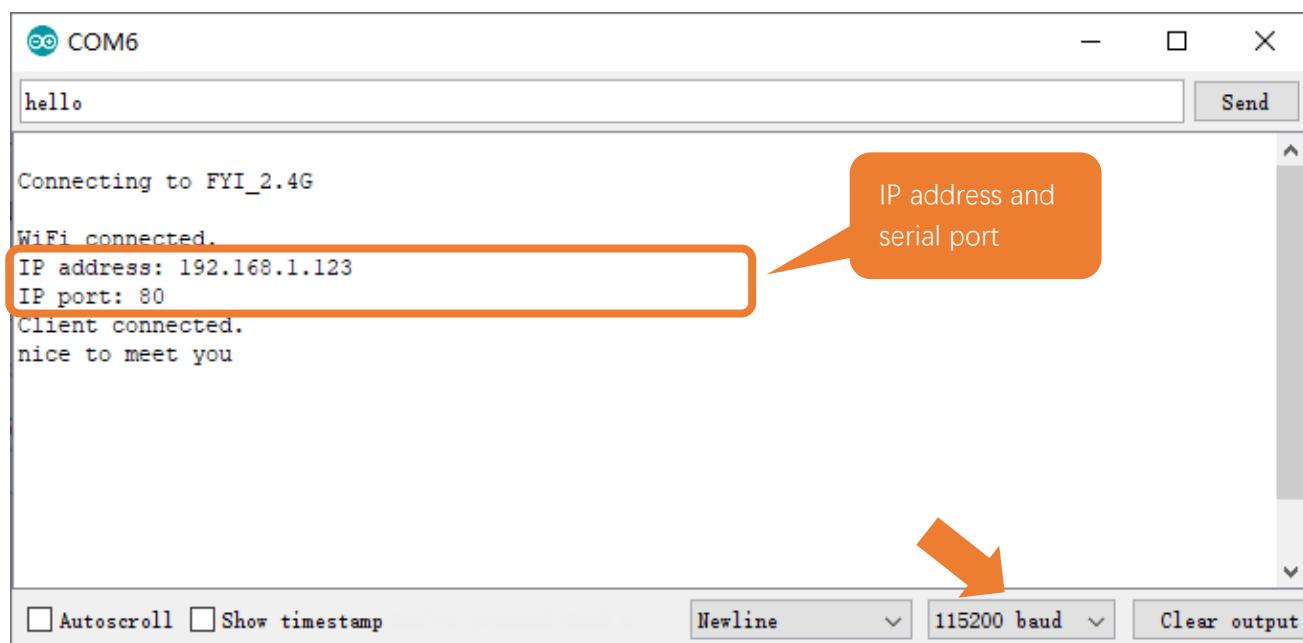

Processing:

Open the "Freenove_Ultimate_Starter_Kit_for_ESP8266\C\Sketches\Sketch_29.2_WiFiServer\sketchWiFi\sketchWiFi.pde".

Based on the messages printed by the serial monitor, enter correct IP address and serial port in Processing to establish connection and make communication.

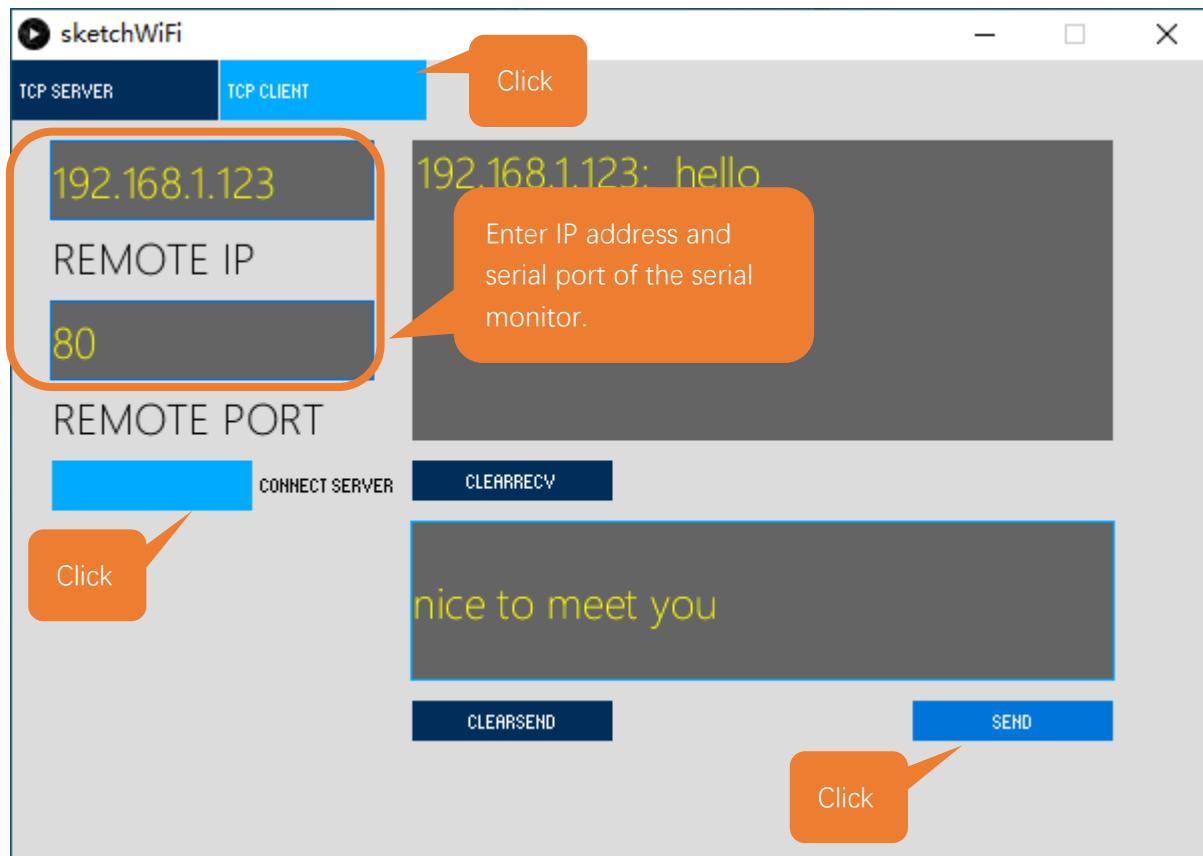

The following is the program code:

```
1 #include <ESP8266WiFi.h>
2
3 #define port 80
4 const char *ssid_Router      = "*****"; //input your wifi name
5 const char *password_Router  = "*****"; //input your wifi passwords
6 WiFiServer server(port);
7
8 void setup()
9 {
10     Serial.begin(115200);
11     Serial.printf("\nConnecting to ");
12     Serial.println(ssid_Router);
13     WiFi.disconnect();
14     WiFi.begin(ssid_Router, password_Router);
15     delay(1000);
16     while (WiFi.status() != WL_CONNECTED) {
17         delay(500);
18         Serial.print(".");
19     }
20     Serial.println("");
21     Serial.println("WiFi connected.");
22     Serial.print("IP address: ");
23     Serial.println(WiFi.localIP());
24     Serial.printf("IP port: %d\n", port);
25     server.begin(port);
26     WiFi.setAutoConnect(true);
27     WiFi.setAutoReconnect(true);
28 }
29
30 void loop() {
31     WiFiClient client = server.available();           // listen for incoming clients
32     if (client) {                                     // if you get a client
33         Serial.println("Client connected.");
34         while (client.connected()) {                  // loop while the client's connected
35             if (client.available()) {                  // if there's bytes to read from the
36                 Serial.println(client.readStringUntil('\n'));// print it out the serial monitor
37                 while(client.read()>0);                // clear the wifi receive area cache
38             }
39             if(Serial.available()){                   // if there's bytes to read from the
39             serial monitor
40                 client.print(Serial.readStringUntil('\n'));// print it out the client.
41                 while(Serial.read()>0);                  // clear the wifi receive area cache
42             }
43         }
44     }
45 }
```

```

42     }
43   }
44   client.stop();                                // stop the client connecting.
45   Serial.println("Client Disconnected.");
46 }
47 }
```

Apply for method class of WiFiServer.

6	<code>WiFiServer server(port);</code> //Apply for a Server object whose port number is 80
---	-------------------------------------------------------------------------------------------

Connect specified WiFi until it is successful. If the name and password of WiFi are correct but it still fails to connect, please push the reset key.

```

13 WiFi.disconnect();
14 WiFi.begin(ssid_Router, password_Router);
15 delay(1000);
16 while (WiFi.status() != WL_CONNECTED) {
17   delay(500);
18   Serial.print(".");
19 }
20 Serial.println("");
21 Serial.println("WiFi connected.");
```

Print out the IP address and port number of ESP8266.

22	<code>Serial.print("IP address: ");</code>	
23	<code>Serial.println(WiFi.localIP());</code>	//print out IP address of ESP8266
24	<code>Serial.printf("IP port: %d\n", port);</code>	//Print out ESP8266's port number

Turn on server mode of ESP8266, start automatic connection and turn on automatic reconnection.

25	<code>server.begin();</code>	//Turn ON ESP8266 as Server mode
26	<code>WiFi.setAutoConnect(true);</code>	
27	<code>WiFi.setAutoReconnect(true);</code>	

When ESP8266 receive messages from servers, it will print them out via serial port; Users can also send messages to servers from serial port.

35	<code>if (client.available()) {</code>	// if there's bytes to read from the
36	<code> client</code>	
37	<code> Serial.println(client.readStringUntil('\n'));</code>	// print it out the serial monitor
38	<code> while(client.read()>0);</code>	// clear the wifi receive area cache
39	<code>}</code>	
40	<code>if(Serial.available()) {</code>	// if there's bytes to read from the
41	<code> serial monitor</code>	
42	<code> client.print(Serial.readStringUntil('\n'));</code>	// print it out the client.
	<code> while(Serial.read()>0);</code>	// clear the wifi receive area cache
	<code>}</code>	



Reference

Class Server

Every time use Server functionality, we need to include header file "ESP8266WiFi.h".

WiFiServer(uint16_t port=80, uint8_t max_clients=4): create a TCP Server.

port: ports of Server; range from 0 to 65535 with the default number as 80.

max_clients: maximum number of clients with default number as 4.

begin(port): start the TCP Server.

port: ports of Server; range from 0 to 65535 with the default number as 0.

setNoDelay(bool nodelay): whether to turn off the delay sending functionality.

nodelay: true stands for forbidden Nagle algorithm.

close(): close tcp connection.

stop(): stop tcp connection.


Chapter 30 Smart home

In this chapter, we will use ESP8266 to make a simple smart home. We will learn how to control LED lights through web pages.

Project 30.1 Control_LED_through_Web

In this project, we need to build a Web Service and then use ESP8266 to control the LED through the Web browser of the phone or PC. Through this example, you can remotely control the appliances in your home to achieve smart home.

Component List

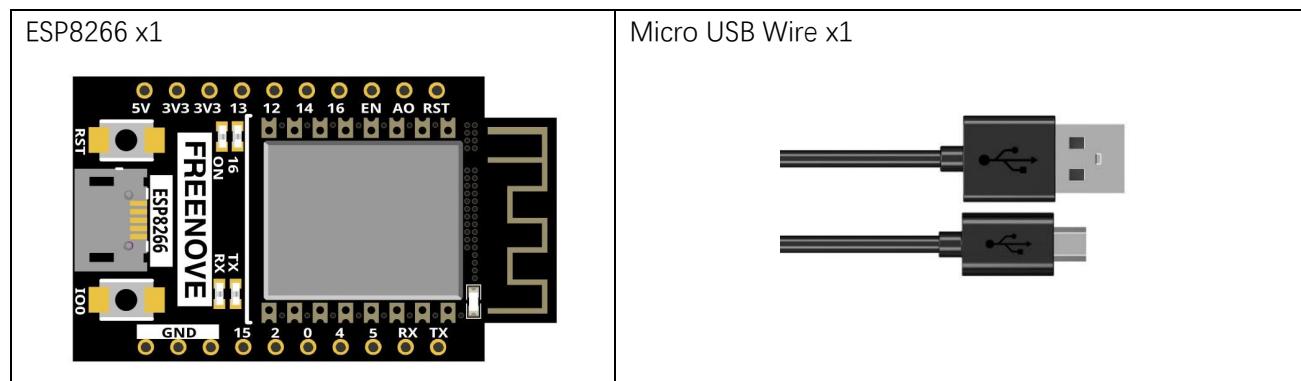

Component knowledge


HTML

HyperText Markup Language (HTML) is a standard Markup Language for creating web pages. It includes a set of tags that unify documents on the network and connect disparate Internet resources into a logical whole. HTML text is descriptive text composed of HTML commands that describe text, graphics, animations, sounds, tables, links, etc. The extension of the HTML file is HTM or HTML. Hyper Text is a way to organize information. It uses hyperlinks to associate words and charts in Text with other information media. These related information media may be in the same Text, other files, or files located on a remote computer. This way of organizing information connects the information resources distributed in different places, which is convenient for people to search and retrieve information.

The nature of the Web is hypertext Markup Language (HTML), which can be combined with other Web technologies (e.g., scripting languages, common gateway interfaces, components, etc.) to create powerful Web pages. Thus, HYPERtext Markup Language (HTML) is the foundation of World Wide Web (Web) programming, that is, the World Wide Web is based on hypertext. Hypertext Markup Language is called hypertext Markup language because the text contains so-called "hyperlink" points.

You can build your own WEB site using HTML, which runs on the browser and is parsed by the browser.

Example analysis is shown in the figure below:

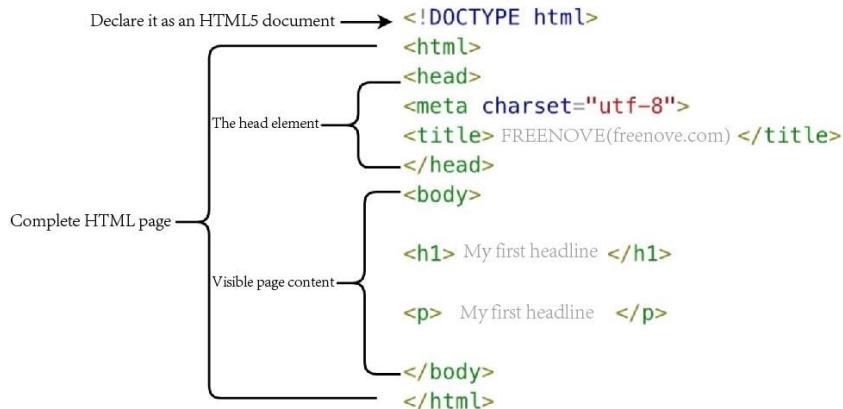

<!DOCTYPE html>: Declare it as an HTML5 document

<html>: Is the root element of an HTML page

<head>: Contains meta data for the document, such as < meta charset="utf-8" > Define the web page encoding format to UTF-8.

<title>: Note the title of the document

<body>: Contains visible page content


<h1>: Define a big heading

<p>: Define a paragraph

For more information, please visit: <https://developer.mozilla.org/en-US/docs/Web/HTML>

Circuit

Connect Freenove ESP8266 to the computer using a USB cable.

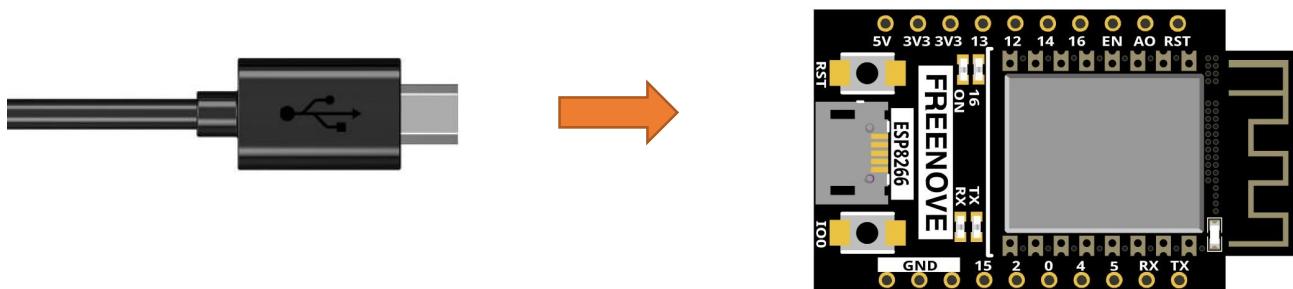

Sketch

Sketch_30.1_Control_LED_through_Web


```
Sketch_30.1_Control_LED_through_Web | Arduino 1.8.19
File Edit Sketch Tools Help
Sketch_30.1_Control_LED_through_Web
10 // *****
11 #include <ESP8266WiFi.h>
12 // Replace with your network credentials
13 const char* ssid      = "*****";
14 const char* password = "*****";
15 // Set web server port number to 80
16 WiFiServer server(80);
17 // Variable to store the HTTP request
18 String header;
19 // Auxiliar variables to store the current output state
20 String PIN_LEDState = "off";
21 // Assign output variables to GPIO pins
22 const int PIN_LED = 2;
23 // Current time
24 unsigned long currentTime = millis();
25 // Previous time
26 unsigned long previousTime = 0;
27 // Define timeout time in milliseconds (example: 2000ms = 2s)
28 const long timeoutTime = 2000;
29
30 void setup() {
31   Serial.begin(115200);
32   // Initialize the output variables as outputs
33   pinMode(PIN_LED, OUTPUT);
34   // Set outputs to LOW
35   digitalWrite(PIN_LED, HIGH);
```

Enter the correct Router name and password.


Done Saving.
Leaving...
Hard resetting via RTS pin...

All SSL ciphers (most compatible), 32KB cache + 32KB IRAM (balanced). Use pgm_read macros for IRAM/PROGMEM, 4MB (FS:2MB OTA:~1019KB), 2, v2 Lower Memory, Disabled, None, Only Sketch, 115200 on COM4

Download the code to ESP8266, open the serial port monitor, set the baud rate to 115200 and you can use it to measure the distance between the ultrasonic module and the object. As shown in the following figure:

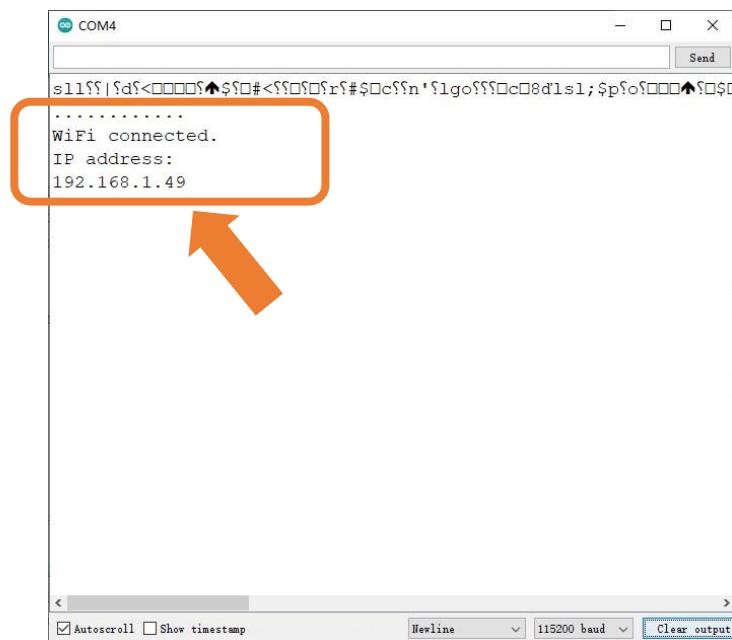

When ESP8266 successfully connects to “ssid_Router”, serial monitor will print out the IP address assigned to ESP8266 by the router. Access <http://192.168.1.49> in a computer browser on the LAN. As shown in the following figure:

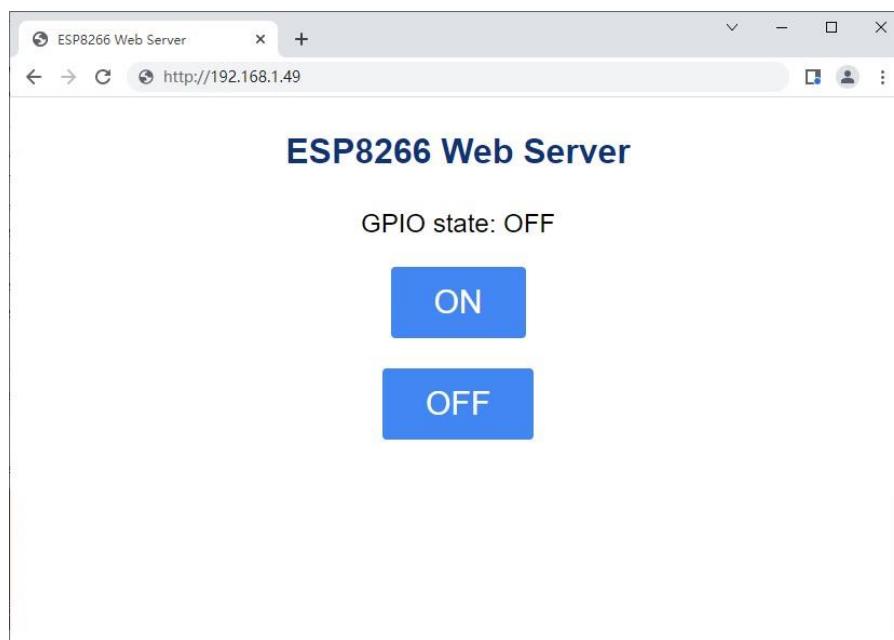

You can click the corresponding button to control the LED on and off

The following is the program code:

```
1 #include <ESP8266WiFi.h>
2 // Replace with your network credentials
3 const char* ssid      = "*****"; //Enter the router name
4 const char* password = "*****"; //Enter the router password
5 // Set web server port number to 80
```

```
6 WiFiServer server(80);  
7 // Variable to store the HTTP request  
8 String header;  
9 // Auxiliar variables to store the current output state  
10 String PIN_LEDState = "OFF";  
11 // Assign output variables to GPIO pins  
12 const int PIN_LED = 2;  
13 // Current time  
14 unsigned long currentTime = millis();  
15 // Previous time  
16 unsigned long previousTime = 0;  
17 // Define timeout time in milliseconds (example: 2000ms = 2s)  
18 const long timeoutTime = 2000;  
19  
20 void setup() {  
21     Serial.begin(115200);  
22     // Initialize the output variables as outputs  
23     pinMode(PIN_LED, OUTPUT);  
24     // Set outputs to LOW  
25     digitalWrite(PIN_LED, HIGH);  
26     // Connect to Wi-Fi network with SSID and password  
27     Serial.print("Connecting to ");  
28     Serial.println(ssid);  
29     WiFi.begin(ssid, password);  
30     while (WiFi.status() != WL_CONNECTED) {  
31         delay(500);  
32         Serial.print(".");  
33     }  
34     // Print local IP address and start web server  
35     Serial.println("");  
36     Serial.println("WiFi connected.");  
37     Serial.println("IP address: ");  
38     Serial.println(WiFi.localIP());  
39     server.begin();  
40 }  
41 void loop() {  
42     WiFiClient client = server.available(); // Listen for incoming clients  
43     if (client) { // If a new client connects,  
44         Serial.println("New Client."); // print a message out in the serial port  
45         String currentLine = ""; // make a String to hold incoming data from the client  
46         currentTime = millis();  
47         previousTime = currentTime;  
48         while (client.connected() && currentTime - previousTime <= timeoutTime) { // loop while  
the client's connected
```

```

49     currentTime = millis();
50     if (client.available()) {           // if there's bytes to read from the client,
51         char c = client.read();        // read a byte, then
52         Serial.write(c);             // print it out the serial monitor
53         header += c;
54         if (c == '\n') {              // if the byte is a newline character
55             // if the current line is blank, you got two newline characters in a row.
56             // that's the end of the client HTTP request, so send a response:
57             if (currentLine.length() == 0) {
58                 // HTTP headers always start with a response code (e.g. HTTP/1.1 200 OK)
59                 // and a content-type so the client knows what's coming, then a blank line:
60                 client.println("HTTP/1.1 200 OK");
61                 client.println("Content-type:text/html");
62                 client.println("Connection: close");
63                 client.println();
64                 // turns the GPIOs on and off
65                 if (header.indexOf("GET /5/ON") >= 0) {
66                     Serial.println("GPIO 5 ON");
67                     PIN_LEDState = "ON";
68                     digitalWrite(PIN_LED, LOW);
69                 } else if (header.indexOf("GET /5/OFF") >= 0) {
70                     Serial.println("GPIO 5 OFF");
71                     PIN_LEDState = "OFF";
72                     digitalWrite(PIN_LED, HIGH);
73                 }
74                 // Display the HTML web page
75                 client.println("<!DOCTYPE html><html>");
76                 client.println("<head> <title>ESP8266 Web Server</title> <meta name=\"viewport\" content=\"width=device-width, initial-scale=1\">");
77                 client.println("<link rel=\"icon\" href=\"data:, \">");
78                 // CSS to style the on/off buttons
79                 // Feel free to change the background-color and font-size attributes to fit your preferences
80                 client.println("<style>html {font-family: Helvetica; display:inline-block; margin: 0px auto; text-align: center;}</style>");
81                 client.println(" h1{color: #0F3376; padding: 2vh;} p{font-size: 1.5rem;}");
82                 client.println(".button{background-color: #4286f4; display: inline-block; border: none; border-radius: 4px; color: white; padding: 16px 40px;text-decoration: none; font-size: 30px; margin: 2px; cursor: pointer;}");
83                 client.println(".button2{background-color: #4286f4;display: inline-block; border: none; border-radius: 4px; color: white; padding: 16px 40px;text-decoration: none; font-size: 30px; margin: 2px; cursor: pointer;}</style></head>");
84                 // Web Page Heading
85                 client.println("<body><h1>ESP8266 Web Server</h1>");
86                 client.println("<p>GPIO state: " + PIN_LEDState + "</p>");
```

```

87     client.println("<p><a href=\"/5/ON\"><button class=\"button
88         button2\">ON</button></a></p>");
89     client.println("<p><a href=\"/5/OFF\"><button class=\"button
90         button2\">OFF</button></a></p>");
91     client.println("</body></html>");
92     // The HTTP response ends with another blank line
93     client.println();
94     // Break out of the while loop
95     break;
96 } else { // if you got a newline, then clear currentLine
97     currentLine = "";
98 }
99 } else if (c != '\r') { // if you got anything else but a carriage return character,
100    currentLine += c;      // add it to the end of the currentLine
101 }
102 // Clear the header variable
103 header = "";
104 // Close the connection
105 client.stop();
106 Serial.println("Client disconnected.");
107 Serial.println("");
108 }
109 }
```

Include the WiFi Library header file of ESP8266.

```
1 #include <ESP8266WiFi.h>
```

Enter correct router name and password.

```
3 const char* ssid      = "*****"; //Enter the router name
4 const char* password = "*****"; //Enter the router password
```

Set ESP8266 in Station mode and connect it to your router.

```
29 WiFi.begin(ssid, password);
```

Check whether ESP8266 has connected to router successfully every 0.5s.

```
30 while (WiFi.status() != WL_CONNECTED) {
31     delay(500);
32     Serial.print(".");
33 }
```

Serial monitor prints out the IP address assigned to ESP8266.

```
38 Serial.println(WiFi.localIP());
```

Click the button on the web page to control the LED light on and off.

```
65     if (header.indexOf("GET /5/ON") >= 0) {
66         Serial.println("GPIO 5 ON");
67         PIN_LEDState = "ON";
68         digitalWrite(PIN_LED, LOW);
```

Any concerns? ✉ support@freenove.com

```
69 } else if (header.indexOf("GET /5/OFF") >= 0) {  
70     Serial.println("GPIO 5 OFF");  
71     PIN_LEDState = "OFF";  
72     digitalWrite(PIN_LED, HIGH);  
73 }
```



Chapter 31 Play music

In this chapter, we use ESP8266 to output audio signals and play music through ESP8266. Direct audio output through the speaker, this will have significant distortion.

Project 31.1 Play_music

In this project, we use ESP8266 to play local music. When we press the button, the music plays again after a certain amount of time.

Component List

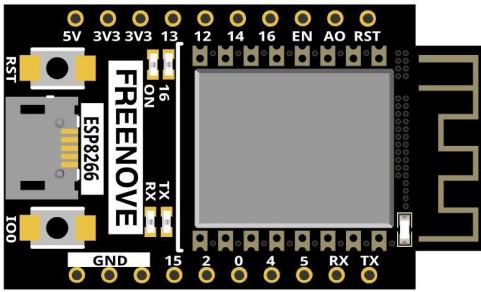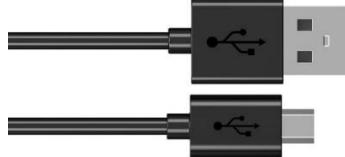
ESP8266 x1	Micro USB Wire x1				
					
Jumper wire M/M x13	Speaker*1				
					
NPN transistor x1 (S8050)	Push button x1	Diode x1	Resistor 1kΩ x1	Resistor 10kΩ x2	Capacitor 10uf x1
					




Circuit

In this section, you need to perform operations in the following sequence: Upload audio data in the first step, upload code in the second step, disconnect the power supply in the third step, connect hardware in the fourth step as follows, and connect power supply in the fifth step. Make sure you do this in order to avoid permanent damage to your hardware.

Schematic diagram

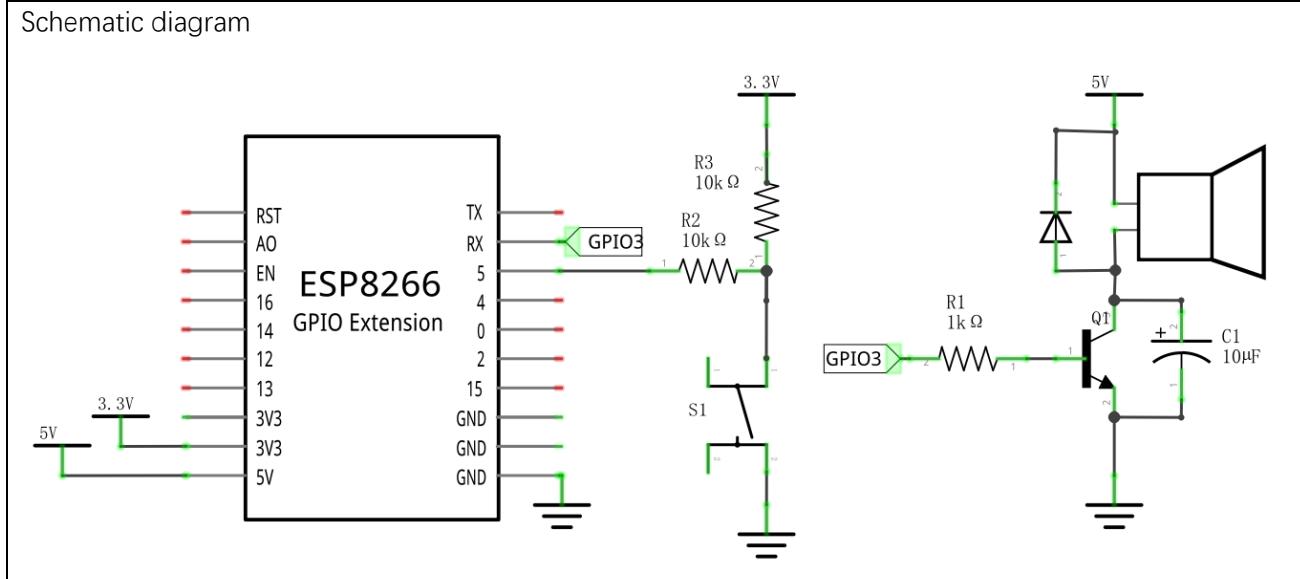

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

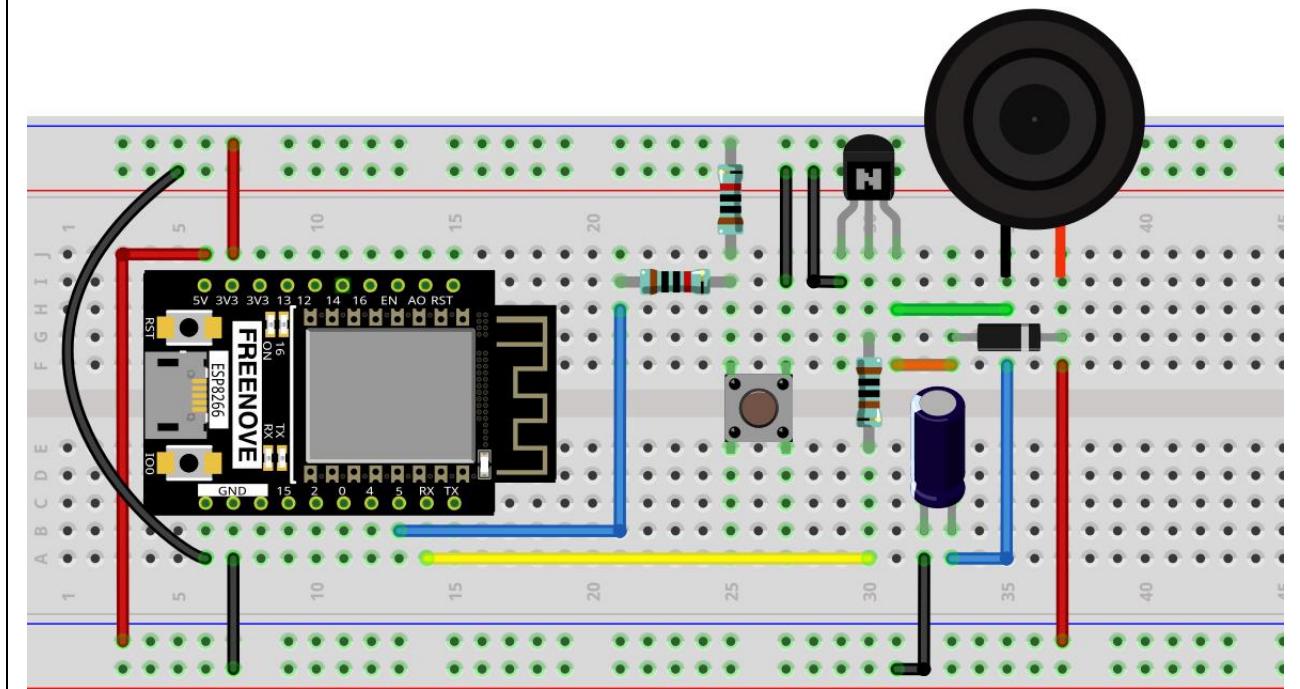


Sketch

How to install the library

This code is used to play music. We use the third-party library **ESP8266Audio**. If you haven't already installed it, install it now. The steps to add third-party libraries are as follows: The first way, Open Arduino -> Sketch->Include library -> Manage library. Type ESP8266Audio in the search bar and select ESP8266Audio to install.

Refer to the following operations:

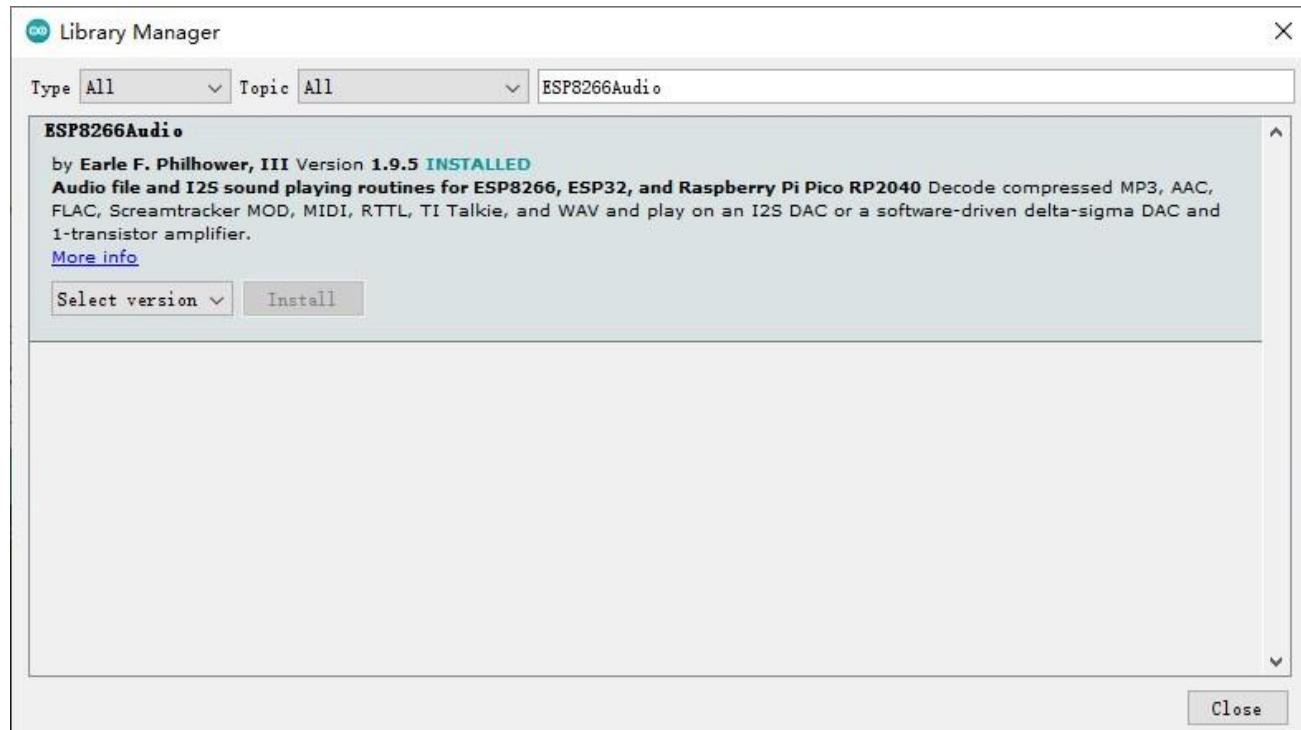

The second way, open Arduino IDE, click Sketch→Include Library→Add .ZIP Library, In the pop-up window, find the file named “./Libraries/ESP8266Audio.Zip” which locates in this directory, and click OPEN.

Install the Arduino IDE plug-in Arduino-ESP8266Fs-Plugin


In this tutorial, find a folder named ". /Sketches/ Sketch_31.1_play_music/tools" under that directory and copy that folder into the Arduino IDE environment directory.

The details are as follows:


First, open the software platform arduino, and then click File in Menus and select Preferences.



Find the Arduino IDE environment directory location.

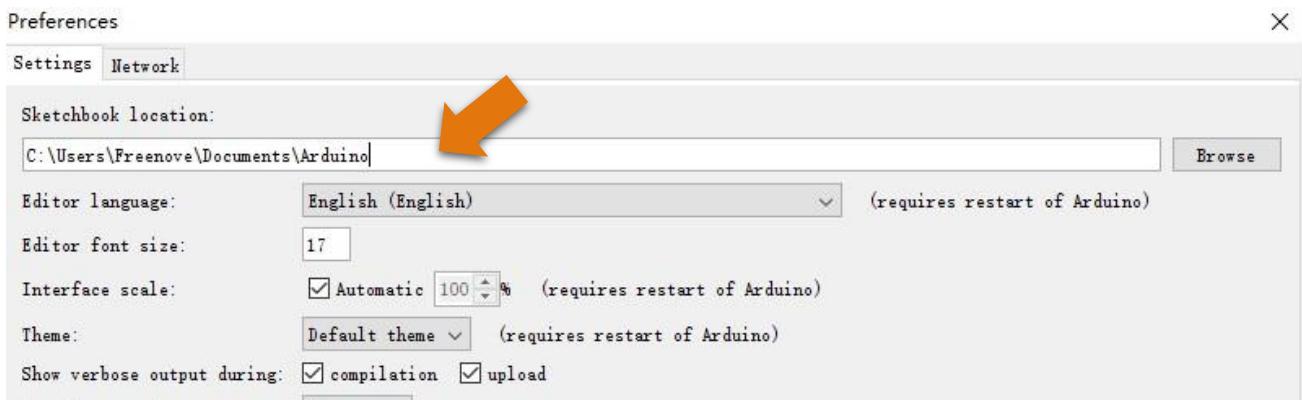

Copy "tools" folder to this directory.

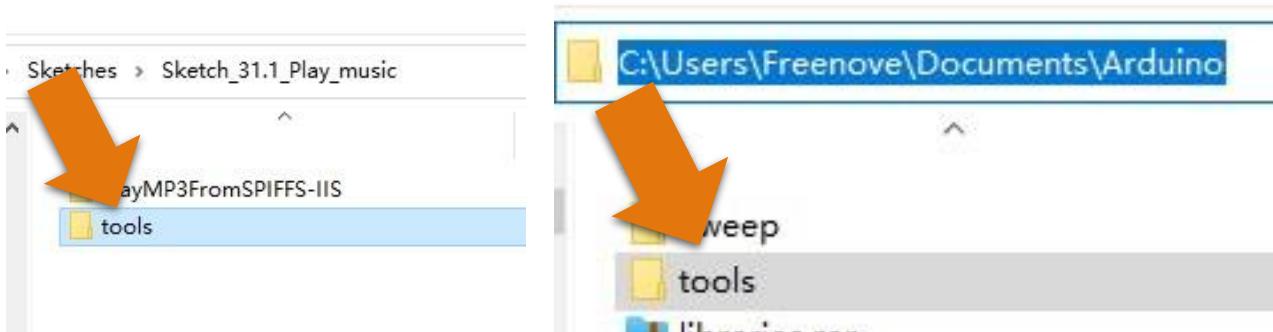


Finally, restart the Arduino IED


Upload music

Before uploading the music file, in the path ". /Sketches/Sketch_31.1_Play_music/PlayMP3/data" folder, save the music file that needs to be uploaded and make sure the file content is not empty.

If you do not have a "data" folder, you need to create a "data" folder and put MP3 or WAV files in the "data" folder. In addition, the audio file size cannot exceed the selected FlashSize.

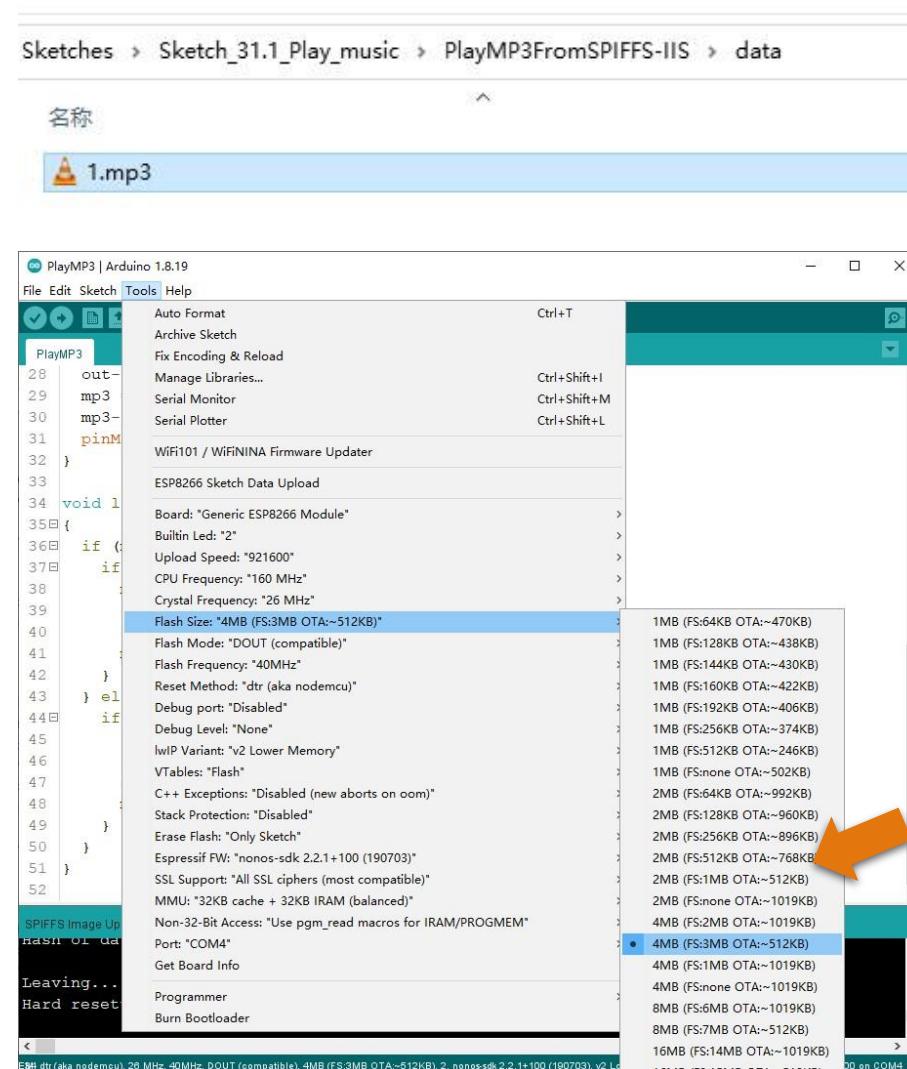


ESP8266's CPU frequency is set to 160MHz.

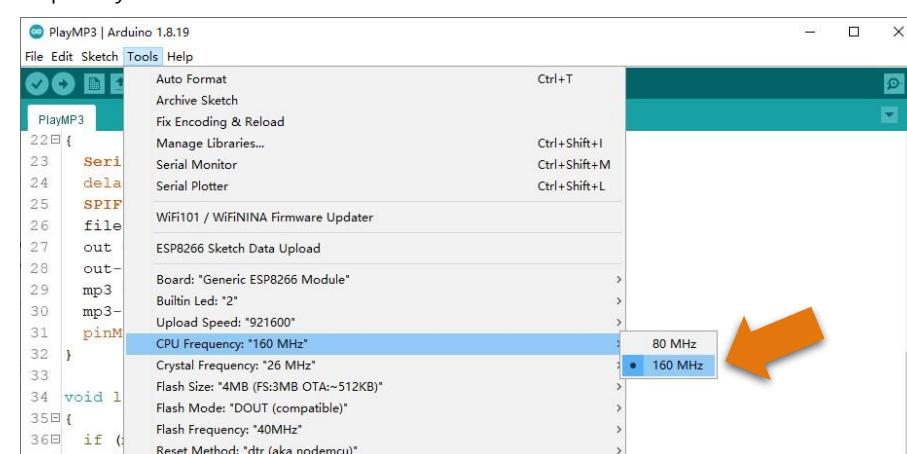


Any concerns? ✉ support@freenove.com

Because the file size is large, set the upload speed to 921600.

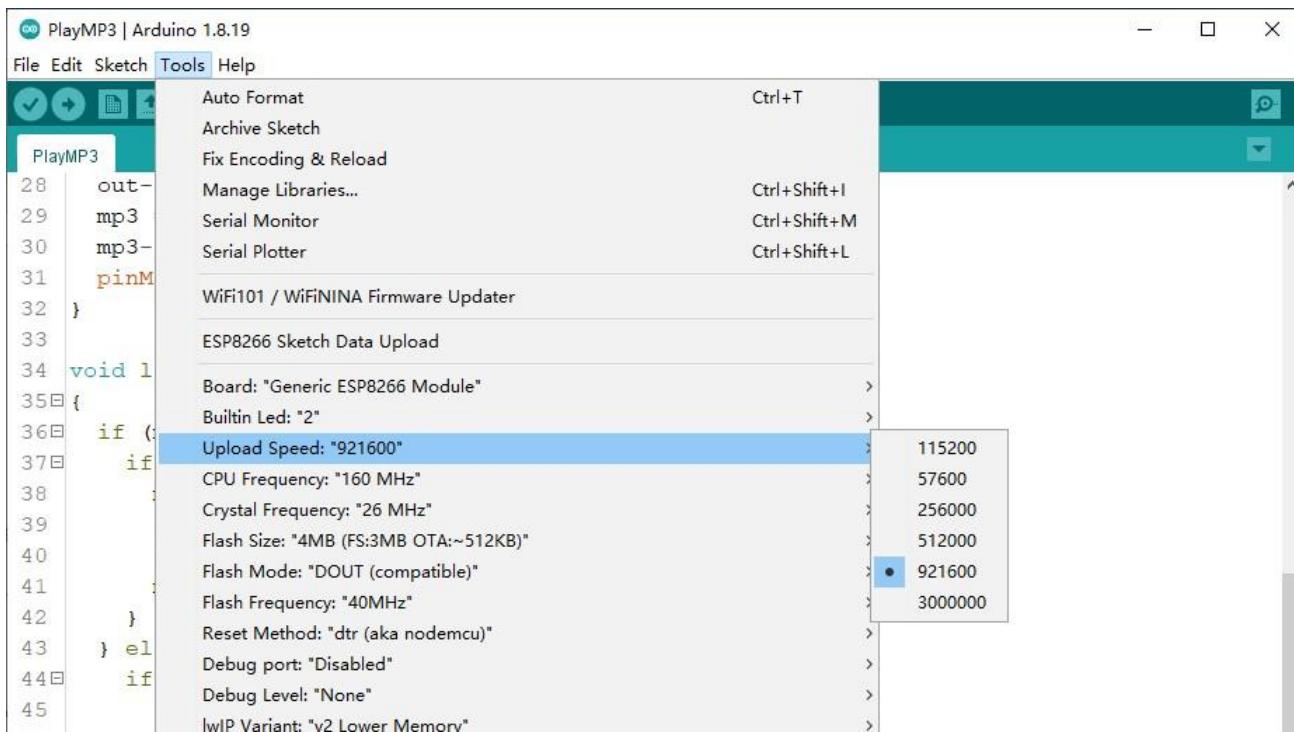

Open the Arduino software platform, click Tools in Menu, and choose **ESP8266 Sketch Data Upload**. If this tool does not appear, you can restart the Arduino IDE and try again.

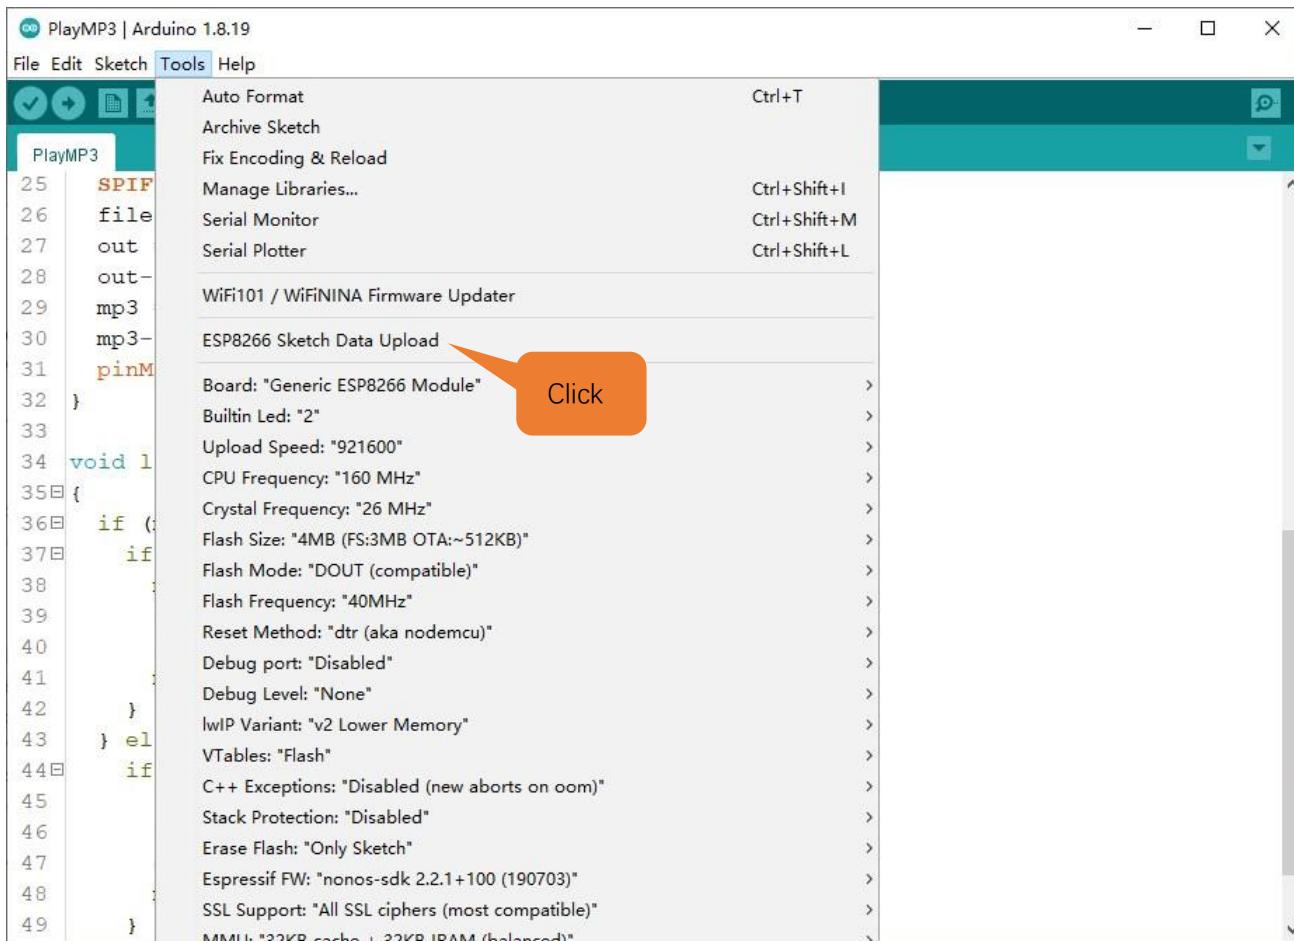

```
PlayMP3 | Arduino 1.8.19
File Edit Sketch Tools Help
PlayMP3
34 void loop()
35 {
36     if (mp3->isRunning()) {
37         if (!mp3->loop()){
38             mp3->stop();
39             delete file;
40             delete mp3;
41             mp3 = new AudioGeneratorMP3();
42         }
43     } else {
44         if (digitalRead(PIN_BUTTON) == LOW){
45             file = new AudioFileSourceSPIFFS("/1.mp3");
46             Serial.printf("MP3 done\n");
47             delay(1000);
48             mp3->begin(file, out);
49         }
    }
SPIFFS Image Uploaded
Writing at 0x00228000... (97 %)
Writing at 0x0022c000... (98 %)
Writing at 0x00230000... (100 %)
Wrote 3121152 bytes (1254693 compressed) at 0x00100000 in 28.5 seconds (effective 874.7 kb)
Hash of data verified.

Leaving...
Hard resetting via RTS pin...
```

After uploading, upload the code to the ESP8266 development.

The screenshot shows the Arduino IDE interface with the following details:

- Title Bar:** PlayMP3 | Arduino 1.8.10
- Menu Bar:** File Edit Sketch Tools Help
- Toolbar:** Includes icons for Save, Undo, Redo, Print, and others.
- Sketch Area:** The code for the `PlayMP3` sketch is displayed. The code uses the `AudioGeneratorMP3` library to play MP3 files from SPIFFS storage. It includes setup and loop functions, file handling, and a button control mechanism.

```
28     out->SetGain(2); //Volume Setup
29     mp3 = new AudioGeneratorMP3();
30     mp3->begin(file, out);
31     pinMode(PIN_BUTTON, INPUT);
32 }
33
34 void loop()
35 {
36     if (mp3->isRunning()) {
37         if (!mp3->loop()){
38             mp3->stop();
39             delete file;
40             delete mp3;
41             mp3 = new AudioGeneratorMP3();
42         }
43     } else {
44         if (digitalRead(PIN_BUTTON) == LOW){
45             file = new AudioFileSourceSPIFFS("/1.mp3");
46             Serial.printf("MP3 done\n");
47             delay(1000);
48             mp3->begin(file, out);
49         }
50     }
51 }
52 
```

- Status Bar:** Done uploading.
Hash of data verified.
Leaving...
Hard resetting via RTS pin...

Any concerns? ✉ support@freenove.com

Upload following sketch:

Freenove_Ultimate_Starter_Kit_for_ESP8266\C\Sketch_31.1_Play_music\PlayMP3

Sketch_31.1_Play_music

```

16
17 AudioGeneratorMP3 *mp3;
18 AudioFileSourceSPIFFS *file;
19 AudioOutputI2SNoDAC *out;
20
21 void setup()
22 {
23     Serial.begin(115200);
24     delay(1000);
25     SPIFFS.begin();
26     file = new AudioFileSourceSPIFFS("/1.mp3");
27     out = new AudioOutputI2SNoDAC();
28     out->SetGain(0.3); //Volume Setup
29     mp3 = new AudioGeneratorMP3();
30     mp3->begin(file, out);
31     pinMode(PIN_BUTTON, INPUT);
32 }
33
34 void loop()

```

Done uploading.

Leaving...

Hard resetting via RTS pin...

- 38KB IRAM (balanced), Use pgm_read macros for IRAM/PROGMEM, 4MB (FS:3MB OTA:~512KB), 2, v2 Lower Memory, Disabled, None, Only Sketch, 115200 on COM9

After uploading the code, wait a moment and you will hear the music playing. Press the button and play the music again.

If no music is played, check whether the hardware circuit is properly connected. If the circuit is properly connected, check that the audio file has been uploaded and that the audio name matches the name in the code.

The following is the program code:

1	#include <Arduino.h>
2	#include "AudioFileSourceSPIFFS.h"
3	#include "AudioGeneratorMP3.h"
4	#include "AudioOutputI2SNoDAC.h"
5	#include <ESP8266WiFi.h>
6	#include "AudioFileSourceID3.h"
7	#include "AudioOutputI2S.h"

```
8 #define PIN_BUTTON 5
9
10
11 AudioGeneratorMP3 *mp3;
12 AudioFileSourceSPIFFS *file;
13 AudioOutputI2SNoDAC *out;
14
15 void setup()
16 {
17     Serial.begin(115200);
18     delay(1000);
19     SPIFFS.begin();
20     file = new AudioFileSourceSPIFFS("/1.mp3");
21     out = new AudioOutputI2SNoDAC();
22     out->SetGain(2); //Volume Setup:0~4.0
23     mp3 = new AudioGeneratorMP3();
24     mp3->begin(file, out);
25     pinMode(PIN_BUTTON, INPUT);
26 }
27
28 void loop()
29 {
30     if (mp3->isRunning()) {
31         if (!mp3->loop()) {
32             mp3->stop();
33             delete file;
34             delete mp3;
35             mp3 = new AudioGeneratorMP3();
36         }
37     } else {
38         if (digitalRead(PIN_BUTTON) == LOW) {
39             file = new AudioFileSourceSPIFFS("/1.mp3");
40             Serial.printf("MP3 done\n");
41             delay(1000);
42             mp3->begin(file, out);
43         }
44     }
45 }
```

Check whether the file has finished playing in the main loop function.

```
30 if (mp3->isRunning()) {
31     if (!mp3->loop()) {
32         mp3->stop();
33         delete file;
34         delete mp3;
```

```
35     mp3 = new AudioGeneratorMP3();  
36 }  
37 }
```

Play the music again after the button is pressed.

```
38 if (digitalRead(PIN_BUTTON) == LOW) {  
39     file = new AudioFileSourceSPIFFS("/1.mp3");  
40     Serial.printf("MP3 done\n");  
41     delay(1000);  
42     mp3->begin(file, out);  
43 }
```

It is important to note that the name of the uploaded audio file should correspond to the name on the code, changing the name to "1.mp3" in this tutorial. If you upload an audio file with a different name, please change the name in the code. Otherwise, ESP8266 will not play the music.

```
19 audioLogger = &Serial;  
20 file = new AudioFileSourceSPIFFS("/1.mp3");  
21 id3 = new AudioFileSourceID3(file);
```




Chapter 32 Play music with audio decoder

In the previous section, we used the ESP8266 to output the audio signal, obviously with some distortion in the sound quality. In this section, you will enjoy higher quality music with the help of the ES7148 chip.

Project 32.1 Play_music_with_audio_decoder

In this project, we will use ES7148 chip to transcode and output audio data.


Component List

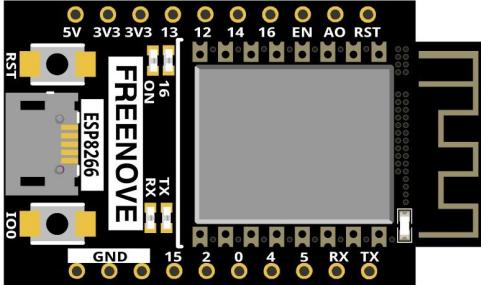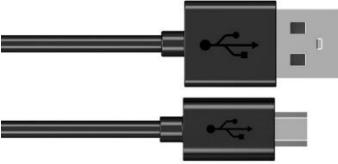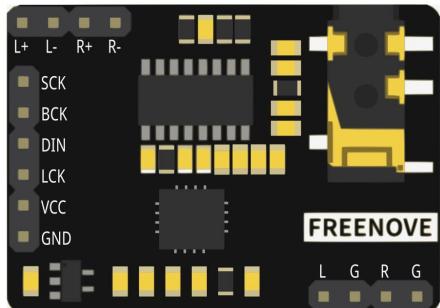ESP8266 x1	Micro USB Wire x1
	
Audio Converter & Amplifier	Speaker*1
	
Jumper wire F/M x5 Jumper wire M/M x2	




Component knowledge

The front view of Audio Converter & Amplifier module.

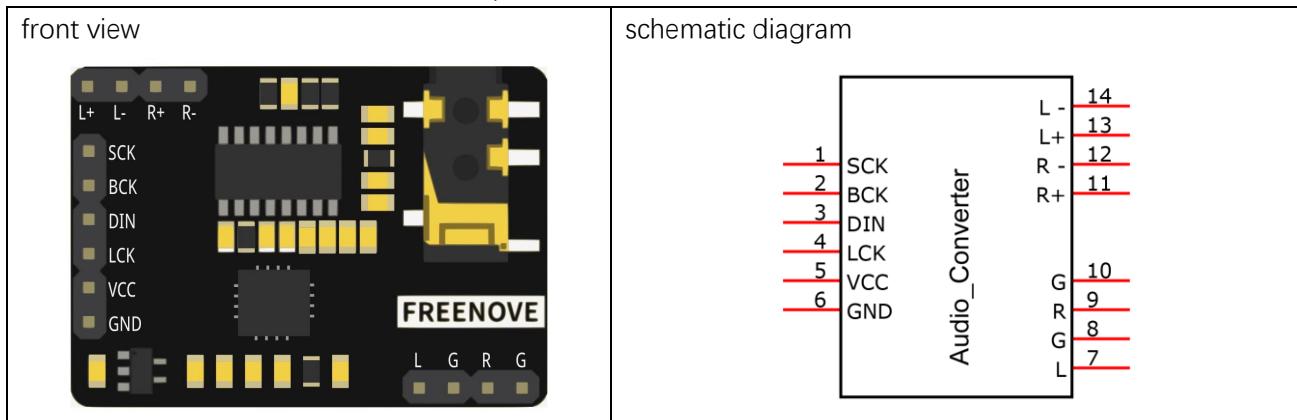

Interface description for Audio Converter & Amplifier module

Pin	Name	Introductions
1	SCK	System clock input
2	BCK	Audio data bit clock input
3	DIN	Audio data input
4	LCK	Audio data word clock input
5	VCC	Power input, 3.3V~5.0V
6	GND	Power Ground
7	L	External audio left channel input
8	G	Power Ground
9	R	External audio right channel input
10	G	Power Ground
11	R+	Positive pole of right channel horn
12	R-	Negative pole of right channel horn
13	L+	Positive pole of left channel horn
14	L-	Negative pole of left channel horn

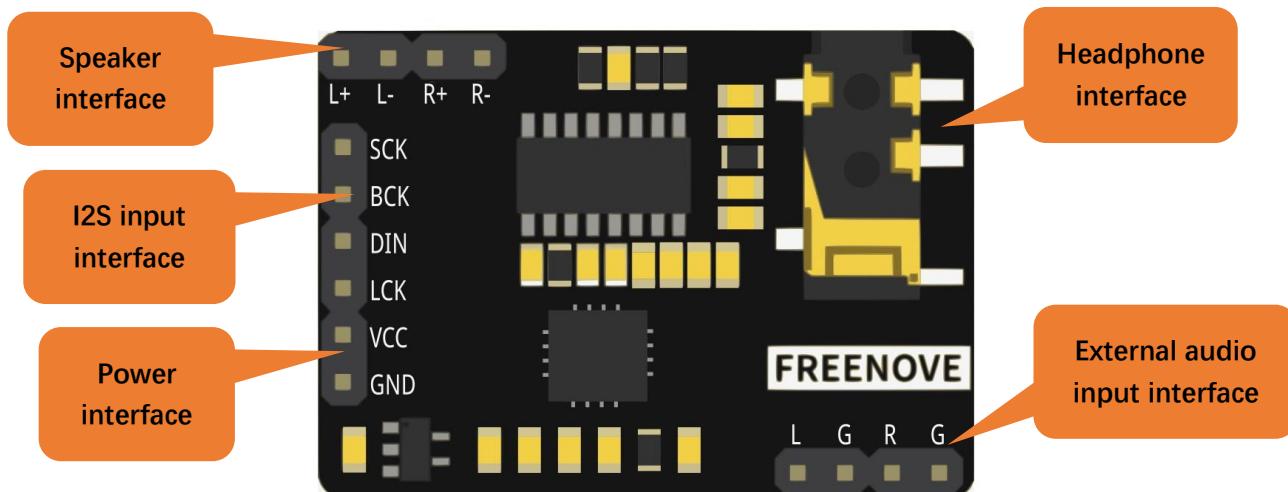

Speaker interface: Connect left channel speaker and right channel speaker. Group L: L+ & L-; Group R: R+ & R-. The two interfaces of the speaker can be connected to the interfaces of group L or group R. But when one interface is connected to group L, the other cannot be connected to group R. Doing so may cause the module to malfunction.

Headphone interface: the interface to connect the headphones.

I2S input interface: connect to the device with I2S. Used to transcode audio data into DAC audio signals.


External audio input interface: connect to external audio equipment. Used to amplify externally input audio signals.

Power interface: connect to external power supply. External power supply selection range: 3.3V-5.0V.


Circuit

In this section, you need to perform operations in the following sequence: Upload audio data in the first step, upload code in the second step, disconnect the power supply in the third step, connect hardware in the fourth step as follows, and connect power supply in the fifth step. Make sure you do this in order to avoid permanent damage to your hardware.

Schematic diagram

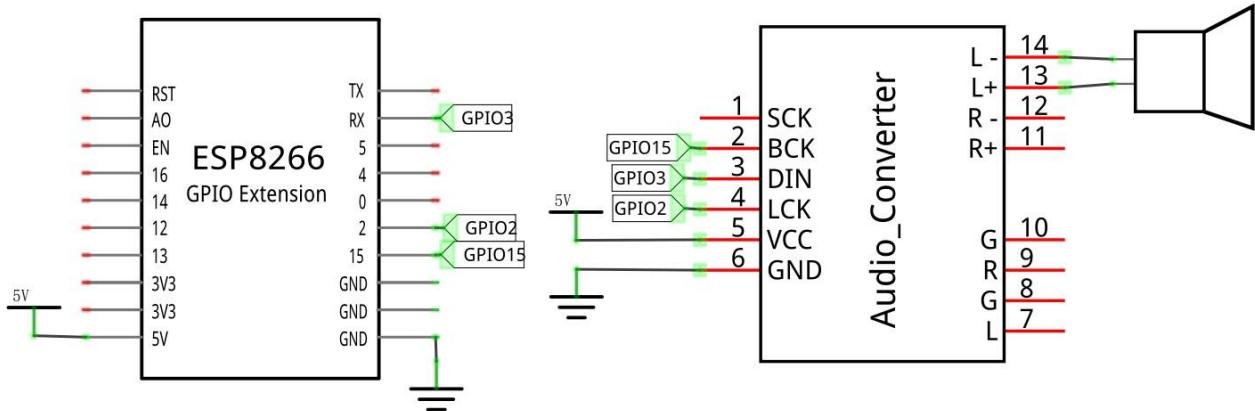

Hardware connection. If you need any support, please free to contact us via: support@freenove.com

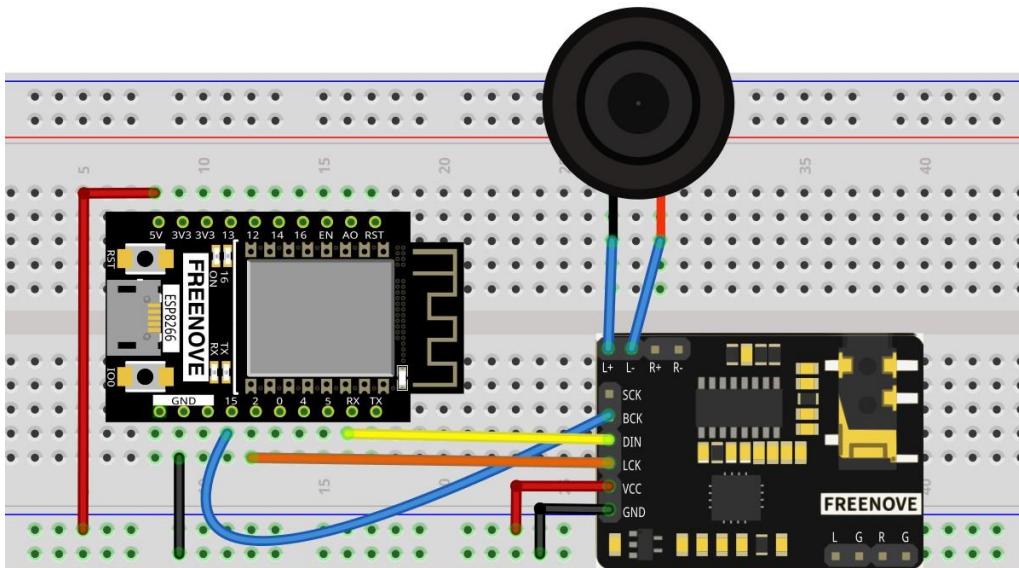

Any concerns? [✉ support@freenove.com](mailto:support@freenove.com)




Sketch

How to install the library

This code is used to play music. We use the third-party library **ESP8266Audio**. If you haven't already installed it, install it now. The steps to add third-party libraries are as follows: The first way, Open Arduino -> Sketch->Include library -> Manage library. Type ESP8266Audio in the search bar and select ESP8266Audio to install.

Refer to the following operations:

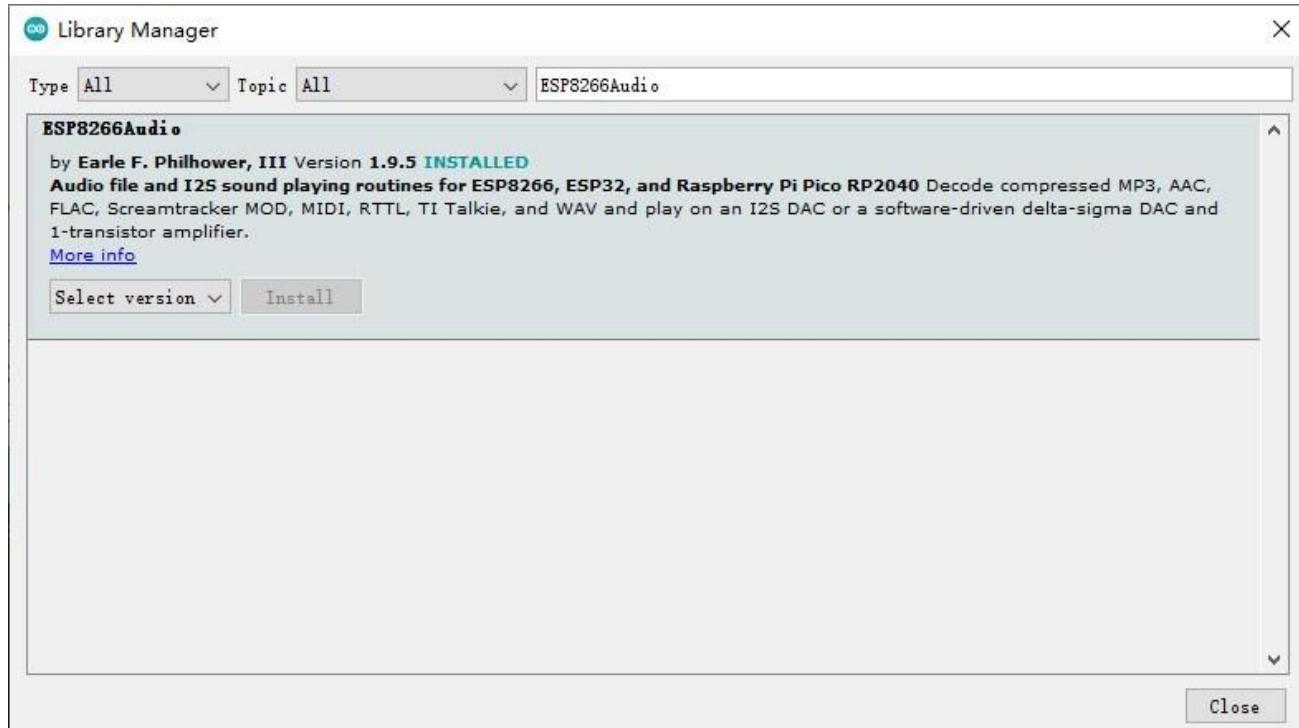

The second way, open Arduino IDE, click Sketch→Include Library→Add .ZIP Library, In the pop-up window, find the file named “./Libraries/ESP8266Audio.Zip” which locates in this directory, and click OPEN.

Install the Arduino IDE plug-in Arduino-ESP8266Fs-Plugin


In this tutorial, find a folder named "./Sketches/ Sketch_31.1_play_music/tools" under that directory and copy that folder into the Arduino IDE environment directory.

The details are as follows:


First, open the software platform arduino, and then click File in Menus and select Preferences.



Find the Arduino IDE environment directory location.

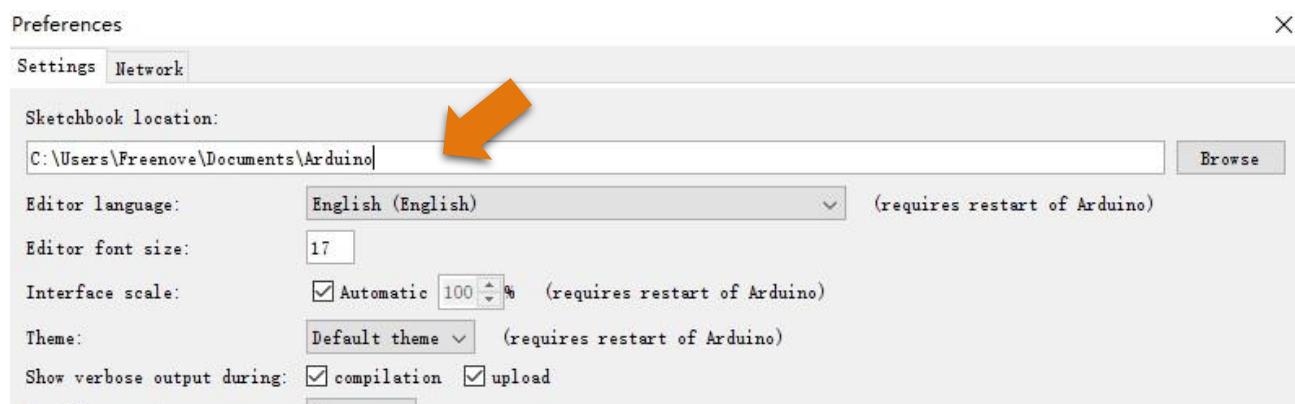

Copy "tools" folder to this directory.

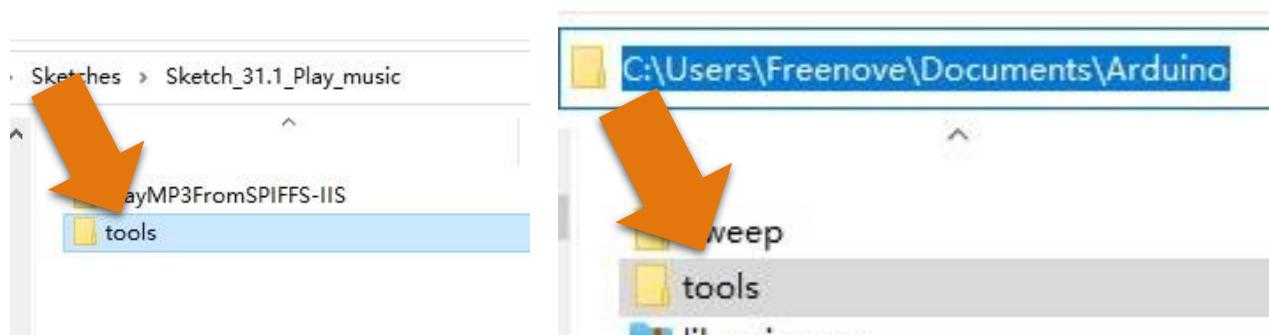


Finally, restart the Arduino IED


Any concerns? ✉ support@freenove.com

Upload music

Before uploading the music file, in the path ". /Sketches/ Sketch_31.1_play_music/ playmp3fromSpiffs-IIS \data" folder, save the music file that needs to be uploaded and make sure the file content is not empty. If you do not have a "data" folder, you need to create a "data" folder and put MP3 or WAV files in the "data" folder. In addition, the audio file size cannot exceed the selected FlashSize.

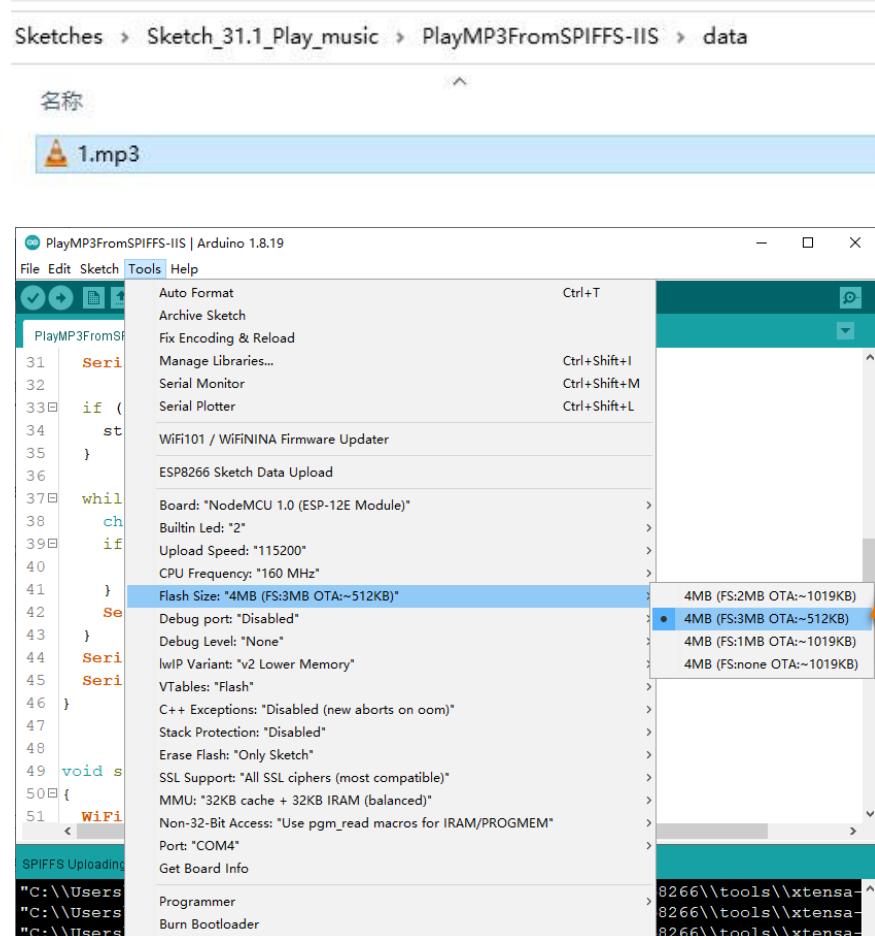


ESP8266's CPU frequency is set to 160MHz.

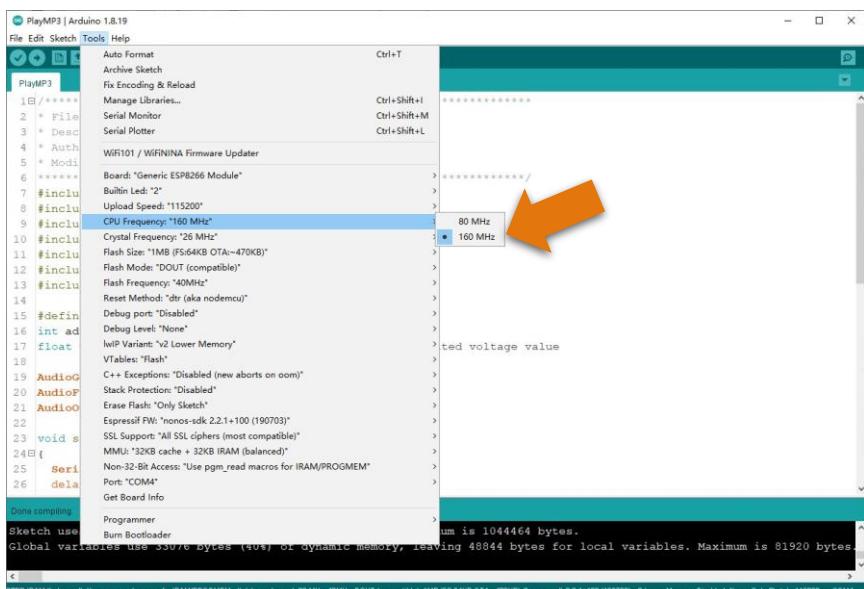


Any concerns? support@freenove.com

Because the file size is large, set the upload speed to 921600.

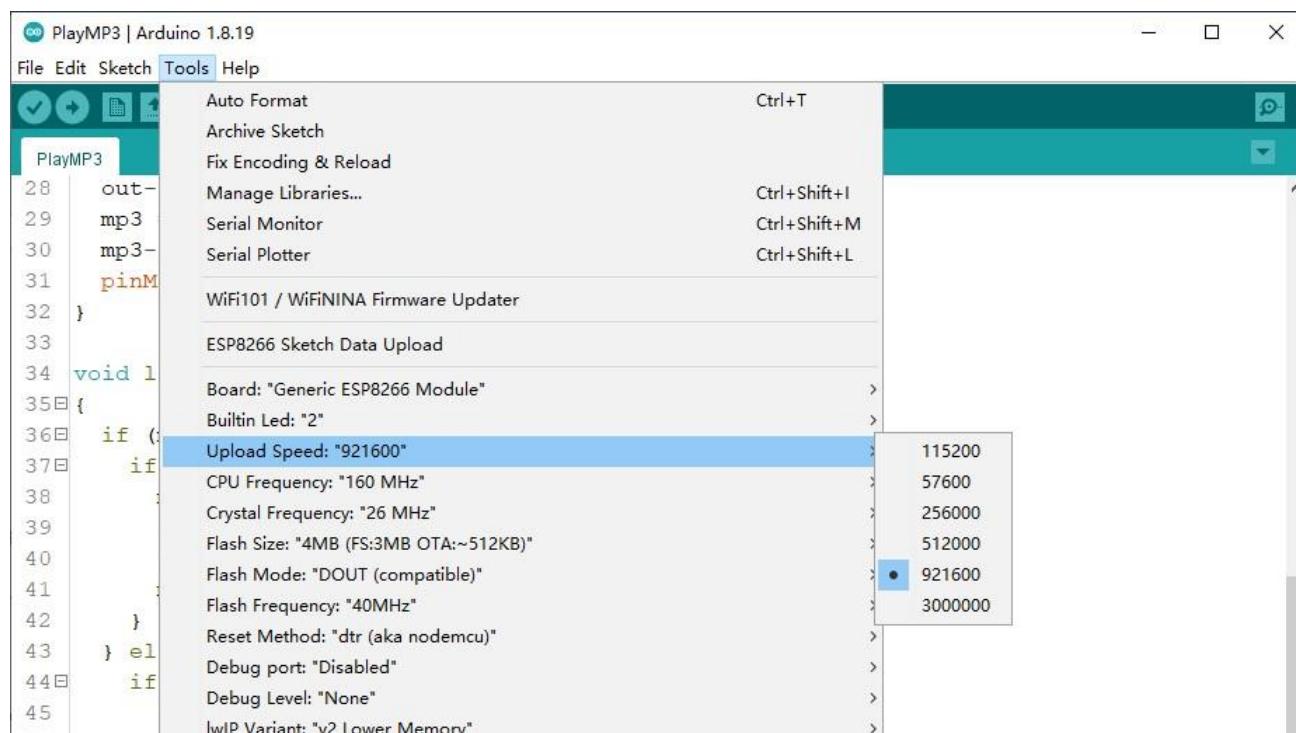

Open the Arduino software platform, click Tools in Menu, and choose **ESP8266 Sketch Data Upload**. If this tool does not appear, you can restart the Arduino IDE and try again.

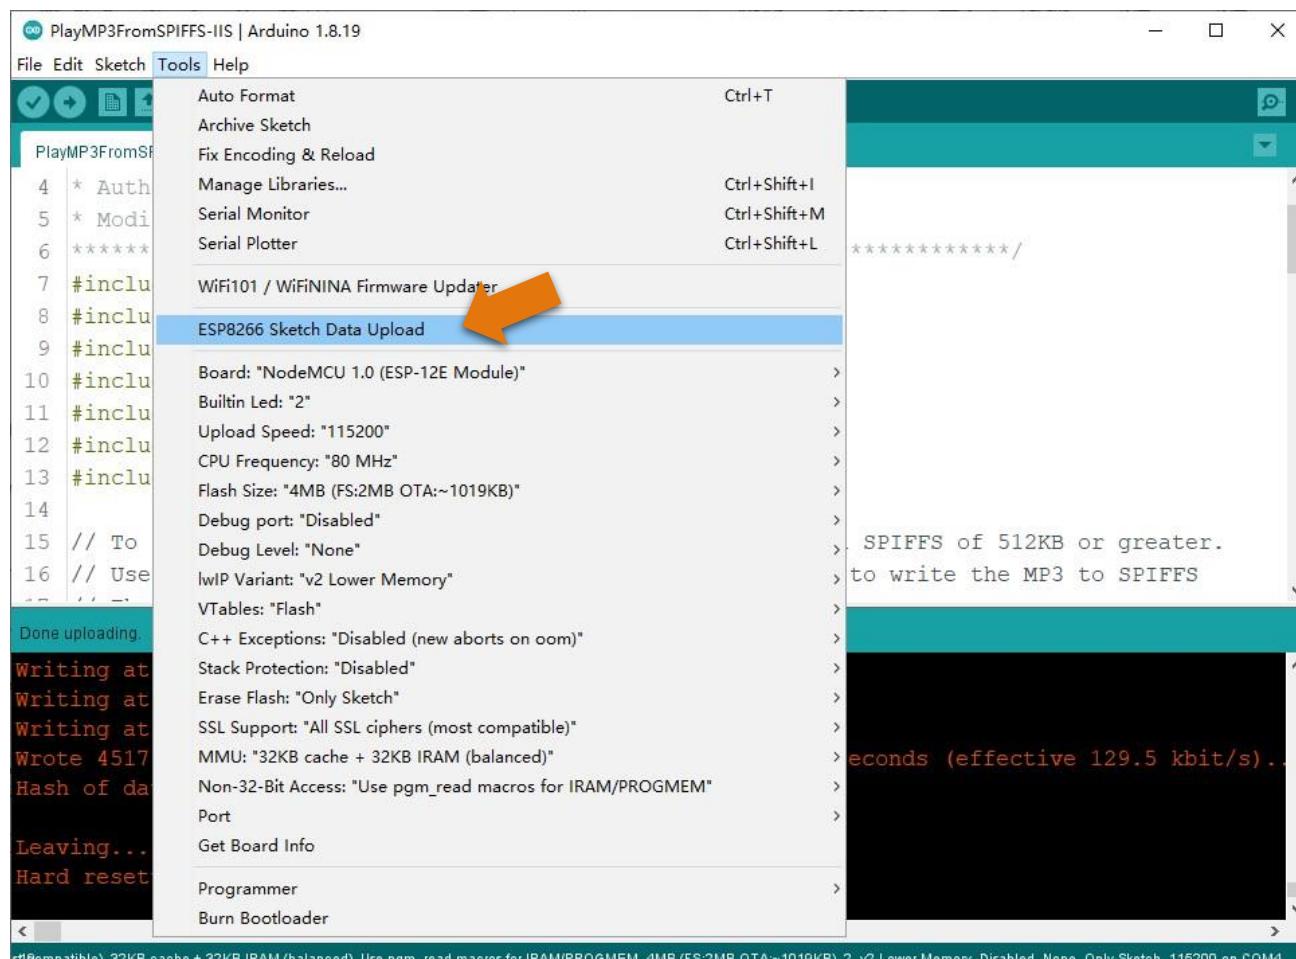

Any concerns? ✉ support@freenove.com



After uploading, upload the code to the ESP8266 development.

```

  PlayMP3FromSPIFFS-IIS | Arduino 1.8.19
  File Edit Sketch Tools Help
  ✓ ↻ ⌂ ⌃ ⌄ ⌅ ⌆
  PlayMP3FromSPIFFS-IIS
  4 * Author      : www.freenove.com
  5 * Modification: 2022/05/11
  6 ****
  7 #include <Arduino.h>
  8 #include <ESP8266WiFi.h>
  9 #include "AudioFileSourceSPIFFS.h"
 10 #include "AudioFileSourceID3.h"
 11 #include "AudioGeneratorMP3.h"
 12 #include "AudioOutputI2SNoDAC.h"
 13 #include "AudioOutputI2S.h"
 14
 15 // To run, set your ESP8266 build to 160MHz, and include a SPIFFS of 512KB or greater.
 16 // Use the "Tools->ESP8266/ESP32 Sketch Data Upload" menu to write the MP3 to SPIFFS
 17 // Then upload the sketch normally.
 18
 19 // pno cs from https://ccrma.stanford.edu/~jos/pasp/Sound_Examples.html

  SPIFFS Image Uploaded
  Writing at 0x0032c000... (98 %)
  Writing at 0x00330000... (100 %)
  Wrote 2072576 bytes (1250794 compressed) at 0x00200000 in 110.9 seconds (effective 149.5 kbit/s)
  Hash of data verified.

  Leaving...
  Hard resetting via RTS pin...

```

```

  PlayMP3FromSPIFFS-IIS | Arduino 1.8.19
  File Edit Sketch Tools Help
  ✓ ↻ ⌂ ⌃ ⌄ ⌅ ⌆ Upload
  PlayMP3FromSPIFFS-IIS
  10 #include "AudioFileSourceID3.h"
  11 #include "AudioGeneratorMP3.h"
  12 #include "AudioOutputI2SNoDAC.h"
  13 #include "AudioOutputI2S.h"
  14
  15 // To run, set your ESP8266 build to 160MHz, and include a SPIFFS of 512KB or greater.
  16 // Use the "Tools->ESP8266/ESP32 Sketch Data Upload" menu to write the MP3 to SPIFFS
  17 // Then upload the sketch normally.
  18
  19 // pno_cs from https://ccrma.stanford.edu/~jos/pasp/Sound_Examples.html
  20
  21 AudioGeneratorMP3 *mp3;
  22 AudioFileSourceSPIFFS *file;
  23 AudioFileSourceID3 *id3;
  24 //AudioOutputI2SNoDAC *out;
  25 AudioOutputI2S *out;
  26
  27 // Called when a metadata event occurs (i.e. an ID3 tag, an ICY block, etc.
  28 void MDCallback(void *cbData, const char *type, bool isUnicode, const char *string)

  Done uploading.
  Hash of data verified.

  Leaving...
  Hard resetting via RTS pin...

```

Upload following sketch:

Freenove_Ultimate_Starter_Kit_for_ESP8266\Sketch_32.1_Play_music_with_audio_decoder\PlayMP3FromSPIFFS-IIS

Sketch 32.1 Play music with audio decoder

The screenshot shows the Arduino IDE interface with the following details:

- Title Bar:** PlayMP3FromSPIFFS-IIS | Arduino 1.8.19
- Menu Bar:** File Edit Sketch Tools Help
- Toolbar:** Includes icons for Save, Upload, and other common functions.
- Sketch Area:** The code for "PlayMP3FromSPIFFS-IIS" is displayed, showing the following content:

```
10 #include "AudioFileSourceID3.h"
11 #include "AudioGeneratorMP3.h"
12 #include "AudioOutputI2SNoDAC.h"
13 #include "AudioOutputI2S.h"
14
15 // To run, set your ESP8266 build to 160MHz, and include a SPIFFS of 512KB or greater.
16 // Use the "Tools->ESP8266/ESP32 Sketch Data Upload" menu to write the MP3 to SPIFFS
17 // Then upload the sketch normally.
18
19 // pno_cs from https://ccrma.stanford.edu/~jos/pasp/Sound\_Examples.html
20
21 AudioGeneratorMP3 *mp3;
22 AudioFileSourceSPIFFS *file;
23 AudioFileSourceID3 *id3;
24 //AudioOutputI2SNoDAC *out;
25 AudioOutputI2S *out;
26
27 // Called when a metadata event occurs (i.e. an ID3 tag, an ICY block, etc.
28 void MDCallback(void *cbData, const char *type, bool isUnicode, const char *string)
```
- Serial Monitor:** Shows the output of the uploaded sketch:

```
Done uploading.
Hash of data verified.

Leaving...
Hard resetting via RTS pin...
```
- Status Bar:** At the bottom, it says: stl@compatible), 32KB cache + 32KB IRAM (balanced). Use pgm_read macros for IRAM/PROGMEM, 4MB (FS:2MB OTA:~1019KB), 2, v2 Lower Memory. Disabled, None, Only Sketch, 115200 on COM4

After uploading the code, wait a moment and you will hear the music playing.

If no music is played, check whether the hardware circuit is properly connected. If the circuit is properly connected, check that the audio file has been uploaded and that the audio name matches the name in the code.

The following is the program code:

```
1 #include <Arduino.h>
2 #include <ESP8266WiFi.h>
3 #include "AudioFileSourceSPIFFS.h"
4 #include "AudioFileSourceID3.h"
5 #include "AudioGeneratorMP3.h"
6 #include "AudioOutputI2SNoDAC.h"
7 #include "AudioOutputI2S.h"
8
9 // To run, set your ESP8266 build to 160MHz, and include a SPIFFS of 512KB or greater.
10 // Use the "Tools->ESP8266/ESP32 Sketch Data Upload" menu to write the MP3 to SPIFFS
```

Any concerns? ✉ support@freenove.com



```
11 // Then upload the sketch normally.  
12  
13 // pno_cs from https://ccrma.stanford.edu/~jos/pasp/Sound_Examples.html  
14  
15 AudioGeneratorMP3 *mp3;  
16 AudioFileSourceSPIFFS *file;  
17 AudioFileSourceID3 *id3;  
18 //AudioOutputI2SNoDAC *out;  
19 AudioOutputI2S *out;  
20  
21 // Called when a metadata event occurs (i.e. an ID3 tag, an ICY block, etc.  
22 void MDCallback(void *cbData, const char *type, bool isUnicode, const char *string)  
23 {  
24     (void)cbData;  
25     Serial.printf("ID3 callback for: %s = ", type);  
26     if (isUnicode) {  
27         string += 2;  
28     }  
29  
30     while (*string) {  
31         char a = *(string++);  
32         if (isUnicode) {  
33             string++;  
34         }  
35         Serial.printf("%c", a);  
36     }  
37     Serial.printf("\n");  
38     Serial.flush();  
39 }  
40  
41 void setup()  
42 {  
43     WiFi.mode(WIFI_OFF);  
44     Serial.begin(115200);  
45     delay(1000);  
46     SPIFFS.begin();  
47     Serial.printf("Sample MP3 playback begins... \n");  
48  
49     audioLogger = &Serial;  
50     file = new AudioFileSourceSPIFFS("/1.mp3");  
51     id3 = new AudioFileSourceID3(file);  
52     id3->RegisterMetadataCB(MDCallback, (void*) "ID3TAG");  
53     //out = new AudioOutputI2SNoDAC();  
54     out = new AudioOutputI2S();
```

```
55     out->SetGain(2); //Volume Setup:0~4.0
56     mp3 = new AudioGeneratorMP3();
57     mp3->begin(id3, out);
58 }
59
60 void loop()
61 {
62     if (mp3->isRunning()) {
63         if (!mp3->loop()) mp3->stop();
64     } else {
65         Serial.printf("MP3 done\n");
66         delay(1000);
67     }
68 }
```

Check whether the file has finished playing in the main loop function.

```
60 void loop()
61 {
62     if (mp3->isRunning()) {
63         if (!mp3->loop()) mp3->stop();
64     } else {
65         Serial.printf("MP3 done\n");
66         delay(1000);
67     }
68 }
```

It is important to note that the name of the uploaded audio file should correspond to the name on the code, changing the name to "1.mp3" in this tutorial. If you upload an audio file with a different name, please change the name in the code. Otherwise, ESP8266 will not play the music.

```
49     audioLogger = &Serial;
50     file = new AudioFileSourceSPIFFS("/1.mp3");
51     id3 = new AudioFileSourceID3(file);
```



Chapter 33 Soldering Circuit Board

Project 33.1 Soldering a Buzzer

We have tried to use a buzzer in a previous chapter, and now we will solder a circuit that when the button is pressed, the buzzer sounds.

This circuit does not need programming and can work when it is powered on. And when the button is not pressed, there is no power consumption.

You can install it on your bike, bedroom door or any other places where it is needed.

Component List


Pin header x2	LED x1	Resistor 220Ω x1	Active buzzer x1	Push button x1

AA Battery Holder x1

Circuit


We will solder the following circuit on the main board.

Schematic diagram

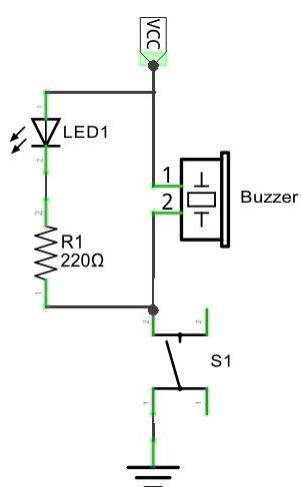

Hardware connection.


If you need any support, please feel free to contact us via: support@freenove.com

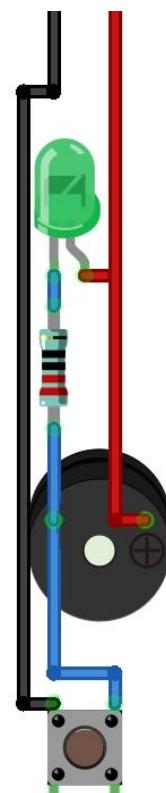




Soldering the Circuit

Insert the components on the main board and solder the circuit on its back.

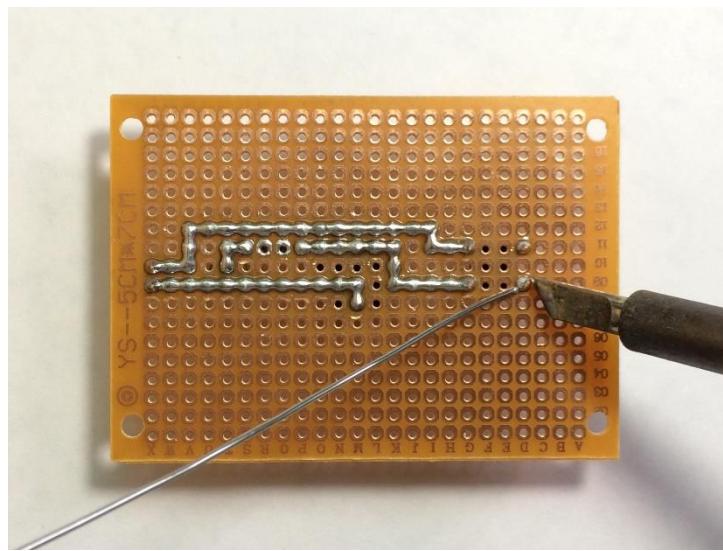


rendering after soldering:

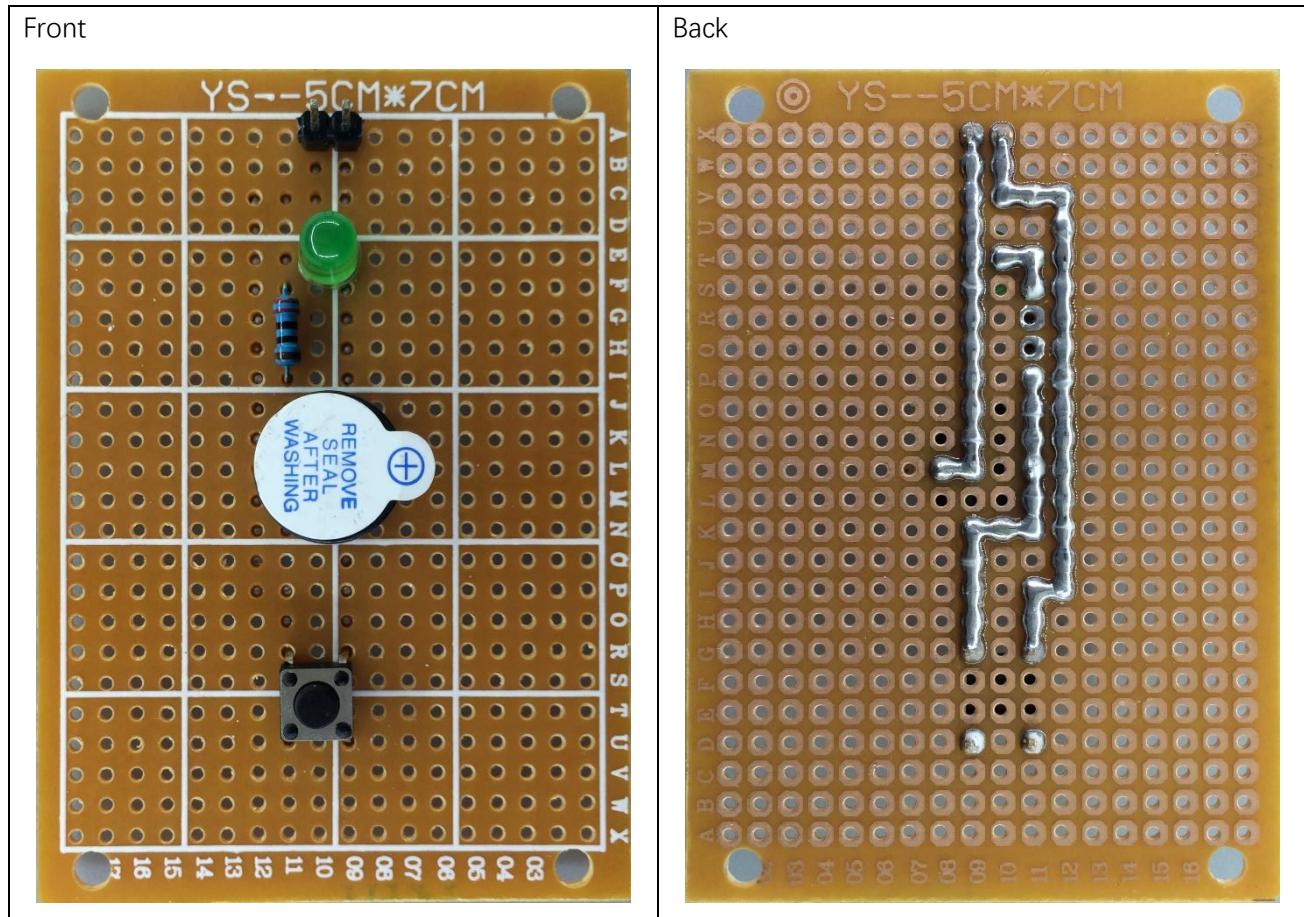

Testing circuit

Connect the circuit board to power supply (3~5V). You can use ESP8266 board or battery box as the power supply.

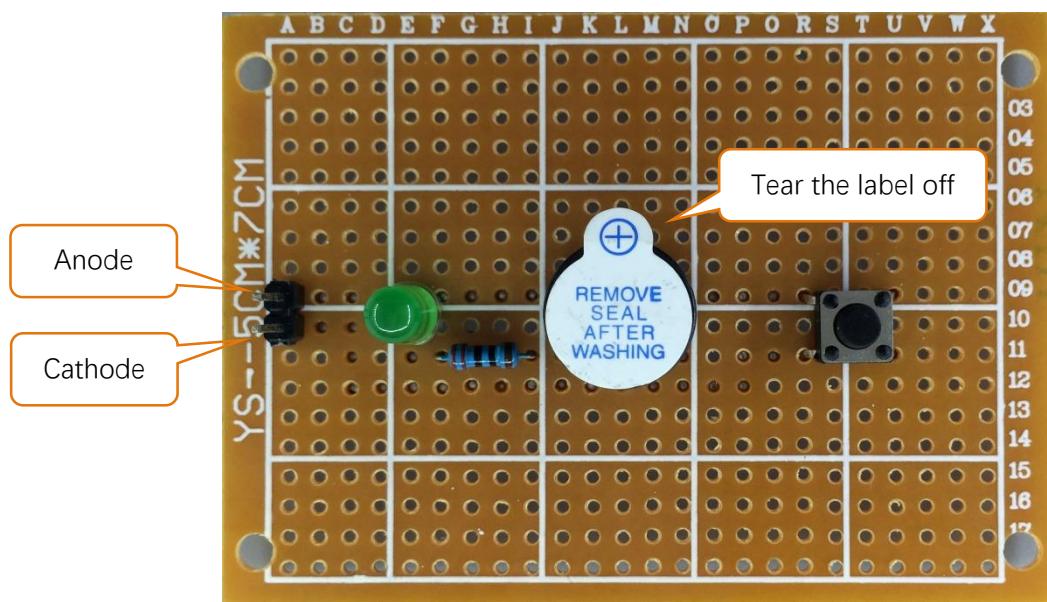

Press the push button after connecting the power, and then the buzzer will make a sound.



Project 33.2 Soldering a Flowing Water Light

From previous chapter, we have learned to make a flowing water light with LED. Now, we will solder a circuit board, and use the improved code to make a more interesting flowing water light.

Component List

Pin header x5	Resistor 220Ω x8	LED x1	74HC595 x1
---------------	------------------	--------	------------


Circuit

Solder the following circuit on the main board.


Schematic diagram	Hardware connection

Soldering the Circuit

Insert the components on the main board and solder the circuit on its back.

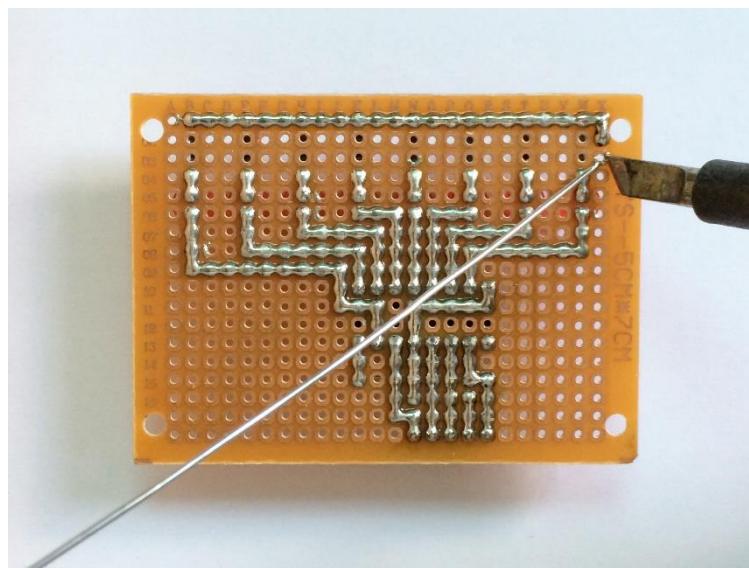


Rendering after soldering:

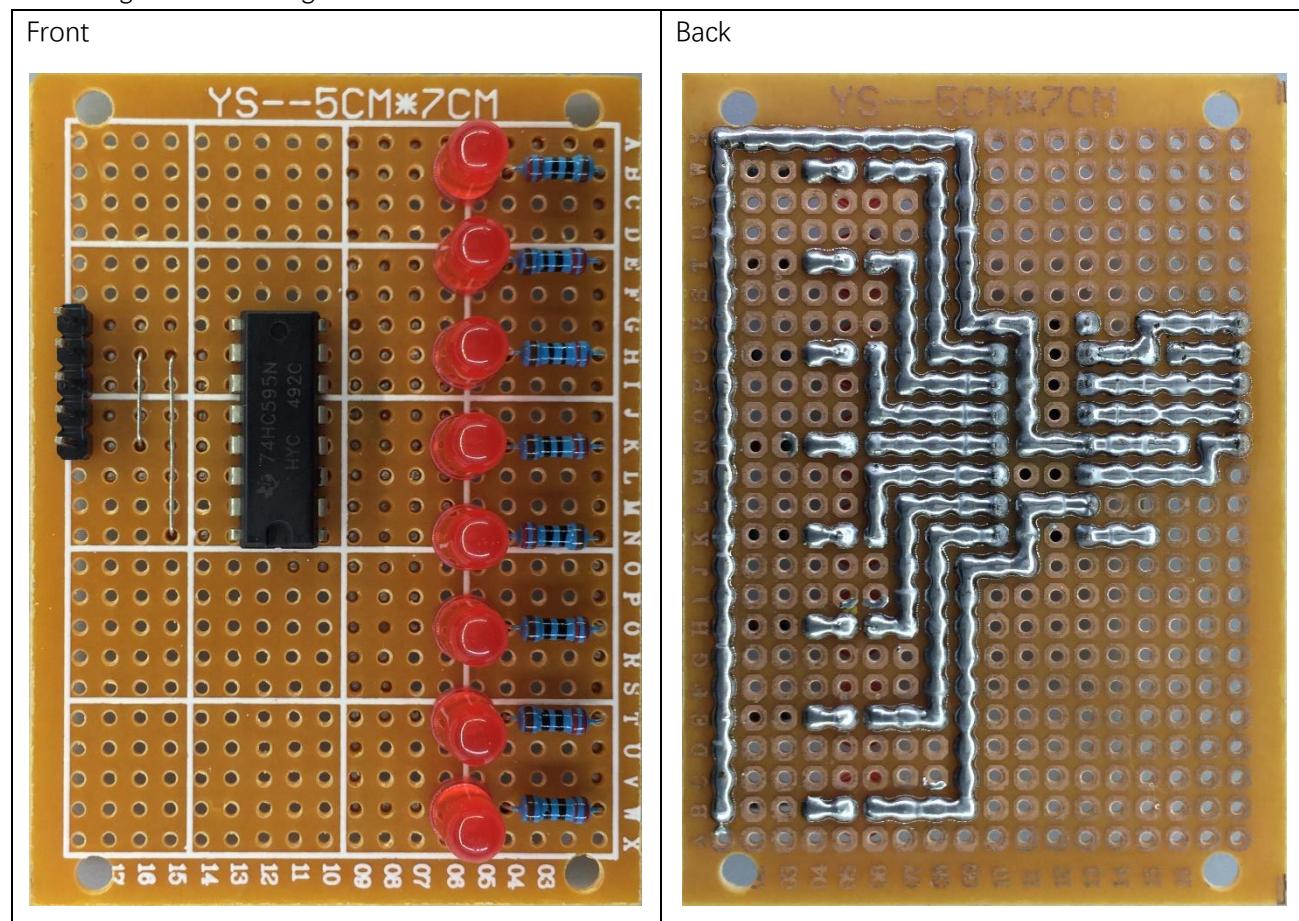

Connecting the Circuit

Connect the board to ESP8266 with Jumper wire in the following way.

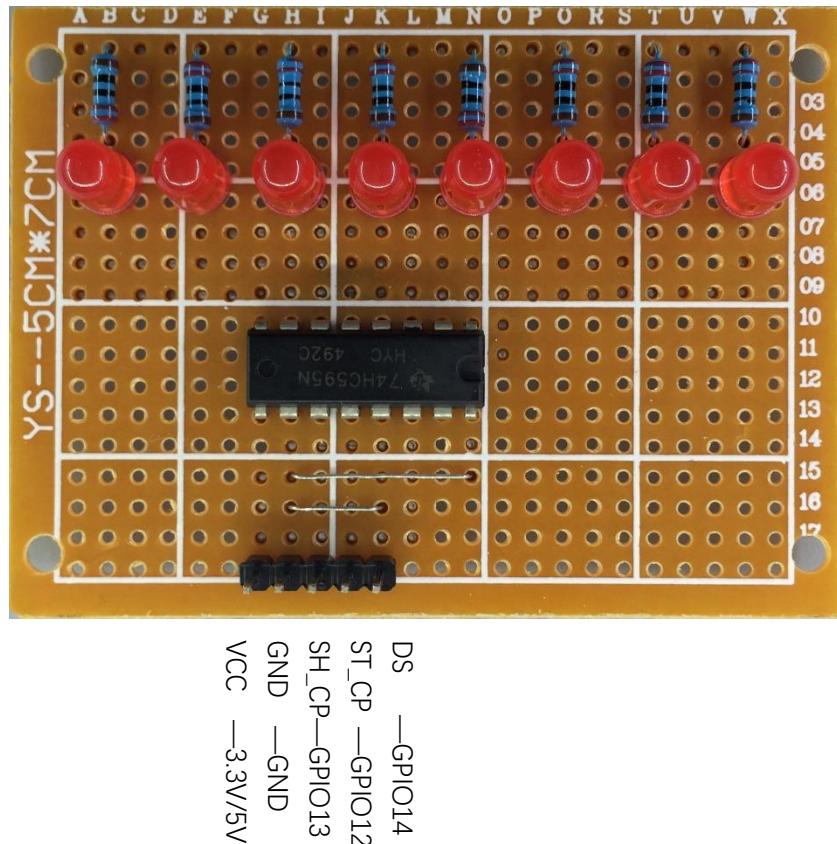

Sketch

The following is the program code:

```

1 int latchPin = 12;           // Pin connected to ST_CP of 74HC595(Pin12)
2 int clockPin = 13;          // Pin connected to SH_CP of 74HC595(Pin11)
3 int dataPin = 14;           // Pin connected to DS of 74HC595(Pin14)
4
5 void setup() {
6     // set pins to output
7     pinMode(latchPin, OUTPUT);
8     pinMode(clockPin, OUTPUT);
9     pinMode(dataPin, OUTPUT);
10 }
11
12 void loop() {
13     // Define a one-byte variable to use the 8 bits to represent the state of 8 LEDs of LED bar

```

```
graph.  
15 // This variable is assigned to 0x01, that is, binary 00000001, which indicates only one LED light  
16 on.  
17 byte x = 0x01;      // 0b 0000 0001  
18 for (int j = 0; j < 8; j++) { // Let LED light up from right to left  
19     writeTo595(LSBFIRST, x);  
20     x <<= 1; // make the variable move one bit to left once, then the bright LED move one step  
21 to the left once.  
22     delay(50);  
23 }  
24 delay(100);  
25 x = 0x80;          //0b 1000 0000  
26 for (int j = 0; j < 8; j++) { // Let LED light up from left to right  
27     writeTo595(LSBFIRST, x);  
28     x >>= 1;  
29     delay(50);  
30 }  
31 delay(100);  
32 }  
33 void writeTo595(int order, byte _data) {  
34     // Output low level to latchPin  
35     digitalWrite(latchPin, LOW);  
36     // Send serial data to 74HC595  
37     shiftOut(dataPin, clockPin, order, _data);  
38     // Output high level to latchPin, and 74HC595 will update the data to the parallel output  
39     port.  
40     digitalWrite(latchPin, HIGH);  
41 }
```

In fact, this code is copied from chapter 13. If you have any questions for the code, please click "[Chapter 13 74HC595 & LED Bar Graph](#)" to return to Chapter 13 to study again.



What's next?(73)

Thanks for your reading. This tutorial is all over here. If you find any mistakes, omissions or you have other ideas and questions about contents of this tutorial or the kit and etc., please feel free to contact us:

support@freenove.com

We will check and correct it as soon as possible.

If you are interesting in processing, you can learn the Processing.pdf in:

Freenove_Ultimate_Starter_Kit_for_ESP8266\Processing\Processing.pdf

If you want to learn more about Arduino, Raspberry Pi, smart cars, robots and other interesting products in science and technology, please continue to focus on our website. We will continue to launch cost-effective, innovative and exciting products.

<http://www.freenove.com/>

End of the Tutorial

Thank you again for choosing Freenove products.