

# UFACTORY XARM

# **DEVELOPER MANUAL**



SHENZHEN UFACTORY CO., LTD

V1.8.5

# Contents

1. Introduction4
1.1. Notice4
1.2. Main Contents of the Manual5
1.3. xArm Motion Parameters5
1.4. Unit Definition5
1.5. Terms and Definitions6
1.6. Further Developer Resources10
1.7. More Information10
2. xArm Communication Protocol11
2.1. Control Box Communication Protocol11
2.1.1. Unit Definition11
2.1.2. Modbus-TCP Communication Format
2.1.3. Register (Robotic Arm Control)15
2.1.4. Register ( Peripherals Control through Robot IOs) 67
2.1.5. Modbus TCP Example100
2.1.6. Automatic Reporting Format103
3. Error Reporting and Handling107
3.1. Joints Error Message and Error Handling107
3.2. Control Box Error Code and Error Handling110
3.2.1. Control Box Error Code110
3.2.2. Control Box Error Code113

	3.3. Gripper Error Code & Error Handling	114
4. <sup>-</sup>	Technical Specifications	116
	4.1. xArm5/6/7 Common Specifications	116
	4.2. xArm 5 Specifications	118
	4.3. xArm 6 Specifications	119
	4.4. xArm 7 Specifications	120

# 1. Introduction

#### 1.1. Notice

- (1) This manual is dedicated for developers who develop the applications base on the xArm Modbus-TCP communication protocol. For xArm Studio application development, please refer to "xArm User Manual". For Python (C++ or ROS) application development, please refer to "1.6 Further Developer Resources".
- (2) Considering the potential risks of using xArm Modbus-TCP communication protocol for application development, operators need to read and understand all the contents of "xArm User Manual", familiar with xArm risk assessment and robot motion planning, and proficient in robot parameter setting and program creating in "xArm Studio" before Modbus-TCP end developing.

Before meeting the above conditions, we strongly recommend operators should refer to 'xArm User Manual' and program xArm robot by xArm Studio. Until then, operators could start xArm Modbus-TCP application development based on the communication protocol xArm provided.

It will reduce the potential risks as well as increase the efficiency of your application development based on xArm Modbus-TCP.

## 1.2. Main Contents of the Manual

- (1) xArm motion characteristics
- (2) xArm error reporting and handling
- (3) xArm technical specifications

## 1.3. xArm Motion Parameters

The parameters of the robotic arm are shown in Table 1.1 and Table 1.2.

Table 1.1 working range of each joint of the robotic arm

	Robotic Arm	xArm 5	xArm 6	xArm 7
Maximum		180°/s	180°/s 180°/s	
	1st Axis	±360°	±360°	±360°
	2st Axis	-118° <b>~</b> 120°	-118° <b>~</b> 120°	-118° <b>~</b> 120°
	3st Axis	-225° <b>~</b> 11°	-225° <b>~</b> 11°	±360°
Working Range	4st Axis	-97°~180°	±360°	-11°~225°
	5st Axis	±360°	-97°∼180°	±360°
	6st Axis	None	±360°	-97°∼180°
	7st Axis	None	None	±360°

Table 1.2 range of various motion parameters of the robotic arm

	TCP Motion Joint Motion	
Speed	0~1000mm/s	0 <b>~</b> 180°/s
Acceleration	0~50000mm/s²	0 <b>∼</b> 1145°/s²
Jerk	0~10000mm/s³	0 <b>~</b> 28647°/s³

Note:

- 1. In the TCP motion (Cartesian space motion) commands (set\_position () function of the SDK), If a motion command involves both position transformation and attitude transformation, the attitude rotation speed is generally calculated automatically by the system. In this situation, the specified speed parameter is the maximum linear speed, range from: 0 ~ 1000mm / s.
- 2. When the expected TCP motion only changes the attitude (roll, pitch, yaw), with position (x, y, z) remains unchanged, the specified speed is the attitude rotation speed, so the range 0 to 1000 corresponds to 0 to 180  $^{\circ}$  / s.

### 1.4. Unit Definition


The Python / Blockly examples and the units standard in the communication protocol are shown in Table 1.3.

Table 1.3. Default units in Python / Blockly example and Communication Protocol

Parameter	Parameter Python-SDK		Communication
X (Y/Z)	X (Y/Z) millimeter (mm)		millimeter (mm)
Roll (Pitch/Yaw)	degree (°)	degree (°)	radian (rad)
J1 (J2/J3/J4/J5/J6/J7)	degree (°)	degree (°)	radian (rad)
TCP Speed	mm/s	mm/s	mm/s
TCP Acceleration	mm/s²	mm/s²	mm/s²
TCP Jerk mm/s³		mm/s³	mm/s³
Joint Speed °/s		°/s	rad/s
Joint Acceleration °/s²		°/s²	rad/s²
Joint Jerk	°/s³	°/s³	rad/s³


# 1.5. Terms and Definitions

Control Box	The control box, core part of the robotic arm, is the integration of the robotic arm control system.
End Effector	The end effector, installed on the front end of the wrist of the robotic arm, is used to install special tools (such as grippers, vacuum gripper, etc.), which can directly perform work tasks.
Enable Robotic Arm	Power on the robotic arm and turn on the motor of the robotic arm.  After the robotic arm is enabled, it can start to move normally.
TCP	Tool center point.
TCP Motion	TCP motion is the Cartesian space motion, with target position in Cartesian space coordinate and the end follows the specified trajectory(arc, line, etc.).
TCP Payload (End Payload)	The payload weight refers to the actual (end tool +other object) weight in Kg; the X / Y / Z-axis indicates the position of the center of mass of the TCP relative to the default tool coordinate system, with unit of mm.
TCP Offset (Tool Center Point Offset)	Set the relative offset between the default tool coordinate system at flange center and the actual tool coordinate system, with distance unit of mm.
	Roll / Pitch / Yaw sequentially rotates around the X / Y / Z of the selected coordinate system (base coordinate system). The following describes the roll/pitch/yaw orientation representation of {B} relative to {A}: For example, the coordinate system {B} and a known reference coordinate system {A} are first superposed. First rotate {B} around $\hat{X}_A$ by $\gamma$ , then around $\hat{Y}_A$ by $\beta$ , and finally around $\hat{Z}_A$ by $\alpha$ . Each rotation is around a fixed axis of the reference coordinate system {A}. This method is called the XYZ fixed angle coordinate system, and sometimes they are defined as the roll angle, pitch angle, and yaw angle. The above description is shown in the following figure:
	The above description is shown in the following figure.

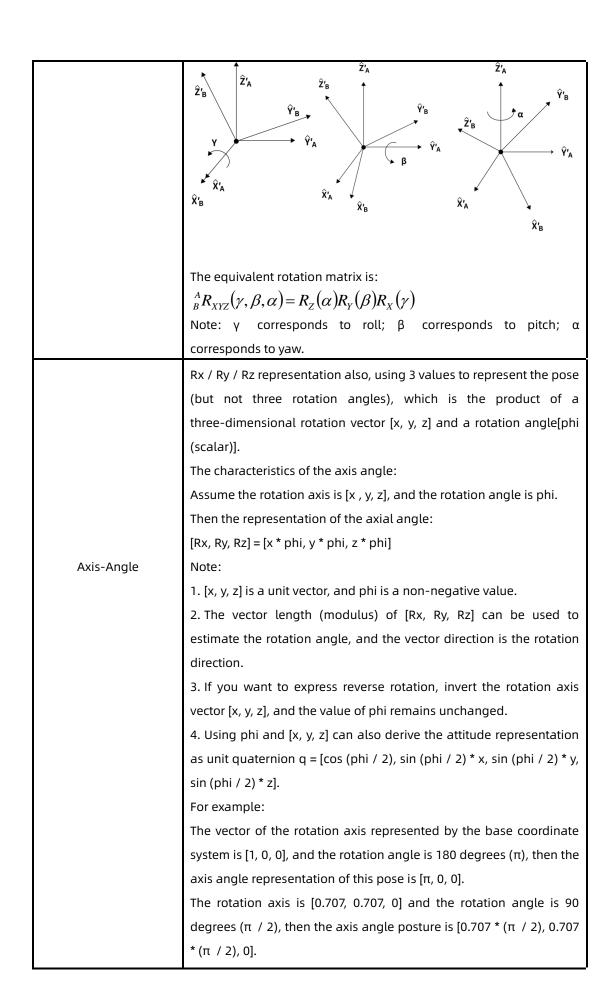

The Base Coordinate System (please refer to the figure 1)  Tool Coordinate System (please refer to the figure 1)	The base coordinate system is a Cartesian coordinate system based on the mounting base of the robotic arm and used to describe the motion of the robotic arm.  (front and back: X axis, left and right: Y axis, up and down: Z axis)  Consists of tool center point and coordinate orientation. If the TCP offset is not set, the default tool coordinate system is located at flange center.  For tool coordinate system based motion: The tool center point is taken as the zero point, and the trajectory of the robotic arm refers to the tool coordinate system.
User Coordinate System (please refer to the figure 1)	The user coordinate system can be defined as any other reference coordinate system rather than the robot base.
Manual Mode	In this mode, the robotic arm will enter the 'zero gravity' mode, since the gravity is compensated, the user can guide the robotic arm position directly by hand.
Teach Sensitivity	Teach sensitivity range is from 1 to 5 level. The larger the set value, the higher the teach sensitivity level, and the less the force required to drag the joint in the manual mode.
Collision Sensitivity	The collision sensitivity range is from 0 to 5 level. When it is set to 0, it means that collision detection is not enabled. The larger the set value, the higher the collision sensitivity level, and the smaller the force required to trigger the collision protection response of the robotic arm.
GPIO	General-purpose input and output.  For the input, you can check the potential of the pin by reading a register;  For the output, you can write a certain register to make this pin output high or low potential;
Safety Boundary	When this mode is activated, the boundary range of the cartesian space of the robotic arm can be limited. If the tool center point (TCP) exceeds the set safety boundary, the robotic arm will stop moving.

Reduced Mode	When this mode is activated, the maximum linear velocity of the
	Cartesian motion of the robotic arm, the maximum joint speed, and
	the range of the joint motion will be limited.

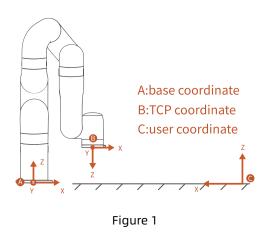

# 1.6. Further Developer Resources

ROS Library & Github: <a href="https://github.com/xArm-Developer/xarm\_ros">https://github.com/xArm-Developer/xarm\_ros</a>

xArm Python SDK Library:

https://github.com/xArm-Developer/xArm-Python-SDK

xArm CPLUS SDK Library:

https://github.com/xArm-Developer/xArm-CPLUS-SDK

Note: For the above three developer resources, we have detailed installation steps and commands on github. Please download the installation package for further development.


#### 1.7. More Information

- More product information: <a href="https://www.ufactory.cc/#/en/">https://www.ufactory.cc/#/en/</a>
- For technical support, please email to: support@ufactory.cc

• For sales support, please email to: sales@ufactory.cc

# 2. xArm Communication Protocol

### 2.1. Control Box Communication Protocol

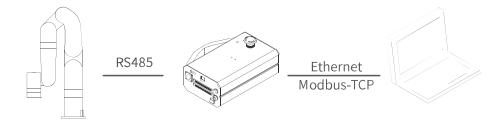

Note: The current protocol has some format changes for xArm. Please use this manual as the main protocol when running the robotic arm.

The main content of this chapter has two parts:

- (1) Control the motion of the robotic arm by Modbus TCP through AC/DC Control Box.
- (2) Control the IO device of the control box and the IO device at the end of the robotic arm by Modbus TCP through AC/DC Control Box.

#### 2.1.1. Unit Definition

The following explains some of the symbols used in the examples and

tables:

[u8]: 1 Byte, 8-bit unsigned int

[u16]: 2 Bytes, 16-bit unsigned int

[fp32]: 4 Bytes, float

(str): String

[System reset]: The user just enters the state after the mode switch or changes some settings (such as TCP offset, sensitivity, etc.). The above operations will terminate the ongoing movement of the robotic arm and

clear the cache commands, which is the same as the STOP state.

2.1.2. Modbus-TCP Communication Format

Modbus-TCP:

Modbus protocol is an application layer message transmission protocol, including three message types: ASCII, RTU, and TCP. The standard Modbus protocol physical layer interface includes RS232, RS422, RS485 and Ethernet interfaces, and adopts master / slave communication.

Modbus TCP Communication Process:

1. Establish a TCP connection.

2. Prepare Modbus messages.

3. Use the send command to send a message.

4. Waiting for a response under the same connection.

5. Use the recv command to read the message and complete a data

12

## exchange.

6. When the communication task ends, close the TCP connection.

#### Parameter:

Default TCP Port: 502

Protocol: 0x00 0x02 Control (Only this one for now)

# **Request Commands Format**

Format	Transaction	Protocol	Length	Register	Parameters
	Identifier (u16)	(u16)	(u16)	(u8)	(Refer to the
					statement of each
					commands
Length	2 Bytes	2 Bytes	2 Bytes	1 Byte	n Bytes
Example	0x00 0x01	0x00 0x02	0x00 0x03	0x0B	0x08 0x01
(Enable the robotic arm)					

### Response command format

Format	Transaction	Protocol	Length	Register	Status	Parameters
	Identifier	(u16)	(u16)	(u8)	(u8)	(Refer to the
	(u16)					statement of each
						commands)
Length	2 Bytes	2 Bytes	2 Bytes	1 Byte	1 Byte	n Bytes
Example	0x00 0x01	0x00 0x02	0x00	0x0B	0x00	none
(Enable the robotic arm)			0x02			

# Status Bit of the Response Format

Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
0: normal	1: error 0: normal	1: warning 0: normal	1: cannot perform motion 0: normal		0: normal	0: normal	0: normal

#### General notes:

● Transaction Identifier: Generally, 1 is added after each communication to distinguish different

communication data packets.

• **Protocol**: 0x00 0x02 means ModbusTCP protocol.

• Length: Indicates the next data length in bytes.

• Register: Device address.

On the problem of users using communication protocols to organize

data in big endian and little endian:

Modbus-TCP control protocol:

1. The transaction identifier (u16) are analyzed in big endian order.

2. protocol identifier (u16) and are analyzed in big endian order.

3. length (u16) of the message head are analyzed in big endian

order.

4. The 32-bit data (fp32, int32) in the parameter are analyzed in little

endian order.

5. Integer data(u16) involving GPIO operation are analyzed in big

endian order.

Automatic reporting data analysis:

1. Integer data (16/32 bits) are analyzed in big endian order.

2. Floating-point (fp32) data is analyzed in little endian order.

Example:

Assume that the type of the variable x is int, located at address 0x100,

there is a hexadecimal number 0x12345678 (high order is 0x12, low

14

order is 0x78), and the byte order of the address range 0x100-0x103 depends on the type of machine:

### Big-endian method:

0x100	0x101	0x102	0x103	
 0x12	0x34	0x56	0x78	

#### Little-endian method:

0x100	0x101	0x102	0x103	
 0x78	0x56	0x34	0x12	

# 2.1.3. Register (Robotic Arm Control)

# 2.1.3.1 Register (General)

The following is an example of joint motion, axis angular motion, setting parameters, getting parameters, and special IO commands

	Joint	Set the	Get	Linear motion of	The operation triggered
Function	motion	maximum	cartesian	the target in the	by the position of the
		acceleratio	position	axial angle	general digital IO of the
		n of TCP		posture	control box
		motion			

Joint motion (P2P motion)					
Register23 (0x17)					
	Request				
Modbus TCP	Transaction ID	2 Bytes	u16	0x00,0x01	

Header	Protocol	2 Bytes	u16	0x00,0x02
	Length	2 Bytes	u16	0x00,0x29
	Register	1 Byte	u8	0x17
	Joint1 (J1=π/3)	4 Bytes	fp32	0x92,0x0A,0x86,0x3F
		4 Bytes	fp32	0x00,0x00,0x00,0x00
	Joint3 (J3=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Joint4 (J4=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Joint5 (J5=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00
Parameters	Joint6 (J6=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Joint7 (J7=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Parameter8(speed=20*π/180rad/s)	4 Bytes	fp32	0xC2,0xB8,0xB2,0x3E
	Parameter9 (acceleration=500*π/180rad/s²)	4 Bytes	fp32	0x58,0xA0,0x0B,0x41
	Parameter10(motion time=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Response			
Modbus TCP	Transaction ID	2 Bytes	u16	0x00,0x01
Header	Protocol	2 Bytes	u16	0x00,0x02
	Length	2 Bytes	u16	0x00,0x04
Header	Register	1 Byte	u8	0x17
D	State	1 Byte	u8	0x00
Parameters	Parameter	2 Bytes	u16	0x00,0x01

Set the maximum acceleration of TCP motion							
	Register32 (0x20)						
	Request						
Modbus TCP Header	Transaction ID	2 Bytes	u16	0x00,0x01			
	Protocol	2 Bytes	u16	0x00,0x02			
Modbus ICP Header	Length	2 Bytes	u16	0x00,0x05			
	Register	1 Byte	u8	0x20			
Parameters	Parameter1 (maxacc=1000mm/s²)	4 Bytes	fp32	0x00,0x00,0x7A,0x44			
Response							
Modbus TCP Header	Transaction ID	2 Bytes	u16	0x00,0x01			

		Protocol	2 Bytes	u16	0x00,0x02
		Length	2 Bytes	u16	0x00,0x04
		Register	1 Byte	u8	0x20
	Da wa wa at a wa	State	1 Byte	u8	0x00
Parame	Parameters	Parameter	2 Bytes	u16	0x00,0x01

Get Cartesian position								
	Register41 (0x29)							
	Request							
	Transaction ID	2 Bytes	u16	0x00,0x01				
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02				
Header	Length	2 Bytes	u16	0x00,0x01				
	Register	1 Byte	u8	0x29				
	Respons	е						
	Transaction ID	2 Bytes	u16	0x00,0x01				
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02				
Header	Length	2 Bytes	u16	0x0,0x1A				
	Register	1 Byte	u8	0x29				
	State	1 Byte	u8	0x00				
	Parameter1(x=207mm)	4 Bytes	fp32	0x00,0x00,0x4F,0x43				
	Parameter2(y=0mm)	4 Bytes	fp32	0x00,0x00,0x00,0x00				
Parameters	Parameter3(z=112mm)	4 Bytes	fp32	0x00,0x00,0xE0,0x42				
	Parameter4(roll=π)	4 Bytes	fp32	0xDB,0x0F,0x49,0x40				
	Parameter5(pitch=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00				
	Parameter6(yaw=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00				

Linear motion of the target in the axis angle posture						
	Register92 (0x5C)					
	Request					
	Transaction ID	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x27		
	Register	1 Byte	u8	0x5C		
	Parameter1(X=0mm)	4 Bytes	fp32	0x00,0x00,0x00,0x0		
Parameters	Parameter2(Y=0mm)	4 Bytes	fp32	0x00,0x00,0x00,0x0		
Parameters	Parameter3(Z=0mm)	4 Bytes	fp32	0x00,0x00,0x00,0x0		
	Parameter4(Rx=0)	4 Bytes	fp32	0x00,0x00,0x00,0x0		

	Parameter5(Ry=0)	1 Dytes	fn22	0x00,0x00,0x00,0x0
 	<u> </u>		-	
	Parameter6(Rz=2π)		-	0xDB,0x0F,0xC9,0x4
	Parameter7(speed=100mm/s)			0x00,0x00,0xC8,0x4
	Parameter8(acceleration=2000mm/s²))	4 Bytes	fp32	0x00,0x00,0xFA,0x4
	Parameter9(motion time=0)	4 Bytes	fp32	0x00,0x00,0x00,0x0
	Parameter10 (Motion coordinate system)			
	0 represents base coordinate system motion			0x00
	1 represents tool coordinate system motion	1 Byte	u8	
	Parameter11(absolute pose) If the motion coordinate system is the base			
	coordinate system			
	0 represents the given pose is an absolute			0x01
	pose	1 Byte	u8	
	1 represents the given pose is a relative			
	pose			
	(the given parameters 1-6 coordinates are			
	based on the current an offset of position)			
	Response		I	l
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x04
	Register	1 Byte	u8	0x5C
Davamantana	State	1 Byte	u8	0x00
Parameters	Parameter	2 Bytes	u16	0x00,0x01

The operation	The operation triggered by the position of the general digital IO of the control box				
	<b>Register145 (</b> 0x91 <b>)</b>				
	Request				
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length	2 Bytes	u16	0x00,0x13	
	Register	1 Byte	u8	0x91	
	Parameter1(iomum=0)	1 Byte	u8	0x00	
Parameters	Parameter2(on-off: on(1))	1 Byte	u8	0x01	
	Parameter3 (x=300)	4 Bytes	fp32	0x00,0x00,0x96,0x43	

		Parameter4 (y=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00
		Parameter5 (z=300)	4 Bytes	fp32	0x00,0x00,0x96,0x43
		Parameter6 (Tolerance radius (tol_r) =3)	4 Bytes	fp32	0x00,0x00,0x40,0x40
Response					
		Transaction ID	2 Bytes	u16	0x00,0x01
	Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
	Header	Length	2 Bytes	u16	0x00,0x02
		Register	1 Byte	u8	0x91
	Parameters	State	1 Byte	u8	0x00

### 2.1.3.2 Register (Robotic Arm Control)

#### 0~10: Public Port Section

Get version information (0x01)

Get Serial Number information (0x02)

Reload friction parameters (0x04)

Get the value of joint torque or actual current (0x05)

Get the radius of rotation of the target joint relative to the TCP (0x06)

Remotely shut down the operating system (0x0A)

#### 11~20: System State

Enable/Disable servo (System reset) (0x0B)

Motion state setting (0x0C)

Get the motion state (0x0D)

Get the number of commands in the command buffer (0x0E)

Get error and warning code (0x0F)

Clear control box error (System reset) (0x10)

Clear control box warning (0x11)

```
Setting the brake switches separately (0x12)
Setting the system motion mode (0x13)
20~30: Basic Motion
Cartesian linear motion (0x15)
Linear motion with circular arc (0x16)
P2P joint motion (0x17)
Joint motion with circular arc (0x18)
Return to zero position (0x19)
Pause commands, Commands delay (0x1A)
Linear circular motion (0x1B)
Linear motion in tool coordinate system (0x1C)
Servoj motion (0x1D)
Servo_cartesian motion (0x1E)
31~40: System Parameter Setting
Set the jerk of the cartesian space translation (0x1F)
Set the maximum acceleration of the cartesian space translation (0x20)
Set joint space jerk (0x21)
Set joint space max acceleration (0x22)
Set the offset of the robotic arm end-effector(System reset) (0x23)
End payload setting (0x24)
Set collision detection sensitivity(System reset) (0x25)
Set teaching sensitivity for teaching mode(System reset) (0x26)
```

Delete the current system configuration parameters (0x27) Save the current system configuration parameters (0x28) 41~50: Get Motion Information Get the current cartesian position of the robotic arm (0x29) Get the current joint position of the robotic arm (0x2A)Get the solution of the inverse kinematics (0x2B) Get the solution of the forward kinematics (0x2C) Check the limit of the joint space (0x2D) Set TCP speed limit in Reduced Mode (0x2F) Set Joint speed limit in Reduced Mode (0x30) Get the state of the Reduced Mode (0x31) Set the state of the Reduced Mode (0x32) 51~100: Other Robotic Arm Functions Set the gravity direction (0x33) Set the safe boundary range (0x34) Get all configurations of the Reduced Mode (0x35) Get current joint torque of the servo (0x37) Set joint range limit of Reduced Mode (0x3A) Safety boundary start switch (0x3B) Set the state of Collision Rebound (0x3C) Start/Stop trajectory record (0x3D) Save recorded trajectory (0x3E)

Load recorded trajectory (0x3F)

Playback recorded trajectory (0x40)

Get the state of recorded trajectory (0x41)

Set the joint torque (theoretical) and current of servo (0x46)

Set the offset of the user coordinate system and the base coordinate system (0x49)

Calculate the attitude offset of two given points (0x4C)

Set the self-collision detection function of the robotic arm (0x4D)

The geometric model of the end tool added when setting the self-collision detection (0x4E)

Set whether to enable the virtual robotic arm mode (0x4F)

Joint velocity control (0x51)

Cartesian velocity control (0x52)

Get the attitude represented by the axis angle attitude (0x5B)

Linear motion with axis angle attitude as target (0x5C)

Servo\_cartesian motion (axis angle) (0x5D)

101~115: Servo Module

Get the state of the current robotic arm servo (0x6A)

#### 0~10 Common Port Section

Get version information

Register: 1(0x01)

	Request					
	Transaction ID	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length	2 Bytes	u16	0x00,0x01		
	Register	1 Byte	u8	0x01		
Response						
	Transaction ID	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length	2 Bytes	u16	0x00,0x02		
	Register	1 Byte	u8	0x01		
Parameter	State	1 Byte	u8	0x00		

Get SN information						
Register: 2(0x02)						
	Reques	st				
	Transaction ID	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length	2 Bytes	u16	0x00,0x01		
	Register 1 Byte u8 0x02					
	Respon	se				
	Transaction ID	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length	2 Bytes	u16	0x00,0x02		
	Register	1 Byte	u8	0x02		
	State	1 Byte	u8	0x00		
Parameter	Parameter (String)			XI120010191B03AC1300032		
	SN of robot and control box	n Byte	n*u8	10000		

Reload friction parameters						
	Register: 4(0x04)					
	Requ	est				
	Transaction ID	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length	2 Bytes	u16	0x00,0x01		
	Register 1 Byte u8 0x04					
Response						
	Transaction ID	2 Bytes	u16	0x00,0x01		

Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x04
Parameter	State	1 Byte	u8	0x00

	Get the value of Joint torque or actual current					
	Register: 5(0x05	5)				
	Request					
	Transaction ID	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length	2 Bytes	u16	0x00,0x01		
	Register	1 Byte	u8	0x05		
	Response					
	Transaction ID	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length	2 Bytes	u16	0x00,0x03		
	Register	1 Byte	u8	0x05		
	State	1 Byte	u8	0x00		
	Parameter 1					
Parameters	(Value of theoretical joint torque)	1 Byte	u8	0x00		
	0: Value of theoretical joint torque					
	1: Value of actual current of servo					

Get the radius of rotation of the target joint relative to the TCP(0x06)						
Register: 6(0x06)						
	Reque	st				
Transaction ID 2 Bytes u16 0x00,0x01						
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length	2 Bytes	u16	0x00,0x02		
neadel	Register	1 Byte	u8	0x06		
	Parameter 1(target joint:6)	1 Byte	U8	0x06		
	Respon	se				
	Transaction ID	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Moubus ICP	Length	2 Bytes	u16	0x00,0x06		

Header	Register	1 Byte	u8	0x06
	State	1 Byte	u8	0x00
Parameter	Parameter 1 (Radius of rotation)	4 Bytes	fp32	0x00,0x00,0x00,0x00

Remote shut down the operating system						
Register10 (0x0A)						
	Reques	st .				
	Transaction ID	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length	2 Bytes	u16	0x00,0x02		
	Register	1 Byte	u8	0x0A		
	Parameter1					
Parameters	(Operation: remote shut down	1 Byte	u8	0x01		
Parameters	the operating system	i byte	uo			
	temporarily)					
	Respons	se				
	Transaction ID	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x04		
	Register	1 Byte	u8	0x0A		
Dava wa atawa	State	1 Byte	u8	0x00		
Parameters	Parameter	2 Bytes	u16	0x00,0x01		

Enable/Disable servo (System reset)						
Note: The above operations will terminate the ongoing movement of the robotic arm and clear						
the cache command	ds, which is the same as the STOI	P state.				
	Register: 11(	0x0B)				
Request						
Modbus TCP	Transaction ID	2 Bytes	u16 0x00,0x01			

Header	Protocol	2 Bytes	u16	0x00,0x02
	Length (parameter length+1)	2 Bytes	u16	0x00,0x03
	Register	1 Byte	u8	0x0B
	Joint Number(Select all joints)			
	1-7: Motor joint(1-7)	1 Byte	u8	0x08
Parameters	8: Select all joints			
Parameters	Whether to enable the servo			
	1: Enable servo	1 Byte	u8	Enable: 0x01
	0: Disable servo			Disable: 0x00
	Response	е		
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x0B
Parameters	State	1 Byte	u8	0x10

# 11~20 System State

	Motion state setting					
	Register: 12(0x0C)					
	Request					
	Transaction ID	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x02		
	Register	1 Byte	u8	0x00		
	Parameter1: Motion Sate					
Parameters	3: Suspend the current motion	1 Byte	u8	0x00		
	4: Stop all current motion (restart the system)					
	0: Enter the motion mode					
	Response					
	Transaction ID	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x02		
	Register	1 Byte	u8	0x0C		

Parameters	State	1 Byte	u8	0x00
------------	-------	--------	----	------

	Get the motion state				
	Register: 13 (0x0D)	)			
	Request				
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x01	
	Register	1 Byte	u8	0x0D	
	Response				
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x03	
	Register	1 Byte	u8	0x0D	
	State	1 Byte	u8	0x00	
	Parameter1				
	Motion state:				
	1: In motion				
	2: Sleep			0x01	
	3: Suspend				
	4: Stop				
	5: System reset				
Parameters	The user just enters the state after	1 Byte	u8		
	the mode switch or changes some				
	settings (such as TCP offset,				
	sensitivity, etc.). The above				
	operations will terminate the				
	ongoing movement of the robotic				
	arm and clear the cache commands,				
	which is the same as the STOP state.				

Get the number of commands in the command buffer			
Register: 14 (0x0E)			
Request			

	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length	2 Bytes	u16	0x00,0x01
	Register	1 Byte	u8	0x0E
	Response			
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x04
	Register	1 Byte	u8	0x0E
	State	1 Byte	u8	0x00
Parameters	Parameter1	2 Bytes	u16	0x00,0x01
	(The number of commands in the buffer)			

Get error and warning code					
	Register: 15 (0x0F)				
	Request	•			
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x01	
	Register	1 Byte	u8	0x0F	
	Respons	е			
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x04	
	Register	1 Byte	u8	0x0F	
	State	1 Byte	u8	0x00	
Parameters	Parameter1 (Error code)	1 Byte	u8	0x00	
	Parameter2 (Warning code)	1 Byte	u8	0x00	

### Clear control box error (System reset)

Note: The above operations will terminate the ongoing movement of the robotic arm and clear the cache commands, which is the same as the STOP state.

	Register: 16 (0x10)				
	Request	t			
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x01	
	Register	1 Byte	u8	0x10	
	Respons	е			
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x02	
	Register	1 Byte	u8	0x10	
Parameters	State	1 Byte	u8	0x10	

Clear control box warning					
	Register: 17 (0x11)				
	Request	t			
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x01	
	Register	1 Byte	u8	0x11	
	Respons	e			
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x02	
	Register	1 Byte	u8	0x11	
Parameters	State	1 Byte	u8	0x00	

### Setting the brake switches separately (System reset)

Note: The above operations will terminate the ongoing movement of the robotic arm and clear the cache commands, which is the same as the STOP state.

	Register: 18 (0x12)					
	Request					
	Transaction ID	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length	2 Bytes	u16	0x00,0x03		
	Register	1 Byte	u8	0x12		
	Parameter1(Select all joints)					
	Control the brakes:	1 Byte		0x08		
	1~6: Select motor joint		1 Byte	u8		
	separately					
Parameters	8: Select all joints					
	Parameter2 (Enable the brake)			0x01		
	Operation:	1 Byte	u8			
	1: Enable the brake					
	0: Release the brake					
	Response	е				
	Transaction ID	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length	2 Bytes	u16	0x00,0x02		
	Register	1 Byte	u8	0x12		
Parameters	State	1 Byte	u8	0x10		

	Setting the system motion mode (System reset)				
Note: The above o	ote: The above operations will terminate the ongoing movement of the robotic arm and clear				
the cache commar	nds, which is the same as the STOP state.				
	Register: 19 (0x13)				
	Request				
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x02	
	Register	1 Byte	u8	0x13	
	Parameter1(Position control mode)				
Parameters	Motion mode:	1 Dydo	u8		
Parameters	0: Position control mode	1 Byte	uo	0x00	
	1: servo motion mode				

	<ul><li>2: Joint teaching mode</li><li>3: Cartesian teaching mode (not yet available)</li></ul>			
	Response			
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x13
Parameters	State	1 Byte	u8	0x10

### 21~30 Basic Motion

Cartesian linear motion					
	Register21 (0x15)				
	Request	t			
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length	2 Bytes	u16	0x00,0x25	
	Register	1 Byte	u8	0x15	
	Parameter1(x=400mm)	4 Bytes	fp32	0x00,0x00,0xC8,0x43	
	Parameter2(y=0mm)	4 Bytes	fp32	0x00,0x00,0x00,0x00	
	Parameter3(z=200mm)	4 Bytes	fp32	0x00,0x00,0x48,0x43	
	Parameter4(roll=π)	4 Bytes	fp32	0xDB,0x0F,0x49,0x40	
	Parameter5(pitch=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00	
Parameters	Parameter6(yaw=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00	
	Parameter8(speed=100mm/s)	4 Bytes	fp32	0x00,0x00,0xC8,0x42	
	Parameter9				
	(acceleration=2000mm/s2)	4 Bytes	fp32	0x00,0x00,0xFA,0x44	
	=500*π/180rad/s2)				
	Parameter10(motion time=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00	
	Respons	e			
Modbus TCP	Transaction ID	2 Bytes	u16	0x00,0x01	
Header	Protocol	2 Bytes	u16	0x00,0x02	
Headel	Length	2 Bytes	u16	0x00,0x04	

	Register	1 Byte	u8	0x15
Darameters	State	1 Byte	u8	0x00
Parameters	Parameter	2 Bytes	u16	0x00,0x01

Linear motion with circular arc				
	Register: 22 (0x16)	)		
	Request			
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x29
	Register	1 Byte	u8	0x16
	Parameter1(x=400mm)	4 Bytes	fp32	0x00,0x00,0xC8,0x43
	Parameter2(y=0mm)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Parameter3(z=200mm)	4 Bytes	fp32	0x00,0x00,0x48,0x43
	Parameter4(roll=π)	4 Bytes	fp32	0xDB,0x0F,0x49,0x40
	Parameter5(pitch=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Parameter6(yaw=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00
Parameters	Parameter7	4 Bytes	fp32	0x00,0x00,0xC8,0x42
	(motion speed=100 mm/s)			
	Parameter8 (acceleration=2000mm/s²)	4 Bytes	fp32	0x00,0x00,0xFA,0x44
	Parameter9 (motion time (0))	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Parameter10	4 Bytes	fp32	0x00,0x00,0x48,0x42
	(Arc blending radius=50 mm)			
	Response		•	
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x04
	Register	1 Byte	u8	0x16
	State	1 Byte	u8	0x00
Parameters	Parameter1 (The number of commands in the buffer)	2 Bytes	u16	0x00,0x01

## P2P joint motion

Register: 23 (0x17)				
	Request			
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x29
	Register	1 Byte	u8	0x17
	Joint1 (J1= π/3)	4 Bytes	fp32	0x92,0x0A,0x86,0x3F
	Joint2 (J2=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Joint3 (J3=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Joint4 (J4=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Joint5 (J5=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00
Parameters	Joint6 (J6=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Joint7 (J7=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Parameter8(speed=20*π/180rad/s)	4 Bytes	fp32	0xC2,0xB8,0xB2,0x3E
	Parameter9	4 Bytes	fp32	0x58,0xA0,0x0B,0x41
	(acceleration500*π/180rad/s²)			
	Parameter10(motion time=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Response			
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x04
	Register	1 Byte	u8	0x17
	State	1 Byte	u8	0x00
Parameters	Parameter1	2 Bytes	u16	0x00,0x01
	(The number of commands in the buffer)			

Joint motion with circular arc					
Register: 24 (0x18)					
	Request				
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x29	
	Register	1 Byte	u8	0x18	
Parameters	Joint1 (J1= π/3)	4 Bytes	fp32	0x92,0x0A,0x86,0x3F	

	Joint2(J2=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Joint3 (J3=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Joint4 (J4=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Joint5 (J5=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Joint6 (J6=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Joint7 (J7=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Parameter8(speed=20*π/180rad/s)	4 Bytes	fp32	0xC2,0xB8,0xB2,0x3E
	Parameter9	4 Bytes	fp32	0x58,0xA0,0x0B,0x41
	(acceleration500*π/180rad/s²)			
	Parameter10	4 Bytes	fp32	0x00,0x00,0x020,0x41
	(Arc blending radius=10mm)	+ bytes	1032	
	Response			
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x04
	Register	1 Byte	u8	0x18
	State	1 Byte	u8	0x00
Parameters	Parameter1	2 Bytes	u16	0x00,0x01
	(The number of commands in the buffer)			

Return to zero position						
	Register: 25 (0x19)					
	Request					
	Transaction ID	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length (parameter length+1)	2 Bytes u	u16	0x00,0x0D		
	Register	1 Byte	u8	0x19		
	Parameter 1 (speed=50rad/s)	4 Bytes	fp32	0xDB,0x0F,0x49,0x40		
Parameters	Parameter2 (acceleration=600rad/s²)	4 Bytes	fp32	0xF3,0x66,0xDF,0x40		
	Parameter3(motion time=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00		
Response						
Modbus TCP Header	Transaction ID	2 Bytes	u16	0x00,0x01		
	Protocol	2 Bytes	u16	0x00,0x02		
	Length (parameter length+1)	2 Bytes	u16	0x00,0x04		

	Register	1 Byte	u8	0x19
	State	1 Byte	u8	0x00
Parameters	Parameter1	2 Bytes	u16	0x00,0x01
	(The number of commands in the buffer)			

Pause commands, Command delay						
Register: 26(0x1A)						
Request						
	Transaction ID	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x05		
	Register	1 Byte	u8	0x1A		
Parameters	Parameter1	4 Bytes	fp32	0x00,0x00,0x40,0x40		
Parameters	(Pause time=3s)					
	Response					
	Transaction ID	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length	2 Bytes	u16	0x00,0x04		
	Register	1 Byte	u8	0x1A		
	State	1 Byte	u8	0x00		
Parameters	Parameter1	2 Bytes	u16	0x00,0x01		
	(The number of commands in the buffer)					

Circular motion						
The motion calculates the trajectory of the space circle according to the three-point coordinates, and the three-point coordinates are (current starting point, parameter 1,						
parameter 2)						
Register: 27 (0x1B)						
Request						
	Transaction ID	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x41		
Register 1 Byte u8 0x1B						
Parameters	Parameter1(x=400mm)	4 Bytes	fp32	0x00,0x00,0xC8,0x43		

	Parameter2(y=0mm)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Parameter3(z=200mm)	4 Bytes	fp32	0x00,0x00,0x48,0x43
	Parameter4(roll=π)	4 Bytes	fp32	0xDB,0x0F,0x49,0x40
	Parameter5(pitch=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Parameter6(yaw=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Parameter7(x=400mm)	4 Bytes	fp32	0x00,0x00,0xC8,0x43
	Parameter8(y=0mm)	4 Bytes	fp32	0x00, 0x00, 0xC8, 0x42
	Parameter9(z=200mm)	4 Bytes	fp32	0x00,0x00,0x48,0x43
	Parameter10(roll=π)	4 Bytes	fp32	0xDB,0x0F,0x49,0x40
	Parameter11(pitch=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Parameter12(yaw=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Parameter13(speed=100mm/s)	4 Bytes	fp32	0x00,0x00,0xC8,0x42
	Parameter14(2000mm/s²)	4 Pytos	fn22	0x00,0x00,0xFA,0x44
	(acceleration500*π/180rad/s²)	4 Bytes	1032	
	Parameter15(motion time=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Parameter16			
	(Percentage of the length of arc in	4 Bytes	fp32	0x00,0x00,0x48,0x42
	motion to circumference=50%)			
	Response			
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x04
	Register	1 Byte	u8	0x1B
	State	1 Byte	u8	0x00
Parameters	Parameter1	2 Bytes	u16	0x00,0x01
	(The number of commands in the buffer)			
·				

Linear motion in tool coordinate system					
Move in Cartesian linear relative motion based on the current tool coordinate system.					
Register: 28 (0x1C)					
Request					
Transaction ID 2 Bytes u16 0x00,0x01					
Modbus TCP Header	Protocol	2 Bytes	u16	0x00,0x02	
	Length (parameter length+1)	2 Bytes	u16	0x00,0x25	

	Register	1 Byte	u8	0x1C
	Parameter1(x=400mm)	4 Bytes	fp32	0x00,0x00,0xC8,0x43
	Parameter2(y=0mm)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Parameter3(z=200mm)	4 Bytes	fp32	0x00,0x00,0x48,0x43
	Parameter4(roll=π)	4 Bytes	fp32	0xDB,0x0F,0x49,0x40
Parameters	Parameter5(pitch=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00
raiailleteis	Parameter6(yaw=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Parameter7(speed=20mm/s)	4 Bytes	fp32	0xC2,0xB8,0xB2,0x3E
	Parameter8	4 Bytes	es fp32	0x00,0x00,0xFA,0x44
	(acceleration=2000mm/s²)		ibaz	
	Parameter9(motion time=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Response			
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x04
	Register	1 Byte	u8	0x1C
	State	1 Byte	u8	0x00
Parameters	Parameter1 (Number of commands in the buffer)	2 Bytes	u16	0x00,0x01

Servoj motion							
Register: 29 (0x1D)							
	Request						
	Transaction ID	2 Bytes	u16	0x00,0x01			
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02			
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x29			
	Register	1 Byte	u8	0x1D			
	Joint1 (J1= π/3)	4 Bytes	fp32	0x92,0x0A,0x86,0x3F			
	Joint2 (J2=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00			
	Joint3 (J3=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00			
Parameters	Joint4 (J4=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00			
	Joint5 (J5=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00			
	Joint6 (J6=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00			
	Joint7 (J7=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00			

	Parameter8	4 Bytes	fp32	0x00,0x00,0x00,0x00
	(speed, meaningless, 0)			
	Parameter9	4 Pyrtos	fn27	0x00,0x00,0x00,0x00
	(acceleration, meaningless, 0)	4 Bytes	fp32	
	Parameter10	4 Putos	fp32	0x00,0x00,0x00,0x00
	(motion time, meaningless, 0)	4 Bytes	ıpsz	
	Response			
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x1D
Parameters	State	1 Byte	u8	0x00

Servo_cartesian motion						
Interface fo	Interface for receiving high-frequency continuous cartesian trajectory motion.					
	Register: 30 (0x1E	:)				
	Request	T				
	Transaction ID	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x25		
	Register	1 Byte	u8	0x1E		
	Parameter1(x=400mm)	4 Bytes	fp32	0x00,0x00,0xC8,0x43		
	Parameter2(y=0mm)	4 Bytes	fp32	0x00,0x00,0x00,0x00		
	Parameter3(z=200mm)	4 Bytes	fp32	0x00,0x00,0x48,0x43		
	Parameter4(roll=π)	4 Bytes	fp32	0xDB,0x0F,0x49,0x40		
	Parameter5(pitch=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00		
	Parameter6(yaw=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00		
Parameters	Parameter8	4 Bytes	fp32	0x00,0x00,0x00,0x00		
	(speed, meaningless, 0)					
	Parameter9	4 Bytes	fp32	0x00,0x00,0x00,0x00		
	(acceleration, meaningless, 0)					
	Parameter10			0x00,0x00,0x00,0x00		
	Motion coordinate system:	4 Bytes	fp32			
	0 : the base coordinate system					
	1 : the tool coordinate system					

Response				
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x1E
Parameters	State	1 Byte	u8	0x00

## 31~40 Motion Parameter Setting

	Set the jerk of the Cartesian space translation					
Register: 31 (0x1F)						
	Request					
	Transaction ID	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x05		
	Register	1 Byte	u8	0x1F		
Parameters	Parameter1 (Jerk=2000 mm/s³)	4 Bytes	fp32	0x00,0x00,0xFA,0x44		
	Response					
	Transaction ID	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length	2 Bytes	u16	0x00,0x04		
	Register	1 Byte	u8	0x1F		
	State	1 Byte	u8	0x00		
Parameters	Parameter1	2 Bytes	u16	0x00,0x01		
	(The number of commands in the buffer)					

Set the maximum acceleration of the Cartesian space translation					
	Register: 32 (0x20)				
	Request				
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x05	
	Register	1 Byte	u8	0x20	
Parameters	Parameter1	4 Bytes	fp32	0x00,0x80,0xbb,0x45	

	(Maximum acceleration=6000mm/s2)			
Response				
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x04
	Register	1 Byte	u8	0x20
	State	1 Byte	u8	0x00
Parameters	Parameter1	2 Bytes	u16	0x00,0x01
	(The number of commands in the buffer)			

Set the joint space jerk						
	Register: 33 (0x21)					
	Request					
	Transaction ID	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x05		
	Register	1 Byte	u8	0x21		
Parameters	Parameter1 (Jerk=10000rad/s³)	4 Bytes	fp32	0x00,0x40,0x1C,0x46		
	Response					
	Transaction ID	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x04		
	Register	1 Byte	u8	0x21		
	State	1 Byte	u8	0x00		
Parameters	Parameter1	2 Bytes	u16	0x00,0x01		
	(The number of commands in the buffer)					

Set joint space max acceleration				
Register: 34 (0x22)				
Request				
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x05
	Register	1 Byte	u8	0x22

Parameters	Parameter (Max acceleration=400rad/s²)	4 Bytes	fp32	0x00,0x00,0xC8,0x43	
Response					
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x04	
	Register	1 Byte	u8	0x22	
	State	1 Byte	u8	0x00	
Parameters	Parameter1 (Number of commands in the buffer)	2 Bytes	u16	0x00,0x01	

S	Set the offset of the robotic arm end-effector (System reset)				
-	perations will terminate the ongoi	_	ment of	the robotic arm and clear	
the cache comman	ds, which is the same as the STOF				
	Register: 35 (	0x23)			
	Request				
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x19	
	Register	1 Byte	u8	0x23	
	Parameter1(x=400mm)	4 Bytes	fp32	0x00,0x00,0xC8,0x43	
	Parameter2(y=0mm)	4 Bytes	fp32	0x00,0x00,0x00,0x00	
Parameters	Parameter3(z=200mm)	4 Bytes	fp32	0x00,0x00,0x48,0x43	
Parameters	Parameter4(roll=π)	4 Bytes	fp32	0xDB,0x0F,0x49,0x40	
	Parameter5(pitch=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00	
	Parameter6(yaw=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00	
	Response	2			
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x02	
	Register	1 Byte	u8	0x23	
Parameters	State	1 Byte	u8	0x10	

End payload setting				
Register: 36 (0x24)				
Request				
Modbus TCP	Transaction ID	2 Bytes	u16	0x00,0x01
Header	Protocol	2 Bytes	u16	0x00,0x02

	Length	2 Bytes	u16	0x00,0x11
	Register	1 Byte	u8	0x24
	Parameter1 (Payload=1kg)	4 Bytes	fp32	0x00,0x00,0x80,0x3F
	Parameter2 (Payload center of mass X=400mm)	4 Bytes	fp32	0x00,0x00,0xC8,0x43
Parameters	Parameter3 (Payload center of mass Y=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Parameter4 (Payload center of mass Z=200mm)	4 Bytes	fp32	0x00,0x00,0x48,0x43
	Response			
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x24
Parameters	State	1 Byte	u8	0x00

Set collision detection sensitivity (System reset)  Note: The above operations will terminate the ongoing movement of the robotic arm and clear the cache commands, which is the same as the STOP state.				
	Register: 37(	(0x25)		
	Request	t		
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x25
Parameters	Parameter1 (Detect sensitivity=4)	1 Byte	u8	0x04
	Respons	e		
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x25
Parameters	State	1 Byte	u8	0x10

Set teaching sensitivity for teaching mode (System reset)				
Note: The above operations will terminate the ongoing movement of the robotic arm and clear				
the cache commands, which is the same as the STOP state.				
Register: 38(0x26)				
Request				
Modbus TCP	Transaction ID	2 Bytes	u16	0x00,0x01

Header	Protocol	2 Bytes	u16	0x00,0x02
	Length (parameter length+1)	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x26
Parameters	Parameter1 (Teach sensitivity=4)	1 Byte	u8	0x04
	Respons	е		
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x26
Parameters	State	1 Byte	u8	0x10

Delete the current system configuration parameters					
	Register: 39 (0x27)				
	Request	-			
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x01	
	Register	1 Byte	u8	0x27	
	Respons	e			
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x02	
	Register	1 Byte	u8	0x27	
Parameters	State	1 Byte	u8	0x00	

Save the current system configuration parameters				
	Register: 40	(0x28)		
	Request	t		
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x01
	Register	1 Byte	u8	0x28
	Respons	e		
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x28
Parameters	State	1 Byte	u8	0x00

## 41~50 Get Motion Information

	Get the current Cartesian position of the robotic arm				
	Register41 (0	)x29)			
	Request				
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x01	
	Register	1 Byte	u8	0x29	
	Respons	e			
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length (parameter length+1)	2 Bytes	u16	0x0,0x1A	
	Register	1 Byte	u8	0x29	
	State	1 Byte	u8	0x00	
	Parameter1(x=207mm)	4 Bytes	fp32	0x00,0x00,0x4F,0x43	
	Parameter2(y=0mm)	4 Bytes	fp32	0x00,0x00,0x00,0x00	
Parameters	Parameter3(z=112mm)	4 Bytes	fp32	0x00,0x00,0xE0,0x42	
	Parameter4(roll=π)	4 Bytes	fp32	0xDB,0x0F,0x49,0x40	
	Parameter5(pitch=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00	
	Parameter6(yaw=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00	

	Get the current joint position of the robotic arm				
	Register: 42 (0x2A)				
	Request	t			
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x01	
	Register	1 Byte	u8	0x2A	
	Respons	e			
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x1E	
	Register	1 Byte	u8	0x2A	
	State	1 Byte	u8	0x00	
	joint1 (J1=π/3)	4 Bytes	fp32	0x92,0x0A,0x86,0x3F	
Parameters	joint2 (J2=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00	
Parameters	joint3 (J3=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00	
	joint4 (J4=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00	
	joint5 (J5=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00	

joint6 (J6=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00
joint7 (J7=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00

	Get the solution of the inverse kinematics					
	Register: 43 (0x2B)					
	Request					
	Transaction ID	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x19		
	Register	1 Byte	u8	0x2B		
	Parameter1(x=400mm)	4 Bytes	fp32	0x00,0x00,0xC8,0x43		
	Parameter2(y=0mm)	4 Bytes	fp32	0x00,0x00,0x00,0x00		
Darameters	Parameter3(z=200mm)	4 Bytes	fp32	0x00,0x00,0x48,0x43		
Parameters	Parameter4(roll=π)	4 Bytes	fp32	0xDB,0x0F,0x49,0x40		
	Parameter5(pitch=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00		
	Parameter6(yaw=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00		
	Respons	e				
	Transaction ID	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x1E		
	Register	1 Byte	u8	0x2B		
	State	1 Byte	u8	0x00		
	joint1 (J <sub>1</sub> = 0)	4 Bytes	fp32	0x00,0x00,0x00,0x00		
	joint2 (J <sub>2</sub> =0.081803)	4 Bytes	fp32	0x38,0x88,0xA7,0x3D		
Darameters	joint3 (J₃=-0.641152)	4 Bytes	fp32	0x88,0x22,0x24,0xBF		
Parameters	joint4 (J <sub>4</sub> =0)	4 Bytes	fp32	0x00,0x00,0x00,0x00		
	joint5 (J₅=0.559349)	4 Bytes	fp32	0x81,0x31,0x0F,0x3F		
	joint6 (J <sub>6</sub> =0)	4 Bytes	fp32	0x00,0x00,0x00,0x00		
	joint7 (J <sub>7</sub> =0)	4 Bytes	fp32	0x00,0x00,0x00,0x00		

Get the solution of the forward kinematics					
	Register: 44 (0x2C)				
	Request				
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x1D	
	Register	1 Byte	u8	0x2C	
	joint1 (J1= π/3)	4 Bytes	fp32	0x92,0x0A,0x86,0x3F	
Parameters	joint2 (J2=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00	
	joint3 (J3=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00	

	joint4 (J4=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00		
	joint5 (J5=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00		
	joint6 (J6=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00		
	joint7 (J7=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00		
Response						
	Transaction ID	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x1A		
	Register	1 Byte	u8	0x2C		
	State	1 Byte	u8	0x00		
	Parameter1(x=103.5mm)	4 Bytes	fp32	0x18,0x00,0xCF,0x42		
	Parameter2(y=179.27mm)	4 Bytes	fp32	0x80,0x44,0x33,0x43		
Parameters	Parameter3(z=112mm)	4 Bytes	fp32	0x08,0x01,0xA0,0x42		
	Parameter4(roll=-π)	4 Bytes	fp32	0xDB,0x0F,0x49,0xC0		
	Parameter5(pitch=-0)	4 Bytes	fp32	0x00,0x00,0x00,0x80		
	Parameter6(yaw=-π/3)	4 Bytes	fp32	0x92,0x0A,0x86,0x3F		

	Check the limit of joint space				
	Register: 45 (0x2D)				
	Request	:			
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x1D	
	Register	1 Byte	u8	0x2D	
	joint1 (J1=π/3)	4 Bytes	fp32	0x92,0x0A,0x86,0x3F	
	joint2 (J2=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00	
	joint3 (J3=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00	
Parameters	joint4 (J4=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00	
	joint5 (J5=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00	
	joint6 (J6=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00	
	joint7 (J7=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00	
	Respons	e			
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x03	
	Register	1 Byte	u8	0x2D	
Parameters	State	1 Byte	u8	0x00	

Parameter1 Search result: 1 : Collision occurs 0 : No collision occurs	1 Byte	u8	0x00
---	--------	----	------

Set TCP speed limit in Reduced Mode				
Register: 47 (0x2F)				
	Request			
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP Header	Protocol	2 Bytes	u16	0x00,0x02
Moubus ICP Headel	Length (parameter length+1)	2 Bytes	u16	0x00,0x05
	Register	1 Byte	u8	0x2F
Parameters	Parameter 1 (max TCP speed=400mm/s)	4 Bytes	fp32	0x00,0x00,0xC8,0x43
	Response	!		
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP Header	Protocol	2 Bytes	u16	0x00,0x02
	Length (parameter length+1)	2 Bytes	u16	0x00,0x04
	Register	1 Byte	u8	0x2F
Parameters	State	1 Byte	u8	0x00

Set Joint speed limit in Reduced Mode					
Register: 48 (0x30)					
	Request				
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP Header	Protocol	2 Bytes	u16	0x00,0x02	
Moubus ICP Headel	Length (parameter length+1)	2 Bytes	u16	0x00,0x05	
	Register	1 Byte	u8	0x30	
Parameters	Parameter 1 (max joint speed=1.0 rad/s)	4 Bytes	fp32	0x00,0x00,0x80,0x3F	
	Response	9			
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP Header	Protocol	2 Bytes	u16	0x00,0x02	
	Length (parameter length+1)	2 Bytes	u16	0x00,0x04	
	Register	1 Byte	u8	0x30	
Parameters	State	1 Byte	u8	0x00	

	Get the state of the Reduced Mode				
	Register: 49	(0x31)			
	Request	t			
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x01	
	Register	1 Byte	u8	0x31	
	Response				
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x03	
	Register	1 Byte	u8	0x31	
	State	1 Byte	u8	0x00	
Parameters	Parameter 1 0 - OFF; 1 - ON	1 Byte	u8	0x00	

	Set the state of the Reduced Mode			
	Register: 50	(0x32)		
	Request	t		
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x32
Parameters	Parameter 1 0: turn off Reduced Mode 1: turn on Reduced Mode	1 Byte	u8	0x00
	Respons	е		
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x32
Parameters	State	1 Byte	u8	0x00

## 51~100 Other Robotic Arm Function

#### Set the gravity direction

Set the gravity direction for correct torque compensation and collision detection. After modification, it shall call the save\_conf () function or refer to Register: 40(0x28) to save the setting, otherwise it will be invalid after the next restart.

	Register: 51 (0x33)					
	Request					
	Transaction ID	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x0D		
	Register	1 Byte	u8	0x33		
	Parameter1 Gravity direction vector X=0 (base coordinate system)	4 Bytes	fp32	0x00,0x00,0x00,0x00		
Parameters	Parameter2 Gravity direction vector Y=0 (base coordinate system)	4 Bytes	fp32	0x00,0x00,0x00,0x00		
	Parameter3 Gravity direction vector Z=-1 (base coordinate system)	4 Bytes	fp32	0x00,0x00,0x80,0xBF		
	Respons	e				
	Transaction ID	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x02		
	Register	1 Byte	u8	0x33		
Parameters	State	1 Byte	u8	0x00		

#### Set the safe boundary range

C35 Set the boundary range of the safety fence in the three-dimensional space. If TCP of the robotic arm exceeds this boundary, error C35of the Control Box will be triggered.

Register: 52 (0x34)				
Request				
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP Header	Protocol	2 Bytes	u16	0x00,0x02
	Length (parameter length+1)	2 Bytes	u16	0x00,0x19
	Register	1 Byte	u8	0x34

	Parameter1 Cartesian boundary value x+=600mm	4 Bytes	int32	0x58,0x02,0x00,0x00
	Parameter2 Cartesian boundary value x-=200mm	4 Bytes	int32	0xC8,0x00,0x00,0x00
	Parameter3 Cartesian boundary value y+ =500mm	4 Bytes	int32	0xF4,0x01,0x00,0x00
Parameters	Parameter4 Cartesian boundary value y- =100mm	4 Bytes	int32	0x64,0x00,0x00,0x00
	Parameter5 Cartesian boundary value z+=600mm	4 Bytes	int32	0x58,0x02,0x00,0x00
	Parameter6 Cartesian boundary value z-=200mm	4 Bytes	int32	0xC8,0x00,0x00,0x00
	Response			_
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP Header	Protocol	2 Bytes	u16	0x00,0x02
	Length (parameter length+1)	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x34
Parameters	State	1 Byte	u8	0x00

Get all configurations of the Reduced Mode					
	Register: 53 (0	x35)			
	Request				
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x01	
	Register	1 Byte	u8	0x35	
	Response				
Modbus TCP	Transaction ID	2 Bytes	u16	0x00,0x01	
Header	Protocol	2 Bytes	u16	0x00,0x02	

	Length (parameter length+1)	2 Bytes	u16	0x00,0x51
	Register	1 Byte	u8	0x35
	State	1 Byte	u8	0x00
	Parameter 1 (The state of Reduce mode: 0-OFF; 1-ON)	1 Byte	u8	0x00
	Parameters 2~7 Safety Boundary: [x_max, x_min, y_max, y_min, z_max, z_min] Unit:mm	2 Bytes*6	int16	
	Parameter 8 (max TCP speed=100mm/s)	4 Bytes	fp32	0x00,0x00, 0xC8,0x42
Parameters	Parameter 9 (max Joint speed=3.14 rad/s)	4 Bytes	fp32	0xC2,0xF5, 0x48,0x40
	Parameters 10~23 Joint range: [J1_min, J1_max,, J7_min, J7_max]	4 Bytes*14	fp32	
	Parameter 24 (The state of Safety Boundary: 0- OFF; 1-ON)	1 Byte	u8	0x00
	Parameter 25 (The state of Collision Rebound: 0- OFF; 1-ON)	1 Byte	u8	0x00

Get current joint torque of the servo Estimate the joint torque based on current and theoretical model, which is for reference only.				
	Register: 55 (0x3 Request	97)		
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x01
	Register	1 Byte	u8	0x37
	Response			
Modbus TCP Header	Transaction ID	2 Bytes	u16	0x00,0x01
	Protocol	2 Bytes	u16	0x00,0x02
, ricader	Length	2 Bytes	u16	0x00,0x1E

_				
	Register	1 Byte	u8	0x37
	State	1 Byte	u8	0x00
	Parameter1 (Theoretical torque of joint1=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Parameter2 (Theoretical torque of joint2= -13.7 N.m)	4 Bytes	fp32	0x2A,0xC5,0x5B,0xC1
	Parameter3 (Theoretical torque of joint3= -6.17 N.m)	4 Bytes	fp32	0x79,0xA4,0xC5,0xC0
Parameters	Parameter4 (Theoretical torque of joint4=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Parameter5 (Theoretical torque of joint5=-1.83N.m)	4 Bytes	fp32	0x87,0xA3,0xE9,0xBF
	Parameter6 (Theoretical torque of joint6=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Parameter7 (Theoretical torque of joint7=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00

Set Joint Range Limit of Reduced Mode				
	Register: 58	(0x3A)		
	Reques	st		
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x39
	Register	1 Byte	u8	0x3A
	Parameter 1, 2 (J1_min = -3.14rad, J1_max = 3.14rad)	4 Bytes*2	fp32	0xC2,0xF5,0x48,0xC0; 0xC2,0xF5,0x48,0x40
Parameters	Parameter 3, 4 (J2_min = -2.05rad, J2_max = 20.9rad)	4 Bytes*2	fp32	0x33,0x33,0x03,0xC0; 0x8F,0xC2,0x05,0x40
	Parameter 5, 6 (J3_min = -3.14rad, J3_max = 3.14rad)	4 Bytes*2	fp32	0xC2,0xF5,0x48,0xC0; 0xC2,0xF5,0x48,0x40

_				
	Parameter 7, 8 (J4_min = -0.19rad, J4_max = 3.92rad)	4 Bytes*2	fp32	0x5C,0x8F,0x42,0xBE; 0x47,0xE1,0x7A,0x40
	Parameter 9, 10 (J5_min = -3.14rad, J5_max = 3.14rad)	4 Bytes*2	fp32	0xC2,0xF5,0x48,0xC0; 0xC2,0xF5,0x48,0x40
	Parameter 11, 12 (J6_min = -1.69rad, J6_max = 3.14rad)	4 Bytes*2	fp32	0xEB,0x51,0xD8,0xBF; 0xC8,0x00,0x00,0x00
	Parameter 13, 14 (J7_min = -3.14rad, J7_max = 3.14rad)	4 Bytes*2	fp32	0xC2,0xF5,0x48,0xC0; 0xC2,0xF5,0x48,0x40
	Respons	se		
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x3A
Parameters	State	1 Byte	u8	0x00

## Safety boundary start switch

Set the safety fence boundary validation switch in three-dimensional space. If the TCP of the robotic arm exceeds this boundary after validation, error C35 of the Control Box will be triggered.

	Register: 59 (0x3B)				
	Request				
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x02	
	Register	1 Byte	u8	0x3B	
Parameters	Parameter1 Validation switch 0: Turn off safety boundary detection 1: Turn on safety boundary detection	1 Byte	u8	0x00	
	Respons	e			
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x02	
	Register	1 Byte	u8	0x3B	
Parameters	State	1 Byte	u8	0x00	

Set the state of Collision Rebound				
	Register: 60	(0x3C)		
	Reques	t		
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x3C
Parameters	Parameter 1 (Collision Rebound switch 0-OFF; 1-ON)	1 Byte	u8	0x00
	Respons	se		
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x3C
Parameters	State	1 Byte	u8	0x00

Start/Stop trajectory record				
	Register: 61	(0x3D)		
	Reques	t		
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x3D
Parameters	Parameter 1 (0-Stop trajectory record, 1-start trajectory record)	1 Byte	u8	0x00
	Respons	se		
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x3D
Parameters	State	1 Byte	u8	0x00

Save recorded trajectory	
Register: 62 (0x3E)	

	Request				
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x0A	
	Register	1 Byte	u8	0x3E	
Parameters	Parameter 1 Trajectory name (max length:80 Bytes) e. g. test.traj	n Byte	u8	0x74,0x65,0x73,0x74,0x2E ,0x74,0x72,0x61,0x6A	
	Respons	se			
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x02	
	Register	1 Byte	u8	0x3E	
Parameters	State	1 Byte	u8	0x00	

Load recorded trajectory				
	Register: 63	(0x3F)		
	Reques	t		
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x0A
	Register	1 Byte	u8	0x3F
Parameters	Parameter 1 Trajectory name (max length:80 Bytes) e. g. test.traj	n Byte	u8	0x74,0x65,0x73,0x74,0x2E ,0x74,0x72,0x61,0x6A
	Respons	se		
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x3F
Parameters	State	1 Byte	u8	0x00

Playback recorded trajectory				
	Register: 64 (0x40)			
	Request			
Modbus TCP	Transaction ID	2 Bytes	u16	0x00,0x01
Header	Protocol	2 Bytes	u16	0x00,0x02

	Length (parameter length+1)	2 Bytes	u16	0x00,0x09
	Register	1 Byte	u8	0x40
	Parameter 1 Cycles of playback	4 Bytes	u32	0x00,0x00, 0x00,0x01
Parameters	Parameter 2 Playback speed 1: 1multiple 2: 2multiple 4: 4multiple	4 Bytes	u32	0x00,0x00, 0x00,0x01
	Respons	se		
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x40
Parameters	State	1 Byte	u8	0x00

Get the state of recorded trajectory				
	Register: 65	(0x41)		
	Reques	t		
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x01
	Register	1 Byte	u8	0x41
	Respons	se		
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x03
	Register	1 Byte	u8	0x41
	State	1 Byte	u8	0x00
Parameters	Parameter 1 0: no read/write 1: loading 2: load success 3: load failed 4: saving 5: save success 6: save failed	1 Byte	u8	0x00

Set the joint torque (theoretical) and current of servo correspond to the contents of reporting port 60~87 Bytes				
	Register: 70 (0x46)			
	Request			
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x46
Parameters	Parameter1 (value of theoretical joint torque) 0: value of theoretical joint torque, unit : Nm 1: value of actual current of servo, unit : A	1 Byte	u8	0x00
	Response			
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x46
Parameters	State	1 Byte	u8	0x00

Sets the offset of the user coordinate system and the base coordinate system

Sets the offset of the user coordinate system and the base coordinate system, specifically the offset described by the base coordinate system of the robotic arm under the user-defined coordinate system

Register: 73 (0x49)							
	Request						
	Transaction ID	2 Bytes	u16	0x00,0x01			
Modbus TCP Header	Protocol	2 Bytes	u16	0x00,0x02			
Moubus ICP Headel	Length (parameter length+1)	2 Bytes	u16	0x00,0x19			
	Register	1 Byte	u8	0x49			
Parameters	Parameter1 (Cartesian offset X=400mm)	4 Bytes	fp32	0x00,0x00,0xC8,0x43			
	Parameter2 (Cartesian offset Y=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00			
	Parameter3 (Cartesian offset Z=200mm)	4 Bytes	fp32	0x00,0x00,0x48,0x43			
	Parameter4 (Cartesian offset Roll=πrad)	4 Bytes	fp32	0xDB,0x0F,0x49,0x40			

	Parameter5 (Cartesian offset Pitch=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00	
	Parameter6 (Cartesian offset Yaw=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00	
Response					
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP Header	Protocol	2 Bytes	u16	0x00,0x02	
Modbus ICP Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x02	
	Register	1 Byte	u8	0x49	
Parameters	State	1 Byte	u8	0x00	

Calculate the attitude offset of two given points Given two coordinate points of the robotic arm, the offset coordinate between them can be calculated.					
		Register: 76 (	0x4C)		
		Request	:		
		Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP		Protocol	2 Bytes	u16	0x00,0x02
Header	Length	n (parameter length+1)	2 Bytes	u16	0x00,0x33
		Register	1 Byte	u8	0x4C
		Parameter1 (X=400)			0x00,0x00,0xC8,0x43
		Parameter2 (Y=0)			0x00,0x00,0x00,0x00
	Point1	Parameter3 (Z=200)		( 2244	0x00,0x00,0x48,0x43
	j	Parameter4 (Roll=π)	4 Bytes*6	fp32*6	0xDB,0x0F,0x49,0x40
	Ì	Parameter5 (Pitch=0)	ĺ		0x00,0x00,0x00,0x00
	j	Parameter6 (Yaw=0)	ĺ		0x00,0x00,0x00,0x00
		Parameter7 (X=400)		fp32*6	0x00,0x00,0xC8,0x43
	j	Parameter8 (Y=0)			0x00,0x00,0x00,0x00
	Point2	Parameter9 (Z=100)			0x00,0x00,0xC8,0x42
Parameters	İ	Parameter10 (Roll=π)	4 Bytes*6		0xDB,0x0F,0x49,0x40
	İ	Parameter11 (Pitch=0)	ĺ		0x00,0x00,0x00,0x00
		Parameter12 (Yaw=0)			0x00,0x00,0x00,0x00
	Repres 0 : R	rameter13 (RPY) entation of input pose: PY (Roll,Pitch,Yaw) ital angle (Rx,Ry,Rz)	1 Byte	u8	0x00
	Represe 0 : R	rameter14 (RPY) entation of output pose: PY (Roll,Pitch,Yaw) kial angle (Rx,Ry,Rz)	1 Byte	u8	0x00
		Respons	e		
Modbus TCP		Transaction ID	2 Bytes	u16	0x00,0x01

Header	Protocol	2 Bytes	u16	0x00,0x02
	Length (parameter length+1)	2 Bytes	u16	0x00,0x1A
	Register	1 Byte	u8	0x4C
	State	1 Byte	u8	0x00
	Parameter1 (Cartesian offset X=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Parameter1 (Cartesian offset Y=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00
Parameters	Parameter1 (Cartesian offset Z=-100mm)	4 Bytes	fp32	0x00, 0x00, 0xC8, 0xC2
	Parameter1 (Cartesian offset Roll=-0)	4 Bytes	fp32	0x00, 0x00, 0x80, 0x99
	Parameter1 (Cartesian offset Pitch=-0)	4 Bytes	fp32	0x00, 0x00, 0x00, 0x80
	Parameter1 (Cartesian offset Yaw=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00

Set the self-collision detection function of the robotic arm (/the end tools)				
	Register: 77 (0x4D)			
	Request			
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x4D
Parameters	Parameter 1 (turn on self-collision detection) 0: turn off self-collision detection 1: turn on self-collision detection	1 Byte	u8	0x01
	Response			
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x4D
Parameters	State	1 Byte	u8	0x00

The geometric model of the end tool added when setting the self-collision detection

	Register: 78 (0)	x4E)		
	Request			
	Transaction ID	2 Bytes	u16	0x00,0x01
	Protocol	2 Bytes	u16	0x00,0x02
Modbus TCP Header	Length	2 Bytes	u16	0x00,0x0E ( <b>2+x*4)</b>
	Register	1 Byte	u8	0x4E
Parameters	Parameter 1 (The end tool is a cuboid)	12Bytes (x*4 Byte)	3*fp32 (x*fp32)	0x00,0x00,0xA0,0x 0x00,0x00,0xF0,0x 0x00,0x00,0x48,0x
	(end tool type number = 22)  End tool type number:  1) Custom detection models (additional parameters are required):  Cylinder: 21 Cuboid: 22 2) Supported detection models (no need to define additional parameters):	1 Byte	u8	0x16

	xArm vacuum gripper: 2 xArm BIO gripper: 3 Robotiq 2F-85 gripper: 4 Robotiq 2F-140 gripper: 5			
	Response			
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x4E
Parameters	State	1 Byte	u8	0x00

Set whether to enable the virtual robotic arm mode  If you enter the virtual robotic arm mode, the real robotic arm will not move, but the reported position of the robotic arm will change with the command to drive the virtual robotic arm to move.  Register: 79 (0x4F)				
	Request			
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x4F
Parameters	Parameter 1 (the virtual robotic arm mode) 0: the real robotic arm mode 1: the virtual robotic arm mode	1 Byte	u8	0x01
	Response			
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x4F
Parameters	State	1 Byte	u8	0x00

Joint velocity control Set joint target speed, for Joint speed control mode-mode 4				
	Register: 81 (0x51)			
	Request			
Modbus TCP	Transaction ID	2 Bytes	u16	0x00,0x01
Header	Protocol	2 Bytes	u16	0x00,0x02

	Length	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x51
	Parameter 1 (Joint 1 target speed: π/6 rad/s)	4 Bytes	fp32	0x91,0x0A,0x06,0x3F
	Parameter 2 (Joint 2 target speed: -0.1 rad/s)	4 Bytes	fp32	0xCC,0xCC,0xCC,0xBD
	Parameter 3 (Joint 3 target speed: 0 rad/s)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Parameter4 (Joint 4 target speed: 0 rad/s)	4 Bytes	fp32	0x00,0x00,0x00,0x00
Parameters	Parameter 5 (Joint 5 target speed: 0 rad/s)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Parameter 6 (Joint 6 target speed: 0 rad/s)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Parameter7 (Joint 7 target speed: 0 rad/s)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Parameter 8 (whether all joints accelerate and decelerate synchronously: 1-True)	1 Byte	u8	0x01
	Parameter 9 (duration: 0.2s)	4 Bytes	fp32	0xCC,0XCC,0x4C,0x3E
	Response			
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP Header	Protocol	2 Bytes	u16	0x00,0x02
	Length	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x51
Parameters	State	1 Byte	u8	0x00

Cartesian velocity control Set target cartesian linear velocity and angular velocity, for cartesian velocity control mode-mode 5					
Register: 82 (0x52)					
	Request				
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP Header	Protocol	2 Bytes	u16	0x00,0x02	
	Length	2 Bytes	u16	0x00,0x1E	

	Register	1 Byte	u8	0x52
	Parameter 1 (Cartesian linear velocity: Vx = 30 mm/s)	4 Bytes	fp32	0x00,0x00,0xF0,0x41
	Parameter 2 (Cartesian linear velocity: Vy = 0 mm/s)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Parameter 3 (Cartesian linear velocity: Vz = 20 mm/s)	4 Bytes	fp32	0x00,0x00,0xA0,0x41
Darameters	Parameter 4 (Cartesian angular velocity: $\omega x = \pi$ /6 rad/s)	4 Bytes	fp32	0x91,0x0A,0x06,0x3F
Parameters	Parameter 5 (Cartesian angular velocity: ωy= 0 rad/s)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Parameter 6 (Cartesian angular velocity $\omega z = 0$ rad/s)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Parameter 7 (is tool coordinate or not: 0-base coordinate)	1 Bytes	u8	0x00
	Parameter 8 (duration: 0.2s)	4 Bytes	fp32	0xCC,0XCC,0x4C,0x3E
	Response			
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x52
Parameters	State	1 Byte	u8	0x00

Get the attitude represented by the axis angle attitude Get the current TCP pose, and use the axial angle to represent the pose of the robotic arm.						
Register: 91 (0x5B)						
Request						

Request					
Modbus TCP Header	Transaction ID	2 Bytes	u16	0x00,0x01	
	Protocol	2 Bytes	u16	0x00,0x02	
	Length (parameter length+1)	2 Bytes	u16	0x00,0x01	
	Register	1 Byte	u8	0x5B	

	Response			
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x1A
	Register	1 Byte	u8	0x5B
	State	1 Byte	u8	0x00
	Parameter1 (Current Cartesian coordinate X=300mm)	4 Bytes	fp32	0x00,0x00,0x96,0x43
	Parameter2 (Current Cartesian coordinate Y=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00
Parameters	Parameter3 (Current Cartesian coordinate Z=150mm)	4 Bytes	fp32	0x00,0x00,0x16,0x43
	Parameter4 (Current Cartesian coordinate Rx=π rad)	4 Bytes	fp32	0xDB,0x0F,0x49,0x40
	Parameter5 (Current Cartesian coordinate Ry=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00
	Parameter6 (Current Cartesian coordinate Rz=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00

## Linear motion with axis angle attitude as target

When planning a linear motion, the target pose is expressed in terms of axial angles, which supports the absolute target pose/relative target pose, as well as the motion options of the base coordinate system/tool coordinate system.

Register: 92 (0x5C)					
	Request				
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x27	
	Register	1 Byte	u8	0x5C	
	Parameter1 (X=300mm)	4 Bytes	fp32	0x00, 0x00, 0x96,	
	Parameter2 (Y=0)	4 Bytes	fp32	0x00, 0x00, 0x00,	
Parameters	Parameter3 (Z=150mm)	4 Bytes	fp32	0x00, 0x00, 0x16,	
	Parameter4 (Rx=π rad)	4 Bytes	fp32	0xDB, 0x0F, 0x49,	
	Parameter5(Ry=0)	4 Bytes	fp32	0x00, 0x00, 0x00,	

	Parameter6 (Rz=0)	4 Bytes	fp32	0x00, 0x00, 0x00,
	Parameter7(motion speed=200 mm/s)	4 Bytes	fp32	0x00, 0x00, 0x48,
	Parameter8 (acceleration=2000mm/s²)	4 Bytes	fp32	0x00, 0x00, 0xFA,
	Parameter9(motion time, 0)	4 Bytes	fp32	0x00, 0x00, 0x00,
	Parameter10 (base coordinate system motion) Motion coordinate system: 0: the base coordinate system motion 1: the tool coordinate system motion	1 Byte	u8	0x00
	Parameter11 (absolute pose) If the motion coordinate system is the base coordinate system. 0 represents the given pose is an absolute pose 1 represents the given pose is a relative pose (the given parameters 1-6 coordinates are based on the current an offset of position)	1 Byte	u8	0x00
	Response			
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x04
	Register	1 Byte	u8	0x5C
Parameters	Parameter1 ( Number of commands in the buffer )	2 Bytes	u16	0x00, 0x01

Servo_cartesian motion (axis angle) An interface for receiving high-frequency continuous Cartesian trajectory motion, and the posture is represented by the axis angle.					
	Register: 93 (0x5D)				
	Request				
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x26	
	Register	1 Byte	u8	0x5D	
	Parameter1 (X=300mm)	4 Bytes	fp32	0x00, 0x00, 0x96, 0x43	
	Parameter2(Y=0)	4 Bytes	fp32	0x00, 0x00, 0x00, 0x00	
	Parameter3 (Z=150mm)	4 Bytes	fp32	0x00, 0x00, 0x16, 0x43	
Parameters	Parameter4(Rx=πrad)	4 Bytes	fp32	0xdb, 0x0f, 0x49, 0x40	
	Parameter5(Ry=0)	4 Bytes	fp32	0x00, 0x00, 0x00, 0x00	
	Parameter6 (Rz=0)	4 Bytes	fp32	0x00, 0x00, 0x00, 0x00	
	Parameter7(motion speed=200mm/s)	4 Bytes	fp32	0x00, 0x00, 0x48, 0x43	

	Parameter8 (acceleration=2000mm/s²)	4 Pytos	fn22	0x00, 0x00, 0xFA, 0x44
		4 bytes	1032	0,00, 0,00, 0,1 A, 0,44
	Parameter9 (base coordinate system motion)  Motion coordinate system: 0: the base coordinate system motion 1: the tool coordinate system motion	4 Bytes	fp32	0x00, 0x00, 0x00, 0x00
	Parameter10 (absolute pose) If the motion coordinate system is the base coordinate system. 0 represents the given pose is an absolute pose 1 represents the given pose is a relative pose (the given parameters 1-6 coordinates are based on the current an offset of position)	1 Byte	u8	0x00
	Response			
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x5D
Parameters	State	1 Byte	u8	0x00

## 101~115 Servo Module

	Get the state of the current robotic arm servo				
	Register: 106 (0x6A)				
	Request				
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x01	
	Register	1 Byte	u8	0x6A	
	Response				
	Transaction ID	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x13	
	Register	1 Byte	u8	0x6A	
Parameters	Parameter1 (Normal) Commands execution state: 0: Normal 1: The server has error message 3: Communication fail	1 Byte	u8	0x00	
	Parameter2 (Joint1 servo state)	1 Byte	u8	0x00	
	Parameter3 (Joint1 servo error code=Normal)	1 Byte	u8	0x00	

F	Parameter4 (Joint2 servo state=Normal)	1 Byte	u8	0x00
	Parameter5 (Joint2 servo error code=Normal)	1 Byte	u8	0x00
F	Parameter6 (Joint3 servo state=Normal)	1 Byte	u8	0x00
	Parameter7 (Joint3 servo error code=Normal)	1 Byte	u8	0x00
	Parameter8 (Joint4 servo state=Normal)	1 Byte	u8	0x00
	Parameter9 (Joint4 servo error code=Normal)	1 Byte	u8	0x00
Ī	Parameter10 (Joint5 servo state=Normal)	1 Byte	u8	0x00
	Parameter11 (Joint5 servo error code=Normal)	1 Byte	u8	0x00
ŀ	Parameter12 (Joint6 servo state=Normal)	1 Byte	u8	0x00
	Parameter13 (Joint6 servo error code=Normal)	1 Byte	u8	0x00
į	Parameter14 (Joint7 servo state=Normal)	1 Byte	u8	0x00
	Parameter15 (Joint7 servo error code=Normal)	1 Byte	u8	0x00
Po	arameter16 (Gripper servo state=Normal)	1 Byte	u8	0x00
	Parameter17 (Gripper servo error code=Normal)	1 Byte	u8	0x00

## 2.1.4. Register (Peripherals Control through Robot IOs)

## 124: Gripper Module

Enable/Disable the gripper (0x7C)

Set the gripper mode (0x7C)

Set the gripper speed (0x7C)

Set the gripper position (0x7C)

Get the gripper position (0x7C)

Get the gripper error (0x7C)

Clear the gripper error (0x7C)

# 124~127: RS485 Control on the End-effector Set the end RS485 baud rate(0x7F) 127~128: IO Control on the End-effector IO control on the End-effector (0x7F) Get the input of the end digital quantity (0x80) Get the input of the end analog (0x80) 130~141: IO Control on the Control Box Get configurable digital gpio input (0x83) Get analog input AI1 (0x84) Get analog input AI2 (0x85) Set configurable digital gpio output (0x86) Set the analog output AO1 (0x87) Set the analog output AO2 (0x88) Configuring digital input IO Function (0x89) Configuring digital output IO Function (0x8A) Get GPIO state (0x8B) 142~146: Special IO Commands Operation of general digital IO delay output of control box (0x8E) Operation of the end general digital IO delay output (0x8F) Operation triggered by the position of the general digital IO of the control box (0x90)

Operation triggered by the position of the end general digital IO (0x91)

Whether the control box and terminal IO are automatically cleared in the STOP state (0x92)

Operation triggered by the position of the general Analog IO of the control box (0x93)

#### 200~212: 6 Axis Force Torque Sensor

Get external force detection data of 6 Axis Force Torque Sensor (0xC8)

Enable/Disable 6 Axis Force Torque Sensor (0xC9)

Set the control mode of 6 Axis Force Torque Sensor (0xCA)

Get the control mode of 6 Axis Force Torque Sensor (0xCB)

Perform end payload identification (0xCC)

Set the payload and offset of 6 Axis Force Torque Sensor (0xCD)

Set the current state as the zero point of 6 Axis Force Torque Sensor (0xCE)

Set all impedance control parameters of 6 Axis Force Torque Sensor (0xCF)

Set PID parameter of 6 Axis Force Torque Sensor (0xD0)

Set force control parameter of 6 Axis Force Torque Sensor (0xD1)

Set MKB parameter under impedance control mode of 6 Axis Force Torque Sensor (0xD2)

Set impedance control parameter of 6 Axis Force Torque Sensor (0xD3)

Get all feedback data of 6 Axis Force Torque Sensor (0xD4)

## 124 Gripper Module

xArm Gripper fixed parameter explanation:

Parameter	Host ID	Gripper ID	Function Code
Length	1Bvte	1Bvte	1Bvte

	Fixed Value	0x09	0x08	0x10
--	-------------	------	------	------

Note:

- 1. If it is a third-party gripper, the gripper ID and function code are different from the fixed values above.
- 2. Gripper control is based on RS485 port on the end-effector.

Enable/ Disable the gripper					
	Register: 124 (0x7C)				
	Requ	est			
	Transaction Identifier	2 Bytes	0x00,0x01		
Modbus TCP Header	Protocol	2 Bytes	0x00,0x02		
Moubus TCP Header	Length	2 Bytes	0x00,0x0B		
	Register	1 Byte	0x7C		
Internal Use	Host ID	1 Byte	0x09		
	Gripper ID	1 Byte	0x08		
	Function Code	1 Byte	0x10		
Modbus RTU Data	Register Starting Address	2 Bytes	0x01,0x00		
Moubus RTO Data	Quantity of Registers	2 Bytes	0x00,0x01		
	Byte Count	1 Byte	0x02		
	Register (Enable gripper)	2 Bytes	0x00,0x01		
	Response				
	Transaction Identifier	2 Bytes	0x00,0x01		
Modbus TCP Header	Protocol	2 Bytes	0x00,0x02		
	Length	2 Bytes	0x00,0x08		
	Register	1 Byte	0x7C		
Internal Use	Host ID	1 Byte	0x09		
Madhua DTU Data	Gripper ID	1 Byte	0x08		
	Function Code	1 Byte	0x10		
Modbus RTU Data	Register Starting Address	2 Bytes	0x01,0x00		
	Quantity of Registers	2 Bytes	0x00,0x01		

Set the gripper mode  Register: 124 (0x7C)				
Request				
Modbus TCP Header	Transaction Identifier	2 Bytes	0x00,0x01	
Moubus ICP Headel	Protocol	2 Bytes	0x00,0x02	

	Length	2 Bytes	0x00,0x0B	
	Register	1 Byte	0x7C	
Internal Use	Host ID	1 Byte	0x09	
	Gripper ID	1 Byte	0x08	0x2A=slave id 42
	Function Code	1 Byte	0x10	0x06=modbus write register
	Register Starting Address	2 Bytes	0x01,0x01	0x00,0x00
	Quantity of Registers	2 Bytes	0x00,0x01	0x00,0x02
Modbus RTU Data	Byte Count	1 Byte	0x02	0x04
	Data			
	0: Position mode	2 Bytes	0x00,0x00 <b>0x</b> 0	0x00, 0x00 hex(speed),
	1: Speed mode		·	0x00, 0x00 hex(dir)
	Respo	onse		
	Transaction Identifier	2 Bytes	0x00,0x01	
Modbus TCP Header	Protocol	2 Bytes	0x00,0x02	
	Length	2 Bytes	0x00,0x08	
	Register	1 Byte	0x7C	
Internal Use	Host ID	1 Byte	0x09	
Modbus RTU Data	Gripper ID	1 Byte	0x08	
	Function Code	1 Byte	0x10	
	Register Starting Address	2 Bytes	0x01,0x00	
	Quantity of Registers	2 Bytes	0x00,0x01	

Set the gripper speed					
Register: 124 (0x7C)					
	Requ	est			
	Transaction Identifier	2 Bytes	0x00,0x01		
Modbus TCP Header	Protocol	2 Bytes	0x00,0x02		
Inodbus fer fledder	Length	2 Bytes	0x00,0x0B		
	Register	1 Byte	0x7C		
Internal Use	Host ID	1 Byte	0x09		
Modbus RTU Data	Gripper ID	1 Byte	0x08		
	Function Code	1 Byte	0x10		
	Register Starting Address	2 Bytes	0x03,0x03		
	Quantity of Registers	2 Bytes	0x00,0x01		
	Byte Count	1 Byte	0x02		
	Register				
	(Setting the speed to	2 Bytes	0x05,0xDC		
	1500r/min)				
Response					
Modbus TCP Header	Transaction Identifier	2 Bytes	0x00,0x01		

	Protocol	2 Bytes	0x00,0x02
	Length	2 Bytes	0x00,0x08
	Register	1 Byte	0x7C
Internal Use	Host ID	1 Byte	0x09
Modbus RTU Data	Gripper ID	1 Byte	0x08
	Function Code	1 Byte	0x10
	Register Starting Address	2 Bytes	0x03,0x03
	Quantity of Registers	2 Bytes	0x00,0x01

Set the gripper position				
Register: 124 (0x7C)				
	Requ	est		
	Transaction Identifier	2 Bytes	0x00,0x01	
Modbus TCP Header	Protocol	2 Bytes	0x00,0x02	
Modbas Ter Tieddel	Length	2 Bytes	0x00,0x0D	
	Register	1 Byte	0x7C	
Internal Use	Host ID	1 Byte	0x09	
	Gripper ID	1 Byte	0x08	
	Function Code	1 Byte	0x10	
	Register Starting Address	2 Bytes	0x07,0x00	
Modbus RTU Data	Quantity of Registers	2 Bytes	0x00,0x02	
	Byte Count	1 Byte	0x04	
	Register	4 Bytes	0x00,0x00,0xC8,0x43	
	(Gripper position=400)		0,000,0000,0000,000	
Response				
	Transaction Identifier	2 Bytes	0x00,0x01	
Modbus TCP Header	Protocol	2 Bytes	0x00,0x02	
	Length	2 Bytes	0x00,0x08	
	Register	1 Byte	0x7C	
Internal Use	Host ID	1 Byte	0x09	
	Gripper ID	1 Byte	0x08	
Modbus RTU Data	Function Code	1 Byte	0x10	
indubus Kio Data	Register Starting Address	2 Bytes	0x07,0x00	
	Quantity of Registers	2 Bytes	0x00,0x02	

Get the gripper position				
Register: 124 (0x7C)				
Request				
Modbus TCP Header	Transaction Identifier	2 Bytes	0x00,0x01	

	Protocol	2 Bytes	0x00,0x02
	Length	2 Bytes	0x00,0x08
	Register	1 Byte	0x7C
Internal Use	Host ID	1 Byte	0x09
	Gripper ID	1 Byte	0x08
Modbus DTU Data	Function Code	1 Byte	0x10
Modbus RTU Data	Register Starting Address	2 Bytes	0x07,0x02
	Quantity of Registers	2 Bytes	0x00,0x02
	Respo	nse	
	Transaction Identifier	2 Bytes	0x00,0x01
Madbus TCD Handay	Protocol	2 Bytes	0x00,0x02
Modbus TCP Header	Length	2 Bytes	0x00,0x08
	Register	1 Byte	0x7C
Internal Use	Host ID	1 Byte	0x09
	Gripper ID	1 Byte	0x08
Modbus DTU Data	Function Code	1 Byte	0x10
Modbus RTU Data	Register Starting Address	2 Bytes	0x07,0x02
	Quantity of Registers	2 Bytes	0x00,0x02

Get the gripper error							
	Register: 124 (0x7C)						
	Requ	est					
	Transaction Identifier	2 Bytes	0x00,0x01				
Modbus TCP	Protocol	2 Bytes	0x00,0x02				
Header	Length	2 Bytes	0x00,0x08				
	Register	1 Byte	0x7C				
Internal Use	Host ID	1 Byte	0x09				
	Gripper ID	1 Byte	0x08				
Modbus RTU Data –	Function Code	1 Byte	0x03				
	Register Starting Address	2 Bytes	0x00,0x0F				
	Quantity of Registers	2 Bytes	0x00,0x01				
	Respo	nse					
	Transaction Identifier	2 Bytes	0x00,0x01				
Modbus TCP	Protocol	2 Bytes	0x00,0x02				
Header	Length	2 Bytes	0x00,0x07				
	Register	1 Byte	0x7C				
Internal Use	Host ID	1 Byte	0x09				
	Gripper ID	1 Byte	0x08				
Modbus RTU Data	Function Code	1 Byte	0x03				
Modbus Ki o bata	Byte Count	1 Byte	0x02				
	Register Data (No Error)	2 Bytes	0x00,0x00				

Clear the gripper error							
Register: 124 (0x7C)							
	Request						
	Transaction Identifier	2 Bytes	0x00,0x01				
Modbus TCP Header	Protocol	2 Bytes	0x00,0x02				
Moubus Ter Headel	Length	2 Bytes	0x00,0x0B				
	Register	1 Byte	0x7C				
Internal Use	Host ID	1 Byte	0x09				
	Gripper ID	1 Byte	0x08				
	Function Code	1 Byte	0x10				
Modbus RTU Data	Register Starting Address	2 Bytes	0x01 0x09				
Modbus Kro Data	Quantity of Registers	2 Bytes	0x00 0x01				
	Byte Count	1 Byte	0x02				
	Register	2 Bytes	0x00 0x01				
	Respo	nse					
	Transaction Identifier	2 Bytes	0x00,0x01				
Modbus TCP Header	Protocol	2 Bytes	0x00,0x02				
inoubus rei ricudei	Length	2 Bytes	0x00,0x08				
	Register	1 Byte	0x7C				
Internal Use	Host ID	1 Byte	0x09				
	Gripper ID	1 Byte	0x08				
Modbus RTU Data	Function Code	1 Byte	0x10				
indubus Kro bata	Register Starting Address	2 Bytes	0x01,0x09				
	Quantity of Registers	2 Bytes	0x00,0x01				

### 124~127: RS485 Control on the End-effector

Set the end RS485 band rate						
Register: 127 (0x7F)						
	Request					
	Transaction Identifier	2 Bytes	u16	0x00,0x01		
Modbus TCP Header	Protocol	2 Bytes	u16	0x00,0x02		
Moubus ICF Headel	Length	2 Bytes	u16	0x00,0x08		
	Register	1 Byte	u8	0x7F		
Parameters	Host ID	1 Byte	u8	0x09		
	Address	2 Bytes	u16	0x1A,0x0B		

	Parameter1 (2000000bps) 0:4800 bps; 1:9600bps; 2:19200bps; 3:38400bps; 4:57600bps; 5:115200bps 6:230400bps; 7: 460800bps; 8:921600bps; 9: 1000000bps; 10:1500000bps; 11:2000000bps; 12:2500000bps;	4 Bytes	fp32	0x00,0x00,0x30,0x41
	Response	)		
	Transaction Identifier	2 Bytes	u16	0x00,0x01
Modbus TCP Header	Protocol	2 Bytes	u16	0x00,0x02
	Length	2 Bytes	u16	0x00,0x01
	Register	1 Byte	u8	0x7F

### 127~128: IO Control on the End-effector

IO control on the End-effector						
Register: 127 (0x7F)						
	Request					
	Transaction Identifier	Transaction Identifier 2 Bytes		0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length	2 Bytes	u16	0x00,0x08		
	Register	1 Byte	u8	0x7F		
	Host ID	1 Byte	u8	0x09		
	Address	2 Bytes	u16	0x0A,0x15		
Parameters	Parameters1(Open 0)	4 Bytes	fp32	0x00,0x80,0x80,0x43		
	Respons	е				
	Transaction Identifier	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length	2 Bytes	u16	0x00,0x02		
	Register	1 Byte	u8	0x7F		
Parameters	State	1 Byte	u8	0x00		

Get the input of the end digital quantity
Register: 128 (0x80)

	Request					
	Transaction Identifier	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length	2 Bytes	u16	0x00,0x04		
	Register	1 Byte	u8	0x80		
Parameters	Host ID	1 Byte	u8	0x09		
Parameters	Address	2 Bytes	u16	0x0A, 0x14		
	Response					
	Transaction Identifier	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length	2 Bytes	u16	0x00,0x06		
	Register	1 Byte	u8	0x80		
	State	1 Byte	u8	0x00		
Parameters	Parameters1 (0) The end byte indicates the input status. The digit of 0 corresponds to input 0 and the digit of 1 corresponds to input 1.	4 Bytes	u8*4	0x00,0x00,0x00,0x00		

Get the input of the end analog						
	Register: 128 (0x80)					
	Request	t				
	Transaction Identifier	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length	2 Bytes	u16	0x00,0x04		
	Register	1 Byte	u8	0x80		
	Host ID	1 Byte	u8	0x09		
Parameters	Address(input 0) Address 0a 16 : input 0 Address 0a 17 : input 1	2 Bytes	u16	0x0A,0x16		
	Respons	e				
	Transaction Identifier	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length	2 Bytes	u16	0x00,0x06		
	Register	1 Byte	u8	0x80		
Parameters	State	1 Byte	u8	0x00		

	Parameter1 (input1) analog input, range 0~4095, corresponding to 0~3.3V	4 Bytes	u32	0x00, 0x00, 0x07, 0x0d
--	---	---------	-----	------------------------

### 131~140 IO Control on the Control Box

	Get configurable digital GPIO input				
	Register: 131 (0x83)	)			
	Request				
	Transaction Identifier	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length	2 Bytes	u16	0x00,0x01	
	Register	1 Byte	u8	0x83	
	Response				
	Transaction Identifier	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length	2 Bytes	u16	0x00,0x04	
	Register	1 Byte	u8	0x83	
	State	1 Byte	u8	0x00	
Parameters	Parameters1 (The signal of GPIO1 is low) GPIO signal: Bit0 ~ Bit15 Correspond to signals of GPIO0~GPIO15	2 Bytes	u16	0xFF,0xFD	

Get analog input Al1						
	Register: 132 (0x84)					
	Reques	t				
	Transaction Identifier	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length	2 Bytes	u16	0x00,0x01		
	Register	1 Byte	u8	0x84		
	Respons	e				
	Transaction Identifier	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length	2 Bytes	u16	0x00,0x04		
Register 1 Byte u8 0x84						
Parameters	State	1 Byte	u8	0x00		

Parameters1 (Analog input0) Analog input0, Range 0~4095 Corresponding to0~10V	2 Bytes	u16	0x00,0x12
---	---------	-----	-----------

	Get analog input AI2				
	Register: 133 (0x85)				
	Request				
	Transaction Identifier	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length	2 Bytes	u16	0x00,0x01	
	Register	1 Byte	u8	0x85	
	Response				
	Transaction Identifier	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length	2 Bytes	u16	0x00,0x04	
	Register	1 Byte	u8	0x85	
	State	1 Byte	u8	0x00	
Parameters	Parameters1 (Analog input1) Analog input1, Range 0~4095	2 Bytes	u16		
	Corresponding to0~10V			0x00,0x15	

	Set configurable digital GPIO output				
	Register: 134 (0x86)				
	Request				
	Transaction Identifier	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length	2 Bytes	u16	0x00,0x03	
	Register	1 Byte	u8	0x86	
	Parameters1(The signal of GPIO7 is				
	low)			0x80,0x00	
Parameters	GPIO signal:	2 Bytes	u16		
	the upper 8 bits are the enable bits,				
	and the lower 8 bits are the set bits				

	Parameters2(The signal of GPIO15 is low)	2 Bytes	u16	0x80,0x00	
	GPIO signal:	2 bytes	2 bytes		
	the upper 8 bits are the enable bits,				
	and the lower 8 bits are the set bits				
	Response				
	Transaction Identifier	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length	2 Bytes	u16	0x00,0x02	
	Register	1 Byte	u8	0x86	
Parameters	State	1 Byte	u8	0x00	

Set the analog output AO1					
	Register: 135 (0x87)				
	Request				
	Transaction Identifier	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length	2 Bytes	u16	0x00,0x03	
	Register	1 Byte	u8	0x87	
	Parameters1				
	(Analog output 0 is 0)				
Parameters	Analog output0,	2 Bytes	u16	0x00,0x00	
	Range 0~4095				
	Corresponding to 0~10V				
	Response				
	Transaction Identifier	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length	2 Bytes	u16	0x00,0x02	
	Register	1 Byte	u8	0x87	
Parameters	State	1 Byte	u8	0x00	

Set the analog output AO2				
Register: 136 (0x88)				
Request				
Modbus TCP	Transaction Identifier	2 Bytes	u16	0x00,0x01
Header	Protocol	2 Bytes	u16	0x00,0x02
rieduei	Length	2 Bytes	u16	0x00,0x03

	Register	1 Byte	u8	0x88
	Parameters1			
	(Analog output 1 is 0)			
Parameters	Analog output 1,	2 Bytes	u16	0x00,0x00
	Range 0~4095			
	Corresponding to 0~10V			
	Respons	е		
	Transaction Identifier	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x88
Parameters	State	1 Byte	u8	0x00

Configure digital input IO function						
	Register: 137 (0x89)					
Request						
	Transaction Identifier	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length	2 Bytes	u16	0x00,0x03		
	Register	1 Byte	u8	0x89		
	Parameters1 (GPIO15)					
	GPIO serial number,0~7	4.5.				
	Corresponding to GPIO0 ~	1 Byte	1 Byte	i Byte	Byte u8	0x07
	GPIO7					
	Parameters2 Function number 0: General input 1: Stop moving 2: Safeguard reset 11: Offline task 12: Manual mode 13: Reduced mode 14: Enable robot	1 Byte	u8	0x00		
	Response					
Modbus TCP	Transaction Identifier	2 Bytes	u16	0x00,0x01		
1-100003 1CF	Protocol	2 Bytes	u16	0x00,0x02		

Header	Length	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x89
Parameters	State	1 Byte	u8	0x00

Configure digital output IO function						
	Register: 138 (0x8	A)				
	Request					
	Transaction Identifier	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length	2 Bytes	u16	0x00,0x03		
	Register	1 Byte	u8	0x8A		
	Parameters1(GPIO15) GPIO serial number,0~15	1 Purto	110			
	Corresponding to GPIO0 ~ GPIO15	1 Byte	u8	0x0F		
	Parameters2 (Motion stopped) Function number 0: General output 1: Motion stopped					
	2: Robot moving 11: Erroring	1.5		0x00		
	12: Warning 13: Collision 14: Manual mode 15: Offline task running 16: Reduced mode	1 Byte	u8			
	17: Robot enabled 18:Press down E stop button					
	Response					
	Transaction Identifier	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length	2 Bytes	u16	0x00,0x02		
	Register	1 Byte	u8	A8x0		
Parameters	State	1 Byte	u8	0x00		

Get GPIO state
Register: 139 (0x8B)
Request

				_		
March - 755	Transaction Identifier	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length	2 Bytes	u16	0x00,0x01		
	Register	1 Byte	u8	0x8B		
	Response	T				
	Transaction Identifier	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length	2 Bytes	u16	0x00,0x24		
	Register	1 Byte	u8	0x8B		
	State	1 Byte	u8	0x00		
	GPIO Module status					
	0: Normal	1.5.1.				
	3: Gripper has error message	1 Byte	u8	0x00		
	6: Communication failure					
	GPIO module error code		1 Byte u8			
		1 Byte		0x00		
	0: Normal			UXUU		
	Not 0: Error code					
	Digital input function IO status	2 Bytes	u16	0x01.0x00		
	Digital input configuration IO	2 Bytes	Bytes u16	0xFF,0xFD		
	status					
	Digital output function IO status	2 Bytes	u16	0x00,0x00		
Parameters	Digital output configuration IO		0xFF,0x00			
	status	2 Bytes	u16			
	Analog input 1	2 Bytes	u16	0x00,0x11		
	Analog input 2	2 Bytes	u16	0x00,0x15		
	Analog output 1	2 Bytes	u16	0x00,0x00		
	Analog output 2	2 Bytes	u16	0x00,0x00		
	Digital input 100-107			0x00,0x00,0x00,0x00,0x00,		
	configuration message	1 Byte*8	u8*8	0x00,0x00,0x00		
	Digital output IO0-IO7			0x00,0x00,0x00,0x00,0x00,		
	configuration message	1 Byte*8	u8*8	0x00,0x00,0x00		
	Digital input IO8-IO15	1 Byte*8	u8*8	0x00,0x00,0x00,0x00,0x00,		
	configuration message			0x00,0x00,0x00		
	Digital output IO8-IO15	1 Byte*8	118*A	0x00,0x00,0x00,0x00,0x00,		
	configuration message	ı Byte"8	ו סעופ"א	i byte oft	45 0	0x00,0x00,0x00

### 142~147: Special IO commands

	Operation of general digital IO delay output of control box					
Starting from the m	Starting from the moment when the command is issued, the digital output switch of the control					
box is triggered after a period of time.						
	Register142 (0x8E)					
Request						
	Transaction Identifier	2 Bytes	u16	0x00,0x01		
	Protocol	2 Bytes	u16	0x00,0x02		
	Length	2 Bytes	u16	0x00,0x07		
	Register	1 Byte	u8	0x8E		
	Parameters1(0)					
Modbus TCP Header	Digital IO port number of control box	1 Byte	u8	0x00		
	(0-7)					
	Parameters2(on)	1 Duto	u8			
	Switch value (0 is off, 1 is on)	1 Byte		0x01		
	Parameters3					
	(The time when the delay takes effect	4 Bytes	fp32	0x00,0x00,0x40,0x40		
	from the current time=3s)					
	Response					
	Transaction Identifier	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length	2 Bytes	u16	0x00,0x02		
	Register	1 Byte	u8	0x8E		
Parameters	State	1 Byte	u8	0x00		

Operation of the end general digital IO delay output Starting from the moment when the command is issued, the end digital output switch is				
	triggered after a period of t	ime.		
	Register143 (0x8F)			
	Request			
	Transaction Identifier	2 Bytes	u16	0x00,0x01
	Protocol	2 Bytes	u16	0x00,0x02
Ma alla va TCD	Length	2 Bytes	u16	0x00,0x07
Modbus TCP	Register	1 Byte	u8	0x8F
Header	Parameters1(0)			
	The end digital IO port number of	1 Byte	u8	0x00
	control box (0/1)			

	Parameters2(on)	1 Byte	u8	0x01	
	Switch value (0 is off, 1 is on)				
	Parameters3			0x00,0x00,0x40,0x40	
	(The time when the delay takes effect	4 Bytes	fp32		
	from the current time=3s)				
Response					
	Transaction Identifier	2 Bytes	u16	0x00,0x01	
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02	
Header	Length	2 Bytes	u16	0x00,0x02	
	Register	1 Byte	u8	0x8F	
Parameters	State	1 Byte	u8	0x00	

Operation triggered by the position of the general digital IO of the control box Starting from the moment when the instruction is issued, the TCP triggers the digital output switch of the control box after it reaches the specified position area, which is valid for a single time. Register144 (0x90) Request Transaction Identifier 2 Bytes u16 0x00,0x01 Protocol 2 Bytes u16 0x00,0x02 Length 2 Bytes u16 0x00,0x13 Register 1 Byte u8 0x90 Parameters1(0) IO port number of the control box: 0-7 1 Byte 0x00 u8 Parameters2(on) 0x01 1 Byte u8 Switch value (on\_off): 0 is off, 1 is on 4 Bytes fp32 Parameters3 (x=400mm) 0x00,0x00,0xc8,0x43 Modbus TCP Header 0x00,0x00,0x00,0x00 Parameters4 (y=0mm) 4 Bytes fp32 Parameters5 (z=200mm) 4 Bytes fp32 0x00,0x00,0x48,0x43 Parameters6 Tolerance radius (tol\_r=50mm), when the robotic arm reaches the 0x00,0x00,0x48,0x42 specified position (the area of the 4 Bytes fp32 sphere specified by the trigger position point (x, y, z) as the center (the radius of the sphere is the tolerance radius)), trigger IO . If the

	tolerance radius is not set, when the			
	robotic arm passes the specified point			
	at a speed other than 0, it may cause a			
	missed			
Response				
	Transaction Identifier	2 Bytes	u16	0x00,0x01
Modbus TCP Header	Protocol	2 Bytes	u16	0x00,0x02
Moubus ICP Headel	Length	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x90
Parameters	State	1 Byte	u8	0x00

Oper	Operation triggered by the position of the end general digital IO				
Starting from the mo	Starting from the moment when the instruction is issued, the TCP triggers the end digital output				
switch after it	switch after it reaches the specified position area, which is valid for a single time.				
	Register145 (0x91)				
	Request	1	1		
	Transaction Identifier	2 Bytes	u16	0x00,0x01	
	Protocol	2 Bytes	u16	0x00,0x02	
	Length	2 Bytes	u16	0x00,0x13	
	Register	1 Byte	u8	0x91	
	Parameters1(0)				
	IO port number of the end: 0/1	1 Byte	u8	0x00	
	Parameters2(on)	1 Byte	u8	0x01	
	Switch value (on_off): 0 is off, 1 is on				
	Parameters3 (x=400mm)	4 Bytes	fp32	0x00,0x00,0xc8,0x43	
Modbus TCP Header	Parameters4 (y=0mm)	4 Bytes	fp32	0x00,0x00,0x00,0x00	
	Parameters5(z=200mm)	4 Bytes	fp32	0x00,0x00,0x48,0x43	
	Parameters6				
	Tolerance radius (tol_r=50mm)				
	when the robotic arm reaches the				
	specified position (the area of the				
	sphere specified by the trigger	4 Bytes	fp32		
	position point (x, y, z) as the center			0x00,0x00,0x48,0x42	
	(the radius of the sphere is the				
	tolerance radius)), trigger IO . If the				
	tolerance radius is not set, when the				
		•	•		

	robotic arm passes the specified point			
	at a speed other than 0, it may cause a			
	missed trigger because it cannot be			
	accurately detected.			
Response				
	Transaction Identifier	2 Bytes	u16	0x00,0x01
Modbus TCP Header	Protocol	2 Bytes	u16	0x00,0x02
Moubus ICF Headel	Length	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x91
Parameters	State	1 Byte	u8	0x00

S

Whether the control box and terminal IO are automatically cleared in the STOP state					
	Register146 (0x92)				
	Request	•			
	Transaction Identifier	2 Bytes	u16	0x00,0x01	
	Protocol	2 Bytes	u16	0x00,0x02	
	Length	2 Bytes	u16	0x00,0x03	
	Register	1 Byte	u8	0x92	
	Parameters1(the control box IO)				
	IO type	1 Byte	u8		
Modbus TCP Header	0 represents the control box IO			0x00	
	1 represents the end IO				
	Parameters2(on)				
	Switch value		u8		
	0 is off, the STOP status is not			0x01	
	cleared.	1 Byte			
	1 is on, and the STOP status is				
	cleared.				
Response					
	Transaction Identifier	2 Bytes	u16	0x00,0x01	
   Modbus TCP Header	Protocol	2 Bytes	u16	0x00,0x02	
Ploabas for fleader	Length	2 Bytes	u16	0x00,0x04	
	Register	1 Byte	u8	0x92	
Parameters	State	1 Byte	u8	0x00	

Parameter1	2 Bytes	u16	0x00.0x01
	,	·	0,100,0,10.

Operation triggered by the position of the general Analog IO of the control box

Starting from the moment when the command is issued, the TCP triggers the analog output switch of the control box after it reaches the specified position area, which is valid for a single time

switch of the control box after it reaches the specified position area, which is valid for a single				
time.				
	Register147 (0x93)			
	Request			
	Transaction Identifier	2 Bytes	u16	0x00,0x01
	Protocol	2 Bytes	u16	0x00,0x02
	Length	2 Bytes	u16	0x00,0x14
	Register	1 Byte	u8	0x93
	Parameters1(0)			
	IO port number of the control box:	1 Byte	u8	0x00
	0/1			
	Parameters2(on)			
	Parameters1(Analog output 0 is 0)	2 Byte	16	0x00,0x00
	Analog output 0, Range 0~4095		u16	
	Corresponding to 0~10V			
	Parameters3 (x=400mm)	4 Bytes	fp32	0x00,0x00,0xc8,0x43
	Parameters4 (y=0mm)	4 Bytes	fp32	0x00,0x00,0x00,0x00
Modbus TCP Header	Parameters5(z=200mm)	4 Bytes	fp32	0x00,0x00,0x48,0x43
	Parameters6			
	Tolerance radius (tol_r=50mm),			
	when the robotic arm reaches the			
	specified position (the area of the			
	sphere specified by the trigger			
	position point $(x, y, z)$ as the center			0x00,0x00,0x48,0x42
	(the radius of the sphere is the	4 Bytes	fp32	
	tolerance radius)), trigger IO . If the			1
	tolerance radius is not set, when the			
	robotic arm passes the specified point			
	at a speed other than 0, it may cause a			1
	missed			
	Response	<u> </u>		
Modbus TCD Hoodes	Transaction Identifier	2 Bytes	u16	0x00,0x01
Modbus TCP Header	Protocol	2 Bytes	u16	0x00,0x02

	Length	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x93
Parameters	State	1 Byte	u8	0x00

### 200~212: 6 Axis Force Torque Sensor

Get external force detection data of 6 Axis Force Torque Sensor					
Register200 (0xC8)					
	Request				
	Transaction Identifier	2 Bytes	u16	0x00,0x01	
Modbus TCP Header	Protocol	2 Bytes	u16	0x00,0x02	
Moubus ICP Headel	Length	2 Bytes	u16	0x00,0x01	
	Register	1 Byte	u8	0xC8	
Response					
	Transaction Identifier	2 Bytes	u16	0x00,0x01	
	Protocol	2 Bytes	u16	0x00,0x02	
Modbus TCP Header	Length	2 Bytes	u16	0x00,0x1A	
	Register	1 Byte	u8	0xC8	
	State	1 Byte	u8	0x00	
				0x00, 0x00, 0x00, 0x00,	
	Parameter1			0x00, 0x00, 0x00, 0x00,	
Parameters	External force detection data:	24 Durto	f 22 *C	0x00, 0x00, 0x00, 0x00,	
	After filtering, load and offset	24 Byte	fp32 *6	0x00, 0x00, 0x00, 0x00,	
	compensation			0x00, 0x00, 0x00, 0x00,	
				0x00, 0x00, 0x00, 0x00,	

Enable/Disable 6 Axis Force Torque Sensor					
Register201 (0xC9)					
	Request				
	Transaction Identifier	2 Bytes	u16	0x00,0x01	
Modbus TCP Header	Protocol	2 Bytes	u16	0x00,0x02	
	Length	2 Bytes	u16	0x00,0x02	

	Register	1 Byte	u8	0xC9	
Parameter	Parameter 1: 0-disable; 1-enable	1 Byte	u8	0x00	
Response					
	Transaction Identifier	2 Bytes	u16	0x00,0x01	
	Protocol	2 Bytes	u16	0x00,0x02	
Modbus TCP Header	Length	2 Bytes	u16	0x00,0x02	
	Register	1 Byte	u8	0xC9	
Parameters	State	1 Byte	u8	0x00	

Set the control mode of 6 Axis Force Torque Sensor						
	Register202 (0x	CA)				
	Request					
	Transaction Identifier	2 Bytes	u16	0x00,0x01		
Modbus TCP Header	Protocol	2 Bytes	u16	0x00,0x02		
Modbus ICP Header	Length	2 Bytes	u16	0x00,0x02		
	Register	1 Byte	u8	0xCA		
Parameter	Parameter 1(control mode)  0: non-force mode  1: impedance control mode  2: force control mode	1 Byte	u8	0x00		
	Response					
	Transaction Identifier	2 Bytes	u16	0x00,0x01		
Madhus TCD Harden	Protocol	2 Bytes	u16	0x00,0x02		
Modbus TCP Header	Length	2 Bytes	u16	0x00,0x02		
	Register	1 Byte	u8	0xCA		
Parameters	State	1 Byte	u8	0x00		

Get the control mode of 6 Axis Force Torque Sensor				
	Register203 (0x	CB)		
	Request			
	Transaction Identifier	2 Bytes	u16	0x00,0x01
Modbus TCP Header	Protocol	2 Bytes	u16	0x00,0x02
Modbus ICP Header	Length	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0xCB
Response				
	Transaction Identifier	2 Bytes	u16	0x00,0x01
	Protocol	2 Bytes	u16	0x00,0x02
Modbus TCP Header	Length	2 Bytes	u16	0x00,0x03
	Register	1 Byte	u8	0xCB
	State	1 Byte	u8	0x00
	Parameter 1(control mode)			
Parameters	0: non-force mode			
	1: impedance control mode	1 Byte	u8	0x00
	2: force control mode			

Perform end payload identification				
	Register204 (0xC	C)		
	Request	_		
	Transaction Identifier	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0xCC
Parameters	Parameter 1(type) 0: 6 Axis Force Torque Sensor identification 1: current identification	1 Byte	u8	0x00
Response				
Modbus TCP	Transaction Identifier	2 Bytes	u16	0x00,0x01
Modbus ICP	Protocol	2 Bytes	u16	0x00,0x02

Header	Length	2 Bytes	u16	Type 0: 0x00,0x2A Type 1: 0x00,0x12
	Register	1 Byte	u8	0xCC
	State	1 Byte	u8	0x00
	Parameter 1			
	(Identification result)			
	Type=0: N=10.			0x00,0x00,0x00,0x00
Parameters	[weight(kg), Cx, Cy, Cz(mm), Fx0,	4 * N	( 22	0x00,0x00,0x00,0x00
	Fy0, Fz0(N), Tx0, Ty0, Tz0(Nm)]	Byte	fp32	
	Type=0: N=4.			0x00,0x00,0x00,0x00
	[weight(kg), offset_Cx, offset_Cy,			
	offset_Cz(mm)]			

Set the payload and offset of 6 Axis Force Torque Sensor							
	Register205 (0x	CD)					
	Request						
	Transaction Identifier	2 Bytes	u16	0x00,0x01			
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02			
Header	Length	2 Bytes	u16	0x00,0x29			
	Register	1 Byte	u8	0xCD			
	Parameter 1(weight: kg)	4 Bytes	fp32	0x00, 0x00, 0x00, 0x00			
	Parameter 2 (Cx: mm)	4 Bytes	fp32	0x00, 0x00, 0x00, 0x00			
	Parameter 3 (Cy: mm)	4 Bytes	fp32	0x00, 0x00, 0x00, 0x00			
	Parameter 4 (Cz: mm)	4 Bytes	fp32	0x00, 0x00, 0x00, 0x00			
	Parameter 5 (Fx: mm)	4 Bytes	fp32	0x00, 0x00, 0x00, 0x00			
Parameters	Parameter 6 (Fy: mm)	4 Bytes	fp32	0x00, 0x00, 0x00, 0x00			
	Parameter 7(Fz: mm)	4 Bytes	fp32	0x00, 0x00, 0x00, 0x00			
	Parameter 8 (Tx: mm)	4 Bytes	fp32	0x00, 0x00, 0x00, 0x00			
	Parameter 9 (Ty: mm)	4 Bytes	fp32	0x00, 0x00, 0x00, 0x00			
	Parameter 10 (Tz: mm)	4 Bytes	fp32	0x00, 0x00, 0x00, 0x00			
	Response						
Modbus TCP	Transaction Identifier	2 Bytes	u16	0x00,0x01			

Header	Protocol	2 Bytes	u16	0x00,0x02
	Length	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0xCD
Parameters	State	1 Byte	u8	0x00

Set the current state as the zero point of 6 Axis Force Torque Sensor				
	Register206 (0x	CE)		
	Request			
	Transaction Identifier	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length	2 Bytes	u16	0x00,0x01
	Register	1 Byte	u8	0xCE
	Response			
	Transaction Identifier	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0xCE
Parameters	State	1 Byte	u8	0x00

Set all impedance control parameters of 6 Axis Force Torque Sensor				
	Register207 (0xCF	)		
	Request			
	Transaction Identifier	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length	2 Bytes	u16	0x00,0x50
	Register	1 Byte	u8	0xCF
	Parameter 1(coordinate) 0: Base coordinate 1: Tool coordinate	1 Byte	u8	0x00
Parameters	Parameter 2 1: the corresponding direction will produce impedance	6 Bytes	u8 * 6	0x00,0x00,0x00,0x00, 0x00,0x00

1				ı
	Parameter 3  M => [Mx, My,Mz, Mr, Mp, My]  Equivalent mass(xyz): 0.02~1.0(kg)  Moment of inertia(rpy):  0.0001~0.01(kg*m^2)	24 Bytes	fp32 * 6	0x00,0x00,0x00,0x00, 0x00,0x00,0x00,0x0
	Parameter 4 Stiffness coefficient.  K => [kx, ky, kz, kr, kp, ky]  xyz: 0~2000(N/m)  rpy: 0~20(Nm/rad)	24 Bytes	fp32 * 6	0x00,0x00,0x00,0x00, 0x00,0x00,0x00,0x0
	Parameter 5 Damping coefficient	24 Bytes	fp32*6	0x00,0x00,0x00,0x00, 0x00,0x00,0x00,0x0
	Response			
	Transaction Identifier	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0xCF
Parameters	State	1 Byte	u8	0x00

Set PID parameter of 6 Axis Force Torque Sensor				
Register208 (0xD0)				
Request				
	Transaction Identifier	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length	2 Bytes	u16	0x00,0x61
	Register	1 Byte	u8	0xD0

		1	1	
	Parameter 1 (Proportional gain: KP) Kp[i]: 0~0.05	24 Bytes	fp32 * 6	0x00,0x00,0x00,0x00, 0x00,0x00,0x00,0x0
	Parameter 2 (Integral gain: KI) KI[i]: 0~0.0005	24 Bytes	fp32 * 6	0x00,0x00,0x00,0x00, 0x00,0x00,0x00,0x0
Parameters	Parameter 3 (Differential gain: KD) KD[i]: 0~0.05	24 Bytes	fp32 * 6	0x00,0x00,0x00,0x00, 0x00,0x00,0x00,0x0
	Parameter 4 (Maximum TCP speed along each axis) VMAX[i]: 0~200(mm/s)	24 Bytes	fp32 * 6	0x00,0x00,0x00,0x00, 0x00,0x00,0x00,0x0
	Response			
	Transaction Identifier	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0xD0
Parameters	State	1 Byte	u8	0x00

### Set force control parameter of 6 Axis Force Torque Sensor

Register209 (0xD1)				
	Request			
	Transaction Identifier	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length	2 Bytes	u16	0x00,0x38
	Register	1 Byte	u8	0xD1
	Parameter 1(coordinate) 0: Base coordinate 1: Tool coordinate	1 Byte	u8	0x00
	Parameter 2 1: the corresponding direction can be controlled by force	6 Bytes	u8 * 6	0x00,0x00,0x00,0x00,0 x00,0x00
Parameters	Parameter 3  F => [Fx, Fy, Fz, Fr, Fp, Fy]  (F[i]: The arm adjusts its position along the corresponding axis to achieve the specified force torque)  Fx: -150~150 (N)  Fy: -150~150 (N)  Fz: -200~200 (N)  Fr: -4~4(Nm)  Fp: -4~4(Nm)  Fy: -4~4(Nm)	24 Bytes	fp32 * 6	0x00,0x00,0x00,0x00, 0x00,0x00,0x00,0x0
	Parameter 4  (Maximum TCP speed along each axis) 24 By  VMAX[i]: 0~200(mm/s)	24 Bytes	fp32 * 6	0x00,0x00,0x00,0x00, 0x00,0x00,0x00,0x0
Response				
	Transaction Identifier	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0xD1
Parameters	State	1 Byte	u8	0x00

Set MKB pa	rameter under impedance control mo	ode of 6 A	xis Force	e Torque Sensor
	Register210 (0xD	2)		
	Request			
	Transaction Identifier	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length	2 Bytes	u16	0x00,0x49
	Register	1 Byte	u8	0xD2
Parameters	Parameter 1  M => [Mx, My,Mz, Mr, Mp, My]  Equivalent mass(xyz): 0.02~1.0(kg)  Moment of inertia(rpy):  0.0001~0.01(kg*m^2)  Stiffness coefficient.  K => [kx, ky, kz, kr, kp, ky]  xyz: 0~2000(N/m)  rpy: 0~20(Nm/rad)	24 Byte 24 Byte	fp32 * 6	0x00,0x00,0x00,0x00, 0x00,0x00,0x00,0x0
	rpy: 0~20(Nm/rad)  Parameter 3  Damping coefficient  24 Byte	fp32 * 6	0x00,0x00,0x00,0x00, 0x00,0x00,0x00,0x0	
Response				
	Transaction Identifier	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length	2 Bytes	u16	0x00,0x02
ricadei	Register	1 Byte	u8	0xD2
Parameters	State	1 Byte	u8	0x00

Set impedance control parameter of 6 Axis Force Torque Sensor				
	Register211 (0xD	3)		
	Request			
	Transaction Identifier	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length	2 Bytes	u16	0x00,0x08
	Register	1 Byte	u8	0xD3
	Parameter 1(coordinate)  0: Base coordinate  1: Tool coordinate	1 Byte	u8	0x00
Parameters	Parameter 2 1: the corresponding direction will produce impedance	6 Bytes	u8 * 6	0x00,0x00,0x00,0x00, 0x00,0x00
	Response			
	Transaction Identifier	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0xD3
Parameters	State	1 Byte	u8	0x00

Get all feedback data of 6 Axis Force Torque Sensor  Register212 (0xD4)				
	Request			
	Transaction Identifier	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length	2 Bytes	u16	0x00,0x01
	Register	1 Byte	u8	0xD4
	Response			
	Transaction Identifier	2 Bytes	u16	0x00,0x01
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02
Header	Length	2 Bytes	u16	0x01,0x1A
	Register	1 Byte	u8	0xD4

Parameter 1 (Control mode) 1 Byte u8		State	1 Byte	u8	0x00
Parameter 2 (Enable state) 1 Byte u8 0x00  Parameter 3 (Type) 1 Byte u8 0x00  Parameter 4 (ID) 1 Byte u8 0x08  Parameter 5 (Frequency) 2 Bytes u16 0x03, 0xE8  Parameter 6 (Weight) 4 Bytes fp32 0x00,0x00,0x00,0x00,0x00  Parameter 7 (Reserve) 4 Bytes fp32 0x00,0x00,0x00,0x00,0x00  Parameter 8 (Centroid) 12 Bytes fp32 3 0x00,0x00,0x00,0x00,0x00  Parameter 9 (offset) 24 Bytes fp32 *3 0x00,0x00,0x00,0x00,0x00  0x00,0x00,0x0					
Parameter 3 (Type) 1 Byte u8 0x00  Parameter 4 (ID) 1 Byte u8 0x08  Parameter 5 (Frequency) 2 Bytes u16 0x03, 0xE8  Parameter 6 (Weight) 4 Bytes fp32 0x00,0x00,0x00,0x00  Parameter 7 (Reserve) 4 Bytes fp32 0x00,0x00,0x00,0x00,0x00  Parameter 8 (Centroid) 12 Bytes fp32 3 0x00,0x00,0x00,0x00,0x00  Parameter 9 (offset) 24 Bytes fp32 4 3 0x00,0x00,0x00,0x00,0x00  Parameter 9 (offset) 24 Bytes fp32 5 0x00,0x00,0x00,0x00  Parameter 9 (offset) 24 Bytes fp32 6 0x00,0x00,0x00,0x00  Parameter 10 (Coordinate of impedance control mode) 1 Byte u8 0x00  Parameter 11 (Impedance control vector) 6 Bytes u8 6 0x00,0x00,0x00,0x00,0x00  Parameter 12 Equivalent mass and Moment of inertia 24 Bytes fp32 6 0x00,0x00,0x00,0x00,0x00  Parameter 12 Equivalent mass and Moment of inertia		Parameter i (Controt mode)	ТБусе	uo	
Parameter 4 (ID) 1 Byte u8 0x08  Parameter 5 (Frequency) 2 Bytes u16 0x03, 0xE8  Parameter 6 (Weight) 4 Bytes fp32 0x00,0x00,0x00,0x00  Parameter 7 (Reserve) 4 Bytes fp32 0x00,0x00,0x00,0x00,0x00  Parameter 8 (Centroid) 12 Bytes fp32 3 0x00,0x00,0x00,0x00,0x00  Parameter 9 (offset) 24 Bytes fp32 4 6 0x00,0x00,0x00,0x00,0x00  Parameter 10 (Coordinate of impedance control mode) 1 Byte u8 0x00  Parameter 11 (Impedance control vector) 6 Bytes u8 6 0x00,0x00,0x00,0x00,0x00  Parameter 12 Equivalent mass and Moment of inertia 24 Bytes fp32 6 0x00,0x00,0x00,0x00  Parameter 12 Equivalent mass and Moment of inertia 24 Bytes fp32 6 0x00,0x00,0x00,0x00  Parameter 12 Equivalent mass and Moment of inertia 24 Bytes fp32 6 0x00,0x00,0x00,0x00  Parameter 12 Equivalent mass and Moment of inertia 24 Bytes fp32 7 6 0x00,0x00,0x00,0x00  Parameter 12 Equivalent mass and Moment of inertia 24 Bytes fp32 7 6 0x00,0x00,0x00,0x00  Parameter 12 Equivalent mass and Moment of inertia 24 Bytes fp32 7 6 0x00,0x00,0x00,0x00  Parameter 12 24 Bytes fp32 7 6 0x00,0x00,0x00,0x00  Parameter 12 24 Bytes fp32 7 6 0x00,0x00,0x00,0x00  Parameter 12 24 Bytes fp32 7 6 0x00,0x00,0x00  Parameter 12 24 Bytes fp32 7 6 0x00,0x00  Parameter 12 24 Bytes fp32 7 6 0x00,0x0		Parameter 2 (Enable state)	1 Byte	u8	0x00
Parameter 5 (Frequency)         2 Bytes         u16         0x03, 0xE8           Parameter 6 (Weight)         4 Bytes         fp32         0x00,0x00,0x00,0x00           Parameter 7 (Reserve)         4 Bytes         fp32         0x00,0x00,0x00,0x00           Parameter 8 (Centroid)         12 Bytes         fp32 *3         0x00,0x00,0x00,0x00           0x00,0x00,0x00,0x00,0x00         0x00,0x00,0x00,0x00         0x00,0x00,0x00,0x00           0x00,0x00,0x00,0x00,0x00         0x00,0x00,0x00,0x00         0x00,0x00,0x00,0x00           0x00,0x00,0x00,0x00,0x00         0x00,0x00,0x00,0x00         0x00,0x00,0x00,0x00           0x00,0x00,0x00,0x00,0x00         0x00,0x00,0x00,0x00         0x00,0x00,0x00,0x00           0x00,0x00,0x00,0x00         0x00,0x00,0x00,0x00         0x00,0x00,0x00,0x00           0x00,0x00,0x00,0x00,0x00         0x00,0x00,0x00,0x00         0x00,0x00,0x00,0x00           0x00,0x00,0x00,0x00,0x00         0x00,0x00,0x00,0x00         0x00,0x00,0x00,0x00           0x00,0x00,0x00,0x00,0x00         0x00,0x00,0x00,0x00         0x00,0x00,0x00,0x00           0x00,0x00,0x00,0x00,0x00         0x00,0x00,0x00,0x00         0x00,0x00,0x00,0x00		Parameter 3 (Type)	1 Byte	u8	0x00
Parameter 6 (Weight) 4 Bytes fp32 0x00,0x00,0x00,0x00  Parameter 7 (Reserve) 4 Bytes fp32 0x00,0x00,0x00,0x00  Parameter 8 (Centroid) 12 Bytes fp32 3 0x00,0x00,0x00,0x00  Parameter 9 (offset) 24 Bytes fp32 4 6 0x00,0x00,0x00,0x00  Parameter 10 (Coordinate of impedance control mode)  Parameter 11 (Impedance control vector) 6 Bytes parameter 12  Equivalent mass and Moment of inertia 24 Bytes fp32 4 6 0x00,0x00,0x00,0x00  Parameter 12 Equivalent mass and Moment of inertia 24 Bytes fp32 5 0x00,0x00,0x00,0x00  Parameter 12 0x00,0x00,0x00  Parameter 12 0x00,0x00  Para		Parameter 4 (ID)	1 Byte	u8	0x08
Parameter 9 (offset)  Parameter 9 (offset)  Parameter 10 (Coordinate of impedance control mode)  Parameter 11 (Impedance control vector)  Parameter 12 Equivalent mass and Moment of inertia  Parameter 7 (Reserve)  4 Bytes fp32 * 3 0x00,0x00,0x00,0x00,0x00 0x00,0x00,0x		Parameter 5 (Frequency)	2 Bytes	u16	0x03, 0xE8
Parameter 9 (offset)  Parameter 9 (offset)  Parameter 10 (Coordinate of impedance control mode)  Parameter 11 (Impedance control vector)  Parameter 12 Equivalent mass and Moment of inertia  Parameter 8 (Centroid)  12 Bytes fp32 * 3 0x00,0x00,0x00,0x00 0x00,0x00,0x00,0x		Parameter 6 (Weight)	4 Bytes	fp32	0x00,0x00,0x00,0x00
Parameter 8 (Centroid)         12 Bytes         fp32 * 3         0x00,0x00,0x00,0x00,0x00           Parameters         Parameter 9 (offset)         24 Bytes         fp32 * 6         0x00,0x00,0x00,0x00,0x00           Parameter 9 (offset)         24 Bytes         fp32 * 6         0x00,0x00,0x00,0x00,0x00           0x00,0x00,0x00,0x00,0x00,0x00         0x00,0x00,0x00,0x00,0x00         0x00,0x00,0x00,0x00           0x00,0x00,0x00,0x00,0x00         0x00,0x00,0x00,0x00         0x00,0x00,0x00,0x00           0x00,0x00,0x00,0x00,0x00         0x00,0x00,0x00,0x00         0x00,0x00,0x00,0x00           0x00,0x00,0x00,0x00,0x00         0x00,0x00,0x00,0x00         0x00,0x00,0x00,0x00           0x00,0x00,0x00,0x00,0x00         0x00,0x00,0x00,0x00         0x00,0x00,0x00,0x00		Parameter 7 (Reserve)	4 Bytes	fp32	0x00,0x00,0x00,0x00
Parameter 9 (offset)  24 Bytes   Fp32 * 6   0x00,0x00,0x00,0x00   0x00,0x00,0x00   0x00,0x00,					0x00,0x00,0x00,0x00
Parameter 9 (offset)  24 Bytes   fp32 * 6   0x00,0x00,0x00,0x00   0x00,0x00,0x00   0x00,0x00,		Parameter 8 (Centroid)	12 Bytes	fp32 * 3	0x00,0x00,0x00,0x00
Parameters         Parameter 9 (offset)         24 Bytes         fp32 * 6         0x00,0x00,0x00,0x00 0x00,0x00 0x00,0x00 0x00,0x00,0x00 0x00,0x00 0x00 0x00,0x00,0x00 0x00,0x00 0x00,					0x00,0x00,0x00,0x00
Parameters         Parameter 9 (offset)         24 Bytes         fp32 * 6         0x00,0x00,0x00,0x00 0x00,0x00 0x00,0x00,0x00 0x00,0x00,0x00 0x00,0x00,0x00 0x00,0x00,0x00 0x00,0x00,0x00 0x00,0x00,0x00,0x00 0x00,0x00,0x00,0x00 0x00,0x00,0x00 0x00 0x00,					0x00,0x00,0x00,0x00
Parameter 9 (offset)  24 Bytes   fp32 * 6   0x00,0x00,0x00,0x00   0x00,0x00,0x00,	Da wa wa aka wa	Parameter 9 (offset)	24 Bytes		0x00,0x00,0x00,0x00
Dx00,0x00,0x00,0x00	Parameters			fn27 * 6	0x00,0x00,0x00,0x00
Parameter 10 (Coordinate of impedance control mode)  Parameter 11 (Impedance control vector)  Parameter 12 Equivalent mass and Moment of inertia  David (Coordinate of impedance control and possible parameter 12)  A Bytes of David (Coordinate of impedance control and possible parameter 12)  Parameter 12  Equivalent mass and Moment of inertia  David (Coordinate of impedance control and possible parameter 13)  Byte and and and possible parameter 14  David (Coordinate of impedance control and possible parameter 14)  Byte and and and possible parameter 15  David (Coordinate of impedance control and possible parameter 14)  Byte and and and and possible parameter 15  David (Coordinate of impedance control and possible parameter 14)  Byte and and and and possible parameter 15  David (Coordinate of impedance control and possible parameter 14)  Byte and and and and and and and and and and				1p32 0	0x00,0x00,0x00,0x00
Parameter 10					0x00,0x00,0x00,0x00
(Coordinate of impedance control mode)         1 Byte         u8         0x00           Parameter 11 (Impedance control vector)         6 Bytes         u8 * 6         0x00,0x00,0x00,0x00,0x00,0x00,0x00           Parameter 12 Equivalent mass and Moment of inertia         24 Bytes         fp32 * 6         0x00,0x00,0x00,0x00,0x00           0x00,0x00,0x00,0x00,0x00         0x00,0x00,0x00,0x00         0x00,0x00,0x00,0x00         0x00,0x00,0x00,0x00					0x00,0x00,0x00,0x00
Parameter 11 (Impedance control vector)  Parameter 12 Equivalent mass and Moment of inertia  Parameter 12  Equivalent mass and Moment of inertia  Parameter 12  Equivalent mass and Moment of inertia  Ox00,0x00,0x00,0x00,0x00,0x00 0x00,0x00,		Parameter 10			
Parameter 11 (Impedance control vector)  Parameter 12 Equivalent mass and Moment of inertia  6 Bytes  u8 * 6  0x00,0x00,0x00,0x00,0x00,0x00 0x00,0x00,0x00,0x00 0x00,0x00,0x00,0x00 0x00,0x00,0x00,0x00 0x00,0x00,0x00,0x00 0x00,0x00,0x00,0x00 0x00,0x00,0x00,0x00		(Coordinate of impedance control	1 Byte	u8	0x00
(Impedance control vector)  Parameter 12 Equivalent mass and Moment of inertia  6 Bytes u8 * 6 x00,0x00 0x00,0x00,0x00,0x00 0x00,0x00,		mode)			
(Impedance control vector) x00,0x00  Parameter 12  Equivalent mass and Moment of inertia  24 Bytes fp32 * 6  Moment of inertia  x00,0x00 0x00,0x00,0x00,0x00 0x00,0x00,0x00,0x00 0x00,0x00,0x00,0x00 0x00,0x00,0x00,0x00		Parameter 11	6.5.1	0 * 6	0x00,0x00,0x00,0x00,0
Parameter 12 Equivalent mass and Moment of inertia  24 Bytes fp32 * 6  0x00,0x00,0x00,0x00 0x00,0x00,0x00 0x00,0x00,0x00 0x00,0x00,0x00 0x00,0x00,0x00		(Impedance control vector)	o Bytes	u8 " 6	x00,0x00
Parameter 12  Equivalent mass and  Moment of inertia  Parameter 12  24 Bytes fp32 * 6  0x00,0x00,0x00,0x00  0x00,0x00,0x00,0					0x00,0x00,0x00,0x00
Equivalent mass and Moment of inertia  24 Bytes fp32 * 6  0x00,0x00,0x00,0x00 0x00,0x00,0x00 0x00,0x00,0x00		Daramotor 12			0x00,0x00,0x00,0x00
Moment of inertia 0x00,0x00,0x00,0x00 0x00,0x00,0x00			24 Bytes	fn32 * 6	0x00,0x00,0x00,0x00
0x00,0x00,0x00,0x00			ביז שאוכט	ט שנקון	0x00,0x00,0x00,0x00
0x00,0x00,0x00,0x00		Moment of filertia			0x00,0x00,0x00,0x00
					0x00,0x00,0x00,0x00

Parameter 13 Stiffness coefficient	24 Bytes	fp32 * 6	0x00,0x00,0x00,0x00 0x00,0x00,0x00,0x00
Parameter 14 Damping coefficient	24 Bytes	fp32 * 6	0x00,0x00,0x00,0x00 0x00,0x00,0x00,0x00
Parameter 15 (Coordinate of force control mode)	1 Byte	u8	0x00
Parameter 16 (Force Control vector)	6 Bytes	u8 *6	0x00,0x00,0x00,0x00,0 x00,0x00
Parameter 17 (Force vector)	24 Bytes	fp32 *6	0x00,0x00,0x00,0x00 0x00,0x00,0x00,0x00
Parameter 18 (Reserve)	24 Byte	fp32 * 6	0x00,0x00,0x00,0x00 0x00,0x00,0x00,0x00

1		1		
	Parameter 19 (KP: Proportional gain)	24 Byte	fp32 * 6	0x00,0x00,0x00,0x00 0x00,0x00,0x00,0x00
	Parameter 20 (KI: Integral gain)	24 Byte	fp32 * 6	0x00,0x00,0x00,0x00 0x00,0x00,0x00,0x00
	Parameter 21 (KD: Differential gain)	24 Byte	fp32 * 6	0x00,0x00,0x00,0x00 0x00,0x00,0x00,0x00
	Parameter 22 (max TCP speed vector)	24 Byte	fp32 *6	0x00,0x00,0x00,0x00 0x00,0x00,0x00,0x00

## 2.1.5. Modbus TCP Example

If you want the robotic arm to perform a basic motion, please send the commands as follows:

(1) Enable the robotic arm.

- (2) Set the motion mode of the robotic arm.
- (3) Set the motion state of the robotic arm.
- (4) Send motion commands.

The following will give an example according to the above steps:

Function	Enable the robotic arm	Setting mode	Setting state	Cartesian linear motion
----------	------------------------	--------------	---------------	-------------------------

#### Note:

- (1) 3.2.4 has a detailed description of the register list.
- (2) Please refer to P31-P32 for the format of the request and response command parameters in the following examples.
- (3) The following explains some of the symbols used in the examples and tables:

u8 (1 Byte, 8-bit unsigned int)

u16 (2 Bytes, 16-bit unsigned int, big-endian analysis)

fp32 (4 Bytes, float, little-endian analysis)

str (string)

Enable the robotic arm					
Register11 (0x0B)					
	Request				
	Transaction ID	2 Bytes	u16	0x00,0x01	
	Protocol	2 Bytes	u16	0x00,0x02	
Modbus TCP Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x03	
Ploubus Tel Tieudel	Register	1 Byte	u8	0x0B	
	Parameter1(servo_id)	1 Byte	u8	0x08	
	Parameter2(enable)	1 Byte	u8	0x01	
Response					
Modbus TCP Header	Transaction ID	2 Bytes	u16	0x00,0x01	

	Protocol	2 Bytes	u16	0x00,0x02
	Length (parameter length+1)	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x0B
Parameters	State	1 Byte	u8	0x00

Setting mode				
	Register19 (0	x13 <b>)</b>		
	Request			
	Transaction ID	2 Bytes	u16	0x00,0x01
	Protocol	2 Bytes	u16	0x00,0x02
Modbus TCP Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x13
	Parameter1(Motion mode)	1 Byte	u8	0x00
	Response	9		
	Transaction ID	2 Bytes	u16	0x00,0x01
Modbus TCP Header	Protocol	2 Bytes	u16	0x00,0x02
	Length (parameter length+1)	2 Bytes	u16	0x00,0x02
	Register	1 Byte	u8	0x13
Parameters	State	1 Byte	u8	0x00

Setting state						
	Register12 (0x0C)					
	Request					
	Transaction ID	2 Bytes	u16	0x00,0x01		
	Protocol	2 Bytes	u16	0x00,0x02		
Modbus TCP Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x02		
	Register	1 Byte	u8	0x0C		
	Parameter1(Motion state)	1 Byte	u8	0x00		
	Response	9				
	Transaction ID	2 Bytes	u16	0x00,0x01		
Modbus TCP Header	Protocol	2 Bytes	u16	0x00,0x02		
	Length (parameter length+1)	2 Bytes	u16	0x00,0x02		
	Register	1 Byte	u8	0x0C		
Parameters	State	1 Byte	u8	0x00		

Cartesian linear motion
Register21 (0x15)

Request						
	Transaction ID	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header	Length (parameter length+1)	2 Bytes	u16	0x00,0x25		
	Register	1 Byte	u8	0x15		
	Parameter1(x=400mm)	4 Bytes	fp32	0x00,0x00,0xC8,0x43		
	Parameter2(y=0mm)	4 Bytes	fp32	0x00,0x00,0x00,0x00		
	Parameter3(z=200mm)	4 Bytes	fp32	0x00,0x00,0x48,0x43		
	Parameter4(roll=π)	4 Bytes	fp32	0xDB,0x0F,0x49,0x40		
	Parameter5(pitch=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00		
Parameters	Parameter6(yaw=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00		
	Parameter8(speed=100mm/s)	4 Bytes	fp32	0x00,0x00,0xC8,0x42		
	Parameter9(acceleration=2000 mm/s2) =500*π/180rad/s2)	4 Bytes	fp32	0x00,0x00,0xFA,0x44		
	Parameter10(motion time=0)	4 Bytes	fp32	0x00,0x00,0x00,0x00		
	Response					
	Transaction ID	2 Bytes	u16	0x00,0x01		
Modbus TCP	Protocol	2 Bytes	u16	0x00,0x02		
Header Length (parameter lengt		2 Bytes	u16	0x00,0x04		
	Register	1 Byte	u8	0x15		
Parameters	State	1 Byte	u8	0x00		
Talameters	Parameter1	2 Bytes	u16	0x00,0x01		

# 2.1.6. Automatic Reporting Format

## REPORT\_TCP\_DEVELOP:

REPORT_TCP_DEVELOP						
Default Port			30003			
Frequency	100Hz					
	1~4 Bytes		Number of Bytes			
	5 Byte	u8	Bit0-Bit3 indicates the motion status,			
			Bit4-Bit7 indicates the motion mode.			
Byte Order Content	6~7 Bytes	u16	Number of commands Caches, big-endian			
Byte order content	8~35 Bytes	fp32	The current angle of each joint of the robotic			
	36~59 Bytes	fp32	The current position and attitude of the			
	60~87 Bytes	fp32	Joint torque			
	88~111Bytes	fp32	The external force detection value of the			
			end six-dimensional force/torque sensor			
			after filtering, load and offset compensation			

	112~135Bytes	fp32	The direc	ct reading of the six-dimensional
			force/torc	que sensor at the end, without any
				processing
		Exampl	e	
Assumption: Get 36-50	0x18,0x00,0x4F,0x43,0x24,0xFC,0x8A,0x28,0x08,0x01,0xE0,0x42			
Bytes of data	0xDB,0x0F,0x49,0xC0,0x00,0x00,0x00,0x24,0x00,0x00,0x00,0x0			
	0x18,0x0	0,0x4F,0	x43	207.0003662109375
	0x24,0xF0	C,0x8A,0	)x28	1.54304263051859e-14
	0x08,0x0	1,0xE0,0	x42	112.00201416015625
Amalusia Dasulta	0xDB,0x0F,0x49,0xC0			3.1415927410125732
Analysis Results	0x00,0x00,0x00,0x24		)x24	2.7755575615628914e-17
	0x00,0x00	0,0x00,0	00x(	0.0

## REPORT\_TCP\_NORMAL:

REPORT_TCP_NORMAL					
Default Port	30001				
Frequency			5Hz		
	1~87Bytes		The same as [ the Auto Reporting Format		
			of REPORT_TCP_DEVELOP]		
			Servo brake status (u8 Bit0 ~ Bit		
Byte Order Content			correspond to 1~6 joints respectively, 0		
	88 Bytes	u8	not enabled, 1 enabled)		
	89 Bytes	u8	Servo brake status (u8 Bit0 ~ Bit		
			correspond to 1~6 joints respectively, 0		
			not enabled, 1 enabled)		
	90 Bytes	u8	Error code		
	91 Bytes	u8	Warning code		
	92~115 Bytes	fp32 *6	TCP offset, little-endian byte order		
	116~131Bytes		End load Parameter		
	132 Bytes	u8	Collision detection sensitivity		
	133 Bytes	u8	Teaching sensitivity		
			Vectors (x, y, z) indicating the direction of		
	134~145 Bytes	fp32 *3	gravity, relative to the base coordinate		
	system.				
Example					
The same as [REPORT_TCP_DEVELOP]					

### REPORT\_TCP\_RICH:

	REPC	DRT	TCP	RICH
--	------	-----	-----	------

Default Port	30002			
Frequency	5Hz			
	1~145 Bytes		The same as [ the Auto Reporting Format of REPORT_TCP_DEVELOP]	
	146 Bytes	u8	Robotic arm type number(5/6/7)	
Byte Order	147 Bytes	u8	Robotic arm joint number (5/6/7)	
Content	148 Bytes	u8	MASTER ID Communication (0xAA fixed)	
Content	149 Bytes	u8	SLAVE ID Communication (0x55 fixed)	
	150 Bytes	0	Reserved	
	151 Bytes	0	Reserved	
	152~181Bytes		Firmware version string (30 Bytes)	
	182~201 Bytes	fp32 *5	[ current cartesian jerk (mm / s³),	
			(configurable)minimum cartesian	
			acceleration (mm / s²),	
			(configurable)maximum cartesian	
			acceleration (mm / s2),	
			(configurable)minimum cartesian speed (mm	
			/ s), (configurable)maximum cartesian speed	
			(mm / s)]	
	202~221 Bytes	fp32 *5	[current joint jerk (radian / s³),	
			(configurable)minimum joint acceleration	
			(radian / s²), (configurable)maximum joint	
			acceleration (radian / s²),	
			(configurable)minimum joint speed (radian /	
			s), (configurable)maximum joint speed	
			(radian / s)]	
	222~229 Bytes	fp32 *2	[Attitude rotation jerk (radian / s³), maximum	
	,		attitude rotation acceleration(radian / s²)]	
			Note: Users cannot set the above two	
		_	parameter values by yourselves	
	230~243 Bytes	u8	[Joint servo error type, joint servo error code]	
	244~245 Bytes	u8	[End IO error type, end IO error code ]	
	246~252 Bytes	u8 fn32	[Joint Celsius ]  TCP speed of Cartesian motion command	
	253~256 Bytes	fp32	·	
			planned by controller (mm/s)	
	257~284 Bytes	fp32 * 7	The angular velocity of the joint motion	
			commands planned by the controller (rad/s)	
			Note: In servoj's motion mode, the speed	
			value cannot be obtained.	
	285~288 Bytes	u32	The value of the current commands counter	

	289~312 Bytes	fp32 * 6	User coordinate system offset [x (mm), y
			(mm), z (mm), roll (radian), pitch (radian),
	212.5 :		yaw (radian)]
<u> </u>	313 Bytes	u8	The switch value of the control box IO stop
	314 Bytes	u8	The switch value of the end IO stop state
			clearing
	315 Bytes	u8	Virtual control switch
	316 Bytes	u8	Self-collision detection switch
	317 Bytes	u8	Self-collision detection end tool type number
	318~341Bytes	fp32 * 6	Self-collision detection end tool model
<u> </u>		1032 0	parameters, unit: mm, little-endian byte order
	342~355Bytes	u16*7	Robotic arm joint voltage (value has been
	342~333bytes	u10 7	processed by X100)
	356~383 Bytes	fp32 * 7	Joint current, unit: A
			GPIO module status (refer to Register 139)
			0: normal
	384Bytes	u8	3: The paw has an error message
			6: Communication failed
			Error code of GPIO module (refer to Register
			139)
	385 Bytes	u8	0: normal
			Non-zero: error code
	386~387 Bytes	u16	Digital input function IO status (refer to
	380~387 Bytes	uio	Digital input configuration IO status
	388~389 Bytes	u16	(refer to Register 139)
	390~391 Bytes	u16	Digital output function IO status
			(refer to Register 139)
	392~393 Bytes	u16	Digital output configuration IO status
			(refer to Register 139)
	394~395 Bytes	u16	Analog input 1 (refer to Register 139)
	396~397 Bytes	u16	Analog input 2 (refer to Register 139)
	398~399 Bytes	u16	Analog output 1 (refer to Register 139)
	400~401Bytes	u16	Analog output 2 (refer to Register 139)
			Digital input IO0~IO7 configuration
	402~409 Bytes	u8*8	information
			(refer to Register 139)
			Digital output IO0~IO7 configuration
	410~417 Bytes	u8*8	information
			(refer to Register 139)

			Digital input IO8~IO15 configuration		
	418~425 Bytes	u8*8	information		
			(refer to Register 139)		
			Digital output IO8~IO15 configuration		
	426~433 Bytes	u8*8	information		
			(refer to Register 139)		
			The external force detection value of the end		
			six-dimensional force/torque sensor after		
	434~457 Bytes	fp32*6	filtering, load and offset compensation.		
		fp32*6	unit(N, N, N, Nm, Nm, Nm)		
			The direct reading of the six-dimensional		
	450, 401 Button		force/torque sensor at the end, without any		
	458~481 Bytes		processing.		
			unit(N, N, N, Nm, Nm, Nm)		
	482 Byte		Automatic identification process completion		
		u8	progress(percentage)		
	483~494 Bytes	fp32*3	Current end attitude(shaft angle notation)		
	Example				
The same as [REPORT_TCP_DEVELOP]					

## 3. Error Reporting and Handling

## 3.1. Joints Error Message and Error Handling

- Error processing method: Re-power on, the steps are as follows:
  - 1. Turn the emergency stop button on the control box
  - 2. Enable robotic arm
- xArm Studio enable mode: Click the guide button in the error
   pop-up window or the [Enable Robot] button
   on the homepage.

- xArm-Python-SDK enable mode: Error Handling Mode.
- xArm-library: operators can view related documents at https://github.com/xArm-Developer/xarm\_ros
- If the problem remains unsolved after power on/off for multiple times, please contact UFACTORY team for support.

Software Error Code	Error Code	Error Handling
		Joint Communication Error
50	000	Please restart the xArm with the Emergency Stop Button
S0	0x00	on the Control Box. If multiple reboots do not work,
		please contact technical support.
		Current Detection Error
S10	0x0A	Please restart the xArm with the Emergency Stop Button
		on the xArm Control Box.
		Joint Overcurrent
S11	0x0B	Please restart the xArm with the Emergency Stop Button
		on the xArm Control Box.
		Joint Overspeed
S12	0x0C	Please restart the xArm with the Emergency Stop Button
		on the xArm Control Box.
		Position Command Overlimit
S14	0x0E	Please restart the xArm with the Emergency Stop Button
		on the xArm Control Box.
		Joints Overheat
S15	0x0F	If the robotic arm is running for a long time, please stop
		running and restart the xArm after it's cool down.
		Encoder Initialization Error
	0x10	Please ensure that there is no external force to push the
S16		robotic arm when the it's energized. Please restart the
		xArm with the Emergency Stop Button on the xArm
		Control Box.
S17	0x11	Single-turn Encoder Error
317	UXII	Please restart the xArm with the Emergency Stop Button

		on the Control Box.
		Multi-turn Encoder Error
		Please go to "Settings-Advanced-Advanced Tools-Joint
S18	0x12	Tools-Joint Debug", click "Clear Multi-turn Error" then
		push power switch of the Control Box to OFF, wait 5
		seconds and then power on again.
510	0 13	Low Battery Voltage
S19	0x13	Please contact technical support.
520	0.14	Driver IC Hardware Error
S20	0x14	Please re-enable the robot.
		Driver IC Initialization Error
S21	0x15	Please restart the xArm with the Emergency Stop Button
		on the xArm Control Box.
		Encoder Configuration Error
522	0x16	Please contact technical support.
		Large Motor Position Deviation
622		Please check whether the xArm movement is blocked,
S23	0x17	whether the payload exceeds the rated payload of xArm,
		and whether the acceleration value is too large.
526	0.14	Joint N Positive Overrun
S26	0x1A	Please check if angle value of the joint N is too large.
		Joint N Negative Overrun
627	0.40	Please check if the angle value of joint N is too large, if
S27	0x1B	so, please click Clear Error and manually unlock the joint
		and rotate the joint to the allowed range of motion.
520	0.16	Joint Commands Error
S28	0x1C	The xArm is not enabled, please click Enable Robot.
623	0 21	Drive Overloaded
S33	0x21	Please make sure the payload is within the rated load.
52.4	0.22	Motor Overload
S34	0x22	Please make sure the payload is within the rated load.
		Motor Type Error
S35	0x23	Please restart the xArm with the Emergency Stop Button
		on the xArm Control Box.
536	02.4	Driver Type Error
S36	0x24	Please restart the xArm with the Emergency Stop Button

		on the xArm Control Box.
		Joint Overvoltage
S39	0x27	Please reduce the acceleration value in the Motion
		Settings.
		Joint Undervoltage
		Please reduce the acceleration value in the Motion
S40	0x28	Settings.
		Please check if the control box emergency stop switch is
		released.
		EEPROM Read and Write Error
S49	0x31	Please restart the xArm with the Emergency Stop Button
		on the xArm Control Box.
		Initialization of Motor Angle Error
S52	0x34	Please restart the xArm with the Emergency Stop Button
		on the xArm Control Box.

### 3.2. Control Box Error Code and Error Handling

#### 3.2.1. Control Box Error Code

If there is any error in the hardware of the robotic arm in the software of the Control Box/in sending command, an error or warning will be issued. This error/warning signal will be fed back when the operators send any command; In other words, the feedback is passive and not actively reported.

After the above error occurs, the robotic arm will stop working immediately and discard the Control Box cache command. Users need to clear these errors manually to allow normal operation. Please re-adjust the motion planning of the robotic arm according to the reported error

Software Error Code	Error Code	Error Handling
C1	0x01	The Emergency Stop Button on the Control Box is Pushed in to Stop Please release the Emergency Stop Button, and then click "Enable Robot"
C2	0x02	The Emergency IO of the Control Box is triggered Please ground the 2 EIs of the Control Box, and then click "Enable Robot".
C3	0x03	The Emergency Stop Button of the Three-state Switch is pressed  Please release the Emergency Stop Button of the Three-state Switch, and then click "Enable Robot".
C11-C17	0x0B-0x11	Power on again.
C19	0x13	End Module Communication Error Please check whether gripper is installed and the baud rate setting is correct.
C21	0x15	Kinematic Error Please re-plan the path.
C22	0x16	Self-collision Error, Please Re-plan the Path.  If the robotic arm continues to report self-collision errors, please go to the "live control" interface to turn on the "manual mode" and drag the robotic arm back to the normal position.
C23	0x17	Joints Angle Exceed Limit  Please click the "ZERO" button to return to the zero  pozition.
C24	0x18	Speed Exceeds Limit Please check if the xArm is at singularity point, or reduce the speed and acceleration values.
C25	0x19	Planning Error Please re-plan the path or reduce the speed.
C26	0x1A	Linux RT Error Please contact technical support.

	T	
627	0x1B	Command Reply Error
C27		Pleas retry, or restart the xArm with the Emergency Stop
		Button on the xArm Control Box.
C29	0x1D	Other Errors
		Please contact technical support.
C30	0x1E	Feedback Speed Exceeds limit
	OXIL	Please contact technical support.
		Collision Caused Abnormal Current
621	0.415	Please check for collisions, check that the payload
C31	0x1F	settings are correct, and that the collision sensitivity
		matches the speed.
		Three-point drawing circle calculation error
C32	0x20	Please reset the arc command.
		Abnormal current in the robotic arm
		Check whether the robotic arm collides.
		2. Check whether the mass and center of mass set at
		"Settings"-"TCP Settings"-"TCP Payload" match the
		actual payload.
	0x21	3. Check whether the mounting direction set at
C33		"Settings"-"Mounting" matches the actual situation.
		4. Check whether the TCP payload parameters set in your
		program match the actual payload.
		5. Reduce the motion speed of the robotic arm.
		6. Go to "Settings"-"Motion"-"Sensitivity Settings" to
		lower the collision sensitivity.
		•
		Recording Timeout  The track recording duration exceeds the maximum
C34	0x22	The track recording duration exceeds the maximum
		duration limit of 5 minutes. It is recommended to
		re-record.
		Safety Boundary Limit
C35	0x23	The xArm reaches the safety boundary. Please let the
		xArm work within the safety boundary.
C36		The number of delay commands exceeds the limit
	0x24	1. Please check whether there are too many position
		detection or IO delay commands.
		2. Increase the tolerance of the position detection
		command.

C37	0x25	Abnormal Motion in Manual Mode
		Please check whether the TCP payload setting of the
		robotic arm and the installation method of the robotic
		arm match the actual settings.
		Abnormal Joint Angle
C38	0x26	Please stop the xArm by pressing the Emergency Stop
		Button on the Control Box.
520		Abnormal Communication Between Master and Slave IC
C39	0x27	of Power Board.
		Six-axis Force Torque Sensor Error
650	0x32	Please check the sensor error code, locate the problem,
C50		and power on again. If it cannot be resolved, please
		contact technical support.
	0x33	Six-axis Force Torque Sensor Mode Setting Error
651		Please make sure that the robotic arm is not in Manual
C51		Mode, check whether the given value of this command is
		0/1/2
		Six-axis Force Torque Sensor Zero Setting Error
C52	0x34	Please check the sensor communication wiring and
		whether the power is normal.
652	0x35	Six-axis Force Torque Sensor Overload
C53		Please reduce the payload or applied external force.
	0x6E	Robot Arm Base Board Communication Error
C110		Please contact technical support.
	0.17	Control Box External 485 Device Communication Error.
C111	0x6F	Please contact technical support.
<u> </u>	-	•

For alarm codes that are not listed in the above table: Power on again. If the problem remains unsolved after power on/off for multiple times, please contact technical support.

#### 3.2.2. Control Box Error Code

The error does not affect the normal operation of the robotic arm, but it may affect the operators' program operations. Once the warning occurs, the arm will set the warning flag and return it together in the command

reply. Despite that, no other operations will be performed. The robotic arm will still operate normally.

Error code	Description	Error Handling
11 (0x0B)	Buffer overflow	Control the volume of command
12 (0x0C)	Command parameter abnormal	Check sent command
13 (0x0D)	Unknown Command	Check sent command
14 (0x0E)	Command no solution	Check sent command

### 3.3. Gripper Error Code & Error Handling

Operators can power off and on the system as an error handling, the steps are as follows (re-powering needs to go through all the following steps):

- 1. Re-powering the robotic arm via the emergency stop button on the control box.
  - 2. Enable robotic arm.
  - a. xArm Studio enable mode:Click the guide button in the error pop-up window or the [Enable Robot] button on the homepage.
  - b. xArm-Python-SDK enable mode: xArm-Python-SDK Error Handling.
  - c. xArm\_ros library: users can view related documents at <a href="https://github.com/xArm-Developer/xarm\_ros">https://github.com/xArm-Developer/xarm\_ros</a>
  - 3. Re-enable the gripper.

If the problem remains unsolved after power on/off for multiple times,

#### please contact UFACTORY team for support.

Software Error Code	Error Code	Error Handling
		Gripper Current Detection Error
G9	0x09	Please restart the xArm with the Emergency Stop Button
		on the xArm Control Box.
G11	0x0B	Gripper Current Overlimit
GII	UXUB	Please click "OK" to re-enable the Gripper.
G12	0x0C	Gripper Speed Overlimit
G1Z	UXUC	Please click "OK" to re-enable the Gripper.
G14	٥٧٥٢	Gripper Position Command Overlimit
G14	0x0E	Please click "OK" to re-enable the Gripper.
C15	0x0F	Gripper EEPROM Read and Write Error
G15	UXUF	Please click "OK" to re-enable the Gripper.
630	0v14	Gripper Driver IC Hardware Error
G20	0x14	Please click "OK" to re-enable the Gripper.
G21	0x15	Gripper Driver IC Initialization Error
G21		Please click "OK" to re-enable the Gripper.
	0x17	Gripper Large Motor Position Deviation
G23		Please check if the movement of the Gripper is blocked,
		if not, please click "OK" to re-enable the Gripper.
		Gripper Command Over Software Limit
G25	0x19	Please check if the gripper command is set beyond the
		software limit.
G26	0x1A	Gripper Feedback Position Software Limit
G20	UXIA	Please contact technical support.
G33	0x21	Gripper Drive Overloaded
433	0,72,1	Please contact technical support.
G34	0x22	Gripper Motor Overload
454	UNZZ	Please contact technical support.
G36	0x24	Gripper Driver Type Error
U30	0,24	Please click "OK" to re-enable the Gripper.

### xArm-Python-SDK Error Handling:

When designing the robotic arm motion path with the Python library, if the robotic arm error (see Appendix for Alarm information) occurs, it needs to be cleared manually. After clearing the error, the robotic arm should be motion enabled.

Python library error clearing steps: (Please check GitHub for details on the following interfaces)

a. Error clearing: clean\_error()

b. Re-enable the robotic arm: motion\_enable(true)

c. Set the motion state: set\_state(0)

## 4. Technical Specifications

### 4.1.xArm5/6/7 Common Specifications

xArm		
	Х	±700mm
	Υ	±700mm
Cartesian Range	Z	-400mm~951.5mm
	Roll/Yaw/Pitch	± 180°
Maximum Joint Speed		180°/s
Reach		700mm
Repeatability		±0.1mm
Max Speed of End-effector		1m/s
*Ambient Temperature Range		0-50 °C*
Power Consumption		Min 8.4 W, Typical 200W, Max 500W

Input Power Supply	24 V DC	, 16.5 A
ISO Class Cleanroom	5	
Robotic Arm Mounting	A	ny
Programming	xArm Studio/Py	-
Robotic Arm Communication Protocol		us-TCP
End-effector I/O Interface	2 Digital inputs, 2 Digital outputs, 2 Analog inputs	
End-effector Communication Protocol	Modbı	ıs-RTU
Footprint	Ø 126	5 mm
Materials	Aluminium,	Carbon Fiber
End Tool Flange	DIN ISO 9409-1-	A50/63 (M5*6)
Control Box		
	AC Control Box	DC Control Box
Input	100-240VAC 50/60Hz	24VDC
Output	24VDC 20.8A	24VDC 16.5A
Control Box Communication Protocol	Modbus TCP	
Control Box Communication Model	Ethe	rnet
	8*CI+8*DI(Digital In) 8*CO+8*DO(Digital Out) 2*AI(Analog In)	8*CI(Digital In) 8*CO(Digital Out)
Control Box I/O Interface	2*AO(Analog Out) 1*RS-485 Master 1*RS-485 Slave	2*AI(Analog In) 2*AO(Analog Out)
Weight	3.9kg	1.6kg
Dimension(L*W*H)	285*135*101mm	180*145*68mm

### xArm accessories parameters:

Gripper		
Nominal Supply Voltage	24V DC	
Absolute Maximum Supply Voltage	28V DC	
Quiescent Power (Minimum Power	1.5W	
Peak Current	1.5A	
Working Range	86mm	
Maximum Clamping Force	30N	
Weight (g)	822g	


Communication Mode	RS-485
Communication Protocol	Modbus RTU
Programmable Gripping Parameters	Position, Speed
Feedback	Position
Vacuum	Gripper
Rated Supply Voltage	24V DC
Absolute Maximum Supply Voltage	28V DC
Quiescent Current(mA)	30mA
Peak Current(mA)	400mA
Vacuum	78%
Vacuum Flow (L/min)	> 5.6L/min
Weight (g)	610 g
Dimensions (L*W*H)	122.5 * 91.6 * 75mm
Payload (kg)	≤5kg
Noise Level (30cm away)	< 60dB
Communication Mode	Digital IO
State Indicator	Power, Working State
Feedback	Air Pressure (Low or Normal)

#### Notes:

## 4.2. xArm 5 Specifications


	1,5	±360°
	2	-118°~120°
Joint Range	3	-225°~11°
	4	-97°~180°
Payload		3kg
Degrees of Freedom		5
Weight(robotic arm only)		11.2kg

<sup>1.</sup> The ambient temperature of xArm is 0-50 °C, please reduce the temperature if continuous high-speed operation is needed.

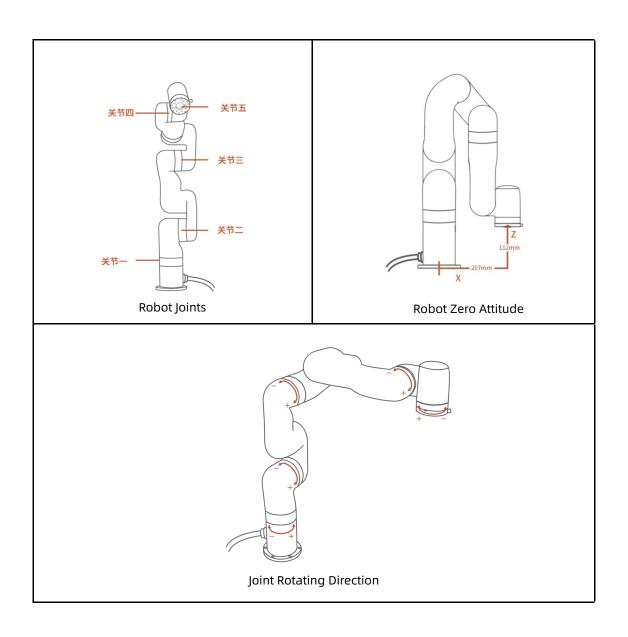

# 4.3. xArm 6 Specifications

Joint Range	1,4,6	±360°
	2	-118°~120°
	3	-225°~11°
	5	-97°~180°
Payload		5kg
Degrees of Freedom		6
Repeatability		±0.1mm
Weight(robotic arm only)		12.2kg

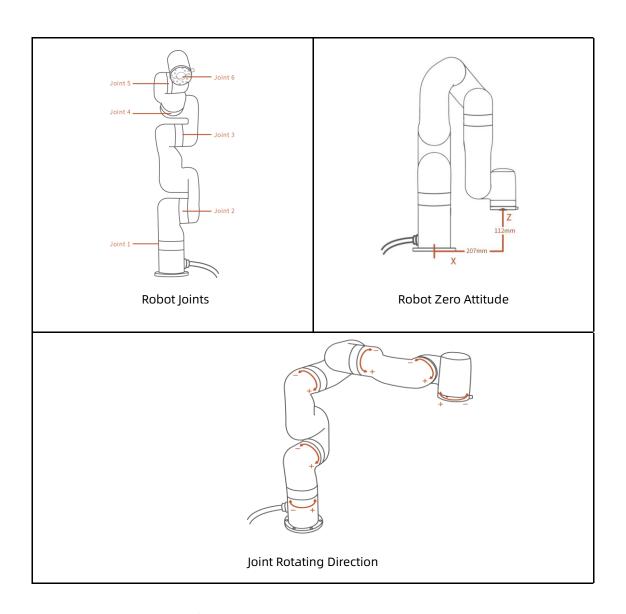

# 4.4.xArm 7 Specifications

Joint Range	1,3,5,7	±360°
	2	-118°~120°
	4	-11°~225°
	6	-97°~180°
Payload		3.5kg
Degrees of Freedom		7
Weight(robotic arm only)		13.7kg

