Assignment - 4 Assignment Date 22 October 2022 Student Name SANJAI KUMAR S Student Roll Number 611819106045 Maximum Marks 2 Marks

Question-1:

Write code and connections in wokwi for ultrasonic sensor. Whenever distance is less than 100 cms send "Alert" to ibm cloud and display in device recent events.


Solution:

```
// Pins
const int TRIG_PIN = 7;
const int ECHO_PIN = 8;
// Anything over 400 cm (23200 us pulse) is "out of range"
const unsigned int MAX_DIST = 23200;
void setup() {
 // The Trigger pin will tell the sensor to range find
 pinMode(TRIG_PIN, OUTPUT);
 digitalWrite(TRIG_PIN, LOW);
 //Set Echo pin as input to measure the duration of
 //pulses coming back from the distance sensor
 pinMode(ECHO_PIN, INPUT);
 // We'll use the serial monitor to view the sensor output
 Serial.begin(9600);
void loop() {
 unsigned long t1;
 unsigned long t2;
 unsigned long pulse_width;
 float cm;
 float inches;
 // Hold the trigger pin high for at least 10 us
```

```
digitalWrite(TRIG_PIN, HIGH);
delayMicroseconds(10);
digitalWrite(TRIG_PIN, LOW);
// Wait for pulse on echo pin
while ( digitalRead(ECHO_PIN) == 0 );
// Measure how long the echo pin was held high (pulse width)
// Note: the micros() counter will overflow after ~70 min
t1 = micros();
while (digitalRead(ECHO_PIN) == 1);
t2 = micros();
pulse\_width = t2 - t1;
// Calculate distance in centimeters and inches. The constants
// are found in the datasheet, and calculated from the assumed speed
//of sound in air at sea level (~340 m/s).
cm = pulse\_width / 58.0;
inches = pulse_width / 148.0;
// Print out results
if (pulse_width > MAX_DIST) {
 Serial.println("Out of range");
} else {
 Serial.println("********************************):
 Serial.print("The Measured Distance in cm : ");
 Serial.println(cm);
 if(cm<100)
  // while(true){
  Serial.println("Alert!!");
  // }
 Serial.print("********************************):
// Wait at least 1000ms before next measurement
delay(1000);
```

Output:


1) If the distance is less than 100 cms, it alerts.

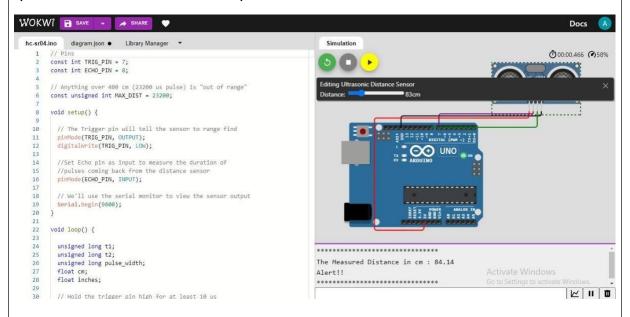


2) If the distance is more than 100 cms, it won't alert.


```
WOKWI 🔒 SAVE
                                                                                                                                                                  Docs
                                                                                          Simulation
  hc-sr04.ino
             diagram ison ● Library Manager ▼
         // Pins
                                                                                                                                                            ₫00:00.599 (%62%
         const int TRIG_PIN = 7;
         const int ECHO_PIN = 8;
         // Anything over 400 cm (23200 us pulse) is "out of range"
         const unsigned int MAX_DIST = 23200;
         void setup() {
           // The Trigger pin will tell the sensor to range find
pinMode(TRIG_PIN, OUTPUT);
    10
    11
           digitalWrite(TRIG_PIN, LOW);
                                                                                                                   OM OMO
    13
           //Set Echo pin as input to measure the duration of
//pulses coming back from the distance sensor
    14
    15
    16
           pinMode(ECHO_PIN, INPUT);
    17
    18
           // We'll use the serial monitor to view the sensor output
    19
           Serial.begin(9600);
                                                                                                                   POWER ANALOGI
    20
    21
    22
         void loop() {
    23
           unsigned long t1;
                                                                                       ****************
           unsigned long t2;
                                                                                       The Measured Distance in cm : 227.10
    26
           unsigned long pulse_width;
    27
           float cm;
                                                                                                                                         Activate Windows
           float inches;
                                                                                                                                         Go to Settings to activate Windows
                                                                                                                                                                  M II Q
         // Hold the trigger pin high for at least 10 us
```

3) Simulation and code execution

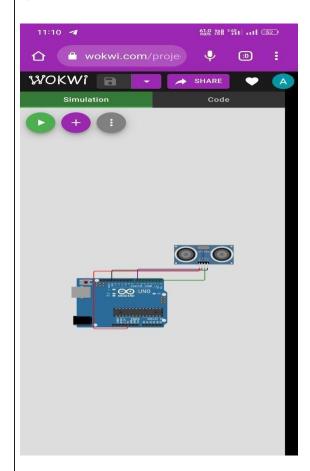



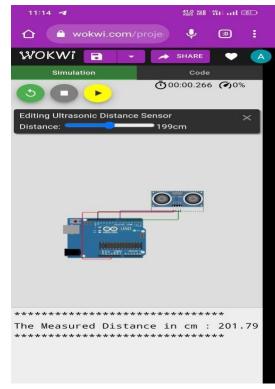

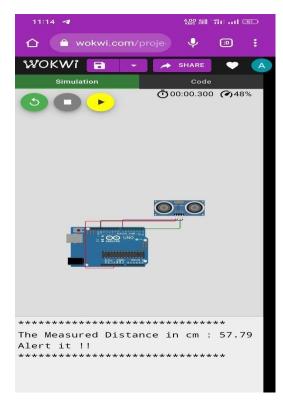

roject Link: https://wokwi.com/projects/346136429340918356					