

Wi-Fi Training - Hands On

SPG Application

Hands On Training content

2

- This presentation provides a modular training on the SPWF01 Wi-Fi module.
 - The presentation answers frequently asked questions about the module.
 - The AT command set is used to illustrate practical use cases, called labs.
- The labs familiarize the reader with the key features of the SPWF01 module.
 - Common hardware (e.g. PC & cellphone) and software (e.g. terminal emulator & browser) are needed to perform the labs.
- ST offers two different platforms for evaluating the Wi-Fi module
 - The ST-EVAL board i.e. STEVAL-IDW001V1 + STEVAL-PCC018V1
 - The Nucleo X-Pansion board i.e. X-NUCLEO-IDW01M1
 - Both evaluation boards are based on the same SPWF01 Wi-Fi module

STEVAL-IDW001V1 + STEVAL-PCC018V1

- **Hardware**

- STEVAL-IDW001V1 + STEVAL-PCC018V1, evaluation board for SPWF01SA.11 (used in the following LABs)

- **Utility software**

- CP210x USB to UART Bridge VCP Drivers (available from <http://www.silabs.com/products/mcu/Pages/USBtoUARTBridgeVCPDrivers.aspx>)
- Tera Term: terminal emulator (available from <http://en.sourceforge.jp/projects/ttssh2/releases>)
- Text Editor
- Web browser

Lab Prerequisites

X-NUCLEO-IDW01M1

- **Hardware**

- X-NUCLEO-IDW01M1, Wi-Fi expansion board based on SWPF01SA module for STM32 Nucleo
- NUCLEO-F401RE, NUCLEO-F103RB, NUCLEO-L053R8 or NUCLEO-L476RG

- **Utility software**

- **X-CUBE-WIFI1 SW package**
http://www2.st.com/content/st_com/en/products/embedded-software/mcus-embedded-software/stm32-embedded-software/stm32cube-expansion-software/x-cube-wifi1.html
- **Tera Term: terminal emulator (available from**
<http://en.sourceforge.jp/projects/ttssh2/releases>)
- **Text Editor**
- **Web browser**

Hands on chapters

- [Lab 1: HW and SW setup](#)
- [Lab 2: Set the SPWF variables](#)
- [Lab 2a: FOTA update](#)
- [Lab 3: Access point connection \(WPA or WEP\)](#)
- [Lab 4: Web client mode](#)
- [Lab 5: Web server mode – files in RAM](#)
- [Lab 6: Web server mode – files in FLASH](#)
- [Lab 7: Socket interface](#)
- [Lab 8: MiniAP mode for the first set](#)
- [Lab 9: Socket interface in MiniAP mode](#)
- [Lab 10: Web server in MiniAP mode](#)
- [Lab 11: Remote control of GPIO interfaces](#)
- [Lab 12: Input demo](#)
- [Lab 13: Socket Server](#)
- [Lab 14: Low Power Modes](#)
- [Lab 15: HW switch from STA to MiniAP](#)
- [Lab 16: IBSS mode](#)



Lab 1: HW and SW setup

6


- Objective
 - Hardware set-up
 - Software set-up
- Prerequisites
 - Work alone



Lab 1: EVAL of the SPWF01Sx.y1 module STEVAL-IDW001V1 + STEVAL-PCC018V1


7

- Plug&Play Solution
- AT command set
- Power Supplied via the USB interface
- UART/USB bridge from Silicon Lab requires to install the correspondent driver on your PC
- SMD antenna and reset button on-board

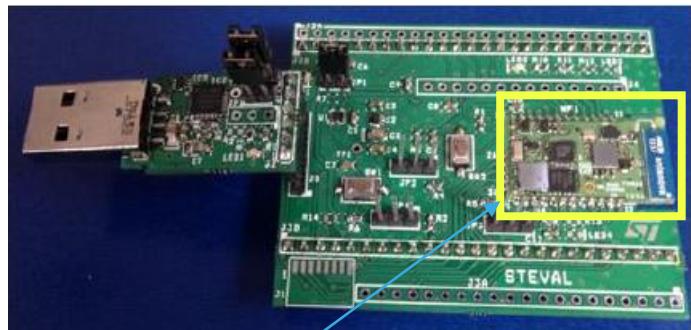

SPWF01SA.11

HyperTerminal or similar

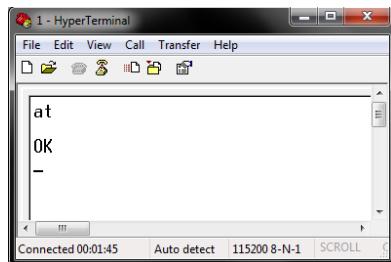


AT Commands/Events
↔
VCOM



802.11
b/g/n


Lab 1: STEVAL-IDW001V1

STEVAL-IDW001V1, evaluation board of the WiFi module SPWF01SA.11

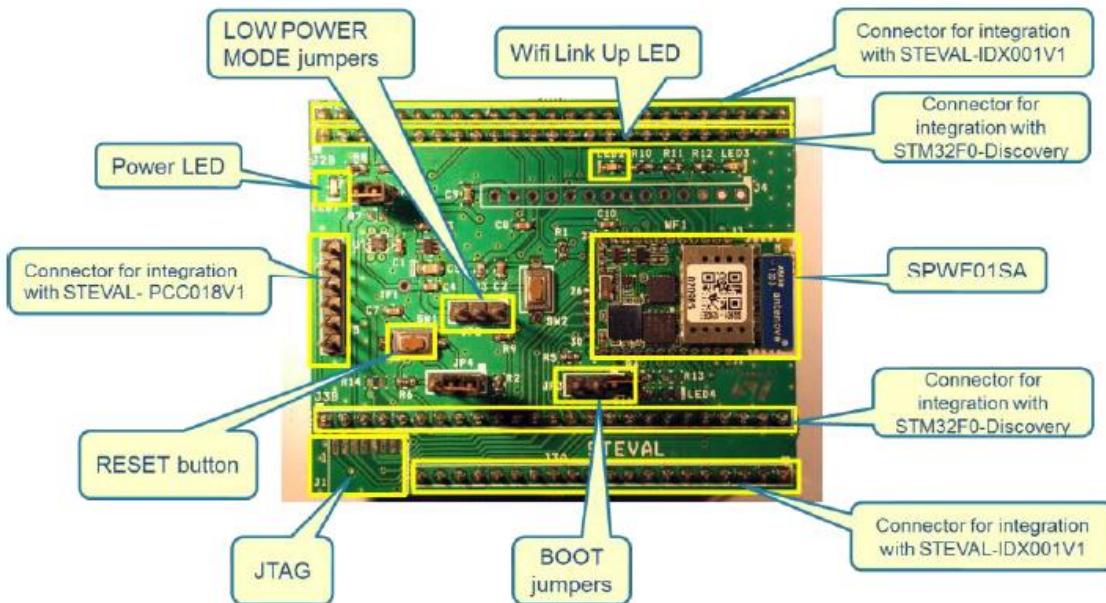

Lab 1: STEVAL-PCC018V1

STEVAL-PCC018V1, USB to UART board

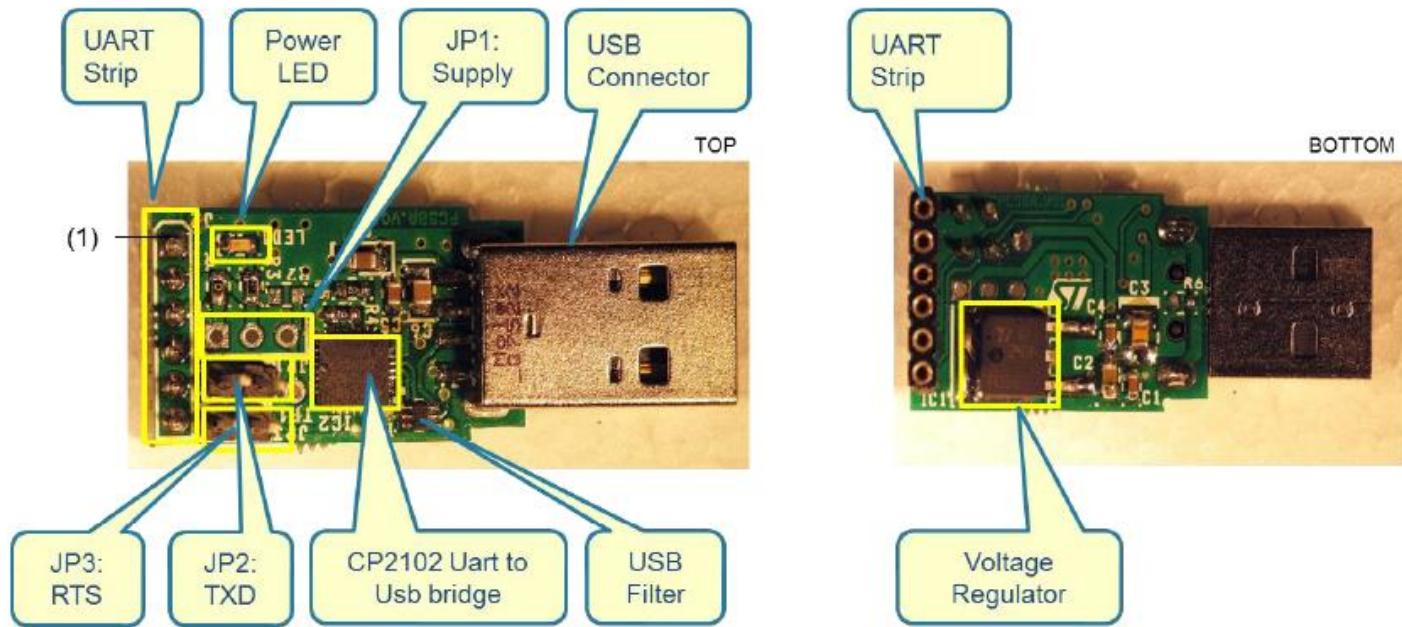


Lab 1: Hardware setup

STEVAL-IDW001V1 + STEVAL-PCC018V1



10

- Insert the jumpers in the USB to UART board as in the figure

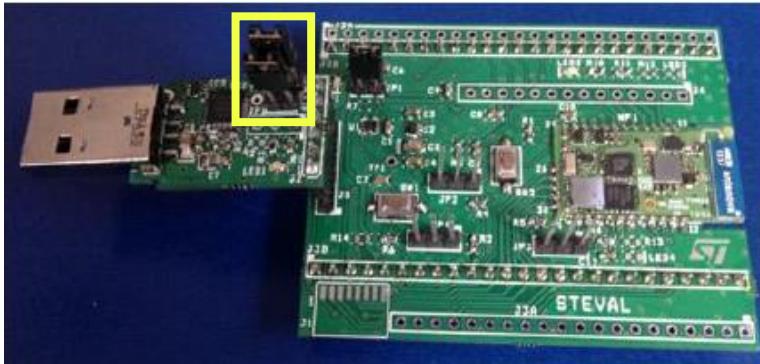

- Module automatically performs a reset*
- Module automatically performs a scan for available networks (if wifi_mode variable is ≠ 0)*
- Module automatically enters in command mode*
- STEVAL-PCC018V1: Yellow power LED will light up*
- STEVAL-IDW001V1: Yellow power LED will light up, orange wifi link up LED will light up*

- Connect the Evaluation board to the PC
- Use the Device manager to find the assigned COM port

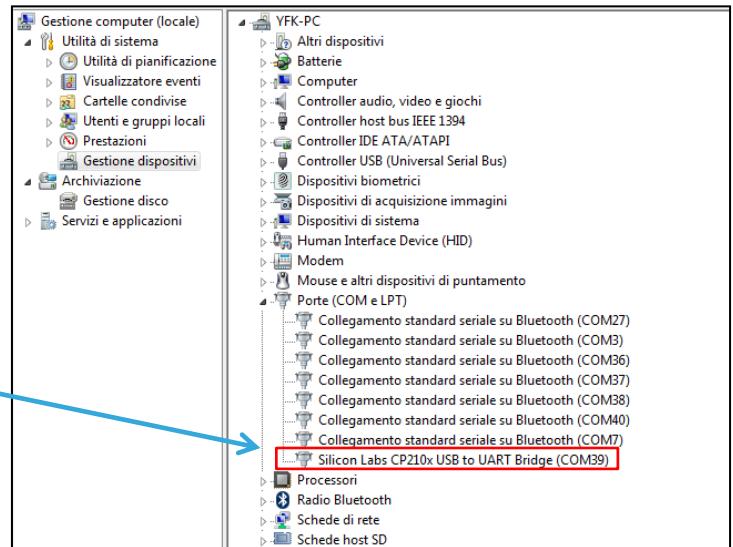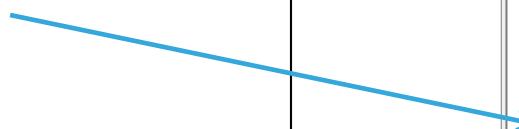


Lab 1: Configuring the UART STEVAL-IDW001V1 + STEVAL-PCC018V1

11


- Open Tera Term

- Run Tera Term (open Tera term folder and then run **ttermpro.exe**)
- Open the assigned COM port
- Tera Term: Setup → Serial port
 - Baud rate: 115200
 - Data: 8 bit
 - Parity: none
 - Stop: 1 bit
 - Flow control: none

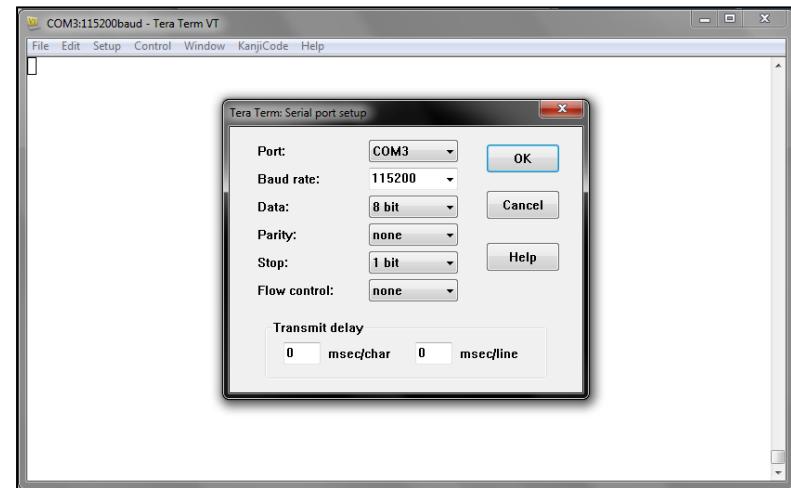

- Set CR in the Terminal setup (default config)
 - Tera Term: Setup → Terminal → Transmit: CR

Tip: the module's localecho is disabled by default.
The local echo option can be enabled on Tera Term in order to display the AT command entered

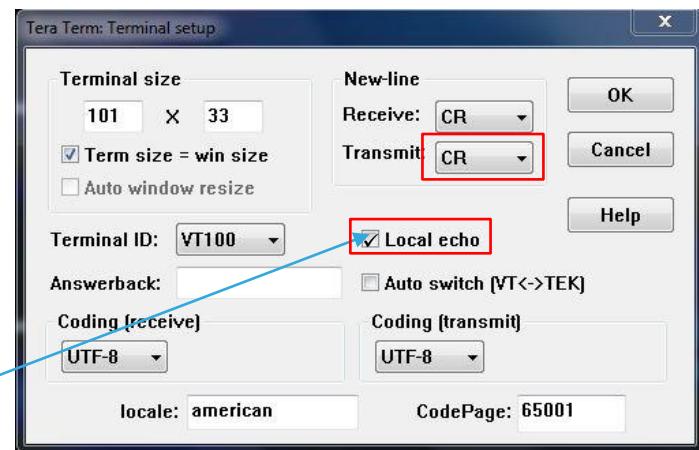

Lab 1: Configuring the UART STEVAL-IDW001V1 + STEVAL-PCC018V1

12

- Open Tera Term
- Command Mode
 - Type **AT** followed by a carriage return (CR)


Tera Term output



Lab 1: EVAL of the SPWF01Sx.y1 module X-NUCLEO-IDW01M1 & X-CUBE-WIFI1



- X-NUCLEO-IDW01M1

- X-NUCLEO-IDW01M1 is a Wi-Fi evaluation board based on SPWF01SA module

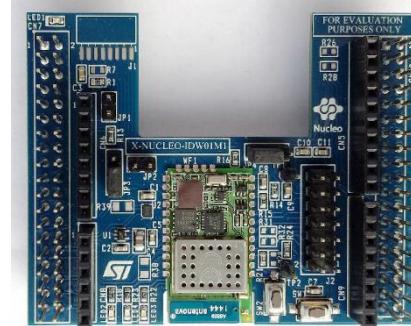

- X-CUBE-WIFI1

- X-CUBE-WIFI1 is an expansion software package for STM32Cube.
- http://www2.st.com/content/st_com/en/products/embedded-software/mcus-embedded-software/stm32-embedded-software/stm32cube-expansion-software/x-cube-wifi1.html

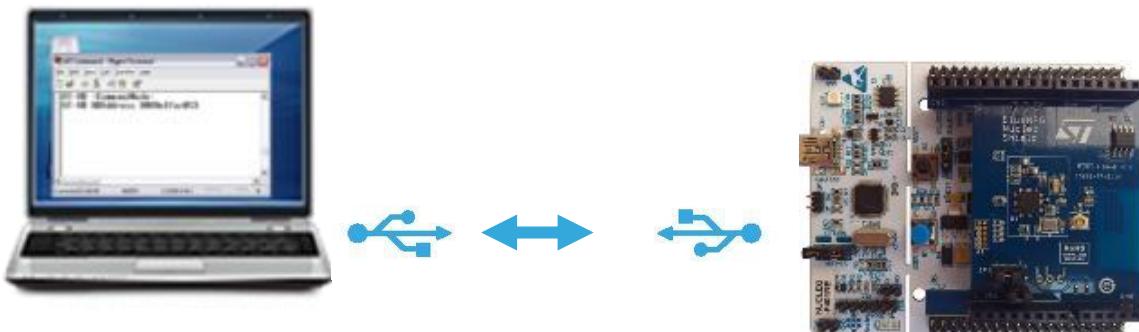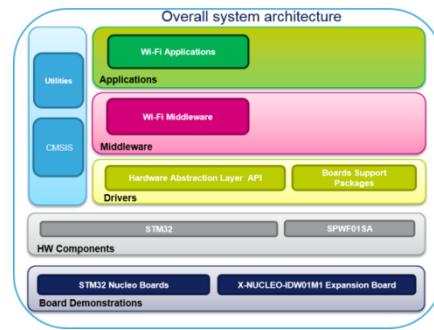




Lab 1: Set Vcom binary in Nucleo X-NUCLEO-IDW01M1 & X-CUBE-WIFI1


14

1

Flash VCOM binary into Nucleo drive

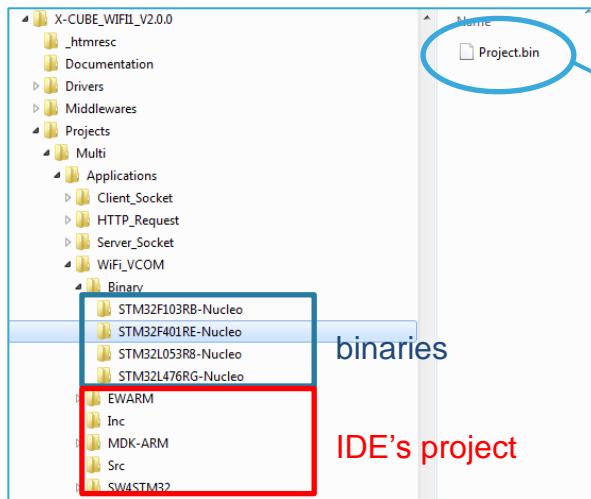

drag and drop
Project.bin
on Nucleo drive

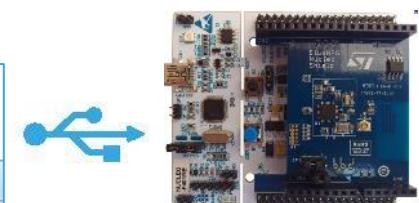

NUCLEO-F401RE,
F103RB,
L053R8
L476RG




Lab 1: Configuring the UART X-NUCLEO-IDW01M1 & X-CUBE-WIFI1

15

- ② Setup TeraTerm window in order to send AT command to Wi-Fi module


Open Hyper terminal or TeraTerm

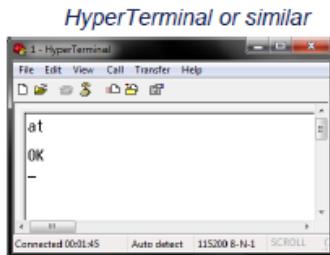


Select correct COM port



Terminal setup

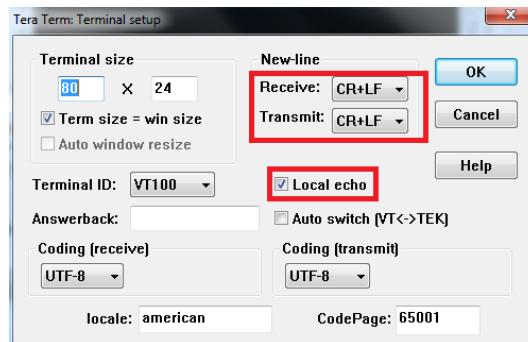

Serial port setup

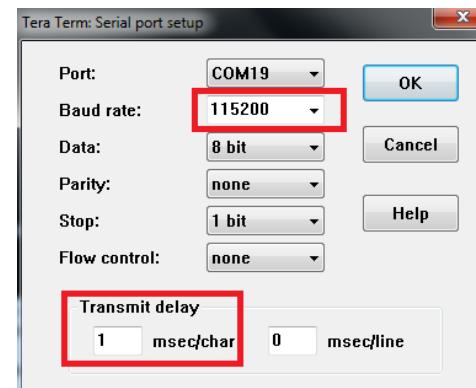

Lab 1: Configuring the UART

X-NUCLEO-IDW01M1 & X-CUBE-WIFI1

- Open Tera Term
- Command Mode
 - Type **AT** followed by a carriage return (CR)

Tera Term output





You are ready to use your Wi-Fi
EVAL board!

Lab 2: Set the SPWF variables

18

- **Objective**

- Run a command
- Get the default configuration dump
- Set host name
- Set static IP parameters
- Reset the module

- **Prerequisites**

- Work alone



Lab 2: Run a command

Run a command - Syntax

- **AT&x <CR>**
- **AT+S.[Command] <CR>**

AT Command Prefix

Not case sensitive

| Utilities | | Network | |
|-----------------|----------------------------------------|---------------|-------------------------------------|
| AT | Attention | AT+S.PING | Send a ping to a specified host |
| AT+S.HELP | Display Help Text | AT+S.SCAN | Channels Scan |
| AT+S.FWUPDATE | Perform a firmware update | AT+S.HTTPGET | Issue an HTTP GET |
| AT+S.WIFI | Enable/Disable WiFi device | AT+S.ROAM | Trigger WiFi reassociation sequence |
| File Management | | | |
| AT+S.FSC | Create a file | AT+S.FSA | Append to an existing file |
| AT+S.FSD | Delete an existing file | AT+S.FSL | List existing filename(s) |
| AT+S.FSP | Print the contents of an existing file | AT+S.HTTPDFSU | Update static HTTPD filesystem |
| Configuration | | PDATE | |
| AT+S.GCFG | Get configuration value | AT+S.GPIOC | Configure General Purpose I/O |
| AT+S.SCFG | Set configuration value | AT+S.GPIOI | Query General Purpose Input |
| AT+S.SIDTXT | Set a textual SSID | AT+S.GPIOW | Set General Purpose Output |
| AT&V | Display all configuration values | | |
| AT&F | Restore factory default settings | | |
| AT&W | Save current settings | | |
| AT+S.NVV | Write production settings | | |

Response - Syntax

xxxxxxxx

- OK
- Command output followed by OK
- ERROR: Command not found
- ERROR: Unrecognized key

Lab 2: Set the SPWF variables

21

- Get the default configuration dump
- Set host name
 - Type **AT+S.SCFG=ip_hostname,xxxxxxxx**

*Up to 31 characters (case sensitive),
"spacebar" is allowed*

Tera Term output



Lab 2: Set the SPWF variables

22

- Get the default configuration dump
- Set host name
- Set IP address, IP default gateway, IP DNS and IP netmask (for static usage)
 - Type **AT+S.SCFG=ip_ipaddr,192.168.0.1xx**
 - Type **AT+S.SCFG=ip_gw,192.168.0.1**
 - Type **AT+S.SCFG=ip_dns,192.168.0.1**
 - Type **AT+S.SCFG=ip_netmask,255.255.255.0**

Tera Term output



Lab 2: Set the SPWF variables

23

- Get the default configuration dump
- Set host name
- Set IP address, IP default gateway, IP DNS and IP netmask (DHCP off)
- Save settings on the flash memory
(mandatory after a variable change)
 - Type **AT&W**
- Reset the module
 - Type **AT+CFUN=1**

Tera Term output


All

+WIND:21:WiFi Scanning
+WIND:35:WiFi Scan Complete (0x0)

Lab 2: Set the SPWF variables

- Get the default configuration dump
- Set host name
- Set IP address, IP default gateway, IP DNS and IP netmask (DHCP off)
- Save settings on the flash memory (mandatory after a variable change) and reset the module
- Check the new configuration dump
 - Type AT&V

```
# ip_use_dhcp = 1
# ip_use_httpd = 1
# ip_mtu = 1500
# ip_hostname = ST_demo
# ip_ipaddr = 192.168.0.154
# ip_netmask = 255.255.255.0
# ip_gw = 192.168.0.1
# ip_dns = 192.168.0.1
# ip_http_get_recv_timeout = 1000
# ip_dhcp_timeout = 20
```

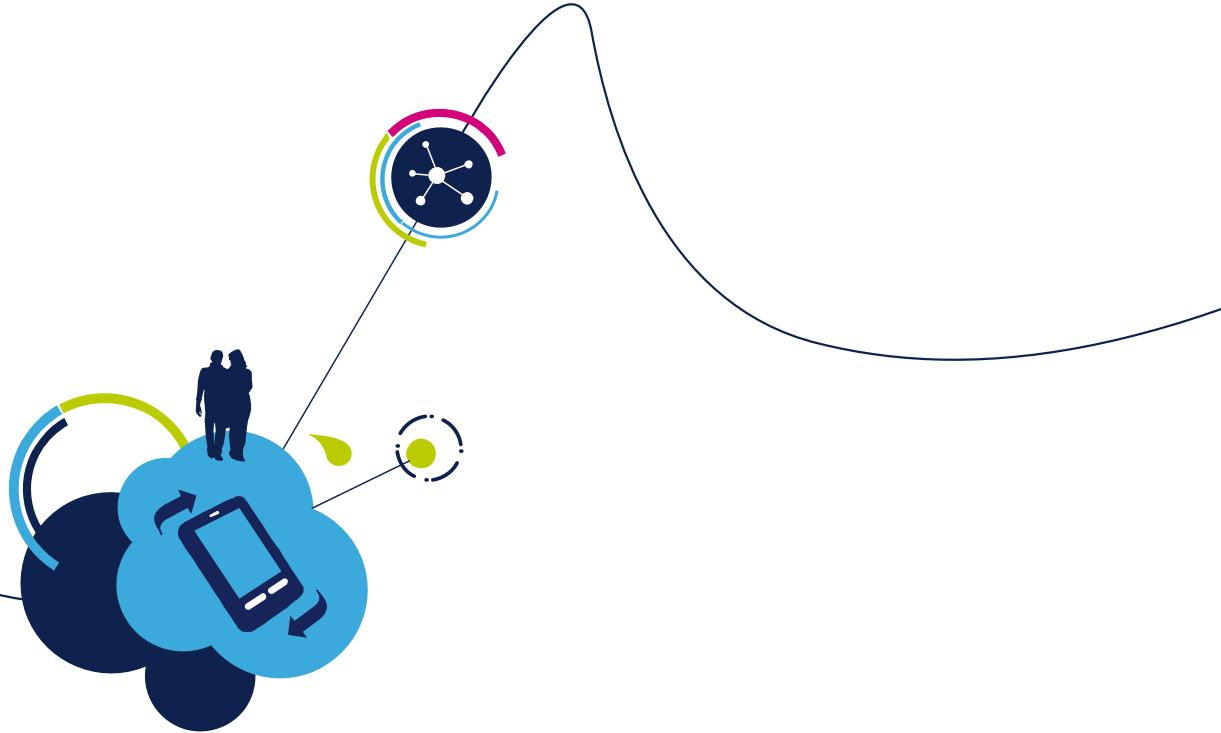

Proceed to the next LAB!

Lab 2a: FOTA update

26

- Objective
 - Upgrade the FW using the OTA file
- Prerequisites
 - OTA file (provided in the SPWF01S FW package)
 - External web server (i.e. Apache web server running on PC)



Lab 2a: FOTA update

27

The SPWF01Sx.11 module (with external flash on board) allows performing a Firmware Over-the-air update via a single HTTP GET.

The SPWF01S will validate the firmware image it downloads, load it into a staging area, then prompt the user to issue a reset command in order to complete the update.

Lab 2a: FOTA update

28

The **Apache Web Server** will be used in this LAB


(Apache Web Server is available at this link:

<http://archive.apache.org/dist/httpd/binaries/win32/httpd-2.2.25-win32-x86-openssl-0.9.8y.msi>



Note: please check that the local firewall is disabled or properly set. It can block the connection from module to Apache.

- Copy the OTA file (i.e. SPWF01S-xxxxxx-yyyyyy-RELEASE-main.ota) in the Apache 2.2 htdocs folder

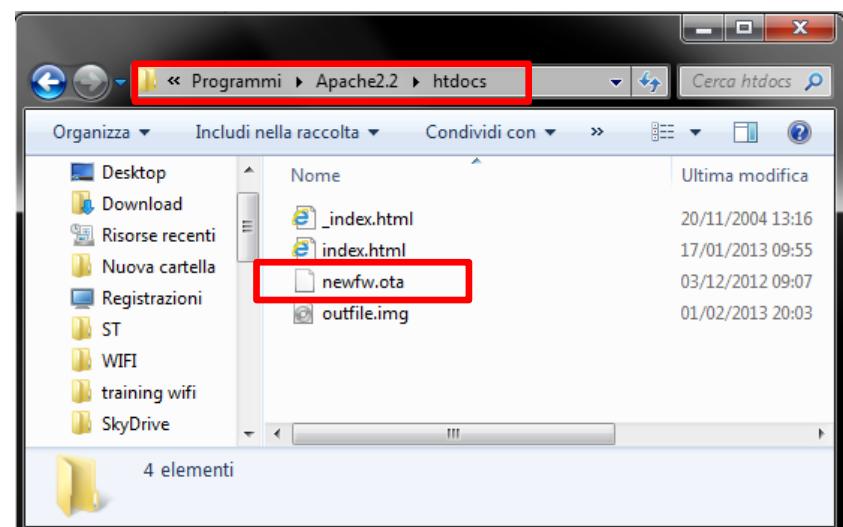

Lab 2a: FOTA update

29

The FWUPDATE command allows to perform a Firmware Over-the-air update via a single HTTP GET.

- Syntax
 - AT+S.FWUPDATE=<hostname>,<path>,<port>
- Configuration parameters
 - <hostname> Target host. DNS resolvable name or IP address
 - <path&queryopts> Document path and optional query arguments
 - <port> Target host port

Lab 2a: FOTA update

30

- The module and the Apache Web server must be connected to the same network
- In Tera Term: type **AT+S.FWUPDATE=[Apache IP address],/[ota_file.ota]**

i.e. type **AT+S.FWUPDATE=192.168.x.yyy,/SPWF01S-150410-c2e37a3-RELEASE-main.ota**

- Reset the module to apply the new FW
 - Type **AT+CFUN=1**
- Restore factory default settings (mandatory)
 - Type **AT&F**

Tera Term output

| All |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Staging F/W update for 'SPWF01SX.11' version '1203-120918_01' F/W length 276824 @ 0x00002800 (offset 0x00000000, block len 4096) Write len 4096 -> 0x0 Write len 4096 -> 0x1000 (note - deleted extra output for clarity) Write len 4096 -> 0x42000 Write len 2476 -> 0x43000 (final) Wrote 276904 bytes Complete! Update will be applied on next reboot. (at+cfun=1) |



Proceed to the next LAB!

Lab 3: Access point connection

32

- Objective
 - Scan for available networks
 - Join a network
 - Check the status/statistics variables
- Prerequisites
 - USB dongle and computer are set up as described in Lab 2
 - Work alone




Lab 3: Scan for available networks

33

The SCAN command performs an immediate scan for available networks. Infrastructure (AP) and IBSS (Ad-Hoc) networks are both reported. Network type, Channel, BSSID, SSID, Signal strength (RSSI), and 802.11 capabilities are all reported.

- Type **AT+S.SCAN**

- Scan syntax: AT+S.SCAN [=<a|p>[,<r>s|m>[,<fname>]]] -- Perform a [active/passive] network scan, [filter off/filter on SSID/filter on MAC], [print to file])

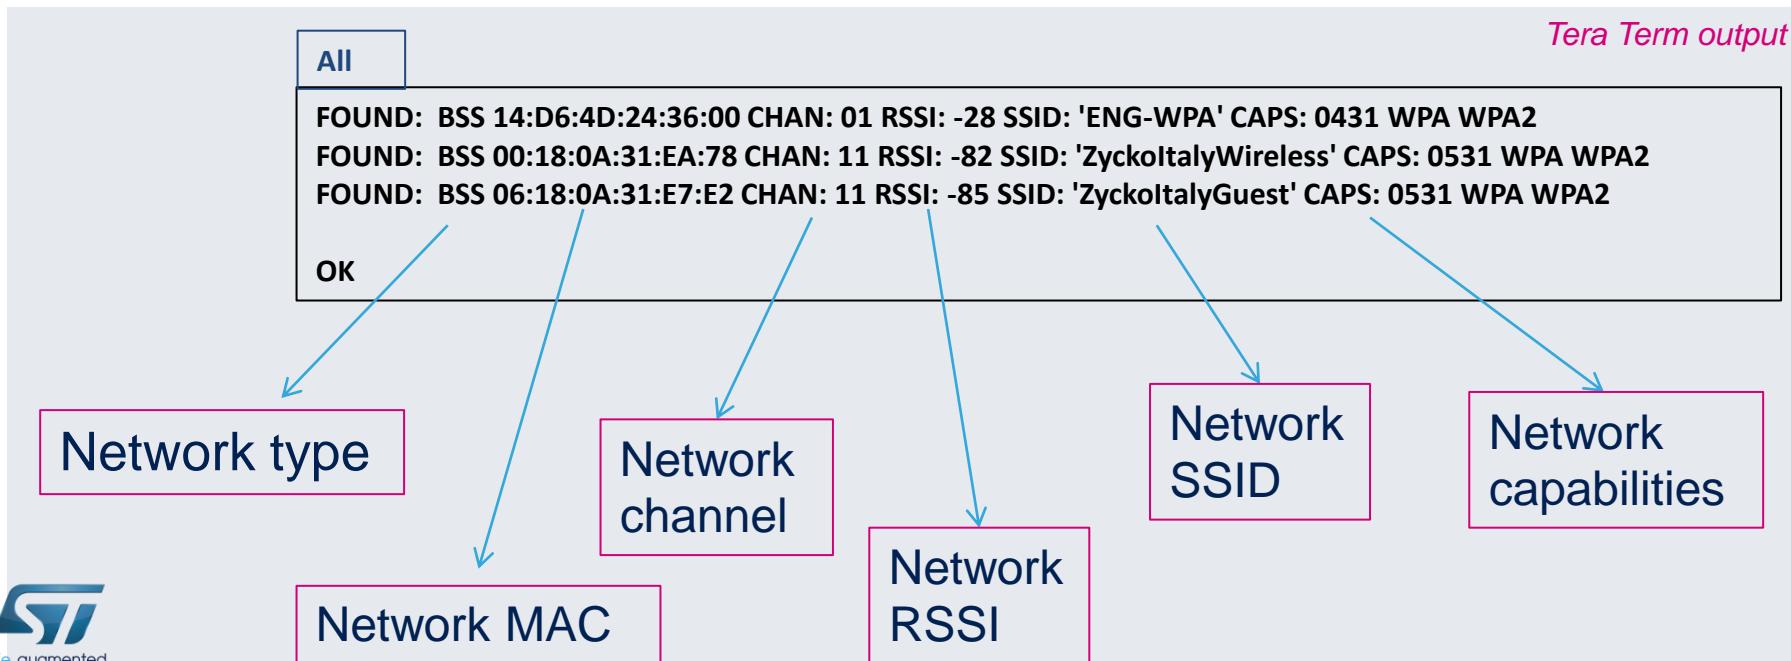

Lab 3: Joining a network (WPA Key)

In order to be connected to an available Wifi network, the AP parameters setting is needed.

- Set the SSID
 - Type **AT+S.SSIDTXT=ENG-WPA**
- Set the password
 - Type **AT+S.SCFG=wifi_wpa_psk_text,helloworld**
- Set the network privacy mode (0=none, 1=WEP, 2=WPA-Personal (TKIP/AES) or WPA2-Personal (TKIP/AES))
 - Type **AT+S.SCFG=wifi_priv_mode,2**
 - N.B. wifi_auth_type must be set to 0 → AT+S.SCFG=wifi_auth_type,0
- Set the network mode (1 = STA, 2 = IBSS, 3 = MiniAP)
 - Type **AT+S.SCFG=wifi_mode,1**

Tera Term output

All
OK

Lab 3: Joining a network (WPA Key)

- Save the settings on the flash memory and reset the module
 - Type AT&W
 - Type AT+CFUN=1



Tera Term output

| All |
|-----------------------------------------------------|
| +WIND:0:Console active |
| +WIND:46:WPA: Crunching PSK... |
| +WIND:32:WiFi Hardware Started |
| +WIND:21:WiFi Scanning |
| +WIND:35:WiFi Scan Complete (0x0) |
| +WIND:19:WiFi Join: 14:D6:4D:24:36:00 |
| +WIND:25:WiFi Association with 'ENG-WPA' successful |
| +WIND:51:WPA Handshake Complete |
| +WIND:24:WiFi Up: 192.168.0.1xx |

Lab 3: Joining a network (WPA Key)


- Check the status/statistics variables
 - Type **AT+S.STS**

```
# ip_ipaddr = 192.168.0.103
# ip_netmask = 255.255.255.0
# ip_gw = 192.168.0.1
# ip_dns = 192.168.0.1
# free_heap = 28256
# min_heap = 26496
# current_time = 39
OK
```

- Send a ping to the gateway (ip_gw)
 - Type **AT+S.PING=192.168.0.1**

Tera Term output

| |
|-----|
| All |
| OK |

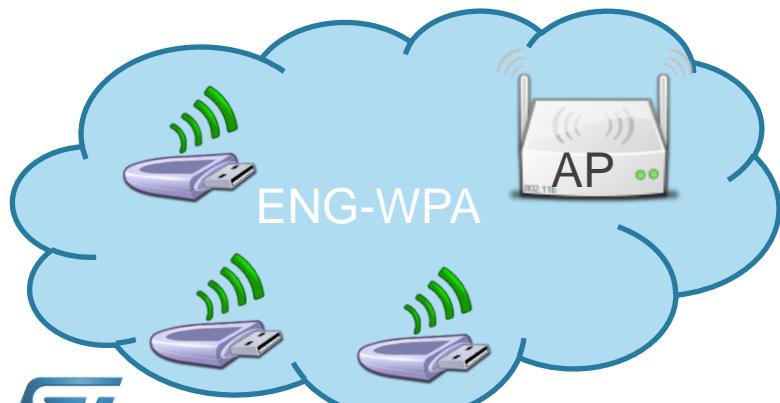

Lab 3: Joining a network (WEP Key)

Configure the module using the WEP key (4 possible combinations available)

Sample table:

| AP configuration | AT command to be used | AP configuration | AT command to be used |
|-------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Security Mode: WEP WEP Key Length: 64 bit (10 hex digits) Authentication: Open Wep Key 1: 1234567890 | i.e. at+s.ssidtxt=ENG-WEP AT+S.SCFG=wifi_wep_keys[0],1234567890 AT+S.SCFG=wifi_wep_key_lens,05 AT+S.SCFG=wifi_auth_type,0 AT+S.SCFG=wifi_priv_mode,1 AT+S.SCFG=wifi_mode,1 at&w at+cfun=1 | Security Mode: WEP WEP Key Length: 128 bit (26 hex digits) Authentication: Open Wep Key 1: 12345678901234567890123456 | i.e. at+s.ssidtxt=ENG-WEP AT+S.SCFG=wifi_wep_keys[0],1234567890123456 901234567890123456 AT+S.SCFG=wifi_wep_key_lens,0D AT+S.SCFG=wifi_auth_type,0 AT+S.SCFG=wifi_priv_mode,1 AT+S.SCFG=wifi_mode,1 at&w at+cfun=1 |
| Security Mode: WEP WEP Key Length: 64 bit (10 hex digits) Authentication: Shared Key Wep Key 1: 1234567890 | i.e. at+s.ssidtxt=ENG-WEP AT+S.SCFG=wifi_wep_keys[0],1234567890 AT+S.SCFG=wifi_wep_key_lens,05 AT+S.SCFG=wifi_auth_type,1 AT+S.SCFG=wifi_priv_mode,1 AT+S.SCFG=wifi_mode,1 at&w at+cfun=1 | Security Mode: WEP WEP Key Length: 128 bit (26 hex digits) Authentication: Shared Key Wep Key 1: 12345678901234567890123456 | i.e. at+s.ssidtxt=ENG-WEP AT+S.SCFG=wifi_wep_keys[0],1234567890123456 901234567890123456 AT+S.SCFG=wifi_wep_key_lens,0D AT+S.SCFG=wifi_auth_type,1 AT+S.SCFG=wifi_priv_mode,1 AT+S.SCFG=wifi_mode,1 at&w at+cfun=1 |


Lab 3: Joining a network (WEP Key)

Notes:

- “wifi_wep_key_lens” variable values: 05 and 0D
- It’s possible to enter any text string into a WEP key box in the AP, in which case it will be converted into a hexadecimal key using the ASCII values of the characters. A maximum of 5 text characters can be entered for 64 bit keys, and a maximum of 13 characters for 128 bit keys.
In this case, it needs to manually convert your ASCII password to HEX and complete the wifi_wep_keys[0] variable with the HEX value.

- i.e. AP WEP key: **test1**
ASCII to HEX: **74:65:73:74:31**
So, the AT command is: **AT+S.SCFG=wifi_wep_keys[0],7465737431**

- Some APs allow user to insert a passphrase and then the AP automatically generates the hex keys.
In this scenario, user have not to perform the ASCII to HEX conversion because the AP already gives it the hex value.

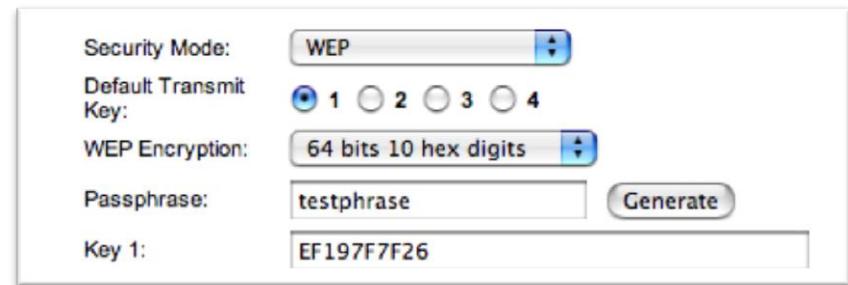



Proceed to the next LAB!

Lab 4: Web client mode

40


- Objective
 - HTTP GET
 - HTTP POST
 - PUSH DATA ON SERIAL PORT
- Prerequisites
 - USB dongle and computer are set up as described in Lab 2
 - Work in couple



Lab 4: HTTP GET

41

The HTTP GET feature performs a single HTTP request to the specified host and path. The server response is printed on the UART enabled.

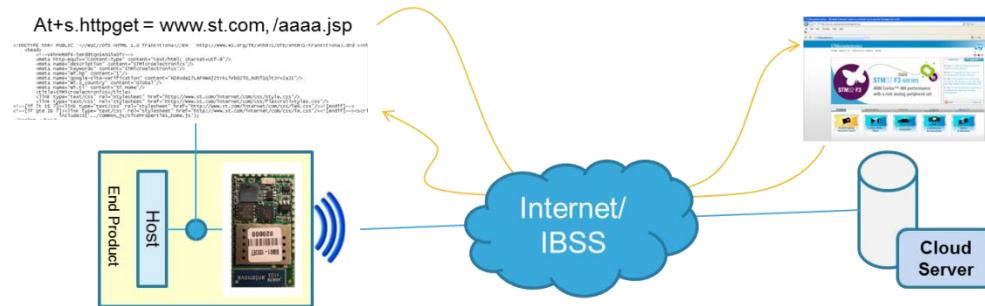

- Syntax
 - AT+S.HTTPEGT=<hostname>,<path>[,<port>]
- Configuration parameters
 - <hostname>: target host. DNS resolvable name or IP address
 - <path>: document path
 - <port>: target port

Lab 4: HTTP GET


42

- Device A performs an HTTP GET to the Device B

- Device A:

AT+S.HTTPGET=<Device B IP addr>,/index.html

Type **AT+S.HTTPGET=192.168.0.1xx,/index.html**

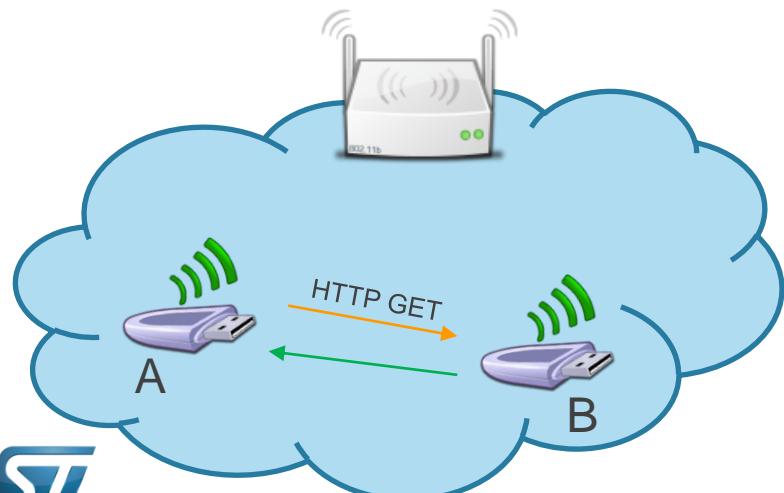

Tera Term output

Device A


```
GET /index.html HTTP/1.0
User-Agent: SPWF01S
.....
<h1>ST SPWF01Sx.11 WiFi Module</h1>
<p>
Welcome to the ST SPWF01Sx.11 WiFi Module.
</p>
<p>
This page was delivered from the SPWF01Sx.11
internal HTTP server.
.....
<a href=/status.shtml>SPWF01Sx.11 Status Page</a>
</p>
</body>
</html>

OK
```

Lab 4: HTTP POST

43


The HTTP POST performs a post of the given path to the specified host. The module can be only used as an HTTP POST client.

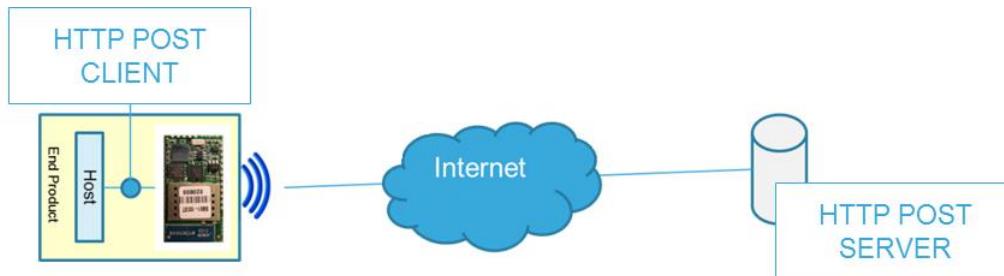

- Sintax
 - `AT+S.HTTPOST =<hostname>,<path&queryopts>,<formcontent>[,<port>]`
- Configuration parameters
 - `<hostname>`: target host. DNS resolvable name or IP address
 - `<path&queryopts>`: document path
 - `<formcontent>`: form to be submitted
 - `<port>`: target port

Lab 4: HTTP POST

- The SPWF01S performs an HTTP POST to an HTTP Post Test Server
 - Type:
`at+s.httppost=posttestserver.com,/post.php,name=demo&email=mymail&subject=subj&body=message`
- The HTTP Post Test Server replies as displayed in the Tera Term output if the HTTP POST successfully

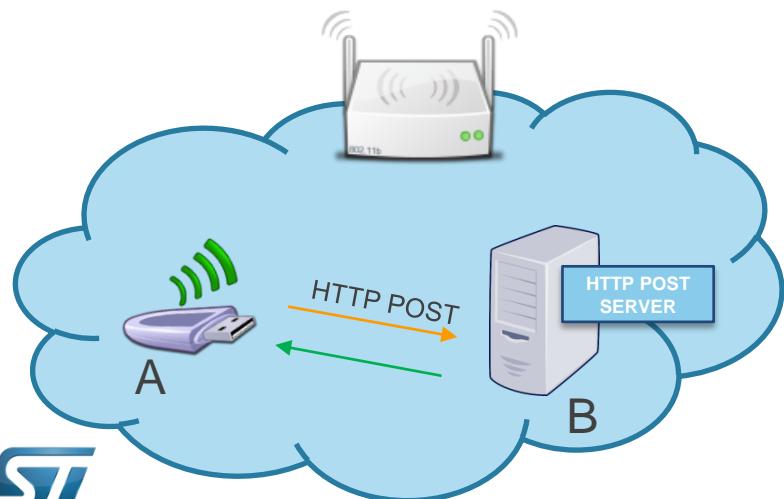

Tera Term output

Device A

```
HTTP/1.1 200 OK
Date: Fri, 10 Jan 2014 13:24:14 GMT
Server: Apache
Access-Control-Allow-Origin: *
Vary: Accept-Encoding
Content-Length: 139
Connection: close
Content-Type: text/html
```

Successfully dumped 4 post variables.
 View it at
<http://www.posttestserver.com/data/2014/01/10/05.24.1443192628>
 Post body was 0 chars long.

OK

Lab 4: HTTPREQ

- The SPWF01S can perform a custom HTTP request to a specified target. Refer to the User Manual for more details.

- Type:

AT+S.HTTPREQ=www.google.com,80,89


After <CR>, the module accepts data. We will try to open an non-existent web page:

GET /downloadTag.php HTTP/1.0<CR><LF>

User-Agent: SPWF01S<CR><LF>

Host: iwm-test<CR><LF>

Connection: close<CR><LF><CR><LF>

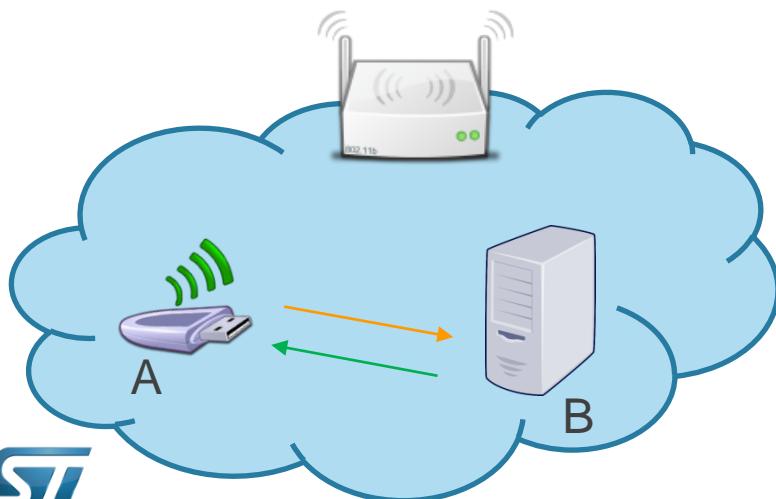

[AT+S.HTTPREQ=<hostname>,[,port],<length><CR><data>]

Tera Term output


All

```
HTTP/1.0 404 Not Found&ltCR><LF>
Date: Sun, 31 Jan 2016 14:27:04 GMT&ltCR><LF>
Content-Type: text/html&ltCR><LF>
Server: HTTP server (unknown)&ltCR><LF>
Content-Length: 49&ltCR><LF>
X-XSS-Protection: 1; mode=block&ltCR><LF>
X-Frame-Options: SAMEORIGIN&ltCR><LF>
<CR><LF>
<html><body><h1>404 Not
Found</h1></body></html><LF><CR>
<LF>
<SUB><SUB><SUB><CR><LF>
<CR><LF>
OK<CR><LF>
```

Lab 4: Push data on serial port

46

A built-in html page “output_demo.html” allows to remotely push characters on the serial port from a remote browser.

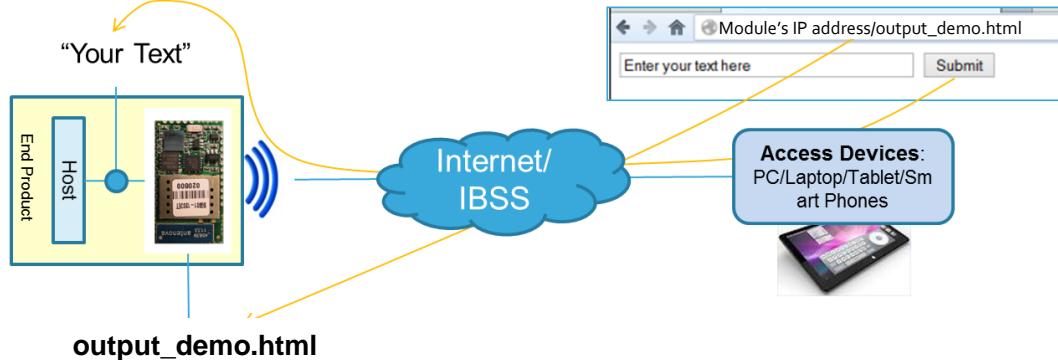


Lab 4: Push data on serial port

47

- Find your IP address
 - Type **AT+S.STS**

```
# ip_ipaddr = 192.168.0.103
# ip_netmask = 255.255.255.0
# ip_gw = 192.168.0.1
# ip_dns = 192.168.0.1
# free_heap = 28256
# min_heap = 26456
# current_time = 39
```

- Associate your computer with the AP
- Open your web browser
- In the address bar, type
<module's IP Address>/output_demo.html
 - Type
192.168.0.1xx/output_demo.html

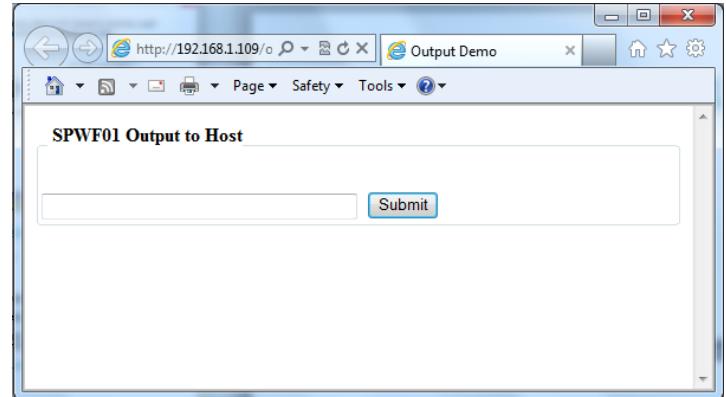


Lab 4: Push data on serial port


- Enter the text
 - In order to manage non-ASCII chars, the ip_use_decoder variable must be modified (refer to the User Manual for more details)
- Submit



Enter_your_text

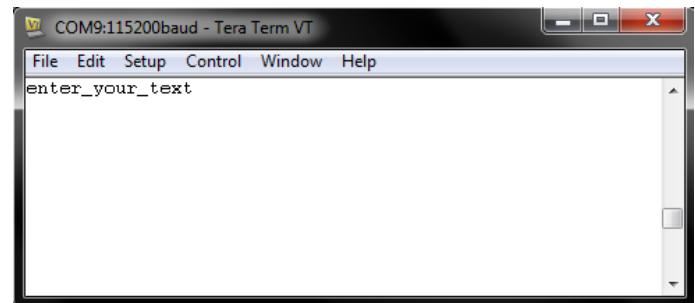

- The text will be sent to the serial port of the module

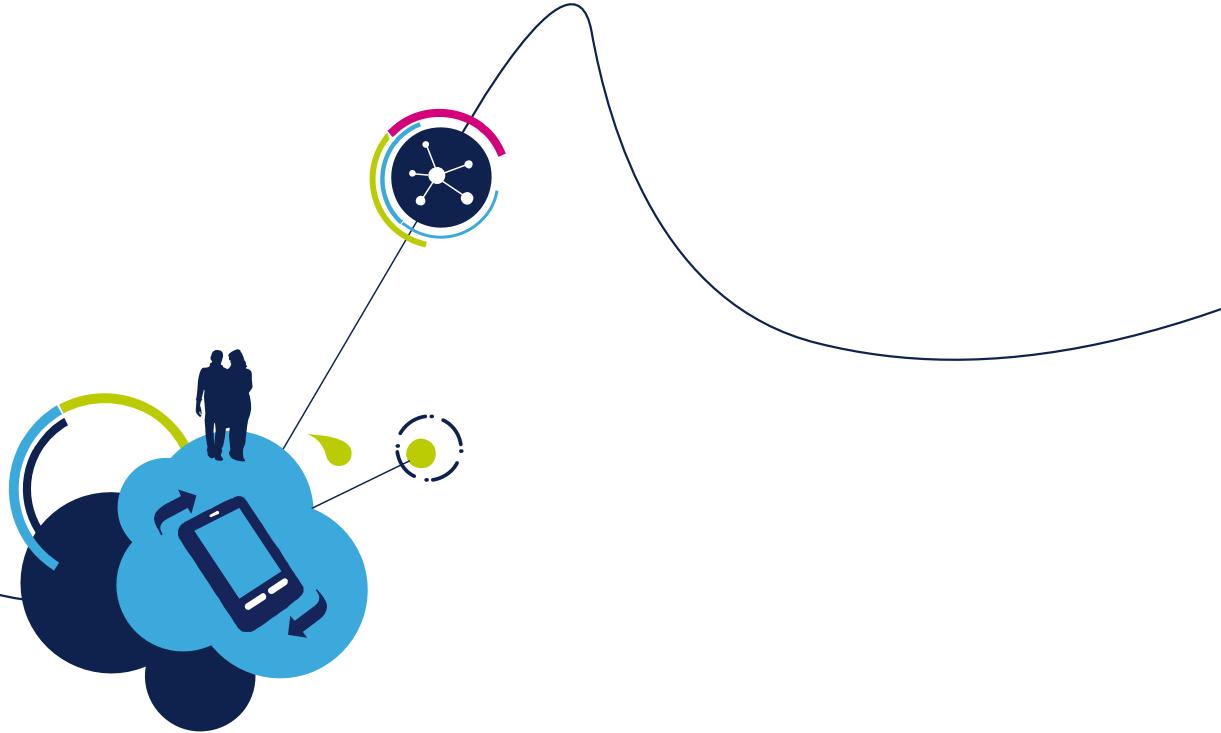

Proceed to the next LAB!

Lab 5: Web Server use mode

50


- Objective
 - List existing files
 - Print a file
 - Create a file
 - Append to an existing file
 - Delete an existing file
- Prerequisites
 - USB dongle and computer are set up as described in Lab 2
 - Work alone



Lab 5: Web server

51

The Web Server feature allows to create, print and delete ASCII files in the **RAM** memory of the module.

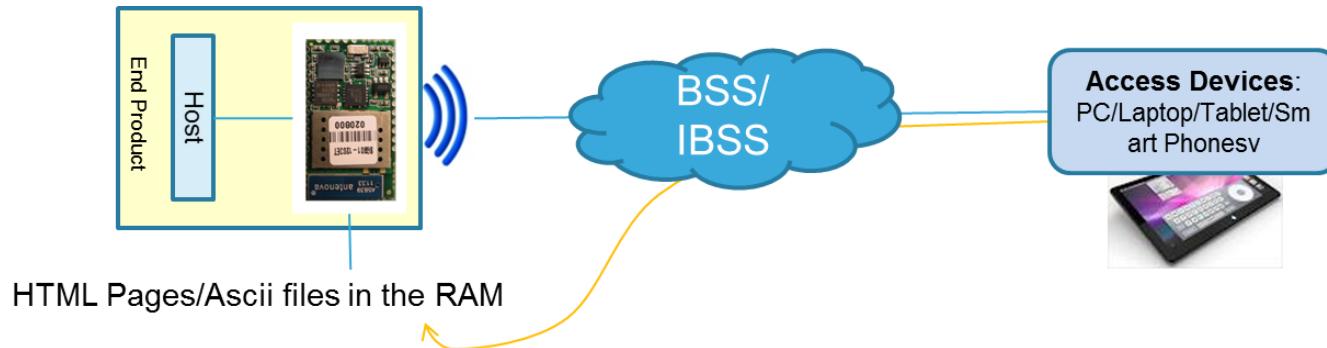

Lab 5: List existing files

52

The FSL command lists type, sizes and name of all the existing files.

- Type **AT+S.FSL**

Files stored in the STM32
FLASH memory

Tera Term output

```
All
I 461 /input_demo.shtml
I 180 /message.shtml
I 384 /output_demo.html
I 614 /index.html
I 157 /peers.shtml
I 193 /config.shtml
I 174 /status.shtml
I 212 /404.html
I 2022 /firstset.html
I 2898 /remote.html

OK
```

Lab 5: Print a file

53

The FSP command prints the content of an existing file.

- Type **AT+S.FSP=/index.html**

Tip: How to use the offset and length parameters:

AT+S.FSP=/index.html,[offset],[length]

i.e. Type AT+S.FSP=/index.html,5,20

Length parameter is mandatory if is used the offset.

Tera Term output

All

```
<html>
<head><title>ST SPWF01S</title></head>
<body bgcolor="white" text="black">
<h1>ST SPWF01S Intelligent WiFi Module</h1>
<p>Welcome to the ST SPWF01S intelligent Wi-Fi module.</p>
<p>This page was delivered from the SPWF01S internal HTTP
server.</p>
<p>
<a href=/config.shtml>SPWF01S Configuration Settings
Page</a>
</p>
<p>
<a href=/status.shtml>SPWF01S Status Page</a>
</p>
<p>
<a href=/peers.shtml>SPWF01S Peers Page</a>
</p>
<p>More information about the SPWF01S and other ST
products can be found at ST's website:
<a
href="http://www.ST.com/">http://www.ST.com/</a>.</p>
</body>
</html>
```


OK

The FSC command allows to create a file inside the SPWF for delivery by the SPWF HTTP server.

- Syntax
 - `AT+S.FSC =<fname>,<max_len>[,<http_header>]`
- Configuration parameters
 - `<filename >`: filename to create
 - `< max_len >`: amount of space to allocate for file, max = 4096 bytes
 - `<http_header>`: 0=HTML header automatically added, 1=HTML header not added (as by default)


Type **AT+S.FSC=/wifidemo.html,1965**

Tera Term output

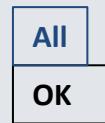

Lab 5: Configuring the UART

- Set CR+LF in the Terminal setup (to properly paste text in the terminal):
 - Tera Term: Setup → Terminal → Transmit: CR+LF

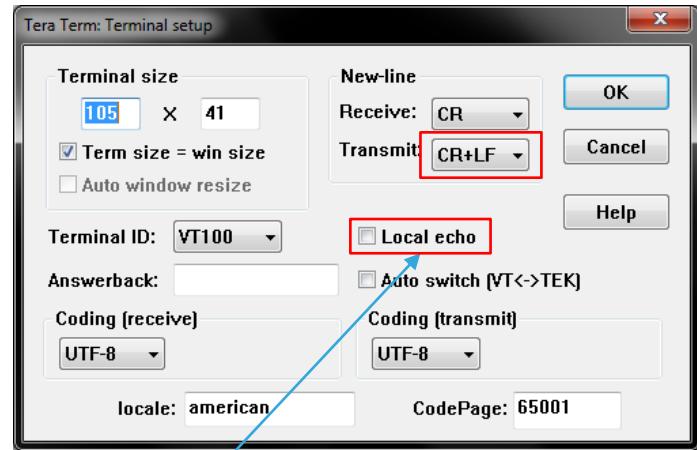

Tip: The local echo option must be disabled on Tera Term.

Added in FW 3.5: using the AT+S.FSR command, user can rename dynamic files stored in the RAM memory. Refer to the User Manual for more details

Lab 5: Append to an existing file

56

The FSA command allows to append blocks of data to an existing file.

This command accepts data after the <cr> at the end of the command line.

- Sintax
 - AT+S.FSA=/<filename>,<datalen>
- Configuration parameters
 - < filename >: filename pre-created
 - < datalen >: number of characters to append to the file

Type **AT+S.FSA=/wifidemo.html,1965**

Tips

Now SPWF accepts data

Lab 5: Append to an existing file

57

- Open wifidemo.txt in the following directory: Hands_on folder/HTML_demo_page
- Check you have set up CR+LF in the Terminal setup (for more information, **refer to the slide 48**)


- Copy the file content into Tera term (paste with ALT+V or mouse right button)

Tera Term output




Lab 5: Append to an existing file

- Open wifidemo.html
 - Open your Web browser (suggested Google Chrome for HTML5 test)
 - In address bar, type <SPWF IP addr>/wifidemo.html
- Type **192.168.0.1xx/wifidemo.html**

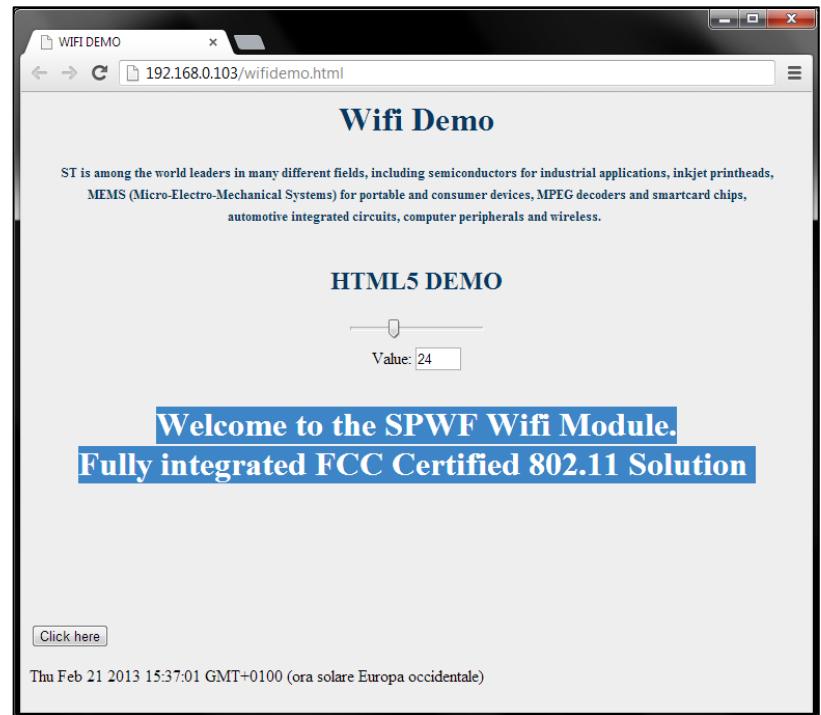

Lab 5: Configuring the UART

- Re-set CR in the Terminal setup as by default
 - Tera Term: Setup → Terminal → Transmit: CR

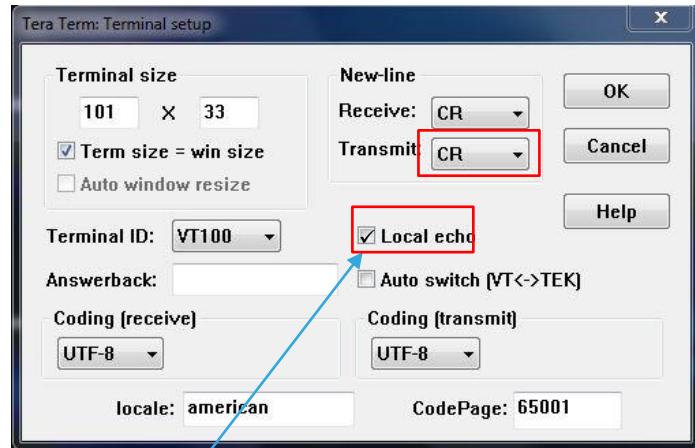

Tip: The local echo option can be re-enabled on Tera Term.


Lab 5: List existing files

60

Let's list the files

- Type **AT+S.FSL**

Tera Term output

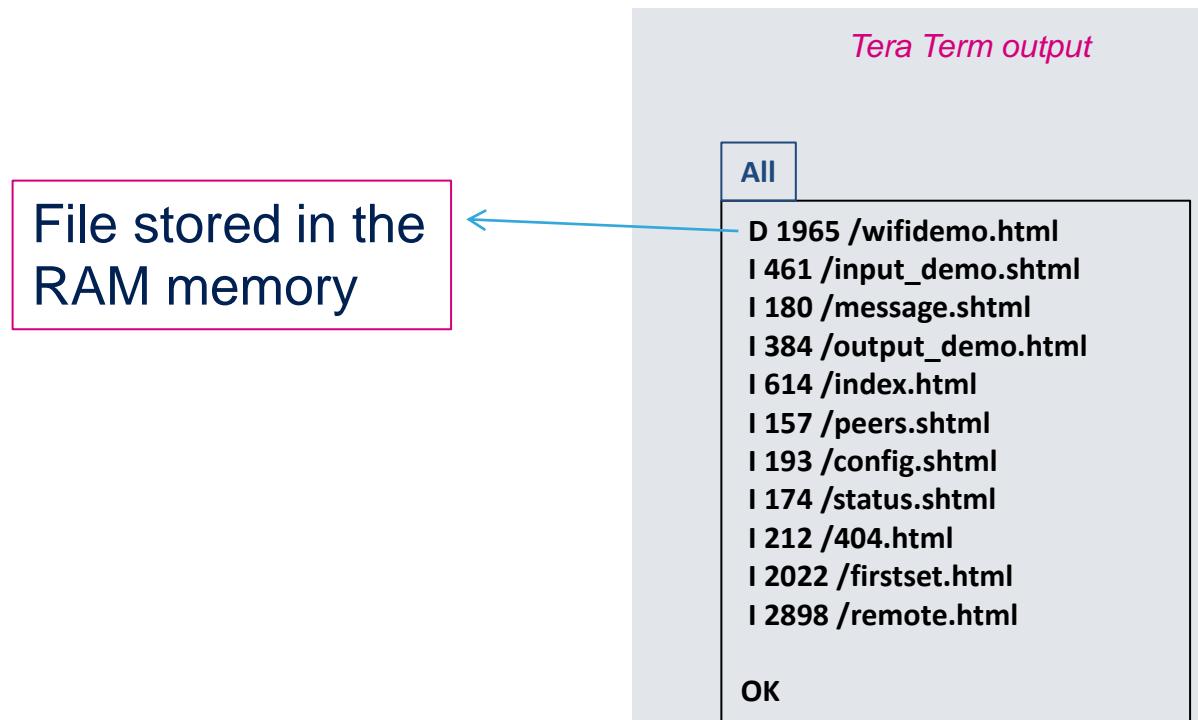

The screenshot shows a terminal window titled "Tera Term output". The window displays a list of files with their respective sizes and paths. The first item in the list is highlighted with a pink callout box containing the text "File stored in the RAM memory". An arrow points from this callout box to the file entry "D 1965 /wifidemo.html".

| | All |
|---|-----------------------|
| D | 1965 /wifidemo.html |
| I | 461 /input_demo.shtml |
| I | 180 /message.shtml |
| I | 384 /output_demo.html |
| I | 614 /index.html |
| I | 157 /peers.shtml |
| I | 193 /config.shtml |
| I | 174 /status.shtml |
| I | 212 /404.html |
| I | 2022 /firstset.html |
| I | 2898 /remote.html |

OK

Lab 5: Delete an existing file

61

The FSD command allows to delete an existing file by name. Static files may not be deleted.

- Syntax
 - **AT+S.FSD=/<filename>**

Type **AT+S.FSD=/wifidemo.html**

Tera Term output



Lab 5: Delete an existing file

62

- Re-open wifidemo.html
 - Open your Web browser
 - In address bar: <SPWF IP addr>/wifidemo.html
- Type **192.168.0.1xx/wifidemo.html**





Proceed to the next LAB!

Lab 6: Web Server use mode

64

- Objective
 - Create an image file
 - Filesystem update over-the-air
 - Filesystem update over UART
- Prerequisites
 - Work alone




Lab 6: Web server

65

The Web Server feature also allows to upload generic files (PDF, HTML, DOC, JPEG and so on) in the **EXTERNAL FLASH** memory of the module. It needs to follow the below steps:

- create an image file (IMG) using the tool provided in the Hands-on package (the IMG contains the files to upload)
- Put the image in a generic and accessible Web Server (Apache Web server will be used in the Hands-on as example)
- Using the proper AT command, the IMG will be retrieved over-the-air and the static files will be created in the external flash memory

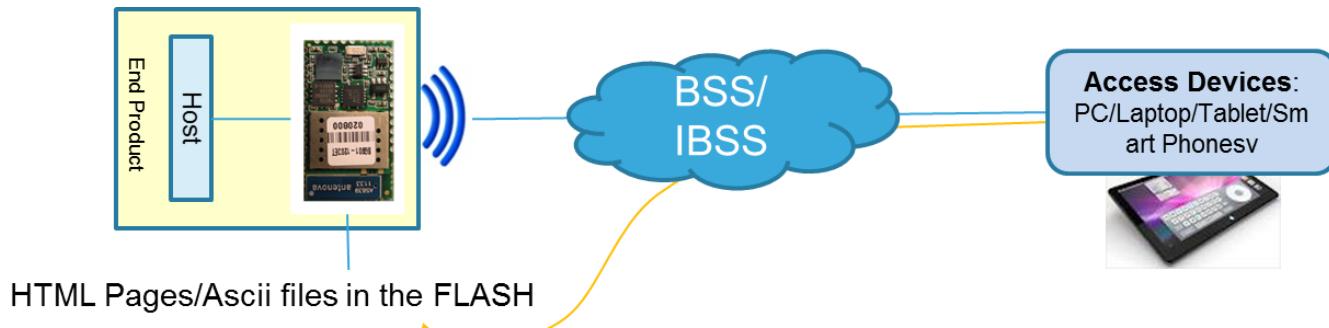



Lab 6: Create an image file

- Open the following folder and extract all the files:

..../hands_on_wifi/filesystem_update

- Put your own files to upload in the **pages** folder (max 512 Kbytes)
- Run gen.bat

- Open the **pages** folder and copy outfile.img in your external Web Server (Apache)

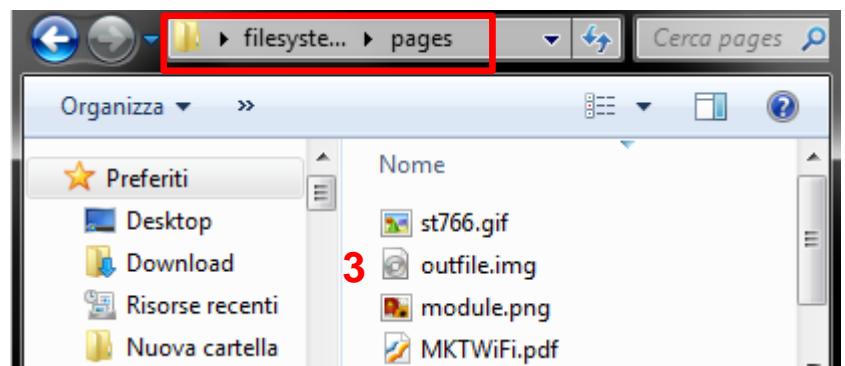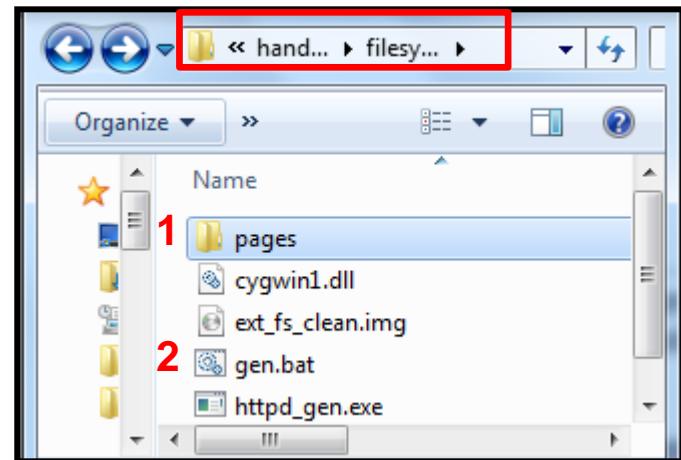

Lab 6: Create an image file

67

The **Apache Web Server** will be used in this tutorial


(Apache Web Server is available at this link:

<http://archive.apache.org/dist/httpd/binaries/win32/httpd-2.2.25-win32-x86-openssl-0.9.8y.msi>)



Note: please check that the local firewall is disabled or properly set. It can block the connection from module to Apache.

- Copy `outfile.img` in the Apache 2.2 *htdocs* folder (this is the default root server directory)

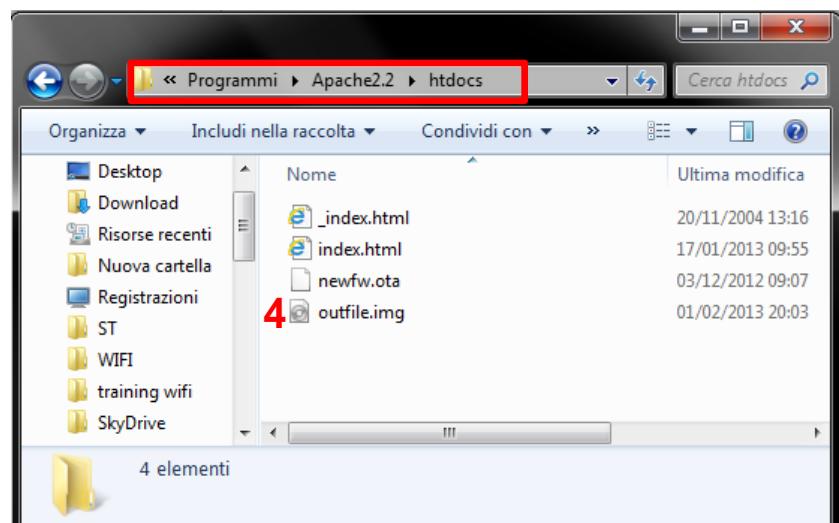

Lab 6: Filesystem update

68

The HTTPDFSUPDATE command allows to create static files inside the SPWF for delivery by the SPWF HTTP server.

- Syntax
 - AT+S.HTTPDFSUPDATE=<hostname>,<path>[,port]
- Configuration parameters
 - <hostname>: external web server. DNS resolvable name or IP address
 - <path>: document path
 - <port>: target host port

Lab 6: Filesystem update

- In Tera Term: type
AT+S.HTTPDFSUPDATE=192.168.x.10x,/outfile.img

Warning

The file system will be permanently deleted.
The new IMG will overwrite the existent files in the file system

- Reset the module
 - Type **AT+CFUN=1**

Tera Term output

All

```
Image length 357957 (offset 0x00080000, block len 4096)
Write len 4096 -> 0x80000
Write len 4096 -> 0x81000
Write len 4096 -> 0x82000
.....
.....
.....
Write len 4096 -> 0xD6000
Write len 1612 -> 0xD7000 (final)
Wrote 357964 bytes
Complete! Please reboot. (at+cfun=1)

OK
```

Lab 6: Filesystem update

70

Let's list the files

- Type **AT+S.FSL**

Files stored in
the EXT FLASH
memory

Tera Term output

| All |
|-------------------------|
| E 2615 /st766.gif |
| E 112374 /module.png |
| E 2430 /index1.html |
| E 419 /index.html |
| E 239887 /MKT WiFi.pdf |
| I 461 /input_demo.shtml |
| I 180 /message.shtml |
| I 384 /output_demo.html |
| I 614 /index.html |
| I 157 /peers.shtml |
| I 193 /config.shtml |
| I 174 /status.shtml |
| I 212 /404.html |
| I 2022 /firstset.html |
| I 2898 /remote.html |

OK

Lab 6: Filesystem update

- Open index1.html page
 - Open your web browser
 - In the address bar: <SPWF IP addr>/index1.html
- Type **192.168.x.1xx/index1.html**

The screenshot shows a web browser window titled "WIFI DEMO". The address bar contains "192.168.0.101/index1.html". The page itself is titled "SPWF DEMO" and features an image of a WiFi module labeled "AS839 antenova" and "BBB1-120SET 020800". Below the image is a table:

| Part Number | Antenna Option | SW Library |
|-------------|----------------|------------|
| SPWF01SA.11 | Chip Antenna | Full Stack |
| SPWF01SC.11 | U.FL | Full Stack |

At the bottom of the page, there is a footer note: "ST is among the world leaders in many different fields, including semiconductors for industrial applications, inkjet printheads, MEMS (Micro-Electro-Mechanical Systems) for portable and consumer devices, MPEG decoders and smartcard chips, automotive integrated circuits, computer peripherals and wireless."

Below the main content, the text "HTML5 DEMO" is visible.

Lab 6: Filesystem erase

72

Erase the external httpd filesystem

- Type **AT+S. HTTPDFSERASE**

The files stored in the EXT FLASH memory will be erased

Let's list the files

- Type **AT+S.FSL**

Tera Term output

All

```
I 461 /input_demo.shtml  
I 180 /message.shtml  
I 384 /output_demo.html  
I 614 /index.html  
I 157 /peers.shtml  
I 193 /config.shtml  
I 174 /status.shtml  
I 212 /404.html  
I 2022 /firstset.html  
I 2898 /remote.html
```

OK

Lab 6: Filesystem update

73


The HTTPDFSWRITE command allows to create static files inside the SPWF via the UART interface. The HW flow control **MUST** be enabled in order to use the command.

- Syntax
 - AT+S.HTTPDFSWRITE =<datalen><CR><data>
- Configuration parameters
 - <datalen>: Amount of bytes to be sent

Lab 6: Filesystem update

74

- Type **AT+S. HTTPDFSWRITE=357957**
- In Tera Term: File – Send File...

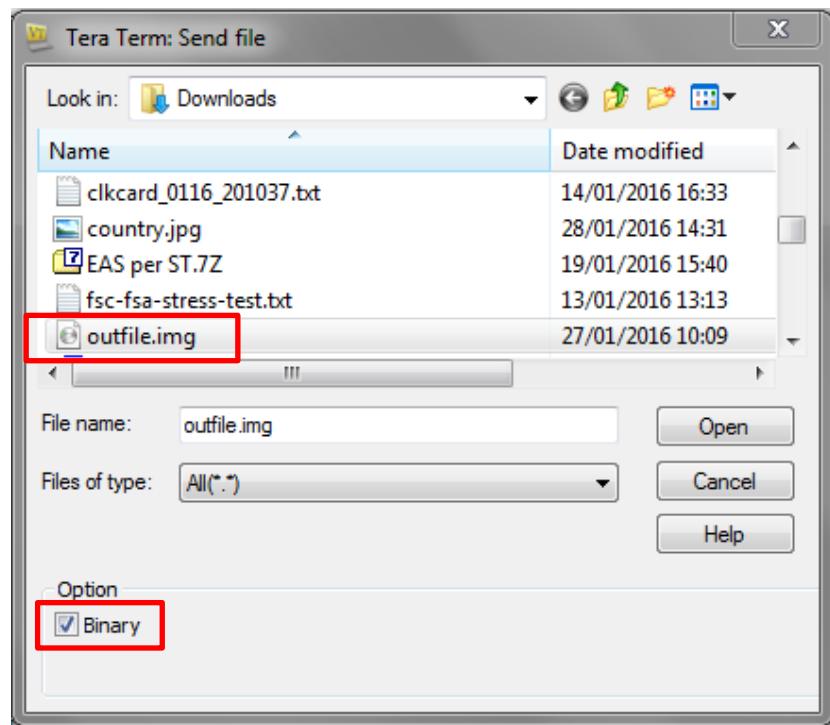

Tera Term output

All

```
Image length 357957 (offset 0x00080000, block len 4096)
Write len 4096 -> 0x80000
Write len 4096 -> 0x81000
Write len 4096 -> 0x82000
.....
.....
.....
Write len 4096 -> 0xD6000
Write len 1612 -> 0xD7000 (final)
Wrote 357964 bytes
Complete! Please reboot. (at+cfun=1)
```

OK

Warning

The file system will be permanently deleted.
The new IMG will overwrite the existent files in the file system

- Reset the module
- Type **AT+CFUN=1**




Proceed to the next LAB!

Lab 7: Socket interface

76


- Objective
 - Open TCP/UDP connection
 - Write data to socket
 - Read data from socket
 - Close socket
- Prerequisites
 - Work alone

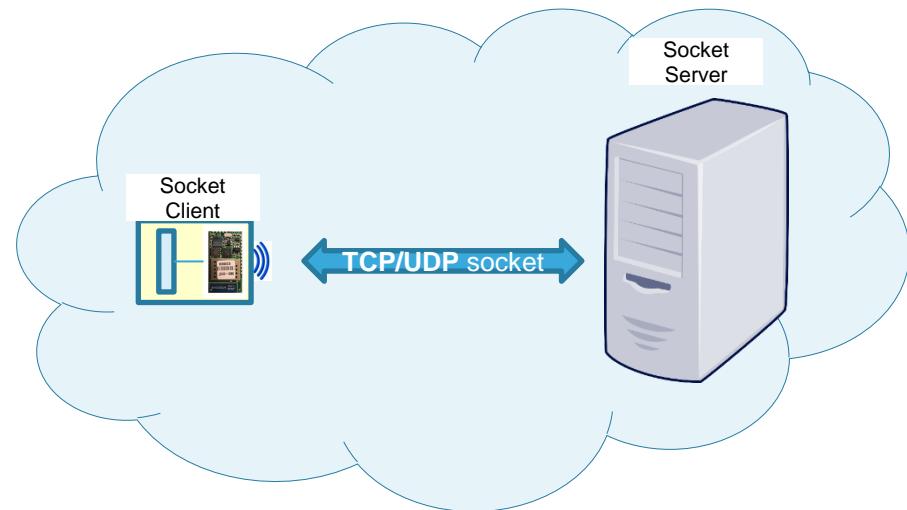

Lab 7: TCP/UDP/UART socket interface

77

The Socket interface allows communication via TCP, UDP and UART. The SPWF is both a client and a server socket. In this LAB, will be detailed the socket client feature.

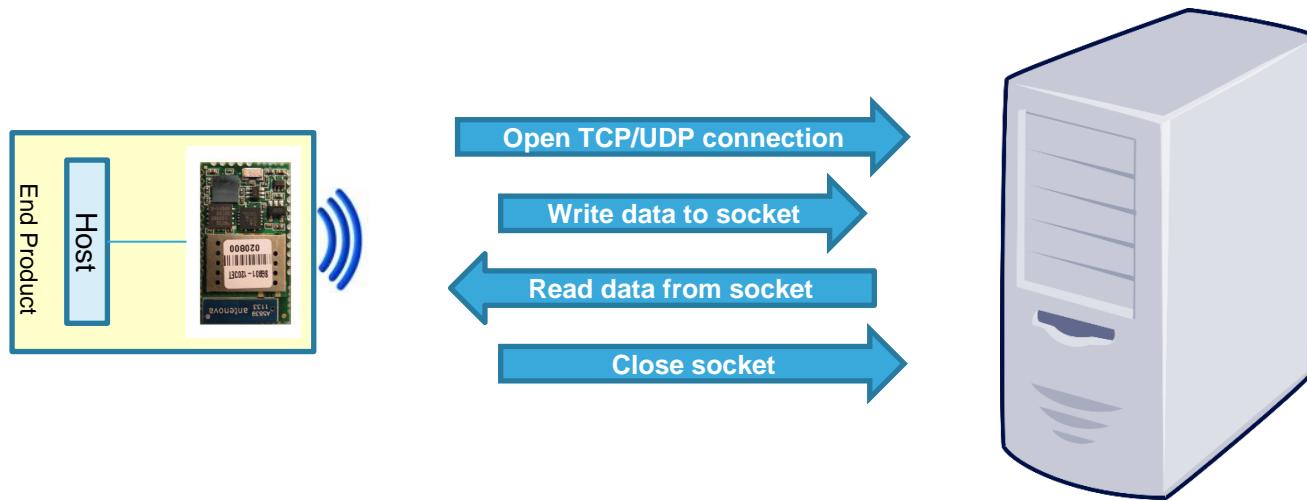

Lab 7: Open TCP/UDP connection

78


The SOCKON command allows to open a TCP/UDP connection to a specified host (up to 8 socket connections at same time).

- Syntax
 - AT+S.SOCKON=<hostname>,<port>,<protocol>,ind
- Configuration parameters
 - <hostname>: target host. DNS resolvable name or IP address
 - <port>: TCP/UDP socket port
 - <protocol>: *t* for TCP socket, *u* for UDP socket
 - ind: indicate when data has arrived (optional). Up to 4 (x730 bytes) consecutive “Pending data” message (without any AT+S.SOCKR) are guaranteed. It is suggested to empty the buffer using the **AT+S.SOCKR** command and to avoid exceeding 4 indications.

Lab 7: Open TCP/UDP connection

79

- Open the TCP socket server (disable the firewall to properly run it)
 - Folder/hands_on_wifi/tcp socket server/server.exe
- The TCP server listens for incoming connections on the port 32000. It sends back all data received.

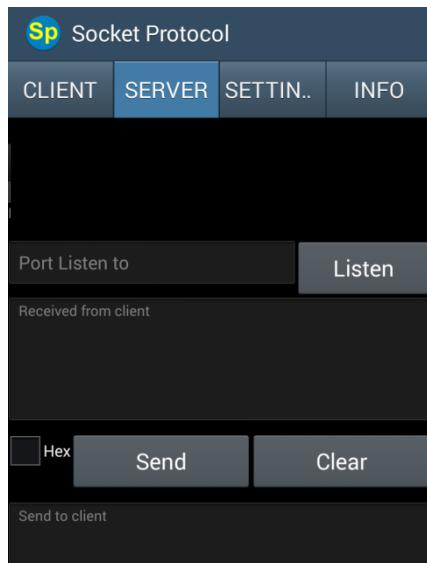


```
C:\Documents and Settings\root\Desktop\demo socket\tcp socket s...
socket created
socket linked to local port 32000
wait somebody
```

Optional - Lab 7: Open TCP/UDP connection


80

- Using an Android platform, the socket server can be opened using a specific APP (Socket Protocol, available on Play Store)
- The TCP socket server can be configured to listen for incoming connections on the port 32000.
 - Type 32000 on «Port Listen to» box
 - Click on Listen

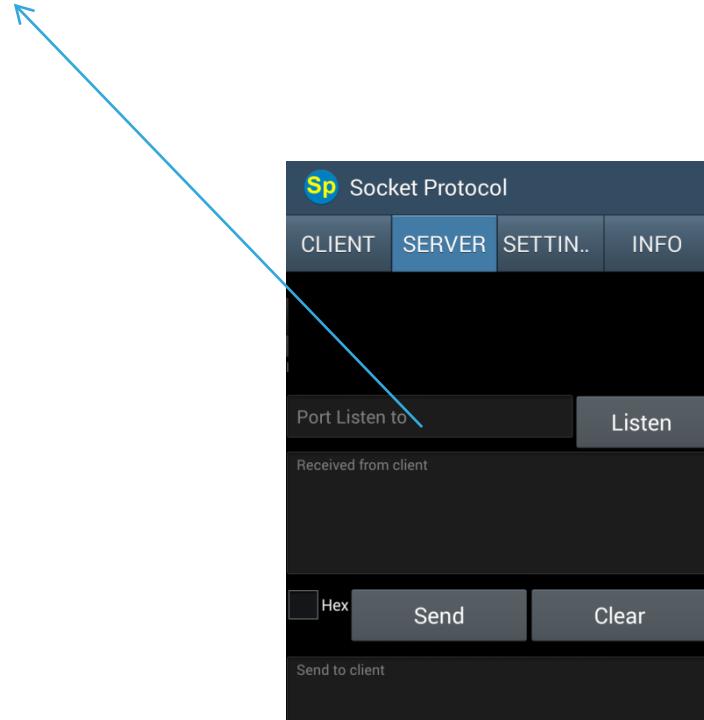

Lab 7: Open TCP/UDP connection

- Type **AT+S.SOCKON=192.168.0.10x,32000,t,ind**
- The client and the server use the socket identifier (ID) displayed

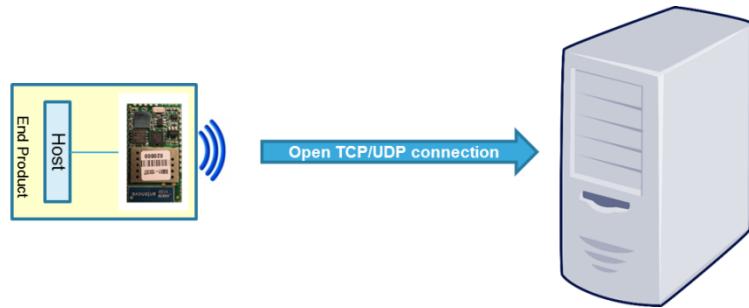

Tera Term output

| |
|--------|
| All |
| ID: 00 |
| OK |

Lab 7: Write data to socket

82

The SOCKW command allows to write data to the specified ID socket.

This command accepts data after the <cr> at the end of the command line.

- Sintax
 - AT+S.SOCKW=<ID>,<len>
- Configuration parameters
 - <ID>: socket identifier
 - <len>: data length to send


Lab 7: Write data to socket

83

- Write data
 - Type **AT+S.SOCKW=00,13**



Note: the module is waiting 13 bytes to be written to the socket. As soon as 13 bytes (or characters) are sent from the terminal, the module is going to write them to the socket and will be ready to receive new commands.

- Type **hello world<CR>**
- SPWF shows that there are <pending data> and their amount

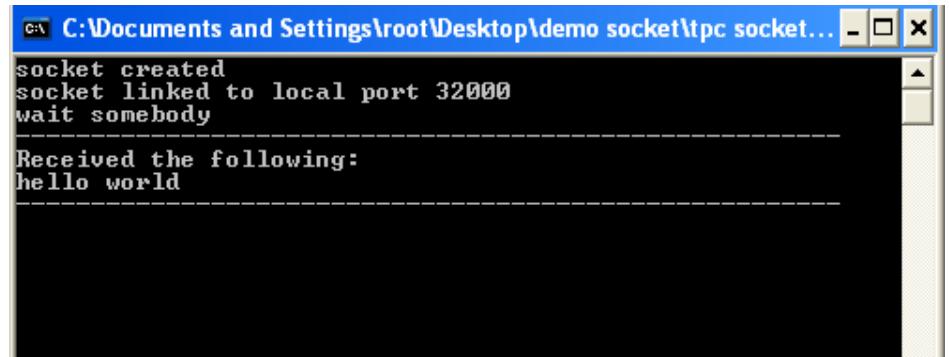

The screenshot shows a terminal window titled 'C:\Documents and Settings\root\Desktop\demo socket\tpc socket...'. The window displays the following text:
socket created
socket linked to local port 32000
wait somebody

Received the following:
hello world

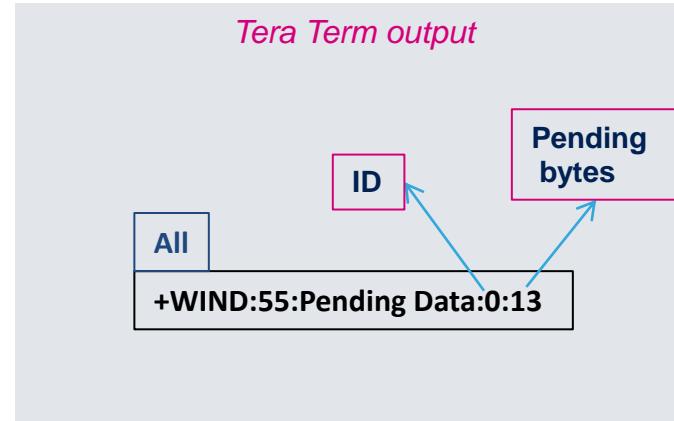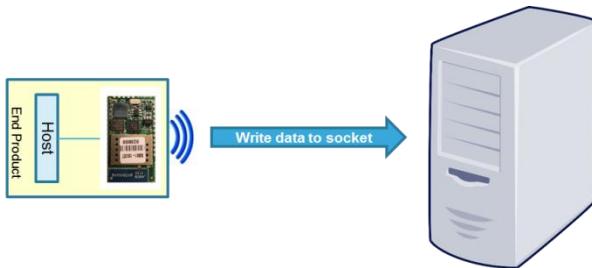

Lab 7: Read data from socket

84


The SOCKR command allows to read data from socket.

- Syntax
 - AT+**S.SOCKR=<ID>,<len>**
- Configuration parameters
 - <ID>: socket identifier
 - <len>: data length to read

Lab 7: Read data from socket

85

- Read data
 - Type **AT+S.SOCKR=00,13**

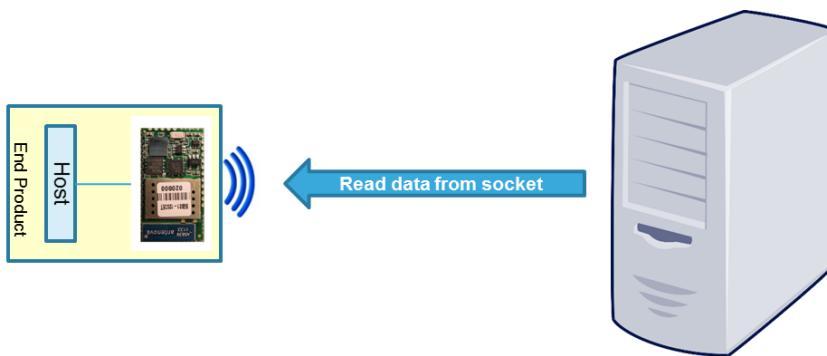

Tera Term output

| |
|-------------|
| All |
| hello world |
| OK |

The SOCKC command allows to close socket.


- Syntax
 - AT+S.SOCKC=<ID>
- Configuration parameters
 - <ID>: socket identifier

Lab 7: Close socket


87


- Close socket
 - Type **AT+S.SOCKC=00**

Tera Term output

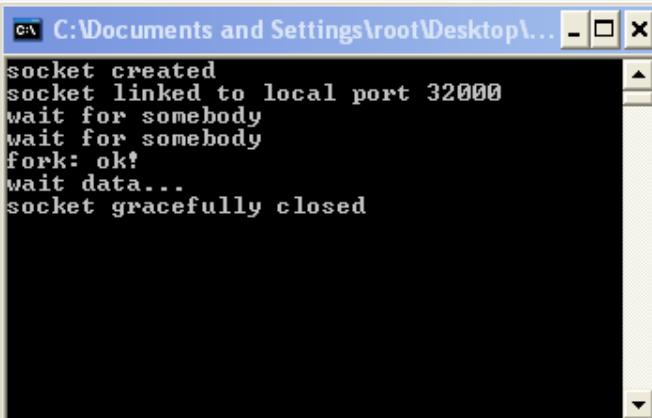

```
socket created
socket linked to local port 32000
wait for somebody
wait for somebody
fork: ok!
wait data...
socket gracefully closed
```

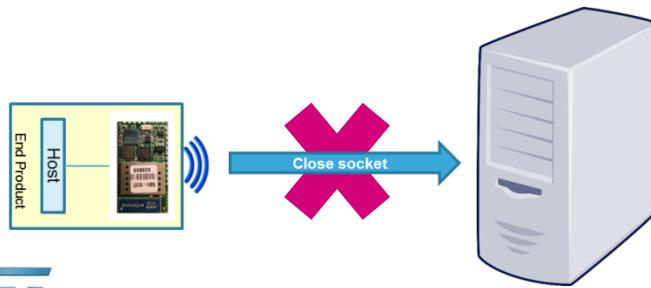

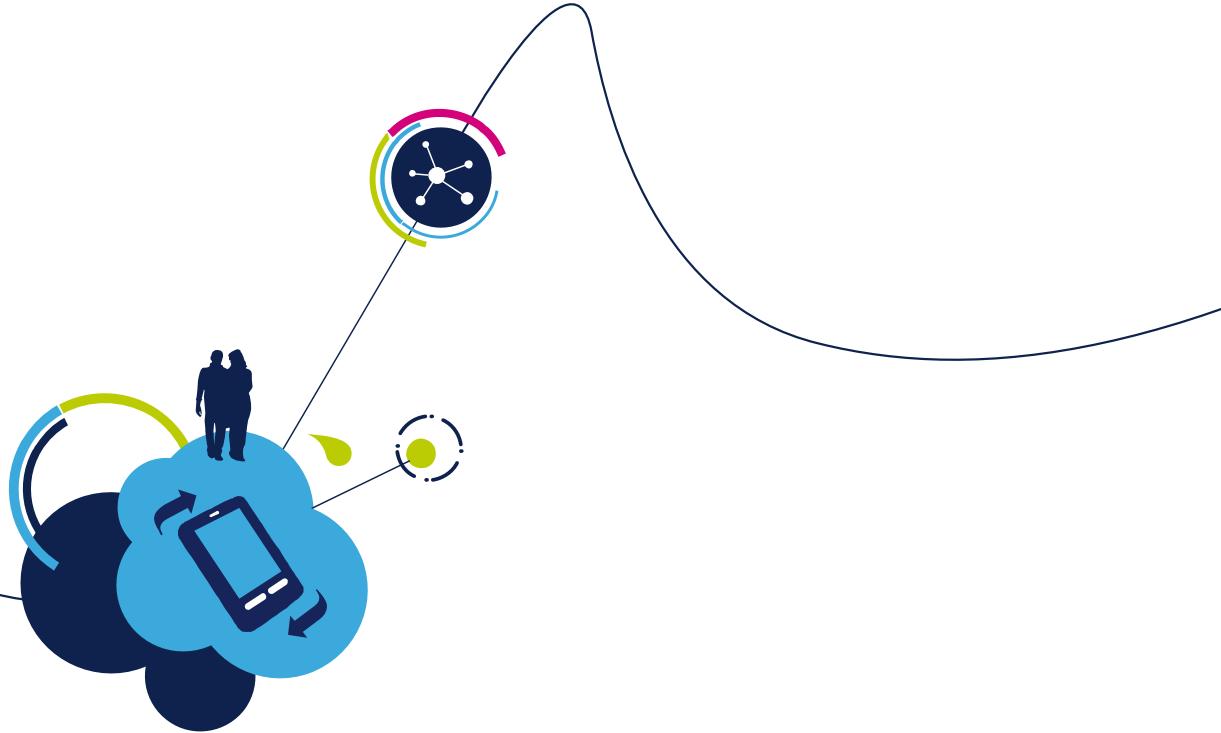

Proceed to the next LAB!

Lab 8: MiniAP mode for the first set

89

- Objective
 - Create a direct connection between the module and an end device
 - First set of the module in order to enable the connection between the module and a generic AP
- Prerequisites
 - Work alone



Lab 8: Configuring the module in MiniAP mode

90

The Mini AP mode is available starting from the following FW release:
SPWF01S-131115-de4568d-RELEASE

In order to set the module in Mini AP mode, the following parameters are needed

- Set the SSID
 - Type **AT+S.SSIDTXT=SPWF_AP**
- Set the network privacy mode (0=OPEN or 1=WEP are supported)
 - Type **AT+S.SCFG=wifi_priv_mode,0**
- Set the network mode (1 = STA, 2 = IBSS, 3 = MiniAP)
 - Type **AT+S.SCFG=wifi_mode,3**


Tera Term output

All
OK

Lab 8: Configuring the module in MiniAP mode

91

- Save the settings on the flash memory and reset the module
 - Type **AT&W**
 - Type **AT+CFUN=1**

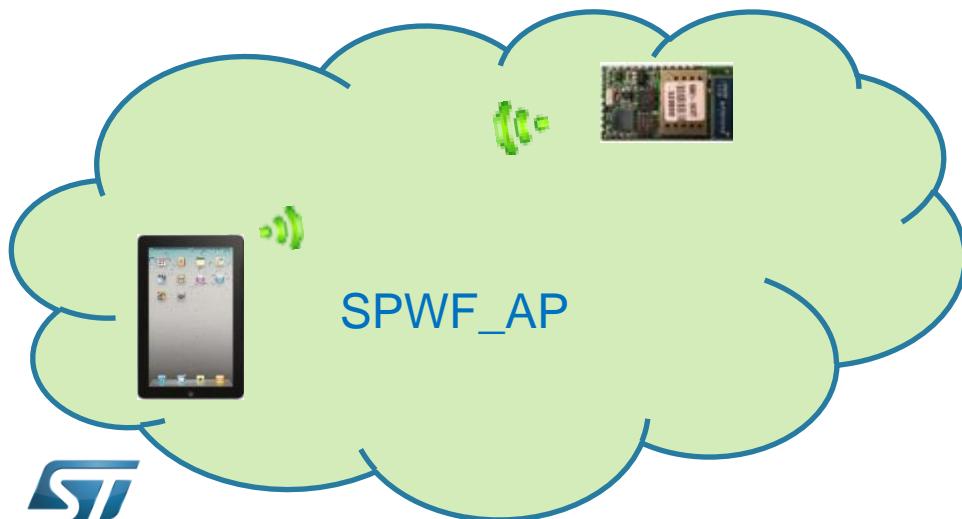

Tera Term output

```
All
+WIND:0:Console active
+WIND:32:WiFi Hardware Started
+WIND:26:WiFi Started AP with
network 'SPWF_AP'
+WIND:24:WiFi Up: 172.18.151.1
```

Lab 8: Configuring the module in MiniAP mode (WEP Key)

92

Configure the module using the WEP key (2 possible combinations available)

Sample table:

| AP configuration | AT command to be used | AP configuration | AT command to be used |
|----------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Security Mode: WEP WEP Key Length: 64 bit (10 hex digits) Authentication: Open Wep Key 1: 1234567890 | i.e. at+s.ssidtxt=SPWF_AP AT+S.SCFG=wifi_wep_keys[0],1234567890 AT+S.SCFG=wifi_wep_key_lens,05 AT+S.SCFG=wifi_auth_type,0 AT+S.SCFG=wifi_priv_mode,1 AT+S.SCFG=wifi_mode,3 at&w at+cfun=1 | Security Mode: WEP WEP Key Length: 128 bit (26 hex digits) Authentication: Open Wep Key 1: 12345678901234567890123456 | i.e. at+s.ssidtxt=SPWF_AP AT+S.SCFG=wifi_wep_keys[0],1234567890123456 AT+S.SCFG=wifi_wep_key_lens,0D AT+S.SCFG=wifi_auth_type,0 AT+S.SCFG=wifi_priv_mode,1 AT+S.SCFG=wifi_mode,3 at&w at+cfun=1 |

Lab 8: Configuring the module in MiniAP mode (WEP Key)

93

Notes:

- “wifi_wep_key_lens” variable values: 05 and 0D
- It’s possible to enter any text string as WEP key. It have to be converted into a hexadecimal key using the ASCII values of the characters. A maximum of 5 text characters can be entered for 64 bit keys, and a maximum of 13 characters for 128 bit keys.

In this case, it needs to manually convert your ASCII password to HEX and complete the wifi_wep_keys[0] variable with the HEX value.

- i.e. WEP key: **test1**
ASCII to HEX: **74:65:73:74:31**
So, the AT command is: **AT+S.SCFG=wifi_wep_keys[0],7465737431**

Lab 8: Customizing the MiniAP address (optional)

Starting from FW 3.3, the module allows user to customize the IP address of the MiniAP.

- Set the SSID
 - Type **AT+S.SSIDTXT=SPWF_AP**
- Set the network privacy mode (0=OPEN or 1=WEP are supported)
 - Type **AT+S.SCFG=wifi_priv_mode,0**
- Set the network mode (1 = STA, 2 = IBSS, 3 = MiniAP)
 - Type **AT+S.SCFG=wifi_mode,3**
- Set the use_dhcp mode (0 = DHCP server off, 1 = DHCP server on, 2 = DHCP server on and customizable)
 - Type **AT+S.SCFG=ip_use_dhcp,2**
- Set the MiniAP address
 - Type **AT+S.SCFG=ip_ipaddr,192.168.0.1**
- Save the settings on the flash memory and reset the module
 - Type **AT&W**
 - Type **AT+CFUN=1**

*Tip: the MiniAP will assign sequential addresses to the client
i.e. 1° client: 192.168.0.2, 2° client:
192.168.0.3*

Tera Term output



All

+WIND:0:Console active
+WIND:32:WiFi Hardware Started
+WIND:26:WiFi Started AP with
network 'SPWF_AP'
+WIND:24:WiFi Up: 192.168.0.1

Lab 8: Mini AP mode

95

- Associate your end device to the SPWF_AP network
 - Find the SPWF_AP network and connect the end device to the module

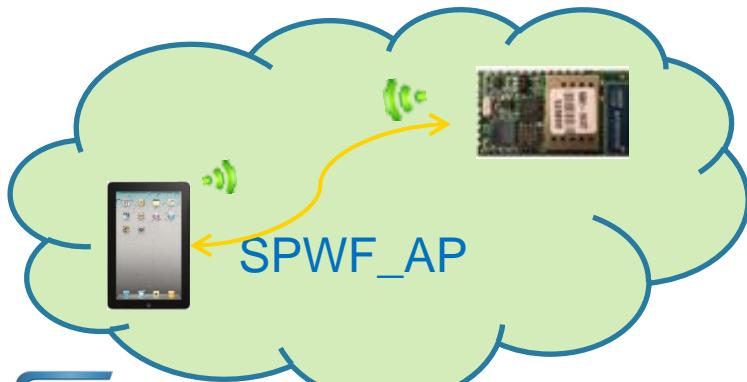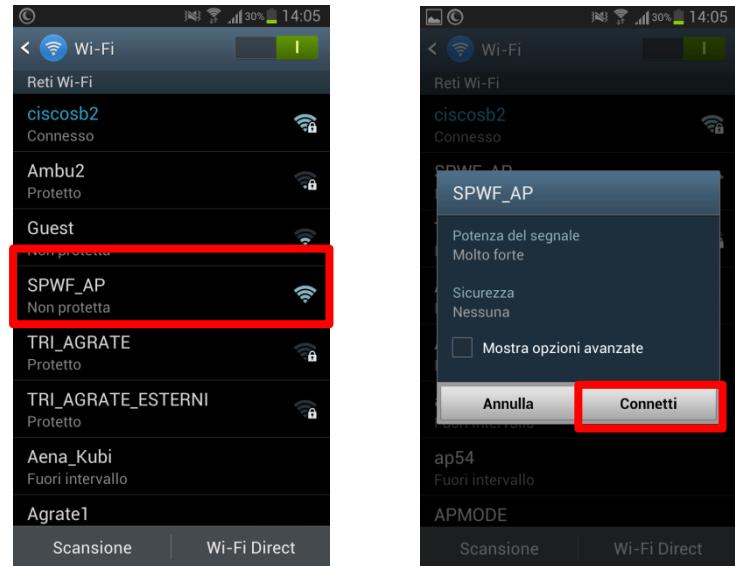

Tera Term output


```
All
+WIND:28:90:18:7C:96:0D:0B Associated
+WIND:29:DHCP reply for 172.18.151.2/90:18:7C:96:0D:0B to 172.18.151.2
+WIND:29:DHCP reply for 172.18.151.2/90:18:7C:96:0D:0B to 172.18.151.2
```

Lab 8: Mini AP mode

- Open your web browser
- In the address bar, type **captiveportal.net**

Tip: If the AP domain name is not quickly opened, it's suggested to turn off an eventual proxy server (check the connection settings or browser preferences)

| SPWF01 First Config | |
|------------------------------------|--------------------------------------------|
| Insert miniAP PassKey: | <input type="text"/> |
| Insert the SSID: | <input type="text"/> |
| Insert the PSK: | <input type="text"/> |
| Insert Static IP Address: | <input type="text"/> |
| Insert Static NetMask: | <input type="text"/> |
| Insert Static GW Address: | <input type="text"/> |
| Insert Static DNS Address: | <input type="text"/> |
| Turn on/off DNS/DHCP: | <input type="button" value="ON"/> |
| Choose Auth Type: | <input type="button" value="Open System"/> |
| Choose Auth: | <input type="button" value="Open"/> |
| Choose Mode: | <input type="button" value="Idle"/> |
| <input type="button" value="GO!"/> | |

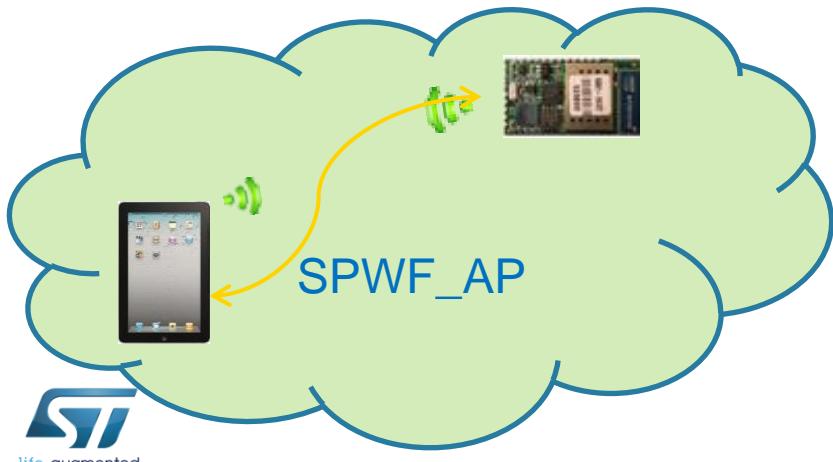

Tip: The Mini AP domain can be set using the variable `ip_apdomainname`.
The default value is “`captiveportal.net`”.

The Mini AP default homepage can be set using the variable `ip_apredirect`.
The default value is “`firstset.html`”.

Lab 8: First Set Page

97

- The first set page allows to configure the module in IDLE mode, STATION mode, IBSS mode and MINI AP mode.

The screenshot shows the 'SPWF01 First Config' page with the following fields and their descriptions:

- Insert miniAP PassKey:** Mandatory for IDLE, STA, IBSS, MINI AP
- Insert the SSID:** Used for STA, IBSS, MINI AP
- Insert the PSK:** Used for STA, IBSS (WEP), MINI AP (WEP)
- Insert Static IP Address:** Used for STA (if DHCP = OFF), IBSS (mandatory), MINI AP (if DHCP = OFF)
- Insert Static NetMask:** Used for STA (if DHCP = OFF), IBSS (mandatory), MINI AP (if DHCP = OFF)
- Insert Static GW Address:** Used for STA (if DHCP = OFF), IBSS (mandatory), MINI AP (if DHCP = OFF)
- Insert Static DNS Address:** Used for STA (if DHCP = OFF), IBSS (mandatory), MINI AP (if DHCP = OFF)
- Turn on/off DNS/DHCP:** Used for STA, IBSS (mandatory DHCP = OFF), MINI AP
- Choose Auth Type:** Used for STA (WEP key), IBSS (WEP), MINI AP (WEP)
- Choose Auth:** Used for STA, IBSS, MINI AP
- Choose Mode:** Used for STA, IBSS, MINI AP

Lab 8: Mini AP mode

98

- Set all the parameters required in order to enable the connection between the module and a generic AP

i.e. AP configured in WPA/WPA2 mode

- MiniAP PassKey: anonymous (by default)
- SSID of the access point
- Password of the access point
- Authentication type of the access point
- Use mode of the module

! Note: In order to manage non-ASCII chars, the ip_use_decoder variable must be modified according as below:

at+s.scfg=ip_use_decoder,0 → no decoding [default]

at+s.scfg=ip_use_decoder,1 → RAW decoding (the USER and PSK fields must be completed in HEX)

at+s.scfg=ip_use_decoder,2 → UTF-8 decoding

at+s.scfg=ip_use_decoder,6 → HTML entities decoding

The screenshot shows a web-based configuration interface for a Mini AP module. The title bar says 'captiveportal.net'. The main section is titled 'SPWF01 First Config'. It contains several input fields and dropdown menus. The fields include 'Insert miniAP PassKey' (with value '.....'), 'Insert the SSID' (with value 'ciscosb2'), 'Insert the PSK' (with value '.....'), 'Insert Static IP Address', 'Insert Static NetMask', 'Insert Static GW Address', and 'Insert Static DNS Address'. Below these are dropdown menus for 'Turn on/off DNS/DHCP' (set to 'ON'), 'Choose Auth Type' (set to 'Open System'), 'Choose Auth' (set to 'Wpa & Wpa2 Personal'), and 'Choose Mode' (set to 'Station'). At the bottom is a 'GO!' button.

Tip: The Mini AP PassKey can be set using the variable "user_desc". The default value is "anonymous".

Lab 8: Mini AP mode

99


- Click on GO! button and then send the parameters confirming with OK

captiveportal.net

SPWF01 First Config

| | |
|----------------------------|---------------------|
| Insert miniAP PassKey: | |
| Insert the SSID: | ciscosb2 |
| Insert the PSK: | |
| Insert Static IP Address: | |
| Insert Static NetMask: | |
| Insert Static GW Address: | |
| Insert Static DNS Address: | |
| Turn on/off DNS/DHCP: | ON |
| Choose Auth Type: | Open System |
| Choose Auth: | Wpa & Wpa2 Personal |
| Choose Mode: | Station |

GO!

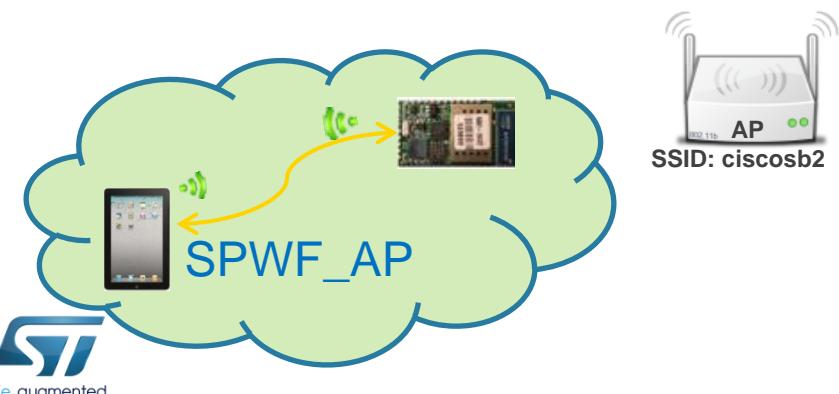

captiveportal.net

SPWF01 First Config

| | |
|------------------|---------------------|
| Insert the SSID: | ciscosb2 |
| Insert the PSK: | |
| Choose Auth: | Wpa & Wpa2 Personal |
| Choose Mode: | Station |

60

La pagina all'indirizzo captiveportal.net dice:


Press OK to send, then wait a few seconds.

OK

Lab 8: Mini AP mode

100

- The module will receive the parameters and will automatically connect to the access point required

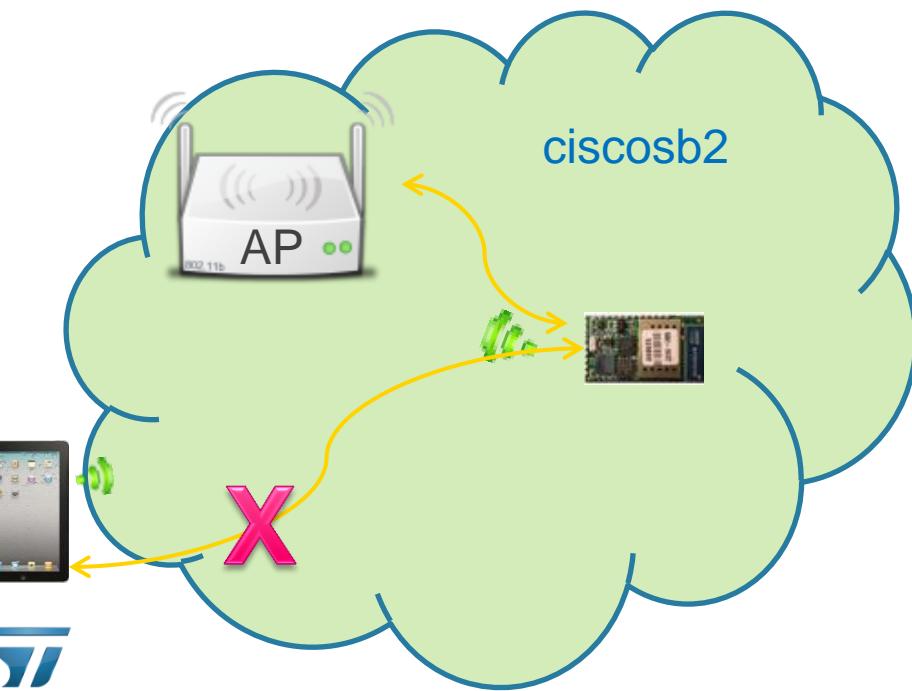

Tera Term output

| All |
|-------------------------------------------------------------|
| +WIND:57:Received SSID is ciscosb2 |
| +WIND:57:Received PWD is ***** |
| +WIND:57:Received Auth mode is 2 |
| +WIND:57:Received Mode is 1 |
| +WIND:2:RESET |
| +WIND:1:Poweron (*****-*****-SPWF01S) |
| +WIND:13:ST IWM: Copyright (c) 2012-2013 STmicroelectronics |
| +WIND:3:Watchdog Running |
| +WIND:0:Console active |
| +WIND:46:WPA: Crunching PSK... |
| +WIND:32:WiFi Hardware Started |
| +WIND:21:WiFi Scanning |
| +WIND:35:WiFi Scan Complete (0x0) |
| +WIND:19:WiFi Join: 02:62:1F:51:8F:0B |
| +WIND:25:WiFi Association with 'ciscosb2' successful |
| +WIND:51:WPA Handshake Complete |
| +WIND:24:WiFi Up: 192.168.1.106 |

Lab 8: Mini AP mode – RAW decoding example

101

Note: In order to manage non-ASCII chars, the ip_use_decoder variable must be modified according as below:

at+s.scfg=ip_use_decoder,0 → no decoding [default]

at+s.scfg=ip_use_decoder,1 → RAW decoding (the USER and PSK fields must be completed in HEX)

at+s.scfg=ip_use_decoder,2 → UTF-8 decoding

at+s.scfg=ip_use_decoder,6 → HTML entities decoding

```
+WIND:57:Received SSID is ÈÙòÌÈÈÈQ  
+WIND:57:Received PWD is qwerasdf  
+WIND:57:Received Dhcp setting is 1  
+WIND:57:Received IBSS Auth type is 0  
+WIND:57:Received Auth mode is 2  
+WIND:57:Received Mode is 1  
+WIND:2:Reset  
+WIND:1:Poweron (151218-8f20744-SPWF01S)  
+WIND:13:ST SPWF01S IWM: Copyright (c) 2012-2015 STMicroelectronics, Inc. All rights Reserved.  
+WIND:0:Console active  
+WIND:46:WPA: Crunching PSK...  
+WIND:32:WiFi Hardware Started  
+WIND:21:WiFi Scanning  
+WIND:35:WiFi Scan Complete (0x0)  
+WIND:19:WiFi Join:28:2C:B2:7D:C6:CC  
+WIND:25:WiFi Association with '\xC8\xA5\xCE\xD2\xB6\xEE\xC8\xCB\xCB\xFB' successful  
+WIND:51:WPA Handshake Complete  
+WIND:24:WiFi Up:192.168.0.101  
at+s.scan  
1:   BSS 28:2C:B2:7D:C6:CC CHAN: 01 RSSI: -43 SSID: '\xC8\xA5\xCE\xD2\xB6\xEE\xC8\xCB\xCB\xFB' CAPS: 0431 WPA WPA2  
2:   BSS 20:3A:07:85:EC:A0 CHAN: 01 RSSI: -79 SSID: 'STWLAN2' CAPS: 1431 WPA2  
3:   BSS 20:3A:07:85:EC:A4 CHAN: 01 RSSI: -80 SSID: 'STWAREHOUSE' CAPS: 1431 WPA2  
4:   BSS 14:D6:4D:24:36:00 CHAN: 06 RSSI: -45 SSID: 'ENG-WPA' CAPS: 0431 WPA WPA2 WPS  
5:   BSS 00:18:74:B3:53:00 CHAN: 11 RSSI: -85 SSID: 'Ambu2' CAPS: 0431 WPA2  
6:   BSS 00:18:74:B3:53:02 CHAN: 11 RSSI: -86 SSID: 'Guest' CAPS: 0421  
7:   BSS 88:43:E1:FB:9E:30 CHAN: 12 RSSI: -89 SSID: 'Visiant-Ospiti' CAPS: 0431 WPA2  
mrc:Augmented
```

SPWF01 First Config

Insert miniAP PassKey:
Insert the SSID: c8a5ced2b6eec8cbcbfb
Insert the PSK:
Insert Static IP Address:
Insert Static NetMask:
Insert Static GW Address:
Insert Static DNS Address:
Turn on/off DNS/DHCP: ON
Choose Auth Type: Open System
Choose Auth: Wpa & Wpa2 Personal
Choose Mode: Station
GO!

AP SSIS

7177657261736466

AP PSK



Proceed to the next LAB!

Lab 9: Socket interface - MiniAP mode

103

- Objective
 - Create a direct connection between the module and an end device
 - Socket interface used in MiniAP mode
- Prerequisites
 - Work alone



Lab 9: Configuring the module in MiniAP mode

104

The Mini AP mode (available starting from the **SPWF01S-131115-de4568d-RELEASE**) also allows to use the socket interface. The procedure is the same as in Lab 7.

In order to set the module in Mini AP mode, the following parameters are needed

- Set the SSID
 - Type **AT+S.SSIDTXT=SPWF_AP**
- Set the network privacy mode
 - Type **AT+S.SCFG=wifi_priv_mode,0**
- Set the network mode (1 = STA, 2 = IBSS, 3 = MiniAP)
 - Type **AT+S.SCFG=wifi_mode,3**


Tera Term output



Lab 9: Configuring the module in MiniAP mode

105

- Save the settings on the flash memory and reset the module
 - Type **AT&W**
 - Type **AT+CFUN=1**

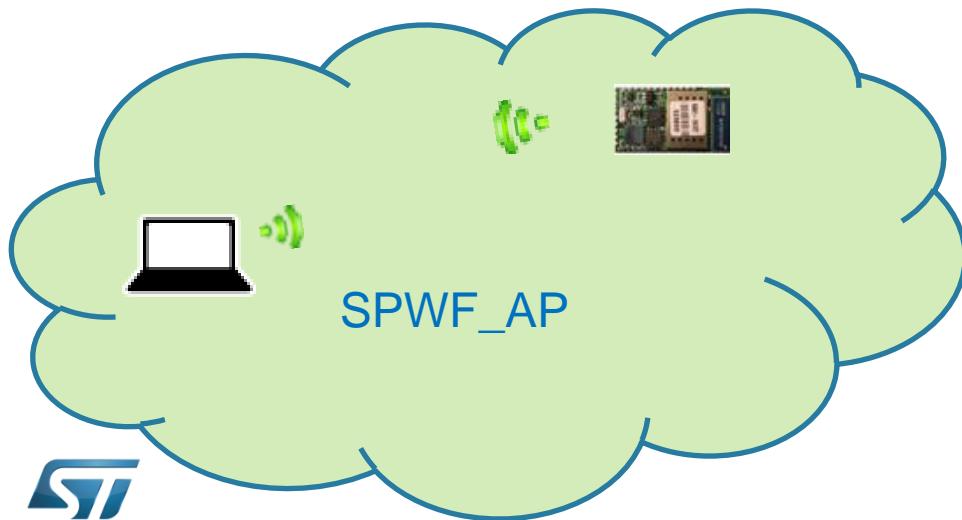



Tera Term output

```
All
+WIND:0:Console active
+WIND:32:WiFi Hardware Started
+WIND:26:WiFi Started AP with
network 'SPWF_AP'
+WIND:24:WiFi Up: 172.18.151.1
```

Lab 9: Mini AP mode

106

- Connect your PC to the SPWF_AP network
 - Find the SPWF_AP network and connect the end device to the module

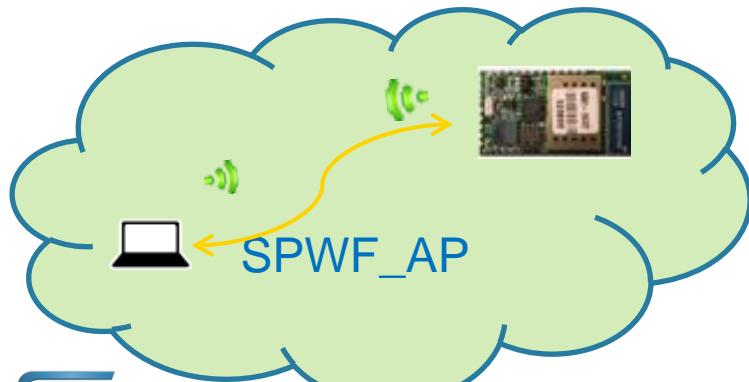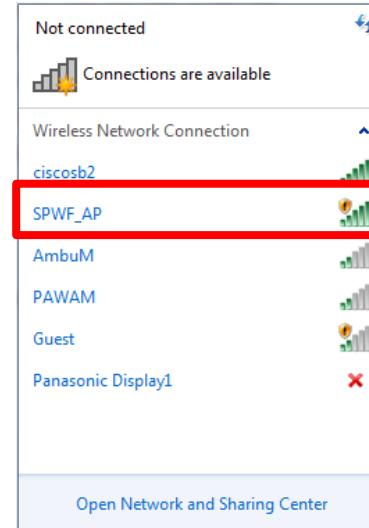

Tera Term output

All

```
+WIND:28:90:18:7C:96:0D:0B Associated  
+WIND:29:DHCP reply for 172.18.151.2/90:18:7C:96:0D:0B to 172.18.151.2  
+WIND:29:DHCP reply for 172.18.151.2/90:18:7C:96:0D:0B to 172.18.151.2
```

Lab 9: Open TCP/UDP connection

107


As described in the Lab 7, the SOCKON command allows to open a TCP/UDP connection to a specified host.

- Syntax
 - AT+S.SOCKON=<hostname>,<port>,<protocol>,ind
- Configuration parameters
 - <hostname>: target host. DNS resolvable name or IP address
 - <port>: TCP/UDP socket port
 - <protocol>: *t* for TCP socket, *u* for UDP socket
 - ind: indicate when data has arrived (optional). Up to 4 consecutive “Pending data” message (without any AT+S.SOCKR) are guaranteed. It is suggested to empty the buffer using the **AT+S.SOCKR** command and to avoid exceeding 4 indications.

Lab 9: Open TCP connection

108

- Open the TCP socket server (disable the firewall to properly run it)
 - Folder/hands_on_wifi/tcp socket server/server.exe
- The TCP server listens for incoming connections on the port 32000. It sends back all data received.

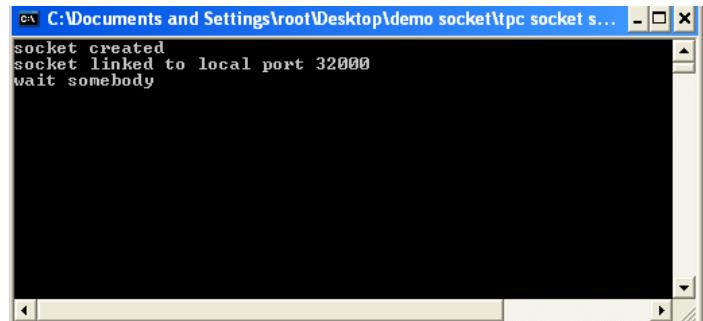

```
C:\Documents and Settings\root\Desktop\demo socket\tcp socket s...
socket created
socket linked to local port 32000
wait somebody
```

Lab 9: Open TCP connection


109

- Type **AT+S.SOCKON=172.18.151.2,32000,t,ind**

Tera Term output

- The client and the server use the socket identifier (ID) displayed

| |
|--------|
| All |
| ID: 00 |
| OK |

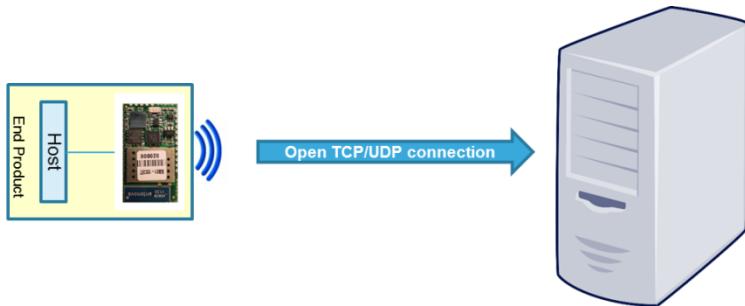

The SOCKW command allows to write data to the specified ID socket.

This command accepts data after the <cr> at the end of the command line.

- Sintax
 - AT+S.SOCKW=<ID>,<len>
- Configuration parameters
 - <ID>: socket identifier
 - <len>: data length to send


Lab 9: Write data to socket

111

- Write data
 - Type **AT+S.SOCKW=00,13**



Note: the module is waiting 13 bytes to be written to the socket. As soon as 13 bytes (or characters) are sent from the terminal, the module is going to write them to the socket and will be ready to receive new commands.

- Type **hello world<CR>**
- SPWF shows that there are <pending data> and their amount

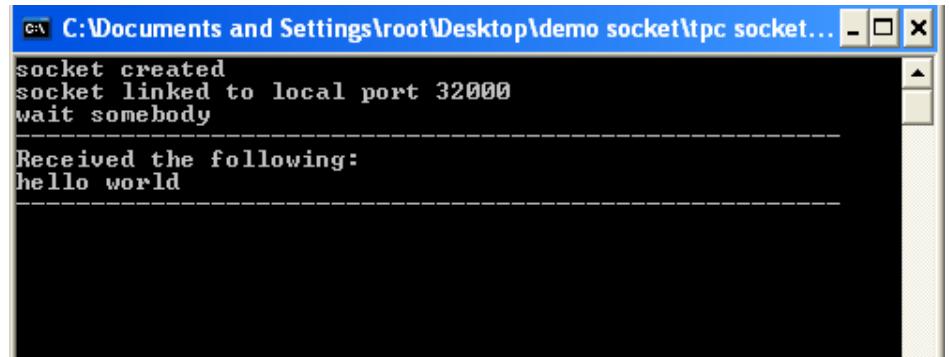

The screenshot shows a terminal window titled 'C:\Documents and Settings\root\Desktop\demo socket\tpc socket...'. The window displays the following text:
socket created
socket linked to local port 32000
wait somebody

Received the following:
hello world

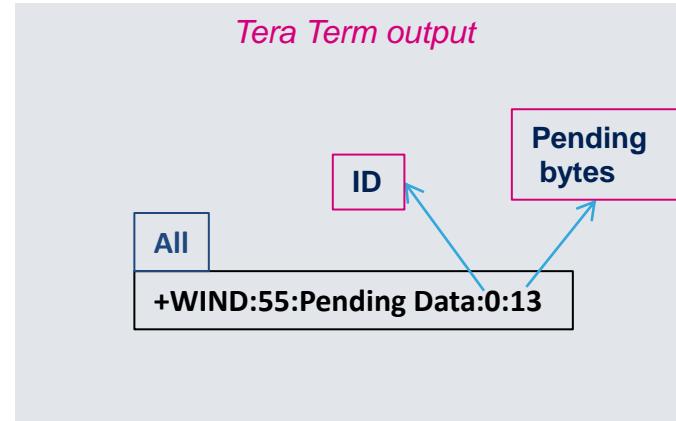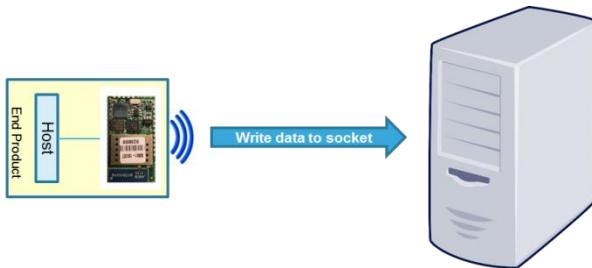

Lab 9: Read data from socket

112


The SOCKR command allows to read data from socket.

- Syntax
 - AT+S.SOCKR=<ID>,<len>
- Configuration parameters
 - <ID>: socket identifier
 - <len>: data length to read

Lab 9: Read data from socket

113

- Read data
 - Type **AT+S.SOCKR=00,13**

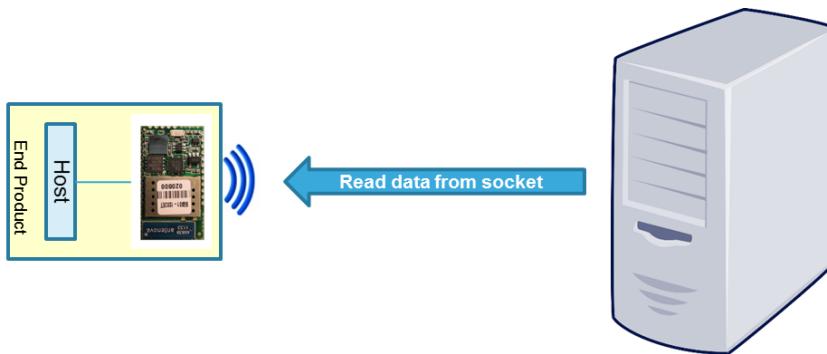

Tera Term output

| |
|-------------|
| All |
| hello world |
| OK |

The SOCKC command allows to close socket.


- Syntax
 - AT+S.SOCKC=<ID>
- Configuration parameters
 - <ID>: socket identifier

Lab 9: Close socket


115

- Close socket
 - Type **AT+S.SOCKC=00**

Tera Term output

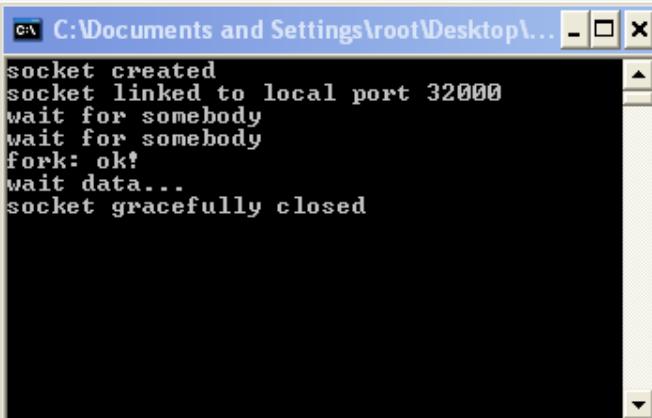

```
socket created
socket linked to local port 32000
wait for somebody
wait for somebody
fork: ok!
wait data...
socket gracefully closed
```

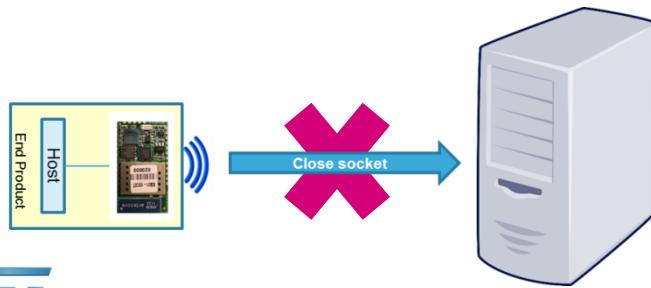



Proceed to the next LAB!

Lab 10: Web server - MiniAP mode

117

- Objective
 - Create a direct connection between the module and an end device
 - Web server used in MiniAP mode
- Prerequisites
 - Work alone



Lab 10: Configuring the module in MiniAP mode

118

The Mini AP mode (available starting from the **SPWF01S-131115-de4568d-RELEASE**) also allows to use the module file system (both RAM and Int/Ext FLASH).

In order to set the module in Mini AP mode, the following parameters are needed

- Set the SSID
 - Type **AT+S.SSIDTXT=SPWF_AP**
- Set the network privacy mode
 - Type **AT+S.SCFG=wifi_priv_mode,0**
- Set the network mode (1 = STA, 2 = IBSS, 3 = MiniAP)
 - Type **AT+S.SCFG=wifi_mode,3**


Tera Term output

All
OK

Lab 10: Configuring the module in MiniAP mode

119

- Save the settings on the flash memory and reset the module
 - Type **AT&W**
 - Type **AT+CFUN=1**

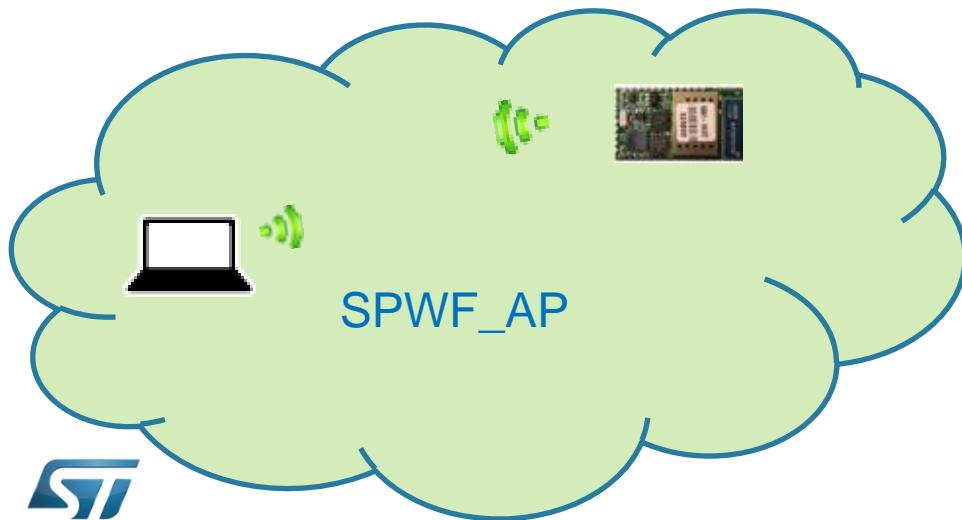



Tera Term output

```
All
+WIND:0:Console active
+WIND:32:WiFi Hardware Started
+WIND:26:WiFi Started AP with
network 'SPWF_AP'
+WIND:24:WiFi Up: 172.18.151.1
```

Lab 10: Mini AP mode

120

- Connect your PC to the SPWF_AP network
 - Find the SPWF_AP network and connect the end device to the module

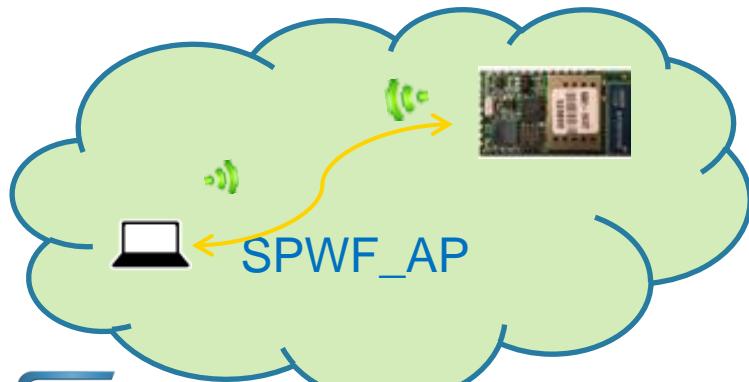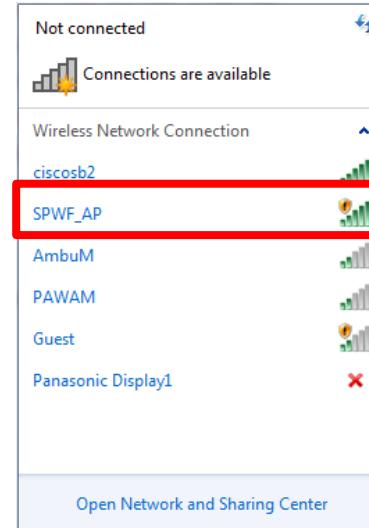

Tera Term output

All



```
+WIND:28:90:18:7C:96:0D:0B Associated  
+WIND:29:DHCP reply for 172.18.151.2/90:18:7C:96:0D:0B to 172.18.151.2  
+WIND:29:DHCP reply for 172.18.151.2/90:18:7C:96:0D:0B to 172.18.151.2
```

Lab 10: Access to Web server - Mini AP mode

121

- Open your web browser
- In the address bar, type captiveportal.net/index.html

- The SPWF01S homepage will be displayed

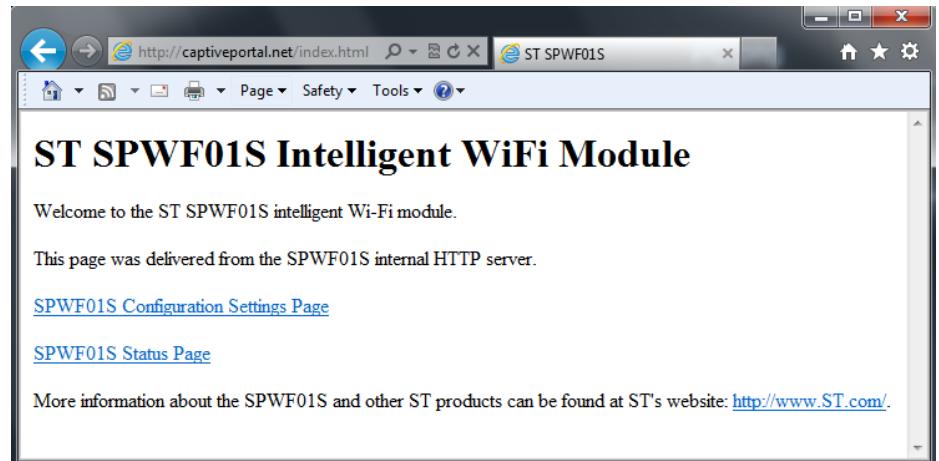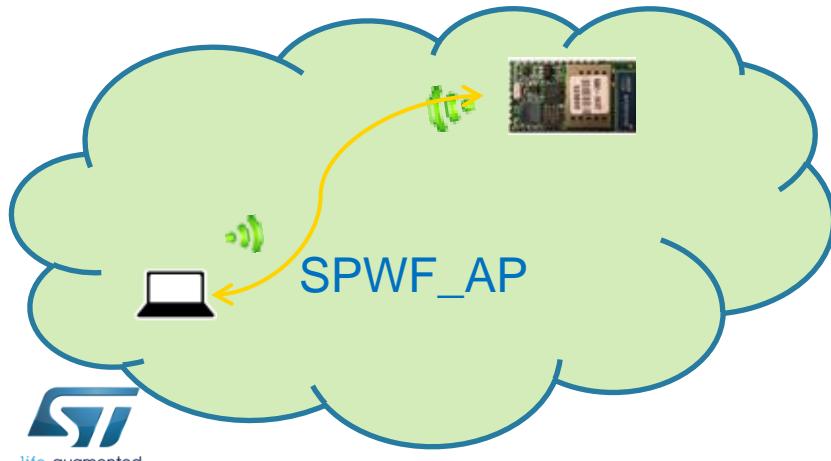

Tip: The Mini AP domain can be set using the variable `ip_apdomainname`.
The default value is “`captiveportal.net`”.



Lab 10: Access to Web server - Mini AP mode

122

- Open the SPWF01S Device Status
 - click on the highlighted link



- The SPWF01S Device Status will be displayed

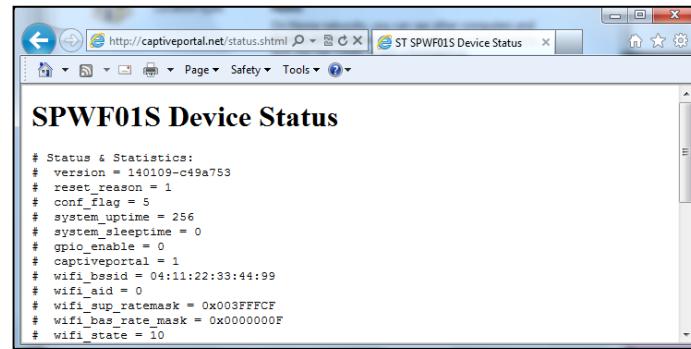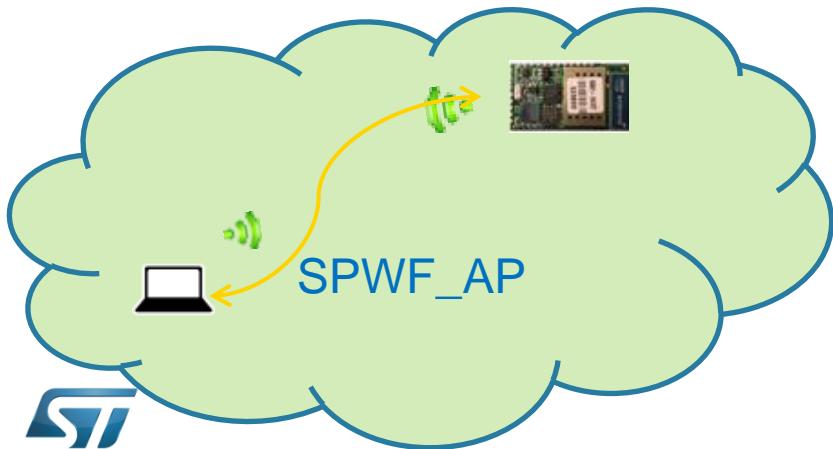

Tip: The Mini AP domain can be set using the variable `ip_apdomainname`.

The default value is “`captiveportal.net`”.

The Mini AP default homepage can be set using the variable `ip_apredirect`.

The default value is “`firstset.html`”.



Proceed to the next LAB!

Lab 11: Remotely control - GPIOs

124

- Objective
 - write remotely a GPIO
 - configure remotely a GPIO
 - read remotely a GPIO
- Prerequisites
 - module connected to the AP or module configured in MiniAP mode





Lab 11: Remotely control - GPIO

125

This feature allows to remotely write, configure and read a GPIO.

The module should be connected to the AP (as shown in Lab 3) or should be configured in Mini AP mode (as shown in Lab 8).

The external client have to open the **remote.html** page stored in the module.

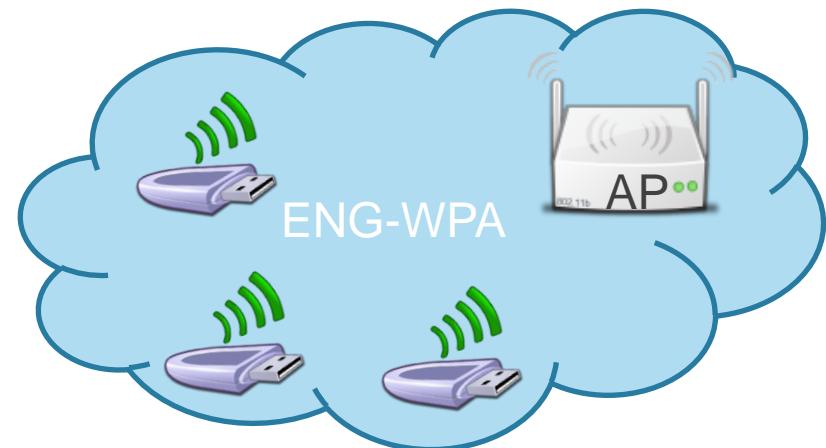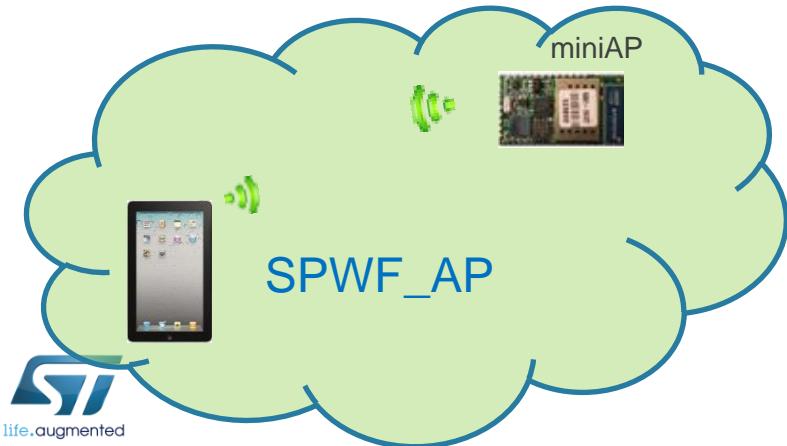

Lab 11: Joining a network

126

In order to be connected to an available Wifi network, the AP parameters setting is needed.

- Set the SSID
 - Type **AT+S.SSIDTXT=ENG-WPA**
- Set the password
 - Type **AT+S.SCFG=wifi_wpa_psk_text,helloworld**
- Set the network privacy mode (0=none, 1=WEP, 2=WPA-Personal (TKIP/AES) or WPA2-Personal (TKIP/AES))
 - Type **AT+S.SCFG=wifi_priv_mode,2**
 - N.B. wifi_auth_type must be set to 0 → AT+S.SCFG=wifi_auth_type,0
- Set the network mode (1 = STA, 2 = IBSS, 3 = MiniAP)
 - Type **AT+S.SCFG=wifi_mode,1**

Tera Term output

All
OK

Lab 11: Joining a network

127

- Save the settings on the flash memory and reset the module
 - Type **AT&W**
 - Type **AT+CFUN=1**



Tera Term output



All

```
+WIND:0:Console active
+WIND:46:WPA: Crunching PSK...
+WIND:32:WiFi Hardware Started
+WIND:21:WiFi Scanning
+WIND:35:WiFi Scan Complete (0x0)
+WIND:19:WiFi Join: 14:D6:4D:24:36:00
+WIND:25:WiFi Association with 'ENG-WPA' successful
+WIND:51:WPA Handshake Complete
+WIND:24:WiFi Up: 192.168.0.1xx
```

Lab 11: Remotely control in MiniAP mode - GPIO

128

- Open your web browser
- In the address bar, type
`192.168.x.1xx/remote.html`

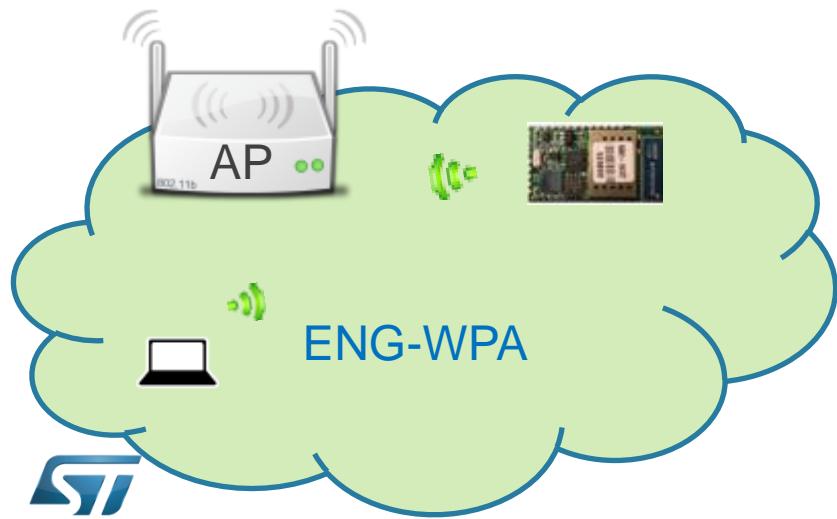
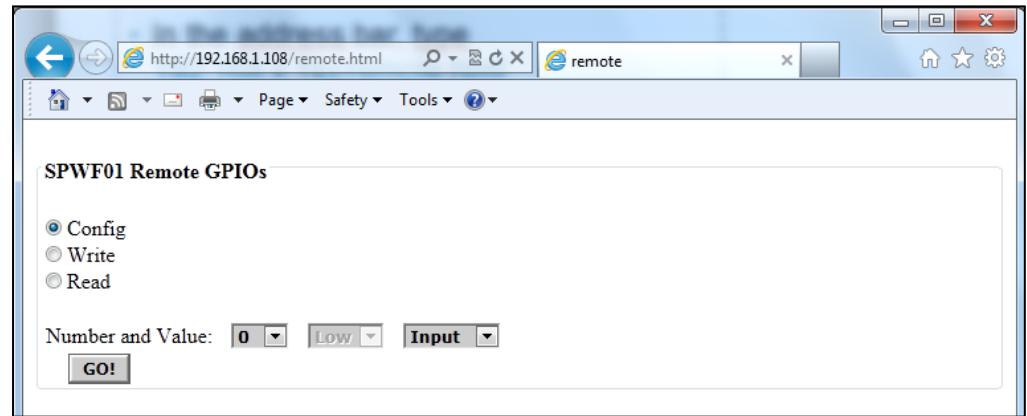


Lab 11: Remotely control in MiniAP mode - GPIO

129

- Try to write the GPIO14 connected to the LED3 (check if the LED3 is mounted on your EVAL BOARD, otherwise can be used the GPIO13)

- Click on the «GO!» button
and LED3 will switch on

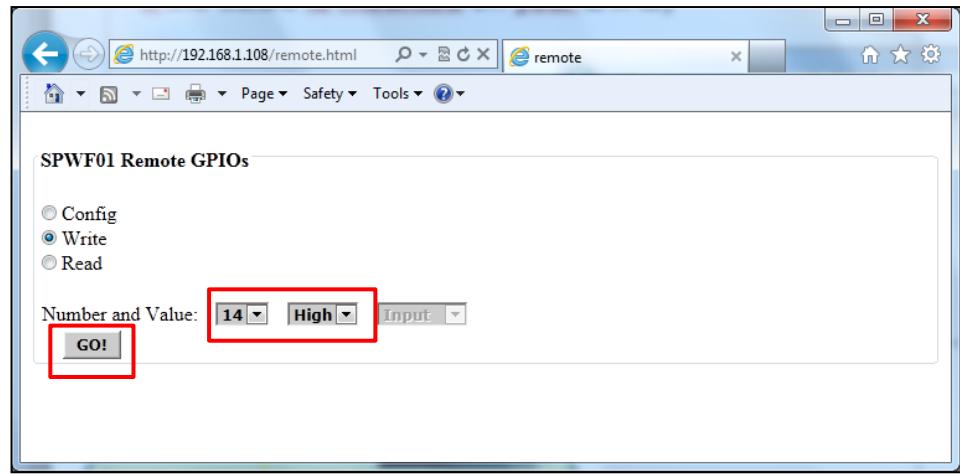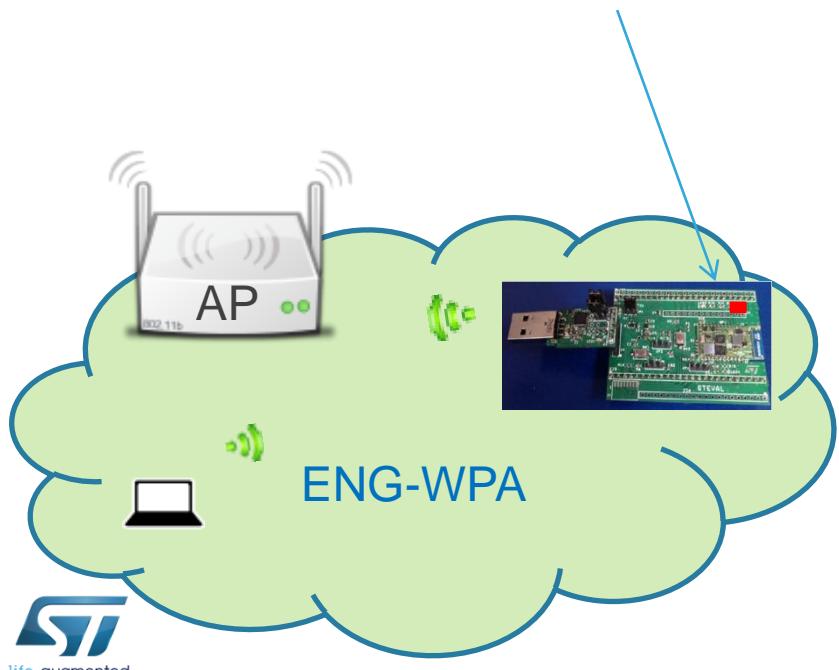



Proceed to the next LAB!

Lab 12: Input demo

131

- Objective
 - Send a message from the server (wifi module) to an external client connected to the same network
- Prerequisites
 - module connected to the AP or module configured in MiniAP mode





Lab 12: Input demo

132

The module provides some DEMOs to show the interaction between the module and an external client connected to the same network.

The module should be connected to the AP (as shown in Lab 3) or should be configured in Mini AP mode (as shown in Lab 8).

In order to run this demo, the client have to open the **input_demo.shtml** page stored in the module.

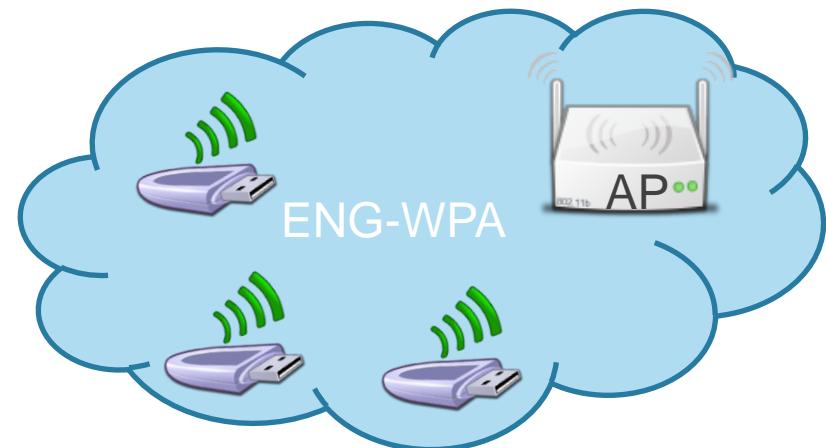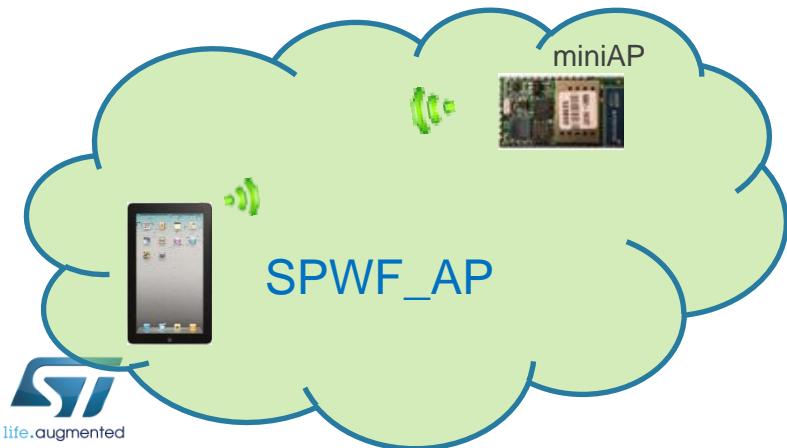

Lab 12: Joining a network

133

In order to be connected to an available Wifi network, the AP parameters setting is needed.

- Set the SSID
 - Type **AT+S.SSIDTXT=ENG-WPA**
- Set the password
 - Type **AT+S.SCFG=wifi_wpa_psk_text,helloworld**
- Set the network privacy mode (0=none, 1=WEP, 2=WPA-Personal (TKIP/AES) or WPA2-Personal (TKIP/AES))
 - Type **AT+S.SCFG=wifi_priv_mode,2**
 - N.B. wifi_auth_type must be set to 0 → AT+S.SCFG=wifi_auth_type,0
- Set the network mode (1 = STA, 2 = IBSS, 3 = MiniAP)
 - Type **AT+S.SCFG=wifi_mode,1**


Tera Term output

All
OK

Lab 12: Joining a network

134

- Save the settings on the flash memory and reset the module
 - Type **AT&W**
 - Type **AT+CFUN=1**

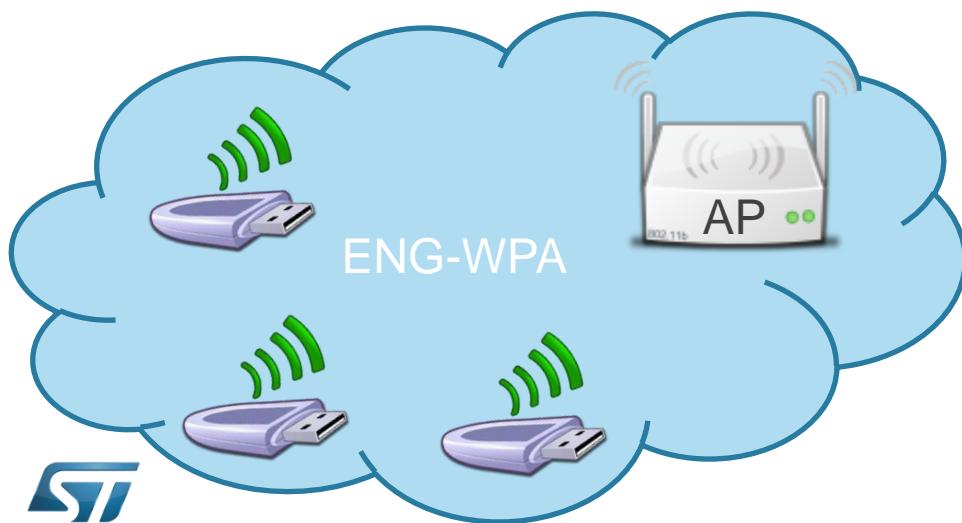

Tera Term output


| All |
|-----------------------------------------------------|
| +WIND:0:Console active |
| +WIND:46:WPA: Crunching PSK... |
| +WIND:32:WiFi Hardware Started |
| +WIND:21:WiFi Scanning |
| +WIND:35:WiFi Scan Complete (0x0) |
| +WIND:19:WiFi Join: 14:D6:4D:24:36:00 |
| +WIND:25:WiFi Association with 'ENG-WPA' successful |
| +WIND:51:WPA Handshake Complete |
| +WIND:24:WiFi Up: 192.168.0.1xx |

- Open your web browser
- In the address bar, type
192.168.x.1xx/input_demo.shtml



VERY IMPORTANT:

Both client and server are pending (2 sec) after the page request. If no message is sent from the module, a timeout mechanism will be triggered

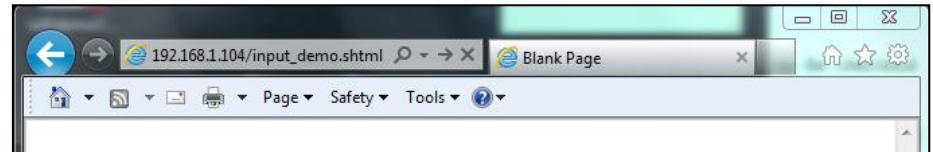


- Insert the message to the client
i.e. type «test» (**suggested – copy the string and paste it in the terminal**) and then send a carriage return



The server shows the “+WIND:56 message”, and it will wait for a string to be inserted, and terminated by "[Cr]".


+WIND:56:Insert message to client:%d” → %d is the Nth input SSI into html page (please refer to CGI&SSI Application Notes for details)

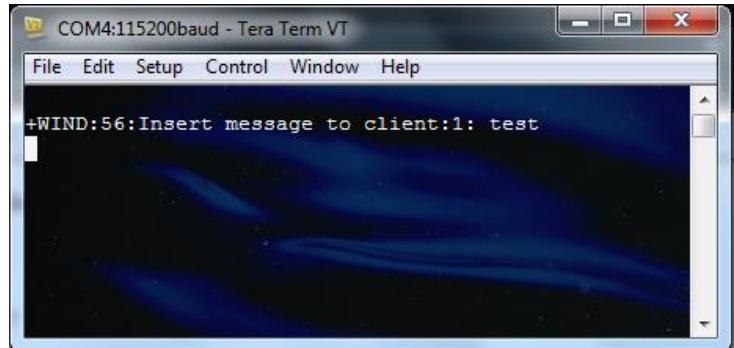

Lab 12: Input demo

136

- The module receives the HTML page containing the string inserted server-side.
- Below this string, there are two buttons to try again the demo or to return to the homepage

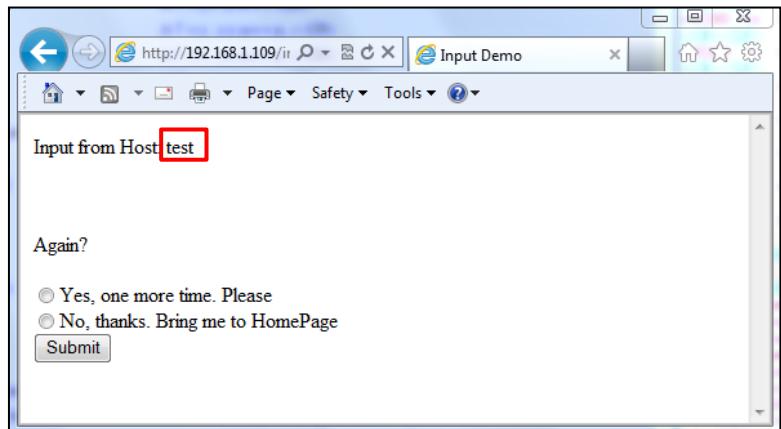




Proceed to the next LAB!

Lab 13: Socket Server functionality

138

- Objective
 - Configure a Server Listening Port
 - Open a TCP connection from a socket client to the module
 - Data mode/Command Mode usage
- Prerequisites
 - module connected to the AP or module configured in MiniAP mode
 - PC to be used as socket client

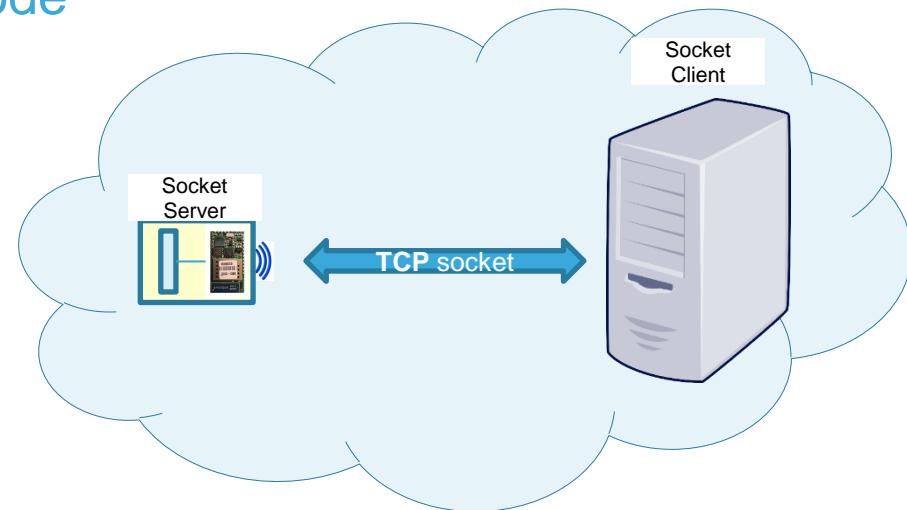



Lab 13: Socket Server

139

This feature allows to enable the socket server mode. The module can be able to listen for an incoming connection on the specified port.

The module should be connected to the AP (as shown in Lab 3) or should be configured in Mini AP mode (as shown in Lab 8).

Please refer to “Socket Server Application Notes” for more details.

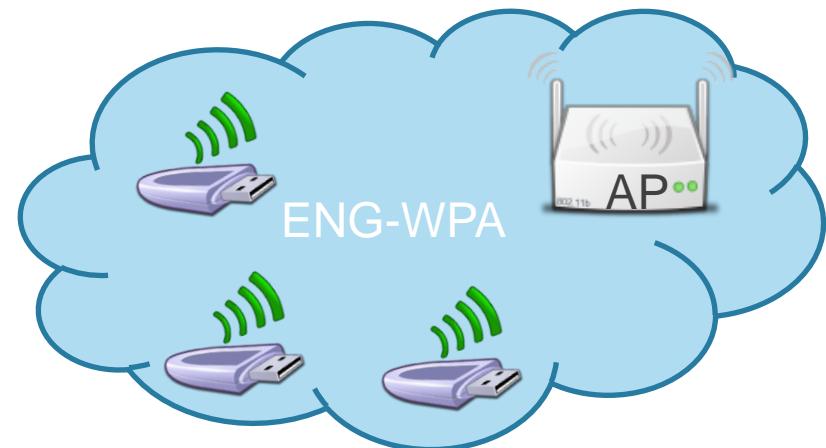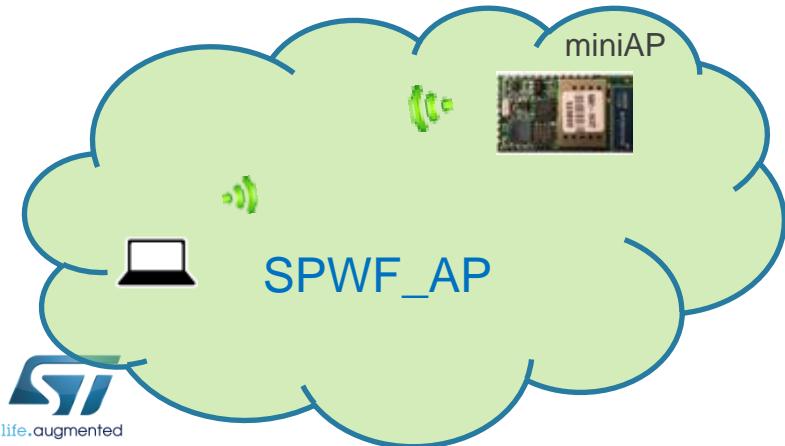

Lab 13: Joining a network

140

In order to be connected to an available Wifi network, the AP parameters setting is needed.

- Set the SSID
 - Type **AT+S.SSIDTXT=ENG-WPA**
- Set the password
 - Type **AT+S.SCFG=wifi_wpa_psk_text,helloworld**
- Set the network privacy mode (0=none, 1=WEP, 2=WPA-Personal (TKIP/AES) or WPA2-Personal (TKIP/AES))
 - Type **AT+S.SCFG=wifi_priv_mode,2**
 - N.B. wifi_auth_type must be set to 0 → AT+S.SCFG=wifi_auth_type,0
- Set the network mode (1 = STA, 2 = IBSS, 3 = MiniAP)
 - Type **AT+S.SCFG=wifi_mode,1**

Tera Term output

All
OK

Lab 13: Joining a network

141

- Save the settings on the flash memory and reset the module
 - Type **AT&W**
 - Type **AT+CFUN=1**



Tera Term output


| All |
|-----------------------------------------------------|
| +WIND:0:Console active |
| +WIND:46:WPA: Crunching PSK... |
| +WIND:32:WiFi Hardware Started |
| +WIND:21:WiFi Scanning |
| +WIND:35:WiFi Scan Complete (0x0) |
| +WIND:19:WiFi Join: 14:D6:4D:24:36:00 |
| +WIND:25:WiFi Association with 'ENG-WPA' successful |
| +WIND:51:WPA Handshake Complete |
| +WIND:24:WiFi Up: 192.168.0.1xx |

Lab 13: Socket Server

142

- Socket server: turn ON the TCP Socket Server (user must specify the server listening port)
 - Type **AT+S.SOCKD=32000** (AT+SOCKD=32000,u for UDP socket server)
- Check the status of the socket server
 - Type **AT+S.STS=ip_sockd_port**

Tip: you can Turn OFF the Socket Server using a server listening port = 0 (type AT+S.SOCKD=0)

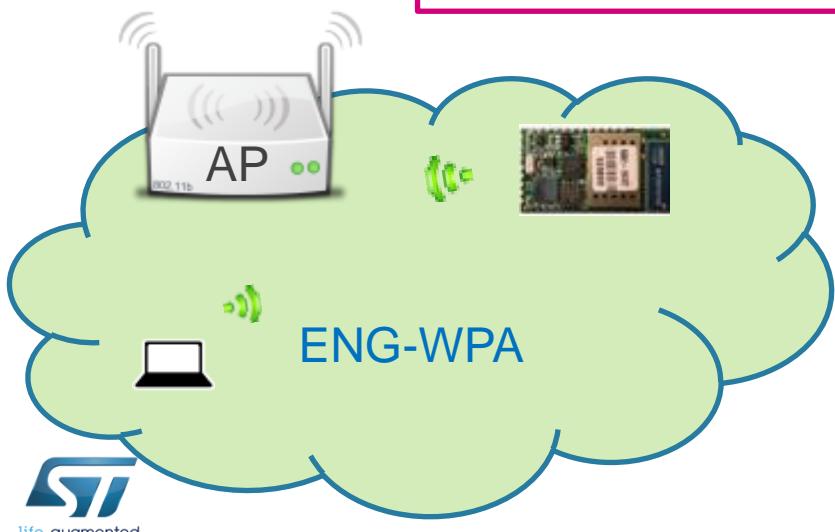



Tera Term output

| All |
|-------------------------|
| OK |
| # ip_sockd_port = 32000 |
| OK |

Lab 13: Socket Server

143

- Socket client: can be used a simple socket client in order to test the communication (SocketTest – available on <http://sourceforge.net/projects/sockettest>)

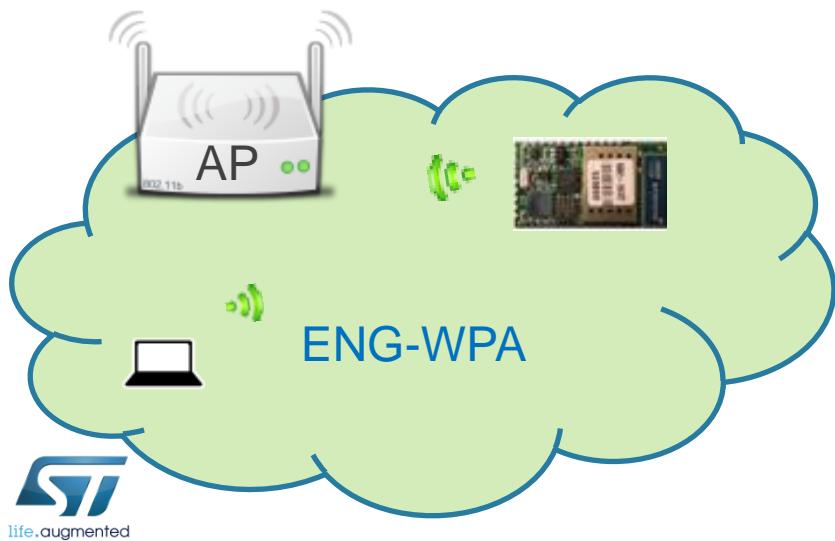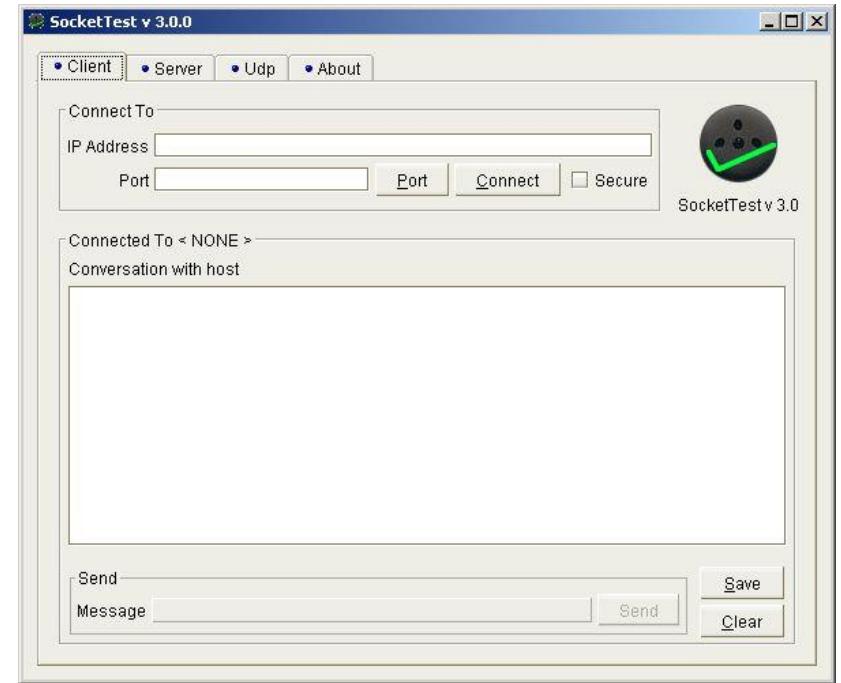


Lab 13: Socket Server

144

- Socket client:

- Insert the module's IP Address and the port
- Click on Connect button

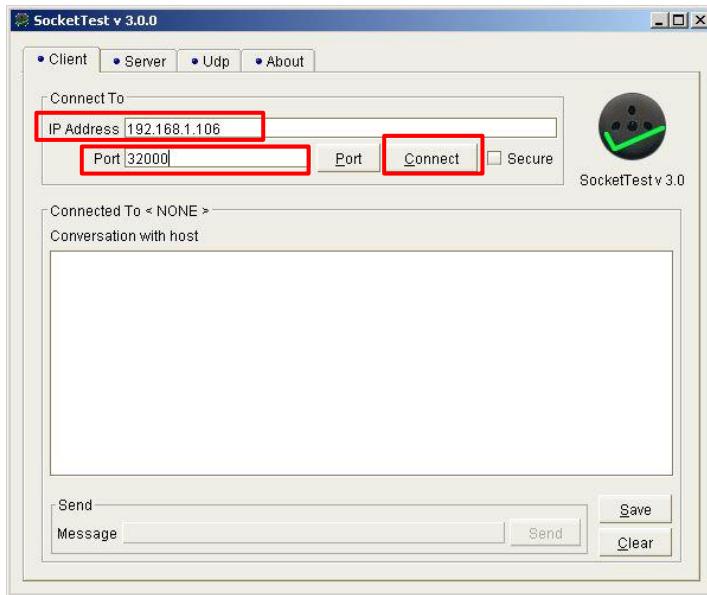

Tera Term output

All


+WIND:61:Incoming Socket
Client:192.168.1.102

+WIND:60:Now in Data Mode


Lab 13: Socket Server

145

- The module (socket server) enters in data mode and a bidirectional channel is created to allow exchanging data with the socket client
- Try to send and receive data from the module

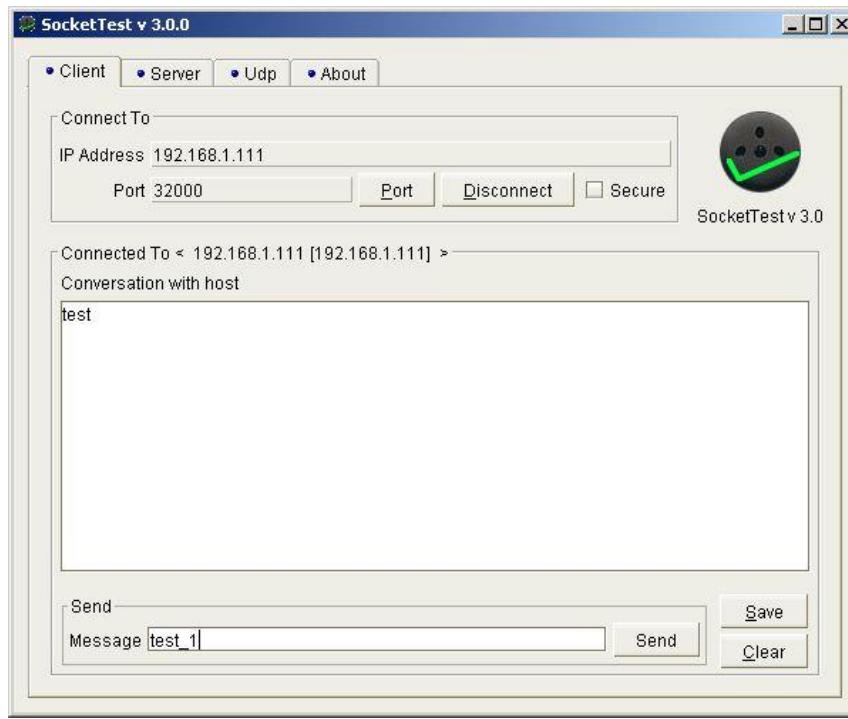

Tera Term output

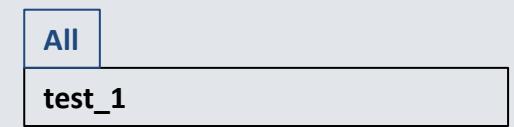

Lab 13: Socket Server – escape sequence

146

- From Data Mode to Command Mode
 - Configuration variable used: `escape_seq` (default is “`at+s.`”, case sensitive, suggested to be sent by the local host in a single complete packet with no CR or LF in the sequence)
- Type **at+s.**
- Now it’s possible to send AT commands while the socket connection is still active

Tip: During the Command Mode, you cannot send data to client, but can receive data from it. Every data chunk generates an URC (+WIND:64:Sockd Pending Data), with limit to 4 (x730 bytes). This is the max number of pending messages. From the 5th chunk on, messages are lost.

Tera Term output


All

+WIND:59:Back to Command
Mode

Lab 13: Socket Server – return to data mode

147

- From Command Mode to Data Mode
 - While in Command Mode
 - Type AT+S. (this is an AT command, AT+S. must be followed by <CR>)
- The module returns in data mode

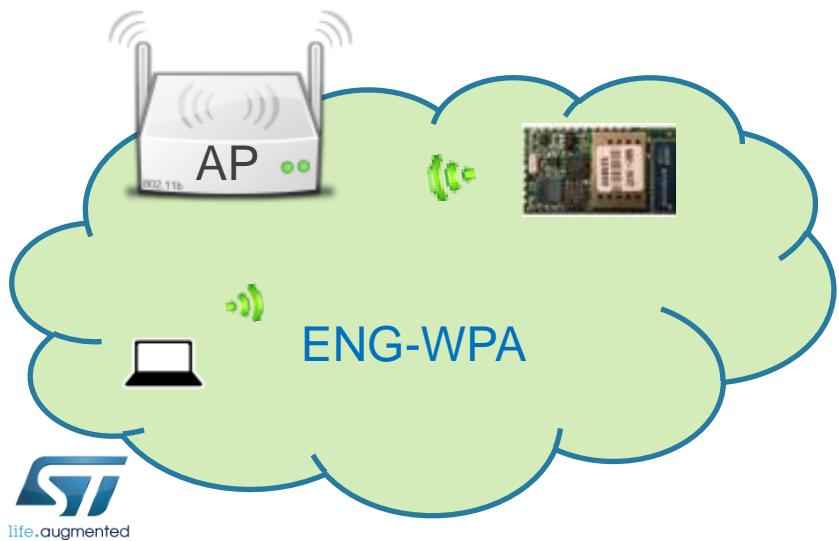


Tera Term output

| |
|---------------------------|
| All |
| +WIND:60:Now in Data Mode |

Lab 13: Socket Server – turn off

148

- Turn OFF the Socket Server
 - Type **at+s.** (to enter in command mode)
 - Type **AT+S.SOCKD=0**

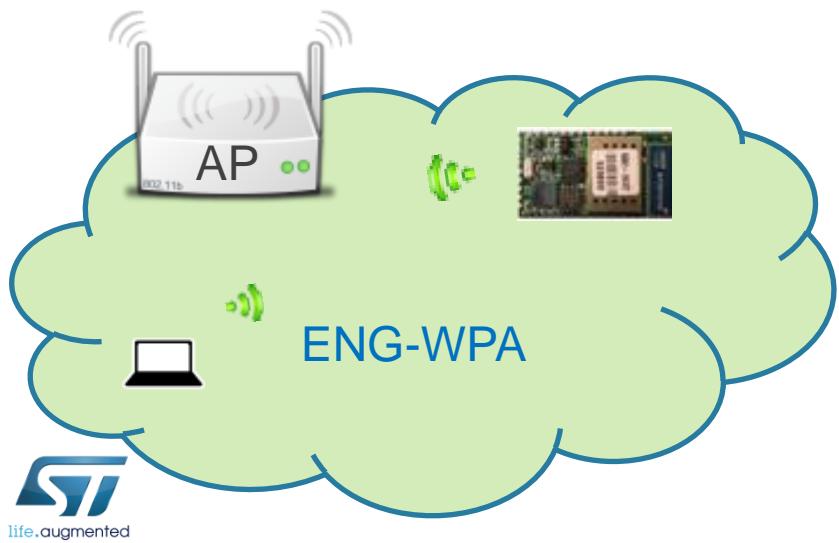

Tera Term output

| |
|----------------------------------------------|
| All |
| OK |
| +WIND:62:Socket Client Gone:192.168.1.102 |



Proceed to the next LAB!

Lab 14: Low power modes

150

- Objective
 - Practice with Radio Power Save
 - Sleep Mode
 - Standby Mode
- Prerequisites
 - module connected to the AP



Lab 14: Low power modes


151

This feature allows to enable the low power states.

The module supports the “Radio Power Save” mode, the “Sleep” mode and the “Standby” mode.

The module should be connected to the AP (as shown in Lab 3) in order to use the “Radio Power Save” mode.

Please refer to “SPWF01S Power Management Application Notes” for more details.

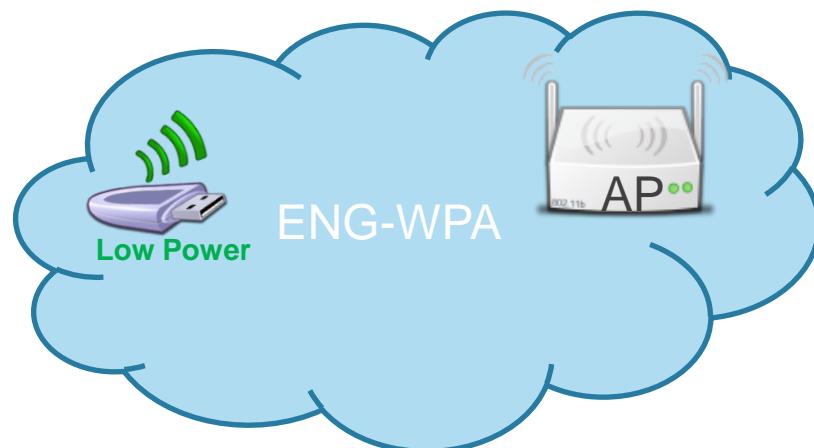

Lab 14: Joining a network

152

In order to be connected to an available Wifi network, the AP parameters setting is needed.

- Set the SSID
 - Type **AT+S.SSIDTXT=ENG-WPA**
- Set the password
 - Type **AT+S.SCFG=wifi_wpa_psk_text,helloworld**
- Set the network privacy mode (0=none, 1=WEP, 2=WPA-Personal (TKIP/AES) or WPA2-Personal (TKIP/AES))
 - Type **AT+S.SCFG=wifi_priv_mode,2**
 - N.B. wifi_auth_type must be set to 0 → AT+S.SCFG=wifi_auth_type,0
- Set the network mode (1 = STA, 2 = IBSS, 3 = MiniAP)
 - Type **AT+S.SCFG=wifi_mode,1**


Tera Term output

All
OK

Lab 14: Joining a network

153

- Save the settings on the flash memory and reset the module
 - Type **AT&W**
 - Type **AT+CFUN=1**

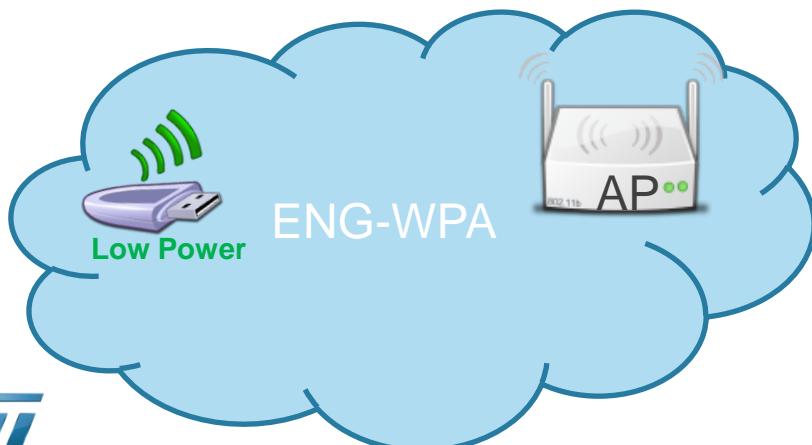

Tera Term output

All

```
+WIND:0:Console active
+WIND:46:WPA: Crunching PSK...
+WIND:32:WiFi Hardware Started
+WIND:21:WiFi Scanning
+WIND:35:WiFi Scan Complete (0x0)
+WIND:19:WiFi Join: 14:D6:4D:24:36:00
+WIND:25:WiFi Association with 'ENG-WPA' successful
+WIND:51:WPA Handshake Complete
+WIND:24:WiFi Up: 192.168.0.1xx
```

Lab 14: Low power modes – Power Save

154

| Module Power State | STM32 | WLAN |
|--------------------|---------|---------------------|
| Standby | Standby | Standby |
| Sleep | Stop | PS |
| Power Save | Run | PS or Fast-PS |
| Active Rx | Run | Rx Idle / Rx Active |
| Active Tx | Run | Tx Active |

Lab 14: Low power modes – Power Save

- By default, the module starts in ACTIVE mode.
- Enable the Power Save Mode:
 - Type **at+s.scfg=wifi_powersave,1** (“wifi_powersave,2” enables the Fast-PS mode)
- Enable the doze operational mode:
 - Type **at+s.scfg=wifi_operational_mode,11** (“wifi_operational_mode,12” enables the quiescent mode)
- Choose the wake up mode:
 1. Wake up every n. beacon (specified in the `wifi_beacon_wakeup` variable)
 - Type **at+s.scfg=wifi_listen_interval,0**
 - Type **at+s.scfg=wifi_beacon_wakeup,1**
OR
 2. Wake up every n. beacon adaptively (specified in the `wifi_beacon_wakeup` variable)
 - Type **at+s.scfg=wifi_listen_interval,1**
 - Type **at+s.scfg=wifi_beacon_wakeup,1**




*Tip: The Wifi Power Save (wifi_powersave,1) can also be quickly enabled using the command:
AT+CFUN=2*

Lab 14: Low power modes – Power Save

156

- Save the settings on the flash memory and reset the module
 - Type AT&W
 - Type AT+CFUN=1
- The WIND:66 message related to Low Power Mode will be displayed

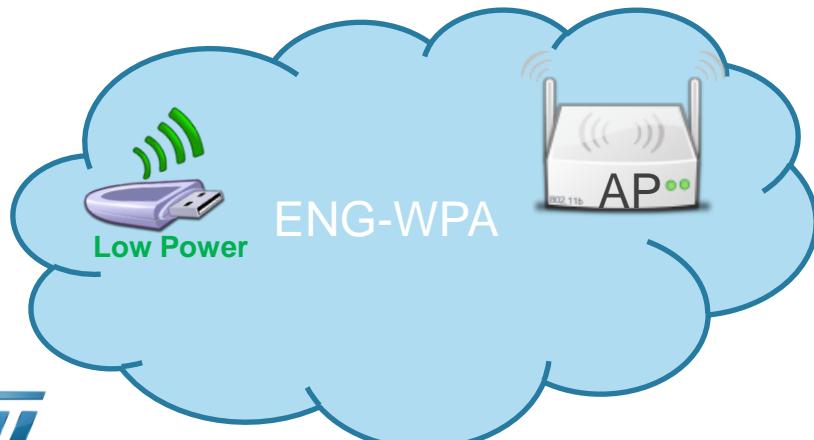

Tera Term output

| All |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| +WIND:1:Poweron (*****_*****-SPWF01S) +WIND:13:ST SPWF01S IWM: Copyright (c) 2012-2014 STMicroelectronics, Inc. All rights Reserved. +WIND:3:Watchdog Running +WIND:0:Console active +WIND:32:WiFi Hardware Started +WIND:21:WiFi Scanning +WIND:35:WiFi Scan Complete (0x0) +WIND:19:WiFi Join: 02:62:1F:51:8F:0B +WIND:25:WiFi Association with 'IoT' successful +WIND:51:WPA Handshake Complete +WIND:24:WiFi Up: 192.168.1.104 +WIND:66:Low Power mode:1 |

Lab 14: Low power modes – Sleep Mode

157

| Module Power State | STM32 | WLAN |
|--------------------|---------|---------------------|
| Standby | Standby | Standby |
| Sleep | Stop | PS or Fast-PS |
| Power Save | Run | PS or Fast-PS |
| Active Rx | Run | Rx Idle / Rx Active |
| Active Tx | Run | Tx Active |

Lab 14: Low power modes – Sleep Mode

- In the Sleep Mode, the core STM32 is stopped
- Enable the Sleep Mode:
 - Type **at+s.scfg=sleep_enabled,1**
- Enable the Power Save Mode:
 - Type **at+s.scfg=wifi_powersave,1** ("wifi_powersave,2" enables the Fast-PS mode)
- Enable the doze operational mode:
 - Type **at+s.scfg=wifi_operational_mode,11** ("wifi_operational_mode,12" enables the quiescent mode)
- Choose the wake up mode:
 1. Wake up every n. beacon (specified in the `wifi_beacon_wakeup` variable)
 - Type **at+s.scfg=wifi_listen_interval,0**
 - Type **at+s.scfg=wifi_beacon_wakeup,1**

OR
 2. Wake up every n. beacon adaptively (specified in the `wifi_beacon_wakeup` variable)
 - Type **at+s.scfg=wifi_listen_interval,1**
 - Type **at+s.scfg=wifi_beacon_wakeup,1**




Tip: The Wifi Sleep Mode (and wifi_powersave,1) can also be quickly enabled using the command: AT+CFUN=3

Lab 14: Low power modes – Sleep Mode

159

- Save the settings on the flash memory and reset the module
 - Type **AT&W**
 - Type **AT+CFUN=1**
- The WIND:69 message related to Sleep Mode will be displayed

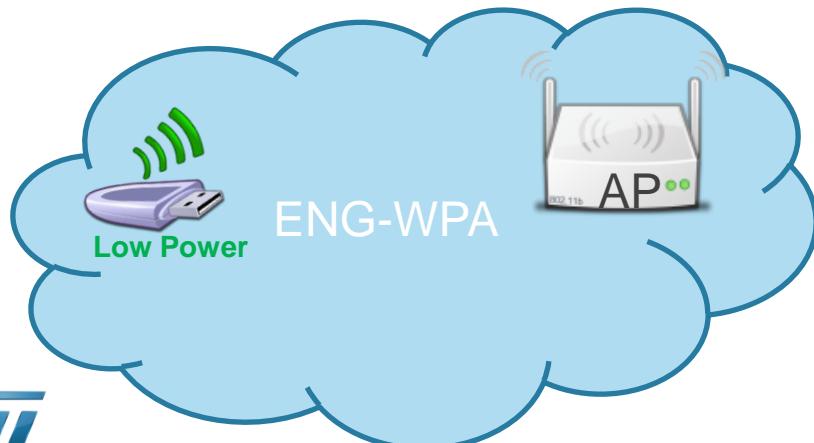


Tera Term output

All

```
+WIND:1:Poweron (*****-*****-SPWF01S)
+WIND:13:ST SPWF01S IWM: Copyright (c) 2012-2014
STMicroelectronics, Inc. All rights Reserved.
+WIND:3:Watchdog Running
+WIND:0:Console active
+WIND:32:WiFi Hardware Started
+WIND:21:WiFi Scanning
+WIND:35:WiFi Scan Complete (0x0)
+WIND:19:WiFi Join: 02:62:1F:51:8F:0B
+WIND:25:WiFi Association with 'IoT' successful
+WIND:51:WPA Handshake Complete
+WIND:24:WiFi Up: 192.168.1.104
+WIND:66:Low Power mode:1
+WIND:69:Going into DeepSleep
```

Lab 14: Low power modes – Sleep Mode

- Wake STM32 up using the GPIO6
 - Put the GPIO6 to 2.5V (jumper on JP2 as in the picture)
- The WIND messages will be displayed

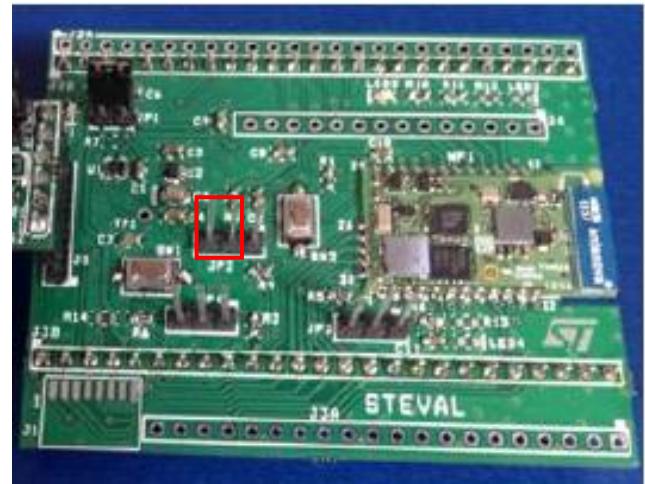

Tera Term output

All

```
+WIND:70:Resuming from DeepSleep  
+WIND:53:Wakeup (GPIO6 High)
```



Lab 14: Low power modes – Sleep Mode

161

- Put STM32 in sleep mode using the GPIO6
 - Go back the GPIO6 floating (remove jumper - as default)
- The WIND:69 message will be displayed

Tera Term output

All



+WIND:69:Going into DeepSleep



Lab 14: Low power modes – Sleep Mode

162


- Wake STM32 up using the remote page
 - Connect a device to the same module's network
 - Open the following link:
[http://\[module_IP_address\]/remote.html](http://[module_IP_address]/remote.html)
 - Select “Wake” and click on “Go!” button to wake up the module
- The WIND message will be displayed

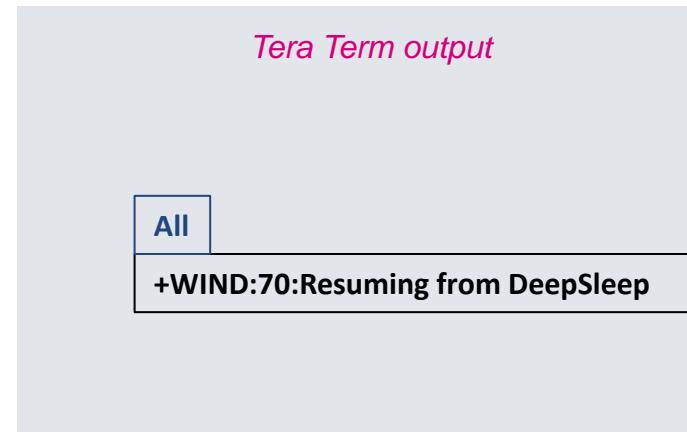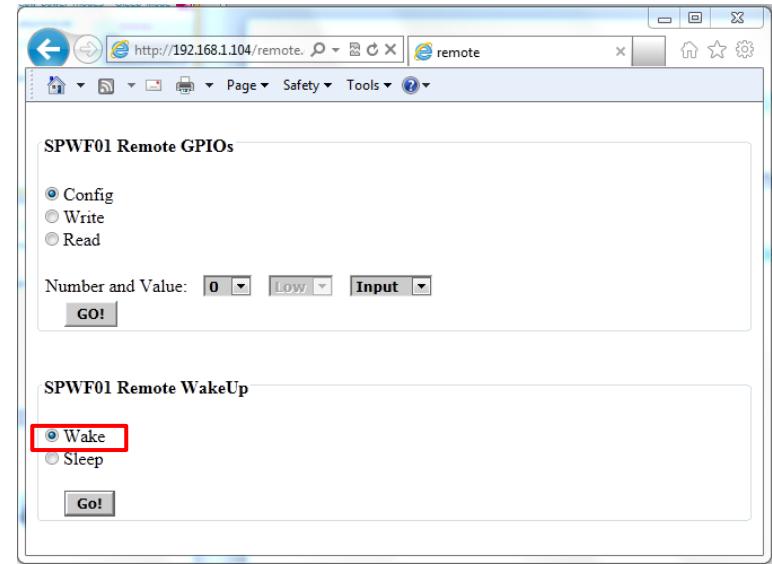


Lab 14: Low power modes – Sleep Mode

163

- Put STM32 in sleep mode using the remote page
 - Connect a device to the same module's network
 - Open the following link:
[http://\[module_IP_address\]/remote.html](http://[module_IP_address]/remote.html)
 - Select "Sleep" and click on "Go!" button to put the module in sleep mode

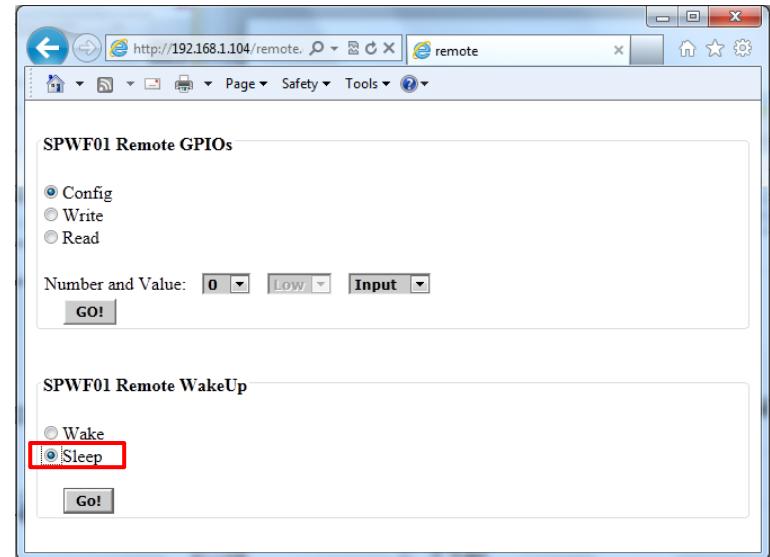

- The WIND message will be displayed

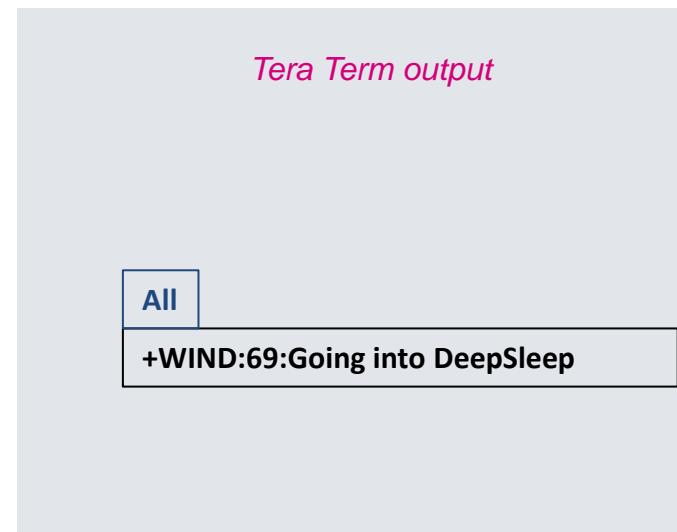

Lab 14: Low power modes – Standby Mode

164

| Module Power State | STM32 | WLAN |
|--------------------|---------|---------------------|
| Standby | Standby | Standby |
| Sleep | Stop | PS or Fast-PS |
| Power Save | Run | PS or Fast-PS |
| Active Rx | Run | Rx Idle / Rx Active |
| Active Tx | Run | Tx Active |

Lab 14: Low power modes – Standby Mode

- During the Standby Mode, both the STM32 and the Radio will be put in standby mode. The standby mode allows to achieve the lowest power consumption.
- Enable the Standby Mode:
 - Type **at+s.scfg=sleep_enabled,0** (**Sleep mode must be disabled**)
 - Type **at+s.scfg=standby_enabled,1**
 - Please be sure that GPIO6 isn't forced high
- Set the standby time to wake up via RTC alarm:
 - Type **at+s.scfg=standby_time,15**



*Tip: The Wifi Standby Mode can also be quickly enabled using the command:
AT+CFUN=4*

Lab 14: Low power modes – Standby Mode

166

- Save the settings on the flash memory and reset the module
 - Type **AT&W**
 - Type **AT+CFUN=1**
- After 15 seconds, the module will be rebooted and will return in the ACTIVE state.




Tera Term output

| All |
|--------------------------------------------------|
| +WIND:0:Console active |
| +WIND:32:WiFi Hardware Started |
| +WIND:38:WiFi: Powered Down |
| +WIND:67:Going into Standby:15 |
| +WIND:68:Resuming from Standby |
| +WIND:1:Poweron (*****-*****-SPWF01S) |
| +WIND:13:ST SPWF01S IWM: Copyright (c) 2012-2014 |
| STMicroelectronics, Inc. All rights Reserved. |
| +WIND:3:Watchdog Running |
| +WIND:0:Console active |
| +WIND:32:WiFi Hardware Started |
| +WIND:21:WiFi Scanning |
| +WIND:35:WiFi Scan Complete (0x0) |
| +WIND:19:WiFi Join:02:62:1F:51:8F:0B |
| +WIND:25:WiFi Association with 'IoT' successful |
| +WIND:51:WPA Handshake Complete |
| +WIND:24:WiFi Up:192.168.1.113 |

Lab 14: Low power modes – Standby Mode

167

- Wake up the module using the GPIO6
- Enable the Standby Mode:
 - Type **at+s.scfg=sleep_enabled,0** (make sure that **Sleep mode is disabled**)
 - Type **at+s.scfg=standby_enabled,1**
 - Type **AT&W**
 - Type **AT+CFUN=1**
- Put the GPIO6 to 2.5V to wake up the module
- The WIND message will be displayed and the module will return in ACTIVE state

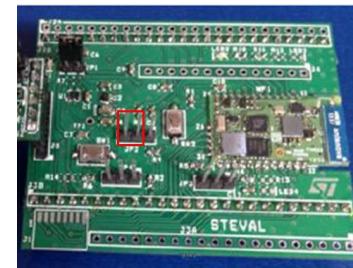


Tera Term output



All

```
+WIND:68:Resuming from Standby
+WIND:1:Poweron (*****_*****_
SPWF01S)
.....
```

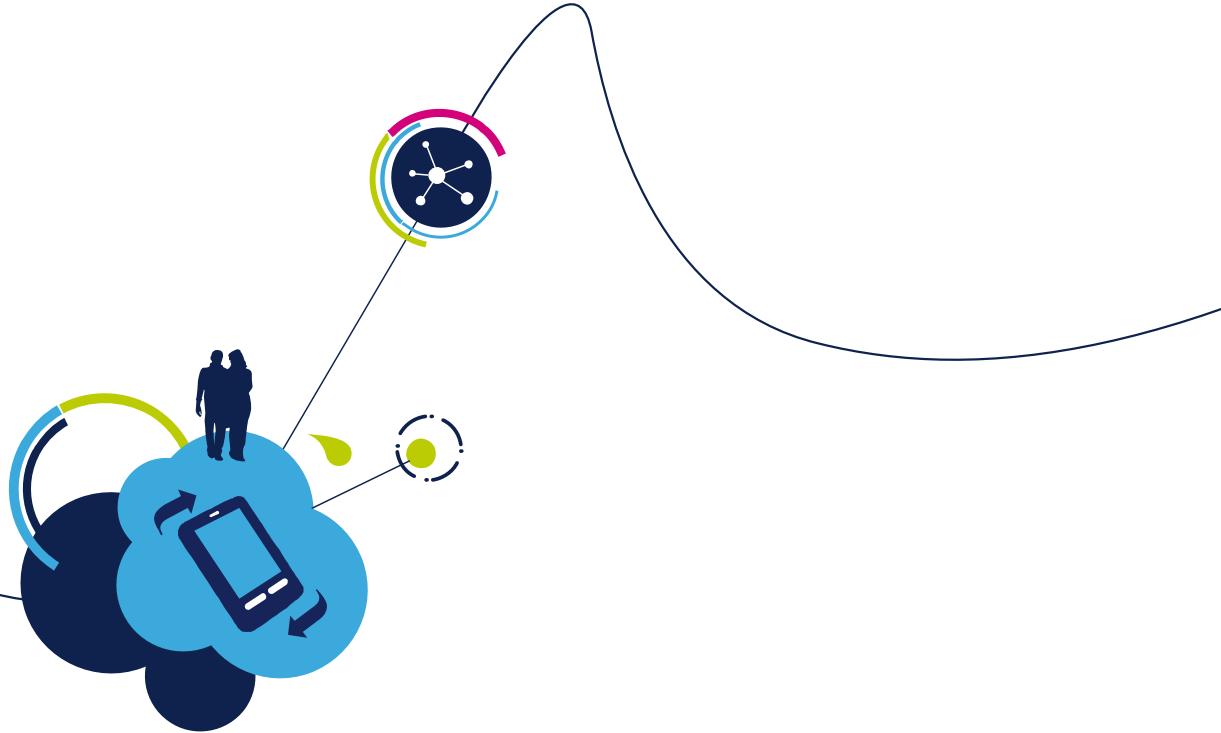

Proceed to the next LAB!

Lab 15: STA/MINI AP switcher

169

- Objective
 - HW “STA to MiniAP” switcher
- Prerequisites
 - Work alone



Lab 15: STA/MINI AP switcher

170

This feature allows to force the module in Mini AP mode starting from a preexistent state.


“Recovery Mode”: this functionality could be useful to lead the module in a known state and to reconfigure it (i.e. using the firstset page).

The GPIO7 will be used to drive this feature.

Lab 15: STA/MINI AP switcher

171

- Press and hold the SW2 button on the EVAL and then perform a reset (HW reset via SW1 button or SW reset via AT command)
- Release the SW2 button
- The MiniAP mode will be started and the module is discoverable with the following SSID:
 - **iwm-XX-YY-ZZ** where XX-YY-ZZ are the last six digits of module's MAC ADDRESS

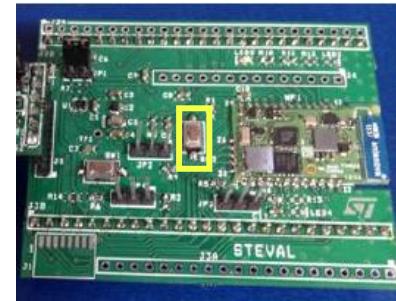

Tip: To exit from “miniAP mode via GPIO7”, perform a module’s reset

Tera Term output

All

```
+WIND:2:Reset  
+WIND:1:Poweron (*****_*****_  
SPWF01S)  
+WIND:13:ST SPWF01S IWM:  
Copyright (c) 2012-2014  
STMicroelectronics, Inc. All rights  
Reserved.  
+WIND:39:HW in miniAP mode (GPIO7  
Low)  
+WIND:0:Console active  
+WIND:3:Watchdog Running  
+WIND:32:WiFi Hardware Started  
+WIND:26:WiFi Started AP  
+WIND:24:WiFi Up:172.31.255.1
```




Proceed to the next LAB!

Lab 16: IBSS connection

173

- Objective
 - Create an IBSS network
- Prerequisites
 - Work alone

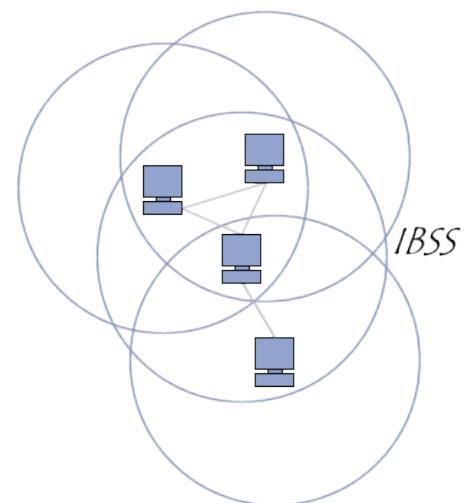

Lab 16: Create an IBSS network

174

In an IBSS network, the SSID is chosen by the client device that starts the network.

Module settings to create an IBSS network:

- Set the IBSS SSID
 - Type **AT+S.SSIDTXT=ADHOC**
- Set the network privacy mode (0=OPEN or 1=WEP are supported)
 - Type **AT+S.SCFG=wifi_priv_mode,0**
- Set the network mode (2 = IBSS)
 - Type **AT+S.SCFG=wifi_mode,2**

Tera Term output



Lab 16: Create an IBSS network

175

- Set IP address, IP default gateway, IP DNS and IP netmask
 - Type **AT+S.SCFG=ip_ipaddr,192.168.y.1xx**
 - Type **AT+S.SCFG=ip_gw,192.168.y.1**
 - Type **AT+S.SCFG=ip_dns,192.168.y.1**
 - Type **AT+S.SCFG=ip_netmask,255.255.255.0**
- Turn off the DHCP
 - Type **AT+S.SCFG=ip_use_dhcp,0**

Tera Term output



Lab 16: Create an IBSS network

176

- Save the settings on the flash memory and reset the module
 - Type **AT&W**
 - Type **AT+CFUN=1**



Tera Term output

All


```
+WIND:0:Console active
+WIND:32:WiFi Hardware Started
+WIND:21:WiFi Scanning
+WIND:35:WiFi Scan Complete (0x0)
+WIND:19:WiFi Join: EE:33:CE:00:24:18
+WIND:25:WiFi Association with 'ADHOC' successful
+WIND:51:WiFi Handshake Complete
+WIND:24:WiFi Up: 192.168.1.3
```

Lab 16: Create an IBSS network

177

- Associate the iOS device with the ADHOC network (iOS > 8 could not support the IBSS mode)

Tip: manual configuration of static TCP/IPv4 parameters is suggested using a PC i.e. PC TCP/IPv4 properties

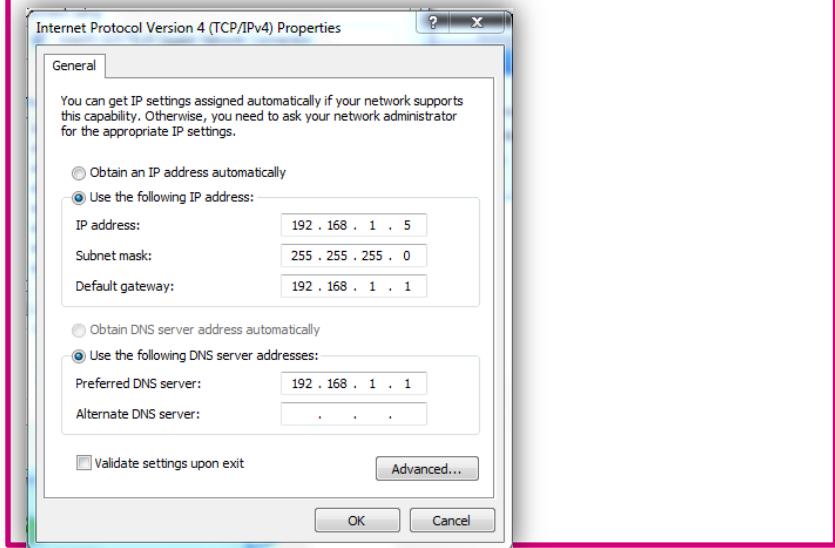

Lab 16: Create an IBSS network


178

- Find your IP address
 - Type **AT+S.STS**

```
# ip_ipaddr = 192.168.1.3
# ip_netmask = 255.255.255.0
# ip_gw = 192.168.1.1
```

- Open Safari web browser
- In the address bar, type
<SPWF IP address>/index.html
 - Type 192.168.y.1xx/index.html



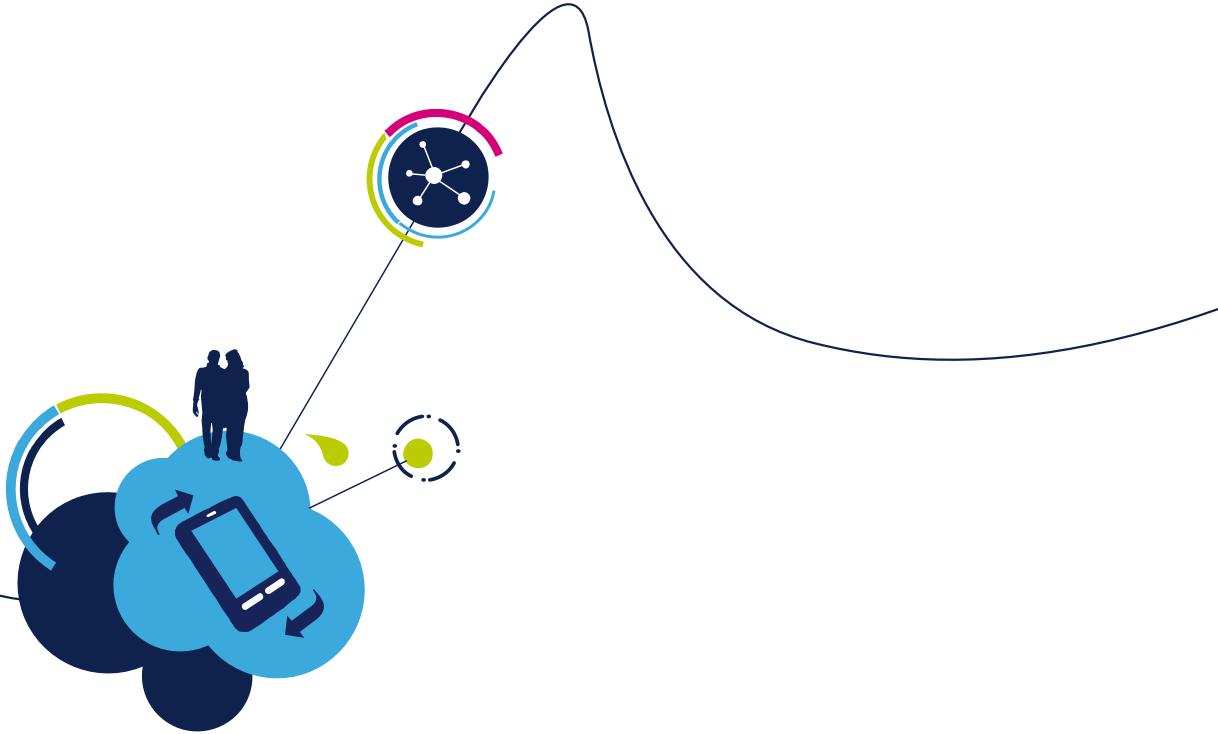

THANK YOU!