

AIM-Edge psox/pson Jetpack 6.1 Developer Image Refresh over Ethernet

User Manual

7 January 2025 Version 2.0



Content

1.	Intro	ntroduction				
2.	I/O Port Overview					
3.	Getti	ng Started	3			
	3.1.	Hardware Requirement	3			
	3.2.	Download OTA Image Package & Tool	3			
	3.3.	Start OTA download	3			
4.	Appe	endix	7			
	4.1.	Login to AIM-Edge psox/pson by ssh				
	4.2.	AlMobile Container Usage	7			
	4.3.	OTA Package in Parts	8			
5.	Know	vn Issue				



Revision History


Date	Version	Modification
2024/02/26	1.0	Creation
2024/05/10	1.1	Improve user experience of downloading process
		2. Add OTA package in parts
2025/01/03	2.0	Upgrade to Jetpack 6.1



1. Introduction

This document is to describe how to download Jetpack 6.1 system image to AIM-Edge psox/pson device over Ethernet, including hardware requirement, download image package and image refreshing procedures.

2. I/O Port Overview

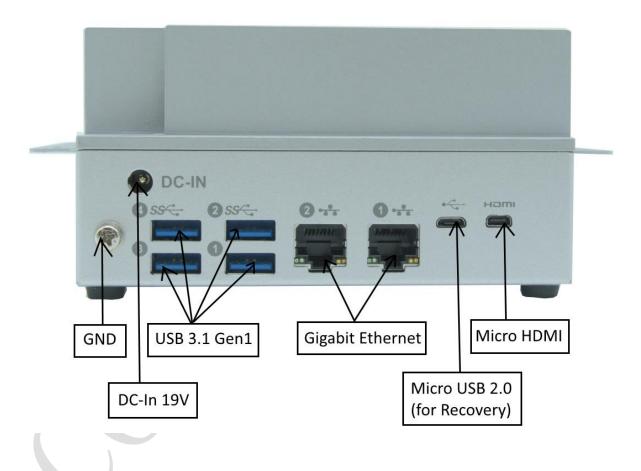

AlMobîle







3. Getting Started

3.1. Hardware Requirement

To refresh the image over Ethernet, it needs a Linux Host PC/Notebook with Ubuntu Linux X64 20.04 or 18.04, and the Host PC/NB should be able to connect to AIM-Edge psox/pson through LAN.

3.2. Download OTA Image Package & Tool

Check the OneDrive URL provided by AIMobile for OTA image refresh package folder (O2_dev_6.1_V02_OTA in the example below), there will be OTA image file (ota_payload_package.tar.gz & ota_payload_package_R35-4_R35-5.tar.gz), OTA tool (ota_tools_r36.4.0_v3.tar.bz2) OTA payload list (ota_payload_list) & script (ota.sh). Download all the files to Host PC/NB.



3.3. Start OTA download

At first, user needs to check the image version of the device will be updated by the command below:

\$ cat /etc/nv_tegra_release

The output will be as below for Jetpack 5.1.2 or Jetpack 6.0

➤ Jetpack 5.1.2:



R35 (release), REVISION: 4.1, GCID: 33958178, BOARD: t186ref, EABI: aarch64, DATE: Tue Aug 1 19:57:35 UTC 2023

➤ Jetpack 6.0

```
# R36 (release), REVISION: 3.0, GCID: 36191598, BOARD: generic, EABI: aarch64, DATE: Mon May 6 17:34:21 UTC 2024
```

Depends on the original image version of the device will be updated, user needs to run the OTA script from Host PC/NB with different OTA image package as below, check the table below for parameters may need change, and user can check section 4.1 about how to get target device IP address.

➤ Jetpack 5.1.2 (The ota_payload_list contains ota_payload_package_R35-4_R35-5.tar.gz and ota_payload_package.tar.gz):

```
./ota.sh -i 192.168.55.1 -p @ota_payload_list -t ota_tools_r36.4.0_V3.tar.bz2 --port 22
```

➤ Jetpack 6.0 (It needs to update ota_payload_package.tar.gz only):

./ota.sh -i 192.168.55.1 -p ota_payload_package.tar.gz -t ota_tools_r36.4.0_V3.tar.bz2 --port 22

Option	Parameter description		
-i	Target device IP		
-p	OTA package file name		
-t	OTA tool file name		
port	Target device SSH port number (default:22)		

1. Input target device account and password, the OTA tool & image file will be uploaded to the target device.



2. After the file uploading is completed, the files will be decompressed on the target device.

```
Linux_for_Tegra/tools/ota_tools/version_upgrade/nv_ota_update.sh
Linux_for_Tegra/tools/ota_tools/version_upgrade/pv_1.6.6-1_arm64.deb
Linux_for_Tegra/tools/ota_tools/version_upgrade/ota_validate_params.sh
Linux_for_Tegra/tools/ota_tools/version_upgrade/l4t_generate_ota_package.sh
Linux_for_Tegra/tools/ota_tools/version_upgrade/nv_ota_validate.sh
Linux_for_Tegra/tools/ota_tools/version_upgrade/nv_ota_update_without_layout_change.sh
Linux_for_Tegra/tools/ota_tools/version_upgrade/nv_ota_customer.conf
Linux_for_Tegra/tools/ota_tools/version_upgrade/ota_multi_board_specs.sh
Linux_for_Tegra/tools/ota_tools/version_upgrade/kernel_bootctrl.bin.reset
Linux_for_Tegra/tools/ota_tools/version_upgrade/nv_ota_decompress_package.sh
Linux_for_Tegra/p2822-0000+p2888-0004-R32x-R35i.conf
tar: Linux_for_Tegra/tools/ota_tools/version_upgrade: time stamp 2024-03-14 12:01:00 is 136939.707366304 s in the future
Linux_for_Tegra/p2822-0000+p2888-0008-R35A-R35i.conf
Linux_for_Tegra/p2822-0000+p2888-0004-R35A-R35i.conf
Linux_for_Tegra/jetson-agx-xavier-devkit-R32x-R35i.conf
Linux_for_Tegra/jetson-agx-xavier-devkit-R35A-R35i.conf
Linux_for_Tegra/p2822-0000+p2888-0008-R32x-R35i.conf
Linux_for_Tegra/jetson-xnx-devkit-emmc-R35A-R35i.conf
Linux_for_Tegra/jetson-xnx-devkit-emmc-R32i.conf
Linux_for_Tegra/jaxi-R35A-R35i.conf
Linux_for_Tegra/p3509-0000+p3668-0001-qspi-emmc-R35A-R35i.conf
Linux_for_Tegra/jaxi-R32x-R35i.conf
Linux_for_Tegra/Tegra_Software_License_Agreement-Tegra-Linux.txt
Linux_for_Tegra/p3509-0000+p3668-0001-qspi-emmc-R32i.conf
Linux_for_Tegra/bootloader/
Linux_for_Tegra/bootloader/t186ref/
Linux_for_Tegra/bootloader/t186ref/BCT/
Linux_for_Tegra/bootloader/t186ref/BCT/tegra186-mb1-bct-misc-si-l4t-r32i.cfg
Linux_for_Tegra/bootloader/t186ref/cfg/
Linux_for_Tegra/bootloader/t186ref/cfg/flash_t194_sdmmc_rootfs_ab_R35A_R35i.xml
Linux_for_Tegra/bootloader/t186ref/cfg/flash_l4t_t194_spi_emmc_p3668_rootfs_ab_R35A_R35i.xml
Linux_for_Tegra/bootloader/t186ref/cfg/flash_t194_sdmmc_R32x_R35i.xml
Linux_for_Tegra/bootloader/t186ref/cfg/flash_t194_sdmmc_rootfs_ab_R32x_R35i.xml
Linux_for_Tegra/bootloader/t186ref/cfg/flash_l4t_t194_spi_emmc_jaxi_rootfs_ab_R32x_R35i.xml
Linux_for_Tegra/bootloader/t186ref/cfg/flash_l4t_t194_spi_emmc_jaxi_R35A_R35i.xml
Linux_for_Tegra/bootloader/t186ref/cfg/flash_t194_sdmmc_R35A_R35i.xml
Linux_for_Tegra/bootloader/t186ref/cfg/flash_l4t_t194_spi_emmc_p3668_R35A_R35i.xml
Linux_for_Tegra/bootloader/t186ref/cfg/flash_l4t_t194_spi_emmc_p3668_rootfs_ab_R32i.xml
Linux_for_Tegra/bootloader/t186ref/cfg/flash_l4t_t194_spi_emmc_jaxi_R32x_R35i.xml
Linux_for_Tegra/bootloader/t186ref/cfg/flash_l4t_t194_spi_emmc_p3668_R32i.xml
Linux_for_Tegra/bootloader/t186ref/cfg/flash_l4t_t194_spi_emmc_jaxi_rootfs_ab_R35A_R35i.xml
Linux_for_Tegra/bootloader/t186ref/cfg/flash_l4t_t194_spi_emmc_p3668_R32x_R35i.xml
Linux_for_Tegra/bootloader/t186ref/cfg/flash_l4t_t194_spi_emmc_p3668_rootfs_ab_R32x_R35i.xml
[sudo] password for aim: Selecting previously unselected package pv.
(Reading database ... 145653 files and directories currently installed.)
Preparing to unpack pv_1.6.6-1_arm64.deb ...
Unpacking pv (1.6.6-1) ...
Setting up pv (1.6.6-1) ...
Processing triggers for man-db (2.9.1-1) ...
Command: /tmp/Linux_for_Tegra/tools/ota_tools/version_upgrade/nv_ota_start.sh /tmp/ota_payload_package.tar.gz
Current rootfs is on /dev/nvme0n1
init_ota_log /ota_log
Creating log dir at /ota_log
Create log file at /ota_log/ota_20240312-215841.log
OTA_LOG_FILE=/ota_log/ota_20240312-215841.log
Extract /tmp/ota_payload_package.tar.gz
6.88GiB 0:01:30 [85.7MiB/s] [=
                                                                 ] 60% ETA 0:00:59
```

3. After the files are decompressed, it will check the OTA package file integrity.



```
Info. Active boot storage: nvme0n1
Info. Legacy mode: false
TNSPEC 3767-300-0000-L.2-1-0-p3509-a02+p3767-0000-
COMPATIBLE_SPEC 3767-000-0000--1--p3509-a02+p3767-0000-
TEGRA_LEGACY_UPDATE false
TEGRA_BOOT_STORAGE nvme@n1
TEGRA_EMMC_ONLY false
TEGRA_CHIPID 0x23
TEGRA_OTA_BOOT_DEVICE /dev/mtdblock0
TEGRA_OTA_GPT_DEVICE /dev/mtdblock0
Info: Write TegraPlatformCompatSpec with 3767-000-0000--1--p3509-a02+p3767-0000-.
Info. Uninstalling mtdblock.
check_prerequisites
decompress_ota_package ota_package.tar /ota_work
decompress_ota_package: start at Mon 11 Mar 2024 05:59:44 PM CST
11.6GiB 0:00:35 [ 335MiB/s] [===
                                                            ==>7 100%
Sha1 checksum for /ota_work/ota_package.tar (4169b4b774280e73a3b199bc09d5d19ebea7ed1c) matches
1.90GiB 0:00:14 [ 395KiB/s] [====>
                                                               ] 16% ETA 0:01:11
```

4. After file integrity checking is done, the target device will start image updating automatically.

```
stall_partition_with_alt /ota_work/external_device/images-R35-ToT esp
prerequisite_check_esp
The /ota_work/external_device/images-R35-ToT/esp.img for partition esp is not found
Skip updating esp partition as no valid image is found
update_rootfs /ota_work
update_rootfs_with_a_b_disabled /ota_work
force_booting_to_recovery p3509-a02+p3767-0000

Force booting_to_recovery p3509-a02+p3767-0000

Force booting to recovery by writing \x07\x00\x00\x00\x00\x00\x00\x00\x00 to UEFI variable L4TDefaultBootMode-781e084c-a330-417c-b678-38e696380cb9

dd if=/tmp/var_tmp.bin of=L4TDefaultBootMode-781e084c-a330-417c-b678-38e696380cb9 bs=8
1+0 records in
1+0 records out
8 bytes copied, 0.00706323 s, 1.1 kB/s
Rootfs is to be updated in recovery kernel once device is rebooted.
check_bootloader_version /ota_work
update_bootloader /ota_work
Bootloader on non-current slot(B) is to be updated once device is rebooted
OTA start at Tue Mar 19 15:58:05 CST 2024.
                                                              <del>////</del> [54%] [-]
Bootloader on non-current slot(B) is to be updated once device is rebooted
OTA start at Tue Mar 19 15:58:05 CST 2024.
```

5. The image updating will take around 15~20 minutes, and the Host PC/NB will monitor the target device status continuously, after the Host PC/NB detect the target device is reconnected to network, the OTA process is completed.

6. If Host PC/NB waits for longer than 30 minutes, it will abort the OTA script and show warning message "OTA status: Timeout please check device power" to remind user to check target device status.



4. Appendix

4.1. Login to AIM-Edge psox/pson by ssh

- 1. AIM-Edge psox/pson Gigabit Ethernet port is set to DHCP mode on default, it will try to get IP address from router in LAN directly after power on.
- 2. Please check the LAN router/access point Web control interface to know the IP assigned to psox/pson, the psox/pson device name should be "AIM-dev-xxxx" as the screenshot below.



- 3. Connect to AIM-Edge psox/pson from Host NB/PC with ssh (Username: aim /Password: aim12345).
- 4. Because of security concern, user will be asked to change the password on the first login.

```
WARNING: Your password has expired.
You must change your password now and login again!
Changing password for aim.
Current password: |
```

4.2. AlMobile Container Usage

Please check readme.txt on Ubuntu desktop about pre-installed AIMobile container usage including how to relocate the container image.

The AIMobile container image is pre-installed to root file system, it takes around 13GB, and it can be removed with "docker system prune -af" command.

```
aim@AIM-dev-4737:~$ docker images
REPOSITORY TAG IMAGE ID CREATED SIZE
aimobile/l4t-jetpack_ r35.4.1 353b9824dd21 2 weeks ago 12.9GB
```



4.3. OTA Package in Parts

If user meets problem on downloading OTA image file because of slow internet speed, we split the ota_payload_package.tar.gz file to 2GB files to ease the downloading process. After all split files are downloaded, they can be combined with the command below.

cat ota_payload_package.tar.gz-part* > ota_payload_package.tar.gz

Lin.StevenYY 林彥宇 AIM > O1_dev_6.1 > O1_dev_6.1_V01 > O1_dev_6.1_V01_OTA w							
□ 名稱 ↑ ∨	修改時間 ~	修改者 ~	檔案大小 ~				
ota_payload_package.tar.gz-part01	2 小時前	Lin.StevenYY 林彥宇	2 GB				
ota_payload_package.tar.gz-part02	2 小時前	Lin.StevenYY 林彥宇	2 GB				
ota_payload_package.tar.gz-part03	2 小時前	Lin.StevenYY 林彥宇	2 GB				
ota_payload_package.tar.gz-part04	2 小時前	Lin.StevenYY 林彥宇	2 GB				
ota_payload_package.tar.gz-part05	2 小時前	Lin.StevenYY 林彥宇	2 GB				
ota_payload_package.tar.gz-part06	大約一小時前	Lin.StevenYY 林彥宇	2 GB				
ota_payload_package.tar.gz-part07	大約一小時前	Lin.StevenYY 林彥宇	1.31 GB				

5. Known Issue

N/A