SCOPE OF APPLICATION	HYUNDAI	SHT/SHTS
All Project/Engineering	AUTRON	1 / 203
Responsibility: 제어SW플랫폼1팀	AUTOSAR User Manual	DOC. NO

Document Change History				
Ver.	Editor	Chap	내용(개정 전 -> 개정 후)	
0.1	Seongmin Kim		Draft Version of document	
1.0.0	Daehwan.Lim		Release Initial Version of document	
1.1.0	Daehwan,Lim		Update for release 1.5.0 version of RTE generator	
1.2.0	Seongmin Kim		Update for release 1.5.1 version of RTE generator	
1.3.0	JeongSu Lim		Update for release 1.5.2 version of RTE generator	
1.3.1	Daehwan Lim		Update for release 1.5.3 version of RTE generator	
1.3.2	Daehwan Lim		Update for release 1.5.4 version of RTE generator Add design decision for Rte_Mode Add the description for behavior of partition start among multi partitions. Remove parameter regarding OsInteraction (Autron Specific Parameter) and add the description to handle the synchronized offset for OsAlarm based on Specific Counter Add the description regarding configuration in RteOsInteraction and introduce the new configuration parameter (Autron Specific) Add the new error message on generation	
1.3.3	Seongmin Kim		Update for release 1.5.5 version of RTE generator Add a new parameter RteEndToEndProtectionWrapperMode Add new error messages on generation Add ChangeLog for release 1.5.5 version	
1.3.4	JeongSu Lim	Update for release 1.5.6 version of RTE generator Add ChangeLog for release 1.5.6 version		
1.3.5	JeongSu Lim		Update for release 1.5.7 version of RTE generator Add ChangeLog for release 1.5.7 version	
411	Daoino Bark	4.3	Update for release 4.1.1 version of RTE generator	
4.1.1	Daejuli Park	7.2	Update Generator Error Message	
4.1.2	Daejun Park	4.3	Update for release 4.1.2 version of RTE generator	
4.2.0	JeongSu Lim		Update for release 4.2.0 version of RTE generator	
	Ver. 0.1 1.0.0 1.1.0 1.2.0 1.3.0 1.3.1 1.3.2 1.3.2	Ver. Editor 0.1 Seongmin Kim 1.0.0 Daehwan.Lim 1.1.0 Daehwan.Lim 1.2.0 Seongmin Kim 1.3.1 Daehwan Lim 1.3.1 Daehwan Lim 1.3.2 Daehwan Lim 1.3.3 Seongmin Kim 1.3.4 JeongSu Lim 1.3.5 JeongSu Lim 4.1.1 Daejun Park 4.1.2 Daejun Park	Ver. Editor Chap 0.1 Seongmin Kim 1.0.0 Daehwan.Lim 1.1.0 Daehwan.Lim 1.2.0 Seongmin Kim 1.3.1 Daehwan Lim 1.3.2 Daehwan Lim 1.3.3 Seongmin Kim 1.3.4 JeongSu Lim 1.3.5 JeongSu Lim 4.1.1 Daejun Park 4.3 4.1.2 Daejun Park 4.3	

Edition Date:	File Name	Creation	Check	Approval
2020-12-21	AUTRON_AUTOSAR_RTE_UM.pdf	KY Yun	JS LIM	JH Baek
Document		2020/12/21	2020/12/21	2020/12/21
Management System				

SHT/SHTS 2 / 203

2016-06-03	4.2.1	JeongSu Lim		Update for release 4.2.1 version of RTE generator	
2016-08-16	4.2.2	Daejun Park	4.3.1, 5.4.1	·	
	4.3.0	Daejun Park JeongSu Lim	4.3	Update for release 4.3.0 version of RTE generator	
2016-08-19			7.2	Update Generator Error Message	
		4.4, 5.1	Support HandleOutOfRange		
			4.1	Add description of limitation for using RTE API.	
	4.3.1	JeongSu Lim	4.3	• Update for release 4.3.1 version of RTE generator	
2016-10-21		Daejun Park	7.1	Add description of generator option for Rte_MemMap.h File.	
			7.2	Add description of generator error messages	
			4.3	Update for release 4.3.2 version of RTE generator	
2016 12 01	4.2.2	JeongSu Lim	5.5	Add description of limitation for using SynchronizedOffset	
2016-12-01	4.3.2	Daejun Park	7.1	Add description of generator option for IOC::GenEcudOs	
			7.2	Add description of generator error messages	
2017 02 24	422	Daejun Park	4.3	Update for release 4.3.3 version of RTE generator	
2017-02-24 4.3.3 Daehwan Lim		8.6	Add descrition of Synchronized Offset		
			4.3	• Change Log 추가.	
2017-06-09	4.4.0	JeongSu Lim	4.4 5.3 5.4	• Exclusive Area 미지원 항목 내용 추가	
2017 00 05		Seongmin Kim	7.1	• Generator Option 추가	
			7.2	• Generator Error Message 추가.	
			4.3	• Change Log 추가	
2017-08-21	4.4.1	KiYoung Yun	4.4 4.5	 Exclusive Area 미지원 항목 내용 추가 Limitation & Deviation 관련 Validation Error 번호 를 가 및 일부 미지원 사항 내용 변경 	
		Seongmin Kim	5.3 5.4	• Exclusive Area 옵션 설명 추가	
			7.1	• 미지원 기능(Generation Phase)에 대한 옵션 안내 정리	
2017-11-09	4.4.2	Seongmin Kim	4.4 8.1	 Extended Task 관련 Event 단위 및 Task 단위의 제약 사항 구체화 Interrupt Decoupling Guide 수정 	
			2	• Rte 4.2.2 추가	
		KiYoung Yun	4.3	• Change Log 추가	
2017-12-26	4.5.0	Seongmin Kim	4.4.2 4.5.2	• Data Transformation 관련 내용 추가	
			8.7	• Guide for RteEvent 추가	
2018-01-26	4.5.1	KiYoung Yun	4.3	• Change Log 추가	

SHT/SHTS 3 / 203

			2	• Rte 4.3.1 추가
			4.3	• Change Log 추가
2018-03-22	4.6.0	KiYoung Yun	4.4 4.5	 카테고리 COM_AXIS, CURVE, MAP의 ApplicationPrimitiveDataType에 관련한 Limitation 및 Deviation 추가
			4.3	• Change Log 추가
			4.4.2	• ApplicationPrimitiveDataType에 관한 Limitation 변경
2018-06-29	4.7.0	KiYoung Yun	4.4.2 6.1.1 6.3.1	• Data Transformation 관련 내용 추가
			8.4	• SchM_Init, Rte_Start내에서 Initial Mode Runnable의 수행 내용 추가
2018-10-31	4.7.1	KiYoung Yun	4.3	• Change Log 추가
2019-05-08 4.8.0 KiYoung Yun 4.3 • Change Log 추가 및 양식 변경		• Change Log 추가 및 양식 변경		
2013 03 00	4.0.0	Kiloong lon	4.4.2.3.1	• Disabled Mode 관련 내용 추가
2019-06-28	4.8.1	KiYoung Yun	4.3	• Change Log 추가
2013 00 20	4.0.1	Kiloong ton	4.4.2.7.2	• FUNCTION_REFERENCE에 관한 Limitation 추가
	4.9.0.0	4.9.0.0 KiYoung Yun	4.3	• Change Log 추가
2019-10-18			4.4.2.8.1 4.5.2 5.1	• VFB Tracing 관련 내용 변경
			5.6 5.10 6.3.3	• 매뉴얼과 PDF 설정 항목 변경
	4.10.0.0	.10.0.0 KiYoung Yun	4.3	• Change Log 추가
2020-04-24			4.4.2.2.3	• Standard Trigger 통신 제약사항 추가
			7.1	• -NoRteReceiverPullCB 옵션 설명 추가
			4.3	• Change Log 추가
2020-06-26	4.10.1.0	KiYoung Yun	4.4.2.2.2	• Client Server 통신 제약사항 추가
			7.2	• Generator Error Message 추가
			4.3	• Change Log 추가
2020-09-25	4.10.2.0	KiYoung Yun	4.4.2.2.1	• DATA_REFERENCE 제약사항 추가
			4.5.2.2	• SetRelAlarm 호출 관련 Deviation 추가
	4.10.3.0	4.10.3.0 KiYoung Yun	4.3	• Change Log 추가
			7.1	• ParameterDirection 옵션 추가
2020-12-21			4.4.2.2.1	 Limitation에 Validation Error 번호 추가 Implicit Sender Receiver 통신 제약사항 추가
			4.4.2.3.1	• ExtendedTask 설정 제약사항 추가



Table of Contents

1. OVERVIEW	9				
2. REFERENCE					
3. AUTOSAR SYSTEM10					
3.1 Overview of Software Layers					
3.2 AUTOSAR Runtime Environment (RTE)	10				
4. PRODUCT RELEASE NOTES	11				
4.1 Overview	11				
4.2 Scope of the release	11				
4.3 Change Logs					
4.3.1 Version 1.5.0					
4.3.2 Version 1.5.1					
4.3.3 Version 1.5.2					
4.3.4 Version 1.5.3					
4.3.5 Version 1.5.4					
4.3.6 Version 1.5.5					
4.3.7 Version 1.5.6					
4.3.8 Version 1.5.7					
4.3.9 Version 4.0.0					
4.3.10 Version 4.1.0					
4.3.12 Version 4.1.2					
4.3.13 Version 4.2.0					
4.3.14 Version 4.2.1					
4.3.15 Version 4.2.2					
4.3.16 Version 4.3.0					
4.3.17 Version 4.3.1					
4.3.18 Version 4.3.2					
4.3.19 Version 4.3.3					
4.3.20 Version 4.4.0	17				
4.3.21 Version 4.4.1	18				
4.3.22 Version 4.4.2	19				
4.3.23 Version 4.5.0	19				
4.3.24 Version 4.5.1	21				
4.3.25 Version 4.6.0	21				
4.3.26 Version 4.7.0					
4.3.27 Version 4.7.1					
4.3.28 Version 4.8.0					
4.3.29 Version 4.8.1	25				

4.3.30 Version 4.9.0.0 25 4.3.31 Version 4.10.0.0 26 4.3.32 Version 4.10.1.0 27 4.3.33 Version 4.10.2.0 28
4.3.32 Version 4.10.1.027
4.3.34 Version 4.10.3.0
4.5.54 Version 4.10.5.029
4.4 Limitations
4.4.1 General Description30
4.4.2 Limited Function Description in Rte Module
4.4.2.1 Common Limitation in Overall Rte Module
4.4.2.2 Limitation in Rte Interface
4.4.2.3 Limitation in Rte Events
4.4.2.4 Limitation in Rte APIs
4.4.2.5 Limitation in Rte LifeCycle and Call-back APIs
4.4.2.6 Limitation on Data Transformation
4.4.2.7 Limitation in data type
4.4.2.8 Limitation in Etc. functionality
4.5 Deviations
4.5.1 General Description
4.5.1 General Description
4.5.2 Deviation Function Description in Rte Module
4.5.2.1 Common Deviation in Rte Module
4.5.2.2 Detail deviation in each kie fonctionality
E CONFIGURATION CHIPE
5. CONFIGURATION GUIDE43
5. CONFIGURATION GUIDE
5.1 RteGeneration
5.1RteGeneration435.2RteSwComponentType445.2.1RteComponentTypeCalibration44
5.1RteGeneration435.2RteSwComponentType445.2.1RteComponentTypeCalibration445.3RteSwComponentInstance44
5.1RteGeneration435.2RteSwComponentType445.2.1RteComponentTypeCalibration44
5.1RteGeneration435.2RteSwComponentType445.2.1RteComponentTypeCalibration445.3RteSwComponentInstance445.3.1RteEventToTaskMapping455.3.2RteExclusiveAreaImplementation46
5.1RteGeneration435.2RteSwComponentType445.2.1RteComponentTypeCalibration445.3RteSwComponentInstance445.3.1RteEventToTaskMapping45
5.1RteGeneration435.2RteSwComponentType445.2.1RteComponentTypeCalibration445.3RteSwComponentInstance445.3.1RteEventToTaskMapping455.3.2RteExclusiveAreaImplementation46
5.1RteGeneration435.2RteSwComponentType445.2.1RteComponentTypeCalibration445.3RteSwComponentInstance445.3.1RteEventToTaskMapping455.3.2RteExclusiveAreaImplementation465.3.3RteExternalTriggerConfig46
5.1 RteGeneration 43 5.2 RteSwComponentType 44 5.2.1 RteComponentTypeCalibration 44 5.3 RteSwComponentInstance 44 5.3.1 RteEventToTaskMapping 45 5.3.2 RteExclusiveAreaImplementation 46 5.3.3 RteExternalTriggerConfig 46 5.3.4 RteInternalTriggerConfig 47 5.3.5 RteNvRamAllocation 47
5.1 RteGeneration 43 5.2 RteSwComponentType 44 5.2.1 RteComponentTypeCalibration 44 5.3 RteSwComponentInstance 44 5.3.1 RteEventToTaskMapping 45 5.3.2 RteExclusiveArealmplementation 46 5.3.3 RteExternalTriggerConfig 46 5.3.4 RteInternalTriggerConfig 47 5.3.5 RteNvRamAllocation 47 5.4 RteBswModuleInstance 47
5.1 RteGeneration 43 5.2 RteSwComponentType 44 5.2.1 RteComponentTypeCalibration 44 5.3 RteSwComponentInstance 44 5.3.1 RteEventToTaskMapping 45 5.3.2 RteExclusiveArealmplementation 46 5.3.3 RteExternalTriggerConfig 46 5.3.4 RteInternalTriggerConfig 47 5.3.5 RteNvRamAllocation 47 5.4 RteBswModuleInstance 47 5.4.1 RteBswEventToTaskMapping 48
5.1 RteGeneration 43 5.2 RteSwComponentType 44 5.2.1 RteComponentTypeCalibration 44 5.3 RteSwComponentInstance 44 5.3.1 RteEventToTaskMapping 45 5.3.2 RteExclusiveArealmplementation 46 5.3.3 RteExternalTriggerConfig 46 5.3.4 RteInternalTriggerConfig 47 5.3.5 RteNvRamAllocation 47 5.4 RteBswModuleInstance 47 5.4.1 RteBswEventToTaskMapping 48 5.4.2 RteBswExclusiveArealmpl 48
5.1 RteGeneration 43 5.2 RteSwComponentType 44 5.2.1 RteComponentTypeCalibration 44 5.3 RteSwComponentInstance 44 5.3.1 RteEventToTaskMapping 45 5.3.2 RteExclusiveArealmplementation 46 5.3.3 RteExternalTriggerConfig 46 5.3.4 RteInternalTriggerConfig 47 5.3.5 RteNvRamAllocation 47 5.4 RteBswModuleInstance 47 5.4.1 RteBswEventToTaskMapping 48 5.4.2 RteBswExclusiveArealmpl 48 5.4.3 RteBswRequiredModeGroupConnection 49
5.1 RteGeneration 43 5.2 RteSwComponentType 44 5.2.1 RteComponentTypeCalibration 44 5.3 RteEventToTaskMapping 45 5.3.2 RteExclusiveArealmplementation 46 5.3.3 RteExternalTriggerConfig 46 5.3.4 RteInternalTriggerConfig 47 5.3.5 RteNvRamAllocation 47 5.4 RteBswModuleInstance 47 5.4.1 RteBswEventToTaskMapping 48 5.4.2 RteBswExclusiveArealmpl 48 5.4.3 RteBswRequiredModeGroupConnection 49 5.4.4 RteBswRequiredTriggerConnection 50
5.1 RteGeneration 43 5.2 RteSwComponentType 44 5.2.1 RteComponentTypeCalibration 44 5.3 RteSwComponentInstance 44 5.3.1 RteEventToTaskMapping 45 5.3.2 RteExclusiveAreaImplementation 46 5.3.3 RteExternalTriggerConfig 46 5.3.4 RteInternalTriggerConfig 47 5.3.5 RteNvRamAllocation 47 5.4 RteBswModuleInstance 47 5.4.1 RteBswEventToTaskMapping 48 5.4.2 RteBswExclusiveAreaImpl 48 5.4.3 RteBswRequiredModeGroupConnection 49 5.4.4 RteBswRequiredTriggerConnection 50 5.4.5 RteBswExternalTriggerConfig 50
5.1 RteGeneration 43 5.2 RteSwComponentType 44 5.2.1 RteComponentTypeCalibration 44 5.3 RteEventToTaskMapping 45 5.3.2 RteExclusiveArealmplementation 46 5.3.3 RteExternalTriggerConfig 46 5.3.4 RteInternalTriggerConfig 47 5.3.5 RteNvRamAllocation 47 5.4 RteBswModuleInstance 47 5.4.1 RteBswEventToTaskMapping 48 5.4.2 RteBswExclusiveArealmpl 48 5.4.3 RteBswRequiredModeGroupConnection 49 5.4.4 RteBswRequiredTriggerConnection 50
5.1 RteGeneration 43 5.2 RteSwComponentType 44 5.2.1 RteComponentTypeCalibration 44 5.3 RteSwComponentInstance 44 5.3.1 RteEventToTaskMapping 45 5.3.2 RteExclusiveArealmplementation 46 5.3.3 RteExternalTriggerConfig 46 5.3.4 RteInternalTriggerConfig 47 5.3.5 RteNvRamAllocation 47 5.4 RteBswModuleInstance 47 5.4.1 RteBswEventToTaskMapping 48 5.4.2 RteBswExclusiveArealmpl 48 5.4.3 RteBswRequiredModeGroupConnection 49 5.4.4 RteBswRequiredTriggerConfig 50 5.4.5 RteBswExternalTriggerConfig 50 5.4.6 RteBswInternalTriggerConfig 50
5.1 RteGeneration 43 5.2 RteSwComponentType 44 5.2.1 RteComponentTypeCalibration 44 5.3 RteSwComponentInstance 44 5.3.1 RteEventToTaskMapping 45 5.3.2 RteExclusiveArealmplementation 46 5.3.3 RteExternalTriggerConfig 46 5.3.4 RteInternalTriggerConfig 47 5.3.5 RteNvRamAllocation 47 5.4 RteBswModuleInstance 47 5.4.1 RteBswEventToTaskMapping 48 5.4.2 RteBswExclusiveArealmpl 48 5.4.3 RteBswRequiredModeGroupConnection 49 5.4.4 RteBswRequiredModeGroupConnection 50 5.4.5 RteBswExternalTriggerConfig 50 5.4.6 RteBswInternalTriggerConfig 50 5.5 RteOsInteraction 51
5.1 RteGeneration 43 5.2 RteSwComponentType 44 5.2.1 RteComponentTypeCalibration 44 5.3 RteSwComponentInstance 44 5.3.1 RteEventToTaskMapping 45 5.3.2 RteExclusiveAreaImplementation 46 5.3.3 RteExternalTriggerConfig 46 5.3.4 RteInternalTriggerConfig 47 5.3.5 RteNvRamAllocation 47 5.4 RteBswEventToTaskMapping 48 5.4.2 RteBswExclusiveAreaImpl 48 5.4.3 RteBswRequiredModeGroupConnection 49 5.4.4 RteBswRequiredTriggerConfig 50 5.4.5 RteBswExternalTriggerConfig 50 5.4.6 RteBswInternalTriggerConfig 50 5.5 RteOsInteraction 51 5.5.1 RteUsedOsActivation 52
5.1 RteGeneration 43 5.2 RteSwComponentType 44 5.2.1 RteComponentTypeCalibration 44 5.3 RteSwComponentInstance 44 5.3.1 RteEventToTaskMapping 45 5.3.2 RteExclusiveAreaImplementation 46 5.3.3 RteExternalTriggerConfig 46 5.3.4 RteInternalTriggerConfig 47 5.3.5 RteNvRamAllocation 47 5.4 RteBswModuleInstance 47 5.4.1 RteBswEventToTaskMapping 48 5.4.2 RteBswExclusiveAreaImpl 48 5.4.3 RteBswRequiredModeGroupConnection 49 5.4.4 RteBswRequiredTriggerConfig 50 5.4.5 RteBswExternalTriggerConfig 50 5.4.6 RteBswInternalTriggerConfig 50 5.5 RteOsInteraction 51 5.5.1 RteUsedOsActivation 52 5.5.2 RteModeToScheduleTableMapping 52
5.1 RteGeneration 43 5.2 RteSwComponentType 44 5.2.1 RteComponentTypeCalibration 44 5.3 RteSwComponentInstance 44 5.3.1 RteEventToTaskMapping 45 5.3.2 RteExclusiveAreaImplementation 46 5.3.3 RteExternalTriggerConfig 46 5.3.4 RteInternalTriggerConfig 47 5.3.5 RteNvRamAllocation 47 5.4 RteBswEventToTaskMapping 48 5.4.2 RteBswExclusiveAreaImpl 48 5.4.3 RteBswRequiredModeGroupConnection 49 5.4.4 RteBswRequiredTriggerConfig 50 5.4.5 RteBswExternalTriggerConfig 50 5.4.6 RteBswInternalTriggerConfig 50 5.5 RteOsInteraction 51 5.5.1 RteUsedOsActivation 52



5.6	RteBswGeneral	3
5.7	CommonPublishedInformation	3
5.8	RteImplicitCommunication	3
5.9	RtePostBuildVariantConfiguration 5	3
5.10	RtelnitializationBehavior5	3
6. <i>A</i>	APPLICATION PROGRAMMING INTERFACE (API)5	4
6.1 6.1	Type Definitions5 1 Predefined Error Codes5	
6.2	Macro Constants 5	5
6.3	Functions5	: =
6.3		
	.3.1.1 Rte_Start	
	.3.1.2 Rte_Stop5	
	.3.1.3 Rte_Read	
	.3.1.4 Rte_DRead	
6	.3.1.5 Rte_Write 5	
6	.3.1.6 Rte_lsUpdated6	
6	.3.1.7 Rte_IWrite6	0
6	.3.1.8 Rte_WriteRef6	1
	.3.1.9 Rte_IRead6	
	.3.1.10 Rte_IStatus6	
	.3.1.11 Rte_Mode6	
	.3.1.12 Rte_Switch	
	.3.1.13 Rte_Call	
	.3.1.14 Rte_Result	
	.3.1.15 Rte_Invalidate	
	.3.1.16 Rte_IInvalidate	
	.3.1.18 Rte_IFeedback	
	.3.1.19 Rte_Ireeuback	
	.3.1.20 Rte_Exit	
	.3.1.21 Rte_IrvRead	
	.3.1.22 Rte_IrvWrite	
	.3.1.23 Rte_IrvIRead	
	.3.1.24 Rte_lrvIWrite	
6	.3.1.25 Rte_Trigger	7
6	.3.1.26 Rte_IrTrigger	8
	.3.1.27 Rte_Receive	
	.3.1.28 Rte_SwitchAck 8	
	.3.1.29 Rte_Prm	
	.3.1.30 Rte_CData	
	.3.1.31 Rte_Send	
	.3.1.32 Enhanced Rte_Mode	
6.3		
_	.3.2.1 Rte_COMCbkTAck_〈Signal〉	
6	.3.2.2 Rte_COMCbkTAck_〈Signal〉8	,5 -



6.3.2.3	Rte_COMCbkTErr_〈Signal〉	85
6.3.2.4	Rte_COMCbkInv_〈Signal〉	86
6.3.2.5	Rte_COMCbkRxTOut_〈Signal〉	87
6.3.2.6	Rte_COMCbkTxTOut_〈Signal〉	87
6.3.2.7	Rte_COMCbk_ <signalgroup></signalgroup>	
6.3.2.8	Rte_COMCbkTAck_〈SignalGroup〉	
6.3.2.9	Rte_COMCbkTErr_〈SignalGroup〉	
6.3.2.10		
	Rte_COMCbkRxTOut_{SignalGroup}	
	? Rte_COMCbkTxTOut_ <signalgroup></signalgroup>	
	BSW Scheduler APIs	
6.3.3.1	SchM_Init	
6.3.3.2	SchM_Deinit	
6.3.3.3	SchM_Enter	
6.3.3.4	SchM_Exit	
6.3.3.5	SchM_Mode	
6.3.3.6	SchM_Switch	
6.3.3.7	SchM_Trigger	
6.3.3.8	Enhanced SchM_Mode	
6.3.3.9	SchM_ActMainFunction	
	SchM_SwitchAck	
	Schm_CData	
	E2E APIs	
6.3.4.1	Single channel wrapper routines	
6.3.4.2	Redundant wrapper routines	
6.3.4.3	E2E COM CALLOUTS	111
7. GENER	RATOR	113
	erator Option	
7.1 Gene	erator Option	113
7.1 Gene		113
7.1 Gene	erator Optionerator Error Message	113 114
7.1 Gene	erator Option	113 114
7.1 Gene 7.2 Gene 8. APEND	erator Optionerator Error Message	113 114 178
7.1 Gene7.2 Gene8. APEND8.1 Interes	rator Option	113 114 178
7.1 Gene 7.2 Gene 8. APEND 8.1 Interior 8.1.1 C	rator Option	113 114 178 178
7.1 Gene 7.2 Gene 8. APEND 8.1 Interes 8.1.1 (8.1.1.1	erator Option	113114178178178
7.1 Gene 7.2 Gene 8. APEND 8.1 Interest 8.1.1 (8.1.1.1 (8.1.1.2	rator Option	113178178178178178
7.1 Gene 7.2 Gene 8. APEND 8.1 Interest 8.1.1 (8.1.1.1 (8.1.1.2	rator Option	113178178178178178178
7.1 Gene 7.2 Gene 8. APEND 8.1 Interest 8.1.1 (8.1.1.1 (8.1.1.2	rator Option	113178178178178178178186
7.1 Gene 7.2 Gene 8. APEND 8.1 Interior 8.1.1.1 8.1.1.2 8.1.2	rator Option	113178178178178178178186
7.1 Gene 7.2 Gene 8. APEND 8.1 Inter 8.1.1 (8.1.1.1 8.1.1.2 8.1.2 (8.1.2.1 8.1.2.1	rupt Decoupling Guide General Description Scope Overall Description Specific Description depending on MCU Scope Bolero Family (MPC560x)	113178178178178178178186186
7.1 Gene 7.2 Gene 8. APEND 8.1 Inter 8.1.1.1 8.1.1.2 8.1.2.2 8.1.2.1 8.1.2.2	rupt Decoupling Guide General Description Scope Overall Description Specific Description depending on MCU Scope Bolero Family (MPC560x) ution of Runnable mapped in Non-Periodic OsTask	113178178178178178186186
7.1 Gene 7.2 Gene 8. APEND 8.1 Inter 8.1.1 (8.1.1.2 8.1.2.1 8.1.2.1 8.1.2.2 8.2 Exect 8.2.1 (erator Option	113178178178178186186186
7.1 Gene 7.2 Gene 8. APEND 8.1 Interest 8.1.1 (8.1.1.1 (8.1.2.2 (8.1.2.1 (8.1.2.2 (8.2.1 (8.2.1 (8.2.1.1 (8.2.1.1 (8.2.1.1 (8.2.1.1 (8.2.1.1 (8.2.1.1 (8.2.1 (8	erator Option	113178178178178186186186187187
7.1 Gene 7.2 Gene 8. APEND 8.1 Inter 8.1.1.1 8.1.1.2 8.1.2.1 8.1.2.1 8.1.2.2 8.2 Exect 8.2.1 8.2.1.1 8.2.1.2	rupt Decoupling Guide General Description Overall Description Scope Overall Description depending on MCU Scope Bolero Family (MPC560x) ution of Runnable mapped in Non-Periodic OsTask General Description Scope Non Periodic OsTask and Runnable	113178178178178186186186187187
7.1 Gene 7.2 Gene 8. APEND 8.1 Inter 8.1.1.1 8.1.1.2 8.1.2.1 8.1.2.2 8.2 Exect 8.2.1 8.2.1.1 8.2.1.2 8.2.1.2 8.2.2 8.2.2	rupt Decoupling Guide General Description Overall Description Specific Description depending on MCU Scope Bolero Family (MPC560x) ution of Runnable mapped in Non-Periodic OsTask General Description Scope Non Periodic OsTask and Runnable Specific Description depending on MCU	113178178178178186186186187187
7.1 Gene 7.2 Gene 8. APEND 8.1 Inter 8.1.1 (8.1.1.2 8.1.2.2 8.1.2 (8.1.2.1 8.1.2.2 8.2 Exect 8.2.1 (8.2.1.1 8.2.1.2 8.2.2 (8.2.2.1	erator Option Perator Error Message DIX. Prupt Decoupling Guide General Description Scope Overall Description Specific Description depending on MCU Scope Bolero Family (MPC560x) ution of Runnable mapped in Non-Periodic OsTask General Description Scope Non Periodic OsTask and Runnable Specific Description depending on MCU Scope Non Periodic OsTask and Runnable Specific Description depending on MCU	113178178178178186186186187187187188
7.1 Gene 7.2 Gene 8. APEND 8.1 Inter 8.1.1.1 8.1.1.2 8.1.2.1 8.1.2.2 8.2 Exect 8.2.1 8.2.1.1 8.2.1.2 8.2.1.2 8.2.2 8.2.2	rupt Decoupling Guide General Description Overall Description Specific Description depending on MCU Scope Bolero Family (MPC560x) ution of Runnable mapped in Non-Periodic OsTask General Description Scope Non Periodic OsTask and Runnable Specific Description depending on MCU	113178178178178186186186187187187188
7.1 Gene 7.2 Gene 8. APEND 8.1 Inter 8.1.1 8.1.1.2 8.1.2.2 8.1.2.1 8.1.2.2 8.2.1 8.2.1.1 8.2.1.2 8.2.2 8.2.2 8.2.1 8.2.2.2	erator Option	113178178178178178186186187187187188188
7.1 Gene 7.2 Gene 8. APEND 8.1 Interes 8.1.1 (8.1.1.2 8.1.2.1 8.1.2.2 8.2 Exect 8.2.1 (8.2.1.1 8.2.1.2 8.2.2 (8.2.2.1 8.2.2.2 8.3 Confi	erator Option	113178178178178186186187187187188188
7.1 Gene 7.2 Gene 8. APEND 8.1 Interes 8.1.1 (8.1.1.2 8.1.2.1 8.1.2.2 8.2 Exect 8.2.1 (8.2.1.1 8.2.1.2 8.2.2 (8.2.2.1 8.2.2.2 8.3 Confi	erator Option	113178178178178186186186187187187188188



8.3.1.1	Scope
8.3.1.2	Synchronous Client-Server Communication
8.3.1.3	Asynchronous Client-Server Communication
8.3.1.4	Inter-Partition Communication
8.3.1.5	Clients on Interrupt Level or Invoked by Direct Function Call
8.3.1.6	Conclusion
	pecific Description depending on MCU195
8.3.2.1	Scope
8.3.2.2	Bolero Family (MPC560x)
8.4 Mode	Instance Initialization on inter partition mode switching196
8.4.1	ieneral Description196
8.4.1.1	Scope
8.4.1.2	Initialization of Mode Instance in inter partition
8.4.2 S	pecific Description depending on MCU196
8.4.2.1	Scope
	,
8.5 Preca	utions on Rte API Usage197
8.5.1	ieneral Description197
8.5.1.1	Scope
8.5.1.2	Rte API in Runnable
8.5.2 S	pecific Description depending on MCU197
8.5.2.1	Scope
8.6 Synch	rronized Offset198
8.6.1	ieneral Description198
8.6.1.1	Scope
8.6.1.2	Description of Synchronized Offset Feature
8.6.1.3	How to Use this Feature
8.6.1.4	Cautions regarding Task Activation Design based on Synchronized Offset Feature
8.6.2 S	pecific Description depending on MCU
8.6.2.1	Scope
	for RteEvent202
8.7.1	ieneral Description202
8.7.1.1	Scope
8.7.1.2	Task Mapping
8.7.1.3	Direct Function Call
8.7.2 S	pecific Description depending on MCU203
8.7.2.1	Scope

1. Overview

본 문서는 AUTOSAR 표준 개발 방법론에 의해 설계된 Application 디자인 문서 (Software Component Description arxml) 기반의 RTE (Runtime Environment) Layer에 해당하는 코드 생성을 위한, 설정 및 각종 제반 사항에 대하여 설명한다. AUTOSAR 표준 SRS/SWS를 기반으로 작성 되었으며, 모듈 사용시 보다 자세한 기능적인 설명이 필요한 경우, 아래 Reference 문서를 참고한다

설정관련 Category 의 해석은 다음과 같다.

- Changeable (C): User 에 의해서 설정 가능한 항목
- Fixed (F): User 에 의한 변경이 불가한 항목
- NotSupported (N): 사용되지 않는 항목


2. Reference

SI. No.	Title	Version
1.	AUTOSAR SWS RTE.pdf	3.2.0
2.	AUTOSAR TPS SoftwareComponentTemplate.pdf	4.2.0
3.	AUTOSAR TPS SystemTemplate.pdf	4.2.0
4.	AUTOSAR EXP InterruptHandlingExplanation.pdf	1.0.2
5.	AUTOSAR SWS RTE.pdf	4.2.2
6.	AUTOSAR SWS RTE.pdf	4.3.1

3. AUTOSAR System

3.1 Overview of Software Layers


AUTOSAR 플랫폼의 Layered Architecture 는 아래와 같다. AUTOSAR 플랫폼은, Service Layer, ECU Abstraction Layer, Complex Device Drivers 및 Microcontroller Abstraction Layer 로 구분될 수 있다.

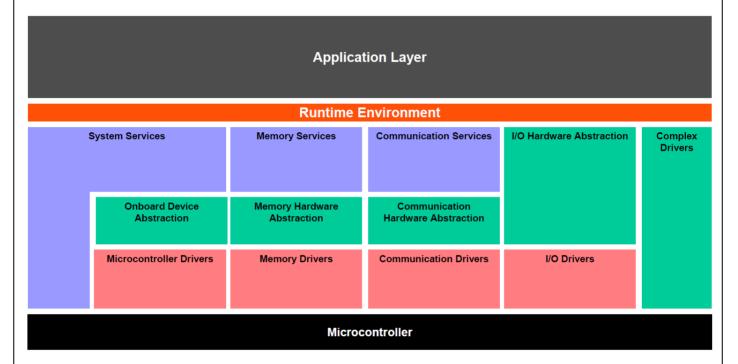

3.2 AUTOSAR Runtime Environment (RTE)

RTE 는 특정 ECU 에 통합된, 다수의 Application SW-Component (i.e. Application SW-Component 및 Basic Software 모듈) 간의 glue lyaer 제공을 통하여, Application software (AUTOSAR So ftware Components and/or AUTOSAR Sensor/Actuator components) 간, 또는 Application Software 와 Basic Software Module (ie. OS, Communication Service, etc services 등) 간에 통신 서비스를 담당한다.

- Provide a communication infrastructure for software components
- Arrange for real-time scheduling of software components

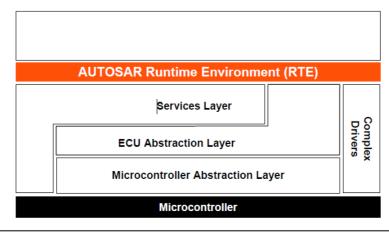

4. Product Release Notes

4.1 Overview

이 Chapter 에서는, 현대오트론 RTE Product 에 대한 release 관련 내용을 제공하는데 목적이 있으며, RTE Software product release version 에 대한, 제한사항 및 특이사항을 기술하고 있다.

4.2 Scope of the release

- 이 문서에 대한 모든 내용은, 현대오트론 RTE Product (Rte.exe) Version 1.5.7 에 한정한다.
 - * RTE PDF (Parameter Definition File) Version 1.5.4

4.3 Change Logs

4.3.1 Version 1.5.0

- DataType 의 Enumeration Define 문이 관련된 Application Type Header 에만 나오도록 변경.
- EcuExtract CommandLine Option 제거하고 EcucValueCollection의 EcuExtractRef를 사용하도록 변경.
- IncludedModeDeclarationGroup 설정을 통한 Mode Definition 및 Type Definition 생성 지원.
- IncludedDataTypeSet 설정을 통한 DataType 의 Enumeration Define 문 생성 지원.
- EcucPartition, ComCallback 설정 오류 관련 Validation Error 강화.
- Rte_MemMap.h Code 관련 Optimization Option 정리.
- SenderReceiver Logic Refactoring.
- ClientServer의 ApplicationError에 대한 DET 추가.
- MISRA-C Rule Violation 일부 수정.
- ECUC Configuration Parameter 설정 제한 기능 지원을 위한 Category 추가.

4.3.2 Version 1.5.1

- Rte_Start_〈Partition〉 함수 내 초기화 순서 정리.
- PerInstance Memory RAM 변수의 Extern 선언을 별도 header 파일에 추가 생성
- Rte Start / Stop 관련 Code Indentation 을 통한 코드 가독성 향상.
- Partition 별 MemorySection 분리 가능하도록 Rte_MemMap.h 정리.
- Misra C Violation 추가 수정.
- Validation Error 추가 및 문구 수정.

4.3.3 Version 1.5.2

- Misra C Violation 관련 정당화 처리 추가. (11.4, 8.8).
- RTE Header 의 Version Check 강화(Autosar Version, Sw Version).
- Blank Line 중복 제거 및 Code Indentation 정리.
- SenderReceiver Interface RamSize 최적화(Rte_Read, Rte_IRead 사용안하는 상황에서 변수 생성 최적화).
- ClientServer Interface RamSize 최적화(InterPartition 상황에서 ClientServer Flag 정리).
- 불필요 Warning 제거(Unconnected Server, CanBelnvokedConcurrently 가 TRUE 상황에서의 Task

SHT/SHTS 12 / 203

AUTOSAR RTE User Manual

Mapping Warning 제거)

- Validation 강화(TimingEvent, BswTimingEvent 의 StartOnEventRef 가 없는 경우 Error 발생).
- 불필요한 Memory Section Code 생성 제거.
- Command Line Option 정리.
- Application Error에서 E_OK 설정하여 사용 가능하도록 기능 추가.
- Com_SendSignal, Com_SendDynSignal, Com_UpdateShadowSignal, Com_ReceiveSignal, Com_ReceiveSignal, Com_ReceiveShadowSignal 의 Data Parameter 부분에 Type Casting 추가.

4.3.4 Version 1.5.3

- Client-Server 통신 사용 시, Server 파티션이 Terminate 되었을 경우, Wait 하고 있는 Client 에게 즉시 알려주는 기능 추가 (WaitOsEventRef 설정 시, 설정된 OsEvent 에 대해 PartitionTerminated 라는 Postfix 가 붙은 OsEvent 를 하나 더 생성하여, Client 가 동작하는 OsTask 가 참조하도록 설정해야 함.)
- Client-Server 통신에 대해 Task 우선 순위 정리 (8.3 참조)

4.3.5 Version 1.5.4

- Rte 내부 변수의 MemorySection 정리.
- 서로 다른 Operation 으로 연결된 Client-Server Communication 동작 지원
- ClientServer 통신을 위한 RteWaitOsEventRef 관련 Validation 추가.
- Rte_Write API의 RTE_E_COM_STOPPED 리턴값 처리 추가.
- Polyspace RunTime Violation 수정.
- Rte_COMCbk Callback 함수 관련 RamSize 최적화(변수의 Stack 이용).
- 〈SWC〉_MemMap.h 의 MCU Dependenct Code 제거.

4.3.6 Version 1.5.5

- Client-Server 통신에서 Port 에서 Reference 하는 Operation 과 Server Call Point 에서 Reference 하는 Operation 이 다를 때 발생하는 Validation Error 추가.
- Polyspace Runtime Violation 수정.
- E2E PW/Callout 옵션 설정 방법 변경
- Inter-Runnable Variable 에서의 불필요 Exclusive Area 사용 코드 최적화.

4.3.7 Version 1.5.6

- SenderReceiver Communication Logic 의 RamSize 최적화. (1:N Case 의 경우 RPort 마다 DataElement 를 위한 Buffer 를 생성하는 방식에서 최적화 가능한 경우에는 공용 Buffer 를 사용하도록 변경)
- HandleTimeoutType 기능 구현. (Com Timeout 발생시에 DataElement의 값을 초기값으로 변경하는 기능)
- SchM_Init 함수 내에서 OsAlarm 관련 중복 Code 또는 Dummy Code 생성되는 문제 수정.
- Asynchronous Client-Service 통신에서 WaitPoint 사용시에 대한 Validation Error 강화.
- InterPartition 기반 ModeSwitch 의 Initial Mode 처리시에 ModeManager 와 ModeUser 가 혼재되어 있는 경우에 발생하는 Code 생성 오류 수정.

4.3.8 Version 1.5.7

SHT/SHTS 13 / 203

AUTOSAR RTE User Manual

- ApplicationDataType 을 이요한 InterRunnableVariable 에 InitValue 설정 시 코드 생성 오류. (ApplicationDataType 을 가지는 InterRunnableVariable 에 InitValue 설정 후 Code Generation 시에 Error 가 발생하던 것을 정상적으로 처리하도록 수정.)
- 〈SWC〉_MemMap.h 의 MemorySection 정리. (기존 〈PREFIX〉_START_SEC_CONST_〈ALIGNMENT〉 를 생성하지 않던 것을 생성하도록 추가. 기존 〈ALIGNMENT〉에 BOOLEAN을 처리하지 않던 것을 생성하 도록 추가.)
- OperationInvokedEvent 로 실행되는 Runnable 에서 Implicit SenderReceiver 사용시 Task Body 에 Copy_IWrite, Copy_IRead GlueCode 가 생성안되는 문제 수정. (Runnable 호출 Code 가 Indentation 으로 인하여 여러줄에 걸쳐 있는 경우에 GlueCode 생성을 못하였으나 여러줄에 걸쳐있는 Code 에도 정상 동작하도록 수정.)
- Array DataType 을 가지는 ArTypedPerInstanceMemory 의 CDS Structure Definition 및 변수 처리 오류 수정. (기존 Array DataType 의 ArTypedPerInstanceMemory 의 경우에 CDS Structure Definition 에 Array 주소에 대한 Pointer 로 나왔으나 Array 의 BaseType 에 대한 Pointer 를 가지도록 수정.)
- DataWriteCompletedEvent 로 실행되는 Runnable 에서 사용하기 위한 Rte_IFeedback,
 DataReceiveErrorEvent Runnable 에서 사용하기 위한 Rte_IStatus API 추가. (기존
 DataWriteCompletedEvent 로 실행되는 Runnable 을 위한 Rte_IFeedback, DataReceiveErrorEvent
 로 실행되는 Runnable 을 위한 Rte_IStatus API 를 생성하지 않던 것을 생성하도록 추가.)
- M:N Connection 에 대한 Validation 강화. (기존 IntraEcu Connection 에 대해서만 M:N Check 를 하였으나 InterEcu Connection 을 포함하여 M:N Connection Check 를 할 수 있도록 강화.)

4.3.9 Version 4.0.0

- Rte_Start, SchM_Init Function 의 GetCoreID Function 사용 Code 생성 조건을 Os의 GetCoreID Function 생성 조건과 일치하도록 변경. (기존 OsApplicationCoreAssignment 설정의 유무에서 OsOs의 NumberOfCores 가 2 이상일 경우로 조건 변경)
- Period 와 RteActivationOffset 의 값이 유효한지 Check 하는 Validation Logic 추가. (Period 와 RteActivationOffset 의 OsCounter 의 OsSecondsPerTick 의 배수인지, 0 ~ OsSecondsPerTick * OsCounterMaxAllowedValue 에 속하는지 Check)
- SenderReceiver Communication 성능 최적화. (같은 Partition 내의 Write, Read 동작을 위한 Runnable 들이 같은 Priority 를 가지거나 하나의 InternalOsResource 를 공유하는 경우에 SuspendOSInterrupts/ResumeOSInterrupts 를 제거하여 성능을 최적화함)
- SenderReceiver의 Interface 이름이 Signal_ 또는 Return_ 으로 시작하는 경우의 Code 생성 오류 수정. (Interface 이름에 상관없이 IOC API 생성 Code에 Rte_ Prefix 를 붙이도록 변경)
- Extended OsTask 내 OsEvent Clear 에 대한 최적화 구조 적용

4.3.10 Version 4.1.0

- CompuMethod 의 VT 값이 Invalid C Identifier 인 경우에 ShortLabel 로 Define 문 생성하도록 변경
- CompuMethod 의 Category 가 없는 경우에 Default 로 IDENTICAL 로 처리하도록 적용

4.3.11 Version 4.1.1

- Error Message 포맷 변경 및 상세화
- 두 개 이상의 Runnable에서 동일한 Port/Operation에 대한 SynchronousServerCallPoint를 설정 시 Validation 추가

4.3.12 Version 4.1.2

SHT/SHTS 14 / 203

AUTOSAR RTE User Manual

■ Extended Task 에서 Trigger Interface 생성 오류 수정

4,3,13 Version 4,2,0

- RteEvent, BswEvent 의 Data Consistency 보장 코드 적용
- Generation Error 및 Limitation 관련 User Manual Update.

4.3.14 Version 4.2.1

- Sender Receiver 관련 Event Flag 변수 분리
- Inter Runnable Variable 관련 생성 오류 수정

4.3.15 Version 4.2.2

■ User Manual 의 RteUsedOsEventRef, RteBswUsedOsEventRef 파라미터의 제한 설명 보충

4.3.16 Version 4.3.0

- 신규 기능
 - SenderReceiver Interface 의 HandleOutOfRange 기능 지원

 Data 값의 Range 범위를 Check 하여 벗어나는 경우에 대해서 User 설정에 따라 무시(Ignore), Min/Max 값으로 변경(Saturate), Init Value 값으로 변경(Default), Invalid Value 값으로 변경(Invalid) 처리를 추가적으로 하는 기능
- 개선 사항
 - MISRA-C 16.10 Rule If a function returns error information, then that error information shall be tested 위반 항목 수정
 - ModeSwitch Interface 의 Initial Mode On Entry 처리 시 Direct Function Call 지원
 - No Partition, Single Partition, Multiple Partition 상황에서의 RteTaskComMapping 설정 오류 Validation 기능 추가.
 - Trigger Interface 의 Event 설정 오류 Validation Error 기능 추가.
 - Trigger Interface 의 SwImplPolicy 와 QueueLength 불일치로 인한 설정 오류 Validation 기능 추가.

4.3.17 Version 4.3.1

- 신규 기능
 - Bolero, Rh850 MCU 를 위한 Rte_MemMap.h 기능 추가

원인	Bolero, RH850 MCU 에서 Rte_MemMap.h 기능을 미지원
동작 영향	RTE Memmory Section 을 MemMap.h 가 아닌 Rte_MemMap.h 로부터 가져옴.
설정 영향	Bolero, Rh850 MCU 를 사용하는 제어기에서는 RTE Generator Option 으로
	GenMemMapOption::Ghs Option 을 추가해야 함.
ASW 조치 필요 사항	없음

- 개선 사항

■ Extended OsTask 기반 Timing Event 에 Disabled Mode 오류 수정

원인	Extended OsTask 기반의 TimingEvent 에서 DisabledMode 설정시 관	관련 Code
----	---	---------



서 번호 (DOC NO) SHT/SHTS 15 / 203

	가 생성되지 않음.
동작 영향	Extended OsTask 기반의 TimingEvent에서 DisabledMode가 정상 동작함.
설정 영향	Bolero, Rh850 MCU 를 사용하는 제어기에서는 RTE Generator Option 으로
	GenMemMapOption::Ghs Option 을 추가해야 함.
ASW 조치 필요 사항	없음

■ SynchronizedActivateOffset 기능의 비정상 동작 수정

원인	Rte_Start 시점의 Counter 값에 따라 SetRelAlarm의 Increment 값이 특정 경우에 0으로 사용됨. 이 경우 Alarm에서 Error가 발생해 동작하지 않음.
동작 영향	Alarm 이 정상 동작함.
설정 영향	없음
ASW 조치 필요 사항	없음

■ Signal Reception Hook 함수 위치 오류 수정

원인	Signal Reception Hook 의 경우, ComReceiveSignal 이전에 호출됨. 사양상 Signal Reception Hook 은 Com_ReceiveSignal 이후에 호출해야 함.
동작 영향	Signal Reception Hook 이 Com_ReceiveSignal 이후에 호출됨.
설정 영향	없음
ASW 조치 필요 사항	없음

4.3.18 Version 4.3.2

- 신규 기능

■ Os Ecud Arxml 파일에 IOC Configuration 을 추가하여 생성할 수 있는 신규 Generator Option 인 - IOC::GenEcudOs 를 추가

원인	Freescale OS 의 경우, Generator 의 입력으로 Ecud Arxml 파일을 하나만 받을 수 있음. 기존 IOC Option 은 별도의 파일로 IOC Configuration 을 생성하기 때문 에 사용 불가능함. 하나의 File 에 OsConfiguration 을 통합하여 생성하는 신규 옵 션 추가함.
동작 영향	없음
설정 영향	신규 기능 사용 시 Rte Generator 의 옵션으로 -IOC::GenEcudOs 를 추가해야 함.
ASW 조치 필요 사항	없음

- 개선 사항

■ E2E 기능 사용시 CPU의 Byte Order와 RTE의 Byte Order를 Check하는 기능 추가

원인	E2E 의 Serialize/Deserialize 사용 시 RTE 의 ByteOrder 를 위한 Generator Option 이 잘못된 경우 문제가 발생할 수 있는 가능성이 있음. CPU의 Byte Order 와 Check 하여 문제를 조기에 발견할 수 있도록 기능 추가함.
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

■ Generation 시에 같은 설정임에도 코드의 순서가 변경되어 생성될 수 있는 가능성 개선

원인	Rte_Write 등의 API Code 가 같은 설정임에도 순서가 변경되어 생성될 수 있는 가능성이 존재함. Sorting 을 통해 같은 순서로 출력될 수 있도록 기능 추가함.
동작 영향	없음
설정 영향	없음



(DOC NO) SHT/SHTS 16 / 203

ASW 조치 필요 사항 없음

■ InitialMode 의 OnEntry Event 관련 생성 오류 개선

원인	InitialMode 의 OnEntry Event 관련 DirectFunctionCall 설정 시 생성 함수 이
	름 오류
동작 영향	컴파일 오류 발생
설정 영향	없음
ASW 조치 필요 사항	없음

■ SynchronizedActivateOffset 기능의 비정상 동작 개선

원인	SynchronizedActivateOffset 계산 중 Interrupt 발생 시 계산 오류 발생 가능
동작 영향	Interrupt 과다 발생시 Task의 Offset이 설정된 시점과 차이가 발생할 수 있음.
설정 영향	없음
ASW 조치 필요 사항	없음

■ Task Mapping 이 필요하다는 일부 불필요한 Warning Message 제거

원인	Task Mapping 이 필요하다는 일부 불필요한 Warning Message (WRN 58, 66) 출력 건 삭제
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

4.3.19 Version 4.3.3

- 개선 사항

■ 비주기 Extended Task 사용시 ActivateTask 이전에 SetEvent 가 호출될 수 있는 문제 수정

원인	Rte_Start 에서 ActivateTask 이전에 설정된 Alarm 이 ActivateTask 이전에 만
	료되는 경우 SetEvent 호출되어 ErrorHook 발생
동작 영향	ErrorHook 발생 가능성 제거
설정 영향	없음
ASW 조치 필요 사항	없음

■ Extended Task 기반 RTE 처리를 위한 Task Body 에서 OsEvent 누락 가능성 문제 수정

원인	여러 OsEvent 가 하나의 OsTask에 연결된 경우, 발생 전인 OsEvent 까지
	Clear 처리하여 실제 발생한 OsEvent 의 처리 누락 가능성 존재
동작 영향	OsEvent 처리 누락 가능성 제거
설정 영향	없음
ASW 조치 필요 사항	없음

■ ExplicitInterRunnableVariable 의 InitValue 로 TextValueSpecification 설정 시 에러 발생 수정

원인	InitValue 의 타입이 TextValueSpecification 인 경우 처리 안함
동작 영향	없음
설정 영향	InitValue 의 타입이 TextValueSpecification 인 경우도 설정 가능
ASW 조치 필요 사항	없음

■ RteBswRequiredModeGroupConnection 의 설정 오류에 대한 Validation Error 추가

원인	RteBswRequiredModeGroupConnection 설정 오류 체크 안함
동작 영향	없음



설정 영향	생성 에러 발생 시 설정 변경 필요
ASW 조치 필요 사항	장요

■ SenderReceiverToSignalGroupMapping 의 SenderRecRecordElementMapping 에 중복된 SystemSignalRef 가 존재하는 경우에 대한 Validation Error 추가

원인	SenderRecRecordElementMapping 내 SystemSignalRef 의 중복 체크 안함
동작 영향	없음
설정 영향	생성 에러 발생 시 설정 변경 필요
ASW 조치 필요 사항	없음

■ 하나의 Code Section 내 함수 정의하도록 생성 c 코드 개선

원인	함수 별로 Code Section 을 나누어 정의하던 방식에서, 모든 함수를 하나의 Code
	Section 으로 정의하도록 개선
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

■ Rte Vendor Id 오트론 (76)으로 변경

원인	Rte.h 내 Vendor ld 오트론 (76) 으로 변경
동작 영향	없음
설정 영향	/Rte/CommonPublishedInformation/Vendorld = 76 으로 변경 필요
ASW 조치 필요 사항	없음

4.3.20 Version 4.4.0

- 개선 사항

■ TriggerInterface 의 InterPartition 간 IOC 지원

	men aranan E isa 12
원인	파티션간 Trigger 사용 시, IOC 를 통해 Trigger 가 실행되는데, IOC 의 사용에 있
	어 효율적으로 동작하도록 IOC 사용 방식 개선
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

■ Implicit Sender Receiver 의 기능 중 RtelmmediateBufferUpdate False 기능 추가.

원인	기존 Runnable 의 앞, 뒤에서 Data 를 실제로 전송하는 방식에 추가하여 Task 의
	앞, 뒤에서 Data를 실제로 전송하는 방식을 사용할 수 있도록 기능 추가
동작 영향	없음
설정 영향	새로 추가한 기능을 사용하고자 할 경우, RTE Generator 의 Option 으로 —
	ImmediateBufferUpdate=false 를 추가하여야 함. 기존 방식 유지할 경우 설정
	변경 없음.
ASW 조치 필요 사항	없음

■ RTE_ALLOW_CROSS_HEADER_INCLUSION 심볼 관련 사용 금지 문구 추가

원인	애플리케이션에서 사용 불가한 RTE_ALLOW_CROSS_HEADER_INCLUSION 심볼에 대해 Rte_〈SWC〉.h 내 주석으로 사용 금지 문구 추가
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음



■ Partition Lifecycle API 개선

원인	코드 정리 및 원활한 유지 보수를 위해 Generator 내 Lifecycle API의 코드 생성 방식 개선
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	접

4.3.21 Version 4.4.1

- 신규 기능
 - 미지원 기능에 대해 Generator의 Validation 추가

원인	미지원 기능에 대해 Generator가 에러 없이 파일을 생성하여 잘못된 동작가능. Validation을 통해 생성 제한
동작 영향	없음
설정 영향	에러 발생 시 설정 변경 필요(미지원기능 설정 제거)
ASW 조치 필요 사항	없음

- 개선 사항

■ Rte Generator 실행 속도 개선

	—
원인	Generator 내의 비효율적인 동작방식(API 복잡도) 개선
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

■ Compile warning 방지 위한 alignvar 제거

원인	Green Hills 컴파일러 사용시 Generator 가 Rte_MemMap.h 에 alignvar 출력하 지 않도록 함
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

■ PerInstanceMemory API 개선

원인	코드 정리 및 원활한 유지 보수를 위해 Generator 내 PerInsatnceMemory API 의 코드 생성 방식 개선
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

■ Com Version 2.2.0 이후 Com_PackAndValidateSigGroup API 프로토타입 변경 대용 E2EPW_Read/Write 수정

원인	Com_PackAndValidateSigGroup API 가 Com Version 2.2.0 버전 이후 인자개수가 변경되어 컴파일 에러 발생
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

SHT/SHTS 19 / 203

AUTOSAR RTE User Manual

■ 설정에서 자기 자신을 Reference 하는 경우 Out of memory 발생 문제 수정

	12 01 22 7 2 0 2 11 1 0
원인	잘못된 설정으로 자기자신을 Reference 하는 경우, 정확한 오류메세지를 반환하지
	않고 Out of memory 발생
동작 영향	없음
설정 영향	에러 발생 시 설정 변경 필요
ASW 조치 필요 사항	없음

■ TimingEvent 의 Period 가 0 일 경우 Division by zero 에러 발생 오류 개선

원인	TimingEvent 의 Period 가 0 일 경우 에러가 발생하여 해당 내용에 대해 Validation 을 추가
동작 영향	없음
설정 영향	에러 발생 시 설정 변경 필요
ASW 조치 필요 사항	없음

■ Mode Switch Interface 사용시, supportsAsynchronousModeSwitch 가 false 일 경우에 대한 Validation 추가

원인	Mode Switch Interface 사용시, supportsAsynchronousModeSwitch 가 false 이고, Task Mapping 이 되어 있지 않을 경우 에러 코드 추가
동작 영향	없음
설정 영향	에러 발생 시 설정 변경 필요
ASW 조치 필요 사항	없음

4.3.22 Version 4.4.2

- 개선 사항

■ 매뉴얼 업데이트

- ""	
원인	- Interrupt Decoupling Guide 개선 (8.1 참조)
	- Extended Task 지원 범위 상세화 (4.4 참조)
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

4.3.23 Version 4.5.0

- 신규 기능

■ Transformation 기능 개발

원인	E2E 기능 대응 Data Transformation 기능 개발
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

- 개선 사항

■ Implicit Sender-Receiver 컴파일 에러 수정

원인	- DataFilter, HandleTimeoutType 사용시 Copy_IRead API 정의가 1개 이상
	생성
	- API 중복 검사 방식이 SWC 단위이기 때문에 같은 Copy_IRead API의
	Prototype 이 중복하여 발생
	- Critical Section 판별시 다른 SWC의 Context를 고려하지 않아

SHT/SHTS 20 / 203

AUTOSAR RTE User Manual

	Suspend/Resume Interrupt 가 사용되는 코드와 사용되지 않는 코드가 생성
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

■ NonQueuedImplicitSenderReceiver에서 Runnable Symbol에 따라 GlueCode 삽입이 여러 번 발생되는 문제 해결

원인	Generator 가 GlueCode 삽입시 같은 태스크 내에서 의도하지 않았던 비슷한 이름을 지닌 Runnable에도 GlueCode 가 삽입
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

■ SWC 내에 동일한 External Trigger Interface 사용하는 PPort 가 여러 개 있고, 이들의 Sink 가 같은 Task 에 매핑될 경우 이상 동작 코드 생성 개선

원인	RteEvent 에 대한 Flag 를 추가하여 이벤트에 해당하는 Runnable 이 수행되도록 함
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

■ ComSignalType 이 UINT8_N 인 GroupSignal 지원

원인	ComSignalType이 UINT8_N인 GroupSignal 설정 시 컴파일 오류 발생
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

■ Compile Warning 개선

	·· -
원인	- Rte_GaaEventFlag 변수를 사용하지 않더라도 코드가 생성되어 Compile
	Warning 발생
	- Rte_Mode API 가 Enhanced API 여부와 관계없에 동일한 코드를 생성하여 불
	필요한 변수를 생성하여 Compile Warning 발생
	- Rte_Switch 및 SchM_Switch 내부에서 모드 변경중 재진입을 막기 위한 상태변
	수에 컴파일러의 최적화가 적용되어 Compile Warning 발생
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

■ Validation 내 오류 정보 상세화

원인	- Direct Function Call 이 아닌 BswSchedulableEntity 가 RteBswEventToTaskMapping 이 되어 있지 않은 경우 - SwcModeSwitchEvent 의 Target Mode Declaration 미설정 - M:N 통신 연결 - Union Data Type 에 대한 SenderReceiverToSignalGroupMapping 의 미지원 - Direct Function Call 방식의 Mode Switch Event 경우 PositionInTask 설정 오류
동작 영향	오뉴 없음
설정 영향	에러 발생 시 설정 변경 필요
ASW 조치 필요 사항	없음

4.3.24 Version 4.5.1

- 개선 사항
 - Transformer 모듈의 Header File Inclusion 변경

	— *
원인	- Rte.c 의 Header Inclusion 을 〈모듈명〉.h 로 변경
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	요

■ Timeout 값 없는 Transmission Acknowledge 설정 지원

원인	Transmission Acknowledge 설정시 Timeout 값을 지정하지 않으면
	Transmission Acknowledge 설정이 인식되지 않음
동작 영향	없음
설정 영향	Timeout 값 없는 Transmission Acknowledge 설정 가능
ASW 조치 필요 사항	없음

■ Validation 내 오류 정보 상세화

원인	- PerInstanceParameter에 InitValue 미정의시
동작 영향	없음
설정 영향	에러 발생 시 설정 변경 필요
ASW 조치 필요 사항	없음

4.3.25 Version 4.6.0

- 신규 기능
 - Transformation Profile 11 지원

원인	E2E Profile 11 대응 Data Transformation 기능 개발
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

■ ApplicationPrimitiveDataType 의 카테고리 COM_AXIS, CURVE, MAP 지원

원인	ApplicationPrimitiveDataType 의 카테고리 COM_AXIS, CURVE, MAP 지원
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	

- 개선 사항
 - TRANSFORMER-ERROR-HANDLING 설정 시, Transformer의 에러 값 전달

	_ • ',' . "
원인	TRANSFORMER-ERROR-HANDLING 설정 시, RTE API의 transformerError
	파라미터 RTE_E_HARD_TRANSFORMER_ERROR /
	RTE_E_SOFT_TRANSFORMER_ERROR 값이 저장
동작 영향	TRANSFORMER-ERROR-HANDLING 설정 시, RTE API 의 transformerError
	파라미터에 Transformer 에러값이 저장
설정 영향	없음
ASW 조치 필요 사항	TRANSFORMER-ERROR-HANDLING 설정 시, RTE API 의 transformerError
	파라미터에 RTE_E_HARD_TRANSFORMER_ERROR /



RTE_E_SOFT_TRANSFORMER_ERROR 값이 아닌 Transformer 에러값이 저장
되므로 이에 따른 ASW 로직 변경 필요

■ 1:N Sender Receiver 통신시 RTE API에서 사용하는 버퍼 선언 누락 개선

원인	1:N Sender Receiver 통신이면서 Implicit / Explicit Sender Receiver API 혼용
	사용시 RTE API 내에서 사용하는 버퍼의 선언이 누락되는 경우 발생
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

■ Inter-Runnable Variable 관련 API 코드 개선

원인	코드 정리 및 원활한 유지 보수를 위해 Generator 내 Inter-Runnable Variable 관련 API의 코드 생성 방식 개선
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

4.3.26 Version 4.7.0

- 신규 기능

■ ApplicationRecordDataType 내에 ApplicationRecordElement 의 카테고리 BOOLEAN 지원

• •	71 " " 11
원인	ApplicationRecordDataType 내에 ApplicationRecordElement 의 카테고리
	BOOLEAN 미지원
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

■ ApplicationPrimitiveDataType 의 카테고리 COM_AXIS, CURVE, MAP 지원

	71
원인	BswModuleDescription 내에 PerInstanceParameter에 대한
	ApplicationPrimitiveDataType 의 카테고리 COM_AXIS, CURVE, MAP 지원 및
	Validation 추가
동작 영향	없음
설정 영향	에러 발생 시 설정 변경 필요
ASW 조치 필요 사항	없음

- 개선 사항

■ Transformer 사용시 Init Value 지원

원인	Transformer 사용시 Init Value 미지원
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

■ Trigger API 가 생성되지 않는 문제 수정

원인	다른 SWC 에 PPortPrototype 의 ShortName 과 Trigger Interface 의 Trigger
	ShortName이 같은 것이 있을 경우 일부 Rte_Trigger API가 생성되지 않음.
	다른 SWC 에 Runnable 의 ShortName 과 각 InternalTriggeringPiont 의
	ShortName이 같은 것이 있을 경우 일부 Rte_IrTrigger가 생성되지 않음
동작 영향	없음

SHT/SHTS 23 / 203

AUTOSAR RTE User Manual

설정 영향	없음
ASW 조치 필요 사항	없음

■ Transformation 기능 미사용시 Error Handling 값이 TRANSFORMER-ERROR-HANDLING 로 설정되어 있는 경우 컴파일 에러 수정

원인	Error Handling 값이 TRANSFORMER-ERROR-HANDLING 로 설정되어 있으나 Transformation 기능 미사용시 할 경우 Rte API 내에서 선언되지 않은 변수를 사 용하는 코드 생성
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	ପ୍ରଣ

■ 1:N NonQueued Sender Receiver 통신시 RPort 의 Init Value 가 다를 경우 컴파일 에러발생 수정

원인	1:N NonQueued Sender Receiver 통신시 RPort의 Init Value가 다를 경우 같은 이름의 변수가 다른 초기값으로 여러 번 선언되어 컴파일 에러 발생
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

■ Validation 수정

• Validation T o	
원인	- Application Value Specification 을 통한 Init Value 설정시 모든 카테고리에
	SwArraysize 를 요구
	- XfrmImplementationMappingSet 설정시 Data Mapping 설정을 요구
	- Signal/SignalGroup에 TransformationISignal이 있을 경우 해당
	Signal/SignalGroup에 대한 ComSignal / ComSignalGroup 을 요구
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

■ ERR 0000 메시지 일부 개선

	"-
원인	설정 오류등으로 인한 에러 발생시 사용자가 확인하기 어려운 ERR 0000 메시지 발
	생
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	ପ୍ରକ

4.3.27 Version 4.7.1

- 신규 기능

■ Rte_Receive API에 대한 executeDespiteDataUnavailability 옵션 지원

	· - · · · · · · · · · · · · · · · · · ·
원인	Rte_Receive API에 대한 executeDespiteDataUnavailability 옵션 지원
동작 영향	executeDespiteDataUnavailability 활성화 및 Rte_Receive API 가 non-
	blocking API 일 경우 Transformer chain 의 모든 Transformer 가 수행되며 모
	든 Transformer의 inputBuffer의 입력 값은 NULL 이고 dataLength는 0이
	된다.
설정 영향	없음
ASW 조치 필요 사항	없음

AUTRON

AUTOSAR RTE User Manual

- 개선 사항
 - Unsigned 데이터 타입에 Text Value Specification 을 이용하여 Init Value 설정 시 컴파일 에러 수정

원인	Unsigned 데이터 타입에 Text Value Specification 을 통한 Init Value 설정 시
	Rte.c 에 Text Value Specification 에서 지정한 초기값과 Suffix U 가 합쳐진 값으
	로 변수를 초기화 하여 컴파일 에러 발생
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

■ DisabledMode 가 적용된 Runnable 이 Mode 를 변환해도 수행되지 않는 문제 수정

원인	Enhanced Mode API 를 사용하지 않거나 Mode Switch Event에서 OnEntry 나
	OnExit 만 사용될 경우, Task 내에서 DisabledMode 검사를 위한 조건문에서 전역
	변수로 선언되었으나 사용되지 않는 변수를 이용함. 전역변수는 0으로 초기화되고
	DisabledMode 에서 사용되는 TargetMode 값이 0 이 포함되어 있는 경우 조건문
	은 항상 false 가 되어 Runnable 이 수행되지 않음
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

■ Application Header 및 Rte_Hook.h 코드 생성이 일관되도록 수정

• •	
원인	Arxml의 내부 내용은 같으나 순서가 변경된 경우 Application Header 와
	Rte_Hook.h 파일의 내용 순서도 변경됨
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

■ 1:N Sender Receiver 통신시 일부 ComSpec 에 Init Value 가 지정되지 않을 경우 경고 메시지 출력

원인	1:N Sender Receiver 통신시 대부분의 RPort에 Init Value가 지정되어 있으나 몇몇 RPort에 Init Value가 지정되어 있지 않을 경우 경고 메시지 출력
동작 영향	없음
설정 영향	경고 발생시 해당 Port 의 ComSpec 에서 Init Value 설정
ASW 조치 필요 사항	없음

■ Rte Generator의 Rte_Enter, Rte_Exit, SchM_Enter, SchM_Exit 생성 코드 개선

원인	Rte Generator 의 Rte_Enter, Rte_Exit, SchM_Enter, SchM_Exit 생성 코드를 개선하여 유지보수성을 향상
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

■ Sender Receiver 통신시 DATA_REFERENCE 타입에 대한 Validation 추가

원인	DATA_REFERENCE 타입의 ImplementationDataType 을 이용한 Sender
	Receiver 통신시 잘못된 메모리 참조를 방지
동작 영향	없음
설정 영향	에러 발생시 설정 변경
ASW 조치 필요 사항	없음

SHT/SHTS 25 / 203

AUTOSAR RTE User Manual

4.3.28 Version 4.8.0

- 개선 사항

■ Disabled Mode 를 설정한 SchedulableEntity/Runnable 이 Disabled Mode 로 설정한 모드에 진입하거나 빠져나갈 때 실행될 수 있는 문제 수정

원인	SchedulableEntity/Runnable 실행 전 Disabled Mode 를 검사하는 로직에서 이 전모드와 다음모드 둘 다 검사해야하나 이전모드 또는 다음모드 둘 중 하나만 검사 하는 로직이 생성됨
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

■ 동일한 Queued Trigger 를 이용한 External Triggering Event 사용시 Runnable 들이 비정상적으로 호출되는 문제 수정

<u> </u>	
원인	동일한 Trigger Interface 를 여러 SWC 에서 PPort 로 사용하고 해당 Interface 의
	동일한 Queued Trigger 를 이용하여 여러 Sink(수신)측 SWC 의 Runnable 들에
	External Trigger Event 로 설정할 경우 AssemblyConnector의 Provided-
	Required 연결을 무시하고 해당 Trigger 를 사용하는 모든 SWC 를 Required 로
	인식함. Queued Trigger 와 관련된 매크로 선언, 변수 선언 및 Task 본문 생성시
	PPort 와 연결되어있는 RPort 의 Runnable 만이 아닌 해당 Trigger 를 사용하는
	모든 Runnable 이 호출되도록 코드가 작성됨
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

■ Misra-2012 C Violation 관련 수정과 정당화 처리

원인	Misra C Violation 발생
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

4.3.29 Version 4.8.1

- 개선 사항

■ 1:N Mode 통신에서 Direct Function Call 로 Runnable 을 호출하는 Rte_Switch/SchM_Switch API 가 PositionInTask 순서대로 Runnable/ScheduleableEntity 를 호출하도록 수정

Trosicominask Errila komasierseneasieasieasieasie 2 22 124 10	
원인	1:N Mode 통신에서 Direct Function Call 로 Runnable 을 호출하는
	Rte_Switch/SchM_Switch API 가 PositionInTask 순서대로
	Runnable/ScheduleableEntity 를 호출하지 않고 임의의 순서대로 호출함
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

4.3.30 Version 4.9.0.0

- 신규 기능

■ Runnable Entity Trace Events 기능 추가

원인	Runnable Entity Trace Events 기능 미지원



동작 영향	성
설정 영향	없음
ASW 조치 필요 사항	교

- 개선 사항

■ Rte.c / Rte_〈Partition〉.c 파일에 HASH(0xXXXXXXXX) 문구가 출력되어 컴파일에러가 발생하는 문제 수정

원인	Rte.c / Rte_〈Partition〉.c 파일에 HASH(0xXXXXXXXX) 문구가 출력되어 컴파일에러가 발생
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

■ 매뉴얼과 PDF 설정 항목 변경

- " - 1 - 2 - 2 0 0 1 2 0	
원인	매뉴얼과, PDF 그리고 제너레이터 동작이 불일치
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

4.3.31 Version 4.10.0.0

- 신규 기능

■ -NoRteReceiverPullCB 옵션 신규 추가

원인	Sender Receiver의 InterPartition 통신시 수신측에서 Rte_ReceiverPullCB API
	가 Interrupt Context 에서 수행되어 잦은 데이터 수신시 성능 저하 발생. 특정
	Usecase 에서 Rte_ReceiverPullCB 를 사용하지 않고 데이터를 수신할 수 있도록
	신규 옵션 및 기능 추가
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

- 개선 사항

■ Timing Event 로 구성된 Extended Task 가 PositionInTask 설정대로 Runnable/BswScheduleEntity 를 실행하지 않는 문제 수정

원인	Timing Event 로 구성된 Extended Task 생성시 PositionInTask 값을 숫자가 아 닌 문자로 인식하게 한 뒤 정렬하여 Runnable/SchedulableEntity 의 실행순서가 기대와 다르게 정렬됨(ex 1, 5, 22, 34 가 '1', '22', '34', '5' 순으로 정렬)
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

■ Server Runnable 에 Argument 가 있는 경우 글루코드가 생성되지 않아 Implicit Sender Receiver 통신이 수행되지 않는 문제 수정

원인	Operation Invoked Event 로 동작하는 Server Runnable에 Argument가 있고, Task Mapping 되어 있으며, Data Read Access 또는 Data Write Access 설정
	이 되어 있는 경우 Task 내 Server Runnable 실행 전/후로 글루코드가 생성되지 않아 Implicit Sender Receiver 통신이 수행되지 않는 문제 발생
동작 영향	없음
설정 영향	없음



SW	ㅈ치	핃ᄋ	사하	정

■ 대용량 arxml 지원을 위한 Generator 개선

원인	대용량 arxml 사용시 Out of Memory 발생. Rte 코드 생성과 무관한 〈ADMIN-DATA〉 태그를 파싱단계에서 제거하여 메모리 사용량 개선
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

■ NmPdu / ISignalTolPduMapping 태그 인식 지원

원인	PartialNetwork 지원을 위해 NmPdu/ISignalTolPduMapping 태그 인식 지원.
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

■ CompuMethod의 CompuPhys to Internal 태그 인식 개선

원인	CompuMethod 의 Compu Direction 이 Compu Phys to Internal 일 때 제너레
면인	
	이터 에러 발생.
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

■ 1:N Standard Trigger 통신 제약사항 추가

원인	Os Task 방식으로 동작하는 1:N Standard Trigger 통신 설정시 triggered runnables 들이 동작하지 않을 수 있음.
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

4.3.32 Version 4.10.1.0

- 개선 사항

■ Server Runnable 에 Return 값이 있는 경우 글루코드가 정상 생성되지 않아 Implicit Sender Receiver 및 Implicit Inter Runnable Variable 이 수행되지 않는 문제 수정

원인	Operation Invoked Event 로 동작하고 Application Error 를 반환하는 Server
	Runnable 에 Implicit Sender Receiver 또는 Implicit Inter Runnable Variable
	관련 설정이 있는 경우 Server Runnable 실행 전 글루코드가 생성되지 않아
	Implicit Sender Receiver 및 Implicit Inter Runnable Variable 의 데이터 수신
	이 정상적으로 수행되지 않는 문제 발생
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

■ Client Server Intra Partition 통신시 Server Runnable 이 Task Mapping 되어 있고, Application Error 를 반환하나 Argument 가 없는 경우 Application Error 가 Rte_Call, Rte_Result 반환값으로 전달되지 않는 문제 수정

원인	Client Server Intra Partition 통신시 Server Runnable 이 Task Mapping 되어
	있고, Application Error 를 반환하나 Argument 가 없는 경우 Rte_Call,
	Rte_Result API 내에 Application Error 를 전달하기 위한 코드가 미생성되어

SHT/SHTS 28 / 203

AUTOSAR RTE User Manual

	Application Error 가 Client 에게 전달되지 않음
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

■ Client Server Inter Partition 통신시 Server Runnable 이 Application Error 를 반환하는 경우 Application Error 가 Rte_Call, Rte_Result 반환값으로 전달되지 않는 문제 수정

원인	Client Server Inter Partition 통신시 Server Runnable 이 Application Error 를
	반환하는 경우 Rte_Call, Rte_Result, Rte_ReceiverPullCB_CsResult API 내에
	Application Error 를 전달하기 위한 코드가 미생성되어 Application Error 가
	Client 에게 전달되지 않음
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

■ InterPartition 통신에 대한 N:1 Client Server 제약사항 추가

~ —	
원인	N:1 Inter Partition 및 Intra-Inter Partition Client Server 통신 미지원
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

■ Extended Task 내에 로컬변수 LddMaskType 을 RTE_ZERO 로 초기화

원인	로컬변수 LddMaskType 을 초기화하지 않고 사용하여 MISRA Violation 발생
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

■ Validation 내 오류 정보 상세화

원인	- 에러메세지 출력시 입력 파일 확인 문구
	- BswModuleDependencies 내에 지정된 모듈이 없는 경우
	- ProvidedEntries 가 같은 BswModuleEntry 를 중복해서 참조하는 경우
동작 영향	없음
설정 영향	에러 발생 시 설정 변경 필요
ASW 조치 필요 사항	없음

4.3.33 Version 4.10.2.0

- 개선 사항

■ Sender Receiver 통신에서 DATA_REFERENCE 사용시 제너레이터 에러 수정

원인	ImplementationDataType 카테고리가 DATA_REFERENCE 이거나
	DATA_REFERENCE 를 포함하고 이를 Sender Receiver 통신에서 사용하는 경우
	제너레이터 에러가 발생
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

■ ComSignalType이 UINT8_N, UINT8_DYN이면서 ComBitSize에 값이 없는 경우 Validation에러가 나지 않도록 수정

원인	ComSignalType이 UINT8_N, UINT8_DYN이면서 ComBitSize에 값이 없는 경우 Validation에러 발생
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

■ MISRA 및 Run-Time Violation 정당화 및 일부 코드 개선

원인	MISRA 및 Run-Time Violation 발생
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

4.3.34 Version 4.10.3.0

- 개선 사항

■ Transformer 사용시 Rte_Read, Rte_IStatus, Rte_Receive API의 반환값에서 Overlayed Errors 가 손실되는 현상 수정

원인	Transformer 사용시 반환값을 저장하는 변수에 OR 연산자가 아닌 대입연산자가 사용되어 Overlayed Error 가 손실됨
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

■ IN/OUT/INOUT 매크로 사용을 위한 ParameterDirection 옵션 추가

원인	IN/OUT/INOUT 매크로 비활성화 및 Rte API/Runnable 에서 생성되지 않게 기본
	동작 변경. 해당 매크로를 사용하기 위한 -ParameterDirection 옵션 추가
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

■ -Validate 옵션 기본 적용

원인	-Validate 제너레이터 옵션이 기본 동작되도록 제너레이터 수정
동작 영향	-Validate 옵션 기본 동작
설정 영향	없음
ASW 조치 필요 사항	없음

■ Validation 추가

원인	– Inter Ecu Inter Partition 통신 미지원
	- Direct Function Call 로 호출되는 RunnableEntity 에 DataReadAccess,
	DataWriteAccess 설정 미지원
	- ExtendedTask 내 여러 RteEvent 가 같은 OsEvent 를 참조하는 설정 미지원
동작 영향	없음
설정 영향	에러시 설정 변경
ASW 조치 필요 사항	없음



■ impldataTypes_ioc.arxml 내에 ImplementationDataType 의 Category 가 지정되도록 변경

원인	impldataTypes_ioc.arxml 내에 ImplementationDataType 의 Category 가 지
	정되지 않음
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

■ Rte 폴더 내 gc.exe 및 Rte.bat 파일 삭제

원인	Rte 가 생성하는 파일들의 들여쓰기 조정을 위해 Rte Generator 와 함께 배포되는 gc.exe 와 Rte.bat 가 사용되지 않음
동작 영향	없음
설정 영향	없음
ASW 조치 필요 사항	없음

4.4 Limitations

4.4.1 General Description

이 Chapter 에서는, RTE 모듈에서 제공하는 기능 및 동작에 대한 제한 사항을 기술한다.

4.4.2 Limited Function Description in Rte Module

4.4.2.1 Common Limitation in Overall Rte Module

Only Generation Phase is supported in Rte Generation Process

Rte 코드생성 프로세스에서, Generation Phase (Bsw Scheduler Generation / Rte Generation Phase) 만 지원한다.

> Minimum Start Interval is not available.

Runnable 실행 후 동일한 Runnable 을 다시 실행 하기 까지의 최소 시간 간격을 보장해주는 MinimumStartInterval 기능은 지원하지 않는다. (ERR 9013)

- ▶ In Instantiation, 'Multiple Instance' is not supported and only single instance is possible.
 하나의 SwComponentType 을 가지고 하나의 SwComponentPrototype 을 만드는 Single Instance 만 지원한다. 하나의 SwComponentType 을 가지고 여러 개의 SwComponentPrototype 을 만드는 Multiple Instance 는 지원하지 않는다. (ERR 9004)
- Periodic RTE Event (i.e. Timing Event / Background Event) can not be mapped into the OsTask which other RTE Events (except for the periodic Rte Event. eg. Operation Invoked Event) mapped also.

Timing Event, Background Event 와 같은 주기 Event는 기타 다른 비주기 RTE Event와 같은 OsTask 에 Mapping 될 수 없다. (ERR 9007)

> RunnableEntity shall be scheduled by only RteEvent. Direct function call from application code is not available.



RunnableEntity 는 RteEvent 에 의해서만 Scheduling 되어야 한다. Application Code 에서 RunnableEntity 를 직접 호출하는 식으로 사용해서는 안 된다. (WRN 0103)

> RTE API shall be called only in the RunnableEntity which has Data/ParameterAccess for DataElement.

RTE API는 해당 DataElement 를 위한 DataAccess 나 ParameterAcess 를 가지고 있는 RunnableEntity 에서만 사용되어야 한다. 그렇지 않은 경우에는 DataConsistency 문제가 발생할 수도 있다.

4.4.2.2 Limitation in Rte Interface

4.4.2.2.1 Sender Receiver Interface

> Compatibility between Implicit Non Queued Sender Receiver and Explicit Non Queued Sender Receiver are not available.

PPort 와 RPort 간, 또는 하나의 Port에 Implicit SenderReceiver와 Explicit SenderReceiver의 혼합 사용은 지원하지 않는다.

> Compatibility between Sender Receiver Interface and Other Interface is not available.

Sender Receiver Interface 와 다른 종류의 Interface(NvData Interface 또는 Parameter Interface) 와의 Port Interface Mapping 은 지원하지 않는다. (ERR 9001, ERR 9002)

- ➤ In Implicit Non Queued type Sender Receiver interface, Coherency Group is not available. 같은 시점에서의 서로 다른 VariableDataPrototype 에 대한 값을 얻고 싶을 때 사용하기 위한 Coherency Group 은 지원하지 않는다.
- > In Sender Receiver interface, the following functionalities are not available.

Data Conversion and Filter

- ※ Data Conversion 은, Data 를 전달/수신 하는 과정에서 Compu Method 에 의해서 정의된 내용을 기반으로, 해석을 달리할 수 있는 기능을 의미한다.
- ※ Filter 는 특정 조건에 해당하는 Data에 대해서만 값을 전달해주는 기능을 의미한다.
- > Inter Ecu Communication through Inter Partition is not available.

BswModule 이 동작하는 Main Partition 이외의 다른 Sub Partition 에서 SenderReceiver Interface 를 통한 CAN 통신 즉, Inter Ecu Communication 은 지원하지 않는다. (ERR 9018)

> Rte_IWrite API shall be called every time during an execution of the RunnableEntity if the RunnableEntity has DataWriteAccess.

RunnableEntity에 DataWriteAccess를 가지고 있는 경우에는 Rte_IWrite API를 항상 호출해야 한다. DataWriteAccess 가 있지만 Rte_IWrite API를 호출하지 않는 경우에는 RTE Spec 상 불명확한 값이 전송될 수 있다. RunnableEntity에서 상황에 따라 값을 전송하거나 안 해야 한다면 Rte_Send API를 이용하도록 한다.

- > The following functionalities are not available in case an ImplementationDataType with category DATA_REFERENCE is used in Sender Receiver communication
 - Inter Partition Communication, Inter ECU Communication, Init Value, Invalidation Policy-Replace and Keep, Handle Out Of Range and Etc.
 - ※ 다른 파티션간 통신, 다른 ECU 간 통신, 초기값 지정, 무효값 수신시 동작 방식 설정, 지정범위를 넘어선 경우 동작 방식 설정 등등 기본 기능 외에 추가 기능들은 지원되지 않는다.
- > Data Read Access or Data Write Access is not available in a RunnableEntity activated by a Direct Function Call.
 - Direct Function Call 방식으로 호출되는 RunnableEntity에 Data Read Access 또는 Data Write Access 설정은 지원되지 않는다. (ERR 9019)

4.4.2.2.2 Client Server Interface

- > Inter-Ecu Communication is not available.
 - ECU 간 통신은 지원하지 않는다. (ERR 9015)
- > The following functionalities are not available.
 - Timeout and Data Conversion
- > N:1(Multiple clients one server) Inter Partition / Intra-Inter Partition are not supported.
 - N:1(멀티 클라이언트-1 서버)의 파티션간 통신 및 파티션내-파티션간 통신은 지원하지 않는다.
- > In case of inter partition communication, if the partition of server is stopped or restarting during the operation of the server call, the client cannot be notified.
 - 파티션 간 통신 시, 서버 동작 중 서버가 속한 파티션이 중지되거나 재시작될 경우 클라이언트는 해당 상황에 대해 인지하지 못할 가능성이 있다.
- ➤ If queuing feature has been enabled for server operation, basically the queue mechanism in Rte is operated with Task Ready Queue in OsTask. That is, if during server operation, to handle the additional request has been invoked from client, OsTask which the Server Runnable has been mapped into would be activated in Rte_Call API body. And in Os, for additional activation request from Rte, the Queue counter for this OsTask will be increased because this OsTask has been already Ready state (Queue for this OsTask in OS, should be configured). If the queue in Server operation is needed for application design, please contact to Hyundai Autron.
 - 중복의 요청을 처리하기 위해 제공되는 Queue 기능은 OsTask 의 Queue 를 사용하여 제공한다. (사용시, OS 모듈에서 해당 OsTask의 Queue Count 값을 CS Queue 개수와 동일하게 설정해야 함) 따라서 OS에서 OsTask에 대한 Queue 기능을 제공하지 않는 경우, Rte에서는 Queue 기능을 제공할 수 없다. 제공되는 OS에 따라, Rte에서 Queue 기반의 Client Server 로직 설계시 오동작 가능성이 있으므로 반



SHT/SHTS 33 / 203

드시 설계 전에 현대오트론과 상의해야 한다.

- Bolero MCU 에 대한 플랫폼에서는, Client Server 통신에서 Queue 기능을 사용할 수 없다.

4.4.2.2.3 Trigger Interface

> The communication based on the Trigger interface between partition with Queue, is not available

Inter Partition 간의 Queue 를 이용한 Trigger Interface 기반의 통신은 지원하지 않는다. Queue 를 이용한 Trigger Interface 는 Intra Partition 간의 통신만 지원한다.

- > In Trigger interface, synchronized trigger is not available
 - Application 과 Bsw 모듈이 하나의 Trigger를 공유하여 Application Runnable Entity 와 Bsw Executable Entity 에 대해 일괄적인 Trigger를 할 수 있는 Synchronized Trigger 기능은 지원하지 않는다. (ERR 9015)
- ➢ If queuing feature has been enabled for Trigger Sink, basically the queue mechanism in Rte is operated with Task Ready Queue in OsTask. That is, if during Trigger Sink operation, to handle the additional request has been invoked from Trigger Source, OsTask which the Sink Runnable has been mapped into would be activated in Rte_Trigger API body. And in Os, for additional activation request from Rte, the Queue counter for this OsTask will be increased because this OsTask has been already Ready state (Queue for this OsTask in OS, should be configured). If the queue in Trigger Sink is needed for application design, please contact to Hyundai Autron.
 - 중복의 요청을 처리하기 위해 제공되는 Queue 기능은 OsTask 의 Queue 를 사용하여 제공한다. (사용시, OS 모듈에서 해당 OsTask 의 Queue Count 값을 CS Queue 개수와 동일하게 설정해야 함) 따라서 OS 에서 OsTask 에 대한 Queue 기능을 제공하지 않는 경우, Rte 에서는 Queue 기능을 제공할 수 없다. 제공되는 OS 에 따라, Rte 에서 Queue 기반의 Trigger Sink 로직 설계 시 오동작 가능성이 있으므로 반드시 설계 전에 현대오트론과 상의해야 한다.
 - Bolero MCU 에 대한 플랫폼에서는, Trigger 통신에서 Queue 기능을 사용할 수 없다.
- > 1:N Trigger Communication is not supported when one of the following cases is satisfied:
 - 1. The triggered executable entities are activated via Os Task activation and the SwImplPolicy of the Trigger is STANDARD.
 - 2. The triggered executable entities are activated via Os Task activation and the SwImplPolicy of the Internal Trigger Point is set to STANDARD
 - 3. The triggered executable entities are activated via Os Task activation and the SwImplPolicy of the BSW Internal Trigger Point is set to STANDARD.
 - 아래의 조건을 만족하는 경우 1:N Trigger 통신이 지원되지 않는다.

- 1. Trigger Event 로 동작하는 executable entities 들이 Os Task Activation 을 통해 실행되고 Trigger 의 SwImplPolicy 가 STANDARD 로 설정된 경우.
- 2. Trigger Event 로 동작하는 executable entities 들이 Os Task Activation 을 통해 실행되고 InternalTriggeringPoint 의 SwImplPolicy 가 STANDARD 로 설정된 경우
- 3. Trigger Event 로 동작하는 executable entities 들이 Os Task Activation 을 통해 실행되고 BswInternalTriggeringPoint 의 SwImplPolicy 가 STANDARD 로 설정된 경우

4.4.2.2.4 Mode Switch Interface

- > In Mode Switch Acknowledgement, the following functionalities are not available
 - Interaction between multi partitions
 - ※ 파티션 Terminate / Restart 동작 관련하여, 연관된 파티션에 대한 정보를 전달하는 기능
 - Return timeout (ERR 9006)
 - ※ 설정된 Timeout value 값 내에, Mode Switching 작업이 완료되지 않은 경우, E_TIMEOUT return 하는 기능

> Common Mode Instance

Application 와 Bsw 모듈에 설정된 Mode 를 공유하여, 하나의 Mode Instance 를 기반으로 Application 과 Bsw 모듈에 대한 Mode 를 제어할 수 있는 기능 (ERR 9015)

4.4.2.3 Limitation in Rte Events

4.4.2.3.1 General Limitation in Rte Events

> The following Rte Events cannot be mapped to Extended Tasks.

다음의 Rte Events 는 Extended Task 에 연결될 수 없다.

BackgroundEvent, DataWriteCompletedEvent, OperationInvokedEvent,

A synchronous Server Call Returns Event, Swc Mode Switch Event, Mode Switched Ack Event,

BswBackgroundEvent, BswModeSwitchEvent, BswModeSwitchedAckEvent

> Extended Tasks cannot have different kind of Rte Events.

Extended Task 내에 서로 다른 종류(타입)의 Rte Event 는 속할 수 없다.

> Following RteEvents in an ExtendedTask cannot reference the same OsEvent.

ExtendedTask 내에 아래의 RteEvent 들은 같은 OsEvent 를 참조할 수 없다.

Data Received Event, Data Receive Error Event, Data Send Completed Event, Data Write Completed Event, Asynchronous Server Call Resturns Event, Operation Invoked Event, Swc Mode Switch event, Mode Switched Ack Event, External Trigger Occurred Event, Internal Trigger Occurred Event. (ERR 9020)

> DataReceivedEvent and DataReceivedErrorEvent for implicit Sender-Receiver communication cannot be mapped to Extended Tasks.

Implicit 방식의 Sender-Receiver 통신에 대해서는 DataReceivedEvent 와 DataReceivedError 는 Extended Task 에 연결될 수 없다.

> ExternalTriggerOccurredEvent, InternalTriggerOccurredEvent,

BswExternalTriggerOccurredEvent, and BswInternalTriggerOccurredEvent for QUEUED triggers cannot be mapped to Extended Tasks.

Queue 방식의 Trigger 에 대해서는 ExternalTriggerOccurredEvent, InternalTriggerOccurredEvent, BswExternalTriggerOccurredEvent 는 Extended Task 에 연결될 수 없다.

> Runnables in Extended Task cannot have DataWriteAccess, or DataReadAccess.

Extended Task 에 속한 Runnable 은 Implicit 방식의 Sender-Receiver 통신을 사용할 수 없다.

DataWriteAccess 또는 DataReadAccess를 사용할 수 없으며, 이에 따라 Rte_IWrite 또는 Rte_IRead
API를 사용할 수 없다.

> Runnables in Extended Task cannot have ReadLocalVariables or WriteLocalVariables for ImplicitInterRunnableVariables.

Extended Task 에 속한 Runnable 은 Implicit 방식의 InterRunnableVariable 을 사용할 수 없다. ImplicitInterRunnableVariable 에 대한 ReadLocalVariable 또는 WriteLocalVariable 를 사용할 수 없으며, 이에 따라 Rte_IrvIRead 또는 Rte_IrvIWrite API 를 사용할 수 없다.

> When Rte Events are mapped to Extended Tasks, they cannot have Disabled Modes.

Extended Task 에 연결된 Rte Event 는 Disabled Mode 를 설정할 수 없다.

> Rte Events cannot have ModeDeclaration in the role disabledMode in the ModeGroup of the unconnected RPortPrototype.

RteEvent 는 연결되지 않은 RPortPrototype 의 ModeGroup에 속한 ModeDeclaration 으로 DisabledMode 을 설정할 수 없다.

> Rte API with wait point (Blocked Type of Rte API) is not available.

SW Configuration 에서, Wait Point 설정은 지원하지 않으며, Non Blocked Type 의 Rte API 만 지원한다. (ERR 9003)

4.4.2.3.2 Timing Event

> Timing Event based on the ScheduleTable, is not supported

일정 주기로 동작하는 Runnable을 수행하기 위한 RteEvent로 OsScheduleTable을 이용한 방법은 지원하지 않는다. OsAlarm을 이용한 TimingEvent 만을 지원한다. (ERR 9010)

4.4.2.3.3 Back Ground Event

Back Ground Event is not supported.

가장 낮은 Priority에서 동작하는 Background Activity를 수행하기 위한 RteEvent로 현재 지원하지 않는다. (ERR 9005)

4.4.2.4 Limitation in Rte APIs

4.4.2.4.1 Rte_Feedback API

> Rte_Feedback with blocked option is not available.

WaitPoint 가 포함된 Rte_Feedback API는 지원되지 않는다. (Non-Blocking Type 의 Rte_Feedback API 는 사용 가능 함) (ERR 9003)

※ WaitPoint 가 설정되는 경우, Rte_Feedback API Behavior: API 수행 중간에, Wait 상태 (Os 의 WaitEvent 상태로 천이) 로 진입하며, Sender Receiver 통신에 대한 관련 수행이 완료되어 DataSendCompletedEvent 가 발생하면, 해당 Wait Point 이후 작업을 재개

4.4.2.4.2 Rte_SwitchAck API

> Rte_SwitchAck with blocked option is not available.

WaitPoint 가 포함된 Rte_Feedback API 는 지원되지 않는다. (Non-Blocking Type 의 Rte_SwitchAck API 는 사용 가능 함) (ERR 9003)

> Following values are not returned

- RTE_E_TIMEOUT
- RTE_E_IN_EXCLUSIVE_AREA
- * refer to 4.11.2.2.4 also

4.4.2.4.3 Rte_Receive API

> API with Blocking option is not available.

WaitPoint 가 포함된 Rte_Receive API는 지원되지 않는다. (Non-Blocking Type 의 Rte_Receive API는 사용 가능 함) (ERR 9003)

※ WaitPoint 가 설정되는 경우, Rte_Receive API Behavior : API 수행 중간에, Wait 상태 로 진입하며, Sender Receiver 통신에 대한 관련 수행이 완료되어 DataRecievedEvent가 발생하면, 해당 Wait Point 이후 작업을 재개

4.4.2.4.4 Rte_Call, Rte_Result API

> APIs for Inter-Ecu Communication is not available.

Rte_Call, Rte_Result API 의 Inter-Ecu 통신은 지원하지 않는다. (ERR 9015)

* refer to 4.4.2.2.2

4.4.2.5 Limitation in Rte LifeCycle and Call-back APIs

4.4.2.5.1 Rte APIs regarding Partition

Rte_PartitionTerminated, Rte_PartitionRestarting and Rte_RestartPartition APIs are not supported

Memory / Timing Protection Violation 이 발생하는 경우, AUTOSAR OS 의 Protection Hook 함수에 의해 Partition 관련 Rte 함수가 연동되어 동작하는 기능이 지원되지 않는다.

4.4.2.5.2 Rte APIs regarding NvM Service Callback

Rte_SetMirror, Rte_GetMirror, Rte_NvMNotifyJobFinished and Rte_NvMNotifyInitBlock APIs are not supported

NvDataInterface 기반의 NvM 모듈 Service에 Access 하는데 사용되는, CallBack 함수는 지원되지 않는다. (ERR 9016)

4.4.2.6 Limitation on Data Transformation

Data Transformation 기능은 AUTOSAR 사양의 4.2.2 를 기반으로 한다. 이 부분에서는 해당 사양에서의 Limitation 을 기술한다.

4.4.2.6.1 General Limitation on Data Transformation

▶ Data Transformation for Client-Server and Trigger Communication is not supported.
Client-Server 및 Trigger 통신에 대한 Data Transformation 은 지원하지 않는다.

> Data Transformation for Intra-ECU Communication is not supported.

ECU 내의 SW-C 간 통신에 대한 Data Transformation 은 지원하지 않는다.

4.4.2.6.2 TRANSFORMER-ERROR-HANDLING

> ErrorHandling set to TRANSFORMER-ERROR-HANDLING in PortAPIOption is not supported without using functionality of data transformation.

Data transformation 기능 사용 없이 PortAPIOption의 ErrorHandling을 TRANSFORMER-ERROR-HANDLING로 설정하는 것은 지원되지 않는다.

> Rte_DRead, Rte_Call, Rte_Result and Rte_Trigger don't support the optional OUT parameter transformerError.

Rte_DRead, Rte_Call, Rte_Result, 그리고 Rte_Trigger 는 optional OUT 파라미터인 transformerError 를 지원하지 않는다.

4.4.2.7 Limitation in data type

4.4.2.7.1 ApplicationPrimitiveDataType



- ➤ ApplicationPrimitiveDataType with category VAL_BLK, STRING and RES_AXIS is not supported 카테고리 VAL_BLK, STRING, RES_AXIS 의 ApplicationPrimitiveDataType 은 지원되지 않는다.
- > ApplicationPrimitiveDataType with category COM_AXIS, CURVE, MAP cannot be mapped to ImplementationDataType except category ARRAY or STRUCTURE.
 - 카테고리 COM_AXIS, CURVE, MAP의 ApplicationPrimitiveDataType 은 카테고리 ARRAY, STURCTURE 가 아닌 ImplementationDataType 와의 매핑은 지원되지 않는다.

> ApplicationPrimitiveDataType with the category COM_AXIS, CURVE and MAP can be only

- used in parameter interface and sender receiver interface for Intra-ECU communication,
 PerInstanceParameter, SharedParameter, ArTypedPerInstanceMemory in SWC,
 PerInstanceParameter in BSW and parameter access within limited function.
 카테고리 COM_AXIS, CURVE, MAP의 Application Primitive Data Type은 ECU 내 통신을 위한
 Parameter Interface 와 Sender Receiver Interface, SWC 내의 PerInstanceParameter,
 SharedParameter, ArTypedPerInstanceMemory, BSW 내의 PerInstanceParameter와 Parameter Access 내에서만 한정적인 기능으로 사용 가능하다.
- ➤ ApplicationPrimitiveDataType with the category COM_AXIS, CURVE and MAP is only initialized with ApplicationValueSpecification of InitValue or ConstantValueSpecification.
 카테고리 COM_AXIS, CURVE, MAP의 Application Primitive Data Type 은 InitValue 또는 ConstantValueSpecification의 ApplicationValueSpecification을 통해서만 초기화 된다.
- > Initialization using ValueGroup in SwValuePhys of SwValueCont or SwAxisCont of ApplicationValueSpecification is not supported.
 - ApplicationValueSpecification 의 SwValueCont 또는 SwAxisCont 내의 ValueGroup 을 통한 초기화는 지원되지 않는다.
- ➤ Validation or Creation from SwRecordLayout to ImplementationDataType is not supported
 SwRecordLayout 을 통한 ImplementationDataType 의 검증 및 생성은 지원되지 않는다.
- > Functions by configuration in SwDataDefProps about ApplicationPrimitiveDataType with the category COM_AXIS, CURVE, MAP are not supported
 - 카테고리 VALUE, BOOLEAN, COM_AXIS, CURVE, MAP의 Application Primitive Data Type에 대한 SwDataDefProps 내의 설정들을 통한 기능들은 지원되지 않는다. (DataConstr, CompuMethod 등)

4.4.2.7.2 ImplementationDataType

➤ A category FUNCTION_REFERENCE of ImplementationDataType is not supported.

ImplementationDataType 의 카테고리 FUNCTION_REFERENCE 는 지원되지 않는다.

4.4.2.8 Limitation in Etc. functionality

4.4.2.8.1 Tracing in VFB Trace

> VFB Trace functionality for RTE API, COM and OS is not supported.

RTE API, COM 그리고 OS VFB Trace 기능은 지원되지 않는다.

Client Prefix for multiple clients is not supported.

각 Trace Event 의 Multiple Client 위한 Client Prefix 기능은 지원하지 않는다. (ERR 9017)

4.4.2.8.2 Monitoring of runnable execution time

> RteVirtuallyMappedToTask is not available

RunnableEntity 의 Execution Time Monitoring 을 위하여 RteEvent 의 Evaluation 과 Runnable 의 수행 Task 를 분리하여 하기 위한 RteVirtuallyMappedtoTask 는 지원하지 않는다. (ERR 9010)

4.4.2.8.3 DET Error reporting

> Development Errors (DET) is not supported.

Development Errors (DET) 기능은 지원하지 않는다. (ERR 9011)

4.4.2.8.4 Variant Handling

> Variant Handling is not supported

여러 개의 Variant 중에서 PreCompile Time, PostBuild Time 등에서 하나의 Variant를 선택하여 사용할 수 있도록 하기 위한 Variant Handling 기능은 지원하지 않는다.

4.4.2.8.5 Calibration

> Double Pointered Method in Calibration, is not available

Autron Platform 에서는 Calibration Method 중 OverlayRam, InitializedRam, SinglePointered Method 만 지원한다. 두 번의 Indirect Access 를 통해 Calibration Parameter 에 접근하는 방식인 Double Pointered Method 는 지원하지 않는다. (ERR 9012)

※ Double Pointered Method 의 경우, 상용 Calibration Tool에서 지원하는 경우 없음

4.4.2.8.6 Exclusive Area

> Cooperative Runnable Placement can not be configured

Cooperative Runnable 이 속한 Task 간의 Preemption을 막는 Cooperative Runnable Place Method 방식은 지원하지 않는다. (ERR 9009)

※ 해당 기능에 대한, 사양 내용 불분명 및 Use case 없음

> USER_DEFINED_MACRO can not be configured



Bsw Exclusive Area 의 Mechanism 중 USER_DEFINED_MACRO 는 지원하지 않는다. (ERR 9009)

> When using RenesasOS for RH850, both internal resource and standard resource can not be used in the same task.

RH850 용 RenesasOS 의 경우, Internal Resource 와 Standard Resource 를 동시에 설정하는 것을 지원하지 않는다. 따라서, Internal Resource 를 사용하고 있는 Task 내에서 OS_RESOURCE 방식의 Exclusive Area 를 사용할 수 없다. 자세한 내용은 RenesasOS 매뉴얼을 참조한다.

> Run Inside Exclusive Area can not be configured

BSW 의 Entity 및 Runnable 이 ExclusiveArea 내에서 동작하는 방식을 지원하지 않는다. (ERR 9003)

4.5 Deviations

4.5.1 General Description

이 Chapter 에서는, AUTOSAR RTE 표준 기능 사양 (version 4.0.3) 대비 구현 방식에 대한 차이 및 미지원 기능에 대하여 설명한다.

4.5.2 Deviation Function Description in Rte Module

4.5.2.1 Common Deviation in Rte Module

> Not available to generate the Rte API with "indirect type".

Direct API Invocation 대신 PortHandle 을 통한 Indirect Invocation 을 위한 Indirect API는 지원하지 않는다. (ERR 9008)

➤ Functionality regarding minimum Start Interval is not available in Runnable configuration
Runnable 실행 후 동일한 Runnable 을 다시 실행 하기 까지의 최소 시간 간격을 보장해주는
MinimumStartInterval 기능은 지원하지 않는다 (ERR 9013)

4.5.2.2 Detail deviation in each Rte functionality

NvData Interface does not be supported.

NvRam Data 를 교환하기 위한 Interface 인 NVData Interface 는 지원하지 않는다. 현재 Nvm Service 는 Autosar 3.0 방식의 ServiceSwComponent Type 을 이용하여 제공한다. (ERR 9016)

Rte_Ports, Rte_NPorts and Rte_Port APIs are not supported.

Direct API Invocation 대신 PortHandle 을 통한 Indirect Invocation 을 위한 Indirect API 는 지원하지 않는다. (ERR 9008)

* refer to 4.12.2.1

> Initialization of Union Ar-Type and C-Typed PerInstanceMemory Type is not supported.

AutosarDataType 을 이용한 Ar-Typed PerInstanceMemory 와 Native Declaration 을 이용한 C-Typed PerInstanceMemory 가 Union Type 인 경우 Initialization 을 지원하지 않는다.

> Array C-Typed PerInstanceMemory is not supported.

Native Declaration 을 이용한 C-Typed PerlnstanceMemory 가 Array Type 인 경우는 지원하지 않는다.

> Rte_Invalidate and Rte_IInvalidate is not supported.

Invalid Data 를 Receiver Software Component 에 전달하기 위한 Sender Software Component 의 API 인 RTE_Invalidate, Rte_IInvalidate 는 지원하지 않는다.

- > Port Interface Mapping and Compatibility is not supported
- ※ 서로 다른 인터페이스를 기반으로 설정된 PPort 및 RPort를 연결하는 경우 사용되는 기능 (ERR 9001, ERR 9002)
 - ➤ The number of underscore ('_') of shortname for BswModuleDescription is limited upto one.

 Rte Generator 의 안정성을 위하여, BswModuleDescription 을 이용하여 Executable Entity 를
 구현하고자 할 때, BswModuleDescription Container 의 shortname 이 가지는 '_' 기호의 개수는
 1 개 이하로 제한된다.

E.g. Sensor_CDD1 (O), SensorCDD_1 (O), Sensor_CDD_1 (x)

> For data transformation, it is assumed that NeedsOriginalData is false and DespiteDataUnavailability is true.

Data Transformation 에서 NeedsOriginalData 는 false 로, DespiteDataUnavailability 는 true 로 가정한다.

> Primitive data types is not supported for Data transformation. Therefore Rte_DRead cannot be used for data transformation.

Primitive Data Type에 대한 Data Transformation 은 지원하지 않는다. 따라서 Rte_DRead API는 Data Transformation에 사용될 수 없다.

Verification of data structure between ApplicationPrimitiveDataType with the category COM_AXIS, CURVE and MAP and ImplementationDataType mapped to it in DataTypeMappingSet is not supported.

DataTypeMappingSet 내에 카테고리 COM_AXIS, CURVE, MAP 의 Application Primitive Data
Type 과 이와 매핑된 ImplementationDataType 간의 데이터 구조 검증은 지원되지 않는다.

➤ When initialization of ApplicationPrimitiveDataType with category COM_AXIS, CURVE and MAP by using ApplicationValueSpecification, Verification of data structure between ImplementationDataType mapped to the ApplicationPrimitiveDataType and the ApplicationValueSpecification is performed. If ApplicationValueSpecification is configured with SwValueCont only, the category of the ImplementationDataType shall be ARRAY. If ApplicationValueSpecification is configured with SwValueCont and SwAxisCont, the category of the ImplementationDataType shall be STRUCTURE and the STRUCTURE shall contain an

HYUNDAI

문서 번호 (DOC NO)

SHT/SHTS 42 / 203

AUTOSAR RTE User Manual

ARRAY per an axis or a value each.

ApplicationValueSpecification 을 이용한 카테고리 COM_AXIS, CURVE, MAP의 Application Primitive Data Type의 초기화시, ApplicationPrimitiveDataType과 매핑된 ImplementationDataType과 ApplicationValueSpecification와의 데이터 구조 검증이 수행된다. ApplicationValueSpeficiation의 SwValueCont 만 설정되어 있는 경우, ImplementationDataType의 카테고리는 ARRAY이어야한다. ApplicationValueSpecification의 SwValueCont 및 SwAxisCont가 설정되어 있는 경우, ImplementationDataType의 카테고리는 STRUCTURE이어야하며, STRUCTURE는 각 axis 또는 value 설정마다 1개의 ARRAY를 포함해야한다.

When Synchronize Activate Offset is false, Expected Activation Offset is 0 and Alarm Set Methods is Relative is true, the second parameter of SetRelAlarm API is 1 instead of 0. SetRelAlarm returns an error when the second parameter is 0.

Synchronized Activate Offset 이 false 이고 Expected Activation Offset 이 0 이고, Alarm Set Methods is Relative 가 true 인 경우 SetRelAlarm API 의 2 번째 파라미터는 0 대신 1 이 된다. 두번째 파라미터가 0 인 경우 SetRelAlarm 은 에러를 반환한다.

5. Configuration Guide

본 Chapter에서 설명되는 Rte에 대한 설정 파라미터의 경우, 특별한 코멘트가 없는 경우를 제외하고, AUTOSAR 표준에서 제시하는 파라미터이다.

5.1 RteGeneration

Rte 코드 생성에 관련된 일반적인 내용을 설정한다.

Parameter Name	Value	Category
RteCalibrationSupport ¹⁾		C
RteDevErrorDetect ²⁾	false	F
RteDevErrorDetectUnInit ³⁾	false	F
RteVfbTraceClientPrefix ⁴⁾		N
RteVfbTraceEnabled ⁵⁾		С
RteVfbTraceFunction ⁶⁾		С
RteTaskComMapping ⁷⁾		С
RteGenerationMode	COMPATIBILITY_MODE	F
RtelocInteractionReturnValue	RTE_IOC	F
RteMeasurementSupport	false	F
RteOptimizationMode	RUNTIME	F
RteValueRangeCheckEnabled ⁸⁾		С
RteCodeVendorld	-	N
RteToolChainSignificantCharacters	-	N
RteEndToEndProtectionWrapperMode ⁹⁾	-	N

1) RteCalibrationSupport

Calibration Method 를 설정한다(None/InitializedRam/SinglePointered/OverlayRam).

2) RteDevErrorDetect

Rte 모듈에 대해 DET 기능을 ON/OFF 한다.

3) RteDevErrorDetectUnInit

DET 기능을 사용할 때 Rte 의 Init check 기능을 ON/OFF 한다.

4) RteVfbTraceClientPrefix

Rte API 에서 추가적인 VfbTraceFunction 을 사용하기 위한 prefix 를 입력한다.

5) RteVfbTraceEnabled

Rte 모듈에 대해 Vfb Trace 기능을 ON/OFF 한다.

6) RteVfbTraceFunction

VfbTrace Function 을 입력한다.

- RTE API Trace Events: Rte_\API\Hook_\cts_\ap_Start (or Return)
- COM: refer to AUTOSAR RTE SWS chapter 5.11.4
- OS Trace Events:
- . Rte_Task_{OsService}_TaskType_{OsTask Name} : OsTask 만을 인자로 하는 Service 인 경우
- . $Rte_Task_\langle OsService \rangle_TaskType_\langle OsTask\ Name \rangle_EventMaskType_\langle OsEvent\ Name \rangle$:

문서 번호 (DOC NO)

SHT/SHTS 44 / 203

AUTOSAR RTE User Manual

OsTask 만을 인자로 하는 Service 인 경우

- . Rte_Task_〈OsService 종류〉_AII: RTE 에서 사용하는 모든 OsTask, OsEvent 에 대하여 Hook 함수를 제공
- Runnable Entity Trace Events: Rte_Runnable_[\langle client\rangle_]\langle cts \rangle_\rangle reName \rangle_Start (or Return)
- ※ Spec 에서 가이드 하는 방식으로는 구현 불가하여, AUTRON 에서 자체적으로 위와 같은 설정 규약을 정의하였음
- % refer to chapter 4.4.2.8.1

7) RteTaskComMapping

Multi Partition 상황에서 Sub Partition에서 Com Module 이 존재하는 Main Partition으로 Communication Data 를 전달하기 위한 목적으로 이용할 OsTask를 설정한다.

8) RteValueRangeCheckEnabled

Rte 모듈에 대해 RangeCheck(HandleOutOfRange) 기능을 ON/OFF 한다.

9) RteEndToEndProtectionWrapperMode

E2E Protection Wrapper 관련 설정으로 E2E User Manual 을 참조한다. (E2E 미사용 시 설정 불필요)

5.2 RteSwComponentType

Rte 코드 생성을 위해 SwComponentType 에 대한 정보를 설정한다.

Parameter Name	Value	Category
RteComponentTypeRef ¹⁾		С
RteImplementationRef	-	N

RteComponentTypeRef

설정이 필요한 SwComponentType 를 선택한다.

5.2.1 RteComponentTypeCalibration

Calibration 기능을 사용할 때 설정한다.

Parameter Name	Value	Category
RteCalibrationSupportEnabled ¹⁾		С
RteCalibrationSwAddrMethodRef	-	N

1) RteCalibrationSupportEnabled

해당 Software Component 가 ParamterComponentType 이거나 Shared/Perlnstance Parameter 가 설정되어 Calibration 기능을 사용할 때 True 로 설정한다.

5.3 RteSwComponentInstance

SW-C Prototype 에 대해 코드 생성을 위해 SW-C Prototype 마다 이 컨테이너를 추가 한다.

Parameter Name	Value	Category
RteSoftwareComponentInstanceRef ¹⁾		C

1) RteSoftwareComponentInstanceRef

코드 생성 할 SW-C Prototype 을 선택한다.

5.3.1 RteEventToTaskMapping

SW-C에서 Runnable 을 실행하기 위해 설정한 Event에 대해 OsTask에 매핑하는 것으로 RTE Event 마다 이 컨테이너를 추가한다.

Parameter Name	Value	Category
RteEventRef 1)		С
RteMappedToTaskRef ²⁾		С
RtePositionInTask ³⁾		С
RteUsedOsAlarmRef ⁴⁾		С
RteWaitOsEventRef ⁶⁾ (AUTRON Specific)		С
RteUsedOsEventRef ⁵⁾		N
RteReceiverUsedOsEventRef (AUTRON Specific)		N
RteVirtuallyMappedToTaskRef	-	N
RteActivationOsAlarmRef (AUTRON Specific)	-	N
RteActivationOffset	-	N
RtelmmediateRestart	-	N
RteOsSchedulePoint	-	N
RteUsedOsSchTblExpiryPointRef	-	N
RteWaitOsAlarmRef (AUTRON Specific)		N

1) RteEventRef

설정하고자 하는 RTE Event 를 선택한다.

2) RteMappedToTaskRef

RTE Event 가 실행하는 Runnable 이 속할 OsTask 를 선택한다.

3) RtePositionInTask

한 OsTask에 여러 Runnable이 속하게 될 경우, 현재 설정하는 Runnable의 순서를 정한다. (번호를 지정하며, 0 번부터 먼저 실행된다.)

※ Position In Task 는 동일 OsTask 내에서는 중복이 있어서는 안 된다.

4) RteUsedOsAlarmRef

RTE Event 가 Timing Event 인 경우, 2)에서 선택한 Task 를 Activation 할 OsAlarm 을 선택한다. (따라서, OsAlaram 은 OsAlarmAction 이 ActivateTask 로 선택되어야 하며, ActivateTask 에 선택된 OsTask 는 2)에서 선택된 OsTask 와 동일해야 한다.)

※ Timing Event 가 아닌 경우, 설정 하지 않아도 무방하다.

5) RteUsedOsEventRef

RTE Event 가 Timing Event 이고, 2)에서 선택한 Task 가 Extended Task 일 때, OsAlarm 에 의해 Set 되는 OsEvent 를 선택한다.

※ 따라서, 4)에서 선택한 OsAlaram 은 OsAlarmAction 이 SetEvent 로 선택되어야 하며, SetEvent 에 선택된 OsEvent 는 현재 선택한 OsEvent 와 동일해야 한다.

RTE Event 가 Timing Event 외의 Event 이고, 2)에서 선택한 Task 가 Extended Task 일 때, 해당 OsTask 를 Activate 하도록 설정된 (i.e. OS 설정 참조) OsEvent 를 선택한다.

※ ODIN Studio 에서는 해당 파라미터가 설정 가능 항목이지만 Extended Task 기반의 RTE Event 구현은 기본적으로 지원하지 않는다. Extended Task 기반의 RTE Event 구현 필요 시 현대오트론과 상의 후에만 설정 가능하다.

문서 번호 (DOC NO)

SHT/SHTS 46 / 203

AUTOSAR RTE User Manual

(Refer to Chapter 4.4.2.1)

6) RteWaitOsEventRef

Client-Server 통신에서 Rte_Call 또는 Rte_Result에서 Server의 수행완료를 기다리기 위해 사용되는 OsEvent를 선택한다.

5.3.2 RteExclusiveAreaImplementation

SW-C의 Runnable 코드 개발 시, Exclusive Area를 사용할 때, Exclusive Area 마다 이 컨테이너를 추가한다.

Parameter Name	Value	Category
RteExclusiveAreaRef 1)		С
RteExclusiveArealmplMechanism 2)		С
RteExclusiveAreaOsResourceRef ³⁾		С

1) RteExclusiveAreaRef

Software Component 에서 설정한 Exclusive Area 의 경로를 선택한다.

2) RteExclusiveAreaImplMechanism

해당 Exclusive Area 의 동작 방식을 결정한다.

- A. ALL_INTERRUPT_BLOCKING: OS 의 SuspendAllInterrupts 와 ResumeAllInterrupts API 를 이 용하여 구간내의 모든 Interrupts 를 Block 한다.
- B. COOPERATIVE_RUNNABLE_PLACEMENT: 미지원 [선택불가]
- C. OS_INTERRUPT_BLOCKING: OS 의 SuspendOsInterrupts 와 ResumeOsInterrupts API 를 이 용하여 구간내의 Category2 Interrupt 를 Block 한다.
- D. OS_RESOURCE: OS 의 GetResource 와 ReleaseResource API 를 이용하여 구간내의 Critical Section 에 진입한다.
- ※ SuspendAllInterrupts, ResumeAllInterrupts, SuspendOsInterrupts, ResumeOsInterrupts, ReleaseResource API에 대한 자세한 내용은 OS 매뉴얼을 참조한다
- ※ RH850 용 RenesasOS 의 경우, Internal Resource 와 Standard Resource 를 동시에 설정하는 것을 지원하지 않는다. 따라서, Internal Resource 를 사용하고 있는 Task 내에서 OS_RESOURCE 방식의 Exclusive Area 를 사용할 수 없다. 자세한 내용은 RenesasOS 매뉴얼을 참조한다.(Refer to Chapter 4.4.2.6.6)

3) RteExclusiveAreaOsResourceRef

2)의 RteExclusiveArealmplMechanism 를 OS_RESOURCE 로 설정하였을 때, Exclusive Area 에서 사용할 OsResource 를 선택한다.

5.3.3 RteExternalTriggerConfig

SW-C 간의 External Trigger Communication 을 사용할 때, Queued 방식이라면 Trigger Source SW-C 관련 RteSwComponentIntance 에 이 컨테이너를 추가한다.

Parameter Name	Value	Category
RteSwcTriggerSourceRef ¹⁾		C
RteTriggerSourceQueueLength ²⁾		С

1) RteSwcTriggerSourceRef

Queued 방식으로 사용될 Trigger Instance 를 선택한다.

AUTRON **AUTOSAR RTE User Manual**

문서 번호 (DOC NO)

SHT/SHTS 47 / 203

2) RteTriggerSourceQueueLength

1)의 Trigger Instance 의 Length 값을 입력한다.

- ※ Queue 기능을 사용하고자 하는 경우, Sink Entity 가 Mapping 될 OsTask 의 Queue 값을 설정해줘야 한다. (해당 설정에 대한 설명은 OS 매뉴얼 참조)
- ※ Bolero MCU를 사용하는 플랫폼의 경우, OsTask의 Multiple Activation을 지원하지 않기 때문에 (Direct Function Call 이 아닌) Task Activation 방식의 Queue 기능을 사용 시 Maximum QueueLength = 1 이다.

5.3.4 RteInternalTriggerConfig

HYUNDAI

SW-C 내의 Runnable 간 Internal Trigger Communication 을 사용할 때, Queued 방식이라면 TriggerInstance 가 설정된 SW-C 관련 RteSwComponentIntance 에 이 컨테이너를 추가한다.

Parameter Name	Value	Category
RteSwcTriggerSourceRef ¹⁾		C
RteTriggerSourceQueueLength ²⁾		С

1) RteSwcTriggerSourceRef

Queued 방식으로 사용될 Trigger Instance 를 선택한다.

2) RteTriggerSourceQueueLength

1)의 Trigger Instance 의 Length 값을 입력한다.

- ※ Queue 기능을 사용하고자 하는 경우, Sink Entity 가 Mapping 될 OsTask 의 Queue 값을 설정해줘야 한다. (해당 설정에 대한 설명은 OS 매뉴얼 참조)
- ※ Bolero MCU를 사용하는 플랫폼의 경우, OsTask 의 Multiple Activation 을 지원하지 않기 때문에 (Direct Function Call 이 아닌) Task Activation 방식의 Queue 기능을 사용 시 Maximum QueueLength = 1 이다.

5.3.5 RteNvRamAllocation

Refer to Chapter 4.5 Deviations

Parameter Name	Value	Category
RteNvmRamBlockLocationSymbol	-	N
RteNvmRomBlockLocationSymbol	-	N
RteSwNvRamMappingRef	-	N
RteNvmBlockRef	-	N

5.4 RteBswModuleInstance

BSW 모듈 개발 시 BSW 모듈 마다 이 컨테이너를 추가한다.

- ※ AUTOSAR BSW 모듈의 Behavior에 대한 설정 정보가 포함되어 있는 Container 임
- ※ SWP SRS 정보 및 기본적으로 각 BSW 모듈에 필요한 항목 정보에 대하여 현대오트론에서 플랫폼 배포 시점에 확정하여 배포하는 내용으로, Application 설계 및 설정 시 변경이 불가 함
- ※ 단, Application 에서 직접 CDD Layer의 모듈 개발 시, 현대오트론과 상의 하에 설정 추가는 가능

Parameter Name	Value	Category
RteBswImplementationRef ¹⁾		С
RteBswModuleConfigurationRef ²⁾		С

AUTRON

AUTOSAR RTE User Manual

SHT/SHTS 48 / 203

1) RteBswImplementationRef

Bsw 모듈에 대한 Implementation 설정 경로를 지정한다.

2) RteBswModuleConfigurationRef

Bsw 모듈에 대한 Configuration 설정 경로를 지정한다.

5.4.1 RteBswEventToTaskMapping

BSW Module Description 에서 Entity 을 실행하기 위해 설정한 Event 에 대해 OsTask 에 매핑하는 것으로 BSW Event 마다 이 컨테이너를 추가한다.

Parameter Name	Value	Category
RteBswEventRef 1)		С
RteBswMappedToTask Ref 2)		С
RteBswPositionInTask 3)		С
RteBswUsedOsAlarmRef ⁴⁾		С
RteBswUsedOsEventRef ⁵⁾		N
RteBswActivationOffset		N
RteBswlmmediateRestart	-	N
RteOsSchedulePoint	-	N
RteBswUsedOsSchTblExpiryPointRef	-	N
RteBswActivationOsAlarmRef	-	N
RteBswTimeOutOsAlarmRef	-	N

1) RteBswEventRef

Task 를 매핑할 BSW Event 경로를 지정한다.

2) RteBswMappedToTaskRef

해당 BSW Event 가 호출하는 Entity 가 속할 Task 를 지정한다.

3) RteBswPositionInTask

Task 가 실행될 때 호출하는 Entity 의 순서를 정하기 위해 설정한다. 매핑된 Task 내에서 해당 BSW Event 가 호출하는 Entity 의 순서를 입력한다. (0 부터 실행한다.) ※ Position In Task 는 동일 OsTask 내에서는 중복이 있어서는 안 된다.

4) RteBswUsedOsAlarmRef

BSW Event 가 Timing Event 일 경우, Task 를 실행할 Alarm 을 지정한다. ※ Timing Event 가 아닌 경우, 설정 하지 않아도 무방하다.

5) RteBswUsedOsEventRef

RTE Event 에 매핑된 Task 가 Extended Task 일 경우, Task 를 실행할 Event 를 지정한다. ※ ODIN Studio 에서는 해당 파라미터가 설정 가능 항목이지만 Extended Task 기반의 RTE Event 구현은 기본적으로 지원하지 않는다. Extended Task 기반의 RTE Event 구현 필요 시 현대오트론과 상의 후에만 설정 가능하다. (Refer to Chapter 4.4.2.1)

5.4.2 RteBswExclusiveArealmpl

BSW 의 Entity 코드 개발 시, Exclusive Area 를 사용할 때, Exclusive Area 마다 이 컨테이너를 추가한다.



Parameter Name	Value	Category
RteBswExclusiveAreaRef ¹⁾		С
RteExclusiveArealmplMechanism ²⁾		С
RteBswExclusiveAreaOsResourceRef ³⁾		С
SchMEnableMacroName	-	N
SchMDisableMacroName	-	N

1) RteBswExclusiveAreaRef

BSW Module Description 에서 설정한 Exclusive Area 의 경로를 선택한다.

2) RteExclusiveArealmplMechanism

해당 Exclusive Area 의 동작 방식을 결정한다.

- A. ALL_INTERRUPT_BLOCKING: OS 의 SuspendAllInterrupts 와 ResumeAllInterrupts API 를 이 용하여 구간내의 모든 Interrupts 를 Block 한다.
- B. COOPERATIVE_RUNNABLE_PLACEMENT: 미지원 [선택불가]
- C. OS_INTERRUPT_BLOCKING: OS 의 SuspendOsInterrupts 와 ResumeOsInterrupts API 를 이 용하여 구간내의 Category2 Interrupt 를 Block 한다.
- D. OS_RESOURCE: OS 의 GetResource 와 ReleaseResource API 를 이용하여 구간내의 Critical Section 에 진입한다.
- ※ SuspendAllInterrupts, ResumeAllInterrupts, SuspendOsInterrupts, ResumeOsInterrupts, ReleaseResource API 에 대한 자세한 내용은 OS 매뉴얼을 참조한다
- ※ USER_DEFINED_MACRO 는 지원하지 않는다
- ※ RH850 용 RenesasOS 의 경우, Internal Resource 와 Standard Resource 를 동시에 설정하는 것을 지원하지 않는다. 따라서, Internal Resource 를 사용하고 있는 Task 내에서 OS_RESOURCE 방식의 Exclusive Area 를 사용할 수 없다. 자세한 내용은 RenesasOS 매뉴얼을 참조한다.(Refer to Chapter 4.4.2.6.6)

3) RteBswExclusiveAreaOsResourceRef

2)의 RteExclusiveArealmplMechanism 를 OS_RESOURCE 로 설정하였을 때, Exclusive Area 에서 사용할 OsResource 를 선택한다.

5.4.3 RteBswRequiredModeGroupConnection

BSW Module Description level 의 Mode Switch 통신을 사용할 때, 해당 Container 를 추가한다.,

Parameter Name	Value	Category
RteBswProvidedModeGroupRef ¹⁾		С
RteBswRequiredModeGroupRef ²⁾		С
RteBswProvidedModeGrpModInstRef ³⁾		С

1) RteBswProvidedModeGroupRef

providedModeGroupPrototype 을 참조하며, 이는 BSW 간 Mode Switch 통신에서, Manager 역할을 하는 Bsw Module Entity 에 연결되어 있다.

※ Application SWC 간 Mode Switch 통신에서, PPort 역할

2) RteBswRequiredModeGroupRef

requiredModeGroupPrototype 을 참조하며, 이는 BSW 간 Mode Switch 통신에서, user 역할을 하는 Bsw Module Entity 에 연결되어 있다.

※ Application SWC 간 Mode Switch 통신에서, RPort 역할

문서 번호 (DOC NO)

SHT/SHTS 50 / 203

AUTOSAR RTE User Manual

3) RteBswProvidedModeGrpModInstRef

위 1), 2) 설정에 의해서 연결된 Mode Switch 에서 사용될 ModeGroupPrototype Instance 를 선택한다

5.4.4 RteBswRequiredTriggerConnection

BSW Module Description level 의 Trigger Communication 을 사용할 때, Release Trigger BSW Module Description 관련 RteBswComponentIntance 에 이 컨테이너를 추가한다.

Parameter Name	Value	Category
RteBswReleasedTriggerRef ¹⁾		С
RteBswRequiredTriggerRef ²⁾		С
RteBswReleasedTriggerModInstRef ³⁾		С

1) RteBswReleasedTriggerRef

Released Trigger Instance 를 선택한다.

2) RteBswRequiredTriggerRef

Required Trigger Instance를 선택한다.

3) RteBswReleasedTriggerModInstRef

Released Trigger 를 가지는 BSW Module Description 이 참조된 RteBswComponentIntance 를 선택한다.

5.4.5 RteBswExternalTriggerConfig

BSW Module Description 간 External Trigger Communication 을 사용할 때, Queued 방식이라면 Release Trigger BSW Module Description 관련 RteBswComponentIntance 에 이 컨테이너를 추가한다.

Parameter Name	Value	Category
RteBswTriggerSourceRef 1)		С
RteBswTriggerSourceQueueLength 2)		С

1) RteBswTriggerSourceRef

Queued 방식으로 사용될 Release Trigger Instance 를 선택한다.

2) RteBswTriggerSourceQueueLength

1)의 Release Trigger Instance 의 Length 값을 입력한다.

- ※ Queue 기능을 사용하고자 하는 경우, Sink Runnable 이 Mapping 될 OsTask 의 Queue 값을 설정해줘야 한다. (해당 설정에 대한 설명은 OS 매뉴얼 참조)
- ※ Bolero MCU를 사용하는 플랫폼의 경우, OsTask의 Multiple Activation을 지원하지 않기 때문에 (Direct Function Call 이 아닌) Task Activation 방식의 Queue 기능을 사용 시 Maximum QueueLength = 1 이다.

5.4.6 RteBswInternalTriggerConfig

BSW Module Description 내 Entity 간 Internal Trigger Communication 을 사용할 때, Queued 방식이라면 Trigger 가 설정되어 있는 BSW Module Description 관련 RteBswComponentIntance 에 이 컨테이너를 추가

문서 번호 (DOC NO)

SHT/SHTS 51 / 203

한다.

Parameter Name	Value	Category
RteBswTriggerSourceRef 1)		C
RteBswTriggerSourceQueueLength 2)		С

1) RteBswTriggerSourceRef

Queued 방식으로 사용될 Release Trigger Instance 를 선택한다.

2) RteBswTriggerSourceQueueLength

1)의 Release Trigger Instance 의 Length 값을 입력한다.

- ※ Queue 기능을 사용하고자 하는 경우, Sink Runnable 이 Mapping 될 OsTask 의 Queue 값을 설정해줘야 한다. (해당 설정에 대한 설명은 OS 매뉴얼 참조)
- ※ Bolero MCU를 사용하는 플랫폼의 경우, OsTask의 Multiple Activation을 지원하지 않기 때문에 (Direct Function Call 이 아닌) Task Activation 방식의 Queue 기능을 사용 시 Maximum QueueLength = 1 이다.

5.5 RteOsInteraction

RteOsInteraction 설정을 통하여, 특정 OsAlarm 의 Start 방식 및 Offset 인가가 가능하다. Autron RTE에서는 특정 OsAlarm을 Start 시키기 위해서, Absolute (RTE 표준 제공 기능) / Relative (Autron Specific 제공기능) 방식을 구분하여 사용할 수 있는데, 해당 설정은 AlarmSetMethodIsRelative (Autron Specific Parameter) 에 따라 구분된다.

※ 일반적으로, AUTOSAR RTE 표준에서는 RteOsInteraction 설정을 통한, OsAlarm Start 에 대한 동작 정의 시, Absolute 방식을 사용하도록 가이드 하고 있다. Absolute 방식의 경우는 해당 Offset 을 현재 OsAlarm 이 Start 되는 시점에서의 OsCounter 값과 관계 없이, Offset 에 대한 추가 처리 없이 값을 인가한 후, OsCounter 가 해당 Offset 값에 도달하게 되면, 연동되는 OsAlarm 이 Start 되는 방식이다. 이에 반해, 오트론에서 추가적으로 제공하는 Relative 방식의 경우 현재 OsCounter 값에 Offset 값을 더한 후, (즉, 현재 시점에서 설정된 Offset 값 이후) 해당 OsAlarm 이 Start 되는 방식이며, 이를 구별하여 설정 가능하도록 추가 파라미터를 제공한다.

※ RteOsInteraction 설정을 통해, 특별히 Alarm Start 방식을 지정하지 않은 OsAlarm 의 경우는, RTE 에 의해서 Offset 값은 1 이고 Relative 방식으로 동작 된다.

또한, 특정 OsCounter 기반의 OsAlarm 을 이용하여, 동작하는 Timing Event 의 Offset 의 동기화가 필요한 경우, 아래의 설정을 이용한다 (Autron Specific 기능).

※ 아래의 설정을 통하여, BSW 모듈에서 사용하는 Timing Event 에 대한 OsTask 와 Application SWC 에서 사용하는 Timing Event 가 mapping 된 OsTask 의 Activate 시점에 대한 Offset 이 동기화 될 수 있다.

기본적으로, BSW 모듈에서 사용되는 Timing Event 는 SchM_Init (Rte_Start 수행 이전 시점) 에서 Alarm 설정을 통해 동작 되며, Application SWC(이하 SWC) 에서 설정된 Timing Event 는 Rte_Start 내에서 동일한 방식으로 동작이 수행된다. 이때 BSW 와 SWC 에서 설정된 Timing Event 에 대한 Offset 정보는 상호간 동기화 되지 않기 때문에, 동기화 된 Offset 기반으로 효율적인 주기 Timing Event 수행 리소스 분배를 원하는 경우, 사용이 권장된다. 또한 각 Timing Event 에 대한 OsAlarm 수행 순서를 오트론에서 제공하는 파라미터 (i.e. RteExpectedActivationPosition)를 통하여 결정 할 수 있다. (단, BSW 와 SWC Timing Event 간에 대한 동기화는 동일한 OsCounter 사용 시에 만 가능하다.)

※ 해당 기능을 사용하기 전에 반드시 8.6 Synchronized Offset (in Chapter 8. Appendix) 내용을 숙지하고 사용하도록 한다.

Parameter Name	Value	Category
RteSynchronizedActivateOffset1)		С
(AUTRON Specific)		
RteSynchronizedOsCounterRef ³⁾		С
(AUTRON Specific)		

1) RteSynchronizedActivateOffset

특정 OsCounter에 연동하는 OsAlarm 의 Start 시점에서의 Offset 의 동기화 기능 사용 여부

2) RteSynchronizedOsCounterRef Offset 동기화가 수행될 Base OsCounter

5.5.1 RteUsedOsActivation

5.3.1 또는 5.4.1 에서 Timing Event 에 매핑된 OsTask 를 특정 시간에 실행 시키기 위한 Offset 을 지정한다. Offset 지정을 원하는 OsTask 마다 이 컨테이너를 추가한다.

Parameter Name	Value	Category
RteActivationOsAlarmRef ¹⁾		С
RteActivationOsTaskRef ²⁾		С
RteExpectedActivationOffset ³⁾		С
RteExpectedActivationPosition ⁴⁾ (AUTRON Specific)		С
AlarmSetMethodIsRelative ⁵⁾ (AUTRON Specific)		С
RteExpectedTickDuration		N
RteActivationOsSchTblRef	-	N

1) RteActivationOsAlarmRef

Timing Event 에 대해 매핑된 OsAlarm 을 지정한다.

2) RteActivationOsTaskRef

Timing Event 에 대해 매핑된 OsTask 을 지정한다.

3) RteExpectedActivationOffset

원하는 Offset 을 초 단위로 입력한다.

4) RteExpectedActivationPosition

RteSynchronizedActivateOffset 이 True (기능 사용)으로 설정 되어 있는 경우, 해당 Container에 위치한 OsAlarm에 대한 Start 수행 순서를 정의할 수 있다.

※ 이 설정은, RteSynchronizedActivateOffset 설정이 True 인 경우에만 유효하다.

5) AlarmSetMethodIsRelative

OsAlarm 의 Start 방식을 Relative Type 으로 설정한다. (설정이 없거나, False 인 경우는 Absolute Type 으로 해당 OsAlarm 을 Start 한다

※ 이 설정은, RteSynchronizedActivateOffset 설정이 False 인 경우에만 유효하다.

5.5.2 RteModeToScheduleTableMapping

Parameter Name	Value	Category
RteModeSchtblMapModeDeclarationRef	-	N
RteModeScheduleTableRef	-	N

5.5.2.1 RteModeSchtblMapBsw

Parameter Name	Value	Category
RteModeSchtblMapBswProvidedModeGr	_	N
oupRef	-	
RteModeSchtblMapBswlnstanceRef	-	N



5.5.2.2 RteModeSchtblMapSwc

Parameter Name	Value	Category
RteModeSchtblMapSwcPortRef	-	N
RteModeSchtblMapSwcInstanceRef	-	N

5.6 RteBswGeneral

Parameter Name	Value	Category
RteSchMVersionInfoApi	false	F
RteUseComShadowSignalApi	true	F
SchMUserDefinedfileName	-	N

5.7 CommonPublishedInformation

Parameter Name	Value	Category
ArReleaseVersion	4.0.3	F
Moduleld	2	F
SwVersion	4.10.3	F
VendorApiInfix	-	N
Vendorld	-	N

5.8 RteImplicitCommunication

Parameter Name	Value	Category
RteCoherentAccess	-	N
RtelmmediateBufferUpdate	-	N
RteVariableReadAccessRef	-	N
RteVariableWriteAccessRef	-	N
RteSoftwareComponentInstanceRef	-	N

5.9 RtePostBuildVariantConfiguration

Parameter Name	Value	Category
RtePostBuildUsedPredefinedVariant	-	N

5.10 RtelnitializationBehavior

Parameter Name	Value	Category
RteSectionInitializationPolicy	INIT	N
RteInitializationStrategy	-	N

6. Application Programming Interface (API)

6.1 Type Definitions

6.1.1 Predefined Error Codes

The following list shows all Predefined error codes that are part of Rte.h and used by the RTE Module

• Std_ReturnType

Type:	uint8		,
Range	RTE_E_OK	0	No error occurred.
		1	Generic application error indicated by signal
	RTE_E_INVALID		invalidation in sender receiver communication with
			isQueued = false on the receiver side.
		128	An IPDU group was disabled while the application
			was waiting for the transmission acknowledgment.
			No value is available. This is not considered a fault,
			since the IPDU group is switched off on purpose.
			The semantics are as follows:
	PTE E COM STORRED		 The OUT buffers of a client or of explicit read
	RTE_E_COM_STOPPED		APIs are not modified
			 No runnable with StartOnEvent on a
			DataReceivedEvent for this DataElement-
			Prototype is triggered.
			The buffers for implicit read access will keep the
			previous value.
			A blocking API call returned due to expiry of a local
	RTE_E_TIMEOUT	129	timeout rather than the intended result. OUT
	KIE_E_IIWEOUI	129	buffers are not modified. The interpretation of this
			being an error depends on the application.
	RTE_E_LIMIT		An internal RTE limit has been exceeded. Request
		130	could not be handled. OUT buffers are not
			modified.
	DTE E NO DATA	121	An explicit read API call returned no data. (This is
	RTE_E_NO_DATA	131	no error.)
	RTE_E_TRANSMIT_ACK	132	Transmission acknowledgement received.
			An API call for reading received data of isQueued =
	DTE E LOST DATA	C 4	true indicates that some incoming data has been
	RTE_E_LOST_DATA	64	lost due to an overflow of the receive queue or due
			to an error of the underlying communication stack.
			An API call for reading received data of isQueued =
	DTE E MAY ACE EVEEDED	C 4	false indicates that the available data has exceeded
	RTE_E_MAX_AGE_EXCEEDED	64	the aliveTimeout limit. A COM signal outdated
			callback will result in this error.
			The error is returned by a blocking API and
			indicates that the runnable could not enter a wait
	RTE_E_IN_EXCLUSIVE_AREA	135	state, because one Executable Entity of the current
			task's call stack has entered or is running in an
			ExclusiveArea.
			The error can be returned by an RTE API, if the
	DTE E CEC EAUNT	126	parameters contain a direct or indirect reference to
	RTE_E_SEG_FAULT	136	memory that is not accessible from the caller's
			partition.

RTE_E_NEVER_RECEIVED 133 No data received for the corresponding unqueue data element since system start or partition results. The port used for communication is not connect. This can be returned by Rte_Read API, if the	
RTE_E_UNCONNECTED 134 The port used for communication is not connected. BTE_E_OUT_OF_RANGE 137 This can be returned by Rte_Read API, if the	start
received value is out of bounds.	
RTE_E_HARD_TRANSFORMER_ER ROR 138 An error during transformation occurred.	
RTE_E_SOFT_TRANSFORMER_ERR OR An error during transformation occurred which be notified to the SWC but still produces valid of as output (comparable to a warning).	
SCHM_E_OK 0 No error occurred.	
SCHM_E_LIMIT An internal Basic Software Scheduler limit has I exceeded. Request could not be handled. OUT buffers are not modified.	been
SCHM_E_NO_DATA An explicit read API call returned no data. (This no error.)	is
SCHM_E_TRANSMIT_ACK 132 Transmission acknowledgement received.	
The error is returned by a blocking API and indicates that the schedulable entity could not SCHM_E_IN_EXCLUSIVE_AREA 135 enter a wait state, because one ExecutableEntity the current task's call stack has entered or is running in an ExclusiveArea.	ty of
SCHM_E_TIMEOUT 129 The configured timeout exceeds before the intended result was ready.	

6.2 Macro Constants

None

6.3 Functions

이 Chapter 내, 각 함수에 대한 Parameter 에서, 〈Instance〉의 경우 Multiple Instance 기반의 시스템 설계가 필요한 경우에 사용되는 Parameter 이다. 현 RTE Product 에서는 이에 대한 기능 (Support Multiple Instance) 을 지원하지 않고 있으므로, 각 함수 사용 시, 해당 Parameter 는 사용되지 않는다.

* refer to 4.4.2.1

6.3.1 RTE APIs

※ RTE API 중 Return Value 로 Std_ReturnType 를 갖는 API 를 사용 시에는 반드시 Return Value 를 확인하는 로직을 추가해야 한다. Return Value 가 RTE_E_OK 가 아닌 경우 RTE API 요청이 처리 안될 수 있으며, 자세한 사항은 다음의 각 API 별 설명 및 AUTOSAR 문서를 참고한다.

6.3.1.1 Rte_Start

Function Name	Rte_Start	
Syntax:	Std_ReturnType Rte_Start (void)	



Service ID	0x70		
Sync/Async	NA		
Reentrancy	NA		
Parameters (In)	None		
Parameters (Inout)	None		
Parameters (Out)	None		
Return Value	Std_ReturnType	RTE_E_OK: API 호출이 정상적으로 완료되었다. RTE_E_LIMIT: 1. 리소스에 대한 사용량 Limit를 초과하였다. C. 리소스 할당에 실패했다.	
Description	Rte_Start allocates and initializes system resources and communication resources used by the RTE. It is called only once by the ECU state Manager. This service is not invoked from AUTOSAR software components.		
Preconditions	AUTOSAR Com, OS and Memory Services should be initialized.		
Configuration Dependency	The RTE Start API is always created.		

6.3.1.2 Rte_Stop

Function Name	Rte_Stop		
Syntax:	Std_ReturnType Rte_Stop (void)		
Service ID	0x71		
Sync/Async	NA		
Reentrancy	NA		
Parameters (In)	None		
Parameters (Inout)	None		
Parameters (Out)	None		
Return Value	Std_ReturnType	RTE_E_OK: API 호출이 정상적으로 완료되었다. RTE_E_LIMIT: 리소스 해제에 실패했다.	



Description	RTE Stop is used to finalize the RTE itself. This service releases all system and communication resources allocated by the Rte. It is called by the ECU state Manager before the basic software modules required by RTE are shut down.
Preconditions	AUTOSAR Com, OS and Memory Services should be finalized.
Configuration Dependency	The RTE Stop API is always created.

6.3.1.3 Rte_Read

Function Name	Rte_Read		
Syntax:	Std_ReturnType Rte_Read_\(\p\)_\(\o)\([IN Rte_Instance \) \(\instance\)], OUT \(\data\), [OUT Rte_TransformerError transformerError]) Where \(\p\) is the port name and \(\o\) the VariableDataPrototype within the sender-receiver interface categorizing the port.		
Service ID	0x19		
Sync/Async	NA		
Reentrancy	NA		
Parameters (In)	⟨instance⟩ SW-C instance		
Parameters (Inout)	None		
Parameters (Out)	⟨data⟩ data element to read		lement to read
Return Value	Std_ReturnType		RTE_E_OK: API 호출이 정상적으로 완료되었다. RTE_E_INVALID: DataElement 로 Invalid 한 값이 도착했다. RTE_E_MAX_AGE_EXCEEDED: DataElement 가 Timeout 으로 인하여 Expired 되었다. (Overlayed Error 로 다른 Error Code 와 같이 올 수 있다) RTE_E_NEVER_RECEIVED: 시스템 시작 또는 파티션 재시작 시점으로부 터 DataElement 를 받은 적이 없다. RTE_E_UNCONNECTED: Receiver Port 가 Sender Port 와 연결되어 있지 않다.



Description	Performs an "explicit" read on a sender-receiver communication data element with "data" semantics (swImplPolicy! = queued). The Rte_Read API is used for explicit read by argument.
Preconditions	Rte_Start API needs to be called before Rte_Read is called.
Configuration Dependency	If a VariableAccess in the dataReceivePointByArgument role references a required VariableDataPrototype with 'data' semantics.
Optional Parameter Configuration Dependency	The optional OUT parameter transformerError of the API shall be generated if PortPrototype of port is referenced by a PortAPIOption which has the attribute errorHandling set to transformerErrorHandling.

6.3.1.4 Rte_DRead

Function Name	Rte_DRead	Rte_DRead		
Syntax:	Where ⟨p⟩ i VariableDat	<pre>⟨return⟩ Rte_DRead_⟨p⟩_⟨o⟩([IN Rte_Instance ⟨instance⟩])</pre> Where ⟨p⟩ is the port name and ⟨o⟩ the VariableDataPrototype within the sender-receiver interface categorizing the port.		
Service ID	0x1A			
Sync/Async	NA			
Reentrancy	NA			
Parameters (In)	⟨instance⟩	⟨instance⟩ SW-C instance		
Parameters (Inout)	None	None		
Parameters (Out)	None	None		
Return Value	Implementa data type	tion	NA	
Description	communica (swlmplPolication) also have a	Performs an "explicit" read on a sender-receiver communication data element with "data" semantics (swlmplPolicy! = queued). By compatibility, the port may also have a ParameterInterface or an Nv- DataInterface. The Rte_DRead API is used for explicit read by value.		
Preconditions	Rte_Start A	Rte_Start API needs to be called before Rte_DRead is called.		
Configuration Dependency	VariableAcc references a	A non-blocking Rte_DRead API will be generated if a VariableAccess in the dataReceivePointByValue role references a required VariableDataPrototype with 'data' semantics. This requirement is applicable only for primitive		



l	data types.
l	
l	

6.3.1.5 Rte_Write

Function Name	Rte_Write	Rte_Write		
Syntax:	Std_ReturnType Rte_Write <o>([IN Rte_Instance <instance>], IN <data>, [OUT Rte_TransformerError transformerError]) Where is the port name and <o> the VariableDataPrototype within the sender-receiver interface categorizing the port.</o></data></instance></o>			
Service ID	0x14			
Sync/Async	NA			
Reentrancy	NA			
Parameters (In)	⟨instance⟩	SW-C	instance	
raiameteis (m)	⟨data⟩	data e	lement to write	
Parameters (Inout)	None	None		
Parameters (Out)	None	None		
Return Value	Std_ReturnType		RTE_E_OK: API 호출이 정상적으로 완료되었다. RTE_E_COM_STOPPED: COM Service 의 사용 불가로 인해 Operation 실행이 불가능하다. RTE_E_SEG_FAULT: 파라미터로 받은 메모리 주소가 API 를호출하는 파티션에서 접근 가능한 주소가 아니다.	
Description	Initiate an "explicit" sender-receiver transmission of data elements with "data" semantic (swImplPolicy different from 'queued').			
Preconditions	Rte_Start A	Rte_Start API needs to be called before Rte_Write is called.		
Configuration Dependency	for a provid	The presence of a VariableAccess in the dataSendPoint role for a provided VariableDataPrototype with data semantics will result in the generation of an Rte_Write API for the provided VariableDataPrototype.		
Optional Parameter Configuration Dependency	The optional OUT parameter transformerError of the API shall be generated if PortPrototype of port is referenced by a PortAPIOption which has the attribute errorHandling set to transformerErrorHandling.			



6.3.1.6 Rte_IsUpdated

Function Name	Rte_IsUpdat	Rte_IsUpdated		
Syntax	boolean Rte_IsUpdated_\(\rho\rangle \lambda\) \(\lambda\rangle \lambda\) \(\lambda\rangle \lambda\rangle \lambda\) \(\lambda\rangle \lambda\rangle \rangle \ra			
Service ID	0x30	•		
Sync/Async	NA			
Reentrancy	NA			
Parameters (In)	⟨instance⟩	⟨instance⟩ SW-C instance		
Parameters (Inout)	None	None		
Parameters (Out)	None	None		
Return Value	boolean 데이트 되었다. FALSE: DataElement 를 마지막으로 읽은 후역		DataElement 를 마지막으로 읽은 후에 업 데이트 되었다.	
Description	Indicates if not.	Indicates if the VariableDataPrototype has been updated or not.		
Preconditions	Rte_Start A called.	Rte_Start API needs to be called before Rte_IsUpdated is called.		
Configuration Dependency	The presence of a VariableAccess in the dataReceivePointByArgument or dataReceivePointByValue role referring to the VariableDataPrototype and the enableUpdate attribute is enabled in the NonqueuedReceiverComSpec of the VariableDataPrototype.			

6.3.1.7 Rte_IWrite

Function Name	Rte_IWrite
Syntax:	void Rte_IWrite_ $\langle re \rangle_{\langle p \rangle_{\langle o \rangle}}([IN RTE_Instance \langle instance \rangle], IN \langle data \rangle)$
Symax.	Where $\langle re \rangle$ is the runnable entity name, $\langle p \rangle$ the port name and $\langle o \rangle$ the VariableDataPrototype name.



Service ID	0x22		
Sync/Async	NA		
Reentrancy	NA		
Parameters (In)	⟨instance⟩ SW-C instance		
raiameters (m)	⟨data⟩	data to write	
Parameters (Inout)	None		
Parameters (Out)	None		
Return Value	None		
Description	Provides write access to the VariableDataPrototypes referenced by VariableAccesses in the dataWriteAccess role.		
Preconditions	Rte_Start API needs to be called before Rte_IWrite is called.		
Configuration Dependency	An Rte_IWrite API will be created for a provided VariableDataPrototype, if the RunnableEntity has a VariableAccess in the dataWriteAccess role referring to this VariableDataPrototype.		

6.3.1.8 Rte_WriteRef

Function Name	Rte_WriteRef		
Syntax:	<pre>⟨return reference⟩ Rte_IWriteRef_⟨re⟩_⟨p⟩_⟨o⟩⟨[IN RTE_Instance ⟨instance⟩]) Where ⟨re⟩ is the runnable entity name, ⟨p⟩ the port name and ⟨o⟩ the VariableDataPrototype name.</pre>		
Service ID	0x23		
Sync/Async	NA		
Reentrancy	NA		
Parameters (In)	⟨instance⟩ SW-C instance		
Parameters (Inout)	None		
Parameters (Out)	None		



Return Value	Pointer to implementation data type	NA	
Description	Provides a reference to the VariableDataPrototype referenced by a VariableAccess in the dataWriteAccess role.		
Preconditions	Rte_Start API needs to be called before Rte_IWriteRef is called.		
Configuration Dependency	An Rte_IWriteRef API will be created for a provided VariableDataPrototype, if the RunnableEntity has a VariableAccess in the dataWriteAccess role referring to this VariableDataPrototype.		

6.3.1.9 Rte_IRead

Function Name	Rte_IRead	Rte_IRead		
Syntax:	⟨instance⟩]	<pre>⟨return⟩ Rte_IRead_⟨re⟩_⟨p⟩_⟨o⟩([IN Rte_Instance ⟨instance⟩]) Where ⟨re⟩ is the runnable entity name, ⟨p⟩ the port name and ⟨o⟩ the VariableDataPrototype name.</pre>		
Service ID	0x21			
Sync/Async	NA	NA		
Reentrancy	NA	NA		
Parameters (In)	⟨instance⟩	⟨instance⟩ SW-C instance		
Parameters (Inout)	None	None		
Parameters (Out)	None	None		
Return Value	Implementa data type	Implementation data type		
Description		Provides read access to the VariableDataPrototype referenced by VariableAccess in the dataReadAccess role.		
Preconditions	Rte_Start Al	Rte_Start API needs to be called before Rte_IRead is called.		



	An Rte_IRead API will be created for a required
Configuration	VariableDataPrototype, if the RunnableEntity has a
Dependency	VariableAccess in the dataReadAccess role referring to this
	VariableDataPrototype.

6.3.1.10 Rte_IStatus

Function Name	Rte_IStatus		
Syntax:	Std_ReturnType Rte_IStatus_\(\frac{re}_\circ\pi\)_\(\circ\o)\(\left[IN Rte_Instance \\ \circ\o \right], [OUT Rte_TransformerError transformerError]) Where \(\frac{re}\) is the runnable entity name, \(\frac{rp}\) the port name and \(\frac{co}\) the VariableDataPrototype name.		
Service ID	0x25		
Sync/Async	NA		
Reentrancy	NA		
Parameters (In)	⟨instance⟩	SW-C	instance
Parameters (Inout)	None		
Parameters (Out)	None		
Return Value	Std_ReturnType		RTE_E_OK: API 호출이 정상적으로 완료되었다. RTE_E_INVALID: DataElement 로 Invalid 한 값이 도착했다. RTE_E_MAX_AGE_EXCEEDED: DataElement 가 Timeout 으로 인하여 Expired 되었다.(Overlayed Error 로 다른 Error Code 와 같이 올 수 있다) RTE_E_NEVER_RECEIVED: 시스템 시작 또는 파티션 재시작 시점으로부 터 DataElement 를 받은 적이 없다. RTE_E_UNCONNECTED: Receiver Port 가 Sender Port 와 연결되어 있지 않다.
Description	Provides the error status of a VariableDataPrototype referenced by a VariableAccess in the dataReadAccess role.		
Preconditions	Rte_Start API needs to be called before Rte_IStatus is called.		
Configuration Dependency	An Rte_IStatus API will be created for a required VariableDataPrototype, if a RunnableEntity has a VariableAccess in the dataReadAccess role referring to this VariableDataPrototype, and if at the RPortPrototype a NonqueuedReceiverComSpec with either1. the attribute		



· ·				
	AliveTimeout set to a value greater than zero			
	and/or			
	2. the attribute handleNeverReceived set to TRUE			
	and/or			
	3. if at the SenderReceiverInterface classifying the			
	RPort-			
	Prototype an InvalidationPolicy set to keep is specified for			
	this VariableDataPrototype.			
Ontin and Dama materia	The optional OUT parameter transformerError of the API			
Optional Parameter	shall be generated if PortPrototype of port is referenced			
Configuration Dependency	by a PortAPIOption which has the attribute errorHandling			
Dependency	set to transformerErrorHandling.			

6.3.1.11 Rte_Mode

Function Name	Rte_Mode			
Syntax:	<pre>⟨return⟩ Rte_Mode_⟨p⟩_⟨o⟩([IN Rte_Instance ⟨instance⟩])</pre> Where ⟨m⟩ is the ModeDeclarationGroup name, ⟨p⟩ is the port name, and ⟨o⟩ the ModeDeclarationGroupPrototype name within the ModeSwitchInterface categorizing the port.			
Service ID	0x2C			
Sync/Async	NA			
Reentrancy	NA			
Parameters (In)	⟨instance⟩ SW-C instance			
Parameters (Inout)	None			
Parameters (Out)	None			
Return Value	Rte_ModeType_ <m> NA</m>		NA	
Description	Provides the currently active mode of a mode switch port. ** Design Decision: If the mode user partition is in stopped or restarting, Rte_Mode (in Mode Manager) shall return RTE_TRANSITION_ <modedeclarationgroup> (in rte_sws_2731) / If the mode manager partition is in stopped or restarting, Rte_Mode (in Mode User) shall return the mode status which has been updated just before entering in stopped or restarting from Mode manager. (AUTRON design decision)</modedeclarationgroup>			
Preconditions	Rte_Start API needs to be called before Rte_Mode is called.			



Configuration Dependency	The existence of a ModeAccessPoint will result in the generation of an Rte_Mode API.
	generation of an Rec_mode / (1).

6.3.1.12 Rte_Switch

Function Name	Rte_Switch			
Syntax:	Std_ReturnType Rte_Switch_\(\rho\)_\(\lambda\)\(\lambda\)\(\lambda\) \text{Vinstance}\], IN Rte_ModeType_\(\lambda\)\(\lambda\) \text{Where \(\rho\)\) is the port name and \(\lambda\)\the \text{ModeDeclarationGroup-Prototype within the} \text{ModeSwitchInterface categorizing the port.}			
Service ID	0x15	0x15		
Sync/Async	NA			
Reentrancy	NA			
Parameters (In)	⟨instance⟩	SW-C	instance	
raiameters (m)	⟨mode⟩	Mode	to be switched	
Parameters (Inout)	None			
Parameters (Out)	None			
Return Value	Std_ReturnType		RTE_E_OK RTE_E_LIMIT	
Description	Initiate a mode switch. The Rte_Switch API call is used for 'explicit' sending of a mode switch notification.			
Preconditions	Rte_Start API ne	Rte_Start API needs to be called before Rte_Switch is called.		
Configuration Dependency		The existence of a ModeSwitchPoint will result in the generation of Rte_Switch API.		

6.3.1.13 Rte_Call

Function Name	Rte_Call
Syntax:	Std_ReturnType Rte_Call <o>(</o>

문서 번호 (DOC NO)

SHT/SHTS 66 / 203

AUTOSAR RTE User Manual

	[IN IN/OUT OU	JT] 〈data_1〉 [IN IN/OUT OUT] 〈data_n〉)	
	〈p〉: R-Port 이름 〈o〉: ClientServerInterface 의 Operation 이름		
Service ID	0x1C		
Sync/Async	NA		
Reentrancy	NA		
	⟨instance⟩	SW-C 인스턴스	
Parameters (In)	⟨data_1⟩ to ⟨data_n⟩	서버 요청 시 클라이언트에서 서버로 전달할 데이 터 (ClientServerInterfae 의 Operation 에서 Direction 이 IN 으로 정의된 Argument)	
Parameters (Inout)	⟨data_1⟩ to ⟨data_n⟩	서버 요청 시 클라이언트에서 서버로 전달 및 서 버에서 서비스 수행 후 서버에서 클라이언트로 전 달을 동시에 수행하는 데이터 (ClientServerInterfae 의 Operation 에서 Direction 이 INOUT 으로 정의된 Argument)	
Parameters (Out)	⟨data_1⟩ to ⟨data_n⟩	서버 요청 시 서버에서 서비스 수행 후 서버에서 클라이언트로 전달할 데이터 (ClientServerInterfae 의 Operation 에서 Direction 이 OUT 으로 정의된 Argument) (비동기식(Asynchronous) 방식에서는 사용되지 않음.)	
Return Value	Std_ReturnType	RTE_E_OK: API 호출이 정상적으로 완료 RTE_E_LIMIT: 1. 이전의 API 호출이 종료되지 않음 2. N:1 연결일 경우, 서버 큐가 가득 참 RTE_E_TIMEOUT: 설정된 타임아웃 이내에 서버로 부터의 응답을 받지 못함 (동기식 (Synchronous) 방식에서만 Return) RTE_E_UNCONNECTED: 클라이언트 포트가 서버와 연결되어 있지 않음 RTE_E_IN_EXCLUSIVE_AREA: 이 Task 의 Call Stack 에서 ExecutableEntity 중 하나가 현재 Exclusive Area 에 있기 때문에 Runnable 이 Wait 상태가 될 수 없음. (동기식(Synchronous) 방식에서만 Return) RTE_E_SEG_FAULT: 파라미터로 받은 메모리 주소를 API를 호출한 파티션에서 사용할 수 없음 (파티션 간 통신에서만 Return) 〈Application Error〉²¹: 서버에서 서비스 수행 중 발생한 에러 위에서 RTE_E_OK를 제외한 에러가 발	



	생하지 않고 서버가 수행이 된 경우 서버 의 Return 값을 전달 (동기식 (Synchronous) 방식에서만 Return)	
Description	클라이언트-서버 통신을 시작하는 클라이언트 함수이다. 동기식 (Synchronous)과 비동기식(Asynchronous) 방식에서 모두 사용되며, 1. 동기식에서는 서버에 서비스 수행을 요청(요청 데이터 전달) 하고, 서비스 수행이 완료되기를 기다리다가 서비스 수행이 완료되면, 응답 데이터를 애플리케이션에 전달하며 종료한다. 2. 비동기식에서는 서버에 서비스 수행을 요청(요청 데이터 전달)을 수행한다.	
Preconditions	Rte_Call 호출 전 Rte_Start 의 호출이 완료되어야 한다.	
Configuration Dependency	SynchronousServerCallPoint/AsynchrnousServerCallPoint 가 RPortProtottype 을 통해 ClientServerOperation 을 참조하고 있 을 때 Rte_Call API 가 생성된다.	

- 1) Direct Function Call 방식에서는 RTE_E_OK, RTE_E_UNCONNECTED, 〈Application Error〉만 Return 한다.
- 2) 〈Application Error〉는 API에 해당하는 ClientServerOperation 의 PossibleErrorRef 를 통해 확인 가 능하며, BSW 서비스의 Error에 대한 자세한 내용은 각 모듈 별 매뉴얼을 참조한다.

6.3.1.14 Rte_Result

Function Name	Rte_Result			
Syntax:	Std_ReturnType Rte_Result_〈p〉_〈o〉([IN Rte_Instance 〈instance〉], [IN/OUT OUT 〈param 1〉] [IN/OUT OUT 〈param n〉]) 〈p〉: R-Port 이름 〈o〉: ClientServerInterface 의 Operation 이름			
Service ID	0x1D	·		
Sync/Async	NA			
Reentrancy	NA	NA		
Parameters (In)	〈instance〉 SW-C 인스턴스			
Parameters (Inout)	⟨data_1⟩ to ⟨data_n⟩	서버 요청 시 클라이언트에서 서버로 전달 및 서 버에서 서비스 수행 후 서버에서 클라이언트로 전 달을 동시에 수행하는 데이터 (ClientServerInterfae 의 Operation 에서 Direction 이 INOUT 으로 정의된 Argument)		
Parameters (Out)	⟨data_1⟩ to ⟨data_n⟩	서버 요청 시 서버에서 서비스 수행 후 서버에서 클라이언트로 전달할 데이터 (ClientServerInterfae 의 Operation 에서 Direction 이 OUT 으로 정의된 Argument) (비동기식(Asynchronous) 방식에서는 사용되지 않음.)		



		RTE_E_OK: API 호출이 정상적으로 완료	
		RTE_E_NO_DATA:	
		Rte_Call 이 호출되지 않았거나 서버의	
		수행이 완료되지 않음	
		RTE_E_TIMEOUT:	
		설정된 타임아웃 이내에 서버로 부터의	
		응답을 받지 못함	
		RTE_E_UNCONNECTED:	
		클라이언트 포트가 서버와 연결되어 있지	
		않음	
		RTE_E_IN_EXCLUSIVE_AREA:	
Return Value	Std_ReturnType	이 Task 의 Call Stack 에서	
	,,	ExecutableEntity 중 하나가 현재	
		Exclusive Area 에 있기 때문에	
		Runnable 이 Wait 상태가 될 수 없음.	
		RTE_E_SEG_FAULT:	
		파라미터로 받은 메모리 주소를 API를	
		호출한 파티션에서 사용할 수 없음 (파티	
		션 간 통신에서만 Return)	
		Application Error>:	
		서버에서 서비스 수행 중 발생한 에러	
		위에서 RTE_E_OK 를 제외한 에러가 발	
		생하지 않고 서버가 수행이 된 경우 서버	
		의 Return 값을 전달	
Description	비동기식(Asynchronou 수행 결과를 얻는다.	비동기식(Asynchronous) 클라이언트-서버 통신에서 서버의 서비스 수행 결과를 얻는다.	
Preconditions	Rte_Result 호출 전 Rt	Rte_Result 호출 전 Rte_Start 의 호출이 완료되어야 한다.	
	AsynchronousServer	AsynchronousServerCallResultPoint 가	
	*	allPoint 를 참조하고 있고,	
	AsynchrnousServerC		
	WaitPoint 가 설정되어	-	
	Non-blocking Rte_Re	SUIT API가 생성된다.	
	AsynchronousServer		
	•	allPoint 를 참조하고 있고,	
Configuration	AsynchrnousServerCallReturnsEvent 에		
Dependency	WaitPoint 가 설정되어		
	Blocking Rte_Result API 가 생성된다.		
	AsynchronousServer	CallReturnsEvent 가	
	RunnableEntity 와 ClientServerOperation 을 참조하고 있을 때 RunnableEntity 는 서버의 서비스 수행이 완료되면 Activation 된		
	다.		
	Association and Company College to the College to t		
	AsynchronousServer	CallReturnsEvent 가 RunnableEntity 를 참	



	조하고, 동시에 WaitPoint에 의해 참조될 수 없다.
l	
l	

6.3.1.15 Rte_Invalidate

Function Name	Rte_Invalidate		
Syntax:	Std_ReturnType Rte_Invalidate_\(\rho\rangle\)_\(\cdot\)\([IN Rte_Instance \(\cdot\) instance\), [OUT Rte_TransformerError transformerError]) Where \(\rho\rangle\) is the port name and \(\cdot\) the VariableDataPrototype within the sender-receiver interface categorizing the port.		
Service ID	0x16		
Sync/Async	NA		
Reentrancy	NA		
Parameters (In)	⟨instance⟩	⟨instance⟩ SW-C instance	
Parameters (Inout)	NA		
Parameters (Out)	NA		
Return Value	Std_ReturnType		RTE_E_OK: API 호출이 정상적으로 완료. RTE_E_COM_STOPPED: COM Service 의 사용 불가로 인해 Operation 실행이 불가능하다.
Description	Invalidate a data element for an "explicit" sender-receiver transmission.		
Preconditions	Rte_Start API needs to be called before Rte_Invalidate is called.		
Configuration Dependency	An Rte_Invalidate API will be created for any VariableAccess in the dataSendPoint role that references a provided VariableDataPrototype which associated InvalidationPolicy is set to keep or replace.		
Optional Parameter Configuration Dependency	set to keep or replace. The optional OUT parameter transformerError of the API shall be generated if PortPrototype of port is referenced by a PortAPIOption which has the attribute errorHandling set to transformerErrorHandling.		



6.3.1.16 Rte_IInvalidate

Function Name	Rte_llnvalidate		
Syntax:	void Rte_IInvalidate_ <re><o>([IN Rte_Instance <instance>]) Where <re> is the runnable entity name, the port name and <o> the VariableDataPrototype name.</o></re></instance></o></re>		
Service ID	0x24		
Sync/Async	NA		
Reentrancy	NA		
Parameters (In)	⟨instance⟩	SW-C instance	
Parameters (Inout)	NA		
Parameters (Out)	NA	NA	
Return Value	None		
Description	Invalidate a VariableDataPrototype referenced by a VariableAccess in the dataWriteAccess role.		
Preconditions	Rte_Start API ne called.	Rte_Start API needs to be called before Rte_IInvalidate is called.	
Configuration Dependency	An Rte_IInvalidate API will be created for a provided VariableDataPrototype, if the RunnableEntity has VariableAccesses in the dataWriteAccess role referring to this VariableDataPrototype and the associated Invalidation-Policy of the VariableDataPrototype is set to keep or replace.		

6.3.1.17 Rte_Feedback

Function Name	Rte_Feedback	
	Std_ReturnType Rte_Feedback <o>([IN Rte_Instance <instance>])</instance></o>	
Syntax:	Where is the port name and <o> the VariableDataPrototype within the sender-receiver interface categorizing the port.</o>	
Service ID	0x17	
Sync/Async	NA	



Reentrancy	NA		
Parameters (In)	⟨instance⟩	SW-C instance	
Parameters (Inout)	NA		
Parameters (Out)	NA		
Return Value	Std_ReturnType	RTE_E_NO_DATA: Data 전송 요청의 결과가 도착하지 않았다. RTE_E_COM_STOPPED: COM Service 의 사용 불가로 인해 Operation 실행이 불가능하다.RTE_E_TIMEOUT: (Inter-ECU and Inter-Partition only) Timeout 이 발생했다. RTE_E_TRANSMIT_ACK: Data 전송 요청을 완료하였다. (Queue Overflow 경우도 포함). RTE_E_UNCONNECTED: Sender Port 가 Receiver Port 와 연결되어 있지 않다. RTE_E_IN_EXCLUSIVE_AREA: (Blocking API only) ExclusiveArea 사용으로 인하여 Blocking API를 사용할수 없다.	
Description	Provide access to acknowledgement notifications for explicit sender receiver communication and to pass error notification to senders.		
Preconditions	Rte_Start API needs to be called before Rte_Feedback is called.		
Configuration Dependency	A blocking Rte_Feedback API will be generated for a provided VariableDataPrototype, if acknowledgement is enabled and a WaitPoint references a DataSendCompletedEvent that in turn references the VariableDataPrototype. A non-blocking Rte_Feedback API will be generated for a provided VariableDataPrototype, if acknowledgement is enabled and a VariableAccess in the dataSendPoint role references the VariableDataPrototype but no WaitPoint references the DataSendCompletedEvent that references the VariableDataPrototype.		

6.3.1.18 Rte_IFeedback

Function Name	Rte_IFeedback	
7 Onetion Name	INCE_II EEGDBCK	



Syntax:	Std_ReturnType Rte_IFeedback_ <re><o> ([IN RTE_Instance <instance>]) Where <re> is the runnable entity name, the port name and <o> the VariableDataPrototype within the sender-receiver interface categorizing the port.</o></re></instance></o></re>		
Service ID	0x2F		
Sync/Async	NA		
Reentrancy	NA		
Parameters (In)	⟨instance⟩ SW-C i		instance
Parameters (Inout)	NA		
Parameters (Out)	NA		
Return Value	Std_ReturnType		RTE_E_NO_DATA: Data 전송 요청의 결과가 도착하지 않았다. RTE_E_COM_STOPPED: COM Service 의 사용 불가로 인해 Operation 실행이 불가능하다. RTE_E_TIMEOUT: (Inter-ECU and Inter-Partition only) Timeout 이 발생했다. RTE_E_TRANSMIT_ACK: Data 전송 요청을 완료하였다. RTE_E_UNCONNECTED: Sender Port 가 Receiver Port 와 연결되어 있지 않다.
Description	Provide access to acknowledgement notifications for implicit sender receiver communication and to pass error notification to senders.		
Preconditions	Rte_Start API needs to be called before Rte_IFeedback is called.		
Configuration Dependency	An Rte_IFeedback API will be created for a provided VariableDataPrototype, if acknowledgment is enabled and the RunnableEntity has a VariableAccess in the dataWriteAccess role referring to this VariableDataPrototype. An Rte_IFeedback API will be created for a provided VariableDataPrototype, if acknowledgment is enabled and a DataWriteCompletedEvent references the RunnableEntity as well as the VariableDataPrototype.		



6.3.1.19 Rte_Enter

Function Name	Rte_Enter			
Syntax:	void Rte_Enter_ <name>([IN Rte_Instance <instance>]) Where <name> is the exclusive area name.</name></instance></name>			
Service ID	0x2A	is the exclosive area name.		
Sync/Async	NA			
Reentrancy	NA			
Parameters (In)	⟨instance⟩	SW-C instance		
Parameters (Inout)	NA	NA		
Parameters (Out)	NA			
Return Value	None			
Description	Rte_Enter API call is invoked by an AUTOSAR software component to define the start of an exclusive area.			
Preconditions	Rte_Start API needs to be called before Rte_Enter is called.			
Configuration Dependency	An Rte_Enter API will be created for each ExclusiveArea that is declared and which has a canEnterExclusiveArea association.			

6.3.1.20 Rte_Exit

Function Name	Rte_Exit		
Syntax:	void Rte_Exit_ <name>([IN Rte_Instance <instance>]) Where <name> is the exclusive area name.</name></instance></name>		
Service ID	0x2B		
Sync/Async	NA		
Reentrancy	NA		
Parameters (In)	⟨instance⟩ SW-C instance		
Parameters (Inout)	NA		



Parameters (Out)	NA
Return Value	None
Description	Rte_Exit API call is invoked by an AUTOSAR software component to define the end of an exclusive area.
Preconditions	Rte_Start API needs to be called before Rte_Exit is called.
Configuration Dependency	An Rte_Exit API will be created for each ExclusiveArea that is declared and which has a canEnterExclusiveArea association.

6.3.1.21 Rte_IrvRead

Function Name	Rte_IrvRead			
	Primitive Type: <return> Rte_IrvRead_<re>_<o>([IN RTE_Instance <instance>]) Complex type signature: void Rte_IrvRead_<re>_<o>([IN RTE_Instance <instance>], OUT <data>)</data></instance></o></re></instance></o></re></return>			
Syntax:	Where <re> is the name of the runnable entity the API might be used in, <o> is the name of the InterRunnableVariables. The complex type signature is used, if the Implementation—Data Type of the InterRunnableVariable resolves to Array Implementation Data Type or Structure Implementation Data Type, otherwise the primitive type signature is used.</o></re>			
Service ID	0x28			
Sync/Async	NA			
Reentrancy	NA	NA		
Parameters (In)	⟨instance⟩	SW-C	instance	
Parameters (Inout)	NA	NA		
Parameters (Out)	Complex Type: 〈data〉	I data to be read		
Return Value	Primitive Type: Implementation Data type Complex Type: NA		NA	



Description	Provides read access to the defined InterRunnableVariables with explicit behavior within a component Description.
Preconditions	Rte_Start API needs to be called before Rte_IrvRead is called.
Configuration Dependency	An Rte_IrvRead API shall be created for each read InterRunnableVariable using explicit access.

6.3.1.22 Rte_IrvWrite

Function Name	Rte_IrvWrite		
Syntax:	void Rte_IrvWrite_ <re>_<o>([IN RTE_Instance <instance>], IN <data>) Where <re> is the name of the runnable entity the API might be used in, <o> is the name of the InterRunnableVariable to access and <data> is the placeholder for the data the InterRunnableVariable shall be set to.</data></o></re></data></instance></o></re>		
Service ID	0x29		
Sync/Async	NA		
Reentrancy	NA		
Parameters (In)	⟨instance⟩	SW-C instance	
r arameters (m)	⟨data⟩	data to be written	
Parameters (Inout)	NA		
Parameters (Out)	NA		
Return Value	None		
Description	Provides write access to the InterRunnableVariables with explicit behavior within a component description.		
Preconditions	Rte_Start API needs to be called before Rte_IrvWrite is called.		
Configuration Dependency	An Rte_IrvWrite API shall be created for each written InterRunnableVariable using explicit access.		



6.3.1.23 Rte_IrvIRead

Function Name	Rte_IrvIRead	Rte_IrvIRead		
Syntax:	\(\text{return}\) Rte_IrvIRead_\(\text{re}_\circ\)\(\(([IN RTE_Instance \(\text{instance}\)]\) Where \(\text{re}\) is the name of the runnable entity the API might be used in, \(\circ\) is the name of the VariableDataPrototype in role implicitInterRunnableVariable.			
Service ID	0x26			
Sync/Async	NA			
Reentrancy	NA	NA		
Parameters (In)	⟨instance⟩	⟨instance⟩ SW-C instance		
Parameters (Inout)	NA	NA		
Parameters (Out)	NA	NA		
Return Value	Implementation type	n data	NA	
Description	Provide read access to the InterRunnableVariables with implicit behavior of an AUTOSAR SW-C.			
Preconditions	Rte_Start API called.	Rte_Start API needs to be called before Rte_IrvIRead is called.		
Configuration Dependency	An Rte_IrvIRead API shall be created for each VariableAccess in role readLocalVariable to an implicit-InterRunnableVariable.			

6.3.1.24 Rte_IrvIWrite

Function Name	Rte_IrvIWrite
	void Rte_IrvIWrite_ <re>_<o>([IN RTE_Instance <instance>],IN <data>)</data></instance></o></re>
Syntax:	Where <re> the name of the RunnableEntity is API might be used in, <o> is the name of the VariableDataPrototype in the role implicitInterRunnableVariable to access and <data> is the placeholder for the data the InterRunnableVariable shall be set to.</data></o></re>



Service ID	0x27	
Sync/Async	NA	
Reentrancy	NA	
Parameters (In)	⟨instance⟩	SW-C instance
Parameters (III)	⟨data⟩	data to be written
Parameters (Inout)	NA	
Parameters (Out)	NA	
Return Value	None	
Description	Provide write access to the InterRunnableVariables with implicit behavior of an AUTOSAR SW-C.	
Preconditions	Rte_Start API needs to be called before Rte_IrvIWrite is called.	
Configuration Dependency	An Rte_IrvIWrite API shall be created for each VariableAccess in role writtenLocalVariable to an implicitInterRunnableVariable.	

6.3.1.25 Rte_Trigger

Function Name	Rte_Trigger		
Syntax:	without queuing support: void Rte_Trigger <o>([IN Rte_Instance <instance>]) with queuing support: Std_ReturnType Rte_Trigger<o>([IN Rte_Instance <instance>]) < P-Port 이름 <o>: Trigger Interface 의 Trigger 이름</o></instance></o></instance></o>		
Service ID	0x2D		
Sync/Async	NA		
Reentrancy	NA		
Parameters (In)	⟨instance⟩	SW-C 인스턴스	
Parameters (Inout)	NA		
Parameters (Out)	NA		



Return Value	Std_ReturnType	RTE_E_OK : API 호출이 정상적으로 완료	
		RTE_E_LIMIT : Queued 방식에서 큐가 가득 참	
Description	외부 SW-C 의 Runnable(들)을 호출하는 함수이다.		
Preconditions	Rte_Trigger 호출 전 Rte_Start 의 호출이 완료되어야 한다.		
Configuration Dependency	ExternalTriggeringPoint 가 PPortPrototype 을 통해 Trigger 를 참조하고, ExternalTriggerOccurredEvent 가 같은 Trigger 를 참조 할 때 Rte_Trigger API 가 생성된다.		

6.3.1.26 Rte_IrTrigger

For the Alexan	Dto InTringer			
Function Name	Rte_IrTrigger			
Syntax:	signatwithout queuing support: void Rte_IrTrigger_ <re>_<o>([IN Rte_Instance <instance>]) signature with queuing support: Std_ReturnType Rte_IrTrigger_<re>_<o>([IN Rte_Instance <instance>]) <re>< API 를 사용하는 RunnableEntity 이름</re></instance></o></re></instance></o></re>			
Service ID	0x2E	<o>: <re>에서 설정한 InternalTriggeringPoint 이름 0x2E</re></o>		
Sync/Async	NA			
Reentrancy	NA			
Parameters (In)	〈instance〉 SW-C 인스턴스		인스턴스	
Parameters (Inout)	NA			
Parameters (Out)	NA			
Return Value	Std_ReturnType		RTE_E_OK : API 호출이 정상적으로 완료	
Keturri Value			RTE_E_LIMIT : Queued 방식에서 큐가 가득 참	
Description	SW-C 내부에서 다른 RunnableEntity(들)을 호출하는 함수이다.			
Preconditions	Rte_Trigger 호출 전 Rte_Start 의 호출이 완료되어야 한다.			



6.3.1.27 Rte_Receive

Function Name	Rte_Receive			
Syntax:	Std_ReturnType Rte_Receive_\(\rho\rangle\)\(\left(\line{\lin			
Service ID	0x1B			
Sync/Async	NA			
Reentrancy	NA			
Parameters (In)	⟨instance⟩	SW-C instance		
Parameters (Inout)	NA			
Parameters (Out)	data	data element to read		
Parameters (Out)	length	number of elements in the data element		
Return Value	Std_ReturnType	RTE_E_OK: API 호출이 정상적으로 완료되었다. RTE_E_NO_DATA: Data 전송 요청의 결과가 도착하지 않았다. RTE_E_TIMEOUT: (Inter-ECU and Inter-Partition only) Timeout 이 발생했다. RTE_E_LOST_DATA: 일부 Data 를 Queue Overflow 또는 Communication Error 로 인해 잃었다. (Overlayed Error 로 다른 Error Code 와 같이 올 수 있다) RTE_E_UNCONNECTED: Receiver Port 가 Sender Port 와 연결되어 있지 않다. RTE_E_IN_EXCLUSIVE_AREA: (Blocking API only) ExclusiveArea 사용으로 인하여 Blocking API를 사용할수 없다.		



Description	Initiate an "explicit" sender-receiver transmission of data elements with "data" semantic (swImplPolicy equal to 'queued').
Preconditions	Rte_Start API needs to be called before Rte_Receive is called.
Configuration Dependency	Rte_Receive API shall be generated if a VariableAccess in the dataReceivePointByArgument role references a required VariableDataPrototype with 'event' semantics
Optional Parameter Configuration Dependency	The optional OUT parameter transformerError of the API shall be generated if PortPrototype of port is referenced by a PortAPIOption which has the attribute errorHandling set to transformerErrorHandling.

6.3.1.28 Rte_SwitchAck

Function Name	Rte_SwitchAck				
Syntax:	Std_ReturnType Rte_SwitchAck_\(\p\)_\(\o)\([IN Rte_Instance \(\c)\) Where \(\p\) is the port name and \(\o\) the ModeDeclarationGroupPrototype within the ModeSwitchInterface categorizing the port				
Service ID	0x18				
Sync/Async	NA				
Reentrancy	NA				
Parameters (In)	⟨instance⟩	SW-C	SW-C instance		
Parameters (Inout)	NA	NA			
Parameters (Out)	NA	NA			
Return Value	Std_ReturnType		RTE_E_NO_DATA RTE_E_TRANSMIT_ACK RTE_E_TIMEOUT RTE_E_UNCONNECTED RTE_E_IN_EXCLUSIVE_AREA		
Description	The Rte_SwitchAck API takes no parameters other than the instance handle – the return value is used to indicate the acknowledgement status to the caller				
Preconditions	called.	Rte_Start API needs to be called before Rte_SwitchAck is called.			
Configuration Dependency	A blocking Rte_SwitchAck API shall be generated for a provided ModeDeclarationGroupPrototype if acknowledgementis enabled and a WaitPoint references a ModeSwitchedAckEvent that in turn references the				



ModeDeclarationGroupPrototype

6.3.1.29 Rte_Prm

Function Name	Rte_Prm	Rte_Prm		
Syntax:	<pre>⟨return⟩ Rte_Prm_⟨p⟩_⟨o⟩([IN Rte_Instance ⟨instance⟩]) Where ⟨p⟩ is the port name and ⟨o⟩ is the name of the ParameterDataPrototype within the ParameterInterface categorizing the port</pre>			
Service ID	0x20			
Sync/Async	NA	NA		
Reentrancy	NA			
Parameters (In)	⟨instance⟩	nce> SW-C instance		
Parameters (Inout)	NA			
Parameters (Out)	NA			
Return Value	⟨return⟩		NA	
Description	The Rte_Prm API provides access to the defined parameter within a ParameterSwComponentType			
Preconditions	Rte_Start API needs to be called before Rte_Prm is called.			
Configuration Dependency	A Rte_Prm API shall be generated if a ParameterAccess references a ParameterDataPrototype in a require PortPrototype			

6.3.1.30 Rte_CData

Function Name	Rte_CData
Syntax:	<pre>⟨return⟩ Rte_CData_⟨name⟩([IN Rte_Instance ⟨instance⟩]) Where ⟨name⟩ is the calibration parameter name</pre>
Service ID	0x1F



	1			
Sync/Async	NA			
Reentrancy	NA			
Parameters (In)	⟨instance⟩	SW-C instance		
Parameters (Inout)	NA			
Parameters (Out)	NA			
Return Value	⟨return⟩	NA		
Description	The Rte_CData API provides access to the defined calibration parameter Within a software-component. The actual data values for a software-component instance may be set after component compilation.			
Preconditions	Rte_Start API needs to be called before Rte_CData is called.			
Configuration Dependency	An Rte_CData API shall be created for each defined ParameterDataPrototype in the role perInstanceParameter or sharedParameter within an AUTOSAR softwarecomponent.			

6.3.1.31 Rte_Send

Function Name	Rte_Send			
Syntax:	Std_ReturnType Rte_Send_\langle \rangle \rangle \langle \langle \rangle \langle \rangle \rangl			
Service ID	within the send 0x13	within the sender-receiver interface categorizing the port 0x13		
Sync/Async	NA	NA		
Reentrancy	NA	NA		
	⟨instance⟩	⟨instance⟩ SW-C instance		
Parameters (In)	⟨data⟩ data element to sent			
	⟨length⟩ number of elements in the data element			
Parameters (Inout)	NA	NA		
Parameters (Out)	NA			



Return Value	Std_ReturnType	RTE_E_OK: API 호출이 정상적으로 완료되었다. RTE_E_COM_STOPPED: COM Service 의 사용 불가로 인해 Operation 실행이 불가능하다. RTE_E_LIMIT: (Intra Ecu Communication Only) Full Queue 로 인하여 DataElement 를 전송 할 수 없다. RTE_E_SEG_FAULT: 파라미터로 받은 메모리 주소가 API 를호 출하는 파티션에서 접근 가능한 주소가 아니다.	
Description	Initiates a sender-receiver communication where the transmission occurs at the point the API call is made transmission		
Preconditions	Rte_Start API needs to be called before Rte_Send is called.		
Configuration Dependency	The Rte_Send APIs may only be used by the runnable that contains the corresponding VariableAccess in the dataSendPoint role		
Optional Parameter Configuration Dependency	The optional OUT parameter transformerError of the API shall be generated if PortPrototype of port is referenced by a PortAPIOption which has the attribute errorHandling set to transformerErrorHandling.		

6.3.1.32 Enhanced Rte_Mode

Function Name	Enhanced Rte_Mode			
Syntax:	<pre> ⟨return⟩ Rte_Mode_⟨p⟩_⟨o⟩([IN Rte_Instance ⟨instance⟩,] OUT ⟨previousmode⟩, OUT ⟨nextmode⟩) Where ⟨p⟩ is the port name, and ⟨o⟩ the ModeDeclarationGroup- Prototype name within the ModeSwitchInterface categorizing the Port. </pre>			
Service ID	0x2C			
Sync/Async	NA			
Reentrancy	NA			
Parameters (In)	⟨instance⟩ SW-C instance			
Parameters (Inout)	NA			
Parameters (Out)	⟨previousmode⟩			



	⟨nextmode⟩		
Return Value	RTE_TRANSITION_ 〈ModeDeclarationGroup〉		NA
Description	Provides the currently active mode of a mode switch port and also the mode currently being left and the mode being entered.		
Preconditions	Rte_Start API needs to be called before Enhanced Rte_Mode is called.		
Configuration Dependency	The existence of a ModeAccessPoint given that the attribute enhancedModeApi of the ModeSwitchReceiverComSpec is set to true shall result in the generation of Enhanced Rte_Mode API.		

6.3.2 RTE Call-backs

6.3.2.1 Rte_COMCbkTAck_<Signal>

Function Name	Rte_COMCbk_〈Signal〉
Syntax:	void Rte_COMCbk_(sn)(void)
	Where ⟨sn⟩ is a COM signal name.
Service ID	0x95
Sync/Async	NA
Reentrancy	NA
Parameters (In)	NA
Parameters (Inout)	NA
Parameters (Out)	NA
Return Value	None
Description	This callback function indicates that the signal of the primitive data item/event is ready for reception.
Preconditions	NA



Configuration Dependency	Configured in COM: ComNotification as part of ComSignal.
-----------------------------	--

6.3.2.2 Rte_COMCbkTAck_<Signal>

Function Name	Rte_COMCbkTAck_ <signal></signal>
Syntax:	void Rte_COMCbkTAck_{sn}(void) Where {sn} is a COM signal name and "TAck" is literal text indicating transmission acknowledgment.
Service ID	0x90
Sync/Async	NA
Reentrancy	NA
Parameters (In)	NA
Parameters (Inout)	NA
Parameters (Out)	NA
Return Value	None
Description	This callback function indicates that the signal of the primitive data item/event is already handed over by COM to the PDU router.
Preconditions	NA
Configuration Dependency	Configured in COM: ComNotification as part of ComSignal

6.3.2.3 Rte_COMCbkTErr_<Signal>

Function Name	Rte_COMCbkTErr_ <signal></signal>
Syntax:	void Rte_COMCbkTErr_{sn}(void) Where \sn\ is a COM signal name and "TErr" is literal text indicating transmission error.
Service ID	0x91
Sync/Async	NA



Reentrancy	NA
Parameters (In)	NA
Parameters (Inout)	NA
Parameters (Out)	NA
Return Value	None
Description	This callback function indicates that an error occurred when the signal of the primitive data item/event was handed over by COM to the PDU router.
Preconditions	NA
Configuration Dependency	Configured in COM: Com-ErrorNotification as part of ComSignal.

6.3.2.4 Rte_COMCbkInv_<Signal>

Function Name	Rte_COMCbkTErr_〈Signal〉
Syntax:	void Rte_COMCbkInv_\(sn\)(void) Where \(sn\) is a COM signal name and "Inv" is literal text indicating signal invalidation.
Service ID	0x92
Sync/Async	NA
Reentrancy	NA
Parameters (In)	NA
Parameters (Inout)	NA
Parameters (Out)	NA
Return Value	None
Description	This callback function indicates that COM has received a signal and passed it as "invalid".



Preconditions	NA
Configuration Dependency	Configured in Com: Com-InvalidNotification as part of ComSignal.

6.3.2.5 Rte_COMCbkRxTOut_<Signal>

Function Name	Rte_COMCbkRxTOut_〈Signal〉
Syntax:	void Rte_COMCbkRxTOut_{sn}(void) Where \sn\ is a COM signal name and "RxTOut" is literal text indicating reception signal time out.
Service ID	0x93
Sync/Async	NA
Reentrancy	NA
Parameters (In)	NA
Parameters (Inout)	NA
Parameters (Out)	NA
Return Value	None
Description	This callback function indicates that the aliveTimeout after the last successful reception of the signal of the primitive data item/event has expired (data element outdated).
Preconditions	NA
Configuration Dependency	Configured in Com: Com-TimeoutNotification as part of ComSignal.

6.3.2.6 Rte_COMCbkTxTOut_<Signal>

Function Name	Rte_COMCbkTxTOut_ <signal></signal>
Syntax:	void Rte_COMCbkTxTOut_{sn}(void) Where {sn} is a COM signal name and "TxTOut" is literal text indicating transmission failure and time out.
Service ID	0x94



Sync/Async	NA
Reentrancy	NA
Parameters (In)	NA
Parameters (Inout)	NA
Parameters (Out)	NA
Return Value	None
Description	This callback function indicates that the timeout of TransmissionAcknowledgementRequest for sending the signal of the primitive data item/event has expired.
Preconditions	NA
Configuration Dependency	Configured in Com: Com-TimeoutNotification as part of ComSignal.

6.3.2.7 Rte_COMCbk_<SignalGroup>

Function Name	Rte_COMCbk_〈SignalGroup〉
Syntax:	void Rte_COMCbk_\(\sig\)(void) Where \(\sig\) is the name of the COM signal group, which contains all the signals of the composite data item/event or an operation.
Service ID	0x94
Sync/Async	NA
Reentrancy	NA
Parameters (In)	NA
Parameters (Inout)	NA
Parameters (Out)	NA
Return Value	None



Description	This callback function indicates that the signals of the composite data item/event or the arguments of an operation are ready for reception.
Preconditions	NA
Configuration Dependency	Configured in Com: ComNotification as part of ComSignalGroup.

6.3.2.8 Rte_COMCbkTAck_<SignalGroup>

Function Name	Rte_COMCbkTAck_ <signalgroup></signalgroup>
Syntax:	void Rte_COMCbkTAck_{sg}(void) Where \(sg \) is COM signal group name and "TAck" is literal text indicating transmission acknowledgment.
Service ID	0x96
Sync/Async	NA
Reentrancy	NA
Parameters (In)	NA
Parameters (Inout)	NA
Parameters (Out)	NA
Return Value	None
Description	This callback function indicates that the signal of the composite data item/event is already handed over by COM to the PDU router.
Preconditions	NA
Configuration Dependency	Configured in Com: ComNotification as part of ComSignalGroup.

6.3.2.9 Rte_COMCbkTErr_<SignalGroup>

Function Name	Rte_COMCbkTErr_{SignalGroup}
---------------	------------------------------



Syntax:	void Rte_COMCbkTErr_{sg}(void) Where {sg} is COM signal group name and "TErr" is literal text indicating transmission error.
Service ID	0x97
Sync/Async	NA
Reentrancy	NA
Parameters (In)	NA
Parameters (Inout)	NA
Parameters (Out)	NA
Return Value	None
Description	This callback function indicates that an error occurred when the signal of the composite data item/event was handed over by COM to the PDU router.
Preconditions	NA
Configuration Dependency	Configured in Com: Com-ErrorNotification as part of ComSignalGroup.

6.3.2.10 Rte_COMCbkInv_\SignalGroup\

Function Name	Rte_COMCbkInv_〈SignalGroup〉
Syntax:	void Rte_COMCbkInv_{sg}(void) Where {sg} is COM signal group name and "Inv" is literal text indicating signal group invalidation.
Service ID	0x98
Sync/Async	NA
Reentrancy	NA
Parameters (In)	NA
Parameters (Inout)	NA
Parameters (Out)	NA

Return Value	None
Description	This callback function indicates that COM has received a signal group and parsed it as "invalid".
Preconditions	NA
Configuration Dependency	Configured in Com: Com-InvalidNotification as part of ComSignalGroup.

6.3.2.11 Rte_COMCbkRxTOut_<SignalGroup>

Function Name	Rte_COMCbkRxTOut_{SignalGroup}
Syntax:	void Rte_COMCbkRxTOut_ <sg>(void) Where <sg> is COM signal group name and "RxTOut" is literal text indicating reception signal time out.</sg></sg>
Service ID	0x99
Sync/Async	NA
Reentrancy	NA
Parameters (In)	NA
Parameters (Inout)	NA
Parameters (Out)	NA
Return Value	None
Description	This callback function indicates that the aliveTimeout after the last successful reception of the signal group carrying the composite data item has expired (data element outdated).
Preconditions	NA
Configuration Dependency	Configured in Com: Com-TimeoutNotification as part of ComSignalGroup.



6.3.2.12 Rte_COMCbkTxTOut_<SignalGroup>

Function Name	Rte_COMCbkTxTOut_ <signalgroup></signalgroup>
Syntax:	void Rte_COMCbkTxTOut_{sg}(void) Where {sg} is COM signal group name and "TxTOut" is literal text indicating transmission failure and timeout.
Service ID	0x9A
Sync/Async	NA
Reentrancy	NA
Parameters (In)	NA
Parameters (Inout)	NA
Parameters (Out)	NA
Return Value	None
Description	This callback function indicates that the timeout of TransmissionAcknowledgementRequest for sending the signal group of the composite data item/event has expired.
Preconditions	NA
Configuration Dependency	Configured in Com: Com-TimeoutNotification as part of ComSignalGroup.

6.3.3 BSW Scheduler APIs

6.3.3.1 SchM_Init

Function Name	SchM_Init
Syntax:	void SchM_Init(SchM_ConfigType * ConfigPtr) Where ConfigPtr is the Pointer to selected Post build Configuration.
Service ID	0x00
Sync/Async	NA
Reentrancy	NA
Parameters (In)	⟨ConfigPtr⟩



Parameters (Inout)	None
Parameters (Out)	None
Return Value	None
Description	SchM_Init is intended to allocate and initialize system resources used by the Basic Software Scheduler part of the RTE for the core on which it is called. After initialization the scheduling of BswSchedulableEntitys is enabled.
Preconditions	AUTOSAR Com, OS and Memory Services should be finalized.
Configuration Dependency	Variant Handling: If post build data set configuration is present, then SchM_Init will have the input parameter 'ConfigPtr' else void will be the input.

6.3.3.2 SchM_Deinit

Function Name	SchM_Deinit
Syntax:	void SchM_Deinit(void)
Service ID	0x01
Sync/Async	NA
Reentrancy	NA
Parameters (In)	None
Parameters (Inout)	None
Parameters (Out)	None
Return Value	None
Description	SchM_Deinit is used to finalize Basic Software Scheduler part of the RTE of the core on which it is called. This service releases all system resources allocated by the Basic Software Scheduler part on that core.
Preconditions	None



Configuration Dependency	API may only be used after the RTE finalized i.e., after termination of the Rte_Stop.
Dependency	termination of the kte_stop.

6.3.3.3 SchM_Enter

Function Name	SchM_Enter
	void SchM_Enter_ <bsnp>[_<vi>j_<ai>]_<name>()</name></ai></vi></bsnp>
	Where 〈bsnp〉 is the BSW Scheduler Name Prefix of the calling BSW module derived from the
Syntax:	BswModuleDescriptions short name, \(\vi \rangle \) is the vendorId of the calling BSW module, \(\ai \rangle \) vendorApilnfix of the calling BSW module and \(\aname \rangle \) name is the exclusive area name. The sub part in squared brackets [_\(\vi \rangle \rangle \) ai\rangle] is omitted if no vendorApilnfix is defined for the Basic Software Module.
Service ID	0x03
Sync/Async	NA
Reentrancy	NA
Parameters (In)	None
Parameters (Inout)	None
Parameters (Out)	None
Return Value	None
Description	The SchM_Enter API call is invoked by an AUTOSAR BSW module to define the start of an exclusive area.
Preconditions	SchM_Init API needs to be called before SchM_Enter is called.
	This API is created for each ExclusiveArea that is declared in the BswBehavior and which has a CanEnterExclusiveArea association.
Configuration Dependency	Variant Handling: if variation point is configured, API will be generated depending on the variation point condition by formula. Note: For post build configuration API may be generated, which is inactive due to the evaluated condition by formula resulting to FALSE.



6.3.3.4 SchM_Exit

Function Name	SchM_Exit		
Syntax:	Void SchM_Exit_\langle bsnp\[-\langle vi\rangle_\langle ai\rangle]_\langle name\(\rangle\) Where \langle bsnp\rangle is the BSW Scheduler Name Prefix of the calling BSW module derived from the BswModuleDescriptions short name, \langle vi\rangle is the vendorId of the calling BSW module, \langle ai\rangle vendorApilnfix of the calling BSW module and \langle name is the exclusive area name. The sub part in squared brackets [_\langle vi\rangle_\langle ai\rangle] is omitted if no vendorApilnfix is defined for the Basic Software Module.		
Service ID	0x04		
Sync/Async	NA		
Reentrancy	NA		
Parameters (In)	NA		
Parameters (Inout)	None		
Parameters (Out)	None		
Return Value	None		
Description	The SchM_Exit API call is invoked by an AUTOSAR BSW module to define the end of an exclusive area.		
Preconditions	Schm_Init and SchM_Enter API needs to be called before SchM_Exit is called.		
Configuration Dependency	This API is created for each ExclusiveArea that is declared in the BswBehavior and which has a CanEnterExclusiveArea association. Variant Handling: if variation point is configured, API will be generated depending on the variation point condition by formula. Note: For post build configuration API may be generated, which is inactive due to the evaluated condition by formula resulting to FALSE.		



6.3.3.5 SchM_Mode

Function Name	SchM_Mode		
Syntax:	SchM_Mode_\langle bsnp\[_\langle vi_\ai\]_\langle name\(\rangle\) Where \langle bsnp\rangle is the BSW Scheduler Name Prefix of the calling BSW module derived from the BswModuleDescriptions short name, \langle vi\rangle is the vendorld of the calling BSW module, \langle ai\rangle vendorApilnfix of the calling BSW module and \langle name \rangle name is the mode group.		
Service ID	0x07		
Sync/Async	NA		
Reentrancy	NA		
Parameters (In)	NA		
Parameters (Inout)	None		
Parameters (Out)	None		
Return Value	Rte_ModeType_ <m> NA</m>		
Description	Provides the currently active mode of a required (requiredModeGroup) ModeDeclarationGroupPrototype.		
Preconditions	SchM_Init API needs to be called before SchM_Mode is called.		
Configuration Dependency	The existence of an accessedModeGroup association to a providedModeGroup or requiredModeGroup ModeDeclarationGroupPrototype will result in the generation of a SchM_Mode API.		

6.3.3.6 SchM_Switch

Function Name	SchM_Switch
Syntax:	Std_ReturnType SchM_Switch_\langle\bsnp\[_\langle\vi\zero_\langle\alpha\rangle\] (IN Rte_ModeType_\langle M\rangle\langle\ mode\rangle\) Where \langle\bsnp\rangle\ is the BSW Scheduler Name Prefix of the calling BSW module derived from the BswModuleDescriptions short name, \langle\vi\rangle\ is the vendorId of the calling BSW module, \langle\ai\rangle\ vendorApiInfix\ of the calling



	BSW module and <name> name is the mode group.</name>			
Service ID	0x06	0x06		
Sync/Async	NA			
Reentrancy	NA			
Parameters (In)	⟨mode⟩	⟨mode⟩		
Parameters (Inout)	None	None		
Parameters (Out)	None	None		
Return Value	Std_ReturnT	-ype	SCHM_E_OK SCHM_E_LIMIT	
Description		Initiate a mode switch. The SchM_Switch API call is used for sending a mode switch notification by a Basic Software Module.		
Preconditions	SchM_Init A called.	SchM_Init API needs to be called before SchM_Switch is called.		
Configuration Dependency	providedMo	The existence of a managedModeGroup association to a providedModeGroup ModeDeclarationGroupPrototype will result in the generation of a SchM_Switch API.		

6.3.3.7 SchM_Trigger

Function Name	SchM_Trigger		
Syntax:	without queuing support: void SchM_Trigger_〈bsnp〉[_〈vi〉_〈ai〉]_〈name〉() with queuing support: Std_ReturnType SchM_Trigger_〈bsnp〉[_〈vi〉_〈ai〉]_〈name〉() 〈bsnp〉 BSW Scheduler Name Prefix 이름. 설정되어 있지 않은 경우 BswModuleDescription 이름. 〈vi〉 호출하는 BSW module 의 Vendorld 값 〈ai〉 호출하는 BSW module 의 vendorApilnfix 값 〈Name〉 ReleasedTrigger 이름		
Service ID	0x09		
Sync/Async	NA		
Reentrancy	NA		



Parameters (In)	NA			
Parameters (Inout)	None	None		
Parameters (Out)	None	None		
Return Value	with queuing support: Std_ReturnType	with queuing support: RTE_E_OK : API 호출이 정상적으로 완료 with queuing support: RTE_E_LIMIT : Queued 방식에서 큐가 가득 참		
Description	외부 BswModuleDescription 의 BswSchedulableEntity(들)을 호출하는 함수이다.			
Preconditions	SchM_Trigger 호출 전 SchM_Init API 의 호출이 완료되어야 한다.			
Configuration Dependency	Source 단의 IssuedTrigger 가 ReleasedTrigger 를 참조하고, Sink 단의 IssuedTrigger 가 RequiredTrigger 를 참조하며, BswExternalTriggerConfig에서 ReleasedTrigger 를 참조하고, BswRequiredTriggerConnection에서 두 Trigger 를 맵핑시킬 때 SchM_Trigger API가 생성된다.			

6.3.3.8 Enhanced SchM_Mode

Function Name	Enhanced SchM_Mode		
Syntax:	<pre><return> SchM_Mode_{bsnp}[_{vi}_{ai}]_{name}(OUT{previousmode},OUT {nextmode}) {bsnp} is the BSW Scheduler Name Prefix {vi} is the vendorld of the calling BSW module, {ai} vendorApilnfix of the calling BSW module and {name} is the required (requiredModeGroup) ModeDeclarationGroupPrototype name.</return></pre>		
Service ID	0x07		
Sync/Async	NA		
Reentrancy	NA		
Parameters (In)	NA		
Parameters (Inout)	None		
Parameters	<pre><pre><pre></pre></pre></pre>		
(Out)	<nextmode></nextmode>		



-			
Return Value	Rte_ModeType_ <m></m>	NA	
Description	Provides the currently active mode of a mode switch port and also the mode currently being left and the mode being entered.		
Preconditions	SchM_Init API needs to be called before Enhanced SchM_Mode is called.		
Configuration Dependency	accessedModeGroup association to a providedModeGroup or requiredModeGroup ModeDeclarationGroupPrototype given that the attribute enhancedModeApi of the BswModeSenderPolicy set to true shall result in the generation of an Enhanced SchM_Mode API		

6.3.3.9 SchM_ActMainFunction

Function Name	SchM_ActMainFunction		
Syntax:	without queuing support: void SchM_ActMainFunction_〈bsnp〉[_〈vi〉_〈ai〉]_〈name〉() with queuing support: Std_ReturnType SchM_ActMainFunction_〈bsnp〉[_〈vi〉_〈ai〉]_〈name〉() Where here 〈bsnp〉 is the BSW Scheduler Name Prefix, 〈vi〉 is the vendorld of the calling BSW module, 〈ai〉 vendorApilnfix of the calling BSW module and 〈name〉 is the associated BswInternalTriggeringPoint short name. 〈bsnp〉 BSW Scheduler Name Prefix 이름. 설정되어 있지 않은 경우 BswModuleDescription 이름. 〈vi〉 호출하는 BSW module 의 Vendorld 값 〈ai〉 호출하는 BSW module 의 vendorApilnfix 값		
Service ID	0x05		
Sync/Async	NA		
Reentrancy	NA		
Parameters (In)	NA		
Parameters (Inout)	None		
Parameters (Out)	None		



		1	
	with queuing	with queuing support: RTE_E_OK	
Return Value		: API 호출이 정상적으로 완료	
Retuill value	support: Std_ReturnType	with queuing support:	
	Std_Ketomiype	RTE_E_LIMIT	
		: Queued 방식에서 큐가 가득 참	
Description	BswModuleDescription 내부에서 다른 BswSchedulableEntity (들)을 호출하는 함수이다.		
Preconditions	SchM_ActMainFunction 호출 전 SchM_Init API 의 호출이 완료 되어야 한다.		
	ActivationPoint 가 I	nternalTriggeringPoint 를 참조하고,	
Coofiguration	BswInternalTriggerOccurredEvent 가 InternalTriggeringPoint		
Configuration Dependency	를 참조하며 BswInternalTriggerConfig 에서		
	InternalTriggeringPoint 를 참조할 때,		
	SchM_ActMainFunction API 가 생성된다.		

6.3.3.10 SchM_SwitchAck

Function Name	SchM_SwitchAck	SchM_SwitchAck		
Syntax:	<pre></pre>	Std_ReturnType SchM_SwitchAck_\langle bsnp\[_\langle vi_\ai\rangle _\langle name\rangle () \langle bsnp\rangle is the BSW Scheduler Name Prefix, \langle vi\rangle is the vendorld of the calling BSW module, \langle ai\rangle vendorApilnfix of the calling BSW module and \langle name\rangle is the required (requiredModeGroup) ModeDeclarationGroupPrototype name.		
Service ID	0x08	0x08		
Sync/Async	NA	NA		
Reentrancy	NA	NA		
Parameters (In)	NA			
Parameters (Inout)	None			
Parameters (Out)	None	None		
Return Value	Std_ReturnType	SCHM_E_NO_DATA SCHM_E_TRANSMIT_ACK SCHM_E_TIMEOUT		
Description	The SchM_SwitchAck API takes no parameters — the return value is used to indicate the acknowledgement status to the caller.			



Preconditions	SchM_Init API needs to be called before SchM_SwitchAck is called.	
Configuration Dependency	Acknowledgement is enabled for a provided (providedModeGroup) ModeDeclarationGroupPrototype by the presence of an ackRequest attribute of the BswModeSender-Policy	

6.3.3.11 Schm_CData

Function Name	Schm_CData	
Syntax:	void Schm_CData_\langle bsnp\[_\langle vi\rangle_\langle ai\rangle]_\langle name\()\) Where here \langle bsnp\rangle is the BSW Scheduler Name Prefix, \langle vi\rangle is the vendorld of the calling BSW module, \langle ai\rangle vendorApilnfix of the calling BSW module and \langle Name\rangle is the shortName of the ParameterDataPrototype.	
Service ID	NA	
Sync/Async	NA	
Reentrancy	NA	
Parameters (In)	NA	
Parameters (Inout)	None	
Parameters (Out)	None	
Return Value	Implementation Data Type	NA
Description	The Schm_CData API provides access to the defined calibration parameter Within a Basic Software Module. The actual data values for A Basic Software Module instance may be set after component compilation.	
Preconditions	SchM_Init API needs to be called before Schm_CData is called.	
Configuration Dependency	An Schm_CData API shall be created for each defined ParameterDataPrototype in the role perInstanceParameter	

6.3.4 E2E APIs



6.3.4.1 Single channel wrapper routines

6.3.4.1.1 E2EPW_Write

Function Name	E2EPW_Write		
Syntax:	uint32 E2EPW_Write_{p}_{o}(Rte_Instance {instance}, {data}) Where {p} is the port name and {o} the VariableDataPrototype name.		
Service ID	NA		
Sync/Async	Synchronous		
Reentrancy	Non Reentrant	t	
Parameters (In)	⟨instance⟩	SW-C i	nstance
Parameters (Inout)	⟨data⟩	Data to	be protected and sent
Parameters (Out)	NA		
Return Value	uint32		The byte O(lowest byte) is the status of Rte_Write function: RTE_E_COM_STOPPED RTE_E_SEG_FAULT The byte 1 is the status of runtime checks done within E2E Protection Wrapper function: E2E_E_INPUTERR_NULL E2E_E_INTERR E2E_E_OK E2E_E_INVALID The byte 2 is the return value of E2E_PXXProtect function: E2E_E_INPUTERR_NULL E2E_E_INPUTERR_NULL E2E_E_INPUTERR_WRONG E2E_E_INTERR E2E_E_OK E2E_E_INVALID RTE_E_OK The byte 3 is a placeholder for future use and takes the following values: E2E_E_OK E2E_E_OK E2E_E_OK



Description	Initiates a safe explicit sender-receiver transmission of a safety-related data Element with data semantic. It protects data with E2E Library function E2E_PXXProtect and then it calls the corresponding Rte_Write function.
Preconditions	E2EPW_WriteInit needs to be called before E2EPW_Write.
Configuration Dependency	This Api will be generated if USES-END-TO-END-PROTECTION is set to true in the PROVIDED-COM-SPEC of corresponding P-PORT-PROTOTYPE and END-TO-END profile should be configured for this P-PORT-PROTOTYPE and VARIABLE-DATA-PROTOTYPE.

6.3.4.1.2 E2EPW_Read

Function Name	E2EPW_Read	
Syntax:	uint32 E2EPW_Read_\(\rho\)_\(\lambda\)\(\lambda\tau\)\\ \text{VariableDataPrototype name.}	
Service ID	NA	
Sync/Async	Synchronous	
Reentrancy	Non Reentrar	nt
Parameters (In)	⟨instance⟩	SW-C instance
Parameters (Inout)	NA	
Parameters (Out)	⟨data⟩ Data to received	
Return Value	uint32	The byte 0(lowest byte) is the status of Rte_Read function: RTE_E_INVALID RTE_E_MAX_AGE_EXCEEDED RTE_E_NEVER_RECEIVED RTE_E_UNCONNECTED RTE_E_OK The byte 1 is the status of runtime checks done within E2E Protection Wrapper function, plus including bit extension checks: E2E_E_INPUTERR_NULL E2E_E_INPUTERR_WRONG E2EPW_E_DESERIALIZATION E2E_E_INTERR E2E_E_OK E2E_E_INVALID



	The byte 2 is the return value of E2E_PXXProtect function: E2E_E_INPUTERR_NULL E2E_E_INPUTERR_WRONG E2E_E_INTERR E2E_E_OK E2E_E_INVALID RTE_E_OK The byte 3 is the value of E2E_PXXReceiverStatusType Enumeration, representing the result of the verification of the Data in E2E Profile XX, determines by the Check function. E2EPXXSTATUS_NONEWDATA E2EPXXSTATUS_WRONGCRC E2EPXXSTATUS_INITIAL E2EPXXSTATUS_REPEATED E2EPXXSTATUS_OKSOMELOST E2EPXXSTATUS_OK	
	E2EPXXSTATUS_WRONGSEQUENCE E2E_E_INVALID	
Description	Performs safe explicit sender-receiver transmission of a safety-related communication data element with data semantic. The function calls optionally the corresponding function RTE_IsUpdated, Then it calls corresponding function Rte_Read and then checks received data with E2E_PXXCheck.	
Preconditions	E2EPW_ReadInit needs to be called before E2EPW_Read.	
Configuration Dependency	This Api will be generated if USES-END-TO-END-PROTECTION is set to true in the REQUESTED-COM-SPEC of corresponding R-PORT-PROTOTYPE and END-TO-END profile should be configured for this R-PORT-PROTOTYPE and VARIABLE-DATA-PROTOTYPE.	

6.3.4.1.3 E2EPW_WriteInit

Function Name	E2EPW_WriteInit		
Syntax:	uint8 E2EPW_WriteInit <o>(Rte_Instance <instance>) Where is the port name and <o> the VariableDataPrototype name.</o></instance></o>		
Service ID	0x15		
Sync/Async	Synchronous		



Reentrancy	Non Reentrant		
Parameters (In)	⟨instance⟩	⟨instance⟩ SW-C instance	
Parameters (Inout)	NA		
Parameters (Out)	NA		
Return Value	uint8		E2E_E_INTERR E2E_E_OK
Description	The function reinitializes the corresponding data structure after a detected error or at start up.		
Preconditions	Rte_Start API needs to be called before E2E_WriteInit is called.		
Configuration Dependency	This Api will be generated if USES-END-TO-END-PROTECTION is set to true in the PROVIDED-COM-SPEC of corresponding P-PORT-PROTOTYPE and END-TO-END profile should be configured for this P-PORT-PROTOTYPE and VARIABLE-DATA-PROTOTYPE.		

6.3.4.1.4 E2EPW_ReadInit

Function Name	E2EPW_WriteInit			
Syntax:	uint8 E2EPW_ReadInit_ $\langle p \rangle_{\langle o \rangle}$ (Rte_Instance $\langle instance \rangle$) Where $\langle p \rangle$ is the port name and $\langle o \rangle$ the VariableDataPrototype name.			
Service ID	0x16	0x16		
Sync/Async	Synchronous			
Reentrancy	Non Reentrant			
Parameters (In)	⟨instance⟩ SW-C instance			
Parameters (Inout)	NA			
Parameters (Out)	NA			
Return Value	uint8		E2E_E_INTERR E2E_E_OK	



Description	The function reinitializes the corresponding data structure after a detected error or at start up.
Preconditions	Rte_Start API needs to be called before E2E_ReadInit is called.
Configuration Dependency	This Api will be generated if USES-END-TO-END-PROTECTION is set to true in the REQUESTED-COM-SPEC of corresponding R-PORT-PROTOTYPE and END-TO-END profile should be configured for this R-PORT-PROTOTYPE and VARIABLE-DATA-PROTOTYPE.

6.3.4.2 Redundant wrapper routines

6.3.4.2.1 E2EPW_Write1

Function Name	E2EPW_WriteInit	
Syntax:	uint32 E2EPW_Write1_\langle p \langle \langle \langle Rte_Instance \langle instance \rangle, \langle data \rangle \rangle Where \langle p \rangle is the port name and \langle o \rangle the VariableDataPrototype name.	
Service ID	NA	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (In)	⟨instance⟩ SW-C instance	
Parameters (Inout)	⟨data⟩ Data to be protected and sent	
Parameters (Out)	NA	
Return Value	uint32	The byte O(lowest byte) is equal to E2E_E_OK (because Rte_Write is not invoked) The byte 1 is the status of runtime checks done within E2E Protection Wrapper function: E2E_E_INPUTERR_NULL E2E_E_INPUTERR_WRONG E2E_E_INTERR E2E_E_OK E2E_E_INVALID The byte 2 is the return value of E2E_PXXProtect function: E2E_E_INPUTERR_NULL



Configuration Dependency	This Api will be generated if USES-END-TO-END-PROTECTION is set to true in the PROVIDED-COM-SPEC of corresponding P-PORT-PROTOTYPE and END-TO-END profile should be configured for this P-PORT-PROTOTYPE and VARIABLE-DATA-PROTOTYPE.	
Preconditions	E2EPW_WriteInit needs to be called before E2EPW_Write1.	
Description	It protects data with E2E Library function E2E_PXXProtect. It does not call the corresponding Rte_Write function.	
	E: E: E: R: TI U: E:	22E_E_INPUTERR_WRONG 22E_E_INTERR 22E_E_OK 22E_E_INVALID 2TE_E_OK

6.3.4.2.2 E2EPW_Write2

Function Name	E2EPW_Write2	
Syntax:	uint32 E2EPW_Write2_\(\rho\)_\(\lambda\)\(\lambda\)\(Where \(\rho\)\) is the port name and \(\lambda\)\the VariableDataPrototype name.	
Service ID	NA	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (In)	⟨instance⟩ SW-C instance	
Parameters (Inout)	⟨data⟩ Data to be protected and sent	
Parameters (Out)	NA	
Return Value	uint32	The byte 0(lowest byte) is the status of Rte_Write function: RTE_E_COM_STOPPED RTE_E_SEG_FAULT RTE_E_OK The byte 1 is the status of runtime Protects done within E2E Protection



	Wrapper function: E2E_E_INPUTERR_NULL		
	E2E_E_INPUTERR_WRONG		
	E2E_E_INTERR		
	E2E_E_OK		
	E2E_E_REDUNDANCY		
	The byte 2 is the return value of		
	E2E_PXXProtect function:		
	E2E_E_INPUTERR_NULL		
	E2E_E_INPUTERR_WRONG		
	E2E_E_INTERR		
	E2E_E_OK		
	E2E_E_INVALID		
	The byte 3 is a placeholder for future		
	use and takes the following values:		
	E2E_E_OK		
	E2E_E_INVALID		
	Initiates a safe explicit sender-receiver transmission of a		
	safety-related data element with data semantic. It protects		
Description	data with E2E Library function E2E_PXXProtect, compares		
	the computed control fields with ones computed by Write1,		
	and then it calls the corresponding Rte_Write function.		
Preconditions	E2EPW_WriteInit needs to be called before E2EPW_Write2.		
Configuration Dependency	This Api will be generated if USES-END-TO-END-		
	PROTECTION is set to true in the PROVIDED-COM-SPEC of		
	corresponding P-PORT-PROTOTYPE and END-TO-END		
	profile should be configured for this P-PORT-PROTOTYPE		
	and VARIABLE-DATA-PROTOTYPE.		

6.3.4.2.3 E2EPW_Read1

Function Name	E2EPW_Read1	
Syntax:	uint32 E2EPW_Read1_\(\rho\)_\(\lambda\)\(\lambda\)\(\lambda\)\(\lambda\) Where \(\rho\) is the port name and \(\lambda\)\the VariableDataPrototype name.	
Service ID	NA	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (In)	⟨instance⟩	SW-C instance
Parameters (Inout)	NA	



SHT/SHTS 109 / 203

Parameters (Out)	⟨data⟩	Data to received	
Return Value	uint32	The byte 0 (lowest byte) is the status of Rte_Read function: RTE_E_INVALID RTE_E_MAX_AGE_EXCEEDED RTE_E_NEVER_RECEIVED RTE_E_UNCONNECTED RTE_E_OK The byte 1 is the status of runtime checks done within E2E Protection Wrapper function: E2E_E_INPUTERR_NULL E2E_E_INTERR E2EPW_E_DESERIALIZATION E2E_E_OK E2E_E_INVALID The byte 2 is the return value of E2E_PXXCheck function: E2E_E_INPUTERR_NULL E2E_E_INPUTERR_NULL E2E_E_INPUTERR_WRONG E2E_E_INTERR E2E_E_OK E2E_E_INVALID The byte 3 is value of E2E_PXXReceiverStatusType Enumeration, representing the result of the verification of the Data in E2E Profile XX, determined by the check function. E2EPXXSTATUS_NONEWDATA E2EPXXSTATUS_OK	
Description	safety-rela semantic. T function R	Performs safe explicit sender-receiver transmission of a safety-related communication data element with data semantic. The function calls optionally the corresponding function RTE_IsUpdated, Then it calls corresponding function Rte_Read and then checks received data with	
Preconditions		adInit needs to be called before E2EPW_Read1.	



문서 번호 (DOC NO) SHT/SHTS 110 / 203

Configuration Dependency	This Api will be generated if USES-END-TO-END-PROTECTION is set to true in the REQUESTED-COM-SPEC of corresponding R-PORT-PROTOTYPE and END-TO-END profile should be configured for this R-PORT-PROTOTYPE and VARIABLE-DATA-PROTOTYPE.
-----------------------------	--

6.3.4.2.4 E2EPW_Read2

Function Name	E2EPW_Read2			
Syntax:	uint32 E2EPW_Read2_\langle p_\langle o\rangle (Rte_Instance\langle instance\rangle, \langle data\rangle) Where \langle p \rangle is the port name and \langle o \rangle the VariableDataPrototype name.			
Service ID	NA			
Sync/Async	Synchronous			
Reentrancy	Non Reentrant	:		
Parameters (In)	⟨instance⟩	SW-C instance		
Parameters (Inout)	NA			
Parameters (Out)	⟨data⟩	Data to received		
Return Value	uint32	The byte 0 (lowest byte) equal to RTE_E_OK (because Rte_Read is not invoked) The byte 1 is the status of runtime checks done within E2E Protection Wrapper function: E2E_E_INPUTERR_NULL E2E_E_INTERR E2EPW_E_DESERIALIZATION E2E_E_OK E2E_E_INVALID The byte 2 is the return value of E2E_PXXCheck function: E2E_E_INPUTERR_NULL E2E_E_INPUTERR_WRONG E2E_E_INTERR E2E_E_OK E2E_E_INTERR E2E_E_OK E2E_E_INVALID The byte 3 is value of E2E_PXXReceiverStatusType Enumeration, representing the result of the verification of the Data in E2E		



Description	Profile XX, determined by the check function. E2EPXXSTATUS_NONEWDATA E2EPXXSTATUS_WRONGCRC E2EPXXSTATUS_INITIAL E2EPXXSTATUS_REPEATED E2EPXXSTATUS_OK E2EPXXSTATUS_OKSOMELOST E2EPXXSTATUS_WRONGSEQUENCE E2E_E_INVALID The function re-checks the data received with corresponding function Read1 by means of execution of E2E_PXXCheck.		
Preconditions	E2EPW_ReadInit needs to be called before E2EPW_Read2.		
Configuration Dependency	This Api will be generated if USES-END-TO-END-PROTECTION is set to true in the REQUESTED-COM-SPEC of corresponding R-PORT-PROTOTYPE and END-TO-END profile should be configured for this R-PORT-PROTOTYPE and VARIABLE-DATA-PROTOTYPE.		

6.3.4.3 E2E COM CALLOUTS

6.3.4.3.1 IPDU_e2EProtect_<IPDU ID>

Function Name	IPDU_e2EProtect_ <ipdu id=""></ipdu>			
Syntax:	FUNC(Boolean, COM_APPL_CODE) IPDU_e2EProtect_ <ipdu id="">(PduIdType id, P2VAR (uint8, AUTOMATIC, COM_VAR_NOINIT) ipduData)</ipdu>			
Service ID	NA			
Sync/Async	Synchronous			
Reentrancy	Non Reentrant			
	⟨instance⟩	SW-C instance		
Parameters (In)	⟨IPDU ID⟩	Pdu Id		
	⟨ipduData⟩	Pdu Data		
Parameters (Inout)	NA			
Parameters (Out)	NA			
Return Value	Boolean		TRUE FALSE	



Description	Initiates a safe explicit sender-receiver transmission of a safety-related data Element with data semantic. It protects data with E2E Library function E2E_PXXProtect and then it calls the corresponding Rte_Write function.
Preconditions NA	
Configuration Dependency	This Api will be generated if END-TO-END-PROTECTION-I-SIGNAL-I-PDU is configured in PROVIDED-COM-SPEC.

6.3.4.3.2 IPDU_E2Echeck_<IPDU ID>

Function Name	IPDU_E2Echeck_〈IPDU ID〉		
Syntax:	FUNC(Boolean, COM_APPL_CODE) IPDU_e2ECheck_ <ipdu id="">(PduIdType id, P2CONST (uint8, AUTOMATIC, COM_VAR_NOINIT) ipduData)</ipdu>		
Service ID	NA		
Sync/Async	Synchronous		
Reentrancy	Non Reentrant	•	
	⟨instance⟩	SW-C	instance
Parameters (In)	⟨id⟩	Pdu ld	
	⟨ipduData⟩	Pdu Data	
Parameters (Inout)	NA		
Parameters (Out)	NA		
Return Value	Boolean		TRUE FALSE
Description	Initiates a safe explicit sender-receiver transmission of a safety-related data Element with data semantic. It protects data with E2E Library function E2E_PXXCheck and then it calls the corresponding Rte_Read function.		
Preconditions	NA NA		
Configuration Dependency	This Api will be generated if END-TO-END-PROTECTION-I-SIGNAL-I-PDU is configured in PROVIDED-COM-SPEC.		



7. Generator

7.1 Generator Option

Options	Description
-O/-Output	Output Directory 를 설정한다.
-I/-Input	Input Directory 를 설정한다.(하위 폴더를 포함한 Input Directory 의 모든 Arxml 을 Input 으로 처리한다.)
-L/-Log	Generation 과정에 대한 로그를 파일로 출력한다. (Rte.log)
-H/-Help	사용법에 대한 도움말을 화면에 출력한다.
-V/-Version	CopyRight 정보와 Tool Version 을 화면에 출력한다.
-GenMemMap	Application 의 MemMap Header 를 생성한다. ([ApplSWC]_MemMap.h)
-GenMemMapOption::Tasking	Tasking Compiler 를 위한 Rte_MemMap.h Header File 을 생성 한다.
-GenMemMapOption::Ghs	GreenHill Compiler 를 위한 Rte_MemMap.h Header File 을 생성한다.
-GenMemMapOption::GhsFreescale	GreenHill Compiler 를 위한 Rte_MemMap.h Header File 을 생성한다(Freescale OS 에서 제공하는 Os_memmap.h Header File 을 이용).
-StrictConfigChk	모든 Validation Check 를 생략한다.
-StrictUnconnRPortChk	Unconnected RPort 에 대한 Validation Check 를 생략한다.
-StrictInitValChk	InitialValue 에 대한 Validation Check 를 생략한다.
-INT	DataConversion 시에 Integer 값만을 사용한다.
-IOC	Inter Partition Communication 을 위한 loc Arxml 을 생성한다.
-IOC::GenEcudOs	Inter Partition Communication 을 위한 Osloc Configuration 을 기존의 Os Ecud Arxml 에 추가한 Gen_Ecud_Os.arxml 을 생 성한다.
-Validate	강화된 Validation Check 를 실행한다.
-OsSecPerTick=[OsSecondsPerTickValue]	OsSecondsPerTick 값을 모든 Counter에 적용한다.
-OsSecPerHwTick=[OsSecondsPerTickValue]	OsSecondsPerTick 값을 모든 HwCounter에 적용한다.
-CustomPrefix	Os Object에 대한 Autron의 Default Prefix를 생략한다. (OsConf_[OsObjectType])
-TaskPrefix=[OsTaskPrefixString]	Task 의 Prefix 를 지정한다. 이 옵션은 CustomPrefix Option 과 같이 사용되어야 한다.
-ErrorMsgOnly	Error Message 만 출력한다.(Warning 생략)
	© 2020 HYLINDALALITRON Co. Ltd. All Right Reserve



	True 인 경우에는, Runnable 의 앞, 뒤에서 실제로 Data 를 전송한다.
-ImmediateBufferUpdate=[true/false]	False 인 경우에는 Same Preemption Area 에 속한 경우에는
	Runnable 의 앞, 뒤에서 실제로 전송하고 Other Preemption
	Area 에 속한 경우에는 Task 의 앞, 뒤에서 실제로 전송한다.
-lendicit CDM acro	Implicit Sender Receiver 의 GlueCode 를 Function 형태가 아닌
-ImplicitSRMacro	Macro 형태로 출력한다.
Na Dta Da aniwa (Dull CD	특정 유스케이스에서 Rte_ReceiverPullCB 사용을 줄여 Sender
-NoRteReceiverPullCB	Receiver Inter Partition 통신에 대한 최적화된 코드를 생성한다.
B Bi ti	IN, OUT, INOUT 매크로 사용을 활성화하며 Rte API 와 Runnable
-ParameterDirection	Prototype 생성시 IN, OUT, INOUT 매크로를 사용한다.

7.2 Generator Error Message

Number	Message
	Name of output directory is not given along with -O option.
	Name of input directory is not given along. with -Input option.
	This error occurs, when the output directory is not mentioned along with -O/-OUTPUT option.
1	The input file (file name) is repeated more than once.
	Tool provides the above warning, if the input ECU Configuration Description File having same name is repeated twice.
	* This Error can be reported whenever the generator faces both error conditions.
	Option is Invalid.
	Option is invalid.
2	This error occurs, when the options given on command line are other than (-O/-OUTPUT, -V/-VERSION, -H/-HELP, -L/-LOG, -GenMemMap, -C /-CONTRACT, - BSC / -BASIC SOFTWARE SCHEDULER CONTRACT PHASE, - PCC / - PREBUILD DATA SET CONTRACT PHASE, -BSG / -
	BASIC SOFTWARE SCHEDULER GENERATION PHASE, -G / - RTE GENERATION PHASE, - PCG / - PREBUILD DATA SET GENERATION PHASE, - PBG / - POST BUILD DATA SET GENERATION PHASE, -EXCLFUNC, -E2E_SINGLE, -E2E_REDUNDANT, -E2E_BYPASS, -CSMACRO, StrictConfigChk, StrictUnconnRPortChk, StrictInitValChk,-Error, -IOC).
	Invalid output directory \(\text{output directory name} \) as the file with same name exists.
2	
3	This error occurs, if the name of the output directory mentioned is same as that of filename in
	the working directory.
	The input directory path (input_dir) provided along with (-i/-input) option does not exist.
4	This error occurs, if the input directory path \\$input_dir\ provided along with \-i/-input\ option does not exist.
	Invalid output directory.
5	
	This error occurs, if the mentioned output directory is Invalid.
	File (file name) does not exist.
6	This error occurs, if input file name mentioned in the command line is not present in the working directory.
7	The ECU Configuration Description File / Atomic SW-Component Description File are not provided as input to the Tool.
	This error occurs, if output directory is mentioned along with -O option but ECU Configuration

SHT/SHTS 115 / 203

	Description File / Atomic SW-Component Description File is not provided as input to the Generation Tool.
8	Cannot open 〈file name〉 file.
0	This error occurs, when Log file (Rte.log) could not be opened.
	Both -CONTRACT and -GENERATION options are specified. Rte Generation Tool can execute in
	one phase at a time.
9	
	This error occurs when both -CONTRACT and -GENERATION options are specified. Rte
	Generation Tool can execute in one phase at a time.
	The LOWER-LIMIT value 〈VALUE〉 and UPPER-LIMIT value 〈VALUE〉 in COMPU-SCALE for ENUM
	Datatype 〈DATA TYPE〉 should be identical as the category is TEXTTABLE.
10	
	Tool will provide an error message if the value configured for lower limit and upper limit of a
	compu scale are different when the category is TEXTTABLE.
	The VT value configured within the COMPU-CONST class has to be unique in the whole
	AUTOSAR system.
11	
	Tool will provide an error message if the value configured for VT element of each compu const
	class is not unique.
	ClientId (NUMERICAL-VALUE-SPECIFICATION) is not configured for the Request, under the
	container ISIGNAL for corresponding SYSTEM-SIGNAL.
12	
	This error occurs if, ClientId (NUMERICAL-VALUE-SPECIFICATION) is not configured for the
	Request, under the container ISIGNAL for corresponding SYSTEM-SIGNAL.
	More than one MODE-DECLARATION-GROUPS configured with same SHORT-NAME
	⟨ShortName⟩ and different MODE-DECLARATIONS.
13	
	Tool will provide an error message if multiple ModeDeclarationGroups with same short name
	but different ModeDeclarations are configured.
	BASE-TYPE-REF or IMPL-TYPE-REF parameter is not configured for IMPLEMENTATION-DATA-
	TYPE-ELEMENT(Path) within the SW-POINTER-TARGET-PROPS.
14	
	This error occurs, if the parameter Sw-Base-Type or Impl-type-ref is not configured within the
	container Sw-Target-Props of Sw-Definition-Condition.
	The SYS-REF Parameter value 〈VALUE〉 in SW-SYSCOND for this 〈'PATH'〉 is not valid.
	This error occurs, if the Reference value in SW-SYSCOND of (RUNNABLE ENTITY, BSW-
15	SCHEDULABLE-ENTITY, and EXCLUSIVE AREA) specified is not valid.
	The VENDOR-ID parameter in BSW-IMPLEMENTATIONis not configured for BSW-MODULE-
	DESCRIPTION
	* This Error can be reported whenever the generator faces both error conditions.
	Both SchmEnableMacroname and SchMDisableMacroName should be configured, when
	BswExArealmpl is configured as USER_DEFINED_MACRO 〈Exclusive Area Path〉.
16	
	This error occurs, if either SchmEnableMacroname or SchMDisableMacroName is not configured
	when BswExArealmpl is configured as USER-DEFINED-MACRO.
	The SHORT-NAME (Shortname) for all POST-BUILD-VARIANT-CRITERION must be unique.
17	
	Tool will provide an error message if duplicate name exists for post build variant criterions.
	The SHORT-NAME (Shortname) across SW-SYSTEMCONST must be unique.
18	
	Tool will provide an error message if duplicate name exists for Sw-System-Const.

SHT/SHTS 116 / 203

	HANDLE-OUT-OF-RANGE-STATUS should not be set to INDICATE for the Queued Receiver Com
10	Spec.
19	Tool will provide an error massage if HANDI E-OLIT-OE-PANGE-STATUS is set to INDICATE for
	Tool will provide an error message if HANDLE-OUT-OF-RANGE-STATUS is set to INDICATE for the Queued Receiver Com Spec.
	The POST-BUILD-VARIANT-CRITERION-VALUE-SET-REF parameter is not configured in
	PREDEFINED-VARIANT (pre_path).
20	PREDEFINED-VARIANT (pre_patily.
	Tool will provide an error message if Post Build variant criterion value set reference is not set.
	More than one same SHORT-NAME (Short name) in SW-SYSTEMCONSTANT-VALUE-SET value
	exists.
21	
	Tool will provide an error message if duplicate pre-compile criterion value is present.
	The SW-SYSTEMCONSTANT-VALUE-SET-REF parameter is not configured in SW-
	SYSTEMCONSTANT-VALUE-SET (Shortname).
22	
	Tool will provide an error message if sw-systemconstant value set path is not referred in Sw-
	System-Constant-Value-Set.
	More than one Background task is configured.
23	
	This error occurs, if more than one background task exists.
	Background Task is not having the lowest priority of the core.
24	
	This error occurs, if Background Task is not assigned lowest priority.
	More than one OsAlarm is referred to activate the same Basic Task.
25	
	This error occurs, if more than one OsAlarm reference is configured to activate the basic task
	basic.
	Different OsAlarms or OsScheduleTableExpiryPoints should be referred to set the OsEvents in al the RteEventtoTaskMappings which are mapped to same extended task. If All the
	RteEventtoTaskMappings are referring different OsEvents Different Period or Offset values are
26	configured to set the same OsEvent.
	comigored to set the same osevent,
	This error occurs, if in an extended task RteEventtoTaskMapping or RteBswEventtoTaskMapp-
	-Ings should refer to different OsAlarms or OsScheduleTableExpiryPoints.
	Event Type 〈EventType〉 is referred in more than one RteBswEventToTaskMapping.
27	
	This error occurs, if in an Event is referred in more than one RteBswEventtoTaskMappings.
	The 'RteEventRef' configured in 'RteEventtoTaskMapping' or "RteBswEventto-
28	-TaskMappings" is not a valid.
20	
	Tool will provide an error message if the event in RteEventRef configured is not a valid.
	The parameters RteUsedOsAlarmRef and RteUsedOsScheduleTableExpiryPoint
	-Ref or RteBswUsedOsAlarmRef and RteBswUsedOsScheduleTableExpiryPointRef should not be
	configured when the RTE Event or BSW Event referred using the parameter 'Rteevent' is not
29	TIMING-EVENT or BACKGROUND-EVENT.
	Tool will provide an error massage if the Event manned in PtoEventPof/PtoPowEventPof of
	Tool will provide an error message if the Event mapped in RteEventRef/RteBswEventRef of RteEventtoTaskMapping/RteBswEventtoTaskMapping is neither a TIMINIG-EVENT
	Nor BACKGROUND-EVENT in Which OsAlarm or ScheduleTableExpiryPoint is referring.
	Duplicate RtePositionInTask configured for OsTask <path>.</path>
30	Dopinate Ittel Ositionin lask configured for Osiask (FATTI).
50	Tool will provide an error message if same RtePositionInTask is configured for an OsTask.
	1001 will provide all error message it same kterositionini ask is configured for all Ostask,



문서 번호 (DOC NO) SHT/SHTS 117 / 203

	Both the parameters RteUsedOsAlarmRef/RteBswUsedOsAlarmRef and
	RteUsedOsScheduleTableExpiryPointRef/RteBswUsedOsScheduleTableExpiryPointRef are
	configured, while the RteEventRef/ RteBswEventRef are referring to TIMING-EVENT or
	BACKGROUND-EVENT in RteEventtoTaskMapping/ RteBswEventtoTaskMapping.
31	BACKGROUND EVENT III REELVEITEOTASKMAPPING, REDSWEVENTEOTASKMAPPING.
	Tool will provide an error message if both OsAlarm and OsScheduleTableExpiryPoint are referred
	in RteEventtoTaskMapping or if both OsAlarm and OsScheduleTableExpiryPoint are referred in
	RteBswEventtoTaskMapping.
	More than one RteEventtoTaskMappings which are referring to the same
	Extended OsTask but UsedOsEventRef is not configured in all the RteEventtoTaskMappings in
32	OsTask
	This error occurs, if in Extended Task same OsTask is referred in RteEventtoTaskMappings but
	UsedOsEventRef is not configured in all the RteEventtoTaskMappings in OsTask.
	The OsAlarm and OsScheduleTableExpiryPoint mapped to OsTask (ostask_path)which is not
	having lowest priority in RteEventtoTaskMapping.
33	γ
	Tool will provide an error message if the OsAlarm and OsScheduleTableExpiryPoint are mapped
	to OsTask which is not having lowest priority in RteEventtoTaskMapping.
	ActivationOsAlarmRef/ BswActivationOsAlarm Ref should be configured in
	RteEventtoTaskMapping if minimum start interval is configured > 0.
34	
	Tool will provide an error message, if ActivationOsAlarmRef/ BswActivationOsAlarm Ref is not
	configured in RteEventtoTaskMapping even though minimum start interval is configured >0.
	Runnable Entity is mapped to more than one OsTask, Concurrent activation is forbidden for this
	i.e. CanBelnvokedConcurrently Attribute set to false i.e. both the tasks can preempt each other.
35	Tool will provide an error message if Runnable Entity is mapped to more than one OsTask when
	CanBelnvokedConcurrently Attribute Set to false and the mapped tasks have different task
	schedule settings.
	START-ON-EVENT-REF referred in (EventType) is not a valid RunnableEntity.
36	
50	Tool will provide an error message if invalid runnable entity consisting of event referring to
	START-ON-EVENT-REF.
	Schedulable Entity is mapped to more than one OsTask i.e. CanBelnvokedConcurrently attribute
~=	set to false.
37	T 1 111 11 11 11 11 11 11 11 11 11 11 11
	Tool will provide an error message if BswSchedulable Entity is mapped to more than one OsTask
	when CanBelnvokedConcurrently Attribute Set to false.
	START-ON-EVENT-REF referred is not a valid Schedulable Entity Path.
38	Tool will provide an error message if invalid Schedulable Entity path is referred in START-ON-
	EVENT-REF.
	OsCounter referred in OsAlarm is not valid Os Counter reference.
39	Oscobiler referred in Ostalin is not valid os coonter reference.
33	This error occurs, if there is invalid OsCounter reference in OsAlarm.
	OsCounter referred in OsScheduleTable is not a valid Os Counter reference.
40	Oscoulter referred in Osschedule fable is not a valid Os counter reference.
	This error occurs, if there is invalid OsCounter reference in OsScheduleTable.
	Same VARIANT-CRITERION-REF parameter(variant-criterion-ref) is referred more than once in
	EVALUATED-VARIANT-REFS (Evaluated-variant-ref).
41	The transfer of the state of th
••	Whenever VARIANT-CRITERION path is referenced in VARIANT-CRITERION-REF parameter of
	EVALUATED-VARIANT-REFS more than once this error will be thrown.

SHT/SHTS 118 / 203

	The PREDEFINED-VARIANT-REFS (References) is not configured in ECUC-RESOLVER in ECU file.
42	This error occurs, if post build criterion value set path is referred instead of prebuild criterion value set path in ECUC variant Resolver.
	Mandatory parameter in container is not configured.
43	
	This error occurs, when the Mandatory parameter in container is not configured.
	OS Component configuration is not present in the input file(s).
44	
	This error occurs, if value for RTEEventRef is configured inside RunnableEntityMapping
	container and OS Component is not present in the input ECU Configuration Description File(s).
	Mandatory parameter 'parameter name' is not configured in container 'container name'.
45	Tool provides the above error, if the following mandatory parameters are not configured in
73	respective containers.
	Refer to end of this table
	Runnable Symbol (Runnable Entity Symbol) provided for the parameter 'RUNNABLE-SYMBOL'
	should be unique across all the Runnable Entities.
46	
	This error occurs, if runnable symbol name is not unique across the entire software component
	description file
	Enable update value is set to true in NonQueuedRecieverComSpec of Data read access variable
47	type〈Com Spec Path〉, 〈Variable Access Path〉.
47	This error occurs, if Data Read access variable type is set with enable update true value in
	NonQueuedRecieverComSpec of R-Port-type.
	Port <portpath> is having an M:N connection RTE does not support M:N connections.</portpath>
48	
	This error occurs, if port is having multiple sender and multiple receiver connection.
	Both Synchronous Server Call point and Asynchronous Call point is referring to same client
40	server operation.
49	This error occurs, if Both Synchronous Server Call point and Asynchronous Call point are
	referring to same client server operation.
	Interface name is not configured for the Port〈Port Path〉.
50	This error occurs, if Sender receiver/client server interface path is not configured for the
	mentioned port.
	PortPath should be configured for ModeSwitchPoints within the modes.
51	
	This error occurs, if port is not referred in ModeSwitchPoints configured within modes.
	The Init value within the Non Queue Receiver Com Spec (port) doesn't match with the variable data prototype init value.
52	data prototype filit value,
	This error occurs, when different Init Values are configured within Non Queue Receiver Com
	Spec and Variable Data Prototype.
	Vendor Id not configured for the BSW Implementation Data Type(impl_path)
53	
	This error occurs, when Vendor Id not configured for the BSW Implementation Data
	Type(impl_path).
	The queue type configured for variable Data prototype (path) is of type 'MEASUREMENT-
54	POINT'.
J-4	This error occurs, when queue type parameter is set to MEASUREMENT-POINT in Variable data
	prototype.
	© 2000 LIVINDALAUTDON Co. Ltd. All Dight Dagge

SHT/SHTS 119 / 203

	DatatypeMappingset is not configured for <mode declaration="" group="">.</mode>
55	This error occurs, when Data Type Mapping Set path is not referred in <mode declaration="" group="">.</mode>
	ServerArgumentImplPolicy should be set to UseArrayBaseType only for the data type of
	category 'ARRAY'.
56	
	This error occurs, when ServerArgumentImplPolicy is set to UseArrayBaseType when data type category is not of type 'ARRAY'.
	WAIT-POINT should not be configured for the RUNNABLE-ENTITY (run_path) which is using
	Exclusive area in the role RUNS-INSIDE-EXCLUSIVE-AREA.
57	TICLE AND A MAIT POINT OF THE STATE OF THE S
	This error occurs, when WAIT-POINT is configured for the RUNNABLE-ENTITY (run_path) which
	is using Exclusive area in the role RUNS-INSIDE-EXCLUSIVE-AREA
	ServerArgumentImplPolicy should be set to UseVoid only for the DATA -TYPE whose data type
58	category is either of primitive or pointer data type.
	This error occurs, when ServerArgumentImplPolicy is not set to UseVoid for the PRIMITIVE or
	POINTER Data Type. Different Queue Length is configured for the P-ports sharing the same Runnable (Run-Symbol)
59	Different Queue Length is configured for the P-ports sharing the same kunnable (kun-symbol)
39	This error occurs, when a client is request from more than one Server of Port Path.
	A client (component) cannot request from more than one Server of Port Path.
	A client (component) cannot request from more than one server of Fort Fath.
60	This error occurs, when client port is connected to more than one server port for the same
	operation element.
	ClientServerOperation has an ArgumentDataPrototype whose ImplementationDataType is of
	category DataReference and direction is OUT or INOUT
61	cutegory butanererence and uncertain is our or intoor
•	This error occurs, when direction is not configured as OUT/INOUT for Argument data prototype
	within ClientServerOperation for the Implementation data type of category 'DATA_REFERENCE'.
	Queue Length in ServerComSpec of P-PORT should be greater than zero(Path).
62	
62	This error occurs, when Queue Length in ServerComSpec of P-PORT is configured less than
	zero.
	The NV Ram Block is not configured in NvBlockDescriptors <path>.</path>
63	
	This error occurs, when the Nv Ram Block is not configured in NvBlockDescriptors <path>.</path>
	The Data Type referred in RamBlock and RomBlock of NvBlockDescriptors are of different type.
64	
04	This error occurs, when the data types referred in RamBlock and RomBlock of
	NvBlockDescriptors are of different compatible types.
	Data type referred in read nv data written nv data and ram block are not of compatible types.
65	
	This error occurs, when Variable Data Prototype is referred in read NV data and written NV data
	are not of compatible types.
	The TransmissionAcknowledgementRequest attribute for transmission acknowledgment for 1: n
<i>cc</i>	communication is configured and is invalid.
66	This server convey tubes Transparies in Automobile Server 4Ds. 111. 11. 11. 11. 11. 11. 11. 11. 11.
	This error occurs, when TransmissionAcknowledgementRequest is configured for P-Port, in cas
	of 1: n communication.
	Either SYMBOL or SHORT-LABLE or valid c identifier for VT-ELEMENT should be configured for
67	the COMPU-METHOD if the CATEGORY attribute is configured as TEXTTABLE or
67	SCALE_LINEAR_AND_TEXTTABLE or SCALE_RATIONAL_AND_TEXTTABLE.
	This array assure, whose Either CVMPOL or CHOPT-LADIE or would a ideatifier for VT ELEMENT:
	This error occurs, when Either SYMBOL or SHORT-LABLE or valid c identifier for VT-ELEMENT i



문서 번호 (DOC NO) SHT/SHTS 120 / 203

	not configured for the COMPU-METHOD.
68	The timeout value for transmission acknowledgement and wait point is not same which is invalid.
	This error occurs, when the timeout value and the wait point value are not the same.
	The Event is referencing a RunnableEntity and is referenced by a WaitPoint which is invalid.
69	This error occurs, when the Event \(\) event \(\) is referencing a RunnableEntity and is referenced by WaitPoint which is invalid.
	NATIVE-DECLARATION (Path) configured is not a valid-'C' data type.
70	This error occurs, when a Native declaration path provided, is not pointing to a valid 'C' data type.
	The RunnableEntity that has a WAIT-POINT must not be referenced by an event_actual_name.
71	This error occurs, when RunnableEntity that has a WAIT-POINT is referenced by an event_actual_name.
70	The HANDLE-TERMIATION-AND-RESTART parameter should be set to CAN-BE-TERMINATED-AND-RESTARTED for the SOFTWARE-COMPONENT-PROTOTYPE which mapped to an ECU-PARTITION with PARTITION-CAN-BE-RESTARTED parameter set to true
73	This error occurs, when the HANDLE-TERMIATION-AND-RESTART parameter is not set to CAN-BE-TERMINATED-AND-RESTARTED for the SOFTWARE-COMPONENT-PROTOTYPE which mapped to an ECU-PARTITION with PARTITION-CAN-BE-RESTARTED parameter set to true
	A single task cannot be mapped to more than one Partition. Task
74	⟨Task Path⟩ of ⟨Software Component Name⟩ is mapped to the following Partition ⟨Partitions Path⟩.
	This error occurs, when a single task is mapped to more than one partition.
75	ExclusiveAreaMechanism parameter is not configured in ExAreaImpl container of ExclusiveAreaRef of <path>.</path>
,,,	This error occurs, when ExclusiveArealmplMechanism parameter is not configured in ExAreaimpl container of ExclusiveAreaRef.
7.6	The SWC 〈Path〉 should have an internal behavior.
76	This error occurs, when mention SWC path does not have an internal behavior.
	Data Type is not referred in TypeTRef parameter of Per Instance Parameter of given \(path \).
77	This error occurs, when Data Type is not referred in TypeTRef parameter of Per Instance Parameter of given <path>.</path>
	The nativeDeclaration in SwBaseType referred by ImplementatinDataTypes needs to be
78	configured.
	This error occurs, when native declaration is not configured for the BASE-TYPE.
79	Type parameter is not configured in Per-Instance_Memory of <path>.</path>
	This error occurs, when type parameter is not configured in Per-Instance_Memory.
80	TypeDefinition parameter is not configured in Per-Instance_Memory of (Path).
	This error occurs, when type definition parameter is not configured in Per-Instance_Memory.
	Data Type is not referred in TypeTRef parameter of ArTyped-Per-Instance_Memory of \ path \.

문서 번호 (DOC NO) SHT/SHTS 121 / 203

	This error occurs, when data type is not referred in TypeTRef parameter of ArTyped-Per-Instance_Memory.
85	OsScheduleTableExpiryPointOffset is not configured in <path>.</path>
	This error occurs, when OsScheduleTableExpiryPointOffset is not configured in given path.
86	REQUIRE-PORTS <port_path> Should not be configured for PARAMETER-SW-COMPONENT-TYPE <swc></swc></port_path>
	This error occurs, when REQUIRE-PORTS is configured for PARAMETER-SW-COMPONENT-TYPE (SWC).
87	OnTransitionValue is not configured for the MODE-DECLARTION_GROUP of Category Type 'EXPLICIT-ORDER' of given <pre>⟨path⟩.</pre>
	This error occurs, when OnTransitionValue is not configured for the MODE-DECLARTION_GROUP of Category Type 'EXPLICIT-ORDER' of given <path>.</path>
89	Mapping is not possible for the given vdps as DataProtoMapping direction should be PPort to RPort.
	This error occurs, when the DataProtoMapping direction is not PPort to RPort and Try to map for given vdps.
91	The value configured for the parameter CATEGORY should be either PROFILE_01 or PROFILE_02 or NONE.
	This error occurs, when the value configured for the parameter CATEGORY will not be either PROFILE_01 or PROFILE_02 or NONE.
92	Counter offset should be configured for the EndToEndProfile. This error occurs, when Counter offset is not configured for the EndToEndProfile.
93	DataIDMode should be configured for the EndToEndProfile. This error occurs, when DataIDMode is not configured for the EndToEndProfile.
94	CrcOffset should be configured for the EndToEndProfile.
	This error occurs, when CrcOffset is not configured for the EndToEndProfile. DataLength should be configured for the EndToEndProfile.
95	This error occurs, when DataLength is not configured for the EndToEndProfile.
	Minimum start interval should be a positive number value in runnable path.
96	This error occurs, when Minimum start interval value in runnable entity <path> is not a positive number.</path>
98	The OsTask path is not referred in RteTaskComMapping container.
	This error occurs, when The OsTask path is not referred in RteTaskComMapping container. Redundant CRC element found
99	This error occurs, when redundant CRC element found.
100	Redundant COUNTER element found This error occurs, when redundant COUNTER element found.
	All the R-Ports connected to the specific P-Port should be mapped to same partition.
101	This error occurs, when R-Ports connected to the specific P-Port are not mapped to same partition.
102	All the ModeSwitchEvents of the R-Ports connected to the specific P-Port should be mapped to the same task.
	<u> </u>

H 번호 (DOC NO) SHT/SHTS 122 / 203

	This error occurs, when R-Ports connected to the specific P-Port are not mapped to same task
103	Variable Data Prototype is not referred in Invalidation Policy.
	This error occurs, when Variable Data Prototype is not referred in Invalidation Policy.
	Handle Invalid Value is not configured in Invalidation Policy.
104	
	This error occurs, when Handle Invalid Value is not configured in Invalidation Policy.
105	ModeDisablingDependency cannot be configured for OperationInvokedEvent of (Event Path).
105	This error occurs, when ModeDisablingDependency is configured for OperationInvokedEvent o mentioned Event Path.
	Value of a Mode cannot be more than the range of its ModeDeclarationGroup the Mode has th
	value which is more than the range specified by its ModeDeclarationGroup.
106	
	This error occurs, when Mode is having the value which is more than the range specified by its
	ModeDeclarationGroup.
	The port path configured in ModeScheduleTableMap for Software Component is not a P-Port
107	Path < port_path >.
107	This error occurs, when the port path configured in ModeScheduleTableMap for Software
	Component is not a P-Port Path.
	Different Timeout values are configured for the AsynchronousServerCallpoint and for the
	WaitPoint associated with the AsynchronousServerCallReturnsEvent for this
108	AsynchronousServerCallPoint. Same values should be configured.
100	
	This error occurs, when the WaitPoint for AsynchronousServerResultCallPoint and timeout for
	AsynchrnousServerCallPoint is not same.
	MINIMUM-START-INTERVAL should not be configured and should not set to greater than 0 when CAN-BE-INVOKED-CONCURRENTLY is true.
109	WHEN CAN-BE-INVOKED-CONCORRENTLY IS tibe.
.05	This error occurs, when the MINIMUM-START-INTERVAL is configured when CAN-BE-INVOKED
	CONCURRENTLY is true.
	In DELEGATION-SW-CONNECTOR, INNER PORT path should be SW-COMPONENT-PROTOTYPE
110	and OUTER Port path should be COMPOSITION-SW-COMPONENT-TYPE. But for this
	DELEGATION-SW-CONNECTOR Inner and Outer port are same
	The Handle Out Of Range for Queue Receive Com Spec 〈dataElementRef〉 should not be INVALIDATE or DEFAULT or EXTERNAL-REPLACEMENT.
112	INVALIDATE OF DEFAULT OF EXTERNAL-REPLACEMENT.
112	This error occurs, when the Handle Out Of Range for Queue Receive Com Spec is configured as
	INVALID or DEFAULT or EXTERNAL-REPLACEMENT.
	INIT-VALUE should be configured for the VARIABLE-DATA-PROTOTYPE (vdp) when the
	strictInitialValuesCheck is enabled and SwAddrMethod has a sectionInitializationPolicy set to
	init.
113	
	This error occurs, when INIT-VALUE is not configured for the VARIABLE-DATA-PROTOTYPE
	<vdp> when the strictInitialValuesCheck is enabled and SwAddrMethod has a sectionInitializationPolicy set to init.</vdp>
	The INIT-VALUES should be configured for the port in NONQUEUED-RECEIVER-COM-SPEC
	when filter is configured.
114	
	This error occurs, when the filter is configured in NONQUEUED-RECEIVER-COM-SPEC and INIT
	VALUE is not given in port.



문서 번호 (DOC NO) SHT/SHTS 123 / 203

	This error occurs, when the RunInsideExclusiveArea is configured for the BswCalledEntity of given path.
	Runnable Entity or Schedulable Entity mapped to different tasks should have same schedule point settings.
116	This error occurs, when Runnable entity or Schedulable entity (run_ref)mapped to different tasks are not having same schedule point settings.
	Rte Event (eve_path) should not be mapped to only virtual task.
117	This error occurs, when the Rte Event (eve_path) is mapped to only virtual task.
	IMPLEMENTATION-DATA-TYPE (impl_path) and APPLICATION-DATA-TYPE (appl_data)
	configured in SWC (swc_name) are referring to compu methods which are having duplicate
	UPPER-LIMIT or LOWER-LIMIT for their Compu Scales
118	of the composition of the composition
	This error occurs, when IMPLEMENTATION-DATA-TYPE and APPLICATION-DATA-TYPE
	configured in SWC are referring to compu methods which are having duplicate UPPER-LIMIT or
	LOWER-LIMIT for their Compu Scales.
	One or more Runnable Entities of same component is mapped to tasks of different partition.
	The Events in below sw component has been mapped to different partitions
119	
	This error occurs, when Runnable Entity is mapped to tasks of different partitions.
	Timing Events which are implemented based on the Schedule table, can not have offset value
	bigger than zero.
120	
	This error occurs, when the Runnables of different offset mapped to the same Schedule Table(
	sched_path > and all offset value must be set as "Zero".
	BswEvent is mapped only to virtual task.
121	
	This error occurs, when the Event (eve_path) is not mapped to virtual task (eve_path).
	Priority of the OsTask to which the RunnableEntity is mapped should be greater than the priori
122	of the OsTask to which the RunnableEntity is virtually mapped.
	This error occurs, when the Priority of the OsTask to which the RunnableEntity is mapped not
	greater than the priority of the OsTask to which the RunnableEntity is virtually mapped.
	Runnable reference should not be configured for DREvent which is referred in a waitpoint.
123	This error occurs, when the Runnable reference is configured for DREvent which is referred in a
	waitpoint.
	DRead should not be configured with composite data types in Runnable Path 〈run_ref〉.
125	
125	This error occurs, when the DRead is configured with composite data types in Runnable Path
	<pre>⟨run_ref⟩.</pre>
	Mandatory parameter SHORTLABEL needs to be configured for variation point of RUNNABLE
	ENTITY of given Path.
126	
	This error occurs, when the Mandatory parameter SHORTLABEL is not configured for variation
	point of RUNNABLE ENTITY of given Path.
_	COMPU-DENOMINATOR for compumethod is configured as 0. It should be a non-zero positive
	number.
127	
	This error occurs, when the COMPU-DENOMINATOR for comp method <path1> is configured as</path1>
	0.
128	Data element with SwImplPolicy as queued cannot be accessed in a variable access in role of

번호 (DOC NO) SHT/SHTS 124 / 203

variable access in role of DataReceivePointByValues. The P-PORT-PROTOTYPE-REF (comp_port) configured in the PROVIDER-IREF inside ASSEMBLY-CONNECTOR-PROTOTYPE does not belong to the COMPONENT-PROTOTYPE for the PROVIDER-IREF inside ASSEMBLY-CONNECTOR-PROTOTYPE-REF (comp_port) configured in the PROVIDER-IREF inside ASSEMBLY-CONNECTOR-PROTOTYPE belong to the COMPONEN PROTOTYPE-REF. The R-PORT-PROTOTYPE-REF (comp_port) configured in the REQUESTER-IREF inside ASSEMBLY-CONNECTOR-PROTOTYPE does not belong to the COMPONENT-PROTOTYPE-REF (comp_port) configured in the REQUESTER-IREF inside ASSEMBLY-CONNECTOR-PROTOTYPE-REF (comp_port) configured in the REQUESTER-IREF inside ASSEMBLY-CONNECTOR-PROTOTYPE-REF (comp_port) configured in INNER-PORT-IREF (comp_port) configured in INNER-PORT-IREF (comp_port) prototype-REF (comp_port) configured in INNER-PORT-IREF (comp_port) configured in the INPORT-IREF (comp_port) configured in the INPORT (composition_port) configured in the INPORT		This error occurs, when the Data element with Swimpipelicy as guested has accessed in a
The P-PORT-PROTOTYPE-REF (comp_port) configured in the PROVIDER-IREF inside ASSEMBLY-CONNECTOR-PROTOTYPE does not belong to the COMPONENT-PROTOTYING PROTOTYPE for the PROVIDER-IREF inside ASSEMBLY-CONNECTOR-PROTOTYPE belong to the COMPONENT PROTOTYPE-REF. The R-PORT-PROTOTYPE-REF (comp_port) configured in the REQUESTER-IREF inside ASSEMBLY-CONNECTOR-PROTOTYPE does not belong to the COMPONENT-PROTOTYPE for the REQUESTER-IREF inside ASSEMBLY-CONNECTOR-PROTOTYPE for the REQUESTER-IREF inside ASSEMBLY-CONNECTOR-PROTOTYPE for the REQUESTER-IREF inside ASSEMBLY-CONNECTOR-PROTOTYPE is belong to the COMPONENT-PROTOTYPE-REF. COMPONENT-PROTOTYPE-REF parameter should be configured in INNER-PORT-IREF inside DELEGATION-CONNECTOR-PROTOTYPE. This error occurs, when the COMPONENT-PROTOTYPE-REF parameter is not configured in INNER-PORT-IREF container inside DELEGATION-CONNECTOR-PROTOTYPE. The PORT-PROTOTYPE-REF (Scomp_port) configured in the INNER-PORT-IREF inside DELEGATION-CONNECTOR-PROTOTYPE does not belong to the COMPONENT-PROTOTYPE-REF. The OUTER-PORT-REF (comp_port) configured in the INNER-PORT-IREF inside DELEGATION-CONNECTOR-PROTOTYPE belong to the COMPONENT-PROTOTYPE-REF. The OUTER-PORT-REF (comp_port) configured in the DELEGATION-CONNECTOR-PROTOTYPE belong to the COMPONENT-PROTOTYPE-REF. The OUTER-PORT-REF (comp_port) configured in the DELEGATION-CONNECTOR-PROTOTYPE belong to the composition_path). SwimpiPolicy is set to MEASUREMENT-POINT for the variable data prototype of Variable Access Path. COMPU-NUMERATOR V2 for compumethod is configured as 0. It should be a non-zero number. This error occurs, when the SwimpiPolicy is not set to MEASUREMENT-POINT for the variable data prototype of Variable Access Path. COMPU-NUMERATOR V2 for compumethod is configured for the variable data prototype of path (vdp_path). Symbol name should be unique. This error occurs, when the Invalidation policy is not configured for the variable data prototype of path (vdp_path). Symbol name should be unique if the SHORT-NAME of the		This error occurs, when the Data element with SwImplPolicy as queued has accessed in a variable access in role of DataReceivePointByValues.
ASSEMBLY-CONNECTOR-PROTOTYPE does not belong to the COMPONENT-PROTOTYI This error occurs, when the P-PORT-PROTOTYPE-REF (comp_port) configured in the PROVIDER-IREF inside ASSEMBLY-CONNECTOR-PROTOTYPE belong to the COMPONEN PROTOTYPE-REF. The R-PORT-PROTOTYPE-REF (comp_port) configured in the REQUESTER-IREF inside ASSEMBLY-CONNECTOR-PROTOTYPE does not belong to the COMPONENT-PROTOTYI This error occurs, when the R-PORT-PROTOTYPE-REF (comp_port) configured in the REQUESTER-IREF inside ASSEMBLY-CONNECTOR-PROTOTYPE is belong to the COMPONENT-PROTOTYPE-REF. COMPONENT-PROTOTYPE-REF parameter should be configured in INNER-PORT-IREF (inside DELEGATION-CONNECTOR-PROTOTYPE. This error occurs, when the COMPONENT-PROTOTYPE-REF parameter is not configure in INNER-PORT-IREF container inside DELEGATION-CONNECTOR-PROTOTYPE. The PORT-PROTOTYPE-REF (\$comp_port) configured in the INNER-PORT-IREF inside DELEGATION-CONNECTOR-PROTOTYPE belong to the COMPONENT PROTOTYPE-REF. The OUTER-PORT-REF (comp_port) configured in the DELEGATION-CONNECTOR-PROTOTYPE belong to the COMPONENT PROTOTYPE-REF. The OUTER-PORT-REF (comp_port) configured in the DELEGATION-CONNECTOR-PROTOTYPE belong to the COMPONENT PROTOTYPE-REF. The OUTER-PORT-REF (comp_port) configured in the DELEGATION-CONNECTOR-PROTOTYPE belong to the composition (composition_path). SwimplPolicy is set to MEASUREMENT-POINT for the variable data prototype of Variable Path. This error occurs, when the OUTER-PORT-REF (comp_port) configured in the DELEGATION-CONNECTOR-PROTOTYPE belong to the composition (composition_path). SwimplPolicy is set to MEASUREMENT-POINT for the variable data prototype of Variable Access Path. COMPU-NUMERATOR V2 for compumethod is configured as 0. It should be a non-zero number. This error occurs, when the SwimplPolicy is not set to MEASUREMENT-POINT for the variable data prototype of Variable Access Path. COMPU-NUMERATOR V2 for compumethod is configured for the variable data prototype of path (vdp_path). Symbol name should be unique if the SHORT-N		·
Inis error occurs, when the P-PORT-PROTOTYPE-REF (comp_port) configured in the PROVIDER-IREF inside ASSEMBLY-CONNECTOR-PROTOTYPE belong to the COMPONET PROTOTYPE-REF. The R-PORT-PROTOTYPE-REF (comp_port) configured in the REQUESTER-IREF inside ASSEMBLY-CONNECTOR-PROTOTYPE does not belong to the COMPONENT-PROTOTYING REQUESTER-IREF inside ASSEMBLY-CONNECTOR-PROTOTYPE-REF (comp_port) configured in the REQUESTER-IREF inside ASSEMBLY-CONNECTOR-PROTOTYPE is belong to the COMPONENT-PROTOTYPE-REF. COMPONENT-PROTOTYPE-REF parameter should be configured in INNER-PORT-IREF (inside DELEGATION-CONNECTOR-PROTOTYPE) This error occurs, when the COMPONENT-PROTOTYPE-REF parameter is not configured in INNER-PORT-IREF container inside DELEGATION-CONNECTOR-PROTOTYPE. The PORT-PROTOTYPE-REF (\$comp_port) configured in the INNER-PORT-IREF inside DELEGATION-CONNECTOR-PROTOTYPE-REF (\$comp_port) configured in the INNER-PORT-IREF inside DELEGATION-CONNECTOR-PROTOTYPE-REF (\$comp_port) configured in the INPORT-IREF inside DELEGATION-CONNECTOR-PROTOTYPE belong to the COMPONENT-PROTOTYPE-REF. The OUTER-PORT-REF (comp_port) configured in the DELEGATION-CONNECTOR-PROTOTYPE-REF. The OUTER-PORT-REF (comp_port) configured in the DELEGATION-CONNECTOR-PROTOTYPE belong to the composition (composition_path). SwimpiPolicy is set to MEASUREMENT-POINT for the variable data prototype of Variable Access Path. COMPU-NUMERATOR V2 for compumethod is configured as 0. It should be a non-zero number. This error occurs, when the SwimpiPolicy is not set to MEASUREMENT-POINT for the variable data prototype of Variable Access Path. COMPU-NUMERATOR V2 for compumethod is configured for the variable data prototype of path (vdp_path). Symbol name should be unique. This error occurs, when the Shymbol name is not unique if the SHORT-NAME of the SW-COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE (vdp) was a configured for the PARAMETER-DATA-PROTOTYPE (vdp) was a configured for the PARAMETER-DATA-PROTOTYPE (vdp) was		ASSEMBLY-CONNECTOR-PROTOTYPE does not belong to the COMPONENT-PROTOTYPE-REF.
PROVIDER-IREF inside ASSEMBLY-CONNECTOR-PROTOTYPE belong to the COMPONER PROTOTYPE-REF. The R-PORT-PROTOTYPE-REF (comp_port) configured in the REQUESTER-IREF inside ASSEMBLY-CONNECTOR-PROTOTYPE does not belong to the COMPONENT-PROTOTY! This error occurs, when the R-PORT-PROTOTYPE-REF (comp_port) configured in the REQUESTER-IREF inside ASSEMBLY-CONNECTOR-PROTOTYPE is belong to the COMPONENT-PROTOTYPE-REF. COMPONENT-PROTOTYPE-REF parameter should be configured in INNER-PORT-IREF of inside DELEGATION-CONNECTOR-PROTOTYPE. This error occurs, when the COMPONENT-PROTOTYPE-REF parameter is not configured inside DELEGATION-CONNECTOR-PROTOTYPE. The PORT-PROTOTYPE-REF (scomp_port) configured in the INRER-PORT-IREF inside DELEGATION-CONNECTOR-PROTOTYPE does not belong to the COMPONENT-PROTOTYPE-REF inside DELEGATION-CONNECTOR-PROTOTYPE-REF (scomp_port) configured in the INRER-PORT-IREF inside DELEGATION-CONNECTOR-PROTOTYPE-REF (scomp_port) configured in the INRER-PORT-IREF inside DELEGATION-CONNECTOR-PROTOTYPE-REF. The OUTER-PORT-REF (comp_port) configured in the DELEGATION-CONNECTOR-PROTOTYPE-REF (comp_port) configured in the DELEGATION-CONNECTOR-PROTOTYPE belong to the composition (composition_path). SwimplPolicy is set to MEASUREMENT-POINT for the variable data prototype of Variable Path. This error occurs, when the SwimplPolicy is not set to MEASUREMENT-POINT for the valuation policy is not configured as 0. It should be a non-zero number. This error occurs, when the SwimplPolicy is not set to MEASUREMENT-POINT for the valuation policy is not configured for the variable data prototype of path (vdp_path). Symbol name should be unique. This error occurs, when the Symbol name is not unique if the SHORT-NAME of the SW COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE (vdp) was	130	This arrow account when the D. DODT DDOTOTYDE DEF (some next) coefficient in the
PROTOTYPE-REF. The R-PORT-PROTOTYPE-REF (comp_port) configured in the REQUESTER-IREF inside ASSEMBLY-CONNECTOR-PROTOTYPE does not belong to the COMPONENT-PROTOTYING REQUESTER-IREF inside ASSEMBLY-CONNECTOR-PROTOTYPE-REF (comp_port) configured in the REQUESTER-IREF inside ASSEMBLY-CONNECTOR-PROTOTYPE is belong to the COMPONENT-PROTOTYPE-REF. COMPONENT-PROTOTYPE-REF parameter should be configured in INNER-PORT-IREF (inside DELEGATION-CONNECTOR-PROTOTYPE). This error occurs, when the COMPONENT-PROTOTYPE-REF parameter is not configured in INNER-PORT-IREF container inside DELEGATION-CONNECTOR-PROTOTYPE. The PORT-PROTOTYPE-REF (\$comp_port) configured in the INNER-PORT-IREF inside DELEGATION-CONNECTOR-PROTOTYPE does not belong to the COMPONENT-PROTOTYPE-REF. The PORT-IREF inside DELEGATION-CONNECTOR-PROTOTYPE belong to the COMPONENT-PROTOTYPE-REF. The OUTER-PORT-REF (comp_port) configured in the DELEGATION-CONNECTOR-PROTOTYPE-REF. The OUTER-PORT-REF (comp_port) configured in the DELEGATION-CONNECTOR-PROTOTYPE belong to the composition (composition_path). SwimplPolicy is set to MEASUREMENT-POINT for the variable data prototype of Variab Path, This error occurs, when the SwimplPolicy is not set to MEASUREMENT-POINT for the variable data prototype of Variable Access Path. COMPU-NUMERATOR V2 for compumethod is configured as 0. It should be a non-zero number. This error occurs, when the COMPU-NUMERATOR V2 for comp method (path1) is configured. Invalidation policy is not configured for the variable data prototype of path (vdp_path). Symbol name should be unique. This error occurs, when the Symbol name is not unique Symbol name should be unique if the SHORT-NAME of the SW-COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE (vdp) w COMPONENT is duplicated.		
The R-PORT-PROTOTYPE-REF (comp_port) configured in the REQUESTER-IREF inside ASSEMBLY-CONNECTOR-PROTOTYPE does not belong to the COMPONENT-PROTOTYI This error occurs, when the R-PORT-PROTOTYPE-REF (comp_port) configured in the REQUESTER-IREF inside ASSEMBLY-CONNECTOR-PROTOTYPE is belong to the COMPONENT-PROTOTYPE-REF. COMPONENT-PROTOTYPE-REF parameter should be configured in INNER-PORT-IREF of inside DELEGATION-CONNECTOR-PROTOTYPE. This error occurs, when the COMPONENT-PROTOTYPE-REF parameter is not configured INNER-PORT-IREF container inside DELEGATION-CONNECTOR-PROTOTYPE. The PORT-PROTOTYPE-REF (\$comp_port) configured in the INNER-PORT-IREF inside DELEGATION-CONNECTOR-PROTOTYPE does not belong to the COMPONENT-PROTOTYPE need to be composition to the COMPONENT-PROTOTYPE-REF. The OUTER-PORT-REF (\$comp_port) configured in the DELEGATION-CONNECTOR-PROTOTYPE belong to the COMPONENT-PROTOTYPE-REF. The OUTER-PORT-REF (comp_port) configured in the DELEGATION-CONNECTOR-PROTOTYPE belong to the composition (composition_path). SwimplPolicy is set to MEASUREMENT-POINT for the variable data prototype of Variable Path. This error occurs, when the SwimplPolicy is not set to MEASUREMENT-POINT for the variable data prototype of Variable Access Path. COMPU-NUMERATOR V2 for compumethod is configured as 0. It should be a non-zero number. This error occurs, when the COMPU-NUMERATOR V2 for comp method (path1) is configured. This error occurs, when the Invalidation policy is not configured for the variable data prototype of Path (vdp_path). Symbol name should be unique. This error occurs, when the Symbol name is not unique Symbol Name should be unique if the SHORT-NAME of the SW-COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE (vdp) we Component to the parameter of the PARAMETER-DATA-PROTOTYPE (vdp) we Component to the PARAMETER-DATA-PROTOTYPE (vdp) we Component to the Component country is duplicated.		-
ASSEMBLY-CONNECTOR-PROTOTYPE does not belong to the COMPONENT-PROTOTYI This error occurs, when the R-PORT-PROTOTYPE-REF (comp_port) configured in the REQUESTER-IREF inside ASSEMBLY-CONNECTOR-PROTOTYPE is belong to the COMPONENT-PROTOTYPE-REF parameter should be configured in INNER-PORT-IREF of inside DELEGATION-CONNECTOR-PROTOTYPE. COMPONENT-PROTOTYPE-REF parameter should be configured in INNER-PORT-IREF of inside DELEGATION-CONNECTOR-PROTOTYPE. This error occurs, when the COMPONENT-PROTOTYPE-REF parameter is not configured in the INNER-PORT-IREF inside DELEGATION-CONNECTOR-PROTOTYPE. The PORT-PROTOTYPE-REF (\$comp_port) configured in the INNER-PORT-IREF inside DELEGATION-CONNECTOR-PROTOTYPE-REF (\$comp_port) configured in the INPORT-IREF inside DELEGATION-CONNECTOR-PROTOTYPE-REF (\$comp_port) configured in the DELEGATION-CONNECTOR-PROTOTYPE-REF. The OUTER-PORT-REF (comp_port) configured in the DELEGATION-CONNECTOR-PROTOTYPE-REF. The OUTER-PORT-REF (comp_port) configured in the DELEGATION-CONNECTOR-PROTOTYPE belong to the composition_path). SwimpiPolicy is set to MEASUREMENT-POINT for the variable data prototype of Variable Path. COMPU-NUMERATOR V2 for compumethod is configured as 0. It should be a non-zero number. This error occurs, when the SwimpiPolicy is not set to MEASUREMENT-POINT for the variable data prototype of Variable Access Path. COMPU-NUMERATOR V2 for compumethod is configured as 0. It should be a non-zero number. This error occurs, when the Invalidation policy is not configured for the variable data prototype of path (vdp_path). Symbol name should be unique. This error occurs, when the Symbol name is not unique Symbol Name should be unique if the SHORT-NAME of the SW-COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE (vdp) was a configured for the PARAMETER-DATA-PROTOTYPE (vdp)		111111111111111111111111111111111111111
Inis error occurs, when the R-PORI-PROIDTYPE-REF (comp_port) configured in the REQUESTER-IREF inside ASSEMBLY-CONNECTOR-PROTOTYPE is belong to the COMPC PROTOTYPE-REF. COMPONENT-PROTOTYPE-REF parameter should be configured in INNER-PORT-IREF or inside DELEGATION-CONNECTOR-PROTOTYPE. This error occurs, when the COMPONENT-PROTOTYPE-REF parameter is not configure INNER-PORT-IREF container inside DELEGATION-CONNECTOR-PROTOTYPE. The PORT-PROTOTYPE-REF (\$comp_port) configured in the INNER-PORT-IREF inside DELEGATION-CONNECTOR-PROTOTYPE does not belong to the COMPONENT-PROTOTYPE DELEGATION-CONNECTOR-PROTOTYPE belong to the COMPONENT-PROTOTYPE-REF (\$comp_port) configured in the INPORT-IREF inside DELEGATION-CONNECTOR-PROTOTYPE belong to the COMPONENT PROTOTYPE-REF. The OUTER-PORT-REF (comp_port) configured in the DELEGATION-CONNECTOR-PRO does not belong to the composition (composition_path). This error occurs, when the OUTER-PORT-REF (comp_port) configured in the DELEGATION-CONNECTOR-PRO does not belong to the composition (composition_path). SwImpiPolicy is set to MEASUREMENT-POINT for the variable data prototype of Variable Path. This error occurs, when the SwImpiPolicy is not set to MEASUREMENT-POINT for the valuate prototype of Variable Access Path. COMPU-NUMERATOR V2 for compumethod is configured as 0. It should be a non-zero number. This error occurs, when the COMPU-NUMERATOR V2 for comp method (path1) is configured in policy is not configured for the variable data prototype of path (vdp_path). Symbol name should be unique. This error occurs, when the Symbol name is not unique Symbol name should be unique if the SHORT-NAME of the SW-COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE (vdp) w LOMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE (vdp) w		ASSEMBLY-CONNECTOR-PROTOTYPE does not belong to the COMPONENT-PROTOTYPE-REF.
REQUESTER-IREF inside ASSEMBLY-CONNECTOR-PROTOTYPE is belong to the COMPO PROTOTYPE-REF. COMPONENT-PROTOTYPE-REF parameter should be configured in INNER-PORT-IREF or inside DELEGATION-CONNECTOR-PROTOTYPE. This error occurs, when the COMPONENT-PROTOTYPE-REF parameter is not configurer INNER-PORT-IREF container inside DELEGATION-CONNECTOR-PROTOTYPE. The PORT-PROTOTYPE-REF (\$comp_port) configured in the INNER-PORT-IREF inside DELEGATION-CONNECTOR-PROTOTYPE does not belong to the COMPONENT-PROTOTYPE DELEGATION-CONNECTOR-PROTOTYPE belong to the COMPONENT-PROTOTYPE-REF inside DELEGATION-CONNECTOR-PROTOTYPE belong to the COMPONENT-PROTOTYPE-REF. The OUTER-PORT-REF (comp_port) configured in the DELEGATION-CONNECTOR-PROTOTYPE belong to the composition (composition_path). This error occurs, when the OUTER-PORT-REF (comp_port) configured in the DELEGATION-CONNECTOR-PROTOTYPE belong to the composition (composition_path). SwImplPolicy is set to MEASUREMENT-POINT for the variable data prototype of Variab Path. This error occurs, when the SwImplPolicy is not set to MEASUREMENT-POINT for the valuate prototype of Variable Access Path. COMPU-NUMERATOR V2 for compumethod is configured as 0. It should be a non-zero number. This error occurs, when the COMPU-NUMERATOR V2 for comp method (path1) is configured. Invalidation policy is not configured for the variable data prototype of path (vdp_path). Symbol name should be unique. This error occurs, when the Symbol name is not unique Symbol Name should be unique if the SHORT-NAME of the SW-COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE (vdp) w COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE (vdp) w	131	This is a super property of the super supe
PROTOTYPE-REF. COMPONENT-PROTOTYPE-REF parameter should be configured in INNER-PORT-IREF of inside DELEGATION-CONNECTOR-PROTOTYPE. This error occurs, when the COMPONENT-PROTOTYPE-REF parameter is not configure INNER-PORT-IREF container inside DELEGATION-CONNECTOR-PROTOTYPE. The PORT-PROTOTYPE-REF (\$comp_port) configured in the INNER-PORT-IREF inside DELEGATION-CONNECTOR-PROTOTYPE does not belong to the COMPONENT-PROTOTYPE net inside DELEGATION-CONNECTOR-PROTOTYPE belong to the COMPONENT-PROTOTYPE-REF. The OUTER-PORT-REF (comp_port) configured in the DELEGATION-CONNECTOR-PROTOTYPE belong to the composition composition_path). This error occurs, when the OUTER-PORT-REF (comp_port) configured in the DELEGATION-CONNECTOR-PROTOTYPE belong to the composition composition_path). SwImplPolicy is set to MEASUREMENT-POINT for the variable data prototype of Variab Path. This error occurs, when the SwImplPolicy is not set to MEASUREMENT-POINT for the variable data prototype of Variable Access Path. COMPU-NUMERATOR V2 for compumethod is configured as 0. It should be a non-zero number. This error occurs, when the COMPU-NUMERATOR V2 for comp method (path1) is configured. Invalidation policy is not configured for the variable data prototype of path (vdp_path). Symbol name should be unique. This error occurs, when the Symbol name is not unique Symbol Name should be unique if the SHORT-NAME of the SW-COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE (vdp) with the strong path of the Should not be configured for the PARAMETER-DATA-PROTOTYPE (vdp) with the strong path of the Should not be configured for the PARAMETER-DATA-PROTOTYPE (vdp) with the strong path of the Should not be configured for the PARAMETER-DATA-PROTOTYPE (vdp) with the strong path of the strong path of the Should not be configured for the PARAMETER-DATA-PROTOTYPE (vdp) with the strong path of the strong path of the strong path of the strong path of the Should not be configured for the PARAMETER-DATA-PROTOTYP		•
COMPONENT-PROTOTYPE-REF parameter should be configured in INNER-PORT-IREF of inside DELEGATION-CONNECTOR-PROTOTYPE. This error occurs, when the COMPONENT-PROTOTYPE-REF parameter is not configured INNER-PORT-IREF container inside DELEGATION-CONNECTOR-PROTOTYPE. The PORT-PROTOTYPE-REF (\$comp_port) configured in the INNER-PORT-IREF inside DELEGATION-CONNECTOR-PROTOTYPE does not belong to the COMPONENT-PROTOTYPE DELEGATION-CONNECTOR-PROTOTYPE belong to the COMPONENT-PROTOTYPE PROTOTYPE-REF. This error occurs, when the PORT-PROTOTYPE-REF (\$comp_port) configured in the INPROTOTYPE-REF. The OUTER-PORT-REF (comp_port) configured in the DELEGATION-CONNECTOR-PROTOTYPE belong to the composition (composition_path). This error occurs, when the OUTER-PORT-REF (comp_port) configured in the DELEGATION-CONNECTOR-PROTOTYPE belong to the composition (composition_path). SwimpiPolicy is set to MEASUREMENT-POINT for the variable data prototype of Variab Path. This error occurs, when the SwimpiPolicy is not set to MEASUREMENT-POINT for the variable data prototype of Variable Access Path. COMPU-NUMERATOR V2 for compumethod is configured as 0. It should be a non-zero number. This error occurs, when the COMPU-NUMERATOR V2 for comp method (path1) is configured. This error occurs, when the Invalidation policy is not configured for the variable data prototype of path (vdp_path). Symbol name should be unique. This error occurs, when the Symbol name is not unique Symbol Name should be unique if the SHORT-NAME of the SW-COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE (vdp) were all the parameters and the parameters and the SW-COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE (vdp) were all the parameters and the parameters and the sweet and the sw		_
inside DELEGATION-CONNECTOR-PROTOTYPE. This error occurs, when the COMPONENT-PROTOTYPE-REF parameter is not configure INNER-PORT-IREF container inside DELEGATION-CONNECTOR-PROTOTYPE. The PORT-PROTOTYPE-REF (\$comp_port) configured in the INNER-PORT-IREF inside DELEGATION-CONNECTOR-PROTOTYPE does not belong to the COMPONENT-PROTOTYPE PORT-IREF inside DELEGATION-CONNECTOR-PROTOTYPE belong to the COMPONENT-PROTOTYPE-REF inside DELEGATION-CONNECTOR-PROTOTYPE belong to the COMPONENT-PROTOTYPE-REF. The OUTER-PORT-REF (comp_port) configured in the DELEGATION-CONNECTOR-PRO does not belong to the composition (composition_path). This error occurs, when the OUTER-PORT-REF (comp_port) configured in the DELEGATION-CONNECTOR-PROTOTYPE belong to the composition (composition_path). SwImpIPOlicy is set to MEASUREMENT-POINT for the variable data prototype of Variab Path. This error occurs, when the SwImpIPOlicy is not set to MEASUREMENT-POINT for the variable data prototype of Variable Access Path. COMPU-NUMERATOR V2 for compumethod is configured as 0. It should be a non-zero number. This error occurs, when the COMPU-NUMERATOR V2 for comp method (path1) is configured. This error occurs, when the Invalidation policy is not configured for the variable data prototype of path (vdp_path). Symbol name should be unique. This error occurs, when the Symbol name is not unique Symbol Name should be unique if the SHORT-NAME of the SW-COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE (vdp) were applicated.		1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
This error occurs, when the COMPONENT-PROTOTYPE-REF parameter is not configure INNER-PORT-IREF container inside DELEGATION-CONNECTOR-PROTOTYPE. The PORT-PROTOTYPE-REF (\$comp_port) configured in the INNER-PORT-IREF inside DELEGATION-CONNECTOR-PROTOTYPE does not belong to the COMPONENT-PROTOTYPE for inside DELEGATION-CONNECTOR-PROTOTYPE belong to the COMPONENT-PROTOTYPE-REF inside DELEGATION-CONNECTOR-PROTOTYPE belong to the COMPONENT-PROTOTYPE-REF. The OUTER-PORT-REF (comp_port) configured in the DELEGATION-CONNECTOR-PROTOTYPE-REF. This error occurs, when the OUTER-PORT-REF (comp_port) configured in the DELEGATION-CONNECTOR-PROTOTYPE belong to the composition (composition_path). SwimpIPolicy is set to MEASUREMENT-POINT for the variable data prototype of Variable Path. This error occurs, when the SwimpIPolicy is not set to MEASUREMENT-POINT for the valuate prototype of Variable Access Path. COMPU-NUMERATOR V2 for compumethod is configured as 0. It should be a non-zero number. This error occurs, when the COMPU-NUMERATOR V2 for comp method (path1) is configured. This error occurs, when the Invalidation policy is not configured for the variable data prototype of path (vdp_path). Symbol name should be unique. This error occurs, when the Symbol name is not unique Symbol Name should be unique if the SHORT-NAME of the SW-COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE (vdp) w		,
INNER-PORT-IREF container inside DELEGATION-CONNECTOR-PROTOTYPE. The PORT-PROTOTYPE-REF (\$comp_port) configured in the INNER-PORT-IREF inside DELEGATION-CONNECTOR-PROTOTYPE does not belong to the COMPONENT-PROTOT PROTOTYPE-REF (\$comp_port) configured in the INPORT-IREF inside DELEGATION-CONNECTOR-PROTOTYPE-REF (\$comp_port) configured in the INPORT-IREF inside DELEGATION-CONNECTOR-PROTOTYPE belong to the COMPONENT PROTOTYPE-REF. The OUTER-PORT-REF (comp_port) configured in the DELEGATION-CONNECTOR-PRO does not belong to the composition (composition_path). This error occurs, when the OUTER-PORT-REF (comp_port) configured in the DELEGAT (CONNECTOR-PROTOTYPE belong to the composition (composition_path). SwImpiPolicy is set to MEASUREMENT-POINT for the variable data prototype of Variab Path. This error occurs, when the SwImplPolicy is not set to MEASUREMENT-POINT for the variable path. COMPU-NUMERATOR V2 for compumethod is configured as 0. It should be a non-zero number. This error occurs, when the COMPU-NUMERATOR V2 for comp method (path1) is configured. This error occurs, when the Invalidation policy is not configured for the variable data prof path (vdp_path). Symbol name should be unique. This error occurs, when the Symbol name is not unique Symbol Name should be unique if the SHORT-NAME of the SW-COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE (vdp) w	132	
The PORT-PROTOTYPE-REF (\$comp_port) configured in the INNER-PORT-IREF inside DELEGATION-CONNECTOR-PROTOTYPE does not belong to the COMPONENT-PROTOT This error occurs, when the PORT-PROTOTYPE-REF (\$comp_port) configured in the IN PORT-IREF inside DELEGATION-CONNECTOR-PROTOTYPE belong to the COMPONENT PROTOTYPE-REF. The OUTER-PORT-REF (comp_port) configured in the DELEGATION-CONNECTOR-PROTOTYPE belong to the composition composition_path). This error occurs, when the OUTER-PORT-REF (comp_port) configured in the DELEGATION-CONNECTOR-PROTOTYPE belong to the composition (composition_path). SwImplPolicy is set to MEASUREMENT-POINT for the variable data prototype of Variable Path. This error occurs, when the SwImplPolicy is not set to MEASUREMENT-POINT for the variable data prototype of Variable Access Path. COMPU-NUMERATOR V2 for compumethod is configured as 0. It should be a non-zero number. This error occurs, when the COMPU-NUMERATOR V2 for comp method (path1) is configured. Invalidation policy is not configured for the variable data prototype of path (vdp_path). Symbol name should be unique. This error occurs, when the Symbol name is not unique Symbol Name should be unique if the SHORT-NAME of the SW-COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE (vdp) w		This error occurs, when the COMPONENT-PROTOTYPE-REF parameter is not configured in
DELEGATION-CONNECTOR-PROTOTYPE does not belong to the COMPONENT-PROTOT This error occurs, when the PORT-PROTOTYPE-REF (\$comp_port) configured in the IN PORT-IREF inside DELEGATION-CONNECTOR-PROTOTYPE belong to the COMPONENT PROTOTYPE-REF. The OUTER-PORT-REF (comp_port) configured in the DELEGATION-CONNECTOR-PRO does not belong to the composition (composition_path). This error occurs, when the OUTER-PORT-REF (comp_port) configured in the DELEGA (CONNECTOR-PROTOTYPE belong to the composition (composition_path). SwImplPolicy is set to MEASUREMENT-POINT for the variable data prototype of Variab Path. This error occurs, when the SwImplPolicy is not set to MEASUREMENT-POINT for the v data prototype of Variable Access Path. COMPU-NUMERATOR V2 for compumethod is configured as 0. It should be a non-zero number. This error occurs, when the COMPU-NUMERATOR V2 for comp method (path1) is conf 0. Invalidation policy is not configured for the variable data prototype of path (vdp_path). Symbol name should be unique. This error occurs, when the Symbol name is not unique Symbol Name should be unique if the SHORT-NAME of the SW-COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE (vdp) w		INNER-PORT-IREF container inside DELEGATION-CONNECTOR-PROTOTYPE.
This error occurs, when the PORT-PROTOTYPE-REF (\$comp_port) configured in the IN PORT-IREF inside DELEGATION-CONNECTOR-PROTOTYPE belong to the COMPONENT PROTOTYPE-REF. The OUTER-PORT-REF (comp_port) configured in the DELEGATION-CONNECTOR-PRO does not belong to the composition (composition_path). This error occurs, when the OUTER-PORT-REF (comp_port) configured in the DELEGATION-CONNECTOR-PROTOTYPE belong to the composition (composition_path). SwImplPolicy is set to MEASUREMENT-POINT for the variable data prototype of Variab Path. This error occurs, when the SwImplPolicy is not set to MEASUREMENT-POINT for the variable data prototype of Variable Access Path. COMPU-NUMERATOR V2 for compumethod is configured as 0. It should be a non-zero number. This error occurs, when the COMPU-NUMERATOR V2 for comp method (path1) is conformation to policy is not configured for the variable data prototype of path (vdp_path). This error occurs, when the Invalidation policy is not configured for the variable data prototype of path (vdp_path). Symbol name should be unique. This error occurs, when the Symbol name is not unique Symbol Name should be unique if the SHORT-NAME of the SW-COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE (vdp) w		• • • • • • • • • • • • • • • • • • • •
This error occurs, when the PORT-PROTOTYPE-REF (\$comp_port) configured in the IN PORT-IREF inside DELEGATION-CONNECTOR-PROTOTYPE belong to the COMPONENT-PROTOTYPE-REF. The OUTER-PORT-REF (comp_port) configured in the DELEGATION-CONNECTOR-PRO does not belong to the composition (composition_path). This error occurs, when the OUTER-PORT-REF (comp_port) configured in the DELEGA' CONNECTOR-PROTOTYPE belong to the composition (composition_path). SwImplPolicy is set to MEASUREMENT-POINT for the variable data prototype of Variab Path. This error occurs, when the SwImplPolicy is not set to MEASUREMENT-POINT for the v data prototype of Variable Access Path. COMPU-NUMERATOR V2 for compumethod is configured as 0. It should be a non-zero number. This error occurs, when the COMPU-NUMERATOR V2 for comp method (path1) is confounded. Invalidation policy is not configured for the variable data prototype of path (vdp_path). Symbol name should be unique. This error occurs, when the Invalidation policy is not configured for the variable data p of path (vdp_path). Symbol name should be unique. This error occurs, when the Symbol name is not unique Symbol Name should be unique if the SHORT-NAME of the SW-COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE (vdp) w		DELEGATION-CONNECTOR-PROTOTYPE does not belong to the COMPONENT-PROTOTYPE-RE
PORT-IREF inside DELEGATION-CONNECTOR-PROTOTYPE belong to the COMPONENT PROTOTYPE-REF. The OUTER-PORT-REF (comp_port) configured in the DELEGATION-CONNECTOR-PRO does not belong to the composition (composition_path). This error occurs, when the OUTER-PORT-REF (comp_port) configured in the DELEGATION-CONNECTOR-PROTOTYPE belong to the composition (composition_path). SwimplPolicy is set to MEASUREMENT-POINT for the variable data prototype of Variab Path. This error occurs, when the SwimplPolicy is not set to MEASUREMENT-POINT for the variation data prototype of Variable Access Path. COMPU-NUMERATOR V2 for compumethod is configured as 0. It should be a non-zero number. This error occurs, when the COMPU-NUMERATOR V2 for comp method (path1) is configured in the variable data prototype of path (vdp_path). Symbol name should be unique. This error occurs, when the Invalidation policy is not configured for the variable data prototype of path (vdp_path). Symbol name should be unique. This error occurs, when the Symbol name is not unique Symbol Name should be unique if the SHORT-NAME of the SW-COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE (vdp) w	133	This error occurs when the BORT-BROTOTVDE-BEE /\$comp port) configured in the INNER-
PROTOTYPE-REF. The OUTER-PORT-REF (comp_port) configured in the DELEGATION-CONNECTOR-PRO does not belong to the composition (composition_path). This error occurs, when the OUTER-PORT-REF (comp_port) configured in the DELEGA CONNECTOR-PROTOTYPE belong to the composition (composition_path). SwImplPolicy is set to MEASUREMENT-POINT for the variable data prototype of Variab Path. This error occurs, when the SwImplPolicy is not set to MEASUREMENT-POINT for the variable data prototype of Variable Access Path. COMPU-NUMERATOR V2 for compumethod is configured as 0. It should be a non-zero number. This error occurs, when the COMPU-NUMERATOR V2 for comp method (path1) is configured in the variable data prototype of path (vdp_path). Symbol name should be unique. This error occurs, when the Invalidation policy is not configured for the variable data prototype of path (vdp_path). Symbol name should be unique. This error occurs, when the Symbol name is not unique Symbol Name should be unique if the SHORT-NAME of the SW-COMPONENT is duplicated. This error occurs, when the Symbol Name is not unique if the SHORT-NAME of the SW-COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE (vdp) w		• • • • • • • • • • • • • • • • • • • •
does not belong to the composition \(\composition_path \). This error occurs, when the OUTER-PORT-REF \(\comp_port \rangle \configured \) in the DELEGA' CONNECTOR-PROTOTYPE belong to the composition \(\composition_path \rangle \). SwImplPolicy is set to MEASUREMENT-POINT for the variable data prototype of Variab Path. This error occurs, when the SwImplPolicy is not set to MEASUREMENT-POINT for the v data prototype of Variable Access Path. COMPU-NUMERATOR V2 for compumethod is configured as 0. It should be a non-zero number. This error occurs, when the COMPU-NUMERATOR V2 for comp method \(\text{path} 1 \rangle \) is confounded in the variable data prototype of path \(\text{vdp_path} \rangle \). Invalidation policy is not configured for the variable data prototype of path \(\text{vdp_path} \rangle \). Symbol name should be unique. This error occurs, when the Symbol name is not unique Symbol Name should be unique if the SHORT-NAME of the SW-COMPONENT is duplicated. This error occurs, when the Symbol Name is not unique if the SHORT-NAME of the SW-COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE \(\text{vdp} \rangle		_
does not belong to the composition \(\composition_path \). This error occurs, when the OUTER-PORT-REF \(\comp_port \rangle \) configured in the DELEGA' \(\convector \convector \convector \) CONNECTOR-PROTOTYPE belong to the composition \(\composition_path \rangle \). SwImplPolicy is set to MEASUREMENT-POINT for the variable data prototype of Variable Path. This error occurs, when the SwImplPolicy is not set to MEASUREMENT-POINT for the variable path. COMPU-NUMERATOR V2 for compumethod is configured as 0. It should be a non-zero number. This error occurs, when the COMPU-NUMERATOR V2 for comp method \(\convertible \text{path} \) is confounded in the variable data prototype of path \(\convertible \text{path} \rangle \). Invalidation policy is not configured for the variable data prototype of path \(\convertible \text{path} \rangle \). Symbol name should be unique. This error occurs, when the Symbol name is not unique Symbol Name should be unique if the SHORT-NAME of the SW-COMPONENT is duplicated. This error occurs, when the Symbol Name is not unique if the SHORT-NAME of the SW COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE \(\convertible \convertible \convertible \).		The OUTER-PORT-REF (comp_port) configured in the DELEGATION-CONNECTOR-PROTOTYPE
This error occurs, when the OUTER-PORT-REF (comp_port) configured in the DELEGA' CONNECTOR-PROTOTYPE belong to the composition (composition_path). SwImplPolicy is set to MEASUREMENT-POINT for the variable data prototype of Variab Path. This error occurs, when the SwImplPolicy is not set to MEASUREMENT-POINT for the variable data prototype of Variable Access Path. COMPU-NUMERATOR V2 for compumethod is configured as 0. It should be a non-zero number. This error occurs, when the COMPU-NUMERATOR V2 for comp method (path1) is configured in the variable data prototype of path (vdp_path). This error occurs, when the Invalidation policy is not configured for the variable data prototype of path (vdp_path). Symbol name should be unique. This error occurs, when the Symbol name is not unique Symbol Name should be unique if the SHORT-NAME of the SW-COMPONENT is duplicated. This error occurs, when the Symbol Name is not unique if the SHORT-NAME of the SW-COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE (vdp) w		
CONNECTOR-PROTOTYPE belong to the composition (composition_path). SwImpIPolicy is set to MEASUREMENT-POINT for the variable data prototype of Variab Path. This error occurs, when the SwImpIPolicy is not set to MEASUREMENT-POINT for the variable Access Path. COMPU-NUMERATOR V2 for compumethod is configured as 0. It should be a non-zero number. This error occurs, when the COMPU-NUMERATOR V2 for comp method (path1) is configured in the variable data prototype of path (vdp_path). This error occurs, when the Invalidation policy is not configured for the variable data profigured for the SW-COMPONENT is duplicated. This error occurs, when the Symbol name is not unique if the SHORT-NAME of the SW-COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE (vdp) w	134	
SwImplPolicy is set to MEASUREMENT-POINT for the variable data prototype of Variab Path. This error occurs, when the SwImplPolicy is not set to MEASUREMENT-POINT for the variable prototype of Variable Access Path. COMPU-NUMERATOR V2 for compumethod is configured as 0. It should be a non-zero number. This error occurs, when the COMPU-NUMERATOR V2 for comp method (path1) is confo. Invalidation policy is not configured for the variable data prototype of path (vdp_path). This error occurs, when the Invalidation policy is not configured for the variable data prototype of path (vdp_path). Symbol name should be unique. This error occurs, when the Symbol name is not unique Symbol Name should be unique if the SHORT-NAME of the SW-COMPONENT is duplicated. This error occurs, when the Symbol Name is not unique if the SHORT-NAME of the SW-COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE (vdp) w		This error occurs, when the OUTER-PORT-REF (comp_port) configured in the DELEGATION-
This error occurs, when the SwImplPolicy is not set to MEASUREMENT-POINT for the vidata prototype of Variable Access Path. COMPU-NUMERATOR V2 for compumethod is configured as 0. It should be a non-zero number. This error occurs, when the COMPU-NUMERATOR V2 for comp method \(\text{path} 1 \) is configured in the variable data prototype of path \(\text{vdp_path} \). Invalidation policy is not configured for the variable data prototype of path \(\text{vdp_path} \). Symbol name should be unique. This error occurs, when the Symbol name is not unique Symbol Name should be unique if the SHORT-NAME of the SW-COMPONENT is duplicated. This error occurs, when the Symbol Name is not unique if the SHORT-NAME of the SW-COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE \(\text{vdp} \) w		
This error occurs, when the SwImplPolicy is not set to MEASUREMENT-POINT for the vidata prototype of Variable Access Path. COMPU-NUMERATOR V2 for compumethod is configured as 0. It should be a non-zero number. This error occurs, when the COMPU-NUMERATOR V2 for comp method \(\text{path1}\) is configured on the variable data prototype of path \(\text{vdp_path}\). Invalidation policy is not configured for the variable data prototype of path \(\text{vdp_path}\). Symbol name should be unique. This error occurs, when the Symbol name is not unique Symbol Name should be unique if the SHORT-NAME of the SW-COMPONENT is duplicated. This error occurs, when the Symbol Name is not unique if the SHORT-NAME of the SW COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE \(\text{vdp}\) w		, , ,
This error occurs, when the SwImplPolicy is not set to MEASUREMENT-POINT for the vidata prototype of Variable Access Path. COMPU-NUMERATOR V2 for compumethod is configured as 0. It should be a non-zero number. This error occurs, when the COMPU-NUMERATOR V2 for comp method (path1) is confidented in the variable data prototype of path (vdp_path). This error occurs, when the Invalidation policy is not configured for the variable data profipath (vdp_path). Symbol name should be unique. This error occurs, when the Symbol name is not unique Symbol Name should be unique if the SHORT-NAME of the SW-COMPONENT is duplicated. This error occurs, when the Symbol Name is not unique if the SHORT-NAME of the SW-COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE (vdp) w	125	Path.
data prototype of Variable Access Path. COMPU-NUMERATOR V2 for compumethod is configured as 0. It should be a non-zero number. This error occurs, when the COMPU-NUMERATOR V2 for comp method \(\text{path} 1 \) is confo. Invalidation policy is not configured for the variable data prototype of path \(\text{vdp_path} \) This error occurs, when the Invalidation policy is not configured for the variable data prototype of path \(\text{vdp_path} \). Symbol name should be unique. This error occurs, when the Symbol name is not unique Symbol Name should be unique if the SHORT-NAME of the SW-COMPONENT is duplicated. This error occurs, when the Symbol Name is not unique if the SHORT-NAME of the SW COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE \(\text{vdp} \) w	133	This error occurs when the Swimpipolicy is not set to MEASI IPEMENT-POINT for the variable
COMPU-NUMERATOR V2 for compumethod is configured as 0. It should be a non-zero number. This error occurs, when the COMPU-NUMERATOR V2 for comp method \(\text{path} 1 \) is confo. Invalidation policy is not configured for the variable data prototype of path \(\text{vdp_path} \). This error occurs, when the Invalidation policy is not configured for the variable data prototype of path \(\text{vdp_path} \). Symbol name should be unique. This error occurs, when the Symbol name is not unique Symbol Name should be unique if the SHORT-NAME of the SW-COMPONENT is duplicated. This error occurs, when the Symbol Name is not unique if the SHORT-NAME of the SW COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE \(\text{vdp} \) w		
number. This error occurs, when the COMPU-NUMERATOR V2 for comp method <path1> is confo. Invalidation policy is not configured for the variable data prototype of path <vdp_path> This error occurs, when the Invalidation policy is not configured for the variable data profopath <vdp_path>. Symbol name should be unique. This error occurs, when the Symbol name is not unique Symbol Name should be unique if the SHORT-NAME of the SW-COMPONENT is duplicated. This error occurs, when the Symbol Name is not unique if the SHORT-NAME of the SW-COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE <vdp> w</vdp></vdp_path></vdp_path></path1>		
This error occurs, when the COMPU-NUMERATOR V2 for comp method \(path1 \) is confo. Invalidation policy is not configured for the variable data prototype of path \(\vdp_path \) This error occurs, when the Invalidation policy is not configured for the variable data profound path \(\vdp_path \). Symbol name should be unique. This error occurs, when the Symbol name is not unique Symbol Name should be unique if the SHORT-NAME of the SW-COMPONENT is duplicated. This error occurs, when the Symbol Name is not unique if the SHORT-NAME of the SW-COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE \(\vdp \) w		·
Invalidation policy is not configured for the variable data prototype of path (vdp_path) This error occurs, when the Invalidation policy is not configured for the variable data profigured for the v	136	
Invalidation policy is not configured for the variable data prototype of path \(\vdp_path \) This error occurs, when the Invalidation policy is not configured for the variable data p of path \(\vdp_path \rangle \). Symbol name should be unique. This error occurs, when the Symbol name is not unique Symbol Name should be unique if the SHORT-NAME of the SW-COMPONENT is duplicated. This error occurs, when the Symbol Name is not unique if the SHORT-NAME of the SW COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE \(\vdp \rangle \) w		This error occurs, when the COMPU-NUMERATOR V2 for comp method <path1> is configured a</path1>
This error occurs, when the Invalidation policy is not configured for the variable data prof path (vdp_path). Symbol name should be unique. This error occurs, when the Symbol name is not unique Symbol Name should be unique if the SHORT-NAME of the SW-COMPONENT is duplicated. This error occurs, when the Symbol Name is not unique if the SHORT-NAME of the SW COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE (vdp) w		
This error occurs, when the Invalidation policy is not configured for the variable data p of path (vdp_path). Symbol name should be unique. This error occurs, when the Symbol name is not unique Symbol Name should be unique if the SHORT-NAME of the SW-COMPONENT is duplicated. This error occurs, when the Symbol Name is not unique if the SHORT-NAME of the SW COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE (vdp) w		Invalidation policy is not configured for the variable data prototype of path (vdp_path).
of path (vdp_path). Symbol name should be unique. This error occurs, when the Symbol name is not unique Symbol Name should be unique if the SHORT-NAME of the SW-COMPONENT is duplicated. This error occurs, when the Symbol Name is not unique if the SHORT-NAME of the SW COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE (vdp) w	137	This error occurs, when the lovalidation policy is not configured for the variable data prototype
Symbol name should be unique. This error occurs, when the Symbol name is not unique Symbol Name should be unique if the SHORT-NAME of the SW-COMPONENT is duplicated. This error occurs, when the Symbol Name is not unique if the SHORT-NAME of the SW COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE (vdp) w		· · · · · · · · · · · · · · · · · · ·
This error occurs, when the Symbol name is not unique Symbol Name should be unique if the SHORT-NAME of the SW-COMPONENT is duplicated. This error occurs, when the Symbol Name is not unique if the SHORT-NAME of the SW COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE (vdp) w		
Symbol Name should be unique if the SHORT-NAME of the SW-COMPONENT is duplicated. This error occurs, when the Symbol Name is not unique if the SHORT-NAME of the SW COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE (vdp) w	139	
This error occurs, when the Symbol Name is not unique if the SHORT-NAME of the SW COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE \(\text{vdp} \rangle \) w		This error occurs, when the Symbol name is not unique
COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE (vdp) w		Symbol Name should be unique if the SHORT-NAME of the SW-COMPONENT is duplicated.
COMPONENT is duplicated. INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE (vdp) w	140	
INIT-VALUE should not be configured for the PARAMETER-DATA-PROTOTYPE (vdp) w		
· · · · · · · · · · · · · · · · · · ·		·
ITI I SUICUIIUGIVAIVESCIIECK IS EIIADIEU.	141	·
	1-7-1	Streamtian values check is eliabled.



SHT/SHTS 125 / 203

	This error occurs, when INIT-VALUE is configured for the PARAMETER-DATA-PROTOTYPE when the strictlnitialValuesCheck is enabled.
142	Data conversion not possible between a linear data representation and a texttable data representation.
142	This error occurs, when the conversion take place between a linear data representation and a texttable data representation.
	The ModeSwitchEvent Runnable/SchedulableEntity 〈runnable_path 〉 should not be used by another Event for which ModeDisablingDependency is configured in case of EXTENDED Task
144	This error occurs, when ModeSwitchEvent Runnable/SchedulableEntity < runnable_path > is used by another Event for which ModeDisablingDependency is configured in case of EXTENDED Task
145	Within a ModeSwitch Communication multiple P-PORTS should not be connected to the same R-PORT.
145	This error occurs, when in ModeSwitch Communication multiple P-PORTS are connected to the same R-PORT.
146	In Assembly connector both the provider port <pport_path> and requester port <rport_path> belongs to RPort.</rport_path></pport_path>
146	This error occurs, when In Assembly connector both the provider port and requester port belongs to RPort.
147	In Delegation connector both the inner port (inner_port_path) and outer port(outer_port_path should belongs to Provider port or Receiver port.
147	This error occurs, when In Delegation connector both the inner port and outer port are not belongs to Provider port or Receiver port.
148	Queue Length in ModeSwitchSender ComSpec of P-PORT <port_path> should be greater than zero.</port_path>
	This error occurs, when Queue Length in ModeSwitchSender ComSpec of P-PORT is less than zero.
149	More than one MODE-DECLARATION-GROUP is configured with same SHORT-NAME (mode_grp_sn) but have different INITIAL-MODES.
	This error occurs, when More than one MODE-DECLARATION-GROUP is configured with same SHORT-NAME but have different INITIAL-MODES.
150	Runnables/ BswSchedulabelEntities which are called Directly within Rte API's should not be mapped to any Ostask.
130	This error occurs, when Runnables which are called Directly within Rte API's are mapped to any Ostask.
151	The Priority of the Task of the event (which has DISABLED-MODE-IREF) should be higher than the priority of the task f ModeSwitchEvent (ms_event)
151	This error occurs, when The Priority of the Task of the event (which has DISABLED-MODE-IREF has lower priority than the priority of the task of ModeSwitchEvent.
152	ModeDeclarationGroup is mapped to more than one implementation datatype via DATA-TYPE-MAPPING-SET.
134	This error occurs, when ModeDeclarationGroup is mapped to more than one implementation datatype via DATA-TYPE-MAPPING-SET.

SHT/SHTS 126 / 203

	A communication path from an AUTOSAR Software Component to an ECU Abstraction located on a remote ECU should not be configured.
153	
	This error occurs, when a communication path from an AUTOSAR Software Component to an
	ECU Abstraction located on a remote ECU has configured.
	The MODE-DECLARATION-GROUP should be mapped to PRIMITIVE Datatype within the
	container MODE-REQUEST-TYPE-MAP in DATA-TYPE-MAPPING-SET.
154	Container Mode Readest Title With III BANA TITLE WATTING SET.
134	This error occurs, when the MODE-DECLARATION-GROUP is not mapped to PRIMITIVE Datatype
	within the container MODE-REQUEST-TYPE-MAP in DATA-TYPE-MAPPING-SET.
	The Event referenced by a WaitPoint should not have DisabledMode Configured.
155	
	This error occurs, when the Event referenced by a WaitPoint have DisabledMode Configured.
	TIME-OUT in MODE-SWITCHED-ACK and the TIME-OUT in WAIT-POINT should be same.
156	
130	This error occurs, when TIME-OUT in MODE-SWITCHED-ACK and the TIME-OUT in WAIT-POINT
	are not same.
	Initvalues for PARAMETER-REQUIRE-COM-SPEC are not configured for unconnected RPort.
157	This error occurs, when Initvalues for PARAMETER-REQUIRE-COM-SPEC are not configured for
	unconnected RPort.
	Require ports <port path=""> are attached to ParameterSwComponentTypes.</port>
	, , , , ,
158	However only provider ports must be attached to ParameterSwComponentTypes
	This error occurs, when require ports are attached to ParameterSwComponentTypes.
	The port referenced in PORT-PROTOTYPE-REF <port_path> for the VARIABLE-ACCESS</port_path>
	⟨access_path⟩ is not a P-PORT. However it should be a P-PORT.
159	
	This error occurs, when the port referenced in PORT-PROTOTYPE-REF for the VARIABLE-
	ACCESS is not a P-PORT.
	Qlength parameter for sender receiver queued communication should be configured as a non-
	zero positive value.
160	· ·
	This error occurs when Qlength parameter for sender receiver queued communication is not
	configured as a non-zero positive value.
	External-Replacement reference should be configured for the HANDLE-OUT-OF-RANGE
	•
4.64	EXTERNAL-REPLACEMENT.
161	
	This error occurs, when External-Replacement reference is not configured for the HANDLE-
	OUT-OF-RANGE EXTERNAL-REPLACEMENT.
	INIT-VALUE should be configured for the Variable Data Prototype of given Path(path).
162	
102	This error occurs, when INIT-VALUE is not configured for the Variable Data Prototype of given
	Path.
	Sw-System-Const value reference is not referred in SYSC-REF in component (comp) of port
	<pre>/port_name>.</pre>
163	4
	This error occurs, when Sw-System-Const value reference is not referred in SYSC-REF in
	component of port.
	More than one Asynchronous Server Call Result Point should not point to same Asynchronous
	Server Call Point.
165	Server Call Point.
165	This error occurs, when More than one Asynchronous Server Call Result Point pointing to same Asynchronous Server Call Point.

SHT/SHTS 127 / 203

	Application datatype (app_data) should be mapped to any implementation datatype in data
	mapping set.
166	
	This error occurs, when Application datatype (app_data) is not mapped to any implementation
	datatype in data mapping set.
	Same implementation datatype (used_data_type [-1]}) is configured twice with different
	implementation symbol.
167	
	This error occurs, when same implementation datatype is configured twice with different
	implementation symbol.
	Two or more Implementation Datatype (impl_name) having same symbol and different type
	declaration.
168	
	This error occurs, when Two or more Implementation Datatype (impl_name) having same
	symbol and different type declaration.
	Either of the MODE-SWITCH-POINT or the MANAGED-MODE-GROUP should be configured
	when a MODE-DECLARATION-GROUP-PROTOTYPE is synchronized.
169	
	This error occurs, when either of the MODE-SWITCH-POINT or the MANAGED-MODE-GROUP is
	not configured when a MODE-DECLARATION-GROUP-PROTOTYPE is synchronized.
	Duplicate Component for is Configured.
170	
	This error occurs, when duplicate Component is configured.
	IMPLEMENTATION-DATA-TYPE with category DATA_REFERENCE should not be referred in
	APPLICATION-SW-COMPONENT-TYPE.
171	
	This error occurs, when IMPLEMENTATION-DATA-TYPE with category DATA_REFERENCE is
	referred in APPLICATION-SW-COMPONENT-TYPE.
	DATA-PROTOTYPE which is referring to IMPLEMENTATION-DATA-TYPE with ARRAY-SIZE-
	SEMANTICS as VARIABLE should not be Unqueued and should be of type uint8.
172	Samuel as the way as a superior of the same superior and
.,_	This error occurs, when DATA-PROTOTYPE which is referring to IMPLEMENTATION-DATA-TYPE
	with ARRAY-SIZE-SEMANTICS as VARIABLE is Unqueued and should be of type uint8.
	RTE does not support receiving with wait points for VARIABLE-DATA-PROTOTYPE (vdp) when
	SW-IMPL-POLICY is unqueued.
173	SW IMI E 1 OLIC1 IS UNQUEUEd.
173	This error occurs, when wait points for VARIABLE-DATA-PROTOTYPE are configured when SW-
	IMPL-POLICY is unqueued.
	The ApplicationErrors with same ShortName are configured with different value.
	The Application of the Shorthame are configured with different value.
174	This array will assure when Application Frence with same as me do have different array Codes
	This error will occur when ApplicationErrors with same name do have different error Codes ApplicationErrors are conflicting.
	DataReceivedEvent \(\)
475	VariableDataPrototype <vdp> referenced by an NvDataInterface.</vdp>
175	This arms a series when a Data Data Data district is referred and 1 M MD 1 M A C
	This error occurs, when a DataReceivedEvent is referenced by a WaitPoint and references a
	VariableDataPrototype Referenced by an NvDataInterface.
	R-Port with an NvDataInterface (\$nvm_interface [-1]) is not connected and no
	NvRequireComSpec with a initValue.
176	
	This error occurs, when R-Port with an NvDataInterface is not connected and no
	NvRequireComSpec with an initValue.
	ON-EXIT Runnables should not have higher value for the Parameter RtePositionInTask than ON
177	TRANSITION/ON-ENTRY Runnables.
	ON-TRANSITION Runnables (\$runnable_path) should not have higher value for the Parameter

SHT/SHTS 128 / 203

	RtePositionInTask than ON-ENTRY Runnables.
	This error occurs, when ON-TRANSITION or ON-EXIT Runnables have higher value for the Parameter RtePositionInTask than the ON-ENTRY or ON-TRANSITION Runnables.
	Two or more DataReceivedEvents having same VariableDataPrototype trigger different runnable
	entities mapped to different tasks.
178	
	This error occurs, when two or more DataReceivedEvents having same VariableDataPrototype
	trigger different runnable entities mapped to different tasks.
	Two different runnables which are having wait points connected to the same data received
	event (dr_eve) should not be mapped to different Os Tasks.
179	
	This error occurs, when two different runnables which are having wait points connected to the
	same data received event are mapped to different Os Tasks.
	More than one DATA-RECEIVED-EVENT under the same INTERNAL-BEHAVIOR which is sharing
	the same VARIABLE-DATA-PROTOTYPE should not be mapped to different tasks.
180	
	This error occurs, when More than one DATA-RECEIVED-EVENT under the same INTERNAL-
	BEHAVIOR which is sharing the same VARIABLE-DATA-PROTOTYPE is mapped to different task
	Either RteUsedOsAlarmRef or RteUsedOsScheduleTableExpiryPointRef should be configured
	when the RteEventRef is referring to TIMING-EVENT or BACKGROUND-EVENT in
	RteEventtoTaskMapping.
181	
	This error occurs, when Either RteUsedOsAlarmRef or RteUsedOsScheduleTableExpiryPointRef
	not configured when the RteEventRef is referring to TIMING-EVENT or BACKGROUND-EVENT in
	RteEventtoTaskMapping.
	NativeDeclaration is not configured for the Implementation datatype (value).
184	This error occurs, when NativeDeclaration is not configured for the Implementation datatype
	(value).
	The same MODE-DECLARATION cannot be referred by both SWC-MODE-SWITCH-EVENT and DISABLED-MODE-IREF.
185	DISABLED-WODE-IKEF.
105	This error occurs, when the same MODE-DECLARATION is referred by both SWC-MODE-
	SWITCH-EVENT and DISABLED-MODE-IREF.
	For ON-TRANSITION Events both the MODE-DECLARATIONS should belong to the same MODE
	GROUP.
186	
	This error occurs, when for ON-TRANSITION Events both the MODE-DECLARATIONS are not
	belonging to the same MODE-GROUP.
	The interfaces configured for PORT-PROTOTYPE and configured for PORT-PROTOTYPE are not
	compatible as the number of ModeDeclarations in PORTS is not same.
187	
	This error occurs, when the interfaces configured for PORT-PROTOTYPE and configured for
	PORT-PROTOTYPE are not compatible.
	The interfaces configured for PORT-PROTOTYPE <p_port_path> and configured for PORT-</p_port_path>
	PROTOTYPE <r_port_path>are not compatible as the Shortnames for ModeDeclarations in</r_port_path>
188	PORTS are not same.
100	
	This error occurs, when the interfaces configured for PORT-PROTOTYPE both P port and R por
	·
	is not compatible as the Shortnames for ModeDeclarations in PORTS are not same.
	The interfaces configured for PORT-PROTOTYPE (p_port_path) and configured for PORT-
189	The interfaces configured for PORT-PROTOTYPE \(\rho_port_path \rangle \) and configured for PORT-PROTOTYPE \(\rho_port_path \rangle \) are not compatible as the INITIAL-MODE-REF for ModeDeclarations
189	The interfaces configured for PORT-PROTOTYPE (p_port_path) and configured for PORT-

SHT/SHTS 129 / 203

	This error occurs, when the interfaces configured for PORT-PROTOTYPE both P port and R port
	is not compatible as the INITIAL-MODE-REF for ModeDeclarations are not same.
	More than one IMPLEMENTATION-DATA-TYPE configured with same SHORT-NAME and
	different NATIVE-DECLARATION.
190	
	This error occurs, when the More than one IMPLEMENTATION-DATA-TYPE configured with
	same SHORT-NAME and different NATIVE-DECLARATION.
	More than one ImplementationDataType whose category is STRUCTURE or UNION have same
	ShortName but number of ImplementationDataTypeElement are different.
191	
	This error occurs, when the More than one STRUCTURE or UNION IMPLEMENTATION-DATA-
	TYPE having same SHORT-NAME but number of elements is different.
	Invalid value is not specified for the Implementation of given Path.
192	invalid value is not specified for the implementation of given rath,
132	This error occurs, when the Invalid value is not specified for the Implementation of given Path.
	SW-IMPL-POLICY should be configured as QUEUED for the DATA-ELEMENT which is mapped to
	PDU with ComlpduType equals to TP.
102	PDO with Compactype equals to TP.
193	This error occurs, when the SW-IMPL-POLICY is not configured as QUEUED for the DATA-
	·
	ELEMENT which is mapped to PDU with ComlpduType equals to TP. SUPPORTS-MULTIPLE-INSTANTIATION attribute should be set to true for the SWC-INTERNAL-
104	BEHAVIOR
194	TI'
	This error occurs, when the SUPPORTS-MULTIPLE-INSTANTIATION attribute is not set to true
	for the SWC-INTERNAL-BEHAVIOR.
	ENABLE-TAKE-ADDRESS attribute should be set to false for the PORT-REF since multiple
195	instances are configured for the APPLICATION-SW-COMPONENT.
	TI'
	This error occurs, when the ENABLE-TAKE-ADDRESS attribute is set to true.
	Software Component related information should not be configured in Basic Software Scheduler
100	Generation Phase.
196	
	This error occurs, when the Software Component related information is configured in Basic
	Software Scheduler Generation Phase.
	Duplicate Component is configured in same AR-PACKAGE.
197	
	This error occurs, when the Duplicate Component is configured in same AR-PACKAGE.
	Symbol Name should be configured if the SHORT-NAME of the SW-COMPONENT is
	duplicated.
198	
	This error occurs, when the Symbol Name is not configured but SHORT-NAME of the SW-
	COMPONENT is duplicated.
	Execution instances of Runnable entity are mapped to different preemption areas which is
	invalid.
	mvana,
199	invana.
199	
199	
199	This error occurs, when the Execution instances of Runnable entity are mapped to different pre-
199	This error occurs, when the Execution instances of Runnable entity are mapped to different pre- emption.
199	This error occurs, when the Execution instances of Runnable entity are mapped to different pre- emption. The TARGET-DATA-PROTOTYPE-REF/ Sender-Receiver interface referred in EVENT does not
199	This error occurs, when the Execution instances of Runnable entity are mapped to different pre- emption. The TARGET-DATA-PROTOTYPE-REF/ Sender-Receiver interface referred in EVENT does not match with the DATA-ELEMENT-REF/ Sender-Receiver interface given in the Port.
	This error occurs, when the Execution instances of Runnable entity are mapped to different pre- emption. The TARGET-DATA-PROTOTYPE-REF/ Sender-Receiver interface referred in EVENT does not match with the DATA-ELEMENT-REF/ Sender-Receiver interface given in the Port. The Sender-Receiver interface referred in EVENT does not match with the Sender-Receiver
	This error occurs, when the Execution instances of Runnable entity are mapped to different pre- emption. The TARGET-DATA-PROTOTYPE-REF/ Sender-Receiver interface referred in EVENT does not match with the DATA-ELEMENT-REF/ Sender-Receiver interface given in the Port. The Sender-Receiver interface referred in EVENT does not match with the Sender-Receiver

문서 번호 (DOC NO) SHT/SHTS 130 / 203

	given in the Port.
	The parameter 'BSW-ENTITY-REF' in the Container 'SWC-BSW-RUNNABLE-MAPPING' within 'SWC-BSW-MAPPING' cannot refer 'CAT-1' BSW-INTERRUPT-ENTITY SWC-BSW-MAPPING.
202	This error occurs, when the parameter 'BSW-ENTITY-REF' in the Container 'SWC-BSW-RUNNABLE-MAPPING' within 'SWC-BSW-MAPPING' not refer 'CAT-1' BSW-INTERRUPT-ENTITY SWC-BSW-MAPPING.
	The TARGET-DATA-PROTOTYPE-REF/ Sender-Receiver interface referred in VARIABLE-ACCESS does not match with the DATA-ELEMENT-REF/ Sender-Receiver interface given in the Port.
203	This error occurs, when The TARGET-DATA-PROTOTYPE-REF/ Sender-Receiver interface referred in VARIABLE-ACCESS does not match with the DATA-ELEMENT-REF/ Sender-Receiver interface given in the Port
204	The ClientServerInterface configured for PPortPrototype and the ClientServerInterface configured for RPortPrototype are not compatible as the ShortName of Operation configured for both the ClientServerInterfaces are not same.
	This error occurs, when the interfaces is not configured for 'P-PORT-PROTOTYPE' \(\rangle p \) port_path\(\rangle \) and \(\rangle r \) is not configured for 'R-PORT-PROTOTYPE'.
205	The Variable data prototype of Sender Receiver interfaces configured for P-PORT-PROTOTYPE i not compatible with the Variable data prototype of Sender Receiver interfaces configured for R-PORT-PROTOTYPE.
205	This error occurs, when the Variable data prototype of Sender Receiver interfaces configured fo P-PORT-PROTOTYPE is not compatible with the Variable data prototype of Sender Receiver interfaces configured for R-PORT-PROTOTYPE
	The OperationIref configured in OprationInvokedEvent and the OperationIref in ServerComSpector do not match.
206	This error occurs, when Either the OPERATION-IREF configured in OPERATION-INVOKED-EVEN and the OPERATION-IREF in SERVER-COM-SPEC do not match or OPERATION-IREF is not configured in SERVER-COM-SPEC
208	Same SystemSignal cannot be used by more than one Clients System Signal.
	This error occurs, when Same SystemSignal is used by more than one Clients System Signal. Different PredefinedVariants should not assign different values to the same PostBuildVariantCriterion for the same RtePostBuildVariantConfiguration PredefinedVariants.
209	This error occurs when Different PredefinedVariants are assigning different values to the same PostBuildVariantCriterion for the same RtePostBuildVariantConfiguration PredefinedVariants.
210	Some of OperationInvokedEvents which invoke same Runnable Entity are mapped to different OsTask or same .OsTask with different Position in Task, or are not mapped to OsTask
	This error occurs, when OperationInvokedEvents mapped to the same runnable are mapped to different task or to the same task with different position in task.
211	The number of elements in the datatype and the number of elements initialized do not match. This error occurs, when the numbers of elements in the datatype and the number of elements initialized are not same.
212	SENDER-RECEIVER-TO-SIGNAL-GROUP-MAPPING is configured for the PRIMITIVE datatype.
Z 1 Z	This error occurs, when SENDER-RECEIVER-TO-SIGNAL-GROUP-MAPPING is configured for PRIMITIVE datatype.

문서 번호 (DOC NO) SHT/SHTS 131 / 203

	SENDER-RECEIVER-TO-SIGNAL-MAPPING is configured for the COMPLEX datatype.
213	This error occurs, when SENDER-RECEIVER-TO-SIGNAL-MAPPING is configured for COMPLEX datatype.
	The datatype provided in ComSignalType does not match with the datatype provided in
214	ComSignal.
214	This array assure, whose datatives are vided in Complianal Type does not match with datatives
	This error occurs, when datatype provided in ComSignalType does not match with datatype provided in ComSignal.
	Number of elements in array does not match with number of signals in signalgroup.
215	This error occurs, when number of elements in array does not match with the number of signal configured in SignalGroup.
	Number of elements in structure does not match with number of signals in signalgroup.
216	
216	This error occurs, when number of elements in structure does not match with the number of signals configured in SignalGroup.
	The length of Array does not match with the length provided in ComSignalLength.
217	This area and the least of a second and the least of a second in
	This error occurs, when length of array is not same as the length configured in ComSignalLength.
	Sw-System-Const value reference referred in SYSC-REF in SW-SYSCOND of component
	⟨component⟩of port ⟨port⟩ is not valid.
218	
	This error occurs, when Sw-System-Const value referenced in SYSC-REF in SW-SYSCOND
	Of component (component name) of port (port name) is not valid.
	The task referred in EveToTskMap/BswEveToTskMap is invalid as Os container is not present.
219	This error occurs, when the task path specified in EveToTskMap/BswEveToTskMap is invalid as
	the OsContainer is not present.
	The MappingDirection for DATA-PROTOTYPE-MAPPING should not be
	'SECOND-TO-FIRST' if second data element is used for R port and first data element is used for
220	P port.
220	
	This error occurs, when the Data-Prototype is from second-to-first when second data element
	is used for Rport and the first data element is used by Pport.
	VT-ELEMENT should not be configured for the COMPU-METHOD if the CATEGORY attribute is
221	not configured.
	This error occurs, when Display format is not configured for the Compu-Method.
	The MappingDirection for DATA-PROTOTYPE-MAPPING should not be 'FIRST-TO-SECOND' if
	first data element is used for R port and second data element is used for
	Pport.
222	
	This error occurs, when the Data-Prototype is from first-to-second when first data element is
	used for Rport and the second data element is used by Pport.
	The START-ON-EVENT-REF Configured in RteEvent is not a Valid RUNNABLE-ENTITY.
223	
	This error occurs, The Start-On-Event-Ref (Runnable Entity) referred in RteEvent Container is
	not a valid runnable path.
	The RteEvent is referred more than once in RteEventToTaskMapping container.
224	This error occurs, when the RteEvent is referred more than once in RteEventToTaskMapping



SHT/SHTS 문서 번호 (DOC NO) 132 / 203

	Direction given for the IPduPort is invalid.
225	This error occurs, when the Direction is given for the IPduPort is IN and mapping is done for
	Rport or direction is given for the IPduPort is OUT and mapping is done for Pport.
	Base type of the configured record element <type_path> is not allowed in E2E configuration.</type_path>
226	This error occurs, when base type of the configured record element is present in E2E configuration.
	The VALUE of a MODE-DECLARATION and ON-TRANSITION-VALUE should be unique within a MODE-DECLARATION-GROUP.
227	TI:
	This error occurs, when the VALUE of a MODE-DECLARATION and ON-TRANSITION-VALUE are not unique within a MODE-DECLARATION-GROUP.
231	The Sw-Impl-Policy configured in variable data prototype of NV Data Interface is set to QUEUED.
	This error occurs, when the Sw-Impl-Policy configured in variable data prototype of NV Data Interface is set to QUEUED.
	The ImplementationDataType whose category is UNION should have at least two
232	ImplementationDataTypeElement as the sub element.
	This error occurs, when the Union Element is having less than two sub elements.
	The ImplementationDataType whose category is STRUCTURE should have at least one
233	ImplementationDataTypeElement as the sub element.
	This error occurs, when the structure Element is having less than one sub elements.
	The reference path used for the mention parameter is invalid parameter.
234	This error occurs, when the path of reference parameter is invalid.
	Type attribute in PerInstanceMemory of 'C' Type of respective path and the Implementation dat
	type shortname should not be same.
235	
	This error occurs, when the Type attribute in PerInstanceMemory of 'C' Type of respective path and the Implementation data type shortname is same.
	The Handle Out Of Range for Queue Send Com Spec should not be INVALIDE or DEFAULT or
	EXTERNAL-REPLACEMENT.
236	
	This error occurs, when the Handle Out Of Range for Queue Send Com Spec is INVALID or
	DEFAULT or EXTERNAL-REPLACEMENT.
	Identical TYPE attribute in Per Instance Memory of 'C' type is configured for the same TYPE
227	DEFINTION of component.
237	This array assure, whose Identical TVDE attribute in Day losts are Mamory of 'C' tyme is configure
	This error occurs, when Identical TYPE attribute in Per Instance Memory of 'C' type is configure for the same TYPE DEFINTION of component.
	The attribute swimplPolicy of a dataElement referenced by a QueuedSenderComSpec must be
	set to the value queued.
238	
	This error occurs, when the attribute swimplPolicy of a dataElement referenced by a
	QueuedSenderComSpec is not set to the value queued.
	An initial value cannot be specified when the implementation policy is set to queued.
239	
233	This error occurs, when an initial value is specified when the implementation policy is set to queued.

SHT/SHTS 133 / 203

	RteReceiverUsedOsEventRef parameter should be configured when the
	RtelocInteractionReturnValue is set to 'RTE_COM' for the Task Path.
240	
	This error occurs, when RteReceiverUsedOsEventRef parameter is not configured when the
	RtelocInteractionReturnValue is set to 'RTE_COM' for the Task Path.
	The TimingEvent and Background Event can not be mapped into OsTask which other RteEvent
	has been allocated.
241	
	This error occurs, when the RTE/BSW event is mapped to the ostask path which is same as the
	task mapped to Timing/Background event or when the Timing event and Background event are
	mapped to same ostask path.
	RTE does not support multiple instances for the component and partition.
242	This array accurs when the multiple instances for the component along with partition is
	This error occurs, when the multiple instances for the component along with partition is
	configured. MAX-DELTA-COUNTER-INIT should be configured for the EndToEndProfile <path></path>
243	MAX-DELIA-COONTER-INIT SHOUld be configured for the End to End for the Charles
243	This error occurs, when the MAX-DELTA-COUNTER-INIT is not configured for EndToEndProfile
	The value for DATA-ID should be in the range of 0-65535/0-255 when category is
	PROFILE_01/PROFILE_02 for the EndToEndProfile <path></path>
244	
	This error occurs, when the value for DATA-ID is not in the range of 0-65535/0-255 when
	category is PROFILE_01/ PROFILE_02 respectively for the EndToEndProfile
	The value for DATA-LENGTH should be in the range of 0-65535/0-240 when
	Category is PROFILE_02/PROFILE_01 respectively for the EndToEndProfile <path>.</path>
245	
	This error occurs, when the value for DATA-LENGTH is not in the range of 0-65535/0-240 whe
	category is PROFILE_01/ PROFILE_02 respectively for the EndToEndProfile
	The value for CRC-OFFSET should be in the range of 0-65535 when category is PROFILE_01 for
246	the EndToEndProfile <path>.</path>
246	This areas a series where the control for CDC OFFCFT is set in the group of O CFF2F where set are
	This error occurs, when the value for CRC-OFFSET is not in the range of 0-65535 when categor
	is PROFILE_01 for the EndToEndProfile. The value for DATA-ID-MODE should be in the range of 0-2 when sategory is PROFILE 01 for
	The value for DATA-ID-MODE should be in the range of 0-2 when category is PROFILE_01 for the EndToEndProfile <path>.</path>
247	the Endrochide (Fath).
247	This error occurs, when the value for DATA-ID-MODE is not in the range of 0-2 when category
	is PROFILE_01 for the EndToEndProfile.
	The value for COUNTER-OFFSET should be in the range of 0-65535 when category is
	PROFILE_01 for the EndToEndProfile <path>.</path>
248	
	This error occurs, when the value for COUNTER-OFFSET is not in the range of 0-65535 when
	category is PROFILE_01 for the EndToEndProfile.
	The value for MAX-DELTA-COUNTER-INIT should be in the range of 0-14/ 0-15, when category
	is PROFILE_01/PROFILE_02 respectively for the EndToEndProfile <path>.</path>
249	
	This error occurs, when the value for MAX-DELTA-COUNTER-INIT is not in the range of 0-14/ 0
	15 when category is PROFILE_01/ PROFILE_02 respectively for the EndToEndProfile
	There should be exact 1/16 DATA-IDs when the category is PROFILE_01/ PROFILE_02
	respectively for the EndToEndProfile <path>.</path>
250	
	This error occurs, when the DATA-IDs are not exactly 1 for PROFILE_01 or 16 for PROFILE_02 for
	the EndToEndProfile

SHT/SHTS 134 / 203

	The Mandatory Parameter RtelocInteractionReturnValue is not configured for 〈ECU Generation Path〉
251	This error occurs, when the RtelocInteractionReturnValue is not configured for given Generation path.
	BSW-MODE-SWITCHED-ACK-EVENT should be configured when TIMEOUT value is greater than
	zero For the PROVIDED-MODE-GROUP (Path).
252	
232	This error occurs, when the BSW-MODE-SWITCHED-ACK-EVENT is not configured when
	TIMEOUT value is greater than zero.
	BSW-MODE-SWITCHED-ACK-EVENT should be mapped to an Extended Task when TIMEOUT
	• •
253	value is greater than zero.
255	This array assure, when the BSW-MODE SWITCHED ACK EVENT is not manned to an Evtended
	This error occurs, when the BSW-MODE-SWITCHED-ACK-EVENT is not mapped to an Extended
	Task when TIMEOUT value is greater than zero.
	All the BSW-MODE-SWITCH-EVENT(Event Paths) of the REQUIRED-MODE-GROUP connected to
	the specific PROVIDED-MODE-GROUP should be mapped to the same task (Task Path).
254	
	This error occurs, when All the BSW-MODE-SWITCH-EVENT of the REQUIRED-MODE-GROUP
	connected to a specific PROVIDED-MODE-GROUP are not mapped to the same task.
	Task mapped to BSW-MODE-SWITCHED-ACK-EVENT (Event Path) should have higher priority
	than the Task priority of BSW-MODE-SWITCH-EVENT (Event Path) when TIMEOUT is greater
255	than zero.
	This error occurs, when the task mapped to BSW-MODE-SWITCHED-ACK-EVENT has less
	priority than task priority of BSW- MODE-SWITCH-EVENT when TIMEOUT is greater than zero.
	Position in Task is not configured for Event 〈Event Path〉 and Task〈Task Path〉.
258	
	This error occurs, when PositionInTask is not configured for the mentioned event and task path.
	Com notification is not configured for <signaltolpdu mapping="" path=""> since com notification is</signaltolpdu>
	mandatory for configuration that has one system signal shared by many isignals for receiving
259	System signal <system path="" signal="">.</system>
	This error occurs, when ComNotifictation is not configured when the configuration has one
	system signal shared by many isignals for the receiving System signal.
	Timeout value should be zero for the AsynchronousServerCallPoint as WaitPoint is not
	configured
261	configured
201	This error occurs, when waitpoint is not configured if timeout is configured for client server
	asynchronous communication.
	RteWaitOsEventRef in RteEventToTaskMapping should be configured for the
	AsynchronousServerCallReturnsEvent as WaitPoint is configured.
262	Asylicinoliousserver caliketoriis Event as waitroint is configured.
262	This area and the WeitOchardia at a discount if the control is an atom the
	This error occurs, when WaitOsEveRef is not configured if timeout configured is greater than
	zero for client server asynchronous communication,
	The interfaces \(\rangle p\) iface \(\rangle \) configured for P-PORT-PROTOTYPE \(\rangle p\) port_path \(\rangle \) and \(\rangle r\) iface \(\rangle \)
	configured for R-PORT-PROTOTYPE(r_port_path) are not compatible as the SHORT-NAMES for
	'VARIABLE-DATA-PROTOTYPE' configured for both the interfaces are not same.
263	
	This error occurs, when interfaces \(\rangle _ iface \rangle \) configured for P-PORT-PROTOTYPE \(\rangle _ port_path \rangle \)
	and $\langle r_i face \rangle$ configured for R-PORT-PROTOTYPE $\langle r_i path \rangle$ are not compatible as the
	SHORT-NAMES for 'VARIABLE-DATA-PROTOTYPE' configured for both the interfaces are not
	same.
264	AsynchronousServerCallResultPoint not configured for the AsynchronousServerCallPoint.
207	

SHT/SHTS 135 / 203

	This error occurs, when the Result point is not configured for the Call api for the mentioned call point.
265	Result Point is not triggerred by any event.
266	Result Point and Call point are configured in the same runnable entity. However the the call point and corresponding result point should always be configured in different runnable entities.
300	In synchronous mode switching, Mode Switched Event's runnable which is called in OsTask should be mapped to one OsTask at least.
	This error occurs, when the runnable for Mode Switch Event in synchronous mode switching, is not mapped into any OsTask.
301	The task which Mode Manager with RteEvent has been mapped into should .have lower task priority than the task for Mode User with ModeSwitchEvent.
	This error occurs, when OsTask which the mode manager is allocated in, has the higher priority than OsTask for Mode User.
302	The Software Component which has the R-Ports connected to the specific P-Port, is not allocated in any partition. The Software Component name regarding R-Ports (Port Name) must be located in one of partition be configured.
	This error occurs, when Software Component with one of port (between PPort and RPort) is not allocated in any partition.
304	Eventhough ModeSwitchAck Event is configured in \(SWC \), there is no configuration for Mode Switched Ack Request in the Com Spec regarding this Port \(Port Path \)
304	This error occurs, when the ModeSwitchAck Event is configured in SWC without configuration regarding Mode Switched Ack Request in Com Spec in related Port.
305	The Configuration for Exclusive Area Implementation for (Exclusive Area), should be done in Rte configuration
	This error occurs, when the exclusive area implementation is not done during Rte configuration even though this is referenced by runnable to permit this runnable be running in Exclusive area
306	In AUTOSAR 4.0.3 standard, the BSW modules distribution on multi partitions is not supported except for the EcuM module. Therefore the BswModuleExecution parameter in EcuC, must be enabled for only one partition.
	This error occurs, when the BswModuleExecution for each partition, is enabled in over than one partition.
307	The disabledMode Configuration for "Event Name" will not be working properly. Because mod switch point for this mode instance, is not configured in any runnable.
307	This error occurs, when the DisabledMode for specific Rte Event has been configured without any mode switch point configuration for this mode instance.
308	When the synchronized activate offset among OsAlarms based on one specific OsCounter is enabed, the MaxAllowedCounterValue for this OsCounter, should be set with proper value
	This error occurs, when the MaxAllowedCounterValue is not configured or is not set with propervalue.
309	In Enhanced Mode, ImplementationDataType which mapped to ModeDeclarationGroup should have uint8 or uint16 type.
•	This error occurs, when ImplementationDataType which mapped ModeDeclarationGroup does not have uint8 or uint16 type while enhanced mode set to be true.

SHT/SHTS 136 / 203

	OsAlarm in ActivaionOsAlarmRef must not be duplicated, 〈ActivaionOsAlarmRef〉 is referenced more than twice in UsedOsActivaion.
310	This error occurs, when referenced OsAlarm in ActivationOsAlarmRef in RteOsInteraction is duplicated.
	When the Synchronized Activate Offset among OsAlarms based on one specific OsCounter is
	enabled the activation order (start alarm) should be defined amongs each alarm to give the
311	value in ExpectedActivationPosition. 〈RteUsedOsActivaion〉
	This error occurs, when OsAlarm with Synchronized Activate Offset, is configured and the order for setting the alarm among OsAlarms is not defined via ExpectedActivationPosition.
	When the Synchronized Activate Offset among OsAlarms based on one specific OsCounter is
	enabled (Setting True) via SynchronizedActivateOffset configuration, the referenced OsCounter
	which OsAlarm will be synchronized, must be defined vai SynchronizedOsCounterRef
312	⟨OsInteract Path⟩ ⟨File Name⟩
312	Cosmiteract Fathy (The Name)
	This error occurs, when SynchronizedActivateOffset is set as true without any Counter which
	should be referenced via SynchronizedOsCounterRef in OsInteract.
	The Background Event can not be mapped to the OsTask which is same as the task mapped to
	TimingEvent.
313	
	This error occurs, when both background event and timing event are mapped into same OsTask
	at the sametime
	Either RteUsedOsAlarmRef or RteUsedOsScheduleTableExpiry-PointRef should be configured in
	all the RteEventToTaskMappings which are referring to the same OsTask.
314	та на постава на пост
	This error occurs, when to trigger the TimingEvent, either OsAlarm or SchedulePointExpiryPoin
	has been configured and if trigger source for whole of Timing Events are not same.
	The ProvidedModeGroup path configured in ModeScheduleTableMap for BSW module is not a
245	ProvidedModeGroup.
315	·
	This error occurs, when the port type in PortRef in ModeScheduleTableMap is not Provided
	PortPath should be configured for ModeAccessPoints within MODE-ACCESS-POINT.
316	
	This error occurs, when Port has not been referenced in ModeAccessPoints.
	RteMappedToTaskRef of EventToTaskMapping for OperationInvokedEvent should be configured
	if CanBelnvokedConcurrently is false.
401	
	This error occurs, when OsTask is not mapped to OperationInvokedEvent which starts a server
	runnable with false value on CanBelnvokedConcurrently parameter.
	When timeout, inter-partition client-server communication, minimum start interval, or etc is
	used, RteWaitOsEventRef in RteEventToTaskMapping for the client runnable should be
403	configured for the SynchronousServerCallPoint.
	Configure RteWaitOsEventRef in RteEventToTaskMapping for the client runnable.
	If timeout is configured for SynchronousServerCallPoint, RteWaitOsAlarmRef in
	RteEventToTaskMapping for the client runnable should be configured for the
404	SynchronousServerCallPoint.
·	
	Assign a OsAlarm to RteWaitOsAlarmRef in RteEventToTaskMapping which invokes the client
	runnable.
	When timeout for SynchronousServerCallPoint is used, OsAlarm referenced by
405	RteWaitOsAlarmRef should have OsAlarmSetEvent of OsAlarmAction.
	Choose the OsAlarmSetEvent for OsAlarmAction and set the OsEventRef.

SHT/SHTS 137 / 203

406	ValueTypeTRef of PortDefinedArgumentValue does not exist.
400	Configure ValueTypeTRef in PortDefinedArgumentValue.
	PortDefinedArgumentValue in PortApiOption does not have any value.
407	
	Fill the Value of PortDefinedArgumentValue.
	The ValueTypeTRef of PortDefinedArgumentValue is incorrect.
408	Configure the correct value for ValueTypeTRef of PortDefinedArgumentValueFor example, if
	the referenced path by ValueTypeTRef is ImplementationDataType, then check whether the
	ImplementationDataType exists, and if ApplicationDataType, then check whether the mapping t ImplementationDataType is correct.
	ImplementationDataType is correct. ImplementationDataType referred by an ArgumentDataPrototype in Operation of
	ClientServerInterface does not exist.
409	
	Check the configuration of ImplementationDataType referred by the ArgumentDataPrototype.
	If ImplementationDataType is equal to a name of one of the Platform or Standard Types
	predefined in AUTOSAR code, nativeDeclaration in the SwBaseType shall not be configured or
	be same as base types of Platform or Standard Types.
410	
	Change the ShortName of ImplementationDataType different from ShortNames of Platform or
	Standard Types, or make nativeDeclaration in SwBaseType be same as them of Platform or
	Standard Types. BaseTypeRef ImplementationDataTypeRef needs to be configured for ImplementationDataTypes
411	Base Typeker Implementation Data Typeker needs to be configured for implementation Data Types
711	Configure BaseTypeRef or ImplementationDataTypeRef in ImplementationDataType
	ClientServerOperation(or ClientServerInterface) is duplicated.
413	The second secon
	Remove duplicated ClientServerOperation or ClientServerInterface.
	ArgumentDataPrototype of ClientServerOperaion is duplicated.
414	
	Remove duplicated ArgumentDataPrototype or change ShortName.
	For each asynchronous invocation of an operation prototype only one
	AsynchronousServerCallReturnsEvent shall be passed to the client component by the RTE. The
415	AsynchronousServerCallReturnsEvent shall indicate either that the transmission was successful or that the transmission was not successful.
	of that the transmission was not succession.
	Remove the other AsynchronousServerCallReturnsEvents except for one.
	RteMappedToTaskRef for AsynchronousServerCallReturnsEvent is not configured
418	If AsynchronousServerCallReturnsEvent is used for activation of a RunnableEntity,
	RteMappedToTaskRef of RteEventToTaskMapping for the AsynchronousServerCallReturnsEvent
	should be configured.
	There is no Implementation Data Type or .Application Data Type which is mapped to
	ImplementationDataType for an ArgumentDataPrototype of the Operation in
419	ClientServerInterface.
	Check the configuration of ImplementationDataType referred by an ArgumentDataPrototype of
	the Operation.
	If the SynchronousServerCallPoint is configured on a RunnableEntity, .then the OsTaskSchedule
	of the OsTask mapped to the RunnableEntity should be FULL.
456	
421	

SHT/SHTS 138 / 203

	The OsTaskPriority value of the OsTask mapped to the RunnableEntity where
	SynchronousServerCallPoint (client) is configured should be greater than the OsTaskPriority
422	value of the OsTask mapped to OperationInvokedEvent (server).
	Adjust OsTaskPriority values of OsTasks to meet the priority condition of OsTasks (client >
	server).
423	Category of EndToEndProfile should be configured as either PROFILE_01 or PROFILE_02
.23	Configure Category correctly (PROFILE_01/PROFILE_02)
	The OsTaskPriority value of the OsTask mapped to the RunnableEntity where
	AsynchronousServerCallPoint (client) is configured should be greater than the OsTaskPriority
424	value of the OsTask mapped to AsynchronousServerCallResultPoint (result).
	Adjust OsTaskPriority values of OsTasks to meet the priority condition of OsTasks (client > result).
	The OsTaskPriority value of the OsTask mapped to the RunnableEntity where
	AsynchronousServerCallResultPoint (result) is configured should be greater than the
425	OsTaskPriority value of the OsTask mapped to OperationInvokedEvent (server).
425	
	Adjust OsTaskPriority values of OsTasks to meet the priority condition of OsTasks (result > server).
	When OsEvent is used, The OsTask should have the OsEvent.
426	
	Add the OsEvent to the OsEventRef of the OsTask.
	RteEndToEndProtectionWrapperMode in RteGeneration shall be confiured as either SINGLE or
427	REDUNDANT.
727	
	Configure RteEndtoEndProectionWrapperMode correctly (SINGLE/REDUNDANT).
	The ClientServerInterface referenced by RequiredInterfaceTRef of RPortPrototype does not
420	include the ClientServerOperation refereced by OperationIRef of SynchronousServerCallPoint.
428	Select the ClientServerOperation for OperationIRef of SynchronousServerCallPoint, which shou
	be included the ClientServerInterface referenced by RequiredInterfaceTRef of RPortPrototype.
	The RteUsedOsEventRef in RteEventToTaskMapping should be configured if the RunnableEntity
	has AsynchronousServerCallResultPoint (result) and the corresponding WaitPoint.
429	has Asynchronous server cannessora onte (resort, and the corresponding water onte,
.23	Set the OsEvent to RteUsedOsEventRef in RteEventToTaskMapping for RunnableEntity which ha
	AsynchronousServerCallResultPoint.
	Context RPort is not configured for ExternalTriggerOccurredEvent.
450	
	Context RPort should be configured for ExternalTriggerOccurredEvent
	Target Trigger is not configured for ExternalTriggerOccurredEvent.
451	
	Target Trigger should be configured for ExternalTriggerOccurredEvent.
	TriggerInterface for this P-port is not configured.
452	
	Valid TriggerInterface shall be configured for this P-port.
	P-port specified by a TriggerInterface is connected to an R-port with an incompatible interface
	and no TriggerInterfaceMapping for this pair of interfaces is associated with the connection.
453	
	TriggerInterfaces of connected P/R-port should be compatible
	and TriggerInterfaceMapping should be associated with this connection.
	The same Trigger in a Trigger Sink should not be connected to multiple Trigger Sources. (N:1
454	The same Trigger in a Trigger Sink should not be connected to multiple Trigger Sources. (N:1 communication is not supported.)

SHT/SHTS 139 / 203

	Do not connect a ReleasedTrigger to multiple BswTriggerConnections.
	The same Trigger in a Trigger Sink should not be connected to multiple Trigger Sources. (N:1
455	communication is not supported.)
	Do not connect a Trigger Sink to multiple Trigger Sources.
456	If RunnableEntity has MinimumStartInterval or QueueLentgh is configured, RunnableEntity should be mapped to at least one OsTask.
	RunnableEntity should be mapped to at least one OsTask.
	If RunnableEntity has not MinimumStartInterval and QueueLentgh is not configured,
457	RunnableEntity should not be mapped to any OsTask.
	RunnableEntity should not be mapped to any OsTask.
458	Rte Generator does not support Queued External Trigger in case of Inter Partition Communication.
	Do not configure Queued External Trigger in case of Inter Partition Communication.
	A BswTriggerDirectImplementation is specified and an ExecutableEntity that is activated by
	an ExternalTriggerOccurredEvent associated to a connected Trigger of the TriggerSource
	is mapped to an OS task different from the one defined by the task attribute of the
459	BswTriggerDirectImplementation.
	Map ExternalTriggerOccurredEvent of EventToTaskMapping to Task attribute of the
	BswTriggerDirectImplementation
	A SynchronizedTrigger should not be referenced by more than one type of access method,
	where the type is one of the followings: ExternalTriggeringPoint, IssuedTrigger and BswTriggerDirectImplementation.
460	Please select one of the followings.
	1) Do not use BswTrigger for the IssuedTrigger which is defined in SynchronizedTrigger.
	Do not use SwcTrigger for the ExternalTriggeringPoint which is defined in
	SynchronizedTrigger.
	3) Do not connect BswTrigger and SwcTrigger for SynchronizedTrigger.
	A SynchronizedTrigger should not be referenced by more than one type of access method,
	where the type is one of the followings: ExternalTriggeringPoint, IssuedTrigger and
	BswTriggerDirectImplementation.
461	Please select one of the followings.
	1) Do not use BswTrigger for the IssuedTrigger which is defined in SynchronizedTrigger.
	2) Do not use SwcTrigger for the ExternalTriggeringPoint which is defined in
	SynchronizedTrigger.
	3) Do not connect BswTrigger and SwcTrigger for SynchronizedTrigger.
	A SynchronizedTrigger should not be referenced by more than one type of access method,
	where the type is one of the followings: ExternalTriggeringPoint, IssuedTrigger and
	BswTriggerDirectImplementation.
462	Please select one of the followings.
	1) Do not use BswTrigger for the IssuedTrigger which is defined in SynchronizedTrigger.
	2) Do not use BswTrigger for the BswTriggerDirectImplementation which is defined in
	SynchronizedTrigger.
	A Trigger of ReleasedTrigger shall not be referenced by both a IssuedTrigger and a
463	BswTriggerDirectImplementation.
	Do not use same Trigger of ReleasedTrigger in both IssuedTrigger and
	© 2020 HVI INDALATITEON Co. Ltd. All Bight Pocor



서 번호 (DOC NO) SHT/SHTS 140 / 203

	BswTriggerDirectImplementation.
	'SwImplPolicy' shall be configured to 'QUEUED' in case of 'RteBswTriggerSourceQueueLength' >
464	0.
	To use Queued Bsw External Trigger, please configure 'SwImplPolicy' to 'QUEUED'.
	'SwImplPolicy' shall not be configured to 'QUEUED' in case of
465	'RteBswTriggerSourceQueueLength' = 0.
	To use Non Queued Bsw External Trigger, please do not configure 'SwImplPolicy' to 'QUEUED'.
	'SwImplPolicy' shall be configured to 'QUEUED' in case of 'RteBswTriggerSourceQueueLength' >
466	0.
	To use Queued Bsw Internal Trigger, please configure 'SwImplPolicy' to 'QUEUED'.
	'SwImplPolicy' shall not be configured to 'QUEUED' in case of
467	'RteBswTriggerSourceQueueLength' = 0.
	To use Non Queued Bsw Internal Trigger, please do not configure 'SwImplPolicy' to 'QUEUED'.
468	'SwImplPolicy' shall be configured to 'QUEUED' in case of 'RteTriggerSourceQueueLength' > 0.
400	To use Queued External Trigger, please configure 'SwImplPolicy' to 'QUEUED'.
	'SwImplPolicy' shall not be configured to 'QUEUED' in case of 'RteTriggerSourceQueueLength' =
469	0.
	To use Non Queued External Trigger, please do not configure 'SwImplPolicy' to 'QUEUED'.
470	'SwImplPolicy' shall be configured to 'QUEUED' in case of 'RteTriggerSourceQueueLength' > 0.
470	To use Queued Internal Trigger, please configure 'SwImplPolicy' to 'QUEUED'.
	'SwImplPolicy' shall not be configured to 'QUEUED' in case of 'RteTriggerSourceQueueLength' =
471	0.
	To use Non Queued Internal Trigger, please do not configure 'SwImplPolicy' to 'QUEUED'.
472	There is no valid BswExternalTriggerEvent.
7/2	Please configure BswExternalTriggerEvent.
	There is no RteBswEventToTaskMapping for BswExternalTriggerEvent.
473	Please configure RteBswEventToTaskMapping for BswExternalTriggerEvent.
	There is no valid BswInternalTriggerEvent.
474	
	Please configure BswInternalTriggerEvent.
475	There is no RteBswEventToTaskMapping for BswInternalTriggerEvent.
1,3	Please configure RteBswEventToTaskMapping for BswInternalTriggerEvent.
476	There is no valid RteExternalTriggerEvent.
4/6	Please configure RteExternalTriggerEvent.
47-	There is no RteEventToTaskMapping for RteExternalTriggerEvent.
477	Please configure RteEventToTaskMapping for RteExternalTriggerEvent.
	There is no valid RteInternalTriggerEvent.
478	Please configure RteInternalTriggerEvent.
	i rease comigure internarmiggerevent.



문서 번호 (DOC NO) SHT/SHTS 141 / 203

479	There is no RteEventToTaskMapping for RteInternalTriggerEvent.
4/3	Please configure RteEventToTaskMapping for RteInternalTriggerEvent.
501	There is a EcucPartition which has no ShortName
502	EcucPartitionBswModuleExecution shall be set.
503	PartitionCanBeRestarted shall be set.
504	Software component path in the EcucPartitionSoftwareComponentInstanceRef is not valid.
505	ShortName of RteBswModuleInstance is empty.
506	BswImplRef of RteBswModuleInstance is empty.
507	BswModuleConfigRef of RteBswModuleInstance is empty.
508	There is an OsAppAlarmRef which is double referenced.
509	There is an OsAppCounterRef which is double referenced.
510	There is an OsApplsrRef which is double referenced.
511	There is an OsAppTaskRef which is double referenced.
512	OsAppEcucPartRefOsAppEcucPartRef of OsApplication is invalid.
513	There is a mismatching between partition of SwComponentInstance and task of OsApplication.
514	There is a mismatching between partition of SwComponentInstance and alarm of OsApplication.
515	DataReceivedEvent, DataReceiveErrorEvent, DataSendCompletedEvent, DataWriteCompletedEvent shall be mapped to OsTask.
516	There is a mismatching OsSchedulePoint configuration of events which reference same runnable entity.
517	RteMappedToTaskRef is not set but OsSchedulePoint is set.
518	OsSchedulePoint shall be set as None if OsTask is full preemptive.
519	There is a mismatching OsSchedulePoint configuration of events which reference same runnable entity.
520	RteBswMappedToTaskRef is not set but OsSchedulePoint is set.
521	OsSchedulePoint shall be set as None if OsTask is full preemptive.
522	SwComponent Event shall not be mapped to OsTask which is used by Bsw Module.
523	RteExclusiveAreaImplMechanism is COOPERATIVE_RUNNABLE_PLACEMENT. But RteBswExclusiveAreaOsResourceRef is not set.

524	RteExclusiveAreaImplMechanism is OS_RESOURCE. But RteBswExclusiveAreaOsResourceRef is not set.
525	RteExclusiveAreaImplMechanism is COOPERATIVE_RUNNABLE_PLACEMENT. But RteExclusiveAreaOsResourceRef is not set.
526	RteExclusiveAreaImplMechanism is OS_RESOURCE. But RteExclusiveAreaOsResourceRef is not set.
527	System Signal is not mapped to ISignal.
528	ISignal is not mapped to ISignalTolPduMapping.
529	ISignalToIPduMapping is not mapped to ComSignal.
530	The RteMappedToTaskRef of RteEventToTaskMapping has invalid reference.
531	VariableAccessRef of RteVariableReadAccessRef is invalid.
532	VariableAccessRef of RteVariableWriteAccessRef is invalid.
533	Coherency Group shall be mapped to same ostask.
534	The RteMappedToTaskRef of RteEventToTaskMapping has invalid reference.
535	Format of OsSecPerTick is not valid.
536	Format of OsSecPerHwTick is not valid.
537	Format of TaskPrefix is not valid.
540	StartOnEvent cannot reference runnable of other SwComponent or InternalBehavior.
541	ParameterSwComponentType shall not have InternalBehavior.
542	ParameterSwComponentType shall not have require port.
543	SupportMultipleInstance is not set. SwComponent cannot created more than once.
544	ParameterSwComponentType cannot created more than once.
545	BswBehaviorRef of SwcBswMapping is empty.
546	SwcBehaviorRef of SwcBswMapping is empty.
547	SwcBswMapping is only valid when software component type is ServiceSwComponentType or EcuAbstractionSwComponentType or ComplexDeviceDriverSwComponentType.
548	CompositionSwComponentType shall not be multiple instantiated.
549	There is a infinite loop of hierarchy.

550	ParameterSwComponentType does not support inter-partition communication.
551	There is no SwComponentType for the name.
552	There is no PortPrototype for the path.
553	There is no interface for the path.
554	
	There is no VariableDataPrototype for the path.
555	There is an error for determining queued or not.
556	There is no SwComponentPrototype for the path.
557	There is an error for getting Rte_Send Function Name.
558	There is an error for getting Rte_Receive Function Name.
559	InitValue is invalid.
560	The NvmWriteRamBlockToNvm and NvmReadRamBlockFromNvm parameters set to the Rte_GetMirror and Rte_SetMirror API of the NvBlockDescriptor when NvmBlockUseSyncMechanism is enabled
561	InvalidValue of ApplicationDataType is invalid.
562	InvalidValue of ImplementationDataType is invalid.
563	PortPrototype path is invalid.
564	TypeTRef of ApplicationArrayElement is invalid.
565	TypeTRef of ApplicationRecordElement is invalid.
566	TypeTRef for InitValue is invalid.
571	RootSwCompositionPrototype of System is empty.
572	SoftwareCompositionTRef of RootSwCompositionPrototype is empty.
575	There is no PortPrototype for the path.
581	There is no RteEvent for the RunnableEntity.
582	There is no RteEventToTaskMapping for the RteEvent which uses implicit sender receiver communication.
583	There is no RteMappedtoTaskRef for the RteEvent which uses implicit sender receiver communication.
584	Different execution instances of a runnable entity, which use implicit data access, shall not be mapped to different Preemption Areas.



585	ImplementationDataType Path is invalid.
586	ApplicationDataType Path is invalid.
591	OsEvent has been used for more than one RTE Event.
592	The format of RTE Generator Version is not correct.
593	There is no ISignallPdu for the path.
594	ISignal and DataElement of PortPrototype shall have same HandleOutOfRange configuration.
595	OsCounter has no value of OsSecondsPerTick. You can also set OsSecondsPerTick for Counter by using -OsSecPerTick option.
596	OsCounterMaxAllowedValue shall be greater than or equal to OsAlarm's Offset.
597	OsCounterMaxAllowedValue shall be greater than or equal to OsAlarm's Period.
598	OsCounterMaxAllowedValue shall be greater than or equal to OsScheduleTable's Offset.
605	TypeTRef in SwComponentPrototype is empty or invalid.
	TypeTRef in SwComponentPrototype shall be set with valid SwComponentType Path.
606	TypeTRef in VariableDataPrototype is empty or invalid.
	TypeTRef in VariableDataPrototype shall be set with valid DataType Path.
607	TypeTRef in ParameterDataPrototype is empty or invalid.
007	TypeTRef in ParameterDataPrototype shall be set with valid DataType Path.
	TypeTRef in ModeGroup is empty or invalid.
612	
	TypeTRef in ModeGroup shall be set with valid ModeDeclarationGroup Path.
613	TypeTRef in ModeDeclarationGroupPrototype is empty or invalid.
	TypeTRef in ModeDeclarationGroupPrototype shall be set with valid ModeDeclarationGroup Path.
	ProvidedInterfaceTRef/RequiredInterfaceTRef in PPortPrototype/RPortPrototype is empty or
	invalid.
614	
	ProvidedInterfaceTRef/RequiredInterfaceTRef in PPortPrototype/RPortPrototype shall be set with valid Interface Path.
	Category in
	ApplicationValueSpec/AutosarDataType/CompuMethod/EndToEndProfile/ModeDeclarationGrou
	is empty or invalid.
615	
	Category in
	ApplicationValueSpec/AutosarDataType/CompuMethod/EndToEndProfile/ModeDeclarationGrou
	shall be set with valid value.
C1C	The number of SwcInternalBehavior in SwComponentType is not 1.
616	The number of Sweletoreal Behavior in SwCompage at Type shall be 1
	The number of SwcInternalBehavior in SwComponentType shall be 1.

서 번호 (DOC NO) SHT/SHTS 145 / 203

	RteMappedToTaskRef in RteEventToTaskMapping is empty or invalid.
619	RteMappedToTaskRef in RteEventToTaskMapping shall be set with valid OsTask Path.
	※8.7 Guide for RteEvent 참조
	ContextComponentRef in
	PPortInCompositionInstanceRef/ProviderIRef/RequesterIRef/RPortInCompositionInstanceRef is empty or invalid.
620	
	ContextComponentRef in
	PPortInCompositionInstanceRef/ProviderIRef/RequesterIRef/RPortInCompositionInstanceRef
	shall be set with valid SwComponentPrototype path.
	LowerLimit in CompuScale/InternalConstrs/PhysConstrs is empty.
621	
	LowerLimit in CompuScale/InternalConstrs/PhysConstrs shall be set.
622	UpperLimit in CompuScale/InternalConstrs/PhysConstrs is empty.
022	UpperLimit in CompuScale/InternalConstrs/PhysConstrs shall be set.
	Even though IntervalType is not INFINITE, Value in Limit is empty.
624	Even though intervally pe is not list list it. Value in Elinic is empty.
02 .	If IntervalType is not INFINITE, Value in Limit shall be set.
	InternalConstr in DataConstrRule is empty.
625	
	InternalConstr in DataConstrRule shall be set.
	The number of DataConstrRule in DataConstr is not 1.
627	
	The number of DataConstrRule in DataConstr shall be 1.
	Even though DataType is used for HandleOutOfRange, DataConstrRef in SwDataDefProps is
628	empty.
	If DataType is used for HandleOutOfRange, DataConstrRef in SwDataDefProps shall be set.
	SwDataDefProps in AutosarDataType is empty, even though DataType is used for
629	HandleOutOfRange.
	SwDataDefProps in AutosarDataType shall be set, if DataType is used for HandleOutOfRange.
	SwDataDefProps in
	ArgumentDataPrototype/AutosarDataType/SwPointerTargetProps/VariableDataPrototype is
	empty.
630	
	SwDataDefProps in
	ArgumentDataPrototype/AutosarDataType/SwPointerTargetProps/VariableDataPrototype shall
	be set.
	RteGeneration in RTE ECU Configuration is empty.
631	
	RteGeneration in RTE ECU Configuration shall be set.
633	ComlPduDirection in ComlPdu is empty or invalid.
632	ComlPduDirection in ComlPdu shall be set with valid value.
	ImplementedEntryRef in BswEntity is empty or invalid.
633	implemented and yield in oswericity is empty of invalid.
ددن	ImplementedEntryRef in BswEntity shall be set with valid BswModuleEntry path.
	RteInitializationBehavior in RTE ECU Configuration is empty.
636	The state of the s
	RteInitializationBehavior in RTE ECU Configuration shall be set.

	EcucPartition of BswModuleDescription/SwComponentPrototype/OsTask is empty or invalid.
637	EcucPartition of BswModuleDescription/SwComponentPrototype/OsTask shall be set.
	RteTaskComMapping in RteGeneration is empty or invalid.
638	RteTaskComMapping in RteGeneration shall be set with valid OsTask path.
	Symbol in CompuScale/RunnableEntity/SchedulerNamePrefix is empty or invalid.
639	Symbol in CompuScale/RunnableEntity/SchedulerNamePrefix shall be set with valid value.
	OsApplication of EcucPartition/OsAlarm/OsTask/SwComponentPrototype is empty or invalid.
640	OsApplication of EcucPartition/OsAlarm/OsTask/SwComponentPrototype shall be set.
	BswBehaviorRef in SwcBswMapping is empty or invalid.
641	
	BswBehaviorRef in SwcBswMapping shall be set with valid BswInternalBehavior path.
642	BswEntityRef in SwcBswRunnableMapping is empty or invalid.
042	BswEntityRef in SwcBswRunnableMapping shall be set with valid BswEntity path.
	StartsOnEventRef in BswEvent is empty or invalid.
643	
	StartsOnEventRef in BswEvent shall be set with BswSchedulableEntity. StartOnEventRef in RteEvent is empty or invalid.
644	Startoneventites in Relevent is empty of invalid.
	StartOnEventRef in RteEvent shall be set with valid RunnableEntity path.
	ComSignalType in ComGroupSignal/ComSignal is empty or invalid.
645	ComSignalType in ComGroupSignal/ComSignal shall be set with valid value.
	ParameterRef in ParameterComSpec is empty or invalid.
646	
	"ParameterRef in ParameterComSpec shall be set with valid ParameterDataPrototype path.
	DataElementRef in SenderComSpec/ReceiverComSpec/InvalidationPolicy is empty or invalid.
647	DataElementRef in SenderComSpec/ReceiverComSpec/InvalidationPolicy shall be set with valid
	VariableDataPrototype path.
	There is no RteEventToTaskMapping for RteEvent.
648	Dto Frant To Took Manning for Dto Frant shall be exist
	RteEventToTaskMapping for RteEvent shall be exist. EventSourceRef in DataSendeCompletedEvent / DataWriteCompletedEvent /
	AsynchronousServerCallReturnsEvent / ModeSwitchedAckEvent / InternalTriggerOccurredEven
	is empty or invalid.
649	Figure Course Det Date Conde Completed Figure 1 / Date Write Completed Figure 1 /
	EventSourceRef DataSendeCompletedEvent / DataWriteCompletedEvent / AsynchronousServerCallReturnsEvent / ModeSwitchedAckEvent / InternalTriggerOccurredEven
	shall be set with valid value.
	Path of AutosarObject is duplicated.
650	Path of AutosarObject shall be uniqueue.
	Value in Limit / ModeDeclaration / NumValueSpec / TextValueSpec / V is empty or invalid.
651	
ا ده	Value in Limit / ModeDeclaration / NumValueSpec / TextValueSpec / V shall be set with valid
	value. PhysCoastr is DataCoastrBule is empty
652	PhysConstr in DataConstrRule is empty.
UJZ	PhysConstr in DataconstrRule shall be set.



SHT/SHTS 147 / 203

653	Serviceld in BswModuleEntry is empty.
655	Serviceld in BswModuleEntry shall be set.
65.4	ComIPduSignalProcessing in ComIPdu is empty.
654	ComlPduSignalProcessing in ComlPdu shall be set.
	Even though there is no EcucPartition or single EcucPartition, RteTaskComMapping in
655	RteGeneration is set.
	If there is no EcucPartition or single EcucPartition, RteTaskComMapping in RteGeneration shall not be set.
	SwBaseTypeRef in SwDataDefProps is empty or invalid.
656	
	SwBaseTypeRef in SwDataDefProps shall be set with valid SwBaseType path.
657	Moduleld in BswModuleDescription and Moduleld in BswModuleDescription is same.
	Moduleld in BswModuleDescription and Moduleld in BswModuleDescription shall be different.
659	Serviceld in BswModuleEntry and Serviceld in BswModuleEntry is same.
033	Serviceld in BswModuleEntry and Serviceld in BswModuleEntry shall be different.
	TargetPPortRef in PPortInCompositionInstanceRef / ProviderIRef is empty or invalid.
660	TargetPPortRef in PPortInCompositionInstanceRef / ProviderIRef shall be set with valid
	PPortPrototype path.
	"TargetRPortRef in RPortInCompositionInstanceRef / RequesterIRef is empty or invalid.
661	TargetRPortRef in RPortInCompositionInstanceRef / RequesterIRef shall be set with valid RPortPrototype path.
	PPortPrototype and RPortPrototype are not compatible.
662	
	PPortPrototype and RPortPrototype shall be compatible.
663	ContextPortRef in ModelRef is empty or invalid.
005	ContextPortRef in ModelRef shall be set with valid PortPrototype path.
	ProviderIRef in AssemblySwConnector is empty.
664	
	ProviderIRef in AssemblySwConnector shall be set.
665	RequesterIRef in AssemblySwConnector is empty.
003	RequesterIRef in AssemblySwConnector shall be set.
	InnerPortIRef in AssemblySwConnector is empty.
666	
	InnerPortIRef in DelegationSwConnector shall be set.
667	PPortInCompositionInstanceRef in InnerPortIRef is empty.
007	PPortInCompositionInstanceRef in InnerPortIRef shall be set.
	RPortInCompositionInstanceRef in InnerPortIRef is empty.
668	DDavido Composition locate acceptation in the control of the line and
	RPortInCompositionInstanceRef in InnerPortIRef shall be set. There is a MiN connection PTE does not support MiN connections
	There is a M:N connection. RTE does not support M:N connections.
669	
669	M:N connections shall be removed.

SHT/SHTS 148 / 203

	ShortName in AutosarObject shall be unique.
671	ShortName in AutosarObject is empty or invalid.
671	ShortName in AutosarObject shall be set.
	OperationIref in OperationInvokedEvent / ServerCallPoint is empty.
672	
	OperationIref in OperationInvokedEvent / ServerCallPoint shall be set. ContextPPortRef in ModeGroupIRef / OperationIref / PTriggerInAtomicSwcTypeInstanceRef is
	empty or invalid.
673	
	ContextPPortRef in ModeGroupIRef / OperationIref / PTriggerInAtomicSwcTypeInstanceRef shall
	be set with valid PPortPrototype path.
674	TargetProvidedOperationRef in OperationIref is empty or invalid.
074	TargetProvidedOperationRef in OperationIref shall be set with valid ClientServerOperation path
	ModelRef in SwcModeSwitchEvent is empty.
675	
	ModelRef in SwcModeSwitchEvent shall be set.
	ContextModeDeclarationGroupPrototypeRef in ModelRef is empty or invalid.
676	ContextModeDeclarationGroupPrototypeRef in ModelRef shall be set with valid ModeGroup
	path.
	TriggerlRef in ExternalTriggerOccurredEvent is empty.
677	Trigger/Defic External Trigger/Occurred Except shall be set
	TriggerlRef in ExternalTriggerOccurredEvent shall be set. ContextRPortRef in DatalRef/OperationIref/RTriggerInAtomicSwcInstanceRef is empty or invalid
670	context. of the in paramet, operationnes, thinggerm, teames we installed team is empty of invalid
678	ContextRPortRef in DataIRef/OperationIref/RTriggerInAtomicSwcInstanceRef shall be set with
	valid RPortPrototype path.
679	ModeGroup in ModeSwitchInterface is empty.
0/3	ModeGroup in ModeSwitchInterface shall be set.
	RteBswImplementationRef in RteBswModuleInstance is empty or invalid.
680	
	RteBswImplementationRef in RteBswModuleInstance shall be set with valid BswImplementation
	path. RteBswImplementationRef in RteBswModuleInstance is duplicated.
681	
	RteBswImplementationRef in RteBswModuleInstance shall be unique.
	RteBswModuleConfigurationRef in RteBswModuleInstance is empty or invalid.
682	RteBswModuleConfigurationRef in RteBswModuleInstance shall be set with valid
	BswModuleDescription path.
	RteSoftwareComponentInstanceRef in RteSwComponentInstance is empty or invalid.
683	
	RteSoftwareComponentInstanceRef in RteSwComponentInstance shall be set with valid SwComponentPrototype path.
	RteSoftwareComponentInstanceRef in RteSwComponentInstance
	andRteSoftwareComponentInstanceRef in RteSwComponentInstance are same.
684	
	RteSoftwareComponentInstanceRef in RteSwComponentInstance
	andRteSoftwareComponentInstanceRef in RteSwComponentInstance shall not be same.



SHT/SHTS 149 / 203

685	There is no EcucPartition in which BswModuleExecution is true.
600	There shall be an EcucPartition in which BswModuleExecution is true.
	The number of EcucValueCollection is not 1.
686	
	The number of EcucValueCollection shall be 1.
	The number of OsOs is not 1.
687	
	The number of OsOs shall be 1.
	RteBswModuleConfigurationRef in RteBswModuleInstance and RteBswModuleConfigurationRef in RteBswModuleInstance is same.
688	Rtebswilloudiemstance is same.
	RteBswModuleConfigurationRef in RteBswModuleInstance and RteBswModuleConfigurationRef i
	RteBswModuleInstance shall not be same.
	The number of RteGeneration is not 1.
689	
	The number of RteGeneration shall be 1.
	The number of RteInitializationBehavior is not 1.
690	The grapher of Distriction Debasion shall be 1
	The number of RteInitializationBehavior shall be 1. ISignalRef in ISignalToIPduMapping and ISignalRef in ISignalToIPduMapping is same.
691	isignalker in isignarior-domapping and isignalker in isignarior-domapping is same.
05.	ISignalRef in ISignalTolPduMapping and ISignalRef in ISignalTolPduMapping shall not be same.
	ISignalGroupRef in ISignalToIPduMapping and ISignalGroupRef in ISignalToIPduMapping is same
692	
092	ISignalGroupRef in ISignalTolPduMapping and ISignalGroupRef in ISignalTolPduMapping shall no
	be same.
	TargetTriggerRef in PTriggerInAtomicSwcTypeInstanceRef/RTriggerInAtomicSwcInstanceRef is
693	empty or invalid.
055	TargetTriggerRef in PTriggerInAtomicSwcTypeInstanceRef/RTriggerInAtomicSwcInstanceRef shal
	be set with valid Trigger path.
	SwComponentPrototype for the SwComponentType is not exist.
694	
	SwComponentPrototype for the SwComponentType shall be exist.
	BehaviorRef in SwcImplementationandBehaviorRef in SwcImplementationis Same.
695	Debasia Defia Condenda o estatia e ed Debasia Defia Condenda o estatia esballa esta ba Carra
	BehaviorRef in SwcImplementationandBehaviorRef in SwcImplementationshall not be Same.
697	SystemSignal is not mapped to ISignal.
037	SystemSignal shall be mapped to ISignal.
	ISignal is not mapped to ISignalTolPduMapping.
698	
	ISignal shall be mapped to ISignalTolPduMapping.
	SystemSignalGroup is not mapped to ISignalGroup.
699	Sustantinal Course shall be seen at 11 15' 15
	SystemSignalGroup shall be mapped to ISignalGroup.
700	ISignalGroup is not mapped to ISignalToIPduMapping.
700	ISignalGroup is not mapped to ISignalToIPduMapping.
700	ISignalGroup is not mapped to ISignalToIPduMapping. ISignalGroup shall be mapped to ISignalToIPduMapping.
	ISignalGroup is not mapped to ISignalToIPduMapping. ISignalGroup shall be mapped to ISignalToIPduMapping.
700	ISignalGroup is not mapped to ISignalToIPduMapping.

SHT/SHTS 150 / 203

702	ComlPdu for the ComSignal/ComSignalGroup is not exist.
702	ComlPdu for the ComSignal/ComSignalGroup shall be exist.
	ImplementationDataTypeElement in ImplementationDataType/ImplementationDataTypeElement
	is empty.
703	is empty.
703	ImplementationDataTypeElement in ImplementationDataType/ImplementationDataTypeElement
	shall be set.
	BswModuleEntryRef in BswModuleEntryRefConditional is empty or invalid.
704	
	BswModuleEntryRef in BswModuleEntryRefConditional shall be set with valid BswModuleEntry
	path.
705	Direction of ComSignal/ComSignalGroup/ISignalIPdu cannot be determined.
705	
	Please check Direction of ComlPdu for ComSignal/ComSignalGroup/ISignalIPdu.
	ImplementationDataTypeRef in DataTypeMap/SwDataDefProps is empty or invalid.
706	locale and the about the post in Data Time Man (Couplete Definion as hell be not with well-d
	ImplementationDataTypeRef in DataTypeMap/SwDataDefProps shall be set with valid
	ImplementationDataType path.
707	QueueLength in QueuedReceiverComSpec/ServerComSpec is empty or invalid.
707	Overal couth is Overad Passiver Com Con a /Com cor Cons a hall be got with valid value
	QueueLength in QueuedReceiverComSpec/ServerComSpec shall be set with valid value. BswModuleDescriptionRef in BswModuleDescriptionRefConditional is empty or invalid.
	bswinddiedescriptionker in bswinddiedescriptionkerConditional is empty of invalid.
708	BswModuleDescriptionRef in BswModuleDescriptionRefConditional shall be set with valid
	BswModuleDescription path.
	Even though ImplementationDataType/ImplementationDataTypeElement is Array, the number of
	ImplementationDataTypeElement is not 1.
709	implementation bata type Element is not 1.
703	If ImplementationDataType/ImplementationDataTypeElement is Array, the number of
	ImplementationDataTypeElement shall be 1.
	QueuedReceiverComSpec in RPortPrototype is empty.
710	abebeakeceivercomspec in ki ora rototype is empty.
710	QueuedReceiverComSpec in RPortPrototype shall be set.
	There is no ComSignal for ISignalTolPduMapping.
715	There is no comsignation isignation domapping.
/13	There shall be a ComSignal for ISignalToIPduMapping.
	There is no ComSignalGroup for ISignalTolPduMapping.
716	There is no comsignate out is ignation to wasping.
710	There shall be a ComSignalGroup for ISignalToIPduMapping.
	The number of V in SwValuesPhys is not 1.
717	The holliber of Vill Swydidesrifys is not 1.
, , ,	The number of V in SwValuesPhys shall be 1.
	Ports of AssemblySwConnector is not compatible.
718	1 or 5 or 7 sembly 5 wed intector is not compatible.
, 13	Ports of AssemblySwConnector shall be compatible.
	ImplementationDataType cannot be resolved for ApplicationDataType.
719	
	ImplementationDataType shall be resolved for ApplicationDataType.
	ParameterProvideComSpec in PPortPrototype is empty.
720	
	ParameterProvideComSpec in PPortPrototype shall be set.
	ParameterRequireComSpec in RPortPrototype is empty.
721	
	ParameterRequireComSpec in RPortPrototype shall be set.
	© 2020 HVI NDAL ALITPON Co. Ltd. All Bight Boson

SHT/SHTS 151 / 203

	The number of RootVariableDataPrototypeRef in AutosarVariableInImplDataType is over 1.
722	The number of RootVariableDataPrototypeRef in AutosarVariableInImplDataType shall be 0 or 1.
	The number of TargetDataPrototypeRef in AutosarVariableInImplDataType is over 1.
723	
	The number of TargetDataPrototypeRef in AutosarVariableInImplDataType shall be 0 or 1. Even though BswModuleEntry is used as BswCalledEntity, CallType in BswModuleEntry is not
	REGULAR or CALLBACK.
724	
	If BswModuleEntry is used as BswCalledEntity, CallType in BswModuleEntry shall be REGULAR o
	CALLBACK. Even though BswModuleEntry is used as BswInterruptEntity, CallType in BswModuleEntry is not
	INTERRUPT.
725	
	If BswModuleEntry is used as BswInterruptEntity, CallType in BswModuleEntry shall be
	INTERRUPT.
	Even though BswModuleEntry is used as BswSchedulableEntity, CallType in BswModuleEntry is not SCHEDULED.
726	
	If BswModuleEntry is used as BswSchedulableEntity, CallType in BswModuleEntry shall be
	SCHEDULED. Even though BswModuleEntry is used as BswInterruptEntity, ExecutionContext in
	BswModuleEntry and InterruptCategory in BswInterruptEntity is not matched.
727	
	If BswModuleEntry is used as BswInterruptEntity, ExecutionContext in BswModuleEntry and
	InterruptCategory in BswInterruptEntity shall be matched.
	Even though BswModuleEntry is used as BswSchedulableEntity, ExecutionContext in BswModuleEntry is not TASK.
728	
	If BswModuleEntry is used as BswSchedulableEntity, ExecutionContext in BswModuleEntry shall
	be TASK. The number of Period in TimingEvent/BswTimingEvent/DataFilter is not 1.
729	The number of Feriod III TillingEvent/BSWTIIIIngEvent/DataFilter is not 1.
	The number of Period in TimingEvent/BswTimingEvent/DataFilter shall be 1.
	ImplinitValue in CalibrationParameterValue is invalid.
730	ImplinitValue in CalibrationParameterValue shall be valid.
	ApplinitValue in CalibrationParameterValue is invalid.
731	
	ApplinitValue in CalibrationParameterValue shall be valid.
732	PossibleErrorRef in ClientServerOperation is invalid.
732	PossibleErrorRef in ClientServerOperation shall be valid.
	ISignalRef in ISignalToIPduMapping is invalid.
733	
	ISignalRef in ISignalTolPduMapping shall be set with valid ISignal path.
734	ISignalGroupRef in ISignalTolPduMapping is invalid.
- - •	ISignalGroupRef in ISignalToIPduMapping shall be set with valid ISignalGroup path.
	Even though ComSignalType in ComSignal/ComGroupSignal is UINT8_DYN.DynamicLength in
725	SystemSignal is not set true.
735	SystemSignal is not set true. If ComSignalType in ComSignal/ComGroupSignal is UINT8_DYN.DynamicLength in SystemSigna

SHT/SHTS 152 / 203

	Even though ComSignalType in ComSignal/ComGroupSignal is not UINT8_DYN.DynamicLength
	in SystemSignal is set true.
736	# Compliance in Compliance // Compressional is not HINTS, DVN Dynamic length in
	If ComSignalType in ComSignal/ComGroupSignal is not UINT8_DYN.DynamicLength in SystemSignal shall not be set true.
	Even though ComSignalType in ComSignal/ComGroupSignal is UINT8_DYN.ArraySizeSemantics
	in ImplementationDataType is not VARIABLE-SIZE.
737	in implementation battarype is not with the size.
,	If ComSignalType in ComSignal/ComGroupSignal is UINT8_DYN.ArraySizeSemantics in
	ImplementationDataType shall be VARIABLE-SIZE.
	Even though ComSignalType in ComSignal/ComGroupSignal is not
	UINT8_DYN.ArraySizeSemantics in ImplementationDataType is VARIABLE-SIZE.
738	
	If ComSignalType in ComSignal/ComGroupSignal is not UINT8_DYN.ArraySizeSemantics in
	ImplementationDataType shall not be VARIABLE-SIZE.
739	ConstantRef in ConstantReference is empty or invalid.
/33	ConstantRef in ConstantReference shall be set with valid Constant path.
	ComSignal/ComSignalGroup for TX is not mapped to PPortPrototype.
740	Compignal, Compignation of the first mapped to
•	ComSignal/ComSignalGroup for TX shall be mapped to PPortPrototype.
	ComSignal/ComSignalGroup for RX is not mapped to RPortPrototype.
741	
	ComSignal/ComSignalGroup for RX shall be mapped to RPortPrototype.
742	The number of DataConstrRule in DataConstr is not 1.
742	The number of DataConstrRule in DataConstr shall be 1.
	The number of AutosarVariableIRef in AccessedVariable/ReadNvData/WrittenNvData is not 1.
743	
	The number of AutosarVariablelRef in AccessedVariable/ReadNvData/WrittenNvData shall be 1.
	The number of AutosarParameterIRef in AccessedParameter is not 1.
744	
	The number of AutosarParameterIRef in AccessedParameter shall be 1.
745	ComSpec in PortPrototype is empty.
/45	ComSpec in PortPrototype shall be set.
	NonQueuedSenderComSpec in PPortPrototype is empty.
746	Trondoct data de la participa dela participa de la participa de la participa de la participa d
	NonQueuedSenderComSpec in PPortPrototype shall be set.
	ComTimeout and TransmissionAcknowledgeTimeout is not matched.
747	
	ComTimeout and TransmissionAcknowledgeTimeout shall be matched.
748	ConstantSpecification/RecordValueSpec is invalid.
/40	ConstantSpecification/RecordValueSpec shall be valid.
	ComTimeout and AliveTimeout is not matched.
749	
	ComTimeout and AliveTimeout shall be matched.
	Even though there is a DataSendCompletedEvent, TransmissionAcknowledge is not set.
750	
	If there is a DataSendCompletedEvent, TransmissionAcknowledge shall be set.
751	Even though there is a DataWriteCompletedEvent, TransmissionAcknowledge is not set.
751	If there is a Data Write Completed Event Transmission Asknowledge shall be set
	If there is a DataWriteCompletedEvent, TransmissionAcknowledge shall be set.

SHT/SHTS 153 / 203

752	Even though there is a Rte_COMCbkTAck, TransmissionAcknowledge is not set.
/52	If there is a Rte_COMCbkTAck, TransmissionAcknowledge shall be set.
	There is no OsApplication for EcucPartition.
753	There shall be an OsApplication for EcucPartition.
	There is multiple AccessedVariable/NvRamBlockElements which have same LocalVariableRef.
754	
734	There shall not be multiple AccessedVariable/NvRamBlockElements which have same LocalVariableRef.
	ImplementationDataType/ImplementationDataTypeElement is invalid.
755	
	ImplementationDataType/ImplementationDataTypeElement shall be valid.
	ValueSpec in InitValue is invalid.
756	
	ValueSpec in InitValue shall be valid.
	ImplementationDataType/ImplementationDataTypeElement and
757	ImplementationDataType/ImplementationDataTypeElement are not compatible.
757	ImplementationDataType/ImplementationDataTypeElement and
	ImplementationDataType/ImplementationDataTypeElement shall be compatible.
	TriggerInterface and TriggerInterface are not compatible.
758	miggermeerrace and miggermeerrace are not compatible.
	TriggerInterface and TriggerInterface shall be compatible.
	DataConstr and DataConstr are not compatible.
759	
	DataConstr and DataConstr shall be compatible.
	SenderReceiverInterface and SenderReceiverInterface are not compatible.
760	
	SenderReceiverInterface and SenderReceiverInterface shall be compatible.
761	NvDataInterface and NvDataInterface are not compatible.
761	NvDataInterface and NvDataInterface shall be compatible.
	Category in ApplicationDataType and Category in ImplementationDataType are not compatible.
762	category in Application Batarype and category in implementation Batarype are not compatible.
	Category in ApplicationDataType and Category in ImplementationDataType shall be compatible.
	TypeTRef in RamBlock and TypeTRef in RomBlock are not compatible.
763	
	TypeTRef in RamBlock and TypeTRef in RomBlock shall be compatible.
	DataType in VariableDataPrototype and DataType in VariableDataPrototype are not compatible.
764	
	DataType in VariableDataPrototype and DataType in VariableDataPrototype shall be compatible
765	PortPrototype has an incompatible ComSpec with Interface.
	ComSpec shall be compatible with Interface.
	HandleInvalid in VariableDataPrototype and HandleInvalid in VariableDataPrototype are not
	compatible.
766	,
	HandleInvalid in VariableDataPrototype and HandleInvalid in VariableDataPrototype shall be
	compatible.
	Even though SwComponentType supports multiple instantiation, EnableTakeAddress is used.
767	
	If SwComponentType supports multiple instantiation, EnableTakeAddress shall not be used.

SHT/SHTS 154 / 203

768	RTE currently does not support initial value of CalibrationParameterValue.
	Do not use initial value of CalibrationParameterValue.
769	There are multiple RoleBasedPortAssignment which have same role.
	There shall be single RoleBasedPortAssignment for each role.
770	The number of ModeMapping is over Multiplicity.
	The number of ModeMapping shall be within Multiplicity.
771	The number of NvBlockNeeds is over Multiplicity.
	The number of NvBlockNeeds shall be within Multiplicity.
772	The number of RamBlock is over Multiplicity.
	The number of RamBlock shall be within Multiplicity.
773	The number of RomBlock is over Multiplicity.
	The number of RomBlock shall be within Multiplicity.
774	The number of CalcRamBlockCrc is over Multiplicity.
	The number of CalcRamBlockCrc shall be within Multiplicity.
775	The number of RestoreAtStart is over Multiplicity.
	The number of RestoreAtStart shall be within Multiplicity.
776	The number of StoreAtShutDown is over Multiplicity.
	The number of StoreAtShutDown shall be within Multiplicity.
777	The number of WritingFrequency is over Multiplicity.
	The number of WritingFrequency shall be within Multiplicity. The number of NvRamBlockElement is over Multiplicity.
778	
	The number of NvRamBlockElement shall be within Multiplicity.
779	The number of ReadNvData is over Multiplicity.
	The number of ReadNvData shall be within Multiplicity.
780	The number of WrittenNvData is over Multiplicity.
	The number of WrittenNvData shall be within Multiplicity.
781	The number of VariableRef is over Multiplicity.
	The number of VariableRef shall be within Multiplicity.
782	The number of AutosarVariableInImplDataType is over Multiplicity.
	The number of AutosarVariableInImplDataType shall be within Multiplicity.
783	The number of OsResourceProperty is over Multiplicity.
	The number of OsResourceProperty shall be within Multiplicity.
784	The number of InitValue in ParameterComSpec is over Multiplicity.
	The number of InitValue in ParameterComSpec shall be within Multiplicity.
785	The number of TypeTRef is over Multiplicity. The number of TypeTRef shall be within Multiplicity.
	LIDO OUMBOL OF IVERLED CORUNDO WITHIN MILITIALICITY

SHT/SHTS 155 / 203

786	The number of PortPrototypeRef in RoleBasedPortAssignment is over Multiplicity.
780	The number of PortPrototypeRef in RoleBasedPortAssignment shall be within Multiplicity.
	The number of Role is over Multiplicity.
787	
	The number of Role shall be within Multiplicity.
788	The number of RteVariableReadAccessRef is over Multiplicity.
700	The number of RteVariableReadAccessRef shall be within Multiplicity.
	The number of RteVariableWriteAccessRef is over Multiplicity.
789	The name of the variable with the constitution of the constitution
	The number of RteVariableWriteAccessRef shall be within Multiplicity.
	The number of LocalParameterRef is over Multiplicity.
790	
	The number of LocalParameterRef shall be within Multiplicity.
791	The number of BehaviorRef in SwcImplementation is over Multiplicity.
791	The number of BehaviorRef in SwcImplementation shall be within Multiplicity.
	The number of SwcBswMappingRef is over Multiplicity.
792	The nember of Englishing Color meruphany,
	The number of SwcBswMappingRef shall be within Multiplicity.
	Parameter Interface does not support N:1 communication.
793	
	Parameter Interface shall be only used for 1:1, 1:N communication.
794	RamBlock in NvBlockDescriptor is empty.
754	RamBlock in NvBlockDescriptor shall be set.
	QueueLength for PortPrototype and VariableDataPrototype is empty.
795	
	QueueLength for PortPrototype and VariableDataPrototype shall be set.
706	RTE_COMCbk Function is not used with RPortPrototype.
796	RTE_COMCbk Function shall be used with RPortPrototype.
	InitValue in NonQueuedSenderComSpec is empty.
797	micraise in Nonascocascinaei comspec is empty.
	InitValue in NonQueuedSenderComSpec shall be set.
	There is no SenderRecArrayElementMapping in SenderRecArrayTypeMapping for the index .
798	
	SenderRecArrayElementMapping in SenderRecArrayTypeMapping shall be exist for the index .
	There is no SenderRecRecordElementMapping in SenderRecRecordTypeMapping for ImplementationDataTypeElement.
799	implementation bata Type Liement.
, 55	SenderRecRecordElementMapping in SenderRecRecordTypeMapping shall be exist for
	ImplementationDataTypeElement.
	Parameter Interface supports only Intra Partition Communication.
800	
	Do not use Parameter Interface except Intra Partition Communication.
801	SwComponentPrototypes for the SwComponentType is not assigned to the same partition.
30 I	SwComponentPrototypes for the SwComponentType shall be assigned to the same partition.
	There is no SenderRecRecordElementMapping in SenderRecRecordTypeMapping for
002	ApplicationRecordElement.
802	ApplicationRecordElement.

SHT/SHTS 156 / 203

	ApplicationRecordElement.
803	The number of TypeTRef in RomBlock is over Multiplicity.
803	The number of TypeTRef in RomBlock shall be within Multiplicity.
	Even though multiple instance is used, SupportsMultipleInstantiation in InternalBehavior is not
804	set true.
	If multiple instance is used, SupportsMultipleInstantiation in InternalBehavior shall be set true.
	Both ISignalRef and ISignalGroupRef in ISignalTolPduMapping exist.
805	
	Only one of ISignalRef or ISignalGroupRef in ISignalTolPduMapping shall exist.
806	Neither ISignalRef nor ISignalGroupRef in ISignalTolPduMapping exists.
	One of ISignalRef or ISignalGroupRef in ISignalToIPduMapping shall exist.
	The number of NvBlockDataMapping in NvBlockDescriptor is not 1.
807	The search an of Ne Discol-Desta Managian is Ne Discol-Description should be 1
	The number of NvBlockDataMapping in NvBlockDescriptor shall be 1. The number of internal OsResource in OsTask is over 1.
808	The homber of internal oskesooree in ostask is over 1.
	The number of internal OsResource in OsTask shall be 1.
	There is an inconsistency between initial values of DataElement and
809	ComSignal/ComSignalGroup.
	Initial values of DataElement and ComSignal/ComSignalGroup shall be consistent.
	Unconnected PortPrototype typed with NvDataInterface does not have NvRequireComSpec with
0.1.0	a InitValue.
810	Unconnected PortPrototype typed with NvDataInterface shall have NvRequireComSpec with a InitValue.
	RTE does not support REPLACE HandleTimeoutType for the intra ecu communication.
811	
	RTE does not support REPLACE HandleTimeoutType for the intra ecu communication. HandleTimeoutType and ComRxDataTimeoutAction have inconsistency.
812	Handle Timeout type and ComkxData TimeoutAction have inconsistency.
	HandleTimeoutType and ComRxDataTimeoutAction have inconsistency.
	Even though HandleTimeoutType is REPLACE, ComTimeoutNotification is not set.
813	If HandleTimeoutType is REPLACE, ComTimeoutNotification shall be set.
	Even though HandleTimeoutType is REPLACE, InitValue is not set.
814	
	If HandleTimeoutType is REPLACE, InitValue shall be set.
015	Even though HandleTimeoutType is REPLACE, AliveTimeout is not set.
815	If HandleTimeoutType is REPLACE, AliveTimeout shall be set.
	Both RteUsedOsAlarmRef and RteUsedOsSchTblExpiryPointRef in RteEventToTaskMapping exist
816	
010	Only one of RteUsedOsAlarmRef or RteUsedOsSchTblExpiryPointRef in RteEventToTaskMapping shall exist.
	Neither RteUsedOsAlarmRef nor RteUsedOsSchTblExpiryPointRef in RteEventToTaskMapping
	exists.
817	
	One of RteUsedOsAlarmRef or RteUsedOsSchTblExpiryPointRef in RteEventToTaskMapping shall
	exist.



문서 번호 (DOC NO)

SHT/SHTS 157 / 203

	Both OsAlarmSetEvent and OsAlarmActivateTask in OsAlarmAction exist.
818	BOTH OSAIGHHSELEVENT GITU OSAIGHHACTIVGTETGSK III OSAIGHHACTION EXIST.
	Only one of OsAlarmSetEvent or OsAlarmActivateTask in OsAlarmAction shall exist.
819	Neither OsAlarmSetEvent nor OsAlarmActivateTask in OsAlarmAction exists.
	One of OsAlarmSetEvent or OsAlarmActivateTask in OsAlarmAction shall exist.
	TimingEvent, DataReceivedEvent, DataReceiveErrorEvent, DataSendCompletedEvent,
820	DataWriteCompletedEvent shall be mapped to OsTask.
	TimingEvent, DataReceivedEvent, DataReceiveErrorEvent, DataSendCompletedEvent,
	DataWriteCompletedEvent shall be mapped to OsTask.
	RteUsedOsEventRef in RteEventToTaskMapping is not set for ExtendedTask.
821	
	RteUsedOsEventRef in RteEventToTaskMapping shall be set for ExtendedTask.
	OsTask is not mapped to OsApplication.
822	O-TII shall be seemed to O-Application
	OsTask shall be mapped to OsApplication. OsAppEcucPartitionRef in OsApplication is empty or invalid.
823	OSAPPECUCPARTITIONREI IN OSAPPIICATION IS EMPTY OF INVAIID.
023	OsAppEcucPartitionRef in OsApplication shall be set with valid EcucPartition path.
	For using EcucPartition, SwComponentPrototype is not mapped to EcucPartition.
824	
	For using EcucPartition, SwComponentPrototype shall be mapped to EcucPartition.
825	There is mismatching partition between SwComponentPrototype and OsTask.
	There is mismatching partition between SwComponentPrototype and OsTask.
	There is mismatching partition between SwComponentPrototype and OsAlarm.
826	
	There is mismatching partition between SwComponentPrototype and OsAlarm.
	OsAlarm is not mapped to OsApplication.
827	
	OsAlarm shall be mapped to OsApplication.
828	The number of InitValue in RamBlock is over Multiplicity.
020	The number of InitValue in RamBlock shall be within Multiplicity.
	The number of InitValue in RomBlock is over Multiplicity.
829	
	The number of InitValue in RomBlock shall be within Multiplicity.
	The number of ServerCallPoints which have same ContextRPortRef and
	TargetProvidedOperationRef is over 1.
835	
	The number of ServerCallPoints which have same ContextRPortRef and
	TargetProvidedOperationRef shall be 1.
	The number of ServerCallPoints which have same ContextRPortRef and
836	TargetProvidedOperationRef is over 1.
030	The number of ServerCallPoints which have same ContextRPortRef and
	TargetProvidedOperationRef shall be 1.
	ParameterValue of AutosarObject is empty or invalid.
837	
	ParameterValue of AutosarObject shall be set.
	ComNotification in ComSignal/ComSignalGroup is empty or invalid.
838	
	ComNotification in ComSignal/ComSignalGroup shall be set with valid value.
	Commodification in Combignal/CombignalGroup shall be set with valid value.

SHT/SHTS 158 / 203

839	ComNotification in ComSignal/ComSignalGroup is empty or invalid.
039	ComNotification in ComSignal/ComSignalGroup shall be set with valid value.
	ComTimeoutNotification in ComSignal/ComSignalGroup is empty or invalid.
840	
	ComTimeoutNotification in ComSignal/ComSignalGroup shall be set with valid value. ComTimeoutNotification in ComSignal/ComSignalGroup is empty or invalid.
841	Commine out Notification in Compignal, Compignal Group is empty of invalid.
	ComTimeoutNotification in ComSignal/ComSignalGroup shall be set with valid value.
0.10	ComErrorNotification in ComSignal/ComSignalGroup is empty or invalid.
842	ComErrorNotification in ComSignal/ComSignalGroup shall be set with valid value.
	ComInvalidNotification in ComSignal/ComSignalGroup is empty or invalid.
843	
	ComInvalidNotification in ComSignal/ComSignalGroup shall be set with valid value.
	Tx ComSignal/ComSignalGroup has Rte_COMCbk callback function as ComNotification.
844	Tx ComSignal/ComSignalGroup shall not have Rte_COMCbk callback function as
	ComNotification.
	Tx ComSignal/ComSignalGroup has Rte_COMCbkInv callback function as ComInvalidNotification.
845	Tx ComSignal/ComSignalGroup shall not have Rte_COMCbkInv callback function as
	CominvalidNotification.
	Tx ComSignal/ComSignalGroup has Rte_COMCbkRxTOut callback function as
0.46	ComTimeoutNotification.
846	Tx ComSignal/ComSignalGroup shall not have Rte_COMCbkRxTOut callback function as
	ComTimeoutNotification.
	Rx ComSignal/ComSignalGroup has Rte_COMCbkTAck callback function as ComNotification.
847	Rx ComSignal/ComSignalGroup shall not have Rte_COMCbkTAck callback function as
	ComNotification.
	Rx ComSignal/ComSignalGroup has Rte_COMCbkTErr callback function as ComErrorNotifcation.
848	
	Rx ComSignal/ComSignalGroup shall not have Rte_COMCbkTErr callback function as ComErrorNotifcation.
	Rx ComSignal/ComSignalGroup has Rte_COMCbkTxTOut callback function as
	ComTimeoutNotification.
849	Dy Compignation of the plant of the property of the compiler of the property of the plant of the
	Rx ComSignal/ComSignalGroup shall not have Rte_COMCbkTxTOut callback function as ComTimeoutNotification.
	QueueLength in ServerComSpec is lesser than or equal to 0.
850	
	QueueLength in ServerComSpec shall be greater than 0.
851	The number of RteInitializationStrategy in RteInitializationBehavior is over 1.
35 1	The number of RteInitializationStrategy in RteInitializationBehavior shall be 1.
	HandleOutOfRange in QueuedSenderComSpec is INVALID or DEFAULT or EXTERNAL-
852	REPLACEMENT.
032	HandleOutOfRange in QueuedSenderComSpec shall not be INVALID or DEFAULT or EXTERNAL-
	REPLACEMENT.
	HandleOutOfRangeStatus in ReceiverComSpec is INDICATE.
853	Handle Out Of Pagge Status in Paggiver Compagge shall got be INDICATE
	HandleOutOfRangeStatus in ReceiverComSpec shall not be INDICATE.

SHT/SHTS 159 / 203

	ComSignalType in ComSignal/ComGroupSignal does not match with the
854	ImplementationDataType.
	ComSignalType in ComSignal/ComGroupSignal shall match with the ImplementationDataType.
	The number of ApplicationArrayElement in ApplicationArrayDataType is not 1.
855	
	The number of ApplicationArrayElement in ApplicationArrayDataType shall be 1.
	CompuMethodRef in SwDataDefProps is set with other categories except VALUE and BOOLEAN.
856	CompuMethodRef in SwDataDefProps shall not be set with other categories except VALUE and BOOLEAN.
857	CompuMethodRef in SwDataDefProps is set with other categories except VALUE and TYPE_REFERENCE.
	CompuMethodRef in SwDataDefProps shall not be set with other categories except VALUE and TYPE_REFERENCE.
	DataConstrRef in SwDataDefProps is set with other categories except VALUE and BOOLEAN.
858	DataConstrRef in SwDataDefProps shall not be set with other categories except VALUE and BOOLEAN.
	DataConstrRef in SwDataDefProps is set with other categories except VALUE.
859	
	DataConstrRef in SwDataDefProps shall not be set with other categories except VALUE.
	InvalidValue in SwDataDefProps is set with other categories except VALUE and BOOLEAN.
860	InvalidValue in SwDataDefProps shall not be set with other categories except VALUE and BOOLEAN.
861	InvalidValue in SwDataDefProps is set with other categories except VALUE.
	InvalidValue in SwDataDefProps shall not be set with other categories except VALUE.
862	CompuMethodRef in SwDataDefProps is set with ApplicationArrayElement or ApplicationRecordElement.
002	CompuMethodRef in SwDataDefProps shall not be set with ApplicationArrayElement or ApplicationRecordElement.
	DataConstrRef in SwDataDefProps is set with ApplicationArrayElement or
863	ApplicationRecordElement.
003	DataConstrRef in SwDataDefProps shall not be set with ApplicationArrayElement or ApplicationRecordElement.
	InvalidValue in SwDataDefProps is set with ApplicationArrayElement or
	ApplicationRecordElement.
864	InvalidValue in SwDataDefProps shall not be set with ApplicationArrayElement or
	ApplicationRecordElement.
	HandleOutOfRange in QueuedReceiverComSpec is INVALID or DEFAULT or EXTERNAL-
865	REPLACEMENT.
	HandleOutOfRange in QueuedReceiverComSpec shall not be INVALID or DEFAULT or EXTERNAL REPLACEMENT.
868	Even though IntervalType in Limit is INFINITE, Value in Limit is not empty.
	If IntervalType in Limit is INFINITE, Value in Limit shall be empty.

SHT/SHTS 160 / 203

	RteExpectedActivationOffset in RteUsedOsActivation is not multiples of OsSecondsPerTick in
	OsCounter.
869	
	RteExpectedActivationOffset in RteUsedOsActivation shall be multiples of OsSecondsPerTick in
	OsCounter.
	RteExpectedActivationOffset in RteUsedOsActivation is not within a range of 0 and
	OsSecondsPerTick * OsCounterMaxAllowedValue in OsCounter.
870	
	RteExpectedActivationOffset in RteUsedOsActivation shall be within a range of 0 and
	OsSecondsPerTick * OsCounterMaxAllowedValue in OsCounter.
	There are multiple RteEventToTaskMappings which have same RteEventRef in
	RteSwComponentInstance.
871	
	There shall not be multiple RteEventToTaskMappings which have same RteEventRef in
	RteSwComponentInstance.
	There are multiple RteSectionInitializationPolicies in RteInitializationBehavior.
872	
	There shall not be multiple RteSectionInitializationPolicies in RteInitializationBehavior.
	OsTask of RteMappedToTaskRef in RteEventToTaskMapping does not have OsEvent of
072	RteUsedOsEventRef in RteEventToTaskMapping.
873	On Tank of Danksman de Tank Dafia Dan Franch To Tank Manning about horse On Franch of
	OsTask of RteMappedToTaskRef in RteEventToTaskMapping shall have OsEvent of
	RteUsedOsEventRef in RteEventToTaskMapping.
	RteEventRef in RteEventToTaskMapping is not member of RteSoftwareComponentInstanceRef in
874	RteSwComponentInstance.
0/4	RteEventRef in RteEventToTaskMapping shall be member of RteSoftwareComponentInstanceRef
	in RteSwComponentInstance.
	Even though RteEventRef in RteEventToTaskMapping does not reference TimingEvent,
	RteActivationOffset in RteEventToTaskMapping is set.
875	The second secon
	If RteEventRef in RteEventToTaskMapping does not reference TimingEvent, RteActivationOffset
	in RteEventToTaskMapping shall not be set.
	RteActivationOffset in RteEventToTaskMapping is not multiples of OsSecondsPerTick in
	OsCounter.
876	
	RteActivationOffset in RteEventToTaskMapping shall be multiples of OsSecondsPerTick in
	OsCounter.
	RteActivationOffset in RteEventToTaskMapping is not within a range of 0 and OsSecondsPerTic
	* OsCounterMaxAllowedValue in OsCounter.
877	
	RteActivationOffset in RteEventToTaskMapping shall be within a range of 0 and
	OsSecondsPerTick * OsCounterMaxAllowedValue in OsCounter.
	Period in TimingEvent is not multiples of OsSecondsPerTick in OsCounter.
878	
	Period in TimingEvent shall be multiples of OsSecondsPerTick in OsCounter.
	Period in TimingEvent is not within a range of 0 and OsSecondsPerTick *
070	OsCounterMaxAllowedValue in OsCounter.
879	Deviad in Timing Funct shall be within a many of O and O.C. I. D. Till it
	Period in TimingEvent shall be within a range of 0 and OsSecondsPerTick *
	OsCounterMaxAllowedValue in OsCounter.
000	RteVariableWriteAccessRef in RteImplicitCommunication is invalid.
880	RteVariableWriteAccessRef in RteImplicitCommunication shall be valid.
	I RIBVALIANIBWILIBBIT BESKEL IN KIBIMDUCITI OMMUNICATION SNAU NO VAUN

SHT/SHTS 161 / 203

001	RteVariableReadAccessRef in RteImplicitCommunication is invalid.
881	RteVariableReadAccessRef in RteImplicitCommunication shall be valid.
	OsTask of RteVirtuallyMappedToTaskRef in RteEventToTaskMapping is not activated by OsAlarm
	of RteUsedOsAlarmRef in RteEventToTaskMapping.
882	of Recosed os Alaminer in Receivement askinapping.
002	OsTask of RteVirtuallyMappedToTaskRef in RteEventToTaskMapping shall be activated by
	OsAlarm of RteUsedOsAlarmRef in RteEventToTaskMapping.
	• • • • • • • • • • • • • • • • • • • •
	OsTask of RteMappedToTaskRef in RteEventToTaskMapping is not activated by OsAlarm of
000	RteUsedOsAlarmRef in RteEventToTaskMapping.
883	
	OsTask of RteMappedToTaskRef in RteEventToTaskMapping shall be activated by OsAlarm of
	RteUsedOsAlarmRef in RteEventToTaskMapping.
	OsTask of RteVirtuallyMappedToTaskRef in RteEventToTaskMapping does not have OsEvent of
	RteUsedOsEventRef in RteEventToTaskMapping.
884	
	OsTask of RteVirtuallyMappedToTaskRef in RteEventToTaskMapping shall have OsEvent of
	RteUsedOsEventRef in RteEventToTaskMapping.
	OsTask of RteMappedToTaskRef in RteEventToTaskMapping does not have OsEvent of
	RteUsedOsEventRef in RteEventToTaskMapping.
885	
	OsTask of RteMappedToTaskRef in RteEventToTaskMapping shall have OsEvent of
	RteUsedOsEventRef in RteEventToTaskMapping.
	RteBswActivationOffset in RteBswEventToTaskMapping is not multiples of OsSecondsPerTick in
	OsCounter.
886	
	RteBswActivationOffset in RteBswEventToTaskMapping shall be multiples of OsSecondsPerTick
	in OsCounter.
	RteBswActivationOffset in RteBswEventToTaskMapping is not within a range of 0 and
	OsSecondsPerTick * OsCounterMaxAllowedValue in OsCounter.
887	
	RteBswActivationOffset in RteBswEventToTaskMapping shall be within a range of 0 and
	OsSecondsPerTick * OsCounterMaxAllowedValue in OsCounter.
	Period in BswTimingEvent is not multiples of OsSecondsPerTick in OsCounter.
888	
	Period in BswTimingEvent shall be multiples of OsSecondsPerTick in OsCounter.
	Period in BswTimingEvent is not within a range of 0 and OsSecondsPerTick *
	OsCounterMaxAllowedValue in OsCounter.
889	
	Period in BswTimingEvent shall be within a range of 0 and OsSecondsPerTick *
	OsCounterMaxAllowedValue in OsCounter.
	Even though RteBswEventRef in RteBswEventToTaskMapping does not reference
	BswTimingEvent, RteBswActivationOffset in RteBswEventToTaskMapping is set.
890	bsw miningevent, ktebsw/tenvationonset in ktebsweventroraskinapping is set.
050	If RteBswEventRef in RteBswEventToTaskMapping does not reference BswTimingEvent,
	RteBswActivationOffset in RteBswEventToTaskMapping shall not be set.
	OsTask of RteUsedOsEventRef in RteEventToTaskMapping is not activated by OsAlarm of
	·
001	RteUsedOsAlarmRef in RteEventToTaskMapping.
891	
	OsTask of RteUsedOsEventRef in RteEventToTaskMapping shall be activated by OsAlarm of
	RteUsedOsAlarmRef in RteEventToTaskMapping.
	There are multiple NvRequireComSpecs which have VariableRef in RPortPrototype.
892	There shall not be multiple NvRequireComSpecs which have VariableRef in RPortPrototype.

SHT/SHTS 162 / 203

002	There are multiple ParameterRequireComSpecs of ParameterRef in RPortPrototype.
893	There shall be single ParameterRequireComSpec of ParameterRef in RPortPrototype.
	There are multiple ReceiverComSpecs which have DataElementRef in RPortPrototype.
894	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,
	There shall not be multiple ReceiverComSpecs which have DataElementRef in RPortPrototype.
	There are multiple ServerComSpecs which have OperationRef in PortPrototype.
895	
	There shall not be multiple ServerComSpec which have OperationRef in PortPrototype.
	There are multiple NvProvideComSpecs which have VariableRef in PPortPrototype.
896	
	There shall not be multiple NvProvideComSpecs which have VariableRef in PPortPrototype.
	There are multiple ParameterProvideComSpecs which have same ParameterRef in
	PPortPrototype.
897	
	There shall not be multiple ParameterProvideComSpecs which have same ParameterRef in
	PPortPrototype.
	There are multiple SenderComSpecs which have same DataElementRef in PPortPrototype.
898	
030	There shall not be multiple SenderComSpecs which have same DataElementRef in
	PPortPrototype.
	PortPrototype in NvBlockSwComponentType has InterfaceTypeTRef. which references
	InterfacelsService in Interface is not FALSE .
899	
	PortPrototype in NvBlockSwComponentType shall not have InterfaceTypeTRef. which references
	InterfaceIsService in Interface shall be FALSE .
	PortPrototype in NvBlockSwComponentType has InterfaceTypeTRef which does not reference
	NvDataInterface or ClientServerInterface.
900	
	PortPrototype in NvBlockSwComponentType shall have InterfaceTypeTRef which references
	NvDataInterface or ClientServerInterface.
	Even though InvalidationPolicy in VariableDataPrototype is REPLACE, InitValue and InvalidValue is same.
901	is same.
301	If InvalidationPolicy in VariableDataPrototype is REPLACE, InitValue and InvalidValue shall be
	different.
	Even though implicit Sender-Receiver Communication is used, EnableUpdate in
	NonQueuedReceiverComSpec is set TRUE.
902	The management of the second part is second part in
	If implicit Sender-Receiver Communication is used, EnableUpdate in
	NonQueuedReceiverComSpec shall be FALSE.
	Neither NumericalValueSpecification, ConstantReference, nor ApplicationValueSpecification in
	InvalidValue exists.
903	
	One of NumericalValueSpecification, ConstantReference, or ApplicationValueSpecification in
	InvalidValue shall exist.
	Both PPortInCompositionInstanceRef and RPortInCompositionInstanceRef in InnerPortIRef exist.
904	
3 04	Only one of PPortInCompositionInstanceRef or RPortInCompositionInstanceRef in InnerPortIRef
	shall exist.
	Neither PPortInCompositionInstanceRef nor RPortInCompositionInstanceRef in InnerPortIRef
	exists.
905	
	One of PPortInCompositionInstanceRef or RPortInCompositionInstanceRef in InnerPortIRef shall
	exist.
	© 2020 HVI NDALATTEON Co. Ltd. All Pight Pacan

HYUNDAI

문서 번호 (DOC NO)

SHT/SHTS 163 / 203

If ImplementationDataType has Category of ARRAY, RTE does not support ImplementationDataTypeElement which has Category of ARRAY or STRUCTURE. 906 Please use ImplementationDataTypeElement which has Category of TYPE_REFERENCE for multi dimensional array or array of structure. Category in ImplementationDataType is FUNCTION_REFERENCE. 907 Category in ImplementationDataType shall not be FUNCTION_REFERENCE. Category in ApplicationValueSpec is not VALUE or BOOLEAN. 908 Category in ApplicationValueSpec shall be VALUE or BOOLEAN. Category in ApplicationRecordDataType is not STRUCTURE. 909 Category in ApplicationRecordDataType shall be STRUCTURE. Category in ApplicationRecordElement and Category in ApplicationDataType which TypeTRef in ApplicationRecordElement references is not identical. 910 Category in ApplicationRecordElement and Category in ApplicationDataType which TypeTRef in ApplicationRecordElement references shall be identical. Both LocalParameterRef and AutosarParameterRef in AccessedParameter exist. 911 Only one of LocalParameterRef or AutosarParameterRef in AccessedParameter shall exist. Both LocalVariableRef and AutosarVariablelRef in AccessedVariable exist. 912 Only One of LocalVariableRef or AutosarVariableIRef in AccessedVariable shall exist. Neither LocalVariableRef nor AutosarVariableIRef in AccessedVariable exists. 913 One of LocalVariableRef or AutosarVariableIRef in AccessedVariable shall exist. Neither LocalParameterRef nor AutosarParameterRef in AccessedParameter exists. 914 One of LocalParameterRef or AutosarParameterRef in AccessedParameter shall exist. ImplementationDataType of VariableDataPrototype and ImplementationDataType of VariableDataPrototype is inconsistent. 915 ImplementationDataType of VariableDataPrototype and ImplementationDataType of VariableDataPrototype shall be consistent. ContextComponentRef in DataElementIRef is empty or invalid. 916 ContextComponentRef in DataElementIRef shall be set with valid SwComponentPrototype path. ContextPortRef in DataElementIRef is empty or invalid. 917 ContextPortRef in DataElementIRef shall be set with valid PortPrototype path. TargetDataPrototypeRef in DataElementIRef is empty or invalid. 918 TargetDataPrototypeRef in DataElementIRef shall be set with valid DataElement Path. RteSoftwareComponentInstanceRef in RteImplicitCommunication is empty. 919 RteSoftwareComponentInstanceRef in RteImplicitCommunication shall be set. RteSoftwareComponentInstanceRef in RteImplicitCommunication is invalid. 920 RteSoftwareComponentInstanceRef in RteImplicitCommunication shall be set with valid SwComponentPrototype path. RteSoftwareComponentInstanceRef in RteImplicitCommunication is duplicated. 921 RteSoftwareComponentInstanceRef in RteImplicitCommunication shall be unique.

문서 번호 (DOC NO) SHT/SHTS 164 / 203

922	PortPrototypeRef in AutosarParameterlRef is empty or invalid.
<i>322</i>	PortPrototypeRef in AutosarParameterIRef shall be set with valid PortPrototype Path.
	PortPrototypeRef in AutosarVariableIRef is empty or invalid.
923	
	PortPrototypeRef in AutosarVariableIRef shall be set with valid PortPrototype Path.
004	PortPrototypeRef in RoleBasedPortAssignment is empty or invalid.
924	PortPrototypeRef in RoleBasedPortAssignment shall be set with valid PortPrototype Path.
	TargetDataPrototypeRef in AutosarParameterIRef is empty or invalid.
005	in generation of the first term of the first ter
925	TargetDataPrototypeRef in AutosarParameterlRef shall be set with valid
	ParameterDataPrototype Path.
	TargetDataPrototypeRef in AutosarVariableInImplDataType is empty or invalid.
926	Toward Data Duratative Defin Autora Warish Island Bata Time about he got with walld
	TargetDataPrototypeRef in AutosarVariableInImplDataType shall be set with valid VariableDataPrototype Path.
	TargetDataPrototypeRef in AutosarVariableIRef is empty or invalid.
007	Targets attar rototypener in riotosar variablemen is empty or invalia.
927	TargetDataPrototypeRef in AutosarVariableIRef shall be set with valid VariableDataPrototype
	Path.
	ComSystemTemplateSystemSignalRef in ComSignal is empty or invalid.
928	ComSystemTemplateSystemSignalRef in ComSignal shall be set with valid ISignalTolPduMapping
	path.
	ComSystemTemplateSystemSignalRef in ComGroupSignal is empty or invalid.
929	
929	ComSystemTemplateSystemSignalRef in ComGroupSignal shall be set with valid
	ISignalToIPduMapping path.
	ComSystemTemplateSystemSignalGroupRef in ComSignalGroup is empty or invalid.
930	ComSystemTemplateSystemSignalGroupRef in ComSignalGroup shall be set with valid
	ISignalTolPduMapping path.
	BehaviorRef in BswImplementation is empty or invalid.
931	
	BehaviorRef in BswImplementation shall be set with valid BswInternalBehavior path.
932	BehaviorRef in SwcImplementation is empty or invalid.
332	BehaviorRef in SwcImplementation shall be set with valid SwcInternalBehavior path.
	SystemSignalRef in ISignal is empty or invalid.
933	
	SystemSignalRef in ISignal shall be set with valid SystemSignal path.
004	SystemSignalRef in SenderReceiverToSignalMapping is empty or invalid.
934	SystemSignalRef in SenderReceiverToSignalMapping shall be set with valid SystemSignal Path.
	SystemSignalRef in SenderRecArrayElementMapping is empty or invalid.
935	System Signance in Sender Recontray Element Mapping is empty of invalid.
	SystemSignalRef in SenderRecArrayElementMapping shall be set with valid SystemSignal path.
	SystemSignalRef in SenderRecRecordElementMapping is empty or invalid.
936	
	SystemSignalRef in SenderRecRecordElementMapping shall be set with valid SystemSignal path.
937	SystemSignalGroupRef in ISignalGroup is empty or invalid.
931	SystemSignalGroupRef in ISignalGroup shall be set with valid SystemSignalGroup path.

) SHT/SHTS 165 / 203

	SystemSignalGroupRef in SenderReceiverToSignalGroupMapping is empty or invalid.
938	SystemSignalGroupRef in SenderReceiverToSignalGroupMapping shall be set with valid
	SystemSignalGroup path.
	SystemSignalRef in SystemSignalGroup is empty.
939	
	SystemSignalRef in SystemSignalGroup shall be set with valid SystemSignal path.
0.40	SystemSignalRef in SystemSignalGroup is invalid.
940	SystemSignalRef in SystemSignalGroup shall be set with valid SystemSignal path.
	SenderRecArrayTypeMapping in SenderReceiverToSignalGroupMapping is empty.
941	
	SenderRecArrayTypeMapping in SenderReceiverToSignalGroupMapping shall be set.
0.40	SenderRecRecordTypeMapping in SenderReceiverToSignalGroupMapping is empty.
942	SenderRecRecordTypeMapping in SenderReceiverToSignalGroupMapping shall be set.
	Index in IndexedArrayElement is empty.
950	mask in masked in a justice is simply.
	Index in IndexedArrayElement shall be set.
	ImplementationArrayElementRef in IndexedArrayElement is empty.
951	ImplementationArrayElementRef in IndexedArrayElement shall be set.
	ImplementationArrayElementRef in IndexedArrayElement is set.
952	implementation, analyzicinentate in indexed, analyzicinent is see.
	ImplementationArrayElementRef in IndexedArrayElement shall not be set.
	ApplicationArrayElementRef in IndexedArrayElement is empty.
953	Amplication Amplification at Definite Indexed Amplification at about he act
	ApplicationArrayElementRef in IndexedArrayElement shall be set. ApplicationArrayElementRef in IndexedArrayElement is set.
954	Application wray Element in Indexed wray Element is Set.
	ApplicationArrayElementRef in IndexedArrayElement shall not be set.
	IndexedArrayElement in SenderRecArrayElementMapping is not set.
955	Indexed Array Flores tip Conder Dog Array Flores than price shall be set
	IndexedArrayElement in SenderRecArrayElementMapping shall be set. SenderRecArrayTypeMapping in SenderRecArrayElementMapping is not set.
956	Schaerkeer and Type Mapping in Schaerkeer and Elemental Appling is not set.
	SenderRecArrayTypeMapping in SenderRecArrayElementMapping shall be set.
	SenderRecArrayTypeMapping in SenderRecArrayElementMapping is set.
957	Conder Doc Arrent Type Manning in Conder Doc Arrent Florence Manning about out he get
	SenderRecArrayTypeMapping in SenderRecArrayElementMapping shall not be set. SenderRecRecRecordTypeMapping in SenderRecArrayElementMapping is not set.
958	Sender RecRecord Type Mapping III Sender Rec/May Element Mapping 13 not set.
	SenderRecRecordTypeMapping in SenderRecArrayElementMapping shall be set.
	SenderRecRecordTypeMapping in SenderRecArrayElementMapping is set.
959	
	SenderRecRecordTypeMapping in SenderRecArrayElementMapping shall not be set. ImplementationRecordElementRef in SenderRecRecordElementMapping is empty.
960	implementationicecordinenticer in bendericectecordinentimapping is empty.
-	ImplementationRecordElementRef in SenderRecRecordElementMapping shall be set.
	ImplementationRecordElementRef in SenderRecRecordElementMapping is set.
961	
	ImplementationRecordElementRef in SenderRecRecordElementMapping shall not be set.
	ApplicationRecordElementRef in SenderRecRecordElementMapping is empty.

SHT/SHTS 166 / 203

	ApplicationRecordElementRef in SenderRecRecordElementMapping shall be set.
963	ApplicationRecordElementRef in SenderRecRecordElementMapping is set.
	ApplicationRecordElementRef in SenderRecRecordElementMapping shall not be set.
064	SenderRecArrayElementMapping for Index in SenderRecArrayTypeMapping does not exist.
964	SenderRecArrayElementMapping for Index in SenderRecArrayTypeMapping shall exist.
965	The number of SenderRecArrayElementMapping in SenderRecArrayTypeMapping is not correct.
	The number of SenderRecArrayElementMapping in SenderRecArrayTypeMapping shall be correct.
	The number of SenderRecRecordElementMapping in SenderRecRecordTypeMapping is not
966	correct. The number of SenderRecRecordElementMapping in SenderRecRecordTypeMapping shall be
	correct. SenderRecRecordElementMapping for ImplementationDataTypeElement in
	SenderRecArrayTypeMapping does not exist.
967	Senderice, and Type Mapping does not exist.
	SenderRecRecordElementMapping for ImplementationDataTypeElement in
	SenderRecArrayTypeMapping shall exist.
968	SenderRecArrayTypeMapping in SenderReceiverToSignalGroupMapping is set.
300	SenderRecArrayTypeMapping in SenderReceiverToSignalGroupMapping shall not be set.
	SenderRecRecordTypeMapping in SenderReceiverToSignalGroupMapping is set.
969	
	SenderRecRecordTypeMapping in SenderReceiverToSignalGroupMapping shall not be set.
070	DataElementlRef in SenderReceiverToSignalMapping is empty.
970	DataElementlRef in SenderReceiverToSignalMapping shall be set.
	DataElementlRef in SenderReceiverToSignalGroupMapping is empty.
971	
	DataElementlRef in SenderReceiverToSignalGroupMapping shall be set.
072	Activation in SwcModeSwitchEvent is empty or invalid.
972	Activation in SwcModeSwitchEvent shall be set with valid value.
	SenderRecRecordElementMapping for ApplicationRecordElement in SenderRecArrayTypeMapping
	does not exist.
973	
	SenderRecRecordElementMapping for ApplicationRecordElement in SenderRecArrayTypeMapping
	shall exist. SenderRecRecordTypeMapping in SenderRecRecordElementMapping is set.
974	SenderRecRecord TypeMapping in SenderRecRecordElementMapping is set.
37.	SenderRecRecordTypeMapping in SenderRecRecordElementMapping shall not be set.
	SenderRecRecordTypeMapping in SenderRecRecordElementMapping is not set.
975	
	SenderRecRecordTypeMapping in SenderRecRecordElementMapping shall be set.
076	SenderRecArrayTypeMapping in SenderRecRecordElementMapping is set.
976	SenderRecArrayTypeMapping in SenderRecRecordElementMapping shall not be set.
	SenderRecArrayTypeMapping in SenderRecRecordElementMapping is not set.
977	, , , , , , , , , , , , , , , , , , , ,
	SenderRecArrayTypeMapping in SenderRecRecordElementMapping shall be set.
	Category in ApplicationArrayElement and Category in ApplicationDataType which TypeTRef in
978	ApplicationArrayElement references is not identical.
	Category in ApplicationArrayElement and Category in ApplicationDataType which TypeTRef in
	Category in Application Array Element and Category in Application Data Type Which Type The Inc

SHT/SHTS 167 / 203

	ApplicationArrayElement references shall be identical.
070	InitValue in NonQueuedReceiverComSpec is empty.
979	InitValue in NonQueuedReceiverComSpec shall be set.
	InitValue in ParameterDataPrototype is empty.
981	InitValue in ParameterDataPrototype shall be set.
	InitValue in ParameterProvideComSpec is empty.
982	InitValue in ParameterProvideComSpec shall be set.
005	InitValue in RamBlock is empty.
985	InitValue in RamBlock shall be set.
225	InitValue in RomBlock is empty.
986	InitValue in RomBlock shall be set.
	InitValue in VariableDataPrototype is empty.
987	InitValue in VariableDataPrototype shall be set.
	RteExclusiveAreaRef in RteExclusiveAreaImplementation is empty or invalid.
988	RteExclusiveAreaRef in RteExclusiveAreaImplementation shall be set with valid ExclusiveArea path.
	RteExclusiveArealmplMechanism in RteExclusiveArealmplementation is empty or invalid.
989	RteExclusiveArealmplMechanism in RteExclusiveArealmplementation shall be set with valid value.
	RteExclusiveAreaOsResourceRef in RteExclusiveAreaImplementation is empty or invalid.
990	RteExclusiveAreaOsResourceRef in RteExclusiveAreaImplementation shall be set with valid OsResource path.
001	RteBswExclusiveAreaRef in RteBswExclusiveAreaImpl is empty or invalid.
991	RteBswExclusiveAreaRef in RteBswExclusiveAreaImpl shall be set with valid ExclusiveArea path
	RteExclusiveArealmplMechanism in RteBswExclusiveArealmpl is empty or invalid.
992	RteExclusiveArealmplMechanism in RteBswExclusiveArealmpl shall be set with valid value.
	RteBswExclusiveAreaOsResourceRef in RteBswExclusiveAreaImpl is empty or invalid.
993	RteBswExclusiveAreaOsResourceRef in RteBswExclusiveAreaImpl shall be set with valid OsResource path.
	There is no RteExclusiveAreaImplementation for the ExclusiveArea.
994	There shall be a RteExclusiveAreaImplementation for the ExclusiveArea.
	There is no RteBswExclusiveArealmplementation for the ExclusiveArea.
995	There shall be a RteBswExclusiveArealmpl for the ExclusiveArea.
	ISignalRef in ISignalGroup is invalid.
996	
	ISignalRef in ISignalGroup shall be set with valid ISignal Path. HandleOutOfRange values in all ISignals which are referenced by one ISignalGroup are not same.



SHT/SHTS 168 / 203

	HandleOutOfRange values in all ISignals which are referenced by one ISignalGroup shall be same.
998	HandleOutOfRange in iSignalGroup and HandleOutOfRange in DataElement is not same.
	HandleOutOfRange in iSignalGroup and HandleOutOfRange in DataElement shall be same.
	RteBswReleasedTriggerModInstRef in RteBswRequiredTriggerConnection is empty or invalid.
1000	RteBswReleasedTriggerModInstRef in RteBswRequiredTriggerConnection shall be set with RteBswModuleInstance path.
	RteBswReleasedTriggerRef in RteBswRequiredTriggerConnection is empty or invalid.
1001	RteBswReleasedTriggerRef in RteBswRequiredTriggerConnection shall be set with
	RteBswModuleInstance path. RteBswRequiredTriggerRef in RteBswRequiredTriggerConnection is empty or invalid.
1002	RteBswRequiredTriggerRef in RteBswRequiredTriggerConnection shall be set with RteBswModuleInstance path.
	RteComponentTypeRef in RteSwComponentType is empty or invalid.
1003	RteComponentTypeRef in RteSwComponentType shall be set with valid SwComponentType patl
1004	SwcBswMappingRef in BswImplementation is empty or invalid.
	SwcBswMappingRef in BswImplementation shall be set with valid SwComponentType path.
1005	BehaviorRef in BswImplementation and BehaviorRef in BswImplementation is same.
	BehaviorRef in BswImplementation and BehaviorRef in BswImplementation shall be different.
1006	SwcBswMappingRef in SwcImplementation is empty or invalid.
	SwcBswMappingRef in SwcImplementation shall be set with valid SwComponentType path.
1007	SwcBehaviorRef in SwcBswMapping is empty or invalid.
	SwcBehaviorRef in SwcBswMapping shall be set with valid InternalBehavior path.
1008	BehaviorRef in BswImplementation andSwcBswMappingRef in BswImplementation is mismatching.
	BehaviorRef in BswImplementation andSwcBswMappingRef in BswImplementation shall be matching.
1009	BehaviorRef in SwcImplementation andSwcBswMappingRef in SwcImplementation is mismatching.
1005	BehaviorRef in SwcImplementation and SwcBswMappingRef in SwcImplementation shall be matching.
1010	SwcBswMappingRef in BswImplementation and SwcBswMappingRef in BswImplementation is same.
	SwcBswMappingRef in BswImplementation and SwcBswMappingRef in BswImplementation shall be different.
1011	SwcBswMappingRef in SwcImplementation and SwcBswMappingRef in SwcImplementation is same.
	SwcBswMappingRef in SwcImplementation and SwcBswMappingRef in SwcImplementation shall be different.
1013	There is no BswImplementation for the BswInternalBehavior.



문서 번호 (DOC NO) SHT/SHTS 169 / 203

	There shall be a BswImplementation for the BswInternalBehavior.
	There is no SwcImplementation for the InternalBehavior.
1014	
	There shall be a SwcImplementation for the InternalBehavior.
	There is no BswImplementation for the SwcBswMapping.
1015	
	There shall be a BswImplementation for the SwcBswMapping.
	There is no SwcImplementation for the SwcBswMapping.
1016	
	There shall be a SwcImplementation for the SwcBswMapping.
	SwcBehaviorRef in SwcBswMapping and SwcBehaviorRef in SwcBswMapping is same.
1017	
	SwcBehaviorRef in SwcBswMapping and SwcBehaviorRef in SwcBswMapping shall not be same.
1010	BswBehaviorRef in SwcBswMapping and BswBehaviorRef in SwcBswMapping is same.
1018	Pay Pohavior Pof in Charles and Pay Pohavior Pof in Charles when the same
	BswBehaviorRef in SwcBswMapping and BswBehaviorRef in SwcBswMapping shall not be same. ModeDeclarationGroupPrototypeRef in ManagedModeGroup and
	ModeDeclarationGroupPrototypeRef in ManagedModeGroup is same.
1019	modebecturational copy rototyperter in manageamodeal copy is suinc.
	ModeDeclarationGroupPrototypeRef in ManagedModeGroup and
	ModeDeclarationGroupPrototypeRef in ManagedModeGroup shall not be same.
	TriggerRef in BswExternalTriggerOccurredEvent is empty or invalid.
1020	
	TriggerRef in BswExternalTriggerOccurredEvent shall be set with valid RequiredTrigger path.
	TriggerRef in IssuedTrigger is empty or invalid.
1021	
	TriggerRef in IssuedTrigger shall be set with valid ReleasedTrigger path.
	BswInternalTriggeringPointRef in BswInternalTriggeringPointRefConditional is empty or invalid.
1022	Development Trianguis and in Development Trianguis and in the Aliking at the U.S. of the U.S.
	BswInternalTriggeringPointRef in BswInternalTriggeringPointRefConditional shall be set with valid BswInternalTriggeringPoint path.
	TriggerRef in TriggerRefConditional is empty or invalid.
1023	Trigger Rei III Trigger Rei Conditional is empty of invalid.
1025	TriggerRef in TriggerRefConditional shall be set.
	ModeDeclarationGroupPrototypeRef in ManagedModeGroup is empty or invalid.
1024	, ,,
1024	ModeDeclarationGroupPrototypeRef in ManagedModeGroup shall be set with valid
	ProvidedModeGroup path.
	ModeDeclarationGroupPrototypeRef in ModeDeclarationGroupPrototypeRefConditional is empty
	or invalid.
1025	
	ModeDeclarationGroupPrototypeRef in ModeDeclarationGroupPrototypeRefConditional shall be
	Set.
1026	SwcRunnableRef in SwcBswRunnableMapping is empty or invalid.
1026	SwcRunnableRef in SwcBswRunnableMapping shall be set with valid BswEntity path.
	Even though BswModuleEntry is referenced by CalledEntry, CallType in called BswModuleEntry is
	not REGULAR or CALLBACK.
1027	THE REGIET IN OF CREEDINGS.
,	If BswModuleEntry is referenced by CalledEntry, CallType in called BswModuleEntry shall be
	REGULAR or CALLBACK.
4000	Even though BswModuleEntry is referenced by CalledEntry, ExecutionContext in called
1028	BswModuleEntry is not identical to ExecutionContext in caller BswModuleEntry.
	<u>'</u>

SHT/SHTS 170 / 203

	If Davidded de Catania and announced by Called Catania Constitution Co
	If BswModuleEntry is referenced by CalledEntry, ExecutionContext in called BswModuleEntry
	shall be identical to ExecutionContext in caller BswModuleEntry.
	BswModuleEntryRef in CalledEntry does not refer to an element declared as OutgoingCallback,
1000	ProvidedEntry or as RequiredEntry in BswModuleDependency.
1029	Paul Madula Cating Patric Called Cating about mafery to an alamant de alamad as Outrain a Callegal
	BswModuleEntryRef in CalledEntry shall refer to an element declared as OutgoingCallback,
	ProvidedEntry or as RequiredEntry in BswModuleDependency.
	HandleOutOfRange in SenderComSpec/ReceiverComSpec is EXTERNAL-REPLACEMENT.
1030	HandleOutOfRange in SenderComSpec/ReceiverComSpec shall not be EXTERNAL-
	REPLACEMENT.
	Symbol of RunnableEntity is different with Symbol of BswEntity.
1031	Symbol of Rolling is different with Symbol of Bawellitry.
1031	Symbol of RunnableEntity shall be same with Symbol of BswEntity.
	ModeDeclarationGroupPrototypeRef in AccessedModeGroup is empty or invalid.
	modebedardioneroopi rototypeker in recessed mode droop is empty or invalid.
1032	ModeDeclarationGroupPrototypeRef in AccessedModeGroup shall be set with valid
	ProvidedModeGroup path.
	ModeDeclarationGroupPrototypeRef in AccessedModeGroup and
	ModeDeclarationGroupPrototypeRef in AccessedModeGroup is same.
1033	
	ModeDeclarationGroupPrototypeRef in AccessedModeGroup and
	ModeDeclarationGroupPrototypeRef in AccessedModeGroup shall not be same.
	RteBswEventRef in RteBswEventToTaskMapping is empty or invalid.
1034	
	RteBswEventRef in RteBswEventToTaskMapping shall be set.
	CallType in BswModuleEntry is empty or invalid.
1035	
	CallType in BswModuleEntry shall be set.
	PortPrototype and VariableDataPrototype for the RamBlock is connected to SWC Instances of
1006	different partitions.
1036	
	PortPrototype and VariableDataPrototype for the RamBlock shall not be connected to SWC
	Instances of different partitions. Role in RoleBasedPortAssignment is empty or invalid.
1037	Role III Rolebased For (Assignment is empty of invalid.
1037	Role in RoleBasedPortAssignment shall be set with valid value.
	ReadNvData in NvBlockDataMapping is empty.
4000	Reduite Data in Tet Diock Data Mapping 15 cmpty.
1038	
1038	ReadNvData in NvBlockDataMapping shall be exist.
1038	ReadNvData in NvBlockDataMapping shall be exist. WrittenNvData in NvBlockDataMapping is empty.
1038	ReadNvData in NvBlockDataMapping shall be exist. WrittenNvData in NvBlockDataMapping is empty.
	WrittenNvData in NvBlockDataMapping is empty.
	WrittenNvData in NvBlockDataMapping is empty. WrittenNvData in NvBlockDataMapping shall be exist.
	WrittenNvData in NvBlockDataMapping is empty. WrittenNvData in NvBlockDataMapping shall be exist.
	WrittenNvData in NvBlockDataMapping is empty. WrittenNvData in NvBlockDataMapping shall be exist. Neither RteVariableReadAccessRef nor RteVariableWriteAccessRef in RteImplicitCommunication
1039	WrittenNvData in NvBlockDataMapping is empty. WrittenNvData in NvBlockDataMapping shall be exist. Neither RteVariableReadAccessRef nor RteVariableWriteAccessRef in RteImplicitCommunication
1039	WrittenNvData in NvBlockDataMapping is empty. WrittenNvData in NvBlockDataMapping shall be exist. Neither RteVariableReadAccessRef nor RteVariableWriteAccessRef in RteImplicitCommunication is exist. RteVariableReadAccessRef or RteVariableWriteAccessRef in RteImplicitCommunication shall be exist.
1039	WrittenNvData in NvBlockDataMapping is empty. WrittenNvData in NvBlockDataMapping shall be exist. Neither RteVariableReadAccessRef nor RteVariableWriteAccessRef in RteImplicitCommunication is exist. RteVariableReadAccessRef or RteVariableWriteAccessRef in RteImplicitCommunication shall be
1039	WrittenNvData in NvBlockDataMapping is empty. WrittenNvData in NvBlockDataMapping shall be exist. Neither RteVariableReadAccessRef nor RteVariableWriteAccessRef in RteImplicitCommunication is exist. RteVariableReadAccessRef or RteVariableWriteAccessRef in RteImplicitCommunication shall be exist.
1039	WrittenNvData in NvBlockDataMapping is empty. WrittenNvData in NvBlockDataMapping shall be exist. Neither RteVariableReadAccessRef nor RteVariableWriteAccessRef in RteImplicitCommunication is exist. RteVariableReadAccessRef or RteVariableWriteAccessRef in RteImplicitCommunication shall be exist. RteEventRef in RteEventToTaskMapping is empty or invalid. RteEventRef in RteEventToTaskMapping shall be set with valid RteEvent path.
1039	WrittenNvData in NvBlockDataMapping is empty. WrittenNvData in NvBlockDataMapping shall be exist. Neither RteVariableReadAccessRef nor RteVariableWriteAccessRef in RteImplicitCommunication is exist. RteVariableReadAccessRef or RteVariableWriteAccessRef in RteImplicitCommunication shall be exist. RteEventRef in RteEventToTaskMapping is empty or invalid.



NO) SHT/SHTS 171 / 203

	VariableDataPrototype referenced by a SenderReceiverInterface shall have a STANDARD or QUEUED SwImplPolicy.
4040	ParameterDataPrototype doesn't have a STANDARD, FIXED or CONST SwImplPolicy.
1043	ParameterDataPrototype shall have a STANDARD, FIXED or CONST SwImplPolicy.
	HandleOutOfRange in ReceiverComSpec is EXTERNAL-REPLACEMENT.
1044	Handleodtonkange in Receivercomspec is EXTERNAL REI EXCEMENT.
	HandleOutOfRange in ReceiverComSpec shall not be EXTERNAL-REPLACEMENT.
	There are mismatching function prototypes for the RunnableEntity.
1045	Function prototypes for the RunnableEntity shall be consistent.
	In case only argument name is different, use RunnableEntityArgument Configuration Parameter
	in RunnableEntity.
	There are multiple DataWriteAccesses for the same PortPrototypeRef and
1046	TargetDataPrototypeRef.
	There shall be only one DataWriteAccess for the PortPrototypeRef and TargetDataPrototypeRef
	There are multiple DataSendPoints for the same PortPrototypeRef and TargetDataPrototypeRef
1047	
	There shall be only one DataSendPoint for the PortPrototypeRef and TargetDataPrototypeRef.
	There are multiple DataReadAccesses for the same PortPrototypeRef and
1048	TargetDataPrototypeRef.
	There shall be only one DataReadAccess for the PortPrototypeRef and TargetDataPrototypeRef
	There are multiple DataReceivePointByArguments for the same PortPrototypeRef and
	TargetDataPrototypeRef.
1049	3
	There shall be only one DataReceivePointByArgument for the PortPrototypeRef and
	TargetDataPrototypeRef.
	There are multiple DataReceivePointByValues for the same PortPrototypeRef and
1050	TargetDataPrototypeRef.
1050	There shall be only one DataReceivePointByValue for the PortPrototypeRef and
	TargetDataPrototypeRef.
	ImplementedEntryRef in BswEntity and ImplementedEntryRef in BswEntity is same.
1051	,, ,, ,, ,, ,, ,, ,, ,, ,
	ImplementedEntryRef in BswEntity and ImplementedEntryRef in BswEntity shall be different.
	The ComDataInvalidAction in ComSignal/ComSignalGroup and the HandleInvalid in
	VariableDataPrototype are mismatching.
1052	TI C D
	The ComDataInvalidAction in ComSignal/ComSignalGroup and the HandleInvalid in
	VariableDataPrototype shall be matching. The ComSignalDataInvalidValue in ComSignal is empty even though the ComDataInvalidAction
	in ComSignal is set as NOTIFY or REPLACE.
1053	
	The ComSignalDataInvalidValue in ComSignal shall be set if the ComDataInvalidAction in
	ComSignal is set as NOTIFY or REPLACE.
	ComSignalGroup is mapped to dynamic length of array datatype.
1054	
	Dynamic length of array data type shall be mapped to ComSignal.
	The ComSignalDataInvalidValue in ComGroupSignal is empty even though the
1055	ComDataInvalidAction in ComSignalGroup is set as NOTIFY or REPLACE.
	The ComSignalDataInvalidValue in ComGroupSignal shall be set if the ComDataInvalidAction in
	The Compagnation value and Compagnation and the Set if the Compagnation in

SHT/SHTS 172 / 203

	ComSignalGroup is set as NOTIFY or REPLACE.
	ComSignalDataInvalidValue in ComGroupSignal and InvalidValue in DataType is mismatching.
1056	
	ComSignalDataInvalidValue in ComGroupSignal and InvalidValue in DataType shall be matching.
1057	ComSignalDataInvalidValue in ComSignal and InvalidValue in DataType is mismatching.
1057	ComSignalDataInvalidValue in ComSignal and InvalidValue in DataType shall be matching.
	Osloc container in the OS Ecud Arxml File exists.
	osioc container in the os 2004 / WAIIII File exists.
1058	Osloc container in the OS Ecud Arxml File shall not exist. Rte creates the Osloc contatiner
	automatically if necessary.
	RTE Generator cannot find OS Ecud Arxml File.
1059	
	Please check whether RTE Generator has OS Ecud Arxml file as an argument.
1060	RTE Generator cannot find DefinitionRef in OS Configuration.
1060	Please check whether OS Ecud Arxml File has a DefinitionRef in OS Configuration.
	RteUsedOsAlarmRef in RteEventToTaskMapping is empty or invalid.
1061	Accessed by manning in the property of any o
	RteUsedOsAlarmRef in RteEventToTaskMapping shall be set with valid OsAlarm Path.
	RteComponentTypeRef in RteSwComponentType and RteComponentTypeRef in
	RteSwComponentType is same.
1062	
	RteComponentTypeRef in RteSwComponentType and RteComponentTypeRef in RteSwComponentType shall be different.
	ShortName of OsTask is duplicated.
1063	Shoratame of ostask is applicated.
	ShortName of OsTask shall be unique.
	RteActivationOsAlarmRef in RteUsedOsActivation and RteActivationOsAlarmRef in
	RteUsedOsActivation is same.
1064	
	RteActivationOsAlarmRef in RteUsedOsActivation and RteActivationOsAlarmRef in RteUsedOsActivation shall be different.
	RteActivationOsSchTblRef in RteUsedOsActivation and RteActivationOsSchTblRef in
	RteUsedOsActivation is same.
1065	
	RteActivationOsSchTblRef in RteUsedOsActivation and RteActivationOsSchTblRef in
	RteUsedOsActivation shall be different.
	Both RteActivationOsAlarmRef and RteActivationOsSchTblRef in RteUsedOsActivation is empty
1066	One of RteActivationOsAlarmRef or RteActivationOsSchTblRef in RteUsedOsActivation shall be
	set.
	Both RteActivationOsAlarmRef and RteActivationOsSchTblRef in RteUsedOsActivation is set.
1067	
1067	Only one of RteActivationOsAlarmRef or RteActivationOsSchTblRef in RteUsedOsActivation sha
	be set.
	RteActivationOsAlarmRef in RteUsedOsActivation is empty or invalid.
1068	Dto Activation Oc Alarm Dof in Dtoller doc Activation shall be not with well-doc Alarm D. U.
	RteActivationOsAlarmRef in RteUsedOsActivation shall be set with valid OsAlarm Path.
1069	RteActivationOsSchTblRef in RteUsedOsActivation is empty or invalid.

SHT/SHTS 173 / 203

	Dath Dto Dovid Load Oc Alarm Dat and Dto Dovid Load Oc Cab Thi Evairy Daiot Datio
	Both RteBswUsedOsAlarmRef and RteBswUsedOsSchTblExpiryPointRef in
1070	RteBswEventToTaskMapping exist.
1070	Only one of RteBswUsedOsAlarmRef or RteBswUsedOsSchTblExpiryPointRef in
	RteBswEventToTaskMapping shall exist.
	Neither RteBswUsedOsAlarmRef nor RteBswUsedOsSchTblExpiryPointRef in
1071	RteBswEventToTaskMapping exists.
1071	One of RteBswUsedOsAlarmRef or RteBswUsedOsSchTblExpiryPointRef in
	RteBswEventToTaskMapping shall exist.
	RteBswUsedOsAlarmRef in RteBswEventToTaskMapping is empty or invalid.
1072	KtebswosedosAlatilikei ili ktebsweventioraskinapping is empty of ilivalid.
1072	RteBswUsedOsAlarmRef in RteBswEventToTaskMapping shall be set with valid OsAlarm Path.
	RteBswUsedOsEventRef in RteBswEventToTaskMapping is empty or invalid.
1073	Rtebswosedoseventker in Rtebsweventroraskwapping is empty or invalid.
1075	RteBswUsedOsEventRef in RteBswEventToTaskMapping shall be set with valid OsAlarm Path.
	OsTask of RteBswUsedOsEventRef in RteBswEventToTaskMapping is not activated by OsAlarm
	of RteBswUsedOsAlarmRef in RteBswEventToTaskMapping.
1074	or reconstruction reconstructions.
	OsTask of RteBswUsedOsEventRef in RteBswEventToTaskMapping shall be activated by OsAlarn
	of RteBswUsedOsAlarmRef in RteBswEventToTaskMapping.
	OsTask of RteBswMappedToTaskRef in RteBswEventToTaskMapping is not activated by OsAlarm
	of RteBswUsedOsAlarmRef in RteBswEventToTaskMapping.
1075	
	OsTask of RteBswMappedToTaskRef in RteBswEventToTaskMapping shall be activated by
	OsAlarm of RteBswUsedOsAlarmRef in RteBswEventToTaskMapping.
	OsTask of RteBswMappedToTaskRef in RteBswEventToTaskMapping does not have OsEvent of
	RteBswUsedOsEventRef in RteBswEventToTaskMapping.
1076	
	OsTask of RteBswMappedToTaskRef in RteBswEventToTaskMapping shall have OsEvent of
	RteBswUsedOsEventRef in RteBswEventToTaskMapping.
	RteExpectedTickDuration in RteUsedOsActivation is not multiples of OsSecondsPerTick in
	OsCounter.
1077	
1077	RteExpectedTickDuration in RteUsedOsActivation shall be multiples of OsSecondsPerTick in
1077	RteExpectedTickDuration in RteUsedOsActivation shall be multiples of OsSecondsPerTick in OsCounter.
1077	RteExpectedTickDuration in RteUsedOsActivation shall be multiples of OsSecondsPerTick in OsCounter. RteExpectedTickDuration in RteUsedOsActivation is not within a range of 0 and
	RteExpectedTickDuration in RteUsedOsActivation shall be multiples of OsSecondsPerTick in OsCounter.
1077	RteExpectedTickDuration in RteUsedOsActivation shall be multiples of OsSecondsPerTick in OsCounter. RteExpectedTickDuration in RteUsedOsActivation is not within a range of 0 and OsSecondsPerTick * OsCounterMaxAllowedValue in OsCounter.
	RteExpectedTickDuration in RteUsedOsActivation shall be multiples of OsSecondsPerTick in OsCounter. RteExpectedTickDuration in RteUsedOsActivation is not within a range of 0 and OsSecondsPerTick * OsCounterMaxAllowedValue in OsCounter. RteExpectedTickDuration in RteUsedOsActivation shall be within a range of 0 and
	RteExpectedTickDuration in RteUsedOsActivation shall be multiples of OsSecondsPerTick in OsCounter. RteExpectedTickDuration in RteUsedOsActivation is not within a range of 0 and OsSecondsPerTick * OsCounterMaxAllowedValue in OsCounter. RteExpectedTickDuration in RteUsedOsActivation shall be within a range of 0 and OsSecondsPerTick * OsCounterMaxAllowedValue in OsCounter.
	RteExpectedTickDuration in RteUsedOsActivation shall be multiples of OsSecondsPerTick in OsCounter. RteExpectedTickDuration in RteUsedOsActivation is not within a range of 0 and OsSecondsPerTick * OsCounterMaxAllowedValue in OsCounter. RteExpectedTickDuration in RteUsedOsActivation shall be within a range of 0 and OsSecondsPerTick * OsCounterMaxAllowedValue in OsCounter. RteEvents/RteBswEvent except BackgroundEvent and BswBackgroundEvent is mapped to
1078	RteExpectedTickDuration in RteUsedOsActivation shall be multiples of OsSecondsPerTick in OsCounter. RteExpectedTickDuration in RteUsedOsActivation is not within a range of 0 and OsSecondsPerTick * OsCounterMaxAllowedValue in OsCounter. RteExpectedTickDuration in RteUsedOsActivation shall be within a range of 0 and OsSecondsPerTick * OsCounterMaxAllowedValue in OsCounter.
	RteExpectedTickDuration in RteUsedOsActivation shall be multiples of OsSecondsPerTick in OsCounter. RteExpectedTickDuration in RteUsedOsActivation is not within a range of 0 and OsSecondsPerTick * OsCounterMaxAllowedValue in OsCounter. RteExpectedTickDuration in RteUsedOsActivation shall be within a range of 0 and OsSecondsPerTick * OsCounterMaxAllowedValue in OsCounter. RteEvents/RteBswEvent except BackgroundEvent and BswBackgroundEvent is mapped to Background OsTask
1078	RteExpectedTickDuration in RteUsedOsActivation shall be multiples of OsSecondsPerTick in OsCounter. RteExpectedTickDuration in RteUsedOsActivation is not within a range of 0 and OsSecondsPerTick * OsCounterMaxAllowedValue in OsCounter. RteExpectedTickDuration in RteUsedOsActivation shall be within a range of 0 and OsSecondsPerTick * OsCounterMaxAllowedValue in OsCounter. RteEvents/RteBswEvent except BackgroundEvent and BswBackgroundEvent is mapped to Background OsTask RteEvent/RteBswEvent except BackgroundEvent and BswBackgroundEvent shall not be mapped
1078	RteExpectedTickDuration in RteUsedOsActivation shall be multiples of OsSecondsPerTick in OsCounter. RteExpectedTickDuration in RteUsedOsActivation is not within a range of 0 and OsSecondsPerTick * OsCounterMaxAllowedValue in OsCounter. RteExpectedTickDuration in RteUsedOsActivation shall be within a range of 0 and OsSecondsPerTick * OsCounterMaxAllowedValue in OsCounter. RteEvents/RteBswEvent except BackgroundEvent and BswBackgroundEvent is mapped to Background OsTask RteEvent/RteBswEvent except BackgroundEvent and BswBackgroundEvent shall not be mapped to Background OsTask
1078	RteExpectedTickDuration in RteUsedOsActivation shall be multiples of OsSecondsPerTick in OsCounter. RteExpectedTickDuration in RteUsedOsActivation is not within a range of 0 and OsSecondsPerTick * OsCounterMaxAllowedValue in OsCounter. RteExpectedTickDuration in RteUsedOsActivation shall be within a range of 0 and OsSecondsPerTick * OsCounterMaxAllowedValue in OsCounter. RteEvents/RteBswEvent except BackgroundEvent and BswBackgroundEvent is mapped to Background OsTask RteEvent/RteBswEvent except BackgroundEvent and BswBackgroundEvent shall not be mapped to Background OsTask The priority of background OsTask is higher than or equal to the priority of nonbackground
1078	RteExpectedTickDuration in RteUsedOsActivation shall be multiples of OsSecondsPerTick in OsCounter. RteExpectedTickDuration in RteUsedOsActivation is not within a range of 0 and OsSecondsPerTick * OsCounterMaxAllowedValue in OsCounter. RteExpectedTickDuration in RteUsedOsActivation shall be within a range of 0 and OsSecondsPerTick * OsCounterMaxAllowedValue in OsCounter. RteEvents/RteBswEvent except BackgroundEvent and BswBackgroundEvent is mapped to Background OsTask RteEvent/RteBswEvent except BackgroundEvent and BswBackgroundEvent shall not be mapped to Background OsTask
1078 1079	RteExpectedTickDuration in RteUsedOsActivation shall be multiples of OsSecondsPerTick in OsCounter. RteExpectedTickDuration in RteUsedOsActivation is not within a range of 0 and OsSecondsPerTick * OsCounterMaxAllowedValue in OsCounter. RteExpectedTickDuration in RteUsedOsActivation shall be within a range of 0 and OsSecondsPerTick * OsCounterMaxAllowedValue in OsCounter. RteEvents/RteBswEvent except BackgroundEvent and BswBackgroundEvent is mapped to Background OsTask RteEvent/RteBswEvent except BackgroundEvent and BswBackgroundEvent shall not be mapped to Background OsTask The priority of background OsTask is higher than or equal to the priority of nonbackground OsTask.
1078 1079	RteExpectedTickDuration in RteUsedOsActivation shall be multiples of OsSecondsPerTick in OsCounter. RteExpectedTickDuration in RteUsedOsActivation is not within a range of 0 and OsSecondsPerTick * OsCounterMaxAllowedValue in OsCounter. RteExpectedTickDuration in RteUsedOsActivation shall be within a range of 0 and OsSecondsPerTick * OsCounterMaxAllowedValue in OsCounter. RteEvents/RteBswEvent except BackgroundEvent and BswBackgroundEvent is mapped to Background OsTask RteEvent/RteBswEvent except BackgroundEvent and BswBackgroundEvent shall not be mapped to Background OsTask The priority of background OsTask is higher than or equal to the priority of nonbackground OsTask. The priority of background OsTask shall be lower than the priority of nonbackground OsTask.
1078 1079 1080	RteExpectedTickDuration in RteUsedOsActivation shall be multiples of OsSecondsPerTick in OsCounter. RteExpectedTickDuration in RteUsedOsActivation is not within a range of 0 and OsSecondsPerTick * OsCounterMaxAllowedValue in OsCounter. RteExpectedTickDuration in RteUsedOsActivation shall be within a range of 0 and OsSecondsPerTick * OsCounterMaxAllowedValue in OsCounter. RteEvents/RteBswEvent except BackgroundEvent and BswBackgroundEvent is mapped to Background OsTask RteEvent/RteBswEvent except BackgroundEvent and BswBackgroundEvent shall not be mapped to Background OsTask The priority of background OsTask is higher than or equal to the priority of nonbackground OsTask.
1078 1079	RteExpectedTickDuration in RteUsedOsActivation shall be multiples of OsSecondsPerTick in OsCounter. RteExpectedTickDuration in RteUsedOsActivation is not within a range of 0 and OsSecondsPerTick * OsCounterMaxAllowedValue in OsCounter. RteExpectedTickDuration in RteUsedOsActivation shall be within a range of 0 and OsSecondsPerTick * OsCounterMaxAllowedValue in OsCounter. RteEvents/RteBswEvent except BackgroundEvent and BswBackgroundEvent is mapped to Background OsTask RteEvent/RteBswEvent except BackgroundEvent and BswBackgroundEvent shall not be mapped to Background OsTask The priority of background OsTask is higher than or equal to the priority of nonbackground OsTask. The priority of background OsTask shall be lower than the priority of nonbackground OsTask.

SHT/SHTS 174 / 203

t Path.
invalid.
with valid
invalid.
with valid
ty or
e set with
<u> </u>
l
alRef in a
anter in G
ofCores in
in OsOs.
d.
/alid
the sam
same
up, have
must have

SHT/SHTS 175 / 203

	identical init values.
	TransmissionAcknowledge is used even though multiple sender is mapped to same
1000	ComSignal/ComSignalGroup.
1099	TransmissionAcknowledge shall not be used if multiple sender is mapped to same
	ComSignal/ComSignalGroup
	There are multiple RunnableEntities which have VariableAccesses to same PortPrototype and
	VariableDataPrototype if TransmissionAcknowledge is set.
1100	
	There shall be only one RunnableEntity which have VariableAccesses to the same PortPrototype
	and VariableDataPrototype if TransmissionAcknowledge is set.
	There are multiple ProvidedEntries which have the same BswModuleEntryRef in BswModuleDescription
1113	BSWWIOUDIEDESCTIPTION
1113	There shall not be multiple ProvidedEntries which have same BswModuleEntryRef in
	BswModuleDescription
	Module which BswModuleDependency refers to and whose Id is does not exist.
1114	
	Module which BswModuleDependency refers to and whose Id is shall exist.
	The attribute category of EndToEndDescription can have the following values: NONE,
2000	PROFILE_01, PROFILE_02.
2000	Check wheter the attribute category of EndToEndDescription is configured and is either NONE,
	PROFILE_01, or PROFILE_02.
	In PROFILE_01, the applicable range of values for counterOffset is [0 65535].
	For the value of this attribute the constraint value mod 4 = 0 applies.
2001	
	Check wheter the attribute counterOffset of EndToEndDescription is configured, is $[0 65535]$, and mod $4 = 0$.
	In PROFILE_01, the applicable range of values for crcOffset is [0 65535]. For the value of this
	attribute the constraint value mod 8 = 0 applies.
2002	
	Check wheter the attribute crcOffset of EndToEndDescription is configured, is [0 65535], and
	mod 8 = 0.
2003	In PROFILE_01, the applicable range of values for dataIdMode is [0 2].
2003	Check wheter the attribute dataldMode of EndToEndDescription is configured and is [0 2].
	In PROFILE_01, there shall be only one element in the set of datalds and in PROFILE_02, there
	shall be exactly ordered 16 elements in the set of datalds.
2004	
	Check wheter the attribute datalds of EndToEndDescription is configured and the number of
	elements is correct.
	In PROFILE_01, the applicable range of values for the element of datalds is [0 65535] and in PROFILE_02, the applicable range of values for each element of datalds is [0 255].
2005	PROPILE_02, the applicable range of values for each element of datalds is [0 255].
	Check wheter the value for each element of datalds is configured and the range is correct.
	In PROFILE_01, the applicable range of values for dataLength is [0 240] and in PROFILE_02,
	the applicable range of values for dataLength is [0 65535].
	·
2006	
2006	For the value of this attribute the constraint value mod 8 = 0 applies
2006	Check wheter the value for dataLength is configured and the range is correct.
2006	

	Check wheter the range of the value for maxDeltaCounterInit is correct.
	The ISignalGroupRef of EndToEndProtectionISignalIPdu is not configured or invalid.
2008	
2000	Check whether the ISignalGroupRef of EndToEndProtectionISignalIPdu is configured or the
	referenced value is correct. The ISignallPduRef of EndToEndProtectionISignallPdu is not configured or invalid.
	The Isignali rubker of End to End to End to Education is grained is not configured of invalid.
2009	Check whether the ISignallPduRef of EndToEndProtectionISignallPdu is configured or the
	referenced value is correct.
	If the E2E Library is invoked at the level of Data Elements, then a Data Element shall either map
2011	to a local intra-ECU communication (without COM involvement) or shall map to a COM I-PDU,
2011	but shall not map to both at the same time.
	Remove either intra-ECU or inter-ECU connections.
	If the E2E Library is invoked at the level of Data Elements (e.g. from SW-Cs or from E2E
	Protection Wrapper), then the communication shall be an explicit sender-receiver
2012	communication, in 1:1 and 1:N multiplicities.
	Remove either N:1 connction or turn off end-to-end protection feature.
	A given I-PDU , shall not be at the same protected by means of COM E2E callouts (through
	association with ISignalIPdu) and by means of E2E Protection Wrapper (through
2013	association with E2E Protection Wrapper.
	Remove either EndToEndProtectionISignallPdu or EndToEndProtectionVariablePrototype.
	The ContextComponentRef in VariableDataPrototypeInSystemInstanceRef is not configured or
	invalid.
2014	Chack whather the ContextComponentBof in VariableDataBrotatypoleSystemlestanceBof is
	Check whether the ContextComponentRef in VariableDataPrototypeInSystemInstanceRef is configured or the referenced value is correct.
	The ContextPortRef in VariableDataPrototypeInSystemInstanceRef is not configured or invalid.
2015	,, ,
2015	Check whether the ContextPortRef in VariableDataPrototypeInSystemInstanceRef is configured
	or the referenced value is correct.
	The TargetDataPrototypeRef in VariableDataPrototypeInSystemInstanceRef is not configured or invalid.
2016	mvanu.
	Check whether the TargetDataPrototypeRef in VariableDataPrototypeInSystemInstanceRef is
	configured or the referenced value is correct.
9018	Inter Ecu Communication through Inter Partition is not supported.
9019	DataReadAccess/DataWriteAccess is set in a RunnableEntity activated by a direct function call.

※ Regarding Error 45

Parameter name	Container
Symbol	RunnableEntity
Native Declaration	SwBaseType



문서 번호 (DOC NO)

SHT/SHTS 177 / 203

Parameter name	Container
Period	BswTimingEvent
Behaviour Ref	BswImplementation
ImplEntryRef	BSW SchedulabelEntity
BswEveRef	BswEventToTaskMapping
BswImplRef	BswModuleInstance
Period	Timing Event
EventRef	EventToTaskMapping
OsAlarmCntrRef	OsAlarm
OsAlarmActivationTaskRef	OsAlarmActivateTask
OsAlarmSetEventTaskRef	OsAlarmEvent
OsAlarmSetEventRef	OsAlarmEvent
OsSecPerTick	OsCounter

8. Apendix

이 Chapter에서는, RTE 를 이용한 Application 설계 시, 고려사항에 대하여 설명하고 있으며, 설계 시 활용 가능한 팁을 포함하고 있다.

단, 아래의 내용 중, 현재 RTE Module 배포 버전에 대한 Limitation 및 Deviation 에서 사용에 제한이 있음을 언급하고 있는 경우에는, 관련 내용 (4.5 내용) 이 이 Chapter 에서 언급하고 있는 사항 보다 우선 시 된다.

8.1 Interrupt Decoupling Guide

8.1.1 General Description

8.1.1.1 Scope


플랫폼에서 제공하는 Interrupt 의 Decoupling 방법에 대해 설명한다.

8.1.1.2 Overall Description

일반적으로 Interrupt 발생 시 Interrupt Service Routine (ISR)이 실행된다. ISR 은 MicroController Abstraction Layer (MCAL)에 의해 Notification Function 으로 제공되거나 직접 구현할 수 있다. 이 때, ISR 의 동작은 시스템 전체에 영향을 줄 수 있으므로, 최소한의 역할을 수행하고 나머지 동작은 Decoupling 을 통해 수행되도록 설계하여야 한다.

Interrupt 의 처리 방법은 다음과 같이 구분할 수 있으며, 자세한 내용은 각 Chapter 에서 기술한다.

- 1. Interrupt Service Routine: Interrupt 컨텍스트에서 모든 동작을 수행하는 경우로 MCAL에 의해 제공되는 Notification Function을 수행하는 것을 포함한다. (8.1.1.2.1)
- 2. Decoupling on BSW level: Interrupt 가 Decoupling 되어 BSW(CDD를 포함) 내에서 수행되는 경우이다. (8.1.1.2.2)
- 3. Communication with ASW: Interrupt 가 Decoupling 되어 BSW 내에서 수행 중 Rte 를 통해 ASW 와 의 통신이 필요한 경우이다. (8.1.1.2.3)

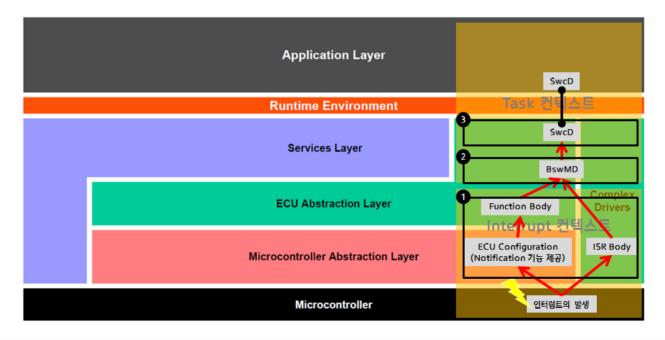

SHT/SHTS 179 / 203

8.1.1.2.1 Interrupt Service Routine

HYUNDAI

Interrupt 컨텍스트에서 모든 동작을 수행하는 경우, Rte 를 통한 동작이 없으므로 별도의 Software Component Description 또는 Basic Software Module Description 은 필요하지 않다.

코드를 통해 ISR 을 직접 구현하거나 MCAL 의 Notification Function 을 설정하여 해당 Function 을 구현할 수 있다.

관련 내용은 MCAL 의 각 모듈 또는 Os 매뉴얼을 참조한다.


8.1.1.2.2 Decoupling on BSW level

Interrupt 는 BSW level에서 Decoupling 함을 기본으로 한다.

Interrupt 를 BSW level 에서 Decoupling 하기 위해서는 각 BSW 모듈 (CDD 포함)에서 Basic Software Module Description (BswMD)을 통해 설계한다.

Basic Software Module Description 내에 Interrupt Entity 로 부터 Schedulable Entity 로의 Internal Trigger 를 통해 Decoupling 할 수 있다.

- 그 방법과 절차는 다음과 같다.
 - 1. Basic Software Module Description
 - A. Bsw Interrupt Entity 추가: BswModuleDescription 내에 MCAL 에 등록한 Notification function 또는 직접 구현한 ISR 에 대해 Interrupt Entity 를 생성한다.

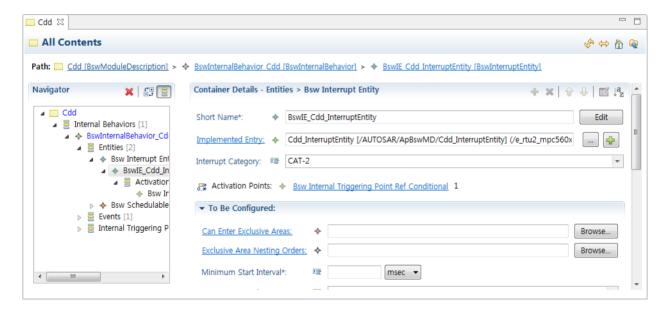





문서 번호 (DOC NO)

SHT/SHTS 180 / 203

B. Bsw Schedulable Entity 추가: BswModuleDescription 내에 Interrupt 가 Decoupling 되어 실 행될 SchedulableEntity 를 생성한다.

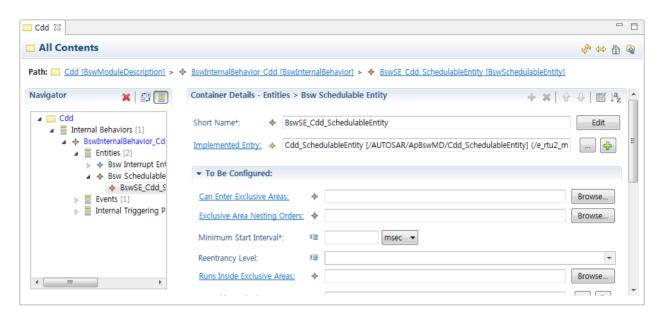

C. Internal Triggering Point 추가: BswModuleDescription 내에 Interrupt Decoupling 을 실행하기 위한 Internal Triggering Point 를 생성한다.

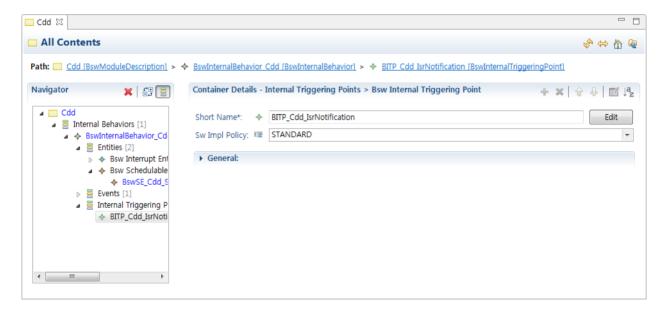


문서 번호 (DOC NO)


SHT/SHTS 181 / 203

AUTOSAR RTE User Manual

D. Bsw Interrupt Entity 내 Activation Point (Bsw Internal Triggering Point Ref Conditional) 추가: Interrupt 내에서 Decoupling 을 시작하기 위한 Activation Point (Bsw Internal Triggering Point Ref Conditional)을 생성한다.

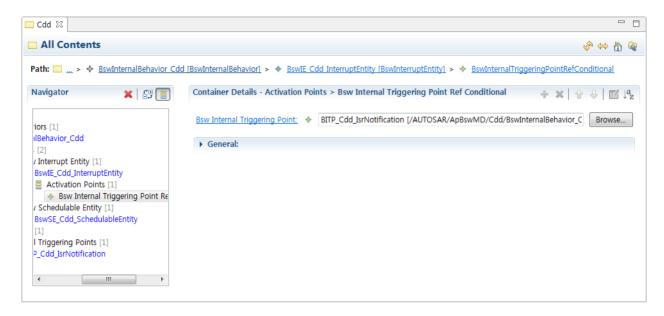


E. Bsw Internal Trigger Occurred Event 추가: Decoupling 을 위해 Internal Trigger 가 실행되었을 때 Schedulable Entity 를 호출하기 위해 Bsw Internal Trigger Occurred Event 를 생성한다.

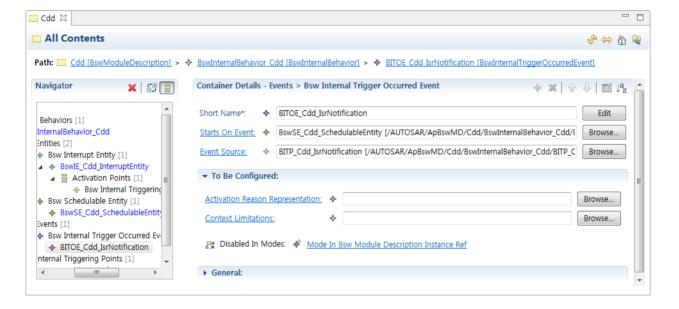


2. Ecu Configuration (Rte)

HYUNDAI

A. RteBswInternalTriggerConfig 추가: 1.C 에서 생성한 Internal Triggering Point 에 대해 Ecu Configuration (Rte) 내에 해당 BSW 모듈(CDD 포함)의 RteBswModuleInstance 내에 RteBswInternalTriggerConfig 를 생성한다.

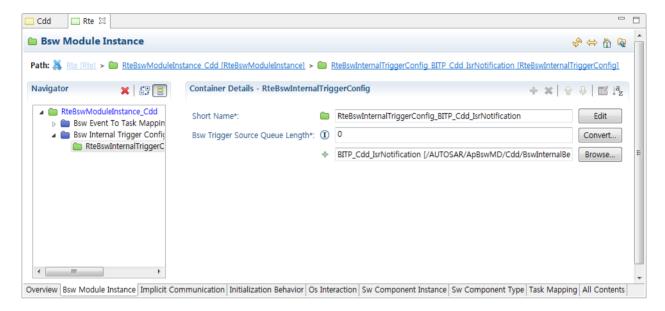

B. RteBswEventToTaskMapping 추가: 1.E 에서 생성한 BswInternalTriggerOccuredEvent 에 대해 RteEventToTaskMapping 을 생성한다.

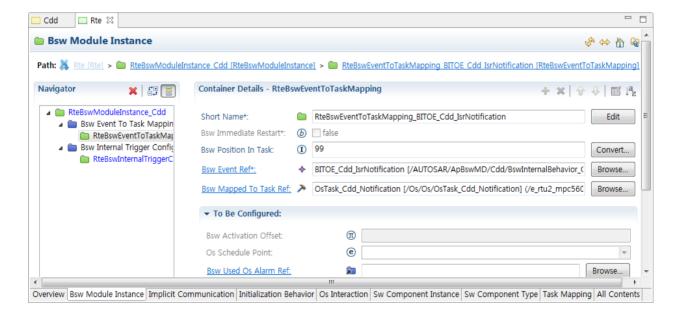



3. Code

A. InterruptEntity: Notification function 또는 ISR 내에 Decoupling 을 시작하기 위해 SchM_ActMainFunction API (상세 설명은 6.3.3.9 참조)를 호출한다.

```
#include "SchM_Cdd.h"

void Cdd_Isr (void)
{
    ...
    SchM_ActMainFunction_Cdd_BITP_Cdd_IsrNotification();
    ...
}
```

8.1.1.2.3 Communication with ASW


Rte 의 ASW 와 BSW 모듈(CDD 포함)간의 통신은 BSW 모듈에 대한 Software Component Description 을 통해 가능하다.

8.1.1.2.2 를 통해 Interrupt 를 Decoupling 하는 Basic Software Module 에 대한 Software Component 를 설계하고, 해당 Software Component 와 ASW 의 Software Component 간의 통신을 설계한다.

Basic Software Module 에 대한 Software Component 는 SwcBswMapping 을 통해 지정할 수 있다.

그 방법과 절차는 다음과 같다.

1. 8.1.1.2.2 의 BSW 모듈 (CDD 포함)에 대한 SW-C 내에 Interrupt 가 Decoupling 되어 실행되는 SchedulableEntity 에 대해 동일한 이름의 RunnableEntity 를 생성한다.

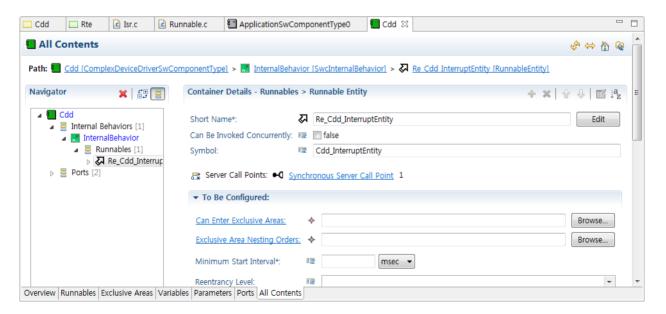





문서 번호 (DOC NO)

SHT/SHTS 184 / 203


2. ARPackage 내에 SwcBswMapping 을 생성한다.

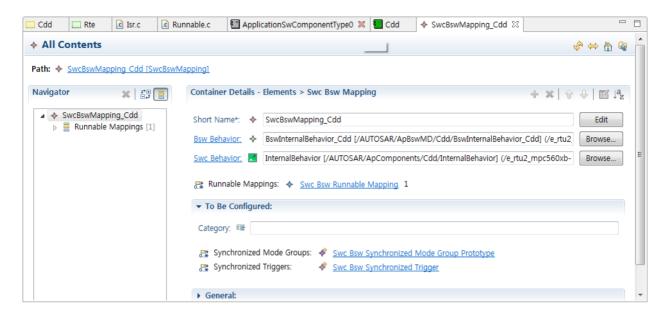

3. SwcBswMapping 내에 SwcBswRunnableMapping 을 생성한다.

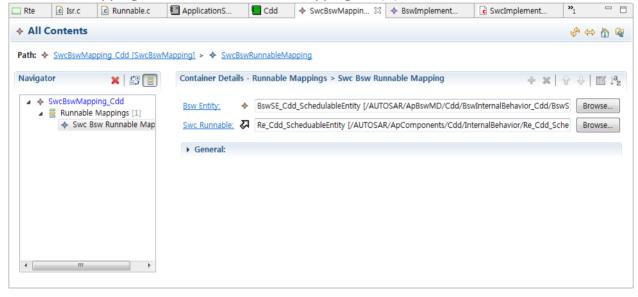

4. BswImplementation 과 SwcImplementation 에 SwcBswMappingRef 를 추가한다.

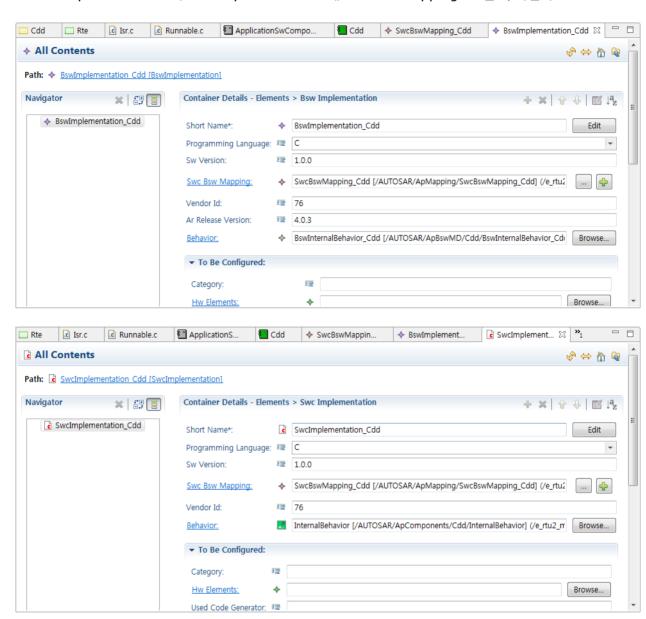

5. Code: BSW 모듈(CDD 포함)에 대한 Software Component Description 에서 통신 설정 (Sender-Receiver 통신 등)을 한 후, Schedulable Entity (Runnable Entity)의 코드에 Rte API 를 사용하여 ASW 와 통신하는 코드를 작성한다.

```
#include "Rte_Cdd.h"

void Cdd_ScheduableEntity (void)
{
    ...
    Rte_Send_...(...);
    ...
}
```



문서 번호 (DOC NO)

SHT/SHTS 186 / 203

8.1.2 Specific Description depending on MCU

8.1.2.1 Scope

이 Section 에서는, General Description (Chapter 8.1.1) 외, Target MCU 에 특성에 따른 특이 사항에 대하여 기술 한다.

8.1.2.2 Bolero Family (MPC560x)

Bolero MCU 기반의 ECU를 개발 하는 경우, 제공되는 AUTOSAR OS는 Task의 Multiple Activation을 지원하지 않는다. (I.e. 단일 OsTask의 중복 Activation 기능이 제공되지 않음 (Task의 Ready Queue = 1)을 의미). 따라서, Multiple Activation Error 가 발생할 수 있으며, 이에 따른 Error Hook 함수가 호출될 수 있다.

8.2 Execution of Runnable mapped in Non-Periodic OsTask

8.2.1 General Description

8.2.1.1 Scope

이 Section에서는, AUTOSAR 기반 SW 설계 시, 적용될 수 있는 비주기 OS Task 기반 Runnable을 통한 설계 시 고려사항에 대하여 설명한다..

8.2.1.2 Non Periodic OsTask and Runnable

AUTOSAR 에서는, 비주기 RTE Event 기반의 시스템 설계가 가능하다. 예를 들어, Rte_Trigger Interface 를 통하여, 특정 SWC에서 타 SWC의 Runnable (i.e. SINK Runnable) 수행을 요청할 수 있다. 이때 RTE에서는, 해당 Runnable이 mapping 되어 있는 OsTask를 Activate 시키고, 관련 Runnable이 수행될 수 있도록 코드를 생성 한다.

8.2.1.2.1 Basic principles

비주기 RTE Event 는 Basic / Extended OsTask 기반으로 구현이 가능하며, 이는 RTE 설정에 의해서 결정된다.

8,2,1,2,2 Non Periodic OsTask in Basic and Extended OsTask

기본적으로, RTE Event 수행의 경우, Basic / Extended OsTask 설정에 따른 Runnable 수행에 대한 차이점은 없으며, RTE 의 경우, 해당 Runnable 수행을 위하여, OS에서 제공하는 API를 사용하며, 이를 통해 필요한 OsTask 를 Ready 상태로 변경 시킨 후, 해당 OsTask에서 필요한 Runnable을 수행 되도록 하고 있다.

하지만, Basic OsTask 와 Extended OsTask 기반의 Runnable 수행을 위한 OS 내부 동작 메커니즘에서는 차이가 있다.

Basic OsTask 기반의 Runnable 처리 방식

- 1) RTE는 ActivateTask 를 통해, OS에게 특정 OsTask 수행을 요청 (Event A)한다.
- 2) 이 때, 해당 OsTask 가 수행 될 수 있는 상태이면 해당 Task 가 수행되지만, 그렇지 않은 경우 자신의 수행 순서를 기다리게 된다.
- 3) 만일 이때, 다른 OsTask에서 1)에서 수행 요청한 OsTask에 대하여 추가 수행을 요구 (Event B) 하는 경우, 이 OsTask에 대한 Queue 설정에 따라, Multiple Activation Error 가 발생할 수 있다.
- 4) 3)의 상황에서 (설정 상, 해당 OsTask 의 Queue > 2 로 설정이 되어 있어, Multiple Activation Error 가 발생하지 않은 상황), 실제 자신의 수행 시점에 도달한 경우, 현재 이 OsTask 는 두번 Activate



OC NO) | SHT/SHTS | 188 / 203

되게 된다. 이때 첫번째 OsTask 수행 시점에서 Event A 및 Event B가 순차적으로 수행 (depends on PositionInTask) 되게 되며, 두번째 OsTask 수행 시점에서는 이미 두개의 Event가 수행 완료된 상태이므로 특정 Event 에 의한 Runnable 수행 없이 OsTask는 동작 후 Terminate 되게 된다.

Extended OsTask 기반의 Runnable 처리 방식

- 1) RTE 는 SetEvent 를 통해, OS 에게 특정 OsTask 수행을 요청 (Event A)한다.
- 2) 이 때, 해당 OsTask 가 수행 될 수 있는 상태이면 해당 Task 는 Wating 상태에서 깨어나게 되지만, 그렇지 않은 경우 자신의 수행 순서를 기다리게 된다.
- 3) 만일 이때, 다른 OsTask에서 1)에서 수행 요청한 OsTask에 대하여 추가 수행을 요구 (Event B) 하는 경우, 2)와 같은 동작을 취한다.
- 4) 요청된 OsTask 가 수행 시점에 도달한 경우, 해당 OsTask 는 Waiting 상태에서 Run 상태로 천이한 후, 요청된 OsEvent 를 참조하여 연결된 Event A 및 Event B를 순차적으로 수행하게 된다. 이때, Basic OsTask 기반의 Runnable 처리 방식과는 다르게, 해당 OsTask 를 두번 Activate 시킨 것이 아니므로, Task 는 한번만 수행하고 Terminate 되게 된다.

8.2.2 Specific Description depending on MCU

8.2.2.1 Scope

이 Section 에서는, General Description (Chapter 8.2.1) 외, Target MCU 에 특성에 따른 특이 사항에 대하여 기술 한다.

8.2.2.2 Bolero Family (MPC560x)

Bolero MCU 기반의 ECU를 개발 하는 경우, 제공되는 AUTOSAR OS는 Task의 Multiple Activation을 지원하지 않는다. (I.e. 단일 OsTask의 중복 Activation 기능이 제공되지 않음 (Task의 Ready Queue = 1)을 의미).

8.3 Configuration Guide for Client-Server Communication

8.3.1 General Description

클라이언트-서버 통신은 클라이언트의 요청(Request)에 의해 서버가 서비스를 수행하고 그 결과를 클라이언트에서 응답(Response)하는 동작으로 이루어진 통신 방식이다.

8.3.1.1 Scope

이 Section에서는, 클라이언트-서버 통신의 동작 및 관련 Ecu Configuration 설정 방법을 설명한다.

8.3.1.2 Synchronous Client-Server Communication

동기식(Synchronous) 클라이언트-서버 통신은 요청(Request)과 응답(Response)이 Rte_Call() API 내에서 동시에 동작하는 방식이다.

애플리케이션에서 Rte_Call() API를 호출하면,

- 1. Rte_Call() API 내에서 서버 Runnable 수행을 요청하고, 서버의 응답 결과를 기다린다.
- 2. 서버는 클라이언트로부터 요청을 받으면 서비스를 수행한다.
- 3. 서버의 수행이 완료되면, 대기하던 Rte Call() API는 결과를 받아 애플리케이션에 전달한다.

동기식 클라이언트-서버 통신은 Direct Function Call 방식과 TASK 방식이 있다.

(Rte 의 이벤트는 RteEventToTaskMapping 을 통해 TASK 에 매핑되는 것이 기본이며, 클라이언트-서버 통신을 위한 OperationInvokedEvent 도 TASK 방식을 기본으로 하지만, 동시 실행이 가능한 경우

(CanBelnvokedConcurrently 가 true) TASK 에 매핑하지 않고 Direct Function Call 방식을 사용할 수 있다.)

8.3.1.2.1 Direct Function Call

서버가 별도의 TASK에서 실행되지 않고, 클라이언트의 Rte_Call() API에서 서버 Runnable 을 직접 Function Call 하는 형태로 수행된다.

일반적으로

- 1. 서버에 해당하는 Runnable 온 CanBelnvokedConcurrently 를 true 로 설정하고,
- 2. 위 Runnable 을 실행하는 OperationInvokedEvent 에 대해 RteEventToTaskMapping 에서

SHT/SHTS 190 / 203

AUTOSAR RTE User Manual

RteMappedToTaskRef 를 설정하지 않으면 Direct Function Call 형태로 코드를 생성한다.

위의 "요청-서비스 수행-응답" 세 단계에서 응답을 위해 Rte_Call() API는 대기를 필요로 한다. Direct Function Call 방식은 Rte_Call() API 내에서 서버의 Runnable을 직접 Function Call 로 실행하기 때문에 콜스택에에 의해서 Hunnable의 실행이 완료될 때까지 대기하다 서버 Runnable의 리턴하면 나머지 동작을 수행 후 결과를 애플리케이션에 전달한다.

서버의 Runnable 이 클라이언트의 Task Context 에서 실행되며, 따라서 동시에 여러 Context 에서 실행가능하다. 그리고 큐, 타임아웃 등의 기능을 사용할 수 없다.

8.3.1.2.2 Task Activation

서버가 별도의 TASK에서 실행되는 형태이다. Direct Function Call 과 마찬가지로 요청-서비스 수행-응답이라는 세 단계로 실행한다.

Direct Function Call 방식과 달리 Task Activation 방식은 Rte_Call() API 내에서 서버의 Runnable 을 실행하기 위해 서버 Runnable 이 속한 Task 를 Activation 하는 형태로 서비스 수행을 요청한다. 이를 통해 서버의 Runnable 은 동시 실행이 불가능하며, 다수의 요청이 있는 경우 큐를 사용한다.

단, 클라이언트(Rte_Call() API)와 서버(서버 Runnable)이 별도의 Task Context 에서 수행되기 때문에 우선 순위에 따라 Rte_Call()이 서버 Task 의 수행에 앞서 리턴할 수도 있다. 따라서 Rte_Call() API 가 서버에 서비스 수행을 요청 후 서버의 수행 완료를 대기 하기 위한 설정(우선 순위 및 Wait Point 설정)이 필요하다.

1. Wait Point

서버의 응답을 대기하기 위해 Rte_Call() API 내에 Wait Point 를 정의한다. Wait Point 는 Os 의 EVENT를 사용한다. 서버에게 서비스 수행 요청 (ActivateTask() / SetEvent()) 후, WaitEvent() API를 통해 서버의 EVENT 발생을 기다린다.


서버는 서비스 수행을 완료한 후, 요청한 클라이언트에 대한 EVENT를 발생(SetEvent() API) 시켜 서버 종료 후 결과를 올바른 클라이언트에게 전달할 수 있도록 한다.

따라서 클라이언트에서 사용할 EVENT를 설정해야 한다. 이 때, 동기식 클라이언트-서버 통신에서는 Rte_Call() API 에서 모든 동작이 수행되기 때문에 Wait Point 의 위치를 별도로 지정할 필요는 없다. (Wait Point 의 위치는 Synchronous Server Call Point 가 되므로) 단 클라이언트 Task 에서 사용하는

OsEvent 를 RteWaitOsEventRef 를 통해 지정해야 한다. (RteWaitOsEventRef 는

RteEventToTaskMapping에 있으며, SynchronousServerCallPoint 가 정의된 RunnableEntity (클라이언트 Runnable)을 실행하는 이벤트(예: Timing Event 등)에 대한

RteEventToTaskMapping에서 설정한다. 동일한 TASK에 대해 동일한 OsEvent를 지정하는 것으로 충분하다. 그림 참조: 세 개의 Rte 이벤트가 같은 태스크에서 동작할 때 RteWaitOsEventRef는 모두 같은 것으로 지정한다. (아래 그림은 단순 참조용이며, 프로젝트에 단순 적용해서는 안 된다.)

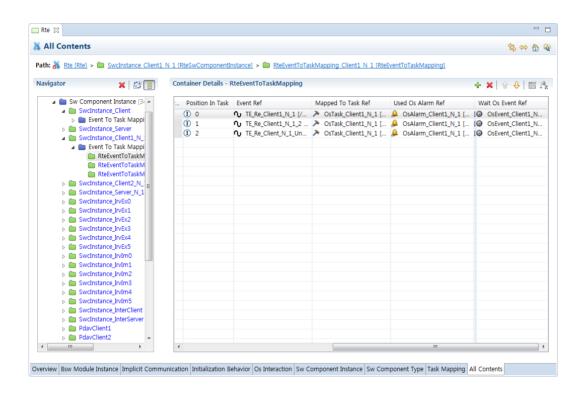

2. 우선 순위

위와 같이 Wait Point 를 사용하여 동작하기 때문에, **클라이언트가 속한 TASK의 우선 순위를 서버가** 속한 TASK의 우선순위 보다 높게 설정하는 것을 기본으로 한다.

3. 예외

- 1, 2 의 조건을 만족할 수 없는 경우(SC1 의 지원 등)를 위해, 아래 세 조건을 모두 만족 시키는 설정을 허용한다. (동기식)
- A. 파티션 내(Intra-Partition)의 통신
- B. 클라이언트의 우선순위 보다 서버의 우선 순위를 높게 설정
- C. RteWaitOsEventRef 를 설정하지 않음

8.3.1.3 Asynchronous Client-Server Communication

비동기식(Asynchronous) 클라이언트-서버 통신은 요청과 응답이 분리되어 Rte_Call() API 에서 서비스 수행

문서 번호 (DOC NO)

SHT/SHTS 192 / 203

AUTOSAR RTE User Manual

요청을 하고 Rte_Result()API에서 수행 결과를 받는다.

애플리케이션에서

- 1. Rte_Call() API 를 호출하면 Rte_Call() API 내에서 서버 Runnable 수행을 요청하고,
- 2. 서버는 Runnable 코드 실행을 통해 서비스를 수행 후
- 3. Rte_Result()는 응답 결과를 애플리케이션에 알려준다.

이 때 애플리케이션은 Rte_Call() API를 호출 후, 다른 동작을 수행하다가 원하는 시점에 Rte_Result() API를 호출하여 유답을 받을 수 있다.

비동기식의 경우 서버의 수행이 완료되었음을 아래(Activation of Runnable Entity)와 같은 방식으로 클라이언트에게 전달한다.

8.3.1.3.1 Activation of Runnable Entity

서버가 서비스 수행을 완료하면 지정된 Runnable을 Activation 하는 방식이다. Runnable이 Activation된 후에는 Rte_Result() API를 통해 응답 결과를 얻을 수 있다. AsynchronousServerCallReturnsEvent에 StartOnEventRef를 지정하여 이 방식으로 동작시킬 수 있다.


1. Asynchronous Server Call Returns Event

이 방식에서는 AsynchronousServerCallReturnsEvent 가 Runnable 을 시작하므로

AsynchronousServerCallReturnEvent 에 대한 RteEventToTaskMapping 에

RteMappedToTaskRef 를 지정하여 Runnable 이 실행할 TASK 를 설정한다. 그림 참조 (아래 그림은 단순 참조용이며, 프로젝트에 단순 적용해서는 안 된다.)



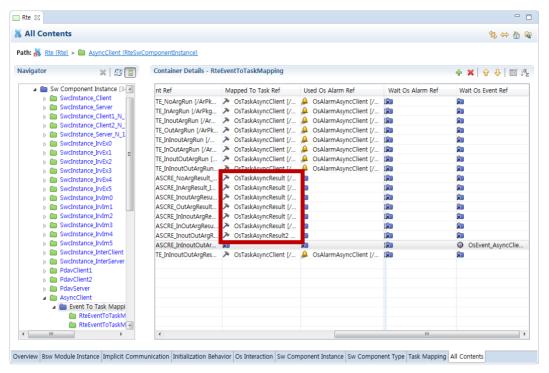

2. 우선 순위

Rte_Call() API 가 동작하는 Runnable 이 속한 TASK 의 우선 순위 >
Rte_Result() API 가 동작하는 Runnable 이 속한 TASK 의 우선 순위 >
서버 Runnable 이 속한 TASK 의 우선 순위를 기본으로 한다.

8.3.1.4 Inter-Partition Communication

8.3.1.4.1 OsEvent

Client-Server Communication 을 파티션 간 사용하려면 Sync/Async 모두 RteWaitOsEventRef 를 반드시설정해야 한다. 이 때, <u>RteWaitOsEventRef 로 설정한 OsEvent에 대해 OsEvent의 ShortName에</u> PartitionTerminated 라는 Postfix 가 붙은 OsEvent 를 추가해야 한다.

예를 들어

- 1. OsTask: OsTaskInterClient 가 Client 가 동작하는 OsTask 라고 하고,
- 2. **OsEvent**: OsEventInterClient 가 RteWaitOsEventRef 로 설정된 OsEvent 라고 하면, (OsTaskInterClient 의 OsEventRef 역시 OsEventInterClient 를 참조하고 있어야 한다.)
 - 이 때, Os 설정에서 OsEventInterClientPartitionTerminated 라는 OsEvent 를 추가해야 한다. (이 OsEventInterClientPartitionTerminated 라는 OsEvent 또한 OsTaskInterClient의 OsEventRef에서 참조하고 있어야 한다.)

문서 번호 (DOC NO)

SHT/SHTS 194 / 203

이는 Server의 파티션이 Terminate 될 경우, Client의 무한 대기를 막기 위해 AUTOSAR 사양에서 요구하는 조건(Server 의 파티션이 Terminate 될 경우, Client 에게 즉시 알려 주어야 한다.)을 만족하는 기능에서 필요한 설정이다. (PartitionTerminated 가 붙은 OsEvent 를 통해 Client 에게 Server 파티션이 Terminate 되었음을 알림)

8.3.1.4.2 Scalability Class

Client-Server Communication 을 파티션 간 사용하려면 Sync/Async 모두 Scalability Class 를 SC3 또는 SC4 로 설정해야 한다. 파티션 간 클라이언트-서버 통신 시, Rte_Call/Rte_Result API 는 AUTOSAR 사양에 의해 Os 의 CheckTaskMemoryAccess() API 를 사용해야 하는데, CheckTaskMemoryAccess() API 는 SC3/4 에서만 제공되기 때문이다.

8.3.1.5 Clients on Interrupt Level or Invoked by Direct Function Call

Rte_Call API 를 실행하는 RunnableEntity(클라이언트)가 인터럽트 Level 이거나 Direct Function Call 로 실행되는 경우, Rte Generator 는 우선 순위 비교에 의한 Error 메시지를 출력하지 않고, Warning 메시지(WRN0087) 출력 후, 코드를 생성한다. 따라서 Warning 메시지가 출력되는 경우, 설정을 직접 확인하여 정상적인 클라이언트-서버 통신을 위한 확인 및 조치를 취한다.

예를 들면,

- 1. 인터럽트에서의 클라이언트 실행하는 경우 (인터럽트를 애플리케이션에 Notification 하는 경우) Trigger 등을 이용하여 BSW 내에서 인터럽트 Decoupling 후에 Decoupling 된 RunnableEntity (Task Level)에서 클라이언트-서버 통신을 사용하거나, 인터럽트에서 Rte_Call 을 직접 사용 시, Operation 의 Argument 를 제거하고. RteWaitOsEventRef 를 설정하지 않도록 하여. 단순이 서버(애플리케이션)의 RunnableEntity 를 동작하는 용도로만 사용한다.
- 2. 클라이언트가 Direct Function Call 로 실행하는 경우 클라이언트가 실제 동작하는 Task 들을 찾아 각각의 Task 와 서버 Task 간의 우선 순위를 비교하여 8.3.1.2 와 8.3.1.3 에서의 우선 순위 조건에 맞게 설정되었는 지 확인한다.

8.3.1.6 Conclusion

동기식 (Synchronous)		비동기식 (Asynchronous)	
Direct Function Call	TASK ¹⁾	Activation of Runnable Entity	Wake Up of Wait Point



문서 번호 (DOC NO)

SHT/SHTS 195 / 203

RteWaitOsEventRef	미설정	클라이언트 Runnable ²⁾	미설정	ASCRE ³⁾
우선 순위	해당 없음	클라이언트 〉서버	Rte_Call 〉Rte_Result 〉서버 4)	

- 1) 동기식 TASK 방식에 대해 파티션 내 통신(Intra-Partition Communication)에 대해 RteWaitOsEventRef 를 설정하지 않고, 우선 순위를 클라이언트 〈 서버로 설정하는 것을 허용한다.
- 2) Rte_Call 이 동작하는 Runnable 을 실행하는 Rte 이벤트에 대한 RteEventToTaskMapping 에 설정
- 3) Asynchronous Server Call Returns Event 에 대한 RteEventToTaskMapping 에 설정
- 4) Rte_Call, Rte_Result 란 Rte_Call, Rte_Result 가 동작하는 TASK 를 의미

8.3.2 Specific Description depending on MCU

8.3.2.1 Scope

이 Section 에서는, General Description (Chapter 8.3.1) 외, Target MCU 에 특성에 따른 특이 사항에 대하여 기술 한다.

8.3.2.2 Bolero Family (MPC560x)

Bolero MCU 기반의 ECU를 개발 하는 경우, 제공되는 AUTOSAR OS는 Task의 Multiple Activation을 지원하지 않는다. (I.e. 단일 OsTask의 중복 Activation 기능이 제공되지 않음 (Task의 Ready Queue = 1)을 의미).

8.4 Mode Instance Initialization on inter partition mode switching

8.4.1 General Description

8.4.1.1 Scope

이 Section 에서는, 파티션간 모드 변경 기능 사용 시, 각 파티션의 초기화 과정에서 모드 Instance 에 대한 동기화 및 초기화 내용을 설명한다.

8.4.1.2 Initialization of Mode Instance in inter partition

멀티 파티션간 모드 변경 기능 사용 시, Mode Manager 가 위치한 파티션에서는, Mode Instance 에 대한 초기화를 진행한다. Mode User 가 위치한 파티션에서는 아래의 두 가지 상태에 따라 Mode Instance 에 대한 초기화가 다르게 수행 된다.

- Mode Manager 파티션이 Starting 상태에 있는 경우
 Mode Manager 에서 초기화된 Mode Instance 정보를 참조 한다.
- Mode Manager 파티션이 Stopping 또는 Restarting 상태에 있는 경우

 Mode Instance 에 대한 초기화 설정 (from Configuration)을 기반으로 자체적으로 초기화를 수행한다.

초기 모드(Initial Mode)에 OnEntry Event 의 Runnable 실행은 Mode User 가 위치한 파티션이 start 되는 시점 (Mode Instance 에 대한 초기화 완료 이후 SchM_Init 또는 Rte_Start 내) 에서 자체적으로 수행되며, 이때 참조하는 Mode Instance 는 위에서 설명한 두가지 상태에 따른 Instance 초기화 정보를 따른다.

8.4.1.2.1 Basic principles

멀티 파티션 기반, 모드 변경 기능 사용 시, 각 파티션 (특히, Multi Core 기반의 Multi Partition 시스템 설계 시)의 초기화 시점이 달라질 수 있다. BswM (또는 EcuM) 에 의하여 각 파티션의 초기화 시점 및 파티션 간 초기화 순서가 관리 되는 경우, (i.e. 현대오트론에서 제공하는 Mode Stack (EcuM, BswM) 및 Init Policy 사용 시, 파티션 간 초기화 순서가 고정 됨) Mode Manager / User 간 파티션 초기화 순서에 따른 각 파티션에서의 Mode Instance 처리에 대한 사항을 고려하여 설계하도록 한다.

8.4.2 Specific Description depending on MCU

8.4.2.1 Scope

이 사항은, 모든 MCU에 공통으로 적용된다.

문서 번호 (DOC NO)

SHT/SHTS 197 / 203

8.5 Precautions on Rte API Usage

8.5.1 General Description

8.5.1.1 Scope

이 Section에서는, RTE에서 제공하는 API 기반으로 SW 설계 시, 유의해야 할 사항을 포함하고 있다.

8.5.1.2 Rte API in Runnable

RTE에서 제공하는 API는 사용하고자 하는 Runnable 내에서만 유효하다. 즉, SW 설계 시 특정 Runnable 에서 사용하고자 하는 Rte API 는 반드시 시스템 내에 해당 설정 (SWC arxml 파일 內) 이 반영되어야 한다. RTE에서는 시스템 내 특정 Runnable 에서 사용하겠다고 설정된 내용을 기반으로 연관되는 Rte API를 생성하며, 이 API는 반드시 해당 Runnable 내에서만 사용되어야 한다. 해당 Runnable 외에 Rte API가 사용되는 경우 런타임 시, 원치 않는 오류를 발생 할 수 있다.

8.5.2 Specific Description depending on MCU

8.5.2.1 Scope

이 사항은, 모든 MCU에 공통으로 적용된다.

8.6 Synchronized Offset

8.6.1 General Description

8.6.1.1 Scope

이 Section에서는, Synchronized Offset 기반으로 BSW, ASW 간 Task 수행에 대한 Offset 설정 시 필요한설정, 내용 및 주의사항에 대하여 설명한다.

8.6.1.2 Description of Synchronized Offset Feature

특정 OS Counter 기반의 OsAlarm 을 이용하여 동작하는 Timing Event 의 Offset 의 동기화가 필요한 경우, 이 기능을 사용할 수 있다. 이 기능은 AUTOSAR 표준에서 제시하고 있는 기능은 아니며 오트론에서 BSW 와 ASW 에서 사용하는 OsTask 의 효율적인 수행시간 분배가 가능하게 하고자 추가한 기능이다.


기본적으로 AUTOSAR 에서는 BSW에서 사용되는 주기 OsTask 와 ASW에서 사용하는 주기 OsTask Start 시점은 각각 SchM_Init / Rte_Start 함수 내에서 분리되어 수행되어 BSW/ASW의 주기 OsTask 간 Offset 설정의 동기화를 보장하지 않는다. 즉 ASW Task 간 Offset, BSW Task 간 Offset 설정은 상호 OsTask 들간 (i.e. ASW 주기 OsTask 간, BSW 주기 OsTask 간) 에서만 유효하게 동작하게 된다.



결국 ASW 주기 OsTask 들과 BSW 주기 OsTask 들간의 Offset 설정을 상호 연동하여 동작하게 하기 위해서는, Synchronized Offset 기능을 사용하여야 하며, 이를 통해 BSW, ASW OsTask 구분 없이 모든 OsTask (단 동일한 하나의 OsCounter 에 연동되어 있는 OsAlarm 을 통해 Activation 되는 OsTask) 에 유효한 Offset 기반으로 OsTask 수행 시간을 분배 할 수 있다.


※ Synchronized Offset 기능은 결국 BSW 와 ASW 에서 설정된 Timing Event 에 대한 Offset 정보는 상호간 동기화되지 않기 때문에, 동기화 된 Offset 기반으로 효율적인 주기 Timing Event 수행 리소스를 분배하고자 하는 경우, 사용이 권장된다.

Synchronized Offset 기능을 사용하지 않은 경우, 아래 그림과 같이 가변구간 (i.e. 그림 내 가변구간 I, II) 에 따라 ASW, BSW 주기 OsTask 간 Offset 반영이 달라질 수 있다.

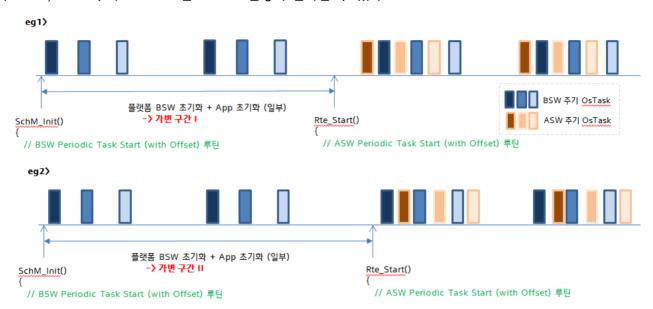

Synchronized Offset 기능을 사용하는 경우는, 아래 그림과 같이 가변구간 (i.e.그림 내 가변구간 I, II) 이 상황에 따라 변경될 수 있음에도 불구하고 ASW, BSW 주기 OsTask 간 Offset 이 상호 동기화되어 일정한 Offset 을 기반으로 OsTask 수행 될 수 있다.

단, 최초 ASW, BSW 주기 OsTask 간 Task 수행은 상황에 따라 달라질 수 있다. (아래 그림 붉은색 원 부분 참조)

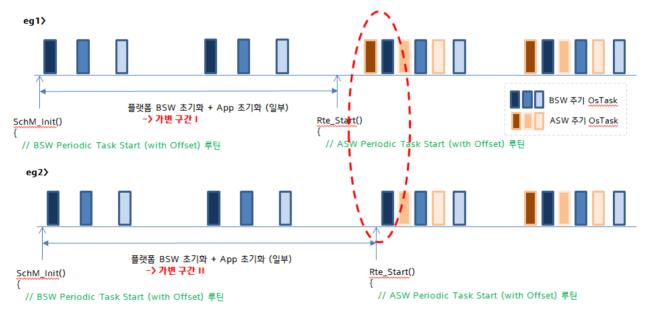

8.6.1.3 How to Use this Feature

Synchronized Offset 기능을 사용하기 위해서는 하나의 OsCounter 에 연동되는 OsAlarm 의 정보가 필요하며, 각각의 OsAlarm 수행 순서 정의 (관련 파라미터 RteExpectedActivationPosition) 가 필요하다.

8.6.1.4 Cautions regarding Task Activation Design based on Synchronized Offset Feature

Synchronized Offset 기능 사용에 대하여 아래의 주의사항에 대하여 반드시 숙지 후, ASW 를 디자인 하여야 한다.

- ① OsAlarm 의 첫 실행 순서는 SchM_Init 및 Rte_Start 가 호출되는 시점에 따라 변경되기 때문에, 위의 Offset 기능이 OsAlarm의 첫 실행 순서를 보장하지 않는다. (8.6.1.2 내 그림 (붉은색 타원 부분) 참조)
- ② 첫 실행 이후에 OsAlarm 은 주기에 맞추어 발생하지만 OsTask 의 실행 순서는 OsAlarm 발생 직후 Activation 시점의 Os 상황 (예를 들어 OsTask 우선순위, Task 수행시간 등) 에 따라 변경될 수 있으므로, 위의 Offset 기능이 OsTask 의 실행 순서를 보장하지 않는다.
- ③ SchM_Init ~ Rte_Start 사이에 OsCounter 의 Tick 값이 MaxAllowedValue 값을 넘어가지 (Wrap around) 않도록 MaxAllowedValue 는 OsCounter 가 사용하고 있는 HW Counter에서 지원하는 가장 큰 값으로 설정해야 한다. (Wrap around 발생 이후에는 Offset 동기화를 보장하지 않는다.)
- ④ OsAlarm 의 Offset 또는 주기가 OsCounter 의 (MaxAllowedValue 1) 값을 초과하면 안 된다.
- ⑤ OS Counter 타입에 따른 설계 시 제악사항 존재 하며, 경우에 따라서는 Offset 동기화에 대한 Timing 오차가 발생할 수 있으므로 반드시 사전 검토 후 사용하도록 함

카운터 종류	조건	SW 동작 영향 상세	조치 사항	
SW 카운터	NR	Offset 오차 발생하지 않음. 단 DI~EI ¹⁾ 기간 내에서 Counter 값이 증가되지 않아서 해당 시간 만큼 전체적인 Timer 지연 발생 가능함	NR	
HW 카운터	Counter 1 Tick 값 〉 DI_ ~ EI_ 구간의 수행시간	Counter 1 Tick 에 해당하는 시간 만큼 Offset 동기화 시 오차 발생 가능함. (예를 들어 1 Tick 이 1ms 이고 DI ~ EI 수행구간이 50us 이라면, 1ms Offset 오차가 발생할 수 있음)	반드시 "조건에 따른 예상 Offset 오차 범위 * 2"를 감안하여 Task 분배를 위한 Offset 설계를 하도록 함. 즉, Offset 예상 오차가 50us 가	
	Counter 1 Tick 값 〈 DI_ ~ EI~ 구간의 수행시간	DI ~ EI 구간 수행 시간 만큼의 Offset 동기화 시 오차 발생 가능함. (예를 들어 1tick 이 1us 이고 DI~EI 구간 수행 시간이 50us 이라면, 50us 의 Offset 오차가 발생할 수 있음)	예상된다면, Task 간 분배는 최소 100us 이상의 마진을 가지고 설계되어야 함. ²⁾	

^{* 1)} DI_ ~ EI_ 구간 수행 시간: Rte_Start / SchM_Init 함수 내 해당 루틴에 대한 수행 시간 측정 후, 긴 시간을 기준으로 함. DI_ ~ EI_ 구간 수행 시간 측정 방법은 아래와 같다.

※ 수행 시간 측정 방법


- ① Rte_Start 함수 DI_~EI_ 구간 수행 시간 측정 방법: Rte_Start 함수 (Rte.c 파일 내 위치) 내에서 __DI(); 직전부터 __EI(): 직후까지의 수행 시간을 측정한다.
- ② SchM_Init 함수 DI_~EI_ 구간 수행 시간 측정 방법: SchM_Init 함수 (Rte.c 파일 내 위치) 내에서 __DI(); 직전부터 __EI(): 직후까지의 수행 시간을 측정한다.
- ③ DI_~EI_ 구간에 대한 최종 오차: ①, ② 측정결과 중 큰 값을 DI_~EI 구간에 대한 최종 오차로 함.

(추후 반드시 실제 측정한 값을 기반으로 오트론과 테크니컬 리뷰 시 같이 검토하여야 한다. 만일 MCU Clock 이 변경되는 경우, 수행시간이 변경될 수 있으므로 반드시 재 측정 후 Offset 의 유효성 여부를 확인해야 한다.)

** 2) 오차 범위를 고려한 Task 간 분배의 의미: 아래 그림에서 붉은색 점선의 타원의 경우와 같이 Offset 동기 오차 범위 내에서 OsTask 의 Offset 이 설정되어서는 안 된다.

문서 번호 (DOC NO)

SHT/SHTS 201 / 203

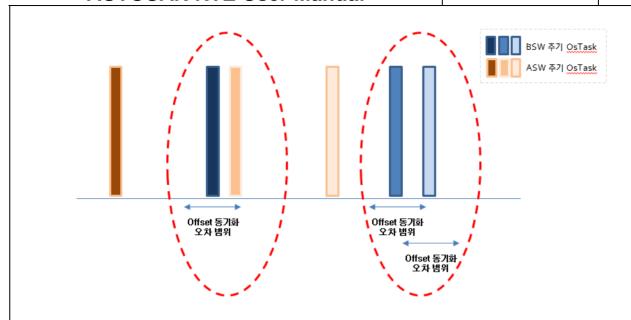

8.6.2 Specific Description depending on MCU

8.6.2.1 Scope

이 사항은, 모든 MCU에 공통으로 적용된다.

8.7 Guide for RteEvent

8.7.1 General Description

8.7.1.1 Scope

이 Section 에서는, RteEvent 에 의해 실행되는 Runnable Entity 들의 Task Mapping 과 Direct Function Call 에 대한 설정 및 주의사항에 대하여 설명한다.

8.7.1.2 Task Mapping

RteEvent에 의해 실행되는 Runnable Entity 들은 일반적으로 Task Mapping 을 통해 수행된다. 이 경우 Runnable Entity 는 Mapping 된 Task 내에서 실행된다.

8.7.1.3 Direct Function Call

몇몇 RteEvent는 각 통신에서 특정 조건을 만족하면 Direct Function Call 로 수행 될 수 있다.

8.7.1.3.1 RTE and Basic Software Scheduler and BswExecutionContext

RTE 와 Basic Software Scheduler 는 특별한 경우에 한하여 triggered ExecutableEntity 호출을 Direct function call 을 통해 수행하는 것을 지원한다. 그럼에도 불구하고 특정 실행 Context 의 ExecutableEntity 가더 많은 권한을 지닌 execution context 을 요구하는 Triggered ExecutableEntity 호출하는 것을 방지한다. 아래의 표는 지원되는 조합을 나타낸다.

호출자의	피호출자의 BswExecutionContext				
BswExecutionContext					
	task	interruptCat2	interruptCat1	hook	unspecified
task	지원	지원	지원		지원
interruptCat2		지원	지원		지원
interruptCat1			지원		지원
hook					
unspecified	지원				지원

예를 들어(4 번째 열), 호출자의 BswExecutionContext 가 task, interruptCat2 또는 interruptCat1 이라면 BswModuleEntiry interruptCat1 BswExecutionContext 의 ExecutableEntity 호출은 Direct Function Call 로 구현이 가능하다.

SchM_Trigger, SchM_ActMain 또는 Rte_Trigger API에 의한 triggered ExecutableEntity의 호출이나 SchM_Switch 또는 Rte_Switch에 의한 OnEntry ExecutableEntity, OnTransition ExecutableEntity, OnExit ExecutableEntity 또는 mode switch acknowledge ExecutableEntity에 적용된다.

참고로 RunnableEntity 의 execution context 는 task 로 간주된다.

8.7.1.3.2 Client-Server Communication

클라이언트-서버 통신에서 적어도 아래의 조건을 만족한 경우 RTE 제너레이터가 Direct Function Call 을 지원한다

- 서버 Runnable 의 canBelnvokedConcurrently 속성이 TRUE 로 지정
- 클라이언트와 서버가 같은 파티션에서 수행된다. 즉 intra-Partition 클라이언트 서버 통신
- ServerCallPoint 는 Synchronous(동기식)
- OperationInvokedEvent 가 OsTask 에 맵핑되어 있지 않음

8.7.1.3.3 Modes

Modes 에서 OnEntry ExecutionEntitys, OnTransition ExecutableEntitys, OnExitExecutableEntitys 그리고 mode switch acknowledge ExecutableEntity 의 호출은 아래의 조건을 모두 만족할 경우 RTE 제너레이터는 Direct Function Call 을 지원한다.

- Asynchronous mode switch behaviour 설정
- OnEntry ExecutableEntitys, OnTransition ExecutableEntitys, OnExit ExecutableEntitys 그리고 mode switch acknowledge ExecutableEntity 에 minimum start distance 미설정
- Mode manager 와 Mode user 는 같은 파티션
- 8.7.1.3.1의 조합 만족

8.7.1.3.4 Trigger Sink

RTE Generator 는 Triggered ExecutableEntitys 의 Direct Function Call 은 아래의 조건을 모두 만족할 경우 Direct function Call 을 통한 호출을 지원한다.

- Triggered ExecutableEntitys 들의 'minimum start distance' 미정의
- Trigger Sink 와 Trigger Source 는 같은 파티션
- BswTriggerDirectImplementation 미정의
- 8.7.1.3.1 의 조합 만족
- Queue 가 아닌 Trigger Source 설정

8.7.2 Specific Description depending on MCU

8.7.2.1 Scope

이 사항은, 모든 MCU에 공통으로 적용된다.