

# VERIFYING AND RESETTING THE SYSTEM STATE

## Verify main speakers' settings

### Front speakers

- Ch 2 Level at **9 o'clock**
- DSP D-contour **OFF**
- DSP HPF **OFF**
- Gray button **NOT** pressed in



### Fill speakers

- Level at 9 o'clock
- High at 0
- Low at 0

<br clear="right" style="clear:right; />



# Coffeshop speakers

(This is here for reference, if you have no reason for it, you don't need to check it always.)

- Volume at 9 o'clock
- DSP preset button NOT pressed in



# Align the pulpit

There is a mark on the floor, align the pulpit to be at the correct position.



# Reset the stage

## Resetting the stage mixers

Reset the stage mixers, but only **BEFORE** a rehearsal. There is one mixer in the drumroom too, reset that one also.

The order is important here:

1. Reset the top-knobs
  - Equalizers to **12 o'clock**
  - Limiter to **MAX**
  - Level to **3 o'clock**
2. Recall preset 16
  - Press and hold **RECALL**
  - Press **16**
  - Release RECALL



## Verify stage mixers' connections


Verify that the speakers are connected to **L/MONO**:



# Verify stage monitor settings & connections

## Left stage monitor

- All 12 o'clock.
- Check power and signal cable connections.

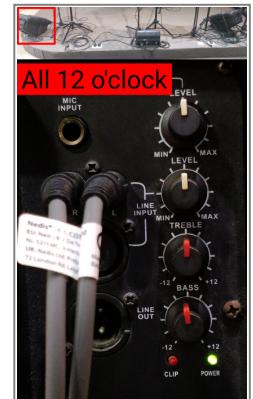

## Middle stage monitor

- All 12 o'clock.
- Check power and signal cable connections.



## Right stage monitor

- This one is a bit damaged, the level should be at 3 o'clock!
- Check power and signal cable connections.



# Verify keyboard connection

Verify that it is connected properly, sometimes they unplug it for practicing.



# Verify Rhode link settings

(This is here for reference, if you have no reason for it, you don't need to check it always.)

- The receiver (the one on the wall) should be on 0db gain.
- The transmitter (the one with the mic) should be on 10db gain.



# Check that all is working

- Turn on the keyboard, and press one of the keys, you should hear it.
  - If not, check cables.
- Speak into each microphone, and you should hear yourself in each monitor.
  - If not:
    - check the main console, maybe the stage is off, or the mic is muted.
    - check connections, stage mixer settings (e.g.: reset it properly)